



**DO NOT
PRINT
THIS
PAGE**

 
 
 


TABLE OF CONTENTS

CHAPTER 1 BEFORE USING YOUR PHONE1

- Package Includes2**
- Handset Description3**
- Basic Functions4**
 - The Function Keys4
- Display Indicators5**
 - Screen Status, Display and Function5
- Using the Battery6**
 - Installing the Battery6
 - Removing the Battery6
- Charging the Battery7**
 - Power Connection7
 - Charging the Battery Only7
 - Charging the Battery with the Handset8
 - Charging Completion8
 - Status of Charger LED9
 - Battery Life(For New Battery)9
- Important Battery Information10**

CHAPTER 2 BASIC OPERATION11

- Turning the Phone On and Off12**
 - Turning the Phone On12
 - Turning the Phone Off12
- How to Use the Menu13**
- Menu Summary14**
- Basic Functions16**
 - Making a Call16
 - Pause Feature17
 - How to Answer Calls18
 - Auto Answer18
 - Caller ID Function18
 - Call Waiting Function18
 - Missed Call Display19
 - How to Adjust Volume19
 - Vibrate19
- Functions During a Call20**
 - Sending Your Number to a Pager20
 - Scratch Pad20
 - Mute21

CHAPTER 3 MEMORY FUNCTION23

- How to Store a Phone Number24**
- How to Enter Letters and Characters Using the Dial Buttons25**

TABLE OF CONTENTS (CONT'D.)

How to Make a Call Using A Stored Phone Number	26
One-Touch/Two-Touch Dialing	26
How to Find Your Call Logs	27
Missed Calls	27
Answered Calls	28
Dialed Calls	28
How to Find Your Phone Book	29
Recalling by Memory Location Number	29
Recalling by Name	30
CHAPTER 4 MENU	31
Check Billing Feature	32
Schedule	33
View Schedule List	33
Input Schedule List	34
Pause All Schedule	35
Settings	36
Auto Retry	36
Auto Answer	37
One-Touch Dialing	38
Voice Privacy	38
Backlight	39
LCD Contrast	39
Logo Display	40
Web Idle Time	40
Language	40
Volume	41
Ring Mode	41
Ring Type	41
Key Pad	42
Call Timers	43
Last Call	43
All Calls	43
Home Calls	43
Roam Calls	43
Alerts	44
Min Alert	44
Roam Alert	44
Fade Alert	45
Low Signal Alert	45
Connect Alert	46
CHAPTER 5 SECURITY FEATURES	47
How to Lock Your Phone	48
Auto Lock	48
Lock Code Change	49
How to Change Your Banner	50
Banner Change	50
How to Restrict Your Phone	51

TABLE OF CONTENTS (CONT'D.)

Restriction Functions	51
Restricting Incoming Calls	51
Restricting Outgoing Calls	52
Restricting the Phone Book	52
Restricting Long Distance Calls	53
Restricting Calls to 900 Numbers	53
How to Reset Your Phone	54
Reset	54
How to Clear Your Phone Memory	55
Clearing Stored Phone Numbers	55
Clearing Schedules	55
Memory Clearing Function	56
Clearing Dialed Numbers In Call Logs	56
Clearing Home Calls	57
Clearing Roam Calls	57
CHAPTER 6 SUPPLEMENTARY FUNCTIONS	59
Stopwatch	60
Calculator	61
Bio-Rhythm	62
CHAPTER 7 VOICE MAIL AND TEXT MESSAGE	63
Receiving a Message	64
Voice Mail	64
Checking Received Voice Mail Message	64
Send New	65
SendingText Message	65
Inbox	67
Checking Received Text Message	67
Outbox	69
Checking Sent Text Message	69
Settings	71
Save Sent Message	71
Default Call Back Number	71
Message Alert	71
Delivery ACK	72
Auto Erase	72
Entry Mode	72
Filed	73
Erase Messages	74
Reference	75
Using Standard Text Input	75
Using T9 Mode Text Input	76
Write With T9 Mode Text Input	78

TABLE OF CONTENTS (CONT'D.)

CHAPTER 8 MAKING AN EMERGENCY CALL	.81
Making an Emergency Call	.82
E911 in Lock Mode	.82
E911 Using Any Available System	.83
CHAPTER 9 DATA SERVICE	.85
Receive Mode	.86
Flow Control	.87
Ability of Wireless Data Communication	.88
CHAPTER 10 INTERNET BROWSER	.89
Start Internet Browser	.90
Access Wireless Internet	.90
Browser Menu	.91
Reload	.91
Home	.91
Bookmarks	.92
Mark Site	.92
About Phone.Com	.93
Advanced	.93
Show URL	.94
Homepage	.94
Set UP.Link	.95
Offline Services	.95
Outbox	.96
Restart Up.Browser	.96
Encryption	.97
CHAPTER 11 SAFETY	.99
Safety Information for Wireless Handheld Phones	.100
Driving Safety	.101
Electronic Devices	.102
Other Safety Guidelines	.104
Precautions	.105
Warning	.106
Safety Information for FCC RF Exposure	.107
Cautions	.108
CHAPTER 12 WARRANTY	.109
Protect Your Warranty	.110
12 Month Limited Warranty	.111

CHAPTER 1

BEFORE USING YOUR PHONE

Please read this chapter before using this product.

- 1 Package Includes
- 2 Handset Description
- 3 Basic Functions
- 4 Display Indicators
- 5 Using the Battery
- 6 Charging the Battery
- 7 Important Battery Information

PACKAGE INCLUDES

Thank you for purchasing this product. Please check the product contents by comparing them with the following pictures.



Handset



Desktop Charger



Standard Battery



Extended Battery (optional)



User Manual



Handstrap



In case there are any product defects, please report them to the place of purchase immediately.

HANDSET DESCRIPTION



BASIC FUNCTIONS

THE FUNCTION KEYS



This key is used to make or receive a call.



This key is used to terminate a call or exit the current menu. This key is used to turn the hand-set on or off.



This key(also called the Navigation key)is used to scroll through the contents of the menu.



(Soft 1) This key is used to access the Menu when pressed and held for more than 1 second.



(Soft 2) This key is used to access voice or text messages.



This key is used to access the internet.



This key is used to clear characters.



Press and hold to set up manner mode.



Press and hold to set up lock mode.

DISPLAY INDICATORS

SCREEN STATUS, DISPLAY AND FUNCTION



Signal Strength

Indicates current signal strength. More lines mean better signal strength.






Roaming

Indicates the phone is outside of its home area.



Service Indicator

When a call is in progress,  is displayed. When  is displayed, the phone is in idle mode. When  is displayed, the phone is not receiving a signal from the system.



Message

Indicates a text message or voice mail message is waiting.



Schedules

Indicates 'Schedule'.



Digital mode

Indicates the phone is operating in digital mode.



Battery

Indicates battery charge level status. The more black you see, the greater the charge.



Bell

Indicates an incoming call with a ring alert.



 
Vibration

Indicates an incoming call with a vibration alert.

USING THE BATTERY


INSTALLING THE BATTERY

- 1 Insert the bottom of battery into the groove at the bottom of the handset. Then 2 press in the top of the battery until it snaps.

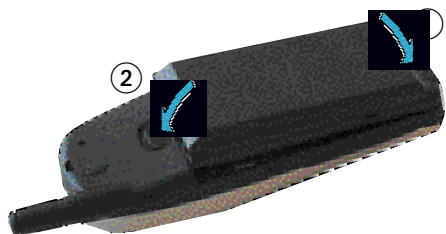

REMOVING THE BATTERY

 - 1 Push the tab 1 with one hand and lift the top of the battery 2 to separate.

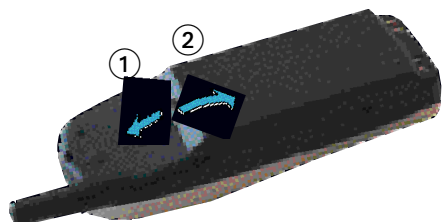

The battery must be correctly placed in the battery compartment. If battery is incorrectly inserted, the handset will not turn on or the battery may slip out during use.

[6]

CHARGING THE BATTERY

POWER CONNECTION

- 1 Connect the charger to a standard 120V AC outlet.



CHARGING THE BATTERY ONLY

- 1 To charge the battery only, insert the battery pack into the charging slot on the charger. The LED will indicate the charging status. RED indicates charging is in progress. Green indicates charging is complete.



- Battery is not charged when you purchase the product.
- Fully charge the battery before use.

[7]

CHARGING THE BATTERY

CHARGING THE BATTERY WITH THE HANDSET

- 1 To charge the battery with the handset, insert the handset into the charger.



Charging the battery with the handset on is less efficient than charging it with the handset off.

CHARGING COMPLETION



- 1 Charging is completed when the green-colored LED stays on.



[8]

CHARGING THE BATTERY

STATUS OF CHARGER LED

Charging in Progress (Red Color On)	Charging Completion (Green Color On)
	



- Recommendation : check the cleanliness of the gold battery contacts(front & back) if the LED is flickering while charging.
- LED may change from red to green back and forth after battery is full charged. This does not indicate any problems with charging the battery.

BATTERY LIFE (FOR NEW BATTERY)

Status \ Type	Standard Battery (1000 mAh)	Extended Battery (1550 mAh)
Talk (min)	185	280
Stand by (hrs)	130	190

Battery Type	Std. Battery(Min) (1000 mAh)	Extd.Battery(Min) (1550 mAh)
Charging Time	300	300

[9]

IMPORTANT BATTERY INFORMATION

Use only batteries and chargers approved by the phone manufacturer.

When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than a week; overcharging may shorten its life.

If left unused, a fully charged battery may completely drain (discharge) in 1 - 4 weeks.

Never use any charger or battery that is damaged or worn out.

Use the battery only for its intended purpose.

Do not short circuit the battery. Accidental short circuiting can occur when a metallic object (e.g. coin, clip or pen) causes direct connection of the two terminals of the battery (metal strips on the back of the battery). For example, when you carry a spare battery in your pocket or purse. Short circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, reduces the capacity and lifetime of the battery. Always try to keep the battery between 41°F and 95°F (5°C and 35°C). A phone with a hot or cold battery may temporarily not work (or charge) even if the battery is fully charged.

Temperature extremes affect the ability of your battery to charge; allow it to cool down or warm up first.

When the battery is not in use, store it uncharged in a cool, dark and dry place.

The battery is a sealed unit with no serviceable parts. Do not attempt to open the case.

It is recommended that you allow your battery to fully discharge before you recharge it.

The battery can be charged and discharged hundreds of times but will eventually wear out. When the operating time is shorter than normal, it is time to buy a new battery.

Do not discard the battery into fire!

Dispose of used batteries in accordance with local regulations.

Recycle!

[10]

CHAPTER 2


BASIC OPERATION

- 1 Turning the Phone On and Off
- 2 How to Use the Menu
- 3 Menu Summary
- 4 Basic Functions
- 5 Functions During a Call


[11]

TURNING THE PHONE ON AND OFF

TURNING THE PHONE ON

- 1
 - Press [].
 - The phone is locked if "LOCK" is displayed on the screen. When "LOCK" is displayed, enter the 4-digit lock code to unlock the phone.
 - The default lock code is the last 4 digits of your phone number.










TURNING THE PHONE OFF

- 1
 - Press [] until "Powering off" is displayed.



- If the "LOW BATTERY WARNING POWER OFF" is displayed and the power goes off, there is a possibility of damaging the memory. Change or charge the battery immediately.
- If the battery is removed while the phone is on, information about the last call may be erased.

HOW TO USE THE MENU

- 1 In the standby screen, press and hold [].
- 2 Use the navigation key or the volume keys to view the menu. Press and hold down the keys to scroll through the menu.
- 3 To go back to previous screen, press []. To exit menu, press [].
- 4 To go into submenu, press the corresponding number or select the desired item using the scroll key.
- 5 [], [], and [] / [] / [] / [] can be used while using the menu.

MENU SUMMARY

1 : ✓ CHECK BILLING

2 : PHONE BOOK ▶

- 1 : CALL LOGS
 - 1 : MISSED CALL
 - 2 : ANSWERED CALL
 - 3 : DIALED CALL
- 2 : BY LOCATION
- 3 : BY NAME

3 : SCHEDULE ▶

- 1 : LIST ALL
- 2 : INPUT SCHEDULE
- 3 : PAUSE ALL

4 : SETTING ▶

- 1 : AUTO RETRY
 - 1 : INTERVAL
 - 2 : REPEAT
- 2 : AUTO ANSWER
- 3 : ONE-TOUCH
- 4 : VOICE PRIVACY
- 5 : BACKLIGHT
- 6 : LCD CONTRAST
- 7 : LOGO DISPLAY
- 8 : WEB IDLE TIME
- 9 : LANGUAGE

5 : VOLUME ▶

- 1 : RING MODE
- 2 : RING TYPE
- 3 : KEYPAD

6 : TIMER ▶

- 1 : LAST CALL
- 2 : ALL CALLS
- 3 : HOME CALLS
- 4 : ROAM CALLS

[14]

MENU SUMMARY

7 : SPECIAL ▶

- 1 : STOPWATCH
- 2 : CALCULATOR
- 3 : BIORHYTHM
- 1 : TODAY
- 2 : SOMEDAY
- 3 : BIRTHDAY

8 : ALERTS ▶

- 1 : MIN ALERT
- 2 : ROAM ALERT
- 3 : FADE ALERT
- 4 : LOW SIG ALERT
- 5 : CONNECT ALERT

9 : DATA SERVICE ▶

- 1 : RECEIVE MODE
- 2 : FLOW CONTROL

0 : SECURITY ▶

- 1 : AUTO LOCK
- 2 : CHANGE CODE
- 3 : CHANGE BANNER
- 4 : RESTRICT
 - 1 : INCOMING
 - 2 : OUTGOING
 - 3 : MEMORY
 - 4 : LONG DISTANCE
 - 5 : 900#'S
- 5 : RESET
- 6 : CLEAR
 - 1 : CLR NUMBER
 - 2 : CLR SCHEDULE
 - 3 : CLR CALL LOGS
 - 4 : CLR HOME CALLS
 - 5 : CLR ROAM CALLS
- 7 : MYNUMBER
- 8 : VERSION

[15]



BASIC FUNCTIONS

MAKING A CALL

1


Enter the phone number.



To modify the phone number you have entered:


- To erase the last number entered: Press [].
- To erase all numbers entered and start again: Press [] and hold for more than half or a second.



2

Press [].

- "CALL FAILED" message is displayed when the call does not connect.
- If the line is busy, press []. Retry by pressing [].
- If you select the AUTO RETRY function, the call will be retried automatically for the time you have selected.


Press [] to end the call.

BASIC FUNCTIONS

PAUSE FEATURE

Pauses are used for automated systems (i.e., voice mail and calling cards). To insert pauses:

1

Enter phone number, then press [].



2

Select desired pause.

- | | |
|-----------------------|---------------------------------|
| - When idling status; | - Receiving call status Menu to |
| 1 : STORE | 1 : SEND PHONE# |
| 2 : BY NUMBER | 2 : SCRATCHPAD |
| 3 : HARD PAUSE | 3 : MUTE |
| 4 : ONE HYPHEN | 4 : VIEW PHONE# |
| | 5 : VOICE PRIVACY |

Pause Definitions



- **HARD PAUSE:** If you enter the pause character (P), the number entered after the pause character will be sent after the number dialed.

3


- Press [] to dial or [], then [1] to store.

BASIC FUNCTIONS

HOW TO ANSWER CALLS

- 1 When the phone rings or the LED blinks, press any key except Volume up, Volume down or [].
- 2 To end the call, press [].

AUTO ANSWER

This function allows an incoming call to automatically be answered after a set number of rings.
To enable this function, press [], [4], [2].



If you set up the AUTOANSWER function in advance, the call will be answered after the selected number of rings. (Refer to page 37)

CALLER ID FUNCTION



When there is an incoming call, the caller's phone number is displayed on the screen.



The Caller ID number is saved in the call log.



CALL WAITING FUNCTION

 
This function notifies you there is an incoming call when you are on the phone.

- To answer the call, press [] when you hear the beep.
- To switch back to the first caller, press [] again.

BASIC FUNCTIONS


MISSED CALL DISPLAY

- 1 Displays the number of missed calls and the time the call was missed.
 - The message will be cleared when you press the [] or []key.




HOW TO ADJUST VOLUME

You can adjust the volume in two ways: by using the volume control keys on the side of the handset, or by using the menu.

- 1 Adjust volume by using the volume control keys during the following operation.
 - During a Call : Earpiece volume adjustment.
 - Standby Status : Ringer volume adjustment.
 - When the Phone Rings : Ringer volume adjustment.
 - Call Status in Hands-Free : Hands-free volume adjustment. Press [] when the phone rings and it will mute the ringer.


VIBRATE

This function disables the ringer and vibrates the phone to alert you of an incoming call. To enable this function, press [], [5],[1] and select VIBRATE by pressing the "up" and "down" keys at the upper left side of the phone".


FUNCTIONS DURING A CALL


SENDING YOUR NUMBER TO A PAGER

This function enables the phone number of the handset to be transmitted automatically to a pager, depending on pager service.

- 1 After calling a pager, when you are asked to enter your number, press and hold [] then [1] "SEND PHONE #".

SCRATCH PAD

- 1 While on a call, press and hold [], then [2] "SCRATCH PAD".

- 2 Enter the phone number, then press [].



 
FUNCTIONS DURING A CALL

MUTE

- 1 Press [], then [3] "Mute".






To unmute, press [], then [3] "Mute" again.



CHAPTER 3

MEMORY FUNCTION

   
- ❶ How to Store a Phone Number
- ❷ How to Make a Call Using a Stored Phone Number
- ❸ How to Find Your Call Logs
- ❹ How to Find Your Phone Book



HOW TO STORE A PHONE NUMBER

You can store up to 100 frequently used phone numbers in memory.

 - 1 Enter the phone number (more 3 digits) you want to store and press [], then [1] "Store".



- The first available empty memory location number is displayed. If there is no empty location, "MEMORY IS FULL!" is displayed with a warning sound.
- If there is a desired memory location number, enter the number.

- 2 If the "LOCATION:XX IS SAME NUMBER" message appears after entering the memory location number, it means there is another stored phone number in that location already.



- 3 Enter the person's name and press [].



- 4 Select the mobile/office/home type and Press [].



- 5 To make secret, select Yes. If Yes is selected, the stored entry can only be displayed with the lock code.



[24]

HOW TO STORE A PHONE NUMBER

How to Enter Letters and Characters Using the Dial Buttons

1. Select characters you wish to enter using the key pad.

Key Pad	1 Repetition	2 Repetition	3 Repetition	4 Repetition	5 Repetition
0	0				
2ABC	A	B	C	2	
3DEF	D	E	F	3	
4GHI	G	H	I	4	
:	:	:	:	:	:
9WXYZ	W	X	Y	Z	9

- Press [] to toggle between upper and lower case.
 - When entering special characters, such as . @ - ' , / : ? () , press [1] repeatedly.
- 2 Cursor moves to the next column automatically four seconds after entering a character.
 3. Repeat until all the characters you want are entered.
 - You can store up to 16 characters.
 4. Erasing Entry.
 - To erase one letter, press [].
 - To erase the entire entry, press and hold [].
 5. T9 (Refer to page 75-80)

[25]

HOW TO MAKE A CALL USING A STORED PHONE NUMBER

ONE-TOUCH / TWO-TOUCH DIALING

This feature allows the phone book entries to be dialed via the keypad.

ONE-TOUCH DIALING:

0-9 : Press corresponding memory number and hold for more than 1 second.

TWO-TOUCH DIALING:

00-99 : press the first digit and the second digits of the memory number short and long respectively.

- If no phone number is stored in the location depressed, "Empty Location" will appear on the screen.
- If a phone number is stored in the secret location, the number is not displayed when making a call.



 
One-touch dialing must be turned on in the handset. See page 38.

HOW TO FIND YOUR CALL LOGS

Your phone can display the 10 most recent missed, incoming, and outgoing calls. You can call those numbers without dialing their whole number.

MISSED CALLS


1 Press [], then [2], then [1], then [1].



2 Press [] to check the detail information about phone number.

- The last missed call, its phone number, time and date are displayed.

 3 To check your missed calls using the scroll keys:





- [] Scrolls up the phone numbers.
- [] Scrolls down the phone numbers.

4 Press [] to dial desired missed call number.

HOW TO FIND YOUR CALL LOGS

ANSWERED CALLS



(Refer to previous page.)

Press [], then [2], then [1], then [2].
Press [] to dial desired answered call number.

- The last answered call, its phone number, time and date are displayed.

DIALED CALLS


(Refer to previous page.)

Press [], then [2], then [1], then [3].
Press [] to dial desired dialed call number.

- The last outgoing call, its phone number, time and date are displayed.

HOW TO FIND YOUR PHONE BOOK

RECALLING BY MEMORY LOCATION NUMBER







1 Press [], then [2], then [2].

2 Enter the memory location number.


- If you don't enter a specific memory location number, use the scroll key to search from the first memory location number.



3 Search phone numbers using scroll key.

- []/[] scroll up and down the phone numbers.
- [] edit the phone number.
- [] erase the phone number.
- []/[] search mobile/office/home number.




4 Press [] to dial the desired phone book number.

HOW TO FIND YOUR PHONE BOOK







RECALLING BY NAME


1 Press [], then [2], then [3].

2 Enter the alpha (or part of the alpha).
Then press [].



3 To locate the phone number using the scroll key:

- []/[] search phone number.
- [] edit the phone number.
- [] erase the phone number.
- []/[] search mobile/office/home number.

4 Press [] to dial.

[30]

CHAPTER 4

MENU


Please read this chapter before using this product.

- 1 Check Billing Feature
- 2 Schedule
- 3 Settings
- 4 Volume
- 5 Call Timers
- 6 Alerts

[31]

CHECK BILLING FEATURE

This feature allows you to automatically dial your service provider's customer care center to check your phone bill balance.

 
1 Press [], then [1] "CHECK BILLING".


2 The phone number will be displayed on the screen and the phone will automatically dial customer service.

SCHEDULE


VIEW SCHEDULE LIST

1 Press [], then [3], then [1].



 2 Press [] to view more details about each item.





SCHEDULE

INPUT SCHEDULE

1 Press [], then [3], then [2].

2 Select the date in calendar and press the [].

[] []-month input.

[] [], numeric key
-day input.



3 Press [1], and select the parameter (one time or daily).
To set alarm, press [2] and input the schedule title.
To set reserved call, press [3] and input the phone number.
Press [].

 


4 Input the time and press [].


[] []-AM/PM selection.

Numeric key-hour/minute input.

[] []-move position.



[34]

 


SCHEDULE

PAUSE ALL SCHEDULE

You can pause all schedule entries temporarily.

1 Press [], then [3], then [3].

 2 Select the parameter (NO,YES) by using the scroll keys. Press [].




[35]


SETTINGS

AUTO RETRY


When a call is not connected, this function retries the call automatically at a set interval or amount or retries.


INTERVAL

1 Press [], then [4], then [1], then [1].

2 Select the parameter(OFF, 5 , 10 , 20 , 30 SECS) by using the scroll, then press [].

REPEAT

1 Press [], then [4], then [1], then [2].

2 Select the parameter (1 , 5 , 10 TIMES) by using the scroll, then press [].


[36]

SETTINGS

AUTO ANSWER

This function answers an incoming call automatically after a number of rings that the user sets.

1 Press [], then [4], then [2].

2 Select the parameter (NO USE, 1 , 3 RINGS) by using the scroll keys. Press [] to set.



- Auto answer function does not work if you select [SILENT] or [VIBRATE] or [SLIDE BELL] or [BELLAfter VIB].


[37]

SETTINGS

ONE-TOUCH DIALING


This function allows the phone book entries to be dialed via the keypad.

1 Press [], then [4], then [3].

2 Select the parameter (NO, YES) by using the scroll keys. Press [].

VOICE PRIVACY

1 Press [], then [4], then [4].

2 Select the parameter (STANDARD, ENHANCED) by using the scroll keys. Press [].


[38]

SETTINGS

BACKLIGHT

This function allows you to adjust time to light up the screen, so that you can conveniently use the phone even in dark places.

1 Press [], then [4], then [5].

2 Select the parameter (OFF, OFF IN DAY, 3, 5, 10 SECS) by using the scroll keys. Press [].

LCD CONTRAST

This function adjusts the LCD screen contrast.

1 Press [], then [4], then [6].



2 Select the contrast level by using the scroll keys. Press [].


[39]

SETTINGS

LOGO DISPLAY


1 Press [], then [4], then [7].



2 Select the parameter Banner(Date,World MAP) by using the scroll keys. Press [].


WEB IDLE TIME

This function disconnects from the network when there is no key input while browsing through the web. The display remains in the browser and the handset connects again to the network.


1 Press [], then [4], then [8], then input the web idle timer.



LANGUAGE

1 Press [], then [4], then [9].



2 Select the Language(ENGLISH,SPANISH)by using the scroll keys. Press [].

[40]

VOLUME

RING MODE

1 Press [], then [5], then [1].


2 Select the parameter (RINGER,SILENT,VIBRATE, BELL AFTER VIB, SLIDE BELL) by using the scroll keys.

3 Press [].

RING TYPE

1 Press [], then [5], then [2].

2 Select the parameter (1-13) by using the scroll keys.

- X Different tones (1-6).
-  Different melodies (7-13).









3 Press [].

[41]

VOLUME

KEY PAD

- 1 Press [], then [5], then [3].
 - If the warning alarm sounds because of low battery, the sound will not be heard even if the user presses the button.
- 2 Select the volume level by using the scroll keys.
 - [] [] scroll up to increase volume.
 - [] [] scroll down to lower volume, or setting to Silent.
- 3 Press [].

[42]

CALL TIMERS

LAST CALL

- 1 Press [], then [6], then [1].

ALL CALLS

- 1 Press [], then [6], then [2].

HOME CALLS

- 1 Press [], then [6], then [3].

ROAM CALLS

- 1 Press [], then [6], then [4].

[43]


ALERTS

MIN ALERT

This function sounds an alert every minute, letting you know the call lapse time.

- 1** Press [] then [8] then [1].




- 2** Select the parameter (ON, OFF) by using the scroll keys. Press [].

ROAM ALERT

This function sounds an alert and gives out a message when the handset enters a new service area, when it enters another service area, or when it leaves the user's service area.

- 1** Press [], then [8], then [2].



- 2** Select the parameter (ON, OFF) by using the scroll keys. Press [].

[44]


ALERTS

FADE ALERT

This function sounds an alert when the phone can not make calls due to poor signal strength while in idle mode.

- 1** Press [], then [8], then [3].




- 2** Select the parameter (ON, OFF) by using the scroll keys. Press [].

LOW SIGNAL ALERT

This function sounds an alert when the signal of a received call is weak during a call.

- 1** Press [], then [8], then [4].



- 2** Select the parameter (ON,OFF) by using the scroll keys. Press [].

[45]


ALERTS

CONNECT ALERT

This function sounds an alert when the call is made.

1 Press [], then [8], then [5].



2 Select the parameter (ON, OFF) by using the scroll keys. Press []

CHAPTER 5

SECURITY FEATURES

 
- ❶ How to Lock Your Phone
- ❷ How to Change Your Banner
- ❸ How to Restrict Your Phone
- ❹ How to Reset Your Phone
- ❺ How to Clear Your Phone Memory
- ❻ Memory Clearing Function

HOW TO LOCK YOUR PHONE


AUTO LOCK

This function prevents any other person from using the handset without permission. When it is locked, the handset can not be used to dial or use any other function.

- 1 Press [], then [0], then enter [PASSWORD], then [1].



- The default password is the last 4 digits of your phone number.

- 2 Select the parameter (OFF, POWER ON, ON) parameter by using the scroll keys. Press [].

- "POWER ON" locks the handset upon powering on the handset each time.
- "OFF" unlocks the handset and leaves it unlocked.




Incoming calls, emergency dialing and alarm functions are enabled when the handset is locked.

[48]


HOW TO LOCK YOUR PHONE


LOCK CODE CHANGE

This function is used to change the 4-digit lock code.

- 1 Press [], then [0], then enter [PASSWORD], then [2].

- The default password is the last 4 digits of your phone number.

- 2 Enter 4-digit new "PASSWORD?". Press [].

- 3 "ENTER AGAIN" will be displayed. Re-enter the new code and press [].

 
[49]

HOW TO CHANGE YOUR BANNER

BANNER CHANGE

This function changes the banner displayed on the LCD. You can enter a banner up to 16 characters long.

- 1 Press [], then [0], then enter [PASSWORD], then [3].



- 2 Enter a banner using instructions for alpha keys on page 25.

HOW TO RESTRICT YOUR PHONE


RESTRICTION FUNCTIONS

You can restrict 5 different functions.

- 1 Press [], then [0], then enter [PASSWORD], then [4].



- The default lock code is the last 4 digits of your phone number.

- 2 Using the scroll buttons, select "YES".
Press [].

TO RESTRICT INCOMING CALLS

When this function is enabled, the phone does not respond to incoming calls. However, outgoing calls can still be made.

- 1 Press [1] "INCOMING".

- 2 Select the parameter by using the scroll keys.




RESTRICT: restricts incoming calls.
ALLOW: allows incoming calls.

- 3 Press [].

HOW TO RESTRICT YOUR PHONE


RESTRICTING OUTGOING CALLS

When this function is enabled, incoming calls can be answered, but outgoing calls cannot be made. It is still possible to make emergency calls.

- Press [2] "OUTGOING". 
- Select the parameter by using the scroll keys.
RESTRICT: restricts outgoing calls.
ALLOW: allows outgoing calls.
- Press [] .

RESTRICTING THE PHONE BOOK


This function blocks the storage of phone numbers or the use of stored phone numbers.

- Press [3] "MEMORY". 
 - The default password is the last digits of your phone number.
- Select the parameter by using the scroll keys.
RESTRICT: restricts phone book.
ALLOW: allows phone book use.
- Press [] .


[52]

HOW TO RESTRICT YOUR PHONE

RESTRICTING LONG DISTANCE CALLS

- Press [4] "LONG DISTANCE".
- Select the parameter by using the scroll keys.
RESTRICT: restricts long distance calls.
ALLOW: allows long distance calls. 
- Press [] .

RESTRICT CALLS TO 900 NUMBERS

- Press [5] "900 #S".
- Select the parameter by using the scroll keys.
RESTRICT: restricts 900 service.
ALLOW: allows 900 service. 
- Press [] .



The message "THIS PHONE IS RESTRICTED" is displayed on the screen when a restricted call is placed.

[53]


HOW TO RESET YOUR PHONE

RESET

This function resets each value set in the memory to its default value.

- 1 Press [], then [0], then enter [PASSWORD], then [5].



- 2 Select the parameter by using the scroll keys. Press [].

 
- If you select "YES", the following screen is displayed, and then the phone will be automatically turned off.

HOW TO CLEAR YOUR PHONE MEMORY


CLEARING STORED PHONE NUMBERS

This function clears all stored numbers.

- 1 Press [], then [0], then enter [PASSWORD], then [6], then [1].




The default password is the last 4 digits of your phone number.

- 2 Select the parameter (NO, YES) by using the scroll keys. Press [].


CLEARING SCHEDULES

This function clears all schedule.

 - 1 Press [], then [0], then enter [PASSWORD], then [6], then [2].




The default password is the last 4 digits of your phone number.

- 2 Select the parameter (NO, YES) by using the scroll keys. Press [].

 
MEMORY CLEARING FUNCTION


CLEARING DIALED NUMBERS IN CALL LOGS

This function clears dialed number in call logs.

- 1 Press [], then [0], then enter [PASSWORD], then [6], then [3].

The default password is the last 4 digits of your phone number.




- 2 Select the parameter (NO, YES) by using the scroll keys. Press [].

MEMORY CLEARING FUNCTION


CLEARING HOME CALLS

This function clears air time used in home service areas.

- 1 Press [], then [0], then enter [PASSWORD], then [6], then [4].

The default password is the last 4 digits of your phone number.



- 2 Select the parameter (NO, YES) by using the scroll keys. Press [].


CLEARING ROAM CALLS

 
This function clears air time used in other service areas.

- 1 Press [], then [0], then enter [PASSWORD], then [6], then [5].

The default password is the last 4 digits of your phone number.






- 2 Select the parameter (NO, YES) by using the scroll keys. Press [].



CHAPTER 6

   
SUPPLEMENTARY FUNCTIONS





- ❶ Stopwatch
- ❷ Calculator
- ❸ Bio-Rhythm




STOPWATCH

STOPWATCH

- 1 Press [], then [7], then [1].


- 2 Press [ / ] to control the stopwatch.
 - [] controls Start/Stop
 - [] controls Split/Split Release/Reset.
 - The time unit displayed on the LCD in 1/100 of a second.

- 3 Press [] to exit and return to the initial display.









[60]

CALCULATOR

CALCULATOR

- 1 Press [], then [7], then [2].

CALCULATOR
 0.
 CAL PREV

- 2 Using the calculator.
 - Definitions
 - + : [], - : [], × : []
 - ÷ : [], = : [], . : []
 - Up to 7 integer digits and up to 2 decimals can be displayed. If the calculated result has more than 7 digits, the result is displayed in 7 digit logarithm.
 - There is no (-)sign. To express a negative number, use '0-value'. To see the help screen, press the volume key, even if you are in the middle of a calculation.
 - EXAMPLE
To calculate $128 \times 32 =$
 1. Enter 128
 2. Press []
 3. Enter 32
 4. Press []

[61]

BIO-RHYTHM

This function identifies the bio-rhythms of today or a specific day using solar calendar.

1 Press [], then [7], then [3].

2 Press [3] "BIRTHDAY".

- Enter your solar calendar birthday in year/month/date, and then press [OK].



3 To find out today's bio-rhythm, select TODAY and to find out bio-rhythm of a specific day, select SOMEDAY.

- Bio-rhythm function is available only when the phone can register the current time from the network system.
- For Some Day Bio, you cannot enter dates before your birthday.
- For Birthday, you cannot enter dates later than today's date.

- Physical, Emotional and Intelligent quotients appear with a number showing how many days have passed since your birth date for the date you want to find out. Bio-rhythm displayed on the top portion of the screen.
- What is Bio-rhythm?
Bio-rhythm is a life rhythm which is governed by three rhythm curves called physical, emotional, and intelligent and starts from our body from our birth to death.
 - Physical rhythm.
 - This rhythm controls wide-ranging physical elements related to resistance to diseases, physical strength, adjustment of muscle exercise, speed, physiology and other basic physical functions with a cycle of 23 days.
 - Emotional rhythm.
 - This rhythm adjusts creativity, sensitivity, mental health and recognition about world and humans with a cycle of 28 days.
 - Intelligent rhythm.
 - This rhythm affects our memory, susceptibility to fright, acceptance of knowledge and logical and analytic power with a cycle of 33 days.

[62]

CHAPTER 7

VOICE MAIL AND TEXT MESSAGE

This chapter describes convenient functions that allow you to check voice mail and send and receive text messages with the handset.

- Receiving a Message
- Voice Mail
- Send New(Sending message)
- Inbox(Checking Received Message)
- Outbox(Checking Sent Message)
- Settings
- Filed
- Erase Messages
- Reference

[63]

RECEIVING A MESSAGE

- 1** When a message is received, the following message is displayed.

XX NEW TEXT
XX VOICE
XXX-XXXX-XXXX
READ CNCL

- 2** Press **[READ]** to display the received message.

✉ : Test1
✉ : Test2
SEL PREV

VOICE MAIL

CHECKING RECEIVED VOICE MAIL MESSAGE

- 1** Press [], then press **[1]** "Voice Mail".

1 Voice Mail
12/29 AM 08:47
To LISTEN PRESS [SEND]
PREV

- 2** The number of voice mail messages currently received in your mailbox is displayed.
To access your voice mailbox, press **[SEND]**

CB : *86
PREV

[64]

SEND NEW

SENDING TEXT MESSAGE

- 1** Press [], then **[2]** "Send new".

Send To 123
123456789
NEXT phone book MODE

- 2** Input the phone number, then press **[NEXT]**.

- 3** Input text message, then press **[NEXT]**.

MESSAGE? T9 Abc
Test
NEXT 4/160 MODE

- 4** 4.1 To send the text message, press **[SEND]** or **[1]** "Send".

Sending message
CNCL

If the message failed to reach the other party, choose auto retry sending function. Then press **[YES]**.

Delivery Failed
Retry in 3 mins?
YES NO

- 4.2 If you want to change the recipient, then press **[2]** "Edit recipient".

Send To 123
123456789
NEXT phone book MODE

Input phone number, then press **[NEXT]**.

Input text message, then press **[NEXT]**.

MESSAGE? T9 Abc
Test
NEXT 4/160 MODE

[65]

SEND NEW

4.3 To change the text message, then press [3] "Edit Message".

Input text message, then press [NEXT].

 


4.4 To send an urgent message, press [4] "Priority". Then select the parameter (normal/ urgent) by using the scroll key. Press [SEL].



4.5 To change the call back number, press [5] "Call Back".

Input call back number, then press [NEXT].



4.6 To save the text message, press [6] "Save".



4.7 To confirm the message was sent, press [7] "Delivery Ack". Then select the parameter (YES/NO) by using the scroll key. Press [SEL].



INBOX

CHECKING RECEIVED TEXT MESSAGE

1 Press [] (power key), then press [3] "Inbox".



 
△ : Urgent New Msg

✉ : New Msg (unread)

✉ : Old Msg (read)


✉ : Lock (read)

2 Press [SEL]. The text message is displayed.



Then press [OPTS].

 3.1 To reply to the text message, press [1] "Reply" then press [NEXT].




3.2 To erase the text message, press [2], then press [YES].



INBOX

 3.3 To forward the text message, press **[3]**, then input the phone number and text message.



3.4 To save the text message, press **[4]**.



3.5 To save the text message's Call back number, press **[5]**.
(phone book storing flows)

3.6 To lock or unlock the text message, press **[6]**.



Then select the parameter (lock/unlock) by using the scroll key, press **[SEL]**.

OUTBOX

CHECKING SENT TEXT MAIL MESSAGE

1 Press [], then **[4]** "Outbox". Select the stored message by using scroll keys. Then press **[SEL]**.



- : Not delivered
- : Pending and will be sent later
- : Sent to BS
- : Receives recipient
- : Not sent

2 The text message will be displayed.



Then press **[OPTS]**.

3 3.1 To resend the text message, press **[1]**.

 


OUTBOX

3.2 To erase the text message, press [2], then press [SEL].




3.3 To send the text message, press [3], then input phone number and text message.



3.4 To save the text message, press [4].



 3.5 To display sent message state, press [5].



[70]

SETTINGS

SAVE SENT MESSAGE

1 Press [5], then press [5] "SETTINGS".

2 Press [1] "Save sent Msg?". Select the parameter(NO/YES/PROMPT) by using the scroll keys. Press [SEL].



DEFAULT CALL BACK NUMBER

1 Press [5], then press [5] "SETTINGS".

2 Then press [2] "DEFAULT CB#". Input Call back number. Then press [NEXT].



MESSAGE ALERT


1 Press [5], then press [5] "SETTINGS".

2 Then press [3] "Message alert". Select the parameter (RINGER&REMIND/SILENT/VIBRATE) by using the scroll keys. Press [SEL].



[71]


DELIVERY ACK

1 Press [], then press [5] "SETTINGS".

2 Then press [4] "Delivery Ack"
Select the parameter (YES/NO)
by using the scroll keys.
Press [SEL].



AUTO ERASE

1 Press [], then press [5] "SETTINGS".

2 Then press [5] "Auto erase"
Select the parameter (Disabled/Old Inbox)
by using the scroll keys.
Press [SEL].



ENTRY MODE


1 Press [], then press [5]
"SETTINGS".

2 Then press [6] "Entry Mode"
Select the parameter
(Alpha Mode/T9 Mode)
by using the scroll keys.
Press [SEL].



 
[72]

FILED


1 Press [], then press [6] "Filed".
Select the stored message by using the
scroll keys, then press [SEL].



2 Press [SEL].
The text message is displayed.
Then press [OPTS].



 3 3.1 If the text message is saved from the "Inbox",
the following is displayed.

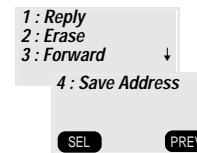


3.2 If the message is saved from the "Outbox",
the following is displayed.



[73]

ERASE MESSAGES

ERASE MESSAGES

 
- 1 Press [], then press [7] "Erase Msgs".



- 2 To erase inbox messages, press [1].



- 2 To erase outbox messages, press [2].



- 2 To erase filed messages, press [3].




[74]

REFERENCE(WRITING MESSAGE)

You can enter letters and numbers into your phone for a person's name and phone number, writing a text message, and so on. There are two ways to do this:

1. Using standard text input
2. Using T9 mode text input

USING STANDARD TEXT INPUT

- 1 Select the Abc mode, by using the [] keys.

- When you select this mode, the ABC icon appears as visual confirmation.



- "Find the key that corresponds to the letter you want to enter."
- Press it as many times as needed for the letter to appear on the screen.




- For example, to enter the name John:
 - Press [5] J
 - Press [6] [6] [6] o
 - Press [4] [4] h
 - Press [6] [6] n



[75]

REFERENCE(WRITING MESSAGE)

USING T9 MODE TEXT INPUT


KEY	FUNCTION
 Mode	Press to change mode. [T9Abc][Abc][123][Special characters mode]
[0] Next	Press to view the next matching word if the underlined word is not the word you intended.
[#] Space	Press once to accept a word and add a space.
[*] Shift	Press to select standard text input or T9 mode text input. [Abc], [ABC], and [abc] indicate stand text input. [T9Abc], [T9ABC], and [T9abc] indicate predictive text input.
 Clear	Press once to delete the character to the left of the cursor.
 Left, Right	To move cursor.

[76]

REFERENCE(WRITING MESSAGE)

USING T9 MODE TEXT INPUT

1 T9 mode is the default mode.

2 Select the T9Abc mode, by using the [] keys.

- This method allows you to write using a built-in dictionary.
- With predictive text input, you only need to press each number key once for each letter.

-For example, to write **John** with the English dictionary selected:

-[5] (for J)

MESSAGE? T9Abc
K
NEXT MODE

-[6] (for o)

MESSAGE? T9Abc
Km
NEXT MODE

-[4] (for h)

MESSAGE? T9Abc
Log
NEXT MODE

-[6] (for n)


MESSAGE? T9Abc
John
NEXT MODE

<The display shows the above words for each key pressed.>

[77]

REFERENCE(WRITING MESSAGE)

WRITE WITH T9 MODE TEXT INPUT

Select the T9 Abc mode, by using the [] keys.

1 Press each key once for each letter.

-For example, to write "John" press.
[5] [6] [4] [6]



2 Press to view the next matching word if the underlined word is not the word you intended.

If the word is correct
- then press [#]



If the word is not correct
- then press [0]




 
- then press [0],
the word is correct,
then press [#]




REFERENCE(WRITING MESSAGE)


3 Insert number

 
- To add a number to the message.
- Press [] key until 123 appears.
- To select the numbers you want.




 
4 Insert Symbols


- Press [] key until symbol screen appears.
- Use numeric keys to select the character you want, then press insert.

Press [],

 


Press [],



Press [],
then press insert





REFERENCE(WRITING MESSAGE)

CHAPTER 8

5 Write compound words

- Write the first part of the word and press [▲] key to accept it.
- Write the last part of the compound word and press [#] key to enter the word in memory.

- For example, to write "Whitehouse"

[9] [4] [4] [8] [3] [▲]



 
[4] [6] [8] [7] [3]



Then press [#] key.

MAKING AN EMERGENCY CALL


- 1 E911 in Lock Mode
- 2 E911 Using Any Available System



MAKING AN EMERGENCY CALL

This is the enhanced 911 feature.

E911 IN LOCK MODE

- 1** Enter 911 and press [].



When a call ends, the phone returns to the emergency mode.




- 2** Reserve Emergency mode during 5 minutes.



MAKING AN EMERGENCY CALL

E911 USING ANY AVAILABLE SYSTEM

- 1** Enter 911 and press [].

 


When a call ends, the phone returns to the emergency mode.
The phone tries to make an emergency call using any available system.



- 2** Reserve Emergency mode during 5 minutes.








CHAPTER 9

DATA SERVICE

   - ❶ Receive Mode
- ❷ Flow Control
- ❸ Ability of Wireless Data Communication




RECEIVE MODE

RECEIVE MODE

1 Press [] then [9] then [1].

1:RECEIVE MODE
2:FLOW CONTROL

SEL PREV

2 Select the parameter (INACTIVE, DATA, FAX) by using the scroll keys.
Press [].

RECEIVE MODE
INACTIVE

SEL PREV

- INACTIVE : When you use telephone
- DATE : When you use data
- FAX : When you use fax

[86]


FLOW CONTROL

FLOW CONTROL

1 Press [] then [9] then [2].

1:RECEIVE MODE
2:FLOW CONTROL

SEL PREV

2 Select the parameter (HARDWARE, SOFTWARE) by using the scroll keys.
Press [].

FLOW CONTROL
HARDWARE

SEL PREV

- Hardware : Hardware Flow control
- Software : Software Flow control
(Recommendation : Hardware Flow control)

[87]

ABILITY OF WIRELESS DATA COMMUNICATION

ABILITY OF WIRELESS DATA COMMUNICATION

If you use the data communication, install program provided by service office or phone connected network program of window 95/98 and then, you can use PC communication and internet connected by wireless communication networks.



If you buy optional(not to be sold)data communication cable, you can use this ability without upgrading other software.

Contents of the install environment and other things in detail refer to the inside manual when you buy the data communication cable or homepage of the service office.

CHAPTER 10


INTERNET BROWSER

This chapter describes convenient functions that allow you to access Wireless internet with the handset.

- 1 Start Internet Browser
- 2 Browser Menu

START INTERNET BROWSER

ACCESS WIRELESS INTERNET



- 1 To access wireless internet network, press [] key. Then internet browser start.



[90]

BROWSER MENU

The browser menu is a list of actions necessary for full operation of the browser.

To enter the browser menu, press [], then press [] again and hold.

RELOAD

Selecting the reload item from the browser menu reloads the current deck the first time.

 
- 1 Press [], then press [1].



HOME

When the home item is selected from the browser menu, the phone displays the home deck.

- 1 Press [], then press [2].



[91]

BROWSER MENU

BOOKMARKS

When the bookmarks item is selected from the browser menu, the browser displays the user's bookmarked items.

1 Press [], then press [3].



MARK SITE

When the mark site item is selected from the browser menu, the browser add the current deck to the user's bookmark list.

1 Press [], then press [4].



"No bookmarks service site" is displayed, when the site cannot support bookmarks service.

BROWSER MENU

ABOUT PHONE.COM

When the about phone.com item is selected from the browser menu, the browser is displayed with the browser version and copyright information. The device layer version is also displayed.

1 Press [], then press [5].



ADVANCED...

Selecting the advanced item in the browser menu displays the advanced menu items.


1 Press [], then press [6].



BROWSER MENU

SHOW URL

Selecting the show URL action displays the URL of the current deck.


- 1 Press [], then press [6], then press [1].



HTTP://www.
Hyundai.com/index

HOMEPAGE

Selecting the homepage item from the browser menu, enables the user to change the homepage.


- 1 Press [], then press [6], then press [2].

 
 


BROWSER MENU

SET UP.LINK


Selecting set UP.link item from the browser menu displays a screen that allows the user to select an alternate UP.Link.


- 1 Press [], then press [6], then press [3].



OFFLINE SERVICES

Selecting the offline services item from the browser menu navigates the user to a list of installed channel application. Selecting a particular application navigates the user to the entry point of the application.

 - 1 Press [], then press [6], then press [4].





OFFLINE SERVICES
(EMPTY)

BROWSER MENU

OUTBOX



When the outbox item is selected from the browser menu, a status screen is displayed that shows the user how many items are pending delivery and the age of the oldest item.

- 1 Press [], then press [6], then press [5].
- 

OUTBOX
(EMPTY)

RESTART UP.BROWSER

Selecting restart from the browser menu causes the deck history and deck cache to be cleared and a new session with the UP.Link to be started.

- 1 Press [], then press [6], then press [6].
- 



1:EMAIL
2:CONTACTS
3:CALENDAR
OK INBOX

[96]

BROWSER MENU

 
ENCRYPTION

Selecting the encryption item from the browser menu displays a list of security-related items.

- 1 Press [], then press [6], then press [7].
- 

ENCRYPTION
1:VERITY KEY
2:NEW KEY
OK




[97]




CHAPTER 11

SAFETY INFORMATION FOR WIRE- LESS HANDHELD PHONES

    - ❶ Driving Safety
- ❷ Electronic Devices
- ❸ Other safety Guidelines
- ❹ Precautions
- ❺ Warning
- ❻ Safety Information for FCC RF Exposure





SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

Read This Information Before Using Your Handheld Portable Cellular Telephone

EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

- ANSI C95.1 (1992) *
- NCRP Report 86 (1986) *
- ICNIRP (1996) *

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

* ;
American National Standards Institute;
National Council on Radiation protection and measurements;
International Commission on Nonionizing Radiation Protection.

ANTENNA CARE

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

 
Also, if using your phone while driving please:

- Give full attention to driving. Driving safety is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

WARNING: Failure to follow these instructions may lead to serious personal injury and possible property damage.



SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

If you have a pacemaker:

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

[102]

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

 
Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF where posted notices so require.

[103]



SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

OTHER SAFETY GUIDELINES

Aircraft

FCC Regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

 
To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

Potentially Explosive Atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or articles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

[104]




SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating the equipment, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.

1. DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.
2. DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using the unit, lay down the unit to avoid possible damage due to instability.
3. DO NOT expose this equipment to rain or spilled beverages.
4. DO NOT use unauthorized accessories.
5. DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized Audiovox cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
6. DO NOT short-circuit the battery terminals by metal items etc.

 [105]



SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

WARNING

The following offenses are punishable by fine, imprisonment, or both:

- Using obscene, indecent, or profane language.
- Using the unit to give off false distress calls.
- Wiretapping or otherwise intercepting a telephone call, unless that person has first obtained the consent of the parties participating in the call.
- Making anonymous calls to annoy, harass, or molest other people.
- Charging to an account without authorization to avoid payment for service.
- Refusing to yield a party line when informed that it is needed for an emergency call (It is also unlawful to take over a party line by stating falsely that it is needed for an emergency).

SAFETY INFORMATION FOR FCC RF EXPOSURE



WARNING! Read this Information before using your phone

CAUTIONS

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

 
Body-worn Operation

This device was tested for typical body-worn operation with the back of the phone kept 1 inch (2.54cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1 inch (2.54cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. All belt-clips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

Vehicle Mounted External Antenna(optional, if available)

A minimum separation distance of 7.9 inches (20cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.



Note: For more information about RF exposure, please visit the FCC website at www.fcc.gov



CHAPTER 12


WARRANTY

  - ❶ Protect Your Warranty
- ❷ 12 Month Limited Warranty



[108]

 [109]



PROTECT YOUR WARRANTY

Read your Warranty carefully, with the special consideration to paragraph seven of the Limited Warranty for your unit.

“Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling misuse, neglect or accident”.

Many companies are making look alike accessories and in some cases, promoting that their product is equal to or better than the Audiovox product. Be careful. Some of these products may not be compatible to use with your Audiovox product and may damage the unit or cause it to malfunction. If service is required on your unit and it is determined that a non-Audiovox accessory has created the problem with your unit, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage by reason of a non-compatible accessory, the Warranty will be voided. To protect your Warranty use only compatible accessories which cannot damage or interfere with the functioning of your Audiovox product.



AUDIOVOX COMMUNICATIONS CORP.

555 Wireless Blvd., Hauppauge, New York 11788, 800-229-1235
16808 Marquardt Avenue, Cerritos, California 90703, 562-802-5100
Audiovox Canada
5515 Spectrum Way, Unit #5, Mississauga, Ontario
Canada L4W 5A1, 800-465-9672

[110]

12 MONTH LIMITED WARRANTY

AUDIOVOX COMMUNICATIONS CORP.(the Company). warrants to the original retail purchaser of this Audiovox Handheld Portable Cellular Telephone, that should this product or any part thereof(except the items listed below), under normal use and conditions, be proven defective in material or workmanship within the first twelve (12)month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts)at the Company’s option, without charge for parts or labor directly related to the defect(s).

 
The keypad and display are similarly warranted for ninety (90) days from date of purchase.

The accessories consisting of the antenna and rechargeable battery pack, desktop charger are similarly warranted for twelve (12) months from original purchase.

This Warranty does not apply to batteries, fuses, or costs incurred for testing or checking, or to any product or part hereof which has suffered through alteration, serial number defacement, improper installation, excessive temperature or humidity, environmental conditions, mishandling misuse, neglect or accident. This Warranty is not assignable or transferable.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of warranty coverage, specification of defect(s), transportation prepaid, to the Company at the address shown below. For TRAVELERS WARRANTY SERVICE.

[111]



12 MONTH LIMITED WARRANTY

12 MONTH LIMITED WARRANTY

Call toll free to (800) 229-1235 (in N. Y. State. (631)233-3410) for reference to an Authorized Warranty Station in your area.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

The Company disclaims liability for geographic coverage, inadequate signal to antenna, communications range or operation of the Cellular System as a whole.

IN U.S.A.: Audiovox Communications Corp.
555 Wireless Blvd.
Hauppauge, NY 11788
(800)229-1235

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

IN CANADA: Audiovox Canada Ltd.
5515 Spectrum Way, Unit #5
Mississauga, Ontario L4W 5A1
(800)-465-9672

