



My mobile telephone gives me security!

emporia**LifePLUS** - Operating instructions



emporia

DEAR MOBILE TELEPHONE USERS!

- Congratulations on acquiring the emporia**LifePLUS** mobile telephone! In order to quickly familiarise yourself with your new mobile telephone we have compiled the present information over a few pages. In the following pages of the operating instructions you can choose how much time you want to spend getting to know the most important functions of your mobile phone.
- We hope you enjoy phoning and give you our best wishes

EMPORIA Telecom

Kellie Pyder

A. Fre

 
DELIVERY CONTENTS:




Mobile phone



Charger cable

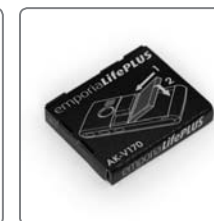

Battery

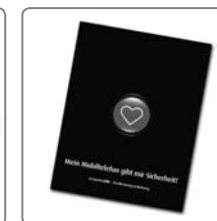 








Operating instructions

emporia**LifePLUS**


 


1 START

 
1.1 WHAT ARE ALL THE BUTTONS FOR?

- **Flash light**
- **Loud speaker**
- **Screen (= Display)**
- **Arrow keys** ▲ ▼
Pages in phone book and menu
- **Pick up/OK-button** 
 - ▶ Pick up
 - ▶ Confirmation of commands which appear in Display via this button
- **Hang up/Back/Delete-button** 
 - ▶ Hang up
 - ▶ Confirming commands which appear on the display through these keys (mostly back or delete)
- **Signal lights**
 - ▶  Green: flashes during incoming calls
 - ▶  Red: flashes when battery is empty - please charge
 - ▶  Orange: flashes when charging, constantly lit, if battery is full
- *** -Button:**
 - ▶ Long press: 10 most recently dialed numbers
 - ▶ Two short presses: + (for country code, e.g. +43 for Austria)
 - ▶ SMS: Additional characters (?!,.)@-+ \$€£¥ etc)
- **0 -Button** ( =Answer machine):
A long press to connect to the answer machine
- **# -Button** ():
 - ▶ Switch between upper and lower case text when writing an SMS







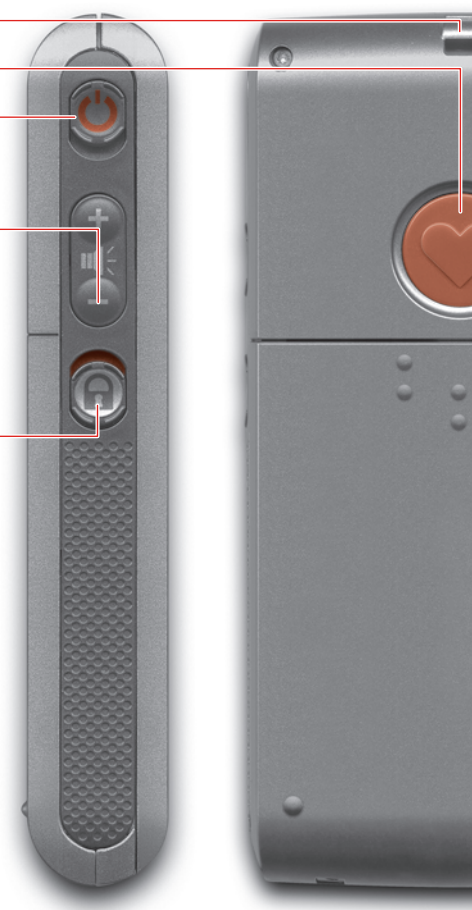

emporia **LifePLUS**


- **Hole for strap**
- **Emergency call button**
- **On/Off slide** 
Slide up to switch on, down to switch off.
- **Volume control** 
 - ▶ Alter receiver volume when phoning
 - ▶ Telephone rings:  press to mute the ring (rings again on next call)
- **Key lock** 
Prevents accidental pressing of the buttons (Slide up to switch on, down to switch off)



SYMBOLS IN THE DISPLAY

- | | | | |
|---|-------------------------|---|-----------------|
|  | Battery indicator |  | Ring out |
|  | Call diversion |  | Time |
|  | Alarm clock switched on |  | Signal strength |

 emporia **LifePLUS**

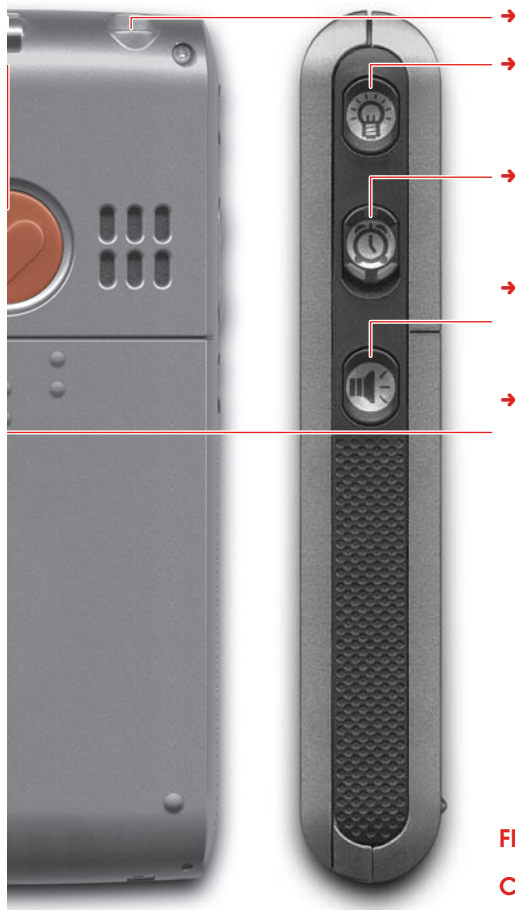

Charger connector



Flash light

Press button and hold it down until flash light switches one



Alarm Clock button

Slide up to switch on the alarm clock function and down to turn it off.



Hands free

Switch the hands free equipment on and off by pressing the button.

Battery compartment

High performance Li-Ion rechargeable battery



Flash light --->

Charger connector ----->



Roaming

In case you are abroad, this symbol replaces the signal strength – and you know that phoning is more expensive now.



Top 10

The most important numbers at the beginning of the phone book, independent of the alphabet (See chapter 4.2.4 – Top 10, determine in the menu with phone book)

List of contents

1 Start

| | |
|---|----|
| 1.1 What are all the buttons for? | 03 |
| 1.2 Technical product description and DOC..... | 09 |
| 1.3 Insert the SIM card like this | 10 |
| 1.4 Insert the rechargeable battery like this | 10 |
| 1.5 How to charge the battery | 11 |
| 1.6 The time has come: Switch on | 11 |
| 1.7 Switch off PIN-Code | 12 |
| 1.8 Set date and time | 12 |

2 Get to know your mobile phone in 10 minutes

| | |
|--|----|
| 2.1 Do not worry if you get lost in the menu. | 13 |
| 2.2 Taking a call | 13 |
| 2.3 Select with the numerical keypad | 13 |
| 2.4 Hands free | 13 |
| 2.5 Repeat selection | 14 |
| 2.6 Choosing from the phone book | 14 |
| 2.7 Phone book maintenance by SMS | 14 |

3 20 Minutes for useful details

| | |
|---|----|
| 3.1 Small menu – Sliding cover closed | 15 |
| 3.1.1 Numbers dialled | 15 |
| 3.1.2 Missed calls | 15 |
| 3.1.3 Calls taken | 15 |
| 3.1.4 Received SMS's | 16 |
| 3.1.5 Battery indicator and signal strength | 16 |

| | |
|--|-----------|
| 3.2 Alarm clock | 16 |
| 3.2.1 Switching the alarm clock on and off | 16 |
| 3.2.2 Set or alter alarm time | 17 |
| 3.2.3 Stop alarm | 17 |
| 3.2.4 Snooze function | 17 |
| 3.2.5 Set alarm clock tune | 17 |
| 3.3 Key lock | 18 |
| 3.4 Favourites | 19 |
| 3.4.1 Activate Favourites button | 19 |
| 3.4.2 Go into Favourites | 19 |
| 3.4.3 Arrange and sort Favourites | 19 |

4 30 Minutes for professionals

| | |
|--|-----------|
| 4.1 SMS text messages | 20 |
| 4.1.1 SMS Service-Center Number | 20 |
| 4.1.2 Writing an SMS | 20 |
| 4.1.3 Sending an SMS | 22 |
| 4.1.4 Receiving an SMS | 22 |
| 4.1.5 Replying to an SMS | 22 |
| 4.1.6 Deleting an SMS | 23 |
| 4.1.7 Creating and inserting submissions | 23 |
| 4.1.8 Send phone book entry by SMS | 24 |
| 4.2 Phone book | 24 |
| 4.2.1 New phone book entry: Saving names and numbers | 24 |
| 4.2.2 Change phone book entry | 25 |
| 4.2.3 Name searches | 25 |

| | | |
|------------|---|-----------|
| 4.2.4 | Top 10: the most important numbers | 26 |
| 4.2.5 | Phone book settings | 26 |
| 4.2.6 | Phone numbers and caller lists or saving an SMS in the phone book. | 26 |
| 4.3 | Emergency call | 27 |
| 4.3.1 | Saving emergency numbers | 27 |
| 4.3.2 | What do you do in an emergency? | 28 |
| 4.3.3 | What happens after pressing the emergency button? | 28 |
| 4.3.4 | Switch off emergency call button | 29 |
| 4.4 | Settings | 30 |
| 4.4.1 | Mute or meeting | 30 |
| 4.4.2 | Header shows network operators or time and symbols | 30 |
| 4.4.3 | SMS in the phone book | 30 |
| 4.4.4 | Phone book settings | 30 |
| 4.4.5 | Top 10: the most important numbers | 30 |
| 4.4.6 | Emergency numbers. | 30 |
| 4.4.7 | Birthday reminders | 30 |
| 4.4.8 | Answer machine number. | 31 |
| 4.4.9 | SMS Service-Center Number. | 31 |
| 4.4.10 | SMS on/off switch function | 31 |
| 4.4.11 | Make accidental entry into "Settings" menu more difficult | 31 |
| 4.4.12 | Overview of menus | 31 |

5 General Information 34

6 Frequently asked questions 35

1.2 TECHNICAL PRODUCT DESCRIPTION

TECHNICAL SPECIFICATIONS

- Suitable for loud speaker on a hearing aid device
- Dual band GSM 900/1800
- Dimensions: 117 x 58 x 18 mm
- Weight: 138g
- Rechargeable battery: Li-Ion 3.7V/1200mAh
- Standby time: up to 250 hours.
- Call time: up to 180 Min.
- Internal Antenna

- Display: 2.7" FSTN 128 x 160 Pixel
- LED-Flash light

EMERGENCY CALL FUNCTIONS

- Up to 5 emergency numbers
- Emergency numbers will be automatically rung at the touch of a button
- Sending of an emergency SMS to emergency call numbers
- DTMF recognitions for confirmation of emergency call

DECLARATION OF CONFORMITY (DOC)

We: Emporia Telecom Produktions- und Vertriebs-GmbH & Co. KG.
declare under our sole responsibility that the following product:

Kind of Product: Dual Band Mobile Phone
Type Designation: V170

is in conformity with the following relevant harmonised standards:


Safety : EN 60950 :2001 First Edition
Health : 50360:2001
50361:2001
EMC : EN 301 489-1 V1.4.1
EN 301 489-7 V1.2.1
Radio Spectrum : EN 301 511 V9.0.2

pursuant to the provisions of Council Directive R&TTE 1999/5/EC on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

The product bears the CE marking and Notified Body number

CE 0678

Signed:
DI Albert Fellner
General Manager

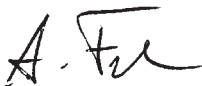


Date of Issue: Sep 26, 2007
Place of Issue: Linz/Austria

1.3 INSERT THE SIM CARD LIKE THIS


A SIM card is needed for phoning. It is inserted this way:

- Turn around the closed mobile phone, slide the battery cover down with your thumb approx. 5mm and then take it off. (Picture 1)
- Take out the battery (providing it is already in the device). Raise and lift or pull out the lower corners. (Picture 2)
- Battery contacts must be lying on the golden contacts of the mobile phone. (Picture 2)

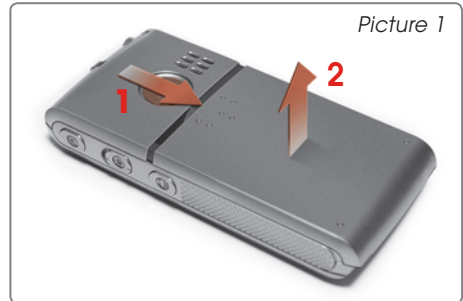

1.4 INSERT THE RECHARGEABLE BATTERY LIKE THIS ...

- Battery contacts must be lying on the golden contacts of the mobile phone. (Picture 3)
- Attach the battery cover on to the mobile phone again. With the two crosses facing upwards, slide the cover into the device again. (Picture 4)

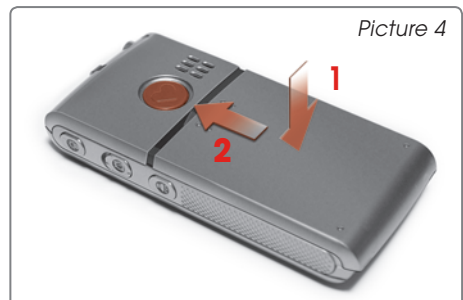

1.5 HOW TO CHARGE THE BATTERY




Please note: Charge the battery for at least 4 hours before the first phone call.

- Put the mains plug into a mains socket.
- Put the recharger cable connector into the jack at the top end of the mobile phone. (Bild 5)
- During the charging process, a large battery symbol and charging will be indicated on the mobile phone. Furthermore, the signal light flashes in orange if there is contact between the charger and the mobile phone (begins to flash approx 10 seconds after putting in the recharger cable).
- As soon as the battery is fully charged, Battery Full appears in the display and the orange signal light stops flashing and remains constantly lit.
- Disconnect the recharger cable from the mobile phone as well as from the socket.











Picture 5

1.6 THE TIME HAS COME: SWITCH ON











 


-  Slide up the cover on the left of the mobile phone. By doing this, the mobile phone switches on.
- When using a new SIM-card for the first time the 4-digit PIN-Code must be entered. The PIN-Code prevents someone else from switching on your mobile phone. However, it does not prevent someone else from using it if it is already switched on. Please obtain the PIN-Code from your Network Operator's details (you received an information pack with your SIM card)..
- Slide open the mobile phone for PIN-Code entry and enter the PIN-Code with the numerical keypad. Confirm with  (Delete possible entry errors when typing the numbers with .)

1.7 SWITCH OFF PIN-CODE

To avoid problems later on through forgetting the PIN-Code, we recommend that the PIN query is switched off. (However, this is not possible with some network operators.)


- With the sliding cover open, access Settings in the menu with  and select with . Access the PIN query menu item by pressing  several times and selecting with . Select Off with . (In case the Off option is not already darkly shaded, access it by pressing ). The 4-digit PIN-Code will now be requested again.
- Enter the PIN-Code with the keypad and confirm with .
- Go back into Stand-by mode with  or sliding the cover back.

1.8 SET DATE AND TIME

- With the sliding cover open, access Settings in the menu with  and select with .
- Access Time & Date with  and select with .
- Select Set Time with .
- Set the hours with two digits via the numerical keypad or   (e.g. "09" for 9 AM) and save with .
- Set the minutes with two digits via the numerical keypad or   and save with . Now Time Set appears in the display.
- Continue to Set Date with  and select with  Same procedure as with setting the time.



2 GET TO KNOW YOUR MOBILE PHONE IN 10 MINUTES

2.1 DO NOT WORRY IF YOU GET LOST IN THE MENU



- Whenever you get carried away in the menu, simply close the sliding cover of the mobile phone. By doing this you will see the familiar view again on the screen! (=Stand-by mode)
- By pressing  several times you will also quickly get out of risky situations ...
- If the mobile phone is not used for over two minutes, the screen switches itself off. The mobile phone is now in economy mode but still ready to receive. The screen becomes active again by shortly pressing a random button.

2.2 TAKING A CALL



On an incoming call the telephone rings and vibrates. The green signal light flashes and the number and name of the caller can be read on the screen (if saved in the phone book).

- Take a call with  or make one by opening the cover. You can also phone when the cover is closed as well as open.
- To end the call press  If your interlocutor hangs up first, this is no longer necessary.

Please note: Closing the open cover does not end the call.

- To refuse a call while the phone is ringing press .
- If you do not want to refuse the call but would prefer it not to ring any further (e.g. you are sitting in a waiting room), press the -button on the volume control and the ring will be muted for this call.

2.3 SELECT WITH THE NUMERICAL KEYPAD

- Slide open the mobile phone and enter the telephone number via the numerical keypad- ALWAYS with the area dialling code. Example: Enter "040789789" for number 789789 with area dialling code 040/.
- Establish telephone connection with .
- End call with . If your interlocutor hangs up first, pressing () is no longer necessary.

2.4 HANDS FREE





You can turn the hands free equipment on or off with the  button.

2.5 REPEAT SELECTION

- Slide the cover open to at least 15 mm, keep  depressed for 3 seconds.
- Call the number that was dialled last with  die letztgewählte Nummer anrufen. (See chapter 3.1.1 also)

2.6 CHOOSING FROM THE PHONE BOOK

With the sliding cover closed, the phone book is displayed in list form meaning names are sorted alphabetically.

- Access the desired entry saved in the phone book with .
- Call number with .
- End conversation with . If your interlocutor hangs up first, it is no longer necessary to press .

Alphabetical name search: See chapter 4.2.3

2.7 PHONE BOOK MAINTENANCE BY SMS

To spare you storing new telephone numbers in the phone book, you can give this job to your family and friends as well as acquaintances.

- They would simply have to send an SMS (text message) to your mobile number in the following format:
#Name#Number# → Example: #Tobias#06649876543#
For a number it once again concerns inputting telephone number including the area dialling code or the complete mobile number beginning with "0" must be given. However it is recommended that all numbers are to be saved in international format with the country dialling code.
For example with the Austrian national dialling code:
#Tobias#+436649876543#
- Saving into your phone book takes place automatically upon receipt of the SMS.


Please note: If your SMS memory is full, no phone book entry can be received by SMS. (See chapter 4.1.6)

However, if this function is not required, set SMS Entry in Phone Book to "Off" in the SMS Messages menu.

3 20 MINUTES FOR USEFUL DETAILS

3.1 SMALL MENU – SLIDING COVER CLOSED

With the sliding cover closed, alphabetically sorted phone book entries are legible in the display (in case already saved).

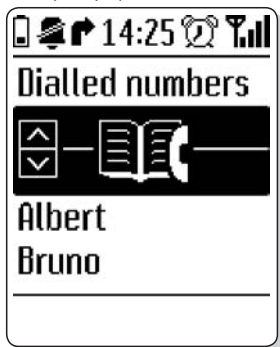

Page up to the Small Menu with ▲.



■ 3.1.1 Numbers dialled

If this menu item is darkly shaded, the last number dialled will be displayed. With **[OK]**, the list of recently dialled numbers appears with date and time stamp of the individual callers.

- Select the desired number with ▲ ▼.
- The number selected can be called with **[OK]**.

■ 3.1.2 Missed calls

If this menu item is darkly shaded, the number of missed calls is displayed. With **[OK]**, the list of missed calls appears with date and time stamp of the missed calls.

- Select the desired number with ▲ ▼.
- The number selected can be called with **[OK]**.


■ 3.1.3 Calls taken






If this menu item is darkly shaded, the number or name (if saved in the phone book) of the last call taken will be displayed. With **[OK]**, the list of calls taken appears with date and time stamp of the accepted calls.

- Select the desired number with ▲ ▼.
- The number selected can be called with **[OK]**.

■ 3.1.4 Received SMS's

If this menu item is darkly shaded, the number of newly received SMS's (= text messages) is displayed.

With , the list of SMS's received appears. Each SMS is displayed with a number or name (as long as they are saved in the phone book) as well as the date and time stamp. If an SMS is indicated with an "N", it is "New" and therefore unread

- Select the desired SMS with  .
- Press , to read the SMS.
- Page down the text with  until you come to the further subitems (commands). (See chapter 4.1)
- Come out of the submenu with .






■ 3.1.5 Battery indicator and signal strength

- One bar in the battery indicator corresponds to a capacity of 25 % (4 Bars 100 %). If the battery charge status falls below 25% and the signal light at the bottom of the mobile phone flashes in red, charge the battery with the aid of the charger cable. (See chapter 1.6)
- On the right you will see the reception strength. If this amounts to less than 25% the send-receive and hearing quality are largely restricted when phoning. Try to find a place for better reception strength when phoning.
- Other symbols – see chapter 4.4.6









3.2 ALARM CLOCK

Your emporia **LifePLUS** mobile phone is equipped with an alarm clock which is quite similar to a normal alarm clock.

■ 3.2.1 Switching the alarm clock on and off



- To switch on the alarm clock, move the -slide on the right of the mobile phone upwards and confirm the alarm time with .
- To switch it off move the -slide downwards.

■ 3.2.2 Set or alter alarm time



- Move the -slide upwards. Should the alarm clock already be switched on, slide (-slide upwards), briefly down and back up again. The entry field for the alarm time appears on the screen.
- Set the hours with two digits (e.g. "07" for 7AM) via the keypad or with   and save with .
- Set the minutes with two digits (e.g. "07" for 7AM) via the keypad or with   and save with .
- After a confirmation report, the mobile phone returns to stand-by mode. An alarm clock symbol appears in the header.

Please note: The alarm clock symbol in the header is only visible if "Header shows/ Time & Symbols" is selected in the Settings menu (See chapter 4.4.2).

■ 3.2.3 Stop alarm

- To stop the alarm press , the alarm clock sounds the day after at the same time again.
- Or turn off the alarm clock completely by moving the -slide down. (See chapter 3.2.1)
- If you do not press any buttons, the alarm clock sounds every 3 minutes again, 90 minutes in total.

■ 3.2.4 Snooze function

- To be woken or reminded again 5 minutes later, select the snooze function during the alarm signal with . This can often be repeated randomly. Otherwise stop the alarm with .



■ 3.2.5 Set alarm clock tune

- Under Settings/ Tones & Signals/ Alarm clock tune, you can select which tune you want to be woken by.

Tip: If you select a tune which is clearly different to the Call tune, you can be certain not to confuse the two signals.

3.3 KEY LOCK

To avoid unintentional pressing of the keys (e.g. in your pocket), you can lock the keys.

- If the -slide on the left of the mobile phone is moved upwards, the key lock is switched on. A large key symbol will be indicated in the display.
- If the mobile phone is slid open, all of the buttons are accessible again. If the phone is closed again, the keys will be locked again.
- To switch off the key lock, move the -slide down again.

Please note: Incoming calls can, as usual, be taken by  or opening the sliding cover.

If you want to refuse a call, you would firstly have to unlock the keypad (move the -slide down).

3.4 FAVOURITES

 
In Favourites, individually arrange the menu items that you want to use the most (without paging down too far in the main menu, e. g. Ring tone on/off, Calculator, Name search, etc.). Activation is only necessary once in order to make favourites visible when the cover is closed.

■ 3.4.1 Activate Favourites button

- With the sliding cover open, access Settings with and select with .
- Access Favourites with and select with .
- To switch on this function, select On with and then close the cover.

■ 3.4.2 o into Favourites

A black bar must be in its original position, then Favourite appears bottom left, select with .

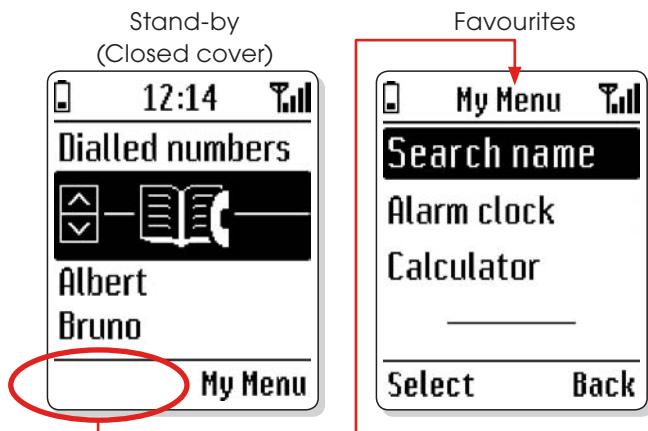

■ 3.4.3 Arrange and sort favourites:

- Go into the Favourites menu with .
- Access Elements by selecting 3 times and confirming with .
- Access desired favourites with and tick them (= Switch on) with .
- Mit die Positionsnummer für die Reihenfolge wählen und mit bestätigen.
- Repeat the last 3 steps for further favourites.
- Save the selection with and confirm the query "Save changes?" .

4 30 MINUTES FOR PROFESSIONALS

4.1 SMS TEXT MESSAGES




 




An SMS (Short Message Service) is a short written message which can be sent to all mobile phone users. Costs are only incurred when sending the SMS.

Note: Some landline telephones can also receive SMS messages.

4.1.1 SMS Service Center number





The central number of the network operator through which all short messages are developed. This number is usually already saved by the network operator on the SIM card and does not have to be entered or altered by you any further

■ 4.1.2 Writing an SMS

- Slide open the mobile phone and select SMS messages with  (already shaded in dark).
- Select Write New with .
- Compose your SMS with the aid of the numerical key pad. To delete individual characters give  a short press. By doing so each character that is to the left of the vertical line | will be deleted. To delete the whole text keep  depressed for 3 seconds.
- Any time you see the | symbol, this means you are in Text. To move around (forward, back) in Text use  . Through a long press on   you can jump back or forward from one line to another.

All characters and functions which can be selected are listed in the table below. Each button represents several characters or functions according to how often the relevant button is pressed in Abc-mode (see explanations according to the table).

| | |
|----------|---------------------|
| 1 | → . , ! ? , , @ : 1 |
| 2 | → a b c 2 ä à |
| 3 | → d e f 3 è |
| 4 | → g h i 4 |
| 5 | → j k l 5 |
| 6 | → m n o 6 ö |

| | |
|--------------|--|
| 7 | → p q r s 7 ß |
| 8 | → t u v 8 ü |
| 9 | → w x y z 9 |
| 0 | → Space; 0 |
| * | → . , ? ! , , , ; () @ - + \$ € £ ¥ # % * & ~ = □ |
| a/A/1 | → Change between lower and upper case letters and digits ( Abc,  ABC,  abc,  123) |

Examples for assignment of keys:



- Press D 1x = j
- Press D 2x = k
- Press D 3x = l
- Press D 4x = 5



- Press D once = Space
- Press D twice = 0

→ Insert a punctuation character (, . ! ?) by pressing **1** several times.


→ Additional character: Enter by pressing *****.

By pressing ***** or **▼** several times you can move from left to right. You can move up **2** or to the left with the **4** button, to the right with **6** and below with **8**. When you find your preferred additional character, press **ok** to insert it into the text.

→ You can choose between 4 options with **#**:

- ✎ABC: Always in upper case
- ✎Abc: Mixed – Upper case at the start of the sentence
- ✎abc: Always in lower case
- ✎123: Digits

The option chosen will be displayed next to the ✎-symbol.

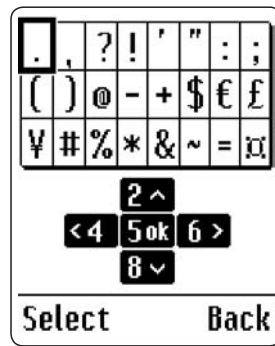

→ A numerical entry can also be accessed by the following commands when entering text: **ok** to continue, select **▼** to insert digits and confirm them with **ok**. You can insert numbers via the numerical key pad or search in the phone book of in the list of unsaved numbers.

→ Entries from the phone book (name and telephone number) are inserted in the SMS text in the following way: **ok** to continue, select **▼** to insert names and confirm them with **ok**. Select names from the phone book with the key pad or **▲▼** and insert into the SMS with **ok**.










 

→ The number of characters left to fit into an SMS can be seen in the upper right corner of the display.

Example: **1/135** means that in the first SMS another 135 characters can still be entered. In case more than 160 characters were already written, the text will be sent in two SMS's and **2/...** will appear in the upper right corner.



A maximum of 480 characters can be sent at one time (automatically divided in up to three messages).








■ 4.1.3 Sending an SMS

- Send a completed text with  Continue.
- Select Send with .
- Depending on whether the telephone number of the receiver already appears in the mobile phone, follow the various procedures:
 - Telephone number already in phone book: Select phone book by pressing  twice: Access names with  or enter the initials of the name with the keypad. As soon as the preferred number appears shaded in dark, confirm it with . A final  sends your SMS.
 - Just used telephone number but not in phone book: Confirm search with , select unsaved numbers with  and confirm with . With  select the relevant number in the list of telephone numbers displayed (dialled and received as well as wrong numbers and SMS) and confirm with .
 - Enter new telephone number with the numerical key pad and send SMS's with

■ 4.1.4 Receiving an SMS

- A short tone signal and vibration indicates receipt of an SMS. "New message" appears in the display.
- To read the SMS select . You can now read the short message. For longer text, move down the text field .

■ 4.1.5 Replying to an SMS








- If you have finished reading the SMS, page down with  until the SMS options Delete, Call Number, Read Next SMS, Reply, Forward, Save in Phone Book appear. Select Answer with .
- Either give a pre-fabricated short message (e.g. "Yes/No", "Alright") along with the original text in your reply, with , or just simply access the blank display with . Now write your reply.
- Send the reply to the SMS sender by pressing  twice.





■ 4.1.6 Deleting an SMS






Because a full SMS memory blocks the receipt of an SMS, it must be deleted sometimes.

- ➔ Open the sliding cover and then select the SMS message with .
- ➔ Delete the SMS with  and select with . Now either delete the whole range of SMS's by deleting the entire SMS memory or just certain ones, e.g. only access SMS's with  and select with . Confirm response to the repeated question Delete all received SMS's? by pressing . You can also delete individual SMS's: Page down in the relevant SMS message until Delete SMS appears, press  twice.












■ 4.1.7 Creating and inserting submissions

Submissions are frequently used messages such as please call or coming later or I love you. Once these are created or are selected from the available submission list, they help to save time when writing an SMS. Existing submissions can also be changed before sending (*See below*).

Creating new submissions:

- ➔ Open the sliding cover and select SMS messages with .
- ➔ Select submissions with  and confirm selection with .
- ➔ Select Insert Entry with .
- ➔ Write preferred text with the keypad.
- ➔ Save as a new submission with .







Revising existing submissions:

- ➔ Open the sliding cover and select SMS messages with .
- ➔ Select submissions with  and confirm selection with .
- ➔ Access the submission to be revised with  and select with .
- ➔ When editing the submission confirm edit / send with .
- ➔ Carry out text editing via the key pad and if necessary with the delete key .
- ➔ Continue to the submenu with .
- ➔ Either send the revised submission as an SMS with .
- ➔ or save it as a submission with  in case the newly created text is to be used as a new submission in future. Save it with .



■ 4.1.8 Send phone book entry by SMS

If the recipient of this SMS also uses an emporia**LifePLUS**, the entry will automatically be saved in the recipient's phone book.






- Select SMS messages with .
- Send  3 times to Entry per SMS, select with .
- Access the phone book entry to be sent with  and select with .
- Enter phone number or name search to the recipient who was sent the phone book entry and confirm with .

4.2 PHONE BOOK

The phone book enables saving, changing and searching of up to 20 names and numbers in the phone book. *(Detailed information about use of emergency numbers can be found in chapter 4.3.)*

We recommend that your phone book is regularly secured in a special memory, so-called SIM-Backup (e.g. as a key chain, available in specialist stores). Should you lose your telephone or your SIM card this means that not all your contacts from the SIM card will be lost.

■ 4.2.1 New phone book entry: Saving names and numbers

- Open the sliding cover and access Phone Book with  and select with .
- Access New Entry with  and select with .
- Enter the names with the numerical keypad and save with .
- Via the numerical keypad, enter the telephone number WITH area dialling code or mobile number dialling code.
Example: "06649876543"
Recommendation: It is always best to write the international dialling code.
Example: "+436649876543"

Please note: You can get the  sign by pressing  twice.

- Save the phone book entry with .



■ 4.2.2 Change phone book entry

- Open the sliding cover and access Phone Book with and select with .
- Access New Entry with and select with .
- Access the phone book entry to be changed with or the numerical keypad and select with .
- If necessary, correct the names with the aid of the numerical keypad or to delete characters press .
- Continue with .
- Correct with the numerical keypad or when deleting telephone numbers.
- Save the corrected phone book entry with .


■ 4.2.3 Name searches









You can look for and ring a telephone number from the phone book with the sliding cover either closed or open.

- Searching with sliding cover closed
This search is to be recommended if the phone book entry is a long way further on in the alphabetical listing or is a Top10 or if your phone book (still) does not have many entries.
 - Access the preferred phone book entry with and
 - call with .
- Searching with sliding cover open
 - Access Phone Book with and select with .
 - Select Search names with .
 - Search the phone book entry by inputting one or several initials with the keypad.
 - Ring the selected number with .
- Searching with sliding cover open with the aid of Favourites
 - Select Favourites with . (The Favourites function must be active.)
 - Select Search names with .
 - Search the phone book entry by inputting one or several initials with the numerical keypad.
 - Ring the selected number with .



■ 4.2.4 The most important numbers









In order to quickly dial the most frequent or most important numbers with the sliding cover closed, use the "Top 10" setting. This ranks your Top 10 numbers at the beginning of the phone book so that they can be quickly accessed with  when the sliding cover is closed.

- Open the sliding cover and access Phone Book with  and select with .
- Access save Top10 with  and select with .
- Select New Top10 numbers with  and select New TopNo.1 with .
- Access the preferred phone book entry with  or with the aid of the numerical keypad and confirm with . An overview of the Top 10 numbers already saved will now be shortly displayed.
- For further important numbers, repeat the previous steps correspondingly.

■ 4.2.5 Phone book settings

- Save Entry determines where you save your new phone book entries on the SIM card. Then you can also put your phone book into other mobile phone or on the telephone (Your phone book remains on the SIM card exchange on the telephone).
- Used Memory determines whether you call up the phone book entries from the SIM card memory, the telephone memory or from both memories.
- Memory status shows how much memory you have already used on the SIM card or in the phone book.

■ 4.2.6 Phone numbers and caller lists or saving an SMS in the phone book

- Caller lists:
You find yourself in a caller list and want to save the call number. Access Save in Phone Book with  at the end of the caller list and select with .
Page down with  until the preferred number appears and select with  Enter Name and Save with , possibly correct the number and save with .
- SMS:
At the end of the SMS page down with  as far as possible until Save in Phone Book appears, select with . Proceed further as described above.

4.3 EMERGENCY CALL











The emergency function is a simple function which can save lives at the deciding moment. In all, you can save 5 emergency numbers (relatives, neighbours, friends, rescue). These numbers, previously saved in order of sequence, will be automatically dialed in an emergency by pressing the emergency button on the back of the mobile phone.

During the emergency call, a warning tone continuously sounds so that you and the person you rang know that it is an emergency! If you cannot get through on the first number, the second number will be called automatically. If you cannot get through on the second number, the third number will be called etc (max. three ways for max. five numbers).


If you make connection, the person you are ringing must press the "0" button within 60 seconds otherwise the conversation will be cut off. Confirmation with "0" is necessary so that the emergency call does not go to the answering machine by mistake. In an unsuccessful emergency call, your emporia **LifePLUS** automatically takes incoming calls within the next few hours (without pressing a button).

If no emergency number is saved or your phone card has run out or you are not allowed under a foreign network (e.g. Roaming not activated), 112 can be selected by pressing the button.


■ 4.3.1 Saving emergency numbers

- Set up a maximum five emergency numbers and their sequence. These numbers must already be saved in the phone book.
- With the cover opened, go into the phone book with  and select with .
- Go into Emergency numbers with  and select with .
- Confirm saving of emergency numbers with  bestätigen.
- Select  to save emergency number 1.
- Go into phone book entry with   and select with .
- Answer the question, whether an emergency SMS should be sent before making an emergency call, either with Yes (in case mobile number or telephone with SMS function is available for emergency contact) or No with , and do the same when asked if it is to do with a private person or help organisation. For an aid organisation, neither the warning tone (so as not to be confused with emergency services) nor the pressing of "0" is necessary.
- For a maximum of four more emergency numbers, repeat these steps correspondingly.


■ 4.3.2 What do you do in an emergency?

- Press the emergency button on the back of the mobile phone, either for 3 seconds or 3 times in 3 seconds. (The emergency button also functions when the key lock is active.)
- If you want to stop or cancel the emergency call, press  for 3 seconds.

■ 4.3.3 What happens after pressing the emergency button??

- By pressing the emergency button, the emergency numbers you have previously saved will be automatically dialled in the given sequence. (*The emergency button also functions when the key lock is on.*) The mobile phone switches on the hands free function at full volume and at the same time, the person called will be informed by the sending of an emergency SMS that an emergency call is coming through and that the "0" button must be pressed during the first minute of the call.
- As soon as the first person receives your emergency call, this person must press the "0" button during the first minute of the call (not you, as the person making the emergency call!). The emergency call cycle will be stopped by doing so. This means the remaining emergency numbers will no longer be called and the current emergency call lasts until the conversation between the interlocutors comes to an end.
- If you are called within an hour of the start of the emergency call function, the telephone automatically takes each incoming call. If you would like to stop the "automatic reception up to 1 hour after emergency call" function you must switch your mobile phone off and then switch it on again (For safety reasons, only pressing  is not sufficient).

► Please note:

- To stop the emergency call, keep  depressed for 3 seconds.
- The pressing of "0" by the person receiving the emergency call (not the call maker / sender of the emergency call) ensures, that your emergency call does not end up being unheard on an answering machine/Mobile box or Mailbox.
- Your call number will always be displayed during the emergency call, even if you have selected Withhold Number when making settings.



- When changing a phone card: Always make sure that there is sufficient credit on your phone card because private emergency numbers cannot be dialled without sufficient credit.
- As a rule, the international emergency call 112 can still be called outside of the regional network of your network operator.



Attention: If you want to save emergency numbers such as the ambulance service, the police, fire brigade etc. as an emergency number, you must gain permission from each of these institutions beforehand. There will be no liability for possible costs arising from calling them by accident.

■ 4.3.4 Switch off emergency call button

- You can switch off the emergency call button in the menu settings. If the emergency button is pressed when switched off, no emergency call will be made. However, you can dial 112 on the numerical keypad.

4.4 SETTINGS

If you want to alter the settings (e.g. Alarm call, Ring volume, Display contrast...) you have come to the right place.

- With the sliding cover open, go into the settings with .
- Select the menu item with .
- Now page through the individual items and follow the indications in the Display.

■ 4.4.1 Mute or Meeting

In some situations, it is good manners not to disturb other people with a ringing or beeping phone (restaurant, theater, cinema, etc). For this reason, your emporia**LifePLUS**, offers you the silent or meeting functions for tones and signals.


- Switch on the silent function and the ring, vibrating alarm, key tones, SMS tone and confirmation tones will be switched off.
- Switch on the meeting function and instead of the ring tone, a double beep tone will sound. The vibrating alarm lasts max. 10 seconds, the SMS tone remains unchanged and the key tones and confirmation tones will be switched off.




■ 4.4.2 Header shows network operators or time & symbols

In Settings you can choose whether you see the network operator or the time and symbols in the header (Ring out, Forward call, Alarm)

Closed cover.
Header shows
Network operator name.

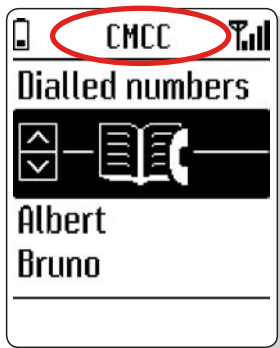

Closed cover.
Header shows
Time & symbols.

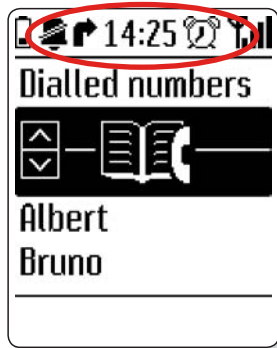

■ 4.4.3 SMS in the phone book: (See chapter 4.2.1 and 2.6)

■ 4.4.4 Phone Book settings: (Siehe Kapitel 4.2)

■ 4.4.5 Top 10: The most important numbers (See chapter 4.2.4)

■ 4.4.6 Emergency numbers: (See chapter 4.3)

■ 4.4.7 Birthday reminders

You can save birthday reminders.

If the name is already an entry in the telephone memory (not on the SIM card), you will be asked, after the reminder, whether you want to ring the person who is celebrating.

If there is still no entry for this person or they are found on the SIM card memory, you will be requested to give a name when saving the birthday reminder. In this case you will be reminded about the birthday but not asked if you want to ring.

■ 4.4.8 Answer machine number

If you press the **0** button for 3 seconds, you will be automatically connected to your answer machine. Should this number still not be saved to your device or SIM card, you will be requested to give this number. If you do not know this number, ring your network operator's free of charge hotline. Do not worry, it is quite simple and very pleasant afterwards if you use the answer machine.

■ 4.4.9 SMS Service-Center Number: (See chapter 4.1.1)

■ 4.4.10 SMS on/off switch function

If you neither want to send nor receive short messages, you can turn off the SMS Menu (the remote maintenance of your phone book also functions when the SMS Menu is switched off).

■ 4.4.11 Irrtümlichen Einstieg ins Menü „Einstellungen“ erschweren

If the **0000** entry function is switched on, the user must enter **0** 4 times to get into the Settings menu. This function prevents unintentional entry or changes in the Settings menu.

■ 4.4.12 Overview of menus

Cover closed:
Small menu
▲ Press several times.



"Small menu"
See chapter 3 also.

Cover opened:
Main menu



"Main menu"
See next page.

Delete SMS

All SMS

Received SMS

Sent SMS

Unsent SMS

Submissions

Selection Back

SMS-Information

Write new

Received SMS

Sent SMS

Unsent SMS

Submissions

Delete SMS

Service-Center No.

Send phone book entry by SMS

SMS in Phone book (On/Off/Only from Phone Book)

Selection Back

Call lists

Missed calls

Selected numbers

Recorded calls

Delete all

Length of conversation

Selection Back

Top10

Save Top 10

Change reihung

Change Top10

Delete Top10

Selection Back

Telephone book

Search name

New entry

Change entry

Delete entry

Send phone book entry by SMS

Copy entry

Top10

Emergency numbers

Answer machine No.

Phone book settings

SMS in Phone book (On/Off/Only from Phone Book)

Selection Back

Emergency numbers

Save emergency number

Change order

Change emergency number

Delete emergency number

Selection Back

 
Phone book settings

Save entry in

Used memory

Memory status

Selection Back

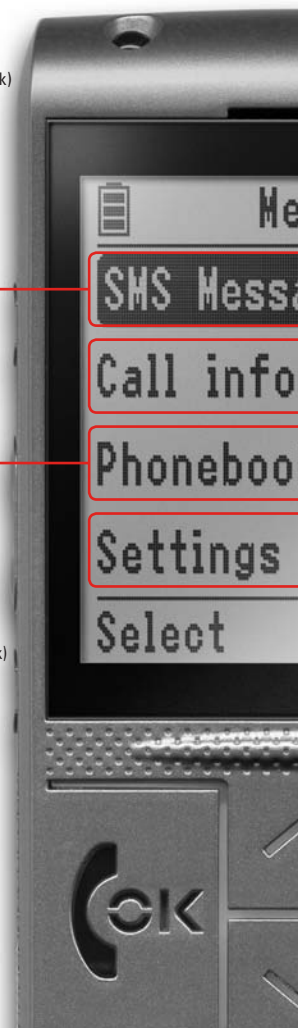


Length of conversation
 Last conversation
 All conversations
 Selected numbers
 Recorded calls
 Reset counter
 Selection Back

Settings
 Tones & Signals
 Receiver volume (1-5)
 Hands free volume (1-5)
 Display contrast (-5 - +5)
 Text size (Groß/Klein)
 Text size SMS (Groß/Klein)
 Language (German/English)
 Time & Date
 Display Time of day & Clock
 Calculator
 Favourites (On/Off)
 Network selection (Auto/Manual/Selected)
 Header shows (Network operator/Time&Symb)
 Call waiting (Activate/Stop/Status)
 Call diversion
 Withhold call No. (Yes/No)
 Energy saving
 PIN-Query (On/Off/Change PIN)
 Remember birthday
 User help (On/Off)
 SMS in phone book (On/Off/Only from Phone Book)
 Phone Book settings
 Top10
 Emergency button (On/Off)
 Emergency numbers
 Answer machine No.
 Service-Center No.
 SMS Menu (On/Off)
 0000 enter (On/Off)
 Reset (Settings/All)
 Selection Back

 Sounds & Signals
 Ring tone (1-5)
 Wake tone (1-5)
 Ring volume (0-5)
 Mute (Ein/Aus)
 Meeting (Ein/Aus)
 Extra ring (Ein/Aus)
 Vibration alarm (Ein/Aus)
 Button tones (Klick/Ton/Stumm)
 SMS-Tone (Ein/Aus)
 Receiver volume (1-5)
 Hands free volume (1-5)
 Selection Back



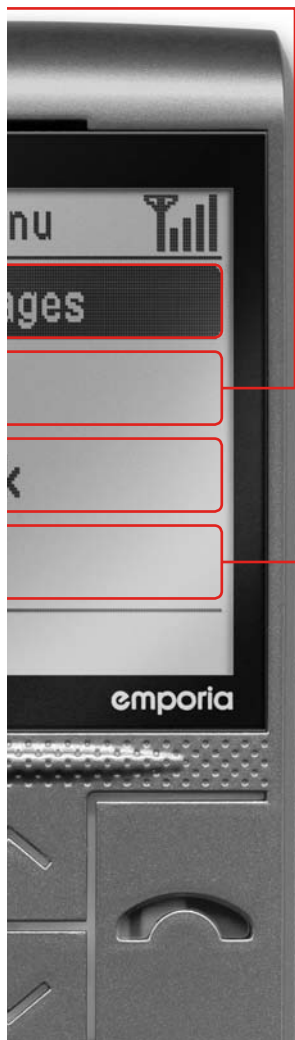

Time & Date
 Set time
 Time format (24 Hours/ AM/PM)
 Set date
 Date format
 Display time
 Selection Back

Remember birthday
 New birthday
 Change birthday
 Delete birthday
 Selection Back



5 GENERAL INFORMATION

SAFETY INFORMATION:

-  Switch of the mobile phone in hospitals or near to medical equipments.
- A minimum distance of 20 cm should be kept between a pacemaker and a telephone that is switched on. Never keep the mobile phone in your breast pocket. When phoning, hold the phone to the ear which is furthest away from the pacemaker. If you suspect that it may disturb the pacemaker switch off the mobile phone immediately.
-  Never drive a vehicle when holding the mobile phone in your hand. Bear in mind the relative national laws and traffic directives for use of mobile phones in road traffic.
-  The mobile phone is to be switched off when you are travelling by aeroplane.
-  The mobile phone is to be switched off near to service stations and other places with explosive goods.

GUARANTEE:

The 12 month guarantee period begins upon delivery of the device. For time of delivery please refer to the sales receipt with **IMEI-Number** (receipt, invoice). Store these details carefully. Our guarantees conform to the guarantee conditions in place at the time of purchase.

INTENDED USE:

This mobile phone is robust and intended for mobile use. However, it is to be protected from dampness (rain, bathroom,...) and impacts. Furthermore, do not place it in direct sunlight.

Another use other than that described would lead the damaging of this product, dangers such as electric shock and fire are associated with this. The whole product must not be altered, dismantled or have its casing opened. The power supply connector is only suitable for operation with a standard household mains socket from the common power supply with 230 Volts / 50 Hz (10/16A) alternating voltage.





DISPOSAL:

- Battery disposal: Rechargeable and ordinary batteries are not to be placed in household rubbish! As a consumer you are legally obliged to return used rechargeable and normal batteries. You can do this at your local authority's collection site or at a specialist shop.
- Disposal of your device: If your product can no longer be used do not throw it into the household rubbish. For environmental reasons, take it to a refuse collection or recycling point where old appliances are accepted and procured for environmentally compatible utilisation.
- Disposal of packaging: Packaging and packaging accessories are able to be recycled and shall be categorically procured for recycling.



6 FREQUENTLY ASKED QUESTIONS

- **A call failed:**
Check the number dialed and the area code again for your own verification.
Did you also dial the area code when making a local call?
- **The display on the mobile phone is empty (Screen switched off):**
The telephone is in economy mode and switches off the display (calls can be received), press  – the display switches back on again. Alternatively, the telephone is switched off () move the slider upwards to switch it on).
- **Telephoning abroad:**
If you are outside of the regional network of your network operator, your mobile phone automatically chooses another network. For use abroad, many phone cards have to be activated once only by the regional network operator before journeys outside of the country, please contact your network operator.
- **How often do batteries need recharging?**
Do not charge the battery after each phone call. This leads to a reduced battery capacity through long term rather than intelligent use of electronics. In order to keep the battery "fit", completely discharge it at least once per month. If the mobile phone is not used for longer than one month, the battery should be taken out of the telephone.



► **How long can you use it before having to recharge again?**

The operating time depends, amongst other things, on the distance to the transmitter (are you far away from the transmitter, does the mobile phone need substantially more energy to maintain contact), on the number of calls made and set volume. Charging batteries to a fully loaded state is sufficient enough under optimal conditions to enable a conversation length of up to 3 hours. On stand-by mode, a maximum 250 hours operating time can be achieved. If you are phoning for 2 hours, the stand-by time reduces to 80 hours.

► **What is stand-by mode?**

The mobile phone cover is closed. You can receive calls and look at the phone book in the display. With the key lock switched on, a large key symbol will be indicated instead. The telephone is in economy mode and the display is switched off.

► **Can the emergency call be dialled without reception or credits?**

- 1) You cannot make a call without a signal.
- 2) Limited Service appears so you have either no radio contact or no credits from your network operator. With Limited Service you can only call Emergency 112 but no other number.
- 3) 112 can also be called without credits.

► **How can reception be improved?**

Look for another place to stand: inside houses, go towards the window for example or continue the phone call after you have got out of a lift, underground car park or tunnel.

Reception with an open lid instead is better than a closed one.

► **How do I clean the mobile phone?**

The device is best cleaned by using a damp cloth. Avoid sprays and too much liquid because they may get through the openings on the inside of the device and cause damage. Under no circumstances use cleaners which contain scouring agents, alcohol, spirits or solvents (turpentine). These resources can attack and/or damage the plastic casing or their overprint.



► **Is it possible to withhold a call number?**

In case you do not want to display your own mobile phone number to your interlocutor, select "YES" from the large menu under settings / withhold call number.

► **A key symbol is displayed and the telephone does not react / the telephone is immediately cut off**

The key lock is switched on. Move the  slide on the left hand side of the mobile phone downwards to disable the lock. (See chapter 3.3).

► **What is the SMS Service Centre number?**

The central number of the network operator through which all short messages are developed. This number is usually already saved by the network operator on the SIM card and does not have to be entered or altered by you any further.

► **When do call charges occur?**

Charges only occur for phone calls if either one person or someone replying to a call reports picks up at the other end. Within the bounds of the SMS-Function, sending by SMS incurs a charge and not the writing or receiving of an SMS. No charges occur when using other functions of the mobile phone (alarm call, calculator,...).

► **Was my SMS message successfully sent?**

If your message is found in the Sent SMS menu item, then it has been sent successfully. You can also receive a read receipt – contact your network operator.



Emporia Original Accessories

- ▶ Table, travel charger, Motor vehicle charger cable
- ▶ Hands free equipment
- ▶ Leather cases
(in various colours and designs)
- ▶ Replacement rechargeable batteries



RL-V170EU



TL-V170



KLK-V170



AK-V170



PFSPO-V170



LTH-V100-DHS



LTH-V100-DVR



LTH-V100-R1



LTH-V100-V1

Emporia Telecom Produktions-
und Vertriebs-GmbH & CoKG

Industriezeile 36
4020 Linz, Austria

Phone +43.732.77 77 17-512

Fax +43.732.77 77 17-58

pressbutton@emporia.at
www.emporia.at

Subject to print errors, mistakes and technical changes.

PartNo.:54009; ENGLISH/English; V170IM_V1_ENG_G2_200805