



My Mobile Phone. My safety!

emporia**Life** - User Guide



SCOPE OF DELIVERY:



 
Mobile Phone



Recharging Cable



Rechargeable
Battery

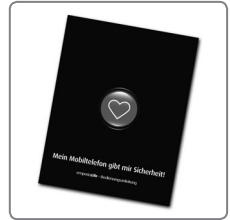

Instruction
Manual



emporia

DEAR MOBILE PHONE USERS!

- Congratulations on purchasing your emporia**Life** mobile phone!
To quickly familiarize yourself with your new mobile phone, this booklet provides you with the most essential information summarized in short. On the following pages of this user guide, you can choose just how much time you want to invest in getting to know the most important functions of your mobile phone.
- We hope you'll enjoy using your emporia**Life**!

EMPORIA Telecom


 




Table of Content

1 Start

1-1 Familiarizing Yourself with the Buttons	06
1-2 Inserting the SIM-Card	09
1-3 Inserting the Battery	10
1-4 Loading the Battery	11
1-5 Turning the Phone On and Off	11
1-6 Setting the Date and Time	12

2 Getting to Know Your Mobile Phone in 10 Minutes

2-1 Important to Know from the First Step	13
2-2 Accepting an Incoming Call .	13
2-3 Dialling with the Keypad	14
2-4 Last Number Redialling	14
2-5 Dialling Numbers from the Phone Book	14
2-6 Phone Book Remote Maintenance per SMS	15

3 Getting to Know Your Mobile Phone in 20 Minutes

3-1 Small Menu – Closed Cover .	16
3-1.1 Dialed Calls	16
3-1.2 Missed Calls	16
3-1.3 Received Calls	17
3-1.4 Received SMS	17
3-1.5 Battery and Reception Status ..	17
3-2 Alarm Clock	18
3-2.1 Setting the Alarm Clock	18
3-2.2 Turning Off the Alarm Clock and Snooze Function	18
3-2.3 Changing the Alarm Time	19
3-2.4 Deactivating the Alarm	19
3-3 Manual Keylock and Auto-Keylock	20
3-3.1 Manual Keylock	20
3-3.2 Automatic Keylock	20
3-4 My Menu	21
3-4.1 Activating My Menu	21
3-4.2 Activating and Setting Up the Individual Menu	21



4 Getting to Know Your Mobile Phone in 30 Minutes

4-1 SMS/Text Messages22

4-1.1 Writing an SMS22

4-1.2 Writing Text Messages23

4-1.3 Sending an SMS24

4-1.4 Receiving an SMS.....25

4-1.5 Answering a Received SMS25

4-1.6 Deleting of SMS.....25

4-1.7 Creating and Inserting Templates 26

4-2 Phone Book.....27

4-2.1 Saving Numbers in the Phone Book27

4-2.2 Changing Phone Book Entries ... 27

4-2.3 Searching for Phone Book Entries .28

4-2.4 Managing the Top 10.....29

4-3 Emergency Calls.....29

4-3.1 Programming Emergency Numbers..... 30

4-3.2 What is to be Done in the Case of Emergency? 31

4-3.3 What Happens after you Press the Emergency Button? 31

5 General Notes..... 33

6 Technical Product Description 37

7 Frequently Asked Questions..... 38



1 START

1-1 FAMILIARIZE YOURSELF WITH THE BUTTONS

→ **Loudspeaker**

→ **Arrow keys** ▲ ▼

For scrolling through the phone book and menu

→ **Withdrawal/OK button** 

For withdrawing and confirmation of menu points as per the display

→ **Hang up/Clear button** 

To hang up and carry out commands as per display (return, delete, etc.)

→ **Signal lights**

...red light blinks when the battery needs to be recharged

...green light goes on when there is contact between the battery recharger and mobile phone (charging)

...orange light blinks, when call is incoming

→ **Socket for battery recharger**

→ **Microphone**



emporia



→ **Lanyard**

For hanging the phone around the neck

→ **Loudspeaker**

→ **Emergency button**

→ **Volume regulator**

For changing the volume while phoning

→ **Battery compartment**

High performance Li-ion battery or one-way batteries (3 x AAA) for emergencies



① **Flashlight** 

Used to turn the flashlight on and off

② **On/Off button** 

Used to turn on and off the mobile phone (press down for 3 seconds)

③ **Alarm Clock button** 

Set the alarm clock or switch it off

④ **Keylock** 


Prevents inadvertent pressing of buttons (press for 3 seconds to activate/deactivate the keylock)





1-2 INSERTING THE SIM-CARD


To make calls with the phone, you'll require a SIM-card. This is how it is inserted:

- If the mobile phone is turned on: Hold down the  on the upper edge of the mobile phone for 3 seconds in order to deactivate the phone. The display screen is now blank.
- The mobile phone battery may not be recharged simultaneously. Thus, if necessary, remove the recharging cable from the lower side of the phone.
- Apply light pressure and push the battery cover located below the emergency button downwards. Turn the closed mobile phone onto the backside, hold it with both hands and then push the battery cover lightly with both thumbs downwards.
- Remove the battery if it is located in the phone device. Pull the battery up from the lower right-hand corner and remove the battery.





- The SIM-card holder is located to the right below the emergency button. Use your fingernail or a sharp object to pull up the SIM-card holder.
- Place the SIM-card in the SIM-card holder: the golden chip side should face downwards, the indented corner of the SIM-card is to be placed to the lower right.
- Place the SIM-card holder back into the slot.

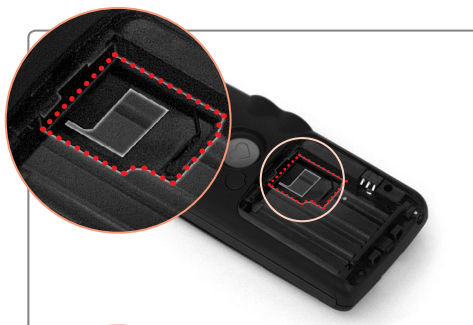

1-3 INSERTING THE BATTERY

- Remove the battery from the packing.
- Inserting the battery: the battery must be inserted such that the gold contacts of the mobile phone are placed together with the battery contacts.
- The battery cover must be placed back on the mobile phone by fitting the two hooks on the cover correspondingly into the device.








1-4 LOADING THE BATTERY

- Remove the recharging cable from the packaging.
- Stick the recharging cable in the socket on the lower end of the mobile phone and stick the power plug into a socket. When first charging up the phone, a complete charging must be conducted (app. 8 hours).
- During the charging phase, the mobile phone screen displays the battery symbol and „Charging“. At the same time, the signal light is green when there is contact between the recharging device and the mobile phone.
- As soon as the battery is completely charged, the display screen shows „Battery Full“. Now separate the recharging cable from both the mobile phone and the power plug.



Warning: AAA batteries cannot be charged in the mobile phone

1-5 TURNING THE PHONE ON AND OFF

- Hold down the  on the upper side of the phone for 3 seconds. With that, the phone turns on and off.
- When first using a new SIM-card, the 4 digit PIN code must be entered. The PIN code is provided in the documentation you received from your network provider.
- To enter the PIN code, push open the mobile phone and enter the PIN using the keypad. Confirm the PIN code with . (Possible entry errors when entering the numbers can be deleted with .)





Tip: To avoid problems caused by forgetting/losing your PIN code, we recommend that you deactivate the PIN code request as follows:

- When open, go to menu point **Settings** with ▼ and make the selection using **OK**. Find menu sub item **PIN Request** by pressing on ▼ several times and make the selection using **OK**. Then turn it **Off** by selecting **OK**. (If the option **Off** isn't already listed in the background, return to the selection menu by pressing ▲. At this point, a 4 digit PIN code is requested once again.
- Enter the PIN code via the keypad and confirm your entry with **OK**.
- Via **OK** or by clapping together the mobile phone back into the stand-by mode.

Note: A PIN code deactivation is not possible for some network providers.

1-6 SETTING THE DATE AND TIME


- Open the phone and go to menu point **Settings** and make the selection using **OK**.
- Use ▼ to call **Time & date** and make the selection using **OK**.
- Select **Set time** using **OK**.
- Via the keypad or ▲ ▼, set the hours in double-digits (for example, „09“ for 9 o'clock in the morning) and save with **OK**.
- Via the keypad or ▲ ▼, set the minutes in double-digits and save with **OK**. The display screen then shows „Time set!“








2 GETTING TO KNOW YOUR MOBILE PHONE IN 10 MINUTES

2-1 IMPORTANT TO KNOW FROM THE FIRST STEP

- Whenever you lose your way in the menu, simply close the sliding cover of the phone. After that, you see the stan4-by display in the screen!
- You can also get yourself out of troublesome situations by partially repeatedly pressing ...
- If the mobile phone is not used at all for two minutes, the display screen automatically turns off. The mobile phone is then in its energy-saving mode. By shortly pressing any button, the display becomes active again.




2-2 ACCEPTING AN INCOMING CALL

When your phone is being called, it rings and vibrates. The orange signal light blinks and on the display screen, the number and name (if stored in the phone book) of the caller are displayed.



- Accept a call with .
- To ensure that your phone partner can understand you perfectly (acoustically), open the slider during your conversation.
- Press  to end the conversation. If the person you're talking to hangs up before you do, you do not need to press .
- To defer a call, press  when the phone is ringing.



2-3 DIALLING WITH THE KEYPAD





- Open the mobile phone and dial the phone number via the keypad – ALWAYS dialling the area code first. Example: enter „02789789“ for the number 789789 with the area code 02/.
- Then have the call carried out by pressing .
- To ensure that your telephone partner can understand you perfectly (acoustically), open the slider during your conversation. End conversations with . If the person you're talking to hangs up before you do, you do not need to press .

2-4 LAST NUMBER REDIALLING

- Open the phone and press down  for 3 seconds.
- Press  to recall the last number dialled.

2-5 DIALLING NUMBERS FROM THE PHONE BOOK

When in the closed status, the phone book is displayed in the form of a list, that is, as an alphabetic list of stored phone numbers.

- Call stored phone book entries with .
- Call the number using . To ensure that your telephone partner can understand you perfectly (acoustically), open the slider during your conversation.
- End conversations with . If the person you're talking to hangs up before you do, you do not need to press .



2-6 PHONE BOOK REMOTE MAINTENANCE PER SMS

To make it easier for new numbers to be stored in your phone book, you can pass along this task to your friends and family.

- They simply need to send you an SMS (text message) to your mobile number in the following format:

#Name#Number# → Example: #Tommy#07785987654#

The number your contacts send must however include the area code and thus, the complete mobile number should begin with „0“. We recommend that you save all numbers in their international format including the country codes.

Example for a UK country code: #Tommy#+447785987654#

- The contact and number is then automatically stored in the phone book once the SMS is received.

Note: When your SMS storage capacity is full, no phone book entries can be received via an SMS. (see chapter 4-1.6)



3 GETTING TO KNOW YOUR MOBILE PHONE IN 20 MINUTES

3-1 SMALL MENU – CLOSED COVER

When closed, the alphabetically sequenced phone book entries are easy to read (if already saved). When you scroll to the top with the SMALL MENU appears. The following 5 menu points are displayed:

Dialled calls
Missed calls
Received calls
Received SMS
Battery and reception status

► 3-1.1 Dialled Calls

If the menu point is in the background, the last number dialled is displayed. The list of the last numbers dialled is called up with . All numbers or names (if stored in the phone book) are displayed with the date and time stamp of the call. Select the desired number with . The dialled number can be called with .

► 3-1.2 Missed Calls

If the menu point is in the background, the number of missed calls is displayed. A list of missed calls is displayed with . All numbers or names (if stored in the phone book) are displayed with the date and time stamp of the missed call. Select the desired number with . The dialled number can be called with .





► 3-1.3 Received Calls

If this menu point is in the background, the number or name (if stored in the phone book) of the last call accepted is shown in the display. The list of the accepted calls is displayed with the date and time stamp of the accepted call with . Select the desired number with . The dialled number can be called with .

► 3-1.4 Received SMS

If this menu point is in the background, the number of the newly received SMSes (= text messages) is displayed. The mail box for received SMSes is called up with . Every SMS is displayed with the number and name (if stored in the phone book) as well as the date and time stamp. If an SMS is marked with an „N“, it is a „New“ SMS and thus, has not yet been read. Select the desired SMS with . Press to read the SMS. Press to leave this submenu.

► 3-1.5 Battery and Reception Status

Percentage details in the display refer...








- ...on the left side to the displayed charging status of the battery; if the battery charging status falls below 25% and the signal light at the bottom of the mobile phone is blinking red, load the battery using the recharging cable. (see chapter 1-4)
- ...on the right side to the reception strength level. If this amounts to less than 25%, the transmission and with that, also the listening quality when calling with the phone are severely affected. Try to find a location to make a call where a better level of transmission is available.










3-2 ALARM CLOCK

You have two possibilities to reach the clock settings:

- On the top of the mobile phone you will find the quick access button .
- Or open the mobile phone, use  to scroll to **Settings** and confirm with . select **Alarm clock** using  make the confirm using .

▶ 3-2.1 Setting the Alarm Clock

- Activate the **Alarm clock** menu (see chapter 3-2).
- Via the keypad or  , set the hours in double-digits (for example, „07“ for 7 o'clock in the morning) and save with .
- Via the keypad or  , set the minutes in double-digits and save with . Now the set alarm is shown under the menu point "Alarm clock".
- Via  or by clapping together the mobile phone back into the stand-by mode. An alarm clock symbol now appears in the header.



The Alarm clock symbol on the display appears, if **Settings/ Show operator or time/ Operator off - time on** is selected.









► 3-2.2 Turning Off the Alarm & Snooze Function

When the alarm clock goes off, you hear an alarm melody which you can determine yourself (under **Settings/ Sound & alert/ Alarm melody**). You now have two possibilities:

- Press  to end the alarm. Should the alarm function not be fully deactivated (see chapter 3-2.4), the alarm clock will go off at the same time on the next day.
- In order to be awoken or reminded again 2 minutes later, press the snooze function while the alarm is ringing. This can be repeated as often as you like. Otherwise, turn off the alarm with .



► 3-2.3 Changing the Alarm Time

- Activate the **Alarm clock** menu (see chapter 3-2).
- Select **New Time** with  and use the keypad or   to separately set the hour and minutes and then save with .

Note: When the alarm clock function is deactivated, please follow the instructions under 3-2.1 for setting the alarm time.

► 3-2.4 Deactivating the Alarm Function

If the set alarm should not go off at the same time on the next day:



- Activate the **Alarm clock** menu (see chapter 3-2).
- Use  to scroll to **Off** and make the selection using .



3-3 MANUAL KEYLOCK AND AUTO-KEYLOCK

To ensure that no calls can be made in the standby mode while the activated phone is subjected to bumps and movement in pockets, bags, etc., the two following useful functions are available:







► 3-3.1 Manual Keylock

- To activate it, hold down the  button to the upper left of the phone 3 seconds long. A large key symbol displays the activated keylock.
- To deactivate the keylock before using the mobile phone again, simply open the phone a little bit or hold down the  button 3 seconds long.

► 3-3.2 Automatic Keylock

If you are often on the road with the mobile phone, we recommend that you use the automatic keylock as a permanent setting. When the phone is closed, the keylock activates itself automatically 15 seconds after non-usage of the mobile phone.

To activate the automatic keylock:

- Open the mobile phone, go to **Setting** with  and select with .
- Go to the **Keypad auto lock** with  and make the selection using .
- Select **On** with  to activate this function.
- A key symbol shows the activated keylock which can be deactivated at any time by opening the mobile phone or by holding down the  button for 3 seconds.

Note: Incoming calls can be accepted – or refused – as usual. Upon completion of a conversation, the keypad is then automatically locked again.



















3-4 MY MENU

My Menu is beneficial for a quick selection of the menu items that you most often use, such as „Alarm Clock“, „Ringer on/off“, „Calculator“, etc.:

▶ 3-4.1 Activating My Menu:

- When open, go to menu point **Settings** with  and make the selection using .
- Select **On** with  to activate this function.
- The menu items you dial most often are then quickly reached by pressing , both when open and closed.

▶ 3-4.2 Activating and Setting Up the Individual Menu:

- Enter **My Menu** with .
- Go to **Select options** with  and confirm this with .
- Go to your desired menu item with  and mark it with .
- Select the position number in the My Menu row with  and save with .
- Repeat the previous 3 steps for other menu items.
- Save the selection with  and confirm the request „Save change?“ with .
- Return to the standby mode with  or by clapping together the mobile phone.









4 GETTING TO KNOW YOUR MOBILE PHONE IN 30 MINUTES

4-1 SMS/TEXT MESSAGES

An SMS (Short Message Service) is a written short message which can be sent to all mobile phone users. Costs are only incurred when sending an SMS. Remark: Even some fixed network phones can receive an SMS.

► 4-1.1 Writing an SMS


- Open the mobile phone and select **SMS-Messages** with .
- Select **Write New SMS** with .
- Use the keypad to write your SMS. To delete individual characters, shortly press . With that, the character to the left of the horizontal line | is deleted. To delete the entire entered text, hold down  for three seconds.
- To move around the text, use  . You are then located in the text where ever the | symbol is located.

All selectable characters and functions are listed in the following table. Every key stands for several characters or functions depending on how often the respective key is held in the ABC mode (see the explanations after the table).

1	→ . , ! ? , , @ : 1
2	→ a b c 2 ä å æ ç
3	→ d e f 3 é è ê ë
4	→ g h i 4 î ï
5	→ j k l 5
6	→ m n o 6 ñ ô ö ø

7	→ p q r s 7
8	→ t u v 8 û ü
9	→ w x y z 9 ÿ ŷ
0	→ Blank; 0

*	→ . , ? ! ' " : ; () @ - + \$ € £ ¥ # % * & ~ = □
< > { } [] \ ` ^ / \$ Ω Δ Φ Γ Σ Λ Π Ψ Θ Ξ	

 → Change between lower and upper case letters as well as digit keys („Abc“ „ABC“ „abc“ „123“)





Examples for function keys:

- | | |
|--------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| <p>5 → press 1x = j
 → press 2x = k
 → press 3x = l
 → press 4x = 5</p> | <p>0 → press 1x = Blank
 → press 2x = 0</p> |
|--------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|

4-1.2 Writing Text Messages












- To insert blank spaces (the space between characters), press **0** 1x.
- Insert punctuation marks (, ! ?) by pressing **1** repeatedly.
- Additional characters: enter the selection area for additional characters by pressing *****. By repeatedly pressing ***** and/or **▼**, move from left to right. Using button **2**, you can jump to the top of the table, with **4** to the left, with **6** to the right and with **8** to the bottom. If you have reached the desired additional character, press **Ok** to insert that character into your text.
- You can switch between upper case (ABC) and lower case letters with upper case letters at the beginning of the sentence (Abc), or you can write only in lower case letters (abc) and completely in numerals (123). The respective mode is evident in the second display line next to the symbol.
- A pure number entry can also be made with the following commands during the text entry: **Ok** for continue, go to **Insert number** with **▼** and confirm with **Ok**. After the numeral entry, numbers are inserted into the SMS with **Ok**.
- Entries from the phone book (name and telephone number) are inserted into the SMS text as follows: **Ok** for continue, go to **Insert name** with **▼** and confirm with **Ok**. Using the keypad or **▲▼**, select names from the phone book and insert them into the SMS with **Ok**.



- In the upper right hand corner of the display, you can see how much space is still left in the SMS. Example: **1/135** means that there are still 135 characters space remaining in this first SMS. If more than 160 characters have already been written, the text is sent in two SMSes and in the upper right hand corner, you see **2/...**

► 4-1.3 Sending an SMS

You have the possibility to send your text in three connected SMSes with up to 450 characters.

- To send the completed text, go to option **Send** with .
- Select **Send** with .
- Depending on whether the telephone number of the recipient is already listed in your phone book, you can go about sending your message in a number of ways as follows:
 - The number is already in the phone book: select the Phone book with 2x : Go to the name with  or enter the first letter of the name with the keypad. As soon as the desired number is in the background, confirm with . One last click on  sends your SMS.
 - The telephone number was recently used and is well known: confirm **Search** with , go to **Unsaved number** with  and confirm with . With the list of telephone numbers now displayed (dialed and received phone calls as well as missed calls), the fitting number should be selected and confirmed with .
 - Enter new telephone numbers via the keypad and send the SMS with .





► 4-1.4 Receiving an SMS

- A short tone signal informs you that an SMS has been received. The display screen then shows: „New SMS“.
- To read the SMS, select **[OK]**. Now you can read the short message. For long texts, continue to scroll downwards in the text field.

► 4-1.5 Answering a Received SMS

- While the received SMS is still being displayed, press **[▲]** 3x. Confirm the selection **Reply** with **[OK]**. With **[▼]**, either go to the pre-fabricated short answer (for example, „Yes/No“, „Everything OK“), to the **Template**, to a repeat of the **Original Text** into your answer or simply to an **Empty Screen** and make the selection using **[OK]**. Write your own text with the keypad.
- Send the answer to the SMS sender by pressing **[OK]** 2x.

► 4-1.6 Deleting of SMS

Since a full SMS storage area blocks you from receiving further SMSes, this storage area needs to be deleted every once and a while.






- Open the phone and select **SMS-Messages** with **[OK]**.
- Go to **Delete SMS** with **[▼]** and make the selection using **[OK]**. Now, either you delete the entire SMS storage area with **All SMS** or specifically, for example, only go to **Received SMS** and select with **[OK]**. Confirm the repeated deletion inquiry „Delete all received SMS?“ with **[OK]**.














► 4-1.7 Creating and Inserting Templates

Templates are often used messages such as „Call me“ or “Coming later“ or „I’m in a meeting“. SMSes already created or those selected from the already accepted template list help you to save time when writing SMSes. Existing templates can also be changed before shipment (*see below*).

Creating new templates:

- In the open mode, select **SMS-Messages** with .
- Select **Templates** with  and confirm with .
- Select **New Template** with .
- Write your own text with the keypad.
- Save it as a template with .

Changing already existing templates:

- In the open mode, select **SMS-Messages** with .
- Select **Templates** with  and confirm with .
- Go to the template to be changed with  and make the selection using .
- For editing a template, go to **Edit/Send Template** and confirm with .
- Text editing is conducted via the keypad and if necessary, the deletion button .
- Go to the submenu with .
- Either **Send** the changed template with .
- or select **Save as template** with  if the newly created text should serve as a new template in the future and save with .





4-2 PHONE BOOK

The phone book makes saving, changing and searching for up to 200 names and numbers possible. *(Detailed information on the usage of emergency numbers is provided in chapter 4-3.)*





➤ 4-2.1 Saving Phone Numbers in the Phone Book

- ➔ When open, go to menu point **Phone book** with and make the selection using .
- ➔ Go to **Add contact** with and make the selection using .
- ➔ Enter the name using the keypad and save with .
- ➔ Use the keypad to enter the phone number WITH the area and dialling code.
Example: „07785987654“
Recommendation: it's best to always write the international country code as well.
Example: „+447785987654“ (Note: you can get the „+“ by pressing 2x.)
- ➔ Save the phone book entry with .

➤ 4-2.2 Changing Phone Book Entries

- ➔ When open, go to menu point **Phone book** with and make the selection using .
- ➔ Go to **Edit contact** with and make the selection using .
- ➔ Go to the phone book entry with or the keypad and select .
- ➔ If necessary, correct the name using the keypad or press to delete characters.
- ➔ Continue with .





- Correct the phone numbers with the keypad or press  to delete. Use   to move within the number to be corrected.
- Save the corrected phone book entry with .

► 4-2.3 Searching for Phone Book Entries






If you need a telephone number from the phone book with the intention of calling the number, you can search for the number in the phone book, whether closed or open:

Searching in the closed status/"Small Menu"

Conducting a search in the small menu is recommended when the phone book entry is located at the beginning of the alphabetical sequence list or if your phone book (still) doesn't have many entries in it.

- Go to the desired phone book entry with  and
- then call that entry with .

Searching in the open status

- When open, go to menu point **Phone book** with  and make the selection using .
- Go to **Search** with  and make the selection using .
- Search for the phone book entry by entering one or more initial letters via the keypad.
- Call the number you searched for with .





➤ 4-2.4 Managing the Top 10

In order to be able to dial the most common or most important numbers quickly in the closed status, use the „Top 10“ setting. This lists your top 10 numbers at the beginning of the phone book so that these can be quickly reached in the closed status.

- ➔ Slide open the cover, go to menu point **Phone book** with and make the selection using .
- ➔ Go to **Manage Top10** with and make the selection using .
- ➔ Select the **Add Top10** with and **Add TopNo.1** with .
- ➔ Go to the desired phone book entry with or using the keypad and confirm your selection with . An overview of the already saved top 10 numbers is then displayed shortly thereafter.
- ➔ For additional important numbers, repeat these steps accordingly.

4-3 EMERGENCY CALLS

The emergency call function is a simple function which can save a life in a decisive moment. You can save a total of 5 emergency numbers (relatives, neighbours, friends, rescue, etc.). In the case of emergency, these numbers are automatically dialled in the sequence you selected previously by pressing the emergency button on the back side of the mobile phone.

Tip: Inform the contacts you select that they could be called by you in a time of emergency and provide them with the following information: The person you call in the time of emergency should press „0“ in the first minute of the conversation. That'll prevent the conversation from being interrupted after a minute and the remaining emergency call numbers from being automatically dialled.

This also means that when the person receiving the call presses „0“, the dialling of



the other emergency numbers by your phone is then automatically interrupted. If the phones of those whose numbers you selected as part of your emergency call list have an SMS function (always the case for mobile numbers), these contacts receive an emergency SMS before the call. This emergency SMS announcement informs your contact that they are going to be called and that they need to press „0“ during the conversation.


► 4-3.1 Programming Emergency Numbers

- Determine a list of a maximum of five emergency numbers and their sequence. These numbers must be stored already in the phone book. (see chapter 4-2)
- When open, go to menu point **Phone book** with ▼ and make the selection using **OK**.
- Go to **Save EmergencyNo** with ▼ and make the selection using **OK**.
- Again confirm **Save EmergencyNo** with **OK**.
- **Confirm Save EmNo.1** with **OK**.
- Go to the desired phone book entry with ▲ ▼ and make the selection using **OK**.
- The inquiry as to whether an emergency SMS (see the tip at the beginning of chapter 4-3) should be sent in the case of emergency can be answered with **YES** (if the mobile number or phone has an SMS function for emergency contacts) or **NO** by pressing **OK**.
- Repeat the last three points accordingly for a maximum of four additional emergency call numbers.





► 4-3.2 What is to be Done in the Case of Emergency?



- Either hold down the emergency button on the back side of the mobile phone for 3 seconds or 3x within 3 seconds. (The emergency button even functions when the keylock is activated.)
- If you want to stop the emergency call or recall it, you need to press down  3 seconds long.

► 4-3.3 What Happens after you Press the Emergency Button?

- By pressing the emergency button, the emergency call numbers you stored beforehand will be called in the sequence in which you stored them. The emergency button even functions when the keylock is activated. At the same time, the called persons are informed via the emission of an emergency call SMS that an emergency call is coming and that the button "0" should be pressed during the first conversational minute.
- An alarm sound rings that you know that the emergency function is active and so that you don't use it by mistake.
- As soon as the first person receives your emergency call, this called person must press the button „0“ during the first minute of conversation. With that, the emergency call cycle is stopped. That means that the remaining emergency call numbers are no longer called and the running emergency call conversation remains intact until the conversation is ended by one of the dialog partners.
- If you are called within an hour after having activated the emergency call function, the phone automatically picks up the call without pressing a button.



► **Please make note:**

- To stop the emergency call or recall it, hold down  3 seconds long.
- The pressing of  with the emergency call recipient guarantees that your emergency call does not end up going unheard on an answering machine.
- For the case that you suppress your calling number, this function is automatically deactivated for the emergency call.
- For mobile phones based on credit: Always ensure that you have enough credit on your mobile phone because private numbers cannot be dialled without a sufficient amount of credit on your phone.
- If the phone has no reception during the emergency, then the international emergency number 112 is automatically dialled.






Warning: *If you want to save emergency numbers such as those for rescue, the police, the fire department, etc. as an emergency number, you must clarify this in advance with the respective institution. We assume no liability for possibly incurred costs should you call an unintentional number by mistake.*

Tip: If you are on the road and you don't have the possibility to load your rechargeable battery, you can also use normal batteries (3 x AAA 1.5 V). However, DO NOT attempt to reload these batteries in the mobile phone!



5 GENERAL NOTES

SAFETY ADVICE:

-  Mobile phones are to be turned off in hospitals and in the proximity of medical devices.
-  There should be a minimum distance of 20 cm between a cardiac pacemaker and an activated phone. The mobile phone must never be carried in the chest pocket. When using the mobile phone, hold the phone to the ear the furthest away from the cardiac pacemaker. If you feel like the cardiac pacemaker has been interfered with or disturbed, immediately end your use of the mobile phone.
-  Never drive a car while simultaneously holding the mobile phone in your hand. Inform yourself about possible national laws and traffic regulations for when using mobile phones in road traffic.
-  The mobile phone is to be turned off when you are located in an aircraft.
-  The mobile phone is to be deactivated when you are at or are close to gas stations and other locations where explosives are kept.



MAINTENANCE TIPS:

- Use a damp cloth to clean the device. Avoid the use of sprays and too many fluids because these can enter the device through openings on the keypad and could cause damages. Do NOT use any purifiers that contain scouring agents, alcohol, spiritus or solvents (turpentine). These agents can attack the synthetic encasement and damage the imprint.
- The SIM card should be handled carefully, like a credit card: do not bend it, scratch it or subject it to static electricity.
- If the mobile phone is not used for more than a month, the rechargeable battery must be removed from the phone.

INTENDED USAGE:


This mobile phone is to be used for mobile employment. However, contact to dampness, for example, in rain or in the bathroom, etc., must be avoided. The mobile phone is to be protected from moisture and collisions.

Do not subject the phone to direct solar radiation. A usage other than that described beforehand leads to the damage of the product. In addition, another usage could lead to dangers such as, for example, electrocution, fire, etc. It is illegal to change or rebuild any of the product parts and the encasement may not be opened. The socket network adaptor is only suitable for operation with a normal household network plug of the public electricity network with 230 Volt/ 50 Hz (10/ 16A) alternating voltage. When using the device with AAA batteries, the phone turns off when it falls or is dropped onto a hard surface.





DISPOSAL:

- Disposal of batteries: Batteries should be placed in your normal household garbage! As a consumer, you are legally required to turn in used rechargeable and normal batteries. You can turn these in at the local collection station in your community or at a specialized dealer. 
- Disposal of your device: When this product has served its time, please do not throw it away in your household garbage. For the sake of the environment, bring it to a materials and recycling centre where old devices are accepted and an environmentally sound utilization can be made of it.
- Disposal of the packaging: Packaging and packing materials can be recycled and should fundamentally be submitted for recycling.

GUARANTEE:

The time span of the guarantee begins with the delivery and lasts for a period of 12 months. The point in time of the delivery is determined to be the date on the purchasing receipt or bill (including **IMEI**-number). Please maintain these documents carefully. Our guarantee service is set in accordance with the valid guarantee conditions at the point in time of the purchase.



DECLARATION OF CONFORMITY

We: Emporia Telecom Produktions- und Vertriebs-GmbH & Co. KG.
Declare under our sole responsibility that the following product:

Kind of Product: Dual Band Mobile Phone
Type Designation: V100

is (are) in conformity with the following relevant harmonised standards:

Safety : EN 90950 :2001 First Edition
Health : 50360:2001
 50361:2001
EMC : EN 301 489-1 V1.4.1
 EN 301 489-7 V1.2.1
Radio Spectrum : EN 301 511 V9.0.2

Following the provisions of Council Directive R&TTE 1999/5/EC on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

The product is marked with the CE marking and Notified Body number

CE 0682

Signed:
DI Albert Fellner
General Manager

Date of Issue: 08 May 2006
Place of Issue: Linz/Austria



6 TECHNICAL PRODUCT DESCRIPTION

TECHNICAL PROFILE:

- Hearing aid compatible loudspeaker
- Dualband GSM 900/1800 or GSM 850/1900
- Dimensions: 112 x 55 x 26 mm
- Weight: 152g
- Battery: Li-Ion 3,7V/1000mAh
- Supports also rechargeable batteries (3 x AAA 4,5V)
- Standby Time: up to 150 hrs
- Talktime: up to 180 min
- Internal Antenna
- Display: 2.7" FSTN 128 x 160 pixel Mono

EMERGENCY FUNCTION:

- Up to 5 emergency numbers
- Call emergency numbers with one keypress
- Sending emergency-SMS to emergency numbers
- DTMF Dedection for confirming
- Built in flashlight

SMALL MENU (CLOSED SLIDE):

- Small menu contains: phone book, received SMS, received calls, missed calls, dialled calls, "My Menu", Battery- and Signal-level for main operation
- Phone book in standby – ideal mode

ADDITIONAL FEATURES:

- 200 phone book memory
- Send SMS
- Send SMS to many
- SMS storage on SIM-Card up to 50 SMS
- Cell Broadcast
- Polyphonic ringer melodies
- 5 different ringer volumes
- Extra strong vibrator
- Adjustable earpiece volume (super volume)
- Orange backlight (ideal for the partially sighted)
- Automatic keylock
- Simple calculator
- 3 colour visual alert (Amber/Green/Red)
- Alarm clock with snooze function
- Birthday reminder
- Detailed help texts for the menupoints
- Settings can be saved via "Backup-SMS"
- Phone book remote maintenance per SMS
- Incoming call: Orange LED is flashing
- Keypad tone on/off



7 FREQUENTLY ASKED QUESTIONS

→ Call fails to go through:

Check the selected Phone numbers to ensure they are correct. It may be the case that the call number of the person you are trying to reach has been changed.

→ The mobile phone display is empty:

Is the mobile phone actually on? (🔋) The rechargeable battery is possibly completely empty and must be loaded (*see chapter 1-4*).

→ Phoning outside of your own country:

If you are located outside the home network of your network provider, your mobile phone automatically dials another GSM network. For information on additional costs incurred when using the phone outside your own national borders, please contact your network provider.

→ How often should the rechargeable battery be recharged?

Do not recharge the rechargeable battery after every phone conversation. Over the course of time, this leads to a reduced battery capacity, despite intelligent loading electronics. To keep the battery „fit“, have it completely drained at least once a month.

→ Time of operation until the next battery recharge?

The time of operation is also dependant upon the number of calls made and the volume level set during those calls. The battery recharging is sufficient in a fully recharged status for a conversation of up to 3 hours. In the stan4-by mode, you can count on a time of operation of up to 150 hours.

→ What is the stan4-by mode?

The cover of the mobile phone is closed and the small menu with the phone book can be seen in the display. - When the keylock is active, a large key symbol is displayed instead (*see chapter 3-3*).



emporia



→ **Can an emergency call be made without reception or credit?**

Without reception you cannot make a call. With „Limited Service“ you either have no credit on your phone or no reception with your operator, but with another operator. You only can call 112, not individual emergency numbers stored in your phone.

→ **How can you improve the reception?**

Search for another location: when indoors, head towards a window or continue with the conversation after you have exited an elevator, underground garage or a tunnel.


→ **How do I clean the mobile phone?**

Notes on cleaning your mobile phone are listed under chapter E in „Maintenance Tips“.

→ **Can the call number be suppressed?**

If you do not want the person you're calling to be able to see your telephone number, deactivate the automatic display in the large menu under Settings/ Withhold number.

→ **The key symbol is displayed and the phone does not respond:**

Automatic keylock can be released by opening the cover or pressing the  button for 3 seconds (see chapter 3-3).

→ **What is the SMS service centre number?**

That is the number of your network provider through which the SMSes can be sent and received.

→ **When do call charges start to be counted?**

Call charges are first incurred for conversations when either a person or an answering machine is registered on the call reception side. As part of the SMS function, only the sending of an SMS accrues costs. There is no charge for writing or receiving an SMS. When using the other functions of the mobile phone, no charges are incurred.



All printing errors, falsities and technical changes are reserved.

Emporia Telecom Produktions-
und Vertriebs- GmbH & CoKG

Industriezeile 36
4020 Linz, Austria

fon +43-732-77 77 17-512
fax +43-732-77 77 17-58

pressbutton@emporia.at
www.emporia.at

ENG-V2_G2_062007