
Copyright © Huawei Technologies Co., Ltd. 2011. All rights reserved.

Trademarks and Permissions



HUAWEI, HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Contents

 
1 Getting to Know Your Phone	1
Your Phone	1
Keys and Functions	2
Screen Icons	5
2 Getting Started	6
Installing SIM Cards and the Battery	6
Removing the Battery and SIM Cards	6
Installing a microSD Card	7
Charging the Battery	7
Working with the Main Menu	8
Accessing a Shortcut Menu	8
Phone Lock	8
Udisk	9
PIN and PUK	10
Locking the Keypad	10
Entertainment	11
3 Voice Services	12
Making a Call	12
Answering a Call	12
4 Text Input	13
Changing the Text Input Mode	13
Multi-Tap Input Mode	14
Predictive Input Mode	14
Number Input Mode	14

Entering Symbols	14
5 Contacts.....	15
Creating a Contact	15
Searching for a Contact.....	15
Sending Messages to a Contact.....	15
Calling a Contact	15
Sending vCard	16
Deleting and Marking Contacts	16
Copying Contacts	16
More Contacts Operations.....	17
6 Message.....	17
Writing and Sending a Text Message.....	17
Writing and Sending a Multimedia Message	18
7 Settings	19
Security Settings	19
Connection Management.....	20
8 Chat Functions.....	21
9 FM Radio.....	21
10 TV.....	22
11 Image Browser.....	22
12 Camera.....	23
13 Internet	24
14 Tools	24
Calendar	24
World Clock.....	25
Timer	25
Unit Converter	25

Currency Converter	25
Health	26
15 File List	27
16 STK	28
17 Ebook.....	28
18 Multimedia	30
Recorder	30
Video Recorder	31
19 Java Application	31
Installing a Java Application	32
Running a Java Application	32
Removing a Java Application	32
Downloading a Java Application.....	33
20 Bluetooth.....	34
Connecting a Bluetooth Headset to Your Phone	34
Transferring Data	35
21 Video Player.....	35
22 Audio Player.....	36
23 Games.....	37
24 Warnings and Precautions.....	37

1 Getting to Know Your Phone

Your Phone

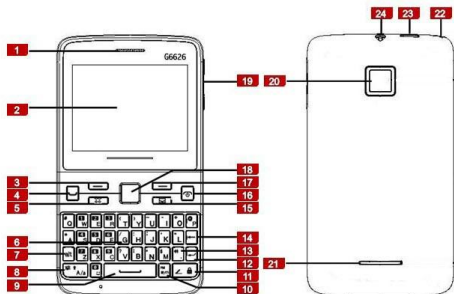




 



- | | | | |
|----|------------------|----|-----------------------------|
| 1 | Earpiece | 13 | Silent mode key |
| 2 | Screen | 14 | Delete key |
| 3 | Left soft key | 15 | Message key |
| 4 | Call/Answer key | 16 | End/Power key |
| 5 | Menu key | 17 | Right soft key |
| 6 | Keypad | 18 | Navigation keys and OK key |
| 7 | alt key | 19 | Volume keys |
| 8 | A/a key | 20 | Camera |
| 9 | Space key | 21 | Speaker |
| 10 | sym key | 22 | Antenna |
| 11 | Input switch key | 23 | Charger jack/Micro USB port |




The figure above shows the appearance of your phone and is provided only for your reference.
















Keys and Functions

Press ...	To ...
	<ul style="list-style-type: none"> • Make a call from the SIM1 or SIM2 card in standby mode. • Answer a call. • View dialed calls of SIM1 and SIM2 cards in standby mode.
	<ul style="list-style-type: none"> • Power on or power off the phone (by pressing and holding the key for about 3s). • End or reject a call. • Return to standby mode. • Turn off audio player or FM radio in standby mode playing in the background.
 (Left soft key)	<ul style="list-style-type: none"> • Access the main menu in standby mode. • Select a highlighted item.
 (Right soft key)	<ul style="list-style-type: none"> • Access Contacts in standby mode. • Return to the previous menu.
	Access the main menu in standby mode.
	Access Write message in standby mode.
	<ul style="list-style-type: none"> • Confirm a selection. • Stroke the key to scroll to the desired icon in main menu.

Press ...	To ...
	<ul style="list-style-type: none"> • Enter numbers, letters, and symbols. • Call voicemail in standby mode (by pressing and holding the 1 key for about 3s).
	<p>Enter a space in text editing mode.</p>
	<ul style="list-style-type: none"> • Lock the keypad in standby mode (by pressing and holding the key for about 3s). • Switch between input methods in text editing mode.
	<ul style="list-style-type: none"> • Activate or deactivate the Meeting profile in standby mode (by pressing and holding the key for about 3s). • Press this key to shift between upper and lower case in text editing mode.
	<ul style="list-style-type: none"> • Access the FM radio in standby mode (by pressing and holding the key for about 3s). • Display the Symbol list in text editing mode.
	<ul style="list-style-type: none"> • Activate or deactivate the Silent profile in standby mode (by pressing and holding the key for about 3s). • Enter a period in text editing mode.
	<ul style="list-style-type: none"> • Press this key once and then press other keys to enter numbers or symbols printed on the top of the keys. • Press this key twice to lock the status and thus can continually enter numbers or symbols printed on the top of the keys.

Press ...	To ...
	Adjust volume.

 
Screen Icons

Icon	Indicates ...
	Signal strength.
	New text messages.
	New multimedia messages.
	Call forwarding enabled.
	Missed calls.
	New voicemail messages.
	Alarms enabled.
	Battery power level.
	Silent profile activated.
	Indoor profile activated.
	Meeting profile activated.
	Outdoor profile activated.
	Headset connected to the phone.
	Bluetooth activated (show or hide).
	microSD card inserted.

2 Getting Started

 
Installing SIM Cards and the Battery

You can install two Subscriber Identification Module (SIM) cards in the phone at the same time. When inserting a SIM card, ensure that the SIM card's golden contacts are facing down and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot.

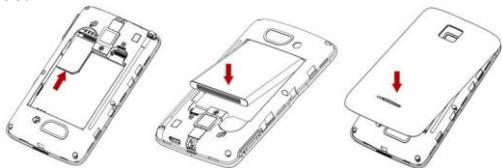


Removing the Battery and SIM Cards

Before removing the battery and SIM cards, ensure that your phone is powered off.

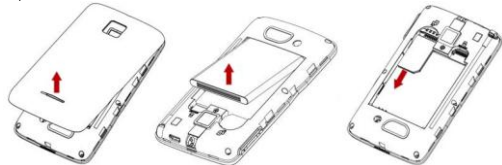

Installing a microSD Card

 Before installing or removing a microSD card, power off the phone.

You can install a microSD card to expand the memory capacity of your phone. When inserting the microSD card, ensure that the microSD card's golden contacts are facing down. After installation, power on the phone and check whether the microSD card is installed properly.













Charging the Battery

1. Connect the smaller end of the USB cable to the charger jack of the phone and the larger end to the charger.





2. Connect the charger to a power socket.
3. Wait until the battery is fully charged.
While the phone is charging, the charging icon is animated.
When the charging icon animation stops, the battery is fully charged.
4. Disconnect the charger from the power socket and then from the phone.

Working with the Main Menu

1. In standby mode, press  or ₁ (**Menu**) to access the main menu.
2. Stroke  to scroll to the desired submenu, and then press 
or ₁ (**OK**) to access the submenu.
3. Stroke  to scroll to an option, and then press  or ₁ (**OK**) to select the option.
4. Press ₂ (**Back**) to return to the previous menu.
To return to the standby mode, press .

Accessing a Shortcut Menu



1. In standby mode, stroke  to scroll to the desired shortcut menu.
2. Press  to access the menu.

Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock is disabled. Once the phone lock is enabled, you are required to enter the phone code each time you power on the phone.

To enable the phone lock, do the following:



1. Select **Menu > Settings > Security settings > Power-on password**.



2. Enter the phone code, and then press  or  (OK).

You can change the default phone code (**1234**) to any numeric string of four to eight digits.

To change the phone code, do the following:

1. Select **Menu > Settings > Security settings > Power-on password > Modify**.

2. Enter the current phone code, and then press  or  (OK).

3. Enter the new phone code, and then press  or  (OK).

4. Confirm the new phone code by re-entering it.

If you forget the phone code, contact your service provider.

Udisk

When the phone is connected to a personal computer (PC) using a USB cable, options, including **Udisk**, are displayed on the phone screen.

After you select **Udisk**, you can manage the files stored on the micro SD card (if available) or in the phone memory.

The micro SD card and the phone memory are displayed as removable storages on the PC. You can perform the following operations:

- Double-click storage to open it.
- Copy, paste, or delete files on a storage.
- Disconnect the phone from the PC.



- Ensure that you connect and disconnect the USB cable properly.
- Do not use the PC to format the phone memory. Doing so may permanently damage the phone memory and result in the loss of personal data.

PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. If you enter your PIN incorrectly a number of times consecutively, the phone asks you to enter the PIN unblocking key (PUK).

The PUK unlocks a blocked PIN. If you enter the PUK incorrectly a number of times consecutively, your SIM card becomes permanently invalid. In this case, contact your service provider for a new SIM card.

Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

SIM1 and SIM2 PINs are configured separately.



To enable the PIN lock, do the following:

1. Select **Menu > Settings > Security settings > PIN > SIM selection > On**.
2. Enter the PIN, and then press  or  (OK).




Locking the Keypad

To lock the keypad, press and hold  in standby mode for 3s. To unlock the keypad, press  (Unlock) and then .

If the automatic keypad lock function is enabled and if the phone is in standby mode for a preset period, the phone locks the keypad automatically.

To enable the automatic keypad lock function, select **Menu > Settings > Security settings > Auto keypad lock**, scroll to a period, and then press  or  (OK) to select the period.










When the keypad is locked, you can press , , or  to answer a call or make an emergency call.

Entertainment

- **Facebook** and **Twitter**: social networking.
- **FM radio**: to listen to radio programs.
- **TV**: to watch TV programs.
- **Image browser**: to view pictures stored in the phone memory or on the microSD card.
- **Camera**: to take pictures.
- **Ebook**: to read ebooks stored in the phone memory or on the microSD card.
- **Recorder**: to record audio clips.
- **Video recorder**: to record video clips.
- **Java application**: to run Java applications.
- **Video player**: to play video clips stored in the phone memory or on the microSD card.
- **Audio player**: to play audio clips stored in the phone memory or on the microSD card.
- **Games**: to play games.










3 Voice Services



Making a Call

1. In standby mode, enter the phone number.
 - To make an international call, press  to enter the plus sign (+), and then enter the country or region code, area code, and phone number in sequence.
 - To call an extension, enter the phone number, press  to enter P, and then enter the extension number.
 2. Press  to select SIM1 or SIM2 and dial the number.
 3. Press  to end the call.
-  • You can also make calls from the call logs, contacts, or messages.
- During a call, you can stroke  or press  to adjust the volume.

Answering a Call

 
When there is an incoming call, do the following:

- Press , , or  to answer the call.
- Press  (Silent) to mute the speaker, and then press  (Reject) to reject the call.
- Press  (Silent) to mute the speaker, and press , , or  to answer the call.

If the any-key answer function is enabled, you can press any key except  and  to answer a call.





 
4 Text Input

Changing the Text Input Mode

The current text input mode indicator is displayed in the upper left corner of the screen. You can press  to change the text input mode.

Indicator	Text Input Mode
Abc/abc/ABC	Multi-tap input mode
S En/S en/S EN	Predictive input mode
123	Number input mode






- You can press  once to delete the last entered character, or press and hold  for 3s to clear all the entered characters at once.
- In any text input mode, press  to enter a space.
- In any text input mode, press  to start a new paragraph.
- When the input language is English, press  to shift capital letters and lowercase.

Multi-Tap Input Mode

In multi-tap text input mode, you can press a key labeled with the desired letter once to enter the letter on the key.

Predictive Input Mode


In predictive input mode, do the following to enter a word:

1. Press each key once according to the spelling sequence of the desired word.
The phone displays candidate words.
2. Stroke  to scroll left or right, or to turn pages.
3. Press  or  to select the desired word.





Number Input Mode

In number input mode, press the number key labeled with the desired digit.

Entering Symbols


You can use  to enter symbols in any text input mode.

To enter a symbol using , do the following:




1. Press  to display the symbol list.
2. Stroke  to scroll left or right, or scroll up or down.
3. Press  or  to select the symbol.

5 Contacts




Creating a Contact

1. Select **Menu > Contacts > Options > New**.
2. Select **Phone, SIM1, or SIM2** as the storage location for saving the contact.
3. Enter the contact information.
4. Press  (Save) to store the contact.

Searching for a Contact

1. Select **Menu > Contacts > Options > Search**.
2. Enter the first letter of the contact name and press  (OK) or .
3. Stroke  to scroll to the desired contact.


Sending Messages to a Contact

1. Select **Menu > Contacts > Options > Write message**.
2. Select **Write SMS or Write MMS**.
3. After completing a text message, press  and select SIM1 or SIM2 to send, or press  (Options) to select **Send** to send the message.
4. After completing a multimedia message, press  (Options) to select **Send**, and choose SIM1 or SIM2 to send the message.





Calling a Contact

1. Select **Menu > Contacts > Options > Call**.
2. Select SIM1 or SIM2 to call the contact.

Sending vCard

1. Select **Menu > Contacts > Options** and stroke  to select **Send vCard**.
2. Select **SMS** or **Bluetooth**.
3. Enter **Recipients** and select SIM1 or SIM2 to send the vCard.
4. If sending via Bluetooth, activate Bluetooth to search for the wireless devices.



Deleting and Marking Contacts

1. Select **Menu > Contacts > Options** and stroke  to select **Delete**.
2. Press  or  to confirm the deletion of the desired contact.
3. Select **Menu > Contacts > Options** and stroke  to select **Mark**.
4. Mark one or more contacts to subsequently perform further operations such as delete and copy.





Copying Contacts

You can copy contacts to the phone, SIM1, SIM2, Udisk, or microSD card.

Copying One Contact

1. Select **Menu > Contacts**.
2. Stroke  to scroll to the desired contact.
3. Press  (Options), and then select **Copy**.
4. Select **To SIM1**, **To SIM2**, **To phone**, **Copy to Udisk**, or **Copy to MemoryCard** to copy the contact to a desired location.

Copying All Contacts

1. Select **Menu > Contacts**.
2. Press  (Options), and then select **Copy all**.
3. Stroke  to select an operation such as **SIM1 to MemoryCard**, **SIM2 to MemoryCard** or **MemoryCard to phone**.
4. Press  or  (OK) to copy contacts to the desired location.


More Contacts Operations

 


Select **Menu > Contacts > Options** and stroke  to select **Others**.

- Select **Speed dial settings** to set number keys 2-9 as speed dial keys.
- Select **Caller ID** to set your own phone number. Each SIM card can save two numbers.
- Select **Memory status** to check the status of SIM1, SIM2, and phone memories.
- Select **Single/Double line display** to set the style in which contacts are displayed as either single line or double lines.


6 Message

Writing and Sending a Text Message

1. Select **Menu > Message > Write message > New SMS**.
2. Write the message.
3. Press  (**Send**) to add recipients and select SIM1 or SIM2 to send message

-
4. Press  (Options), and then select **Send**.
 5. Enter **Recipients**; or select **Contacts** and add a recipient from the contacts.
To add multiple recipients, repeat this step.
 6. Press  or  (OK) to select SIM1 or SIM2 and send message.
 7. There are more operations in **Options** such as **Add contact info** and **Add phiz**.

Writing and Sending a Multimedia Message

1. Select **Menu > Message > Write message > New MMS**.
2. Enter **Recipients** and then write the message.
3. Press  (Options) for the following options:
 - **Send**: to send the message using SIM1 or SIM2.
 - **Add recipient**: to add a phone number or select a number from **Contacts**.
 - **Add Cc**: to add a phone number or select a number from **Contacts** as Cc.
 - **Add Bcc**: to add a phone number or select a number from **Contacts** as Bcc.
 - **Preview**: to preview the message.
 - **Add**: to add **Text**, **Next slide**, **Previous slide**, **Picture**, **Audio**, **Video**, or **Attachment**.
 - **Page timer (1s-600s)**: to set the interval for switching between pages contained in a multimedia message.
 - **Save as draft**: save the message to the draft box.
 - **Text layout**: to select **Text up** or **Text down**.





Security Settings

PIN2

The PIN2 is the personal identification number used for special functions such as billing functions provided by the network.







The SIM1 PIN2 and the SIM2 PIN2 are configured separately.

To modify the PIN2, do the following:

1. Select **Menu > Settings > Security settings > PIN2 > SIM selection > Modify**.
2. Enter the PIN2, and then press  or  (OK).
3. Input new PIN2, and then press  or  (OK).
4. Re-enter the new PIN2 to confirm.

Privacy


This function is used to protect **Call logs, Message, Camera, Contacts, File list, Ebook, Calendar, and Udisk**.

1. Select **Menu > Settings > Security settings > Privacy**.
2. Stroke  to select **Settings**. Enter the privacy password.
3. Stroke  to select **Change password**. Enter the old phone code, and then press  or  (OK). Enter the new phone code, and then press  or  (OK). Re-enter the new phone code to confirm it.

Guardlock

When this function is activated and you lose your phone, if someone attempts to use the phone with a new SIM card, the Mobile Tracker

will send a message to predetermined numbers to show details about the lost phone.

1. Select **Menu > Settings > Security settings > Guardlock**.
2. Change the password before activating this function.
3. Stroke  to select **Change password**, enter the new password then re-enter it to confirm.
4. Select **On** and enter the password to activate this function.
5. Select **Off** and enter the password to deactivate this function.



Connection Management

You can access Wireless Application Protocol (WAP) sites and use WAP-based services on your phone. To access WAP sites, subscribe to the corresponding service from your service provider and set the relevant parameters on your phone.

For details about the service and the charges, contact your service provider.

Data Account

To access WAP sites on your phone, set your data account and WAP parameters first.

1. Select **Menu > Settings > Connection management > Network account**.
2. Press  (Options), and then select **New connection**.
3. Set the parameters according to the information provided by your service provider.
4. Press  (OK) to save the settings.



If the data account provided by your service provider already exists, you do not need to create a new one.

8 Chat Functions

Your phone provides **Facebook** and **Twitter**, two social networking services (SNS). You can use them to communicate with other people.

To use **Facebook**, select **Menu > Facebook > SIM selection**. Your phone then connects to the WAP page.

 






The method for using **Twitter** is similar.








- Check GPRS settings before using these two applications.
- Before saving the chat history, ensure that a microSD card has been inserted to the phone.

9 FM Radio

Your phone comes with a built-in antenna and you can listen to the radio without a headset. If the headset is included in the product package, you can also use the headset to listen to the FM radio.

1. Select **Menu > FM radio**; or press and hold  for 3s in standby mode.
2. When listening to the radio, you can do the following:
 - Press  to activate or deactivate the loudspeaker. To deactivate loudspeaker, you need to insert headset.
 - Press , , or  to adjust the volume.
 - Stroke  to change the frequency or channel.
 - Press  (Options) to access more options.




10 TV

You can use your phone as a mobile terminal to watch TV programs. Select **Menu > TV**. Stroke  to select  or  and press  to switch between channels. Press  to adjust volume.

Press  (Options) for more options:

- **Location:** to select your location.
- **Dissolve noise:** to turn on or turn off the dissolve noise function.
- **Search:** to search for new channels and programs.
- **Channel list:** to view all channels.

11 Image Browser









Photos taken can be viewed in the image browser. Stroke  to choose pictures, press  (**Preview**) to view the picture, and press  (Options) for more options:

- **Change folder:** to select other folders and view pictures.
- **Send:** to send the picture to other devices via MMS or Bluetooth.
- **Slide play:** to view pictures in a slide show.
- **Delete:** to delete the picture.
- **Set image as wallpaper:** to set the picture as wallpaper shown on standby screen.
- **Set as screensaver:** to set picture as screensaver when the phone is in standby mode.
- **Rename:** to rename the picture.

-
- **Mark:** to mark or unmark pictures for further operations.
 - **Details:** to view detailed information.
 - **Slide settings:** to set the picture effect and the duration for displaying the picture in a slide show.

12 Camera

 
The phone is equipped with a built-in 1.3-megapixel metal-oxide-semiconductor (CMOS) camera.

1. Select **Menu > Camera**.
2. On the viewfinder screen, do the following:
 - Press  to take a picture. After that, press  or ₁ (**Save**) to save the picture. Then, press  (**Send**) to send the picture to other devices via MMS or Bluetooth. Press ₁ (**Options**) to **Delete**, **Set as wallpaper**, **Set as screensaver**, or go to **Gallery**.
 - Stroke  to set the camera parameters, including **Shoot mode**, **Size**, **Scene mode**, **Brightness**, **Contrast**, **Exposure bias**, **Frame**, **Cont. shot**, **White balance**, **Delay**, and **Effect**. Press ₁ (**Options**) to select **Gallery**, **Settings**, **Storage**, or **Help**.
 - Press ₂ (**Back**) to exit the camera.

13 Internet

You can access WAP sites and use WAP-based services on your phone. To access WAP sites, subscribe to the corresponding service from your service provider and set the relevant parameters on your phone. For details about the service and the charges, contact your service provider.



Select **Menu > Internet > SIM selection**. Then the following options are available:

- **Homepage:** to start a connection to the default URL.
- **Bookmark management:** to check bookmark list or press  (Options) to add new bookmarks.
- **History:** to check browsed pages.
- **Offline pages:** to check the pages stored.
- **Go to URL:** to enter an URL address and access it.
- **Tool:** to **Clear cache**, **Clear cookies**, and configure **Settings**.



14 Tools

This phone comes with several useful applications including **Calendar**, **World clock**, **Timer**, **Unit converter**, **Currency converter**, and **Health**.



Calendar

You can open the calendar, and view and edit your schedule or set alerts. If a memo has been set in the schedule for a particular date, the date is highlighted. To view all memos for a day, stroke  to select the date. Press  (Options) and the following operations

can be performed:

- **Add task:** to enter **Subject, Date, Time, Ringtone, Type,** and **Deadline.** Press  (**Edit**) to edit, press  (**Save**) to save and exit.
- **View tasks:** to check the tasks of the specified day.
- **All tasks:** to check all tasks.
- **Clear tasks today:** to clear today's tasks.
- **Clear all:** to clear all tasks.
- **Go to date:** to enter a date and jump to the date.
- **Weekly:** to display the calendar weekly.

World Clock

Search for the current time corresponding to the time zone of different countries around the world. Stroke  to view different time zones. Press  (**Options**) to select **Set local** or **Set daylight saving system**.

Timer

This function counts down time, when it reaches **00:00:00**, your phone rings or vibrates.

Unit Converter

This function is used to convert measures of weight or length to different units.

Currency Converter









This function is used to convert the various currencies of different regions.

Health

You can enter the corresponding data to calculate the body mass index (BMI).

15 File List

This menu enables you to access the file list, where folders or files in the phone or the memory card can be managed.





1. Stroke  to choose the desired folder, and then press  to open or press  (Options) for more options:
 - **New folder:** to create new folders.
 - **Delete:** to delete the folder.
 - **Details:** to check detailed information about the folder.
 - **Edit:** to rename, copy or move the folder.
 - **Search:** to search for a folder by entering the folder name and pressing  or  (OK).
 - **Sort:** to sort the folders by **Name, Date, Size** or **Type**.
 - **Mark:** mark or unmark one folder or all folders for further operations.
 - **More:** to check phone memory capacity, memory card capacity, format the phone memory, or format the memory card.
2. Stroke  to choose the desired file, and press  to open or press  (Options) for more options.
3. The operations that can be performed on files may differ from those that can be performed on folders.

16 STK




The SIM Tool Kit (STK) function is a value-added service provided by your service provider; you can use it to send text messages, view news, and use other applications. For more information, contact your service provider.

17 Ebook

Your phone supports ebooks in .txt format.

1. Select **Menu > Ebook** to display the bookshelf.
The phone automatically adds the ebooks stored in **Ebook** in the phone memory or on the microSD card to the bookshelf.
2. Scroll to the desired ebook.
3. Press  to open and start reading the ebook. While reading, press ₁ (**Options**) to **Add bookmark, View bookmark, Jump to start, Jump to end, Jump to percent, Cancel backlight always on** and **Help**.
4. Press ₁ (**Options**) to check **Details, Recent books**, or select **Send via bluetooth, Delete, Mark**, and **Settings**.
5. Press ₂ (**Back**) to exit **Ebook**.



- When reading an ebook, you can stroke  or press  and  to turn pages.
- It is recommended that you store ebooks in Ebook in the phone memory or on the microSD card. When you open an ebook stored in a folder other than Ebook, the phone automatically moves the ebook to Ebook so that you can find it easily next time you want to read it.









18 Multimedia

This menu includes **Recorder** and **Video Recorder**.


 


Recorder

 
The recorder functions as a digital recorder.

To record an audio clip, do the following:

1. Select **Menu > Multimedia > Recorder**.
2. Stroke  to  and press  to record an audio clip directly; or press  (Options) to select **Start recording** to record. Select  to pause, select  to stop recording and save the audio clip. Select  to play the audio clip just recorded. Select  to access the audio clips list.









 
After recording an audio clip, press  (Options) to access the following:

- **Audition:** to review the audio clip.
 - **Record again:** to record a new audio clip.
 - **Delete:** to delete the audio clip.
 - **Send:** to send the audio clip to other devices via MMS or Bluetooth.
 - **Record file list:** to access the audio clips list.
3. Use , , or  to adjust the volume.
 3. Press  (Options) to select **Record file list** to check recorded files.

-
4. Press ₁ (**Options**) to select **Storage** and save the recorded files to the phone memory or the memory card.

Video Recorder


To record a video clip, do the following:

1. Select **Menu > Multimedia > Video recorder**.
2. In video recording mode, do the following:
 - Press  to record. Press  (**Pause**) to pause, ₁ (**Stop**) to stop and save the video clip, or ₂ (**Cancel**) to stop without saving the video clip. After recording a video clip, press  (**Play**) to play it. Press ₁ (**Options**) to select **New**, **Delete**, **Send**, **Play**, and **View**.
 - Stroke  to set the following parameters for video recording: **Shoot mode**, **Size**, **Brightness**, **Contrast**, and **Effect**.
 - Press ₁ (**Options**) to select **View**, **Settings**, **Storage**, and **Help**.
3. Press ₂ (**Back**) to exit video recorder.

 

19 Java Application

You can install third-party Java applications to expand the capabilities of your phone.




- Not all Java applications are compatible with your phone. If you have trouble in installing or running a Java application, press  to return to standby mode, and then remove the application from your phone.
- Certain Java applications require network connections. Therefore, ensure that the General Packet Radio Service (GPRS) connection is properly set up.



Installing a Java Application

1. Select a Java installation file in .jar or .jad format from **Java application** > **Local install** > **Phone** or **MemoryCard**, press  (Select), and then select **Install** to start the installation.
2. Press  (OK) to confirm the certification information.
3. Select **Phone** or **MemoryCard** to install the Java application. If the Java application is installed successfully, the message "Installed" is displayed.


Running a Java Application

1. Select **Menu** > **Java application** > **Application manager**.
2. Select a Java application, and then press  (Options).
3. Select **Operate** to run the Java application.

Removing a Java Application

1. Select **Menu** > **Java application** > **Application manager**.
2. Select a Java application, and then press  (Options).
3. Select **Delete** to remove the application.
4. Press  (OK) to confirm the certification information. If the Java application is removed successfully, the message "Deleted" is displayed.

Downloading a Java Application

1. Select **Menu > Java application > Download**.
 - **Input URL:** to enter the WAP address of a Java application, then press  (OK) to connect to.
 - **Bookmark:** to view saved bookmarks and select one of them to connect to.
2. Before downloading, configure the link settings. Select **Menu > Java application > Link settings**. Set the network type, SIM1 network account, and SIM2 network account.

20 Bluetooth

Using the Bluetooth function, you can synchronize data between a PC and your phone, exchange data with other Bluetooth devices, and connect a Bluetooth headset to your phone.





You can turn on the Bluetooth function by configuring Bluetooth settings.

From the menu, you can select the following options:

- **Open/Close bluetooth:** to turn on/off the Bluetooth function.
- **Bluetooth visibility:** to set the phone to **Show** or **Hide**.
- **Paired device:** to view the paired device list or add new devices.
- **Shared folder settings:** to set **Shared folder permission** and **Shared folder**.
- **My bluetooth name:** to rename your phone.
- **Storage:** to store received files on **Phone prior** or **MemoryCard prior**.
- **Bluetooth Address:** to check the Bluetooth address of your phone.
- **Help:** to view help information.

Connecting a Bluetooth Headset to Your Phone

1. Select **Menu > Bluetooth > Open/Close bluetooth** to turn on the Bluetooth function.
2. Select **Paired Device > Add new device** to search for available Bluetooth devices.



-
3. Scroll to the desired Bluetooth headset, and then press  or  (Pair).
 4. Enter the password for pairing the Bluetooth headset with your phone.

When a Bluetooth headset is connected to your phone, the headset icon is displayed on the standby screen, indicating that you can use the headset.



No Bluetooth headset is included in the product package. If you want to use a Bluetooth headset, purchase one by yourself.

Transferring Data

1. Select **Menu** > **Bluetooth** > **Open/Close bluetooth** to turn on the Bluetooth function.
2. Select **Paired Device** > **Add new device** to search for available Bluetooth devices.
3. Scroll to the desired Bluetooth device, and then press  or  (Pair).




















If the Bluetooth device is connected to your phone for the first time, you need to enter the password for pairing the device with your phone.

4. Exchange data between your phone and the Bluetooth device.

21 Video Player

The video player plays downloaded or recorded video clips that are stored in the **Video** folder in **File list** of **Phone** or **MemoryCard**.

To play a video clip, do the following:

1. Select **Menu > Video player**.
2. Stroke  to  or  and press  to choose a video clip.
3. Stroke  to  and press  to play the video clip.
4. Press ₁ to access options and select **Play list, Fullscreen play, Order play, Video application, File attribute, or Location**.
5. While the video clip is being played, you can do the following:
 - Press  to adjust the volume.
 - Stroke  to  or , and press and hold  to rewind or fast-forward the video clip.
 - Stroke  to  and press  to pause or continue.
6. Press ₂, or select  and press  to stop playing and exit.


















Only files in .mp4, .avi and .3gp formats are supported. Files in other formats may fail to play.

22 Audio Player

The audio player plays audio clips that are stored in **Audio** in the phone memory or on the microSD card. It is recommended that you listen to audio clips using the headset so that you can enjoy enhanced quality sound.

1. Select **Menu > Audio player**.

-
- Stroke  to  and press  to start playing audio clips. While audio clips are being played, you can do the following:
 - Press , or select  and stroke , to adjust the volume.
 - Stroke  to  or , and press and hold  to rewind or fast-forward the audio clip.
 - Press  to configure the relevant settings.
 - Stroke  to  and press  to pause or continue.
 - Press  to select **Exit** to exit audio player.

23 Games

This phone comes with two built-in games. Select **Menu > Games** to select a game.

24 Warnings and Precautions

This chapter contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using it is prohibited. Do not use the device if using it causes danger or interference with other electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device if using it is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between an electronic device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Safety and Regulations

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

-
- Concentrate on driving. Your first responsibility is to drive safely.
 - Do not talk on the device while driving. Use hands-free accessories.
 - When you have to make or answer a call, park the vehicle on the road side before using your device.
 - Radio frequency (RF) signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
 - In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
 - Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- During thunderstorms, do not use your device when it is being charged, to prevent any danger caused by lightning.
- During a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power

consumption. As a result, the talk time and the standby time are reduced.

- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device.

Prevention of Hearing Damage

Using a headset at high volume may damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. The device and its accessories may include parts that present a choking hazard for children. Ensure that small children are kept away from the device and its accessories.

Accessories

Use the accessories provided by the device manufacturer only. Using third-party accessories with this device may invalidate any guarantee or warranty applicable to the device, result in malfunction of the device, and cause danger.

Battery and Charger

- Unplug the charger from the power socket and the device when the charger is not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shortened, replace the battery.
- Use the alternating current (AC) power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.

-
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may short-circuit and cause injuries and burns on your body.
 - Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
 - If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. If the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
 - If the battery is deformed, changes color, or is abnormally heated while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
 - If the power cable is damaged (for example, the cord is exposed or broken), or if the plug loosens, stop using the cable immediately. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
 - Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
 - There is a danger of explosion if the battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or instructions provided with your device.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may

lead to battery leakage, device malfunction, overheating, fire, or explosion.

- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before cleaning or maintaining the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may get damaged or a fire may be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or its accessories. Otherwise, the warranty on the device and the accessories becomes invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not

to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for RF energy absorbed by the body when the device is being used. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when the device is being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when it is tested at the ear is 0.606 W/kg, and that when it is properly worn on the body is 0.985 W/kg.

EU Regulatory Conformance

Huawei Technologies Co., Ltd. hereby declares that this device complies with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site www.huaweidevice.com/certification.

CE 0700

Notice: Observe the national and local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Version: 01 NO.:6010797