

**Copyright © Huawei Technologies Co., Ltd.  
2012. All rights reserved.**

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

**Trademarks and Permissions**



, **HUAWEI**, and  are trademarks or registered

trademarks of Huawei Technologies Co., Ltd.

The *Bluetooth*<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

**Notice**

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

## **NO WARRANTY**

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

## **Import and Export Regulations**










Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

## **Safety Precautions**

Please read the safety precautions carefully to ensure the correct use of your mobile phone.



Do not crash, throw, or puncture your mobile phone. Avoid the falling, squeezing, and bending of your mobile phone.

	Do not use your mobile phone in a moist environment, such as the bathroom. Prevent your mobile phone from being soaked or washed in liquid.
	Do not switch on your mobile phone when it is prohibited to use phones or when the phone may cause interference or danger.
	Do not use your mobile phone while driving.
	Follow any rules or regulations in hospitals and health care facilities. Switch off your mobile phone near medical apparatus.
	Switch off your mobile phone in aircraft. The phone may cause interference to control equipment of the aircraft.
	Switch off your mobile phone near high-precision electronic devices. The phone may affect the performance of these devices.
	Do not attempt to disassemble your mobile phone or its accessories. Only qualified personnel are allowed to service or repair the phone.
	Do not place your mobile phone or its accessories in containers with a strong electromagnetic field.
	Do not place magnetic storage media near your mobile phone. Radiation from the phone may erase the information stored on them.

	Do not put your mobile phone in a high-temperature place or use it in a place with flammable gas such as a gas station.
	Keep your mobile phone and its accessories away from children. Do not allow children to use your mobile phone without guidance.
	Use only approved batteries and chargers to avoid the risk of explosions.
	Observe any laws or regulations on the use of wireless devices. Respect others' privacy and legal rights when using your wireless device.
	Strictly follow the relevant instructions of this manual while using the USB cable. Otherwise your mobile phone or PC may be damaged.

# Contents

<b>1 Getting Started</b> .....	<b>1</b>
Installing the Battery .....	1
Charging the Battery .....	1
Your Phone .....	2
Keys and Functions .....	2
Screen Icons.....	4
<b>2 Call Functions</b> .....	<b>6</b>
Making a Call.....	6
Answering a Call .....	6
Speed Dialing.....	7
Call Waiting .....	7
<b>3 Text Input</b> .....	<b>8</b>
Changing the Text Input Mode .....	8
Entering English and French.....	8
Entering a Number .....	8
Entering a Symbol .....	8
<b>4 Contacts</b> .....	<b>9</b>
Creating a Contact .....	9
Searching for a Contact.....	9
Adding Favorites .....	9
Adding a Group .....	9
Assigning Speed Dialing to a Contact.....	10
<b>5 Messaging</b> .....	<b>10</b>
Creating and Sending a Message.....	10
Message Settings .....	10
<b>6 Media Applications</b> .....	<b>11</b>
Camera.....	11
Recorder .....	11
Managing Multimedia Files.....	11
<b>7 Browser</b> .....	<b>11</b>
<b>8 Bluetooth</b> .....	<b>12</b>

<b>9 Security</b> .....	<b>13</b>
Keypad Lock .....	13
Phone Lock .....	13
<b>10 Troubleshooting</b> .....	<b>13</b>
<b>11 Warnings and Precautions</b> .....	<b>15</b>

 
# 1 Getting Started



## Note

- All the pictures in this guide are provided for your reference only.
- Please read the section "Warnings and Precautions" before using your phone for safety tips and precautions.


## Installing the Battery

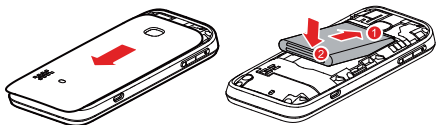


## Charging the Battery



## Note

- When the battery icon changes to  or the charging animation becomes static, the battery is fully charged.
- If the battery charge is fully depleted, it may take several minutes for the phone to display the charging icon after the charger is plugged in.
 
## Your Phone

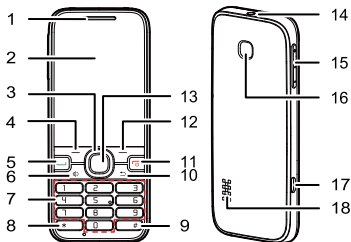


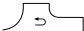 

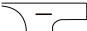 








1	Earpiece	2	Screen
3	Navigation keys	4	Left soft key
5	Call/Answer key	6	Sound/Mute key
7	Number keys	8	* key
9	# key	10	Clear/Back key
11	End/Power key	12	Right soft key
13	Confirm key	14	Headset jack
15	Volume key	16	Camera
17	Charger connector	18	Speaker

## Keys and Functions

In this guide, the navigation keys of the phone are indicated

by , , ,  and .














Press...	To...
	<ul style="list-style-type: none"> <li>• Dial a number or answer a call.</li> <li>• Access <b>Call Logs</b> in standby mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Power the phone on or off (press and hold the key for about 3 seconds).</li> <li>• End or reject a call.</li> <li>• Return to standby mode.</li> </ul>
	<p>Turn the speaker on or off (press and hold the key for about 3 seconds).</p>
	<ul style="list-style-type: none"> <li>• Go back to the previous screen.</li> <li>• In editing mode, press the key to delete the character on the left of the cursor, or press and hold the key to delete all the characters.</li> </ul>
	<p>Select the option displayed in the lower left corner of the screen.</p>
	<p>Select the option displayed in the lower right corner of the screen.</p>
	<p>Confirm a selection.</p>
	<ul style="list-style-type: none"> <li>• If <b>Standby Screen</b> is set to <b>Concise Mode</b>, access the functions assigned to the navigation keys in standby mode.</li> <li>• Scroll through a menu.</li> </ul>





Press...	To...
	<ul style="list-style-type: none"> <li>• Enter numbers, letters, and symbols.</li> <li>• Call the voicemail in standby mode (press and hold <b>1</b> for about 3 seconds).</li> <li>• Speed-dial phone numbers in standby mode (press and hold the keys <b>2 - 9</b> for about 3 seconds).</li> </ul>
	<ul style="list-style-type: none"> <li>• Enter *, +, <b>P</b> or <b>T</b> when entering phone numbers.</li> <li>• Switch between the current and <b>Vibration</b> profiles in standby mode (press and hold the key for about 3 seconds).</li> <li>• Access the symbol list in editing mode.</li> </ul>
	<ul style="list-style-type: none"> <li>• Enter #.</li> <li>• Lock the keypad in standby mode (press and hold the key for about 3 seconds).</li> <li>• Switch between input methods in editing mode.</li> </ul>
	<p>Adjust the volume.</p>

## Screen Icons

Screen icons listed in the following table indicate the current status of your phone. They are provided for your reference only.






For more icon information, select **Menu > Settings > Phone > Phone Info > Icon Glossary**.

Icon	Indicates...
	Signal strength of the code division multiple access (CDMA) 1X network.
	New text message received.
	New multimedia message received.
	The memory for text messages and multimedia messages is full.
	Location on.
	Headset connected.
	Speaker on.
	Alarm clock enabled.
	Bluetooth on.
	<b>Ringing</b> mode activated.
	<b>Ringing and Vibration</b> mode activated.
	<b>Silence</b> mode activated.
	<b>Vibration</b> mode activated.



Icon	Indicates...
	<b>Airplane mode</b> activated.
	Roaming state.
	Battery level.
	Battery charging.

## 2 Call Functions


### Making a Call

- In standby mode, press the number keys to enter a phone number.
  - To make an international call, press  twice to enter the plus sign (+). Then enter the country or region code, area code, and phone number.
  - To call an extension number, enter the switchboard number, press  three times to enter **P** or press  four times to enter **T**, and then enter the extension number.
- Press  to dial the number.
- Press  to end the call or cancel the dialing.

### Answering a Call

When you receive an incoming call, press  to answer it or  to reject it.

If the **Any Key** answer function is enabled, you can press any

key except , , ,  and  to

answer a call. To set this function, select **Menu > Settings > Call > Answer Mode > Any Key**.

If the **Headset Auto-Answer** function is enabled and a headset is connected to the phone, the phone will automatically answer incoming calls for a pre-defined period.

To set this function, select **Menu > Settings > Call > Headset Auto-Answer**.

## Speed Dialing

If the speed dialing numbers are assigned to the number keys, you can press and hold a number key for about 3 seconds in standby mode to speed dial the phone number. Up to 8 speed dialing numbers can be assigned.





For more details, see the section "Contacts" to learn how to assign speed dialing numbers to the contact numbers.

## Call Waiting




Note

The call waiting function is a network-dependent service. For details, contact your service provider.

1. When receiving another call during an active conversation, press  to answer the call, or press  to reject the call.
2. When you are answering the new call, the other call is placed on hold, and you can press  to switch to the other call.
3. Press  to end the two calls.

## 3 Text Input

### Changing the Text Input Mode





The current text input mode indicator is displayed in the upper right corner of the text input screen. To switch between the text input modes, repeatedly press .

You can select **Menu > Settings > Phone > Text Input Settings** to change the input language and enable or disable the predictive input mode.

### Entering English and French

In multi-tap text input mode, press the key labeled with the desired letter to enter the letter on the key.

In predictive input mode:

1. Press each key according to the spelling sequence of the desired word. The phone displays candidate words that may be spelt by the keystroke sequence.
2. Press  or  to scroll to the desired word.
3. Press  or  to enter the desired word, or **0** to enter the word followed by a space.


### Entering a Number




To enter a number:



- In "123" input mode, press the key labeled with the desired number.
- In any input mode other than "123" input mode, press and hold the number key for about 3 seconds to enter the desired number.

### Entering a Symbol

To enter a symbol:



- In any input mode, press  to display the symbol

list. Press  to scroll to the desired symbol. Then press  or  to enter the symbol.



- In multi-tap input mode, repeatedly press **1** to switch between the commonly used symbols.
- In predictive input mode, press **1**, and then press  or  to scroll to the desired symbol.

## 4 Contacts




### Creating a Contact

1. Select **Menu > Contacts > Create Contact**.
2. Edit the contact information.
3. Press  or  to save the contact.



### Searching for a Contact


1. Select **Menu > Contacts**.
2. Enter the contact name, or the first several letters of a contact name.
3. Press  and  to scroll to the contact.

### Adding Favorites



1. Select **Menu > Contacts > Favorites > Add Favorites**.
2. Press  and  to scroll to the contact.
3. Press  to add the contact into your list of favorites.

### Adding a Group

1. Select **Menu > Contacts > Groups > Add Group**.
2. Edit the group name.
3. Select **Members** and press  to mark the contacts to be included in the group.
4. Press  to save the members.



5. Press  to save the group.

## Assigning Speed Dialing to a Contact

1. Select **Menu > Contacts > Options > Manage Contacts > Speed Dialing**.
2. Select a number from **2** to **9** and press  to confirm.
3. Select a contact from the contact list or enter a number.
4. Press  to save the speed dialing number.

## 5 Messaging

### Creating and Sending a Message



1. Select **Menu > Messaging > New Message**.
2. Add recipients by entering the phone numbers, or press  and then select the recipients from the contact list.
3. Select **Options > Insert Object** to add picture, audio or other attachments to the message.
4. Press  to send the message.

### Message Settings





- In **Chat View** mode, you can send and receive messages with a contact (or number) and view them in a grouped conversation. You can select **Menu > Messaging > Settings > View Mode > Chat View** to set the **Chat View** mode.
- In **Inbox View** mode, the messages you received are saved in **Inbox**, and the messages you sent are saved in **Sent**. You can select **Menu > Messaging > Settings > View Mode > Inbox View** to set the **Inbox View** mode.

## 6 Media Applications

### Camera

1. Select **Menu > Camera**.
2. Press  to configure the camera settings.
3. Press  to take a picture.

### Recorder

1. Select **Menu > Tools > Recorder**.
2. Press  to start recording. While recording, you can press  to pause, and again to resume recording.
3. Press  to stop recording.
4. Press  to play the recording.



#### Note


To ensure an optimal audio effect, keep your phone's microphone close to the sound source when recording.

### Managing Multimedia Files

You can select **Menu > Gallery** to manage images and audios stored on your phone. You can view pictures, set a picture as wallpaper, set an audio clip as ringtone, and send multimedia files via Bluetooth or message.

## 7 Browser

The **Browser** application allows you to access Internet websites and browse web pages.

1. Select **Menu > Browser** to open the home page.
2. Select **Options > Open New Page**.
3. Enter the Uniform Resource Locator (URL) and press  to access the new web page you desired.

 Note

You can select **Options** > **Settings** to customize browser settings to suit your web browsing style and configure page content, private data, and security settings.

4. Select **Options** > **Exit Browser** to exit browser.

## 8 Bluetooth

Your phone supports Bluetooth. You can transfer data between your phone and other Bluetooth devices and talk by using a Bluetooth headset.

1. Select **Menu** > **Tools** > **Bluetooth**.
2. Select **Bluetooth** > **On** to enable the Bluetooth function.
3. Select **Search for Devices** to search for available Bluetooth devices.
4. Select the Bluetooth device you want to connect from the list and press  to pair your phone with the desired device.

 Note


- When you pair your phone with the device for the first time, a password is required.
  - A Bluetooth headset is not included in the product package and must be purchased separately. Before using a Bluetooth headset, refer to the user manuals of the relevant devices.
5. When the Bluetooth devices are connected to your phone, you can exchange data between your phone and the other Bluetooth device.


## 9 Security

### Keypad Lock



Note

When the keypad is locked, you can still press  to answer a call or make an emergency call.

To lock the keypad, press and hold  for about 3 seconds in standby mode.

To unlock the keypad, press , then .

If the **Auto Keypad Lock** function is enabled, the phone's keypad will automatically lock after being idle in standby mode for a pre-defined period. To set this function, select **Menu > Settings > Phone > Auto Keypad Lock**.


### Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock is disabled. To enable or disable the phone lock, select **Menu > Settings > Security > Phone Lock**.

Once you enable the phone lock, you must enter the password. The default password to unlock your phone is **0000**, and it can be changed to any numeric string of four to eight digits in length. You can select **Menu > Settings > Security > Change Phone Lock Code** to change the password.

## 10 Troubleshooting

If you encounter any problem when using your phone, try to rectify the problem according to the following table. If the problem persists, contact the service provider or the dealer.

Problem	Ensure that...
The battery cannot be charged.	The charger is properly connected to your phone and the power socket.
The phone cannot be powered on.	<ul style="list-style-type: none"> <li>• The battery power is sufficient.</li> <li>• The battery is properly installed.</li> <li>• Press and hold  for about 3 seconds.</li> </ul>
You cannot make a call except an emergency call.	<ul style="list-style-type: none"> <li>• The phone number is correct.</li> <li>• You are in the network service area.</li> <li>• You have not enabled the call restriction function.</li> </ul>
Bad call quality.	<ul style="list-style-type: none"> <li>• The signal strength is strong enough.</li> <li>• If you are staying indoors, move close to a window.</li> </ul>
During a call, the other side cannot hear your voice.	<ul style="list-style-type: none"> <li>• The microphone is not covered.</li> <li>• If you use a wired headset, make sure connector is fully plugged in.</li> </ul>
The signal strength is not strong enough or your phone is often off line.	Move close to a place with strong signal strength.

Problem	Ensure that...
<p>Your phone displays "No service found", "Service unavailable" or "Network problem".</p>	<ul style="list-style-type: none"> <li>• You are in an area with very weak signal or outside your service provider's network coverage (in a tunnel or surrounded by buildings). If so, move to another area and try again.</li> <li>• Do not utilize the service option without obtaining authorization from your service provider.</li> </ul>
<p>The phone cannot find other Bluetooth devices or fails to send or receive data via Bluetooth.</p>	<ul style="list-style-type: none"> <li>• The Bluetooth function of both devices is turned on.</li> <li>• The distance between the two Bluetooth devices is less than 10 meters.</li> <li>• There are no obstacles between the two devices.</li> <li>• The other Bluetooth device is set to visible.</li> </ul>

## 11 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

### Electronic Device

Power off your device if using the device is prohibited. Do

not use the device when using the device causes danger or interference with electronic devices.

### **Medical Device**

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.
- Some wireless devices may affect the performance of hearing aids. For any such problems, consult your service provider.
- To ensure that the Hearing Aid Compatibility rating for your device is maintained, secondary transmitters such as Bluetooth components must be disabled during a call.

### **Potentially Explosive Atmosphere**

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In

addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

### **Traffic Security**

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation

of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

## **Operating Environment**

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 45°C while the device is being charged. Keep the ambient temperature between 0°C and 45°C for using the device powered by a battery.

## **Prevention of Hearing Damage**

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

## **Safety of Children**

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

## **Accessories**

Choose only batteries, chargers, and accessories approved for use with this model by the device manufacturer. The use of any other type of battery, charger, or accessory may invalidate any warranty for the device, may be in violation of local rules or laws, and may be dangerous. Please contact your dealer for information about the availability of approved batteries, chargers, and accessories in your area.

## **Battery and Charger**

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.

- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Avoid dropping the device or battery. If the device or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a qualified service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- The device should only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.

- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

## **Cleaning and Maintenance**

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other

chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.

- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.
- If the device screen is broken by colliding with hard objects, do not touch or try to remove the broken part. In this case, stop using the device immediately, and then contact an authorized service center in time.

## **Emergency Call**

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

## **Certification Information (SAR)**

This device meets guidelines for exposure to radio waves. Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy

absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.791 W/kg, and when properly worn on the body is 1.210 W/kg.

### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 Caution

Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

## **Hearing Aid Compatibility (HAC) regulations for Mobile phones**

In 2003, the FCC adopted rules to make digital wireless telephones compatible with hearing aids and cochlear implants. Although analog wireless phones do not usually cause interference with hearing aids or cochlear implants, digital wireless phones sometimes do because of electromagnetic energy emitted by the phone's antenna, backlight, or other components.

Your phone is compliant with FCC HAC regulations (ANSI C63.19).

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise.

Some hearing devices are more immune than others to this

interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box. The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled.

M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.) Hearing devices may also be measured.

Your phone meets the M4/T3 level rating. Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating.

For more information about the FCC Hearing Aid Compatibility please go to <http://www.fcc.gov/cgb/dro>.

## Industry Canada Compliance

This device complies with Industry Canada. This device with the Class B limits for radio noise emissions as set out in the interference causing standard entitled "Digital Apparatus" (ICES-003) of Industry Canada. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

In the United States and Canada, the standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Please visit

[www.huaweidevice.com/worldwide/support/hotline](http://www.huaweidevice.com/worldwide/support/hotline) for recently updated hotline and email address in your country or region.

Version: 01 Part Number: 96721497