

 **SAGEM**

MYC-4



ENGLISH

You have just purchased a SAGEM phone, we congratulate you; it is recommended that you read this handbook carefully in order to use your phone efficiently and in the best conditions.

Your phone can be used internationally in the various networks (GSM 900 MHz and DCS 1800 MHz) depending on the roaming arrangements with your operator.

We remind you that this phone is approved to meet European standards.

WARNING

Depending on the model, network configuration and associated subscription cards, certain functions may not be available.

Ensure that your SIM card is a 3 V SIM type that is compatible with your phone. Inserting an incompatible card will be indicated by a message when your phone is switched on. Contact your operator.

Your phone is identified by its IMEI number. Write this number down, and do not keep it with your phone, because you may be asked for it in the event of your phone being stolen, in order to prevent it from being used, even with a different SIM card. In order to display the IMEI on your phone's screen, type: *#06#.

SAGEM is a trademark of SAGEM SA.

AT is a registered trademark of Hayes Microcomputer Products Inc.

Hayes is a registered trademark of Hayes Microcomputer Products Inc.

T9 is protected by one or more of the following US patents: 5,818,437, 5,953,541, 5,187,480, 5,945,928, 6,011,554 and other patents are being applied for worldwide.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

The WAP navigator is the exclusive property of Openwave. For this reason, it is forbidden to modify, translate, disassemble or even decompile all or part of the software that makes up the navigator.

© 2003 GAMELOFT - All rights reserved - GAMELOFT is a registered trademark of GAMELOFT S.A. - All rights reserved.

Wellphone™ and SmartCom™ are registered trademarks owned by SmartCom SARL France.

Déclaration CE de Conformité

Fabricant SAGEM SA
Manufacturer

Adresse Le Ponant de Paris
Address 27 rue Leblanc F-75512 Paris cedex 15 FRANCE

Déclare sous sa responsabilité que le produit
Declares under our sole responsibility that our product

Nom du produit GSM/DCS EC2004 (myC-4 et myC-4 t-zones)
Product Name

est conforme aux exigences des directives européennes suivantes :
conforms to the requirements of the following EEC directives:

EEC Directive 1999/5/CE

Sécurité (Safety) EN 60950

CEM (EMC) EN 301 489-1
EN 301 489-7

Basse tension 73/23/CEE
(Low voltage directive)

Réseau (Network) Exigences GT01 V 4.7.0
(Requirements GT01 V 4.7.0)
TBR 19 Edition 5
TBR 20 Edition 3
TBR 31 Edition 2
TBR 32 Edition 2
EN 301 511 V7.0.1

Santé (Health) EN 50361, EN 50360

Lieu et date
(Place and date of issue) Cergy 8^h Christophe - August 6th, 2004

Signature P. KLEIN 

Menu



Phonebook

Contacts menu



Messages



Compose



Inbox



Outbox



Drafts



Options



Memory



Local info.



Call Voice Mail



Multimedia



My Pictures



My Sounds



Memory



WAP



Games



Organiser



See month



See week



See today



See date



Calendar menu



Settings



Sounds



Display



Languages



Calls



Security



Networks



Others



Shortcuts



Date/Time



Active flip



Connectivity



Menu Hot-line



Applications

Delete all

Services

ToDo

Calculator

Converter

Alarm

Timer

Settings

About

Contents

Page 2	MENUS
Page 8	YOUR PHONE PACKAGE - ACCESSORIES
Page 9	DESCRIPTION Programmable keys and Short cut keys
Page 10	NAVIGATION PRINCIPLES
Page 11	INITIAL SCREEN
Page 12	ACTIVATING YOUR PHONE Information on the SIM card Installing the SIM card and the battery
Page 14	USING YOUR PHONE Don't obstruct the antenna with your fingers Increase the efficiency of your phone Hands-free mode Charging the battery
Page 16	MY PHONE IN 5 MINUTES Getting started PIN number Network Setting time and date First call Switching off Receiving a call
Page 20	FIRST SETTING: RING TONE Volume and ring tone

Contents

Page 22

PHONEBOOK

- Using the phonebook
- Contacts menu
- Options from a contact saved
- Receiving a vCard
- Sending a vCard

Page 29

MESSAGES

- Compose SMS
- Compose MMS
- Receiving messages
- Inbox
- Drafts
- Outbox
- Sending options
- Local information
- Memory
- Calling voicemail

Page 40

MULTIMEDIA

- My Pictures
- Memory
- My Sounds

Page 42

WAP

- The WAP Menu
- Configuring WAP parameters
- Downloading sounds and images
- WAP Logging off
- GPRS
- WAP Logging on

Contents

Page 46

GAMES

Page 47

ORGANISER

Calendar menu

Receiving a vCal

Sending a vCal

Page 49

SETTINGS

Sounds

Volume and ring tone

Vibrate

Silent mode

Beeps

Recorder

Display

Wallpaper

Screensaver

Operator logo

Languages

Call forward

View last calls

Calls

Counters

Display number

Call waiting

Automatic redial

Blacklist

Voicemail

ALS

Keypad locking

PIN number

- Security
 - PIN2 number
 - Phone code
 - Confidentiality
 - Operator
 - Call barring
 - Fixed dialling
 - Cost

- Networks
 - Contrast
 - Energy saving

- Others

- Shortcuts
 - Set Date/Time
 - Display

- Date / Time
 - Time zone
 - Summer time

- Connectivity
 - Serial Speed

- Active flip
- Menu Hot-line

APPLICATIONS

- Services
- ToDo
 - ToDo menu
 - ToDo actions menu

- Receiving a vCal
- Sending a vCal

Contents

Exchange of data with a PC
Calculator
Converter
Timer
Alarm

Page 76

CARE AND SAFETY INFORMATION

Safety
SAR
Advice for limiting exposure to radiofrequency (RF) fields

Page 78

WARRANTY

Page 81

END USER LICENCE AGREEMENT (EULA), FOR THE SOFTWARE

Page 85

JAVA™

Page 89

TROUBLESHOOTING

Page 93

CUSTOMER CARE


Page 94

INDEX

Your phone package

When you open the box, check that all items are present:

- 1 - Phone
- 2 - Charger
- 3 - Battery
- 4 - User guide

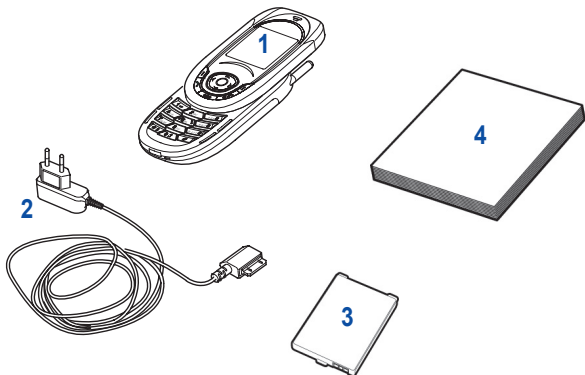

Accessories

You can also find (as an option) or order the following accessories:

Hands-free kit (*) (**)

Additional battery

Additional charger (*)


Data cable (with associated drivers) to connect your phone to a PC.

(*) These accessories are identical to the ones provided for the earlier MYC-x (MYC-3b/MYC2-2).

(**) The hands-free kit can be inserted only in one way, do not force its insertion in the phone.

Description

Programmable keys and Short cut keys

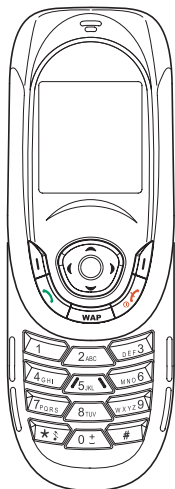

Microphone



Hold down: Switches the phone off

Press briefly: Start phone

In a call context: Reject a call - hang up

In menus: Return to initial screen.



In call context: Call - receiving a call - hands-free mode



Right programmable key: (Function available depending on model)

In initial screen: Access to certain functions (shortcuts)

In menus: Cancel (or return) as indicated on the screen

During call: Increase volume



Left programmable key: (Function available depending on model)

In initial screen: Access to certain functions (shortcuts)

In menus: Validate, choose as shown on the screen

During call: Reduce volume

WAP

In initial screen: Access to WAP



Previous choice / increase value / up



Next choice / reduce value / down



Up input field / move left



Down input field / move right



Hold down: *In initial screen:* Silent mode

Press briefly + OK ( key) activate or deactivate keypad locking

In call reception mode: Short press stops ring tone


In ring tone setting mode: Activate / deactivate ring tone

Upper case/Lower case



Zoom mode (see **Messages** and **WAP** menus)

Navigation principles

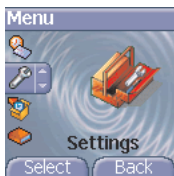

These basic principles bring a great intuitiveness to your phone.

Validate by pressing the  key .

Cancel by pressing the  key.

The thumbnails at the bottom of the screen refer to the   keys.


In the menus, a title bar reminds you of the previous level.

The   navigation keys are used to navigate from one menu to another within the same menu structure.


From the home page, pressing the   (or ) keys displays the icons of the main menus.

The  key is used to go from a menu to a sub-menu.

The  key is used to go from a sub-menu to a menu.





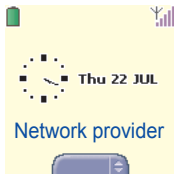








The  key (press briefly) is used to go back to the initial screen (current function is abandoned).

Initial screen



The initial screen contains the following information:




1 - The title bar icons:

-  Battery
-  Calls forwarded
-  Call (establishing the call)
-  Call (hands free)
-  Message (reception of a message, message memory full)
- FAX** FAX communication
- DATA** DATA communication
-  Silent mode
-  Message in answering machine
-  WAP (@) communication
- GPRS** GPRS
-  Home zone
- R** Roaming
-  Keypad locking
-  Protected WAP logon
-  Protected WAP logon icon with certificate
-  Signal strength level (5 bars).

2 - Date and time, in digital or analog mode

3 - Network provider

4 - Thumbnail centred on bottom line:

the main « Menu » thumbnail shows that the menu can be accessed via the   (or)  keys.

 
The following information may also be displayed:

« 1 message received »; or « 1 call ».

They can be deleted by pressing  key briefly.

Activating your phone

Information on the SIM card



To use your phone, you need a card called SIM card. It contains personal information that you cannot modify:

Secret codes (PIN(s): Personal Identification Numbers), these codes allow you to protect access to your SIM card and phone.

Phonebook,

Messages,

How special services work.

Your phone is compatible with the SIM 3V cards.


WARNING

This card must be handled and stored with care in order not to be damaged. If you should lose your SIM card, contact your network provider or your SMC (Services Marketing Company) immediately.

Please keep your SIM card out of reach of young children.

Activating your phone

Installing the SIM card and the battery

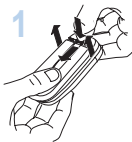


The SIM card is inserted under the phone's battery. Ensure that the phone is switched off and the charger disconnected.

- 1 Turn the phone back and press lock button to unblock cover. Remove the back cover.
- 2 Take out battery if already installed.
- 3 Slide the SIM card, with cut corner as shown on the phone, into the card holder with fold face down.
- 4 Place the battery by positioning first the top of it, as shown on the battery.
- 5 Replace the back cover, sliding the lower part towards the upper part into the lock position.

Using your phone

Don't obstruct the antenna with your fingers

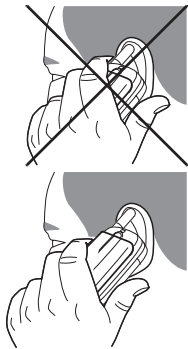

Avoid putting your fingers on this antenna area when the phone is switched ON.

If your fingers obstruct the antenna, the phone may have to operate with a higher power level than usual; decreasing its efficiency quickly. It could also affect the quality of your communications.

Non ionising radiation

To obtain maximum satisfaction from your phone, use it in a vertical position. Your personal safety can only be improved by doing so.

Increase the efficiency of your phone

- Don't press the keys when not necessary: each keypress activates the backlight, and uses much power.
- Don't activate too often the screensaver: a starting time too high increases the power consumption.
- Don't obstruct the antenna with your fingers.


Hands-free mode

During a call, press twice the  key to switch into hands-free mode.

WARNING: do not use the phone in hands-free mode near to your ear, or you may suffer hearing loss.

Using your phone

Charging the battery

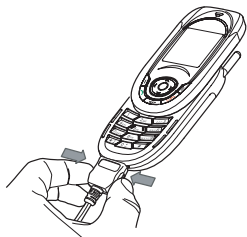

Your phone is powered by a rechargeable battery. A new battery must be charged for 4 hours at least before being used for the first time. It reaches its optimum capacity after a few cycles of use.

When your battery has been discharged, the phone displays the state (empty battery icon flashes). In this case recharge your battery for at least 15 minutes before making any calls in order not to be cut off in the middle of a call.

To recharge the battery:

Connect the charger to a socket.

Plug the end of the cable into the bottom connector of the phone.

The phone is then charging up. The battery icon is scrolling up and down to indicate that it is charging. When the battery is fully charged, the charging stops on its own. Disconnect the cable.

When charging, the battery may warm up, this phenomenon is normal.

WARNING

There is danger of explosion if the battery is placed in an incorrectly way or if it is exposed to fire.

Do not short circuit it.

The battery does not have any part that you can change.

Do not try to open the battery casing.

Use only the appropriate chargers and batteries as shown in the phone manufacturer's catalogue.

The use of other types of chargers or batteries may be dangerous or invalidate the warranty.

Used batteries must be disposed of in the appropriate places.

We advise you to take the battery out if you plan not to use the phone for extended periods.

You are strongly advised not to connect your phone to the charger if it doesn't contain a battery.

The charger is a safety step-down transformer, it is forbidden to modify, alter or replace it by another component (power supply plug, etc).

My phone in 5 minutes


Getting started

You are now ready to use your phone for the first time.

Switch on the phone by pressing the  key. A short display appears.

PIN number


This is your SIM's secret code.

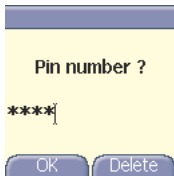

If access to the SIM card is protected, the device prompts you to enter the PIN number:

Enter the code between 4 and 8 digits given to you when the SIM card was issued. These digits do not appear on the screen for security reasons.

Press the  key to validate.

If your phone indicates that the SIM is missing, press the  key to switch off your phone and check that the SIM card is correctly installed.

Warning

If a wrong PIN number is entered three times in succession, your SIM card is blocked. You must then:

- Enter « **05* ».
- Enter the PUK (Personal Unblocking Key) code provided by your operator, and validate.
- Enter your PIN number and validate.
- Enter your PIN number again and validate.

After 5 or 10 failed attempts (depending on the type of SIM card), the SIM card is definitely locked. You must then contact your operator or your SMC to obtain a new card.

My phone in 5 minutes

Setting time and date

When you use your phone for the first time, you need to set the date and time.



In due course, when the battery is completely discharged, or if it has been removed, you will be prompted systematically to confirm date and time.

Setting the date:

Set the date by entering it directly in numerical form or by using the \downarrow \uparrow keys to increase or decrease the default values.

Use the \rightarrow key (or \leftarrow key) to access the **next** (or last) data input field.

Once the date is correct, press the \rightarrow key to validate.

Setting the time: Same procedure as for setting the time.

If necessary, you can choose the Time zone and eventually the season.

Network



From now on the phone hunts for a network on which it can make calls. If it finds one, it displays the name of the network on the screen. You are then ready to send or receive a call.

If the network icon appears, calls are possible on your operator's network.


If the letter R and a network name are displayed, calls are possible on the network of a different operator.

If the letter R is displayed without any network name, only the emergency services are accessible (ambulance, police, fire brigade).

If the network icon flashes, the phone is in permanent search mode. There is no network available. The signal strength indicator received allows you to display the quality of reception. If it indicates less than three bars, search for better reception in order to call in good conditions.

My phone in 5 minutes

First call

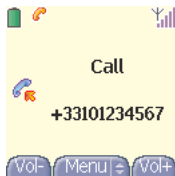

Dial the number of your correspondent.

Press the  key.

During the call, the call in progress icon flashes on screen and tones may indicate the establishment of the call.

Once communication has been established, the call icon stops flashing.

You can adjust the sound level (volume) using the   keys.

At the end of the conversation press the  key to hang up.

International call

Press 0 (hold down) to display « + », then dial the country code without waiting for the dial tone, then the number of the called party.


Emergency services

Depending on the operators you can obtain the emergency service with or without SIM card or when the keypad is locked. It is enough to be in an area served by a network.

To obtain the international emergency service, dial **112** then press the  key.

My phone in 5 minutes

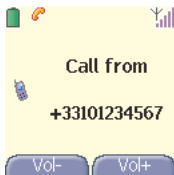

Receiving a call



When you receive a call, the number of your correspondent is displayed when it is presented by the network.

Press the  key or the  key to answer, and speak.

To refuse the call, press the  key or the  key.

To stop the ring tone or the vibrate, without refusing the call, press the   key.

Hands-free mode

During a call, press twice the  key to switch into hands-free mode.

WARNING: in this mode do not bring the phone up to your ear.

All the numbers corresponding to incoming and outgoing calls are logged in the list of recent calls.

Switching off

Press the  key for one second.

The end message is displayed. The phone switches off.



First setting: Ring tone




We want to familiarise you with the interface of your new phone, using a simple setting: choosing a ring tone and adjusting the volume.

Volume and ring tone *This menu allows you to allocate a ring tone to each type of event.*



In the **Initial screen**, press the  key to access the main menus.
On the **Settings** menu, please select the **Sounds** menu and **[Select]**.
Enter this menu by pressing the  key.



You can access the **second level** of the menu that contains four sub-menus: Ring tones, Vibrate, Silent mode, beeps, recorder.
The first sub-menu offered is **Ring tones**.
Enter by pressing the  key.

First setting: Ring tone



With the help of the \blacktriangledown \blacktriangleleft keys select the type of function where you want to change the ring tone from the proposed list and validate.


Enter by pressing the \blacktriangleright key.



Using the \blacktriangledown \blacktriangleleft keys select the ring tone from the list offered.

Enter by pressing the \blacktriangleright key.

For every new selection, you will hear the corresponding ring. If required, press the \star $\$$ key to cancel the sound.

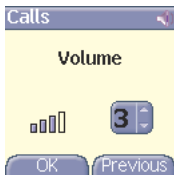

Adjust the volume using the \blacktriangledown \blacktriangleleft keys.

The volume is adjusted over a scale of 1 to 4.

The ring tone is played at the chosen level whenever a change is made.

You can select \ll \gg **volume** to choose a ring that starts quietly and rises to a crescendo.

Validate by pressing the \blacktriangleright key.



The phonebook allows you to store numbers that you call regularly. These numbers can be stored in the SIM card or in the phone.

Your phone has a vCard phonebook, and the following fields can be stored in the phone memory exclusively for each contact: last name, first name, number 1, E-mail, number 2, number 3, call group, company, comment, photo.

The fields preceded with a star are mandatory.

The storage capacity will depend on the SIM card. Please contact your network provider to get that information.

Using the phonebook



In the initial screen, press the  key to access the main menus. The first menu proposed is **Phonebook**.

Press the  key corresponding to the validation key to enter the menu.

The list of your correspondents appears. By default, the cursor is positioned on the first name in alphabetical order.

If you are using your phone and SIM card for the first time, the phonebook list will be empty, only the **Contacts menu** function will be available.

Different icons inform you of the position in the phonebook where the contact is stored:



contact stored in the SIM card



contact stored in the phone



if the Fixed dialling option is activated, only those contacts may be called. See **PIN number 2** and **Fixed Dialling** in **Security Menu** for more details about this activation.



Contacts menu



Add contact

Select **Add contact** and press the  key to enter the menu.


Choose the location where you wish to enter the contact (SIM card, phone or fixed dialling memory – Fixed dialling is available depending on PIN number 2 options of your SIM card) and enter the contact information and validate after each entry.

The information needed to store a contact in the phone is first name, last name, one phone number or an email address.

All other fields are not mandatory. If you do not want to fill them, select **Save** to save the contact created.

Note: If you want to store a contact in a call group, the ring tone, when the contact is calling, is the one defined by default in the call group.

To modify the ring tone, select **Phonebook, Contacts menu, Call Groups**, select the call group, **Options** then **Modify**. Modify the ring tone and validate.

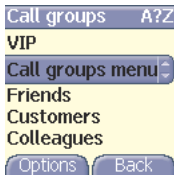

Call groups

6 default call groups have already been created. You can create others. You have the facility to group your contacts into call groups.

It is possible to allocate characteristics to each group (icon, ring tone, vibrate mode).

Creating new groups

Do same as above to get the **Contacts menu** and validate.

Press **▼** key to position the cursor on **Call groups** and validate.

By default, the cursor is automatically placed on **Call groups menu**, validate.

Choose one of the options given: Create group or Memory available.

Creating a group

By default, the cursor is placed on **Create group**, validate.

Enter the name and validate.

Choose the **icon**, the **ring tone** and **vibrate mode** that you want to allocate to this group (validate after each step).

Memory

Select **Memory** and validate.

The screen displays the number of locations available for new groups.



Memory

Select **Memory** and validate. Select SIM or Phone and validate.

The screen displays the locations used on the SIM Card and in the phone itself. The screen displays the amount of memory used. The memory capacity is shared between the phonebook and the pictures, organiser, etc. features. If you lack memory, check if you can free some space from another function.




My numbers

You can create the entries corresponding to your own numbers in order to consult them when necessary.

Select **My numbers** and validate. Enter the different details and validate.



Options from a contact saved

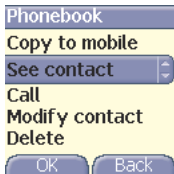

See contact

Select a contact from the list using the \swarrow \searrow keys. Then press the \triangleright key. By directly pressing one character, the phone will display the first contact saved in the phonebook, starting with it.

The first menu proposed is **See contact**. Validate.

Details of the contact appears (name, phone number, call group, and some other details).

Further screens display the other details of the contact:

Press the \triangleright key to view the 3 phone numbers the email address, company and comment for this contact.

Press the \hookrightarrow key from any of these screens to call this contact. Press the \triangleright key to go back to the phonebook.

The memory number of the contact (for example 21) allows you to call him directly typing from the initial screen this number followed by * (example : 21*).



Modify contact

Select the contact desired and validate.

Select **Modify contact** and validate.

Modify what you want and validate then select **Save** once the modifications completed.

Copy to SIM / Copy to mobile

This allows you to copy your phonebook entries from one memory to the other. Only the name, first phone number and the call group will be copied.

Select **Copy to SIM** or **Copy to mobile** and validate.


Delete

Select **Delete** and validate.

Validate deletion of entry.

Call

Select **Call**. Press the  key to start the call.

You can also select the party to be called from the phonebook, and press the  key to make the call.



Sending a vCard

It is possible to send a vCard from each contact stored in the phonebook.

vCards can be sent to another phone supporting vCard.



On a contact in the phonebook, please select the **Send by** option menu item (SMS or MMS).

If the vCard is sent successfully, an information message is displayed.

vCards can be sent as an attachment to an SMS or MMS message. See **Compose MMS** on page 32.

Receiving a vCard

When a vCard is received enclosed to an SMS or MMS message, the message « You have received 1 message » is displayed.

Open the MMS from the inbox. Go to **Options** by pressing the  key, and select **Extract**; select the vCard among the list of objects attached to this MMS, and add this contact to the phonebook by pressing the  key. A message is displayed to confirm the action.




From this menu, you are able to send SMS and MMS. MMS is a Multimedia Message Service, which allows you to enclose audio files, images and other rich content to your messages; these messages can even be composed of several slides. MMS are differently invoiced than SMS are. Please contact your network provider to get more information on their cost.

This menu has been compiled in collaboration with magic4™.

magic 4

Compose SMS

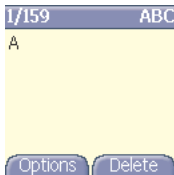

On the **Messages** menu, please select the **Compose** menu and validate. Choose the **SMS** option.

The language used is the one selected on the display of the phone (if the language selected is not compatible with the Easy Message T9™, the English language will be automatically selected).

When typing a text, a counter showing the number of characters deducted is displayed at the top of the screen (depending on model). This counter is not displayed if an icon or sound is inserted into the SMS.

When the text has been entered, the **⏏** key (**options**) can also be used to access the functions offered:

Send is used to send the message by entering the correspondent's number

ABC Mode, 123 Mode (see page 31)

T9 options (see page 30)

Save is used to save a draft in memory

Send options is used to indicate the message format, the period of validity, or to activate/deactivate a reply

Cancel is used to delete all text entered


Activate/deactivate zoom is used to modify size of characters

Formatting is used to enrich a text

Insert to insert an image or sound into your message (see page 32).



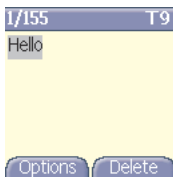

The Easy Message T9™ mode helps you to easily write your short messages.



Using T9 Mode

Press once the key corresponding to the letter chosen and make the word by continuing to press the keys corresponding to the various letters without paying attention to the display: the word is highlighted.

If you agree on the word proposed on the screen, press the **0** key to validate it, and go on writing the next word.

However, the same sequence of keys pressed can correspond to several words, existing on the dictionary. If the word that appears is not the word you expected, press the  key indicating  to scroll through the words corresponding to this key sequence.







Once you agree on the word proposed on the screen, press the **0** key to validate it, add a space and go on writing the next word.

If the word you are expected is not proposed, please add characters until you get the message **Add the word?** Press **Yes** and validate if the word displayed suits you or modify this word before adding it in the dictionary.



In the input screen, the  key is used to access other input options.

When composing a message:
The navigation keys assume the following functions:




-  **key:**
Last word
-  **key:**
Next word
-  **key:**
Previous line
-  **key:**
Next line
-  **key:**
Deletes last letter
-  **key:**
Message options
- **# key (long press):**
Zoom mode (changes size of characters)
- **# key (short press):**
Access to symbol table

Input modes

The **ABC mode** is used to write words that do not exist in the dictionary. To get a particular character, please press the corresponding key several times: the characters will scroll down on your screen. **Mode 123** is used to add numbers.

Insert mode is used to add symbols, animations, pictures, melodies, visit cards and calendar. Images and sounds can be of two types: pre-defined or customized. Pre-defined images and sounds are smaller, especially suited to exchanging messages.

Upper case

A short press of the   key will display the next letter in upper case. Two short presses on the   key allow you to switch to upper case editing mode for the whole message.

Punctuation characters


Punctuation characters are obtained thanks to key **1** (except in **123 mode**), or with the help of **Insert** mode (fast access by briefly pressing the **#** key).

Accented characters

Accented characters are generated automatically in T9 mode. In ABC mode accented characters are available by pressing the key supporting the non-accented character in succession.



Compose MMS

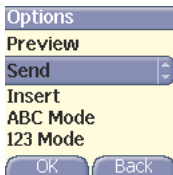

On the **Messages** menu, please choose the **Compose** menu and validate. Select the **MMS** option.

When the text has been entered in the **body** screen, the **Options** key (options) can also be used to access the functions offered:

The functions offered are:

Send Send, Send and receive all, send later.

Insert to insert multimedia objects such as images, animations and sounds into your message.

ABC Mode, 123 Mode to edit and format the text.

T9 options (see page 30).

Slide... to compose a slideshow of the multimedia objects.

Warning: some message sendings may fail if the message contents is too big.

Preview to see a presentation of the multimedia objects.

When you choose to send your message, the different options are the following:

Subject: please write the subject of your MMS.

To: this option allows you to select the receiver.

Cc: this option allows you to select the receiver(s) in copy.

Bcc: this option allows you to select the receiver(s) not visible by the receivers in copy.

Send options: there are different options such as: **Priority:** allows you to assign a priority level to the message. **Request delivery:** allows you to select the reception of a request delivery.





Compose MMS

Saving your message

You can save your message as a draft by selecting « Save » from the options, when editing the Subject or the Body. You will be able to edit it later from the **Draft** menu.

Sending MMS messages

Once the MMS are sent, you have the option to save them in your Outbox.

It is recommended not saving them automatically: too many messages saved will quickly fill up the available memory and no further messages will be received.

Note: It is possible that the voice message format (.amr) is not supported by some PC. See your PC provider.

Receiving MMS messages

Three options are offered to retrieve your MMS: automatic, semi-automatic and manual options.

The « automatic retrieval » is automatically programmed in the phone. If you are using the network of another network provider, you will get a message informing you that an MMS has been received.

The « semi-automatic retrieval » gives you different options to retrieve the message.

If you only want to read it once using your own network, please select « Manual Retrieval ».



Receiving messages

When you receive a message, the phone will play the ring tone that you have selected, and the message icon  will come on the screen of your phone.

If you do not read the messages, this icon remains displayed on the screen. When it flashes, the memory is full.

Receiving icons, backgrounds or tunes can take several seconds. An icon is blinking when the download of your message is in progress.


Note that you have three different possibilities for receiving MMS: automatically, semi-automatically or manually; if « manual mode » is activated, then you will receive only a notification in your Inbox, meaning that a MMS is available on the MMS Server; select this notification, and read it when you want to retrieve the MMS from the server. For more details about automatic and retrieval modes, see « Sending options » on page 37.

Please contact your network provider to get more information on icons, backgrounds or tunes downloading.




Inbox

Received messages are stored in the SIM card or in the phone until you choose to delete them.

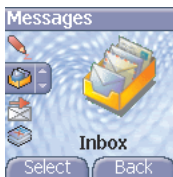

On the **Messages** menu, please choose the **Inbox** menu and **[Select]**.

Each message shows the presence of any attachments, the time and date the message was received and its size. Icons are used to describe the type of message (Multimedia , SMS .

Messages are listed in chronological order, the latest one being displayed first.

The quantity of Not Read and Not Retrieved messages is shown. Not Retrieved and Not Read messages are shown in bold.

Select a message and press the  key. Choose one of the options given.

Enclosures (pictures or sounds), which you receive, can be saved in order to be used later on (stored...).

You can consult them in the corresponding menus (WAP bookmarks in **WAP**, ring tones in **Sounds**, wallpapers in **Display**, and icons in **Call groups**).



Outbox

The Outbox is used to store all your sent and waiting messages.



Too many messages saved will quickly fill up the available memory and no further messages will be received.

On the **Messages** menu, please choose the **Outbox** menu and [**Select**].


For each message, its characteristics (shown with an icon) and the time (or date) of sending are displayed on the screen.

Select a message and press the **D** key.

Choose one of the options given: Delete sent, Read, Modify, Forward, Delete, Delete all.

Drafts

When you store a composed message, it is stored among the drafts.

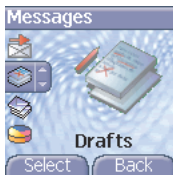

On the **Messages** menu, please choose the **Drafts** menu and [**Select**].


Select a message and press the **D** key. If you do not delete this message, it will remain as a draft and can be re-used even if you have already sent it.

Choose one of the options given: Delete, Read, Modify, Send.



Sending options

Several sending options are offered.

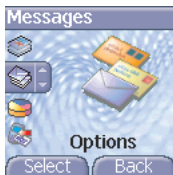

On the **Messages** menu, please choose **Options** and **[Select]**. Choose one of the options given: SMS or MMS.


The sending options which are proposed are: message centre number, store sent message, reply given, period of validity (during that period, the network provider will try to send the message), message format.

The MMS options are:

- **Store sent messages:** (it is highly recommended that you keep this function deactivated, in order to avoid a full memory),
- **Retrieval mode:** if you are in a poor coverage area, it may be more convenient to choose the manual retrieval mode which gives you the retrieve later option.
- **Priority:** selection of a priority to send a message.
- **Request delivery report:** request of a delivery report when sending a message.
- **Period of validity**

Advanced settings:


- **Send delivery report:** sending a delivery report when receiving a message.
- **MMS server:** to select another MMS provider, or set the parameters of a new MMS provider.
- **Sender visibility:** you choose to display or not your phone number on the receiver's phone screen, with that message.
- **Maximum size**

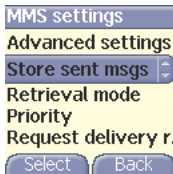



Memory

You may know the memory available for saving messages.

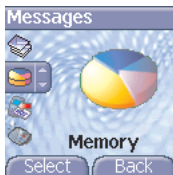


On the **Messages** menu, please select the **Memory** option and [**Select**]. Choose one of the options given: SMS or MMS.

The SMS screen displays the memory available either on the SIM card or on the phone.

The MMS screen displays how much memory is used in Kbytes.

Local information

This menu is used to activate reception of local information broadcast by the network.

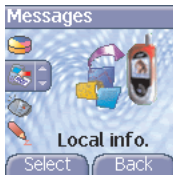

You can choose whether you want to receive this information or not (please contact your network provider).

On the **Messages** menu, please select the **Local info.** menu and [**Select**].



Calling voicemail

This function allows you to call your voicemail.



On the **Messages** menu, please select the **Call Voice Mail** option and **[Select]**.

Note: if your voicemail number has not been entered yet, you must enter it in the menu **Settings/Calls/Voicemail**.



This menu gives you easy access to your favourite pictures and sounds.

My Pictures

This menu gives you access to your pictures.



On the **Multimedia** menu, please select the **My Pictures** menu and **[Select]**.

The pictures stored are displayed on the screen. Please, use the **⌵ ⌶** keys to select one of them.

Once you have selected a picture, press the **⏎** key to validate the **Options** menu.

Select one of the options in the list with the **⌵ ⌶** keys and validate.

- **Send by MMS**: makes it possible to transmit a picture (NB: you may not send any copyrighted picture).
- **Use as**: allows you to use the picture as a wallpaper or screen saver,.
- **Delete**: allows you to delete a picture,
- **Delete all**: allows you to delete all pictures,
- **Rename**: allows you to rename a picture,
- **Properties**: properties of the picture selected.

You can import or export pictures to or from a computer using My Pictures And Sounds (MPAS), available from www.planetsagem.com (which leads to a cost).

Pictures Menu: allows you to delete all the pictures stored.



My Sounds

This menu gives you access to your sounds.



To access your sounds, use the same procedure as for your pictures (see the **My Pictures** menu).

You can import or export sounds to or from a computer using My Pictures And Sounds (MPAS), available from www.planetsagem.com (which leads to a cost).



Audio Menu: allows you to delete all the sounds stored.

Memory

This menu indicates the memory size used by the different features of your phone.



On the **Multimedia** menu, please select the **Memory** menu and [Select].

Use the   keys to select the different features using memory. You can see the memory capacity used by each individual feature.



WAP (Wireless Application Protocol): a protocol that translates the Internet language into WML language that can be read by a phone. The WAP protocol allows you to log onto certain Internet sites. You can log onto sites that allow you to download tunes, icons or animated screensavers to your phone.

The WAP Menu

The WAP navigator is under licence:



RSA Data Security

The WAP navigator is the exclusive property of Openwave. For this reason, it is forbidden to modify, translate, disassemble or even decompile all or part of the software that makes up the navigator.

You can activate the magnifying glass to increase the size of the characters by holding down the # key.

The **Services** menu, a dropdown menu, can be accessed at all times when navigating through WAP pages pressing the key.

Consult the Services Menu using the key. It contains the following sub menus:

Welcome: logs onto the home page.

(carries the name of your access provider)

Bookmarks: is used to save in a phonebook the names and addresses of Internet sites in order to make the access easy.

You can receive bookmarks from messages and add them to this list (see chapter on SMS).

You can also send messages by SMS: select a bookmark, press the key [**Options**], then select **Send by message**.

Go to URL: this menu allows you to input an Internet address directly.

Inbox: this menu allows you to check the messages sent by the Internet site.

Save items: is used to save a WAP site items.

Snapshots: takes a snapshot of the currently displayed page.

History: backward and forward navigation of the pages displayed are kept in memory.

Reload: refreshes the current page.

Reset cache: clears the stored information on previous connections.



Advanced...: choose one of the following advanced settings

- Settings
- Show URL
- Disconnect
- Circuit prompt (if user wants to confirm each logon)
- Security (is used to access information on making WAP connections secure)
- Delete Cookies

About...: information on the browser.

Exit: returns to the phone's home page.

Configuring WAP parameters

Select the **Advanced...** menu, then the **Settings** menu.

Choose from the proposed sub-menus:

Connection settings is used to select or modify your access provider's logon parameters or configure the parameters of other access providers.

The active access service is preceded with a star.

Configuration of WAP and GPRS parameters:

All information to be entered in the parameters are provided by your operator or access provider.

Choose the access service, then press **Options**.

Enter the title and validate.

Enter Internet address of home page and validate.

Enter parameters of preferred connections:

- **GSM if not GPRS** (by default): the logon to WAP services uses the GPRS as a priority. However, in the event of unavailability of the GPRS network, the GSM network is used to establish the link.
- **GPRS**: the logon to WAP services uses the GPRS network exclusively.
- **GSM**: the logon to WAP services uses the GSM network exclusively.




The **GSM parameters** to be entered are:

- Login
- Password
- IP address of WAP gateway
- Port type (secure or insecure)
- Dial-up number
- Mode (digital, analog or automatic)

In automatic mode access can be gained to the operator's network by a digital link and an analog link to a different network (in roaming).

The **GPRS parameters** to be entered are:

- Login
- Password
- IP address of WAP gateway
- Port type (secure or insecure)
- APN: if no APN has been defined, press the  key (**Options**) then the APN menu. Select or add an APN.


Once all the settings have been entered, you can activate the chosen access provider. Select him from the list. Validate your choice.

Linger timer is used to choose the time after which the call is automatically disconnected if you have forgotten to log off from a service.



WAP Logging on

The connection to a WAP service on the GPRS network is not cut if an incoming call is received. You can answer the call.

Using the **Welcome** menu, you can log onto your access provider's WAP site by pressing the  key.

If you are logging onto the GSM network, the @ symbol flashes, the metering of the cost of the call starts as soon as it stops flashing.

Downloading sounds and images

Some WAP sites allow you to download tunes, icons or animated screensavers. Once downloaded, they are stored in your phone's memory. You can then save them in your phone (same operation as used for downloading using messages).

WAP Logging off

To log off, press the  key. The logoff happens automatically after a few seconds of inactivity if you forget to log off. This period is defined by the linger time setting.

GPRS

A flashing icon indicates that the phone is logging onto a GPRS network. A non-flashing icon indicates that the GPRS network is available; if the icon is dark, it indicates that the phone is logged onto the GPRS network: see page 43 for the attachment options.

This icon is not displayed if the GPRS network is not available or if the SIM card inserted in your phone does not include the GPRS service. It may also disappear when accessing WAP services if the connection uses the GSM network instead of the GPRS network.



The games being designed by Java™, many compatible games can be downloaded in your phone.



With the **Games** menu you can use the two games already installed (depending on model) and install others. For that, display the **More Games** menu: it gives access to the WAP portal from which you can download games connecting on internet sites.

Settings/Connection/Menu: this menu allows you to save sites addresses from which you can dowload games.

Delete all: deletes all the games you have downloaded.

gameLoft



This menu gives you access to your diary and get to a day, week, month or specific date. It lets you add events, access the global actions for all the events and manage them by event category.


Calendar menu



This menu lets you add events, manage events by category, see the available memory and delete all the events.

On the **Organizer** menu, please select the **Calendar menu** menu and **[Select]**.

- **Add event:** allows you to add events according to their categories. Select one type of event and validate. Fill in the different items. Save the event.
- **Clean-up:** allows you to schedule the deletion of events that took place more than one day, week or month ago.
- **Memory:** allows you to view the memory capacity used by the different functions of your diary.
- **Delete all :** allows you to delete all the events from your diary.
- **Categories:** allows you to see the different event categories, assign a specific ring tone to each individual category, know the number of events in each category and see them.

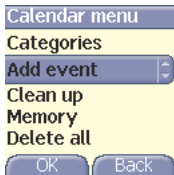

The other menus are:

- **See month:** allows you to access events on a month-by-month basis.
- **See week:** allows you to access events on a week-by-week basis.
- **See today:** allows you to access the events for the current day and the actions possible on any event (see, modify, delete and send).
- **See date:** allows you to access events at a specific date.



Sending a vCal

You can send a vCal from each diary event. Yet, this function is available only on certain models of phone.

You can send vCals to another phone using MMS depending on your phone and the recipient's phone.

On the See today list, please select an event and in theToDo event actions menu list, select Send.

Then choose between MMS or serial link for the type of sending and confirm.

For MMS deliveries, you should in addition select your contact information (phone number or Email address) before confirming.

If you receive a call while you are sending a vCal, the call will have precedence.

Receiving a vCal

The vCal receipt mode differs with the type of delivery: By MMS, you receive a message you have to open to extract the vCal. You cannot add the event to your diary until you have saved it.

You can assign a different beep to each diary event.

You can also assign a different ring tone to each diary event category.

Settings



This menu allows you to set your phone.

Sounds

This menu allows you to customize the ring tones on your phone and to activate beep and vibrate modes.

Volume and ring tone



This menu allows you to allocate a ring tone to each type of event.

On the **Sounds** menu, please select the **Ring tones** menu and **[Select]**. Select one of the events given: Alarm, Calls, Messages, Local Info and Fax and validate.


Select the **ring tone** from the proposed list and validate.

Adjust the **volume** using the **▼ ▲** keys and validate.

You can deactivate the sound by pressing the **★ s** key.

Voice Calls: the ring tone selected here will be played only when receiving a call from a contact stored without any call group. Otherwise, the ring tone selected for this call group will be played.

Vibrate

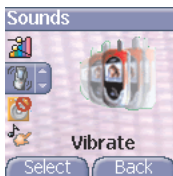

This menu allows you to activate the vibrate mode for calls.

On the **Sounds** menu, please select the **Vibrate** menu and **[Select]**.

Select the vibrate mode from the proposed choices (ring tone and vibrate, vibrate only, vibrate inactive or vibrate plus ring tone) and validate.

Warning: vibrate mode is not a priority regarding the ring tone selected on the call group. To make vibrate mode apply in general, switch to Silent mode.



Silent mode




This menu allows you to switch to Silent mode.

On the **Sounds** menu, please select **Silent mode** and **[Select]**.

Activate or **deactivate** Silent mode and validate.


Silent mode can also be accessed via the initial screen by holding down the * 7 key.

 *When the phone is in silent mode, the relevant icon appears on the initial screen.*

In this mode, the ring tone will not function, except for the alarm clock.

Note: if you have activated the silent mode, it does not remain after switching off your phone.

Beeps

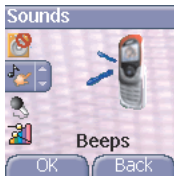

This menu allows you to activate a beep for each type of event.

On the **Sounds** menu, please select the **Beeps** menu and **[Select]**.

Select the type of beep you want to allocate from the proposed choices (Key beep, Network beep or Battery beep) and validate. Activate or deactivate the beep and validate.

If you select key beeps, different options are given.



Recorder



These menu allows you to record you own melody.

On the **Sounds** menu, please select the **Recorder** menu and **[Select]**.

Record your melody or your voice by means of the microphone then save it.

Give it a name and validate. The new tone is saved in the list of ringtones and in **Multimedia/My Sounds**.

If you select the recorder by means of a programmable key, the sound is saved in the **Applications/ToDo**.

Display

This menu allows you to customize your screen by choosing a different presentation.



This menu allows you to choose the skin of your phone, i.e. define its look (text font, colors, default animation, background image...).

On the **Display** menu, please select **Skins**.

Select the desired skin and validate.

Skins are not downloadable but you can download screensavers and boot mode animations without changing those included by default with the skin.



Wallpaper



This menu allows you to display the background picture you want on your phone.

On the **Display** menu, please select the **Wallpaper** menu and **[Select]**. Select the Wallpaper and **Visualise**. The picture appears in the background of the screen.

Press the **↵** key to validate this choice, or the **⬅** key to go back to choice.

Screensaver



This menu allows you to display an animation when the phone is in standby mode.

On the **Display** menu, please select the **Screensaver** menu and **[Select]**.

Select one of the screensavers given and **Visualise**.

The chosen screensaver appears on the screen, validate it.

Adjust the screensaver display time (more than 60 seconds) and validate. The screensaver comes on the screen each time the display time that has been selected runs off.

NB: the selected screensaver is active only if the **Eco**. mode is deactivated on the **Energy saving** menu.



Operator logo



This menu allows you to display your operator's logo on the initial screen.

On the **Display** menu, please select the **Operator logo** menu and **[Select]**.

Select **Activate** or **Deactivate** and press **OK**.

Languages

This menu allows you to choose your phone's display language.



On the **Settings** menu, please select the **Languages** menu and **[Select]**.

Select your language and validate.

If you select **Automatic**, the language used will be the one relative to your SIM card.



Calls

The **Calls** menu allows you to manage all the calls functions (call forward, displaying numbers, call waiting, voicemail number, etc.).

Call forward



Depending on your subscription, this service allows you to forward incoming calls to a different number or to the voice mailbox.

On the **Calls** menu, please select the **Call forward** menu and **[Select]**. Choose the type of forwarding you want from the options available.

View last calls



This menu allows you to access the list of last numbers used.

On the **Calls** menu, please select the **View last calls** menu and **[Select]**.

For every phone call are displayed on the screen:

- its characteristics (shown with an icon),
- the time (or date),
- its duration.

Select a call from the list and validate.


Select one of the options given: Call, Store in your phonebook, Send a message, Delete, Delete all.

You can also make the call by pressing the **↵** key.

Fast access to the list of calls from the initial screen: press the **↵** key.



Counters

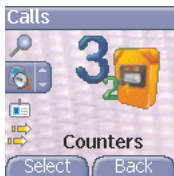

This menu allows you to consult the duration of the up calls.

It can also be used to check the volume of data exchanged in GPRS.

On the **Calls** menu, please select the **Counters** menu and **[Select]**.

Select one of the options given.

Display number



This menu allows you to modify the status of the display number function.

On the **Calls** menu, please select the **Display number** menu and **[Select]**.

Select one of the options given: Anonymous mode, My number, Callers' number.

Anonymous mode

You have the facility to mask your number on the phone of the person you are calling.

Preset: network default mode.

No: you choose not to activate anonymous mode and then to display your number.

Yes: you choose to active anonymous mode and then not to display your number.



Call waiting



During a call, you may be informed that a caller is trying to reach you: you hear a special tone. The caller's identity is displayed on the screen (name or number).

(Operator-dependent service)

On the **Calls** menu, please select the **Call waiting** menu and **[Select]**.

You can **activate**, **deactivate**, or **consult the status** of the call waiting service in order to check if it is active or not.

During a call, if a second caller tries to contact you, the screen displays the call warning.

Automatic redial



This menu allows you to call back a caller you have not managed to reach.

On the **Calls** menu, please select the **Auto redial** menu and **[Select]**.

You can set the redial function to inactive, on request or systematic.

If you choose **On demand**, your phone will offer to redial your caller automatically if his number is busy.



Blacklist



The blacklist is used to limit failures on automatic calls (calls generated by the automatic redial function or by applications: data, fax for example).

On the **Calls** menu, please select the **Blacklist** menu and **[Select]**.

When several automatic calls failed with a number (number busy or unknown), this number is put in the blacklist and no automatic call will be done with this number any more until you delete it from the blacklist.

Note: this function does not apply to the calls performed manually.

Voicemail



This function is used to record your answer phone number.

This number will be used during a call to the voice mailbox using the programmable keys.

On the **Calls** menu, please select the **Voicemail** menu and **[Select]**.

Enter your answer phone number and validate.

ALS

The ALS (Alternate Line Service) function allows you, depending on your subscription, to have two phone lines.

The number of the line selected (1 or 2) for the calls appears on the initial screen.



Security

This menu allows you to configure your phone's security settings.

Keypad locking



This menu allows you to lock the keypad to avoid unwanted key presses.

On the **Security** menu, please select the **Keypad locking** menu and **[Select]**.

Select **Activate** or **deactivate** and validate.

 The lock icon appears on the initial screen.

*This function is also available in the initial screen pressing the **★**, **§**, and **⏏** keys.*

PIN number



This menu allows you to activate and modify your phone's PIN.

On the **Security** menu, please select the **PIN number** menu and **[Select]**.

To modify the PIN, select **Modify** and **[Select]**.

Enter old PIN and validate.

Enter new PIN twice and validate.


To activate or deactivate the PIN, select the **Check PIN** menu and **[Select]**.

Enter PIN and validate.

Select **Activate** or **Deactivate** and validate.



PIN2 number

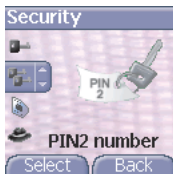

You have a second PIN number to allow you to access certain functions*.

* These functions may or may not be available depending on your SIM card.

Proceed as above in order to activate, deactivate or modify PIN number 2 of your phone.

Phone code



The Phone code menu allows you to activate the phone code so that it is requested and checked whenever the phone is switched on if a different SIM card is used. This code is automatically linked to the SIM card installed when the phone is activated, for example to protect the phone if stolen.

To activate or deactivate the phone code, select the **Phone code** menu and validate.

Enter 0000 (the factory code, by default) and validate.

Select **Activate** or **Deactivate** and validate.

To modify the phone code, select **Modify** and validate.

Enter old phone code and validate.

Enter new phone code and validate.

Enter phone code again to confirm it and validate.



Confidentiality



The Confidentiality function is used to delete numbers stored in View last calls and the SMS stored in the memory when a new SIM card is inserted into the phone.

This menu allows the activation of automatic deletion, after power off/on, for messages and/or calls stored in the phone.

On the **Security** menu, please select the **Confidentiality** menu and **[Select]**.

Select **Activate** or **Deactivate** and validate.

Operator



This menu allows you to modify the call barring.

On the **Security** menu, please select the **Operator** menu and **[Select]**.
Access to this service depends on your type of subscription.



Call barring



Call barring can be applied to ALL calls (incoming and outgoing), to all incoming calls when you are away from your home country (if roaming available).

This menu allows you to block the sending or reception of certain calls. Before you can use this service, a password will be provided by your operator when you take out your subscription.

On the **Security** menu, please select the **Call barring** menu and **[Select]**.

Select **Activate** or **Deactivate** and validate.

Access to this service depends on your subscription type.

Fixed dialling



This menu allows you to restrict the outgoing calls. The availability of this menu depends on your SIM.

On the **Security** menu, please select the **Fixed dialling** menu and **[Select]**.

Enter PIN2 number and validate.

Select **Activate** or **Deactivate** and validate.

Proceed as for any other phonebook.

When activating this function, only the numbers stored in the phonebook can be called.

This phonebook is linked to the SIM card, and its size depends on the card's capacity.



Cost



This menu allows you to control the cost of your calls ().*

On the **Security** menu, please select the **Cost** menu and **[Select]**.

The **Cost** menu (*) lets you check the cost of the last call you made and of all the calls you made since you last deleted them.


The **Delete costs** menu (*) lets you delete the cost of your last call and reset the cost counter after entering your PIN 2 code.

(*) WARNING

*Depending on how the networks and associated subscription cards are configured, some functions may be unavailable (these are marked out with *).*

Networks

This menu allows you to configure network preferences.

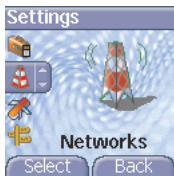

On the **Settings** menu, please select the **Networks** menu and **[Select]**.

Choose **Preferred** to view all the pre-registered networks.

Choose **Selection** to activate (automatically or manually) one of the networks accessible in the area in which you are located.

Choose **GPRS** to select the way you want to be attached on the GPRS network: always, or only when needed (when launching a data connection).





Others

Contrast



This menu is used to adjust screen contrast.

On the **Display** menu, please select the **Contrast** menu and **[Select]**.
Adjust the contrast using the Up  or Down  keys.

Energy saving



This function is used to deactivate the screen backlight and to select the economic mode.

On the **Others** menu, please select the **Energy saving** menu and **[Select]**.

Backlight: choose one of the options given: Full backlight, Screen only, and **[OK]**.

Economic mode: choose one of the options given: Deactivate, Activate, and **[OK]**.

When choosing the economic mode, the screen goes out (standby mode).

To quit economic mode, press the  key.

NB: if you selected an animation in the **Display/Screensaver** menu and activated the economic mode, this will be activated as the priority and the screensaver will not appear.



Shortcuts

This menu allows you to allocate functions to the programmable keys.



(Function available depending on model)

This menu allows you to customize the settings of your phone to make it as convenient as possible for you to use.

On the **Settings** menu, please select the **Shortcuts** menu and **[Select]**.
Select the key that you wish to modify and validate.
Choose the function that you want to allocate to this key and validate.



Date / Time

Set Date/Time



This menu allows you to set the date and time of your phone.

On the **Date / Time** menu, please select **Set Date/Time** and **[Select]**.


Date: set the date by entering it directly in digital form or by using the **⏪** keys.

Use the **⏩** (or **⏪**) key to access the next (or previous) entry field.

Once the date is correct, validate it.

Time: same procedure as for setting the date.

Display

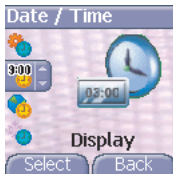

This menu allows you to select the date and time display type.

On the **Date / Time** menu, please select **Display** and **[Select]**.

In the list that appears, select the desired display type between:

- Analog,
- Digital,
- None,

by using the **⏪** **⏩** keys and validate.



Time zone



This menu allows you to change time in relation to the GMT time.

On the **Date / Time** menu, please select **Time zone** and validate.

Choose the time of the country desired by calculating the time from the GMT time.

Summer time



This menu allows you to set your phone to the summer/winter time.

On the **Date / Time** menu, please select 1 h, 2 h **Summer time** or **Winter time** depending on the season, and validate.



Active flip



On the **Settings** menu, please select **Active flip** and [**Select**].

By default, calls are answered by opening the flip and you will just need to close it to hang up. That facility can be deactivated.


This menu allows you to modify these settings:

- On opening: this menu enables you to activate or not the option of taking the call by opening the flip.
- On closing: this menu enables you to activate or not the option of hanging up by closing the flip.

Connectivity

You can also connect it to your computer in order to receive data or fax through GSM or GPRS network (depending on subscription): configure the connection parameters of your computer using the Wellphone CD supplied as an accessory.

Serial Speed

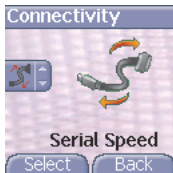

On the **Connectivity** menu, please select the **Serial Speed** parameters menu and [**Select**].

The **Speed** menu enables you to select the speed to be used for data exchanges via your phone's serial port. Except for specific requirements, it is advisable to stick to the default setting: **Automatic**.



Menu Hot-line

This menu is used to provide information to your operator if an intervention on your phone is necessary.



On the **Settings** menu, please select the **Menu Hot-line** parameters menu and validate.



The Java™ function allows you to download applications and utilities in your phone.

Downloading is done through the WAP function.

Please go to the **Applications** menu to use the applications already installed or install others.

Services

This item may not be present on your phone's menu, as it depends on your SIM.

ToDo

ToDo menu



This menu allows you to add ToDo's, access category-based Todo management and delete all the ToDo's.

On the **Applications** menu, please select the **ToDo** menu and confirm your choice.

Select one of the actions in the list with the \blacktriangledown \blacktriangleleft keys and validate.

- **Memory**: allows you to view the memory used by the different functions of your ToDo.
- **Create ToDo**: allows you to add ToDo of the text or voice type. Select one type of ToDo and validate. Fill in the different items. Save the ToDo.
- **Categories**: allows you to see the different ToDo categories, assign a specific ring tone to each individual ToDo, know the number of ToDo's in each category and see them.
- **Delete all**: allows you to delete all the ToDo's from your ToDo.



ToDo actions menu



This menu allows you to do all the actions possible on any ToDo.

On the **Applications** menu, please select the **ToDo** menu, choose a specific ToDo in the list and validate.

Select one of the actions in the list with the **▼ ▲** keys and validate.

- **Delete**: allows you to delete the ToDo.
- **See ToDo**: allows you to see the ToDo.
- **Modify ToDo**: allows you to modify the ToDo properties.



Sending a vCal

You can send a vCal from each Todo task. Yet, this function is available only on certain models of phone.

You can send vCals to another phone using MMS depending on your phone and the recipient's phone.

On the task list (Todo main menu), please select **a task** and in the Todo task actions menu list select **Send**.

Then choose between MMS for the type of sending and confirm.

When sending MMS, please select your contact information (phone number or Email address) before confirming.

If you receive a call while you are sending a vCal, the call will have precedence.

Receiving a vCal

The vCal receipt mode differs with the type of delivery: By MMS, you receive a message you have to open to extract the vCal. You cannot add the event to your diary until you have saved it.

You can assign a different beep to each Todo task.

You can also assign a different ring tone to each Todo task category..



Exchange of data with a PC

Working from a PC, you can save/edit contacts, events and tasks stored in your phone.

To do this, you will need to connect your phone to the PC by means of a suitable data cable.

Next, you will have to install the Wellphone software supplied with your phone or available from <http://www.wellphone.com>. This software will also enable you to save your contacts, events and tasks by means of copy/paste.

Working from a PC, you can save/edit ring tones not copyrighted stored in your phone.

To do this, you will need to connect your phone to the PC by means of a suitable data cable.


Next, you will have to install the "My Pictures and Sounds" software (available from www.planetsagem.com site).

Remark: If a call comes in during an exchange of data with your PC, the link will be interrupted and will have to be manually re-started.







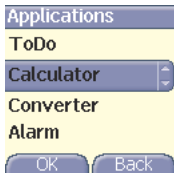


Calculator

This menu allows you to use your phone as a calculator.



On the **Applications** menu, please select the **Calculator** menu and [OK].

You can use the calculator thanks to the following keys:


-  **Up key:** Add
-  **Down key:** Subtract
-  **Right key:** Multiply
-  **Left key:** Divide
-  **Left programmable key:** Equals or convert
-  **Right programmable key:** Delete
-  *** key or #:** Decimal point.

*If no calculations are being run, the  key allows you to use the value in the **converter** directly.*



Converter

This menu allows you to convert one currency to another.

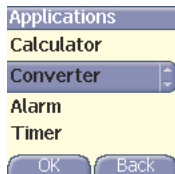

On the **Applications** menu, please select the **Converter** menu and [OK].

Enter a value and press the \blacktriangle key to convert from one currency to another, or the \blacktriangledown key to convert back.

The \mathbb{D} key allows you to use the following options:

Rapid exchange

If the Rapid exchange is activated, the converter will work in the initial screen by entering the desired numbers and pressing the \blacktriangledown \blacktriangle keys to convert.

Exchange rate

Enter the exchange rate corresponding to the chosen currency.

Currency

Enter the two types of currency to be converted.


Go to calculator

This option allows you to use immediately the value converted in the **calculator**.



Alarm

This menu allows you to set and activate the alarm.

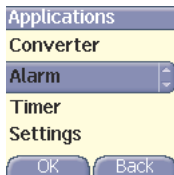

The alarm works even when the phone is switched off.

On the **Applications** menu, please select the **Alarm** menu and [OK].


Activate or **Deactivate** the alarm and validate.

Set the wake-up time by entering the numbers directly or using the   keys and validate.

 *The alarm icon appears on the initial screen.*



Timer

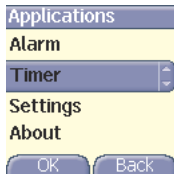This menu is used to set and activate the timer.



On the **Applications** menu, please select the **Timer** menu and [OK].

Activate or **Deactivate** the alarm and validate.

Set the duration (hours/minutes) by entering the numbers directly or using the   keys and validate.

 *The alarm icon appears on the initial screen.*

Care and safety information

Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

As a general rule, always switch off your phone wherever the use of a phone is prohibited.

Use of your phone is subject to safety measures designed to protect users and their environment.

Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures lower than - 10°C or higher than + 55°C.

The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures.

Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

Electrical safety

Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

Aircraft safety

When travelling by plane, you will need to switch your phone off when so instructed by the cabin crew or the warning signs.

Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network.

Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.

Explosive materials

Please comply with warning signs at petrol station asking you to switch your phone off. You will need to comply with radio equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.

Electronic equipment

To avoid the risk of demagnetisation, do not let electronic devices close to your phone for a long time.

Electronic medical equipment

Your phone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15 cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.

Hospitals

Always make sure that your phone is switched off in hospitals when so instructed by warning signs or by medical staff.

Road safety

Do not use your phone when driving. In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation.

Care and safety information

SAR

This phone complies with European requirements governing exposure to radio waves. Your phone is a transmitter/receiver. It has been designed and manufactured to comply with radiofrequency energy exposure limits recommended by the Council of the European Union and the ICNIRP for the entire population. These limits were established by independent scientific agencies on the basis of in-depth and regular evaluations of scientific studies. The limits include a large safety margin that is intended to guarantee the safety of all, irrespective of age or state of health.

The exposure standard for phones uses a unit of measure called the SAR, or Specific Absorption Rate. The SAR limit recommended by the Council of the European Union and the ICNIRP is 2 W/kg (*). Tests were conducted on a standardised usage position basis, with the phone transmitting at its maximum level certified in all its frequency bands. Although the standardised measurement is done at maximum power, the real SAR of the phone in use is generally very far below the maximum value.

The phone was designed to operate at the power level strictly necessary to ensure communication with the network. In general, the closer you are to a base station, the lower the power at which the phone will transmit.

Validation of conformity with European directive 1999/5 (directive R&TTE) is a pre-requisite for introducing any model of phone onto the market. Protection of health and the safety of the public and the user are a vital requirement of this directive. This model's maximum SAR value measured at the compliance test for use at the ear was 1.03 W/kg. Although differences may exist from one phone to the other and depending on position, all comply with European regulations.

Advice for limiting exposure to radiofrequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> WHO Fact sheet 193: June 2000.

(*) *The SAR limit for phones used by the general public is 2 watts/kilogram (2 W/kg) on average for 10 g of tissue. This value includes a large safety margin to increase protection and to take account of the variations in measurements. The SAR information may vary in different parts of the world, depending on declared national requirements and the frequency bands used by the network.*

Warranty

You must always use your phone for the purpose for which it was designed, under normal operating conditions. SAGEM SA declines all responsibility for any use outside of the scope of its designed purpose and for any consequences of this use. The software program developed by SAGEM remains the exclusive property of SAGEM SA. It is therefore highly prohibited to modify, translate, de-compile or disassemble this software program or any part thereof.

Usage precautions

Your phone allows you to download ring tones, icons and animated screensavers. Some of these items may contain data that may cause malfunctions of your phone or data losses (virus for example).

For this reason, SAGEM SA rejects all responsibility concerning (1) the reception of downloaded data or losses of the said data, (2) the impact on the operation of the phone and (3) damages resulting from receiving the said downloaded data or loss of said data. In addition, SAGEM SA states that a failure caused by receiving downloaded data that do not comply with the specifications set by SAGEM SA is excluded from the warranty. Consequently, the diagnosis and repair of a phone infected by the said downloaded data will be at the expense of the customer.

Any content that you download to your phone may be protected by copyright belonging to third parties and consequently you may not have the right to use this content or its use may be restricted. Consequently it is up to you to ensure that you have permission, such as under the terms of a license agreement, to use any content that you download. Furthermore, SAGEM SA does not guarantee the accuracy nor the quality of any content that you download. You alone are responsible for the content that you download to your mobile phone and how you use it. SAGEM SA cannot be held responsible for this content nor for its use.

It is your responsibility to ensure compliance, at your own expense, with the laws and regulations applicable in the country where you use your phone.

Warranty conditions

Whenever you wish to make use of the warranty, please contact your vendor and present him with the purchasing paperwork that he gave you.

If a fault occurs, he will advise you.

1.

The new phone (excluding consumables), including new accessories bundled with the phone, are guaranteed by SAGEM SA, parts and labour (apart from travel) against any manufacturing fault for a period of twelve (12) months with effect from the sale of the phone to the customer, on presentation of the paperwork stating the purchase date of the phone.

Phones that have been repaired or replaced as standard during the warranty period stated above are guaranteed (parts and labour) until the later of these two dates:

Expiry of the guarantee period of twelve (12) months stated above or three (3) months with effect from the date of support provided by SAGEM SA.

Your legal rights under the terms of applicable national law as well as your rights in relation to your retailer, as set out in the sales contract, remain applicable and are not in any way affected by this guarantee.

In any disputes, the phone is covered by the legal warranty against the consequences of faults or hidden defects in compliance with articles 1641 and subsequent of the French civil code.

Warranty

2.

All faulty phones under warranty will be replaced or repaired free of charge at SAGEM SA's option (with the exclusion of repair of any other damage), once it has been specified that the work required for the application of the warranty will be done in a workshop and that the return costs (transport and insurance) of the phone to the address to be indicated to it by the SAGEM SA after-sales service, whose phone number will appear on the delivery note, will be charged to the customer. Subject to essential legal provisions, SAGEM SA does not accept any warranty, explicit or implicit, other than the warranty provided expressly in this chapter, nor shall SAGEM SA accept responsibility for any immaterial and/or indirect damages (such as loss of orders, loss of profit or any other financial or commercial damage) under the warranty or not.

3.

The acceptance of a phone under warranty demands that a purchase document that is legible and without modification, stating vendor's name and address, date and place of purchase, type of phone and IMEI, are attached to the warranty, and that the information on the phone identification label is legible and that this label or any other seal has not been tampered with.

The warranty applies in normal conditions of use.

Prior to sending the phone for repair, it is the customer's responsibility to backup at his expense the customized data stored in the phone (phonebook, settings, wallpapers). A list of backup facilities can be provided by SAGEM SA on request. The responsibility of SAGEM SA cannot be invoked if damage occurs to customer files, programs or data. The information or operating elements and the contents of files will not be re-installed in any case in the event of loss.

SAGEM SA may decide, at its option, to repair the phone with new or reconditioned parts, replace the phone with a new phone or, in any dispute, a phone in good working condition. During its work SAGEM SA reserves the facility to make, where necessary, any technical modifications to the phone where these modifications do not adversely affect its initial purpose.

Faulty parts to be replaced during a repair under warranty will become the property of SAGEM SA.

The phone repair and standstill time during the warranty period may not lead to an extension of the warranty period as stated in article 1 above, provided no other vital provisions have been agreed.

The application of the warranty is subject to the full payment of the sums due for the phone when the request for support is made.

4.

The following are excluded from the warranty:

Breakdowns or malfunctions due to non-compliance with the installation and use instructions, to an external cause of the phone (shock, lightning, fire, vandalism, malice, water damage of any type, contact with various liquids or any harmful agent, unsuitable electric current...), to modifications of the phone made without the written consent of SAGEM SA, to a servicing fault, as described in the documentation supplied with the phone, to lack of supervision or care, to poor environmental conditions of the phone (especially temperature and hygrometry, effects of variations in electric voltage, interference from the mains network or earth) or even due to a repair, a call-out (opening or trying to open the phone) or to servicing done by personnel not approved by SAGEM SA.

Damage resulting from inadequate packaging and/or poor packing of the phone sent back to SAGEM SA.

Normal wear and tear of the phone and accessories.

Warranty

Communication problems linked with a poor environment, especially:

Problems accessing and/or logging onto the Internet, such as breakdowns of the access network, the failure of the subscriber's or his correspondent's line, transmission fault (poor geographic coverage by radio transmitters, interference, disturbance, failure or poor quality of phone lines...), a fault inherent to the local network (cabling, file server, user phone) and/or transmission network fault (interference, disturbance, failure or poor quality of the network...).

Change of parameters of the cellular network made after the phone was sold.

Supply of new software versions.

Current servicing work: delivery of consumables, installation or replacement of these consumables...

Call-outs for phone or software modified or added without the written consent of SAGEM SA.

Faults or disruptions resulting from the use of products or accessories not compatible with the phone.

Phones returned to SAGEM SA without having complied with the return procedure specific to the phone covered by this warranty.

The opening or closing of a SIM operator key and call-outs resulting in the non-operation of the phone resulting from the opening or closing of SIM operator key done without the agreement of the original operator.

5.

In the cases of warranty exclusion and of expiry of the warranty period, SAGEM SA shall draw up an estimate to be given to the customer for acceptance before any call-out. The repair and carriage costs (there and back) given in the accepted estimate will be charged to the customer.

These provisions are valid unless a special written agreement has been made with the customer. If one of the provisions turns out to infringe a legally essential rule that consumers could have the benefit of under the national legislation, this provision will not be applied, but all other provisions will remain valid.

End User Licence Agreement (EULA), for the software

CONTEXT AND ACCEPTATION OF THE AGREEMENT

You have acquired a Mobile Phone device ("DEVICE"), manufactured by SAGEM SA (SAGEM), that includes software either developed by SAGEM itself or licensed third party Software suppliers ("SOFTWARE COMPANIES") to SAGEM with the rights to sub-license it to the purchaser of the device. Those installed software products whatever their company of origin, and wherever the name of the company of origin is indicated of not in the DEVICE documentation, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA"), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT SAGEM FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

SOFTWARE includes software already installed on the DEVICE ("DEVICE Software") and Software contained on the CD-ROM disk ("Companion CD"), if any is supplied with the product.

GRANT OF SOFTWARE LICENCE

This EULA grants you the following licence:

DEVICE Software. You may use the DEVICE Software as installed on the DEVICE. All or certain portions of the DEVICE Software may be inoperable if you do not have and maintain a service account with an appropriate Mobile Operator, or if the Mobile Operator's network facilities are not operating or configured to operate with the DEVICE software.

COMPANION CD. If any is supplied, additional software for your personal computer is included with your DEVICE. You may install and use the software component(s) contained in the Companion CD only in accordance with the terms of the printed or online end user license agreement(s) provided with such component(s). In the absence of an end user license agreement for particular component(s) of the Companion CD, you may install and use only one (1) copy of such component(s) on the DEVICE or a single computer with which you use the DEVICE.

Security Updates. The SOFTWARE may include digital rights management technology. If SOFTWARE does contain digital rights management technology, content providers are using the digital rights management technology ("DRM") contained in the SOFTWARE to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. Owners of such Secure Content ("Secure Content Owners") may, from time to time, request manufacturers or SOFTWARE SUPPLIERS to provide security related updates to the DRM components of the SOFTWARE ("Security Updates") that may affect your ability to copy, display and/or play Secure Content through the SOFTWARE or third party applications that utilise the DRM. You therefore agree that, if you elect to download a licence from the Internet which enables your use of Secure Content, Suppliers may, in conjunction with such licence, also download onto your DEVICE such Security Updates that a Secure Content Owner has requested that SOFTWARE SUPPLIERS distribute. SAGEM and SOFTWARE SUPPLIERS will not retrieve any personally identifiable information, or any other information, from your DEVICE by downloading such Security Updates.

End User Licence Agreement (EULA), for the software

DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS

COPYRIGHT. All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and "applets," incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by SAGEM or the SOFTWARE SUPPLIERS. You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by SAGEM and the SOFTWARE SUPPLIERS

Limitations on Reverse Engineering, Decompilation and Disassembly. You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

Single DEVICE. The DEVICE Software is licensed with the DEVICE as a single integrated product. The DEVICE Software installed in the memory of the DEVICE may only be used as part of the DEVICE.

Single EULA. The package for the DEVICE may contain multiple versions of this EULA, such as multiple translations and/or multiple media versions (e.g., in the user documentation and in the software). Even if you receive multiple versions of the EULA, you are licensed to use only one (1) copy of the DEVICE Software.

Software Transfer. You may not permanently transfer any of your rights under this EULA with regard to the DEVICE Software or Companion CD, except as permitted by the applicable Mobile Operator. In the event that the Mobile Operator permits such transfer, you may permanently transfer all of your rights under this EULA only as part of a sale or transfer of the DEVICE, provided you retain no copies, you transfer all of the SOFTWARE (including all component parts, the media and printed materials, any upgrades , this EULA and, if applicable, the Certificate(s) of Authenticity), and the recipient agrees to the terms of this EULA. If the SOFTWARE is an upgrade, any transfer must include all prior versions of the SOFTWARE.

Software Rental. You may not rent or lease the SOFTWARE.

Speech/Handwriting Recognition. If the SOFTWARE includes speech and/or handwriting recognition component(s), you should understand that speech and handwriting recognition are inherently statistical processes; that recognition errors are inherent in the processes; and that errors can occur in the component's recognition of your handwriting or speech, and the final conversion into text.. Neither SAGEM nor its suppliers shall be liable for any damages arising out of errors in the speech and handwriting recognition processes.

NOTICE REGARDING THE MPEG-4 VISUAL STANDARD. The SOFTWARE may include MPEG-4 visual decoding technology. MPEG LA, L.L.C. requires the following notice:

USE OF THIS SOFTWARE IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE DIRECTLY RELATED TO (A) DATA OR INFORMATION (i) GENERATED BY AND OBTAINED WITHOUT CHARGE FROM A CONSUMER NOT THEREBY ENGAGED IN A BUSINESS ENTERPRISE, AND (ii) FOR PERSONAL USE ONLY; AND (B) OTHER USES SPECIFICALLY AND SEPARATELY LICENSED BY MPEG LA, L.L.C.

If you have questions regarding this Notice, please contact MPEG LA, L.L.C., 250 Steele Street, Suite 300, Denver, Colorado 80206; Telephone 303 331.1880; FAX 303 331.1879

End User Licence Agreement (EULA), for the software

Termination. Without prejudice to any other rights, SAGEM may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

Consent to Use of Data. You agree that SOFTWARE SUPPLIERS may collect and use technical information gathered in any manner as part of product support services related to the SOFTWARE. SOFTWARE SUPPLIERS may use this information solely to improve their products or to provide customised services or technologies to you. SOFTWARE SUPPLIERS may disclose this information to others, but not in a form that personally identifies you.

Internet Gaming/Update Features. If the SOFTWARE provides, and you choose to utilise, the Internet gaming or update features within the SOFTWARE, it is necessary to use certain computer system, hardware, and software information to implement the features. By using these features, you explicitly authorise SOFTWARE SUPPLIERS to use this information solely to improve their products or to provide customised services or technologies to you. SOFTWARE SUPPLIERS may disclose this information to others, but not in a form that personally identifies you.

Internet-Based Services Components. The SOFTWARE may contain components that enable and facilitate the use of certain Internet-based services. You acknowledge and agree that SOFTWARE SUPPLIERS may automatically check the version of the SOFTWARE and/or its components that you are utilising and may provide upgrades or supplements to the SOFTWARE that may be automatically downloaded to your Device.

Links to Third Party Sites. The SOFTWARE may provide you with the ability to link to third party sites through the use of the SOFTWARE. The third party sites are not under the control of SAGEM. Neither SAGEM nor its affiliates are responsible for (i) the contents of any third party sites, any links contained in third party sites, or any changes or updates to third party sites, or (ii) webcasting or any other form of transmission received from any third party sites. If the SOFTWARE provides links to third party sites, those links are provided to you only as a convenience, and the inclusion of any link does not imply an endorsement of the third party site by SAGEM or its affiliates.

Additional Software/Services. The SOFTWARE may permit SAGEM to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-based services components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE ("Supplemental Components").

If SAGEM provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.

SAGEM reserves the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.

EXPORT RESTRICTIONS. You acknowledge that SOFTWARE is subject to U.S. export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments.

End User Licence Agreement (EULA), for the software

UPGRADES AND RECOVERY MEDIA

- **DEVICE Software.** If the DEVICE Software is provided by SAGEM separate from the DEVICE on media such as a ROM chip, CD ROM disk(s) or via web download or other means, and is labelled "For Upgrade Purposes Only", you may install one copy of such DEVICE Software onto the DEVICE as a replacement copy for the existing DEVICE Software and use it in accordance with this EULA, including any additional EULA terms accompanying the upgrade DEVICE Software.
- **COMPANION CD.** If any Companion CD component(s) is provided by SAGEM separate from the DEVICE on CD ROM disk(s) or via web download or other means, and labelled "For Upgrade Purposes Only", you may (i) install and use one copy of such component(s) on the computer(s) you use to exchange data with the DEVICE as a replacement copy for the existing Companion CD component(s).

RESPONSIBILITIES

SUPPORT AND INFORMATION Should you have any questions concerning this EULA, or if you desire to contact SAGEM for any other reason, please refer to the address provided in the documentation for the DEVICE.

NO LIABILITY FOR CERTAIN DAMAGES. EXCEPT AS PROHIBITED BY LAW, SAGEM SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

FOR APPLICABLE LIMITED WARRANTIES AND SPECIAL PROVISIONS PERTAINING TO YOUR PARTICULAR JURISDICTION, PLEASE REFER TO YOUR WARRANTY BOOKLET INCLUDED WITH THIS PACKAGE OR PROVIDED WITH THE SOFTWARE PRINTED MATERIALS.

You are the owner of a SAGEM mobile phone which gives you the ability to download applications and games to be executed on your phone thanks to the built-in Java™ engine.

However, receiving applications from everywhere implies some basic knowledge of the possible effects of such download.

Thank you for spending a few minutes reading these pages: this will prevent you from performing action without measuring the consequences.

WARNING: When running a Java™ application, you may be prompted to grant access to protected features. These features are protected because using them could incur you cost, or involve your personal data. Read the security popup message carefully, to understand what feature is requested, and decide whether it is legitimate for the application to perform it. In case of doubt, don't hesitate to refuse access by selecting the "No" button!

The security configuration menu is an expert feature! You must know exactly what you are doing before attempting to change security parameters of a MIDlet. Misunderstanding changes may render MIDlet non functional and/or lead to higher risks for your private data or impact your airtime consumption. Any changes in the security configuration are done under your responsibility. In no case shall SAGEM SA and/or your network provider be liable for any damages deriving from or arising out of such changes in the security configuration.

You must be aware that applications downloaded to your phone could cause the phone to perform actions for which you will be billed, like making calls and sending SMS. Depending on your operator's billing policy, you may also be charged to download the application because of airtime consumption.

Security considerations

Java™ MIDP technology is an efficient way to provide powerful applications in mobile phones. It allows use, by "over the air" downloaded applications or games, of the great features built-in in a mobile phone (SMS sending and receiving, multimedia playback and recording, network access...).

All these MIDP 2.0 features cannot be simply exposed to any MIDlet installed in the handset: a careful access control system is implemented in the device to protect your private data and airtime consumption.

Access controls are gathered in 9 security groups:

- Network access (GPRS/GSM data airtime consumption, HTTP/web connections...)
- Auto invocation (MIDlet can wake up at a given time or when receiving a SMS)
- Phone call (ability to initiate a phone call)
- Local connectivity (IrDA or serial interfaces use by the MIDlet)
- Messaging receive (SMS, SMS-CB interception by a MIDlet)
- Messaging sending (SMS sending by a MIDlet)
- Read User data (Subscriber identity, Phonebook, Agenda read access from a MIDlet)
- Write User data (New phonebook or agenda entry)
- Multimedia recording (ability to control camera or microphone from a MIDlet)

According to the security status of an installed MIDlet (see below), each of these security groups has one among 5 possible authorization levels (listed from the more restrictive to the more permissive):

- Never
The security group completely prevents access to the protected features.
- Per use
Each time MIDlet tries to use protected feature, user is prompted to grant access.
- Per session
First time a MIDlet uses a protected function, user is prompted to grant access like in "Per use" authorization but access is granted until the MIDlet terminates.
- Single confirmation
The first time in the whole MIDlet life a MIDlet uses a protected feature, user is prompted to grant access. It remains valid until the MIDlet is removed from the handset.
- Always
The security group unconditionally grants access to protected features.

A MIDlet has a security status which is either "uncertified", or else "certified".

An "uncertified" status means that the source of the MIDlet could not be verified by the mobile phone at installation time. As far as the phone knows, the MIDlet could have been written by anyone.

A "certified" status means that the MIDlet was digitally signed by a known party, whose name is displayed by the mobile phone. This means that the mobile phone successfully authenticated the named party as the source of the MIDlet.

Security permissions are different for "uncertified" or "certified" MIDlets, and may be different for different sorts of named parties. Usually "uncertified" security permissions are more restrictive than "certified" ones.

Security configuration menu

When a MIDlet is installed in the mobile phone, default security authorizations are applied.

This default security configuration may be altered through the "Settings/Security" menu of an installed MIDlet.

Once in the "Security" menu, the security status of the MIDlet is displayed (see "Security considerations" paragraph above).

If you do not want to enter the security menu, simply select "Back" button.

You can proceed by selecting "Ok" button.

The menu displayed allows you to increase or decrease permissions currently applied to the current MIDlet for each of the security groups.

When you set a more permissive authorization to a security group than the current value, mobile phone asks you to confirm your increased risk exposure.

The maximum risk exposure increase is limited by the security status. Depending of the manufacturing configuration, it means, for example, that "Net Access" security group authorization cannot be set to a permissive value higher than "Session" for an "uncertified" MIDlet ("Single confirmation" and "Always" are unavailable in the security configuration menu) but an operator "certified" MIDlet may have all permission values available without any limitations.



Java™
POWERED

What is Java™?

Java™ is a new technology enabling use of powerful applications in the mobile phone area. Business applications and games are easily downloadable by the end-user on a Java™ featured handset.

Your mobile phone is a MIDP 2.0 compliant Java™ platform which implements WMA (SMS support) and MMAPI (Multimedia support) options, providing an exciting environment to run highly graphical, networked and intuitive MIDP applications.

Such applications may be, for example, a wide range of games and appealing applications like action and logic games, agenda, e-Mail reader, Web browser...

What is a MIDlet?

A Java™ application or a game designed to run in a mobile phone is named a MIDlet (MIDP applet).

A MIDlet is usually made of 2 files:

- The JAD file

- The JAR file

JAD file stands for Java™ Application Descriptor. It is a small file describing the content of a JAR file (version, vendor name, size...) and displayed by the mobile phone. **JAD file size is usually less than 2 kilo-bytes large.**

JAR file stands for Java™ Archive. It refers to the application data themselves (program, images, sound). **A JAR file may be up to 200 kilo-bytes large.**

***NOTE:** In rare circumstances, MIDlet vendors may provide no JAD file and the MIDlet is the JAR file alone. In such a case it is your only responsibility to evaluate the risk to download the JAR file without possibility of consulting the JAD file.*

Downloading a MIDlet (Java™ game or application)

MIDlets are easily downloaded in the mobile phone through the Games or Applications menus or through the WAP browser.

In almost all cases, you will first receive a JAD file which will be displayed on the screen.

Much care must be given in examining the content of the file as explained further.

When you select a JAD file, your mobile phone downloads it, displays data contained and prompts you to acknowledge the JAR file download.

The popup displays information below:

- Name of the MIDlet
- Version
- Size (JAR file size)
- Vendor name
- Security status (**IMPORTANT:** see "Security considerations" paragraph below)
- JAR file URL.

If you do not want to download the main data (JAR file), you shall refuse to acknowledge further airtime consumption by selecting "Cancel" (JAR file is not downloaded).

If you agree on the MIDlet installation, just select "Ok". The MIDlet is installed with security levels set to default values associated with its security status.

Before downloading an application, such a message may appear: "Your handset cannot identify the application, please be sure of the source of the application before installing the application".

You shall read carefully the next two paragraphs to fully understand Java™ MIDP security concerns.

Trademarks

Java™ and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Disclaimer

As explained hereabove, some downloaded items may contain data or may induce actions which may cause malfunctioning of your mobile phone or loss or corruption of data or abnormal increase of your airtime consumption.

YOU EXPRESSLY ACKNOWLEDGE THAT THE DOWNLOAD OF ANY APPLICATIONS INCLUDING JAVA APPLICATIONS OR GAMES IS DONE UNDER YOUR EXCLUSIVE RESPONSIBILITY. IN NO EVENT SHALL SAGEM SA, YOUR NETWORK SERVICE PROVIDER OR THEIR AFFILIATES BE LIABLE FOR ANY LOST PROFITS OR COSTS OF PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, LOSS OF PROFITS, INTERRUPTION OF BUSINESS, LOSS OF DATA OR FOR ANY SPECIAL, INDIRECT, INCIDENTAL, ECONOMIC, OR CONSEQUENTIAL DAMAGES ARISING UNDER CONTRACT, TORT, NEGLIGENCE, OR OTHER THEORY OF LIABILITY RELATING TO THE DOWNLOAD OF ANY APPLICATION BY ANY MEANS, INCLUDING JAVA APPLICATIONS OR GAMES IN SAGEM DEVICES. YOU EXPRESSLY ACKNOWLEDGE THAT ANY APPLICATIONS INCLUDING JAVA APPLICATIONS OR GAMES ARE PROVIDED STRICTLY "AS IS". SAGEM SA AND/OR YOUR NETWORK SERVICE PROVIDER EXTEND NO WARRANTY WHATSOEVER THERETO. SAGEM SA AND/OR YOUR NETWORK SERVICE PROVIDER DISCLAIM ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY OF MERCHANTABILITY, FITNESS OF ANY APPLICATIONS INCLUDING JAVA APPLICATIONS OR GAMES FOR A SPECIFIC PURPOSE, SATISFACTORY QUALITY, SECURITY OR OTHERWISE.

Troubleshooting

PROBLEM - SITUATION	ACTIONS
It is impossible to switch the phone on	Remove and replace the battery. If you still cannot switch the phone on, charge the battery: <ul style="list-style-type: none">- Put it on charge for at least 15 minutes before switching it back on again.- Check if the battery icon is scrolling up and down.- If so, the phone is charging.- If not, please take the charger out and put it back on again. Please check that the charging icon is scrolling up and down.- If you still cannot switch the phone on, please disconnect the charger, put it back on again and please repeat that manipulation several times.- If the charging icon is still not scrolling up and down, please contact your after-sales services.- When the charging icon has stopped scrolling up and down, the battery is charged.
Battery status unknown	The phone does not recognize the battery. Please check the position of the battery.
LOW BATTERY	This message is displayed when the battery becomes too weak. The phone switches itself off automatically. Put the phone on charge.
SIM not present	Check if the SIM card is present and properly positioned / inserted. Check the condition of the SIM card. If damaged, please go back to the operator's shop for advice. Contact your after-sales service if the message persists.
Incorrect PIN code	An incorrect PIN code has been entered. Be careful! Three incorrect PIN codes will block the SIM Card.
SIM BLOCKED	You have entered three incorrect PIN codes. Enter your PUK code to unblock your SIM Card. You must enter: **05*PUK*PIN*PIN# You must enter the PUK code (Personal Unblocking Key) given by your network provider. 10 errors will permanently block your SIM Card. You must then contact your network provider to get a new one.

Troubleshooting

PROBLEM - SITUATION	ACTIONS
SIM LOCKED	On network providers' request, the handset can only be used with some types of SIM cards. This message means that the SIM card you are using does not fit with the phone. Take the SIM card out, and switch it back on. If the message SIM not present appears on the screen, you will need to check its compatibility next to the place where you bought it. If not, please contact your after-sales service.
No call connection	Check that the number you have dialled is correct. If the letter R is displayed on the top right corner of the screen, without any network name displayed, only emergency services can be called. Check the status of your credit. Check that the SIM Card you are using offers the service you are requesting ; check if its validity has not expired. Check and deactivate the outgoing calls restriction when necessary. The network could be saturated. Try later. If the problem persists, please contact your Technical Helpdesk.
No receiving calls	Try to make a call in order to check that the phone and the networks are operational. Check and deactivate the permanent call forwarding (permanent call forwarding icon displayed on the screen). Check and deactivate the incoming calls restriction when necessary. If the problem persists, please contact your Technical Helpdesk.
Quality reception when calling	Avoid placing your fingers on the top of the phone, where the aerial is integrated: the phone will have to use full strength to establish a quality transmission.
Impossible to send message	Check that the message centre number is correctly entered. To do so, please select the menu Messages , select Options , select MSG centre n° and check the number entered. Please contact your network provider to get this number.

Troubleshooting

PROBLEM - SITUATION

No answer phonebox

If answer phone icon flashing

Wrong ring tone is played on call reception

Backlight does not work

In WAP context:
SERVER NOT ANSWERING
message


Logon to home page impossible

Operator name does not appear on screen

How do I (un)lock the keypad?

How do I switch to silent mode?

How do I activate zoom?

How do I delete the envelop that appears on the screen? 

How do I delete the answer phone that appears on the screen? 

How do I remove the written message at the bottom of the home page (1 call)

ACTIONS

Check that the SIM card does offer this service.

Program the call to be forwarded to answer phone using the information provided by the operator.

Check that the SIM card used offers this service. Try to make a call to check that phone and network are operational.

Check if the answer phone number is properly configured. To do so, go to the **Calls** menu, select **Voice mail** and check the number. Otherwise, enter your operator's answer phone centre number.

Call the answer phone and listen to the new messages to make it disappear.

Check the call group of the contact who has called: check the ring tone selected for this group.

Go into the **Settings/Others** menu, select the **Energy saving** menu and activate backlight.



Switch off and then switch phone back on.

In the **WAP** menu, **Clear the cache**.

Go into the **Settings** menu, select **Networks**, then **Selection**. Wait until the operator appears, select it and validate.

If the Operator logo is present (depending on model), activate the display (**Settings/Display/Operator logo**).

Press the   key, then the  key (validate).

Hold the   key down unless ring tone sounds, when a short touch is enough.

Can be activated only in SMS and WAP screens; hold down the **#** key.

If you have received a voice mail, please call your voice mailbox and follow the instructions given.

This answer phone means that you have received a voice mail: please call your voice mailbox and listen to it. Please follow the instructions given.

Press the   key to go back to the initial page without messages.

Troubleshooting

PROBLEM - SITUATION

How do I download ring tones?

How do I free up memory to download my objects (sounds, images)

How do I free up memory to receive new messages?

How do I free up memory to store new contacts in my Phonebook?

How can I increase the efficiency of my phone?

ACTIONS

Logon to one of the following site via your computer: www.planetsagem.com. These site offer to send ring tones to your phone in the form of an SMS. You can also logon to your operator's site. Once the SMS has been received, all you have to do is save it: validate the option « Save messages », the tune will then be added to your list. In addition, you can logon to some sites by phone.

Go into the **Multimedia** menu, select **My Pictures** or **My Sounds** then delete some objects.

Manage your Outbox carefully. It is recommended not saving them automatically: too many messages saved will quickly fill up the available memory and no further messages will be received. To delete them, please go into the **Messages** menu, select **Outbox** then delete some messages. Manage your **Inbox** carefully also.

It is highly recommended to manage your Phonebook carefully. If you have received pictures enclosed to a Vcard, please save or delete them.

The most efficient actions are as follows:

You can deactivate the backlight (in the menu **Settings/Others/Energy saving**), or please keep your phone safely in order to avoid pressing the keys unnecessarily: every time a key is pressed the screen lights up.

You can deactivate the screensaver or select the activation time to be more than every 300 s (the screensaver uses processing power).

Make sure that you don't obstruct the antenna with your fingers when using the phone (see page 14).

Customer Care

France	0 892 701 799 (0,34 €/mn)
United Kingdom	0870 24 05 613
Germany	01805 843 850
Spain	91 375 3376
Italy	800 800 485
Poland	0801 801 101
Netherlands	020 65 45 724
Belgium	02 62 77 016
Austria	01 36 02 77 16 64
Switzerland	02 25 67 53 99
Ireland	1 890 924 061
Portugal	21 316 41 35
Sweden	08 519 923 21
Denmark	0 82 33 28 52
Czech Republic	855 555 600

Customer Care e-mail address: support.mobiles@sagem.com

Web sites: www.sagem.com/mobiles
www.planetsagem.com
www.sagem-online.com

Index

- A**
 - Accessories p8
 - Activating your phone p12
 - Active flip p67
 - Alarm p75
 - Anonymous mode p55
- B**
 - Battery
 - Charging the battery p15
 - Installing the battery p13
 - Beeps p50
- C**
 - Calculator p73
 - Call barring p61
 - Calls (menu)
 - Automatic redial p56
 - Call forward p54
 - Call waiting p56
 - Counters p55
 - Display number p55
 - View last calls p54
 - Changing cover p13
 - Charger p8
 - Confidentiality p60
 - Contact
 - Add contact p23
 - Delete p27
 - Modify contact p27
 - See contact p26
 - Contrast p63
 - Converter p74
 - Currencies p74
 - Customer Care p93
- D**
 - Date / Time p65
 - Description p8
 - Display p51
- E**
 - Energy saving p63
- F**
 - Fax p67
 - Fixed dialling p61
- G**
 - Games p46
 - GPRS p43, p44, p45
 - GSM p44
- H**
 - Hands-free p14
- I**
 - Icon p11
 - Initial screen p11
 - Input modes p31
 - IP address p44
- K**
 - Keypad locking p9, p58
- L**
 - Languages p53
 - Local information p38
 - Lock keypad p58

Index

M

Memory p27, p38
Menus p2
Messages
 Compose p29
 Drafts p36
 Inbox p35
 MMS p33
 Receiving messages p34
 Sending options p37

N

Navigation principles p10
Networks p62

O

Operator p60

P

Phone code p59
Phonebook
 Phonebook menu p23
 Using the phonebook p22
PIN number p58
PIN2 number p59
Programmable keys p9

R

Ring tones p49

S

Safety information p76
Screensaver p52
Security p58, p59, p60, p61, p62
Sending options p37

Serial Speed p67
Short cut keys p9
Shortcut keys p64
Silent mode p50
SIM card p12, p13
Skins p51
SMS p29
Sounds p49, p50

T

T9 p30
Text p32, p33, p34
Timer p75
Troubleshooting p89, p90, p91, p92

V

vCard p28
Vibrate p49
Voicemail p57
Volume p49

W

Wallpaper p52
WAP p42, p43, p44, p45
 Configuring WAP parameters p43, p44
 Downloading sounds and images p45
 Services menu p42, p43
 WAP logging off p45
 WAP logging on p45
Warranty p78

Y

Your phone package p8

Weight: 91 g

Size: 91.7 x 44.5 x 22.9 mm

Original battery: Lithium ion 700 mAh

Battery life calls/standby: up to 3 h 30 mn/320 h (see page 15 how to increase the efficiency of your myC-4)

Multimedia objects supported:

Audio formats: iMelody, Midi, wave

Graphic formats: wbmp, bmp, png, gif, animated gif, jpeg

Size of memory available for messages:

100 SMS

300 Kb for MMS (inbox, outbox and drafts together; MMS depending on option)

Size of memory available for the phonenook and the multimedia objects: 4 MB

Maximum size of each message:

SMS < 160 characters

MMS < 100 Kb for outgoing, 100 Kb for incoming messages (depends on the phone configuration and on the operator reservations)

Using temperature: from - 10°C to + 55°C



* 2 5 1 6 5 9 3 0 4 *

SAGEM SA

Mobile Phones Division

Tel. +33 1 40 70 88 44 - Fax +33 1 40 70 66 40 - www.sagem.com
Le Ponant de Paris - 27, rue Leblanc - 75512 PARIS CEDEX 15 - FRANCE
SAGEM SA - Société anonyme à directoire et conseil de surveillance
capital : 36 405 229 € - 562 082 909 RCS PARIS