

SGH-T419 Series

P O R T A B L E T R I - B A N D M O B I L E P H O N E

User Guide

Please read this manual before operating your
phone, and keep it for future reference.



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), LLC

Headquarters:	Customer Care Center:
1301 E. Lookout Drive	1000 Klein St.
Richardson, TX 75082	Plano, TX 75074
	Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

©2007 Samsung Telecommunications America, LLC is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Do you have questions about your Samsung Mobile Phone?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

www.samsungwireless.com/support

GH68-14407A

Printed in Korea

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark RSA Security, Inc.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Section 1: Getting Started	4
Activating Your Phone	4
Switching the Phone On or Off	8
Setting Up Your Voice Mail	9
Section 2: Understanding Your Phone	11
Features of Your Phone	11
Open View of Your Phone	12
Keys	13
Closed View of Your Phone	14
Display Layout	15
Help	17
Section 3: Call Functions	18
Making a Call	18
Adjusting the Call Volume	20
Answering a Call	20
Call Records	20
Silent Mode	23
Selecting Functions and Options	23
Section 4: Menu Navigation	29
Menu Navigation	29
Menu Outline	30
Section 5: Entering Text	37
Changing the Text Input Mode	37
Using T9 Mode	38
Using Number Mode	40
Using Symbol Mode	40
Using ABC Mode	40
Section 6: Understanding Your Phonebook	42
Storing a Number in the Phone's Memory	42
Storing a Number in the SIM Card	44
Finding a Phonebook Entry	45
Dialing a Number from Phonebook	47
Speed Dialing	47
Editing a Caller Group	48
Dialing a Number from the SIM Card	48
Copying all Phonebook Entries	49
Deleting all of the Phonebook Entries	49
My name card	50
Management	50
Finding My Own Phone Number	52
FDN List	52

Service Number	53
Section 7: Messages	54
Types of Messages	54
Voice Notes	55
Text Messages	56
Picture Messages	59
Inbox	62
Sentbox	65
Outbox	66
Drafts	66
Templates	67
Voice Mail	70
Delete all	71
Settings	71
Memory Status	72
Broadcast Messages (SIM Card Dependent)	72
Instant Messaging (IM)	72
Section 8: Changing Your Settings	75
Time & Date	75
Phone Settings	76
Display Settings	78
Sound Settings	80
Bluetooth	83
Synchronization	84
Network Services	85
Security	87
Reset Settings	89
Section 9: Fun & Apps	91
Files	91
Games	96
Camera	98
Organizer	98
Synchronization	104
Section 10: Camera	106
Using the Camera	106
Take and Send	106
Photos	111
Videos	112
My Album	113
My Journal	113
Section 11: t-zones	114
t-zones	114

Section 12: Health and Safety Information	118
Health and Safety Information	118
Samsung Mobile Products and Recycling	120
UL Certified Travel Adapter	120
Consumer Information on Wireless Phones	120
Road Safety	127
Responsible Listening	128
Operating Environment	130
Using Your Phone Near Other Electronic Devices	130
Potentially Explosive Environments	132
Emergency Calls	132
FCC Notice and Cautions	133
Other Important Safety Information	133
Product Performance	134
Availability of Various Features/Ring Tones	135
Battery Standby and Talk Time	135
Battery Precautions	135
Care and Maintenance	137
Section 13: Warranty Information	138
Standard Limited Warranty	138
Index	143

Section 2: Understanding Your Phone

Topics Covered

- Features of Your Phone
 - Open View of Your Phone
 - Keys
 - Closed View of Your Phone
 - Display Layout
 - Help
-

This section outlines some key features of your phone. It also displays the screen and the icons that are displayed when the phone is in use.

Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

- 1.3 Megapixel Camera with 4x Digital Zoom
- Bluetooth® Wireless Technology
- User friendly, menu driven access to features and options
- Instant Messaging capability
- Sound/Image media capability
- Fun & Apps feature provides files, games, camera, alarms, calendar, tasks, calculator, world time, synchronization, unit conversion, timer, and stopwatch.

Open View of Your Phone

The following illustrations show the main elements of your phone:



Keys

The following list correlates to the illustrations.

1. Earpiece allows you to hear the other caller and the different ring tones or sounds offered by your phone.
2. Left Soft key allows you to select soft key actions or menu items corresponding to the bottom left line on the display screen.
3. Send key allows you to make or answer a call. In Idle mode, recalls the last number dialed or received when held down.
4. Cancel/Clear key deletes characters from the display. In Menu mode, this key returns you to the previous menu level.
5. Voice mail key allows you to quickly access your voice mail. Press and hold this key for two seconds to automatically dial your voice mail's phone number.
6. Alphanumeric keys allow you to enter numbers, letters, and some special characters.
7. Special Function keys allow you activate unique features while in Idle mode. In Idle mode, if you press and hold the # key, you can turn on the Silent Mode.
8. Microphone is used during phone calls and allows other callers to hear you clearly when you are speaking to them. It is also used in making voice note recordings.
9. Power On/Off (Exit) key ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the Menu mode, it returns the phone to Idle mode and then cancels your input.
10. Right Soft key allows you to select soft key actions or menu items corresponding to the bottom right line on the display screen. It also provides quick access to your t-zones.
11. Navigation key scrolls through the phone's menu options and acts as a shortcut key from standby mode.
In Menu mode, scrolls through the phone's menus and Phonebook.
In Idle mode:
 - Down key: allows you to directly access your Contact list.
 - Up key: allows you to directly access the Call records menu.
 - Left key: allows you to directly access Text messaging (New Message).
 - Right key: allows you to directly access Voice notes.

Closed View of Your Phone


12. OK (Select) key allows you to accept the choices offered when navigating through a menu.

Tip: When entering text, use the Left or Right Navigation key to mark the position of the cursor.

13. Display shows all the information needed to operate your phone, such as the received signal strength, phone battery level, and time.

Closed View of Your Phone

The following illustrations show the external elements of your phone

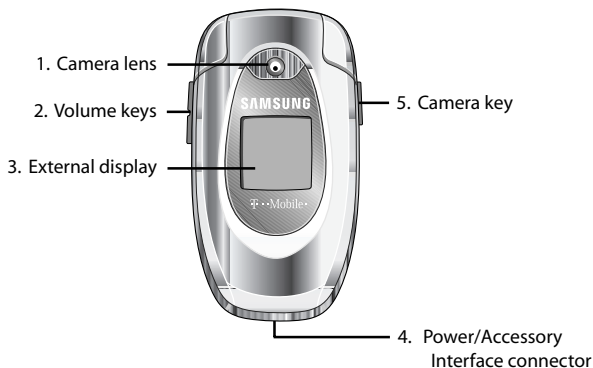 


1. Camera lens is used to take pictures.
2. Volume keys allow you to adjust the Ring volume in standby mode (with the phone open) or adjust the Speaker volume during a call. When receiving an incoming call, if you press the volume key, you can mute the ring tone. If you press and hold the volume key, you can reject the call.
3. External display shows the received signal strength, phone battery level, and the time.

4. Power/Accessory Interface connector **allows you to connect a power cable or optional accessories**, such as a USB/data cable or a hands-free headset for convenient, hands-free conversations.
5. Camera key **allows you to take pictures when you are in camera mode**. Launches the camera with a press.

Display Layout

 Your phone's display screen provides a wealth of information about your phone's status and options. The display has 3 areas:

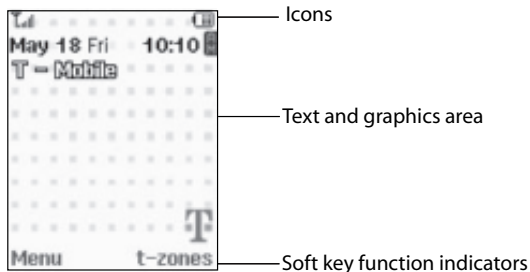

Icons

This list identifies the symbols you'll see on your phone's display screen:

-  Shows the received signal strength. The greater the number of bars, the stronger the signal.
-  Appears when a new text message has been received.
-  Appears when a new voice mail has been received.
-  Appears when a new picture message has been received.
-  Appears when you set an alarm to ring at a specified time. For more details, see *"Alarm"* on page 98.
-  Appears when you are out of your service area.
-  Appears when a call is in progress.



Appears when the Call Forwarding feature is active. For more details, see “*Call forwarding*” on page 85.



Appears when Alert type is vibration or you set the phone to vibrate when you receive a call.



Shows the level of your battery. The more bars you see, the more power you have remaining.



Appears when Bluetooth wireless technology is active.

Backlight

A backlight illuminates the internal display and the keypad. When you press any key, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on the setting within the *Backlight* menu. The display turns off after one minute to conserve battery power.

The *On* setting is how long the keypad backlight is on. The *Dim* option is how much longer after the keypad backlight goes off that the display remains lit.

To specify the length of time the backlight is active, access the *Backlight* menu:

1. In Idle mode, press the *Menu* soft key to access the *Menu* mode.
2. Using the *Navigation* keys, scroll to the *Settings* icon. Press the *Select* soft key or the **OK** key to enter the menu.
3. Highlight the *Display settings* option and press the *Select* soft key or the **OK** key.
4. Highlight the *Backlight* option and press the *Select* soft key or the **OK** key.
5. Highlight the *On* option. Use the *Left* or *Right* *Navigation* key to select the time the backlight is on. You may choose between 15 sec, 30 sec, 1 min, 3 min, or 10 min.
6. Press the *Down* key to take you to the *Dim* option. Use the *Left* or *Right* *Navigation* key to select the time the *Dimming* mode is on. You may choose between *Off*, 15 sec, 30 sec, 1 min, or 3 min.
7. Press the *Save* soft key to retain your new settings.

Display

Your phone has a display on the front of the phone. It indicates when you have an incoming call or message. It also alerts you at a specified time when you have set an alarm. The backlight turns on and the corresponding icon appears on the display.

The display shows the current time on a digital clock.

Help

Help is designed to work with t-zones to show you some of the unique features of your phone. You can search help files on the fly while traveling, at home or anywhere, using help.wap.t-mobile.com.

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the **Help** icon. Press the **Select** soft key or the **OK** key.
3. The T-Mobile Help menu is then displayed with the following options available:
 - **Browse Help Topics:** this option gives you a list of different topics from which you can select.
 - **Enter a Search:** this option allows you to search based on a keyword.
 - **My Account:** this option provides you with account specific information such as your current status, current activity, Bill Summary, Plan & Services, Voicemail Settings, Find a Retail Store, and FAQ's & Info.
 - **About:** this option offers general information about T-Mobile Help including concept and site design, copyright information, and contact email address.

To access the browser options menu:

- Press the **Options** soft key.
- Or -

Highlight the **Openwave** icon at the top left of the page by pressing the **Up** or **Down** keys and then pressing the **OK** key.

Note: The menus may vary, depending on your t-zones subscription.

For more information on browser options, see *"Selecting and Using Menu Options"* on page 115.

Section 1: Getting Started

Topics Covered

- **Activating Your Phone**
 - **Switching the Phone On or Off**
 - **Setting Up Your Voice Mail**
-

This section explains how to start using your phone by first configuring your hardware, activating your service, and then setting up your voice mail.

Activating Your Phone

 
When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, available optional services, and many others features.

Installing the SIM Card

Important!: The plug-in SIM card and its contacts information can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.


If necessary, switch off the phone by holding down the  key until the power-off image displays.

1. Remove the battery cover by sliding the battery cover in the direction of the arrow.

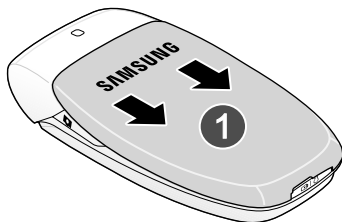


2. Carefully lift the battery cover away from the bottom of the phone.

 3. Lift up and remove the battery.

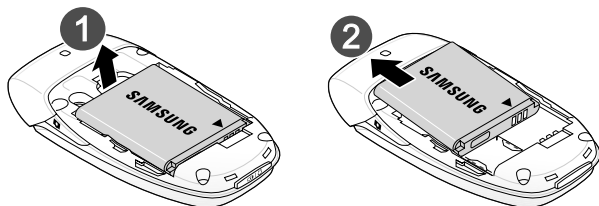


 4. Carefully slide the SIM card into the SIM card socket until the card locks into place. Make sure that the card's gold contacts face into the phone and that the upper-left angled corner of the card is positioned as shown below.

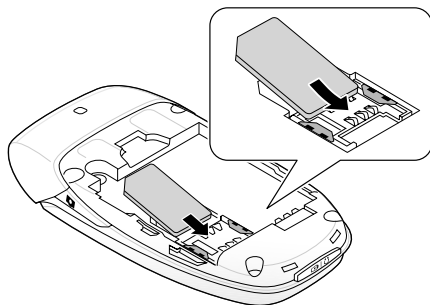


Note: If the card is not inserted correctly, the phone will not detect the SIM card. Remove the battery and re-orient the card back into the slot.

 5. Replace the battery:
 - (1) Slide the battery back into the compartment so that the tabs on the end align with the slots at the bottom of the phone.
 - (2) Press the battery down until it clicks into place.

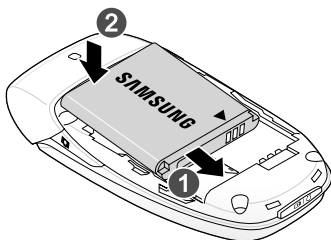

 6. Reinstall the battery cover by sliding it back onto the phone until you hear it securely click. Make sure the battery is properly installed before switching on the phone.

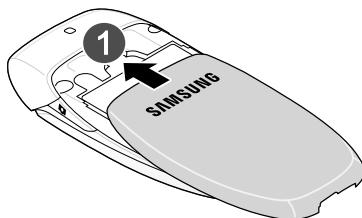

Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter, which is used for charging the battery, is included with your phone. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

 
You can use the phone while the battery is charging, but doing so will require additional charging time.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 4 hours.


1. With the battery installed, temporarily remove the plastic cover on the bottom of the phone and plug the travel adapter's connector into the jack.

Important!: Verify that the handset battery is installed prior to connecting the travel adapter. If the battery is not installed when the travel adapter is connected, the handset will power cycle continuously preventing proper operation.

2. Plug the adapter's power plug into a standard AC wall outlet.

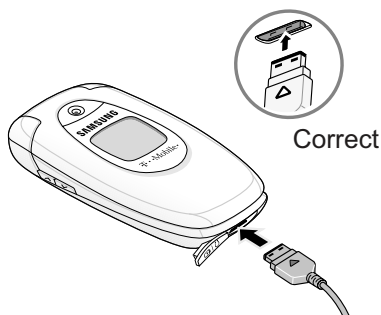

 Note: The following illustration displays the incorrect method for connecting the charger. If attempted, damage to the accessory port will occur therefore voiding the phone's warranty.

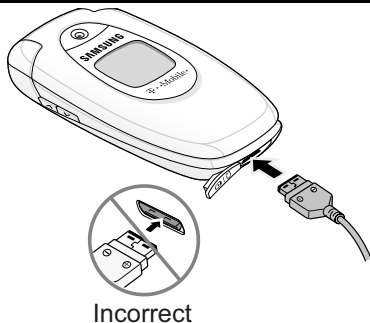

3. When charging is finished, first unplug the adapter's power plug from the AC wall outlet and then disconnect the travel adapter's connector from the phone.
4. Resecure the plastic cover over the interface jack on the phone.

Switching the Phone On or Off



Note: Failure to unplug the travel adapter before you remove the battery, can cause the phone to become damaged.

Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain; a warning tone sounds and the "Battery low" message repeats at regular intervals on the display. In this condition, your phone conserves its remaining battery power, not by turning off the backlight, but by entering the dimming mode.

When the battery level becomes too low, the phone automatically turns off.

Switching the Phone On or Off

1. Press and hold the  key until the phone switches on.
2. If the phone asks you to enter the phone password, use the keypad to enter your password and press either the **OK** soft key or the  key.

Note: To change your password see "Change password" on page 88.

3. If the phone asks for a PIN, use the keypad to enter the PIN and press either the **OK** soft key or the  key. For further details, see "PIN check" on page 87.

The phone searches for your network and after finding it, the term "T-Mobile" appears on the upper left half of your display. Now you can make or receive calls.

Note: The display language is preset to English at the factory. To change the language, use the Language menu. For more information, refer to "Language" on page 76.

4. When you wish to switch off the phone, press and hold the  key until the power-off image displays.

Setting Up Your Voice Mail

For new users, follow the instructions below to set up voice mail:

1. In Idle mode, press and hold the  key on the keypad.
You may be prompted to enter a password.
2. Follow the tutorial to create a your name, a greeting, and password.

Note: These steps may be different depending on your network.

Accessing Your Voice Mail

You can access your voice mail by either pressing and holding the  key on the keypad or by using the phone's menu. To access voice mail using the menu:

1. In Idle mode, press the Menu soft key.
2. Highlight Messages and press the Select soft key or the  key.
3. Highlight Voice mail and press the Select soft key or the  key.
4. Highlight Call voice mail and press the OK soft key or the  key. Your phone dials the specified voice mail number.
5. When connected, follow the voice prompts from the voice mail center.

Changing the Voice Mail Number

Your SIM card gives you the default service number of the voice mail center. However, should you need to change the number, use the following procedures:

1. In Idle mode, press the Menu soft key to access the Menu mode.
2. Highlight Messages and press the Select soft key or the  key.
3. Highlight Voice mail and press the Select soft key or the  key.
4. Highlight Voice server number and press the OK soft key or the  key.

Setting Up Your Voice Mail

5. Highlight Voice mail and press the OK soft key or the  key.
6. Edit the server number in the Enter number field and press the OK soft key.
7. Press the Back soft key or the  key when you are finished.

Caution! Editing the Voice server number can result in your handset being unable to access your Voice mailbox.

Deleting the Voice server number will make your handset unable to access your Voice mailbox.

Section 3: Call Functions

Topics Covered

- Making a Call
 - Adjusting the Call Volume
 - Answering a Call
 - Call Records
 - Silent Mode
 - Selecting Functions and Options
-

This section describes how to make or answer a call. It also explains the features and functionality associated with making or answering a call. For more information on Ringtones see “*Ringtone*” on page 81. For more information on Call Forwarding see “*Call forwarding*” on page 85.

Making a Call

When the idle screen displays, enter the number you wish to dial and press the  key.

Note: When you activate the Auto redial option in the Extra settings menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone, provided your call is not sent to voice mail. For more information, refer to “*Extra settings*” on page 77.

Making an International Call

1. Press and hold the  key. The + character appears.
2. Enter the country code, area code, and phone number.
3. Press the  key to make the call.

Correcting the Number

1. To clear the last digit displayed, press the  key.
2. To clear any other digit in the number, press the Left or Right Navigation key until the cursor is immediately to the right of the digit to be cleared and then press the  key. You can also enter a missing digit.
3. To clear the whole display, press and hold the  key.

Ending a Call

- When you want to finish your call, briefly press the  key.

Redialing the Last Number

The phone stores the numbers of the calls you've dialed, received, or missed if the caller is identified.

To recall any of these numbers:

1. If you have typed characters on the display, press the  key to return to Idle mode.
2. Press the  key to display a list of the most recent numbers used in the order you dialed or received them.
3. Use the Up and Down Navigation keys to scroll through the numbers and highlight the number you want.
4. To view details of the number, press the  key.

Before you dial the number, you may also press the Options soft key to display the following options:

- Details: Displays details of the number including name, number, dates and times of the calls.
 - Call back: Places a call back to the number.
 - Send message: Allows you to send a Text message, Picture message, or Voice note to the number.
 - Save to Phonebook: Stores the number in your Phone memory, onto your SIM card, or your SIM card(FDN).
 - Delete: Allows you to delete the highlighted number or all call records.
5. To dial the number, press the  key.

Making a Call from the Phonebook

You can store regularly used phone numbers into the phone's memory or onto your SIM card. These entries are collectively called the Phonebook.

Once you have stored a number in the Phonebook, you can dial it by pressing only a few keys. You can also assign your most frequently-used numbers to number keys using the Speed Dial feature.

For further details about the Phonebook feature, see *"Understanding Your Phonebook"* on page 42.

Adjusting the Call Volume

During a call, use the Volume keys on the left side of the phone, to adjust the speaker volume.

- ▶ Press the  key to increase the volume level and the  key to decrease the level.

In Idle mode, you can also adjust the ring volume using these keys.

Answering a Call

When somebody calls you, the phone rings and displays the incoming call image.

The caller's phone number, or name if stored in Phonebook, is then displayed.

1. Press the  key or the Accept soft key to answer the incoming call.
If the Anykey answer option in the Extra Settings menu is activated, you can press any key to answer a call except for the  key and the Reject soft key.

Note: To reject an incoming call, press the Reject soft key or  key.

2. End the call by pressing the  key.

Note: You can answer a call while using the Phonebook or menu features. After ending the call, the phone returns to the function screen you were previously using.

Call Records

All incoming, outgoing and missed calls are listed in the Call Records. You can also view Call time records.

1. In Idle mode, press the Menu soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the Call records icon and press the Select soft key or the  key to enter the menu.

Note: You can also access the call records of incoming, outgoing, and missed calls by pressing the  key while in Idle mode.

The following Call Record options are available:

All calls

This menu lets you view the 90 most recent calls you received, dialed, and missed.

The name or number, if already stored in your Phonebook, is displayed with the number of occurrences for each number.

Note: At any time while you are in Call Records, you may use the Up or Down Navigation keys to scroll between All calls, Missed calls, Incoming calls, and Outgoing calls.

Missed calls

This menu lets you view the 30 most recent calls you received, but did not answer.

The name and number, if already stored in your Phonebook, displays with the number of occurrences for each number.

Viewing Missed Calls

When you are unable to answer a call for any reason, you can find out the number that placed a call (provided the number was received), so that you can call the person back.

The number of calls you have missed displays on the idle screen immediately after a call is missed.

To view a missed call immediately:

1. If the display is off, press the volume key to turn the display on.
2. Press the View soft key.

The number corresponding to the most recently missed call is displayed, if available.

3. To scroll through the missed calls, press the Up or Down Navigation key.
4. To call the number displayed, press the  key.
5. Press the Options soft key for the following options:
 - Details: Displays details of the missed call including name, number, dates and times of the calls.
 - Call back: Places a call back to the number.
 - Send message: Allows you to send a Text message, Picture message, or Voice note back to the missed number.
 - Save to Phonebook: Stores the number in your Phone memory onto your SIM card, or your SIM card(FDN).
 - Delete: Allows you to delete the selected number or delete all call records.

Tip: You can press the  key at any time to exit the Missed Call feature.

Incoming calls

This menu lets you view the 30 most recent calls you received.

The name and number, if already stored in your Phonebook, is then displayed with the number of occurrences for each number.

Outgoing calls

This menu lets you view the 30 most recent calls you dialed.

The name and number, if already stored in your Phonebook, is then displayed with the number of occurrences for each number.

Delete all

This menu allows you to delete all of the call records of each type separately, or you can delete all of your call records at one time.

1. Highlight the type of calls you want to delete and press the **OK** key to make a check mark.
2. Press the **Delete** soft key to delete the calls.
3. When a confirmation message displays, press the **Yes** soft key or **OK** key to confirm.

Call time

This menu lets you view the time log for calls both made and received.

Note: The actual time invoiced by T-Mobile may differ from times displayed due to network features and service plan.

The following time logs are available:

- **Last call time:** shows the length of your last call.
- **Total incoming:** shows the total length of all calls you have received since the timer was last reset.
- **Total outgoing:** shows the total length of all calls you have made since the timer was last reset.
- **Life time:** shows the total length of time for both incoming and outgoing calls. The length of call time must be at least 1 minute to increment this field. This information cannot be cleared.

Silent Mode

Silent Mode is convenient when you wish to stop the phone from making any noise, in a theater for example.

In Idle mode, press and hold the  key until the “Silent mode on” message displays. In Silent Mode, instead of sounds, your phone will vibrate.

 
To exit and reactivate the previous sound settings, press and hold the  key again until the “Exit silent mode” message appears.

Selecting Functions and Options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed using the two soft keys. Each menu and sub-menu allows you to view and alter the settings of a particular function.

Soft Keys

The roles of the soft keys vary depending on the function you are currently using. The labels on the bottom line of the display just above each key indicate their current role.

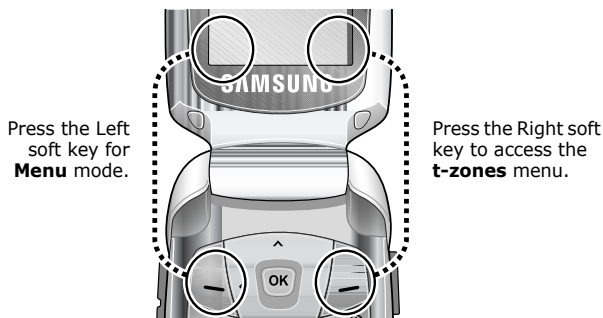

Selecting Options

To view the various functions and options available, you must select the one you want by:

1. Press the appropriate soft key.
2. To select the function displayed or the option highlighted, press the **Select** soft key or the  key.
3. To view the next function or highlight the next option on a list, press the **Down Navigation** key.
4. To move back to the previous function or option on a list, press the **Up** key.
5. To move back up one level in the menu structure, press the **Back** soft key.
6. To exit the menu structure without changing the settings, press the  key.

In some functions, you may be asked for a password or PIN. Enter the correct code and press the **OK** soft key or the  key.

When you access a list of options, your phone highlights the currently active option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

Options During a Call

Your phone provides a number of control functions that are available for use during a call.

Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to a person in the room but do not want the person on the phone to hear you.

To switch the microphone off temporarily:

- ▶ Press the **Options** soft key. Select the **Mute** option and press the **Select** soft key or the  key. The other person can no longer hear you.

To switch the microphone back on:

- ▶ Press the **Options** soft key. Select the **Unmute** option and press the **Select** soft key or the  key. The other person can hear you again.

Putting a Call on Hold

You can place the current call on hold whenever you want. You can also make another call while you have a call in progress if your network supports this service.

To place a call on hold:

1. Press the Options soft key, highlight the Hold call option, then press the Select soft key or the  key.
2. You can reactivate the call whenever you want, by pressing the Resume soft key.

To make a new call while you have a call in progress:

1. Press the Options soft key, highlight the Hold call option, then press the Select soft key or the  key.
2. Enter the new phone number that you wish to dial or look it up in the Contact list.
3. Press the  key to dial the second call.

When you have both an active call and a call on hold, you may switch between the two calls by placing the current held call to active and then placing the other on hold.

To switch between the two calls:

1. Press the Options soft key, select Swap, and press the  key. The current active call is placed on hold and the call on hold is then reactivated so that you can continue conversing with that person.
2. To finish, end each call normally by pressing the  key.

Using the Speakerphone

While on a call, you can use your Speakerphone by following these steps:

1. To turn the Speakerphone on, press the Spkr on soft key.
2. To turn the Speakerphone off, press the Spkr off soft key.

Muting or Sending Key Tones

These options allow you to turn the key tones off or on. If the Mute keys option is selected, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which then allows you to press keys without hearing annoying key tones during a call.

Note: To communicate with answering machines or computerized telephone systems, the Send DTMF option must be selected.

Searching for a Number in Phonebook

You can search for a number in Phonebook during a call.

1. Press the Options soft key.
2. Press the Down Navigation key to highlight Phonebook and press the  key.
3. Press the Down Navigation key to highlight the Contact list option and press the Select soft key or the  key.

With the Phonebook entries then listed:

4. Enter the name that you wish to find in the textbox located above the entries. If you enter the first few letters of the name, the Phonebook entries are listed starting with the first entry matching your input.
Or, use the Up or Down Navigation key to highlight the contact that you desire.
5. To view the highlighted entry, press the View soft key or the  key.
The Contact displays.

For further details about the Phonebook feature, see *"Finding a Phonebook Entry"* on page 45.

Call Waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you must have previously set the Call waiting option to *Activate*. For more information, refer to *"Call waiting"* on page 86.

You are then notified of an incoming call by a call waiting tone.

To answer a new call while you have a call in progress:

1. Press either the Accept soft key or the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the Options soft key, highlight Swap and press the Select soft key or the  key.
3. To end a call on hold, press the Options soft key and select the End held call option. Then press the Select soft key or the  key.
4. To end the current/remaining call, press the  key.

Making a Multi-Party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

For further details about subscribing to this service, contact T-Mobile customer service.

Setting up a Multi-Party Call

1. Call the first participant in the normal way.
2. Press the **Options** soft key and select the **New call** option.
3. Call the second participant in the normal way. The first call is automatically put on hold.
4. To join the first participant to this multi-party call, press the **Options** soft key and select **Join**. Press the **Select** soft key or the **OK** key.

Note: These first two calls are then grouped together on screen and displayed with an adjacent number corresponding to the order in which the calls were made.

5. To add a new person to a second multi-party call group, call the new person by first pressing the **Options** soft key and then selecting the **New call** option.
6. Press the **Options** soft key or the **OK** key. Select the **Join** option and press the **Select** soft key or the **OK** key.

Note: There are a maximum of five callers that can be joined to a single multi-party line, depending on network availability. Additional callers would participate in a new Multiparty session which can be held in conjunction with the previous multiparty call. Each of these multi-party calls can then be placed on hold or swapped.

Having a Private Conversation With One Participant

When you have two participants in a multi-party session, you might be necessary to place one of those participants on hold so that a private conversation can be held with a single caller. While you are in a multi-party call:

1. Press the **Options** soft key and choose the **Split** option. Press the **Select** soft key or the **OK** key.
The short list of call participants then appears with the first caller selected.
2. Highlight a person you wish to talk privately with by pressing the **Up** or **Down** Navigation key, and press the **Select** soft key or the **OK** key.

Note: You can now talk privately to that person while the other participants can continue to converse with each other. If there is only one other participant, that person is then placed on hold.

3. To return to the multi-party call, press the Options soft key and select Join. Press the Select soft key or the  key. All of the multi-party call participants can now hear each other again.

Dropping One Participant

1. Press the Options soft key and choose the Split option. Press the Select soft key or the  key. The short list of call participants appears.
2. Highlight the person you want to keep and press the Select soft key or the  key.
3. Press the Options soft key and highlight Remove. Press the Select soft key or the  key. The remaining participant on hold is highlighted.
4. Pressing the Select soft key or the  key will end their call, but allow you to continue talking to the other participants.
5. When you want to end the multi-party call, press the  key.

Section 4: Menu Navigation

Topics Covered

- Menu Navigation
 - Menu Outline
-

This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.

Menu Navigation

You can access the phone's range of functions and tailor them to your needs by using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

Accessing a Menu Function by Scrolling

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Scroll using the Navigation keys to reach a main menu (for example: Settings). Press the **Select** soft key or the  key to enter the menu.
3. If the menu contains sub-menus, for example: Security, you can access them by pressing the **Select** soft key or the  key after the sub-menu has been highlighted.
If the menu that you have selected contains further options, repeat this step.
4. To scroll through the menus, press the **Up** or **Down** Navigation keys.
5. To confirm the chosen setting, press the **Select** soft key, or the  key.
6. To return to the previous menu level, press the **Back** soft key, or the  key.
7. To exit the menu without changing the settings, press the  key.

Using Shortcuts

The menu items, such as menus, sub-menus, and options, are numbered and can be accessed quickly by using their shortcut numbers. For the main menus, you can access any one of them by pressing the number keys (1 to 0) corresponding to their location on the screen.

Example: Accessing the Security menu.

1. Press the Menu soft key.
2. Press the  key for Settings.
3. Press the  key for Security.

Menu Outline

The following list shows the menu structure and indicates the number assigned to each option.

- 1: Voice notes
- 2: Call records
 - 2.1: All calls
 - 2.2: Missed calls
 - 2.3: Incoming calls
 - 2.4: Outgoing calls
 - 2.5: Delete all
 - 2.6: Call time
- 3: t-zones
 - 3.1: Home
 - 3.2: Go to URL
 - 3.3: Bookmarks
 - 3.4: Saved pages
 - 3.5: History
 - 3.6: Clear cache
- 4: IM
 - 4.1: AIM
 - 4.1.1: Sign on
 - 4.1.2: Saved conversations

- 4.1.3: Offline conversations
- 4.1.4: Settings
 - 4.1.4.1: Favorite IDs
 - 4.1.4.2: Power on sign on
 - 4.1.4.3: Community settings
- 4.1.5: Help
- 4.2: ICQ
 - 4.2.1: Connect
 - 4.2.2: Saved conversations
 - 4.2.3: Offline conversations
 - 4.2.4: Settings
 - 4.2.4.1: Favorite IDs
 - 4.2.4.2: Power on connect
 - 4.2.4.3: Community settings
 - 4.2.5: Help
- 4.3: Windows Live
 - 4.3.1: Sign in
 - 4.3.2: Saved conversations
 - 4.3.3: Preferences
 - 4.3.3.1: Favorite IDs
 - 4.3.3.2: Power on sign in
 - 4.3.3.3: Community settings
 - 4.3.4: Help
- 4.4: Yahoo!
 - 4.4.1: Sign in
 - 4.4.2: Saved conversations
 - 4.4.3: Offline conversations
 - 4.4.4: Settings
 - 4.4.4.1: Favorite IDs
 - 4.4.4.2: Power on sign in
 - 4.4.4.3: Community settings
 - 4.4.5: Help
- 5: Messages
 - 5.1: Create new
 - 5.1.1: Text message

- 5.1.2: Picture message
- 5.1.3: Voice note
- 5.2: Inbox
- 5.3: Sentbox
- 5.4: Outbox
- 5.5: Drafts
- 5.6: Templates
 - 5.6.1: Text templates
 - 5.6.2: Picture message templates
- 5.7: Voice mail
 - 5.7.1: Call voice mail
 - 5.7.1.1: Voice Mail
 - 5.7.2: Voice server number
 - 5.7.2.1: Voice Mail
- 5.8: Delete all
- 5.9: Settings
 - 5.9.1: Text message
 - 5.9.2: Picture message
 - 5.9.2.1: Send settings
 - 5.9.2.2: Receive settings
- 5.0: Memory status
- 5.★: Broadcast messages**
- 6: Fun & Apps
 - 6.1: Files
 - 6.1.1: Sounds
 - 6.1.1.1: Browse MegaTones
 - 6.1.1.2: Browse HiFi Ringers
 - 6.1.1.3: Sounds
 - 6.1.1.4: Voice list
 - 6.1.2: Images
 - 6.1.2.1: Browse Wallpapers
 - 6.1.2.2: Photos
 - 6.1.2.3: My Album
 - 6.1.2.4: My Journal
 - 6.1.2.5: Downloaded images

- 6.1.3: Videos
 - 6.1.3.1: Downloaded videos
 - 6.1.3.2: Videos
- 6.1.4: Other files
- 6.1.5: Memory status
- 6.2: Games
- 6.3: Camera
 - 6.3.1: Take and Send
 - 6.3.2: Record video
 - 6.3.3: Photos
 - 6.3.4: Videos
 - 6.3.5: My Album
 - 6.3.6: My Journal
- 6.4: Organizer
 - 6.4.1: Alarm
 - 6.4.2: Calendar
 - 6.4.2.1: Month view
 - 6.4.2.2: Week view
 - 6.4.2.3: Day view
 - 6.4.2.4: Schedule
 - 6.4.2.5: Anniversary
 - 6.4.2.6: Miscellaneous
 - 6.4.2.7: Missed alarm events
 - 6.4.2.8: Memory status
 - 6.4.3: Tasks
 - 6.4.4: Calculator
 - 6.4.5: World time
 - 6.4.6: Synchronization
 - 6.4.7: Unit conversion
 - 6.4.8: Timer
 - 6.4.9: Stopwatch
- 7: Help
- 8: Phonebook
 - 8.1: Add new contact
 - 8.2: Contact list

- 8.3: Groups
- 8.4: Speed dial
- 8.5: My name card
- 8.6: Management
 - 8.6.1: View contacts
 - 8.6.2: Default saving
 - 8.6.3: Copy all to
 - 8.6.4: Sort by contacts
 - 8.6.5: Delete all
 - 8.6.6: Memory status
- 8.7: Own number
- 8.8: FDN list
- 8.9: Service number**
- 9: Settings
 - 9.1: Time & Date
 - 9.2: Phone settings
 - 9.2.1: Language
 - 9.2.2: Greeting message
 - 9.2.3: Extra settings
 - 9.2.4: Airplane mode
 - 9.3: Display settings
 - 9.3.1: Wallpaper
 - 9.3.1.1: Browse Wallpaper
 - 9.3.1.2: Default wallpapers
 - 9.3.1.3: Downloaded images
 - 9.3.1.4: Photos
 - 9.3.2: Info display
 - 9.3.3: LCD brightness control
 - 9.3.4: Front LCD contrast control
 - 9.3.5: Backlight
 - 9.3.6: Dialing display
 - 9.3.6.1: Font size
 - 9.3.6.2: Font color
 - 9.3.6.3: Background color

- 9.3.7: Calendar
- 9.3.8: Show caller information
- 9.4: Sound settings
 - 9.4.1: Incoming call
 - 9.4.2: Keypad tone
 - 9.4.3: Message tone
 - 9.4.3.1: Text message
 - 9.4.3.2: Picture message
 - 9.4.3.3: Broadcast**
 - 9.4.4: Power on/off
 - 9.4.5: Folder tone
 - 9.4.6: Silent mode
 - 9.4.7: Extra tones
- 9.5: Bluetooth
 - 9.5.1: Turn Bluetooth On/Off
 - 9.5.2: My devices
 - 9.5.3: My visibility
 - 9.5.4: My phone name
 - 9.5.5: Security modes
 - 9.5.6: Features
 - 9.5.6.1: Headset
 - 9.5.6.2: Handsfree
 - 9.5.6.3: Serial port
 - 9.5.6.4: Dial up networking
 - 9.5.6.5: File transfer
 - 9.5.6.6: Object push
 - 9.5.7: Help
- 9.6: Synchronization
- 9.7: Network services
 - 9.7.1: Call forwarding
 - 9.7.1.1: Forward always
 - 9.7.1.2: Busy
 - 9.7.1.3: No reply
 - 9.7.1.4: Unreachable
 - 9.7.1.5: Cancel all

- 9.7.2: Call barring**
- 9.7.3: Call waiting
- 9.7.4: Network selection
- 9.7.5: Caller ID
- 9.8: Security
 - 9.8.1: PIN check
 - 9.8.2: Change PIN
 - 9.8.3: Phone lock
 - 9.8.4: Change password
 - 9.8.5: Lock applications
 - 9.8.6: FDN mode
 - 9.8.7: Change PIN2
- 9.9: Reset settings

** Shows only if supported by your SIM card.

Section 5: Entering Text

Topics Covered

- Changing the Text Input Mode
 - Using T9 Mode
 - Using Number Mode
 - Using Symbol Mode
 - Using ABC Mode
-

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text system to reduce the number of key strokes associated with entering text.

Changing the Text Input Mode

 
When using your phone, you will often need to enter text, such as when storing a name in your Phonebook, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

- **T9 mode:** this mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing  can enter J, K, or L. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional ABC mode.
- **Number mode:** this mode allows you to enter numbers.
- **Symbol mode:** this mode allows you to enter symbols, such as punctuation marks.
- **ABC mode:** this mode allows you to enter letters by pressing the key labeled with the letter you want.

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the bottom right of the display.

Example: Writing a text message.

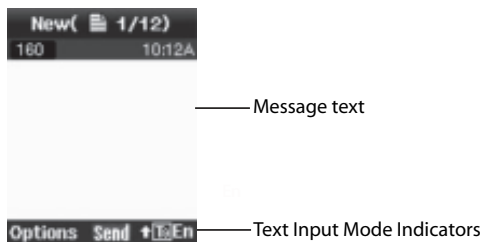

1. To change the text input mode, press the **Right** soft key (**↵**).
2. Each time you press the **Right** soft key, a different Text input mode indicator is displayed at the lower right corner of your display.

The following options are available:

T9En : T9 mode

11En : Number mode

#VEn : Symbol mode

AEEn : ABC mode

3. When the Text input mode indicator that you desire is displayed, you may enter text in the text message box using the selected text input mode.

Using T9 Mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

To enter a word in T9 mode:

1. When you are in T9 mode, start entering a word by pressing the 2 to 9 keys. Press each key only once for each letter.

Example: To enter "Hello" in T9 mode, press the 4, 3, 5, 5, and 6 keys.

The word that you are typing appears on the display. It may change with each consecutive key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. When the word is correctly displayed, go to step 4.

If the word doesn't display correctly, press the  key to display alternative word choices for the keys that you have pressed.

Example: Both the words "Of" and "Me" have the 6 and 3 keys. The phone displays the most commonly used choice first.

4. Insert a space by pressing the  key and start entering the next word.

To add a new word into the T9 dictionary:

1. After pressing the keys corresponding to the word you want to add, press the  key to display any alternative words.
2. When you press the  key after the last alternative word, the display shows **Add** on the bottom right line. Press the **Add** soft key or the  key.
3. Enter the word you want to add using ABC mode. For more information, refer to "Changing the Text Input Mode" on page 37.
4. Press the **OK** soft key or the  key after you have finished entering the new word.

The word is added to the T9 dictionary and becomes a word for the associated keypress series.

Note: This feature may not be available for some languages. The 1 key has some emoticons associated with it. To enter other special characters within the T9 mode, press and hold the  key to cycle through these characters.

- To enter periods, hyphens, apostrophes, and other special characters, press the  key to cycle through these available characters. T9 mode applies grammar rules to ensure that correct punctuation is used.
- To shift case in T9 mode, use the  key. There are 3 cases: Initial capital, Capital lock, and Lower case.
- You can move the cursor by using the Navigation keys. To delete letters, press the  key. Press and hold the  key to clear the display.

Using Number Mode

The Number mode enables you to enter numbers into a text message.

- Press the keys corresponding to the digits you want to enter.

Using Symbol Mode

Symbol mode enables you to insert symbols and punctuation marks into text. To display a list of symbols press and hold the  key.

1. To select a symbol, press the corresponding number key.
2. To display more symbols, press the Up or Down Navigation key.
3. To clear the symbol(s), press the  key. When the input field is empty, this key returns the display to the previous mode.
4. To insert the symbol(s) into your message, press the OK soft key or the  key.

Using ABC Mode

To use ABC mode, use the 2 to 9 keys to enter your text.

1. Press the key labeled with the letter you want:
 - Once for the first letter
 - Twice for the second letter
 - And so on
2. Select the other letters in the same way.
 - To enter periods, hyphens, apostrophes, and other special characters, press the  key. ABC mode applies grammar rules to ensure that correct punctuation is used.
 - To shift case in ABC mode, use the  key. There are 3 cases: Initial capital, Capital lock, and Lower case.

You can move the cursor by using the Navigation keys. To delete letters, press the  key. Press and hold the  key to clear the display.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

Section 6: Understanding Your Phonebook

Topics Covered

- Storing a Number in the Phone's Memory
 - Storing a Number in the SIM Card
 - Finding a Phonebook Entry
 - Dialing a Number from Phonebook
 - Speed Dialing
 - Editing a Caller Group
 - Dialing a Number from the SIM Card
 - Copying all Phonebook Entries
 - Deleting all of the Phonebook Entries
 - My name card
 - Management
 - Finding My Own Phone Number
 - FDN List
 - Service Number
-

This section explains how to use and manage your Phonebook. You can save phone numbers to your phone's memory or to your SIM card.

Note: In your Phonebook, the following icons indicate where each phone number is stored:



in the phone



on the SIM

Storing a Number in the Phone's Memory

The default storage location for saving phone numbers to your phonebook is your phone's built-in memory. You can also save your numbers to your SIM card or setup a default location so that whenever a new phonebook entry is created, you will be prompted to choose between Phone or SIM card. For information on how to change

this setting, see “*Default Saving*” on page 50. Also, numbers that have been stored on your SIM card can later be copied to your phone’s memory.

Note: When you copy a phone number from your SIM card to your phone, the number will appear twice in your Contact list.

Note: When storing a Phonebook entry into your SIM card, note that only the Name, and Number are saved. To save additional information for a particular contact, such as notes, e-mail, dates, and so on, it is important to save that Contact into your phone’s onboard memory.

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the Phonebook icon. Press the **Select** soft key or the **OK** key to enter your Phonebook.
3. Scroll to Add new contact by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **OK** key.
4. Enter a first name in the **First Name** text box. Tab to the next text box by pressing the **Down** key.
For further details about how to enter characters, see “*Using ABC Mode*” on page 40.
5. Enter a last name in the **Last Name** text box.
6. Highlight a number **Type** by pressing the **Up** or **Down** Navigation key, then enter a number in the text box.

The following types are available:

- **Mobile:** assigns the number entered to the Mobile entry.
 - **Home:** assigns the number entered to the Home entry.
 - **Office:** assigns the number entered to the Office entry.
 - **Fax:** assigns the number entered to the Fax entry.
 - **Other:** allows you to enter more detailed information for the entry.
 - **Email:** allows you to enter the email address for the contact.
 - **Picture ID:** allows you to add a Picture ID assigned to the contact.
 - **Ringtone:** allows you to assign a Ringtone by choosing from one of the following locations: Default sounds, or Sounds.
 - **Group:** allows you to assign this contact to a call group.
 - **Memo:** allows you to enter additional information about the contact. Up to 50 characters.
7. Press the **Save** soft key or the **OK** key. The number is saved to your phone and the new contact information is displayed.
 8. To return to the Idle screen, press the **Back** key.

Storing a Number in the SIM Card

The default storage location for saving phone numbers to your phonebook is your phone's built-in memory. To save a number to your SIM card, you need to change the Default Saving option first.

Note: When you copy a phone number from your SIM card to your phone, the number will appear twice in your Contact list.

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
 2. Using the Navigation keys, scroll to the Phonebook icon. Press the **Select** soft key or the **OK** key to enter your Phonebook.
 3. Scroll to Management by pressing the Up or Down Navigation key and press the **Select** soft key or the **OK** key.
 4. Highlight Default saving and press the **Select** soft key or the **OK** key.
 5. Highlight SIM Card and press the **Select** soft key or the **OK** key.
 6. Press the **Back** soft key until you return to the main screen (Idle mode) or press the  key.
-

Note: You can also set the Default saving option to Ask on saving in the Management menu. With this option, you will be prompted for storage location each time you add a new contact. For more information, refer to "Default Saving" on page 50.

Now that if your phone is set up to store contacts to your SIM card, follow this procedure to store a number.

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the Phonebook icon. Press the **Select** soft key or the **OK** key to enter your Phonebook.
3. Highlight the Add new contact option and press the **Select** soft key or the **OK** key.
4. Enter a name for your contact into the Name field. A SIM card entry only has one available name field. Tab to the next text box by pressing the Down key.
For further details about how to enter characters, see "Using ABC Mode" on page 40.
5. Use the keypad to enter a number into the contact Phone Number field.

6. Press the **Save** soft key or the  key. The number is saved in your SIM card.

After storing, the phone displays the Phonebook entry you just created.

7. To use the entry options after saving the number, press the **Options** soft key.

The following options are available:

- **Edit**: allows you to edit the name and number fields in the entry.
- **Send message**: allows you to send a message to the selected number. You may choose between Text message, Picture message, or Voice note.
- **New contact**: takes you to the Add new contact menu.
- **Call**: allows you to place a call to the selected number.
- **Copy to phone / SIM card / SIM card(FDN)**: allows you to copy the number to another destination (phone, SIM card or FDN list). (For more information about the FDN list, see “*FDN List*” on page 52.)
- **Copy all to phone / SIM card / SIM card(FDN)**: allows you to copy all the numbers to another destination (phone, SIM card or FDN list). (For more information about the FDN list, see “*FDN List*” on page 52.)
- **Assign speed dial**: allows you to set this contact to a speed dial number (2-9).
- **Send name card via**: allows you to send your name card via Text message, Picture message or to a Bluetooth device.
- **Delete**: allows you to delete the name and number from Phonebook. You are then asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.

8. To return to the Idle screen, press the  key.

Finding a Phonebook Entry

You can store phone numbers and their corresponding names onto either your SIM card or phone's built-in memory. They are physically separate but are used as a single entity, called Phonebook.

Depending on the storage size of the particular SIM card, the maximum number of phone numbers the card can store may differ.

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the Phonebook icon and press the **Select** soft key or the  key to enter your Phonebook.
3. Highlight Contact list and press the **Select** soft key or the  key.

Note: Any contacts stored onto the SIM card will appear with a SIM card icon () to the left of the entry.
Any contacts stored in the phone will appear with a phone icon () to the left of the entry.

Finding a Phonebook Entry

4. Enter the first few letters of the name in the text box.
The Phonebook entries are listed, starting with the first entry matching your input.
5. If needed, press the Up or Down Navigation key until the entry you want is highlighted.
6. Once you have found the entry, press the  key to dial the number, or press the Options soft key to access the following Phonebook entry options:
 - Edit: allows you to edit the Name and number for the selected contact.
 - Send message: allows you to send a message to the selected number. You may choose between Text message, Picture message, or Voice note.
 - New contact: allows you to enter new contact information.
 - Call: places the call to the selected phone number.
 - Copy (all) to Phone / Copy (all) to SIM card: allows you to copy the selected contact entry or all contact entries to the Phone, or SIM card.
 - Assign speed dial: allows you to assign a speed dial key number to the selected Phonebook entry.
 - Send name card via: allows you to send your name card via Text message, Picture message or Bluetooth.
 - Delete: allows you to delete the selected name and number from your Phonebook or delete all numbers. You are asked to confirm that you wish to delete the name and number by pressing the Yes soft key. To cancel, press the No soft key.
 - Select language: allows you to set the language to English, Français, and Español.
7. Press the View soft key after the contact information displays for these additional options:
 - Edit: allows you to edit the name and number fields in the entry. You can also add an email address and notes.
 - Send message: allows you to send a message to the selected number. You may choose between Text message, Picture message, or Voice note.
 - Call: places the call to the selected phone number.
 - Copy to phone / SIM card / SIM card(FDN): allows you to copy the number to your phone, SIM card, or FDN list.
 - Assign speed dial: allows you to assign a speed dial key number to the selected Phonebook entry.
 - Send name card via: allows you to send your name card via Text message, Picture message or Bluetooth.
 - Delete: allows you to delete the selected name and number from your Phonebook or delete all numbers. You are then asked to confirm that you wish to

delete the name and number by pressing the Yes soft key. To cancel, press the No soft key.

Dialing a Number from Phonebook

Once you have stored phone numbers in the Phonebook, you can dial them easily and quickly by using the location numbers that were assigned to them in the Phonebook.

Note: If you cannot remember a location number, you must go into the Contact list menu in the Phonebook menu to search for the entry by name. For more information, refer to "Finding a Phonebook Entry" on page 45.

Speed Dialing

Once you have stored phone numbers from your Phonebook list, you can set up to 8 speed dial entries and then dial them easily whenever you want, simply by pressing the associated numeric key.

In Idle mode, to speed dial the numbers assigned to keys (2 to 9), press and hold the appropriate key.

Setting Up Speed Dial Entries

1. In Idle mode, press the Menu soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the Phonebook icon. Press the Select soft key or the  key to enter your Phonebook.
3. Scroll to Speed dial by pressing the Up or Down Navigation key and press the Select soft key or the  key.
4. Use the Up or Down Navigation key to select the keypad number key to where you wish to assign the new speed-dialing number and press the Add soft key or the  key.
 - Select from the 2 to 9 keys, and press the Add soft key.
 - The 1 key is pre-reserved for quick dialing your voice mail.
5. Highlight a contact entry number from the list and press the Select soft key or the  key.
6. You will receive a Saved confirmation and the Speed dial menu will show the number assigned to the number key you selected.
7. To return to the Idle screen, press the  key.

Note: Memory location 1 is reserved for your Voice mail server number and this speed dial location can not be changed. The voice server number can be altered via the Messages > Voice mail menu.

Editing a Caller Group

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the Phonebook icon. Press the **Select** soft key or the **OK** key to enter your Phonebook.
3. Highlight the **Groups** option and press the **Select** soft key or the **OK** key.
4. Scroll through the group list by pressing the **Up** or **Down** Navigation key.
5. Highlight the group you want and press the **Options** soft key.
6. Highlight the **Edit** option and press the **Select** soft key or the **OK** key.
7. To edit the Caller group name, modify the text in the **Name** text box.
8. To change the image associated with the Caller group, press the **Down** navigation key to highlight the **Picture ID** icon. Press the **OK** key.

The following options are available:

- **Take Picture:** allows you to take a picture with your camera.
 - **Photos:** allows you to choose a photo from Photos folder.
 - **Downloaded images:** allows you to choose a photo from your Downloaded images folder.
 - **Icons:** allows you to choose from pre-defined icons.
9. To change the ringtone associated with the Caller group, press the **Down** key to highlight the **Ringtone** icon. Press the **OK** key.

The following options are available:

- **Default sounds:** allows you to choose between 16 different sounds.
 - **Sounds:** allows you to choose a sound from your Sounds folder.
10. When you are finished, press the **Save** soft key. Your Caller group settings will be saved.
 11. When you are finished, press the **Back** key to return to Idle mode.

Dialing a Number from the SIM Card

1. In Idle mode, press and hold the keypad corresponding to the speed dial number for the phone number you want to dial.
2. If you don't know the speed dial number, press **1** **2** **3** and the first speed dial number will be displayed.

You can then press the **Left** or **Right** key to find other numbers in the speed dial list followed by the Phonebook.

3. Press either the **Dial** soft key, the **Call** key, or the **OK** key when you have selected the number you want to dial.

Copying all Phonebook Entries

You can copy all Phonebook entries to the Phone, to the SIM card, or to the FDN list (if FDN is enabled) using this option. When you copy entries to the phone, duplicate entries are created.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the Phonebook icon. Press the **Select** soft key or the **OK** key to enter your Phonebook.
3. Highlight **Management** and press the **Select** soft key or the **OK** key.
4. Highlight **Copy all to** and press the **Select** soft key or the **OK** key.
5. Highlight **Phone** or **SIM card / SIM card(FDN)** (if FDN is enabled) and press the **Select** soft key or the **OK** key.
6. When the **Copy all to Phone / SIM card / SIM card(FDN)?** confirmation message appears, press the **Yes** soft key to complete copying all Phonebook entries or press the **No** soft key to cancel copying.

Note: Some options are available for phone entries which might not be available when the entry is stored to the SIM card. For more information, refer to "Storing a Number in the Phone's Memory" on page 42.

Deleting all of the Phonebook Entries

You can delete all your entries from your phone's memory, your SIM card, FDN list, or All.

Important!: Once Phonebook entries have been deleted, they cannot be recovered.

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the Phonebook icon. Press the **Select** soft key or the **OK** key to enter your Phonebook.
3. Highlight **Management** and press the **Select** soft key or the **OK** key.
4. Scroll to **Delete all** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **OK** key.
5. To place a check mark by the memory location you want to empty [**All**, **Phone**, **SIM Card**, or **SIM card(FDN)**], highlight the category and press the **OK** key.
You can remove the check mark by pressing the **OK** key.
6. Press the **Delete** soft key to delete the entries in the selected memory locations.

My name card

7. Enter the password in the PIN2 field and press the OK soft key, or the Exit soft key to cancel.
8. When the Delete all? confirmation message appears, press the Yes soft key or the  key.
9. When you are finished, press the  key to return to Idle mode.

My name card

My name card allows you to create a virtual business card. Once completed, you can send the card to recipients as a V-card attachment.

1. In Idle mode, press the Menu soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the Phonebook icon. Press the Select soft key or the  key to enter your Phonebook.
3. Highlight My name card and press the Select soft key or the  key. My name card opens with the Name field highlighted.
4. Enter information into each of the fields as desired. Use the Navigation keys to move between fields, then use the keypad to enter information.
5. When finished, press the Options soft key.
6. Highlight the Save option and press the Select soft key or the  key.

Management

The Management menu allows you to select where your contacts will be saved, copy your SIM contacts to your phone, delete your contacts, sort by contacts, or check your memory status.

View contacts

The View contacts option allows you to view the contacts stored on the Phone's memory, or all of the contacts stored on both the Phone and SIM card.

Default Saving

The Default Saving option allows you to choose where your contacts will be saved. The following options are available:

- Phone: new phonebook contacts will be saved to your phone. Your phone comes with the default set to Phone memory.

- SIM card: new phonebook contacts will be saved to your SIM card.
- Ask on saving: you will be prompted to choose between Phone or SIM Card whenever you save a new contact.

Copy All to

This option allows you to copy all contacts from your SIM card to your Phone or from you Phone back onto your SIM card. For more information, refer to *"Copying all Phonebook Entries"* on page 49.

Sort by contacts

The Sort by contacts menu option allows you to set the sort function to alphabetize the contacts by First name or Last name.

Delete All

Important!: Once contact entries have been deleted, they cannot be recovered.

This option allows you to delete your contacts. You may delete from All, Phone, SIM card, or SIM card(FDN). For more information, refer to *"Deleting all of the Phonebook Entries"* on page 49.

Memory Status

You can check how many names and numbers are stored in the Phonebook, within both SIM card and the phone memory. You can also see the current storage capacity of both memories.

1. In Idle mode, press the Menu soft key to access Menu mode.
2. Using the Navigation keys, scroll to the Phonebook icon. Press the Select soft key or the  key to enter your Phonebook.
3. Highlight Management and press the Select soft key or the  key.
4. Select the Memory status option by pressing the Up or Down Navigation key and press the Select soft key or the  key.
5. When you are finished, press the  key or the Back soft key.

Finding My Own Phone Number

This function is a memory aid, which you can use to check your own phone number if you need to do so.

You can assign a name to each of your own phone numbers registered on your SIM card. You can also edit the names and numbers. Any changes made here do not in any way affect the actual subscriber numbers on your SIM card.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the Phonebook icon. Press the **Select** soft key or the **OK** key to enter your Phonebook.
3. Select the **Own number** option by pressing the Up or Down Navigation key and press the **Select** soft key or the **OK** key.
4. Highlight the **Number 1** option and press the **OK** key. Your phone number is displayed. You may edit the number and name if you wish. If you edit the name or number, press the **Save** soft key or the **OK** key.

FDN List

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The FDN List allows you to set up a list of numbers [indicated by the FDN list icon () to the left of each number] that your phone may dial.

FDN mode must first be enabled in the Security settings. For more information on changing this setting, see “*FDN mode*” on page 89.

To enable FDN mode, a PIN2 number is required. You can obtain your PIN2 from T-Mobile customer service.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the Phonebook icon. Press the **Select** soft key or the **OK** key to enter your Phonebook.
3. Select the **FDN list** option by pressing the Up or Down Navigation key and press the **Select** soft key or the **OK** key.
4. Enter phone number into the list by:
 - Pressing the **Add** soft key or the **OK** key.
 - Enter the PIN2 number obtained from T-Mobile's customer service center and begin to create your restricted phone list.

Service Number

Your phone displays the default service number of the voice mail center. However, should you need to change the number, use the following procedure:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the **OK** key to enter your Phonebook.
3. Select the **Service Number** option by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **OK** key.
4. Press the **Options** soft key, highlight the **Edit** option and press the **Select** soft key or the **OK** key.
5. Edit the name if desired, then press the **Down** Navigation key to edit the number.
6. Press the **Options** soft key, highlight the **Save** option, and press the **Select** soft key or the **OK** key.
7. When you are finished, press the  key to return to Idle mode.

Section 7: Messages

Topics Covered

- Types of Messages
 - Voice Notes
 - Text Messages
 - Picture Messages
 - Inbox
 - Sentbox
 - Outbox
 - Drafts
 - Templates
 - Voice Mail
 - Delete all
 - Settings
 - Memory Status
 - Broadcast Messages (SIM Card Dependent)
 - Instant Messaging (IM)
-

This section describes how to send or receive different types of messages. It also explains the features and functionality associated with messaging.

Types of Messages

Your phone provides the following message types:

- Voice Notes
- Text Messages
- Picture Messages
- Voice Mail
- Broadcast Messages (SIM Dependent)
- Instant Messaging

Voice Notes

In this menu, you can record a voice note of up to one minute long and then immediately send it via Picture Messaging.

When you access this menu, a timer appears on the screen.

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the **Voice notes** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Press the **Record** soft key to start recording.
4. Record a memo by speaking into the phone's microphone.
The display simultaneously shows the elapsed time and the remaining time.
5. When you are finished, press the **Stop** soft key. Or, when the recording time is expired, the display switches to the next screen.
6. Press the **Options** soft key for the following options:
 - **Send to:** allows you to send the Voice note.
 - **Play:** plays back your Voice note.
 - **Re-record:** discards the previous Voice note and enables you to record a new voice note.
 - **Set default destination:** allows you to remove or edit the default destination.
 - **Save:** saves the Voice note and continues to the **Send** option.
7. To send the Voice note, press the **Send** soft key or select the **Send** to option in the **Options** menu.
8. Highlight one of the following send options:
 - **Recent recipients:** allows you to select either a number or an address from the last 30 destinations you entered.
 - **Phonebook:** allows you to enter the phone number you want from your phonebook.
 - **New recipient:** allows you to manually enter a phone number or email address.
 - **My Album:** allows you to send the message to My Album.
 - **My Journal:** allows you to send the message to My Journal.
9. Highlight the selection and press the **OK** key.
10. To add another recipient, press the **Option** soft key, select **Add recipient** and press the **Select** soft key or the **OK** key.
11. To change a recipients type, press the **Option** soft key, select **Change recipient type**, then press the **Right Navigation** key.
12. Select **To**, **Cc**, or **Bcc** and press the **Select** soft key or the **OK** key.

13. Press the Send  key to send this voice note.

Your phone then sends the message. After the phone has successfully sent the message, it is saved in the Sentbox.

Text Messages

Short Message Service (SMS) allows you to send and receive short text messages to and from other mobile phones. In addition, your phone supports the Enhanced Messaging Service (EMS), which enables you to include simple graphics, melodies, and animated images in your messages. To use this feature, you must subscribe to T-Mobile's message service.

The Message icon  appears when you have received a new text message. When the memory is full, the message icon will flash on your phone and you cannot receive any new messages. You must delete a message before you can receive additional messages.

- Use the Delete option in each message box to erase obsolete messages.

Create new

In this menu, you can write and send a text message.

Creating a Simple Text Message

1. In Idle mode, press the Menu soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the Messages icon. Press the Select soft key or the  key to enter the menu.
3. Highlight the Create new option and press the Select soft key or the  key.
4. Highlight the Text message option and press the Select soft key or the  key.
5. Create your message.

Note: For further details about entering characters, see "Changing the Text Input Mode" on page 37.
You can enter up to 160 standard Alphabet characters per page in your message. The message can be up to 12 pages long for a total of 1920 characters.

6. **When you finish entering your message, press the Options soft key. The following options are available:**
- **Insert from:** allows you to insert from the Text template, Phonebook, or Bookmarks. The Text messages template allows you to apply one of the preset message templates to the text. Select one of the 10 items stored in the Text messages Template menu. Phonebook allows you to add names and phone numbers to your message. Bookmarks allows you to add Internet addresses to your message.
 - **Add content:** allows you to add a picture, animation, or melody to your message.
 - **Attach:** allows you to attach a Name card, Schedule, Anniversary item, Miscellaneous item, or Tasks to your message.
 - **Save to Drafts:** save the message to your Drafts folder.
 - **Select language:** allows you to set the language to English, Français, and Español.
 - **Text style:** allows you to format the style of the text.
For the Text size, Large, Small and Medium sizes are available. Text mode options are Normal, Underline, and Strikethrough. The options for Bold and Italic are set by using the  key to place a checkmark by them.
 - **Back:** allows you to save to your draft folder without sending.
7. **Press the Send  key.**
8. **Highlight one of the following send options:**
- **Recent recipients:** allows you to select a number or an address from the last 30 destinations you entered.
 - **Phonebook:** allows you to enter the phone number you want from your phonebook.
 - **New number:** allows you to enter a phone number.
9. **The number you selected will be entered in the To text box. Press the Add soft key for the following options:**
- **Recent recipients:** allows you to select from recipients of your previous messages.
 - **Phonebook:** allows you to enter the phone number you want from your phonebook.
 - **New number:** allows you to enter a phone number.
10. **When you have finished entering the destinations, press the Send  key to send the message.**

Adding an Attachment

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the Messages icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight the **Create new** option and press the **Select** soft key or the **OK** key.
4. Highlight the **Text message** option and press the **Select** soft key or the **OK** key.
5. Create your message.

Note: For further details about entering characters, see *"Changing the Text Input Mode"* on page 37. You can enter up to 160 standard Alphabet characters per page in your message. The message can be up to 12 pages long for a total of 1920 characters.

6. When you finish entering your message, press the **Options** soft key.
7. Highlight the **Attach** option and press the **Select** soft key or the **OK** key.
8. Highlight one of the following options and press the **Select** soft key or the **OK** key.
 - **Name card:** inserts a name card selected from the Contact list.
 - **Schedule:** attaches a schedule that was created in the Calendar menu.
 - **Anniversary:** attaches an Anniversary event created in the Calendar menu.
 - **Miscellaneous:** attaches a Miscellaneous event created in the Calendar menu.
 - **Task:** attaches a Task list created in the Calendar menu.

A list of the selected type of items displays.

9. Highlight a Name card, Schedule, Anniversary, Miscellaneous item, or Task and press the **Select** soft key or the **OK** key. You are returned to your message text, which now includes an attachment icon.
10. Send your message. (For further details about sending a text message, see *"Creating a Simple Text Message"* on page 56.)

Picture Messages

Picture Messaging is a messaging service that provides delivery of personal picture messages from phone to phone or from phone to email.

In addition to the familiar text content available via traditional text messages, picture messages can contain images, graphics, voice, and audio clips.

A Picture Messaging message is a multimedia presentation contained in a single file. It is not a text file with attachments.

This type of message must first be retrieved from T-Mobile's voice mail server before it can be viewed. The  appears in your Inbox list to indicate any Picture messages which have not yet been retrieved. The Message icon () appears once you have successfully retrieved a new picture message from the voice mail server.

Using the Picture Messaging feature, your phone can receive and send messages that contain multimedia files, such as photos, sounds and images that you downloaded from the Internet and voice notes you recorded. This function is available only if it is supported by your service provider. Only phones that offer picture messaging features can receive and display picture messages.

Create new

This menu allows you to create a new picture message and then send it to one or more destinations.

Creating and Sending a Picture Message

1. In Idle mode, press the Menu soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the Messages icon and press the Select soft key or the  key to enter the menu.
3. Highlight the Create new option and press the Select soft key or the  key.
4. Highlight the Picture message option and press the Select soft key or the  key.
5. Highlight Subject and press the  key.
6. Enter the subject of your message and press the  key.

Note: For more information about entering characters, see "Using ABC Mode" on page 40.

7. To add a picture, highlight the Image & Video option and press the  key.

Picture Messages

8. **Highlight one of the following options and press the  key or the  key.**
 - **Add:** adds a new picture (taken by the camera in your phone), a previously downloaded image, photo, video (recorded on the camera), downloaded video, or a video saved in the Videos folder.
 - **Preview:** shows the message as the recipient(s) will see it.
 - **Save to:** saves the unsent message to either the Drafts folder or as a picture message template.
 - **Add page:** adds an additional page containing a subject, image or video, a sound file, and additional message text.
 - **Delete page:** deletes an added page. (Only displays if you added a page).
 - **Edit page:** allows you to edit the Duration, Move the page forward, or move the page backward. (Only displays if you added a page).
 - **Duration:** allows you to enter the number of pages allowed for this message.
 - **Attach:** inserts a Name Card, Schedule, Anniversary, Miscellaneous event, or Task in the message.
 -
9. **Select an image and press the  key. Highlight the **Add** option and press the  key or the  key to add it to your message.**
10. **To add a sound, highlight the **Sound** option and press the  key.**
11. **Highlight one of the following options and press the  key or the  key.**
 - **Add:**
 - **Record audio:** allows you to record a new voice message.
 - **Sounds:** allows you to select a sound from your Sounds folder.
 - **Voice list:** takes you to the Voice list (Recorded audio) folder to select a voice note to add.
 - **Preview:** shows the message as the recipient(s) will see it.
 - **Save to:** saves the unsent message to either the Drafts folder or as a picture message template.
 - **Add page:** adds an additional page containing a subject, image or video, a sound file, and additional message text.
 - **Delete page:** deletes an added page. (Only displays if you added a page).
 - **Edit page:** allows you to edit the Duration, Move the page forward, or move the page backward. (Only displays if you added a page).
 - **Duration:** allows you to enter the number of pages allowed for this message.
 - **Attach:** inserts a Name Card, Schedule, Anniversary, Miscellaneous event, or Task in the message.
12. **Select a Sound or Voice list and press the  key.**

13. Highlight the **Add** option and press the **Select** soft key or the **OK** key to add the sound to your message.
14. To add a text message, highlight **Text** and press the **OK** key.
15. Enter your message and press the **OK** key.
16. To change the **Subject** or **Message**, select a category and press the **Options** soft key. Highlight **Edit** to edit the item.
17. To change the image or sound with another one, select a category and press the **Options** soft key. Depending on the category selected, highlight **Change** to remove or replace the item.
18. When you have finished creating the message, press the **Send** soft key.
19. Highlight one of the following send options, press the **Send** soft key or the **OK** key:
 - **Recent recipients:** allows you to select a number or an address from the last 30 destinations you entered.
 - **Phonebook:** allows you to enter the phone number you want from your phonebook.
 - **New recipient:** allows you to manually enter a phone number or email address.
 - **My Album:** allows you to send the message to My Album.
 - **My Journal:** allows you to send the message to My Journal.
20. The number or address you selected will be entered in the **To** text box.
21. If you selected more than one recipient, press the **Options** soft key for the following options:
 - **Add recipients:** allows you to add additional recipients to this message.
 - **Change recipient:** allows you to change the **To**, **Cc**, or **Bcc** additional numbers.
 - **Edit message:** allows you to compose an outgoing picture message that includes the current photo.
22. Press the **Send** **OK** key. Your phone then sends the message.

Inbox

The Inbox stores messages that you have received. You can tell what kind of message it is by the icon displayed. If the icon envelope is open then the message has been read, otherwise it will appear closed.

The following types of messages may appear in your inbox:



Voice notes



Text messages



Picture messages (retrieved)



Push messages

When you enter the Inbox, the list of messages displays with the sender's phone numbers, or names, if available in your Phonebook. After you have read the message, the envelope in the icon will appear opened.

Note: By pressing the Left or Right Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

1. In Idle mode, press the Menu soft key to access Menu mode.
2. Using the Navigation keys, scroll to the Messages icon. Press the Select soft key or the **OK** key to enter the menu.
3. Highlight the Inbox option and press the Select soft key or the **OK** key.

Viewing a Text Message from the Inbox

1. Select a text message from the list and press the View **OK** soft key.
2. Press the Options soft key to display the following options:
 - Reply via: allows you to send a reply to the sender by sending a Text message, Picture message, or Voice note.
 - Call back: Places a call back to the number.
 - Forward: allows you to forward the text message to another person.
 - Save address: allows you to save the selected address to the Phonebook or SIM.
 - Save media: allows you to save attached media to a folder.
 - Delete: deletes the selected text message or multiple messages.

- Move to phone / SIM: allows you to move the message from the SIM card (SIM) into the phone's memory (M), or from the phone's memory onto the SIM card. Depends on where the current message was saved.
- Lock / Unlock: prevents/allows deletion of the message.

3. To scroll through the contents, press the Up or Down Navigation key.

While reading a text message, you may choose the following options by pressing the Options soft key:

- Reply via: allows you to send a reply to the sender by sending a Text message, Picture message, or Voice note.
- Call back: places a call back to the number.
- Forward: allows you to forward the message to another number.
- Save address: allows you to extract the sender's number and URL, email addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- Save media: allows you to extract the sender's media file from the message so you can save it in the Save media list.
- Delete: allows you to delete the message.
- Move to phone / SIM: allows you to move the message from the SIM card (SIM) into the phone's memory (M), or from the phone's memory onto the SIM card. Depends on where the current message was saved.
- Lock / Unlock: prevents/allows deletion of the message.

Viewing a Picture Message from the Inbox

1. Highlight an unretrieved picture message  from the list and press the Options soft key. The following options will appear:
 - View: opens the selected picture message and displays the contents.
 - Retrieve: begins the process of retrieving the picture message from the voice mail server and preparing it for viewing.
 - Delete: deletes the selected picture message or all messages.
 - Sort by: allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
 - Lock / Unlock: prevents/allows deletion of the message.
2. Select View and press the Select soft key to display the Picture message.

Tip: Once the message has been viewed you can press the View  key to redisplay the message contents.

3. To scroll through the contents, press the Up or Down Navigation keys.

While viewing a picture message, you may choose the following options by pressing the Options soft key:

- Reply via: allows you to send a reply to the sender by sending a Picture message, Text message, or Voice note.
- Reply all via: allows you to send a reply to all recipients by sending a Picture message or Voice note.
- Call back: allows you to call the sender back.
- Forward: allows you to forward the message to another number.
- Replay: allows you to review the picture message.
- Save address: allows you to cut and paste the address to send a text message, or picture message.
- Save media: allows you to save message media to your Image folder, Sound folder, vCard, or vCalendar.
- Delete: deletes the selected picture message.
- Lock / Unlock: prevents/allows deletion of the message.
- Properties: shows you information about the message, such as time and date the message was received, the sender's email address or phone number, recipient's email address or phone number, Cc, message size, priority, and class.

Listening to a Voice Note from the Inbox

1. Select a Voice Note  from the list and press the Options soft key.

The following options will appear:

- Reply via: allows you to send a reply to the sender by sending a Voice note, Text message, or Picture message.
- Reply all via: allows you to send a reply to all recipients by sending a Voice note or Picture message.
- Call back: allows you to call the sender back.
- Forward: allows you to forward the message to another number.
- Delete: allows you delete the selected or all voice notes saved.
- Sort by: allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
- Lock / Unlock: prevents/allows deletion of the message.
- Properties: shows you information about the message, such as time and date the message was received, the sender's email address or phone number, recipient's email address or phone number, Cc, message size, priority, and class.

-Or-

2. Press the Play  key to listen to the message contents.

While listening to the message, you may choose the following options by pressing the Options soft key:

- **Reply via:** allows you to send a reply to the sender by sending a Voice note, Text message, or Picture message.
- **Reply all via:** allows you to send a reply to all recipients by sending a Voice note or Picture message.
- **Call back:** allows you to call the sender back.
- **Forward:** allows you to forward the message to another number.
- **Replay:** allows you to replay the voice note.
- **Save address:** allows you to cut and paste the address to send a text message, or picture message.
- **Save media:** allows you to save message media to your Image folder, Sound folder, vCard, or vCalendar.
- **Delete:** allows you to delete the selected message or all messages.
- **Lock / Unlock:** allows you to prevent/allow deletion of the message.
- **Properties:** shows you information about the message, such as time and date the message was received, the sender's email address or phone number, recipient's email address or phone number, Cc, message size, priority, and class.

Viewing a Picture Message When You Receive It

When a new picture message comes in, the display shows the Picture Messaging Message icon.

1. Press the **View** soft key to view the message.
Press the **Exit** soft key if you want to view the message later in the Inbox.
2. Press the **Options** soft key or the  key to access the various options described in the previous procedure.
3. When you are finished, press the  key.

Sentbox

This message box stores messages that you have sent.

When you enter this menu, the list of messages in the box displays with the recipients' phone numbers or names, if available in your Phonebook.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Sentbox** option and press the **Select** soft key or the  key.

Note: By pressing the Up or Down Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

4. Select a message from the list and press the View  key to view the message contents.

Note: While reading a message, you can choose different options by pressing the Options soft key.

Outbox

This message box stores messages that you have attempted to send but have not actually been sent yet.

When you enter this menu, the list of messages in the box displays with the recipients' phone numbers or names, if available in your Phonebook.

1. In Idle mode, press the Menu soft key to access Menu mode.
2. Using the Navigation keys, scroll to the Messages icon. Press the Select soft key or the  key to enter the menu.
3. Highlight the Outbox option and press the Select soft key or the  key.

Note: By pressing the Up or Down Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

4. Select a message from the list and press the View  key to view the message contents.
5. Press the Up or Down Navigation keys to scroll through the contents.

Note: While reading a message, you can choose different options by pressing the Options soft key.

Drafts

This message box stores messages that you may want to edit or send at a later time.

When you enter this menu, the list of messages in the box displays.

1. In Idle mode, press the Menu soft key to access Menu mode.
2. Using the Navigation keys, scroll to the Messages icon. Press the Select soft key or the  key to enter the menu.
3. Highlight the Drafts option and press the Select soft key or the  key.

Note: By pressing the Up or Down Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

4. Select a message from the list and press the Options soft key.

5. Highlight the **Edit** option and press the **Select** soft key or the **OK** key to edit the message contents.
6. Press the **Send** **OK** key. Your phone then sends the message.

Note: While viewing a draft message, you can choose different options, depending on the type of message, by pressing the **Options** soft key.

Templates

Besides entering message text using the keypad keys, you can speed message composition by including copies of stored text and/or image templates in your message.

1. In **Idle** mode, press the **Menu** soft key to access **Menu** mode.
2. Using the **Navigation** keys, scroll to the **Messages** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight the **Templates** option and press the **Select** soft key or the **OK** key. The following options are available.
 - Text templates
 - Picture message templates

Sending a Text template

1. Highlight the **Text templates** option and press the **Select** soft key or the **OK** key.
2. Select a template from the **Templates** list and press the **View** **OK** soft key.
The template displays on the screen.
3. Press the **Send** **OK** soft key and select one of the following options:
 - **Recent recipients:** allows you to select a number or an address from the last 30 destinations you entered.
 - **Phonebook:** allows you to enter the phone number you want from your phonebook.
 - **New number:** allows you to manually enter a phone number or email address.
4. After selecting a recipient, press the **Send** **OK** soft key.
The template message sends to the select recipient(s).

Creating a Picture Message template

Note: Prior to sending a Picture message template you must create a template or have existing templates created and placed in the Template folder.

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
 2. Using the **Navigation** keys, scroll to the **Messages** icon and press the **Select** soft key or the **OK** key to enter the menu.
 3. Highlight the **Create new** option and press the **Select** soft key or the **OK** key.
 4. Highlight the **Picture message** option and press the **Select** soft key or the **OK** key.
 5. Highlight **Subject** and press the **OK** key.
 6. Enter the subject of your message and press the **OK** key.
-

Note: For more information about entering characters, see *"Using ABC Mode"* on page 40.

7. Add a picture by highlighting the **Image & Video** option and press the **OK** key.
8. Select the **Add** option and press the **Right Navigation** key.
9. Highlight one of the following options and press the **Select** soft key or the **OK** key.
 - **Take picture:** allows you to take a picture and then add it to the template.
 - **Downloaded image:** allows you to view and select a previously downloaded image.
 - **Photos:** allows you to view a photo and add it to the template.
 - **Record Video:** allows you to record a video and add it to the template.
 - **Downloaded video:** allows you to view and select a previously downloaded video.
 - **Videos:** allows you to select a video saved to the videos folder.
10. If you are adding an image, photo or video, press the **Options** soft key. Highlight the **Add** option and press the **Select** soft key or the **OK** key.
11. If you take a picture or video, press the **Add** soft key. The picture or video is added to the **Image & Video** folder.
12. To add a sound, highlight the **Sound** option and press the **OK** key.
13. Highlight the **Add** option and press the **Right Navigation** key.

14. Highlight one of the following options and press the **Select** soft key or the **OK** key.

- **Record audio**: allows you to record a new voice message.
- **Sounds**: allows you to select a sound from your Sounds folder.

Note: Ensure that the Sound file is not locked (locked files display a key icon to the right of the sound file). Locked files cannot be added to a Picture Message template.

- **Voice list**: takes you to the Voice list (Recorded audio) folder to select a voice note to add.
15. If you are adding a Sound or Voice list, highlight the **Add** option and press the **Select** soft key or the **OK** key.
 16. If you record a Voice note, after recording press the **Add** soft key.
 17. To add text, highlight the **Text** option and press the **OK** key.

Note: For more information about entering characters, see *"Using ABC Mode"* on page 40.

18. Enter your text and press the **OK** key.
19. When you are finished creating the Picture Message template, press the **Options** soft key.
20. Highlight the **Save to** option and press the **Right Navigation** key.
21. Select the **Templates** option and press the **Select** soft key or the **OK** key.

Sending a Picture message template

1. Create and add a Picture message template to the Templates folder. For more information, refer to *"Creating a Picture Message template"* on page 68.
2. In Idle mode, press the **Menu** soft key to access the Menu mode.
3. Using the Navigation keys, scroll to the Messages icon and press the **Select** soft key or the **OK** key to enter the menu.
4. Scroll to the **Templates** option and press the **Select** soft key or the **OK** key.
5. Highlight the **Picture message templates** option and press the **Select** soft key or the **OK** key.
6. Select a template from the **Templates** list and press the **View** **OK** soft key.
The template displays on the screen.

Voice Mail

7. Press the Send  soft key and select one of the following options:
 - Recent recipients: allows you to select a number or an address from the last 30 destinations you entered.
 - Phonebook: allows you to enter the phone number you want from your phonebook.
 - New recipient: allows you to manually enter a phone number or email address.
 - My Album: allows you to send the selected Picture template to My Album.
 - My Journal: allows you to send the selected Picture template to My Journal.
8. After you select the recipient, My Album or My Journal, press the Send soft key.

The template message sends to the select recipient(s), or selected destination.

Voice Mail

This menu provides you with a way of accessing your voice mailbox, if provided by your network.

1. In Idle mode, press the Menu soft key to access Menu mode.
2. Using the Navigation keys, scroll to the Messages icon. Press the Select soft key or the  key to enter the menu.
3. Highlight the Voice mail option and press the Select soft key or the  key. The following options are available:
 - Call voice mail: before using the Call voice mail option, you must enter the Voice server number obtained from T-Mobile customer service. You can then select this option and press the Select soft key or the  key to listen to your messages. You can also connect to the voice server by pressing and holding the  key in Idle mode.

Tip: You can also connect to the voice server by pressing and holding the  key in Idle mode.

- Voice server number: allows you to change the voice mail server number, if necessary.

Note: Voice mail is a network feature. For further details, please contact T-Mobile customer service.

Delete all

This menu allows you to delete all of the messages in each message box. Or, you can also delete all of your messages in all message boxes at one time.

Important!: Once messages have been deleted, they cannot be recovered.

1. Highlight a message box to clear and press the  key to place or remove a check mark next to your selection.

Tip: To delete all of your messages, select the All messages option.

2. Press the Delete soft key to delete the marked objects.
3. After you receive the Delete all With Protection? confirmation, press the Yes soft key or press the No soft key.

Settings

In this menu, you can set up a default text message or a picture message. The last setting you accessed is automatically activated for sending subsequent messages.

Text message

- **Service center:** allows you to store or change the number of your message center, which is required when sending messages. You must obtain this number from T-Mobile customer service.
- **Destination address:** allows you to enter a number that you would like to send all messages to. You can still message others, but this number will always appear in the Recipient list.
- **Validity period:** allows you to set the length of time your text messages are stored at the message center while attempts are made to deliver them.
- **Reply path:** allows the recipient of your message to send you a reply message using your message center, if your network supports this service.
- **Delivery report:** allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.

Picture message

The following options are used to set Send and Receive settings for Picture messages.

Send Settings

- **Delivery report:** when this option is enabled, the network informs you whether or not your message has been delivered.
- **Read reply:** when this option is enabled, your phone sends a request for a reply along with your message to the recipient.
- **Priority:** you can select the priority level of your messages.
- **Expiry date:** set the length of time your messages are stored in the message center while the network attempts to deliver them.
- **Delivery time:** you can set a delay time before the phone sends your messages.

Receive Settings

- **Anonymous reject:** you can set your phone to automatically reject anonymous messages.
- **Ads allowed:** you can set your phone to automatically receive advertising messages.
- **Report allowed:** you can set the option to receive a delivery report.

Memory Status

You can check the amount of the memory being used and the memory remaining for picture messages.

The display shows the total space including the used and free space. Press the Right Navigation key to view how much space and the number of messages currently occupy each message box type:

- Text message(SIM card)
- Text message(Phone)
- Picture message(Size)
- Picture message(Count)
- Broadcast message
- Push message

Broadcast Messages (SIM Card Dependent)

This network service allows you to receive text messages on various topics, such as the weather or traffic.

Please contact T-Mobile's customer service center for further details.

Instant Messaging (IM)

Instant Messaging is a way of sending short, simple messages that are delivered immediately to users online at that moment.

Before using this feature, you need to subscribe to a messenger service. For further details, contact T-Mobile customer service. Your handset has 4 pre-loaded Messaging services (AIM, ICQ, Windows Live, and Yahoo!).

Starting your Instant Messaging

1. In Idle mode, press the Menu soft key to access Menu mode.
2. Using the Navigation keys, scroll to the IM icon. Press the Select soft key or the  key to enter the menu.
3. Highlight the messenger service to which you are subscribed to using the Up or Down Navigation key and press the Select soft key or the  key.
4. Highlight the Sign on, Connect, or Sign in option, depending on your messenger service and press the Select soft key or the  key.
5. Enter the required sign on information such as ID and password, then press the Down Navigation key.

Note: The information required for sign on will vary depending on the Instant Messaging provider you are using.

6. With all of the appropriate fields filled in, press the OK soft key.
7. If you use Windows Live, agree to the terms and conditions of use for this service and press the I agree soft key or the  key.
8. Follow the on-screen instructions to read, reply to, compose, send, and manage your Instant Messaging account.

Using the Instant Messenger Options

After selecting an Instant Messaging service, the following options appear:

- Sign on/Connect/Sign in: allows you to login to your Instant Messaging account.
- Saved conversations: shows permanent records of your Instant Messaging conversations.
- Offline conversations: shows a listing of the last 10 IM conversations made while you were online.
- Preferences: this option applies only to windows Live. Allows you to delete Favorite IDs, turn Power on Sign in On or Off, turn Automatic sign-in On or Off, and adjust the sound settings for New IM, Alert, System message, and Repetition.
- Settings: allows you to turn the Power on sign in/Power on connect/Power on sign in On or Off, add or delete Favorite IDs, turn the Auto-sign in/sign on/Connect On or Off and adjust the Sound settings for Receive message, Contact alert, System message, and Repetition.

Instant Messaging (IM)

- **Help:** provides helpful information about IM providers such as: Sign up, Sign on, Buddies, Sending IMs, Receiving IMs, Privacy, and Away.

Section 8: Changing Your Settings

Topics Covered

- Time & Date
 - Phone Settings
 - Display Settings
 - Sound Settings
 - Bluetooth
 - Synchronization
 - Network Services
 - Security
 - Reset Settings
-

This section explains the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone.

Time & Date

This menu allows you to change the current time and date displayed.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Settings** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight the **Time & date** option and press the **Select** soft key or the **OK** key. The following options are available:
 - Time zone updating: allows you to receive time information from T-Mobile's network.
 - Automatic: the phone automatically updates the time and date according to the current time zone using the network service.
 - Manual only: you need to manually set the time and date according to the current time zone using the Set time menu.
 - Prompt first: the phone asks for a confirmation before the update.
 - Home zone: identifies the current time zone by its relationship to GMT (Greenwich Mean Time).
 - Time: allows you to change the hour and minute.

Phone Settings

- AM/PM: allows you to set either AM or PM, provided Time format is set to 12 hours.
- Time format: allows you to select whether your time is displayed in either 12 hours or 24 hours format.
- Date: allows you to enter the month, day, and year.
- Date format: allows you to select MM/DD/YYYY, DD/MM/YYYY, or YYYY/MM/DD format.
- Week start day: allows you to select the day of the week you wish to set as a start day. Choose from Sunday or Monday.

To change your time and date settings:

1. Use the Up or Down Navigation key to select the option you wish to change.
2. To Set time or Set date, use the Left or Right key to position the cursor over the number you wish to change.
3. Enter the desired number.
4. To change other options, use the Left or Right key to select the desired setting.
5. When you are finished changing your settings, press the Save soft key to save your settings. Otherwise press the Back soft key.

Note: Automatic updates of time and date do not change the time you have set for alarm settings or calendar memos.

Phone Settings

You can customize various phone settings.

1. In Idle mode, press the Menu soft key to access Menu mode.
2. Using the Navigation keys, scroll to the Settings icon. Press the Select soft key or the  key to enter the menu.
3. Highlight the Phone settings option and press the Select soft key or the  key.

Language

This menu allows you to select a display language for Text language and Input mode. Choose from Automatic, English, Français, and Español.

Greeting message

This menu allows you to set a greeting to be displayed briefly when the phone is switched on.

Note: For details about entering characters, see "Entering Text" on page 37.

Slide settings

This menu determines whether you accept or reject calls with the slide in the up position or when the slide is down.

Extra settings

You can turn the automatic redialing or answering features on or off.

1. To turn a feature on, highlight the feature and press the  key. A check mark displays in front of the option.
2. To turn a feature off, highlight the checked feature and press the  key. The check mark no longer displays.

The following options are available:

- Auto redial: when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

Note: The interval between call attempts varies.

- Anykey answer: when this option is checked, you can answer an incoming call by pressing any key, except the  key or the Reject soft key. To reject the call, press the  key or the Reject soft key. When this option is unchecked, you must press the  key or the Accept soft key to answer a call.
 - Open to answer: when this option is checked, you can simply open the phone to answer a call. When it is unchecked, you must open the phone and press a key to answer the incoming call, depending on the setting of the Anykey answer option.
3. When you have finished changing your settings, press the **Save** soft key to save your settings. Otherwise press the **Back** soft key.

Airplane mode

Airplane Mode allows you to use many of your phone's features, such as Games, Voice Notes, and so on, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

1. To turn a feature on, highlight the Airplane option and press the Select soft key or the  key.
2. Highlight Off or On and press the Select soft key.

Display Settings

In this menu, you can change various settings for the display or backlight.

Wallpaper

This menu allows you to change the background image to be displayed in Idle mode.

The following options are available:

- Browse wallpaper: allows you to download additional wallpapers from t-zones.
- Default wallpapers: allows you to choose from a list of wallpapers included with your phone.
- Downloaded images: allows you to choose an image from your downloaded images folder.
- Photos: allows you to choose a photo from Photos folder.

To change the background image:

1. Scroll through the list by pressing the Navigation keys.
2. Make a selection and press the Options soft key and select the Select option or press the  key. Your wallpaper will be updated.

Info display

This menu allows you to set text style (Outline, Shadow, or Normal) and text color (White, Yellow, Blue, Green, Red, or Black).

1. Press the Left or Right Navigation keys to change the settings.
2. Press the Save soft key to apply your changes, or the Back soft key to cancel.

LCD Brightness control

You can adjust the display brightness to see it better in different lighting conditions.

1. Press the Left or Right Navigation keys to change your settings.
2. Press the OK soft key to save your changes, or the Back soft key to cancel.

Front LCD Contrast

You can adjust the display contrast on the Front LCD to see it easier under different lighting conditions.

1. Press the Left or Right Navigation keys to change your settings.
2. Press the OK soft key to save your changes, or the Back soft key to cancel.

Backlight

In this menu, you can select the length of time that the keypad backlight is on and how much longer the display is illuminated before going off.

The On setting is how long the keypad backlight is on. You can select 15 sec., 30 sec., 1 min., 3 min., or 10 min.

The Dim option is how much longer after the keypad backlight goes off that the display remains lit. You can select Off, 15 sec., 30 sec., 1 min., or 3 min.

For example, if you set On for 30 sec. and Dim for 5 sec., after 30 seconds the backlight on the keys would turn off and 5 seconds later the display light would turn off.

1. Press the Left or Right Navigation keys to change each field's settings.
2. Press the Save soft key to save your changes, or the Back soft key to cancel.

Dialing display

This menu allows you to select the size and color of your dialing font and the background color.

To change the size of the font:

1. Highlight the Font size option and press the Select soft key or the  key.
2. Use the Left or Right key to select between: Large, Medium, or Small.
3. Press the Save soft key or the  key to save your change. Otherwise, press the Back soft key.

To change the color of the font:

1. Highlight the Font color option and press the Select soft key or the  key.
2. Use the Left or Right key to select either Basic (black), Rainbow, or Monochrome. If you select Monochrome, you can select a particular font color by using the Down Navigation key and then scrolling through the available color choices.
3. Choose from up to 10 different colors.
4. Press the Save soft key or the  key to save your change. Otherwise, press the Back soft key or the  key.

To change the background color:

1. Highlight the Background color option and press the Select soft key or the  key.
2. Use the Left or Right key to select between 10 different colors or None.
3. Press the Save soft key or the  key to save your change. Otherwise, press the Back soft key.

Calendar

This option allows you to On (enable) or Off (disable) the calendar display for your background wallpaper.

Show caller information

By turning this option on, when you miss an incoming call, information such as the caller name and/or calling number is displayed on your screen when your missed calls are listed. You can also elect to have the caller information appear on the cover display.

Sound Settings

You can customize various sound settings.

Incoming call

Note: When downloading Mega Tones® or HiFi Ringers™, charges may apply.

Browse MegaTones

Using the **Browse MegaTones** option on the sounds list, you can quickly access the T-Mobile website and download new sounds by using the t-zone browser.

Press the **Connect** soft key to purchase additional sound files.

Browse HiFi Ringers

Using the **Browse HiFi Ringers** option on the sounds list, you can quickly access the T-Mobile website and use the t-zone browser to download new HiFi Ringers.

Press the **Connect** soft key to purchase additional ringtones.

Ringtone

This menu allows you to select a ring melody. Highlight **Ringtone** and press the **OK** key. Use the **Up** or **Down** key to highlight a ring tone or press the **Left** or **Right** key to select a file from either the **Default Sounds**, or **Sounds** folders. Press the **Select** soft key or the **OK** key.

Volume

This menu allows you to adjust the ring volume to one of 7 levels.

Use the **Right** or **Left** key to increase or decrease the volume.

Alert type

This menu allows you to specify how you are to be informed of incoming calls. Use the **Right** or **Left** key to select a **Alert type**.

The following options are available:

- **Melody:** the phone rings using the ring melody selected in the **Ringtone** menu.
- **Vibration:** the phone vibrates but does not ring.
- **Vibration then melody:** the phone vibrates 3 times and then starts ringing.

Keypad tone

This menu allows you to select the key tone and volume that the phone sounds when you press a key. You can set the keypad tone to **Beep**, **Voice**, or **Xylophone**.

Use the **Right** or **Left** Navigation keys to make your selections.

- To turn off the sound, select **Off**.

You can adjust the volume with the **Right** or **Left** Navigation keys.

Message tone

This menu allows you to set up the ringers for incoming text, picture, and broadcast messages. You can set the Tone, Alert type, and Repetition.

Use the Up or Down Navigation keys to make your selections.

Power on/off

This menu allows you to select the melody that the phone sounds when it is switched on and off.

- To turn off the sound, select Off.

Folder tone

This menu allows you to choose from four tones, or Off when opening the folder of your phone.

Silent mode

This menu allows you to select whether or not your phone will vibrate while in silent mode. You may choose between Vibration and Mute.

Extra tones

You can customize additional tones for the phone.

1. To turn a given tone on, press the  key. A check mark displays in front of the option. Press the Save soft key to save the setting.
2. To turn a given tone off, press the  key. The check mark no longer displays in front of the option. Press the Save soft key to save the setting.

The following options are available:

- Minute minder: sets whether or not the phone beeps every minute during an outgoing call to keep you informed of the length of your call.
- Connection tone: sets whether or not the phone beeps when your call is connected to the system.
- Alerts on call: sets whether or not you receive tones when a message arrives while you are on a call.

Bluetooth

About Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

The following Bluetooth options are available:

Turn Bluetooth On/Off

This option allows you to turn Bluetooth On or Off. Make a selection and press the **Select** soft key or the  key.

My devices

This option allows you to search for new Bluetooth devices. Highlight the **Search new device** option and press the **Select** soft key or the  key. The phone will search for available devices.

My visibility

This option allows you to make your phone visible (On) to nearby Bluetooth devices in search mode, or invisible (Off). Make a selection and press the **Select** soft key or the  key.

My phone name

This option allows you to change the name your phone sends to other Bluetooth devices. Use the keypad alpha-numeric keys to change the current phone name. (For more information, see “*Entering Text*” on page 37.) Press the **OK** soft key to save your changes. Press the  key to discard your changes and return to idle mode.

Security modes

This option allows you to set your security modes to Off or On. Make a selection and press the **Select** soft key or the  key.

Features

Actually, the Bluetooth specification is a protocol that describes how the short-range wireless technology works, whereas individual profiles describe the services supported by individual devices. Profiles reduce the chance that different devices will not work together.

The following Service profiles are available:

- **Headset:** The remote Bluetooth headset enables both outgoing and incoming calls.
- **Handsfree:** The remote Bluetooth car kit enables both outgoing and incoming calls.
- **Serial port:** The remote Bluetooth device acts as a virtual serial port.
- **Dial up networking:** The remote Bluetooth device enables internet access through a phone modem.
- **File transfer:** The remote Bluetooth device enables users to transfer files from their handset to others.
- **Object push:** The remote Bluetooth device enables transfer of personal data to other devices.

Help

This options takes you to the T-Mobile Help menu in t-zones.

Synchronization

This feature allows you to back up (synchronize) Contact information stored on your phone with your T-Mobile account on the network. Each time you edit Contact information, your phone automatically synchronizes with the web Address Book.

Important!: Synchronization is a free service offered to T-Mobile customers.

Network Services

Call forwarding

This network service enables incoming calls to be re-routed to a secondary number that you specify.

Example: You may wish to forward your business calls to a colleague while you are on holiday.

To set your call forwarding options:

1. Select the Call forwarding option and then press the Select soft key or the  key.
2. Select a call forwarding option by pressing the Up or Down Navigation key and then press the Select soft key or the  key.

The following options are available:

- Forward always: all calls are forwarded until this feature is cancelled.
- Busy: calls are forwarded when you are already on another call.
- No reply: calls are forwarded when you do not answer the phone.
- Unreachable: calls are forwarded when you are not in an area covered by T-Mobile or when your phone is switched off.
- Cancel all: all call forwarding options are canceled.

3. Select the type of calls which will be forwarded, Voice calls or Data calls, by pressing the Up or Down Navigation key to select the appropriate field, and then press the Select soft key or the  key.

The current status displays. If the option has already been set, the number to which the calls are forwarded displays.

4. To activate call forwarding, select Activate by using the Left or Right key. The Forward to field then becomes available to input the number.
5. Enter the number to which the calls are to be forwarded within the Forward to text box and press the Select soft key or the  key. To enter an international code, press and hold the  key until the + sign displays.
6. To deactivate call forwarding, select Deactivate by using the Left or Right key.
7. When you select No reply in step 2, select the length of time the network waits for before forwarding a call.

The phone sends your settings to the network and the network's acknowledgement displays.

Call barring (SIM Card Dependent)

Call Barring allows you to restrict specific types of incoming and outgoing calls on your phone. This is useful if you allow someone to use your phone for a short period of time.

Call waiting

This network service informs you when someone is trying to reach you during another call.

You can specify individual call waiting options for voice calls and/or data calls.

To set your call waiting options:

1. Select the type of calls, Voice calls or Data calls, to which the call waiting option is to be applied by pressing the Up or Down Navigation key.
The screen informs you whether call waiting is activated or deactivated.
2. Press the Select soft key or the  key to access the call's status menu.
3. Highlight Activate or Deactivate and press the Select soft key or the  key.
4. Call waiting will then be either activated or deactivated for that type of call.
5. Select the Cancel all option to deactivate Call waiting on all voice and data calls.

Network selection

The Network Selection feature enables you to automatically or manually select the network used when roaming outside of your home area.

Note: You can select a network other than your home network only if there is a valid roaming agreement between the two.

To change the Network Selection mode:

1. Highlight the Search now option and press the Select soft key or the  key.
2. Press the Up or Down Navigation key until the network you want is highlighted and then press the Select soft key or the  key. The phone will scan for that network and, if available, you will then be connected.

To change your Default setup:

1. Highlight the Default setup option and press the Select soft key or the **OK** key.
2. Highlight either the Automatic or Manual option and press the Select soft key or the **OK** key.
 - If you select Automatic, you are connected to the first available network when roaming.
 - If you select Manual, the phone will begin searching for available networks. Press the Up or Down Navigation key until the network you want is highlighted and then press the Select soft key or the **OK** key. The phone then scans the selected network to see if you can be connected, and if a connection is possible, you will be readily connected.

Caller ID

You can prevent your phone number from being displayed on the phone of the person being called.

Note: Some networks do not allow you to change this setting.

The following options are available:

- Set by network: the default setting provided by the network is used.
- Hide number: your number does not display on the other person's phone.
- Show number: your number is sent each time you make a call.

Security

The Security feature enables you to restrict the use of your phone by others and to restrict the types of calls.

Various codes and passwords are used to protect the features of your phone.

PIN check

When the PIN Check feature is enabled, you must enter your PIN each time you switch on the phone. Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note: Before enabling or disabling the PIN Check feature, you must enter your PIN.

The following options are available:

- Disable: the phone connects directly to the network when you switch it on.
- Enable: you must enter the PIN each time the phone is switched on.

Change PIN

This feature allows you to change your current PIN, provided that the PIN check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

Phone lock

When the Phone lock feature is enabled, the phone is locked and you must enter the 4- to 8-digit phone password each time the phone is switched on.

Note: To change the phone password, see “Change password” on page 88.

Once you enter your password, you can use the phone until you switch it off.

The following options are available:

- **Disable:** you are not asked to enter the phone password when you switch on the phone.
- **Enable:** you are required to enter the phone password when you switch on the phone.

Change password

The Change password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

Note: The current password is the password you created on initial use of a password feature.

Once you have entered a new password, you are asked to confirm it by entering it again.

Note: If you change your password, be sure to write it down and keep it in a safe place. If you forget your password, your phone will require service to have it unlocked.

Lock application

Using this menu, you can lock your applications which provide access to information such as call records, phonebook, messages, images, videos, sounds and Other files. Once you have locked the contents, you must enter the phone's password to access the associated menus.

1. To select an item to lock, press the Up or Down Navigation key.
2. Place a check mark on the selected item, press the  key.
 - To lock all of the contents, select Lock all.

3. To remove a check mark, highlight the previously selected item and press the  key.
4. To lock the marked items, press the **Save** soft key.
5. Enter your password and press the **OK** soft key or the  key.

Note: To change this password, see “*Change password*” on page 88.

FDN mode

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available:

- **Disable:** you can call any number.
- **Enable:** you can only call phone numbers stored in the FDN list in your Phonebook.

To change the FDN Mode setting, you must enter your PIN2. You can obtain your PIN2 from T-Mobile’s customer service. You must also enter your PIN2 to add, change, or remove numbers in your FDN list.

Change PIN2

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must first enter the current PIN2 (obtained from T-Mobile) before you can specify a new one. Once you have entered a new PIN2, you are asked to confirm it by entering it again.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

Reset Settings

From this menu you can reset your phone and sound settings to the default settings.

The following options are available:

- **All:** Phone, Display, and Sound settings will be returned to default values.
- **Phone settings:** only phone settings will be returned to default values.
- **Display settings:** only display settings will be returned to default values.
- **Sound settings:** only sound settings will be returned to default values.

Reset Settings

To reset your settings:

1. Highlight one of the options and press the **OK** key to place a check mark next to the option.
2. Press the **Reset** soft key.
3. You will be prompted with **Reset settings?**. Press the **Yes** soft key.
4. Enter the 4- to 8-digit password and press the **OK** soft key or the **OK** key. You will receive a **reset** confirmation message.

Note: To change your password, see *"Change password"* on page 88.

Section 9: Fun & Apps

Topics Covered

- Files
 - Games
 - Camera
 - Organizer
-

This section outlines the various applications that are available on your phone.

Files

Files allows you to manage your sounds and images in one convenient location.

1. In Idle mode, press the Menu soft key to access the Menu mode.
2. Using the Navigation keys, scroll to the Fun & Apps icon. Press the Select soft key or the  key to enter the menu.
3. Highlight the Files option and press the Select soft key or the  key.

Sounds

In this menu, you can view the list of sounds downloaded from the web server or received in picture messages. You can set a downloaded sound as the current ring tone.

1. In Idle mode, press the Menu soft key to access Menu mode.
2. Using the Navigation keys, scroll to the Fun & Apps icon. Press the Select soft key or the  key to enter the menu.
3. Highlight the Files option and press the Select soft key or the  key.
4. Highlight the Sounds option and press the Select soft key or the  key.

Note: When downloading MegaTones® or HiFi Ringers™, charges may apply.

The following options are available:

Browse MegaTones

Using the Browse MegaTones option on the sounds list, you can quickly access the T-Mobile website and download new sounds by using the t-zone browser. Press the Select soft key to purchase additional MegaTones.

Browse HiFi Ringers

Using the **Browse HiFi Ringers** option on the sounds list, you can quickly access T-Mobile website and use the t-zone browser to download new HiFi Ringers. Press the **Select** soft key to purchase additional ringtones.

Sounds

Highlight an item in the **Sounds** menu and press the **Options** soft key. The following options are available:

- **Download new:** opens your web browser where you can download new sounds.
- **Send via:** allows you to send the sound file as part of a Picture message or by using a Bluetooth connection.
- **Set as:** allows you to set the sound as your Ringtone, a Caller ringtone, or an Alarm tone.
- **Delete:** allows you to delete the selected sound or multiple sounds.
- **Rename:** allows you to change the name of the sound.
- **Bluetooth visibility:** allows you to make this sound visible to Bluetooth connections.
- **Lock / Unlock:** allows you to prevent/allow deletion of this sound.
- **Properties:** displays the sound name, date, format, size, Protection, Provided by, and Forwarding.

Voice list

The **Voice list** contains your recorded audio messages. Highlight an item and press the **Options** soft key. The following options are available:

- **Send via:** allows you to send the audio message as part of a Picture message or by using a Bluetooth connection.
- **Delete:** allows you to delete the selected audio message or multiple audio messages.
- **Rename:** allows you to change the name of the audio message.
- **Bluetooth visibility:** allows you to make this audio message visible to Bluetooth connections.
- **Lock / Unlock:** allows you to prevent/allow deletion of the audio message.
- **Properties:** displays the audio name, date, format, length, size, and Protection.

Images

In this menu, you can view the list of images downloaded from the web server, taken with the built-in camera, or received in messages. You can set an image as the current background image.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Fun & Apps** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight the **Files** option and press the **Select** soft key or the **OK** key.
4. Highlight the **Images** option and press the **Select** soft key or the **OK** key.

The following options are available:

Browse Wallpapers

Using the **Browse Wallpapers** option, allows you to access the T-Mobile website and download new images using the t-zone browser.

- Highlight the **Wallpaper** option and press the **OK** key.

Note: When downloading Wallpapers, charges may apply.

Photos

In this menu you can review the photos you've taken. Highlight a photo and press the **Options** soft key to choose from the following options:

- **View:** allows you to view the photo on your display.
- **Send to My Album:** allows you to send your photos to My Album.
- **Send via:** allows you to send an image as part of a Picture message or by using a Bluetooth connection.
- **Set as:** allows you to set the photo as your Wallpaper or as a Caller ID.
- **Default destination:** allows you to Remove or Change where your photos are sent after you take them.
- **Delete:** allows you to delete the selected photo or multiple photos.
- **Rename:** allows you to rename the photo.
- **Display mode:** allows you to view the photos in Line view or Thumbnail mode.
- **Slide show:** allows you to see all of your photos in a slide show presentation.
- **Bluetooth visibility:** allows you to make this photo visible to Bluetooth connections.

- **Lock / Unlock:** allows you to prevent/allow deletion of the photo.
- **Properties:** displays the image name, date, format, resolution, size, and protection.

My Album

My Album is a private online picture album that you can use to store and share pictures, videos, voice messages, and text. For more information, see *"My Album"* on page 113.

Use the following procedures to access My Album.

Note: When accessing My Album, charges may apply.

1. In your t-zone browser, select the My Albums Menu link and press the Select soft key or the  key.
2. Photos sent to this folder are stored in the Inbox Album.
3. Use the Up or Down key to highlight a particular image and press the  key to view the photos.
4. Press the  key to exit t-zones and return to the Idle screen.

My Journal

Use a web browser to make notes in My Journal, your online diary and Weblog. Keep it private to store your personal memories and send email invitations to ask people to view and comment on your album. See your service provider for more information. For more information, refer to *"My Journal"* on page 113.

Note: When making notes on My Journal, charges may apply.

Downloaded images

This menu allows you to access your downloaded images.

Scroll to the image you want to view. By pressing the Options soft key you can access the following options:

- **Download new:** opens your web browser where you can download new images.
- **View:** displays the image.
- **Send via:** allows you to send an image as part of a Picture message or by using a Bluetooth connection.
- **Set as:** allows you to set the image as Wallpaper or as a Caller ID.
- **Delete:** allows you to delete the selected image or multiple images.

- **Rename:** allows you to change the name of the image.
- **Display mode:** allows you to set the display mode to Line view or Thumbnail view.
- **Slide show:** allows you to set the time for the slide show to cycle through the images. Choose 1 second or 3 seconds.
- **Bluetooth visibility:** allows you to make this image visible to Bluetooth connections.
- **Lock / Unlock:** allows you to prevent/allow deletion of the image.
- **Properties:** displays the image name, date, format, resolution, size, and Protection.

Videos

In this menu, you can view the lists of video clips downloaded from the web server, taken with the built-in camera, or received in messages.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Fun & Apps** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight the **Files** option and press the **Select** soft key or the **OK** key.
4. Highlight the **Videos** option and press the **Select** soft key or the **OK** key.

The following options are available:

Downloaded videos

This menu allows you to access your downloaded video clips.

Scroll to the video clip you want to play. By pressing the **Options** soft key you can access the following options:

- **Play:** plays the video clip.
- **Send via:** allows you to send a video clip as part of a Picture message or by using a Bluetooth connection.
- **Delete:** allows you to delete the selected video clip or multiple video clips.
- **Rename:** allows you to change the name of the video clip.
- **Display mode:** allows you to set the display mode to Line view or Thumbnail view.
- **Bluetooth visibility:** allows you to make this video clip visible to Bluetooth connections.
- **Lock / Unlock:** allows you to prevent/allow deletion of the image.
- **Properties:** displays the video clip name, date, format, size, and protection.

Videos

In this menu you can review the video clips you've recorded. Highlight a video clip and press the **Options** soft key to choose from the following options:

- **Play:** plays the video clip.
- **Send via:** allows you to send a video clip as part of a Picture message or by using a Bluetooth connection.
- **Delete:** allows you to delete the selected video clip or multiple video clips.
- **Rename:** allows you to change the name of the video clip.
- **Display mode:** allows you to set the display mode to Line view or Thumbnail view.
- **Bluetooth visibility:** allows you to make this video clip visible to Bluetooth connections.
- **Lock / Unlock:** allows you to prevent/allow deletion of the image.
- **Properties:** displays the video clip name, date, format, size, resolution, and Protection.

Other files

This menu allows you to view other types of files that you have stored on your phone. This includes Excel spreadsheets, text files, WMF files, PowerPoint presentations, PDFs, MHTML, and Word documents. You can send these files by picture message or Bluetooth.

Memory Status

You can check the amount of memory being used and memory remaining for sounds and images. Press the **Left** or **Right** navigation keys to scroll between the memory status of Sounds, Images, Videos, Others files, Games and Fun & Apps.

Games

You can download MIDlets (Java applications that run on mobile phones) from various sources using t-zones browser and then storing them in your phone.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Fun & Apps** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight the **Games** option and press the **Select** soft key or the **OK** key.

The following options are available:

Browse Games

You can download additional games from the T-Mobile website by using the Browse Games option.

1. Highlight the Browse Games option and press the  key, or press the Options soft key, highlight the Connect option, and press the Select soft key.

Note: When downloading games, charges may apply. MIDlet game options will differ depending on the MIDlet you select.

My Games

When you access the My Games folder, the list of default games appears. Once you have downloaded new games, they are then added to the list.

1. Highlight the My Games folder and press the  key, or press the Options soft key, highlight the Open option, and press the Select soft key.
2. In the My Games folder, scroll to the MIDlet application you want and press the Options soft key.

The following options are available:

- Start: starts the MIDlet.
 - Move to: allows you to move a MIDlet to another folder.
 - Delete: allows you to delete a MIDlet.
 - Lock / Unlock: allows you to prevent/allow deletion of the game.
 - Properties: shows information about the MIDlet, such as file size, application version, and vendor.
 - Permissions: allows you to change the permission levels for Use network and Subscriber privacy.
 - Memory status: Shows you how much memory is left for your games.
3. To exit and return to the Games list, press the Back soft key or the .

Games folder options

Games folder options allow you to open, add, delete, or rename games folders.

1. Highlight the **My Games** folder, or another folder, and press the **Options** soft key.

The following options are available:

- **Open:** allows you to access the games stored in the folder.
- **Add folder:** allows you to create a new games folder.
- **Delete:** allows you to delete the folder. (You must move or delete all games from the folder before deleting it.)
- **Rename:** allows you to change the name of the folder.

Camera

For information on using your camera, see “*Camera*” on page 106.

Organizer

The Organizer allows you to set alarms, schedule appointments, view the calendar, create Tasks, perform simple math calculations, check world time, perform unit conversions, set a timer, and use a stopwatch.

Alarm

This feature allows you to:

- Set up to 3 alarms to ring at specified times.
- Set the phone to switch on automatically and ring the alarm even if the phone is switched off.

The following options are available:

- **Wake-up alarm:** the alarm rings to wake you up in the morning.
- **Alarm1:** set the day, time, and tone for this alarm.
- **Alarm2:** set the day, time, and tone for this alarm.
- **Auto power-up:** alarm rings at the specified time even if the phone is turned off.
If the option is set to *Off* and the phone is switched off at the specified time, the alarm does not ring.

To set the alarm:

1. After selecting an alarm, highlight the Alarm option and press the Right navigation key to set Alarm to On.
2. Press the Down key to highlight the Alarm time option. Enter the time you want the Alarm to sound.
3. Press the Down key to highlight the AM/PM option. Press the Left or Right navigation key to set to AM or PM.
4. Press the Down key to highlight the Alarm day option. Press the Left or Right navigation key to set to Once, Everyday, Except weekend, or Except Sunday.
5. Press the Down key to highlight the Alarm tone option. Press the  key to bring up a list of alarm melodies.
6. Press the Up or Down Navigation key to highlight a default alarm melody. Or, press the Back soft key and then the  key to select another list of sounds that you may choose from.
7. Press the Save soft key to save your settings, or press the Back soft key to discard your settings.
8. Press the  key to return to Idle mode.

Note: Your phone is preset to a 12-hour format. To change the time format, see "Time & Date" on page 75.

9. To stop the alarm when it rings, press any key.

-OR-

Press the Snooze soft key if you set a Wake-up alarm and want the snooze option.

Calendar

With the Calendar feature, you can:

- Consult the calendar by month, week, or day.
- Set schedules and note anniversaries
- Make a tasks list.
- Write memos to keep track of your schedule.
- Set an alarm to act as a reminder, if necessary.
- Check your memory status.

When you select the Calendar menu, the following options are available:

Month view

When you select this option, the calendar displays the selected month with today's date highlighted.

At the bottom of the calendar, the following icons are displayed along with the number of entries for each:

-  Schedule items
-  Anniversary events
-  Miscellaneous items

The number of entries next to each icon reflects the number of entries for the selected day on the calendar.

The following options are available when you press the Options soft key:

- **View mode:** takes you to the Day view or Week view of the selected day.
- **Create:** allows you to create a Schedule, Anniversary, or Miscellaneous.
- **Go to:** takes you to the Today's date or another date (the date you enter into the Go to date field).
- **Delete:** allows you to delete all events for a selected date, delete all events for a specified dates, or delete all events for this month. You can also delete all events.

Week view

When you select this option, the calendar displays the selected week with today's date and time highlighted. The following options are available when you press the Options soft key:

- **View mode:** takes you to the Day view or Month view of the selected day.
- **Create:** allows you to create a Schedule, Anniversary, or Miscellaneous.
- **Go to:** takes you to today's date or another date highlighted.
- **Delete:** allows you to delete all events for a selected date, delete all events for a specified period, or delete all events for this week's dates. You can also delete all events.

Day view

When you select this option, you are taken to the Day view of the selected day with any events listed. The following options are available when you press the **Options** soft key:

- **View:** takes you to the Day view of the selected day.
- **Create:** allows you to create a Schedule, Anniversary, or Miscellaneous.
- **Send via:** allows you to send this event via a Text message, Picture message or by using a Bluetooth connection.
- **View mode:** allows you to choose between Month view or Week view.
- **Delete:** allows you to delete all events for a selected date, or delete all events for this day's dates. You can also delete all events.

Schedule

This option lists your schedule events and allows you to view, create, send, view and delete them.

1. Highlight the **Schedule** option and press the **Select** soft key or the **OK** key.
2. Press the **Options** soft key.
3. Highlight the **Create** option and press the **Select** soft key or the **OK** key.
4. Enter the subject in the **Subject** text box then press the **Down** soft key.
5. Continue to enter other information including **Details**, **Start date**, **Start time**, **AM/PM**, **Due date**, **End time**, **AM/PM**, **Location**, **Alarm**, **Before**, **Alarm tone**, **Repeat**, and **Until**.
6. When you are finished, press the **Save** soft key. Your **Schedule** information is then saved to the **Calendar**.

Anniversary

This option lists your Anniversary events and allows you to view, create, send, change the view mode, or delete them. You can also set an alarm to remind you of important anniversaries.

1. Highlight the **Anniversary** option and press the **Select** soft key or the **OK** key.
2. Press the **Options** soft key.
3. Highlight the **Create** option and press the **Select** soft key or the **OK** key.
4. Enter the occasion in the **Occasion** text box then press the **Down** soft key.

5. Continue to enter other information including Date, Alarm, before, Alarm time, AM/PM, Alarm tone, and Repeat every year.
6. When you are finished, press the **Save** soft key. Your Anniversary information is then saved to the Calendar.

Miscellaneous

This option lists your miscellaneous events and allows you to view, create, send, change the view mode, or delete them.

1. Highlight the **Miscellaneous** option and press the **Select** soft key or the **OK** key.
2. Press the **Options** soft key.
3. Highlight the **Create** option and press the **Select** soft key or the **OK** key.
4. Enter the subject in the **Subject** text box then press the **Down** soft key.
5. Continue to enter other information including Details, Start date, Start time, AM/PM, Due date, End time, or AM/PM.
6. When you are finished, press the **Save** soft key. Your Miscellaneous information is then saved to the Calendar.

Missed alarm events

You can check on all of the events that you have set an alarm on.

1. Highlight the **Missed alarm events** option and press the **Select** soft key or the **OK** key.
2. To view an event information, highlight an event and press the **OK** key. The missed alarm event information is displayed.
3. To acknowledge and remove the event, press the **Confirm** soft key or the **OK** key. The event will be removed from the **Missed alarm events** menu.

Memory status

This menu item shows the number of calendar events you presently have and how many more you memory space for. It breaks down your events by Schedule, Anniversary, and Miscellaneous events.

Tasks

This feature allows you to enter a list of tasks to be done.

1. Highlight the **Tasks** option and press the **Select** soft key or the  key.
2. Press the **Options** soft key.
3. Highlight the **Create** option and press the **Select** soft key or the  key.
4. Enter the Item to be done in the **Task** text box then press the **Down** soft key.
5. Continue to enter other information including **Start date**, **Due date**, and **Priority**.
6. When you are finished, press the **Save** soft key. Your Task list is then saved to the **Calendar**.

Editing the Tasks List

When you select the **Tasks** list menu, the current contents display with a status checkbox and a priority marker.

If the item has been done, a check appears in the checkbox.

High priority items have a red explanation mark, Normal priority items have a blue explanation mark, and Low priority items have a gray explanation mark.

1. To mark an item **Done**, highlight the item and press the  key.
2. Press the **Options** soft key.
3. Highlight the **Done** option and press the **Select** soft key or the  key.
4. The status checkbox next to the Task item will be checked.
5. To edit other fields in the Task item, highlight the item and press the  key.
6. Press the **Options** soft key.
7. Highlight the **Edit** option and press the **Select** soft key or the  key.
8. Edit the items you wish to change.
9. Press the **Save** soft key or the  key.

Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division.

1. Enter the first number using the numeric keys.
2. Enter the operation for your calculation by pressing the  key according to the illustration on the display. The  key is used for the decimal. The  key can also be used to create nested calculations.
3. Enter the next number.
4. To view the result, press the  key.

Repeat steps 1 to 4 as many times as required.

World time

This feature allows you to find out what time it is another part of world, using the Left and Right Navigation keys.

There are two time lines available. You can set the first setting to your home city and then use the second setting to check other city times.

Press the Options soft key for the following options:

- Save: this allows you to save your world time settings.
- Set daylight saving time: use the  key to place a checkmark next to the cities that you want to set daylight savings time. Each city listed represents a time zone.

Synchronization

This feature allows you to back up (synchronize) Contact information stored on your phone with your T-Mobile account on the network. Each time you edit Contact information, your phone automatically synchronizes with the web Address Book.

Important!: Synchronization is a free service offered to T-Mobile customers.

Unit conversion

The conversion menu provides the following conversion categories:

- Currency
- Length
- Weight
- Volume
- Area
- Temperature

To convert a currency, length, weight, volume, area, or temperature, do the following:

1. Scroll to the conversion feature you wish to use and press the **Select** soft key or the **OK** key.
2. Enter the quantity you want converted.

Note: To include a decimal point, press the ***/** key.

3. Use the Up, Down, Left, and Right navigation keys to select the From and To units of measure for the quantity you want converted.
4. Press the **Back** soft key to return to the Unit conversion menu.

Timer

You can use this menu to set a timer. To enable the Timer, use the following options:

1. Press the **Set** soft key to enter the length of time.
2. Enter the time and press the **OK** soft key.
3. Press the **OK** key to start the timer. Press the **OK** key again to stop the timer.

Stopwatch

This feature allows you to use a stopwatch. Press the **OK** key to start the stopwatch. Press the **Reset** soft key to erase all previously recorded stopwatch times. Press the **OK** key for the lap time. You can have up to 4 lap times.

Section 10: Camera

Topics Covered

- Using the Camera
 - Take and Send
 - Photos
 - My Album
 - My Journal
-

This section explains how to use the camera on your phone. You can take photographs by using the built-in camera functionality.

Using the Camera

Using the camera module in your phone, you can take photos of people or events while on the move. Additionally, you can send these photos to other people in a Picture Messaging message or set a wallpaper or caller ID image.

Note: Do not take photos of people without their permission.
Do not take photos in places where cameras are not allowed.
Do not take photos in places where you may interfere with another person's privacy.

Take and Send

Your camera produces photos in JPEG format.

Note: When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
 2. Using the Navigation keys, scroll to the **Fun & Apps** icon. Press the **Select** soft key or the **OK** key to enter the menu.
-

Note: The camera module can also be accessed by pressing the  key on the right side of the phone.

3. Highlight **Camera** and press the **Select** soft key or the **OK** key.
4. Highlight **Take and Send** and press the **Select** soft key or the **OK** key.
5. Adjust the image by aiming the camera at the subject.

6. Press the **Left soft key** to access the camera options. For details, see *"Configuring Camera Options"* on page 108.

Note: You can use the keypad to quickly change the camera options.

7. Press the  or **OK** key to take the photo. Send to My Album online? displays.
8. Press the **Yes soft key** if you want to send the photo to your T-Mobile My Album service. The phone's default destination is set to My Album. The photo is automatically saved in Photos in the phone.

Note: To change the default destination for your pictures, press the **Options soft key** when Send to My Album? appears on the display. Highlight the Default destination option and the Replace option. You can then change your default destination to a phone number, email address, Phonebook, My Album, My Journal, and Recent recipients.

9. To send the newly taken photograph, press the **Options soft key**.
10. Select from one of the following destinations by pressing the **Up or Down Navigation key**:
 - Recent recipients: allows you to send to one of the recent recipients.
 - Phonebook: allows you to select a recipient from the phonebook.
 - New recipient: allows you to enter the phone number or Email address of a new recipient.
 - My Album: sends the message to My Album.
 - My Journal: sends the message to My Journal.
11. To return to Capture mode, select Take another and press the **Select soft key** or the **OK** key.
12. To return to Idle mode, press the  key.

Configuring Picture Options

After you have taken a picture, you can press the **Options soft key** to access the photo's Options menu for the current photograph. This list of options differs from the Camera's Options menu which allows you to configure options for the camera and not for the picture.

The following picture options are available:

- Take another: returns you to camera mode to take another photo.

Take and Send

- **Send to:** displays the **Send** menu and allows you to select a destination for the currently taken photograph. This destination can be a single or multiple recipient(s) (such as, Recent recipients, Phonebook, or New recipient) or to a remote folder such as My Album or My Journal.
- **Edit message:** allows you to compose an outgoing picture message that includes the current photo.
- **Set as:** allows you to use the current photo as an Caller ID or Wallpaper.
- **Default destination:** allows you to Remove a current destination location or Change the current location by establishing a new folder in which to place the pictures. Select from the following options: Recent recipients, Phonebook, New recipient, My Album, or My Journal.

Note: To change the default destination for your pictures, highlight the **Default destination** option, then select **Change**.

- **Delete:** allows you to delete the selected photo.
- **Rename:** allows you to change the currently defaulted photo name.
- **Go to Photos:** takes you to your Photos folder.
- **Lock / Unlock:** allows you to lock or unlock the selected content.
- **Properties:** shows the properties of the current photo such as the Name, Time, Format, Resolution, Size, and Protection.
 1. To return to the Capture mode, press the  key.
 2. To return to Idle mode, press the  key.

Configuring Camera Options

In Capture mode, you can use various options for the camera module by pressing the **Left soft key**.

The following options are available:

- **Record video:** allows you to begin recording a video.
- **Shooting Mode:** allows you to assign what sequence is followed when a photograph is taken.
 - **Single shot:** takes a single photo and allows you view it before returning to the shooting mode. Press the **Right Navigation key** to set the camera to either **Take and send** or **Take and return**.

- **Multi-shot:** takes a succession of consecutive photos. Press the Right Navigation key to set the number of shots to either:
 - 6 shots, normal
 - 6 shots, high
 - 9 shots, normal
 - 9 shots, high
 - 15 shots, normal
 - 15 shots, high
- **Mosaic style:** takes up to four photos and then groups them together into a single final photo. Press the Right Navigation key to set the size of these mosaic photos to either:
 - 2x2 auto
 - 2x2 manual
 - 3x3 auto
 - 3x3 manual
- **Effects:** allows you to change the color tone or apply special effects to the photo.
 - **Options include:** No Effects, Black & White, Negative, Sepia, Emboss, and Sketch.
- **Frames:** allows you to select a one of 24 frames to surround your photos taken during this camera session.
- **Timer:** allows you to set a time delay before the camera takes the photo. Select the length of delay you want. When you press the Camera key () or the **OK** key, the camera takes the photo after the specified time has elapsed.
- **Default destination:** allows you to Remove a current destination location or Change the current location by establishing a new folder in which to place the pictures. Select from the following options: Recent recipients, Phonebook, New recipient, My Album, or My Journal.
- **Go to Photos:** takes you to your Photos folder.
- **Camera settings:** allows you to change the following settings.
 - **Size:** allows you to set the image size to either: SXGA(1280x1024), Mega(1152x864), SVGA(800x600), VGA(640x480), QVGA(320x240), QQVGA(160x120), Mobile(128X104). The selected image size displays on the capture screen.
 - **Viewfinder:** allows you to set the view finder to Full screen or Actual screen.
 - **Scene programs:** allows you to set the scene (Normal or Night scene) for taking photos.
 - **Shutter sound:** allows you to select a tone for the shutter sound. Choose between 4 tones.
 - **Zoom sound:** allows you to turn zoom sound On or Off.
 - **Brightness sound:** allows you to turn brightness sound On or Off.

Take and Send

- White balance: allows you to set the white balance to Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
- Default name: allows you to change the default name assigned to your photo.
- Camera Shortcuts: shows you how to change options using your keypad in capture mode. The following short cuts are available:



Takes a photo and sends it to My Album online or records a video and saves it to the Videos folder.



Up and Down navigation keys zoom in and out.



Left and Right navigation keys adjust the image brightness.



zoom in.



zoom out.



changes camera mode between Photo and Video.



changes the picture resolution.



changes the camera Shooting mode.



changes the color tone or applies a special effect to the image.



Changes the White balance.



adds a fun frame to the image.



sets a time delay.



takes you to the Photo Album.



changes the Night mode and Normal mode.



changes the display screen.

Photos

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Fun & Apps** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight **Camera** and press the **Select** soft key or the **OK** key.
4. Select **Photos** and press the **Select** soft key or the **OK** key.
When you access this menu, your phone displays the photos in Line view, which shows them as small images. Use the Navigation keys to scroll through the photos.
5. To view the photos on the full screen, press the **OK** key. To go back to Line view, press the **Back** soft key or the **⏮** key.
6. Press the **Options** soft key to use the following options:
 - **View**: allows you to view the photo on your display.
 - **Send to My Album**: allows you to send your photos to My Album.
 - **Send via**: allows you to send your photos in a Picture message or using a Bluetooth connection.
 - **Set as**: allows you to set the photo as your Wallpaper or as a Caller ID.
 - **Default destination**: allows you to Remove or Change where your photos are sent after you take them.
 - **Delete**: allows you to delete the selected or multiple photos.
 - **Rename**: allows you to rename the photo.
 - **Display mode**: allows you to view the pictures in Line view or Thumbnail view.
 - **Slide show**: allows you to see all of your photos in a slide show presentation. Choose from 1 or 3 seconds intervals.
 - **Bluetooth visibility**: allows you to make your phone's Bluetooth interface visible to Selected devices or to Multiple devices.
 - **Lock / Unlock**: allows you to protect the photo from being deleted.
 - **Properties**: shows the properties of the photo, such as the file name, file date, file format, image resolution, file size, and protection.

Deleting a Photo

You can delete photos one by one or all at one time.

1. From the **Photos** menu, highlight the photo you want to delete. Press the **Options** soft key and select **Delete**. Press the **Select** soft key or the **OK** key.
2. Select a deletion of either the **currently Selected image** or **Multiple images** and press the **Select** soft key or the **OK** key.

3. Press the Yes soft key to confirm the deletion.
4. When you have finished, press the  key.

Videos

Note: When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by putting the light source behind you.

1. In Idle mode, press the Menu soft key to access Menu mode.
2. Using the Navigation keys, scroll to the Fun & Apps icon. Press the Select soft key or the  key to enter the menu.
3. Highlight Camera and press the Select soft key or the  key.
4. Select Videos and press the Select soft key or the  key.
When you access this menu, your videos display in Line view, which shows them as small images. Use the Navigation keys to scroll through the videos.
5. To view the videos on the full screen, press the  key. To go back to Line view, press the Back soft key or the  key.
6. Press the Options soft key to use the following options:
 - Play: allows you to play the selected video.
 - Send via: allows you to send your video in a Picture message or using a Bluetooth connection.
 - Delete: allows you to delete the selected video.
 - Rename: allows you to rename the video.
 - Display mode: allows you to view the videos in Line view or Thumbnail view.
 - Bluetooth visibility: allows you to make your phone's Bluetooth interface visible to Selected devices or to Multiple devices.
 - Lock / Unlock: allows you to protect the video from being deleted.
 - Properties: shows the properties of the video, such as the file name, file date, file format, file size, resolution, and protection.

My Album

My Album is a private online picture album that you can use to store and share pictures, videos, voice messages, and text.

Use the following procedures to access My Album.

Note: When accessing My Album, charges may apply. The feature is not activated until you send your first image to the remote My Album location.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Fun & Apps** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight **Camera** and press the **Select** soft key or the **OK** key.
4. Select **My Album** and press the **Select** soft key or the **OK** key. The t-zones browser is then launched and the T-Mobile Web page is displayed.
5. Scroll down to the **My Album** link and press the **Select** soft key or the **OK** key.
6. Select the **My Albums Menu** link and press the **Select** soft key or the **OK** key.
7. Photos sent to this folder are stored in the **Inbox Album**. Press the **Select** soft key to view the photos.
8. Press the  key to exit t-zones and return to the Idle screen.

My Journal

Make notes in My Journal, your online diary and Weblog. Keep it private to store your personal memories, or send email invitations to ask people to view and comment on your album. Contact T-Mobile customer service for more information.

Note: When accessing My Journal, charges may apply.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Fun & Apps** icon. Press the **Select** soft key or the **OK** key to enter the menu.
3. Highlight **Camera** and press the **Select** soft key or the **OK** key.
4. Select **My Journal** and press the **Select** soft key or the **OK** key. The t-zones browser is then launched and the T-Mobile Web page is displayed.

Section 11: t-zones

Topics Covered

- t-zones
-

This section outlines the t-zones features available on your phone. For more information, contact T-Mobile.

t-zones

Your phone is equipped with a WAP (Wireless Application Protocol) browser which provides you wireless access and navigation to the Web using your phone.

Note: You can enter t-zones without going through the t-zones menu by simply pressing the t-zones soft key  while in Idle mode.

To access t-zones via the menu, follow these steps:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the t-zones icon. Press the **Select** soft key or the **OK** key to enter the menu.

To access t-zones directly, follow these steps:

- ▶ In Idle mode, press the t-zones soft key to access the t-zones menu.

The following options are available:

Home

Selecting this menu connects the phone to the network and loads the t-zones homepage.

The content of the t-zones startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the Up and Down keys.

To go to the startup homepage from any other screen in the t-zones, use the Home option. For more information on the t-zones menus, see “*Selecting and Using Menu Options*” on page 115.

Exiting the t-zones

- ▶ To exit the browser at any time, simply press the  key.

Navigating the t-zones

1. To scroll through browser items, press the Up or Down Navigation key.
2. To select browser items, press the  key.
3. To return to the previous page, press the Back soft key or the  key.
4. To return to the startup homepage, press the Home soft key.

Entering Text in the t-zones

When you are prompted to enter text, the currently active text input mode is indicated on the screen. The following modes are available:

- Upper-case character mode (A): allows you to enter upper-case English characters.
- Lower-case character mode (a): allows you to enter lower-case English characters.

Note: You can enter symbols in upper-case or lower-case character mode by pressing the  key.

- Number mode (1): allows you to enter numbers.

To change the text input mode, use the following procedures:

1. Press the  key one or more times.
2. To enter a space, press the  key.
3. To edit text, set the cursor to the right of the character(s) to be corrected.
4. Press the  key as required.
5. Enter the correct character(s).

Selecting and Using Menu Options

Various menus are available when you are using t-zones to navigate the Wireless Web.

To access the browser options menu:

1. Press the Menu soft key.

Note: The menus may vary, depending on your version of t-zones.

The following options are available:

- Go to: takes you to the site.
- Go to homepage: takes you back at any time to the home page of the Wireless Web service provider.

- **Go to URL:** allows you to manually enter the URL (address) of a Web page. After entering an address, press the  key to go there directly.
- **Go:** goes forward or backward one page.
- **Reload:** reloads the current page.
- **Bookmarks:** shows the bookmarks list. You can bookmark the current web page or access previously bookmarked pages.
- **Send URL:** sends the currently selected URL (address) to a recipient. It also enables you to set the current site as the startup home page.
- **Inbox:** displays the Inbox folder.
- **To Desktop view / To SmartFit view:** toggles between Desktop view (larger view) or SmartFit view (display everything to fit in the current window).
- **Save web page:** saves the entire web page.
- **Page details:** displays the Title and URL of the current web page.
- **Browser options:**
 - Cache
 - Cookies
 - Preferences
 - Certificates
 - About browser

Go to URL

This menu allows you to manually enter the URL (address) of a web site that you wish to access.

For further details about entering characters, see “*Entering Text*” on page 37.

Bookmarks

This menu stores up to 50 URLs (addresses).

To Add a bookmark:

1. Press the Options soft key.
2. Highlight the Add bookmark option and press the Select soft key or the  key.
3. Enter a name for the favorite item in the Title text box and press the Down key.
4. Enter the address in the URL text box and press the Save soft key or the  key.

Note: For further details about how to enter characters, see “*Entering Text*” on page 37.

After saving bookmarks to your favorite web sites, you can access the following options by highlighting a bookmark, then pressing the Options soft key:

- Go to: takes you to the site.
- Go to homepage: takes you to the homepage for the site.
- Go to URL: allows you to manually enter the URL (address) of a Web page. After entering an address, press the  key to go there directly.
- Edit bookmark: allows you to edit the title and address.
- Add bookmark: allows you to enter and save the title and the URL (address) of a Web page as a new bookmark.
- Send URL: allows you to send the URL (address) in a Text message.
- Delete: allows you to delete the bookmark.

Or, you can select the favorite item and press the  key. Your browser will take you to the site.

Saved pages

This option displays a list of the pages that were saved while navigating the browser.

Using your History

This option provides you with a list of the most recently visited web sites. You can use these entries to return to previously visited, but not bookmarked, web pages.

1. When the Idle mode displays, press the Menu soft key.
2. Highlight t-zones and press the Select soft key or the  key.
3. Highlight History and press the Select soft key or the  key.
4. Use the Up or Down Navigation key to highlight an entry from the list.
5. Press the Options soft key. Highlight the Open option and press the Select soft key or the  key.
6. Press the  key to exit from the browser.

Clear Cache

You can clear the information stored in the cache, which is the phone's temporary memory which stores the most recently accessed Web pages.

- ▶ Press the Yes soft key to confirm the deletion. Otherwise, press the No soft key.

Section 12: Health and Safety Information

Topics Covered

- Health and Safety Information
 - Samsung Mobile Products and Recycling
 - UL Certified Travel Adapter
 - Consumer Information on Wireless Phones
 - Road Safety
 - Responsible Listening
 - Operating Environment
 - Using Your Phone Near Other Electronic Devices
 - Potentially Explosive Environments
 - Emergency Calls
 - FCC Notice and Cautions
 - Other Important Safety Information
 - Product Performance
 - Availability of Various Features/Ring Tones
 - Battery Standby and Talk Time
 - Battery Precautions
 - Care and Maintenance
-

This section outlines the safety precautions associated with using your phone. These safety precautions should be followed to safely use your phone.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government.

These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

- Head: 1.13 W/Kg.
- Body-worn: 0.391 W/Kg.

Samsung Mobile Products and Recycling

SAR information on this and other model phones can be viewed on-line at <http://www.fcc.gov/oet/ea>. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone.

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile phones and genuine Samsung accessories.

Go to: <http://www.samsungwireless.com/recycling.asp> for more information.

UL Certified Travel Adapter

The Travel Adapter for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies.

When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Consumer Information on Wireless Phones

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption.

In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (Updated 12/1/2006):

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National Institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/homepage.html>
- World Health Organization (WHO):
<http://www.who.int/peh-emf/>

- International Commission on Non-Ionizing Radiation Protection:

<http://www.icnirp.de>

- National Radiation Protection Board (UK):

<http://www.hpa.org.uk/radiation>

- US Food and Drug Administration

<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

Responsible Listening

8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com.

Important!: If you are using a handset other than a standard numeric keypad, please call 1-888-901-7233.

Provided by the Cellular Telecommunications & Internet Association.

Responsible Listening

Caution!: Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds, and Bluetooth or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing.

Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that

are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings and equipment.

You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, you noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using earbuds.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: www.audiology.org

Operating Environment

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD 20892-2320

Voice: (301) 496-7243

Email: nidcdinfo@nih.gov

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

National Institute for Occupational Safety and Health

Hubert H. Humphrey Bldg.

200 Independence Ave., SW

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4647)

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder if you are using an external antenna).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless phone and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device. Persons who have such devices:

- Should ALWAYS keep the phone more than six (6) inches from their implantable medical device when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.
- Should read and follow the directions from the manufacturer of your implantable medical device. if you have any questions about using your wireless phone with such a device, consult your health care provider.

For more information see, <http://www.fcc.gov/oet/rfsafety/rf-faqs.html>

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.

- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- If your phone is equipped with an external antenna, hold the phone with the antenna raised, fully-extended and over your shoulder.
- Do not hold, bend or twist the phone's antenna, if applicable.
- Do not use the phone if the antenna is damaged.
- If your phone is equipped with an internal antenna, obstructing the internal antenna could inhibit call performance.

- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Avoid dropping the cell phone. Dropping it, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way.
- Do not modify or remanufacture the battery as this could result in serious safety hazards.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Follow battery usage, storage and charging guidelines found in the user's guide.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

Battery Precautions

- Do not use incompatible cell phone batteries and chargers. Some Web sites and second-hand dealers, not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, leakage, or other serious hazard.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not place the phone in areas that may get very hot, such as on or near a cooking surface, cooking appliance, iron, or radiator.
- Do not get your phone or battery wet. Even though they will dry and appear to operate normally, the circuitry could slowly corrode and pose a safety hazard.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Do not permit a battery out of the phone to come in contact with metal objects, such as coins, keys or jewelry.
- Do not crush, puncture or put a high degree of pressure on the battery as this can cause an internal short-circuit, resulting in overheating.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- If your phone is equipped with an external antenna, use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Section 13: Warranty Information

Topics Covered

- Standard Limited Warranty
-

Standard Limited Warranty

What is Covered and For How Long? SAMSUNG

TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/ Pouch	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada.

This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

WHAT ARE THE LIMITS ON SAMSUNG'S WARRANTY/LIABILITY? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;

Standard Limited Warranty

- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRDPARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE

OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the Samsung Customer Care Center for details.

Important!: Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Customer Care Center:

1000 Klein St.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Standard Limited Warranty

Samsung Telecommunications America, LLC
1301 East Lookout Drive
Richardson, Texas 75082
Phone: 1-800-SAMSUNG (726-7864)

Important!: If you are using a handset other than a standard numeric keypad, dial the numbers listed in brackets.

Phone: 1-888-987-HELP (4357)

©2007 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval.
Specifications and availability subject to change without notice.

Index

A

- ABC mode 37
- Accessing a Menu Function 29
- Alert type 81

B

- Backlight
 - description 16
 - settings 79
- Battery
 - charging 6
 - installing 5
 - low indicator 8
 - removing 4
- Bluetooth
 - About 83
 - Features 84
 - My phone name 83
 - My visibility 83
 - Searching for new devices 83
 - Security modes 83
 - Turning Bluetooth On and Off 83

- Broadcast Messages 72

C

- Calendar 99
- Call Barring 86
- Call Functions 18
 - Adjusting the Call Volume 20
 - Answering a Call 20
 - Call Records 20
 - Correcting the Number 18
 - Ending a Call 19
 - Making a Call 18

- Making a Call from Phonebook 19

- Redialing Last Number 19
- Silent Mode 23

Call Records

- All calls 21
- Call time 22
- Delete all 22
- Incoming calls 22
- Missed calls 21
- Outgoing calls 22

- Call Waiting 26, 86

- Caller ID 87

- Camera 98, 106
 - taking photos 106

- Change password 88

- Charging battery 6

- Configuring Picture Options 107

D

Dialing a Number

- Phonebook 47
- SIM Card 48

Dialing display 79

- Background color 80
- Font color 80
- Font size 79

Display 17

- backlight 16
- icons 15

- DTMF 25

E

Entering Text 37

- Changing the Text Entry Mode 37
- Using ABC Mode 40
- Using Number Mode 40

Using Symbol Mode 40
Using T9 Mode 38

Extra tones 82

F

Files 91

Folder tone 82

Fun & Apps 91

Functions and Options 23

G

Games 96

Getting Started 4

Activating Your Phone 4

Voice mail 9

H

Health and Safety Information 118

Help 17

HiFi Ringers 81, 92

I

Icons, description 15

Instant Messaging 72

International Call 18

K

Keypad Tone 81

L

Low battery indicator 8

M

Making a Call

Phonebook 19

MegaTones 81, 91

Menu Navigation 29

Menu Outline 30

Message

Viewing an Incoming Picture

Message 65

Message settings 71

Picture message 71

Receive settings 72

Send settings 72

Text message 71

Message Tone 82

Messages 54

Messaging

Types of Messages 54

Missed Call

Viewing 21

Multi-Party Call 27

Dropping One Participant 28

Private Conversation 27

Setting up 27

Mute 24

My Album 94, 113

My Journal 94, 113

My Namecard 50

N

Network Selection 86

Network Services

Call Barring 86

Call Forwarding 85

Call Waiting 86

Caller ID 87

Network Selection 86

Number mode 37

O

On/off switch, phone 8

Options

During a Call 24

Making a New call while in a
call 25

Putting a Call on Hold 25

Organizer 98

Calculator 104

- Calendar 99
- Stopwatch 105
- Synchronization 104
- Timer 105
- Unit Conversion 105
- World time 104
- Own Number 52

P

- Phone

- icons 15
 - switching on/off 8

- Phone Keys 13

- Phone lock 88

- Phone Settings 76

- Phonebook

- Searching for a Number 26

- Photos

- Accessing pictures 111

- Deleting pictures 111

- Picture Messages 59

- PIN

- change 88

- check 87

R

- Reset settings 89

- Ring Volume 81

- Ringtone 81

S

- Security 87

- Sentbox 65

- Settings 75

- Bluetooth 83

- Display 78

- Network Services 85

- Phone 76

- Reset 89

- Security 87

- Sound 80

- Synchronization 84

- Time & Date 75

- Shortcuts 30

- Silent mode 82

- SIM card

- installing 4

- Soft Keys 23

- Sound Settings

- Alert type 81

- Extra tones 82

- Flip tone 82

- HiFi Ringers 81

- Incoming call 80

- Keypad tone 81

- MegaTones 81

- Power on/off melody 82

- Ring volume 81

- Ringtone 81

- Silent mode 82

- Speakerphone 25

- Speed Dial

- Setting Up Entries 47

- Standard Limited Warranty

- 138

- Stopwatch 105

- Storing a Number

- phone's memory 42

- SIM card 44

- Switching on/off

- phone 8

- Symbol mode 37

T

- T9 mode **37**
- Take and Send **106**
- Task List **103**
- Templates
 - Creating a Picture Message template **68**
 - Sending a Picture Message template **69**
- Text input mode
 - changing **37**
- Text Messages **56**
- Timer **105**
- Travel adapter **6**
- t-zones **114**
 - Bookmarks **116**
 - Clear Cache **117**
 - Entering Text **115**
 - Exiting **114**
 - Go to URL **116**
 - Home **114**
 - Navigating **115**

U

- Understanding Your Phone **11**
 - Closed View **14**
 - Features of Your Phone **11**
 - Open View **12**
- Understanding Your Phonebook **42**
 - Finding a Phonebook Entry **45**
 - Finding My Own Phone Number **52**

V

- Voice Mail **9, 70**
 - changing number **9**
- Voice Notes **55**

W

- Warranty Information **138**