

SCH-U430 Series

P O R T A B L E D U A L M O D E T E L E P H O N E

User Guide

Please read this manual before operating your phone, and keep it for future reference.

The Samsung logo, consisting of the word "SAMSUNG" in a bold, white, sans-serif font, is centered within a black, horizontally-oriented oval.

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

© 2010 Samsung Electronics Canada Inc. Samsung is a registered trademark of Samsung Electronics Co. Ltd. and its related entities.

Licensed by Qualcomm Incorporated under one or more of the following patents: U.S. Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390.
Printed in South Korea

 
 
Openwave® is a registered Trademark of Openwave, Inc.
RSA® is a registered Trademark RSA Security, Inc.
The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.

The privacy and copyright laws of Canada govern the disclosure, reproduction and distribution of data, media and other content, including music and video content. Certain activities, including downloads or transfer by any means (including, via cable, Bluetooth® or otherwise) of such content may be an infringement of privacy or copyright law. Neither Samsung Electronics Canada Inc. nor any of its affiliates shall be liable or responsible for any data or content disclosed, reproduced, downloaded or distributed by the user of this equipment.



Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

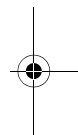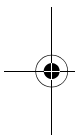

Open Source Announcement

Some software components of this product incorporate source code covered under the the Mozilla Public License.

And this product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)

To obtain the source code covered under the MPL, please visit <http://opensource.samsung.com/category/mobile/mobile-phone/>.

Component	License
OpenSSL	OpenSSL License
Mozilla	Mozilla Public License 1.1

LICENSE ISSUES

=====

The OpenSSL toolkit stays under a dual license, i.e. both the conditions of the OpenSSL License and the original SSLeay license apply to the toolkit. See below for the actual license texts. Actually both licenses are BSD-style Open Source licenses. In case of any license issues related to OpenSSL please contact openssl_core@openssl.org.

OpenSSL License

Copyright (c) 1998-2004 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software



developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"

4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young (ey@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Original SSLeay License

Copyright (C) 1995-1998 Eric Young (ey@cryptsoft.com) All rights reserved.

This package is an SSL implementation written by Eric Young (ey@cryptsoft.com). The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are adhered to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com). Copyright remains



Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used.

 
This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)" The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related:-).
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG ``AS IS'' AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The license and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution license [including the GNU Public Licence.]

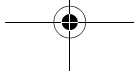



Mozilla Public License 1.1 (MPL 1.1)

1. Definitions.

1.0.1. "Commercial Use" means distribution or otherwise making the Covered Code available to a third party.

1.1. "Contributor" means each entity that creates or contributes to the creation of Modifications.

1.2. "Contributor Version" means the combination of the Original Code, prior Modifications used by a Contributor, and the Modifications made by that particular Contributor.

1.3. "Covered Code" means the Original Code or Modifications or the combination of the Original Code and Modifications, in each case including portions thereof.

1.4. "Electronic Distribution Mechanism" means a mechanism generally accepted in the software development community for the electronic transfer of data.

1.5. "Executable" means Covered Code in any form other than Source Code.

1.6. "Initial Developer" means the individual or entity identified as the Initial Developer in the Source Code notice required by Exhibit A.

1.7. "Larger Work" means a work which combines Covered Code or portions thereof with code not governed by the terms of this License.

1.8. "License" means this document.

1.8.1. "Licensable" means having the right to grant, to the maximum extent possible, whether at the time of the initial grant or subsequently acquired, any and all of the rights conveyed herein.

1.9. "Modifications" means any addition to or deletion from the substance or structure of either the Original Code or any previous Modifications. When Covered Code is released as a series of files, a Modification is:

A. Any addition to or deletion from the contents of a file containing Original Code or previous Modifications.

B. Any new file that contains any part of the Original Code or previous Modifications.

1.10. "Original Code" means Source Code of computer software code which is described in the Source Code notice required by Exhibit A as Original Code, and which, at the time of its release under this License is not already Covered Code governed by this License.

1.10.1. "Patent Claims" means any patent claim(s), now owned or hereafter acquired, including without limitation, method, process, and apparatus claims, in any patent Licensable by grantor.





1.11. "Source Code" means the preferred form of the Covered Code for making modifications to it, including all modules it contains, plus any associated interface definition files, scripts used to control compilation and installation of an Executable, or source code differential comparisons against either the Original Code or another well known, available Covered Code of the Contributor's choice. The Source Code can be in a compressed or archival form, provided the appropriate decompression or de-archiving software is widely available for no charge.

1.12. "You" (or "Your") means an individual or a legal entity exercising rights under, and complying with all of the terms of, this License or a future version of this License issued under Section 6.1. For legal entities, "You" includes any entity which controls, is controlled by, or is under common control with You. For purposes of this definition, "control" means (a) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (b) ownership of more than fifty percent (50%) of the outstanding shares or beneficial ownership of such entity.

2. Source Code License.

2.1. The Initial Developer Grant.

The Initial Developer hereby grants You a world-wide, royalty-free, non-exclusive license, subject to third party intellectual property claims:

(a) under intellectual property rights (other than patent or trademark) Licensable by Initial Developer to use, reproduce, modify, display, perform, sublicense and distribute the Original Code (or portions thereof) with or without Modifications, and/or as part of a Larger Work; and

(b) under Patents Claims infringed by the making, using or selling of Original Code, to make, have made, use, practice, sell, and offer for sale, and/or otherwise dispose of the Original Code (or portions thereof).

(c) the licenses granted in this Section 2.1(a) and (b) are effective on the date Initial Developer first distributes Original Code under the terms of this License.

(d) Notwithstanding Section 2.1(b) above, no patent license is granted: 1) for code that You delete from the Original Code; 2) separate from the Original Code; or 3) for infringements caused by: i) the modification of the Original Code or ii) the combination of the Original Code with other software or devices.



2.2. Contributor Grant.

Subject to third party intellectual property claims, each Contributor hereby grants You a world-wide, royalty-free, non-exclusive license

(a) under intellectual property rights (other than patent or trademark) Licensable by Contributor, to use, reproduce, modify, display, perform, sublicense and distribute the Modifications created by such Contributor (or portions thereof) either on an unmodified basis, with other Modifications, as Covered Code and/or as part of a Larger Work; and

(b) under Patent Claims infringed by the making, using, or selling of Modifications made by that Contributor either alone and/or in combination with its Contributor Version (or portions of such combination), to make, use, sell, offer for sale, have made, and/or otherwise dispose of: 1) Modifications made by that Contributor (or portions thereof); and 2) the combination of Modifications made by that Contributor with its Contributor Version (or portions of such combination).

(c) the licenses granted in Sections 2.2(a) and 2.2(b) are effective on the date Contributor first makes Commercial Use of the Covered Code.

(d) Notwithstanding Section 2.2(b) above, no patent license is granted: 1) for any code that Contributor has deleted from the Contributor Version; 2) separate from the Contributor Version; 3) for infringements caused by: i) third party modifications of Contributor Version or ii) the combination of Modifications made by that Contributor with other software (except as part of the Contributor Version) or other devices; or 4) under Patent Claims infringed by Covered Code in the absence of Modifications made by that Contributor.

3. Distribution Obligations.

3.1. Application of License.

The Modifications which You create or to which You contribute are governed by the terms of this License, including without limitation Section 2.2. The Source Code version of Covered Code may be distributed only under the terms of this License or a future version of this License released under Section 6.1, and You must include a copy of this License with every copy of the Source Code You distribute. You may not offer or impose any terms on any Source Code version that alters or restricts the applicable version of this License or the recipients' rights hereunder. However, You may include an additional document offering the additional rights described in Section 3.5.

3.2. Availability of Source Code.

Any Modification which You create or to which You contribute must be made available in Source Code form under the terms of this License either on the same media as an Executable version or via an accepted Electronic Distribution Mechanism to anyone to whom you made an Executable version available; and if made available via Electronic Distribution Mechanism, must remain available for at least twelve (12) months after the date it initially became available, or at least six (6) months after a subsequent version of that particular Modification has been made available to such recipients. You are responsible for ensuring that the Source Code version remains available even if the Electronic Distribution Mechanism is maintained by a third party.

3.3. Description of Modifications.

You must cause all Covered Code to which You contribute to contain a file documenting the changes You made to create that Covered Code and the date of any change. You must include a prominent statement that the Modification is derived, directly or indirectly, from Original Code provided by the Initial Developer and including the name of the Initial Developer in (a) the Source Code, and (b) in any notice in an Executable version or related documentation in which You describe the origin or ownership of the Covered Code.

3.4. Intellectual Property Matters

(a) Third Party Claims.

If Contributor has knowledge that a license under a third party's intellectual property rights is required to exercise the rights granted by such Contributor under Sections 2.1 or 2.2, Contributor must include a text file with the Source Code distribution titled "LEGAL" which describes the claim and the party making the claim in sufficient detail that a recipient will know whom to contact. If Contributor obtains such knowledge after the Modification is made available as described in Section 3.2, Contributor shall promptly modify the LEGAL file in all copies Contributor makes available thereafter and shall take other steps (such as notifying appropriate mailing lists or newsgroups) reasonably calculated to inform those who received the Covered Code that new knowledge has been obtained.

(b) Contributor APIs.

If Contributor's Modifications include an application programming interface and Contributor has knowledge of patent licenses which are reasonably necessary to implement that API, Contributor must also include this information in the LEGAL file.



(c) Representations.

Contributor represents that, except as disclosed pursuant to Section 3.4(a) above, Contributor believes that Contributor's Modifications are Contributor's original creation(s) and/or Contributor has sufficient rights to grant the rights conveyed by this License.

3.5. Required Notices.

You must duplicate the notice in **Exhibit A** in each file of the Source Code. If it is not possible to put such notice in a particular Source Code file due to its structure, then You must include such notice in a location (such as a relevant directory) where a user would be likely to look for such a notice. If You created one or more Modification(s) You may add your name as a Contributor to the notice described in **Exhibit A**. You must also duplicate this License in any documentation for the Source Code where You describe recipients' rights or ownership rights relating to Covered Code. You may choose to offer, and to charge a fee for, warranty, support, indemnity or liability obligations to one or more recipients of Covered Code. However, You may do so only on Your own behalf, and not on behalf of the Initial Developer or any Contributor.

You must make it absolutely clear than any such warranty, support, indemnity or liability obligation is offered by You alone, and You hereby agree to indemnify the Initial Developer and every Contributor for any liability incurred by the Initial Developer or such Contributor as a result of warranty, support, indemnity or liability terms You offer.

3.6. Distribution of Executable Versions.

You may distribute Covered Code in Executable form only if the requirements of Section **3.1-3.5** have been met for that Covered Code, and if You include a notice stating that the Source Code version of the Covered Code is available under the terms of this License, including a description of how and where You have fulfilled the obligations of Section **3.2**. The notice must be conspicuously included in any notice in an Executable version, related documentation or collateral in which You describe recipients' rights relating to the Covered Code. You may distribute the Executable version of Covered Code or ownership rights under a license of Your choice, which may contain terms different from this License, provided that You are in compliance with the terms of this License and that the license for the Executable version does not attempt to limit or alter the recipient's rights in the Source Code version from the rights set forth in this License.





If You distribute the Executable version under a different license You must make it absolutely clear that any terms which differ from this License are offered by You alone, not by the Initial Developer or any Contributor. You hereby agree to indemnify the Initial Developer and every Contributor for any liability incurred by the Initial Developer or such Contributor as a result of any such terms You offer.

3.7. Larger Works.

You may create a Larger Work by combining Covered Code with other code not governed by the terms of this License and distribute the Larger Work as a single product. In such a case, You must make sure the requirements of this License are fulfilled for the Covered Code.

4. Inability to Comply Due to Statute or Regulation.

If it is impossible for You to comply with any of the terms of this License with respect to some or all of the Covered Code due to statute, judicial order, or regulation then You must: (a) comply with the terms of this License to the maximum extent possible; and (b) describe the limitations and the code they affect. Such description must be included in the LEGAL file described in Section 3.4 and must be included with all distributions of the Source Code. Except to the extent prohibited by statute or regulation, such description must be sufficiently detailed for a recipient of ordinary skill to be able to understand it.

5. Application of this License.

This License applies to code to which the Initial Developer has attached the notice in Exhibit A and to related Covered Code.

6. Versions of the License.

6.1. New Versions.

Netscape Communications Corporation ("Netscape") may publish revised and/or new versions of the License from time to time. Each version will be given a distinguishing version number.

6.2. Effect of New Versions.

Once Covered Code has been published under a particular version of the License, You may always continue to use it under the terms of that version. You may also choose to use such Covered Code under the terms of any subsequent version of the License published by Netscape. No one other than Netscape has the right to modify the terms applicable to Covered Code created under this License.





6.3. Derivative Works.

If You create or use a modified version of this License (which you may only do in order to apply it to code which is not already Covered Code governed by this License), You must (a) rename Your license so that the phrases "Mozilla", "MOZILLAPL", "MOZPL", "Netscape", "MPL", "NPL" or any confusingly similar phrase do not appear in your license (except to note that your license differs from this License) and (b) otherwise make it clear that Your version of the license contains terms which differ from the Mozilla Public License and Netscape Public License. (Filling in the name of the Initial Developer, Original Code or Contributor in the notice described in Exhibit A shall not of themselves be deemed to be modifications of this License.)

7. DISCLAIMER OF WARRANTY.

COVERED CODE IS PROVIDED UNDER THIS LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, WARRANTIES THAT THE COVERED CODE IS FREE OF DEFECTS, MERCHANTABLE, FIT FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE COVERED CODE IS WITH YOU. SHOULD ANY COVERED CODE PROVE DEFECTIVE IN ANY RESPECT, YOU (NOT THE INITIAL DEVELOPER OR ANY OTHER CONTRIBUTOR) ASSUME THE COST OF ANY NECESSARY SERVICING, REPAIR OR CORRECTION. THIS DISCLAIMER OF WARRANTY CONSTITUTES AN ESSENTIAL PART OF THIS LICENSE.

NO USE OF ANY COVERED CODE IS AUTHORIZED HEREUNDER EXCEPT UNDER THIS DISCLAIMER.

8. TERMINATION.

8.1. This License and the rights granted hereunder will terminate automatically if You fail to comply with terms herein and fail to cure such breach within 30 days of becoming aware of the breach. All sublicenses to the Covered Code which are properly granted shall survive any termination of this License. Provisions which, by their nature, must remain in effect beyond the termination of this License shall survive.

8.2. If You initiate litigation by asserting a patent infringement claim (excluding declaratory judgment actions) against Initial Developer or a Contributor (the Initial Developer or Contributor against whom You file such action is referred to as "Participant") alleging that:

(a) such Participant's Contributor Version directly or indirectly infringes any patent, then any and all rights granted by such Participant to You under Sections 2.1 and/or 2.2 of this License shall, upon 60 days notice from Participant terminate



prospectively, unless if within 60 days after receipt of notice You either: (i) agree in writing to pay Participant a mutually agreeable reasonable royalty for Your past and future use of Modifications made by such Participant, or (ii) withdraw Your litigation claim with respect to the Contributor Version against such Participant. If within 60 days of notice, a reasonable royalty and payment arrangement are not mutually agreed upon in writing by the parties or the litigation claim is not withdrawn, the rights granted by Participant to You under Sections 2.1 and/or 2.2 automatically terminate at the expiration of the 60 day notice period specified above.

(b) any software, hardware, or device, other than such Participant's Contributor Version, directly or indirectly infringes any patent, then any rights granted to You by such Participant under Sections 2.1(b) and 2.2(b) are revoked effective as of the date You first made, used, sold, distributed, or had made, Modifications made by that Participant.

8.3. If You assert a patent infringement claim against Participant alleging that such Participant's Contributor Version directly or indirectly infringes any patent where such claim is resolved (such as by license or settlement) prior to the initiation of patent infringement litigation, then the reasonable value of the licenses granted by such Participant under Sections 2.1 or 2.2 shall be taken into account in determining the amount or value of any payment or license.

8.4. In the event of termination under Sections 8.1 or 8.2 above, all end user license agreements (excluding distributors and resellers) which have been validly granted by You or any distributor hereunder prior to termination shall survive termination.

9. LIMITATION OF LIABILITY.

UNDER NO CIRCUMSTANCES AND UNDER NO LEGAL THEORY, WHETHER TORT (INCLUDING NEGLIGENCE), CONTRACT, OR OTHERWISE, SHALL YOU, THE INITIAL DEVELOPER, ANY OTHER CONTRIBUTOR, OR ANY DISTRIBUTOR OF COVERED CODE, OR ANY SUPPLIER OF ANY OF SUCH PARTIES, BE LIABLE TO ANY PERSON FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY CHARACTER INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF GOODWILL, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, OR ANY AND ALL OTHER COMMERCIAL DAMAGES OR LOSSES, EVEN IF SUCH PARTY SHALL HAVE BEEN INFORMED OF THE POSSIBILITY OF SUCH DAMAGES. THIS LIMITATION OF LIABILITY SHALL NOT APPLY TO LIABILITY FOR DEATH OR PERSONAL INJURY RESULTING FROM SUCH PARTY'S NEGLIGENCE TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH LIMITATION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF

INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS EXCLUSION AND LIMITATION MAY NOT APPLY TO YOU.

10. U.S. GOVERNMENT END USERS.

The Covered Code is a "commercial item," as that term is defined in 48 C.F.R. 2.101 (Oct. 1995), consisting of "commercial computer software" and "commercial computer software documentation," as such terms are used in 48 C.F.R. 12.212 (Sept. 1995). Consistent with 48 C.F.R. 12.212 and 48 C.F.R. 227.7202-1 through 227.7202-4 (June 1995), all U.S. Government End Users acquire Covered Code with only those rights set forth herein.

11. MISCELLANEOUS.

This License represents the complete agreement concerning subject matter hereof. If any provision of this License is held to be unenforceable, such provision shall be reformed only to the extent necessary to make it enforceable.

This License shall be governed by California law provisions (except to the extent applicable law, if any, provides otherwise), excluding its conflict-of-law provisions. With respect to disputes in which at least one party is a citizen of, or an entity chartered or registered to do business in the United States of America, any litigation relating to this License shall be subject to the jurisdiction of the Federal Courts of the Northern District of California, with venue lying in Santa Clara County, California, with the losing party responsible for costs, including without limitation, court costs and reasonable attorneys' fees and expenses. The application of the United Nations Convention on Contracts for the International Sale of Goods is expressly excluded. Any law or regulation which provides that the language of a contract shall be construed against the drafter shall not apply to this License.

12. RESPONSIBILITY FOR CLAIMS.

As between Initial Developer and the Contributors, each party is responsible for claims and damages arising, directly or indirectly, out of its utilization of rights under this License and You agree to work with Initial Developer and Contributors to distribute such responsibility on an equitable basis. Nothing herein is intended or shall be deemed to constitute any admission of liability.

13. MULTIPLE-LICENSED CODE.

Initial Developer may designate portions of the Covered Code as Multiple-Licensed. Multiple-Licensed means that the Initial Developer permits you to utilize portions of the Covered Code under Your choice of the MPL or the alternative licenses, if any, specified by the Initial Developer in the file described in Exhibit A.

EXHIBIT A -Mozilla Public License.



“The contents of this file are subject to the Mozilla Public License Version 1.1 (the “License”); you may not use this file except in compliance with the License. You may obtain a copy of the License at

<http://www.mozilla.org/MPL/>

Software distributed under the License is distributed on an “AS IS” basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

The Original Code is _____.

The Initial Developer of the Original Code is _____.

Portions created by _____ are Copyright (C) _____
_____. All Rights Reserved.

Contributor(s): _____.

Alternatively, the contents of this file may be used under the terms of the _____ license (the [_____] License), in which case the provisions of [_____] License are applicable instead of those above. If you wish to allow use of your version of this file only under the terms of the [_____] License and not to allow others to use your version of this file under the MPL, indicate your decision by deleting the provisions above and replace them with the notice and other provisions required by the [_____] License. If you do not delete the provisions above, a recipient may use your version of this file under either the MPL or the [_____] License.”

[NOTE: The text of this Exhibit A may differ slightly from the text of the notices in the Source Code files of the Original Code. You should use the text of this Exhibit A rather than the text found in the Original Code Source Code for Your Modifications.]


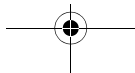 




Table of Contents

Important Safety Precautions	1
Your Phone	3
Closed View of Phone	4
Front View of Phone	6
Understanding the Display Screens	9
Screen Icons	10
Camera Screen	13
Camera	14
Getting Started	15
Installing and Charging the Battery	15
Turning Your Phone On and Off	17
Phone Basics	18
Displaying Your Phone Number	18
Making Calls	18
Making Regular Calls	18
Speakerphone Key	18
Correcting the Number	18
Redial the Last Number	18
Calling Emergency Numbers	19
Adjusting the Volume	19
Dialing and Saving Phone Numbers with Pauses	19
Dialing from Your Contacts List	20
Using One-Touch/Two-Touch Speed Dialing	20
Answering Voice Calls	21
Answering Calls	21
Missed Call Notification	22
In-Call Options	22
Using the Menu Options	22
Making Three-Way Calls	23
Mute/Unmute	23
End-of-Call Options	23

 

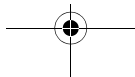

Saving Phone Numbers	24
Entering Text	24
Selecting a Character Input Mode	24
Entering Characters Using T9 Text Input	25
Entering Characters by Tapping the Keypad	25
Entering Numbers and Symbols	26
Using Caller ID	26
Responding to Call Waiting	27
Using the Speakerphone	28

Menu Functions 29

Contacts 35


Adding New Entries	35
Adding New Entries in Idle Mode	35
Adding New Entries from the Contacts Menu	35
Finding, Editing or Dialing Contacts	36
Displaying the Contacts Menu	36
Selecting Ringer Types to Identify Entries	37
Selecting Pictures for Entries	37
Groups	38
Assigning Contacts to Groups	38
Sending Messages to Groups	39
Group Options	39
Speed Dials	40
Creating Speed Dial Entries	40
Editing Speed Dial Entries	41
Using Speed Dial	41
My Name Card	41

Call History 43

Viewing Your Call History	43
Call History Options	43
Erasing Call History	44

Messaging 45

Voicemail	45
Setting Up Your Voicemail	45

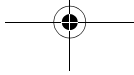 

VoiceMail Notification	45
New VoiceMail Message Alerts	46
Retrieving Your VoiceMail Messages	46
Clearing the Message Icon	47
Text & Multimedia Messages	47
Create New	47
Inbox	52
Outbox/Sent	53
Templates	55
Drafts	55
Saved	56
Erase Messages	56
Settings	57
Memory Info	59
Web Alert	60
Wireless Web	61
Launching the Browser	61
Navigating the Wireless Web	61
Soft Keys	61
My Files	63
Ring Tones	63
Assigning Downloaded Ringers	63
Images	64
Assigning Downloaded Images	65
Camera	66
Taking Pictures	66
Camera Options	67
Sending Pictures via Multimedia Messaging	69
Sound Album	70
Image Album	71
Bluetooth	73
Adding New Devices	73
Options	74

Tools	76
Alarm Clock	76
Calculator	77
Calendar	78
Using Today Entries	78
Using Scheduler Entries	78
Using the Task List	80
Using Countdown	82
Memo Pad	83
Creating Memos	83
Viewing Notes	84
Deleting Notes	84
Voice Memo	84
Recording Voice Memos	84
Recording Phone Call Conversations	85
Voice Memo Options	86
Voice Service	86
Activating Voice Recognition	86
Call	87
Lookup	89
Send Message	90
Go To	90
Check	90
Configuring Digit Dialing	91
Changing Voice Dial Prompts	91
World Time	92
Settings	93
Sounds	93
Ringer Type	93
Voice Calls	93
Messages	94
Schedule	95
Meeting / Silent Mode	95
Key Tone	96
Volume	97

Alerts	98
Display	99
Changing the Greeting	99
Changing the Wallpaper	100
Changing the Incoming Call Settings	100
Changing the Backlight Settings	101
Changing the Keypad Light Settings	102
Changing the Brightness	102
Changing the Dialing Font	103
Others	103
Configure Nav. Key Shortcuts	103
Call Setup	104
Language	105
TTY Mode	106
Key Guard	107
System	107
Phone Info	107
Memory Info	108
System	108
Restrict and Lock	109
Security	110
Airplane Mode	111
Safety	112
Getting the Most Out of Your Reception	112
Caring for the Battery	117
Acknowledging Special Precautions and Industry Canada Notice	118
Information to User	118
Owner's Record	120
User Guide Proprietary Notice	120
Warranty	121
Index	124

Important Safety Precautions

Please read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Road Safety at All Times

Do not use a hand-held phone while driving; park the vehicle first.

Switching Off When Refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switching Off in an Aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching Off in Hospitals

Switch your phone off near medical equipment. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Special Regulations

Follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital, for example).

Sensible Use

Use the phone in the intended position (held to the ear). Avoid unnecessary contact with the antenna when the phone is on.

Emergency Call

Ensure the phone is switched on and in-service. Key in the emergency number for your present location, then press the  key. Give all the necessary information as accurately as possible. Do not end the call until given permission to do so.

Water Resistance

Your phone is not water resistant. Keep it dry.

Accessories and Batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorized accessories could damage your phone and may be dangerous.

Important: Although the phone can be used while the battery is charging, the battery must be fully charged before first use, otherwise you could damage the battery.

Important: Using a non-supported battery may cause damage to your phone.

Qualified Service

Only qualified service personnel may repair your phone.
For more detailed safety information, see "Safety" on page 112.

2 Important Safety Precautions

Your Phone

Congratulations on the purchase of your Samsung SCH-U430 phone. This phone is lightweight, easy-to-use, reliable, and offers many exciting features and service options:

 
- Mobile Browser™ provides access to the wireless Internet. See "Launching the Browser" on page 61.
- VGA digital camera
- VoiceSignal technology for voice-activated dialing and other commands
- Messaging provides quick and convenient text (SMS) and multimedia (MMS) messaging capabilities. See "Messaging" on page 45.
- Downloadable ringtones and wallpapers
- A built-in planner and other useful personal management applications. See "Tools" on page 76.
- Bluetooth® wireless technology



Your Phone

Closed View of Phone

Your phone has many features that you can access while the phone is closed.

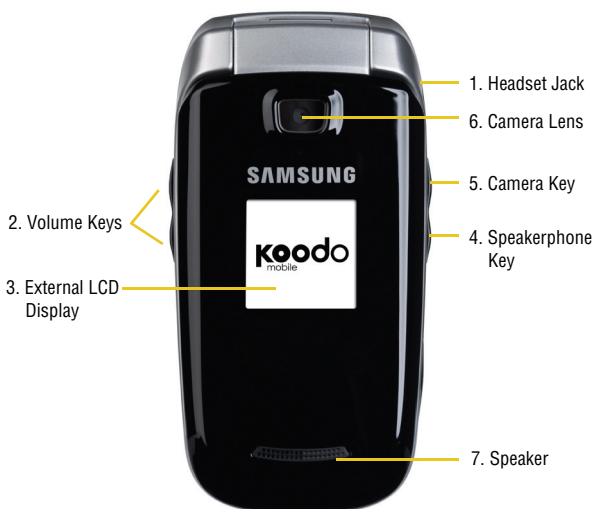

1. **Headset Jack:** Allows you to plug in an optional headset for safe, convenient hands-free conversations.
2. **Volume Key:** Allows you to adjust the ringer volume in Idle mode (with the phone open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options. To mute the ringer during an incoming call, press the volume key up or down.
3. **External LCD Display:** Displays time and date information, incoming calls or messages.

4 Your Phone

4. **Speakerphone Key:** Press this key to enable/disable the speakerphone option. During a call press the speakerphone key to enable/disable. When the speakerphone option is enabled/disabled you will hear a tone.
5. **Camera Key:** This button is used to launch the integrated digital camera.
 - In Idle mode, press to activate the **Camera** menu.
 - In Idle mode, press and hold to start the camera's preview mode.
 - When the phone is closed, press and hold to start the camera's preview mode. Unlock the Key Lock by pressing the Volume and Camera keys.
6. **Camera Lens:** The lens of your built-in camera.
7. **Speaker:** Allows you to hear the different ringers and sounds. The speaker also allows you to hear the caller's amplified voice in speakerphone mode.



Front View of Phone



6 Your Phone



1. **Earpiece:** The earpiece allows you to hear the other caller.
2. **Display Screen:** This screen displays all the information you need to operate your phone.
3. **Navigation Keys:** These keys allow you to scroll through the phone menu options and provide a shortcut to phone functions when in Idle mode.
4. **Left Soft Key:**
 - In Idle mode, press for **Send Msg.**
 - When using other features, such as the Web Browser, the left soft key performs a context-sensitive action. This action is shown in the bottom-left corner of the display screen.
5. **Send Key:**
 - Allows you to place or receive a call.
 - In Idle mode, press the key once to access the Recent call log.
 - In Idle mode, press and hold the key to access VoiceSignal, the voice recognition feature. For more information, see "Activating Voice Recognition" on page 86.
6. **Clear Key:** Deletes characters from the display when you are in text entry mode. Press to return to the previous menu or screen when navigating features on your phone.
7. **Voicemail Key:** In Idle mode press and hold this key to launch Voicemail.



8. **Special Function Keys**

• **Shift/Asterisk:**

- Enters the asterisk [*] character for calling features.
- In text entry mode, press the key to switch between letter cases when using the input type Alpha (ABC, Abc, abc) or T9.
- In Idle mode, press and hold to switch your handset to Silent Mode (with vibration).

 
• **Space/Pound:**

- Enters the pound [#] character for calling features.
- In text entry mode, press to enter a space.
- In Idle mode, press and hold to switch your handset to Lock Mode (disables all outgoing calls except for emergency, 911).

9. **Power/Accessory Interface Connector:** The Power/Accessory Interface Connector is used to plug in a travel adaptor, or any available accessory to your phone.

10. **Microphone:** The microphone allows other callers to hear you clearly when you are speaking to them.

11. **Alpha-numeric Keys:** Use these keys to enter numbers, letters, and characters. For information on entering text, see "Entering Text" on page 24.

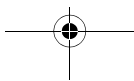

12. **End Key:**

- During a call, press this key to end the call.
- When you receive an incoming call, press this key to reject the call.
- When the phone is off or in Idle mode, press and hold this key for a few seconds to turn your phone on or off.
- When in the main menu, press to return the phone to Idle mode and cancel your input.

13. **Centre/OK Key:** Pressing  when navigating through a menu accepts the highlighted choice in the menu.

14. **Right Soft Key:** This key can be used in several different ways.

 
- In Idle mode, press to access your **Contacts**.
- When using other features, such as the Web Browser, the right soft key performs a context-sensitive action. This action is shown in the bottom right corner of the display screen.



Understanding the Display Screens

Your phone's display screens provide a wealth of information about your phone's status and options. When the phone is closed, the exterior display screen is dimmed. To illuminate the exterior display screen, press any of the side or front keys.

The interior screen has three areas:

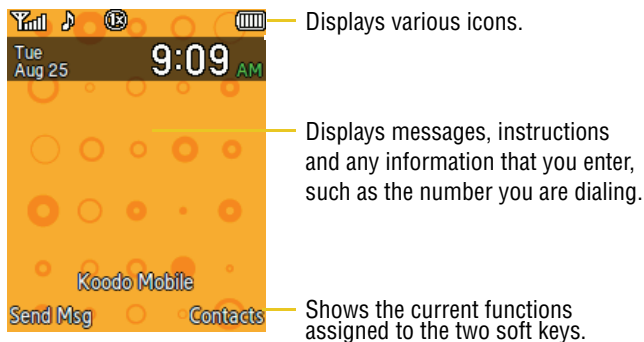

Screen Icons

This list identifies the symbols you'll see on your phone's display screens:



1X Status: Indicates that your 1X web connection is active. Incoming voice calls go directly to Voicemail; outgoing voice calls can be made, but the web connection will terminate.



1X Sending: Indicates that data is being transferred over the 1X network. The arrow direction indicates that the handset is sending data.



1X Receiving: Indicates that data is being transferred over the 1X network. The arrow direction indicates that the handset is sending data.



1X Dormant: Indicates that your 1X connection is dormant.



1X Indicator: Indicates that your phone is receiving 1X digital service.



Digital Indicator: Indicates that your phone is receiving digital (non-3G) service.



Security: Indicates that your phone is in web security mode.



Roaming: Indicates that your phone is roaming.



Missed Call: Indicates that you missed a call.



Missed Text Message: Indicates that you have a missed text message.



Missed Voice Mail: Indicates that you have a missed voice mail.



Missed Scheduler: Indicates that you have a missed scheduler.



Missed Alarm: Indicates that you have a missed alarm.



New Text Message: Indicates that you have a new text message.



Picture Mail: Indicates that you have a new picture message.



Voice Mail: Indicates that you have a new voice message.



Locked: Indicates that your phone is locked.



TTY: Indicates that the TTY option is On. This icon is displayed only when earphones are in use.



Vibrate: Indicates that your phone is in vibrate all mode.



Ringer and Vibrate: Indicates that your phone is set to ringer plus vibrate mode.

Your Phone



Ringer: Indicates that the ringer is set at a level between 1-8 or that 1-Beep is selected.



Ringer Off: Indicates that the ringer is turned Off.



Alarm: Indicates that an alarm is set on your phone.



In Use: Indicates that a call is in progress.



No Service: Indicates that no service is available because your phone cannot find a signal.



Signal: Displays your current signal strength. When you are receiving maximum signal strength, six bars are shown.



Battery: Indicates that your current battery charge is at full strength.



Low Battery: Indicates that your current battery charge is low and the battery needs to be recharged.



Mute: Indicates that the handset is in Mute mode.



Key Mute: Indicates that the handset is in Key Mute mode.



Speaker: Indicates that the handset is in Speaker mode.



Record: Indicates that a voice memo is being recorded.



Pause: Indicates that a voice memo has been paused.



Play: Indicates that a voice memo is being played.



Bluetooth Enable: Indicates that Bluetooth technology is enabled.



Device Connected: Indicates that Bluetooth technology is connected.



BT Headset Connected: Indicates that Bluetooth headset is connected.



Bluetooth Hidden: Indicates that Bluetooth technology is hidden.

Your Phone

Camera Screen

This list identifies the symbols you'll see on your phone's interior display screen when in camera mode:



Camera: Indicates that the Camera is enabled.



Self Timer: Indicates that the self-timer function is enabled. With the self-timer enabled, a set amount of time is required prior to taking a picture.



Sunny: Indicates that the white balance has been set to Sunny. This is used for taking pictures outdoors on bright sunny days.



Cloudy: Indicates that the white balance has been set to Cloudy. This is used for taking pictures outdoors under cloudy conditions.



 
Incandescent: Indicates that the white balance has been set to Incandescent. This is used for taking pictures indoors under normal lighting conditions.



Fluorescent: Indicates that the white balance has been set to Fluorescent. This is used for taking pictures indoors under fluorescent lighting conditions.







Manual: Indicates that the white balance has been set to Manual. This is used for taking pictures indoors or outdoors using your own custom settings.

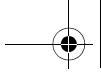

Camera

    The camera on the front of your phone allows you to take photos. For further details, see "Camera" on page 66.

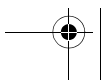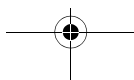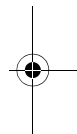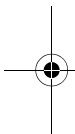

Getting Started

Installing and Charging the Battery

Your phone is equipped with a Lithium Ion (Li-ion) battery. It allows you to recharge your battery before it is fully drained. When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and a message repeats at regular intervals on the display. If this happens, the display dims to conserve the remaining battery power. When the battery level becomes too low, the phone automatically turns off.

Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power. You can use the phone while the battery is charging, but this causes the phone to charge more slowly. Long backlight settings, searching for service, vibration mode, camera and browser usage affect the battery's talk and standby times.

Important: When you use the phone for the first time with a new battery, ensure that the battery is fully charged to avoid damaging it.

Important: Using a non-supported battery may cause damage to your phone. When using a non-supported battery, you cannot recharge it. The handset can be used only for the duration of the factory battery charge, if any.

Getting Started

Installing the Battery

1. Slide the battery cover down and lift up to remove it.
2. Insert the top end of the battery into the phone housing with the label side up. The gold contacts on the end of the battery should match up with those on the phone.
3. Push the bottom end of the battery down until it snaps into place.
4. Replace the battery cover.



Removing the Battery

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Slide the battery cover down and lift up to remove it.
3. Use your finger to lift the battery (bottom end first) up and away from the phone.



Charging the Battery with the Travel Adapter

Your phone is powered by a rechargeable standard Li-ion battery. Use Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.

The  icon indicates that the battery is full. If the battery charge is getting too low, the battery icon  blinks and the phone sounds a warning tone.

Warning! Using the wrong battery charger could cause damage to your phone and void the warranty.

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Plug the large end of the travel adapter into a standard 120/220V AC wall outlet.
3. Insert the end of the adapter into the charger/ accessory connector at the bottom end of the phone.



Getting Started

Turning Your Phone On and Off

1. Open the phone.
2. Press and hold the  key until the phone switches on. Once your phone is on, it displays "Looking for Service". When your phone finds a signal, it automatically enters Idle mode. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, the phone enters Power Save mode and periodically searches for a signal. When a signal is found, your phone automatically returns to Idle mode.

3. To turn your phone off, Press and hold the  key until you see the powering down animation on the display screen.

Phone Basics

Displaying Your Phone Number

In case you forget your phone number, your phone can remind you.

To display your phone number, press  for **Menu**, followed by .

 .

Making Calls

Making Regular Calls

From the Idle screen, enter the phone number and press the  key.

To end the call, press the  key or close the phone.

Speakerphone Key

Use the speakerphone key (located on the right side of your phone) to switch from using the earpiece to the speakerphone before or during a call. Press and hold the speakerphone key to enable and disable the speakerphone option.

Correcting the Number

To clear	Press the
the last digit displayed	 key
the whole display	 key and hold it

Redial the Last Number

To redial your last outgoing call, press  twice. See "Call History" on page 43 for further information.

Calling Emergency Numbers

You can place calls to 911 (dial    and press ) , even if your phone is locked or your account is restricted.

Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.

- Press the  key to increase the volume level and the  key to decrease the level.
- In Idle mode, you can also adjust the ringer volume using these keys.

Dialing and Saving Phone Numbers with Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as Voicemail or credit card billing numbers. There are two types of pauses available on your phone:

- **Hard pause:** sends the next set of numbers when you press .
- **2sec Pause:** automatically sends the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine 2-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter a phone number from Idle mode.
2. Press right soft key  for **Options** and select  for **Hard Pause** or  **2sec Pause** for a 2-second pause.
3. Enter additional numbers.

4. Press  to dial the number.

— or —

Press right soft key  for **Options** and press  for **Save** to save the number in your Contacts list.

When dialing a number with a hard pause, press  to send the next set of numbers.

Dialing from Your Contacts List

You can select a Contact and dial the number automatically. To dial directly from a Contacts entry:

1. Press  for **Menu** and then press  for **Contacts**.
2. Scroll up or down to highlight the desired entry and press  to make the call.

Tip: If the desired entry contains more than one phone number, scroll left or right to display the number you wish to call and press  to make the call.

Using One-Touch/Two-Touch Speed Dialing

You can store up to 98 numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a few buttons. For information on setting up this feature, see "Speed Dials" on page 40.

With this feature, you can dial Speed Dial entries using one key press for locations 2-9 and two key presses for locations 10-99.

To use One-Touch Dialing for Speed Dial locations 2-9:

- Press and hold the appropriate key for approximately two seconds. (The display confirms that the number has been dialed when it shows the saved caller ID or number.)

To use Two-Touch Dialing for Speed Dial locations 10-99:

1. Press the first digit.



2. Press and hold the second digit for approximately two seconds.
(The display confirms that the number has been dialed when it shows the saved call ID or number.)

Answering Voice Calls

Your phone notifies you of incoming calls in the following ways:

- The phone rings and/or vibrates.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts list, the entry's name is displayed. The caller's phone number may also be displayed, if available.

Phone Basics

Answering Calls

1. If necessary, open the phone.
 2. Press the  key to answer the incoming call.
 - When the **Flip Open** option in the **Call Answer** menu is activated, you can answer a call by opening the phone (**Menu**     ).
 3. To end the call, press the  key or close the phone.
- The following options are also available to handle an incoming call:
- Press either of the side volume keys to quiet the ringer.
 - Press the right soft key  or  key to **Ignore** the incoming call and send it directly to your Voicemail box.



Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

- Press the left soft key  to **Save** the number to your Contacts.

In-Call Options

Using the Menu Options

Select actions by pressing the right soft key  for **Options** during a call. A list of options is displayed that allows you to perform different actions during the course of a call. The following options are available:

-  **Speaker On/Off:** Allows you to activate or deactivate the speaker.
-  **Key Mute/Unmute:** Allows you to activate or deactivate DTMF tones. See "Tone Length" on page 96 for more information.
-  **Contacts:** Accesses the Contacts menu options. See "Contacts" on page 35.
-  **Messaging:** Allows you to check for Voicemail and notifications. See "Messaging" on page 45.
-  **3-Way Call:** Allows you to talk to two different people at the same time. See "Making Three-Way Calls" on page 23.
-  **Recent Calls:** Checks your call log for Recent, Dialed, Received and Missed calls. You can also erase the logs and view call times from this menu. See "Call History" on page 43.
-  **Voice Memo:** Allows you to record the other person's conversation during a call. For more information, see "Voice Memo" on page 84.

- **Tools**: Accesses the Tools menu options. See "Tools" on page 76.
- **Phone Info**: Displays your phone's hardware and software versions. See "Phone Info" on page 107.

Making Three-Way Calls

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call and press .
2. Once you have established the connection, press the right soft key  for **Options**, followed by  for **3-Way Call**. Select **Contacts** or **Recent List** to retrieve a number from your phone, or select **Enter Phone#** to type in a new number. Press .
3. When you're connected to the second party, press  again to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Mute/UnMute

You can place the current call on hold by pressing the left soft key  for **Mute**. To reactivate your phone's microphone, press the left soft key  again for **UnMute**.

End-of-Call Options

After receiving a call from or making a call to a phone number that is not in your Contacts, the phone number and the duration of the call are displayed. Press the right soft key  to **Options** and select **Save** to add the number to your Contacts.

Note: The End-of-Call options are not displayed for calls identified as Unknown ID or Restricted numbers.

Saving Phone Numbers

Your phone can store up to 7200 entries (numbers/e-mails/URLs) in multiple categories (Mobile, Home, Work, Pager, Fax, and Others). The Contacts capacity is based on the number of saved contacts. (For more information, see "Adding New Entries" on page 35.)

Entering Text

Selecting a Character Input Mode

Your phone provides convenient ways to enter words, letters, punctuation, symbols, and numbers whenever you are prompted to enter text (for example, when sending text messages).

To change the character input mode:

1. When you display a screen where you can enter text, press the right soft key  for **Options**.
2. Select a character input mode:
 -  **Alpha:** Enter characters with the keypad (see page 25).
 -  **T9 (English):** Enter characters using predictive T9 Text Input (see the next topic).
 -  **Symbol:** Enter symbols (see page 26).
 -  **Number:** Enter numbers (see page 26).
 -  **Quick Text:** Enter prewritten phrases. This option is available only for fields where Quick Text can be entered.
 -  **Shortcut:** Enter common Web text. This option is available only for fields where Web text can be entered.

Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your phone by pressing keys just once per letter. To select the **T9 (English)** mode when entering text, see "Selecting a Character Input Mode" on page 24.

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.) If the word you want does not display after you have entered all the letters, press  to scroll through additional word selections. To accept a word and insert a space, press . If you make a mistake, press  to erase a single character. Press and hold  to delete an entire entry.

To enter text using T9:

1. From the text entry screen (for example, a new event in scheduler), press the right soft key  for **Options** and select **T9 (English)**.
2. Use the keypad to enter the new event. (For example, to enter "Meeting", press  once,  twice,  once,  once,  once, and  once.)

Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad, select the **Alpha** mode (see "Selecting a Character Input Mode" on page 24). Press the corresponding key repeatedly until the desired character appears. When the  icon is shown at the bottom of your screen, the first letter of the first word is capitalized and following letters are lowercase. The  key can be used to select the case desired.

To enter text using Alpha:

1. From a text entry screen (for example, when sending text messages), press the right soft key  for **Options** and select **Alpha**.

2. Use your keypad to enter the contact's name. (For example, to enter "Bill", press **2 ABC** twice, **4 GHI** three times, **5 JKL** three times, and **5 JKL** three times again.) Characters scroll as follows:

1 00 @ . , @ 1 ? ! * # /	7 PQRS 7
2 ABC ABC 2	8 TUV 8
3 DEF DEF 3	9 WXYZ 9
4 GHI GHI 4	0 ++ 0
5 JKL JKL 5	# @ Space
6 MNO MNO 6	* + id Change case

After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Entering Numbers and Symbols

To enter numbers:

- Select the **Number** mode and press the appropriate key. (See "Selecting a Character Input Mode" on page 24.)

To enter symbols:

- Select the **Symbols** mode. (See "Selecting a Character Input Mode" on page 24.) To enter a symbol, press the appropriate key displayed above the desired symbol character.

Using Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the Received call. If you do not want your number displayed when you make a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:

1. Press .
2. Enter the number you want to call.
3. Press .

To permanently block your number, call the Customer Service department of your network service provider.

Tip: If you want to block the displaying of your phone number for the calls you make, you can do so by typing specific characters before you type the number you want to dial. You can also automate this. For information on prepending numbers to all of your phone calls automatically, see "Auto Prepend" on page 105.

Phone Basics

Responding to Call Waiting

When you're on a call, Call Waiting alerts you of incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- Press . (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- Press again.



Using the Speakerphone

The speakerphone allows you to hear audio through the speaker and talk without holding your phone. When the speakerphone is activated, use the Volume keys to adjust the sound level. To turn the speakerphone on or off during a call, press and hold the side speakerphone key .

Warning: Due to higher volume levels, do not place the phone near your ear during speakerphone use.



Menu Functions

The following list shows the menu structure and indicates the number assigned to each option.

1: History

- 1: History
- 2: Missed Alerts

2: Contacts

3: Messaging

- 1: Voicemail
 - 1: Dial Voicemail
 - 2: Clear Icon
- 2: Text and Multimedia
 - 1: Send New
 - 2: Inbox
 - 3: Outbox/Sent
 - 4: Templates
 - 5: Drafts
 - 6: Saved
 - 7: Erase Messages
 - 1: Inbox
 - 2: Outbox
 - 3: Drafts
 - 4: Saved
 - 5: Templates
 - 6: All Messages
 - 8: Settings
 - 1: SMS Options
 - 1: CallBack Number
 - 2: Priority
 - 2: MMS Options
 - 1: Read Report
 - On
 - Off
 - 2: Delivery Report

- On
- Off
- 3: Priority
 - High
 - Normal
 - Low
- 4: Auto Download
 - On
 - Off
- 5: Rejection Settings
 - 1: By Size
 - Off
 - Over 150Kb
 - Over 100Kb
 - Over 50Kb
 - 2: Number/Email
 - 1-5: Empty
- 3: Save to Outbox
 - Auto Save
 - Prompt
 - Do not Save
- 4: Auto Delete Inbox
 - On
 - Off
- 5: Default Entry Mode
 - T9 Word
 - Alpha
 - Number
- 6: Quick Text
 - 1: Good Call.
 - 2: I'm totally flexible.
 - 3: How are you?
 - 4: Hi there!
 - 5: Thanks!
 - 6: I'll call you later.
 - 7: On my way.

- 8: Busy right now.
- 9: Call me.
- 10: Running late, will be there soon.
- 11: Where are you?
- 12-20: [Empty]

7: Auto Scrolling

- Off
- 3 Seconds
- 5 Seconds
- 10 Seconds

8: Message Reminder

- Off
- Once
- Every 2 min

9: Alert on call

- On
- Off

9: Memory Info

3: Web Alert

4: Wireless Web

- 1: Launch Web
- 2: Bookmarks
- 3: Go To URL

5: My Files

- 1: Ringtones
- 2: Images

6: Camera

- 1: Camera
 - 1: Take Photo
 - 2: Image Album
 - 1: Photo Gallery
 - 2: MMS
 - 3: Transferred Images
 - 3: PictBridge Print
- 2: My Albums
 - 1: Sound Album

1: Sound Gallery

2: MMS

3: Transferred Sound

2: Image Album

1: Photo Gallery

2: MMS

3: Transferred Images

7: Bluetooth

1: Trusted Devices

2: Enable

- On
- Off

3: Visibility

- Visible for 1 min
- Hidden

4: Device Name

5: Device Info

6: Select Device Type

- Hands Free
- Headset

7: Voice Commands

- On
- Off

8: Tools

1: Alarm

1: Alarm #1

2: Alarm #2

3: Alarm #3

2: Calculator

3: Calendar

1: Today

2: Scheduler

3: Task List

4: Countdown

4: Memo Pad

5: Voice Memo

- 6: Voice Service
- 7: World Time
- 8: Set Time (displays when service is not available)

9: Settings

- 1: Display
 - 1: Main Screen
 - 1: Wallpaper
 - 1: Preset Images
 - 2: My Content
 - 3: My Pictures
 - 2: Greeting
 - 1: Koodo Mobile
 - 2: Custom
 - 3: Incoming Call
 - 1: With Caller ID
 - 2: No Caller ID
 - 2: Outer Screen
 - 1: Wallpaper
 - 1: Preset Images
 - 2: Main LCD Image
 - 3: Brightness
 - 4: Backlight
 - 1: On
 - 7 Seconds
 - 15 Seconds
 - 30 Seconds
 - Always On
 - Always Off
 - 2: Dim
 - 15 Seconds
 - 30 Seconds
 - 1 Minute
 - Always On
 - 5: Dialing Font
 - 1: Color
 - 1: Basic

- 2: Rainbow
- 3: Monochrome
- 4: Hyphenate

- 2: Size
 - 1: Large
 - 2: Normal

- 6: PowerSave Mode

- 7: Keypad Light
 - Always On
 - 30 Seconds
 - 15 Seconds
 - 8 Seconds
 - Always Off

- 8: Language
 - English
 - Français

- 2: Sounds

- 1: Volume
 - 1: Ringer
 - 2: Earpiece
 - 3: Headset
 - 4: Speakerphone
- 5: Advanced
 - 1: Text and Multimedia
 - 2: Voicemail
 - 3: Alarms

- 2: Ringer Type

- 1: Voice Calls
 - 1: With Caller ID
 - Ring Tones
 - Melodies
 - My Content
 - My MMS Content
 - 2: No Caller ID
 - Ring Tones
 - Melodies



 
- My Content
- My MMS Content
- 3: Roam Ringer
 - Normal
 - Distinctive
- 2: Messages
 - 1: Voicemail
 - Ring Tones
 - Melodies
 - My Content
 - 2: Text and Multimedia
 - Ring Tones
 - Melodies
 - My Content
 - 3: Schedule
 - Ring Tones
 - Melodies
 - My Content
 - 4: Meeting/Silent Mode
 - On
 - Off
- 3: Alerts
 - 1: Minute Beep
 - On
 - Off
 - 2: Out of Service
 - On
 - Off
 - 3: Connect
 - On
 - Off
 - 4: Signal Fade/Call Drop
 - On
 - Off
 - 5: Power On
 - 6: Power Off
- 4: Key Tone
 - 1: Tone Type
 - My Content
 - Xylophone
 - DTMF
 - Voice
- 2: Tone Length
 - Short
 - Long
- 3: Key Tone Level
 - KeyTone Off
 - Level 1 to 8
- 3: Text Entry
 - 1: Auto-Capital
 - 2: Auto-Space
 - 3: Dual Language
 - 4: Personal Dictionary
 - 5: Used Word Dictionary
 - 6: Display Candidate
 - 7: Prediction Start
 - 8: Help
- 4: Nav. Key Shortcuts
 - 1: Left Nav. Key
 - Inbox
 - Send Text
 - Missed Alerts
 - Contacts
 - Scheduler
 - Messaging
 - Ringer Type
 - My Files
 - Display
 - Alarms
 - Calculator
 - Bluetooth
 - Web
 - Recent Calls
 - 2: Right Nav. Key
 - 1: For options, see Left Nav. Key

32 Menu Functions



- 3: Down Nav. Key
 - 1: For options, see Left Nav. Key
- 5: Phone Info
 - 1: Phone Number
 - 2: Icon Glossary
 - 3: Version
 - 4: Advanced
 - 5: Memory Info
- 6: More...
 - 1: Accessibility
 - 1: TTY
 - 2: Voice Service
 - 2: Airplane Mode
 - 1: On
 - 2: Off
 - 3: On Power Up
 - 3: Browser
 - 1: Clear Web History
 - 2: Clear Web Cache
 - 3: Clear Web Cookies
 - 4: Call Setup
 - 1: Auto Answer
 - Yes
 - No
 - 2: Abbreviated Dialing
 - 3: Call Answer
 - Flip Open
 - Talk Key
 - Any Key
 - 4: Contacts Match
 - 5: Auto Prepend
 - Set
 - Edit
 - 6: Plus Dialing
 - Plus Code
 - Int'l Dial Prefix

- 7: Voice Caller ID
 - On
 - Off
- 5: Restrict and Lock
 - 1: Voice
 - 1: Restrict
 - 2: Lock
 - 2: Camera/Pictures
 - 1: Unlock
 - 2: Lock
 - 3: Lock my Phone
 - 1: Unlocked
 - 2: On Power-Up
 - 3: Lock Now
- 6: Roaming
 - 1: Set Mode
 - 1: Automatic
 - 2: Home Only
 - 2: Set NAM
 - 1: NAM 1
 - 2: NAM 2
 - 3: Call Guard
 - On
 - Off
- 7: Security
 - 1: Change Lock Code
 - 2: Special #
 - 3: Erase/Reset
 - 1: Erase Web Cookies
 - 2: Erase Web History
 - 3: Erase Web Cache
 - 4: Erase Contacts
 - 5: Erase Downloads
 - 6: Erase Image Album
 - 7: Default Settings
 - 8: Reset Phone





8: Key Guard


1: Flip-closed

2: After 5 seconds

  3: Off



34 Menu Functions

 

Contacts

Use the Contacts menu to store your phone numbers and other contact information. You can specify the following information for each contact you add to your Contacts list: Mobile, Home, Work, Pager, Fax, and Others. You can store up to 600 entries.

Adding New Entries

Adding New Entries in Idle Mode

To add a New Entry while in Idle mode:

1. Enter a new phone number and press the right soft key  for **Options**.
2. Use the navigation keys to select **Save** and press .
3. Use the navigation keys to select **New Entry** and press .
4. Select the type of number to be stored: **Mobile, Home, Work, Pager, Fax, or Others**. To select the category, press the navigation keys up or down and press .
5. Enter a name. For information about entering text, see "Entering Text" on page 24.
6. Press the navigation keys up or down to edit information in the other categories.
7. Press the left soft key  for **Done** to save the entry.



Adding New Entries from the Contacts Menu

To add a new entry from the Contacts menu:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Use the navigation keys to select **Add New**.



4. Use the navigation keys to select **New Contact**.
5. Enter the new contact information. See "Adding New Entries in Idle Mode" on page 35.

Finding, Editing or Dialing Contacts

You can access your Contacts from the Idle screen by pressing the right soft key . Otherwise, to find an entry from the Contacts menu:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. A list of your Contacts is displayed. You can find a specific contact in one of the following ways:
 - Scroll through the list using the up and down navigation keys.
 - Enter the first few letters to locate the desired Contact. If more than one Contact appears, scroll through the list using the up and down navigation keys.
4. To call the Contact, press .

To edit the Contact, press the right soft key  for **Options**, and select **Edit**. See "Adding New Entries" on page 35.

Displaying the Contacts Menu

To display the Contacts menu:

1. Press  for **Menu**.
2. Press  for **History**.
3. Press the navigation keys to the right to display the Contacts menu.



4. Select the option to use: **Find**, **Add New Entry**, **Speed Dial #'s**, or **My Name Card**.

Selecting Ringer Types to Identify Entries

You can assign ringer types to different Contact entries so you can identify callers by the ringer you hear when they call.

1. Display the edit screen for the Contact. See "Finding, Editing or Dialing Contacts" on page 36.
2. Press the navigation keys down until **Ring** is selected and press .
3. Use the navigation keys to select a ringer category and press .
4. Press the navigation keys up or down to highlight and listen to the desired ringer. Press  to select the desired ringer.
5. Press the left soft key  for **Done** to save the changes to the contact entry.



Selecting Pictures for Entries

You can assign a picture to a Contacts entry so that it appears on the displays whenever that person phones you.

1. Display the edit screen for the Contact. See "Finding, Editing or Dialing Contacts" on page 36.
2. Press the navigation keys up to select the photo area (if there is no photo, this area will be labelled **Add Photo**) and press the right soft key  for **Add**. (If a photo has already been assigned, the right soft key will say **Add**.)
3. Using the navigation keys, select one of the following options:
 - **No Image:** Leave the picture blank.



- **New Picture:** Use the camera to take a new picture. See "Camera" on page 66.
- **My Pictures:** Select an image from your **Photo Gallery**, **MMS**, or **Transferred Images**. See "Image Album" on page 71.
- **My Content:** Select an image from your downloaded images.

4. When you find the image, highlight it and press the left soft key  for **Assign**.
5. Press the left soft key  for **Done** to save the changes to the contact entry.

Groups

Assigning Contacts to Groups

You can associate a preset group name to your entries to help you sort them easier in the Contacts. Once contacts are organized into groups, you can send text and multimedia messages to all members of a group simultaneously. Additionally, you can assign a unique Picture ID or ringtone to the group.

To associate an existing number located in your Contacts:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press the right soft key  for **Options**.
4. Press  for **New Group**.
5. Press the left soft key  for **Start**.
6. Use the navigation keys to highlight a contact. Press  to select a contact. Repeat these steps to select two or more contacts.
7. Press the left soft key  for **Continue**.
8. Enter a name for the Group.

38 Contacts



9. Press the left soft key  for **Save**.

Sending Messages to Groups

You can send text messages to all the Contacts in a group:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Highlight the desired group.
4. Press the left soft key  for **Send Msg**.
5. Highlight the contact, press the right soft key  for **Options** and then press  for **Edit** or  for **Erase**. Repeat for any additional contacts that you wish to edit or remove.
6. Press the left soft key  for **Next**.
7. Create the text message to send. See "Text & Multimedia Messages" on page 47.

Group Options

You can add and delete groups, as well as rename them:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Highlight the desired group.
4. Press the right soft key  for **Options**.
5. Select an option:
 - **New Group:** Press the left soft key  for **Start**. Select two or more contacts and press the left soft key  for **Continue**. Enter the new group name and press the left soft key  for **Save**.



- **Edit Group:** Press the left soft key  for **Start**. You can rename existing groups. Use the  key to delete the text. After entering the new name, press the left soft key  for **Save**.
- **Delete Group:** You can delete only the groups that you have created, not the built-in ones.
- **Set as Secret:** You can set the group to be secret so that it is not displayed in the Contacts list.
- **Settings:** Allows you to set the options for Speed Dial (assigns a speed dial number for the group), Hide Secret (hides the group if it has been set as secret), and My Name Card (assigns a name card for the group).

Speed Dials

You can assign up to 98 phone numbers from the Contacts list that you use most frequently to the number keys (2 to 99). You can dial them easily whenever you want, simply by pressing and holding the associated number key.

Creating Speed Dial Entries

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press the right soft key  for **Options**, press  for **Settings** and press  for **Speed Dial**. A list of current speed dials is displayed.
4. Use the navigation keys to select a number and press the right soft key  for **Assign**.

Note: Memory location 1 is reserved for your Voicemail server number.

5. Select an entry from the list and press .

Editing Speed Dial Entries

To edit the number assigned to a speed dial location:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press the right soft key  for **Options**, press  for **Settings** and press  for **Speed Dial**. A list of current speed dials is displayed.
4. Use the navigation keys to select the speed dial number you want to edit.
5. Press the right soft key  for **Options** and select an option:
 - To replace the contact with a different one, press  for **Replace**.
 - To erase the contact, press  for **Remove**.



Using Speed Dial

In Idle mode, to speed dial the numbers assigned to the 2 to 99 keys, press and hold the appropriate key. See page 20 for information.

My Name Card

This function is similar to an entry in the Contacts list, except that it contains your own contact information, like a business card. You can transfer it to another Bluetooth-enabled device or send it in messages.

1. Press  for **Menu**.
2. Press  for **Contacts**.



3. Press the right soft key  for **Options**, press  for **Settings** and press  for **My Name Card**.
4. Press **Done**.
5. Press the left soft key  for **Send Contact**.

42 Contacts

Call History

With Call History, you can:

- View calls you missed, received, or dialed.
- View the length of calls made and received.

Note: You can access the most recent numbers in the three types of call records by pressing the  key while in Idle mode.

Viewing Your Call History

To view a Call History entry:

1. Press  for **Menu**.
2. Press  for **History**.
3. Select an option:
 -  **History:** Displays your most recent calls, received calls, and dialed calls.
 -  **Missed Alerts:** Displays the calls you missed.
4. To call a number, highlight the number and press .



Note: You cannot make calls from Call History to entries identified as Unknown or Restricted.

Call History Options

For additional information on a particular call, highlight a Call History entry and press . The time of the call is displayed.

Tip: You can also scroll between Call History categories by pressing the navigation keys up or down.

Press the right soft key  for **Options** to select one of the following options for this entry. Depending on the Call History category, not all options may be available:

- **Delete:** Removes the number from your Call History.
- **Delete All:** Removes all the numbers from your Call History.
- **Prepend:** Adds a prefix to a number from your Call History.
- **Save Contact:** Saves the number to your Contacts as a **New Entry** or **Existing Entry**. See "Contacts" on page 35. You cannot save phone numbers already in your Internal Contacts or from calls identified as Unknown ID or Restricted.
- **Contact Details:** If the number is already in Contacts, select to display the contact's details.

Erasing Call History

You can use the Erase History menu to delete your call records.

1. Press  for **Menu**.
2. Press  for **History**.
3. Press  for **History** and press the right soft key  for **Options**:
 - **Delete:** Deletes the call that is currently highlighted in the Call History.
 - **Delete All:** Deletes all calls in the Call History.
4. Confirm the deletion by selecting **Yes** and pressing .

Messaging

You can send and receive a range of different message types from your phone. Press  for **Menu**, followed by  for **Messaging**. This menu has the following messaging options:

- **Voicemail:** Allows you to access your voicemail box and check for voice messages.
- **Text and Multimedia:** Allows you to compose and send Text and Multimedia messages to other phones able to receive the messages.
- **Web Alert:** Allows you to view specific Web alerts from your service provider.

Voicemail

Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you should set up your voicemail and personal greeting as soon as your phone is activated.

Note: You must request this feature from your service provider for it to work correctly.

To set up voicemail:

1. Press and hold .
2. Follow the system audio prompts to create your passcode, record your greeting, and record your name announcement.

Voicemail Notification

There are several ways your phone alerts you of a new message:

- By displaying a message on the screen.



- By sounding the assigned ringer type.
- By displaying  at the top of your screen.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call to check your voicemail.

To call your voicemail immediately after a message is received:

1. Press the  key to listen to the message.
2. Press the  key to return to the Idle screen.

Tip: You can also press and hold  to check your voicemail.

To dial your Voicemail:

- Press  for **Menu**, followed by   .

Important: When you are roaming off the network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your Phone Number. You will be charged roaming rates when accessing voicemail while roaming off the network.

Note: Your phone accepts messages even when it is turned off. However, you are notified of new messages only when your phone is turned on and you are in a Service Area.

Retrieving Your Voicemail Messages

To access your voicemail from your phone, you can either speed dial your voicemail by pressing and holding the navigation keys up or by using the menu keys as follows:

1. Press  for **Menu**.
2. Press  for **Messaging**.

3. Press  for **Voicemail**.
4. Press  for **Dial Voicemail**.

Note: You are charged for airtime minutes when you are accessing your voicemail from your phone.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice messages. To clear the icon from the display screen:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Voicemail**.
4. Press  for **Clear Icon**.
5. Press the navigation keys up to select **Yes** and press .

Text & Multimedia Messages

Create New

Using your phone, you can send text and multimedia messages to other mobile phones in North America and the rest of the world, depending on your carrier.



To send messages

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Send New**.



5. Enter the phone number or e-mail address manually, or, to send the message to a saved contact, press the navigation keys down, highlight **Contact List** and press . Highlight the desired contact and press the key. When you are finished adding contacts, press the left soft key for **Done**.
6. If you wish to send your message to multiple numbers or addresses, repeat step 5. Use the navigation keys to move up and down your list of addressees. You can send a message to a maximum of 10 numbers.
7. When you are finished entering numbers or addresses, press the left soft key for **Next**.

Tip: For the next step, you can change text entry mode, by pressing the right soft key and selecting a text entry option. See "Selecting a Character Input Mode" on page 24.

8. Specify a Subject and create your message using the keypad as follows:
 - To add a Subject line to your message, highlight the **Subject** box using the navigation keys. Enter the subject text. When you are finished press the left soft key for **Done**.
 - To write the body of your message, highlight the main body box using the navigation keys. Enter the text of the message. When you are finished press the left soft key for **Done**.
9. To send the message, press the left soft key for **Send**.

To add sound clip or picture files to your messages

1. From the message composition screen, highlight **More** using the navigation keys and press .





2. Highlight **Add Sound** or **Add Picture** using the navigation keys and press .
3. Select an option:
 - For audio files, select **Record New** or **Sound Album**.
 - If you selected **Record New**, you will be prompted to record a new voice memo. For more information on recording voice memos, see "Voice Memo" on page 84.
 - If you selected **Sound Album**, select either **Sound Gallery**, **MMS** or **Transferred Sound** from the Sound Album menu, and then highlight the desired clip or voice memo and press .
 - For pictures, select **Take Picture** or **Image Album**.
 - If you selected **Take Picture**, the camera will start. For more information, see "Taking Pictures" on page 66.
 - If you selected **Image Album**, select either **Photo Gallery**, **MMS** or **Transferred Images** from the Image Album menu, and then highlight the desired clip or photograph and press .
4. The file is attached to your message. You can now finish composing and send your message.



To add slides to your message

Messages can contain up to 1000 characters. For lengthy messages, you can divide the message text among two slides. Each slide presents one screen of information. Each slide can contain its own sound and picture attachments.

1. From the message composition screen, highlight **More** using the navigation keys and press .
2. Highlight **Add Slide** using the navigation keys and press .



3. A new body box appears below the first box. You can move between the first and second slides using the Up and Down navigation keys. You can now finish composing and send.

To change sending options for messages

1. From the message composition screen, press the right soft key  for **Options**.
2. If your message contains sounds, images or slides, then your message is likely an MMS message. In which case, **Sending Options** is . Otherwise, it is likely a SMS message. Select  for **Sending Options**.
3. Select the option you wish to change.

SMS Options

- **Callback Number:** Allows you to change the callback number for this message. The default callback number is your mobile phone number.
- **Priority:** Allows you to change the priority of the message between **Urgent** and **Normal**.

MMS Options

- **Read Report:** Allows you to turn Read Report **Off** or **On**. When On, you will be notified when your message is read by the message's recipient.
- **Delivery Report:** Allows you to turn Delivery Report **Off** or **On**. When On, you will be notified when your message is received by the message's recipient.
- **Priority:** Allows you to change the priority of the message between **High**, **Normal**, and **Low**.
- **CC:** Allows you to add a CC address to your message.

- **BCC:** Allows you to add a BCC address to your message.
- **Slide Timing:** Allows you set the duration (in seconds) of each slide.

4. When finished with your messaging options, press the  key to return to the message window.

To save your MMS message

You can save a draft of your message prior to sending it.

- From the message composition screen, press the right soft key  for **Options**.
 - Press  for **Save to Drafts**. The message is stored in the **Drafts** folder. When the message is sent, the draft is deleted.
 - Press  for **Save Text**. The text of your message is now stored as a **Quick Text** message.
 - Select  for **Save as Template**. Enter a name for the template and press . The message is now stored in your **Templates** folder. Unlike draft messages, templates are not deleted when sent.
- You can now continue to compose or send your message.

To save your text message

You can save a draft of your message prior to sending it.

- From the message composition screen, press the right soft key  for **Options**.
 - Press  for **Save to Drafts**. The message is now stored in your **Drafts** folder. Once the message is sent, the draft will be deleted.
 - Press  for **Save Text**. The text of your message is now stored as a **Quick Text** message.



2. You can now continue to compose or send your message.

Inbox

This folder contains all your received text and multimedia messages. From this folder, you can view your messages, reply to or forward the message to another destination.

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Inbox**. Your messages appear in a list.
5. Highlight the desired message and press . The message appears on screen.

To reply to a message

1. With the message open, select the left soft key  for **Reply**.
2. Compose your reply message. For more information, see "To send messages", beginning at step 6.

Note: The address field is already filled in when replying to a message.

To select Inbox options

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Inbox**. Your messages appear in a list.
5. Press the right soft key  for **Options**.

- **Reply with Copy (SMS) or Reply to all (MMS):** Allows to reply to the sender of the message with the messaged copied into your reply.
- **Forward:** Allows you to forward a copy of the message to another person.
- **Move to Saved:** Allows you to move the message to the Saved list.
- **Save Address:** Allows you to save an address in your Contacts list.
- **Message Details:** Allows you to view information about the message, such as date and time.
- **Erase:** Allows you to delete the message.
- **Erase Multiple:** Allows you to select and delete several messages.
- **Erase All:** Allows you to delete all the messages in the list.

Outbox/Sent

This folder contains all the messages you have sent or are waiting to send. From this folder, you can resend your messages.

To forward or resend your message

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Outbox/Sent**. Your messages appear in a list.
5. Highlight the desired message and select one of the following options:



If the message was successfully sent previously:

- To forward the message to a different recipient, press the left soft key  for **Forward**, and specify the new recipient.
- To resend the message, press the right soft key  for **Options** and press  to **Resend**. Your message will be sent to the same recipient. See page 47 for information.

If the message failed to be sent previously:

- To resend, press the left soft key  for **Resend**. Another attempt is made to send your message to the original recipient.
- To forward the message to another recipient, press the right soft key  for **Options** and press  to **Forward**.

To select Outbox/Sent options

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Outbox/Sent**. Your messages appear in a list.
5. Press the left soft key  for **Forward** or the right soft key  for **Options**.
 - **Resend:** Allows you to resend your message.
 - **Move to Saved:** Allows you to move the message to the Saved list.
 - **Save address:** Allows you to save an address in your Contacts list.
 - **Message Details:** Allows you to view information about the message, such as date and time.

- **Message Status:** Allows you to view the **Delivery Status** and **Read Status**.
- **Erase:** Allows you to delete the message.
- **Erase Multiple:** Allows you to select and delete several messages.
- **Erase All:** Allows you to delete all the messages in the list.

Templates

Templates can be created when composing MMS messages and then be used for common occasions. To use a template when composing a multimedia message:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Templates**. Your templates appear in a list.
5. Highlight the desired template and press .
6. Compose your message. For more information, see "To send messages", beginning at step 5 on page 47. You can modify the message as desired.



Drafts

This folder contains drafts of unfinished or unsent text and multimedia messages. From this folder, you can complete and send your messages.

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.

4. Press **[S JKL]** for **Drafts**. Your draft messages appear in a list.
5. Highlight the desired draft message and press **[OK]**.
6. Complete your message. For more information, see "To send messages", beginning at step 5 on page 47. You can modify the draft message as desired.

Saved

This folder contains saved text and multimedia messages. Saved messages will not automatically expire. Delete them manually.

1. Press **[OK]** for **Menu**.
2. Press **[≡ DEF]** for **Messaging**.
3. Press **[2 ABC]** for **Text and Multimedia**.
4. Press **[6 MNO]** for **Saved**. Your saved messages appear in a list.
5. Highlight the desired saved message and press **[OK]**.

Erase Messages

You can erase messages at anytime from the Inbox, Outbox/Send, Draft or Saved message folders. To erase the messages from the desired folder:

1. Press **[OK]** for **Menu**.
2. Press **[≡ DEF]** for **Messaging**.
3. Press **[2 ABC]** for **Text and Multimedia**.
4. Press **[7 PQRS]** for **Erase Messages**.
5. Press **[1 OPQ]** for **Inbox**, **[2 ABC]** for **Outbox**, **[≡ DEF]** for **Drafts**, or **[4 GHI]** for **Saved**, **[S JKL]** for **Templates**, or **[6 MNO]** for **All Messages**.
6. Press the navigation keys left or right to select **Yes** and press **[OK]**.

Settings

There are several options associated with messages. The Settings menu allows you to customize the options to fit your preferences.

To access the Settings menu:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Settings**.

The following options are available:

SMS Options

- **CallBack Number:** Allows you to change the callback number for this message. The default callback number is your mobile phone number.
- **Priority:** Allows you to change the priority of the message between **Urgent** and **Normal**.

MMS Options

- **Read Report:** Allows you to turn Read Receipt **Off** or **On**. When On, you will be notified when your message is read by the message's recipient.
- **Delivery Report:** Allows you to turn Delivery Receipt **Off** or **On**. When On, you will be notified when your message is received by the message's recipient.
- **Priority:** Allows you to change the priority of the message between **High**, **Normal**, and **Low**.





- **Auto Download:** Allows you to turn Auto Downloading **Off** or **On**. When On, the attachments for multimedia messages will automatically be downloaded to your phone.
- **Rejection Settings:** Allows you to adjust the Rejection settings for your phone. The options available are:
 - **By Size:** Allows you to reject multimedia messages that over a specified size.
 - **Number/Email:** Allows you to reject multimedia messages sent from a specific phone number (MIN) or Email address.

Save to Outbox: Allows you to adjust whether sent messages are saved in your Outbox. Your options are:

- **Auto Save:** Automatically saves a copy of the outgoing message in the filed folder.
- **Prompt:** Prompts you to save a copy of the outgoing message.
- **Do not Save:** Does not save a copy of the outgoing message.

Auto Delete Inbox: Allows you to indicate whether read messages are automatically deleted from your Inbox.

Default Entry Mode: The Entry Method allows you to set the default character input method for new text messages. You can select between:

- **T9 Word:** A predictive text entry mode.
- **Alpha:** The standard keypad text entry mode.
- **Number:** The standard numeric entry mode.



Quick Text: Quick Text messages are used to enter common responses to questions. A Quick Text can be selected and automatically entered into the message. Quick Text can also be customized to whatever you want by editing the 9 pre-set messages already stored in your phone.

To edit a Quick Text message, highlight the desired Quick Text message and press . Edit the message and press the left soft key  for **Done** when finished.

Auto Scrolling: The scroll timer allows you to set the length of time a message takes to scroll across the screen. Options are **Off**, **3 Seconds**, **5 Seconds** or **10 Seconds**.

Message Reminder: This option allows you to configure how often you are notified of new text messages. Options are **Off**, **Once**, or **Every 2 min**. There are two options under **Every 2 min**. To use them, select **Every 2 min**, select **30 minutes** or **Always on** and press .

Alert on call: This option allows you to indicate whether your phone alerts you to a new message during a phone call.

Memory Info

Memory Info (**Menu**    ) displays how much memory is available for messages. Press the left soft key  for **Done** to return to the previous screen.





Web Alert

Your phone is capable of receiving web alerts from online providers. Consult with your service provider for more details.

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Web Alert**.
4. Follow the on-screen instructions.



Wireless Web

Your phone comes equipped with Wireless Web access (**Menu** ) through your browser. You can view specially designed versions of popular sites including sports, weather, news, and stock quotes, as well as download ringtones and wallpapers. When you launch the browser, the phone automatically connects to the Internet.

Note: Rates and pricing vary according to your service plan. Please contact your service provider for additional information.

Launching the Browser

To launch a web connection:

1. Press  for **Menu**.
2. Press  for **Wireless Web**.
3. Press  to **Launch Web**. You now are connected to your service provider's Web page.

Navigating the Wireless Web

Navigating through menus and Web sites during a web session is easy once you've learned a few basics. Here are some tips:

Soft Keys

When browsing the Web, the bottom line of your phone's display contains one or more soft keys. These keys are shortcut controls for navigating around the Web, and they correspond to the soft key buttons directly below the phone's display screen. Depending on which Web sites you visit, the labels on the soft keys may change to indicate their function.



Wireless Web



To use soft keys, simply press the desired soft key button. If an additional pop-up menu appears when you press the soft key button, select the menu items using your keypad (if they're numbered) or by highlighting the option and pressing .

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.

- Press the navigation keys up and down to scroll line by line or press the volume buttons on the side of the phone to scroll one page at a time.

Navigating Between Web Pages

Once you've learned how to use soft keys and scroll, you can start navigating Web sites. The left soft key is used primarily for selecting items.

- Select on-screen items by using the navigation keys to highlight the desired item, then press the desired soft key button (or press).

Links appear as underlined text and allow you to jump to different Web pages, select special functions, or even place phone calls.

- Select links by highlighting the link and then selecting the appropriate soft key.

Tip: The tenth item in a numbered list may be selected by pressing on your phone's keypad, even though the number 0 doesn't appear on the screen.

- To go back one page, press on your phone. (Note that is also used to delete text.)



My Files

With your new web-enabled phone, you have access to a variety of services such as downloadable Ringtones and Images. While each type of download involves a different file type, the basic method for accessing and downloading files is the same.

Ring Tones

To download an available ringer to your phone:

1. Press **OK** for **Menu**.
2. Press **5 JKL** for **My Files**.
3. Select **Ringtones**.
4. Select **Get New Ringtones**. The web will launch and take you to the Ringtones download menu.
5. Use your navigation keys to highlight and select a ring tone you wish to download. (For more information on navigating the Web, see "Navigating the Wireless Web" on page 61.)
6. Follow the web page instructions to complete your purchase.

Note: You can store a limited number of downloaded ringtones on your phone, depending on the file sizes.

Assigning Downloaded Ringers

Downloaded ringtones can be assigned directly from the My Files menu and are also available through the Settings menu. To assign a downloaded ringer through the Settings menu, see "Ringer Type" on page 93.

My Files



To assign a downloaded ring tone through the My Files menu:

1. Press for **Menu**.
2. Press for **My Files**.
3. Select **Ringtones**.
4. Highlight the desired ringer and press to play it. When you are finished, press to return to the Ringtones menu.
5. Press the right soft key for **Options** and select **Set As...**
6. Select **Voice Calls**.
7. Select **With Caller ID** or **No Caller ID**.
8. Press to exit.

Note: You can assign a ringer to more than one type of call.

Images

To download an available image to your phone:

1. Press for **Menu**.
2. Press for **My Files**.
3. Select **Images**.
4. Select **Get New Images**. The web will launch and take you to the Images download menu.
5. Use your navigation keys to highlight and select an image you wish to download.
6. Follow the web page instructions to complete your purchase.



Note: You can store a limited number of downloaded images on your phone, depending on the file sizes.

Assigning Downloaded Images

Downloaded images can be assigned directly from the My Files menu and are also available through the Settings menu. To assign a downloaded image through the Settings menu, see "Display" on page 99.

To assign a downloaded image through the My Files menu:

1. Press  for **Menu**.
2. Press  for **My Files**.
3. Select **Images**.
4. Highlight the desired image and press  to view it. When you are finished, press  to return to the Images menu.
5. Press the right soft key  for **Options** and select **Set As...** to assign images to Wallpaper, Contacts, and Incoming Calls.
6. Press  to exit.

Note: You can assign an image to more than one type of call.

My Files

Camera

Using the Camera (**Menu** ) in your phone, you can take photos of people or events while on the move. You can send photos to other people in a multimedia message or set one as a wallpaper.

Taking Pictures

Taking pictures with your phone's built-in Digital Camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate Camera mode and take pictures whether the phone is open or closed.

To take pictures with the phone open

1. Press  for **Menu**.
2. Press  for **Camera**.
3. Press  for **Camera**.
4. Press  for **Take Photo**.

Shortcut: To activate Camera mode, you can also press the Camera button  located on the right side of the phone.

5. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
 - To change the brightness of the screen, press the Up or Down navigation keys.
 - To zoom in or out, press the navigation keys left or right.

Note: If your camera is set to High resolution, you will not be able to zoom in or out.



6. Hold the camera steady. To take the picture, press  or the side camera button  until the shutter sounds.
 - The photo is automatically stored in your photo gallery. See "Image Album" on page 71 for more details.
 - If you wish to send your picture to someone via multimedia messaging, press the right soft key  for **Options** and press the  for **Send Msg**. Your picture is embedded in a new multimedia message. See "Sending Pictures via Multimedia Messaging" on page 69 for more details.
 - If you wish to discard the current picture, press the right soft key  for **Options** and select **Erase**. You can continue to take pictures.

To take pictures with the phone closed

1. Press the Volume and Side Camera buttons at the same time to turn off Key Guard.
2. Press the Side Camera button  to activate Camera mode.
3. Point the camera lens at your subject. You can check the picture framing through the external display screen.
4. Press the Side Camera button  to take the picture.
5. Open the handset to view your picture.



Camera Options

There are several settings associated with the full-colour digital camera. These settings allow you to customize how the camera operates when taking pictures. If the subject image is in reverse on the display, you can invert it using the volume keys on the left side of the phone to display the image correctly.



1. Start the camera. For more information, see "Taking Pictures" on page 66.
2. Press the right soft key  for **Options**.
3. Press the navigation keys to select the desired option.

- **Self-Timer:** Allows you to configure a timer for **Off**, **5 Seconds** or **10 Seconds**. To start the timer, press .
- **Fun Tools:** Allows you to select one of the following options:
 - **Fun Frames:** Allows you to add a frame around the image before the picture is taken. Press the navigation keys left or right to select the desired frame. Press  to select and return to camera mode.
 - **Color Tones:** Allows you to select the colour of the image: **None**, **Monochrome**, **Negative**, **Sepia**, **Green** or **Aqua**. Press the navigation keys left or right to select. When you find the desired tone, press .
- **Controls:** Allows you to set the brightness, white balance and night shot.
 - **Brightness:** Allows you to set the brightness level. Press the navigation key up or down to increase or decrease the desired brightness.
 - **White Balance:** Allows you to set up the white balance of the camera automatically or manually using the different preset modes. The modes available are: **Auto** (adjusts the lighting automatically), **Sunny** (decreases the light sensitivity for taking pictures in full or mostly sunny conditions), **Cloudy** (increases light sensitivity for taking pictures under cloudy conditions), **Incandescent** (adjusts the white balance to match inside lighting conditions displayed using common household light bulbs), **Fluorescent** (adjusts the white balance to match inside

lighting conditions displayed using common fluorescent lighting) and **Manual** (use the navigation keys to select the amount of white balance).

- **Night Shot:** Allows you to take pictures in low light.
- **Settings:** Allows you to configure the following settings (when you change these settings, they are saved for all subsequent shots):
 - **Resolution:** Allows you to set the size of the picture to **High: 480x640**, **Med: 240x320** or **Low: 176x220**.
 - **Quality:** Allows you to select the detail quality of the picture: **Fine**, **Normal** or **Economy**.
 - **Status Bar:** Allows you to turn the Status Bar **Off** or **On**.
- **Launch:** Allows you to **Review Pictures**. See "Image Album" on page 71.

Sending Pictures via Multimedia Messaging

1. Take your picture, as described in "To take pictures with the phone open" on page 66. From the Taken Picture screen, press right soft key  for **Options** and select **Send Msg** to send your picture as part of a multimedia message.
2. Compose your multimedia message. Your picture is already attached to the message. For more information, see "To send messages" beginning at step 6 on page 48.

Note: You will need to add a destination phone number or e-mail address to your message prior to sending it.

Camera

Sound Album

From your Sound Album, you can listen all the sound recordings that you have stored on your phone. Stored sounds can be sent to others as multimedia messages.

1. Press  for **Menu**.
2. Press  for **Camera**.
3. Press  for **My Albums**.
4. Press  for **Sound Album**
5. Select an album:
 -  **Sound Gallery**: Plays sound recordings you have stored.
 -  **MMS**: Plays sound saved from the multimedia messages.
 -  **Transferred Sound**: Plays sound recordings you have transferred from supported devices.
6. Using the navigation keys, scroll through your stored sound recordings and highlight the desired recording.
 - To listen to the highlighted recording, press the left soft key  for **Play** (Sound Gallery only).
 - To modify your recording options, press the right soft key  for **Options**. The following options are available:
 - **Record New**: After recording a voice message, this option allows you to record a new voice message.
 - **Send**: Sends the recording to someone via multimedia messaging or Bluetooth.
 - **Erase**: Deletes the recording from memory.
 - **Erase All**: Deletes all the recordings from memory.

- **Rename:** Allows you to change the name of the recording.
- **Info:** Displays the caption, time and date, and location of the recording.

Image Album

 
From your Image Album, you can view all the pictures that you have stored on your phone. Stored pictures can be sent to others as multimedia messages.

1. Press  for **Menu**.
2. Press  for **Camera**.
3. Press  for **My Albums**.
4. Press  for **Image Album**.
5. Select an album:
 -  **Photo Gallery:** Displays pictures you have taken.
 -  **MMS:** Displays pictures saved from the multimedia messages.
 -  **Transferred Images:** Displays pictures you have transferred from supported devices.
6. Using the navigation keys, scroll through your stored photos and highlight the desired photograph.
 - To view the highlighted picture, press the left soft key  for **Expand** (Photo Gallery only).
 - To modify your picture options, press the right soft key  for **Options**. The following options are available:
 - **Send:** Sends the picture to someone via multimedia messaging. For more information, see "Sending Pictures via Multimedia Messaging" on page 69.





- **Print:** Allows you to print an image via Pictbridge.
- **Assign:** Allows you to use the picture for a wallpaper, picture ID, and incoming caller. In the address book, pictures can be used to identify incoming callers by displaying the image on screen.
- **Erase:** Deletes the picture from memory.
- **Erase All:** Deletes all the pictures from memory.
- **Rename:** Allows you to change the name of the picture.
- **Info:** Displays the caption, time and date, model, resolution, size, location and upload status of the image.

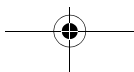

Bluetooth

Bluetooth® is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth®. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

Adding New Devices

To add a new device:

1. Press  for **Menu**.
2. Press  for **Bluetooth**.
3. Press  for **Trusted Devices**.
4. Press the left soft key  for **Add New**.
5. Select one of the following options:
 - **Search:** The phone will search for available devices. After the phone finds a new device, press the left soft key  for **Add to List**. Enter a PIN for your phone and press .
 - **Wait for request:** The phone waits to be contacted by a device. If prompted, enter the PIN and press .
6. Enter a name for the device or keep the default name.
7. Press the left soft key  for **Done**.



To access Bluetooth option settings:

1. Press  for **Menu**.
2. Press  for **Bluetooth**.

3. Select an option to change:

- **2 ABC** for **Enable**: Select **On** or **Off** to enable or disable Bluetooth support.
- **3 DEF** for **Visibility**: Select **Visible for 1min** to let other devices search for your phone; otherwise, select **Hidden**.
- **4 GHI** for **Device Name**: Type in the name of your phone as it will appear to other Bluetooth devices. See "Entering Text" on page 24.
- **5 JKL** for **Device Info**: Displays information about your phone's Bluetooth configuration.
- **6 MNO** for **Select Device Type**: Displays default device for incoming and outgoing calls. Select **HandsFree** or **HeadSet**.
- **7 PQRS** for **Voice Commands**: Enable or disable voice commands.

Options

After a device is added to your list of Trusted Devices, press the right soft key **→** to select from the following options:

- **1 QW E** **Add New**: Adds another device to your Trusted Devices list.
- **2 ABC** **Edit Name**: Shows the name given to your phone for Bluetooth® purposes. You can edit the name if needed.
- **3 DEF** **Erase**: Allows you to delete the highlighted trusted device.
- **4 GHI** **Erase All**: Allows you to delete all the trusted devices.
- **5 JKL** **Auto-Accept**: Allows you to automatically accept data from the trusted device.

-  **Info:** Allows you to view information about the highlighted trusted device.
-  **Settings:** Allows you to configure your Bluetooth® settings. See "Bluetooth" on page 73 for more information.

Note: The software in this handset supports Bluetooth profiles: HSP, HFP, OPP. However, the software does not support the transfer of data files.



Bluetooth



Tools

 
Tools (**Menu** ) provides helpful software applications to help you perform common functions, such as:

- Setting an alarm so that the phone rings at a specific time, to remind you of an appointment, for example.
- Viewing a calendar and organizing your schedule.
- Using the phone as a calculator for basic mathematical equations or currency exchange operations.
- Viewing times in different parts of the world.

Alarm Clock

Your phone comes with a built-in alarm clock with multiple alarm times. To use the alarm clock:

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Alarm**.
4. Press  for **Alarm #1**,  for **Alarm #2**, or  for **Alarm #3** to select an alarm.
5. Press the navigation keys left or right and select **On**.
6. Press the navigation keys down once and then use the keypad to enter the alarm time.
7. Press the right soft key  to select **AM** or **PM**.
8. Press the navigation keys down once and press  to select an alarm tone from **Ring Tones**, **Melodies**, or **My Content**. See "Ringer Type" on page 93.

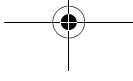



9. Press the navigation keys down once and then press it right or left to select the Repeat interval:
 - **Daily**
 - **Once**
 - **Mon to Fri**
 - **Sat & Sun**
10. Press the navigation key down once and then press it right or left to select the Snooze Interval: **Off**, **5 minutes**, **10 minutes**, **15 minutes**, or **20 minutes**.
11. Press the left soft key  for **Done**.

Calculator

Your phone comes with a built-in calculator.

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Calculator**.
4. Enter a number with the keypad. (Press  to insert a decimal point and/or  to make the number negative or positive. To clear the input box, press the right soft key .)
5. Use your navigation keys to select a mathematical function:
 - **Left to subtract**
 - **Up to multiply**
 - **Right to add**
 - **Down to divide**
6. Enter the next number using the keypad. Repeat steps 5 to 7 as necessary.
7. Press  to view the results.



Calendar

Your Calendar helps organize your time and reminds you of important events. To add an event to your schedule:

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Calendar**.
4. Select a Calendar view:
 -  **Today:** Displays today's events.
 -  **Scheduler:** Displays a calendar from which you can select a day.
 -  **Task List:** Displays a to-do list.
 -  **Countdown:** Displays a countdown to a specific time.

Using Today Entries

You can use the Today menu (**Menu**   ) to display all the **Schedule**, **Task**, and **Count** entries for the current day:

- Press the navigation keys left and right to switch between Schedule, Task, and Count.
- Press the **Options** soft key  and select **Jump to date** to view a different day.

Using Scheduler Entries

The Scheduler menu contains a calendar to keep track of your schedule and lets you set alarms to act as reminders.

To create a Scheduler entry

1. Press  for **Menu**.
2. Press  for **Tools**.

3. Press  for **Calendar**.
4. Press  for **Scheduler**.
5. Press the navigation keys to select a day and press the left soft key  for **View**, then press the left soft key  for **Add New**. Enter a description of the event. See "Entering Text" on page 24.
6. Press the left soft key  for **Next**.
7. Press the navigation keys left or right to select the type of event: **Personal, Business, Appointment, Birthday, or Vacation**.
8. Press the navigation keys down once and press the navigation keys left or right to select the amount of warning given before the event: **10min before, 30min before, 1Hr before, No Alarm, or On Time**.
9. Press the navigation keys down once and press the navigation keys left or right to select how often the event occurs: **Once, Daily, Weekly, Monthly, or Yearly**.
10. Press the navigation keys down once and press  to select an alarm tone from **Ring Tones, Melodies, or My Content**. See "Ringer Type" on page 93.
11. Press the navigation keys down once and then use the keypad to enter the Start time.
12. Press the right soft key  to select **AM** or **PM**.
13. Press the navigation keys down once and then use the keypad to enter the End time.
14. Press the navigation keys down once and press  to select a contact.
15. Press the left soft key  to select **Done**.
16. Press the left soft key  again to select **Done**.

To view Scheduler options

You can select the following options in the Scheduler (**Menu**   ) by pressing the right soft key  for **Options**:

- **Add New:** Allows you to create a new Scheduler event.
- **View Type:** Allows you to switch the Scheduler view to **Monthly** or **Weekly**.
- **Jump to date:** Allows you to view the events for a specific day. Press the navigation keys left or right to select an option. Then press the navigation keys down to enter the date information:
 - **Jump By Date:** Allows you to enter a date to jump to. Press the left soft key  for **OK**.
 - Press the right soft key  to go to today's date.
 - **Jump By Term:** Allows you to enter a range. Select either **Before** or **After**, press Down, and use the keypad to enter the number of days. Press the left soft key  for **OK**.
- **Erase All:** Allows you to erase all events. Use the navigation keys up or down to select either **Yes** or **No**.

Using the Task List

You can use the Task function in the same way you would use a to-do list. When the task has been completed, you can check it off as done. To enter tasks into your Planner, follow these steps:

To enter a Task

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Calendar**.
4. Press  for **Task List**.



5. If this is the first entry, enter a description of the task. Otherwise, press the left soft key  for **Add New** and enter the text. See "Entering Text" on page 24.
6. Press the left soft key  for **Next**.
7. Use the navigation keys left and right to select a priority for the task: **Low** or **High**.
8. Press the navigation keys down and use the keypad to enter the **Due Time**. Press the right soft key  to select **AM** or **PM**.
9. Press the navigation keys down once.
10. Use the keypad to enter the **Due Date**.
11. Press the left soft key  for **Done**.

To view or edit existing Tasks

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Calendar**.
4. Press  for **Task List**.
5. Highlight a task and press . The task is displayed.
 - To edit the task, press the left soft key  for **Edit**.
 - To delete task, press the right soft key  for **Options** and select **Erase**.

Note: To delete all the tasks, from the **Task List** menu, press the right soft key for **Options** and select **Erase All**.

To change the state of Tasks

1. Press  for **Menu**.



2. Press  for **Tools**.
3. Press  for **Calendar**.
4. Press  for **Task List**.
5. Highlight a task. Press the right soft key  for **Options** and select **Set State**.
6. Select **To Do**, **In Process**, or **Completed** and press .

Using Countdown

You can use the Countdown function to remind you how much time is left until a specific event.

To enter a Countdown

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Calendar**.
4. Press  for **Countdown**.
5. If this is the first entry, enter a description of the countdown. Otherwise, press the left soft key  for **Add New** and enter the text. See "Entering Text" on page 24.
6. Press the left soft key  for **Next**.
7. Use the keypad to enter the countdown Time.
8. Press the right soft key  to select **AM** or **PM**.
9. Press the navigation keys down once.
10. Use the keypad to enter the countdown Date.
11. Press the left soft key  for **Done**.

To view or edit existing Countdowns

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Calendar**.
4. Press  for **Countdown**.
5. Highlight a countdown and press . The countdown details are displayed.
 - To edit the countdown, press the left soft key  for **Edit**.
 - To delete countdown, press the right soft key  for **Options** and select **Erase**.

Note: To delete all the countdowns, from the **Countdown** menu, press the right soft key for **Options** and select **Erase All**.

Memo Pad

Your phone comes with a memo pad you can use to compose and store reminders and notes to help keep yourself organized.

Creating Memos

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Memo Pad**.
4. Press the left soft key  for **Add New**. See "Entering Text" on page 24.
5. Enter up to 512 characters in the memo using the keypad and press the left soft key  for **Done**.



Viewing Notes

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Memo Pad**.
4. Use the navigation keys to scroll to the desired note and press  to view the note details.

Deleting Notes

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Memo Pad**.
4. Highlight the note you wish to delete using the navigation keys.
5. Press the right soft key  for **Options**.
6. Select an option:
 - **Erase:** Deletes the highlighted memo.
 - **Erase All:** Deletes all memos.
7. Highlight **Yes** with the navigation keys and press  to confirm.

Voice Memo

You can use your phone to record brief memos to remind you of important events, phone numbers, or other items.

Recording Voice Memos

To record a voice memo:

1. Press  for **Menu**.

2. Press **TUV** for **Tools**.
3. Press **JKL** for **Voice Memo**. The Sound Gallery opens.
4. If the Sound Gallery is empty, press the left soft key **Record New**. If there are voice memos saved in the Sound Gallery, press the right soft key **Options** and select **Record New**.
5. Wait for the beep and then start speaking. (As it is recording, the phone displays a countdown timer that shows how many seconds are left for recording.)
Press the left soft key **Pause** the memo. (When a memo is paused, press the left soft key **Resume** again to **Resume** recording.)
6. Press the right soft key **Finish** the recording prior to the countdown completion.
7. The memo is saved to your phone. Press the left soft key **Play** your message for review.

Tip: You can also assign Voice Memos to either the left or right navigation key. For more information, see "Configure Nav. Key Shortcuts" on page 103.

Recording Phone Call Conversations

To record a conversation during a phone call:

1. During a call, press the right soft key **Options**.
2. Press **7PQRS** for **Voice Memo**. (A one minute counter is displayed on the screen to indicating the amount of time a single voice memo can be recorded.)



Press the left soft key  to **Pause**. (When a memo is paused, press the left soft key  again to **Resume** recording.)

3. Press the right soft key  for **Done** to stop and save the phone call conversation.

Voice Memo Options

After recording a voice memo, you can select the following options by pressing the right soft key  for **Options** in the Sound Gallery menu.

- **Record New:** Record a new voice memo. See "Recording Voice Memos" on page 84.
- **Send:** Send the selected voice memo via a multimedia message or Bluetooth. See "Messaging" on page 45.
- **Erase:** Erase a voice memo. Select the individual memos to erase by highlighting them. Press the right soft key  for **Options** and select **Erase**. Select **Yes** to confirm the deletion.
- **Erase All:** Erase all the voice memos.
- **Rename:** Change the description of the voice memo.
- **Info:** Displays information about the selected voice memo, such as caption, length, size, date, and time.

Voice Service

Activating Voice Recognition

Voice recognition allows you to say commands to perform common functions supported by your phone. There is no voice training required to use the voice recognition feature. You simply say the pre-designated command displayed on your screen in a normal tone of voice to perform the desired function.

To activate voice recognition:



1. Press and hold  or . (The phone prompts you to say a voice command.)
2. Wait for the beep and then say one of the following commands:
 - **Call**
 - **Send Message**
 - **Lookup**
 - **Go To**
 - **Check**

When it recognizes one of these commands, the phone launches the associated application. If the phone does not hear a command within approximately eight seconds, it de-activates voice recognition without taking any action.

Call

Call allows you to dial any valid 7, 10 or 11 digit North American phone number by speaking the number naturally, without pausing between the digits.

Tips for using Voice Dial:

- Call works best in quieter environments.
- When saying a number, speak at a normal speed and say each digit clearly. There is no need to pause between digits.
- The phone recognizes the digits one, two, three, four, five, six, seven, eight, nine, zero, and oh. The phone does not recognize numbers such as “one eight hundred” for “1-800”. Instead, say “one-eight-zero-zero”.
- The phone recognizes only valid 7, 10 or 11 digit North American phone numbers.
- If your phone does not usually recognize you correctly when you are using voice Call, try adapting Call to your voice, which can significantly improve accuracy for some speakers. (See “Configuring Digit Dialing” on page 91 for details.)

To place a call using Voice Call:

1. Activate voice recognition by pressing and holding  or . (The phone prompts you for a command.)
2. Say **Call**. (The phone prompts you to say the number.)
3. Say either a name stored in your Contacts or a valid 7, 10 or 11 digit North American phone number naturally and clearly.
 - If the phone asks you, “Did You Say,” followed by the correct number, say **Yes**. (You can also select the correct number from those displayed on the screen by pressing  on the correct number. The phone will then dial the number.)
 - If the phone asks you, “Did You Say,” followed by an incorrect number, say **No**. (If there are other alternatives, the phone will prompt you with the next one. You can also press the navigation keys up or down to select the correct number from the Choice List, and then press  to dial.)
 - If you said a name listed in your Contacts that has more than one number associated with it, the phone displays the different locations (**Home, Office, Mobile, Pager, Fax, Others**) and asks you which one to dial. Say one of the location names and the phone will dial the number for the location you specified.

Note: In some cases, the phone might ask you to repeat a name or number. Make sure that the number is a valid 7, 10 or 11 digit North American phone number, and then say the number again. If the number isn't valid, or if the phone still doesn't understand the number on the second try, it will not place a call.

Enabling/Disabling Choice Lists

You can customize whether the Call feature displays the list of top voice recognition choices or automatically dials the first number, without displaying a choice list.

To enable or disable choice lists for Voice Dial:

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Voice Service**.
4. Press the right soft key  for **Settings**.
5. Highlight **Confirmation** and press .
6. Press the navigation keys up or down to select **Automatic**, **Always Confirm** or **Never Confirm** and press left soft key  for **OK**.

Lookup

Lookup lets you retrieve contact information for any person in your Contacts by saying the full name of the person.

To retrieve information using Lookup:

1. Activate voice recognition by pressing and holding  or . (The phone will prompt you for a command.)
2. Say **Lookup**. (The phone will prompt you to say the name.)
3. Say the person's full name, exactly as it is entered in your Contacts. The phone will play the name it recognized through the earpiece, and then open the contact information for that name.

If the phone says, "Did You Say," followed by an incorrect name, say **No**. The phone then prompts you with the next name, if there is one. If there are no more names, the phone will say "Sorry, No Match Found."



Send Message

The Send Message option allows you to quickly send a text message to a person in your Contacts by saying the full name of the person.

1. Activate voice recognition by pressing and holding  or . (The phone will prompt you for a command.)
2. Say the person's full name, exactly as it is entered in your Contacts. (The phone will play the name it recognized through the earpiece, and then open the contact information for that name.)

If the phone says, "Did You Say," followed by an incorrect name, say **No**. The phone then prompts you with the next name, if there is one. If there are no more names, the phone will say "Sorry, no match found."

Go To

The Go To option allows you to quickly launch a menu item.

1. Activate voice recognition by pressing and holding  or . (The phone will prompt you for a command.)
2. Wait for the beep and say **Go To** followed by one of the following: **History, Contacts, Messaging, Wireless Web, My Files, Camera, Bluetooth, Tools, or Settings**.

Check

The Check option gives you an update on the status of your phone.

1. Activate voice recognition by pressing and holding  or . (The phone will prompt you for a command.)
2. Wait for the beep and say **Check** followed by one of the following: **Status, Time, Signal Strength, Network, Battery, or My Phone Number**.

Configuring Digit Dialing

You can configure your phone to adapt to your voice when using voice-based dialing.

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Voice Service**.
4. Press the right soft key  for **Settings**.
5. Press  for **Adaptation**.
6. Press  for **Adapt Voice**.
7. Press the left soft key  for **Start**.
8. Follow the instructions to configure your phone for your voice.
You will be prompted to record the text displayed on the screen.

Hint: To reset adaptation, press  for **Reset Voice** from the Adaptation menu.

Changing Voice Dial Prompts

By default, your phone provides audio prompts such as “Please say a command”. You can turn these prompts on or off.

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Voice Service**.
4. Press the right soft key  for **Settings**.
5. Press  for **Modes**.
6. Press the navigation keys up or down to select **Expert Mode**, **Prompt Mode** or **Readout Mode**.

 
 




World Time

World Time displays what time it is in twenty-four different time zones around the world together with one or more major cities, states, regions, or countries in a time zone.

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **World Time**.
4. Press the navigation keys up/left, or down/right to display the different time zones.
5. Press the left soft key  for **Set DST** to set Daylight Savings Time (DST) and press the navigation keys up or down to select **On** or **Off**.

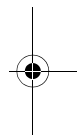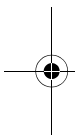

Settings

With the Settings (**Menu** ) icon, you can customize your phone's display, sound, and other settings to your suit your preference.

Sounds

Ringer Type

Different ringer types help you identify incoming calls and messages. With the Ringer Type options (**Menu**   ), you can assign ringer types to individual Contacts entries, types of calls, schedules, types of alarms, and types of messages. Ringer types available for assignment include:

- **Ring Tones:** Include a variety of standard musical melodies.
- **Melodies:** Includes a variety of short songs.
- **My Content:** Includes all the ringtones you have previously downloaded.
- **My MMS Content:** Includes all the MMS content you have previously downloaded.

Voice Calls

You can select a different ringer for each type of received call: those with Caller ID, unknown callers, and calls while roaming:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Voice Calls**.
6. Press  for **With Caller ID** or  for **No Caller ID**.

Settings



7. Press the navigation keys up or down to select **Ring Tones, Melodies, My Content** or **My MMS Content**.
8. Press the navigation keys up or down to select desired ringer.
9. Press  to save and exit.

Roam Ringer

You can set your phone to provide a normal or a distinctive ringer type when roaming. To select a ringer type for incoming roam calls:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Voice Calls**.
6. Press  for **Roam Ringer**.
7. Select **Normal** or **Distinctive**.
8. Press  to save and exit.

Messages

To select a ringer type for received messages:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Messages**.
6. Press  for **Voicemail** or  for **Text and Multimedia**.





7. Press the navigation keys up or down to select **Ring Tones, Melodies, or My Content**.
8. Press the navigation keys up or down to select desired ringer.
9. Press to save and exit.

Schedule

To select a ringer type for received messages:

1. Press for **Menu**.
2. Press for **Settings**.
3. Press for **Sounds**.
4. Press for **Ringer Type**.
5. Press for **Schedule**.
6. Press the navigation keys up or down to select **Ring Tones, Melodies, or My Content**.
7. Press the navigation keys up or down to select desired ringer.
8. Press to save and exit.

Meeting / Silent Mode

You can disable the ringer during meetings or in movie theaters:

1. Press for **Menu**.
2. Press for **Settings**.
3. Press for **Sounds**.
4. Press for **Ringer Type**.
5. Press for **Meeting / Silent Mode**.
6. Press the navigation keys up or down to select **On** or **Off**.
7. Press to save and exit.



Key Tone

This menu allows you to select the tone that the phone sounds when you press a key.

Tone Type

Your phone offers a number of different types of key tones (the sounds you hear when you press a key) to suit your preferences. To change the key tone:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Key Tone**.
5. Press  for **Tone Type**.
6. Press the navigation keys up or down to select **Xylophone**, **DTMF**, or **Voice**.
7. Press  to save and exit.

Tone Length

Your phone offers a number of options for the audible tones that accompany a key press. Voicemail or other automated systems may require long or short time lengths to activate different features. To select a tone length:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Key Tone**.
5. Press  for **Tone Length**.
6. Select **Short** or **Long**.

7. Press  to save and exit.

Key Tone Level

Your phone offers a number of different levels of key tones:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Key Tone**.
5. Press  for **Key Tone Level**.
6. Press the navigation keys left or right to select a level.
7. Press  to save and exit.

Volume

You can adjust the volume of your phone using either the Menu or the volume keys on the side of your phone. To adjust the ringer volume from the menu:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Volume**.
5. Press  for **Ringer**,  for **Earpiece**,  for **Headset**,  **Speakerphone** or  for **Advanced**.
6. Press the navigation keys left or right to the desired volume level and press  to **Select** and exit.

Settings

Tip: You can adjust the ringer volume in Idle mode (or the earpiece volume during calls) using the volume key on the side of your phone.

Alerts

Your phone can alert you with an audible tone when you change service areas, once a minute during a voice call, or when a call has been connected.

The different actions available are:

- **Minute Beep:** An alert tone is sounded every minute that you are connected.
- **Out of Service:** An alert tone is sounded when you come in or out of your coverage area.
- **Connect:** An alert tone sounds when a call connects.
- **Signal Fade/Call Drop:** An alert tone is sounded when the signal fades and the connection is lost.
- **Power On:** An alert tone is sounded when your phone is powered on.
- **Power Off:** An alert tone is sounded when your phone is powered off.

To enable or disable alert sounds:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Alerts**.
5. Select an option:
 -  for **Minute Beep**

-  for **Out of Service**
-  for **Connect**
-  for **Signal Fade/Call Drop**
-  for **Power On**
-  for **Power Off**

6. Select **On** or **Off** using the navigation keys.
7. Press  to save and exit.

Display

Changing the Greeting

The Greeting (the text greeting shown on the display screen) can be up to 14 characters in length and is displayed on your phone's screen in Idle mode. Your phone lets you change banner contents and location. For example, you could change the default text to say "Bob's Phone".

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Main Screen**.
5. Press  for **Greeting**.
6. Configure the banner:
 - Press  to select **Koodo Mobile**.
 - Press  to select **Custom**. You can enter up to 14 characters of text. See "Entering Text" on page 24.



Settings

Changing the Wallpaper

Your phone offers options for what you see on the display screens when in Idle mode.

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Main Screen**.
5. Press  for **Wallpaper**.
6. Press the navigation keys up or down to select one of the following:
 - **Preset Images:** Contains images preloaded on your phone.
 - **My Content:** Contains downloaded images from your service provider.
 - **My Pictures:** Contains pictures taken with your phone's camera.
7. Press the navigation keys left or right to view the image.
8. Press  to select the image.

Changing the Incoming Call Settings

The Incoming Call options let you specify the image to be displayed for two call types: callers With Caller ID and those with No Caller ID. The respective images are displayed depending on the type of call received.

To configure incoming call settings:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.

4. Press  for **Main Screen**.
5. Press  for **Incoming Call**.
6. Press  for **With Caller ID**, or press  for **No Caller ID**.
7. Select one of the following and press :
 - **Preset Animation:** Displays the preloaded, default image for incoming calls.
 - **My Content:** Contains downloaded images from your service provider. You can select one of these images.
 - **My Pictures:** Contains pictures taken with your phone's camera. You can select one of these photos.
8. Use the navigation keys to select the image or photo you want to assign to the type of call you selected in step 5. Press the left soft key  to **Assign** the selected image or photo.

Changing the Backlight Settings

The Backlight setting lets you select how long the display screen is illuminated after the handset is opened or any key press is made.

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Backlight**.
5. Select an option to change:
 -  **On:** Use the navigation keys to select **7 Seconds**, **15 Seconds**, **30 Seconds**, **Always On**, or **Always Off**.
 -  **Dim:** Use the navigation keys to select **15 Seconds**, **30 Seconds**, **1 Minute**, or **Always On**.
6. Press  to save and exit.



Settings

Note: Long backlight settings reduce the battery's talk and idle times.

Changing the Keypad Light Settings

The Keypad Light setting lets you select how long the keypad is illuminated after the handset is opened or any key press is made.

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Keypad Light**.
5. Use the navigation keys to select the length for the keypad light: **Always On, 30 Seconds, 15 Seconds, 8 Seconds, or Always Off**.
6. Press  to save and exit.

Changing the Brightness

The Brightness setting adjusts the contrast of your the external LCD display. You can adjust the contrast if you have difficulty viewing the screen, particularly in sunlight.

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Brightness**.
5. Use the navigation keys to select the level of contrast from **1** to **5**.
6. Press  to save and exit.

Changing the Dialing Font

Your phone allows you to select the size and appearance of the font used when dialing numbers.

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Dialing Font**.
5. Select an option to change:
 -  **Color:** Use the navigation keys to select **Basic**, **Rainbow**, **Monochrome** or **Hyphenate**.
 -  **Size:** Use the navigation keys to select **Large** or **Normal**.
6. Press  to save and exit.

Others

Configure Nav. Key Shortcuts

When in Idle mode, you can use the left, right, and down navigation keys to launch an often-used function. The center and up navigation keys cannot be changed.

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Nav. Key Shortcuts**.
4. Press  for **Left Nav. Key**, press  for **Right Nav. Key**, or press  for **Down Nav. Key**.

Settings

5. Press the navigation keys up or down to select one of the following functions:

- **Inbox**
- **Send Text**
- **Missed Alerts**
- **Contacts**
- **Scheduler**
- **Messaging**
- **Ringer Type**
- **My Files**
- **Display**
- **Alarms**
- **Calculator**
- **Bluetooth**
- **Web**
- **Recent Calls**

6. Press **OK** to save and exit.

Call Setup

Call Answer

To set the actions required to answer an incoming call:

1. Press **OK** for **Menu**.
2. Press **WXYZ** for **Settings**.
3. Press **MNO** for **More**.
4. Press **4 GH** for **Call Setup**.
5. Press **DEF** for **Call Answer**.
6. Using the navigation keys, select **Flip Open**, **Talk Key**, or **Any Key**.
7. Press **OK** to save and exit.

Auto Answer

To answer calls when your phone is connected to an optional hands-free car kit or head set:

1. Press **OK** for **Menu**.

2. Press  for **Settings**.
3. Press  for **More**.
4. Press  for **Call Setup**.
5. Press  for **Auto Answer**.
6. Press the navigation keys up or down to select **Yes** or **No**.
7. Press  to save and exit.

Auto Prepend

When enabled, Auto Prepend prefixes any number you dial with the prefix (Auto Prepend #) you configure. For example, if you edit the Auto Prepend number to read *76, and you turn Auto Prepend on, then all phone numbers you dial will begin with *76.

To configure and enable Auto Prepend:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More**.
4. Press  for **Call Setup**.
5. Press  for **Auto Prepend**.
6. Press  for **Set**.
7. Select **On** and press  to save.
8. Press  for **Edit**.
9. Enter the digits you want to prepend to dialed phone numbers, and then press the **Save** soft key.

Language

Your phone can display text in English or French. Language selection changes all menus and voice message settings.



Settings

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Language**.
5. Press the navigation keys up or down to select **English** or **Français**.
6. Press  to save and exit.

TTY Mode

Your phone is Text Telephone-compatible. Connect the TTY equipment to the headset jack, which is located on the left side of the phone. Before you can use your phone with a TTY device, you'll need to enable TTY.

Note: Enabling TTY may impair headset use and non-TTY accessory performance.

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More**.
4. Press  for **Accessibility**.
5. Press  for **TTY**.
6. Press the left soft key  for **OK**.
7. Press the navigation keys up or down to select **TTY Full**, **TTY + Hear**, **TTY + Talk** or **TTY Off**.
8. Press  to save and exit.

Key Guard

You can configure your phone's Key Guard options to prevent accidental pressing of the external buttons.

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More**.
4. Press  for **Key Guard**.
5. Press the navigation keys up or down to select **Flip-closed, After 5 Seconds** or **Off**.
6. Press  to save and exit.

System

Phone Info

The Phone Info screen displays information about your handset's current hardware and software. The Icon Glossary option can help you identify a display icon whose function you have forgotten.

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Phone Info**.
4. Select an option: **Phone Number, Icon Glossary, Version, Advanced** or **Memory Info**.
5. When you are finished, press the right soft key  to **Cancel**.



Settings

Memory Info

The Memory Info screen tells you how much of your phone's memory is used and how much remains available.

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Phone Info**.
4. Press  for **Memory Info**.
5. Select an option: **Total Usage**, **Multimedia**, **My Albums**, or **Messaging**.
6. When you are finished, the left soft key  for **Done**.

System

Your System screen allows you to control your ability to roam (access other compatible service provider networks).

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More**.
4. Press  for **Roaming**.
5. Select an option:
 - **Set Mode:** Controls which networks you can access. Select **Automatic** or **Home Only** depending on which type of network you want to use to roam. Otherwise, select **Automatic** to have the phone search for an alternate system when your Home network is not available, or select **Home Only** to prevent your phone from roaming on other networks.
 - **Set NAM:** Select **NAM 1** or **NAM 2**.
 - **Call Guard:** Select **On** or **Off**.

6. Press  to save and exit.

Restrict and Lock

You can change the Restrict and Lock settings to prevent all incoming and outgoing calls, restrict calls to Contacts only or to allow only special numbers such as 911 or Customer Service. You can also lock your phone and/or camera.

To modify the restrict and lock settings of voice calls:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Restrict and Lock**.
5. Press  for **Voice**.
6. Enter your User Lock. The factory settings are the last four digits of your telephone number.
7. Select an option:
 - **Restrict:** Select **Outgoing Call** followed by **Allow all**, **Contacts Only**, or **Special# Only**.
 - **Lock:** Select **Lock** or **Unlock**.
8. Press  to save and exit.

To modify the lock settings of your camera:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Restrict and Lock**.
5. Press  for **Camera/Pictures**.



Settings

6. Enter your User Lock. The factory settings are the last four digits of your telephone number.
7. Select **Unlock** or **Lock**.
8. Press  to save and exit.

To modify the lock settings of your phone:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Restrict and Lock**.
5. Press  for **Lock my Phone**.
6. Enter your User Lock. The factory settings are the last four digits of your telephone number.
7. Select **Unlocked, On Power-Up**, or **Lock Now**.
8. Press  to save and exit.

Security

The Security screen allows you to erase contacts, set restrictions, and other security options.

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More**.
4. Press  for **Security**.
5. Enter the lock code. The factory settings are the last four digits of your telephone number. Select one of the following options:

-  **Change Lock Code:** Changes the lock code for your phone. Enter the new number and press the left soft key  for **Next**. You will be asked to confirm the new number. After you re-enter the lock code, press the left soft key  for **Done**.
-  **Special #:** Allows you to enter special phone numbers which can be called even if the phone is locked. Select one of the slots and press . Type in the new number and press  to save.
-  **Erase/Reset:** Select from list of options: **Erase Web Cookies, Erase Web History, Erase Web Cache, Erase Contacts, Erase Downloads, Erase Image Album, Default Settings** or **Reset Phone**.

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Notepad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information. All incoming calls will be sent directly to your voicemail box.

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More**.
4. Press  for **Airplane Mode**.
5. Press the left soft key  for **OK**.
6. Press the navigation keys up or down to select **On, Off** or **On Power Up**.
7. Press  to save and exit.

Settings



Safety

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

 
If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below. In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after

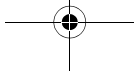

reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Try not to cover the phone's antenna.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a dealer store or call Customer Support for service.

Note: For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE. IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS. DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS. FOR CONNECTION TO A SUPPLY NOT IN CANADA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.



Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- Get to know your phone and its features, such as speed dial and re-dial.
- When available, use a hands-free device.
- Position your phone within easy reach.
- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.
- Dial sensibly and assess the traffic; if possible, place calls when stationary or before pulling into traffic.
- Do not engage in stressful or emotional conversations that may divert your attention from the road.
- Dial 911 to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call roadside assistance or a special non-emergency wireless number when necessary.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.



Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone, dial 911 by mistake or make calls that increase your phone bill.

Warning Regarding Display

The display on your handset is made of glass or acrylic and could break if your handset is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Samsung approved batteries and travel adapters. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. When used correctly, the battery can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:
 - Less than one month:
4° F to 140° F (-20° C to 60° C)
 - More than one month:
4° F to 113° F (-20° C to 45° C)

Safety 117

Safety

Disposal of Lithium Ion (Lilon) Batteries

For safe disposal options of your Lilon batteries, contact your nearest service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking Lilon battery.

Acknowledging Special Precautions and Industry Canada Notice

Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of hardware and can be broken. Use common-sense guidelines to avoid dropping, hitting, bending or sitting on it.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- Reorient/relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset. The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety. All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in

safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the SCH-U430 are:

1.07 W/kg Head SAR.

0.639 W/kg Body SAR.

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: SCH-U430

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Warranty

STANDARD LIMITED WARRANTY

What is Covered and For How Long? SAMSUNG Electronics Canada Inc. ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/Pouch/Holster	90 Days
Game Pad	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product; or (g) Product used or purchased outside Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if: (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (I) any of the seals on the battery are broken or show evidence of tampering; or (IA) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-800-Samsung. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits On SAMSUNG's Liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND SHALL BE PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE

122 Warranty

PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Warranty

Samsung Electronics Canada, Inc.

©2010 Samsung Electronics Canada Inc. Samsung is a registered trademark of Samsung Electronics Co. Ltd. and its related entities.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice.

#861826 v2 | 4032342

Index

A

Accessibility
TTY (Text Telephone) 106
Airplane Mode 111
Alarm Clock 76
Alerts 98
Auto Answer 104

B

Battery
Charging 15, 16
Disposal 118
Installing 15, 16
Removing 16

Bluetooth
Using 73

C

Calculator 77
Call History 43
Erasing 44
Options 43
Viewing 43
Call Settings, incoming 100
Call Waiting 27
Caller ID 26
Camera 66
Camera Options 67
Choice Lists 89
Contacts
Add a Contact 35
Add an Entry 35
Assign Pictures 37

Assign Ringers 37
Calling a Number From 20
Creating Groups 38
Find Entries 36

Countdown 82

D

Display 10
Screen Symbols 9
Settings 99

E

Emergency Numbers 19
Entering Text
Alpha Mode 25
Numbers and Symbols 26
Selecting a Character Input
Mode 24
T9 Text Input 25

G

Groups 38
Options 39
Sending Messages To 39

H

Handsfree use 5, 28
Headset Jack 4

I

Icon Glossary 10
Inbox 52
In-Call Options 22
Incoming Call Settings 100
Interior Screen 10

K

Keypad
Sounds 96

L

Language 105
Locking the Phone
Change Lock Code 111

M

Making Calls 18
Meeting / Silent Mode 95
Memo Pad 83
Menus
Navigation 29
Messaging 45
Adding Files to Messages 48
Erasing Messages 56
Forwarding Messages 53
Multiple Page Messages 49
Sending Options 50
Settings 57

Missed Call Notification 22
Multimedia Messages 47
My Name Card 41

N

Navigating Through Menus 29

O

Outbox 53

P

PCS Services
Call Waiting 27
Caller ID 26
Phone
Turning On and Off 17

Phone Number
Displaying 18
Saving 24
With Pauses 19

R

Recording Conversations 85
Redial 18
Ringer Type 93

S

Screen 10
Security Settings 110
Sent Messages 53
Settings 93
Silent Mode 95
Speakerphone 5, 28
Speed Dialing 20
Speed Dials
Creating 40
Editing 41

T

T9 Text Input 25
Text Messages 47
Text Telephone (TTY) 106
Three-Way Calls 23
Tools 76
TTY 106

V

Voice Dial
Changing Prompts 91
Configuring Digit Dialing 91
Voice Memo 84
Options 86
Recording Conversations 85
Voice Recognition



Activating 86
Voice Service 86
Voicemail
 Clearing 47
 Notification 45
 Retrieving 46
 Setting Up 45
Volume 19, 97

W

Wallpaper
 Changing 100
Web Alert 60
Wireless Web
 Launching the Browser 61
 Navigating 61
World Time 92

