

C-5300 is a CDMA mode mobile phone (hereafter referred to as “phone” or “phoneset”), with 65536 color CSTN display, 32 polyphonic ringtones. Mp3/Video player, Camera, FM radio, and common PDA functions support.

Note: In this user manual, to “press” a key means to press shortly; to “long press” a key means to press and hold for a while (> 2 seconds).

- 2 Please read this manual before using your phone.
- 2 For a newly bought phone, charge it for 4 hours before the first time of use, and charge the second time only after the power has been used up. Repeat this several times, and the battery will reach the best use effect.
- 2 All illustrations in this user manual are for illustration only and may not accurately depict the actual phone.
- 2 We operate a policy of continuous development and reserve the right to make changes and improvements to any of the products described in this manual without prior notice.

Table of Contents

Welcome	1
1 Safety information.....	3
2 General information	6
3 Basic Operations.....	10
4 Phone Book	13
5 Messages.....	14
6 Call History	16
7 Settings.....	16
8 Multimedia.....	18
9 File Manager	19
10 Profiles	19
11 Organizer.....	20
12 UTK Services.....	20
13 Maintenance	20
14 Troubleshooting.....	20

1.1 Notice to the Use of Phone

- | Before you use the phone, please carefully read this section to grasp the correct method of use and ensure the safety of the holder, others and properties.
- | All the screens in this manual are for reference only, and some contents actually displayed may depend on the presetting of the service provider or the network operator, or the UIM card. If any functions referred to in this manual are different from those of your phone, please follow your phone.
- | The specifications and appearance of this product are subject to change due to improvement of functions without notice.
- | For CDMA service-related problems, consult your CDMA service provider.
- | Please back up your important data timely and keep them properly. The company is not liable for any failure to call or loss of data due to misoperation, poor signal or power cut, etc.
- | Do not use the phone in an environment of extremely high or low temperature, or an environment of high humidity, otherwise, may cause malfunctions of the phone, the charger and the battery.
- | The phone using environment recommendation: temp 5~35°C, humidity 35% ~ 85%, charging temp: 0~45°C.
- | Do not drop or strongly impact the phone, otherwise, malfunctions may be caused and the phone can't be used.
- | Do not use the phone near any electronic device vulnerable to interference. Otherwise, malfunctions of electronic device may be caused. Such electronic devices include medical electronic devices, such as hearing aids and pacemaker, fire alarms, auto doors and other automatic equipment. If you have to use the phone near such devices, please first consult the manufacturers and dealers of these devices to avoid interference.
- | Switch off the phone when you are on the plane or in the hospital where the use of mobile phones is prohibited to avoid interfering with electronic and medical equipment. If you have to use the phone in such places, please follow the regulations of the sites.
- | The phone has an internal antenna. When switched on, do not hold the antenna area on the top of the phone, otherwise, the quality of connection and the performance of the antenna may be influenced, and the max. talk time may be reduced.
- | To avoid degaussing, do not put financial cards, phone cards or other magnetic cards near the charger and the phone to avoid failure of use due to the cards.
- | Do not place the phone and the battery under direct sunlight or in a car under burning sun or other places of high temperature to avoid injury due to overheating, leakage, cracking, distortion, or even fire of the battery.
- | Do not put the phone in a place with excessive dust or vibration (which may cause failure) to avoid malfunctions of the phone.
- | Do not take apart the phone, the charger and the battery, or modify the internal structure without permission to avoid malfunctions and accidents.
- | Do not let children fiddle with the phone or the accessories to avoid injuring themselves or others, or damaging the phone or the accessories. The phone or the accessories

may contain small removable components which may easily cause suffocation of children.

- | If the phone is contaminated, please wipe it with a dry cloth. Do not use organic solvent such as gasoline to wipe the phone to avoid causing damages of the outer surface.
- | If smoke or peculiar smell is produced during use, please immediately switch off the phone and remove the battery. Please have the phone repaired as arranged by the store where you bought the phone. Do not continue to use to avoid causing injury.
- | Do not dispose the phone as urban waste. For details, please refer to the local regulations for the disposition of waste electronics.

1.2 Notice to the Use of Battery and Charger

- | The time for using the battery is an estimated time under 25°C and stable signal. If used in a place with weak signal, extremely high or low temperature, or outside the service area, the consumption of battery power will be faster, thus the standby time and max. talk time may be reduced.
- | Please use the accessories, such as battery and charger, specified by the company to avoid risks due to overheating, leakage, explosion, or even fire of the battery caused by non-compliance with the specifications.
- | The battery should be put in a cool, ventilative and sunlight-free place. If the battery is in the exhausting status for a long time, it can't be charged. Therefore, if you do not use the phone for long, please charge the battery periodically.
- | The battery is expendable goods. All the batteries have a certain life. If the performance of the battery can't be improved after repeated charging, the battery may be discarded as useless and must be replaced with a new one.
- | Please fully charge the battery before you use the newly bought phone.
- | Do not charge the battery in a place with direct sunlight, a temperature equaling to or below 0°C or equaling to or above 45°C, high humidity, excessive dust or vibration (which may cause failure), or a place near TV or radio (as it may produce noise interference to video or sound signal).
- | Please switch off the phone and wait over 2 seconds before removing the battery.
- | Do not dismantle the phone and the charger for modification without permission to avoid malfunctions or injury.
- | Do not strongly impact or throw the phone or the battery to avoid leakage or overheating of the battery, or malfunctions of the phone.
- | Do not short the two polarities of the battery to avoid leakage, overheating, fire or explosion of the battery.
- | If leakage of the battery enters the eyes accidentally, please immediately wash the eyes with fresh water and go to a doctor. If it is not treated quickly, it may cause serious injury, such as blindness.
- | If the battery is contaminated with liquid, it may cause burn or malfunctions due to overheating of the battery. The charger may also cause overheating, damages, electric shock and malfunctions. If the charger is accidentally sunk in water, or smoke or peculiar smell is produced during charging, please immediately switch off the phone and unplug the AC cable from the socket. Please have the phone repaired as arranged by the store where you bought the phone. Do not continue to use to avoid causing injury.

- | Do not put the charger and the AC cable in a place with flame or ovens to avoid causing injury due to overheating, leakage or fire of the battery.
- | Do not touch the charger, the power cable and the plug of AC power supply with wet hands to avoid electric shock or malfunctions.
- | Do not strongly pull the wire, or put heavy objects on the wire, otherwise electric shock or fire may be caused.
- | When the battery is fully charged, please unplug the charger from the socket.
- | Do not dispose the used battery together with daily waste. Please dispose the used battery in accordance with the regulations issued by the local authority.

2.1 Checking the phone and accessories

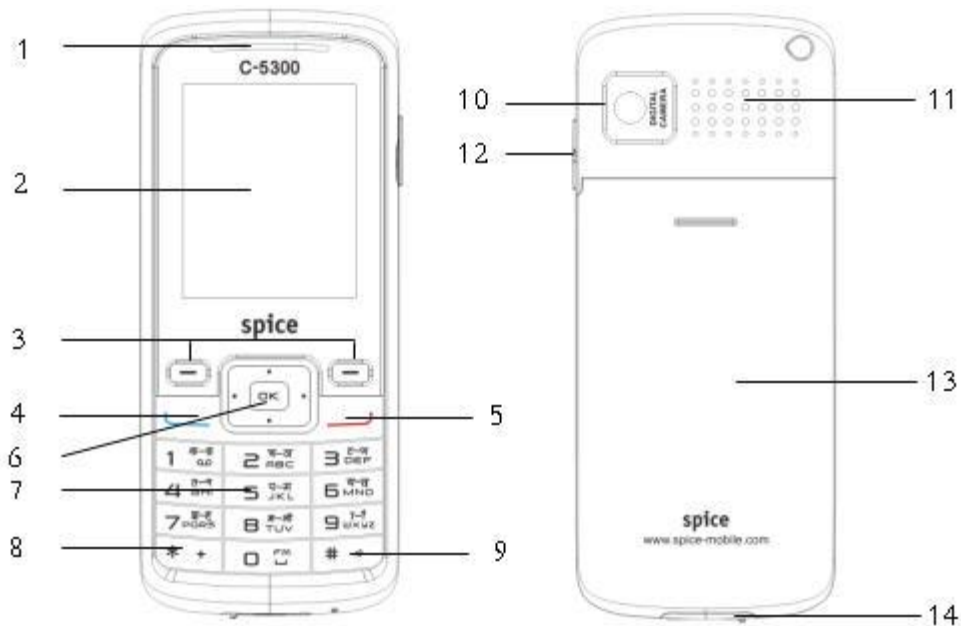
Open the packing box of the phone and check that you have the phone, charger and user manual. If anything is missed, or any mistake is found in the user manual, such as missing pages, please contact the local dealer.

2.2 Technical specifications

Network	CDMA2000: 800MHz
Battery	Lithium battery, 3.7V, 1000mAh
Dimensions	About 102 X 43.6 X 14.45 (mm)
Weight	About 68g
Standby time(maximum)*	Up to 180 hours
Talk time(maximum)*	Up to 210 minutes

*Standby and talk times are estimates and only possible under optimal network conditions. Actual times vary depending on UIM card, operating temperature, battery age and condition, network conditions, features selected, and many other factors, and may be remarkably shorter than those mentioned above.

2.3 Illustrations of the phone and function



1	Earpiece	
2	Display	
3	Left Soft-Key	Execute the function shown at the bottom left of the display.
	Right Soft-Key	Enter the Contacts in idle. Execute the function shown at the bottom right of the

		display.
4	Send Key	<ul style="list-style-type: none"> Make or answer a call. Enter call log in idle.
5	End Key	<ul style="list-style-type: none"> Long press to power the phone on when the phone is off. Long press to power the phone off when the phone is in idle. End or reject a call. Return to idle display.
6	Navigation Key (Up/Down/Left/Right)	<ul style="list-style-type: none"> Move the cursor. To perform the operation designated to the navigation key in idle.
	OK Key	<ul style="list-style-type: none"> Execute the function selected on the display screen.
7	Numeric Key	<ul style="list-style-type: none"> Enter phone numbers, characters.
8	* Key	<ul style="list-style-type: none"> When enter numbers, press once for “*”, twice for “+”, three times for “P”, and four times for “T”. When edit, enter the symbol list.
9	# Key	<ul style="list-style-type: none"> When edit, switch input methods. Lock/unlock the keypad by pressing Right Soft-Key then #. Long press to enter or exit the vibrator mode in idle.
10	Camera	
11	Speaker	
12	Earphone interface	
13	Battery cover	
14	USB/Charger interface	

2.4 Idle mode display

	Icon	Descriptions
1		Indicates signal strength level and more bars means better signal.
2		Indicates battery power.
3		Indicates during a call.
4		Indicates the phone is off-line.
5		Indicates the phone is in roaming status.
6		Indicates you have unread messages.
7		Indicates you have unread voice mails.
8		Indicates the message capacity is full.
9		Indicates the current profile is General/Silent/Meeting/Outdoor/My style 1/My style 2.
10		Indicates the flight mode is set on.
11		Indicates the alarm is set on.
12		Indicates the earphone is inserted.
13		Indicates the memory card is inserted.

2.5 About UIM card & battery & memory card

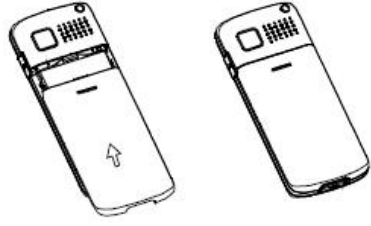
Keep all UIM cards out of the reach of children.

The UIM card and its contacts can be easily damaged by scratches or bending, so be careful while handling, inserting or removing the card.

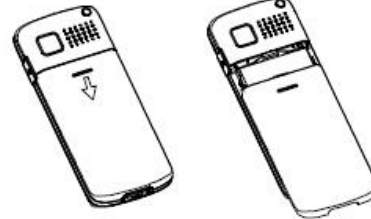

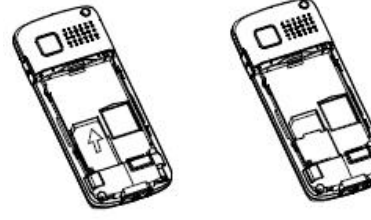
To prevent damage to the phone you should Power off the phone before installing or removing the battery or UIM card.

2.5.1 Installing UIM card & battery

<p>1. Place the UIM card into the slot with the metal contact facing down.</p>	
<p>2. Attach the battery to the phone.</p>	

<p>3. Push the battery cover upwards until it clicks into place.</p>	
--	--

2.5.2 Removing UIM card & battery

<p>1. Power off the phone.</p>	
<p>2. Push and remove the battery cover.</p>	
<p>3. Remove the battery.</p>	
<p>4. Slide the UIM card.</p>	

2.5.3 Installing memory card

1. Place the memory card into the slot with the metal contact facing down, then lock the card slot cover.
2. Install the battery and battery cover.

Tip: Some memory Cards have poor compatibility. Please buy and use tested and certified memory cards.

2.5.4 Removing memory card

1. Remove the battery cover and battery, Pull out the memory card slot cover with fingertip, then remove the memory card.
2. Lock the memory card slot cover, then install the battery and battery cover.

2.5.5 Charging the battery

Plug the connector of the charger into the jack at the bottom of the phone, and plug the charger into a standard AC wall outlet. During charging, the battery icon is flashing. When charging is completed, the battery icon stops flashing.


Charging.....



Fully Charged



Tips:

When  is shown in the screen, it indicates that there is not enough power, please charge the phone.

You must fully charge the battery before using the phone for the first time. It is recommended you charge the battery for four hours for the first time.

If the phone is turned on during charging, you can still make or answer calls, but this will consume battery power, thus extend the charging time of the phone.

In the follow-up using, it is recommended you charge the battery when it runs out to enhance the battery life.

3 Basic Operations

3.1 To switch on and off

To switch on: Long press **End Key** when it is off.

If phone lock is set on, you are required to enter the password. The phone password is preset to “1122” at the factory.

Warning: If UIM lock is set on, you are required to enter the PIN. If you enter wrong PIN three times in a row, you need the PUK to unlock it. PIN and PUK are both provided by the network operator.

To switch off: Long press **End Key** when it is in idle.

3.2 Idle mode operations

The so-called “Idle mode” refers to the standard mode where the phone has been normally switched on and logged in the network, but no calls are in process or no menu is used.

Press **Menu** to enter the main menu.

Press **Names** to enter the contacts.

Press **Send key** to enter the call history list.

Press **Right Soft-Key** then **#Key** to lock or unlock the keypad.

Long press **0** to enter FM radio.

Long press **1** to call the voice mailbox.

Press **2 - 99** and then **Send key** to dial the set speed dial numbers.

Long press **# Key** to activate the vibrator mode or return to the previous mode.

Tip: When you activate the **Smart Desktop Mode (Menu > Settings > Display Settings > Smart Desktop)**, there will be 5 applications showed in idle, you can press **Navigation key** to move the cursor and press **Select** to select function.

3.3 Inputting Text


You can input English, Hindi, digits, and symbols. The input methods include Abc, abc, ABC, Hn, En, en, and Numeric (digits).

Press **# key** to switch input methods.

Press *** key** to enter the symbol list.

3.4 To make calls

3.4.1 Making a call from idle

If the icon  is displayed on the screen, you can make or answer calls.

Tip: The signal strength may influence the quality of connection.

Press	To
1 Number Keys	input phone numbers
2 Send Key	make calls
3 End Key	end calls

3.4.2 To dial international numbers

You need to insert the local international connection code "+". In the standby mode, Press *** Key** twice to input "+".

3.4.3 Inserting a pause sign when dialing

There are two methods to dial an extension number with a pause symbol: to dial the extension number automatically (the pause time is controlled automatically); to switch manually (the pause time is controlled manually). The phone supports both of the two applications of the pause symbol.

To dial the extension number by automatic switching:

In the standby mode, input a phone number.

Press *** Key** three times to input the pause symbol **P**.

Input the extension number.

Press **Send Key** to dial the phone number, then the phone will dial the extension number after **P** automatically.

Tip: The pause time depends on the number of "**P**" input.

To dial the extension number by manual switching:

In the standby mode, input a phone number.

Press *** Key** four times to input the pause symbol **T**.

Input the extension number.

Press **Send Key** to dial the phone number, then the phone will prompt whether to continue dialing the extension number after **T**.

Tip: This lets you select whether to dial an extension number by pressing a key when appropriate.

3.4.4 Dial from Phone Book

Enter the **Contacts**, select an entry from the entry list and press **Send Key** to dial.

Tip: If the entry contains more than one numbers, once you press **Send Key**, the default number will be dialed.

3.4.5 Speed Dials

You can specify speed dial numbers to frequently used phone numbers.

Press the number keys **2 - 99** then press **Send key** to dial the phone number.

Tip: You must have set a speed dials number for that **Number Key**, and the **Speed Dials** function has been activated (See **4.6 Speed Dials**).

3.5 To answer/reject a call

When the phone prompts that a call is coming in:

Press	To
1 Accept / Send Key	answer the call
2 Mute / SMS Reply	mute the ring or vibration / Select a SMS from Templates and send it to the incoming number without disconnecting the call
3 End Key	end the call

When a call comes in, if an entry in the **Contacts** corresponds to the number, the related information will be matched.

If the number has been saved in the **Contacts** and has a name, the screen will display the name when a call from the number comes in.

3.6 Missed calls

The missed calls are displayed in the display. Select and press **OK** to check the missed calls..

3.7 During a call

3.7.1 Muting a call

During a call, you can prevent the other party from hearing you:

Options > Mute / Unmute

3.7.2 Call Recording

During a call, you can record conversations:

Options > Start Record / Stop Record

Tip: For FM recording, please insert memory card.

3.7.3 Handsfree earpiece

During a call, you can press the Right Soft-Key **[H-Free]** / **[H-Held]** to activate or deactivate handsfree earpiece.

3.7.4 Adjusting volume

During a call, You can press the **Navigation key (Up/Down)** to adjust the volume of the receiver during a call.

3.7.5 Send DTMF

During a call, you can select to send DTMF tone.

Option > Send DTMF

3.8 Call Divert

With the Call Divert function (needs network support); you may divert incoming calls to another mobile phone or a direct line telephone, but not any extensions of a fixed telephone.

Menu > Settings > Call Settings > Network Service > Call Divert

3.9 Call waiting

The function needs the support from the local network. In some districts, you can use the function only after you apply with the local network operator.

Menu > Settings > Call Settings > Network Service > Call Waiting

4 Phone Book

You can store contacts in the memory of the phone or UIM card. Phone memory can store up to 1000 entries. The storage of UIM card memory depends on its type. To check your UIM card memory, please check with your telecom operator.

4.1 To add name cards

In the standby mode, input numbers directly, press **Save**. Or: **Menu > Phone Book > Contacts > Options > Add new contact**

You can enter name and number then save them. If you want to add more details to the saved record, such as numbers, e-mail, address, URL, note, ringer and so on, in the detail screen, you can select **Options > Add Details**. You can also select **Options > Add to group** to add the record to a group.

4.2 To search the Contacts

Functions	Description
Quick Search	Menu > Phone Book > Contacts > Input characters directly
Name Search	Menu > Phone Book > Contacts > Options > Search Name > Input Name then press Search

4.3 To copy / move / delete a name card

Functions	Description
Single Copy/Move/Delete	Open the contacts list, select the entry to be copied/moved/ deleted: Options > Copy Contact / Move Contact / Delete contact
Multiple Copy/Move/Delete	Menu > Phone Book > Contacts > Mark the names to be copied/moved/ deleted: Options > Copy Marked / Move Marked / Delete Marked
Copy/Move/Delete All	Menu > Phone Book > Copy Contacts / Move Contacts / Delete All Contacts Tip: You need to input the phone password when you want to delete all contacts. The preset phone password is 1122.

4.4 To set groups

Menu > Phone Book > Groups

You can set five groups, and edit the members list of each group, you can also set a ringtone for each group.

4.5 To view and edit the owner number

Menu > Phone Book > My Numbers

4.6 Speed Dails

Menu > Phone Book > Speed Dails

You can set a speed number for **2 - 99**.

4.7 Settings

Menu > Phone Book > Settings

You can set the storage location and view the memory status.

5 Messages

5.1 Send Messages

Menu > Messages > New Message

1. Write the content of the SMS, you can press **Options >**
Insert Templates: Select a phrase from templates and insert it to the content.
Insert Contact: Select a contact and insert Non-empty fields of the contact to the content of the SMS.
2. When the writing is finished, you can you can press **Options >**
Send: To enter the number edit screen. You can input numbers directly, or select contact/groups from phone book.
Save: Save the SMS to draft box.

5.2 Inbox

The messages you received are listed here.

Menu > Messages > Inbox

When viewing the inbox list or reading an SMS, you can **Reply / Forward / Delete / Move (to archive box) / Copy (between UIM card and phone)** the SMS, view **Detail Info** of the SMS, select **Call Back** to dial the number of the sender, and select **Use Detail** to extract the number of the sender and the number(s) contained in the SMS. For viewing the inbox list, you can also select **Mark / Unmark** from **options** to mark some messages then **Copy / Delete** them, or save them to **Archive**.

5.3 Sentbox

The messages sent successfully are stored in the Sentbox.

Menu > Messages > Sentbox

When viewing the sentbox list or reading an SMS, you can **Resend / Forward / Delete /**

Move (to archive box) / **Copy** (between UIM card and phone) the SMS, view **Detail Info** of the SMS, and select **Use Detail** to extract the number of the recipient and the number(s) contained in the SMS. For viewing the sentbox list, you can also select **Mark / Unmark** from **options** to mark some messages then **Copy / Delete** them, or save them to **Archive**.

5.4 Outbox

The messages sent unsuccessfully are stored in the Outbox.

Menu > Messages > Outbox

When viewing the outbox list or reading an SMS, you can **Resend / Edit / Delete / Move** (to archive box) / **Copy** (between UIM card and phone) / the SMS, view **Detail Info** of the SMS, and select **Use Detail** to extract the number of the recipient and the number(s) contained in the SMS. For viewing the outbox list, you can also select **Mark / Unmark** from **options** to mark some messages then **Copy / Delete** them, or save them to **Archive**.

5.5 Draft

The messages saved directly after edit are listed here.

Menu > Messages > Draft

When viewing the drafts list or reading an SMS, you can **Send / Edit / Delete** the SMS, view **Detail Info** of the SMS. For viewing the outbox list, you can also select **Mark / Unmark** from **options** to mark some messages then **Copy / Delete** them, or save them to **Archive**.

5.6 Archive

Menu > Messages > Archive

The messages **Move** from others boxes are stored in this box.

5.7 Templates

The phone has preset frequently used phrases which may be selected and added to the text when you are editing message.

Menu > Messages > Templates

5.8 Delete Messages

Menu > Messages > Delete Messages

You can select to delete the SMS in inbox/sentbox/outbox/draft/archive, or delete all the messages.

Tip: You need to input the phone password when you want to delete messages. The preset phone password is 1122.

5.9 Voice Mail

Menu > Messages > Voice Mail

5.10 Message Settings

Menu > Messages > Message Settings

You can set the send options, storage, message replace, and voice mail number.

Tips:

1. **Menu > Messages > Message Settings > Other Settings > Message Replace >** Select **Inbox** or **Sentbox** to replace old messages when capacity is over.
2. If you have set the voice mail number, Long press **1** in idle to dial the corresponding number.

5.11 Memory Status

Menu > Messages > Memory Status

You can view the memory status of the phone and UIM card.

6 Call History

6.1 All Calls / Missed Calls / Received Calls / Dialed Calls

Menu > Call History > All Calls / Missed Calls / Received Calls / Dialed Calls

You can view the detail of each call log. You can also dial the number, send SMS to the number and save it to contacts.

6.2 Delete Call Logs

Menu > Call History > Delete Recent Calls

You can select to delete Missed/ Received / Dialed Calls, or Delete All.

6.3 Call Time

Menu > Call History > Call Duration

You can view the last call time, total time of outgoing calls, total time of answered calls, and total time of all calls.

Reset Timers:

Menu > Call History > Call Duration > Options > Clear / Clear All

6.4 SMS Counter

Menu > Call History > Message History

You can view Sent SMS number and Received SMS number.

7 Settings

7.1 Display Settings

Functions	Description
Set the smart desktop	Menu > Settings > Display Settings > Smart Desktop You can open the Smart Desktop Mode, and can set the desktop applications.
Set the theme	Menu > Settings > Display Settings > Theme Settings
Set the wallpaper	Menu > Settings > Display Settings > Wallpaper
Adjust the Brightness	Menu > Settings > Display Settings > Brightness Level
Set the time of backlight	Menu > Settings > Display Settings > Backlight

7.2 Time And Date Settings

Functions	Description
Set the clock display	Menu > Settings > Time And Date Settings > Clock
Set the time format	Menu > Settings > Time And Date Settings > Time Format
Set the date format	Menu > Settings > Time And Date Settings > Date Format

7.3 Call Settings

Functions	Description
Set the anykey answer	Menu > Settings > Call Settings > AnyKey Answer
Activate the speed dial	Menu > Settings > Call Settings > Speed Dialing
Set the international prefix	Menu > Settings > Call Settings > International Prefix
Activate the voice privacy	Menu > Settings > Call Settings > Voice Privacy
Activate the roaming call alert	Menu > Settings > Call Settings > Roaming Call Alert
Set the network service	Menu > Settings > Call Settings > Network Service You can set the call divert and call waiting.
Auto answer after some time	Menu > Settings > Call Settings > Answer Machine Enable

7.4 Phone Settings

Functions	Description
Select language	Menu > Settings > Phone Settings > Language This phone support 2 languages – English and Hindi.
Auto keypad lock	Menu > Settings > Phone Settings > Automatic Keyguard
Set the DTMF	Menu > Settings > Phone Settings > DTMF Tones
Set the greeting text	Menu > Settings > Phone Settings > Greeting Text
Adjust the volume of power on/off	Menu > Settings > Phone Settings > Power On/Off Volume
Flight Mode	Menu > Settings > Phone Settings > Flight Mode
Check the phone info	Menu > Settings > Phone Settings > Phone Info

7.5 Security Settings

You need to input the phone password when you want to enter the security settings. The preset phone password is 1122.

Functions	Description
Phone lock	Menu > Settings > Security Settings > Phone Lock
Change phone password	Menu > Settings > Security Settings > Change Security Code The preset password is 1122.
PIN code management	Menu > Settings > Security Settings > PIN Management You can activate/deactivate the PIN lock and change the PIN code.

	Warning: If you input three wrong PIN codes in a row, you need to input the PUK code to unlock. PIN code and PUK code are provided by the network operator.
Set the blacklist / whitelist	Menu > Settings > Security Settings > Blacklist / Whitelist You can set the mode to Blacklist or Whitelist , and edit the list of numbers. When the Blacklist mode is activated, the phone will not accept the numbers in the Blacklist; when the Whitelist mode is activated, the phone will only accept the numbers in the Whitelist.
Mobile Tracker	Menu > Settings > Security Settings > Mobile Tracker You can set a mobile tracker number and activate the mobile tracker function. So, if a new UIM card is inserted in your phone, the phone will send a message to the mobile tracker number use the new SIM card.
Restore factory default	Menu > Settings > Security Settings > Reset To Default Tip: You need to input the phone password when you want to reset to default. The preset phone password is 1122. Please bear your password in mind. If you have forgotten, contact the local dealer or an authorized service center.

8 Multimedia

8.1 Audio Player

Menu > Multimedia > Audio Player

When playing, you can press **Navigation key (up/down)** to adjust volume, and press **Navigation key (Left/Right)** to move the focus of the softkeys on the screen, then press **OK key** to implement the corresponding operations.

The functions of the softkeys as follows: previous song, play / pause, stop, next song, the play mode.

Tip: For playing audio files, memory card is required. User can not save audio files in phone memory

8.2 Video Player

When playing, you can press **Navigation key (up/down)** to adjust volume, and press **Navigation key (Left/Right)** to move the focus of the softkeys on the screen, then press **OK key** to implement the corresponding operations.

The functions of the softkeys as follows: previous video, play / pause, stop, next video.

Tip: Only recorded videos by this handsets can be played in the phone.

8.3 Video Recorder

Menu > Multimedia > Video Recorder

When the video recorder is activated, the phone enters the view finding status. You can press **OK Key** to begin recording. During the recording, you can press **OK key** to pause/resume recording, or press **Stop** to end the recording and save the video.

If you need to switch to the camera mode, you can press * key on the view finding screen.

Tip: Videos cannot be saved in phone memory, please insert memory card.

8.4 Camera

Menu > Multimedia > Camera

When the camera is activated, the phone enters the view finding status. You can press **OK Key** to shoot photos.

You can change Camera Settings by pressing **Options**, and press * key to go to Video Recorder.

Tip: You can change the storage site by **Options > Storage Site**.

8.5 Image Viewer

Menu > Multimedia > Image Viewer

The phone will automatically read the entries with the format supported by the phone under the folder **Photos** in phone or memory card, and display a list of entries.

8.6 FM Radio

Menu > Multimedia > FM Radio

When playing, you can press **Navigation key (up/down)** to adjust volume, and press **Navigation key (Left/Right)** to switch Channels.

You can select **Options > Auto Scanning** to search and save channels.

You can also press the numeric keys to switch to the corresponding channel (* key equivalent to "10+", # key equivalent to "20+".)

Tips:

1. You can long press **0** in idle to enter FM radio.
2. With the memory card inserted, you can record the playing FM program by **Options > Record**.

8.7 Games

Menu > Multimedia > Games

9 File Manager

Menu> File Manager

Phone	Folder	Description
Phone	Photos	If you set the storage to "Phone" in Camera, the photos will be saved in this folder.
Memory Card	My Music	The playlist of Audio Player is created from this folder.
	Photos	If you set the storage to "Memory Card" in Camera, the photos will be saved in this folder.
	Records	All voice recording files are saved in this folder, including FM recording and conversation recording files.
	Video	All video recording files are saved in this folder.

10 Profiles

Menu > Profiles

There are 6 modes you can set, including **General**, **Vibrator**, **Meeting**, **Outdoor**, and two custom modes.

For every mode(except **Vibrator** mode), you can set the **Incoming Call Alert**, **Ringling Tone**, **Ringling Volume**, **Vibrating Alert**, **Message Alert Tone**, **Keypad Tones**, and **Warning Tones**. For the custom modes, you can also modify the profile name.

11 Organizer

Functions	Description
View the world clock	Menu > Organizer > World Clock
View calendar / Schedule management	Menu > Organizer > Calendar You can press View to view the schedule of the focus date. You can also select Options> New to add a new schedule.
Set alarm	Menu > Organizer > Alarm
Use calculator	Menu > Organizer > Calculator
Use stop watch	Menu > Organizer > Stop Watch
Use Notepad	Menu > Organizer > Notepad You can add or delete notes handily.

12 UTK Services

If your UIM card supports UTK, you may use the corresponding value-added services.

Menu > Services

13 Maintenance

Use a dry soft cloth to wipe general dirt. For a large amount of dirt, use a soft towel soaked with neutral scour and twisted to gently wipe the dirt and use a dry soft cloth to wipe the phone.

Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched, change color or fade.

14 Troubleshooting

If any problem occurs in your phone, please refer to the help information in the table below. If the problem continues, contact the dealer.

Problem	Possible Causes	Solutions
The phone can't be switched on.	I Check if the battery power has been used up?	I Charge the battery.
	I Do you press End key for adequate time?	I Press End key for over 2 seconds.
	I Is the battery inserted correctly?	I Insert the battery correctly.
I can't make calls with the phone.	I Has the signal bar disappeared?	I Move to a place with strong signal.
	I Is the phone number correct?	I Check that the number is correct.

The call is interrupted or there is noise during the calls.	Are you in a place with weak signal?	Move to a place with strong signal.
	Is there any object around that obstructs signal transmission?	Go to another place.
	Are you talking when you are in a high speed?	Signal will be interrupted for very short time when the phone passes through different base stations. Please slow down or do not move during calls.
The battery can't be charged.	Is the plug of the charger inserted in the charging interface of the phone?	Insert it correctly.
	Is the power cable of the charger disconnected from the socket?	Check the connection.
	Is the battery too old?	Replace it with a new battery.