

# **SPICE D-6666 User's Manual**

Spice Mobiles Ltd. © 2009. All rights are reserved. No part of this document may be used without permission. All trademarks and brand names mentioned in this publication are property of their respective owners.











While all efforts have been made to ensure the accuracy of all contents in this manual, we assume no liability for errors or omissions or by statements of any kind in this manual, whether such errors, omissions or statements resulting from negligence, accidents, or any other cause. The contents of this manual are subject to change without prior notice.

Protect your environment! We strive to produce products in compliance with global environmental standards. Please consult your local authorities for proper disposal.

**Note:** User's Manual is just to guide the user about the functionality of the phone. This does not seem any certificate of technology. Some functions may vary due to modifications and upgradations of software or due to printing mistake.

## SAFETY PRECAUTIONS

Before using your phone, please read the following information to eliminate or reduce any possibility of causing damage and personal injury.

	Do not use wireless phones while driving.
	Switch off wireless devices in aircraft. The signal may cause interference. Using them on aircraft is illegal.
	Do not use mobile phones where blasting is in progress. Follow all regulations and rules strictly.
	Do not use mobile phones at a refueling point. Don't use near fuel or chemicals
	Follow all regulations or rules in hospital and health care facilities. Switch off phone near medical equipment.
	All wireless devices may get interference that could affect performance.
	Only qualified service personnel can install or repair this device.
	Use only approved accessories and batteries.
	Use only in normal position. Do not expose your phone to extreme high temperatures above +60°C ( +140°F ) . Do not use anything static to clean your phone.
	Ensure the phone is turned on and in service. Enter the emergency number, then press Pick Up key. Give your location. Do not end the call until told to do so.

# Table of Content

<b>INFORMATION.....</b>	<b>1</b>
.....	1
Service .....	1
.....	1
.....	1
<b>YOUR MOBILE PHONE .....</b>	<b>2</b>
of Phone Keys.....	2
of Keys.....	3
Screen.....	5
Icons .....	6
Light .....	6
<b>STARTED .....</b>	<b>7</b>
Call .....	7
the SIM Card.....	7
the T-Flash Memory Card.....	9
the Battery .....	9
Your Phone On/Off .....	10
the Personal Hands free Handset.....	10
.....	<b>11</b>
Calls .....	11
Calls.....	12
in Call.....	12
<b>TO MENU OPERATIONS .....</b>	<b>13</b>
Book.....	13
.....	16
History.....	23
.....	28
Center.....	32
Manager .....	39

profiles.....	42
.....	45
.....	46
.....	46
.....	49
Spice .....	49

**INFORMATION..... 55**

of Passwords .....	55
Information.....	56
& Maintenance .....	58
Calls .....	59

**..... 60**

A: Guidance On Entry Methods.....	60
B: Troubleshooting.....	62
C: Available Accessories .....	63
D: FCC Statement.....	63

## GENERAL INFORMATION

### ***Antenna***

Use of other antenna devices could damage your mobile phone and reduce performance. Your phone has a built-in antenna. Don't touch the antenna area unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

### ***Network Service***

A lot of features described in this manual are called network service. These are special services provided by wireless service providers. You should subscribe to these services from your home service provider and learn instructions on uses before you select the network you want to use.

### ***Accessories***

Li-Ion battery is the manufacturer-approved rechargeable battery available for your phone. May be some batteries perform best after several full charge/discharge cycles.

Use only batteries, chargers and accessories approved by the phone manufacturer for use with this particular model. The use of any other types will invalidate any approval or warranty applying to the phone, and may be dangerous.

Please consult with your dealer for availability of approved accessories.

### ***Privacy***

The shoot or recording of photos, images or sounds privately may be prohibited by law and/or subject to criminal prosecution. We recommend you to be responsible and respectful of privacy laws when you are taking photos, shooting videos, or doing records.




## KNOW YOUR MOBILE PHONE






### *Positions of Phone Keys*

- |                                       |                                       |
|---------------------------------------|---------------------------------------|
| 1. Earpiece                           | 8. Number keys                        |
| 2. Screen                             | 9. Microphone                         |
| 3. Slave SIM/UIM Call Key & Soft keys | 10. Charger and accessories connector |
| 4. Master SIM Call key                | 11. Flashlight                        |
| 5. Selection key                      | 12. Speaker                           |
| 6. OK Key                             | 13. Camera                            |
| 7. upend Key and Power key            | 14. Battery Cover                     |

## Functions of Keys

Key	Name	Description
	Call Key	Making or answering a call(in Dual Mode making a call from Master Sim). In the standby mode, press this key to access the Call History.
	End Key	End an ongoing call. Press and hold this key to turn on or off the mobile phone. In the menu mode, press this key to return to the standby mode and cancel current operations. Press this key to stop the alarm ringing. .
	Left Soft Key/Slave SIM Call Key/ Camera Key	Use the left soft key to execute the functions indicated at the left of the prompt bar on the screen. In the standby mode, press it to access main menu or press and hold it to activate the camera function. When the “Master SIM & Slave SIM open” or ” Master SIM & Slave UIM open” has been selected, press the left soft key to make a call with Slave SIM/UIM card after press the number key or get into the function of phonebook.

	<p>Right Soft Key</p>	<p>Use the right soft key to execute to the functions indicated at the right of the prompt bar on the screen. In the standby mode, press it to access Phonebook list or press and hold it to activate the Bluetooth function.</p>
	<p>Selection Key/OK Key</p>	<p>Scrolling options in the function list or the phone book. In the edit mode, it is used for moving the cursor. In the standby mode, press it to activate a specified function. In the Camera mode, press the Up/Down/Left/Right key to adjust the focus (except the photo size: 1280×1024, 1600×1200) or the EV; Press the OK Key to take a photo. In the Video mode, press the Up/Down/ Left/Right key to adjust the focus or the EV. press the OK key to start/pause record.</p>

	<p>Numeric Keys</p>	<p>Used to enter numbers, letters and some special characters.</p> <p>In the standby mode, press and hold the # key to activate Silent mode, press and hold the * key to activate Flashlight function, press and hold the Numeric key 0 to activate FM function. In the edit mode, you can press the # key to switch the input method.</p> <p>In the Camera/ Video Recorder mode, press Numeric Keys to switch to the corresponding function setting quickly.</p>
---	-------------------------	---

## ***Display Screen***

















Your mobile phone has a single LCD display, which consists of three main areas:

The First line displays status icons, which indicate the signal strength, the remaining power of the battery, etc.





The Middle lines display text and graphics, including numbers, text, animated icons and the information you enter.

The Last line displays the currently available operations assigned to the left or right soft key.

## **Status Icons**

	Master SIM Network Signal
	Slave SIM Network Signal
	UIM (CDMA) Signal
	Connecting GPRS and using GPRS
	Connecting GPRS but no data alternating
	Divert all Voice Calls
	Auto Keypad Lock
	Alarm Clock is activated
	Battery Status
	Missed Calls
	New Message or Message Memory Full
	MMS is busy
	New MMS
	Roaming Startup
	WAP Message
	Bluetooth

### **Sound Status**

	Ring
	Vib. Only
	Vib. then Ring
	Vib. and Ring

## **Back Light**

You can set the Back Light for the display and keypad through options in the menu. The backlight will be off automatically without any key operation. .

## GETTING STARTED

### ***First Call***

- Insert a SIM card (Switch off your phone at first, and then remove the battery). Enter the area code and the phone number and press Pick Up Key.  
**Tip:** Before you get started, you must insert a valid SIM card in your phone and charge the battery first.
- SIM Card: Please refer to “Mounting the SIM Card” for more reference on installation.
- Charging the battery: please refer to “Charging the Battery” for more details.

### ***Mounting the SIM Card***

Your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (Personal Unlock Key), PUK2 (Personal Unlock Key2), IMSI (International Mobile Subscriber Identity), the network information, the phonebook data, SMS (short messages) and other data are stored in your SIM card.

**Note:** This particular phone model only supports the SIM cards of 1.8V and 3V.

- Some network operators don't offer PIN2 and PUK2, so functions using those passwords will be unavailable.
- The SIM card and its contacts can be damaged by scratches or bending easily, so be careful while handling, inserting or removing the card.
- Keep all miniature SIM cards out of children's reach.

**Note:** Always make sure the phone is switched off before you insert or remove the SIM card, otherwise it may damage the SIM card.


### **Mounting**

1. Remove the battery cover by sliding it.

2. Insert the Master SIM card, with the notch at the upper left and the gold contacts face down, into the card slot.



3. Push the metal cover, and turn up the cover. Insert the Slave card into the metal cover; return the metal cover to its original position. As the following picture shows:

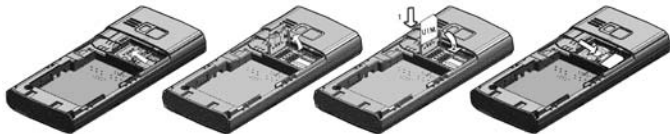

4. Replace the battery and close the cover tightly.

**Note:**

- If the SIM Card is installed improperly or damaged, the prompt words “Insert SIM” will display on the screen after you switch on your phone. Remove the SIM Card and mount it again according to the picture. .
- If “Insert SIM” still appears on the screen after you have inserted the SIM correctly. Please ensure there is no stain on the surface of the SIM card. If there are some stains on it, please clean away them with rubber carefully and then try again.
- If the screen displays that the SIM card is locked permanently, please consult with your network operator.

## ***Mounting the T-Flash Memory Card***

Please follow steps described as below:

Push the metal cover, and turn up the cover. Insert the T-Flash card into the metal cover; return the metal cover to its original position. As the following picture shows:



## ***Charging the Battery***

**Note:** Please always keep your phone connector and charger dry.

1. Connect the connector of the travel adapter to the phone.



2. Plug the travel adapter into a proper AC wall outlet.
3. When your phone indicates that the battery is fully charged, please pull the travel adapter out from the I/O socket of the phone.



**Tip:** 1. If the battery is totally empty or not enough, it may take a few minutes before the charging indicator appears on the screen.

2. You can turn on/off, and use the phone while charging.

**Warning:** Make sure that the standard voltage/power of the place where you charge the battery matches with the rated voltage/power of our travel adapter.

## ***Switching Your Phone On/Off***

- Press and hold Power Key for a few seconds to switch your phone on.
- **If the phone ask for a phone lock code:**  
Enter the phone lock code, and press OK.
- **If the phone ask for a PIN code:**  
Enter the PIN code, and press OK. The PIN code is usually supplied with the SIM card. Please consult your network operator for more information.
- **Access the standby mode.**  
Press and hold Power Key for a few seconds to switch your phone off.

## ***Using the Personal Hands free Handset***

Connect the hands free handset to your mobile phone, you can still answer calls and use the microphone without holding the phone.

## CALLING

### ***Making Calls***

1. Enter the phone number (with the area code)
2. Press Master SIM Cal Key/ Slave SIM Call Key to make a call.
3. Press End Key to end a call.

### **Making International Calls**

1. Press the \* key twice for the international prefix symbol +.
2. Enter the country code, area code and phone number.
3. Press Master SIM Call Key/Slave SIM Call key to make a call.

### **Making Extension Calls**

1. Enter the host number, and press the \* key three or four times for the extension prefix symbol **P** or **W**.
2. Enter the extension number, and press Master SIM Cal Key/ Slave SIM Call Key to make a call.

### **Clear Wrong Enters**

Press right soft key to delete the last character on the screen. Hold right soft key will clear all you entered.

### **Making a call from the Phone Book**

#### **Method 1:**

1. Press right soft key to access the **Phonebook List**. Scroll to search the desired number. (Enter the first letter or more of the name and press the selection key Up/Down to reach the desired name.)
2. Press Master SIM Cal Key/ Slave SIM Call Key to call the number.

#### **Method 2:**

1. Select” Menu > **Phonebook**”.
2. Select” Quick Search” to find the number you wants, and press Master SIM Cal Key/ Slave SIM Call Key to call the number.

## **Last Number Redial**

1. In the standby mode, press Master SIM Call Key to access the **Call Logs**.
2. Press the Up/Down key to reach the desired number or name and press Master SIM Key.

## **Speed Dialing**

You can save 8 Speed Dial Numbers you often dial to positions titled with number keys from “2” to “9” respectively. Select “Call History > Call settings > Speed Dial > Set Number”, and then set “Enable Speed Dial” on. In the standby mode, press and hold one of the number keys from “2” to “9” until the call is started.

## **Adjusting the Sound Volume**

During a call, you can press the Up/Down Key to adjust the earpiece volume.

## **Answering Calls**

1. To answer an incoming call, press Call Key.
2. To end or reject an incoming/ongoing call, press end Key.

**Tip:** If the caller can be identified, the caller’s name or phone number will display. If the caller cannot be identified, the screen will only display the caller’s number. When you use the function list or Phone Book, you can also answer a call.

## **Options in Call**

Your phone provides a number of functions that you can use during a call.

During a call, you can access Hold/End single call, New Call, Phone Book, Message center, Sound Recorder and other functions.

## GUIDE TO MENU OPERATIONS

All functions about the mobile phone are listed below with brief descriptions.

### ***Phone Book***

You can save many contact numbers in your mobile phone. The capacity of your SIM card decides how many phone numbers can be saved in the SIM card. You can access the Phone Book to search all the records saved in the mobile phone and your SIM card.

### **Quick Search**

You can quickly locate the number of the person you want to contact. Please enter the initial letter of the person's name, and it will display the related records in the middle of the screen. Please use the Up/Down key to select the number as desired, and then press Call Key to make a call.

### **Search Contact**

You can find the desired phone number from the phone book easily and quickly. In the standby mode, press left soft key to access **Menu > Phone Book > Search Contact**. Please follow the steps as described below:

1. In the **Name** box, enter all the letters of the name or initial letters of the name.
2. Press left soft key to access **Options > Search > Phone Book List**, and all related information of the desired contact will be listed. Please use the Up/Down key to browse all entries, and then press Pick Up Key/ left soft key to make a call.
3. Press the OK key to access **Options**, and then you can perform following operations for each entry:
  - **Call:** Take the number to make a call.
  - **Send text message:** Send messages to the selected number.

- **Send multimedia message:** Send MMS message to the selected number.
- **View:** Check the record for the selected number.
- **Edit:** Edit the selected entry.
- **Delete:** Delete the entry from the Phone Book.
- **Copy:** You can copy each entry from the card to the phone or from the phone to the card. i.e. card to Phone Copy or Phone to card Copy.
- **Move:** You can move each entry from the card to the phone or from the phone to the card.
- **Duplicate:** Entries saved in the card can be copied to the card, and entries saved in the phone can be copied to the phone. i.e. Local Copy.
- **Send vCard:** Send your phone number by Text Message/Multimedia, Bluetooth or Save to file.

**Tip:** Pressing one of the number keys from 2 to 9 will show starting by the letter corresponding to the key you pressed. . **For example**, in order to search for the record of someone whose name starts with C, press the key 2 quickly for 3 times, the cursor will skip to the first entry of the contacts whose names are initialized with C.

## Add New Entry

You can add a new contact entry to the Phone Book, both for the SIM/UIM card and your phone. Steps described as below:

1. From the Phone Book menu, press left soft key to select **Add New Entry> To Master SIM/To Slave SIM/To Phone**.
2. If the **To Master SIM/To Slave SIM** is selected, press the left key to select OK, to start editing the contact names and phone number.
3. If the **To Phone** is selected, you can add the contact's name, phone number, home number, company name, e-mail address, office number, fax number, birthday and so on.

**Tip:** This mobile phone offers you several input methods, such as Multitap ABC (ABC), Multitap abc (abc), Numeric (123), Smart ABC (eZi

ABC), Smart abc (eZi abc). Please refer to “Appendix A: Guidance of Entry Methods” for more details.

## **Copy All**

This function enables you to copy all entries both from the Master/Slave card and the phone.

**Note:** If the capacity of this phone book is different from the MASTER/Slave SIM card, the copy content takes the smaller one as standard.

## **Move All**

This function enables you move all entries from the Master/Slave card or the phone.

## **Delete**

You can select delete entries form the Master/Slave card, the Phone or one by one.

## **Caller Groups**

You can set group name, associated sound, associated picture, associate video, and member list for different caller group.

## **Extra Number**

You can set Master/Slave SIM Owner Number, and SOS Number.

- Master/Slave SIM Owner Number: You can enter 2 groups of a number and a name and can also edit or erase it.
- SOS Number: You can enter five groups of SOS numbers.

**Note:** If the keypad is locked, you can dial SOS numbers that you edit.

## **Phonebook Settings**

- Memory Status: display the occupied storage and the total storage.
- Preferred Storage: select the Master/Slave or Phone as the preferred storage for the new number.
- Fields: select the desired option when you add a new number.
- My VCard: can edit and send my card.
- Popat PHB reader: You can set On or Off.

## Caller Picture/ Ring Tone

- To New Entry: select the picture/ ring tone to the new entry.
- To Selected Entry: select the picture/ ring tone to the selected entry.
- To Caller Group: select the picture/ ring tone to the caller group.

## Messages

### Text Message


Short Message Service (SMS) is a kind of network service. Your network may not support the service. Please consult your network operator for more information.

1. Enter the **Menu**, and select **Messages**.
2. Press the left soft key to enter the function.

### Write Message

1. Please press the **#** to switch input methods while editing a message. You can enter letters and numbers, and insert pictures and rings. (Support EMS service)
2. Edit your message, and press the **\*** to insert special symbols.
3. Select **Options**, and then you can do: Master/ Slave SIM Done, Use Templates, Insert Object and so on.
4. When you select **Master/ Slave SIM Done**, you can send or save as desired.

### Inbox

The icon  means an unread message or the message box is full. You would not receive new messages once the message box is full. Please delete unnecessary messages.

1. Select the unread message, and press the left soft key to read.
2. Select **Options**, and then you can reply, delete, edit and so on.

### Outbox

The screen will display the message list once you select the **Outbox**.

1. Select "OK" to read the current messages.

2. Select **Options**, and then you can send, edit or select other operations.

### **Message Templates**

Your mobile phone saves many messages in common use. You can edit, erase or write message.

### **SMS Settings**

You can set the default information about SMS properties.

### **Schedule SMS**

Press the left soft key to access the Add or Options > Add, and then you can set the date, time, and message and Phone number. Press Done and Save the message will sent out the message to the number as your desire.

**Note:** The time format of this function is 24 hours.

### **MMS**

Please consult your network operator to obtain the MMS services.


### **Write Message**

While writing messages, you can select To, Cc, Bcc, Subject or Edit content.

- **To:** You can enter the phone number or e-mail address. .
- **Cc:** send the MMS to others at the same time. You can enter phone numbers or e-mail addresses.
- **Bcc:** send the MMS to others secretly at the same time. You can enter phone numbers or e-mail addresses. .
- **Subject:** edit the Subject of the MMS.
- **Edit content:** enter the text or add picture, audio and so on.

### **Inbox**

The phone saves the received MMS into the inbox.

All received Messages display in the inbox, and the icon  means the MMS is unread. Use the Down/Up key to scroll the cursor to check the list, and the sender's name and number will display. If the MMS has been read, the icon will change to the read icon. Please press the left

soft key to access **Options**, and then you can view, reply, delete and so on.

### **Outbox**

In the **Outbox**, please select **Options**, and then you can send, edit or select other operations.

### **Drafts**

In the **Drafts**, please select **Options**, and then you can send, edit or select other operations.

### **Templates**

User defined: you can save many MMS in it.

Default: Your mobile phone saves many MMS in it.

And what you can do for those MMS are View, Write Message and Properties.

### **MMS Settings**

Please follow steps described as below:

1. **Compose:** You can configure Creation Mode, Image Resizing, and Auto Signature.
2. **Send:** You can configure Validity period, Delivery Report, Read Report, Priority, Slide Timing, and Delivery Time.
3. **Retrieve:** You can configure Home Network, Roaming, Read Report, and Delivery Report.
4. **Filter:** You can configure Anonymous and Advertisement.
5. **Server Profile:** You can select one profile from 18 Profiles to activate or edit.
6. **Memory Status:** You can check the Usage, Used space and Free space.

### **Chat**

Use this function to chat with the sender by sending messages.

- **Chat Room Information:** select one chat room to set My Nickname and Remote Number.
- **Start New:** enter words and start to chat with the preset number.

## E-mail

This E-mail function can receive and send e-mails supported POP3, IMAP4 E-mail servers. Please read the following related information carefully before you use the function:

**E-mail:** Please log on some Internet web to apply an e-mail account. That e-mail account is just the "E-mail" referred in your manual. It belongs to the e-mail server computer system provided from the network operator. E-mails you receive and send are transferred by that e-mail server.

**E-mail Server:** is a computer that supplies the e-mail service from the network operator. Please consult your network operator to obtain the server name. POP3 and IMAP4 are commonly used.

1. **POP3:** is a client/server protocol in which e-mail is received and held for you by your Internet server. Once you connect the web and enable the e-mail, your phone will automatically download the new e-mail from POP3 e-mail server to the phone's inbox, and then delete those e-mails from the server. If you want to save those e-mails, please select the "Leave a copy of messages on server" option in "E-mail Setting".
2. **IMAP4:** (Internet Message Access Protocol) is a standard protocol for accessing e-mail from your local server. IMAP provides the user more capabilities for retaining e-mail on the server and for organizing it in folders on the server. IMAP can be thought of as a remote file server.

**Note:** Please consult your network operator to check the type of your e-mail .

**User Name:** The name you enter when you applied the e-mail account. When you log on the e-mail, the server should verify your identity.

**Password:** The code you enter when you applied the e-mail account. The e-mail server will verify whether you are the only user for the

le-mail account or not according to the user name and password you input.

## E-mail

This is the address used in Internet. According to the address, people send e-mails to your mailbox. The address is assigned by the system when you apply the e-mail, so you cannot modify the address.

## Send And Receive

You can read sent and received e-mails.


## Write E-mail

- **To:** edit the receiver E-mail address.
- **CC:** edit others E-mail address which used to send the E-mail to others at the same time.
- **BCC:** edit others E-mail address which used to send the E-mail to others secretly at the same time.
- **Subject:** edit the Subject of the E-mail.
- **Attachment:** attach 3 files saved in the phone. The default mail size is up to 40K.
- **Priority:** you can select Low, High or Medium.
- **Content:** enter the text and press “#” to switch input methods.

When you select **Done**, you can do the following operations:

- **Send:** to send the e-mail.
- **Send and Save:** to save the e-mail to Sent and send it out.
- **Save to Drafts:** to save the e-mail to Drafts without sending it out
- **Quit without Saving:** to exit the E-mail Option without saving the e-mail.

## Inbox

All received e-mails display in the inbox, and the icon  means the e-mail is unread. Use the Down/Up key to scroll the cursor to check the list, the subject and time will display. If the e-mail has been read, the icon will change to the read icon. Select **Options**, and then you can View or select other operations.

## **Outbox**

In the **Outbox**, Select **Options**, and then you can View or select other operations.

## **Sent**

After the e-mail is sent out successfully, you will be asked to save the e-mail into the Sent or not.

## **Drafts**

E-mails in Inbox, Sent or Unsent and the e-mail unfinished can all be saved into the Drafts. Select **Options**, and then you can View or select other operations.

## **Clear E-mails**

Use the function to delete e-mails in Inbox, Outbox, Sent, Drafts respectively, or Delete all mailboxes drastically.

## **Delete marked E-mails**

Use the function to delete e-mails with the deleted mark in Inbox, Outbox, Sent, Drafts respectively, or Delete all mailboxes drastically.

## **E-mail Accounts**

Please select one mode from them. After you edited the mode, please activate it to use the E-mail function.

- 1> **E-Mail Address:** user define
- 2> **Display Name:** user define
- 3> **Username:** user define
- 4> **Password:** user define
- 5> **Outgoing Server:** user define
- 6> **Incoming Server:** user define
- 7> **Advanced Settings:**
  - **Account Setting:**
    - 1> Account Name: user define
    - 2> Data Account: user define
    - 3> Protocol: POP3
    - 4> Check Interval: user define
    - 5> Download Size: user define( 204800, max)

- 6> Retrieve amount: user define( 50, max)
- 7> Reply to address: user define
- **Outgoing Server:**
  - 1> Outgoing Port: 25
  - 2> Authentication: user define
- **Incoming Server:**
  - 1> Incoming port: 110
  - 2> Download Options: user define
  - 3> Copy on Server: user define
  - 4> Del server mail: user define
- **Signature:** You can set Auto Signature, Signature Image and Signature Text.

## Templates

You mobile phone saves many template in common use. What you can do for those are Edit, Erase and Write E-mail.

**Tip:** The word “user define” may indicate what you enter or select, you should consider the local network condition, please consult your network operator and the local dealer for more information.

## Voice-mail Server

Scroll the Up/Down key to select **Voice-mail Server** in the **Messages** menu, and select **OK** to access **Voice-mail Server**.

- **Edit:** Input or modify the number and the name of voice mailbox.
- **Connect To Voice:** You can hear messages in the voice mailbox.

**Note:** This service is supplied by the network, such as the message machine service. It enables the caller to leave messages when you cannot or you are unwilling to answer the coming call. Your number for the voice mailbox is saved in this phone. In standby mode, hold the number key 1 to dial the number of the voice mailbox after the number is configured. Please consult your network operator for more details.

## Broadcast Message

This network service enables you to receive all kinds of text messages, such as weather reports or transportation information. Until now, there

are several networks afford the service in this world. Please consult your network operator for more reference.

- **Receive Mode:** Turn on or off the Cell Broadcast.
- **Read Message:** Scroll the Up/Down Key to select the message.
- **Languages:** Select the desired language to display the broadcast message.

**Note:** Your network operator decides whether the language is supported or not.

- **Channel Settings:** You can choose Select, Add, Edit or Delete to receive the Broadcast information.

## ***Call History***

In the standby mode, press left soft key to access **Menu > Call History**.

### **Call history**

#### **Master/Slave SIM call history**

#### **Missed Calls**

With this function, you can check recent missed calls.

Scroll the Up/Down key to select a missed call.

Press left soft key to access Missed Call Information, and you can do: Delete, Save to Phone book, Dial, Edit and so on.

#### **Dialed Calls**

With this function, you can check recent dialed calls. In this function, you can Delete, Save to Phone Book, Dial, Edit and so on.

#### **Received Calls**

With this function, you can check recent received calls. In this function, you can Delete, Save to Phone Book, Dial, Edit and so on.

#### **Delete Call Log**

You can delete all records of missed calls, dialed calls or received calls with this function or Delete all folders. .

#### **Call Time**

Last Call time: The last call time can be checked.

Total Sent: The total time for all dialed calls can be checked.

Total Received: The total time for all received calls can be checked.

Reset All Time: Reset the counters.

### **Call Cost**

Last Call Cost: You can check the cost of last call. .

Total Cost: You can check the total cost of all calls..

Reset Cost: You can modify the call cost, and reset the cost to 0. **PIN2 code is required while modifying.**

Max Cost: You can check and modify the upper limit. PIN2 code is required while modifying.

Price Per Unit: You can check and modify the call rate. PIN2 code is required while modifying.

**Note:** This function is related with the SIM card. Some SIM cards don't support the function. PIN2 is provided from the network operator. Please consult your network operator to obtain the number.

### **SMS Counter**

Sent: You can check and clear the number of sent messages.

Received: You can check and clear the number of received messages.

Note: This function has nothing to do with the SIM card. The amount of sent or received messages will not change even if you change the SIM card.

### **GPRS Counter**

You can check or reset the Last Sent, Last Received, All Sent, All Received and Reset Counter.

### **Slave UIM call history**

#### **Missed Calls**

With this function, you can check recent missed calls.

Scroll the Up/Down key to select a missed call.

Press left soft key to access Missed Call Information, and you can do: Delete, Save to Phone book, Dial, Edit and so on.

#### **Dialed Calls**

With this function, you can check recent dialed calls. In this function, you can Delete, Save to Phone Book, Dial, Edit and so on.

### **Received Calls**

With this function, you can check recent received calls. In this function, you can Delete, Save to Phone Book, Dial, Edit and so on.

### **Delete Call Log**

You can delete all records of missed calls, dialed calls or received calls with this function or Delete all folders .

## **Call settings**

### **Master/Slave SIM call settings**

- **Caller ID:** You can select Set By Network, Hide ID or Send ID. The default status is the Set by Network.  
**Note:** This function is related with your network. Select Hide ID may cause failure to dial. Please test the calling function before you enable Hide ID.
- **Call Waiting:**
  - 1> **Activate:** The mobile phone will connect to the network when Call Wait is enabled. After a while, the network will take a response by sending messages to ensure your operation. If Call Wait is enabled, the network will warn you. At the same time, another incoming call number will display on the screen when the first call is ongoing and a new call is coming.
  - 2> **Deactivate:** If you cancel Call Waiting, the network would not warn you when the first call is ongoing and a new call is coming.
  - 3> **Query Status:** With this function, you can inquire about the current status from the network.
- **Call Divert:** This function allows your phone to divert incoming calls to another phone.
  - 1> **Divert All Voice Calls:** When this function is enabled, all coming calls will be diverted to another phone. Set it On or Off, the phone will connect to the network. After a while, the network will take a response and tell you the result on operation.

- 2> **Divert All Data Calls:** You can divert all data calls with the need of your network operator's support.
- 3> **Cancel All Divert:** Use to cancel all diverting functions.

- **Call Barring:**

This function makes use of Call Barring to limit some selected calls. When you configure this function, you should consult your network operator for the password. If the password is wrong, the phone will prompt the fault message. After the desired number is selected, please continue to select On or Off. After a while, the network will take a response and tell you the result.

- 1> **Outgoing Calls:**

- **All Calls:** When this option is enabled, you cannot make any calls.
- **International Calls:** When this option is enabled, you cannot make any international calls.
- **International Calls Except to Home PLMN:** When this option is enabled, you can only make local calls when you are abroad or dial to the country in which the network provider is.

- 2> **Incoming Calls:**

- **All Calls:** When this option is enabled, you cannot make any calls.
- **When Roaming:** When this option is enabled, you cannot receive any incoming calls if you are out of reach of the network service.

- 3> **Cancel All:** Cancel the call barring. It also needs the Call barring password which is provided by the network operator.

- 4> **Change Barring Password:** Use to modify the Call barring password. It needs to input the original password before you modify.

- **Line Switching:** Switch to Line 1 or Line 2.

**Note:** If Line 2 is selected, making calls from Line 2 will depend on the network operator.

## Slave UIM call settings

### ▪ Call Waiting:

- 1> **Activate:** The mobile phone will connect to the network when Call Wait is enabled. After a while, the network will take a response by sending messages to ensure your operation. If Call Wait is enabled, the network will warn you. At the same time, another incoming call number will display on the screen when the first call is ongoing and a new call is coming.
- 2> **Deactivate:** If you cancel Call Waiting, the network would not warn you when the first call is ongoing and a new call is coming.
- 3> **Query Status:** With this function, you can inquire about the current status from the network.

### ▪ Call Divert:

This function allows your phone to divert incoming calls to another phone.

- 1> **Divert All Voice Calls:** When this function is enabled, all coming calls will be diverted to another phone. Set it On or Off, the phone will connect to the network. After a while, the network will take a response and tell you the result on operation.
- 2> **Divert All Data Calls:** You can divert all data calls with the need of your network operator's support.
- 3> **Cancel All Divert:** Use to cancel all diverting functions.

## Auto Redial

You can set the Auto Redial function On or Off. When you activate auto redial function, the phone will automatically redial the last called number after a while if you fail to connect to the number. The time for auto redial is up to 10 times. You cannot make any other calls when the Auto Redial is in process. Press Cancel to end Auto Redial.

## Speed Dial

Set the status on, and then you can set 8 groups for the speed dial. (Corresponding number keys are 2 to 9). In the standby mode, press and hold the number key to dial the corresponding number.

## Advance settings

- 1) **Call Time Display:** You can set Call Time Display On or Off. The call time will display when it is activated, .The call time will not be displayed when it is deactivated.
- 2) **Call Time Reminder:** In order to save the call cost, this function prompts you to end the call in time. You can select Off, Single, or Periodic. There is no prompt when Off is selected. You should enter a specific time between 1 and 3000 seconds when Single is selected. The phone will ring once when the time is up. You should enter a specific time between 30 and 60 seconds when Periodic is selected. The phone will ring once automatically at the specific time before the integral minute is up.
- 3) **Auto Quick End:** You can set it 'On' or Off and the auto quick end time 1~9999 seconds.

## Settings

In the standby mode, press left soft key to access **Menu > Settings**.

### Dual Mode settings

You can choose one mode as your desire.

### Phone Setup

#### Time and Date

- **Set Home City:** Select the desired home city.
- **Set Second City:** Select the Second city.
- **Set Time / Date:** Enter the current time and date.
- **Set Format:** Select a time and a date format.

#### Schedule Power On / Off

You can set the time for auto power on /off. Do turn the status on before using that function, and then the time.

**Note:** Please disable the Schedule Power On function before you board an airplane.

## **Language**

Select the desired language for the display text.

## **Pref. Input Methods**

Select the desired input method for the default input method.

## **Greeting Text**

Set On, input words as your greeting text once you switch on the phone .

## **Dedicated Key**

You can configure short cut functions for the Up, Down, Left and Right key respectively. In the standby mode, press any one of them to access the appointed function.

## **Auto Update Of Date And Time**

It can be set to On or Off.

## **Display Characteristic**

With this function you can configure the basic status of display characteristics including Wallpaper, LCD backlight, Screen saver, Power on Display, Power off Display, Themes, Main menu style, Show date and time, Show owner number, Keypad light set.

## **Network Setup(SIM card only)**

Please contact the network operator for the following network service.

### **Master/Slave SIM Network setup**

#### **1. Network Selection**

You can choose Automatic or Manual to select the network (Auto is recommended). When you select Automatic, the phone will make the preferential selection according to the network where the SIM card belongs. When you select Manual, you are required to select the same network as the registered network with the network operator by SIM card for your use.

#### **2. Preferred Networks**

Select the Preferred Networks. The default network is the network where the SIM card belongs. Select **Options** to perform the following operations:

- **Add From List:** Display all PLMN list.

- **New:** Create a new network and set the network priority.
- **Change Priority:** Reset the selected Network Priority.
- **Delete:** Delete the current preferred network.

### 3. GPRS Connection

You can set it when needed or Always to GPRS connection.

## Security Setup

### Master/Slave SIM security setup

#### Master/Slave SIM Lock

It is asked to input the PIN. It can be configured if the PIN is correct. If SIM card is set on, it needs to input the PIN every time you power on. If you enter incorrect PIN three times, it is asked to input PUK. PUK is used to release and modify the locked PIN. If PUK is not provided or missed, please consult your network operator.

#### Fixed Dial

If this function is enabled, only phone numbers in the Fixed Dial List can be dialed. PIN2 is required for this function. Network support is also required.

**Note:** If you enter PIN2 after the phone is switched on, PIN2 is not required before the phone is switched off. Therefore, please switch the phone off and switch it on again after configuration, if you do not want others to change the status of the Fixed Dial.

#### Barred Dial

If this function is activated, the phone numbers in the barred dial list cannot be dialed. PIN2 is required for the function. Network support is also required.

#### Change Password

You can change Master/Slave SIM PIN1, Master/Slave SIM PIN2.

##### 1> Master/Slave SIM PIN

- The original PIN is required before changing the PIN.
- Enter the new PIN. 4-8 numbers can be used for PIN.
- Enter New PIN to ensure the New PIN.

##### 2> Master/Slave SIM PIN2

- The original PIN2 is required before changing PIN2.
- Enter the new PIN2. 8 figures can be used for PIN2.
- Enter the New PIN2 again to ensure the new PIN2.

### **Slave UIM security setup**

#### **Slave UIM Lock**

It is asked to input the PIN. It can be configured if the PIN is correct. If SIM card is set on, it needs to input the PIN every time you power on. If you enter incorrect PIN three times, it is asked to input PUK. PUK is used to release and modify the locked PIN. If PUK is not provided or missed, please consult your network operator.

#### **Change Password**

You can change Slave UIM PIN.

- 1> Slave UIM PIN
  - The original PIN is required before changing the PIN.
  - Enter the new PIN. 4-8 numbers can be used for PIN.
  - Enter New PIN to ensure the New PIN.

#### **Phone Lock**

You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be required to enter the phone password. 4-8 numbers can be used for the phone password. The default phone password is **1122**.

#### **Auto Keypad Lock**

You can lock/unlock the phone keyboard and set the Key Lock Time to 5 seconds, 30 seconds.

#### **Change Password**

You can change Phone Password and Tracker Password.

- 1> Phone Password
  - The current phone password is required before changing the phone password.
  - Enter the new phone password.
  - Enter the new phone password again to ensure the new phone password.

- 2> Tracker Password
  - The current Tracker password is required before changing the Tracker password.
  - Enter the new Tracker password.
  - Enter the new Tracker password again to ensure the new Tracker password.

## **Restore Factory Settings**

Access **Settings** to select **Restore Factory Settings**, and press OK. All settings can be restored to factory settings with this function. The default password is **1122**.

## ***Media Center***

### **Camera**

CMOS camera is built in to your mobile phone. Digital zoom depends on the picture size. Select **Camera** in **Media center** menu to activate the camera, press OK key to take a photo.

Press left soft key to access the following options:

#### **Photos:**

- **View:** Browse the specified picture files.
- **Browse Style:** Select a browse style.
- **Forward:** Send to Wallpaper, Screen Saver, power on display, power off display, Phonebook, MMS, E-mail and Bluetooth.
- **Rename:** Rename the specified picture files.
- **Delete:** Delete the specified picture files.
- **Delete All Files:** Delete all picture files.
- **Sort by:** Sort all picture files by name, type, time, size and none.
- **Storage:** You can store the picture files in phone or T-Flash card.

#### **Camera Settings:**

- **LED Highlight:** You can set On/Off.
- **Shutter Sound:** Sound 1, Sound 2, Sound 3, Off.

- **EV:** You can adjust exposure value to improve the image quality according to the actual conditions.
- **Anti-flicker:** 50Hz, 60Hz.
- **Delay Timer:** Off, 5 seconds, 10 seconds, and 15 seconds.
- **Cont. Shot:** Off, 1 Shot, 3 Shot and 5 Shot.  
**Tip:** You can use the selection key repeatedly to select the desired option.

### **Image Settings:**

- **Image Size:** You can take and store pictures in various sizes. The larger the image size, the more memory space it will occupy on your phone's memory.
- **Image Quality:** Normal, High, and Low. Higher quality images will take up more space.  
**Tip:** You can use the selection key repeatedly to select the desired option.

**White Balance:** Adjust the color balance of the image. You can make your photo appear warmer or cooler.

**Scene Mode:** You can set Auto or Night.

**Effect Settings:** You can add a distinct appeal to your pictures with the following effects Normal, Grayscale, Sepia, Sepia Green, Sepia Blue, Color Invert, and Gray Invert.

**Set Frame:** Apply a decorative frame. Only for the photo with the size of 240 x 320.

**Storage:** You can store the picture files in phone or T-Flash card.

**Restore Default:** Camera Parameters will be restored to factory parameters with this function.

### **Image Viewer**

The Image viewer provides you with a quick view of the picture functions. Please refer to the Photos operations of the Camera for more details.

## Video Recorder

You can record videos of special moments with this function. Press OK key to start/pause record.

Press the left soft key to access **Options**:

### CamCorder Settings:

- **White Balance:** You can select from the following settings according to the need and conditions of the environment Auto, Daylight, Tungsten, Fluorescent, Cloud, and Incandescence.
- **LED Highlight:** Set On/Off.
- **EV:** You can adjust the exposure value to improve the video quality according to the actual conditions.
- **Night Mode:** You can select to keep the Night Mode On or Off.
- **Anti-flicker:** 50Hz, 60Hz.

### Video settings:

- **Video Quality:** You can select from the following Video Quality settings: Normal, Fine, High or Low. Higher Quality Videos takes up more space.
- **File Size Limit :** You can select from No Limit, 95k, 195k, and 295k to limit the size of the file.
- **Rec. Time Limit:** You can select No limit, 60s, 30s or 15s to limit the Video Recording Time.
- **Record Audio:** You can turn the Record Audio option On or Off
- **Encode Format:** Two encoding format, Mpeg4 or H.263, you can select.  
**Warning:** You can download MP4 or 3GP files from the internet, however, some non-standard MP4 or 3GP format is not supported by the mobile phone. At the same time, you must take care of files you download from the network, which may contain malicious software or otherwise be harmful to your device or PC.

**Effect Settings:** You can add a unique appearance to your Videos with the following Effect Settings: Normal, Grayscale, Sepia, Sepia Green, Sepia Blue, Color Invert, and Gray Invert.

**Storage:** You can store the Video in phone or T-Flash card.

**Restore Default:** Video Recorder Parameters will be restored to factory parameters with this function.

**Tip:** You can use the Left/Right or Up/Down selection key to select the desired setting option accordingly. Please refer the section “Camera” for more details.

## Video Player

You can perform the following operations:

- **Play:** You can play the specified video.
- **Forward:** You can forward the video to Screen Saver, power on display, power off display, Phonebook, MMS, E-mail and Bluetooth.
- **Rename:** You can rename the specified video.
- **Delete:** You can delete the specified video.
- **Delete All Files:** You can delete all videos.
- **Sort By:** You can sort all video files and display them in a new order; you can choose to Sort By Name, By Type, By Time, By Size and None.
- **Storage:** You can store the Video in phone or T-Flash card.

## Photo Editor

### Photo Artist

Use this menu to edit your photos using various editing tools. Select the desired photo to edit from the file manager.

1. **Auto Resize:** select **Options** to perform the following options:
  - Save as: save as a new photo.
  - Add effect: select an effect. Use left and right of selection key to change the effect, press “done” to add.
  - Add frame: select a frame. Use left and right of selection key to change the frame, press “done” to add.

- Add icon: select an icon. Use up, down, left and right of selection key to move the icon, press “done” to stamp.
- Add text: edit and add text. Use up, down, left and right of selection key to move the icon, press “done” to stamp.
- Adjustment: adjustment the photo.
- Flip: flip the photo.
- Expand Canvas: expand the photo.
- Help: help how to use the tool.

## 2. **Main LCD Clip**

The detailed operation is same as shown in the “Auto Resize”.

### **Image Tiles**

Access this option to select 2, 4 or 9 image tiles to display pictures, photos, or other images from your phone or memory card.

### **Audio Player**

Play, Stop, Back, Forward functions correspond to the Up, Down, Left and Right Key respectively. Select **List** to access the **Play List**, and then select **Options** to perform the following functions: play, view details, add to rings, setting the player and so on.

**Note:** To enjoy non-stop music, please download music to the **My Music** folder of phone or the memory card recognized as a USB disk on your PC. The Audio Player of the phone will automatically play music files from the **My Music** folder. You may need to refresh it manually from the settings in case you have earlier opted for manual refresh settings.

**Warning:** Make sure that the volume is appropriate while using the audio player.

### **Sound Recorder**

The mobile phone supports WAV, AMR or AWB recording formats. You can record conversations, which may be saved to the **Audio** folder under **File Manager**. If there is a record, press left soft key you can

Record, Play, Append (except the format: WAR), Rename, Delete, Delete All files, Settings and Forward.

**Note:** If a call is coming while recording, the record will abort and the data will be saved into the record folder automatically. AMR adopts dynamic compression and provides a longer recording time than WAV's while utilizing the same storage space.

## **FM Radio**

You can use your phone to listen FM radio stations once the original Headset is plugged into the accessories connector. Select **FM Radio** in the **Menu** to access the radio controls.

1. Press the Up/ down key to step down/up to the next frequency.
2. Press the Left/ right key to step down/up to the next FM station.
3. When the dot besides "search" on the screen to change the color of dot of blue or green alternately. Press the Up/ down key it will search the next FM station when the dot displays green (set Options > Settings > Search on > On).
4. Press the \* key and the # key to adjust radio volume.
5. Press **Options** to access the following options: power on FM, channel list, save channel, manual input and so on.

**Tip:** Long press of the Numeric key **0** in idle screen activates the FM function.

## **Schedule FM Record**

With this function, your phone can record the FM program as the schedules once the original Headset is plugged into the accessories connector. You can set the date and time, repeat style, channel settings and record settings.

## **Melody Composer**

The mobile phone enables you to compose your favorite music as the tune of the incoming call or alarm.

**Note:** The phone can save multiple tones edited by you according to the volume of tones.

When the Tune Editing List is blank, you can edit your favorite tunes by pressing “Add”. After you have finished editing, press **Options** to select a music instrument or playing speed to play the editing tunes. You also can save the editing tunes.

Select the edited music, and press **Options** to perform the following operations:

- **Play:** You can play the specified self-edit tunes.
- **Edit:** You can edit the specified self-edit tunes.
- **Add:** You can add new self-edit tunes.  
**Note:** A maximum of 150 notes can be edited with a piece of self-edit tune.
- **Rename:** You can modify the name of the selected self-edit tune.
- **Delete:** You can delete the selected self-edit tune.
- **Delete All Files:** You can delete all self-edit tunes.
- **Forward:** You can send the self-edit tones to User Profile, MMS, EMS, E-mail and send by Bluetooth.

In the window of Tone Editing, press **Options** to perform the following operations:

- **Play:** You can preview the edited tone.
- **Play Speed:** You can set the playing speed of the current editing tone.
- **Select Instrument:** You can select the music instrument playing the tone.
- **Save:** You can save the tone.

The rules by which the tone is composed as follows:

0: Insert one pause;

1: Insert Do;

2: Insert Re;

3: Insert Mi;

4: Insert Fa;

5: Insert So;

6: Insert La;

- 7: Insert Si;
- 8: Insert a vibration note;
- 9: Insert a backlight;
- \*: Modify the playing rhythm of the current tone;
- #: Modify the current note with halftone;
- ↑: Modify the tone of current note (high, middle, low);
- ↓: Modify the tone of current note (high, middle, low).

## **Slide Show**

With this function, you can enjoy your images comfortably. Choose one folder to play, and then the images will display on screen one by one.

## ***File Manager***

You can use the function to manage all types of files saved in the phone or memory card. Please access **Menu > File Manager**, and then select **Options**.

### **Phone**

There are all kind of files saved in your phone. You can do Open, New Folder, or Format.

#### **1> Open**

Use the function to access the root directory. It will list the default folders in system, the folder created by user and user files. (There are only system default folders at the first time of power on condition that the user never changes the root directory).

- If the specified one is 'folder', press **Options** to perform the following operations:
  - **Open:** You can open the specified folder.
  - **New Folder:** You can create a new folder in the specified folder.
  - **Rename:** You can rename the specified folder.
  - **Delete:** You can delete the specified folder.

- **Sort By:** You can sort all files in the specified folder of root directory and display them in a new order; you can select to Sort By Name, By Type, By Time, By Size and None.
- Press **Options** if the specified item is a file. For different kinds, you can perform the following operations:
  - **View (Play):** to browse or play the music/photo file.
  - **Forward:** to send the audio file to User Profile, MMS, E-mail, EMS or Bluetooth. Or send the picture file to the wallpaper, screen saver or Phone Book and so on.
  - **Details:** to list the date and size of the appointed file.
  - **Rename:** to rename the appointed file.
  - **Copy:** to copy any types of authorized files on your phone/card as the phone's memory is recognized as a removable Drive by your PC/Laptop. Press "Back" to cancel the Copy function. If the space is not enough to finish the operation of Copy, the phone will prompt you.
  - **Move:** to move the specified file to a specified place.
  - **Delete:** to delete the specified file.
  - **Delete All Files:** to delete all the files subject to the list that the specified file locates.
  - **Sort By:** to sort all files in the Removable disk and display them in a new order; you can select to Sort By Name, By Type, By Time, By Size and None.
- 2> **New Folder:** Use the function to create a new folder at a specified place.
- 3> **Format:** Use the function to format all data in the Removable disk. The system will recreate a new folder. The formatted data cannot be recovered, so please use this function carefully.

## **DRM Rights**

**DRM Right** (Digital Rights Management) is a system to protect media files authority. The folder "DRM Rights" in File Manager is used to save DRM jurisdiction files. One DRM jurisdiction file is usually

corresponding to a DRM media file. Generally speaking, when you download a DRM media file from the network and the DRM media file has a corresponding DRM jurisdiction file, please save it in the folder "DRM Rights" and confirm that you are the user.

## **Memory Card (Only for the card inserted)**

There are all of files saved in your T-Flash Memory Card. You can do Open, New Folder, Format.

### **1> Open**

Use the function to access the root directory of the memory card. It will list the folder created by user and user files.

If the specified one is 'folder', press **Options** to perform the following operations:

- **Open:** You can open the specified folder.
- **New Folder:** You can create a new folder in the specified folder.
- **Rename:** You can rename the specified folder.
- **Delete:** You can delete the specified folder.
- **Sort By:** You can sort all files in the USB disk and display them in a new order; you can select to Sort By Name, By Type, By Time, By Size and None.

Press **Options** if the specified item is a file. For different kinds, you can perform the following operations:

- **View (Play):** to browse or play the music/photo/video file.
- **Forward:** to send the audio file to User Profile etc. or send the picture file to the wallpaper, screen saver or Phone Book and so on.
- **Details:** to list the date, size and Copyright of the appointed file.
- **Rename:** to rename the appointed file.
- **Copy:** to copy any types of authorized files on your memory card as the card's memory is recognized as a USB Drive by your PC/Laptop. Press "Back" to cancel the Copy function. If

the space is not enough to finish the operation of Copy, the phone will prompt you.

- **Move:** to move the specified file to a specified place.
- **Delete:** to delete the specified file.
- **Delete All Files:** to delete all the files subject to the list that the specified file locates.
- **Sort By:** to sort all files in the USB disk and display them in a new order; you can select to Sort By Name, By Type, By Time, By Size and None.

2> **New Folder:** Use the function to create a new folder at a specified place.

3> **Format:** Use the function to format all data in the memory card. The system will recreate a new default folder. The formatted data cannot be recovered, so please use this function carefully.

## *User profiles*

### **Normal**

#### **1. Activate**

#### **2. Customize**

- **Tone Setup:** Includes Master SIM or Slave SIM/UIM Incoming Call, Power on, Power off, Master SIM or Slave SIM/UIM Message Tone, Keypad tone.
- **Volume:** Includes the volume setting of Ring Tone and Key Tone. The volume degree is from 1 to 7.
- **Alert Type:**
  - Ring: Just ringing, no vibration.
  - Vib. Only: Just Vibrating, no ringing.
  - Vib. and Ring: Vibrating and ringing.
  - Vib. then Ring: Ringing after vibration.
- **Popat Call Alert:** You can set On or Off.
- **Ring Type:**

- Single: Rings once when a call is coming.
- Repeat: Rings continuously when a call is coming.
- Ascending: Rings continuously and the volume increases gradually.
- **Extra Tone:**
  - Warning: If necessary, you will be warned by the prompt tone.
  - Error: You will be warned by a tone if you make a mistake.
  - Camp On: A prompt tone will be heard after searching the network successfully.
  - Connect: A prompt tone will be heard after a call gets connected..
- **Answer Mode:**
  - Any Key: Press any key to answer a call (Except of Hang Up Key and Right Soft Key).

## **Silent**

Please refer to “Normal” for more details.

**Note:** Press and hold the # key to enable or cancel the silent mode. In the meeting mode you cannot hear any sounds except the vibration indicates a call or a SMS/MMS is coming.

## **Outdoor**

Please refer to “Normal” for more details.

## **Indoor**

Please refer to “Normal” for more details.

## **Headset**

Insert the earphone and access the Headset mode automatically. This mode has no Activate option. Please refer to “Normal” for more details.

## **Bluetooth**

You will enter into Bluetooth mode after you activate the Bluetooth function. This mode has no Activate option; the detailed operation has been shown in the “Normal”.



## **Organizer**

### **Calendar**

You can view and edit the memo of a specified date with this function.

1. **View Tasks:** You can view or edit the daily arrangement of the day. Please refer to the “To Do List” for details
2. **Add Event:** You can select task types: Reminder, Meeting, Course, Date, Call and Anniversary.
3. **Jump to Date:** Skip to the specified date to view or edit the daily arrangements of the day.
4. **Go To Weekly/Monthly View:** Go to the specified date to check which week/Month it is.
5. **Indian Calendar:** You can view or edit: Tithi details, Festival list, Date to tithi, Yearly tithi.
6. **Onscreen Display:** It can be set to None or Indian.

### **Tasks**

You can View, Add, Edit, Delete, Delete All and Send vCalendar as desired. Start up the **To do list** and press OK. Press **Options** to access to add a new memo.

### **Alarm**

The mobile phone provides 5 alarms and you can set them as your need. If you have configured an alarm, an icon indicated that you have configured the alarm will appear. No icon will show if you don't set an alarm. Select “Edit” to set the current alarm.

### **World Clock**

Scroll to browse every city's time zones in the world map. The related date and time will display at the bottom of the screen.

### **Flash Light**

You can set it On or Off.

In the standby mode, press and hold the \* key to activate Flashlight function.

## **Services**

### **STK Service**

This service is offered as the SIM card service is provided by the network operator.

### **WAP**

WAP enable you tour around the Internet world easily and pleasantly. Please follow the steps described as below:

1. **Homepage:** The default Internet Web Address.
2. **Bookmarks:** Save the Web address you often use.
3. **Recent Pages:** Records after you browse the Website.
4. **Offline Pages:** You can view offline pages which you saved.
5. **Input Address:** Press the left soft key to access Enter Address, and then input the web address to go to the Internet.
6. **Service Inbox:** Messages sent to users from the Web site.
7. **Settings:** You can configure Select SIM, Edit Profile, Browser Options, Service Message Settings, Clear Cache, Clear Cookies and Trusted Certificates.

### **Data Account**

Press the left soft key to perform following steps:

1. **GSM Data:** Edit the GSM account.
2. **GPRS:** Edit the GPRS account.

### **Conn. Management:**

You could check the status of network connection.

## **Extra**

### **Calclator**

The calculator can add, subtract, multiply and divide. To use the calculator:

1. Press the # key to enter the decimal point

2. Press the up, down, left and right key and OK key to select + , - , × , ÷ , = respectively.
3. Press **Clear** to delete the figure.

### **Currency Converter**

You can make currency conversions. Press **OK** after enter the exchange rate, and then enter the number of the currency, and press **OK** to get the result.

### **Typical Stopwatch**

The stopwatch has two modes - Split Timing and Lap Timing, and you can view the records of both the modes.

### **E-Book Reader**

You can select this option to read text. This text reader only supports TXT format. The default one is "txt format file" under the **eBook** folder in the memory card.

### **Bluetooth**

You can establish a wireless connection with other compatible devices using Bluetooth technology. Such compatible devices include cell phone, computer, earphone and vehicle parts. For the compatibility of other devices please consult the manufacturer. You can use Bluetooth to send pictures, videos, music, notes and voice segments; or establish a wireless connection with compatible PC (to send files for example). As the communication between two Bluetooth devices is just wireless, so it's not necessary to keep the mobile phone dead against the other device. You shall ensure that the distance between two Bluetooth devices is no more than 10 meters (about 32 feet). But however, the Bluetooth connection may be interfered by obstacles like wall or other electronic devices.

In some circumstance, the application of Bluetooth may be restricted. Please consult your local authorities or service providers.

Application of Bluetooth technology in your cell phone will accelerate

the consumption of electricity power and thus shorten the service life of your battery.

**Power:** select to switch on or off Bluetooth.

**Inquiry Audio Device:** Searching for hand-free devices: after confirmation, your phone will search for Bluetooth devices and a list of available devices will be displayed in the screen. Select a Bluetooth device and input a correct password to establish a security connection.

**Note:** the initial password of Bluetooth earphone is 0000 or 1122. For details please contact your device provider.

**Remote Control:** Control other Bluetooth appliances through cell-phone far away, based on Bluetooth Technology.

**My Device:** search for new devices and show the list all Bluetooth devices within the scope of your phone. Select an available device, press OK and then you have the following options:

- **Connect:** Enter into service record option after confirmation.
- **Rename:** Rename a device.
- **Delete:** delete a device.
- **Delete All:** Delete all the devices.
- **Service List:** Press left soft key to Refresh FTP profile, OPP profile, DUN profile, SPP profile function.

**Active Device:** show all devices already connected.

**Settings:** after select, you have the following options:

- **Visibility:** after enabled, other devices can search this device.  
**Note:** This function is not available if advanced voice playing is enabled.
- **Change Device Name:** show and edit the name of device.
- **Authentication:** Enabled or disabled.
- **Audio Path:** you can select Leave in phone or Forward to Bluetooth headset.
- **Storage:** You can select the Phone or Memory card to save.
- **FTP Settings:** set the path and folder authorities for the share folder. And you can set access right.

- **BIP Settings:** set the path and folder authorities for the share folder.

**About:** show detail the Bluetooth serviced provided by this phone.

## ***Shortcuts***

You can set shortcuts for those functions you often use.

## ***Fun Spice***

The newly launched Fun corner from Spice Mobiles for its customers.

### **SpiceGang**

It is a wap portal from where user can download Ringtones, Wallpapers, Animations, Videos and other kind of content.

**Step1:** Check the GPRS settings for your operator.

**Step2:** Initiate SpiceGang wap portal to browse and download the content.

**Step3:** Charges for download apply as per operator pricing.

Explore the whole world of Entertainment with SpiceGang.

### **Reuters**

Reuters India gives you the latest India, World and Business news and more. Also, get the latest stock market information along with tools like the currency converter and weather in your city on your mobile phone.

**NOTE:** Please ensure that you have GPRS settings in your phone to open Reuters. Contact your operator for GPRS settings.

### **ibibo**

Now connect with the ibibo community on Spice Mobiles. Go and create your profile, search for people based on their age, sex & location, make new friends and send or receive blurbs. Invite your existing friends to join your new community.

The services pre loaded on Spice Phones are Make New Friends, Cricket Update, Movie Update, and Free SMS

Please check your GPRS settings before accessing Ibibo.

## **Voice Zone**

### **Bhakti Sangeet**

Spice Mobiles present Bhakti Sangeet on IVR. Use this portal to listen to your favorite devotional songs at the click of a button, virtually, anytime and from anywhere.

Bhakti Sangeet is a third party application. Use of it is at your sole discretion. Spice Mobiles disclaims all responsibilities from its usage, whether express or implied. The IVR codes are owned and provided by third party and may change without prior notice.

### **Sangeet**

Spice Mobiles presents Sangeet Portal – One Touch Access to the huge library of songs comprising of 17 languages and over 1 lakh tracks!

Sangeet is a third party application. Use of it is at your sole discretion. Spice Mobiles disclaims all responsibilities from its usage, whether express or implied. The IVR codes are owned and provided by third party and may change without prior notice.

### **Suno Sunao**

Spice Mobiles brings SUNO SUNAO to its customers. It gives the anonymity, thrill, excitement and above that a chance to speak and listen to the Chat friend!

SUNO SUNAO is a third party application. Use of it is at your sole discretion. Spice Mobiles disclaims all responsibilities from its usage, whether express or implied. The IVR codes are owned and provided by third party and may change without prior notice.

### **Popat**

After select, you have the following options:

1. Popat PHB Reader: You can set On or Off. With this function you can listen any stored no. in the Phone Book.
2. Popat Call Alert: You can set On or Off. With this function you can listen the no. of incoming call.

3. Popat Keypad tone: You can On or Off. With this function you can activate the voice tone for keypad.

### **Opera Mini**

Opera Mini is a fast and compact web browser that allows you to access the Internet on your phone. With Opera Mini, you can use your cell phone to access web sites and content, including your mail, community sites, news, blogs and more.

**NOTE:** Please ensure that you have GPRS settings in your phone to use Opera Mini. Contact your operator for GPRS settings.

### **MGurujee**

MGurujee is India's leading M-Learning portal delivering unique anytime anywhere mobile phone based learning experience with access to a wide variety of quality knowledge content from market leaders.

**NOTE:** Please check your GPRS settings before accessing MGurujee.

### **E-mail2SMS**

Emergic E-mail2SMS is a product of Netcore Solutions Pvt. Ltd. provided by Spice Mobiles. E-mail2SMS allows you to receive e-mail on your phone via SMS without GPRS. You can Read, Reply, Compose and Forward your e-mails via SMS. This service is only available for Gmail, Indiatimes and Corporate Account Holders. Spice Mobiles offers FREE subscription for one month.

1. Just send SPICE START <Location> to 575758 to register for E-mail2SMS service.

For composing new mail type NEW <Receiver's E-mail-Id> S: <Subject> B: <Message> and send it to 575758.

2. For replying to any mail types REPLY <Message-Id> <Message> and send it to 575758.

3. For replying to all in the mail type REPLY <Message-Id> <Message> and send it to 575758.

4. For forwarding the mail type FWD <Message-Id> <Receiver's E-mail-Id> <Message> and send it to 575758.

5. For reading the remaining part of mail types READ <Message-Id> and send it to 575758.

**NOTE:** Message-Id is the number which you get at the end of SMS. i.e., 01, 02, 03, 04.

## **Game & Applications**

### **Java Games & Applications**

#### **Java**

You may download the latest Java games and applications from the Internet. To download the application software (the web address), please follow the steps described as below:

- 1> In the standby mode, select Menu > Services > WAP > Bookmarks. You should input the web address and name it.
- 2> To connect to the internet, select Option > Go to.
- 3> Please choose your favorite application software, and then select Option > Go to.
- 4> Your phone will ask you to download it, with their name, version number, type, and size.
- 5> Select "Yes", and then you should select where to save that application file. Phone is recommended.
- 6> These downloaded games and applications are automatically saved to the **Java**.

Select a Java game or an application and then press the OK key to run it. You can view the details of installed games or applications, remove them from your device, and specify installation settings.

Warning: Only install and use applications and other software from trusted sources.

#### **Java Setting**

This function includes settings of Java Audio, Java Vibration, Java Network and Heap Size. You can configure those options as desired.

#### **Java Default Security**

There are 3 options you can set: Third Party, Untrusted domain, Restore Settings. For Third Party and Untrusted domain, you can define

which functions the Java application can access. The value that you can set for each functionality depends on the protection domain of the software package.

- Network access: Create a data connection to the network
- Auto Invocation: Open the application automatically.
- Messaging: Send messages.
- Multimedia: Capture images , record videos or sound.
- Read user data: Read your calendar entries, contacts, or any other personal data.
- Write user data: Add personal data, such as entries to Contacts.
- Local connectivity: set Prompt at first, Prompt once, Never, Prompt always.

After you finished settings, please select Restore Settings to save.

### **Games**

There are several interesting games in the phone. Please refer to instructions from the game menu for more details.

**Tip:** The game menu includes Start Game, Game Level, Best Grades and Game Help.

### **Dazzle Ringtone**

Abb Har Bar Naya Gana Bajega! You like lot of songs and also like to set those all songs to be a ring tone of your mobile phone?? For this you have to change ring tone every time with new song.

Not anymore. D-6666 gives you the facility of Dazzle/Shuffle Ringtones. Where you can set up to 10 songs in one time as your ring tone.

Now whenever a new call will come every time a new song will play as your ring tone.

### **ContactsBackup**

This application allows easy transfer and backup of contacts stored in your phone / SIM. It supports import and export of Native, VCF and CSV files. Native format is used for phone to phone transfer of contacts. VCF and CSV formats are used for PC sync.

## Mobile Tracker

Now be sure of your mobile phones with Mobile Tracker offered by Spice Mobiles. This feature allows users to track their phone if they are lost or stolen. Switch on Mobile Tracker application and whenever a new SIM is inserted in your phone you will receive a SMS on pre defined numbers.

**TIP:** This function requires your network support. When you set Tracker Mode OFF, and then you can set the tracker number you want. The default password is **1122**.

## Others

### Private Menu

Did some one scan your Personal Messages when you were out? Get smarter with D-6666's Private Menu advantage. Keep your Phone numbers, SMS and Call Records password protected so that no one gets to know your secrets. Can Keep 1000 Numbers of Phone Book, SMS up to 1000, 20 each of Dialed Calls, Received Calls and Missed Call Records, your personal notes like different passwords, account nos. etc (Above all are shared between both Private and Non-private Menu and for SMS with SIM Card SMS and handset SMS)

### Call List

- 1 ) **White list:** you can set 10 numbers. When this white list is enabled, you can but receive the calls from the numbers entered in the white list.
- 2 ) **Black list:** you can set 10 numbers. When this Black list is enabled, you would not receive the calls from the numbers entered in the Blacklist.

## IMPORTANT INFORMATION

### ***Use of Passwords***

Your mobile phone and SIM card have various passwords. Those passwords avoid unauthorized use of your phone and SIM card. You can change PIN, PIN2 and phone password in the “Settings > Security Setup > Change Password”.

### **Phone Code**

The Phone code can be used to avoid unauthorized use of your phone. The factory setting for the phone code is 1122. If phone lock is enabled, you will be asked to input the phone password when you switch on your phone.

### **PIN (4 to 8 digits)**

The PIN (Personal Identification Number) code protects your SIM card unauthorized use. The PIN code is usually supplied with the SIM card. When the PIN code request is enabled, the password is asked every time the phone is turned on.

Three times wrong PIN input, the SIM card will be locked and you will need to use the PUK to unlock it. PUK is usually set by the network operator.

1. Enter the correct PUK to unlock the SIM card, and then enter the new PIN and press **OK**.
2. If you are prompted to enter the new PIN again, enter it and press **OK**.
3. If the PUK is correct, the SIM card will be unlocked and the PIN will be reset.

### **PUK (8 digits)**

The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. Please contact your network operator for the code.

Note: Ten times wrong input in succession, the SIM card will be invalid and you need to consult with your network operator for a new SIM card.

## **PIN2 (4 to 8 digits)**

The PIN2 code, supplied with some SIM card, is used for some functions, such as Call Cost, Fixed Dial and so on. Please consult your network operator to confirm whether your SIM card supports those services or not.

Three times wrong PIN2 code input, the SIM card will be locked and you will need to use the PUK2 to unlock it.

1. Enter the correct PUK2 to unlock PIN2, and then enter the new PIN2 and press **OK**.
2. If you are prompted to enter the new PIN2 again, enter it and press **OK**.

## **PUK2 (8 digits)**

The PUK2 code, supplied with some SIM card, is required to change a blocked PIN2 code. It may be supplied with the SIM card. If not, contact your network operator.

Note: Ten times wrong input in succession, the SIM card will be invalid and you need to consult with your network operator for a new SIM card.

## **Barring Code**

To activate call barring, you need a Barring Code. You obtain the password from your service provider.

## ***Battery Information***

### **Charing and Discharging**

- The charger is designed to be used in temperatures between 0°C to 40°C.
- Do not charge the phone in wet and damp conditions.
- Use only batteries approved by the phone manufacturer and recharge your battery only with the charges approved by the manufacturer.
- We strive to produce products in compliance with global environmental standards

- The charger meets the standard for safety of information technology equipment and office equipment use. It must be used for this purpose only.
- Your phone is powered by a rechargeable battery. Full performance of the battery is achieved only after two or three complete charge and discharge cycles.
- When the battery level is low, “Low Battery” will be displayed on the LCD screen. If you have selected Alert Tone (Warning Tone of any profile in Profiles), the phone will sound the alert tone.
- When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than 12 hours, since overcharging may shorten its life.
- Temperature extremes will affect the ability of your battery to charge.

### **Tips for Battery**

- Placing the battery in hot or cold places, such as in a closed car in summer or winter, will reduce the capacity and lifetime of the battery.
- Do not let the metal contacts on the battery touch another metal contact. It could short-circuit and damage the battery. Use the battery only for its intended purpose.
- Do not disassemble or modify the battery by yourself.
- Do not clean the battery with water or any organic solvent.
- Always keep the battery dry.
- The battery can be charged and discharged many times but it will wear out as last. When the talk and standby time is obviously shorter than normal, please change the original battery approved by manufacturer.
- Do not short-circuit the battery.
- Turn off mobile phone before removing the battery.
- Do not dispose of batteries in fire.
- If you smell anything strange from the battery or find that the battery is overheated, you should stop using it immediately and contact the authorized After Service Center in your region.

- If you don't use the battery for a long time, please fully charge the battery before you store it.



Batteries should never be placed in municipal waste. Batteries must be recycled or disposed of properly. Please follow local regulations for disposal of batteries.

## **Usage & Maintenance**

To keep your product working well, take a moment to review the following usage & maintenance tips, which will help you to fulfill any warranty obligations and to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of children's reach.
- Your products are not water-resistant. Keep it dry. Precipitation, humidity and liquids contain minerals that will corrode the connectors.
- Always treat your products with care and keep it in a clean and dust-free place.
- Do not expose your product to extreme high or low temperatures. Your phone operates best in temperature between 15 °C and 25°C. Minimum and maximum temperatures recommended by the manufacturer are -10°C and 55°C.
- Do not expose your product to open flames or lit tobacco products.
- Do not attempt to disassemble or modify your product.
- Do not drop, throw or try to bend your product.
- Do not paint your product.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it.
- Do not keep any magnetic thing, like credit cards, near your product.
- If you find that the battery has any cracks, deformation or anything else, you should stop using the battery immediately.
- If the electrolyte leak out and contact your skin or clothes, you should immediately use soap and clean water to clean it. In case the

electrolyte splatters into your eyes, you must use the clean water to wash your eyes thoroughly and go to the hospital immediately.

- If your phone or any accessory doesn't function normally, please send them to the nearest authorized service facility. The qualified personnel will assist you, and if necessary, arrange for service.

## ***Emergency Calls***

This phone, like any wireless phones, operates using radio signals, wireless and landline networks which cannot guarantee connection in all conditions. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies)

To make an emergency call:

1> Switch your phone on.

Some networks may require that a valid SIM card is properly inserted in the phone

2> Dial the official emergency number. Emergency numbers vary by location.

While making an emergency call, please remember to give all information as possible. Never disconnect the call please until you are given permission to do so.

## APPENDIX

### ***Appendix A: Guidance On Entry Methods***

This phone provides several input methods which can be used in editing the Phone Book, short messages, memos, greetings, alarms and other text applications.

#### **The Icons of Input Methods**

After entering different kinds of edit windows (including edit phonebook, short messages. etc.), the icons of input are as follows:

“**123**”: The Entry method of Numeric appears as: “123”

“**ABC**”: The entry method of Multitap ABC appears as: “ABC”

“**abc**”: The entry method of Multitap abc appears as: “abc”

“**eZi ABC**”: The entry method of eZiText® Smart ABC appears as: “eZi ABC”

“**eZi abc**”: The entry method of eZiText® Smart abc appears as: “eZi abc”

“**HI**”: The entry method of Multitap Hindi appears as: “HI”

#### **How to Switch Between the Input Methods**

Press the # key to switch the input methods.

**E.g.:** If the current input is Smart ABC the screen will show “eZi ABC”.

Press the # key, to go to Smart abc, and the screen will show “eZi abc”.

#### **Numeric, Multitap ABC and Multitap abc Input Methods**

##### **Numeric**

When the icon of the input method is “123”, press the number keys to enter the numbers directly.

Multitap ABC and Multitap abc

When the icon is “ABC” or “abc”, press the number keys ( 2 to 9 ) repeatedly until desired letters appear in the text area. Press the number key once for the first letter. Press twice for the second letter. So, press number keys to reach the desired letter in the same way. Press 0 key to enter a blank space or “0”.

**Note:** while using the Numeric entry, please switch to the method of Multitap ABC and Multitap abc first if a blank space is required, and then press 0 to enter a blank space.

### **How to Input Special Symbols**

If you want to input special symbols, such as ". ! ? = < >", Etc., please following steps as below:

Press the \* key to display the symbols. Press the Up/Down, or Left/Right Key to move the cursor in the symbol table, and select one symbol. Press the right soft key to cancel the symbols selection.

## **Appendix B: Troubleshooting**

This section lists some problems that you might meet while using your phone. If you feel that your phone do not operate normally, please reset settings first, and then follow Troubleshooting Guide. If you are still unable to solve problems, please contact the authorized service center or the store from where you purchased the phone.

<b>Problem s</b>	<b>Solutions</b>
Cannot answer or make a call	Make sure that the phone has been switched on. Make sure that the battery is charged. Make sure that the signal intensity is high enough. Make sure the own number function in the call setting is system preset or number sending. Make sure the line switch in call setting is the system preset line. Check whether you have set up call barring or fixed dialing or any other safety function. Check whether you have set up call diverts. Check whether you have inserted the proper SIM card correctly.
Low voice	Check if the volume has been set too low.
No ring	Check whether you have set up the" Vibrating Only" option. Check whether the ring volume is not too low Move away from a noisy place to check if you can hear the phone ringing. Check whether you have set up call diverts.
LCD unclear	Check whether the contrast has been set too low.

## ***Appendix C: Available Accessories***

### **Dual Stereo Personal Hands Free Handset**

The Dual Stereo Personal Hands Free Handset allows you listen to music or to make conversations with hands free comfort.

### **Travel Charger**

You can charge the phone with the Travel Charger when you are on the move.

**Note:** Please use approved accessories to get the most out of your phone.

## ***Appendix D: FCC Statement***

This device has been tested and found to comply with Part 15 of the FCC rules. Performance is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.
3. Changes or modifications not expressly approved by the manufacturer or authorized service center could void the user's authority to operate this equipment.