



VIDEOCON

Videocon V1424

Table of contents

Legal Notices	v	My V14246
Introduction	1	Phone Layout	6
Safety Precaution / Measures	1	Screen Icons	9
Road safety	1	Basic Operations	10
Switch off in potentially hazardous environments	1	Make a Call	10
Emergency Calls	1	Making a Call using Call History	10
Battery Use	2	V - Connect	11
Getting Started	3	SIM applicator / STK	11
Inside the Box	3	WAP	11
Installing and Removing the Battery	3	Data account	11
Inserting SIM Cards	4	Call history	12
Inserting the Memory Card	4		
Charging the Device	5		

Table of contents

Multimedia13

Camera	13
Image viewer	14
Video recorder	14
Video player	14
Audio player	15
Sound recorder	15
FM radio	15

Games16

Messages17

SMS	17
MMS	17
Chat	18
Voicemail server	18
Broadcast message	18

File manager19

Settings20

General call settings	20
Dual SIM settings	21
Phone setup	22
Network setup	23
Security setup	23
Restore factory settings	24
Sound effects	25
User profiles	25

Table of contents

Phonebook26
Quick search26
Search contact26
Add new contact26
Copy all26
Delete26
Caller groups27
Extra numbers27
Phonebook settings27
Caller picture28
Caller ringtone28
Organizer29

Legal Notices

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of VIDEOCON is prohibited. VIDEOCON operates on a policy of continuous development. VIDEOCON reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall VIDEOCON be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as it is". Except as required by applicable law, no warranties of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a

particular purpose, are made in relation to the accuracy, reliability or contents of this document. VIDEOCON reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with VIDEOCON Executive.

Introduction

Safety Precaution / Measures

Please comply with these precautions / measures to avoid dangerous or illegal situation and ensure peak performance of your phone.

Road safety

The use of a mobile phone while driving is illegal and should be avoided at all costs. If you need to make or receive an urgent call, move your vehicle to the side of the road and allow it to come to a complete stop before using your phone.

Switch off in potentially hazardous environments

Switch your phone off while boarding an aircraft. Signal from your phone can affect aircraft system. You are legally obliged to comply with this recommendation.

Switch your phone off when entering any explosive area. Observe any provided guidelines or regulations.

Emergency Calls

In case of an accident or an emergency, dial 100 (Police), 101 (Fire) or 102 (Ambulance) from your phone. Being emergency numbers, these are toll free and can be reached even from areas where the network signal strength is very poor.

Introduction

Battery Use

First time charging must be done using the regular charger and not using the USB cable.

During the first 3-4 charge sessions, charge the battery until it has been fully charged according to the battery level indicator. This ensures higher battery backup and extends the battery life.

Avoid partial charging. Wait for the battery to discharge completely before charging it again.

Charging through the USB Cable should be reserved during an emergency.

Use the device in vibrating mode only on rare occasions.

Getting Started

Inside the Box

The device package consists of:

- Transceiver
- Battery
- Charger
- Hands free kit
- User's Manual
- Warranty Card


Installing and Removing the Battery

To install the battery:


1. Locate the groove at the top of the phone and pull out the back cover from the phone.
2. Push the battery in the battery compartment in such a way that the connectors of the phone are aligned with the connectors on the battery.

To remove the battery:

1. Turn off the phone, if it is connected to an external power source, unplug it.
2. Remove the back cover.

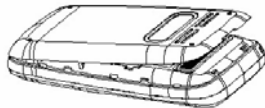

3. Locate the groove at the bottom and pull out the battery from the battery compartment.

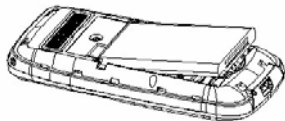


Getting Started

Inserting SIM Cards

V1424 supports dual-SIM cards. The procedure for inserting both SIM cards is identical, only the slot for each is different. To insert SIM cards:

1. Turn off the phone, if it is connected to an external power source, unplug it.
2. Remove the back cover, and pull out the battery from the battery compartment.
3. Slide the SIM card in the slots in such a way that the metal connectors of the SIM card are facing down.

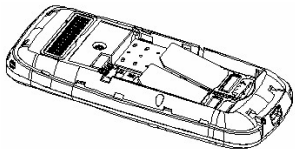


Inserting the Memory Card

You can use a microSD card of up to 1GB capacity to store personal files such as photos, audio files, and videos. To insert the memory card:

1. Turn off the phone, if it is connected to an external power source, unplug it.
2. Remove the back cover, and pull out the battery from the battery compartment.
3. Unlock and lift the memory card cover.

Getting Started

4. Place the memory card with metal connectors facing down.
5. Lock the memory card cover.

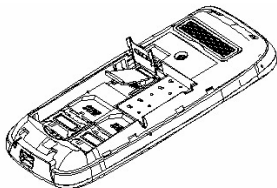

Charging the Device

Insert the Plug of your charger to the charging port at the bottom of the phone.

When you begin to charge the battery, the stripe of signal strength on the top right corner of the screen starts to roll. When battery gets completely charged, the stripe becomes stable and stops rolling.

My V1424

Phone Layout



My V1424

Left Soft Key

In idle mode, click to access the call history of SIM1. Scroll to select the desired number, and press again to make a call.

Right Soft Key

Use to perform functions that display in the lower right of the display screen. In idle mode, click to access the Contact list.

Dial Key

Press Dial key in idle mode to view Call history of SIM2. Scroll to select the desired number, and press again to make a call.

End Key

End or reject calls; Press and hold this key to turn phone on/off; cancel function and return to the idle screen.

Navigation Keys

- Scroll to select options.
- In the idle screen, use direction keys to open dedicated keys applications.
- While creating a message, use direction keys to select a word from the dictionary.
- In function menu, scroll to open desired function.

My V1424

0-9 Keys

In standby mode, use the 0-9 keys to enter a number you wish to call. In standby mode, press and hold 1 key to enter Voice mailbox, press and hold 2-9 keys to directly call the number set in the speed dial list. In edit status, press to input numbers and characters. In edit mode, except input number, press 0 key to input space. In functional menu, press numbers to speed select submenu items.

* & # Keys

Functions vary in different situations or function menus:

- On idle screen, press "*" for symbols.
- During a call, press and hold "*" to input + for an international call.

- On input screen, "#" to switch between different input methods.
- In standby mode, press and hold # key to switch between Silent mode and previous mode.
- In the FM and Audio player applications, "*" and "#" are used to decrease and increase volume respectively.
- In video player application, "*" is used to switch between full screen and normal view











OK Key






- In idle mode, press to open the Menu.
- In menu, use to perform the functions that display in the lower center of the display screen.

My V1424

Screen Icons

Indicator icons provide information such as battery level, network signal strength and so forth.

Icon	Definition
	Signal Strength of SIM 1
	Signal Strength of SIM2
	Keypad locked
	New MMS
	New SMS
	GPRS
	Missed call
	Using headset
	Battery level
	Stopwatch is on

Icon	Definition
	Pending alarm
	Incoming Call Alert Mode Ring
	Incoming Call Alert Mode Vibrate
	Incoming Call Alert Mode Vibrate and Ring
	Incoming Call Alert Mode Vibrate then Ring

Note: Depending on your country or service provider, the icons shown on the display may vary

Basic Operations

Make a Call

In idle mode:

- Enter the phone number including the area code. Press **Clear** to erase a digit.
- For international calls, insert the '+' sign followed by the country code, area code (without the initial zero and phone number.
- Press the dial key. Once the call is complete, press the **End** key.

To receive a call, press **Options** → **Answer** or receive it directly by pressing the **Dial** key.

Making a Call using Call History

The number and time of each call that you make or receive is stored in the **Call history** module of the device. You can retrieve a number from call history and initiate a new call. To do so:

1. Press the **Dial** key to view a list of recent call history.
2. Use the up and down navigation keys to select the number you wish to call, and press the **Dial** key.

V - Connect

SIM applicator / STK

STK (SIM Tool Kit) is shown only if it is provided by your SIM card. For further details, please contact your network operator.

WAP

WAP function enables you to use the phone to surf the Internet. You can select the SIM card and the associated profile from the Settings option.

Data account

This function enables to set the account information. You can edit the account information from the GSM data and select the GPRS data to use from GPRS option.

Call history

Use this menu to view the dialed, received or missed calls. On the Idle screen, press **Menu → Call history**. The **Call history** sub-menu comprises of the following options for both the SIM cards:

- **Missed Calls:** displays the list of latest missed calls.
 - **Dialled Calls:** displays the list of latest dialled calls.
 - **Received Calls:** displays the list of latest received calls.
 - **Delete call logs:** Delete Missed calls, Dialled calls, Received calls and Delete all on the SIM card.
 - **Call timers:** view last call time, dialled calls, received calls and reset all time of the SIM card.
- **Call cost:** view last call cost and total cost and so forth of the SIM card. You can also reset cost and set the maximum cost and the price per unit for SIM card. It requires network support.
 - **Text message counter:** view and reset the numbers of text messages that are sent and received from the SIM card.
 - **GPRS counter:** view and reset the total amount of data was sent or received.

Multimedia

Camera

Your phone is equipped with a camera on the back of the device that can be used to take still photographs. Select **Menu** → **Multimedia** → **Camera** to launch the camera application. Once the camera application is enabled, press the **OK** key to capture the image. Press the options keys to access the following sub-options:

- **Photos:** View the images captured by your phone. You can view, set the image as a wallpaper/screensaver, rename or delete the images.
- **Camera settings:** select the shutter sound, EV and banding for the camera. You can select the frequency of the light by selecting the correct banding frequency.
- **Image settings:** set the size and quality of the captured image.
- **White balance:** select the white balance for the camera to increase the intensity of white light.
- **Scene mode:** select the auto or night mode for the camera to capture images in dark.
- **Effect settings:** set the effects that you wish to use for the captured images such as grayscale, sepia, or color invert.
- **Storage:** select the storage location of the captured images to phone memory or to memory card.
- **Restore default:** restore the default settings of the camera.

Multimedia

Image viewer

Image viewer stores all your pictures which are captured by the phone camera. It provides you the option to view, rename, and delete the images.

Video recorder

You can record videos on your V1424 phone. Press the **OK** Key to start the recording. The recorded videos are automatically saved to **Video** folder in **File Manager**. Press options to access the following sub-options:

- **Camcorder settings:** set the white balance, EV and the banding of the video recorder.
- **Effect settings:** You can select different effects for your recorded videos, such as grayscale, sepia, and so forth.

- **Storage:** select the storage location of the recorded videos to phone memory or to memory card.
- **Restore Default:** restore the default settings of the camcorder.

Video player

Use Video Player to watch recorded videos directly from the **Video** folder in the **File Manager**.

Note: The file size of the videos you record cannot exceed 414KB.

Multimedia

Audio player

Your phone provides you a friendly audio player device for entertainment purpose. You may enter the audio player via main menu. Music tracks must be saved in **My Music** folder in **File Manager** in order to be automatically detected and added into the default play list. You may listen to music through the headset or loudspeaker. The user-friendly interface is specially designed to allow easy access to common functions such as play, pause, and stop.

Note: Use the "*" and "#" keys to decrease and increase volume respectively.

Sound recorder

Your phone supports two kinds of recording formats: **AMR** and **WAV**. Select a format from settings in options. A call may also be recorded and saved to the phone or the memory card. Depending upon the requirement, you may set the quality of the recorded sound to high or low

FM radio

The FM radio application turns the mobile phone into a portable FM Radio device. It primarily provides users the interface to a single-chip electronically turned FM stereo radio for listening to live-broadcast stations. You must connect the hands free to your phone as it works as an antenna.

Games

Select **Menu** → **Games**, to access the **Games** menu. Game interface offers option to select a game. You can select the following games from the interface:

- Copter
- Puzzle
- Robot
- Fruit

You can On/Off the BGM (Background Music), Sound Effect, Vibration and Volume from the game setting option.

Messages

In Messages, you can send and receive text and multimedia messages. To launch messages, on the idle screen, select **Menu → Messages** to view the available functions. Message functions are available depending on network services that your service provider supports.

SMS

- **Write message:** Create and send a text message.
- **Inbox:** Messages received using SMS are stored in the Inbox folder.
- **Outbox:** Sent messages are stored in the Outbox.
- **Templates:** Your phone contains pre-defined templates for frequently used messages.

- **SMS Settings:** Edit the profile settings and the common settings, and check the memory status.
- **Backup SMS:** Create backup of your text messages stored in your inbox and outbox to the memory card.

MMS

- **Write message:** Create and send a multimedia message.
- **Inbox:** Messages received using MMS are stored in the Inbox folder.
- **Outbox:** Sent messages are stored in the Outbox.
- **Drafts:** Saved messages are stored in the draft folder.

Messages

- **Templates:** Your phone contains pre-defined templates for frequently used messages.
- **MMS settings:** You can edit the settings for compose, send, retrieve, filter and the server profile. You can also check the memory status of the phone.

Chat

Chat enables you to enter 2 different user's default settings (Chat room1 and Chat room2) to enable sending and receiving the messages. Chat option enables you to see the complete conversation on a single window.

Voicemail server

Voicemail server is an interactive system for storing, processing and reproducing verbal messages through a voicemail server. The service is operator dependant and the settings are provided by the operator upon activating the service on the SIM card.

Broadcast message

Your phone is capable to receive and store broadcast messages. You can set the receive status to ON/OFF. These messages are stored in the **Read Message** folder.

File manager

View the files stored in the phone memory and on the microSD card.

Settings

General call settings

This option enables you to set the general call settings of the phone. The various options are:

- **SIM1/2 call settings:** Enables you to set the call settings for SIM1 and SIM2. The options are:
 - **Caller ID:** Enables to set the caller ID status of the phone.
 - **Call waiting:** Enables to Activate / Deactivate call waiting and check the query status.
 - **Call divert:** Enable to Activate / Deactivate call diversion and check the query status.
- **Call barring:** Enables you to restrict the calls that you make and receive with your phone. You can set outgoing calls, incoming calls, cancel all or change barring password. It is a network based service.
- **Line switching:** Enables you to select the Line 1/2 for the phone.
- **Black list:** Enables you to set the status of the black list and edit the numbers from which you do not wish to receive calls.
- **White list:** Enables you to set the status of the white list. If you set the status to on, you will receive calls from only the numbers that you edit in the white list.
- **Auto redial:** Enables to set the auto redial to ON/OFF.

Settings

- **Speed dial:** Enables you to make a call by pressing and holding a number key when on the idle screen. You may assign the numbers between 2-9 from your phonebook.
- **Call time display:** Enables you to display the call duration.
- **Call time reminder:** Set the call duration (in seconds), after which the phone plays a beep sound to indicate the call duration.
- **Auto quick end:** Set the duration (in seconds), after which the call is disconnected.
- **Background sound:** You can select whether to set background sound when making a call and select effect list.
- **Voice changer:** Enables to change your voice during an active call.

Dual SIM settings

You have following options listed under Dual SIM settings:

- **Dual SIM active:** This option activates both the SIM cards.
- **Only SIM1 active:** This option activates only SIM1.
- **Only SIM2 active:** This option activates only SIM2.
- **Flight mode:** This option disables all RF and Bluetooth based communication for both SIM1 and SIM2, however, enables you to use other features/functions of the phone.

Settings

Phone setup

This option enables you to set the time, auto power ON/OFF, language, shortcuts and so forth for the phone.

- **Time and date:** Lets you set the Time and date on the phone.
- **Schedule power ON/OFF:** Lets you set a particular time on the phone when the phone should Power on/off itself.
- **Language:** Choose phone language. Currently only English is supported.
- **Preferred input methods:** This enables you to select the text input method. They are – Smart ABC/abc, Multitap ABC/abc, and Numeric input.
- **Display characteristics:** Change the look and feel of your phone. Options are:
 - **Wallpaper:** Set your favorite wallpaper on the phone.
 - **Screen saver:** Lets you set an image as a screen saver.
 - **Show date and time:** Enables you to see the date and time on the idle screen.
 - **Show owner number:** Enables you to see the owner name and number on the idle screen.
- **Key Vibration Settings:** Enables you to ON/OFF the vibration when you press a key.
- **Greeting text:** Let you set your own greeting message when you power on the phone.

Settings

- **Shortcuts:** Enables you to set the shortcut for the different applications.
- **Dedicated key:** Enables you to set the dedicated keys for up, down, left and right navigation keys.
- **LCD backlight:** Enables you to set the backlight time for the phone.

Network setup

Network setup gives the user the option to select a desired network and addition of a new network to the network list. The network setup gives you the following options:

- Network selection (Automatic/Manual)
- **Preferences:** Will list down the entire network IDs (depending on the SIM card used).

Security setup

This option enables you to set the SIM lock, phone lock, anti theft to enhance the security of your phone.

SIM1/2 security setup

This option enables you to set the SIM lock, Fixed dial, Barred dial and change the SIM password.

Phone lock

This option enables you to set a lock for your phone that is required each time you change the SIM card of the phone.

Settings

Personal Data Security

This option enables you to password protect your data such as phonebook and call history to avoid unauthorized access. If you enable this option, then you need to input the password to open your protected folders. The default password is 0000.

Auto keypad lock

This option enables you to set the auto keypad lock time. You can set the time so that the phone keypad automatically locks when in idle screen.

Change Password

This option enables you to change the password of the phone.

Anti theft

This function enables you to track your phone in case it gets lost. The default password for anti theft is "0000". If someone inserts another SIM card in your mobile, you will receive an SMS to the assigned number from the new SIM card to know who is using your mobile.

Restore factory settings

Selecting this option will ask you to enter the password to restore the phone to factory settings. The default password is 0000.

Settings

Sound effects

This option enables you change the sound effects of the audio player.

User profiles

This menu allows you to set the ring tone, alert type, ring volume, etc when you receive an incoming call or a new message so that you can adapt the use of your phone to different types of call environments. The available profiles are, General, Meeting, Outdoor, Indoor, Headset, Bluetooth, and Power save. If you activate the Power save profile, the backlight and the brightness, and the ringtone volume of the phone will be lowered to save power.

Phonebook

Phonebook is a location in your phone's internal memory on which you can store names and numbers of contacts. The SIM cards also allow you to store phone numbers, though the service provider decides the capacity. Even though, the SIM card and the phone's internal memory are physically separate, they are used as a single entity known as the Phonebook on the phone.

Quick search

Input few letters from a contact name. All matching contacts display, use the Up or Down navigation key to select the required contact and press the Dial key.

Search contact

Input the name to search the designated record.

Add new contact

Add a new contact to the phonebook. You can choose to store the contact in the SIM card or phone memory.

Copy all

Use Copy All function to select and copy all contacts to SIM1, SIM2, Phone, or vice versa.

Delete

Delete selected contacts. You can choose to delete contacts from SIM card or from the phone, or delete contacts one by one.

Phonebook

Caller groups

You can set five caller groups, including names, caller ringtone, caller picture and the group members. You can set objects by pressing the left and right direction keys.

Extra numbers

You can set the owner number, service dialing number and SOS number for SIM1 and SIM2.

Phonebook settings

The available options in phonebook settings are:

- **Memory Status:** Enables to check out the memory status individually for both the SIM and phone respectively.
- **Preferred Storage:** The memory type you want to use for storing contacts. The options available are SIM1, SIM2, and Phone.
- **Fields:** Enables to set the different fields which are to be entered during addition of a contact.
- **My vCard:** Store your personal contact information as a vCard to allow quick sharing of your details with contacts. Once you have entered your contact information, use the Send my vCard option to send your vCard via SMS or through file transfer over Bluetooth.
- **vCard version:** Enables to select the vCard version that you wish to use.

Phonebook

- **Phonebook backup:** Backup and retrieve the phone contacts to the microSD card.
- **Save contact notify:** You get a popup to save, each time you receive or make call to a number that is not saved in the phonebook.

Caller picture

Assign an image to a new contact or to the already existing contact.

Caller ringtone

Assign a ringtone to a new contact or to the already existing contact.

Organizer

Use this menu to keep track of your schedule. You can also use convenient features, such as Calendar, Alarm, and World Clock. To access this menu, press [Menu] in Idle mode and select **Organizer**. The available options are:

- **Utility:** The shortcut for various applications so that they can be accessed from a single place.
- **Calendar:** Helps you to keep track of your monthly schedule.
- **Tasks:** You can use your phone to keep track of all your Date, Call and Anniversary.
- **Alarm:** Set the alarm to ring at a specific time.
- **Calculator:** You can use your phone's calculator to perform basic operations such as addition, subtraction, multiplication and division.
- **Unit converter:** Use this feature for the converted units of weight and length.
- **Currency converter:** Use this feature for the exchange rate conversion.
- **World clock:** Set your local time zone and find out the current time in another part of the world.
- **Health:** Use your phone for calculating the Body Mass Index and the Menstrual cycle.
- **Stopwatch:** The phone comes with 2 types of Stopwatch: Typical stopwatch and nWay stopwatch.

Organizer

- **eBook reader:** With this function, you may read any file in TXT format saved in the memory card or the phone memory.
- **Bluetooth:** This function enables you to switch ON/OFF the Bluetooth, search for the new devices, and change the settings of the Bluetooth such as the visibility, device name and so forth.