

# Contents

<b>Getting Started</b> .....	1
Removing the Back Cover .....	1
Battery .....	1
SIM and Memory Cards .....	3
Charging Your Phone .....	5
Powering Phone On/Off .....	7
Getting to Know Your Phone .....	8
Key Functions .....	9
Idle Mode .....	11
Indicators and Icons .....	11
Main Menu .....	13
<b>Entering Text</b> .....	15
Changing Input Mode .....	15
Entering Letters .....	16
Entering Numbers .....	16
Entering Symbols .....	16
<b>Calls</b> .....	17
Making a Voice Call .....	17
Using the Address Book .....	17
Using Call Options .....	17
Receiving Calls .....	18
Adjusting the Volume .....	18
Using Call History .....	18

<b>Messages</b> .....	19
Type of Messages.....	19
SMS and MMS .....	19
Instant Messaging.....	21
Voice Mail .....	24
Message Folders .....	24
Using Message Options.....	25
Message Settings.....	25
Using Message Templates .....	26
<b>Mobile Email</b> .....	27
<b>Address Book</b> .....	29
AT&T Address Book .....	29
Adding Contact.....	29
Searching Contact.....	30
Setting Speed Dial.....	30
Making a Speed Dial .....	30
Using Address Book Entry Options.....	31
<b>Bluetooth</b> .....	32
Enabling <i>Bluetooth</i> .....	32
My Devices.....	32
Sending Data .....	33
Receiving Data .....	33
<b>Mobile Web</b> .....	34
Using the att.net Homepage.....	34
Visiting a Website .....	34

<b>Tools</b> .....	36
Alarm .....	36
Calendar .....	36
Calculator.....	37
Tip Calculator.....	38
Stopwatch.....	38
World Time.....	38
Currency Conversion.....	39
Recent Calls .....	39
<b>Entertainment</b> .....	40
Pictures .....	41
Video .....	41
Music .....	42
Voice Recorder.....	44
<b>Social Networking - AT&amp;T Social Net</b> .....	45
<b>Yellow Pages - YPmobile®</b> .....	48
<b>AT&amp;T GPS</b> .....	50
<b>Settings</b> .....	54
Sound Profile Settings.....	54
Phone Settings .....	54
Display Settings.....	55
Connection Settings.....	56
Call Settings.....	56
Security Settings.....	57
Flight Mode.....	59

 
<b>Accessibility</b> .....	60
TTY Mode.....	60
HAC (Hearing Aid Compatibility) Mode.....	60
<b>Care and Maintenance</b> .....	61
General Care.....	61
General Guidelines.....	63
CTIA Requirements.....	64
Aircraft Safety.....	65
Hospital Safety.....	65
Road Safety.....	66
Vehicles Equipped with an Airbag.....	66
Third Party Equipment.....	67
Declaration of Conformity.....	67
Disposing of Your Phone.....	67
Emergency Service.....	68
Privacy Information.....	69
Turn on the HAC Setting.....	69
Copyright Notice.....	69
<b>Troubleshooting and FAQs</b> .....	70
<b>Specifications</b> .....	74
<b>FCC Compliance</b> .....	75
<b>Radio Frequency (RF) Energy</b> .....	76
<b>Notes</b> .....	78

# Getting Started

**Notes:** In this User Manual, “press a key” means to press the key and release it, while “hold a key” means to press the key for at least two seconds and then release it.

## *Removing the Back Cover*

- ① Hold the **Power/End Key** to turn off the phone.
- ② Lift the bottom of the back cover from the notch and remove the back cover as shown below.

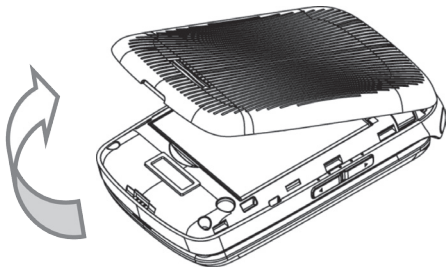


## *Battery*

### Installing the Battery

**Notes:**

- The phone automatically turns off if the battery power is too low.
- If you are not going to use the battery for a long time, remove it from the phone and store it in a cool dry place.

 - ① Hold the **Power/End Key** to turn off the phone.
- ② Remove the back cover of your phone.
- ③ Carefully insert the battery with the contacts located against the metal springs.
- ④ Push down the battery until it clicks into place.

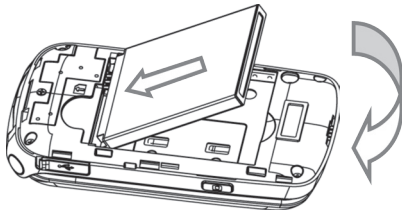

- ⑤ Replace the cover on the back of the phone.

**Caution:** Make sure the cover is lined up before pressing it into place. Do not force it. Doing so will damage the back cover.

## Removing the Battery

- ① Hold the **Power/End Key** to turn off the phone.
- ② Remove the back cover of your phone.
- ③ Lift the end of the battery near the bottom of the phone to remove it.

## *SIM and Memory Cards*

 
### Inserting the SIM (Subscriber Identification Module) Card

You can obtain a SIM card from your service provider when you sign on as a subscriber.

#### **Caution:**

- *Do not bend or scratch your SIM card. Keep the card away from electricity and magnetism.*
- *Don't touch the metal surface of the SIM card. Doing so could cause information on the card to be lost or destroyed.*
- *Disconnect the charger and other accessories from your phone and remove the battery before inserting and removing your SIM card.*

- ① Hold the **Power/End Key** to turn off the phone.
- ② Remove the back cover of your phone.
- ③ Hold the SIM card with the metal contacts facing downward and the cut corner at the upper right. Insert the card into the card holder and push it until it clicks into position.
- ④ Replace the cover on the back of your phone.

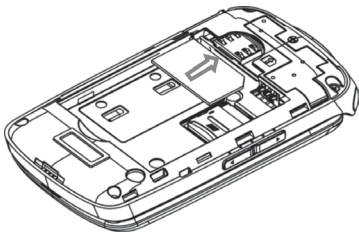

## Removing the SIM Card

 
- ① Hold the **Power/End Key** to turn off the phone.
- ② Remove the back cover of your phone.
- ③ Gently remove the SIM card from the card holder.

## Inserting the Memory Card

The memory card gives your phone a very large memory capacity. This allows you to save multimedia data, including images, photos, MP3 audio files, and ringtones. You can also use this memory card to store other files.

**Tip:** Your phone can support a memory card with the capacity up to 8 GB.

- ① Hold the **Power/End Key** to power off the phone.
- ② Remove the back cover and battery.
- ③ Push the cover of the memory card slot in designated direction and lift it up.
- ④ Carefully place the memory card into the memory card slot and lock the cover as shown below.
- ⑤ Reinsert the battery, replace the back cover, and turn the phone on.

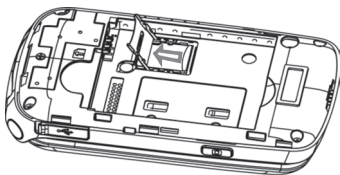

**Caution:** Only use approved memory cards for this device. Any use of unapproved memory cards might cause loss of data or damage to your phone.

## Removing the Memory Card

- ① Hold the **Power/End Key** to power off the phone.
- ② Remove the back cover and battery.
- ③ Push in the designated direction and lift the cover of the memory card slot.
- ④ Carefully remove the memory card.

## Charging Your Phone

Your phone uses a rechargeable battery. When you first unpack the phone, the battery is not fully charged, but there might be enough power to turn on the phone. You can use the provided charger to charge the phone battery.

- ① Open the USB port cover.
- ② Insert the charger's USB adapter into the USB port.



- ③ Plug the charger into a standard AC wall outlet.
- ④ When the battery is fully charged, unplug the charger and disconnect it from the phone.

**Notes:**

- The phone automatically switches off if the battery power is too low.
- Make sure the charger's connector is inserted correctly. Do not force the connector into the port.
- The battery will remain fully charged for 3 to 4 hours.
- Only use the charger provided by the original provider. Using an unapproved charger might be dangerous and violate the authorization and warranty rules of the phone.
- If the phone is used too often when the battery is low or not used for a long time, the screen may not display the charge indicator until the battery has been continuously charged for 10 to 40 minutes.
- To get the maximum performance out of your battery, it is recommended that you completely charge the battery before using the phone for the first time. A new battery's full performance is only reached after three complete charge and discharge cycles have been finished.
- Charging is only possible within a temperature range of 32°F to 113°F.

## *Powering Phone On/Off*

**Note:** Do not turn your phone on in areas in which wireless phone use is not permitted, or when it could cause interference or danger.

Hold the **Power/End Key** to turn your phone on or off.

### **Tips:**

- When prompted, enter your PIN (Personal Identification Number) code or handset code and press the **OK Key**.
- The PIN code is the password provided by your network service provider. You cannot use the SIM card without it.
- When the PIN code or handset code is accepted, the phone automatically searches for the network. After a few seconds, your phone displays idle mode.

## Getting to Know Your Phone



Back Cover

Speaker



Earpiece

Internal Display

Left Soft Key

4-Way Navigation Key \*

OK Key

Right Soft Key

Send Key

Power/End Key

Microphone

Clear & Back/  
Calendar Key

Speakerphone Key

 
Task Key

Voicemail Key

Vibrate Mode Key

**Note:** For more information on your device, visit [att.com/Z331](http://att.com/Z331)

\*Customizable

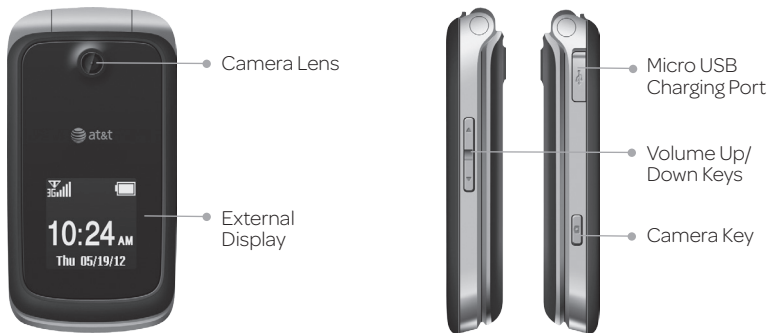


## Key Functions

Key	Description
OK Key	From idle mode: Press to open att.net. In lists and menus: Press to start an application/function.
4-Way Navigation Key	From idle mode: Used to activate preset functions. In lists, messages, and menus: Used to scroll up, down, left, and right.
Left Soft Key/ Right Soft Key	The bottom line of the display shows the options that can be selected using the <b>Left</b> and <b>Right Soft Keys</b> . The options change depending on the application/function being used.

Key	Description
<b>Send Key</b>	Press to dial or answer calls. From idle mode: Press to show a list of all calls.
<b>Power/End Key</b>	Hold to turn the phone on/off. Press to end a call. Press to reject an incoming call. Press to cancel dialing. Press to return to idle mode.
<b>Volume Key</b>	Adjust the volume of the phone.
<b>Camera Key</b>	Press to activate the camera.
<b>Task Key</b>	Shortcut to start Task Manager application in all scenarios.
<b>Speaker Key</b>	Press to activate the speakerphone while on a call.
<b>Clear &amp; Back Key/Calendar Key</b>	Press to delete the character on the left of the cursor when entering text or numbers. Hold to delete all characters during text entry. Press to return to the previous page when navigating menus or browsing the internet. From idle mode: Press to view the calendar.
<b>Number Keys</b>	Press the number keys to enter a phone number.
<b>* Key</b>	Press to enter *. From idle mode: Hold to lock the keypad. In an editing screen: Press to enter punctuation and symbols.
<b># Key</b>	Press to enter #. In an editing screen: Press to change the input method. From idle mode: Hold to activate meeting mode with vibration.

## Idle Mode

 After powering on the phone, when the name of the network is displayed on the screen, the phone is in idle mode and ready for use. The display has 4 areas:

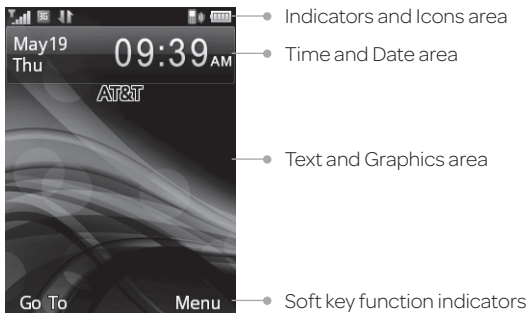















## Indicators and Icons

Indicator	What it means
	Signal strength
	3G network
	EDGE network
	GSM network

Indicator	What it means
	New SMS
	New MMS
	New Email
	New voicemail

 
## Indicators and Icons (continued)





Indicator	What it means
	Mute and vibrate
	Headset mode
	GPRS attach
	<i>Bluetooth</i> on
	All calls divert
	Battery status
	Missed call

Indicator	What it means
	Roaming
	HSDPA mode
	The message memory is full
	Vibrate and ringing
	Headset and vibrate mode
	GPRS in use
	Alarm

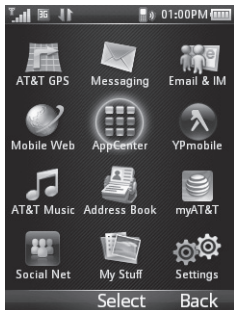







## Main Menu

From idle screen, press the **Right Soft Key** for **Menu** to access the main menu.



Icon	What it means	Description
	AT&T GPS	Contains GPS applications like AT&T Navigator
	Messaging	Send and read SMS or MMS messages
	Email & IM	Mobile Email and Instant Messaging
	Mobile Web	Access the web with att.net

## Main Menu Icons (continued)

Icon	What it means	Description
	AppCenter	Online App store
	YPMobile	Yellow pages
	AT&T Music	Mobile music experience
	Address Book	Add and edit contacts
	myAT&T	Access billing, usage, and feature information and manage your account
	Social Net	Access social networks like Facebook®, MySpace™, and more
	My Stuff	Contains applications and tools such as Alarm, Calendar, and more
	Settings	Set up and personalize your phone

# Entering Text

## *Changing Input Mode*

You can enter text into your phone using the following input methods: ZiAbc, abc, Abc, ABC, and number input. You can also switch the language between English and Spanish.

## Current Text Mode

When you are in a field that allows characters to be entered, the text input mode indicator is shown in the upper right corner of the display.

## Changing Input Mode or Language

Press the **# Key** and select an input method or language.

## Using Predictive Text (ZiAbc)

The predictive text method is based on a built-in dictionary and generates words from the combination of letters pressed.

- ① Press each key once that corresponds to the letter you want to enter. The letters are shown on the display as they are entered. The list of candidate words changes as each key is pressed.
- ② When the candidate words are displayed, use the **4-Way Navigation Key** to highlight a candidate word and then press the **OK Key** to **Select**.
- ③ Press the **0 Key** to insert a space, or press the **\* Key** to select symbols.
- ④ Press the **Clear & Back Key** to delete the letter to the left of the cursor. Hold the **Clear & Back Key** to delete all entered text to the left of the cursor.

## Entering Letters

Press a number key (2 through 9) multiple times until the preferred letter is shown on the screen. Press once to enter the first letter on the keypad, press twice quickly to enter the second letter, and so on.

- Press the **0 Key** to add a space.
- Hold the **0 Key** to enter 0.

### Notes:

- When using “Abc” mode, only the first letter will be capitalized.
- After entering the first capital letter, the input mode will be changed to “abc” automatically.

## Entering Numbers

Press the **# Key** and select 123. The input method icon () is shown on the display. You can enter numbers directly using the number keys.

**Tip:** When using the number input, you need to switch to other text input methods if you want to input a space by pressing the **0 Key**.

## Entering Symbols

- ① Press the **\* Key**.
- ② Use the **4-Way Navigation Key** to select a symbol.
- ③ Press the **OK Key**.

# Calls

## *Making a Voice Call*

- ① From idle mode, enter a phone number.
- ② Press the **Send Key** to call the number.

## *Using the Address Book*

- ① From idle mode, select **Menu > Address Book**.
- ② Highlight a contact and press the **Send Key** to call the contact.

## *Using Call Options*

During a call, you can press the **Left Soft Key** for more options. The options vary depending on the functions you are currently using.

**Hold/Unhold:** Put the current call on hold or retrieve the call.

**End call:** End the current call.

**Record:** Record the current call. Press the **OK Key** to stop recording.

**DTMF off/on:** Enable or disable the sending of the DTMF tones.

**Message:** Switch to the Messaging menu during a call.

**Contacts:** Switch to the Address Book menu during a call.

**Browser:** Browse the Internet during a call.

## *Receiving Calls*

When a voice call comes in, press the **Send Key** or the **OK Key** to answer the call.

**Tip:** If you have connected a headset to the phone, you can press the button on the headset to answer the call.

## *Adjusting the Volume*

During a call, press the **Volume Keys** to adjust the earpiece or speaker volume.

## *Using Call History*

From idle mode, press the **Send Key** to check the **All calls log**.

# Messages

## *Type of Messages*

Your phone provides the following message types:

- Text Messages (SMS)
- Multimedia (Picture) Messages (MMS)
- Instant Messaging (IMs)

The Short Message Service (SMS) lets you send and receive text messages to and from other mobile phones and email addresses. To use this feature, you may need to subscribe to your service provider's message service.

The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture messages) to and from other mobile phones and email addresses. To use this feature, you may need to subscribe to your service provider's multimedia message service.

AT&T Instant Messaging lets you chat in real time using your favorite instant messaging provider, such as AIM®, Yahoo!® Messenger, or Windows Live™ Messenger.

## *SMS and MMS*

### Sending a New SMS Message

- ① Select **Menu** > **Messaging** > **Create message**, and press the **OK Key** for **Select**.
- ② Enter the recipient's number or press the **OK Key** for **Contacts** to choose the recipient's from your address book.
- ③ Press down on the **4-Way Navigation Key** to move to the **text field**.
- ④ Enter a message. Press the **Left Soft Key** > **Template/My words** to insert preset messages.
- ⑤ Press the **OK Key** for **Send** to send the message.



## Sending a New MMS Message

- ① Select **Menu** > **Messaging** > **Create message**, and press the **OK Key** for **Select**.
- ② Enter the recipient's number or press the **OK Key** for **Contacts** to choose the recipient's from your address book.
- ③ Press down on the **4-Way Navigation Key** to move to the **text field**.
- ④ Enter a message. Press the **Left Soft Key** > **Insert** to insert a picture, audio, or video file.
- ⑤ Press the **OK Key** for **Send** to send the message.

### Notes:

- To save an unfinished message, press the **Left Soft Key** for **Options** and select **Save** to save it to the Drafts folder.
- Messages in Outbox and Drafts folder can be edited and sent.

## Viewing a Message

The  or  envelope icon will appear on the information bar to identify you that you have received a new message.

From idle mode, select **Menu** > **Messaging** > **Inbox** to check your messages.

## Instant Messaging

The AT&T instant messaging service can enable you to chat in real time using your favorite instant messaging provider, such as AIM, Yahoo! Messenger, or Windows Live Messenger.

By using this service, you can stay connected with your wireless phone.



- ① From idle mode, select **Menu > Email & IM > IM**.
- ② Select the name of your instant messaging provider, and then select **OK**. The remaining steps will vary slightly for each provider.

Messenger

Select e-mail domain  
@hotmail.com

E-mail address:  
@hotmail.com

Password:

Sign In

Save Password  
 Auto Sign in

Options Select Back

- ③ Select the **Screen Name** field and then enter your screen name/email/ID.
- ④ Select the **Password** field and enter your password.

Messenger

Select e-mail domain  
@hotmail.com

E-mail address:  
andy@hotmail.com

Password: abc  
\*\*\*\*

Sign In

Save Password  
 Auto Sign in

Options Back

- ⑤ Use the **4-Way Navigation Key** to move down and press the **OK Key** for **Sign In**.

**Tip:** You can choose to mark the checkbox before Save Password and Auto Sign in; and next time when the AT&T instant messaging is launched, you will automatically sign in to your messenger account.

- ⑥ After sign in, select the name of a contact who is currently online.
- ⑦ Enter your message, and then press **Send**.



## *Voice Mail*

### Voice Mail Settings

From idle mode, select **Menu > Messaging > Settings > Voicemail number** to check the voicemail number. Your voicemail phone number is preset by your service provider. You do not need to set it manually.

### Receiving a Voice Mail

When the system sends you a message notifying you that there is a new voicemail, from idle mode, hold the **1 Key** to access the voicemail service.

**Note:** Contact your service provider for more information on using the voicemail service.

## *Message Folders*

The **Inbox** folder contains all of your received messages. In this folder you can view your received messages and reply to them or forward messages to another recipient.

The **Outbox** folder contains all messages that were not sent during the last attempt. In this folder you can edit or resend your messages.

The **Sent** folder contains messages that were sent successfully. From this folder you can edit or forward messages to another recipient.

The **Drafts** folder contains drafts and unfinished messages. In this folder you can complete or resend your messages.

## Notes:

- You cannot receive new messages if the message memory is full.
- The total amount of space available for saving messages is determined by the space available on the phone and SIM card.

## Using Message Options

While viewing the contents of the Inbox, press the **Left Soft Key** to access the following options, which apply to the highlighted text message:

- **Reply:** Reply to the message.
- **Call Sender:** Call back the originator of the message.
- **Save number:** Save the originator's number to your Address Book.
- **Delete:** Delete this message.
- **Lock/Unlock:** When the message is locked, you will not be able to delete it.
- **Forward:** Forward this message.
- **Sort:** Select to sort the messages by time or read/unread.

## Message Settings

From idle mode, select **Menu > Messaging > Settings** to change the MMS/SMS/Template settings.

### MMS Settings (Multi. msg. setting)

**Retrieval Settings:** You have two choices:

- **Automatic:** Retrieve the new multimedia message automatically without selecting the notification message and receiving.
- **Manual:** Retrieve the new multimedia message manually.

**Time per page:** Set the play time of each page.

**Anonymous Msg.:** You can choose to accept or reject anonymous messages.

**Connections:** Please consult the service operator for detailed information.

**PUSH Message:** You can accept or reject PUSH messages.

## SMS Settings (Text msg. setting)

**SMS center number:** Service center number given to you by your service provider.

## Template Setting

The phone has 10 templates for SMS/MMS, and you can edit them.

## *Using Message Templates*

- ① From idle mode, select **Menu > Messaging > Create message**.
- ② Move to the **Text field** and select **Options > Template**.
- ③ Select a template and press the **OK Key** to insert the template.

# Mobile Email

Carry your email inbox in your pocket! With Mobile Email 3.0, you can access numerous providers, including AT&T,<sup>®</sup> AOL,<sup>®</sup> Yahoo!, Gmail,<sup>™</sup> AIM, Windows Live, and others.



- ① In idle mode, select **Menu > Email & IM > Mobile Email**.
- ② Select the name of your email provider. The steps that follow will vary depending on your provider.
- ③ When you select **Other Providers**, you may be asked to accept terms of service and/or to select your email domain. Follow the on-screen instructions.
- ④ Enter your email address and password.

Yahoo! MAIL

Yahoo! ID:  
ztemorgan@yahoo.com

Password: Case Sensitive  
\*\*\*\*\*

Sign In

Remember me

Help Sign In Cancel

- ⑤ Press the **OK Key** for **Sign In**.
- ⑥ After successful login, you will be able to view all the emails in your inbox. Select an email and press **Read** to read it; press **Options** for more operation.

Yahoo! MAIL

✉ Sam Green  
Dinner and a Movie?  
Wed, May 11, 11:33 AM

✉ Yahoo! Mail

✉ Sam Green

✉ Gmail Team

✉ Facebook

✉ Facebook

✉ Yahoo!

Options Read Close

# Address Book

You can store contacts with a variety of phone and fax numbers and additional address details.

The phone can store up to 500 items. The capacity of the phone book on your SIM card depends on the type of SIM card provided by your service provider. The saved location is identified by the icon shown before the contacts.

## *AT&T Address Book*

AT&T Address Book automatically synchronizes your contacts between your phone and online address book. This means that you can easily restore contact information if you ever upgrade, damage, or lose your phone.

### To Activate AT&T Address Book:

Follow the prompts that are shown the first time you open the address book on your phone, or manually activate from your contact list via **Options > Settings > AT&T Address Book**.

**Manage Your Contacts Online:** Visit <http://att.com/addressbook>.

- Add or edit contacts
- Import contacts from other address books
- Add contacts from Yellowpages.com
- Find maps and directions for contacts
- Send text messages to contacts or groups

## *Adding Contact*

- ① Select **Menu > Address Book > Left Soft Key** for **Options > Add new contact** and press the **OK Key** for **Select**.
- ② Enter the information of contact, such as name, number, and so on.
- ③ Press the **Left Soft Key** for **Options > Save** to save the new contact.

## Searching Contact

- ① Select **Menu > Address Book** to view all the contacts on your phone.
- ② Enter a letter, and then the phone will show all the contacts starting with such a letter.  
eg: To search “John”, press the **5 Key** once for ‘j’. All names starting with ‘J’ or ‘j’ are displayed.
- ③ Refine the search by entering a subsequent letter that can occur anywhere in the name.  
eg: ‘Jn’ will find ‘John’ and ‘Julian’, but not ‘James’.

## Setting Speed Dial

- ① From idle mode, press **Menu > Address Book**.
- ② Use the **4-Way Navigation Key** to select a contact, press the **Left Soft Key** for **Options** and select **Set as speed dial**.
- ③ Press the **Up Key** or **Down Key** to select an empty slot.
- ④ Press the **OK Key** for **Assign** to finish.
- ⑤ Press the **Right Soft Key** for **Exit** to return to the previous menu. Or press the **Power/End Key** to return to the idle screen.

## Making a Speed Dial

**Note:** The **1 Key** is reserved for the Voicemail number.

- ① From idle mode, press and hold the corresponding number key (**2 through 9**) in the speed dial list to make the call.
- ② Press the **Power/End Key** to end the call.

## Using Address Book Entry Options

- ① From idle mode, select **Menu > Address Book**.
- ② Scroll to the desired contact and press the **Left Soft Key** for more options:

**Call:** Call the highlighted contact.

**Send message:** Send SMS or MMS messages to this contact.

**Edit Map:** Map your contacts through phone numbers and addresses listed within your address book.

**Add to group:** Add this contact to a group: Family, Friends, or Work.

**Edit contact:** Edit this contact information.

**Delete contact:** Delete this contact.

**Share contact info:** Send this contact as a business card via MMS message.

**Add new contact:** Create a new contact.

**Add new group:** Create a new group.

**Set as speed dial:** Set speed dial for this contact.

### Settings:

- **AT&T Address Book:** Access the AT&T service to synchronize your contacts between your phone and online address book.
- **SIM management:** Copy contacts to or from the SIM card, or delete contacts from the SIM card.
- **Delete multiple:** Delete a batch of contacts.
- **Speed dial:** View and edit the speed dial list.
- **Name display:** Choose the way a name is displayed, which can be First & Last or Last & First.
- **Contact list:** Choose to Display all, Contacts, or Yellow Cards only.
- **About:** View the information of your AT&T Address Book.

# Bluetooth®

Your phone includes support for *Bluetooth*, which can be used to connect your phone to a wireless headset. You can also use it to transfer files between your phone and other *Bluetooth* devices, such as another phone or a laptop. Not all applications or devices can be supported because *Bluetooth* is an open forum and different manufacturers have different standards and implementation.

## Enabling Bluetooth

By default *Bluetooth* is disabled on your phone. If you enable *Bluetooth* and turn off the phone, *Bluetooth* will be disabled. When you turn the phone on, *Bluetooth* will automatically be enabled.

- ① From idle mode, select **Menu > Settings > Connections > Bluetooth**.
- ② Press the **OK Key** to set **Bluetooth to On**.
- ③ Go down to **Discoverable** and press the **OK Key** to set it to **On**.
- ④ Go down to **My Bluetooth Info** and enter the phone name.
- ⑤ Press the **OK Key** to save the settings.

**Note:** Set **Discoverable** to **On** to allow your phone to be found by other compatible devices.

## My Devices

- ① From idle mode, select **Menu > Settings > Connections > Bluetooth > My devices**.
- ② Press the **OK Key** to search for available *Bluetooth* devices.
- ③ Highlight a device from the list and press the **OK Key**.
- ④ To connect to the device, enter the passkey when prompted and press the **Left Soft Key** for **Pair**.

There are two options for *Bluetooth* connection:

- **Automatic:** Set another *Bluetooth* device that is connecting to your phone as an authorized device.
- **Always Ask:** Set another *Bluetooth* device that is connecting to your phone as an unauthorized device that must ask before connecting.

**Tip:** Some devices don't connect to another *Bluetooth* device automatically. You need to highlight the device name in the **My devices** list and press the **OK Key** to connect with it.

## ***Sending Data***

Before sending data, please confirm the following two items:

- *Bluetooth* function is enabled.
- The paired device is visible, paired, and connected.

- ① Select your desired file, and select **Left Soft Key** for **Options > Send > Via Bluetooth**.
- ② Select the aim device from the device list, and press the **OK Key** to send the file.

## ***Receiving Data***

- ① Enable *Bluetooth* function.
- ② If the paired device tries to send a file to your phone, one popup dialogue will appear in your screen.
- ③ Press the **Left Soft Key** for **Yes** to accept the incoming file, or press the **Right Soft Key** for **No** to reject the incoming file.

# Mobile Web

Browse the web directly from your mobile phone. Check the weather, visit your favorite websites, and enjoy access to the Internet on the go. From idle mode, select **Menu > Mobile Web**.

## *Using the att.net Homepage*

The att.net homepage features three tabs, which you can access by scrolling left or right with the **4-Way Navigation Key**:

- **Web:** Enter a web address; search the Internet with Yahoo!; use, add, or manage shortcuts; view social networks; find movie information and buy tickets; and access your account.
- **Local:** Set your location, search locally, see maps and traffic, find movie show-times, get local information, check the weather, and see local news updates.
- **Popular:** Get the latest updates on news, finance, sports, entertainment, and more; use email, instant messaging, and social networking.

## *Visiting a Website*

- ① From the att.net homepage, press down on the **4-Way Navigation Key** to highlight the address bar and press the **OK Key**.
- ② Enter a web address and press the **OK Key**.
- ③ To access a link on a website, scroll to it using the **4-Way Navigation Key** and press the **OK Key**.

Mobile Web options:

- **Home:** Return to the att.net homepage.
- **Go to URL:** Enter a new web address.
- **Go to Search:** Enter search terms.
- **History:** View your web browsing history.
- **Go to Bookmarks:** Access your list of favorite sites.
- **Add to Bookmarks:** Add a site to your list of favorites.
- **Reload:** Reload the current page.
- **Find in Page:** Search the page for a term.
- **Settings:** Adjust browser settings.
- **Help:** Find help and answers to frequently asked questions.
- **Exit:** Exit the web browser.

# Tools

## Alarm

This feature allows you to set an alarm to ring at a specific time.

- ① From idle mode, select **Menu > My Stuff > Tools > Alarm**.
- ② Press the **OK Key** for **Edit** and configure the alarm as required using the Alarm Setup Screen:

Alarm Time	Set as required
Alarm Type	Daily, Workday, Weekly, Once
Snooze	Off, 5, 10, 15, 30 minutes
Ringtone	On/Off
Ringtone Type	ATT tone.mid, select <b>Edit</b> to change
Alarm Remark	Optional

**Tip:** Even if the phone is turned off, the alarm will automatically turn the phone back on so that it can ring.

## Calendar

With this feature, you can use the calendar, set appointments, and view events.

- ① From idle mode, select **Menu > My Stuff > Tools > Calendar**.
- ② Press the **Left Soft Key** for **Options** to access the following:
  - **New:** Add a meeting, memo, or anniversary.
  - **Week view:** View the schedule of the current week.

- **Go to date:** Enter a date and view the scheduled events of that day.
- **Delete entry:** You can choose to delete entries On this day, Before date, or All entries.
- **Settings:** You can set the Calendar alarm tone, Default view, and Week starts on.
- **Memory Info:** Shows the current memory usage.

## Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division.

- ① From idle mode, select **Menu > My Stuff > Tools > Calculator**.
- ② Enter the first number using the **Number Keys**.
- ③ Enter the operation for your calculation by pressing up, down, left, or right on the **4-Way Navigation Key**.
- ④ Enter the second number.
- ⑤ Press the **OK Key** for **Equal** to view the result.

### Tips:

Press the **Clear & Back Key** to clear digits and results.

Press the **\* Key** to toggle the number between positive and negative.

Press the **# Key** to enter a decimal point.

## *Tip Calculator*

With this feature, it will be easy to calculate the tip or determine how much each person should pay in your group.

- ① From idle mode, select **Menu > My Stuff > Tools > Tip Calculator**.
- ② Enter the total bill by using the **Number Keys**.
- ③ Type the tip amount (in percentage) you would like to leave.
- ④ If the cost is shared by more than one person, please enter the number of the people into the **Split field**.
- ⑤ The amount you need to pay will be displayed at the bottom of the calculator.

## *Stopwatch*

With this feature, you can measure time and take split times or lap times, for example, in different sports.

- ① From idle mode, select **Menu > My Stuff > Tools > Stopwatch**.
- ② Select **Start** to start timing.
- ③ Select **Stop** to stop the timing during the operation and view the duration of time.
- ④ Select **Contin.** to continue timing.
- ⑤ Select **Reset** to reset the stopwatch.

## *World Time*

With this feature, you can check the current local time and date for major cities around the world.

- ① From idle mode, select **Menu > My Stuff > Tools > World time**.
- ② Press left or right on the **4-Way Navigation Key** to view the time of desired city.

- ③ Press the **Left Soft Key** to save the selected city time as the time setting on your phone.
- ④ Press the **Right Soft Key** to exit.

## *Currency Conversion*

This feature allows you to convert foreign currency to domestic currency. From idle mode, select **Menu > My Stuff > Tools > Currency conversion**.

- **Exchange rate:** Enter a currency exchange rate.
- **Foreign amount:** Enter the amount of foreign currency to be converted.
- **Local amount:** The conversion result displays.

**Tip:** Press the **Left Soft Key** to enter a decimal.

## *Recent Calls*

With this feature, you can check the call log and call duration.

From idle mode, select **Menu > My Stuff > Tools > Recent Calls**.

- **Recent Calls:** You can check All calls, Missed calls, Received calls, and Dialed calls logs.
- **Options > Call duration:** You can check the Last call duration and All calls duration. You can also clear all the call duration timers by pressing the **OK Key** for **Clear**. To reset the timers you will need to enter the phone's lock code. The default lock code is **0000**.

**Note:** All calls information can also be accessed by pressing the **Send Key** while in idle mode.

# Entertainment

Your phone allows you to use a camera, video camera, and voice recorder to take photos, shoot video clips, record voice memos, and more.

## *Pictures*

Your phone includes a photo management function. Photos in the phone's memory or on the external memory card can be browsed, transmitted, set as wallpaper, moved, renamed, copied, and deleted.

**Caution:** *The preloaded photos on the phone cannot be transmitted or deleted.*

## Taking a Photo

Your phone has an integrated digital camera, which allows you to capture images.

- ① From idle mode, select **Menu > My Stuff > Tools > Camera**. Or from idle mode, hold the **Camera Key** to start the camera.
- ② Aim the camera lens at a subject.
- ③ Press the **OK Key** to take the photo; press it again to save.

## Viewing Pictures

You can use the following method to view the photos:

- ① From idle mode, select **Menu > My Stuff > Pictures > My pictures**.
- ② Highlight a photo and press the **OK Key** for **Open**.

## *Video*

Your phone allows you to record, store, and play video files.

## Recording a Video

You can use the video camera to record video clips.

- ① From idle mode, select **Menu > My Stuff > Tools > Camera**.
- ② Press right on the **4-Way Navigation Key** to switch to video camera mode.
- ③ Press the **OK Key** to start recording.
- ④ Press the **OK Key** to pause.
- ⑤ Press the **OK Key** for **Continue** to resume recording.
- ⑥ Press the **Right Soft Key** for **Stop** to stop recording.
- ⑦ Press the **OK Key** for **Save**.

## Playing Videos

You can use the following method to play a video.

- ① From idle mode, select **Menu > My Stuff > Video > My Videos**.
- ② Highlight a video and press the **OK Key** to play it.

## Music

When you have audio files stored in your phone, you can create a playlist. This allows you to set the order in which the audio files are played.

### Playing an Individual Music File

You can use the steps below to play a sound file.

- ① From idle mode, select **Menu > My Stuff > Audio > My Audio**.
- ② Highlight a sound file and press the **OK Key** to play it.

## AT&T Music

The AT&T Music application centers on three key music experiences: Play, Discover, and Shop. It includes a free-of-charge music player to play your music files and create playlists, as well as additional radio, song purchase, and lyric and song match functionality to enhance your music experience on the phone.

## Starting AT&T Music

- ① From idle mode, select **Menu > AT&T Music**.
- ② Accept the terms and conditions of service.
- ③ The screen then displays a warning that this feature uses large amounts of data and recommends subscribing to an unlimited data plan. Select **Continue**.
- ④ Select **Let's Go!** to take a quick tour of AT&T Music. Select **Next** as each screen displays.

**Notes:** The first time you launch AT&T Music, the device plays an introductory tutorial. Some activities within AT&T Music require a monthly subscription for access. A free 3-day trial of all AT&T Music services is included upon first use. After the trial, you may subscribe or continue accessing the free local music player and Shop features.

## Play Screen

Allows you to play the music you own via the My Library feature and to listen to streaming music from Genre and Personal radio stations.

Play screen options:

- **My Favorites:** Allows you to access shortcuts to favorite artists, albums, songs, and radio stations.
- **My Library:** Allows you to access all the music on your phone. Create or manage playlists and find music by artist, album, song, or genre.
- **Genre Radio:** Allows you to access pre-programmed stations ranging from today's hits to deep cuts for the music enthusiast.
- **Personal Radio:** An easy-to-use personal listening experience started by entering an artist, song, or genre that customized to your tastes by song ratings.
- **Settings & Support:** Contextual settings for AT&T Music and help and support in the Play section.

## Discover Screen

Provides the ability to search the AT&T Music song catalog for songs by favorite artists. Song Match enables users to quickly find the name and artist of a song by holding their phone up to a song playing on the radio, TV, or jukebox, and Lyric Match allows lookup of artist/song information based on song lyrics.

Discover screen options:

- **Search Shop:** Allows you to search for songs and albums available from AT&T Music.
- **Song Match:** Allows you to identify nearly any song by holding your phone up to the music and recording a short clip.
- **Lyric Match:** Allows you to look up songs by only entering a few words.
- **View Match History:** Allows you to see all of the songs you matched via Song and Lyric Match.
- **Settings & Support:** Contextual settings for AT&T Music and help and support in the Discover section.

## Shop Screen

Shop is a full music catalog where users can search for their favorite songs and artists and preview, buy, and play songs or albums directly from their AT&T mobile phone. Fast, easy access to music is also available by browsing top songs, new releases, featured artists, and genres.

Shop screen options:

- **Top Downloads:** Allows you to access the most downloaded music.
- **New Arrivals:** Allows you to access new music that was not previously available.
- **Featured Artists:** Allows you to access music of the presently featured artists.
- **View Genres:** Allows you to view the different music genres that you may select from.

- **Purchase History:** Allows you to see a history of all of your purchases.
- **Settings & Support:** Contextual settings for AT&T Music and help and support in the Shop section.

 
## *Voice Recorder*

This function allows you to record a voice memo. You can also set the voice memo as a ringtone.


- ① From idle mode, select **Menu > My Stuff > Tools > Voice recorder.**
- ② Select **Start** to start recording your voice memo.
- ③ Select **Pause** to pause the recording.
- ④ Select **Contin.** to resume recording.
- ⑤ Select **Stop** to stop recording.
- ⑥ Press the **OK Key** for **Save.**

# Social Networking – AT&T Social Net

Keep on top of your world with AT&T Social Net, which allows you to access the latest news as well as popular social networks—including Facebook, Twitter,<sup>™</sup> and MySpace— all in one place.

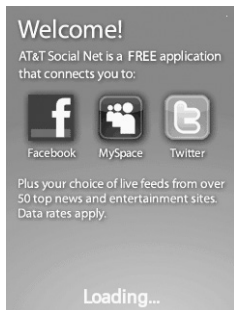

 - ① From the idle screen, select **Menu > Social Net**.
- ② To accept data charges if asked, select **Continue**. To accept the End User License Agreement, select **Accept**.

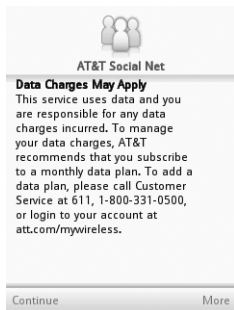


- ③ Select the social network of your choice from the top row.




- ④ Enter your login and password. Select **Sign in**. And now you are able to access your social network.

 Select , , or  to quickly update your status.

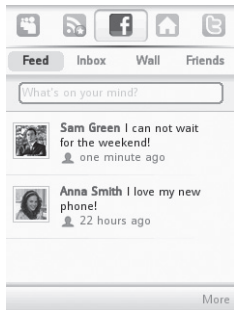

 Select  for the latest news and information.

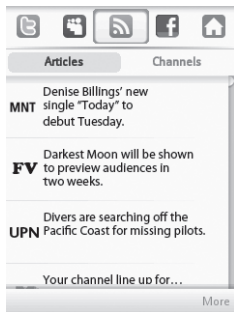


Select  for a snapshot of all of your status update.

# Yellow Pages - YPmobile®

 YPmobile enables users to search for local information and share results with their online network of friends.

Map based search and quick access to recently viewed business and events give YPmobile users more convenient ways to find what they need. Integration with Facebook and Twitter adds to the application's sharing capabilities by letting users broadcast their newly discovered local hot spots.

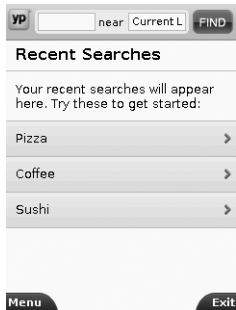

- ① In idle mode, select **Menu** > **YPmobile**.
- ② Once connected, enter the key words (eg. "Pizza") you want to search and press **FIND** to browse content.



- ③ Select an item from the search result to view details, where you can choose to make a phone call, or directly move to that place.



# AT&T GPS

AT&T GPS is a location-based service that can provide GPS navigation with turn-by-turn voice directions and traffic updates, keep track of family members, find local gas stations and movie theaters, calculate calories burned during exercise, and more, all on your mobile phone.

## *AT&T Navigator*<sup>®</sup>

AT&T Navigator provides voice-guided and visual turn-by-turn GPS driving directions with automatic reroute, full-color maps, and real-time traffic alerts all on your phone.

- ① From idle mode, select **Menu > AT&T GPS > AT&T Navigator**.
- ② Read the warning and press the **Left Soft Key** for **Agree**.
- ③ If this is the first time you have accessed AT&T Navigator, you will be prompted to take a feature tour.
- ④ Select a navigation option and press the **OK Key**.
- ⑤ Follow the prompts to type or speak your destination.

## AT&T Family Map

AT&T Family Map gives you peace of mind by being able to conveniently locate a family member's wireless phone on a map from your mobile phone or PC.

Before accessing this application you must first sign-up at <http://familymap.wireless.att.com>. Subscription may be required.

- ① From idle mode, select **Menu > AT&T GPS > AT&T Family Map**.
- ② Use the **4-Way Navigation Key** to enter your phone number and password, then select **Sign In** using the **OK Key**.

 


# Maps

AT&T Maps allows you to view your current location and map out additional locations. You can also enter addresses and find current businesses located near your current location.

## Get Directions

- ① From idle mode, select **Menu > AT&T GPS > Maps**. Your location will appear on the screen.
- ② Press the **Left Soft Key > Options > Get Directions** and select using the **OK Key**.

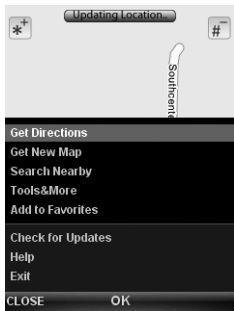

- ③ Enter your Start location and End location and select **Get** using the **OK Key**. You can reverse your trip based on your previously settings or select the fastest route from this page.

## **WHERE®**

WHERE offers you weather, news, gas prices, and the ability to search for other local information based on your current location.

- ① From idle mode, select **Menu > AT&T GPS > WHERE**.
- ② The phone will store the previous location entered. Confirm this location or enter a new location.
- ③ Use the **4-Way Navigation Key** to scroll to the icon of your choice, or simply enter a key word into the search field and press the **OK Key**.

## **AllSport GPS™**

AllSport GPS turns your phone into a full-featured GPS trainer for biking, running, walking and other sports activities.

When accessing this application for the first time you must register and login to your account.

- ① From idle mode, select **Menu > AT&T GPS > AllSport GPS**.
- ② From the landing page, select the activity you want to record or select **More Options** to view your Weekly log or change your settings.

# Settings

## *Sound Profile Settings*

You can set and edit an appropriate profile depending on your current environment.

- ① From idle mode, select **Menu > Settings > Sound Profiles**.
- ② Select a profile and press the **Left Soft Key** for **Edit**.
  - Select **Voice call ringtone** to set the voice call ringtone.
  - Select **Ring volume** to set the volume of the ringtone.
  - Select **Ring type** to set the ring type.
  - Select **Message tone** to set the notification ringtone for an incoming message.
  - Select **Keypad tone** to enable or disable keypad tone.
  - Select **Warning tone** to turn the warning tone on or off.
  - Select **Power on/off sound** to turn on/off the sound that plays while powering on/off the phone.
  - Select **Earpiece volume** to set the volume in the earpiece.

## *Phone Settings*

From idle mode, select **Menu > Settings > Phone**.

- Select **Language** to set the current display language.
- Select **Time and date** to set the date, time, and time style.
- Select **Missed calls alert** to enable or disable the notification for missed calls. Choose for the alert to repeat every 5 minutes, 10 minutes, 15 minutes, or 30 minutes.
- Select **Shortcut keys** to assign a 4-Way Navigation Key as a shortcut for a function, such as the calendar.

- Select **Own phone number** to display your phone number in idle mode to remind you which SIM card you are using.
- Select **Download location** to choose phone or memory card to save files while downloading.
- Select **TTY setting** to enable the TTY function. Please refer to **Accessibility > TTY Mode**.
- Select **T-coil setting** to enable you to hear the phone audio through a hearing aid with a telecoil. Please refer to **Accessibility > HAC Mode**.
- Select **Master Reset** to reset the phone to the default factory settings.
- Select **Master Clear** to clear all user data and reset the phone to the default factory settings.

## *Display Settings*

From idle mode, select **Menu > Settings > Display**.

- Select **Wallpaper** and select a photo saved in Pictures or Other files. This will be used as wallpaper, which is shown in idle mode.
- Select **Theme** to switch between the default and green theme.
- Select **Backlight duration** to adjust the backlight duration.
- Select **Main menu view** to set the main menu to be displayed as List or Grid.
- Select **Brightness** to adjust the screen brightness.
- Select **Keypad light** to adjust how long the backlight for the keypad remains on.
- Select **Owner name** to enter the owner name. This is displayed in idle mode.
- Select **Greeting** to enter a text greeting to be shown on the display when the phone is turned on.

## Connection Settings

From idle mode, select **Menu > Settings > Connections**.

- Select **Bluetooth** to set up your phone as a *Bluetooth* device.
- Select **Access point settings** to add to, edit, or view the access point list.
- Select **Modem setting** to edit modem name, APN, and enable authentication.
- Select **Profile connect** to create or edit the connection data for a service provider.
- Select **PC connection** to choose the connection method between your computer and the phone.

## Call Settings

From idle mode, select **Menu > Settings > Calls**.

### Call forwarding

Call forwarding allows you to divert your incoming calls to another phone number. Contact your service provider for more information and availability.

### Call Waiting

If a call comes in when you are already on a call, you are notified with a call waiting tone. The phone shows the number/name of the waiting call. Contact your service provider for more information.

### Send My Number

This function allows you to send or hide your phone number when making calls. You can also select **Set by network**. The network then chooses whether to show/hide the phone number. This function requires network support.

## Answer mode

- **Flip open:** This function allows you to answer an incoming call by directly opening the flip, but without pressing the **Send Key** or **OK Key**.
- **Any key:** This function allows you to answer an incoming call by pressing any key on the keypad, without limitation to the **Send Key** or **OK Key**.

## Security Settings

### Phone Password

A password can protect your phone and help avoid illegal use. If your phone is password protected, you will have to enter the correct password when the phone is turned on.

- For a new phone, the protection function is not activated by default, and the default password is **0000**.
- From idle mode, select **Menu > Settings > Security > Activate security codes > Phone lock code** to start or stop password protection.
- From idle mode, select **Menu > Settings > Security > Change security > Phone lock code** to change the phone's password. It is suggested that you change the password to something you will easily remember.

### Notes:

Please remember the password you set. Without it your phone cannot be used normally and you will need to contact your service provider to unlock it.

Contact your service provider for more information.

## PIN Codes

A PIN code is the personal identification code used by the SIM card. Its purpose is to avoid illegal use of your SIM card. The correct PIN code should be entered when the new phone is first turned on, otherwise the phone will only be able to make emergency calls.

- For a new card, the default code is supplied by the service provider.
- From idle mode, select **Menu > Settings > Security > Activate security codes > PIN code** to enable or disable the PIN code.
- From idle mode, select **Menu > Settings > Security > Change security > PIN code** to change the PIN code.
- If you enter the wrong PIN code three times in a row, the phone will lock the SIM card and prompt you to enter a PUK code to unlock it.

### Notes:

If you change the PIN code, please remember the new number.

PIN2 is needed for some settings. Use the same procedure as for the PIN code.

## PUK Codes

A PUK code is the unlock code for the SIM card. When the SIM card is locked, you have to enter the correct PUK code and then enter the new PIN code. The SIM card can then be used normally.

- A PUK code may be supplied with a new card. Contact your service provider for more information.
- A PUK code can only be entered 10 times in a row. If you enter the wrong PUK code more than 10 times, the SIM card will be locked indefinitely.

**Note:** If a PUK code is supplied with the new card, please store it safely.

## Fixed Dial Numbers

If you enable fixed dial numbers, you cannot dial phone numbers that are not in the FDN list.

## FDN List

Allows you to create a list of fixed dial numbers.

## *Airplane Mode*

From idle mode, select **Menu > Settings > Airplane mode** to switch on/off airplane mode.

# Accessibility

## *TTY Mode*

Your handset is a TTY-compatible device. Simply connect the TTY equipment to the headset jack.

- ① From idle mode, select **Menu > Settings > Phone > TTY setting**.
- ② Select one of the following options and press the **OK Key** for **Select**.
  - **Full:** Users who cannot talk or hear may use this setting to send and receive text messages through TTY equipment.
  - **Read & talk:** Users who can talk, but cannot hear, may use this setting to talk through the phone and receive responses via text messages.
  - **Write & hear:** Users who can hear, but cannot talk, may use this setting to listen to the other party and respond via text messages.
  - **Off:** Users who can hear and speak may use this setting to disable TTY support.

## *HAC (Hearing Aid Compatibility) Mode*

This phone supports HAC (Hearing Aid Compatibility) function. When you turn on the Hearing Aid Mode and use a hearing aid with a telecoil to answer the phone, it will help you hear more clearly while speaking on the phone. For more detailed information on HAC, please refer to **Care and Maintenance > Turn on the HAC Setting**.

- ① From idle mode, select **Menu > Settings > Phone > T-coil setting**.
- ② Select **On** or **Off** and press the **OK Key** for **Select** to confirm.

Your Z331 has been tested for hearing aid device compatibility and has an M3/T4 rating.

# Care and Maintenance

## *General Care*

Your handset contains delicate electronic circuitry, magnets and battery systems. You should treat it with care and give particular attention to the following points:

- Do not allow the handset, battery or accessories to come into contact with liquids or moisture at any time. Do not immerse the handset in any liquid.
- Do not place the handset alongside computer disks, credit cards, travel cards and other magnetic media. The information contained on disks or cards may be affected by the handset.
- Do not place anything in the folded handset.
- Do not paint the handset.
- Do not leave the handset or the battery in places where the temperature could exceed 140°F (60°C), e.g. on a car dashboard or a windowsill, behind glass in direct sunlight, etc.
- Do not remove the handset's battery while the handset is switched on.
- Take care not to allow metal objects, such as coins or key rings to contact or short-circuit the battery terminals.
- Do not dispose of battery packs in a fire. The handset's Li-ION batteries may be safely disposed of at a Li-ION recycling point.
- Do not put the handset's battery in your mouth, as battery electrolytes may be toxic if swallowed.
- Do not attempt to dismantle the handset or any of its accessories.
- This equipment is fitted with an internal battery; take it to a qualified service engineer when the replacement of the battery is required.
- There is a risk of explosion if the battery is replaced with an incorrect battery type. Dispose of the used battery in accordance with the manufacturer's instructions.

- Do not put a battery into a microwave oven, dryer, or high-pressure container.
- Do not contact battery directly to an electric outlet or cigarette lighter charger. Use only approved charger units.
- Do not pierce battery with a sharp object such as a needle.
- When the battery is thrown away, be sure it is non-conducting by applying vinyl tape to the (+) and (-) terminals.
- Do not disassemble or modify the battery.
- Do not drop, throw, or subject the handset to rough treatment.
- Stop using the battery if abnormal heat, odor, discoloration, deformation, or abnormal condition is detected during use, charge, or storage.
- In the unlikely event of a battery leak, keep the battery discharge away from your eyes or skin. If the leakage does come into contact with the eyes or skin, please flush thoroughly in clean water and consult with a doctor.
- Do not use a damaged or deformed battery.
- Do not solder a battery directly.
- Remove the battery whose life cycle has expired from equipment immediately.
- The earpiece may become warm during normal use. Also, the handset itself may become warm while the battery is being charged.
- When a handset is in vibration mode, the vibration can sometimes cause the handset to move.
- Be careful not to place the handset near heat sources (such as a heater) or too close to the edge of the table.
- Use a damp or anti-static cloth to clean the handset. Do not use an ordinary dry cloth or electrostatic cloth. Do not use chemical or abrasive cleaners as these could damage the casing.

- Third party equipment: The use of third party equipment, cables or accessories, not made or authorized by manufacturer, may invalidate the warranty of your handset and also adversely affect the phone's safety/operation.
- Remember to make backup copies of all important data on your handset.
- Remember to recycle: the cardboard packing supplied with this handset is ideal for recycling.

**Caution:** *Explosion may occur if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.*

## **General Guidelines**

- In some countries national law unapproved private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.
- Many jurisdictions have laws and regulations about taking pictures in public or private areas and regarding the processing and further use of such pictures. The manufacturer encourages its customers to obey all laws and to respect the personal rights of others.
- Please check roaming agreement availability with your service provider.
- The use of mobile phones is not allowed in some radiation sensitive areas, such as hospitals, research centers and airplanes. The user is responsible to power-off the device. If there is any uncertainty, you should remove the battery from the handset.
- Observe any signs that indicate powering off your handsets, such as those near gas stations, or explosives and power off the handset/device immediately.
- If you have a heart condition, be careful with the settings of call vibration or tone volume.
- Do not allow children to play with the handset, charger or batteries.

- Do not use the handset where blasting is in progress.
- Do not try to make a call or conversation while the temperature of charging battery is above 122°F (50°C).
- Take care not to put your handset in the back pocket of your trousers or skirt and then sit on it. Also, do not put your phone at the bottom of bag where it may be subject to excessive weight or pressure. Doing so may damage the LCD and camera lens and cause them to malfunction.
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if a handset is used next to them. Observe any caution signs and the manufacturer's recommendations.
- Do not leave the handset discharged or without a battery for a long time, otherwise some data may be erased.
- Your phone contains metal, which may cause you an itch, a rash or eczema depending on your physical condition.

## ***CTIA Requirements***

- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per this standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.

- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the device or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazards.

For those host devices that utilize a USB port as a charging source, the host device's user manual shall include a statement that the phone shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

## ***Aircraft Safety***

- Power off your phone before the airplane takes off. In order to protect the airplane's communication system from the interference, it is prohibited to use the mobile phone in flight. If you want to use your mobile phone before the airplane takes off, you should get aircrew's permission according to safety regulations.
- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to ensure that your phone will not be automatically powered on during the flight.

## ***Hospital Safety***

- Switch off your phone and remove the battery in areas where the use of handsets is prohibited.
- Follow the instructions given by the respective medical facility regarding the use of handsets on their premises.

## ***Road Safety***

- You must exercise proper control of your vehicle at all times. Give your full attention to driving.
- Observe all of the recommendations contained in your local traffic safety documentation.
- Pull off the road and park before making or answering a call, if driving conditions require so.
- Check if local laws and/or regulations restrict the use of handsets while driving.
- You **MUST NOT** stop on the hard shoulder of a motorway to answer or make a call, except in an emergency.
- Switch off your handset at a refueling point, such as a gas station, even if you are not refueling your own car.
- Do not store or carry flammable or explosive materials in the same compartment as the handset.
- Electronic vehicle systems, such as anti-lock brakes, speed control and fuel injection systems are not normally affected by radio transmissions. The manufacturer of such equipment can advise if it is adequately shielded from radio transmissions. If you suspect vehicle problems caused by radio transmissions, consult your dealer and do not switch on the handset until it has been checked by qualified approved installers.

## ***Vehicles Equipped with an Airbag(s)***

An airbag inflates with great force. Do not place objects, including either installed or portable wireless equipment, in the area over the airbag or in the airbag deployment area. If in-vehicle wireless equipment is improperly installed and the airbag inflates, serious injury could result.


## ***Third Party Equipment***

The use of third party equipment, cables or accessories, not made or authorized by the manufacturer, may invalidate the warranty of your handset and also adversely affect the handset's operation. For example, use only the manufacturer's cable supplied with the AC charger.

## ***Declaration of Conformity***

We declare under our sole responsibility that the product(s) detailed in this manual, and in combination with our accessories, conform to the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive requirements 3.1(a), 3.1(b), 3.2.

## ***Disposing of Your Phone***

The  symbol on the equipment indicates that it must be the object of "separate collection".

Therefore, the customer has to contact local authorities to determine the proper disposal methods for that municipality or deliver it to the retailer in exchange for newly purchased equipment.

The separate collection of garbage and the successive operations of treatment, recovery and waste help in the production of equipment made with recycled material and limits the hazardous effects on the atmosphere and health caused by improper management of garbage.

The illicit disposal of the product by the customer involves the application of the administrative endorsements of which to article 254 and following of the D.Lgs. 152, April 3rd 2006.

According to the article, the 13, D.Lgs. 25th July 2005, n. 151 “Performance of the Directives 2002/95/CE, 2002/96/CE and 2003/108/CE, relative to the reduction of the use of dangerous substances in the equipment electronic electrical workers and, let alone to the disposal of the refusals.”

## *Emergency Service*

**Note:** Emergency service numbers vary by country. It helps you get emergency service from the operator.

To make an emergency call in any country:

- ① Ensure that your handset is on and in service.
- ② Press the **Power/End Key** as many times as needed to clear the display and ready the device for calls.
- ③ Enter the local emergency number for your current location, for example, 911.
- ④ Press the **Send Key** to dial the number. Follow the instructions you receive and do not end the call until told to do so.

When the (U)SIM card is not inserted or when the dial lock function is on, press the **Right Soft Key** for **SOS** and then enter the official emergency number for your present location. Press the **Send Key** or **OK Key** for **Call** to dial the number.

### **Notes:**

Tell the operator which service you require: Police, Ambulance, Fire Brigade, Coast Guard or Mountain Rescue Service. Tell them where you are and remain stationary to maintain contact if possible.

Due to the nature of the cellular system, the connection of emergency calls cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

## ***Privacy Information***

Camera usage and photo/audio/video recordings carried out with the phone can offend the confidentiality of the subjects. The user therefore is held to respect legislation in matters of confidentiality and remains the only responsible subject in the case of eventual violations of the enforced norm.

## ***Turn on the HAC Setting***

When the HAC setting is on, your phone sends the audio from your phone calls to the telecoil rather than to the microphone of your hearing aid. You are likely to hear calls much better because volume is increased and background noise and feedback are diminished. The HAC setting improves only the calls you listen to through the earpiece. It does not affect calls heard on the speakerphone or a headset. It's better to turn off the *Bluetooth* function when the HAC setting is on. HAC requires extra battery power, so watch your battery consumption when it's turned on.

***Caution:*** *Do not turn on the HAC setting unless you use a hearing aid with a telecoil. Using this setting without a hearing aid or with a hearing aid without a telecoil may be harmful to your hearing.*

## ***Copyright Notice***

The video/audio recordings you make/download are protected by copyright laws. They are for personal use only and must not otherwise be used without the permission of the copyright owner.

# Troubleshooting and FAQs

If you encounter problems while using the phone, or if it performs erratically, you can consult the information in the chart below. If your particular problem cannot be resolved using the information in the chart, contact your service provider.

Problem	Possible Causes	Possible Solution
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions cannot effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network trunk quality on the part of your service provider.	Press the <b>Power/End Key</b> and dial again. You may be switched to a better-quality network trunk or phone line.
	Poor local telephone line quality.	Press the <b>Power/End Key</b> and dial again. You may be switched to a better-quality network trunk or phone line.

<b>Problem</b>	<b>Possible Causes</b>	<b>Possible Solution</b>
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.
Battery will not charge	The battery or battery charger is damaged.	Contact the dealer.
	The phone's temperature is below 32°F (0°C) or higher than 113°F (45°C).	Adjust the battery charging environment to avoid temperature extremes.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been properly made.
You cannot switch your phone on	Battery power has been depleted.	Recharge the phone's battery.
(U)SIM card error	(U)SIM card malfunction or damage.	Take the (U)SIM card to your service provider for testing.
	(U)SIM card inserted improperly.	Insert the (U)SIM card properly.
	Debris on the (U)SIM card contacts.	Use a soft, dry cloth to clean the (U)SIM card contacts.

<b>Problem</b>	<b>Possible Causes</b>	<b>Possible Solution</b>
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily switch off the phone.
	The battery is depleted. In high-temperature environments, battery life will be shortened.	Use a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.
Unable to connect to the network	(U)SIM card invalid.	Contact your service provider.
	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.

Problem	Possible Causes	Possible Solution
PIN code is blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the (U)SIM card's PUK code, use the PUK code to unlock the (U)SIM card.
Unable to enter information into the phone book	The phone book's memory is already full.	Delete unnecessary data from the Directory.

# Specifications

Handset specifications are shown in the following table.

Handset Standards	WCDMA 2100 MHz HSDPA GSM 900MHz, 1800MHz and 1900MHz
Dimensions (H×W×D)	Approximately 3.86" (H) × 2.03" (W) × 0.67" (D)
Weight	Approximately 3.9 oz. (including battery)
Display	2.4" 262K TFT color screen
Front camera	0.3 megapixel camera
Back camera	3.0 megapixel camera
Extended memory	8 GB microSD™ card
Battery	900 mAh hours, Lithium ion (Li-ION)
Performance	BMP/JPG/GIF image; 3GP/MP4 video; MP3/AMR/ WAV/ACC/ACC+ audio; Capture image: up to 1536x2048, 24b; Capture video: up to 176x144; USB 1.1; JAVA MIDP 2.0; MMS Video and Picture, Email, Calendar, Speakerphone, Voice Recorder, <i>Bluetooth</i> ; FM
Continuous idle time	Up to 8 days and 8 hours
Continuous talk time	About 3 hours
Charge time	Approximately 3 hours

**Note:** The phone's talk time and idle time are based on ideal working environments. The use of extended backlighting, browser, and network conditions can reduce battery life and talk/idle time.

# FCC Compliance

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- ① This device may not cause harmful interference, and
- ② This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

# Radio Frequency (RF) Energy

- This model device meets the government's requirements for exposure to radio waves.
- This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.
- The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit set by the FCC is 1.6W/kg.\*
- Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.
- The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.622 W/kg and when worn on the body, as described in this user guide, is 0.667 W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)
- While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

\*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

- The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on:
- **FCC ID: Q78-Z331.**
- For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guideline.

# Notes