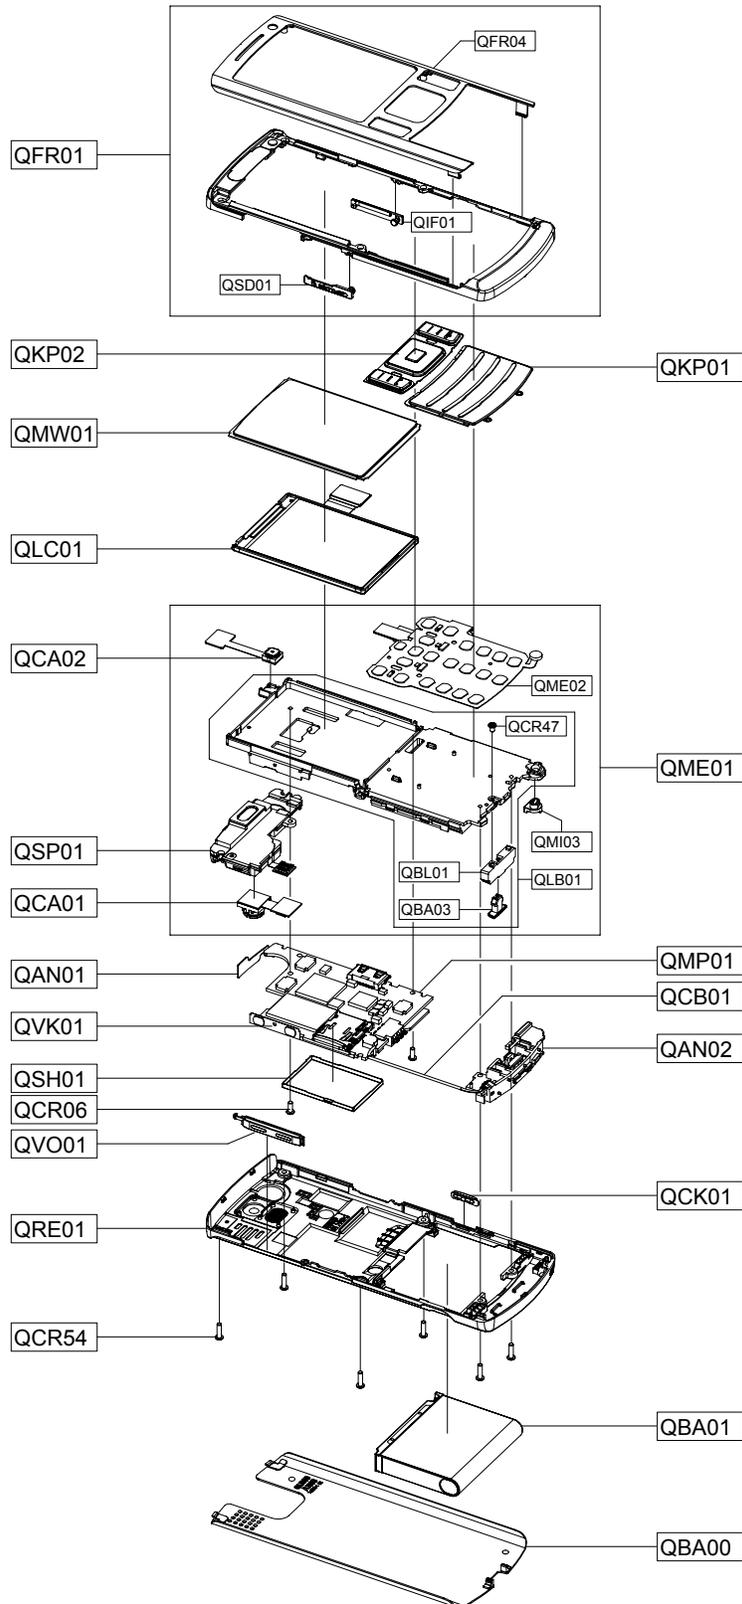

5. Exploded View and Parts List

5-1. Cellular phone Exploded View



5-2. Cellular phone Parts list

| Design LOC | | | Discription | SEC CODE |
|------------|-------|-------|--------------------------------|-------------|
| QAN01 | | | FPCB ANTENNA CHIP-SGHU800 | GH42-01495A |
| QAN02 | | | INTENNA-SGHU800 | GH42-01497A |
| QBA00 | | | ASSY COVER-BATT | GH98-08662A |
| QBA01 | | | INNER BATTERY PACK-880MAH , BL | GH43-02666A |
| QCA01 | | | ELA UNIT-CAMERA ASSY(SGH_U800 | GH96-03230A |
| QCA02 | | | CAMERA MODULE-SGHU800 CIF | GH59-05697A |
| QCB01 | | | COAXIAL CABLE-SGHU800 MHF III | GH39-01050A |
| QCK01 | | | ASSY KEY-CAMERA | GH98-09254A |
| QCR06 | | | SCREW-MACHINE | 6001-001155 |
| QCR54 | | | SCREW-MACHINE | 6001-001645 |
| QKP01 | | | ASSY KEYPAD-MAIN(XEF/OAA) | GH98-08666A |
| QKP02 | | | ASSY KEYPAD-SUB(XEF/OAA) | GH98-08667A |
| QLC01 | | | LCD-MODULE SGHU800 | GH07-01251A |
| QMP01 | | | PBA MAIN-SGHU800 | GH92-04412A |
| QMW01 | | | ASSY COVER-MAIN WINDOW | GH98-08664A |
| QRE01 | | | ASSY CASE-REAR | GH98-08659A |
| QSH01 | | | IPR SHIELD-COVER BTM | GH70-03669A |
| QSP01 | | | ASSY ETC-SGHU800 SPK/MOT MODUL | GH59-05442A |
| QVK01 | | | KEY FPCB-SGHU800 VOLUME KEY | GH59-05405A |
| QVO01 | | | ASSY KEY-VOLUME | GH98-08673A |
| QFR01 | | | ASSY CASE-FRONT | GH98-08658A |
| | QFR04 | | ASSY DECO-FRONT | GH98-08660A |
| | QIF01 | | PMO COVER-IF V2 | GH72-48517A |
| | QSD01 | | PMO COVER-SD | GH72-48103A |
| QME01 | | | KEY FPCB-SGHU800 KEYPAD FPCB | GH59-06022A |
| | QME02 | | KEY FPCB-SGHU800 KEY PBA | GH59-05446A |
| | QMI03 | | RMO RUBBER-MIC HOLDER | GH73-11849A |
| | QLB01 | | ASSY BRACKET-LCD | GH98-08663A |
| | | QBA03 | ASSY LOCKER-BUTTON | GH98-08661A |
| | | QBL01 | ASSY LOCKER-BATT | GH98-08669A |
| | | QCR47 | SCREW-MACHINE | 6001-001695 |