

TABLE OF CONTENTS

CHAPTER 1 BEFORE USING YOUR PHONE	1
Package Includes	2
Handset Description	3
Basic Functions	4
The Function Keys	4
Display Indicators	5
Screen Status, Display and Function	5
Using The Battery	6
Installing the Battery	6
Removing the Battery	6
Charging the Battery	7
Power Connection	7
Charging the Battery Only	7
Charging the Battery with the Handset	8
Charging Completion	8
Status of Charger LED	9
Battery Life	9
Important Battery Information	10
 CHAPTER 2 BASIC OPERATION	 11
Turning the Phone On and Off	12
Turning the Phone On	12
Turning the Phone Off	12
How to Use the Menu	13
Menu Summary	14
Basic Functions	16
Making a Call	16
Pause Feature	17
How to Answer Calls	18
Caller ID Function	18
Call Waiting Function	18
Missed Call Display	19
How to Adjust Volume	19
Vibrate	19
Functions During a Call	20
Sending Your Number to a Pager	20
Scratch Pad	20
Mute	20

TABLE OF CONTENTS (CONT'D.)

CHAPTER 3 MEMORY FUNCTION	21
How to Store a Phone Number	22
How to Enter Letters and Characters Using the Keypad.	23
How to Make a Call Using a Stored Phone Number	24
One-Touch/Two-Touch Dialing	24
How To Find Your Call Logs	25
Missed Calls	25
Answered Calls	26
Dialed Calls	26
How to Find Your Phone Book	27
Recalling by Memory Location Number	27
Recalling by Name (Alpha)	28
CHAPTER 4 MENU	29
Settings	30
Auto Retry	30
Auto Answer	30
One-Touch Dialing	31
Voice Privacy	31
Backlight	31
Lighting Length	31
Display	32
LCD Contrast	32
Language	32
Web Idle Timer	32
Volume	33
Ring Mode	33
Ring Type	33
Key Beep	33
Call Timers	34
Last Call	34
All Calls	34
Home Calls	34
Roam Calls	34
Alerts	35
Min Alert	35
Roam Alert	35
Fade Alert	35
Low Signal Alert	36
Connect alert	36
Data Service	37
Receive Mode	37
Flow Control	37

TABLE OF CONTENTS (CONT'D.)

Change System to Read	38
Pref System	38
Change NAM	38
Auto NAM	39
PRL ID	39
Force Analog	39
Phone Info	40
Checking My Number	40
CHAPTER 5 SECURITY FEATURES	41
How to Lock Your Phone	42
Auto Lock	42
How to Change Your Code	43
Change Code	43
How to Change Your Banner	44
Banner Change	44
How to Restrict Your Phone	44
Restricting Function	44
Restricting Incoming Calls	44
Restricting Outgoing Calls	45
Restricting the Memory	45
Restricting Long Distance Calls	46
Restricting 900 Numbers	46
How to Reset Your Phone	47
How to Clear Your Phone Memory	48
Clearing Stored Phone Numbers	48
Clearing Schedules	48
Memory Clearing Function	49
Clearing Dialed Number in Call Logs	49
Clearing Air Time In Home Service Area	49
Clearing Roam Calls	49
CHAPTER 6 SUPPLEMENTARY FUNCTIONS	51
Schedule	52
View Schedule List	52
Input Schedule	52
Pause All Schedule	52
Stopwatch	53
Calculator	53
Bio-Rhythm	54

TABLE OF CONTENTS (CONT'D.)

CHAPTER 7 VOICE MAIL AND TEXT MESSAGES	55
Receiving a Message	56
Voice Mail	56
Checking Received Voice Mail Messages	56
Send New	57
Sending Text Messages	57
Inbox	59
Checking Received Text Messages	59
Outbox	61
Checking Sent / Mail Messages	61
Setting	63
Save Sent Messages	63
Default Call Back Number	63
Message Alert	63
Delivery Ack	64
Auto Erase	64
Entry Mode	64
Filed	65
Erase Messages	66
Reference	67
Using Standard Text Input	67
Using T9 mode Text Input	68
Write with T9 mode Text Input	70
 CHAPTER 8 EMERGENCY CALL	 73
Making an Emergency Call	74
E911 in Lock Mode	74
E911 Using Any Available System	74
 CHAPTER 9 INTERNET BROWSER	 75
Start Internet Browser	76
Access Wireless Internet	76
Browser Menu	77
Reload	77
Home	77
Bookmarks	77
Mark Site	78
About Phone.com	78
Advanced	78

TABLE OF CONTENTS (CONT'D.)

Show URL	79
Homepage	79
Set UP.link	79
Offline Service	80
Outbox	80
Restart Up. Browser	81
Encryption	81
 CHAPTER 10 SAFETY	 83
Safety Information for Wireless Handheld Phones	84
Driving Safety	85
Electronic Devices	86
Other Safety Guidelines	88
Precautions	89
Safety Information for FCC RF Exposure	90
 CHAPTER 11 WARRANTY	 91
Protect Your Warranty	92
12 Month Limited Warranty	93

CHAPTER 1

BEFORE USING YOUR PHONE

Please read this chapter before using this product.

- ❶ Package Includes
- ❷ Handset Description
- ❸ Basic Functions
- ❹ Display Indicators
- ❺ Using the Battery
- ❻ Charging the Battery
- ❼ Important Battery Information

PACKAGE INCLUDES

Thank you for purchasing this product. Please check the product contents by comparing them with the following pictures.



Handset



Desktop Charger



Standard Battery



User Manual



Handstrap



In case there are any product defects, please report them to the place of purchase immediately.

HANDSET DESCRIPTION



BASIC FUNCTIONS

THE FUNCTION KEYS



This key is used to make or receive a call.



This key is used to terminate a call or exit the current menu. This key is used to turn the handset on or off.



This key (also called the Navigation key) is used to scroll through the contents of the menu.



(Soft 1) This key is used to access the menu.



(Soft 2) This key is used to access voice or text messages and to return to the previous directory on the menu.



This key is used to access the web.



This key is used to clear characters.



Press and hold to set up (vibration) manner mode.



Press and hold to set up key guard mode.

DISPLAY INDICATORS

SCREEN STATUS, DISPLAY AND FUNCTION



Signal Strength

Indicates current signal strength.
More lines mean better signal strength.






Roaming

Indicates the phone is outside of its home area.



Service Indicator

When a call is in progress,  is displayed.
When  is displayed, the phone is in idle mode.
When  is displayed, the phone is not receiving a signal from the system.



Message

Indicates a text message or voice mail message is waiting.



Digital mode

Indicates the phone is operating in digital mode.



Battery

Indicates battery charge level status.
The more black you see, the greater the charge.



Mute

Indicates the phone is mute while on a call.



Scratchpad

Displays when scratchpad is in use during a call.



 
Emergency Call

Blinks when an emergency call is in progress.

USING THE BATTERY


INSTALLING THE BATTERY

- 1 Insert the bottom of battery into the groove at the bottom of the handset. Then 2 press in the top of the battery until it snaps.

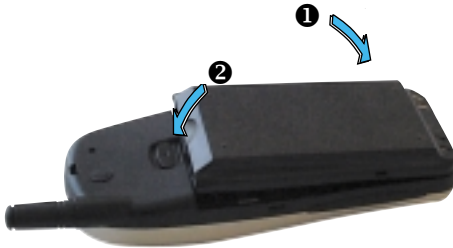

REMOVING THE BATTERY

 - 1 Push the tab 1 with one hand and lift the top of the battery 2 to separate.

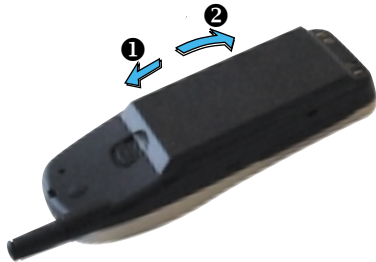

The battery must be correctly placed in the battery compartment. If battery is incorrectly inserted, the handset will not turn on or the battery may slip out during use.

[6]

CHARGING THE BATTERY

POWER CONNECTION

- 1 Connect the charger to a standard. The LED will light green when the power is connected.



CHARGING THE BATTERY ONLY

- 1 To charge the battery only, insert the battery pack into the charging slot on the charger. The LED will indicate the charging status.
 - Red indicates charging is in progress.
 - Green indicates charging is complete.



- Battery is not charged when you purchase the product.
- Fully charge the battery before use.

[7]

CHARGING THE BATTERY

CHARGING THE BATTERY WITH THE HANDSET

- 1 To charge the battery with the handset, insert the handset into the charger.



Charging the battery with the handset power on is less efficient than charging it with the handset off.

CHARGING COMPLETION

- 1 Charging is completed when the green-colored LED stays on.



CHARGING THE BATTERY

STATUS OF CHARGER LED

Charging Slot	Charging in Progress (Red Color On)	Charging Completion (Green Color On)
	●	○



If the red LED does not come on after the handset or battery has been inserted into the charging slots, re-insert or check power.

BATTERY LIFE (FOR NEW BATTERY)

Status \ Type	Standard Battery (1000 mAh)
Talk (min)	240
Stand by (hrs)	180

IMPORTANT BATTERY INFORMATION

Use only batteries and chargers approved by the phone manufacturer.

When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than a week; overcharging may shorten its life.

If left unused, a fully charged battery may completely drain (discharge) in 1 - 4 weeks.

Never use any charger or battery that is damaged or worn out.

Use the battery only for its intended purpose.

Do not short circuit the battery. Accidental short circuiting can occur when a metallic object (e.g. coin, clip or pen) causes direct connection of the two terminals of the battery (metal strips on the back of the battery). For example, when you carry a spare battery in your pocket or purse. Short circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, reduces the capacity and lifetime of the battery. Always try to keep the battery between 41°F and 95°F (5°C and 35°C). A phone with a hot or cold battery may temporarily not work (or charge) even if the battery is fully charged.

Temperature extremes affect the ability of your battery to charge; allow it to cool down or warm up first.

When the battery is not in use, store it uncharged in a cool, dark and dry place.

The battery is a sealed unit with no serviceable parts. Do not attempt to open the case.

It is recommended that you allow your battery to fully discharge before you recharge it.

The battery can be charged and discharged hundreds of times but will eventually wear out. When the operating time is shorter than normal, it is time to buy a new battery.

Do not dispose of a battery in a fire!

Dispose of used batteries in accordance with local regulations.

Recycle!


CHAPTER 2

BASIC OPERATION

- ❶ Turning the Phone On and Off
- ❷ How to Use the Menu
- ❸ Menu Summary
- ❹ Basic Functions
- ❺ Functions During a Call

TURNING THE PHONE ON AND OFF

TURNING THE PHONE ON

- 1
 - Press [].
 - The phone is locked if "PASSWORD" is displayed on the screen. When "PASSWORD" is displayed, enter the 4-digit password to unlock the phone.
 - The default password is the last 4 digits of your phone number.






TURNING THE PHONE OFF

- 1
 - Press [] until "Power off!" is displayed.



- If the "LOW BATTERY WARNING POWER OFF" is displayed and the power goes off, there is a possibility of damaging the memory. Change or charge the battery immediately.
- If the battery is removed while the phone is on, information about the last call may be erased.

HOW TO USE THE MENU

- 1 In the standby screen, press [] to enter the menu.
- 2 Use the navigation key or the volume keys to scroll through the menu.
- 3 To return to the previous menu, press []
To exit the current menu, press []
- 4 To enter submenu, press the corresponding number or select the item using the navigation key or the volume keys.
- 5 [], [], volume keys and navigation key can be used while using the menu.

MENU SUMMARY

1 : PHONE BOOK

1 : CALL LOGS
2 : ANSWERED CALL
3 : DIALED CALL

2 : BY LOCATION
3 : BY NAME

2 : SETTING

1 : AUTO RETRY
1 : RETRY TIME
2 : REPEAT

2 : AUTO ANSWER
3 : ONE-TOUCH
4 : VOICE PRIVACY
5 : BACKLIGHT
6 : LCD CONTRAST
7 : LANGUAGE
8 : WEB MENU
1 : WEB IDLE TIME
2 : UP PROXY IP

3 : TONE

1 : RING MODE
2 : RING TYPE
3 : KEYPAD

4 : TIMER

1 : LAST CALL
2 : ALL CALLS
3 : HOME CALLS
4 : ROAM CALLS

5 : SPECIAL

1 : SCHEDULE
1 : LIST ALL
2 : INPUT SCHEDULE
3 : PAUSE ALL

2 : STOPWATCH
3 : CALCULATOR
4 : BIORHYTHM
1 : TODAY
2 : SOMEDAY
3 : BIRTHDAY

MENU SUMMARY

6 : ALERTS

1 : MIN ALERT
2 : ROAM ALERT
3 : FADE ALERT
4 : LOW SIG ALERT
5 : CONNECT ALERT

7 : DATA SERVICE

1 : RECEIVE MODE
2 : FLOW CONTROL

8 : CHANGE SYSTEM TO READ

1 : PREF SYSTEM
2 : CHANGE NAM
3 : AUTO NAM
4 : PRL ID
5 : FORCE ANALOG

9 : MY NUMBER

0 : SECURITY

1 : AUTO LOCK
2 : CHANGE CODE
3 : CHANGE BANNER
4 : RESTRICT
1 : INCOMING
2 : OUTGOING
3 : MEMORY
4 : LONG DISTANCE
5 : 900# ' S

5 : RESET
6 : CLEAR

1 : CLR PHONEBOOK
2 : CLR SCHEDULE
3 : CLR CALL LOGS
4 : CLR HOME CALLS
5 : CLR ROAM CALLS

7 : VERSION



BASIC FUNCTIONS

MAKING A CALL

1


Enter the phone number.




To modify the phone number you have entered :

- To erase the last number entered : Press [].
- To erase all numbers entered and start again : Press []



2

Press [].


- "CALL FAILED" message is displayed when the call does not connect.
- If the line is busy, press []. Retry by pressing [].
- If you select the AUTO RETRY function, the call will be retried automatically for the time you have selected.
- Press [] to end the call.

BASIC FUNCTIONS

PAUSE FEATURE

Pauses are used for automated systems (i.e., voice mail and calling cards). To insert pauses:

1

Enter phone number, then press [].




2

Select desired pause.

- | | |
|-----------------------|-------------------------------|
| - When Idling status; | - When Receiving Call status; |
| 1 : STORE | 1 : SEND PHONE# |
| 2 : BY NUMBER | 2 : SCRATCH PAD |
| 3 : HARD PAUSE | 3 : MUTE |
| 4 : ONE HYPHEN | 4 : VIEW PHONE# |
| | 5 : VOICE PRIVACY |

Pause Definitions



- To insert pauses : If you enter the pause character (P), the number entered after the pause character will be sent by pressing [] key.

3

- Press [] to dial or [1] to store.

BASIC FUNCTIONS

HOW TO ANSWER CALLS

- 1 When the phone rings or the LED blinks, press any key except Volume up or down, or [].
- 2 To end the call, press [].



If you set up the AUTO ANSWER function in advance, the call will be answered after the selected number of rings. (refer to page 30)

CALLER ID FUNCTION



When there is an incoming call, the caller's phone number is displayed on the screen.



The Caller ID number is saved in the call log.


CALL WAITING FUNCTION

 
This function notifies you of an incoming call when you are on the another call.

- To answer the call, press [] when you hear the beep.
- To switch back to the first caller, press [] again.

BASIC FUNCTIONS


MISSED CALL DISPLAY

- 1 Displays the number of missed calls and the time the call was missed.
 - The message will be cleared when you press the [] or [] key.

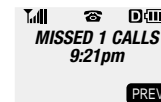



HOW TO ADJUST VOLUME

You can adjust the volume in two ways: by using the volume control keys on the side of the handset, or by using the menu.

- 1 Adjust volume by using the volume control keys during the following operation.
 - During a Call : Earpiece volume adjustment.
 - Standby Status : Ringer volume adjustment.
 - When the Phone Rings : Ringer volume adjustment.
 - Call status in hands-free : Hands-free volume adjustment. Press [] when the phone rings and it will mute the ringer.


VIBRATE

This function disables the ringer and vibrates the phone to alert you of an incoming call. To enable this function, press [], [3],[1] and select VIBRATE or press [] then the “up” and “down” keys at the upper left side of the phone.



FUNCTIONS DURING A CALL

SENDING YOUR NUMBER TO A PAGER

This function enables the phone number of the handset to be transmitted automatically to a pager, depending on pager service.

 
- 1
 - During a call to a pager, when you are asked to enter your number in editing mode, press [], then [1] "SEND PHONE #".

SCRATCH PAD

- 1 While on a call press [], then [2] "SCRATCH PAD".
- 2 Enter the phone number, then press [].

MUTE

- 1 Press [], then [3] "Mute".

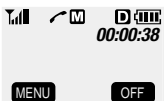

To unmute, press [], then [3] "Mute" again.


CHAPTER 3

MEMORY FUNCTION


- 1 How to Store a Phone Number
- 2 How to Make a Call Using a Stored Phone Number
- 3 How to Find Your Call Logs
- 4 How to Find Your Phone Book

HOW TO STORE A PHONE NUMBER

 
You can store up to 100 frequently used phone numbers in memory.


- 1 Enter the phone number (more than 3 digits) you want to store and press [], then [1] "Store"



- The first available initial empty memory location number is displayed. Press [] to store.
- If there is a desired memory location number, enter the number.

- 2 If the "XX LOCATION IS USED" message appears after entering the memory location number, it means there is another stored phone number in that location already.

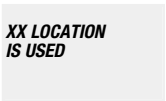

- 3 Enter the person's name and press [].



- 4 Select mobile/office/home type then press [].



- 5 To make secret, select "Yes". If "Yes" is selected, the stored entry can only be displayed with the lock code.






HOW TO STORE A PHONE NUMBER

HOW TO ENTER LETTERS AND CHARACTERS USING THE KEYPAD

1. Select characters you wish to enter using the keypad.

Key Pad	1 Repetition	2 Repetitions	3 Repetitions	4 Repetitions	5 Repetitions
1	1				
2ABC	A	B	C	2	
3DEF	D	E	F	3	
4GHI	G	H	I	4	
:	:	:	:	:	:
9WXYZ	W	X	Y	Z	9

1. You can change the character mode by pressing [].
2. When entering any special characters such as !?@_+ =()*#:;%/ , press the numeric key associated with it in special mode where special characters are displayed on the top of the screen.
3. Press the navigation key "up or down" to display different special characters.
4. Press [#] to make a blank space. The cursor moves to the next column automatically in two seconds.
5. Repeat until all the characters you want are entered. You can store up to 16 characters.
6. Erasing Entry. To erase one letter, press []. To erase the entire entry, press and hold [].

HOW TO MAKE A CALL USING A STORED PHONE NUMBER

ONE-TOUCH/TWO-TOUCH DIALING

This feature allows the phone book entries to be dialed via the keypad.

ONE-TOUCH DIALING:

1-9 : Press corresponding memory number and hold for more than 1 second.

TWO-TOUCH DIALING:

00, 10-99 : press the first digit and second digits of the memory number short and long respectively.

- If no phone number is stored in the location keyed "Empty Location" will appear on the screen.
- If a phone number is stored in the secret location, the number is not displayed when making a call.




*One-touch dialing must be turned on in the handset.
See page 31.*


HOW TO FIND YOUR CALL LOGS

Your phone can display the 10 most recent missed, incoming and outgoing calls. You can call those numbers without dialing their whole number.

MISSED CALLS

- 1 Press [], then [1], then [1], then [1].


 [01]XXX-XXXX
[02]XXX-XXXX
DTAL PREV

- 2 Press [] to check the detail information about the phone number.

- The last missed call, its phone number, time and date are displayed.



- 3 To check your missed calls, use the navigation key: press it up or down to scroll through the phone numbers.

6:26pm, 03/29
[01]
XXX-XXXX-XXXX
STO PREV

- 4 Press [] to dial desired missed call number.

HOW TO FIND YOUR CALL LOGS



ANSWERED CALLS

- 1 Press [], then [1], then [1], then [2].
Press [] to dial the desired answered call number.
 - The last answered call, its phone number, time and date are displayed.



Refer to previous page for instructions on how to view call information.

DIALED CALLS


- 1 Press [] then [1] then [1] then [3].
Press [] to dial the desired dialed call number.
 - The last outgoing call, its phone number, time and date are displayed.








Refer to previous page for instructions on how to view call information.

HOW TO FIND YOUR PHONE BOOK

RECALLING BY MEMORY LOCATION NUMBER

- 1 Press [], then [1], then [2].
- 2 Enter the memory location number.
 - If you don't enter a specific memory location number, use the navigation key to search from the first memory location number.

SEARCH LOCATION?

[STO] [PREV]
- 3 Search phone numbers using navigation key.
 - [] scrolls through the menu
 - [] edits the phone#.
 - [] returns to the previous menu.
 - [] erases the contents.
- 4 Press [] to dial the desired phone book number.

HOW TO FIND YOUR PHONE BOOK





RECALLING BY NAME (ALPHA)


1 Press [], then [1], then [3].

2 Enter the alpha (or part of the alpha), then press [].

SEARCH
RECALL NAME Abc
STO MODE

3 To locate the phone number using the scroll key.

- [] scrolls through the menu
- [] edits the phone#.
- [] returns to the previous menu.
- [] erases the contents.

4 Press [] to dial.

CHAPTER 4

MENU

Please read this chapter before using this product.



- 1 Settings
- 2 Backlight
- 3 Display
- 4 Volume
- 5 Call Timers
- 6 Alerts
- 7 Data Service
- 8 Change System to Read
- 9 Phone Info

SETTINGS



AUTO RETRY

When a call is not connected, this function retries the call automatically at a set interval or amount or retries.

RETRY TIME



- 1 Press [], then [2], then [1], then [1].
- 2 Select the parameter (OFF, 3, 5, 7, 10 seconds) by using the navigation key. Press [].

 
REPEAT

- 1 Press [] then [2] then [1] then [2].
- 2 Select the parameter (1, 3, 5 times) by using the navigation key. Press [].

AUTO ANSWER

This function answers an incoming call automatically after a number of rings that the user sets.

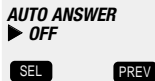

- 1 Press [], then [2] then [2].
- 2 Select the parameter (OFF, 1, 3 RINGS) by using the navigation key. Press [] to set.
 - Auto answer function does not work if you select lamp.





SETTINGS

ONE-TOUCH DIALING

This function allows the phone book entries to be dialed via the keypad.

- 1 Press [], then [2], then [3].
- 2 Select the parameter (NO, YES) by using the navigation keys. Press [].



VOICE PRIVACY

- 1 Press [], then [2], then [4].
- 2 Select the parameter (STANDARD MODE, ENHANCED MODE) by using the navigation key. Press [].

BACKLIGHT

LIGHTING LENGTH

This function allows the time the screen is lit, so you can conveniently use the phone, even in dark places.

- 1 Press [], then [2], then [5].
- 2 Select the parameter (OFF, OFF IN DAY, 10 SECS, 20 SECS, 30 SECS) by using the navigation key. Press [].


DISPLAY

LCD CONTRAST

This function adjusts the LCD screen contrast.

- 1 Press [], then [2], then [6].




- 2 Select the contrast level by using the navigation key. Press [].

LANGUAGE

This function changes the language of the phone.


- 1 Press [], then [2], then [7].



- 2 Select the parameter (ENGLISH, SPANISH) by using the navigation key. Press [].

WEB IDLE TIMER


This function disconnects from the network when there is no key input while browsing through the web. The display remains in the browser and handset connects to the network again.


- 1 Press [], then [2], then [8], then [1]. Then input the Web Idle Timer.




VOLUME

RINGER MODE


- 1 Press [], then [3], then [1].
- 2 Select the parameter (RINGER,SLIDE BELL VIBRATE, SILENT, BELL AFTER VIB) by using the navigation key.

- 3 Press [].



RINGER TYPE

- 1 Press [], then [3], then [2].
- 2 Select the parameter (1-13) by using the navigation key.
 - Different tones (1-6).
 - Different melodies (7-13).



- 3 Press [].

KEYPAD

- 1 Press [], then [3], then [3] for keypad volume.
 - If the warning alarm sounds because of low battery, the sound will not be heard even if the user presses the button.
- 2 Select the volume level by using the navigation key. Press it up to raise the volume and down to lower it.
- 3 Press [].

CALL TIMERS

LAST CALL

- 1 Press [], then [4], then [1].

ALL CALLS

- 1 Press [], then [4], then [2].

HOME CALLS



- 1 Press [], then [4], then [3].

ROAM CALLS

- 1 Press [], then [4], then [4].

ALERTS

MIN ALERT

- 1 Press [], then [6], then [1].
This function sounds an alert every minute, letting you know the call lapse time.
Select the parameter (ON, OFF) by using the navigation key. Press [].

MIN ALERT
▶ ON

SEL

PREV

ROAM ALERT

This function sounds an alert when the handset enters a new service area, when it enters another service area, or when it leaves the user's service area.

- 1 Press [], then [6], then [2].

ROAM ALERT
▶ ON

SEL

PREV

- 2 Select the parameter (ON, OFF) by using the navigation key. Press [].

FADE ALERT


This function sounds an alert when the phone cannot make calls due to poor signal strength while in idle mode.

- 1 Press [], then [6], then [3].

FADE ALERT
▶ ON

SEL

PREV

- 2 Select the parameter (ON, OFF) by using the navigation key. Press [].

ALERTS


LOW SIGNAL ALERT

This function sounds an alert when the signal of a received call is weak during a call.

- 1 Press [], then [6], then [4].

LOW SIG ALERT
▶ ON

SEL PREV

- 2 Select the parameter (ON, OFF) by using the navigation key. Press [].


CONNECT ALERT

This function sounds an alert when the call is connected.

- 1 Press [], then [6], then [5].

CONNECT TONE
▶ OFF

SEL PREV

- 2 Select the parameter (OFF, LOW, MID, HIGH) by using the navigation key. Press [].


DATA SERVICE

RECEIVE MODE

- 1 Press [], then [7], then [1].

1:RECEIVE MODE
2:FLOW CONTROL

SEL PREV

- 2 Select the parameter (INACTIVE, DATA, FAX) by using the navigation key. Press [].

INACTIVE : When you use telephone
DATA : When you use data
FAX : When you use fax

RECEIVE MODE
▶ INACTIVE


SEL PREV

FLOW CONTROL

- 1 Press [], then [7], then [2].

1:RECEIVE MODE
2:FLOW CONTROL

SEL PREV

- 2 Select the parameter (HARDWARE, SOFTWARE) by using the navigation key. Press [].

HARDWARE : Hardware flow control
SOFTWARE : Software flow control
(Recommendation : HARDWARE flow control)

FLOW CONTROL
▶ HARDWARE

SEL PREV


CHANGE SYSTEM

PREF SYSTEM

This is a function to select the Preferred System.

- 1 Press [], then [8], then [1].




 

- 2 Select the system (SYSTEM A ONLY, SYSTEM B ONLY, HOME ONLY) by using the scroll keys. Press [].

CHANGE NAM

This is a function to change NAM.

- 1 Press [], then [8], then [2].



- 2 Select the NAM (NAM 1, NAM2) by using the [] or [] keys. Press [].

CHANGE SYSTEM

AUTO NAM

This is a function to activate AUTO NAM.

- 1 Press [], then [8], then [3].



PRL ID

This function identifies the current Preferred Roaming List ID.

- 1 Press [], then [8], then [4].



FORCE ANALOG

This is a function to change FORCE ANALOG.

- 1 Press [], then [8], then [5].



PHONE INFO

CHECKING MY NUMBER

This function checks the telephone number of the handset currently in use.

- 1 Press [], then [9].



CHAPTER 5


SECURITY FEATURES

- 1 How to Lock Your Phone
- 2 How to Change Your Code
- 3 How to Restrict Your Phone
- 4 How to Reset Your Phone
- 5 How to Clear Your Phone Memory

HOW TO LOCK YOUR PHONE

AUTO LOCK


This function prevents any other person from using the handset without permission. When it is locked, the handset can not be used to dial or use any other function.

- 1 Press [], then [0], then enter [PASSWORD], then [1].
 - The default password is the last 4 digits of your phone number.

AUTO LOCK?
▶ OFF

SEL

PREV

- 2 Select the parameter (OFF, POWER ON, ON) by using the navigation key. Press [].

- "POWER ON?" locks the handset upon powering on the handset each time.
- "OFF?" unlocks the handset and leaves it unlocked.






Note

Incoming calls, emergency dialing and alarm functions are enabled when the handset is locked.

HOW TO CHANGE YOUR CODE

CHANGE CODE

This function is used to change the 4-digit lock code.

 
- 1 Press [], then [0], then enter "PASSWORD", then [2].
 - The default password is the last 4 digits of your phone number.
- 2 Enter the new 4digit "PASSWORD". Press [].
- 3 Re-enter the new "PASSWORD". Press [].

CHANGE BANNER

CHANGE BANNER

This function changes the banner displayed on the LCD. You can enter a banner up to 16 characters long.

- 1 Press [], then [0], then [PASSWORD], then [3].



- 2 Enter a banner using instructions for alpha numeric keys on page 23

HOW TO RESTRICT YOUR PHONE


RESTRICTING FUNCTIONS

You can restrict 5 different functions.

- 1 Press [] then [0] then enter [PASSWORD] then [4].



- The default lock code is the last 4 digits of your phone number.

- 2 Using the navigation key, select "YES". Press [].

HOW TO RESTRICT YOUR PHONE

RESTRICTING INCOMING CALLS


When this function is enabled, the phone does not respond to incoming calls. However, outgoing calls can still be made.

- 1 Press [1] "INCOMING".

- 2 Select the parameter by using the navigation key.



RESTRICT: restricts incoming calls.
ALLOW : allows incoming calls.

- 3 Press [].

RESTRICTING OUTGOING CALLS

When this function is enabled, incoming calls can be answered, but outgoing calls cannot be made. It is still possible to make emergency calls.

- 1 Press [2] "OUTGOING".



- 2 Select the parameter by using the navigation key.

RESTRICT: restricts outgoing calls.
ALLOW: allows outgoing calls.

- 3 Press [].

HOW TO RESTRICT YOUR PHONE

RESTRICTING MEMORY CALLS


This function blocks the storage of phone numbers or the use of stored phone numbers.

- 1 Press [3] "MEMORY".
The default password is the last 4 digits of your phone number.

MEMORY ONLY?
▶ ALLOW
SEL PREV

- 2 Select the parameter by using the navigation key.

RESTRICT: restricts phone book.
ALLOW: allows phone book.

- 3 Press [].


RESTRICTING LONG DISTANCE CALLS

- 1 Press [4] "LONG DISTANCE".

- 2 Select the parameter by using the navigation key.

RESTRICT: restricts long distance calls.
ALLOW: allows phone book.

LONG DISTANCE?
▶ ALLOW
SEL PREV

- 3 Press [].

HOW TO RESTRICT YOUR PHONE


RESTRICTING 900 NUMBERS

- 1 Press [5] "900# s".

- 2 Select the parameter by using the navigation key.

RESTRICT: restricts 900 service
ALLOW: allows 900 service

900#S ?
▶ ALLOW
SEL PREV

- 3 Press [].



The message "THIS PHONE IS RESTRICTED" is displayed on the screen when a restricted call is placed.

HOW TO RESET YOUR PHONE

This function resets each value set in the memory to its default value.

- 1 Press [], then [0], then [PASSWORD], then [5].

RESET SETTING?
▶ NO
SEL PREV

- 2 Select the parameter by using the navigation key. Press [].

- If you select "YES", "RESET" is displayed, and then the screen will return to idle mode.

HOW TO CLEAR YOUR PHONE MEMORY


CLEARING STORED PHONE NUMBERS

This function clears all stored numbers.

1 Press [], then [0], then enter [PASSWORD], then [6], then [1].



 
- The default password is the last 4 digits of your phone number.

2 Select the parameter (NO, YES) by using the navigation key. Press [].


CLEARING SCHEDULES

This function clears the schedules.

1 Press [], then [0], then enter [PASSWORD], then [6], then [2].




- The default lock code is the last 4 digits of your phone number.

2 Select the parameter (NO, YES) by using the navigation key. Press [].

MEMORY CLEARING FUNCTION


CLEARING DIALED NUMBER IN CALL LOGS

This function clears the dialed number in the call logs.

1 Press [], then [0], then enter [PASSWORD], then [6], then [3].




- The default lock code is the last 4 digits of your phone number.

2 Select the parameter (NO, YES) by using the navigation key. Press [].


CLEARING AIR TIME IN HOME SERVICE AREA

This function clears air time used in the home service areas.

1 Press [], then [0], then enter [PASSWORD], then [6] then [4].




- The default lock code is the last 4 digits of your phone number.

2 Select the parameter (NO, YES) by using the navigation key. Press [].


CLEARING ROAM CALLS

 
This function clears air time used in other service areas.

1 Press [], then [0], then enter [PASSWORD], then [6] then [5].



- The default password is the last 4 digits of your phone number.




2 Select the parameter (NO, YES) by using the navigation key. Press [].



CHAPTER 6



   SUPPLEMENTARY FUNCTIONS

- ❶ Schedule
- ❷ Stopwatch
- ❸ Calculator
- ❹ Bio-Rhythm




 





SCHEDULE



VIEW SCHEDULE LIST

- 1 Press [], then [5], then [1], then [1].
By pressing [], you can view more details about each item.







INPUT SCHEDULE

- 1 Press [], then [5], then [1], then [2].
- 2 Select the date in calendar and press the [] [] / [] - month input.
[] / [], numeric key - day input.
- 3 Press [1], then select the alarm type parameter (One time or Daily).
To set the schedule title, press [2] and input the schedule title.
To set reserved call, press [3] and input the phone number.
Then press [].

PAUSE ALL SCHEDULE


 
 
 



- 1 Press [], then [5], then [1], then [3].
- 2 Select the parameter(NO, YES) by using the navigation key, then press [].

STOPWATCH

- 1 Press [], then [5], then [2].
- 2 Press [] / [] to control the stopwatch.
[] control Start / Stop.
[] Split/ Split Release / Initiate / Previous.
The time unit displayed on the LCD in 1/100 of a second.
- 3 press [] to exit and return to the initial display.




CALCULATION

- 1 Press [], then [5], then [3].
- 2 Using the calculator.
 - Definitions
+ : [], - : [], x : [], ÷ : []
 - Up to 8 integer digits can be displayed.
To express a negative number, use '0-value'.
There are no decimal points to enter. You can only enter integer numbers.
 - EXAMPLE
To calculate $128 \times 32 =$
1. Enter 128
2. Press []
3. Enter 32
4. Press []




BIO-RHYTHM

This function identifies the bio-rhythms of today or a specific day using solar calendar.

1 Press [], then [5], then [4].

2 Press [3] "BIRTHDAY?".

- Enter your solar calendar birthday in year/month/date, and then press [].



1: TODAY
2: SOMEDAY
3: BIRTHDAY
SEL PREV

3 To find out today bio-rhythm, select TODAY
To find out bio-rhythm of a specific day, select SOMEDAY.

- Bio-rhythm function is available only when the phone can register the current time from the network system.
 - For Some Day Bio, you cannot enter dates before your birthday.
 - For Birthday, you cannot enter the dates later than today's date.
- Physical, Emotional and Intelligent quotients appear with a number showing how many days have passed since your birthdate for the date you want to find out. Bio-rhythm is displayed on the top portion of the screen.
 - What is Bio-rhythm?
Bio-rhythm is a life rhythm which is governed by three rhythm curves called physical, emotional, and intelligent and starts from our body from our birth to death.
 - Physical rhythm.
 - This rhythm controls wide-ranging physical elements related to resistance to diseases, physical strength, adjustment of muscle exercise, speed, physiology and other basic physical functions with a cycle of 23 days.
 - Emotional rhythm.
 - This rhythm adjusts creativity, sensitivity, mental health and recognition about world and humans with a cycle of 28 days.
 - Intelligent rhythm.
 - This rhythm affects our memory, susceptibility to fright, acceptance of knowledge and logical and analytic power with a cycle of 33 days.

CHAPTER 7

VOICE MAIL AND TEXT MESSAGE

This chapter describes convenient functions that allow you to send and receive short messages such as text and voice through the handset.

- Receiving a Message
- Voice Mail
- Send New(Sending Message)
- Inbox(Checking Received Message)
- Outbox(Checking Sent Message)
- Settings
- Filed
- Erase Messages
- Reference

RECEIVING A MESSAGE

- 1** When a message is received, the following message is displayed.

*XX NEW TEXT
XX VOICE
FR : XXX-XXXX-XXXX*
[READ] [CNCL]

- 2** Press [READ] to display the received message.

*☒ : Test1
☒ : Test2*
[SEL] [PREV]

VOICE MAIL

CHECKING RECEIVED VOICE MAIL MESSAGE

- 1** Press [] , then press [1] "Voice Mail".
The number of voice mail messages currently received in your voice mailbox is displayed.
To access your voice mailbox, press [SEND].

*1 Voice Mail
12/29 AM 08:47
To LISTEN
PRESS[SEND]*
[PREV]

SEND NEW

SENDING TEXT MESSAGE

- 1** Press [] , then press [2] "Send New".

- 2** Input phone number, then press [NEXT].

*Send To 123
123456789*
[NEXT] phone book [MODE]

- 3** Input text message, then press [NEXT].

*MESSAGE? T9 Abc
Test*
[NEXT] 4/160 [MODE]

- 4** 4.1 To send the text message, press [1] "Send".

Sending message
[CNCL]

If message sending fails, you choose the auto retry sending function.
Then press [YES].

*Delivery Failed
Retry in 3 mins?*
[YES] [NO]

- 4.2 If you want to change recipient, press [2] "Edit Recipient".

Input the new phone number, then press [NEXT].

*Send To 123
123456789*
[NEXT] phone book [MODE]

Input the new text message, (if necessary) then press [NEXT].
Then press [1] "SEND".

*MESSAGE? T9 Abc
Test*
[NEXT] 4/160 [MODE]

SEND NEW

4.3 To change the text message, press [3] "Edit Message".

Input text message, then press [NEXT].

MESSAGE? T9 Abc
Test
NEXT 4/160 MODE

4.4 To send urgent message, press [4] "Priority". Then select the parameter (Normal/ Urgent) by using the navigation key. Press [SEL].

Priority?
▶ Normal
SEL PREV

4.5 To change call back number, press [5], "Call Back".

Input call back number, then press [NEXT].

Call back NO.?
XXXXXXXXXX
NEXT Phone book PREV

4.6 To save the text message, press [6] "Save".

Message saved
in 'outbox'
folder

4.7 To confirm the sending message, press [7] "Delivery Ack". Then select the parameter (YES/NO) by using the navigation key. Press [SEL].

Delivery Ack
☐ NO
SEL PREV

INBOX

CHECKING RECEIVED TEXT MESSAGE

1 Press [] (), then press [3] "Inbox".

⚠ : Urgent New Msg

✉ : New Msg (unread)

✉ : Old Msg (read)

🔒 : Lock (read)

⚠ : Test1
✉ : Test2
✉ : Test3
✉ : Test4
SEL PREV

2 Select the desired message and press [SEL]. The message is displayed.

◀ TEXT MESSAGE ▶
Test1
Fr : XXX-XXX-XXXX
Cb : 923567004
02/20 09:36 AM
OPTS PREV

Then press [OPTS].

3 3.1 To reply to the text message, press [1]. "Reply" then press [SEND].

MESSAGE? T9 ABC
NEXT 0/160 MODE
1 : REPLY
2 : ERASE
3 : FORWARD
4 : SAVE
5 : SAVE ADDRESS ↓
SEND PREV

Write your reply message then press [NEXT].

3.2 To erase the text message, press [2], then press [YES].

ERASE THIS MESSAGE?
YES NO
THE MESSAGE IS ERASED
YES NO

INBOX

3.3 To forward the text message, press [3], then input the phone number and text message.



3.4 To save the text message, press [4].



3.5 To save the text message's Call Back NO. into a memory location, press [5]. (phone book storing follows)


3.6 To lock or unlock the text message, press [6].

 



Then select the parameter(Lock/Unlock) by using the navigation key, then press [SEL].


OUTBOX

CHECKING SENT TEXT MAIL MESSAGE

1 Press [], then [4] "Outbox". Select the stores message by using the navigation key, then press [SEL].

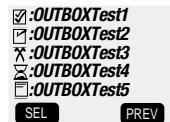


 : Pending and will be sent later

 : Not delivered

 : Sent to BS

: Receives recipient

 : Not sent

2 The text message is displayed.



Then press[OPTS].

3 3.1 To resend the text message, press [1].



OUTBOX

3.2 To erase the text message, press [2], then press [YES].



 
3.3 To send to the text message, press [3]. Then input the phone number and text message.



3.4 To save the text message, press [4].




3.5 To display sent message state, press [5].



SETTINGS


SAVE SENT MESSAGE

1 Press [], then press [5] "Settings".

2 Press [1] "Save sent Msg?". Select the parameter(NO/YES/Prompt) by using the navigation keys. Press [SEL].




DEFAULT CALL BACK NUMBER

1 Press [], then press [5] "SETTINGS".

2 Then press [2] "DEFAULT CB #". Write Callback number, then press [NEXT].



MESSAGE ALERT


1 Press [], then [5] "SETTINGS".

2 Then press [3] "MESSAGE ALERT". Select the parameter (RINGER/SILENT/VIBRATE) by using the navigation key. Press [SEL].



SETTINGS


DELIVERY ACK

1 Press [], then [5] "SETTINGS".

2 Then press [4] "DELIVERY ACK"
Select the parameter (YES/NO)
by using the navigation key.
Press [SEL].




AUTO ERASE

1 Press [], then [5] "SETTINGS".

2 Then press [5] "AUTO ERASE".
Select the parameter (DISABLED/OLD
INBOX)
by using the navigation key.
Press [SEL].




ENTRY MODE

1 Press [], then [5] "SETTINGS".

2 Then press [6] "ENTRY MODE"
Select the parameter (T9 MODE/ALPHA
MODE) by using the navigation key.
Press [SEL].

 


FILED

1 Press [], then [6] "FILED".
Select the stored message by using the
navigation key,
then press [SEL].



2 The text message is displayed.
Press [OPTS].



3 3.1 If the text message is saved from
"Inbox" menu, this screen will be
displayed.



3.2 If text message is saved from
"Outbox" menu, this screen will be
displayed.



ERASE MESSAGES

ERASE MESSAGES

- 1** Press [], then press [7]
“Erase Msgs”.

1:Inbox (XX)
2:Outbox (XX)
3:Filed
SEL PREV

- 2** 2.1 To erase inbox messages,
press [1].

Erase inbox?
NO
SEL PREV

- 2.2 To erase outbox messages,
press [2].

Erase outbox?
NO
SEL PREV

- 2.3 To erase filed messages,
press [3].


Erase filed?
NO
SEL PREV

REFERENCE(WRITING MESSAGE)

You can enter letters and numbers into your phone for a person's name and phone number, writing a text message, and so on. There are two ways to do this:

1. Using standard text input
2. Using T9 mode text input

USING STANDARD TEXT INPUT

- 1** Select Abc mode, by pressing [].

- When you select this mode, the ABC icon appears as visual confirmation.

MESSAGE? Abc
STO MODE

- “Find the key that corresponds to the letter you want to enter.”
- Press it as many times as needed for the letter to appear on the screen.




- For example, to enter the name John:

Press [5] J
Press [6] [6] [6] o
Press [4] [4] h
Press [6] [6] n

MESSAGE? Abc
John
STO MODE

REFERENCE(WRITING MESSAGE)


USING T9 MODE TEXT INPUT

KEY	FUNCTION
 Mode	Press to change mode. [T9Abc][Abc][123][Special characters mode]
[0] Next	Press to view the next matching word if the underlined word is not the word you intended.
[#] Space	Press once to accept a word and add a space.
[*] Shift	Press to select standard text input or T9 mode text input. [Abc], [ABC], and [abc] indicate standard text input. [T9Abc], [T9ABC], and [T9abc] indicate predictive text input.
 Clear	Press once to delete the character to the left of the cursor.
 Left, Right	To move cursor.

REFERENCE(WRITING MESSAGE)

USING T9 MODE TEXT INPUT

 1 T9 mode is the default mode.

2 Select the T9Abc mode, by using the [] keys.

- This method allows you to write using a built-in dictionary.
- With predictive text input, you only need to press each number key once for each letter.

-For example, to write **John** with the English dictionary selected:

MESSAGE? T9Abc
K
STO MODE

-[5] (for J)

MESSAGE? T9Abc
Km
STO MODE

-[6] (for o)

MESSAGE? T9Abc
Log
STO MODE

-[4] (for h)


MESSAGE? T9Abc
John
STO MODE

-[6] (for n)

<The display shows the above words for each key pressed.>

REFERENCE(WRITING MESSAGE)

WRITE WITH T9 MODE TEXT INPUT

Select the T9 Abc mode, by using the [] keys.

1 Press each key once for each letter.

-For example, to write "John" press.
[5] [6] [4] [6]

MESSAGE?	T9Abc
John	
STO	MODE

2 Press [0] to view the next matching word if the underlined word is not the word you intended.

If the word is correct, then press [#]

MESSAGE?	T9Abc
John	
STO	MODE


If the word is not correct, then press [0]

MESSAGE?	T9Abc
Join	
STO	MODE

press [0] until you reach the correct word, the word is correct, then press [#]

MESSAGE?	T9Abc
Logo	
STO	MODE

3 Insert number


- To add a number to the message.
- Press [] key until 123 appears.
- Select the numbers you want.
- Or press numeric key and hold for more than 1 second.

MESSAGE?	123
12345	
STO	MODE

[70]


REFERENCE(WRITING MESSAGE)

4 Insert Symbols


- Press [] key until symbol screen appears.
- Use numeric keys to select the character you want.

Press [],

1	2	3	4	5	6	7	8	9	0
!	@	#	%	&	*	<	>	-	
STO									MODE

Press [],


1	2	3	4	5	6	7	8	9	0
_	+	=	:	"	'	()	/	~
STO									MODE

Press [],


then press numeric key to select the character you want.

1	2	3	4	5	6	7	8	9	0
	?	.	,	{	}	\$	[]	^
STO									MODE

5 Write compound words

- Write the first part of the word and press [] key to accept it.
- Write the last part of the compound word and press [#] key to enter the word in memory.

- For example, to write "Whitehouse"

[9] [4] [4] [8] [3] []


MESSAGE?	T9Abc
White	
STO	MODE

[4] [6] [8] [7] [3]

MESSAGE?	T9Abc
Whitehouse	
STO	MODE

Then press [#] key.



 
[71]



CHAPTER 8

MAKING AN EMERGENCY CALL

   
- 1 Making an Emergency Call



MAKING AN EMERGENCY CALL

This is the enhanced 911 feature.

E911 IN LOCK MODE

- 1** Enter 911 and press [].

 


- 2** A call connects.




- 3** Reserve Emergency Mode during 5 minutes.

- When a call ends, the phone returns to the Emergency Mode.



E911 USING ANY AVAILABLE SYSTEM

- 1** Enter 911 and press [].



- 2** A call connects.



- 3** Reserve Emergency Mode during 5 minutes.

- When a call ends, the phone returns to the Emergency Mode.
- The phone tries to make an emergency call using any available system.



CHAPTER 9


INTERNET BROWSER

This chapter describes convenient functions that allow you to access the Wireless Internet from your phone.

- 1 Start Internet Browser
- 2 Browser Menu

START INTERNET BROWSER


ACCESS WIRELESS INTERNET

- 1 To access Wireless Internet network, press [] key. Then internet browser will start.




BROWSER MENU

 
The browser menu is a list of actions necessary for full operation of the browser.

To enter the browser menu, press [] and hold.

RELOAD


Selecting the reload item from the browser menu reloads the current deck.


- 1 Press [] and hold, then press [1].

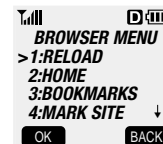

HOME

When the home item is selected from the browser menu, the phone displays the home deck.

 
- 1 Press [] and hold, then press [2].

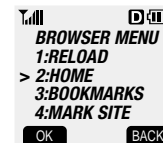

BOOKMARKS

When the bookmarks item is selected from the browser menu, the browser displays the user's bookmarks.

 
- 1 Press [], then press [3].

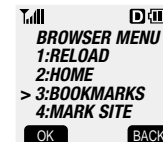


BROWSER MENU

MARK SITE

When the mark site item is selected from the browser menu, the browser adds the current deck to the user's bookmark list.


- 1 Press [] and hold, then press [4].

 "No bookmarks service site" is displayed, when the site cannot support bookmarks service.

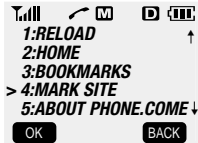

ABOUT PHONE.COM


When the about phone.com item is selected from the browser menu, the browser is displayed with the browser version and copyright information. The device layer version is also displayed.

 
- 1 Press [] and hold, then press [5].



ADVANCED...

Selecting the advanced item in the browser menu displays the advanced menu items.


- 1 Press [] and hold, then press [6].

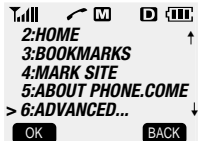


BROWSER MENU

SHOW URL


Selecting the Show URL item displays the URL of the current deck.

 - 1 Press [] and hold, then press [6], then press [1].

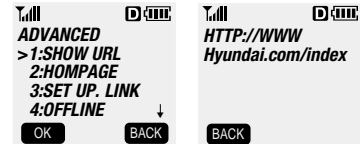

HOMEPAGE


Selecting the homepage item from the browser menu, enables the user to change the homepage.

- 1 Press [] and hold, then press [6], then press [2].



SET UP.LINK

Selecting set UP.link item from the browser menu displays a screen that allows the user to select an alternate UP.Link.


- 1 Press [] and hold, then press [6], then press [3].



BROWSER MENU

OFFLINE SERVICES


Selecting the offline services item from the browser menu navigates the user to a list of installed channel application. Selecting a particular application navigates the user to the entry point of the application.

 
- 1 Press [] and hold, then press [6], then press [4].



OUTBOX

When the outbox item is selected from the browser menu, a status screen is displayed that shows the user how many items are pending delivery and the age of the oldest item.


- 1 Press [] and hold, then press [6], then press [5].

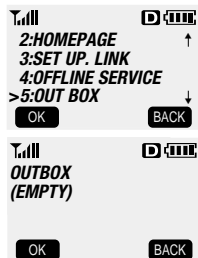


BROWSER MENU

RESTART UP.BROWER


Selecting restart from the browser menu causes the deck history and deck cache to be cleared and a new session with the UP.Link to be started.

 - 1 Press [] and hold, then press [6], then press [6].

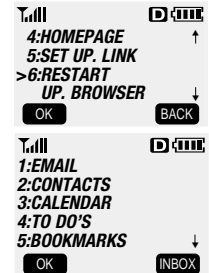


ENCRYPTION

Selecting the encryption item from the browser menu displays a list of security-related items.

 - 1 Press [] and hold, then press [6], then press [7].








CHAPTER 10

SAFETY

   - ❶ Safety Information for Wireless Handheld Phones
- ❷ Safety Information for FCC RF Exposure



SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

Read This Information Before Using Your Handheld Portable
Cellular Telephone

EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *
NCRP Report 86 (1986) *
ICNIRP (1996) *

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

*****;

American National Standards Institute;
National Council on Radiation Protection and Measurements;
International Commission on Nonionizing Radiation Protection.

ANTENNA CARE

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

WARNING: Failure to follow these instructions may lead to serious personal injury and possible property damage.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

If you have a pacemaker:

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

Posted Facilities

Turn your phone OFF where posted notices so require.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

OTHER SAFETY GUIDELINES

Aircraft

FCC and Transport Canada Regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

Potentially Explosive Atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or articles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating the equipment, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.

1. DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.
2. DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using the unit, lay down the unit to avoid possible damage due to instability.
3. DO NOT expose this equipment to rain or spilled beverages.
4. DO NOT use unauthorized accessories.
5. DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized Audiovox cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
6. DO NOT short-circuit the battery terminals with metal items etc.

SAFETY INFORMATION FOR FCC RF EXPOSURE



WARNING! Read this Information before using your phone

CAUTIONS

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operation with the back of the phone kept 0.5 inches (1.27cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5 inches (1.27cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. All belt-clips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

Vehicle Mounted External Antenna(optional, if available)

A minimum separation distance of 7.9 inches (20cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.

Note: For more information about RF exposure, please visit the FCC website at www.fcc.gov

CHAPTER 11

WARRANTY

- ❶ Protect Your Warranty
- ❷ 12 Month Limited Warranty

PROTECT YOUR WARRANTY

Read your Warranty carefully, with the special consideration to paragraph seven of the Limited Warranty for your unit.

“Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling misuse, neglect or accident”.

Many companies are making look alike accessories and in some cases, promoting that their product is equal to or better than the Audiovox product. Be careful. Some of these products may not be compatible to use with your Audiovox product and may damage the unit or cause it to malfunction. If service is required on your unit and it is determined that a non-Audiovox accessory has created the problem with your unit, the Warranty will not apply. In addition, if the unit has already suffered irreversible damage by reason of a non-compatible accessory, the Warranty will be voided. To protect your Warranty, use only compatible accessories which cannot damage or interfere with the functioning of your Audiovox product.



AUDIOVOX COMMUNICATIONS CORP.

555 Wireless Blvd., Hauppauge, New York 11788, 800-229-1235
 16808 Marquardt Avenue, Cerritos, California 90703, 562-802-5100
 Audiovox Canada
 5155 Spectrum Way, Unit #5, Mississauga, Ontario
 Canada L4W 5A1, 800-465-9672

12 MONTH LIMITED WARRANTY

AUDIOVOX COMMUNICATIONS CORP.(the Company) warrants to the original retail purchaser of this Audiovox Handheld Portable Cellular Telephone, that should this product or any part thereof(except the items listed below), under normal use and conditions, be proven defective in material or workmanship within the first twelve (12)month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts)at the Company’s option, without charge for parts or labor directly related to the defect(s).

The keypad and display are similarly warranted for ninety (90) days from date of purchase.

The accessories consisting of the antenna and rechargeable battery pack, desktop charger are similarly warranted for twelve (12) months from original purchase.

This Warranty does not apply to batteries, fuses, or costs incurred for testing or checking, or to any product or part hereof which has suffered through alteration, serial number defacement, improper installation, excessive temperature or humidity, environmental conditions, mishandling misuse, neglect or accident. This Warranty is not assignable or transferable.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of warranty coverage, specification of defect(s), transportation prepaid, to the Company at the address shown below. For TRAVELERS WARRANTY SERVICE.

12 MONTH LIMITED WARRANTY

Call toll free to (800) 229-1235 for reference to an Authorized Warranty Station in your area.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

The Company disclaims liability for geographic coverage, inadequate signal to antenna, communications range or operation of the Cellular System as a whole.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

12 MONTH LIMITED WARRANTY

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

IN U.S.A.: Audiovox Communications Corp.
555 Wireless Blvd.
Hauppauge, NY 11788
(800)229-1235

IN CANADA: Audiovox Canada Ltd.
5155 Spectrum Way, Unit #5
Mississauga, Ontario L4W 5A1
(800)465-9672