

User Manual

English

Bea-fon S700



bea-fon

General Information

Congratulations on the purchase of your Bea-fon S700!

Please read this information before using the phone to make a better use of your phone. We are not responsible for any damage due to your misunderstanding of this information and misacting.

We are endeavoring to improve our products and services. We reserve all the rights to revise and change the description of this product and its software as well as this user's manual without obligation to notify any person of such revisions and changes.

This user manual is for your better use of this phone not an approval of any accessories. All the pictures in this manual are for reference only. There may be slight difference between the appearance of phone/ keys/ contents of display used in this manual and those of your phone. Please refer to your phone for actuality. Some features introduced in this manual are network or subscription-supported features. Please contact your network operator for further information.

Please check the package contents to ensure that all components listed below are included. If the product is defective or if there is a component missing, immediately contact the retailer where you purchased this handset.

Your Bea-fon S700 box contains:

- 1 mobile phone
- 1 DECT station (docking station)
- 1 travel charger
- 1 telephone cable
- 1 battery
- 1 headset
- User manuals

If you find the size of the script not easily readable for you, you can also find this manual on our website, where you will be able to adjust the size of the script.

Go to: www.beafon.com / Products

Device Code:

This device code ensures that unauthorized persons will not be able to use your phone. The default code is; 0000.

PIN-Code:

The PIN-code was supplied to you by your network operator together with your SIM card and/or adjusted/set up by yourself.

Note: All the illustrations, simulated screen and related images used in this manual are for reference only. Please refer to your handset for actuality.

Directory

- General Information..... 2
 - Device Code:..... 2
 - PIN-Code:..... 2
- Directory 3
- Your phone..... 5
- Getting started 6
 - What is a SIM card? 6
 - Insert the SIM card as follows: 6
 - Insert the battery as follows:..... 6
 - Charging the battery:..... 6
 - Switching the telephone on or off:..... 6
 - Keypad lock: 7
 - Standby: 7
 - Display (Standby mode): 7
 - Screen icons:..... 7
 - Soft key functions:..... 8
 - Password: 8
- Call function..... 9
 - Make a call:..... 9
 - Make a call using the phone book:..... 9
 - Answering a call: 9
 - Hands Free:..... 9
- Menu.....10
- Messages11
 - Inbox:11
 - Write message:11
 - Outbox:.....12
 - Drafts:12
 - SMS settings:.....12
 - Voice mail:12
- Contacts.....12
 - Quick search:12
 - Add new contact:13
 - Copy all:13
 - Delete all:13
 - Caller Groups:13
 - Settings:13
 - Speed dial:13
- Calls14
 - Missed calls, Dialed calls and Received calls:14
 - Delete call logs:14
 - Call timers:14
- User profile14

Directory

- Settings 14**
 - Phone settings: 14
 - Call settings: 15
 - Network setting: 15
 - Security setup: 15
 - Restore factory settings: 15
 - SOS setting: 15
 - SOS: 16
 - SOS number: 16
 - Help alarm: 16
 - SOS Message: 16
- Alarm 17**
- Extra 17**
 - Calculator: 17
 - Calendar: 17
- DECT Setup 18**
 - Intercom: 18
 - (Power) On: 18
 - (Power) Off: 18
 - BS Setting: 18
 - HS Setting: 18
 - Registration: 18
- Bluetooth 19**
- FAQ 20**
- Phone 22**
- For your safety 22**
 - Traffic Safety: 23
 - Operating environment: 23
 - Electronic devices: 23
 - Pacemakers: 23
 - Hearing aids: 23
 - Other medical devices: 24
 - Posted facilities: 24
 - Potentially explosive atmospheres: 24
 - Vehicles: 24
 - Certification information (SAR): 24
 - Liability Disclaimer: 25

Your phone

Front



Display

Soft key 'left' and
Short key Menu.

Dial Key **Green key**

Number Key
In standby mode; press to input numbers.
Long press 2-9 to speed dial.
In editor; press them to input numbers or words.

*** Key**
In standby mode; press it to input * / + / p / w
In editor; press to input symbols.

Arrow key (up)
In standby mode, press it will go to Priority contacts.
In standby mode, Long press to switch the DECT power On or Off.

Soft key 'right' and
Short key Names

Power On/Off Red key

Arrow key (down)
In standby mode; press it will switch to DECT menu.

Key
In standby mode; long press it switch between silent and general mode. In editor; press to change input method.

Left side

Back

Right side



Flashlight key

Headset connector



SOS button

Volume keys

Key lock

Bluetooth key

The charger connector is on the bottom of the phone.

Getting started

What is a SIM card?

Every mobile phone has a SIM card (Subscriber Identity Module). This is a micro-chip that holds your personal information such as names and phone numbers. Your phone won't work without it. If you already have contacts on your SIM card, they can be transferred in most cases.

Keep the SIM card away from children. The SIM card can easily be damaged or bent. You should therefore handle the SIM card with care during installation and/or removal.

Insert the SIM card as follows:

1. Make sure that the phone is switched off and the charger is disconnected from the phone.
2. Turn the phone over and remove the battery cover.
3. If the battery is already inside, remove it.
4. Here you see the SIM card slot.
5. Slide the SIM card carefully into the SIM card slot. Make sure that the gold-coloured connectors on the SIM card are facing downwards and that the bevelled corner is on the right.

Insert the battery as follows:

1. Insert the battery by aligning the gold contacts in the battery compartment on the phone.
2. Push down on the upper section of the battery until it 'clicks' into place.
3. Close the battery compartment by sliding the cover closed until you hear a 'click'.

Charging the battery:

There are two ways of S700 battery charging:

- A. Desktop charging (DECT station)
- B. Travel charging

The lithium battery of the mobile phone can be immediately used after unpacking. A new battery, is not fully charged, and performs best after performing a full charge/discharge 3 times:

1. Plug the charger into the charger connector.
2. Plug the other end into an electrical outlet.
3. The phone may need several hours for reaching a fully charge.

When your phone is power off, it might take a few seconds to show charging display and it shows charge complete when finished.

When your phone is power on, the battery icon flickers when it starting charging and become still with full bars in battery icon when finished.

Note: Charge the battery for at least 10 hours before using the phone for the first time.

Switching the telephone on or off:

Make sure that you SIM card is in your mobile phone and that the battery is charged.

1. Press the **red key** to switch the phone on.
 2. If prompted, choose your language and press **OK**.
 3. If you have entered a PIN-code before, the phone will ask for the code now. Enter the PIN-code and confirm by pressing **OK**.
 4. To turn off your phone, press and hold the **red key** for two seconds.
- If you don't insert a SIM card, your phone shows **Emergency**. None of the functions related to SIM card can be used. You can make an emergency call only.

Note: If you enter an incorrect PIN-code 3 times in succession, the phone will require you to enter the PUK-code. You received this PUK-code together with your SIM card.

Keypad lock:

The keypad lock prevents keys from being pressed accidentally.

To lock or unlock the keypad:



Switch the unlock key, which is on the right side of the phone, down and then the key lock is activated. If you switch the unlock key down again the key lock is deactivated.

Standby:

If you do not use your phone for a while, it will automatically switch to **standby mode**. The phone will be activated again by pressing any key. Calls can be received as usual while in standby mode.

Display (Standby mode):

1	2	3
	4	
	5	
	6	
7		8

- | | |
|--------------------------------------|-----------------|
| 1. Signal status | 5. Date and day |
| 2. Pictograms | 6. Time |
| 3. Battery status | 7. Menu |
| 4. Network operator / DECT On or Off | 8. Names |

Screen icons:

	GSM Signal Strength (1) <i>The vertical bars (blue antenna) show the network connection strength. SIM card has signals.</i>
	DECT Signal Strength (2) <i>The vertical bars (red antenna) show the network connection strength. DECT is active.</i>

	New messages <i>This icon shows when you receive a new message.</i> SIM Card has an unread message <i>The inbox is full.</i> <i>This icon  flickers when the inbox is full and you need to delete messages to receive new messages.</i>
	Earphone <i>This icon shows when you plug the earphone in. Voice will be heard from the earphone.</i>
	Missed Calls <i>This icon shows when you are viewing the missed call. SIM card has a missed call.</i>
	Alert Type <i>Ring</i>  <i>Silent mode on and Vibration only</i>  <i>Vibrate then ring</i>
	Call Divert <i>This icon shows when you divert all calls unconditionally. SIM card has been set up call divert.</i>
	Keypad Lock <i>The icons show the current state of your keypad.</i> <i>Keypad locked - currently the keypad is in a locked state, the keystroke is of no use.</i>
	Turn alarm on <i>This icon shows when you turn alarm on.</i>
	Roaming <i>This icon shows when your phone is in roaming state. SIM card is roaming.</i>
	Bluetooth <i>This icon shows when the Bluetooth is active.</i>
	Battery capacity <i>This icon's changes according to the status of battery capacity.</i>

Soft key functions:

- Direction Key (up):** In standby mode, press it to enter the 5 *Priority numbers*. You can *Call*, *Edit* or *Delete* them.
In standby mode, long press it to switch the *DECT* power mode *On* or *Off*.
- Direction Key (Down):** In Standby mode, enables you to enter the *DECT* menu screen.
- Soft key 'right':** In Standby mode, enables you to enter the *Names* screen.
- Soft key 'left':** In Standby mode, enables you to enter the *Menu* screen.

Password:

The password of your phone is originally set to be **0000**. You can change it whenever you like. You can also change your SIM card password. See *Security setup* on page 15.

Note: Please contact your network operator for further information.

Call function

Make a call:

1. To make a call, enter the phone number with the prefix and press the **green key**. For international calls, enter '00'. Then enter the country code followed by the telephone number, in which the 0 of the prefix must be dropped.
2. If you have entered a wrong number, press the soft key 'right' **Clear** to remove the number to the left of the blinking cursor.
3. Press the **green key** to call the number.
4. If the S700 registry on the DECT station, the S700 will ask to the dial mode: **DECT Dial** or **GSM Dial**.
5. Press the **red key** to end the call or to cancel the call attempt.

Make a call using the phone book:

If you have saved a name and number in the phone book, you can also use the phonebook to make a call. (see **Add new contact** on page 13, how to save a name and number).

1. In standby mode, press the soft key 'right' to go to **Contacts**.
2. Scroll with the up and down arrow key to the name you want to call.
3. Press the **green key** to call the number.
4. If the S700 registry on the DECT station, the S700 will ask to the dial mode: **DECT Dial** or **GSM Dial**.
5. Press the **red key** to end the call or to cancel the call attempt.

Answering a call:

When there is an incoming call, the phone rings and/or vibrates and shows the number or the corresponding name.

1. Press the **green key** or **Answ..** if you would like to answer a call.
2. Press the **red key** or **Reject** if you would like to reject a call, or for ending the connection after the call.

Earphone/Bluetooth Mode: When plugging the earphone (including Bluetooth earphone), you can answer a call by pressing the key on the earphone.

Hands Free:

During a call you can turn the hands free equipment on or off with the right soft key.

Menu

Press the soft key 'left' to go to the *Menu*. Scroll through the menu using the arrow keys.

1. Messages

1. Inbox
2. Write Message
3. Outbox
4. Drafts
5. SMS settings
6. Voice Mail

2. Contacts

1. Quick search
2. Add new contact
3. Copy all
4. Delete all
5. Caller groups
6. Settings
7. Speed dial

3. Calls

1. Missed calls
2. Dialed calls
3. Received calls
4. Delete call logs
5. Call timers

4. User profiles

1. General
2. Meeting
3. Outdoor
4. Bluetooth

5. Settings

1. Phone settings
2. Call settings
3. Network setting
4. Security setup
5. Restore factory settings
6. SOS settings

6. Alarm

7. Extra

1. Calculator
2. Calendar

8. DECT Setting

1. Intercom
2. (Power) On
3. (Power) Off
4. BS Setting
5. HS Setting
6. Registration

9. Bluetooth

1. Power
2. Inquiry audio device
3. My device
4. Active devices
5. Settings
6. About

Messages

The phone supports Short Messaging Service (SMS). You can send text messages and manage the messages that you sent and received. Here you can also choose *Voice Mail*. These services are web-based services. Please contact your network operator before using.

Inbox:

The *Inbox* is for storing received SMS messages. Depending on the selected mode, the phone vibrates or rings when you receive a new message. And in the standby mode you see this icon  until you have read the new SMS message.

You can choose the following options while reading your received SMS:

Reply, Delete, Forward, Copy to SIM, Move to SIM*, Delete all, Copy all, Move all, and Use number.*

** These options may not appear according to the storage location.*

Note: The new message icon keeps flickering in the standby mode when you inbox is full. Please delete some messages for receiving new messages.

Write message:

You can write and send text messages. Invoicing is based upon how many ordinary messages are needed for any multi-part message.

Press the key marked with the letter that you want repeatedly until the letter appears.

Use the following functions to edit the text:

- To add a space, press 0.
- To add a punctuation mark or special character, press 1.
- To move the cursor left or right, press the up and down arrow key.
- To delete the character to the left of the cursor, press *Clear*. To clear the screen, press and hold this key.
- To switch between upper and lower case, press # indicated with: ABC, abc, 123

Key in the message. The number of characters and the current part numbers are shown on the top right of the display.

When the message is complete, press *Option*, select *Done* and select *Send*, key in the recipient's phone number or search for the number, and press *OK*.

If you want to send the message to several people, press *Option*, select *Done* and select *Send to many*, scroll to *Edit recipients*, press *Option* and *Edit* the first recipient, and press *OK*. Repeat this for each recipient and press *Back* and scroll to *Send now* to send the message.

If you want to send the message to a caller group, press *Option* select *Done* and select *Send by group*, choose the caller group and press *OK*.

Other options are:

Insert template, Insert number, Insert name and Input method.

Outbox:

The *Outbox* is for storing sent SMS messages.

You can choose the following options while reading your sent SMS:

Send, Edit, Delete, Copy to phone, Move to phone*, Delete all, Copy all, Move all and Use number.*

**These options may not appear according to the storage location.*

Drafts:

By *Drafts* you can view the draft SMS messages you have saved.

You can choose the following options while reading your draft:

Send, Edit, Delete, and Delete all.

SMS settings:

Here you can edit your SMS message settings. You can choose the following options:

Profile settings: This setting is needed to use the SMS function. The number can be obtained from the network operator.

Memory status: Displays the percentage of memory space used in the SIM card and phone memory.

Preferred storage: Select *SIM* or *Phone* to store messages on the SIM card or Phone memory.

Voice mail:

Voice mail is a service supplied by your network operator. For more information and for the voice mailbox number, contact your network operator. When you have a new voice mail message, your phone will receive a message.

The phone offers you 2 voice mail addresses.

1. Select address 1 or 2 and press *Option*.
2. Choose *Call voice mail* or *Edit*.
3. If you choose *Edit*, edit the name and number of the voice mail. After enter the number press *OK*.

In standby mode: Press and hold key number 1 for directly calling the *Voice mail*. Only the number saved under voice mail address 1 is called.

Note: This function must be supported by your network operator. For more information about this please contact your network operator.

Contacts

Quick search:

1. Choose *Quick search* in the *Phonebook*.
2. Key in the first character(s) of the name you are looking for.
3. If you press *Option* you can use the following options:
Call, View, Edit, Delete, Copy and Move.

Add new contact:

You can save names and phone numbers in the phone's memory (internal phone book) and in the SIM card's memory (SIM phone book). The internal phone book can store up to 200 names.

1. Choose *Add new contact* in the *Phonebook*.
2. Choose storage: *To SIM* or *To Phone*.
3. If you choose *To SIM*: you can only edit *Name* and *Number*.
4. If you choose *To phone*: you can edit *Name*, *Number*, *Home number* and *Caller group*.
5. Press *OK* if you want to save the contact.

Note: For the DECT contacts save the country code numbers with '00' instead of '+'. The DECT mode supports not the character '+'.

Copy all:

You can copy all the names stored in SIM card to phone or copy all the names in phone storage to SIM card.

Note: When copy the names stored in the phone storage to SIM card, only names and default numbers can be saved.

Delete all:

You can choose the following options:

- | | |
|--------------------|--|
| <i>From SIM:</i> | Delete all the names stored in SIM card |
| <i>From phone:</i> | Delete all the names stored in the phone storage |
| <i>One By One:</i> | Delete the selected names one by one. |

Caller Groups:

A *Caller groups* is the combination of phone settings used to identify a particular group of records. The phone provides 5 call groups: *Friends*, *Family*, *VIP*, *Business* and *Others*. You can manage and edit the details of caller groups.

Settings:

- | | |
|---------------------------|--|
| <i>Memory status:</i> | Displays the amount of SIM and phone numbers you have saved. And also how many you still can save. |
| <i>Preferred storage:</i> | Set the default storage of new numbers. |

Speed dial:

You can turn the speed dial function on or off by *Enable speed dial*.

It is possible to enter 8 speed dial numbers that can be called from the stand-by mode by pressing the corresponding number keys (2~9).

1. Choose *Set number* and press *OK*.
2. Select the key you want (2-9) and press *Option*.
3. Press *OK* for *Edit*.
4. Select the name you want and press *OK* (the name you want, must already been saved by *Contacts*). The name is now saved under the corresponding number key.

In standby mode: Press and hold the corresponding number key until the call is started.

Calls

Missed calls, Dialed calls and Received calls:

The phone registers the phone numbers of *Missed calls*, *Dialed calls* and *Received calls*.

When you press *OK* by *Missed calls*, *Dialed calls* or *Received calls*, you can view the calls you Missed, Dialed or Received. If you press *Option* you can choose the following options: *Delete*, *Save to Phone*, *Call*, *Edit* and *Sent text message*.

Delete call logs:

You can delete all the records of the *Missed calls*, *Dialed calls* and *Received calls*, you can also choose *Delete All* to delete all the records of the above-mentioned calls logs.

Call timers:

Shows the time of the *Last call* and also the total time of the *Dialed* and the *Received* calls.

Reset all Time: To Reset all the call times back on zero.

User profile

The phone provide 4 pre-defined user profiles that allow the operations of the phone to best suit the environment you are in. The profiles are *General*, *Meeting*, *Outdoor*, and *Bluetooth*. The phone will automatically enter the Bluetooth profile if you connect the BT headset. If you choose *Sound & Alert* in a profile you can set the following options:

- Tone setup:* Here you can set your: *Incoming call*, *Alarm*, *Power on*, *Power off*, *Message tone* and *Keypad tone*.
- Volume:* Here you can set your volume of *Ringtone* and *Key tone*.
- Alert type:* Select here your *Alert type*: *Ring only*, *Vib. Only*, *Vib. and Ring* and *Vib. then Ring* are available for your selection.
- Ring type:* Select here your *Ring type*: *Single*, *Repeat* or *Ascending*.
- Extra tone:* You can select one or more extra tones. The options are *Warning*, *Error*, *Camp on* and *Connect*.

If you want a Profile activated; please choose the *Activate* and press *OK*.
If you want to Restore the default settings, please choose *Restore as default* and press *OK*.

Settings

Phone settings:

You can choose the following options:

- Time & Date:* *Set time and date* and *Set format*.
- Language:* Here you can choose the language you want in your display.



Characteristics: Here you can choose your *Wallpaper, Screensaver, Show date and time* and *Backlight*.

Greeting text: If activated, the greeting text appears when the phone is turned on. You can edit the greeting text.

Flashlight timeout: Here you can choose the timeout of the flashlight.

Call settings:

Depending on network operator support and subscription, you can choose the following options:

Caller ID: When you make a call, your number can be shown or hidden on the display of the called party. Select *Set by network* to use the default setting provided by the network operator.

Call divert: To divert your incoming calls to your voice mailbox or some other phone number (network service). Select the divert option you want. Several divert options may be active at the same time.

Call barring: With this network service you can restrict the making and receiving of calls with your phone.

More: You can select more extra function: *Auto redial, Answer mode* and *Call time display*.

Network setting:

Depending on network operator support , you can choose the following options:

Network selection: Here you can choose: *New search, Select network* and *Selection Mode*.

Preferred networks: Here you can choose the network you prefer.

Security setup:

You can choose the following options:

Phone lock: To lock your phone with a password. The default password is: *0000*.

Change password: Here you can change your Phone password.

Restore factory settings:

To reset some of the menu settings to their original values. The password is: *0000*.

SOS setting:

The SOS function is a simple function which can save lives at the deciding moment. In all, you can save 5 SOS numbers (relatives, neighbours, friends and rescue). These numbers, previously saved in order of sequence, will be automatically dialed in an SOS by pressing the *SOS button* on the back of the mobile phone. During the SOS call, a warning tone sounds so the person that you rang knows that it is an emergency! If you cannot get through on the first number, the second number will be called automatically. If you cannot get through on the second number, the third number will be called etc.

If no emergency number is saved, or your phone card has run out, or you are not allowed under a foreign network (e.g. Roaming not activated), you can dial 112 or another emergency number on the numerical keypad.

SOS:

Press the SOS button on the back of the mobile phone for 3 seconds. If you want to stop or cancel the SOS call, press the **red key** for 3 seconds.

Functionality:

By pressing the SOS button, the SOS numbers you have previously saved will be automatically dialed in the given sequence. (The SOS button also functions when the key lock is on). The mobile phone switches on the hands free function at full volume and at the same time, if the call answered, the pre-recorded voice will be heard first, the content is as follows, 'please press 0 to continue';

The conversation will begin after pressing 0; otherwise, it will hang up automatically in 14 seconds; and then begin to dial the next number, until each number has been dialed for 3 times.

If the SOS call is not answered, the S700 will send a SOS SMS to the SOS numbers (in case mobile number or telephones with SMS function is available for emergency contact).

Note:

- If you want to stop or cancel the SOS call, press the **red key** for 3 seconds.
- If answered the call the recipient have to press the key '0' within 14 seconds. After that the next number will be called automatically.
- The SOS call should not end up unheard on a mobile- or voice mail box. To make this sure the calling time is limited for 14 seconds. After that the next number will be called automatically.
- When changing a phone card: Always make sure that there is sufficient credit on your phone card because private emergency numbers cannot be dialed without sufficient credit.
- As a rule, the international emergency call 112 can still be called outside of the regional network of your network operator.

Attention: If you want to save SOS numbers such as the ambulance service, the police, fire brigade etc. as an SOS number, you must gain permission from each of these institutions beforehand. There will be no liability for possible costs arising from calling them by accident.

SOS number:

Here you can set up a maximum of 5 *SOS numbers* and their sequence.

Help alarm:

Here you can choose to turn the SOS alarm sound *On* or *Off*.

SOS Message:

Here you can choose to turn the SOS Message *On* or *Off*.

If you press the SOS button, and the SOS call is not answered, this text will be send to the *SOS numbers*. The text can be changed (maximum 30 characters).

Alarm

You can set a maximum of 5 different alarms.

To set an alarm clock:

1. Select one alarm and press *Edit*.
2. *Edit alarm: On or Off, Time and Repeat*.
3. Press *Done* to save the *Alarm*.

When alarm sounds, you can stop the alarm by pressing *Stop*. If you press *Delay*, the alarm stops and rings again. If the alarm sounds for one minute, the alarm will stop and sound again after about five minutes.

Extra

Calculator:

The phone is provided with a calculator. This calculator has limited accuracy and rounding errors may occur, especially in long divisions.

Function:

- The keys 1 to 0 insert a digit.
- To insert a decimal, press #.
- Press the up and down arrow key for +, -, x, ÷.

To get the result, press *OK*. Press and hold *Clear* to clear the display for a new calculation.

Calendar:

You can schedule and organizer things such as appointments and meetings in the *Calendar*.

In the calendar, press the up and down keys to scroll to different days.

To add a new task:

1. Press *Option* and choose *Add task*.
2. Choose *Reminder*.
3. Here you can enter your *Reminder*.
4. Press *Done* to save the *Reminder*.

If you choose *Option* in the calendar you can choose the following options:

Jump to date, Add task, View, View all and Delete event.

Note: You can only store a fixed number of tasks. So please delete some unimportant tasks to save storage for important ones.

DECT Setup

You can choose the following options for your DECT:

Intercom:

More than 2 handsets register to the same base, enter the submenu of intercom, press **OK** key, the handset will ring, then press **Talk** to begin intercom.

(Power) On:

Press **OK** to switch the DECT mode **On**.

(Power) Off:

Press **OK** to switch the DECT mode **Off**.

BS Setting:

Here you can choose the following options:

Del Handset: Log out the handset.

Flash time: For operation on a PABX, you may have to change this value. Please refer to the user guide of your current DECT station for your PABX. You can choose the following flash times: **100ms**, **300ms**, **600ms** and **1000ms**.

Dial mode: The following dialling modes can be selected: **Tone** or **Pulse**.

Change PIN: Here you can change the base station PIN (default: 0000).

Base default: Input the PIN code (0000) to reset the settings.

HS Setting:

Here you can choose the following options:

Select Base: You can register up to four base stations on your handset.

HS Name: The handset name can be changed (maximum 30 characters).

Registration:

Connect the base station:

Position the base station within reach of the telephone line socket and a power socket.

For safety reasons, only use the power adapter plug supplied.

1. Connect the base to the power socket. Plug the connector at one end of the power cable in the socket marked on the rear side of the base station and the power adapter plug in a properly installed 230 Volt power socket. The power adapter plug from the base station must remain connected at all times.
2. Connect the base with the phone line socket. Connect the one end of the telephone connection cable enclosed to the telephone line socket and the other end to the telephone jack on the rear side of the base station. Only use the telephone connection cable supplied.

Please follow the instructions step by step for a correct registration of your S700 on the DECT base station:

1. Long press the Base station key (10 sec.), registering LED of base will flash.

2. Go to *DECT setup*, choose (Power) *On* and press *OK*.
3. Go to *Registration* and press *OK*.
4. Choose the base (1-4) and input the PIN code (default: 0000) and press *OK*.
5. There will be a popup message asking whether to register cordless phone.
6. Press *Yes* to start, after a few seconds the handset is registry on the base station.
7. The S700 is now registered and can now be used for phone calls.

Note: If you leave the reception area of the DECT base station with the S700 for longer than 5 minutes, the DECT mode on the S700 automatically closes down. Should the S700 re-enter the reception area, you can go back to DECT mode by holding the up arrow key pressed in the standby mode. The DECT mode is turned on again.

Troubleshooting:

If you have problems with your telephone, please check the following points first:

Can't make a call:

- The telephone line is not correctly connected or is faulty. Use only the telephone cable provided.
- Test whether your telephone connection is in order by using another telephone. The power supply is not plugged in or there is a total power failure.
- The rechargeable batteries are flat or defective.
- You are too far away from the base station.
- U don't have a DECT subscription.

Connection is cut off or drops out:

- You are too far away from the base station or the base station is wrongly positioned.

No selection possible:

- Wrong selection set.

The system stops responding or is in an undefined state:

- Reset all functions to their default settings. Before doing this, please remove the adapter out of the socket.

Bluetooth

You can connect wirelessly to other Bluetooth compatible devices such as headsets.

In standby mode: press the Bluetooth button on the side to switch Bluetooth *On* or *Off*.

You can choose the following options:

Power: Here you can choose to turn *Bluetooth On* or *Off*.

Inquiry audio device: Search for available Bluetooth audio devices. If Bluetooth is not enabled you can enable it now by pressing *Yes*.

My device: List of saved devices and enables you to add new devices; *Inquiry new device*.

Inquiry new device:

1. Press *OK*, the phone is going to search for new devices.

2. Select the devices you want to connect with and press *Pair*.
3. When connecting with another Bluetooth device you need a shared *passcode*. Enter the passcode and press *OK*.
4. Select the device from the list and press *Option*. Can choose the following options: *Connect, Rename, Authorize, Delete, Delete all* and *Service list*.

Active devices: List of the Bluetooth device connected with your phone now.

Settings: Here you can set your: *Visibility, Change device name* and *Authentication*,

About: Here you can check the *Device name, Device address* and *Supported services*, of your Bluetooth device.

FAQ

If your phone appears the questions frequently, please refer to the answers as follows. After that, you cannot solve the questions, please contact with the mobile phone dealers or network operator.

Can't turn the phone on:

- Check battery installation, please install battery correctly.
- Check if battery level is low, change a battery or charge the battery.
- Check if entered incorrect PIN code 3 times in a row.
If yes, the phone is locked, then you should enter your PUK code (please contact your network operator for your PUK code).

SIM error:

- Is the SIM card dirty? Please clean it.
- Try and reinstall the SIM card.
- Is the SIM card damaged? Please contact your network operator.

Weak signal or no signal:

- You may be in a location where the reception is bad, such as tunnel or cellar, please relocate and try again.
- You can try turning around slightly or get near the window if you are in a room.
- Please contact your network operator, if you still have a weak signal or no signal.

Bad talking quality:

- Weak signal? See: Weak signal or no signal.
- Check if battery if battery is low. Charge the battery or change the battery.
- Use the up volume key to adjust the microphone volume during a call.

Can't make a call:

- Check if you enter the correct number and press *green key*.
- Check if you set call barring, if yes, please cancel it.
- Check if the SIM card is registered in the network.
- If your SIM card is a prepaid card, please make sure there is enough money on the card.

Can't receive calls:

- Is the SIM card registered in the network?
- Check if your phone is turned on.
- Check if screens shows no signal, if yes, see: Weak signal or no signal.
- Check if you set call barring, if yes, please cancel it.

Screen is dark:

- Check if battery if battery is low. Charge the battery or change the battery.
- Adjust the wallpaper.
- Your phone may be affected with damp, keep it dry.

Pin locked:

- Check if entered incorrect PIN code 3 times in a row.
If yes, the phone is locked, then you should enter your PUK code (please contact your network operator for your PUK code).

Tips: if all suggests and solutions can't solve your problem, please check Customer Service on www.bea-fon.com. Please do not disassembly or repair your phone without professional guide.

Battery

- Your phone is powered by a rechargeable battery.
- Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles! The battery can be charged and discharged hundreds of times but it will eventually wear out.
- When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery. Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.
- Temperature extremes can affect the ability of your battery to charge.
- Use the battery only for its intended purpose.
- Never use any charger or battery which is damaged.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.
- Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries performance is particularly limited in temperatures well below freezing.
- Do not charge your mobile phone if the battery is not installed.
- Do not dispose as household waste.
- Do not dispose of batteries in a fire! Dispose of batteries according to local regulations (e.g. recycling).

Phone

Your phone is a product of superior design and craftsmanship and should be treated with care.

The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not attempt to open the phone. Non-expert handling may damage it.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any accessory. If any of them is not working properly, take it to your nearest qualified service facility.

For your safety

Read these simple guidelines. Breaking the rules may be dangerous or illegal.



Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.



Road safety comes first

Do not use a hand-held phone while driving.



Switch off in aircraft

Wireless devices can cause interference in aircraft.



Switch off in hospitals

Follow any regulations or rules. Switch the phone off near medical equipment.



Switch off when refuelling

Do not use the phone at a refuelling point. Do not use near fuel or chemicals.



Interference

All wireless phones may get interference, which could affect performance.

Traffic Safety:

Do not use a hand-held telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop. Remember road safety always comes first!

Operating environment:

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

Parts of the phone are magnetic. Metallic materials may be attracted to the phone.

Do not place credit cards or other magnetic storage media near the phone, because information stored on them may be erased.

Electronic devices:

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers:

Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimise the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids:

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your network operator.

Other medical devices:

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Posted facilities:

Switch your phone off in any facility where posted notices so require.

Potentially explosive atmospheres:

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Vehicles:

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Certification information (SAR):

This model phone meets the EU requirements for exposure to radio waves. The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit recommended by The Council of the European Union is 2.0 W/kg. Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands.

The highest SAR value for this device when tested was 0.249 W/kg.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the EU requirements for RF exposure.

Liability Disclaimer:

- **Beafon Mobile GmbH shall not bear any liability for any relevant, indirect, special, incidental, or inevitable injuries caused by using of this product, including injuries which have been considered, or unconsidered, likely to happen.**
- **For any losses caused by natural disasters (such as earthquake, flood, etc.) or any acts or accidents (including deliberate or accidental misuses by the user under these accidents or other unusual circumstances) which are beyond our liability scope, non-responsibility should be accounted on us.**