



GSM 900/1800 Dual Band

Mobile Phone S 868

User's Guide


ERICSSON 

Table of Contents

General Information	2
Operators & Subscription 2, GSM 900/1800 Dual Band 2, SIM & PIN 2	
Preparing Your Phone for Use	3
The SIM Card 3, The Battery 4	
Turning On the Phone	7
When No Network Name Is Displayed 7, To Turn Off the Phone 7, Initial Settings 7	
Making and Receiving Calls	9
Emergency Calls 9, Making Calls 9, Receiving a Call 10, Redialling a Number 10, Calling Someone Who Has Called You 11, Unanswered Calls 11, Hiding or Showing Your Number 12	
During a Call	13
To Change the Earpiece Volume 13, To Mute the Microphone 13, To Use the Display as a Scratch Pad 13, To Send Tone Signals 13	
The Menu System	14
Moving through the Menu System 14, Display Text and Symbols 14	
The Phone Book	15
Before You Start 15, Entering Characters 15, Creating Your Personal Phone Book 16, Recalling a Phone Number 17, Keeping Your Phone Book Up to Date 19, Copying Phone Numbers between Positions and Memories 20	
Sending and Receiving Text Messages	21
Two Memories 21, Setting the Phone for Text Messaging 21, Composing and Sending Messages 22, Reading a Message 23, Replying to a Message 24, Erasing a Message 24, Storing a Received Message 24, Reading Stored Messages 24, Calling a Phone Number in a Message 25, Frequently Used Messages 25	

Networks	26
Search Mode 26, Selecting a Network 26, List of Preferred Networks 27	
Security	29
The Card Lock 29, The Phone Lock 30, Call Barring 30, The Keypad Lock 31, Fixed Dialling 32	
Diverting Incoming Calls	33
Activating a Call Divert 33, Diverting when the Data Menus are On 33, Checking the Divert Status 34, Cancelling Call Diverts 34	
Handling More than One Call	35
The Call Waiting Service 35, Receiving a Second Call 35, Receiving a Third Call 36, To Make a Second Call 36, Connecting Two Calls – Explicit Call Transfer 36, Conference Calls 36	
Handsfree Calling	38
Selecting Answering Mode 38, Other Handsfree-Related Settings 38	
Personalizing Your Phone	39
Personal Settings 39, The Ring Signal Level 41, Time and Date 41	
Data Menus	43
To Activate the Data Menus 43	
Other Useful Features	44
The Answering Service 44, The Call Time/Call Cost 45, The Two Line Service 46, Calling Card or Credit Card Calls 47, Area Information 48, The Alarm 50, The Calculator 50	
Guidelines for Safe and Efficient Use	51
Warranty Conditions	54

The Menu System

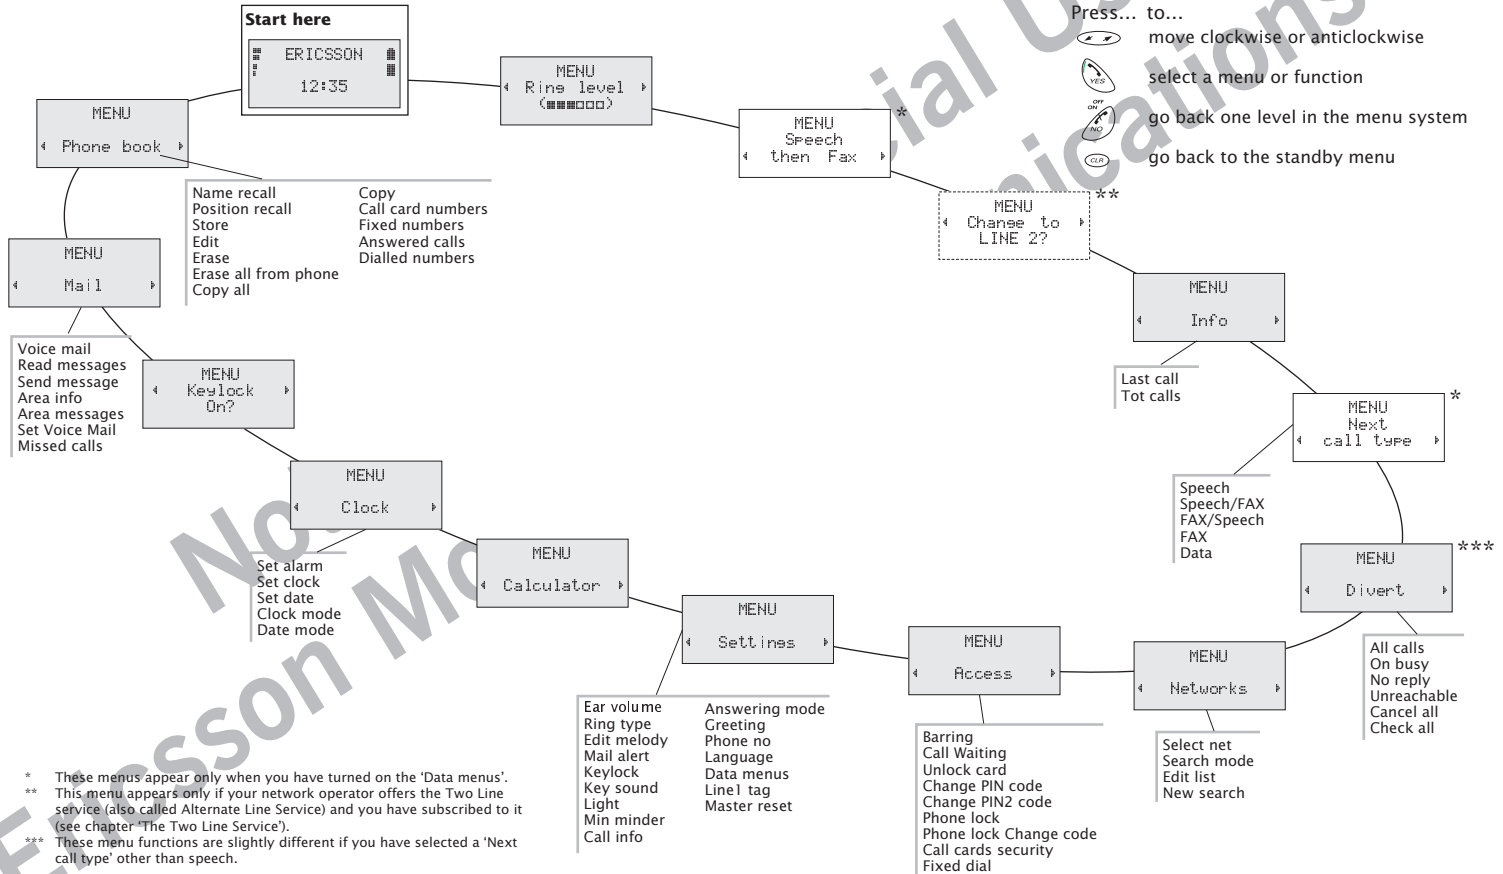

The Phone, Keypad and Display



Key Functions



YES, used to:

- make calls, answer incoming calls, put calls on hold and switch between calls.
- confirm selections and inputs.
- enter a selected menu.



ON/OFF and **NO**, used to:

- turn the phone on or off.
- end calls, reject incoming calls and cancel selections.
- back up one level in the menu system.



NAVIGATION KEY, press **LEFT** or **RIGHT** (or press and hold) to access and move through the menu system.



CLR (Clear), used to

- erase digits from the display.
- mute the telephone.
- return to standby from the menu system.



NUMERIC KEYS, used to enter the digits 0–9 and to enter text. The 0 key also enters the international prefix (+) if held down.



STAR, used to:

- enter the * character.
- enter a pause character (F) if held down.



HASH, used to:

- enter the characters # or #.
- recall a phone number from the Phone Book.



VOLUME KEYS on the side of the phone, used to:

- change the earpiece volume during a call.
- reject an incoming call, if pressed twice.

Indicators in the Display



Signal strength.

The more bars that are shown, the higher the signal strength.



Battery meter.

The fuller the icon, the more power there is.



The keypad is locked.



All incoming calls are diverted to another number.



The ring signal is turned off.



You have received a text message.



You have received a voice mail.



The alarm is set.



The line currently selected. (Requires that you have the Two Line Service.)

Congratulations...

...and thank you for choosing the S 868, a mobile phone specially suited for the demanding user of communication tools. Retaining the slim, streamlined size that has become associated with the Ericsson family of phones, the S 868 sets a new standard for others to follow.

Apart from its unique toughness and extraordinary sound quality, the S 868 supports Dual band operation, which extends the potential for efficient network usage. Especially if you frequently use your phone in urban areas or travel abroad.

Like the other phones from Ericsson, the S 868 is produced to meet the highest quality standards.

This guide introduces you to your S 868 and shows you how to get the most out of it. Before you start, please read the 'Guidelines for Safe and Efficient Use'.

Please note that some of the functions and services described in this user's guide are depending on your choice of network operator. Should you need additional information on how to use them, contact your operator.

Press  to enter the menu system. See inside the cover.

Mobile Internet

When you are on the move and in need of communication and information, Mobile Internet is the answer.

Mobile Internet is a service supplied by Ericsson to facilitate easy communications and rapid information retrieval, wherever you are. It gives you access to on-line customer services, on-line user manuals, and useful information when you are out travelling. It allows you to download various communication software which will ensure you achieve optimum results from your Ericsson products.

If you run into any problems, there are help texts connected to the different Mobile Internet pages.

The Internet address to Mobile Internet is **<http://mobile.ericsson.com/mobileinternet>**

To get access to the service you also need a user id and a password. The first time you log on, please use the following:

User Id: **mobile**

Password: **internet**

Note that you must change user id and password the first time you log on to Mobile Internet.

General Information

Operators & Subscription

To be able to use your phone, you need to have a subscription to a network. This is obtained from the network operator.

The services included in your subscription depend on your choice of operator and/or subscription. Therefore, some of the services and functions described in this manual may not be accessible to you. If you want a complete list of the services included in your subscription, please contact your network operator.

GSM 900/1800 Dual Band

The Ericsson S 868 is a dual band phone, which means that you can use your phone in two different kinds of networks – the GSM 900 and the GSM 1800 (also called PCN or DCS 1800) systems.

The GSM 1800 system is practically the same as the GSM 900 system. The difference between the two is that they use different frequencies. GSM 900 uses 900 MHz frequency, whereas GSM 1800 uses 1800 MHz.

A dual band phone that combines the two standards can use both frequencies. This considerably increases capacity in densely populated urban areas, and consequently improves the coverage offered by your network operator. It will also offer you enhanced international roaming, thanks to the additional networks now available when you are out travelling.

The switching between the two systems is done automatically and seamlessly, which means that you can use your phone without ever having to consider which

system is best at the time. This is taken care of by the networks. However, you should note that the functions offered and the network coverage differ depending on your choice of operator and/or subscription.

SIM & PIN



You will obtain a SIM (Subscriber Identity Module) card with your subscription. The SIM card contains a computer chip that keeps track of your phone number, the services you have ordered from your network operator and your Phone Book information, among other things.

Your SIM card is supplied with a security code or PIN (Personal Identity Number), which you need in order to gain access to the network. Your PIN may also be required when you want to change settings in your phone. Furthermore, some operators may have services that require a second PIN, your PIN2. You will find your PIN (and PIN2) in the information from your operator.


Every time you turn on your phone, it prompts you to enter your PIN. If the PIN is entered incorrectly three times in a row, the SIM card will be blocked. If this happens you can unlock it by using your PUK (Personal Unblocking Key code), which you also get from your operator.

You should be careful with your PIN, since it is your protection against unauthorized use of your phone and subscription.

Press  to enter the menu system. See inside the cover.

Preparing Your Phone for Use

The SIM Card

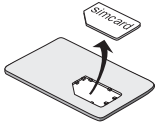


When you register as a subscriber with a network operator, you obtain a SIM card.

SIM cards come in two sizes. One is the size of a credit card, and the other is considerably smaller (about the size of a regular stamp). The S 868 uses the smaller card. Many operators deliver credit card sized SIM cards which have a perforated smaller card that you can take out easily.


Before you can use your phone, you must insert the SIM card into the phone.

To Insert the SIM Card


To insert the SIM card, remove the battery (if attached) and follow these steps:

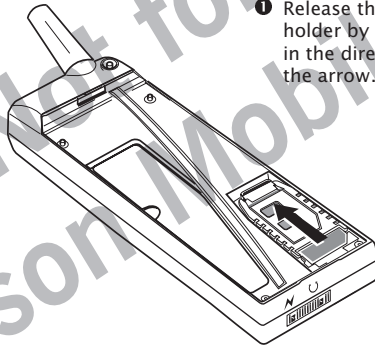

- 1 Release the SIM card holder by sliding it in the direction of the arrow.

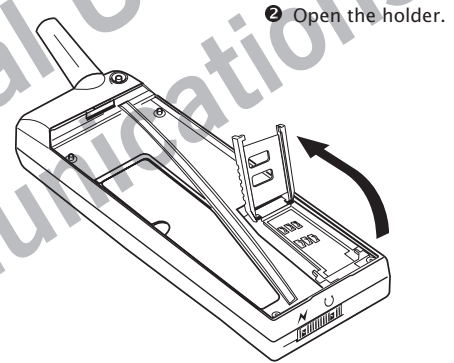


- 2 Open the holder.

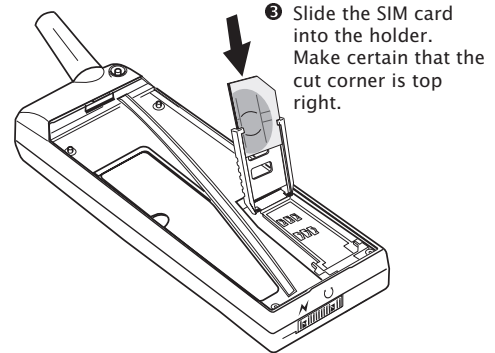

- 3 Slide the SIM card into the holder. Make certain that the cut corner is top right.

Press  to enter the menu system. See inside the cover.

4 Close the holder.

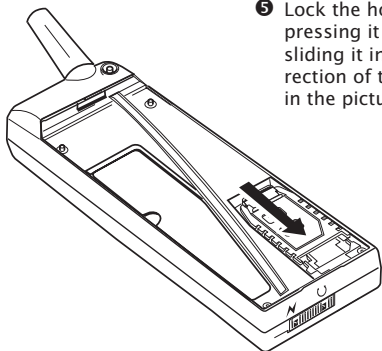


5 Lock the holder by pressing it down and sliding it in the direction of the arrow in the picture.

The Battery

Your mobile phone comes with a nickel metal hydride (NiMH) battery. The battery is not charged when you buy your phone, but there may be enough power to turn on the phone. We recommend that you charge the battery before you use the phone.

To Attach the Battery to the Phone:


- 1 Place the battery on the back of the phone.
- 2 Press the battery upwards and against the phone until it snaps into place.

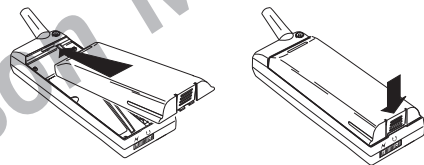


To Remove the Battery

Make sure that the phone is turned off before removing the battery (see next chapter). Then:

- 1 Press the catch on the bottom of the battery.

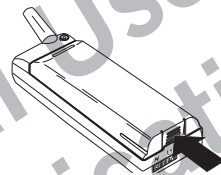


- 2 Lift the battery up and away from the phone.

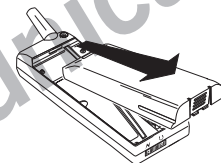

To Charge the Battery

Make sure that the battery is attached to the phone. Then:



- 1 Connect the charger to the mains. (The box may contain more than one mains plug. In this case, use the one that fits the wall socket.)

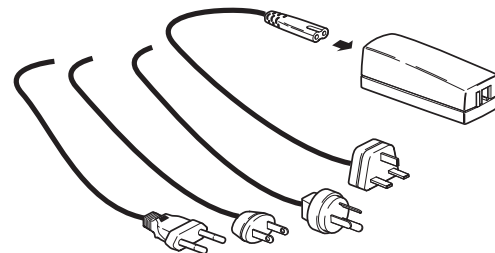

Press  to enter the menu system. See inside the cover.

A green indicator on the charger lights up. If not, make sure you have put the plug into the charger correctly. (You may have to press hard.)

- 2 Connect the clear plastic plug on the charger cable to the charger. It is correctly inserted when it snaps into place.

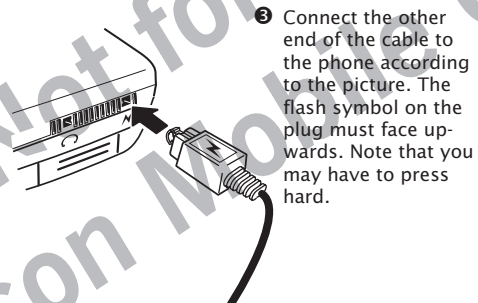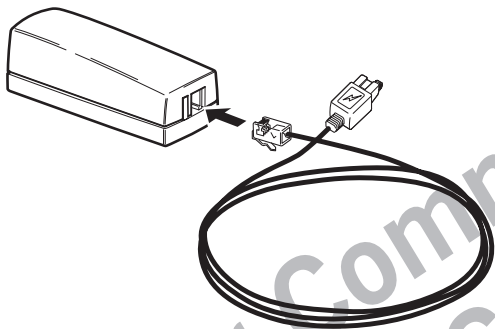

- 3 Connect the other end of the cable to the phone according to the picture. The flash symbol on the plug must face upwards. Note that you may have to press hard.

The phone will automatically start charging the battery when you attach the charger. To indicate charging:


- the battery meter in the display is continuously filled and emptied.
- the indicator on top of the phone shows a steady red light (green, if the phone is turned on).

When the battery is fully charged, the battery meter in the display will show full and the indicator on top of the phone will show a steady green light.

Note! It is possible to use the phone while the battery is being charged. This will, however, increase the charging time.

To Disconnect the Charger

- Twist the plug connected to the phone upwards and pull it out.

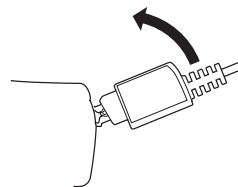

When to Charge the Battery

The nickel metal hydride battery that comes with your phone can be charged whenever you wish without losing performance. This is *not* the case with the cheaper nickel cadmium type batteries, often sold as accessories from other suppliers. For optimal talk and standby time in the long run, we recommend that you only use Ericsson original batteries with your S 868.

To remind you that the battery will soon need to be charged or replaced with a charged one:

- an alarm signal (a long beep) sounds and the message 'Battery low' appears for ten seconds in the display.
- the indicator light on top of the phone starts blinking red.

Note! If the phone is left turned on, the low battery alarm will be repeated several times and, finally, the phone will turn itself off when the battery is no longer able to power it satisfactorily. It might be possible to turn the phone on again, but you will not be able to make or receive any calls. You should charge the battery or replace it with a charged one.

Turning On the Phone

To turn on the phone:

- 1 Press and hold down the **NO** (ON/OFF) key until you hear a click. The display prompts you to enter your PIN.
- 2 Enter your PIN. The digits appear as stars in the display. If you make a mistake while entering your PIN, erase the wrong digit by pressing the **CLR** key.
- 3 Press **YES**.



Enter
PIN



ERICSSON

 
If you enter your PIN correctly, 'ERICSSON' will appear in the display. The phone will then search for a network.

Note!

If your PIN is entered incorrectly three times in a row, the SIM card will be blocked and you will have to unblock it using your PUK code. See chapter 'Security'.

When a network is found, the phone beeps three times. The indicator light on top of the phone flashes green once every second and your network operator's name (in most cases abbreviated) is shown in the display. If you have the charger connected, the indicator will show a steady green light instead of a flashing one.


You can now make and receive calls. This is called standby mode.



ERICSSON
12:35

When No Network Name Is Displayed

If the message 'Emergency calls only' is displayed, you are within range of a network but you are not allowed to use it. However, in an emergency, you can call the international emergency number 112. See chapter 'Making and Receiving Calls'.

Press  to enter the menu system. See inside the cover.

If the message 'No network' is displayed, there is no network within range or the received signal is too weak. You have to move to obtain a sufficiently strong signal.

To Turn Off the Phone

- In standby mode, press and hold the **NO** (ON/OFF) key until the display is turned off.

Initial Settings

 
The first time you turn on your S 868, you may want to change the default language and ring level settings, and set the clock.

Display Language


Most modern SIM cards automatically set the display language to the language of the country where you bought your SIM card. If this is not the case, the default language is English.

To change the display language:


- 1 Press the navigation key **LEFT** or **RIGHT** until the 'Settings' menu appears.
- 2 Press **YES** to enter the 'Settings' menu.
- 3 Press the navigation key to the **LEFT** until the 'Language' menu appears.
- 4 Press **YES** to enter the 'Language' menu.
- 5 Press the navigation key until you find the desired language.
- 6 Press **YES** to select the language.



MENU
← Settings →

 

SETTINGS
← Language (Auto) →

 

LANGUAGE
← English →

- 7 Press **CLR** to return to standby mode.

Note! If by accident you end up with your phone displaying a language you do not understand, you can return to English by pressing **LEFT** 0000 **RIGHT** at any time.

Setting the Time

The time is shown at the bottom of the display. When you buy your phone, the time is normally not set.

If you want to set the time:

```
MENU
< Clock >
```

```
CLOCK
< Set clock >
(16:36)
```

```
SET CLOCK
(16:36)
11:45
```

- 1 Press the navigation key **LEFT** until the 'Clock' menu appears.
- 2 Press **YES** to enter the 'Clock' menu.
- 3 Press the navigation key **RIGHT** until the 'Set clock' menu appears.
- 4 Press **YES** to enter the 'Set clock' function.
- 5 Enter the correct time in hours and minutes and press **YES**.
- 6 Press **CLR** to return to standby mode.

Note! The time is by default presented in the 24-hour format. If you prefer the 12-hour format, you can change the default setting.

For more information, see 'Personalizing Your Phone'.

To Set the Ring Signal Level

- 1 Press the navigation key **RIGHT**.
The text 'Ring level' and a bar representing the ring signal level appears in the display.
- 2 Press **YES** to enter the 'Ring level' menu.
- 3 Use the navigation key to set the ring signal level.
 - Pressing **RIGHT** increases the volume.
 - Pressing **LEFT** decreases the volume.

The phone rings once with the actual setting as you press the navigation key, except for the 'Off' and 'Step' settings.

- 4 Press **YES** to save the setting.
- 5 Press **CLR** to return to standby mode.

Tip! Use the volume keys on the side of the phone to change the ring level silently.

Note! If you have your S 868 connected to external equipment (for example handsfree equipment or a vibrating call alert device), the ring signal level will be set for this situation separately. See 'Personalizing Your Phone' for more information.

Making and Receiving Calls

The instructions in this chapter assume that you have turned on your phone and that you are within range of a network.

Emergency Calls

 
To make an emergency call:

- 1 If the phone is not on, turn it on by pressing the **NO** key until you hear a click.
- 2 Enter 112 (the international emergency number).
- 3 Press **YES**. The display shows 'Emergency'.


Note! Some operators may require that a SIM card has been inserted into the phone and, in some cases, that the PIN has been entered as well.

Making Calls

Domestic Calls



 - 1 Enter the area code and phone number. The digits are shown in the display.
 - If you need to erase a digit, press **CLR**.
 - To erase all digits, press and hold the **CLR** key until all digits have been erased.



- 2 Press **YES** to make the call. The display shows 'Calling', followed by 'Connecting'.
 - When the call is answered, a call time meter in the display shows how long you have been on the phone in minutes and seconds.
 - If nobody answers your call or you cannot get through, press **NO**. The number is stored in a

 


Tip!

- memory which makes it easy to repeat the call. (See 'Redialling a Number' below.)
- If the number is busy, you can redial it automatically. (See 'Redialling a Number' below.)
- 3 When you want to end the call, press **NO**. The Call Time meter shows the duration of the call for three seconds.
- It is possible to check the duration of the call later on. See 'Other Useful Features'.

International calls

- 1 Press and hold the 0 key until '+' is displayed. The (+) will automatically be replaced by the international dialling prefix for the country you are calling from.
- 2 Enter the country code, the area code (without any leading zero) and the phone number.
- 3 Press **YES** to make the call.




Note!

When you are abroad, your phone will automatically search for a network that you are allowed to use. Which networks you can use depends on the agreements your operator has signed with the operators in the country you are visiting. See chapter 'Networks'.

Checking the first characters

If you have entered more characters than can be seen in the display, the first characters will be replaced by the # symbol. To check the first characters:

- press the navigation key **RIGHT**.

Press  to enter the menu system. See inside the cover.

Receiving a Call

When you receive a call, the phone rings and the indicator light on top of the phone blinks green rapidly. The display shows 'Answer?.'

If your subscription includes the Calling Line Identification service and the caller's network sends the number, you will see the caller's number at the bottom of the display. If the number is stored with a name in the phone book, the name will be shown in the display.

Note! The phone must be turned on and within coverage of a network before a call can be received.

To Answer the Call

- 1 Press **YES**.
- 2 When the call is finished, press **NO**.

Tip! To mute the ring signal when you receive a call, press **CLR**.

To Reject the Call

 
There are two ways of rejecting the call:

- Press the **NO** key.
- Press the volume key on the side of the phone twice.

The caller will hear a busy tone if the caller's network supports this function. If 'Divert on busy' is activated, the incoming call is diverted to the number you have specified (see 'Diverting Incoming Calls').

Redialling a Number

Your S 868 conveniently lets you redial the last phone numbers you have called (15 or more, depending on your SIM card). It can also redial a number automatically if the connection failed when you first called.



To Redial Previously Called Numbers

- 1 Press **YES**. The display now shows the last dialled number.
- 2 Press the navigation key **RIGHT** or **LEFT** until the number you want to call is shown on the bottom row of the display.
- 3 Press **YES** to make the call.

Note! If you want to clear the last dialled numbers memory, do the following:

- 1 Press the navigation key **LEFT**. The 'Phone book' menu appears.
- 2 Press **YES** to enter the 'Phone book' menu.
- 3 Press the navigation key **LEFT** until the 'Dialled numbers' function appears.
- 4 Press **YES** to select the 'Dialled numbers' function.
- 5 Press and hold the **CLR** key. The question 'Erase all?' appears.
- 6 Press **YES** to erase the last dialled numbers from the memory.
- 7 Press **CLR** to return to standby mode.

The Automatic Redialling Function

If the connection fails and the receiver's network supports it, the display shows 'Retry?' on the top row and the reason for the failure on the second row.

To redial the number automatically:

- Press **YES**.
 - The number will automatically be redialled until the call is answered, up to 10 times.
 - If you press any key or receive a call, the redialling will be interrupted.
 - If the redialling is successful, the phone will beep and then you will hear a ring signal.

If you do not want to retry, press **NO**.

Calling Someone Who Has Called You

If you subscribe to the Calling Line Identification service, and the caller's network sends the number, the numbers of the last ten answered calls are stored in the phone.

```
MENU
├ Phone book ┤
```

```
ANSWERED 1
├ +1234567890 ┤
```

To recall one of the last ten answered numbers:

- 1 Press the navigation key to the **LEFT**. The 'Phone book' menu appears.
- 2 Press **YES** to enter the 'Phone book' menu.
- 3 Press the navigation key **LEFT** repeatedly until the 'Answered calls' function appears.
- 4 Press **YES** to select the 'Answered calls' function.
- 5 Press the navigation key until you find the number you want.
- 6 Press **YES** to make the call.

To clear the answered calls memory:

- 1 Press the navigation key to the **LEFT**. The 'Phone book' menu appears.
- 2 Press **YES** to enter the 'Phone book' menu.
- 3 Press the navigation key **LEFT** repeatedly until the 'Answered calls' function appears.
- 4 Press **YES** to select the 'Answered calls' function.
- 5 Press **CLR**. The question 'Erase all?' appears.
- 6 Press **YES**.

```
ANSWERED 1
├ +1234567890 ┤
```

Unanswered Calls

```
ERICSSON
├ Calls:2 ┤
├ 13:52 ┤
```

If you have received calls but have been unable to answer, the number of unanswered calls will be shown in the display until you press **CLR**.

Information about the ten last missed calls is saved in your phone's memory, which makes it possible for you to check when the calls were received. If your subscription includes the Calling Line Identification service and

the caller's network sends the number, you can also find out who called.

```
MENU
├ Mail ┤
```

```
MISSED CALLS
├ 13:25 ┤
├ 0246193000 ┤
```

```
MISSED CALLS
├ 14-07-97 ┤
├ Unidentified ┤
```

To Find Out Who Called and When

- 1 Press the navigation key to the **LEFT** repeatedly until the 'Mail' menu appears.
- 2 Press **YES** to enter the 'Mail' menu.
- 3 Press the navigation key repeatedly until the 'Missed calls' function appears.
- 4 Press **YES** to enter the 'Missed calls' function.
- 5 The last caller's number (if your subscription includes the Calling Line Identification service) is now shown in the display together with the time (or date) when the call was received. If no information about the caller's number was received, the display will show one of the following:
 - 'Unidentified', which means that no information was available.
 - 'Restricted', which means that the caller wanted to withhold the number.
- 6 To see your other unanswered calls, press the navigation key repeatedly.
- 7 Press **CLR** to return to standby mode.

Note! If you check a missed call within 24 hours, the time of the call is displayed. Otherwise, the time is replaced by the date. You can toggle between date and time by pressing *.

To Erase a Number from the Missed Calls Memory

- 1 When the information about the call is shown, press **CLR**.
- 2 Press **YES**.

Hiding or Showing Your Number

With most common subscriptions, the caller's number is sent when a call is made. This means that the receiver can see your phone number when you make a call. However, some operators offer subscriptions where your phone number is normally hidden.

If you want to change the setting for a particular call, this is possible provided the network you use supports it.

To Hide Your Phone Number for a Particular Call

- 1 Enter the phone number you wish to call.
- 2 Press the navigation key **RIGHT**.
The 'Special functions' menu now appears.
- 3 Press **YES** to enter the 'Special functions' menu.
- 4 Press the navigation key repeatedly until 'Hide Id' appears.
- 5 Press **YES** to make the call.

```
MENU
Special
functions
```

```
SPECIAL FUNC
Hide Id
```

To Show Your Number for a Particular Call

- 1 Enter the phone number you wish to call.
- 2 Press the navigation key **RIGHT**.
The 'Special functions' menu now appears.
- 3 Press **YES** to enter the 'Special functions' menu.
- 4 Press the navigation key until 'Send Id' appears.
- 5 Press **YES** to make the call.

```
MENU
Special
functions
```

```
SPECIAL FUNC
Send Id
```

During a Call

Your S 868 has several functions which you might find helpful while you are on the phone.

To Change the Earpiece Volume

 


If you want to change the earpiece volume during a call:

- Press the volume keys on the side of the phone up or down.
 - Pressing **UP** increases the volume.
 - Pressing **DOWN** decreases the volume.

See also 'Personalizing Your Phone'.

To Mute the Microphone



To mute the microphone temporarily during a call:

- 1 Press and hold the **CLR** key. 'Mute' is shown in the display.
- 2 To resume conversation, release the **CLR** key.

To Use the Display as a Scratch Pad

If you need to write down a phone number during a call, you can use the Scratch Pad function in the S 868. To do this:

- Enter the number using the numeric keys.

When you end the call, the number remains in the display. You can now call the number by pressing **YES** or save it in the Phone Book (see chapter 'The Phone Book').

Note! If you press any numeric key while on the phone, the person on the other end of the line will hear a tone.

To Send Tone Signals

To use telephone banking services or control a phone answering machine, you need to use codes. These codes are sent as tone signals (also known as DTMF tones or touch tones).

To send tone signals/codes during a call:

- Press the appropriate keys (0-9, * and #).

Tip! You can also save the code together with a number in the Phone Book. See 'Creating Your Personal Phone Book' in the 'Phone Book' chapter on how to do this.

Note! If you send tone signals while on the phone, the person on the other end of the line will hear the tones.

The Menu System

The menu system of your S 868 allows you to control the phone's functions and to customize it to suit your personal preferences.

Each menu contains a list of options; some of these have submenus with additional options.

To help you find your way around the menus, we recommend that you use the fold-out on the inside of the cover.

Moving through the Menu System

The menus are arranged in a continuous loop (see the fold-out), which you move through with the NAVIGATION, **YES**, **NO** and **CLR** keys.

Press... to...



move clockwise or anticlockwise.



select a menu or a function.



go back one level in the menu system and/or leave a setting unchanged.



go back to the standby menu.

To select a menu or make a setting:

- 1 Press the navigation key **LEFT** or **RIGHT** until you reach the desired menu or function.
- 2 Press **YES** to enter the menu or to select the function.
- 3 Press the navigation key to find the desired submenu or to select a setting alternative.

- 4 Press **YES** to enter the submenu or to confirm the setting.

Note! If you enter the menu system, but do not press any keys in 60 seconds, the phone will return to standby mode.

Tip! Instead of pressing the navigation key repeatedly, you can press and hold it down until you reach the desired menu or submenu.

Display Text and Symbols



When you move through the menu system, the following hints can help you:

- Capital letters are used to indicate the menu or function selected.
- When **←** and **→** are displayed, there are more options you can scroll through with the navigation key.
- Text in brackets indicates the current setting of the function that is shown in the display.

Press  to enter the menu system. See inside the cover.

The Phone Book

The Phone Book in your S 868 lets you store and recall phone numbers. This means that the phone can store all your important numbers. You do not have to remember them or carry your address book around.

The Phone Book also keeps track of your last dialled numbers and, if you subscribe to the Calling Line Identification service, the last answered numbers. Convenient if you have to call someone back.

When you receive a call and the caller's number is in the Phone Book, you will see the name in the display.

Before You Start

Before you start creating your personal Phone Book, there are a few things you need to know. In this section, you will learn about the two different memories and how to store the numbers with the international prefix.

 
We also recommend that you at this stage read the section about entering characters, even though you might need to go back to this when you follow the instructions later on.

Phone Book Memories

You can store your phone numbers in two different memories:

- the card memory on the SIM card,
- the phone memory.

Storing your numbers in the *card memory* allows you to use the numbers stored on the SIM card even when you change phones, i.e. when you insert your SIM card into another phone.



STORE 11
John, office
+4646123456

On the other hand, by storing your numbers in the *phone memory*, they are always available to you on your phone, even if you change SIM cards.

The memory positions in the card memory are numbered from 1 onwards. The actual number of memory positions available depends on your SIM card.

The phone memory can hold up to 99 phone numbers. The memory positions are labelled $\alpha 1 - \alpha 99$.

Note! In the 'Phone book' menu, press # to enter the α character. Outside the 'Phone book' menu, you must press and hold down # to enter the α character.

International Numbers

If you intend to use your phone both at home and abroad, you should store all phone numbers as international phone numbers, that is with the '+' sign – which automatically will be replaced by the international dialling prefix for the country you are calling from – followed by the country code, then the area code and the phone number.

- To enter the (+) sign, press and hold 0.
- Omit any leading zero in the area code.

Entering Characters

In the phone book you can accompany any number you store with a name. To enter the characters in the name, follow the instructions below.

- Press the appropriate key, 1–9, 0 or #, repeatedly until the desired character appears in the display.

Press...	to get...
1	Space - ? ! , . : " ' () 1
2	A B C Ä Å Æ à Ç 2 Γ
3	D E F è É 3 Δ Φ
4	G H I ì 4
5	J K L 5 Λ
6	M N O Ñ Ö Ø ò 6
7	P Q R S ß 7 Π Σ
8	T U V Ü ü 8
9	W X Y Z 9
0	0 + & @ / \$ % £ Θ Ξ Ψ Ω
#	# *

For example:

- To enter an A, press 2 once.
- To enter a B, press 2 twice.

Tip! To enter a digit, you can press and hold the numeric key.

To enter the second letter on the numeric keys directly, press and hold the upper volume key and press the desired numeric key. To enter the third letter, press the lower volume key instead.

Note! If there is a pause of more than 60 seconds between entering characters, the phone will return to the standby menu.

To Enter Small Letters

- Enter the letter, for example an 'A', and then press *. An 'a' appears.
Small letters now appear until you press * again.

To Check the First Characters

If you enter more characters than can be seen in the display, the first characters will be replaced by the ⏪ symbol. To check the first characters you have entered:

- press the navigation key **LEFT**.

Creating Your Personal Phone Book

To Store a Phone Number

- 1 From the 'Phone book' menu, select 'Store'.
- 2 Enter a name to accompany the phone number. Use the numeric keys as described above.
- 3 Press the navigation key **RIGHT**.
- 4 Enter the phone number.

5 You now have four options:

- To save the number in the card memory, in the first empty position (displayed in the top right-hand corner):
 - Press **YES**.
- To save the number in the card memory, in a position you decide:
 - Press the navigation key **RIGHT**, enter the position and then press **YES**.
- To save the number in the phone memory, in the first empty position:
 - Press the navigation key **RIGHT**, press the # key twice and then press **YES**.
- To save the number in the phone memory, in a position you decide:
 - Press the navigation key **RIGHT**, press the # key once, enter the position and then press **YES**.

```
STORE      33
Name: John Doe
Enter num: --
```

```
STORE      33
Name: John Doe
00111222
```

```
STORE      016
Name: John Doe
00111222
```

Tip! If you enter a number in the scratch pad during a call, you can store it in the Phone Book by selecting 'Store' from the 'Phone book' menu while you have the number in the display.

Overwrite Protection

If you try to store a phone number in a position which already contains a phone number, the message 'Used Overwrite?' appears in the display. You then have two options.

```
STORE      2
Used
Overwrite?
```

Press  to enter the menu system. See inside the cover.

To store the number in a different position:

- 1 Press **NO**.
- 2 Enter the new position number.
- 3 Press **YES**

To store the number in the selected position, thus erasing the old number:

- Press **YES**.

When the Memories are Full

- If you try to store a phone number when all the positions in the *card memory* are full, a position number in the *phone memory* will be suggested on the top row of the display.
- If both memories are full, no position number will be suggested. If you still wish to store the phone number, you have to erase the old number by entering a position that is already occupied.

To Store a Number With a Tone Signal Code

To use telephone banking services or control a phone answering machine, you will need to use codes. These codes are sent as tone signals (also called DTMF tones or touch tones).

If you want to save the phone number in the Phone Book with the codes:

- 1 Follow the instructions on how to store a phone number until you enter the number.
- 2 After entering the phone number, press and hold the * key until the pause character 'P' appears.
- 3 Enter the code.
- 4 If needed, insert another pause, another code and so on.
- 5 Continue following the instructions on how to store a phone number.

```
STORE 34
e: BankbyPhone
040556677F_
```

Recalling a Phone Number

To make a call with tone signal codes, proceed as described in 'Making and Receiving Calls'. When you make the call, the phone dials the number, waits until the call is answered and then sends the code. If you inserted another pause and another code, it will pause again, send the next code and so on.

The Speed Dialling Facility

You can call the phone numbers that you store in the positions 1–9 in the *card memory* by entering the position number and then pressing **YES**. Therefore, you should save positions 1–9 for important numbers.

For example:

If you want to call John, whose number is stored in position 3 in the card memory:

- 1 Enter the digit 3.
- 2 Press **YES**.

To Recall a Phone Number Using the Name

- 1 From the 'Phone book' menu, select 'Name recall'.
- 2 Enter the name you want to recall (or the first letters of it) using the numeric keys as described above.

You do not have to enter the entire name; the first few letters will do. The phone matches the letters with existing names in its memory.

- 3 Press **YES**.

The best match between the letters you entered and the names in the Phone Book is displayed. You can also see the storage position in brackets.

```
Emma Linetree
4 (7)
+464612345
```

- If the name displayed is not the one you want, press the navigation key until you find the correct name and number.
- Press **YES** to make the call.

Tip! You can also enter the name directly after pressing **LEFT** from the empty standby display.

To Recall a Phone Number Using the Position

If you know the memory position where you have stored a certain phone number, you can recall the number using the position.

- From the 'Phone book' menu, select 'Position recall'.
- Enter the position where the number is stored.
 - For a position in the card memory, simply enter the number.
 - For a position in the phone memory, press and hold the # key until the 'x' character appears and then enter the number.
- Press **YES**.

The name and phone number now appear in the display.

- If you entered the wrong position number, press the navigation key repeatedly until you find the phone number.
- To call the number, press **YES**.

Tip! You can also enter the position directly in the standby display and then press the # key to recall the phone number. Do not forget the 'x' before the position if the number is stored in the phone memory (to get the 'x' character, press and hold the # key).

```
POSITION
RECALL
Position: 7
```

```
Emma Limetree
x (?)
+464612345
```

Hiding or Showing Your Number When Making a Call

With most common subscriptions, the caller's number is sent when a call is made. This means that the receiver can see your phone number when you make a call. However, some operators offer subscriptions where your phone number is normally hidden.

If you want to change the setting for a particular call, this is possible provided the network you use supports it.

To hide your phone number for a particular call, when you recall a number from the Phone book:

- Recall the phone number, but press **NO** instead of **YES**.

The number is now shown in the standby display.

- Press the navigation key **RIGHT**.
The 'Special functions' menu now appears.
- Press **YES** to enter the 'Special functions' menu.
- Press the navigation key repeatedly until 'Hide Id' appears.
- Press **YES** to make the call.

To show your number for a particular call, when you recall a number from the Phone book:

- Recall the phone number, but press **NO** instead of **YES**.

The number is now shown in the standby display.

- Press the navigation key **RIGHT**.
The 'Special functions' menu now appears.
- Press **YES** to enter the 'Special functions' menu.
- Press the navigation key until 'Send Id' appears.
- Press **YES** to make the call.

Keeping Your Phone Book Up to Date

As the people you know change jobs, move, marry etc., you might want to change the names and numbers in your Phone Book, or perhaps delete some of the entries.

To Edit an Entry in the Phone Book

There are two ways of finding the Phone Book entry you wish to edit. You can use either the storage position or the name.

To edit the entry using the position:

- 1 From the 'Phone book' menu, select 'Edit'.
- 2 Enter the position number for the entry you wish to edit.
 - For a position in the card memory, simply enter the number.
 - For a position in the phone memory, press and hold the # key until the 'x' character appears and then enter the number.
- 3 To select the entry, press **YES**.

You will now see:

- the name (displayed on the middle row),
- the phone number (displayed on the bottom row),
- the storage position (displayed on the top row).

 
- 4 To select the row you wish to edit, press the navigation key **RIGHT**.

You will see the cursor on the right of the row you selected.


- 5 Edit the row by using:
 - the **CLR** key to erase,
 - the numeric keys to enter letters or digits,
 - the navigation key to move the cursor left (or right when it is positioned in a row).



```
EDIT
Find name
Name: Emma
```



```
EDIT
Find Pos
Position: 7
```

 

```
EDIT
Emma Lintree
+464612345
```

- 6 If needed, press the navigation key **RIGHT** to select another row and continue editing.

- 7 To save the changes, press **YES**.

To edit the entry using the name:

- 1 From the 'Phone book' menu, select 'Edit'.

- 2 Press the navigation key **LEFT**.

The display now shows 'Find name' in the middle row.

- 3 Enter the name for the entry you wish to edit, using the numeric keys. The more letters you enter, the better the match.

To select the entry, press **YES**.

- 4 You can now continue from number 4 above.

Erasing a Phone Number

To erase a phone number from the Phone Book:

- 1 Recall the number using 'Name recall' or 'Position recall'.
- 2 Press and hold **CLR**. The question 'Erase?' appears.
- 3 To erase the number, press **YES**.

Note! You can also select 'Erase' from the 'Phone book' menu and then enter the storage position.

If you want to erase all numbers from the phone memory (not possible for the card memory), you can do this as follows:

- 1 From the 'Phone book' menu, select 'Erase all from phone'.
- 2 To erase all phone numbers from the phone memory, press **YES**.

Copying Phone Numbers between Positions and Memories

As you fill up the Phone Book memories, you might want to move entries from one memory to another or between positions in the memories.

To Copy All Numbers from Card Memory to Phone Memory

COPY ALL
← Card→Phone →

COPY CARD
From start
position: --

- 1 From the 'Phone book' menu, select 'Copy all'.
- 2 Scroll to 'Card→Phone' and press **YES**.
- 3 Enter the number of the first position in the *card memory* you wish to copy and press **YES**.
- 4 Enter the number of the first position in the *phone memory* you wish to copy to and press **YES**.
- 5 To start the copying, press **YES**.

To Copy All Numbers from Phone Memory to Card Memory

COPY ALL
← Phone→Card →

COPY PHONE
From start
position: CL

- 1 From the 'Phone book' menu, select 'Copy all'.
- 2 Scroll to 'Phone→Card' and press **YES**.
- 3 Enter the number of the first position in the *phone memory* you wish to copy and press **YES**.
- 4 Enter the number of the first position in the *card memory* you wish to copy to and press **YES**.
- 5 To start the copying, press **YES**.

To Copy Numbers from Card Memory to Phone Memory One by One

COPY
← Card→Phone →

- 1 From the 'Phone book' menu, select 'Copy'.
- 2 Scroll to 'Card→Phone' and press **YES**.
- 3 Enter the number of the first position in the *card memory* you wish to copy and press **YES**.

Eric Woods
12
Copy to R??

- 4 Enter the number of the first position in the *phone memory* you wish to copy to and press **YES**.
- 5 To start copying, press **YES**.
The starting position in the *card memory* is displayed and the next empty position in the *phone memory* is suggested.
- 6 For every entry on the card, from the start position onwards, press:
 - **YES** to copy.
 - **NO** to go to the next position in the *card memory*.
 - **CLR** to copy to another position in either the *card* or *phone memory*. Enter the number of the position and press **YES**.
 - Navigation key **LEFT** or **RIGHT** to move between positions in the *card memory*.

To interrupt copying:

- Press **CLR** twice.

To Copy Numbers from Phone Memory to Card Memory One by One

- 1 From the 'Phone book' menu, select 'Copy'.
- 2 Scroll to 'Phone→Card' and press **YES**.

To copy from the phone memory to the card memory use the **YES**, **NO** and **CLR** keys as described above.

Sending and Receiving Text Messages

A very convenient feature of your Ericsson S 868 is the Short Message Service (SMS). This allows you to send and receive text messages consisting of up to 160 characters.

Using the Short Message Service, you do not have to worry about whether the people you want to reach check their answering machines or not. As soon as they turn on their phone, the message will be waiting for them.

Text messages can be received when the phone is in standby mode, during a call or when incoming calls are diverted to another phone number. If the recipient's phone is turned off when a message is sent, a notifying message will be displayed soon after the phone is turned on.

Apart from sending standard messages to phones, your Ericsson S 868 is also prepared for sending fax messages (group 3 and 4), X400 messages, e-mails and telexes, via the Short Message Service. Check with your network operator which message types you can use and how.

Note! The Short Message Service may not be available in all networks.

Two Memories

The Messages Memory

If you do not want to read an incoming message at once, it is automatically stored in the Messages memory in the phone. This allows you to read it later on.

If there are any unread incoming messages in the messages memory, a letter icon (E2) will appear to the left at the bottom of the display.

The Messages memory can hold up to 10 messages. When all memory positions are full, the oldest read message will be overwritten when a new message is received.

If the Messages memory becomes full with unread messages, new messages will automatically be stored in the SIM card memory. If the SIM card memory becomes full, the letter icon (E2) starts blinking.

Messages remain in the Messages memory until you erase them (see 'Erasing a Message,') until you insert a different SIM card, or until the telephone needs the memory space to store new messages

The SIM Card Memory

If you receive an important message and want to make sure it is not erased from the messages memory, you can store it in a memory on your SIM card. This means that you can retrieve the message regardless of which phone you use. Messages that are saved in the SIM card memory remain there until you erase them.

If the SIM card memory becomes full, the letter icon (E2) starts blinking.

Setting the Phone for Text Messaging

If the phone number to your network service centre cannot be retrieved from your SIM card, you must specify the number yourself. Otherwise you cannot



reply to received messages or send your own messages.

- 1 From the 'Mail' menu, select 'Send message'.
- 2 Scroll to 'Options' and press **YES**.
- 3 Scroll to 'Serv cent' and press **YES**.
- 4 If there is no number in the display, enter the number of the service centre, including the international prefix, and press **YES**.
- 5 To return to standby mode, press **CLR**.

 
Your phone is now ready to send and receive text messages.

Note! Some network operators may only allow SMS to be sent within their own network.

Setting Duration of Message

If your message cannot be delivered because the recipient is not within reach of a network, you can instruct your Service Centre to repeat the message for one hour, 12 hours, one day, one week or the maximum period (determined by your service provider).

- 1 From the 'Mail' menu, select 'Send message'. 'New' appears.
- 2 Scroll to 'Options', using the navigation key, and press **YES**.
- 3 Select the 'Valid per' option and press **YES**.
- 4 Scroll to the desired duration and press **YES**.




Changing Message Types

The phone is prepared for sending other types of messages. Your network operator's Service Centre may offer the facility to convert a text message into a format (fax, telex, voice, etc.) that suits the equipment that is going to receive the message.

Consult your operator for further information about the formats you can use.

 To set the message type:



- 1 From the 'Mail' menu, select 'Send message'.
- 2 Scroll to 'Options', using the navigation key, and press **YES**.
- 3 Scroll to the 'Msg type' option and press **YES**.
- 4 Select the required format, using the navigation key, and press **YES**.

Note! Standard means an ordinary text message (SMS) to other phones. Standard is the default message type.

Composing and Sending Messages

To Enter Letters

In order to compose your message, you have to know how to enter characters using the numeric keys.

- Press the appropriate key, 1–9, 0 or #, repeatedly until the desired character appears in the display.

Press...	to get...
1	Space - ? ! , . : " ' ()
2	A B C Ä Å Æ à ç 2 Γ
3	D E F è É 3 Δ Φ
4	G H I ì 4
5	J K L 5 Λ
6	M N O Ñ Ö Ø ò 6
7	P Q R S ß 7 Π Σ
8	T U V Ü ù 8
9	W X Y Z 9
0	0 + & @ / \$ % £ Θ Ξ Ψ Ω
#	# *

For example:

- To enter an A, press 2 once.
- To enter a B, press 2 twice.

Tip! To enter a digit, you can press and hold down the numeric key.

Press  to enter the menu system. See inside the cover.

To enter the second letter on the numeric keys directly, press and hold the upper volume key and press the desired numeric key. To enter the third letter, press the lower volume key instead.

To enter small letters:

- Enter the letter, for example an 'A', and then press *. An 'a' appears.
Small letters will now appear until you press * again.

If you enter more characters than can be seen in the display, the first characters will be replaced by the ← symbol. To check the first characters you have entered:

 
 
 
 
- Press the navigation key **LEFT** until you reach the characters you want to view.

Note! If there is a pause of more than 120 seconds between entering characters, the phone will return to the standby menu.

Sending Messages



- 1 From the 'Mail' menu, select 'Send message'. 'New' appears.
- 2 Press **YES**. An empty display appears.
- 3 Enter your message. (See 'To Enter Letters').
You can scroll through the message text with the navigation key and erase characters to the left of the cursor or insert characters in the cursor's position.
- 4 When you have completed your message, press **YES**. 'Request reply?' appears.
- 5 If you want the recipient to reply to the message, press **YES**. If not, press **NO**.
- 6 Enter the recipient's phone number or recall it from the phone book. To access the 'Phone book' menu press **LEFT**.
- 7 You now have two options:
 - To send the message now, press **YES**.



- To store the message for later use, press **NO**.
The message is now stored in the messages memory.

If you decide to send the message later, the message is labelled 'To Send' instead of 'Sent' when you access the message in the 'Read messages' menu.

Note! The same procedure is used with all types of messages, for example e-mail, fax etc. Check with your network operator which message types you can use.

Reading a Message

When you receive a message, you hear a sound and the display informs you of it. The indicator light on the top of the phone rapidly blinks green.

You now have two options:

- If you want to read the message at once, press **YES**.
- If you want to read the message later on, press **NO**. The message will be stored in the Messages memory and a letter icon (E2) will appear on the left at the bottom of the standby display.

If you pressed **YES**, you will see the first three lines of the message, showing you who the message is from and when it was received. 'New' stands for a new unread message.

If the message is older than 24 hours, the time will be replaced with the date the message arrived. However, you can toggle between the date and time by pressing the * key.

- To read the first line of the message, press **YES**.
- Scroll through the message using the navigation key. **RIGHT** takes you forwards and **LEFT** takes you backwards through the message.
- To move three lines forwards, press 3. To move three lines backwards, press 1.

- To return to the beginning of the message, press and hold **LEFT**.

```

Goodbye !
← Reply?
  
```

The message 'Reply?' appears after the last line of the message. If the caller wants you to reply, the displayed message will say 'Reply Requested Reply?', provided your network supports this.

Replying to a Message

When you are reading a message, at the end you are asked if you want to reply to the message. If you want to do this:

- Press **YES**.

Your display now looks like the picture in the margin.

```

← New →
  
```

- To enter your message, press **YES** and proceed as described in 'Composing and Sending Messages'.

If you do not want to reply:

- Press **NO**.

Erasing a Message

When you are reading a message, at the end you are asked if you want to reply to the message.

- 1 Press **NO**.

The message 'Erase?' appears.

- 2 To erase the message from the Messages memory, press **YES**.

The next message automatically appears in the message list.

Note! You can press **CLR** anywhere within the menu that handles your message to erase it. When 'Erase?' appears, press **YES**.

```

Goodbye !
← Erase?
  
```

Storing a Received Message

All incoming messages are stored temporarily in the messages memory until the memory space is needed for other purposes, such as storing new messages. Even so, sometimes you may receive an important message that you want to store more safely. This is better done in the SIM card memory.

When reading the message and the question 'Erase?' appears:

- 1 Press **NO**.

The message 'Store?' appears.

- 2 To store the message in the SIM card memory, press **YES**. The message is automatically moved from the Messages memory to the SIM card memory.

```

Goodbye !
← Store?
  
```

```

Stored
On card
3(5)
  
```

The display now shows the position of the message. For example, if it is the third of five that the phone can store.

Note! If the card memory is full, the text 'Not stored Mem full' appears. In this case you will have to erase one or more messages, before you can store any new messages in the SIM card memory.

Tip! You can also store messages you have composed yourself on the SIM card. See the section 'Sending Messages' above.

Reading Stored Messages

```

MAIL
Read
← messages →
  
```

- 1 From the 'Mail' menu, select 'Read messages'.
- 2 Scroll with the navigation key until you find the message you are looking for.
 - 'New' stands for a new unread message.
 - 'Old' stands for a read message.
 - 'Sent' stands for a sent message.

Press  to enter the menu system. See inside the cover.

- 'To Send' stands for a composed, but not sent message.
- 3 Press **YES**.
 - 4 Read the message as described in 'Reading a Message'.

Note! If there is a * in front of the message, this means that it is stored on the SIM card.

Calling a Phone Number in a Message

To call a phone number found in a message:

- Press **YES**.

After the number has been called, the message is considered read and it remains in the Messages memory.

Frequently Used Messages

If you have one or more standard messages you use often, you can store them on the SIM card, to be reused whenever you want.

Storing Frequently Used Messages

To make sure your standard messages are not erased when the messages memory becomes full, you should store them in the SIM card memory. To do this:

- 1 From the 'Mail' menu, select 'Read messages'. The messages saved in your Messages memory appear.
- 2 Scroll to the message you wish to store in the SIM card memory, using the navigation key, and press **YES**.
- 3 Press **YES** again. 'Erase?' appears .
- 4 Press **NO**. 'Store?' appears.
- 5 Press **YES**. The message is now moved from the phone memory to the SIM card memory.

Sending Stored Messages

- 1 From the 'Mail' menu, select 'Send message'. 'New' appears.
- 2 Scroll to the message you wish to send, using the navigation key, and press **YES**. Now you can edit your message, if you wish.
- 3 When the message is ready to be sent, press **YES**. 'Request reply?' appears.
- 4 If you want the recipient to reply to the message, press **YES**. If not, press **NO** .
- 5 Enter the recipient's phone number or recall it from the phone book. To access the 'Phone book' menu, press **LEFT**.
- 6 To send the message now, press **YES**.



Networks

When you turn on the phone, it searches for the last accessed network. If this is not within range, you may use another network, provided your home network has an agreement that allows you to do so. This is called *roaming*.

The 'Networks' menu includes a number of functions which you can use to determine how the phone searches for a network. You may also select a network yourself from those within range.

 
Search Mode

Automatic Search Mode

The automatic search mode means that when you turn on your phone, it searches for the last accessed network. If this is not available, the phone will automatically search for another available network within range.

The Automatic search mode is normally the default setting when you buy your phone. However, if you need to activate the automatic search mode, do the following:

- 1 Scroll to the 'Networks' menu, using the navigation key, and press **YES**.
- 2 Scroll to 'Searchmode'.
 - If '(Auto)' is visible on the bottom row of the display, your phone is already set to Automatic search mode.
 - If '(Auto)' is not visible, press **YES**.
- 3 Scroll to 'Auto' and press **YES**. The phone is now set to Automatic search mode.
- 4 To return to standby mode, press **CLR**.



Note! The order of preference in which the phone selects a network is determined by a list of preferred networks on your SIM card, which you can edit at any time.

Manual Search Mode

 
The manual search mode means that when you turn on your phone, it searches for the last accessed network. If this is not available, the question 'Select network?' appears.

To activate the manual search mode, do the following:

- 1 From the 'Networks' menu, select 'Searchmode' and press **YES**.
- 2 Scroll to 'Manual' and press **YES**.
- 3 To return to standby mode, press **CLR**.

To select a network, see below.

Selecting a Network



- 1 From the 'Networks' menu, choose 'Select net'. The message 'Please wait' is displayed briefly. If there is more than one network within range, you can use the navigation key to scroll to the other network(s).
- 2 When the network you wish to use is displayed, press **YES** to select it.

Note! Together with the network name, you also get the following information in the display:

 
- If the home network is within range and you are using it when you start your network selection, the name of the network is displayed with the message 'Current'.

Press  to enter the menu system. See inside the cover.

- If you are using another network and your home network is available, the name of the home network is displayed with the message 'Home'.
- Instead of the full name of a country and a network, an abbreviation is displayed when you use the 'Networks' menu. To see the full name of a network, press *.
- If the home network is not within range, the name of another network is displayed with the message 'Current', 'Preferred', 'Available' or 'Forbidden'.
 - 'Current' means that the network is currently being used.
 - 'Preferred' means that the name of the network is included in a list of preferred networks on your SIM card.
 - 'Forbidden' means that the name of the network is included in a list of forbidden networks on your SIM card and that you are not allowed to use it. You can, however, make emergency calls.
 - 'Available' means that there is a network within range, which is not on either the forbidden or preferred list on your SIM card.
- If there is no network within range, the message 'No network' is displayed.

To Start an Automatic Network Search

An automatic network search can be started at any time.



- From the 'Networks' menu, select 'New search'. The phone automatically starts searching for a network according to the list of preferred networks stored on your SIM card.

Forbidden Networks

The names of the forbidden networks are stored on your SIM card. If such a forbidden network is within range, it will be omitted when the phone searches for a network (automatic search mode).

If your home network and a forbidden network come to an agreement that allows you to use the forbidden network, you can select this network even though the message 'Forbidden' is displayed.

List of Preferred Networks

You can create a list that defines in which order your phone will select a network during automatic network selection, when your home network is not within range.

The number of networks that can be stored in the list depends on your SIM card.

The 'Edit list' function lets you review the networks in the list. Apart from rearranging the order of the networks, you can add new networks to the list and delete networks from it.

Reviewing the List of Networks

- 1 From the 'Networks' menu, select 'Edit list'.
 - The message 'Please wait' is displayed briefly.
 - The name of the first network is displayed. If a network is within range, a * is also displayed.
- 2 You can scroll through the other networks in the list by using the navigation key.



Note! To see a network's full name, press *.

Adding a Network to the List:

- 1 From the 'Networks' menu, select 'Edit list'.
- 2 Scroll to the first free position in the list and press **YES**. The question 'Add net?' appears. If you scroll to a position that is already occupied, you must press **YES** and then scroll with the navigation key until 'Add net?' appears.
- 3 Press **YES** and scroll with the navigation key until you find the desired network.

