



HUAWEI G5510

GSM Mobile Phone

User Guide

Copyright © Huawei Technologies Co., Ltd. 2012. All rights reserved.

Trademarks and Permissions



HUAWEI, **HUAWEI**, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Contents

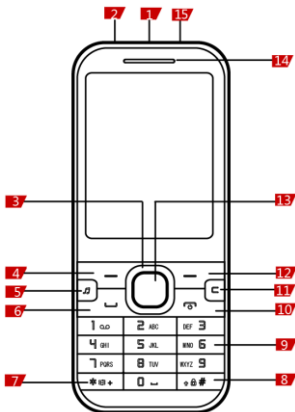 
1 Getting to Know Your Phone	1
Your Phone	1
Keys and Functions	2
Screen Icons	4
2 Getting Started	5
Installing the SIM Card and the Battery	5
Removing the Battery and the SIM Card	5
Installing and Removing a microSD Card	6
Charging the Battery.....	6
Phone Lock.....	7
PIN and PUK	7
Locking and Unlocking the Keypad.....	8
Entertainment.....	8
3 Voice Services	9
Dual-Card Management	9
Making a Call.....	9
Answering a Call.....	10
4 Text Input	10
Changing the Text Input Mode	10
Entering a Word	11
Entering a Digit.....	12
Entering a Symbol.....	12
5 Messaging	12
Sending a Text Message	12
Sending a Multimedia Message	13

6 Contacts	14
Creating a Contact	14
Searching for a Contact	14
Setting a Speed Dial Number	14
7 Multimedia	15
Camera	15
Video Recorder	15
Video Player	16
Audio Player	17
FM Radio	17
Flashlight	18
Ebook Reader	18
8 Connectivity	19
Bluetooth.....	19
Internet Services	19
9 Warnings and Precautions	20

1 Getting to Know Your Phone

Your Phone




 

The following figure shows the appearance of your phone.








- | | | | |
|---|--|----|---------------|
| 1 | Charger jack/Universal serial bus (USB) port | 9 | Number keys |
| 2 | Headset jack | 10 | End/Power key |
| 3 | Navigation keys | 11 | Delete key |

4	Left soft key	12	Right soft key
5	Music key	13	Confirm key
6	Call/Answer key	14	Earpiece
7	* key	15	Flashlight
8	# key		












Keys and Functions





Press...	To...
	<ul style="list-style-type: none"> • Make a call. • Answer a call. • View call logs in standby mode.
	<ul style="list-style-type: none"> • Power the phone on or off (press and hold the key for about 3 seconds). • End or reject a call. • Return to standby mode.
	Select the option displayed in the lower left corner of the screen.
	Select the option displayed in the lower right corner of the screen.
	Confirm a selection.

Press...	To...
	<ul style="list-style-type: none"> • Scroll through submenus on a menu screen or options on an option screen. • Access the functions assigned to the navigation keys in standby mode. <p>NOTE To assign a function to a navigation key, select Menu > Settings > Phone settings > Dedicated key.</p>
	Access Audio player in standby mode.
	Delete characters entered.
0 through 9	<ul style="list-style-type: none"> • Enter numbers, letters, and symbols. • Call voicemail in standby mode (press and hold the 1 key for about 3 seconds). • Speed-dial phone numbers in standby mode (press and hold the 2–9 keys for about 3 seconds if these keys have been set as speed dial keys). • Select an option labeled with the corresponding number.
	<ul style="list-style-type: none"> • Enter * (press the key once), + (press the key twice), p (press the key three times), or w (press the key four times) in standby mode. • Activate or deactivate the Meeting profile in standby mode (press and hold the key for about 3 seconds). • Display the symbol list in editing mode.

Press...	To...
	<ul style="list-style-type: none"> • Enter #. • Lock the screen and the keypad in standby mode (press and hold the key for about 3 seconds). • Switch between text input modes in editing mode.

Screen Icons

 
Icon	Indicates...
	Signal strength.
	Battery level.
	New text messages.
	New multimedia messages.
	Headset connected.
	Bluetooth turned on.
	Missed calls.
	Alarms enabled.
	Keypad locked.
	microSD card installed.
	Ring only enabled.


Icon	Indicates...
	Vib. only enabled.
	Vib. and ring enabled.
	Vib. then ring enabled.
	Silent profile activated.

2 Getting Started

Installing the SIM Card and the Battery

When installing the subscriber identification module (SIM) card, ensure that the gold contact area faces down, and that the beveled edge of the SIM card aligns with that of the SIM card slot.



 The phone supports two SIM cards, and you can select **Menu > Settings > Dual SIM settings > Dual SIM open** to enable the dual-SIM mode. In this case, you can use two SIM cards in the phone at one time.

Removing the Battery and the SIM Card

Before removing the battery and the SIM card, ensure that your phone is powered off.



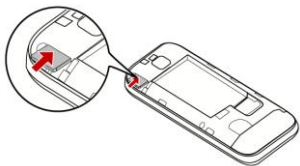 
Installing and Removing a microSD Card



Before installing or removing a microSD card, power the phone off.

You can expand your phone's memory capacity by installing a microSD card with a capacity of up to 16 GB.

When installing a microSD card, ensure that the gold contact area faces down, and that the beveled edge of the microSD card aligns with that of the microSD card slot.



Charging the Battery

1. Connect the small end of the USB cable to the phone's charger jack and the large end to the charger.
2. Connect the charger to a power outlet.
3. Wait until the battery is fully charged.
While the battery is charging, the charging icon blinks. When the charging icon stops blinking, the battery is fully charged.

4. Unplug the charger from the power outlet and the USB cable from the phone.

Phone Lock

The phone lock protects your phone from unauthorized use. The preset password to unlock your phone is **1234**. By default, the phone lock is disabled. Once you enable the phone lock, you must enter the password each time you power on the phone.

To enable the phone lock:

1. In standby mode, select **Menu > Settings > Security settings > Phone security > Phone lock**.
2. Enter the preset password.

To change the preset password:

1. In standby mode, select **Menu > Settings > Security settings > Phone security > Change password**.
2. Enter the preset password.
3. Enter a new password.
The password must be a numeric string between four and eight digits.
4. Enter the new password again to confirm it.

If you forget the password, contact your service provider.

PIN and PUK

 
The personal identification number (PIN) protects your SIM card from unauthorized use.

If you incorrectly enter the PIN a specified number of times, the PIN is blocked and the phone prompts you to enter the PIN unblocking key (PUK). If this occurs, enter the PUK to unblock the blocked PIN.


 

If you incorrectly enter the PUK a specified number of times, the SIM card will become permanently invalid, and you must contact your service provider for a new SIM card.

Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

To enable the PIN lock:


1. In standby mode, select **Menu > Settings > Security settings > SIM1/SIM2 security > PIN lock**.
2. Enter the PIN, and then press  (OK).

Locking and Unlocking the Keypad

To lock the keypad, press and hold  **#** for about 3 seconds. To unlock the keypad, press  (**Unlock**), then  **#**.

If the **Auto keypad lock** function is enabled, the phone will automatically lock the keypad after being idle in standby mode for a pre-defined period.



When the keypad is locked, you can press  to answer a call or make an emergency call.

Entertainment

As well as being a communication device, your phone also provides you with the following applications for entertainment purposes:

- **Camera:** take pictures.
- **Audio player:** play audio files stored in the phone memory or on the microSD card.
- **Video recorder:** record videos.
- **Video player:** play video files stored in the phone memory or on the microSD card.
- **FM radio:** listen to radio programs.
- **Tasks:** view and add tasks.
- **Ebook reader:** read ebooks stored in the phone memory or on the microSD card.





- **Image viewer:** view pictures stored in the phone memory or on the microSD card.
- **STK:** use value-added services provided by your service provider.
- **Calendar:** view and add events or appointments on your calendar.
- **Flashlight:** to turn on or off the flashlight.
- **Alarm:** set alarms.
- **Calculator:** perform basic calculation.
- **File manager:** manage multimedia files stored in the phone memory or on the microSD card.

3 Voice Services


Dual-Card Management

Your phone supports dual-card dual-standby mode, but the two SIM cards cannot be used simultaneously. When you are making a call or using data services with one SIM card, the other SIM card becomes unavailable, that is, no incoming calls can be received and the data services cannot be used.

Making a Call





 
 
1. In standby mode, enter a phone number.
 - To make an international call, press  twice to enter the plus sign (+). Then enter the country or region code, area code, and phone number.
 - To call an extension number, enter the switchboard number, press  three times to enter p, and enter the extension number.
2. Press  to dial the number.
3. Press  to end the call.

 



- You can also make calls from the call logs, contacts, or messages.
- During a call, you can use  to adjust the in-call volume.
- If the dual-SIM mode is enabled, select the SIM card you want to use according to the prompt on the screen.

Answering a Call


When there is an incoming call:

- Press ,  (**Answer**), or  to answer the call.
- Press  to reject the call.
- Press  (**Silent**) to mute the ringtone, and press  (**Reject**) to reject the call.

If the **Any key** answer function is enabled, you can press any key except  and  to answer a call.







4 Text Input

Changing the Text Input Mode




The current text input mode indicator is displayed in the upper left corner of the screen. Press  to switch between text input modes.

Indicator	Text Input Mode
ABC and abc	Multi-tap input modes
eZi ABC and eZi abc	Predictive input modes
123	Number input mode



- In any text input mode, press  to delete the last character entered, or press and hold  for about 3 seconds to delete all the characters entered.
- In multi-tap input mode, repeatedly press  to select and enter commonly used symbols, and press  once to enter a space and twice to enter **0**.
- In predictive input mode, press  to display commonly used symbols, and press  to enter a space.




 
Entering a Word

- To enter a word in multi-tap input mode, repeatedly press the key labeled with each letter in the word until the desired letter is displayed on the screen. Then repeat this process until the full word is displayed.
- To enter a word in predictive input mode:
 1. Press each key once according to the spelling sequence of the desired word.
The phone displays candidate words that may be spelt by the keystroke sequence.
 2. Use  to scroll to the desired word.
 3. Press  or  to enter the word.

Entering a Digit

- In number input mode, press the number key labeled with the desired digit.
- In multi-tap input mode, repeatedly press the number key labeled with the desired digit until the digit is displayed on the screen.

 
 

Entering a Symbol

1. Press  to display the symbol list.
2. Use  to scroll to the desired symbol.
3. Press  or  to enter the symbol.

5 Messaging

 
 
 
The phone supports two SIM cards and if the dual-SIM mode is enabled, please select the SIM card you want to use according to the prompt on the screen.

Sending a Text Message

1. In standby mode, select **Menu > Messaging > Write message > Text message**.
2. Write the message.
3. Press  (**Options**), and select **Send to**.
4. Enter a recipient's phone number or add a recipient from **Phonebook**.
Repeat this step to add multiple recipients.
5. Press  (**Options**), and select **Send > From SIM1/From SIM2** to send the message.
You can also press  (**Options**) for the following options:

- **Edit recipient:** enter a recipient's phone number.
- **Remove recipient:** remove a recipient.
- **Remove all recipients:** remove all recipients.
- **Save to Drafts:** save the message to **Drafts**.

Sending a Multimedia Message

 

1. In standby mode, select **Menu > Messaging > Write message > Multimedia message**.
2. Write the message.
You can also add a subject, picture, audio file, presentation slide, or other attachments to the messages.
3. Press  (**Options**), and select **Send to**.
4. Enter a recipient's phone number or add a recipient from **Phonebook**.
Repeat this step to add multiple recipients.
5. Press  (**Options**), and select **Send > From SIM1/From SIM2** to send the message.
You can also press  (**Options**) for the following options:
 - **Edit recipient:** enter a recipient's phone number.
 - **Remove recipient:** remove a recipient.
 - **Remove all recipients:** remove all recipients.
 - **Save to Drafts:** save the message to **Drafts**.
 - **Send options:** configure the sending settings such as **Delivery report**, **Read report**, **Priority**, and **Delivery time**.




- Contact your service provider to determine the availability of the Multimedia Messaging Service (MMS) and how to subscribe to the service.
- Open multimedia messages with caution. Objects in multimedia messages may contain viruses and malicious software that can damage your phone.

6 Contacts


Creating a Contact

1. In standby mode, select **Menu > Contacts > Add new contact**.
2. Press  (**Options**), and select **To SIM1**, **To SIM2** or **To phone** to select the location that you want to use to save the contact.
3. Enter the name and phone number of the contact.
4. Press  to save the contact.

Searching for a Contact

1. In standby mode, select **Menu > Contacts**.
2. Enter the first letter of the contact name.
3. Use  to scroll to the desired contact.

 

 

Setting a Speed Dial Number

1. In standby mode, select **Menu > Contacts**.
2. Press  (**Options**), and select **Phonebook settings > Speed dial > Status > On**.
3. Select **Set numbers**, and set one of the 2–9 keys as a speed dial key.

4. Enter the number that you want to assign to the speed dial key. In standby mode, you can press and hold the speed dial key to speed-dial the number.

7 Multimedia

 
Camera



 
1. In standby mode, select **Menu > Multimedia > Camera**.
2. Press  to view the photo album or configure the camera settings.
3. Frame the picture you want to take on the viewfinder screen, and press  to take the picture.
4. After taking the picture:
 - Press  (**Options**), and select **Send** to send the picture or **Delete** to delete the picture.
 - Press  (**Back**) to exit the camera.





All the pictures are stored in **Photos** on your phone or microSD card depending on which storage you have set as the preferred storage for pictures. You can select **Menu > File manager > Phone/Memory card > Photos** to access these pictures and perform operations, such as **Rename** and **Delete**, on them.

Video Recorder

1. In standby mode, select **Menu > Multimedia > Video recorder**.
2. Press  to configure the camcorder settings and the video settings.

3. Frame the scene you want to take on the viewfinder screen, and press  to shoot the video.
4. When shooting the video:
 - Press  to pause or continue.
 - Press  (**stop**) to stop shooting the video.



After shooting the video, press  (**Yes**) to save it. You can also press  to send it via multimedia message or Bluetooth.




Video Player

 
1. In standby mode, select **Menu > Multimedia > Video player**.

2. Use  to scroll to a video file.

3. Select **Options > Play**.

When playing the video file:





 
- Use  to adjust the volume.
- Use  to rewind or fast-forward.
- Press  to pause or continue.

4. Press  (**Stop**) to stop playing the video file.



All the video files are stored in **Videos** on your phone or microSD card depending on which storage you have set as the preferred storage for video files. You can select **Menu > File manager > Phone/Memory card > Videos** to access these video files and perform operations, such as **Rename** and **Delete** on them.

Audio Player

1. In standby mode, select **Menu > Audio player**.
2. Press  (**List**), and select a music file.
3. Select **Options > Play**.
When playing the music file:
 - Use  to adjust the volume.
 - Use  to rewind or fast-forward.
 - Press  to pause or continue.
4. Press  (**Stop**) to stop playing the music file.



 



 
All the music files are stored in **My Music** on your phone or microSD card depending on which storage you have set as the preferred storage for music files. You can select **Menu > File manager > Phone/Memory card > My Music** to access these music files and perform operations, such as **Rename** and **Delete** on them.

FM Radio

 
The headset cable also functions as the FM radio antenna when the radio is turned on. To ensure good radio reception, do not disconnect the headset from the phone or severely bend the headset cable.

To listen to the radio:

 
 
1. Connect a compatible headset to the phone.
2. In standby mode, select **Menu > Multimedia > FM radio**.
When the FM radio is turned on, the phone plays the program on the current channel.
3. On the **FM radio** screen:

- Press  (**Options**), and select **Auto search** to automatically search for and save channels.
- Press  to pause or continue.
- Use  to adjust the volume.
- Use  to go to the previous or next channel in the saved channel list.
- Press  (**Options**) to configure the relevant settings such as **Background play** and **Loudspeaker**.


Flashlight

- In standby mode, select **Menu > Organizer > Flashlight > On/Off** to turn the flashlight on or off.
- In standby mode, press and hold  to turn the flashlight on or off.

Ebook Reader

1. In standby mode, select **Menu > Extra > Ebook reader** to display the bookshelf.
The phone automatically adds the ebooks stored in the default storage location (phone or microSD card) to the bookshelf.
2. Select an ebook.
3. Press  (**Options**), and then select one from the following:
 - **Clean up bookshelf**: clean up the bookshelf.
 - **Global settings**: set the font size, scroll type, scroll speed, and alignment.
4. Press  (**Back**) to stop reading.

 


When reading an ebook, use  to turn pages.

8 Connectivity

Bluetooth

Your phone supports Bluetooth. You can synchronize files between your phone and a computer, transfer data between your phone and other Bluetooth devices, and talk on the phone using a Bluetooth headset.

1. In standby mode, selecting **Menu > Settings > Connectivity > Bluetooth > Power > On** to turn on Bluetooth.
2. Select **My device > Search new device** to search for available Bluetooth devices.
3. Scroll to the desired Bluetooth device, and press  (Pair). When you pair your phone with the device for the first time, a password is required.
4. Use the Bluetooth device to talk on the phone or transfer data with your phone.

Internet Services

You can use your phone to access Wireless Application Protocol (WAP) sites and use WAP-based services. To browse WAP pages, you must subscribe to the data service from your service provider and configure your phone's relevant settings.

 
Setting Up Your Data Account

Before accessing WAP sites on your phone, set up your data account as follows:

1. In standby mode, select **Menu > Services > Internet service > Settings > Data account**.
2. Select your service provider.
Your account settings are provided by your service provider.

3. Press  (OK) to save the settings.

Accessing a WAP Site

1. In standby mode, select **Menu > Services > Internet service > Input address**.
2. Enter the Uniform Resource Locator (URL) of the desired WAP site.
3. Press  (**Options**), and select **Done** to access the WAP site.



You can create and edit bookmarks so that you can quickly access your favorite WAP sites.

9 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are

using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.

- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.

- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not

function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified

power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.693 W/kg, and when properly worn on the body is 1.280 W/kg.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.353 W/kg, and when properly worn on the body is 0.392 W/kg.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the web site www.huaweidevice.com/certification.

CE 0700

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Please visit www.huaweidevice.com/worldwide/support/hotline for recently updated hotline and email address in your country or region.