

Important Safety Precautions

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.



Violation of the instructions may cause serious injury or death.



- Never use an unapproved battery as this could damage the phone and/or battery and may cause the battery to explode.



- Never place your phone in a microwave oven as it will cause the battery to explode.
- Do not dispose of your battery in or near a fire or with hazardous or flammable materials.



- Make sure that no sharp-edged items such as animal's teeth or nails come into contact with the battery. There is a risk of this causing a fire.



- Store the battery out of reach of children.
- Be careful that children do not swallow any parts as this could cause asphyxiation or suffocation.



- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



Important Safety Precautions



- When in a car, do not leave your phone or setup the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.



- Do not use a hand-held phone while driving.



- Do not use the phone in areas where its use is prohibited. (i.e.: aircraft, hospital).

- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.

- Never store your phone in temperatures less than -15°C or greater than -50°C .



- Do not use harsh chemicals (i.e. alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.



- Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.



- Do not use your phone in high explosive areas as the phone may generate sparks.

- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the Battery Charger plug if it is loose as it may cause a fire or electric shock.



- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.



- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



- Do not disassemble the phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



- Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.



- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.

- Do not hold or let the antenna come in contact with your body during a call.

- An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.



Contents

Important Safety Precautions	1	Call Waiting	17	Deleting a Contact Entry	25
Contents	4	Caller ID	17	Deleting a Speed Dial	26
Welcome	7	Speed Dialing	17	Phone Numbers With Pauses	26
Important Information	7	Entering and Editing Information ..18		Storing a Number with Pauses	26
FCC Part 15 Class B Compliance	7	Text Input	18	Searching Your Phone's Memory ..27	
Industry Canada Compliance	7	Text Input Examples	19	Scrolling Through Your Contacts	27
Technical Details	7	Contacts in Your Phone's Memory ..21		Searching by Letter	27
FCC RF Exposure Information	9	The Basics of Storing Contact		Making a Call From Your Phone's	
Phone Overview	10	Entries	21	Memory	27
Menus Overview	11	Options to Customize Your		From Contacts	27
Getting Started with Your Phone ..13		Contacts	22	From Recent Calls	27
The Battery	13	How to Access the Edit Entry		Speed Dialing	28
Turning the Phone On and Off	14	screen	22	Prepending a Stored Number	28
Making Calls	14	Adding or Changing the Group	22	Menu Access	28
Redialing Calls	14	Changing the Call Ringer	22	Using Phone Menus	29
Receiving Calls	14	Adding or Changing the Memo	22	Pictures	29
Screen Icons	15	Adding or Changing the Picture ID ..23		1. Camera	29
Quick Access to Convenient		Adding Speed Dial	23	2. Camcorder	30
Features	16	Adding Voice Dial	23	3. My Pictures	30
Manner Mode	16	Editing Contacts Entries	24	4. My Camcorder	30
Lock Mode	16	Adding Another Phone Number	24	5. Online Albums	30
Mute Function	16	Default Numbers	24	6. Account Info	30
Volume Quick Adjustment	16	Deleting	25	Messaging	31
		Deleting a Phone Number from a		1. Send Message	32
		Contact	25	2. Picture Message	33

Inbox	33				
Send Picture	33				
Send Camcorder	34				
3. Text Message	34				
Inbox	34				
Message Icon Reference	35				
Outbox	35				
Saved	35				
Edit Folder	36				
Send message	36				
Erase	37				
4. Voicemail	37				
5. Web Message	37				
Web	38				
Tools	39				
1. Scheduler	39				
2. Alarm Clock	40				
3. Voice Memo	40				
Recording a Voice Memo	40				
Playing a Voice Memo	41				
Erasing Recorded Voice Memos	41				
4. Notepad	41				
5. Ez Tip Calc	42				
6. Calculator	42				
7. World Clock	43				
Call History	43				
1. Outgoing Calls	44				
2. Incoming Calls	44				
3. Missed Calls	44				
4. Erase Calls	45				
Contacts	45				
1. Find/Add Entry	46				
2. Groups	46				
3. Speed Dials	46				
4. Voice Dials	46				
Downloads	47				
1. Games	48				
2. Ringers	48				
3. Screen Savers	48				
4. Applications	48				
5. Other	48				
<Memory Status>	48				
Settings	49				
1. Sounds	49				
1.1 Ringers	49				
1.2 Key Tones	49				
1.3 Volume	50				
1.4 Alerts	50				
2. Display	50				
2.1 Greeting	50				
2.2 Backlight	50				
2.3 Screen Savers	51				
2.4 Incoming Calls	51				
2.5 LCD Contrast	51				
2.6 Menu Style	52				
2.7 Theme Skins	52				
2.8 Clock	52				
2.9 Font Size	52				
3. Data	53				
3.1 Connection	53				
3.2 Method	53				
3.3 Speed	53				
4. Roaming	54				
4.1 Set Mode	54				
5. Location	54				
6. Messaging	55				
6.1 Notification	55				
6.2 Callback Number	55				
6.3 Signature	55				
6.4 Pre-Set Message	55				
6.5 Edit Voicemail Number	55				
6.6 Push Options	56				
7. Security	56				
7.1 Lock Phone	56				
7.2 Lock Pictures	56				



Contents

7.3 Change Lock	56	Consumer Information on SAR ...	73
7.4 Special #	57	Accessories	75
7.5 Erase Contacts	57	Warranty Information	76
7.6 Reset Pictures	57	Index	78
7.7 Reset Phone	57		
8. Voice Dial	58		
8.1 Voice Dial	58		
8.2 Train Words	58		
9. Setup/Others	58		
9.1 Shortcuts	58		
9.2 Call Setup	58		
9.3 Auto-Answer	59		
9.4 Dialing Match	59		
9.5 Language	59		
9.6 TTY Mode	60		
Phone Info	60		
1. My Phone Number	61		
2. SW version	61		
3. Icon Glossary	61		
4. Advanced	61		
TIA Safety Information	62		
Safety	62		
Safety Information	65		
FDA Consumer Update	67		

Congratulations for choosing the advanced and compact LG 6200 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA) and Advanced Mobile Phone Service (AMPS). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this phone offers:

- Large, easy-to-read, 9-line backlight LCD with status icons.
- Paging, messaging, voice mail, and caller ID.
- 23-key keypad.
- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and French) capabilities.

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Industry Canada Compliance

This phone complies with Industry Canada RSS 133. This phone complies with the Class B limits for radio noise emissions as set out in the interference causing standard entitled "Digital Apparatus" ICES-003 of Industry Canada.

Technical Details

The LG 6200 is an all digital phone that operates on both Code Division Multiple Access (CDMA) frequencies: cellular services at 800 Mhz and Personal Communication



Welcome

Services (PCS) at 1.9 GHz. Also, the LG 6200 works on Advanced Mobile Phone Service (AMPS). We call it a tri-mode phone. Since the phone operates on Cellular, PCS and AMPS, the call fail rate is less than on a conventional dual-mode or singlemode phone.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard Handoff, and dynamic RF power control technologies combine to reduce call interruptions. The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station). The following table lists some major CDMA standards.

* TSB -74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74	CDMA Dual-Mode Air Interface 14.4kbps radio link protocol and inter-band operations
	ANSI J-STD-008	IS-95 adapted for PCS frequency band
	TIA/EIA-IS2000 ANSI TIA/EIA 553A	CDMA2000 1xRTT AirInterface Advanced Mobile Phone Service
Network	TIA/EIA/IS-634	MAS-BS
	TIA/EIA/IS/651	PCSC-RS
	TIA/EIA/IS-41-C	Intersystem operations
	TIA/EIA/IS-124	Nom-signaling data comm.
Service	TIA/EIA/IS-96-B	Speech CODEC
	TIA/EIA/IS-99	Async Data and Fax
	TIA/EIA/IS-637	Short message service
Performance	TIA/EIA/IS-657	Packet Data
	IS-801	Position Determination Service (gpsOne)
	TIA/EIA/IS-707-A	High Speed Packet Data
	TIA/EIA/IS-97	Cellular base station
Performance	TIA/EIA/IS-98	Cellular mobile station
	ANSI J-STD-018	PCS personal station
	ANSI J-STD-019	PCS base station
	TIA/EIA/IS-125	Speech CODEC

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 3/4 inches (2 cm) from the body. To comply with IC and FCC RF exposure requirements, a minimum separation distance of 3/4 inches (2 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain

3/4 inches (2 cm) distance between the user's body and the back of the phone and have not been tested for compliance with IC and FCC RF exposure limits.

Vehicle-Mounted External Antenna

(Optional, if available.)

A minimum distance of 8 inches (20 cm) must be maintained between the user / bystander and the vehicle-mounted external antenna to satisfy IC and FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov.

 
Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

Phone Overview

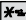

1. **Earpiece**
2. **Flip** Flip open the case to answer an incoming call and close to end the call.
3. **LCD Screen** Displays messages and indicator icons.
4. **Headset Jack**
5. **Left Soft Key** Use to display the function setting menu.
6. **Side Keys** Use to adjust the ringer volume in Main Menu Screen and the earpiece volume during a call.
7. **TALK Key** Use to place or answer calls.
8. **Voice Dial Key** Use for quick access to Voice Dial.
9. **Manner Mode Key** Use to set the Manner Mode (from Main Menu Screen press and hold  for about 3 seconds).
10. **Navigation Key** Scrolls through the phone's menu options and acts as a shortcut key from standby mode. (Messaging, Downloads, Find/Add Entry, and Scheduler.)
11. **Right Soft Key** Use to select an action within a menu.
12. **Side Camera Key** Use for quick access to Camera function. (Press and hold for about 3 seconds to use camera function.)
13. **END Key** Use to turn the power on/off and to end a call. Also use to return to the main menu display screen.
14. **BACK Key** Press to delete a single space or character. Press and hold to delete entire words. Press this key once in a menu to go back one level.
15. **Camera Key** Use for quick access to Take Photo menu.
16. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
17. **Microphone**



Pictures

1. Camera
2. Camcorder
3. My Pictures
4. My Camcorder
5. Online Albums
6. Account Info



Messaging

1. Send Message
2. Picture Message
3. Text Message
 1. Inbox
 2. Outbox
 3. Saved
 4. Edit Folder
 5. Send message
 6. Erase
4. Voicemail
5. Web Message



Web



Tools

1. Scheduler
2. Alarm Clock
3. Voice Memo
4. Notepad
5. Ez Tip Calc
6. Calculator
7. World Clock



Call History

1. Outgoing Calls
2. Incoming Calls
3. Missed Calls
4. Erase Calls
 1. Outgoing Calls
 2. Incoming Calls
 3. Missed Calls
 4. All Calls



Contacts

1. Find/Add Entry
2. Groups
3. Speed Dials
4. Voice Dials



Downloads

1. Games
 2. Ringers
 3. Screen Savers
 4. Applications
 5. Other
- <Memory Status>



Settings

1. Sounds
 1. Ringers
 2. Key Tones
 3. Volume
 4. Alerts



Menus Overview

2. Display

1. Greeting
2. Backlight
3. Screen Savers
4. Incoming Calls
5. LCD Contrast
6. Menu Style
7. Theme Skins
8. Clock
9. Font Size

3. Data

1. Connection
2. Method
3. Speed

4. Roaming

1. Set Mode

5. Location

6. Messaging

1. Notification
2. Callback Number
3. Signature
4. Pre-Set Message
5. Edit Voicemail Number
6. Push Options

7. Security

1. Lock Phone
2. Lock Pictures
3. Change Lock
4. Special #
5. Erase Contacts
6. Reset Pictures
7. Reset Phone

8. Voice Dial

1. Voice Dial
2. Train Words

9. Setup/Others

1. Shortcuts
2. Call Setup
3. Auto-Answer
4. Dialing Match
5. Language
6. TTY Mode



Phone Info

1. My Phone Number
2. S/W version
3. Icon Glossary
4. Advanced

The Battery

NOTE It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

Installing the Battery

To install the battery, insert the battery into the opening on the back of the phone. Put the battery cover on the battery and push it slightly upwards.

Removing the Battery

Remove the battery by pressing the upper area, and pulling the battery.

Charging the Battery

To use the charger provided with your phone:

Warning! Use only the charger provided with the phone. Using any charger other than the one included with the LG 6200 may damage your phone or battery.

1. Plug the end of the adapter into the phone's charger jack and the other end into an electrical outlet.
2. The charge time varies depending upon the battery level. The maximum charge time for a fully discharged battery is 3.5 hours.

Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying **LOW BATTERY WARNING!** If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.



Fully Charged

Fully Discharged



Getting Started with Your Phone

Turning the Phone On and Off

Turning the Phone On

1. Install a charged battery or connect the phone to LG authorized or manufactured external power source such as a vehicle power charger or hands-free car kit.
2. Press **END** for a few seconds until the LCD screen lights up.

Turning the Phone Off

1. Press and hold **END** until the display turns off.

Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon: The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

Making Calls

1. Make sure the phone is turned on. If not, press **END** for about 3 seconds.
2. Enter the phone number (include the area code if needed).
3. Press **TALK**.

If the phone is locked, enter the lock code.

Call Failed - indicates the call did not go through.

4. Press **END** to end the call.

Correcting Dialing Mistakes

If you make a mistake while dialing a number, press **BACK** once to erase the last digit entered, or hold down **BACK** for at least 2 seconds to delete all digits.

Redialing Calls

1. Press **TALK** twice to redial the last number you dialed. The last 20 numbers (dialed) are stored in the call history list and can be accessed for redial by pressing **TALK** and using the down navigation key until you reach the desired number and pressing **TALK** again.

Receiving Calls
























1. When the phone rings or vibrates, press **TALK** to answer.

NOTE If you press **END** or **CALL** (the side keys) while the phone is ringing, the ringing or vibration is muted for that call.

2. Press **END** twice to reject the call.

Screen Icons


When the phone is powered on, the top line of the LCD screen displays icons indicating the status of the phone.

 Signal strength indicator. The strength of the signal received by the phone is indicated by the number of bars displayed.	 New Messages.
 In use indicator. A call is in progress. * No icon indicates the phone is in Main Menu Screen.	 New Msgs & Voice Mails.
 No service indicator. The phone is not receiving a system signal.	 Battery indicator. Indicates battery charge level.
 IS-2000.	 Charging indicator.
 Digital.	 Vibrate Mode.  High & Vib
 Analog.	 Silence All Mode.
 Roaming indicator.	 Location on.  Location off.
 Speaker On.	 SSL.  TTY Mode.
 3G Service.	 Outgoing Calls.
 New Voicemails.	 Missed Calls.




Quick Access to Convenient Features

Manner Mode

Use Manner Mode in public places. When Manner Mode is set,  is displayed on the screen, the key tones are silent, and the phone is set to **Manner Mode**.

Manner Mode Quick Activation

1. From the Standby Mode, press  to **Manner Mode**.

Manner Mode Quick Cancellation

1. Press  for manner mode cancellation.

NOTE Mode changes can only be when the flip phone is OPEN.

Lock Mode

Use Lock Mode to prevent others from using your phone. When Lock Mode is set, your 4-digit password is required to use the phone.

NOTE The lock code/password is the last 4 digits of your phone number. You can change to a new password using the Security menu.

Mute Function

The Mute Function prevents the other party from hearing your voice, but allows you to hear the other party.

Mute Quick Activation

1. Select **Mute** during a call.

Mute Quick Cancellation

1. Select **Unmute** again.

Volume Quick Adjustment

Use the side keys to adjust the earpiece and ringer volumes. The upper key increases the volume and the lower key decreases the volume.

- Earpiece volume can be adjusted during a call.
Ringer volume can be adjusted when phone is idle.

NOTE Key beep volume can be adjusted through the Sounds Volume (Menu -> Settings -> Sounds -> Volume -> Key Beep).

Call Waiting

Your cellular service may offer call waiting. While a call is in progress, two beeps indicate another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.

1. Press **TALK** to receive the new incoming call.
2. Press **TALK** again to switch between calls.

Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name appears with the number. Check with your service provider to ensure they offer this feature.

Speed Dialing

Speed Dialing is a convenient feature that allows you to make phone calls quickly and easily with a few keystrokes. Your phone recalls the number from your Contacts, displays it briefly, and then dials it. Speed Dial Number 1 is assigned to Voice Mail by default.

Dialing Single Digit Speed Dials (from 1 to 9)

Press and hold the Speed Dial number.

OR

Enter the speed dial number and press **TALK**.

Dialing Double Digit Speed Dials (from 10 to 99)

Enter the first digit then hold the key of the last digit.

OR

Enter the first and second digits and press **TALK**.



Entering and Editing Information

Text Input

You can input and edit Greeting, Scheduler, Contacts, Notepad and Messaging.

Key Functions



Right Soft Key : Press to scroll through the following text input modes:

Abc -> T9Word -> 123 -> Symbols -> Smileys



Shift : Press to change case.

T9 text : Word -> WORD -> word

Abc text : Abc -> ABC -> abc



Next : In T9 mode, press to display other matching words.



Space : Press to complete a word and insert a space.




Clear : Press to delete a single space or character. Hold to delete words.



Punctuation : In T9 mode, press to insert punctuation in a word and complete a sentence.

Text Input Modes

There are five modes for entering text, numbers, special characters, and punctuation. In a text entry field, pressing Right Soft Key  displays a pop-up list of text modes.

T9Word (T9) Mode

Use to type text using one keystroke per letter. The phone translates keystrokes into common words by using the letters on each key and a compressed database.

Abc (Multi-tap) Mode

Use to type text corresponding to the letter on the keyguard. More than one keystroke is required per letter.

123 (Numbers) Mode

Use to type numbers using one keystroke per number.


Symbols Mode

Use to insert special characters or punctuation.

Smileys Mode

Use to insert smiley graphics. There are 36 smiley characters.

Changing Letter Case

Using T9 and Abc text input modes you can set the capitalization. Press  to reach the following:

Initial Cap (Word / Abc)

Only the first letter is capitalized and subsequent letters are lower case.

Caps Lock (WORD / ABC)




All letters are capitalized.

Lower Case (word / abc)







All letters are in lower case.

Text Input Examples


















Display the text modes and select a text mode:

1. In a text entry field, press Right Soft Key  to display text modes.
2. Press  to highlight the text input mode you want to use.
3. Press  to select the highlighted text input mode.

Using Abc (Multi-tap) Text Input

1. Press Right Soft Key  to change to Abc mode.
2. Press  to change to ABC Caps Lock.
3. Press     .
LG is displayed.

Using T9 Mode Text Input

1. Press Right Soft Key  to change to T9Word mode.
2. Press     .
3. Press  to complete the word and add a space.
4. Press         
  .
Call the office. is displayed.



Entering and Editing Information

Using the NEXT Key

After you have finished entering a word, if the word displayed is not the one you want, press **0NEXT** to display additional choices of words from the database.

1. Press **4OH** **6MNO** **6MNO** **3DEF**.

Good is displayed.

2. Press **0NEXT**.

The display gives you additional choices such as:
Home, Gone, Hood, etc.

Adding Words to the T9 Database

If a word is not in the T9 database, add it using Abc (Multi-tap) mode text entry.

1. Press Right Soft Key  to change to Abc (Multi-tap) mode.

2. Press **2ABC** **2ABC** **6MNO** **6MNO** **6MNO** **7POB**.

Bop is displayed.

3. Press Right Soft Key  to change to T9 mode to add the word Bop to the T9 database.

4. Press **BACK** to erase the existing word.

5. Press **2ABC** **6MNO** **7POB**.

Cop is displayed.

6. Press **0NEXT** **0NEXT**.

Bop is displayed.

Contacts in Your Phone's Memory

Contacts Entries

This allows you to have easy access to your most frequently dialed phone numbers. You may store up to 500 entries with up to 5 phone numbers each. Each entry may be up to 32 characters. Each phone number may be up to 48 digits.

The Basics of Storing Contact Entries



1. From Main Menu Screen, enter the phone number you want to save (up to 48 digits).
2. Scroll to **Save** and press **OK**.
3. Use **Up** to select Name entry, then press **OK**.

New Entry / Find Entry

NOTE Use **Find Entry** to add another phone number to a contact already stored in memory.




4. Enter a name for the phone number (up to 32 characters), then press **OK**.

NOTE To skip name entry, press **OK** to go to the next step.



NOTE Press Left Soft Key **Done** to save the Contact entry or press **END** to return to the Main Menu Screen without saving.

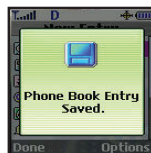

5. To Set a Speed Dial, highlight the number, press Right Soft Key **Options**, and select **Set Speed Dial**.
6. Enter a Speed Dial digit (e.g., 2). Use the keypad, then press **OK** or use **Down** to highlight the Speed Dial location, then press **OK** two times.
7. To Set a Voice Dial, press Right Soft Key **Options**, and select **Set Voice Dial**.
8. Press **OK**, and follow the Voice Dial prompts.
9. Press Left Soft Key **Done** to save the Contact entry or press **END** to return to the Main Menu Screen without saving.









Contacts in Your Phone's Memory

Options to Customize Your Contacts






Once the basic phone number and name information is stored in your Contacts, you can edit and customize each entry.

How to Access the Edit Entry screen:

1. Press Left Soft Key  **Menu**, select **Contacts**, and select **Find/Add Entry**.
2. Use  to highlight the contact entry you want to edit, then press .
3. Highlight **Edit Entry**, and press .
4. Use  to highlight the information you want to customize, then press .






Adding or Changing the Group

Allows you to manage your Contacts entries by organizing them into groups.

1. Access the Edit Entry screen.
2. Use  to highlight **No Group**, then press .
3. Use  to select the Group, then press 
No Group / Family / Friends / Colleagues / Business / School
4. Press Left Soft Key  **Done** to save the change.





Changing the Call Ringer

Allows you to identify who is calling, by setting different ringers for different phone numbers in your Contacts. It is automatically set to the default ringer when the Contact is saved.

1. Access the Edit Entry screen.
2. Use  to highlight **Default**, then press .
3. Use  to select the Ringer Type, then press .
4. Press Left Soft Key  **Done** to save the change.









Adding or Changing the Memo

Allows you to enter up to 32 characters as a memo to the Contact entry.







1. Access the Edit Entry screen.
2. Use  to highlight **Memo**, then press .
3. Enter text, then press .
4. Press Left Soft Key  **Done** to save the change.

Adding or Changing the Picture ID

Allows the phone to display an image to identify the caller.








1. Access the Edit Entry screen.
2. Use  to highlight **Default**, then press .
3. Press Right Soft Key  **More** to display additional choices.
4. Use  to select **Downloads/In Camera/Saved to Phone**, then press .
5. Use  to select the picture, then press Left Soft Key  **Save**.
6. Press Left Soft Key  **Done** to save the change.

Adding Speed Dial

1. Access the Edit Entry screen.
2. Use  to highlight the phone number you want to set with a Speed Dial, then press Right Soft Key  **Options**.
3. Select **Set Speed Dial**, then press .
4. Enter a Speed Dial digit. Use the Keypad, then press , or use  to highlight the Speed Dial digit, then press  two times.

5. Press Left Soft Key  **Done** to save the change.

Adding Voice Dial

1. Access the Edit Entry screen.
2. Use  to highlight the phone number you want to set with Voice Dial and then press Right Soft Key  **Options**.
3. Select **Set Voice Dial** and press .
4. Use  to highlight **OK** and press .
5. Follow the Voice Dial prompts.
6. Press Left Soft Key  **Done** to continue editing the Contact entry, or Press  to return to the Main Menu Screen.



Contacts in Your Phone's Memory

Editing Contacts Entries

Adding Another Phone Number

From the Main Menu Screen

1. From Main Menu Screen enter the phone number you want to save (up to 48 digits).
2. Scroll to **Save**, and press **OK**.
3. Use **Left Arrow** to highlight **Find Entry**, then press **OK**.
4. Use **Left Arrow** to highlight the existing Contact entry, press **OK**, then press Left Soft Key **Done** to save.
A confirmation message is displayed.

Through Contacts

1. Access the Edit Entry screen.
2. Use **Left Arrow** to highlight **Add Number**, then press **OK**.
3. Enter the number, then press **OK**.
4. Use **Left Arrow** to highlight a Label, then press **OK**.
A confirmation message is displayed.
5. Press Left Soft Key **Done** to save.

Default Numbers

The phone number saved when a Contact is created is the Default Number. If more than one number is saved in a Contact entry, another number can be designated as the Default Number.





Changing the Default Number

1. Access the Edit Entry screen.
2. Use **Left Arrow** to highlight the phone number you want to set as the Default Number, then press Right Soft Key **Options**.
3. Scroll to **Set as Default #** and press **OK**.
A confirmation message is displayed.

Editing Stored Phone Numbers





1. Access the Edit Entry screen.
2. Use **Left Arrow** to highlight the phone number, then press **OK**.
3. Edit the phone number as necessary, then press **OK**.
4. Use **Left Arrow** to confirm the Label, then press **OK**.
5. Press Left Soft Key **Done** to save.

Editing Stored Names

1. Access the Edit Entry screen.
2. Use  to highlight the name, then press .
3. Edit the name as necessary, then press .
4. Press Left Soft Key  **Done** to save the change.



Editing Customized Options

Edit any of the Contacts options in the same manner as when the Contact is created.






1. Access the Edit Entry screen.
2. Use  to highlight the information you want to customize, then press .
3. Edit the information as necessary, then press .
4. Press Left Soft Key  **Done** to save the change.

Deleting

Deleting a Phone Number from a Contact

1. Access the Edit Entry screen.
2. Use  to highlight the phone number to be deleted.
3. Press Right Soft Key  **Options**.
4. Select **Erase Field**.
5. Select **Erase**.
A confirmation message is displayed.

Deleting a Contact Entry

1. Press Left Soft Key  **Menu**, select **Contacts**, and select **Find/Add Entry**.
 2. Use  to highlight the contact entry you want to edit, then press .
 3. Highlight **Erase Entry**, and press .
 4. Highlight **Erase**, and press .
- A confirmation message is displayed.



Contacts in Your Phone's Memory

Deleting a Speed Dial

1. Press Left Soft Key **Menu**, select **Contacts**, and select **Speed Dials**.
2. Highlight the Speed Dial you want to delete, then press **OK**.
3. Highlight **Erase Speed Dial**.
4. Highlight **Erase**, and press **OK**.
A confirmation message is displayed.

Phone Numbers With Pauses

When you call automated systems such as voice mail or credit billing numbers, you often have to enter a series of numbers. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (P, T). There are two different types of pauses you can use when storing a number:

Hard Pause (P)

The phone stops dialing until you press to advance to the next number.

2-sec Pause (T)

The phone waits 2 seconds before sending the next string of digits.

Storing a Number with Pauses


1. Enter the number.
2. Highlight the **Hard Pause/2-sec Pause**, then press **OK**.
Enter the second set of numbers.
3. After you have finished entering numbers, highlight **Save**, then press **OK**.
4. Select **New Entry/Find Entry**, then press **OK**.
5. Add more Entry information and press Left Soft Key **Done**, if you want to further customize.

Searching Your Phone's Memory


The phone LG 6200 is able to perform a dynamic search of the contents in your phone's memory. A dynamic search compares entered letters or numbers against the entries in your Contacts. A matching list is displayed in descending order. You can then select a number from the list to call or edit. There are several ways to search:

- Scrolling Alphabetically
- Searching by Letter

Scrolling Through Your Contacts


1. Press Left Soft Key  **Menu**, select **Contacts**, and select **Find/Add Entry**.
2. Use  to scroll through the list.

Searching by Letter




1. Press Left Soft Key  **Menu**, select **Contacts**, and select **Find/Add Entry**.
2. Enter by letter you want to search.

Making a Call From Your Phone's Memory






Once you have stored phone numbers in your Contacts, you can place calls to those numbers quickly and easily.

- By pressing  after searching for a phone number in Contacts or Recent Calls and highlighting it.
- Use Speed Dialing.

From Contacts

1. Press Left Soft Key  **Menu**, select **Contacts**, and select **Find/Add Entry**.
2. Use  to select the phone number.
3. Press  to place the call.

From Recent Calls

1. Press Left Soft Key  **Menu**.
2. Select **Call History**.
3. Use  to select the type of recent call, then press .
Outgoing Calls / Incoming Calls / Missed Calls / Erase Calls
4. Use  to select the phone number.
5. Press  to place the call.



Contacts in Your Phone's Memory

Speed Dialing

For a single-digit Speed Dial, press and hold the digit or press the digit, then press **TALK**. For a double-digit Speed Dial, press the first digit and hold the second digit or press the first and second digits, then press **TALK**.

Prepending a Stored Number

Prepend can be used if you are out of your home system area and need to add the area code to an existing number in your phone's memory. When a Contacts entry or message callback number is displayed, you can add to the beginning of the original number. However, you cannot edit the original number.

1. Recall a number in your Recent Calls (Outgoing, Incoming, or Missed).
2. Select **Prepend**.
3. Enter the prepend digits to the phone number.
4. Press **TALK** to place the call.

Menu Access

Press Left Soft Key **Menu** to access nine phone menus. There are two methods of accessing menus and submenus:

- Use the navigation key to highlight and select.

For example:



1. Press Left Soft Key **Menu** to display nine menu items.
Use **Left Arrow** to scroll through the list of menus.
2. Highlight the menu item you want to select and press **OK**.
The sub-menu list will be displayed.
3. Highlight the sub-menu you want to access.
4. Use **Left Arrow** to highlight your preferred setting, then press **OK** to select it.

NOTE

Press **BACK** to go back one level (while accessing a menu or selecting a setting). Changes to settings will not be saved.

Pictures

Access and Options

1. Press Left Soft Key  **Menu**.
2. Scroll to **Pictures**, and press .
3. Select a sub-menu.










1. Camera
2. Camcorder
3. My Pictures
4. My Camcorder
5. Online Albums
6. Account Info





1. Camera

Lets you take digital pictures.

1. Press Left Soft Key  **Menu**, scroll to **Pictures**, and press .
2. Scroll to **Camera** and press .
3. Press Right Soft Key  **Options** and change any of the following settings as necessary.
Flash / Self Timer / Color Tone / Image Controls / Settings / Go to My Pictures

- NOTE**
- Use  to zoom in/out.
 - Use  to control brightness.
 - Use  to capture the screen.







4. Press Left Soft Key  **Capture**.
5. Press Left Soft Key  **Next**, then select **Send Picture / Camera Mode / Upload to Albums / Erase / Assign / Add Voice Caption / Go to My Pictures**





Using Phone Menus

2. Camcorder





Lets you record a video message with sound.

1. Press Left Soft Key  **Menu**, scroll to **Pictures**, and press .
2. Scroll to **Camcorder** and press .
3. Set the brightness , zoom  or press Right Soft Key  **Options**, to change other settings.
 - Select the option(s) to customize.





Flash	Always off/ Always On / On this shot
Image Controls	Brightness/White Balance
Go to My Camcorders	
Auto-Erase	On/Off
4. Press Left Soft Key  or  to begin recording, and again to stop.

3. My Pictures

Allows you to view photos stored in the phone.





1. Press Left Soft Key  **Menu**, scroll to **Pictures**, and press .
2. Scroll to **My Pictures** and press .
3. Select **In Camera** or **Saved to Phone** and press .

4. My Camcorder

1. Press Left Soft Key  **Menu**, scroll to **Pictures**, and press .
2. Scroll to **My Camcorder** and press .
3. Select **In Camcorder** or **Saved to Phone** and press .

5. Online Albums

Access the Online Albums.

1. Press Left Soft Key  **Menu**, scroll to **Pictures**, and press .
2. Scroll to **Online Albums** and press .
3. Select **View Albums**, **Upload Pictures** or **Upload Camcorders** and press .



6. Account Info

1. Press Left Soft Key  **Menu**, scroll to **Pictures**, and press .
2. Scroll to **Account Info** and press .



Messaging

Access and Options



1. Press Left Soft Key  **Menu**.
2. Scroll to **Messaging**, and press .
3. Select a sub-menu.



1. **Send Message**
2. **Picture Message**
3. **Text Message**
4. **Voicemail**
5. **Web Message**



Text messages, pages, and the voice mail box become available as soon as the phone is powered on.

- Check types of messages by pressing the message key .
- Make a call to the callback number by pressing  during an Inbox message check.
- Read and edit messages saved in the outbox after transmission and resend them.

The phone can store up to 111 messages (1 voice message, 50 inbox text messages, 50 outbox text messages, 10 saved text messages). The LG 6200 supports up to 140 characters per message including header information. The information stored in the message is determined by phone mode and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.



Using Phone Menus

New Message Alert





There are three ways your phone alerts you to new messages.










1. The phone displays a message on the screen.
2. One of eight ring types is heard, if selected.
3. The message icon (✉) is displayed on the screen.

NOTE If you receive the same message twice, your phone deletes the older one and the new one is stored as a Duplicate.

1. Send Message

You can send messages from one phone to another.

1. Press Left Soft Key  **Menu**, scroll to **Messaging**, and press  .
2. Scroll to **Send Message** and press  .
3. Select Message type: **Text Message**, **Send Picture**, **Send Camcorder** and press  .
4. Select **Mobile**, **E-mail**, **From Contacts** or **Recent List** to enter recipients.
 - **Mobile** to enter a mobile phone number directly.
 - **Email** to enter an email address directly.








- **From Contacts** to select a recipient from your Contacts list. Highlight an entry and press  to select.
 - **Recent List** to select a recipient from your recent lists. Highlight an entry and press  to select.
4. Press Left Soft Key  **Next** when you are finished selecting/entering recipients (you may include up to 10 recipients).
 5. Scroll to **[Message]** and press  .
 6. Enter the message, and press  .
 7. Press  then select **Normal / Urgent**.
 8. Press  to select **Callback#**, then press  to insert a callback number.
 9. Press Left Soft Key  **Send** to send the message..

NOTE If there is a failure when sending a message, the message goes to the Outbox folder.

2. Picture Message







Inbox

Received picture messages and page messages may be searched and the contents may be viewed. Received messages are displayed from newest to oldest. To view the list of the received messages:

1. Press Left Soft Key  **Menu**, scroll to **Messaging**, and press .
2. Scroll to **Picture Message** and press .
3. Scroll to **Inbox** and press .
4. Select a message with  and press  and press Right Soft Key  **Options**.


Go URL / Call / Reply / Forward / Lock / Save Number / Save E-mail / Erase





Send Picture

1. Press Left Soft Key  **Menu**, scroll to **Messaging**, and press .
2. Scroll to **Picture Message** and press .
3. Scroll to **Send Picture** and press .
4. Use  to select the option and press .

From My Pictures You can select your desired picture from My Pictures.

Use  to select the picture.

Take New Picture You can take the new picture and send it directly. Press Left Soft Key  **Capture** to take a picture.

5. Press Left Soft Key  **Next**.
6. Select **Mobile / Email / Contact(s) / Other Service** and press .
7. Edit the recipient's address and press Left Soft Key  **OK**.
You can also edit From Contacts or Recent List.
8. Press Left Soft Key  **Next** to send the message.



Using Phone Menus

Send Camcorder

1. Press Left Soft Key **Menu**, scroll to **Messaging**, and press .
2. Scroll to **Picture Message** and press .
3. Scroll to **Send Camcorder** and press .
4. Use to select the option and press .

From My Camcorders You can select your desired picture from My Camcorders.

Use to select the Camcorder.

Take New Camcorder You can take the new picture and send it directly. Press Left Soft Key to begin recording, and again to stop.

5. Press Left Soft Key **Next**.
6. Select **Mobile / Email / Contact(s) / Other Service** and press .
7. Press Right Soft Key **Options**. Then, select **Expand / Cancel**.
8. Press Left Soft Key **Next** to send message.

3. Text Message







Inbox

Received text messages and page messages may be searched and the contents may be viewed. Received messages are displayed from newest to oldest. To view the list of the received messages:

1. Press Left Soft Key **Menu**, scroll to **Messaging**, and press .
2. Scroll to **Text Message** and press .
3. Scroll to **Inbox** and press .
4. Select a message with and press and press Right Soft Key **Options**.

Go URL / Call / Reply / Forward / Lock / Save Number / Save E-mail / Erase

Message Icon Reference

	Sent : Messages sent in Short Message Center(SMC) have been transmitted.
	Fail : Indicates a failed message transmission.
	Delivery : Message has been delivered.
	Lock : Indicates that messages are locked.
	Multi-sending : Indicates more than one designated recipient.
	Pending : Transmission is unavailable in a no service area or in an analog service area. Messages are pending transmission. Pending messages are transmitted automatically when digital mode becomes available.

Outbox

Up to 50 sent messages can be stored in the Outbox. View lists and contents of sent messages and verify whether the transmission was successful or not.

1. Press Left Soft Key  **Menu**, scroll to **Messaging**, and press .
2. Scroll to **Text Message** and press .

3. Scroll to **Outbox** and press .

4. Select a message with  and press Left Soft Key  **Resend** or Right Soft Key  **Options**.








Lock Locks a message so that it is not erased if the Erase Outbox or Erase All feature is used.

Erase Deletes the selected message.

Erase all Use to delete a selected message in the Outbox.

Saved






Displays all the saved messages.

1. Press Left Soft Key  **Menu**, scroll to **Messaging**, and press .
2. Scroll to **Text Message** and press .
3. Scroll to **Saved** and press .
4. Select a message with  and press Left Soft Key  **Edit** or press Right Soft Key  **Options**.
 - **Erase / Erase all**



Using Phone Menus





Edit Folder











1. Press Left Soft Key  **Menu**, scroll to **Messaging**, and press .
2. Scroll to **Text Message** and press .
3. Scroll to **Edit Folder** and press .
4. Press  then select **Create Folder / Erase Folder**.

Send message

You can send text messages from one phone to another.







Text messages: Transmits text (with or without numbers).

1. Press Left Soft Key  **Menu**, scroll to **Messaging**, and press .
2. Scroll to **Text Message** and press .
3. Scroll to **Send message** and press .
4. Select **Mobile**, **E-mail**, **From Contacts**, or **Recent List** to enter recipients.
 - **Mobile** to enter a mobile phone number directly.
 - **Email** to enter an email address directly.

- **From Contacts** to select a recipient from your Contacts list. Highlight an entry and press  to select.
 - **Recent List** to select a recipient from your recent lists. Highlight an entry and press  to select.
5. Press Left Soft Key  **Done** when you are finished selecting/entering recipients (you may include up to 10 recipients).
 6. Press Left Soft Key  **Next**.
 7. Scroll to **Message** and press . Create a message and press .
 8. Press  then select **Normal / Urgent**.
 9. Press  to select **Callback #**, then press  to insert a callback number.
 10. Left Soft Key  **Send**.

Erase






This allows you to erase all text messages stored in your Inbox, Outbox, Saved or All folders. You can also erase all messages stored in these folders at the same time.

1. Press Left Soft Key  **Menu**, scroll to **Messaging**, and press .
2. Scroll to **Text Message** and press .
3. Scroll to **Erase** and press .
4. Press  then select **Inbox / Outbox / Saved / All**.
 - **Inbox** to erase all messages stored in the Inbox.
 - **Outbox** to erase all messages stored in the Outbox.
 - **Saved** to erase all messages stored in the Saved Items folder.
 - **All** to erase all messages stored in the Inbox, Outbox, and Saved Items folder.
5. Select **Erase all / Cancel** and press .

4. Voicemail

Allows you to view new message recorded in the Voicemail box. When you have a new voice message, your phone will alert you.

Checking Your Voice Mail Box




1. Press Left Soft Key  **Menu**, scroll to **Messaging**, and press .
2. Scroll to **Voicemail** and press .
3. Use  to highlight the options and press .

Call Voicemail / Clear

- Press  to listen to the message(s).

5. Web Message

Web Msg is special links or message provided from the carrier to inform you of special offers, bulletins and announcements.

1. Press Left Soft Key  **Menu**, scroll to **Messaging**, and press .
2. Scroll to **Web Message** and press .

Web Msg notifies the user with 4 kinds of alerts.

The Alert type is determined by its priority.



Using Phone Menus



Web

The MiniBrowser feature allows you to view Internet content especially designed for the mobile phone interface. For specific information on MiniBrowser access through your phone, contact Bell Mobility.

Access and Options

1. Press Left Soft Key  **Menu**.
2. Scroll to **Web**, and press .



Overview

The MiniBrowser allows the user to use a variety of Internet services. Using the MiniBrowser on the phone allows you to:

Send and receive Internet e-mail.

- Browse and search the World Wide Web via web pages especially designed for wireless phone customers.

- Set bookmarks to directly access your favorite sites.
- Retrieve information, such as stock quotes and flight schedules from the Internet.

Quality of Browser

Browsing the web via the phone is not like using your home computer. Site providers have selected only the critical aspects of their site to present to wireless phone users and have removed most graphics.

Ending the MiniBrowser Session

You can end a MiniBrowser session by pressing .

Navigating through the Browser

While using the MiniBrowser, you will find the following content:

- Numbered options (some options may not be numbered);
- Links (embedded in content).
- Text or numeric input.
- Simple text.

You can act on the options or the links by using the Soft Keys.



Tools

Your phone tools include a Scheduler, Alarm Clock, Voice Memo, Notepad, Ez Tip Calc, Calculator, and World Clock.

Access and Options

1. Press Left Soft Key **Menu**.
2. Scroll to **Tools**, and press .
3. Select a sub-menu.



1. Scheduler
2. Alarm Clock
3. Voice Memo
4. Notepad
5. Ez Tip Calc
6. Calculator
7. World Clock



1. Scheduler

Allows you to conveniently keep and access your agenda(s). Simply store your appointments and your phone will alert you with a reminder of your scheduled appointments.

1. Press Left Soft Key **Menu**, scroll to **Tools**, and press .
2. Scroll to **Scheduler** and press .
3. Use to highlight the scheduled day and press .
 - Moves cursor to the left.
 - Moves cursor to the right.
 - Moves to the previous week.
 - Moves to the next week.
4. Scroll to **Add Event** and press .
5. Enter your schedule information including:
 - Date
 - Time
 - Title/Information
 - Recurring event
 - When to ring the alarm reminder
 - Which ring alarm to sound
6. Press Left Soft Key **Save**.

NOTE




Scheduler will not alert you during a call or during SMS transmitting. It will sound the reminder after you exit a call.



Using Phone Menus













2. Alarm Clock

Allows you to set one of four alarms. The current time is displayed at the top of the screen when you select an alarm to set. At the alarm time, Alarm 1 (or 2 or 3, as applicable) will be displayed on the LCD screen and the alarm will sound.

1. Press Left Soft Key  **Menu**, scroll to **Tools**, and press .
2. Scroll to **Alarm Clock** and press .

3. Select the alarm you want to edit.

Alarm 1 / Alarm 2 / Alarm 3 / Quick Alarm






4. Use  to highlight the alarm time then press .
5. Set the time for alarm and press .
6. Use  to highlight **Once** (recurring setting) and press .
7. Press  to select one of the repeat options and press .
- Once / Daily / Mon - Fri / Weekends**
8. Use  to highlight **Ring** (ring type setting) and press .
9. Use  to select one of the available alarm ring types and press .
10. Press Left Soft Key  **Save**.

3. Voice Memo



Allows you to add, listen to, and erase short verbal reminders.

Recording a Voice Memo

To record a memo:

1. Press Left Soft Key  **Menu**, scroll to **Tools**, and press .
2. Scroll to **Voice Memo** and press .
3. Scroll to **<Record New>** and press . (The phone prompts you to start recording after the beep.)
4. Wait for the beep and then start speaking.
5. To finish recording, press  **Stop**.

To record a conversation during a phone call:






1. During a call, scroll to **Record Voice Memo** and press .
2. Scroll to **Stop Voice Memo** and press  to end the recording prior to the countdown completion.

NOTE

Your phone can store a total of 3 minutes of memos.







Playing a Voice Memo

To play the voice memos you have recorded:

1. Press Left Soft Key  **Menu**, scroll to **Tools**, and press .
2. Scroll to **Voice Memo** and press .
3. Scroll to the voice memo you wish to hear and press .
4. Scroll to **Play** and press .

Erasing Recorded Voice Memos






To erase recorded memos:

1. Press Left Soft Key  **Menu**, scroll to **Tools**, and press .
2. Scroll to **Voice Memo** and press .
3. Scroll to the voice memo you wish to erase and press .
4. Scroll to **Erase**, and press .
5. Scroll to **Erase**, and press  to confirm that you want to erase the voice memo.





4. Notepad

Allows you to add, read, edit, and erase notes to yourself.

To compose a note:

1. Press Left Soft Key  **Menu**, scroll to **Tools**, and press .
 2. Scroll to **Notepad** and press .
 3. Scroll to **<Add New>** and press .
 4. Type your note using the numeric keypad and press .
- (See “Text Input” on page 18.)

To read a saved note:

1. Press Left Soft Key  **Menu**, scroll to **Tools**, and press .
2. Scroll to **Notepad** and press .
3. Highlight a note and press .

To delete saved notes:

1. Press Left Soft Key  **Menu**, scroll to **Tools**, and press .



Using Phone Menus

2. Scroll to **Notepad** and press **OK**.
3. Highlight a note and press **OK**.
4. Press Right Soft Key **Erase**.
5. Scroll to **Erase** and press **OK**.

5. Ez Tip Calc

Allows you to quickly and easily calculate the amounts for a bill with the amount of the bill, the amount of the tip, and the number of people as variables.

1. Press Left Soft Key **Menu**, scroll to **Tools**, and press **OK**.
2. Scroll to **Ez Tip Calc** and press **OK**.
3. Use your keypad and navigation key to enter the bill amount and desired tip percentage. (The correct tip will be calculated instantly.)
4. If you're splitting the check, highlight Split and enter the number of people in your party. (An equal split of the bill will be calculated and displayed.)

6. Calculator

Allows you to perform simple mathematical calculations. You can enter numbers up to the second decimal place.





1. Press Left Soft Key **Menu**, scroll to **Tools**, and press **OK**.
2. Scroll to **Calculator** and press **OK**.
3. Enter data.
 - Use keypad to enter numbers.
 - Use **1/x** to enter decimals.
 - Use **±** to enter plus/minus change.
 - Press Left Soft Key to clear the entry.
 - Press Right Soft Key to enter algebraic operators.
 - Use Navigation Key to enter operators.
 - Press **OK** to complete equation.


NOTE

Calculations can be made with up to 29 characters at one time (e.g., 63+78-21 would be 8 characters).

7. World Clock

Allows you to determine the current time in another time zone or country.

1. Press Left Soft Key  **Menu**, scroll to **Tools**, and press .
2. Scroll to **World Clock** and press .
3. Press Right Soft Key  **Cities** to move the time bar across the world map and display the date/time in that location.



NOTE Press Left Soft Key  **Set DST** to display Daylight Savings Time in the selected location.




Call History

The Call History Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Access and Options

1. Press Left Soft Key  **Menu**.
2. Scroll to **Call History**, and press .
3. Select a sub-menu.

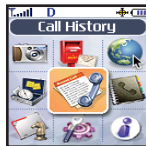

1. **Outgoing Calls**
2. **Incoming Calls**
3. **Missed Calls**
4. **Erase Calls**











Using Phone Menus

1. Outgoing Calls

Allows you to view the list of outgoing calls; up to 20 entries.






1. Press Left Soft Key  **Menu**, scroll to **Call History**, and press .
2. Scroll to **Outgoing Calls** and press .
3. Select the number using , then press  to select option(s):

Call / Save / Send message / Prepend / Erase / Next / Prev

- Select the number, then press  to place a call to the number.

2. Incoming Calls

Allows you to view the list of incoming calls; up to 20 entries.






1. Press Left Soft Key  **Menu**, scroll to **Call History**, and press .
2. Scroll to **Incoming Calls** and press .
3. Select the number using , then press  to select option(s):

Call / Save / Send message / Prepend / Erase / Next / Prev


- Select the number, then press  to place a call to the number.

3. Missed Calls

Allows you to view the list of missed calls; up to 20 entries.






1. Press Left Soft Key  **Menu**, scroll to **Call History**, and press .
2. Scroll to **Missed Calls** and press .
3. Select the number using , then press  to select option(s):


Call / Save / Send message / Prepend / Erase / Next / Prev

- Select the number, then press  to place a call to the number.

4. Erase Calls

Allows you to erase selected call list(s).



1. Press Left Soft Key  **Menu**, scroll to **Call History**, and press .
2. Scroll to **Erase Calls** and press .
3. Use  to highlight the list of calls to erase, then press .

Outgoing Calls / Incoming Calls / Missed Calls / All Calls
4. Select **Erase** or **Cancel** then press .

Contacts

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory.

Access and Options

1. Press Left Soft Key  **Menu**.
2. Scroll to **Contacts**, and press .
3. Select a sub-menu.



1. Find/Add Entry
2. Groups
3. Speed Dials
4. Voice Dials









Using Phone Menus







1. Find/Add Entry

Allows you to view your Contacts list.

1. Press Left Soft Key  **Menu**, scroll to **Contacts**, and press .
2. Scroll to **Find/Add Entry** and press .
3. Enter the name, then press .
4. Continue saving the entry as necessary.







2. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a whole group.

1. Press Left Soft Key  **Menu**, scroll to **Contacts**, and press .
2. Scroll to **Groups** and press .
3. Scroll through the group titles using . To display entries belonging to a group, highlight the group and press .
4. To display an entry within the group, highlight it and press .







3. Speed Dials

Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.

1. Press Left Soft Key  **Menu**, scroll to **Contacts**, and press .
2. Scroll to **Speed Dials** and press .
3. Use  to highlight the Speed Dial position (or enter the Speed Dial digit), then press .
4. Select the option and press .

Set Speed Dial / Next Empty / Erase Speed Dial / Erase all



4. Voice Dials

1. Press Left Soft Key  **Menu**, scroll to **Contacts**, and press .
2. Scroll to **Voice Dials** and press .
3. Scroll through voice dial entries using , also have option to **<Record New>** or **Erase All**.
4. To display an entry, highlight it and press . Select **Play / Re-record / Erase** and press .

Downloads

You have access to a dynamic variety of Premium Service content such as downloadable Games, Ringers, Screen Savers, Applications, and Other. The basic steps required to access and download Premium Service content are outlined below.

Access and Options

1. Press Left Soft Key  **Menu**.
2. Scroll to **Downloads**, and press .
3. Select a sub-menu.







1. Games
2. Ringers
3. Screen Savers
4. Applications
5. Other



<Memory Status>



Accessing the Download Menus

1. Press Left Soft Key  **Menu**, scroll to **Downloads**, and press .
2. Select the type of file you wish to download (**Games**, **Ringers**, **Screen Savers**, **Applications** or **Other**) and press .
3. Select **Get New** and press . (The browser will launch and take you to the corresponding download menu.)

Downloading an Item

Once you've selected an item you wish to download, highlight it and press  or press Left Soft Key  **Select**. You will see a summary page for the item including its title, the vendor, the download detail, the file size, and the cost. Links allow you to view the License Details page, which outlines the price, license type, and length of license for the download, and the Terms of Use page, which details the Premium Services Terms of Use and your responsibility for payment.

To download a selected item:

1. From the information page, select Purchase. (The item will download automatically. When the New Download screen appears, the item has been successfully downloaded to your phone.)

NOTE

If you have not previously purchased an item, you will be prompted to create your purchasing profile.



Using Phone Menus

2. Select an option to continue:

- Press Left Soft Key **Next** to assign the downloaded item (or to launch, in the case of a game or application).
- Press **END** to quit the browser and return to standby mode.

1. Games

1. Press Left Soft Key **Menu**, scroll to **Downloads**, and press **OK**.
2. Scroll to **Games** and press **OK**.
3. Highlight **Get New Games** and press **OK**. (The browser will launch and take you to the Games download menu.)

2. Ringers

To download an available ringer to your phone:

1. Press Left Soft Key **Menu**, scroll to **Downloads**, and press **OK**.
2. Scroll to **Ringers** and press **OK**.
3. Highlight **Get New Ringers** and press **OK**. (The browser will launch and take you to the Ringers download menu.)

3. Screen Savers

To download an available Screen Saver to your phone:

1. Press Left Soft Key **Menu**, scroll to **Downloads**, and press **OK**.
2. Scroll to **Screen Savers** and press **OK**.
3. Highlight **Get New Screen Savers** and press **OK**. (The browser will launch and take you to the Screen Savers download menu.)

4. Applications

To download an available Application to your phone:

1. Press Left Soft Key **Menu**, scroll to **Downloads**, and press **OK**.
2. Scroll to **Applications** and press **OK**.
3. Highlight **Get New Applications** and press **OK**. (The browser will launch and take you to the Applications download menu.)

5. Other

To download an available Other to your phone:

1. Press Left Soft Key **Menu**, scroll to **Downloads**, and press **OK**.
2. Scroll to **Other** and press **OK**.
3. Highlight **Get New Other** and press **OK**. (The browser will launch and take you to the Other download menu.)



<Memory Status>



Settings

The Settings menu has options to customize your phone.

Access and Options

1. Press Left Soft Key  **Menu**.
2. Scroll to **Settings**, and press .
3. Select a sub-menu.



1. Sounds
2. Display
3. Data
4. Roaming
5. Location
6. Messaging
7. Security
8. Voice Dial
9. Setup/Others









1. Sounds

Options to customize the phone's sounds.






1.1 Ringers

Allows you to assign ring tones for incoming calls.

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Sounds** and press .
3. Scroll to **Ringers** and press .
4. Select **Caller ID / No Caller ID / Roaming**.
5. Use  to select a ringer, then press .

1.2 Key Tones

Allows you to select the Key Tone type.







1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Sounds** and press .
3. Scroll to **Key Tones** and press .
4. Choose either **Short Tones** or **Long Tones** and press .



Using Phone Menus







1.3 Volume

Allows you to set various volume settings.

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Sounds** and press .
3. Scroll to **Volume** and press .
4. Select **Ringer / Earpiece / Key Beep / Application / Speaker phone / Video volume / Power On/Off**.
5. Use  to adjust the volume of the ringer, then press .

1.4 Alerts

Allows you to select the alert type for a new message.








1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Sounds** and press .
3. Scroll to **Alerts** and press .
4. Select **Voice mail Alerts / Message Alerts / Service Change / Minute Beep / Call Connect / Signal Fade**.
5. Use  to select a setting, then press .

2. Display

Options to customize the phone's display screen.

2.1 Greeting




The text greeting can be up to twelve characters and is displayed on your phone's screen in standby mode.

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Display** and press .
3. Scroll to **Greeting** and press .
4. Select **Custom** using the navigation key and press .
5. Press  to clear the existing greeting.
6. Use the numeric keypad to enter a new custom greeting.
7. Press  to **Save** and exit.

2.2 Backlight









Allows you to set the duration for illuminating the backlight. **Main LCD**, and **Keypad** are set separately.

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Display** and press .









3. Scroll to **Backlight** and press  .
4. Select **Main LCD** or **Keypad** and press  .
5. Use the navigation key to select **8 seconds, 15 seconds, Always off, Always on** for the Main LCD. **8 seconds, 15 seconds, 30 seconds, Always off** for Keypad.
6. Press  to **Save**.

NOTE Long backlight settings affect the battery's talk and standby times.








2.3 Screen Savers

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press  .
2. Scroll to **Display** and press  .
3. Scroll to **Screen Savers** and press  .
4. Select **Main LCD** or **Front LCD** and press  .
5. Press the navigation key left or right to display **Default, Download, In Camera, or Saved to Phone**.
6. Press the navigation key up or down and press  to view the image. (Once an image is displayed, you can use  to scroll through and view the other default images.)
7. Press  to assign the desired image.

2.4 Incoming Calls

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press  .
2. Scroll to **Display** and press  .
3. Scroll to **Incoming Calls** and press  .
4. Select **Caller ID, No Caller ID, Roaming** and press  .
5. Press the navigation key left or right to display **Downloads, In Camera, or Saved to Phone**.
6. Press the navigation key up or down and press  to view the image. (Once an image is displayed, you can use  to scroll through and view the other default images.)
7. Press  to assign the desired image.

2.5 LCD Contrast






1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press  .
2. Scroll to **Display** and press  .
3. Scroll to **LCD Contrast** and press  .
4. Select **Main LCD** or **Front LCD** and press  .
5. Press  left or right to adjust the screen contrast and press  .



Using Phone Menus

2.6 Menu Style

Allows you to view the Menu as an Grid or List display.






1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Display** and press .
3. Scroll to **Menu Style** and press .
4. Select **Grid** to view the main menu as an animated grid or **List** to view the main menu as a list and press .

NOTE

The instructions in this user guide refer to the default Grid menu style; if you select the List menu style, the top-level menu numbering will differ (for example, in Grid style, Pictures is 1; in List style, Pictures is 4).






2.7 Theme Skins

Allows you to choose the color of the background screen.

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Display** and press .
3. Scroll to **Theme Skins** and press .
4. Select **Blue Color**, **Metal Skin**, **Stars Skin**, or **Lime Color** and press .

2.8 Clock

Choose whether you want your phone's clock to display in analog mode, digital mode, or with time and date.





1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Display** and press .
3. Scroll to **Clock** and press .
4. Select **Normal Clock**, **Analog Clock**, **Digital Clock** or **Off** in **Main LCD** menu and press .



Select **Time&Date** or **Time Only** in **Front LCD** menu and press .

5. Use  to highlight a setting and press .

2.9 Font Size

This setting allows you to adjust the display appearance when entering text (for example, when using the notepad or when adding a Contacts entry).

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Display** and press .
3. Scroll to **Font Size** and press .






4. Select **Message, Browser, or Notepad** and press .
5. Select a desired size and press .

3. Data

Allows you to use wireless data communication services. Wireless data communication services refers to the utilization of subscriber terminals for access to the internet with personal computers or laptops at 19.2 Kbps or at a maximum of 230.4 Kbps. The connection speed depends on your carrier's network and other variables. Check that your communications information specifications match the network.

3.1 Connection

Allows you to use your phone to transmit data and faxes.






1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Data** and press .
3. Scroll to **Connection** and press .
4. Select **Off, Fax In Once, Fax In Always, Data In Once** or **Data In Always** and press .

NOTE

The Data Connection Kit allows you to connect your PC or PDA to your LG wireless phone, freeing you from having to locate a telephone outlet. You can send or receive an e-mail, a fax, or access the Internet anytime, anywhere.






3.2 Method

Allows you to select the data port.

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Data** and press .
3. Scroll to **Method** and press .
4. Select **USB, RS-232C(COM Port)** or **Closed** and press .

3.3 Speed

Allows you to select the data speed.

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Data** and press .
3. Scroll to **Speed** and press .
4. Select **19200 bps, 115200 bps** or **230400 bps** and press .








Using Phone Menus

4. Roaming

4.1 Set Mode

Choose from three different settings on your dual-band/tri-mode phone to control your roaming experience.






To set your phone's roam mode:



1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
 2. Scroll to **Roaming** and press .
 3. Scroll to **Set Mode** and press .
 4. To select an option, highlight it and press .
- **Home Only** Searches only the Network and prevents roaming.
 - **Analog Only** Searches only Analog(AMPS) Network.
 - **Analog Home Only** Searches only Analog Network.
 - **Automatic Mode** Searches for alternate wireless networks when the Service is not available.
 - **Digital Only** Searches only Digital(CDMA) Network.

5. Location

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.






NOTE Even if the Location feature is enabled, no service may use your location without your express permission.

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Location** and press . (The Location disclaimer displays.)
3. Read the disclaimer and press .
4. Select **On** or **Off** press .







When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will display.

6. Messaging





6.1 Notification




1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Messaging** and press .
3. Scroll to **Notification** and press .
4. Select **Msg & Icon** or **Icon Only** and press .

6.2 Callback Number








1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Messaging** and press .
3. Scroll to **Callback Number** and press .
4. Select **None**, **My Phone Number**, or **Other** and press .
(If you select **Other**, enter a number and press .)



6.3 Signature

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Messaging** and press .
3. Scroll to **Signature** and press .

4. Select **Custom** and press . (If you do not wish to attach a signature to your outgoing messages, select **None** and press .)
5. Enter your signature and press .

6.4 Pre-Set Message

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Messaging** and press .
3. Scroll to **Pre-Set Message** and press . (The list of pre-set messages displays.)
4. To edit or delete a pre-set message, highlight message and press .
5. Scroll to **Edit** and press , edit the selected message (see "Entering Text" on page 19), and press .

Or scroll to **Erase** and press , then select **Erase** to delete the selected message. (Select **Cancel** to cancel the deletion .)

6.5 Edit Voicemail Number

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Messaging** and press .



Using Phone Menus

3. Scroll to **Edit Voicemail Number** and press **OK**.
4. Use **Left Arrow** to select **Save / Hard Pause / 2-sec Pause / Cancel**, then press **OK**.

6.6 Push Options

1. Press Left Soft Key **Menu**, scroll to **Settings**, and press **OK**.
2. Scroll to **Messaging** and press **OK**.
3. Scroll to **Push Options** and press **OK**.
4. Use **Left Arrow** to select **Yes / No**, then press **OK**.

7. Security

All of your phone's security settings are available through the **Security** menu. You must enter your lock code to view the **Security** menu.

1. Press Left Soft Key **Menu**, scroll to **Settings**, and press **OK**.
2. Scroll to **Security** and press **OK**.
3. Enter your lock code. (The **Security** menu is displayed.)

7.1 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls.

You can modify the lock code using the Change Lock code within the Security menu.

1. Press Left Soft Key **Menu**, scroll to **Settings**, and press **OK**.
2. From the **Security** menu, scroll to **Lock Phone** and press **OK**.
3. Highlight **Unlock**, **Lock now**, or **On Power Up**, and press **OK**.

7.2 Lock Pictures

1. Press Left Soft Key **Menu**, scroll to **Settings**, and press **OK**.
2. From the **Security** menu, scroll to **Lock Pictures** and press **OK**.
3. Highlight **Unlock** or **Lock now** and press **OK**.






7.3 Change Lock

Allows you to enter a new four-digit lock code.

1. Press Left Soft Key **Menu**, scroll to **Settings**, and press **OK**.
2. From the **Security** menu, scroll to **Change Lock** and press **OK**.




3. Enter your new lock code.
4. Re-enter your new lock code.

7.4 Special






1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. From the **Security** menu, scroll to **Special #** and press .
3. Select a location for your entry and press .
4. Enter the number and press .

7.5 Erase Contacts






Allows you to erase all of your Contacts at once.

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. From the **Security** menu, scroll to **Erase Contacts** and press .
3. If you are certain you would like to erase all of your internal Contacts entries, select **Erase all #s** otherwise, select **Cancel**.

7.6 Reset Pictures

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. From the **Security** menu, scroll to **Reset Pictures** and press . (A disclaimer appears.)
3. Read the disclaimer and press .
4. Press the navigation key up and select **Reset** otherwise, select **Cancel**.
5. Press .

7.7 Reset Phone





1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. From the **Security** menu, scroll to **Reset Phone** and press . (A disclaimer appears.)
3. Read the disclaimer and press .
4. If you are certain that you would like to restore all of the factory settings, select **Reset**; otherwise, select **Cancel**.
5. Press .







Using Phone Menus

8. Voice Dial

8.1 Voice Dial









1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. From the **Voice Dial** menu, scroll to **Voice Dial** and press .
3. Select **Key press**, **Flip open** or **Disable** and press .

8.2 Train Words

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. From the **Voice Dial** menu, scroll to **Train Words** and press .
3. Select **Yes** or **No** and press .





9. Setup/Others

9.1 Shortcuts

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Setup/Others** and press .
3. Scroll to **Shortcuts** and press . (An informative window displays. Use  to scroll through to read the entire text.)
4. Read the information and press .
5. Using the navigation key, select the desired shortcut you would like to assign and press .
6. Press  to return to standby mode.

9.2 Call Setup






The Call Setup menu allows you to designate how the phone handles both incoming and outgoing calls.

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Setup/Others** and press .
3. Scroll to **Call Setup** and press .






4. Use the navigation key to select **Flip Open, Any Key** or **Send Key**.

9.3 Auto-Answer

This feature is intended for use with hands free devices, but is an independent feature of the phone and must be manually turned on/off when connected or disconnected from the device.






1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Setup/Others** and press .
3. Scroll to **Auto-Answer** and press .
4. To select an option, highlight it and press  .
 - **Off** to disable Auto-Answer.
 - **Car-Kit/HeadSet** to answer calls automatically when the phone is connected to a hands-free car kit or a headset (sold separately). Remember, your phone will answer calls in Auto-Answer mode even if you are not present.

9.4 Dialing Match

1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Setup/Others** and press .
3. Scroll to **Dialing Match** and press .
4. Select **Abbreviated Dialing**, **Contacts Match** or **Speed Dial** and press .

9.5 Language

Allows you to set the bilingual feature according to your preference. Choose between English and French.






1. Press Left Soft Key  **Menu**, scroll to **Settings**, and press .
2. Scroll to **Setup/Others** and press .
3. Scroll to **Language** and press .
4. Select **English** or **French** and press .



Using Phone Menus

9.6 TTY Mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.



1. Press Left Soft Key  **Menu** and scroll to **Settings**.
2. Scroll to **Setup/Others** and press .
3. Scroll to **TTY Mode** and press .
4. Read the disclaimer and press .
5. Select **Enabled** or **Disabled** and press .



Phone Info

The Phone Info menu provides you with specific information pertaining to your phone model.

Access and Options

1. Press Left Soft Key  **Menu**.
2. Scroll to **Phone Info**, and press .
3. Select a sub-menu.






1. **My Phone Number**
2. **S/W version**
3. **Icon Glossary**
4. **Advanced**



1. My Phone Number

Allows you to view your phone number.

1. Press Left Soft Key  **Menu**, scroll to **Phone Info**, and press .
2. Scroll to **My Phone Number** and press .

2. S/W version

Allows you to view the S/W, H/W and PRL version.

1. Press Left Soft Key  **Menu**, scroll to **Phone Info**, and press .
2. Scroll to **S/W version** and press .




3. Icon Glossary

Allows you to view all the icons and their meanings.

1. Press Left Soft Key  **Menu**, scroll to **Phone Info**, and press .
2. Scroll to **Icon Glossary** and press .

4. Advanced

Allows you to view condensed information about using the phone.

1. Press Left Soft Key  **Menu**, scroll to **Phone Info**, and press .
2. Scroll to **Advanced** and press .



TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

Health Canada, Safety Code 6, 1999.

American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For

example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines, IC Regulations (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives.) Optional for each phone manufacturer.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.



Safety

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.



Violation of the instructions may cause minor or serious damage to the product.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Use the correct adaptor for your phone when using the battery pack charger abroad.
- Only use the approved battery charger. Otherwise, this may result in serious damage to your phone.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery does not need to be fully discharged before recharging.

- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, MiniBrowser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust.
- When using the power plug, keep the minimum required (3ft) distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and



Safety

clean the power plug pin when it is dirty.

- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Do not disassemble or crush the battery. It may cause a fire.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- The power cord on this product will expose you to lead, a chemical known to the State of California to cause (cancer) birth defects or other reproductive harm. Wash hands after handling.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.)
The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ring tone to vibration so as not to disturb others.
- Do not turn your phone on or off when putting it in your ear.

FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in the standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.



The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than

those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the

studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.



6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone

users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.



10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a « compatible » phone and a « compatible » hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones

for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cdrh/phones/index.html>)

Federal Communications Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)
(<http://www.nrpb.org.uk/>)

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to Radio Frequency (RF) energy set by the Federal Communications Commission of the U.S. Government, and Industry Canada of the Canadian Government.

These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.

The SAR limit set by the FCC/IC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions



Safety

specified by the FCC/IC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC/IC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC/IC for each model.

The highest SAR value for this model phone when tested for use at the ear is 0.848 W/kg and when worn on the body, as described in this user guide, is 1.23 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC/IC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this

model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJAX5000. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability.



AC Adapter

The adapter, allows you to charge the battery while away from your home or office.



Battery

Two batteries are available. The standard battery, and the extended battery.



Vehicle Power Adapter

The vehicle power adapter allows you to operate the phone and trickle charge the phone's battery from your vehicle. It takes 5 hours to charge a completely discharged battery.



Hands-Free Car Kit (Portable)

The hands-free car kit enables you to attach the phone to the power jack in your car, providing you with hands-free operation. It can charge a completely discharged battery in 5 hours.



Headset

The headset connects to your phone allowing hands-free operation. It includes earpiece, microphone.



USB Data Cable

The USB data cable kit, enables you to connects your phone to your PC.



Holster



Warranty Information

1. WHAT THIS WARRANTY COVERS :

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for ONE (1) year beginning on the date of purchase of the product by the original end user.
- (2) The limited warranty extends only to the original end user of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original end user of the product during the warranty period as long as it is in Canada.
- (4) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (5) During the applicable warranty period, LG will repair or replace at LG's sole option, without charge to the original end user, any defective component part of the phone or accessory.

- (6) LG may use rebuilt, reconditioned, or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned or new product.

2. WHAT THIS WARRANTY DOES NOT COVER :

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by spills of food or liquids.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) If the carrier's or manufacturer's Customer Service Centre was not notified by the end user of the alleged defect or malfunction of the product, during the warranty period.

- (5) Products which have had their serial numbers removed or made illegible.
- (6) Damage resulting from use of non-LG approved accessories.
- (7) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (8) Products serviced by non-authorized persons or companies.

Notes:

- (1) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of merchantability or fitness for a particular purpose.
- (2) Shipping damage is the sole responsibility of the shipping company.

3. EXCLUSION OF LIABILITY :

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED

WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS CANADA, INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF Merchantability APPLICABLE TO THIS PRODUCT.

4. HOW TO GET WARRANTY SERVICE :

To obtain warranty service, please call the following telephone number from anywhere in Canada:

LG Electronics Canada, Inc.

Tel. 1-888-542-2623



Index

A

Account Info 30
Advanced 61
Alarm Clock 40
Alerts 50
Applications 48
Auto-Answer 59

B

Backlight 50
Battery 13
Battery Charge Level 13

C

Calculator 42
Call History 43
Call Setup 58
Call Waiting 17
Callback Number 55
Caller ID 17
Camcorder 30
Camera 29
Change Lock 56
Charging the Battery 13
Clock 52
Connection 53
Contacts 45
Contents 4

D

Data 53
Deleting 25
Dialing Match 59
Display 50
Downloads 47

E

Edit Voicemail Number 55
Erase 37
Erase Calls 45
Erase Contacts 57
EzTip Calc 42

F

FCC Part 15 Class B
Compliance 7
FCC RF Exposure
Information 9
Find/Add Entry 46
Font Size 52

G

Games 48
Greeting 50
Groups 46

I

Icon Glossary 61
Important Information 7
Important Safety
Precautions 1
Inbox 34
Incoming Calls 44, 51
Installing the Battery 13

K

Key Tones 49

L

Language 59
LCD Contrast 51
Location 54
Lock Mode 16
Lock Phone 56
Lock Pictures 56

M

Making Calls 14
Manner Mode 16
Memory Status 48
Menu Access 28
Menu Style 52
Menus Overview 11
Messaging 31, 55
Method 53

Missed Calls 44
Mute Function 16
My Camcorder 30
My Phone Number 61
My Pictures 30

N

Notepad 41
Notification 55

O

Online Albums 30
Other 48
Outbox 35
Outgoing Calls 44

P

Phone Info 60
Phone Overview 10
Picture Message 33
Pictures 29
Pre-Set Message 55
Push Options 56

R

Receiving Calls 14
Reset Phone 57
Reset Pictures 57
Ringers 48, 49

Roaming 54

S

S/W version 61

Saved 35

Scheduler 39

Screen Icons 15

Screen Savers 48, 51

Security 56

Send Camcorder 34

Send Message 32, 36

Send Picture 33

Set Mode 54

Settings 49

Setup/Others 58

Shortcuts 58

Signal Strength 14

Signature 55

Sounds 49

Special # 57

Speed 53

Speed Dialing 17, 28

Speed Dials 46

T

Technical Details 7

Text Input 18

Text Message 34

Theme Skins 52

Tools 39

Train Words 58

TTY Mode 60

V

Voice Dial 58

Voice Dials 46

Voice Memo 40

Voicemail 37

Volume 50

Volume Quick Adjustment
16

W

Web 38

Web Message 37

World Clock 43