

Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

WARNING! *Violation of the instructions may cause serious injury or death.*



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.
3. Never store your phone in temperatures less than -4°F or greater than 122°F.
4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



6. Do not use a hand-held phone while driving.
7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

Important Safety Precautions



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.



4. Do not use your phone in high explosive areas as the phone may generate sparks.



5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.



7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.

8. Do not disassemble the phone.



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
2. Do not hold or let the antenna come in contact with your body during a call.



3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.



4. Store the battery out of reach of children.
5. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



9. Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Table of Contents

Important Safety Precautions	1
------------------------------	---

Table of Contents	4
-------------------	---

Welcome	11
---------	----

Important Information	12
-----------------------	----

FCC Part 15 Class B Compliance	12
--------------------------------	----

Technical Details	13
-------------------	----

Industry Canada Compliance	13
----------------------------	----

Technical Details	13
-------------------	----

FCC RF Exposure Information	15
-----------------------------	----

Bodily Contact During Operation	15
---------------------------------	----

Vehicle-Mounted External Antenna	16
----------------------------------	----

Caution	16
---------	----

Phone Overview	17
----------------	----

Rear view	19
-----------	----

Menus Overview	20
----------------	----

Getting Started with Your Phone	23
---------------------------------	----

Installing the Battery	23
------------------------	----

Removing the Battery	23
----------------------	----

Charging the Battery	24
----------------------	----

Charging with USB	25
-------------------	----

Battery Temperature Protection	25
--------------------------------	----

How to Install Your microSD™ Card	25
-----------------------------------	----

How to Remove Your microSD™ Card	26
----------------------------------	----

Battery Charge Level	27
----------------------	----

Signal Strength	27
-----------------	----

Turning the Phone On and Off	27
------------------------------	----

Turning the Phone On	27
----------------------	----

Turning the Phone Off	27
-----------------------	----

Making Calls	27
--------------	----

Some of content in this user guide may be different from your phone depending on the software of the phone or your service provider. Features and specifications might be subject to change without prior notice.

Correcting Dialing Mistakes	28	Customizing Individual Entries	32
Redialing Calls	28	Speed Dial	32
Receiving Calls	28	Storing a Number with Pauses	33
Quick Access to Convenient Features	29	Adding Another Phone Number	34
Vibrate Mode	29	From standby mode	34
Sounds Off	29	From the Contact List Screen	34
Mute Function	29	Changing Saved Information	35
Volume Quick Adjustment	29	Adding a Pause to a Contact Entry	35
Call Waiting	29	Changing the Default Number	35
Caller ID	30	Deleting	36
Voice Commands	30	Deleting a Contact Entry	36
		Deleting a Speed Dial	36
		Speed Dialing	37
		Single Digit Speed Dials	37
		Multiple Digit Speed Dials	37
Entering and Editing Information	31	Using Phone Menus	38
Text Input	31	Contacts	38
Text Input Modes	31	1. New Contact	38
Contacts in Your Phone's Memory	32	2. Contact List	38
Storing Basics	32	3. Groups	39

Table of Contents

4. Speed Dials	40	1. Launch web	58
5. My Name Card	40		
Call history	41	Music & media	60
1. Missed Calls	41	1. TELUS Mobile Music	60
2. Received Calls	42	1.1 Music Player	61
3. Dialed Calls	43	1.2 My Music List	62
4. All Calls	43	2. TV & Radio	62
5. View Call Timers	44	3. Ringtones & Sounds	62
Messaging	45	3.1 Get New Ringtones	63
1. Voicemail	46	3.2 My Ringtones	63
2. Create Message	46	3.3 My Sounds	64
3. Inbox	51	4. Pictures & Videos	65
4. Email	53	4.1 Get New Pictures	65
5. Instant Messaging	53	4.2 Get New Videos	65
6. Sent	53	4.3 My Pictures	65
7. Drafts	55	4.4 My Videos	67
8. Web Alerts	56	4.5 Take Picture	68
9. Short Codes.	58	4.6 Record Video	69
Wireless Web	58	5. Memory Info	70
		Search	71

1. Maps & Navigation	71	5. Calculator	83
2. Search the Web	71	6. Calendar	84
3. Find Ringtones & Wallpapers	71	7. Alarm Clock	85
4. Find Videos	71	8. Stopwatch	86
Tool	72	9. World Clock	86
1. Bluetooth® Menu	72	0. Notepad	87
1.1 Add New Device	74	*. Ez Tip Calculator	87
1.1.1 For pairing with a new Bluetooth® device	74	Games & Apps	88
1.1.2 Icon Reference in Adding New Device	75	1. Games	88
2. USB Mass Storage	80	2. Apps	88
3. Voice Recorder	81	Settings	88
4. Voice Commands	81	1. Sounds Settings	89
4.1.1 Call <Name or Number>	82	1.1 Master Volume	89
4.1.2 Send Msg to <Name or Number>	82	1.2 Call Sounds	89
4.1.3 Go to <Menu>	82	1.2.1 Call Ringtone	89
4.1.4 Check <Item>	83	1.2.2 Call Vibrate	90
4.1.5 Lookup <Name>	83	1.2.3 Audio Output	90
4.1.6 Help	83	1.3 Alert Sounds	90
		1.4 Keypad Volume	91
		1.5 Service Alerts	91

Table of Contents

1.6 Power On/Off	92	4.3 Set Shortcut Keys	99
2. Display Settings	92	4.3.1 Set My Shortcuts	100
2.1 Banner	92	4.3.2 SetDirectionalKeys	100
2.1.1 Internal Banner	93	4.4 Voice Commands	100
2.1.2 External Banner	93	4.5 Language	101
2.2 Backlight	94	4.6 Location	101
2.3 Wallpaper	94	4.7 Security	102
2.4 Display Themes	95	4.7.1 Edit Codes	103
2.5 Clock Format	95	4.7.2 Restrictions	103
2.6 Time Format	96	4.7.3 Phone Lock	104
2.7 Front Display Hint	96	4.7.4 Camera Lock	105
3. Game & Apps	97	4.7.5 Lock Phone Now	105
3.1 Backlight Settings	97	4.7.6 Reset Default	105
3.2 Volume	97	4.8 System Select	106
3.3 Notifications	98	4.9 NAM Select	106
3.4 Others	98	4.0 Data/Fax	107
3.5 Plug-Ins	98	4.* Serving System	107
4. Phone Settings	99	5. Call Settings	107
4.1 Airplane Mode	99	5.1 Answer Options	107
4.2 Media Mode	99	5.2 Auto Retry	108

5.3 TTY Mode	109	Tips on Efficient Operation	119
5.4 One Touch Dial	110	Driving	119
5.5 Auto Prepend	111	Electronic Devices	119
5.6 Do Not Disturb	111	Pacemakers	119
6. Memory	112	Hearing Aids	120
6.1 Save Options	113	Other Medical Devices and Health Care Facilities	120
6.2 Phone Memory	113	Vehicles	121
6.3 Card Memory	114	Aircraft	121
6.4 USB Mass Storage	114	Blasting Areas	121
7. Phone Info	115	Potentially Explosive Atmosphere	121
7.1 My Number	115	Safety Information	122
7.2 SW/HW Version	115	Charger and Adapter Safety	123
7.3 Icon Glossary	115	Battery Information and Care	123
8. Software Update	116	Explosion, Shock, and Fire Hazards	124
Safety	118	General Notice	125
TIA Safety Information	118	Caution: Avoid potential hearing loss.	127
Exposure to Radio Frequency Signal	118	10 Driver Safety Tips	140
Antenna Care	118		
Phone Operation	119		

Table of Contents

Consumer Information on SAR	144
--------------------------------	-----

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	147
--	-----

Accessories	151
-------------	-----

Limited Warranty Statement	152
-------------------------------	-----

Index	155
-------	-----

Welcome

Thank you for choosing the advanced and compact LG8560 cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this phone offers:

- Get New Music
- Get New Videos
- microSD™ expansion slot
- Built-in 2.0 Megapixel digital camera
- Sleek and Compact Design
- Large, easy-to-read, 8-line backlit LCD with status icons
- Music & media capable for game, wallpaper and ringtone downloads
- 24-key keypad and Directional Key
- Front LCD and Directional Key for easy access to 5 phone features without opening the flip
- Long battery standby and talk time
- Easy Operation using menu-driven interface with prompts
- Paging, messaging, Voicemail, caller ID, IM and chat
- Advanced Voice Recognition
- Quick calling functions including, auto answer, auto retry, speed dial 99, and voice commands
- Flash Wallpaper with fun animations
- English and French Capability
- Bluetooth® wireless technology (for certain profiles)

Welcome

Note

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Technical Details

Industry Canada Compliance

This phone complies with Industry Canada RSS 133. This phone complies with the Class B limits for radio noise emissions as set out in the interference causing standard entitled "Digital Apparatus" (ICES-003) of Industry Canada.

Technical Details

The LG 8560 is an all digital phone that operates on both Code Division Multiple Access (CDMA) frequencies: cellular services at 800 Mhz and Personal Communication Services (PCS) at 1.9 Ghz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one

frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft/ softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The following table lists some major CDMA standards.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base station Transmission System), and MS (Mobile Station).

- * TSB -74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is

Technical Details

twice as long as IS-95. High-speed data transmission is also possible.

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000 ANSI TIA/EIA 553A	CDMA Dual Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band cdma2000 1xRTT AirInterface
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41 -C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
Service	TIA/EIA/IS-96-B TIA/EIA/IS-99 TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Async Data and Fax Short message service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
Performance	TIA/EIA/IS-97 TIA/EIA/IS-98 ANSI J-STD-018 ANSI J-STD-019 TIA/EIA/IS-125	Cellular base station Cellular mobile station PCS personal station PCS base station Speech CODEC

FCC RF Exposure Information

WARNING! *Read this information before operating the phone.*

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.6 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.6 inches (1.5 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

Technical Details

Vehicle-Mounted External Antenna

(Optional, if available.)

A minimum separation distance of 8 inches (20 cm) must be maintained between the user/ bystander and the vehicle-mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov.

Caution

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC and IC regulations.

 
Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

Phone Overview

1. **Earpiece** Lets you hear the caller and automated prompts.
2. **Flip** Use to make or answer calls. Flip open to reveal the keypad to dial a number or answer an incoming call. Close the flip to end the call.
3. **Main LCD Screen** Displays messages and indicator icons.
4. **OK Key/ Directional Key** Use the OK Key to select the function displayed at the bottom of the LCD between the Left and Right Soft Key functions. Use the Directional Key to scroll through the menu items and highlight a specific field or object by moving up, down, left or right.
5. **Left Soft Key** Use to access TELUS Mobile Music.
6. **Speakerphone Key** Use to change to speakerphone mode.
7. **3.5mm Headset Jack** Allows you to plug in an optional headset for convenient, hands-free conversations.
8. **SEND Key** Use to make and answer calls.
9. **Side Keys / Volume Keys Up/Down** Use to adjust the Master Volume in standby mode* and the Earpiece Volume during a call.
10. **Voice Commands Key** Use for quick access to Voice Commands.
11. **Vibrate Mode Key** Use to set vibrate mode from standby mode press and hold for about 3 seconds.
12. **Microphone** Allows other callers to hear you clearly when you are speaking to them.
13. **Right Soft Key** Use to access Contact List.
14. **Camera Key** Use for quick access to Camera function. Press and hold the camera key to record Video.
15. **PWR/ END Key** Use to turn the power on/off and to end a call. Also returns to standby mode.
16. **Lock/ Unlock Key** Press to unlock the Front screen




Phone Overview

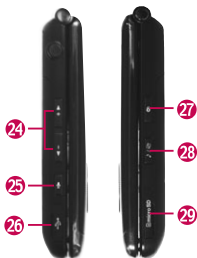

and use the Front Navigation Wheel and Center Select Keys.

17. **CLR Key** Deletes single spaces or characters with a quick press, but press and hold to delete entire words. Also backs out of menus, one level at a time.
18. **Music /Multi-tasking Key** Use to activate music with the flip closed or to activate multi-tasking key with the flip open.
19. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
20. **Lock/Unlock key** Press to lock/unlock the Main LCD screen.
21. **Camera Lens** Used to take a photo. Keep it clean for optimal photo quality.
22. **Front LCD Screen** Displays 5 menus for you to easily select without opening the flip.
23. **Front Navigation Wheel with Center Select Key** Press the center to display 5 Shortcut Menus on the Front LCD Screen.
24. **Side keys** In the standby mode (opened): Controls ringer volume.
25. **Voice Commands Key** Use for quick access to Voice Commands.
26. **Accessory Charger Port** Connects the phone to the battery charger, or other compatible accessory.
27. **Lock/ Unlock Key** Press to unlock the Front screen and use the Front Navigation Wheel and Center Select Keys.
28. **Music /Multi-tasking Key** Use to activate music with the flip closed or to activate multi-tasking key with the flip open.
29. **microSD™ Slot** Accommodates optional microSD cards up to 8GB.

 Rear view

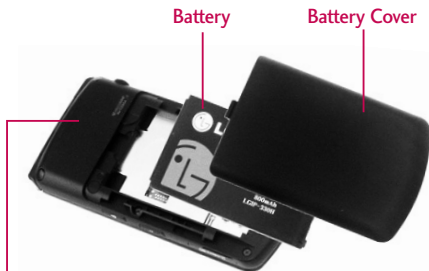

Note

Antenna equipped inside your phone.

Tip

If you hold the phone enclosing the lower edge, you may interfere with the antenna's ability to receive a clear signal which affects call quality for voice or data transfer.

Notes

- It's important to fully charge the battery before using the phone for the first time.
- Battery life and signal strength are significant factors (among others) that affect your phone's ability to send/receive calls.

Menus Overview



Contacts

1. New Contact
2. Contact List
3. Groups
4. Speed Dials
5. My Name Card



Call History

1. Missed Calls
2. Received Calls
3. Dialed Calls
4. All Calls
5. View Call Timers



Messaging

1. Voicemail
2. Create Message
3. Inbox
4. E-mail
5. Instant Messaging
6. Sent
7. Drafts
8. Web Alerts
9. Short Codes



Wireless Web

1. Launch Web



Music & Media

1. TELUS mobile
 1. Music Player
 2. My Music List
2. TV & Radio
3. Ringtones & Sounds
 1. Get New Ringtones
 2. My Ringtones
 3. My Sounds
4. Pictures & Videos
 1. Get New Pictures
 2. Get New Videos
 3. My Pictures
 4. My Videos
 5. Take Picture
 6. Record Video
5. Memory info



Search

1. Maps & Navigation
2. Search the Web
3. Find Ringtones & Wallpaper
4. Find Videos



Tools

1. Bluetooth Menu
 1. Add New Device
2. USB Mass Storage
3. Voice Recorder
4. Voice Commands
5. Calculator
6. Calendar
7. Alarm Clock
 1. Alarm 1
 2. Alarm 2
 3. Alarm 3
8. Stopwatch
9. World Clock
0. Notepad
- *. Ez Tip Calc



Games & Apps

1. Games

2. Apps



Settings

1. Sound Settings

1. Master Volume
2. Call Sounds
 1. Call Ringtone
 2. Call Vibrate
3. Audio Output
3. Alert Sounds
 1. Text Message
 2. Multimedia Message
 3. Voicemail
4. Keypad Volume
5. Service Alerts
 1. Service Change
 2. Minute Beep
 3. Call Connect
 4. Charge Complete
6. Power On/Off
 1. Power On
 2. Power Off

2. Display Settings

1. Banner

1. Internal Banner
2. External Banner

2. Backlight

1. Display
2. Keypad

3. Wallpaper

1. Internal Wallpaper
2. External Wallpaper

4. Display Themes

5. Clock Format

1. Internal Clock
2. External Clock

6. Time Format

7. Front Display Hint

3. Games & Apps

1. Backlight Settings
2. Volume
3. Notifications
 1. Voicemail
 2. Messages
4. Others
5. Plug-Ins

4. Phone Settings

1. Airplane Mode

2. Media Mode

3. Set Shortcut Keys

1. Set My Shortcuts

2. Set Directional Keys

4. Voice Commands

1. Prompts
2. Call Alert

5. Language

6. Location

7. Security

1. Edit Codes
2. Restrictions
3. Phone Lock

4. Camera Lock

5. Lock Phone Now

6. Reset Default

8. System Select

9. NAM Select

0. Data/Fax

*. Serving System

5. Call Settings

Menus Overview

1. Answer Options	Usage	7. Phone Info
2. Auto Retry	2. My Pictures	1. My Number
3. TTY Mode	3. My Videos	2. SW /HW Version
4. One Touch Dial	4. My Music	3. Icon Glossary
5. Auto Prepend	5. My Sounds	8. Software Update
6. Do Not Disturb	3. Card Memory	1. Check for Update
6. Memory	1. Memory Usage	
1. Save Options	2. My Pictures	
1. Pictures	3. My Videos	
2. Videos	4. My Music	
3. Sounds	5. My Sounds	
2. Phone Memory	4. USB Mass Storage	
1. Memory		

Menu Access

Open the flip and press  [MENU] to have access to 9 phone menus.

Some content in this user guide may differ from your phone depending on the phone software. Features and specifications are subject to change without prior notice.

Front LCD Screen

Five phone features are available from the Front LCD Screen. To access and use them, first unlock by pressing the Unlock Key on the right side of the phone, then press the center of the Front Navigation Wheel. To choose a feature, slide your finger around the outside edge of the Front Navigation Wheel until the one you want is brought to the front, then press the center of the key.

Note

Once a feature has been accessed from the Front LCD Screen, you can open the flip and continue to use the selected feature from the Main LCD Screen.

Getting Started with Your Phone

Installing the Battery

1. Insert the bottom of the battery into the opening on the back of the phone.
2. Push the battery down until it clicks into place.



3. Place the battery cover over the opening on the back of the phone, then slide it upward until it clicks into place.



Removing the Battery

1. Turn the phone off, then slide the battery cover downward to remove it.



2. Remove the battery from the battery compartment by lifting the top of the battery.



Getting Started with Your Phone

 
Charging the Battery

Your LG8560 comes with a cableless travel adapter and a USB data cable which are connected together to charge your phone. To charge your phone:

NOTICE

Please use only an approved charging accessory to charge your LG phone. Improper handling of the charging port, as well as the use of an incompatible charger, may cause damage to your phone and void the warranty.

1. Connect the wall charger and USB data cable. When connecting as shown below, the LG logo on the USB cable should face toward you.



2. Plug the end of the AC adapter into the phone's charger port and the other end into an electrical outlet.



Notice

LG symbol should face down.

3. The charge time varies depending upon the battery level.

Charging with USB

You can use your computer to charge your phone. Connect one end of the USB cable to the charging accessory port on your phone and the other end to a highpower USB port on your PC (commonly located on the front panel or backside of the computer). If you get an error syncing with front USB port, use the port on the back panel.

Note

Lower USB port is not supported, such as the USB port on your keyboard or bus-powered USB hub.

Battery Temperature Protection

If the battery gets overheated, the phone will automatically turn off. When you turn the phone back on, a message pops up alerting you that the phone was powered off for your safety.

How to Install Your microSD™ Card



Note

A memory card is sold separately.

1. Locate the microSD™ slot on the right side of the phone and gently uncover the slot opening. (microSD™ slot cover stays attached to the phone so you don't lose it).
2. Insert the microSD™ card in the correct direction until it clicks into the slot. If you insert the card in the wrong direction, it may damage your phone or your card.

Getting Started with Your Phone

How to Remove Your microSD™ Card

Gently press and release the exposed edge of the microSD™ card, then remove it from the slot and replace the cover.

Note

- Do not attempt to remove the microSD™ card while reading or writing to the card.

Note

- Users wishing to transfer or download music onto a MicroSD™ card inserted into this phone should format the MicroSD™ card on this handset before using it through (Menu -> Settings -> Memory -> Card Memory -> Options -> Format). Warning: Formatting the MicroSD™ card will erase all contents on the card. Song files downloaded or otherwise purchased from third party providers and stored on a MicroSD™ card inserted into this device may be protected or encrypted by such provider and cannot be played on this device.

Battery Charge Level

You can find the battery charge level  at the top right of the LCD screen. When the charge level becomes low, the battery sensor sounds a warning tone, blinks the battery icon, and displays a warning message. As the charge level approaches empty, the phone automatically switches off without saving.

Signal Strength

Call quality depends on the signal strength in your area. You can tell how much signal strength you have by the number of bars next to the signal strength icon:

 the more bars, the stronger the signal. If you're having problems with signal quality, move to an open area or, when inside a building, try moving near a window.

Turning the Phone On and Off

Turning the Phone On

1. Install a charged battery or connect the phone to an external power source.
2. With the flip open, press  (located above the  key on the keypad) until the LCD screen lights up.

Turning the Phone Off

With the flip open, press and hold  until the display turns off.

Making Calls

1. Make sure the phone is turned on.
If not, open the flip and press  for about three seconds.
If necessary, enter the lock code.
2. Enter the phone number.

Getting Started with Your Phone

3. Press .
4. Press  to end the call.

Note

- Your phone has a Voice Commands feature that also lets you make calls by saying a phone number, name, or location.

Correcting Dialing Mistakes

With the flip open, press  once to erase the last digit entered, or hold it down for at least two seconds to delete all the digits.

Redialing Calls

With the flip open, press  twice to redial the last number dialed.

Receiving Calls

1. When the phone rings or vibrates, you can answer the call by simply opening the flip.

Note

If the Answer Options setting is set to Any Key, you can:

- Open the flip and press the Left Soft Key  [Quiet] to mute the ringing or vibration for that call.
 - Open the flip and press the Right Soft Key  [Ignore] to end the call or send it directly to Voicemail.
2. Press  to end the call, or simply close the flip.

Screen Icons

When the phone is on, the top line of the LCD screen displays phone status icons.

To see the icon glossary, with the flip open, go to **MENU** -> **Settings** -> **Phone Info** -> **Icon Glossary** on your phone.

Quick Access to Convenient Features

Vibrate Mode

Sets the phone to vibrate instead of ring ( is displayed). To set Vibrate Mode, with the flip open, press and hold . To return to Normal Mode, press and hold .

Sounds Off

Quickly deactivate your phone's sounds when you're in a place where phone sounds would be disruptive.

From standby mode with the flip open, press and hold the lower side key for 3 seconds. To return to normal sounds mode, press and hold the upper side key.

Mute Function

The Mute Function prevents the transmission of your voice to the caller. To quickly activate Mute while in a call, press the Left Soft

Key  [Mute], then to unmute press the Left Soft Key  [Unmute].

Volume Quick Adjustment

Quickly adjust ringer and earpiece volumes by pressing the upper side volume key  on the left side of the phone to increase and lower volume side key to decrease.

Note

- The earpiece volume can only be adjusted during a call and Key Beep volume can only be adjusted through the Menu.

Call Waiting

During a call, one beep indicates another incoming call.

Press  to answer it and put the first call on hold. Press  again to return to the first call.

Quick Access to Convenient Features

Caller ID

Caller ID displays the number and/or name of the person calling when your phone rings.

Voice Commands

Voice Commands allow you to do things by verbal command (e.g., make calls, confirm Voicemail, etc.). With the flip open, press the Voice Commands Key  (on the left side of the phone) and follow the prompts.

Note

- Voice Commands can also be started with the designated key on your Bluetooth® device. Please check the manual of the Bluetooth® device for further instructions.

Entering and Editing Information

Text Input

The following key functions are available to help with text entry:



Left Soft Key: Press to change text input mode.



Shift: Press to change capitalization (initial cap, caps lock, lowercase).



Next: Press to display other matching words in the database in word mode.



Space: Press to complete a word and insert a space.



Clear: Press to delete a single space or character. Hold to delete words.



Punctuation: Press to insert punctuation.

Text Input Modes

In a text field, press the Left Soft Key  to display text modes.

Word/Abc/ABC/123/Symbols

Contacts in Your Phone's Memory

Storing Basics

1. With the flip open, enter a number (max. 48 digits), then press the Left Soft Key  [Save].
2. Use the Directional Key  to highlight **Add New Contact/ Update Existing**, then press .
3. Use the Directional Key  to highlight **Mobile 1/ Home/ Work/ Mobile 2/ Fax**, then press .
4. Enter a name (max. 32 characters), then press .
5. Press  to exit,  to call, or the Right Soft Key  [Options].

Customizing Individual Entries

1. With the flip open, press the Right Soft Key  [Contacts], then use the Directional Key  to highlight an entry.
2. Press the Left Soft Key  [Edit].
3. Use the Directional Key  to highlight the information to customize.
4. Change the entry as you want, then press  to save your changes.

Speed Dial

Allows you to set up your Speed Dials.

1. With the flip open, press the Right Soft Key  [Contacts], then use the Directional Key  to highlight an entry.
2. Press the Left Soft Key  [Edit].
3. Use the Directional Key  to highlight a phone number, then press the Right Soft Key  [Options].
4. Use the Directional Key  to highlight Set Speed Dial, then press .
5. Enter a Speed Dial digit.
 - Use the keypad, then press .
 - Use the Directional Key  to highlight the Speed Dial digit, then press .
6. Press  Yes to confirm, then press  to save.

Storing a Number with Pauses

Pauses allow you to enter additional series of numbers to access automated systems such as Voicemail or credit billing numbers. Pause types are: **Wait (W)** The phone stops dialing until you press the Left Soft Key  [Release] to advance to the next number. **Pause (P)** The phone waits two seconds before sending the next string of digits.

1. With the flip open, enter the number, then press the Right Soft Key  [Options].
2. Use the Directional Key  to highlight Pause or Wait, then press .
3. Enter additional number(s) (e.g., pin number, credit card number, etc.).

Contacts in Your Phone's Memory

4. Press the Left Soft Key  [Save].
5. Choose Add New Contact/Update Existing.
6. Choose Mobile 1/Home/Work/Mobile 2/Fax.
7. Continue entering information for the Contact entry as necessary.

Adding Another Phone Number

From standby mode

1. With the flip open, enter a phone number, then press the Left Soft Key  [Save].
2. Use the Directional Key  to highlight **Update Existing**, then press .
3. Use the Directional Key  to highlight an existing entry, then press .
4. Use the Directional Key  to highlight **Mobile 1/ Home/ Work/ Mobile 2/ Fax**, then press  to save.

From the Contact List Screen

1. With the flip open, press the Right Soft Key  [Contacts].
2. Use the Directional Key  to highlight an entry, then press the Left Soft Key  [Edit].
3. Use the Directional Key  to highlight the phone number field to add, then enter the number and press  to save.

Changing Saved Information

To edit any information you stored, access the Edit Contacts screen:

1. With the flip open, press the Right Soft Key  [Contacts].
2. Use the Directional Key  to highlight a Contact entry, then press the Left Soft Key  [Edit].
3. Use the Directional Key  to highlight the field you want to change.
4. Make the changes, then press .

Adding a Pause to a Contact Entry

1. With the flip open, press the Right Soft Key  [Contacts].

2. Use the Directional Key  to highlight a Contact entry, then press the Left Soft Key  [Edit].
3. Use the Directional Key  to highlight the number, then press the Right Soft Key  [Options].
4. Press  Wait or  Pause.
5. Enter additional number(s), then press .

Changing the Default Number

The Default Number is the phone number you entered when you created the Contact. Another number can be saved as the Default Number.

1. With the flip open, press the Right Soft Key  [Contacts].

Contacts in Your Phone's Memory

2. Use the Directional Key  to highlight an entry.
3. Press the Left Soft Key  [Edit].
4. Use the Directional Key  to highlight a phone number, then press the Right Soft Key  [Options].
5. Use the Directional Key  to highlight Set As Default, then press .
6. Press  Yes to set the new number as the default. A confirmation message is displayed.
7. Press  again to save.

Deleting

Deleting a Contact Entry

1. With the flip open, press the Right Soft Key  [Contacts].

2. Use the Directional Key  to highlight an entry.
3. Press the Right Soft Key  [Options].
4. Press  Erase.
5. Press  Yes to confirm.

Deleting a Speed Dial

1. With the flip open, press the Right Soft Key  [Contacts].
2. Use the Directional Key  to highlight a Contact entry to edit and press  [VIEW].
3. Select the phone number with the Speed Dial, then press  [EDIT].
4. Press the Right Soft Key  [Options].
5. Press  Remove Speed Dial.

6. Press  Yes to confirm.

7. Press  again to save.

Speed Dialing

Allows you to make phone calls quickly and easily to numbers stored in Contacts.

Single Digit Speed Dials

Press and hold the Speed Dial digit. Your phone recalls the phone number from your Contacts, displays it, and dials it for you.

Multiple Digit Speed Dials

When you press and hold a number key, it signals the phone to attempt a Speed Dial transmission. To dial Speed Dials with multiple digits, press the first digit(s) as necessary, then press and hold the last digit. For example, to Speed Dial 25, press , then press and hold .

Note

You can also enter the Speed Dial digit(s), then press .

Using Phone Menus

Contacts

The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory.

Shortcut

Pressing the Right Soft Key  is a hot key to Contact List.

1. New Contact

Allows you to add a new number to your Contact List.

NOTE

Using this submenu, the number is saved as a new Contact, not into an existing Contact.

1. With the flip open, press .
2. Press  **Contacts**.
3. Press  **New Contact**.

4. Enter the name and press the Directional Key  downward.
5. Use the Directional Key  to highlight the phone number type.
6. Enter the number and press .

2. Contact List

Allows you to view your Contact List.

1. With the flip open, press  **[MENU]**.
2. Press  **Contacts**.
3. Press  **Contact List**.
4. Use the Directional Key  to scroll through your Contacts alphabetically.

- Press the Right Soft Key  [Options] to select one of the following:
New Contact/
Dial 1 + Number/
Erase/ Send Message/
Call/ Erase All/
Send Name Card
- Press the Left Soft Key  [Edit] to edit.
- Press  to view the entry details.

NOTE

Use the Go To field, for quick access to an entry without scrolling. For example, to go to "Vet", enter the letter V

3. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, delete a group, or send a message to everyone in the selected group.

1. With the flip open, press  [MENU].
2. Press  **Contacts**.
3. Press  **Groups**.
4. View a Group

Use the Directional Key  to highlight a group, then press .

Add a New Group

Press the Left Soft Key  [New] to add a new group to the list.

Contacts

Options Using a Group

Press the Right Soft Key  [Options] to select one of the following:

Send Message/ Rename/
Erase/ Add/ Send Name
Card

4. Speed Dials

Allows you to view your list of Speed Dials or designate Speed Dials for numbers entered in your Contacts.

1. With the flip open, press  [MENU].
2. Press  Contacts.
3. Press  Speed Dials.
4. Use the Directional Key  to highlight the Speed Dial position, or enter the Speed Dial digit and press  [Set].

5. Use the Directional Key  to highlight the Contact then press . (For Contacts with multiple numbers, highlight the number for the Speed Dial, then press .
6. Press  Yes to confirm. A confirmation message is displayed.

5. My Name Card

Allows you to view all of your personal Contact information including name, phone numbers, and email address in one entry.

1. With the flip open, press  [MENU].
2. Press  Contacts.
3. Press  My Name Card.
4. Press  [EDIT] to enter your personal Contact information.

Call history

5. Use the Directional Key  to scroll to the information you want to enter.
6. Enter your information as necessary, then press .

Note

Press the Right Soft Key  [Options] to send your name card.

Call history

The Call history Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It's continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

1. Missed Calls

Allows you to view the list of missed calls; up to 90 entries.

1. With the flip open, press  [MENU].
2. Press  Call history.
3. Press  Missed Calls.

Call history

4. Use the Directional Key  to highlight an entry, then
 - Press  to view the entry.
 - Press  to place a call to the number.
 - Press the Right Soft Key  [Options] to select:
Save To Contacts/
Dial 1 + Number/
Erase / Lock(Unlock)/
Erase All/ View Timers
 - Press the Left Soft Key  [Message] to select.

2. Received Calls

Allows you to view the list of incoming calls; up to 90 entries.

1. With the flip open, press  [MENU].
2. Press  Call history.
3. Press  Received Calls.
4. Use the Directional Key  to highlight an entry, then
 - Press  to view the entry.
 - Press  to place a call to the number.
 - Press the Right Soft Key  [Options] to select:
Save To Contacts/
Dial 1 + Number/
Erase / Lock(Unlock)/
Erase All/ View Timers
 - Press the Left Soft Key  [Message] to select.

3. Dialed Calls

Allows you to view the list of outgoing calls; up to 90 entries.

1. With the flip open, press  [MENU].
2. Press  Call history.
3. Press  Dialed Calls.
4. Use the Directional Key  to highlight an entry, then
 - Press  to view the entry.
 - Press  to place a call to the number.
 - Press the Right Soft Key  [Options] to select: Save to Contacts/ Dial + 1 Number/ Erase/ Lock (Unlock)/ EraseAll/ View Timeres
 - Press the Left Soft Key  [Message] to select.

4. All Calls

Allows you to view the list of all calls; up to 270 entries.

1. With the flip open, press  [MENU].
2. Press  Call history.
3. Press  All Calls.
4. Use the Directional Key  to highlight an entry, then
 - Press  to view the entry.
 - Press  to place a call to the number.
 - Press the Right Soft Key  [Options] to select: Save to Contacts/ Dial + 1 Number/ Erase/ Lock (Unlock)/ EraseAll/ View Timeres
 - Press the Left Soft Key  [Message] to select.

Call history

Shortcut

To view a quick list of all your recent calls, press  from standby mode.

5. View Call Timers

Allows you to view the duration of selected calls.

1. With the flip open, press  [MENU].
2. Press  Call history.
3. Press  View Call Timers.
4. Use the Directional Key  to highlight a call list.
Last Call/ All Calls/
Received Calls/ Dialed Calls/
Roaming Calls/ Transmit
Data/ Received Data/ Total
Data/ Last Reset/ Lifetime
Calls/ Lifetime Data Counter
5. Press the Left Soft Key  [Reset] to reset the

highlighted timer.

6. Reset all the recorded timers by pressing the Right Soft Key  [Reset All].

Note

Lifetime Calls and Lifetime Data Counter cannot be reset.

Messaging

Shortcut

From standby mode, pressing the Directional Key  is a hot key to your Messaging.

Text messages, Picture messages, and the Voicemail box become available as soon as the phone is powered on.

- Check types of messages by pressing the Directional Key  [Message].
- Make a call to the callback number (in Inbox) by pressing  during a message check.

Depending on the content and size of your messages, the phone can store well over 500 messages. The information stored in the message is determined by phone model and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

New Message Alert

Your phone will alert you when you have new messages.

1. The phone displays a message on the screen.
2. The message icon () is displayed on the display screen. In the case of a high priority message, the icon will flash.

Messaging

1. Voicemail

Allows you to view the number of new voice messages recorded in the Voicemail box. Once you exceed the storage limit, old messages are overwritten. When you have a new voice message, your phone will alert you.

Checking Your Voicemail Box

1. With the flip open, press the Directional Key  [Message].
2. Press  Voicemail.
3. Options from here :
 - Press the Left Soft Key  [Clear] to delete information, and then press  [Yes].
 - Press  or  [CALL] to listen to the message(s).

2. Create Message

Allows you to send messages (Text, Picture, Video, and Voice). Each message has a destination (Address) and information (Message). These are dependent upon the type of message you want to send. You can also attach files to your messages including pictures, videos, sounds, and name cards.

2.1 TXT Message

The Basics of Sending a Text Message

1. With the flip open, press the Directional Key  [Message].
2. Press  Create Message.

3. Enter the phone number of the recipient or the email address for an email message. You can enter up to 10 addresses for a single message.
4. Press the Directional Key  downward.
5. Type your message in the text field.
6. Press  [SEND].

Customizing the Message Using Options

• Editing the To: field

1. With the To field highlighted, press the Right Soft Key  [Add].
2. Select the option(s) to customize.

From Contacts/ Recent Calls/ Groups/ Set as Cc/ Set as Bcc/ To Contacts

• Editing Text

1. With the Text field highlighted, press the Right Soft Key  [Options].
2. Select the option(s) to customize.

Add Quick Text Allows you to add Quick Text.

Save As Draft Saves the message into the Drafts folder.

Priority Level Gives priority to the message.

High/ Normal

Callback # Inserts a pre-programmed callback number with your message.

Save Quick Text Allows you to save the message as a Quick Text.

Cancel Message Cancels message editing and goes to the previous menu.

Messaging

3. Complete and then send or save the message.

Using Contacts to Send a Message

You can designate an entry saved in your Contacts as the address instead of manually entering the destination.

1. With the flip open, press the Directional Key  [Message].
2. Press  Create Message.
3. Press the Right Soft Key  [Add].
4. Use the Directional Key  to highlight From Contacts and press .
5. Use the Directional Key  to highlight the Contact entry containing the destination and press  to mark the contact.
6. Press the Left Soft Key  [Done].

NOTE

The Address feature allows multi-sending of up to 10 total addresses.

7. Complete the message as necessary.

2.2 Picture/Video Message

The Basics of Sending a Picture/Video Message

1. With the flip open, press the Directional Key  [Message].
2. Press  Create Message.
3. Enter the cellular phone number or email address of the recipient.
4. Press the Directional Key  downward.
5. Type your message in the text field.

6. Use the Directional Key to highlight **Picture/ Video**. Press the left soft key [Add] and press  Picture.
7. Use the Directional Key  to highlight **Sound**, then press the Left Soft Key  [Sounds]. Use the Directional Key  to highlight the audio file you want to send then press .
8. Use the Directional Key  to highlight **Name Card**, then press the Left Soft Key  [Contacts]. Use the Directional Key  to choose **My Name Card/ From Contacts**.
9. Use the Directional Key  to highlight **Subject** and enter the subject.

10. Press  [SEND].
A confirmation message is displayed.

• Editing the To: field

1. With the To field highlighted, press the Right Soft Key  [Add].
2. Select the option(s) to customize.

From Contacts/ Recent Calls/ Groups/ Set as Cc/ Set as Bcc/ To Contacts

• Editing Text

1. With the Text field highlighted, press the Right Soft Key  [Options].
2. Select the option(s) to customize.

Messaging

Preview Displays the Picture message as it would be seen by the recipient.

Save As Draft Saves the message into the Drafts folder.

Add Quick Text Allows you to add Quick Text.

Add Slide Insert multiple pictures into a picture message.

Priority Level Gives priority to the message.
High/ Normal

Delivery Report

Read Report

Slide Timer

Cancel Message Cancels message editing and goes to Messaging menu.

• Editing Picture/Video

1. With the Picture field highlighted, press the Right Soft Key  [Options].
2. Select the option(s) to customize.

Preview/ Save As Draft/ Add Slide/ Priority Level/ Delivery Report/ Read Report/ Slide Timer/ Remove Picture/Video/ Cancel Message

• Editing Sound

1. With the Sound field highlighted, press the Right Soft Key  [Options].
2. Select the option(s) to customize.

Preview/ Save As Draft/ Add Slide/ Priority Level/ Delivery Report/ Read Report/ Slide Timer/ Remove Sound/ Cancel Message

- **Editing Name Card**

1. With the Name Card field highlighted, press the Right Soft Key  [Options].
2. Select the option(s) to customize.
Preview/ Save As Draft/
Add Slide/ Priority Level/
Delivery Report/ Read
Report/ Slide Timer/
Remove Name Card/
Cancel Message

- **Editing a Subject**

1. With the Subject field highlighted, press the Right Soft Key  [Options].
2. Select the option(s) to customize.
Preview/ Save As Draft/ Add
Quick Text/ Add Slide/
Priority Level/ Delivery
Report/ Read Report/ Slide
Timer/ Cancel Message

3. Inbox

The phone alerts you in 3 ways when you receive a Create Message:

- By displaying a notification message on the screen.
- By sounding a sound or vibration, if set.
- By displaying . (The icon will blink when you get a high priority message.)

Viewing Your Inbox

1. With the flip open, press the Directional Key  [Message].
2. Press  **Inbox**.
3. Options from here with a message highlighted:

Messaging

- Press  [OPEN] to view the message.
- Press the Left Soft Key  [Erase] to erase the highlighted message.
- Press the Right Soft Key  [Options] to access the options.

Reply Replies to the origination address of the received message.

Reply With Copy Replies to the origination address with a copy of the original message attached.

Forward Forwards a received message to other destination address(es).

Lock(UnLock) Locks or unlocks the selected message.

Add To Contacts Stores the callback number, email address, and numbers from the address of the received message into your Contacts.

Erase Inbox Allows you to erase message list.

Message Info Allows you to check the received message information.

Message Icon Reference

	Priority High
	Locked
	New/ Unread Picture/ Video/ Voice Messages
	Open/ Read Picture/ Video/ Voice Messages
	New/Unread Browser Messages
	Opened/Read Browser Messages



New/Unread
Notification Messages



Open/Read Notification
Messages

4. Email

Allows you to send an email via Mobile Web.

1. With the flip open, press the Directional Key  [Message].
2. Press  Email.
3. A Mobile Web Browser session starts.
4. Highlight an email provider and press .
5. Login or enter your email address and password.

5. Instant Messaging

Allows you to send and receive an Instant Message at any time.

1. With the flip open, press the Directional Key  [Message].
 2. Use the Directional Key  to highlight a setting, then press .
- get New/ Messenger 2.0

6. Sent

Depending on the content and size of your messages, you can save up to 200 Sent messages. This menu lists your Sent messages. Use it to verify whether the transmission was successful or not and view message contents.

Messaging

1. With the flip open, press the Directional Key  [Message].
2. Press  Sent.
3. Options from here with a message highlighted:
 - Press  [OPEN] to view the message.
 - Press the Left Soft Key  [Erase] to erase highlighted message.
 - Press the Right Soft Key  [Options].

Forward Forwards a sent message to other destination address(es).

Send/Resend Allows you to retransmit the selected message.

Lock Locks the selected message.

Add To Contacts Stores the callback number, email address, and numbers from the address of the message into your Contacts.

Erase Sent Allows you to manage (erase or lock) message list.

Message Info Allows you to check the sent message information.

Message Icon Reference

	Text/Picture/Video/Voice Messages sent
	Message delivered
	Text/Picture/Video/Voice Messages failed
	Multiple Messages sent
	Multiple Messages delivered
	Multiple Messages failed
	Multiple Messages incomplete
	Priority High
	Locked

7. Drafts

Displays draft messages.

1. With the flip open, press the Directional Key  [Message].
2. Press  **Drafts**.
3. Options from here with a message highlighted:
 - Press  [EDIT] to continue editing the message.
 - Press the Left Soft Key  [Erase].
 - Press the Right Soft Key  [Options].

Messaging

Lock Erase the selected message from the Drafts.

Add To Contacts Stores the callback number, email address, and numbers from the address included in the message into your Contacts.

Erase Drafts Erase all draft messages.

Message Icon Reference



Draft Txt



Draft Picture/
Video/Voice

8. Web Alerts

1. With the flip open, press the Left Soft Key [Message].
2. Press Web Alerts.

Messaging Settings

Allows you to configure settings for your messages.

1. With the flip open, press the Directional Key [Message].
2. Press the Left Soft Key [Settings].
3. Use the Directional Key to highlight one of the settings and press to select it.

Message Settings Sub-Menu Descriptions

1. Entry Mode
(Word/ Abc/ ABC/ 123)

Allows you to select the default input mode including Word, Abc, ABC, 123.

2. Auto Save (On/ Off/ Prompt)

With this feature on, messages are automatically saved in the Sent folder when transmitted.

3. Auto Erase (On/ Off)

With this feature on, read messages are automatically deleted when you exceed the storage limit.

4. Auto Receive (On/ Off)

When set to On, new messages will automatically display on your screen when they are received.

5. Quick Text

Allows you to display, edit, and add text phrases. These text strings allow you to reduce manual text input into messages.

6. Callback # (On/ Off)

Allows you to automatically send a designated callback number when you send a message.

7. Signature (None/ Custom)

Allows you make/edit a signature to automatically send with your messages.

Erasing Messages

Allows you to erase messages stored in your Inbox, Sent, or Drafts folders. You can also erase all messages at the same time.

1. With the flip open, press the Directional Key  [Message].

Wireless Web

2. Press the Right Soft Key  [Options] then select one of the following:

**Erase Inbox/ Erase Sent/
Erase Drafts/ Erase All**

3. Press  to erase the messages selected.
4. Press  to confirm the deletion.

A confirmation message is displayed.

9. Short Codes.

Using shortcode, the user can get useful information such as weather, news and jokes via SMS.

1. With the flip open, press the Directional Key  [Message].
2. Press  **Short Codes.**

Wireless Web

The Wireless Web feature allows you to view Internet content, especially designed for your mobile phone. Access and selections within this feature are dependent upon your service provider. For specific information on Wireless Web access through your phone, contact your service provider.

Access and Options

Allows you to initiate an Wireless Web session.

1. With the flip open, press  [MENU].
2. Press  **Wireless Web.**
2. Press  **Launch Web.**

After a few seconds, you see the Home Page.

Overview

The Wireless Web allows the user to use a variety of Internet services. Using the Wireless Web on the phone allows you to:

- Browse and search the World Wide Web via web pages especially designed for wireless phone customers.
- Set bookmarks to directly access your favorite sites.
- Retrieve information, such as stock quotes and flight schedules from the Internet.

Quality of Browser

Browsing the web via the phone is not like using your home computer. Site providers have selected only the critical aspects of their site to present to wireless phone users and have removed most graphics.

Ending the Wireless Web Session

You can end a Wireless Web session by pressing  .

Navigating through the Browser

While using the Wireless Web, you will find the following content:

- Numbered options (some options may not be numbered);
- Links embedded in content;
- Text or numeric input;
- Simple text.

You can act on the options or the links by using the Soft Keys.

Music & media

Music & media

Music & media allows you to do more than just talk on your phone. Music & media is a technology and service that allows you to download and use applications on your phone. With Music & media, it's quick and easy to personalize your phone to your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of software available, you can be assured that you can find something useful, practical, or entertaining.

From the Music & media menu, press the Right Soft Key  [Info] to see your memory status, activity log, help text, and Music & media status. Use the Help option to view information from buying new applications to expired applications.

1. TELUS Mobile Music

TELUS Mobile Music lets you browse, preview and download music directly to your phone so you can listen to your favourite tunes while on the go. Select the TELUS Mobile Music shortcut key from the home screen to access mobile music and to choose from hundreds of thousands of songs.

For more information on TELUS mobile music, please visit:

<http://www.telusmobility.com/music>

Note

You must first format the memory card for use with TELUS mobile music.

Caution

 
Formatting the memory card will erase all content currently stored on the card.

Access and Options

1. With the flip open, press **OK** [MENU].
2. Press **5 jkl** Music & media.
3. Press **1 o.p** TELUS Mobile Music.
4. Select a submenu by pressing the number that corresponds with the submenu.

1.1 Music Player

1. With the flip open, press **OK** [MENU].
2. Press **5 jkl** Music & media.
3. Press **1 o.p** TELUS Mobile Music.
4. Press **1 o.p** Music Player.

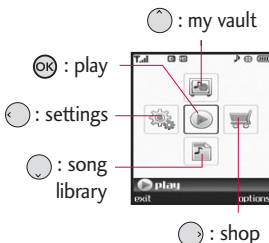

- Press Left Soft Key **exit** to exit the menu.
- Press Right Soft Key **options**.

Music & media

1.2 My Music List

Displays the list of music files you downloaded.

1. With the flip open, press **OK** [MENU].
2. Press **5 jkl** **Music & media**.
3. Press **1 a.d** **TELUS Mobile Music**.
4. Press **2 abc** **My Music List**.

2. TV & Radio

TELUS Mobile Radio, powered by XM Satellite Radio, lets you listen to a wide range of 100 percent commercial-free music, plus the best in comedy, talk and entertainment.

For more information on TELUS mobile radio, please visit: www.telusmobility.com/mobileradio

1. With the flip open, press **OK** [MENU].
2. Press **5 jkl** **Music & media**.
3. Press **2 abc** **TV & Radio**.
4. Scroll down to TELUS mobile radio.
5. Press **OK** to launch.

Note

You can use your optional Bluetooth headset for phone calls and to listen to your songs downloaded through TELUS mobile music and TELUS mobile radio.

3. Ringtones & Sounds

Personalize your phone with ringtones. A wide variety of choices are available, such as current hits, pop, hip-hop, and more.

Access and Options

1. With the flip open, press  [MENU].
2. Press  Music & media.
3. Press  Ringtones & Sounds.
4. Select a submenu by pressing the number that corresponds with the submenu.

3.1 Get New Ringtones

Allows you to connect to Music & media and download various ringtones.

1. With the flip open, press  [MENU].
2. Press  Music & media.
3. Press  Ringtones & Sounds.
4. Press  Get New Ringtones.

3.2 My Ringtones

Allows you to select a desired ringtone, or download a new ringtone.

1. With the flip open, press  [MENU].
 2. Press  Music & media.
 3. Press  Ringtones & Sounds.
 4. Press  My Ringtones.
 5. Use the Directional Key  to highlight a ringtone and press the Left Soft Key  [Set As]. You can press  [PLAY] to preview the ringtone.
-  Ringtone
 -  Contact ID: Highlight and select the Contact to be identified by the ringtone you selected.

Music & media

- **[3^{def}] Alert Sounds:** Press the corresponding number key to set the ringtone for one of the following:

All Messages/ TXT Message/
Multimedia Message/
Voicemail

3.3 My Sounds

Allows you to record a new sound or select a desired sound.

How to record a new sound

1. With the flip open, press **[MENU]**.
2. Press **[5 jkl] Music & media.**
3. Press **[3^{def}] Ringtones & Sounds.**
4. Press **[3^{def}] My Sounds.**
5. Press **[1^{o.o}] Record New** and press **[OK]** to start recording, then press again to stop.

How to select a sound

1. With the flip open, press **[OK]** **[MENU]**.
2. Press **[5 jkl] Music & media.**
3. Press **[3^{def}] Ringtones & Sounds.**
4. Press **[3^{def}] My Sounds.**
5. Use the Directional Key  to scroll and highlight a preloaded sound.

Options with a sound file highlighted:

- Press the Left Soft Key  **[Erase].**
- Press **[OK] [PLAY].**

4. Pictures & Videos

View, take, and trade digital pictures and videos right from your wireless phone.

Access and Options

1. With the flip open, press [MENU].
2. Press **5 jkl** Music & media.
3. Press **4 ghi** Pictures & Videos.
4. Select a submenu.

4.1 Get New Pictures

Allows you to connect to Music & media and download a variety of images for My Pictures.

1. With the flip open, press **OK** [MENU].
2. Press **5 jkl** Music & media.
3. Press **4 ghi** Pictures & Videos.
4. Press **1 * 0** Get New Pictures.

4.2 Get New Videos

Allows you to connect to Music & media and download a variety of videos for My Videos.

1. With the flip open, press **OK** [MENU].
2. Press **5 jkl** Music & media.
3. Press **4 ghi** Pictures & Videos.
4. Press **2 abc** Get New Videos.

4.3 My Pictures

Allows you to view and manage photos stored in the phone.

1. With the flip open, press **OK** [MENU].
2. Press **5 jkl** Music & media.
3. Press **4 ghi** Pictures & Videos.
4. Press **3 def** My Pictures.
5. Highlight a picture with the Directional Key  and press the Right Soft Key  [Options] for options.

Music & media

6. Select one of the following options:

Send Picture Message

Set As Internal Wallpaper /
External Wallpaper /
Picture ID

Take Picture Turns on the camera function.

Manage My Pics Allows you to mark multiple pictures to be erased, moved, copied or locked/ unlocked.

Rotate/Zoom/Crop
Allows you to rotate, zoom or crop the selected image.

Rename Allows you to change the file name.

Print Print via Bluetooth/
Print Preferences

File Info Name/ Date/ Time/
Resolution/ Size/Type

Send via Bluetooth Allows you to send image to other device via Bluetooth.

Note

The option 'Send via Bluetooth' is not displayed when you select pictures protected by DRM (Digital Rights Management).

Editing a Picture

Access My Pictures, then use the Directional Key  to highlight a picture. Press  [VIEW] then press the Right Soft Key  [Options] to access additional Rotate/Zoom/Crop options.

4.4 My Videos

Allows you to view videos stored in the phone.

1. With the flip open, press  [MENU].
2. Press  **Music & media.**
3. Press  **Pictures & Videos.**
4. Press  **My Videos.**
5. Highlight a video with the Directional Key  and press the Right Soft Key  [Options] for options.

Send Sends a video message.

Record Video Turns on the video camera function.

Manage My Videos Allows you to mark multiple videos to be erased, moved, copied or locked/ unlocked.

Set As Wallpaper Displays the selected video file as the background for your phone.

Rename Renames the selected video.

File Info Name/ Date/ Time/ Duration/ Size/ Type

Send via Bluetooth Allows you to send video file to other device via Bluetooth

6. Press  to play.

Note

File storage varies according to the size of each file as well as memory allocation of other applications.

Music & media

-  : Adjust the volume.
 - Left Soft Key  : Mute/Unmute
 -  : Pause/ Play
 - Up Directional Key  : Shows the widescreen.
 - Down Directional Key  : Stop
 - Right Directional Key  : FF
 - Left Directional Key  : Rewind
7. Press the Right Soft Key  [Options] to select one of the following options:
- Set As Wallpaper/ File Info**

4.5 Take Picture

Lets you to take digital pictures.

1. With the flip open, press  [MENU].
2. Press  **Music & media.**
3. Press  **Pictures & Videos.**
4. Press  **Take Picture.**
5. Set the brightness by pressing the Directional Key up and down , zoom by pressing the Directional Key left and right , and press the Right Soft Key  [Options] to change other settings.

Note

Zoom is not available if the Resolution is set to 1600x1200.

- Select the option(s) to customize.

Resolution 1600x1200/
1280X960/ 640X480/
320X240

Self Timer Off/ 3 Seconds/
5 Seconds/ 10 Seconds

White Balance Auto/ Sunny/
Cloudy/ Fluorescent/ Glow

Shutter Sound Shutter/
Say "Cheese"/ Ready! 1 2 3/

Color Effects Normal/
Negative/ Aqua/ Sepia/
Black&White

Night Mode On/ Off

Save Option Internal/
External

PHOTOMETRY Average/
Spot/ Spot Multiple

PREVIEW Actual view/
Full screen

CAPTURE Camera/ Video

6. Take a picture by pressing  [TAKE].

7. Press the Left Soft Key  [Save]. The picture is stored in My Pictures.

4.6 Record Video

Lets you record a video with sound.

1. With the flip open, press  [MENU].
2. Press  Music & media.
3. Press  Pictures & Videos.
4. Press  Record Video.
5. Set the brightness by pressing the Directional Key up and down , zoom by pressing the Directional Key left and right , and press the Right Soft Key  [Options] to change other settings.

Music & media

Recording Time For Send/
For Save

RESOLUTION 320X240/
176X144

Save Option Internal/
External

Color Effects Normal/
Negative/ Aqua/ Sepia/
Black&White

White Balance Auto/ Sunny/
Cloudy/ Fluorescent/ Glow

Capture Camera/ Video

6. Press  [REC] to begin recording, and again to stop.
7. Press the Left Soft Key  [Save]. The recorded video is stored in My Videos.
 - Press  [SEND] to send or Right Soft Key  [Erase] to erase.

5. Memory Info

Shows the memory information saved in your phone.

1. With the flip open, press  [MENU].
2. Press  Music & media.
3. Press  Memory Info.
5. Scroll to My Ringtones/ My Sounds/ My Pictures/ My Videos/ Game & Apps/ Messaging/ Etc Music then press .

Search

Allows you to search and purchase from a variety of content provided by your service provider.

1. Maps & Navigation

You can get services using TELUS navigator. If available, GPS services are downloadable. Additional fees may apply.

1. With the flip open, press  [MENU].
2. Press  Search.
3. Press  Maps & Navigation.

2. Search the Web

Allows you to search various topics through the Web.

1. With the flip open, press  [MENU].

2. Press  Search.

3. Press  Search the Web.

3. Find Ringtones & Wallpapers

Allows you to search and download various Ringtones and Wallpapers via the Web.

1. With the flip open, press  [MENU].
2. Press  Search.
3. Press  Find Ringtones & Wallpapers.

4. Find Videos

Allows you to search and download a variety of video clips via the Web.

1. With the flip open, press  [MENU].
2. Press  Search.
3. Press  Find Videos.

Music & media

Tool

Your phone tools include Voice Commands, Calculator, Ez Tip Calculator, Calendar, Alarm Clock, Stopwatch, World Clock, Notepad, and USB Mass Storage.

Access and Options

1. With the flip open, press  [MENU].
2. Press  Tools.
3. Select a sub-menu.
 1. Bluetooth Menu
 2. USB Mass Storage
 3. Voice Recorder
 4. Voice Commands
 5. Calculator
 6. Calendar
 7. Alarm Clock
 8. Stopwatch
 9. World Clock
 0. Notepad
 - *. Ez Tip Calc

1. Bluetooth® Menu

The LG8560 is compatible with devices that support the Bluetooth® headset, hands-free, dial-up networking, object push for Contacts including name cards and Calendar events, Advanced Audio Distribution (Stereo), File Transfer Profile(s), PhoneBook Access Profile, Basic Printing Profile and Basic Imaging Profile.*

You may create and store 20 pairings within the LG8560 and connect to one device.

The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

Bluetooth® QD ID B014550

Note

Read the user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.

Note

Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology.

Phone does not support ALL Bluetooth® OBEX Profiles.

TIPS

- **HEADSET:** Supports use of a compatible bluetooth® headset for mono voice.
- **HANDSFREE:** Supports Bluetooth® headsets, and may also support other installed compatible Bluetooth® devices with speakerphone capabilities, such as car kits or a conference room device.
- **DIAL UP NETWORKING:** Allows the phone to be used as a data modem with a compatible Bluetooth® device, such as a laptop or PDA.

TIPS

- **STEREO:** Supports delivery of stereo audio to a compatible Bluetooth® device.
- **PHONEBOOK ACCESS:** Allows sharing of your name card, phonebook entries, and call history with a compatible Bluetooth® device.
- **BASIC PRINTING:** Allows printing of JPEG files to a Bluetooth® enabled printer.
- **OBJECT PUSH:** Allows sending and receiving of contact name cards, calendar events, and JPEG pictures between devices.
- **FILE TRANSFER:** Allows a compatible Bluetooth® device to view a list of files and transfer non-protected files in either direction.
- **BASIC IMAGING:** Allows sending and receiving of non-protected images for storing and printing.

1.1 Add New Device

Pairing is the process that allows the handset to locate, establish, and register 1-to-1 connection with the target device.

1.1.1 For pairing with a new Bluetooth® device

1. Follow the Bluetooth® accessory instructions to set the device to pairing mode.
2. With the flip open, press  [MENU].
3. Press  Tools.
4. Press  Bluetooth Menu.
5. Press  Add New Device.

Set the desired device to pairing.

6. If Bluetooth® power is set to off, you will be prompted to turn power on. Highlight Yes and press .
7. The device will appear in Add New Device menu once it has been located. Highlight the device and press .
8. The handset will prompt you for the passcode. Consult the Bluetooth® accessory instructions for the appropriate passcode (typically “0000” - 4 zeroes). Enter the passcode and press .
9. When pairing with the Computer, PC or PDA is successful, highlight either Always Ask or Always Connect and press  to connect with the device.

10. Once connected, you will see the device listed in the Bluetooth® Menu and Bluetooth® indicator will change to the  (single connected icon) will show up on your screen when connected to the Bluetooth® device. You can also check out the connection with a blue icon  on the list.

1.1.2 Icon Reference in Adding New Device

When the Bluetooth® wireless connection is built and paired devices are found, the following icons are displayed.

- **Icon References When a Bluetooth® Wireless Connection is Searched** (neither connected nor paired).

	When an audio device is found by your LG8560 device
	When a PC is found by your LG8560 device
	When a PDA is found by your LG8560 device
	When another phone device is found by your LG8560 device
	When a printer is found by your LG8560 device
	When other undefined devices are found by your LG8560 device
	When a carkit device is found by your LG8560 device

Tool

• Icon References When Successfully Connected

	When an only mono headset is connected with your LG8560 device
	When an only stereo headset is connected with your LG8560 device
	When stereo headsets and mono headsets are all connected with your LG8560 device

Turn On

Allows you to set the phone's Bluetooth® power On/Off.

1. With the flip open, press  [MENU].
2. Press  Tools.
3. Press  Bluetooth Menu.
4. Press  Add New Device.
5. Press the Left Soft Key  [Turn On].

Note

By default, your device's Bluetooth® functionality is turned off.

My Device Info

Allows you to edit the name of the Bluetooth® device when Add New Device menu is highlighted.

1. With the flip open, press  [MENU].
2. Press  Tools.
3. Press  Bluetooth Menu.
4. Press the Right Soft Key  [Options].
5. Press  My Device Info.
6. Press  to clear the existing name.
7. Use the Alphanumeric Keypad to enter a new custom name.
8. Press  to save and exit.

Note

Bluetooth® wireless connection is dependent on your Bluetooth® stereo device. Even though you want to connect with a headset that supports both stereo and handsfree profiles, you may only be able to connect with one.

Discovery Mode

Allows you to set whether your device is able to be searched by other Bluetooth devices in the area.

1. With the flip open, press  [MENU].
2. Press  Tools.
3. Press  Bluetooth Menu.
4. Press the Right Soft Key  [Options].
5. Press  Discovery Mode.

6. Use the Directional Key  to highlight a setting, then press .

On / Off

Note

If you choose On for Discovery Mode, your device is able to be searched by other in-range Bluetooth® devices.

Supported Profiles

Allows you to see profiles that your LG8560 phone can support.

1. With the flip open, press  [MENU].
2. Press  Tools.
3. Press  Bluetooth Menu.
4. Press the Right Soft Key  [Options].
5. Press  Supported Profiles.

Tool

Dial-up Networking

In order to start a dial-up networking session:

1. Start the Bluetooth® service application or program present on the Client device.
2. Find your phone's name from the list of available devices.
3. From the list of available services or menu, select dial-up networking.
4. Enter required information such as ID, password and phone number in the "Connect To" dialog box.
5. Press the "Dial" button to initiate the call.
Once the connection is established, you can start using the Internet.

File Transfer

In order to start a file transfer session:

1. Start the Bluetooth® service application or program present on the Client device.
2. Find your phone's name from the list of available devices.
3. From the list of available services or menu, select file-transfer service.
4. A separate window appears with the directory structure of your phone. You are now able to transfer files to and from the Client device.

Phonebook Access

Please refer to your handsfree device or car audio system manual for further instructions.

Auto Pair Handsfree

Allows Bluetooth pairing with an audio device to be tried automatically with a default PIN code- 0000.

1. With the flip open, press  [MENU].
2. Press  Tools.
3. Press  Bluetooth Menu.
4. Press the Right Soft Key  [Options].
5. Press  Auto Pair Handsfree.

The following options are available in the paired device. For headset devices:

1. **Remove Device:** You can remove the device from the pairing list.
2. **Rename Device:** You can rename the paired device.

3. **Service Discovery:** Allows you to search for the services that the selected device supports.
4. **Device Info:** Shows the device information.

Note

- In the pairing list, you can disconnect the connected device with the blue arrow signal by pressing  or by pressing the Left Soft Key  [Turn Off]. Reversely, you can turn it on by pressing the Left Soft Key  [Turn On] again.
- When an audio device is connected, then you select another device and press , both devices are connected.

- In case your search fails to find any pairing device, select found device instead.
- Print Picture allows you to print to devices that support BPP profiles. When connected with Phone or PC supporting OPP, the following menus are possible: Send name card: Allows my contact data to send other device up to 1000 Contacts. Get name card: Allows you to pull name card of other device. Exchange name card: Allows you to exchange my name card with other device. Send Calendar Event: Allows you to send up to 300 Calendar events to other device. Send Picture: Allows you to send my phone image to other device.
*Browse/Get file: Allows you to get files of other device. (Only when other device can support FTP)

2. USB Mass Storage

This menu allows you to transfer content from your phone to your Windows® XP or Windows Vista™ PC (or vice versa) when your phone is connected to your Windows® XP or Windows Vista™ PC with a compatible USB cable. Mac OS™ operating system is also supported. You can access this menu on Internal Memory and microSD™ card.

1. With the flip open, press  [MENU].
2. Press  Tools.
4. Press  USB Mass Storage.

3. Voice Recorder

Allows you to record voice through MIC.

1. With the flip open, press  [MENU].
2. Press  Tools.
4. Press  Voice Recorder.

4. Voice Commands

This feature provides you with the following options equipped with AVR (Advanced Voice Recognition) technology. Each option has its detailed information on the phone and you can check it out by pressing the Left Soft Key  [Info].

1. With the flip open, press  [MENU].
2. Press  Tools.
4. Press  Voice Commands.

Access and Options

1. With the flip open, press the Voice Command Key  (on the left side of the phone).

The Voice Commands feature has several settings which allow you to customize how you want to use it. Access Voice Commands, then press the Right Soft Key  [Settings].

Digit Dial Readout On/ Off

Choice List

Automatic/ Always Off

Sensitivity Control the sensitivity as **Reject More/ Automatic/ Reject Less**.

Train Voice If the phone often asks you to repeat voice command, train the phone to recognize your voice patterns.
Digit Dial/ Responses

Prompts Mode/ Audio

Playback/ Timeout

For Mode, set **Prompts/ Readout + Alerts/ Readout/ Tones Only**. For Audio Playback, set **Speakerphone** or **Earpiece**. For Timeout, set **5 seconds** or **10 seconds**.

Call Alert

Ring Only/ Caller ID + Ring/ Name Repeat

4.1.1 Call <Name or Number>

Say "Call" and then call someone simply by saying the name or phone number. Please speak clearly and say the name or number exactly as it is entered in your Contact List. When you have more than one contact number, you can state the name and number type of the contact (for example, 'Call John Work').

4.1.2 Send Msg to <Name or Number>

Say "Send Message" and the command will prompt you for the type of message. After choosing the message type, you will be prompted for the contact name, number or group. It will automatically start a message. If you say a full-sentence command, such as 'Send Message to Bob', it will automatically start a text message without asking for the message type. When using 'Send Message' command, speak clearly and say the name, number or group exactly as it is entered in your Contact List.

4.1.3 Go to <Menu>

The 'Go to' command allows you to access a menu within the phone (for example, 'Go to Calendar').

If no menu option is stated, a list of options will be provided.

4.1.4 Check <Item>

The 'Check' command allows you to check out a wide range of items such as Phone Status, Voicemail, Messages, Missed Calls, Time, Signal Strength, Battery and Volume.

4.1.5 Lookup <Name>

You can look up names in your Contacts (for example, 'Contacts John') as well as manage your Contact List including creating, erasing or modifying.

Read out/ Create New/ Erase/ Modify

4.1.6 Help

Provides a general guideline to using Voice Commands.

5. Calculator

Allows you to perform simple mathematical calculations. You can enter numbers up to eight digits and the sixth decimal place. Calculations can be made with up to 4 lines at one time.

1. With the flip open, press  [MENU].
2. Press  Tools.
3. Press  Calculator.
4. Enter the numbers to get the value you want. To cancel a number, press the Left Soft Key  [Clear].
5. Use the Right Soft Key  [Options] to add parenthesis or power among numbers for calculation.

- Use the Directional Key  to enter operation between numbers and press  [=] for the result.

Note

To insert a decimal, press .

To insert 1, press .

6. Calendar

Allows you to keep your agenda convenient and easy to access. Simply store your appointments and your phone will alert you with a reminder you set.

Shortcut

Pressing the Directional Key  downward from standby mode is a hot key to Calendar by default.

- With the flip open, press  [MENU].
- Press  Tools.
- Press  Calendar.
- Use the Directional Key  to highlight the scheduled day.
 - Left  : Previous Day
 - Right  : Next Day
 - Up  : Previous Week
 - Down  : Next Week
- Press the Left Soft Key  [Add].
- Enter Subject, then scroll down to set remaining settings.
- Highlight a Calendar setting field, then press the Left Soft Key  [Set]. For each Calendar event you can set:

- Start Time • End Time
- Repeat • Until
- Alerts • Tones
- Vibrate

9. Use the Directional Key  to highlight the setting you want, then press .

10. Press  [SAVE] when Calendar information is complete.

7. Alarm Clock

Allows you to set up to three alarms. At the alarm time, Alarm 1 (or 2 or 3) will be displayed on the LCD screen and the alarm will sound.

1. With the flip open, press  [MENU].
2. Press  Tools.
3. Press  Alarm Clock.

4. Use the Directional Key  to highlight an Alarm (1, 2, or 3), then press .

5. Enter the alarm information including:

- Turn On/Off • Set Time
- Repeat • Ringtone

6. Use the Directional Key  to highlight the information you want to set, then press the Left Soft Key  [Set] to view your setting choices.

7. Press  [SAVE] after setting all of the Alarm fields as necessary.

When the alarm goes off, first press the Lock/Unlock Key  to unlock the screen. Use the Navigation Wheel  to choose Snooze or Dismiss, then press the Center Select Key .

Note

You can also open the flip and choose Snooze or Dismiss.

8. Stopwatch

Allows you to use your phone as a typical stopwatch. Pressing  will start and stop Stopwatch time. While measuring time, press the Left Soft Key  to lap. After time has stopped, press the Right Soft Key  [Reset].

1. With the flip open, press  [MENU].
2. Press  Tools.
3. Press  Stopwatch.

9. World Clock

Allows you to determine the current time in another time zone or country by navigating with the Directional Key to the right or left.

1. With the flip open, press  [MENU].
2. Press  Tools.
3. Press  World Clock.
4. Press the Right Soft Key  [Cities] for a list of available cities.
5. Select a city from the list, then press . The display shows the position of the city on a global map.
6. Press  again to zoom in on the city and view its date and time information.

Note

With the Left Soft Key  [Set DST], set to daylight saving time.

0. Notepad

Allows you to add, read, edit, and erase notes to yourself.

1. With the flip open, press  [MENU].
2. Press  Tools.
3. Press  Notepad.
4. Press the Left Soft Key  [Add] to write a new note.
5. Press the Left Soft Key  to change the entry mode.
6. After filling in the note, press  to save it.

*. Ez Tip Calculator

Allows you to quickly and easily calculate bill amounts using the bill total, tip % and number of people as variables.

1. With the flip open, press  [MENU].
2. Press  Tools.
4. Press  Ez Tip Calculator.
5. Enter the variable fields (Total bill, Tip (%), Split) and the corresponding calculation fields (tip and total for each person) appear automatically.
6. Press the Left Soft Key  [Reset] for another calculation.

Games & Apps

Allows you to download games and applications from the Music & media server. Choose the software you want from the list displayed on the screen.

Access and Options

1. With the flip open, press  [MENU].
2. Press  Games.
3. Select a sub-menu.
 1. Games
 2. Apps

Settings

The Settings Menu has options to customize your phone.

Access and Options

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Select a sub-menu.
 1. Sound Settings
 2. Display Settings
 3. Games & Apps
 4. Phone Settings
 5. Call Settings
 6. Memory
 7. Phone Info
 8. Software Update

1. Sounds Settings

Provides options to customize the phone's sounds.

2. Press  **Settings**.
3. Press  **Sound Settings**.

1.1 Master Volume

Allows you to set volume settings.

1. With the flip open, press  [MENU].
2. Press  **Settings**.
3. Press  **Sound Settings**.
4. Press  **Master Volume**.
5. Adjust the volume with the Directional Key  then press  to save the setting.

1.2 Call Sounds

Allows you to set how the phone alerts you for types of incoming calls.

1. With the flip open, press  [MENU].
2. Press  **Settings**.
3. Press  **Sound Settings**.
4. Press  **Call Sounds**.

1.2.1 Call Ringtone

1. With the flip open, press  [MENU].
2. Press  **Settings**.
3. Press  **Sound Settings**.
4. Press  **Call Sounds**.
5. Press  **Call Ringtone**.
6. Use the Directional Key  to highlight a ringtone then press  to save the sound.

Games & Apps/ Setting

Tip

To hear a ringtone before you set it, press the Left Soft Key [Play].

1.2.2 Call Vibrate

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Sound Settings.
4. Press  Call Sounds.
5. Press  Call Vibrate.
6. Use the Directional Key  to highlight a setting, then press .

On/ Off

1.2.3 Audio Output

1. With the flip open, press  [MENU].

2. Press  Settings.
3. Press  Sound Settings.
4. Press  Call Sounds.
5. Press  Audio Output.
6. Use the Directional Key  to highlight a setting, then press .

Speaker/ Headset Only/
Headset and Vibrate

1.3 Alert Sounds

Allows you to select the alert type for a Create Message.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Sound Settings.
4. Press  Alert Sounds.
5. Select Text message/
Multimedia Message/
Voicemail

6. The Alert Sounds menu has these options:
Tone/ Vibrate/ Reminder

1.4 Keypad Volume

Allows you to set the keypad volume.

1. With the flip open, press  [MENU].
2. Press  **Settings.**
3. Press  **Sound Settings.**
4. Press  **Keypad Volume.**
5. Adjust the volume with the Directional Key  then press  to save the setting.

1.5 Service Alerts

Allows you to set any of the four Alert options to either On or Off.

1. With the flip open, press  [MENU].
2. Press  **Settings.**
3. Press  **Sound Settings.**
4. Press  **Service Alerts.**
5. Select an alert option.

Service Change Alerts you to the status of cellular service.

Minute Beep Alerts you 10 seconds before the end of every minute during a call.

Call Connect Alerts you when the call is connected.

Charge Complete Alerts you when the battery is completely charged.

Setting

6. Use the Directional Key  to highlight a setting, then press .

On/ Off

1.6 Power On/Off

Allows you to set the phone to sound a tone when the phone is powered on/off.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Sound Settings.
4. Press  Power On/Off.
5. Select Power On/ Power Off.
6. Use the Directional Key  to highlight a setting, then press .

On/ Off

2. Display Settings

Provides options to customize the phone's display screen.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Display Settings.

2.1 Banner

Allows you to enter a string of up to 23 characters which displays on the LCD screen.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Banner.

2.1.1 Internal Banner

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Banner.
5. Press  Internal Banner.
6. Enter your own banner text.

Note

Press the Directional Key  to change the color of the text. Use the  to select the color you want.

Black/ White/ Yellow/ Orange/
Red/ Brown/ Blue/ Green/ Light
Blue

7. Press .

2.1.2 External Banner

ERI Text is shown on the sub banner.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Banner.
5. Press  External Banner.
6. Enter your own banner text.

Note

Press the Directional Key  to change the color of the text. Use the  to select the color you want.

Black/ White/ Yellow/ Orange/
Red/ Brown/ Blue/ Green/ Light
Blue

7. Press .

Setting

2.2 Backlight

Allows you to set the duration for illuminating the backlight. Display and Keypad are set separately.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Backlight.
5. Highlight a Backlight submenu and press .

Display/ Keypad

1. Display

- Internal Backlight:
7 Seconds/ 15 Seconds/
30 Seconds/
Always On/ Always Off
- External Backlight:
7 Seconds/ 15 Seconds/
30 Seconds

2. Keypad

7 Seconds/ 15 Seconds/
30 Seconds/
Always On/ Always Off

2.3 Wallpaper

Allows you to choose the kind of background to be displayed on the phone's LCD in standby mode.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Wallpaper.
5. Highlight a Wallpaper submenu and press .

Internal Wallpaper/
External Wallpaper

1. Internal Wallpaper

My Pictures/ My Videos/
Fun Animations

2. External Wallpaper

My Pictures/
Fun Animations

6. Select from available screens then press .

2.4 Display Themes

Allows you to choose the color of the background screen.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Display Themes.
5. Use the Directional Key  to highlight a setting, then press .

Dark Chocolate/ Orbis

Note

Press the Left Soft Key  [View] to preview the selected display theme.

2.5 Clock Format

Allows you to choose the kind of clock to be displayed on the front and main LCD screens.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Clock Format.
5. Highlight a Clock Format submenu and press .

Internal Clock/
External Clock

Setting

1. Internal Clock

Normal/ Analog/ Large
Analog/ Digital 1 (2 or 3)/
Dual (Set City in World
Clock)/ Off

2. External Clock

Digital 1 (or 2) / Off

6. Use the Directional Key  to highlight a setting, then press .

Note

Press the Left Soft Key  [View] to preview the selected clock format.

2.6 Time Format

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Time Format.

12 Hours/ 24 Hours

2.7 Front Display Hint

Turning on this setting displays the Back action on the front display.

1. With the flip open, press  [MENU].
 2. Press  Settings.
 3. Press  Display Settings.
 4. Press  Front Display Hint.
 5. Use the Directional Key  to highlight a setting, then press .
- On/ Off

3. Game & Apps

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Games & Apps.

3.1 Backlight Settings

Allows you to set the duration for illuminating the backlight.

1. With the flip open, press  [MENU].
 2. Press  Settings.
 3. Press  Games & Apps.
 4. Press  Backlight Settings.
 5. Use the Directional Key  to highlight a setting, then press .
- 7 Seconds/ 15 Seconds/
30 Seconds/ Always On/
Always Off

3.2 Volume

Allows you to set volume settings.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Games & Apps.
4. Press  Volume.
5. Use the Directional Key  to highlight a setting, then press .

High/ Medium High/
Medium/ Medium Low/ Low/
Off

Setting

3.3 Notifications

Allows you to set notification settings.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Games & Apps.
4. Press  Notifications.
5. Use the Directional Key  to highlight a setting, then press .

Voicemail/ Messages

3.4 Others

Displays or deletes the list of files created by downloaded JAVA contents.

1. With the flip open, press  [MENU].
2. Press  Settings.

3. Press  Games & Apps.

4. Press  Others.

5. Use the Directional Key  to highlight a setting, then press .

3.5 Plug-Ins

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Games & Apps.
4. Press  Plug-Ins.
5. Use the Directional Key  to highlight a setting, then press .

4. Phone Settings

The Phone Settings Menu allows you to designate specific settings to customize how you use your phone.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Phone Settings.

4.1 Airplane Mode

Turning on Airplane Mode will disable all wireless communications.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Phone Settings.
4. Press  Airplane Mode.

5. Use the Directional Key  to highlight a setting, then press .

On/ Off

4.2 Media Mode

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Phone Settings.
4. Press  Media Mode.
5. Use the Directional Key  to highlight a setting, then press .

On/ Off

4.3 Set Shortcut Keys

To access these shortcuts open the flip, then press the Directional Key in the direction you designate.

Setting

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Phone Settings.
4. Press  Set Shortcut Keys.

4.3.1 Set My Shortcuts

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Phone Settings.
4. Press  Set Shortcut Keys.
5. Press  Set My Shortcuts.
6. Use the Directional Key  to highlight a setting, then press .
Shortcut1/ Shortcut2/
Shortcut3/ Shortcut4

4.3.2 SetDirectionalKeys

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Phone Settings.
4. Press  Set Shortcut Keys.
5. Press  SetDirectionalKeys.
6. Use the Directional Key  to highlight a setting, then press .
Up Directional/
Left Directional/
Right Directional

4.4 Voice Commands

Using the Internal Keypad

1. With the flip open, press  [MENU].
2. Press  Settings.

3. Press **4 ghi** **Phone Settings**.
4. Press **4 ghi** **Voice Commands**.

Prompts Mode/ Audio Playback/ Timeout

For Mode, set **Prompts/ Readout + Alerts/ Readout/ Tones Only**. For Audio Playback, set **Speakerphone/ Earpiece**. For Timeout, set **5 seconds** or **10 seconds**.

Call Alert Ring Only/ Caller ID + Ring/ Name Repeat

4.5 Language

Allows you to set the bilingual (English or French) feature according to your preference.

1. With the flip open, press **OK** [MENU].
2. Press **9 myz** **Settings**.
3. Press **4 ghi** **Phone Settings**.
4. Press **5 jkl** **Language**.

5. Use the Directional Key  to highlight a setting, then press **OK**.

English/ Français

4.6 Location

Allows you to set GPS (Global Positioning System: Satellite assisted location information system) mode.

1. With the flip open, press **OK** [MENU].
2. Press **9 myz** **Settings**.
3. Press **4 ghi** **Phone Settings**.
4. Press **6 mno** **Location**.
5. Use the Directional Key  to highlight a setting, then press **OK**.

Location On/ E911 Only

Setting

Note

- GPS satellite signals are not always received by the phone, especially under bad atmospheric and environmental conditions, indoors, etc.
- When a Location Setting Restriction is activated in the Security Menu, the lock code is required when you enter location menu. The lock code is the same 4 digits you use as your device lock code; initially the last 4 digits of your phone number.
- When in Airplane Mode, services supporting Location On functionality (such as Chaperone) will be suspended.

4.7 Security

The Security menu allows you to secure the phone electronically.

1. With the flip open, press  [MENU].
2. Press  **Settings**.
3. Press  **Phone Settings**.
4. Press  **Security**.
5. Enter the four-digit lock code.
The lock code is the last 4 digits of your mobile phone number if it is set.

The lock code is the last 4 digits of your MEID if your mobile phone number is not set.

4.7.1 Edit Codes

Allows you to enter a new four-digit lock code.

1. With the flip open, press  [MENU].
2. Press  **Settings**.
3. Press  **Phone Settings**.
4. Press  **Security**.
5. Enter the four-digit lock code.
6. Press  **Edit Codes**.
7. Select **Phone Only** or **Calls & Services**.
8. Enter your new four-digit lock code.
9. For confirmation, it will ask you to enter the new lock code again.

4.7.2 Restrictions

Allows you to set separate restrictions for Location Setting, Calls, Messages, and Dial Up Modem.

1. With the flip open, press  [MENU].
2. Press  **Settings**.
3. Press  **Phone Settings**.
4. Press  **Security**.
5. Enter the four-digit lock code.
6. Press  **Restrictions**.
7. Enter the four-digit PIN code.
8. Select a Restrictions menu then press .
- Location Setting/ Calls/ Messages/ Dial-up Modem**
9. Use the Directional Key  to highlight the restriction then press .

Setting

Location Setting Lock
Setting/ Unlock Setting

Calls: Incoming Calls Set
Allow All / Contacts Only /
Block All

Calls: Outgoing Calls Set
Allow All / Contacts Only /
Block All

**Messages: Incoming
Messages Set**
Allow All / Block All

**Messages: Outgoing
Messages Set**
Allow All / Block All

Dial-up Modem
Allow All/ Block All

4.7.3 Phone Lock

Keeps your phone from unauthorized use. Once the phone is locked, it's in restricted mode until the lock code is entered. You can still receive phone calls and make emergency calls. You can modify the lock code using Edit Codes submenu within the Security menu.

1. With the flip open, press  [MENU].
2. Press  **Settings**.
3. Press  **Phone Settings**.
4. Press  **Security**.
5. Enter the four-digit lock code.
6. Press  **Phone Lock**.
7. Highlight an option then press .

Unlocked The phone is never locked (Lock mode can still be used).

On Power Up The phone is locked when it is turned on.

4.7.4 Camera Lock

1. With the flip open, press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **4** **Phone Settings**.
4. Press **7** **Security**.
5. Enter the four-digit lock code.
6. Press **4** **Camera Lock**.
7. Highlight an option then press **OK**.

Unlocked/ Locked

4.7.5 Lock Phone Now

1. With the flip open, press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **4** **Phone Settings**.
4. Press **7** **Security**.
5. Enter the four-digit lock code.
6. Press **5** **Lock Phone Now**.

4.7.6 Reset Default

Allows you to reset your phone to the factory default settings.

1. With the flip open, press **OK** [MENU].
2. Press **9** **Settings**.
3. Press **4** **Phone Settings**.
4. Press **7** **Security**.
5. Enter the four-digit lock code.
6. Press **6** **Reset Default**.

Setting

7. Press  after reading the warning message.
8. Select **Revert** by pressing .

A confirmation message is displayed briefly before the phone resets itself.

4.8 System Select

Allows you to set up the phone management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. With the flip open, press  [MENU].
2. Press  **Settings**.
3. Press  **Phone Settings**.
4. Press  **System Select**.

5. Use the Directional Key  to highlight a setting, then press .

Home Only/ Automatic

4.9 NAM Select

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. With the flip open, press  [MENU].
2. Press  **Settings**.
3. Press  **Phone Settings**.
4. Press  **NAM Select**.
5. Use the Directional Key  to highlight a setting, then press .

NAM1/ NAM2

4.0 Data/Fax

Allows you to use your phone to transmit data and faxes.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Phone Settings.
4. Press  Data/Fax.
5. Use the Directional Key  to highlight a setting, then press .

Off/ Fax In Once/ Fax In Always/
Data In Once/
Data In Always

4.* Serving System

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Phone Settings.
4. Press  Serving System.

5. Call Settings

The Call Settings Menu allows you to designate how the phone handles both incoming and outgoing calls.

5.1 Answer Options

Allows you to determine how the phone will answer an incoming call.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Call Settings.
4. Press  Answer Options.
5. Use the Directional Key  to mark the setting(s) you want to use, then press .

Flip Up/ Any Key/ Auto with Handsfree

Setting

6. Press the Left Soft Key  [Done] when you have marked the setting(s) you want.

Note

Auto with Handsfree is available only when any external device is connected to your phone.

When the following settings are set, Ringer is not activated.

- When **Sounds Off / Alarm Only** is set or individual Contact Ringer ID is set to **No Ring/ Silence**.
- When Ringer is set to **Sounds Off** with side key or "Quiet".

5.2 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. With the flip open, press  [MENU].
 2. Press  **Settings**.
 3. Press  **Call Settings**.
 4. Press  **Auto Retry**.
 5. Use the Directional Key  to highlight a setting, then press .
- Off/ Every 10 Seconds/
Every 30 Seconds/ Every 60
Seconds**

5.3 TTY Mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Call Settings.
4. Press  TTY Mode.

An explanation message is displayed.

5. Press  to continue.

6. Use the Directional Key  to highlight a setting, then press .

TTY Full/ TTY + Talk/ TTY + Hear/ TTY Off

TTY Full: Users who cannot talk or hear send and receive a text message through TTY equipment.

TTY + Talk: Users who can talk but cannot hear receive a text message and send voice through TTY equipment.

TTY + Hear: Users who can hear but cannot talk send a text message and receive voice through TTY equipment.

TTY Off: Users send and receive without TTY equipment.

Setting

Connecting TTY Equipment and a Terminal

1. Connect a TTY cable to TTY connection on the terminal (TTY connection location is the same as a headset jack).
2. Enter the phone menu and set the desired TTY mode.
3. After setting a TTY mode, check the LCD screen of the phone for the TTY icon.
4. Connect the TTY equipment to the power source and turn it on.
5. Make a phone connection to the desired number.
6. When connection is made, use the TTY equipment to type in and send a text message or send voice.
- 7 The voice or text message from the receiver end displays on the TTY equipment display.

5.4 One Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

1. With the flip open, press  [MENU].
 2. Press  **Settings.**
 3. Press  **Call Settings.**
 4. Press  **One Touch Dial.**
 5. Use the Directional Key  to highlight a setting, then press .
- On/ Off

5.5 Auto Prepend

This option will automatically prepend 1 when dialing 10 digit numbers. However 1 will not prepend when dialing numbers that has less than 10 digits.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Call Settings.
4. Press  Auto Prepend.
5. Use the Directional Key  to highlight a setting, then press .

On/ Off

5.6 Do Not Disturb

Allows you to ignore incoming calls during the data transfer.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Call Settings.
4. Press  Do Not Disturb.
5. Use the Directional Key  to highlight a setting, then press .

On/ Off

Note

The Data Connection Kit allows you to connect your PC or PDA to your LG wireless phone, freeing you from having to locate a telephone outlet. You can send or receive an e-mail, a fax, or access the Internet anytime, anywhere (within coverage. See service provider for details).

Setting

6. Memory

Allows you to check your LG8560 internal phone memory as well as the microSD external memory.

The LG8560 can access the following file types stored on the removable microSD card.

My Pictures: png, jpg, bmp, gif

My Sounds: mid, qcp (used for MMS, cannot be set as ringtones)

My Videos: 3gp, 3g2

My Music: wma, mp3, unprotected aac & aac+

	Store on LG8560	Store on microSD Card	Transfer Phone to PC via Card	Transfer PC to Phone via Card
Get New Music/ WMA Songs	◆	◆	◆	◆
Ringtones	◆			
Sound	◆	◆	◆	◆
Get New Video Clips	◆			
Downloaded Picture/ Video	◆			
Picture/ Video (user-generated or received via MMS)	◆	◆	◆	◆

6.1 Save Options

Allows you to select which memory (phone or memory card) to use to save your files.

1. With the flip open, press [MENU].
2. Press **9** WXYZ **Settings**.
3. Press **6** MNO **Call Settings**.
4. Press **1** Q, Z, 0 **Save Options**.
5. Use the Directional Key to select file type, then press .
Pictures/ Videos/ Sounds
6. Use the Directional Key to select place to save, then press .
**Phone Memory/
Card Memory**

6.2 Phone Memory

Shows the memory information saved in your phone.

1. With the flip open, press **OK** [MENU].
2. Press **9** WXYZ **Settings**.
3. Press **6** MNO **Call Settings**.
4. Press **2** ABC **Phone Memory**.
5. Use the Directional Key  to select file storage type in the LG8560, then press **OK** to view the memory used.

**Memory Usage /
My Pictures/ My Videos /
My Music / My Sounds**

Note

You can reset my music for My Music option. This removes all songs and playlists purchased or subscribed by Telus Mobile Music. Playlists created on the phone will not be affected.

Setting

6.3 Card Memory

Shows the memory information saved in the card.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Call Settings.
4. Press  Card Memory.
5. Use the Directional Key  to select file storage type on the memory card, then press .
Memory Usage /
My Pictures/ My Videos /
My Music / My Sounds

Note

The option Card Memory Usage shows the total used memory and memory space remaining. Do not insert or remove the microSD while playing, deleting or downloading Pictures/Videos/ Music/Sounds.

6.4 USB Mass Storage

This menu is accessible when your phone is connected to your PC with a data cable. It allows you to transfer contents from your phone to your PC or vice versa.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Call Settings.
4. Press  USB Mass Storage.
5. Use the Directional Key  to select file storage type on the memory card, then press .
Automatic/ Manual

7. Phone Info

Allows you to view the information specific to your phone and software.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Phone Info.

7.1 My Number

Allows you to view your phone number.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Phone Info.
4. Press  My Number.

7.2 SW/HW Version

Allows you to view the versions of various applications such as SW,PRL, Browser,AVR, MMS, Bluetooth,HW and MEID.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Phone Info.
4. Press  SW/HW Version.

7.3 Icon Glossary

Allows you to view all the icons and their meanings.

1. With the flip open, press  [MENU].
2. Press  Settings.
3. Press  Phone Info.
4. Press  Icon Glossary.

8. Software Update

This feature gives your phone the ability to upgrade to the latest software and keeps your phone operating with the latest features TELUS Store for the upgrade. You can either be notified automatically that there is an updated version of software available for your phone, or you can manually check to see if there are any updates available for you to download.

Automatic Update

Your phone will receive a notification that there is an updated version of software available to be downloaded. You can press  when notified that a download is available or it can happen automatically. Once the download is complete you may, depending on the nature of the update, have three options available: Accept the update, Defer the update, or Reject the update.

Note

During the update you cannot make or receive phone calls, including 911 calls, or text messages.

Manual Update

1. With the flip open, press  [MENU].
2. Press  **Settings.**
3. Press  **Software Update.**

The two options shown will be **Status** and **Check New**.

Press  **Status** to see the status of a download or update and see information on the last successful update. If updates have not yet been performed, status information will be unavailable.

Press  **Check New** to check if any new software updates are available to download. If a newer software version is available, it will automatically begin downloading after 30 seconds or you can begin the download immediately by pressing . To stop the software download press the Right Soft Key  [Quit].

Safety

TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

- ANSI C95.1 (1992) *
- NCRP Report 86 (1986)

- ICNIRP (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using

your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry
Manufacturers Association

Safety

recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

Other Medical Devices and Health Care Facilities

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from the external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use

equipment that could be sensitive to the external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF

when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles

Safety

(such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

Caution! *Violation of the instructions may cause minor or serious damage to the product.*

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.

- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.

- Improper battery use may result in a fire, explosion or other hazard.

Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.
- Use the correct adapter for your phone when using the battery pack charger abroad.

Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.

Safety

- The battery doesn't need to be empty before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/ standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.

- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.

Safety

- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ringtones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Caution: Avoid potential hearing loss.

Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise induced hearing loss. This includes the use of headphones (including headsets, earbuds and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential

hearing problems varies.

The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-

Safety

cancelling headphones to block out background environmental noise.

- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive,
Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: www.audiology.org

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD USA 20892-2320

Voice: (301) 496-7243

Email: nidcdinfo@nih.gov

Internet:

<http://www.nidcd.nih.gov/health/hearing>

National Institute for Occupational Safety and Health

Hubert H. Humphrey Bldg.
200 Independence Ave., SW
Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4674)

Internet:

<http://www.cdc.gov/niosh/topics/noise/default.html>



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce

Safety

heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to

emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data does not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless

phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF

exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of

cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or

salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof

of a cancer promoting effect, if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of

wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much Radio Frequency energy exposure I can get by using my

wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb

Safety

energy from the wireless phone and is set well below levels known to have effects.

Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the

participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured

in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations

by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data does not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of

wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their

recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device

manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor

the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cellphones/>)

Federal Communications Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization

Safety

(WHO) International EMF
Project
(<http://www.who.int/emf>)

National Radiological Protection
Board (UK)
(<http://www.nrp.org.uk/>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the

speed dial function without taking your attention off the road.

2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the

Safety

traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.

7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend

conversations which have the potential to divert your attention from the road.

8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in

progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.

10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other

special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

Consumer Information on SAR

(Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and

engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC

with the phone transmitting at its highest certified power level in all tested frequency bands.

Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required

by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Safety

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 1.28 W/kg and when worn on the body, as described in this user's manual, is 0.635 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID.

To find information that pertains

to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard

incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing

 
Safety

device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5

is considered acceptable for normal use. A sum of 6 is considered for best use.

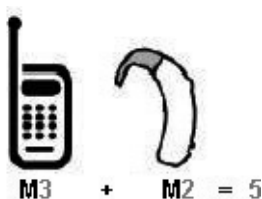

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that’s acceptable for normal operation.

The M mark is intended to be

synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

When you're talking over the cell phone, it's recommended you'd turn the BT (Bluetooth) mode off for HAC.

**For information about hearing aids and digital wireless phones
FCC Hearing Aid Compatibility and Volume Control**

<http://www.fcc.gov/cgb/dro/hearing.html>

Gallaudet University, RERC

<http://tap.gallaudet.edu/DigWireless.KS/DigWireless.htm>

HCAA (Hearing Loss Association of America)

<http://www.hearingloss.org/learn/cellphonetech.asp>

The Hearing Aid Compatibility FCC Order

http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf

Accessories

There are a variety of accessories available for your phone and contact to your service provider.

Charger



Batteries



USB Cable



Limited Warranty Statement

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for ONE (1) year beginning on the date of purchase of the product by the original end user.
- (2) The limited warranty extends only to the original end user of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original end user of the product during the warranty period as long as it is in Canada.
- (4) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (5) During the applicable warranty period, LG will repair or replace at LG's sole option, without charge to the original end user, any defective component part of the phone or accessory.
- (6) LG may, use rebuilt, reconditioned, or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned or new product.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by spills of food or liquids.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) If the carrier's or manufacturer's Customer Service Centre was not notified by the end user of the alleged defect or malfunction of the product, during the warranty period.
- (5) Products which have had their serial numbers removed or made illegible.
- (6) Damage resulting from use of non-LG approved accessories.
- (7) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (8) Products serviced by non-authorized persons or companies.

Limited Warranty Statement

Notes:

- (1) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of merchantability or fitness for a particular purpose.
- (2) Shipping damage is the sole responsibility of the shipping company.

3. EXCLUSION OF LIABILITY:

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS CANADA, INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT,

INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following telephone number from anywhere in Canada:
LG Electronics Canada, Inc.
Tel. 1-888-542-2623

A

Accessories 151
Add New Device 74
Adding Another Phone Number 34
Airplane Mode 99
Alarm Clock 85
Alert Sounds 90
All Calls 43
Answer Options 107
Auto Pair Handsfree 79
Auto Prepend 111
Auto Retry 108

B

Backlight 94
Backlight Settings 97
Banner 92
Battery Charge Level 27
Battery Temperature Protection 25
Bluetooth® Menu 72

C

Calculator 83
Calendar 84
Call <Name or Number> 82
Call history 41
Call Ringtone 89
Call Settings 107
Call Sounds 89
Call Vibrate 90
Call Waiting 29
Caller ID 30
Camera Lock 105
Card Memory 114
Changing the Default Number 35
Charging the Battery 24
Charging with USB 25
Check <Item> 83
Clock Format 95
Contact List 38
Contacts 38
Contacts in Your Phone's Memory 32

Create Message 46
Customizing Individual Entries 32

D

Data/Fax 107
Deleting 36
Dialed Call 43
Discovery Mode 77
Display Settings 92
Display Themes 95
Do Not Disturb 111
Drafts 55

E

Edit Codes 103
Email 53
Entering and Editing Information 31
Erasing Messages 57
Ez Tip Calculator 87

F

FCC Part 15 Class B

Index

Compliance 12
FCC RF Exposure
Information 15
Find Ringtones &
Wallpapers 71
Find Videos 71
For pairing with a new
Bluetooth® device 74
Front Display Hint 96

G

Game & Apps 97
Games & Apps 88
Get New Pictures 65
Get New Ringtones 63
Get New Videos 65
Getting Started with
Your Phone 23, 24
Go to <Menu> 82
Groups 39

H

Help 83
How to Install Your
microSD™ Card 25

How to Remove Your
microSD™ Card 26

I

Icon Glossary 115
Icon Reference in
Adding New Device 75
Important Information
12
Important Safety
Precautions 1
Inbox 51
Index 155
Industry Canada
Compliance 13
Installing the Battery
23
Instant Messaging 53

K

Keypad Volume 91

L

Language 101
Limited Warranty

Statement 152
Location 101
Lock Phone Now 105
Lookup <Name> 83

M

Making Calls 27
Maps & Navigation 71
Master Volume 89
Media Mode 99
Memory 112
Memory Info 70
Menus Overview 20
Messaging 45
Messaging Settings 56
Missed Call 41
Music & media 60
Music Player 61
Mute Function 29
My Device Info 76
My Music List 62
My Name Card 40
My Number 115
My Pictures 65
My Ringtones 63

My Sounds 64

My Videos 67

N

NAM Select 106

New Contact 38

Notepad 87

Notifications 98

O

One Touch Dial 110

Others 98

P

Personal Banner 93

Phone Info 115

Phone Lock 104

Phone Memory 113

Phone Overview 17

Phone Settings 99

Picture Message 48

Pictures & Videos 65

Plug-Ins 98

Power On/Off 92

Q

Quick Access to
Convenient Features
29

R

Rear view 19

Received Call 42

Receiving Calls 28

Record Video 69

Redialing Calls 28

Removing the Battery
23

Reset Default 105

Restrictions 103

Ringtones & Sounds
62

S

Safety 118

Save Options 113

Screen Icons 28

Search 71

Search the Web 71

Security 102

Send Msg to <Name or
Number> 82

Sent 53

Service Alerts 91

Serving System 107

Set Shortcut Keys 99

SetDirectionalKeys
100

SetMyShortcuts 100

Settings 88

Signal Strength 27

Software Update 116

Sounds Off 29

Sounds Settings 89

Speed Dial 32

Speed Dialing 37

Speed Dials 40

Stopwatch 86

Storing a Number with
Pauses 33

Storing Basics 32

Supported Profiles 77

SW/HW Version 115

System Select 106

Index

T

Table of Contents 4

Take Picture 68

Technical Details 13

TELUS Mobile Music
60

Text Input 31

Time Format 96

Tool 72

TTY Mode 109

Turn On 76

Turning the Phone On
and Off 27

TV & Radio 62

TXT Message 46

U

USB Mass Storage 80,
114

Using Phone Menus
38

V

Vibrate Mode 29

View Call Timers 44

Voice Commands 30,
81, 100

Voice Recorder 81

Voicemail 46

Volume 97

Volume Quick
Adjustment 29

W

Wallpaper 94

Web Alerts 56

Welcome 11

Wireless Web 58

World Clock 86