



KT520 User Guide

LG ELECTRONICS INC.

**KT520**

ENGLISH

**C E 0168**

[www.lgmobile.com](http://www.lgmobile.com)

MMBB0282002 (1.0)

Bluetooth QD ID B013855



Some of the features described in this manual may differ from those available on your phone depending on its software and on your service provider.

## KT520 User Guide

Congratulations on your purchase of the advanced and compact KT520 phone by LG, designed to operate with the latest digital mobile communication technology.



#### **Disposal of your old appliance**

- 1** When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2** All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3** The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4** For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

SETUP	01
YOUR STANDBY SCREEN	02
THE BASICS	03
GET CREATIVE	04
GET ORGANISED	05
THE WEB	06
SETTINGS	07
ACCESSORIES	08
GUIDELINES	09

# Contents

## SETUP

Getting to know your phone .....	8
Installing the SIM and battery .....	10
Memory card .....	12
Menu map .....	13

## YOUR STANDBY SCREEN

Optical sensor .....	14
The main menu .....	15
The status bar .....	16

## THE BASICS

Calls .....	17
Making a call .....	17
Making a call from your contacts .....	17
Answering or rejecting a call .....	17
Speed dialling.....	18

Viewing your call logs .....	18
Using call divert.....	19
Using call barring.....	19
Changing the common settings .....	20
Searching for a contact.....	20
Adding a new contact .....	21
Contact options .....	21
Adding a contact to a group .....	22
Adding a picture to a contact.....	22
Copying your contacts to your SIM.....	23
Deleting all of your contacts .....	23
Viewing information .....	23
<b>Messaging.....</b>	<b>24</b>
Messaging .....	24
Sending a message .....	24
Entering text.....	24
Setting up your email .....	25
Retrieving your email .....	26
Changing your email settings .....	27

Message folders.....	27	<b>Video camera.....</b>	<b>35</b>
Managing your messages .....	28	Shooting a quick video.....	35
Using templates.....	28	After you've shot your video .....	35
Changing your text message settings....	29	Using the toolbar .....	35
Changing your multimedia message		Watching your saved videos .....	36
settings.....	30	Adjusting the volume when viewing	
Changing your other settings.....	30	a video.....	36
<b>GET CREATIVE</b>		<b>My stuff .....</b>	<b>37</b>
<b>Camera.....</b>	<b>31</b>	My images .....	37
Taking a quick photo.....	31	Option menus.....	37
After you've taken your photo.....	31	Sending a photo .....	38
Using the toolbar .....	32	Organising your images .....	38
Changing the image size.....	33	Deleting an image .....	38
Viewing your saved photos.....	33	Creating a slide show.....	38
Choosing a shot mode .....	33	My sounds .....	39
Using burst shot mode .....	34	Using a sound .....	39
Using a frame shot mode .....	34	My videos .....	39
		Watching a video.....	40

# Contents

Using options while video is paused.....	40
Sending a video clip.....	40
Using a video clip as a ringtone .....	40
Using the video options menu.....	41
Games and applications .....	41
Playing a game.....	41
SVG contents .....	41
Viewing an SWF/SVG file.....	41
Using options viewing the SWF/SVG file.....	42
Others .....	42
My memory card .....	42
Using your phone as a mass storage device.....	42
<b>Multimedia .....</b>	<b>44</b>
Music .....	44
Transferring music onto your phone .....	44
Playing a song.....	44
Creating a playlist.....	45
Playing a playlist.....	45
Editing a playlist .....	45
Deleting a playlist .....	45
Voice recorder .....	46
Sending the voice recording .....	46
Transferring a file to your phone .....	46
<b>GET ORGANISED</b>	
<b>Organiser.....</b>	<b>47</b>
Adding an event to your calendar.....	47
Editing a calendar event.....	47
Sharing a calendar event.....	48
Adding a memo .....	48
<b>Tools.....</b>	<b>49</b>
Setting an alarm .....	49
Using the calculator .....	49
World time .....	49
Converter .....	50
Using the stopwatch .....	50
<b>THE WEB</b>	
<b>O2 Active .....</b>	<b>51</b>
Accessing the web.....	51
Adding and accessing bookmarks.....	51
Accessing a saved page.....	51
Viewing your browser history.....	51
Changing the web browser settings .....	51

## **SETTINGS**

<b>Settings</b> .....	52
Changing your screen settings.....	52
Activating your profiles.....	52
Personalising your profiles.....	52
Other phone settings .....	53
Changing your security settings.....	53
Using Memory manager .....	54
Bluetooth .....	54
Changing your Bluetooth settings.....	55
Pairing with another Bluetooth device ...	56

 
## **ACCESSORIES**

<b>Accessories</b> .....	57
<b>Network service</b> .....	58
<b>Technical data</b> .....	58

## **GUIDELINES**

<b>Guidelines for safe and efficient use</b> .....	60
--	----

# Getting to know your phone

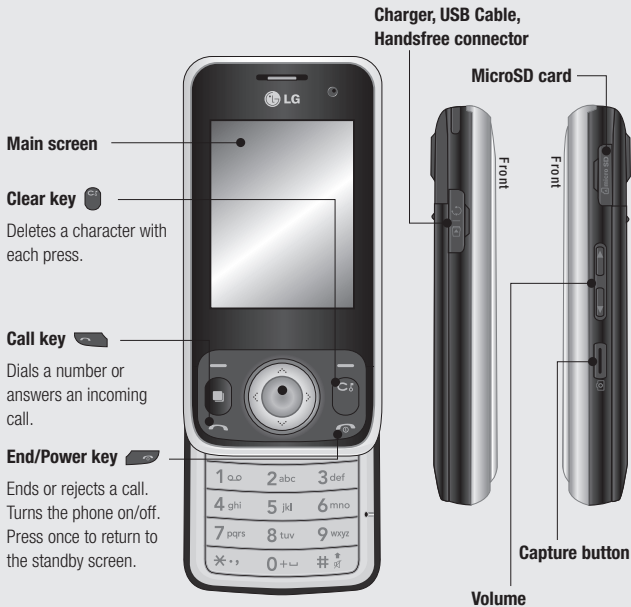



01

02

03

04

05

06

07

08

09

# Installing the SIM and battery



## 1 Remove the battery cover


Slide the battery cover towards the bottom of the phone and away from it.

 


## 2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.


 **WARNING:** Do not use your fingernail when removing the battery.

 **WARNING:** Do not remove the battery when the phone is switched on, as this may damage the phone.

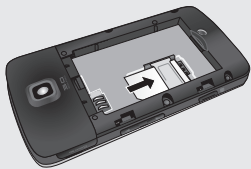

## 3 Install the SIM card

 Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the reverse direction.

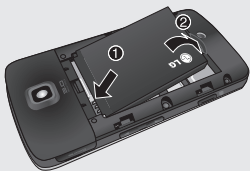

#### 4 Install the battery

Insert the top of the battery into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



#### 5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.



#### 6 Charging your phone

Pull open the cover of the charger socket on the side of your KT520. Insert the connector on your charger, and plug into a mains electricity socket. Your KT520 will need to be charged until the message "Battery full" appears on the screen.

01

02

03

04

05

06

07

08

09

# Memory card

## Installing a memory card

Expand the memory space available on your phone by using a memory card.

**TIP!** A memory card is an optional accessory.

To insert the memory card, slide it into the slot at the top until it clicks into place, making sure that the gold contact area is facing upwards.



# Menu map



## GAMES & APPS

- 1 My games & apps
- 2 Settings



## CALLING

- 1 Make video call
- 2 Call logs
- 3 Call durations
- 4 Data volume
- 5 Call costs
- 6 Call divert
- 7 Call barring
- 8 Fixed dial numbers
- 9 Call waiting
- 0 Common settings
- \* Video call settings



## ORGANISER

- 1 Calendar
- 2 To do
- 3 Memo
- 4 Secret memo
- 5 Date finder
- 6 Settings



## MULTIMEDIA

- 1 Camera
- 2 Video camera
- 3 Music
- 4 Voice recorder



## MESSAGING

- 1 Create new message
- 2 Inbox
- 3 Mailbox
- 4 Drafts
- 5 Outbox
- 6 Sent items
- 7 My folders
- 8 Templates
- 9 Emoticons
- 0 Settings



## MY STUFF

- 1 My images
- 2 My sounds
- 3 My videos
- 4 My games & apps
- 5 SVG contents
- 6 Others
- 7 My memory card



## YAHOO!

- 1 Yahoo! oneSearch



## CONTACTS

- 1 Add new
- 2 Search
- 3 Speed dials
- 4 Groups
- 5 Service dial numbers
- 6 Own number
- 7 My business card
- 8 Settings



## TOOLS

- 1 Quick menu
- 2 Alarms
- 3 Calculator
- 4 Stopwatch
- 5 Converter
- 6 World time



## 02 ACTIVE

- 1 Home
- 2 Enter address
- 3 Bookmarks
- 4 RSS reader
- 5 Saved pages
- 6 History
- 7 Settings



## CONNECTIVITY

- 1 Bluetooth
- 2 Server sync
- 3 USB connection



## SETTINGS

- 1 Profiles
- 2 Phone
- 3 Screen
- 4 Date & Time
- 5 Network
- 6 Internet profiles
- 7 Access points
- 8 Packet data conn.
- 9 Security
- 0 Memory manager
- \* Streaming settings
- # Reset settings

01

02

03

04

05

06

07

08

09


# Your standby screen

Whenever your KT520 isn't in use, it will return to your standby screen. From here you can access menu options, make a quick call or change your profile - as well as many other things.

## Optical sensor

Your KT520 has a special feature; an optical sensor. You can use this to navigate menus as well as your web browser. Use the optical sensor by rubbing the panel with your thumb to drag the cursor around the screen. There's no need to press too hard as the optical sensor is sensitive enough to pick up on a light touch.

From the main menu, select **Settings**, **Phone**, then **Optical sensor settings**. From here you can choose **All** to enable its use in the browser and the menus, **Browser only**, or you can turn it **Off**.

 **WARNING:** When the optical sensor is directly exposed to the sun, its function can be malfunctioned.



▲ Standby screen



▲ Optical sensor panel

## The main menu

The main menu provides twelve menu options.

- 1 Select **Menu**.
- 2 Use the arrow keys to select the required menu option.
- 3 When the option you require is selected, press **OK** to open.

01

02

03

04

05

06

07













08














09

# Your standby screen

## The status bar




The status bar displays various icons to indicate, amongst other things, signal strength, remaining battery life and new messages.

Icon	Description
	Multitasking
	Calendar
	Network signal strength (number of bars will vary)
	No network signal
	Activate security menu
	Remaining battery life
	Battery empty
	New text message
	New voice message
	New email
	New multimedia message
	An alarm is set

Icon	Description
	Normal profile in use
	Outdoor profile in use
	Silent profile in use
	External memory
	Calls are diverted
	GPRS available
	EDGE in use
	Roaming
	Bluetooth is active
	Calls are rejected
	HSDPA available
	3G available
	Flight mode is selected


# Calls

## Making a call


- 1 Enter the number using the keypad.  
To delete a digit press .
- 2 Press the green  key to dial the entered number.
- 3 To end the call, press the red  key.

**TIP!** To enter + for making an international call, press and hold **0**.

## Making a call from your contacts

- 1 From the main menu, press the down-arrow to open your contacts.
- 2 Using the keypad, enter the first letter of the contact you want to call. So, for 'Office', press **6** (MNO) three times.
- 3 Use the arrow keys to scroll through your contacts.
- 4 Press the green  key to call the selected contact.

## Answering or rejecting a call

When your phone rings, press the green  key to answer the call.

Press the red  key to reject the incoming call.

**TIP!** You can change the settings on your phone to change how you answer a call. From the main menu, select **Calling**, then **Common settings**, and select **Answer mode**. You can choose from **Press send key**, **Slide up** and **Press any key**.

01

02

03

04

05

06

07


08

09

# Calls


## Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 From the main menu, select , then **Speed dials**.
- 2 Your voicemail is set to speed dial 1. Choose any other number to assign to a contact.
- 3 Your address book will open. Select the contact you'd like to assign that number to and press **OK**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will initiate automatically.

## Viewing your call logs


From the main menu, select  and choose **Call logs**.

**All calls** - View the complete list of all of your dialled, received and missed calls.

**Dialled calls** - View the list of all the numbers you have called.

**Received calls** - View the list of all the numbers that have called you.

**Missed calls** - View the list of any calls you have missed.

To view other information on your calls, select the following in the  menu:


**Call duration** - View details of how long you have spent on your calls.

**Call costs** - View the charges applied to your dialled numbers (this service is network-dependent, some operators are unable to support it) and the duration of all your calls; received and dialled.

**Data volume** - View the amount in kilobytes of all your received and sent data.

**TIP!** From any call log, select Options to delete selected or all logged items.

## Using call divert

- 1 From the main menu, select .
- 2 Select **Call divert**.
- 3 Choose whether you would like to divert all calls when the line is busy, when there is no answer or when you are not reachable.
- 4 Choose whether to divert to your voicemail or to another number.
- 5 Enter your divert number or select **Search** to browse for your divert number.

**Note:** Charges may be incurred for diverting calls. Please contact your network provider for details.

**TIP!** To turn off all call diverts, choose **Deactivate all** from the **Call divert** menu.

## Using call barring

- 1 From the main menu, select .
- 2 Select **Call barring**.
- 3 Choose any or all of the following options for **Voice calls** or **Video calls**:
  - All outgoing**
  - Outgoing international**
  - O/G international calls except home country**
  - All incoming**
  - Incoming when abroad**
- 4 Select **Activate** and enter the call barring password. Please check with your network operator for this service.

**TIP!** If you only want to allow calls to specific numbers from your phone, you can turn on the **Fixed dial numbers** feature. To do so, select **Fixed dial numbers** from the **Calling** menu and then choose **Turn on**. Please note, you'll need your PIN2 code from your operator.

01

02

03

04

05

06


07

08

09

# Calls

## Changing the common settings

- 1 From the main menu, select  and then choose **Common settings**.
- 2 From here you can amend the settings for:

**Call reject** - You can set which incoming calls to reject.

**Send my number** - Choose whether your number will be displayed when you call someone.

**Auto redial** - Choose **On** or **Off**.

**Answer mode** - Choose whether to answer the phone using the accept key, any key or by sliding your handset open.


**Minute minder** - Select **On** to hear a tone every minute during a call.

**BT answer mode** - You can choose whether calls should be answered by the handset or by a Bluetooth headset, if one is connected.


**Save new number** - Choose whether to save the phone number when ending a call, if the phone number is not already saved in your phonebook.

**Slide close setting** - Choose whether or not to end the active call when the slide is closed.

## Searching for a contact


- 1 From the main menu, select  and choose **Search**.
- 2 Using the keypad enter the first letter of the contact you want to call. So, for 'Office', press **6** (MNO) three times.
- 3 Scroll through the contacts and their different numbers using the arrow keys.

## Adding a new contact

- 1 From the main menu, select  and choose **Add new**.
- 2 Choose whether to store your new contact on your **Handset** or **USIM**.
- 3 Enter the information you would like to store about the contact and select **Done**.

Or, use the following shortcut:

- 1 Enter the number you wish to store and select **Options**.
- 2 Choose **Save number** and then select whether you would like to create a new contact or update an existing one by choosing **New contact** or **Update contact**.
- 3 Enter the relevant information as above and select **Done**.

**Note:** When it comes to storing a contact's email address, press the  key on the keypad to get access to symbols such as '@'.

## Contact options

There are many things you can do when viewing a contact. Here's how to access and use those features:

- 1 Open the contact you'd like to use. See **Searching for a contact** above.
- 2 Select **Options** to open the list of options. From here you can:

**Send message** - Send a message to the contact. If the contact has an email address, you can send them an email from here, too.

**Send business card** - Send the contact's details as a business card.

**Make voice call** - Make a voice call to the contact.

**Make video call** - Make a video call to the contact.

**Add new contact** - Add a new contact.

**Edit** - Change the contact's details.

**Mark/unmark** - Mark/unmark the selected contact.

01

02

03

04

05

06

07

08

09

# Calls

**Search by** - Search a contact by number or group.


**Save to USIM** - Choose to move or copy to the SIM card or phone (depending on where you originally saved the contact).

**Delete** - Delete the contact. Select **Yes** to confirm.

**Text input** - Options for **Insert symbol**, **Input method**, **Writing language** and **Add to dictionary**.

## Adding a contact to a group

You can collect your contacts into groups, keeping your work colleagues and family members separate, for example. There are a number of groups including Family; Friends and Colleagues; School; and VIP already set up on the phone.


- 1 From the main menu, select  and choose **Groups**.
- 2 Scroll to the group you wish to add a contact to, select it and choose **Add**.

- 3 Your contact list will open. Scroll to the contacts you would like to add to the group and select **Mark**, then **Done**.

**TIP!** You can assign a ringtone to a group. Select the group you wish to assign the ringtone to and select **Options**.


## Adding a picture to a contact

You can change the appearance of your contacts in your address book to include a picture.


- 1 From the main menu, select  and choose **Settings**.
- 2 Select **Contact list settings** and select **Off** or **On** from the **Show picture** tab.
- 3 Return to the address book and select the contact to which you want to add a picture.
- 4 Choose **Options** and select **Edit**.
- 5 Scroll down to the **Image** section. Choose **Edit** and select an option. If you select **Take a picture**, your camera viewfinder will open, so you can take a picture of your contact.

## Copying your contacts to your SIM


You can copy your contacts from your SIM to your handset or from your handset to your SIM.

- 1 From the main menu, select  and choose **Settings** and then **Copy**.
- 2 Choose between **Handset to USIM** or **USIM to handset**.
- 3 Choose whether to copy all the contacts together or one at a time.

## Deleting all of your contacts

- 1 From the main menu, select  and choose **Settings** and then **Clear contacts**.
- 2 Select to delete contacts from **USIM** or **Handset**.
- 3 Select **Yes** to confirm your selection.

## Viewing information

- 1 From the main menu, select  and choose one of the options to view your **Service dial numbers**, your **Own number** or your own business card.

**TIP!** If you haven't yet created a business card, the **My business card** screen will give you the option to create one. Select **Add** and enter your details as you would for any other contact. Select **Done** when you are finished.

01

02

03

04

05

06

07

08


09

# Messaging

## Messaging


Your KT520 combines SMS, MMS and email into one intuitive and easy-to-use feature.

### Sending a message

- 1 From the main menu, select  and then **Create new message**.
- 2 Choose to send a **Message** or **Email**.
- 3 A new, blank message will open.
- 4 Enter your message using T9 predictive or Abc manual.  
See **Entering text** below to see how to switch between the different text entry modes.
- 5 From the **Options** menu, select **Insert** to add an image, video, sound or symbol.
- 6 Select **Send**.
- 7 Enter the phone number or select **Contacts** to open your contacts list.  
You can add multiple contacts.
- 8 Select **Send**.

## Entering text

There are two ways to enter text: T9 predictive and Abc manual.

To turn on T9 predictive text, begin a new message, choose **Options**, select **Input method** and choose **T9 mode**.  
With T9 on, you can switch between T9 predictive, Abc manual and numbers by pressing .

### T9 predictive

T9 mode uses a built-in dictionary to recognise the words you are writing based on the key sequences you enter. Simply touch the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.


If the word you want doesn't appear, choose **Options** and select **Add to dictionary**. Enter the word using Abc manual mode and your word or name will be added to the dictionary.

## Abc manual

In Abc mode you must press the key repeatedly to enter a letter. For example, to write 'hello', press 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

## Setting up your email

You can stay in touch on the move by using the email facility on your KT520. It's quick and simple to set up a POP3 or IMAP4 email account.

- 1 From the main menu, select  and then **Settings**.
- 2 Select **Email** then **Email accounts**.
- 3 Select **Add**.
- 4 You can now choose how your account works:
  - Title** - Enter a name for this account.
  - My name** - Enter your name.
  - Username** - Enter the account username.
  - Password** - Enter the account password.

**Email address** - Enter the account email address.

**Reply email address** - Enter the 'reply to' email address.

**Outgoing mail server** - Enter the account's mail sever address.

**Incoming mail server** - Enter the account details.

**Maximum receive size** - Choose the size limit of your emails, the maximum is 1MB.

**Mailbox type** - Enter the mailbox type, POP3 or IMAP4.

**Save to server** - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

**Save sent mail into** - Choose where to save your IMAP4 emails. For POP3 accounts copies are always saved on the phone.

**Access point** - Choose your Internet access point.

**Auto retrieve** - Choose whether to retrieve your mail.

**Advanced settings** - Choose whether to use the advanced settings.

01

02

03

04

05

06

07

08

09

# Messaging

**SMTP port number** - Normally, this will be 25.

**Incoming server port** - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

**SMTP authentication** - Choose the security settings for the outgoing mail server.

**SMTP username** - Enter the SMTP username.

**SMTP password** - Enter the SMTP password.

**APOP secure login** - Choose to activate APOP secure login for a POP3 account. IMAP4 accounts are always set to off.

## Retrieving your email

You can check for new email automatically or manually. See **Changing your email settings** for details on how to check for new email automatically.

To check manually:

- 1 From the main menu, select **Messaging** and then **Mailbox**.
- 2 Select the account for which you would like to check your email and then select **Retrieve**.
- 3 Your KT520 will connect to your email account and retrieve your new messages.

## Changing your email settings

You can use the following settings to configure your email preferences.

- 1 From the main menu, select **Messaging** and then **Settings**.
- 2 Select **Email** - from there you change the following settings:

**Allow reply email** - Choose to allow the sending of 'read confirmation' messages.

**Request reply email** - Choose whether to request 'read confirmation' messages.

**Retrieve interval** - Choose how often your KT520 checks for new email messages.

**Include message in Fwd & Reply** - Choose whether or not to include the original message in your replies.

**Include attachment** - Choose whether or not to include the original attachment.


**Auto retrieval in roaming** - Choose to auto retrieve your messages when abroad, or stop auto retrieval.

**New email notification** - Choose whether to be alerted to new emails.

**Signature** - Create an email signature and switch this feature on.

**Priority** - Choose the priority level of your email messages.

## Message folders

From the main menu, select .

**Inbox** - All received messages are placed in your inbox. From here you can send replies, forward and perform other actions, see page 28 for details.

**Mailbox** - The mailbox folder contains folders for each email account configured on the phone.

**Drafts** - If you don't have time to finish writing a message, you can save what you've done so far.

**Outbox** - This is a temporary storage folder and contains messages that are being sent.

**Sent items** - All sent messages are placed into your **Sent items** folder.

01

02

03

04

05

06

07

08

09

# Messaging

**My folders** - Allows you to group messages as you prefer.

**Templates** - A list of useful messages, to be used for quick replies.

**Emoticons** - A list of useful emoticons.

You can also access your messaging settings by selecting **Settings**.

## Managing your messages

You can use your Inbox to manage your messages.

- 1 From the main menu, select **Messaging** and then **Inbox**.
- 2 Select **Options** and then choose to:
  - Reply** - Send a reply to the selected message.
  - Forward** - Send the selected message on to another person.
  - Call** - Call the person who sent you the message.
  - Delete** - Delete selected messages.

**Create new message** - Create a new message or Email.

**Mark/unmark** - Mark/unmark the selected messages.

**Copy & Move** - Move the selected message to one of the folders you have created.

**Filter** - Sort messages depending on whether they are SMS or MMS.

**TIP!** If you see the message **No space for messages** you can delete either messages or saved files to create space.

## Using templates

You can create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, and you can edit these if you wish.

- 1 From the main menu, select **Messaging** and then **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. Once you've selected a message, choose **Options** and then **Edit** to change an existing template. You can also choose **Add new** to create a new template or **Delete** to delete an existing template.
- 3 You can use a template when you create a new message by selecting **Options**, followed by **Insert** and then **Templates**.

## Changing your text message settings

Your KT520 message settings are pre-defined so that you can send messages immediately.

If you'd like to change the settings, see below for more information.

From the main menu, select **Messaging**, then choose **Settings** and then **Text message**. You can make changes to:

**Text message centre** - Enter the details for your message centre.

**Delivery report** - Choose to receive confirmation that your message was delivered.

**Validity period** - Choose how long your message is stored at the message centre.

**Message types** - Convert your text into Voice, Fax, Paging, X.400 Email or ERMES.

**Character encoding** - Choose how your characters are encoded; note that this impacts the size of your message and may therefore affect data charges.

**Send long text as** - Choose how to send long messages (by multiple SMS or by single MMS).

01

02

03

04

05

06

07

08

09

# Messaging

## Changing your multimedia message settings

From the main menu, select **Messaging**, then choose **Settings**, followed by **Multimedia message**.

You can make changes to:

**Retrieval mode** - Choose whether to automatically or manually download multimedia messages depending on whether you are at home or roaming.

**Delivery report** - Choose to allow and/or request a delivery report.

**Read reply** - Choose to allow and/or send a read report.

**Priority** - Choose the priority level of your MMS.

**Validity period** - Choose how long your message is stored at the message centre.

**Slide duration** - Choose how long your slides appear on screen.

**Creation mode** - Choose from **Restricted**, **Warning** and **Free**.

**Delivery time** - Choose from **Immediately**, **After 1 hour**, **After 1 day** and **After 1 week**.

**Multi msg centre** - Select an operator-specific network profile for the sending of multimedia messages.

## Changing your other settings

From the main menu, select **Messaging**, choose **Settings** and then choose from the following:



**Videomail** or **Voicemail** - Your Videomail and/or Voicemail numbers are stored here. Contact your network operator for more information on the service they provide.

**Service message** - Here you can switch off 'push' messaging; your messages will no longer be pushed directly to your device as they are received, only when you check for new messages.

**Info. service** - Choose the reception status, alerts and language of your info messages.

# Camera

## Taking a quick photo

- 1 Press the  key on the right-hand side of the handset and the camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the desired subject of the photo.
- 3 Press the centre key or the  key to take a photo.

The file name of captured picture indicates the current date and time.


e.g. PDD-MM-YY\_hh.mm


(P : Prefix / D : Day / M : Month /  
Y : Year / h : Hour / m : Minute)

## After you've taken your photo

Your captured photo will appear on screen. The name of the image runs along the bottom of the screen and you'll see options displayed at the right of the screen. Select **Options** to rename or edit the image.


 **Back** Go back to previous menu.


 View the pictures you have taken in your Album.

 Send the photo as an MMS, Email, via Bluetooth.

See page 24 for **Sending a message**, and page 54 about sending and receiving your files using **Bluetooth**.

 Take another photo straight away. Your current photo will be saved.

 Use the image as wallpaper, as a Contact image, or in your Start-up or Shut down screen.

 Delete the photo you have just taken and confirm by touching **Yes**. The viewfinder will reappear.

**TIP!** In camera mode select Play icon to open the photo album. See page 33, **Viewing your saved photos**, for details.

01

02

03

04

05

06

07

08

09

# Camera

## Using the toolbar

Before taking a photo, select **Settings** to configure various options.

**Colour effect** - Choose from four colour tone options: **None**, **Black & White**, **Negative** and **Sepia**.

**White balance** - The white balance ensures that any white in your photos appears realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Sunny**, **Incandescent**, **Cloudy** or **Fluorescent**.

**Night mode** - **On** or **Off**

**Timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from **off**, **3 secs.**, **5 secs.** or **10 secs.**. Great for that group photo you want to be a part of.

**Shot mode** - **Normal**, **Burst shot** and **Frame shot**

**Image quality** - Choose between **Normal**, **Fine** and **Super fine**. The finer the quality, the sharper the photo will be but the file size will increase as a result, which means you'll be able to store fewer photos in your phone's memory.

**Memory in use** - Choose whether to save your photos to the **Handset** memory or to the **External** memory.

**Hide icons** - Set whether to automatically hide the icons on the side of the viewfinder.


**Sound** - Select one of the three different shutter sounds.

## Changing the image size

The larger the image size, the larger the file. Storing larger sized images will take up more of your phone's memory. If you want to fit more pictures on to your phone you can alter the image size to make the file size smaller.

- 1 Select **Size** from the right toolbar.
- 2 Select an option from those presented (**3M, 2M, 1M, 640X480, 320X240, Wallpaper, Contact**).

## Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply select **Album** from the right toolbar. From the main menu, select  and then **My images**.
- 2 Your gallery will appear on screen.
- 3 Use the arrows to select the photo you want to view and choose **View** to enlarge it.

## Choosing a shot mode

- 1 Select **Settings** to open the available shot modes.
- 2 Choose from the four options:

**Normal shot** - This is the default shot type, the photo will be taken in the normal way, as outlined in **Taking a quick photo** on page 31.

**Burst shot** - This enables you to take nine shots automatically in very quick succession. See **Using burst shot mode** on page 34 for details.

**Frame shot** - Choose from one of the fun frames to transform your friend into a pirate or just decorate their surroundings.

01

02

03

04

05

06

07

08

09

# Camera

## Using burst shot mode

Burst shot mode is great for taking photos of moving objects or at sporting events.

- 1 Select **Burst shot**.
- 2 Position the subject in the viewfinder and press the capture button as you would to take a normal photo.
- 3 The camera will take nine shots in quick succession and display the first with eight thumbnails on the left side of the screen.
- 4 Select the shot you want to keep by selecting the thumbnail once to view and select **Save** to save.
- 5 A tick will appear next to the image thumbnail. Select **Save** to exit.



## Using a frame shot mode


Frame shot can be used to transform your friend into a pirate, or just to decorate their surroundings with a frame.

- 1 Select **Frame shot** menu.
- 2 Position the subject in the fun frame and press the capture button.
- 3 Save the image by selecting **Save**.

# Video camera

## Shooting a quick video

- 1 Press the  key on the right hand side of the handset and the camera's viewfinder will appear on screen.
- 2 Select **Video** from the right toolbar and the video camera's viewfinder will appear on screen.
- 3 Point the camera lens towards the desired subject of the video.
- 4 Press the centre key or the  key to start recording.
- 5 **REC** will appear in the bottom of the viewfinder and a timer will show the length of your video.
- 6 To pause the video select **Pause** and resume by selecting **Resume**.
- 7 Select **Stop** to stop recording.

**Note:** You can also access the video camera from the main menu by selecting , scrolling down and selecting **Video camera** to open the viewfinder.

## After you've shot your video

A still image representing your captured video will appear on screen. The name of the video runs along the bottom of the screen. You can access the **Use as** and **Rename** options by pressing **Settings**.

## Using the toolbar

Before shooting a video, select **Settings** to configure various options.

**Colour effect** - Choose a colour tone to apply to the video you're taking. Choose from four colour tone options: **None**, **Black & White**, **Negative** or **Sepia**.

**White balance** - The white balance ensures that any white in your videos appears realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Sunny**, **Incandescent**, **Cloudy** or **Fluorescent**.

01

02

03

04

05

06

07

08

09

# Video camera

**Night mode** - On or Off

**Video quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a video will be, but the file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.

**Duration** - **Message** or **Normal**.

**TIP!** The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you'll be able to see the image change in preview behind the settings menu.

Use the arrow keys to navigate the options in **Others**.

**Memory in use** - Choose whether to save your videos to the Handset memory or to the External memory.

**Hide icons** - Set the camera to automatically hide the icons to the side of the viewfinder.

**Voice** - Choose Mute to record a video without sound.

## Watching your saved videos

- 1 Select the album icon. Your album will appear on screen.
- 2 Highlight the video you want to view to bring it to the front of the album.
- 3 Select the video to open it fully.

## Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, use the keys on the side of the handset.

# My stuff

You can store multimedia files in your phone's memory in **My stuff** so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

## My images

**My images** contains a folder of default images pre-loaded onto your phone, images downloaded by you and images taken with your phone's camera.

## Option menus

The options available to you depend on what type of image you have selected. All of the options listed below will be available for pictures you have taken on the phone's camera, but only the **Create new folder**, **Sort by**, **Grid view**, **File info**, and **Memory manager** options are available for default images.

In the images folder, select Options to display your list of options.

**Send** - Send the selected image to a friend via message, email or Bluetooth.

**Note:** The image may need to be resized before it can be sent by MMS.

**Use as** - Select as Wallpaper, Contacts image, Start up image or Shut down image.

**Move** - Move an image from the phone memory to a memory card or vice versa.

**Copy** - Copy an image from the phone memory to a memory card or vice versa.

**Delete** - Delete the selected image.

**Mark/Unmark** - Select multiple files.

**Print via** - Print an image file via Bluetooth®.

**File** - Rotate, rename or view the information (name, size, date, resolution, type and copyright) of the selected image.

**Create new folder** - Create a new folder within the Pictures folder.

**Slide show** - See **Creating a slide show** on page 38.

01

02

03

04

05

06

07

08

09


# My stuff

**Sort by** - Arrange your images by date, type or name.


**List view/Grid view** - Change the way you view your photos.

**Memory manger** - View the memory status.


## Sending a photo

- 1 From the main menu, select .
- 2 Select **My images**.
- 3 Select a photo and choose **Options**.
- 4 Select **Send** and choose from **Message**, **Email** or **Bluetooth**.
- 5 If you choose **Message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and if you choose **Yes**, your phone will search for a device to send the picture to.

## Organising your images


- 1 From the main menu, select .
- 2 Select **My images**.
- 3 Select **Options** and then **Sort by**.
- 4 Choose from **Date**, **Type** or **Name**.

## Deleting an image

- 1 From the main menu, select .
- 2 Select **My images**.
- 3 Select an image and choose **Options**.
- 4 Select **Delete**.

## Creating a slide show

If you want to look at the images on your phone, you can create a slide show to save you from having to open and close each individual image.


- 1 From the main menu, select .
- 2 Select **My images**.
- 3 Select the photo with which you would like to begin the slideshow and choose **Options**.
- 4 Select **Slide show** and it will begin.
- 5 Select **Stop** to pause the slide show or **Back** to end the slide show and return to the **My images** folder.

Selecting **Options** during the slide show allows you to change to full or landscape view.

## My sounds

The **My sounds** folder contains **Default sounds** as well as your **Voice recordings**. From here you can set sounds as ringtones or send them to other people.

## Using a sound

- 1 From the main menu, select .
- 2 Select **My sounds**.
- 3 Select **Default sounds** or **Voice recordings**.
- 4 Find a sound and choose **Play** to listen to it.
- 5 Select **Options** and choose **Use as** to set the sounds as your **Voice ringtone**, **Video ringtone**, **Message tone**, **Start-up sound** or **Shut down** sound.

## My videos

The **My videos** folder contains downloaded videos and videos that you have recorded with your phone.

01

02

03

04

05

06


07

08

09

# My stuff

## Watching a video

- 1 From the main menu, select  .
- 2 Select **My videos**.
- 3 Select a video and choose **Play**.

## Using options while video is paused

Select **Options** while in pause mode and choose from:

**Landscape view** - View the video file in full shot.

**Mute/Unmute** - Switch the sound on/off.

**Capture** - Capture the frozen frame as a picture.

**Repeat** - Repeat the video file.

**File info.** - View the name, size, date, time, type, duration, dimension, protection and copyright details.

**Send** - Send the video in a message, Email, via Bluetooth or as a Media Album.

**Delete** - Delete the video.

**Use as** - Use as a video ringtone.

## Sending a video clip

- 1 Select a video and select **Options**.
- 2 Select **Send** and choose from **Message**, **Email** or **Bluetooth**.
- 3 If you choose **Message** or **Email**, your video clip will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the video to.

## Using a video clip as a ringtone

- 1 Select a video and choose **Options**.
- 2 Select **Use as** and choose **Video ringtone**.

## Using the video options menu

From the **Videos** folder, you can choose from the following options:

**Send** - Send a video to a friend.

**Use as** - Select a video clip for Voice ringtone or Video ringtone.

**Move** - Move a video clip from the phone memory to a memory card or vice versa.

**Copy** - Copy a video clip from the phone memory to a memory card or vice versa.

**Delete** - Delete a video.

**Mark/Unmark** - Select multiple files.

**File** - Edit the file name and view its information.

**Create new folder** - Create a new folder within the My videos folder.

**Sort by** - Sort videos into a specific order.


**Grid view/List view** - View the options menu by Grid or List type.

**Memory manager** - View the memory status.

## Games and applications

Your KT520 comes with pre-loaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they should be saved in this folder.

### Playing a game

- 1 From the main menu, select .
- 2 Select **My games & apps**.
- 3 Select the game of your choice and choose **Launch**.

### SVG contents

The SVG contents folder contains all of your default and downloaded flash contents.

### Viewing an SWF/SVG file

- 1 Select **My stuff** then **SVG contents**.
- 2 Select the file and press **Play**.

01

02

03

04

05

06

07

08

09

# My stuff

## Using options viewing the SWF/SVG file

Select **Options** while in pause mode and choose from:

**Play/Pause** - Pause or resume playback.

**Full screen/Landscape view** - View your SWF/SVG in full screen or landscape view mode. (this only appears if you select **Options** without pausing).

**Send** - Send the selected file to a friend via message, email or Bluetooth.

**Delete** - Delete the selected file.

**Mute/Unmute** - Switch the sound on/off.

**Use as wallpaper** - Set the SWF/SVG file as a wallpaper.

**File info.** - View the details about the file.

## Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications.

## My memory card

If you've inserted a memory card it will be displayed as a folder within **My stuff**. That folder will be divided into four further folders: **Images, Sounds, Videos** and **Others**.

## Using your phone as a mass storage device

Your KT520 can be used as a mass storage device, just like a USB stick. This is a great way of moving files from your computer to your phone. If you've inserted a memory card and are connecting as mass storage, two drives will appear on your computer.

- 1 From the main menu, select **Connectivity**.
- 2 Select **USB Connection**.
- 3 Scroll to **Mass storage** and choose **Select**.
- 4 Insert the smaller end of the USB cable into the USB cable connector on the edge of the KT520. Plug the larger end into the USB port of your computer.

- 5 A removable disk folder will open automatically (two if you have a memory card inserted) showing all the folders on your phone.
- 6 Drag and drop your images, videos, music or documents into the desired folders.
- 7 Safely remove your phone by clicking on the **Safely remove hardware** icon in your desktop toolbar.

01

02

03

04

05

06

07


08

09

# Multimedia

## Music

Your LG KT520 has a built-in MP3 player so you can play all your favourite music.

To access the MP3 player, choose  from the main menu and then select **Music**. From here you have access to:

**Recently played** - This menu shows the last 20 tracks that were played.

**All tracks** - Contains all of the songs you have on your phone.

**Artists** - You can view and play music sorted by artist.

**Albums** - You can view and play music sorted by album.

**Genres** - You can view and play music sorted by genre.

**Playlists** - Contains any playlists you have created.


**Shuffle tracks** - If you want to play a continuous random selection, choose this option.

## Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the device and choose to send it via Bluetooth.
- 3 Choose **Yes** on your phone to accept the file.
- 4 The file should appear in **Music > All tracks**.



## Playing a song

- 1 From the main menu, select .
- 2 Choose **Music**.
- 3 Select **All tracks** and then the song you want to play. Select **Play** to begin.
- 4 From the **Options** menu, choose **Minimize** to hide the music player screen so that you can continue using your phone as normal while music is playing.
- 5 Select Back to stop the music and return to the music menu.


**TIP!** To change the volume while listening to music, use the volume keys on the side of your phone.

## Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All tracks** folder.


- 1 From the main menu, select .
- 2 Choose **Music**, then **Playlist**.
- 3 Select **Add**, enter the playlist name and choose **Save**.
- 4 The **All tracks** folder will be shown. Select the songs that you would like to include by moving to them and pressing **Mark** ; a tick will show next to their name.
- 5 Select **Done** to store the playlist.

## Playing a playlist

- 1 From the main menu, select .
- 2 Choose **Music**, then **Playlists**.
- 3 Move to the playlist you would like to play and choose **Select** and then **Play**.

## Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. You may also want to organise your playlists.


- 1 From the main menu, select .
- 2 Choose **Music**, then **Playlists**.
- 3 Scroll to the playlist you want to edit and choose **Select**, then **Options**.  
Choose from:

**Add new songs** - You can add or delete songs from the playlist using this option.

**Remove from list** - Remove a song from the playlist. Touch **Yes** to confirm.

**Move up/Move down** - Move the song up or down the list to change the playing order.

## Deleting a playlist

- 1 From the main menu, select .
- 2 Choose **Music**, then **Playlists**.
- 3 Scroll to the playlist you want to delete and select **Options**.
- 4 Select **Delete** and choose **Yes** to confirm.

01

02

03

04

05

06

07


08

09

# Multimedia

## Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

- 1 From the main menu, select .
- 2 Choose **Voice recorder**.
- 3 Select **Rec.** to begin recording.
- 4 Select **Pause** to pause the recording.
- 5 Select **Stop** to end the recording.
- 6 From the Options menu, select **Play** to listen to the recording or select **Delete** to delete it.

**Note:** You can listen to all of the voice recordings you have saved by selecting **Options**, then **Go to Voice Recordings**.

## Sending the voice recording

- 1 Once you have finished recording, select **Options**.
- 2 Select **Send** and choose from **Message**, **Bluetooth** or **Email**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal.

## Transferring a file to your phone


You can also transfer files from your computer to your phone using Bluetooth.

- 1 Make sure your phone and computer have Bluetooth switched on and that they are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 Accept the file by choosing **Yes**.
- 4 The file will be saved within the appropriate folder depending on its type. So, for example, a photo will be saved in the **My images** folder and music in the **My sounds** folder. If your phone cannot identify the file type, it will be saved in the **Others** folder.

**Note:** Files sent using Bluetooth can only be saved to the phone's memory.


# Organiser

## Adding an event to your calendar

- 1 From the main menu, select , then **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the arrow keys or by selecting **Options**, then **Add new event** and manually entering the date.
- 3 Select **Add new event** and enter the time you would like your event to begin. Scroll down using the arrow keys and enter the end time of your event.
- 4 Scroll down and enter a **Subject** for the event.
- 5 Choose whether or not you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can select for the alarm to go off at the starting time of the event or at a set period of time before the event starts.

- 6 Choose whether or not the event is a one-off or if it is to be repeated. You can choose from **Daily**, **Weekly**, **Monthly**, **Annually** or **User setting** options. If the event is repeated, you can also enter an **Expiration date** for when the events will stop repeating.
- 7 Select **Done** and your event will be saved in the calendar. An icon will mark the days that contain events.

## Editing a calendar event

- 1 From the main menu, select , then **Calendar**.
- 2 Choose **Options** and select **Weekly** to see a list of all your events. Scroll to the event you would like to edit and select **View**. Alternatively select the day of the event in the calendar and select **View**.
- 3 Select **Options**, then **Edit** and scroll to the event detail you want to change. Make your modifications and choose **Done** to store the edited event.

**Note:** You can delete an event from your calendar by viewing the event and choosing **Delete**.

01

02

03

04

05

06


07

08


09

# Organiser

## Sharing a calendar event

- 1 From the main menu, select  then **Calendar**.
- 2 Choose **View** to select the event you would like to share and choose **Options**.
- 3 Choose **Send** and select from **Text message**, **Multimedia message**, **Email** or **Bluetooth**.


## Adding a memo

- 1 From the main menu select , then **Memo**.
- 2 Select **Add** and type your memo.
- 3 Select **Save**.
- 4 Your memo will appear on screen the next time you open the **Memo** application.

**TIP!** You can edit an existing memo. Select the one you want to edit, choose **Options** and select **Edit**.



# Tools

## Setting an alarm


- 1 From the main menu, select , then **Alarms**.
- 2 Select **Add new**, from the **Options** menu.
- 3 Enter the time you would like the alarm to sound at.
- 4 Choose whether you would like your alarm to sound **Once, Daily, Mon - Fri, Mon - Sat, Sat - Sun** or **Except holiday**.
- 5 Scroll down to choose the alarm sound. Select **Edit** to select a new sound.
- 6 Scroll down and enter a name for the alarm or keep the suggested name.
- 7 Select **Done**.

**Note:** You can set up to 5 alarms.

## Using the calculator

- 1 From the main menu, select , then **Calculator**.
- 2 Press the numeric keys to input numbers.
- 3 Use the arrow keys to add, subtract, multiply and divide.
- 4 More complex calculations can be accessed in the **Options** menu.
- 5 Press  to clear the screen and start a new calculation.

## World time

- 1 From the main menu, select , then **World time**.
- 2 To add a new city to the list, choose **Options, Add city**, then select a city from the list.
- 3 To set your current time-zone, select **Options**, then **Change current city**.

01

02

03

04

05

06


07

08


09

# Tools

## Converter

- 1 From the main menu, select  then **Converter**.
- 2 You can choose to convert **Currency**, **Surface**, **Length**, **Weight**, **Temperature**, **Volume** or **Speed**.
- 3 Select the units of measurement you would like to convert from and to.
- 4 The result of the conversion will appear below.


## Using the stopwatch

- 1 From the main menu, select  then **Stopwatch**.
- 2 Press **Start** to begin the timer.
- 3 Press **Lap** if you'd like to record a lap time.
- 4 Press **Stop** to end the timer.
- 5 Press **Resume** to continue timing, or choose **Reset** to start again.

## 02 Active

O2 Active brings you up-to date news, sport, weather and traffic reports, and much more. You can also use it to download the latest ringtones, music, wallpapers and games.

### Accessing the web

- 1 From the main menu, select .
- 2 To access the browser homepage directly, select **Home** to access the O2 Active homepage, or **Enter address** to type in the URL of the web-page you'd like to visit.

**Note:** An additional cost is incurred when connecting to this service and downloading content. Check data charges with your network provider.


### Adding and accessing bookmarks

For quick and easy access to your favourite websites, you can add bookmarks and save web-pages.


- 1 When viewing a page that you'd like to bookmark, select **Options**, then **Bookmarks**.
- 2 Select **Add to bookmarks**.
- 3 Confirm title and press **Done**.
- 4 Select a folder to store the bookmark in.

**TIP!** After opening the page in browser, you can save the current page by selecting **Save page**.


### Accessing a saved page

- 1 From the main menu, select .
- 2 Select **Saved pages**.
- 3 Choose a page and select **Open**.

### Viewing your browser history

- 1 From the main menu, select .
- 2 Select **History**.
- 3 A list of web-pages you have accessed recently will be displayed. If you'd like to open one of them, you can.

### Changing the web browser settings

- 1 From the main menu, select . Then choose **Settings**.
- 2 You can choose the way your mobile handles, displays and uses information when browsing the internet. You can modify a variety of settings by selecting **Options**, then **Settings**.

01

02

03

04

05

06

07


08

09

# Settings

Within this folder you can change the phone's settings to personalise your KT520.

## Changing your screen settings

- 1 From the main menu, select .
- 2 Select **Screen** and choose from:

**Screen theme** - Modify your phone's display, including wallpaper.

**Menu style** - Choose the style used to display menus.

**Dialling** - Adjust the font style used when entering a phone number.

**Font** - Adjust the font type.

**Backlight** - Choose how long the backlight remains on for.

**Handset theme** - Change the look of your screen.

**Greeting message** - Choose to add a message to your standby screen.

**Note:** The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

## Activating your profiles

From the main menu, choose **Settings**, then **Profiles**. Select the profile you would like to activate.

Choose from:

 Normal

 Silent

 Outdoor

Flight mode

Customised 1

Customised 2

Customised 3

## Personalising your profiles

- 1 Choose the profile setting you want to edit and select **Options**, then **Edit**.
- 2 For the **Silent** profile, you can switch vibration on or off. For the other profiles, you can change sounds and alerts.

## Other phone settings

From the main menu, choose **Settings**. You can then adjust the settings for the following areas.

**Phone** - Change the phone settings for the key lock, mouse pointer, languages and power saving. You can also view handset information.

**Screen** - Change your screen settings.

**Date & Time** - Adjust the date and time settings or choose to automatically update the time when you travel.

**Network** - Your KT520 automatically connects to your preferred network. To change these settings use this menu. You can also add new access points using this menu.

**Internet profiles** - Add and view the O2 network profiles.

**Access points** - Your network operator has already saved this information.

**Packet data conn.** - Set the packet data connection.

**Streaming setting** - Set the provider's streaming setting and the default setting value of KT520 for O2 is "O2 Pay Monthly".

**Reset settings** - Reset all the settings to their factory definitions.

## Changing your security settings

Change your security settings to keep your KT520 and the important information it holds protected.

From the main menu, choose **Settings**, then **Security**.

**PIN code request** - A PIN code can be requested when you turn your phone on.

**Handset lock** - Choose when your security code will be requested.

**Change codes** - Change your **Security code**, **PIN code** or **PIN2 code**.

01

02

03

04

05

06

07

08

09

# Settings

## Using Memory manager

Your KT520 has three memories available: the phone; the SIM card; and an external memory card (you may need to purchase the memory card separately).

You can use **Memory manager** to determine how each memory is used and see how much space is available.

From the main menu, choose **Settings**, then **Memory manager**. Your options are:

**Handset common memory** - View the memory available on your KT520 for images, sounds, videos, multimedia messages, email, java and others.

**Handset reserved memory** - View the memory available on your handset for a variety of items.

**USIM memory** - View the memory available on your SIM Card.

**External memory** - View the memory available on your external memory card (you may need to purchase the memory card separately).

**Primary storage setting** - Choose between **Handset memory** and **External memory** as the primary storage.

## Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect a Bluetooth headset to make and receive calls.

Before you can start sharing files with Bluetooth, you will need to pair your device with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device on the next page**.

### To switch Bluetooth on:

- 1 From the main menu, choose **Connectivity**, then **Bluetooth**.
- 2 Select **Turn on**.

### To send a file:

- 1 Open the file you want to send.
- 2 Select **Options** and choose **Send**, then **Bluetooth**.
- 3 Your KT520 will automatically search for other Bluetooth enabled devices within range.
- 4 Choose the device you want to send the file to and select **Send**.

**TIP!** Keep an eye on the progress bar to make sure your file is sent.

### To receive a file:

- 1 To receive files, your Bluetooth must be both on and visible. See **Changing your Bluetooth settings** on the next page for more information.
- 2 A message will prompt you to accept the file from the sender. Select **Yes** to receive the file.

### Changing your Bluetooth settings

- 1 From the main menu, choose **Connectivity**, then **Bluetooth**.
- 2 Choose **Settings**.  
You can make changes to the following:

**My device visibility** - Choose from **Visible**, **Hidden** or **Visible for 1 min..**

**My device name** - Enter a personalised name to identify your KT520.

**Supported services** - Search for the profile supported by KT520.

**My address** - View your Bluetooth address.

01

02

03

04

05

06

07

08

09

# Settings

## Pairing with another Bluetooth device

By pairing your KT520 and another device, you can set up a passcode protected connection. This means your communications are more secure.

- 1 Check your Bluetooth is on and visible.
- 2 Select **Search for new device** from the Bluetooth menu.
- 3 Your KT520 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, select **Add**, enter the passcode and choose **Select**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 Your passcode-protected Bluetooth connection is now ready.

# Accessories

These accessories are supplied with your KT520.

## Charger



## Battery



## Stereo headset and handsfree connector



## Data cable and CD

Connect and synchronise your KT520 with your PC.



## User guide

Learn more about your KT520.



### Note:

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further inquiries.

01

02

03

04

05

06

07

08

09

## Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS 1900 and W-CDMA networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

## Technical data

### General

Product name : KT520

System : GSM 900 / DCS 1800 / PCS 1900  
/ W-CDMA

### Ambient Temperatures

Max : +55°C (discharging), +45°C (charging)

Min : -10°C

# Declaration of Conformity



## Suppliers Details

Name

LG Electronics Inc

Address

LG Electronics Inc. LG Twin Towers 20,  
Yeouido-dong, Yeongdeungpo-gu, Seoul, Korea 150-721

## Product Details

Product Name

GSM 900 / DCS 1800 / PCS 1900 / W-CDMA Terminal Equipment

Model Name

KT520/KT525

Trade Name

LG

# CE 0168

## Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.6.1, EN 301 489-07 V1.3.1  
EN 301 489-17 V1.2.1, EN 301 489-24 V1.3.1  
EN 301 511 V9.0.2  
EN 301 908-1 V2.2.1 EN 301 908-2 V3.2.1,  
EN 300 328 V1.6.1  
EN 50360/EN 50361:2001  
EN 60950-1 : 2001

## Supplementary Information

## Supplementary Information

I hereby declare under our sole responsibility  
that the product mentioned above to which this  
declaration relates complies with the above  
mentioned standards and Directives

Name

Issued Date

Seung Hyoun, Ji / Director 31 Mar. 2008

LG Electronics Inc. Amsterdam Office  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, e-mail : seokim@lge.com

  
Signature of representative

# Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

## Exposure to radio frequency energy

### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KT520 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- The highest SAR values for this model phone tested by DASY4 for use at the head and body are 0.284 W/kg and 0.402 W/kg (10g) each.
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 0.631 W/kg averaged over 1g of tissue.

## Product care and maintenance



**WARNING:** Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.

- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

## Efficient phone operation

### Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

01

02

03

04

05

06

07

08

09

# Guidelines for safe and efficient use

## Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

## Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

## Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

## In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

## Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

## Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.

01

02

03

04

05

06

07

08

09

## Guidelines for safe and efficient use

- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

01

02

03

04

05

06

07

08

**09**

## LIMITED WARRANTY STATEMENT

### ***1. WHAT THIS WARRANTY COVERS :***

LG offers you a limited warranty that the enclosed phone and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The limited warranty for the product extends the warranty period beginning on the date of purchase of the product.
- (2) The limited warranty applies for 1 year from the original date of purchase and extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user. It shall neither exclude nor limit any mandatory statutory rights of the customer or any of the customer rights against the seller/dealer of the product.
- (3) This warranty is good only to the original purchaser during the warranty period, but limited to certain country if specified.
- (4) The external housing and cosmetics parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG. or their designated service agent the consumer must provide information to reasonably prove the date of purchase.
- (6) Unless other service arrangements have been specified the customer shall bear the cost of shipping a defective product back to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.
- (7) During the warranty period LG or its authorised service agent will repair or replace at LG's sole discretion a defective product. A repaired or replaced product will not be given a prolonged or renewed warranty period.

### ***2. WHAT THIS WARRANTY DOES NOT COVER :***

- (1) Defects OR Damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) A warranty repair if the Customer Service Department at LG or other agreed service agent was not notified by the consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number or IMEI number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).
- (12) Suspected defects caused by a failure of the cellular network.

### ***3. CONDITIONS :***

No other express warranty is applicable to this product.

The DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.









