



SGH-P850 User's Guide



* Your phone may not appear exactly as the phone image above.



Important safety precautions



Failure to comply with the following precautions may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.


Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency call

Key in the emergency number for your present location, then press .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorised accessories could damage your phone and may be dangerous.



- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.

Qualified service

Only qualified service personnel may repair your phone.



 


For more detailed safety information, see "Health and safety information" on page 100.



About this Guide

This User's Guide provides you with condensed information about how to use your phone. To quickly learn the basics for your phone, please refer to "Get started" and "Step outside the phone."

In this guide, the following instruction icons appear:

-  Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.
-  Indicates that you can get more information on the referenced page.
-  Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.
-  Indicates a key on the phone.
For example, [OK/⌂]
-  Indicates a soft key, whose function is displayed on the phone screen. For example, <Menu>



- **Camera and camcorder**
Use the camera module on your phone to take a photo or record a video.

Special features of your phone



- **MP3 player**
Play MP3 music files using your phone as an MP3 player.



- **Bluetooth**
Send photos, images, videos, and other personal data, and connect to other devices using free, wireless Bluetooth technology. You can also use a Bluetooth stereo headset to let you enjoy music with high quality stereo sound.



- **Web browser**
Access the wireless web to get up-to-the-minute information and a wide variety of media content.



- **Phone to TV**
View photos and video clips captured with the phone on your TV screen.



- **Image editor**
Crop, resize, rotate, and decorate your photos.



- **Get Personal with photo caller ID**
See who's calling you when their very own photo displays.

- **SOS message**
Send SOS messages to your family or friends for help in an emergency.



- **Name card**
Create name cards with your number and profile.

- **Multimedia Message Service (MMS)**
Send and receive MMS messages with a combination of text, images, video, and audio.

- **E-mail**
Send and receive e-mails with images, video, and audio attachments.



- **Java game**
Enjoy Java™-based embedded games and download new games.



- **Calendar**
Keep track of your daily, weekly, and monthly schedule.



- **Voice recorder**
Record memos or sounds.

Contents

Unpack **6**

Make sure you have each item

Your phone **6**

Buttons, features, and locations

Get started **7**

First steps to operating your phone

Install and charge the phones.....	7
Power on or off.....	8
Keys and display	9
Access menu functions	11
Customise your phone.....	12
Make/Answer calls	14

Step outside the phone **14**

Begin with your camera, the MP3 player, the web, and other special features

Use the camera	14
Play MP3s	17

Browse on the web	18
Use Phonebook	18
Send messages	19
View messages.....	21
Use SOS messages	22
Use Bluetooth	22
Watch the phone display on a TV	24
Use a memory card.....	25

Enter text **27**

T9, ABC, Number, and Symbol modes

Call functions **30**

Advanced calling features

Menu functions **34**

All menu options listed

Solve problems **98**

Help and personal needs

Health and safety information **100**

Index **107**

Overview of menu functions

To access Menu mode, press <Menu> in Idle mode.

1 Call records	▶ p.34	3 Applications	▶ p.41	5 Messages	▶ p.53	8 Camera	▶ p.79
1 Recent contacts	▶ p.34	1 MP3 player	▶ p.41	1 Create new message	▶ p.54	1 Take a photo	▶ p.79
2 Missed calls	▶ p.35	2 Voice recorder	▶ p.44	2 My messages	▶ p.57	2 Record video	▶ p.83
3 Dialed calls	▶ p.35	3 Image editor	▶ p.45	3 Templates	▶ p.61	3 Go to photos	▶ p.86
4 Received calls	▶ p.35	4 Java world	▶ p.46	4 Delete all	▶ p.62	4 Go to videos	▶ p.86
5 Delete all	▶ p.35	5 World time	▶ p.47	5 Settings	▶ p.62		
6 Call time	▶ p.35	6 Alarm	▶ p.47	6 SOS message	▶ p.67		
7 Call costs*	▶ p.36	7 Calculator	▶ p.48	7 Broadcast messages	▶ p.68		
		8 Convertor	▶ p.49	8 Memory status	▶ p.68		
2 Phonebook	▶ p.36	9 Timer	▶ p.49			9 Settings	▶ p.86
1 Contact list	▶ p.36	10 Stopwatch	▶ p.50	6 File manager	▶ p.69	1 Time & Date	▶ p.86
2 FDN list	▶ p.37	11 SIM AT*	▶ p.50	1 Images	▶ p.69	2 Phone settings	▶ p.87
3 Add new contact	▶ p.38			2 Videos	▶ p.70	3 Display settings	▶ p.88
4 Group	▶ p.38	4 Browser	▶ p.50	3 Music	▶ p.72	4 Sound settings	▶ p.90
5 Speed dial	▶ p.39	1 Home	▶ p.50	4 Sounds	▶ p.72	5 Network services	▶ p.91
6 My name card	▶ p.39	2 Bookmarks	▶ p.51	5 Other files	▶ p.73	6 Bluetooth	▶ p.93
7 Own number	▶ p.40	3 Go to URL	▶ p.52	6 Memory card**	▶ p.75	7 Security	▶ p.96
8 Management	▶ p.40	4 Clear cache	▶ p.52	7 Memory status	▶ p.75	8 Memory status	▶ p.97
9 Service number*	▶ p.40	5 Profile settings	▶ p.52			9 Reset settings	▶ p.97
		6 Current profile	▶ p.53	7 Calendar	▶ p.76		
				1 Month view	▶ p.76		
				2 Week view	▶ p.79		
				3 Day view	▶ p.79		

* Shows only if supported by your SIM card.

** Shows only if a memory card is inserted into the phone.

Unpack

Make sure you have each item



Phone



Travel Adapter



Battery



User's Guide


You can obtain various accessories from your local Samsung dealer.



The items supplied with your phone and the accessories at your Samsung dealer may vary, depending on your country or service provider.

Your phone

Buttons, features, and locations

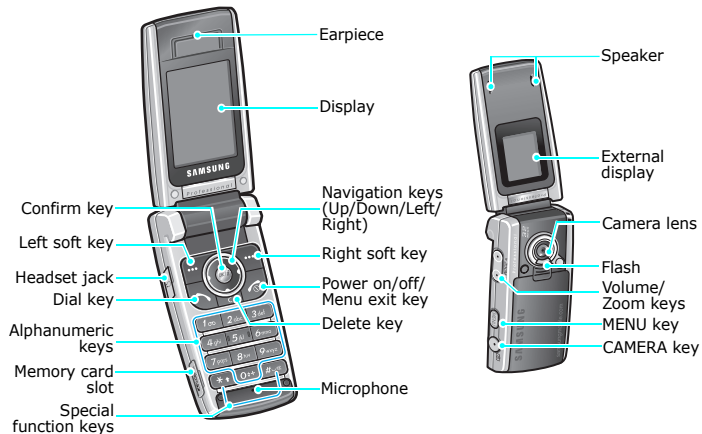

Get started

First steps to operating your phone


SIM card information

When you subscribe to a cellular network, you receive a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details, such as your PIN, and available optional services.


Install and charge the phones

1 Remove the battery.




- If the phone is already on, first turn it off by pressing and holding [].

2 Insert the SIM card.

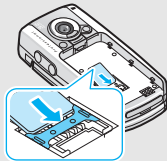


- Make sure that the gold-coloured contacts on the card are face down.

3 Install the battery.

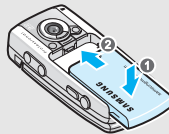


4 Plug the travel adapter into the phone.

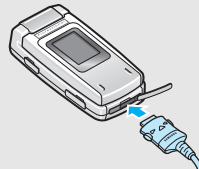

5 Plug the adapter into a standard AC wall outlet.


6 When the phone is completely charged (the battery icon becomes still), unplug the adapter from the power outlet.

- 7 Remove the adapter from the phone.

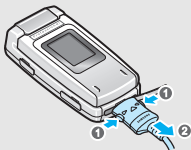

Low battery indicator

When the battery is low:


- a warning tone sounds,
- the battery low message displays, and
- the empty battery icon  blinks.

If the battery level becomes too low, the phone automatically turns off. Recharge your battery.

Power on or off

Power on

1. Open the phone.


2. Press and hold [] to turn on the phone.

Do not turn on the phone when mobile phone use is prohibited.

3. If necessary, enter the PIN and press <OK>.

Power off

1. Open the phone.

2. Press and hold [].

Keys and display

Keys



Perform the function indicated on the bottom line of the display.



In Idle mode, access your favourite menus directly. ► p. 87
In Menu mode, scroll through menu options.



In Idle mode, launch the web browser.
In Menu mode, select the highlighted menu option or confirm input.



Make or answer a call.
In Idle mode, retrieve numbers recently dialed, missed, or received.



Delete characters from the display or an item in an application.



Press and hold to switch the phone on and off.
End a call.
In Menu mode, cancel input and return the phone to Idle mode.



Enter numbers, letters, and some special characters.

In Idle mode, press and hold [1] to access your voicemail server. Press and hold [0] to enter an international call prefix.



Enter special characters.

In Idle mode, press and hold [#] to activate or deactivate Quiet mode. Press and hold [*] to enter a pause between numbers.



Adjust the phone volume.

In Idle mode, with the phone open, adjust the keypad tone volume. With the phone closed, press and hold to turn on the backlight.

In Camera mode, zoom in or out.



In Camera mode, access camera options.




In Idle mode, access the **Camera** menu.

Press and hold to turn on the camera.

In Camera mode, take a photo or record a video.

Display

Layout

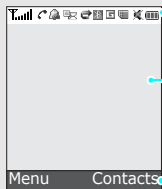








 
 
 

 
 

 






Icons
display various icons.

Text and graphics
display messages,
instructions, and
information you enter.

**Soft key function
indicators**
show the current
functions assigned to
the soft keys.

Icons


-  Received signal strength
-  Call in progress
-  Out of your service area; you cannot send or receive calls
-  GPRS network
-  Home Zone, if registered for the appropriate service
-  Office Zone, if registered for the appropriate service

-  Alarm set ▶ p. 47
-  New text message
-  New multimedia message
-  New e-mail
-  One of the message Inboxes full
-  New voicemail
-  SOS message feature active
▶ p. 67
-  Call diverting feature active
▶ p. 91
-  Bluetooth active ▶ p. 93
-  Connected to Bluetooth hands-free car kit or headset
-  Memory card inserted
-  Synchronised with PC
-  Call ringer set to vibrate ▶ p. 90
-  Quiet mode
-  Battery power level

Access menu functions

Use the soft keys

The roles of the soft keys vary depending on the function you are using. The bottom line of the display indicates their current role.

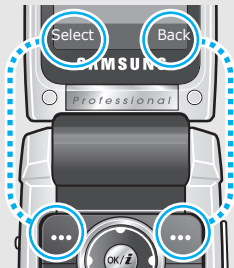

Press the left soft key to select the highlighted option.

Press the right soft key to return to the previous menu level.

Select an option

1. Press a desired soft key.
2. Press the Navigation keys to move to the next or previous option.
3. Press **<Select>** or [OK/↵] to confirm the function displayed or option highlighted.
4. To exit, choose either of the following methods:
 - Press **<Back>** to move up one level.
 - Press [↶] to return to Idle mode.

Use shortcuts

Press the number key corresponding to the option you want. For the index number 10 and 11, press [0] and [*], respectively.

Customise your phone

Display language

1. In Idle mode, press **<Menu>** and select **Settings** → **Phone settings** → **Language**.
2. Select a language.

Call ringer melody

1. In Idle mode, press **<Menu>** and select **Settings** → **Sound settings** → **Incoming call** → **Ring tone**.
2. Select a ringtone category.
3. Select a ringtone.
4. Press **<Save>**.

Idle mode Wallpaper

You can set wallpaper for the idle screen on each display.

For the main display:

1. In Idle mode, press **<Menu>** and select **Settings** → **Display settings** → **Wallpaper** → **Main display**.
2. Select an image category.
3. Select an image.

For the external display:

1. In Idle mode, press **<Menu>** and select **Settings** → **Display settings** → **Wallpaper** → **Cover display**.
2. Select an image type.
3. For **Clock**, select a clock type.
For **Cover title**, enter a greeting and press [OK/↵].

For **Wallpaper images**, select an image category and then an image.

Menu shortcuts

You can set the Navigation keys to function as shortcuts to access your favourite menus.

1. In Idle mode, press <**Menu**> and select **Settings** → **Phone settings** → **Short cut**.
2. Select a key.
3. Select a menu to be assigned to the key.

Quiet mode

You can switch the phone to Quiet mode to avoid disturbing other people with your phone sounds. Press and hold [#] in Idle mode.



Phone lock

You can protect the phone against unauthorised use with a phone password. The phone will require the password on power-up.



1. In Idle mode, press <**Menu**> and select **Settings** → **Security** → **Change password**.
2. Enter the default password, **0000000**, and press <**OK**>.
3. Enter a new 4- to 8-digit password and press <**OK**>.
4. Enter the new password again and press <**OK**>.
5. Select **Phone lock**.
6. Select **Enable**.
7. Enter the password and press <**OK**>.

Make/Answer calls

Make a call

1. Enter an area code and phone number.
2. Press [].
3. To end the call, press [].

Answer a call

1. When the phone is ringing, press [].
2. To end the call, press [].

Adjust the volume during a call

Press [Volume].


Step outside the phone

Begin with your camera, the MP3 player, the web, and other special features

Use the camera


Take a photo

1. Open the phone.
2. Turn the display to the left and close the phone, as shown.

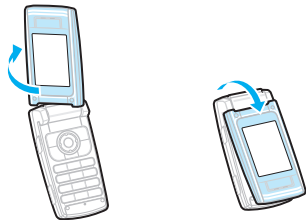

The camera turns on and the preview screen appears in Landscape view.

-
3. Hold the phone horizontally, as shown. Make sure that the lens is not blocked by your fingers.

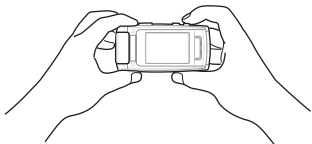

4. Aim the lens at the subject and make any desired adjustments.
 - Press [**MENU**] to access camera options. ► p. 80
 - Press [Volume] to zoom in or out.

5. Press [**CAMERA**] fully to take a photo. The photo is saved in the **Photos** folder.
6. Press [**CAMERA**] to take another photo.

View a photo

1. With the phone reversed, press [**MENU**].
2. Scroll to **Go to photos** and press [**CAMERA**].
3. Select the photo you want.
4. Press [Volume] to display another photos in the **Photos** folder.

Record a video

1. Open the phone.
2. Turn the display to the left and close the phone.
The camera turns on and the preview screen appears in Landscape view.
3. Hold the phone horizontally. Make sure that the lens is not blocked by your fingers.
4. To switch to Record mode, press [**MENU**] and select **Record video**.
5. Aim the lens at the subject and make any desired adjustments.
 - Press [**MENU**] to access camera options. ► p. 84
 - Press [Volume] to zoom in or out.

6. Press [**CAMERA**] to start recording.
7. Press [**MENU**] to stop recording. The video clip is saved in the **Videos** folder.
8. Press [**CAMERA**] to play back the video clip.

Play a video

1. With the phone reversed, press [**MENU**].
 1. Scroll to **Go to videos** and press [**CAMERA**].
 2. Select the video you want.

Play MP3s

Copy MP3 files to the phone

Use these methods:

- Download from the wireless web ▶ p. 50
- Download from a computer using the optional Samsung PC Studio ▶ Samsung PC Studio User's Guide
- Receive via Bluetooth ▶ p. 93
- Copy files to a memory card and insert the card into the phone ▶ p. 25

Create a play list

1. In Idle mode, press <Menu> and select **Applications** → **MP3 player**.
2. Press <Options> and select **Add music from** → **Phone** or **Memory card**.

3. Press [OK/↵] to select the files you want and press <Add>.

Play MP3 files

1. From the MP3 player screen, press [OK/↵].
2. During playback, use the following keys:
 - OK/↵: pauses or resumes playback.
 - Up: opens the play list.
 - Left: returns to the previous file. Moves backward in a file when held down.
 - Right: skips to the next file. Skips forward in a file when held down.
 - Volume: adjusts the volume.
 - Down: stops playback.


Browse on the web

Using a built-in web browser, you can get easily access the wireless web to get a variety of up-to-date services and information and to download web content.

Launch the web browser

In Idle mode, press [OK/⌂].

Navigate the web

- To scroll through browser items, press [Up] or [Down].
- To scroll page by page, press [Volume].
- To select an item, press <✓>.
- To return to the previous page, press <Back> or [C].
- To access options, press <Menu> and select **Menu**, or select  on the top of the screen.

Use Phonebook

Add an entry

To the phone's memory:

1. In Idle mode, enter a phone number and press [OK/⌂].
2. Select **Phone** → a number type.
3. Specify contact information: First name, Last name, Mobile, Home, Office, Fax, Other, Email, Graphic ID, Ringtone, Group, and Notes.
4. Press [OK/⌂] to save the entry.

To the SIM card:

1. In Idle mode, enter a phone number and press [OK/⌂].
2. Select **SIM**.
3. Enter a name.
4. Press [OK/⌂] to save the entry.

Find an entry

1. In Idle mode, press **<Contacts>**.
2. Enter the first few letters of the name you want.
3. Select an entry.
4. Scroll to a number, and press [↵] to dial or press [OK/⏏] to edit contact information.

Create and send a name card

1. In Idle mode, press **<Menu>** and select **Phonebook** → **My name card**.
2. Specify your contact information.
3. Press **<Save>** to save the name card.
4. To send the name card, press **<Options>** and select **Send via** → a sending method.

Send messages

Send a text message (SMS)

1. In Idle mode, press **<Menu>** and select **Messages** → **Create new message** → **Text message**.
2. Enter the message text.
3. Press **<Options>** and select **Send only** or **Save and send**.
4. Enter destination numbers.
5. Press [OK/⏏] to send the message.

Send a multimedia message (MMS)

1. In Idle mode, press **<Menu>** and select **Messages** → **Create new message** → **Multimedia message**.
2. Select **Subject**.
3. Enter the message subject and press [OK/⏏].

Send a multimedia message (MMS) (continued)

4. Select **Picture & Video** or **Sound**.
5. Add an image, video, or sound file.
6. Select **Message**.
7. Enter the message text and press [OK/⏏].
8. Press <**Options**> and select **Send**.
9. Enter destination numbers or addresses.
10. Press [OK/⏏] to send the message.

Send an e-mail

1. In Idle mode, press <**Menu**> and select **Messages** → **Create new message** → **Email**.
2. Select **Subject**.
3. Enter the e-mail subject and press [OK/⏏].
4. Select **Message**.
5. Enter the e-mail text and press [OK/⏏].
6. Select **File attach**.
7. Add image, video, sound, music files, or document files.
8. Press <**Options**> and select **Send**.
9. Enter destination addresses.
10. Press [OK/⏏] to send the e-mail.

View messages

View a text message

When a notification appears:

1. Press <**View**>.
2. Select the message from the Inbox.

From the Inbox:

1. In Idle mode, press <**Menu**> and select **Messages** → **My messages** → **Inbox**.
2. Select an SMS message.

View a multimedia message

When a notification appears:

1. Press <**View**>.
2. Select the message from the Inbox.

From the Inbox:

1. In Idle mode, press <**Menu**> and select **Messages** → **My messages** → **Inbox**.
2. Select an MMS message.

View an e-mail

1. In Idle mode, press <**Menu**> and select **Messages** → **My messages** → **Email box**.
2. Select **Check new mail**.
3. Select an e-mail or a header.
4. If you selected a header, press <**Options**> and select **Retrieve** to view the body of the e-mail.

Use SOS messages

Set up the SOS message feature

1. In Idle mode, press **<Menu>** and select **Messages** → **SOS message**.
2. When **Message sending** highlights, select **Yes** by pressing [Left] or [Right].
3. Select **Recipients**.
4. Enter destination numbers and press [OK/⏏].
5. Press **<Options>** and select **Save**.

Send an SOS message

In Idle mode, press [Volume] 4 times, with the phone closed. The preset SOS message will be sent to the designated recipients.

Use Bluetooth

Your phone is equipped with Bluetooth technology, enabling you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Turn on Bluetooth

In Idle mode, press **<Menu>** and select **Settings** → **Bluetooth** → **Activation** → **On**.

Search for and pair with a Bluetooth device

1. In Idle mode, press **<Menu>** and select **Settings** → **Bluetooth** → **My devices** → **Search new device**.
2. Select a device.

-
3. Enter a Bluetooth PIN or the other device's Bluetooth PIN, if it has one, and press **<OK>**. When the owner of the other device enters the same code, pairing is complete.

Send data

1. Access an application, **Phonebook**, **File manager**, or **Calendar**.
2. Select an item.
3. Press **<Options>** and select **Send via** → **Bluetooth**.
4. Select a device.
5. If necessary, enter the Bluetooth PIN and press **<OK>**.

Receive data

To receive data via Bluetooth, your phone's Bluetooth feature must be active and its visibility must be enabled.

If necessary, press **<Yes>** to confirm that you are willing to receive.

Watch the phone display on a TV

You can view the display of your phone on a screen by connecting the phone and TV with a TV out cable. This enables you to enjoy the photos, videos and music stored in the phone's memory with your family or friends on a larger screen.


Important TV information

- Depending on your particular TV model, the location and shape of the video input and audio output ports may vary. Match cable connector and TV port colours.
- Depending on the video system, the image may vibrate or in some other way be less than optimal.
- Depending on the image or video quality, some image or video files may not display.

- You cannot use the Bluetooth stereo headset or the zooming feature in TV Out mode.
- When you receive a call while in TV Out mode, the phone will not display the caller's information and will play the default ringtone, not the specified call ringer, to protect the other person's privacy.

Transfer phone display to a TV

1. With the TV switched on, connect your phone to the TV with a TV out cable, as shown.

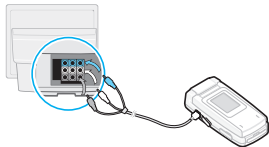

2. Switch the TV to External Input mode.
The display switches to TV Out mode and you can view the phone's display on the TV screen.
3. If necessary, set the video system for your TV in the **TV-out** menu. ▶ p. 90
4. Access the application you want and open files.

Use a memory card

You can use an optional microSD memory card to enlarge your phone's memory capacity.

Important memory card information

- Frequent erasing and writing will shorten a card's lifespan.
- Removing the card from the phone or turning the phone off while data is being accessed or transferred may result to loss of data and/or damage to the card or phone.
- Do not subject cards to strong shocks.
- Do not touch card terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

- Keep cards away from small children or pets.
- Do not expose cards in a place subject to electrostatic discharge and/or electrical noise.

Insert a memory card

1. Slide a memory card into the memory card slot, with the label side face down.
2. Press the card until it locks into place.

Use a card adapter

Using a card adapter and a USB card reader/writer, you can read the card on a computer.

1. Insert a memory card into a card adapter, and then the adaptor into a card reader/writer.
2. Plug the USB connector of the adapter into the USB port on your computer.
3. Access the appropriate memory disk and copy to and from the card.
 - If a file name is more than 47 characters, the file will not display on your phone. The number of characters is subject to change depending on the language or symbols you use.

Enter text

T9, ABC, Number, and Symbol modes

You can enter text for some features, such as Messages, Phonebook, or Calendar, using ABC mode, T9 mode, Number mode, and Symbol mode.

Changing the text input mode

- Press the right soft key to switch to Number mode, Symbol mode, ABC mode, or T9 mode.
- Press and hold [#] to move between Number mode and ABC or T9 mode.
- Press and hold [*] to switch to Symbol mode.

Using T9 mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes.

Entering a word in T9 mode

1. Press [2] to [9] to start entering a word. Press each key once for each letter.

Example: Press [4], [3], [5], [5], and [6] to enter *Hello*.

T9 predicts the word that you are typing, and it may change with each key that you press.

2. Enter the whole word before editing or deleting the characters.
3. When the word displays correctly, go to step 4. Otherwise, press [0] to display alternative word choices for the keys that you have pressed. For example, *Of* and *Me* use [6] and [3].
4. Press [#] to insert a space and enter the next word.

Other T9 mode operations

- Press [**1**] to enter periods or apostrophes automatically.
- Press [*****] to change case. Lower Case (No indicator), Initial capital (**↑**), and Capital lock (**⬆**) are available.
- Press [**#**] to insert a space.
- Press the Navigation keys to move the cursor.
- Press [**C**] to delete characters one by one. Press and hold [**C**] to clear the entire display.

Adding a new word to the T9 dictionary

This feature may not be available for some languages.

1. Enter the word that you want to add.
2. Press [**0**] to display alternative words for your key presses. When there are no more alternative words, **Spell** displays on the bottom line.
3. Press **<Spell>**.
4. Enter the word you want using ABC mode and press **<OK>**.

Using ABC mode

Press the appropriate key until the character you want appears on the display.

Key	Characters in order displayed	
	Upper case	Lower case
1	: ; ¿ ¡ 1 = " /	. , ? ! 1 - ' @ :
2	A B C 2 Ä Æ Å Γ	a b c 2 à ä æ å Ç
3	D E F 3 É Δ	d e f 3 é è
4	G H I 4 Θ	g h i 4 ì
5	J K L 5 Λ	j k l 5
6	M N O 6 Ñ Ö Ø Æ	m n o 6 ñ ò ö ø
7	P Q R S 7 Π Σ	p q r s 7 β
8	T U V 8 Û Φ	t u v 8 ù ü
9	W X Y Z 9 Ψ Ω	w x y z 9
0	0 * < > % # £	0 + () & _ \$

Other ABC mode operations

- To enter the same letter twice or to enter a different letter on the same key, wait for the cursor to move to the right automatically or press [Right]. Then, enter the next letter.
- Press [*] to change case. Lower Case (No indicator), Initial capital (▲), and Capital lock (▲) are available.
- Press [#] to insert a space.
- Press the Navigation keys to move the cursor.
- Press [C] to delete characters one by one. Press and hold [C] to clear the display.

Using Number mode

Number mode enables you to enter numbers.

Press the keys corresponding to the digits you want.

Using Symbol mode

Symbol mode enables you to insert symbols.

To	Press
display more symbols	[Up] or [Down].
select a symbol	the corresponding number key.
clear the entered symbols	[C].
insert the symbols	<OK>.

Call functions

Advanced calling features

Making a call

1. In Idle mode, enter the area code and phone number.
2. Press [↵].

- ✓ • Press [C] to clear the last digit or press and hold [C] to clear the whole display. You can move the cursor to edit an incorrect digit.
- Press and hold [*] to enter a pause between numbers.

Making an international call

1. In Idle mode, press and hold [0]. The + character appears.
2. Enter the country code, area code, and phone number, then press [↵].

Redialling recent numbers

1. In Idle mode, press [↵] to display the list of recent numbers.
2. Scroll to the number you want and press [↵].

Making a call from Phonebook

Once you have stored a number in Phonebook, you can dial the number by selecting it from Phonebook.


▶ p. 36

You can also use the speed dial feature to assign your most frequently called numbers to specific number keys. ▶ p. 39

You can quickly dial a number from the SIM card using its location number assigned when stored.

1. In Idle mode, enter the location number for the phone number you want and press [#].
2. Press [Left] or [Right] to scroll through other numbers.
3. Press <Dial> or [↵] to dial the number you want.

Ending a call



Close the phone or press [].

Answering a call

When you receive an incoming call, the phone rings and displays the incoming call image.


Press <Accept> or [] to answer the call.

Tips for answering a call

- When **Anykey answer** is active, you can press any key, except <Reject> and []. ▶ p. 88
- When **Active folder** is active, you can simply open the phone. ▶ p. 88
- Press <Reject> or [] to reject a call.
- Press and hold [Volume] to reject a call or mute the call ringer, depending on the **Volume key** setting. ▶ p. 87

Viewing missed calls

If you have missed calls, the screen displays how many calls you have missed.

1. Press <View>.
2. If necessary, scroll through the missed calls.
3. Press [] to dial the number you want.

Using the headset

Use the headset to make or answer calls without holding the phone.

Connect the headset to the jack on the left side of the phone. The button on the headset works as follows:

To	Press
redial the last call	the button and then press and hold it again.
answer a call	and hold the button.
end a call	and hold the button.

Options during a call

You can access a number of functions during a call.

Adjusting the volume during a call

Use [Volume] to adjust the earpiece volume during a call.

Press [Volume up] to increase the volume level and [Volume down] to decrease the volume level.

Placing a call on hold/Retrieving

Press <Hold> or <Retrieve> to place a call on hold or retrieve the call.

Making a second call

You can make another call if your network supports it.

1. Press <Hold> to put the call on hold.
2. Make the second call in the normal way.
3. Press <Swap> to switch between the calls.
4. Press <Options> and select **End held call** to end the call on hold.

5. To end the current call, press [⏏].

Answering a second call

You can answer an incoming call while already on the phone, if your network supports it and you have activated the call waiting feature. ▶ p. 92

1. Press [↶] to answer the call. The first call is automatically put on hold.
2. Press <Swap> to switch between the calls.
3. Press <Options> and select **End held call** to end the call on hold.
4. To end the current call, press [⏏].

Using the speakerphone feature

Use the phone as a speakerphone to talk and listen with the phone a short distance away.

Press [OK/⏏] to activate the speakerphone feature. Press [OK/⏏] again to switch back to the earpiece.

Using In-call options

Press <**Options**> to access the following options during a call:

- **Voice clarity on/Voice clarity off:** remove extraneous noise and increases call quality so that the person with whom you are speaking can hear you clearly even if you are in a noise place.
- **Mute/Unmute:** switch off the phone's microphone so that the other person on the phone cannot hear you, or switch it back on.
- **Mute keys/Send keys:** switch the key tones off or on.



To communicate with answering machines or computerised telephone systems, **Send keys** must be selected.

- **Phonebook:** access the contact list.

- **Send DTMF:** send the DTMF (Dual tone multi-frequency) tones as a group. The DTMF tones are the tones used in phones for tone dialling, sounding when you press the number keys. This option is helpful for entering a password or an account number when you call an automated system, like a banking service.
- **Message:** create a new SMS message or access the messages in the Inbox.
- **Join:** set up a multi-party call by adding a caller on hold to a currently active call. You can include up to five people on a multi-party call.
- **Split:** have a private conversation with one multi-party call participant. The other participants can converse with each other. After the private conversation, select **Join** to return both all private participants to the multi-party call.
- **Transfer:** transfer the currently active call to a caller on hold. The two callers can talk to each other but you are disconnected from the call.

- **Remove:** disconnect one multi-party call participant.
- **End held call:** disconnect the call currently on hold.
- **SIM service:** access special services, such as news, weather forecasts, entertainment, and location services, provided by your SIM card. This option is available when you use a SIM card supporting SIM Application Toolkit menus.
- **Switch to headset/Switch to phone:** switch the call to a Bluetooth stereo headset or hands-free car kit or back to the phone.

Menu functions

All menu options listed

Call records *(Menu 1)*

Use this menu to view the calls you have dialed, received, or missed, and the length of the calls. You can also check the cost of your calls, if your SIM card supports this function.

To access this menu, press <**Menu**> in Idle mode and select **Call records**.

Recent contacts *(Menu 1.1)*

This menu displays the most recent calls dialed, received, or missed.

Accessing a call record

1. Press [Left] or [Right] to move to another call type.
2. Press [Up] or [Down] to scroll through the call list.

3. Press [OK/ⓘ] to view the details of a call, or press [↶] to dial a number.

Using call record options

While viewing call details, press <Options> to access the following options:

- **Save as contacts:** save the number to Phonebook.
- **Send message:** send an SMS or MMS message to the selected number.
- **Delete:** delete the selected call record or all records.

Missed calls *(Menu 1.2)*

This menu displays the most recent calls you did not answer.

Dialled calls *(Menu 1.3)*

This menu displays the most recent calls you have dialled.

Received calls *(Menu 1.4)*

This menu displays the most recent calls you have received.

Delete all *(Menu 1.5)*

Use this menu to delete all of the records in each call type.

1. Press [OK/ⓘ] to select the call types to be cleared.
2. Press <Delete>.
3. Press <Yes> to confirm the deletion.

Call time *(Menu 1.6)*

This menu displays the time log for calls made and received. The actual time invoiced by your service provider will vary.

- **Last call time:** check the length of your last call.
- **Total sent:** check the total length of all the calls you have dialled.
- **Total received:** check the total length of all the calls you have received.

- **Reset timers:** reset the call timers. You need to enter the phone password.

The password is preset to **00000000**. You can change this password. ▶ p. 96

Call costs (Menu 1.7)

This network feature displays the cost of calls. This menu is available only if supported by your SIM card. Note that this is not intended to be used for billing purposes.

- **Last call cost:** check the cost of your last call.
- **Total cost:** check the total cost of all of your calls. If the total cost exceeds the maximum cost set in **Set max cost**, you must reset the counter before you can make another call.
- **Max cost:** check the maximum cost limit set in **Set max cost**.
- **Reset counters:** reset the cost counters.
- **Set max cost:** set the maximum cost authorised for your calls.

- **Price/Unit:** set the price per unit that is applied when the cost of your calls is calculated.

Phonebook (Menu 2)

You can store phone numbers on your SIM card and in your phone's memory. The SIM card and phone's memory are physically separate, but they are used as a single entity called Phonebook.

To access this menu, press <**Menu**> in Idle mode and select **Phonebook**.

Contact list (Menu 2.1)

Use this menu to search for numbers in Phonebook.

Finding an entry

1. Enter the first few letters of the name that you want to find.
2. Select the name from the list.
3. Scroll to a number, and press [↵] to dial or press [OK/⌂] to edit contact information.

Using Phonebook options

While viewing contact details, press <**Options**> to access the following options:

- **Edit:** edit contact information.
- **Send message:** send an SMS or MMS message to the selected number, or an e-mail to the selected e-mail address.
- **Copy:** copy the selected number to the phone's memory, SIM card, or FDN list.
- **Copy to phone:** copy the selected e-mail address to the phone's memory.
- **Send via:** send the contact via SMS, MMS, e-mail, or Bluetooth.
- **Delete:** delete the contact.
- **Print via Bluetooth:** print contact information via a Bluetooth-compatible printer.

FDN list *(Menu 2.2)*

Use this menu to create a list of contacts to be used in FDN (Fixed Dialling Number) mode, in which the phone allows outgoing calls only to the specified phone numbers, if your SIM card supports this feature. You can activate FDN mode in the **FDN mode** menu. ▶ p. 97

Adding a contact

1. From the FDN list screen, press <**Options**> and select **Add**.
2. Enter your PIN2 and press <**OK**>.
3. Enter information about the contact.
 - **Name:** assign a name.
 - **Phone number:** enter a number.
 - **Location:** assign a location number.
4. Press <**Save**> to save the contact.

Using contact options

You can access contact options by pressing <**Options**> while viewing contact details. Refer to "Using Phonebook options."

Add new contact (Menu 2.3)

Use this menu to add a new contact to Phonebook.

Storing a number in the phone's memory

1. Select **Phone**.
2. Change the settings or enter information about the contact.
 - **First name/Last name**: assign a name.
 - **Mobile/Home/Office/Fax/Other**: add a number in any type.
 - **Email**: assign an e-mail address.
 - **Graphic ID**: assign an image to alert you to a call from the person.
 - **Ringtone**: assign a ringtone to alert you to a call from the person.
 - **Group**: assign the contact to a caller group.
 - **Notes**: add a memo about the person.
3. Press [OK/⏏] to save the contact.

Storing a number on the SIM card

1. Select **SIM**.
2. Enter information about the contact.
 - **Name**: assign a name.
 - **Phone number**: enter a number.
 - **Location**: assign a location number.



To assign a caller ID image, ringtone, or group, the contact must be saved to the phone's memory.

3. Press [OK/⏏] to save the contact.

Group (Menu 2.4)

Use this menu to organise your contacts in caller groups.

Adding members to a caller group

1. Select a group.
2. Press <Add>.
3. Press [OK/⏏] to select the contacts to be added.
4. Press <Add>.

Managing caller groups

While viewing the group list, press <**Options**> to access the following options:

- **View:** display the members of the selected group.
- **Add:** add a new group.
- **Edit:** change the group properties.
- **Send message:** send an SMS, MMS, or e-mail message to the group members you want.
- **Delete:** delete the selected group. Group members, however, will not be deleted from Phonebook.

Speed dial *(Menu 2.5)*

Use this menu to assign speed dial numbers (2 to 9) for 8 of your most frequently called numbers.

Assigning speed dial numbers

1. Select a key location from **2** to **9**. Key **1** is reserved for your voicemail server.
2. Select a contact from the contact list.
3. Select a number, if the contact has more than one number.

Managing speed dial entries

From the Speed dial screen, press <**Options**> to access the following options:

- **Add:** assign a number to an unassigned key.
- **View:** check the name and number assigned to a key.
- **Change:** assign a different number to a key.
- **Remove:** clear the speed dial setting for a key.

Dialling speed dial entries

In Idle mode, press and hold the appropriate key.

My name card *(Menu 2.6)*

Use this menu to create a name card and send it to other people.

Saving your name card

The procedure for creating your name card is the same as the one for saving a phone number in the phone's memory. ▶ p. 38

Using name card options

After saving your name card, press <**Options**> to access the following options:

- **Edit:** edit the name card.
- **Send via:** send the name card via SMS, MMS, e-mail, or Bluetooth.
- **Exchange namecard:** exchange name cards with another person via Bluetooth.
- **Remove:** delete the name card.
- **Print via Bluetooth:** print your contact information via a Bluetooth-compatible printer.

Own number *(Menu 2.7)*

Use this feature to check your phone numbers, or to assign a name to each of the numbers. Changes made here do not affect the actual subscriber numbers on your SIM card.

Management *(Menu 2.8)*

Use this menu to manage Phonebook entries.

- **Default saving:** select a default memory location to save contacts. If you select **Ask on saving**, the phone will ask you to select a memory location each time you save a number.
- **Copy all to phone:** copy all of the contacts stored on the SIM card to the phone's memory.
- **Sort by contacts:** change the sort order of the contact list.
- **Delete all:** delete all of the contacts from your phone's memory, SIM card, or FDN list.
- **Memory status:** check the number of contacts you have stored in the phone's memory, SIM card, and FDN list.

Service number *(Menu 2.9)*

Use this menu to view the list of Service Dialling Numbers (SDN) assigned by your service provider, including emergency numbers and numbers for directory enquiries. This menu is available if your SIM card supports SDN.

1. Scroll to the number you want and press <**View**>.
2. Press <**Dial**> or [**↵**].

Applications (Menu 3)

Use this menu to play music files, to record voice memos, to edit photos, to play Java games, and to set time zones and alarms. You can also use the phone as a calculator, convertor, timer, and stopwatch.

To access this menu, press **<Menu>** in Idle mode and select **Applications**.

MP3 player (Menu 3.1)

Use this menu to enjoy music. First, you need to save MP3 files in your phone's memory.

To enjoy high quality music, you can use an optional Bluetooth stereo headset.

Normal headsets are not compatible with the MP3 player.

Downloading or receiving music files

Use the following methods to save music files to your phone's memory:

- Download from the wireless web ▶ p. 50

- Download from a computer using the optional Samsung PC Studio ▶ Samsung PC Studio User's Guide
- Receive via an active Bluetooth connection ▶ p. 93
- Copy to a memory card and insert the card into the phone. ▶ p. 25

The downloaded or received files are stored in the **Music** folder. ▶ p. 72

Creating a play list

1. From the MP3 player screen, press **<Options>** and select **Add music from** → **Phone** or **Memory card**.
2. Press [**OK/⌂**] to select the files to be added.
3. Press **<Add>**.

Playing music files

1. From the MP3 player screen, press **<Options>** and select **Play via**.
2. Select **Phone** to use the phone speaker.

Select **A/V headset** to use a Bluetooth stereo headset and then search for and connect the phone to the headset.

During playback, use the following keys:

Key	Function
OK/ i	Pauses or resumes playback.
Left	Returns to the previous file. Moves backward in a file when held down.
Right	Skips to the next file. Skips forward in a file when held down.
Up	Opens the play list of the current album.
Volume	Adjusts the volume.
Down	Stops playback.
1	Changes the equaliser mode.
2	Changes the playback animation.
3	Changes the repeat mode.

Key	Function
4	Turns 3D sound on or off.
5	Changes the skin type.
6	Turns Shuffle mode on or off.
7	Marks the beginning and ends of the section you want to repeat. ▶ p. 43

Using MP3 player options

During playback, press <**Options**> to access the following options:

- **Pause/Play:** pause or resume playback.
- **Transfer to A/V headset:** switch the sound output to a Bluetooth stereo headset.
- **Open:** access the play list of the current album, or album list. On the album list, you can set up multiple albums.
- **Remove from play list:** remove the selected file from the play list.

- **Settings:** change the default settings for playing music files.
Repeat: select a repeat mode.
Shuffle: set the MP3 player to play music at random.
Equalise: select an equaliser setting.
3D sound: turn 3D sound on or off.
Visualization: change the playback animation.
MP3 skin: select a skin type.
Volume: select a volume level.
- **Properties:** access the file properties.

Repeating a section of a track

You can select a section of the playing file and repeat the section indefinitely.

1. During playback, press [**7**] to mark the beginning of the section you want to repeat.
The marked section is coloured in the playback progress bar.

2. Press [**7**] again to mark the end of the section you wish to repeat. The player repeats the marked section.
3. To stop repeating, press [**7**].

Accessing the play list

From the MP3 player screen, press [Up].

Press <**Options**> to access the following options:

- **Play via:** play the currently selected file.
- **Add music from:** add files to the play list.
- **Go to Album list:** access the album list.
- **Move to:** move the selected file to another album.
- **Copy to:** copy the selected file to another album.
- **Change order:** move the selected file to the position you want within the play list.
- **Remove:** remove the selected file or all files from the play list.
- **Properties:** access the file properties.

Voice recorder (Menu 3.2)

Use this menu to record voice memos. A voice memo can be up to one hour long.

Recording a voice memo

1. Press [OK/⏏] to start recording.
2. Speak into the microphone.
Press [OK/⏏] to pause or resume the recording.
3. Press <Save> or [Down] to end recording. The voice memo is saved automatically.
4. Press [OK/⏏] to review the voice memo, or press [Up] to record a new voice memo.

Playing a voice memo

1. From the Voice recorder screen, press <Options> and select **Go to voice list**.
2. Select a voice memo.

During playback, use the following keys:

Key	Function
OK/⏏	Pauses or resumes playback.

Key	Function
Left	Moves backward in a memo.
Right	Skips forward in a memo.
Volume	Adjusts the volume.
Down	Stops playback.

Changing voice recorder settings

You can change the default settings for the voice recorder. Before recording a voice memo, press <Options> and select **Settings** to access the following options:

- **Recording time:** select a recording time.
1 hour: record a voice memo of up to one hour.
Limit of MMS: record a voice memo for adding to an MMS message.
- **Volume:** select a volume level.
- **Default name:** change the default prefix for file names.
- **Visualization:** select a playback animation.

Image editor (Menu 3.3)

Use this menu to edit your photos using various editing tools.

Applying an effect

1. Press <**Options**> and select **New image** → **Open** or **Take a photo**.
2. Select a photo or take a new photo, and press <**Load**>.
3. Press <**Options**> and select **Effects** → an effect option.
4. Press <**Done**>.
5. Press <**Options**> and select **Save as**.
6. Press <**Yes**>.
7. Enter a new file name and press [OK/⏎].

Transforming

1. Select a photo or take a new photo, and press <**Load**>.
2. Press <**Options**> and select **Transform** → an option:

- **Rotate**: rotate the photo 90 degrees.
 - **Flip**: flip the photo.
3. Press the Navigation keys to rotate or flip the photo.
 4. Press <**Done**>.
 5. Press <**Options**> and select **Save as**.
 6. Press <**Yes**>.
 7. Enter a new file name and press [OK/⏎].

Adjusting an effect

You can adjust the brightness, contrast, or colour.

1. Select a photo or take a new photo, and press <**Load**>.
2. Press <**Options**> and select **Adjust** → an effect.
3. Press [Left] or [Right] to adjust the effect.
4. Press <**Done**>.
5. Press <**Options**> and select **Save as**.
6. Press <**Yes**>.
7. Enter a new file name and press [OK/⏎].

Adding visual features

You can decorate photos by adding a frame or an image.

1. Select a photo or take a new photo, and press **<Load>**.
2. Press **<Options>** and select **Insert** → a feature type.
3. Select an item to be inserted.
4. Adjust the position of the inserted item and press **<Done>**.
5. Press **<Options>** and select **Save as**.
6. Press **<Yes>**.
7. Enter a new file name and press [OK / **i**].

Java world *(Menu 3.4)*

Use this menu to access the embedded Java games and to change the network settings required for accessing Java services.

Accessing an embedded game

Select a game from the game list and follow the onscreen instructions. The procedure may differ from game to game.

Using Java application options

From the application list, press **<Options>** to access the following options:

- **Start:** launch the application.
- **Delete:** delete the application.
- **Properties:** access the application properties.
- **Permission:** set permission settings for services charging you additional costs, such as network access and SMS.
- **Upgrade:** upgrade the application to the latest version.
- **Send information via SMS:** send the URL containing the application via SMS.
- **Memory status:** access memory information for applications.

- **Network settings:** set up a connection profile to be used for applications requiring network access.

APN: enter the access point name.

Login ID: enter the login ID.

Password: enter the login password.

Proxy: activate or deactivate the proxy server. Depending on this setting, options in **Proxy settings** vary.

Proxy settings: provide you with the following options:

*When the proxy is set to **Enable**:*

- **IP address:** enter the IP address of the proxy server.
- **Port:** enter the port number of the proxy server.

*When the proxy is set to **Disable**:*

- **DNS1:** enter the primary DNS address.
- **DNS2:** enter the secondary DNS address.

World time (Menu 3.5)

Use this menu to find out what time it is in another part of the world.

Viewing world time

1. From the world map, press [Left] or [Right] to scroll to the city you want. As the time line moves, the time and date of the given zone display.
2. Press [OK/ⓘ] to save the city as your local time zone.

Applying daylight savings time

1. From the world map, press <Options> and select **Set daylight saving time**.
2. Press [OK/ⓘ] to select the time zones you want.
3. Press <Save>.

Alarm (Menu 3.6)

Use this menu to set alarms. The alert type for a normal alarm corresponds to the call alert type settings. A wake-up alarm is not affected by your sound setting.

Setting an alarm

1. Select the type of alarm.
2. Set each alarm option:
 - **Alarm**: activate the alarm.
 - **Alarm time**: enter the time for the alarm to sound.
 - **AP/PM**: select **AM** or **PM** in 12-hour format.
 - **Alarm day**: select the days on which the alarm sounds. If you select **Once alarm**, the alarm sounds at the specified time and then is deactivated.
 - **Alarm tone**: select an alarm tone.
3. Press <**Save**>.

Stopping an alarm

- For a non-wake-up alarm, press any key.
- For a wake-up alarm, press <**Confirm**> or [OK/⏏]. Press any key, except <**Confirm**> and [OK/⏏], to cause it to sound again after 5 minutes. You can do this a maximum of 5 times.

Deactivating an alarm

1. Select the alarm you want to deactivate.
2. Select **Off** on the **Alarm** line.
3. Press <**Save**>.

Setting an alarm to sound even if the phone is off

From the Alarm screen, select **Auto power** → **On**.

If the phone is off when it is time for the alarm to ring, the phone switches on and sounds the alarm.

Calculator *(Menu 3.7)*

Use this menu to perform basic arithmetic functions such as addition, subtraction, multiplication, and division.

1. Enter the first number.
 - Press <.(.)> to insert a decimal point or bracket.
 - Press [*] or [#] to move the cursor.
2. Press one of the Navigation keys to access the math function you want.

3. Enter the second number.
4. Press [OK/↵] to view the result.
5. If necessary, repeat from step 2 to continue the calculation.

Convertor (Menu 3.8)

Use this menu for common conversions, such as currency and temperature.

Performing a conversion

1. Select a convertor.
2. Press [Left] or [Right] to select the original unit and press [Down].
3. Enter the value to be converted and press [Down].
 - Press [✖] to insert a decimal point.
 - Press [#] to change the temperature to above zero (+) or below zero (-).
4. Press [Left] or [Right] to select the unit to which you want to convert.
The equivalent value for the amount you entered displays.

Using convertor options

Press <Options> to access the following options:

- **Clear:** clear the current values.
- **Reverse:** reverse the conversion.
- **Currency rates:** view the currency rate list.

Timer (Menu 3.9)

Use this menu to set a period of time for the phone to count down. The phone will sound an alarm when the specified period of time has expired.

Starting the timer

1. Press <Set>.
2. Enter the length of time you want to count down and press <OK>.
3. Press [OK/↵] to start counting down.

Stopping the timer

- Press any key when the timer sounds.
- Press [OK/↵] on the Timer screen before the timer sounds.

Stopwatch (Menu 3.10)

Use this menu to measure elapsed time. The maximum time is 10 hours.

1. Press [OK/⏏] to start the timer.
2. Press [OK/⏏] to check an interval. You can repeat this step for a total of 4 intervals.

SIM AT (Menu 3.11)

This menu is available if you use a SIM AT card that supports SIM Application Toolkit menus and provides additional services, such as news, weather, sports, entertainment, and location services. Available services may vary, depending on your service provider's plans. For details, see your SIM card instructions or contact your service provider.

Browser (Menu 4)

The Wireless Application Protocol (WAP) browser on your phone allows you to access the wireless web. From the wireless web, you can access up-to-date information and a wide variety of media content, such as games, wallpapers, ringtones, and music files.

To access this menu, press <Menu> in Idle mode and select **Browser**.

Home (Menu 4.1)


Use this menu to connect your phone to the network and load the homepage of the wireless web service provider. You can also press [OK/⏏] in Idle mode.

Navigating the web browser

To	Press
scroll through browser items	[Up] or [Down].
scroll page by page	[Volume].
select a browser item	< ✓ >.

To	Press
return to the previous page	< Back > or [C].

Using browser menu options

From any web page, press <**Menu**> and select **Menu**, or select  on the top of the screen to access the following options:


- **Back:** return to the previous page.
- **Home:** return to the homepage.
- **Exit:** exit the browser.
- **Reload:** reload the current page with updated information.
- **Show URL:** display the URL address of the current page. You can also set the current page as the homepage for the web browser.
- **About...:** access version and copyright information about the browser.

Accessing other phone menus

From any web page, press [#] to access the following options:

- **Go to URL:** enter a URL address manually.
- **Bookmarks:** access the bookmark list.
- **Messages:** access the messages you have received. You can also create and send a new SMS message.
- **File manager:** access the **File manager** menu.

Exiting the browser

Press [] to end the network connection and exit the browser.

Bookmarks (Menu 4.2)

Use this menu to save URL addresses in order to quickly access web pages.

Adding a bookmark

1. Select an empty location.
2. Enter a name for the bookmark and press [Down].
3. Enter a URL address and press [OK/↓].

Accessing a bookmarked page

Selecting a bookmark item launches the web browser and accesses the associated web page.

Using bookmark options

After saving an item, press **<Options>** to access the following options:

- **Go:** access the bookmarked web page.
- **Edit:** edit the URL address and name of the bookmark.
- **Delete:** delete the selected bookmark or all bookmarks.

Go to URL (Menu 4.3)

Use this menu to manually enter a URL address and access the associated web page.

Clear cache (Menu 4.4)

Use this menu to clear information stored in the cache. A cache is a temporary memory that stores recently accessed web pages.

Profile settings (Menu 4.5)

Use this menu to set up a connection profile to be used for accessing the wireless web. Contact your service provider for details about your setting options.

For each profile, the following options are available:

- **Profile name:** enter a profile name.
- **Home URL:** enter the URL address of the page to be used as your homepage.
- **Bearer:** select the network bearer type.
- **Proxy:** activate or deactivate the proxy server.
- **GPRS settings:** customise the following GPRS network settings:

*When the proxy is set to **Enable**:*

Proxy IP: enter the IP address of the proxy server.

Proxy port: enter the port number of the proxy server.

APN: enter the access point name.

Login ID: enter the login ID.

Password: enter the login password.

When the proxy is set to **Disable**:

DNS1: enter the primary DNS address.

DNS2: enter the secondary DNS address.

APN: enter the access point name.

Login ID: enter the login ID.

Password: enter the login password.

- **GSM settings**: customise the following GSM network settings:

When the proxy is set to **Enable**:

Proxy IP: enter the IP address of the proxy server.

Proxy port: enter the port number of the proxy server.

Dial number: enter the PPP server phone number.

Login ID: enter the login ID.

Password: enter the login password.

Data call type: select a call type for data transmission.

When the proxy is set to **Disable**:

DNS1: enter the primary DNS address.

DNS2: enter the secondary DNS address.

Dial number: enter the PPP server phone number.

Login ID: enter the login ID.

Password: enter the login password.

Data call type: select a call type for data transmission.

Current profile (Menu 4.6)

Use this menu to select a connection profile to be used for accessing the wireless web.

Messages (Menu 5)

Use the **Messages** menu to send and receive text messages, multimedia messages, and e-mails. You can also use push message, voicemail, Cell broadcast message, and SOS message features.

To access this menu, press <**Menu**> in Idle mode and select **Messages**.

Create new message (Menu 5.1)

Use this menu to create and send messages.

Text message (Menu 5.1.1)

Short Message Service (SMS) allows you to send or receive text messages that may include simple pictures, animated images, and melodies.

1. Enter your message.



The maximum number of characters allowed in a message varies by service provider. If your message exceeds the maximum number of characters, the phone will split the message.

2. Press **<Options>** to access the following options:

- **Send only:** send the message.
- **Save and send:** save a copy of the message in **Sentbox** and send the message.
- **Insert:** insert a template, Phonebook entry, or bookmark into text.
- **Add picture/Add animation/Add melody:** add a simple image, animated image, or a melody.

- **Attach:** attach a Phonebook entry as a name card or calendar data as a data format attachment.
- **Save to:** save the message in the **Draft** or **My folder** box.
- **Language select:** change the language used in T9 input mode.
- **Text style:** change the text attributes.

3. When you have finished, press **<Options>** and select **Send only** or **Save and send**.

4. Enter a destination number.

To send the message to more than one recipient, fill in the destination fields.

5. Press [**OK/↓**] to send the message.

Multimedia message (Menu 5.1.2)

Multimedia Message Service (MMS) delivers messages containing a combination of text, image, video, and audio, from phone to phone or from phone to e-mail.

1. Select the **Subject** line.

2. Enter the message subject and press [**OK/↓**].

3. Select the **Picture & Video** or **Sound** line and add an image, a video, or a sound file.

- The maximum size allowed for a message can differ depending on your service provider.
- Depending on the file type or DRM (Digital Rights Management) system, some files may not be able to be forwarded.

4. Select the **Message** line.

5. Enter the message text and press [OK/↵].

6. Press <**Options**> to access the following options:

- **Edit**: edit the subject or text of your message.
- **Change image/Change video/Change sound**: change an added item.
- **Add image/Add video**: add an image or video.
- **Preview**: view the message as it will be shown on the recipient's phone.
- **Send**: send the message.
- **Save to**: save the message in the **Draft** or **My folder** box, or save it as a template in the **MMS Template** folder.

- **Add page**: add pages. Move to each page by pressing [Left] or [Right] on the message screen.
- **Delete page**: delete the added page.
- **Edit page**: change the duration of page display or move the forward or backward among the other pages.
- **Attach**: attach a Phonebook entry as a name card, calendar data as a data attachment, or a document files stored in the **Other files** folder.
- **Remove subject/Remove media/Remove sound/Remove message**: remove an added item.

7. When you have finished, press <**Options**> and select **Send**.

8. Enter a phone number or e-mail address.

To send the message to more than one recipient, fill in additional destination fields.

9. Press [OK/↵] to send the message.

Email (Menu 5.1.3)

You can send and receive e-mails that include text, audio, and images. To use this feature, you need to subscribe to an e-mail service and set up your e-mail account and profile. ► p. 66

1. Select the **Subject** line
2. Enter the subject of your e-mail and press [OK/⏏].
3. Select the **Message** line
4. Enter the e-mail text and press [OK/⏏].
5. Select the **File attach** line and access the following options:
 - **Add image/Add videos/Add sounds/Add music/Add other files:** add images, videos, sounds, music files, or document files.
 - **Add from memory card:** access a memory card, if inserted into the phone, and add files.
 - **Send:** send the message.
 - **Save to:** save the message in the **Draft** or **My folder** box.
 - **Attach:** add Phonebook entries as name cards or calendar items.

6. After adding items, press <**Options**> to access the following options:
 - **Edit:** edit the subject or text.
 - **View:** display or play the attached file.
 - **Add image/Add videos/Add sounds/Add music/Add other files:** add images, videos, sounds, music files, or document files.
 - **Add from memory card:** access a memory card, if inserted into the phone, and add files.
 - **Send:** send the message.
 - **Save to:** save the message in the **Draft** or **My folder** box.
 - **Attach:** add Phonebook entries as name cards or calendar items.
 - **Remove subject/Remove message:** clear the subject or text.
 - **Remove:** delete the selected attachment or all attachments.
 - **Remove all attachments:** delete all attachments.
7. When you have finished, press <**Options**> and select **Send**.

8. Enter an e-mail address.

To send the e-mail to more than one recipient, fill in additional destination fields.

9. Press [OK/↵] to send the e-mail.

My messages *(Menu 5.2)*





Use this menu to access messages you have received, sent, or which have failed in sending.

Inbox *(Menu 5.2.1)*

This folder stores all of the messages you have received, except for e-mails.

Viewing a message

The following icons may appear on the message list to show the message type:

-  SMS
-  MMS notification
-  MMS
-  Push message from the web servers/
Configuration message, containing network parameters from your service provider



- According to the DRM (Digital Rights Management) system, messages having web content may not be able to be forwarded.
- A ! icon next to a message means that the message is of high priority. A grey-coloured message icon indicates low priority.

Using message options

While viewing a message, press <**Options**> to access the following options:

SMS messages

- **Reply via:** reply to the sender via SMS or MMS.
- **Forward:** forward the message to other people.
- **Delete:** delete the message.
- **Move to phone/Move to SIM:** move the message between the SIM card and the phone's memory.
- **Add to block list:** add the sender's number to the Block list to reject the messages from the sender.
- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.

- **Cut media:** save media content from the message to your phone's memory.
- **Print via Bluetooth:** print the message via a Bluetooth-compatible printer.
- **Protection:** protect the message from being deleted. You can protect only those messages stored in the phone's memory.

MMS notifications/MMS messages

- **Retrieve:** retrieve the MMS message from the MMS server.
- **Reply via SMS:** reply to the sender via SMS.
- **Reply via MMS to:** reply to the sender via MMS.
- **Forward:** forward the message to other people.
- **Delete:** delete the message.
- **Add to block list:** add the sender's number to the Block list to reject the messages from the sender.
- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.

- **Cut media:** save media content from the message to your phone's memory.
- **Properties:** access the message properties.

Push messages

- **Go to URL:** connect to the URL specified in the message.
- **Delete:** delete the message.
- **Cut address:** extract URL, e-mail addresses, or phone numbers from the message.

Delivery report

- **Delete:** delete the message.

Configuration messages

- **Install:** apply the configuration specified in the message to your phone.
- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Print via Bluetooth:** print the message via a Bluetooth-compatible printer.
- **Delete:** delete the message.

Draft (Menu 5.2.2)

This folder stores messages you have saved to send at a later time.

While viewing the message list, press <**Options**> to access the following options:

- **View:** view the message.
- **Edit:** edit the message.
- **Send:** send the message.
- **Delete:** delete the selected message or all messages.
- **Move to my folder:** move the message to the **My folder** box.
- **Sort by:** change the sort order of messages.
- **Protection:** protect the message from being deleted.
- **Properties:** access the message properties.

Outbox (Menu 5.2.3)

This folder stores messages that the phone is attempting to send or has failed to send.

While viewing a message, press <**Options**> to access the following options:

- **Open file:** open the attached file.
- **Save file:** save the attached file in your phone's memory.
- **Send again:** resend the message.
- **Forward:** forward the message to other people.
- **Delete:** delete the message.
- **Move to phone/Move to SIM:** move the message between the SIM card and the phone's memory.
- **Print via Bluetooth:** print the message via a Bluetooth-compatible printer.
- **Protection:** protect the message from being deleted.
- **Properties:** access the message properties.

Sentbox (Menu 5.2.4)

This folder stores messages that you have sent.

While viewing a message, press <**Options**> to access the following options:

- **Open file:** open the attached file.
- **Save file:** save the attached file from the e-mail to your phone's memory.
- **Forward:** forward the message to other people.
- **Delete:** delete the message.
- **Move to phone/Move to SIM:** move the message between the SIM card and the phone's memory.
- **Print via Bluetooth:** print the message via a Bluetooth-compatible printer.
- **Protection:** protect the message from being deleted.
- **Properties:** access the message properties.




Email box (Menu 5.2.5)


This folder stores e-mails that you have received.

Viewing an e-mail

1. Press <**Select**> when **Check new mail** displays. The phone checks the e-mail server and downloads new e-mails.

The following icons may appear on the list to show the e-mail status:

-  Retrieved from the server
-  Being retrieved
-  Failed to retrieve

 A ! icon next to an e-mail means that the message is of high priority. A grey-coloured message icon indicates low priority.

2. Select an e-mail or a header.
3. Press [Volume] to view other pages in the e-mail.
Press and hold [Volume] to move to the first or last page.
4. Press [*] or [#] to scroll to the next or previous e-mail.

Using e-mail options

While viewing the e-mail or header, press <**Options**> to access the following options:

- **Retrieve:** retrieve the body of the e-mail from the e-mail server.
- **Open file:** open the attached file.
- **Save file:** save the attached file in your phone's memory.
- **Reply to:** send a reply to the sender or to the sender and all of the recipients.
- **Forward:** forward the e-mail to other people.
- **Delete:** delete the e-mail from the phone's memory or from both the phone's memory and the e-mail server.
- **Add to block list:** add the sender's e-mail address or subject to the Block list to reject e-mails from that address or containing that subject.
- **Cut address:** extract URL, e-mail addresses, or phone numbers from the e-mail.

- **Print via Bluetooth:** print the e-mail via a Bluetooth-compatible printer.
- **Protection:** protect the e-mail from being deleted.
- **Properties:** access the e-mail properties.

My folder (Menu 5.2.6)

Use this menu to access the messages you have moved using the **Move to my folder** option while viewing a message list.

Templates (Menu 5.3)

Use this menu to make and use templates of frequently used messages.

Text template (Menu 5.3.1)

You can create SMS templates with the sentences you use frequently so that you can retrieve and insert them when composing an SMS message.

Creating a template

1. Select an empty location.
2. Enter a message and press [OK/⌂].

Using template options

From the template list, press <**Options**> to access the following options:

- **Edit:** edit the template.
- **Send message:** create and send a new message using the template.
- **Delete:** delete the template.

MMS Template (Menu 5.3.2)

You can access embedded MMS templates or ones you have saved so that you can use them in composing an MMS message.

From the template list, press <**Options**> to access the following options:

- **View:** open the template.
- **Send message:** send a new message using the template.
- **Edit:** edit the template.
- **Add new:** add a new template.
- **Delete:** delete the selected template or all templates, except for embedded ones.

Delete all (Menu 5.4)

Use this menu to delete all messages in each message folder or message type at once.

1. Press [OK/⏏] to select the message folders or message types to be cleared.
2. Press <**Delete**>.
3. Press <**Yes**> to confirm the deletion.

Settings (Menu 5.5)

Use this menu to set up various options for using the messaging services.

Text message (Menu 5.5.1)

You can configure SMS settings.

- **Send settings:** set up the options for sending SMS messages:
 - Reply path:** allow recipients to reply to you through your SMS server.
 - Delivery report:** set the network to inform you when your messages have been delivered.

Validity period: set the length of time your messages are stored in the SMS server.

Message type: set the default message type. The network can convert messages into the selected format.

Service centre: store or change the number of your SMS server.

- **Block number:** store the phone numbers from which you want to reject messages.

Multimedia message (Menu 5.5.2)

You can configure MMS settings.

- **Send settings:** set up the options for sending MMS messages:
 - Delivery report:** set the network to inform you when your messages have been delivered.
 - Address hiding:** set your address to be hidden from the recipient's phone.
 - Read reply:** send a read-reply request along with your messages.
 - Priority:** set the priority level of messages.

Expiry date: set the length of time messages are stored in the MMS server.

Delivery after: set a time delay before messages are sent.

Send size: select a maximum size of attached items allowed for messages.

- **Receive settings:** set up the options for receiving MMS messages:

Anonymous reject: reject messages from unknown senders.

Advert allowed: accept advertisements.

Report allowed: set the network to inform the sender when a message has been delivered to you.

Home reception: determine if your phone retrieves new messages automatically when you are in your home service area.

Roaming reception: determine if your phone retrieves new messages automatically when you are roaming on another network.

Reception within home network or abroad has the following options:

- **Automatic:** the phone automatically retrieves messages from the server.
- **Reject:** the phone rejects all messages.
- **Manual:** the phone displays notifications. Use the **Retrieve** option to manually download new messages.
- **MMS profiles:** set up a connection profile and select a profile to be used for MMS.
 - Current profile:** select a profile.
 - Profile settings:** customise the following options for each profile:
 - **Profile name:** enter a profile name.
 - **Server URL:** enter the address of your MMS server.
 - **Proxy:** activate or deactivate the proxy server.
 - **GPRS settings:** customise the settings required for connecting to the GPRS network.

When the proxy is set to **Enable:**

IP address: enter the IP address.

Port: enter the port number.

APN: enter the access point name.

Login ID: enter the user ID.

Password: enter the password.

When the proxy is set to **Disable:**

DNS1: enter the primary DNS address.

DNS2: enter the secondary DNS address.

APN: enter the access point name.

Login ID: enter the login ID.

Password: enter the login password.

- **Version:** select an available OMA version and maximum size limit for sending or receiving messages.

Depending on your service provider, it may not be possible to support the maximum limit 295KB. In this case, try again after changing the setting to 100KB.

- **Block number:** store the phone numbers from which you want to reject messages.

Email (Menu 5.5.3)

You can configure default e-mail settings.

You cannot change e-mail profile and account settings while e-mails are being sent or retrieved.

- **Send settings:** set up the options for sending e-mails:
 - Send copy to self:** send a copy of your e-mails to your e-mail account.
 - Delivery confirm:** set the network to inform you when your e-mails have been delivered.
 - Read confirm:** send a read-reply request along with e-mails.
 - Priority:** select the priority level of e-mails.
 - Include signature:** attach your name, phone number, a simple memo, or a tag line to your e-mails.
 - Edit name:** edit the name in your signature.

Edit telephone number: edit the phone number in your signature.

Edit note: edit the tag line in your signature.

- **Receive settings:** set up the options for receiving e-mails:

Check interval: determine how often the phone checks the server for incoming e-mails. If you select **Not used**, use the **Check new mail** option to receive new e-mails manually.

Read reply: determine whether or not the phone sends a read-reply when an incoming e-mail has been read.

Retrieve option: set whether the phone downloads e-mail headers only or the complete e-mail.

Delete option: determine whether e-mails are deleted immediately or the next time you connect to the server.

Reject if over: determine the maximum size for incoming e-mails. Your phone will reject e-mails that exceed the specified size.

Leave a copy of messages on the server: leave copies of e-mails on the e-mail server after retrieving.

- **Email account:** configure an e-mail account and select an account to be used.

Current account: select an account.

Account settings: set up an e-mail account using different e-mail servers. Set the options for each account:

- **In use:** select this option to use the account and to display the account in **Email box**.
- **Account name:** enter a name for the currently selected account.
- **User name:** enter a user name.
- **Email address:** enter your e-mail address.
- **Reply address:** enter the e-mail address to which you want recipients to send reply messages.
- **User ID:** enter an e-mail ID.
- **Password:** enter your e-mail password.

- **SMTP server:** enter the IP address or host name of the outgoing e-mail server.
- **SMTP port:** enter the SMTP port number.
- **Protocol type:** select the protocol for the incoming e-mail server. The remaining options depend on the protocol type setting.

*When the protocol type is **POP3**:*

- **POP3 server:** enter the IP address or host name of the server that receives your e-mail.
- **POP3 port:** enter the POP3 port number.
- **APOP login:** connect to the server by using the APOP login scheme.
- **Secure connection:** use a secure connection for the e-mail service.

*When the protocol type is **IMAP4**:*

- **IMAP4 server:** enter the IP address or host name of the server that receives your e-mail.
- **IMAP4 port:** enter the IMAP4 port number.
- **Include attachments:** select this option to receive attachments with e-mails.

- **Max. Emails retrieved:** set the number of headers you will retrieve from the server.
- **Secure connection:** use a secured connection for e-mail service.
- **Email profile:** set up a connection profile and select a profile to be used for e-mail services.
Current profile: select a profile.
Profile settings: set up an e-mail profile. For each profile, the following options are required to connect to the GPRS network:
 - **Profile name:** enter a profile name.
 - **APN:** enter the access point name.
 - **Login ID:** enter the login ID.
 - **Password:** enter the login password.
 - **DNS1:** enter the primary DNS address.
 - **DNS2:** enter the secondary DNS address.
- **Block list:** specify e-mail addresses from which messages will not be accepted. You can also specify message subjects that you will not accept.

Push message (Menu 5.5.4)

You can change the settings for receiving push messages from the wireless web server.

- **Receive:** set how your phone receives push messages.
- **Service centre:** enter the address of the server from which you want to receive push messages, when the **Receive** option is set to the **SMS-C specific**.

SOS message (Menu 5.6)

In an emergency, you can send SOS messages to your family or friends for help. You can also receive SOS messages from other people who are in an emergency. Use this menu to specify options for sending and receiving SOS messages.

- **Message sending:** activate or deactivate the SOS message feature. To send an SOS message, press [Volume] 4 times in Idle mode, with the phone closed.

While the phone is attempting to send an SOS message, the 📶 icon turns to red and you cannot access menu functions. When the icon turns to blue, use the phone as normal.

- **Recipients:** specify the phone numbers to which you want to send SOS messages.
- **Repeat sending:** set the number of times the phone repeats sending SOS messages.
- **Incoming SOS alert:** set whether or not the phone uses the preset alert type (siren and alert message) for incoming SOS messages. If you select **No**, the phone uses the message ringer setting.
- **Text:** check the preset SOS message text.

You can view the onscreen help by pressing **<Options>** and selecting **Help**.

Broadcast messages (Menu 5.7)

You can change the settings for receiving CB messages.

- **Read:** open received messages.
The **Archive** box saves network messages indefinitely. Press **<Options>** and select **Save** to save messages to the **Archive** box when a text notification appears.
The **Temporary** box saves network messages until the phone is switched off.
- **Receive:** select to receive CB messages, or not.
- **Channel:** indicate the channels from which you wish to receive CB messages. Please contact your service provider for further details.
- **Language:** select the preferred languages in which CB messages display.

Memory status (Menu 5.8)

Use this menu to view the number of messages or the amount of memory currently in use for each message type in each folder.

You can also access a message box by selecting it from this menu.

File manager *(Menu 6)*

The **File manager** menu allows you to access images, videos, music files, and sound files stored in the phone's memory or on a memory card.





To access this menu, press **<Menu>** in Idle mode and select **File manager**.

Tips for Digital Rights Management

As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may require a licence key to access them.

You can acquire the key from the website which owns the rights to the content; use the **Activate key** option.

Note the following icons on the list:

- : Forwardable item with a valid key.
- : Forwardable item without a valid key.
- : Unforwardable item with a valid key.
- : Unforwardable item without a valid key.

Your service provider supports only count-based or unlimited-access DRM files.

Images *(Menu 6.1)*

This menu displays photos you have taken and images you have downloaded, received in messages, or imported from your computer.

Viewing an image

1. Select an image folder.
2. Select an image.

Viewing a slide show

You can view your photos as a slide show, a sequential presentation of each photo in the current folder.

1. Select **Photos**.
2. Press **<Options>** and select **Slide show**.
3. Select a time interval between photos. The slide show begins.
4. Press **<Back>** to stop the slide show.

Using image options

While viewing an image, press <**Options**> to access the following options:

- **List:** return to the image list.
- **Send via:** send the file via MMS, e-mail, or Bluetooth.
- **Set as:** set the image as wallpaper for the displays or as a caller ID image for a Phonebook entry.
- **Edit:** edit the image using the Image editor, if it is a photo taken by the camera on the phone.
▶ p. 45
- **Activate key:** get a new licence key when the key for the selected DRM file expires.
- **Reactivate key:** get another licence key even when the key for the selected DRM file has not expired.
- **Move to:** move the file to another folder or to a memory card.
- **Copy to card:** copy the file to a memory card.
- **Delete:** delete the file

- **Rename:** change the file name.
- **Slide show:** set all photos to display as a slide show.
- **Share for Bluetooth:** share the file with other Bluetooth devices.
- **Print via:** print the image by connecting the phone to a printer via Bluetooth or USB. To print via USB, first switch the phone to a **Pictbridge** mode. ▶ p. 88
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

Videos *(Menu 6.2)*

This menu displays video clips you have recorded, downloaded, received in messages, or imported from your computer.

Playing a video clip

1. Select a video folder.
2. Select a video clip.

During playback, you can use the following keys:

Key	Function
OK/ <i>i</i>	Pauses or resumes playback.
Left	Returns to the previous file. Moves backward in a file when held down.
Right	Skips to the next file. Skips forward in a file when held down.
Up	Opens the file list.
Volume	Adjusts the volume.
Down	Stops playback.

Using video options

While viewing the video list, press <**Options**> to access the following options:

- **Play:** play the selected file.
- **Display mode:** change the view mode in the file list.
- **Send via:** send the file via MMS, e-mail, or Bluetooth.

- **Set as caller ID:** set the video clip as a caller ID image for a Phonebook entry.
- **Activate key:** get a new licence key when the key for the selected DRM file expires.
- **Reactivate key:** get another licence key even when the key for the selected DRM file has not expired.
- **Move to:** move the file to another folder or a memory card.
- **Copy to card:** copy the file to a memory card, if one has been inserted.
- **Delete:** delete the selected file or all files.
- **Rename:** change the file name.
- **Sort by:** change the sort order of files.
- **Share for Bluetooth:** share the selected file or all files with other Bluetooth devices.
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

Music (Menu 6.3)

This menu displays MP3 files you have downloaded or imported from your computer.

Select a file from the **Music** folder. The MP3 player opens. ▶ p. 41

Using music options

While viewing the music file list, press <**Options**> to access the following options:

- **Play via:** play the selected file.
- **Send via:** send the file via e-mail or Bluetooth.
- **Add to play list:** add the selected file to the play list you want.
- **Set as:** set the music file as your ringtone, a ringtone for a Phonebook entry, or alarm tone.
- **Activate key:** get a new licence key when the key for the selected DRM file expires.
- **Reactivate key:** get another licence key even when the key for the selected DRM file has not expired.

- **Move to card:** move the file to a memory card.
- **Copy to card:** copy the file to a memory card.
- **Delete:** delete the selected file or all files.
- **Settings:** change the default settings for playing music files. ▶ p. 43
- **Rename:** change the file name.
- **Sort by:** change the sort order of files.
- **Share for Bluetooth:** share the selected file or all files with other Bluetooth devices.
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

Sounds (Menu 6.4)

This menu displays voice memos you have recorded and sound clips you have downloaded, received in messages, or imported from your computer.

Playing a sound clip

1. Select a sound folder.
2. Select a sound clip.
For a voice memo, see **Voice recorder**. ▶ p. 44

During playback, use the following keys:

Key	Function
Left	Returns to the previous file.
Right	Skips to the next file.
Up/Down OR Volume	Adjusts the volume.

Using sound options

While viewing the sound list, press <**Options**> to access the following options:

- **Play:** play the file.
- **Send via:** send the file via MMS, e-mail, or Bluetooth.
- **Set as:** set the sound clip or voice memo as your ringtone, a ringtone for a Phonebook entry, or alarm tone.
- **Activate key:** get a new licence key when the key for the selected DRM file expires.

- **Reactivate key:** get another licence key even when the key for the selected DRM file has not expired.
- **Move to:** move the file to another folder or a memory card.
- **Copy to card:** copy the file to a memory card.
- **Delete:** delete the selected file or all files.
- **Rename:** change the file name.
- **Sort by:** change the sort order of files.
- **Share for Bluetooth:** share the selected file or all files with other Bluetooth devices.
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

Other files *(Menu 6.5)*

Use this menu to view various document files and files stored in the phone's memory or a memory card without corruption. Available file formats are DOC, XLS, PPT, PDF, and TXT.

Viewing a document

Select a document. Pícel File Viewer runs to open the document.

- Depending on the file size or memory capacity of the Pícel File Viewer, some files may not open properly.
- If a document file contains languages unsupported by the Pícel File Viewer, the content of the document will not display correctly.

Use the following keys to view the document:

Key	Function
Up/Down/ Left/Right	Pans around the page.
Volume	Zooms in or out.
OK/ <i>i</i>	Fits the document to the page size.
1	Changes the panning mode.
2	Returns to the first page.
4	Returns to the previous page.

Key	Function
5	Rotates the document.
6	Moves to the next page.
7	Changes the view mode to the screen width.
8	Moves to the last page.
9	Changes the view mode to the screen height.
*	Changes the display to Full screen view or Normal screen view.
#	Hides or displays the shortcut tool bar. This key is only available in Full screen mode.

Using document options

While viewing a document, press <**Options**> to access the following options:

- Full screen view/Normal screen view:** change the view mode.

- **Zoom:** zoom in or out.
- **Fit to:** fit the document to the page size, screen width, or screen height.
- **Go to:** move to another page of the document.
- **Rotate:** rotate the document.
- **Screen panning/Normal panning:** change the panning mode to by screen or by preset pixel.
- **Hide control bar/Show control bar:** hide or display the shortcut tool bar in Full screen view.
- **Send via:** send the file via MMS, e-mail, or Bluetooth.
- **Move to card:** move the file to a memory card.
- **Copy to card:** copy the file to a memory card.
- **Delete:** delete the file.
- **Rename:** change the file name.
- **Share for Bluetooth:** share the selected file with other Bluetooth devices.

- **Print via:** print the image file by connecting the phone to a printer via Bluetooth or USB.
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

Memory card *(Menu 6.6)*

Use this menu to access the files stored in a memory card. This menu is shown only when a memory card is inserted into the phone.

- Your phone is preset to use FAT16-formatted memory cards. If you insert a FAT32-formatted memory card, the phone will ask you to reformat the memory card. If you do not, you will not be able to access the card from the phone.

Memory status *(Menu 6.7)*

Use this menu to view memory information for media items in the phone's memory or on a memory card.

Calendar (Menu 7)

The **Calendar** menu enables you to keep track of your schedule.

To access this menu, press <**Menu**> in Idle mode and select **Calendar**.

Month view (Menu 7.1)

Use this menu to keep track of your monthly schedule.

Consulting the calendar

When you enter the **Calendar** menu, the calendar in Month view appears with today's date indicated by a green box.

Selecting a day

- Press [Left] or [Right] to move by day.
- Press [Up] or [Down] to move by week.
- Press [Volume] to move by month.

Using calendar options

Press <**Options**> to access the following options:

- **View mode:** change the view mode of the calendar.
- **Create:** add a new item. ▶ p. 76
- **Go to:** go to today's date or enter the specific date you want.
- **Sort by:** sort items by type of item.
- **Delete:** delete the items stored on the calendar for the specific period.
- **Missed alarm events:** access items whose alarms you have missed.
- **Memory status:** access memory information for the items stored on the calendar.

Creating an item

You can store schedule items, miscellaneous items, anniversaries, and To-do items on the calendar. More than one item per day can be stored.

Entering a new schedule item or miscellaneous item

1. Select a date on the calendar.
2. Press <**Options**> and select **Create** → **Schedule** or **Miscellaneous**.

3. Enter information or change the settings:
 - **Subject:** enter a title of the item.
 - **Details:** enter item details.
 - **Start date** and **Start time:** enter the starting date and time for the item.
 - **AM/PM:** select **AM** or **PM** in 12-hour time format.
 - **End date** and **End time:** enter the ending date and time for the item.
 - **AM/PM:** select **AM** or **PM** in 12-hour time format.
 - **Location:** (for **Schedule**) enter information about the item location.
 - **Alarm:** set an alarm for the item.
 - **before:** set how long before the item the alarm is to alert you.
 - **Alarm tone:** select an alarm tone.
 - **Repeat:** (for **Schedule**) select to set the item to recur.
 - **until:** (for **Schedule**) set the ending date, if the item will recur.

4. Press **<Save>** to save the item.

Entering a new anniversary





1. Select a date on the calendar.
2. Press **<Options>** and select **Create** → **Anniversary**.
3. Enter information or change the settings:
 - **Occasion:** enter information about the anniversary.
 - **Date:** enter the date for the anniversary.
 - **Alarm:** set an alarm for the anniversary.
 - **before:** set how long before the anniversary the alarm is to alert you.
 - **Alarm time:** enter an alarm time.
 - **AM/PM:** select **AM** or **PM** in 12-hour time format.
 - **Alarm tone:** select an alarm tone.
 - **Repeat every year:** set the phone to remind you of the anniversary every year.
4. Press **<Save>** to save the anniversary.

Entering a new To-do item

1. Select a date on the calendar.
2. Press <Options> and select **Create** → **To do**.
3. Enter information or change the settings:
 - **To do**: enter information about the To-do item.
 - **Start date**: enter the starting date.
 - **Due date**: enter the ending date.
 - **Priority**: select a priority level.
4. Press <Save> to save the To-do item.

Viewing an item

Once you have scheduled things, the following icons and the number of items for a specific day appear at the bottom of the calendar.

-  Schedule item
 -  Anniversary
 -  To-do item
 -  Miscellaneous item
1. Select a date on the calendar to display the items for the day.
 2. Select an item to view its details.

3. Press [Left] or [Right] to access the other items scheduled for the selected day.

Using options

While viewing an item, press <Options> to access the following options:

- **Edit**: edit the item.
- **Create**: add a new item.
- **Send via**: send the item via SMS, MMS, e-mail, or Bluetooth.
- **View mode**: change the view mode of the calendar.
- **Done/Undone**: (for **To do**) change the status of the To-do item.
- **Delete**: delete the item.
- **Print via Bluetooth**: print the item details via a Bluetooth-compatible printer.





Week view (Menu 7.2)

You can view items for the selected week. A cell on the timetable indicates the presence of a schedule item and miscellaneous item. Select a cell for the date you want.

Day view (Menu 7.3)

You can view items for the selected date. Select an item to view its details.

The following icons may display to indicate the item status:

-  Alarm set
-  Recurring item
-  Completed To do item
-  To-do item priority (Red: high, Blue: normal, and Grey: low)

Camera (Menu 8)

You can use the camera module embedded in your phone to take photos and record videos.

To access this menu, press <**Menu**> in Idle mode and select **Camera**, or press [**CAMERA**].


- Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.

Take a photo (Menu 8.1)

Use this menu to take photos in various modes. The camera produces JPEG photos.

- When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

Taking a photo

1. Access the **Take a photo** menu to turn on the camera and switch the display to Capture mode. You can also press and hold [**CAMERA**].
The preview screen appears in Landscape view.
2. Hold the phone horizontally.
3. Make any desired adjustments.
 - Press [**MENU**] or <  > to access camera options. ▶ p. 80
 - Use the keypad to change the camera settings or switch to other modes. ▶ p. 82
4. Press [**CAMERA**] or [**OK/i**] fully to take a photo. The photo is saved in the **Photos** folder.

5. To	Press
access photo options	[MENU] or < Options >. ▶ p. 82
delete the photo	[C] and then < Yes >.
return to Capture mode	[CAMERA], [OK/i], or < Back >.

Using the auto focus function

In Capture mode, press [**CAMERA**] halfway down to automatically adjust the focus. The colour of the focus frame changes briefly to green.

Using camera options in Capture mode

In Capture mode, press [**MENU**] or <  > to access the following options:

- **Record video:** switch to Record mode.
- **Shooting mode:** take a photo in the following modes:
 - Single shot:** take a photo in normal mode. You can select whether or not the camera automatically saves a photo.
 - Multi shot:** take a series of action stills. You can select the number of still images the camera will take and shooting speed.
 - Mosaic shot:** take several stills and save them in one frame. You can select the layout.
- **Effects:** change the colour tone or apply a special effect.

- **Frames:** apply a decorative frame.
- **Flash:** determine the use of the flash.
- **Timer:** set a time delay before the camera takes a photo.
- **Go to photos:** access the **Photos** folder.
- **Settings:** change the default settings for taking a photo.

Function: change the following image settings:

- **Size:** select an image size.
- **Quality:** select an image quality.
- **View finder:** select a preview screen mode.
- **Scene programs:** select a scene mode, Normal shot mode or Night shot mode.
- **Metering exposure:** select a method to determine the exposure of an image, based on a specific area of the image.
- **White balance:** adjust the colour balance of the image. You can make your photo appear warmer or cooler.

- **ISO:** change the ISO setting, which controls the sensitivity of your camera. For low light situations, select a higher ISO number. The higher the ISO number, the faster the camera shutter functions and the more sensitive the camera is to light. Higher ISO settings may bring some distortion to an image.

Setup: change the following camera settings:

- **Shutter sound:** select the sound that you hear when you press the shutter release.
- **Zoom sound:** turn the sound effect for zooming on or off.
- **Brightness sound:** turn the sound effect for brightness adjustment of or off.
- **Focus sound:** turn the sound effect for focus adjustment on or off.
- **Default name:** change the default prefix of file names.
- **Camera short cuts:** view the functions of the keys you can use in Capture mode.

Using the keypad in Capture mode

You can use the keypad to customise your camera settings in Capture mode.

Key	Function
Up/Down or Volume	Zooms in or out.
Left/Right	Adjusts the brightness.
1	Switches to Record mode. ► p. 83
2	Changes the image size.
3	Changes the image quality.
4	Changes the shooting mode.
5	Changes the colour tone or applies a special effect.
6	Changes the ISO setting.
7	Selects a decorative frame.
8	Sets the timer.

Key	Function
9	Goes to the Photos folder.
*	Changes a preview screen.
0	Determines the use of the flash.
#	Changes the white balance.

Using photo options

After saving a photo, press <**Options**> or [**MENU**] to access the following options:

- **Take another:** switch to Capture mode.
- **Send via:** send the file via MMS, e-mail, or Bluetooth.
- **Set as:** set the photo as wallpaper for the displays or caller ID image for a Phonebook entry.
- **Edit:** edit the photo using the Image editor.
► p. 45
- **Delete:** delete the file.



- **Multi shot delete all:** delete the multi-shot photos you select or all photos.
- **Rename:** change the file name.
- **Go to photos:** access the **Photos** folder.
- **Share for Bluetooth:** share the file with other Bluetooth devices.
- **Print via:** print the image by connecting the phone to a printer via Bluetooth or USB. To print via USB, first switch the phone to a **Pictbridge** mode. ▶ p. 88
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.



Record video *(Menu 8.2)*

You can record a video of what is displayed on the camera screen and save it.

Recording a video

1. Access the **Record video** menu to turn on the camera and switch the display to Record mode. The preview screen appears in Landscape view.

2. Hold the phone horizontally.
3. Make any desired adjustments.
 - Press [**MENU**] or <  > to access camera options. ▶ p. 84
 - Use the keypad to change the camera settings or switch to other modes. ▶ p. 85
4. Press [**CAMERA**] or [OK/⏏] fully to start recording. To pause or resume, press [**CAMERA**] or [OK/⏏].
5. Press <  > to stop recording. The video clip is saved in the **Videos** folder.

To	Press
play back the video clip	[OK/⏏].
access video options	[MENU] or <  >. ▶ p. 85
return to Record mode	<  >.
delete the video clip	[C] and then < Yes >.

Using the auto focus function

In Capture mode, press [**CAMERA**] halfway down to automatically adjust the focus. The colour of the focus frame changes briefly to green.

Using camera options in Record mode

In Record mode, press [**MENU**] or <  > to access the following options:

- **Take a photo:** switch to Capture mode.
- **Effects:** change the colour tone or apply a special effect to a video.
- **Flash:** determine the use of the flash.
- **Timer:** set a time delay before the camera starts recording a video.
- **Go to videos:** access the **Videos** folder.
- **Settings:** change the following settings for recording a video:

Recording mode: select a video recording mode.

Select **Normal** to record a video within the limit of the currently available memory.

Select **Limit of MMS** to record a video suitable for an MMS message.

Size: select an image size.

Quality: select an image quality.

View finder: select a preview mode, either Full screen mode or normal mode with actual ratio.

Audio rec.: turn on or off the audio.

White balance: adjust the colour balance of the image. You can make your photo appear warmer or cooler.

Scene programs: select a scene mode, Normal shot mode or Night shot mode.

Zoom sound: turn the sound effect for zooming on or off.

Brightness sound: turn the sound effect for brightness adjustment of or off.

Focus sound: turn the sound effect for focus adjustment on or off.

Default name: change the default prefix of file names.

- **Camcorder short cuts:** view the functions of the keys you can use in Record mode.


Using the keypad in Record mode

You can use the keypad to customise your camera settings in Record mode:

Key	Function
Up/Down or Volume	Zooms in or out.
Left/Right	Adjusts the brightness.
1	Switches to Capture mode. ► p. 79
2	Changes the image size.
3	Changes the image quality.
4	Changes the video recording mode.
5	Changes the colour tone or applies a special effect.
6	Turns the audio on or off.

Key	Function
7	Changes a scene mode.
8	Sets the timer.
9	Goes to the Videos folder.
*	Changes a preview screen.
0	Determines the use of the flash.
#	Changes the white balance.

Using video options

After saving a video clip, press **[MENU]** or <  > to access the following options:

- **Record another:** switch to Record mode.
- **Send via:** send the file via MMS, e-mail, or Bluetooth.
- **Set as caller ID:** set the video clip as a caller ID image for a Phonebook entry.
- **Delete:** delete the file.

- **Rename:** change the file name.
- **Go to videos:** access the **Videos** folder.
- **Share for Bluetooth:** share the file with other Bluetooth devices.
- **Protection:** protect the file from being deleted.
- **Properties:** access the file properties.

Go to photos *(Menu 8.3)*

Use this menu to access a list of photos you have taken. ▶ p. 69

Go to videos *(Menu 8.4)*

Use this menu to access a list of videos you have recorded. ▶ p. 70

Settings *(Menu 9)*

The **Settings** menu provides you with various setting options to customise the phone to your preferences and needs. You can also reset the settings to their default status.

To access this menu, press <**Menu**> in Idle mode and select **Settings**.

Time & Date *(Menu 9.1)*

Use this menu to change the time and date displayed on your phone. Before setting the time and date, specify your time zone in **Home zone**.

- **Time:** enter the current time.
- **Home zone:** set your local time zone and find out what time it is in another part of the world.
 - To apply daylight savings time to time zones, select **Set daylight saving time**.
- **AM/PM:** select **AM** or **PM** in 12-hour time format.
- **Time format:** select the 12-hour or 24-hour time format.

- **Set date:** enter the current date.
- **Date format:** select a date format.
- **Week start day:** set which day of the week the calendar starts with.
- **Auto update:** set the current time automatically if **Home zone** is changed.

Phone settings (Menu 9.2)

Many different features of your phone's system can be customised to suit your preferences.

Language (Menu 9.2.1)

Use this menu to select one of several languages for the display text.

Greeting message (Menu 9.2.2)

Use this menu to enter the greeting that is displayed briefly when your phone is switched on.

Short cut (Menu 9.2.3)

You can use the Navigation keys as shortcuts to access specific menus directly from Idle mode. Use this menu to assign a shortcut to a key.

Assigning a shortcut menu

1. Select a key to be used as a shortcut key.
2. Select a menu to be assigned to the key.

Using shortcut options

Press <**Options**> to access the following options:

- **Change:** assign or change a shortcut menu.
- **Remove:** deactivate the shortcut assignment to the selected key.
- **Remove all:** deactivate all shortcut assignments.

Volume key (Menu 9.2.4)

Use this menu to set whether the phone mutes the call ringer or rejects a call if you press and hold [Volume] when a call comes in.


USB settings (Menu 9.2.5)

Use this menu to select a USB mode.

- **Modem:** use the phone as a modem.
- **Mass storage:** use the phone as an external memory disk, if a memory card is inserted into the phone.
- **Pictbridge:** connect the phone to a Pictbridge-compatible printer via USB.

Extra settings (Menu 9.2.6)

You can turn the automatic redialling or answering features on or off, or activate the voice clarity feature.

- **Auto redial:** set the phone to make up to ten attempts to redial a phone number after an unsuccessful call.
- **Anykey answer:** answer an incoming call by pressing any key, except [] and <Reject>.
- **Voice clarity:** remove extraneous noise and increase call quality so that the person with whom you are speaking can hear you clearly even if you are in a noisy place.

- **Active folder:** answer an incoming call by opening the phone.

Offlinemode (Menu 9.2.7)

Use this menu to switch the phone to Offline mode, in which the phone functions requiring network connections are deactivated. You can use non-wireless functions, such as, calendar, games, contacts, and voice recorder on an airplane during flight.

Display settings (Menu 9.3)

Use this menu to change settings for the display and backlight.

Wallpaper (Menu 9.3.1)

You can set up the idle screen on both displays.

- **Main display:** select an image to be displayed on the main display.
- **Cover display:** select an image type to be displayed on the external display.
- **Clock:** select a clock type.
- **Cover title:** enter the text you want.

Wallpaper images: select an image.

Text display (Menu 9.3.2)

You can change the display settings for the text displayed on the idle screen.

- **Text position:** select a text position. If you don't want to display text in Idle mode, select **Off**.
- **Text style:** select a font style.
- **Text colour:** select a font colour.

Skin (Menu 9.3.3)

You can select a skin colour pattern for Menu mode.

LCD brightness (Menu 9.3.4)

You can adjust the brightness of the display for varying lighting conditions.

Backlight (Menu 9.3.5)

You can select the length of time the backlight and the display stay on.

- **Main LCD on:** select the length of time the backlight stays on at times of inactivity.

- **Main LCD dim:** select the length of time the display stays in Dim mode after the backlight turns off. After a specified time, the display turns off.
- **Show cover indicators:** set whether or not the icons are shown on the external display.
- **During charging:** set whether or not the display stays in Dim mode while charging.

Dialling display (Menu 9.3.6)

Use this menu to select a font colour and size for the numbers entered and the background colour of the display while dialling.

Calendar (Menu 9.3.7)

Use this menu to display the current calendar on the idle screen.

Show caller information (Menu 9.3.8)

Use this menu to set the phone to display missed call notifications with the most recently missed caller's information. To set the external display to show caller information, select **With cover display**.

TV-out (Menu 9.3.9)

Use this menu to select the default video system for a TV.

Sound settings (Menu 9.4)

Use this menu to customise various sound settings.

Incoming call (Menu 9.4.1)

Use this menu to change the sound settings for incoming calls.

- **Ring tone:** select a ringtone to be used for the call ringer.
- **Volume:** select a ringtone volume.
- **Alert type:** specify how you are to be informed of incoming calls.

Keypad tone (Menu 9.4.2)

Use this menu to select the tone that the phone sounds when you press a key.

- You can adjust the keypad tone volume using [Volume] in Idle mode.

Message tone (Menu 9.4.3)

Use this menu to change the sound settings for incoming messages or e-mails.

- **Tone:** select one of several message tones.
- **Alert type:** specify how you are to be informed when a message comes in.
- **Repetition:** specify how often the phone informs you of a new message.

Power on/off (Menu 9.4.4)

Use this menu to select the melody that the phone sounds when it is switched on or off.

Folder tone (Menu 9.4.5)

Use this menu to select the tone that the phone sounds when you open or close it.

Quiet mode (Menu 9.4.6)

Use this menu to set how the phone acts to alert you to a specific event while in Quiet mode.

Extra tones (Menu 9.4.7)

Use this menu to customise additional tones for the phone.

- **Minute minder:** set the phone to beep every minute during an outgoing call to keep you informed of the length of your call.
- **Connection tone:** set the phone to beep when an outgoing call is connected to the system.
- **Alerts on call:** set the phone to beep when you receive a new message or when the time for an alarm comes during a call.
- **Indicative tones:** set the phone to beep when a pop-up window displays.

Network services (Menu 9.5)

Use this menu to access network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

Call diverting (Menu 9.5.1)

This network service reroutes incoming calls to a phone number that you specify.

1. Select a call diverting option:
 - **Divert always:** divert all calls.
 - **Busy:** divert calls when you are on another call.
 - **No reply:** divert calls when you do not answer the phone.
 - **Unreachable:** divert calls when you are not in an area covered by your service provider or when your phone is switched off.
 - **Cancel all:** cancel all call diverting options.
2. Select the type of calls to be diverted.
3. Select **Activate**. To deactivate call diverting, select **Deactivate**.
4. Move to the **Divert to** line.
5. Enter the number to which calls are to be diverted.
6. If you selected **No reply**, move to the **Sec** line and select the length of time the network delays before diverting a call.
7. Press **<OK>**.

Call barring (Menu 9.5.2)

This network service allows you to restrict your calls.

1. Select a call barring option:
 - **All outgoing:** prohibit outgoing calls.
 - **International:** prohibit international calls.
 - **International except home:** only allow calls to numbers within the current country when you are abroad, and to your home country.
 - **All incoming:** prohibit incoming calls.
 - **Incoming while abroad:** prohibit incoming calls when you use your phone outside of your home service area.
 - **Cancel all:** cancel all call barring settings, allowing to be sent and received normally.
 - **Change barring password:** change the call barring password obtained from your service provider.
2. Select the type of calls to be barred.
3. Select **Activate**. To deactivate call barring, select **Deactivate**.

4. Enter the call barring password supplied by your service provider and press **<OK>**.

Call waiting (Menu 9.5.3)

This network service informs you when someone is trying to reach you while you are on another call.

1. Select the type of calls to which the call waiting option will apply.
2. Select **Activate**. To deactivate call waiting, select **Deactivate**.

Network selection (Menu 9.5.4)

This network service allows you to manually select the network to be used while roaming outside of your home area, or to let the network be chosen automatically. You can select a network other than your home network only if there is a valid roaming agreement between the two.

Caller ID *(Menu 9.5.5)*

This network service allows you to prevent your phone number from being displayed on the phone of the person being called. If you select **Default**, the phone will use the default setting provided by the network.

- Some networks do not allow the user to change this setting.

Voice mail server *(Menu 9.5.6)*

Use this menu to store the number of the voicemail server and access your voicemails.

- You must enter the voicemail server number before you can access your voicemails. Your service provider can give this number.

- **Connect to voice mail:** connect to the voicemail server to listen to your messages.
- **Voice server number:** enter the voicemail server number.

Band selection *(Menu 9.5.7)*

For the phone to make and receive phone calls, it must register with an available network. Your phone can handle any of the following types of networks: GSM 1900, Combined GSM 900/1800, and Tri band (GSM 900/1800/1900).

The country where you purchased your phone determines the default band that it uses. When you travel abroad, you may need to change to an appropriate band.

Bluetooth *(Menu 9.6)*

Using Bluetooth wireless, you can connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within a range of 10 metres. Since the devices communicate using radio waves, they do not need to be in line of sight to each other.



- If there are obstacles between the devices, the maximum operating distance may be reduced.
- It is recommended that you don't use the Bluetooth feature while using multimedia features such as voice recorder, camera, and MP3 player, or vice versa for a good performance.
- Some devices may not be compatible with your phone.

Setting up the Bluetooth feature

The **Bluetooth** menu provides the following options:







- **Activation:** activate or deactivate the Bluetooth feature.
- **My devices:** search for connectable Bluetooth devices.
- **My phone's visibility:** allow other Bluetooth devices to locate your phone, or not.
- **My phone's name:** assign a Bluetooth device name to your phone, which is then displayed on other devices.
- **Secure mode:** determine if the phone asks for your confirmation when other devices access your data.

- **Bluetooth services:** display available Bluetooth services.

Searching for and pairing with a Bluetooth device

1. From the Bluetooth setting options, select **My devices**.
2. Select **Search new device**.

After searching, a list of devices to which you can connect displays. The following icons indicate the type of device:

-  Mobile phone
-  PDA
-  Computer
-  Headset or hands-free car kit
-  Printer
-  Unknown device

The colour of the icon indicates the status of the device:

- Grey for unpaired devices
- Blue for paired devices
- Red for devices that are currently connected to your phone

3. Select a device.
4. Enter a Bluetooth PIN and press **<OK>**. This code is used just once and you don't need to memorise it. When the owner of the other device enters the same code, pairing is complete.

- Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as **0000**. If the other device has one, you must enter the code.

Using device options

From the device list, press **<Options>** to access the following options:

- **Connect:** connect to a headset or hands-free car kit.
- **Disconnect:** end the connection with the connected device.
- **Browse files:** search for data from the device and import data directly to your phone.
- **Service list:** access the Bluetooth service list of the device.

- **Rename:** rename the paired device.
- **Authorize device/Unauthorize device:** determine whether or not the phone asks you to permit connection when other devices try to connect to your phone.
- **Delete:** remove the selected device or all devices from the list.

Sending data via Bluetooth

1. Activate the Bluetooth feature.
2. Select the application in which the item you want to send is stored.
3. Select the item you want.
4. Press **<Options>** and select **Send via → Bluetooth**.
The phone searches for devices within range and displays a list of available devices.
5. Select a device.
6. If necessary, enter the Bluetooth PIN needed for pairing and press **<OK>**.

Receiving data via Bluetooth

To receive data via Bluetooth, your phone's Bluetooth feature must be active and its visibility must be enabled.

If an unauthorised Bluetooth device sends data to your phone, press <Yes> to allow the device to access your phone.

Security (Menu 9.7)

Use this menu to protect the phone against unauthorised use by managing the several access codes of your phone and SIM card.

- If you enter an incorrect PIN/PIN2 three times in succession, the SIM card is blocked. To unblock it, you need to enter your PUK/PUK2 (Personal Unblocking Key). The codes are supplied by your service provider.

PIN check (Menu 9.7.1)

The 4-to 8-digit PIN (Personal Identification Number) protects your SIM card against unauthorised use. When this feature is enabled, the phone requires your PIN each time it is switched on.

Change PIN (Menu 9.7.2)

Use this menu to change your PIN. The PIN check feature must be enabled to change the PIN.

Phone lock (Menu 9.7.3)

Use this menu to protect the phone from unauthorised use. When this feature is enabled, you must enter a 4-to 8-digit phone password each time the phone is switched on.

The password is preset to **00000000**. To change the password, use the **Change password** menu.

Change password (Menu 9.7.4)

Use this menu to change your phone password.

Privacy (Menu 9.7.5)

Use this menu to lock access to call records, Phonebook entries, messages, or media files in the phone's memory or on a memory card. When a privacy option is enabled, you must enter the phone password to access the locked items.

SIM lock (Menu 9.7.6)

This menu allows your phone to work only with the current SIM card by assigning a SIM lock code. You must enter the SIM lock code to use a different SIM card.

FDN mode (Menu 9.7.7)

If supported by your SIM card, Fixed Dialling Number (FDN) mode restricts your outgoing calls to a limited set of phone numbers. When this feature is enabled, you can make calls only to phone numbers stored on the SIM card.

Change PIN2 (Menu 9.7.8)

If supported by your SIM card, use this menu to change your current PIN2.

Memory status (Menu 9.8)

Use this menu to check the amount of memory for messages, media and document files, calendar items, Phonebook entries, and Java applications. You can also check the shared memory for MMS, Email, and File manager.

Reset settings (Menu 9.9)

Use this menu to reset the phone's settings you have changed.

1. Press [**OK/i**] to select the setting categories to be reset.
2. Press <**Reset**>.
3. Press <**Yes**> to confirm the reset.
4. Enter the phone password and press <**OK**>.

The password is preset to **00000000**. You can change this password. ► **Change password**

Solve problems

Help and personal needs

To save the time and expense of an unnecessary service call, perform the simple checks in this section before contacting a service professional.

When you switch on your phone, the following messages may appear:

"Insert SIM"

- Be sure that the USIM/SIM card is correctly installed.

"Phone lock"

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

"Enter PIN"

- You are using your phone for the first time. You must enter the PIN supplied with the USIM/SIM card.

- The PIN check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN check** menu.

"Enter PUK"

- The PIN has been entered incorrectly three times in succession, and the SIM card is now blocked. Enter the PUK supplied by your service provider.

 
"No Service," "Network Failure," or "Not Done" displays

- The network connection has been lost. You may be in a weak signal area. Move and try again.
- You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialled

- Be sure that you have pressed [↵].
- Be sure you have accessed the right cellular network.
- Be sure that you have not set an outgoing call barring option.

Your correspondent cannot reach you

- Be sure your phone is switched on. ([] pressed for more than one second.)
- Be sure you are accessing the correct cellular network.
- Be sure that you have not set an incoming call barring option.



 
Your correspondent cannot hear you speaking

- Be sure that you have switched off the microphone.
- Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.

The phone starts beeping and "Battery low" flashes on the display

- Your battery is insufficiently charged. Recharge the battery.

The audio quality of the call is poor

- Check the signal strength indicator on the display () . The number of bars indicates the signal strength from strong () to weak () .

- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialled when you re-call a Phonebook entry

- Use the **Contact list** menu to ensure the number has been stored correctly.
- Re-store the number, if necessary.

The battery doesn't charge properly or the phone sometimes turns itself off

- Wipe the charging contacts both on the phone and on the battery with a clean soft cloth.

If the above guidelines do not help you to solve the problem, take note of:

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or Samsung after-sales service.

SAR certification information

This phone meets European Union (EU) requirements concerning exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured to not exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit recommended by the EU Council is 2.0 W/kg.*

The highest SAR value for this model phone was 0.611 W/kg.

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a new model phone is available for sale to the public, compliance with the European R&TTE Directive must be shown. This directive includes as one of its essential requirements the protection of the health and safety of the user and any other person.

* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary, depending on national reporting requirements and the network band.

Precautions when using batteries

- Never use a charger or battery that is damaged in any way.
 - Use the battery only for its intended purpose.
 - If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
 - Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
 - If left unused, a fully charged battery will discharge itself over time.
 - Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
 - Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0°C (32°F).
 - Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and - terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
 - Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone while driving, follow local regulations in the country or region you are in.

Operating environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy.

Your physician may be able to assist you in obtaining this information.

Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies.

To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. Switch on the phone.
2. Key in the emergency number for your present location. Emergency numbers vary by location.
3. Press [↵].

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of the reach of small children and pets. They may accidentally damage these things or choke on small parts.
 - Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
 - Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
 - Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
 - Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
 - Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
 - Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
 - Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
 - Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.
 - When the phone or battery gets wet, the label indicating water damage inside the phone changes colour. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
 - If your phone has the flash or light, do not close it too close to the eyes of people or animals. This may cause damage to their eyes.

Health and safety information

- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Index

A

- ABC mode, text input • 28
- Active folder • 88
- Alarm • 47
- Answering
 - call • 31
 - second call • 32
- Anykey answer • 88
- Auto redial • 88

B

- Background image • 88
- Backlight time, set • 89
- Band selection • 93
- Barring, calls • 92
- Battery
 - charging • 7
 - low indicator • 8
 - precautions • 101
- Bluetooth
 - receiving, data • 96
 - sending, data • 95
 - settings • 94
- Broadcast messages • 68
- Browser, web • 50

C

- Calculator • 48
- Calendar • 76
- Call costs • 36
- Call records
 - dialled • 35
 - missed • 35
 - received • 35
- Call time • 35
- Caller group • 38
- Caller ID • 89, 93
- Calls
 - answering • 31
 - barring • 92
 - diverting • 91
 - holding • 32
 - making • 30
 - redialling • 30
 - rejecting • 31
 - waiting • 92
- Camera
 - photos • 79
 - videos • 83, 84
- CB (Cell Broadcast) messages • 68

- Characters, enter • 27
- Configuration messages • 58
- Connection tone • 91
- Convertor • 49
- Creating messages
 - e-mail • 56
 - MMS • 54
 - SMS • 54

D

- Date, set • 87
- Deleting
 - call records • 35
 - e-mail • 60, 61, 62
 - events • 78
 - MMS • 58, 60, 62
 - phonebook • 37, 40
 - SMS • 57, 60, 62
- Delivery reports, message • 58, 62
- Dialled calls • 35
- Display
 - backlight, set • 89
 - brightness • 89
 - icons • 10

- language • 87
- layout • 10
- settings • 88

- Diverting, calls • 91
- Document files • 73
- DRM (Digital Rights Management) • 69
- DTMF tones, send • 33

E

- E-mails
 - creating/sending • 56
 - deleting • 61
 - setting • 65
 - viewing • 60
- Emergency calls • 104

F

- FDN (Fixed Dialling Number) mode • 97
- File manager • 69
- File viewer • 74
- Folder tone • 90

G

- Games • 46

Greeting message • 87

H

Health and safety • 100

Holding, call • 32

I

Icons, description • 10

Image editor • 45

Images, downloaded • 69

Inbox, messages

 e-mail • 60

 SMS/MMS • 57

International calls • 30

Internet • 50

J

Java applications • 46

K

Keypad tones

 selecting • 90

 sending/muting • 33

 volume • 90

L

Language, select • 87

Last number, redial • 30

Locking

 phone • 96

 SIM card • 97

Low battery indicator • 8

M

Memory card

 accessing files • 75

 inserting • 26

Memory status

 file manager • 75

 messages • 68

 phonebook 40

Message tone • 90

Messages

 cell broadcast • 68

 configuration • 58

 e-mail • 56

 greeting • 87

 MMS • 54, 58

 push • 67

 SMS • 54, 57

Minute minder • 91

Missed calls • 35

MMS messages

 creating/sending • 54

 deleting • 58

 setting • 63

 viewing • 57

MP3 player • 41

Multi-party call • 33

Music, downloaded • 72

N

Names

 entering • 27

 searching • 36

Network band, select • 93

Network selection • 92

Network services • 91

O

Outbox, messages • 59

P

Password

 call barring • 92

 phone • 96

Phone

 care and maintenance •
 105

 display • 10

 icons • 10

 locking • 96

 password • 96

 resetting • 97

 switching on/off • 8

 unpacking • 6

Phonebook

 copying • 37

 deleting • 40

 editing • 37

 managing • 40

 options • 37

 speed-dialling • 39

Photos

 editing • 45

 taking • 79

 viewing • 69, 86

PIN, change • 96

PIN2, change • 97

Power on/off tone • 90

Privacy • 97

Problems, solve • 98

Push messages • 58, 67

R

Received calls • 35

Received messages

 e-mail • 60

 SMS/MMS • 57

Recording

 videos • 83

- voice memos • 44
- Redialling
 - automatically • 88
 - manually • 30
- Resetting phone • 97
- Ringer
 - incoming calls • 90
 - messages • 90
- Road safety • 102
- Roaming • 92
- S**
- Safety
 - information • 100
 - precautions • 1
- Security, calls • 96
- Sent messages • 60
- SIM card
 - inserting • 7
 - locking • 97
- SMS messages
 - creating/sending • 54
 - deleting • 57
 - settings • 62
 - viewing • 57
- SOS messages • 67
- Sound settings • 90

- Sounds, downloaded • 72
- Speed-dial • 39
- Stopwatch • 50
- Switching on/off
 - microphone • 33
 - phone • 8

T

- Templates, message • 61
- Text, enter • 27
- Time, set • 86
- Timer • 49
- TV out • 24, 90

V

- Videos
 - recording • 83
 - viewing • 70, 86
- Voice mail server
 - editing • 93
- Voice memos
 - playing • 44
 - recording • 44

W

- Waiting call • 92
- Web browser • 50
- World time • 47

Declaration of Conformity (R&TTE)

For the following product :

GSM900/GSM1800/GSM1900 with Bluetooth

Portable Cellular Telephone

(Product description)

SGH-P850

(Model name)

Manufactured at :

▼ Samsung Electronics Co., Ltd, 94-1, Imsoo-Dong, Gumi City, Kyung-Buk, Korea,
730-350

(factory name, address)

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

Safety	: EN 60950-1:2001
EMC	: EN 301 489-01 v1.4.1 (08-2002) EN 301 489-07 v1.2.1 (08-2002) EN 301 489-17 v1.2.1 (08-2002)
SAR	: EN 50360:2001 EN 50361:2001
Network	: EN 301 511 v9.0.2 (03-2003) EN 300 328 v1.4.1 (04-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[r] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road,
Walton-on-Thames, Surrey, KT12 2TD, UK
Identification mark: 0168

CE 0168

 
The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK
2005.12.01

(place and date of issue)



Yong-Sang Park / S. Manager

(name and signature of authorized person)

It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

- * Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-09077A
English(SEA). 02/2006. Rev. 1.0