



Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola A780 GSM wireless phone.

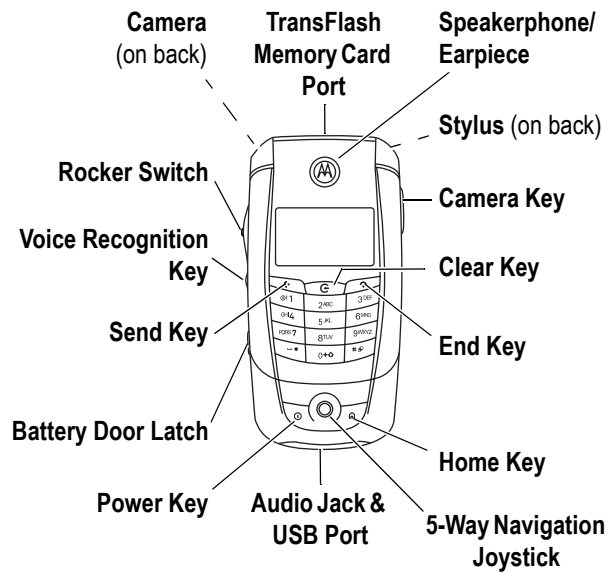

Note: Your phone may not appear exactly as shown above. All features and functions remain the same regardless of your phone's appearance.

Check It Out!

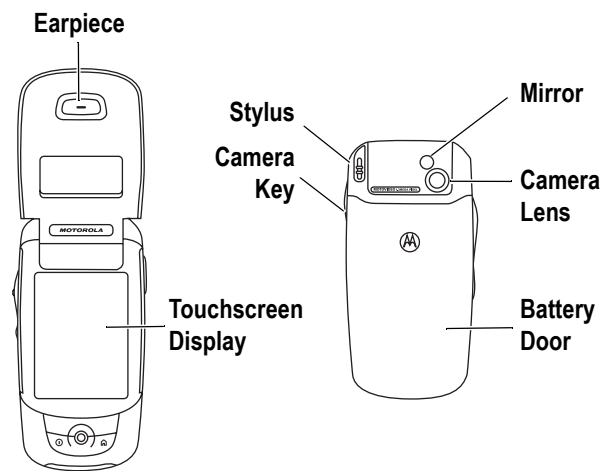

Feature	Description
GPS Satellite Navigation	Full In-Car Satellite Navigation software to help you get from A to B. Please see separate Quick Start Guide for full details of how to use this feature.
Take Photo	Open the flip to view the touchscreen display. Press the camera key to activate the camera, point lens at subject, then press the camera key to take a photo.

2 Check It Out!

Feature	Description
Record Video	Open the flip to view the touchscreen display. Press the camera key, then tap  to put the camera in video mode. Tap Record to start video recording. Tap Done to stop video recording.
Send Multimedia Message	Open the flip to view the touchscreen display. Tap  , then tap Compose. Tap the message type drop-down menu, then tap MMS. Tap the message field to enter text; tap  to hide the keypad when done. Tap a button at bottom of screen to insert a picture  , sound  , new photo  or file  . Tap To to select a contact from your address book or tap the direct line in the To field to enter a number or email address. 
Play Music or Video Clip	Open the flip to view the touchscreen display. Tap  to display the application launcher screen. Tap  Player, tap  , tap Open. Tap File, select the desired file, tap Open to play.

Feature	Description
Set Up a Bluetooth® Wireless Connection	Open the flip to view the touchscreen display. Tap  to display the application launcher screen. Tap  , tap  , tap Turn On. Tap Search to locate and set up a connection with a Bluetooth headset accessory, car kit or external device.

4 Check It Out!

www.motorola.com

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under licence. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft, Windows, ActiveSync and Windows Media are registered trademarks of Microsoft Corporation; and Windows XP and Windows Mobile are trademarks of Microsoft Corporation. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2003, 2004.

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this guide.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.



Contents





Safety and General Information	11
European Union Directives Conformance Statement ..	18
Caring for the Environment by Recycling	19
Getting Started	20
About This Guide	20
Installing the SIM Card	21
Battery Tips	21
Installing the Battery	23
Charging the Battery	24
Installing the TransFlash Memory Card	25
Turning Your Phone On	25
Turning Your Phone Off	26
Making a Call	27
Answering a Call	28
Adjusting Volume	29
Viewing Your Phone Number	29
Learning to Use Your Phone	30
Home Screen	30
Global Navigation Bar	31
Application Launcher	32
Button Bar	34
Status Bar	34
Entering Text	36
Tap and Hold	38
Using the Rocker Switch	39
Using the 5-Way Navigation Joystick	39
Using the Handsfree Speakerphone	40




External Display Features	41
Unlocking the Phone Keypad	41
Using the Quick Menu	42
In-Call Features	42
Using the Address Book	43
Sending a Text Message	45
Dialling Recent Calls	48
Using the RealOne Media Player	49
Setting a Ring Alert Style	50
Calling Features	51
Activating Flip Answer	51
Changing the Active Line	51
Redialling a Number	52
Using Automatic Redial	52
Using Caller ID	52
Cancelling an Incoming Call	53
Calling an Emergency Number	54
Dialling International Numbers	54
Direct Dialling an Extension or Voicemail Number	54
Dialling an Extension Number During a Call	55
Dialling Recent Calls	55
Calling With Turbo Dial	56
Putting a Call On Hold	57
Muting a Call	57
Activating the Handsfree Speakerphone	57
Dialling Another Number During a Call	57
Transferring a Call	58
Making a Conference Call	59
Storing Your Name and Phone Number	60
Address Book	61
Viewing Your Contact List	61



Adding a New Contact	62
Creating a Group	63
Calling or Sending a Message to a Contact	63
Searching for a Contact	64
Sorting the Contact List	65
Deleting a Contact	65
Setting the Contact Storage Location	65
Copying Contacts	66
Creating and Editing Categories	67
Checking Address Book Capacity	68
Sharing Contact Information	69
Synchronizing Address Book Entries	69
Viewing and Editing Owner's Information	70
Messages	71
Using the Message Center	71
Setting Up Your Signature	72
Sending a Text Message	73
Sending a Multimedia Message	74
Viewing the Status of Unsent Messages	77
Tips For Sending Messages	78
Receiving a Message	78
Reading and Replying to Messages	79
Storing an Object From a Multimedia Message	80
Sorting Messages	80
Viewing Draft Messages	80
Viewing Deleted Messages	81
Viewing Messages on Your SIM Card	81
Creating and Using a Personal Folder	81
Moving Messages Between Folders	82
Setting Up the Message Inbox	83
Browser Messages	87

  





8 Contents

 

Information Service Messages	87
Office Applications.	89
Recent Calls	89
Email	90
Calendar	97
Tasks	103
Note Pad	104
Viewer	105
Calculator	106
Alarm Clock	107
File Manager	108
Media Applications.	113
Browser	113
RealOne Media Player	119
Camera	120
Voice Recorder	125
Drawing Pad	126
Video	128
Extra Applications	129
CoPilot Satellite Navigation	129
Bluetooth® Wireless Connections	129
Modem	132
World Time	134
STK	135
Synchronizing Phone Information	136
MOTOSYNC With Exchange ActiveSync	136
MOTOSYNC With SyncML	142
Tethered Sync	145
Phone Setup	147
Ring Alert Style	147



Wallpaper	148
Colour Scheme	148
Text Size	149
Language	149
Voice Commands	149
USB Mode	153
Auto Keylock	154
Touchscreen Calibration	154
Backlight Brightness and Duration	155
Power Management	155
Security	156
Master Reset	160
Master Clear	161
Getting More Out Of Your Phone	162
Forwarding Calls	162
Monitoring Phone Use	163
Using Handsfree Features	166
Sharing Information	167
Troubleshooting	169
Specific Absorption Rate Data	175
Index	177

    



Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.
READ THIS INFORMATION BEFORE USING YOUR PHONE.¹

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following instructions.

External Antenna Care

If your phone has an external antenna, use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone and/or may result in non-compliance with local regulatory requirements in your country.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a fixed line phone.





Body-Worn Operation: Voice Communication

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting voice communications, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines.

If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 2.5 centimeters (1 inch) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 2.5 centimeters (1 inch) from your body.

 
 
 
 
Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries, antennas, and convertible covers, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.





Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

Turn off your wireless device whenever instructed to do so by airline staff. If your device offers a flight mode or similar feature, consult airline staff about use in flight. If your device offers a feature that automatically turns on the phone, then turn off this feature before boarding an airplane or entering an area where the use of wireless devices is restricted.

Medical Devices

Pacemakers

 
 
 
 
Pacemaker manufacturers recommend that a minimum separation of 15 centimeters (6 inches) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 15 centimeters (6 inches) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.





Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road. Using a phone may be distracting in certain circumstances. Discontinue a call if you cannot concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices can be found in the "Wireless Phone Safety Tips" at the end of this guide and/or at the Motorola website: www.motorola.com/callsmart.

 
 
Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Gas or Petrol Stations

Obey all posted signs with respect to the use of radio equipment in gas or petrol stations. Turn off your wireless device if instructed by authorized staff.



Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Damaged Products

If your phone or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center to determine if it has been damaged. Do not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become hot. Take care when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original™ batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Choking Hazards

Your phone or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your phone and its accessories away from small children.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms



occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

 
 
- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

1. The information provided in this document supersedes the general safety information in user's guides published prior to January 28, 2005.





European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

IMEI: 350034/40/394721/9


CE 0168

Type: MC2-41H14

Product
Approval
Number

The above gives an example of a typical Product Approval Number.

 You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.






Caring for the Environment by Recycling





When you see this symbol on a Motorola product, do not dispose the product with household waste.

 Recycling Mobile Phones and Accessories



Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

  



Getting Started



About This Guide

This guide describes the basic features of your Motorola wireless phone.

Optional Features



This label identifies an optional network, SIM card or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.



Optional Accessories



This label identifies a feature that requires an optional Motorola Original™ accessory.




Installing the SIM Card

Your *Subscriber Identity Module* (SIM) card contains your phone number, service details, address book and messages.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water or dirt.

- 1 Press and hold the battery door latch on the side of your phone.
- 2 Slide the battery door down and lift it off the phone.
- 3 Slide the SIM card into the SIM card holder, noting the orientation of the cut corner.

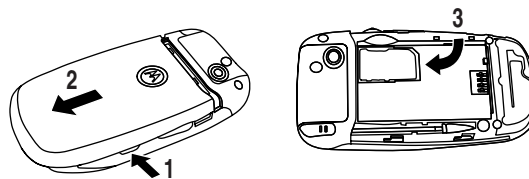

Battery Tips

Battery life depends on the network, signal strength, temperature, features and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by using non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.

 
 




- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.





Contact your local recycling center for proper battery disposal.




Warning: Never dispose of batteries in a fire because they may explode.

  Before using your phone, read the battery safety information in the "Safety and General Information" section included in the grey-edged pages at the back of this guide.



Installing the Battery


- 1 Press and hold the battery door latch on the side of your phone.
- 2 Slide the battery door down and lift it off the phone.
- 3 Insert the bottom of the battery first and press it into place.
- 4 Replace the battery door.

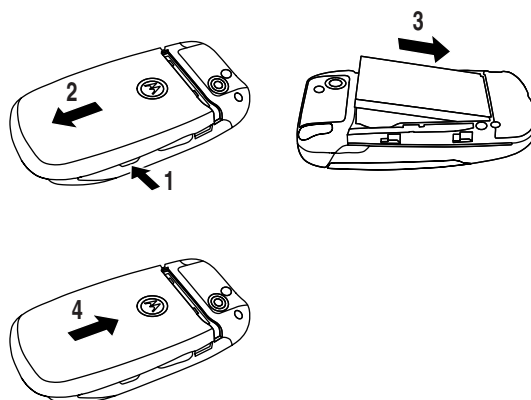

Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

- 1 Open the protective cover and plug the travel charger into the USB connector port on your phone as shown.
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.

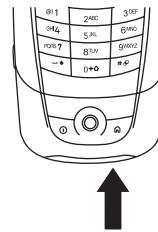

Note: It may take up to 10 seconds for your phone to provide a visible or audible indication that the battery is charging.


- 3 When the battery level indicator in the display stops blinking and shows that the battery is fully charged, remove the travel charger.

Tip: You can safely leave the travel charger connected to the phone after charging is complete. This will **not** damage the battery.

Installing the TransFlash Memory Card



You can insert a TransFlash memory card into the memory card slot on the top of your phone (under the protective cover) and use the memory card to store and retrieve multimedia objects (such as photos, videos and MP3 music files).

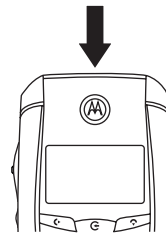


To **eject** the memory card, tap the status bar at the top of the display to open the device status screen, then tap the Eject button that appears under the TransFlash Card option.

Note: Due to a known Microsoft® Windows® USB driver issue, a PC running Windows 2000 with Service Pack 1 or Service Pack 2 will not recognize a TransFlash memory card inserted into your phone when you attempt to transfer or synchronize data between your phone and PC through a USB cable connection.

Turning Your Phone On

- 1 Open the flip, then press and hold the power key  for 2 seconds to turn the phone on.

Note: The flip must be open to turn the phone on. It may take up to 4 seconds for the display to illuminate after you turn the phone on.

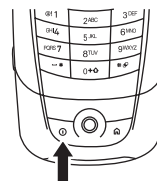



Caution: On power up, the phone may prompt you to enter your SIM card PIN code to unlock the SIM card. If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked.

- 2 If necessary, enter your SIM card PIN code and tap OK to unlock the SIM card.
- 3 If necessary, enter your 4-digit unlock code and tap OK to unlock the phone.

Note: If you do not insert a SIM card, your phone displays No SIM Card. You can select Antenna On (to make an emergency call) or Antenna Off (to use the phone's non-calling features).

 
 
 
 
You can turn off your phone's antenna in locations where wireless phone use is prohibited or when you just want to use the phone's non-calling features (games, personal organiser, multimedia player).

To turn the phone on without activating the antenna: With the flip open, press and hold the power key  for 5 seconds to turn the phone on, then select Antenna Off when the phone prompts you to select a phone mode.

To activate/deactivate the antenna when the phone is on: Tap the status bar at the top of the display to open the device status screen, then tap the Antenna drop-down menu to select On or Off.

Turning Your Phone Off

With the flip open, press and hold the power key  for 2 seconds to turn the phone off.



Making a Call

Flip Closed

- 1 Dial the phone number on the external keypad.
- 2 Press the send key  to make the call.
- 3 When you are finished, press the end key  to end the call.

Tip: If you make a mistake, press the clear key  to delete the last number entered.

Shortcut: Press keypad keys (one per letter) to enter the name of a contact stored in your address book. Your phone checks for possible letter combinations on the keys you press and scans the address book for matching contacts (for example,    = Adrian). Rotate the rocker switch to highlight a contact, then press  to call the contact.

Flip Open

- 1 Tap  in the top global navigation bar to display the phone keypad.
- 2 Tap the keypad keys to dial the phone number.
- 3 Tap Call to make the call.
- 4 When you are finished, tap End to end the call.



Tip: Tap  to select a number from a list of recent received or dialed calls.

Tip: If you need to use the phone keypad during a call (for example, to dial an extension or make a conference call), tap the keypad button  from the in-call screen. Tap  to return to the in-call screen.

Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.


Flip Closed

- 1 Press the send key  to answer the call.
- 2 When you are finished, press the end key  to end the call.

Flip Open

- 1 Tap Answer to answer the call.
- 2 When you are finished, tap End to end the call.


Tip: If you prefer not to answer the call, you can tap Ignore to hang up on the caller or tap Busy to transmit a busy tone signal to the caller (tapping Busy may divert the incoming call to your voicemail inbox).

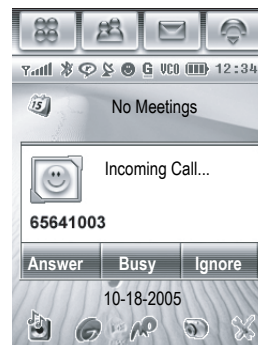

Adjusting Volume

Rotate the rocker switch up or down to:

- increase or decrease speakerphone or earpiece volume during a call.
- increase or decrease volume when playing a sound file or video clip

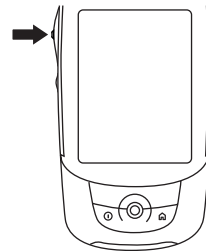

When the flip is closed, use the rocker switch to set your phone's ring alert style. For more information, see page 50.

When the flip is open, tap  in the home screen to set the ring alert style. For more information, see page 147.

Viewing Your Phone Number

To view your phone number:

- 1 Tap  in the top global navigation bar to display the phone keypad.
- 2 Tap  in the bottom button bar to open the phone menu.
- 3 Tap My Number to view your phone number.

While you are on a call, tap  and then tap My Number.

Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 60. If you do not know your phone number, contact your service provider.




Learning to Use Your Phone



See page 1 for a basic phone diagram.

Home Screen

The *home screen* is displayed when you open the flip and turn on your phone. This screen displays a list of the day's events scheduled in your calendar. Icons at the bottom of the screen provide shortcuts to commonly used applications.

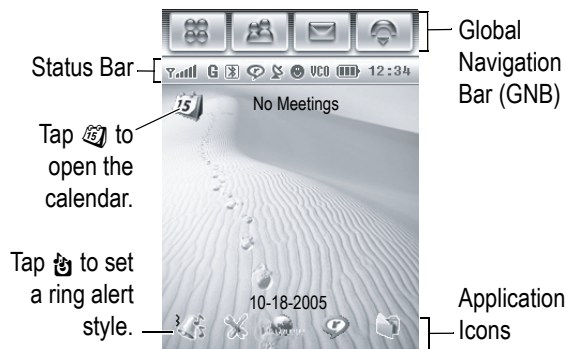

You can use all of your phone's features by tapping on the global navigation bar icons, application icons, buttons and text with the provided stylus.



 
 
To return to the home screen from any application, press the home key  on your phone.

Tip: To change the options that appear in the home screen, tap  to display the application launcher screen, tap  Setup, then tap Home Screen Setup.

Tip: Tap an unused area of the homescreen to display an unobstructed fullscreen view of the watermark image. Tap the fullscreen watermark image to return to the homescreen display.


Global Navigation Bar

Icons in the top *global navigation bar* give you easy access to your phone's primary functions:




- | | | |
|---|-----------------------------|---------------------------------------|
|  | Application Launcher | Go to the application launcher screen |
|  | Address Book | Go to the address book |
|  | Message | Go to the message center |
|  | Phone | Display the phone keypad |

 Additionally, your phone displays a new message icon  in the global navigation bar to notify you of a new message or a missed call. Tap  to view information about the message or missed call.



Application Launcher

Tap the application launcher icon  in the global navigation bar to display the application launcher screen.

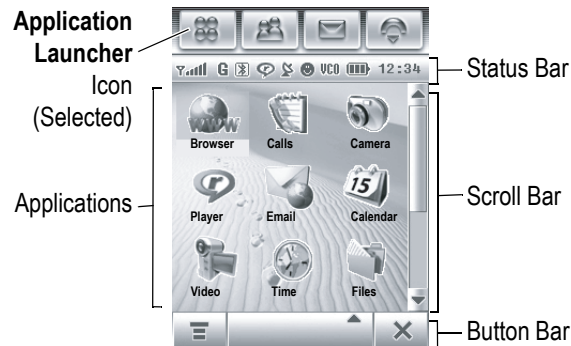

Tap the button in the bottom center of the screen to display All application icons or to display application icons in predefined categories. If necessary, tap the scroll bar on the right side of the screen to view additional application icons. Tap an application icon to select it.

Tip: You can set your phone to display applications in the application launcher screen as a text-based list rather than graphic icons. Tap , then tap List View to change to list view. From list view, tap , then tap Thumbnail View to reset the graphic icons.



The following icons identify applications available on the application launcher screens:

Office Applications


	Calls		Email
	Calendar		Tasks
	Notes		Calculate
	Alarm		Viewer
	Files		

Multimedia Applications

	Browser		Player
	Camera		Recorder
	Draw		Video

Extra Applications

	CoPilot		Help Desk
	Setup		Modem
	Bluetooth		Sync
	VPN		STK
	Time		

 

Games

Your phone may contain Java™ games or applications that add features and functionality to your phone. Instructions are included with each game. You select Java games from the application launcher screen.

Button Bar


The button bar shows functions you can select in the active application. Typical buttons include:

-  **Menu** Press to open a context sensitive menu.
-  **Return** Tap to return to the previous screen.
-  **Exit** Press to exit the current application.

Status Bar

Tip: Tap the status bar to open the device status screen and display phone status information.

The following indicators can display in the status bar:

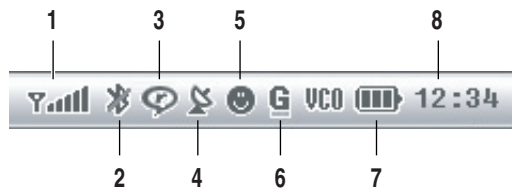

1. Signal Strength – Vertical bars show the strength of the network connection. You cannot make or receive calls when the no signal indicator  or no transmit indicator  displays.

2. GPRS/EDGE – Shows when your phone is using a high-speed *General Packet Radio Service* (GPRS) or *Enhanced Data for GSM Evolution* (EDGE) network connection. A darkened indicator shows that a GPRS or EDGE connection is not available.



3. Bluetooth® – Shows that Bluetooth power is turned on. When Bluetooth power is on, your phone can make a wireless connection with a headset accessory or other external device.

4. RealOne – Shows when the RealOne multimedia player is playing media content.

5. GPS – Shows when GPS (satellite tracking functionality) is active.



6. IM – Shows when you receive an Instant Message.



7. Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when Low Battery displays and the battery alert sounds.

8. Clock – Shows the current time.

Entering Text

Multiple text entry methods make it easy for you to enter names, numbers and messages. The method you select remains active until you select another method.

Tap a text entry area on the screen to bring up a text entry window. If necessary, tap the entry method drop-down menu at the bottom of the screen to select a text entry method.

Tap  in the lower right corner of the screen to hide the text entry keyboard or pad when you are finished or when you want to use the button bar functions.

Handwriting

You can use the stylus as a pen to write letters, numbers and punctuation directly on the screen.

In a text entry window, tap the entry method drop-down menu and tap Handwriting to open the handwriting pad (shown at right).



Tap a button on the handwriting pad to select Chinese characters, English text or numbers as the type of text you want to enter.

Use the stylus to write in one of the 2 writing spaces. For best performance, alternate between the writing spaces so that recognition can occur in one while you are writing in the other.

Write a text character, then wait for your phone to recognize and place it in the text entry window. If your phone places an

incorrect character, tap the character in the choice area that you want to replace it.

Your phone can use a predictive text function to predict the word you are writing. Tap a word in the prediction area to place it in the text entry window. To activate predictive text entry, see page 38.

To enter special characters or edit text, use the function buttons described on page 37.

QWERTY Keyboard

Use the English keyboard (shown at right) to enter letters and numbers at the cursor location in the text entry window.



Numeric Pad

Use the numeric pad (shown at right) to enter digits and/or numeric symbols at the cursor location in the text entry window.



Function Buttons

Tap with any text entry method to open the symbol pad, to enter a symbol at the cursor location. Tap to lock or hide the symbol pad.

To delete the character to the left of the cursor, tap .

To move the cursor to the next line, tap .

To enter a space at the cursor location, tap .



Tip: Tap a location in the text entry window to move the cursor to that location.



Adjusting Text Input Settings

 
You can set your preferred input method, primary and secondary language preferences, specify your writing hand (left or right) and handwriting speed, activate word prediction and word completion, activate a user dictionary and apply a watermark to the text you enter.

Tap  Setup in the application launcher screen, then tap Input Setup to open the input setting screen. Adjust settings, then tap Save to save your settings and return to the setup screen.



Tap and Hold


When using phone applications, in many cases you can tap and hold on an icon, file or field to open a pop-up menu to perform various operations on the selected item. If the specific task you want to perform in an application is not already listed in the display, try using tap and hold to see if the feature you want is available in a pop-up menu.



Using the Rocker Switch

Rotate the rocker switch up or down to scroll through screens and highlight items. Press in the rocker switch to select a highlighted item.


When the flip is closed, use the rocker switch to open the external display menu, highlight and select menu features and set your phone's ring alert style. For more information about using the rocker switch in the external display, see page 41.

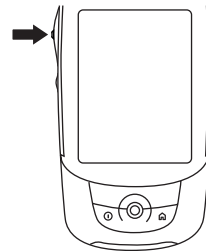

Note: This guide describes how to use the stylus and touchscreen control to use features when the flip is open. In most cases, it does not include the equivalent rocker switch control for using the feature.

Using the 5-Way Navigation Joystick

Press the 5-way navigation joystick  up, down, left or right to scroll through screens, highlight items, change feature settings and play games. Press in the joystick  to select a highlighted item.

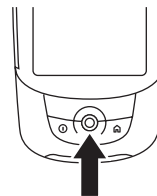

Note: This guide describes how to use the stylus and touchscreen control to use features when the flip is open. In most cases, it does not include the equivalent joystick control for using the feature.



Using the Handsfree Speakerphone

When you activate your phone's handsfree speakerphone, you can talk to the other party without holding the phone to your ear.

Tap **Spkr** to turn the handsfree speakerphone on or off during a call. The handsfree speakerphone remains on until you tap **Spkr** again or turn the phone off.

Note: The handsfree speakerphone is disabled when you connect your phone to a handsfree car kit or headset accessory.





External Display Features

You can use the rocker switch and joystick to access many phone features when the flip is closed.

 
 
 
 
Features described in this chapter are available with additional functionality when the flip is open.

Unlocking the Phone Keypad

Press   to unlock or lock the keypad when the flip is closed.

To **lock** the keypad from the menu: Press in the rocker switch, rotate the rocker switch to highlight Key Lock, then press in the rocker switch to select the option.

You can set your phone keypad to lock automatically when the flip is closed and no activity is detected for a specified time. For more information, see page 154.






Using the Quick Menu


To **open** the external display quick menu, press in the rocker switch when the external display home screen is visible.

You can select the following features in the external display quick menu:

 - Hide Menu
- Contacts
- Write Message
- Play Music
- Recent Calls
- Key Lock



 To **select** a menu item, rotate the rocker switch to highlight it, then press in the rocker switch to select it.




Alternatively, you can press the joystick  up or down to highlight a menu item and press in the joystick  to select a menu item. You can also select most menu items by pressing the send key .

To **exit** any application and return to the external display home screen, press the home key  or end key .

In-Call Features

To open the in-call menu, press in the rocker switch during a call. You can select the following features:

 - Hide Menu
- Mute On
- Hold On



- Speaker On
- Record On

Tip: Rotate the rocker switch to adjust the earpiece or speakerphone volume during a call.

Dialling a Second Number During a Call

During a call, you can dial a second phone number and switch between the 2 active calls as needed.

- 1 Press the keypad keys to dial the second number.
- 2 Press  to make the call. When the second call connects, your phone places the first call on hold.
- 3 To switch back to the first call, press in the rocker switch, highlight Switch, then press in the rocker switch to select the option.

When you are ready to end the call, press  to end the current active call. Press  again to end the second call.

Using the Address Book

Your phone's electronic address book stores your contact list of names and phone numbers.

Shortcut: Press keypad keys (one per letter) to enter the name of a contact stored in your address book. Your phone checks for possible letter combinations on the keys you press and scans the address book for matching contacts (for example,    = **Adrian**). Rotate the rocker switch to highlight a contact, then press  to call the contact.

 
 


Shortcut: Press **••• up** to go to your contact list from the external display home screen.

To **open** the address book and view your contact list:

- 1 From the home screen, press in the rocker switch to open the quick menu.
- 2 Rotate the rocker switch to highlight **Contacts**, then press in the rocker switch to select the option.

Your phone lists the contacts stored on your phone or SIM card. To view contacts stored in the alternate location, press in the rocker switch, rotate the rocker switch to highlight **Phone** or **SIM Card**, then press in the rocker switch to select the option.





Shortcut: Press a keypad key to jump to contact names that begin with the key's letters.

To **call** or **send a text message** to a contact:

- 1 Rotate the rocker switch to highlight the contact, then press in the rocker switch.
- 2 Highlight **Select** and press in the rocker switch to view phone numbers stored for the contact. An indicator to the left of a phone number indicates the number type (mobile, home or work).
- 3 Rotate the rocker switch to highlight the number you want, then press in the rocker switch.
- 4 Rotate the rocker switch to highlight **Call** or **Send a Text Message**, then press in the rocker switch to select the option.

  To store contacts in the address book, see page 61.



Sending a Text Message

You can use the phone keypad to enter and send an SMS *short text message* to another wireless phone user.

Shortcut: Press **right** to open the text message composition screen from the external display home screen.

To **open** the text message composition screen:

- 1 From the home screen, press in the rocker switch to open the quick menu.
- 2 Rotate the rocker switch to highlight Write Message, then press in the rocker switch to select the option.

To **send** a text message:

- 1 Press in the rocker switch to select a Receptient from your address book contact list.

or
Press the keypad keys to enter the recipient's phone number in the To field.
- 2 Rotate the rocker switch down to move the cursor to the message field.
- 3 Press the keypad keys to enter your message as described below.
- 4 To send the message, press in the rocker switch, highlight Send Msg, then press in the rocker switch.
- 5 Highlight OK, then press in the rocker switch or press  to confirm and send the message.

Press  to set **text entry mode** in the message field. Indicators in the bottom left corner of the display show the text entry mode setting:

- iabc** **iTAP®** mode predicts each word as you enter it, to simplify and speedup text entry.
- abc** **Tap** mode lets you enter individual letters and numbers by pressing a key one or more times.
- i123** **Numeric** mode enters numbers only.
- i@#** **Symbol** mode enters symbols only.

Press  to set **text case** in the message field to no capital letters (**iabc** or **abc**), next letter capital (**iAbc** or **Abc**) or all capitals (**iABC** or **ABC**).

Press  to **enter a space** after a word in the message field.

iTAP® Mode

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words and predicts each word as you enter it.

Press keypad keys (one per letter) to enter a word or the start of a word. Your phone lists the most likely combination of letters you entered.

- Press  or press  right to accept the word followed by a space.
- Press  up or down to select other common words or word fragments that can be spelled by the same keypress combination. Press keys to add more letters at the end of the combination.



If you enter a word that the iTAP software does not recognize, start over and enter the first few characters of the word you want. Press up or down until you see the letter combination that matches the start of the word. Then press keypad keys to add more letters to spell the word.

When word completion is activated (see page 38), your phone may guess the rest of the word you are entering.

- Press right to accept the word followed by a space.
- To enter a different word, press keys to enter the remaining characters.

To add punctuation after a word, press , then press up or down to locate the character you want.

TAP Mode

 
To enter text in tap mode, press a keypad key repeatedly to cycle through the letters and number on the key. After one second, the character is accepted and the cursor moves to the next position. Repeat to enter each letter.

The first character of every sentence is capitalised.

When word completion is activated (see page 38), your phone may guess the rest of the word you are entering.

- Press right to accept the word followed by a space.
- To enter a different word, press keys to enter remaining characters.

To edit your message, press to position the cursor to the right of text you want to edit. Press the clear key to delete the character to the left of the cursor.





Dialling Recent Calls

Your phone keeps lists of the calls you recently received and dialled, even if the calls did not connect.

Shortcut: Press **down** or press , to go to the recent calls screen from the external display home screen.

To **open** the recent calls screen:

- 1 From the home screen, press in the rocker switch to open the quick menu.
- 2 Rotate the rocker switch to highlight Recent Calls, then press in the rocker switch to select the option.

To **call** or **send a text message** to a recent call:

- 1 Rotate the rocker switch to highlight the Dialed Calls, Missed Calls or Answered Calls list, then press in the rocker switch to view the list.
- 2 Rotate the rocker switch to highlight the number you want, then press in the rocker switch.
- 3 Rotate the rocker switch to highlight Call or Send SMS, then press in the rocker switch to select the option.

To view details about a recent call (time, date and duration), highlight the number, press in the rocker switch, highlight Details, then press in the rocker switch. Alternatively, highlight the number and press to view its details. Press again to call the number.

For more information about using recent calls, see page 89.



Using the RealOne Media Player

Use the RealOne Media Player to play audio files stored on your phone.

Shortcut: Press **◂** **left** to launch the media player from the external display home screen.

To **open** the media player screen:

- 1** From the home screen, press in the rocker switch to open the quick menu.
- 2** Rotate the rocker switch to highlight **Play Music**, then press in the rocker switch to select the option.

To **use** the media player:

- Press in the rocker switch, highlight **Play**, then press in the rocker switch to play audio files stored in the current Playlist. Highlight and select **Pause** to pause audio playback.
- Press **◂** left or right to rewind or fast forward through an audio file.
- Press **◃** up or down to play the previous or next audio file.
- Rotate the rocker switch to adjust the volume.
- Press in the rocker switch, highlight **Mute On**, then press in the rocker switch to mute the audio playback.
- Press  to stop audio playback.
- Press in the rocker switch, highlight **Exit Music**, then press in the rocker switch to exit the media player.

For more information about using the media player, see page 119.

 
 
 


Setting a Ring Alert Style

You can set 5 different ring alert styles on your phone or select Silent to turn off the incoming call alert.

From the external display home screen, rotate the rocker switch to open the ring alert screen and highlight a ring alert style. Press in the rocker switch to select the highlighted alert style.

For more information about setting and using ring alert styles, see page 147.



Calling Features

For basic instructions on how to make and answer calls, see page 27.

Activating Flip Answer

Set your phone to automatically answer calls when you open the flip.

- 1 Tap  in the global navigation bar to display the phone keypad.
- 2 Tap , then tap Setup to open the phone setup menu.
- 3 Tap the check box ☐ beside Flip Answer. A check mark ☒ indicates that flip answer is activated.
- 4 Tap  to exit the phone setup menu.

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for dual-line-enabled SIM cards.

- 1 Tap  in the global navigation bar to display the phone keypad.
- 2 Tap , then tap Setup to open the phone setup menu.
- 3 Tap Switch Line: Line 1 (or Line 2) to switch to the other line.
- 4 Tap  to exit the phone setup menu.

Redialling a Number

- 1 Tap  in the global navigation bar to display the phone keypad.
- 2 Tap , then tap Dialled Calls to go to the dialled calls list.
- 3 Tap the number you want to redial.

Using Automatic Redial



When you receive a busy signal, your phone displays Call Failed, Number Busy.

To redial the phone number, tap Redial.

Your phone automatically redials the number. You must activate automatic redial to use the feature. To activate automatic redial:

- 1 Tap  in the global navigation bar to display the phone keypad.
- 2 Tap , then tap Setup to open the phone setup menu.
- 3 Tap the check box ☐ beside Auto Redial. A check mark ☒ indicates that automatic redial is activated.
- 4 Tap  to exit the phone setup menu.

Using Caller ID



Calling line identification (caller ID) displays the phone number for incoming calls in your phone's external and internal displays.

The phone displays the caller's name (and picture ID, if available) when the name is stored in your address book or Incoming Call when caller ID information is not available.

You can also set your phone to play a distinctive ring tone for specific contacts stored in your address book. For more information, see page 62.

To show or hide your phone number as an ID for the calls that you make:

- 1 Tap  in the global navigation bar to display the phone keypad.
- 2 Tap , then tap Setup to open the phone setup menu.
- 3 Tap Show ID, then tap On or Off to show or hide your caller ID with outgoing phone calls.
- 4 Tap  to exit the phone setup menu.

Tip: Select Network Controlled to let the network determine your caller ID status.

Cancelling an Incoming Call



While the phone is ringing or vibrating, tap Ignore to cancel the incoming call.

Depending on your phone settings and/or service subscription, the call may be forwarded to another number or the caller may hear a busy signal.



Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

- 1 Tap  in the global navigation bar to display the phone keypad.
- 2 Tap the keypad keys to dial the emergency number.
- 3 Tap **Send** to make the call.



Dialling International Numbers

When the phone keypad is displayed, tap and hold  to insert the local international access code (+) for the country from which you are calling.

Alternatively, you can tap , tap **Insert**, then select **Insert +** to insert the local international access code.

Direct Dialling an Extension or Voicemail Number

To dial an extension or voicemail number directly, you can insert a pause (P) character into the dialling sequence.

- 1 Use the keypad to dial the phone number.



 
 


- 2 When you need to insert a pause, tap , tap Insert, then select Insert Pause to insert a P at the cursor location.
- 3 Dial the extension number.
- 4 Tap Call to make the call.

Your phone dials the phone number, waits for the call to connect, then dials the remaining digits.

Tip: Use the same procedure to insert a wait (W) character in the dialling sequence. Your phone dials the number, waits for the call to connect, then prompts you for confirmation before it dials the remaining digits.

Dialling an Extension Number During a Call





- 1 Tap the keypad button  to display the phone keypad.
- 2 Dial the extension number.
- 3 Tap  to return to the in-call screen.

Dialling Recent Calls

Your phone keeps lists of the calls you recently received and dialled, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

  - 1 Tap  in the global navigation bar to display the phone keypad.
- 2 Tap  to open the recent calls menu.





- 3 Tap Answered Calls, Missed Calls or Dialed Calls to view the corresponding call list.

- 4 Tap an entry to call the entry's number.

Note: This method directly places your call when you select an entry in the call list. If you want to view entry details (time, date and duration) or perform other operations with the entry, tap  Calls in the application launcher to display the call history screen. For more information, see page 89.

Calling With Turbo Dial

You can store up to 9 frequently used phone numbers in the turbo dial list, then dial the numbers by tapping and holding a single keypad number key.

To turbo dial a phone number:

- 1 Tap  in the global navigation bar to display the phone keypad.
- 2 Tap and hold a keypad key to dial the phone number assigned to the key.

If no number is stored, your phone prompts you to store a phone number in the turbo dial list.

To setup the turbo dial numbers list:

- 1 Tap  in the global navigation bar to display the phone keypad.
- 2 Tap , then tap Setup to open the setup menu.
- 3 Tap Turbo Dialing to open the turbo dial list.
- 4 Enter phone numbers in the turbo dial list.





Putting a Call On Hold

During a call, tap Hold to put the call on hold. Tap Hold again to resume the call.

Muting a Call

During a call, tap Mute to turn off your phone's microphone. Tap Mute again to resume the call.

Activating the Handsfree Speakerphone

During a call, tap Spkr to turn on the handsfree speakerphone. The handsfree speakerphone remains on until you tap Spkr again or turn the phone off.



 
Dialling Another Number During a Call



During a call, you can make a call to another phone number.

- 1 Tap the keypad button  to display the phone keypad.
- 2 Tap the keypad keys to dial the phone number.
- 3 Tap Send to make the call.

When the new call connects, the first call is put on hold while you talk to the third party.





To switch between the 2 calls:

- 1 Tap , then tap Switch to put the current active call on hold and switch to the other call.
- 2 Tap End to end the current active call.

Transferring a Call



You can announce that you are transferring an active call to another party or you can directly transfer the call.

Announce the Call Transfer

- 1 Tap Hold to put the call on hold.
- 2 Tap the keypad button to display the phone keypad.
- 3 Tap the keypad keys to dial the number where you are transferring the call.
- 4 Tap Call to make the call and speak to the person who answers.
- 5 Tap , then tap Transfer to Hold.

Do Not Announce the Call Transfer

- 1 Tap , then tap Transfer.
- 2 Tap the keypad keys to dial the number where you are transferring the call.
- 3 Tap Call to transfer the call.





Making a Conference Call



Connect an active call and a call on hold so that all parties can speak to each other.

- 1 Tap  in the global navigation bar to display the phone keypad.
- 2 Tap the keypad keys to dial the first party's number.
- 3 Tap **Call** to make the call.
- 4 When the call connects, tap the keypad button  to display the phone keypad.
- 5 Tap the keypad keys to dial the next party's number.
- 6 Tap **Call** to make the call.
- 7 When the call connects, tap **Link** to connect the 2 calls.

Tip: Repeat steps 4 to 7 to add additional parties to the conference call.





Storing Your Name and Phone Number

- 1 Tap  in the global navigation bar to display the phone keypad.
- 2 Tap , then tap Setup to open the phone setup menu.
- 3 Tap My Number to open the number editor.
- 4 Enter your name and number (for line 1 **and** line 2, if applicable), then tap Done to store the information.

If you do not know your phone number, contact your service provider.





Address Book



You can store a contact list of names, phone numbers and email addresses in your phone's electronic address book.

Viewing Your Contact List

To see the names in your address book, tap  in the global navigation bar to open the address book. To change the way your contact list is displayed, tap , tap Setup, then tap the Default List Display drop-down menu to select List View or Thumbnail View.

Using Category Views

 
 
 
Defining categories for your contacts helps you manage address book information. You can classify contacts in different categories according to your communication needs and display contacts by category. Your phone provides the following basic categories:

Phone – Lists contacts stored on your phone (this category does **not** list contacts stored on your SIM card).

Unfiled – Lists contacts stored on your phone that are not assigned to a user-defined category. This is the default category setting for new contacts.

SIM Card – Lists contacts stored on your SIM card.

When the contact list is displayed, tap the category button in the bottom button bar and select a category name to display only the contacts in that category.



Viewing and Editing Contact Details


- 1 When the contact list is displayed, tap a contact name to view its details.
- 2 Tap Edit to edit the contact. Your phone displays complete contact details.
- 3 To edit contact information, tap the direct line in the field you want to edit.
- 4 When you are finished editing contact information, tap Done to store your changes and return to the contact list.

Adding a New Contact

Contacts can be stored to phone memory or SIM card memory. To set the default storage location, see page 65.

Note: You **cannot** enter multiple phone numbers and personal information for contacts stored on the SIM card. The SIM card can only store a name and one phone number per contact.

- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap , then tap New Contact.
- 3 On the new contact screen (shown at right), tap the Photo field to assign a picture ID to the entry. Your phone displays the picture when you receive a call from this contact.


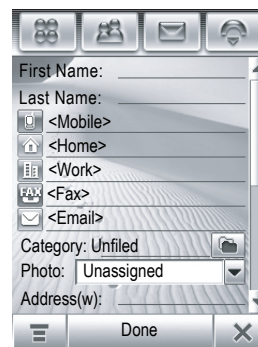




- 4 Tap the direct line in a field to enter contact details. Pull down the scroll bar to display additional fields.
- 5 To set a distinctive ring tone for the contact, tap the Ring Tone field and select Browse. Scroll to select the desired tone and tap OK. Your phone sounds the tone when you receive a call from this contact.
- 6 When you are finished entering information, tap Done to store the contact.

Creating a Group

 
 
You can create a group mailing list consisting of multiple contacts stored in the address book. Groups make it easy for you to send a message to multiple recipients simultaneously.



- 1 Tap  in the top application launcher bar to open the address book.
- 2 Tap , then tap New Distribution List.
- 3 Tap Messaging or Email to specify the default type of message to send to the group, then tap OK. You must enter a name for the group and the group must contain at least one member.
- 4 When you are finished entering information, tap Save to store the group.

Calling or Sending a Message to a Contact

  - 1 Tap  in the global navigation bar to open the address book.







2 Tap a contact name to view its details.

3 In the details list:

 - Tap the phone number following the mobile phone indicator  to call the contact's mobile phone. Other indicators may identify other numbers stored for the contact (such as home, work or fax).
- Tap the message indicator  to the **right** of a phone number to send an SMS or MMS message to the number.
- Tap the email address following the email indicator  to send an email message to the address. Alternatively, tap the message indicator  to the **right** of the email address to send an MMS message to the address.



Searching for a Contact

 


- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap , then tap Find Contacts.
- 3 Select Contacts Name, Number or Other, enter the desired information in the Search Text field, then tap Find.

Your phone displays the search result or notifies you that no match can be found.

To continue searching, tap Find New.

 To return to the contact list, tap .





Sorting the Contact List

- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap , then tap Setup.
- 3 Tap the Sort Names By drop-down menu to sort the contact list by First Name or Last Name.
- 4 Tap Save to save the setting.

Deleting a Contact

- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap , then tap Delete Contacts.
- 3 Check the contact(s) you want to delete, then tap Delete.
- 4 Tap OK to confirm the deletion.

Setting the Contact Storage Location

Contacts can be stored to phone memory or SIM card memory. You can set the default memory location where new address book contacts are stored.

Note: You **cannot** enter multiple phone numbers and personal information for a contact stored on the SIM card.

- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap , then tap Setup.



3 Tap the Default Memory Location drop-down menu to set the default memory location.

 
 
4 Tap Save to save the setting.

To copy a contact between the phone and SIM card, see the following section.

Copying Contacts



You can copy contacts between your phone and SIM card. This procedure does **not** delete the original contact.

Note: The SIM card can only store one phone number per contact; it cannot store multiple phone numbers and personal information for a single contact. When you copy an entry from the phone to the SIM card, your phone prompts you to specify the number you want to store for the contact.



- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap , then tap Copy to SIM/Phone.
- 3 Select Phone to SIM or SIM to Phone, then tap OK.
- 4 Check the number(s) you want to copy. If you copy from the SIM card to phone memory, specify the number type.
- 5 Tap OK to copy the numbers to the new location.

  Note: The number of entries you can store on your SIM card depends on the SIM card capacity. The types of entries that can be copied to the SIM card may vary depending on the function of the SIM card.







Creating and Editing Categories

Your address book includes several predefined categories. You can create additional user-defined categories to organize your contacts.



Creating a New Category

  - 1 Tap  in the global navigation bar to open the address book.
- 2 Tap the category button in the bottom button bar, then tap Edit Category.
- 3 Tap , then tap New to create a new category.
- 4 Tap the Name field to assign a name to the category, then tap OK.
- 5 Tap Add Members, then check the contacts you want to add to the category.
- 6 Tap Select to add the selected contacts to the category.



Adding Members to a User Category

  - 1 Tap  in the global navigation bar to open the address book.
- 2 Tap the category button in the bottom button bar, then tap Edit Category.
- 3 Select the category, tap Add Members, then check the contacts you want to add to the category.
- 4 Tap Select to add the selected contacts to the category.





Deleting a User Category

Note: You cannot delete the predefined categories in your address book.

- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap the category button in the bottom button bar, then tap Edit Category.
- 3 Select the category, tap , then tap Delete.
- 4 Tap OK to confirm the deletion.

Checking Address Book Capacity

You can display the number of address book entries currently stored on the phone and SIM card and the total number of entries you can store on the SIM card.

- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap , then tap Memory Status. Your phone displays the number of phone and SIM card contacts and the SIM card capacity (*number of contacts*).
- 3 Tap  to return to the address book.



Sharing Contact Information

You can share contact information with others by sending the data as a vCard to another phone, PC or hand-held device.

- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap the name of the contact you want to send. Your phone displays contact details.
- 3 Tap , then tap Share.
- 4 Tap Bluetooth, then tap OK to exchange the data through a Bluetooth® wireless connection. Tap Message or Email, then tap OK to send the contact data in an MMS or email message.
- 5 Complete the setup procedure for the transfer method you selected.
- 6 Tap OK to send the contact information in a vCard.

For more information about using a Bluetooth wireless connection, see page 129.

Synchronizing Address Book Entries

You can synchronize address book contacts between your phone over-the-air direct to a corporate Microsoft® Exchange Server 2003 using MOTOSYNC.



Alternatively, you can synchronize contacts to your PC through a Bluetooth® wireless connection or USB cable connection using Motorola



 
 
 
 
mobile PhoneTools software. For more information, see page 136.



Viewing and Editing Owner's Information

You can store information about yourself in the address book. Then, if you lose your phone, the person who finds it can contact you to return the phone.

- 1 Tap  in the global navigation bar to open the address book.
- 2 Tap , then tap Owner's Information.
- 3 If owner's information is stored, the phone displays the owner's contact details. Tap Edit to edit the owner's information.
- 4 If owner's information is not stored, the phone displays the owner's information entry screen. Enter information as you would for a new contact (see page 62.)
- 5 When you are finished entering information, tap Done to store the owner's information.



Messages



You can send and receive short text-based SMS messages and multimedia MMS messages containing media objects such as photos, pictures, animations, sounds, voice records and video clips.

You can use instant messaging to exchange messages in real time with other wireless phone users.

Using the Message Center

Note: You must set up your message inbox **before** you can send and receive messages. Usually, your service provider has already set up the message inbox for you. For setup instructions, see page 83.

Tap  in the global navigation bar to go to the message center (shown at right).

Your messages are stored in different folders in the message center. The number to the right of each folder name indicates the number of messages it contains. Tap a folder to display its contents.

The message center contains the following folders:

	Inbox	1	[0]
	SIM card	5	[0]
	Drafts	1	[0]
	Outbox	0	[0]
	Sent Items	6	[0]
	Trash	1	[0]
	Compose		

Inbox – Stores SMS and MMS messages you have received.



SIM Card – Contains SMS messages stored on your SIM card. You can move these messages to other folders.

Drafts – Temporarily stores messages that you are still writing.

Outbox – Stores your messages that have not yet been sent.

Sent Items – Stores copies of messages you have sent.

 
 
 
 
Trash – Stores messages you have deleted. If you have not permanently deleted a message, you can retrieve it.

You can create additional personal folders to organize and store your messages.

Setting Up Your Signature

You can store your signature and manually or automatically append it to the messages you send.

- 1 Tap  in the global navigation bar to go to the message center.
- 2 Tap , then tap Signature Editing to open the signature editing screen.
- 3 Tap the direct line in the Signature Content field to enter your signature.
- 4 If you want your phone to automatically add your signature to all outgoing messages, tap the check box ☐ below the signature. A check mark ☒ indicates that automatic signature is activated.
- 5 Tap Save to store your signature.



Sending a Text Message



You can send an SMS *short text message* to other wireless phone users and to email addresses.

To compose and send an SMS message:

- 1 Tap  in the global navigation bar to go to the message center.
- 2 Tap Compose.
- 3 Tap the message type drop-down menu, then tap SMS to open the SMS message composition screen.
- 4 Tap the message field, then tap the text entry method drop-down menu at the bottom of the screen and select an entry method to enter text in the message field. When you are finished, tap  in the lower right corner of the screen to hide the text entry keyboard or pad.
Alternatively, you can tap , tap Load, then tap Quick Text to insert a prewritten quick text note in the message field.
- 5 Tap To to select contacts from your address book or tap the direct line in the To field to enter a phone number or email address.
- 6 Tap Send to send the message.



When composing an SMS message, you can tap  to perform various operations on the message prior to sending it. The SMS menu can include the following options:

Option	Description
Load	Insert a quick text note or auto-signature in the message.
Save To	Save the message to the Drafts folder.
Send Options	Receipt Request: Request a delivery report for the message. Expire After: Set the expiration time for an undelivered message.
Delete	Delete the message.



Sending a Multimedia Message



A *Multimedia Messaging Service (MMS) multimedia message* contains one or more pages with text and embedded media objects (including photos, pictures, animations, sounds, voice records and/or video clips). You can send an MMS message to other wireless phone users and to email addresses.



To compose and send an MMS message:

- 1 Tap  in the global navigation bar to go to the message center.
- 2 Tap Compose.
- 3 Tap the message type drop-down menu, then tap MMS to open the MMS message composition screen (shown at right).
- 4 Tap the message field, then tap the text entry method drop-down menu at the bottom of the screen and select an entry method to enter text in the message field. When you are finished, tap  in the lower right corner of the screen to hide the text entry keyboard or pad.
- 5 Tap a button in the media toolbar at the bottom of the screen to insert media objects on the page or attach files to the message.
 -  Tap to insert a picture, video or new drawing on the page.
 -  Tap to insert a sound file or new voice record on the page.
 -  Tap to activate the Camera, take a photo or record a video clip and insert it on the page.
 -  Tap to attach a contact, event, task or file to the message.



- 6 To add a new page after the current page, tap .
Repeat steps 4 and 5 to enter contents for the new page.
- 7 Tap To to select contacts from your address book or tap the direct line in the To field to enter a phone number or email address.
- 8 Tap Cc, Bcc or Subject to enter additional recipients or a message subject. (Use the MMS menu, described below, to show or hide these fields.)
- 9 Tap Send to send the message.

When composing an MMS message, you can tap  to perform various operations on the message prior to sending it. The MMS menu can include the following options:

Option	Description
Load	Insert a quick card, quick text note or auto-signature on the page.
Save To	Save the message to the Drafts folder or save it as a quick card.
Send To Blog	Send the message to your personal Web log. 
Page Duration	Set the number of seconds each page is displayed.
Preview	Preview the MMS message.

Option	Description
Show	Show or hide the Cc, Bcc and/or Subject header fields. Use Cc or Bcc to carbon-copy or blind-carbon-copy the message to additional recipients. Use Subject to specify a subject for the message.
Send Options	Receipt Request: Request a delivery report or read report for the message. Expire After: Set the expiration time for an undelivered message. Priority: Set message priority. Send Later: Set a time and date for your phone to send the message.
Delete	Delete the current page, delete an object on the page or delete the message.

Viewing the Status of Unsent Messages

Outgoing messages that failed to send or have not yet been sent are stored in the outbox.

On the message center screen, tap **Outbox** to display its contents. Messages in the outbox are sorted from newest to oldest.

Tap a message to read it. You can edit the message while it is open.

Tips For Sending Messages

- When you enter an SMS text message, a counter at the top right corner of the display shows the number of characters left on the current page and the number of pages you have written (*character# / page#*). Network charges are based on the number of pages sent.
- When you enter an MMS multimedia message, a counter at the top of the display shows the current message size in kilobytes. Another counter shows the number of pages.
- When you manually enter phone numbers and/or email addresses in the To field, you must insert a comma between each entry.

Receiving a Message



Your phone displays the  **Prompt** icon in the global navigation bar to notify you that you have received a new message.

Tap  to display message details (sender, subject, time and size).

Tap Read to read an SMS message. Tap Download to download an MMS message to your phone, then tap Read to read it.

Tap  to return to the previous screen without reading the message. The message is stored in the inbox.

Tap  to perform various operations on the message. The received message menu can include the following options:

Option	Description
Reply With Original	Include a copy of the original message in your reply. (SMS only)
Call Back	Call a phone number embedded in the message header or message body.
Forward	Open a copy of the message, with an empty To field.
Save	Save the sender's phone number or email address.
Save Object	Save a media object in the message. (MMS only)
Save As Quick Card	Save the current MMS page as a quick card. You can insert the quick card into MMS messages that you compose. (MMS only)
Move To Folder	Move the message to another folder.
Delete Message	Delete the message.

When your phone displays *Memory is Full!*, you must delete some existing messages from your inbox, outbox or drafts folder to receive new messages.

Reading and Replying to Messages

Messages that you receive are stored in the inbox.



On the message center screen, tap **Inbox** to display its contents. Messages in the inbox are sorted from newest to oldest.

Tap a message to read it. Your phone displays the sender's name (if stored in your address book) or phone number, the message contents and the time it was sent.

- Tap **Reply** to send a reply to the message.
- Tap  to return to the previous screen without making any changes.

Storing an Object From a Multimedia Message



To store a media object contained in a multimedia message, tap and hold the object to open a pop-up menu, then select **Save** to store the object on your phone.

 
If the object is contained in a message attachment, tap and hold the attachment to open a pop-up menu, then select **Save** to store the object.

Sorting Messages

On the **Inbox**, **Outbox** or **Trash** screen, tap , then tap **Sort By** to sort messages by **Time**, **Subject** or **Name**.

Viewing Draft Messages

Messages that you are still writing are stored in the drafts folder.





On the message center screen, tap Drafts to display its contents. Tap a message to read it. You can edit the message while it is open and then send it immediately.

Viewing Deleted Messages

Messages that you delete are stored in the trash folder.

On the message center screen, tap Trash to display its contents. Tap a message to read it. You can edit the message while it is open.

Tap Delete All to permanently delete all messages in the trash folder.

Viewing Messages on Your SIM Card

 
On the message center screen, tap SIM Card to display the messages stored on your SIM card. Tap a message to read it.

Creating and Using a Personal Folder

You can create one or more personal folders to store your messages and lock your personal folders to prevent other users from reading the messages stored in them.

To create a personal folder:

- 1 Tap  in the global navigation bar to go to the message center.
- 2 Tap , then tap New Folder.





- 3 Tap the direct line in the Name field to enter a name for the folder.
- 4 To lock the folder to prevent unauthorized access, tap the check box ☐ beside Protected by Lock Code? A check mark ☒ indicates that the folder lock feature is activated.
- 5 Tap Done to save the folder.

The personal folder is listed on the message center screen along with your other folders. If the personal folder is locked, your phone prompts you to enter the phone unlock code when you try to open the folder or move a message to it. Enter your unlock code to open the folder.

 
 
 
 
To **edit** a personal folder, open it and tap , then tap Folder Setup. You can change the folder name and turn the folder lock feature on or off as desired.

To **delete** a personal folder, open it and tap , then tap Delete Folder. Tap OK to confirm the deletion.

Note: You must remove all messages from a personal folder in order to delete it.

Moving Messages Between Folders



You can move messages between folders as desired. For example, you can move a message from the inbox to the SIM card folder and take it with you when you use your SIM card in another phone or move it to a locked personal folder to prevent others from reading it.





To move messages to a new folder:

  
- 1 Tap  in the global navigation bar to go to the message center.
- 2 Open the folder that contains the message(s) you want to move.
- 3 Tap , then tap Move.
- 4 Tap the check box ☐ beside each message you want to move or tap the check box beside All to select all messages. A check mark ☒ indicates that the message is selected.
- 5 Tap OK to open the move to folder screen.
- 6 Tap the destination folder, then tap OK to move the messages.



Tip: To quickly move a single message, tap and hold the message to open a pop-up menu, then select Move to Folder.

Setting Up the Message Inbox

 - 1 Tap  in the global navigation bar to go to the message center.
- 2 Tap , then tap Service Setup.
- 3 Tap Short Message or Multimedia Message to configure your SMS or MMS inbox settings as described below.
- 4 When you are finished, tap OK to save your settings.



SMS Setup Options

Note: Actual field names and values may vary depending on the technologies available to your service provider. Some settings may not be available for all phone models.

Option	Description
Server Center Number	Number of the center that handles your outgoing text messages.
Expire After	Number of days your network should attempt to send undelivered text messages.
Use GPRS	Use a high-speed GPRS connection to send and receive text messages.
Send Email by SMS (Email Gateway)	Port number for the gateway that handles outgoing text messages sent to an email address.

MMS Setup Options

Note: Actual field names and values may vary depending on the technologies available to your service provider. Some settings may not be available for all phone models.

Option	Description
Default Profile	Select an MMS network profile. (See next section to edit profile settings or create a new network profile.)
Expire After	Number of days your network should attempt to send undelivered MMS messages.

Option	Description
Max Sending Size	Maximum size of incoming multimedia message to be downloaded to your phone.
Auto Download	Automatically download MMS messages to your phone. You can set this function to be disabled when roaming and set a maximum file size for auto-downloaded messages.
Show My Number	Send your number with outgoing MMS messages.
Allow Delivery Report	Send a delivery report for an incoming MMS message when requested.
Block Senders	Block incoming MMS messages from specific senders.
Reject Read Reply Request	Do not send a reply to the sender when you read a new received message.
Auto Retry	Automatically attempt to resend messages when delivery fails.

MMS Network Profile Setup

You can edit an existing MMS network profile or create a new MMS network profile.

- 1 Tap  in the global navigation bar to go to the message center.
- 2 Tap , then tap Service Setup.
- 3 Tap Multimedia Message to open the MMS inbox setup editor.



4 Tap the folder tree icon  in the Default Profile field to open the MMS profile list.

5 To edit an existing MMS network profile, highlight the profile, tap , then tap Edit.

or

To create a new MMS network profile, tap , then tap New.

6 When you are finished, tap Save to save your settings.

You must enter the following configuration settings. If necessary, contact your service provider to obtain the following information:

Option	Description
Profile Name	Enter the profile name.
MMSC	Select the server you want to use (information may be viewable only).
Network Profile	Select a network connection profile to connect to the Internet. For more information, see page 116.
WAP Gateway IP	Primary service gateway IP address for your WAP service provider.
Port Number	Primary service port number.
WAP Gateway IP(2)	Secondary service gateway IP address.
Port Number	Secondary service port number.



Browser Messages



Your network's Web server can send you *browser messages* that you read in your micro-browser.

Your phone displays the  **Prompt** icon in the global navigation bar to notify you that you have received a new browser message. Tap Read to read the message.

You must activate the feature to receive browser messages:

- 1 Tap  in the global navigation bar to go to the message center.
- 2 Tap , then tap Service Setup.
- 3 Tap Browser Message to open the WAP push editor.
- 4 Tap Receive All to receive all browser messages or Restricted to restrict the browser messages you receive.
- 5 Tap Save to save the setting.

Information Service Messages



Information service messages are broadcast messages that you can receive, such as stock updates, news headlines or sports scores.

Your phone displays the  **Prompt** icon in the global navigation bar to notify you that you have received a new information service message. Tap Read to read the message.

You must set up your information services message inbox **before** you can receive information service messages.



Note: Usually, your service provider has already set up the information services message inbox for you.

- 1 Tap  in the global navigation bar to go to the message center.
- 2 Tap , then tap Service Setup.
- 3 Tap Info Service to open the info service inbox setup editor.
- 4 Tap Service On to activate info service on your phone.
- 5 Tap Active Channels... to set subscription channels.
- 6 Tap , then tap New Channel to add a new channel.

or

Tap , then tap Delete Channels to delete one or more channels.

- 7 Tap Save to save your settings.
- 8 Tap OK to exit the active channels menu.
- 9 Tap Languages to set the languages in which you receive cell broadcasts.
- 10 Set the first and second languages, then tap Save to save the language settings.
- 11 Tap Save to save your info service settings.



Office Applications

Recent Calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

- 1 Tap  Calls in the application launcher screen to display the call history screen.
- 2 Tap Answered Calls, Missed Calls or Dialed Calls to view the corresponding call list.
- 3 Tap an entry to view call details (time, date and duration).
- 4 Tap Call to call the entry's number or tap  to perform various operations on the entry:

Option	Description
Store	Create an address book entry with the number stored in the number type field you specify.
Send SMS	Open a new text message with the number in the To field.
Send MMS	Open a new multimedia message with the number in the To field.
Delete	Delete the entry.

Email



You can send and receive email messages with your wireless phone.

Tip: You must have an Internet connection to send and receive email messages. If necessary, see page 116 for information on how to set up a network connection profile.

If you are using MOTOSYNC, email setup is covered as part of the MOTOSYNC configuration and no further action is needed. If you are using POP3/IMAP, email setup is described on page 93.

Using Mailboxes and Folders

Note: You must set up your email mailbox **before** you can send and receive email messages. Usually, your service provider has already set up the email mailbox for you. For setup instructions, see page 93.

Tap Email in the application launcher screen to launch the email application.

Email messages are stored in different folders in your email mailbox.

Inbox – Email messages you have received.

Outbox – Your email messages that have not yet been sent.

You may have additional folders in an email mailbox, such as Drafts, Sent Items, Trash and/or personal folders that you create.

If you have separate mailboxes for different email accounts, tap the Mailbox field at the top of the email message screen to



select the mailbox you want to use. Your phone displays the folders associated with the selected mailbox.



Sending an Email Message



You can send an email message to one or more recipients. You can manually enter each recipient's email address or select addresses from the address book.

When you manually enter email addresses, you must insert a comma, semicolon or colon between each address.

To compose and send an email message:

- 1 Tap  Email in the application launcher screen to launch the email application.
- 2 Tap  then New Email to open the email message composition screen.
- 3 Tap the direct line in the Subject field to enter a subject for the message.
- 4 Tap the message field, then tap the text entry method drop-down menu at the bottom of the screen and select an entry method to enter text in the message field. When you are finished, tap  in the lower right corner of the screen to hide the text entry keyboard or pad.
- 5 Tap To to select contacts from your address book or tap the direct line in the To field to enter a phone number or email address.
- 6 Tap Send to send the message.



When composing an email message, you can tap  to perform various operations on the message prior to sending it. The email message menu can include the following options:

Option	Description
Save to draft	Save the message to the Drafts folder.
Insert Signature	Append your signature to the end of the message.
Cc & Bcc options	Display Cc and/or Bcc header fields to carbon-copy or blind-carbon-copy the message to additional recipients.
Attachments	Attach a contact, calendar event, task or media object to the message.
Priority	Set message priority.
Delete Attachment	Delete message attachments.

Receiving an Email Message

Email messages that you receive are stored on your service provider's email server until you download them to your phone.

Tap  Email in the application launcher screen to launch the email application. Tap Send/Rec. to download new received messages to your phone.

When you download an email message:

- Tap  to display message details (sender, subject, time and size).
- Tap the message to read it.

- Tap Reply to send an email reply to the message.
- Tap  to perform various operations on the message. The received email message menu can include the following options:

Option	Description
Save File	Save a media object attached to the message.
Move To Folder	Move the message to another folder.
Delete Message	Delete the message.

Reading, Copying or Moving Email Messages

The procedures for reading, copying or moving email messages are similar to the corresponding message center procedures. See page 71 for more information.

Creating and Using a Personal Folder

The procedures for creating and using a personal folder are similar to the corresponding message center procedures. See page 81 for more information.

Setting Up the Email Mailbox

If the phone cannot locate your email mailbox, it opens the mailbox setup screen for you to configure your mailbox settings.

Automatic Mailbox Setup

- 1 Select your email service provider from the mailbox setup list, then tap OK.

 
 
 


- 2 Enter your User Name and Password in the appropriate fields, confirm your password in the Re-enter Password field, then tap OK.
- 3 To edit email sending, receiving, signature, connections options, tap the mail box name you wish to edit. Then enter settings as described in the following section.

Manual Mailbox Setup

If your service provider is not listed on the mailbox setup list, you can manually set up your email mailbox as follows:

- 1 Tap Setup Manually on the mailbox setup screen to manually enter email settings, then tap OK.
- 2 Tap the Mailbox Name field and enter your mailbox name.
- 3 Tap Send Setup and Receive Setup to configure your email sending server and receiving server settings as described below.
- 4 Tap Signature Setup, If you want your phone to automatically append your signature to all outgoing email messages, tap the check box ☐ beside Add signature to all outgoing messages. A check mark ☒ indicates that automatic signature is activated.
- 5 Tap the signature field and enter your signature.
- 6 Tap OK to save your signature.
- 7 Tap Connections Setup, then select the type of connection desired and tap OK.
- 8 Tap Done to store your mailbox settings.



Tip: You can set up separate mailboxes for different email accounts. If you do not assign a name on the mailbox setup screen, your phone assigns a different name (Mailbox 1, Mailbox 2) to each mailbox.

Send Setup Options

Note: Actual field names and values may vary depending on the technologies available to your service provider. Some settings may not be available for all phone models.

Setting	Description
Server	IP address or host name that handles your outgoing email.
Port	Port number for sending host.
Email	Your email address.
Nickname	Name to be inserted before your return address, if desired.
Authentication	Set Authentication to On if you need a user name and password to access your outgoing email server. Select Same as Receive if user name and password are the same as for your incoming email server. Otherwise, enter your outgoing email server User Name and Password and confirm your password in the Re-enter Password field.



Receive Setup Options

Note: Actual field names and values may vary depending on the technologies available to your service provider. Some settings may not be available for all phone models.

Setting	Description
POP3 or IMAP	Select the protocol to communicate with the receiving host: POP3 or IMAP.
Server	IP address or host name that handles your incoming email.
Port	Port number for receiving host.
User Name	Your user name.
Password	Your user password.
Re-enter Password	Confirm your user password.
Check All Folders	Select to check all folders for email. Set the Root Folder Path that your phone should search.
Save Special Folders	Select to specify additional email folders. You can set the Sent Items Path and the Drafts Path.





Setting	Description
Messages Size Limitation	Maximum size of an email message to be downloaded to your phone.
Keep on Server	Select to save copies of your email messages on the remote server. (For POP3, prevents message deletion on remote server after message is downloaded to your phone. For IMAP, prevents message deletion on remote server after message is deleted on your phone.)

Calendar

You can use your phone's calendar to schedule and organize events such as appointments and meetings.

Tap  Calendar in the application launcher screen to schedule or review calendar events.



Month View

The calendar initially displays a calendar for the month (shown at right).

Tap ◀ or ▶ to display the previous or next month.

An indicator in the lower right corner of the date box indicates that one or more events are scheduled for the day. Tap the date box to display the day's events. Tap an event to display event details.




Week View

Tap the Month button in the bottom button bar, then select Week to display the week view (shown at right).

Tap ◀ or ▶ to display the previous or next week.

Filled boxes indicate scheduled events for the day. A filled column indicates a full-day event. Tap the day to display the day's events. Tap an event to display event details.

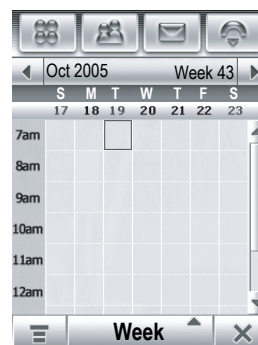


Day View

Tap a day in the month or week view to display the day's events (as shown at right).

Alternatively, you can tap the Month button in the bottom button bar, then select Day to display the highlighted day.

Tap ◀ or ▶ to display the previous or next day.


Tap an event to display event details.

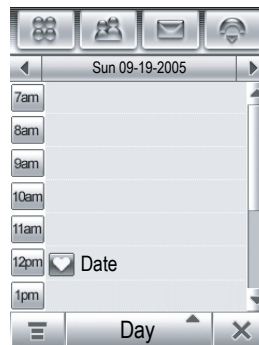

Adding a New Event

Note: You must create an event to use the reminder alarm.

- 1 Tap Calendar in the application launcher screen to open the calendar.
- 2 Tap the day to which you want to add an event. Your phone lists the day's events.
- 3 Tap , then tap New Event to open the new event editor (shown at right).
- 4 Tap the direct line in a field to enter event details. Pull down the scroll bar to display additional fields.

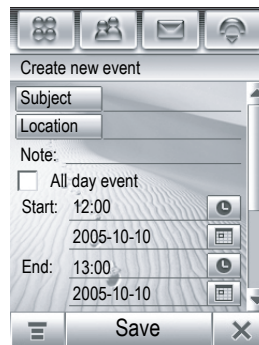



- 5 When you are finished entering information, tap **Save** to store the event.

Tip: Tap to exit without storing the event.

Scheduling a Meeting



 
You can send a *meeting request* message to other wireless phone users and to email addresses. The meeting is added to your calendar and to the calendars of the message recipients.

- 1 Tap **Calendar** in the application launcher screen to open the calendar.
- 2 Tap , then tap **New Meeting Request** to open the meeting request editor.
- 3 Tap the direct line in a field to enter meeting details. Pull down the scroll bar to display additional fields.
- 4 When you are finished entering information, tap **Send** to send the meeting request and add the meeting to your calendar.

Tip: Tap to exit without sending the meeting request.

Editing an Event

- 1 Tap the event to display event details.
- 2 Tap **Edit** to open the event editor.
- 3 Tap the direct line in a field to edit its contents. Pull down the scroll bar to display additional fields.
- 4 When you are finished editing information, tap **Save** to store the event.



Deleting an Event

- 1 Tap the event to display event details.
- 2 Tap , then tap Delete Event.
- 3 Tap OK to confirm the deletion.

Alternatively, to delete an event, tap and hold the event title, then select Delete from the pop-up menu.

Dismissing a Reminder Alarm

When you set a reminder alarm for an event, the phone displays an event reminder and sounds a reminder alarm.

Tap Snooze to turn off the reminder alarm for a short period of time. The reminder alarm sounds again when the snooze period expires.

Tap Cancel to dismiss the reminder alarm.

If you have more than one event set up for the same time, the phone displays each event in sequence. As you read and dismiss each event reminder, the next event is displayed.

Changing the Calendar Setup

You can set the calendar's default view (month, week, day), weekly start day, daily start time, reminder snooze period, event storage period, alarm timeout and lunar calendar.

When you select Alarm when power off in the calendar setup screen, your phone turns itself on if necessary to remind you about scheduled events.

- 1 Tap  Calendar in the application launcher screen to open the calendar.



 
 
 
 
- 2 Tap , then tap Setup.
- 3 Tap a field to change its setting. Pull down the scroll bar to display additional fields.
- 4 When you are finished changing settings, tap Save to store your settings.

Sharing Event Information

You can share calendar events with others by sending the data as a vCalendar entry to another phone, PC or hand-held device.

- 1 Tap  Calendar in the application launcher screen to open the calendar.
- 2 Tap the name of the event you want to send. Your phone displays event details.
- 3 Tap , then tap Share.
- 4 Tap Bluetooth, then tap OK to exchange the data through a Bluetooth® wireless connection. Tap Message or Email, then tap OK to send the event data in an MMS or email message.
- 5 Complete the setup procedure for the transfer method you selected.
- 6 Tap OK to send the event information in a vCalendar entry.

For more information about using a Bluetooth wireless connection, see page 129.



Synchronizing Calendar Entries

You can synchronize calendar information between your phone over-the-air direct to a corporate Microsoft® Exchange Server 2003 using MOTOSYNC.



Alternatively, you can synchronize the calendar to your PC through a Bluetooth® wireless connection or USB cable connection using Motorola mobile PhoneTools software. For more information, see page 136.

Tasks

You can create and review a checklist of tasks you need to perform and set your phone to notify you when tasks come due.

Adding a New Task

- 1 Tap  Tasks in the application launcher screen to display the task list.
- 2 Tap  to open the menu, then tap New.
- 3 Tap the direct line in a field to enter task details.
- 4 When you are finished entering information, tap Save to store the task.

Tip: Tap  to exit without storing the event.



Viewing Tasks

Tap  Tasks in the application launcher screen to display the task list. Tap a task to display its details. Tap the check box beside the task name to indicate that you have completed the task.

Tap and hold on a task to open a pop-up menu from which you can select to Share, Delete or Edit the task.

To sort the task list, tap the *sort order* button in the bottom button bar. You can choose to display All Tasks, Unchecked tasks, Due Tasks or Completed tasks.

 
 
Tap  to perform various operations on the task list.

Note Pad

You can write and store notes on your phone.

- 1 Tap  Notes in the application launcher screen to open the note pad editor.
- 2 Tap the text line and enter the information on the keypad you want to record.
- 3 When you are finished entering information, tap to close the keypad and tap Save.
- 4 Enter a name, storage location and type for the note.
- 5 Tap Save to save the note.

To read a note that you have saved, tap , tap Open, then select the note you want to open.





Viewer

The viewer application provides an easy way for you to read documents stored on your phone.

Tap  Viewer in the application launcher screen to open the viewer application.

 
 
 
Your phone shows the file folders included on your phone (see page 108 for folder descriptions). Tap a folder to view its contents. Tap a document to open it in the viewer.

You can scroll through a large document by dragging the stylus across the screen and “dragging” the document in the direction you want to move.

To zoom in or out on a document, tap the center of the screen, release, then quickly tap and hold the screen and drag the stylus up or down to adjust the document size.

To reflow the text or make other view adjustments, tap  to open the menu, tap View, then tap Rotate Screen, Reload the document, Fit to Width or Fit to Height.

For more information about how to use the viewer, tap  to open the menu, then tap Help.



Calculator

You can use your phone as a calculator.

Tap  Calculate in the application launcher screen to display the calculator (shown at right).

Tap the numeric and calculation keys to perform a calculation.

Tap = to calculate the result.

Tap C to clear the calculation.

Tap  to clear the last entry, one digit at a time, when performing a calculation.



Tap  to return to the application launcher screen.


Tap the following keys to perform the described functions:

Function	Description
+/-	Change the entry's sign (positive/negative).
M+	Store the sum of the current calculation result and the stored number.
MS	Clear the stored number and store the current calculation result.
MR	Display the stored number.
MC	Clear the stored number.

Alarm Clock

Your phone has an alarm clock with 2 separate alarms that you can set to alert you at the time(s) you specify.

- 1 Tap  Alarm in the application launcher screen to display the alarm clock setup screen (shown at right).
- 2 Tap the check box ☐ beside an alarm to activate it. A check mark ☒ indicates that the alarm is activated.
- 3 Tap below the alarm name to set the alarm time. Set the desired time, then tap OK to store it.
- 4 Tap Snooze to set the snooze period.
- 5 Tap Save to store your settings.

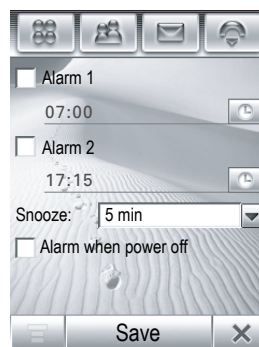

When the alarm expires, your phone displays an alarm reminder and sounds an alert.

Tap Snooze to turn off the event reminder for a short period of time. The alarm sounds again when the snooze period expires.

Tap Cancel to turn off the alarm.

When you select Alarm when power off in the alarm clock setup screen, your phone turns itself on if necessary to alert you when the alarm expires.



 
File Manager

The file manager application makes it easy for you to create personal folders to store and manage your files and applications.


Tap  Files in the application launcher screen to open the file manager.

Your phone lists the available storage devices (such as Phone memory and an optional removable TransFlash Card memory card). Tap a storage device to display the root directory for the device.


Your phone includes several predefined folders:



MyAudio	Stores recordings that you make with the  Recorder application.
MyImages	Stores photos you take with your phone's  Camera.
MyNotes	Stores notes that you write with the  Notes application.
MyPrograms	Stores applications that you download and install on your phone.
MyVideo	Stores video clips you record with your phone's  Camera.
Preload	Stores preloaded media files installed on your phone.

 

 Note: Your phone's files and folders may differ from those listed above. Refer to your phone for details.



Editing Files and Folders

Tap and hold a file or folder to open a pop-up menu to perform various operations on the file/folder. The edit menu can include the following options:

Option	Description
Open With	Specify the application your phone should use to open the file (files only).
Share	Send the file to another phone, PC or hand-held device (files only).
Install	Install the selected file (files only).
Copy or Cut	Copy or cut the file or folder to the clipboard. (Tap  , then tap Paste to paste the clipboard contents in the current folder.)
Move To	Move the file or folder to a new location.
Rename	Rename the file or folder.
Delete	Delete the file or folder.
Properties	Display information about the file or folder.

Creating a New Folder

- 1 Tap  Files in the application launcher screen to open the file manager.
- 2 Tap , then tap New Folder.
- 3 Enter a name for the folder.
- 4 Tap Save to save the folder.



Viewing

To change the way your files and folders are displayed, tap , then select List View or Thumbnail View.

Sorting

To change the way your files and folders are sorted, tap , then tap Sort by. You can sort files or folders by Time, Name, Size or Type.

Searching

To search for a specific file:


- 1 Tap , tap More, then tap Search.
- 2 Enter the name of the file in the Files Name field.
- 3 Specify the type of the search in the File Type field.
- 4 Tap Search to begin the search.

If the file is found, the filename is listed. Tap the filename to open the file. Tap and hold the filename to display the file path.

If the file is not found, tap  to return to the file manager screen or tap Retry to try another search.

Viewing a Folder Tree

Tap the folder tree icon  in the file manager screen to display the folder structure and organization of your phone or a storage device connected to the phone.

 

Using a Removable Memory Card

You can use an optional removable TransFlash memory card with your phone to store and retrieve multimedia objects (such as photos, videos and MP3 music files). Insert the memory card into the memory card slot on the top of your phone (under the protective cover).

Tap  Files, then tap the memory card's name to display its root directory.

Tip: Tap and hold on the memory card's name to open a pop-up menu to Format the memory card or display memory card Properties.




Tap  to perform various operations on the memory card. The storage device menu can include the following options:

Option	Description
New Folder	Create a new folder on the memory card.
List View or Thumbnail View	View memory card files and folders in a text-based List View or graphic icon Thumbnail View.
Share	Send a file to another phone, PC or hand-held device.
Move	Move a file to a new location.
Paste	Paste the clipboard contents at the current location.
Sort By	Sort memory card files or folders by Time, Name, Size or Type.
Delete	Delete a memory card file or folder.



Option	Description
More	Search for a memory card file or folder. Tap Properties to display information about a file or folder.

   To **eject** the memory card, tap the status bar at the top of the display to open the device status screen, then tap the Eject button that appears under the TransFlash Card option.



Media Applications

Browser



The browser lets you access Web pages and Web-based applications on your phone. Contact your service provider to set up access, if necessary.

Note: Your phone uses a high-speed *General Packet Radio Service* (GPRS) network connection. This type of connection is identified by a GPRS indicator  in the status bar. If the  indicator is greyed out or not visible during a browser session, your phone is using a standard CSD voice channel connection. The type of network connection your phone uses depends on your service provider's network. Your network connection charges may vary depending on the type of connection used.

Starting a Browser Session

Tap  Browser in the application launcher screen to start the browser.

If you are unable to establish a network connection with the browser, contact your service provider.

Interacting With Web Pages





Pull down the scroll bar to scroll through a text page or option list. Tap an option to select it. Tap  at any time to return to the previous screen.



Some Web pages may contain text fields for exchanging information with a Web site. Tap the field and enter text in the usual way.

Tap  to perform various browser operations. The browser menu can include the following options:

Option	Description
Go to Page	Enter a Web address (URL) to go to a Web site.
Home	Go to the homepage of the current Browser profile.
Bookmarks	Display a list of your bookmarks. Tap  to add a New bookmark or Open, Edit, Delete or Share the highlighted bookmark.
History	Display a list of Web sites you have visited. Tap  to Open or Delete the highlighted Web site.
File	Save a file or Save All files in the browser window, Copy a file, tap About Opera to view browser information.
View	Set browser view to Fit to Screen or Full Screen, set text size to Small, Medium or Large, zoom in or out on the Web page or select a Custom Zoom setting.

    

Option	Description
Active Page	Bookmark the active page, show the security level or change encoding of the active page.
Setup	Add and edit browser profiles, adjust browser preferences, show SSL and WTLS certificates, empty the cache and delete cookies.

Downloading Files

You can download a file, game or application from a Web page onto your phone by selecting its link.

You must specify the location where you wish to save the file and your phone must have sufficient memory storage space to store the file.

You can purchase a variety of games, applications and multimedia content for your phone. In most cases, you can download and preview content before you purchase it. After previewing the content, you can choose to discard it or purchase it and install it on your phone.

Notes:

- Call charges apply during download sessions.
- Some games might make your phone vibrate. Some ring tones vibrate automatically. If you use one of these tones, your phone vibrates even when it is not set to a vibrate ring style.

Closing the Browser

Tap **X** to close and exit the browser application.

Using Network Connection Profiles



You can use different Internet accounts to connect to the Internet in different ways. Use the network feature to select or create a network connection profile for an Internet account.

Selecting a Profile

To select a network connection profile, tap **Setup** in the application launcher screen, tap **Data Network**, tap the profile you want to use, then tap **Connect** to connect to the Internet using the selected profile.

Creating a New Profile

To create a new network connection profile:

- 1 Tap **Setup** in the application launcher screen, then tap **Data Network**.
- 2 Tap **New**, then tap **New** to open the new profile menu.
- 3 Enter configuration settings as described in the following table. Tap the direct line in a field to enter the setting. Pull down the scroll bar to display additional fields.

- 4 When you are finished entering information, tap **Save** to store the profile.

Option	Description
Profile Name	Enter the profile name.
GPRS APN	GPRS access point name (the name of the WAP service provider).
GPRS User Name	User name for GPRS APN connection.
GPRS Password	Password for GPRS APN connection.
GPRS Timeout	Inactivity interval at which the phone disconnects the GPRS connection.
GPRS DNS Server 1 and 2	Primary and backup DNS IP servers.
CSD Dial In Number	Phone number to use to set up a CSD connection.
CSD User Name	User name for CSD connection.
CSD Password	Password for CSD connection.
CSD Baud Rate	Connection speed for CSD connection.
CSD Line Type	Line type (modem or ISDN) for CSD connection.
CSD Timeout	Inactivity interval at which the phone disconnects the CSD connection.
CSD DNS Server 1 and 2	Primary and backup DNS IP servers.



Using Browser Profiles

To select the active browser profile:

 
 
 
- 1 Tap , Browser in the application launcher screen to start the browser.
- 2 Tap , then tap Setup to open the browser setup menu.
- 3 Tap Profiles, then tap the profile you want to use.
- 4 Tap Save to save the highlighted profile as the active profile.

To create a new browser profile:

- 1 Tap , Browser in the application launcher screen to start the browser.
- 2 Tap , then tap Setup to open the browser setup menu.
- 3 Tap Profiles to open the profiles menu.
- 4 Tap , then tap New to create the profile.

You must set the Profile Name, Primary Gateway IP and Port number, Secondary Gateway IP and Port number, Homepage and the Network Link (the network connection profile you want to use) for a browser profile.

To edit an existing browser profile, select it, tap , tap Setup, then tap Edit to change the settings described above.




RealOne Media Player

Your phone includes a RealOne Media Player that you can use to play audio and video files.

Tap  Player in the application launcher screen to launch the media player.

To play a media file, tap , then tap Open. Tap File to play a media file stored on your phone or tap URL to download and play a media file from a Web site.

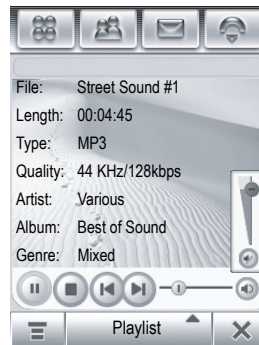

In the media player window:

- Tap  to play the current media file.
- Tap  to stop playing the file.
- Tap  or  to play the previous or next file.
- Tap  to adjust or mute sound volume. Tap the volume slider to adjust the volume. (Alternatively, you can rotate the rocker switch to adjust volume.) Tap  on the slider bar to mute and unmute the sound.

Creating and Using Playlists

To **create** a new playlist:

 
 
- 1 Tap Playlist in the button bar, then tap Playlist in the list of current configured playlists.
- 2 Tap My Lib, then tap Refresh My Lib to refresh the media files in the library.



- 3 Tap , then tap Refresh My Lib to create a New Playlist.
- 4 Tap , tap Add, then tap File or URL to add a local or remote media file to the playlist.
- 5 Repeat step 4 to add additional media files to the playlist.
- 6 When you are finished adding media files, tap , then tap Save Playlist to save the new playlist.

To **play** a playlist:



- 1 Tap Playlist in the button bar to display the names of the currently configured playlists.
- 2 Tap a playlist name to select it as the active playlist and display a list of files included in the playlist.
- 3 Tap  to return to the media player screen, then tap  to play the active playlist.




Camera

Shortcut: Open the flip and press the camera key to activate the camera. Press the camera key again to take a photo.

  To activate the camera from the application launcher screen, tap  Camera.



The active viewfinder image appears on your display.

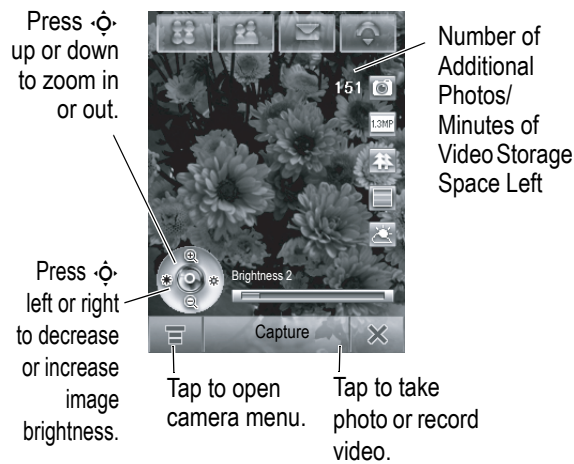

Using the Viewfinder

Open the flip and point the camera lens at the photo subject. Press as indicated to zoom in/out and adjust image brightness. Alternatively, you can rotate the rocker switch to zoom in or out.

You can tap the screen to remove the icons for an unobstructed view or tap the screen again to bring the icons back.

The icons on the viewfinder are active and can be used to change the most-used functions (such as image size, camera/video mode and effects mode).



The number next to the photo/video mode indicator in the viewfinder represents the number of additional photos or the minutes and seconds of additional video, that can be stored in the current selected memory storage location.



Taking a Photo

 
 
Tap Capture or press the camera key to take a photo.

Tip: If the camera is in video mode, tap  to put the camera in photo mode. The mode indicator in the viewfinder changes to  to show that the camera is in photo mode.

Recording a Video

Tap  to put the camera in video mode. The mode indicator in the viewfinder changes to  to show that the phone is in video mode.

Tap Record to start recording a video. Tap Done to stop video recording.





Viewing and Deleting Photos or Video Clips

To **view** a photo or video clip:

- 1 Tap , then tap Album to open the folder where your photos or video clips are stored.
- 2 Tap a photo thumbnail image to view the photo. Tap  on a video clip thumbnail image to play the video clip.

To **delete** photos or video clips:

  - 1 Tap , then tap Album to open the folder where your photos or video clips are stored.



- 2 Tap , then tap Delete.
- 3 Tap the check box ☐ beside each photo or video clip you want to delete or tap the check box beside All to select all items. A check mark ☒ indicates that the item is selected.
- 4 Tap OK to delete the selected photo(s) or video clip(s).

Tip: To quickly delete a single photo or video clip, tap and hold the thumbnail image to open a pop-up menu, then select Delete.

Using Effects

You can adjust the **size** of your photo or video by tapping the appropriate icon in the viewfinder. Tap other icons to set **lighting** conditions or select a photo **style** (such as Black/White or Sepia tones).

Adjusting Setup Options

Tap , tap Setup, then tap  to open the photo setup menu.

You can set or adjust the following options:

Option	Description
Photo Size	Set the Size of the photos you take.
Photo Quality	Set the quality of the photo.
Default Name	Apply a date and time stamp or specify a text prefix for the photos and videos you take.
Shutter Sound	Set the shutter sound.
Save To	Specify the location where your photos/videos are saved.



Using the Delay Timer

Tap , then tap Delay Timer to activate the delay timer. The timer indicator displays in the upper-right corner of the viewfinder.

Tap Start to activate the timer. The timer counts down from 10 seconds and then takes a photo. You can tap Stop to stop the timer at any time during the countdown.

Tip: To take a self-portrait: Activate the timer and use the mirror to aim the camera lens.



Voice Recorder

You can record personal messages and phone calls on your phone.

Making a Recording

Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.

- 1 Tap  Recorder in the application launcher screen to activate the recorder (shown at right).
- 2 Tap  to start recording.
- 3 Speak into the phone.
- 4 Tap  to stop recording. The voice record is automatically saved to the My Audio folder on your phone.
- 5 To play back the voice record you just made, tap . To stop playback, tap .



Playing a Recording

- 1 Tap  Recorder in the application launcher screen to activate the recorder.
- 2 Tap , then tap Open to open the My Voice folder.
- 3 Tap the voice record you want to play, then tap Open to play it.

Tip: The voice record name identifies the date and time when the file was recorded. The recording date and time is also displayed when you play the voice record.

Changing the Voice Record Storage Location

- 1 Tap , tap Setup, then tap the folder tree icon  in the Location field.
- 2 Select a folder, then tap OK to set it as the new storage location.
- 3 Tap Save to save the new storage location.


Drawing Pad

Use the drawing pad to create drawings and illustrations or edit photos and images stored on your phone.

Tap  Draw in the application launcher screen to open the drawing pad editor.

To **draw** a new picture:

- Tap a drawing tool in the upper-left corner of the drawing pad (shown at right).
- Tap the box to the right of the drawing tool to adjust tool settings.
- Tap the colour picker in the upper-right corner of the drawing pad to set a drawing colour.

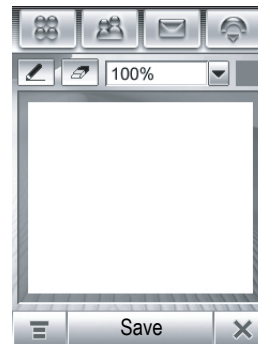



- Tap the scaling drop-down menu to zoom in/out on the drawing canvas or tap **Auto-Fit** to fit the canvas to the page.



To **save** a picture:





- 1 Tap **Save**.
- 2 Enter a name, storage location and type for the picture.
- 3 Tap **Save** to save the picture.

To edit an existing picture, tap , tap **Open**, then select the picture you want to open. Use the drawing tools to edit the picture.

Tip: Tap and hold a selected area on the picture to open a pop-up menu from which you can select **Copy**, **Cut** or **Paste** into the selected area.

Tap  to perform various drawing-related operations:

Option	Description
New	Open a blank canvas to create a new picture.
Open	Open an existing picture.
Share	Share the picture.
Undo or Redo	Undo or redo the last drawing operation.
Insert Stamp	Insert another image into the picture.
Select All	Select all picture elements.
Choose Canvas	Select the drawing canvas size.
Delete	Delete the picture.

  
 
 




Video

To activate the camera in video mode, tap  Video in the application launcher screen.

   For instructions on how to use the camera in video mode, see page 120.





Extra Applications

CoPilot Satellite Navigation

Your phone supports full GPS Satellite tracking capabilities which, when paired with the CoPilot Software, turns your phone into a powerful Satellite Navigation device. For a full description of the features of this software please refer to the separate in-box Quick Start Guide

 
 
 
Bluetooth® Wireless Connections

Your phone supports Bluetooth® wireless connections. You can set up a wireless link with a Bluetooth headset accessory, speakerphone or handsfree car kit or connect to a PC or hand-held device to exchange and synchron data.

Tip: Your phone's antenna must be on to use Bluetooth features.

Turning Bluetooth Power On/Off

- 1 Tap  Bluetooth in the application launcher screen, then tap .
- 2 Tap Turn On or Turn Off to activate or deactivate Bluetooth power.







Searching for Other Devices

To connect your phone to a headset accessory or handsfree device:

- 1 Tap  Bluetooth in the application launcher screen to display the device list.
- 2 If necessary, turn Bluetooth power on.
- 3 Tap Search to search for available Bluetooth devices.

Your phone displays a list of device(s) located within range of the phone. If your phone is already connected to a device, your phone identifies the connected device.

  To connect to a device, select it from the list. The device may request permission to bond with your phone. Enter the correct PIN code to create a secure connection with the device.





Making Your Phone Visible to Other Devices

To allow an unknown Bluetooth device to discover and connect to your phone:

- 1 Tap  Bluetooth in the application launcher screen to display the device list.
- 2 If necessary, turn Bluetooth power on.
- 3 Tap Discoverable to put your phone into discoverable mode until a connection is made or until 3 minutes elapse.

  The device may request permission to bond with your phone. Enter the correct PIN code to create a secure connection with the device.





Connecting to a Recognized Device

 
 
Your phone stores the names of previously connected devices. The device list shows the recognized devices located within range of the phone. If your phone is already connected to a device, your phone identifies the connected device.

Tap a device name to view its details. Tap and hold the device name to open a pop-up menu from which you can choose to Create Bond, Connect, Delete or Lock/Unlock the device.

For a Motorola headset or other audio device, your phone automatically attempts to connect to the device.

Disconnecting From a Device

To disconnect from a device, tap and hold the device name to open a pop-up menu, then select Disconnect to drop the connection.




Exchanging Objects With Another Device

You can use a Bluetooth wireless connection to exchange a multimedia object or vObject (such as a vCard address book entry or vCalendar calendar event) with another phone, PC or hand-held device.

Sending an Object

 - 1 Tap and hold the object to open a pop-up menu, then select Share to display a list of share options.
- 2 Tap Bluetooth to display the device list.





- 3 Tap the device name on the list or tap Search to locate the device.
- 4 Tap Send to send the object. If necessary, enter the correct PIN code to create a secure connection with the device.

 


Receiving an Object


Turn Bluetooth power on. Your phone alerts you when it receives a data transfer request from the other device.

Tap OK to accept the data. If necessary, enter the correct PIN code to create a secure connection with the device.

Your phone notifies you when object transfer is complete and may prompt you to specify the location where you wish to store the file.



Modem

 


You can use your phone as a modem, to connect your PC to the Internet or transfer data to/from the PC. To use the phone as a modem, you must connect it to the PC using a wireless Bluetooth connection or USB cable connection.

Tip: To connect your phone to the PC through a Bluetooth connection, make sure that your PC supports Bluetooth and has the correct drivers installed.



 Tip: Motorola mobile PhoneTools software includes a PC modem application that makes it easy to use your phone as a modem and to set up a USB cable connection without first having to activate your phone's modem application.





To access the Internet through a data call, configure the phone modem just as you would a standard PC modem.

- 1 Tap  Modem in the application launcher screen to display the modem setup screen.
- 2 Tap Use to select USB Cable or Bluetooth as your connection method.

When your phone indicates Modem Status: Ready, use your PC to access the Internet or transfer data just as you would with a standard PC modem.

Sending a Data Call

 
 
- 1 Open the application (such as dial-up-networking) on your PC and place the call through the application.

Note: You cannot dial data numbers on your phone's keypad. You must dial them through the PC.

- 2 When the data transfer is complete, end the call from the connected device to close the connection.

Receiving a Data Call

- 1 Your phone notifies you when the data call arrives and transfers the call to the connected device. Use the application running on the device to answer the call.
- 2 When the data transfer is complete, end the call from the connected device to close the connection.




World Time

Your phone can display the current time and date for multiple cities around the world.


Tap  Time in the application launcher screen to display the world time screen (shown at right).

You can reset the time and date for a listed city. Tap the time and/or date field to change it. Tap OK to save your changes.

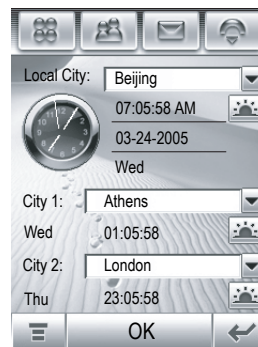

To replace a city listing in the world time screen, tap the city name, then tap Browse... to display the time zone map (shown below). Tap the city name again to display a city list. Select a new city, then tap OK to store it.

Alternatively, tap a time zone in the time zone map to display a list of cities in that time zone. Select a new city, then tap OK to store it.

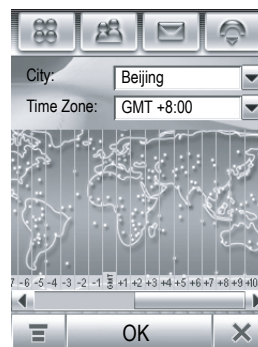

To add a new city to the city list, tap , then tap Add city. Enter the city name and its time zone, then tap OK to store it.



STK



Your SIM card may contain additional *SIM Toolkit* (STK) applications that add features and functionality to your phone.

 
 
 
 
Tap  STK on the application launcher screen to display a list of the STK applications available for you to use.

Tap a service or feature to select it. Your phone displays the service or feature screen.

Pull down the scroll bar to scroll through a text page or option list. Tap an option to select it. Tap  at any time to return to the previous screen.

Some screens may contain text fields where you must provide information in order to use a service or feature. Tap the field and enter text in the usual way.

For more information about the STK applications available on your SIM card, contact your service provider.





Synchronizing Phone Information

You can use different methods to synchronize information between your phone and a server or external device:

 
- MOTOSYNC with Exchange ActiveSync (over-the-air connection with a Microsoft® Exchange 2003 server)
- MOTOSYNC with SyncML (over-the-air connection with a SyncML server)
- Tethered Sync (Bluetooth® wireless connection or USB cable connection to a PC using the Motorola mobile PhoneTools software accessory product)



MOTOSYNC With Exchange ActiveSync



MOTOSYNC is a secure, *always-up-to-date* (AUTD), *over-the-air* (OTA) synchronization framework that lets you synchronize your address book contacts, phone calendar and email directly with a Microsoft Exchange 2003 server, allowing you to stay connected while out of the office.







Overview

You can use MOTOSYNC to synchronize information between your phone and your corporate Microsoft Exchange Server 2003.

MOTOSYNC synchronizes the information on your phone with information on your Exchange Server 2003 email account and updates both the phone and server with the most recent information. This is accomplished over-the-air using your service provider's network.

With MOTOSYNC, you can:

  
- Synchronize Contacts, Calendar and Email with the server so that you have the latest information, even when your desktop PC is turned off and you are out of the office.
- Schedule when synchronization occurs.
- Select what type of information is synchronized and control how much information is synchronized. For example, you can choose how many weeks of past appointments to synchronize.



Getting Started

Connecting to a company server requires information from your IT department. If necessary, contact your system administrator to obtain the following information:

 - Confirm that your email is located on a Microsoft Exchange 2003 Server and verify that the Mobility option is enabled for your Microsoft Exchange 2003 Server account (this option is set to On by default)
- Your User Name



- Your User Password
- Your Exchange Server Name
- Your User Domain Name

Additionally, you should verify with your cellular service provider that you have data service activated with your account (additional fees may apply for this service).

Configuring MOTOSYNC

When you complete “Getting Started.” you are ready to configure your phone and start synchronizing.

To configure your phone, tap  Sync, tap , then tap Exch ActiveSync Setup to adjust the following settings:

Option	Description
Enable Contact Sync	Select to sync primary contacts.
Enable Calendar Sync	Select to sync primary calendar.
Enable Email Sync	Select to sync primary email.
Sync Email from past	Set to 1 Day, 3 Days, 1 Week, 2 Weeks or 1 Month.
Limit message size to	Set to Headers Only, 0.5k, 1k, 5k, 10k, 20k or 50k.
Email Address	Enter your email address.
Nick Name	Optional user nickname.
Signature	Optional user email signature.
Server Name	Fully qualified domain name of Exchange Server 2003. If needed, get help from your IT administrator.
User Name	Your Windows user name provided by your IT administrator.

Option	Description
Domain Name	Your Windows domain name for your corporate Exchange Server 2003.
Password	Your Windows password.
Re-enter Password	Re-enter Windows password to screen for input errors.
Use HTTPS for security	Select if your IT administrator requires a secure connection to Exchange Server 2003.
Select Data Connection	If there are multiple data service connection profiles, select the preferred profile for synchronization.
Use Proxy	Select if your service provider requires a proxy server for Internet connections. If necessary, get assistance from your service provider.
IP	IP address of your proxy server. If necessary, get assistance from your service provider.
Port	Port number for connection to network provider's proxy server. If necessary, get assistance from your service provider.
Show Notifications	Select to have your phone notify you when new email arrives on the phone.

Option	Description
Enable Auto Sync	Select to have your phone automatically synchronize with the server. This setting acts as a toggle switch to quickly activate and deactivate auto sync without having to modify all the particular sync schedule settings.
In busy times sync	Busy time is the period of the day where you receive the bulk of your email. Select the automatic sync interval during busy times of the day from: Manually, When notified, Every 5 min, Every 10 min, Every 15 min, Every 30 min, Every hour, Every 2 hours, Every 4 hours, Every 24 hours.
In non-busy times sync	Select the automatic sync interval during non-busy times of the day from: Manually, When notified, Every 5 min, Every 10 min, Every 15 min, Every 30 min, Every hour, Every 2 hours, Every 4 hours, Every 24 hours.
Set busy time	Select the busy days of the week using the check boxes.
Start Time	Choose the time that your busy time of the day starts.
End Time	Choose the time that your busy time of the day ends.
When roaming, sync	You may select different sync periods while roaming to moderate your data charges. Choose from; Manually, Use Schedule.

Option	Description
Device Address Options	Select the radio dial button of one of the 2 options: Device SMTP Address - Select if your notification service is provided by your wireless carrier. Provide the SMS address of your phone (for example, 8471234567@carrier.net) Exchange Provider - If you select this device addressing option, you must complete the following fields: • Mobile Phone Number - Input your mobile phone number. • Mobile Service Centre - Select the name of your mobile service provider from the list provided.

When you are finished, tap **Save** to save your settings.

Synchronizing Information

To manually synchronize your contacts, calendar and email, tap  **Sync**, then tap **Exchange ActiveSync**.

Your phone begins synchronizing your contacts, calendar and email, if selected. The initial synchronization may take several minutes depending on the amount of data in your contacts list, calendar and email on the Exchange 2003 server.

If you have created a sync schedule, your phone automatically synchronizes to the set schedule.



Errors

Your phone displays an ActiveSync error message when MOTOSYNC cannot successfully synchronize your information. To view more information about the error message, tap  Sync, tap , tap View Log, then tap the information box.

Note: Some errors can interfere with automatic synchronization. If you suspect that a scheduled automatic synchronization has not occurred, you should attempt to manually synchronize your information. Successfully completing manual synchronization resets the automatic synchronization timer.

 
 
 
MOTOSYNC With SyncML



MOTOSYNC also uses standards-based SyncML so you can synchronize your contacts, calendar and tasks over-the-air (OTA) with a SyncML-compliant server.

Your phone must be configured to the appropriate settings for your synchronization service provider. Additionally, you should verify with your cellular service provider that you have data service activated with your account (additional fees may apply for this service).

You must create an Internet sync partner to synchronize your data over a SyncML OTA connection.



Tap  Sync in the application launcher screen, tap , then tap OTA Sync Setup to configure your SyncML OTA connection settings as follows:

Option	Description
Data Paths: Contacts	Select to provide additional URL address information specific to your Contacts folder (beyond the common URL address listed in the Server Name field, described below)
Data Paths: Calendar	Select to provide additional URL address information specific to your Calendar folder (beyond the common URL address listed in the Server Name field, described below)
Data Paths: Tasks	Select to provide additional URL address information specific to your Tasks folder (beyond the common URL address listed in the Server Name field, described below)
Use Proxy	Select if your service provider requires a proxy server for Internet connections. If necessary, get assistance from your service provider.
IP	IP address of your proxy server. If necessary, get assistance from your service provider.
Port	Port number for connection to network provider's proxy server. If necessary, get assistance from your service provider.

Option	Description
Server Name	The URL for your SyncML server (you may omit http://). Use this field to provide the common URL address for your Contacts, Calendar and Tasks folders (described above).
User Name	User name to log on to the server
Password	Password to log on to the server
Re-enter Password	Re-enter your password to log on to the server
Select Data Connection	If there are multiple data service connection profiles, select the preferred profile for synchronization.

To synchronize phone data with your Internet sync partner, tap  Sync in the application launcher screen, then tap OTA.

Your phone attempts to make a sync connection with the sync partner. This might take several minutes, if there are many entries to synchronize.

Your phone notifies you when data synchronization is complete. If synchronization is not successful, your phone displays Sync Failed.

For connection issues, please contact your synchronization service provider.

Tethered Sync



You can use a Bluetooth wireless connection or a USB cable connection to transfer and synchronize data between your phone and a PC.


- To transfer data between your phone and PC, you must install the Motorola mobile PhoneTools software included with the Motorola Original data kit. See the data kit user's guide for more information.
- You must use Motorola Mobile PhoneTools software to synchronize data between your phone and PC. See the mobile PhoneTools user's guide for more information.

Motorola mobile PhoneTools software is designed to synchronize with basic features of many popular Personal Information Management (PIM) software and hardware products.

Note: Due to a known Microsoft® Windows® USB driver issue, a PC running Windows 2000 with Service Pack 1 or Service Pack 2 will not recognize a TransFlash memory card inserted into your phone when you attempt to transfer or synchronize data between your phone and PC through a USB cable connection.

To **connect** your phone and PC, you can set up a Bluetooth wireless connection between the two devices. For information about how to set up a Bluetooth connection, see page 129.

Alternatively, you can use a Motorola-Original USB cable to connect your phone and PC. Open the protective cover on the phone and plug the USB cable into the USB connector port on the phone as shown. Plug the other end of the cable into the USB port on the PC.

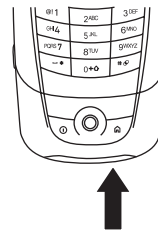

Note: Not all devices are compatible with a cable connection. Check your PC to determine the type of cable you need.

To **synchronize** data between your phone and PC, select the Sync option from the Motorola mobile PhoneTools software running on the PC.

The Motorola mobile PhoneTools software notifies you when data synchronization is complete. If synchronization is not successful, Motorola mobile PhoneTools notifies you that the synchronization attempt failed.



Phone Setup



Ring Alert Style

You can set the following ring alert style profiles on your phone:

Ring Loud	Vibe then Ring Loud	Vibrate
Ring Soft	Vibe then Ring Soft	Silent

Each profile uses a different set of ring tone alerts or vibration alerts to notify you of incoming calls, messages and other events. The Silent setting silences your phone until you set another ring style.

- 1 Tap  Setup in the application launcher screen, then tap Ring Alert Style.
- 2 Tap an alert style to select it as the current alert setting.
- 3 Tap Edit to adjust the alert style profile settings to personalize the alert style. You can change the alerts used to notify you of incoming calls and messages, set ringer IDs and adjust alert volume, touchscreen volume and keypad volume. Any changes you make are saved to the alert style profile.



 
 


Wallpaper

Set a photo, picture or animation as a wallpaper (background) image in your phone's display. The wallpaper image appears as a faint watermark in text and menu displays.

- 1 Tap  Setup in the application launcher screen, then tap Wallpaper.
- 2 Tap a photo/picture thumbnail image to set it as the wallpaper image. Tap the fullscreen image preview to return to the wallpaper menu.
- 3 Tap OK to save your setting.


Tip: Tap an unused area of the homescreen to display an unobstructed fullscreen view of the watermark image. Tap the fullscreen watermark image to return to the homescreen display.



Colour Scheme

Set the colours that your phone uses for buttons, highlights and the status bar.

 - 1 Tap  Setup in the application launcher screen, then tap Colour Scheme.
- 2 Tap a thumbnail image to select it as the colour scheme. Your phone displays a brief preview of the selected colour scheme.
- 3 Tap OK to save your setting.





Text Size

Set the size of the display text.

- 1 Tap  Setup in the application launcher screen.
- 2 Tap Text Size to set the display text size.

Language

Set the language in which phone features and menu options are displayed.

- 1 Tap  Setup in the application launcher screen, then tap Language.
- 2 Select the language you want to use or select Automatic to let your phone select the language based on your current location.
- 3 Tap Save to save your language selection.

Tip: Tap  to return to the setup screen without saving your changes.

Voice Commands

You can use voice commands to perform many basic phone functions. To use voice commands with your phone, you must load the voice recognition application each time you turn on the phone.

Loading Voice Recognition

You must load the voice recognition application to use voice commands with your phone.



 


Press and hold the voice recognition (VR) key on the left side of your phone until the Loading VR message displays on the screen to indicate that voice recognition is loading.


When your phone displays Load Successful, you can start using voice commands. If your phone indicates that loading failed, try again to load the voice recognition application.

Using Voice Recognition

After loading the voice recognition application on your phone, press and hold the VR key on the left side of your phone until the phone sounds an alert tone. Speak a voice command as described below, then release the VR key to perform the corresponding function.



 The voice command function operates in 2 modes: name/instruction mode and digit mode. The default operating mode is name/instruction. When you speak the command "Open Digit Dial" or "Open Dial Pad," your phone switches to digit mode so you can speak the phone number you want to dial.





Note: Your phone remains in digit mode for a few seconds after each number recognition and then automatically returns to name/instruction mode.

Voice Command List

Note: This section lists key voice commands. To see a complete list of voice commands, tap  Setup, tap Voice Command, then tap Commands List.

  Press and hold the VR key and speak the voice command as described to perform the corresponding function. If your





phone does not recognize a spoken voice command, it prompts you to repeat the command.

"<contact name> + Mobile (Cellphone, Call) / Work (Office) / Home" – Your phone displays the corresponding number listed in your address book. Press the VR key to dial the number.

Tip: Voice recognition is greatly improved when you store both the first and last name of contacts in the address book. You must say the name as it appears in the contact list (for example, "John Smith" or "Smith, John", depending on how you have set up the contact list sort order).

"Open Digit Dial / Open Dial Pad" – Puts your phone in digit mode to dial a phone number. When your phone displays the phone keypad, press and hold the VR key and speak the phone number you want to dial. Release the VR key. Your phone recites the number you spoke and displays the number on the keypad. If the number is correct, press the VR key or speak **"Dial Out"** to call the number. If the number is incorrect, press and hold the VR key and repeat the number you want to dial (within 10 seconds).

 
 
"Open <application name>" – Open the named application on your phone.

"Go Back / Exit" – Exit the current function screen.

"Redial" – Your phone recites the number you last dialed.

"Send Message To <contact name>" – Open the message composition screen, with the contact's number in the To field.

"Check New Messages / SMS" – Your phone recites the number of unread messages you have received and recites





the name or number of each sender. (Read messages are excluded from the number.)

“Check Missed Calls” – Your phone recites the number of missed calls you have received and recites the name or number of each caller. (Missed calls that you have returned are excluded from the number.)

“Check Time” – Your phone recites the current time.

“Check Battery” – Your phone recites the percentage of battery power remaining.

“Check Signal” – Your phone recites the signal strength in percentage.

“Go to Home Page / Home Page” – Return to the home screen.



Setting Voice Command Options

When voice recognition is loaded, you can set your phone to recite messages you receive and prompt you to speak a phone number that you want to dial.

To set your phone to recite the messages you open:

- 1 Tap  Setup in the application launcher screen, then tap Voice Command.
- 2 Tap the check box ☐ beside Talking Phone to select it. A check mark ☒ indicates that the message reciting feature is activated.
- 3 Tap Save to save your setting.



To set your phone to prompt you to speak a phone number you want to dial:

- 1 Tap  Setup in the application launcher screen, then tap Voice Command.
- 2 Tap the check box ☐ beside Digit Prompt to select it. A check mark ☒ indicates that the audible digit prompt feature is activated.
- 3 Tap Save to save your setting.

Press and hold the VR key, then speak the voice instruction **“Open Digit Dial”** to put your phone in digit mode. When the phone is ready, it prompts you to speak the phone number by reciting **“Please say digits, go back, or dial out.”**

USB Mode

Set the mode in which you want to use your phone's USB port.

- 1 Tap  Setup in the application launcher screen, then tap USB Mode.
- 2 Select Modem, Mass Storage or USB Net.
- 3 Tap Save to save your setting.



Tip: Motorola mobile PhoneTools software can automatically determine and change your phone's USB mode setting as required.



Auto Keylock

You can set your phone keypad to lock automatically when the flip is closed and no activity is detected for a specified time. Locking the keypad can help prevent accidental keypresses (for example, when carrying your phone in a purse or pocket).

 
 
 
 
- 1 Tap  Setup in the application launcher screen.
- 2 Tap Auto Keylock to set the keylock time.

To **unlock** a locked keypad, press  .

Touchscreen Calibration

You should re-calibrate the touchscreen if the phone begins to respond incorrectly to your stylus input on the touchscreen display.

- 1 Tap  Setup in the application launcher screen, then tap Screen calibration.
- 2 Follow the on-screen instructions and tap the center of the symbol with your stylus as instructed, until the phone indicates that the touchscreen display is properly calibrated, then tap OK.



Backlight Brightness and Duration

- 1 Tap  Setup in the application launcher screen, then tap Backlight Setup.
- 2 Tap ◀ and ▶ to decrease or increase backlight brightness.
- 3 Tap Backlight Sleep Time to set the amount of time that the backlight remains on.
- 4 Tap Save to save your settings.

Tip: Tap  to return to the setup screen without saving your changes.

Note: Your phone's display normally is visible only when the display backlight is on or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you tap the screen or press any key.

Power Management

Your phone includes several features designed to help extend battery life.

Note: To conserve power it is recommended that you leave Bluetooth turned off. Turn it on only when needed.

Tap  Setup in the application launcher screen, then tap Power Management. Your phone displays a battery charge meter that indicates the remaining battery power.



The Battery Save feature automatically adjusts phone settings to maximize battery life. Tap the check box ☐ beside Battery Save to select it. A check mark ☒ indicates that battery save is activated.

The Auto Power Off feature automatically turns your phone off after a period of inactivity. Tap the check box ☐ beside Auto Power Off to select it, then tap Power Off Time to set the clock time at which your phone turns itself off.

Tap Save to save your settings and return to the setup screen.

 
 
Security

Fixed Dialing



When you turn on fixed dialing, you can only call numbers stored in the fixed dial list. Use this feature to limit outgoing calls to a predefined list of numbers, country codes, area codes or other prefixes.

- 1 Tap Setup in the application launcher screen, then tap Security.
- 2 Tap Fixed Dialling to open the fixed dialing menu.
- 3 Enter your SIM card PIN2 code when prompted, then tap OK. Your phone displays the fixed dial list and indicates whether fixed dial is currently turned On or Off.
- 4 Tap On or Off to turn fixed dialing on or off.
- 5 Tap Save to save your settings.



Fixed dial entries are stored on your SIM card. When fixed dialing is turned on, your address book displays only contacts stored in phone memory and entries stored on the fixed dial list.

You create and edit a fixed dial entry just like an address book contact. You can enter a wildcard character ^ in one or more positions for a phone number stored as a fixed dial entry. A wildcard character can be replaced by any digit when the user dials the number.

Locking the SIM Card

Your *Personal Identification Number* (PIN) code protects the information stored on your SIM card. When the SIM card is locked, you must enter your SIM card PIN code to unlock the SIM card each time you turn on the phone or insert the SIM card in the phone. Your SIM card PIN code is given to you by your service provider.

- 1 Tap  Setup in the application launcher screen, then tap Security.
- 1 Tap PIN Request On or PIN Request Off to activate or deactivate the feature.
- 2 Enter your SIM card PIN1 code when prompted and then tap OK to submit your code and save your setting.

Unblock the SIM Card PIN Code

If you enter an incorrect SIM card PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM PIN1 Blocked. You must enter a PIN unblocking key (PUK) code, which you can obtain from your service provider.



Caution: If the unblocking attempt is tried unsuccessfully 10 times, the SIM card is permanently disabled and your phone displays SIM Disabled.

Unlock the SIM Card PIN2 Code

If you enter an incorrect SIM card PIN2 code 3 times in a row, your phone's SIM PIN2 protected features are disabled and your phone displays SIM PIN Blocked when you try to use a PIN2 feature. You must enter a PIN2 unblocking key (PUK2) code, which you can obtain from your service provider.

Locking the Phone

You can lock your phone to prevent unauthorized use. To use a locked phone, you must enter the unlock code.

You can set a timer to lock your phone after a specified period of inactivity. You can answer calls and read notifications, (but not read SMS messages) when the phone is locked, but you cannot make calls, view PIM or use other features.

 
 
 
You can make emergency calls on your phone even when it is locked (see page 54).

Locking Your Phone

Tap  Setup in the application launcher screen, tap Security, then select a Phone Lock timer setting. Your phone prompts you to enter the unlock code. Enter your unlock code to activate phone lock.

Unlocking Your Phone

When you see the Enter Unlock Code prompt, enter your unlock code to unlock the phone.



Tip: Your phone's unlock code is originally set to 1234. Many service providers reset the unlock code to the last 4 digits of your phone number.

Barring Calls



Use call barring to restrict outgoing or incoming calls. You can restrict all calls, calls to international numbers or calls while roaming.

- 1 Tap  Setup in the application launcher screen, then tap Security.
- 2 Tap Call Barring to open the call barring menu.
- 3 Tap Outgoing Calls or Incoming Calls to select a restriction setting for outgoing or incoming calls.
- 4 Enter your call barring code when prompted, then tap OK.
- 5 Tap Save to save your settings.

Changing a Code, PIN or Password

Your phone's 4-digit unlock code is originally set to 1234 and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code and/or call barring password if necessary.



 
To change a code or password, tap  Setup in the application launcher screen, tap Security, then tap Change Password to open the change passwords screen.




If You Forget a Code, PIN or Password

Note: Your phone's 4-digit unlock code is originally set to 1234 and the 6-digit security code is originally set to 000000. Many service providers reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following at the Enter Unlock Code prompt: Tap  to display the unlock code bypass screen. Enter your security code, then tap OK to submit the security code.



 If you forget your security code, SIM card PIN code, PIN2 code or call barring password, contact your service provider.





Master Reset

Reset all options back to their original factory settings, **except** for the lifetime timer.

- 1 Tap  Setup in the application launcher screen, then tap Master Reset.
- 2 Enter your security code when prompted and then tap OK.
- 3 Tap OK to confirm that you want to perform master reset.

  Tip: Tap Cancel to exit without performing the master reset procedure.






Master Clear

Clear all user settings and entries, **except** for information stored on the SIM card, erase all downloaded pictures and sound files and reset all options back to their original factory settings, **except** for the lifetime timer.

Caution: Master clear **erases all user-downloaded content and user-entered information** stored in your phone's memory, including address book and calendar entries. After you erase the information, you cannot recover it. Master clear does **not** delete any information stored on the SIM card.

- 1 Tap  Setup in the application launcher screen, then tap Master Clear.
- 2 Enter your security code when prompted and then tap OK.
- 3 Tap OK to confirm that you want to perform master clear.

 Tip: Tap Cancel to exit without performing the master clear procedure.



Getting More Out Of Your Phone

Forwarding Calls



Forward your phone's incoming voice, fax and/or data calls directly to another phone number.

- 1 Tap  in the global navigation bar to display the phone keypad.
- 2 Tap , then tap Setup to open the phone setup menu.
- 3 Tap Call Divert, then select the type of calls you want to forward: Voice Calls, Fax Calls or Data Calls.

The forwarding options for voice calls are:

Option	Description
All Voice Calls	Forward all calls.
When Unavailable	Forward calls if your phone is unavailable.
Cancel All Diverts	Do not forward calls.

Note: Repeat this procedure to enter forwarding information for other call types. Fewer forwarding options are available for fax calls and data calls.



 
Monitoring Phone Use

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing  or tapping End. This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

To view and adjust phone call meters:

- 1 Tap  in the global navigation bar to display the phone keypad.
- 2 Tap , then tap Setup to open the phone setup menu.
- 3 Tap Call Meters to open the call meters menu.



Viewing and Resetting Call Timers and Cost Trackers



The following call timers and cost trackers display on the call meters menu:

Option	Description
Total Call Cost	Amount spent on dialled and received calls since the last time you reset the cost tracker.
Total Call Time	Approximate total time spent on dialled and received calls since the last time you reset the call timer.
Call Lifetime	Approximate total time spent on all calls on this phone. You cannot reset this timer.

To reset the call timer, tap Clear Call Time.

To reset the cost tracker, tap Clear Call Cost.

Using a Timer During a Call

To set a timer to beep at specified intervals during a call, tap the Audible Timer drop-down menu and select one of the following options: Off, 1 Min, 5 Min, 10 Min or 15 Min.

To display time or cost information during a call, tap the Display drop-down menu and select one of the following options:

Option	Description
Timer	Display the approximate elapsed time for the current call.
Cost	Display the cost of the current call (if you subscribe to a call cost option or advice of charge). 
Total Cost	Display the cost of all calls since the last time you reset the cost tracker (if you subscribe to a call cost option or advice of charge). 
Credit	Display how much credit you have left (if you subscribe to a call cost option or advice of charge). 
Off	No in-call timer display.

Adjusting Call Cost Settings



You can set a credit limit so that the phone displays your remaining credit during calls. The phone notifies you when you near your limit and ends the call when you reach it.

Tap Call Cost Setup and enter your SIM PIN2 code to open the cost setup menu.



You can enter a credit limit and set the phone to display your remaining credit in time units or as a currency value.

Viewing Credit Information



If you subscribe to an advice of charge option, tap Available Credit to view the amount of credit available.

Using Handsfree Features



Your phone includes an integrated handsfree speaker that you can use for handsfree applications. For instructions on how to use the handsfree speaker, see page 40.

You can also purchase an optional Motorola Original™ handsfree car kit, speakerphone or headset for your phone. These accessories provide alternative ways for you to use your phone without using your hands.

If the accessory supports Bluetooth® wireless connections, you can setup a Bluetooth wireless link with your phone (see page 129).

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Adjusting Bluetooth® Accessory Settings

If a Bluetooth headset or car kit accessory supports remote volume control, you can use your phone's volume keys to set the device's speaker volume during a handsfree call.

Activating Auto Answer

Set your phone to automatically answer calls after 2 rings (4 seconds) when using the handsfree speaker or when the phone is connected to a headset, car kit or external speakerphone.

- 1 Tap  in the global navigation bar to display the phone keypad.
- 2 Tap , then tap Setup to open the phone setup menu.
- 3 Tap the check box ☐ beside Auto Answer. A check mark ☒ indicates that auto answer is activated.
- 4 Tap  to exit the phone setup menu.

Sharing Information

You can share information with another phone, PC or hand-held device. You can share address book contacts, calendar events, tasks, note pad entries, voice records, pictures, photos and sound files by sending or receiving the data through a Bluetooth wireless connection or in an MMS or email message.

Note: In some cases, the share option is only available from the tap and hold pop-up menu.

Sending Data

- 1 Select the data you want to send, tap , then tap Share to display a list of share options.



- 2 Tap Bluetooth, then tap OK to exchange the data through a Bluetooth wireless connection. Tap MMS or Email, then tap OK to send the data in an MMS or email message.
- 3 Complete the setup procedure for the transfer method you selected.
- 4 Tap OK to send the data.

For more information about using a Bluetooth wireless connection, see page 129.

 
 
 
 
Receiving Data

The sending device must establish a transmission link with your phone through a Bluetooth, MMS or email connection.

Note: If necessary, turn on Bluetooth power on your phone to let the other device establish a wireless link.

Your phone alerts you when it receives a data transfer request from the other device. If necessary, tap OK to accept the data.

Your phone notifies you when data transfer is complete. If the transfer is not successful, your phone displays the message Failed to Receive.



Troubleshooting

Question	Answer
Is your battery charged? Do you see  in the display?	The battery level indicator  should have at least one segment showing. If it does not, recharge your battery (see page 25.)
Do you have a valid SIM card inserted in your phone?	If necessary, turn off your phone and make sure that you have inserted a valid SIM card (see page 21).
Does the handset have a signal? Do you see  in the display?	The signal strength indicator  should have at least one segment showing. If it does not, move to an area with a stronger signal to use your phone.
Is the earpiece volume too low?	While on a call, rotate the rocker switch up to increase the earpiece volume.
Is the other party unable to hear you?	Your phone may be muted. Tap Mute if necessary to unmute the phone. Also, make sure that your phone's microphone is not blocked by its carrying case or a sticker.

Question	Answer
Has the phone been damaged, dropped or gotten wet?	Dropping your phone, getting it wet or using a non-Motorola battery or battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories.
Was a non-Motorola battery or battery charger used?	

The following refer to specific problems:

Problem	Solution
My phone was stolen. To whom should I report this?	Report a stolen phone to the police and to your service provider (the company that sends you your monthly wireless service bill).
I forgot my password.	See page 160.
I pressed the power key, but nothing happened.	Be sure to open the flip , then press and hold the power key  for 2 seconds, until the display appears and you hear an alert. If nothing happens, check that a charged battery is installed (see page 23).




Problem	Solution
The display says: Insert SIM Card or Check SIM Card even though I have inserted my SIM card in the phone.	The SIM card may be incorrectly inserted. Check the SIM card to make sure that it is inserted properly (see page 21).
The display says: SIM Blocked. How do I unblock my SIM card?	Call your service provider (the company that sends you your monthly wireless service bill) to obtain the PIN unblocking key (PUK) code (see page 157).
The display says: Enter Unlock Code. How do I unlock my phone?	Enter the factory-preset unlock code (1234) or the last 4 digits of your phone number. If this fails, call your service provider (the company that sends you your monthly wireless service bill).
My phone does not ring.	Your phone may be set to a silent or vibrate ring alert style. To change the ring alert style, see page 147.
I tried to place a call and heard an alternating high/low tone.	Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until the display shows the name of your service provider before making a call.

Problem	Solution
I cannot send/receive calls.	Make sure that you have a phone signal (the signal strength indicator  should have at least one segment showing). Avoid electrical or radio interference and obstructions such as bridges, parking garages or tall buildings. Your phone also may have the call barring feature turned on. If you know the call barring password, you can change this setting in the security menu (tap  Setup in the application launcher screen, tap Security, then tap Call Barring). Also, check to be sure your SIM card is installed and working.
My phone has poor reception and drops calls.	Make sure you have a phone signal (the signal strength indicator  should have at least one segment showing). Stay clear of any obstructions such as bridges, parking garages or tall buildings.
I cannot hear others on my phone.	While on a call, rotate the rocker switch up to increase the earpiece volume. Also, make sure that your phone's earpiece is not blocked by its carrying case.

Problem	Solution
How do I see the calls I sent or received?	To see the most recent calls you dialed or received: 1 Tap  Calls in the application launcher screen. 2 Tap Answered Calls, Missed Calls or Dialed Calls. 3 Tap an entry to display call details. 4 Tap Call to call the entry's number.
My phone's display is too dark.	Use the Brightness feature to change the brightness level in your display (see page 155). You can also use the Backlight Sleep Time feature to change the length of time that the display backlight stays on (see page 155).
My battery did not last as long as I expected. What can I do to extend battery life?	Your battery's performance is affected by charge time, feature use, temperature changes, backlight use and other factors. For tips on extending battery life, see page 21.
I am unable to create a voice record	Try moving to a quieter location to make your voice recording. Hold the phone about 4 inches (10 centimeters) from your mouth and speak directly into the phone in a normal tone of voice.



Problem	Solution
I launched the browser but the display says: Network Problem.	You may be in an area without service or you may be connected to a network that does not support Internet access.
I launched the browser but the display says: Server Not Responding.	Try again in a few minutes. The servers may be temporarily busy.

   



Specific Absorption Rate Data

 
 
 
This model phone meets the international standards for exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.¹ Tests for SAR are conducted in accordance with CENELEC² testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is 0.74 W/kg.³




While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model





could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

   1. The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
2. CENELEC is a European Union standards body.
3. Additional related information includes the Motorola testing protocol, assessment procedure and measurement uncertainty range for this product.



Index

A

- accessories 20, 166
- active line, changing 51
- address book 43, 52, 61
- alarm clock 107
- alert
 - defined 147
 - setting 50, 147
 - turning off 29
- animation 80, 148
- answered calls list 48, 55, 89
- answering a call 28, 51, 167
- antenna, turning on/off 26
- appointments. *See* calendar
- auto keylock 154

B

- backlight 155
- barring calls 159
- battery 23, 24
- battery level indicator 35
- battery life, extending 21, 155
- Bluetooth indicator 35

Bluetooth wireless

- connection 4, 69, 102, 129, 145, 166
- brightness, setting 155
- browser 87, 113
- browser messages 87

C

- cable, connecting to phone 145
- calculator 106
- calendar 97
- call
 - alert, turning off 29
 - answered calls 48, 55, 89
 - answering 28
 - auto answer 51, 167
 - barring 159
 - barring password, changing 160
 - canceling 53
 - conference call 59
 - cost 164, 165
 - deleting 89
 - dialed calls 48, 55, 89
 - dialing another call 57



dialing second number
43
diverting 162
emergency number 54
ending 27, 28
flip closed 27, 42
forwarding 162
handsfree speaker 40, 57
hold 57
international access code
54
missed calls 48, 55, 89
mute 57
received calls 89
receiving 28
recent calls 89
ring style 50, 147
storing 89
timing 164
transferring 58
call cost information 165
Call Failed, Number Busy
message 52
call meters 164
call timers 164
caller ID 52
calling line identification.
See caller ID
camera 1, 2, 3, 120
camera key 1, 2, 3, 120
car kit 166

178

clear key 1, 27, 47
clock 35
codes 159, 160
default 159
conference call 59
CoPilot Satellite Navigation
129
cost trackers 164
credit information 165

D

data, sharing 167
deleting a call 89
dialed calls list 48, 55, 89
dialing a number 156
display 30, 149, 155
diverting calls 162
drafts folder 80, 81
drawing pad 126

E

earpiece volume 29
EDGE indicator 35
email 90
emergency number 54
end key 1, 27, 28
ending a call 27, 28
Enter Unlock Code
message 159, 160
extension number, dialing
54, 55





F

file manager 108
5-way navigation joystick 1,
39
fixed dial 156
forwarding calls 162

G

GPRS indicator 35, 113

H

handsfree speaker 40, 57
handsfree use 166
handwriting 38
headset 166
hold a call 57
home key 1
home screen 30

I

incoming call
canceling 53
forwarding 162
Incoming Call message 53
information services 87
information, sharing 167
input settings 38
international access code
54

Internet network connection
settings 116

J

joystick 1, 39, 41

K

keypad 27, 41, 43, 154

L

language, setting 149
line, changing 51
lock
keypad 41, 154
phone 158
SIM card 157
Low Battery message 35

M

making a call 27, 42
master clear 161
master reset 160
media player 49, 119
meeting 100
memory card 25, 108, 111,
145
Memory is Full! message
79
menu 42
message
browser messages 87





deleted messages 81
deleting 79
draft 80, 81
inbox setup 83
information services 87
moving to another folder 82
outbox 77
personal folder 81
reading 79
receiving 78
replying 79
sending 45, 73
signature, creating 72
sorting 80
status 77
missed calls list 48, 55, 89
MMS. *See* message
modem 132
MOTOSYNC 69, 103, 136
multimedia message
 receiving 78
 sending 3
multimedia messaging
 service. *See* message
 message
music 3, 49, 74, 119
mute 57
my telephone number 29, 60

N

 
 
 
new meeting request 100
note pad 104
number
 storing in address book 62
 storing your number 60
 viewing your number 29

O

objects, sharing 167
optional accessory 20
optional feature 20
organizing files 108
OTA, defined 142
outbox 77
owner's information 70

P

passwords. *See* codes
personal folder 81
phone
 active line, changing 51
 alert, turning off 29
 auto answer 51, 167
 clear stored information 161
 codes 159
 credit information 165
 language, setting 149





locking 158
reset all options 160
ring style 50, 147
security code 159
turning on/off 25, 26
unlock code 159
unlocking 26, 158, 159,
160

phone number
active line, changing 51
international access code
54
redialing 52
storing in address book
62
storing your number 60
viewing your number 29

phonebook
category views 67
photo 2, 52, 80, 120, 148
picture 80, 148
picture ID 52

PIN code
changing 160
defined 157
entering 157
unblocking 157

PIN2 code
changing 160
unblocking 158
power key 1, 25, 26

power management 155
profile, network connection
116
PUK code 157

Q

quick card 76, 79
quick menu 42

R

RealOne media player 49,
119
received calls list 89
receiving a call 42
recent calls 48, 55, 89
recorder 125
redial 52
ring style, setting 50, 147
ring tone 3, 49, 80, 119
rocker switch 1, 39, 41

S

security code 159, 160
send key 1, 27, 28, 43
short message service. *See*
message
signal strength indicator 35
silent alert, setting 50, 147
SIM Blocked message 26,
157, 158
SIM card



- applications 135
- defined 21
- installing 21
- locking 157
- PIN code entry 26
- PIN code, changing 160
- PIN2 code, changing 160
- precautions 21
- SIM Blocked message
26, 157, 158
- SIM Disabled message
158
- unlocking 157
- unlocking 157
- SIM Disabled message 158
- SIM PIN code
 - changing 160
 - defined 157
 - entering 157
 - unlocking 157
- SIM PIN2 code
 - changing 160
 - unlocking 158
- SMS. *See* message
- song 3, 49, 74, 119
- sound 3, 49, 80, 119
- speaker 2
- standby time, increasing
155
- STK 135
- storing a call 89

182

 
 
 
- stylus 1, 2, 30
- Sync 142
- synchronizing information
69, 103, 136

T

- tap and hold 38
- tasks 103
- telephone number
 - storing in address book
62
 - storing your number 60
 - viewing your number 29
- text, deleting 27, 47
- text, entering 36, 45
- touchscreen
 - calibrating 154
 - input settings 38
- transfer a call 58
- TransFlash card 25, 108,
111, 145
- trash folder 81
- travel charger 23
- turbo dial 56

U

- unlocking the SIM card
157
- unlock
 - keypad 41, 154
 - phone 158







SIM card 157
unlock code 26, 82, 158,
159, 160
USB port 1

V

  vCalendar 102
vCard 69
vibrate alert
 setting 50, 147
 turning off 29
video clip 3, 49, 80, 119,
120
viewer 105
voice command 152
voice recognition key 1
voice records 125
voicemail 28, 54
volume 29
 earpiece 29



W

wallpaper 148
Web pages 113
world time 134



6803580C08

183

