 


Emergency Services and Safety Precautions

Emergency Services

To make an emergency call in any country



Press 112

Ask the operator for the service which you require: Police, Ambulance, Fire Brigade, Coastguard or Mountain Rescue Services. Give your position and, if possible, remain stationary to maintain phone contact.

The 112 emergency number service is available on every digital network service.

The number 999 is an alternative emergency number for the UK only, and can only be used with a valid SIM card.

 Due to the nature of the cellular system, the success of emergency calls cannot be guaranteed.

General Care

A cellphone contains delicate electronic circuitry, magnets, and battery systems. You should treat it with care and give particular attention to the following points.

- Do not allow the phone or its accessories to come into contact with liquid or moisture at any time.
- Do not place anything in the folded phone.
- Do not expose your phone to extreme high or low temperatures.
- Do not expose your phone to naked flame, cigars or cigarettes.
- Do not paint your phone.
- Do not drop or subject your phone to rough treatment.
- Do not place the phone alongside computer disks, credit cards, travel cards and other magnetic media. The information contained on disks or cards may be affected by the phone.
- Take care not to allow metal objects, such as coins or key rings, to contact or short-circuit the terminals.
- Do not dispose of your phone in a fire. Your phone's Li-ion batteries may be safely disposed of at Li-ion recycling points. For more specific battery and power supply information, see page 3.
- Do not attempt to dismantle the phone or any of its accessories.
- This equipment is fitted with an internal battery that can only be replaced by a qualified service engineer.
- Using any Vehicle power adapter (option), Dual tap (option), AC adapter or accessory not specified by the manufacturer for use with this phone creates a potential safety hazard.
- The earpiece may become warm during normal use and the unit itself may become warm during charging.
- Your phone may become warm during charging and normal use. Do not expose your phone to your skin for a long time.
- Use a damp or anti-static cloth to clean the phone. Do NOT use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the case.

- Remember to recycle: the cardboard packaging supplied with this phone is ideal for recycling.
- Do not leave the battery empty for a long time, otherwise some data may be initialized.
- Your phone contains metal which may cause you an itch, a rash or eczema depending on your constitution or physical condition.
- Take care not to put your phone in the back pocket of your trousers or skirt and then sit on it. Also, do not put your phone at the bottom of bag where it may subject to excessive weight or pressure.
- Doing so may damage the display and camera lens and cause them malfunction.
- The foam covers the earpiece of the headset. Do not put any other part of the headset in your ears.
- If you use or leave the phone in high temperature (above 45°C), bubbles may appear on the surface of the Main-display. In such a case, use the phone in normal temperature (around 25°C). The bubbles on the Main-display will disappear after a while.

Aircraft Safety

- Switch off your phone when inside or near aircraft. The use of cellphones in aircraft is illegal. It may be dangerous to the operation of the aircraft and it may disrupt the cellular network. Failure to observe this instruction may lead to suspension or denial of cellphone service to the offender, or legal action, or both.
- Do not use your phone on the ground without the permission of the ground crew.

Hospital Safety

- Switch off your phone in areas where the use of cellphones is prohibited. Follow the instructions given by the respective medical facility regarding the use of cellphones on their premises.

General Safety

- Observe 'Turn off 2-way radio' signs, such as those near stores of fuel, chemicals or explosives.
- Do not allow children to play with the phone or its accessories.
- Small parts are included in your phone. Keep them out of reach of small children, for whom it could be a choking hazard.
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if a cellphone is used next to them. Observe any warning signs and manufacturer's recommendations.
- Keep your phone away from precision instruments. It may cause noise or malfunction of the instruments.
- If you have a weak heart, you should take extra precautions when setting functions such as the Vibrator and Ringer volume functions for incoming calls.
- If you set the Vibrator setting to anything other than OFF, be careful that the phone is not near a source of heat (e.g. a heater) and that it does not fall from a desk due to the vibration.
- To avoid risk of burns do not allow the product temperature to exceed 55°C; e.g. do not leave the phone on a car dashboard or on a window sill, behind glass in direct sunlight, etc.

Road Safety

- You MUST exercise proper control of your vehicle at all times. Give full attention to driving.
- Observe all the recommendations contained in your local traffic safety documentation.
- Pull off the road and park before making or answering a call if driving conditions so require.
- You MUST NOT stop on the hard shoulder of a motorway to answer or make a call, except in an emergency.
- Switch off your phone at a refuelling point, such as a petrol station, even if you are not refuelling your own car.
- Do not store or carry flammable or explosive materials in the same compartment where a radio transmitter, such as a cellphone, is placed.
- Electronic vehicle systems, such as anti-lock brakes, speed control and fuel injection systems are not normally affected by radio transmissions. The manufacturer of such equipment can advise if it is adequately shielded from radio transmissions. If you suspect vehicle problems caused by radio transmissions, consult your dealer and do not switch on your phone until it has been checked by qualified approved installers.

Vehicles Equipped with an Air Bag

An air bag inflates with great force. Do not place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Third Party Equipment

The use of third party equipment, cables or accessories, not made or authorized by NEC, may invalidate the warranty of your cellphone and also adversely affect the phone's operation. For example use only the NEC mains cable supplied with the AC charger.

Service

The cellphone, batteries and charger contain no user-serviceable parts. We recommend that your NEC cellphone is serviced or repaired by an NEC authorized service centre. Please contact your Service Provider or NEC for advice.

Non-Ionizing Radiations

The radio equipment shall be connected to the antenna via a non-radiating cable (e.g. coax).

The antenna shall be mounted in a position such that no part of the human body will normally rest close to any part of the antenna unless there is an intervening metallic screen, for example, the metallic roof.

Use only an antenna that has been specifically designed for your phone. Use of unauthorized antennas, modifications or attachments could damage your phone and may violate the appropriate regulations, causing loss of performance and radio frequency (RF) energy above the recommended limits.

Efficient Use

For optimum performance with minimum power consumption, note the following:

- Your phone has the internal antenna. Do not cover part of the internal antenna of the phone with your hands. This affects call quality, may cause the phone to operate at a higher power level than needed and may shorten talk and standby times.

Radio Frequency Energy

Your phone is a low-power radio transmitter and receiver. When it is turned on, it intermittently receives and transmits radio frequency (RF) energy (radio waves). The system that handles the call controls the power level at which the phone transmits.

Exposure to Radio Frequency Energy

Your phone is designed not to exceed the limits for exposure to RF energy set by national authorities and international health agencies. * These limits are part of comprehensive guidelines and establish permitted levels of radio wave exposure for the general population. The guidelines were developed by independent scientific organizations such as ICNIRP (International Commission on Non-Ionizing Radiation Protection) through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

* Examples of radio frequency exposure guidelines and standards that your phone is designed to conform to:

- ICNIRP, "Guidelines for limiting exposure to time-varying electric, magnetic, and electromagnetic fields (up to 300 GHz)-International Commission on Non-Ionizing Radiation Protection (ICNIRP)". Health Physics, vol. 74, pp. 494-522, April 1998.
- 99/519/EC Council Recommendation on the limitation of exposure to the general public to electromagnetic fields 0 Hz-300 GHz, Official Journal of the European Communities, July 12, 1999.
- ANSI/IEEE C95.1-1992. "Safety levels with respect to human exposure to radio frequency electromagnetic fields, 3kHz to 300 GHz". The Institute of Electrical and Electronics Engineers Inc., New York, 1991.
- FCC Report and Order, ET Docket 93-62, FCC 96-326, Federal Communications Commission (FCC), August 1996.
- Radio communications (Electromagnetic Radiation Human Exposure) Standard 2003, Australian Communications Media Authority.

Declaration of Conformity

- This product complies with the requirements of the R&TTE Directive 1999/5/EC. The 'Declaration of Conformity' leaflet can be found within this box.

Disposing of your used NEC product

• In the European Union

EU-wide legislation as implemented in each Member State requires that used electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes mobile telephones or electrical accessories, such as chargers or headsets. When you dispose of such products, please follow the guidance of your local authority and/or ask the shop where you purchased the product. The mark on the electrical and electronic products only applies to the current European Union Member States.

• Outside the European Union

If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority and ask for the correct method of disposal.



Licenses

- T9® Text Input and the T9 logo are registered trademarks of Tegic Communication.
"T9 Text Input is licensed under one or more of the following:
U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162, 6,646,573; Australian Pat. Nos. 727539, 746674, and 747901; Canadian Pat. Nos. 1,331,057, 2,302,595, and 2,227,904; Japan Pat. No. 3532780, 3492981; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK1010924; Republic of Singapore Pat. No. 51383, 66959, and 71979; European Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2); Republic of Korea Pat. Nos. KR201211B1 and KR226206B1. People's Republic of China Pat. Application Nos. 98802801.8, 98809472.X and 96196739.0; Mexico Pat. No. 208141; Russian Federation Pat. No. 2206118; and additional patents are pending worldwide"
- USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE DIRECTLY RELATED TO (A) DATA OR INFORMATION ENCODED BY A CONSUMER FOR PERSONAL AND NON-COMMERCIAL USE WITHOUT REMUNERATION; (B) DATA OR INFORMATION (i) GENERATED BY AND OBTAINED WITHOUT CHARGE FROM A CONSUMER NOT THEREBY ENGAGED IN A BUSINESS ENTERPRISE, AND (ii) FOR PERSONAL USE ONLY; AND (C) OTHER USES SPECIFICALLY AND SEPARATELY LICENSED BY MPEG LA, L.L.C.
- Helvetica is a registered Trademark of Heidelberger Druckmaschinen AG which may be registered in certain jurisdictions.
- ©2002 Music Airport Inc., <http://www.music-airport.com/>
- Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc in the U.S. and other countries.
- This product contains ACCESS Co., LTD's Compact NetFront™ Plus internet browser software.
Copyright © 1998-2005 ACCESS CO., LTD. **Compact NetFront Plus**
Compact NetFront™ is a registered trademark or trademark of ACCESS CO., LTD in Japan and selected countries worldwide.
- This product contains ACCESS CO., LTD's JV-Lite2™ Java virtual machine software.
Copyright © 2000-2005 ACCESS CO., LTD.
JV-Lite2™ is a registered trade mark or trademark of ACCESS COI, LTD, in Japan and selected countries world wide.
- Copyright 2005 Aplix Corporation and eSQL Co., Ltd. All Rights Reserved.
- This Mobile Printing Ready product is designed to provide easy printing from mobile phones. This product follows Mobile Imaging and Printing Consortium (MIPC) guidelines version 1.0 for PictBridge.
- The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by NEC is under license. Other trademarks and trade names are those of their respective owners.
- i-mode and i-mode logos are trademarks or registered trademarks of NTT DoCoMo.

For the purpose of improvement, the specifications for this product and its accessories are subject to complete or partial change without prior notice.

Before You Start

User's manual conventions

The instructions in this user's manual make use of the shortcuts selection except special cases.

The following markers are used throughout the user's manual to attract your attention:



This type of paragraph will contain details of where to find information related to the topic in question.



This type of paragraph will contain information worth noting.



This type of paragraph will contain important information.

 This type of description will contain procedures to operate your phone.

Menu shortcuts selection

The alternative shortcuts method of selection lets you jump straight to a menu or function without highlighting an icon and scrolling through the intermediate menu options. The selection is made by pressing numbers which relate to the displayed menu options.

 *The instructions in this user's manual make use of the shortcuts selection, except in special cases.*

Reading the titles

Some titles in this manual contain information on how to access the functions. In these titles, **M** stands for , the numbers indicate the menu shortcut numbers (see "Overview of menu function" on page x for details) and ... (three periods) indicate that there are more operations described in the paragraph.

Reading the procedures

"**Highlight**" means to use the 4-way navigation keys (▲▼◀▶) to move the area emphasized with different colouring.

"**Select**" means to highlight an item and then press .

Procedures are written omitting the verb "press", except in some special cases.

For example,  **1 2** means to:

-  Start from the standby screen → Press  to display the Main menu screen
-  Press **1** to display the Settings screen → Press **2** to display the Phone modes screen

Simple procedures are connected by arrows (→).

Check box/Radio button

A check box enables/disables an option out of a set of options, and multiple check boxes can be selected at the same time. On the other hand, selecting a radio button automatically cancels the previous selection, so only one radio button can be selected at one time.

A check box/radio button option can be selected/cancelled by highlighting it and pressing .

Desktop icon area

This area contains the automatically displayed and the manually created desktop icons. They provide shortcuts to certain items/functions.

Help area

This area contains clock information and help information appropriate for the current screen (e.g. key presses remaining when composing a message).



SK1/SK2

This area contains context sensitive descriptions of the Softkeys' functions appropriate for the current screen.

Status bar area


This area contains icons which indicate the battery strength, new SMS/MMS message(s), signal strength, etc. (see page viii).

Shortcut number

Press the appropriate number to jump straight to a next menu.

The row colour is changed when selected (e.g. to activate/deactivate a facility).

Menu title

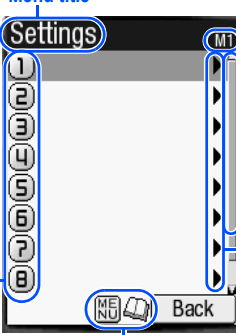

Shortcut menu number

The current menu number is displayed.

Page scroll bar

Displayed when you can press ▼ to scroll to the next page.

Next menu icon


Displayed when you can press ► or the shortcut number to show the next menu.

Help icons

Displayed when you can use the key represented by these icons (see page viii).



The Liquid Crystal Display (LCD) of your phone's main-display is manufactured using high-precision technology. Even so, the LCD may contain pixels (dots) that fail to light or that remain permanently lit. Note that this is normal and does not indicate a problem with your display.

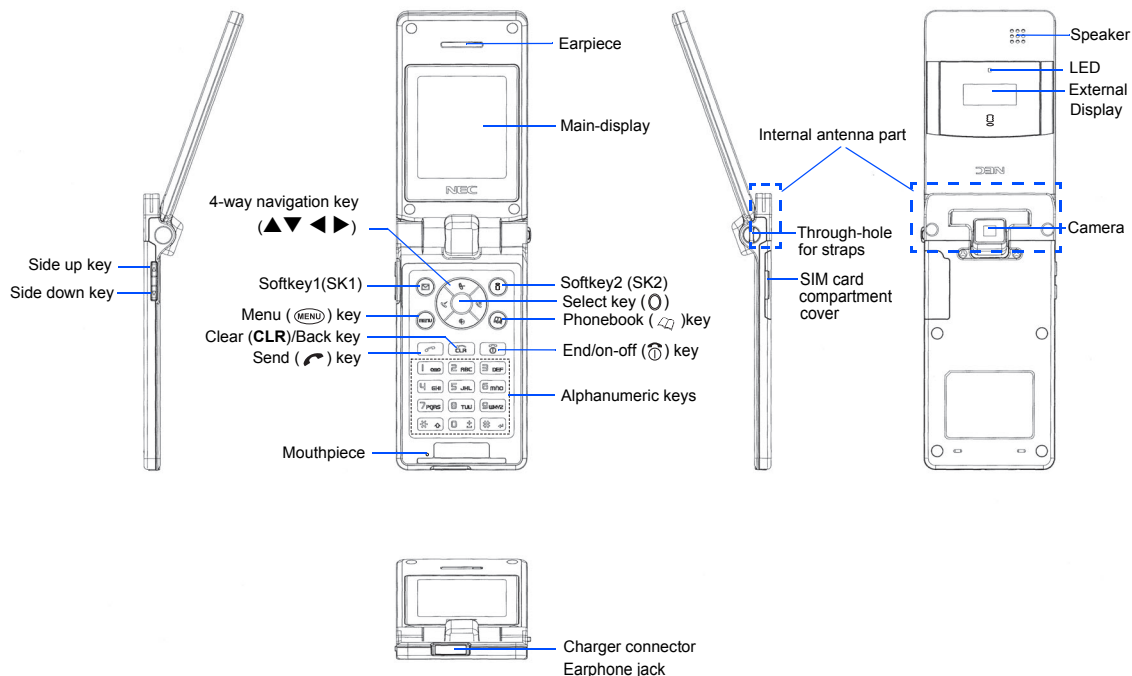

Be careful not to put your finger or foreign objects in the internal antenna part when your phone is opened.




Do not put any accessories (straps etc.) on the internal antenna part.

Keypad shortcuts

The following operations are available from the standby screen.

Key	Operation that involves pressing a key	See page	Operation that involves pressing and holding a key	See page
	Accessing the Main menu screen	x	Setting/Cancelling the Side key lock	20
SK1	Accessing the Mail screen	41	Accessing the Inbox screen	42
SK2	Accessing the i-mode menu screen	39	Accessing the Java™ applications screen	66
	Accessing the Phonebook list screen	46	Accessing the Message screen	27
	Accessing the Phone modes screen	21	Setting the phone to Meeting mode/Returning to the previous mode	21
	Accessing the My data screen	60	Accessing the voice recall	9
	Accessing the received calls list	12	–	–
	Accessing the missed calls list	12	–	–
	Accessing the dialled calls list	12	–	–
	Highlighting a desktop icon	19	Accessing the homepage	39
	Ending a call or returning to the standby screen	–	Powering off	5
CLR	Cancelling the Cell Broadcast message display	33	Deleting all the automatically displayed desktop icons	18
	Deleting character or returning to the previous screen	–	Deleting all characters when you enter text	–
1	Entering phone numbers	6	Calling the Voice mail centre	53
2 to 9	Entering phone numbers	6	One-touch dial to the corresponding number in the phonebook(SIM)	8
0	Entering phone numbers	6	Entering + when you make an international call	14
#	Entering #	6	Entering a pause	–
*	Entering *	6	Switching the ALS line 1/2 (if the SIM card supports ALS)	20
Side up	Accessing the volume control screen when your phone is open (Use  ,  , Side keys or 0 to 9 keys to adjust the volume.)	20	Accessing the camera view finder screen	54
	Activating the ring silencer function when you receive a call	20		
Side down	Accessing the volume control screen when your phone is open (Use  ,  , Side keys or 0 to 9 keys to adjust the volume.)	20	–	–
	Activating the ring silencer function when you receive a call	20		


Main-display

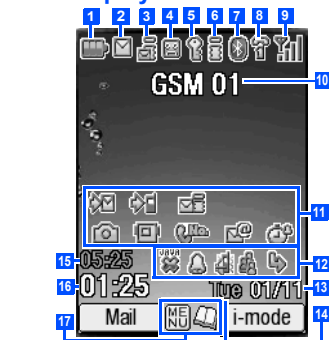

Indicates the battery level.



 Indicates the battery charging status (charging, stop).



Indicates that there is a new SMS in your phone.



Indicates that there is a new SMS on the network.



 
Indicates that the SIM memory is full.



Indicates that the Inbox in your phone is full.




Indicates that there are mail and MMS on the server.



Indicates that there is a new mail/MMS in your phone.



 Indicates that the memory for mail/MMS is full.



Indicates that new voice mail messages are on the network (No ALS or ALS Line 1/ALS Line 1 and 2/ALS Line 2).



Indicates secured communication on WTLS in i-mode browsing.



Indicates that your phone is connected to a GPRS modem such as PC.



Indicates that the phone is in the GSM (Global System for Mobile communication) network service area and GPRS is active.



Indicates that the GPRS is available and i-mode (PDP Context) is active.



Indicates that the i-mode connection is carried out.



Indicates that the i-mode lock is on.

No icon appears when the phone is outside the GSM network service area, or when the phone is in the GSM network service area and GPRS is not attached.



Indicates Bluetooth On, Bluetooth is active.



 
Indicates the line status (No ALS or ALS Line 1/ALS Line 2). The icon with displayed in red indicates that the ALS line 1 or 2 is unencrypted/no ALS.



Indicates the signal strength level.



Appears when you are outside the service area.



Network name (indicated in orange when using roaming service)



See "Desktop icons" on page 18 for details



Indicates the call diversion is set.



Indicates the Meeting mode/Pocket mode.

No icon appears for the Normal mode.



Indicates sound-off, vibrator-on, sound-off/vibrator-on.



 
Indicates alarm-on.




Indicates the auto start of a Java™ application has failed.



Date



Day of week

 

Remote time



Local time



Indicates that you can use the options menu by pressing (MENU).



Indicates that you can use the phonebook list by pressing .



Indicates the usable keys in black, while using i-mode or a Java™ application is in operation.



Indicates that the help display is available by pressing when using SIM toolkit.



Indicates that a Java™ application is in operation.

<When the camera/video view finder is in operation>



Indicates single/burst mode (camera).



Indicates the video mode is on or the video is recording.



Indicates that the self timer is on.



Indicates the quality of the picture (super fine, fine, normal, economy or super economy).



Indicates the quality of the video.



Indicates the photo/video screen size.



Indicates the shooting environment.



Indicates the brightness setting. The "+2" setting is the brightest.



Indicates the zoom level.

<When the video preview is in operation>



Indicates the video mode is set to on, the video is playing, on pause, fast forwarding, or rewinding.



Indicates the track information of the video (the video only, the audio only, and the video and audio).



Indicates the video is played in normal/enlarged screen size.



Displays the current volume level. The 0 is mute and 9 is the maximum.

<When the MP3 player is in operation>



Displays the current volume level. The 0 is mute and 9 is the maximum.



Indicates the repeat mode is Repeat all, Repeat one.



Indicates the Equalizer mode is Rock, Jazz, Pop

External-display



Indicates the battery level.



Indicates the battery charging status (charging, stop).



Indicates that there is a new SMS in your phone.



Indicates that there is a new SMS on the network.



Indicates that the SIM memory is full.



Indicates that the Inbox in your phone is full.



Indicates that there are mail and MMS on the server.



Indicates that there is a new mail/MMS in your phone.

This icon blinks while a mail/MMS is being downloaded.



Indicates that the memory for a mail/MMS is full



Indicates that a new voice mail message is on the network (No ALS or ALS Line 1/ALS Line 1 and 2/ALS Line 2).



Indicates Bluetooth On, Bluetooth is in operation.



Indicates that the phone is in the Meeting/Pocket mode.

No icon appears for the Normal mode.



 
Indicates the signal strength level.



Appears when you are outside the service area.



Date



Local time

<When the MP3 player is in operation>



Indicates the battery level.



Indicates the battery charging status (charging, stop).



Indicates that the MP3 player is playing.



Indicates that the repeat mode is Repeat all, Repeat one.

Overview of menu function

Standby screen



→ MENU →

Main menu screen



← CLR ←

The Main menu has a set of icons for its top levels of options which can be selected either using a combination of the 4-way navigation key (▲▼◀▶) and ○ (menu selection), or just the keypad (shortcuts selection).

☞ The title of the selected option will be displayed in the Help area.

☞ SIM toolkit icon is displayed only when your SIM card supports this function.

☞ With the Main menu screen displayed, 0 to display your own number.

Key	Main menu	Second level menu
1	Settings	Phone Phone modes Main-display External-display Power saving Calls Security Network Reset settings
2	Message	Inbox Drafts Outbox Sent Folder1 Folder2 CB

Key	Main menu	Second level menu
3	i-mode	i-mode Settings
4	Phonebook	Lists Information # Call options
5	Camera	Camera Video recorder
6	My data	Videos Sounds Pictures MP3

Key	Main menu	Second level menu
7	Java™	Programs Prog backlight
8	Accessory	MP3 player Calculator Clock alarm Scheduler ToDo list Notepad Voice memo Currency Bluetooth Synchronization
9	SIM toolkit	

<i>Getting Started</i>	<i>1</i>
<i>Basic Calls & Phone Use</i>	<i>6</i>
<i>Text Entry</i>	<i>16</i>
<i>Desktop icons</i>	<i>18</i>
<i>Settings (M1)</i>	<i>20</i>
<i>Message (M2)</i>	<i>27</i>
<i>i-mode (M3)</i>	<i>34</i>
<i>Phonebook (M4)</i>	<i>46</i>
<i>Camera (M5)</i>	<i>54</i>
<i>My data (M6)</i>	<i>60</i>
<i>Java™ (M7)</i>	<i>66</i>
<i>Accessory (M8)</i>	<i>68</i>
<i>Bluetooth (M89)</i>	<i>76</i>
<i>Index</i>	<i>81</i>

Emergency Services and Safety Precautions **i**

Before You Start **iv**

User's manual conventions	iv
Display information	v
Parts and functions	vi
Displayed icons.....	viii
Overview of menu function	x

Getting Started **1**

Preparing the phone	1
Standby and talk times	4
Checking the battery	4
Low battery alarm	4
Other battery alarms	5
Start-up	5

Basic Calls & Phone Use **6**

Making basic calls.....	6
Ending a call	6
Receiving an incoming call	7
Unsuccessful calls	7
Emergency calls	8
Last number redial	8
One-touch dial	8
Fast dialling.....	8
Displaying your own phone number (M0/M416).....	8
Voice recall	9
Options menu (during a call).....	9
Putting a call on hold	9
Mute.....	10
Call transfer	10
Multi-party calls.....	10

Recording a call	11
Scratchpad number	11
Call options (M43).....	11
Call settings (M16).....	13
International dialling codes	14
Roaming	15

Text Entry **16**

Mode change	16
T9® English text input	16
Normal text input.....	17
Numeric input.....	17
Key allocations.....	17

Desktop icons **18**

Settings (M1) **20**

Phone (M11).....	20
Phone modes (M12)	21
Main-display (M13)	23
External-display (M14).....	23
Power saving (M15).....	24
Calls (M16)	24
Security (M17)	24
Network (M18)	26
Reset settings (M19).....	26

Message (M2) **27**

Message overview	27
Reading a message (M21)	28
Creating a message.....	31
Cell broadcast (M27)	33

i-mode (M3)	34	Accessory (M8)	68
i-mode operation guide	34	MP3 player (M81)	68
i-mode screen	38	Calculator (M82)	69
i-mode menu screen	39	Clock alarm (M83)	69
iMenu screen	41	Scheduler (M84)	70
Mail screen	41	ToDo list (M85)	71
i-mode glossary	45	Notepad (M86)	73
Phonebook (M4)	46	Voice memo (M87)	74
Phonebook types	46	Currency (M88)	74
Accessing your phonebook (M4)	47	Bluetooth (M89)	75
Phonebook list Options menu	48	Synchronization (M80)	75
Personal data Options menu	52	Bluetooth (M89)	76
Voice mail (M417)	53	Pairing a Bluetooth device and your phone	77
Camera (M5)	54	Using Bluetooth for voice/modem	77
Notes on using the camera	54	Bluetooth Object Push	78
Taking a picture (M51)	55	Bluetooth File Transfer	79
Recording a video (M52)	57	Index	81
My data (M6)	60		
Videos (M61)	60		
Sounds (M62)	60		
Pictures (M63)	61		
MP3 (M64)	63		
File selector Options menu	63		
Java™ (M7)	66		
Programs (M71)	66		
Prog backlight (M72)	67		

Memo

Getting Started

Preparing the phone

Before trying to use your phone, make sure that a valid Subscriber Identity Module (SIM) card is inserted and the battery is charged.

SIM card


Before using your phone, you must sign-up with one of the digital network service providers. In addition to your subscription details you will receive a personal SIM (Subscriber Identity Module) card which is inserted into your phone.


If the SIM card is removed, the phone becomes unusable until a valid SIM card is fitted. It is possible to transfer your SIM card to another compatible phone and resume your network subscription. The screen on your phone will display appropriate messages if no SIM card is fitted.

-  **If the phone, or the SIM card, is lost or stolen then you should contact your service provider immediately in order to bar it from use.**
-  *The phone supports a number of languages and the keyboard symbols have been chosen for world-wide operation.*
-  *The digital technology of your phone helps to ensure that your conversations are kept secure.*
-  *The SIM card contains personal data such as your electronic phonebook, messages (see "Message (M2)" on page 27) and also details of the network services you have subscribed to. The phone will not work (except for emergency calls on some networks) unless a valid SIM card is fitted.*
-  **Be sure to turn the phone off before inserting and removing a SIM card. Otherwise damage to the SIM card can occur.**
-  **If you remove the SIM card while the phone is turned on, the phone will restart itself.**

Inserting a SIM card

-  **Be sure to turn the phone off before inserting a SIM card.**
 -  Pick up the bump and lift the SIM card compartment cover gently in the direction of the arrow (STEP 1).
-  **Be careful not to pull out the cover too much. This may cause the SIM card compartment cover to break apart.**
-  **Make sure to handle the black rubber part that connects the phone and the SIM card compartment cover gently.**
 -  Insert the SIM card into the narrow slot in the SIM card compartment in the direction of the arrow (STEP 2) until it is locked in place (STEP 3). Make sure the metal part of the SIM card is facing front when viewed from the keypad (see the figure on the right).
-  **Be careful not to damage electric parts of the SIM card compartment when inserting a SIM card.**
-  **If the SIM card is not fully inserted, damage to the SIM card can occur.**
 -  Slide the cover in the direction of the arrows (STEP 4) until the two tabs fit properly inside the cover (STEP 5).
 -  Close the cover in the direction of the arrows until the four tabs are locked in the cavities and click (STEP 5 and STEP 6).
-  *If the SIM card is already fitted, see "Start-up" on page 5.*

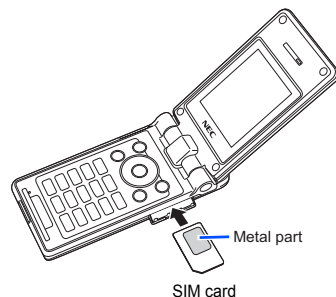

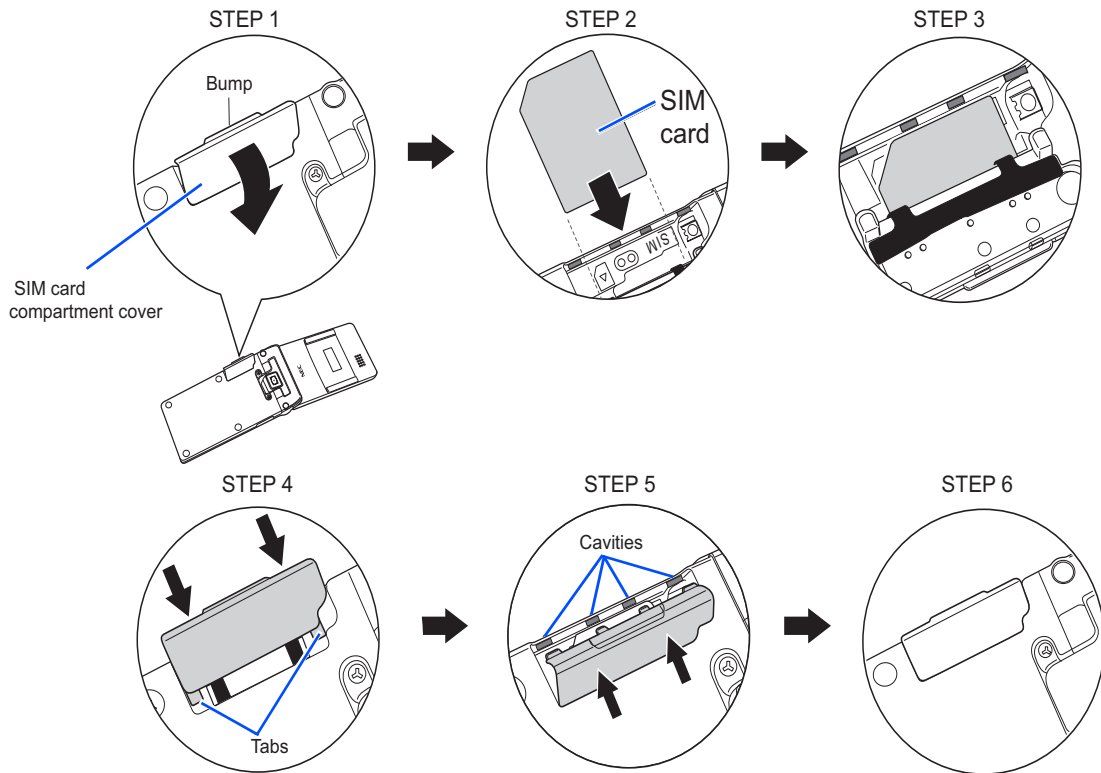


Removing a SIM card




Be sure to turn the phone off before removing a SIM card.


- Pick up the bump and lift the SIM card compartment cover gently in the direction of the arrow (STEP 1).
- 📖 *Be careful not to pull out the cover too much. This may cause the SIM card compartment cover to break apart.*
- Slide the SIM card with your finger for a few millimeters and pull the SIM card out of the slot gently in the direction of the arrow (see the figure on the right).
- 📖 *Be careful not to damage electric parts of the SIM card compartment when removing a SIM card.*
- Slide the cover in the direction of the arrows (STEP 4) until the two tabs fit properly inside the cover (STEP 5).
- Close the cover in the direction of the arrows until the four tabs are locked in the cavities and click (STEP 5 and STEP 6).

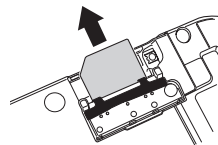

Charging the battery

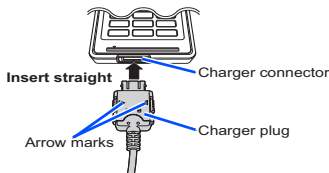

Make sure to hold the charger plug with the arrow marks facing up and slowly insert it straight.

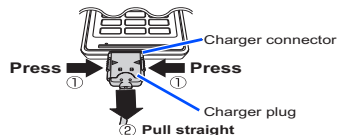

Make sure to press both buttons and gently pull the charger plug straight.

Before trying to use your phone, connect the NEC battery charger (AC adapter) supplied with your phone to a suitable mains power socket.

- With the arrow marks of the charger plug facing up, slowly insert the charger plug straight into the charger connector.



Make sure to insert the charger plug with the arrow marks facing up. Otherwise, damage to the charger connector can occur.

- 📖 *If your phone is turned on and charging starts, the battery charging icon will be displayed. LED will turn on in red while charging. When charging is complete, the LED will turn off.*
- 📖 *If you are recommended to switch off the phone while charging. If you need to receive calls, your phone can be switched on and left in standby while being charged, although the total time taken to charge is then increased.*
- After the charging is complete, press the buttons of the charger plug as indicated by the arrow marks on the charger plug (①) and gently pull straight out of the charger connector (②).
- 📖 *Make sure to press both buttons when disconnecting the charger plug from the charger connector. If you pull the charger plug forcibly without pressing the buttons, damage to the charger connector can occur.*

The icons show the charging status of battery.



Battery charging



Battery charging stopped due to overheat



Using any AC adapter, vehicle power adapter (option) or dual tap (option) not specified by NEC for use with this phone can be dangerous and may invalidate any warranty and approval given to the cellphone. Do not leave the charger connected to the mains supply when it is not in use.



Do not try to charge the battery if the ambient temperature is below 5°C (41°F) or above 35°C (95°F).



If the phone does not respond, please wait for a few minutes. The charging will then start.



If you use the phone while charging, handle the phone carefully since the cable or adapter is connected.



If you make/receive a call while charging, the charging may temporarily be interrupted.



Charging takes approximately 3 hours with your phone turned off.



Even if the phone remains connected to the charger, battery residual capacity may decrease when the phone is used for video recording, playing or other battery consuming operation.



IMPORTANT BATTERY CHARGING INFORMATION

Charging a very low battery

The battery's charge continues to drop after the low battery warning is displayed. In extreme cases where the battery is left uncharged for some considerable time after this warning, a trickle charge is used to slowly top-up the battery to the safe level at which the fast charging can begin. The phone can be in trickle charge for a few minutes before the fast charging starts.

Standby and talk times

Your phone works closely with the network you are using to provide the services you need, and the standby and talk times achieved will depend on how you use the phone and choices made by the network operator.

In particular, factors such as your location within the network, the frequency at which this location is updated, the type of SIM card you have, your reception of area messages or cell broadcast messages and the use of full rate or enhanced full rate speech, will affect both standby and talk times.

Checking the battery

 Check icon at the top of the standby screen.

The number of blocks on the icon shows the battery charge level.



Full battery power



Partial battery power



Low battery power



Battery empty

Low battery alarm

When the battery voltage falls below the working level, a low battery warning is displayed on the screen accompanied by LED illumination and a short tone along with an empty battery icon. The phone will automatically power down shortly afterwards.



Please charge the battery as much as possible when the battery is very low.

Other battery alarms

Your phone may display warnings when the battery temperature is too high, or the voltage of the battery or the charger is over the appropriate level. Follow the instruction given by these warnings immediately.

Start-up

Switching the phone on

- Hold down  for about a second to switch on. The screen will display the selected greeting (if set, see page 23) and the phone is then in standby.



You may need to charge the battery before using your phone.



When your phone is turned on, the specified ringer may sound.



If your phone is accidentally turned off while downloading or deleting Java™ application, it will take longer than usual to start up the phone the next time you turn on the power.

Switching the phone off

- Hold down  until the display shows the switch off message.

PIN code

The SIM card issued by your service provider has a security feature called PIN code protection. The Personal Identification Number (PIN) is a number put on to the card by your service provider, and is 4 to 8 digits long. Some service providers supply SIM cards which will cause your phone to prompt for a PIN code when it is turned on. If this is the case, enter your code with the phone's keypad. If you insert a SIM card other than your own, information such as call logs may be lost (see "Security (M17)" on page 24 for details).

Basic Calls & Phone Use

Making basic calls

You make a simple call in the same way as you would with a normal phone, except that you need to press  after entering the area Subscriber Trunk Dialling (STD) code and the phone number. To make international calls, you must first enter the international dialling code (see page 14).

-  Use the full STD area code even if you are calling to a person in the same town. If the numbers are too long to be displayed within one line, after pressing , excess part is deleted and '...' is added at its end.
-  The main-display shows the icon of strength of the radio signal that links your phone to the network. The maximum signal strength is shown by 4 shaded blocks and the minimum signal strength by 1 block.

Starting a call

-  Key in the phone number. Check the number on the display →  or **SK1** to send the input number to start the call
-  Before the other party answers the call, you can end the call by pressing  briefly, pressing **SK2** or closing your phone. When you use the headset, you can also end the call by pressing and holding the button on it.
-  When connecting a wired headset and Bluetooth headset at the same time, the wired headset will work partially (only its button will work).

When the call is sent, the screen displays the number called, the name stored in the phonebook and a connection graphic or a Calling Line Identification (CLI) picture that has been allocated to the number called (see page 51).

Correcting mistakes

Use the  and  to move the cursor and then **CLR** to clear individual digits, or hold down **CLR** to completely clear a phone number.

Ending a call

-  While talking, **SK2** or  briefly, or close your phone. The phone returns to the standby screen.
-  If  is held down, your phone will turn off.
-  When you use the headset, you can also end a call by pressing and holding the button on it.
-  When connecting a wired headset and Bluetooth headset at the same time, the wired headset will work partially (only its button will work).
-  You cannot end a call by closing your phone when the headset is connected.

Receiving an incoming call

When someone calls your number, the ringer will play (if set - see page 22), the LED glows in the specified colour, and the phone number of the caller may be displayed if the calling line identification facility is available and the caller has activated the feature. If the caller's phone number has been related and stored in your phonebook with a name and a CLI picture (see page 51), that name and picture will be displayed. If the caller has withheld their identity, the screen will give a message that the caller's number is being withheld. If the origin of the call cannot be determined, no information is displayed on the screen.

-  You also have options for holding and forwarding calls. These options depend on your network and your subscription arrangements.
-  When connecting a wired headset and Bluetooth headset at the same time, the wired headset will work partially (only its button will work).

Accepting an incoming call

-  While receiving an incoming call,  or **SK1**
-  When you use the headset, you can also accept an incoming call by pressing the button on it.
-  When Auto answer function (see page 23) is set to on and a headset is connected to the phone, the incoming call is automatically accepted after several rings.
-  You can accept an incoming call by opening your phone, when Fold answer function (see page 20) is set to on.
-  You can set your phone to answer a call when any key is pressed (see "Any key answer" on page 20).

Rejecting an incoming call

-  While receiving an incoming call,  or **SK2** briefly or close your phone.
-  When you use the headset, you can also reject an incoming call by pressing and holding the button on it.
-  You cannot reject a call by closing your phone when the headset is connected.

If your phone receives a call and you do not answer it, the main-display will display a desktop icon of the phone number (or the name if stored) of the caller (if available). If your phone is closed, the external-display will display a missed call message. This information is stored in the missed calls list. Up to 20 missed calls are stored in this list.

-  If you are making a call, the phone gives priority to receiving a call unless you have already pressed .
-  See also: "Call diversion (M161)" on page 13 and "Call waiting and holding (M162)" on page 14.
-  See also: "Call options (M43)" on page 11.

Unsuccessful calls

If dialled call is not successfully connected, the display will give an appropriate message.

If your phone has the auto redial function activated, the number will be automatically called again after a short delay (see page 14).

Emergency calls

The standard emergency number of 112 can be used.

- ☛ Key in **1 1 2** →  or **SK1** to connect the call to the local emergency services.

📖 On some networks, emergency calls can be made using the 112 number without a SIM card inserted.

Last number redial

You can redial the last number you called.

- ☛ Ensure that the standby screen is displayed and no phone number is shown →  twice to dial the last number you called.

🔔 See also: "Call options (M43)" on page 11.

One-touch dial

One-touch dial for the phonebook (SIM) is available by pressing and holding the number keys between 2 and 9.

📖 A number for the One-touch dial corresponds to the location number in the phonebook (SIM).

📖 One-touch dial is available only for the phone numbers with the location number 2 to 9 stored in the phonebook (SIM).

Fast dialling

You can make a call to the phone number in the phonebook (Phone/SIM) with just a few press of button.

To fast-dial the phone number in the phonebook (SIM), use the following procedure:

- ☛ From the standby screen, key in the Location number of a personal data in the phonebook (SIM) → **#** → The corresponding personal data is displayed.
- ☛  to dial the phone number.

To fast-dial the phone number in the phonebook (Phone), use the following procedure:

- ☛ From the standby screen, key in the Location number of a personal data in the phonebook (Phone) → ***** → The corresponding personal data is displayed.
- ☛ Use the **▶** and **◀** keys to choose the phone number (if there are more than one), then  to dial the phone number.

Displaying your own phone number (M0/M416)

- ☛  **(MENU)** **0** or **(MENU)** **4 1 6**

Voice recall

You can store up to 10 voice recall recordings which can be allocated to a personal data stored in the phonebook (Phone). To store the voice recall sound, see "Voice recall functions" on page 51. To use the voice recall function, use the following procedure:

- Press and hold ▼
- When you use the headset, you can also activate the voice recall function by pressing and holding the button on it from the standby screen.
- Within 4 seconds, say the word or words you have recorded to identify the record you wish to recall. If the word or words were recognized, the first phone number of the personal data stored in the phonebook (Phone) will be called automatically.

Options menu (during a call)

- During a call, (MENU) to display the options menu

No.	Options menu (during a call)	
1	Main menu	Displays the Main menu screen. See "Overview of menu function" on page x for details.
2	Hold/Retrieve	Puts the call(s) on hold or retrieves the call(s).
3	Mute/Unmute	Mutes or unmutes your voice to all active calls.
4	Transfer call	Enables to transfer the call and connect other parties. After transferring the call, your call will be dropped.
5	Add to conference	Merges calls and makes a multi-party call.
6	Private call	Makes a private call to the highlighted party within the multi-party call.
7	Record call	Records the call while talking.
8	Disconnect party	Disconnects the highlighted party.
9	Switch call to Bluetooth/ Switch call to phone	Switches the audio path state of the call. You can also switch call to Bluetooth or phone by pressing and holding #. This option is available only when the Bluetooth device is connected to the phone.
0	Bluetooth On	Activates the Bluetooth device.

- Depending on the conditions, some options may be displayed in gray and not be available.

Putting a call on hold

- To put the received or dialled call on hold, **SK1** or (MENU) **2**. To retrieve the call, **SK1** or (MENU) **2** again.

Mute

You can mute the sound from the mouthpiece during a call. When your call is muted, the other party cannot hear any sound from your phone, but you can still hear the sound from the other party.

☞ To mute the sound during a call, **(MENU) 3**. To retrieve the sound, **(MENU) 3** again.

📖 *The mute function is automatically released after the call ends.*

📖 *The mute function is not available while using the headset.*

Call transfer

When you have an active call and a held call, you can transfer the call and connect the two parties, then you can drop from the line while leaving those two calls active.

☞ To transfer the call, **(MENU) 4**.

📖 *After dropping from the call with the other two parties, if you have a call waiting, you can proceed the call with it.*

👉 **Call transfer facility is SIM dependent.**

Multi-party calls

If your SIM card is multi-party enabled, you can make a conference call to more than one caller. To create the multi-party calls, at least 3 parties, including the host, are needed.

Receiving the second call

☞ **SK1** or 📞 to accept the second call → **SK2** or **(MENU) 5** to merge both calls to initiate a multi-party call.

📖 *When you accept the second call, the first call will be put on hold.*

Making the second call

☞ **SK1** to put the first call on hold → Key in the phone number → **SK1** or 📞 to make the second call → After the second participant answers, **SK2** or **(MENU) 5** to merge both calls to initiate a multi-party call.

Putting the multi-party calls on hold

☞ **SK1** or **(MENU) 2** to put all calls on hold → To retrieve the call, **SK1** or **(MENU) 2** again.

📖 *You can put the multi-party calls on hold only when you are a host of the multi-party calls.*

Making a private call

While on the multi-party call, you can make a private call to a specific party.

☞ To make a private call, highlight the desired party you want to make a private call to → **(MENU) 6**

- ☑ To end a private call and return to the normal multi-party call →  **5**
-  While you are on a private call, other parties can continue with their conversation.
-  You can make a private call only when you are a host of the multi-party calls.

Ending the multi-party calls

- ☑ To end the multi-party calls,  or **SK2**.
 - ☑ To disconnect a specific party on a multi-party call, highlight the party you wish to disconnect →  **8**
 -  You can disconnect a specific party on the multi-party calls only when you are a host of the multi-party calls.
-  **Multi-party call facilities are network dependent.**

Recording a call

You can record the conversation during the call.

- ☑ During a call, press and hold ▼ or  **7** to display the Voice memo screen → **SK1** to start the recording → **SK1** to pause and **SK2** to stop the recording.
-  To play the recording, see “Recording/playing voice memo or setting speaker” on page 74.

Scratchpad number

Your phone has a scratchpad facility that enables you to take down a phone number during a call and then make a call to it when you have finished. This scratchpad number can be stored in memory for future use.

Noting & calling a scratchpad number

- ☑ During a call, key in the number to be placed in the scratchpad. It will be shown on your phone's screen →  when the call is finished. The number will still be displayed →  to dial the displayed number.

Call options (M43)

From Call options, you can display the list of missed, received and dialled calls, the duration of the last call made and all calls, charge information and the redial blacklist.

- ☑  **4 3** to display the Call options screen.

No.	Call options	
1	Missed calls	Displays the list of missed calls. You can also access this function by pressing  from the standby screen.
2	Received calls	Displays the list of received calls. You can also access this function by pressing  from the standby screen.
3	Dialled calls	Displays the list of dialled calls. You can also access this function by pressing  from the standby screen.

No.	Call options	
4	Last call duration	Displays the duration of the last call made on your phone. ☑ SK1 to reset the display to zero.
5	Total calls duration	Displays the duration of the total calls made on your phone. ☑ SK1 → 1 to reset the duration of the total dialled calls, 2 to reset the duration of the total received calls, or 3 to reset the duration of all calls.
6	Charge info	Displays the charge information (Advice of Charge - AoC). ☑ The AoC facility is SIM card and network dependent. ☑ To reset the display to zero, set the maximum charges or edit the unit price, you may be prompted to enter the PIN2 code.
		1 Total charge Displays the total charge. ☑ SK1 to reset the display to zero.
		2 Maximum charge Displays the maximum charge. ☑ Key in the maximum number of units allowed → SK1
		3 Unit price Displays the unit price. ☑ Highlight the whole number (integer), the decimal number or the currency field → Key in the required value for the whole number and decimal number fields. For the currency field, key in the currency type using a maximum of three characters → SK1
7	Redial blacklist	Displays the numbers in the blacklist. ☑ If dialled call is not successfully connected (e.g. number busy), the auto redial facility will be offered (see page 14). If you have set auto redial and the call still fails 10 times, the number called will be added to the blacklist.

☑ Depending on the conditions, some options may be displayed in gray and not be available.

Display missed/received/dialled calls Options menu (M431M/M432M/M433M)

- ☑ ► or (MENU) **4 3 1** for missed calls, ◀ or (MENU) **4 3 2** for received calls, or ☎ or (MENU) **4 3 3** for dialled calls.
☑ Highlight a number in the list → (MENU)

No.	Missed calls/Received calls/Dialled calls Options menu	
1	Call	Calls the current number.
2	Create message	Creates a new message to the highlighted phone number.

No.	Missed calls/Received calls/Dialled calls Options menu
3	Add to phonebook Adds the current number to the phonebook.  1 to add it as a new personal data, 2 to add it to an existing personal data → Press the appropriate number for the storage destination → Press the appropriate number for the phonebook data field to copy the current number to.
4	Delete one Deletes the current number.
5	Delete all Deletes all the numbers in the list.
6	Info Displays information on the current number.
7	Add desktop icon Creates a desktop icon of the selected number.
8	Items/Page Selects either to display 4 or 8 phone numbers in one screen.

 Depending on the conditions, some options may be displayed in gray and not be available.

Call settings (M16)

From the Calls screen, you can change various call settings: the call diversion, call waiting and holding, auto redial, and line ID.

Call diversion (M161)

Setting Call diversion

  **1 6 1** → ◀ or ▶ to select the type of call you wish to divert from Speech, Data or Fax.

 There will be a delay while your phone checks its divert status with your network.

 Highlight one of the conditions → When the phone number field of a divert condition is highlighted, either enter the phone number to divert to, or delete any existing phone number.

 If you have made any mistake, highlight the appropriate field → **SK1** to clear any mistakes.

 If the settings are correct, .

 There will be a short delay while the network sends the divert status of your phone.

 There may be an additional charge for this service depending on your network.

 There may be unavailable settings depending on your network.

Call diversion edit options menu

 Highlight the required edit field → 

No.	Call diversion edit options menu
1	Copy Copies the number in the edit field.
2	Paste Pastes the previously copied number.
3	Disable all Disables the numbers from all the fields.

No.	Call diversion edit options menu (Continued)	
4	Phonebook	Displays the phonebook to insert a number in the edit field.
5	Add to phonebook	Adds the number to the phonebook as a new personal data or saves the number in an existing personal data.

 Depending on the conditions, some options may be displayed in gray and not be available.

Call waiting and holding (M162)

This facility informs you that another call is being made to your phone while an existing call is in progress.

Setting up call waiting

  **1 6 2** → **1 1** to activate, **1 2** to deactivate the call waiting, or **2** to check the status of call waiting.

Using call waiting

-  If you are on a call and another comes in, you will be alerted by a beep in the earpiece → **SK1** to accept the incoming call.
 -  To switch the calls, **SK1**.
 -  To merge the calls, **SK2** (see “Multi-party calls” on page 10).
 -  To end the current call, .
 -  To retrieve the held call **SK1**.

Auto redial (M163)

With the auto redial facility, your phone will redial a number up to 10 times if the first attempt fails. A tone will be heard at each redial attempt. Your phone cannot connect a call if the other party is busy or if there are network problems. Pressing **SK2** during a redial attempt will abort it.

  **1 6 3** → **1** to activate or **2** to deactivate the auto redial facility.

 If the tenth attempt still fails, the number will be added to the blacklist (See “Redial blacklist” on page 12.).

Line ID (M164)

 The line ID (identification) facility is network dependent.

The line ID facility enables you to choose whether or not to send your own phone number when you make a call and also whether or not to display a caller's phone number when you receive a call.

-   **1 6 4** to display the Line ID screen with a ✓ over an activated line and a ✗ over a deactivated line.
-  To set the status of each line (see the table on the right), highlight a line (the line will flash when selected).
-  **SK1** to set the line identification on or off →  to save the current settings.

Line type	Setting
Outgoing	Send own # Show connected #
Incoming	Show Incoming # Return own #

International dialling codes

When you make an international call from any country, you must start by dialling a special international access code. Your phone has the facility to prefix a + symbol to the numbers, so that you need not enter the access code for the country that you are calling from.

Entering international dialling codes

- Hold down **0**. The 0 character displayed will change to a + character → Key in the country code, area code, and phone number that you wish to call.
The UK country code is always 44, no matter what country you are dialling from. For example, a typical UK number of 0131 1234567 is entered as:

International access	country code	area code	phone number
+	44	131	1234567

Roaming



You will be charged for calls forwarded to you while roaming.

The roaming facility enables you to use your phone in many parts of the world and pay all charges through your normal service provider. Your network operator usually has agreements with named networks in other countries so that automatic roaming can take place with these named networks. The phone also allows you to set network preferences of your own.

When dialling, you will need to add the international access codes if required. So, storing all numbers with the codes (such as +44 for UK) is helpful (see "Entering international dialling codes").

Before leaving your home country, you should select any preferences such as bar calls or call diversion.

Setting Automatic or Manual network selection (M181)

- (MENU) 181** → **1** to select the automatic mode or **2** to select the manual mode.



Before you manually select a network, ensure it is covered under the agreement you have with your service provider.

New search (M182)

- (MENU) 182** to search the available networks → Highlight the desired network → to connect to it.

Viewing/editing network list (M183)



Before editing your network list, please consult with your service provider.

- (MENU) 183** to read the network list in the SIM memory → Highlight the required network → **(MENU)**.

No.	SIM list Options menu	
1	Add	Adds a new network to the list.
2	Move	Moves the highlighted network within the list. → Use ▲ and ▼ to move the network → SK1 .
3	Remove	Deletes the highlighted network.

Depending on the conditions, some options may be displayed in gray and not be available.

Selecting the frequency band (M184)

You have to select the frequency band to suit the location.

- (MENU) 184** → Select the required frequency band.

Frequency bands must be adjusted to suit the location when roaming (Europe, US, etc.), for the phone to work properly.

Text Entry

This section describes how you enter text.

Mode change

- With a text entry screen displayed, **SK1** to change the text entry mode: T9® English text, Normal text (ABC), Numeric input.

T9® English text input

Your phone incorporates T9® Text Input, enabling fast, easy and intuitive text input. For each letter to be keyed in, you only need to press the alphanumeric key once. The screen will display the word you may require based on the internal English dictionary of your phone.

- With a text entry screen displayed, **SK1** until the entry mode is T9® English input.

i) For example, to enter "Good":

- 4 6 6 3**, and then **0** to confirm the word.

ii) To enter "Peter is good":

- *** to shift to upper case (for one letter). You will see a green arrow in the Help area.
- 7 3 8 3 7** to display "Peter", and then **0** to confirm.
- 4 7** to display "is", and then **0** to confirm.
- 4 6 6 3** to display "good", and then **0** to confirm and the sentence is completed.

Key	Function
0	Confirms a word and inserts a space.
1	Inserts a period or a single quote as in "Let's", "we're", "it's", etc.
SK1(List)	Displays the list of other matching words.
SK1(Spell?)	Activates the spell mode which temporarily deactivates T9® for you to spell the word in Normal text input. The spell mode ends when you key in 0 to enter a space, or SK1(T9) .
SK2(Dismiss)	Cancels the T9® matching word list.
SK2(Next) or #	Displays the next candidate.
◀ or ▶	Places the cursor.
0 to 9 (press and hold)	Inserts the number.
CLR	Deletes any character.
*	Toggles between lower case, shift (upper case for one letter) and caps lock (permanent upper case).
* (press and hold)	Press and hold to activate the highlight mode (see "Highlight mode" on page 33).
#	Activates symbol mode when no word is highlighted.

Normal text input

- With a text entry screen displayed, **SK1** until the entry mode is Normal text (ABC) input.
- Use alphanumeric keys to enter letters. For example, to enter "e," press **3** twice; to enter "f," press **3** three times. For other functions, see the table below.

When you are in the Normal text (ABC) input, any word entered that is not in the T9® dictionary will be added automatically.

Key	Function
*	Toggles between lower case, shift (upper case for one letter) and caps lock (permanent upper case).
* (press and hold)	Press and hold to activate the highlight mode (see "Highlight mode" on page 33).
0	Inserts a space.
0 to 9 (press and hold)	Inserts the number.
CLR	Deletes any character.
◀ or ▶	Places the cursor.
#	Activates symbol mode.

- If you have made a mistake, use ▲ ▼ ◀ ▶ to place the cursor to the left or the right of the incorrect character (depending on the Clear mode setting, see page 33 for details) and then **CLR**.
- When entering normal (ABC) text, and the character you require is displayed, use ▶ to move to the next character position (if you wait for more than 1 second, the cursor will move one character to the right automatically).

Numeric input

- With a text entry screen displayed, **SK1** until the entry mode is Numeric input.
- You can also press and hold the number key to insert the number in T9®/Normal text input mode.
- Use alphanumeric keys to enter numbers.

Key allocations

Whenever you need to enter text (for messages, storing names with numbers, etc.), successive presses of an alphanumeric key will display different characters. Pressing * in T9® English text input or Normal text (ABC) input toggles between lower case, shift (upper case for one letter) and caps lock (permanent upper case). When a text entry screen is displayed, pressing **SK1** enables you to select Normal text input (ABC), T9® Text input (T9) or Numeric input (123).

Depending on the types of text entry screens, not all types of text entry modes are available.

Symbol mode

In the symbol mode, pressing each key will input a symbol according to its position on the Symbols screen. By pressing or holding # in a text entry mode, the Symbols screen will be displayed. Use ▲ and ▼ to select the row, and then press the appropriate number on the column of the required symbol.

Desktop icons

Desktop icons are shortcuts to functions or items. You can activate a desktop icon on the standby screen (desktop) instead of following the menu and pressing the shortcut numbers.

The desktop icons are displayed in two rows on the standby screen. See "Display information" on page v for the actual location of the desktop icon area.

There are two types of desktop icons: the automatically displayed and the manually created.

Automatically displayed desktop icons

The following automatically displayed icons are displayed on the upper row of the desktop icon area:

Icon name	Image	Description
Missed call		Displayed when there is a new entry in the Missed calls list.
Missed message		Displayed when there is a new message you have not acknowledged.
Missed Mail		Displayed when there is a new Mail you have not acknowledged.

 You can delete all the automatically displayed icons by pressing and holding **CLR** on the standby screen.

 If you turn the phone off, all the automatically displayed desktop icons are deleted.

Manually created desktop icons

The following manually created icons are displayed on the lower row of the desktop icon area

Icon name	Image	Description
Phone number		Displays a dialer screen with the registered phone number displayed.
Message		Creates a new message to the registered phone number or Email address.
URL		Activates the browser and accesses the registered URL.
Picture		Displays the image file.
Note		Displays the note.
Camera		Displays the camera view finder screen.
Video		Displays the video view finder screen.
MP3 player		Displays the MP3 player screen.
Calculator		Displays the Calculator screen.
Clock alarm		Displays the Set alarm screen.
Scheduler		Displays the Monthly/Weekly calendar screen.
ToDo list		Displays the ToDo list screen.

Icon name	Image	Description
Notepad		Displays the Add new screen for Notepad.
Voice memo recorder		Displays the New record screen for Voice memo.
Currency		Displays the Currency screen.
Bluetooth Voice/Modem		Displays the Bluetooth screen.
Bluetooth data exchange		Displays the Waiting for data screen to receive data from another Bluetooth device.

Creating a desktop icon manually

- Highlight the required function (Camera/Video/MP3 player/Calculator/Clock alarm/Scheduler/ToDo list/Notepad/Voice memo/Currency/Bluetooth) or display the item (image file/note file/phone number/Email address/URL).
 - For functions, **SK1**.
 - For items, (MENU) to display the Options menu and select Add desktop icon (for an image/note file, this menu is under Use item).
 - 📖 For Camera/Video/MP3 player, you can also display the Options menu and select Add desktop icon (for Camera/Video, this menu is under Other settings).
- 📖 You can create up to 10 desktop icons.
- 📖 If you have more than 5 desktop icons, an arrow will be displayed to indicate that you can scroll for more icons.
- 📖 The phone number, Email address or URL desktop icon data will not be updated when the original data is modified. Delete the old desktop icon and create a new one in such a case.
- 📖 When you create a desktop icon of an image file or notepad file, the file will be automatically protected. The default title will be the file name. Even if this title is changed, the original file name will remain the same.
- 📖 Each manually created desktop icon has a title that you can edit.

Activating a desktop icon

- ○ → Highlight the required desktop icon → ○.
- 📖 If you do not press any key for three minutes after highlighting a desktop icon, the highlight is cancelled and the screen goes back to the normal standby screen.
- 📖 If you activate an automatically displayed desktop icon, it will be deleted automatically.

Desktop icon Options menu

- Highlight a desktop icon → (MENU)

No.	Desktop icon Options menu	
1	Edit title	Edits the title of the highlighted desktop icon.
2	Delete one	Deletes the highlighted desktop icon.
3	Delete all	Deletes all the manually created desktop icons.

Settings (M1)

Phone (M11)



No.	Phone		
1	Voice volume	Adjusts the sound volume output from the earpiece. Use ▲ ▼, Side keys or alphanumeric keys (0 to 9) to adjust the volume. You can also press the Side keys to display the volume control screen and to adjust the volume setting. During a call, you can press the Side keys to adjust the setting of the volume as required. When you change this setting while a headset is connected, the changed volume will be valid only when you have a headset connected. While using a Bluetooth headset, you cannot change the volume.	
2	Answer options	1	Any key answer On: Any key (except , SK2 , the Side keys) is valid to answer a call. Off: Only and SK1 are valid to answer a call.
		2	Ring silencer On: Pressing one of the Side keys stops the ring sound and the vibrator while receiving a call with the phone closed. This function cannot be used if the Side keys are locked.
		3	Fold answer On: You can answer an incoming call by opening your phone.
3	Side key	Disable: Side keys are locked while your phone is folded. You can also lock/unlock the Side keys by pressing and holding on the standby screen.	
4	ALS setup	The Alternate Line Service (ALS) facility is SIM card and network dependent. If your SIM card supports ALS, you can setup which line to use for Outgoing call or Voice mail.	

No.	Phone		
5	Clock	1	Show clock Sets to display the local time, both the local and remote times or no time on the main display.
		2	Set time Sets the time for the local or remote time.
		3	Set date Sets the date.
		4	Set date format Selects the date display format.
		5	Set time format Selects the time display format from 12 hour or 24 hour.
		6	Set timezone Sets the timezone. (A ✓ is placed on the currently selected timezone.) Highlight the required timezone → SK1 to save the change. If the highlighted timezone has Daylight Saving, a check box will be displayed at the bottom of the screen. to activate (✓)/deactivate the setting.
		7	Set start day Selects whether to start the week on Sunday or Monday. This setting affects the functions related to the day of the week, such as Scheduler. (See "Scheduler (M84)" on page 70 for details.)
6	Language	Selects the language the phone displays. When you have switched the language to be displayed, please wait until the new setting becomes active. Even if you change the language settings, some names, such as that of desktop icons and pre-set folders in My data, do not change.	
7	LED	Selects the Light Emitting Diode (LED) colour for incoming calls/SMS/Mail or during a call. If the personal setting or the Group setting for the LED colour is also set in the phonebook, it has priority over this LED setting. (See "Allocating a LED colour" on page 51 for details.)	
8	Earphone type	Selects the earphone type from Stereo or Monaural, depending on your earphones (headset).	

Phone modes (M12)

Your phone can be set to one of the following modes: Normal mode, Meeting mode or Pocket mode.



Any changes made to the settings while in a particular mode will be stored and used when that mode is selected again.

Selecting your phone mode

▲ or 1 2 → Press the appropriate key for the required mode.

You can also set the Meeting mode or return to the previous mode by pressing and holding ▲ on the standby screen.

Editing the mode settings

☞ ▲ or (MENU) 1 2 → Highlight the required mode → **SK1** → Press the appropriate number for the required setting in the following table.

☞ For any volume setting, use ▲ ▼, **Side** keys or alphanumeric keys (0 to 9).

☞ When you change any volume setting while a headset is connected, the changed volume will be valid only when you have a headset connected.

No.	Phone mode setting	
1	Ringer	Selects the Sound or Video for incoming calls. (See "Sounds (M62)" on page 60 or "Videos (M61)" on page 60 for details.) ☞ If the Video is set, it will sound and will be displayed regardless of the CLI picture setting for the personal data in Phonebook. (See "Allocating a picture as a CLI" on page 51.)
2	Ringer volume	Sets the sound volume for incoming calls. ☞ While receiving a call with your phone open, the ringer volume can also be adjusted by pressing the Side keys. ☞ While using a wired headset, you can set the volume for the wired headset. The volume settings for the wired headset and the speaker of the phone are saved individually. ☞ While using a Bluetooth headset and a Bluetooth hands-free kit, however, the volume setting for the speaker of the phone is used.
3	SMS tone	Selects the ringtone for incoming SMS messages. (See "Sounds (M62)" on page 60 for details.)
4	SMS tone volume	Sets the sound volume for incoming SMS messages.
5	Mail tone	Selects the ringtone for incoming Mail or MMS messages. (See "Sounds (M62)" on page 60 for details.)
6	Mail tone volume	Sets the sound volume for incoming Mail or MMS messages.
7	Key tone	Turns on/off the key tone.
8	Service tone	Turns on/off the service tone.
9	Alarm volume	Sets the sound volume for Clock alarm and Schedule alarm.
0	Vibrator	Turns on/off the vibrator function.
*	Earphone setting	Selects the sound output from Earphone & Speaker or Earphone. ☞ This option affects the wired headset.

No.	Phone mode setting	
#	Auto answer	Selects whether to answer an incoming call automatically.  To use the Auto answer function, connect the headset to your phone and set the earphone volume to 1 or higher. If the earphone volume is set to 0, you must turn the vibrator ON to use the Auto answer.  The Auto answer function only applies to the first incoming call. When you have another incoming call, you have to answer it manually.

Main-display (M13)

 (MENU) 13

No.	Main-display	
1	Greetings	Selects the greeting which is displayed on the main-display during phone start-up from No greeting, Text or Animation.  If you select Text greeting, SK1 to edit the greeting text. Key in a greeting text and .
2	Wallpaper	Selects a picture or video file to use as the background for the main-display.
3	Main menu style	Selects and resets the background and icons for the Main menu screen.
4	Colour style	Selects the phone's colour theme.

External-display (M14)

 (MENU) 14

No.	External-display	
1	Clock/Event display	Selects which items to display on the external-display from Clock & Event, Clock only, Event only or Off.  When you select Off, the other options menus are displayed in gray and not be available.  The display time of the external-display is approximately 15 seconds.
2	Demo scroll	Turns on/off the function to display a demonstration of scrolling logos before displaying the icons, clock and events.  The scroll on the external display may appear different depending on the status of the phone.
3	Clock selection	Selects the type of clock to be displayed on the external-display.  When selecting Digital 2 clock, no icon will be displayed in the standby screen of the external-display.
4	Incoming call No.	Turns on/off the function to display the incoming call number on the external-display.

Power saving (M15)



1 5

No.	Power saving	
1	Level setting	Selects the power saving level from Level 1 (minimum power save setting), Level 2 (moderate) or Level 3 (maximum). The main-display backlight will turn dim and then turn off after a given amount of time with no operation.
2	Function key LED	Selects whether to flash the LED of SK1 and SK2 when the main-display and its backlight are turned off.

Calls (M16)



1 6

For settings provided on the Calls screen, see “Call settings (M16)” on page 13.

Security (M17)



1 7

The security settings will help to protect your phone from improper and unauthorized use. You may be required to enter one of the five codes (shown below). When the phone prompts you for one of these codes, key in the appropriate number.

- PIN code (provided by your network service provider to protect your SIM card if it is stolen)
- PIN2 code (provided by your network service provider for charge information and Fixed dialling services protection)
- PUK code (personal unblocking key in case you forget PIN code)
- PUK2 code (personal unblocking key in case you forget PIN2 code)
- Security code



If you forget any of these codes, ALWAYS contact your service provider as they are the ONLY source for your codes.

PIN code

Your phone can be set up so that your PIN code must be entered at power up before the phone can be used at all. If the PIN code is not entered, not even incoming calls can be answered. Entering your PIN code incorrectly 3 times (not necessarily in the same session) will invalidate the correct PIN code. In such a case you will have to contact your service provider for a PUK code to unblock your SIM card.

Some SIM cards are set up so that PIN number entry cannot be turned off.

When SIM PIN lock is enabled, you can change the PIN code.

PIN2 code

Your phone supports advanced feature that may require a PIN2 code to be entered before they can be accessed or modified. Entering your PIN2 code incorrectly 3 times (not necessarily in the same session) will invalidate the correct PIN2 code. In this case you will have to contact your service provider for a PUK2 code.



The PIN2 code is SIM card related and may only be available from your service provider.

No.	Security							
1	Change PINs	Changes the PIN or PIN2 code (PIN activate setting must be turned on to change the PIN code).						
2	PIN activate	Turns on/off the PIN code entry required at starting up the phone.						
3	Change security code	Changes the security code which is used to set some of functions and unlock the Personal Information Manager (PIM) features. The default setting of the security code is "0000".						
4	Phone lock	Turns on/off the Phone lock function which will lock the phone: you can only make emergency calls or enter the security code. After entering the correct security code, you can use the phone normally. Upon power-up, you are prompted to enter the security code if the Phone lock was active when the phone was powered down.						
5	Bar calls	You can bar the following calls made/received on your phone: all outgoing (dialled) calls, international outgoing (dialled) calls, international outgoing (dialled) calls except to home, all incoming (received) calls or Incoming (received) calls when roaming. Bar calls facilities are network services and may require a password.						
		<table><tr><td>1</td><td>Change settings</td><td> Highlight the type of restriction and the call type, and then → to save changes. Key in your bar calls password to verify user identification to the network → SK1 to confirm and save changes to the network. The selected settings have red bars over their icons.</td></tr><tr><td>2</td><td>Set password</td><td>Changes the bar calls password.</td></tr></table>	1	Change settings	Highlight the type of restriction and the call type, and then → to save changes. Key in your bar calls password to verify user identification to the network → SK1 to confirm and save changes to the network. The selected settings have red bars over their icons.	2	Set password	Changes the bar calls password.
		1	Change settings	Highlight the type of restriction and the call type, and then → to save changes. Key in your bar calls password to verify user identification to the network → SK1 to confirm and save changes to the network. The selected settings have red bars over their icons.				
2	Set password	Changes the bar calls password.						
6	Fixed dialling	Turns on/off the fixed dialling which restricts the use of dialled number to only the Fixed Dialling Numbers (FDN). The FDN facility is network dependent. See also: "Fixed dialling numbers (FDN)" on page 47.						

Network (M18)



18

For settings provided on the Network screen, see "Roaming" on page 15.

Reset settings (M19)



19

This function will reset your phone to its factory settings.



By restoring the factory settings, any changes you have made to your phone EXCEPT the following will return to the factory settings (the following data/settings will not be reset):

- **Settings:** Set time for Local time, Set date, Language, all settings in Calls other than Auto redial, all Security settings other than Change security code, SIM list settings in Network.
- **Call options:** Information in Charge info.
- **Phonebook:** All Phonebook entries. The settings for Groups.
- **Accessory:** All Schedule, ToDo, Notepad and Voice memo entries. All the settings other than Clock alarm, Play list for MP3 player, View events for Scheduler, Sort for ToDo, and Timer setting and My phone settings for Bluetooth.
- **i-mode:** All Bookmarks, Saved pages, Go to webpage, and Mail settings. All the i-mode related settings.
- **Java™:** All the Java™ applications.
- **Message:** All the stored messages. The settings for SMS centre, Validity period for SMS and Language for Cell Broadcast.
- **My data:** All stored files.

Message (M2)

Message overview

Message services

Your phone supports the following messaging services:

- **Short Messaging Service (SMS)** allows you to send short messages (160 half-pitch characters max.) to one or more phone numbers. To send an SMS message, the destination phone number must be a mobile phone with an SMS service subscription. SMS service also supports Enhanced Messaging Service (EMS) for which the maximum length of the message you can send depends on the number of linked messages (maximum of 10 linked messages are available).
- **Mail (i-mode messaging service)** allows you to send a message to not only other cellphones but also to PCs and other devices that uses Email addresses. You can attach files from Pictures, Videos and Sounds in My data (see page 60). Mail facility is available from the Mail screen under the i-mode facility. For details on the mail service, see "i-mode (M3)" on page 34.
- **Multimedia Messaging Service (MMS)** is a service that allows you to send messages of a slideshow of text and multimedia files. When you receive an MMS message, you will be notified by a message from the MMS centre. You can either automatically or manually receive the contents of an MMS message. MMS facility is available from the Mail screen under the i-mode facility. For details on the mail service, see "i-mode (M3)" on page 34.



The Message Services are network dependent.

Sending/Receiving messages

While an SMS message is being sent or received, a name or a number will be displayed (if a name has been stored with the number in your phonebook). The received messages are stored on the SIM card or in your phone memory. When you receive a message, your phone will ring, a new message icon will be shown on your phone's display and its LED will glow.

Please delete the unnecessary messages in the folders from time to time. The phone cannot receive any messages when the Inbox folder is full.

Message screen

To display the Message screen, 2 or press and hold → Press the appropriate key for the required option.

No.	Message screen menu	
1	Inbox	The received messages are stored here.
2	Drafts	The messages currently being edited are stored here.
3	Outbox	The messages that failed to be sent are stored here.
4	Sent	The sent messages are stored here.

No.	Message screen menu (Continued)	
5, 6	Folder1/Folder2	The messages moved by Move msg (see "Message list Options menu" on page 29) are stored here.
7	CB	The received broadcast messages are saved. See "Cell broadcast (M27)" on page 33 for details.

 If there is no message in a message list, the list will be displayed in gray and you cannot select it.

Reading a message (M21)

- To display the Message view screen of a new message,  2 1 or press and hold  then 1 → Highlight the new message → 
- The new (unread) messages are displayed in bold. If the message cannot be displayed in one page, use  and  to scroll through the message. The following icons will be displayed.

Icon type	Icons	Descriptions	Icon type	Icons	Descriptions
Message type icons		SMS message	Read / Unread status icons		New / Unread message(s)
		Incomplete SMS message			Read message(s)
Storing location icons		Highlighted message stored in SIM	Filtering status icons		SMS messages filtered by status (incomplete)
		Highlighted message stored in the phone memory			SMS messages filtered by location (SIM)
Sorting status icons		Messages sorted by Date			SMS messages filtered by location (the phone memory)
		Messages sorted by Name			Filtered SMS messages
		Messages sorted by Read/Unread status	Sent message status icons		Sent but failed message
		Messages sorted by Size			Sent message
		Messages sorted by Ascending order			
		Messages sorted by Descending order			

Message Options menu (M2M)

-   2  or press and hold  and then 

No.	Message Options menu		
1	SMS settings	1	SMS centre Edits the SMS centre number (this number is saved in the SIM card).
		2	Auto display Turns on/off the automatic display function that displays the received SMS messages automatically.
		3	Receipt request Selects whether to request a receipt of the sent SMS messages.

No.	Message Options menu (Continued)		
1	SMS settings (Continued)	4	Max linked msg Sets the maximum number of linked SMS messages. This function divides an SMS with the message text exceeding the maximum number of characters allowed into multiple messages.
		5	Validity period Selects the period of time an SMS message is stored at the SMS centre, while trying to deliver the message.
2	CB settings	1	Enable 1 to receive none, 2 to receive all, or 3 to specify a list of Cell Broadcast Message Identifier (CBMI) to receive broadcast from.
		2	Languages Selects which language to receive the cell broadcast messages in.
3	View msg status	Displays the information on the number of messages in the phone, the size of free/used memories, SMS units in the phone/SIM, and complete/incomplete SMS units.	
4	Rename folder	Renames Folder1 and Folder2.	
5	View all	Displays all the messages in all folders on the same list.	
6	Msg filter	Sets the type(s) of messages to be displayed by selecting the desired filter option.	



The receipt request and linking of SMS messages are network dependant.



Depending on the selected folder, some options may be displayed in gray and not be available.

Message list Options menu



Display the message list in the Inbox, Drafts, Outbox, Sent, Folder1, Folder2 or CB →

No.	Message list Options menu	
1	Reply	Replies to the sender of the highlighted message.
2	Reply all	Replies to the sender and all other recipients of the highlighted message.
3	Delete	Deletes the highlighted message.
4	Delete all	Deletes all the messages in the current folder.
5	Forward	Forwards the message text of the highlighted message.
6	Msgs/page	Selects either to display 3 or 7 messages in one screen.
7	Move msg	Moves the highlighted message to Inbox or Folder1/2, or copies to SIM or Phone.
8	Sort msg	By: Sorts the messages by date, name, read/unread status or size. Order: Sorts the messages in ascending or descending order.
9	Search	Searches messages by alphabets.
0	View details	Displays the detailed information on the highlighted message.

No.	Message list Options menu (Continued)	
–	Add desktop icon	Creates a desktop icon of the sender or recipient of the highlighted message (Inbox, Sent, Folder1, Folder2, and Drafts only).
–	Edit	Edits the highlighted message (Drafts and Outbox only).
–	Resend	Resends the highlighted message in the folder (Outbox only). The entire message or only the packets that failed to reach the recipient(s) can be sent.

 Depending on the selected folder, the menu number and available options may vary.

 Depending on the selected folder, some options may be displayed in gray and not be available.

Message view Options menu

 Display the message list in the Inbox, Drafts, Outbox, Sent, Folder1, Folder2 or CB → Highlight a message →  → 

No.	Message view Options menu	
1	Reply	Replies to the sender of the highlighted message.
2	Reply all	Replies to the sender and all other recipients of the highlighted message.
3	Delete	Deletes the highlighted message.
4	View details	Displays detailed information on the highlighted message.
5	Forward	Forwards the message text of the highlighted message.
6	Save object	Saves the highlighted object to a folder in My data.
7	Move msg	Moves the highlighted message to Inbox or Folder1/2, or copies to SIM or Phone.
8	Highlight mode	Activates the Highlight mode (see "Highlight mode" on page 33 for details).
9	Option mode	Activates the Option mode to highlight the phone number, Email address, URL or object.
0	Add desktop icon	Creates a desktop icon of the sender or recipient of the highlighted message.

 Depending on the conditions, some options may be displayed in gray and not be available.

 The reply facility uses the phone number of the person who sent the message.

 The Save object Options menu will be displayed only if an object is highlighted.


Option mode Options menu

- Display the message list in the Inbox, Drafts, Outbox, Sent, Folder1, Folder2 or CB → Highlight a message → → 9 / / to highlight a phone number, Email address or URL in the message →

The columns show the menu numbers for **P**: Phone number highlighted, **E**: Email address highlighted and **U**: URL highlighted

P	E	U	Option mode Options menu	
1	1	–	Add to phonebook	Adds the highlighted phone number or Email address to a phonebook.
2	–	–	Dial phone number	Dials the selected phone number.
–	–	1	Add to bookmark	Adds the highlighted URL to the bookmarks.
–	–	2	Go to URL	Activates the web browser to access the highlighted URL.
3	2	3	Create message	Creates a new message with the highlighted phone number/Email address/URL in the To field, the message text, or the slide text.
4	3	–	Add desktop icon	Creates a desktop icon of the highlighted phone number/Email address.
5	4	4	View mode	Deactivates the Option mode.

Creating a message

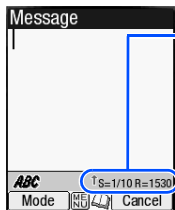

Help area

This area contains the information on the message. **S** indicates the size of the message equivalent to the number of SMS messages, and **R** indicates the remaining number of characters available.

- To display the Message composer screen, 2 and **SK1**, or press and hold then **SK1**
- To address the message, highlight the To field → → Input the required phone number →
- To scroll the phone numbers in the To field, or
- To key in the message, highlight the Message field → → Key in the message →
- Pressing while keying in the To/Message field displays the Message edit Options menu screen.
- SK1** to send the message.
- When you are in the ABC (normal text) mode, any word entered that is not in the T9® dictionary will be added automatically.
- When you are keying in your message, **SK1** to change the text entry mode.
- If you display another screen or receive a call while you are editing a message more than 1 character, the message will be saved automatically in Drafts.

↑ (green)	Indicates that an upper case letter will be input next.
↑ (red)	Indicates the capital lock.
↔ (no arrow)	Indicates that a lower case letter will be input next.

Message composer Options menu

 (MENU) 2 and SK1 or press and hold  then SK1 → Highlight To or Message field → (MENU)

No.	Message composer Options menu	
1	Add/Edit	Adds or edits a recipient phone number or a message.
2	Preview msg	Displays a message preview screen.
3	Delete	Deletes the highlighted recipient, message, or object.
4	Delete all	Deletes all the recipients.
5	Save	Saves the message in Drafts folder.
6	Phonebook	Displays the phonebook list to insert a recipient phone number.
7	Resend list	Inserts a phone number from the resend list.  You can delete the highlighted phone number from the resend list or the entire resend list by pressing (MENU) 1 or (MENU) 2 respectively.
8	Insert	Inserts a new recipient phone number (To field only).
9	Address list	Displays the recipients of the message (To field only).

 Depending on the selected field, some options may be displayed in gray and not be available.

Message edit Options menu

 (MENU) 2 and SK1 or press and hold  then SK1 → Highlight To or Message field →  → (MENU)

No.	Message edit Options menu	
1	Text colour	Selects the colour of text and background.
2	Text format	Selects the font size (small, normal or large) and font style (bold, italics, underline or strikethrough).
3	Text alignment	Sets the text alignment (left, centred or right).
4	Paste	Pastes the text which has been copied onto the clipboard in the Highlight mode.  This function can be used only when text has been copied or cut in the Highlight mode.

No.	Message edit Options menu	
5	Highlight mode	Activates the Highlight mode at the cursor position. You can also activate the Highlight mode by pressing and holding ✱. This function can only be used when text has been entered. To toggle the Highlight mode on/off, SK1 and to go back to the normal mode, CLR To display the following Highlight mode Options menu, .
		1 Text colour Selects the colour of text and background.
		2 Text format Selects the font size (small, normal or large) and font style (bold, italics, underline or strikethrough).
		3 Copy Copies the highlighted part of text onto the clipboard.
		4 Cut Cuts the highlighted part of text.
		5 Delete Deletes the highlighted part of text.
		6 Select word Selects (highlights) the nearest word to the current cursor position.
		7 Select paragraph Selects (highlights) the nearest paragraph to the current cursor position.
5	Highlight mode (Continued)	8 Select all Selects (highlights) the entire text.
		9 Save to text file Saves the highlighted part of text as a text file in the list of Notepad.
6	Insert object	Inserts Text, Sound, Still image, Animation, Emoticon, or Pictograph into the message at the cursor position.
7	T9 Language	Selects the language for T9® text input.
8	Edit settings	Sets the Write mode (Insert or Overwrite) and Clear mode (Backspace or Delete).

Depending on the conditions, some options may be displayed in gray and not be available.

Cell broadcast (M27)

Cell broadcast (CB) messages (e.g. weather reports, news) are sent by the network to all phones in a certain area.

27

The Cell broadcast message display on the standby screen is erased by pressing **CLR**.

Broadcast messages service is network dependent. Please contact your service provider for details.

i-mode (M3)

Using your phone's browser facility, you can enjoy i-mode services such as browsing information on i-mode sites (programs) and other Internet web pages, and sending/receiving i-mode messages which include the mail and MMS (including attachment).

 You can download melody files, images, animations, videos and Java™ applications to your phone's memory. Some files with restrictions cannot be saved to your phone's memory, even though they can be downloaded and played or displayed.

 For the definitions of the icons related to i-mode, see "Displayed icons" on page viii.

i-mode operation guide

You can access various i-mode functions by selecting the menus on the main four i-mode related screens: i-mode screen, i-mode menu screen, iMenu screen and Mail screen. The following table gives an outline of the procedures related to the i-mode services.

Action	Procedure
Browsing the i-mode sites/Internet web pages	
Display the homepage	 Press and hold  (or SK2 → 6 → 3)  You need to set the homepage URL in Set homepage beforehand (see "Set homepage" on page 40).
Display a web page	 SK2 → 6 → 1 to key in the address, or 2 to select an address in the history.
Reload the current page	 While browsing a webpage,  ► 1
Display the URL of the current page	 While browsing a webpage,  ► 2
Bookmark a web page	 With the web page you want to bookmark displayed,  1
Display a bookmarked web page	 SK2 and 5 (while browsing a webpage,  2) → highlight a bookmark → 
Save a web page	 With the page to save displayed,  4
Display a saved page	 SK2 → 7 → highlight a saved page → 
Save an image	 With the page including the image to save displayed,  3 → 
Save a phone number	 With the highlighted phone number on the page,  5
Display the certificate information of the current page	 With a page displayed,  6  You can also refer to a saved page's certificate information by displaying the page and  3 .
Download a file	 Highlight the link to the file to download →  → When the download is completed, save the file and check that the downloaded file is stored in My data (see page 60) or the Applications screen of Java™ (see page 66).
Returning to the previous screen/ moving forward to the next screen	 While connecting to i-mode, ◀ to return to the previous screen (if any), or ▶ to move forward to the next screen (if any).
Mail/MMS	
Create a mail	 SK1 → 1 (for details, see "Creating a new mail" on page 35)

Action	Procedure
Create an MMS	SK1 → 2 (for details, see "Creating a new MMS" on page 36)
Read a mail /MMS	SK1 → 3 → Highlight a message →
Check for new mail/MMS	SK1 → 6
Settings for i-mode	
Change the mail settings	SK1 → 7 (for details, see "Mail settings" on page 44)
Change the browser settings	SK2 → 8 (for details, see "Settings" on page 40)
Change the phone settings related to i-mode	3 2 (for details, see "Settings" on page 38 in "i-mode screen menus")

Mail/MMS operations

Creating a new mail

SK1 → 1

Set the addressee.

Highlight the To field → → key in the destination →

To refer to the phonebook, → Open phonebk. to retrieve the destination

To send the mail to more than one addressee, → Add To/Cc/Bcc

To change the To/Cc/Bcc status of an already set addressee, highlight the destination → → Change to To/Cc/Bcc

To delete an already set addressee, highlight the To field → → Del. address

Key in the subject.

Highlight the Subject field → → key in the subject →

Key in the message.

Highlight the Message field → → key in the message →

To attach a header, → Attach header

To attach a signature, → Attach sign.

Attach a file if necessary.

Highlight the Attachment field → → select a file to attach from the My data screen

To delete an already attached file, highlight the attachment field → → Delete attachment

To preview the attached file, highlight the attachment field → → Play/View file

You can attach files up to 299 KB in total, or 10 files.

To send the mail, highlight Send →

To save the mail, highlight Save →

To delete the currently edited mail, → Del. mail

Creating a new MMS

- **SK1 → 2 →** The Compose menu screen is displayed
- Using Compose menu options, create an MMS (for details, see the table "Compose menu options") → **SK2 →** The Compose MMS screen is displayed
- Set the addressee and key in the subject (see "Creating a new mail" on page 35 for details).
- To send the MMS, highlight Send → 
- To save the MMS, highlight Save → 

Composing an MMS

- From the Compose MMS or Edit MMS screen, highlight Attachment →  → The slide is displayed → 

Compose menu options			
– Add/Overwrite/ Delete media	1	Add/Edit/Delete text	Adds new text data or deletes the text data in the text field on the slide.
	2	Add/Overwrite/ Delete image	Adds an image file or deletes the image file in the image field on the slide.
	3	Add/Overwrite/ Delete audio	Adds a sound file or deletes the sound file in the sound field on the slide.
	4	Add/Overwrite/ Delete video	Adds a video file or deletes the video file on the slide.
– Exit	Shifts to the Compose MMS screen.		
– Save	Saves the currently created MMS.		
– Preview	Displays the created slides in order from the beginning at the preset playback time for each.		
– Add slide	1	Add slide	Adds a new slide after the currently displayed slide.
	2	Insert slide	Inserts a new slide just before the currently displayed slide.
– Delete slide	Deletes the currently displayed slide.		
– Text colour	Selects the Text colour from the 16 different colours.		
– Background colour	Selects the Background colour from the 16 different colours.		

No. Compose menu options (Continued)		
–	Set Fit mode	Selects the size in which the image/video is displayed.  This setting will be applied to all the slides.
		1 Hidden Displays the image/video in the actual size.
		2 Fill Displays the image/video in the reduced size so that the height and width fit into the image/video display area.
		3 Meet Displays the image/video in the reduced size so that the longer side of the height or width fits the corresponding side of the image/video display area.
		4 Slice Displays the image/video in the reduced size so that the shorter side of the height or width fits the corresponding side of the image/video display area.
–	Options	Sets the length of time a slide is displayed, and sets the beginning and end times for text, image or sound within that slide display time.  You cannot set the beginning and end time for video files.
–	Resize region	Changes the region size of the image/video field and the text field, using the ▲ and ▼ keys.
–	Switch positions	Switches positioning of the image/video field and text field on the slide.
–	Previous slide	Displays the previous slide.
–	Next slide	Displays the next slide.

 Depending on the conditions, some options may be displayed in gray and not be available.

 When you finish editing attachment, **SK2** or select Exit from Compose menu options to return to the Compose MMS screen.

 If necessary, edit the composed MMS using the Edit menu options menu (see “Using the Edit menu options” for details).

Using the Edit menu options

 From the Compose mail/Compose MMS/Edit mail/Edit MMS screen,  to display the Edit menu options.

No. Edit menu options		
–	Send	Sends the mail/MMS.
–	Save	Saves the mail/MMS being edited to the draft folder.
–	Attach file	Attaches a file to the mail.
–	Delete attachment	Deletes the attached file(s).
–	Play/View file	Plays or displays the attached file.
–	Open phonebk.	Adds the destination directly from the phonebook.
–	Add To/Cc/Bcc	Adds a To/Cc/Bcc field.
–	Change to To/Cc/Bcc	Changes the highlighted Cc/Bcc/To field to a To/Cc/Bcc field.
–	Del. address	Deletes a destination field.
–	Attach header/sign.	Attaches a stored opening sentence at the start or a stored signature at the end of the text.

No.	Edit menu options (Continued)	
–	Del. message	Deletes the message of the mail being edited.
–	Del. mail	Deletes the new message currently edited.

 Depending on the conditions, some options may be displayed in gray and not be available.

Reading a received mail/MMS

 **SK1** → **3** → The list of mail/MMS in the Inbox folder will be displayed.

 Highlight the message to read →  → The message content will be displayed. Scroll the message content.

 To view the previous message , to view the next message, .

 While reading a received mail/MMS in the Inbox folder, you can use various functions. See “Inbox” on page 42.

 If Auto play is on (see “Auto play” on page 44), the MMS/attachment will be automatically played/displayed. If not, **SK1** to start playing.

 You can change the font size of mail text by pressing and holding the  and .  enlarges the font size, while  reduces it.

i-mode screen

From the i-mode screen you can change the i-mode related settings of your phone.

  **3** → The i-mode screen will be displayed.

No.	i-mode screen menus							
1	i-mode	Displays the i-mode menu screen (For details, see "i-mode menu screen menus").						
2	Settings	1	Ringer time	Sets the ringtone duration to 3-10 seconds for incoming mail/MMS.				
		2	Connection No.	Selects the connection number settings to use. The following settings are available:				
				1, 2	Factory setting 1/2	Uses the default connection numbers.		
				3	User setting	Uses and changes the following settings.		
						1	Access point	
						2	i-mode server (Gateway address)	
						3	Portal server (i-mode server)	
						4	Mail	
						5	User data	User name
								Password
				6	Port No.	HTTP Port No.		
						SSL Port No.		
3	i-mode lock	Locks the i-mode function, including mail/MMS.						

i-mode menu screen

From the i-mode menu screen you can access to the iMenu/Mail/Message screen, your bookmarks, the entry screen for a URL to be displayed, the access history, the saved pages, the list of Java™ applications and the browser settings.

☛ **SK2** or  **3 1** to display the i-mode menu screen.

No.	i-mode menu screen menus (Sheet 1 of 2)	
1	iMenu	Accesses the iMenu screen. (See “iMenu screen” on page 41.)
2	Mail	Displays the Mail screen, on which you can display received mail/MMS, saved draft messages and sent messages, and also create new mail/MMS (see “Mail screen” on page 41).
3	Java application	Displays the list of Java™ applications (see “Java™ (M7)” on page 66 for details).
4	SMS	Displays the Message screen, on which you can read received SMS, saved draft SMS and sent SMS, and also create new SMS (see “Message (M2)” on page 27).
5	Bookmarks	Displays the list of bookmarked web pages.
		Bookmarks options menu
		1 Open Displays the highlighted bookmark.
		2 Copy address Copies the highlighted bookmark URL.
		3 Edit title Edits the title of the highlighted bookmark.
		4 Add desktop icon Creates a desktop icon of the URL of the selected bookmark.
		5 Create message Creates a new message with the highlighted bookmark address in the message text.
		6 Delete one Deletes the highlighted bookmark.
		7 Delete all Deletes all the bookmarks.
6	Go to webpage	Displays the URL you key in, the URL in the address history, or the homepage.
		1 Enter address Prompts you to key in a web page address.
		2 Address history Displays the list of addresses in the access history for you to select from. Address history Options menu Add desktop icon: Creates a desktop icon of the URL of the selected history. Create message: Creates a message with the URL of the selected history in the text. Delete one: Deletes the highlighted address. Delete all: Deletes all the addresses in the list.
		3 Go to home Displays the homepage set in Set homepage (See “Set homepage” on page 40).  This menu is not available, if Set homepage of i-mode menu screen is not set.
		0 Back Returns to the i-mode menu screen.
7	Saved pages	Displays the list of saved pages. Saved pages are stored in your phone memory so you can see them offline.
		Saved pages list Options menu

No.	i-mode menu screen menus (Sheet 2 of 2)		
		1 Open 2 Edit title 3 Protect On/Off 4 Delete one 5 Delete all 6 Delete all + Pr.	Displays the current saved page. Edits the title of the current saved page. Protects or unprotects the current page. Deletes the current saved page. Deletes all the saved pages excluding the protected. Deletes all the saved pages including the protected. Saved pages details Options menu
7	Saved pages (Continued)	1 Save image 2 Edit title 3 Certificate info 4 Page info 5 Protect On/Off 6 Delete	Saves an image as a file on the current saved page. Edits the title of the current saved page. Displays the certificate information on the current saved page. Displays the URL on the current saved page. Protects or unprotects the current page. Deletes the current saved page.
8	Settings	Changes the settings of your browser. 1 Set time out 2 Load images 3 Wrap text 4 Certificates 5 Send terminal info 6 Set homepage 7 Video auto play 8 Check settings 0 Back	Disconnects the connection after the set time. You can set 60 seconds or 90 seconds, or disable this function. Sets whether to display images contained in web pages. Sets whether to display text as is on web pages and mail/attachment text, or wrap it to fit your phone's screen. Displays the certificate information and validates/invalidates a certificate. Sets whether to display a confirmation message before sending the terminal information to the Information Providers (IPs).  <i>If you agree to send private information (e.g. production serial No. and SIM No.) to the IPs via the Internet, it may be obtained by others.</i> Validates the homepage and sets the URL.  <i>You can display the homepage by pressing and holding  from the standby screen.</i> Sets whether to play a video file automatically after the download is completed. Displays all the options set for the settings (browser). Returns to the i-mode menu screen (see "i-mode menu screen" on page 39).

 Depending on the conditions, some options may be displayed in gray and not be available.

iMenu screen

From the iMenu screen you can access the various services, and also use the function menus of your browser such as adding a bookmark, saving a web page and creating a message.

☛ **SK2** or  **3 1** to display the i-mode menu screen → **1** to display the iMenu screen →  to display the browser options menu.

No.	Browser options menu	
–	Add bookmark	Bookmarks the current page.
–	Bookmarks	Displays the Bookmark list.  <i>This option is displayed only when one or more bookmarks are registered.</i>
–	Save image	Saves an image on the current page.  <i>This option is displayed only when one or more images are displayed on the current screen.</i>
–	Save page	Saves the current page.
–	Add to phonebook	Saves the phone number displayed in the current page in the phonebook.  <i>This option is displayed only when one or more phone numbers are displayed on the current screen.</i>
–	Certificate info	Displays the server certificate of the current page.  <i>This option is displayed only when the current page is a SSL page.</i>
–	Go to webpage	Displays a page by keying in the URL or using the access history (see “Go to webpage” on page 39).
–	Reload	Updates the data on the current page.
–	Page info	Displays the URL of the current page.
–	Add desktop icon	Creates a desktop icon of the URL of the current page.
–	Create message	Creates a new message with the highlighted phone number or Email address in the message text.

 **If you agree to send private information (e.g. production serial No. and SIM No.) to the IPs via the Internet, it may be obtained by others.**

 Pressing **CLR** or  may not bring back the previous screen. Screen operations depend on the current screen content.

Mail screen

From the Mail screen you can use the i-mode message services.

☛ **SK1** or  **3 1 2** to display the Mail screen.

 *The available options differ depending on the operators.*

 *If an error occurs while sending mail, it will be saved in the Draft folder as an unsent mail.*

 *The same mail can be sent to up to five addresses.*

 *If you save a mail while editing, it will be saved in the Draft folder.*

No.	Mail screen menus (Sheet 1 of 4)		
1	Compose mail	Displays the Compose mail screen (see "Creating a new mail" on page 35).	
2	Compose MMS	Displays the Compose MMS screen (see "Creating a new MMS" on page 36).	
3	Inbox	Displays the list of received mail/MMS.	
		Inbox list Options menu	
		– Show all	Displays all the received mail/MMS.
		– Show unread	Displays only the unread mail/MMS.
		– Show read	Displays only the read mail/MMS.
		– Show protect.	Displays only the protected mails/MMS.
		– Delete one	Deletes the currently selected mail/MMS.
		– Delete read mail	Deletes all the read mails except protected mails/MMS.
		– Delete all	Deletes all the mails/MMS.
		– Title sort	Sorts the received mails/MMS by title.
		– Address sort	Sorts the received mails/MMS by address.
		– Date sort	Sorts the received mails/MMS by date.
		Inbox details Options menu	
		– Reply	Replies to the received mail/MMS.
		– Reply quoted	Replies to the received mail quoted.
		– Reply all	Replies to the sender and all the recipients of a mail/MMS.
		– Reply quoted all	Replies to the sender and all the recipients of a mail quoted.
		– Forward	Forwards the received mail/MMS.
		– Delete	Deletes the received mail/MMS you are viewing.
		– Add desktop icon	Creates a desktop icon that creates a new message to the sender.
		– Save address	Saves the address of the sender into the phonebook.
		– Save selection	Saves the highlighted phone number into the phonebook.
		– Create message	Creates a new message with the highlighted Email address or phone number.
		– Save melody	Saves the melody attached to the received mail.
		– Save attachment	Saves the attached file.
		– Copy message	Copies the message text.
3	Inbox (Continued)	– Copy subject	Copies the desired subject text.
		– Copy address	Copies the desired address.
		– Play attachment	Plays the attachment content based on the content setting.
		Play attachment Options menu	

No.	Mail screen menus (Sheet 2 of 4)						
			1	Copy text	Copies the text data on the slide.		
			2	Save image	Saves the image file on the slide.		
			3	Save audio	Saves the audio file on the slide.		
			4	Save video	Saves the video file on the slide.		
		–	Browse attachment	Plays the attachment content manually.			
				Browse attachment Options menu			
				1	Copy text	Copies the text data on the slide.	
				2	Save image	Saves the image file on the slide.	
				3	Save audio	Saves the audio file on the slide.	
				4	Save video	Saves the video file on the slide.	
				5	Save selection	Saves the highlighted phone number, Email address or URL to the phonebook or bookmarks.	
				6	Create message	Creates a message to the destination in the slide text.	
		7	Play slide	Plays the highlighted slide.			
	–	Protect On/Off	Protects or unprotects the received mail/MMS.				
4	Sent mail	Displays the list of sent mail/MMS.					
		Sent mail list Options menu					
		–	Title sort	Sorts the sent mail/MMS by their titles.			
		–	Address sort	Sorts the sent mail/MMS by their first destination addresses.			
		–	Date sort	Sorts the sent mail/MMS by the date they were sent.			
		–	Delete one	Deletes the selected mail/MMS.			
		–	Delete all	Deletes all the sent mail/MMS.			
		–	Delete all + Pr.	Deletes all the sent mail/MMS including the protected.			

No.	Mail screen menus (Sheet 3 of 4)		
4	Sent mail (Continued)	Sent mail details Options menu	
		– Re-edit	Displays the composer to edit the sent mail/MMS again.
		– Delete	Deletes the sent mail.
		– Add desktop icon	Creates a desktop icon that creates a new message to the addressee.
		– Save address	Saves the destination address to the phonebook.
		– Save selection	Saves the phone number and mail address contained in the message part.
		– Create message	Creates a new message to the highlighted Email address or phone number.
		– Copy message	Starts the copy mode in the message part.
		– Copy subject	Starts the copy mode in the subject part.
		– Play attachment	Plays the attachment content based on the content setting (see “Play attachment” on page 42).
		– Browse attachment	Plays the attachment content manually (see “Browse attachment” on page 43).
		– Protect On/Off	Protects or unprotects the received mail/MMS.
5	Draft	Displays the unsent and the saved draft mail/MMS.	
		Draft Options menu	
		1 Delete one	Deletes the selected mail/MMS.
		2 Delete all	Deletes all mail/MMS.
6	Check new mail	Checks if there is any new i-mode messages (mail/MMS) for you stored at the mail server.	
7	Mail settings	Changes the mail settings.	
		1 Edit header	Edits the header to be added at the beginning of a mail, and sets whether to add it automatically.  Highlight the checkbox →  to place a check, to automatically add a header.  Highlight the text box →  to edit the header → Edit the text → 
		2 Edit signature	Edits the signature to be added at the end of a mail, and sets whether to add it automatically.  Highlight the checkbox →  to place a check, to automatically add the signature.  Highlight the text box →  to edit the signature → Edit the text → 
		3 Reply marker	Edits the reply markers to be added when replying to a mail with quotations from the original.  Highlight the text box →  to edit the reply marker → Edit the text → 
		4 Auto play	Sets whether to automatically play or display the sound, image or video file attached, when you open the mail.

No. Mail screen menus (Sheet 4 of 4)			
7	Mail settings (Continued)	5	Auto reception Sets whether to automatically retrieve a mail after receiving the incoming mail notification.  When set to on, your phone will automatically receive mail. If set to off, you will have to manually retrieve from your i-mode service provider using the Check new mail of Mail screen menus (see "Check new mail" on page 44).
		6	Receive attachment Sets the attachment file type that can be received.  Highlight the file type →  to place a check.
		7	Attachment data Selects whether to receive Melody For i-mode (MFi) files attached to a mail.
		8	Font size Sets the font size to display the mail.
		9	Check settings Displays the values set to the above mail settings.
		0	Back Returns to the Mail screen.
0	Back	Returns to the i-mode menu screen.	

 Depending on the conditions, some options may be displayed in gray and not be available.

i-mode glossary

The following defines the basic terms used in this section.

Term	Definition
Site (program)	An Internet contents page especially designed for i-mode users, which can be accessed from your i-mode top screen of your IP.
Mail	Mail is the messaging service of i-mode. You can not only exchange messages with other cellphones, but also with PCs, PDAs, etc.
MMS	Multimedia Messaging Service lets you send messages with image/video/sound files attached. The MMS type message is also referred to as an MMS.
Access history	Your phone stores up to 10 URLs you have accessed. You can refer to this list when you want to go to a web page you have accessed recently.
Web page	An Internet contents page compatible to i-mode services, which can be browsed using your phone, including the sites (programs).
Bookmark	A bookmark contains the URL of a web page. You can save up to 50 bookmarks and use them for easier accesses.
Certificate information	If you are displaying a Secure Sockets Layer (SSL) page designed to enable safe data transmission, you will be able to see its certificate information.
IP	Information Provider. Your IP provides you the i-mode sites (programs).
Home page	A web page that is set in your profile as the page to connect to when you press and hold  from the standby screen.
Saved pages	You can save up to 20 web pages in your phone memory, for quick off-line access.

Phonebook (M4)

Phonebook types

Your phone can have up to 7 directories stored on your SIM card and in your phone memory:

- Complete (a list of all the numbers stored in the ADN and FDN)
- Personal directories (ADN) in the SIM card
- Personal directories (ADN) in the phone memory
- Service dialling numbers (SDN)
- Fixed dialling numbers (FDN)
- Own number
- Voice mail number

 When viewing any of the directories described, you can switch to the other directories (if your SIM card supports them) by pressing .

 The maximum number of phone numbers that can be stored on a SIM card is the total of the ADN, FDN and SDN directories.

 When you activate the phonebook, the directory which you were referring to the last time will open.

Personal directory (ADN)

These numbers are known as abbreviated dialling numbers (ADN). There are two types of ADN, one is the phonebook stored on the SIM card (the phonebook (SIM)) and the other is the phonebook stored in the phone memory (the phonebook (Phone)).

Phonebook (SIM)

- Up to 255 personal data can be stored in the SIM card.
- Each personal data contains a name, a phone number and a location number.

 The number of phone numbers that can be stored on a SIM card depends on the SIM card capability.

Phonebook (Phone)

Up to 500 personal data can be stored in your phone memory. Each personal data is given a location number (1 to 500), and it can be allocated to a group.

To each personal data, you can set the following:

- Name
- 7 phone numbers (Home, Mobile, Work, Data, Fax, Other phone x 2)
- 2 Email addresses
- 2 descriptive information
- Group, Voice tag, LED colour, Picture, Ringer and Location number

 Up to 10 phone numbers can have a voice recognition recording allocated to them.

Fixed dialling numbers (FDN)


Fixed dialling numbers are a means of limiting which numbers can be called from your phone. With the FDN feature switched on (see page 25), you can call with your phone the numbers you have stored in this phonebook and the emergency number only.

 **Although FDN is supported by your phone, it must be present on your SIM card - check with your service provider.**

Service dialling numbers (SDN)

The numbers stored in the SDN directory are pre-installed by your service provider. They will call numbers and services as agreed with your supplier (e.g. customer enquiries, billing information, sportslines, weatherlines, etc.) and cannot be edited by you.

 **Although SDN is supported by your phone, it must be present on your SIM card - check with your service provider.**

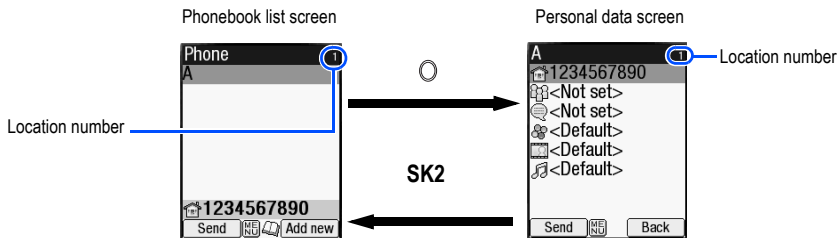

Accessing your phonebook (M4)

You can store personal information in the phonebook of your phone or your SIM card.

Displaying a personal data (M41)

 (MENU) **4 1** and the appropriate key for the desired directory, or  until the required directory is displayed → Highlight the required personal data → 

Displaying information about your phonebook (M42)

 (MENU) **4 2** to display the information about your phonebook.

 This function is SIM dependent.

Call options (M43)

 (MENU) **4 3** to display the Call options screen.

 For details on the Call options screen, see "Call options (M43)" on page 11.

Phonebook list Options menu

  **4 1** and the appropriate key for the desired directory, or  until the required directory is displayed → Highlight the required personal data
→ 

No.	Phonebook list Options menu	
1	Add new	Adds a new personal data to Phone/SIM/FDN.
2	Edit	Displays the data edit screen to edit the currently highlighted personal data.  When editing the data in FDN, you will be prompted to enter PIN2 code.
3	Copy	Copies personal data to another phonebook (see "Copying and moving personal data" on page 52 for details).
		1 Current copy Copies the currently highlighted personal data.
		2 Package copy Copies the selected data in the list.
4	Move	Moves the currently highlighted personal data to SIM, Phone, FDN, Own number or Voice mail number.
5	Delete	Deletes personal data.
		1 Delete current Deletes the currently highlighted personal data.
		2 Delete all Deletes all the data in the list.

No.	Phonebook list Options menu		
6	Groups	Editing the group information - Highlight the group you wish to edit → SK1 and highlight the required field - To rename the group name, select Group name field → Key in the name of the group → ○ - To set information on the selected group, select Info field → Key in the info → ○ - To select the LED colour, select LED field → 1 → Highlight the desired colour → ○ - To select the CLI picture, select Picture field → 1 for Picture → Highlight the desired picture → ○ - To select the ringer, select Ringer field → 1 for Sound or 2 for Video → Highlight the desired sound or video → ○ SK1 to set the change <i>If the personal settings for the LED colour, CLI picture, or the ringer are also set, they have priority over those of the Group settings.</i>	
		Group member list screen Options menu Highlight the group you wish to edit → ○ to display the list of group members → Highlight the member → 	
		1 Call	Calls the highlighted member.
		2 Create message	Creates a new message to the highlighted member.
		3 Add new	Creates a new phonebook entry to join the group.
		4 Add to group	Adds a phonebook entry to the group.
		5 Remove from group	Removes the highlighted member from the group.
		6 Remove and delete	Removes the highlighted member from the group and delete the phonebook entry at the same time.
		7 Add desktop icon	Creates a desktop icon of the phone number/Email address of the highlighted member.
7	Sort	Sorts the personal data in the order of alphabets or location number. <i>Sorting may take time depending on the number of personal data entries, the number of characters contained in each entry and the type of language.</i>	
		1 Alphabetic	Sorts the personal data alphabetically. <i>You can jump directly to a name beginning with specific characters by pressing the appropriate key (e.g. press 5 once to jump to names beginning with J, or twice to jump to names beginning with K).</i>
		2 Location	Sorts the personal data in memory location number.

No. Phonebook list Options menu						
8	Location	Searches for the personal data by the location number. Key in the desired location number → SK1 to display the Phonebook list screen with the selected personal data highlighted.				
9	Show	Displays phonebook information.				
		<table border="1"> <tr> <td>1</td><td>Summary</td><td>Displays the summary of phonebook contents.</td></tr> <tr> <td>2</td><td>Voice tag list</td><td>Displays the phonebook entry names with the voice recognition tags recorded.</td></tr> </table>	1	Summary	Displays the summary of phonebook contents.	2
1	Summary	Displays the summary of phonebook contents.				
2	Voice tag list	Displays the phonebook entry names with the voice recognition tags recorded.				
0	Send via Bluetooth	Sends the currently highlighted personal data to another device through Bluetooth. See also: "Bluetooth Object Push" on page 78.				
*	Add desktop icon	Creates a desktop icon of the highlighted personal data.				

Depending on the conditions, some options may be displayed in gray and not be available.

Making a call or creating a message from the phonebook list

- Highlight a desired personal data to display the stored numbers or Email addresses in the help area → Use and to display the other stored phone numbers or Email addresses, if any, in the help area
- to make a phone call to the displayed phone number, or **SK1** to send a new message to the phone number or Email address

Adding a new personal data

- 4 1** and the appropriate key for the desired directory, or until the required directory is displayed → **SK2** → Select the directory to which you wish to store the personal data → Enter the name and other necessary information → **SK1** (see "Editing an existing personal data" on page 50).

You can also input phone numbers on the standby screen and to add a new personal data.

It is best to store numbers using the international number format.

Editing an existing personal data

- 4 1** and the appropriate key for the desired directory, or until the required directory is displayed → Highlight the required personal data → **2**

For the phonebook (SIM) and FDN, only the name, phone number and the location number can be added or edited in the following procedures.

For the own number and voice mail number settings, only the name and phone number can be added or edited in the following procedures.

Adding/editing phone numbers, Email addresses & personal information

- Highlight the field you wish to edit or add information to →
- Add the required number or information or make necessary changes to the selected field →
- Highlight another field to make further changes, if required

You can edit the Name, Phone number, Email address and Info fields by the above method.

Allocating a group

- Highlight the Group field → ○ → Highlight the group you wish to add the current personal data to → ○

Voice recall functions

Adding a Voice recall recording

- Highlight the Voice tag field → ○ → 1
- Say the name you wish to record as a voice tag → Say the name again for confirmation according to the displayed message

Playing a Voice recall recording

- Highlight the Voice tag field → ○ → 2

Deleting a Voice recall recording

- Highlight the Voice tag field → ○ → 3

Up to 10 voice tags can be stored.

You can check the number of stored voice tag and list of those tags (see “Summary” and “Voice tag list” on page 50).

Allocating a LED colour

- Highlight the LED colour field → ○ → 1 → Highlight the desired colour → ○

The personal setting for the LED colour has priority over the Group setting and phone setting for the LED colour.

Allocating a picture as a CLI

You can set a picture to be displayed on the screen as a Calling Line Identification (CLI) for an incoming call.

- Highlight the Picture field → ○ → 1 to display the picture list screen
- Highlight the desired picture → SK1 to preview the picture or ○ to select the highlighted picture

A ✓ is displayed on the icon for which the item is currently selected.

See also: “Pictures (M63)” on page 61.

Allocating sound/video as a ringer

You can set a sound or video as a ringer for an incoming call. When a video is set, a movie is displayed on the screen with the sound.

- Highlight the Ringer field → ○ → 1 to display the sound list screen or 2 to display the video list screen
- Highlight the desired sound or video → SK1 to preview the file or ○ to select the highlighted file

A ✓ is displayed on the icon for which the item is currently selected.

If the video as a ringer is set, it will sound and will be displayed on the screen regardless of the CLI picture setting.

See also: “Sounds (M62)” on page 60.

Allocating a location number

- Highlight the Location number field → ○ → Key in the desired location number → ○

Saving the edited personal data

- After editing the required field, **SK1** to save the edited data and return to the previous screen.

Copying and moving personal data

- (MENU)** **4 1** and the appropriate key for the desired directory, or until the required directory is displayed → Highlight the required personal data/ list of data → **(MENU)** **3** to copy or **(MENU)** **4** to move
- For copying, **1** to copy the highlighted personal data entry or **2** to copy the selected personal data entries in the current list
- Press the appropriate key for the desired destination (SIM, Phone, FDN, Own number or Voice mail number)
- If you copy or move from phonebook (Phone), the Origin number screen will be displayed to choose which phone number to copy or move.
- When copying the selected personal data entries (Package copy) from phonebook (Phone), you can copy only the first or all the numbers in each entry.
- Key in the desired location number →
- If you copy or move to phonebook (Phone), the Number type screen will be displayed to choose the phone number type.

Personal data Options menu

- (MENU)** **4 1** and the appropriate key for the desired directory, or until the required directory is displayed
- Highlight the required data → → Highlight the required field → **(MENU)**

No.	Personal data Options menu	
1	Call	Calls the highlighted phone number.
2	Create message	Creates a new message to the highlighted phone number or Email address.
3	Send via Bluetooth	Sends the selected personal data to another device through Bluetooth.
4	Edit	Edits the selected personal data.
5	Copy	Copies the selected phone number(s)/Email address(es). Press the appropriate key for the desired destination (SIM, Phone, FDN, Own number or Voice mail number) → Key in the desired location number →
6	Move	Moves the currently highlighted personal data. Press the appropriate key for the desired destination (SIM, Phone, FDN, Own number or Voice mail number) → Key in the desired location number →
7	Delete current	Deletes the selected personal data.
8	Add desktop icon	Creates a desktop icon of the selected personal data.

See also: "Editing an existing personal data" on page 50 and "Copying and moving personal data" on page 52 for the above operations.

Voice mail (M417)

Voice mail function enables you to forward received calls to the Voice mail centre, and the caller can leave voice messages in your voice mail mailbox. You may be notified by an icon on the standby screen if the caller leaves a voice message.



The voice mail service is network dependent. Contact your service provider for details on your voice mail number.

Setting the Voice mail number



This function is available when the Voice mail number has not been set.

417 → Highlight the required line → twice → → key in the voice mail number → → **SK1** to save the change.

Forwarding a call to the Voice mail centre

Set the voice mail centre number (see "Setting the Voice mail number" for details) → Set up Call diversion (see "Call diversion (M161)" on page 13 for details). When you receive a call set to be diverted, the call will be diverted to the voice mail centre.

Retrieving a Voice mail



This function is available when the Voice mail number has been set.

- 417** → Highlight the required line →
- You can also retrieve a voice mail by pressing and holding **1** from the standby screen.
- To set up the line to call the voice mail centre, see "ALS setup" on page 20 for details.

Camera (M5)

Camera function enables you to take pictures or record videos and save them as Joint Photographic Expert Group (JPEG) files and 3rd Generation Partnership Project (3GPP) files respectively. You can enjoy the picture and video files in many ways: send them attached to an MMS or mail, set a picture file as the wallpaper for your phone, etc.

Notes on using the camera

Handling the Camera



The camera of your phone is manufactured using high-precision technology. However, there may be dots or lines on the screen that appear darker or brighter than the others. Note also that when you are shooting or recording in dimly-lit places, the amount of noise (such as red and blue dots or horizontal lines) may increase noticeably.



Be careful not to apply force to the lens when closing your phone. This could damage the lens.



Fingerprints or grease on the lens can result in focusing problems or dark images. Wipe the lens clean with a soft cloth before use.



The image quality may be degraded after your phone has been left for a long period in a warm place.



Exposing the camera to direct sunlight for a long period could discolour the camera's internal colour filter and cause discoloured images.



Camera mode is automatically cancelled if none of the phone's keys are pressed for 3 minutes or longer.

Precautions when taking pictures/recording videos



You cannot switch the camera's shutter sound off. The shutter makes a clicking sound when you take a picture or start/end a video recording, even when the phone is in Meeting mode.



Avoid camera shake. Moving the phone when you take a picture will result in a blurred image. Hold the camera firmly to keep it still when you take a picture, or use the auto timer to take the shot.



*As there is a slight delay from the time you press  or **Side up** until the picture is actually taken, do not move the camera until you hear the shutter sound.*



If taking a picture with not enough light, try to hold the phone still as much as possible, and for a longer period of time after the shutter sound: the shutter speed may be slower in a darker environment.



Note that if you attempt to shoot directly into a strong light source, such as the sun, another bright light or the high reflecting target with strong light, the image may contain washed-out white highlights or be disrupted.



While recording, be careful not to cover the mouthpiece of your phone as it is used as the microphone to record sound along with the video.

Copyright information



Images and videos shot or recorded on your phone cannot be used in ways that infringe copyright laws without the consent of the copyright holder, unless intended only for personal use. Note that some restrictions apply to the photographing of stage performances, entertainments and exhibits, even when intended purely for personal use.

 Users are also asked to note that the transfer of images protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

 **Be considerate of other people's privacy when you take a picture or record a video using the camera of your phone and send it to others.**

Taking a picture (M51)

-  To activate the camera function, press and hold **Side up** or  **5 1**
-  When you highlight Camera on the Camera screen, pressing **SK1** creates a desktop icon of the camera function on the standby screen.
-  The LED lights in green while in the camera mode.
-  Look into the camera view finder screen and adjust the camera position to place the target on the screen.
-  Hold the phone still → To use the shutter,  or **Side up** → Check the picture → If successfully taken,  → Saved as a JPEG file in a folder in Pictures
-  The LED lights in red when the picture is taken.
-  After taking a picture, **SK1** to send the taken picture attached to a message, and **SK2** to discard the picture.
-  The default file name for the picture saved in the folder is the date, month, year and sequence number. When you take pictures in burst mode, the saved files will be named by the default file names plus a consecutive two-digit number at the end.
-  If a call comes in while you are checking or saving a photographed image, image storage is cancelled. When this occurs, the next time you select camera function a message appears to say that you have an image that was not stored, allowing you to check and store the image.
-  Before taking a picture, you can switch to the video camera function by pressing **SK1**. This use of **SK1**, however, is invalid if the self-timer function is activated.

Operations when taking a picture

-  To zoom in and out,  or 
-  You can also select 1x, 2x, 3x, 4x or 5x magnification from the Zoom setting on the Camera Options menu.
-  To turn on/off the camera view finder on the full screen, **#**.
-  Depending on the photo size, there may be parts not seen on the full screen view finder display in the saved picture.
-  To control the brightness level of the picture,  or 

Camera Options menu (before taking a picture)

No.	Camera Options menu (before taking a picture)	
1	Single mode/Burst mode	Switches the shooting mode to Single/Burst mode (serial shooting).
2	Shoot environment	Changes the camera settings to suit the environment. Select from Standard, Person, Room or Darkness.
3	Effect	Applies special effect to the picture. Select from Off, Sepia, Monochrome, or Negative film.
4	Photo size	Sets the picture size to Sub-QCIF (128x96), QCIF (176x144), Wallpaper (176x220), CIF (352x288), VGA (640x480) or SXGA (1280x1024).  You cannot use the Zoom function for VGA and SXGA, and you can select 1x to 2x magnification for Wallpaper and CIF, 1x to 4x magnification for QCIF and 1x to 5x magnification for Sub-QCIF.  You can use the Frame and Burst mode functions for Sub-QCIF, QCIF and Wallpaper.  You cannot use the Full screen function for Sub-QCIF and QCIF.  If you select Wallpaper, CIF, VGA or SXGA, the picture on the camera view finder screen will be displayed as a smaller picture than the actual size. Also on the camera view finder screen, the picture size before shooting differs from the size after shooting.
5	Image quality	Sets the image quality to Super fine, Fine, Normal, Economy or Super economy.
6	Frame	Selects whether to use a frame when taking pictures, and sets the desired frame with which a picture will be taken.
7	Self timer/Self timer cancel	Activates or deactivates the self-timer function.
8	Sound settings	Selects the Shutter sound and Self timer sound.
9	Pictures	Opens Pictures in My data.
0	Other settings	Add desktop icon: Creates a desktop icon of the camera function on the standby screen. Automatic save: Selects whether to save taken pictures automatically or not. Save in: Selects the folder (preset or created) where the taken picture will be saved. Brightness: Changes the brightness level of the picture between -2 and +2. Zoom: Changes the zoom magnification from 1x, 2x, 3x, 4x or 5x. Thumbnail view: Selects whether to display the pictures taken in the Burst mode as thumbnails or slides. Video recorder: Activates the video function. Flicker control: Selects 50Hz, 60Hz or Auto to prevent flickers when taking a picture under a fluorescent light.
*	Full screen	Turns the Full screen on or off.

 Depending on the conditions, some options may be displayed in gray and not be available.

Camera Options menu (after taking a picture)

No.	Camera Options menu (after taking a picture)	
1	Save current	Saves the currently displayed picture in the folder selected as Save in setting. In Burst mode, only the highlighted picture is saved.
2	Save all	Saves all pictures taken in Burst mode.
3	Create message	Creates a new message with the file attached.
4	Set as wallpaper	Sets the picture to be the main-display wallpaper.
5	Thumbnail view	Selects whether to display the pictures taken in the Burst mode as thumbnails or slides.
6	Automatic save	Selects whether to save taken pictures automatically or not.
7	Save in	Selects the folder (preset or created) where the taken picture will be saved.
8	Pictures	Opens Pictures in My data.

Depending on the conditions, some options may be displayed in gray and not be available.

Recording a video (M52)

Recording a video

To record a video, keep your phone open at all time. Unlike taking a picture, you cannot record a video while the phone is closed.

- Press and hold **Side up** then **SK1**, or **(MENU) 5 2** → Look into the view finder screen and adjust the camera position.
- When you highlight Video recorder on the Camera screen, pressing **SK1** creates a desktop icon of the video function on the standby screen.
- The LED lights in green while in the video mode.
- To start recording, or **Side up** → The progress bar will show the ratio of how much you have recorded already.
- While recording, the LED lights in red and the key tones are deactivated.
- Be careful not to cover the mouthpiece of your phone while recording, as it is used as the microphone to record sound along with the video.
- Move the camera to capture the scenes you want → To stop recording, or the **Side up**.
- After the set video file size is reached, the recording automatically stops.
- After recording, **SK1** to replay the recorded video, and **SK2** to send the video file attached to a message.
- While replaying, you can fast forward by pressing or rewind by pressing / again to cancel fast forwarding/rewinding and continue the replay.
- You can discard the recorded video by pressing or **CLR**.
- To save the recorded video, . The recorded video is saved as a 3GPP file in the Videos - My movies folder in My data (see page 60).
- Pressing # before/while playing a video file will enlarge the replay screen size, and pressing # will return the screen size to normal for Sub-QCIF only.

 The default file name for the recorded video saved in the folder is the date, month, year and sequence number.

 For the operations while recording a video, see "Operations when taking a picture" on page 55.

 For the operations while replaying the video, see "Videos (M61)" on page 60.

 If a call comes in while you are checking or saving a video, video storage is cancelled. If this occurs, the next time you select camera function a message appears to say that you have a video that was not stored, allowing you to check and store the video.

 Before recording a video, you can switch to the camera function by pressing **SK1**. This use of **SK1**, however, is invalid if the self-timer function is activated.

Operations when recording a video

 To zoom in and out, ▲ or ▼

 To control the brightness level of the picture, ◀ or ▶

Video recorder Options menu (before recording a video)

No.	Video recorder Options menu (before recording a video)	
1	Shoot environment	Changes the camera settings to suit the conditions. Select from Standard, Person, Room or Darkness.
2	Effect	Applies special effect to the video. Select from Off, Sepia, Monochrome or Negative film.
3	Screen size	Sets the video screen size to Sub-QCIF (128x96) or QCIF (176x144).
4	Video file size	Sets the video file size to Mail size or Normal size.
5	Quality	Sets the video quality to High or Standard.
6	Self timer/Self timer cancel	Activates or deactivates the self-timer function.
7	Self timer sound	Selects the self timer sound from Sound1, Sound2 or Sound3.
8	Videos	Opens Videos in My data.
9	Other settings	Add desktop icon: Creates a desktop icon of the video function on the standby screen. Save in: Selects the folder (preset or created) where the recorded video will be saved. Brightness: Changes the brightness level of the video between -2 and +2. Zoom: Changes the zoom magnification from 1x to 5x for Sub-QCIF and from 1x to 4x for QCIF. Camera: Activates the camera function. Flicker control: Selects 50Hz, 60Hz or Auto to prevent flickers when taking a picture under a fluorescent light.

 Depending on the conditions, some options may be displayed in gray and not be available.

Video recorder Options menu (after recording a video)

No.	Video recorder Options menu (after recording a video)	
1	Save	Saves the currently displayed video.
2	Create message	Creates a new message with the file attached.
3	Set as ring tone	Sets the video as the ringtone.
4	Set as wallpaper	Sets the video to be the main-display wallpaper.
5	Full screen	Selects whether to enlarge the replay screen size.  You cannot use the Full screen function for QCIF.
6	View detail	Displays detailed information on the selected video.
7	Save in	Selects the folder (preset or created) where the recorded video will be saved.
8	Videos	Opens Videos in My data.

 Depending on the conditions, some options may be displayed in gray and not be available.

My data (M6)

Using My data, you can playback sound and MP3 files, or display pictures and videos downloaded from the Internet or captured with the camera function of your phone.

Videos (M61)

In the following section, how to playback video files (videos) stored in your phone is described. You can either record videos using your phone, download them from the Internet, receive them attached to messages. There are two pre-set folders: My Movies and Download.

Replaying the video files

- ▼ 1 or (MENU) 6 1 → Highlight a folder → ○ → Highlight a video file you wish to replay → ○ → The video file will be replayed.
- When the flat view function is activated, the list of folders is not displayed. The list of all the stored video files is displayed.
- If you wish to move to another hierarchy folder, use ◀ and ▶.
- Pressing # on the video preview screen will enlarge the replay screen size, and pressing # again will return the screen size to normal for Sub-QCIF only.
- For the definitions of the icons displayed while replaying, see "Displayed icons" on page viii.

Operations while replaying video

- To stop, SK2
- To pause, SK1 → While pausing, SK1 again to restart and continue the replay.
- To fast forward/rewind ▶ / ◀ → ▶ / ◀ again to cancel fast forwarding/rewinding and continue the replay
- To enlarge the replay screen size, # for Sub-QCIF only
- To adjust the volume, Side keys
- To display the previous/next file, ▲ or ▼
- You cannot fast forward, rewind or enlarge the screen for video files with only sound but no image.

Sounds (M62)

In the following section, how to playback sound files stored in your phone is described. There are three pre-set folders: Download, Preset and Voice memo.

Selecting and playing sound

- ▼ 2 or (MENU) 6 2 → Highlight a folder → ○ → Highlight a sound file you wish to replay → ○
- When the flat view function is activated, the list of folders is not displayed. The list of all the stored sounds files is displayed.
- If you wish to move to another hierarchy folder, use ◀ and ▶

Operations while playing sound

- ☞ To stop, **SK2**
- ☞ To adjust the volume, **Side** keys.
- ☞ To replay the previous/next file, **▲** or **▼**

Pictures (M63)

The Pictures function allows you to display images and animations, which were obtained with the camera function of your phone, received as a file attached to MMS messages, or downloaded from the Internet. The images can also be edited using this function. From the Pictures function you can also attach images and animations to messages you compose. There are five pre-set folders: Photo, Download, Preset, Frame, and Stamp.

Displaying the Pictures view screen

- ☞ **▼ 3** or **(MENU) 6 3** → Highlight a folder → **○** → Highlight an image file you wish to display → **○**
- ☞ To display the previous/next image file, **▲** or **▼**

ℙ When the flat view function is activated, the list of folders is not displayed. The list of all the stored image file is displayed.

ℙ If you wish to move to another hierarchy folder while the Thumbnail view is turned off, use **◀** and **▶**

Cutting the image

- ☞ Highlight or display the image file you wish to edit → **(MENU) 1 3** → Select the image size → A frame indicating the cut area appears on the preview screen.

- ☞ Move the frame position → **○** → **SK1** if the image is favorable

ℙ When you select Free, a cross indicator appears on the preview screen. Move it to the point to start a frame and **○** to confirm the position. Then, expand the frame into the required size and **○** to confirm.

Reducing the image size

- ☞ Highlight or display the image file you wish to edit → **(MENU) 1 4** → Select the image size → **SK1** if the image is favorable

Rotating the image

- ☞ Highlight or display the image file you wish to edit → **(MENU) 1 5** → **SK1** to rotate the image 90 degrees clockwise.
- ☞ Keep pressing **SK1** until the image is at the required angle → **○** to confirm

Decorating the image with stamps

- ☞ Highlight or display the image file you wish to edit → **(MENU) 1 6**
- ☞ To apply a marker stamp, **1** → Highlight the required stamp → **○** → The marker stamp position is displayed in centre
- ℙ** If you wish to preview the highlighted stamp, **SK1**. To display the previous/next stamp, **▲** or **▼**.

- ☛ To apply a text stamp, **2** → Key in the text →  → The text stamp position is displayed in centre.
- ☛ Move the stamp position →  to confirm → The stamp preview is displayed again. Repeat applying if necessary, or  to select another stamp.
- ☛ **SK1** when finished applying the stamp (the stamp preview will not be applied this time).

Adding a frame to the image

- ☛ Highlight or display the image file you wish to edit →  **1 7** → Highlight a frame →  to preview the resulting image → Scroll through the various frames by  and  →  to confirm.

Saving the edited image

- ☛ After any edition, **SK1** or  to save the edited image → Select the Save Quality.
- 📖 **SK1** to check the expected size of the image.
- ☛ Edit the name (if required) → .

Printing an image using a printer

You can print an Exif format image file by connecting your phone to a PictBridge compatible printer using a USB cable.

- 📖 There may be PictBridge compatible printers that cannot be connected to your phone.
- 📖 Refer to the operation manual of the printer for details on the printing.
- 📖 For some printers, an image file name including characters other than alphanumeric characters (e.g. accentuated characters) may cause an error when printing.
- ☛  **3** or  **6 3** → Highlight a folder →  → Highlight an image file you wish to print →  **2 4**
- 📖 "Print via USB" may be displayed in gray and unavailable, depending on the image file.
- ☛ Connect your phone and the printer with the USB cable → Prepare the printer ready for printing, referring to its manual.
- ☛ Check the print detail screen displayed.
 - ☛ To print as seen on the detail screen, **SK1**.
 - ☛ To edit the print detail and then print,  on the print detail screen to display the Options menu → Edit the detail using the Options menu → **SK1**.
 - 📖 The Options menu may change depending on the connected printer.
- 📖 If any interruption or error occurs, or the printing is not completed normally, pull out the USB cable and start again from the first step.

No.	Print via USB Options menu	
1	Number of prints	Sets the number of prints to output.
2	Layout detail	Selects the paper size, paper type and layout to print the image file.
3	Print quality	Selects the required quality of printing.
4	File name	Selects whether or not to print the file name on the paper.

No.	Print via USB Options menu	
5	Date	Selects whether or not to print the date on the paper.

If you want to print multiple images on one sheet, set both the settings for Number of prints and N-up on Layout screen under Layout detail. For example, 4 for Number of prints and 2 for N-up will print 2 sheets with 2 half-sized images per sheet.

MP3 (M64)

In the following section, the procedures to display and play your MP3 files are described. There is one pre-set folder: Download.

Selecting and playing an MP3 file

▼ 4 or 6 4 → Highlight the MP3 file you want to play → .

When the flat view function is activated, the list of folders is not displayed. The list of all the stored MP3 files is displayed.

To create your own playlist, see “MP3 player (M81)” on page 68.

Operations while playing an MP3 file

To stop, **SK2**.

To adjust the volume, **Side** keys.

To replay the previous/next file, **▲** or **▼**.

File selector Options menu

Display the Videos/Sounds/Pictures/MP3 list screen → Highlight a file → .

No.	File Selector Options menu		
1	Edit item	Rename item: Edits the user title or name of the selected file/folder. Set protection: Sets the protection settings of the selected folder or file on/off. Cut: Cuts the selected picture into Sub-QCIF (128x96), QCIF (176x144), Wallpaper (176x220) or Free. Reduce: Reduces the selected picture to fit within Sub-QCIF (128x96), QCIF (176x144) or Wallpaper (176x220). Rotate: Rotates the selected picture. Stamp tool: Adds a marker or text stamp on the selected picture. Frame: Sets a frame to the selected picture. You cannot use the Cut and Rotate functions for SXGA. You can only use the Stamp tool and Frame functions for Sub-QCIF, QCIF and Wallpaper.	

No. File Selector Options menu			
2	Use item (Videos)	Set as ring tone: Sets the selected video to be the ringer tone. Set as wallpaper: Sets the selected video to be the main-display wallpaper. Send via Bluetooth: Sends the selected video through Bluetooth to other devices or a cellphone.	
2	Use item (Sounds)	Set as ring tone: Sets the selected sound to be the ring tone. Set as SMS tone: Sets the selected sound to be the SMS tone. Set as Mail tone: Sets the selected sound to be the Mail tone. Send via Bluetooth: Sends the selected sound through Bluetooth to other devices or a cellphone.	
2	Use item (Pictures)	Set as wallpaper: Sets the selected image to be the main-display wallpaper. Add desktop icon: Creates a desktop icon for the selected image on the standby screen. Send via Bluetooth: Sends the selected image through Bluetooth to other devices or a cellphone. Print via USB: Prints the selected image file using a PictBridge printer via USB cable (see page 62).	
2	Use item (MP3)	Send via Bluetooth: Sends the selected MP3 through Bluetooth to other devices or a cellphone.	
3	Create message	Creates a new message with the file attached.  This function is not available for the MP3 files.	
4	Delete item	Deletes the selected file and folder.	
5	Delete all	Deletes all the files in the current list.	
6	Copy item	Copies the selected file or folder to the selected folder.	
7	Copy all	Copies all the files in the current list to the selected folder.	
8	Move	Moves the selected file/folder or all the files in the current list to the selected folder.	
9	Create folder	Creates a new folder under the current folder.	
0	Storage detail	Displays the current storage information of your phone memory.	
*	View detail	Displays the details of the selected folder or file.  You can also display the details on the highlighted folder or file by pressing * without displaying the Options menu.	

No.	File Selector Options menu		
#	Options	Sorting order: Sorts the files by date or alphabetically. Info column: Sets whether to display the column on the list screen, and the information to be shown there. None: No column showing Size: Approximate size of the file Type: File type  You can also change the information on the column by pressing # without displaying the Options menu. Thumbnail view: Displays the files as thumbnails (for only Pictures). Flat view: Displays the list of all the stored files regardless of the folder hierarchy. Save options: Saves the current option settings. Reset options: Resets the option settings.	

 Depending on the conditions, some options may be displayed in gray and not be available.

 Depending on the size of the data, file selector operation may take a long time.

 Neither protected data nor preset data and folders can be deleted or moved.

Java™ (M7)

You can download Java™ applications (games etc.) from i-mode sites and run them on your phone.

Programs (M71)

How to run software

To run a software (Java™ application), perform the following.

- ☛ (MENU) 7 1 or press and hold SK2 → Highlight an application containing the software you want to run → ○.
- ☛ *When you display the Java™ applications list screen for the first time after downloading a program(s), it may take a while for your phone to verify the program(s). A message will be displayed during this process, and you may activate the program(s) after it is completed.*
- ☛ **After downloading the software, always make sure that you check the downloaded program is displayed in the Applications screen.**
- ☛ *While the software is active, the Java™ operation icon is displayed (see page ix).*

Java™ System menu

- ☛ (MENU) 7 1 → Highlight an application → (MENU)

No.	System menu	
1	Description setting	Selects whether to display the information of the selected application.
2	Delete all	Deletes all the applications.
3	Storage status	Displays the status of Java™ applications currently stored in your phone.
4	Trace info.	Displays the trace information.
5	About	Displays the information of the Java™ system.

- ☛ *Depending on the conditions, some options may be displayed in gray and not be available.*

Application menu

 (MENU) 7 1 → Highlight an application you want to run → SK1

No.	Application menu	
1	Properties	Displays the information of the selected software.
2	Upgrade	Makes an enquiry on whether the selected software has an upgrade. If there is, starts downloading the data.
3	Delete	Deletes the selected software.
4	Network connection	Permits/prohibits the selected software to connect to the network or displays the confirmation message every time you start the selected software.
5	Auto start setting	Enables or disables the automatic start of a complying Java™ application.

 Depending on the conditions, some options may be displayed in gray and not be available.

Prog backlight (M72)

You can set the backlight mode of your phone.

 (MENU) 7 2 → 1 to set your phone to follow the normal backlight setting, or 2 to let the backlight be controlled by the Java™ application.

 If you set your phone to follow the normal backlight setting, the current power save settings will be active (see "Power saving (M15)" on page 24).

 When the software is not running, the backlight operation depends on your phone's backlight settings.

Accessory (M8)

MP3 player (M81)

This feature allows you to create a Playlist to play MP3 files in the order you desire. You can add MP3 files saved in your phone to the Playlist (see "MP3 (M64)" on page 63) or change the order of the MP3 files within the Playlist.

☞ **8 1** → **SK1** to play → After playing, **SK2** to stop.

☞ To change the volume, **Side** keys.

☞ To play the previous/next file, **▲** or **▼**.

☞ When there are no MP3 files saved in the Playlist, the Playlist screen will be displayed in stead of the MP3 player screen.

☞ When you use a wired headset, you can start or stop playing by pressing the button on it, and play the next file by pressing and holding it.

MP3 player Options menu

☞ **8 1**

No. MP3 player Options menu		
1	Playlist	Displays a list of MP3 files in the order in which they are played. ☞ You can save up to 30 MP3 files in the Playlist depending on the size of each file. ☞ The MP3 files that are deleted from MP3 of My data or erroneous MP3 files are displayed in gray and cannot be played. ☞ to display the Playlist Options menu below, or SK1 to add an MP3 file.
		1 Add item Adds an MP3 file in your phone to the Playlist.
		2 Move item Moves the highlighted MP3 file in the Playlist.
		3 Delete item Deletes the highlighted MP3 file from the Playlist.
		4 Delete all Deletes all the MP3 files from the Playlist.
		5 View detail Displays the properties (file name, title, artist name and recording time) of the highlighted MP3 file.
2	Play mode	Normal: Plays all the MP3 files in order from top to bottom of the Playlist once.
		Repeat all: Plays all the MP3 files in the Playlist repeatedly.
		Repeat one: Plays the selected MP3 file repeatedly.
3	Equalizer	Selects from Rock, Jazz, Pop and Off to obtain the desired tone. ☞ The selected Equalizer setting applies to all the MP3 files in the Playlist.
4	Add desktop icon	Creates a desktop icon of the MP3 player function on the standby screen.

☞ Depending on the conditions, some options may be displayed in gray and not be available.

Calculator (M82)

You can perform addition, subtraction, multiplication and division with the calculator. It also has a memory function.



8 2

 The calculator can display a result of up to 9 digits. If a calculation results in a number exceeding the maximum, the screen displays error in the calculation field.

Calculator Key Assignment

For calculator function, the keys are assigned different functions. The following shows the key assignment:

Key	Operation	Key	Operation
	Addition (+)		Subtraction (-)
	Multiplication (×)		Division (÷)
	Equals to (=)	SK2	Memory Store/Memory Addition
SK1	Memory Recall/Memory Cancel (Press twice)		Percent (%)
	Inversion (±)		Exit calculator
	Decimal Point (.)	CLR	Delete digit (if held, all clear)

 Using the % function, you can calculate $(100 + x) \%$ of a figure (e.g. $200 + 5\% = 210$) and $(100 - x) \%$ of a figure (e.g. $200 - 5\% = 190$).

Clock alarm (M83)

This feature enables you to switch the clock alarm function on/off and to set the time, repetition and alarm tone.

Turning the alarm on/off



8 3

Clock alarm setting	
On/Off	Turns on or off the alarm.
Set time	Sets the time and am/pm (for 12 hour format) at which the alarm will sound.
Set alarm tone	Sets the melody to be played when the alarm occurs. See "Sounds (M62)" on page 60.
Alarm repeat	Selects alarm repeat for once, daily or day of the week.  You can select more than one day of the week at the same time.  You can remove the check by highlighting and pressing  again.
Enter alarm text	Sets the message (e.g. Wake up!) which is displayed when the alarm occurs (optional).

 When all settings are done, **SK1** to save the setting.

- The selected melody will be played when the alarm occurs if the ringer is turned on based on the current phone mode. If vibration is turned on, you will be notified of the alarm by vibration.
- Even if the phone has been switched off, the phone automatically switches itself on and sounds the alarm or vibrates at the specified time.
- You can stop the alarm tone or vibration by pressing any key.

Scheduler (M84)

Scheduler enables you to enter reminders and appointments for particular time and date.

Adding a new event

- MENU** 8 4 → Highlight the day → to display the day's schedule list screen (if any) → **SK1**

Scheduler setting	
Event date/time	Sets the day, month, year, time and am/pm (for 12 hour format) of the event.
Event end date/time	Sets the day, month, year, time and am/pm (for 12 hour format) of the end of event.
Description	Sets the event description (optional).
Repeat	Selects repeat for One time only, Daily, Weekly or Monthly.
Reminder	Turns on or off the reminder.
Reminder time	Selects the time to set off the reminder prior to the event start time.
Reminder tone	Associates a reminder tone with an event. You can set the reminder tone only when the Reminder is turned on.
Private	Sets the event as a private event. Place a check mark to set the event as a private event. To set the event as a public event, do not place a check mark.

- When all settings are done, **SK1** to save the setting.

- The selected melody will be played when the scheduled event occurs if the ringer is turned on based on the current phone mode. If vibration is turned on, you will be notified of the event by vibration.
- If the phone has been switched off, the phone does not switch itself on to sound the reminder or vibrate at the specified time.
- You can stop the reminder tone or vibration by pressing any key.
- If the event is a private event, the reminder will sound at the specified time but the entered description will not be displayed. You are prompted to enter the security code to view the details of the private event.

Viewing the scheduled events

- MENU** 8 4 → Highlight a day (**SK1** to display the previous monthly/weekly view screen or **SK2** to display the next monthly/weekly view screen)
- to display the day's schedule list screen (To display the previous/next day's schedule list screen, ◀ or ▶).
- to display the detail screen of the highlighted schedule.

Setting the reminder again

When the scheduler reminder is set off, ◀ or ▶ and **SK2** to select the time to remind again.

Scheduler Options menu

8 4 → Highlight the day → ○ to display the day's schedule list screen (if any) → Highlight the required scheduled event → MENU

No.	Scheduler Options menu	
1	Add new	Adds a new entry.
2	Edit	Edits the highlighted event.
3	Copy	Copies the highlighted event.
4	Delete	Deletes event(s). Press the appropriate keys for the event category (the currently selected event, all the public/private events on the day, all the past public/private events, all the public/private events or all the events) to delete.
5	Go to date	Displays the selected date.
6	Monthly calendar/ Weekly calendar	Switches the weekly view screen to the monthly view screen, or the monthly view screen to the weekly view screen. If you select Sunday or Monday to start the week from "Set start day" on page 21.
7	View summary	Displays the number of used and available entries.
8	View events	Displays the events. Press the appropriate keys for the event category (Public only, Private only or All) to display. If you are required to key in the security code to display the private events or all events.
9	Send via Bluetooth	Sends the selected schedule through Bluetooth to other devices or a cellphone. If Send via Bluetooth function is not available during a call.

If Depending on the conditions, some options may be displayed in gray and not be available.

ToDo list (M85)

This feature allows you to set up to 100 ToDo tasks that should be finished by a certain date. You can choose to display either all ToDo tasks, or those just finished or unfinished. Each task is identified by a description (of up to 256 characters) and its start/due date.

Adding a new ToDo task

8 5 → Highlight the list → ○ → **SK1**

ToDo list setting	
Start date	Sets the day, month and year to start the ToDo task.
Due date	Sets the date to end the ToDo task. Key in the date or press the appropriate key for the date. If you select to key in the date yourself, input the day, month and year of the date to end the ToDo task, then SK1 .
Description	Sets the ToDo task description (e.g. Pay the rent).
Category	Sets the category (Business, Personal or Other).

ToDo list setting (Continued)	
Priority	Sets the priority (Normal, Low or High).
Private	Sets the ToDo task as private.

When all settings are done, **SK1** to save the setting.

When a ToDo task is completed

8 5 → Highlight the list → ○ → Highlight the required ToDo task → ○ → 1 and 1, or **SK2** to save the task as completed.

Viewing ToDo task details

8 5 → Highlight the list → ○ → Highlight the required ToDo task → ○ → To view the details of the previous or next ToDo task in the list, ◀ or ▶

To edit the currently displayed task, **SK1**

ToDo Options menu

To display the ToDo Options menu, 8 5 → Highlight the list → ○ → Highlight the required ToDo task →

To display the ToDo detail Options menu, 8 5 → Highlight the list → ○ → Highlight the required ToDo task → ○ →

Column L shows the ToDo options menu, and column D shows the ToDo detail Options menu.

L	D	ToDo Options menu
1	4	Add new Adds a ToDo task (see "Adding a new ToDo task" on page 71).
–	1	Status Changes the completion status of the highlighted ToDo task.
2	2	Edit Edits the highlighted ToDo task (see "Adding a new ToDo task" on page 71).
3	–	Delete Deletes ToDo task(s). Press the appropriate keys for the ToDo task category (the currently selected ToDo task, all the public/private ToDo tasks, all the completed public/private ToDo tasks or all the ToDo tasks) to delete.
–	3	Delete current Deletes the current ToDo task.
4	–	Display filter Sets the type(s) of ToDo tasks to be displayed by selecting the desired filter option (None, Incomplete or Completed).
5	–	Sort list Displays a list of ToDo tasks rearranged according to the selected sort key (Due date, Category, Priority, or Status).
6	–	View summary Displays the number of Incomplete and Completed tasks and how many more tasks can be created.
7	5	Send via Bluetooth Sends the selected ToDo task through Bluetooth to other devices or a cellphone. Send via Bluetooth function is not available during a call.

Depending on the conditions, some options may be displayed in gray and not be available.

Notepad (M86)

Notepad function allows you to record and store a note as a text file.

Creating a new memo (M861)

 (MENU) **8 6 1** → Key in text →  to save the entry as a text file. The first few words are displayed on the text list screen.

Displaying a memo (M862)

 (MENU) **8 6 2** → Highlight a file → **SK1** to preview, or  to edit

Notepad Options menu

 (MENU) **8 6 2** → Highlight a file → (MENU)

No.	Notepad Options menu	
1	Edit item	Changes the protection settings of the selected file. Rename item: Edits the user title or name of the selected file/folder. Set protection: Sets the protection settings of the selected folder or file on/off.
2	Use item	Add desktop icon: Creates a desktop icon of the selected file on the standby screen. Send via Bluetooth: Sends the selected file through Bluetooth to other devices or a cellphone.  <i>Send via Bluetooth function is not available during a call.</i>
3	Create message	Creates a new message with the highlighted text (note).
4	Delete item	Deletes the selected file or folder if it is unprotected.
5	Delete all	Deletes all the notes unprotected from the list.
6	Copy item	Copies the selected note.
7	Copy all	Copies all the notes.
8	Move	Moves the selected note or all the notes in the current folder to a folder.
9	Create folder	Creates a new folder under the current folder.
0	Storage detail	Displays the current storage information of your phone memory.
*	View detail	Displays the detail of the selected file.  <i>You can also display the details on the highlighted folder or file by pressing * without displaying the Options menu.</i>

No. Notepad Options menu (Continued)	
# Options	Sorting order: Sorts the files by date or alphabetically. Info column: Sets whether to display the column on the list screen, and the information to be shown there. None: No column showing Size: Approximate size of the file Type: File type  You can also change the information on the column by pressing # without displaying the Options menu. Flat view: Displays the list of all the stored files regardless of the folder hierarchy. Save options: Saves the current option settings. Reset options: Resets the option settings.

 Depending on the conditions, some options may be displayed in gray and not be available.

Voice memo (M87)

Voice memo function allows you to record up to 60 seconds of sound/voice, using your phone's microphone.

Recording/playing voice memo or setting speaker

 (MENU) 8 7

No. Voice memo setting	
1 Record	Records a voice memo.  SK1 to start recording.  You can finish recording and save the data as a file by pressing SK2 even before the recording is completed.  To record the conversation during a call, see "Recording a call" on page 11.
2 Play	Plays a voice memo or recorded call.  Highlight a voice memo →  to start playing and SK2 to stop playing.
3 Speaker setting	Selects between speaker and earpiece to play the voice memo.  1 for the Speaker, or 2 for the Earpiece.

 See also: "Sounds (M62)" on page 60.

Currency (M88)

Currency function allows you to convert an amount of money in one currency to another.

Converting currency

 (MENU) 8 8

Currency setting	
From	Sets the source currency code.
To	Sets the destination currency code.
Exchange rate	Sets the exchange rate.  If you wish to change the exchange rate, CLR to delete the displayed exchange rate and key in the required number (for decimal point, SK1) → 
Amount	Sets the amount of money you wish to convert (for decimal point, SK1).

 If you have made a mistake in entering the exchange rate or amount, **CLR** to delete individual number or **SK2** to cancel the entry and return to the previous screen, and then start again.

Resetting the currencies

 (MENU) 8 8 and SK1

Bluetooth (M89)

 (MENU) 8 9

 For details, see “Bluetooth (M89)” on page 76.

Synchronization (M80)

Synchronization function allows you to synchronize data between your phone and your PC. When your phone is connected to your PC via a USB cable, you can synchronize phonebook, scheduler or ToDo list data.

 Data should comply with vCard 2.1/vCalendar 1.0 specification

 You cannot synchronize the phonebook data stored in the SIM card.

 Connect your phone with your PC via a USB cable → Activate the software on PC side and prepare for synchronization (for details, refer to the manuals of the software)

 (MENU) 8 0 → Select the data type (Phonebook, Scheduler or ToDo list) → **SK1** or (MENU) 1 to start synchronization

Bluetooth (M89)

Bluetooth function provides the following services:

- **Dial-up service** - You can use your phone as a modem.
- **Headset/hands-free service** - You can make/receive a call using a Bluetooth headset or hands-free kit.
- **Object push service** - You can send or receive the data (from Phonebook/Scheduler/ToDo list/Notepad/My data (Videos/Sounds/Pictures/MP3)) between your phone and other Bluetooth devices (see "Bluetooth Object Push" on page 78).
- **File transfer service** - You can use your phone as a server while other Bluetooth devices function as a client. This enables the user to browse your phone from other Bluetooth devices (see "Bluetooth File Transfer" on page 79).

☞ When using Bluetooth devices, always refer to their operation manual.

☞ Depending on the connection status, a Bluetooth device may not function correctly. In such a case, retry operation from the device side, or switch your phone off and on.

☞ There may be Bluetooth devices that cannot be connected to your phone.

Bluetooth setting

☞ (MENU) 8 9 1

No.	Bluetooth setting							
1	Bluetooth On/Bluetooth Off	Activates or deactivates Bluetooth function. ☞ If you switch the phone off while Bluetooth On is set, the next time you switch on, the phone will be in Bluetooth On status again. ☞ If your phone is in Bluetooth On status, it will accelerate the battery consumption.						
2	Pair new device	Registers the external Bluetooth devices. <table border="1"> <tr> <td>1</td><td>Search device</td><td>Searches for the nearby active Bluetooth devices.</td></tr> <tr> <td>2</td><td>Wait for connect</td><td> Standby your phone to wait for other devices to search for it. ☞ Other Bluetooth devices can only detect your phone while your phone is displaying Wait for connect screen. </td></tr> </table>	1	Search device	Searches for the nearby active Bluetooth devices.	2	Wait for connect	Standby your phone to wait for other devices to search for it. ☞ Other Bluetooth devices can only detect your phone while your phone is displaying Wait for connect screen.
1	Search device	Searches for the nearby active Bluetooth devices.						
2	Wait for connect	Standby your phone to wait for other devices to search for it. ☞ Other Bluetooth devices can only detect your phone while your phone is displaying Wait for connect screen.						
3	Device list	Displays and edits the list of paired devices.						
4	My phone	Displays the terminal information of your phone. ☞ (MENU) to display the Options menu Rename: Edits the terminal name of your phone. ☞ You cannot edit the information during Bluetooth communication.						
5	Active device	Displays the information on the device in connection.						
6	Disconnect	Ends the Bluetooth connection in progress.						

☞ Depending on the conditions, some options may be displayed in gray and not be available.

Device list Option menu

(MENU) 8 9 1 → 3 (MENU)

No.	Device list Option menu	
1	Rename	Edits the name of the highlighted device.
2	Protect/Un-protect	Protects or unprotects the highlighted device.
3	Delete device	Deletes the highlighted device.
4	Delete all devices	Deletes all the devices listed.
5	View detail	Displays detailed information on the highlighted device.

Device list icons

The following icons will be displayed in the device list screen.



Indicates the device is not registered.



Indicates the device is an audio (a headset or handsfree device).



Indicates the device is a PC.



Indicates the device is a phone



Indicates the device is other than an audio, PC, or phone.



Indicates the device is protected. PC, or phone.



Indicates the device is connected with your phone.

Pairing a Bluetooth device and your phone

(MENU) 8 9 1 → 2 → 1 to search other Bluetooth devices or 2 to be searched by other Bluetooth devices

If the device is found, the list of found Bluetooth devices will be displayed

Highlight the device from the list → → Input passcode of the found Bluetooth device

When pairing, you will be asked to enter a passcode specified by the Bluetooth device to your phone and the device. If no passcode is specified by the device, enter the same arbitrary number to your phone and the device. A passcode is a number from 4 to 16 digits.

Using Bluetooth for voice/modem

To use the Bluetooth headset/hands-free kit or Bluetooth modem, you must perform the Bluetooth pairing with your external device beforehand. For details, refer to the operation manual of the device.



While using the Bluetooth device, the following icons will be displayed in the status bar area of your phone.



Indicates Bluetooth On.



Indicates that Bluetooth is active.

Connecting Bluetooth headset/hands-free kit

When connecting a wired headset and Bluetooth headset at the same time, the wired headset will work partially (only its button will work).

For some Bluetooth devices, the voice recall function may be activated when a paired headset/hands-free kit is turned on (see “Voice recall” on page 9).

Pair the Bluetooth device and your phone beforehand (see “Pairing a Bluetooth device and your phone” on page 77 for details)

8 9 1 → **3** to display the Device list screen → Highlight the headset/hands-free kit in the list → **SK1** or

Using Bluetooth headset/hands-free kit

To answer the incoming call, press the button on the headset/hands-free kit

To switch the headset/hands-free kit call to your handset call during a call, **9**

You cannot deactivate Bluetooth during a call.

To end the call, or end from the headset/hands-free kit

Using your phone as Bluetooth modem

For details of dial-up connection settings, consult your Internet service provider.

Pair the Bluetooth device and your phone beforehand (see “Pairing a Bluetooth device and your phone” on page 77 for details)

8 9 1 → **1** to toggle to Bluetooth On to activate Bluetooth → Perform dial-up connection by your PC

To end the dial-up connection, disconnect from the PC application

You can also end the dial-up connection by pressing **8 9 1 6**

Bluetooth Object Push

You can send/receive the data from Phonebook/Scheduler/ToDo list/Notepad/My data (Videos/Sounds/Pictures/MP3) between other Bluetooth devices.

The maximum data size for the Object push service is 6 MB for MP3 and 1MB or less for other files depending on the file type. Any files too large will be displayed in gray and not be available.

While sending or receiving data via Bluetooth, your phone is automatically placed out of service, so phone call, message and i-mode access are disabled.

Procedures to send data

Phonebook entry (M413...)

You can only send Name, Home, Mobile, Work, Fax, 2 Email addresses and 2 pieces of descriptive information.

Your phone sends data according to the vCard 2.1 specification.

To display the phonebook (Phone), (for required number of times) or **4 1 3** → Highlight a phonebook entry

0 or **3**

Video/Sound/Picture/MP3 (M6...)

6 1 for Videos, **6 2** for Sounds, **6 3** for Pictures or **6 4** for MP3 → Highlight a folder → → Highlight a file

- ☛ **MENU** 2 3 for Videos/Pictures, **MENU** 2 4 for Sounds or **MENU** 2 1 for MP3

Schedule entry (M84...)

- ☛ **MENU** 8 4 → Highlight a date → ○ → Highlight a schedule entry → ○ → **MENU** 9

ToDo entry (M85...)

- ☛ **MENU** 8 5 → Highlight Public, Private or All → ○ → Highlight a ToDo entry → **MENU** 7

Notepad (M862...)

- ☛ **MENU** 8 6 2 → Highlight a note → **MENU** 2 and 2

Sending data

- ☛ If your phone has not previously had access to other Bluetooth devices through Bluetooth object push or file transfer service, after selecting Send via Bluetooth, the phone will start searching other Bluetooth devices → If the device is found, the list of found Bluetooth devices will be displayed → Highlight the device from the list → ○ → The phone starts connecting to the device. If the device accepts the connection, the data will be sent.
- ☛ If your phone has already had access to other Bluetooth devices through Bluetooth object push or file transfer service, after selecting Send via Bluetooth, the screen is displayed asking to send data to the last Bluetooth device the phone had had access to → **SK1** to send data, **SK2** to search other Bluetooth devices

Receiving data

- ☛ **MENU** 8 9 2 to set your phone to receive the data from other Bluetooth device
- ☛ Start sending data from the other end → If the connection is established, the screen appears asking to accept the data → **SK1** to accept, **SK2** to reject
- ☛ If accepted, **SK1** to save the data.
- 📖 *Once the transmission completes, your phone automatically judges the type of received data and stores the data accordingly.*
- 📖 *If your phone does not have enough space to store the received data, a message will be displayed indicating lack of space. In such a case, delete unnecessary data and try again.*

Bluetooth File Transfer

Using Bluetooth connection, you can browse your phone from other Bluetooth devices and transfer data.

This function provides the following services:

- See the file/folder list in your phone.
- Send/receive the file/folder to/from your phone.
- Delete the file/folder from your phone.
- Create a folder in your phone.
- ☛ **MENU** 8 9 2 → The Waiting for data screen is displayed.

 Browse your phone from other Bluetooth device.

-  While using File transfer service to receive the data from other Bluetooth devices, your phone can only accept the data for Notepad or My data (Videos, Sounds, Pictures, MP3).
-  The connection from other Bluetooth devices is accepted only when the Waiting for data screen is displayed.
-  While using File transfer service, your phone is automatically placed out of service, so phone call, message and i-mode access are disabled.

Index

A

AC adapter	3
Accepting an incoming call	7
Access history	45
Accessory	68
ADN	46
Alarm volume	22
ALS	20
Animation	61
Any key answer	20
AoC	12
Auto answer	23
Auto redial	14

B

Bar calls	25
Basic calls & phone use	6
Battery charging	3
Battery level icons	viii, 4
Blacklist	12
Bluetooth	76
Bookmark	45

C

Calculator	69
Call diversion	13
Call lists	12
Call options	11
Call transfer	10
Call waiting and holding	14
Camera	54
Recording a video	57

Taking a picture	55
CB	33
Certificate information	45
CLI	6, 51
Clock	21
Clock alarm	69
Clock selection	23
Clock/Event display	23
Colour style	23
Correcting mistakes	6
Currency	74
D	
Date	21
Date format	21
Demo scroll	23
Desktop icons	18
Dialled calls list	12
Download	34
E	
Earphone setting	22
Earphone type	21
Emergency calls	8
Ending a call	6
External-display	23
F	
Fast dialling	8
FDN	25, 47
File transfer service	76
Flicker control	56, 58
Fold answer	20

Frame	62
Frequency band	15
Function key LED	24
G	
General care	i
Greetings	23
Groups	49
GSM	viii
H	
Hands-free kit	76
Headset	21, 76
Highlight mode	33
Holding a call	9
Homepage	45
I	
Icons	viii, 77
i-mode	34
Certificate information	45
i-mode menu screen	39
i-mode operations	34
i-mode screen	38
IP	45
Mail	45
MMS	45
Site (program)	45
Web page	45
i-mode menu screen	39
i-mode operations	34
i-mode screen	38
Inbox	27

Incoming call No.	23
International dialling codes	15
IP	45
J	
Java™	66
JPEG	54
K	
Key allocations	17
Key tone	22
Keypad shortcuts	viii
L	
Language	21
Last call duration	12
Last number redial	8
LCD	v
LED	21
Line ID	14
Low battery alarm	4
M	
Mail	45
Mail screen	41
Mail server	38
Mail tone	22
Mail tone volume	22
Main menu	x
Main menu style	23
Main-display	23
Making basic calls	6
Meeting mode	21
Menu functions	

Menu shortcuts selection	iv	PIN activate	25	Site (program)	45	Voice volume	20
Message	27	PIN code	5, 24	SMS messages	27	W	
MFi	45	PIN2 code	25	SMS tone	22	Wallpaper	23
Missed calls list	12	Pocket mode	21	SMS tone volume	22	Web page	45
MMS	45	Power saving	24	Stamp	61	Z	
MMS messages	27	Preparing the phone	1	Standby and talk times	4	Zoom	56, 58
MP3 player	68	PUK	24	Standby screen	v	0-9	
Multi-party calls	10	R		Starting a call	6	3GPP	54
Mute	10	Reading a message	28	Start-up	5	4-way navigation key	vi
My data	60	Received calls list	12	STD	6		
MP3	63	Receiving an incoming call	7	Switching the phone off	5		
Pictures	61	Recording a call	11	Switching the phone on	5		
Sounds	60	Redial blacklist	12	Synchronization	75		
Videos	60	Rejecting an incoming call	7	T			
N		Reset settings	26	Text entry	16		
Network selection	15	Ring silencer	20	Mode change	16		
Normal mode	21	Ringer	22	Time	21		
Normal text (ABC) input	17	Ringer volume	22	Time format	21		
Notepad	73	Roaming	15	Timezone	21		
Number type	52	S		ToDo list	71		
Numeric input	17	Saved pages	45	Total calls duration	12		
O		Scheduler	70	T9 English text input	16		
Object push service	76	Scratchpad number	11	U			
One-touch dial	8	SDN	47	Unsuccessful calls	7		
Option mode	30	Security	24	User's manual conventions	iv		
Origin number	52	Security code	24	V			
Own phone number display	8	Service tone	22	Vibrator	22		
P		Settings	20	Video	54		
Parts and functions	vi	Shortcuts selection	x	Recording a video	57		
Phone lock	25	Side key lock	20	View mode	31		
Phone modes	21	SIM card	1	Voice mail	53		
Phonebook	46	SIM card insertion	1	Voice memo	74		
PIM	25	SIM card removal	3	Voice recall	9		