

Copyright Notice

Windows® XP and Windows® 2000 are registered trademarks of Microsoft Corporation in the United States and/or other countries.

This product contains ACCESS Co., Ltd.'s NetFront™ V3.2 Internet browser software.

ACCESS NetFront™

NetFront V3.2 is the trademark or registered trademark of ACCESS Co., Ltd. in Japan and in other countries.

A portion of this software includes software modules developed by the Independent JPEG Group.

You may not alter or reproduce, or remove from this product the Internet browser software contained herein.

Use of the GIF decoder module contained in this product is permitted only as a part of browser software, under a license from Unisys Corporation. For other use, you have to obtain a separate license from Unisys Corporation.

Purchase and/or use of the browser software contained in this product does not authorize your use of any other product or performance of any other method or activity involving use of the LZW patents or GIF technology, unless you are separately licensed in writing by Unisys Corporation.

Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by NEC is under license. Other trademarks and trade names are those of their respective owners.

T9® Text Input is a registered trademark of Tegic Communications Inc.

T9 Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, 6,011,554, and 6,307,548; Australian Pat. No. 727539; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT,NL,PT,ES,SE,GB; Republic of Korea Pat. Nos. KR201211B1 and KR226206B1; and additional patents are pending worldwide.

Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their

counterparts in other nations: 4,901,307, 5,490,165, 5,056,109, 5,504,773, 5,101,501, 5,506,865, 5,109,390, 5,511,073, 5,228,054, 5,535,239, 5,267,261, 5,544,196, 5,267,262, 5,568,483, 5,337,338, 5,600,754, 5,414,796, 5,657,420, 5,416,797, 5,659,569, 5,710,784, and 5,778,338.

Proprietary notice contains Macromedia Flash™ Player technology by Macromedia, Inc., Copyright© 1995-2005 Macromedia, Inc. All rights reserved.

Macromedia, Flash and Macromedia Flash are trademarks or registered trademarks of Macromedia, Inc. in the United States and other countries.

This product features the Macromedia Flash™ Player technology. For further information on the Macromedia Flash Player, visit <http://www.macromedia.com/software/flash/about/>.

i-mode and i-mode logos are trademarks or registered trademarks of NTT DoCoMo.

The specifications and information in this manual are subject to change without notice.

Some contents in this manual may not apply to your phone depending upon the software of the phone or your service provider.

Important Safety Information

Emergency services

To make an emergency call

- Press 112 followed by the **Send** key.

When the USIM card is not inserted or when the dial lock function is on, press 112 and the **SK1 (SEND)** or **Enter** key. Pressing **SK2 (EMRGVCY)** and **SK1 (YES)** is also available on the Home screen.

When the keypad lock is on, press 112 and **SK1 (YES)** or the **Enter** key.

Refer to [page 14](#) and [page 19](#) for further instructions on emergency calls when the key lock is on.

- Ensure that your N600i is switched on and in service. Press the End key to return to the Home screen if needed.*

Follow the instructions and do not end the call until told to do so.

Tell the operator which service you require: Police, Ambulance, Fire Brigade, Coastguard or Mountain Rescue Service. Give your location and, if possible, remain where you are to maintain contact.

The 112 emergency number service is available on every digital network service. Note that these can only be used with a valid USIM.

Due to the nature of the cellular system, connection to emergency calls cannot be guaranteed.

General care

A phone contains delicate electronic circuitry, magnets and battery systems. You should treat it with care and pay attention to the following:

- This phone is fitted with an internal battery that can only be replaced by a qualified service engineer. There is a risk of explosion if the battery is replaced with an incorrect battery type. Dispose of the used battery in accordance with the manufacturer's instructions.
- Do not allow the phone, battery or accessories to come into contact with liquids or moisture at any time. Do not immerse in liquid.
- Do not paint the phone.
- Do not drop, throw or subject the phone to rough treatment.
- Do not place the phone alongside computer disks, credit cards, travel cards and other magnetic media. The information contained on disks or cards may be affected by the phone.
- Do not leave the phone or the battery in places where the temperature could exceed 60 °C, e.g. on a car dashboard or a window sill, behind glass in direct sunlight, etc.
- Do not remove the battery while the phone is switched on.
- Take care not to allow metal objects, such as coins or key rings to contact or short-circuit the battery terminals.
- Do not dispose of batteries in a fire. Dispose of Li-ION batteries at a Li-ION recycling point. For more specific battery and power supply information, see [page 11](#) and [page 13](#).
- Do not put the battery in your mouth, as battery electrolytes may be toxic if swallowed.
- Do not attempt to dismantle the phone or any of its accessories.
- Do not put a battery into a microwave oven, dryer or high-pressure container.
- Do not let the battery come into direct contact with an electric outlet or cigarette lighter charger. Use only authorised charger units.
- Do not pierce the battery with a sharp object such as a needle.
- When the battery is thrown away, be sure it is non-conducting by applying vinyl tape to the (+) and (-) terminals.

- Do not disassemble or modify the battery.
- Do not solder the battery directly.
- Stop using the battery if you detect any abnormalities, such as odour, discolouration or heat during use, charge or storage.
- Do not use the phone with a damaged or misshapen battery.
- In the unlikely event of a battery leak, take care to keep the battery discharge away from your eyes or skin. If the leakage does come into contact with the eyes or skin, please flush thoroughly in clean water and consult a doctor.
- Remove a worn out battery immediately.
- The handset itself may become warm when the handset is used for an extended period of time or when the video functions are used. Also, it may become warm while the battery is being charged.
- When a phone is set to Vibration mode, the vibration can sometimes cause your phone to move. Be careful not to place the phone near heat sources (such as a heater) or too close to the edge of the table.
- Use an anti-static cloth to clean the phone. Do not use an ordinary dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the case.
- Remember to recycle the cardboard packaging supplied with this phone.
- Remember to make backup copies of all important data on your phone.
- Do not leave the battery pack empty or disconnected for a long time, otherwise some data may be initialised.
- Take care not to put your phone in your back pocket and then sit on it. Also, do not put your phone at the bottom of a bag where it may subject to excessive weight or pressure. Doing so may damage the LCD and camera lens and cause them to malfunction.
- Hold the phone away from your ear when you
 - Play video/music on the Multimedia Player

- Play the ringtone through the speaker.

It may damage, or irritate your ears.

Safety

The use of mobile phones is not allowed in some radiation-sensitive areas, such as hospitals, research centres and aircraft. Ensure that you switch off your phone in these areas. If in doubt, remove the battery.

Aircraft safety

Switch off your phone and remove its battery when inside or near an aircraft. The use of phones in aircraft is illegal. It may be dangerous to the operation of the aircraft and it may disrupt the mobile network. Failure to observe this instruction may lead to suspension or denial of mobile network services to the offender or legal action or both.

Do not use the phone on the ground without the permission of the ground staff.

Hospital safety

Switch off your phone and remove its battery in areas where the use of phones is prohibited. Follow the instructions given by the respective medical centre regarding the use of mobile phones on their premises.

General safety

- Observe "Turn off mobile" signs, such as those near petrol stations, chemicals or explosives and switch off your phone.
- If you have a heart condition, be careful with the call vibration or tone volume settings.
- Do not allow children to play with the phone, charger or batteries.
- Do not use the phone where blasting is in progress.

- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if you use a mobile phone next to them. Observe any warning signs and the manufacturer's recommendations.
- Your phone contains metal which may cause a skin irritation, a rash or eczema.

Road safety

- You MUST exercise proper control of your vehicle at all times. Give your full attention to driving.
- Observe all local safety regulations regarding the use of mobile phones while driving.
- Pull off the road and park before making or answering a call.
- You MUST NOT stop on the hard shoulder of a motorway to answer or make a call, except in an emergency.
- Switch off your phone at a refuelling point, such as a petrol station, even if you are not refuelling your own car.
- Do not store or carry flammable or explosive materials in the same compartment as a radio transmitter.
- Electronic vehicle systems, such as anti-lock brakes, speed control and fuel injection systems are not normally affected by radio transmissions. The manufacturer of such equipment can advise if it is adequately shielded from radio transmissions. If you suspect vehicle problems caused by radio transmissions, consult your dealer and do not switch on the phone until it has been checked by qualified approved installers.
- Check if local laws and/or regulations restrict the use of phones while driving.

Vehicles equipped with an airbag

An airbag inflates with great force. Do not place objects, including either installed or portable wireless equipment, in the area over the airbag or in the airbag deployment area. If in-vehicle wireless

equipment is improperly installed and the airbag inflates, serious injury could result.

Third party equipment

The use of third party equipment, batteries, cables or accessories, not made or authorised by NEC, may invalidate the warranty of your phone and also adversely affect the phone's operation.

Service

The phone, batteries and charger contain no user-serviceable parts. We recommend that your NEC phone is serviced or repaired by an NEC authorised service centre. Please NEC for advice.

Efficient use

The phone has an external antenna. For optimum performance with minimum power consumption, please do not cover the external antenna area with your hand. Covering the external antenna affects call quality, may cause the phone to operate at higher power levels than needed and may shorten talk and standby times.

Radio frequency energy

Your phone is a low-power radio transmitter/receiver. When it is turned on, it intermittently receives and transmits radio frequency (RF) energy (radio waves). The system that handles the call controls the power level at which the phone transmits.

Exposure to radio frequency energy

- The phone is designed not to exceed the limits for exposure to RF energy set by national authorities and international health agencies.* These limits are part of comprehensive guidelines and establish permitted levels of radio wave exposure for the general population. The guidelines were developed by independent scientific organisations such as ICNIRP

(International Commission on Non-ionizing Radiation Protection) through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health and to account for any variations in measurements.

- *Examples of radio frequency exposure guidelines and standards that the phone is designed to conform to:
- ICNIRP, Guidelines for limiting exposure to time-varying electric, magnetic and electromagnetic fields (up to 300 GHz)-International Commission on Non-ionizing Radiation Protection (ICNIRP). Health Physics, vol.74. pp. 494-522, April 1998.
- 99/519/EC, EU Council Recommendation on the limitation of exposure of the general public to electromagnetic fields 0 Hz-300 GHz. Official Journal of the European Communities, July 12, 1999.
- ANSI/IEEE C95.1-1992. "Safety levels with respect to human exposure to radio frequency electromagnetic fields, 3kHz to 300 GHz". The Institute of Electrical and Electronics Engineers Inc., New York, 1991.
- FCC Report and Order, ET Docket 93-62, FCC 96-326, Federal Communications Commission (FCC), August 1996.
- Radiocommunications (Electromagnetic Radiation Human Exposure) Standard 1999, Australian Communications Authority (ACA), May 1999.

Copyright Notice

The video/audio recordings you make/download are protected by copyright laws. They are for personal use only and must not be otherwise used without the permission of the copyright owner.

Disposing of your used NEC product In the European Union



EU-wide legislation as implemented in each Member State requires that used electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. *This includes mobile telephones or electrical accessories, such as chargers or*

headsets. When you dispose of such products, please follow the guidance of your local authority and/or ask the shop where you purchased the product.

The mark on the electrical and electronic products only applies to the current European Union Member States.

Outside the European Union

If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority and ask for the correct method of disposal.

Copyright Notice

Important Safety Information PL-1

Contents i

Getting Started 1

Manual conventions	1
Reading the titles	1
Display information	1
Main LCD	1
Sub LCD	2
Overview of Menu functions	2
Keypad operations	4

Introduction 8

Overview of N600i	8
Setting up your N600i	9
How to insert or remove the USIM card or TransFlash memory card	9
To insert the USIM card	10
To insert the TransFlash memory card	10
Charging the Battery	11
To Insert the Battery	11
To Charge the Battery Using the Charger	11
Cautions on charger plug	12
Low Battery Alarm	13
Switching your N600i on and off	13
To Switch On	13
To Switch Off	13
Power Saver	13
Setting the Clock	13
To Set the Clock	13
Entering your PIN Code	13

To Enter your PIN Code	13
Check your own number	14
Locking your N600i	14
To turn the keypad lock on or off	14
To set the side key lock on or off	14

Understanding the Menus 15

Menu functions	15
To display the Main Menu	15
To highlight a Menu option	15
To change the desktop icons or main menu icons	15
Menu options	16
My Menu	16
Home screen	17
Shortcuts	17
Dialing	17
Options	17

Phone (M1) 18

Making a voice call	18
To make a call using the Contact list	18
To make a call from Incoming calls list	18
To make a call from Outgoing calls list	19
To make a call from Missed calls list	19
For emergency calls	19
For speed call	19
For one touch dial	19
For pause dial	19
Receiving a Voice Call	20
To reject the call	20
When you miss a call	20
During a Voice Call	20
To Switch to a Grouptalk	20

To end the call	20	Messages (M2)	25
To put a call on hold	20	Message Services	25
To search the contact list	20	To use SMS message	25
To mute the microphone	21	To create and send a new message	26
To disconnect from a call waiting service	21	To read a message	26
To switch between the active line and the holding line	21	To organise messages	27
To talk handsfree	21	To use iMail/iMMS message	28
To send a message	21	To create and send a new iMail	28
To record a Call memo	21	To create and send a new iMMS	29
To activate Settings	21	To set the iMail/iMMS settings	30
Making a Video Call	22	File manager (M3)	32
Receiving a Video Call	22	Memory/Memory card	32
To make a video call using the contact list	22	Java™ (M4)	34
To Make a video call from Incoming calls list	22	How to run software	34
To Make a video call from Outgoing calls list	22	Java™ Option menu	34
To Make a video call from the Missed calls list	22	Prog backlight	35
To Reject the incoming video call	22	Contacts (M5)	36
During a Video Call	23	Contact Entries	36
To set the handsfree mode	23	To add a new entry to the contact list	36
To zoom in/out	23	To edit an entry stored	36
To turn the microphone on/off (send/not send your voice to the other party)	23	To edit a contact group	37
To turn your camera on/off (send/not send your im- age to the other party)	23	To Copy, Move or Delete the entries	37
To change the screen display mode	23	To display the contact memory status	37
To change the picture quality	23	To write a message from a contact list	37
To change the night mode	23	To send the Contact data	38
To set the contrast mode	23	Multimedia centre (M6)	39
To set the lighting mode	23	Capture	39
To set the call time duration information	23	To take a photo/make a video	39
To adjust the speaker volume	23	Recording sound	40
Call Logs	24	To use the voice recorder	40
		Viewing an image	41

To use the image viewer	41	To Change alarm clock status	60
To view an image file	42	To delete Alarms	60
Playing video and audio	42	Notepad	61
To play a video or audio file	42	To create a new Notepad entry	61
Playlists	43	To edit a Notepad entry	61
External connection (M7)	44	To delete a Notepad entry	61
Bluetooth® (M71)	44	Options	61
To use a Bluetooth device	44	Calculator	62
To register a Bluetooth device	45	To use the calculator	62
Synchronisation	46	To use the currency converter	62
To use Synchronisation	46	Call memo	62
Memory card (M73)	47	To listen to a call memo	62
Settings (M8)	48	To delete a call memo	62
Handset profile (M81)	48	Text Entry	63
Screen settings (M82)	49	To start messaging	63
Calls (M83)	50	To change the input mode	63
Date and Time (M84)	53	Multitap Text (ABC) Input	64
Language (M85)	54	Numeric Input	64
Security (M86)	54	T9® Text Input	64
Network setup (M87)	56	Symbol Input	65
Clear settings (M88)	57	Symbol input menu	65
Toolbox (M9)	58	Multi symbol input menu	65
Scheduler	58	Options	65
To set appointment	58	i-mode	67
To Do	59	Index	68
To add a new To Do task	59		
To edit To Do tasks	59		
To delete To Do tasks	59		
Options	59		
Alarm clock	60		
To Edit an Alarm	60		

Getting Started

Before you start, this section describes the manual conventions, display information and the keypad shortcuts to understand this user manual well. Reading this section first helps you how to use and enjoy N600i.

Manual conventions

The following markers are used throughout the user's manual to attract your attention:


-  This type of paragraph will contain information worth noting.
-  ***This type of paragraph will contain important information.***
-  This type of description will contain procedures to operate your phone.

Reading the titles

Some titles in this manual contain information on how to access the functions. In these titles, M stands for  the numbers indicate the menu shortcut numbers.

Display information

Main LCD

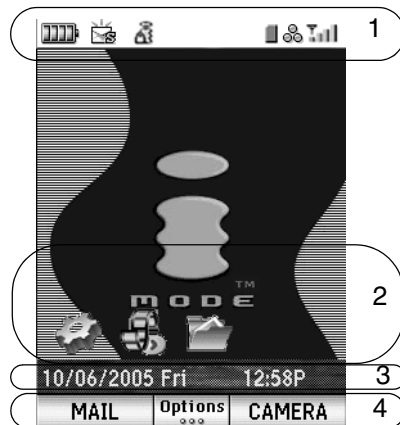

No		
1	Status icon area	Displays the application's status icon.
2	Desktop icon area	Displays the shortcut icons.
3	Helpline area	Displays the date and time, and helpline.
	Softkey area	Displays SK1, SK2 and Options.

 
Sub LCD

N600i is equipped with the sub LCD to view information without opening the main unit. The sub LCD shows the useful information such as the clock display (normal/simple)(see [page 49](#)), the play time while a video or audio file is running (see [page 42](#)), an incoming call or alarm notification and the volume setting.

The following shows the examples for display:


- Example of the clock display

This is a normal sub LCD screen.




- Example of the text display

 This is shown when an event occurs, such as alarm, incoming calls and receiving mails.



- Example of the media player

 This is shown when the media player is performing.



Overview of Menu functions

N600i provides nine main menus on the Menu screen and the following shows the location in this User Manual for your reference.



No	Top menu	2nd level menu	Page
1	Phone (M1)	-	18
2	Messages (M2)	SMS	
		New SMS	25
		Inbox	
		Draft	
		Sent	
		My folders	
		CB message	
		Settings	
		iMail/iMMS	
		Compose iMail	28
		Compose iMMS	
		Inbox	
		Sent	
		Draft	
		Check for new mail	
		Manual retrieval	
		Mail settings	
3	File manager (M3)	Memory	32
		Memory card	
4	Java™ (M4)	-	34
5	Contacts (M5)	Add contact	36
		Handset contacts	
		USIM contacts	
		Manage contacts	37
		Contact groups	
		Other folders	
		Settings	

No	Top menu	2nd level menu	Page
6	Multimedia centre (M6)	Take photo	39
		Make video	
		Record sound	
		View images	
		Play video	
		Play music	
		Play sound	
7	External connection (M7)	Bluetooth	44
		Synchronisation	46
		Memory card	47
8	Settings (M8)	Handset profile	48
		Screen settings	49
		Calls	50
		Date and time	53
		Language	54
		Security	54
		Network setup	56
		Clear settings	57
9	Toolbox (M9)	Scheduler	58
		To Do	59
		Alarm clock	60
		Notepad	61
		Calculator	62
		Call memo	62

Keypad operations

Shortcut keys can help you access some things more easily. The following table shows the keypad operations including shortcut keys that are available and explains what you can use them for in various modes. The word "long" means pressing and holding a key.

Mode	Key	Function
In Home screen	SK1	Displays the iMail/iMMS mail screen
	SK1 (long)	Displays the SMS mail screen
	SK2	Activates the camera function
	SK2 (long)	Activates the video function
	Up	Displays the Handset profile screen
	Down	Displays the Contact list
	Left	Incoming calls list
	Right	Missed calls list
		Outgoing calls list
	Enter	Activates the desktop
	i-mode ()	Displays the i-mode screen
	i-mode () (long)	Displays the JAVA application list
	(MENU)	Displays the Main menu
	 (long)	Power off
	0 (long)	Enters + for international call
	Options	Displays the Options menu list
In Menu screen	SK2	Displays the My Menu screen
	*	Sets the keypad lock to On
	#	Sets the side key lock to On/Off

Mode	Key	Function
While dialling	SK1	Makes a video call to the entered number
	SK2	Saves the entered number to the contact list
	UP	Moves the cursor up
	Down	Moves the cursor down
	Left	Moves the cursor to the left
	Right	Moves the cursor to the right
		Makes a voice call to the entered number
	i-mode ()	Activates the browser
	(MENU)	Displays the Main menu
		Returns to standby mode
	 (long)	Power off
	CLR	Deletes one digit
	CLR (long)	Repeats deletion
	0 (long)	Enters + for international calls
	# (long)	Enters p (pause)  This function is not available in cases that no numbers are pressed or # will be entered right after p .
	Options	Displays the Options menu list

Mode	Key	Function
While receiving	SK1	Answers the call
	SK2	Ignores the call
	UP	Turns the ringtone volume up
	Down	Turns the ringtone volume down
		Answers the call
	 (long)	Switches handsfree on/off
		Rejects a call
	 (long)	Rejects a call and turns the power off
	Options	Displays the Options menu list
	CLR	Mutes the ringtone
During a call	Other than above	Answers a call (when Any key answer is on)
	SK1	Holds the call
	SK2	Displays the Contact list
	Up	Turns the volume up
	Down	Turns the volume down
	Left	Incoming calls list
	Right	Missed calls list
		Outgoing calls list
	 (long)	Switches handsfree on/off
	i-mode 	Activates the browser
		Displays the Main menu/ My Menu
		Ends the call
	 (long)	Ends the call and turns the power off
	0 (long)	Enters + for international calls
	Options	Displays the Options menu list

Mode	Key	Function
Text entry using multitap mode	SK1	Switches to numeric mode (and, if pressed again, switches to T9® mode)
	SK2	Cancels text editing
	Options	Displays the Options menus
	Enter	Completes text editing and closes the text editing screen
		Returns to the Home screen
		Discards the text and closes messages
	 (long)	Power off
	CLR	Characters remain in the text box: Deletes one character to the left of the cursor No character is in the text box: Cancels the deletion and returns to the saved data
	CLR (long)	In Delete mode: Continues deleting backward from the cursor In Backspace mode: Continues deleting forward from the cursor
	0-9 (long)	Enters 0-9
	1	Inserts basic symbols
	0	Inserts a space, 0 or basic symbols
	#	Displays the symbol menu
	# (long)	Displays the multi symbol menu
	*	Specifies the character and switches between lower case, shift and caps lock mode
	* (long)	Activates the Copy/Cut/Others function

Mode	Key	Function
Text entry using T9® mode	SK1	Switches to Multitap mode (and, if pressed again, switches to numeric mode) A last candidate is displayed: Goes to Multitap mode temporarily (and returns to T9 mode by entering a space or pressing the Right key)
	SK2	No unconfirmed entry: Quits text editing Unconfirmed entry: Displays the next T9 combination Last combination(3/3): Returns to the first(1/3) combination
	Options	Displays the Options menu
	Enter	No unconfirmed entry: Completes text editing Unconfirmed entry: Enters the current T9 candidate
	*	Switches between the upper case and lower case.
	⏏	Discards the text and closes messages
	⏏ (long)	Power off
	CLR	Characters remain in the text box: Deletes one character to the left of the cursor No character is in the text box: Ends the text entry screen
	CLR (long)	In Delete mode: Continues deleting backward from the cursor In Backspace mode: Continues deleting forward from the cursor
	0-9 (long)	Enters 0-9
	0	Inserts a space

Mode	Key	Function
Text entry using T9® mode	#	Displays the symbol menu
	# (long)	Displays the multi symbol menu
	*	No unconfirmed entry: Specifies the character and switches between lower case, shift and caps lock mode Unconfirmed entry: Changes the highlighted word between ABC, Abc and abc formats
	* (long)	Activates the Copy/Cut/Others function
Text entry using numeric mode	SK1	Switches to T9® mode (and then, if pressed again, switches to Multitap mode)
	SK2	Cancels text editing
	Options	Displays the Options menus
	Enter	Completes text editing and closes the text editing screen
	⏏	Discards the text editing and closes the message function
	⏏ (long)	Power off
	CLR	Characters remain in the text box: Deletes one character to the left of the cursor No character is in the text box: Cancels the deletion and return to the saved data
	CLR (long)	In Delete mode: Continues deleting backward from the cursor In Backspace mode: Continues deleting forward from the cursor
	0 (long)	Inserts +


Mode	Key	Function
Text entry using numeric mode	#	Displays the symbol menu (Depend on each input field)
	# (long)	Displays the multi symbol menu
	* (long)	Activates the Copy/Cut/Others function

Introduction

Your N600i combines a wide range of features in a technologically advanced phone, capable of operating on UMTS (Universal Mobile Telecommunication System), also known as 3G, GSM (Global System for Mobile Communications) or 2G and GPRS (General Packet Radio Service) or 2.5G.

Overview of N600i

3G allows much greater data speeds than 2G/2.5G networks and enables you to make video calls, send multimedia messages, view photos and videos and much more.

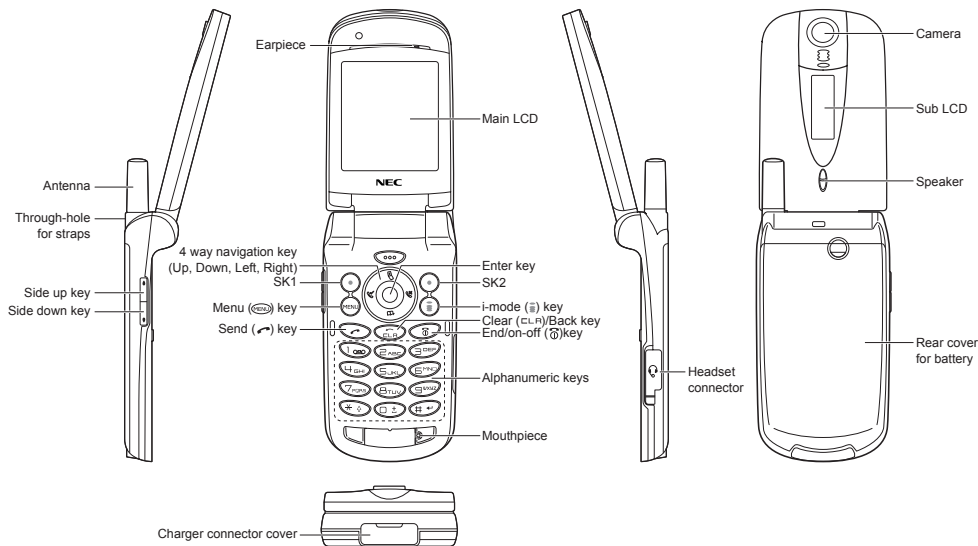

Setting up your N600i

This section explains how to prepare your phone for use. Before you use your phone you must do the following:

- Insert a valid USIM (Universal Subscriber Identity Module) card
- Insert the TransFlash™ memory card
- Charge the battery
- Set the date and time

TransFlash memory card is shipped with N600i.

How to insert or remove the USIM card or TransFlash memory card

Your N600i includes the USIM card that must be inserted into your phone, and TransFlash memory card that is used as an external storage media.


TransFlash package includes an adapter with which you can transfer the data in TransFlash to PC.

The USIM card and TransFlash memory card holders are located underneath the battery. If the USIM card is removed, then the phone becomes unusable until a valid USIM is inserted.


-  **Always disconnect the charger and other accessories from your phone before inserting and removing your USIM card.**
-  **Ensure that the power is off. If the power is on, press and hold  until power is off.**
-  **Handle with care for insertion or remove of the USIM card and TransFlash memory card**

The following diagram shows how to Insert/remove the USIM card or TransFlash memory card. Look at carefully and follow this instruction.

-  Slide and remove the battery cover.

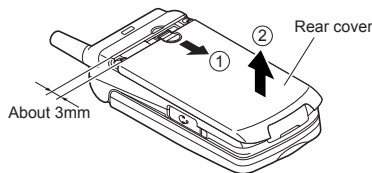


-  If the battery is inserted, remove this.

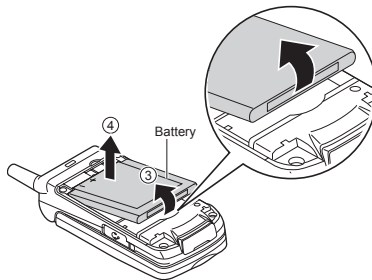

To insert the USIM card


- Insert the USIM card into the USIM card holder and slide the card forward until you hear the locking clip click.
- When removing the card, slide it downward with the locking clip pushing down (6)

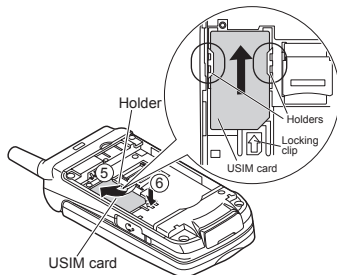


- Make sure that the USIM card is properly inserted (gold plated contacts facing down, and notch to the right).*

To insert the TransFlash memory card

- To insert the TransFlash memory card, slide the metal cover forward and lift open.

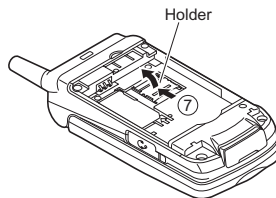


- Insert the TransFlash memory card with the gold plated contacts facing down.

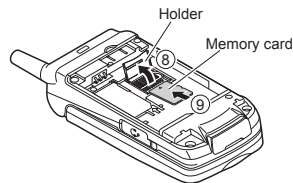


- Make sure that the TransFlash memory card is properly inserted.*

- Lower the metal cover on the memory card, and slide downward to lock it.

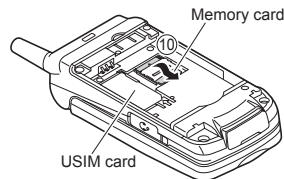

- Do not force close the metal cover leaving any interspace between the cover and the memory card, or the TransFlash memory card may be damaged.*

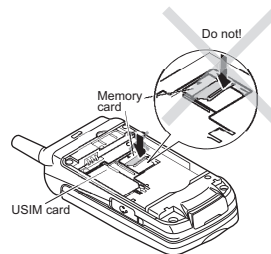


Charging the Battery


To Insert the Battery

When fitting the battery, face the outside cover of the battery towards you. Place the top of the battery into position and push the lower section of the battery into place.

- ➡ Set the battery.

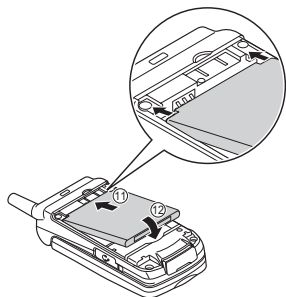

- ➡ Return the battery cover.

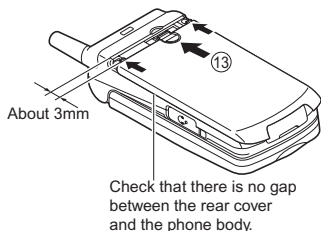

- 👉 **Handle with care for setting the battery.**

You can charge the battery whenever you wish without affecting the performance of the phone.

- 🔋 Your N600i automatically switches off if the battery charge is too low.
- 🔋 Batteries have a life cycle. If you find that the amount of times you have to charge the battery is increasing dramatically, the battery life may be coming to an end. Use only the NEC original or approved batteries. Unapproved batteries can impair the performance of the phone and invalidate the warranty.
- 🔋 When the battery is not being used for a long period of time, remove it from your N600i and store in a cool, dry place.
- 🔋 A battery that has not been used for a long period of time needs to be completely discharged and then recharged two or three times before reaching full capacity.


To Charge the Battery Using the Charger

- ➡ Insert the battery into the phone (see **To Insert the Battery** in this section).
- ➡ Connect the charger plug to your N600i charger connector.
- ➡ Plug the charger into a mains socket. The LED indicator on your N600i lights up while charging is in progress and goes off when charging is completed.
- ➡ After charging is completed, unplug the charger from the charger connector.
- 🔋 When the phone is being used, the battery level may decrease even if the phone remains connected to the charger.
- 🔋 The battery must be charged at room temperature. Ensure that your phone is switched off. If the phone temperature is high, wait until it returns to a normal temperature.
- 🔋 The recommended battery charge time is approximately two hours.
- 🔋 Stop charging the battery if charging is not completed within five hours. Remove the charger from the phone and connect it again to restart the charging.
- 🔋 The LED indicator may take a few minutes to light up after the phone starts charging an empty battery.


Cautions on charger plug

 Do not wrench the charger plug (AC adapter) when you plug or unplug it. Otherwise damage may occur on the charger plug or your N600i.

Correct

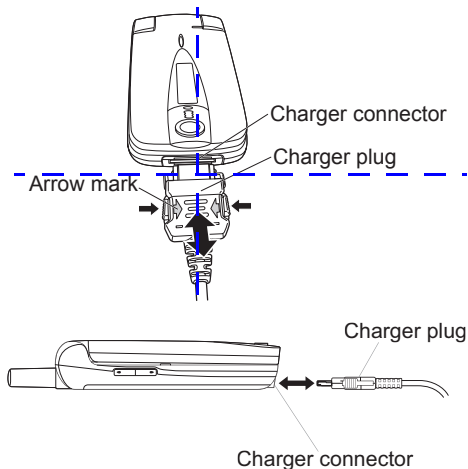

Incorrect

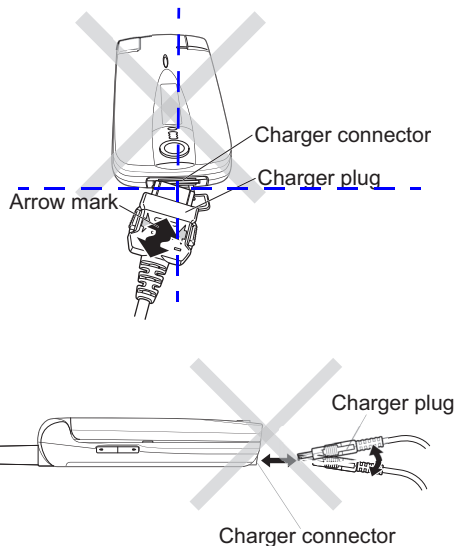

 Make sure to connect or disconnect the charger plug (AC adapter) in the following manner: Press and hold the latches on both sides of the charger plug and push or pull gently and vertically from the charger connector.

 Handle with care for the charger plug.

Low Battery Alarm

The battery power has 4 levels and is indicated by the following icons,



Battery level 1



Battery level 2



Battery level 3



Battery level full

When the battery power becomes lower, the battery level 1 icon (red) appears. After a while a beep sound also warns you.



When the battery runs out, the above image appears and blinks. There also sounds an audible alarm. The phone switches off automatically afterwards. If the low battery alarm occurs during a call, the call will be disconnected after approximately 60 seconds.

The volume level of the low battery alarm depends on the settings of the ringtone volume on standby and the earpiece volume during a call.

Switching your N600i on and off

To Switch On

After inserting the USIM card (see [page 9](#)) and the inserting/charging the battery (see [page 11](#)), press the  key until the phone switches on (approximately two seconds).

To Switch Off

In Standby mode, press and hold the  key until the phone powers down. There may be some delay while the phone switches off. Do not attempt to switch the phone on again during this time.

Power Saver

The power saver function turns the screen off when the phone is left idle for a certain period of time. You can turn the screen back on by pressing any key.

Setting the Clock

When using your N600i for the first time you are prompted to set the current date and time.

To Set the Clock

- Press the MENU key, select the Settings icon, select Date and time and Set date and time.
- Enter the current date and time. Refer to Date and time on [page 53](#) for details.

Entering your PIN Code

If you want to secure information in your phone, you can activate your PIN code so that the phone cannot be used without entering the PIN as you switch on your phone. (For information about how to activate PIN codes, refer to Security on [page 54](#).)

 PIN1 and PIN2 numbers are usually supplied with your USIM card. If not, or you have lost them, contact your local representatives.

To Enter your PIN Code

- Ensure that your USIM card is in your N600i and that the battery is charged.
- Press and hold the  key until power is on.
- If the Password screen is displayed, enter your PIN1. The code you enter appears as asterisks (*).

 If you make a mistake while entering your PIN, delete the wrong number by pressing the  key.

- Press the **SK1 (OK)**.
If you are connecting onto another network, the name of another operator appears.

Check your own number

To check your own number, press the **Menu** key and press 0 from the Home screen.

Locking your N600i

N600i provides you with the key lock function which prevents your phone from being used except for answering voice/video calls (see [Security \(M86\)](#)).

When your phone is locked, you cannot switch it off. Remember to unlock it first.

To turn the keypad lock on or off

- Press **(MENU)** and the * key to set the keypad lock on.
- When your phone is locked, press **(MENU)** and the * key to set the keypad lock off.

The following animation prompts you to unlock the key.



For emergency calls, see [For emergency calls \(page 19\)](#).

To set the side key lock on or off

- Press **(MENU)** and the # key to set the side key lock on.
- When side key is locked, press **(MENU)** and the # key to set the side key lock off.

Understanding the Menus

This section describes how to use the menus.

By selecting icons, menus, submenus, options menus or building your own shortcuts, you can access the numerous functions and their settings.

- **Icon list**

An icon is a graphic image that links to a category of functions or a particular function.

- **Menu list**

Your N600i's functions are reached through a system of menus. You can select a menu item by scrolling up or down and pressing the **Enter** key. Alternatively, press the item's corresponding number. If there are more than nine items in a menu, not all of the choices are visible on the same screen. You can scroll up or down to view the next screen. You can reach the main menu by pressing the MENU key.

- **Options menu list** (Press **Options** when available.)

This is a dynamic menu. That is, the options available depend on the function you are using. The **Options** menu indicator (three white dots appear below the time display at the bottom, centre of the screen) shows when an Options menu is available. Press **Options** to access the menu.

Menu functions



Home screen



Menu screen

To display the Main Menu


- Press (MENU)

You can switch the Home screen to the Menu screen by pressing (MENU), and the Menu screen to the Home screen by pressing (1) or the CLR key.

To highlight a Menu option

- Press the 4-way navigation key (**Up**, **Down**, **Left** and **Right**) or the icon ID number (1 to 9).

To change the desktop icons or main menu icons

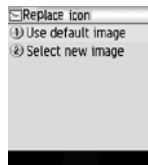


- Press SK1 (**Replace**) and select 1 (**Menu skin**) on the Menu screen.
- Select 2 (**Select new image**) and set your favorite image from **My photos**.
- If you want to change to the default icons, select 1 (**Use default image**).

Menu options

For your understanding, setting the wallpaper is described as an example.



- Press **MENU** to display the Menu screen.
- Use the **Up**, **Down**, **Left** and **Right** keys to highlight **2 (Settings)**. Whenever an icon is highlighted it has a box around it and the icon name appears at the bottom of the display.
- Press the **Enter** key and the **User settings** menu is displayed.
- Use the **Up** and **Down** keys to highlight **2 (Screen settings)** and press the **Enter** key, or, alternatively press **2**.

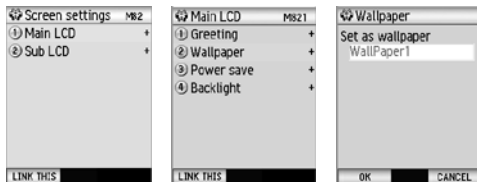

- Select and press **1 (Main LCD)** to go to the **Main LCD** screen.
- Use the **Up** and **Down** keys to highlight **Wallpaper** and press the **Enter** key, or, alternatively press **2**.
- Press **SK1 (OK)** and the image is set as wallpaper and the screen returns to the **Screen settings** list menu.

My Menu



My Menu

You can create shortcuts to an application or a function that you frequently use on the Home screen or in the **My Menu** screen. Whenever you can create a shortcut to an application/function, the **Link this** menu is available on **SK1**. From **SK1**, you can select where to add the shortcut, on the Home screen (**Add to Home**) or in the **My Menu** list (**Add to My Menu**).

• Home screen shortcut

You can also create shortcut icons to applications/functions on the Home screen. Pressing the **Enter** key followed by the 4-way navigation keys (**Up**, **Down**, **Left** and **Right**) on the Home screen highlights the shortcuts. Press the **Enter** key to select the highlighted shortcut to activate the application/function.


• My Menu

My Menu is your customised list of shortcuts to applications/functions. Pressing the **MENU** key twice on the Home screen or pressing the **SK2 (My Menu)** on **Main Menu** displays the **My Menu** screen. Highlight the required shortcut by pressing the **Up** and **Down** keys and then press **Enter** key to activate the application/function.

*You can create shortcuts and also delete items 1 to 8 on the **My Menu** screen.*

*The **My Menu** screen varies depending on the region.*

Home screen

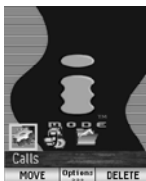


You can activate various functions and settings and customise your Home screen. You can do the following from the Home screen.

Shortcuts

- To activate a Home screen shortcut
Press the **Enter** key on the Home screen. Use the navigation keys to move to the desired shortcut and press the **Enter** key to select.
- To move a Home screen shortcut
Select the Home screen shortcut, press **SK1 (Move)**. Highlight the new place and press **SK1 (Place)**.
- To delete a Home screen shortcut
Select the Home screen shortcut, press the **SK2 (Delete)**.

Dialing

- To paste the copied phone number onto the Home screen (dialler is activated)
After you copy a phone number, return to the Home screen and press **Options** and select **Paste**.
The copied phone number is pasted on the dialler.
- To save the input/copied phone number in Contact list
After you input/copy a phone number on the Home screen, press the **SK2 (Add)**.
- To send a message to the input/copied phone number
After you enter/copy a phone number, press **Options** and select **Send** message.

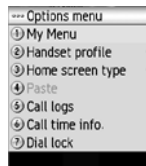

Options

- To access My Menu
Press **Options** and select **1 (My menu)** menu. See [My Menu](#) in this section.
 - To change the active phone profile
Press **Options** and select **2 (Handset profile)**, or press the Up key on the Home screen. Select a profile option. See [Handset profile \(M81\) \(page 48\)](#) in [Settings \(M8\)](#) for details.
 - To set the Home screen type
Press **Options** and select **Home screen type**. Select **Standard** or **Show calendar** (the monthly view calendar).
 - To display the call logs
Press **Options** and select **5 (Call logs)**. See [Call Logs \(page 24\)](#) in [Phone \(M1\)](#) for details.
 - To display call time information
Press **Options** and select **6 (Call time info.)**. Select an item to display the desired information. See [Calls \(M83\) \(page 50\)](#) in [Settings \(M8\)](#) for details.
 - To set the dial lock function
Press **Options** and select **7 (Dial lock)**. See [Locking your N600i \(page 14\)](#) or [Security \(M86\) \(page 54\)](#) for details.
-  To turn the key lock on/off, press **(MENU)** and the # key. See [Locking your N600i \(page 14\)](#) for details.



Choose any one to start **Phone**.

- **MENU 1**
- Select **1 (Phone)** on the Menu screen to press the **Enter** key.
- Press the phone number on the Home screen.

N600i provides you with the **voice call** and **video call** services. This section guides you how to make/receive a voice/video call through the following step by step:

- **Making a voice call**
- **Receiving a Voice Call**
- **During a Voice Call**
- **Making a Video Call**
- **Receiving a Video Call**
- **During a Video Call**
- **Call Logs**

- Ⓜ Video call is only available in 3G coverage.
- Ⓜ When using the headset, you can start/end a voice call using the switch on the microphone.
- Ⓜ When the USIM card installed in your N600i supports the SIM toolkit, the **USIM card** menu icon is displayed instead of the **Phone**.



Making a voice call



- **MENU 1 (Phone)** or press the phone number on the Home screen.
- Enter the phone number using the keypad.
 - Ⓜ To correct mistakes, press the **CLR** key briefly to delete the last number or press and hold the **CLR** key to clear all the numbers.
- Press **☎** to start the call.
- Press **⏏** to end the call.
 - Ⓜ Pressing **☎** or **⏏** is the final operation to start or end the call for every steps in this section.

To make a call using the Contact list

- **MENU 5 (Contacts)** to display the contact list. Search and select the addressee's phone number.
 - Ⓜ You can press the **Down** key on the Home screen as well.
 - Ⓜ See **Contacts (M5)** for details.

To make a call from Incoming calls list

- Press the **Left** key on the Home screen to display Incoming calls.
- Select the phone number on the list.
 - Ⓜ You can also press **Options** on the Home screen, and press **5 (Call logs)**, then **2 (Incoming calls)**. See **Incoming calls (page 24)** for details.

To make a call from Outgoing calls list

- Press on the Home screen to display Outgoing calls. Select the phone number on the list.
- You can also press **Options** on the Home screen, and press **5 (Call logs)**, then **1 (Outgoing calls)**. See [Outgoing calls \(page 24\)](#) for details.

To make a call from Missed calls list

- Press the **Right** key on the Home screen to display Missed calls. Select the phone number on the list.
- You can also press **Options** on the Home screen, and press **5 (Call logs)**, then **3 (Missed calls)**.
- See [Missed calls \(page 24\)](#) for details.

For emergency calls

Even if the phone is locked, you can make emergency calls only to the designated numbers. Follow the steps below to make emergency calls while the key lock is set. Your N600i is unlocked temporarily for the emergency call. (For details about the key lock, see [Locking your N600i \(page 14\)](#) or [Security \(M86\) \(page 53\)](#).)

When the **Keypad lock** is turned on,

- Enter the emergency number 112 and the confirmation screen is displayed.
- Press **SK1 (YES)** to make an emergency call or **SK2 (NO)** to cancel a call.

The screen below is displayed until you enter the designated emergency number correctly.



When the **Dial lock** or **Auto lock** is turned on,

- Enter the emergency number 112 and the emergency call screen is displayed.
- Press **SK1 (SEND)** or the **Enter** key to make an emergency call, or **SK2 (CANCEL)** to cancel a call.
- Besides 112 input, pressing **SK2 (EMRGY)** and **SK1 (YES)** is also available on the Home screen.

For speed call

- Enter a contact memory number from 2 to 99 and press to call the phone number registered for the memory number in the main unit (not the USIM card).
- To turn on/off the speed dial function, press to select **Settings, Calls, Advanced settings**, and then select **Speed dial**.
- If more than one phone number is registered for a memory number, the first number is used to make a call.
- See the [Calls \(M83\) \(page 50\)](#) section in [Settings \(M8\)](#) for details.


For one touch dial

- Pressing and holding a key from 2 to 9 calls the number registered in the One touch dial list.
- To register or edit the number in the One touch dial list, press to select **5 (Contacts)**, **7 (Settings)**, and **1 (One touch dial)**. You can register phone numbers to 2 to 9 in the list. Voicemail number is preset as 1 and cannot be moved or deleted.

For pause dial

- Enter the phone number, then press and hold # to insert a pause (displayed as **P**).
- Input the numbers to call, inserting pauses where necessary. Press to dial the input numbers. When the other party answers the call, the next number is automatically dialed in 3 seconds. Then, all succeeding numbers are automatically dialed every 3 seconds.

Receiving a Voice Call

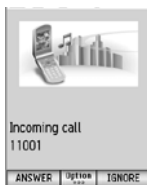

- Press **SK1 (ANSWER)** when you receive a voice call.
- You can also answer a call by pressing **Options** and **1 (Answer call)** when receiving a voice call.
- When **Any key answer** function is activated, you can press any key to answer the call except **SK2 (IGNORE)**, **(MENU)**, **i-mode** (**Ⓜ**) key, **Up** or **Down** key (including the side key), the **CLR** key, **⏏** and **Options**. (See the section of **Calls (M83)** (page 50); **Any key answer**: (page 50) for details.)
- When **Active flip** function is activated, you can answer the call only by opening your N600i. (See the section of **Calls (M83)**; **Active flip**: (page 50) for details.)
- When the Calling Line Identification (CLI) function has been activated by the caller, the registered image is displayed. (See the section of **Calls (M83)**; **Portrait Display**: (page 52) for details.)
- When the headset is connected, pressing the headset switch also answers the call.


To reject the call

- Press **⏏**, **SK2 (IGNORE)** or **2 (Ignore call)** in the **Options** menu while receiving a call.

When you miss a call

- If you miss a call, it is shown as a missed call by an icon on the Home screen. The missed call is saved to the Missed calls list. When you display Missed calls, the icon disappears.

During a Voice Call

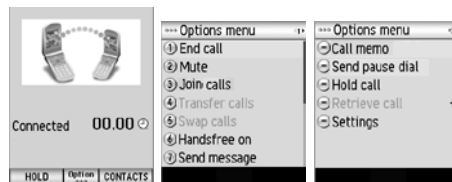

Depending on the conditions, some options may be greyed out and not be available

To Switch to a Grouptalk

(When there are six calls on-line and 7th call are held call)

- Press **Options** and **Join calls**.
- Press **Options**, **Drop** or **Split Call**. Pressing the **SK1 (SPLIT)** splits the selected caller from the Grouptalk and the **SK2 (DROP)** drops the selected caller from the Grouptalk.

To end the call

- Press **⏏** to end the call.
- Pressing **Options** to select **1 (End call)** is available.

To put a call on hold

- Press **SK1 (HOLD)** or press **Options**, while talking, to select **Hold call**. The call will be put on hold.
- Options** menu contains 2 pages. Use the **Right/Left** key to go to the other page.
- To retrieve the call, press **SK1 (RETRIEVE)** or press **Options**, while holding, to select **Retrieve call**.

To search the contact list

- Press **SK2 (CONTACTS)** to display the **Contacts** list.
- See **Contacts (M5)** for details.

To mute the microphone

- Press **Options** and select **2 (Mute)**.
 - To adjust the earpiece volume, press the **Up** and **Down** key (including the side key) to adjust the volume while on a call.

To disconnect from a call waiting service

- Press **Options** and select **4 (Transfer calls)**.
 - If you have two lines connected (one is active and another one is holding), using this function enables you to disconnect two lines and to connect for these two lines.

To switch between the active line and the holding line

- Press **SK1 (SWAP)** or select **5 (Swap calls)** from the **Options** menu.
 - You can switch between the active line and the holding line.

To talk handsfree

- Press **Options** and select **Handsfree on**.
The speaker turns on and you can talk handsfree.

To send a message

- Pressing **Options** and select **7 (Send message)** enables you to send the message.


To record a Call memo

- Press **Options** and select **Call memo** to start recording the conversation.
- To stop the recording, press the **Enter** key.
 - Both your voice and the other party's voice are recorded. (20 seconds max.) Five call memos can be recorded in the phone. A call memo is displayed with its date and time of recording

 **Always ask the other party's permission to record.**

 You cannot attach call memos to messages.

To activate Settings

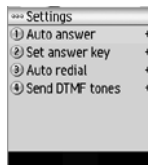

- Press **Options** and select **Settings** to change the following functions during talking:
 - Auto answer:**
Sets **On** or **Off** for automatic answering.
 - Set answer key:**
Selects **1 (Use any key)** or **2 (Send key only)** as the call answering key.
 - Auto redial:**
Sets **On** or **Off** for automatic redial.
 - Send DTMF tones:**
Sets **On** or **Off** for sending the Dual Tone Multi Frequency (DTMF) signals.

Making a Video Call

When making a Video Call to a Video Capable phone, follow the steps below:

- Press **MENU** **1 (Phone)** on the Menu screen or to enter the phone number and press **SK1 (VID. CALL)**.

You can enter the phone number on the Home screen as well.

- Hold the camera towards you and talk. Adjust the camera position if necessary.

Handsfree is set by default for video calls.

- Press **END** to end the call.

For setting the options of video calls, see [Video calls \(page 51\)](#).

Receiving a Video Call

- Press **ANSWER** or **SK1 (ANSWER)** to answer and send the captured image from the active camera to the other party.

You can also answer a video call by pressing **Options** and **1 (Answer (video))** or **2 (Answer (no video))**.

To answer the video call without sending your image, press the **SK2 (NO VIDEO)**. The alternative photo is sent to the other party.

To make a video call using the contact list

- Press **MENU** **5 (Contacts)** on the Menu screen to display the Contact list.

You can press the **Down** key on the Home screen as well.

- Search and select the addressee's phone number.
- Press **SK1 (VID. CALL)** to dial the phone number.

To Make a video call from Incoming calls list

- Press the **Left** key on the Home screen to display Incoming calls.

You can also press **Options** on the Home screen, and press **5 (Call logs)**, then **2 (Incoming calls)**.

- Search and select the addressee's phone number.
- Press **SK1 (VID. CALL)** to dial the phone number.

To Make a video call from Outgoing calls list

- Press **OUTGOING** on the Home screen to display Outgoing calls.
- Search and select the addressee's phone number.
- Press the **SK1 (VID. CALL)** to dial the phone number. (However, only a voice call is made for emergency numbers.)

To Make a video call from the Missed calls list

- Press the **Right** key on the Home screen to display Missed calls.

You can also press **Options** on the Home screen, and press **5 (Call logs)**, then **3 (Missed calls)**.

- Search and select the addressee's phone number.
- Press **SK1 (VID. CALL)** to dial the phone number.

To Reject the incoming video call

- Press **END** or press **Options** and select **Ignore**.

During a Video Call

To set the handsfree mode

- Press **Options**, **Other settings** and select **Handsfree on** or **Handsfree off**.
- When the handsfree option is on, the microphone sensitivity increases, and the other party's voice can be heard from the speaker.

To zoom in/out

- Press the **Right** key to zoom in or the **Left** key to zoom out.

To turn the microphone on/off (send/not send your voice to the other party)

- Press **SK1 (MUTE/UNMUTE)** to switch the microphone on and off.
- Alternatively, press **Options**, **Other settings** and **Mute settings**. Select **Mute** or **Unmute**.

To turn your camera on/off (send/not send your image to the other party)

- Press **SK2 (SHOW ME)** to switch the camera on. When the camera is on, press **SK2 (IN/OUT)** to switch the camera direction.
- Alternatively, press **Options**, and then select either **Use live video** or **Use photo instead** (whichever is displayed).

To change the screen display mode

- Press **Options**, **Other Settings** and then **Screen** mode. Select **My side is smaller** (to display your image on the smaller window), **My side is larger** (to display your image on the larger window), **Other side only** (to display only the other party's image) or **My side only** (to display only your image).

Pressing **SK2 (IN/OUT)** is also available to change the screen mode during a video call.

To change the picture quality

- Press **Options** and **Picture quality**. Select **Standard**, **Better picture** (image quality has the priority) or **Faster movement** (capturing movement has the priority).

To change the night mode

- Press **Options** and **Night mode on** or **off**.

To set the contrast mode

- Press **Options** and **Contrast** settings. Select any from the following:
 - Much brighter**
 - Brighter**
 - Standard**
 - Darker**
 - Much darker**

To set the lighting mode

- Press **Options** and **Lighting** settings. Select **Sunny**, **Cloudy**, **Automatic** or **Indoors**.


To set the call time duration information

- Press **Options**, **Other settings** and **Show call length**. Select **Show call length** or **Do not show**.

To adjust the speaker volume

- Press the **Up** and **Down** keys.

Call Logs

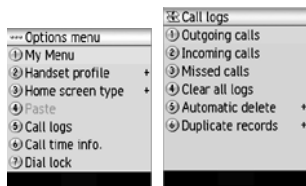

- Press **Options** on the Home screen to select **5 (Call logs)**.

Call logs are lists of call records such as incoming/outgoing/missed calls. Up to 20 entries are saved in each call log. You can make a call using these logs, and do the following from **Call logs** on the **Options** menu.

No	Call logs	
1	Outgoing calls	Displays the calls you made. Pressing on the Home screen is also available to see this menu.
2	Incoming calls	Displays the calls you received. Pressing the Left key on the Home screen is also available to see this menu.
3	Missed calls	Displays the calls you missed. Pressing the Right key on the Home screen is also available to see this menu.
4	Clear all logs	Deletes all the call log data.
5	Automatic delete	Sets the automatic deletion function Enable/Disable . This function automatically deletes the call logs when you switch off the phone.
	Duplicate records	Selects whether to allow multiple records to/from the same number to be made on the log or not. Select Allow or Do not allow .

If you miss a call, it is shown as a missed call by an icon on the Home screen. After you display **Missed calls** the icon disappears.

Depending on the conditions, some options may be greyed out and not be available

You can do the following operations when displaying the call records (outgoing/incoming/missed calls). On a call record, press **Options**.

No	Options menu	
1	Send message	Activates the message function.
2	Delete this record	Delete the highlighted call record.
3	Clear this log	Deletes all the call records on the log.
4	Clear all logs	Deletes all the call log data.
5	Use number	Enters the phone number of the record you select on the Home screen. You do not need to press the same number again. You can make a call to the phone number by pressing .

Depending on the conditions, some options may be greyed out and not be available



Choose any one to start **Messages**.

- ➡ (MENU) **2**
- ➡ Select **2 (Messages)** on the Menu screen to press the **Enter** key.
- ➡ Press SK1 (**MAIL**) on the Home screen.

To use SMS message

➡ (MENU) **2 (Messages)** to open the **Messages** screen.

✎ You can switch between SMS and iMail/iMMS using the SK1 key.

SMS



Message Services

N600i provides the following three message services:

- **SMS**

This service allows you to send short messages (160 half-pitch characters max.) to one or more phone numbers. To send an SMS message, the destination phone number must be a mobile phone with an SMS service subscription.

- **iMail**

This service allows you to send a message to not only other mobile phones but also to PCs and other devices that uses Email addresses. You can attach files from Pictures, Videos and Sounds in My data. Mail facility is available from the Mail screen under the i-mode facility. For details on the mail service, see [page 28](#).

- **iMMS**

This service allows you to send messages of a slideshow of text and multimedia files. When you receive an MMS message, you will be notified by a message from the MMS centre. You can either automatically or manually receive the contents of an MMS message. MMS facility is available from the Mail screen under the i-mode facility. For details on the mail service, see [page 28](#).

✎ For how to enter texts, see [Text Entry \(page 63\)](#).

No	Messages	
1	New SMS	Allows you to create the SMS message.
2	Inbox	Displays the received message list.
3	Sent	Displays the sent message list.
4	Draft	Displays the incomplete message list.
5	My folders	Display a list of folders to store the messages. You can create up to 10 folders.
6	CB message	Displays the Cell Broadcast message list. ✎ The Cell Broadcast (CB) messages such as weather, reports and news are distributed from the network. ✎ Broadcast message is a network-dependent service. Please contact your local provider for details.
7	Settings	Change the message settings.

✎ Depending on the conditions, some options may be greyed out and not be available.

- Press 7 (**Settings**) on the **Messages** screen and the following menus are available

No	Settings	
1	Communication	
	1 Status report	Sets to send the status report or not. Request report and No report request are available.
	2 Validity period	Selects the period of time SMS is stored on the server while trying to deliver the SMS message.
	3 SMS centre	Edits the SMS message centre address. This address is saved in the USIM card.
	4 SMS over GPRS	Sets GPRS or GSM to transmit SMS.
2	Edit	
	1 Signature setting	Turns the automatic signature insertion function on/off and edits the signature.
	2 Quote indicator	Edits the quoted reply mark.
3	View	
	1 Scrolling	Selects the number of lines scrolled when you press the Up or Down key.
	2 Font size	Sets the font size (Large , Medium , Small).
4	CB settings	
	Broadcast message is a network-dependent service. Please contact your local provider for details.	
	1 Index settings	Sets up to 6 indexes for the CB messages.
5	CB language	Selects the language for the CB message.
	Reset settings	Clears the settings set under Settings .

To create and send a new message

- Press 1 (**New SMS**) or **SK2 (NEW)** on the **Messages** screen, and follow the steps below:
 - 1 Select the addressee field on the **New message** screen and press the **Enter** key to display the address list screen.
 - Press the **Enter** key to put the addresses, or choose **Options** to select Open Contacts for entering the phone numbers from the **Contacts**. (Up to 5 addresses are available for entries.)
 - 2 Select the text entry field to enter the message and press the **Enter** key.
 - 3 Press the **SK1 (SEND)** to send the message. The message is sent and saved in the **Sent** folder.

To set the addressee from the contact entries; Press the **SK2 (FIND)** on the addressee entry box and select the addressee's phone number.

To save an unfinished and unsent message; Press the **SK2 (SAVE)**. The message is saved in **Draft**.

To read a message

- Press **(MENU) 2 (Messages)** and select **2 (Inbox)**. Follow the steps below:
 - 1 Select the message.
 - 2 Press the **Enter** key and the message contents are displayed.
- To filter the received messages by a condition; Press **Options** and select **7 (Filter view)**. the following options are available: **Show all**, **Read messages**, **Unread messages**, **USIM card**, **Handset memory**, **Send failed**, **Unsent**.
- To sort the messages; Press **Options** and select **6 (Sort messages)**. You can use **By date**↑ (date ascending), **By date**↓ (date descending), **By address**↑ (address ascending), **By address**↓ (address descending).
- To move a message; Select the message and press the **Options** to select **3 (Move message)**. Select the move destination (USIM card memory is available.), and then press the **Enter** key.

-  To delete a message/all messages:
Select the message on the **Inbox** screen and press the **SK2 (DELETE)**. Press the **SK1 (YES)** to delete the message. Or select the message on the **Inbox** screen and press **Options**. Select **4 (Delete)/5 (Delete all)** and press the **Enter** key.
-  To call back to the sender of an SMS message;
Display the SMS message, press **Options** and select **5 (Call sender)**.
-  To make a call to a phone number in the message text;
Select the message, press the **Enter** key to display the message. The phone number is highlighted. (If there is more than one phone number, highlight using the **Up** and **Down** keys.) Press the **Enter** key, and select a voice or video call. Then the phone number is displayed on the screen. You can make a voice or video call after pressing **SK1 (YES)** on the confirmation screen.
-  To display a URL in the message text
Select the message to press the **Enter** key to display the message text. The URL is highlighted. Press **Options** to select **7 (Use the selection)**, then **4 (Open in browser)**.
-  To display status reports; (**Sent** folder only)
Press **Options** and select **6 (View report)**.

To organise messages

When the memory allocated for the message function is full, your N600i cannot receive new messages until you move or delete the old messages. Therefore, to prevent the message memory from being full, we recommend that you regularly move the messages to USIM, or delete unnecessary messages.

Creating folders

To manage your message data, create folders under **5 (My folders)**. You can move the messages in **Inbox** to a new folder and rename the folder to indicate the category (e.g. Business, Family or Friends). Also, you can set addresses to a folder, to automatically distribute the received messages from the specified addresses.

-  To create a folder under **My folders**, start the SMS message service. ( **2 (Messages)**), pressing **SK1** twice on the Home screen or selecting **4 (SMS)** after pressing **i-mode** ( key) Follow the steps below:

- 1 Select **5 (My folders)**.
- 2 Press the **SK1 (NEW)** to create a new folder, and then enter the folder name.

Moving messages

Moving is permitted from USIM to the phone.

-  In iMail/iMMS message service, when a message without the message text downloaded is included in the moving target, an error message is displayed and the operation fails. Or when attachments are not downloaded first, a confirmation message is displayed before the operation.

Deleting folders/messages

To delete a folder, select the folder and press the **SK2 (DELETE)** or press **Options** and select **Manage folders, Delete folder**.


To delete the whole folder, select a folder, press **Options** and select **Delete folder**.

To use iMail/iMMS message

- Press **SK1 (MAIL)** on the **Messages** screen.
- Or press the **i-mode** () key on the Home screen and **2 (Mail)**.

 You can switch between SMS and iMail/iMMS using **SK1**.

iMail/iMMS

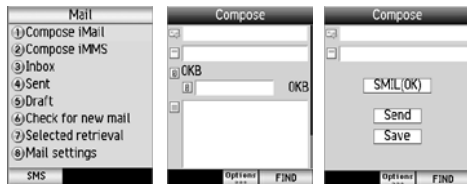

Compose iMail

Compose iMMS

No	Messages	
1	Compose iMail	Allows you to create the iMail message.
2	Compose iMMS	Allows you to create the iMMS message.
3	Inbox	Displays the received message list.
4	Sent	Displays the sent message list.
5	Draft	Displays the incomplete message list.
6	Check for new mail	Checks whether a new mail is coming.
7	Selected retrieval	Sets to receive the iMail/iMMS message manually.
8	Mail settings	Change the settings

To create and send a new iMail

- Press **1 (Compose iMail)** and follow the steps below to create a new iMail.

1 Set the addressee.

- Highlight the **To** field to press the **Enter** key. Put the key in the destination and press the **Enter** key.

- To refer to the **Contacts**: Press **Options** and **Open Contacts** to retrieve the destination

- To send the mail to more than one addressee; Press **Options** and **3 (Add address)** on the **Compose** screen.

2 Key in the subject.

- Highlight the **Subject** field and press the **Enter** key. Put the key in the subject and press the **Enter** key.

3 Key in the message.

- Highlight the **Message** field and press the **Enter** key. Put the key in the message and press the **Enter** key.

4 Attach a file if necessary.

- Highlight the Attachment field and press the **Enter** key. Select a file to attach from the My data screen

 You can attach files up to 299 KB in total, or 10 files.

 To send the mail, highlight **Send** and press the **Enter** key.

 To save the mail, highlight **Save** and press the **Enter** key.

 To delete the currently edited mail, press **Options** and **Delete text**.

- Press **Options** under the **Compose iMail** menu and the following menus are available.



Depending on the conditions, some options may be greyed out and not be available

No	Settings	
1	Send	Sends the mail.
2	Save	Saves the mail being edited to the draft folder.
3	Add Address	Adds one address input field (To) and displays the sub menus (1 to 6).
	1 Open Contacts	Adds the destination directly from the phonebook.
	2 Enter Address	Allows direct input of the address.
	3 Change to To	Changes the address status to TO .
	4 Change to Cc	Changes the address status to Cc .
	5 Change to Bcc	Changes the address status to Bcc .
	6 Remove address	Deletes the address input field or information.
4	Address menu	Displays the same menu as Add Address for the highlighted address.
5	Attachment menu	
	1 Attach file	Attaches a file to the mail.
	2 Attach bookmark	Attaches bookmarks.
	3 Remove attachment	Deletes the attached file.
	4 Open file	Plays or displays the attached file.

No	Settings	
6	Attach signature	Attaches a signature.
7	Delete text	Deletes the message of the mail being edited.
8	Delete mail	Deletes the new mail currently edited.

To create and send a new iMMS

Press **2 (Compose iMMS)** and follow the steps below to create a new iMMS.

To send the mail, highlight **Send** and press the **Enter** key.

To save the mail, highlight **Save** and press the **Enter** key.

Press **Options** under the **Compose iMMS** menu and the following menus are available.

No	Settings	
1	Send	Sends the mail.
2	Save	Saves the currently created MMS.
3	Add address	Adds one address input field (To) and displays the sub menus (1 to 6).
	1 Open Contacts	Adds the destination directly from the phonebook.
	2 Enter Address	Allows direct input of the address.
	3 Change to To	Changes the address status to TO .
	4 Change to Cc	Changes the address status to Cc .
	5 Change to Bcc	Changes the address status to Bcc .
	6 Remove address	Deletes the address input field or information.

No	Settings	
4	Address menu	
	1 Open Contacts	Adds the destination directly from the phonebook.
	2 Enter Address	Allows direct input of the address.
	3 Change to To	Changes the address status to TO .
	4 Change to Cc	Changes the address status to Cc .
	5 Change to Bcc	Changes the address status to Bcc .
5	6 Remove address	Deletes the address input field or information.
	Attachment menu	
	1 Attach bookmark	Attaches bookmarks.
	2 Remove attachment	Deletes the attached file.
6	Delete mail	
	Deletes the message.	

To set the iMail/iMMS settings

- Press **8 (Mail settings)** on the **Mail** screen and the following menus are available

No	Settings	
1	Communication	
	1 Auto receive	Sets to receive the iMail/iMMS message automatically. If this option is set, Selected retrieval is set to off.
	2 Selected retrieval	Sets to receive the iMail/iMMS message manually. On/Off options are available and if this option is set to On , Auto-receive is set to off.
	3 Get attachment	Sets to receive the attachment files. Image, Audio, Video and PIM are available.
2	Edit	
	1 Edit signature	Turns the automatic signature insertion function on/off and edits the signature.
	2 Edit quotation	Edits the quoted reply mark.
3	View	
	1 Scrolling	Selects the number of lines scrolled when you press the Up or Down key.
	2 Font size	Sets the font size (Large, Medium, Small).
	3 List display	Sets to display the subject in 1 line and the address and name in 1 or 2 lines.
	4 Folder security	Sets the password to the folder.
	5 Auto play	Sets the Audio, Video and SMIL files to play automatically.
	6 Pasted data	Sets to enable or disable the JAVA data attached to the received mail.
4	Check settings	
	You can check the iMail/iMMS message settings.	

No	Settings	
5	Reset settings	Clears the settings set under Settings .

File manager (M3)



Choose any one to start **File manager**.

- ➡ (MENU) 3
- ➡ Select 3 (**File manager**) on the Menu screen to press the **Enter** key.

You can manage all of your captured and downloaded files from the **File manager** function.

You can run files that have supported formats, copy, move, delete and sort them as well as previewing image files (thumbnails), showing file properties, creating shortcut and attaching files to messages. In addition, you can create uniquely-named folders to manage the files.

Memory/Memory card

The following shows the folders under **Memory** or **Memory card** (TransFlash memory card) and the information that may help your file management.

ℹ N600i provides two memory storage places, **Memory** and **Memory card**, and each has the following folders.

No	Memory/Memory card	
1	Video files	Stores the downloaded and captured video files. Five user folders can be created under Video files with up to 100 files. My videos is the default folder.
2	Image files	Stores the downloaded and captured image files. Five user folders can be created under Image files with a total of 100 files. My photos is the default folder.
3	Music files	Stores the downloaded audio files. Five user folders can be created under Music files with up to 100 files.
4	Sound files	Stores the downloaded and captured voice files.
5	Other files	Stores the downloaded files with formats other than the above four types of files. Text files are stored here too. (You can activate the viewer by selecting a text file.) Up to 100 files can be stored under this folder. No user folders can be created in this folder. vCalendar and vCard files are also stored in Other files.


To manage your files, the following options are available.

No	Options menu	
1	Send as message	Sends the highlighted file attached to a message.  Downloaded files with copyrighted settings cannot be sent from the phone.
2	New folder	Creates a new folder in the selected folder: Video files/Image files/Music files/Sound files/Other files . The default folder name starts "New".  Folder names must be unique.
3	Rename	Renames the file/folders. Two options are available; one can be edited by users and the other can automatically be renamed with the contents title for the audio/video files.  Up to 127 single-byte characters can be used for a file name. For a folder name, up to eight single-byte characters can be specified.  You cannot rename files that are with copyrighted settings.
4	Copy	Copies the highlighted file/multiple files/folders to another folder.  Up to 100 files can be selected at one time.
5	Move	Moves the highlighted file/multiple files/ to another folder.  Maximum of 100 files can be selected at one time.
6	Delete	Deletes the highlighted file/multiple files/folders.  Up to 100 files can be selected at one time.  When an open file is included in the selected files to delete, the delete operation does not complete.

No	Options menu	
7	File properties	Displays the file information of the highlighted file: date, size, title (displayed if any), file name (always displayed), attribute, copy permission, message transfer permission and play restriction information.
8	Switch memory	Switches between Handset and Memory card .
9	Sort files	Sorts the files in order of file name (By name), date (By date) and file size (By size). (Files are displayed in file name order by default.)
10	Thumbnails	Switches to/from list display (Show list) or thumbnail (Show thumbnail) display.
11	Memory status	Displays the amount of free/used memory space in the handset in bytes.
12	link this	Create shortcut on the Home screen and in the My Menu list. Select Add to Home or Add to My Menu . Pressing SK1 (LINK THIS) on the list screen also creates a shortcut for the selected file.



Depending on the conditions, some options may be greyed out and not be available

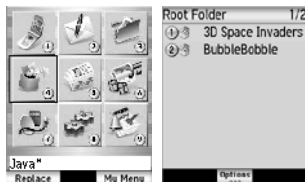

Choose any one to start **Java™**.

- ➡ (MENU) 4
- ➡ Select 4 (Java) on the Menu screen to press the **Enter** key.

You can download Java™ applications (games etc.) from i-mode sites and run them on your phone.

How to run software

To run a software (Java™ application), perform the following.

- ➡ Press (MENU) 4 (Java). Highlight an application containing the software you want to run and press the **Enter** key.

📖 When you display the Java™ applications list screen for the first time after downloading a program(s), it may take a while for your phone to verify the program(s). A message will be displayed during this process, and you may activate the program(s) after it is completed.

👉 **After downloading the software, always make sure that you check the downloaded program is displayed in the Applications screen.**

👉 **Do not remove the battery while the software is running as data to that point may not be saved.**

📖 While the software is active, the Java™ operation icon is displayed.

Java™ Option menu

If an application is highlighted, the following options are available for use.

- ➡ Press **Options** on the **Java** menu.

No	Menu	
1	Create Folder	Displays the text box to prompt an input for the new folder name.
2	Move To Folder	Displays the folder list screen to select the destination folder.
3	Upgrade	Upgrades an application.
4	Delete	Deletes the selected application.
5	Delete All	Deletes all applications and all folders.
6	Sort	Displays the menu screen to select the sort criteria.
7	Properties	Displays the property screen.
8	Certificate	Displays the certificate screen.
9	Network Setting	Displays the network connection setting screen.
10	i-Appli To Setting	Displays iAppliTo setting screen.
11	Icon Info Setting	Displays the icon information setting screen.
12	AutoStart Setting	Displays the automatic start setting screen.
13	Show Desc Setting	Displays the ADF setting screen.
14	AutoStart Failure	Displays the record screen for the automatic start failure.
15	Trace Info	Displays the trace information screen.
16	System Info	Displays the system information screen.

👉 **Depending on the conditions, some options may be greyed out and not be available.**

If a folder is highlighted, the following options are available for use.

 Press **Options** on the **Java** menu.

No	Menu	
1	Create Folder	Displays the text box to prompt an input for the new folder name.
2	Delete Folder	Deletes the selected folder.
3	Rename Folder	Renames the selected folder.
4	Delete All	Deletes all applications and all folders.
5	Sort	Displays the menu screen to select the sort criteria.
6	Show Desc Setting	Displays the ADF setting screen.
7	AutoStart Failure	Displays the record screen for the automatic start failure.
8	Trace Info	Displays the trace information screen
9	System Info	Displays the system information screen.

 *Depending on the conditions, some options may be greyed out and not be available*

Sort menu is as follows.

 Press **Options** on the **Java** menu.

No	Sort	
1	Name (Ascending)	Sorts by name. (ascending order)
2	Name (Descending)	Sorts by name. (descending order)
3	Execute Time ↑	Sorts by recent execution date and time. (ascending order)
4	Execute Time ↓	Sorts by recent execution date and time. (descending order)

No	Sort	
5	Create Time ↑	Sorts by downloaded date and time. (ascending order)
6	Create Time ↓	Sorts by downloaded date and time. (descending order)
7	Used Memory ↑	Sorts by application size. (ascending order)
8	Used Memory ↓	Sorts by application size. (descending order)
9	Execute Count ↑	Sorts by executed counts. (ascending order)
10	Execute Count ↓	Sorts by executed counts. (descending order)

 *Depending on the conditions, some options may be greyed out and not be available*

Prog backlight

You can set the backlight mode of your phone.

-  If you set your phone to follow the normal backlight setting, the current power save settings will be active
-  When the software is not running, the backlight operation depends on your phone's backlight settings.



Choose any one to start **Contacts**.


- (MENU) 5
- Select 5 (**Contacts**) on the Menu screen to press the **Enter** key.

This section describes how to work with **Contacts**.

Contact Entries

Up to 500 entries can be registered in the handset contact list. Up to 254 entries can be read from the USIM contact list, depending on your USIM card.

To add a new entry to the contact list

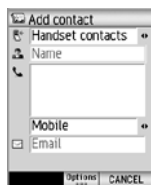


- Press 1 (**Add contact**) on the **Contacts** screen.
- You can also open the **Add contact** screen by pressing **Options** on the **Handset contacts** or **USIM contacts** screen.
- To start **Handset contacts** or **USIM contacts**, press 2 (**Handset contacts**) or 3 (**USIM contacts**) on the **Contacts** screen
- Or press **Down** on the Home screen, then **Options** and select **Add contact**.
- Fill in data on the displayed **Add contact** screen and press **SK1 (OK)**. The data you entered is saved as a contact entry.

➤ **Add contact** provides the following fields to be entered:

- Folder field to be stored:
Handset contacts (500 entries max.)
USIM contacts (254 entries max.)
Own no. (10 entries max.) for your phone number
Mailbox (4 entries max.) for voice/video mail centre
Ignored (100 entries max.) for call rejection
Fixed (30 entries max.) for call restriction
- Name field
- Phone number and type field
- Email address field

To edit an entry stored

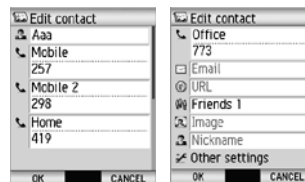

- Press 2 (**Handset contacts**) or 3 (**USIM contacts**) on the **Contacts** screen.
- You can also choose the folders from 6 (**Other folders**) which provides **Own no.**, **Mailbox**, **Services**, **Ignored** and **Fixed**.
- Select the entry and press **Options**.
- Pressing the **Enter** key twice is also available after selecting the entry.
- Edit the profile and press **SK1 (OK)**.

To edit a contact group




- Press **5 (Contact groups)** on the **Contacts** screen and select a contact group name to press **SK1 (EDIT)**.

You can edit data only when containing one or more entries in one group.

- Fill in the profile data.


You can edit the group name, set a group image and select ringtones, illumination color and vibration patterns for incoming voice calls, video calls or messages from a member of that group.

To Copy, Move or Delete the entries

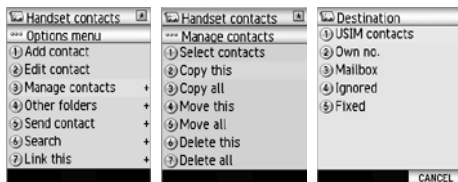


- Choose the folder (**Handset contacts**, **USIM contacts** or **other folders**) containing the entry to be handled, and select it to press **Options**.
- Select **3 (Manage contacts)** and choose any one you want to perform from **2 to 7**.
- Select the destination folder to copy or move the entry, and press the **Enter** key.
- If you want to perform **Copy all**, **Move all** or **Delete all**, pressing **4 (Manage contacts)** is also available.

To display the contact memory status

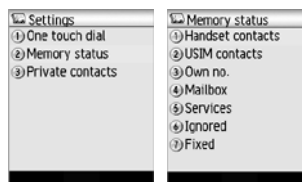


- Press **7 (Settings)** and select **2 (Memory status)**.
- Select any one you want to check the status from **1 to 7**.

To write a message from a contact list

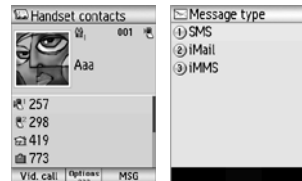

- Select the entry then press the **Enter** key.
- Highlight the phone number or email address and press **SK2 (MAIL)**. You can send the message by SMS, iMail or iMMS.

To send the Contact data

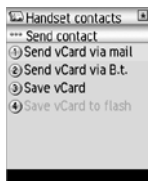

- ☑ Select the entry.
- ☑ Press **Options** to select **5 (Send contact)**, and choose a message type you want to send from 1 to 4.
- ☞ *You can only send contact data which is stored on the Handset contacts list.*

The following shows the data that you can enter under a name in the **Handset contacts** or **USIM contacts** lists

☞ Upper and lower cells describe Handset contacts and USIM contacts, respectively.

No	Add contact	
1	Name	(32 single-byte characters max.)
		Can be registered, edited and deleted.
2	Nickname	(32 single-byte characters max.)
		-
3	Image	One image file
		-
4	Phone number	Up to four phone numbers (32 digits max. for each) Up to 33 digits can be entered per phone number when it includes the international code "+".
		One or two phone numbers (This item can be registered, edited and deleted.)
5	Email	Up to 3 email addresses
		☞ Though an email address can contain up to 90 single-byte characters when you register the Contact entry, it is limited to 50 single-byte characters when you send video calls.
6	URL	Only one email address with up to 90 single-byte characters
		One homepage address (256 single-byte characters max).
7	Handset groups	-
		Choose from 16 groups

Multimedia centre (M6)



Choose any one to start **Multimedia centre**.

- (MENU) **6**
- Select **6** (**Multimedia centre**) key on the Menu screen to press the **Enter**.

This section describes how to use multimedia centre on your N600i to capture and play back multimedia files. You can also use it to play back files that have been downloaded or sent to you.

Capture

To take a photo/make a video

- (MENU) **6** (**Multimedia centre**) or press **SK2** (**CAMERA**) on the Home screen.
- Press **1** (select **Take photo**) to take a photo, or press **2** (select **Make video**) to make video.
- Press **SK1** to switch between **Photo** and **Video**



Take photo

Make video

- To start recording, press the **Enter** key.
- To turn the zoom function on/off, press the **Right** or **Left** key.
- To adjust the exposure rate, press the **Up** or **Down** key.

- To stop recording, press the **Enter** key again.

➤ The capture complete screen appears. You can do the following from this screen.

- Press **SK1** (**SEND**) to send the file attached to **iMail/iMMS**.
- To return to the capture preview to take a new photo or make a new video, press **SK2** (**BACK**).

➤ you can use the options of **Send as message**, **Rename** and **Delete**.

To understand the **Option** settings for your N600i's camera, read the following table.

Setting items	Camera function	
	Video	Photo
Recording mode	PHOTO VIDEO	
Zoom	OFF/ON	OFF/ON
Inward camera	2 levels max.	2 levels max. (QCIF and SQCIF are only available for zooming.)
Outward camera	8 levels max.	8 levels max. (no zooming for SXGA)
Exposure compensation	+2, +1, 0, -1, -2	
Camera direction	IN (Inward camera) OUT (Outward camera)	
File size limit	(File size) 300KB Unlimited (external memory)	

Setting items	Camera function	
	Video	Photo
Size	(Capture size) QCIF (176 x 144) SQCIF (128 x 96)	(Capture size) <i>Inward camera:</i> • CIF (352 x 288) • QCIF (176 x 144) • CLI and icon (160 x 160) • SQCIF (128 x 96) • Wall Paper (240 x 272) <i>Outward camera:</i> • SXGA (1280 x 1024) • VGA (640 x 480) • CIF (352 x 288) • QCIF (176 x 144) • CLI and icon (160 x 160) • SQCIF (128 x 96) • Wall Paper (240 x 272)
Picture quality	High Standard Economy	High Standard Economy
Night mode	OFF ON	
Lighting settings	Sunny Cloud Automatic Indoors	
Self timer	-	Self timer on (10 sec fix.) Self timer off
Sound settings	Video with sound Video only	-
Display size	Do not enlarge enlarge	
Memory location	Handset Card	

Setting items	Camera function	
	Video	Photo
Shutter sound	Shutter sound 1 Shutter sound 2 Shutter sound 3	

Recording sound

The voice recorder feature allows you to record a message while you are not online. The recording time is 180 seconds (or 300KB). The recorded voice is automatically saved as an AMR file which can be attached to **iMail/iMMS**.

To use the voice recorder

- Press **3** (**Record sound**).
- To start recording, press the **Enter** key
- To stop recording, press the **Enter** key again.
- After the recording complete screen appears, press **SK1 (SEND)** to send the recorded voice file attached to **iMail/iMMS** or the **SK2 (BACK)** to go back to the start recording screen.

If N600i stores several recorded files, pressing **SK2 (PLAY)** plays sound sequentially from the latest file.

Viewing an image

The image viewer function of **Multimedia centre** allows you to view JPEG, GIF, PNG, BMP, WBMP and SWF image files. The image files can be captured by the phone, downloaded from a browser or received attached to a message. N600i allows you to view all the files in a selected file.

To use the image viewer

- Press **4 (View images)** or select **View images** on the Multimedia screen

The following Options menu are available for **View images**.

No	Options menu	
1	Set as wallpaper	Sets the selected image as wallpaper. All supported image files are available for setting.
2	Visual effects	Apply visual effects to the displayed image. Select Negative image , Sepia tone , Mirror image , Soften image , Sharpen image or Emboss . If the animation GIF is displayed or the slideshow is set to ON, this option cannot be selected. Press SK1 (SAVE) to save the change to the image or SK2 (UNDO) to cancel the change.  Visual effects is available only when the SQCIF (128x96) and QCIF (176x144) size images are displayed.
3	Edit name	Edits the file name.
4	Delete	Deletes the selected file.
5	Playlist	Selects the playlist.
6	File properties	Displays information about the file

No	Options menu	
7	Image settings	Display settings: Selects to display the image in Default size or Fit to screen . Slideshow timing: Sets the interval between each image for one to 30 seconds. The Enter key is available to pause or play a slideshow. Repeat settings: Turns the repeat function on/off and selects the repeat target. Select Repeat on or Repeat off . This function repeats the playlists on the View image . This function is also valid for slideshows. Slideshow: Turns on/off the slideshow function that displays all images in the folder. Select Slideshow on or Slideshow off . Play again: Replays from the first frame when selected (only when the Flash file (.swf) is playing).

To view an image file

- Display the image file list screen from **View images**.
- Select an image file from the file list. To select a playlist, select an image file from the file list and select **Playlist** from the **Options menu**.
- Use the **Right** key (next) or **Left** key (previous) to display the file.
- Using the **Up** key enlarges the screen in full scale mode. Using the **Down** key returns to the normal scale.
 - Full scale mode is only available when setting the **Slideshow** function to **Slideshow off**.
- To attach the file to a message, press **SK1 (SEND)**.
 - **SK1 (SEND)** is not displayed when the attached file is larger than 299KB file or is prohibited for transfer.
- To edit the file name, press **Option** to select **Rename**.
- To end **View image**, press **Clear**.

Playing video and audio

You can play the following type of files captured by the phone, downloaded from a browser or received attached to a message. N600i allows you to play all the files in a selected file.

- Video files; MPEG4, WMV and H.263
- Audio files; AAC, WMA, MP3, WAV (PCM), MIDI and AMR

If you download a file using the browser or receive/send a message while playing video/audio, the sound may be interrupted.

To play a video or audio file

- Press **5** (select **Play video**) or **6** (select **Play music**) to display the video or audio file list screen.
- To select a playlist, select a video or audio file from the file list and select **Playlist** from the **Options menu**.
- Do any of the following:
 - To pause the file, press the **Enter** key.
 - To stop the file, press and hold the **Enter** key while playing.

- To fast forward, press and hold the **Right** key while playing or pausing.
- To rewind, press and hold the **Left** key while playing or pausing.
- To skip to the next or previous file, press the **Right** key (next) or **Left** key (previous).
- To repeat, press **Options** to select **Repeat settings** and **Repeat on**.
- To control the sound volume, press the **Up** or **Down** key, and the side key as well.
- To send the file as a message, press **SK1 (SEND)**.
 - **SK1 (SEND)** is not displayed when the attached file is larger than 299KB file or is prohibited for transfer.
 - Some files may be with copyrighted settings and thus cannot be sent out of the phone.
- To replay a file from the beginning after you start playing, press the **Left** key.

Note that you can only do this if the play time is two seconds or more.

The following Options menu are available for **Playing video and audio**.

No	Options menu	
1	Ringtone	Changes the ringtone settings for each phone mode: Standard profile , Meeting profile , Outdoor profile and Car profile . Ringtones are available in each mode for Voice call , Message received and Video call .
2	Mute settings	Turns the mute function on/off. This function turns off N600i's speaker and the headset.
3	Rename	Edits the file name.
4	Delete	Deletes the selected file.
5	Playlist	Selects the playlist.
6	File properties	Displays information about the file

No	Options menu	
7	(For video files) Video settings	Fit mode: You can enlarge the video size to fit on the video frame.  <i>When enlarging the video size, stop the video first and change the setting.</i> Repeat settings: Turns the repeat function on/off and selects the file to be repeated. Select Repeat on or Repeat off. Play all videos: Sequential plays all video files in the folder.
	(For audio files) Music settings	Repeat settings: Turns the repeat function on/off and selects the file to be repeated. Select Repeat on or Repeat off. Play all music: Sequential plays all audio files in the folder. Change animation: You can choose and select an animation from 4 items.

Playlists

You can create a list of images, video or audio files to play successively and save them as a playlist. You can create 20 playlists, each containing up to 20 files in the phone memory and 50 playlists, each containing up to 100 files in the memory card. You can add a new playlist by pressing **SK1 (ADD)**.

The following operations are available for the playlists under **View image, Play video, Play music** and **Play sound**.

No	Options menu	
1	Add new playlist	Adds a new playlist when you press SK1 (ADD) or select Add new playlist from the Options menu .
2	Edit playlist	Adds a file to a playlist or deletes a file from a playlist. Select Edit playlist from the Options menu and press SK1 (ADD) to add a file or SK2 (DELETE) to delete a file.
3	Switch memory	Switches between the handset memory and the memory card.
4	Edit playlist name	Edits the highlighted file name in the playlists.
5	Delete	Deletes the selected playlists. If no playlist is available, Delete cannot be selected.
6	Delete all	Deletes all the playlists. If no playlist is available, Delete all cannot be selected.

In addition, the following submenus are available for playlists in each of the options above: **Add file**, **File properties** (displaying the file information depending on the file type), **Sort playlist files** (ascending or descending order **By name** ↑/↓, **By date** ↑/↓ and **By size** ↑/↓), **Move file**, **Delete** and **Delete all**.

 You can store the **Playlist** data. Using **SK2** or **Options menu** switches between **Handset** and **Card**.

External connection (M7)



Choose any one to start **External connection**.
Select **7** (External connection) on the Menu screen to press the **Enter** key.

N600i provides you with the functions of **Bluetooth**, **Synchronisation** and **Memory card** as an external connection.

Bluetooth® (M71)

Using this function allows you to connect an external Bluetooth supported device to N600i. The following services are available:

- Dial-up connection
Connecting N600i to a PC via Bluetooth technology enables the PC to use N600i just like a modem to establish a dial-up connection to an Internet service provider.
- Data transfer (Only one **Contacts** data is available.)
You can transfer the **Contacts** data to another Bluetooth device such as PC, PDA and N600i.
- Headset/handsfree connection
You can make/receive a call using a Bluetooth headset or handsfree kit

When the Bluetooth headset connection is available, pressing and holding the **Enter** key enables you to switch the sound path between the handset and the Bluetooth headset.

Data transfer is performed as follows:

- For sending data from N600i
 1. Select the Contacts data to be sent on your N600i.
 2. Search the available device and select the target.
 3. Bluetooth connection is established
 4. Data transfer starts.
- For receiving the **Contacts** data on N600i
 1. Select **Discoverable** (see the next section) to set your N600i to standby mode
 2. Data is sent from the target device.
 3. The save confirmation screen appears.
 4. Press **SK1 (YES)** to save the transferred data into **Contacts**.

For data transmission, nothing special is set on PC.

To use a Bluetooth device

- Press 1 (**Bluetooth**) on the **Connections** screen and the **Bluetooth** screen appears. Use those menus to connect the external devices.

No	Bluetooth	
1	Discoverable	Sets standby mode for connection from an external device.
2	Headset	Connects or disconnects to/from NEC headset. This menu appears after registration.
3	PC	Connects or disconnects to/from a PC. This menu appears after registration.
4	Handsfree kit	Connects or disconnects to/from a handsfree kit. This menu appears after registration.

- Press **Options** and the following functions are available.

No	Options	
1	Information	Displays information on the selected device.
2	Search	Searches for nearby Bluetooth devices to register.
3	Pairing standby	Changes the handset status to bonding wait status in which the handset waits for the authentication from other devices in order to register the devices.
4	Terminal Info.	Displays the Bluetooth information of the handset. The device name can be edited, in which case, the edited device name is displayed at the other party's Bluetooth device.
5	Remove device	Deletes the registered devices from the list.
6	Stop all	Disconnects all Bluetooth connections.
7	Timeout settings	Sets the timeout values. The default is as follows: Discoverable: 0 minutes Search: 10 seconds Pairing timer: 5 minutes

 Depending on the conditions, some options may be greyed out and not be available

To register a Bluetooth device

If the external device is not yet registered on the **Bluetooth** screen, register it by the following procedures:

- Searching the device from N600i
 1. Press **Options** to execute **Search**
Available devices are found and displayed.
 2. Select the target device from the searched list
 3. Enter a passkey on N600i.
Enter the same passkey to the target device.
 4. Relevant device is registered after authentication is complete
- Operating N600i from the target device
 1. Execute **Pairing standby** to put N600i in standby mode.
 2. A passkey screen appears when receiving registration request from the target device
 3. Enter a passkey.
 4. Each device is registered after authentication is complete

 Passkey is the Bluetooth PIN code for the remote device.

 A passkey is a number from 1 to 16 digits.

 Before Bluetooth can communicate with a PC, ensure the Bluetooth Driver is installed.

 There may be Bluetooth devices that cannot be connected to your N600i

 Depending on the connection status, a Bluetooth device may not function correctly. In such a case, retry operation from the device side, or switch your N600i off and on.

Synchronisation

It is possible to synchronise your **Calendar**, **Contacts** and **To Do** lists locally between your N600i and a PC using USB connection.

Contacts are treated as **vCard** files and **Calendar** and **To Do** list entries as **vCalendar** files.

N600i enables operation with the NEC Mobile Suite (NMS) which is an interface to interact with the Phone.

The NEC Mobile Suite contains four modules that deal with specific type of data, the **Backup/Restore**,

the **MRM - Multimedia Resource Manager**, the **PIM - Personal Information Manager** and the **PIM**

Synchronisation. For details, refer to the **NEC Mobile Suite N600i User Guide** provided with your N600i.

To use Synchronisation

- Press 2 (**Synchronisation**) on the **Connectors** screen and the **Synchronisation** screen appears.
- Select any one from **Server one** to **ten** and press **SK1 (START)**.
• **Server one** (Contacts), **Server two** (Scheduler) and **Server three** (To Do) are already set as default.
- Press **Options** and the following functions are available.

No	Options	
1	Synchro-nise	Starts the synchronisation of updated data with the selected server.
2	Server set-tings	Displays the synchronisation server settings for the selected server.
3	Synchro-nise all	Starts the synchronisation of all data with the selected server.
4	Copy settings	Copies the settings of the selected server.
5	Delete	Deletes the selected server information. When Server one to Server three is selected, this operation returns the settings to default values.

No	Options	
6	Name format	Provides the following items to set the rules for vCard import/export. Import /export order: Sets which of the first name and family name comes first on imported/exported data. Imported name format: Sets whether or not to insert a space between the first name and family name on imported data. Export without space to: Sets in which of the first or family name a single name (with no space) should be exported.

You can edit the **Synchronisation** settings by using the **SK2 (SETTINGS)** key

No	Options	
1	Profile name	Sets the profile name. Server one to Server ten are displayed as default names (with no settings).
2	Server name	Sets the server name.
3	Authentica-tion	(Not required)
4	User name	(Not required)
5	Password	(Not required)
6	User database	Selects the server database from Contacts , Calendar or To Do .
7	Server database	Sets the server database name

For **Server name**, **User database** (selectable from **Contacts**, **Scheduler** and **To Do**) and **Server database** have their own default values that are configured to perform specific synchronisation operations.

Memory card (M73)

If you insert the TransFlash memory card into your N600i, you can use it as an external file system.

- Press **3 (Memory)** on the **Connectors** screen and The **Synchronisation** screen appears.
- Press **Options** and the following functions are available.

No	Options	
1	Status	Displays the current memory status. Usable memory space (Free) and used memory space (Used) can be viewed for the Memory and Memory card individually.
2	Format	Initializes the TransFlash memory card.
3	Check memory	Checks the TransFlash memory card.
4	USB memory mode	Sets N600i as a USB memory storage. Visible from PC: Enables a USB memory use. Invisible from PC: Disables a USB memory use.

Settings (M8)




Choose any one to start **Settings**.

Press **MENU** 8 (Settings) on the Menu screen to press the **Enter** key.

This section describes how to change the settings on your N600i.

Handset profile (M81)

- Press 1 (**Handset profile**) on the **User settings** screen. The **Profile** screen appears.

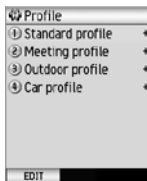

Handset Profile allows you to change the handset operation mode to suit different situations: **Standard profile**, **Meeting profile** (quiet surroundings), **Outdoor profile** (when carrying your N600i in a pocket or a bag) and **Car profile** (while travelling in a car). You can also customise each profile to make it more useful.

To see and change the settings of a profile, focus on the profile you want and press **SK1 (EDIT)**.


- You can also change the active handset profile from the Home Screen. Press the **Up** key on the Home screen, or press **Options** and 2 (**Handset profile**) to select a profile option.

The following settings are provided:

No	Standard/Meeting/Outdoor/Car profile	
1	Volume	Adjusts the ringing volume and alarm volume levels from Silent to Level 6 (loud).
2	ringtones	Selects the ringtone for incoming voice calls, video calls and messages
3	Illumination	Sets the illumination (colour and pattern) for voice calls, video calls and messages.
4	Vibration pattern	Selects the vibration pattern (Pattern one to three and Vibration off).
5	Other settings	Key tones: Turns on/off keystroke sounds. Coverage tone: Turns the coverage tone on/off. Auto answer: Turns the auto answer function on/off. When the headset is attached, this function automatically answers the call 5 seconds after the call is first received. Valid for all incoming calls.

Screen settings (M82)

- Press **2 (Screen settings)** on the **User settings** screen and the **Screen settings** screen appears.

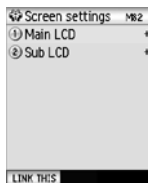

Screen settings provides two options of **Main LCD** and **Sub LCD**.

- For setting the main LCD, press **1 (Main LCD)** on the **Screen settings** screen.
- For setting the sub LCD, press **2 (Sub LCD)** on the **Screen settings** screen.

Main LCD options:

No	Main LCD	
1	Greeting	Pre-installed and downloaded files can be set for the following: Power on animation: Selects a screen animation displayed when N600i is turned on. An image captured with the built-in camera can also be set. Power on tone: Selects a tone that sounds when you turn on your N600i. Power off image: Selects an image that is displayed when you turn off your N600i.
2	Wallpaper	Selects the Home screen image.
3	Power save	Sets how long your phone can remain idle before going into power save mode, in a range from 1 to 20 minutes. The default setting is 5 minutes.


No	Main LCD	
4	Backlight	Backlight: Sets the backlight brightness (High backlight , Medium backlight and Low backlight) and on/off (Backlight off). Backlight time: Sets the backlight lighting duration between 5 and 60 seconds. The default is 15 seconds. Backlight control: Sets the Java backlight value. User setting only (system dependence) and Application control (software dependence) are provided.

Sub LCD options:

No	Sub LCD	
1	Small screen	Sets to view the following three operations on the sub LCD. Incoming call display: On/Off New message display: On/Off Playback display: On/Off
2	Clock style	Sets the clock type; Normal clock and Simple clock .
3	Backlight	Sets Backlight (On/Off) and Backlight time (2 to 60 seconds; 15 sec is the default).

Calls (M83)

- Press **3 (Calls)** on the **User settings** screen and the **Calls** screen appears.

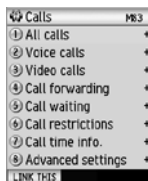

This function allows you to change various settings for the call functions as shown below.

No	Calls	
1	All calls	Receiver volume: Sets the volume level from Level 1 to 6 for receiving calls. Send caller ID: Sets the caller ID indication. Send notifies the receiver of your caller ID and Withhold lets you make calls without displaying your caller ID. Caller ID info.: Accesses the network to check the status of the current ID notification settings. Any key answer: Selects On or Off. This lets you use any key to answer a call, except for SK2 (IGNORE), Up, Down, End key and the Options key. Headset: Selects the ringtone output from the phone. • Speaker rings too: Sets the ringtone to be played from both the earphones on the headset and the speaker. • Handsfree only: Sets the ringtone to be played only from the earphones. Fixed dialling: On/Off Turns the fixed dialing function on/off. This lets you dial the set number only.
2	Voice calls	Auto redial: Sets the automatic redial function to On or Off. If your call fails, N600i automatically redials the call. Active flip: You can connect the line with your N600i open when receiving a call. ALS line: Switches two lines.

No	Calls
3	Video calls Sets the settings for video calls. Camera settings • Screen mode: Selects the displayed images (other side/my side) and their screen sizes from My side is smaller, Other side only, My side is larger and My side only. • Picture quality: The quality of the image captured by N600i can be selected from Standard, Better picture (priority given to the image quality), and Faster movement (priority given to capturing movement). • Night mode: On/Off Turns the night mode function on or off. Video call options • Video settings: Sets Use live video or Use photo instead. • Show timer: On/Off Turns on/off the call time of the current video call. • Voice if no video: On/Off Turns the automatic fallback function on/off. This function switches to a voice call when a video call cannot connect for some reasons. Video call photo: Selects an image (VGA, CIF and QCIF) to be sent instead of using the camera image to the other party of a video call.


No	Calls
4	Call forwarding Allows you to set up a number for forwarding calls to. Available for Voice calls/Video calls/Fax calls. Available under these conditions: All calls/If no answer/If busy/If unreachable. Forwarding Setup • Check: Shows the current service status. • Update: Updates the service status. • Find: The telephone number registered is copied from Contacts. • Forwarding off: Turns off a call forwarding setting of Voice calls, Video calls, and Fax calls individually. To activate this setting, press the SK1 (UPDATE). All forwarding off: Turn off all call forwarding setup of Voice calls, Video calls, and Fax calls. Auto check: Automatically checks for your divers.
5	Call waiting Turns the call waiting service on/off. Shows the current status of call waiting. Check: Shows the current service status.
6	Call restrictions Turns the call restriction service on/off, makes an enquiry and displays the current service status. Out-Voice calls Out-Video calls • No restrictions: Turns off the outgoing restrictions service. • Internat. if not home: Outgoing international calls except those to the home country. • International calls: Outgoing international calls.

No	Calls	
(6)	(Call restrictions)	• All calls: All outgoing calls except emergency calls. • In-Voice calls • In-Video calls • No restrictions: Turns off the incoming restrictions service. • Incoming if roaming: Incoming calls when outside the home country. Rejects all incoming calls while roaming except for callback after an emergency call • All calls: All incoming calls except for callback after an emergency call. Change password: Changes the password. SK1(CHECK): Shows the current service status.
7	Call time info	Displays and sets the call time information. Current call time: Allows you to change the call time display setting. Select Current call, Outgoing calls, All calls or OFF. Under the following items, the call time information is displayed in All calls, Outgoing calls and Incoming calls. Summary list: Displays summary information for calls. Voice calls: Displays voice call information. Video calls: Displays video call information. Reset call timer: Resets the call time to zero.

No	Calls	
8	Advanced	Dial pause setting: Edits a string of keypad characters (up to 128 single-byte characters) for pause dialling. This function enables sending out of numbers while calling with pauses inserted. For example, after entering a number with the touch tone service, you can send out the numbers you entered beforehand. Pause dial entry function is useful for sending messages to a pager, etc. You can only use keypad characters (0-9, # and) and pause (press and hold the # key: displayed as p). A pause at the beginning cannot be registered. A pause at the end is deleted when registered. Registered pause dial entry can only be used while calling. Sent out pause dial entries are not saved in the Outgoing calls list. Portrait Display: Displays the caller line identification (CLI) picture in the contact list when making and receiving calls. Ignore if no ID: Turns no caller ID rejection function on/off. Rejects any calls received without caller ID notification. Voicemail: Sets voicemail clearance type by checking the check boxes. Send tones: Turns the send tone on/off. Speed dial: Turn the Fast dial and Speed dial functions on/off.

Date and Time (M84)

- Press 4 (**Date and time**) on the **User settings** screen and the **Date and time** screen appears.

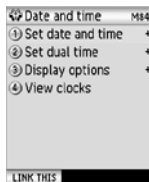

Date and time allows you to select the date and clock display formats, set the home/dual time, time difference from GMT, turn the summer time function on/off and view the current time of both clocks.

No	Date and time	
1	Set date and time	The following settings are provided for Home time. Date: Sets the date for the home time. Enter month, date and year separated with the slash according to the order in Date format setting (e.g. 05/05/2005 when the Date format setting is dd/mm/yyyy). Time: Sets the time. Enter the current time using the 24 hour display (e.g. 21:45 for 9:45 p.m.) or using the 12 hour display (e.g. PM 9:45 for 9:45 p.m.) depending on your Time format setting. Summer time: Sets whether the current status of the home/dual time is summer time or not. You cannot use this when your Home time is not set. Zone: Set the time difference between home time and GMT. Selects the city name in your home area from the Time zone list.

No	Date and time	
2	Set dual time	The following settings are provided for Dual time. Summer time: Sets whether the current status of the home/dual time is summer time or not. You cannot use this when your Home time is not set. Zone: Set the time difference between home time and GMT. Selects the city name in your home area from the Time zone list.
3	Display options	Time format: Sets the time display format to either 12 hour display or 24 hour display. Clock display: Sets the clock display to Home, Dual time or Home and Dual time. Date format: Sets the date display format to either one of six: dd/mm/yyyy (e.g. 01/07/2005) dd.mm.yyyy (e.g. 01.07.2005) mm/dd/yyyy (e.g. 07/01/2005) mm.dd.yyyy (e.g. 07.01.2005) yyyy/mm/dd (e.g. 2005/07/01) yyyy.mm.dd (e.g. 2005.07.01) Always display clock: Displays the clock all time at the bottom of the screen.
4	View clocks	Shows the current time for Home time and Dual time.

Language (M85)

- Press **5 (Language)** on the **User settings** screen and the **Language** screen appears.




Language allows you to select the language for display and turn wordwrap function on/off.

No	Date and time	
1	Display Language	Selects the display language. All text in your N600i is displayed in the selected language. <i>You cannot change the language while an application is running.</i>
2	Word wrap	Turns the wordwrap function in text fields on/off. <i>You cannot change Word wrap settings while an application is running.</i>

Security (M86)

- Press **6 (Security)** on the **User settings** screen and the **Security** screen appears.

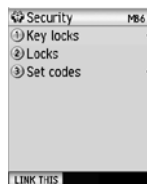

Security settings allow you to set lock function and code number settings.

No	Security	
1	Key locks	Sets the keypad/side key lock. Keypad lock (Menu+*): Disables keypad operation. <i>During keypad lock, the following operations are not available:</i> • Receiving a message (SMS, iMail and iMMS) • Setting Dial lock • Key tone (If pressing any key, key tone is not sounded.) <i>Even in the keypad lock state, the following operations are available:</i> • Emergency calls (See page 19.) • Answering a voice/video call • Power saving • Alarm (If pressing any key, an alarm sound is stopped.) Side lock (Menu+#): On/Off Turns the side key lock on or off. <i>During side key lock, no side key operation is available when the phone is folded.</i>


No	Security
2	Locks Sets the Dial lock, Auto lock and i-mode lock functions.  <i>Every time you change the Locks setting, entering the handset code is required.</i>  <i>If you enter the incorrect handset codes three times in a row, Dial lock forces your N600i into the lock condition for 30 minutes. However, if you turn off the power during the forced dial lock and then turn on it again, N600i extends the lock for more 30 minutes.</i> Dial lock: This cancels any key operation except for making emergency calls, answering a call with the Send key, rejecting a call with the End key, using the End key to turn the N600i on/off, turning off the alarm with any key and adjusting the volume of the earpiece. You can also turn Dial lock on/off from the Home screen. Press Options on the Home screen and select 7 (Dial lock). Auto lock: Turns on/off the automatic lock function. With Auto lock on, the phone is protected by Dial lock automatically when you switch on your phone. i-mode lock: Turns i-mode lock on/off. If this setting is enabled, no i-mode operations including iMail/iMMS messages are available.

No	Security
3	Set codes Sets the codes for PIN1, PIN2, handset and private PIN. Activate PIN1: PIN1 is used to power on your N600i. Selects Enable or Disable. New PIN1: Changes the PIN1 number. Enter the current PIN, the new PIN (4-8 digits) and then the new PIN again for confirmation. New PIN2: Changes the PIN2 number. Enter the current PIN, the new PIN (4-8 digits) and then the new PIN again for confirmation. Unlock PIN2: Unlocks the lock condition. The PUK2 input screen appears by using this function.  <i>This function is available only when you enter your PIN incorrectly three times in a row and the USIM card is locked. You can unlock it by using your PIN Unlock Key (PUK).</i> New handset code: Changes the handset code required to confirm important actions, such as deleting all Contact list entries. This requires the Code Number to prevent accidental mistakes. To change the handset code, enter a new code (4 digits), then enter the new code again for confirmation.  <i>When you buy your N600i, the Code Number is set to 0000.</i> New private PIN: Changes the private PIN number. Input the current password for the private PIN, the new password (4-8 digits) and then the new password again for confirmation.

No	Security
(3)	(Set codes)  Entry of the handset code (4 digits) is required for the first setting of New private PIN.  You need this password to change any call restrictions on your N600i.

Network setup (M87)

-  Press **7 (Network setup)** on the **User settings** screen and the **Network setup** screen appears.

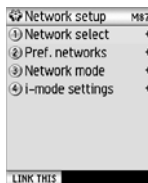

Network setup allows you to change various settings related to the mobile phone network.


No	Security
1	Network select Provides the functions of Automatic and Manual for selecting the network operator (PLMN; public land mobile network) automatically/manually. When Automatic is selected, N600i automatically searches and selects PLMN with RAT indicator in order of priority. When Manual is selected, a list of valid PLMNs is displayed. Select a PLMN with RAT indicator from the list. Your N600i establishes a connection to that PLMN. If this connection is unsuccessful, a message requesting another selection is displayed.

No	Security
2	Pref. networks Displays the list of PLMNs saved in the USIM card, updates the PLMN list with RAT indicator, adds and deletes PLMN entries and changes the entry display order. USIM list can contain up to 50 PLMN entries. Add, Sort, Replace, Delete and Registration status are provided under the Options menu. To change the search priority and the entry display order: Press SK1 (MOVE) on PLMN List. On PLMN Priority, select the PLMN with RAT indicator to move, move the cursor to destination and press the Enter or SK1.
3	Network mode Selects the mode of operation for the N600i: Automatic: N600i automatically selects the available service. GSM only: The service area is manually set only to the 2G coverage.  When the USIM card installed in your N600i supports the 2GSIM, this option may be greyed out and not be available.
4	i-mode settings Sets the server profile that is information required to use the i-mode service. Two factory-default options and one user-editable option are provided.  You cannot view or edit the setting value for the factory-default options. Default settings 1: Default settings 2: Both contain server information at factory default.  If you choose this function, entering the handset code is required.

No	Security
(4)	(i-mode settings) User settings: You can set the following profiles: 1 Access point Sets the access point name (99 chars max.). 2 i-mode server Sets the IP address for i-mode gateway (0.0.0.0 to 255.255.255.255 can be set.). 3 Portal server Sets the portal server URL (128 chars max.). 4 Mail • Mail Sets the mail server URL (128 chars max.). • 2nd mail server Sets the mail server URL for MMS on i-mode protocol (128 chars max.). • Confirmation site Sets the URL confirmation for the selective mail retrieval (128 chars max.). 5 User data Sets User name and Password. 6 Port number • HTTP number Sets the HTTP proxy port number. • SLL number Sets the SSL proxy port number.


Clear settings (M88)

- Press **8** (**Clear settings**) on the **User settings** screen and the **Clear settings** screen appears.

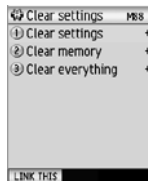

Clear settings function allows you to reset the settings you have made and clear the phone's memory.


No	Security
1	Clear settings Resets all the settings to the default settings. If you choose this function, entering the handset code is required. When the battery charge is low, you cannot execute this operation.
2	Clear memory Clear all user data. If you choose this function, entering the handset code is required. When the battery charge is low, you cannot execute this operation.
3	Clear everything Resets all the settings to the default settings and clears all the memory. If you choose this function, entering the handset code is required. When the battery charge is low, you cannot execute this operation.

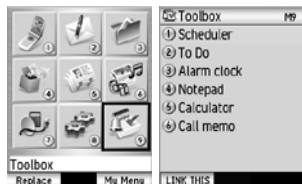

Choose any one to start **Toolbox**.

Press **(MENU) 9**
Select **9** (**Toolbox**) on the Menu screen to press the **Enter** key.


To set appointment

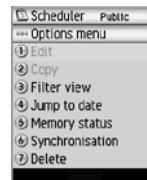

This section describes how to use your N600i to help manage your time and tasks.

You can use your N600i at home or work as a calendar with appointments and To Do lists, as an alarm clock, as a calculator and much more. There are six features available in the Toolbox:

Scheduler

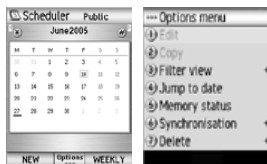

Press **1 (Scheduler)** on the **Toolbox** screen.

Calendar tool has four entry types: **Appointment**, **Multiday event**, **Special occasion** and **Days off**. You can save up to 200 calendar entries.

The following options are available:

No	Options menu	
1	Edit	Selects an item you want to change and edit it.
2	Copy	Copies the item.
3	Filter view	Selects the appointment type from All , Private or Public .
4	Jump to date	Finds and jump to the date you enter
5	Memory status	Informs the event and remaining counts. (200 max.)
6	Synchronisation	You can send calendar entries as a message or convert them stored in the phone to vCalendar format for transferring between the N600i and a PC. Select options from Send as message, Save vCalendar and Synchronisation. <i>Attaching calendar entries in the vCalendar format is not available for the SMS message service. Those entries are sent as a inline text.</i>

No	Options menu	
7	Delete	Select the calendar entry you want to delete and press the Enter key. Delete event and Delete day off are available.




Depending on the conditions, some options may be greyed out and not be available

To Do

- Press **2 (To Do)** on the **Toolbox** screen.


This feature allows you to set up **To Do** tasks that should be finished by a certain date. You can save up to 200 To Do entries.

To add a new To Do task

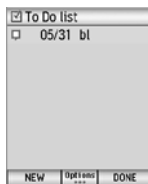

In To Do list, press **SK1 (NEW)**, or press **Options** and select **New** to open the new task screen. Press the **Enter** key on each field to select and edit.

To edit To Do tasks

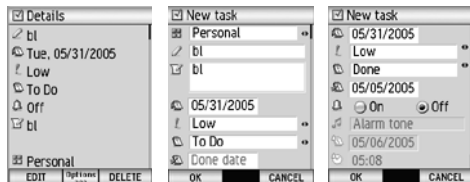


- On the **To Do** list screen, highlight the **To Do** entry to edit, press **Option** and select **Edit**. When displaying the **Details** screen, press **SK1 (EDIT)**.
- Edit the task details. After editing, press **SK1 (OK)**. The **To Do** entry is overwritten.

To delete To Do tasks

- Select a task to be deleted on the **To Do** list and press the **Enter** key. The **Details** screen appears and press **SK2 (DELETE)**.
- Or you can also delete a task by pressing **Options**, select **7 (Delete)** and **1 (This task)**.
 - If you want to delete the tasks you have done or delete all tasks, select **2 (Delete done tasks)** or **3 (Delete all)**.

Options

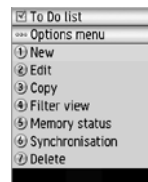

Pressing **Options** enables operations for the following functions:

No	Options menu	
1	New	Adds a new task.
2	Edit	Edits the task you select.
3	Copy	Copies the task you select.
4	Filter view	Sets the criteria to search the tasks you want to find. Three categories are provided; - Status: All/To Do/Done - Due: Deadline/Priority - Type: All/Personal/Office/Study/Travel/Shopping/Preparations/Sport/Housework/Other.

No	Options menu	
5	Memory status	Informs the event and remaining counts. (200 max.)
6	Synchronisation	You can send ToDo tasks as a message or convert them stored in the phone to vCalendar format for transferring between the N600i and a PC.  <i>Attaching ToDo tasks in the vCalendar format is not available for the SMS message service. Those entries are sent as a inline text.</i> Select options from Send as message, Save vCalendar and Synchronisation.
7	Delete	Deletes the task you select. The following three options are available: 1 This task 2 Delete done tasks 3 Delete all



Depending on the conditions, some options may be greyed out and not be available

Alarm clock

Press **3 (Alarm clock)** on the **Toolbox** screen. Select the alarm clock to set up to 5 alarms from **Alarm 1** to **Alarm 5** and press the **Enter** key. You can set a recurring alarm to ring at a specific time on several days of the week. The Alarm tone will only sound if the phone is switched on.

To Edit an Alarm



To edit your alarm clock setting, press **SK1 (EDIT)** and edit.

To Change alarm clock status


You can change alarm clock status on/off/disable on the Alarm clock list screen. Select an alarm on the list and do the following

-  To change the alarm clock status from **On** to **Disable**, press **SK2 (DISABLE)**.
-  To change the alarm clock status from **On** to **Off**, press **SK2** twice (**SK2 (DISABLE)** -> **SK2 (OFF)**)
-  **Disable** cancels the next alarm but does not cancel a recurring alarm.
-  **Off** deactivates the set alarm.
-  **Disable** is available only for recurring alarms and cannot be set for alarms without the **Repeat** setting.

To delete Alarms

-  (One alarm)
Select an alarm clock from **Alarm1** to **Alarm5**. Press **Option**, select **Delete** and press the **Enter** key. Select **Delete** and press the **Enter** key.
-  (All alarms)
Press **Options** menu, select **Delete** and press the **Enter** key. Select **Delete** all and press the **Enter** key.

Notepad

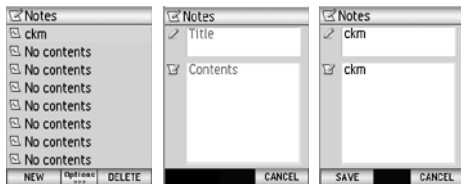

- Press 4 (**Notepad**) on the **Toolbox** screen.

The **Notepad** feature allows you to keep notes and other useful information, such as agendas and minutes of meetings, shopping lists and other items you need to remember. You can save up to 8 text notes.

To create a new Notepad entry

- Select **No contents** and press the **SK1 (NEW)** or **Enter** key.
- Enter a title (up to 32 single-byte characters including spaces) and press the **Enter** key.
- Enter a text message (up to 512 single-byte characters) and press the **Enter** key.


To edit a Notepad entry

- Select a notepad entry to be edited on the **Notes** screen and press the **Enter** key. Or press **Options** and select 2 (**Edit**).
- Select **Note title** and press the **Enter** key. Enter a title (up to 32 single-byte characters including spaces) and press the **Enter** key.
- Select **Note contents** and press the **Enter** key. Edit a text message (up to 512 single-byte characters) and press the **Enter** key.

To delete a Notepad entry

- Select a notepad entry to be deleted on the **Notes** screen and press **SK2 (DELETE)**. Then choose **SK1 (YES)** or **SK2 (NO)**.
- Or press **Options** and select 3 (**Delete**). Select 1 (**Delete**) or 2 (**Delete all**) to press the **Enter** key and choose **SK1 (YES)** or **SK2 (NO)**.

Options

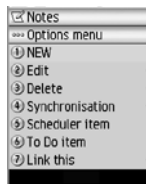

Pressing **Options** enables operations for the following functions.


No	Options menu	
1	New	Adds a new title.
2	Edit	Edits the title you select. Choose the following options. 1 Note title 2 Note contents
3	Delete	Deletes the entry you select. The following two options are available: 1 Delete 2 Delete all
4	Synchronisation	You can transfer the notepad entries between the N600i and a PC via OBEX. Select options from Send as message and Back up vNote .  <i>Transferring the vNote format is not available for the message service.</i>
5	Scheduler item	Set the following title you edit to Scheduler. 1 Appointment 2 Special occasion 3 Multiday event 4 Days off
6	To Do item	Sets the title you create as a To Do list.

No	Options menu	
7	Link this	Add to Home Add to My Menu

Calculator

- Press **5 (Calculator)** on the **Toolbox** screen.

N600i provides the built-in calculator and currency converter which can be switched using the **SK2** key.

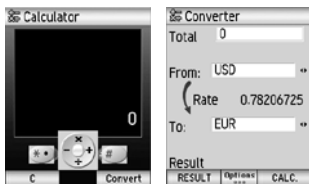

To use the calculator

Open the **Calculator** screen and use the following keys:

- Use the **Right** key as + key
- Use the **Left** key as - key
- Use the **Up** key as x key
- Use the **Down** key as / key
- Use the **Enter** key as = key
- Use the # key to enter a decimal point
- Use **SK1** as the CLR key or to clear the figure
- Use the # key as +/- switch key
- Use **SK2** to switch to the currency converter

When switching from the currency converter to the calculator, the cash amount value of the currency converter is displayed in the totals area of the calculator unless the currency calculation result is displayed.

To use the currency converter

This feature allows you to convert an amount of money in one currency to another currency by using either the exchange rate which is built in or one you enter.

If you want to set currency rates, press **Options** and select **1 (Set rate)**. To edit the name of the listed currency, press **Options** and select **2 (Edit name)**.

The following example shows how to convert 100 Pounds Sterling to Euros.

- Open the **Converter** screen by using SK2 to switch between **Calculator** and **Converter**.
1 To enter amount of money, select **Total** and enter **100**.
- To select the base currency, highlight the **From:** field and choose **GBP** using the **Left** or **Right** key.
- To select the currency to convert to, highlight the **To:** field and choose **EUR** using the **Left** or **Right** key.
- To modify exchange rate, press **Options** and select **1 (Set rate)** to enter the rate in the **Rate** field. Then press **SK1 (OK)**.
- To get calculation result, press **SK1 (RESULT)**.

Call memo

- Press **6 (Call memo)** on the **Toolbox** screen.

The **Call memo** feature allows you to record a short audio message (up to 20 seconds) during a call. You can use a **Call memo** to temporarily store phone numbers, addresses or reminders. You can save up to five call memos in your N600i.

To record a call memo during a call, press **Option** and select **Call memo** to start recording the conversation.

You cannot attach a call memo to messages.

To listen to a call memo

- Select a call memo to play the **Call memo** screen.
- Press **SK1 (PLAY)** to start playing.

To delete a call memo

- Select any call memo to delete on the **Call memo** screen.
- Press **SK2 (DELETE)** to delete it.

Text Entry

This section describes how to enter and edit text. There are four types of text entry:

- Multitap Text (ABC) Input: Where you press each key as many times as needed to display the character you want.
- Numeric Input: Where you enter numbers.
- T9® Text Input: Where intuitive texting predicts the word you are trying to enter.
- Symbol Input: Where you enter symbols, Greek characters, or characters with accents.

 T9® Text Input is covered by the United Kingdom Pat. No. 2238414B, Euro. Pat. No. 0 842 463 (96927260.8) and other patents pending.

 The maximum number of characters allowed in an item or a field is defined as the number of single-byte characters that can be input. When entering double byte characters such as accents (ë, í, ô, etc.) or triple byte characters such as the Euro symbol (€), the maximum number of characters varies accordingly.

To start messaging

- Press any one of the following keys
 - **SK1 (MAIL)** on the Home screen.
 - **(MENU) 2 (Messages)**.
 - **i-mode** () key on the Home screen and **2 (Mail)**.
- Choose SMS or iMail/iMMS using **SK1**. (See **Messages (M2)** for details.)

- Select the text entry field and press the **Enter** key to start inputting text.



SMS




iMail/iMMS

To change the input mode

- Every **SK1 (MODE)** you press changes the text entry mode to Multitap Text Input, Numeric Input and T9® Text Input in order.



Multitap Text Input

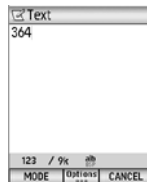

Numeric Text Input



T9® Text Input

- To insert symbols, press the # key to switch to the **Insert symbols** screen to use Symbol input menu, or press and hold the # key to use Multi symbol input menu. Pressing **Options, 1 (Insert object)** and **1 (Insert symbols)** is also available for Multi symbol input menu. (See **Symbol Input** in this section for details.)

- Press the * key to switch lower case, upper case (shift) and Caps lock.

Multitap Text (ABC) Input

The following example shows how to enter the word “dog” in a text message:

- 1 To enter “d”:
Press the **(3DEF)** key once, then “d” appears.
- 2 To enter “o”:
Press the **(6MNO)** key three times, then “o” appears.
- 3 To enter “g”:
Press the **(4GHI)** key once, then “g” appears.

 Press the **Right** key to move to the next character position.

 Enter the **0** key to select and insert a space.

Numeric Input

Here is the example to enter “364” in a text message after changing to the Numeric Input mode.

- 1 To enter “3”:
Press the **(3DEF)** key; then “3” appears.
- 2 Enter “6”:
Press the **(6MNO)** key; then “6” appears.
- 3 Enter “4”:
Press the **(4GHI)** key; then “4” appears.

 You can also enter numbers using the multitap and the T9® text input modes by pressing and holding the keys.

T9® Text Input

In the T9® text Input mode, you press each key only once, even if the character you want is not the first character on the key.

When you press the keys, different words are suggested. If the word you want is not suggested, you can edit the word and register it in the dictionary for access the next time.

The following example shows how to enter the word “fog” in a text message:

- 1 To enter “fog”:
Press the **(3DEF)** **(6MNO)** **(4GHI)** keys.
The word “dog” should appear.
- 2 To convert and select the word you want:
Press the **Up** and **Down** keys until the word “fog” appears. Then press the **Right** or **Enter** key to enter the displayed word or the **0** key to select and insert a space.
- 3 If the word you want is not suggested, edit the word and register it by using the Multitap Input Mode:
Switch to the Multitap Input Mode by pressing **SK1 (MODE)** and enter “fog”. The word is registered in the dictionary.
If you enter the **(3DEF)** **(6MNO)** **(4GHI)** keys in T9 Text Input Mode the next time, you can select the word fog.

 When the last word candidate is displayed, the **SK1** key is changed to **Spell**. If you could not find the word you want to enter from the candidates, you can display the text entry screen in the Multitap Input Mode by pressing the **SK1 (SPELL)** key and can register the word you want to add to the candidates.

 The T9® word prediction is a feature that helps you type faster and easier. It suggests words you have already used. To accept a predicted word, press the **Right** or **Enter** key.

Symbol Input

To input symbol(s), two menus are available: Symbol input menu and Multi symbol input menu.

By using the Symbol input menu, you can quickly select a symbol and return to text editing, while in the Multi symbol input menu, you can select up to 12 symbols at a time.



Symbol input menu



Multi symbol input menu

Symbol input menu

To open the Symbol input menu, press the $\#$ key in any input modes.

The Symbol input menu is displayed as follows:

- Highlight the line in which the symbol you want is located. You can move the highlighted line by using the **4-way navigation** key.
- Find the keypad number displayed above the symbol and press the key. The temporary symbol menu disappears after inserting a symbol.

You can cancel the temporary symbol menu by pressing the CLR key.

Multi symbol input menu

To open the Multi symbol input menu, press and hold the $\#$ key in any input modes.

Input one or more symbols using the same operation as in the Symbol input menu as described in **Symbol input menu** above. To complete symbol input and return to text editing, press **SK1 (OK)**. To cancel symbol input, press **SK2 (CANCEL)**.

Options


- Press **Options** on the Text entry field and the following functions are available.

No	Settings	
1	Insert object	Inserts the symbols or pictographs.
	1 Insert symbols	(Refer to Symbol Input in this section.)
2	Insert pictograph	Inserts the pictographs.
	2 Input method	Selects the input mode.
3	1 T9	(Refer to Multitap Text (ABC) Input , Numeric Input and T9® Text Input in this section.)
	2 ABC	
	3 123	
3	Copy/cut/other	You can copy, cut, delete or replace a block of text. - Before performing this function, move the cursor to the starting point using the 4-way navigation key to specify the starting point on the text entry field. - Pressing and holding the $\ast$ key also starts this function. - After the block of text is selected, pressing SK1 to copy or SK2 to cut the block is available. - You can also use Options to choose the functions from Copy, Cut, Delete, Replace or New selection. - Pressing Options and Replace allows you to replace the selected text by the text on the clip board.

No	Settings
4	Paste You can paste cut/copied text after using the Copy or Cut function.  Before performing this function, move the cursor using the 4-way navigation key to a specific point.  Pressing and holding the * key enables use of SK2 (PASTE) to paste cut/copied text  You can paste copied/cut text into other applications.
5	Editing options Sets Write mode (Insert/Overwrite) and Clear mode (Backspace or Delete).  In Backspace mode, you can delete characters before the cursor. In Delete mode, you can delete characters after the cursor.
6	New line Inserts a new line in the text.  Before performing this function, move the cursor to the insertion point of the new line.  Pressing the # key twice also inserts a new line.
7	T9 language Selects a language for T9® Text Input. Seven types of language are available (English, Italian, German, French, Spanish, Greek and Dutch).



Depending on the conditions, some options may be greyed out and not be available

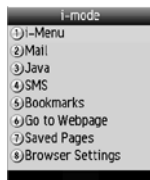

Press **i-mode** () key.

You can enjoy browsing the webpages by using i-mode function. This section describes how to operate the i-mode menu. The following options are provided:

No	Settings	
1	i-Menu	Accesses the webpages.
2	Mail	Starts the iMail and iMMS message service. See To use iMail/iMMS message (page 28) for details.
3	Java	Starts the Java application. See Java™ (M4) for details.
4	SMS	Starts the SMS message function. See To use SMS message (page 25) for details.
5	Bookmarks	Lists the bookmarked web pages you record. Up to 100 bookmarks can be stored.
6	Go to webpage	You can enter the URL (Input Address), view the last URL you visit (Last Address) or lists the URLs you have entered (Past Input).
7	Saved pages	Lists the webpages you saved as an offline file. Up to 10 pages can be stored. (The number of pages vary depending on the page size.)

No	Settings	
8	Browser Settings	1Home: Enable/Disable Sets the URL as a home. 2View: Sets the viewer you like. The following options are available: • Font size: Normal/Large • Images: On/Off (to display the images or not) • Table Layout: Just Fit/Smart Fit • Wrap Text: On/Off • CSS: On/Off • Screen Scroll: Selects the number of lines per scroll from 1 line/3 line/5 line. 3Certificates: Lists the certificates. Certificate information (Certificate info) and a certificate validation (Valid/Invalid) are available as option. 4Others: • Request Timeout: sets the communication timeout interval from 60 seconds/90 seconds/Disabled. • Send Terminal Info: On/Off • Auto Play: On/Off • Sound Effect: On/Off 5Check settings: Displays all the options set for the browser settings. 6Reset settings: Restores the default settings. 7Reset Data: Resets the initial data.

A

Alarm clock 60
Auto answer 21

B

Bluetooth® (M71) 44

C

Calculator 62
Call Logs 24
Call memo 21, 62
Calls (M83) 50
Camera direction 39
Camera function 39
Capture 39
Charge the battery 9
Charging the Battery 11
Clear settings (M88) 57
Contact Entries 36
Contact list 22
Contacts (M5) 3, 36
Copy, Move or Delete the entries 37

D

Date and Time (M84) 53
Deleting folders/messages 27
Display information 1
Display size 40
Display the contact memory status 37
DTMF 21
During a Voice Call 20

E

Edit a contact group 37
Edit an entry 36
Emergency calls 19
End the call 20
Enter your PIN Code 13
Exposure compensation 39
External connection (M7) 3, 44

F

File manager (M3) 3, 32
File size limit 39

G

GPRS 8
Grouptalk 20
GSM 8

H

Handset profile (M81) 48
Handsfree 21

I

iMail 67
iMail/iMMS 3
iMail/iMMS message 28
i-Menu 67
iMMS 67
i-mode 67, 68
Insert the Battery 11
Insert the TransFlash memory card 10

J

Java™ (M4) 3, 34

K

Keypad shortcuts 4

L

Language (M85) 54

Lighting settings 40

Low Battery Alarm 13

M

Main LCD 1

Make a video call from Incoming calls list 22

Make a video call from Outgoing calls list 22

Making a Video Call 22

Making a voice call 18

Manual conventions 1

Memory location 40

Memory/Memory card 32

Menu functions 2

Message Services 25

Messages (M2) 3, 25

Miss a call 20

Missed calls list 22

Moving messages 27

Multimedia centre (M6) 3, 39

Multitap Text (ABC) Input 64

Mute the microphone 21

N

Network setup (M87) 56

New entry to the contact list 36

New iMail 28

New iMMS 29

New message 26

Night mode 40

Notepad 61

Numeric Input 64

O

One touch dial 19

Organise messages 27

Overview of N600i 8

P

Pause dial 19

Phone (M1) 3, 18

Picture quality 40

Playing video and audio 42

Playlists 43

Power Saver 13

Prog backlight 35

R

Read a message 26

Receiving a Video Call 22

Receiving a Voice Call 20

Recording mode 39

Recording sound 40

Redial 21

Reject the call 20

Reject the incoming video call 22

Run software 34

S

Scheduler 58

Screen settings (M82) 49

Search the contact list 20

Security (M86) 54

Self timer 40

Send the Contact data 38

Set the Clock 13

Set the date and time 9

Settings (M8) 3, 48

Shutter sound 40

Size 40

SMS 3, 67

SMS message 25

Sound settings 40

Speed call 19

Sub LCD 2

Switch Off 13

Switch On 13

Symbol Input 65

Synchronisation 46

T

T9® Text Input 64

Take a photo/make a video 39

Text Entry 63

To Do 59

Toolbox (M9) 3, 58

TransFlash™ memory card 9

U

UMTS 8

USIM 9

V

Viewing an image 41

Voice recorder 40

W

Write a message from a contact list 37

Z

Zoom 39

v1.3.0
MDY-000026-EAA7
July 2005 1st edition