

# SPH-a660 Series

## P O R T A B L E T r i - M o d e T E L E P H O N E

### User Guide

**Please read this manual before operating your  
phone, and keep it for future reference.**

The Samsung logo is centered on the page. It consists of the word "SAMSUNG" in a bold, white, sans-serif font, set against a black, horizontally-oriented oval background.

## Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

## Samsung Telecommunications America, L.P.

### Headquarters:

1301 E. Lookout Drive  
Richardson, TX 75082  
Tel: 972.761.7000  
Fax: 972.761.7001

### Customer Care Center:

1601 E. Plano Parkway, Suite 150  
Plano, TX 75074  
Toll Free Tel: 1.888.987.HELP (4357)  
Fax: 972.801.6065

Internet Address: <http://www.samsungusa.com>

©2004 Samsung Telecommunications America, Inc. is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Licensed by Qualcomm Incorporated under one or more of the following patents: U.S. Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390.

Printed in South Korea  
GH68-04894A

Openwave<sup>®</sup> is a registered Trademark of Openwave, Inc.  
RSA<sup>®</sup> is a registered Trademark RSA Security, Inc.

## Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

## Table of Contents

<b>Getting Started .....</b>	<b>1</b>
Front View of Phone .....	1
Key Functions. ....	2
Viewing the Display Screen. ....	4
Features of Your Phone. ....	6
Turning Your Phone ON and OFF .....	6
Using the Battery .....	8
Displaying Your Phone Number .....	11
Making and Answering Calls .....	11
Making Calls. ....	11
Answering Calls .....	12
Missed Call Notification .....	13
Calling Emergency Numbers .....	13
Using One/Two/Three Touch Speed Dialing .....	14
Abbreviated Dialing .....	15
Dialing Options. ....	16
In-Call Options .....	17
End-of-Call Options .....	17
Saving a Phone Number .....	18
Finding a Phone Number .....	19
Dialing and Saving Phone Numbers With Pauses .....	19
Dialing From the Internal Phone Book .....	20
<b>Controlling Your Phone's Settings .....</b>	<b>21</b>
Sound Settings .....	21
Adjusting the Phone's Volume Settings. ....	21
Ringer Type .....	21
Selecting a Key Tone .....	25
Alert Notification .....	26
Silence Mode .....	27
Display Settings. ....	27
Changing the Text Greeting .....	27
Changing the Backlight Time Length .....	28

 
 
 
Changing the Display Screen .....	29
Changing the Phone's Menu Style .....	29
Location Settings .....	30
Airplane Mode .....	31
Phone Setup Options .....	32
Shortcut .....	32
Call Answer Mode .....	33
Auto-Answer Mode .....	33
Display Language .....	34
TTY Use With Handset .....	34
<b>Setting Your Phone's Security .....</b>	<b>37</b>
Accessing the Security Menu .....	37
Locking Your Phone .....	37
Unlocking Your Phone .....	38
Calling in Lock Mode .....	38
Restricting Calls .....	39
Using Special Numbers .....	40
Erasing the Internal Phone Book .....	40
Erase Content .....	41
Resetting Your Phone .....	41
<b>Controlling Your Roaming Experience .....</b>	<b>43</b>
Understanding Roaming .....	43
Setting Your Phone's System .....	44
Set NAM .....	45
<b>Navigating Through Menus .....</b>	<b>47</b>
Menu Navigation .....	47
Menu Structure .....	47
Viewing the Menus .....	48
<b>Managing Call History .....</b>	<b>55</b>
Viewing History .....	55
Call History Options .....	55
Making a Call From Call History .....	56
Saving a Phone Number From Call History .....	56
Prepending a Phone Number From	

 
 
 
Call History .....	57
Erasing Call History .....	58
Air Time .....	58
<b>Using the Internal Phone Book .....</b>	<b>59</b>
Internal Phone Book Entry Options .....	59
Entering Text .....	59
Selecting a Character Input Mode .....	59
Entering Characters Using T9 Text Input .....	60
Entering Characters by Tapping the Keypad .....	60
Entering Numbers and Symbols .....	61
Adding a New Internal Phone Book Entry .....	62
Finding Internal Phone Book Entries .....	62
Adding a Phone Number to an Internal Phone Book Entry .....	64
Editing an Internal Phone Book Entry's Phone Number .....	64
Selecting a Ringer Type for an Entry .....	65
Secret Internal Phone Book Entries .....	66
Changing the Group Name .....	67
<b>Personal Organizer .....</b>	<b>69</b>
Adding an Event to the Scheduler .....	69
Event Alerts .....	70
Viewing Events .....	70
Erasing a Day's Events .....	71
Going to Today's Scheduler Menu .....	71
Purging Events .....	71
Purging All Events .....	72
World Time .....	72
Using the Alarm Clock .....	73
Task List .....	74
Using the Memo Pad .....	75
Using the Calculator .....	76
Countdown .....	77
<b>Voice Services .....</b>	<b>79</b>
Activating Voice Recognition .....	79
Digit Dial .....	79

Enabling/Disabling Digit Dial Choice Lists .....	81
Adapting Digit Dial .....	81
Using Name Dial .....	84
Enabling/Disabling Name Dial Choice Lists .....	84
Using Phonebook .....	85
Enabling/Disabling Phonebook Choice Lists .....	86
Recording Memos .....	86
<b>The Basics .....</b>	<b>89</b>
Using Voicemail .....	89
Setting Up Your Voicemail .....	89
Voicemail Notification .....	89
New Voicemail Message Alerts .....	90
Retrieving Your Voicemail Messages .....	90
Clearing the Message Icon .....	91
Using Caller ID .....	91
Responding to Call Waiting .....	92
Making a Three-Way Call .....	92
Data/Fax .....	93
Data/Fax setup .....	93
Receiving a fax .....	94
Ending a Fax or Data Call .....	94
Sending a Fax or Data File .....	95
Changing your phone back to voice calling .....	95
<b>Messaging .....</b>	<b>97</b>
Erasing All Messages .....	97
Text Messaging .....	98
Using Text Messaging .....	98
Message Setup Options .....	100
Display Popup .....	101
Sending Options .....	101
Canned Message .....	102
Message Alerts .....	103
Save in Outbox .....	105
Auto Delete .....	105
Alerts Setup .....	106



Voice Mail Number .....	106
<b>Web Services.....</b>	<b>107</b>
The Wireless Web .....	107
Launching the Browser .....	107
Web Guard .....	108
Web Connection Status and Indicators .....	109
Navigating the Wireless Web .....	109
Downloading Games, Ringers, Screen Savers and Applications ...	112
Games .....	112
Ringers .....	113
Screen Savers .....	115
Applications .....	116
<b>Safety.....</b>	<b>117</b>
Getting the Most Out of Your Reception .....	117
Caring for the Battery .....	121
Acknowledging Special Precautions and Industry Canada Notice .....	123
Information to User .....	123
Owner's Record .....	124
User Guide Proprietary Notice .....	125
<b>Manufacturer's Warranty.....</b>	<b>127</b>
<b>Index.....</b>	<b>131</b>








# Getting Started

## Front View of Phone



## Key Functions








- 1. Speaker:** The speaker allows you to hear the other caller and the different ring tones and sounds offered by your phone.
- 2. Signal Strength Indicator:** This icon represents the signal strength by displaying bars. The more bars displayed, the better the signal strength.
- 3. Display Screen:** The display screen displays all the information needed to operate your phone.
- 4. Headset Jack:** Allows you to plug in an optional headset for safe, convenient hands-free conversations.
- 5. OK/Voicemail Key:** Pressing  when navigating through a menu accepts the highlighted choice in the menu. Pressing  for two seconds automatically dials your voicemail.
- 6. One Touch Internet Access:** Allows you to access the web browser with the press of a button. Press and hold to automatically launch the web browser.
- 7. Volume Keys:** Allows you to adjust the ringer volume in standby mode (with the flip open) or adjust the voice volume during a call. The volume keys can also be used to scroll up or down to navigate through the different menu options. To mute the ringer during an incoming call, press the Volume Key up or down.
- 8. TALK Key:** Place or receive a call. In standby mode, press the key once to access the Outgoing call log. If you press and hold the key down, you will initiate the Voice Recognition feature.

9. **Numeric Keypad:** Use these keys to enter numbers, letters, and characters.
10. **Shift/Asterisk Key:** Enters the asterisk [\*] character for calling features. In text entry mode, press to change the character input type.
11. **Accessory Interface Connector:** This connector is used to connect any available accessory cables to your phone.
12. **Power Interface Connector:** The power interface connector is used to plug in the charging accessories.
13. **Microphone:** The Microphone allows the other caller to hear you clearly when you are speaking to them.
14. **Space/Pound Key:** Enters the pound [#] character for calling features. In text entry mode, press to enter a space.
15. **BACK Key:** Deletes characters from the display. When in a menu, press to return to the previous menu. This key also allows you to return to the previous screen in a PCS Vision session.
16. **END Key:** Ends a call. Press and hold this key for a few seconds to turn your phone On or Off. While in the main menu, it returns the phone to standby mode and cancels your input.
17. **Navigation Key:** This key allows you to scroll through the phone menu options, and provides a shortcut to phone functions from standby mode.
18. **MENU Key:** Displays the first level or Main Menu of options. Press  again to view the next menu page.
19. **LED Indicator:** Flashes red to indicate that there is an incoming call or green to indicate that you have service.

- 20. Ringer Indicator:** This icon indicates that a ringer is set.
- 21. Battery Indicator:** The battery indicator displays the amount of remaining battery charge currently available in your phone. When all bars are displayed in the battery icon, the phone's battery is fully charged. When no bars are displayed, the phone's battery is completely discharged or empty.
- 22. Position Location:** This icon indicates that the position location feature is active.

## Viewing the Display Screen

This list identifies the symbols you'll see on your display screen.

-  displays your current signal strength. The more lines you have, the stronger your signal.
-  means your phone cannot find a signal (No Service).
-  indicates that a call is in progress and also that you are sending or receiving information during a browser session
-  indicates you have a text, numeric page, or Web Alert messages waiting. Press  briefly to see a list of pending messages.
-  indicates you have a voicemail message. Press and hold  to dial voicemail.



indicates your phone is in vibrate mode.



shows your current battery charge strength. (Icon shown fully charged.) If the battery is discharged, there are no bars displayed and the battery icon flashes.



indicates that position location is active.



indicates that position location is inactive.



indicates that your phone is roaming.



indicates that your phone is in security mode.



indicates that your phone is operating in analog service.



indicates that your phone is operating in digital service.



indicates that your phone is in 1X service.

Phone Off

indicates that your phone is in Airplane Mode. All TX and RX transmissions are turned Off.



indicates that an alarm is set on your phone.



indicates that the ringer is set at a level between 1-8 or 1-Beep is selected.



Indicates that the ringer is turned Off.



indicates that something has been downloaded to your phone.



indicates that the TTY function is active.

**Tip:** Display indicators let you know when you're off the network.


## Features of Your Phone

Congratulations on the purchase of your Samsung SPH-a660 Phone. This phone is lightweight, easy-to-use, and reliable. It also offers many significant features and service options:

- Dual-band/Tri-Mode capability provides access to other Digital Networks where roaming agreements are established (page 43).
- Mobile Browser™ provides access to the wireless Internet in digital mode (page 107).
- Messaging provides quick and convenient text messaging capabilities (page 98).
- Downloadable games, ringers, screen savers, and applications allow you to turn down time into fun time and to personalize your phone (page 112).
- The built-in organizer lets you schedule alerts to remind you of important events (page 69).
- Three hundred internal phone book entries store up to six phone numbers each (page 59).
- Voice Signal/Voice Command.
- English or French Language Menus.

## Turning Your Phone ON and OFF

### Turning Your Phone ON

- Press  to turn your phone On.


Once your phone is ON, it displays “Looking for Service” which indicates that your phone is searching for a signal. When your phone finds a signal, it automatically enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls. If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode. In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for service by pressing any key (when your phone is turned ON).

---

**Tip:** The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

---

### Turning Your Phone OFF

- Press  for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

## Using the Battery

### Battery Capacity

Your phone is equipped with a standard Lithium Ion (Lilon) battery. It allows you to recharge your battery before it is fully drained. The standard battery provides approximately 3 hours of continuous digital talk time (1.5 hours in analog) or approximately 240 hours of continuous digital standby time (17 hours in analog).

The extended battery provides approximately 4.5 hours of continuous digital talk time (3 hours in analog) or approximately 432 hours of continuous digital standby time (30 hours in analog).

When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone sounds an audible alert and then powers down.

---

**Note:** Long backlight settings, searching for service, vibrate mode, and browser use affect the battery's talk and standby times.

---

---


**Tip:** Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power.

---

### Installing the Battery


Your phone comes with a Lilon battery. Follow these steps to install:


1. Insert the battery into the opening on the back of the phone, making sure the plastic tab on the back is inserted into the matching slot in the phone.
2. Press up until the latch snaps into place.

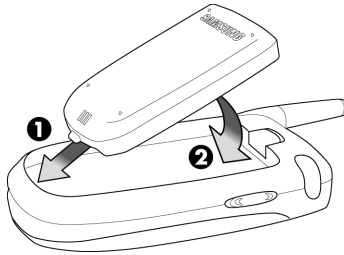


### Removing the Battery

To remove your battery, follow these easy steps:

1. So that no stored messages or numbers are lost, power off your phone by pressing and holding the  key.
2. Push the battery release latch down completely. The battery will separate slightly from the phone.
3. Slide the battery down and remove.

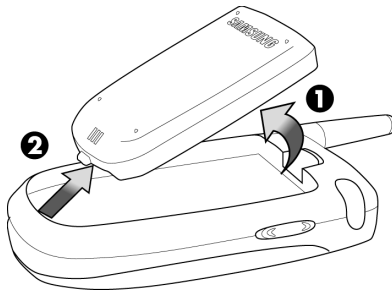

## Charging the Battery

Your phone comes with a rechargeable battery. You should charge the battery as soon as possible so you can begin using your phone. Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon (  ) blinks and the phone sounds a warning tone. Always use a Samsung approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

---

**Warning!** Using the wrong battery charger could cause damage to your phone and void the warranty.

---

## Using the Desktop Charger

To use the desktop charger provided with your phone:

1. Plug the outlet from the desktop charger in the wall. Place your phone into the desktop charger, making sure that it fits securely. If properly connected, you should see the charging lights.
  - A red light on the desktop charger and an animated battery icon on the phone indicates that the battery is charging.
  - A green light on the desktop charger indicates that the battery is at least 90 percent charged.
  - A orange light on the desktop charger indicates that there is a problem charging the phone.




It takes approximately 4 hours to fully recharge a completely rundown standard battery. With the Samsung approved Lilon battery, you can recharge the battery before it becomes completely run down.

When the flip is open, an animated battery icon is displayed on the screen. When the battery is completely charged, a green light is displayed continuously.

## Displaying Your Phone Number

Just in case you forget your phone number, your phone can remind you.

To display your phone number:





1. Press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **My Phone #**.

## Making and Answering Calls


### Making Calls

Your phone offers many different ways to make calls, including downloading games and ringers (page 112), Speed Dialing (page 14) and using Call History (page 56).

To make a call using your keypad:


1. Make sure your phone is on.
2. Enter a phone number. If you make a mistake while dialing, press  to erase one digit at a time. Or, press and hold  to erase the entire number.
3. Press .
4. When you're finished, close the flip or press .

---

**Tip:** To redial your last outgoing call, press  twice.

---

## Answering Calls

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail).
2. Press  to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any digit.)

Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The LED flashes.
- The backlight illuminates.
- The screen displays an incoming call message.
- If available, the phone number of the caller is displayed.
- If the phone number is in your Internal Phone Book, the Phone Book entry's name is displayed.

The following option is also displayed. To select an option, press the corresponding softkey button.

-  or  or  to mute the ringer.


---

**Note:** If your phone is off, incoming calls go to voicemail.


---

## Ending a Call



To disconnect a call when you are finished:

- Close the phone or press .





## Missed Call Notification

When an incoming call is not answered, the Missed Call Info is displayed on your screen. Press  to return the call.



To place a call from the Missed Call log:

1. Highlight the entry and press .
2. Press  to dial the phone number.

## Calling Emergency Numbers

You can place calls to 911 (enter   , and press , even if your phone is locked or your account is restricted.

---

**Warning:** After initiating a 911 call, you must end the call by pressing  . This notifies the phone that the 911 call was terminated intentionally by the user. No other calls can be made prior to terminating the 911 call.

---

---

**Warning:** You can not make 911 calls when the phone is in airplane mode and the icon "phone off" is displayed. Turn the phone back on, by disabling airplane mode or turning the phone on and off before making a 911 call.

---

## Using One/Two/Three Touch Speed Dialing

With this feature, you can automatically call Speed Dial entries using one key press for locations 1-9, two key presses for locations 10-99, or three key presses for locations 100-300.

To use **One-Touch Dialing** for Speed Dial locations 1-9:

Press and hold the appropriate key for a few seconds. The display confirms that the number has been dialed when it shows "Calling".




To use **Two-Touch Dialing** for Speed Dial locations 10-99:

1. Press the first digit.
2. Press and hold the second digit for a few seconds. The display confirms that the number has been dialed when it shows "Calling".

To use **Three-Touch Dialing** for Speed Dial locations 100-300:

1. Press the first digit.
2. Press the second digit.
3. Press and hold the third digit for a few seconds. The display confirms that the number has been dialed when it shows "Calling".

---







**Note:** Your phone also supports 1- 4 digit dialing. If you enter a number using the keypad without holding the last number and then press , your phone will dial those digits. (For example, if you enter  and press , it dials 211, not the number stored in memory location 211.)

---

## Abbreviated Dialing



Abbreviated dialing allows you to enter a six-digit prefix for commonly used phone numbers. When abbreviated dialing is On, you can enter the last four digits of any phone number that matches the six digit prefix, and the number is dialed using the prefix numbers with only the last four entered.

To set up abbreviated dialing:


1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **Abbrev. Dial**.
5. Press the navigation key up or down to select **On** and press .
6. Input the six digit prefix and press  to **Save**.


### Making an Abbreviated Dial Call

To make a call:

1. Enter the last four digits of the prefix phone number.
2. Press   for **Abbrev. Dial**.

## Dialing Options

Dialing options are displayed when you enter numbers using the keypad. To select an option press  and the number on the keypad that corresponds with the desired choice.

- **Talk** is used to dial the phone number. (If you are roaming and have the Call Guard feature activated, you must then press .)
- **Save** to save the phone number in your Internal Phone Book. See "Finding Internal Phone Book Entries" on page 62.
- **Find** is used to locate and display Internal Phone Book entries that contain the numbers entered. See "Finding Internal Phone Book Entries" on page 62.
- **Hard Pause** is used to insert a hard pause.
- **2 Second Pause** to insert a 2-second pause.
- **Speed Dial** is used to automatically dial the entry stored in the memory location entered.
- **Abbrev. Dialing** Abbreviated dialing allows you to enter a six-digit prefix for commonly used phone numbers.
- **4 Digit Dial** allows you to dial just the four digits displayed on the screen.


---

**Note:** Abbrev Dialing, 4 Digit Dial, and Speed Dial menus are displayed when the Abbrev Dial feature is enabled in the Settings and you enter 3-4 digits.

---


## In-Call Options

During a call, your phone displays menu options in addition to the main menu.

To select an option, highlight it and press .

- **(1) Mute or UnMute:** Select **Mute** to mute your phone's microphone. Select **Unmute** to reactivate the microphone.
- **(2) Call History:** checks your call log for missed, outgoing, and incoming calls. You can also erase the logs from this menu.
- **(3) Phone Book:** accesses the Phone Book menu options.
- **(4) 3-Way Call:** allows you to talk to two different people at the same time. (For more information, see "Making a Three-Way Call" on page 92.)
- **(5) Messaging:** allows you to check for voicemail and notifications.
- **(6) Voice Memo:** allows you to record the current conversation.
- **(7) Tools:** accesses the Tools menu options.
- **(8) Phone Info:** displays the hardware/software version, Username, and PRL being used.

## End-of-Call Options

After receiving a call from or making a call to a phone number that is not in your Internal Phone Book, the phone number, the duration of the call and the following menu options are displayed for 10 seconds. During this time you can press  to add this number to your internal phone book. (See "Saving a Phone Number" on page 18.)

---








**Note:** The End-of-Call options are not displayed for calls identified as Unknown ID or Restricted number.

---

## Saving a Phone Number

Your phone can store up to six phone numbers in each entry for a total of 300 Internal Phone Book numbers. Each entry's name can contain 20 characters. Your phone automatically sorts the Internal Phone Book entries alphabetically.

To save a number from standby mode:

1. Enter a phone number.
2. Press  for **Save**.
3. The **Add New Entry** screen is displayed. Press  to enter a new name or scroll through the phone book to select an existing name. Press  to add the additional number to the selected entry.\*
4. Use your navigation key to select a label (**Home, Work, Mobile, Pager, Fax, or No Label**) and press .
5. Enter a name for the entry using the numeric keys. Press  to change the entry method between **T9, Alpha, Symbol, and Number**.
6. When finished entering the name, press  to return to the phone book entry.
7. Press  to save the entry.

---

\* - This step is not necessary on the very first entry saved into the phone. Skip to the next step if you are entering the first entry in the phone book.

---

---

**Note:** This handset provides three types of Alpha entry:



**Abc** : sentence mode, **ABC** : all upper case, **abc** : all lower case when in alpha mode, you can toggle between the three modes using the \*shift key

---


## Finding a Phone Number

This feature allows you to search for phone numbers saved in your address book by entering 1-4 numbers of the last four digits saved. When searching, you must enter the digits in sequential order starting from the last number. For example; if you have a number saved with “1234” as the last four digits, you can enter “34” and a match will be found. If you enter “12”, no match will be found since the numbers are not in sequential order from the last digit.

To find a phone number:

1. Enter one to four numbers of the last four digits of a phone number and press  and select **Find**. (A list of possible matches is displayed.)
2. Use your navigation key to display the desired entry.
3. To dial the number, highlight it and press .

## Dialing and Saving Phone Numbers With Pauses


You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers. If you select a hard pause, the next set of numbers are sent when you press . If you select a 2-second pause, your phone automatically sends the next set of numbers after two seconds.



 
---


**Note:** You can have multiple pauses in a phone number and combine 2-second and hard pauses.

---

To dial or save phone numbers with pauses:

1. Enter the phone number.
2. Press  and select **Hard pause** or **2-sec pause**. **Hard pauses** are displayed as a “P” and **2-second pauses** as a “T”.
3. Enter additional numbers.

4. Press  to dial the number or Press   for **Save** to save the number in your Internal Phone Book.


When dialing a number with a hard pause, press  to send the next set of numbers.

## Dialing From the Internal Phone Book

To dial directly from an Internal Phone Book entry:

1. Press the navigation key up to display your Internal Phone Book.
2. Scroll left or right to search by **Name**, **Entry**, or **Group**.
3. Highlight the desired option and press the navigation key down.



 


# Controlling Your Phone's Settings

**Reminder:** To access the phone's main menu, press (**Menu**) from standby mode. Menu items may be selected by highlighting them with the navigation key and pressing , or you can press the number corresponding to the menu item on your keypad.

## Sound Settings

### Adjusting the Phone's Volume Settings

To adjust the ringer or key tone volume:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Volume** or  for **Key Tone**.

**Tip:** You can adjust the ringer volume in Standby mode or the earpiece volume during a call by using the volume keys on the side of your phone.

### Ringer Type

Ringer types help you identify incoming calls and messages. You can assign ringer types to individual phone book entries, types of calls, and types of messages.









- **Single Tones** include a variety of standard tones.
- **Ring Tones** include a variety of standard ringer types.
- **Melodies** includes a variety of standard musical melodies.

- **Downloaded** are ringers that have been downloaded right to your phone. (See “Downloading Ringers, Screen Savers and Games” on page 112 and “Ringers” on page 113.)
- **Vibrate** alerts you to calls or messages without disturbing others. To select vibrate mode, press the volume key down while your phone is in idle mode until Vibrate is selected.

### Selecting Ringer Types for Voice Calls





 

 


Your phone provides a variety of ringer options which allow you to customize your ring and volume settings.

To select a ringer type for voice calls so you recognize when a certain type of call is coming in by the ringer:




 
 

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Voice Calls**.
6. Press  for **With Caller ID** or  for **No Caller ID**.
7. Press the navigation key left or right to select **Single Tones**, **Ring Tones**, **Melodies**, or **Downloaded** ringers.
8. Press the navigation key down and then left or right to select the desired Ringer.
9. Press  to **Save** to exit.

## Selecting Ringer Types for Messages

To select a ringer type for messages:







1. Press   for **Messaging**.
2. Press  for **Settings**.
3. Press  for **Message Alerts**.
4. Press  for **Type**.
5. Press  for **Voicemail**,  for **Text Message**, or  for **Web Alerts**.
6. Press the navigation key left or right to select **Single Tones**, **Ring Tones**, **Melodies**, or **Downloaded** ringers.
7. Press the navigation button down and then left or right to select the desired Ringer.
8. Press  to **Save** and exit.

## Selecting Ringer Types for Data/Fax In

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Data/Fax In**.
6. Press the navigation key left or right to select **Single Tones**, **Ring Tones**, **Melodies**, or **Downloaded** ringers.
7. Press the navigation key down and then left or right to select the desired Ringer.
8. Press  to **Save**.







## Selecting Ringer Types for Schedule

To select a ringer type for schedules:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Schedule**.
6. Press the navigation key left or right to select **Single Tones**, **Ring Tones**, **Melodies**, or **Downloaded** ringers.
7. Press the navigation key down and then left or right to select the desired Ringer.
8. Press  to **Save**.

## Selecting Ringer Type for Roam Ringer

To select a ringer type for roam ringer:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Roam Ringer**.
6. Select **Normal** or **Distinctive** and press .



 



## Selecting a Key Tone

Your phone offers a number of options for selecting the audible tones accompanying a key press. (Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.)

There are three different tones available:



 
- **Normal** - Normal key beeps are heard when a button is pressed.
- **Piano** - Piano polyphonic tones are heard when a key is pressed.
- **Beep** - Polyphonic beep tones are heard when you press a key.




To select a key tone:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Key Tone**.
5. Press  for **Tone Type**.
6. Press the navigation key up or down to select the desired tone type.
7. Press  to **Select**.

## Key Tone Volume






 






To adjust the key tone volume:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.

4. Press  for **Key Tone**.
5. Press  for **Tone Level**.
6. Press the navigation key right to increase or left to decrease the volume.
7. Press  to **Save**.

## Alert Notification

To enable or disable alert sounds:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Alerts**.
5. Press:
  -  for **Minute Beep**.
  -  for **Service Alert**.
  -  for **Connect**.
  -  for **Disconnect**.
  -  for **Fade**.
  -  for **Power On/Off**.
  -  for **Flip Sound**.
6. Select **On** or **Off** using the navigation key and press  to **Select**.

## Silence Mode

There may be times when you need to silence your phone entirely. The phone's Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence Mode:

- Press and hold the volume key down in standby mode. (The screen will display "Ringer Off.")







To deactivate Silence Mode:

- Press the volume key up and select a desired volume level.

## Display Settings

### Changing the Text Greeting






 


The text greeting can be up to 14 characters and is displayed on your phone's screen in standby mode. You may choose to display a custom greeting or display your User Name on the phone's screen. To display or change your custom greeting:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Greeting**.
5. Press and hold  to clear the existing greeting.
6. Use the numeric keypad to enter a new custom greeting.
7. Press  to **Save** and exit.

## Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are illuminated after any key press is made.

To change the backlight setting:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Backlight**.
5. Press  for **LCD**,  for **Keypad**,  for **Pwr Save Mode**.
6. Use the navigation key to select **Flip open, 30 seconds, 15 seconds, 8 seconds**, for the LCD or Flip Open, 30 seconds, 15 seconds, 8 seconds, Off for keypad or On/Off for Power save mode.
7. Press  to **Select**.

---








**Note:** Long backlight settings affect the battery's talk and standby times.

---

## Changing the Display Screen






Your new phone offers options for what you see on the display screen while powering on or off and when in standby mode.

To change the display images:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Screen Saver**.
5. Press  for **Local Image**, or  for **Downloads**.
6. Press the navigation key left or right to display **Aqua**, **World Time**, **Calendar**, **Launch Pad**, or **Digital Clock** in local image mode.
7. Press  to **Select**.

## Changing the Phone's Menu Style

To select the display's menu style:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Menu Style**.
5. Press the navigation key up or down to select **Camera** or **Nature**.
6. Press  to **Select**.

## Location Settings







Your phone is equipped with a Location feature for use in connection with location-based services that may be available in the future. The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.



---

**Note:** Even if the Location feature is enabled, no service may use your location without your expressed permission.

---

To enable your phone's Location feature:






1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **Location**.
5. Read the Location information message and press .
6. Press the navigation key up or down to select **On** or **Off**.
7. Press  to **Select**.

When Location is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will display.

## Airplane Mode

When your phone is in Airplane Mode, it cannot send or receive any calls or access online information. You may still use the phone's other features, such as Games, Notepad, Voice Memos, etc., while you are in Airplane Mode.

To set your phone to Airplane Mode:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Airplane Mode**.
4. Press  to continue.
5. Press the navigation key up or down to select **On** or **Off** and press .

While in Airplane Mode, your phone's standby screen will display "Phone off." The phone will power cycle when you change from Airplane mode "On" to Airplane mode "Off". Turning the phone off and on again will reset the phone to airplane mode "off".

---









**Note: 911 and emergency calls can not be made in Airplane mode "on".**

---

## Phone Setup Options







### Shortcut

You have the option of assigning the navigation key to an often-used function. The center navigation key cannot be changed. Pressing the navigation key left in standby mode will launch the assigned feature.

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Launch Pad**.
4. Press  for **Up Key**,  for **Down Key**,  for **Left Key**, or  for **Right Key**.
5. Press the navigation key up or down to select one of the following functions:
  - Phone Book
  - Voice Memo
  - Scheduler
  - Messaging
  - Voice Dial
  - Ringer Type
  - Downloads
  - Display
  - Alarms
  - Calculator
  - Tools
6. Press to  **Select**.



 


## Call Answer Mode

To set the actions required to answer an incoming call:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **Call Answer** and select from the following:
  - **Any Key** - allows you to press any key on the keypad to answer incoming calls.
  - **Talk Key** - You can only press  to answer incoming calls.
  - **Flip Open** - When you open the flip the incoming call is automatically connected. No keys are required.
5. Press  to **Select**.






## Auto-Answer Mode

To answer calls when your phone is connected to an optional hands-free car kit or head set:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **Auto Answer**.
5. Press the navigation key up or down to select **Yes** or **No**.
6. Press  to **Select**.

## Display Language

Your phone can display text in English or French. Language selection changes all menus and voice message settings.









1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **Language**.
5. Press the navigation key up or down to select **English** or **French**.
6. Press  to **Select**.

## TTY Use With Handset

A TTY (also known as a TDD or Text Telephone), is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

To turn TTY Mode on or off:

1. Press      . (A brief explanation of TTY Mode will display.)
2. Press  again to continue.
3. Press the navigation key up or down to select **Enable TTY** or **Disable TTY** and press .

---

 
 
**Note:** In TTY Mode when your headset is plugged in, your phone will display the TTY access icon. If TTY mode is enabled, the headset cannot be used.

---


---

**IMPORTANT 911 Emergency Calling:** We recommend that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and land line communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs) rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and PSAP community are currently working to resolve this.

---



**36 Settings**

 




# Setting Your Phone's Security

## Accessing the Security Menu

You must enter your lock code to view the Security menu.

To access the Security menu:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Security**.
4. Enter your lock code.
5. The security menu is displayed.

---



**Tip:** If you can't recall your lock code, try using the last four digits of either your Social Security number or Phone Number or try 0000. If none of these work, call Customer Service at (888) 987-HELP (4357).

---

## Locking Your Phone


When your phone is locked, you can only receive incoming calls or make calls to 911, Customer Service, or special numbers.

To lock your phone:

1. From the Security menu, press  for **Lock Phone**.
2. Using the navigation key, select **Unlocked, On Power-Up, or Lock Now** and press .

## Unlocking Your Phone



 


To unlock your phone:

1. Press  and enter your lock code.




---

**Note:** If Lock on Power Up was selected under Locking Your Phone and you would like to change the setting back to Unlocked proceed using the steps listed below.

---

2. Press  for **Main Menu**.
3. Press  for **Settings**.
4. Press  for **Security** and enter your lock code.
5. Press  for **Lock Phone**.
6. Using the navigation key, select **Unlocked** and press . Changing the Lock Code



To change your lock code:


1. From the Security menu, press  for **Change Lock**.
2. Enter your new lock code and press .
3. Re-enter your new lock code and press .

## Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode.

To place an outgoing call in lock mode:

- To call an emergency number or special number enter the phone number and press .
- To place normal outgoing calls, press  to display the lock code screen. Enter your lock code. Enter the desired phone






number and press .

## Restricting Calls

You can restrict the phone numbers that your phone can call. (The Restrict Calls setting does not apply to 911 or Customer Service.) You can select between the following options:

- **Allow All** - Allows all calls to be made without any restrictions. (Default Setting).
- **PBook Only** - Allows you to call only the entries saved in the phone book. You can receive incoming calls from anyone.
- **Special# Only** - Allows you to call only the three numbers stored in the Special# section in the Security menu. You can receive incoming calls from anyone.

To restrict calls:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Security** and enter your lock code using the keypad.
4. Press  for **Restriction**.
5. Press the navigation key up or down to select **Allow All**, **PBook Only**, or **Special# Only** and Press .

---




**Note:** Restricted incoming calls are forwarded to voicemail.

---

## Using Special Numbers

You can save up to three special numbers in addition to your Internal Phone Book entries (the same number may be in both directories). You can make and receive calls from special numbers even when your phone is locked.

To add or replace a special number:

1. From the Security menu, press  for **Special #**.
2. Select entry one, two, or three and press .
3. Enter the number using the keypad.
4. Press  to **Save**.




---

**Note:** There are no Speed Dial options associated with special numbers.

---



## Erasing the Internal Phone Book

To erase all the names and numbers in your Internal Phone Book:

1. From the Security menu, press  for **Erase Pbook**.
2. Press the navigation key up and select **Yes**.
3. Press .
4. Press the navigation key up again to confirm and select **Yes**.
5. Press  to permanently delete.




## Erase Content

 
 
 
Erase Content deletes all saved downloaded content from the phone including games, ringers, screen savers, and applications. To erase:

1. From the Security menu, press  for **Erase Contents**.
2. Press the navigation key up and select **Yes**.
3. Press .

## Resetting Your Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings. The Phone Book, Call History, Scheduler, and Messaging are not affected. To reset your phone:

1. From the Security menu, press  for **Reset Phone**.
2. Press the navigation key up and select **Yes**.
3. Press .
4. Press the navigation key up again to confirm and select **Yes**.
5. Press  to reset.



# Controlling Your Roaming Experience

## Understanding Roaming

### Recognizing Icons on the Display Screen

Your phone's display screen always lets you know when you're off the network. The following chart indicates what you'll see depending on where you're using your phone.

	Roaming Indicator	Analog Indicator
Network		
Other Digital Networks	<b>R</b>	<b>A</b>

**Note:** You will pay a higher per-minute rate for roaming calls.


### Roaming on Other Digital Networks

When you're roaming, your call quality and security will be similar to the quality you receive when making calls on your home network. You may not be able to access certain features, such as web services.

### Roaming on Analog Networks

When you roam on analog networks, you will experience a similar quality provided by other analog carriers today. Although some features, such as Mobile Web services and Voice Command, will be unavailable, you can still make and receive calls and access voicemail. You will experience a few differences:

- You are more likely to experience static, cross-talk, fade-out, and dropped calls.

- Some features which are standard on the network, such as call waiting, web services, and direct international dialing, are unavailable.
- Though callers can leave voicemail messages while you are roaming, you will not receive notification until you return to the network. While roaming, you can periodically check your voicemail for new messages by dialing 1+area code+your Phone Number. Press  when you hear your greeting and enter your passcode at the prompt.
- There are security and privacy risks (eavesdropping and cloning) that exist with conventional analog services today.
- Your battery needs recharging sooner when you use your phone for analog roaming.

---

**Note:** If you're on a call when you leave the network and enter an area where roaming is available, your call is dropped. If your call is dropped in an area where you think service is available, turn your phone Off and On again to reconnect to the network.

---



 
## Setting Your Phone's System

Your phone allows you to control your ability to roam.


By using the **Roaming** menu option, you can determine which signals your phone accepts.

### Set System

Choose from three different settings on your phone to control your roaming experience:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.

4. Press  for **Set System**.

5. To select an option, highlight it and press .

- **Automatic:** This setting seeks service. When service is unavailable, the phone searches for an alternate system.
- **Home Only:** This setting allows you to access the home network only and prevents roaming on other networks.
- **Analog:** This setting allows you to access analog service only.
- **AMPS Home:** This setting allows you to access analog service only in your home coverage area.



## Set NAM

  This setting allows you to associate your mobile identification number (MIN) to your phone's electronic serial number (ESN).


1. Press     for **Set NAM**.

2. Press the navigation key up or down to select **NAM 1** or **NAM 2**.

3. Press  to **Select**.



## 46 Roaming

 

# Navigating Through Menus


## Menu Navigation

The navigation key on your phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times.




To navigate through a menu, simply press the navigation key up or down. If you are in a first-level menu, such as Settings, you may also navigate to the next menu by pressing the navigation key.

## Menu Structure

### Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any numbered option by simply pressing the corresponding number on the phone's keypad. You may also select any item by highlighting it and pressing .

For example, if you want to view your last incoming call:

1. Press  for **Main Menu**.
2. Press  for **Call History**.
3. Press  for **Incoming Calls**.

### Backing Up Within a Menu

To go to the previous menu:

- Press .

To return to standby mode:

- Press .

## Viewing the Menu

### 1: Call History

- 1: Outgoing Calls
- 2: Incoming Calls
- 3: Missed Calls
- 4: Erase History
  - 1: Outgoing Calls
  - 2: Incoming Calls
  - 3: Missed Calls
  - 4: All Calls
- 5: Air Time
  - 1: Last Call
  - 2: Total Calls

### 2: Phone Book

- 1: Find
  - 1: By Name
  - 2: By Entry
  - 3: By Group
- 2: Add New Entry
- 3: Group Setting
  - 1: Family
  - 2: Friends
  - 3: Colleague
  - 4: VIPs
- 4: My Phone #
- 5: Memory

### 3: Messaging

- 1: Send Message
- 2: Inbox
- 3: Outbox
- 4: Voicemail
- 5: Web Alerts
- 6: Draft
- 7: Settings

### 1: Display Popup

- 1: On
- 2: Off

### 2: Sending Options

- 1: Priority
  - 1: Normal
  - 2: Urgent
- 2: Call Back #
  - 1: Yes
  - 2: No

### 3: Canned Message

- 1: Can't talk right now.  
Send me a message.
  - 2: Call me
  - 3: Where are you?
  - 4: Can you pick up
  - 5: Meet me at
  - 6: Let's get lunch.
  - 7: The meeting has been canceled.
  - 8: I'll be there at
  - 9: What time does it start?
  - 10: I love you!
  - 11: User edit
  - 12: User edit
  - 13: User edit
  - 14: User edit
  - 15: User edit
  - 16: User edit
  - 17: User edit
  - 18: User edit
  - 19: User edit
  - 20: User edit
- ### 4: Message Alerts
- 1: Volume

- 2: Type
  - 1: Voicemail
  - 2: Text Message
  - 3: Web Alerts
- 3: MSG Reminder
  - 1: Off
  - 2: Once
  - 3: Every 2 min
- 5: Save In Outbox
  - 1: Yes
  - 2: No
- 6: Auto Delete
  - 1: Yes
  - 2: No
- 7: Alerts Setup
  - 1: Yes
  - 2: No
- 8: Voice Mail #

**4: Web**

- 1: Start Browser
- 2: Web Guard

**5: Downloads**

- 1: Games
  - 1: Get New
- 2: Ringers
  - 1: Get New
- 3: Screen Savers
  - 1: Get New
- 4: Applications
  - 1: Get New

**6: Tools**

- 1: Voice Memo
  - 1: Record
  - 2: Review
  - 3: Erase All

- 1: Yes
  - 2: No
- 2: Today
  - 3: Scheduler
  - 4: World Time
  - 5: Alarm Clock
    - 1: Alarm #1
    - 2: Alarm #2
    - 3: Alarm #3
  - 6: Task List
  - 7: Memo Pad
  - 8: Calculator
  - 9: Countdown
  - 0: Set Time (displayed when there is no time information and service.)

**7: Settings**

- 1: Display
  - 1: Menu Style
    - 1: Camera
    - 2: Nature
  - 2: Screen Saver
    - 1: Local Image
      - 1: Aqua
      - 2: World Time
      - 3: Calendar
      - 4: Launch Pad
      - 5: Digital Clock
    - 2: Downloads
  - 3: Incoming Call
    - 1: With Caller ID
      - 1: No Image
      - 2: Downloads
    - 2: No Caller ID
      - 1: No Image

- 2: Downloads
- 4: Greeting
- 5: Backlight
  - 1: LCD
    - 1: Flip open
    - 2: 30 seconds
    - 3: 15 seconds
    - 4: 8 seconds
  - 2: Keypad
    - 1: Flip open
    - 2: 30 seconds
    - 3: 15 seconds
    - 4: 8 seconds
    - 5: Off
  - 3: Pwr Save Mode
    - 1: On
    - 2: Off
- 6: Contrast
  - 1: Lowest
  - 2: Low
  - 3: Med
  - 4: High
  - 5: Highest
- 7: SVC Lamp
  - 1: On
  - 2: Off
- 2: Sounds
  - 1: Ringer Volume
    - 1: Calls
    - 2: Alarms
  - 2: Ringer Type
    - 1: Voice Calls
      - 1: With Caller ID
      - 2: No Caller ID
    - 2: Data/Fax In
- 3: Schedule
  - 4: Roam Ringer
    - 1: Normal
    - 2: Distinctive
- 3: Alerts
  - 1: Minute Beep
    - 1: On
    - 2: Off
  - 2: Service Alert
    - 1: On
    - 2: Off
  - 3: Connect
    - 1: On
    - 2: Off
  - 4: Disconnect
    - 1: On
    - 2: Off
  - 5: Fade
    - 1: On
    - 2: Off
  - 6: Power On/Off
    - 1: On
    - 2: Off
  - 7: Flip Sound
    - 1: On
    - 2: Off
- 4: Key Tone
  - 1: Tone Type
    - 1: Normal
    - 2: Piano
    - 3: Beep
  - 2: Tone Level
- 5: Tone Length
  - 1: Short
  - 2: Long

## 50 Navigating Through Menus

- 6: App. Volume
  - 1: Sound
  - 2: Vibrator
    - 1: On
    - 2: Off
- 3: Data Settings
  - 1: Data/Fax In
    - 1: Voice Only
    - 2: Fax in Only
    - 3: Data in Only
    - 4: Fax in Once
    - 5: Data in Once
  - 2: Set Data Rate
    - 1: Automatic
    - 2: Standard
- 4: Voice Dial
  - 1: Adapt Digits
  - 2: Reset Digits
    - 1: Yes
    - 2: No
  - 3: Set Active
    - 1: Talk Only
    - 2: Talk and Flip
  - 4: Choice List
    - 1: Digit Dial
      - 1: Yes
      - 2: No
    - 2: Name Dial
      - 1: Yes
      - 2: No
    - 3: Phonebook
      - 1: Yes
      - 2: No
  - 5: Help
  - 5: Security

- 1: Lock Phone
  - 1: Unlocked
  - 2: On Power-Up
  - 3: Lock Now
- 2: Change Lock
- 3: Restriction
  - 1: Allow All
  - 2: PBook Only
  - 3: Special# Only
- 4: Special #
  - 1: 911
  - 2: \*911
  - 3: #911
- 5: Erase Pbook
  - 1: Yes
  - 2: No
- 6: Erase Contents
  - 1: Yes
  - 2: No
- 7: Reset Phone
  - 1: Yes
  - 2: No
- 6: Airplane Mode
  - 1: On
  - 2: Off
- 7: Launch Pad
  - 1: Up Key (Options are the same for Up, Down, Left, and Right)
    - 1: Phone Book
    - 2: Voice Memo
    - 3: Scheduler
    - 4: Messaging
    - 5: Voice Dial
    - 6: Ringer Type
    - 7: Downloads

- 8: Display
- 9: Alarms
- 10: Calculator
- 11: Tools
- 2: Down Key
- 3: Left Key
- 4: Right Key
- 8: Others
  - 1: Abbrev. Dial
    - 1: On
    - 2: Off
  - 2: Call Answer
    - 1: Any Key
    - 2: Talk Key
    - 3: Flip Open
  - 3: Auto Answer
    - 1: Yes
    - 2: No
  - 4: Language
    - 1: English
    - 2: French
  - 5: Set NAM
    - 1: NAM 1
    - 2: NAM2
  - 6: Set System
    - 1: Automatic
    - 2: Home Only
    - 3: Analog
    - 4: AMPS Home
  - 7: Location
    - 1: On
    - 2: Off
  - 8: Game Pad
    - 1: Get Device
    - 2: Key Remap

- 1: Cursor Key  
(Options are same as the Fire Keys)
  - 1: Up Key
  - 2: Down Key
  - 3: Left Key
  - 4: Right Key
- 2: Fire Key
  - 1: Fire A Key  
(options are the same for Fire A, B, C, & D)
    - 1: Up Key
    - 2: Down Key
    - 3: Left Key
    - 4: Right Key
    - 5: WEB Key
    - 6: OK Key
    - 7: Talk Key
    - 8: Back Key
    - 9: End Key
    - 10: Menu Key
    - 11: #1 Key
    - 12: #2 Key
    - 13: #3 Key
    - 14: #4 Key
    - 15: #5 Key
    - 16: #6 Key
    - 17: #7 Key
    - 18: #8 Key
    - 19: #9 Key
    - 20: #0 Key
    - 21: Star Key
    - 22: Pound Key
    - 23: Launching
  - 2: Fire B Key
  - 3: Fire C Key

## 52 Navigating Through Menus

 
 
4: Fire D Key  
3: Other Key  
1: Start Key  
(options are the same for Menu key)

- 1: WEB Key
- 2: OK Key
- 3: Talk Key
- 4: Back Key
- 5: End Key
- 6: Menu Key
- 7: #1 Key
- 8: #2 Key
- 9: #3 Key
- 10: #4 Key
- 11: #5 Key
- 12: #6 Key
- 13: #7 Key
- 14: #8 Key
- 15: #9 Key
- 16: #0 Key
- 17: Star Key
- 18: Pound Key
- 19: Launching
- 2: Menu Key


9: Phone Info

**InUse Menu**

- 1: Mute/Unmute
- 2: Call History
- 3: Phone Book
- 4: 3-Way Call
- 5: Messaging
- 6: Voice Memo
- 7: Tools
- 8: Phone Info



## 54 Navigating Through Menus

 






# Managing Call History

## Viewing History



You'll find the Call History feature very helpful. It is a list of the last 20 phone numbers (or Internal Phone Book entries) for calls you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Internal Phone Book entry name (if the phone number is in your Internal Phone Book). Duplicate calls (same number and type of call) may only appear once on the list.

To view a Call History entry:

1. Press  for **Main Menu**.
2. Press  for **Call History**.
  - Press  for **Outgoing Calls**
  - Press  for **Incoming Calls**
  - Press  for **Missed Calls**

## Call History Options

For additional information and options on a particular call, highlight a Call History entry and press . This feature displays the time and date of the call and, by pressing , gives you the option of selecting:

- **Talk**
- **Save, Show Entry**
- **Prepend**
- **Erase**





---

**Tip:** You can also view the next Call History entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.

---

## Making a Call From Call History

To place a call from Call History:

1. Press  for **Main Menu**.
2. Press  for **Call History**.
3. Highlight the desired entry in the **Outgoing, Incoming, or Missed** call history and press .
4. Press  to dial the number.

---





 
**Note:** You cannot make calls from Call History to entries identified as Unknown or Restricted. Calls labeled Data or Fax can only be dialed through a personal computer.

---

## Saving a Phone Number From Call History

Your phone can store up to 300 Internal Phone Book entries. Phone Book entries can store up to a total of six phone numbers and each entry's name can contain 20 characters.

To save a phone number from Call History:

1. Press  for **Main Menu**.
2. Press  for **Call History**.
3. Highlight the desired entry in the **Outgoing, Incoming, or Missed** call history and press .
4. Press   to **Save** the number.

After you have saved the number, the new Internal Phone Book entry is displayed. (See “Internal Phone Book Entry Options” on page 59.)







---

**Note:** You cannot save phone numbers already in your Internal Phone Book or from calls identified as Unknown ID or Restricted.

---

## Prepending a Phone Number From Call History

If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by following these steps:

1. Press  for **Main Menu**.
2. Press  for **Call History**.
3. Highlight the desired entry in the **Missed, Outgoing, or Incoming** call history and press .
4. Press   to Prepend the number.
5. Use the keypad to enter the desired numbers.
6. Press  to call.

---





 



**Note:** Prepending allows you to enter a series of numbers before the actual phone number.

---

## Erasing Call History






To erase individual Call History entries, see “Call History Options” on page 55.

To erase Call History:

1. Press  for **Main Menu**.
2. Press  for **Call History**.
3. Press  for **Erase History**.
  - Press  to erase **Outgoing Calls**.
  - Press  to erase **Incoming Calls**.
  - Press  to erase **Missed Calls**.
  - Press  to erase **All Calls**.
4. Using the navigation key, highlight **Yes** and press .


## Air Time

 
Air time allows you to check the time of the last call or the total air time since your phone was activated on the network. These times are not meant for billing purposes. To view the air time:


1. Press  for **Main Menu**.
2. Press  for **Call History**.
3. Press  for **Air Time**.
4. Press  for **Last Call** or  for **Total Calls**.

# Using the Internal Phone Book

## Internal Phone Book Entry Options

When you display an Internal Phone Book entry, the following options are displayed when you press .

- **Talk** to dial the phone number. (If you are roaming and have Call Guard activated, press  to complete the call.)
- **Edit** allows you to modify or add information to the entry.
- **Prepend** allows you to add a series of numbers before the phone number is dialed.
- **Erase** allows you to permanently delete the entry.

To select an option, highlight it and press  or press the corresponding number on the keypad.

---

**Tip:** You can view the next entry by pressing the navigation key right or view the previous entry by pressing the navigation key left.



---

## Entering Text

### Selecting a Character Input Mode

Your phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding an Internal Phone Book entry).

To change the character input mode:

1. Before you start entering text, press .
2. To select a character input mode, highlight it and press .
  - **T9 (English)** to enter characters using T9 Text Input (see page 60).

- **Alpha** to enter characters by tapping the keypad (see page 60).
- **Symbol** to enter symbols (see page 61).
- **Number** to enter numbers (see page 61).

The Shortcut option is displayed when you are creating an email or entering a URL. The following options are available:

- **www.** automatically enters “www.”
- **.com** automatically enters “.com”.
- **.org** automatically enters “.org”.
- **.net** automatically enters “.net”.
- **.edu** automatically enters “.edu”.
- **.wap** automatically enters “.wap”.
- **https://** automatically enters “https://”.

## Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your phone by pressing keys just once per letter. (To select the T9 Word mode when entering text, see “Selecting a Character Input Mode” on page 59.)

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.) If the word you want does not display after you have entered all the letters, press **Next** to scroll through additional word selections.

To accept a word and insert a space, press **Space**.

If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to delete an entire entry.

## Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad, select the **Alpha** mode (see “Selecting a Character Input Mode” on page 59). Press the corresponding key until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercase.

Characters scroll in the following order:

-  . , - ? ! ' @ : / 1
-  A B C 2 a b c
-  D E F 3 d e f
-  G H I 4 g h i
-  J K L 5 j k l
-  M N O 6 m n o
-  P Q R S 7 p q r s
-  T U V 8 t u v
-  W X Y Z 9 w x y z
-  0
-  Space
-  Shift

After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character not on the same key.

---

**Note:** If you press and hold a numeric key for a few seconds, it will automatically display the number.

---


 




## Entering Numbers and Symbols

- To enter numbers, select the **Number** mode and press the appropriate key. (See “Selecting a Character Input Mode” on page 59).
- To enter symbols, select the **Symbols** mode. (See “Selecting a Character Input Mode” on page 59.) To enter a symbol, press the appropriate key indicated on the display.

## Adding a New Internal Phone Book Entry

Your phone can store up to 300 Internal Phone Book numbers or email addresses. Phone book entries can store up to a total of six phone numbers and the entry's name can contain 20 characters.

To add a new entry:

1. Press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Add New Entry**.
4. Enter a new phone number and press .
5. Select the **Type** using the navigation key.
6. Enter the name using the keypad and press .
7. Press  to **Save**.

---

**Note:** To save an email address in the phone book, you must have a phone number associated with the address.




---


## Finding Internal Phone Book Entries

There are several ways to display your Internal Phone Book entries. Follow the steps outlined in the sections below to display entries from the Internal Phone Book menu.

### Finding Names

You can review all the entries stored in your Internal Phone Book or find an entry quickly by following these simple steps:

1. Press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Find**.

4. Press the navigation key left or right to search by **Name**, **Entry**, or **Group**.
5. Once the desired option is highlighted, press the navigation key down.
6. Enter the first few letters or entry # to locate the desired entry.
7. Scroll to highlight the name and press  to make the call.


 

---

**Shortcut:** From standby mode, press the navigation key down to display the Find feature.

---


 

### Finding Speed Dial Numbers

To find phone numbers you have stored in speed dial locations:

1. Press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Find**.
4. Press the navigation key to the right until **By Entry** is highlighted.
5. Enter the entry or speed dial location number.

### Finding Group Entries


 







To find entries designated as part of a group:

1. Press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Find**.
4. Press the navigation key to the right until **By Group** is highlighted.

5. Press the navigation key down once to highlight the group selection. Press the navigation key left or right to select the desired group. (If you do not have any groups associated with your phone book entries, see "Changing the Group Name" on page 67 to change the group names. If no group is selected, the entry is automatically set to No Group.)

## Adding a Phone Number to an Internal Phone Book Entry

To add a phone number to an entry:

1. Press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Find**.
4. Select the desired entry and press .
5. Press   to edit the entry.
6. Press the navigation key down until the desired label is selected and press  to edit.
7. Enter the phone number using the keypad and press .
8. Press  to **Save**.


---










**Note:** Phone numbers labeled Fax or Data can only be dialed through a personal computer.

---

## Editing an Internal Phone Book Entry's Phone Number

To edit an entry's phone number:


 





1. Press  for **Main Menu**.



2. Press  for **Phone Book**.
3. Press  for **Find**.
4. Select the desired entry and press .
5. Press   to edit the entry.
6. Press the navigation key down until the desired phone number is selected and press  to edit.
7. Press and hold  to erase the entire number or press once to erase just the last number.
8. Enter the new number using the keypad and press .
9. Press  to **Save**.

## Selecting a Ringer Type for an Entry

You can assign a ringer type to an Internal Phone Book entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 21.)

To select a ringer type for an entry:








1. Press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Find**.
4. Select the desired entry and press .
5. Press   to edit the entry.
6. Press the navigation key down until **Name Ringer** is selected and press  to edit.
7. Press the navigation key to the right and highlight the desired Ringer Category (Default, Single Tone, Ringtones, Melodies, or Downloaded.)
8. Press the navigation key down.

9. Press the navigation key to the left or right to highlight and listen to the desired Ringer and press .
10. Press  to **Save**.




## Secret Internal Phone Book Entries

You can hide an entry's phone number(s) and require your lock code to edit the entry by making it secret. The entry name is still displayed, but the entry's phone numbers are replaced by "(SECRET)".

To make an entry secret:

1. Press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Find**.
4. Select the desired entry and press .
5. Press   to edit the entry.
6. Press the navigation key down until **Secret** is selected.
7. Press the navigation key left or right until **On** is displayed in the Secret field and press  to **Save**.

To make an entry public:

1. Display an Internal Phone Book entry.
2. Press   to edit the entry.
3. Enter your lock code.
4. Press the navigation key down until **Secret** is selected.
5. Press the navigation key left or right until **Off** is displayed in the Secret field and press  to **Save**.

---

**Tip:** If you can't recall your lock code, try using the last four digits of either your Social Security number or Phone Number or try 0000. If none of these work, call Customer Service at (888) 987-HELP (4357).








---

## Changing the Group Name

You can associate a preset group name to your entries to help you sort them easier in the phone book. The preset group names already programmed into your phone are:


- **Family**
- **Friends**
- **Colleague**
- **VIPs**
- **No Group**

To associate an existing number located in your phone book:

1. Press  for **Main Menu**.
2. Press  for **Phone Book**.
3. Press  for **Find**.
4. Select the desired entry and press .
5. Press   to edit the entry.
6. Press the navigation key down until the **Group** is selected.
7. Press the navigation key left or right until the desired group name is displayed.
8. Press  to **Save**.



To associate a new number:




 

 

1. Follow the steps for entering a Adding a New Internal Phone Book Entry.
2. Before saving, press the navigation key down until **Group** is selected.
3. Press the navigation key left or right until the desired group name is displayed.
4. Press  to **Save**.


# Personal Organizer

## Adding an Event to the Scheduler

Your Scheduler helps organize your time and reminds you of important events.

To add an event:

1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press for  **Scheduler**.
4. Press  for **Add New**.
5. Enter the event description using the keypad and press .
6. Enter the Start Time and Date using the keypad. Press  for AM and  for PM.
7. Enter the End Time and Date using the keypad.
8. Press the Navigation key left or right and select one of the following:


 
 
 


<b>No Alarm</b>	<b>30min before</b>
<b>On Time</b>	<b>1Hr before</b>
<b>10min before</b>	
9. Press to  **Save**.

## Event Alerts

There are several ways your phone alerts you of scheduled events:




- By playing the assigned ringer type.
- By illuminating the backlight.
- By flashing the LED.

To select the ringer:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Schedule**.
6. Press the navigation key left or right to select the desired ringer category.
7. Press the navigation key down and then left or right to select the desired ringer or melody.
8. Press  to **Save**.



 



## Viewing Events

To view your scheduled events:

1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press for  **Today**.
4. A list of the events scheduled for the day are displayed.



## Erasing a Day's Events

To erase a scheduled day's events:

1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press for  **Today**.
4. Highlight the desired event and press   to **Erase**.
5. Select **Yes** using the navigation key and press  to confirm.








## Going to Today's Scheduler Menu


If you are viewing the Scheduler menu and wish to go to the Scheduler menu for today's date:

- From the Scheduler menu, highlight the current date and press  .

## Purging Events









To delete events scheduled before a specific time and date:

1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press  for **Scheduler**.
4. Highlight the desired day of the event being deleted.
5. Press   for **View**.
6. Press the navigation key up or down to select the desired event.
7. Press   to **Erase** the event.

8. Select **Yes** with the navigation key and press  to confirm.

## Purging All Events




To delete all scheduled events:



1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press  for **Scheduler**.
4. Highlight the desired day of the event being deleted.
5. Press   for **View**.
6. Press the navigation key up or down to select the desired event.
7. Press   to **Erase All** events.
8. Select **Yes** with the navigation key and press  to confirm.

## World Time

World Time displays what time it is in twenty-four different time zones around the world together with one or more major cities, states, regions, or countries in a time zone.

To access world time:

1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press  for **World Time**.
4. Press the navigation key left, right, up, or down to display the different time zones.

5. Press   to turn **DST Setting** (Daylight Savings Time) On or Off for that time zone.








---

Note: A sun icon is displayed on-screen if DST is selected for a time zone.








---

## Using the Alarm Clock





Your phone comes with a built-in alarm clock with multiple alarm capabilities. To use this feature, follow these easy steps:

1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press  for **Alarm Clock**.
4. Press , , or  to select an **Alarm**.
5. Press the navigation key left or right and select **On**.
6. Press the navigation key down once and enter the alarm time.
7. Press the navigation key down once to select the desired ringer. Cycle through the ringers by pressing the navigation key left or right.
8. Press the navigation key down once to select the alarm frequency. Press the navigation key left or right and select one of the following options:
  - **Daily**
  - **Once**
  - **Mon to Fri**
  - **Sat & Sun**
9. Press  to **Save**.



## Task List

 

1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press  for **Task List**.
4. If there are no existing memo's, the New Task screen is automatically displayed. If there is a memo already saved, press   for **Add New**.
5. Enter up to 32 characters in the memo and press .
6. Enter the **Until time** and **Date** using the keypad.
7. Highlight the priority level and press the navigation key left or right to select one of the following:
  - **Low**
  - **High**
8. Press  to **Save**.

### To view a saved Task:


1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press  for **Task List**.
4. Highlight the desired task using the navigation key and press  to view.

### To erase a saved Task:

1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press  for **Task List**.

4. Highlight the desired task using the navigation key and press  for **Erase**.
5. Select **Yes** and press  to confirm the deletion.

---






**Note:** Press  to Erase All Tasks in the list.

---





## Using the Memo Pad

Your phone comes with a memo pad you can use to compose and store reminders and notes to help keep you organized.







### To compose a note:

1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press  for **Memo Pad**.
4. If there are no existing memo's, the phone displays "No Memo Entered" and a New Memo screen is automatically displayed. If there is a memo already saved, press  for **Add New**.
5. Enter up to 64 characters in the memo and press  to **Save**.

### To read a saved note:



 




1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press  for **Memo Pad**.
4. Highlight the desired memo using the navigation key and press  to view.

### To erase saved notes:

1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press  for **Memo Pad**.
4. Highlight the desired memo using the navigation key and press   for **Erase**.
5. Select **Yes** and press  to confirm the deletion.

## Using the Calculator

Your phone comes with a built-in calculator function. To use this feature, follow these easy steps:

1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press  for **Calculator**.
4. Enter a number with the keypad. (Press  to insert a decimal point and/or  to make the number negative or positive.)
5. Press the navigation key:
  - **Left - Subtract**
  - **Right - Multiply**
  - **Up - Add**
  - **Down - Divide**
  -  - **Decimal**
  -  - **To change the -/+ sign.**
6. Enter the next number using the keypad.








**Note:** For more complex equations, enter all the numbers and mathematical signs before pressing OK.

7. Press  to view the results.





## Countdown

Countdown allows you to enter a future date and time into the phone and then see the amount of days, hours, and minutes until that time is reached.

To setup a new countdown:

1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press  for **Countdown**.
4. If there are no existing countdowns, the phone displays “No Countdown Entered” and a New Countdown screen is automatically displayed. If there is already a countdown entered, press   for **Add New**.
5. Enter a name using the keypad and press .
6. Enter the **Input** time and date values and press  to **Save**.

To view a countdown:

1. Press  for **Main Menu**.
2. Press  for **Tools**.
3. Press  for **Countdown**.
4. Press the navigation key up or down to highlight the desired countdown and press .



---

**Tip:** When viewing an existing countdown, press the navigation key left or right to cycle between the other countdown entries.

---

---

**Note:** No audible alert is sounded when the countdown is reached.


---

# Voice Services

## Activating Voice Recognition

Voice recognition allows you to say commands to perform common functions supported by your phone. There is no voice training required to use the voice recognition feature. You simply say the pre-designated command displayed on your screen in a normal tone of voice to perform the desired function.

To activate voice recognition:

1. Press and hold .
2. The phone prompts you to say a voice command. Wait for the beep and then say one of the following commands:
  - **Digit Dial**
  - **Voice Memo**
  - **Browser**
  - **Name Dial**
  - **Phonebook**
  - **Play Games**

When it recognizes one of these commands, the phone launches the associated application. If the phone does not hear a command within approximately eight seconds, it de-activates voice recognition without taking any action.

---

**Note:** If you want to use a different button to activate voice recognition, press    for **Launch Pad**. On this menu, you can change button assignments, including the button used to launch "Voice Dial," which is the voice recognition application.

---

## Digit Dial


Digit Dial allows you dial any valid 7 or 11 digit North American phone number by speaking the number naturally, without pausing between the digits.

Tips for using Digit Dial:

- Digit Dial works best in quieter environments.

- When saying a number, speak at a normal speed and say each digit clearly. There is no need to pause between digits.
- The phone recognizes the digits one, two, three, four, five, six, seven, eight, nine, zero, and oh. The phone does not recognize numbers such as "one eight hundred" for "1-800." Instead, say "one-eight-zero-zero."
- The phone recognizes only valid 7, 10, or 11 digit North American phone numbers.
- If your phone does not usually recognize you correctly when you are using Digit Dial, try adapting Digit Dial to your voice, which can significantly improve accuracy for some speakers. See the section "Adapting Digit Dial" for details.



To place a call using Digit Dial:

1. Activate voice recognition by pressing and holding . The phone prompts you for a command.
2. Say **Digit Dial**. The phone prompts you to say the number.
3. Say a valid 7, 10 or 11 digit North American phone number naturally and clearly.

---

**Note:** If desired, you can say the number "1" before the number. This is not required, the call is made both ways.

---

4. If the phone asks you, "Did You Say," followed by the correct number, say **Yes**." You can also select the correct number from those displayed on the screen by pressing  on the correct number. The phone will then dial the number.
5. If the phone asks you, "Did You Say," followed by an incorrect number, say **No**." If there are other alternatives, the phone will prompt you with the next one. You can also press the navigation key up or down to select the correct number from the Choice List, and then press  to dial.

---







**Note:** In some cases, the phone might ask you to repeat a number. Make sure that the number is a valid 7 or 10 digit North American phone number, and then say the number again. If the number isn't valid, or if the phone still doesn't understand the number on the second try, it will not place a call.

---

## Enabling/Disabling Digit Dial Choice Lists

You can customize whether the Digit Dial feature displays the list of top voice recognition choices or automatically dials the first number, without displaying a choice list.

To enable or disable choice lists for Digit Dial:

1. Press   for **Settings**.
2. Press  for **Voice Dial**.
3. Press  for **Choice List**.
4. Press  for **Digit Dial**.
5. Press the navigation key up or down to select **Yes** or **No** and press .

---

**Note:** Disabling the choice list does not disable the digit dial feature. Only the choice list is disabled.

---

## Adapting Digit Dial

Digit Dialing is speaker independent, which means that no training or adaptation is required. Some users with heavy accents or unusual voice characteristics may find difficulty in achieving high accuracy with speaker independent digit dialing, so the Adapt Digits feature allows users to dramatically improve the digit accuracy through adaptation. Users who get acceptable digit recognition accuracy will find no additional benefit to performing the Adapt Digit adaptation.

After you adapt Digit Dial, your phone will be customized to your voice. Other people will not be able to use Digit Dial on your phone unless they reset the phone to factory defaults.

---

**Important:** ONLY adapt Digit Dial if the system is frequently misrecognizing your speech. You can always restore the system to its original factory setting.






---


Adaptation involves recording several digit sequences to teach the system your voice. The adaptation process takes about 3 minutes.

Tips for adapting Digit Dial:

- Adapt digits in a quiet place.
- Make sure you wait for the beep before starting to speak.
- Speak clearly, but say each digit sequence naturally.
- If you make a mistake while recording a sequence of digits, or if there is an unexpected noise that spoils the recording, you can say or select **No** when the prompt asks, "Did the recording sound OK?". You will then be prompted to re-record the sequence.

To adapt Digit Dial to your voice:

1. Press   for **Settings**.
2. Press  for **Voice Dial**.
3. Press  for **Adapt Digits**.
4. The phone displays the first digit sequence. When you are ready to start recording, press . The phone prompts you to say the first sequence of digits.
5. Wait for the beep, and then repeat the digits using a normal tone of voice. The phone plays back your recording and asks you if the recording sounds "OK."

6. If the recording sounds ok (no mistakes, and no background noises), say **"Yes."** If you need to re-record the digits to fix any problems, say **"No."** The phone then prompts you to say the digits again. Wait for the beep, and then record the digits again. Repeat this step until you are satisfied with the recording.
7. After confirming that the recording sounds ok, repeat the recording process with the next set of digits. After six sets of digits, the phone will ask you whether you want to do more adaptation. Answer **"Yes."**
8. Repeat steps 4-8 for another six sets of digits. After the sixth set of digits, you will be half way through the session and the phone asks "More Adapation?". Select OK to continue for six more sets of digits, or press  for partial adaptation. When you are finished with a full session, you will reach a screen that reads, "Adaptation Complete".






---

**Note:** It is recommended that you perform the complete adaptation of Digit Dial at least once to achieve the maximum benefit of this feature. If a partial adaptation is performed, you can always return later and resume the process from the half way point.

---

### Resetting Digit Dial Adaptation


To erase any adaptation and reset Digit Dial to its original state:

1. Press   for **Settings**.
2. Press  for **Voice Dial**.
3. Press  for **Reset Digits**.
4. Press the navigation key up or down button to select Yes and press .

## Using Name Dial

For best results with Name Dial, enter first and last names in your phone book, avoid using abbreviations, and make sure the names are spelled correctly. Name Dial automatically voice-activates every contact in your Phonebook without the need to record or "train" names before using them. With Name Dial you can dial any person in your Phonebook by saying that person's name.

To place a call using Name Dial:





1. Activate voice recognition by pressing and holding . The phone prompts you for a command.
2. Say **Name Dial**. The phone prompts you to say a name.
3. Say the full name of the person you want to call, exactly as it is entered in your Phonebook. The phone plays the name through the earpiece and displays it on the screen. If the Phonebook contains only one number for the name, the phone automatically dials that number.
4. If the name that you spoke has more than one number associated with it, the phone displays the different locations (home, work, etc.) and asks you which one to dial. Say one of the following locations:
  - **Home**
  - **Mobile**
  - **Fax**
  - **Work**
  - **Pager**
5. The phone dials the number for the location you specified.

### Enabling/Disabling Name Dial Choice Lists

You can customize whether the Name Dial feature displays a list of choices for names that sound alike, or brings up information for the first recognized name, without displaying a choice list.

To enable or disable choice lists for Name Dial:


1. Press   for **Settings**.

2. Press  for **Voice Dial**.
3. Press  for **Choice List**.
4. Press  for **Name Dial**.
5. Press the navigation key up or down to select **Yes** or **No** and press .

When choice lists are enabled for Name Dial, after you say the name, the phone will display one or more names on the screen and prompt you to confirm the name you spoke.

"If the phone says, "Did You Say," followed by the correct name, say **"Yes."**


"If the phone asks you, "Did You Say," followed by an incorrect name, say **"No."** The phone then prompts you with the next name, if there is one. If there are no more names, the phone will say "Sorry, No Match Found," and will not place a call.

You can also choose a name from the choice list manually. Use the Launch Pad up and down buttons to highlight the name, and then press  to select it.

## Using Phonebook

Phonebook allows you to retrieve contact information for any person saved in your phone by saying the full name of the person.







To retrieve information using Phonebook:

1. Activate voice recognition by pressing and holding . The phone prompts you for a command.
2. Say **Phonebook**. The phone prompts you to say the name.
3. Say the full name of the person, exactly as it is entered in your Phonebook. The phone plays the name it recognized through the earpiece, and then opens the contact information for that name.

## Enabling/Disabling Phonebook Choice Lists

You can customize whether the Phonebook feature displays a list of choices for names that sound alike, or brings up information for the first recognized name, without displaying a choice list.

To enable or disable choice lists for Phonebook:


1. Press   for **Settings**.
2. Press  for **Voice Dial**.
3. Press  for **Choice List**.
4. Press  for **Phonebook**.
5. Press the navigation key up or down to select **Yes** or **No** and press .

When choice lists are enabled for Phonebook, after you say the name, the phone will display one or more names on the screen and prompt you to confirm the name you spoke.

"If the phone says, "Did You Say," followed by the correct name, say **"Yes."**

"If the phone asks you, "Did You Say," followed by an incorrect name, say **"No."** The phone then prompts you with the next name, if there is one. If there are no more names, the phone will say "Sorry, No Match Found."

You can also choose a name from the choice list manually. Press the navigation key up or down to highlight the name, and then press

 to select it.

## Recording Memos








You can use your phone to record memos, or record the person at the other end of a phone call.

---






**Note:** You can store up to 10 minutes of memos at a time, in up to 10 separate memos. Individual memos can be up to 60 seconds long.

---

To record a memo using the phone's built-in microphone:




 



1. Press   for **Tools**.
2. Press  for **Voice Memo**.
3. Press  for **Record**. The phone prompts you to start recording after the beep.
4. Wait for the beep and then start speaking. As it is recording, the phone displays a countdown timer that shows how many seconds are left for recording.
5. To pause the memo, press . When a memo is paused, press  again to resume recording.
6. To finish recording, press .

When you have finished recording, the phone offers you the option of reviewing the memo, re-recording the memo, saving it, or quitting without saving the memo.





- To listen to the memo again, select **Review** and press .
- To discard the current recording and make a new one, select **Rerecord** and press .
- To save the memo and return to the home screen, select **Save** and press . The phone prompts you to enter a name for the memo. Enter a name. Use the Menu to enter letters, numbers, or symbols. When you are done, press .
- To quit the memo feature without saving the memo, select **Quit** and press .

## Reviewing and Erasing Memos






To review (replay) a memo you have recorded earlier:

1. Press   for **Tools**.
2. Press  for **Voice Memo**.
3. Press  for **Review**. The phone displays a list of saved memos, with the first one selected.
4. Select a memo and press , or press the number corresponding to the memo you want to review. The phone replays the memo. To pause the memo during replay, press . Press  again to resume replaying the memo.

### To erase an individual memo:

1. Follow the steps above to display the list of saved memos.
2. Select the memo to erase.
3. Press   for **Erase**.
4. Press the navigation key up to select **Yes** and press .
5. Press .

### To erase all existing voice memos in a single step:

1. Press   for **Tools**.
2. Press  for **Voice Memo**.
3. Press  for **Erase All**. The phone asks you if you want to erase all voice memos.
4. Select **Yes** and press .


# The Basics

## Using Voicemail

### Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Voicemail and personal greeting as soon as your phone is activated.

To set up voicemail:

1. Press and hold .
2. Follow the system prompts to create your passcode, record your greeting, and record your name announcement.

---

**Note:** You must request this feature from your service provider for it to work correctly.

---


---

**Note:** The voicemail setup process may vary in certain Affiliate areas.




---

### Voicemail Notification


There are several ways your phone alerts you:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By a blinking red LED light.
- By displaying  at the top of your screen.

## New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail. To call your voicemail, press and hold . To display your Missed Log, press  .

---

**Important:** When you are roaming off the network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your Phone Number. When your voicemail answers, press  and enter your passcode. You will be charged roaming rates when accessing voicemail while roaming off the network.

---

---

**Note:** Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in a Service Area.

---




## Retrieving Your Voicemail Messages

You can review your messages directly from your phone or from any other touch-tone phone. To dial from your phone, you can either speed dial your voicemail or use the menu keys.

### Using One-Touch Message Access:

- Press and hold . Follow the system prompts.

### Using the Menu Keys on Your Phone to Access Your Messages:




1. Press  for **Main Menu**.
2. Press  for **Messaging**.
3. Press  for **Voicemail**.

---

**Note:** You are charged for airtime minutes when you are accessing your voicemail from your phone.

---









## Using a Phone Other Than Your Wireless Phone to Access Messages:

1. Dial your wireless phone number.
2. When your voicemail answers, press  .
3. Enter your passcode and press .

## Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.






To clear the icon from the display screen:

1. Press  for **Main Menu**.
2. Press   for **Messaging**.
3. Press   for **Voicemail**.
4. Press   for **Clear Icon**.
5. Press the navigation key up to select **Yes** and press .

## Using Caller ID

Caller ID lets people know who's calling by displaying the number of the person calling.

To block your phone number from being displayed for a specific outgoing call:


1. Press    .
2. Enter the number you want to call.
3. Press .

To permanently block your number, call Customer Service.

## Responding to Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).





To respond to an incoming call while you're on a call:

- Press . (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- Press  again.






---

**Tip:** For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing     before placing your call. Call Waiting is automatically reactivated once you end the call.

---


## Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call and press .
2. Once you have established the connection, press   for **3-Way Call**.
3. Dial the second number and press .
4. When you're connected to the second party, press  again to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

---

**Tip:** You can also begin a Three-Way Call by displaying a phone number stored in your Internal Phone Book, Call History, or Messaging. To call the third party, press .

---

**Note:** Call Waiting and Three-Way Calling are not available while roaming off the network.





---

## Data/Fax

Your phone is capable of sending and receiving digital data and fax calls when connected to a computing device (laptop, desktop, hand held, palmtop, etc.) running the Windows or Windows NT operating system. Your phone functions similar to a typical modem on your PC, enabling you to use wireless data involving a wide variety of Windows applications.

To use digital data or fax services with your phone, you will need to obtain a digital data/fax kit from your service provider. This kit contains the necessary cables, software, and documentation required for you to connect and use your phone with your computing device.






### Data/Fax setup

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Data Settings**.
4. Press  for **Data/Fax In**.
5. Press the navigation key up or down to select **Voice Only**, **Fax in Only**, **Data in Only**, **Fax in Once**, or **Data in Once**.

6. Press  to **Select**.

- **Voice Only:** No incoming Data/Fax calls can be received.
- **Fax in Only:** No Voice Calls can be received. Only allows incoming Fax transmissions.
- **Data in Only:** No voice calls can be received. Only allows incoming data transmissions.
- **Fax in Once:** No Voice Calls can be received. Allows one incoming Fax transmission.
- **Data in Once:** No voice calls can be received. Only allows one incoming data transmission.

## Receiving a fax

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Data Settings**.
4. Press  for **Data/Fax In**.
5. Press the navigation key up or down and select **Fax in Only**.
6. Press  to **Select**.

In the Fax program on your PC, configure the Answer Mode. Click Receive and select either Automatic Receive (recommended) or Manual Receive. Your phone is ready to receive an incoming fax.

---

**Note:** Once you have set your phone's mode to fax for next call, you cannot receive regular voice calls until you change back to voice calls only, or a fax is received.

---

## Ending a Fax or Data Call






Some common ways to end a call, like closing the phone, will not end a fax or data call. Always disconnect the connection through the

application on your computer, which returns your phone to standby mode. Disconnecting the data cable or turning off your phone will also end a data or fax call, but it may disrupt your computer.

## Sending a Fax or Data File

When connected to a computing device, your phone allows wireless fax and data transmissions. Your computing device software initiates the call to the destination phone number. Your phone functions as a wireless modem to send the Fax or Data file to the number designated by your PC software.

 
 
 
 
 
## Changing your phone back to voice calling

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Data Settings**.
4. Press  for **Data/Fax In**.
5. Press the navigation key up or down and select **Voice Only**.
6. Press  to **Select**.

---

**Note:** “No incoming data/fax calls can be received.” appears on the display.

---



## Messaging









Now you can exchange text and email messages right from your phone and stay connected without saying a word. Within Messaging you can also view the number of voicemail messages you have waiting for you. For more information on using your phone's voicemail feature, see "Using Voicemail" on page 89.

The following folders are available in the Messaging menu:

- **Send Message** - allows you to create and send a new text message.
- **Inbox** - allows you to view email messages in the Inbox.
- **Outbox** - contains a copy of outgoing messages.
- **Voicemail** - allows you to view or listen to any voice messages saved in the phone.
- **Web Alerts** - allows you to receive an alert that a new web message is available.
- **Draft** - allows you to save a copy of an unfinished message and send at a later time.
- **Settings** - allows you to configure the messaging options.

### Erasing All Messages

To erase all messages:

1. Press  for **Main Menu**.
2. Press  for **Messaging**.
3. Press  for **Inbox**.
4. Press   for **Erase**.  
— or —  
Press   for **Erase All**.
5. Press the navigation key up to select **Yes** and press .








## Text Messaging

### Using Text Messaging

With Text Messaging, you can use a person's wireless phone number to send instant text messages from your web enabled phone to their messaging-ready phone – and they can send messages to you. When you receive a new message, you'll automatically be notified with a one-way text message.

In addition, messaging includes a variety of pre-set messages, such as "I'm running late, I'm on my way," that make composing messages fast and easy.

#### To send a text message:

1. Press  for **Main Menu**.
2. Press  for **Messaging**.
3. Press  for **Send Message**
4. Enter the phone number or email address of the person to whom you're sending a message and press .
5. Enter your message using the keypad. Press  to select the desired character format. Press  when finished.
6. Press  to send.

#### Sending Options





When you are sending a new text message, there are options associated with the new message. These options allow you to configure the following:

- **Priority** - allows you to set the priority level between Normal and Urgent.
- **Call Back #** - allows you to enter or omit a call back number in your message.

### To read a Text Message:

- When you receive a text message, you will see “New Text Message” on your display screen. Select **OK**.

### To reply to a Text Message:

1. While the message is open, select **Menu Reply**.
2. Compose your reply or use canned messages.
  - Use your keypad to type a message. Use the right softkey to select a character input mode.
  - To use canned messages press   for **Canned Msg**. Press the corresponding number on the keypad to enter the canned message response.
3. Press .
4. Press  to **Send**.

---

**Note:** The last canned message used automatically moves to the top of the list when you send a new message.

---

## Message Setup Options

There are several options associated with text messaging. The Message Setup menu allows you to customize the options to fit your preferences. The message options are divided into the following categories:






- **Display Popup:** If this option is On, a pop-up dialog box is displayed when new messages are received.
- **Sending Options:** Allows you to configure the default Priority level and Call Back number for messages.
- **Canned Message:** Allows you to edit or change the default canned messages.
- **Message Alerts:** Allows you to configure the Volume level, Type, and Message Reminder settings for Message Alerts.
- **Save In Outbox:** If this option is On, a copy of the message is automatically saved in the Outbox after being sent.
- **Auto Delete:** If this option is On, old messages are automatically deleted from the mail boxes when they become full. This allows the new messages to be added.
- **Alerts Setup:** allows you to configure to auto-connect web alerts when possible.
- **Voice Mail #:** allows you to configure the voicemail number.

To access the Settings menu:

1. Press  for **Main Menu**.
2. Press  for **Messaging**.
3. Press  for **Settings**.

## Display Popup

When this option is turned On, a popup window is displayed on the phone to alert you that new messages are waiting. To turn On the Display Popup option:

1. Press  for **Main Menu**.
2. Press  for **Messaging**.
3. Press  for **Settings**.
4. Press  for **Display Popup**.
5. Select **On** using the navigation key and press  to **Select**.

## Sending Options




 

The Sending Options allow you to configure the Priority and Call Back number for outgoing messages. Once configured, these options are the default settings for any new messages that are created.


### Priority

There are two priority levels associated with text messaging. They are:

- **Normal:** this option sends the message as normal with regular delivery.
- **Urgent:** this option sends the message at the highest level and alerts the recipient that it is urgent.









This setting allows you to select the default priority level when creating new messages. To select the priority level:

1. Press  for **Main Menu**.
2. Press  for **Messaging**.
3. Press  for **Settings**.
4. Press  for **Sending Options**.
5. Press  for **Priority**.

6. Select **Normal** or **Urgent** using the navigation key and press  to **Select**.






### Call Back Number



This option allows you to enter a return call back number that is automatically attached to your outgoing messages. To access the call back number option:

1. Press  for **Main Menu**.
2. Press  for **Messaging**.
3. Press  for **Settings**.
4. Press  for **Sending Options**.
5. Press  for **Call Back #**.
6. Use the navigation key to highlight yes and press .
7. Press and hold  to erase the existing number. Enter the number using the keypad and press  to save.

### Canned Message

Canned messages are used to enter common responses to questions often received in text messages. A canned message can be selected and automatically entered into the message. Canned messages can also be changed to whatever you want by editing the 20 pre-set entries already stored in your phone. To edit a canned message:

1. Press  for **Main Menu**.
2. Press  for **Messaging**.
3. Press  for **Settings**.
4. Press  for **Canned Message**.
5. Press the navigation key up or down to highlight the desired message or available entry and press  for **Edit**.

6. Press and hold  to erase the message. Enter your new message or edit the existing one using the keypad and press  to **Save**.

---

**Note:** When you send a message using Canned Messages, the message selected last automatically displays as the first choice when sending a new message.







---

## Message Alerts

The Message Alerts menu allows you to configure the volume and message reminder default settings for voicemail, text messages, and web alerts.










### Volume

This allows you to select the volume level for message alerts for voicemail, text messaging, and web alerts. The level can be set to Off, Vibrate, 1-Beep, or a volume level between 1-8. To set the volume:

1. Press  for **Main Menu**.
2. Press  for **Messaging**.
3. Press  for **Settings**.
4. Press  for **Message Alerts**.
5. Press  for **Volume**.
6. Press the navigation key left or right to select the desired volume level and press  to **Save**.

### Type

This allows you to select the ringer type for voicemail, text messaging, and web alerts. Any ringer saved in the phone can be used as the default ringer. Ringers that are downloaded can also be assigned. To set the ringer type:


1. Press  for **Main Menu**.
2. Press  for **Messaging**.
3. Press  for **Settings**.
4. Press  for **Message Alerts**.
5. Press  for **Type**.
6. Press:
  -  for **Voicemail**
  -  for **Text Message**
  -  for **Web Alerts**
7. Press the navigation key left or right to select between **Ring Tones**, **Melodies**, **Downloaded**, or **Single Tones**.
8. Press the navigation key down to preview the first ringer. Press left or right to preview the other ringers associated with the ringer group selected. When finished, press  to **Save** the desired ringer.






### MSG Reminder

This allows you to configure how often the reminder for new messages is sounded or displayed on the phone. The available options are:

- **Off:** No reminder is sounded or heard on the phone.
- **Once:** A reminder is sounded or displayed once to alert you of new messages.
- **Every 2 min:** A reminder is sounded or displayed every two minutes until the new message is read.






To set the message reminder option:

1. Press  for **Main Menu**.

2. Press  for **Messaging**.
3. Press  for **Settings**.
4. Press  for **Message Alerts**.
5. Press  for **MSG Reminder**.
6. Press the navigation key up or down to select the desired duration and press  to **Select**.






### Save in Outbox

This allows you to save a copy of the outgoing text message in the outbox. To turn this option On or Off:

1. Press  for **Main Menu**.
2. Press  for **Messaging**.
3. Press  for **Settings**.
4. Press  for **Save In Outbox**.
5. Press the navigation key up or down to select **Yes** or **No** and press  to **Select**.






### Auto Delete

This option allows you to automatically delete old messages when the memory becomes full. This prevents new messages from being rejected due to the Inbox being too full. To turn this option On or Off:

1. Press  for **Main Menu**.
2. Press  for **Messaging**.
3. Press  for **Settings**.
4. Press  for **Auto Delete**.
5. Press the navigation key up or down to select **Yes** or **No** and press  to **Select**.






## Alerts Setup

This option allows you to automatically connect to the web when new web alerts are received. If this option is turned Off, you are required to connect before the message can be viewed. To turn this option On or Off:

1. Press  for **Main Menu**.
2. Press  for **Messaging**.
3. Press  for **Settings**.
4. Press  for **Alerts Setup**.
5. Press the navigation key up or down to select **Yes** or **No** and press  to **Select**.

## Voice Mail Number

This option allows you to enter a return voice mail number that is automatically attached to your outgoing messages. To access the voice mail number option:

1. Press  for **Main Menu**.
2. Press  for **Messaging**.
3. Press  for **Settings**.
4. Press  for **Voice Mail #**.
5. Enter the number using the keypad and press  to save.

# Web Services

## The Wireless Web

Your phone comes equipped with Wireless Web access through your browser. You can view specially designed version of popular sites which includes sports, weather, news, stock quotes etc....as well as downloadable ringtones, screen savers and images. When you launch the browser, the phone will connect to the Internet and the service indicator icon will display. Any time the service indicator icon is visible on the display, you are connected to the Internet and will be invoiced accordingly.

---

**Note:** Rates and pricing vary according to the service option. For further information contact your service provider.

---

## Launching the Browser




---

**Note:** The first time you use the Browser, you will be prompted to go through a security setup process that takes approximately three to five minutes.

---

**Note:** If the phone is reset for any reason, you must contact your carrier to reset the security key to access the Browser, The original key is no longer valid and will not allow the Browser to operate.

To launch a web connection:

1. Press  for **Main Menu**.
2. Press  for **Web**.
3. Press  for **Start Browser**.
4. You are connected to the Mobile Web Home page.

---

**Shortcut:** You can also press the center of the navigation key down to launch the Web.

---

---





**Note:** If Net Guard is enabled and displayed (see below), select **OK** (right softkey) to continue and launch the Web.

---

If you had a previous web connection, the last page you visited will display when you launch your browser, for example, Short Mail or ESPN Top News. When this occurs, you may not see the "Connecting as..." message when you launch the session. Though the browser is open, you are not currently in an active data session - that is, no data is being sent or received. As soon as you navigate to another page, the active session will launch and you will see the "Connecting" message.

## Web Guard

When you first connect to the Internet, the Net Guard will appear to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed. To change your Net Guard settings:

1. Press  for **Main Menu**.
2. Press  for **Web**.
3. Press  for **Web Guard**
4. Press the navigation key up or down to select:
  - **None**
  - **To Start**
  - **To End**
  - **Both**.
5. Press  to **Select**.


---

**Note:** When enabled, the Net Guard appears only once per session. The Net Guard does not appear if the phone is merely re-connecting due to a time-out.

---

## Web Connection Status and Indicators

Your phone's display lets you know the current status of your web connection through indicators which appear at the top of the screen. The following symbols are used:

-  Your web connection is active (data is being transferred). Incoming voice calls go directly to voicemail; outgoing voice calls can be made, but the web connection will terminate.


When your web connection is dormant (no data is being sent or received). Though not currently active, when dormant the phone can restart an active connection quickly; voice calls can be made and received.

## Navigating the Wireless Web

Navigating through menus and Web sites during a web session is easy once you've learned a few basics. Here are some tips for getting around:

### Softkeys

When browsing the Web, the bottom line of your phone's display contains one or more softkeys. These keys are shortcut controls for navigating around the Web, and they correspond to the softkey buttons directly below the phone's display screen. Depending on which Web sites you visit, the labels on the softkeys may change to indicate their function.

To use softkeys, simply press the desired softkey button. If an additional pop-up menu appears when you press the softkey button, select the menu items using your keypad (if they're numbered) or by highlighting the option and pressing .


## Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.

- Press the navigation key up and down to scroll line by line or press the volume buttons on the side of the phone to scroll one page at a time.

## Selecting

Once you've learned how to use softkeys and scroll, you can start navigating Web sites.

- Select on-screen items by using the navigation key to highlight the desired item, then press the desired softkey button (or press ).


You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "OK."

- If the items on a page are numbered, you can use your keypad (number keys) to select an item.

Links, which appear as underlined text, allow you to jump to different Web pages, select special functions, or even place phone calls.



- Select links by highlighting the link and then selecting the appropriate softkey.

---


**Tip:** The tenth item in a numbered list may be selected by pressing the  key on your phone's keypad, even though the number 0 doesn't appear on the screen.

---

## Going Back

- To go back one page, press  on your phone. (Note that  is also used for deleting text (like a BACKSPACE key) when you are entering text.)

## Going Home

- To return to the Home page from any other Web page, press and hold .

In addition to the features already covered in this section, the web home page offers always-on access to these colorful, graphically rich Web categories. Many sites are available under more than one menu – choose the one that's most convenient for you.

---

**Note:** The home page is subject to change by the service provider.

---

1.  **Fun and Games**
2.  **Web and Mail**
3.  **Finance and Biz**
4.  **Today's Info.**
5.  **Shop & Find**
6.  **What's New**
7.  **My Finder**
8.  **My Menu**
9.  **Bookmarks/...GotoWeb**





## Downloading Games, Ringers, Screen Savers and Applications

With your new web enabled phone, you have access to a variety of services such as downloadable Games, Ringers, and Screen Savers. While each type of download involves a different file type, the basic method for accessing and downloading files is the same.

### Games




You can play a variety of entertaining and graphically-rich games on your phone. New games are easy to download and play.


#### Downloading Games

1. Press  for **Main Menu**.
2. Press  for **Downloads**.
3. Highlight **Games** and press .
4. Highlight **Get New** and press . The browser will launch and take you to the Games download menu.
5. Use your navigation key to highlight and select a game you wish to download. (For more information on navigating the Web, see “Navigating the Wireless Web” on page 109.)

#### Playing Games



 

 



To play a downloaded game on your phone:

1. Press  for **Main Menu**.
2. Press  for **Downloads**.
3. Highlight **Games** and press .
4. Select the game you wish to play.

5. Follow the on-screen instructions to play the game. When you are finished, select **Exit** (or **Quit**) or press .

## Game Pad





The optional Game Pad accessory allows you to insert your phone into a convenient handheld gaming device to control the action of downloaded games. Large buttons and navigation controls allow you to navigate easily through the phone's menu system. When your phone is inserted correctly into the Game Pad, a "Digital Game Pad is Attached" message is displayed on-screen. The game pad default keys are mapped to the phone's key pad. To modify the mapping:

1. Press  for **Main Menu**.
2. Press  for **Settings**.
3. Press  for **Others**.
4. Press  for **Game Pad**.
5. Press  for **Key Remap**.
6. Press  for **Cursor Key**,  for **Fire Key**, or  for **Other Key**.

## Ringers

### Downloading Ringers










 

To download an available ringer to your phone:

1. Press  for **Main Menu**.
2. Press  for **Downloads**.
3. Highlight **Ringers** and press .
4. Highlight **Get New** and press . The browser will launch and take you to the Ringers download menu.

5. Use your navigation key to highlight and select a ringer you wish to download. (For more information on navigating the Web, see “Navigating the Wireless Web” on page 109.)
6. From the item information page, select **Buy**. You will be prompted with the cost of the ringer.

### Assigning Downloaded Ringers

Downloaded ringers may be assigned directly from the Downloads menu and are also available through the Settings menu. To assign a downloaded ringer through the Settings menu, see “Selecting Ringer Types for Voice Calls” on page 22 or “Selecting Ringer Types for Messages” on page 23. To assign a downloaded ringer:

1. Press  for **Main Menu**.
2. Press  for **Downloads**.
3. Highlight **Ringers** and press .
4. Highlight a ringer and press  to play the ringer.
5. Press  to return to the **Ringers** menu.
6. Press   for **Set as**.
7. Press  for **Voice Calls**.
8. Press  for **With Caller ID** or  for **No Caller ID**.
9. Press  to exit.

---





**Note:** You may assign a ringer to more than one type of call.

---

## Screen Savers

### Downloading Screen Savers

To download an available Screen Saver to your phone:

1. Press  for **Main Menu**.
2. Press  for **Downloads**.
3. Highlight **Screen Savers** and press .
4. Highlight **Get New** and press . The browser will launch and take you to the Screen Savers download menu.
5. Use your navigation key to highlight and select a Screen Saver you wish to download. (For more information on navigating the Web, see “Navigating the Wireless Web” on page 109.)
6. From the item information page, select **Buy**. You will be prompted with the cost of the screen saver.

---





**Note:** You may store a limited number of downloaded Screen Savers on your phone, depending on the file sizes.






---

### Assigning Downloaded Screen Savers

Downloaded Screen Savers may be assigned directly from the Downloads menu and are also available through the Settings menu. To assign a downloaded Screen Saver through the Settings menu, see “Changing the Display Screen” on page 29.

To assign a downloaded Screen Saver from the Downloads menu:

1. Press  for **Main Menu**.
2. Press  for **Downloads**.
3. Highlight **Screen Savers** and press .
4. Highlight a Screen Saver and press  to view.

5. Press  to return to the **Screen Savers** menu.
6. Press   for **Set as**.
7. Press  for **Screen Saver**.
8. Press  to exit.

---





**Note:** You may assign a Screen Saver to more than one task.

---

## Applications

### Downloading Applications

To download an application to your phone:

1. Press  for **Main Menu**.
2. Press  for **Downloads**.
3. Highlight **Applications** and press .
4. Highlight **Get New** and press . The browser will launch and take you to the application download menu.
5. Use your navigation key to highlight and select a application you wish to download. (For more information on navigating the Web, see “Navigating the Wireless Web” on page 109.)
6. From the item information page, select **Buy**. You will be prompted with the cost of the application.

---

**Note:** You may store a limited number of downloaded applications on your phone, depending on the file sizes.

---

# Safety

## Getting the Most Out of Your Reception

### Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

### Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

### Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

### Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below. In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after

reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

### **Maintaining Your Phone's Peak Performance**

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended, and over your shoulder.
- Try not to hold, bend, or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a dealer store or call Customer Support for service.

---

**Note:** For the best care of your phone, only BMC authorized personnel should service your phone and accessories. Faulty service may void the warranty.

---

- Maintaining Safe Use of and Access to Your Phone

**FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE**

## Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- Get to know your phone and its features, such as speed dial and re-dial.
- When available, use a hands-free device.
- Position your phone within easy reach.
- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.
- Dial sensibly and assess the traffic; if possible, place calls when stationary or before pulling into traffic.
- Do not engage in stressful or emotional conversations that may divert your attention from the road.
- Dial 911 to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call roadside assistance or a special non-emergency wireless number when necessary.

## Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

## Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

---

**Note:** Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

---

## Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

## Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

**Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:**

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, just or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

---

**Note:** Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

---

### **Restricting Children's Access to your Phone**

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

## **Caring for the Battery**

### **Protecting Your Battery**

The guidelines listed below help you get the most out of your battery's performance.

- Use only Samsung approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.

- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:
  - Less than one month:  
4° F to 140° F (-20° C to 60° C)
  - More than one month:  
4° F to 113° F (-20° C to 45° C)

### **Disposal of Lithium Ion (Lilon) Batteries**

For safe disposal options of your Lilon batteries, contact your nearest BMC service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

---

**Note:** For safety, do not handle a damaged or leaking Lilon battery.

---

## Acknowledging Special Precautions and Industry Canada Notice

Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of hardware and can be broken. Use common-sense guidelines to avoid dropping, hitting, bending or sitting on it.

### Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

### Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient / relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

### Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC.

This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety. All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the **[SPH-A660]** are:

AMPS mode (Part 22) - Head: **1.32** W/kg; Body-worn: **0.55** W/kg

Digital mode (Part 24) - Head: **0.87** W/kg; Body-worn: **0.28** W/kg

## Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: **SPH-a660**

Serial No.:

## User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

 
 
 
5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.



# Manufacturer's Warranty

## STANDARD LIMITED WARRANTY

What is Covered and For How Long? SAMSUNG TELECOMMUNICATIONS AMERICA, L.P. ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/Pouch/Holster	90 Days
Game Pad	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the

remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits On SAMSUNG's Liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

"THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;

"WARRANTIES OF TITLE OR NON-INFRINGEMENT;

"DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;

"THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR

"COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, L.P

1301 E. Lookout Drive

Richardson, Texas 75082

 
 
 
Phone: 1-800-SAMSUNG

Phone: 1-888-987-HELP (4357)

©2004 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice. [011604]



# Index

## A

- Abbreviated Dialing 15
- Adjusting the Phone's Volume Settings 21
- Airplane Mode 31
- Alarm Clock 73
- Answering Calls 12

## B

- Backlight 28
- Battery
  - Capacity 8
  - Charging 10
  - Disposal 122
  - Installing 8
  - Removing 9

## C

- Calculator 76
- Call History
  - Erasing 58
  - Making a Call From 56
  - Options 55
  - Saving a Phone Number From 56
  - Viewing 55
- Call Waiting 92
- Caller ID 91

## D

- Data/Fax
  - Data/Fax Setup 93
  - End Fax or Data Call 94
  - Receive a Fax 94
  - Send Fax or Data File 95
- Desktop Charger 10
- Dialing Options 16
- Digit Dial 79
- Display Screen Symbols 4
- Display Settings 27

## E

- End Fax or Data Call 94
- Entering Text

- Alpha Mode 60
- Selecting a Character Input Mode 59
- Symbols and Numbers 61
- T9 Text Input 60
- Erase Content 41

## G

- Greeting 27

## I

- Internal Phone Book
  - Adding an Entry 62
  - Calling a Number From 20
  - Editing Entries 64
  - Erasing 40
  - Finding Entries 62
  - Options 59
  - Secret Entries 66

## L

- Language 34
- Location Settings 30
- Locking Your Phone 37

## M

- Mail Kit
  - Erasing All Messages 97
  - Message Setup Options 100
- Making Calls 11
- Memo Pad 75
- Menus
  - Navigation 47
  - Structure 47
  - Viewing 48
- Messaging 97
- Missed Call Notification 13

## N

- Name Dial 84
- Navigating Menus 47

## P

- Phone Number
  - Displaying 11
- Phone Numbers
  - Finding 19

Saving 18  
With Pauses 19  
Phonebook 85

**R**  
Receiving a Fax 94  
Recording Memos 86  
Restricting Calls 39  
Ringer Types 21  
Ringer Types for Schedule 24  
Roaming  
    Analog Networks 43  
    Other Digital Networks 43

**S**  
Scheduler 69  
Security Menu 37  
set nam 45  
setup/tool  
    data/fax 93  
Silence Mode 27  
Special Numbers 40

**T**  
T9 Text Input 60  
Text Messaging 98  
Three-Way Calling 92  
TTY Use 34  
Turning Your Phone On and Off 6

**U**  
Unlocking Your Phone 38  
Using One/Two/Three Touch  
    Speed Dialing 14

**V**  
Voice Recognition 79  
Voicemail  
    Clearing the Icon 91  
    Notification 89  
    Retrieving Messages 90  
    Setting Up 89

**W**  
Web Guard 108  
Wireless Web

Downloading Items 112  
Games 112  
Launching the Browser 107  
Navigating 109  
Ringers 113  
Screen Savers 115