



SGH-C240

User's Guide

* Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.

* Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

Printed in Korea

Code No.: GH68-11867A

 
English (EU). 11/2006. Rev.1.1

World Wide Web


http://www.samsungmobile.com

Installing the SIM card and battery

1. Remove the battery cover and insert the SIM card.

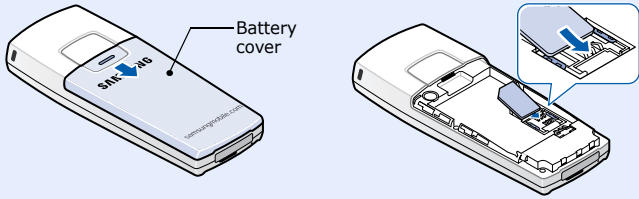


 2. Install the battery and reattach the cover.

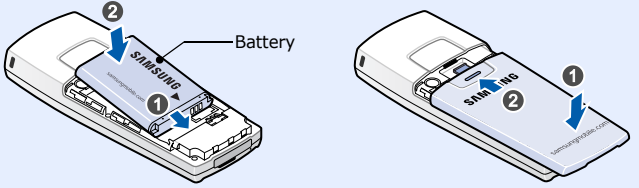


Charging the battery

 1. Plug the supplied travel adapter.

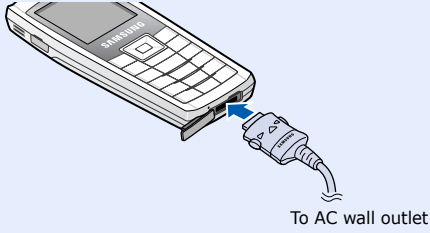


 2. When charging is finished, unplug the adapter.

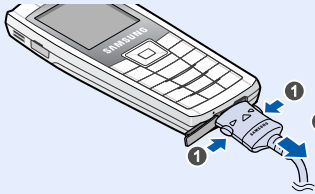

Note: Do not remove the battery from the phone without unplugging the adapter first. Otherwise, the phone may be damaged.

 Phone layout and key functions

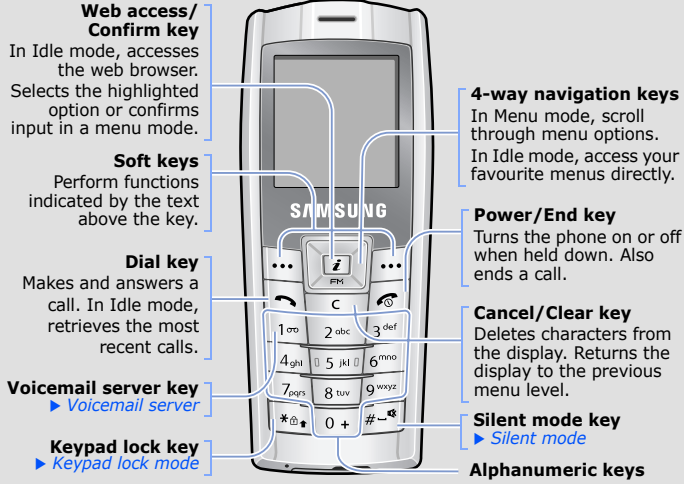

Silent mode

Press and hold **#** in Idle mode to disable all sounds on the phone. To exit, press and hold this key again.

Voicemail server

 
Press and hold **1** in Idle mode to access your voicemail server.

Keypad lock mode

Press and hold ***** in Idle mode to lock the keypad, and then press **Yes** to ignore accidental key pressing. To unlock, press the left soft key and then *****.

Display

Your phone is in Idle mode when you are not on a call or using a menu. You must be in Idle mode to dial a phone number.

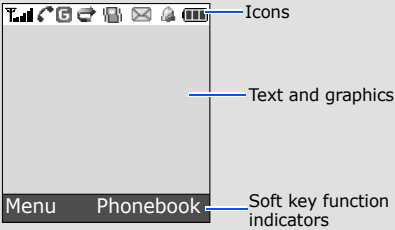

Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Received signal strength
	Call in progress
	Out of your service area; you cannot make or receive calls except for emergency calls.
	GPRS network
	Roaming network
	Keypad lock
	Call diverting feature active
	Silent mode or call ringer set to vibrate
	Mute mode, during a call
	Whisper mode, during a call
	New text message
	New voicemail message
	New multimedia message
	Alarm set
	Battery power level

Locking the phone

 
1. In Idle mode, press the **Menu** soft key.
2. Select **Phone settings** → **Security** → **Change password**.
3. Enter the default password, **00000000**, and press the **OK** soft key.
4. Enter a new 4- to 8-digit password and press the **OK** soft key.
5. Enter the new password again and press the **OK** soft key.
6. Select **Phone lock** → **Enable**.
7. Enter the password and press the **OK** soft key.

Locking the SIM card

1. In Idle mode, press the **Menu** soft key.
2. Select **Phone settings** → **Security** → **PIN check** → **Enable**.
3. Enter a supplied 4- to 8-digit PIN code and press the **OK** soft key.
4. Select **Change PIN**.
5. Enter the current PIN code and press the **OK** soft key.
6. Enter a new 4- to 8-digit PIN code and press the **OK** soft key.
7. Enter the new code again and press the **OK** soft key.

Using the menus

In Idle mode, press the **Menu** soft key to enter the main menu.

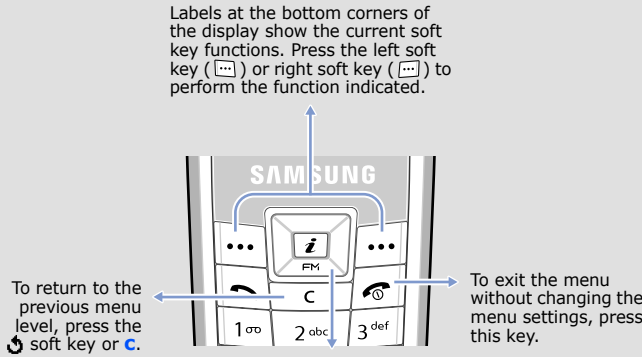

- Use the 4-way navigation keys (Up, Down, Left, Right) as shortcuts to access your favourite menus. **Down** is fixed as a shortcut to **FM Radio**.
1. In Idle mode, press the **Menu** soft key.
 2. Select **Phone settings** → **Short cut**.
 3. Select a key.
 4. Select a menu to be assigned to the key.

Switching on or off the phone

1. Press and hold for more than one second to switch on the phone.
2. To switch off the phone, press and hold for more than two seconds.

Changing the display language

1. In Idle mode, press the **Menu** soft key.
2. Select **Phone settings** → **Language**.
3. Select a language.

Making a call

1. In Idle mode, enter the area code and phone number, and press .
2. To end the call, press .

Answering a call

1. When the phone rings, press to answer a call.
2. To end the call, press .

Adjusting the volume

1. In Idle mode, press the **Menu** soft key.
2. Select **Sound settings** → **Ring volume**.
3. Press **Up** or **Down** to adjust the volume level.
4. Press the **OK** soft key.

While a call is in progress, press **Up** or **Down** to adjust the earpiece volume.

Changing a ringtone for calls

1. In Idle mode, press the **Menu** soft key.
2. Select **Sound settings** → **Ringtone**.
3. Select a ringtone.

Redialling recent numbers

1. In Idle mode, press .
2. Press **Up** or **Down** to scroll to the number you want.
3. Press to dial the number.

Menu map

1. SIM AT*	4.7 Alert on call	8. FM Radio
2. Call records	4.8 Power on/off	9. Phone settings
2.1 Missed calls	4.9 Extra tones	9.1 Display settings
2.2 Received calls		9.2 Greeting message
2.3 Dialed calls	5. Messages	9.3 Own number
2.4 Delete all	5.1 Text messages	9.4 Language
2.5 Call time	5.2 Multimedia messages	9.5 Security
2.6 Call cost*	5.3 Push messages	9.6 Extra settings
3. Network services	6. Funbox	9.7 Short cut
3.1 Call diverting	6.1 WAP browser	9.8 Reset settings
3.2 Call barring	6.2 Games	
3.3 Call waiting	6.3 Sounds	Press the Phonebook soft key in Idle mode.
3.4 Network selection	6.4 Images	1. Search
3.5 Caller ID	6.5 Delete all	2. New entry
3.6 Closed user group	6.6 Memory status	3. Group search
4. Sound settings	7. Organiser	4. Edit group
4.1 Ringtone	7.1 Alarm	5. Speed dial
4.2 Ring volume	7.2 Calendar	6. Delete all
4.3 Alert type	7.3 Time & Date	7. Memory status
4.4 Keypad tone	7.4 Calculator	8. SDN*
4.5 Keypad volume	7.5 To do list	
4.6 Message tone	7.6 Voice memo	
	7.7 Currency exchange	

* Shows only if supported by your SIM card.

Entering text

Changing the text input mode

In a text input field, press the right soft key until the input mode indicator you want appears:

-  : T9 mode
-  : ABC mode
-  : Number mode
- None: Symbol mode

T9 mode

- Press **2** to **9** to start entering a word. Press each key once for one letter.
Example: To enter *Hello* in T9 mode, press **4**, **3**, **5**, **5**, and **6**.
T9 predicts the word that you are typing, and it may change with each key that you press.
- Enter the whole word before editing or deleting characters.
- When the word displays correctly, go to step 4. Otherwise, press **0** to display alternative word choices for the keys that you have pressed.
For example, *Of* and *Me* use **6** and **3**.
- Press **#** to insert a space and enter the next word.

Feature	Description	Select
Use the SIM service	Use a variety of additional services offered by your service provider.	Menu > SIM AT
View recent calls	View the most recent calls you have dialled, received, or missed.	Menu > Call records > Missed calls, Received calls, Dialed calls
Delete recent calls	Delete the call records in each call type, or all records at once.	Menu > Call records > Delete all
Call time display	View the duration of recent calls you have dialled and received. Also reset the time counter.	Menu > Call records > Call time
Call cost display	View the cost of your calls.	Menu > Call records > Call cost
Network services	Access network services offered by your service provider.	Menu > Network services
Select ringtone and volume	Select a ringtone for incoming calls, or a volume level.	Menu > Sound settings > Ringtone or Ring volume
Alert type	Select an alert type for the call ringer.	Menu > Sound settings > Alert type
Key tone type	Select a tone which the phone sounds when you press a key.	Menu > Sound settings > Keypad tone
Key tone volume	Adjust the volume of the key tones.	Menu > Sound settings > Keypad volume

Feature	Description	Select
FM radio	Listen to music or news via the FM radio on your phone. First, you must connect your phone with the headset, which serves as a radio antenna.	Menu > FM Radio
Display settings	Change settings for the display and backlight.	Menu > Phone settings > Display settings
Greeting message	Enter the greeting message to be displayed when the phone is switched on.	Menu > Phone settings > Greeting message
Check your own phone numbers	Check your phone numbers or assign a name to them.	Menu > Phone settings > Own number
Display language	Select a language to be used for the display text.	Menu > Phone settings > Language
Security	Protect the phone against unauthorised use.	Menu > Phone settings > Security
Extra settings	Set the automatic redialling feature or the answering method.	Menu > Phone settings > Extra settings
Menu shortcuts	Set the Navigation keys as shortcuts to access your favourite menus directly.	Menu > Phone settings > Short cut
Reset the phone	Reset the phone to the factory default settings.	Menu > Phone settings > Reset settings

ABC mode

Press the keys labelled with the character you want:

- once for the first character
- twice for the second character
- and so on.

For example, press **2** three times to enter “C” and **5** two times to enter “K.”

Number mode

Press the keys corresponding to the digits you want.

Symbol mode

Press the number keys corresponding to the symbol you want and press the **OK** soft key. You can press **Up** or **Down** to display more symbols.

Tips for entering text

- To move the cursor, press the Navigation keys.
- To delete letters one by one, press **C**. To delete all of the letters, press and hold **C**.
- To insert a space between letters, press **#**.
- To change case in T9 or ABC mode, press *****.
- To enter punctuation marks in T9 or ABC mode, press **1**.

Feature	Description	Select
Message tone	Select the alert ringtone for incoming SMS, MMS, and broadcast messages.	Menu > Sound settings > Message tone
Alert on call	Set the phone to alert you when you receive a new message or when the time for an alarm comes during a call.	Menu > Sound settings > Alert on call
Power on/off tone	Select the melody that the phone sounds when it is switched on or off.	Menu > Sound settings > Power on/off
Extra tones	Set additional tones for the phone.	Menu > Sound settings > Extra tones
Read SMS or MMS messages	Read received, sent, or saved messages.	Menu > Messages > Text messages or Multimedia messages > Inbox, Outbox, or Draft
Send SMS or MMS messages	Create and send messages to other mobile phones.	Menu > Messages > Text messages or Multimedia messages > Write new
Message templates	Preset templates of frequently used messages or emoticons.	Menu > Messages > Text messages or Multimedia messages > Templates or Emoticon templates

Important safety precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving; park the vehicle first.

Switching off when refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switching off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching off near all medical equipment

Hospitals and health care facilities may be using equipment that could be sensitive to external RF energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Special regulations

Follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it.

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press . Do not end the call until given permission to do so.

Small children and your phone

Keep the phone and all its parts including accessories out of reach of small children.

Sending an SMS message

- In Idle mode, press the **Menu** soft key.
- Select **Messages** → **Text messages** → **Write new**.
- Enter the message text.
To change case, press *****.
- Press the **Options** soft key and add items using the following options:
 - Add objects**: add sounds, images, or animated images.
 - Add templates**: add text templates.
 - Add emoticon**: add emoticons.
 - Add phonebook**: add Phonebook entries.
 - Add bookmark**: add bookmark items.
- Press the **Options** soft key and select **Send only**, **Save and send**, or **Save only**.
- If you select **Save and send** or **Save only**, select a memory location.
- Enter a destination number and press the **OK** soft key.

Feature	Description	Select
Messaging options	Set options for using messaging services.	Menu > Messages > Text messages or Multimedia messages > Settings or Setup
Delete messages	Delete messages in each message box.	Menu > Messages > Text messages or Multimedia messages > Delete all
Message memory status	Check memory information for messages.	Menu > Messages > Text messages or Multimedia messages > Memory status
Voicemail	Access your voicemail server and listen to messages on the network.	Menu > Messages > Text messages > Voice mail
Broadcast message	Change settings for the service and access broadcast messages.	Menu > Messages > Text messages > Broadcast
MMS profile	Select or configure a connection profile to be used for MMS.	Menu > Messages > Multimedia messages > MMS profile
Push message	Change the settings for the service, and access or delete push messages.	Menu > Messages > Push messages
Web browser	Launch the web browser.	Menu > Funbox > WAP browser

Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage you or your phone and may be dangerous.

CAUTION	Risk of explosion if a battery is replaced by an incorrect type. Dispose of used batteries according to the manufacturer's instructions.
	At very high volumes, prolonged listening to a headset can damage your hearing.

Qualified service

Only qualified service personnel may repair your phone.

SAR information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the European Union (EU) Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organizations through periodic and through evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the EU Council is 2.0 W/kg. The highest SAR value for this model phone was 0.419 W/kg.

Quick feature reference

This section provides brief explanations of features on your phone.

Feature	Description	Select
Find a contact	Search for contacts in Phonebook.	Phonebook > Search
Add a new contact	Add a new contact to Phonebook.	Phonebook > New entry
Search group	Search for Phonebook contacts in caller groups.	Phonebook > Group search
Change properties of a caller group	Select a ringtone for incoming calls and messages from members of a group. Also change the group name.	Phonebook > Edit group
Speed dial	Assign speed dial numbers (2 to 9) for eight of your most frequently dialled numbers.	Phonebook > Speed dial
Delete Phonebook entries	Delete all Phonebook contacts stored in the phone's memory, on the SIM card, or both.	Phonebook > Delete all
Phonebook memory status	Check memory information for Phonebook contacts.	Phonebook > Memory status
SDN (Service Dialling Numbers)	Access the list of service numbers assigned by your service provider.	Phonebook > SDN

Feature	Description	Select
Access media files	Access games, sound files, images in your phone's memory.	Menu > Funbox > Games, Sounds, or Images
Delete all media files	Delete games, sound files, images in each media box, or all media files at once.	Menu > Funbox > Delete all
Funbox memory status	Check the amount of memory in use for game, sound, and image.	Menu > Funbox > Memory status
Alarm	Set an alarm to sound at a specific time.	Menu > Organiser > Alarm
Calendar	Keep track of daily or monthly schedule.	Menu > Organiser > Calendar
Time and date	Set the current time and date manually.	Menu > Organiser > Time & Date
Calculator	Perform basic arithmetic functions.	Menu > Organiser > Calculator
Task list	Create a list of tasks and assign a deadline to each task.	Menu > Organiser > To do list
Voice memo	Record voice memos and listen to them.	Menu > Organiser > Voice memo
Currency converter	Do currency conversions.	Menu > Organiser > Currency exchange

Declaration of Conformity (R&TTE)

Product description: Portable Cellular Telephone (GSM 900/GSM1800)

Model name: SGH-C240

Manufactured at: Samsung Electronics Co., Ltd, 94-1, Imsoo-Dong, Gumi City, Kyung-Buk, Korea, 730-350*

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

Safety : EN 60950-1:2001	SAR : EN 50360:2001
EMC : EN 301 489-01 v1.4.1 (08-2002)	: EN 50361:2001
: EN 301 489-07 v1.2.1 (08-2002)	Network : EN 301 511 v9.0.2 (03-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road,
Walton-on-Thames, Surrey, KT12 2TD, UK
Identification mark: 0168

CE 0168

The technical documentation kept at:

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Place and date of issue:

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
2006.10.23


Yong-Sang Park / S.Manager

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.