

# **SGH-T356 Series**

**P O R T A B L E  
Q U A D - B A N D  
M O B I L E P H O N E**

**User Manual**

**Please read this manual before operating your  
phone, and keep it for future reference.**

The Samsung logo consists of the word "SAMSUNG" in a bold, white, sans-serif font, centered within a dark gray, horizontally-oriented oval shape.

**SAMSUNG**

# Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

©2010 Samsung Electronics Canada, Inc. SAMSUNG is a registered trademark of Samsung Electronics Co., Ltd. and its related entities.

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437; U.S. Pat. 5,953,541; U.S. Pat. 6,011,554 and other patents pending.

ACCESS<sup>®</sup> and NetFront<sup>™</sup> are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan and other countries.

The Bluetooth® word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD™ and the microSD logo are Trademarks of the SD Card Association.

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://opensource.samsungmobile.com/index.jsp>.

The privacy and copyright laws of Canada govern the disclosure, reproduction and distribution of data, media and other content, including music and video content. Certain activities, including downloads or transfer by any means (including, via cable, Bluetooth® or otherwise) of such content may be an infringement of privacy or copyright law. Neither Samsung Electronics Canada Inc. nor any of its affiliates shall be liable or responsible for any data or content disclosed, reproduced, downloaded or distributed by the user of this equipment.

## Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

# Table of Contents

---

<b>Section 1: Getting Started</b>	<b>1</b>
Activating Your Phone	1
Switching the Phone On or Off	10
Setting Up Your Voice Mail	11
<b>Section 2: Understanding Your Phone</b>	<b>12</b>
Features of Your Phone	12
Front View of Your Phone	13
Keys	13
Back View of Your Phone	16
Side Views of Your Phone	17
Display Layout	18
View Tab	18
Menu Navigation	20
Backlight	21
<b>Section 3: Call Functions</b>	<b>23</b>
Making a Call	23
Adjusting the Call Volume	25
Answering a Call	25
Call History	26
Vibration Profile	28
Selecting Functions and Options	29
<b>Section 4: Entering Text</b>	<b>37</b>
Using the QWERTY Keyboard	37
Changing the Text Input Mode	39
Using T9 Mode	40
Using ABC mode	41

Using Numeric Mode .....	42
Using Symbol Mode .....	42
<b>Section 5: Contacts .....</b>	<b>43</b>
Add New Contact .....	43
Finding a Contact Entry .....	45
Groups .....	47
Editing a Caller Group .....	48
Speed dialing .....	49
Management .....	50
<b>Section 6: Messaging .....</b>	<b>53</b>
Types of Messages .....	53
Display Icons for Messages .....	53
Text Messages .....	54
Picture Messages .....	57
Message inbox .....	60
Voice mail .....	65
Sentbox .....	66
Drafts .....	66
My folders .....	67
Templates .....	68
Settings .....	69
Delete by folder .....	73
Memory status .....	73
<b>Section 7: Media .....</b>	<b>75</b>
Photos .....	75
Music .....	77
Images .....	82
Sounds .....	84
Videos .....	87

Other files .....	89
Games and Apps .....	90
<b>Section 8: Changing Your Settings .....</b>	<b>92</b>
Sound profiles .....	92
Display settings .....	97
Phone settings .....	100
Messaging key .....	105
Memory settings .....	105
Language .....	107
Greeting message .....	107
Time and date .....	108
Bluetooth .....	109
Call settings .....	112
Advanced .....	118
Reset settings .....	119
<b>Section 9: Tools .....</b>	<b>121</b>
Alarm .....	121
Tasks .....	123
Memo .....	124
Calculator .....	124
Tip calculator .....	125
World clock .....	125
Converter .....	126
Timer .....	127
Stopwatch .....	127
<b>Section 10: Browser .....</b>	<b>128</b>
Home .....	128
Enter URL .....	130
Bookmarks .....	130

Saved pages .....	131
History .....	132
Browser settings .....	132
<b>Section 11: Photos .....</b>	<b>134</b>
Using the Camera .....	134
Using the Camcorder .....	140
<b>Section 12: Calendar .....</b>	<b>145</b>
<b>Section 13: Health and Safety Information .....</b>	<b>150</b>
Safety Warnings .....	150
Safety Precautions .....	152
Warranty Disclaimer: Proper use of a touch screen handset .....	154
UL Certified Travel Adapter .....	155
Important usage information .....	156
Radio frequency safety .....	158
<b>Section 14: Warranty Information .....</b>	<b>161</b>
Standard Limited Warranty .....	161

## Section 1: Getting Started

---

This section explains how to start using your phone by configuring your hardware, activating your service, and then setting up your voice mail.

### Activating Your Phone


When you subscribe to a wireless network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, available optional services, and other features.

### *Installing the SIM Card*

 
---

**Important!** The plug-in SIM card and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

---

If necessary, power off the phone by holding down the  key until the power-off image displays.

1. Remove the battery cover by sliding the battery cover in the direction of the arrow.

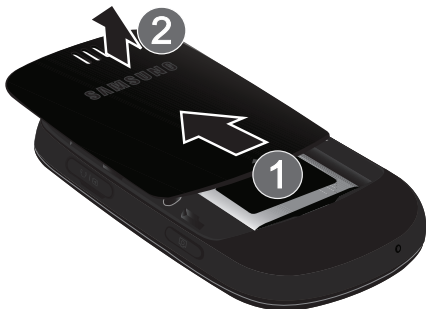

2. Carefully lift the battery cover away from the bottom of the phone.

3. Lift up and remove the battery.



- Carefully slide the SIM card under the metal bracket and into the SIM card socket until the card locks into place. Make sure that the card's gold contacts face into the phone and that the upper-left angled corner of the card is positioned as shown below.



---

 
**Note:** If the SIM card is not installed correctly, the phone will not detect the SIM card. Remove the battery and reinstall the card.

---

- Replace the battery:
  - Slide the battery back into the compartment with tabs on the end aligned with slots in the phone.



6. Reinstall the battery cover by sliding it back onto the phone until you hear it securely click. Make sure the battery is properly installed before switching on the phone.

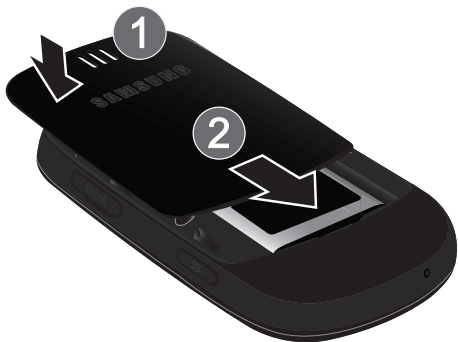

### ***Installing or Removing the Memory Card***

Your phone supports an optional memory card (microSD™) for data storage of such things as music, pictures, video, or other files.

---

**Note:** This phone supports memory cards of up to 16 GB capacity.

---

1. Use your fingernail to lift the memory card cover, then rotate it downward.

2. Insert the microSD card into the slot with the gold contact pins facing downward and the indentations on the card at the right side (as shown below). Push lightly with your thumb or finger until you hear a light click sound.



3. Rotate the memory card cover back to the closed position and press it lightly.

To eject the microSD card from the slot, push the card in with your thumb or finger until it releases.

## ***Charging a Battery***

Your phone is powered by a rechargeable Li-ion battery. A travel adapter for charging the battery is included with your phone. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

You can use the phone while the battery is charging, but doing so requires additional charging time.

---

**Note:** You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 4 hours.

 
---

1. With the battery installed, open the plastic cover on the right side of the phone and plug the travel adapter's connector into the jack.

---

**Important!** Verify that the handset battery is installed prior to connecting the travel adapter. If the battery is not installed and the travel adapter is connected the handset continuously power cycles and prevents proper operation.

---

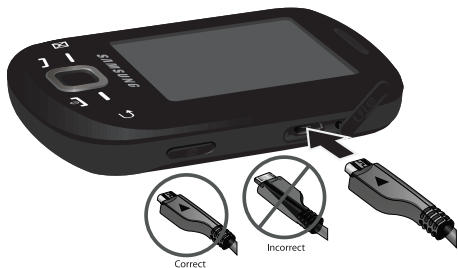

---

**Note:** The previous illustration displays the **incorrect** method for connecting the charger. If attempted, damage to the accessory port can occur, voiding the phone's warranty.

---

2. Plug the adapter's power plug into a standard AC wall outlet.
  3. When charging is finished, unplug the adapter's power plug from the AC wall outlet and then disconnect the travel adapter's connector from the phone.
  4. Resecure the plastic cover over the interface jack on the phone.
- 

**Warning:** Failure to unplug the travel adapter before you remove the battery can damage the phone.



---

## Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain; a warning tone sounds and the “Battery low” message repeats at regular intervals on the display. In this condition, your phone conserves its remaining battery power by dimming the screen.

When the battery level becomes too low, the phone automatically turns off.


## Switching the Phone On or Off

1. Press and hold the  key until the phone switches on.
2. If the phone asks you to enter the phone password, use the keypad to enter the password and press either the **Confirm** soft key or the  key.

---

**Note:** For more information, refer to “Change phone password” on page 102.

---


3. If the phone asks for a PIN, use the keypad to enter the PIN and press either the **Confirm** soft key or the  key. For further details, see “Check PIN code” on page 102.

The phone searches for your network and after finding it, you can make or receive calls.

---

**Note:** The display language is preset to Automatic at the factory. To change the language, see “Language” on page 107.

---

4. To switch off the phone, press and hold the  key until the power-off image displays.

## Setting Up Your Voice Mail

To set up voice mail:

1. From Idle mode, press and hold the key on the keypad. You may be prompted to enter a password.
2. Follow the tutorial to create a password, a greeting, and your name.

---

**Note:** These steps may be different depending on your network.

---

### *Accessing Your Voice Mail*

Press and hold the key on the keypad or use the phone's menu to access your voice mail. To access voice mail using the menu:

1. From Idle mode, press **Menu** and select **Messaging** → **Voice mail**. Your phone dials the specified voice mail number.
2. When connected, follow the voice prompts from the voice mail center.

## Section 2: Understanding Your Phone

---

This section outlines some key features of your phone. It also displays the screen and the icons that display when the phone is in use.


### Features of Your Phone

Your phone is lightweight, easy to use, and offers many significant features. The following list outlines a few of the features included in your phone.

- Partial QWERTY keypad
- 1.3 Megapixel camera and camcorder with continuous 2x digital zoom
- Bluetooth<sup>®</sup> wireless technology
- Text messaging and picture messaging capability
- MP3 player
- Web enabled
- Tools feature provides alarms, tasks, memo, calculator, tip calculator, world clock, converter, timer, stopwatch.

## Front View of Your Phone

The following illustrations show the main elements of your phone:

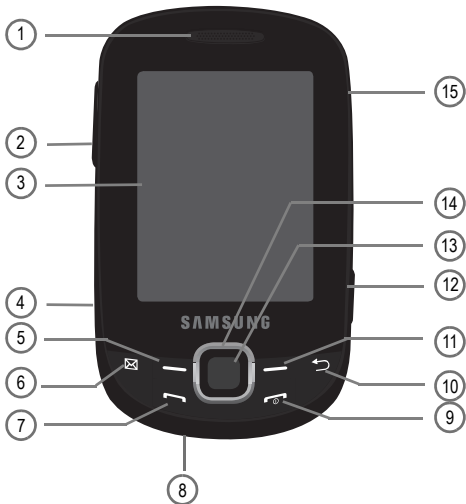 

## Keys

The following list correlates to the illustrations.

1. **Earpiece** allows you to hear the other caller and the different ring tones or sounds offered by your phone.

2. **Volume keys** allow you to adjust the ringer in standby mode (with the phone open) or adjust the speaker volume during a call. When receiving an incoming call, press to mute the ring tone. Press and hold to reject a call.
3. **Display** shows all the information needed to operate your phone, such as the received signal strength, phone battery level, and time.
4. **Memory card slot** accepts optional microSD™ memory card for additional data storage.
5. **Left Soft key** allows you to select soft key actions or menu items corresponding to the bottom left line on the display screen.
6. **Messaging key** can be programmed as a shortcut to your favorite messaging tool. You can reprogram the key at any time.
7. **Send key** allows you to make or answer a call. From Idle mode, recalls the last number dialed or received when held down.
8. **Microphone** allows callers to hear you when you are speaking to them. Also used in making voice note recordings.
9. **Power On/Off (Exit) key** ends a call. Press and hold for two seconds to turn your phone on or off. While in the Menu mode, it returns the phone to Idle mode and cancels your input.
10. **Cancel/Clear key** deletes characters from the display when entering text. In Menu mode, it returns you to the previous menu level.
11. **Right Soft key** allows you to select soft key actions or menu items corresponding to the bottom right line on the display screen.

12. **Camera key** launches the camera and takes pictures when you are in camera mode.
13. **OK (Select) key** allows you to accept the choices offered when navigating through a menu.
14. **Navigation key** scrolls through the phone's menu options and acts as a shortcut key from Idle mode.  
In Idle mode:
  - **Up key**: accesses Call history.
  - **Down key**: accesses Browser.
  - **Left key**: accesses the Create Message screen.
  - **Right key**: accesses the Message Inbox.
15. **Power/Accessory Interface connector** allows you to connect a power cable or optional accessories, such as a USB/data cable or a hands-free headset.

---

**Note:** Your phone supports memory cards up to 16G capacity.

---

## Back View of Your Phone

The following illustration shows the back, open view of the phone.



1. **Camera lens** allows you to take photos and videos.
2. **Mirror** allows you to center the camera lens for self-portraits.
3. **Speaker** allows you to hear the camera sounds and music played on the phone.

## Side Views of Your Phone


The following illustrations show the external elements of your phone



1. **Volume keys** allow you to adjust the ring volume in standby mode (with the phone open) or adjust the speaker volume during a call. When receiving an incoming call, it mutes the ring tone. Press and hold to reject a call.
2. **Memory card slot** used to install an optional microSD™ (memory) card for additional data storage.
3. **Power/Accessory Interface connector** allows you to connect a power cable or optional accessories, such as a USB/data cable or a hands-free headset.
4. **Camera key** launches the camera and allows you to take pictures when you are in camera mode.


## Display Layout

 Your phone's display screen provides a wealth of information about your phone's status and options. The display has three areas:

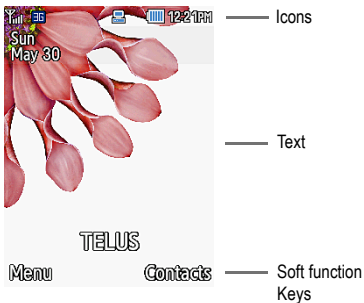

## View Tab

 When you receive new messages, icons display in two locations on the phone's screen: the Messages tab and in the icon bar at the top of the screen.

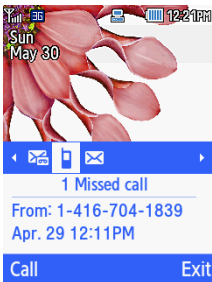

Message icons display here

Messages tab

## Icons

This list identifies symbols you'll see on your phone's display screen:



Shows the received signal strength. The greater the number of bars, the stronger the signal.



Shows the level of your battery. The more bars you see, the more power remains.



Displays when a call is in progress.



Displays when the phone is not receiving a signal.



Displays when the phone is in Airplane mode.



Displays when Bluetooth wireless technology is active.



Displays when Vibration Mode is active.



Silent profile is active.



Displays when you missed a call.



Displays when a new text message is received.



Displays when a new voice mail is received.



Displays when a new picture message is received.




Displays when the Call Forwarding feature is active.







Memory card is inserted.

## Menu Navigation

To navigate the phone's menus and sub-menus, scroll using the Navigation keys.

1. From Idle mode, press **Menu**.
2. Scroll using the Navigation keys to reach the desired menu (for example, **Settings**). Press the **Select** soft key or the  key to enter the menu.

3. If the menu contains sub-menus, (for example, **Personalize**), highlight a sub-menu and press the **Select** soft key or the  key to access it.  
If the menu you selected contains further options, repeat this step.
4. To scroll through the menus, press the **Up** or **Down** Navigation keys.
5. To confirm the chosen setting, press the **Select** soft key or the  key.
6. To return to the previous menu level, press the **Back** soft key or the  key.
7. To exit the menu without changing the settings, press the  key.


## Backlight

A backlight illuminates the internal display and the keypad whenever a key is pressed. It dims and then turns off when no keys are pressed for a specified period of time, depending on the settings within the **Backlight** menu.

The **On** setting determines how long the keypad backlight is on at full brightness. The **Dim** option determines how long the keypad backlight remains on in the dimmed state.

To specify the length of time the backlight is active, access the **Backlight time** menu:

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Display settings** → **Backlight time**.

2. Highlight **On** and press . Select the duration from the **On** field. Choose between **5 seconds**, **15 seconds**, or **30 seconds**.
3. Press the **Down** key to set the **Dim** option. Select the time the Dimming mode is on. Choose between **Off**, **5 seconds**, **15 seconds**, or **30 seconds**.
4. Press the **Save** soft key to retain your settings.

## **Brightness**

You can adjust the display brightness to aid visibility in different lighting conditions.


1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Display settings** → **Brightness**.
1. Press the **Left** or **Right** Navigation keys to adjust the brightness level (**1** to **5**).
2. Press **Save** to save your changes or **Back** to cancel.

## Section 3: Call Functions




---

This section describes how to make or answer a call. It also explains the features and functionality associated with making or answering a call. For more information about setting Ringtones see “*Sound profiles*” on page 92. For more information on Call Forwarding see “*Call forwarding*” on page 113.




### Making a Call

When the idle screen displays, enter the number you wish to dial and press the  key.


### Making an International Call

1. From Idle mode, press the  key or press and hold the  key. The + character displays.
2. Enter the country code, area code, and phone number.
3. Press the  key to make the call.

### Correcting the Number

1. To clear the last digit displayed, press the  key.
2. To clear any other digit in the number, press the **Left** or **Right** Navigation key until the cursor is immediately to the right of the digit to clear and then press the  key. You can also enter a missing digit.
3. To clear the entire display, press and hold the  key.



### Ending a Call

Briefly press the  key when you want to end your call.


## ***Redialing the Last Number***

The phone stores the phone numbers of calls you've dialed, received, or missed if the number is identified.

To recall any of these numbers:

1. If you typed characters on the display, press the  key to return to Idle mode.
2. Press the **Up** Navigation key to display a list of recent numbers in reverse order (most recent number first).
3. Use the **Up** and **Down** Navigation keys to scroll through the numbers and highlight the number you want.
4. To view call details press **View** .

Before you dial the number, you can also press the **Options** soft key to display the following options:

- **Send message:** Allows you to send a message to the number.
  - **Save to contacts:** Stores the number to the Contacts list.
  - **Delete:** Allows you to delete the Selected number or All call history.
5. Press **Call**  to dial the number.

## ***Making a Call from Contacts***

You can store regularly used phone numbers in Contacts.

Once you store a number in Contacts, you can recall and dial the stored number at any time. Using the Speed Dial feature you can also assign your most frequently-used numbers to number keys.

For further information about using the Contacts feature, see *“Contacts” on page 43.*

## Adjusting the Call Volume

During a call, use the Volume keys on the left side of the phone to adjust the speaker volume.

Press the **Up volume** key to increase the volume level and the **Down volume** key to decrease the level.

From Idle mode, you can also adjust the ringtone volume using these keys.

---


**Important!** For safety information related to Call Volume, see *“Safety Warnings” on page 150.*


---

## Answering a Call


When somebody calls you, the phone plays the selected ringtone and displays the incoming call image.

The caller's phone number displays (or the name if stored in Contacts).

1. Press the  key or the **Accept** soft key to answer the incoming call.

If the **Any key** answer option in the **Answer options** menu is activated, you can press any key to answer a call except for the  key and the **Reject** soft key.

---

**Note:** To reject an incoming call, press the **Reject** soft key or  key.

---


2. Press the  key to end the call.
- 

**Note:** You can answer a call while using the Contacts or menu features. After ending the call, the phone returns to the function screen you were previously using.

---

## Call History

All answered, dialed and missed calls are listed in the Call History.

From Idle mode, press **Menu** → **Call history** and press the **Select** soft key or the  key to enter the menu.

---

**Note:** From Idle mode, press the **Up** Navigation key to directly access the **All calls** list.

---

### All calls

This menu lets you view the 90 most recent calls you received, dialed, and missed.

The screen displays the number (and name if stored in your Contacts) and the number of occurrences.

---

**Note:** At any time while you are in Call History, you can use the **Left** or **Right** Navigation keys to scroll between **All calls**, **Missed calls**, **Dialed calls**, or the **Answered calls** call history.

---

## Missed calls

This menu lets you view the 30 most recent calls you received but did not answer. The number displays (and name if stored in your Contacts) along with the number of occurrences.

### Viewing Missed Calls

When you are unable to answer a call for any reason, you can find out who called, if this service is available, so that you can call the person back.

The missed call information displays on the idle screen on the Missed Call tab, immediately after a call is missed.


To view missed call information:

1. If the display is off, press the volume key to turn on the display. The Missed Call tab displays available information for the last missed call.


– or –

Press the **Up** Navigation key to view the **Call history**, then press the **Right** Navigation key to view **Missed calls**.

2. To scroll through the list of missed calls, press the **Up** or **Down** Navigation key.

3. Press  to call the displayed number.


– or –

Press **View**  to display call details.

4. Press the **Options** soft key for the following options:
  - **Send message**: Allows you to send a message to the caller.

- **Save to contacts:** Allows you to save the number to your Contacts list as a New contact or Update to an existing contact.
- **Delete:** Allows you to delete the Selected or All history.

---

**Note:** You can press the  key at any time to exit the **Missed Call** feature.

---

## ***Dialed calls***

This menu allows you to view the 30 most recent calls you dialed. The number displays (and name if stored in your Contacts) along with the number of occurrences.

## ***Answered calls***



This menu lets you view the 30 most recent calls you received. The number displays (and name if stored in your Contacts) along with the number of occurrences.


## ***Voice mail***

This menu lets you view details of the 30 most recent voice mail messages you received.

## **Vibration Profile**

Vibration Mode is convenient when you need to stop the phone from making any sounds (in a theater for example). Your phone vibrates only.

From Idle mode, press and hold the  key until the “**Vibration profile on**” message and the Vibration Mode icon () display.

To exit and reactivate the previous sound settings, press and hold the  key again.

## Selecting Functions and Options



### Soft Keys


There are two soft keys, left and right (see “Display Layout” on page 18.). The roles of the soft keys vary depending on the function you are currently using. The icons or labels on the bottom line of the display just above each key indicate their current role.



## Selecting Options

To view the various functions and options available, select the one you want by:

1. Pressing the appropriate soft key.
2. Selecting the displayed function or the highlighted option, then pressing the **Select** soft key or the  key.
3. Viewing the next function or highlighting the next option on a list by pressing the **Down** Navigation key.
4. Moving back to the previous function or option on a list by pressing the **Up** key.
5. Moving up one level in the menu structure by pressing the **Back** soft key.
6. Pressing the  key to exit the menu structure without saving any changes.

In some functions, you are asked for a password or PIN. Enter the correct code and press the **Confirm** soft key or the  key.

When you access a list of options, your phone highlights the currently active option. If there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, simplifying its selection.

## Options During a Call

Your phone provides a number of control functions that are available for use during a call.

## Switching off the Microphone (Mute)


You can temporarily switch your phone's microphone off, so that the other person on the call cannot hear you.

---


**Example:** You wish to say something to a person in the room but do not want the person on the phone to hear you.

---

To switch the microphone off temporarily:

Press the **Mute**  key. The other person can no longer hear you.


To switch the microphone back on:

Press the **Unmute**  key. The other person can hear you again.


## Putting a Call on Hold

You can place the current call on hold at any time. You can also make another call while a call is in progress if your network supports this service.


To place a call on hold:

1. Press the **Options** soft key, highlight the **Hold** option, then press the **Select** soft key or the  key.
2. Press the **Resume** soft key to reactivate the call.

To make a new call while a call is in progress:



1. Enter the new phone number that you wish to dial or look it up in Contacts.
2. Press the  key to dial the second call.  
The first call is automatically put on hold.

– or –

3. Press the **Options** soft key, select **Hold**, and press the  key. This places the currently active call on hold and lets you make a new call.
4. Make the second call in the normal way.

When there is an active call and a call on hold, you may switch between the two calls by placing the current held call to active and then placing the other call on hold.

To switch between the two calls:

1. Press the **Options** soft key, select **Swap**, and press the  key. The current active call is placed on hold and the call on hold is reactivated so that you can continue speaking with that person.
2. Press the  key when you want to end the call.

### Using the Speakerphone

While on a call, you can use your Speakerphone by following these steps:

1. Press the **Spkr on** soft key.
2. To turn the Speakerphone off, press the **Spkr off** soft key.

### Muting or Sending Key Tones

If the **Mute keys/Send key** option is set to **Mute keys**, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, allowing you to press keys without hearing annoying key tones during a call.


## Sending a Sequence of DTMF Tones

You can choose to send DTMF tones after entering the entire number you need to send rather than as you press the numeric keys. This option is helpful for entering a password or an account number when you call an automated system, like a banking service.

1. Press the **Options** soft key and select **Send DTMF**.
2. Enter the required numbers using the keypad.
3. Press the **Send** soft key to send the tones in sequence.

## Searching for a Number in Contacts


You can search for a number in Contacts during a call.

1. Press the **Options** soft key.
2. Press the **Down** Navigation key to highlight **Contacts** and press the **Select** soft key or the  key.

With the Contacts entries displayed:

3. Enter the name that you wish to find in the textbox located above the entries. If you enter the first few letters of the name, the Contacts entries display, starting with the first entry that matches your input.

Or, use the **Up** or **Down** Navigation key to highlight the contact that you desire.

4. To view the highlighted entry, press **View** . The Contact information displays.

---





**Tip:** For further details about the Contacts feature, see “Finding a Contact Entry” on page 45.

---

## Call Waiting

When the **Call waiting** option is set to **Activate**, you are notified of an incoming call while another call is in progress, and can answer the call. For more information, refer to “Call waiting” on page 115. You are notified of an incoming call by a call waiting tone.

To answer a new call while another call is in progress:

1. Press the **Accept** soft key or the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Options** soft key, choose **Swap** and press the **Select** soft key or the  key.
3. To end a call on hold, press the **Options** soft key, select **End** → **Held call** and press the **Select** soft key or the  key.
4. To end the current/remaining call, press the  key.


## Making a Multi-Party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

For further details about subscribing to this service, contact TELUS customer service.

## Setting up a Multi-Party Call

1. Call the first participant in the normal way.
2. Press the **Options** soft key and select the **New call** option.

3. Call the second participant in the normal way. The first call is automatically placed on hold.
4. To join the first participant to this multi-party call, press the **Options** soft key, choose **Join** and press the **Select** soft key or the  key.

---

**Note:** These first two calls are grouped together on screen and displayed in the order the calls were made.

---


---

**Note:** A maximum of two callers can be joined to a single multi-party line. You cannot create two multi-party calls.


---

### Having a Private Conversation With One Participant

When there are two participants in a multi-party session, it might be necessary to place one of those participants on hold so that a private conversation can be held with a single caller. While you are in a multi-party call:

1. Press the **Options** soft key, choose the **Split** option and press the **Select** soft key or the  key.


The short list of call participants then displays with the first caller selected.

2. Press the **Up** or **Down** Navigation key to highlight the person with which you want to talk privately, and press the **Select** soft key or the  key.


---

**Note:** You can now talk privately to that person while the other participant is on hold.


---

3. To return to the multi-party call, press the **Options** soft key, choose **Join** and press the **Select** soft key or the  key. The other participant can now hear your conversation.

### Dropping One Participant

With the multiparty call in progress, press **Options** → **End** → **Select participant**, highlight phone number of the person you want to drop, press  to select the number, then press **Drop**.

### End the Call

When you want to end the multi-party call, press the  key.

## Section 4: Entering Text

---

 
This section explains how to select the desired text input mode when entering characters. This section also describes how to use the T9 predictive text system to reduce the number of keystrokes associated with entering text.

### Using the QWERTY Keyboard

This phone offers the convenience of a slide-out QWERTY keyboard. Using the QWERTY keyboard, you can type letters, numbers, punctuation, and other special characters into text entry fields or other applications faster and more simply than using the telephone keypad.

The keyboard provides dual-use keys labeled with alphabetic characters on the lower half and numbers and symbols on the upper half. Press the key corresponding to the character you want to enter.

The following keys perform special functions when entering text:

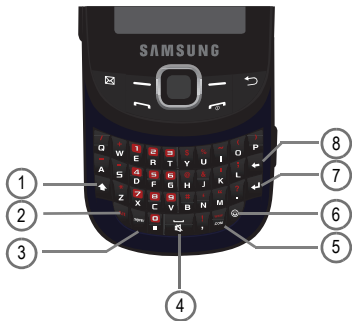

1. **Shift** - converts the alphabet character into uppercase. Changes the text input mode to Upper/Lower case.
2. **Alt** - allows you to use characters displayed at the top of the QWERTY keys. Examples: \$, @, #, !
3. **Sym** - displays the Symbols page. Choose from an extensive list of symbols and other character sets.
4. **Space** - inserts an empty space.
5. **www/.com** - inserts "www." or ".com" when entering a URL in the browser.
6. **Emoticon** - inserts a preconfigured "smiley face" or emoticon character.
7. **Return** - Moves the insertion point to the next line in a message.

8. **Backspace** - deletes the previous character, similar to the backspace key on a computer keyboard.

## Changing the Text Input Mode

When using your phone, you often need to enter alphanumeric characters, such as when entering a text message or storing a name in Contacts.

Your phone offers the following text input modes:

- **ABC**: enter letters by pressing the key labeled with the corresponding letter.
- **T9 (English)**: uses the phone's internal dictionary to reduce the number of keystrokes required to enter words . T9 mode compares your key presses with an internal dictionary to determine the most likely word.
- **Numeric**: enter numbers.
- **Symbol**: enter symbols, such as punctuation marks.

---

**Note:** When you are in a field where you can enter characters, the text input mode indicator displays at the bottom right of the screen.

---

---

**Example:** Writing a text message.

---




1. Press the **Right** soft key and choose a text input mode.
2. Enter text in the text message box using the selected text input mode.

## Using T9 Mode



T9 is a predictive text input mode that allows you to key in some letters of a word and use the built-in dictionary to complete the word.

To enter a word in T9 mode:





1. Press letter keys to begin entering a word. As you type, the phone uses the built-in dictionary to attempt to complete the word, so the letters that appear on the screen may change with each consecutive key that you press.

2. If the word displayed is not correct, press the **Down** Navigation key to display alternatives until the correct word appears or the left soft key changes to Spell. Press <Spell>, enter the word and press <Add> to add the word to the dictionary.
3. Press the  key to insert a space and begin entering the next word.


To enter periods, hyphens, apostrophes, and other special characters in T9 mode:

Press the  key or press the  key, then press the associated symbol.

To delete characters:

Press the  or  key. Press and hold the  or  key to clear the display.



To shift case in T9 mode:

Press the  key. There are three cases: capital lock, initial capital, and lower case.


## Using ABC mode

To use ABC mode, use the letter keys to enter your text.

To enter periods, hyphens, apostrophes, and other special characters in ABC mode:

Press the  key or press the  key, then press the key that contains the associated symbol.

To shift case in ABC mode:





Press the  key. There are three cases: capital lock, initial capital, and lower case.

---

**Note:** You can move the cursor using the Navigation keys.

---

To delete letters:

Press the  or  key. Press and hold the  or  key to clear the display.

## Using Numeric Mode




The Numeric mode enables you to enter numbers.

Press the keys corresponding to the digits you want to enter.

## Using Symbol Mode

Symbol mode lets you insert symbols and punctuation marks into text.

To display a list of symbols press the  key until the symbols display on the screen, or press the **Right** soft key and select **Symbol**.

1. To select a symbol, press the corresponding number key.
2. To display more symbols, press the Navigation keys.
3. To clear the symbol(s), press the  or  key. When the input field is empty, this key returns the display to the previous mode.
4. To insert the symbol(s) into your message, press the **OK** soft key or the  key.

## Section 5: Contacts

---

The Contacts menu is used to manage your contact list. You can store names, phone numbers and other information in both your SIM card and your phone's memory, which are physically separate but can both be used to create the contact list.

When you change phones, numbers stored in your SIM card memory are automatically available with the new phone, whereas numbers stored in the phone's memory must be re-entered or transferred using a data kit accessory. However, contacts stored on the phone can include additional details that can not be stored on the SIM card.

### Add New Contact

Use the following procedures to store a new contact to your phone.

---

**Note:** Your phone can be set to automatically save contacts to your Phone, automatically save to your SIM Card, or Phone and SIM Card. To change the setting, see *"Management"* on page 50.



---

### Storing a Number in the Phone's Memory


1. From Idle mode, press **Menu** and select **Contacts** → **Add new contact**. The Create contact screen opens.
2. Enter a first name in the **First name** text box. Press the **Down** key to tab to the next text box.  
For further details about how to enter characters, see *"Using ABC mode"* on page 41.
3. Enter a last name in the **Last name** text box.


4. Highlight a number type by pressing the **Up** or **Down** Navigation key, then enter a number in the text box.

The following types are available:

- **Mobile:** assigns the number to the Mobile entry.
  - **Home:** assigns the number entered to the Home entry.
  - **Work:** assigns the number entered to the Office entry.
  - **Others:** allows you to enter an additional phone number for this entry.
5. In a similar manner, to add information to any of the remaining fields highlight the field and enter the information. The available fields are:
    - **Email:** allows you to enter the email address for the contact.
    - **Group:** lets you assign this contact to a group.
    - **Picture ID:** allows you to assign a Picture ID to the contact.
    - **Ringtone:** allows you to assign a Ringtone.
    - **Birthday:** allows you to enter the contact's birthday.
    - **Address:** allows you to enter an address for the contact.
    - **Notes:** allows you to enter up to 100 characters of additional information about the contact.
  6. Press  to save your selections. The contact information saves to your selected destination and displays.
  7. Press the  key to return to Idle mode.

## Finding a Contact Entry

1. From Idle mode, press **Menu** and select **Contacts** → **Contacts**.
2. Enter the first few letters of the name in the text box.  
The Contacts entries are listed, starting with the first entry matching your input.
3. If needed, press the **Up** or **Down** Navigation key until the entry you want highlights.
4. Once you locate the entry, press the  key to dial the number, or press the **Options** soft key to access the following entry options:
  - **Edit**: allows you to edit the Name and number for the selected contact.
  - **Send message**: allows you to send a message to the selected number.
  - **New contact**: takes you to the Add new contact menu.
  - **Call**: places a call to the selected phone number.
  - **Copy to phone/SIM card**: copies the selected contact or all contacts to the phone or SIM card. Selection depends on where the contact is already saved.
  - **Assign speed dial**: allows you to assign a speed dial key number to the selected Contacts entry.
  - **Send contact via**: allows you to send your name card in a Message or to a Bluetooth enabled device.

- **Delete:** allows you to delete the selected or multiple names and numbers from your Contacts or delete all numbers. You are asked to confirm your name and number deletion by pressing the **Yes** soft key. To cancel, press the **No** soft key.
  - **Print via Bluetooth:** sends the contents of the selected contact to a Bluetooth enabled printer.
5. Press **View** to view contact information and select one of the following options:
- **Edit:** allows you to edit the name and number fields in the entry. You can also add an email address and notes.
  - **Send message:** allows you to send a message to the selected number.
  - **Copy to phone/SIM card:** copies the selected or all of the contacts to the phone or SIM card. Depends on where the contact was previously saved.
  - **Send contact via:** allows you to send the contact information in a Message or to a Bluetooth enabled device.
  - **Delete:** allows you to delete the selected name and number from your Contacts. You are asked to confirm the deletion by pressing the **Yes** soft key. Press the **No** soft key to cancel the deletion.
  - **Print via Bluetooth:** sends the selected contact information to a Bluetooth enabled printer.
6. Press **Call**  to dial the selected number.

## Groups




Using Groups you can organize your contacts into lists such as Family, Friends and Work. You can also assign a unique Caller ID or ringtone to members of the group.


---

**Note:** Groups stored on your phone accept contacts stored on the phone only. If your SIM card supports Groups, Groups stored on the SIM card accept contacts stored on the SIM card only.



---


### Create a New Group

1. From Idle mode, press **Menu** and select **Contacts** → **Groups**.
2. Press the **Options** soft key and select the **Add new group** option.
3. Enter a name for the new group in the **New group** field, press **Options** and select **Save**.
4. Highlight the newly created group and press .
5. Press **Options** and select **Group settings**.
6. To create a Picture ID for this new caller group, highlight the **Picture** field and press the  key. Select from one of the following options:
  - **Wallpapers:** allows you to select a wallpaper image to use as a Picture ID.
  - **Downloaded images:** displays a list of downloaded images from which to select as a Picture ID.
7. Highlight the **Ringtone** field and press the  key to create a ringtone for this new caller group. Select from one of the following options:

- **Sounds:** displays a list of sounds from which to select a ringtone.
  - **Voice list:** displays a list of recorded voice messages that can be selected as a ringtone.
8. Press **Options** and select **Save** when you are finished.
  9. Press the  key to return to Idle mode.

## Editing a Caller Group

1. From Idle mode, press **Menu** and select **Contacts** → **Groups**.
2. Scroll through the group list, highlight the group you want, press **Options** and select **Group settings**.
3. Highlight the **Picture** field and press the  key to change the Picture ID for this caller group. Options are:
  - **Wallpapers:** allows you to select a wallpaper image to use as a Picture ID.
  - **Downloaded images:** displays a list of downloaded images from which to select as a Picture ID.
4. Highlight the **Ringtone** field and press the  key to change the ringtone for this caller group. Options are:
  - **Sounds:** displays a list of sounds from which to select a ringtone.
  - **Voice list:** displays a list of recorded voice messages that can be selected as a ringtone.
5. To rename the group, Press the **Back** key, press **Options** and select **Rename group**.




6. Backspace over the old name and enter a new name for the group, then press **Options** and select **Save**.
7. Press the  key to return to Idle mode.

## Speed dialing

Once you store phone numbers to your Contacts list, you can set up to 8 speed dial entries and then easily dial them whenever you want by pressing the associated numeric key.

From Idle mode, to speed dial the numbers assigned to keys (2 to 9), press and hold the appropriate key.

### *Setting Up Speed Dial Entries*

1. From Idle mode, press **Menu** and select **Contacts** → **Speed dial**.
2. Use the Navigation key to select the keypad number key where you wish to assign the new speed-dialing number (from keys 2 to 9), and press the **Assign** soft key or the  key.
3. Highlight a contact entry from the list and press the **Select** soft key or the  key.
4. You receive a **Speed dial assigned** confirmation and the **Speed dial** menu displays the contact assigned to the number key you selected.
5. Press the  key to return to Idle mode.

---

**Note:** Memory location 1 is reserved for your Voice mail server number and this speed dial location can not be changed.

---

## Management

To access the Management menu:

From Idle mode, press **Menu** and select **Contacts** → **Management**.

### Contacts




Lets you choose whether contacts are saved to Phone and SIM card, Phone or SIM card.

### Save contacts to

This option allows you to save new contacts to the SIM or Phone, or Ask on saving.

### Copy all to

You can copy Contact entries between the Phone's memory and the SIM card.

1. From Idle mode, press **Menu** and select **Contacts** → **Management** → **Copy all to**.
2. Highlight **Phone** or **SIM card** and press the **Select** soft key or the  key.
3. Highlight each contact you want to copy and press  to place a check mark next to the entry. Or highlight **All** and press  to copy all entries.
4. Press **Copy** to copy the selected contacts to the Phone or SIM card.

### Delete all

This option allows you to delete all your contacts from the Contacts.


## Deleting all Contact Entries

Perform the following procedure to delete all your entries from your phone's memory.

---


**Important!** Once contact entries are deleted, they cannot be recovered.

---

1. From Idle mode, press **Menu** and select **Contacts** → **Management** → **Delete all**.
2. Select whether to delete **All** contacts or contacts saved to the **Phone** or **SIM card**.
3. When the **Delete?** confirmation message displays, press the **Yes** soft key to delete or **No** to cancel.
4. Press the **Back** soft key or the  key to return to Idle mode.

## Memory status



You can check how many contacts are stored within the Phone and SIM card. You can also see the current storage capacity.

1. From Idle mode, press **Menu** and select **Contacts** → **Management** → **Memory status**.
2. Press the **Back** soft key or the  key to return to Idle mode.

## My number

This selection is a memory aid where you can store your own phone number. You can also edit the default name assigned to your phone number. To save or edit a number:

1. From Idle mode, press **Menu** and select **Contacts** → **My number**.

2. Press the  key. The cursor displays in the **Name** field.
3. Press the **Down** Navigation key, press the  key to erase the current entry and type in a new number.
4. Press the **Save** soft key when finished.

### ***Using the Service Dialing Numbers***

You can view a list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers include emergency numbers, customer service numbers and directory inquiries.

From Idle mode, press **Menu** and select **Contacts** → **Service number**.

The service numbers display.

## Section 6: Messaging

---

This section describes how to send and receive different types of messages. It also explains the features and functionality associated with messaging.

### Types of Messages




Your phone provides the following message types:

- Text Messages
- Picture Messages
- Voice Mail

### Display Icons for Messages

When your handset receives new messages, icons display on the screen in two locations: on the View Tab that displays on the lower portion of the screen, and on the top of the screen (see “*Display Layout*” on page 18.)

 
#### *Message Icons on the Icon Line*

The  icon displayed at the top of the screen indicates that a new text message was received. The  icon indicates a new picture message was received. The  icon indicates a new voice mail message was received.

## View Tab

The View Tab is an area that displays on the screen when a missed call, message, or voicemail is sent to the phone.

View Tabs for  
Missed Calls,  
Picture Messages,  
or  
Voice Messages

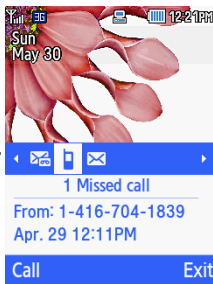

The View tabs that display icons are:


- Missed calls
- New messages
- New Voicemail messages

You can search through missed calls or unviewed messages by using the **Right** and **Left** navigation keys to select the associated message tab, then pressing the **Play**, **Connect**, **Call**, or **View** soft key.

## Text Messages


Short Message Service (SMS) allows you to send and receive short text messages to and from other mobile phones. In addition, your phone supports the Enhanced Messaging Service (EMS), which allows

inclusion of simple graphics, melodies, and animated images in your messages. To use this feature, you must subscribe to TELUS message service.

The Message icon () displays on the Messages tab when you receive a new text message. If the phone's memory is full, the icon flashes and you cannot receive any new messages. You must delete messages before you can receive any additional messages.

### ***Creating a Simple Text Message***

To write and send a text message:

1. From Idle mode, press **Menu** and select **Messaging** → **Create message**.
2. Highlight the **To** field and press **Add** . Select one of the following:
  - **Recent recipients**: allows you to select from recipients of previous messages.
  - **Contacts**: allows you to select the phone number you want from Contacts.
  - **Groups**: allows you to select a group.

The selected number(s) display in the **To** field.

– or –

Press the **Options** soft key and select one of the following:

- **Add recipients**: allows you to add Recent recipients, Contacts, or a Group.

- **View recipients:** allows you to view and add a recipient from the Recipient list.
- **Exit composer:** exits the composer and displays the Messaging screen.

---

**Note:** A recipient must be listed in Contacts in order to add them to the message.

---


### 3. Press the **Down Navigation** key and create your message.

---

**Note:** For further details about entering characters, see “*Changing the Text Input Mode*” on page 39. The message can contain up to 2295 characters.

---

- ### 4. Press the **Options** soft key when you finish entering your message. The following options are available:
- **Add recipients:** allows you to add Recent recipients, Contacts, or a Group.
  - **Insert:** allows you to insert a Text template, a Text emoticon, Contacts, or Bookmarks into this message.
  - **Add attachment:** allows you to add an attachment such as: a File, Name card, Appointment, Anniversary event, Private event, Holiday, Important event, Tasks, Memo, or Bookmarks.
  - **Copy & Paste:** turns on the text selection feature so you can copy and paste text.
  - **More:** allows you to configure one of the following:
    - **Add page:** allows you to add a page to this message.
    - **Add subject:** allows you to add a subject to this message.

- **Sending options:** allows you to set the Reply path or Request delivery report sending option.
  - **Select language:** allows you to set the language for this message. Choices are: English or Français (French).
  - **Save to:** saves this message to either the Drafts or Templates folder.
  - **Exit composer:** exits the composer and displays the Messaging screen.
5. Press  to send this message.

## Picture Messages

The Multimedia Message Service (MMS) is used to create a Picture message.


Picture Messaging is a messaging service that provides delivery of messages that contain multimedia files, such as photos, sounds and images from phone to phone. In addition to the familiar text content available via traditional text messages, picture messages can contain images, graphics, voice, and audio clips.

The closed message icon  displays in your Inbox list to indicate any Picture messages that have not been viewed. The envelope in the image appears open when you have viewed the image.

This function is available only if it is supported by your service provider. Only phones that offer picture messaging features can receive and display picture messages.

## Creating and Sending a Picture Message

To create a new picture message and then send it to one or more destinations:

1. From Idle mode, press **Menu** and select **Messaging** → **Create message**.
2. Highlight the **To** field and press **Add** . Select one of the following:
  - **Recent recipients**: allows you to select from recipients of your previous messages.
  - **Contacts**: allows you to enter the phone number you want from Contacts.
  - **Groups**: allows you to select a group.

– or –

Press the **Options** soft key and select one of the following:

- **Add recipients**: allows you to add Recent recipients, Contacts, or a Group.
- **View recipients**: allows you to view and add a recipient from the Recipient list.
- **Exit composer**: exits the composer and displays the Create new screen.

---

**Note:** A recipient must be listed in Contacts in order to add them to the message.

---

3. Press the **Down Navigation** key, then use the **Left** and **Right Navigation** keys to choose one of the following:


- **Record sound:** record a voice note to attach to this message.
- **Add sound:** attach a sound file or voice list from the Sounds folder.
- **Add picture:** attach a photo from the Photos folder.
- **Take picture:** activate the camera so you can take a picture and attach it to this message.
- **Add video:** activate the camcorder so you can take a video and attach it to this message.

---

**Note:** For further details about entering characters, see “*Changing the Text Input Mode*” on page 39. You can enter up to 2295 standard alphabet characters in your message.

---

4. After adding the attachment, press **Options** to set options for this message:
  - **Preview:** allows you to view the message prior to sending.
  - **Add recipients:** allows you to add Recent recipients, Contacts, Groups.
  - **Insert:** allows you to insert a **Text template**, Text emoticon, **Contacts**, or **Bookmarks**. The Text templates allow you to apply one of the preset message templates to the text. Select one of the items stored in the **Text message templates** menu. **Contacts** allows you to add names and phone numbers to your message. **Bookmarks** allows you to add Internet addresses to your message.

- **Add attachment:** allows you to attach a File, Name card, Appointment, Anniversary, Private, Holiday, Important, Tasks, Memo, or Bookmarks to the message.
  - **More:** allows you to Add page, Add subject, Edit style, access Sending options, or Select a language for this message.
  - **Save to:** save the message to your Drafts or Templates folder.
  - **Exit composer:** exits the composer and displays the Messaging screen.
5. Press **Send**  to send this message.

## Message inbox

The Message inbox stores received text messages and picture messages. When you enter the Message inbox, the list of messages displays with the sender's phone number (or name if available in Contacts). The type of message is indicated by the associated icon. If the icon envelope is closed then the message is unread; the envelope in the image appears open when you have viewed the image.

From Idle mode, press **Menu** and select **Messaging** → **Inbox**.

---



**Tip:** Press the **Left** or **Right** Navigation keys to scroll between **Message inbox**, **Email**, **Sentbox**, and **Drafts**.

---

### *Viewing a Text Message from the Message inbox*

1. From Idle mode, press **Menu** and select **Messaging** → **Inbox**.
2. Select a text message from the list and press the **Options** soft key.

The following options display:

- **Reply:** allows you to send a reply to the sender by sending a message.
  - **Call back:** Places a call to the number.
  - **Forward:** allows you to forward the text message to another person.
  - **Save to Contacts:** saves the sender's contact information to Contacts.
  - **Delete:** deletes the selected text message, multiple messages, or all messages.
  - **Lock:** locks the message so it can not be deleted.
  - **More:**
    - **Move to phone/SIM card:** allows you to move the message from the SIM card into the phone's memory or from the phone onto the SIM card, depending on where the message is currently saved.
    - **Move to my folders:** lets you move the message to a specified folder.
    - **Sort by:** allows you to sort messages by Read/Unread, Date, Sender, Type, Subject, Size, or Lock/Unlock.
3. Press **View**  to read the message contents.  
To scroll through the contents, press the **Up** or **Down** Navigation key.
4. Press **Reply**  to send a reply to the sender by sending a message.  
– or –


Press the **Options** soft key while reading a text message to display the following:

- **Call back:** places a call back to the number.
- **Forward:** allows you to forward the message to another number.
- **Save to Contacts:** saves the sender's contact information to Contacts.
- **Delete:** allows you to delete the message.
- **Lock:** locks the message so it can not be deleted.
- **Save to Templates:** allows you to save the selected message as a Text Message template.
- **More**
  - **Move to phone/SIM card:** allows you to move the message from the SIM card into the phone's memory or from the phone onto the SIM card. Depends on where the current message was saved.
  - **Move to my folders:** lets you move the message to a specified folder.
  - **Print via Bluetooth:** allows you to print the message using a Bluetooth enabled printer.

### ***Viewing a Picture Message from the Message inbox***

1. From Idle mode, press **Menu** and select **Messaging** → **Inbox**.
2. Highlight a picture message from the list and press the **Options** soft key.

The following options display:

- **Reply:** send a reply to the sender by sending a message.
  - **Call back:** call the sender of the message.
  - **Forward:** forward the message to another number.
  - **Save to Contacts:** saves the sender's contact information to Contacts.
  - **Delete:** delete the Selected, Multiple, or All messages.
  - **Lock/Unlock:** lock the picture message to prevent deletion or unlock it to allow deletion.
  - **More:**
    - **Move to my folders:** move the picture message to a personal folder.
    - **Sort by:** allows you to sort messages by Read/Unread, Date, Sender, Type, Subject, Size, or Lock/Unlock.
    - **Properties:** shows you information about the message, such as Subject, Received date, From, To, Cc, Size, Priority, Delivery report, Read report.
3. Press **View**  to view the picture and read the message contents.


To scroll through the contents, press the **Up** or **Down** Navigation key.


4. Press the **Options** soft key while reading a message to display the following:
- **Reply:** send a reply to the sender by sending a message.
  - **Call back:** allows you to call the sender back.


- **Forward:** allows you to forward the message to another number.
- **Reply:** allows you to review the picture message.
- **Save to Contacts:** saves the sender's contact information to Contacts.
- **Delete:** deletes the selected picture message.
- **Save media:** allows you to save message media to the appropriate file folder.
- **Lock/Unlock:** allows you to protect the message from deletion or unlock it for deletion.
- **Save to Templates:** allows you to save the selected message as a Picture Message template.
- **More:**
  - **Move to my folders:** move the picture message to a personal folder.
  - **Print via Bluetooth:** allows you to print the message using a Bluetooth enabled printer.
  - **Properties:** shows you information about the message, such as Subject, Received date, From, To, Cc, Size, Priority, Delivery report, Read report.

### ***Viewing a Picture Message When You Receive It***

When a new picture message is received, the Messages tab displays the Picture Message icon.

1. Press the **View**  key to view the picture message.  
Press the **Exit** soft key if you want to view the message later from the Inbox.

Press the **Options** soft key or the  key to access the various options described above.

2. Press the  key when you are finished.

## Voice mail

This menu selection accesses your voice mailbox, if your account supports this service.

1. From Idle mode, press **Menu** and select **Messaging** → **Voice mail**.
2. Follow the voice mail prompts to listen to your messages or change settings.

---

**Important!** Before using the Voice Mail feature, you must enter the voice server number obtained from TELUS customer service in the **Center address** field.

---

---

**Note:** Voice mail is a network feature and charges may apply. Please contact TELUS customer service for further details.

---

## Voice mail settings

---

**Note:** Voicemail settings can only be entered during initial access. On subsequent access you can view the settings only.

---

1. From Idle mode, press **Menu** and select **Messaging** → **Settings** → **Message settings** → **Voice mail** → **Edit**.
2. Enter the name and Center address as required.
3. Press **Save**.

## Sentbox

This message box stores sent messages.


When you enter this menu, the list of messages in the Sentbox displays with the recipients' phone number (or name if available in Contacts).

1. From Idle mode, press **Menu** and select **Messaging** → **Sentbox**.

---

**Note:** Press the **Left** or **Right** Navigation keys to scroll between **Inbox**, **Sentbox** and **Drafts**.

---

2. Select a message from the list and press the **View**  key to view or play the message contents.
3. Press the **Up** or **Down** Navigation keys to scroll through the contents.

---

**Tip:** Press the **Options** soft key while reading a message to select alternate options.

---

## Drafts

This message box stores messages that you want to edit or send at a later time.




When you enter this menu, the list of messages in the box displays.

1. From Idle mode, press **Menu** and select **Messaging** → **Drafts**.

---

**Note:** Press the **Left** or **Right** Navigation keys to scroll between **Inbox**, **Sentbox** and **Drafts**.

---

2. Select a message on the list and press the **Options** soft key.  
The following options display:
  - **Send**: allows you to send the draft message.
  - **Delete**: deletes the Selected, Multiple, or All messages.
  - **Lock/Unlock**: locks the selected message to protect it from deletion, or unlocks the message to allow deletion.
  - **More**:
    - **Move to my folders**: moves the draft message to a personal folder.
    - **Sort by**: allows you to sort the messages stored in this folder by Date, Recipient, Type, Subject, Size, or Lock/Unlock.
3. Press the **Edit**  key to edit the message contents.
4. Press the **Send**  key (while viewing the message) to send the message.
5. Press  to return to the Idle screen.

---

**Tip:** Press the **Options** soft key while reading a message to select alternate options.

---

## My folders

Use My folders to manage and organize your messages and store them on your phone.

From Idle mode, press **Menu** and select **Messaging** → **My folders**.

### *Create a new folder*

1. Press **Create**.

2. Enter the title of the folder and press the **OK** soft key.

The newly created folder appears in My folders.

## Templates




You can speed message composition by including copies of stored message content in your message.

From Idle mode, press **Menu** and select **Messaging** → **Templates**.



The following options are available:

- Text message templates
- Picture message templates

### *Sending a Text template*

1. From Idle mode, press **Menu** and select **Messaging** → **Templates** → **Text message templates**.
2. Select a template from the Text Templates list and press the **Send**  key. The template displays.
3. Press the **Add**  key:
4. Select one of the following:
  - **Recent recipients:** allows you to select a number or an address from the last 30 destinations you entered.
  - **Contacts:** allows you to enter the phone number you want from your Contacts.
  - **Group:** allows you to select a group.
5. After selecting the recipient(s), press the **Send**  key. The message is sent to the selected recipient(s).

## ***Sending a Picture message template***

1. From Idle mode, press **Menu** and select **Messaging** → **Templates** → **Picture message templates**.
2. Select a template from the **Picture message templates** list and select **Options** → **Send**.
3. Press the **Add**  key:
4. Select one of the following options:
  - **Recent recipients**: allows you to select a number or an address from the last 30 destinations you entered.
  - **Contacts**: allows you to enter the phone number you want from your **Contacts**.
  - **Groups**: allows you to select a group.
5. After selecting the recipient(s), press **Send** . The message is sent to the select recipient(s).

## ***Settings***

The **Settings** menu allows you to set various message options, delete messages by folder, or check your phone's memory status.

From Idle mode, press **Menu** and select **Messaging** → **Settings**.

### ***Message settings***

In this menu, you can set up default Text, Picture, Voice mail, and Push message options, and configure the Text Message Center. The last setting you accessed is automatically activated for sending subsequent messages.

From Idle mode, press **Menu** and select **Messaging** → **Settings** → **Message settings**.

### ***Auto Delete Inbox***

Lets you select whether to automatically delete messages from your Inbox as they become old. The choices are: **Off** (messages are never deleted), **1 Week Old**, **2 Weeks Old**, or **The Oldest When Full** (the oldest messages are deleted whenever additional space is required to save new messages).

### ***Text message***

The following Sending Options are available:

- **Reply path:** allows the recipient of your message to send you a reply message using your message center, if your network supports this service.
- **Request delivery report:** allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message was delivered.

### ***Text message center***

Sets the default method of text message transmission used by the Text message center. The options are:

- SMS Centre
- Center 2
- Center 3

### ***Picture message***

The following options are available:

## Sending Options

- **Priority:** you can select the priority level of your messages (High, Normal, Low).
- **Expiration:** allows you to select the length of time for your message to remain on the MMS server: Maximum, 1 Day, 2 Days, 1 Week, 2 Weeks, Custom time (Hour).
- **Message size:** allows you to set a size limit for your message: 30 KB, 100 KB, 300 KB, 600 KB.
- **Request delivery report:** when this option is enabled, the network informs you whether or not your message was delivered.
- **Request read report:** when this option is enabled, the network informs you when your message is read.
- **Keep a copy:** when this option is enabled, a copy of your message is stored.
- **Add my business card:** allows you to add your business card to your message.

## Receiving Options

This option specifies the category of messages you want to receive and allows you to set the following:

- **Download type:** Select Auto download, Manual, or Reject.
- **Send read report:** when this option is enabled, your phone sends a notification back to the recipient indicating that your message was received.
- **Send delivery report:** when this option is enabled, the phone informs the network whether or not your message was received.

- **Reject anonymous:** automatically rejects messages with a category of anonymous.
- **Reject advertisement:** automatically rejects messages with a category of advertisement.

### **Picture message profiles**

- TELUS Web
- TELUS MMS
- TELUS VOD

### **Auto resize image**

- No Resize
- 100 KB
- 300 KB
- 600 KB

### **Creation mode**

- Free
- Warning
- Restricted

### **Default style**

- Font color
- Font style
- Background color
- Page duration

### ***Voice Mail***

This menu displays the name and phone number used for access of phone's remote voice mail. Select **Edit** to change these settings.

## Push Message

- **Receiving options:** you can turn push message reception **On** or **Off**.
- **Service loading:** you can specify whether to load this service:
  - Always
  - Prompt
  - Never

## Delete by folder

This menu allows you to delete all messages in individual message boxes or all messages saved on your phone.

---

**Important!:** Once messages are deleted, they cannot be recovered.

---

1. From Idle mode, press **Menu** and select **Messaging** → **Settings** → **Delete by folder**.
2. Press the **Up** or **Down** Navigation key to select a message box to clear. To delete all of your messages, select the **All** option.
3. Press  to place a check mark next to all message boxes to be cleared.
4. Press the **Delete** soft key to delete the marked objects.
5. At the **Delete? Locked messages** confirmation, Press  to place or remove the check mark confirming deletion of locked messages.
6. Press **Yes** to delete or press **Cancel** to cancel.

## Memory status

To view the memory status:

From Idle mode, press **Menu** and select **Messaging** → **Settings**  
→ **Memory status**.

The display shows the total memory space and the amount available. You can also view the number of messages saved and maximum number for each message box:

- **Picture message**

- Inbox
- Sentbox
- Drafts
- My folders

- **Text Message**

- Phone
- SIM card
- Inbox
- Sentbox
- Drafts
- My folders

- **Push message**

- Phone
- Inbox
- My folders

- **Configuration**

- Phone
- Inbox
- My folders

## Section 7: Media



---

### Photos

Use **Photos** to manage photos saved on your phone.

1. In Idle mode, press **Menu** and select **Media** → **Photos**.



When you access this menu, your phone displays the photos in Line view, which shows them as small images. Use the Navigation keys to scroll through the photos.

2. To view a photo on the full screen, highlight the file and press . To return to Line view, press the **Back**  key.
3. While viewing the photo list, press the **Options** soft key for these options:
  - **Send via:** allows you to send the selected photo as a Message or to a Bluetooth enabled device.
  - **Set as:** allows you to set the photo as a Picture ID or Wallpaper.
  - **Delete:** allows you to delete the Selected photo, Multiple photos or All photos.
  - **Move:** allows you to move the Selected photo or Multiple photos to another location.
  - **Copy:** allows you to copy the Selected photo or Multiple photos to another location.
  - **Rename:** allows you to rename the photo.

- **Take photo:** allows you to take another photo.
- **Create folder:** allows you to create a new folder in which to place this photo.
- **Sort by:** allows you to sort photos in this folder by Date, Type, Name, or Size.
- **Bluetooth visibility:** allows you to enable the Selected or Multiple photos so they are visible to other Bluetooth devices.
- **Print via Bluetooth:** allows you to send the selected photo to a Bluetooth enabled printer.
- **Lock/Unlock:** allows you to lock the image to protect it from deletion, or unlock it to allow deletion.
- **Properties:** allows you to view Basic details about the selected image, including Name, Format, Resolution, Size, Forwarding, Date created and Location.

## *Deleting a Photo*

You can delete photos one by one or all at one time.

1. From the **Photos** menu, highlight the photo you want to delete.
2. Press **Options** and select **Delete**.
3. Choose **Selected**, **Multiple**, or **All** and press the **Select** soft key or .
4. Press the **Yes** soft key to confirm the deletion.
5. Press  when you are finished.

## Camera

Use your phone's **Camera** to take photos of people or events while on the move. Additionally, you can send these photos to other people in a Picture message or set a wallpaper or picture ID image.

For more information about using the Camera and features, see *“Using the Camera” on page 134.*

## Music

Your phone's **Music** features allow you to play and manage the music files stored on your phone.


1. From Idle mode, press **Menu** and select **Media** → **Music**.
2. Highlight a music file and press the **Options** soft key to choose from the following options:
  - **Send via:** allows you to send the selected music file via Message or to a Bluetooth enabled device.
  - **Set as:** allows you to set the music file as Individual ringtone, Alarm tone, or as a Calendar reminder.
  - **Delete:** allows you to delete the Selected, Multiple, or All music files.
  - **Move:** allows you to move the Selected music file or Multiple music files to another location or folder.
  - **Copy:** allows you to copy the Selected music file or Multiple music files to another location or folder.
  - **Rename:** allows you to rename the selected music file.

- **Create folder:** allows you to create a folder in which to store the selected music file.
- **Sort by:** allows you to sort the music by Date, Type, Name, or Size.
- **Bluetooth visibility:** allows you share the Selected file or Multiple files with other Bluetooth devices.
- **Lock/Unlock:** allows you to lock the music file to protect it from deletion or unlocks it to allow deletion.
- **Properties:** displays Basic details about the selected music file such as Name, Format, Size, Forwarding, Date created, and Location.

## **Music Player**

Use **Music Player** to add music files or play music stored in your playlist.

1. From Idle mode, press **Menu** and select **Media** → **Music** → **Music player**.
2. Press **Library**, choose **All tracks**, **Artists**, **Albums**, or **Playlists** and press **Open**.
3. Highlight a music file, then press the **Options** soft key and select one of the following options:
  - **Add to playlist:** allows you to add the Selected, Multiple, or All music files to a playlist.
  - **List by:** allows you to display music files by category: Recently added, My rating, or Title.

- **Delete:** allows you to delete the Selected, Multiple, or All music files.
  - **Send via:** allows you to send this music file as a Message or to a Bluetooth device.
  - **Set as:** allows you to set this music file as Individual ringtone, Alarm tone, or as a Calendar reminder.
  - **Properties:** displays Basic details about the selected music file.
  - **Settings:** set Background playing, and choose Sound effects and Visualization settings.
4. Select a music file and press  to play the music. During playback, press **Options** for playback options:
- **Transfer to Bluetooth stereo headset:** sends audio via Bluetooth to a Bluetooth stereo headset.
  - **Set as:** allows you to set this music file as Individual ringtone, Alarm tone, or as a Calendar reminder.
  - **Send via:** allows you to send this music file as a Message or to a Bluetooth device.
  - **Rate track:** select a rating of 1 to 5 stars or No rating for the track.
  - **Add to playlist:** allows you to add the current track to a playlist.
  - **Properties:** displays Basic details about the music file.

- **Settings:** set Background playing, and choose Sound effects and Visualization settings.
- **Shortcuts:** view keypad and navigation key shortcuts.

## Music Player Shortcuts

**Shortcut keys** allow you to control playback and change some settings using the keyboard, Navigation keys, and Volume key during playback.

---

**Tip:** To display Music Player shortcuts on your phone, press **Options** → **Shortcuts**.

---



**OK Key:** Press to start or pause playback.



**Up Volume key:** Press to increase playback volume.

**Down Volume key:** Press to decrease playback volume.

**Up Navigation key:** Press to view all tracks

**Down Navigation key:** Press to stop playback.



**Left Navigation key:** Press to play the previous song in the playlist. Press and hold to scan backward through current song.

**Right Navigation key:** Press to play the next song in the playlist. Press and hold to scan forward through the current song.



Press to **Rate** the track, in stars (0-5).



Press to change the **Sound effects** preset. Choose from DYNA (Dynamic), SURR (Surround), NORM (Normal), ROCK, POP, DANC (Dance), CLAS (Classical), JAZZ, or WIDE



Press to toggle **Shuffle** mode **On** or **Off**.

Press to toggle **Player** modes:

- **Normal**: plays all tracks in the playlist, then stops.
- **Repeat one**: repeats the current track, until you stop playback.
- **Repeat all**: repeats all songs in the current playlist, until you stop playback.




Press to toggle between the three **Visualization** modes.


## Creating a Playlist

1. From Idle mode, press **Menu** and select **Media** → **Music** → **Music player**.
2. Select **Library** → **Playlists** → **Create playlist**, enter a name for the playlist and press **Save**.

## Adding Music Files to a Playlist

1. From Idle mode, press **Menu** and select **Media** → **Music** → **Music player**.
2. Press **Library** and select **Playlists**, highlight the desired playlist and press .
3. Select **Options** → **Add** → **Tracks**.
4. Highlight **All** to add all the tracks to the selected playlist.

— OR —

Highlight a music track to add, press  to place a check mark next to the track, then press **Add**.

The selected music track is added to the chosen playlist.

## Images

In this menu, you can view images downloaded from the web or received in messages. You can set an image as the current background image.

From Idle mode, press **Menu** and select **Media** → **Images**.

The following options are available:

### *Get New Images*

Use **Get New Images** to access the TELUS website and download new images using the browser.

Highlight **Get New Images** and press .

---

**Note:** When downloading images, charges may apply.

---

## **Wallpapers**

This folder contains preconfigured wallpapers.

Scroll to the wallpaper you want to view and press the **Options** soft key to access the following options:

- **Set as:** sets the image as Wallpaper or as a Picture ID.
- **Take photo:** allows you to take a photo that can be used as a wallpaper.
- **Create folder:** creates a new folder in which to contain your own images.
- **Sort by:** lists the images by Date, Type, Name, or Size.
- **Properties:** displays the image Name, Format, Resolution, Size, Forwarding, Date created, and location.

## **Downloaded images**

This menu allows you to access downloaded images on your phone.

Scroll to the image you want to view and press the **Options** soft key to access the following options:

- **Send via:** creates a message to send the image as a Message or to another Bluetooth device.
- **Set as:** sets the image as Wallpaper or a Picture ID.
- **Delete:** erases the Selected, Multiple, or All images.

- **Move:** moves the Selected or Multiple images to another location.
- **Copy:** copies the Selected or Multiple images to another location.
- **Rename:** renames the image.
- **Take photo:** allows you to take another photo with the camera.
- **Create folder:** allows you to create a new folder in which to store images.
- **Sort by:** lists images by Date, Type, Name, or Size.
- **Bluetooth visibility:** allows you share the Selected file or Multiple files with other Bluetooth devices.
- **Print via Bluetooth:** sends the selected image to a Bluetooth printer.
- **Lock/Unlock:** locks the image to protect it from deletion, or unlocks it to allow deletion.
- **Properties:** displays Basic details (Name, Format, Resolution, Size, Forwarding, Date created, Location) or Media Information about the image.


## Sounds

In this menu, you can view the list of sounds downloaded from the web server or received in picture messages. You can also set a downloaded sound as the current ring tone.

From Idle mode, press **Menu** and select **Media** → **Sounds**.

## Get New Ringtones

Using the **Get new ringtones** option on the sounds list, you can quickly access TELUS website and use the browser to download new ringtones.

Press **Connect** or  to connect and purchase additional ringtones.

## Sounds

Use Sounds to manage sounds on your phone.

Highlight an item in the Sounds menu and press the **Options** soft key. The following options are available:

- **Set as:** allows you to set the sound as Individual ringtone, Alarm tone, or as a Calendar reminder.
- **Create folder:** allows you to create a new folder to contain sounds.
- **Sort by:** allows you to sort sound files by: Date, Type, Name, or Size.
- **Properties:** displays the sound name, format, length, size, date, and location.

## Voice list

**Voice list** contains your recorded audio messages.

Highlight an item and press the **Options** soft key. The following options are available:

- **Send via:** allows you to send this voice file as a Message or to a Bluetooth enabled device.
- **Set as:** allows you to set the voice file as Individual ringtone, Alarm tone, or as a Calendar reminder.
- **Delete:** deletes Selected, Multiple, or All voice files.
- **Move:** moves Selected or Multiple voice files to another folder.
- **Copy:** copies Selected or Multiple voice files to another folder.
- **Rename:** allows you to rename the selected voice file.
- **Create folder:** allows you to create a new folder for voice files.
- **Sort by:** sorts the voice files by Date, Type, Name, or Size.
- **Bluetooth visibility:** makes Selected or Multiple voice files visible to a Bluetooth device.
- **Lock/Unlock:** locks the voice file to protect it from deletion, or unlocks the voice file to allow deletion.
- **Properties:** displays Basic details about this voice file such as: Name, Format, Size, Forwarding, Date created, and Location.

## ***Voice recorder***

Use **Voice Recorder** to record an audio file up to one minute long.

1. From Idle mode, press **Menu** and select **Media** → **Sounds** → **Voice list** → **Voice recorder**.
2. Press **Record** and begin recording your voice message.
3. Press **Stop** when you are finished recording.

---

**Note:** The message automatically saves to the Voice list.

---

4. Press **Options** and select one of the following options:
  - **Send via:** allows you to send the voice recording as a Message or to another Bluetooth enabled device.
  - **Set as:** sets the voice recording as Individual ringtone, Alarm tone, or as a Calendar reminder.
  - **Delete:** deletes the selected voice recording.
  - **Properties:** displays details about the voice recording, such as Name, Format, Size, Forwarding, Date created, and Location.

## Videos


From the **Videos** menu you can record a video, or view the list of videos downloaded from the web server or received in picture messages. You can also view a video saved to your Videos folder or memory card.

1. In Idle mode, press **Menu** and select **Media** → **Videos**. When you access this menu, your phone displays the videos in Line view, which shows them as small images. Use the Navigation keys to scroll through the photos.
2. Highlight a video clip from your Videos folder, then press **Options** to choose from these options:
  - **Send via:** sends the video in a Message or to a Bluetooth enabled device.

- **Delete:** deletes the Selected, Multiple, or All video files.
- **Move:** allows you to move the Selected or Multiple videos to another location.
- **Copy:** allows you to copy the Selected or Multiple videos to another location.
- **Rename:** changes the name of the video.
- **Create folder:** allows you to create a new folder to contain your videos.
- **Sort by:** allows you to sort and view videos by Date, Type, Name, or Size.
- **Bluetooth visibility:** makes Selected or Multiple voice files visible to a Bluetooth device.
- **Lock/Unlock:** locks the voice file to protect it from deletion, or unlocks the voice file to allow deletion.
- **Properties:** shows properties of the video, such as Name, Format, Resolution, Size, Forwarding, Date created, and Location.

## ***Get New Videos***

Using the **Get new Videos** option on the Videos list, you can access TELUS website and use the browser to download new videos.

Press **Connect** or  to connect and download videos.

## **Record video**


Use your phone's Camcorder to take videos of people or events while on the move. You can send these videos in a message or to another Bluetooth device.

For more information about using the Camcorder and its features, see *"Using the Camcorder"* on page 140.

## **Other files**

This folder provides a location where you can store various types of files on your phone, such as spreadsheets, text files and presentations. You can also view files in Microsoft Word, Adobe PDF, or Plain text format; send files to others via Bluetooth; and move or copy files to your memory card.

1. From Idle mode, press **Menu** and select **Media** → **Other files**.
2. Highlight a file, then press **Options** to choose from these options:
  - **Send via**: allows you to send this file in a Message (when possible) or to a Bluetooth enabled device.
  - **Delete**: deletes Selected, Multiple, or All files.
  - **Move**: moves Selected or Multiple files to another folder.
  - **Copy**: copies Selected or Multiple files to another folder.
  - **Rename**: allows you to rename the selected file.
  - **Take photo**: allows you to take a photo with the camera.
  - **Create folder**: allows you to create a new folder for file storage.

- **Sort by:** sorts the files by Date, Type, Name, or Size.
  - **Bluetooth visibility:** makes Selected or Multiple files visible to a Bluetooth device.
  - **Print via Bluetooth:** sends the selected image to a Bluetooth printer.
  - **Lock/Unlock:** locks the voice file to protect it from deletion, or unlocks the voice file to allow deletion.
  - **Properties:** displays Basic details about this file such as: Name, Format, Size, Forwarding, Date created, and Location.
3. To view a Microsoft Word, Adobe PDF, or Plain text file, highlight the file and press **View** .

## Games and Apps

Use **Games and Apps** to download MIDlets (Java applications that run on mobile phones) from various sources using the browser and store them in your phone.

From Idle mode, press **Menu** and select **Media** → **Games and Apps**.

When you access the **Games and Apps** menu, the list of default games displays. When you download new games, they are then added to the list.

### Get New Games

You can download games from the TELUS website using the **Get New Games** option.

1. From Idle mode, press **Menu** and select **Media** → **Games and**

## **Apps → Get New Games.**

2. Follow the onscreen instructions to browse and download games.

---

**Note:** When downloading games, charges may apply. MIDlet game options differ depending on the MIDlet selected.

---

## ***Get New Apps***

You can download apps from the TELUS website using the **Get New Apps** option.

1. From Idle mode, press **Menu** and select **Media → Games and Apps → Get New Apps**.
2. Follow the onscreen instructions to browse and download apps.

---

**Note:** When downloading apps, charges may apply.

---

## ***Memory Status***

With **Memory Status**, you can check the amount of memory being used and memory remaining for Photos, Music, Images, Sounds, Videos, Other files, or Games and Apps.

1. From Idle mode, press **Menu** and select **Media → Memory status**.
2. Press the **Left** or **Right** navigation keys to scroll between the memory status On phone or On memory card.

## Section 8: Changing Your Settings

---


You can customize various phone settings such as sounds, the display, security settings, messaging key, memory, language, greeting message, and time and date.



### Sound profiles

You can view and customize sound settings for the various sound profiles.

#### *Normal*

Normal profile includes audible alerts and tones for incoming calls and messages, key presses, and powering on and off.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Sound profiles**.
2. To customize the Normal profile settings, highlight **Normal** and press the **Edit** soft key. Use the **Left** and **Right** navigation keys to move between setting categories (Incoming call, New messages, Phone sounds). The following settings are available:
  - **Incoming call**: highlight a setting and press  **Edit** to make a selection.
    - **Call alert type**: select an alert type for incoming calls, from Melody, Increasing melody, Vibration then melody, Vibration and melody, or Vibration and increasing melody.
    - **Ringtone**: select a ringtone for incoming calls, from the Music, Sounds, or Voice list folders on your phone, or from the optional memory card.

- **Ringtone volume:** choose a volume level between 1 and 7 for incoming call alerts.
  - **New messages:** highlight a setting and press  **Edit** to make a selection.
    - **Message alert type:** select an alert type for new messages, from Melody, Vibration, Vibration and melody, or Mute.
    - **Message alert tone:** choose an alert tone for new messages, from Message tone 1, Message tone 2, Message tone 3 or Message tone 4.
    - **Message alert repetition:** choose an interval for repeating alerts for new messages, from Once, Every 1 minute, or Every 2 minutes.
    - **Alert tone volume:** choose a volume level between 1 and 7 for new messages alerts.
  - **Phone sounds:** highlight a setting and press  **Edit** to make a selection.
    - **Keypad tone:** select a tone for keypad presses, from Beep, Click or Off.
    - **Power on type:** choose a type of sound for the phone to play when powering on, from Melody, Vibration, Vibration and melody, or Mute.
    - **Power off type:** choose a type of sound for the phone to play when powering off, from Melody, Vibration, Vibration and melody, or Mute.
    - **Phone sounds volume:** choose a volume level between 0 and 7 for phone sounds.
3. After making selections, press the **Back** soft key, then press the **Yes** soft key to confirm your settings.

## Silent

When set to Silent profile, your phone makes no sounds and does not vibrate.

From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Sound profiles** → **Silent**.

---

**Note:** There are no settings to customize for the Silent profile.

---

## Vibration



When set to Vibration profile, your phone vibrates to alert you to incoming calls and messages.


From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Sound profiles** → **Vibration**.

---

**Note:** There are no settings to customize for the Vibration profile.

---

**Tip:** You can quickly activate Vibration profile from Idle mode by pressing and holding the  key until the “**Vibration profile on**” message and the **Vibration profile** icon  display.

To return to the previous sound profile, press and hold the  key until the phone returns to the previous profile and the icon disappears.




---

## Driving

You can customize the Driving profile to include audible alerts and tones for incoming calls and messages, key presses, and powering on and off.

1. From Idle mode, press **Menu** and select **Settings** →


## Personalize → Sound profiles.



- To customize the Driving profile settings, highlight **Driving** and press the **Edit** soft key.
  - **Incoming call:** highlight a setting and press  **Edit** to make a selection.
    - **Call alert type:** select an alert type for incoming calls, from Melody, Increasing melody, Vibration then melody, Vibration and melody, or Vibration and increasing melody.
    - **Ringtone:** select a ringtone for incoming calls, from the Music, Sounds, or Voice list folders on your phone, or from the optional memory card.
    - **Ringtone volume:** choose a volume level between 1 and 7 for incoming call alerts.
  - **New messages:** highlight a setting and press  **Edit** to make a selection.
    - **Message alert type:** select an alert type for new messages, from Melody, Vibration, Vibration and melody, or Mute.
    - **Message alert tone:** choose an alert tone for new messages, from Message tone 1, Message tone 2, Message tone 3 or Message tone 4.
    - **Message alert repetition:** choose an interval for repeating alerts for new messages, from Once, Every 1 minute, or Every 2 minutes.
    - **Alert tone volume:** choose a volume level between 1 and 7 for new messages alerts.
  - **Phone sounds:** highlight a setting and press  **Edit** to make a selection.
    - **Keypad tone:** select a tone for keypad presses, from Beep, Click or Off.

- **Power on type:** choose a type of sound for the phone to play when powering on, from Melody, Vibration, Vibration and melody, or Mute.
  - **Power off type:** choose a type of sound for the phone to play when powering off, from Melody, Vibration, Vibration and melody, or Mute.
  - **Phone sounds** volume: choose a volume level between 0 and 7 for phone sounds.
3. After making selections, press the **Back** soft key, then press the **Yes** soft key to confirm your settings.

## Outdoor

You can customize an Outdoor profile to include audible alerts and tones for incoming calls and messages, key presses, and powering on and off.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Sound profiles**.
2. To customize the Outdoor profile settings, highlight **Outdoor** and press the **Edit** soft key.
  - **Incoming call:** highlight a setting and press  **Edit** to make a selection.
    - **Call alert type:** select an alert type for incoming calls, from Melody, Increasing melody, Vibration then melody, Vibration and melody, or Vibration and increasing melody.
    - **Ringtone:** select a ringtone for incoming calls, from the Music, Sounds, or Voice list folders on your phone, or from the optional memory card.
    - **Ringtone volume:** choose a volume level between 1 and 7 for incoming call alerts.


- **New messages:** highlight a setting and press  **Edit** to make a selection.
    - **Message alert type:** select an alert type for new messages, from Melody, Vibration, Vibration and melody, or Mute.
    - **Message alert tone:** choose an alert tone for new messages, from Message tone 1, Message tone 2, Message tone 3 or Message tone 4.
    - **Message alert repetition:** choose an interval for repeating alerts for new messages, from Once, Every 1 minute, or Every 2 minutes.
    - **Alert tone volume:** choose a volume level between 1 and 7 for new messages alerts.
  - **Phone sounds:** highlight a setting and press  **Edit** to make a selection.
    - **Keypad tone:** select a tone for keypad presses, from Beep, Click or Off.
    - **Power on type:** choose a type of sound for the phone to play when powering on, from Melody, Vibration, Vibration and melody, or Mute.
    - **Power off type:** choose a type of sound for the phone to play when powering off, from Melody, Vibration, Vibration and melody, or Mute.
    - **Phone sounds volume:** choose a volume level between 0 and 7 for phone sounds.
3. After making selections, press the **Back** soft key, then press the **Yes** soft key to confirm your settings.

## Display settings

Use Display settings to change various settings for the display and backlight.

## Wallpaper

Select a background image for display while in Idle mode.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Display settings** → **Wallpaper**.
2. Browse for images from the Photos or Images folders on your phone, or from an optional memory card.
3. To set an image as the Wallpaper, highlight the image and press the **Select** soft key or the  key.
4. Preview the image, then press the **Set** soft key to retain the wallpaper, or press the **Back** soft key to discard the change and choose another image.

## Dialing display

Choose font and background settings for the dialing display.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Display settings** → **Dialing display**.
2. Highlight a setting and press the **Select** soft key to customize it:
  - **Font type:** choose Normal 1 or Normal 2, then press the **Save** soft key.
  - **Font size:** select Large, Medium or Small, then press the **Save** soft key.
  - **Font color:** select Basic (black and white), Monochrome, or Gradation. For Monochrome or Gradation, press the **Down** Navigation key and then scroll through the available colors. Press the **Save** soft key to save your selection.

- **Background color:** choose from the available colors, then press the **Save** soft key.


## **Brightness**

Adjust the display brightness for better viewing in different lighting conditions.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Display settings** → **Brightness**.
2. Choose a brightness level between 1 and 5, then press the **Save** soft key to save your changes.

## **Backlight time**

Select the length of time that the screen backlight stays on at full brightness and dimmed when the phone is idle (no keys pressed).

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Display settings** → **Backlight time**.
2. Highlight a setting and press  **Edit** to select a time:
  - **On:** choose a length of time for the screen backlight to stay on at full brightness, from 5 seconds, 15 seconds, or 30 seconds.
  - **Dim:** choose a length of time for the screen backlight to remain on but dimmed, from Off, 5 seconds, 15 seconds, or 30 seconds.

## **Keypad light**

Lets you set whether the keypad light turns on whenever the keypad is used or only during a specific time period.

1. From Idle mode, press **Menu** and select **Settings** →

**Personalize** → **Display settings** → **Keypad light**.

2. In the **Set time** field, choose **Use at any time** to have the keypad light turn on at any time of day, or **Use at custom time** to create a time window for the keypad light by setting **After time** and **Until time**.

## Phone settings

Use Phone settings to customize your phone's operation to suit your needs.

### *Airplane mode*

Airplane Mode allows you to use many of your phone's features, such as Calendar, Games, Voice Notes, etc., when you are in an airplane or any other area where wireless communication is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or messages, or access online information.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Phone settings** → **Airplane Mode**.
2. Highlight **On** or **Off** and press **Save**.

### *USB Mode*

Select the default method of communication when you connect your phone to a USB port on a PC to transfer files between your PC and phone.

From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Phone settings** → **USB mode**.

These options are available:

- **Samsung PC studio**: uses optional Samsung PC Studio software to communicate with the phone.
- **Ask on connection**: each time you connect the phone to a PC, the phone will prompt you to choose a USB mode.
- **Mass storage**: treats a memory card in your phone as a removable storage drive.

---

**Note:** You are unable to connect to PC Studio when the Mass Storage option is selected.

---

## **Security**

The Security settings allow you to restrict the use of your phone by others and to restrict dialed calls. Lock codes and passwords are used to protect the features of your phone.

From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Phone settings** → **Security**.

### **Lock phone**

When the Lock phone setting is enabled, the phone locks automatically when powered on, and you must enter the phone password to use the phone. After entering the correct password, you can use the phone until you power it off.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Phone settings** → **Security** → **Lock phone**.
2. Choose **Enable** to have the phone prompt you for the code when you power on the phone. Choose **Disable** to have the phone power on with no code required.

3. Press **Save**.

## Change phone password

This setting allows you to change the current phone password to a new one. You must enter the current password to confirm the password change.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Phone settings** → **Security** → **Change phone password**.
2. Enter the current password in the **Current password** field and press the **Confirm** soft key.
3. Enter a new password in the **New password** field and press the **Confirm** soft key.
4. Enter the new password in the **Confirm password** field and press the **Confirm** soft key.

---

**Note:** If you change your password, be sure to record it and keep it in a safe place. If you forget your password, contact your Service Provider for assistance.

---

## Check PIN code

When the Check PIN code feature is enabled, you must enter your PIN each time you turn on the phone. This means that any person who does not know your PIN cannot use your phone without your approval.

---

**Note:** You must enter the PIN code to enable or disable the Check PIN code feature.

---

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Phone settings** → **Security** → **Check PIN code**.

2. Choose **Enable** to have the phone prompt you for the PIN each time you power it on. Choose **Disable** to have the phone connect directly to the network when you power it on.

### Change PIN code

This feature allows you to change your current PIN, provided that the Check PIN code feature is enabled. You must enter the current PIN before you can specify a new one.

Once you enter a new PIN, you are asked to confirm the PIN number by re-entering it.

From Idle mode, press **Menu** and select **Settings** → **Phone settings** → **Security** → **Change PIN code**.

### Set FDN mode

FDN (Fixed Dialing Number) mode, if supported by your SIM card, allows you to restrict dialed calls to a limited set of phone numbers.

From Idle mode, press **Menu** and select **Settings** → **Phone settings** → **Security** → **Set FDN mode**.

The following options are available:

- **Disable**: you can call any number.
- **Enable**: you can only call phone numbers stored in Contacts. You must enter your PIN2 code. You can obtain your PIN2 from TELUS customer service.

### Change PIN2 code

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must first enter the current PIN2 (obtained from TELUS) before you can specify a new one. Once you enter a new PIN2, you are asked to re-enter the new PIN2 as confirmation.

---

**Note:** Not all SIM cards have a PIN2. This menu does not display if your SIM card does not have the PIN2 feature.

---

## ***Data Roaming***

This feature allows you to control the use of data services when your phone is in roaming mode.

---

**Important!** Once data roaming is disabled, avoid applications that may reactivate the data roaming feature and incur charges. Contact your TELUS service center for details.

---


1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Phone settings** → **Data roaming**.
2. Highlight **Enable** to allow data roaming, or **Disable** to stop data roaming, and press **Save**.

## ***Slide down settings***

Choose how your phone behaves when you slide the phone closed.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Phone settings** → **Slide down settings**.
2. These options are available:
  - **Stop operation:** any operation in progress when the phone closes is stopped.
  - **Continue operation:** all operations continue when the phone closes.

## Messaging key


This menu allows you to assign a shortcut launched by pressing the **Messaging key**  in Idle mode. The key can open either the Create message screen or the Inbox. You can modify the setting any time.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Messaging key**.
2. If this is the first time you are programming this key, read the information that displays and press **OK**.
3. Select the shortcut to assign to the Messaging key and press the **Assign** soft key.

## Memory settings


### *Clear phone memory*

From this menu you can clear the memory for Media, Messaging, Contacts, Calendar, Tasks, or Memo. You can also select All to clear everything listed.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Memory settings** → **Clear phone memory**.
2. Highlight one of the applications to clear, or highlight **All** to clear all the memory settings and press . A check mark displays next to each application to clear.
3. Press **OK** to clear the application.
4. Enter your phone password in the **Password** field and press **Confirm**.
5. At the **Clear?** prompt, press **Yes** to confirm your action or **No** to cancel.

## **Memory card settings**

From this menu you can view details about the memory card, format the memory card, rename the memory card, or turn Bluetooth visibility on or off.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Memory settings** → **Memory card settings**.
2. Select one of the following options and press .
  - **Memory card details**: displays information about the memory card such as Name, Maximum size and Available memory.
  - **Format memory card**: allows you to format the memory card.
  - **Rename memory card**: allows you to rename the memory card.
  - **Bluetooth visibility on**: allows you to control the visibility of a memory card to Bluetooth devices.


## **Memory status**

You can check the amount of memory being used and the memory remaining for Shared memory, Messaging, Media, Calendar, Tasks, Memo, and Contacts.

The display shows the total space including the used and free space. You can also view how much space is currently occupied by each message box.

You can also check how many names and numbers are stored on the Phone, on the SIM card, and the FDN list.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Memory status**.

2. Select a category from the menu and press the  key to view the memory status for that category.


## Language


Select the language for screen text and inputs.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Language**.
2. Highlight the **Screen text** field and press **Edit**, then select **Automatic** (based on the Input language), **English** or **Français** (French).
3. Highlight the **Input language** field and press **Edit**, then select **English** or **Français** (French).
4. Press **Save** to confirm your selections.

## Greeting message

Enter a greeting to display briefly when the phone is powered on. For details about entering characters, see “*Entering Text*” on page 37.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Greeting message**.
2. Press  to clear the default text and enter your own message.
3. Press the **Options** soft key for these options:
  - **Save**: saves the currently entered greeting message.
  - **Select language**: select English or Français (French) as the language for displaying your message (the current language setting does not display).

- **Edit style:** configure the Font color, Font size, or Font type for this greeting message.
  - **Cancel:** exits the menu and return to the Personalize options.
4. Press  to save your selections.

## Time and date

This menu allows you to control how your phone determines and displays the current time and date.

1. From Idle mode, press **Menu** and select **Settings** → **Personalize** → **Time and date**.
2. The following options are available:
  - **Time zone updating:** allows you to receive time information from the TELUS network.
    - **Automatic:** the phone automatically updates the time and date according to the current time zone using the network service.
    - **Manual only:** you need to manually set the time and date using the Set time menu.
    - **Prompt first:** the phone asks for a confirmation before the update.
  - **Home zone:** choose from a list of all time zones (not available if Automatic updating is selected).
  - **Time:** allows you to change the hour and minute (not available if Automatic updating is selected).
  - **Date:** allows you to enter the date (not available if Automatic updating is selected).
  - **Time format:** allows you to select whether the time displays in 12 hour or 24 hour format.

## Bluetooth

### *About Bluetooth*

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

You don't need to line up the devices to beam information with Bluetooth. If the devices are within range, you can exchange information between them, even if they are located in different rooms.

### *Turn Bluetooth On/Off*

To turn Bluetooth **On** or **Off**:

From Idle mode, press **Menu** and select **Settings** → **Bluetooth** → **Turn Bluetooth On/Off**.

When you turn Bluetooth on, your phone automatically searches for nearby Bluetooth devices.

### *My devices*

This option allows you to search for new Bluetooth devices.


From Idle mode, press **Menu** and select **Settings** → **Bluetooth** → **My devices**.

The phone searches for available devices.

### *My visibility*



When Bluetooth Visibility is turned on, your phone is wirelessly transmitting its phone name and status. This can be useful if you are attempting to connect to other Bluetooth devices, but can pose a

security risk and invite unauthorized connection. This feature should be used with Bluetooth security options.

1. From Idle mode, press **Menu** and select **Settings** → **Bluetooth** → **My visibility**.
2. Highlight an option (On/Off/Custom) and press the **Select** soft key or .
3. If you chose Custom setting, select the time that you want visibility turned on (3 minutes, 5 minutes or 10 minutes).


### **My phone name**

When your phone's Bluetooth visibility is On, it identifies itself using the name entered into this text field. This name can be altered at any time. This feature should be paired with a Bluetooth security option.

1. From Idle mode, press **Menu** and select **Settings** → **Bluetooth** → **My phone name**.
2. Press  to erase the previous name.
3. Use the phone's keypad to enter a new name. The default input entry method is Abc, where the initial character is uppercase and each consecutive character in that same word is lowercase text.
4. Press the **Save** soft key or  to save the new name.


### **Security mode**

When Bluetooth Visibility is turned on, your phone is wirelessly transmitting its phone name and status. This transmission can pose a security risk and invite unauthorized connection to your phone. It is recommended that you activate your phone's Bluetooth security.

1. From Idle mode, press **Menu** and select **Settings** → **Bluetooth** → **Security mode**.
2. Highlight **On** or **Off** and press the **Select** soft key or .

### **Remote SIM mode**

This mode allows you to control whether a Bluetooth car kit can access the contact information stored on your phone's SIM card.

1. From Idle mode, press **Menu** and select **Settings** → **Bluetooth** → **Remote SIM mode**.
2. Press **On** or **Off** and press the **Select** soft key or .

### **Features**

The Bluetooth specification describes how Bluetooth short-range wireless technology works, and service profiles, or features, describe the services supported by individual devices. Profiles improve the chances that different devices can communicate.

Your phone supports these Bluetooth features:

- **Headset:** used to make incoming and outgoing calls via Bluetooth headsets.
- **Handsfree:** used to make incoming and outgoing calls via Bluetooth handsfree car kits.
- **Bluetooth stereo headset:** used to make calls and listen to music via Bluetooth stereo headset.
- **File transfer:** used to transfer files to and from Bluetooth devices.
- **Object push:** used to exchange personal data such as namecards and Phonebook contacts between Bluetooth devices.
- **Basic printing:** used to print images, text, and personal data such as namecards and appointments via a Bluetooth printer.


- **Serial port:** used to connect to other Bluetooth devices via a virtual serial port.
- **Dial-up:** Allows the phone to be used as a data modem by another device
- **SIM access:** used to provide access to the SIM card through Bluetooth.

## Call settings

Use Call settings to customize your phone's call functions.

### Answer options

Answering options allow you to select how your phone answers incoming calls.

1. From Idle mode, press **Menu** and select **Settings** → **Call settings** → **Answer options**.
2. Highlight an option, then press the  key to save your selection. Options include:
  - **Send key:** answers the call when the Send key is pressed.
  - **Open slide:** answers the call when the phone is opened.
  - **Any key:** answers the call when any key is pressed.

### Auto redial

You can have the phone automatically redial the last number if the call was cut off or did not connect.

1. From Idle mode, press **Menu** and select **Settings** → **Call settings** → **Auto redial**.
2. Highlight a selection and press the **Save** soft key. Options include:
  - **Off:** the phone will not automatically redial the last number.

- **On:** the phone will automatically redial the number.

### **Show my number**

Use the Show my number setting to control how your phone number is displayed when you make a call.

1. From Idle mode, press **Menu** and select **Settings** → **Call settings** → **Show my number**.
2. Highlight an option and press the **Save** soft key. Options include
  - **Set by network:** uses the network's settings to determine whether your phone number is displayed.'
  - **Show number:** your information is displayed to the recipient.
  - **Hide number:** your information is not displayed to the recipient.

### **Call forwarding**

This network service enables routing of incoming calls to a secondary number that you specify.

---

**Example:** You may wish to forward your business calls to a colleague while you are on holiday.


---

To activate call forwarding:

1. From Idle mode, press **Menu** and select **Settings** → **Call settings** → **Call forwarding**.
2. Select an option, then press the **Select** soft key. These options are available:
  - **Always:** all calls are forwarded until this setting is changed.

- **If busy:** calls are forwarded when you are already on another call.
  - **If no reply:** calls are forwarded when you do not answer the phone after a specified time period (set when you activate call forwarding).
  - **If out of reach:** calls are forwarded when you are not in an area covered by TELUS, or when your phone is switched off.
  - **Cancel all:** cancels all call forwarding settings.
3. In the **Forward to** field, enter the number to which calls should be forwarded. If the option was previously set, the Forward to number displays.

---

**Tip:** To enter an international code, press and hold the  key until the + sign displays.

---

4. Press the **Options** soft key, then choose **Activate**.
5. Press **Back** to go back to activate additional call forwarding options.

To cancel call forwarding:


From Idle mode, press **Menu** and select **Settings** → **Call settings** → **Call forwarding** → **Cancel all**.

### ***Call barring (SIM card dependent)***

Call barring allows you to restrict specific types of incoming and dialed calls on the phone. This is useful if you allow someone else to use your phone for a specific purpose.

1. From Idle mode, press **Menu** and select **Settings** → **Call settings**

→ **Call barring.**

2. Select a setting then press the  key or press the **Options** soft key and select **Select**. Typical call barring options include:
  - **All outgoing call**
  - **Outgoing international calls**
  - **International calls except home**
  - **All incoming calls**
  - **Incoming when roaming**

### ***Call waiting***


Call waiting is a network service that informs you when someone is trying to reach you during another call.

To set your call waiting options:

1. From Idle mode, press **Menu** and select **Settings** → **Call settings** → **Call waiting**.
2. Press **Options** and select **Activate** or **Deactivate**.

### ***Call status tones***


This option allows you to activate the phone to alert you to changes in call status.

1. From Idle mode, press **Menu** and select **Settings** → **Call settings** → **Call status tones**.
2. Press  to check/uncheck the following options:
  - **Call connect tone**: an alert is played when the call is connected.

- **Minute minder:** an alert plays at one-minute intervals.
  - **Call end tone:** an alert plays when the call is disconnected.
3. Press **Options** soft key and select **Save** to save the changes.

### **Alerts on call**

Specify whether the phone will use sounds to alert you to incoming messages or calls during a call.

1. From Idle mode, press **Menu** and select **Settings** → **Call settings** → **Alerts on call**.
2. Highlight **Off** or **On** and press the **Save** soft key or .

### **Auto reply**

Create a text message to be sent to the caller when you choose to Reject an incoming call.

1. From Idle mode, press **Menu** and select **Settings** → **Call settings** → **Auto reply**.
2. In the **Activation** field, use the **Left** and **Right** Navigation keys to choose **On** or **Off**.
3. Use the **Down** Navigation key to move to the **Reply to send** field, then enter the text of the reply message.
4. Press the **Options** soft key and choose **Save** to save the message.

### **Call history management**

This menu allows you to manage your call history. You can view time logs for all calls dialed and received, as well as delete call history.

From Idle mode, press **Menu** → **Settings** → **Call settings** → **Call**

history management.

## Call time

This menu lets you view the time log for calls both made and received.

---

**Important!** The actual time invoiced by TELUS may differ from times displayed due to network features and service plan.

---



From Idle mode, press **Menu** → **Settings** → **Call settings** → **Call history management** → **Call time**.

The following time logs are available:

- **Last call time:** shows the length of your last call.
- **Total sent:** shows the total length of all calls you have made since the timer was last reset.
- **Total received:** shows the total length of all calls you have received since the timer was last reset.

## Delete all history

This menu allows you to delete all call history, or you can delete records for missed calls, dialed calls, or answered calls.

1. From Idle mode, press **Menu** and select **Settings** → **Call settings** → **Call history management**.
2. Select **Delete all history** and press the **Select** soft key or .
3. Highlight options, then press  to place a check mark next to your selection(s).
  - **All calls:** deletes all call history.
  - **Missed calls:** deletes all missed call history.

- **Dialed calls:** deletes all dialed call history.
  - **Answered calls:** deletes all answered call history.
4. Press **Delete** to delete the selected records.

## Advanced

Advanced settings allow you to select and manage your networks, update software, and reset all your settings.

### Network


Use the Network setting to select a network when roaming outside of your home area.

---


**Note:** You can select a network other than your home network only if there is a valid roaming agreement between the two.

---

To select a network:

1. From Idle mode, press **Menu** and select **Settings** → **Advanced** → **Network** → **Search now**.
2. Highlight a network and press the **Select** soft key or the  key.

To change your Default setup:

1. From Idle mode, press **Menu** → **Settings** → **Advanced** → **Network** → **Default setup**.
2. Highlight an option and press the **Select** soft key or the  key:
  - **Automatic:** you are connected to the first available network when roaming.


- **Manual:** search for available networks and make a selection.

## Reset settings

Use Reset settings to set phone settings to their default settings. The following options are available:

- **All:** Phone, Display and Sound settings are returned to default values.
- **Phone settings:** only phone settings are returned to default values.
- **Display settings:** only display settings are returned to default values.
- **Sound settings:** only sound settings are returned to default values.

To reset your settings:

1. From Idle mode, press **Menu** → **Settings** → **Reset settings** → **Reset settings**.
2. Highlight option(s), or highlight **All**, and press the  key to mark selections.
3. Press **Reset**.
4. Enter the phone password and press **Confirm** (you are prompted to create a password if one does not exist).
5. At the **Reset settings?** prompt, press **Yes** to reset the settings.

## Master reset

From this menu you can reset all phone and sound settings to the factory default.

1. From Idle mode, press **Menu** → **Settings** → **Reset settings** → **Master reset**.
2. Enter your phone password and press **Confirm**.
3. Press **Yes** to reset your settings or **No** to cancel.

4. Press **Back** to return to the Settings menu.

## Section 9: Tools

---




Tools allow you to set alarms, create tasks, perform simple math calculations, check world time, perform unit conversions, set a timer, and use a stopwatch.






### Alarm

This feature allows you to:

- Set up to 3 alarms to ring at specified times.
- Set **Auto power** option: if the option is set to **On**, alarm rings at the specified time even if the phone is turned off. If the option is set to **Off**, the alarm does not ring.

To set an alarm:

1. From Idle mode, press **Menu** → **Tools** → **Alarm**.
2. Select an alarm and press the **Select** soft key or .
3. Highlight the **Name** field, and press  to backspace, then enter a new name for this alarm (if desired).
4. Highlight the **Alarm activation** field and press the **Right** Navigation key to select **On**.
5. Highlight the **Alarm time** option. Enter the time you want the alarm to sound.
6. Press the **Down** Navigation key to highlight the **Alarm type** option and press . Select one of the following alarm types:
  - **Melody**: the alarm rings using the selected ring melody.
  - **Increasing melody**: the volume of the melody increases.

- **Vibration**: the phone vibrates but does not play a tone.
  - **Vibration then melody**: the phone vibrates 3 times and then starts playing a melody.
  - **Vibration and melody**: the phone vibrates and plays the melody simultaneously.
  - **Vibration and increasing melody**: the phone vibrates and increases the volume of the melody.
7. Highlight the **Alarm tone** field. Press  to display a list of tones from which to choose, then press **Select**.
  8. Highlight the **Alarm volume** field and press the **Left** or **Right** Navigation key to decrease or increase the volume.
  9. Highlight the day check boxes. Press  to display a list of days. Press  to add or remove check marks next to the following selections: Everyday, Once only, Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, or Saturday. Press **OK** to confirm your selections.
  10. If required, highlight the **Snooze** field and press the **Right** Navigation key to select one of the following times: **Off**, **1 min**, **3 min**, **5 min**, **7 min**, or **10 min**.
  11. If required, highlight the **Repeat** field and press the **Right** Navigation key to select one of the following times: **1 time**, **2 times**, **3 times**, **5 times**, or **10 times**.
  12. Press  to confirm your settings.
  13. Press the  key to return to Idle mode.

14. To stop the alarm when it rings, press any key or press the **Snooze** soft key.

## Tasks

This feature allows you to enter tasks on a task list.



1. From Idle mode, press **Menu** → **Tools** → **Tasks**.
2. Press **Options** and select **Create** to create a new task.
3. Enter a title for the task in the **Title** field then press the **Down** Navigation key.
4. Enter a short description in the **Details** field and press the **Down** Navigation key.
5. Continue to enter other information including Start date, Due date, Alarm, Alarm date, Alarm time, Alarm tone and Priority.
6. Press **Save** when you are finished.


### *Editing the Tasks List*

When you select the Tasks list, the current contents display with a status checkbox and a priority marker.

If the item was completed, a check displays in the checkbox.



High priority items display a “1” triangle icon, Normal priority items display a “2” triangle icon, and Low priority items display a “3” triangle icon.

1. From Idle mode, press **Menu** → **Tools** → **Tasks**.
2. Highlight a task from the list and press .
3. Highlight a field to edit and press .

4. Edit the items you wish to change and press  when your edits are complete.

## Memo

This option allows you to create notes that can be recalled at a later time.



1. From Idle mode, press **Menu** → **Tools** → **Memo**.
2. Press **Options**, select **Create** and press  to create a new memo.  
A blank Memo screen displays.
3. Enter your text and press  to save.

## Calculator


With this feature, you can use the phone as a calculator. The calculator provides basic arithmetic functions: addition, subtraction, multiplication, and division.

1. From Idle mode, press **Menu** → **Tools** → **Calculator**.
2. Enter the first number using the numeric keys.
3. Use the Navigation keys to select the calculation method, according to the illustration on the display.
4. Enter the second number using the numeric keys.

---

**Note:** Press the **Left** soft key to insert a decimal point, or press it multiple times to create brackets. Press  to move the cursor to the left or press  to move the cursor to the right within a number.

---



5. Press  to view the result.  
Repeat steps 1 to 4 as many times as required.

## Tip calculator

This feature calculates a tip amount by percentage, and divides the total bill by the number paying.

1. From Idle mode, press **Menu** → **Tools** → **Tip calculator**.
2. In the **Bill** field, enter the check amount.

---


**Note:** Press  or  to enter a decimal point for the exact dollar amount.

---

3. Highlight **Tip(%)** percentage. The default value is 15% but you can change this value.  
The **Tip(\$)** field displays the calculated tip amount.
4. Highlight the **# paying** field to change the number of people contributing to the bill.
5. The **You pay** field displays the total for each individual.

## World clock

This feature allows you to see the current time in another part of world. Your time zone is always shown and you can add additional locations. To add a new location:


1. From Idle mode, press **Menu** → **Tools** → **World clock**.
2. Press **Options** and select **Add**.
3. Press the **Left** or **Right** Navigation key until the desired GMT time zone displays in the field.
4. Press the **Down** Navigation key and press  to place a check mark in the **Daylight saving** checkbox (if applicable).
5. Press **OK** to confirm you settings.

## Converter



The conversion menu provides the following conversion categories:

- **Currency**
- **Length**
- **Weight**
- **Volume**
- **Area**
- **Temperature**

To convert a currency, length, weight, volume, area, or temperature, do the following:

1. From Idle mode, press **Menu** and select **Tools** → **Converter**.
2. Scroll to the conversion category you wish to use and press the **Select** soft key or .
3. Use the **Left** and **Right** navigation keys to select the unit to be converted.
4. Press the **Down** navigation key and enter the amount to be converted.
5. Press the Down navigation key and use the **Left** and **Right** navigation keys to select the final unit. The converted quantity is displayed below.



---

Tip: Press  or  to enter a decimal point.

---



## Timer

You can use the timer to count down a specific length of time. To enable the Timer:

1. From Idle mode, press **Menu** and select **Tools** → **Timer**.
2. Press the **Set** soft key and enter the length of time as **HH:MM:SS** (hours:minutes:seconds) and press **OK**.
3. Press  key to start the timer. Press  to pause the timer.

When the count reaches 00:00:00, an alarm sounds and the timer icon flashes.

## Stopwatch

This feature allows you to use a stopwatch to time events. Press  to start the stopwatch. Press  to record a lap time (you can record and view up to 50 lap times). Press **Stop** to stop recording. Press **Reset** to erase all recorded times.

## Section 10: Browser

---

Your phone includes a WAP (Wireless Application Protocol) browser that allows wireless access and navigation of the Web using your phone.

To access the browser via the menu:

From Idle mode, press **Menu** and select **Browser**.

The following options are available:

### Home


Selecting this menu connects the phone to the network and loads the default homepage. The content of the startup homepage depends on your service provider.

From Idle mode, press **Menu** and select **Browser** → **Home**.



To scroll through the screen, use the **Up** and **Down** keys.

For information on the menu options, see “*Selecting and Using Menu Options*” on page 129.

### Exiting the browser

To exit the browser at any time, press the  key.

### Navigating the browser

1. To scroll through browser items, press the **Up** or **Down** Navigation key.
2. To select browser items, press the  key.
3. To return to the previous page, press the **Back** soft key or the  key.

## ***Entering Text in the browser***

When you are prompted to enter text, the currently active text input mode is indicated in the lower right corner of the screen. To change the text input mode, press the right soft key and select a mode. The following modes are available:

- **Character mode (A)**: allows you to enter upper and lower case text.
- **Predictive mode (T9)**: saves keystrokes by completing words using a built-in dictionary.
- **Numeric mode (123)**: allows you to enter numbers.

For more information on text entry, see see *“Entering Text” on page 37.*

## ***Selecting and Using Menu Options***

Various menus are available when you are using the browser to navigate the Wireless Web.

To access the browser options menu:

1. Press the **Options** soft key.

---

**Note:** The menus may vary, depending on your browser version.

---



The following options are available:

- **Reload**: reloads the current page.
- **Full screen/Normal screen**: controls whether the icon bar and page title are displayed at the top of the display, or the area is used to show more of the accessed Web page.
- **Resize page**: lets you change the page magnification by sliding the size bar to the left or right.
- **Forward**: pages forward one page.

- **Go to:** navigates to the URL address, Homepage, Bookmarks, History, or Saved pages.
- **Save:** allows you to save the Image or Page.
- **Add to bookmarks:** adds the current URL to Bookmarks.
- **Send URL via message:** sends the currently viewed URL to a recipient in a message.
- **Page details:** allows you to view details about the current page: Title, Address, Size, MIME type, and Last updated.
- **Browser settings:** various settings are available, see *“Browser settings” on page 132.*
- **Exit browser:** exits the browser page you are viewing and returns to the Home page.

## Enter URL

This menu allows you to manually enter the URL address of a web site and access the site.

1. Enter the Web address into the URL box.
2. To also save a bookmark for the address, highlight **Add bookmark** and press **Mark** . Press the **Down** Navigation key and enter a name for the site in the Title box.
3. Press **Go** .

For further details about entering characters, see *“Entering Text” on page 37.*

## Bookmarks



This menu stores up to 15 URL addresses, simplifying future access. To store a URL address:

1. From Idle mode, press **Menu** and select **Browser** → **Bookmarks**.
2. Press **Options** and select **Add bookmark**.
3. Enter a name for the bookmark in the **Title** text box and press the **Down** key.

---

**Note:** For further details about how to enter characters, see “*Entering Text*” on page 37.

---

4. Enter the address in the **URL** text box and press **Save** .
5. Highlight an item after saving a bookmark, then press the **Options** soft key to access the following:
  - **Edit bookmark:** allows you to edit the bookmark title or URL.
  - **Delete:** allows you to delete the Selected address or Multiple addresses.
  - **Add bookmark:** allows you to enter a new bookmark URL.
  - **Send URL via message:** allows you to send the selected bookmark in a text message.
  - **Set as homepage:** allows you to set the selected bookmark as a homepage.
6. Select a URL and press **Go** . Your browser displays the site.

## **Saved pages**

This option displays a list of the pages that were saved while navigating the browser.

## History

This option provides you with a list of the most recently visited web sites. You can use these entries to return to previously visited, but not bookmarked, web pages.

## Browser settings

Various settings are available when you are using the browser to navigate the wireless web.

### *Clear cache*

You can clear the information stored in the cache, which is the phone's temporary memory and stores the most recently accessed Web pages.

Press the **Yes** soft key to confirm the deletion, **No** soft key to cancel the deletion.

### *Cookies*


Use this option to select cookie mode or to delete cookies.

### **Cookie Mode**

Cookie mode allows you to Accept all cookies, Reject all cookies, or Prompt you when a site wants to deposit a cookie.

### **Delete Cookies**

Cookies identify who you are when you visit favorite web sites; however, they are also used to track your web surfing habits. Deleting cookies increases security.

1. Highlight **Delete cookies** and press the **Select** soft key or the  key.
2. At the **Delete cookies?** prompt press **Yes**.

## ***Preferences***

The Preferences option allows you to set browser preferences such as Run javascript, Display images, Play sound, and View mode.

## ***Browser profiles***

Lets you choose a browser profile TELUS Web, TELUS MMS or TELUS VOD.

## ***About Browser***

About Browser displays information about the browser such as the type and version.

## Section 11: Photos

---

This section explains how to use the camera on your phone. You can take photographs using the built-in camera.

### Using the Camera

Using the camera module in your phone, you can take photos of people or events while on the move. Additionally, you can send these photos to other people in a picture message or set a wallpaper or picture ID image.

#### *Take and Send Photos*

Your camera produces photos in JPEG format.

1. In Idle mode, press **Menu** and select **Photos** → **Camera**.

---

**Tip:** You can press the **Camera** key on the right side of the phone to quickly access the camera module.


---

2. Rotate the phone counter-clockwise to landscape view.
3. Press **Menu** to configure the camera. For more information, see *“Configuring the Camera” on page 136*.

---

**Tip:** You can use shortcuts to quickly change some camera settings. For more information, see *“Camera Shortcuts” on page 135*.


---

4. Aim the lens at the subject and frame the image on the phone’s screen.
5. Press the **Camera** key or  to take the photo and save it to the default location.

---

**Note:** To change the default destination for your pictures, press the **Menu** soft key and select **Settings** → **Setup** → **Default storage**. You can then change your default destination to **Phone** or **Memory card**.

---

6. viewing the photo, press the **Options** soft key for photo options. For more information, see “*Photo Options*” on page 138.
7. Press  to return to Idle mode.

### **Camera Shortcuts**

**Shortcut keys** allow you to change some settings using the keyboard, Navigation keys, and Volume key while in capture mode.



**OK Key:** Press to take a photo.



**Up Volume key:** Press to zoom out.

**Down Volume key:** Press to zoom in.

Phone held in landscape mode:



**Up Navigation key:** Press to zoom out

**Down Navigation key:** Press to zoom in.

**Left Navigation key:** Press to increase the image brightness.

**Right Navigation key:** Press to decrease the image brightness.



Press to toggle between camera and video mode.



Press to toggle between Shooting Modes. For more information about Shooting modes, see *"Configuring the Camera" on page 136.*



Press to activate the timer.




Press to toggle between Viewfinder modes. For more information about Viewfinder modes, see *"Configuring the Camera" on page 136.*

## **Configuring the Camera**

Before taking a photo, press **Menu** to access the following:

- **Camera/Camcorder:** allows you to switch between the camera and camcorder.

- **Shooting mode:**
  - **Single:** takes a single photo and allows you view it before returning to the shooting mode.
  - **Continuous:** takes a succession of photos.
  - **Panorama:** creates a panoramic photo by taking an initial photo and then adding additional images to it. The guide box shows you the area where the subsequent part of the panoramic picture should fall.
  - **Smile shot:** The camera focuses on the face of your subject. When the camera detects the person's smile, it takes the picture.
  - **Mosaic:** takes multiple photos and then groups them together into a single final photo.
- **Night mode:** Increases sensitivity to produce better pictures in low light conditions.
- **Size:** choose the image size, from 1.3M (1280x960), 0.3M (640x480), or 320x240.
- **White balance:** select a colour balance setting to match specific lighting conditions. Choose from Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
- **Exposure meter:** choose how the camera measures the light intensity on the subject: Matrix, Center-weighted or Spot.
- **Effects:** apply special effects to the photo (None, Black and white, Sepia, Negative, or Watercolor).
- **Timer:** set a time delay between the time you press the Camera key or  key, and when the camera captures the photo. Select Off, 2 seconds, 5 seconds, or 10 seconds.

- **Viewfinder mode:** select a viewfinder screen, from Full screen view and indicator, Full screen view, or Full screen view and guidelines.
- **Settings:**
  - **Photo:** choose the Quality of new photos (Economy, Fine or Superfine).
  - **Setup:** configure the **Review screen**, **Shutter sound** or **Default storage**, or view camera **Shortcuts**.

## **Photo Options**

1. While in capture mode, to view photos you've already taken press the **Photos** soft key. Photos you've taken display in full screen mode. Use the Navigation keys to scroll through the photos.
2. Press the **Options** soft key to use the following options:
  - **Take another:** returns to Capture mode so you can take another photo.
  - **Send via:** allows you to send the selected photo in a Message or to a Bluetooth enabled device.
  - **Print via Bluetooth:** allows you to send the selected photo to a Bluetooth enabled printer.
  - **Delete:** allows you to deleted the selected image.
  - **Set as:** allows you to set the photo as a Picture ID or Wallpaper.
  - **Edit:** allows you to edit the selected image (see below).
  - **Rotate:** allows you to rotate the photo by 90 degree increments in a clockwise direction.

- **Slide show:** allows you to see all of your photos in a slide show presentation.
- **Properties:** shows the properties of the photo, such as the Name, Format, Resolution, Size, Forwarding, Date created, and Location.

### ***Deleting a Photo***

1. From the **Photos** menu, highlight the photo you want to delete.
2. Press the **Options** soft key and select **Delete** → **Selected**.
3. Press the **Yes** soft key to confirm the deletion.
4. Press the **End** key to return to Idle mode.

### ***Editing a Photo***

1. From the **Photos** menu, scroll to the photo you want to edit.
2. Press the **Options** soft key and select **Edit**. Press the **Options** soft key to access the following options:
  - **Save as:** returns to Capture mode so you can take another photo.
  - **Effects:** lets you apply a **Filter** (Antique, Black and white, Blur, Color boost, Fog, Lighting, Milky, Moonlight, Negative, Posterise, Sepia, Sharpen, Solarise, Stamp), **Style** (Cartoon, Crayon pastel, Despeckle, Emboss, Frosted glass, Glow, Magic pen, Mirror, Noise, Oil paint, Paint, Sketch, Spotlight), **Warp** (Warp vertically, Bloat bottom (small), Warp randomly, Balloon, Small balloons, Bloat center, Warp at the bottom, Bloat bottom (large), Warp in the center, Warp with speed), or **Partial blur**.

- **Adjust:** allows you to change the Brightness, Contrast and Color.
- **Transform:** lets you Resize, Rotate or Flip the image.
- **Crop:** Lets you crop the image.
- **Insert:** lets you add Frames, Clip Art, Emoticon, or Text to the image.
- **Set as:** allows you to set the photo as a Picture ID or Wallpaper.
- **Send via:** allows you to send the selected photo in a Message or to a Bluetooth enabled device.
- **Print via Bluetooth:** allows you to send the selected photo to a Bluetooth enabled printer.

## Using the Camcorder


Use the camcorder module in your phone to record videos of people or events while on the move. You can send videos to other people in a message or via Bluetooth.


### *Record and Send Videos*

---

**Tip:** For best results when shooting video in direct sunlight or in bright conditions, provide your subject with sufficient light by putting the light source behind you.

---




1. From Idle mode, either
2. Press **Menu** and select **Photos** → **Camera**, rotate the phone counter-clockwise to landscape view, then press  to change to Camcorder mode.

- Press **Menu** and select **Media** → **Videos** → **Record video**.
  - Press the Camera key then press  to change to Camcorder mode.
3. Before recording the video, press **Menu** to access camcorder options (see “*Video Options*” on page 143.)

---

**Tip:** You can use shortcuts to quickly change some camcorder settings. For more information, see “*Camcorder Shortcuts*” on page 141.

---

4. Adjust the image by aiming the lens at the subject.
5. Press the  key or **Camera** key to begin shooting video.
6. Press the **Stop** soft key or **Camera** key to stop the recording and save the video. Press  to pause or resume. Press  to return to Idle mode.

### **Camcorder Shortcuts**

**Shortcut keys** let you change settings using your keyboard, Navigation keys, and Volume key while in capture mode.



**OK Key:** Press to record a video.



**Up Volume key:** Press to zoom out.

**Down Volume key:** Press to zoom in.



**Up Navigation key:** Press to zoom out

**Down Navigation key:** Press to zoom in.

**Left Navigation key:** Press to increase the image brightness.

**Right Navigation key:** Press to decrease the image brightness.



Press to toggle between camera and video mode.



Press to toggle between Shooting Modes. For more information about Shooting modes, see *“Configuring the Camera” on page 136.*



Press to activate the timer.




Press to toggle between Viewfinder modes. For more information about Viewfinder modes, see *“Configuring the Camera” on page 136.*

## **Configuring the Camcorder**

Before taking a photo, press the **Menu** soft key to access the camcorder options:

- **Camera/Camcorder:** take a picture or record a video.

- **Mode:** lets you limit the size of video files. Choose Normal or Limit for MMS.
- **Size:** Displays the video resolution (176 x 144).
- **White balance:** select a colour balance setting to match specific lighting conditions. Choose from Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
- **Exposure meter:** choose how the camera measures the light intensity: Matrix, Center-weighted or Spot.
- **Effects:** apply special effects to the photo. Options include: None, Black and White, Sepia, Negative, or Watercolor.
- **Timer:** set a time delay between the time you press the  key and the video starts to record. Select the length of delay from Off, 2 seconds, 5 seconds, or 10 seconds.
- **Viewfinder mode:** select Full screen view and indicator, Full screen view, or Full screen view and guidelines.
- **Settings:**
  - **Video:** set the Quality of the video (Economy, Normal, or Fine) and turn Audio recording On or Off.
  - **Setup:** configure the Review screen and Default storage, or view camera Shortcuts.

## **Video Options**

1. While in capture mode, press the **Videos** soft key. Use the **Up** and **Down** Navigation keys to scroll through the videos.
2. Press the **Options** soft key for these options:

- **Record another:** returns to capture mode to record another video.
- **Play:** plays back the current video.
- **Send via:** sends the selected video in a Message or to a Bluetooth enabled device.
- **Delete:** delete the selected video.
- **Slide Show:** displays all your videos in a slide show presentation.
- **Properties:** displays information about the video, such as Name, Format, Resolution, Size, Forwarding, Date created, and Location.

## Section 12: Calendar

---

With the Calendar feature, you can:

- Consult the calendar by month, week, or day
- Set schedules and note special events
- Set alarms to act as a reminders

To navigate to the Calendar:

From Idle mode, press **Menu** and select **Calendar**. The calendar displays in Month, Week or Day view, as selected in the options list.

### *Month view*

In Month view, the calendar displays the selected month with today's date highlighted. Scheduled events are indicated by coloured markers at the corners of the date: blue for Appointment, green for Anniversary, red for Important, yellow for Private. Holidays are indicated by changing the date colour to red.

In Month view, press the **Options** soft key for these options:

- **View**: displays the Day view for the selected date view.
- **View by**: lets you select the Day view or Week view for the selected day.
- **Create**: allows you to create an Appointment, Anniversary, Holiday, Important, or Private event.
- **Go to**: takes you to Today's date or an entered date.
- **Event list**: displays a list of specific types of events: Appointments, Anniversaries, Holidays, Important, or Private.
- **Delete**: allows you to delete all events for a selected date, for a specified period, for this month, or before a date. You can also delete all events.

- **Settings:** allows you to configure calendar viewing settings Starting day (Sunday or Monday) and View by (Month, Week or Day).
- **Missed alarm events:** displays a list of missed alarm events.
- **Memory status:** displays the number of calendar events you presently have and how many events you can create for each category. For example: 10/50 means you have created 10 of 50 possible events for this category.

## **Week view**

When you select this option, the calendar displays the selected week with today's date highlighted. Scheduled events are indicated by coloured markers at the corners of the date: blue for Appointment, green for Anniversary, red for Important, yellow for Private. Holidays are indicated by changing the date colour to red.


In Week view, press the **Options** soft key for these options:

- **View by:** takes you to the Day view or Month view for the selected day.
- **Create:** allows you to create an Appointment, Anniversary, Holiday, Important, or Private event.
- **Go to:** takes you to Today's date or an entered date.
- **Event list:** displays a list of specific types of events: Appointments, Anniversaries, Holidays, Important, or Private.
- **Delete:** allows you to delete all events for a selected date, for a specified period, for this week, or before a date. You can also delete all events.
- **Settings:** allows you to configure calendar viewing settings Starting day (Sunday or Monday) and View by (Month, Week or Day).
- **Missed alarm events:** displays a list of missed alarm events.
- **Memory status:** displays the number of calendar events you presently have and how many events you can create for each category. For example: 10/50 means you have created 10 of 50 possible events for this category.

## Day view


When you select this option, the calendar displays the Day view for the selected day, which includes a list of events occurring on the day.

In Day view, press the **Options** soft key for these options:

- **View**: displays the details of an event highlighted on the Day view.
  - **View by**: takes you to the Week view or Month view that includes the selected day.
  - **Create**: allows you to create an Appointment, Anniversary, Holiday, Important, or Private event.
  - **Send via**: allows you to send this event information as an attachment via Message or to a Bluetooth enabled device.
  - **Event list**: displays a list of specific types of events: Appointments, Anniversaries, Holidays, Important, or Private.
  - **Delete**: allows you to delete the Selected event or All events.
  - **Save in Other files**: allows you to save this event information to Other files.
  - **Print via Bluetooth**: allows you to send this event information to a Bluetooth enabled device.
  - **Settings**: allows you to configure calendar viewing settings Starting day (Sunday or Monday) and View by (Month, Week or Day).
  - **Missed alarm events**: displays a list of missed alarm events.
  - **Memory status**: displays the number of calendar events you presently have and how many events you can create for each category. For example: 10/50 means you used ten of fifty possible events for this category.
- Press **View**  to view the information about the selected event.


## ***Event list***

This option allows you to set and view specific types of calendar events.


1. From Idle mode, press **Menu** and select **Calendar**.
2. Press **Options** and select **Event list** → type of event (**Appointments, Anniversaries, Holidays, Important** or **Private**).
3. Press **Options** and select **Create**.
4. Enter the occasion in the **Title** text box then press the **Down** Navigation key.
5. Continue to enter other information such as Details, Start date, Start time, End date, End time, Location, Alarm, Before, Alarm tone, Repeat and Until.
6. Press **Save**  to save the Appointment event to the Calendar.

## ***Missed alarm events***

You can display all the events where an alarm sounded, but was not turned off.

1. From Idle mode, press **Menu** and select **Calendar**.
2. Press **Options** and select **Missed alarm events**.
3. To view event information, highlight an event and press the  key.

The missed alarm event information displays.

4. To acknowledge and remove the event, press the **Confirm** soft key or the  key. The event is removed from the **Missed alarm events** menu.

### ***Memory status***

This menu item shows the number of calendar events that are stored on the handset as well as the total number of available events.

Example: 2/100 means that currently there are two events scheduled out of a possible 100.

1. From Idle mode, press **Menu** and select **Calendar**.
2. Press **Options** and select **Memory status**.

## Section 13: Health and Safety Information

---

### Safety Warnings

#### ***Keep phone from children and pets***

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed. Children could also damage the phone, dial 911 by mistake or make calls that increase your phone bill.

#### ***Protect your hearing***

Excessive exposure to sound at high volume can cause hearing damage. Always turn the volume down before plugging in the earphones and use only the minimum volume setting necessary to hear your conversation or music.

#### ***Install mobile devices and equipment with caution***

Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

#### ***Handle and dispose of batteries and chargers with care***

Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.

Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.

Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.

Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

### ***Avoid interference with pacemakers***

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

### ***Turn off the phone in potentially explosive environments***

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

## ***Warning regarding display***

The display on your handset is made of glass or acrylic and could break if your handset is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

## **Safety Precautions**

### ***Drive safely at all times***

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

### ***Follow all safety warnings and regulations***

Comply with any regulations that restrict the use of a mobile phone in a certain area.

### ***Use only Samsung-approved accessories***

Using incompatible accessories may damage your phone or cause injury. The only stereo headset approved for use with this phone is Samsung GH59-06407A stereo headset.

### ***Turn off the phone near medical equipment***

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

## ***Turn off the phone or disable the wireless functions when in an aircraft***

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

## ***Avoid interference with other electronic devices***

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

## ***Protect batteries and chargers from damage***

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

## ***Handle your phone carefully and sensibly***

- Do not disassemble your phone due to a risk of electric shock.
- Do not allow your phone to get wet—liquids can cause serious damage and will change the colour of the label that indicates water damage inside the phone. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.

- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Your phone may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

### ***Reduce the risk of repetitive motion injuries***

While using your phone, hold it with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

### **Warranty Disclaimer: Proper use of a touch screen handset**

If your handset has a touchscreen display, please note that a touchscreen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touchscreen may damage the tempered glass surface and void the warranty. For more information, please refer to “Warranty Information” on page 161.

## **UL Certified Travel Adapter**

The Travel Adapter for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

**FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.**

**IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.**

**DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.**

**FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.**

## **Important usage information**

### ***Signal Strength***

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

### ***Understanding How Your Phone Operates***

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts.

### ***Allow only qualified personnel to service your phone***

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

### ***Ensure maximum battery and charger life***

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

### ***Handle SIM cards and memory cards with care***

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

### ***Ensure access to emergency services***

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

### ***Correct disposal of this product***

The product and its electronic accessories (e.g., charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

### ***Correct disposal of batteries in this product***

The batteries in this product should not be disposed of with other household waste at the end of their working life.

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above reference levels. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

This phone is compliant with RoHS.

## **Radio frequency safety**

The design of your phone complies with updated NCRP standards described below. In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

## ***Acknowledging special precautions and Industry Canada notice***

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient / relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult your dealer or an experienced radio/TV technician for help.

## ***Specific Absorption Rates (SAR)***

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value

in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

Maximum measured SAR values for the T356 are:

- GSM 850: 1.00 W/kg
- PCS1900: 0.27 W/kg
- WCDMA850: 0.64 W/kg
- WCDMA1900: 0.54 W/kg

## Section 14: Warranty Information

---

### Standard Limited Warranty

**What is Covered and For How Long?** SAMSUNG ELECTRONICS CANADA INC. (SAMSUNG) warrants to the original purchaser (“Purchaser”) that SAMSUNG’s Phones and accessories (“Products”) are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

**What is Not Covered?** This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, neglect, unusual physical, electrical or electromechanical stress, or defects in appearance, cosmetic, decorative or structural items, including framing, and any non-operative parts unless caused by SAMSUNG; (b) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (c) equipment that has the serial number or the enhancement data

code removed, defaced, damaged, altered or made illegible; (d) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (e) malfunctions resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (f) defects or damage from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (g) defects or damage from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake, or from exposure to weather conditions, or battery leakage, theft, blown fuse, or improper use of any electrical source; (h) defects or damage caused by cellular signal reception or transmission, or viruses or other software problems introduced into the Product; (j) any other acts which are not the fault of SAMSUNG; or (i) Product used or purchased outside the United States or Canada.

This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

**What are SAMSUNG's Obligations?** During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or

comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-800-SAMSUNG. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

**What Are The Limits On Samsung's Warranty/liability?** EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;

- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL

DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER

OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Electronics Canada, Inc.

©2010 Samsung Electronics Canada Inc. Samsung is a registered trademark of Samsung Electronics Co. Ltd. and its related entities.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice.

# Index

---

## A

**ABC text input mode** 39

## B

### **Backlight**

description 21

settings 99

### **Battery**

charging 8

installing 5

low indicator 10

removing 2

### **Bluetooth**

About 109

features 111

Searching for new devices  
109

Turning Bluetooth On and  
Off 109

### **Brightness**

on the phone display 22

### **Browser** 128

Bookmarks 130

Clear cache 132

cookies 132

Enter URL 130

Entering text 129

History 132

Home 128

Saved pages 131

Settings 132

## C

### **Calculator** 124

#### **Call**

how to 23

how to end a call 23

#### **Call Functions** 23

adjusting the call volume 25

answering a call 25

call history 26

correcting a phone number  
23

ending a call 23

making a call 23

making a call from contacts  
24

redialing the last number 24

Vibration profile 28

#### **Call History**

all calls 26

Answered calls 28

Dialed calls 28

Missed calls 27  
**Call Waiting** 34  
**Camera** 134  
    Shortcut keys 135, 141  
    taking photos 134  
**Charging the battery** 8  
**Contacts** 43  
    Finding a contact entry 45  
    making a call from 24  
    Searching for a number 33

## D

**Dialing display** 98  
**Display**  
    backlight 21  
    brightness 22  
    icons 19  
**DTMF** 32

## E

**Entering Text** 37  
    Changing the text entry  
        mode 39  
    Using ABC mode 41  
    Using Number Mode 42  
    Using Symbol Mode 42  
    Using T9 mode 40

## F

**Functions and Options** 29

## G

**Getting Started** 1  
    Activating Your Phone 1

**Groups**  
    Adding 47  
    Editing 48

## H

**Health and Safety Information**  
150

## I

**Icons**  
    display 19  
**Icons, description** 19  
**International call**  
    how to 23

## K

**Keypad light**  
    settings 99

## L

**Low battery indicator** 10

## M

**Making a call**  
    from contacts 24  
**Message settings**  
    Picture message 70

Text message 70  
**Messages** 53  
**Messaging**  
Types of messages 53  
**Missed Call**  
Viewing 27  
**Multi-Party Call** 34  
Dropping one participant 36  
Private conversation 35  
Setting up 34  
**Music Player**  
Shortcut keys 80  
**Mute** 31

## O

**On/off switch**  
phone 10  
**Options**  
During a call 30  
Making a new call while in a  
call 31  
Putting a call on hold 31

## P

**Phone**  
back view 16  
features 12  
front view 13  
icons 19  
side views 17

switching on/off 10  
**Phone display** 18  
**Phone keys** 13  
**Phone number**  
correcting 23  
**Phone Settings** 100  
**Photos**  
Accessing pictures 75  
Deleting pictures 76, 139  
**Picture Message** 64  
**Picture Messages** 57

## R

**Redialing the last number** 24  
**Ringtones**  
get new 85

## S

**Setting up voice mail** 11  
**Settings** 92  
Bluetooth 109  
Display 97  
Phone 100  
Sound 92  
Time and date 108  
**SIM card**  
installing 1  
**Soft keys** 29  
**Sound Settings**  
Vibration mode 94

**Speakerphone** 32

**Speed Dial**

Setting up entries 49

**Standard Limited Warranty** 161

**Stopwatch** 127

**Storing a Number**

phone's memory 43

**Switching on/off**

phone 10

## T

**Take and Send** 134

**Task List** 123

**Text input mode**

ABC 39

changing 39

Number 39

Symbol 39

T9 (English) 39

**Text Messages** 54

**Timer** 127

**Tools**

Calculator 124

Converter 126

Stopwatch 127

Timer 127

Tip calculator 125

World time 125

**Travel adapter** 8

## U

**Understanding Your Phone** 12

Back view 16

Features 12

front view 13

Side views 17

## V

**Vibration mode** 94

**Video**

Record and send 140

**Videos**

get new 88

**Voice mail**

accessing 11

setup 11

## W

**Warranty Information** 161