

GT-S5250

quick start guide



For more information, refer to the user manual at www.samsungmobile.com

SAMSUNG

Using this manual

Thank you for purchasing this Samsung mobile device. This device will provide you with high quality mobile communication and entertainment based on Samsung's exceptional technology and high standards.

This user manual has been specially designed to guide you through the functions and features of your device.

Read me first

- Please read all safety precautions and this manual carefully before using your device to ensure safe and proper use.
- The descriptions in this manual are based on the default settings of your device.
- Images and screenshots used in this user manual may differ in appearance from the actual product.

- Content in this user manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice. Refer to www.samsungmobile.com for the latest version of the user manual.
- Available features and additional services may vary by device, software, or service provider.
- Formatting and delivery of this user manual is based on Bada operating systems and may vary depending on the user's operating system.
- Applications and their functions may vary by country, region, or hardware specifications. Samsung is not liable for performance issues caused by third-party applications.
- Samsung is not liable for performance issues or incompatibilities caused by user editing of registry settings.
- You may upgrade your mobile device's software by accessing www.samsungmobile.com.

- Sound sources, wallpapers, and images provided in this device are licenced for limited use between Samsung and their respective owners. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws. Samsung is not liable for such copyright infringement by the user.
- Please keep this manual for future reference.

Instructional icons

Before you start, familiarise yourself with the icons you will see in this manual:



Warning—situations that could cause injury to yourself or others



Caution—situations that could cause damage to your device or other equipment



Note—notes, usage tips, or additional information



Refer to—pages with related information; for example: ► p.12 (represents “see page 12”)



Followed by—the order of options or menus you must select to perform a step; for example: In Menu mode, select **Messages** → **Compose** (represents **Messages**, followed by **Compose**)



Square brackets—device keys; for example: [↵] (represents the End key)

Copyright

Copyright © 2010 Samsung Electronics

This user manual is protected under international copyright laws.

No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics.

Trademarks

- SAMSUNG, and the SAMSUNG logo are registered trademarks of Samsung Electronics.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.
- Java™ is a trademark of Sun Microsystems, Inc.

- Windows Media Player® is a registered trademark of Microsoft Corporation.
- Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
-  and  are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under licence from SRS Labs, Inc.
- All other trademarks and copyrights are the property of their respective owners.

CE0168!

Contents

Assembling 7

Unpack 7

Install the SIM card and battery 7

Charge the battery 9

Insert a memory card (optional) 11

Attach a hand strap (optional) 13

Getting started 14

Turn your device on and off 14

Get to know your device 15

Use the touch screen 18

Lock or unlock the touch screen and keys .. 20

Access menus 20

Launch and manage applications 22

Use widgets 22

Customise your device 23

Enter text 27

Calling 31

Creating and finding contacts 32

Messaging 33

Capturing photos and videos	35	Using Bluetooth	47
Viewing photos and videos	37	Using Wi-Fi	49
Listening to music	39	Safety precautions	50
Listening to the FM radio	41		
Connecting to the internet	42		
Downloading applications	44		
Connecting to a PC	45		

Assembling

Learn to assemble your device before use, such as how to insert the battery or the SIM card into the device and charge the battery.

Unpack

Check your product box for the following items:

- Mobile device
- Battery
- Travel adapter (charger)
- Quick start guide



Use only Samsung-approved software. Pirated or illegal software may cause damage or malfunctions that are not covered by your manufacturer's warranty.



 
- The items supplied with your device may vary depending on the software and accessories available in your region or offered by your service provider.
- You can obtain additional accessories from your local Samsung dealer.
- The supplied accessories perform best for your device.
- Accessories other than the supplied ones may not be compatible with your device.

Install the SIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services.


To install the SIM card and battery,

- 1 If the device is on, press and hold [⏻] and select **Yes** to turn it off.
- 2 Remove the back cover.

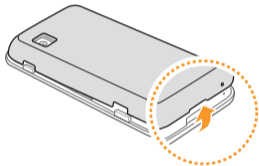


- ⚠ Be careful not to damage your fingernails when you remove the back cover.

 - 3 Insert the SIM card.

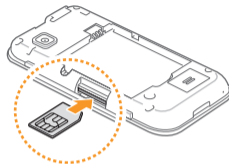


- ✎ Place the SIM card into the device with the gold-coloured contacts facing up.
- If you do not insert a SIM card, you can only use your device's non-network services and some menus.
- Do not insert a memory card into the SIM card slot.

 4 Insert the battery.

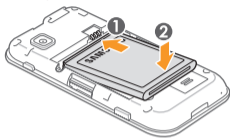

5 Replace the back cover.

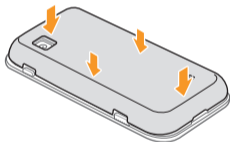 

Charge the battery


Before using the device for the first time, you must charge the battery.

You can charge the device with the provided travel adapter or by connecting the device to a PC with a PC data cable.



 
Use only Samsung-approved chargers and cables. Unauthorised chargers or cables can cause batteries to explode or damage your device.



When your battery is low, the device will emit a warning tone and display a low battery message. The battery icon  will also be empty and blinking. If the battery level becomes too low, the device will automatically power off. Recharge your battery to continue using your device.

Charge with the travel adapter

- 1 Open the cover to the multifunction jack on the top of the device.
- 2 Plug the small end of the travel adapter into the multifunction jack.

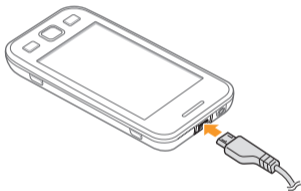

! Improperly connecting the travel adapter can cause serious damage to the device. Any damage caused by misuse is not covered by the warranty.

- 3 Plug the large end of the travel adapter into a power outlet.




- You can use the device while it is charging, but it may take longer to fully charge the battery.
 - While charging, the device may heat up. This is normal and should not affect your device's lifespan or performance.
 - If your device is not charging properly, bring your device and the charger to a Samsung Service Centre.
- 4 When the battery is fully charged (the battery icon is no longer moving), unplug the travel adapter from the device and then from the power outlet.



Do not remove the battery before removing the travel adapter. Doing this may cause damage to the device.



› Charge with the PC data cable

Before charging, ensure that your PC is turned on.

 
- 1 Open the cover to the multifunction jack on the top of the device.
 - 2 Plug one end (micro USB) of the PC data cable into the multifunction jack.
 - 3 Plug the other end of the PC data cable into a USB port on a PC.
-  Depending on the type of PC data cable you are using, it may take some time before charging begins.
- 4 When the battery is fully charged (the battery icon is no longer moving), unplug the PC data cable from the device and then from the PC.

Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your device accepts microSD™ or microSDHC™ memory cards with maximum capacities of 16 GB (depending on memory card manufacturer and type).


-  Samsung uses approved industry standards for memory cards, but some brands may not be fully compatible with your device. Using an incompatible memory card may damage your device or the memory card and can corrupt data stored on the card.
-  • Your device supports only the FAT file structure for memory cards. If you insert a card formatted with a different file structure, your device will ask you to reformat the memory card.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.

- 1 Remove the back cover.
- 2 Insert a memory card with the gold-coloured contacts facing up.

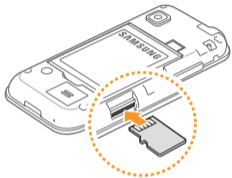

- 3 Push the memory card in the memory card slot until it locks in place.
- 4 Replace the back cover.

➤ Remove the memory card

- 1 Ensure that the device is not currently using the memory card.
 - 2 Remove the back cover.
 - 3 Push the memory card gently until it disengages from the device.
 - 4 Pull the memory card out of the memory card slot.
 - 5 Replace the back cover.
-  Do not remove a memory card while the device is transferring or accessing information, as this could result in loss of data or damage to the memory card or device.

› Format the memory card

Formatting your memory card on a PC may cause incompatibilities with your device. Format the memory card only on the device.

In Menu mode, select **Settings** → **Memory** → **Memory card details** → **Format** → **Yes**.



Before formatting the memory card, remember to make backup copies of all important data stored on your device. The manufacturer's warranty does not cover loss of data resulting from user actions.

Attach a hand strap (optional)

- 1 Remove the back cover.
- 2 Slide a hand strap through the hand strap hole and hook it over the small projection.



- 3 Replace the back cover.

Getting started

Get to know your device's layout, keys, icons, screen, and the basics about working with applications. You can also learn to customise the device and enter text.

Turn your device on and off

To turn on your device,

- 1 Press and hold [ⓘ].
- 2 Enter your PIN and select **Done** (if necessary).
- 3 Select a language you want and select **Next**.
- 4 Select keyboard languages and select **Next**.
- 5 Select your home time zone and select **Next**.
- 6 Set the time and date and select **Next**.

 
 
To turn off your device, press and hold [ⓘ] and select **Yes**.







- Follow all posted warnings and directions from official personnel when in areas where the use of wireless devices is restricted, such as aeroplanes and hospitals.
- To use your device's non-network services only, switch to the flight mode. In Menu mode, select **Settings** → **Flight mode**.

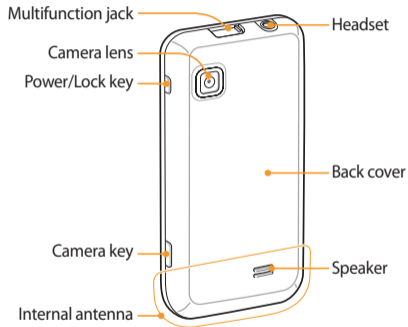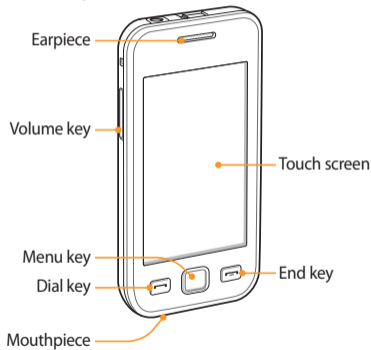

Get to know your device

› Device layout



› Keys

Key	Function
 Power/ Lock	Turn the device on or off (press and hold); Lock or unlock the touch screen and keys.
 Dial	Make or answer a call; In Idle mode, retrieve logs of your calls and messages.
 Menu	Access Menu mode; Launch the task manager to view all active applications (press and hold); In Idle mode or while using an application, access Search (press twice).
 End	End a call; In Menu mode, return to Idle mode.

Key	Function
 Volume	Adjust the device's volume.
 Camera	In Idle mode, turn on the camera; In Camera mode, take a photo or record a video.

› Idle screen

When the device is in Idle mode, you will see the idle screen. From the idle screen, you can view your device's status and access applications.

The idle screen has some default panels, and you can add new panels to the idle screen. ► p. 23

Scroll left or right to a panel of the idle screen. You can also select a dot on the top of the screen to move to the corresponding panel of the idle screen directly.







Indicator icons




Icons shown on the display may vary depending on your region or service provider.

Icon	Definition
	No signal
	Signal strength
	Flight mode activated
	Network searching
	GPRS network connected
	EDGE network connected
	WLAN connected
	Call missed
	Bluetooth activated

Icon	Definition
	Bluetooth hands-free car kit or headset connected
	Voice call in progress
	SOS message feature activated
	Call diverting activated
	Synchronising with PC
	Memory card inserted
	Browsing the web
	Connected to secured web page
	New text or multimedia message
	New email message
	New voice mail message

Icon	Definition
	Alarm activated
	Roaming (outside of normal service area)
	Normal profile activated
	Silent profile activated
	Current time
	Battery power level

 › Shortcuts panel

In Idle mode or while using an application, select  in the indicator icons area to open the shortcuts panel.

Select icons to activate or deactivate the WLAN and Bluetooth features. You can also turn on or off the device's volume and check new messages and alerts.

Use the touch screen

Your device's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.



- To avoid scratching the touch screen, do not use sharp tools.
- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
- Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or when exposed to water.



- For optimal use of the touch screen, remove the screen protection film before using your device.
- Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches of sharp tools, such as a stylus or pen.

Control your touch screen with the following actions:

- Tap: Tap once with your finger to select or launch a menu, option, or application.
- Tap and hold: Tap an item and hold it for more than 2 seconds to open a pop-up option list.
- Double-tap: Tap twice quickly with your finger to zoom in or out while viewing photos or web pages.
- Panning: Tap and drag with your finger to select items.
- Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item.

- Flick: Flick the screen quickly to activate an application.
- Area zoom: Place two fingers on the screen and pull them apart to zoom in or squeeze them together to zoom out.



- Your device turns off the touch screen when you do not use the device for a specified period. To turn on the screen, press any key.
- You can also adjust the backlight time. In Menu mode, select **Settings** → **Display and light** → **Backlight time**.
- Some lists have an index along the right side. Tap a letter to jump to items starting with that letter. Drag your finger along the index to quickly scroll through the list.

Lock or unlock the touch screen and keys

You can lock the touch screen and keys to prevent any unwanted device operations.

To lock, press [⏻]. To unlock, press [⏻] or the Menu key and drag the grey window with your finger in any direction.

Access menus

To access your device's menus,

- 1 In Idle mode, press the Menu key to access Menu mode.
- 2 Scroll left or right to a main menu screen.
You can also select a dot on the top of the screen to move to the corresponding main menu screen directly.

3 Select a menu or application.

4 Press [↔] to return to Idle mode.






- Your device has a built-in motion sensor that detects its orientation. If you rotate the device while using some features, the interface will automatically switch to landscape view. To set the interface to keep the orientation when you rotate the device, select **Settings** → **General** → **Gestures** → **Orientation** → **Change orientation**.
- While using the device, you can capture an image of a screen by pressing [⏻] and the Menu key simultaneously. The image will be saved in **My files** → **Images**.

› Organise applications in Menu mode

You can reorganise the applications in Menu mode by changing their order or grouping them into categories to suit your preferences and needs.

- 1 In Idle mode, press the Menu key to access Menu mode.
- 2 Select **Edit** at the top left of the screen.
- 3 Tap and hold an application, and drag it to the location you want.
You can move an application icon to another main menu screen. You can also change most-used applications at the bottom line. Move an application at the bottom line to a main menu screen, and move an application you want to use in Idle mode directly to the bottom line.
- 4 Select **Done** at the top left of the screen.

› Add new main menu screens

- 1 In Idle mode, press the Menu key to access Menu mode.
- 2 Select **Edit** at the top left of the screen.
- 3 Rotate the device to landscape view.
- 4 Select  to add a new main menu screen. You can have up to 10 screens.
 Select  to remove a screen from the main menu.
- 5 Rotate the device to portrait view.
- 6 Select **Done** at the top left of the screen.

Launch and manage applications

› Launch multiple applications

Your device allows you to multi-task by running multiple applications at the same time.


To launch multiple applications, press the Menu key to return to the main menu and select an application to launch.

› Use the task manager

You can manage multiple applications with the task manager. To launch the task manager,

- 1 Press and hold the Menu key. The icons of active applications appear.

2 Control active applications as follows:

- To switch between applications, select one from the icons of active applications.
- To close an application, select .
- To close all active applications, select **End all applications**.

Use widgets

Widgets are small applications that provide convenient functions and information on your idle screen.



- Some of your widgets connect to web services. Using a web-based widget may incur additional charges.
- Available widgets may vary depending on your region or service provider.

› Open the widget toolbar

To open the widget toolbar and access widgets,

- 1 In Idle mode, select **Widget** at the top left of the screen to open the widget toolbar.
- 2 Read the widget disclaimer and select **Accept** (if necessary).
- 3 Scroll left or right to a panel of the idle screen.
- 4 Scroll left or right on the widget toolbar to find the widget you want to use.
- 5 Drag the widget to the idle screen.
- 6 Select **Done** at the top left of the screen to close the widget toolbar.
- 7 To move the widget back to the widget toolbar, tap and hold the widget until the yellow frame appears and drag it to the widget toolbar.

› Manage web-based widgets

You can select a widget profile to connect to web services and view downloaded widgets.

In Menu mode, select **Settings** → **Menu and widgets** → **Widget**.


Customise your device



Get more from your device by customising it to match your preferences.

› Add new panels to the idle screen

You can add new panels to the idle screen to organise widgets according to your preferences and needs.

- 1 In Idle mode, select **Widget** at the top left of the screen.
- 2 Rotate the device to landscape view.

- 3 Select  to add new panels to the idle screen.
You can have up to 10 panels.

 Select  to remove a panel from the idle screen.

- 4 Rotate the device clockwise to portrait view.

- 5 Select **Done** at the top left of the screen.

› Set the current time and date

- 1 In Menu mode, select **Settings** → **Date and time**.

- 2 Select the time zone option and a time zone.

- 3 Enter the current time and date, and set the time and date format.

- 4 Select **Back**.

› Adjust the volume of the key tones

- 1 In Idle mode, press the Volume key up or down.

- 2 Adjust the key tone volume by pressing the Volume key or dragging the slider.

› Switch to the silent profile

In Menu mode, select **Keypad**, and then tap and hold **#** to mute or unmute your device.


› Set up a sound profile

You can change your device's sounds by customising the current sound profile or switching to another sound profile. To set up a profile,

- 1 In Menu mode, select **Settings** → **Sound profiles**.

- 2 Select the profile you are using.

- 3 Customise the sound options for incoming calls, incoming messages, and other device sounds.

 Available sound options vary depending on the selected profile.

- 4 Select **Set**.

To switch to another profile, select the check box next to the profile and then **Set**.

› Select a wallpaper for the idle screen

1 In Menu mode, select **Settings** → **Display and light** → **Wallpaper**.

2 Select an image.
To select an image from the image folder, select the folder.

3 Select **Set** → **Set**.

 Samsung is not responsible for any use of default images or wallpapers provided on your device.

› Adjust the brightness of the display

1 In Menu mode, select **Settings** → **Display and light**.

2 Drag the slider under **Brightness** to adjust the level of brightness.

3 Select **Set**.

 The brightness level of the display will affect how quickly the device consumes battery power.

› Lock your device


You can lock your device by activating the device password.

1 In Menu mode, select **Settings** → **Security**.

2 Select **Phone lock**.

3 Enter a new 4- to 8-digit password and select **Done**.

4 Enter the new password again and select **Done**.

 The first time you access a menu that requires a password, you will be prompted to create and confirm a password.

Once the device lock is enabled, you must enter the password each time you turn on the device.



- If you forget your password, bring your device to a Samsung Service Centre to unlock it.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

› Lock your SIM card

You can lock your device by activating the PIN supplied with your SIM card.

- 1 In Menu mode, select **Settings** → **Security**.
- 2 Select **PIN lock**.
- 3 Enter the PIN of your SIM card and select **Done**.

Once the PIN lock is enabled, you must enter the PIN each time you turn on the device.



- If you enter an incorrect PIN too many times, your SIM card will be blocked. You must enter a PIN unlock key (PUK) to unblock the SIM card.
- If you block your SIM card by entering an incorrect PUK, bring the card to your service provider to unblock it.

› Activate the mobile tracker

When someone inserts a new SIM card in your device, the mobile tracker feature will automatically send the contact number to specified recipients to help you locate and recover your device.

To use this feature, you need a Samsung account for controlling the device from the web remotely.

- 1 In Menu mode, select **Settings** → **Security**.
- 2 Select **Mobile tracker**.
- 3 Enter your password and select **Done**.
- 4 Select **OK** to continue.

- 5 Enter your email address and password for your Samsung account and select **Sign in**.
To create a Samsung account, select **Sign up now**.
- 6 Select **Recipients** to open the recipient list.
- 7 Enter a phone number including a country code (with +).
- 8 When you are finished setting the recipients, select **OK**.
- 9 Select **Sender** and enter a sender's name.
- 10 Select **Save** → **Accept**.



You can control the lost device via the web. Visit <http://www.samsungdive.com> to see the detailed information for this feature.

Enter text

You can enter text by selecting characters on the virtual keypad or by inputting handwriting on the screen.


Change the text input method

When you tap the text input field, the input panel with the QWERTY keyboard appears by default.



Number	Function
1	Change case.
2	Switch between Symbol/Number mode and ABC mode.

Number	Function
3	Insert a space; Insert a period and space (double-tap).
4	Clear your input.
5	Start a new line.
6	Change input languages; Access the keyboard settings (tap and hold).

To change the text input method, tap and hold  and select **Keyboard type** → a text input method.



Option	Function
Keypad	Select characters on the keypad.
Qwerty keyboard	Select characters on the QWERTY keyboard.
Writing full screen	Write anywhere on the screen.
Writing box	Write in the input box.


Enter text using different input methods


- 1 Change the text input method.
- 2 Change the text input mode.
- 3 Select the appropriate virtual keys or write on the screen to enter your text.

When entering text with the keypad, you can use the following modes:

Mode	Function
ABC	Select an appropriate virtual key until the character you want appears on the display.


Mode	Function
T9 (Predictive text)	<ol style="list-style-type: none"> 1. In ABC mode, select T9 (The dot turns green). 2. Select the appropriate virtual keys to enter an entire word. 3. When the word displays correctly, select  to insert a space. If the correct word does not display, select  and an alternative word from the list that appears. <p>Adding words to the T9 dictionary If you cannot find a word in the alternative word list, you can add the word to the T9 dictionary. Select Add word at the bottom of the alternative word list.</p>


Mode	Function
Number	<p>Select an appropriate virtual key to enter a number.</p>  You can enter numbers by tapping and holding a virtual key in ABC or T9 mode.
Symbol	<ol style="list-style-type: none"> 1. Select ◀ or ▶ to scroll to a symbol set you want. 2. Select an appropriate virtual key to enter a symbol.

 When entering text, rotate the device to display the wider QWERTY keyboard.

Copy and paste text

 While you are entering text, you can use the copy and paste feature to use text in other applications.

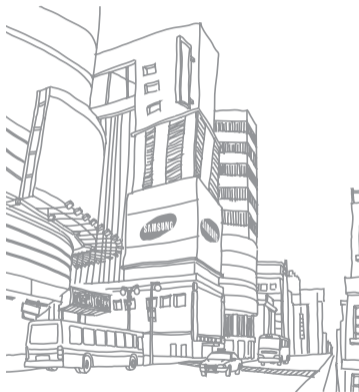

- 1 Tap and hold the text input field until  appears.
- 2 Select **Select** from the option list.
- 3 Drag your finger across the text.
You can also tap the word you want to highlight twice.
- 4 Select **Copy** or **Cut** to copy and paste, or cut and paste the text onto the clipboard.
- 5 In another application, tap and hold the text input field.
- 6 Select **Paste** to insert the text from the clipboard into the text field.






Calling

Learn to make or answer a call or access logs. For more information, see the "Calling" section of the user manual.

› Make a call



- 1 In Menu mode, select **Keypad** and enter an area code and a phone number.
- 2 Press [] to make a call.
- 3 To end the call, press [].

› Answer a call

- 1 When a call comes in, press [].
 When the device is ringing, press the Volume key to adjust the volume, or press and hold the Volume key down to mute the ringtone.
- 2 To end the call, press [].

› View call and message logs

You can view logs of your calls and messages filtered by their types.

- 1 In Menu mode, select **Logs**.
- 2 Scroll left or right to select a log type at the top of the screen.
 From the call and message logs, you can make a call or send a message directly to a contact by quickly flicking the contact to the left or right.
- 3 Select a log to view its details.
 From the detail view, you can dial the number, send a message to the number or add the number to the phonebook or reject list.

Creating and finding contacts

Learn to create and find a contact in memory. For more information, see the "Contacts" section of the user manual.

› Create a contact from the dialling screen

- 1 In Menu mode, select **Keypad** and enter a phone number.
- 2 Select **Add to Contacts** → **Create contact**.
- 3 Enter contact information.
- 4 Select **Done** to add the contact to memory.

› Create a contact

- 1 In Menu mode, select **Contacts** → **Create**.
- 2 Enter contact information.
- 3 Select **Done** to add the contact to memory.

› Find a contact

- 1 In Menu mode, select **Contacts**.
- 2 Select **Search** and enter the first letters of the name you want.
- 3 Select the contact's name from the contact list.

Messaging

Learn to send and view text, multimedia, or email messages. For more information, see the "Messages" section of the user manual.

› Send a text message


- 1 In Menu mode, select **Messages** → **Compose**.
- 2 Select **Contacts**.
You can enter a number manually or select one from the logs or groups by selecting another option.
- 3 Select the check boxes next to contacts and select **Add**.
- 4 Select **Tap to add text** and enter your message text.
- 5 Select **Send** to send the message.

› Send a multimedia message




To create your own connection profile, see the user manual.

- 1 In Menu mode, select **Messages** → **Compose**.
- 2 Select **Contacts**.
You can enter a number or email address manually or select one from the logs or groups by selecting another option.
- 3 Select the check boxes next to contacts and select **Add**.
When you enter an email address, the device will ask if you want to send a multimedia message. Select **OK** to confirm.
- 4 Select **Tap to add text** and enter your message text.

- 5 Select  and attach a file.
You can select a file from the file list or capture a photo, video, or sound clip.
- 6 Select **Send** to send the message.

➤ Send an email message

 To create your own connection profile and email account, see the user manual.



- 1 In Menu mode, select **Email** → an account → **Compose**.
You can select **Account list** to view other accounts.
- 2 Select **Contacts**.
You can enter an email address manually or select one from the logs or groups by selecting another option.
- 3 Select the Cc/Bcc field and add more recipients.
- 4 Select the subject field and enter a subject.
- 5 Select the text input field and enter your email text.

- 6 Select  → **Attach items** and attach a file.
You can select a file from the file list or capture a photo, video, or sound clip.
- 7 Select **Send** to send the message.

➤ View a text or multimedia message

- 1 In Menu mode, select **Messages** and select a conversation.
- 2 Select a text or multimedia message.

➤ View an email message

- 1 In Menu mode, select **Email** → an account.
- 2 Scroll to the inbox.
- 3 Select  → **Download**.
- 4 Select an email or a header.
- 5 If you selected a header, select  → **Retrieve** to view the body of the email.

Capturing photos and videos

Learn to capture a photo or video while on the move. For more information, see the "Camera" section of the user manual.

› Capture a photo

- 1 In Idle mode, press the Camera key to turn on the camera.
- 2 Rotate the device anti-clockwise to landscape view.
- 3 Aim the lens at the subject and make any necessary adjustments.



Number	Function
1	Check the camera status and settings.
2	Switch to the camcorder.
3	Change the shooting mode.
4	Change the scene mode.
5	Change the camera settings.
6	Hide or display icons in the viewfinder.

Number	Function
7	Adjust the colour balance according to lighting conditions.
8	Select the length of the delay before the camera takes a photo.
9	Adjust the brightness.
10	View the photo or video you capture last.

4 Press the Volume key to zoom in or out.

5 Press the Camera key to take a photo.
The photo is saved automatically.

▶ Capture a video

1 In Idle mode, press the Camera key to turn on the camera.

2 Rotate the device anti-clockwise to landscape view.


3 Select  to switch to the camcorder.

4 Aim the lens at the subject and make any necessary adjustments.



Number	Function
1	Check the camcorder status and settings.
2	Switch to the camera.
3	Change the recording mode.

Number	Function
4	Change the camcorder settings.
5	Hide or display icons in the viewfinder.
6	Adjust the colour balance according to lighting conditions.
7	Select the length of the delay before the camera starts recording a video.
8	Adjust the brightness.
9	View the photo or video you capture last.


- 5 Press the Volume key to zoom in or out.
- 6 Press the Camera key to start recording.
- 7 Select  or press the Camera key to stop recording. The video is saved automatically.

Viewing photos and videos

Learn to view photos and play videos you have captured or downloaded from other sources. For more information, see the "My files" and "Video player" sections of the user manual.

› View a photo

1 In Menu mode, select **My files** → **Images**.

To view the files on the thumbnail view, select  → **Thumbnail view**.

2 Select a photo to view.

3 Scroll left or right to view more photos.

› View a video

- 1 In Menu mode, select **Video player**.
- 2 Select a video to play.
- 3 Control playback with the following keys:



Number	Function
1	Activate the 5.1 channel surround sound system when a headset is connected.
2	Move to a point of the file by dragging the bar.
3	Scan backwards in a file.
4	Change a ratio of the video screen.
5	Adjust the volume.
6	Pause playback; Select ► to resume playback.
7	Scan forwards in a file.

Listening to music

Learn to play music files and create a playlist with your favourite music. For more information, see the "Music player" section of the user manual.

➤ Add music files to your device

Start by transferring files to your device or memory card:

- Download from the wireless web.
- Download from a PC with the optional Samsung Kies.
- Receive via Bluetooth.
- Copy to your memory card.
- Synchronise with Windows Media Player 11.



Samsung is not responsible for any use of default music files provided on your device.

➤ Play music


- 1 In Menu mode, select **Music**.
- 2 Scroll left or right to a music category.
- 3 Select a music file.
- 4 Control playback with the following keys:



Number	Function
1 ¹	Activate the 5.1 channel surround sound system when a headset is connected.
2 ¹	View the details of the music file.
3 ¹	Move to a point of the file by dragging the bar.
4	Skip backwards; Scan backwards in a file (tap and hold).
5 ¹	Activate Shuffle mode.
6 ¹	Change the repeat mode (off, repeating one file, or repeating all files).
7	Adjust the volume.
8	Skip forwards; Scan forwards in a file (tap and hold).
9	Pause playback; Select ► to resume playback.


1. These icons are shown when you tap the player screen.

 
› Create a playlist

- 1 In Menu mode, select **Music**.
- 2 Select **Playlists** →  → **Create**.
- 3 Enter a title for your new playlist and select **Done**.
- 4 Select the created playlist.
- 5 Select **Add**.
- 6 Select the files you want to include and select **Add**.

Listening to the FM radio

Learn to listen to the FM radio. For more information, see the "FM radio" section of the user manual.

- 1 Plug the supplied headset into the device.
 - 2 In Menu mode, select **FM radio**.
 - 3 Select **Yes** to start automatic tuning.
The FM radio scans and saves available stations automatically.
-  The first time you turn on the FM radio, you will be prompted to start automatic tuning.
- 4 Control the FM radio with the following keys:

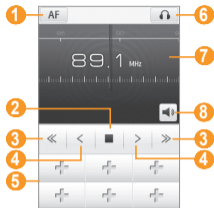

Number	Function
1	Set the FM radio to automatically retune frequencies for stations when the current signal is weak.
2	Turn off the FM radio; Select ► to turn on the FM radio.
3	Search for an available radio station.
4	Change the frequency by 0.1 MHz.

Number	Function
5	Add the current radio station to the favourites list.
6	Change the sound output (headset or device's speaker).
7	Change the frequency by scrolling left or right on the scale bar.
8	Adjust the volume.

Connecting to the internet

Learn to access the internet and browse web pages. For more information, see the "Internet" section of the user manual.




To create your own connection profile for accessing the web, see the user manual.

› Browse web pages

I In Menu mode, select **Internet** to launch a specified homepage.

2 Navigate web pages with the following keys:



 The above screen may differ depending on your region or service provider.

Number	Function
1	Bookmark the current web page.
2 ¹	Change the view mode.


Number	Function
3	Move backward or forward to web pages in history.
4	Access a list of web browser options.
5	Refresh the current web page.
6 ¹	End the internet connection.
7	Open a web page in a new window or switch between the currently opened windows.
8	Open a list of saved bookmarks, frequently visited pages and RSS feeds and recent internet history.

1. These icons are shown when you tap the screen.

› Bookmark your favourite web pages

You can bookmark web pages you frequently visit for quick access. While navigating the web, select  to bookmark the current web page.


If you know the web address of the web page, you can manually add a bookmark. To add a bookmark,

- 1 In Menu mode, select **Internet** → .
- 2 Select **Add**.
- 3 Enter a page title and a web address (URL).
- 4 Select **Save**.

Downloading applications

Samsung Apps allows you to simply and easily download an abundance of applications to your device. Featuring a wealth of games, news, reference, social networking, widgets, health related applications and more, Samsung Apps gives you instant access to a huge choice of mobile experience.

Your device gets smarter with fully optimised applications from Samsung Apps. Explore amazing applications and make your mobile life even better.

- 1 In Menu mode, select **Samsung Apps** .
- 2 Search for and download applications or widgets as desired.



- To use Samsung Apps, your device must be connected to the internet using cellular connection or Wi-Fi.
- You may incur additional charges for accessing the internet and downloading applications.
- If the widget toolbar is full, downloaded widgets will not be automatically added to the widget toolbar. You must remove some widgets from the toolbar and add the new widgets manually.
- For details, please visit www.samsungapps.com. Or, refer to the Samsung Apps leaflet.
- The service may be unavailable depending on your region or service provider.

Connecting to a PC

Learn to connect your device to a PC to use with Samsung Kies or Windows Media Player, or use the device as a mass storage device. For more information, see the "PC connections" section of the user manual.

➤ Connect with Samsung Kies

Ensure that Samsung Kies is installed on your PC. You can download the program from the Samsung website (www.samsungmobile.com).

- 1 In Menu mode, select **Settings** → **Connectivity** → **USB** → **Samsung Kies** → **Set**.
- 2 Press [] to return to Idle mode.

- 3 Using an optional PC data cable, connect the multifunction jack on your device to a PC.
- 4 Run Samsung Kies and use wireless connections or copy data and files.
Refer to the Samsung Kies help for more information.

› Synchronise with Windows Media Player

Ensure that Windows Media Player is installed on your PC.

- 1 In Menu mode, select **Settings** → **Connectivity** → **USB** → **DRM media** → **Set**.
- 2 Press [**↩**] to return to Idle mode.
- 3 Using an optional PC data cable, connect the multifunction jack on your device to a PC with Windows Media Player installed.
When connected, a pop-up window will appear on the PC.

- 4 Open Windows Media Player to synchronise music files.
- 5 Edit or enter your device's name in the pop-up window (if necessary).
- 6 Select and drag the music files you want to the sync list.
- 7 Start synchronisation.

› Connect as a mass storage device

- 1 If you want to transfer files from or to a memory card, insert a memory card into the device.
- 2 In Menu mode, select **Settings** → **Connectivity** → **USB** → **Mass storage** → **Set**.
- 3 Press [**↩**] to return to Idle mode.

- 4 Using an optional PC data cable, connect the multifunction jack on your device to a PC.

When connected, a pop-up window will appear on the PC.

- 5 Open the folder to view files.

- 6 Copy files from the PC to the memory card.



To disconnect the device from the PC, click the USB device icon on the Windows task bar and click the option to safely remove the mass storage device. Then remove the PC data cable from the PC. Otherwise, you may lose data stored on the memory card or damage the memory card.

Using Bluetooth


Learn to connect your device with other devices via the Bluetooth wireless feature to share files or control the device hands-free. For more information, see the "Bluetooth" section of the user manual.

▶ Turn on the Bluetooth wireless feature


- 1 In Menu mode, select **Settings** → **Connectivity** → **Bluetooth**.

You can also open the shortcuts panel and select **Bluetooth**.

- 2 Select the dot on the top right of the screen to turn on the Bluetooth wireless feature.

- 3 To allow other devices to locate your device, select  → **Settings** → **My phone's visibility** → **Always on** → **Save**.

If you selected **Custom**, enter duration that your device is visible and select **Done**.

Once the Bluetooth wireless feature is active, select  and use the following options:

- To change your device's name, select **Settings** → **My phone's name**.
- To set limits on browsing your files to others, select **Settings** → **Secure mode**.
- To check Bluetooth services available on your device and information about the services, select **Bluetooth services**.

➤ Find and pair with other Bluetooth-enabled devices

- 1 In Menu mode, select **Settings** → **Connectivity** → **Bluetooth** → **Search**.
- 2 Select a device.


- 3 Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and select **Done**. Alternatively, select **Yes** to match the PIN between your device and the device.

When the owner of the other device enters the same PIN or accepts the connection, pairing is complete. If the pairing is successful, the device will automatically search for available services.

You can now use the Bluetooth services, such as transferring files, controlling the device remotely, or printing data, depending on the connected device type.

Using Wi-Fi

Learn to connect the device to a wireless local area network (WLAN) to access the internet or other network devices. For more information, see the "Wi-Fi" section of the user manual.

 Your device uses non-harmonised frequency and is intended for use in all European countries. The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

› Activate the WLAN feature

In Menu mode, select **Settings** → **Connectivity** → **Wi-Fi**. You can also open the shortcuts panel and select **Wi-Fi**.

› Find and connect to a WLAN

- 1 In Menu mode, select **Settings** → **Connectivity** → **Wi-Fi**.
The device will automatically search for available WLANs.
- 2 Select the check box next to a network.
- 3 Enter a password for the network and select **Done** (if necessary).
- 4 Customise settings to add a connection profile for the selected network. For details on each setting options, see the user manual.
- 5 When you are finished, select **Back**.

You can now use the WLAN profile for network connections. Change the profile setting to the configured WLAN profile in the web browser or other web-based services.

Safety precautions

To prevent injury to yourself and others or damage to your device, read all of the following information before using your device.

Warning: Prevent electric shock, fire, and explosion

Do not use damaged power cords or plugs, or loose electrical sockets

Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord

Do not bend or damage the power cord

Do not use your device while charging or touch your device with wet hands

Do not short-circuit the charger or the battery

Do not drop or cause an impact to the charger or the battery

Do not charge the battery with chargers that are not approved by the manufacturer

Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery

For safe disposal of your Li-Ion batteries, contact your nearest authorised service centre.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.
- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.
- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Protect the device, batteries, and chargers from damage

- Avoid exposing your device and batteries to very cold or very hot temperatures.
- Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device and batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Caution: Follow all safety warnings and regulations when using your device in restricted areas

Turn off your device where prohibited

Comply with all regulations that restrict the use of a mobile device in a particular area.

Do not use your device near other electronic devices

Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

Do not use your device near a pacemaker

- Avoid using your device within a 15 cm range of a pacemaker if possible, as your device can interfere with the pacemaker.
- If you must use your device, keep at least 15 cm away from the pacemaker.
- To minimise the possible interference with a pacemaker, use your device on the opposite side of your body from the pacemaker.

Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency

If you personally use any medical equipment, contact the manufacturer of the equipment to ensure the safety of your equipment from radio frequency.

If you are using a hearing aid, contact the manufacturer for information about radio interference

Some hearing aids may be interfered with by the radio frequency of your device. Contact the manufacturer to ensure the safety of your hearing aid.

Turn off the device in potentially explosive environments

- Turn off your device in potentially explosive environments instead of removing the battery.
- Always comply with regulations, instructions and signs in potentially explosive environments.

- Do not use your device at refuelling points (service stations), near fuels or chemicals, and at blasting areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

Turn off your device when in an aircraft

Using your device in an aircraft is illegal. Your device may interfere with the electronic navigation instruments of the aircraft.

Electronic devices in a motor vehicle may malfunction due to the radio frequency of your device

Electronic devices in your car may malfunction due to radio frequency of your device. Contact the manufacturer for more information.

Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, practice good common sense and remember the following tips:

- Use a hands-free device.

- Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device.
- Position your device within easy reach. Be able to access your wireless device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, let your voice mail answer it for you.
- Let the person you are speaking with know you are driving. Suspend calls in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous.
- Do not take notes or look up phone numbers. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility of driving safely.
- Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call, dial only a few numbers, check the road and your mirrors, then continue.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

- Use your device to call for help. Dial a local emergency number in the case of fire, traffic accident, or medical emergencies.
- Use your device to help others in emergencies. If you see an auto accident, a crime in progress, or a serious emergency where lives are in danger, call a local emergency number.
- Call roadside assistance or a special, non-emergency assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or another special, non-emergency number.

Proper care and use of your mobile device

Keep your device dry

- Humidity and all types of liquids may damage device parts or electronic circuits.
- When wet, remove the battery without turning on your device. Dry your device with a towel and take it to a service centre.
- Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer's warranty.

Do not use or store your device in dusty, dirty areas

Dust can cause your device to malfunction.

Do not store your device on slopes

If your device falls, it can be damaged.

Do not store your device in hot or cold areas. Use your device at -20 °C to 50 °C

- Your device can explode if left inside a closed vehicle, as the inside temperature can reach up to 80 °C.
- Do not expose your device to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Store the battery at 0 °C to 40 °C.

Do not store your device with such metal objects as coins, keys and necklaces

- Your device may become deformed or malfunction.
- If the battery terminals are in contact with metal objects, it may cause a fire.

Do not store your device near magnetic fields

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.

- Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.
- Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers

- The battery may leak.
- Your device may overheat and cause a fire.

Do not drop your device or cause impacts to your device

- The screen of your device may be damaged.
- If bent or deformed, your device may be damaged or parts may malfunction.

Do not use a flash close to the eyes of people or animals

Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.

- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purposes.

Use manufacturer-approved batteries, chargers, accessories and supplies

- Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction.
- Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung.

Do not bite or suck on the device or the battery

- Doing so may damage the device or cause explosion.
- If children use the device, make sure that they use the device properly.

When speaking on the device:

- Hold the device upright, as you would with a traditional phone.
- Speak directly into the mouthpiece.
- Avoid contact with your device's internal antenna. Touching the antenna may reduce the call quality or cause the device to transmit more radio frequency than necessary.

- Hold the device with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

Protect your hearing



- Excessive exposure to loud sounds can cause hearing damage.
- Exposure to loud sounds while driving may distract your attention and cause an accident.
- Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Use caution when using the device while walking or moving

Always be aware of your surroundings to avoid injury to yourself or others.

Do not carry your device in your back pockets or around your waist

You can be injured or damage the device if you fall.

Do not disassemble, modify, or repair your device

- Any changes or modifications to your device can void your manufacturer's warranty. For service, take your device to a Samsung Service Centre.
- Do not disassemble or puncture the battery, as this can cause explosion or fire.

Do not paint your device

Paint can clog moving parts and prevent proper operation. If you are allergic to the paint or metal parts of the device, stop using the device and consult your physician.

When cleaning your device:

- Wipe your device or charger with a towel or a rubber.
- Clean the terminals of the battery with a cotton ball or a towel.
- Do not use chemicals or detergents.

Do not use the device if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hands and face. Take the device to a Samsung Service Centre to have it repaired.

Do not use the device for anything other than its intended use

Avoid disturbing others when using the device in public

Do not allow children to use your device

Your device is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the device, or make calls that increase your charges.

Install mobile devices and equipment with caution

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Allow only qualified personnel to service your device

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

Handle SIM cards or memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.

- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your device conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 W/kg.

During testing, the maximum SAR recorded for this model was 0.688 W/kg. In normal use, the actual SAR is likely to be much lower, as the device has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your device reduces your overall exposure to RF energy.

The Declaration of Conformity statement at the back of this manual demonstrates your device's compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung website.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working

life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorised by the content owner or service provider. Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

“THIRD PARTY CONTENT AND SERVICES ARE PROVIDED “AS IS.” SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN

CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.”

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

Declaration of Conformity (R&TTE)

We, Samsung Electronics

declare under our sole responsibility that the product

GSM Wi-Fi Mobile Phone : GT-S5250

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950- 1 : 2006 +A11:2009 EN 50332-1 : 2000 EN 50332-2 : 2003
SAR	EN 50360 : 2001 EN 62209-1 : 2006
EMC	EN 301 489- 01 V1.8.1 (04-2008) EN 301 489- 07 V1.3.1 (11-2005) EN 301 489- 17 V2.1.1 (05-2009) EN 301 489- 19 V1.2.1 (11-2002)
RADIO	EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.7.1 (10-2006)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House,
Churchfield Road,
Walton-on-Thames,
Surrey, KT12 2TD, UK*
Identification mark: 0168

CE 0168 

The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*
2010.09.01



Joong-Hoon Choi / Lab Manager

(place and date of issue) (name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.

Some of the contents in this guide may differ from your device depending on the software of the device or your service provider.

To install Kies (PC Sync) Kies

1. Download the latest version of Kies from the Samsung website (www.samsungmobile.com) and install it in your PC.
2. In Menu mode, select **Settings** → **Connectivity** → **USB** → **Samsung Kies** → **Set**.
3. Using a PC data cable, connect your device to your PC. Refer to the Kies help for more information.