

SCH-u540 Series
P O R T A B L E D U A L M O D E
T E L E P H O N E

User Guide

Please read this manual before operating your phone, and keep it for future reference.

SAMSUNG

Intellectual Property

 
All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

© 2007 Samsung Electronics Canada Inc. Samsung is a registered trademark of Samsung Electronics Co. Ltd. and its related entities.

Licensed by Qualcomm Incorporated under one or more of the following patents: U.S. Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390.
Printed in South Korea

Openwave[®] is a registered Trademark of Openwave, Inc.
RSA[®] is a registered Trademark RSA Security, Inc.
The Bluetooth[®] word mark and logos are owned by the Bluetooth SIG, Inc.

The privacy and copyright laws of Canada govern the disclosure, reproduction and distribution of data, media and other content, including music and video content. Certain activities, including downloads or transfer by any means (including, via cable, Bluetooth[®] or otherwise) of such content may be an infringement of privacy or copyright law. Neither Samsung Electronics Canada Inc. nor any of its affiliates shall be liable or responsible for any data or content disclosed, reproduced, downloaded or distributed by the user of this equipment.



Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

 
 
 
 


Table of Contents

Important Safety Precautions	1
Road Safety at All Times	1
Switching Off When Refueling	1
Switching Off in an Aircraft	1
Switching Off in Hospitals	1
Interference	1
Special Regulations	2
Sensible Use	2
Emergency Call	2
Water Resistance	2
Accessories and Batteries	2
Qualified Service	3
Getting Started	4
Installing and Charging the Battery	4
Turning Your Phone On and Off	7
Your Phone	8
Closed View of Your Phone	9
Front View of Your Phone	11
Understanding the Display Screens	14
Screen Icons	15
Camera	19
Memory Card	19
Using Micro SD Memory Cards	19
Inserting the Micro SD Memory Card	20
Removing the Micro SD Memory Card	21
Using a Micro SD Adapter	22
Phone Basics	23
Displaying Your Phone Number	23
Making Calls	23
Making Regular Calls	23
Correcting the Number	23




Redial the Last Number	23
Calling Emergency Numbers	24
Adjusting the Volume	24
Dialing and Saving Phone Numbers with Pauses	24
Dialing from Your Contacts List	25
Using One-Touch/Two-Touch Speed Dialing	25
Answering Voice Calls	26
Answering Calls	27
Missed Call Notification	27
In-Call Options	28
Using the Menu Options	28
Making Three-Way Calls	29
Mute/Unmute	29
End-of-Call Options	30
Saving Phone Numbers	30
Entering Text	30
Selecting a Character Input Mode	30
Entering Characters Using T9 Text Input	31
Entering Characters with the Keypad	32
Entering Numbers and Symbols	33
Using Caller ID	33
Responding to Call Waiting	34
SPARK Menu	34
Favourites Menu	35
Contacts	36
Adding New Entries	36
Adding New Entries in Idle Mode	36
Adding New Entries from the Contacts Menu	37
Finding, Editing or Dialing Contacts	37
Selecting Ringer Types to Identify Entries	38
Selecting Pictures for Entries	38
Groups	39
Assigning Contacts to Groups	39
Sending Messages to Groups	40
Group Options	41

Speed Dials	41
Creating Speed Dial Entries	42
Editing Speed Dial Entries	42
Using Speed Dial	43
My Name Card	43
Call History	44
Viewing Your Call History	44
Call History Options	45
Erasing History	46
Call Timers	46
Messaging	48
Voice Mail	48
Setting Up Your Voice Mail	48
Voice Mail Notification	49
New Voice Mail Message Alerts	49
Retrieving Your Voice Mail Messages	50
Clearing the Message Icon	50
Text & Multimedia Messages	51
Create New	51
Inbox	55
Outbox/Sent	57
Templates	59
Drafts	59
Saved	60
Erase Messages	60
Settings	60
Memory Info	63
Web Alert	63
E-Mail	64
IM & Chat	64
Short Codes	65

Menu Functions	66
Camera & Video	72
Camera	72
Taking Pictures	72
Camera Options	74
Sending Pictures via Multimedia Messaging	76
Image Album	77
Settings	78
PictBridge Print	78
Camcorder	80
Taking Videos	80
Camcorder Options	81
Video Album	83
Settings	84
My Albums	85
Search	86
My Content	87
Ringtones	87
Images	87
Videos	87
TV & Radio	88
Applications	88
GPS Services	89
Games	90
Music	91
Configuring a Micro SD Card	91
Configuring the TELUS Music Player Settings	91
Downloading Music	92
Playing Music with the External Buttons	92
Playing Music with the Phone Open	93
Creating a Play List	93
Selecting a Play List	94
Controlling Playback	94






Managing your Song Library	95
Viewing Song Download Status	96
Wireless Web	97
Launching the Browser	97
Navigating the Web	97
Soft Keys	97
Tools	100
Alarm	100
Bluetooth	101
Adding New Devices	101
Options	102
Calculator	103
Calendar	104
Using Today Entries	104
Using Scheduler Entries	104
Using the Task List	106
Using Countdown	108
Mass Storage	109
Connect to PC	109
Format	110
Memory Info.	110
Memo Pad	111
Creating Memos	111
Viewing Memos	111
Deleting Memos	111
World Time	112
Voice Memo	112
Recording Voice Memos	112
Recording Phone Call Conversations	113
Voice Memo Options	114
Voice Services	114
Activating Voice Recognition	114
Call	115
Send Text	117

   

Send Email	118
Lookup	119
Go To	119
Check	119
Changing Voice Dial Sensitivity	120
Configuring Digit Dialing	120
Changing Voice Dial Prompts	121
Changing Voice Launch	122
Settings	123
Display	123
Changing the Main Screen	123
Changing the Outer Screen	125
Changing the Display Brightness Settings	125
Changing the Backlight Settings	126
Changing the Dialing Font	127
Changing the PowerSave Mode Setting	127
Changing the Keypad Light Settings	128
Changing the Language	128
Sounds	129
Volume	129
Ringer Type	130
Voice Calls	130
Messages	131
Schedule	132
Meeting / Silent Mode	132
Alerts	133
Key Tone	134
Games / Tools	136
Backlight	136
Notification	136
Text Entry	137
Phone Information	138
More...	139
Accessibility	139
Airplane Mode	141



Browser	142
Call Setup	142
Data Setup	146
Headset Mode	147
Location	148
Restrict and Lock	149
Roaming	150
Security	151
Key Guard	152
Safety	154
Getting the Most Out of Your Reception	154
UL Certified Travel Adaptor	156
Caring for the Battery	159
Acknowledging Special Precautions and Industry Canada Notice	161
Information to User	161
Owner's Record	163
User Guide Proprietary Notice	163
Warranty	164
Index	167

   

Important Safety Precautions

Please read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Road Safety at All Times

Do not use a hand-held phone while driving; park the vehicle first.

Switching Off When Refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switching Off in an Aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching Off in Hospitals

Switch your phone off near medical equipment. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.


Special Regulations

Follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital, for example).

Sensible Use

Use the phone in the intended position (held to the ear). If your phone has an external antenna, avoid unnecessary contact with the antenna when the phone is on.

Emergency Call

Ensure the phone is switched on and in-service. Key in the emergency number for your present location, then press the  key. Give all the necessary information as accurately as possible. Do not end the call until given permission to do so.

Water Resistance

Your phone is not water resistant. Keep it dry.

Accessories and Batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorized accessories could damage your phone and may be dangerous.

2 Important Safety Precautions

Important: Although the phone can be used while the battery is charging, the battery must be fully charged before first use, otherwise you could damage the battery.

Important: Using a non-supported battery may cause damage to your phone.

Qualified Service

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Safety" on page 154.



Getting Started

Installing and Charging the Battery

Your phone is equipped with a Lithium Ion (Li-ion) battery. It allows you to recharge your battery before it is fully drained. When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and a message repeats at regular intervals on the display. If this happens, the display dims to conserve the remaining battery power. When the battery level becomes too low, the phone automatically turns off.

Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power. You can use the phone while the battery is charging, but this causes the phone to charge more slowly.

 
Long backlight settings, searching for service, vibration mode, playing games, camera and browser usage affect the battery's talk and standby times.

Important: The battery must be fully charged before you use the phone for the first time; otherwise, you could damage the battery.


Important: Using a non-supported battery may cause damage to your phone. When using a non-supported battery, you cannot recharge it. The handset can be used only for the duration of the factory battery charge, if any.

Installing the Battery


1. Slide the battery cover down and lift up to remove it.

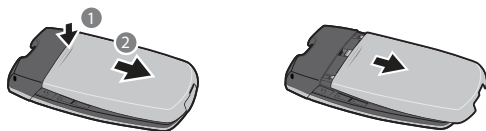

 2. Insert battery into the phone housing with the label side down. The gold contacts on the end of the battery should match up with those on the phone.



 3. Push the top end of the battery down until it snaps into place.



4. Replace the battery cover.





Removing the Battery

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Slide the battery cover down and lift up to remove it.
3. Use your finger to lift the battery (top end first) up and away from the phone.

Charging the Battery with the Travel Adapter

Your phone is powered by a rechargeable standard Li-ion battery. Use Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.

The  icon indicates that the battery is full. If the battery charge is getting too low, the battery icon  blinks and the phone sounds a warning tone.


Warning! Using the wrong battery charger could cause damage to your phone and void the warranty.

1. Make sure the power is off so that you don't lose any stored numbers or messages.


6 Getting Started

2. Plug the large end of the travel adapter into a standard 120/220V AC wall outlet.
3. Insert the end of the adapter into the charger/ accessory connector at the bottom end of the phone.

Turning Your Phone On and Off

1. Open the phone.
2. Press and hold the  key until the phone switches on. Once your phone is on, it displays “Looking for Service”. When your phone finds a signal, it automatically enters Idle mode. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, the phone enters Power Save mode and periodically searches for a signal. When a signal is found, your phone automatically returns to Idle mode.

3. To turn your phone off, press and hold the  key until you see the powering down animation on the display screen.

Your Phone

Congratulations on the purchase of your Samsung SCH-u540 phone. This phone is lightweight, easy-to-use, reliable, and offers many exciting features and service options:

- Mobile Browser™ provides access to the wireless Internet. See "Launching the Browser" on page 97.
- 1.3 MP camera
- Digital camcorder
- MP3 Player with external controls
- VoiceSignal technology for voice-activated dialing and other commands
- Global positioning (GPS) technology for use with emergency and other services (where supported)
- Messaging provides quick and convenient text (SMS) and multimedia (MMS) messaging capabilities. See "Messaging" on page 48.
- E-mail, instant messaging, and chat capabilities
- Downloadable games, ringtones, wallpapers, and applications
- A built-in planner and other useful personal management applications. See "Tools" on page 100.
- Bluetooth® wireless technology

Closed View of Your Phone

 
 
Your phone has many features that you can access while the phone is closed.



1. **Volume Key:** Allows you to adjust the ringer volume in Idle mode (with the phone open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options. To mute the ringer during an incoming call, press the volume key up or down.
2. **Key Lock:** Locks the external keys and MP3 buttons so that they cannot be pressed accidentally.



3. **Camera and Camcorder Lens:** The lens of your built-in camera.
4. **Headset Jack:** Allows you to plug in an optional headset for safe, convenient hands-free conversations
5. **Camera Key:** Launches the integrated digital camera:
 - In Idle mode, press to activate the **Camera** menu.
 - In Idle mode, press and hold to start the camera's preview mode.
 - When the phone is closed, press and hold to start the camera's preview mode.
6. **Speaker Key:** In Idle mode, press to display the dialed call history.
7. **External LCD Display:** Displays time and date information, incoming calls or messages.
8. **Memory Card Slot:** Holds the Micro SD memory card.
9. **Stereo Speakers:** These two speakers allow you to hear stereo sound.



10 Your Phone

 
 
 


Front View of Your Phone





1. **Earpiece:** The earpiece allows you to hear the other caller. Ringtones and sounds are also played through the earpiece.
2. **Display Screen:** This screen displays all the information you need to operate your phone.
3. **Navigation Keys:**
 - The navigation keys allow you to scroll through the phone menu options
 - In Idle mode, press the left navigation key to access Favourites, press the right navigation key to access TELUS SPARK, and press the down navigation key to access the menu.
4. **Left Soft Key:**
 - In Idle mode, press to access the **Web**.
 - When using other features, such as the Web Browser, the left soft key performs a context-sensitive action. This action is shown in the bottom-left corner of the display screen.
5. **Music Key:** In Idle mode, press this key to access the Music menu or press and hold to launch TELUS mobile music.
6. **SEND Key:**
 - Allows you to place or receive a call.
 - In Idle mode, press the key once to access the recent call log.
 - In Idle mode, press and hold the key to access VoiceSignal, the voice recognition feature. For more information, see "Activating Voice Recognition" on page 114.




7. **Clear Key:** Deletes characters from the display when you are in text entry mode. Press to return to the previous menu or screen when navigating features on your phone.
8. **Special Function Keys:**
 - **Shift/Asterisk:**
 - Enters the asterisk [*] character for calling features.
 - In text entry mode, press the key to switch between letter cases when using the input type Alpha (ABC, Abc, abc) or T9.
 - In Idle mode, press and hold to switch your handset to Silent Mode (with vibration).
 - **Space/Pound:**
 - Enters the pound [#] character for calling features.
 - In text entry mode, press to enter a space.
 - In Idle mode, press and hold to switch your handset to Lock Mode (disables all outgoing calls except for emergency, 911).
9. **Microphone:** The microphone allows other callers to hear you clearly when you are speaking to them.
10. **Power/Accessory Interface Connector:** The Power/Accessory Interface Connector is used to plug in a travel adaptor, or any available accessory to your phone.
11. **Alpha-numeric Keys:** Use these keys to enter numbers, letters, and characters. For information on entering text, see "Entering Text" on page 30.



12. **END Key:**

- During a call, press this key to end the call.
- When you receive an incoming call, press this key to reject the call.
- When the phone is off or in Idle mode, press and hold this key for a few seconds to turn your phone on or off.
- When in the main menu, press to return the phone to Idle mode and cancel your input.

13. **OK Key:**

- In Idle mode, press to access the **Menu**.
- Pressing  when navigating through a menu accepts the highlighted choice in the menu.

14. **Messaging Key:** In Idle mode press this key to access the Messaging menu.

 
 
15. **Right Soft Key:**

- In Idle mode, press to access your **Contacts**.
- When using other features, such as the Web Browser, the right soft key performs a context-sensitive action. This action is shown in the bottom right corner of the display screen.

16. **SPARK Menu Key:** In Idle mode, press to access SPARK.

Understanding the Display Screens


Your phone's display screens provide a wealth of information about your phone's status and options. When the phone is closed, the exterior display screen is dimmed. To illuminate the exterior display screen, press any of the side or front keys.



14 Your Phone



 The interior screen has three areas:

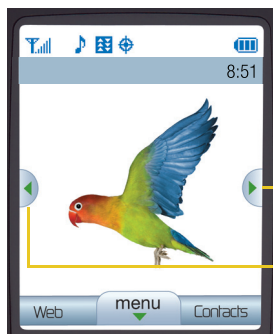

— Displays various icons.

— Displays messages, instructions and any information that you enter, such as the number you are dialing.

— Press right navigation key to access SPARK.


— Press left navigation key to access Favourites.


— Shows the current functions assigned to the two soft keys and the OK key.


Your Phone


Screen Icons


This list identifies the symbols you'll see on your phone's display screens:


- 

Indicates that your 1X web connection is active. Incoming voice calls go directly to Voicemail; outgoing voice calls can be made, but the web connection will terminate.
- 


















Indicates that data is being transferred over the 1X network. The arrow direction indicates whether the handset is sending or receiving data.
- 

















Indicates that your 1X connection is dormant.
- 

Indicates that you are in a high-speed EV-DO coverage area.
- 

Indicates that you have an active EV-DO connection. When the arrows are moving, data is being transferred over the EV-DO network.
- 

Indicates that the EV-DO connection is dormant.

-  Indicates that your phone is receiving 1X digital service.
-  Indicates that your phone is receiving digital (non-3G) service.
-  Indicates that your phone is receiving EV-DO service.
-  Indicates that position location is active.
-  Indicates that your phone is in web security mode.
-  Indicates that your phone is roaming.
-  Indicates that you have a new message.
-  Indicates that there is an unread message in your inbox.
-  Indicates that the message has been read.
-  Indicates that there is an unread urgent message in your inbox.
-  Indicates that you have read the urgent message.
-  Indicates that the message was sent.
-  Indicates that the message failed to send.
-  Indicates that the message is a draft.
-  Indicates that your phone is in vibrate all mode.
-  Indicates that your phone is set to ringer plus vibrate mode.
-  Indicates that the TTY option is On. This icon is displayed only when earphones or a Bluetooth headset is in use.

- 
- Indicates that the ringer is set at a level between 1-8 or that 1-Beep is selected.
- 
- Indicates that the ringer is turned Off.
- 
- Indicates that an alarm is set on your phone.
- 
- Tells you a call is in progress.
- 
- Means there is no service, as your phone cannot find a signal.
- 
- Displays your current signal strength. When you are receiving maximum signal strength, six bars are shown.
- 
- Displays your current battery strength at full.
- 
- Indicates your current battery charge strength. (Icon shown fully discharged in idle mode.)
- 
- Indicates that the handset is in Mute mode.
- 
- Indicates that the handset is in Key Mute mode.
- 
- Indicates that the handset is in Speaker mode.
- 
- Indicates that the Camera is enabled.
- 
- Indicates that the Camcorder is enabled.
- 
- Indicates that the self-timer function is enabled. With the self-timer enabled, a set amount of time is required prior to taking a picture.
- 
- Indicates that the white balance has been set to Automatic.
- 
- Indicates that the white balance has been set to Sunny. This is used for taking pictures outdoors on bright sunny days.



Indicates that the white balance has been set to Cloudy. This is used for taking pictures outdoors under cloudy conditions.



Indicates that the white balance has been set to Tungsten. This is used for taking pictures indoors under normal lighting conditions.



Indicates that the white balance has been set to Fluorescent. This is used for taking pictures indoors under fluorescent lighting conditions.



Indicates that the white balance has been set to Manual. This is used for taking pictures indoors or outdoors using your own custom settings.



Indicates that a voice memo or video is being recorded.



Indicates the key you must press to pause playback.



Indicates the key you must press to play.



Indicates that media has been uploaded to an online album or folder.



Indicates that there is a voice caption attached to an image.



Indicates that Bluetooth technology is visible for 1 minute.



Indicates that Bluetooth technology is connected.



Indicates that Bluetooth technology is hidden.



Indicates that Memory Card is inserted.

Camera

The camera on the front of your phone allows you to take photos. For further details, see "Camera" on page 72.

Memory Card

Your phone allows you to use a Micro SD (Secure Digital) memory card (up to 1GB) and an adapter to expand the phone's available memory space. This digital card makes it easy to exchange images, music, and voice data quickly between SD-compatible devices.

Using Micro SD Memory Cards

 
You can purchase Micro SD memory cards to expand the phone's available memory space. They allow you to easily store images, videos, music files, and voice data in your phone.

Note: Before you can copy files to a memory card from your PC, you must first insert it into the phone. The phone will format the card for you and create the necessary file folders. The card is formatted with a FAT32 file system that can be read by most computers.

Inserting the Micro SD Memory Card

To insert the Micro SD memory card into your phone:

1. Remove the battery cover by pushing and sliding the cover down. Lift up to remove it.

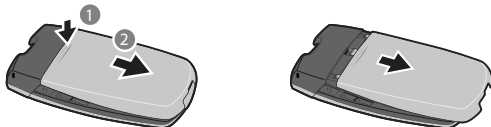

2. Open the memory card access panel located on the bottom-right side of the phone.
3. Position the Micro SD memory card in line with the opening and gently slide it into place until it is fully inserted and locked.



4. Replace the battery cover.



Your Phone

Note: Be sure to use only recommended memory cards (up to 1GB). Using non-recommended memory cards could cause data loss or damage your phone.

Note: Make sure your battery is fully charged before using the Micro SD memory card. Your data may become damaged or unusable if the battery runs out while reading or writing to the card.

 
Removing the Micro SD Memory Card

To remove the Micro SD memory card from your phone:

1. Open the memory card access panel located on the bottom-right side of the phone.
2. Eject the card by pushing in and then releasing.
3. Pull the memory card out of the handset.

Warning! DO NOT remove a memory card while files are being accessed or transferred. It could result in loss or damage of data.

Note: If you remove your memory card, the location to save images will automatically default back to the Phone.





Using a Micro SD Adapter

You can also purchase a Micro SD memory adapter, which allows Micro SD memory cards to be used in SD-compatible devices. Before using with a reader, you will need to insert the Micro SD memory card into the Micro SD memory adapter.



- With the label side of the Micro SD memory card facing up, insert the card into the Micro SD memory adapter and gently slide the card until it is fully inserted.

To remove the Micro SD memory card from the memory adapter:

  - Hold the front edge of the Micro SD memory card and gently pull outward to remove it from the adapter.



22 Your Phone

  




Phone Basics

Displaying Your Phone Number



In case you forget your phone number, your phone can remind you.

To display your phone number:



- Press  for **Menu**, followed by  . Your My Name Card is displayed with your phone number.

Making Calls


Making Regular Calls

From the Idle screen, enter the phone number and press the  key. To end the call, press the  key or close the phone.

Correcting the Number

To clear	Press the
the last digit displayed	 key
the whole display	 key and hold it

Redial the Last Number

To redial your last outgoing call, press  twice. See "Call History" on page 44 for further information.

Calling Emergency Numbers

You can place calls to 911 (dial    and press ), even if your phone is locked or your account is restricted.


Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.

- Press the ▲ key to increase the volume level and the ▼ key to decrease the level.
- In Idle mode, you can also adjust the ringer volume using these keys.


Dialing and Saving Phone Numbers with Pauses



You can dial or save phone numbers with pauses for use with automated systems, such as Voice Mail or credit card billing numbers. There are two types of pauses available on your phone:


- **Hard pause:** sends the next set of numbers when you press .
- **2sec Pause:** automatically sends the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine 2-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter a phone number from Idle mode.
2. Press right soft key  for **Options** and select **Hard Pause** or **2sec Pause**.




3. Enter additional numbers.
4. Press  to dial the number.
— or —
Press right soft key  for **Options** and select **Save** to save the number in your Contacts list.


When dialing a number with a hard pause, press  to send the next set of numbers.


Dialing from Your Contacts List


You can select a Contact and dial the number automatically.

To dial directly from a Contacts entry:

1. Press  for **Menu** and then press  for **Contacts**.
2. Press  to **Find**.

Tip: In idle mode, press the right soft key  to quickly retrieve the Contacts list.

3. Scroll up or down to highlight the desired entry and press  to make the call.

Tip: If the desired entry contains more than one phone number, scroll up or down to display the number you wish to call and press  to make the call.

Using One-Touch/Two-Touch Speed Dialing

You can store up to 98 numbers in your phone's speed dial memory to make contacting friends and family as easy as pressing a few buttons. For information on setting up this feature, see "Speed Dials" on page 41.

With this feature, you can dial Speed Dial entries using one key press for locations 2-9 and two key presses for locations 10-99.

To use One-Touch Dialing for Speed Dial locations 2-9:

- Press and hold the appropriate key for approximately two seconds. (The display confirms that the number has been dialed when it shows the saved caller ID or number.)

To use Two-Touch Dialing for Speed Dial locations 10-99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds. (The display confirms that the number has been dialed when it shows the saved call ID or number.)

Note: Your phone also supports 1 to 4 digit dialing. If you enter a number using the keypad without holding the last number and then press , your phone will dial those digits.

For example, if you enter   and press , it dials 21, not the number stored in memory location 21.








Answering Voice Calls

Your phone notifies you of incoming calls in the following ways:



- The phone rings and/or vibrates.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts list, the entry's name is displayed. The caller's phone number may also be displayed, if available.

Answering Calls




1. If necessary, open the phone.
2. Press the  key to answer the incoming call.
 - When the **Flip Open** option in the **Call Answer** menu is activated, you can answer a call by opening the phone (**Menu**     ).
3. To end the call, press the  key or close the phone.

The following options are also available to handle an incoming call:

- Press either of the side volume keys to quiet the ringer.
- Press the right soft key  or  key to **Ignore** the incoming call and send it directly to your Voice Mail box.


Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen. You have two options:

- Press the left soft key  to **Save** the number to your Contacts. If the number is already in your Contacts, press the left soft key  to **Call** the number back. See "Call History" on page 44 for further information.
- Press the right soft key  for **Detail** to view information about the missed call.

In-Call Options

Using the Menu Options






Select actions by pressing the right soft key  for **Options** during a call. A list of options is displayed that allows you to perform different actions during the course of a call.

The following options are available:


- **1st Key Mute:** allows you to activate or deactivate DTMF tones. See "Tone Length" on page 134 for more information.
- **2nd Contacts:** accesses the Contacts menu options. See "Contacts" on page 36.
- **3rd Messaging:** allows you to check for Voice Mail and notifications. See "Messaging" on page 48.
- **4th 3-Way Call:** allows you to talk to two different people at the same time. See "Making Three-Way Calls" on page 29.
- **5th Call History:** checks your call log for Recent, Dialed, Received and Missed calls. You can also erase the logs and view call times from this menu. See "Call History" on page 44.
- **6th Voice Memo:** allows you to record the other person's conversation during a call. For more information, see "Voice Memo" on page 112.
- **7th Tools:** accesses the Tools menu options. See "Tools" on page 100.
- **8th Phone Info:** displays your phone's hardware and software versions. See "Phone Information" on page 138.

Making Three-Way Calls

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Enter a number you wish to call and press .
2. Once you have established the connection, press the right soft key  for **Options**, followed by  for **3-Way Call**.
3. Dial the second number and press .
4. When you're connected to the second party, press  again to begin your three-way call.


If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Tip: You can also begin a three-way call by displaying a phone number stored in your Contacts, Call History, or Messaging menus. To call the third party, press .

Mute/UnMute

You can place the current call on hold by pressing the left soft key  for **Mute**. To reactivate your phone's microphone, press the left soft key  again for **UnMute**.

End-of-Call Options

After receiving a call from or making a call to a phone number that is not in your Contacts, the phone number and the duration of the call are displayed. Press the left soft key  to **Save** the number to your Contacts.

If the number is already in your Contacts, press the left soft key  to **Call** the number back.

Note: The End-of-Call options are not displayed for calls identified as Unknown ID or Restricted numbers.

Saving Phone Numbers


Your phone can store up to 500 entries (numbers/e-mails/URLs) in multiple categories (Mobile, Home, Work, Pager, E-mail, Nickname, Group, etc.). The Contacts capacity is based on number of entries, not on number of contacts. (For more information, see "Adding New Entries" on page 36.)

Entering Text

Selecting a Character Input Mode

Your phone provides convenient ways to enter words, letters, punctuation, symbols, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when sending text messages).

To change the character input mode:

1. When you display a screen where you can enter text, press the right soft key  for **Options**.

2. Select a character input mode:

- **1st Alpha** to enter characters with the keypad (see page 32).
- **2nd T9** to enter characters using predictive T9 Text Input (see the next topic).
- **3rd Symbols** to enter symbols (see page 33).
- **4th Number** to enter numbers (see page 33).
- **5th Quick Text** to enter prewritten phrases. This option is available only for fields where Quick Text can be entered.
- **6th Shortcut** to enter common Web text. This option is available only for fields where Shortcut text can be entered.
- **7th Text Options** to configure these options: Auto Capital, Used Word Dic., Display Cand., Prediction Start, Input Language, and Insert Space.


Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your phone by pressing keys just once per letter. To select the **T9** mode when entering text, see "Selecting a Character Input Mode" on page 30.

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type.) If the word you want does not display after you have entered all the letters, press **0+>** to scroll through additional word selections. To accept a word and insert a space, press **#**. If you make a mistake, press **<** to erase a single character. Press and hold **<** to delete an entire entry.



To enter text using T9:

1. From the text entry screen (for example, a new event in


 

 

scheduler), press the right soft key  for **Options** and select **T9**.


- Use the keypad to enter the new event. (For example, to enter "Meeting", press  once,  twice,  once,  once,  once, and  once.)

Entering Characters with the Keypad


To enter characters by tapping the keypad, select the **Alpha** mode (see "Selecting a Character Input Mode" on page 30). Press the corresponding key repeatedly until the desired character appears. When the  icon is shown at the bottom of your screen, the first letter of the first word is capitalized and following letters are lowercase. The  key can be used to select the case desired.


To enter text using Alpha:


- From a text entry screen (for example, a Contacts entry), press the right soft key  for **Options** and select **Alpha**.
- Use your keypad to enter the contact's name. (For example, to enter "Bill", press  twice,  three times,  three times, and  three times again.) Characters scroll as follows:


 . , @ 1 ? ! * # /


 P Q R S 7
(p q r s 7 β)

 A B C 2 Ç À Á Ä Å
(a b c 2 ç à á ä å)

 T U V 8 Ù Ú Û Ü
(t u v 8 ù ú û ü)

 D E F 3 É Ê Ë Ì
(d e f 3 é ê ë ì)


 W X Y Z 9
(w x y z 9)


 G H I 4 Î Ï
(g h i 4 î ï)

 0

 J K L 5
(j k l 5)

 Space

 M N O 6 Ô Ó Ö Ñ
(m n o 6 ô ó ö ñ)

 Change case

After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Entering Numbers and Symbols

To enter numbers:

- Select the **Number** mode and press the appropriate key. (See “Selecting a Character Input Mode” on page 30.)

To enter symbols:

- Select the **Symbols** mode. (See “Selecting a Character Input Mode” on page 30.) To enter a symbol, press the appropriate key displayed above the desired symbol character.

Using Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the Received call. If you do not want your number displayed when you make a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:

1. Press  .
2. Enter the number you want to call.



3. Press .


To permanently block your number, call the Customer Service department of your network service provider.

Tip: If you want to block the displaying of your phone number for the calls you make, you can do so by typing specific characters before you type the number you want to dial. You can also automate this. For information on prepending numbers to all of your phone calls automatically, see "Auto Prepend" on page 145.

Responding to Call Waiting

When you're on a call, Call Waiting alerts you of incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

 
- Press . (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- Press  again.

SPARK Menu

SPARK are TELUS's mobile entertainment, information and messaging services. From the SPARK menu, you can easily access messaging, mobile music, TV, radio, GPS navigation and download ringtones, images, games, applications and videos.



To access the SPARK menu:

- Press the SPARK menu key (right navigation key) to slide to the SPARK menu.


Favourites Menu

The Favourites menu allows you to add shortcuts to quickly access the applications and services that you use most often.


To add a favourite:

1. From the Favourites menu, select **Add Favourite**.
2. Select the shortcut from the Shortcut selection list that you would like to add to the Favourites menu.


To replace a favourite:

1. Highlight the favourite that you would like to replace.
2. Press the left soft key  for **Options**.
3. Select **Replace**.
4. Select the shortcut from the Shortcut selection list that you would like to add to the Favourites menu.

To remove a favourite:

1. Highlight the favourite that you would like to remove.
2. Press the left soft key  for **Options**.
3. Select **Remove**.

To remove all favourites:






1. From the Favourites menu, press the left soft key  for **Options**.
2. Select **Remove All**.

Contacts




Use the Contacts menu to store your phone numbers and other contact information. You can specify the following information for each contact you add to your Contacts list: Mobile, Home, Office, Pager, Fax, E-mail, and Other. You can store up to 500 entries.

Adding New Entries


Adding New Entries in Idle Mode

1. Enter a new phone number and press the right soft key  for **Options**.
2. Using the navigation keys, select **Save** and press .
3. Select **New Entry** and press .
4. Select the type of number to be stored: **Mobile, Home, Work, Pager, or Others**. To select the category, press the Up or Down navigation key and then press .
5. Enter a name. For information about entering text, see "Entering Text" on page 30.
6. Press the Up or Down navigation keys to edit information in the other categories.
7. Press the left soft key  for **Done** to save the entry.





Adding New Entries from the Contacts Menu


1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **Add New Entry**.
4. Enter the new contact information. See "Adding New Entries in Idle Mode" on page 36.

Finding, Editing or Dialing Contacts

You can access your contact list from the Idle screen by pressing the right soft key .

To find an entry from the Contacts menu:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **Find**. A list of your Contacts is displayed. You can find a specific contact in one of the following ways:
 - Scroll through the list using the Up and Down navigation keys.
 - Enter the first few letters to locate the desired Contact. If more than one Contact appears, scroll through the list using the Up and Down navigation keys.
4. To call the Contact, press .

To edit the Contact, press the right soft key  for **Options**, and select **Edit**. See "Adding New Entries" on page 36.

Contacts

Selecting Ringer Types to Identify Entries

You can assign ringer types to different Contact entries so you can identify callers by the ringer you hear when they call.

To assign a ringer to a contact:




1. Display the edit screen for the Contact. See "Finding, Editing or Dialing Contacts" on page 37.
2. Press the navigation key down until **Ring** is selected and press **OK**.
3. Using the navigation keys, select a ringer category and press **OK**.
4. Press the navigation key up or down to highlight and listen to the desired ringer. Press **OK** to select the desired ringer.
5. Press the left soft key **Done** to save the changes to the contact entry.

Selecting Pictures for Entries

You can assign a picture to a Contacts entry so that it appears on the displays whenever that person phones you.

To assign a picture to a contact:

1. Display the edit screen for the Contact. See "Finding, Editing or Dialing Contacts" on page 37.
2. Press the Up navigation key to select the photo area (if there is no photo, this area will be labelled **Add Photo**) and press the right soft key **Add**. (If a photo has already been assigned, the right soft key will say **Change**.)

- Using the navigation keys, select one of the following options:
 - No Image:** Leave the picture blank.
 - New Picture:** Use the camera to take a new picture. See "Camera" on page 72.
 - My Pictures:** Select an image from your **Photo Gallery**, **MMS**, or **Transferred Images**. See "Image Album" on page 77.
 - My Content:** Select an image from your downloaded images.
 - Preset Images:** Assign a preset image of **People**, **Animal**, or **Other**. Select the image and the press right soft key  for **Select**.
- When you find the image, highlight it and press the left soft key  for **Assign**.
- Press the left soft key  for **Done** to save the changes to the contact entry.



Contacts

Groups

Assigning Contacts to Groups








You can associate a preset group name to your entries to help you sort them easier in the Contacts. Once contacts are organized into groups, you can send text and multimedia messages to all members of a group simultaneously. Additionally, you can assign a unique Picture ID or ringer to the group.

The preset group names already programmed into your phone are:

- **Unassigned**
- **Family**
- **Friends**
- **Colleague**
- **VIPs**
- **Empty**








Note: Contacts are automatically assigned to the Unassigned group if they are not associated with another group.

To associate an existing contact to a group:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **Groups**.
4. Highlight the desired Group and press right soft key  for **Options**.
5. Press  for **Add Member**.
6. Highlight the desired contact and press  to select and then press the left soft key  for **Done**.

Sending Messages to Groups






 

 
To send text messages to all the Contacts in a group:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **Groups**.
4. Highlight the desired group.
5. Press the left soft key  for **Send Msg**.
6. Highlight the contact and press  to check/uncheck it. Repeat for any additional contacts that you wish to add.
7. Press the left soft key  for **Done**.
8. Press the left soft key  for **Next**.

9. Create the text message to send. See "Text & Multimedia Messages" on page 51.

Group Options

To add members, rename, delete, or set ringers:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **Groups**.
4. Highlight the desired group, if applicable.
5. Press the right soft key  for **Options**.
6. Select an option:
 - **Add Member** Select the new group member and press the left soft key  for **Done**.
 - **Rename Group:** You can rename existing groups. Use the  key to delete the text. After entering the new name, press the left soft key  for **Done**.
 - **Erase Group:** You can delete only the groups that you have created, not the built-in ones.
 - **Set Ringer:** You can assign a ringer to a group. Select the ringer and press .







Contacts



Speed Dials

You can assign up to 98 phone numbers from the Contacts list that you use most frequently to the number keys (2 to 99). You can dial them easily whenever you want, simply by pressing and holding the associated number key.

Creating Speed Dial Entries






1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **Speed Dial #s**. A list of current speed dials is displayed.
4. Using the navigation keys, select a number and press the left soft key  for **Assign**.


Note: Memory location 1 is reserved for your Voice Mail server number.

5. Select an entry from the list and press .
6. Select a label from the list and press the left soft key  for **Assign**.

Editing Speed Dial Entries

To edit the number assigned to a speed dial location:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **Speed Dial #s**.
4. Using the navigation keys, select the speed dial number you want to edit.
5. Select an option:
 - To replace the contact with another one, press the left soft key  for **Edit**.
 - To erase the number, press the right soft key  for **Options** and select **Erase**.

- To erase all the numbers, press the right soft key  for **Options** and select **Erase All**.






Using Speed Dial

In Idle mode, to speed dial the numbers assigned to the 2 to 99 keys, press and hold the appropriate key. See page 25 for information.

My Name Card

This function is similar to an entry in the Contacts list, except that it contains your own contact information, like a business card. You can transfer it to another Bluetooth-enabled device or send it in messages.

To view the name card:

1. Press  for **Menu**.
2. Press  for **Contacts**.
3. Press  for **My Name Card**.
4. Press the right soft key  to **Edit** or select left soft key  for **Send Contact**. This option lets you send your name card to a recipient listed in your contacts. For more information, see "Contacts" on page 36.




Contacts

Call History










With Call History, you can:

- view calls you missed, received, or dialed
- view the length of calls made and received

Note: You can access the most recent numbers in the three types of call records by pressing the  key while in Idle mode. Press the Left and Right navigation keys to switch between the call types.


Viewing Your Call History

To view an entry in your call history:

1. Press  for **Menu**.
2. Press  for **Call History**.
3. Select an option:
 -  **Missed Calls:** displays the calls you missed.
 -  **Incoming Calls:** displays your received calls.
 -  **Outgoing Calls:** displays your dialed calls.
 -  **Recent Calls:** displays your most recent calls.
 -  **Erase History:** deletes your call history.
 -  **Call Timers:** displays the time you spent on the phone. See "Call Timers" on page 46.
4. To call a number, highlight the number and press .

Note: You cannot make calls from Call History to entries identified as Unknown or Restricted.

Call History Options

For additional information on a particular call, highlight a Call History entry and press . The time and date of the call is displayed.

Tip: You can also scroll between Call History categories by pressing the navigation key left or right.

Press the right soft key  for **Options** to select one of the following options for this entry. Depending on the Call History category, not all options may be available:

- **Send Msg:** sends a **Message** or **Postcard** (a picture taken with your camera) to the person. See "Messaging" on page 48.
- **Save:** saves the number to your Contacts as a **New Entry** or **Existing Entry**. See "Contacts" on page 36. You cannot save phone numbers already in your Internal Contacts or from calls identified as Unknown ID or Restricted.
- **Prepend** to add a dialing prefix to the phone number prior to calling. (Appears only if this number is not already stored as a Contact.)
- **Erase:** removes the number from your Call History.
- **Erase All:** removes all the entries from your Call History.
- **Show Contacts:** displays Contacts information.

Erasing History

To delete your call records:


1. Press **OK** for **Menu**.
2. Press **2** for **Call History**.
3. Press **5** for **Erase History** and select an option:
 - **1** **Missed Calls**: Delete the calls you missed.
 - **2** **Incoming Calls**: Delete your received calls.
 - **3** **Outgoing Calls**: Delete your dialed calls.
 - **4** **Recent Calls**: Delete your most recent calls.
4. Confirm the deletion by selecting **Yes** and pressing **OK**.


Call Timers


Call Timers allows you to check the time of the last call or the total air time since your phone was activated on the network. **These times are not meant for billing purposes.**

To view the Call Timers:

1. Press **OK** for **Menu**.
2. Press **2** for **Call History**.
3. Press **6** for **Call Timers**.
4. Select an option:
 - **1** **Last Call**: displays the length of the last call.
 - **2** **Recent Calls**: displays the length of all the recent calls.
 - **3** **Lifetime**: displays the total length of all the calls since the timer was last reset.



- **4^{gpi} Data Transferred:** displays the amount of data transferred on your phone.
- **5^{pl} Connection Time:** displays the connection time of your data session.
- **6^{trnd} Reset Timer:** resets all the timers. Select **Yes** or **No** and press .

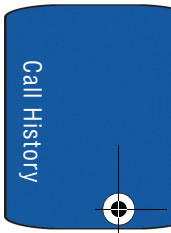
5. Press the  key to return to the Idle screen.



Call History

Messaging

You can send and receive a range of different message types from your phone. Press  for **Menu**, followed by  for **Messaging**.

Tip: In Idle mode, press the Messaging Key  to quickly retrieve the Messaging menu.

This menu has the following messaging options:

- **Voice Mail:** allows you to access your voice mailbox and check for voice messages.
- **Text and Multimedia:** allows you to compose and send Text and Multimedia messages to other phones able to receive the messages.
- **Web Alert:** allows you to view specific Web alerts from your service provider.
- **E-Mail:** allows you to access your E-mail messages.
- **IM & Chat:** allows you send and receive messages to and from popular IM (Instant Messaging) services and chat.
- **Short Codes:** allows you to view specific information and links from your service provider.

Voice Mail





Setting Up Your Voice Mail

All unanswered calls to your phone are automatically transferred to your voice mail, even if your phone is in use or turned off. Therefore,

you should set up your voice mail and personal greeting as soon as your phone is activated.


Note: You must request this feature from your service provider for it to work correctly.

To set up voice mail:

1. Press  for **Menu**, followed by   .
2. Follow the system audio prompts to create your passcode, record your greeting, and record your name announcement.

Voice Mail Notification



There are several ways your phone alerts you of a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By displaying  at the top of your screen.

New Voice Mail Message Alerts


When you receive a new voice message, your phone alerts you and prompts you to call to check your voice mail.

 
To call your voice mail immediately after receiving a message:

1. Press the  key to listen to the message.
2. Press the  key to return to the Idle screen.

To display your Voice Mail:

- Press  for **Menu**, followed by   .

Tip: You can also press the  key to set up and check your voice mail.

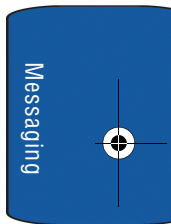

Important: When you are roaming off the network, you may not receive notification of new voice mail messages. It is recommended that you periodically check your voice mail by dialing 1 + area code + your Phone Number. You will be charged roaming rates when accessing voice mail while roaming off the network.

Note: Your phone accepts messages even when it is turned off. However, you are notified of new messages only when your phone is turned on and you are in a Service Area.

Retrieving Your Voice Mail Messages

You can access your voice mail from the Messaging menu.

To use the menu keys to access your voice mail:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Voice Mail**.
4. Press  for **Dial Voice Mail**.




Note: You are charged for airtime minutes when you are accessing your voice mail from your phone.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice messages.

To clear the icon from the display screen:

1. Press  for **Menu**.
2. Press  for **Messaging**.








3. Press  for **Voice Mail**.
4. Press  for **Clear Icon**.
5. Press the navigation key up to select **Yes** and press .

Text & Multimedia Messages

Create New

 
Using your phone, you can send text and multimedia messages to other mobile phones in North America and the rest of the world, depending on your carrier.


To create a text message:




1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Send New**.
5. Enter the phone number or e-mail address manually, or, to send the message to a saved contact, press the Down navigation key, highlight **Contact List** and press . Highlight the desired contact and press the  key. When you are finished adding contacts, press the left soft key  for **Next**.

If you wish to send your message to multiple numbers or addresses, repeat step 5. Use the navigation keys to move up and down your list of addressees. You can send a message to a maximum of 10 numbers.

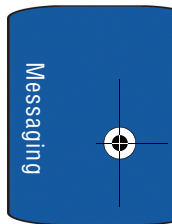

6. When you are finished entering numbers or addresses, press the left soft key  for **Next**.



Tip: For the next step, you can change text entry mode, by pressing the right soft key  and select a text entry option. See "Selecting a Character Input Mode" on page 30.

7. Specify a Subject and create your message using the keypad as follows.
 - To add a Subject line to your message, highlight the **Subject** box using the navigation keys. Enter the subject text. When you are finished press the left soft key  for **Done**.
 - To write the body of your message, highlight the main body box using the navigation keys. Enter the text of the message. When you are finished press the left soft key  for **Done**.
8. To send the message, press the left soft key  for **Send**. If you want to add multimedia files to the message, continue with the next procedure.

 To Add sound, picture or video files to a message:

1. From the message composition screen, highlight **More** using the navigation keys and press .
2. Highlight **Add Sound**, **Add Picture**, or **Add Video** using the navigation keys and press .
3. Select an option:

For audio files, select **Record New** or **Sound Album**.

- If you selected **Record New**, you will be prompted to record a new voice memo. For more information on recording voice memos, see "Voice Memo" on page 112.

- If you selected **Sound Album**, select the album with the sound clip you want to attach, then highlight the desired clip or voice memo and press **OK**.

For pictures, select **Take Picture** or **Image Album**.

- If you selected **Take Picture**, the camera will start. For more information, see "Taking Pictures" on page 72.
- If you selected **Image Album**, select the album with the image you want to attach, then highlight the desired photograph and press **OK**.

For videos, select **Record Video** or **Video Album**.

- If you selected **Record Video**, the camcorder will start. For more information, see "Taking Videos" on page 80.
- If you selected **Video Album**, select the album with the video you want to attach, then highlight the desired video. To view the video press **OK**. To attach the video, press the left soft key **≡** for **Add**.

 
4. The file is attached to your message. You can now finish composing and send your message.

Adding slides to your message

Messages can contain up to 1000 characters. For lengthy messages, you can divide the message text among two slides. Each slide presents one screen of information. Each slide can contain its own sound and picture attachments.



To add slides to a message:

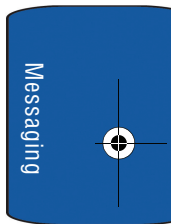1. From the message composition screen, highlight **More** using the navigation keys and press **OK**.
2. Highlight **Add Slide** using the navigation keys and press **OK**.



3. A new body box appears below the first box. You can move between the first and second slides using the Up and Down navigation keys. You can now finish composing and send.

Changing sending options for messages


1. From the message composition screen, highlight **More** using the navigation keys and press the right soft key  for **Options**.
2. Highlight **Sending Options** and press .
3. Select the option you wish to change. The options available to you depend on the type of message you created.

SMS message options (SMS messages are typically text-only messages.)

- **CallBack Number:** allows you to change the callback number for this message. The default callback number is your mobile phone number.

MMS message options (MMS messages typically have multimedia attachments.)






- **Read Report:** allows you to turn Read Report **Off** or **On**. When On, you will be notified when your message is read by the message's recipient.
- **Delivery Report:** allows you to turn Delivery Report **Off** or **On**. When On, you will be notified when your message is received by the message's recipient.
- **Priority:** allows you to change the priority of the message between **High**, **Normal**, and **Low**.
- **CC:** allows you to add a CC address to your message.
- **BCC:** allows you to add a BCC address to your message.
- **Slide Timing:** allows you set the duration (in seconds) of each slide.

4. When finished with your messaging options, press the  key to return to the message window.

Saving messages

You can save a draft of your message prior to sending it. This is useful if you intend to send the message again in the future or if you cannot complete the message and want to do so at a later time.

To save a draft of a message:

 
1. From the message composition screen, highlight **More** using the navigation keys and press the right soft key  for **Options**.
 - Press  for **Save to Drafts**. The message is stored in the **Drafts** folder. When the message is sent, the draft is deleted.
 - Press  for **Save Text**. The text of your message is now stored as a **Quick Text** message.
 - For MMS messages (which typically contain sound, photograph or video clip files) you can select  for **Save As Template**. Enter a name for the template and press . The message is now stored in your **Templates** folder. Unlike draft messages, templates are not deleted when sent.
2. You can now continue to compose or send your message.





Inbox

This folder contains all your received text and multimedia messages. From this folder, you can view your messages, reply to or forward the message to another destination.

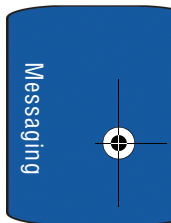
To view a message in your inbox:

1. Press  for **Menu**.








2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Inbox**. Your messages appear in a list.
5. Highlight the desired message and press . The message appears on screen.

To reply to a message:

1. With the message open, select the left soft key  for **Reply**.
2. Compose your reply message. For more information, see "To create a text message:", beginning at step 6.

Note: The address field is already filled in when replying to a message.

To select Inbox options:








1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Inbox**. Your messages appear in a list.
5. Press the right soft key  for **Options**.
 - **Reply with Copy** (SMS) or **Reply to all** (MMS): allows to reply to the sender of the message with the messaged copied into your reply.
 - **Forward**: allows you to forward a copy of the message to another person.
 - **Move to Saved**: allows you to move the message to the Saved list.

 
- **Save Address:** allows you to save an address in your Contacts list.
- **Message Details:** allows you to view information about the message, such as date and time.
- **Erase:** allows you to delete the message.
- **Erase Multiple:** allows you to select and delete several messages.
- **Erase All:** allows you to delete all the messages in the list.




Outbox/Sent

This folder contains messages you have sent and saved to your Outbox or are waiting to send. From this folder, you can select and resend messages.



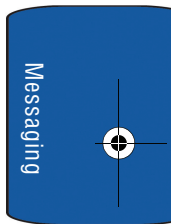


To forward or resend your message:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Outbox/Sent**. Your messages appear in a list.
5. Highlight the desired message and select one of the following options:
 - If the message was successfully sent previously:
 - To forward the message to a different recipient, press the left soft key  for **Forward**, and specify the new recipient.
 - To resend the message, press the right soft key  for **Options** and press  to **Resend**. Your message will be sent to the same recipient. See page 51 for information.








- If the message failed to be sent previously:
 - To re-send, press the left soft key  for **Re-send**. Another attempt is made to send your message to the original recipient.
 - To forward the message to another recipient, press the right soft key  for **Options** and press  to **Forward**.

To access Outbox/Sent options:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Outbox/Sent**. Your messages appear in a list.
5. Press the right soft key  for **Options**.
 - **Resend** or **Forward**: allows you to send your message again either to the original recipient or to a different one.
 - **Move to Saved**: allows you to move the message to the Saved list.
 - **Save address**: allows you to save an address in your Contacts list.
 - **Message Details**: allows you to view information about the message, such as date and time.
 - **Message Status**: allows you to view the **Delivery Status** and **Read Status**.
 - **Erase**: allows you to delete the message.
 - **Erase Multiple**: allows you to select and delete several messages.
 - **Erase All**: allows you to delete all the messages in the list.

Templates






This folder contains predefined messages for common occasions, as well as multimedia messages you have saved as templates. To compose a multimedia message using a template:

 
1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Templates**. Your templates appear in a list.
5. Highlight the desired template and press .
6. Compose your message. For more information, see "To create a text message:", beginning at step 5 on page 51. You can modify the message as desired.

Drafts

This folder contains drafts of unfinished or unsent text and multimedia messages. From this folder, you can complete and send your messages.

To open a saved draft:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Drafts**. Your draft messages appear in a list.
5. Highlight the desired draft message and press .
6. Complete your message. For more information, see "To create a text message:", beginning at step 5 on page 51. You can modify the draft message as desired.

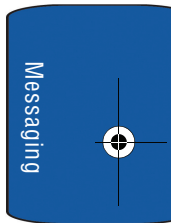

Saved

This folder contains saved text and multimedia messages. Saved messages will not automatically expire. Delete them manually.

To open a message in the Saved folder:

1. Press **OK** for **Menu**.
2. Press **4 msg** for **Messaging**.
3. Press **2 msg** for **Text and Multimedia**.
4. Press **6 msg** for **Saved**. Your saved messages appear in a list.
5. Highlight the desired saved message and press **OK**.

Erase Messages

You can erase messages at anytime from the Inbox, Outbox/Send, Draft or Saved message folders.

To erase the messages from the desired folder:

1. Press **OK** for **Menu**.
2. Press **4 msg** for **Messaging**.
3. Press **2 msg** for **Text and Multimedia**.
4. Press **7 msg** for **Erase Messages**.
5. Press **1 msg** for **Inbox**, **2 msg** for **Outbox**, **3 msg** for **Drafts**, or **4 msg** for **Saved**, **5 msg** for **Templates**, or **6 msg** for **All Messages**.
6. Press the navigation key left or right to select **Yes** and press **OK**.

Settings

There are several options associated with messages. The Settings menu allows you to customize the options to fit your preferences.

To access the Settings menu:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Text and Multimedia**.
4. Press  for **Settings**.

 
The following options are available:

SMS Options

- **Callback Number:** allows you to change the callback number for this message. The default callback number is your mobile phone number.

MMS Options

- **Read Report:** allows you to turn Read Receipt **Off** or **On**. When On, you will be notified when your message is read by the message's recipient.
- **Delivery Report:** allows you to turn Delivery Receipt **Off** or **On**. When On, you will be notified when your message is received by the message's recipient.
- **Priority:** allows you to change the priority of the message between **High**, **Normal**, and **Low**.
- **Auto Download:** allows you to turn Auto Downloading **Off** or **On**. When On, the attachments for multimedia messages will automatically be downloaded to your phone.
- **Rejection Settings:** allows you to adjust the Rejection settings for your phone. The options available are:

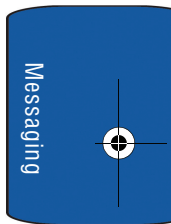

- **By Size:** allows you to reject multimedia messages that over a specified size.
- **Reject Adv.:** allows you to reject multimedia messages that are labeled as advertising (Adv.)
- **Number/Email:** allows you to reject multimedia messages sent from a specific phone number (MIN) or Email address.

Save to Outbox: allows you to adjust whether sent messages are saved in your Outbox. Your options are:



- **Auto Save:** automatically saves a copy of the outgoing message in the filed folder.
- **Prompt:** prompts you to save a copy of the outgoing message.
- **Do not Save:** does not save a copy of the outgoing message.

Auto Delete Inbox: allows you to indicate whether read messages are automatically deleted from your Inbox.


Default Entry Mode: the Entry Method allows you to set the default character input method for new text messages. You can select between:

- **T9 Word:** is a predictive text entry mode.
- **Alpha:** is the standard keypad text entry mode.
- **Number:** is the standard numeric entry mode.

Quick Text: Quick Text messages are used to enter common responses to questions. A Quick Text can be selected and automatically entered into the message. Quick Text can also be customized to whatever you want by editing the 9 pre-set messages already stored in your phone.





- To edit a Quick Text message, highlight the desired Quick Text message and press . Edit the message and press the left soft key  for **Done** when finished.

Auto Scrolling: The scroll timer allows you to set the length of time a message takes to scroll across the screen. Options are **Off**, **3 Seconds**, **5 Seconds** or **10 Seconds**.

Message Reminder: This option allows you to configure how often you are notified of new text messages. Options are **Off**, **Once**, or **Every 2 min**. To select **30 minutes** or **Always on**, select **Every 2 min**, press , and then select a different option.

Alert on call: This option allows you to indicate whether your phone alerts you to a new message during a phone call.

Memory Info

 
Memory Info (**Menu**   ) displays how much memory is available for messages. Press the left soft key  for **Done** to return to the previous screen.

Web Alert

Your phone is capable of receiving web alerts from online providers. Consult with your Service Provider for more details.

To access the web alert service (if available):

1. Press  for **Menu**.

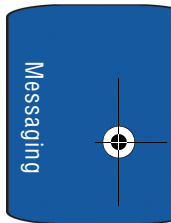




2. Press  for **Messaging**.
3. Press  for **Web Alert**.
4. Follow the on-screen instructions.

E-Mail

Your phone is capable of accessing online e-mails using the preloaded My Email application. For more details, please visit <http://www.telusmobility.com/email>.



To access the online e-mail service (if available):

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **E-Mail**.
4. Select **Get New E-mail, Online E-Mail** or **My Email** and follow the on-screen instructions.

IM & Chat

Your phone is capable of engaging in online chat sessions using Windows Live Messenger. For more details, please visit <http://www.telusmobility.com/msn>.





To access IM and Chat services (if available):

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **IM & Chat**.
4. Select **Get New IM & Chat, Online IM & Chat** or **Messenger** and follow the on-screen instructions.







Short Codes

 
Your phone is capable of accessing pre-configured short codes. Short codes, also known short numbers or Common Short Codes (CSC) are special telephone numbers that are shorter than typical telephone numbers. Consult your service provider for more details.

To access Short Codes:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Short Codes**.
4. Press  for **Short Code List** and follow the on-screen instructions.

To create a short code template:

1. Press  for **Menu**.
2. Press  for **Messaging**.
3. Press  for **Short Codes**.
4. Press  for **Create Template**.
5. Use the keypad to enter the code.
6. Press the down navigation key to enter a title. Press the left soft key  for **Done** after you enter the title.
7. Press the left soft key  for **Save**.

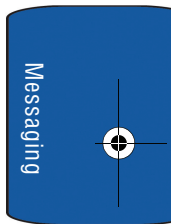

Menu Functions

The following list shows the menu structure and indicates the number assigned to each option.

1: Missed Alerts

2: Call History

- 1: Missed Calls
- 2: Incoming Calls
- 3: Outgoing Calls
- 4: Recent Calls
- 5: Erase History
 - 1: Missed Calls
 - Yes/No
 - 2: Incoming Calls
 - Yes/No
 - 3: Outgoing Calls
 - Yes/No
 - 4: Recent Calls
 - Yes/No
- 6: Call Timers
 - 1: Last Call
 - 2: Recent Calls
 - 3: Lifetime
 - 4: Data Transferred
 - 5: Connection Time
 - 6: Reset Timer

3: Contacts

- 1: Find
- 2: Add New Entry
- 3: Speed Dial #s
- 4: Groups
 - 1: Unassigned
 - 2: Family
 - 3: Friends
 - 4: Colleague

5: VIPs

6: Empty

7: Empty

5: My Name Card

4: Messaging

- 1: Voice Mail
 - 1: Dial Voice Mail
 - 2: Clear Icon
- 2: Text and Multimedia
 - 1: Send New
 - 2: Inbox
 - 3: Outbox/Sent
 - 4: Templates
 - 5: Drafts
 - 6: Saved
 - 7: Erase Messages
 - 1: Inbox
 - 2: Outbox
 - 3: Drafts
 - 4: Saved
 - 5: Templates
 - 6: All Messages
- 8: Settings
 - 1: SMS Options
 - 1: Callback Number
 - 2: MMS Options
 - 1: Read Report
 - On/Off
 - 2: Delivery Report
 - On/Off
 - 3: Priority
 - High
 - Normal
 - Low
 - 4: Auto Download
 - On/Off
 - 5: Rejection Settings

- 1: By Size
 - Off
 - Over 150Kb
 - Over 100Kb
 - Over 50Kb
 - 2: Reject Adv.
 - On/Off
 - 3: Number/Email
 - 1-5: Empty
 - 3: Save to Outbox
 - Auto Save
 - Prompt
 - Do not Save
 - 4: Auto Delete Inbox
 - On/Off
 - 5: Default Entry Mode
 - T9 Word
 - Alpha
 - Number
 - 6: Quick Text
 - 1: How are you?
 - 2: Hi there!
 - 3: Thanks!
 - 4: I'll call you later.
 - 5: On my way.
 - 6: Busy right now.
 - 7: Call me.
 - 8: Running late, will be there soon.
 - 9: Where are you?
 - 10-20: [Empty]
 - 7: Auto Scrolling
 - Off
 - 3 Seconds
 - 5 Seconds
 - 10 Seconds
 - 8: Message Reminder
 - Off
 - Once
 - Every 2 min
 - 30 minutes
 - Always on
 - 9: Alert on Call
 - On/Off
 - 9: Memory Info
 - 3: Web Alert
 - 4: E-mail
 - Get New E-Mail
 - Online E-Mail
 - My Email
 - 5: IM & Chat
 - Get New IM & Chat
 - Online IM & Chat
 - Messenger
 - 6: Short Codes
 - 1: Short Code List
 - 2: Create Template
- 5: Camera & Video**
- 1: Camera
 - 1: Take Photo
 - 2: Image Album
 - 1: Photo Gallery
 - 2: MMS
 - 3: Transferred Images
 - 3: Settings
 - 1: Save To
 - Phone
 - Memory Card
 - 2: View Mode
 - Wide Screen
 - Full Screen
 - 4: PictBridge Print
 - 2: Camcorder
 - 1: Take New

- 2: Video Album
 - 1: Video Gallery
 - 2: MMS
 - 3: Transferred Videos
- 3: Settings
 - 1: Save To
 - Phone
 - Memory Card

- 3: My Albums
 - 1: Sound Album
 - 1: Sound Gallery
 - 2: MMS
 - 3: Transferred Sound
 - 2: Image Album
 - 1: Photo Gallery
 - 2: MMS
 - 3: Transferred Images
 - 3: Video Album
 - 1: Video Gallery
 - 2: MMS
 - 3: Transferred Videos
 - 4: Online Album
 - 5: External Memory
 - 1: Sounds
 - 2: Pictures
 - 3: Videos
 - 4: Music
 - 5: Memory Info

6: Search

7: My Content

- 1: Ringtones
 - Get New Ringtones
- 2: Images
 - Get New Images
- 3: Videos
 - Get New Videos
- 4: TV & Radio

- Get New TV & Radio
- Telus mobile radio
- 5: Applications
 - Get New Applications
- 6: GPS Services
 - Get New GPS Services

8: Games

- Get New Games

9: Music

- 1: TELUS Music Player
- 2: My Music List

*: Wireless Web

 
0: Tools

- 1: Alarm
 - 1: Alarm #1
 - 2: Alarm #2
 - 3: Alarm #3
- 2: Bluetooth
 - 1: Power
 - On/Off
 - 2: Scan Devices
 - Add New
 - 3: Discoverable Mode
 - Visible for 1min
 - Hidden
 - 4: Device Name
 - 5: Device Info
- 3: Calculator
- 4: Calendar
 - 1: Today
 - 2: Scheduler
 - 3: Task List
 - 4: Countdown
- 5: Mass Storage
 - 1: Connect to PC
 - 2: Format

- 3: Memory Info.
- 6: Memo Pad
- 7: World Time
- 8: Voice Memo
- 9: Voice Services
- #: Settings**
 - 1: Display
 - 1: Main Screen
 - 1: Wallpaper
 - 1: Preset Images
 - 2: My Content
 - 3: My Pictures
 - 2: Greeting
 - 1: TELUS
 - 2: Custom
 - 3: Incoming Calls
 - 1: With Caller ID
 - 2: No Caller ID
 - 2: Outer Screen
 - 1: Wallpaper
 - 1: Preset Images
 - 2: Main LCD Image
 - 3: Brightness
 - 4: Backlight
 - 5: Dialing Font
 - 1: Color
 - 2: Size
 - 6: PowerSave Mode
 - 7: Keypad Light
 - 8: Language
 - 2: Sounds
 - 1: Volume
 - 1: Ringer
 - 2: Earpiece Voice
 - 3: Headset Voice
 - 4: Speaker Voice
 - 5: Power On/Off
- 6: Advanced
 - 1: Text and Multimedia
 - 2: Voice Mail
 - 3: Alarms
 - 4: Application
- 2: Ringer Type
 - 1: Voice Calls
 - 1: With Caller Id
 - 2: No Caller Id
 - 3: Roam Ringer
 - 2: Messages
 - 1: VoiceMail
 - 2: Text and Multimedia
 - 3: Schedule
 - 4: Meeting/Silent Mode
- 3: Alerts
 - 1: Minute Beep
 - On/Off
 - 2: Out of Service
 - On/Off
 - 3: Connect
 - On/Off
 - 4: Signal Fade/Call Drop
 - On/Off
- 4: Key Tone
 - 1: Tone Type
 - 2: Tone Length
 - 3: Key Tone Level
- 3: Games/Tools
 - 1: Backlight
 - 2: Notification
 - 1: Voice Mail
 - 2: Message
- 4: Text Entry
 - 1: Auto-Capital
 - 2: Auto-Space
 - 3: Input Language







- 4: My Words
- 5: Used Word Dic.
- 6: Display Candidate
- 7: Prediction Start
- 8: Help
- 5: Phone Information
 - 1: Phone Number
 - 2: Icon Glossary
 - 3: Version
 - 4: Advanced
 - 5: Memory Info
- 6: More...
 - 1: Accessibility
 - 1: TTY
 - 2: Voice Service
 - 1: Choice Lists
 - 2: Sensitivity
 - 3: Digit Dialing
 - 1: Adapt Digits
 - 2: Reset Digits
 - 4: Sound
 - 1: Prompts
 - 2: Digits
 - 3: Names
 - 4: Name Settings
 - Speed
 - Volume
 - 5: Voice Launch
 - 6: About
 - 2: Airplane Mode
 - 3: Browser
 - 1: Clear History
 - 2: Clear Cache
 - 3: Clear Cookies
 - 4: Call Setup
 - 1: Auto Answer
 - 2: Abbreviated Dialing
 - 3: Call Answer
 - 4: Contacts Match
 - 5: Auto Prepend
 - 6: Plus Dialing
 - 1: Plus Code
 - 2: International Dial Prefix
 - 5: Data Setup
 - 1: Data
 - 1: Data/Fax Off
 - 2: Fax In Once
 - 3: Fax In Always
 - 4: Data In Once
 - 5: Data In Always
 - 2: PC Connection
 - 3: Do No Disturb
 - 6: Headset Mode
 - Earpiece
 - 7: Location
 - On/Off
 - 8: Restrict and Lock
 - 1: Voice
 - 1: Restrict
 - 1: Outgoing Call
 - 2: Lock
 - 2: Camera/Pictures
 - 1: Unlock
 - 2: Camera/Video
 - 3: Picture
 - 4: Lock All
 - 3: Lock my Phone
 - 9: Roaming
 - 1: Set Mode
 - 2: Set NAM
 - 3: Call Guard
 - 0: Security
 - 1: Change Lock Code

70 Menu Functions



- 2: Special Numbers
- 3: Erase/Reset
 - 1: Erase Web Cookies
 - 2: Erase Web History
 - 3: Erase Web Cache
 - 4: Erase Phonebook
 - 5: Erase My Content
 - 6: Erase Pic/Video
 - 7: Reset All Settings
 - 8: Reset Phone

      *: Key Guard



Camera & Video

Camera


Using the Camera (**Menu**   ) in your phone, you can take photos of people or events while on the move. You can send photos to other people in a multimedia message or set one as a wallpaper.

Taking Pictures

Taking pictures with your phone's built-in Digital Camera is as simple as choosing a subject, pointing the lens, and pressing a button. You can activate Camera mode and take pictures whether the phone is open or closed.






To take pictures with the phone open:

1. Press **Menu**   for **Camera**.
2. Press  for **Take Photo**.


Shortcut: To activate Camera mode, you can also press and hold the Camera button  located on the right side of the phone.

3. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
 - To change the brightness of the screen, press the Up or Down navigation keys.
 - To zoom in or out, press the Left or Right navigation keys.



Note: If your camera is set to Best resolution, you will not be able to zoom in or out.

4. Hold the camera steady. To take the picture, press  or the Side Camera button  until the shutter sounds.
 - If you wish to save your picture, press the left soft key  to **Save** your photo. The photo is stored in your photo gallery. See "Image Album" on page 77 for more details.
 - If you wish to send your picture to someone via multimedia messaging, press . Your picture is embedded in a new multimedia message. See "Sending Pictures via Multimedia Messaging" on page 76 for more details.
 - If you wish to discard the current picture, press the right soft key  for **Reject**. You can continue to take pictures.

To take pictures with the phone closed:

1. Press and hold the Side Camera button  to activate Camera mode.
2. Point the camera lens at your subject. You can check the picture framing through the external display screen.

Note: If the subject image is in reverse on the external display, you can invert it using the volume keys on the left side of the phone to display the image correctly.

3. Press the Side Camera button  to take the picture.
4. Open the handset to view your picture. Do one of the following:
 - If you wish to save your picture, press the left soft key  to **Save** your photo. The photo is stored in your photo gallery. See "Image Album" on page 77 for more details.


- If you wish to send your picture to someone via multimedia messaging, press **OK**. Your picture is embedded in a new multimedia message. See "Sending Pictures via Multimedia Messaging" on page 76 for more details.
- If you wish to discard the current picture, press the right soft key **Reject**. You can continue to take pictures.

Camera Options

There are several settings associated with the full-color digital camera. These settings allow you to customize how the camera operates when taking pictures. If the subject image is in reverse on the display, you can invert it using the volume keys on the left side of the phone to display the image correctly.

To access camera settings:

1. Start the camera. For more information, see "Taking Pictures" on page 72.
2. Press the right soft key **Options**.
3. Use the Left and Right navigation keys to select the desired option.
 - **Self-Timer**: allows you to configure a timer for **Off**, **5 sec** or **10 sec**. To start the timer, press **OK**.
 - **Fun Tools**: allows you to select one of the following options:
 - **Fun Frames**: allows you to add a frame around the image before the picture is taken. Press the Left and Right navigation keys to find the desired frame. Press **OK** to select and return to camera mode.
 - **Color Tones**: allows you to select the color of the image: **Monochrome**, **Sepia**, **Green**, **Aqua**, **Negative**,

Sketch, Emboss or None. Press the Left and Right navigation keys to find the desired tone. Press  to select and return to camera mode.

- **Controls:** allows you to select one of the following options:
 - **Brightness:** allows you to set the brightness level. Press the navigation key up or down to increase or decrease the desired brightness.
 - **White Balance:** allows you to set up the white balance of the camera automatically or manually using the different preset modes. The modes available are:
 - **Auto:** adjusts the lighting automatically.
 - **Sunny:** decreases the light sensitivity for taking pictures in full or mostly sunny conditions.
 - **Cloudy:** increases light sensitivity for taking pictures under cloudy conditions.
 - **Tungsten:** adjusts the white balance to match inside lighting conditions displayed using common household light bulbs.
 - **Fluorescent:** adjusts the white balance to match inside lighting conditions displayed using common fluorescent lighting.
 - **Manual:** allows you to adjust the white balance settings manually.
 - **Night Shot:** allows you to activate low light image capture. Enabling this feature allows you to take better quality photos in low light conditions.
- **Settings:** allows you to configure the following settings (when you change these settings, they are saved for all subsequent shots):
 - **Resolution:** allows you to set the size of the picture: **1.3MP, High, Med, or Low.**

- **Quality:** allows you to select the detail quality of the picture: **Fine**, **Normal**, or **Economy**.
- **Shutter Sound:** allows you to select the sound the phone makes when a picture is taken: **Off**, **Shutter1**, **Shutter2**, **Shutter3**, or **Say Cheese**.
- **View Mode:** allows you to select between **Wide Screen** or **Full Screen** layout.
- **Status Bar:** allows you to turn the status bar **On** (Show) or **Off** (Hide) when in camera mode.
- **Storage:** allows you to select the destination for the image files: **Phone** or **Card**.
- **Launch:** allows you to select one of the following options:
 - **Review Pictures:** displays your Photo Gallery. See "Image Album" on page 77.
 - **Camcorder:** launches the camcorder.

Sending Pictures via Multimedia Messaging










1. Take your picture, as described in "To take pictures with the phone open:" on page 72. From the Taken Picture screen, press  to send your picture as part of a multimedia message.
2. Specify a destination phone number or e-mail address by entering the information or selecting it from your Contacts list.
3. Compose your multimedia message. Your picture is already attached to the message. For more information, see "To create a text message:", beginning at step 6 on page 52.

Image Album



From your Image Album, you can view all the pictures that you have stored on your phone. Stored pictures can be sent to others as multimedia messages.

To access your saved pictures:

1. Press **Menu**   for **Camera**.
2. Press  for **Image Album**.
3. Select an album:
 -  **Photo Gallery**: displays pictures you have taken.
 -  **MMS**: displays pictures for multimedia messages.
 -  **Transferred Images**: displays pictures you have transferred from the memory card.
4. Using the navigation keys, scroll through your stored photos and highlight the desired photograph.
 - To view the highlighted picture, press the left soft key  for **Expand** (Photo Gallery only).
 - To modify your picture options, press the right soft key  for **Options**. The following options are available:
 - **Send**: sends the picture to someone via multimedia messaging. For more information, see "Sending Pictures via Multimedia Messaging" on page 76.
 - **Upload**: allows you to send a picture to an online album.
 - **Print**: allows you to print the picture using PictBridge. For more information, see "PictBridge Print" on page 78.
 - **Assign**: allows you to use the picture for a wallpaper, picture ID, or incoming caller. In the address book, pictures can be used to identify incoming callers by displaying the image on screen.

- **Erase:** deletes the picture from memory.
- **Erase All:** deletes all the pictures from memory.
- **Copy/Move:** allows you to copy or move the picture to your memory card.
- **Rename:** allows you to change the name of the picture.
- **Info:** displays the caption, time and date, resolution, size, location and upload status of the image.

Settings

The Camera Settings menu (**Menu**   ) allows you to change the default options for common camera settings.

- **Save To:** Select either **Phone** or **Memory Card** as the default save location.
- **View Mode:** Allows you to select between **Wide Screen** and **Full Screen** viewing.

PictBridge Print

PictBridge is an industry standard established by the Camera & Imaging Products Association (CIPA) that enables a range of digital photo solutions including direct photo printing from a digital camera to a printer without the need for a PC.








 
Note: There are many PictBridge devices in the market whose compatibility with your phone cannot be guaranteed.

Printing From Your Phone

Your phone comes equipped with a built-in camera that allows you to print images directly to a printer using the PictBridge technology. A

USB cable must be connected between the two devices before any printing can occur.

To use PictBridge to print pictures from your phone:




1. Insert one end of the accessory cable into the USB slot on the printer. (Printer must support PictBridge technology.)
2. Press  for **Menu**.
3. Press  for **Camera & Video**.
4. Press  for **Camera**.
5. Press  for **PictBridge Print**.
6. Insert the USB cable into your phone.
7. Read the on-screen “Connect Printer” message and press the left soft key  for **OK**.
8. Select the image gallery (**Photo Gallery**, **MMS**, or **Transferred Images**) and press .
9. Highlight the desired image and press the left soft key  for **Next**. (To select multiple images, press  to place a check mark next to each image selected.)
10. Highlight **Copies** and press the navigation key left or right to select the desired number of copies to print.
11. Press the navigation key down to select **Size**. Press the navigation key left or right to select one of the following sizes: **4x6** or **Default**.

Note: These sizes may vary and are dependent on the printer's capabilities.

12. Press the navigation key up to select **Type**. Press the navigation key left or right to select one of the following:

- **Standard:** prints the standard image.
- **Index:** prints the index information.

Note: These options may vary and are dependent on the printer's capabilities.

13. Press the navigation key down to select **Border**. Press navigation key left or right to select **On** or **Off**.
14. Press the navigation key up to select **Date Print**. the navigation key left or right to select **On** or **Off**.
15. Press the right soft key  to **Preview** the image the left soft key  to **Print** the image.
16. Select **Yes** to confirm printing and press .





Camcorder






Using the Camcorder (**Menu**  ) in your phone, you can take videos of people or events.

Taking Videos

Taking videos with your phone's built-in camcorder is simple, and you can store the videos on the memory card.




To Take a Video:

1. Press  for **Menu**.
2. Press  for **Camera & Video**.
3. Press  for **Camcorder**.
4. Press  for **Take New**.
5. Using the phone's main LCD as a viewfinder, aim the camcorder lens at your subject.

- To change the brightness of the screen, press the Up or Down navigation keys.
 - To zoom in or out, press the Left or Right navigation keys.
6. Hold the camcorder steady. To start the video, press . To stop the video, press  again.
- If you wish to save your video, press the left soft key  to **Save** your video. The video is stored in your video gallery. See "Video Album" on page 83 for more details.
 - If you wish to send your video to someone via multimedia messaging, press . Your video is embedded in a new multimedia message. See "Sending Pictures via Multimedia Messaging" on page 76 for more details.
 - If you wish to discard the current video, press the right soft key  for **Reject**. You can continue to take videos.

Camcorder Options






 
There are several settings associated with the camcorder. These settings allow you to customize how the camcorder operates when taking videos.

1. Start the camcorder. For more information, see "Taking Videos" on page 80.
2. Press the right soft key  for **Options**.
3. Press the number key corresponding to the desired option.
 - **Self-Timer**: Allows you to configure a timer for **Off**, **5 Seconds** or **10 Seconds**. To start the timer, press .
 - **Color Tones**: Press the Left and Right navigation keys to select the color of the video: **Auto**, **Monochrome**, **Sepia**, **Green**, **Aqua**, **Negative**, **Sketch** or **Emboss**. When you find the desired tone, press .

- **Controls..**: allows you to select one of the following options:
 - **Brightness**: allows you to set the brightness level. Press the navigation key right or left to increase or decrease the desired brightness.
 - **White Balance**: Allows you to set up the white balance of the camcorder automatically or manually using the different preset modes. The modes available are:
 - **Auto**: Automatically adjusts the lighting.
 - **Sunny**: Decreases the light sensitivity for taking videos in full or mostly sunny conditions.
 - **Cloudy**: Increases light sensitivity for taking videos under cloudy conditions.
 - **Tungsten**: Adjusts the white balance to match inside lighting conditions displayed using common household light bulbs.
 - **Fluorescent**: Adjusts the white balance to match inside lighting conditions displayed using common fluorescent lighting.
 - **Manual**: Allows you to adjust the white balance settings manually.
- **Settings**: allows you to configure the following settings (when you change these settings, they are saved for all subsequent shots):
 - **Quality**: Select the detail quality of the video: **Fine**, **Normal**, or **Economy**.
 - **Save Video To**: allows you to select the destination for the video files: **Phone** or **Memory Card**.
 - **Review Movies**: View your Video Album. See "Video Album" on page 83.
 - **Camera**: Switch to Camera mode. See "Camera" on page 72.





Video Album

From your Video Album, you can view all the videos that you have stored on your phone. Videos can be sent to others as multimedia messages.

1. Press  for **Menu**.
2. Press  for **Camera & Video**.
3. Press  for **Camcorder**.
4. Press  for **Video Album**.
5. Select an album:
 - **Video Gallery:** Videos you have taken.
 - **MMS:** Videos for multimedia messages.
 - **Transferred Videos:** Videos you have transferred from the memory card.
6. Using the navigation keys, scroll through the your stored videos and highlight the desired video.
 - To play the highlighted video, press the left soft key  for **Play** (Video Gallery only).
 - To modify your video options, press the right soft key  for **Options**. The following options are available:
 - **Send:** Sends the video to someone via multimedia messaging. For more information, see "Sending Pictures via Multimedia Messaging" on page 76.
 - **Upload:** Allows you to send a video to an online album.
 - **Assign:** Allows you to use the video for a wallpaper.
 - **Erase:** Deletes the video from memory.
 - **Erase All:** Deletes all the videos from memory.
 - **Copy/Move:** Allows you to Copy or Move the video to your memory card.





 
- **Rename:** Allows you to change the name of the video.
- **Info:** This option displays the caption, time and date, resolution, size, location and upload status of the video.

Settings

The Camcorder Settings menu (**Menu**   ) allows you to change the default save location for the videos you take. In the Settings menu, press  for **Save To** and select either **Phone** or **Memory Card** as the default save location.



My Albums

The My Albums menu (**Menu**  ) lets you quickly view the multimedia contents of your phone:

-  **Sound Album:** see "Voice Memo" on page 112.
-  **Image Album:** see "Image Album" on page 77.
-  **Video Album:** see "Video Album" on page 83.
-  **Online Album:** launches your Web browser to view your online album. See "Wireless Web" on page 97.
-  **External Memory:** lets you view memory status.


Search

With your new Web-enabled phone, you have access to a variety of services such as downloadable ringtones, games, images, tools and other applications.

1. Press  for **Menu**.
2. Press  for **Search**. The browser will launch and take you to the download menu.
3. Follow the instructions of the screen for information about downloadable services and products.


Note: Rates and pricing vary according to your service plan. Please contact your service provider for additional information.

My Content

The My Content menu (**Menu** ) lets you download new ringtones, wallpaper, videos, applications, GPS Services, TV and Radio selections from your service provider. These downloads along with ones loaded from your PC to your Micro SD memory card can be played or viewed from the My Content menu.


Ringtones

To download ringtones:

1. Press **Menu**  to access the **My Content** menu.
2. Select **Ringtones** using the navigation keys and press **(OK)**.
3. Select **Get New Ringtones** and press **(OK)**. You now are connected to your service provider's Web page. Follow the on-screen instructions.

Images

 
To download images:

1. Press **Menu**  to access the **My Content** menu.
2. Select **Images** using the navigation keys and press **(OK)**.
3. Select **Get New Images** and press **(OK)**. You now are connected to your service provider's Web page. Follow the on-screen instructions.

Videos

To download videos:

1. Press **Menu**  to access the **My Content** menu.

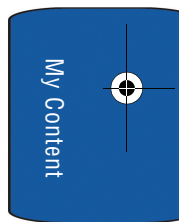


2. Select **Videos** using the navigation keys and press **OK**.
3. Select **Get New Videos** and press **OK**. You now are connected to your service provider's Web page. Follow the on-screen instructions.

TV & Radio


Your phone is capable of accessing TV and radio programs. TELUS Mobile Radio is powered by XM Satellite Radio. For more details, please visit <http://www.telusmobility.com/mobileradio>.

To download TV or radio programs:

1. Press **Menu**  to access the **My Content** menu.
2. Select **TV & Radio** using the navigation keys and press **OK**.
3. Select **Get New TV & Radio** or **TELUS mobile radio** and press **OK**. You now are connected to your service provider's Web page. Follow the on-screen instructions.

Applications




To download applications:

1. Press **Menu**  to access the **My Content** menu.
2. Select **Applications** using the navigation keys and press **OK**.
3. Select **Get New Applications** and press **OK**. You now are connected to your service provider's Web page. Follow the on-screen instructions.

GPS Services

With GPS Services options you can download new applications that use your phone's GPS features.

To download GPS Services:




1. Press **Menu**  to access the **My Content** menu.
2. Select **GPS Services** using the navigation keys and press .
3. Select **Get New** and press . You now are connected to your service provider's Web page. Follow the on-screen instructions.



My Content

Games

You can download and play games already stored on your phone.

1. Press  for **Menu**.
 2. Press  for **Games**.
 3. Highlight **Get New Games** and press . The browser will launch and take you to the download menu.
- Follow the instructions of the screen for information about online and downloadable games.

Music

The TELUS Music Player (**Menu** ) lets you play music you have downloaded from your service provider or loaded from your PC to your Micro SD memory card.

Note: The following characters cannot be used in the filename: / \ * ? " < > : | 9. The file name is limited to 47 total characters.


Configuring a Micro SD Card

Before you can play music, you must insert a blank Micro SD card into the memory slot. See "Memory Card" on page 19.


 
Configuring the TELUS Music Player Settings


The TELUS Music player lets you configure playback and display behavior. You can also set the user interface language.

To access the TELUS Music Player settings:

1. Press **Menu**  to access the **Music** menu.

Tip: In Idle mode, press the Music Key  to access the Music menu.

 2. Press  for **TELUS Music Player**.
3. From the main playback screen, press the left navigation key to highlight **settings**. Press .
4. Use the Up or Down navigation keys to highlight the option you want to enable or disable.

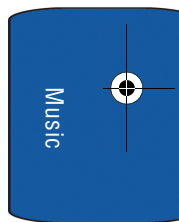

5. Press **OK** to change the setting for the highlighted option.
Options marked with X are enabled.

Downloading Music

Your service provider may offer easy access to music downloads. In most cases a fee is associated which each song you download. See your service provider for more details.

To download a song:

1. Press **Menu** to access the **Music** menu.
2. Press **TELUS** for **TELUS Music Player**.
3. From the main playback screen, press the right navigation key to highlight **shop**. Press **OK**.

The TELUS Shop online music store is launched. Use the navigation keys to browse, and follow the online instructions to download music.

Playing Music with the External Buttons

If you have saved music on your phone or memory card, you can quickly play songs with the phone closed by pressing and holding the **Play** button on the outside of the phone. Use the following keys to control playback:




- **Play/Pause Key:** Plays or pauses music playback.
- **Rewind Key:** Goes to the beginning of the song that is playing or scans backwards if you hold the key down.
- **Fast Forward Key:** Goes to the end of the song that is playing or scans forward if you hold the key down.

Note: After a few seconds of inactivity you must press and hold the side key lock to activate the Play/Pause, Rewind and Fast Forward keys.

Playing Music with the Phone Open

If you have saved music on your phone or memory card, you can listen to songs.

To play music:

 
1. Press **Menu**  to access the **Music** menu.
2. Press  for **My Music List**.
3. Use the navigations keys to select a song and press . The TELUS MP3 player launches and plays the selected song. This may take a few seconds.





Creating a Play List

You can use playlists to organize your music collection into named collections of songs. You can then select a playlist to listen to. You must have previously saved songs on your phone in order to create a playlist.

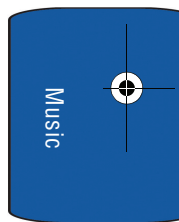To create a playlist:

1. Press **Menu**  to access the **Music** menu.
2. Press  for **TELUS Music Player**.
3. Press the right soft key  for **options** and using the navigation keys select **scan for new songs**. Your phone scans your memory card.
4. Press the right soft key  for **options**.








5. Highlight **create new playlist** and press .
6. Using the navigation keys, scroll through the list of music. Press  to select individual songs to add to your play list. The songs you select are marked with an X.
7. Press the right soft key  for **OK**.
8. Enter a name for the play list and press .

To delete characters, use the  key. Hold it down to clear the box.

Your play list is saved with the songs you specified and the name you entered. The new playlist is displayed on the screen.



Selecting a Play List

To select a play list for playback:

1. Press **Menu**  to access the **Music** menu.
2. Press  for **TELUS Music Player**.
3. Press right soft key  for **options** key and using the navigation keys select **song library**. Your play lists are displayed.
4. Using the navigation keys, highlight a play list.
5. Press  to display the songs in the play list.
6. Using the navigation keys, highlight the first song to play and press .






Controlling Playback

 
You can use the following keys to control the music while its playing:

- Press the Left and Right navigation keys to switch to the previous or next song.
- Press  to Pause or Play the song.
- Press the right soft key  for **options**:
 - **repeat song**: Repeat the current song.
 - **shuffle songs**: Randomize the current playlist.
 - **song information**: Display information about the current song.
 - **song library**: View all playlists and all songs in your library.
 - **music player home**: Return to the main playback screen.
 - **shop**: Download new MP3.
 - **help**: Display help about the current screen.

Managing your Song Library

Use the following options to manage your song library:

1. Press **Menu**  to access the **Music** menu.
2. Press  for **TELUS Music Player**.
3. From the main playback screen, press the down navigation key to highlight **song library**. Press .
4. Select **all songs** to view all saved songs regardless of the playlists to which they belong, and then press .
5. Press the right soft key  for **options**:
 - **create new playlist**: Add a new playlist. See "Creating a Play List" on page 93.
 - **sort songs by artist**: Organize the songs by artist name.

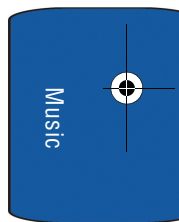




- **sort songs by title:** Organize songs by song title.
- **shuffle:** Randomize the song order.
- **song information:** Display information about the currently highlighted song.
- **delete song:** Delete the currently highlighted song.
- **scan for new songs:** Add new songs to your library.
- **music player home:** Return to the main playback screen.
- **shop:** Download new songs from your service provider.
- **help:** Display help about the current screen.


Viewing Song Download Status

The My Vault option lets you view information about pending downloads and previously downloaded songs.

To access My Vault:

1. Press **Menu**  to access the **Music** menu.
2. Press  for **TELUS Music Player**
3. From the main playback screen, press the up navigation key to highlight **my vault**. Press . The handset connects to the service provider. This may take a few seconds.
4. Use the Up and Down navigation keys to scroll through the information.

Wireless Web

Your phone comes equipped with Wireless Web access (**Menu** ) through your browser. You can view specially designed versions of popular sites including sports, weather, news, and stock quotes. When you launch the browser, the phone automatically connects to the Internet.

Note: Rates and pricing vary according to your service plan. Please contact your service provider for additional information.

Launching the Browser

To launch a web connection:

1. Press the left soft key  for **Menu**.
2. Press  for **Wireless Web**. You now are connected to your service provider's Web page.

Tip: In Idle mode, launch the browser by pressing the left soft key .

Navigating the Web

Navigating through menus and Web sites during a web session is easy once you've learned a few basics. Here are some tips:

Soft Keys

When browsing the Web, the bottom line of your phone's display contains one or more soft keys. These keys are shortcut controls for navigating around the Web, and they correspond to the soft key buttons directly below the phone's display screen. Depending on

which Web sites you visit, the labels on the soft keys may change to indicate their function.

To use soft keys:

- Press the desired soft key button. If an additional pop-up menu appears when you press the soft key button, select the menu items using your keypad (if they're numbered) or by highlighting the option and pressing **OK**.

Scrolling


As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Web sites.

- Press the Up and Down navigation keys to scroll line by line or press the volume buttons on the side of the phone to scroll one page at a time.

Navigating Between Web Pages

Once you've learned how to use soft keys and scroll, you can start navigating Web sites.

- Select on-screen items by using the navigation key to highlight the desired item, then press the desired soft key button (or press **OK**).



The left soft key  is used primarily for selecting items.

- If the items on a page are numbered, you can use your keypad (number keys) to select an item.

Links appear as underlined text and allow you to jump to different Web pages, select special functions, or even place phone calls.

- Select links by highlighting the link and then selecting the appropriate soft key.

Tip: The tenth item in a numbered list may be selected by pressing the **0++** key on your phone's keypad, even though the number 0 doesn't appear on the screen.

- To go back one page, press  on your phone. (Note that  is also used to delete text.)

Tools

Tools (**Menu** **0++**) provides helpful software applications to help you perform common functions, such as:


- setting an alarm so that the phone rings at a specific time, to remind you of an appointment, for example
- viewing a calendar and organizing your schedule
- using the phone as a calculator for basic mathematical equations or currency exchange operations
- viewing times in different parts of the world

Alarm

Your phone comes with a built-in alarm clock with multiple alarm times.

To use the alarm:

1. Press **OK** for **Menu**.
2. Press **0++** for **Tools**.
3. Press **1^{ALM}** for **Alarm**.
4. Press **1^{1^{PM}}**, **2^{2^{PM}}**, or **3^{3^{PM}}** to select an alarm.
5. Press the navigation key left or right and select **On**.
6. Press the navigation key down once and then use the keypad to enter the alarm time.
7. Press the right soft key **▶** to select **AM** or **PM**.
8. Press the navigation key down once and press **OK** to select an alarm tone from **Single Tones**, **Ring Tones**, **Melodies**, or **My Content**. See "Ringer Type" on page 130.






9. Press the navigation key down once and then press it right or left to select the Repeat interval: **Once, Mon to Fri, Sat & Sun, or Daily.**
10. Press the navigation key down once and then press it right or left to select the Snooze interval: **5 minutes, 10 minutes, 15 minutes, or 20 minutes.**
11. Press the left soft key  for **Done.**

Bluetooth


Bluetooth® is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

 
Unlike infrared, you don't need to line up the devices to beam information with Bluetooth®. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

Adding New Devices

1. Press  for **Menu.**
2. Press  for **Tools.**
3. Press  for **Bluetooth.**
4. Press  for **Scan Devices.**
5. Press the left soft key  for **Add New.**

To access Bluetooth option settings:

1. Press  for **Menu.**
2. Press  for **Tools.**
3. Press  for **Bluetooth.**

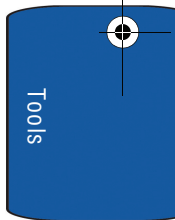


4. Select an option to change:
 - **1st key** for **Power**: Select **On** or **Off** to enable or disable Bluetooth support.
 - **2nd key** for **Scan Devices**: Select an existing device and select **Yes** to scan for it, or select **Add New** to add another device to the list of trusted devices.
 - **3rd key** for **Discoverable Mode**: Select **Visible for 1 min** to let other devices connect to your phone; otherwise, select **Hidden**.
 - **4th key** for **Device Name**: Type in the name of your phone as it will appear to other Bluetooth devices. See "Entering Text" on page 30.
 - **5th key** for **Device Info**: Displays information about your phone's Bluetooth configuration.

Options

After a device is added to your list of Trusted Devices, press the right soft key **→** to select from the following options:

- **1st key** **Add New**: adds another device to your Trusted Devices list.
- **2nd key** **Send Contact**: lets you send a name card from Contacts to the trusted device.
- **3rd key** **Get Contact**: lets you get the name card of the trusted device.
- **4th key** **Edit Name**: shows the name given to your phone for Bluetooth® purposes. You can edit the name if needed.
- **5th key** **Erase**: lets you delete the highlighted trusted device.
- **6th key** **Erase All**: lets you delete all the trusted devices.


 






-  **Info:** lets you view information about the highlighted trusted device.

 
Note: The software in this handset supports Bluetooth profiles: HSP, HFP, DUN, OPP, BPP, A2DP, AVRCP. However, the software does not support the transfer of data files.

Calculator

Your phone comes with a built-in calculator.

To access the calculator:

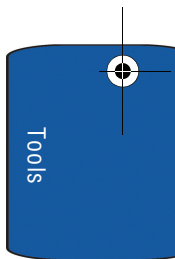


1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Calculator**.
4. Enter a number with the keypad. (Press  or  to insert a decimal point and/or  to make the number negative or positive. To clear the input box, press the right soft key .)
5. Use your navigation key to select a mathematical function:
 - **Left** to subtract
 - **Up** to multiply
 - **Right** to add
 - **Down** to divide
6. Enter the next number using the keypad. Repeat steps 5 to 7 as necessary.
7. Press  to view the results.



Calendar


Your Calendar helps organize your time and reminds you of important events.

To add an event to today's schedule:

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Calendar**.
4. Select a Planner type:
 -  **Today**: displays today's events.
 -  **Scheduler**: displays a calendar from which you can select a day.
 -  **Task List**: displays a to-do list.
 -  **Countdown**: displays a countdown to a specific time.

Using Today Entries

You can use the Today menu (**Menu**   ) to display all the **Schedule**, **Task**, and **Countdown** entries for the current day:

- Press the Left and Right navigation keys to switch between the **Schedule**, **Task**, and **Count** tabs.
- Press the **Options** soft key  and select **Jump to date** to view a different day.

Using Scheduler Entries






The Scheduler menu contains a calendar to keep track of your schedule and lets you set alarms to act as reminders.

To create a Scheduler entry:

 



1. Display the Scheduler (**Menu**   )




2. If this is the first entry, enter a description of the event. See "Entering Text" on page 30.

Otherwise, press the navigation keys to select a day and press the left soft key  for **View**, then press the left soft key  for **Add New**. Enter a description of the event.

3. Press the left soft key  for **Next**.
4. Press the Left or Right navigation keys to select the type of event: **Appointment**, **Business**, **Personal**, **Vacation**, or **Birthday**.
5. Press the navigation key down once and press the Left or Right navigation keys to select the amount of warning given before the event: **10min before**, **30min before**, **1Hr before**, **No Alarm**, or **On Time**.
6. Press the navigation key down once and press the Left or Right navigation keys to select how often the event occurs: **Once**, **Daily**, **Weekly**, **Monthly**, or **Yearly**.
7. Press the navigation key down once and press  to select an alarm tone from **Single Tones**, **Ring Tones**, **Melodies**, or **My Content**. See "Ringer Type" on page 130.
8. Press the navigation key down once and then use the keypad to enter the Start time.
9. Press the right soft key  to select **AM** or **PM**.
10. Press the navigation key down once and then use the keypad to enter the End time.
11. Press the navigation key down once and press  to select a contact.
12. Press the left soft key  to select **Done**.

To view Scheduler options:

You can select the following options in the Scheduler (**Menu**   ) by pressing the right soft key  for **Options**:





- **Add New:** allows you to create a new Scheduler event.
- **View Type:** allows you to switch the Scheduler view to **Monthly** or **Weekly**.
- **Jump to date:** allows you to view the events for a specific day. Press the Left or Right navigation key to select an option. Then press the Down navigation key to enter the date information:
 - **Jump By Date:** allows you to enter a date to jump to. Press the left soft key  for **OK**.
 - Press the right soft key  to go to today's date.
 - **Jump By Term:** allows you to enter a range. Select either **Before** or **After**, press Down, and use the keypad to enter the number of days. Press the left soft key  for **OK**.
- **Assign:** allows you to assign event as foreground. Use the Up or Down navigation key to select either **Yes** or **No**.
- **Erase All:** allows you to erase all events. Use the Up or Down navigation key to select either **Yes** or **No**.

Using the Task List









You can use the Task function in the same way you would use a to-do list. When the task has been completed, you can check it off as done.

To enter a Task:

 
1. Display the **Task List** (**Menu**    ).

- If this is the first entry, enter a description of the task. Otherwise, press the left soft key  for **Add New** and enter the text. See "Entering Text" on page 30.
- Press the left soft key  for **Next**.
- Use the Left and Right navigation key to select a priority for the task: **Low** or **High**.
- Press the Down navigation key and use the keypad to enter the **Due Time**. Press the right soft key  to select **AM** or **PM**.
- Press the navigation key down once and use the keypad to enter the **Due Date**.
- Press the left soft key  for **Done**.

To view or edit existing Tasks:

- Display the **Task List (Menu**    .)
- Highlight a task and press . The task is displayed.
 - To set the state of the task, press the right soft key  for **Options**. Select **Set State** followed by **Forward**, **In Process**, or **Completed**.
 - To assign the task as foreground, press the right soft key  for **Options**. Select **Assign** followed by **Yes** or **No**.
 - To edit the task, press the left soft key  for **Edit**.
 - To delete task, press the right soft key  for **Options** and select **Erase**.

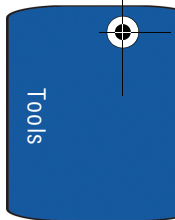


 



Note: To delete all the tasks, from the **Task List** menu, press the right soft key  for **Options** and select **Erase All**.









Using Countdown

You can use the Countdown function to remind you how much time is left until a specific event.

To enter a Countdown:

1. Display the **Countdown** menu (**Menu**   
2. If this is the first entry, enter a description of the countdown. Otherwise, press the left soft key  for **Add New** and enter the text. See "Entering Text" on page 30.
3. Press the left soft key  for **Next**.
4. Use the keypad to enter the countdown Time.
5. Press the right soft key  to select **AM** or **PM**.
6. Press the Down navigation key once.
7. Use the keypad to enter the countdown Date.
8. Press the left soft key  for **Done**.

To view or edit existing Countdowns:

1. Display the **Countdown** menu (**Menu**    .)
2. Highlight a countdown and press . The countdown details are displayed.
 - To edit the countdown, press the left soft key  for **Edit**.
 - To delete countdown, press the right soft key  for **Options** and select **Erase**.

Note: To delete all the countdowns, from the **Countdown** menu, press the right soft key  for **Options** and select **Erase All**.





Mass Storage

You can connect your phone to your personal computer using a USB data cable, using your phone as a portable disk drive.

Connect to PC

You must insert a memory card into the phone in order to connect the phone to a computer. The memory card is the destination for all file transfer.

To transfer files between your phone and your computer:

 
1. Connect your phone to the data cable.
2. Connect the data cable to your computer.
3. Press  for **Menu**.
4. Press  for **Tools**.
5. Press  for **Mass Storage**.
6. Press  for **Connect to PC**. The phone now appears as a removable disk on your computer.

Warning: Call is disabled when the device is connected as a mass storage device.

7. Using your computer's navigation systems, transfer your files between the computer and the phone.

Warning: Do not disconnect the phone from the data cable while transferring files! Please follow proper shutdown procedure for removable storage device to avoid file corruption.

8. When you are finished transferring files, press the left soft key  for **Done**. Highlight **Yes** and press  to confirm.

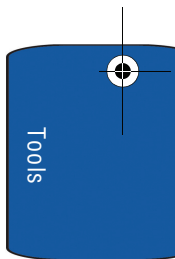





It is now safe to remove the phone from the data cable.


Format

Use this menu to format a memory card that has been inserted into the card slot. Your handset is capable of supporting memory cards with a maximum memory of 1 GB.

To format an inserted memory card:

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Mass Storage**.
4. Press  for **Format**.
5. Enter your lock code.


Tip: If you can't recall your lock code, try using the last four digits of either your Social Insurance Number or Mobile Directory Number or try 0000. If none of these work, call Customer Service at 1-800-Samsung.



6. Highlight **Yes** and press . Your memory card will now be formatted.


Note: Do not remove your memory card while it is being formatted.

Memory Info.

To view the amount of storage space used on your phone:

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Mass Storage**.





4. Press  for **Memory Info..**
5. Using the navigation keys, highlight **ALL**, **Phone** or **Card** and press . The amount of storage space used and available is displayed on-screen.

When you are finished, press the left soft key  for **Done.**




Memo Pad

Your phone comes with a memo pad you can use to compose and store reminders and memos to help keep yourself organized.




Creating Memos

 
1. Display the **Memo Pad** menu (**Menu**  ).
2. If this is the first entry, enter the text. Otherwise, press the left soft key  for **Add New.** See "Entering Text" on page 30.
3. Enter up to 160 characters in the memo using the keypad and press the left soft key  for **Save.**


Viewing Memos

1. Display the **Memo Pad** menu (**Menu**  ).
2. Use the navigation keys to scroll to the desired memo and press  to view the memo details.

Deleting Memos

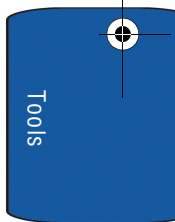


 1. Display the **Memo Pad** menu (**Menu**  ).
2. Highlight the memo you wish to delete using the navigation keys.
3. Press the right soft key  for **Options.**



4. Select an option:
 - **Erase**: deletes the highlighted memo.
 - **Erase All**: deletes all the memos.
5. Highlight **Yes** with the navigation key and press  to confirm.

 World Time


 


World Time displays what time it is in twenty-four different time zones around the world together with one or more major cities, states, regions, or countries in a time zone.



1. Display **World Time (Menu)**  .
2. Press the navigation key up/left, or down/right to display the different time zones.
3. Press the left soft key  to set Daylight Savings Time (DST).


Voice Memo

You can use your phone to record brief memos to remind you of important events, phone numbers, or other items.



Recording Voice Memos



1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Voice Memo**.
4. If you have not previously recored a voice memo, press the left soft key  for **Record New**.

If you have previously recorded a voice memo, press the right soft key  for **Options** and press  for **Record New**.



To hear a previously recorded voice memo, press the left soft key  for **Play**.

5. Wait for the beep and then start speaking. (As it is recording, the phone displays a countdown timer that shows how many seconds are left for recording.)

Press the left soft key  to **Pause** the memo. (When a memo is paused, press the left soft key  again to **Resume** recording.)

 
6. Press the right soft key  to **Finish** the recording prior to the countdown completion.
7. The memo is saved to your phone. Press the left soft key  to **Play** your message for review.

Recording Phone Call Conversations


1. During a call, press the right soft key  for **Options**.
2. Press  for **Voice Memo**. (A one minute counter is displayed on the screen to indicating the amount of time a single voice memo can be recorded.)



Press the left soft key  to **Pause**. (When a memo is paused, press the left soft key  again to **Resume** recording.)

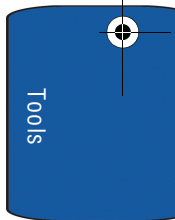3. Press the right soft key  for **Done** to stop and save the phone call conversation.



Voice Memo Options

After recording a voice memo, you can select the following options by pressing the right soft key  for **Options** in the Voice Memo menu.

- **Record New:** Record a new voice memo. See "Recording Voice Memos" on page 112.
- **Send:** Send the selected voice memo in a multimedia text message. See "Messaging" on page 48.
- **Upload:** Upload the selected voice memo to a storage area provided by your service provider.
- **Erase:** Erase a voice memo. Select the individual memos to erase by highlighting them and pressing . Press the left soft key  for **Next** and confirm the deletion.
- **Erase All:** Erase all the voice memos.
- **Copy/Move:** Allows you to Copy or Move the memo to your memory card.
- **Rename:** Change the description of the voice memo.
- **Info:** Displays information about the selected voice memo, such as length and recording date.


Voice Services

Activating Voice Recognition

Voice recognition allows you to say commands to perform common functions supported by your phone. There is no voice training required to use the voice recognition feature. You simply say the pre-

designated command displayed on your screen in a normal tone of voice to perform the desired function.

To activate voice recognition:

1. Press and hold . (The phone prompts you to say a voice command.)
2. Wait for the beep and then say one of the following commands:

- **Call**
- **Send Text**
- **Send Email**
- **Lookup**
- **Go To**
- **Check**

 
When it recognizes one of these commands, the phone launches the associated application. If the phone does not hear a command within approximately eight seconds, it de-activates voice recognition without taking any action.

Call

Call allows you to dial any valid 7, 10 or 11 digit North American phone number by speaking the number naturally, without pausing between the digits.




Tips for using voice Dial:

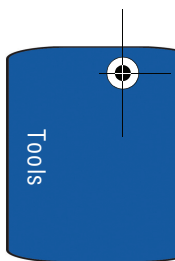- Call works best in quieter environments.
- When saying a number, speak at a normal speed and say each digit clearly. There is no need to pause between digits.
- The phone recognizes the digits one, two, three, four, five, six, seven, eight, nine, zero, and oh. The phone does not recognize numbers such as “one eight hundred” for “1-800”. Instead, say “one-eight-zero-zero”.



- The phone recognizes only valid 7, 10 or 11 digit North American phone numbers.
- If your phone does not usually recognize you correctly when you are using voice Call, try adapting Call to your voice, which can significantly improve accuracy for some speakers. (See "Changing Voice Dial Sensitivity" on page 120 for details.)

To place a call using voice Call:


 



1. Activate voice recognition by pressing and holding  . (The phone prompts you for a command.)
2. Say **Call**. (The phone prompts you to say the number.)
3. Say either a name stored in your Contacts or a valid 7, 10 or 11 digit North American phone number naturally and clearly.
 - If the phone asks you, "Did You Say," followed by the correct number, say **Yes**. (You can also select the correct number from those displayed on the screen by pressing  on the correct number. The phone will then dial the number.)
 - If the phone asks you, "Did You Say," followed by an incorrect number, say **No**. (If there are other alternatives, the phone will prompt you with the next one. You can also press the navigation key up or down to select the correct number from the Choice List, and then press  to dial.)
 - If you said a name listed in your Contacts that has more than one number associated with it, the phone displays the different locations (**Home, Office, Mobile, Pager, Fax**) and asks you which one to dial. Say one of the location names and the phone will dial the number for the location you specified.

Note: In some cases, the phone might ask you to repeat a name or number. Make sure that the number is a valid 7, 10 or 11 digit North American phone number, and then say the number again. If the number isn't valid, or if the phone still doesn't understand the number on the second try, it will not place a call.

Enabling/Disabling Choice Lists


You can customize whether the Call feature displays the list of top voice recognition choices or automatically dials the first number, without displaying a choice list.

 
To enable or disable choice lists for Voice Dial:

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Voice Services**.
4. Press the left soft key  for **Settings**.
5. Highlight **Choice Lists** and press .
6. Press the navigation key up or down to select **Automatic**, **Always On** or **Always Off**.

Send Text

The Send Text option allows you to quickly send a text message to a person in your Contacts by saying the full name of the person.

1. Activate voice recognition by pressing and holding .
(The phone will prompt you for a command.)
2. Say the person's full name, exactly as it is entered in your Contacts. (The phone will play the name it recognized through the earpiece, and then open the contact information for that name.)

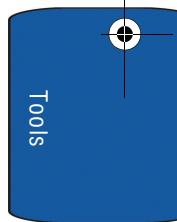


If the phone says, “Did You Say,” followed by an incorrect name, say **No**. The phone then prompts you with the next name, if there is one. If there are no more names, the phone will say “Sorry, no match found.”

3. The Send To page opens. If the correct contact is displayed, press the **Next** soft key, and create your message. For more information on creating messages, see “Text & Multimedia Messages” on page 51.


Send Email

The Send Email option allows you to start composing email for any person in your Contacts.

To compose email using Voice Services:

1. Activate voice recognition by pressing and holding .
(The phone will prompt you for a command.)
2. Say “**Send Email**” followed by a name stored in your Contacts.


Note: You must have an email address stored for this Contact.

- If the phone asks you, “Did You Say,” followed by the correct name, say **Yes**. (You can also select the correct address from those displayed on the screen by pressing  on the correct number.)
 - If the phone asks you, “Did You Say,” followed by an incorrect name, say **No**. (If there are other alternatives, the phone will prompt you with the next one. You can also press the navigation key up or down to select the correct address from the Choice List.)
3. Compose your email message using the keypad. For more information, see “Entering Text” on page 30, beginning at step 6.

Lookup

Lookup lets you retrieve contact information for any person in your Contacts by saying the full name of the person.

To retrieve information using Lookup:


1. Activate voice recognition by pressing and holding .
(The phone will prompt you for a command.)
2. Say **Lookup**. (The phone will prompt you to say the name.)
3. Say the person's full name, exactly as it is entered in your Contacts. The phone will play the name it recognized through the earpiece, and then open the contact information for that name.

 
If the phone says, "Did You Say," followed by an incorrect name, say **No**. The phone then prompts you with the next name, if there is one. If there are no more names, the phone will say "Sorry, No Match Found."

Go To

The Go To option allows you to quickly launch a menu item.

To use the Go To feature:


1. Activate voice recognition by pressing and holding .
(The phone will prompt you for a command.)
2. Wait for the beep and say **Go To** followed by one of the following: **Contacts**, **Call History**, **Messaging**, **Wireless Web**, or **Next Menu**.

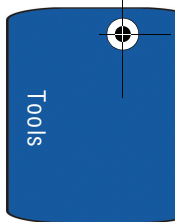

Check

The Check option gives you an update on the general status of your phone including signal and battery strength, network, and your phone number.






To view the phone status information:

1. Activate voice recognition by pressing and holding .
(The phone will prompt you for a command.)
2. Wait for the beep and say **Check** followed by one of the following: **Status**, **Signal**, **Network**, **Battery**, or **My Phone #**.

Changing Voice Dial Sensitivity

You can adjust your phone's sensitivity to sounds when listening for voice commands or names, making it require a more exact or less exact sound match before responding to your command.

To modify the Voice Dial Sensitivity setting:










1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Voice Services**.
4. Press the left soft key  for **Settings**.
5. Press  for **Sensitivity**.
6. Press the navigation key up or down to select **Reject the most**, **Reject more 2**, **Reject more 1**, **Recommended**, **Reject less 1**, **Reject less 2**, or **Reject the least**.

If you select **Reject more**, your phone will require a more exact sound match and if you select **Reject less**, your phone will require a less exact sound match.

Configuring Digit Dialing

You can configure your phone to adapt to your voice when using voice-based dialing.

To configure voice-activated digit dialing:






1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Voice Services**.
4. Press the left soft key  for **Settings**.
5. Press  for **Digit Dialing**.
6. Press  for **Adapt Digits**.
7. Press the left soft key  for **OK**.
8. Follow the instructions presented on your screen to configure your phone for your voice. You will be prompted to record a series of numbers. After listening to each recording, press the left soft key  for **Yes** to keep the recording, or press the right soft key  for **No** to reject the recording.

Tip: To reset digit dialing, press  for Reset Digits while in the Digit Dialing menu.

Changing Voice Dial Prompts


By default, your phone provides audio prompts such as “Please say a command”.

To turn these prompts on or off:


1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Voice Services**.
4. Press the left soft key  for **Settings**.
5. Press  for **Sound**.

6. Press  for **Prompts**,  for **Digits**, or  for **Names**.


 




Tip: Press  for **Name Settings** to change the speed and volume that names are repeated.

7. Press the navigation key up or down to select **On** or **Off** and press .


Changing Voice Launch

By default, voice commands are activated by pressing and holding . You can change your phone's settings to activate voice commands whenever you open the flip lid of your phone.

To modify Voice Launch settings:

1. Press  for **Menu**.
2. Press  for **Tools**.
3. Press  for **Voice Services**.
4. Press the left soft key  for **Settings**.
5. Press  for **Voice Launch**.
6. Press the navigation key up or down to select **Talk Key** or **Talk Key & Flip Open** and press .

Settings

With the Settings (**Menu** ) , you can customize your phone's display, sound and other settings to your suit your preference.







Display

Changing the Main Screen

Your phone offers options for what you see on the display screen when in standby mode and when there are incoming calls.

Wallpaper

To change the wallpaper of the main screen:








1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Main Screen**.
5. Press  for **Wallpaper**.
6. Select one of the following:
 - **Preset Images:** contains images preloaded on your phone.
 - **My Content:** contains downloaded images and videos from your service provider.
 - **My Pictures:** contains pictures in your Image Album.
7. Press the navigation key left or right to view the image.
8. Press  to select the image.







Settings

Greeting








To change the greeting of the main screen:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Main Screen**.
5. Press  for **Greeting**.
6. Select one of the following:
 - **TELUS**: Uses TELUS greeting. Press  to save and exit.
 - **Custom**: Enter text to define your Custom greeting. Press the left soft key  for **Done** to save and exit.

Incoming Calls

The Incoming Calls option (**Menu**    ) lets you specify the image to be displayed for two call types: callers With Caller ID and those with No Caller ID. The respective images are displayed depending on the type of call received.

To configure incoming call settings:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Main Screen**.
5. Press  for **Incoming Calls**.
6. Press  for **With Caller ID**, or press  for **No Caller ID**.

7. Select one of the following and press **OK**:
 - **Preset Animation**: displays the preloaded, default image for incoming calls.
 - **My Content**: contains downloaded images from your service provider.
 - **My Pictures**: contains images from your Image Album.
8. Use the navigation keys to select the image or photo you want to assign to the type of call you selected. Press the left soft key **Assign** the selected image or photo.

Changing the Outer Screen

Your phone offers options for what you see on the outer display screen.

Wallpaper

To change the wallpaper of the outer screen:

1. Press **OK** for **Menu**.
2. Press **Settings** for **Settings**.
3. Press **Display** for **Display**.
4. Press **Outer Screen** for **Outer Screen**.
5. Press **Wallpaper** for **Wallpaper**.
6. Select **Preset Images** or **Main LCD Image** and press **OK**.
7. Press the navigation key left or right to view the image.
8. Press **OK** to select the image.








Settings

Changing the Display Brightness Settings

You can increase or decrease the level of brightness of the LCD display.








To change the brightness settings:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Brightness**.
5. Using the navigation keys, select the level of brightness and press the left soft key .

Changing the Backlight Settings

The Backlight setting lets you specify how long you want the display screen to remain illuminated after you open the handset or press a key.

To modify the Backlight setting:






1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Backlight**.
5. Select an option to change:
 -  **On**: Use the navigation keys to select **3 Seconds**, **7 Seconds**, **15 Seconds**, **30 Seconds**, **Always On**, or **Always Off**.
 -  **Dim**: Use the navigation keys to select **1 Minute**, **2 Minutes**, **5 Minutes**, **10 Minutes**, or **Always On**.
6. Press  to save and exit.

Note: Long backlight settings reduce the battery's talk and idle times.

Changing the Dialing Font

Your phone allows you to select the size and appearance of the font displayed on the screen when you dial numbers.






To change the dialing font:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Dialing Font**.
5. Select an option to change:
 - **Color:** Use the navigation keys to select **Basic**, **Rainbow**, **Monochrome**, or **Hyphenate**.
 - **Size:** Use the navigation keys to select **Large**, **Normal** or **Small**.
6. Press  to save and exit.

Changing the PowerSave Mode Setting

You can turn on or off your phone's automatic power save feature.

To change the PowerSave Mode setting:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **PowerSave Mode**.
5. Select **On** or **Off** and press .








Settings

Changing the Keypad Light Settings






The Keypad Light setting lets you specify how long the keypad remains illuminated after you open the handset or press a key.

To modify the Keypad light settings:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Keypad Light**.
5. Use the navigation keys to select the length for the keypad light: **Flip open, 30 seconds, 15 seconds, 8 seconds, or Off**.
6. Press  to save and exit.

Changing the Language

Your phone can display text in English or French. Language selection changes all menus and voice message settings.
















 




1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Display**.
4. Press  for **Language**.
5. Press the navigation key up or down to select **English** or **French**.
6. Press  to save and exit.

Sounds

Volume




You can adjust the volume of your phone using either the Menu or the volume keys on the side of your phone.

To adjust the volume from the menu:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Volume**.
5. Press  for **Ringer**,  for **Earpiece Voice**,  for **Headset Voice**,  for **Speaker Voice**,  for **Power On/Off** or  for **Advanced**. For **Advanced**, select  for **Text and Multimedia**,  for **Voice Mail**,  for **Alarms**, or  for **Application**.
 - For **Ringer**, press the navigation key left or right until the desired volume level is selected. Press  to select or deselect **Always Vibrate**. Press the left soft key  for **Done** to save and exit.
 - For **Earpiece Voice**, **Headset Voice** and **Speaker Voice**, using the navigation keys, select a volume level and press .
 - For **Text and Multimedia**, **Voice Mail** or **Alarms**, use the navigation keys to select **Use Ringer Volume** or **Separate volume**. Press  to select/deselect **Always Vibrate**. Press the left soft key  for **Done** to save and exit.
 - For **Application**, use the navigation keys to select **Use Ringer Volume** or **Separate volume**. Press the left soft key  for **Done** to save and exit.

Tip: You can adjust the ringer volume in Idle mode (or the earpiece volume during calls) using the volume key on the side of your phone.

Ringer Type








Different ringer types help you identify incoming calls and messages. With the Ringer Type options (**Menu**   ), you can assign ringer types to individual Contacts entries, types of calls, schedules, types of alarms, and types of messages. Ringer types available for assignment include:


- **Single Tones:** include a variety of standard ringer types.
- **Ring Tones:** include a variety of standard musical melodies.
- **Melodies:** includes a variety of short songs.
- **My Content:** includes all the ringtones you have previously downloaded. See "Search" on page 86.

Voice Calls

You can select a different ringer type for each type of received call: those with Caller Id, no Caller Id, and calls while roaming:

To assign unique ringer types to different types of calls:








1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Voice Calls**.
6. Press  for **With Caller Id** or  for **No Caller Id**.

7. Press the navigation key up or down to select **Single Tones**, **Ring Tones**, **Melodies**, or **My Content**.
8. Press the navigation key up or down to select desired ringer.
9. Press  to save and exit.

Roam Ringer





You can set your phone to provide a normal or a distinctive ringer type when roaming.





To select a ringer type for incoming roam calls:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Voice Calls**.
6. Press  for **Roam Ringer**.
7. Select **Normal** or **Distinctive**.
8. Press  to save and exit.

Messages







To select a ringer type for received messages:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.

5. Press  for **Messages**.
6. Press  for **VoiceMail** or  for **Text and Multimedia**.
7. Press the navigation button up or down to select **Single Tones, Ring Tones, Melodies, or My Content**.
8. Press the navigation key up or down to select desired ringer.
9. Press  to save and exit.

Schedule

To select a ringer type for scheduled events:





1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Schedule**.
6. Press the navigation button up or down to select **Single Tones, Ring Tones, Melodies, or My Content**.
7. Press the navigation key up or down to select desired ringer.
8. Press  to save and exit.

Meeting / Silent Mode

You can disable the ringer during meetings or in movie theaters.

To enable or disable silent mode:

1. Press  for **Menu**.
2. Press  for **Settings**.

3. Press  for **Sounds**.
4. Press  for **Ringer Type**.
5. Press  for **Meeting / Silent Mode**.
6. Press the navigation key up or down to select **On** or **Off**.
7. Press  to save and exit.






Alerts

Your phone can alert you with an audible tone when you change service areas, once a minute during a voice call, or when a call has been connected.


The different actions available are:

- **Minute Beep:** an alert tone is sounded every minute that you are connected.
- **Out of Service:** an alert tone is sounded when you come in or out of your coverage area.
- **Connect:** an alert tone sounds when a call connects.
- **Signal Fade/Call Drop:** an alert tone is sounded when the signal fades and the connection is lost.

To enable or disable alert sounds:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Alerts**.
5. Select an option:
 -  for **Minute Beep**

-  for **Out of Service**
-  for **Connect**
-  for **Signal Fade/Call Drop**

6. Select **On** or **Off** using the navigation key.
7. Press  to save and exit.







Key Tone

This menu allows you to select the tone that the phone sounds when you press a key.

Tone Type

Your phone offers a number of different types of key tones (the sounds you hear when you press a key) to suit your preferences.







To change the key tone:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Key Tone**.
5. Press  for **Tone Type**.
6. Select **Normal**, **Xylophone**, or **Voice**.
7. Press  to save and exit.

Tone Length

Your phone offers a number of options for the audible tones that accompany a key press. Voice mail or other automated systems may require long or short time lengths to activate different features.







To select a tone length:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Key Tone**.
5. Press  for **Tone Length**.
6. Select **Short** or **Long**.
7. Press  to save and exit.

Key Tone Level

The Key Tone Level allows you to set the tone volume that accompanies a key press.

To select a key tone level:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Sounds**.
4. Press  for **Key Tone**.
5. Press  for **Key Tone Level**.
6. Press the navigation key right to increase or left to decrease the volume.
7. Press  to save and exit.








Settings

Games / Tools

Backlight

The backlight setting lets you select how long the display screen and keypad are illuminated while playing games.

To change the backlight setting:





1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Games / Tools**.
4. Press  for **Backlight**.
5. Use the navigation key to select **8 Seconds**, **15 Seconds**, **Always On**, or **Always Off**.
6. Press  to save and exit.




Note: Long backlight settings reduce the battery's talk and standby times.

Notification

The Notification option allows you to set whether your phone prompts you of incoming messages while playing games or using tools.

To enable or disable Notification:







 

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Games / Tools**.
4. Press  for **Notification**.

5. Select an option to change:
 -  **Voice Mail:** select **On** or **Off**.
 -  **Message:** select **On** or **Off**.
6. Press  to save and exit.




Text Entry

The Text Entry menu allows you to customize how T9 text entry mode functions on your handset. For more information, see "Entering Characters Using T9 Text Input" on page 31.

To change your Text Entry options:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Text Entry**.
4. Using the navigation keys, select one of the following options and press :
 - **Auto-Capital:** when activated, capitalizes the first word of a sentence. Highlight **On** or **Off** and press .
 - **Auto-Space:** when activated, adds a space after you select a word in T9 Mode. Highlight **On** or **Off** and press .
 - **Input Language:** when activated and you are in T9 Mode, allows you to display choices from both the English and French dictionaries. Highlight **English** or **English + Français** and press .
 - **My Words:** allows you to add words to your personal dictionary.
 - **Used Word Dic.:** when activated, adds the words used to the phone's dictionary. Highlight **Yes** or **No** and press .





Settings

- **Display Candidate.:** when activated and you are in T9 Mode, displays possible word choices on the screen. Highlight **Display On** or **Display Off** and press .
- **Prediction Start:** sets the number of letters required to activate the Display Candidate feature. Highlight the numbers of letters you wish to start Display Candidate and press .
- **Help:** provides additional information on using T9 text entry mode. Scroll up or down using the navigation keys. When you are finished, press the left soft key  for **OK**.

Phone Information



The Phone Information screen displays information about your handset's current hardware and software. The Icon Glossary option can help you identify a display icon whose function you have forgotten.

To access Phone Information:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Phone Information**.
4. Select an option: **Phone Number**, **Icon Glossary**, **Version**, or **Advanced**.
 - When you are finished, press the right soft key  to **Cancel**.

To access Memory Info:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **Phone Information**.

4. Press  for **Memory Info**.
5. Select an option: **Total Usage**, **Music & Media**, **My Albums**, **Games**, **Tools & Apps**, or **Messaging**.
6. When you are finished, the left soft key  for **Done**

More...








Accessibility

TTY Mode

Your phone is Text Telephone-compatible. Connect the TTY equipment to the headset jack, which is located on the left side of the phone. Before you can use your phone with a TTY device, you'll need to enable TTY.

Note: Enabling TTY may impair headset use and non-TTY accessory performance.






To enable TTY:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Accessibility**.
5. Press  for **TTY Mode**.
6. Press the left soft key  for **OK**.
7. Press the navigation key up or down to select **TTY Off**, **TTY Full**, **TTY+Hear** or **TTY + Talk**.
8. Press  to save and exit.

Voice Service



You can customize your Voice Service settings.

To change your Voice Service settings:





1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Accessibility**.
5. Press  for **Voice Service**.
6. Select one of the following:
 - **Choice Lists:** Press the navigation key up or down to select **Automatic**, **Always On** or **Always Off**.
 - **Sensitivity:** Press the navigation key up or down to select **Reject the most**, **Reject more 2**, **Reject more 1**, **Recommended**, **Reject less 1**, **Reject less 2**, or **Reject the least**.

If you select **Reject more**, your phone will require a more exact sound match and if you select **Reject less**, your phone will require a less exact sound match.


- **Digit Dialing:** Press  for **Adapt Digits** and press the left soft key  for **OK**.

Follow the instructions presented on your screen to configure your phone for your voice. You will be prompted to record a series of numbers. After listening to each recording, press the left soft key  for **Yes** to keep the recording, or press the right soft key  for **No** to reject the recording.

Tip: To reset digit dialing, press  for Reset Digits while in the Digit Dialing menu.

- **Sound:** Press  for **Prompts**,  for **Digits**, or  for **Names**. Press the navigation key up or down to select **On** or **Off** and press .







Tip: Press  for **Name Settings** to change the speed and volume that names are repeated.

- **Voice Launch:** Press the navigation key up or down to select **Talk Key** or **Talk Key & Flip Open** and press .

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games, Notepad, Voice Memos, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information. All incoming calls will be sent directly to your voice mail box.









To enable or disable Airplane Mode:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Airplane Mode**.
5. Press the left soft key  for **OK**.
6. Press the navigation key up or down to select **On**, **Off**, or **On PowerUp**.
7. Press  to save and exit.

Browser

The Browser settings allow you to clear History, Cache and Cookies.

To clear your browser settings:





1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More....**
4. Press  for **Browser**.
5. Select an option:
 -  **Clear History:** select **Yes** or **No**.
 -  **Clear Cache:** select **Yes** or **No**.
 -  **Clear Cookies:** select **Yes** or **No**.
6. Press  to save and exit.


Call Setup

Auto Answer

Auto Answer lets you specify an amount of time in seconds after which your phone will automatically answer incoming phone calls. This is useful when your phone is connected to an optional hands-free car kit or headset, for example.

To set up automatic answering:








1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More....**
4. Press  for **Call Setup**.
5. Press  for **Auto Answer**.

6. Press the navigation key up or down to select **Yes** or **No**.
7. Press  to save and exit.


Abbreviated Dialing

Abbreviated dialing allows you to program a five or six digit prefix for commonly used phone numbers. When abbreviated dialing is on, you can enter the last four or five digits and the handset will prepend the six or five digit prefix to the sequence you have entered to complete the dialing number.

To set up abbreviated dialing:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Call Setup**.
5. Press  for **Abbreviated Dialing**.
6. Select **On** or **Off** and press .
7. If you selected **On**, input the five or six digit prefix (for example, area code and prefix) and press .







To make an Abbreviated Dial call:

1. Enter the last four or five digits of the prefix phone number. Abbrev. Dial is displayed in the lower left corner with the prefix digits displayed.
2. Press  to make the call.


Call Answer

You can specify the ways in which you can answer incoming phone calls.


 
To set the actions required to answer an incoming call:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Call Setup**.
5. Press  for **Call Answer**.
6. Using the navigation keys, select **Any Key**, **Talk Key** or **Flip Open**.
7. Press  to save and exit.


Contacts Match

With the Contacts Match feature On, you can dial the last few digits and press . A list of Contacts entries appear whose last few digits match the sequence you dialed.

To set up Contacts Match:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Call Setup**.
5. Press  for **Contacts Match**.
6. Select **On** or **Off** and press .

Making a call using Contacts Match:










1. Dial the last few digits of the desired number and press . A list of Contacts entries appear whose last few digits match the sequence you dialed.

2. Use the up or down navigation key to select the Contact you want to call and press .

Auto Prepend

When enabled, Auto Prepend prefixes any number you dial with the prefix (Auto Prepend #) you configure. For example, if you edit the Auto Prepend number to read *76, and you turn Auto Prepend on, then all phone numbers you dial will begin with *76.

To enable and configure Auto Prepend:



1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Call Setup**.
5. Press  for **Auto Prepend**.
6. Ensure **Set** is highlighted and press .
7. Select **On** and press  to save.
8. Press the navigation key down to select **Edit** and press .
9. Enter the digits you want to prepend to dialed phone numbers and press  to save and exit.

Plus Dialing








When enabled, Plus Dialing allows you to dial international numbers with the prefix you configure.

To enable Plus Dialing:

1. Press  for **Menu**.
2. Press  for **Settings**.

3. Press  for **More...**
4. Press  for **Call Setup**.
5. Press  for **Plus Dialing**.
6. Press  for **Plus Code**.
7. Select **Enable** and press  to save.

To configure an International Dial Prefix:






1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Call Setup**.
5. Press  for **Plus Dialing**.
6. Press  for **International Dial Prefix**.
7. Enter the international dialing prefix number and press  to save.

Data Setup

Your phone is capable of sending and receiving digital data and fax calls when connected to a computing device (laptop, desktop, hand held, palmtop, etc.) running the Windows operating system. Your phone functions similar to a modem on your PC, enabling you to use wireless data involving a wide variety of Windows applications.

To use digital data or fax services with your phone, you will need to obtain a digital data/fax kit from your service provider. This kit contains the necessary cables, software, and documentation required for you to connect and use your phone with your computing device.






To modify the Data Setup option settings:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Data Setup**.
5. Using the navigation keys, highlight the desired option.
 - **Data:** Configure the type of connection options. Use the navigation keys to select one of the following.
 - **Date/Fax Off:** Allows normal voice call use.
 - **Fax In Once:** No voice calls can be received. Allows one incoming fax call, and then reverts to Off.
 - **Fax In Always:** No voice calls can be received. Only allows incoming Fax calls.
 - **Data In Once:** No voice calls can be received. Allows one incoming data transmission and then reverts to Off.
 - **Data In Always:** No voice calls can be received. Only allows incoming data transmissions.
 - **PC Connection:** Configure the connection to your PC. Select **NULL DEV**, **USB CDC**, or **BT NA**.
 - **Do Not Disturb:** When turned on, no voice calls can be received while data is being transferred.
6. Press  to save and exit.

Headset Mode

Headset Mode provides you with the option of identifying to the handset whether the earpiece is to be treated like a stereo earpiece or a mono earpiece.

To change Earpiece settings:









1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Headset Mode**.
5. For Earpiece, select either **Stereo** or **Mono** and press .

Location

Your phone is equipped with a Location feature for use in connection with location-based services that may be available in the future. The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note: Even if the Location feature is enabled, no service may use your location information without your expressed permission.







To enable your phone's Location feature:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Location**. (A brief explanation will display. Use your navigation key to scroll through to read the entire text.)
5. Press  to continue.
6. Press the navigation key up or down to select **On** or **Off**.
7. Press  to save and exit.
8. When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will display.






Restrict and Lock

You can change the Restrict and Lock settings to prevent all incoming and outgoing calls, restrict calls to Contacts only or to allow only special numbers such as 911 or Customer Service. You can also lock your phone and/or camera.

To modify the restrict and lock settings of voice calls:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Restrict and Lock**.
5. Press  for **Voice**.
6. Enter your User Lock. The factory settings are the last four digits of your telephone number.
7. Select an option:
 - **Restrict:** select **Outgoing Call** followed by **Allow all**, **Contacts Only**, or **Special # Only**.
 - **Lock:** select **Lock** or **Unlock**.
8. Press  to save and exit.

To modify the lock settings of your camera:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Restrict and Lock**.
5. Press  for **Camera/Pictures**.

6. Enter your User Lock. The factory settings are the last four digits of your telephone number.
7. Select **Unlock, Camera/Video, Picture** or **Lock All**.
8. Press **OK** to save and exit.

To modify the lock settings of your phone:


1. Press **OK** for **Menu**.
2. Press **12.6** for **Settings**.
3. Press **6 menu** for **More....**
4. Press **8 lock** for **Restrict and Lock**.
5. Press **3 lock** for **Lock my Phone**.
6. Enter your User Lock. The factory settings are the last four digits of your telephone number.
7. Select **Unlocked, On Power-Up, or Lock Now**.
8. Press **OK** to save and exit.

Roaming

Your System screen allows you to control your ability to roam (access other compatible service provider networks).

To modify roaming behavior:







 

 
 
1. Press **OK** for **Menu**.
2. Press **12.6** for **Settings**.
3. Press **6 menu** for **More....**
4. Press **9 roaming** for **Roaming**.


5. Select an option:
 - **Set Mode:** controls which networks you can access. Select **Automatic** to have the phone search for an alternate system when your Home system is not available, or select **Home Only** to prevent your phone from roaming on other networks.
 - **Set NAM:** select **NAM 1** or **NAM 2**.
 - **Call Guard:** select **On** or **Off**.
6. Press  to save and exit.

Security

The Security screen allows you to lock your phone and camera, erase contacts, set restrictions, and other security options.

To access the Security option settings:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More....**
4. Press  for **Security**.
5. Enter your user lock code. Select one of the following options:
 -  **Change Lock Code:** changes the lock code for your phone. Enter the new number and press the left soft key  for **Next**. You will be asked to confirm the new number. After you re-enter the lock code, press the left soft key  for **Done**.
 -  **Special Numbers:** allows you to enter special phone numbers which can be called even if the phone is locked. Select one of the slots and press the left soft key  for **Select**. Type in the new number and press  to save.






-  **Erase/Reset:** Select one of the following options:
 - **Erase Web Cookies:** deletes your web browser's cookies. Select **Yes** or **No**.
 - **Erase Web History:** deletes your web browser's history. Select **Yes** or **No**.
 - **Erase Web Cache:** deletes your web browser's cache. Select **Yes** or **No**.
 - **Erase Phonebook:** deletes the contents of your Contacts. Select **Yes** or **No**.
 - **Erase My Content:** deletes the contents of My Content. Select **Yes** or **No**.
 - **Erase Pic/Video:** deletes the contents of your Image and Video Albums. Select **Yes** or **No**.
 - **Reset All Settings:** resets all settings. Select **Yes** or **No**.
 - **Reset Phone:** returns all phone options to their factory defaults. Select **Yes** or **No**.

Key Guard

The Key Guard feature helps to prevent accidental key presses when the handset is in your pocket or purse. When the Key Guard is on, the buttons are disabled until the handset is flipped open. There are three settings available:

- **Flip-closed:** Activates Key Guard as soon the handset is flipped closed. This will prevent you from taking pictures with the handset closed.
- **After 5 Seconds:** Activates Key Guard five seconds after the handset is closed.
- **Off:** Deactivates the Key Guard feature.

To change the Key Guard settings:

1. Press  for **Menu**.
2. Press  for **Settings**.
3. Press  for **More...**
4. Press  for **Key Guard**.
5. Press the navigation key up or down to select **Flip-closed, After 5 Seconds** or **Off** and press  to save and exit.



Settings

Safety

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below. In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120

scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Try not to cover the phone's antenna.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a dealer store or call Customer Support for service.

Note: For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN Canada, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

UL Certified Travel Adaptor

The Travel Adaptor for this phone has met UL 1310 safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTIONS TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTED IN THE A VERTICAL OR HORIZONTAL OR FLOUR MOUNT POSITION.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

When using your phone in the car:

- Get to know your phone and its features, such as speed dial and re-dial.

- When available, use a hands-free device.
- Position your phone within easy reach.
- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.
- Dial sensibly and assess the traffic; if possible, place calls when stationary or before pulling into traffic.
- Do not engage in stressful or emotional conversations that may divert your attention from the road.
- Dial 911 to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call roadside assistance or a special non-emergency wireless number when necessary.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor

vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily

injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone, dial 911 by mistake or make calls that increase your phone bill.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Samsung approved batteries and travel adapters. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.

- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. When used correctly, the battery can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:
 - Less than one month:
4° F to 140° F (-20° C to 60° C)
 - More than one month:
4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Lilon) Batteries

For safe disposal options of your Lilon batteries, contact your nearest service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking Lilon battery.

Acknowledging Special Precautions and Industry Canada Notice

Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of hardware and can be broken. Use common-sense guidelines to avoid dropping, hitting, bending or sitting on it.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- Reorient / relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the SPH-u540 are:

Part 22 (CDMA) Head : 1.36 W/kg

Body-worn : 0.874 W/kg

Part 24 (PCS) Head : 1.25 W/kg

Body-worn : 0.833 W/kg

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: SCH-u540

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307	5,109,390	5,267,262	5,416,797
5,506,865	5,544,196	5,657,420	5,101,501
5,267,261	5,414,796	5,504,773	5,535,239
5,600,754	5,778,338	5,228,054	5,337,338
5,710,784	5,056,109	5,568,483	5,659,569
5,490,165	5,511,073		

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Safety

Warranty

STANDARD LIMITED WARRANTY

What is Covered and For How Long? SAMSUNG Electronics Canada Inc. ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone 1 Year

Batteries 1 Year

Leather Case/Pouch/Holster 90 Days

Game Pad 90 Days

Other Phone Accessories 1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product; or (g) Product used or purchased outside Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if: (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (i) any of the seals on the battery are broken or show evidence of tampering; or (IA) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-800-Samsung. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer.

164 Warranty

All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits On SAMSUNG's Liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND SHALL BE PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR

REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Electronics Canada, Inc.

© 2007 Samsung Electronics Canada Inc. Samsung is a registered trademark of Samsung Electronics Co. Ltd. and its related entities.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice.

#861826 v2 | 4032342

Index

A

- Accessibility
 - TTY (Text Telephone) *139*
- Airplane Mode *141*
- Alert Notification *133*
- Application Settings *136*
- Auto-Answer *142*

B

- Battery
 - Charging *4, 6*
 - Disposal *160*
 - Installing *4, 5*
 - Removing *6*

- Bluetooth
 - Using *101*

C

- Calculator *103*
- Calendar *104*
- Call History *44*
 - Erasing *46*
 - Options *45*
 - Viewing *44*
- Call Options *28*
- Call Settings, incoming *124*
- Call Timers *46*
- Call Waiting *34*
- Caller ID *33*
- Camcorder *80*
- Camera *72*
 - Camera Mode Options *74, 81*
- Choice Lists *117*

D

- Display *15*
- Display Language *128*
- Display Screen Symbols *14*

E

- E-Mail *64*
- Emergency Numbers *24*
- Entering Text
 - ABC Mode *32*
 - Selecting a Character Input Mode *30*
 - Symbols and Numbers *33*
 - T9 Text Input *31*

F

- Favourites Menu *35*

G

- Game Settings *136*
- Games *87*
- GPS Services *89*
- Groups *39*
 - Options *41*
 - Sending Messages To *40*

H

- headset jack *10*

I

- Icons *15*
- IM & chat *64*
- Images
 - Downloading *87*
- Inbox *55*

Incoming Call Settings *124*
Instant Messaging (IM) *64*
Interior Screen *15*

K

Keypad
 Sounds *134*

L

Life Time *46*
Location Settings *148*
Locking the Phone
 Changing Lock *151*

M

Making Calls *23*
Mass Storage *109*
Meeting / Silent Mode *132*
Memo Pad *111*
memory card *19*
Menus
 Navigation *66*
Messaging *48*
 Default Text Entry Mode *62*
 Erasing Text Messages *60*
 Forwarding Messages *57*
 Message Setup Options *60*
 Options for Sending *54*
Micro SD card *19*
Missed Call Notification *27*
Multimedia Messages *51*
Music *91*
My Albums *85*

N

Name Card *43*
Navigating Through Menus *66*

O

Outbox *57*

P

PCS Services
 Call Waiting *34*
 Caller ID *33*
Phone Book (Contact List)
 Adding a Contact *36*
 Adding an Entry *36*
 Assigning Photos to Contacts
 38
 Assigning Ringers to Con-
 tacts *38*
 Calling a Number From *25*
 Creating Groups *39*
 Finding Entries *37*

Phone Number
 Displaying *23*

Phone Numbers
 Saving *30*
 With Pauses *24*

PictBridge Print *78*
playlists *93*

R

Recording Conversations *113*
Redial *23*
Ringers *130*
Ringtones
 Downloading *87*

S

Screen *15*
Security Settings *151*
Sent Messages *57*
Settings *123*

- Short Codes *65*
- Silent Mode *132*
- SPARK Menu *34*
- Speed Dialling *25*
- Speed Dials
 - Configuring *42*
 - Editing *42*
- T**
- T9 Text Input *31*
- Text Messages *51*
- Text Telephone (TTY) *139*
- Time
 - Total Used *46*
- Tools *100*
- TTY *139*
- Turning Your Phone On and Off *7*
- TV *88, 89*
- V**
- Viewing Your Files *85*
- Voice Dial
 - Changing Prompts *121*
 - Changing Voice Dial Sensitiv-
ity *120*
 - Changing Voice Launch *122*
- Voice Mail
 - Clearing *50*
 - Notification *49*
 - Retrieving *50*
 - Setting Up *48*
- Voice Memo
 - Options *114*
- Voice Memos *112*
 - Recording Conversations
113
- Voice Recognition
 - Activating *114*
- Volume *24, 129*
- W**
- Web Alert *63*
- Wireless Web
 - Launching the Browser *97*
 - Navigating *97*
- World Time *112*