



SGH-X500

QUICK GUIDE

 
This guide explains how to set up your phone and gives a quick overview of the main functions of the phone.

World Wide Web
http://www.samsungmobile.com


Printed in Korea
Code No.: GH68-11156A
English(EU). 05/2006. Rev.1.0

Installing the SIM card and battery

1. Remove the battery cover, and insert the SIM card.

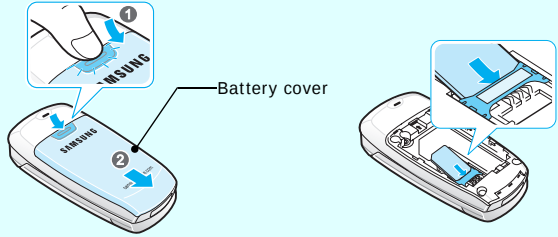


 2. Install the battery and reattach the cover.

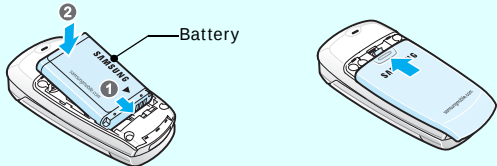


Charging the battery

 1. Plug the supplied travel adapter.

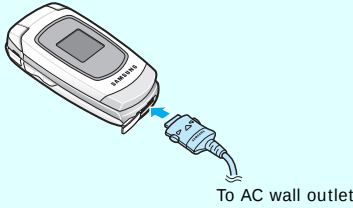


 2. When charging is finished, unplug the adapter.

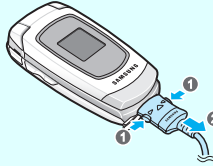

Note: Do not remove the battery from the phone without unplugging the adapter first. Otherwise, the phone may be damaged.

 
Phone layout and key functions

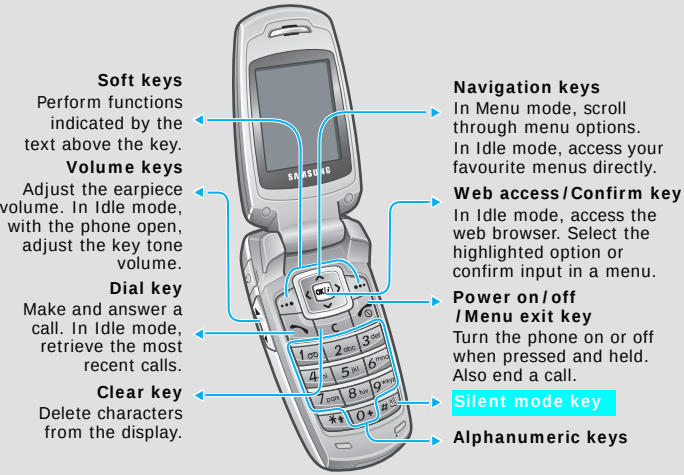

Silent mode Disable all sounds on the phone, when pressed and held ***** in Idle mode. To exit, press and hold this key again.

Display

 Your phone is in Idle mode when you are not on a call or using a menu. You must be in Idle mode to dial a phone number.

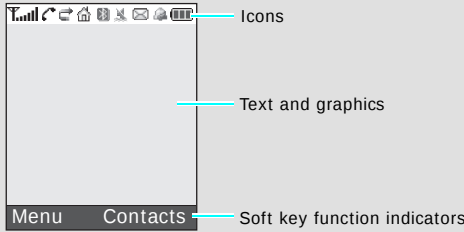

Your phone displays the following status indicators on the top of the screen:


Icon	Description
	Received signal strength
	Call in progress
	Out of your service area; you cannot make or receive calls.

Icon	Description (Continued)
	GPRS network
	Roaming network
	Call diverting feature active
	Home Zone, if registered for the appropriate service
	Office Zone, if registered for the appropriate service
	Bluetooth active
	Alert type set to vibrate
	Quiet mode (Vibration)
	Quiet mode (Mute)
	Mute mode, during a call
	New message
	New voicemail
	Alarm set
	Battery power level

Using the menus

In Idle mode, press the **Menu** soft key to enter the main menu.

 Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (**Left**) or right soft key (**Right**) to perform the function indicated.

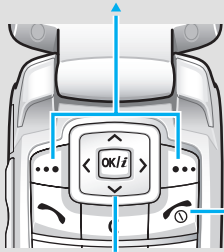

To exit the menu without changing the menu settings, press this key.

Use the Navigation keys (**Left**, **Right**, **Up**, **Down**) as shortcuts to access your favourite menus.

1. In Idle mode, press the **Menu** soft key.
2. Select **Settings** → **Phone settings** → **Shortcuts**.
3. Select a key.
4. Press the **Options** soft key and select **Change**.
5. Select a menu to be assigned to the key.

To select or modify a menu or feature:

1. In Idle mode, press the **Menu** soft key.
2. Press the Navigation keys to reach a desired menu and then press the **Select** soft key or **OK**.
3. If the menu contains any submenus, locate the one you want by pressing the Navigation keys. Press the **Select** soft key or **OK** to enter the submenu.

If the selected menu contains additional submenus, repeat this step.
4. Press the Navigation keys to find the setting of your choice.
5. Press the **Select** soft key or **OK** to confirm your chosen setting.

Shortcut numbers

You can quickly access the menu you want by using shortcut numbers. The shortcut number displays in front of the menu name in Menu mode.

Switching on or off the phone

1. Press and hold **Power** for more than one second to switch on the phone.
2. To switch off the phone, press and hold **Power** for more than two seconds.

Changing the display language

1. In Idle mode, press the **Menu** soft key.
2. Select **Settings** → **Phone settings** → **Language**.
3. Select a language.

Making a call

1. In Idle mode, enter the area code and phone number, and press **Call**.
2. To end the call, press **End call**.

Answering a call

1. When the phone rings, press **Answer** to answer a call.
2. To end the call, press **End call**.

Menu map

1. Call log

- 1.1 Recent contacts
- 1.2 Missed calls
- 1.3 Dialed calls
- 1.4 Received calls
- 1.5 Delete all
- 1.6 Call time
- 1.7 Call cost *

2. Phonebook

- 2.1 Contact list
- 2.2 Add new contact
- 2.3 Group
- 2.4 Speed dial
- 2.5 My namecard
- 2.6 Own number
- 2.7 Management

3. Applications

- 3.1 Java world
- 3.2 Voice recorder
- 3.3 World clock
- 3.4 Alarm
- 3.5 Calculator
- 3.6 Converter
- 3.7 Timer
- 3.8 Stopwatch
- 3.9 Memo
- 3.0 SIM AT*

4. Browser

- 4.1 Home
- 4.2 Bookmarks
- 4.3 http://
- 4.4 WAP profile
- 4.5 Clear cache

* Shows only if supported by your SIM card.

5. Messages

- 5.1 Create message
- 5.2 My messages
- 5.3 Templates
- 5.4 Delete all
- 5.5 Settings
- 5.6 Memory status

6. My files

- 6.1 Images
- 6.2 Videos
- 6.3 Sounds
- 6.4 Other files
- 6.5 Memory status

7. Calendar

8. Bluetooth

9. Settings

- 9.1 Time and date
- 9.2 Phone settings
- 9.3 Display settings
- 9.4 Sound settings
- 9.5 Network services
- 9.6 Security
- 9.7 Connection settings
- 9.8 Reset settings

✦ Entering text

Changing the text input mode

- Press and hold **✧** to switch between T9 mode (**123Ab**) and AB mode (**ABAb**).
- Press **✧** to change case or switch to Number mode (**123**).
- Press and hold **✧** to switch to Symbol mode.

T9 mode

- Press **2** to **9** to start entering a word. Press each key once for one letter.

Example: To enter “Hello” in T9 mode, press **4**, **3**, **5**, **5**, and **6**.

T9 predicts the word that you are typing, and it may change with each key that you press.
- Enter the whole word before editing or deleting characters.
- When the word displays correctly, go to step 4. Otherwise, press **0** to display alternative word choices for the keys that you have pressed.
- Press **✧** to insert a space and enter the next word.

Feature	Description	Select
My name card	Create a name card and send it to other people.	Menu > Phonebook > My namecard
Check your own phone numbers	Check your phone numbers or assign a name to them.	Menu > Phonebook > Own number
Management	Manage contacts in Phonebook.	Menu > Phonebook > Management
Java world	Access the embedded Java games and downloaded Java applications.	Menu > Applications > Java world
Voice memo	Record voice memos and listen them.	Menu > Applications > Voice recorder
World clock	Set your local time zone and find out the current time in another part of the world.	Menu > Applications > World clock
Alarm	Set an alarm to sound at a specific time.	Menu > Applications > Alarm
Calculator	Perform basic arithmetic functions.	Menu > Applications > Calculator
Converter	Do conversions such as currency and temperature.	Menu > Applications > Converter
Timer	Set a period of time for the phone to count down.	Menu > Applications > Timer
Stopwatch	Measure elapsed time.	Menu > Applications > Stopwatch

Feature	Description	Select
Power on/off tone	Select the melody that the phone sounds when it is switched on or off.	Menu > Settings > Sound settings > Power on/off
Folder tone	Select the tone that the phone sounds when you open or close the phone.	Menu > Settings> Sound settings > Folder tone
Set Quiet mode	Set how the phone acts to alert you to a specific event while in Quiet mode.	Menu > Settings> Sound settings > Quiet mode
Set extra tones	Set additional tones for the phone.	Menu > Settings > Sound settings > Extra tones
Network services	Access network services offered by your service provider.	Menu > Settings > Network services
Security	Protect the phone against unauthorised use.	Menu > Settings > Security
Connection settings	Create and customise the profiles containing the settings for connecting your phone to the network.	Menu > Settings > Connection settings
Reset the phone	Reset the phone to the factory default settings.	Menu > Settings > Reset settings

AB mode

Press the keys labelled with the character you want:

- once for the first character
- twice for the second character
- and so on.

For example, press **2** three times to enter “C” and **5** two times to enter “K.”

Number mode

Press the keys corresponding to the digits you want.

Symbol mode

Press the number keys corresponding to the symbol you want and press the **OK** soft key. You can press **Up** or **Down** to display more symbols.

Tips for entering text

- To move the cursor, press the Navigation keys.
- To delete characters one by one, press **C**. To clear the display, press and hold **C**.
- To insert a space between characters, press **✧**.
- To enter punctuation marks in T9 mode or AB mode, press **1**.

Feature	Description	Select
Memo	Create memos.	Menu > Applications > Memo
SIM service	Use a variety of additional services offered by your service provider.	Menu > Applications > SIM AT
Access the homepage	Connect to the network and load the homepage of the wireless web service provider.	Menu > Browser > Home
Bookmarks	Save URL addresses in order to quickly access web pages.	Menu > Browser > Bookmarks
Use http://	Manually enter a URL address and access the associated web page.	Menu > Browser > http://
WAP profile	Select a connection profile to be used for accessing the wireless web.	Menu > Browser > WAP profile
Clear cache	Clear information stored in the cache.	Menu > Browser > Clear cache
Send SMS or MMS messages	Create and send messages to other mobile phones.	Menu > Messages > Create message
Read SMS or MMS messages	Read received, saved, or sent messages.	Menu > Messages > My messages > Inbox, Drafts, Outbox
Message templates	Preset template of frequently used messages.	Menu > Messages > Templates

✦ Important safety precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Drive safely at all times
Do not use a hand-held phone while driving; park the vehicle first.

Switching off when refueling
Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switching off in an aircraft
Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching off near all medical equipment
Hospitals and health care facilities may be using equipment that could be sensitive to external RF energy. Follow any regulations or rules in force.

Interference
All wireless phones may be subject to interference, which could affect their performance.

Special regulations
Follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it.

Water resistance
Your phone is not water-resistant. Keep it dry.

Sensible use
Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls
Key in the emergency number for your present location, then press **☎**. Do not end the call until given permission to do so.

✦ Sending an SMS message

- In Idle mode, press the **Menu** soft key.
- Select **Messages** → **Create message** → **Text message**.
- Enter the message text.
- Press the **Options** soft key and add items using the following options:
 - Insert**: add text templates, Phonebook contacts, or bookmark items.
 - Add image**: add images.
 - Add animation**: add emoticons, or animated images.
 - Add melody**: add sounds.
 - Attach**: add scheduled items.
- Press the **Options** soft key and select **Save and send**, or **Send only**.
- Enter a destination number and press **☎**.

Feature	Description	Select
Delete messages	Delete messages in each message box.	Menu > Messages > Delete all
Messaging options	Set options for using messaging services.	Menu > Messages > Settings
Message memory status	Check memory information for messages.	Menu > Messages > Memory status
Access media files	Access images, videos, sounds, and other files in your phone's memory.	Menu > My files
My files memory status	Check the amount of memory in use for images, videos, sounds, and other files.	Menu > My files > Memory status
Calendar	Keep track of daily or monthly schedules.	Menu > Calendar
Bluetooth	Connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.	Menu > Bluetooth
Time and date	Set the current time and date manually.	Menu > Settings > Time and date
Display language	Select a language to be used for the display text.	Menu > Settings > Phone settings > Language

Small children and your phone
Keep the phone and all its parts including accessories out of reach of small children.

Accessories and batteries
Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage you or your phone and may be dangerous.

CAUTION

Risk of explosion if a battery is replaced by an incorrect type. Dispose used batteries according to the manufacturer's instructions.

At very high volume, prolonged listening to a headset can damage your hearing.

Qualified service
Only qualified service personnel may repair your phone.

✦ SAR information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the European Union (EU) Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organizations through periodic and through evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the EU Council is 2.0 W/kg. The highest SAR value for this model phone was 0.858W/kg.

✦ Quick feature reference

This section provides brief explanations of features on your phone.

Feature	Description	Select
View recent calls	View the most recent calls you have dialled, received, or missed.	Menu > Call log > Recent contacts, Missed calls, Dialled calls, Received calls
Delete recent calls	Delete the call logs in each call type, or all logs at once.	Menu > Call log > Delete all
Call time display	View the duration of recent calls you have dialled and received. Also reset the time counter.	Menu > Call log > Call time
Call cost display	View the cost of your calls.	Menu > Call log > Call cost
Find a contact	Search for contacts in Phonebook.	Menu > Phonebook > Contact list
Add a new contact	Add a new contact to Phonebook.	Menu > Phonebook > Add new contact
Use caller group	Organise your contacts in caller groups.	Menu >Phonebook > Group
Speed dial	Assign speed dial numbers (2 to 9) for eight of your most frequently dialled numbers.	Menu > Phonebook > Speed dial

Feature	Description	Select
Greeting message	Enter the greeting message to be displayed when the phone is switched on.	Menu > Settings > Phone settings > Greeting message
Menu shortcuts	Set the Navigation keys as shortcuts to access your favourite menus directly.	Menu > Settings > Phone settings > Shortcuts
Volume key	Set whether the phone mutes the call ringer or rejects a call if you press and hold the Volume keys when a call comes in.	Menu > Settings > Phone settings > Volume key
Extra settings	Set the automatic redialling feature or the answering method.	Menu > Settings > Phone settings > Extra settings
Display settings	Change settings for the display and backlight.	Menu > Settings > Display settings
Select ringtone and volume	Select a ringtone for incoming calls, or a volume level.	Menu > Settings > Sound settings > Incoming call
Select key tone	Select a tone which the phone sounds when you press a key.	Menu > Settings > Sound settings > Keypad tone
Select Message tone	Select the alert ringtone for incoming SMS, MMS, and broadcast messages, or set how often you are informed of a new message.	Menu > Settings > Sound settings > Message tone

✦ Declaration of Conformity (R&TTE)

Model description: Portable Celluar Telephone (GSM 900/1800/1900) with Bluetooth

Model name: SGH-X500

Manufactured at: Samsung Electronics Co., Ltd, 94-1, Imsoo-Dong, Gumi City, Kyung-Buk, Korea, 730-350* to which this declaration relates, is in conformity with the following standards and/or other normative documents.

Safety	: EN 60950-1:2001	SAR	: EN 50360:2001
EMC	: EN 301 489-01 v1.4.1 (08-2002)		: EN 50361:2001
	: EN 301 489-07 v1.2.1 (08-2002)	Network	: EN 301 511 v9.0.2 (03-2003)
	: EN 301 489-17 v1.2.1 (08-2002)		: EN 300 328 v1.6.1 (11-2004)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/ EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, UK
dentification mark: 0168

The technical documentation kept at:
Samsung Electronics QA Lab.
which will be made available upon request. (Representative in the EU)
Place and date of issue:
Samsung Electronics Euro QA Lab.
Blackbushe Business Park,Saxony Way, Yateley, Hampshire, GU46 6GG, UK
2006.05.04

Yong-sang Park / S. Manager

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.