

SPICEDUAL

spice™ D-1100

 
India's 1st Dual SIM GSM PDA



FREE WITH THIS PACK

512 MB
Memory Card

Leather
Cover

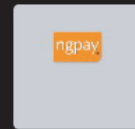

spice™
MOBILE PHONES

www.spicemobile.in

Welcome to use D-1100

D-1100 is a dual-GSM digital mobile phone with GPRS supported, 262K color TFT display, 2.0 mega pixel camera, Pocket Word , Excel , PowerPoint ,MSN , Outlook, WAP service and common PDA functions and can provides Pocket Internet Explorer and Windows Media Player for user.

This phone is designed to support two SIM cards simultaneously. There are two SIM slots in this phone, one is defined as A-SIM slot, and another is B-SIM slot. The SIM in the A slot is called A-SIM, the SIM in the B slot is called B-SIM. With this phone, you can choose whether to operate the A-SIM or B-SIM. The B-SIM mode can't support MMS, STK, WAP, GPRS, Chat, Voice Mailbox, Fixed Dialing, Call Waiting, Three-party call and conference call.

Note: In this user manual, to “press” or “tap” a key means to press shortly; to “long press” a key means to press and hold for a while (> 2 seconds).

- ✧ Please carefully read this manual before you use the phone.
- ✧ For a newly bought phone, charge it for 4 hours before the first time of use, and charge the second time only after the power has been used up. Repeat this several times, and the battery will reach the best use effect.
- ✧ This manual is for illustration purposes only. The phone and its accessories are subject to update without notice.

Table of contents

Welcome to use D-1100	1
Safety	5
Notice to the Use of Battery and Charger	6
Introduction	8
Name and Functions of the Parts of the Phone	8
Description of Display Contents	9
Phone and Accessories	10
Specifications	10
Standby Time / Max. Talk Time	10
About SIM Card, and the Battery	11
To insert SIM card, and battery	11
To remove the battery, SIM card	12
To charge the battery	13
To switch on and off	13
Standby Mode	14
Today screen	15
Using the Input Panel	16
Using the ABC Input	16
Using the Block Recognizer	17
Using English Input	17
Using the on- screen keyboard	18
Using the Letter Recognizer	19
Using Transcriber	19
Calling	21
To make calls	21
To Dial in standby mode	21
To insert a pause symbol when dialing	22
Use the Phone Dialing Application	23
Speed Dialing	24
To Dial from Contacts List	24
To dial from the phonebook	24
To answer or reject a call	24
Missed Calls	25
Call History	25
Call Option	25
To be mute during a call	25
Call Hold	25
Create Call Notes	26
To adjust volume of the speaker during a call	26
DTMF (Dual Tone MultiFrequency) Tone	26
A-SIM/ B-SIM Lock	26
GSM Call Waiting	26
Managing Personal Information	27

Contacts.....	27
Contacts List	27
To add New Contacts	28
To search Contact.....	28
Contact Backup.....	28
Calendar	29
Open the Calendar Application	29
To add New Appointments.....	30
View and Edit Appointments	31
Task.....	32
Open the Tasks Application.....	32
To add new tasks	32
Notes	33
Open the Notes Application	33
To add new notes.....	34
Exchanging Messages.....	35
Types of Accounts.....	35
A-SIM SMS	36
Send A-SIM SMS.....	36
Inbox	36
Outbox/Drafts.....	37
B-SIM SMS	37
Send B-SIM SMS.....	37
Inbox	37
Outbox/Drafts.....	38
MMS	38
To send MMS.....	38
Inbox	39
Outbox/Drafts.....	39
Setting Up Your PDA Phone	40
Personal Settings.....	40
A-SIM Phone Settings	40
B-SIM Phone Settings.....	40
Owner Information.....	41
Today Screen Settings	42
Sounds & Notifications.....	42
Buttons Settings	43
Menus Settings	44
Input Settings	45
Lock	46
SIM Information	47
System Settings.....	47
GPS Settings	47
To change the device name	48

Memory	48
To remove programs	49
Regional Settings	49
Screen Settings	50
Reset to factory Settings.....	50
Clock and Alarms	51
Power	52
Backlight Settings	52
Certificates	53
Connections Settings.....	53
Standby Mode Settings	53
Beam	54
USB to PC.....	54
Network Cards	55
Bluetooth.....	55
Connections.....	57
Setting a GPRS Connection	58
Connect GPRS	61
Disconnecting GPRS.....	62
Working with Documents and Files	63
Microsoft Office Word Mobile.....	63
Microsoft Office Excel Mobile	63
Microsoft Office PowerPoint Mobile.....	64
Experiencing Multimedia	65
Pictures & Videos.....	65
To Open Pictures&Videos	65
To copy media files to your device	65
To view media files	65
Pictures and Videos Menu.....	65
Edit a picture	65
Camera	65
Video	66
Windows Media Player Mobile.....	66
Games	66
Calculator.....	67
KJava	68
Internet Sharing	69
Using Bluetooth.....	70
Bluetooth modes	70
To turn Bluetooth on and make your device visible.....	70
Bluetooth partnerships	70
Beam information using Bluetooth	71
ngpay	71
Reuters	73

<i>SIM Tool Kit</i>	74
<i>About Synchronization</i>	75
Synchronizing with Your PC.....	75
Synchronizing with Exchange Server	76
<i>File Explorer</i>	78
<i>Searching Information</i>	79
<i>Maintenance</i>	80
<i>Troubleshooting</i>	81
<i>After Services</i>	81

Safety

- Before you use the phone, please carefully read this section to grasp the correct method of use and ensure the safety of the holder, others and properties.
- All the screens in this manual are for reference only, and some contents actually displayed may depend on the presetting of the service provider or the network operator, or the A/B card. If any functions referred to in this manual are different from those of your phone, please follow your phone.
- The specifications and appearance of this product are subject to change due to improvement of functions without notice.
- For GSM service-related problems, consult your GSM service provider.
- Please back up your important data timely and keep them properly. The company is not liable for any failure to call or loss of data due to misoperation, poor signal or power cut, etc.
- Do not use the phone in an environment of extremely high or low temperature, otherwise, malfunctions may be caused. Use the phone in temperatures between 5oC and 35oC and a humidity of 35% to 85%.
- Using the phone in an environment of moist or high humidity may cause malfunctions of the phone, the charger and the battery.
- Do not drop or strongly impact the phone, otherwise, malfunctions may be caused and the phone can't be used.
- Do not use the phone near any electronic device vulnerable to interference. Otherwise, malfunctions of electronic device may be caused. Such electronic devices include medical electronic devices, such as hearing aids and pacemaker, fire alarms, auto doors and other automatic equipment. If you have to use the phone near such devices, please first consult the manufacturers and dealers of these devices to avoid interference.
- Switch off the phone when you are on the plane or in the hospital where the use of mobile phones is prohibited to avoid interfering with electronic and medical equipment. If you have to use the phone in such places, please follow the regulations of the sites.
- The phone has an internal antenna. When switched on, do not hold the antenna area on the top of the phone, otherwise, the quality of connection and the performance of the antenna may be influenced, and the max. talk time may be reduced.
- To avoid degaussing, do not put financial cards, phone cards or other magnetic cards near the charger and the phone to avoid failure of use due to the cards.
- Do not place the phone and the battery under direct sunlight or in a car under burning sun or other places of high temperature to avoid injury due to overheating, leakage, cracking, distortion, or even fire of the battery.

 
-
- Do not put the phone in a place with excessive dust or vibration (which may cause failure) to avoid malfunctions of the phone.
 - Do not take apart the phone, the charger and the battery, or modify the internal structure without permission to avoid malfunctions and accidents.
 - Do not let children fiddle with the phone or the accessories to avoid injuring themselves or others, or damaging the phone or the accessories. The phone or the accessories may contain small removable components which may easily cause suffocation of children.
 - If the phone is contaminated, please wipe it with a dry cloth. Do not use organic solvent such as gasoline to wipe the phone to avoid causing damages of the outer surface.
 - If smoke or peculiar smell is produced during use, please immediately switch off the phone and remove the battery. Please have the phone repaired as arranged by the store where you bought the phone. Do not continue to use to avoid causing injury.
 - Do not dispose the phone as urban waste. For details, please refer to the local regulations for the disposition of waste electronics.

Notice to the Use of Battery and Charger

- The time for using the battery is an estimated time under 25 °C and stable signal. If used in a place with weak signal, extremely high or low temperature, or outside the service area, the consumption of battery power will be faster, thus the standby time and max. talk time may be reduced.
- Please use the accessories, such as battery and charger, specified by the company to avoid risks due to overheating, leakage, explosion, or even fire of the battery caused by non-compliance with the specifications.
- The battery should be put in a cool, ventilative and sunlight-free place. If the battery is in the exhausting status for a long time, it can't be charged. Therefore, if you do not use the phone for long, please charge the battery periodically.
- The battery is expendable goods. All the batteries have a certain life. If the performance of the battery can't be improved after repeated charging, the battery may be discarded as useless and must be replaced with a new one.
- Please fully charge the battery before you use the newly bought phone.
- Do not charge the battery in a place with direct sunlight, a temperature equaling to or below 0 °C or equaling to or above 45 °C, high humidity, excessive dust or vibration (which may cause failure), or a place near TV or radio (as it may produce noise interference to video or sound signal).
- Please switch off the phone and wait over 2 seconds before removing the battery.
- Do not dismantle the phone and the charger for modification without permission to avoid malfunctions or injury.
- Do not strongly impact or throw the phone or the battery to avoid leakage or overheating of the battery, or malfunctions of the phone.
- Do not short the two polarities of the battery to avoid leakage, overheating, fire or explosion of the battery.
- If leakage of the battery enters the eyes accidentally, please immediately wash the eyes with fresh water and go to a doctor. If it is not treated quickly, it may cause serious injury, such as blindness.

-
- If the battery is contaminated with liquid, it may cause burn or malfunctions due to overheating of the battery. The charger may also cause overheating, damages, electric shock and malfunctions. If the charger is accidentally sunk in water, or smoke or peculiar smell is produced during charging, please immediately switch off the phone and unplug the AC cable from the socket. Please have the phone repaired as arranged by the store where you bought the phone. Do not continue to use to avoid causing injury.
 - Do not put the charger and the AC cable in a place with flame or ovens to avoid causing injury due to overheating, leakage or fire of the battery.
 - Do not touch the charger, the power cable and the plug of AC power supply with wet hands to avoid electric shock or malfunctions.
 - Do not strongly pull the wire of the charger, or put heavy objects on the power cable, or change the power cable optionally, otherwise, electric shock or fire may be caused.
 - When the battery is fully charged, please unplug the charger from the socket.
 - Do not dispose the used battery together with daily waste. Please dispose the used battery in accordance with the regulations issued by the local authority.

Name and Functions of the Parts of the Phone

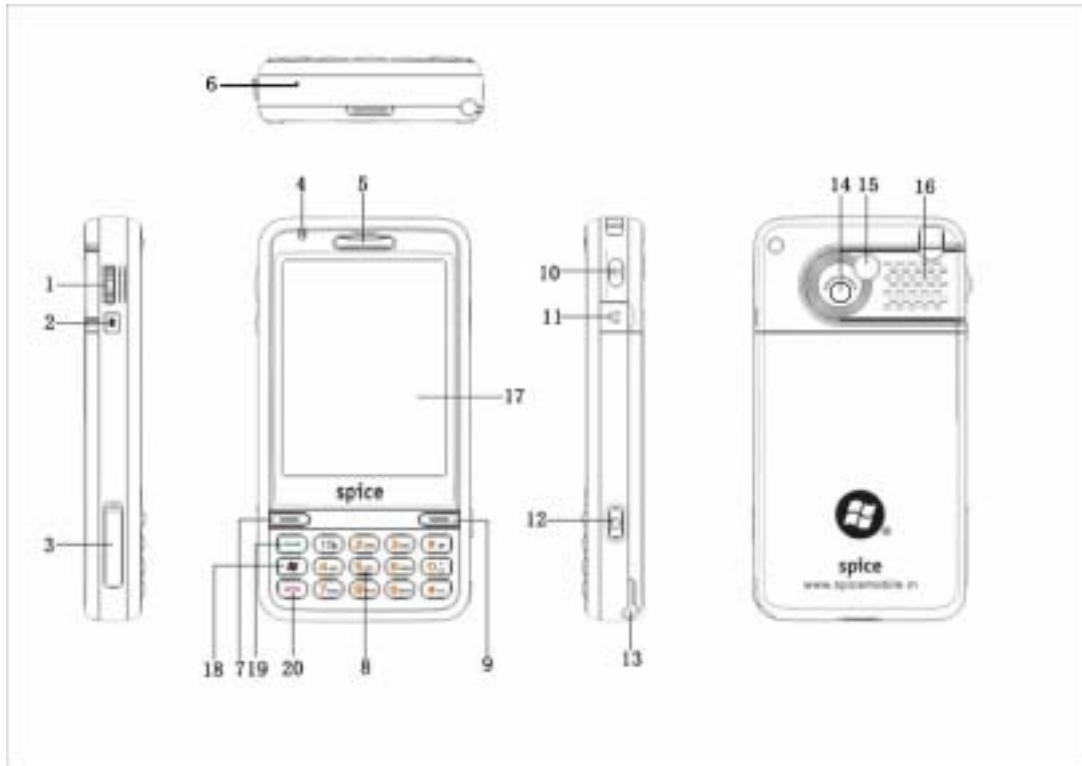





















	Parts of the Phone	Description of Functions
1	Scroll key	<ul style="list-style-type: none"> • Under the default status, you can scroll up or down to navigate through menus, program instructions, confirm an operation. • Long press it to switch to the other status; you can adjust the volume under the other status. • Long press it to switch between the two statuses.
2	OK key	<ul style="list-style-type: none"> • To confirm your data entries, or to exit the program in use.
3	USB/charger interface	
4	LED	
5	Receiver	
6	Mic	
7	Left function key	
8	Number/letter keys	
	* key	<ul style="list-style-type: none"> • When editing a message number or dialing in the standby mode, press the key once to input “*”. • To switch between ABC/abc.
9	Right function key	
10	Power key	
11	Earphone interface	

12	Camera key	
13	stylus	
14	camera	
15	Self-Portrait Mirror	
16	Speaker	
17	Touch screen	
18	WIN key	<ul style="list-style-type: none"> To enter start menu.
19	Send key	<ul style="list-style-type: none"> To answer a call.
20	End key	<ul style="list-style-type: none"> To end a call.

Description of Display Contents

The table below lists the icons that may appear on the phone. Except the icons for mode and the power icon, other icons are sorted according to the current mode and priority of the phone.

	Icons	Description
1		Select to open the start menu.
2		There are some unread messages of A-SIM
		There are some unread messages of B-SIM
		Indicates you have unread MMS of A-SIM
		There are any missed numbers.
3		Show the signal strength.
4		Connection is active.
		GPRS service available.
5		Show the signal strength.
		GSM data connectivity is on
6		Select to adjust vibrate/ring one volume level.
7		Indicating the current residual battery power, including:
		The power is full.
		The power is moderate.
		The power is low.
		The power is to be used up.
8		It appears when the alarm is activated.
9		Contents display area, to display time, numbers or other information.
10		Indicates the A-SIM card is in GSM roaming status.

11		Indicates the B-SIM card is in GSM roaming status.
12		Select to enter Bluetooth.
13		Select to toggle the screen.

Phone and Accessories

Open the packing box of the phone and check that you have all the accessories to the phone. If anything is missed, or any mistake is found in the user manual, such as missing pages, please contact the local dealer.

Item	Quantity
D-1100 phone	1
Battery	1
Earphone	1
Data cable	1
Micro SD card	1
Micro SD to SD socket	1
USB card reader	1
LCD protector	1
Leather cover	1
Style	2
CD	1
Charger	1
User Manual	1

Specifications

Network	GSM A/GPRS:850/900/1800/1900MHz GSM B:900/1800 MHz
Battery	1350mAh Li-ion Battery
Charger	Input: 110V-240 AC , 50/60Hz Output: 5V DC , 750mA
Dimension	111mm*58mm*15.7mm
Weight	123g

Standby Time / Max. Talk Time

Standby Time

Standby Mode	Standby Time
--------------	--------------

Dual Mode	About 100 ~ 140 hours
A-SIM Mode	About 110 ~ 150 hours
B-SIM Mode	About 130 ~ 180 hours

Max. Talk Time

A-SIM	About 3 ~ 8 hours
B-SIM	About 3 ~ 8 hours


***The standby time is the time for continuous working when the phone is not in any call or moved. The standby time and max. Talk time depend on the specific network.**

 About SIM Card, and the Battery


- Please store the cards out of the reach of children.
- The cards and the contacts are vulnerable to damages due to scratching or bending. Therefore, be careful when using, inserting or removing the cards.
- Be sure to switch off the phone before you insert or remove the battery or the cards, otherwise, the phone may be damaged.

To insert SIM card, and battery

1. Insert the card in the slot in the direction indicated by the arrow. (Up: the card slot for B-SIM. Down: the card slot for A- SIM.). Please insert the card with the metal contact of the card facing downwards.

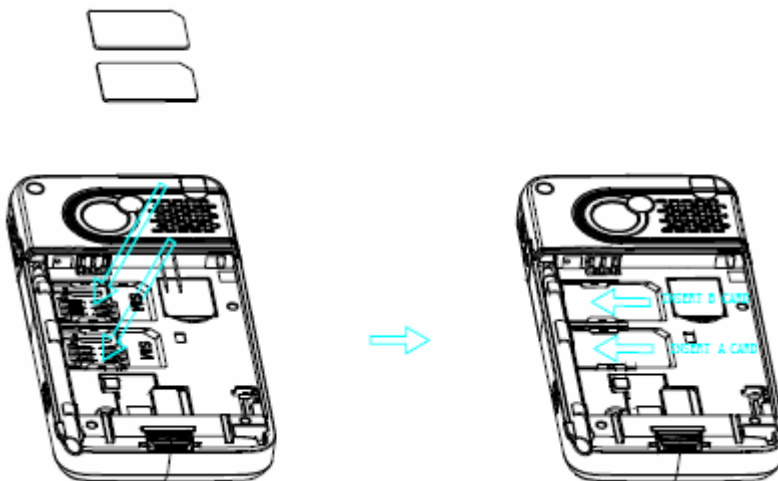

 
2. Insert the battery.

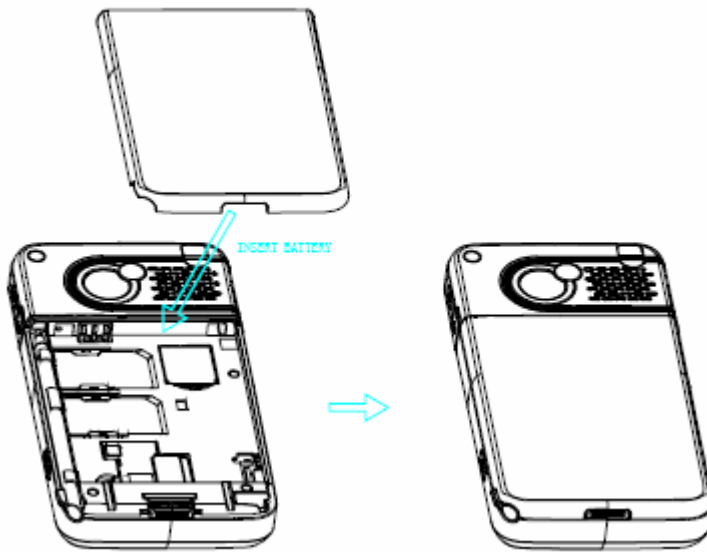


Tip: Be sure to use the original battery.

To remove the battery, SIM card

 1. Switch off the phone.
2. Push and remove the battery cover.

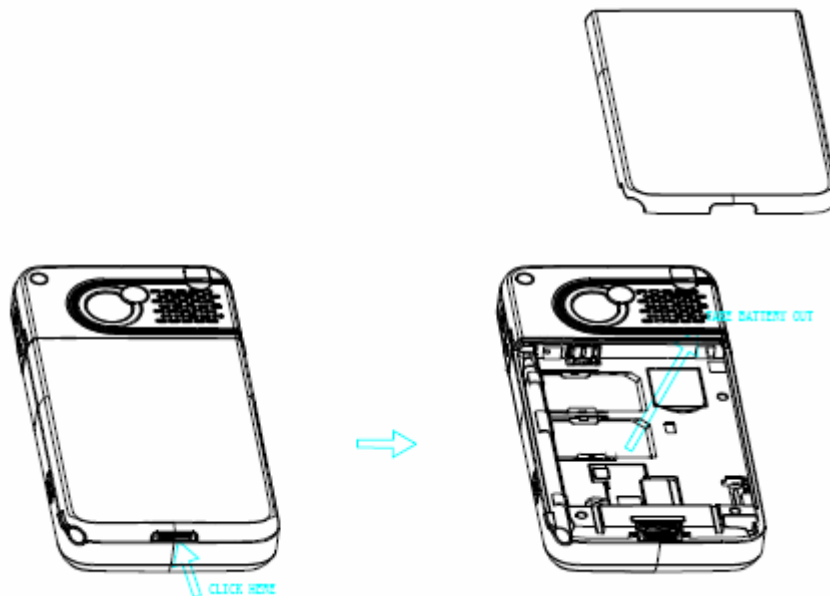

 
Push out the card from the slot with a finger in the direction indicated by the arrow. (Up: the card slot for B-SIM. Down: the card slot for A-SIM).

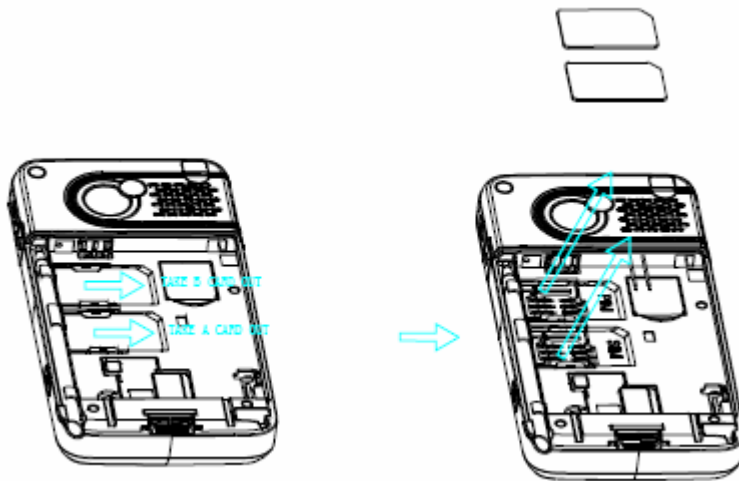

To charge the battery

1. Insert the plug of the charger into the interface of the phone, and insert the charger into the power socket carefully. The battery icon will blink.
2. When the phone is off, the red light is lit during charging. When the battery icon stops blinking or the green light is lit, it indicates that the charging is finished.
3. After the charging, unplug the charger from the socket, and press and hold the left and right buttons on the plug of the charger to pull out the plug from the phone.

Tips:

The battery icon  displayed on the screen indicates that the battery power is low. Please charge the battery following the steps above.

Please charge the battery before you use the newly bought phone. We suggest you charge the battery for 4 hours continuously for the first time.

Charging when the phone is in the ON mode will not influence the normal dialing and answering, but this needs to consume power, thus the time of charging will increase.

We suggest you recharge the battery when the power is used up so as to prolong the life of the battery.

To switch on and off

To switch on: Long press **Power key** when the phone is in the OFF mode.

If the phone lock has been activated, you need to input the corresponding password to unlock.

If the A/B card has been inserted in the phone, and the related PIN code protection is activated, you need to input the 4-8 passwords to unlock.

 
Warning: If you input three wrong PIN codes in a row, the A/B card will be locked and you need to input the PUK code to unlock. Both the PIN code and PUK code are provided by the network

operator.


To switch off: In the standby mode, long press **Power key**.

Standby Mode

1. Tap the signal strength to activate phone configuration.

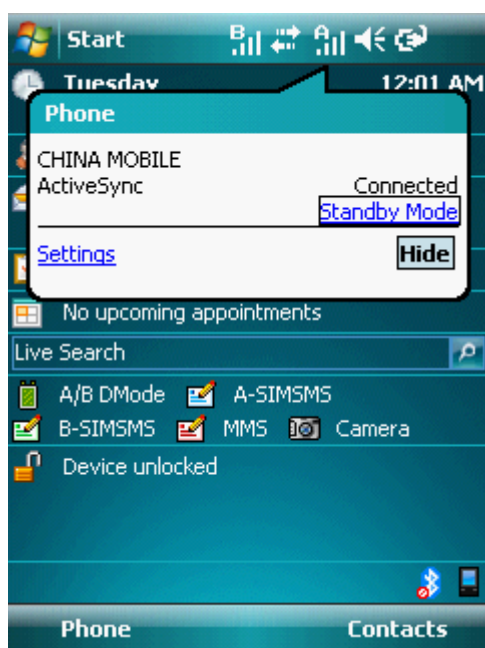

 2. Tap Standby Mode to select Standby Mode.

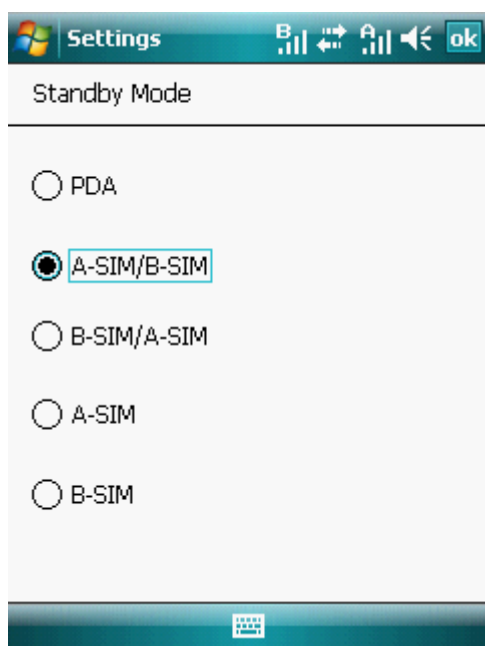

There are five standby modes:

- **A-SIM/B-SIM** dual mode: Both SIM cards can receive incoming calls or messages, but A-SIM is prior to B-SIM when you make calls. If you want to make a call from B-SIM, you

should input the phone number and tap **(Menu)**, select **Dial B-SIM**. Then the number will be dialed from B-SIM card.

Tip: When you make calls next time, A-SIM is still prior to B-SIM by default.

- **B-SIM/ A-SIM** dual mode: Both SIM cards can receive incoming calls or messages, but B-SIM is prior to A-SIM when you make calls. If you want to make a call from A-SIM, you should input the phone number and tap **(Menu)**, select **Dial A-SIM**. Then the number will be dialed from A-SIM card.
- **A-SIM mode:** To make/answer calls and receive/send messages through A-SIM and use all kinds of value-added GSM services.
- **B-SIM mode:** To make/answer calls and receive/send messages through B-SIM.
- **PDA mode:** close telephone communication function.

 
Today screen

The Today screen displays important information, such as upcoming appointments and status indicators, you can tap a section on the screen to open the associated program.

After opening up the **Start** menu:



The items displayed in the Start menu can be customized by tapping **Start > Setting >Menus**

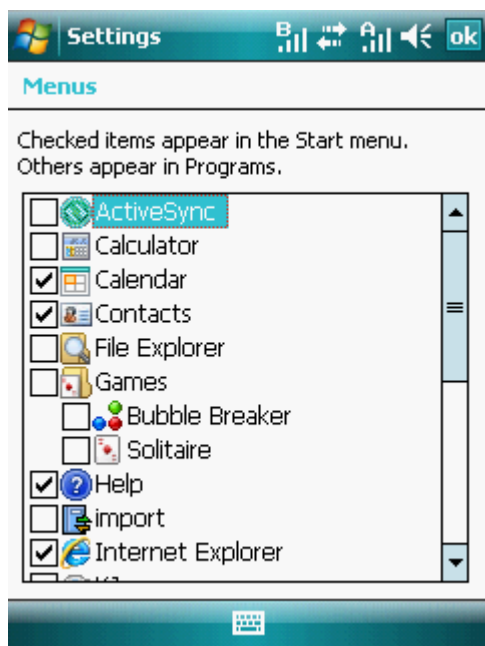


Using the Input Panel

The input panel provides you with various input methods including: ABC Input, Block Recognizer, English Input, Keyboard, Letter Recognizer, Transcriber. You can input letters, numbers, symbols, or punctuations.

Using the ABC Input

 ABC Input allows you to enter characters by pressing keys on the keyboard.

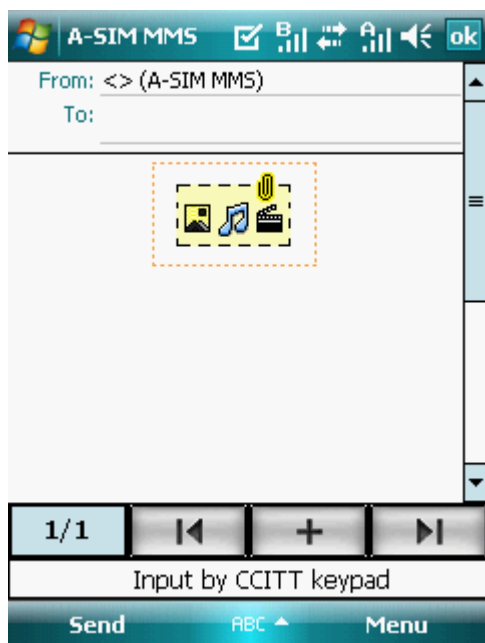

1. In an application, tap the input panel arrow, then tap **ABC** Input.
 - Press the keys on the keyboard to input characters and numbers, press the key repeatedly

 
to select characters and numbers.

- Press **1** key to input frequently used symbols and press 1 repeatedly to select symbols.
- Press **#** key to delete previous characters.
- Press **0** key once to input “space”, press **0** key twice to input “0”.

Tip: Press ***key** to switch between ABC and abc.

Using the Block Recognizer

The Block Recognizer allows you to use a single stroke to write letters, numbers, symbols or punctuations, which are converted into typed text.

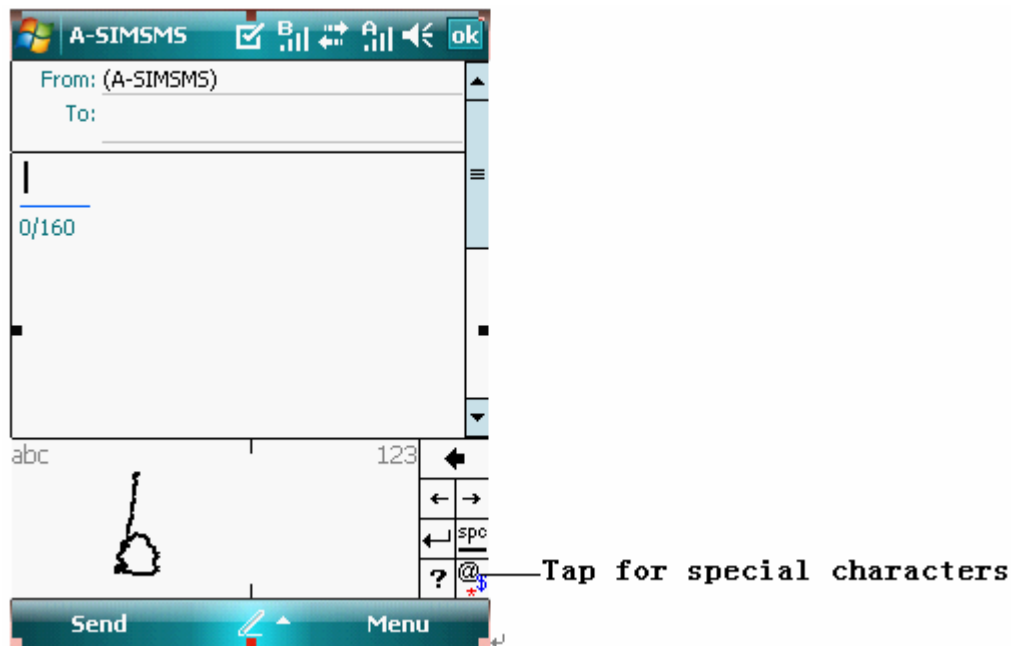


1. In an application, tap the input panel arrow, then tap **Block Recognizer**.
2. Write letters, numbers, symbols, or punctuations in the designated area.

- Write letters on the abc area of the box.
- Write numbers on the 123 area of the box.
- Tap the special symbols button to key in symbols, punctuations and other special characters.
- Tap “?” help button for help on how to input characters.

Using English Input

 English Input allows you to enter texts by pressing keys on the keyboard.

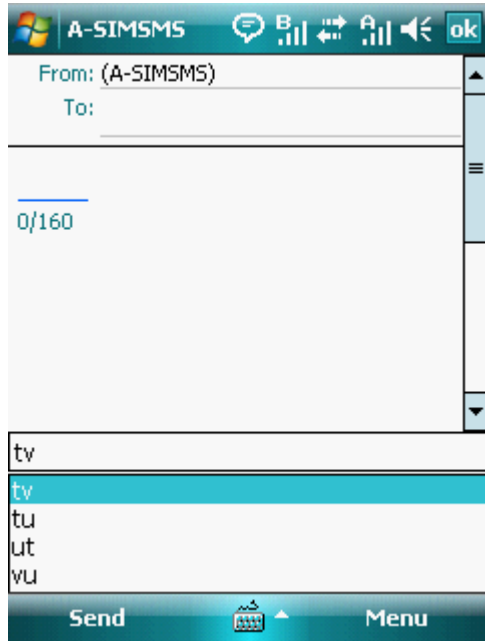


1. In an application, tap the input panel arrow, then tap **English Input**.

- To key in a word, press the keys on the keyboard.
- Press * **key** to move highlighted bar in the wordlist.
- Press **0 key** to add selected word.
- Press **# key** to delete previous text or highlighted text.

Tip: Before you input, press ***key** to switch between ABC and abc.

Using the on- screen keyboard

 With the on-screen keyboard you can key in text, symbols, numbers, or other special characters when input is possible.

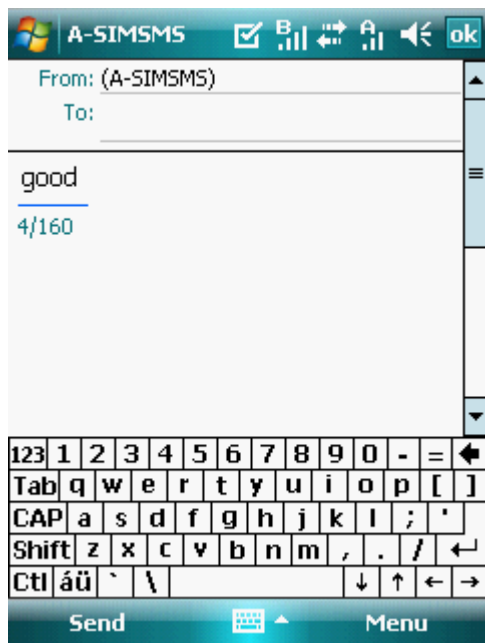

1. In an application, tap the input panel arrow, then tap **Keyboard**.

 
2. Key in text by tapping keys on the on-screen keyboard.

To enlarge the on-screen keyboard:

1. Tap the input panel arrow and then tap **Option**.
2. Select **Keyboard** from the input Method list.
3. Tap **Large keys**.

Using the Letter Recognizer

With the Letter Recognizer you can write individual letters, numbers, or special characters, which are converted into typed text.

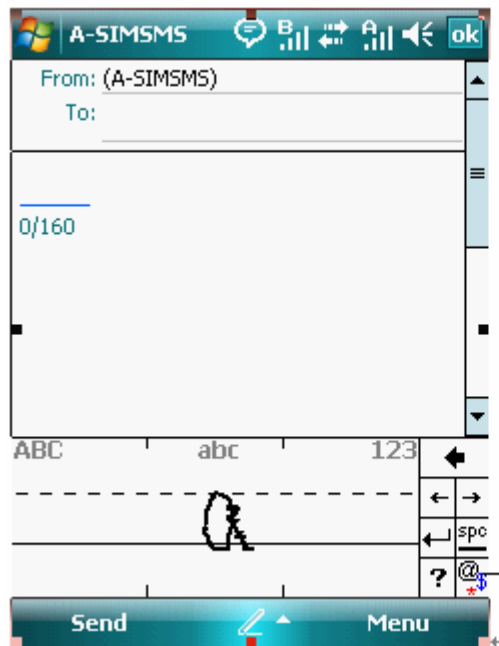


Tap for special characters

1. In an application, tap the input panel arrow, then tap **Letter Recognizer**.
2. Write letters, numbers, symbols and punctuations in the designated writing area.
 - Write capital letters on the ABC area of the box.
 - Write lowercase letters on the abc area of the box.
 - Write numbers on the 123 area of the box.
 - Tap the special symbols button to key in symbols, punctuations and other special characters.
 - Tap “?” help button for help on how to input characters.

Using Transcriber

 Transcriber is a handwriting recognition program that allows you to write in cursive, print, or mixed styles. It can recognize not only written text but also numbers and symbols. Make sure to write legibly. See help for more information on the transcriber.

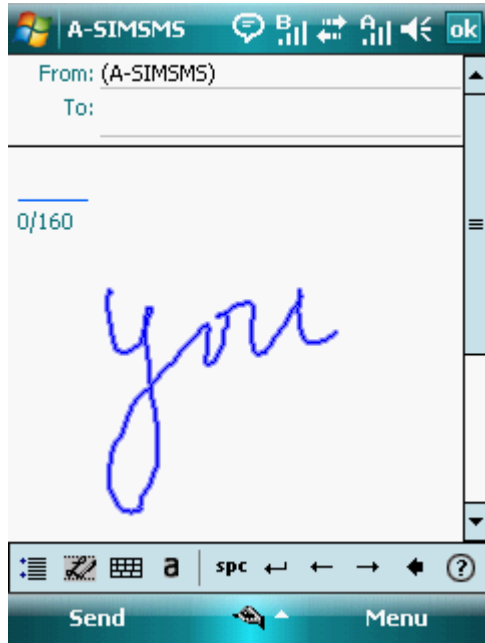

1. Start an application that accepts user input, such as Notes or Word Mobile.
2. Tap the input panel arrow, then tap **Transcriber**.



To write using Transcriber:

1. Tap screen to position the cursor where you want the text to appear.
2. Use the stylus to write on the screen .The handwriting will convert to text after you lift the stylus from the screen.

To edit text

1. Draw a line across the text you want to edit .After you lift the stylus from the screen, the line will disappear and the selected text will be highlighted.
2. You can rewrite the text or use the Transcriber gestures to edit your selected text. See Help for the Transcriber gestures.

To make calls

If the icon  or  is displayed on the screen, you can make or **Answer** calls.

 
Tip: The signal strength may influence the quality of connection.

To Dial in standby mode


1. In standby mode , tap **Phone** to display the dial plate.



2. Tap Number Keys to input the number you wish to dial.

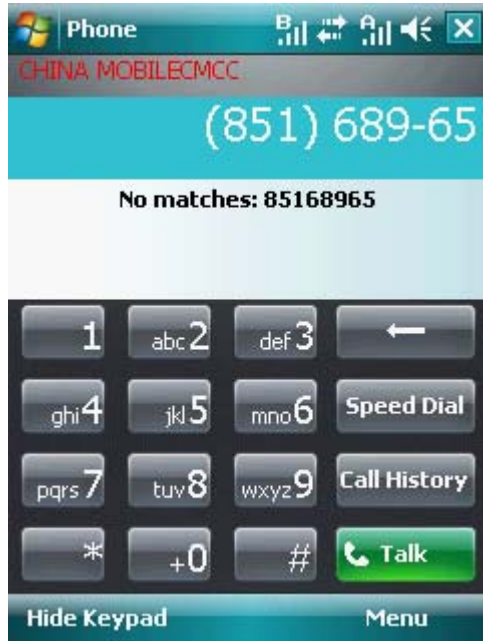

 3. Tap **Talk** or press **Send Key** to make a call.

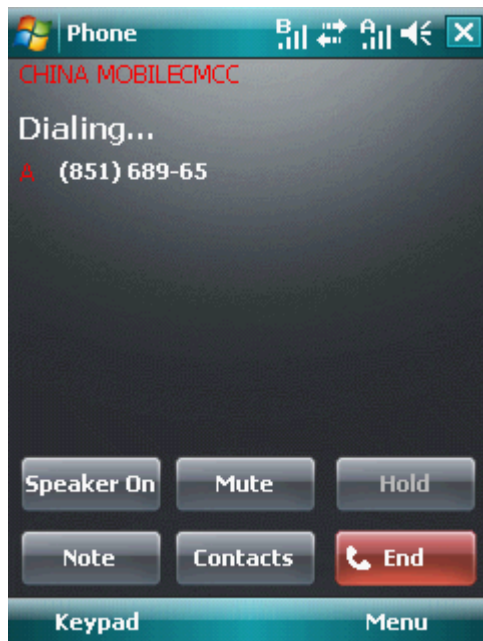

To insert a pause symbol when dialing

There is one method to dial an extension number with a pause symbol: to dial the extension number automatically (the pause time is controlled automatically). The phone supports the application of the pause symbol.

To dial the extension number by automatic switching:

On the idle screen, display the dial plate to input a phone number.

Long press * key to input the pause symbol **P**.

 
Input the extension number.

Press **Send key** or tap **Talk** to dial the phone number, then the phone will dial the extension number after **P** automatically.


Tip: The pause time depends on the number of “P” input.

Use the Phone Dialing Application


1. Tap **Start >Phone**

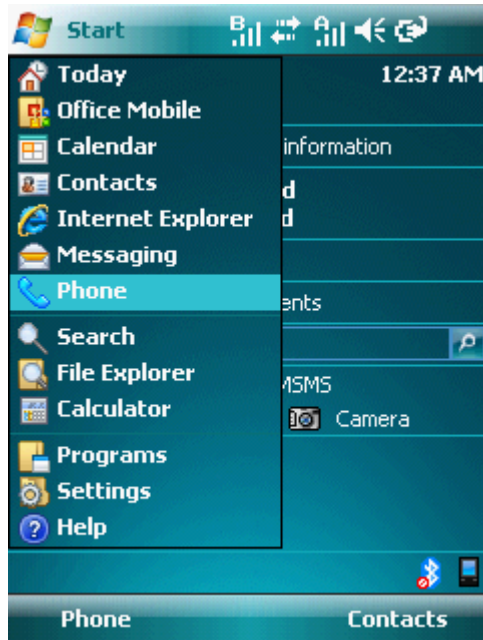

 2. Tap Number keys to input the number you wish to dial.

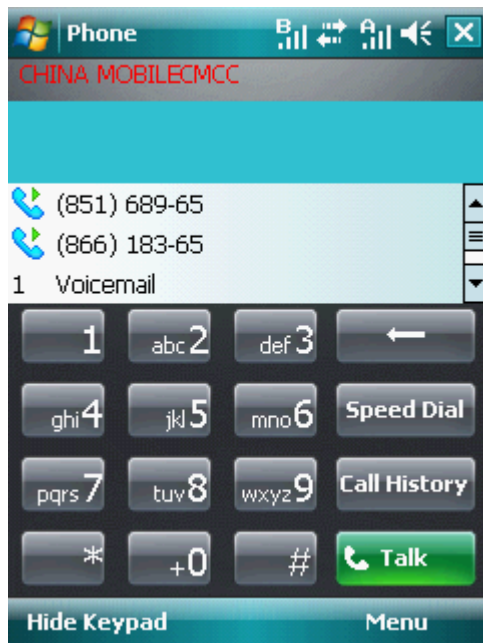

 3. Tap **Talk** or press **Send Key** to make a call.

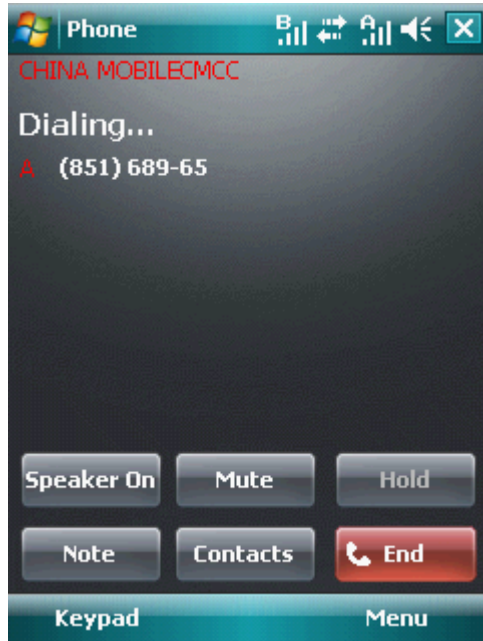

Speed Dialing

You can specify speed dial numbers to frequently used phone numbers.

Long press the number keys on the dial plate to dial the phone number.

Tip: You must have set a speed dial number for that **number key**, and the Speed Dial function has been activated.

To Dial from Contacts List

Display the dial plate, tap **Call History**, choose the desired contact , tap **Call** or press **Send Key** to make a call.

To dial from the phonebook

In standby mode, tap **Start >Contacts**

- Select an entry from the entry list and tap **Call** or press **Send key** to dial.

Tip: If the entry contains more than one numbers, the number selection screen will be displayed.
You can select one and tap **Call** or press **Send key** to dial.

To answer or reject a call

- When a call comes in, if an entry in the phone book corresponds to the number, the related information will be matched.
 1. When the phone prompts that a call is coming in , tap **Answer** or press **Send Key**, tap **Ignore** or press **End Key**.
 2. Press **End** to end all calls.

Tip: If you have plugged the earphones in the phone, you need to long press the button on the

 
earphones to answer the incoming call (except when you have set to automatic answering). To end a call, you also need to long press the same button.

Missed Calls

If there are some missed calls, the top of the screen will show an icon to remind you that you have missed calls.

Call History

Display the dial plate, tap **Call History**, tap **Menu >Filter** to view Call History by the categories.

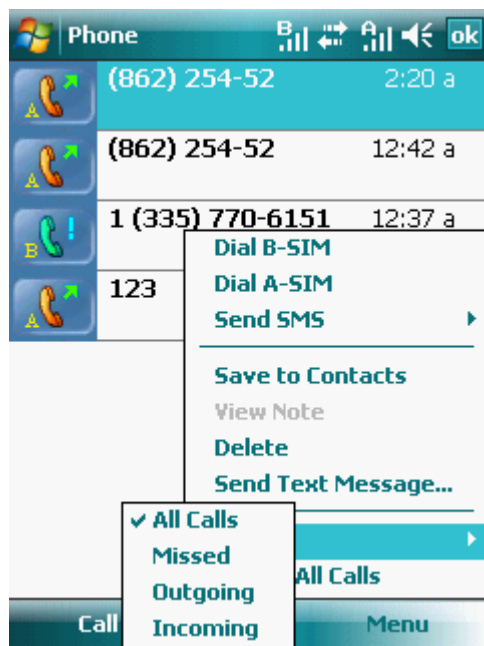

Call Option

To be mute during a call

During a call, you can prevent the other party from hearing you:

1. Tap **Mute** on call screen, Mute is activated.
2. Tap **Unmute** on call screen, Mute function is turned off. The other side can hear you.

Call Hold

During a call, you can hold an original call.


1. Tap **Hold** on call screen .Hold is activated.
2. Tap **Unhold** on call screen, Hold function is turned off.

Create Call Notes

During a call, you can create a Call Note and it will be attached to Call Log.

1. Tap **Note** on call screen.
2. You can finish your note during a call or after you end the call.

To adjust volume of the speaker during a call

Tap  to adjust volume of the speaker during a call.

DTMF (Dual Tone MultiFrequency) Tone

During a call, tap Keypad to input the digits.

The digits input will be regarded as a DTMF signal response.

A-SIM/ B-SIM Lock

You can set SIM lock to protect your SIM card.

- Tap **Start >Settings>A-SIM Phone/B-SIM Phone**
- You should input PIN codes
- To turn off SIM Lock, you need to input PIN codes.

GSM Call Waiting

 
This function of A card mode allows you to put the current call on hold and then answer a second one.

The function needs the support from the local network. In some districts, you can use the function only after you apply with the local network operator.

Contacts


Use the contacts application to manage your contact information, to quickly connect with or send messages to your contacts.

Contacts List

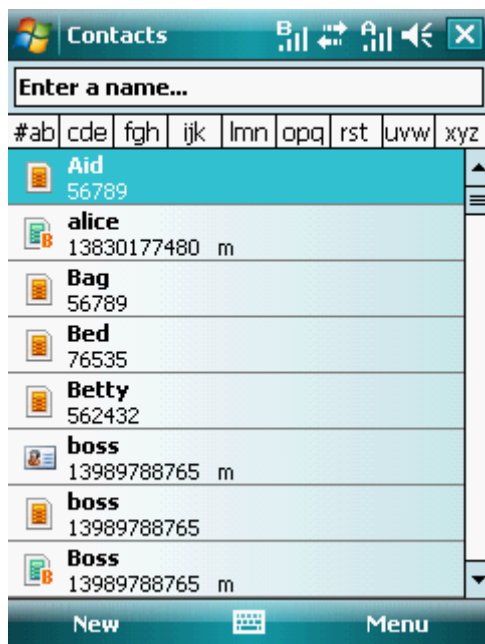

- Tap **Start >Contacts**
- You can browse and manage the contacts list at this screen.

 To add New Contacts

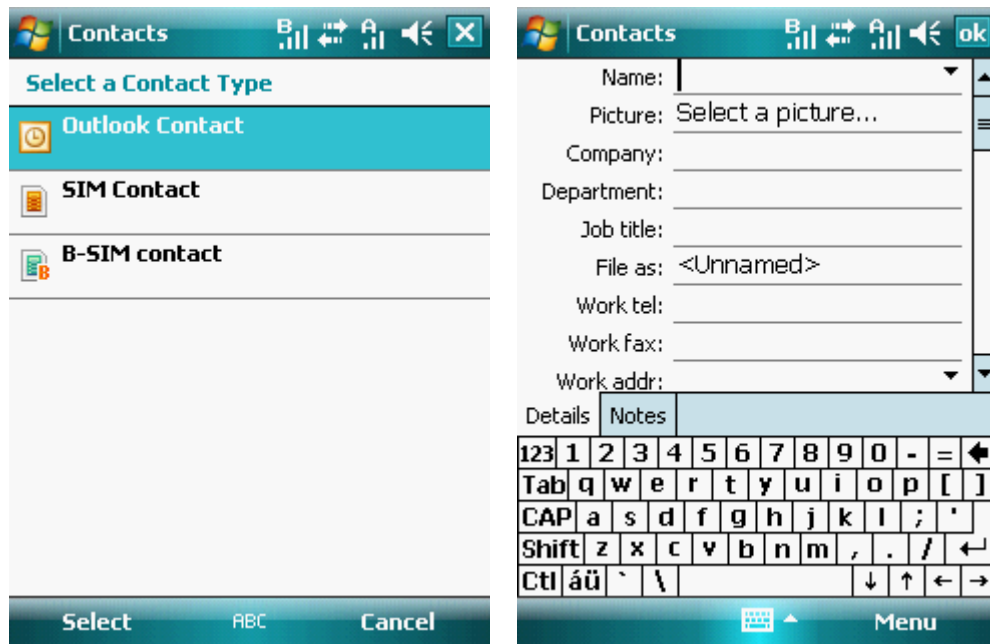

- Tap **Start > Contacts > New > Outlook Contact**
- Input Name and other information , you need to move scroll bar to view all the information. Tap ok, return to contacts main screen, you have added a new contact entry.
- You can add A SIM Contacts or B SIM Contacts as above.

 
To search Contact

You can find the desired contact by the following

1. Tap **Start > Contacts**, move the scroll bar to find the desired contact entry.
2. Tap the enter area, enter name, or tap the Search Criteria, you can find the desired contact entry.
3. Tap **Start > Contacts** , tap **Menu>Filter > Contact category**, lists the contacts under the category.
4. Tap **Start > Programs > Search**, Input the information about the contact, select contacts from the **Type**, tap **Search**.

Contact Backup

With the Micro SD card inserted, you can select the check box of contacts that you want to export or import.

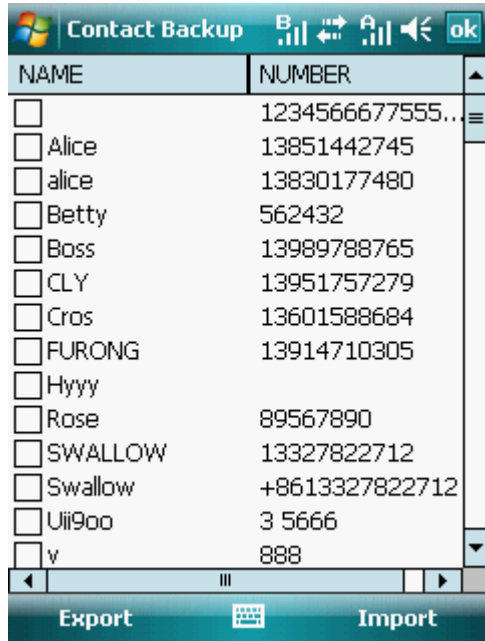


- You can export all the phone book entries stored in the phone , A-SIM and B-SIM card to the folder Contacts of Storage Card under **File Explorer**.
- You can import all contacts from the folder Contacts of Storage Card under **File Explorer** to the Outlook Contact.

Calendar

You can use the calendar application to schedule, search and create reminders of appointments.


Open the Calendar Application

 Select **Start >Programs >Calendar**

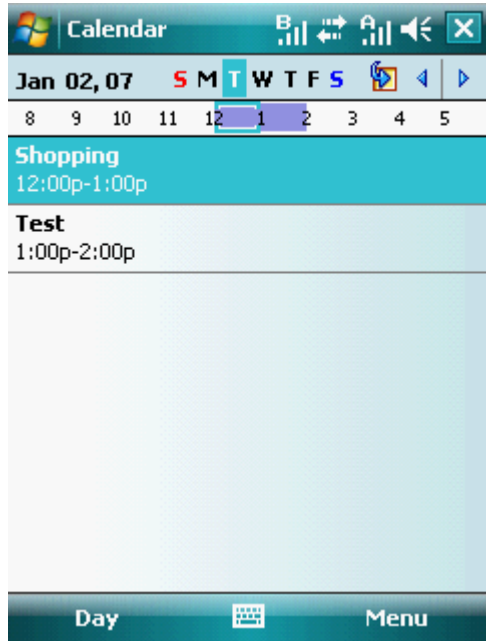

- Change Calendar view method:
You can select Day, Week, Month, Year or Agenda to arrange your appointments.

 
To add New Appointments

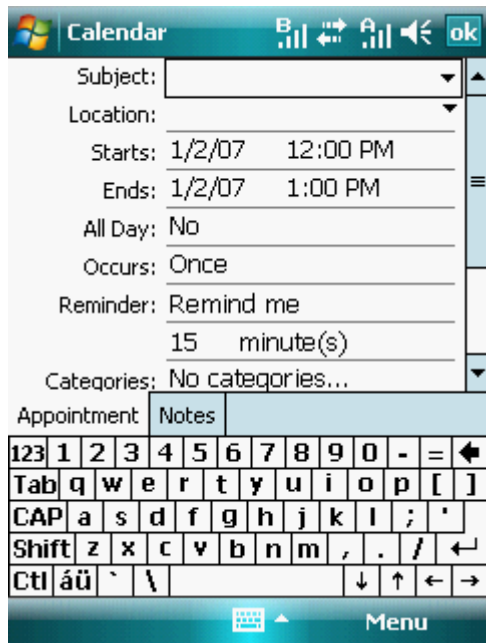


1. Tap **Menu** > **New Appointment**.
2. Input subject, location, etc.
3. Select Notes to enter a memo.
4. After finishing adding a new appointment, return to calendar main screen, you can browse the added appointment.

Tip: At the appointment reminder time, the phone will show the reminder screen and sound the ring tone.

 View and Edit Appointments

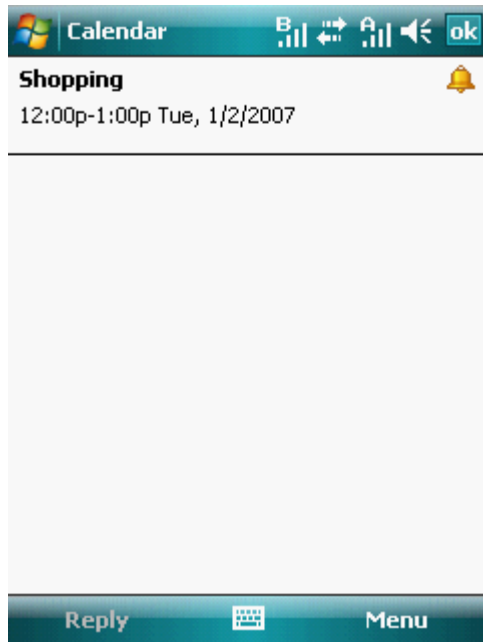

 
At the calendar inspection screen, select the appointment to view.

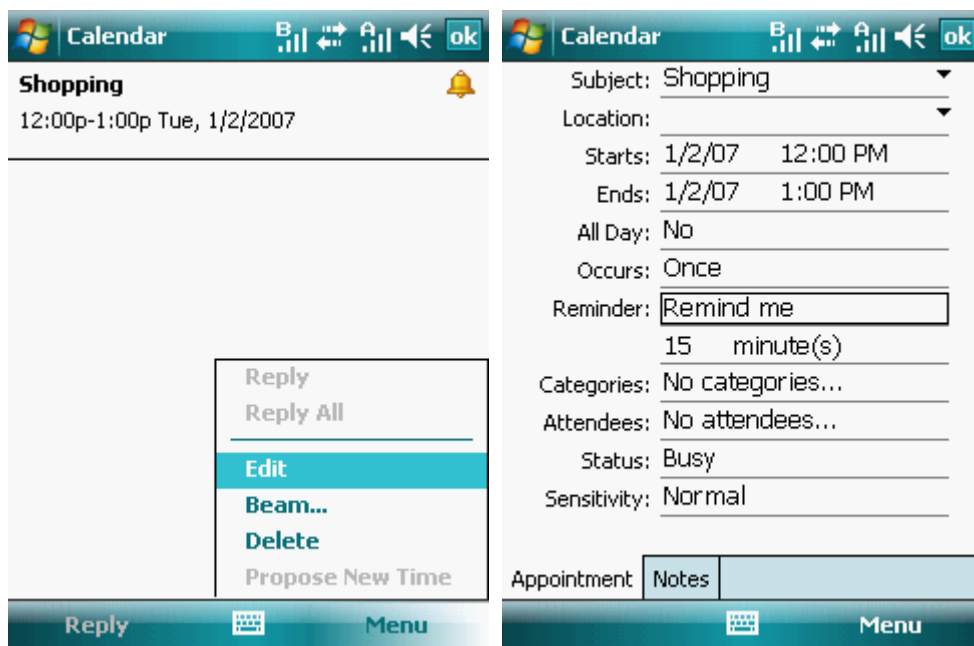

At the appointment information screen, tap **Menu**> **Edit**, edit appointments.


Task

 Open the Tasks Application

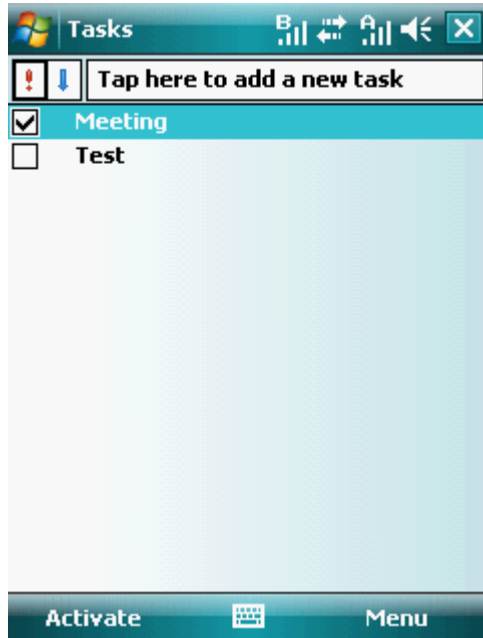


- Tap **Start** > **Programs** > **Tasks**
- Tap **Menu**>**Options**, change display of the tasks application.

 To add new tasks

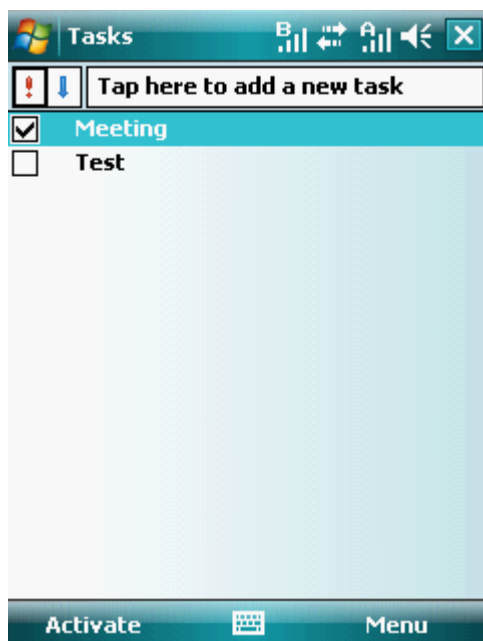

- Tap **Menu**> **New Task**.

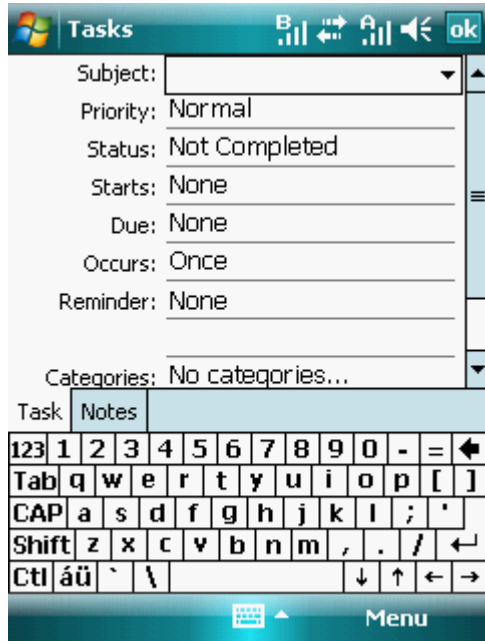 


- Input subject, choose the task priority, select the task start date, etc.
- Select **OK** to finish adding.

Notes

You can write or draw directly on the screen and save notes in your own handwriting. If you prefer to use your own handwriting or use drawings in your notes, set the default input mode to writing. If you prefer text, set the default input mode to typing

 Open the Notes Application

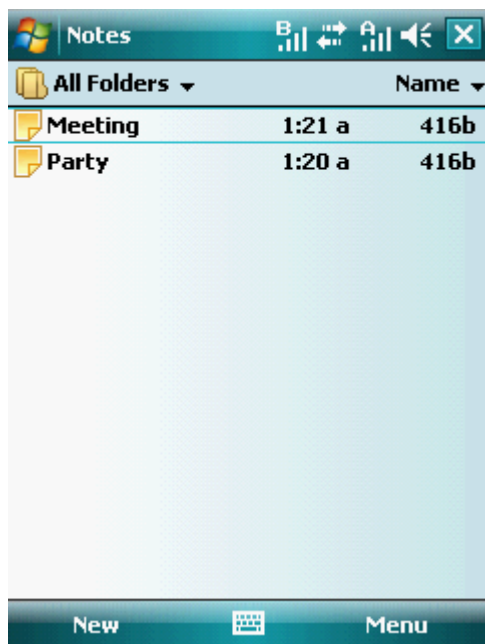


- Tap **Start >Programs>Notes**.

The Notes applications can help you to note down your thoughts, reminders, questions and meeting recorders, you can use the virtual keyboard or hardware keyboard, handwriting recognition and audio recording to edit note contents.

In the notes program, you can edit, review, rename, move and delete notes.

 To add new notes

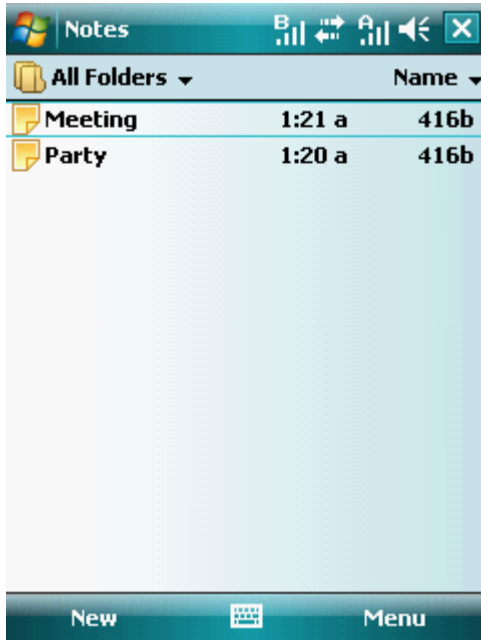

- Tap **New** to add a new note entry.

Types of Accounts

Before you can send and receive e-mail, you need to set up your e-mail account on your device. You can set up the following types of e-mail account on your device.

- E-mail account that you have from the Internet Service Provider(ISP)
- Outlook e-mail that you synchronize your PC or your company's Exchange Server.
- Work account that you access using a VPN connection.
- Web e-mail accounts.

Set up your device to synchronize Microsoft Office Outlook

e-mail with the computer

If you have installed the synchronize software on your computer and create a partnership, then your device is ready to send and receive Outlook e-mail.

Set up a POP3/IMAP4 e-mail account

Set up a POP3/IMAP4 e-mail account on your device, if you have an e-mail account from an Internet Service Provider (ISP) or other e-mail provider, or a Web-based account such as Yahoo! Mail Plus, Gmail, etc. You can also add a work account that you access using a VPN server connection as a POP3/IMAP4 account.

1. Tap **Start >Programs > Messaging>New E-mail Account**
2. Enter your e-mail address, and select the Try to get e-mail settings automatically from the Internet check box .By selecting the option ,the device attempts to download e-mail server settings so that you do not need to enter them manually. Tap **Next**.
3. After Auto Setup finishes, tap **Next**.
4. Enter your name, you can also edit the **Account display name** field to specify the name of your ISP or e-mail provider. Tap **Next**.
5. Enter your login name if it does not show automatically in the **User name** field. Also enter your password and select the **Save password** check box .Tap **Next**.
6. E-mail setup is complete, in the Automatic Send/Receive list, choose how frequent you want e-mail messages to be automatically sent and downloaded on your device.
7. Tap **Finish**.

After setting up e-mail accounts on your device, you can start sending and receiving e-mail messages.

 
A-SIM SMS

Send A-SIM SMS


1. Tap **Start >Messaging>A-SIM SMS**.
2. Tap **Menu> New**.
3. Write the content of the SMS, and select **Menu>**
 - **Add Recipient...:** To select the number of one or more recipients from the contacts list.
 - **Check Names:** To search the name or the number of one or more recipients from the contacts list according to your input and displayed automatically in the SMS.
 - **My text:** To select a phrase from the list to insert it in the SMS.
 - **Save to Drafts:** To save the SMS to the drafts.
 - **Spell Check:** To check the spelling.
 - **Cancel Message :** To cancel editing.
4. Tap **Send** to send the SMS.

Inbox

1. Tap **Start >Messaging>A-SIM SMS**
2. When view the inbox list, tap **Menu>**

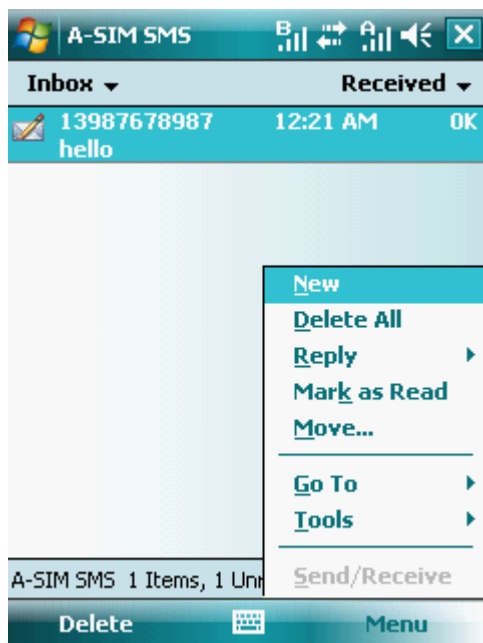

 3. When reading a SMS , tap **Menu>**

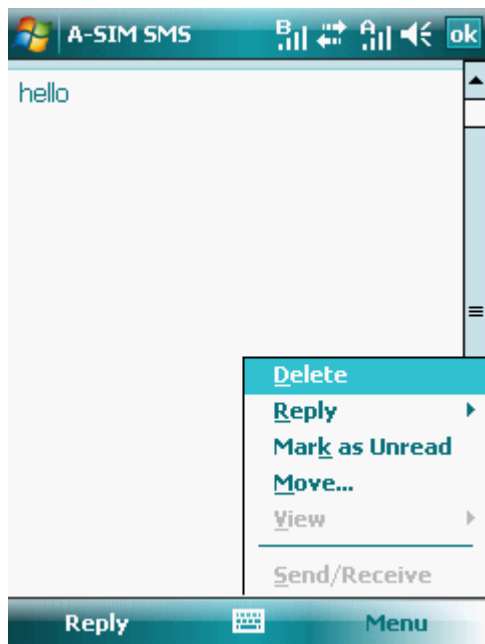

Outbox/Drafts

Please refer to the Inbox.

 
B-SIM SMS

Send B-SIM SMS


1. Tap **Start >Messaging>B-SIM SMS**
2. Tap **Menu >New**.
3. Write the content of the SMS, and select **Menu>**
 - **Add Recipients:** To select the number of one or more recipients from the contacts list.
 - **Check Names:** To search the name or the number of one or more recipients from the contacts list according to your input and displayed automatically in the SMS.
 - **My text:** To select a phrase from the list to insert it in the SMS.
 - **Save to Drafts:** To save the SMS to the drafts.
 - **Spell Check:** To check the spelling.
 - **Cancel Message:** To cancel editing.
4. Tap **Send** to send the SMS.

Inbox

1. Tap **Start >Messaging>B-SIM SMS**
2. When view the inbox list, tap **Menu>**

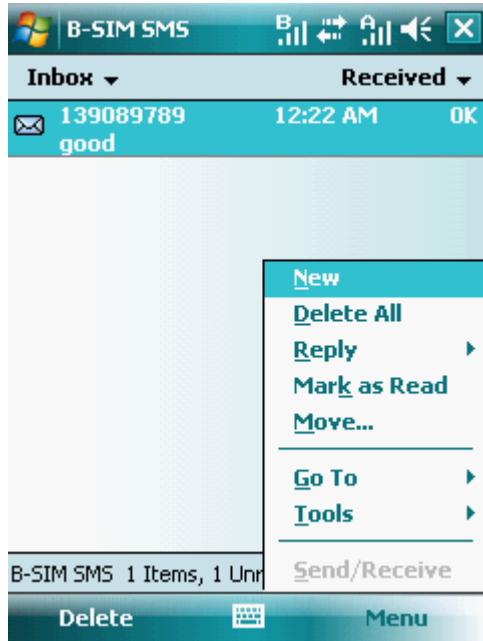

When reading a SMS , tap **Menu**>

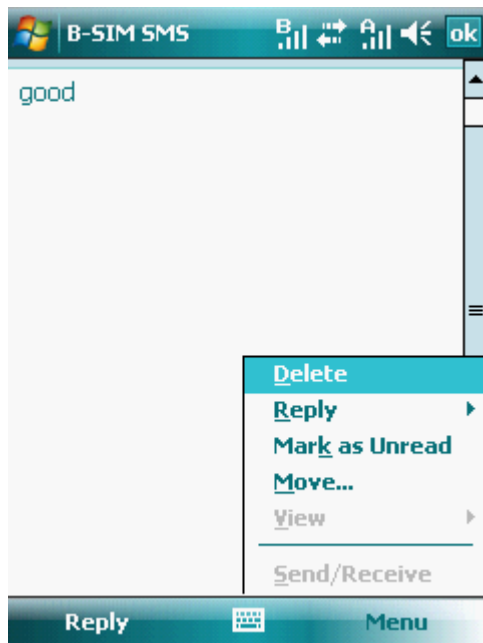 

Outbox/Drafts

Please refer to the Inbox.

MMS

To send MMS

1. Tap **Start >Messaging>A-SIM MMS**
2. Tap **Menu>New**.

3. Write the content of the MMS, you can

 
- **Add Image:** To select an image from My Device and add it into the MMS.
- **Add Video:** To select a video from My Device and add it into the MMS.
- **New Video:** To record a video and add it into the MMS.
- **Add Text:** To write text.
- **Add Music:** To select an audio from My Device and add it to the MMS.

4. Tap **send** to send the MMS.

Inbox

1. Tap **Start >Messaging>MMS**

2. When view the inbox list, tap **Menu>**

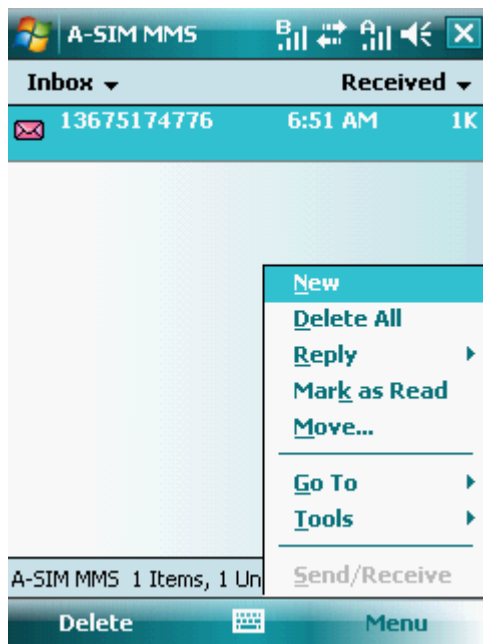

Outbox/Drafts

Please refer to the Inbox.

Personal Settings

 
A-SIM Phone Settings

You can customize your phone settings, such as the ring type and the ring tone to be used for incoming calls, and the keypad tone to be used when entering phone numbers. You can also set your device use phone services, such as Call Waiting, Call Forwarding, and more.

- Tap **Start > Settings > Personal tab >A-SIM Phone**

You can

- Change the ring type, the ring tone and the keypad tone.
- Choose the services
- View on your device which mobile phone networks are viable to you, and arrange them in the order that you want your device to access them.
- Protect you A-SIM Card with a PIN
- Select a GSM Band for your device.
- Set the Broadcast, and you can choose the language for the display of the broadcast, you can also set the Channel Title and the Channel ID for the broadcast.

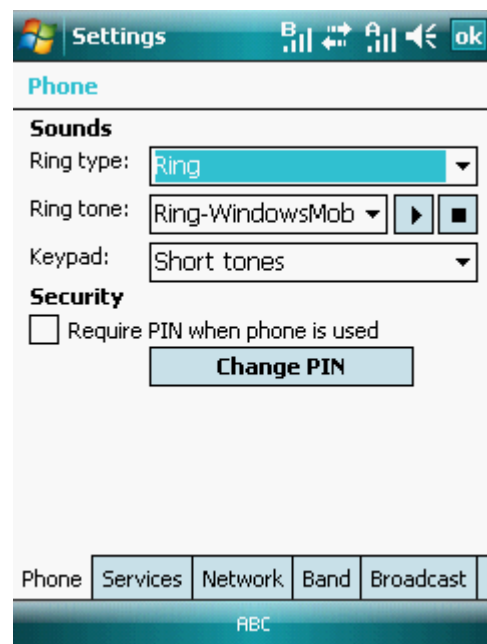


B-SIM Phone Settings

- Tap **Start > Settings > Personal tab >B-SIM Phone**

You can

- Change the ring tone.

 - Choose the services
- View on your device which mobile phone networks are available to you, and arrange them in the order that you want your device to access them.
- Protect you B-SIM Card with a PIN
- Set the Broadcast, and you can choose the language for the display of the broadcast, you can also set the Channel Title and the Channel ID for the broadcast.

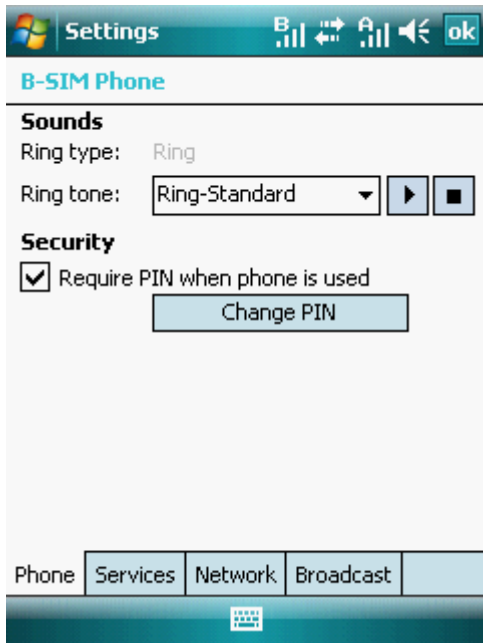


Owner Information

- Tap **Start >Settings > Personal tab> Owner Information**
- To enter your **Owner Information**.




Today Screen Settings

 - The Today Screen shows your upcoming appointments, active tasks, etc.
- You can customize the Today screen on your device.
- Tap **Start >Settings> Personal tab >Today**
- On the **Appearance** tab, select the desired theme for the background of the Today Screen, you can use one of your own pictures as the background image on the Today Screen.

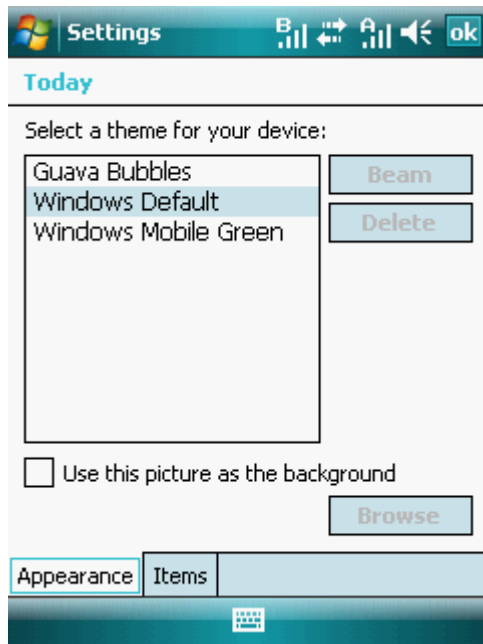

 
- On the **Items** tab, select the items you want to appear on the Today screen.

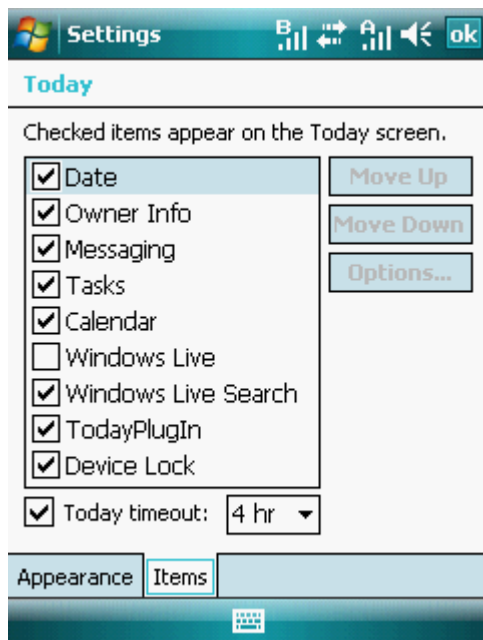


Sounds & Notifications

- To choose how to be notified about events or actions.
- **Start >Settings > Personal tab> Sounds &Notification**

 - On the **Sounds** tab, choose how you want to be notified by selecting the appropriate check boxes.

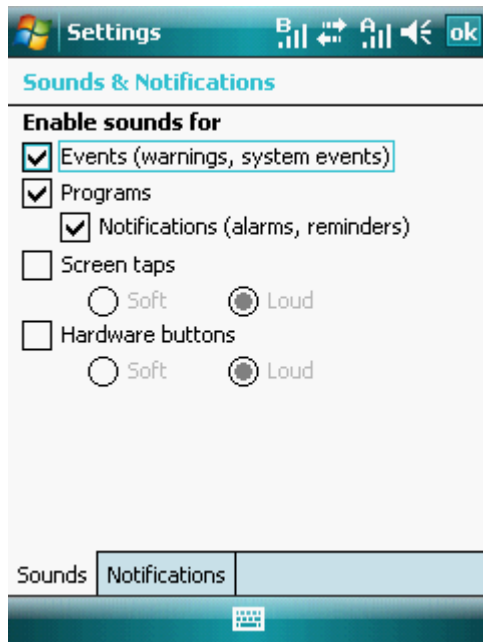


 - On the **Notifications** tab, in Event, tap an event name and choose how you want to be notified by selecting the appropriate check boxes.

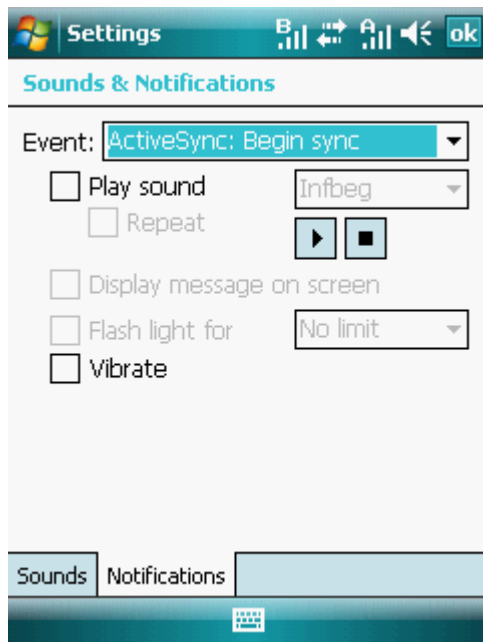


Buttons Settings

 - To reassign programs or shortcut to program buttons
- Tap **Start >Settings > Personal tab>Buttons**

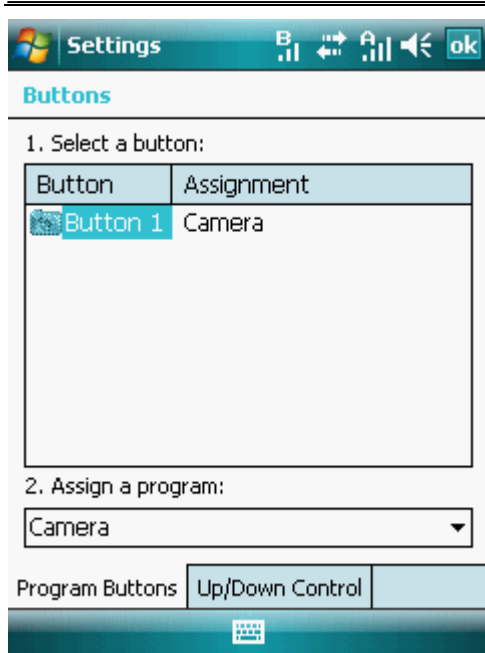


 - On the Up/Down Control tab, you can customize the way your Up/Down control repeats.

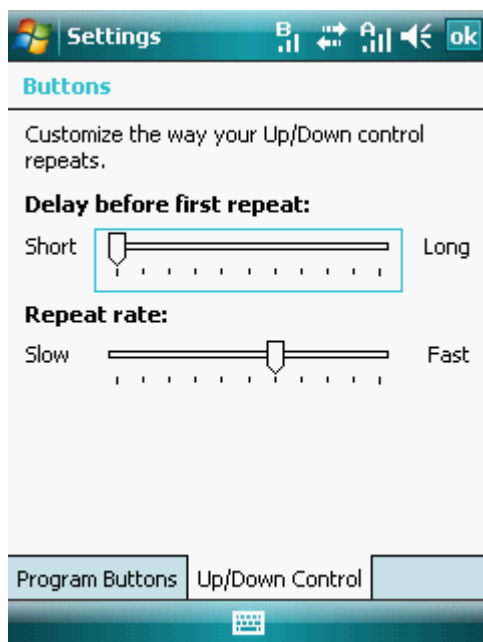


Menus Settings

 - You can choose which Items appear in the **Start** menu.
- **Start >Settings > Personal tab>Menu**

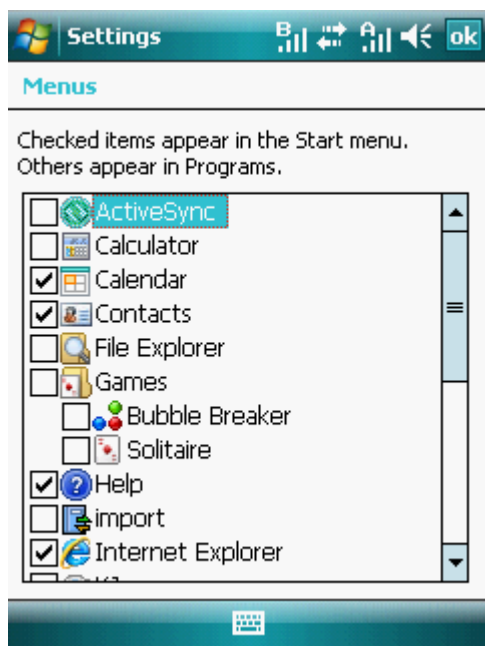


Input Settings

 
- To set the desired Input method.
- **Start >Settings > Personal tab>Input**

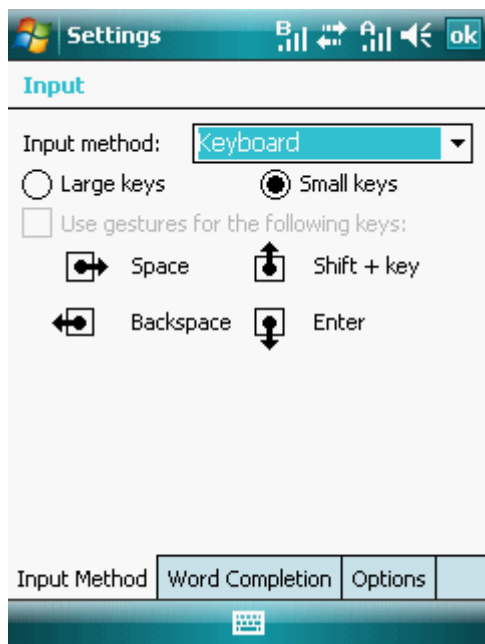

 - On the **Word Completion** tab, you can enter text faster by suggesting words as you enter letters use the hardware keyboard or the input methods. You can set the number you suggested words to display.

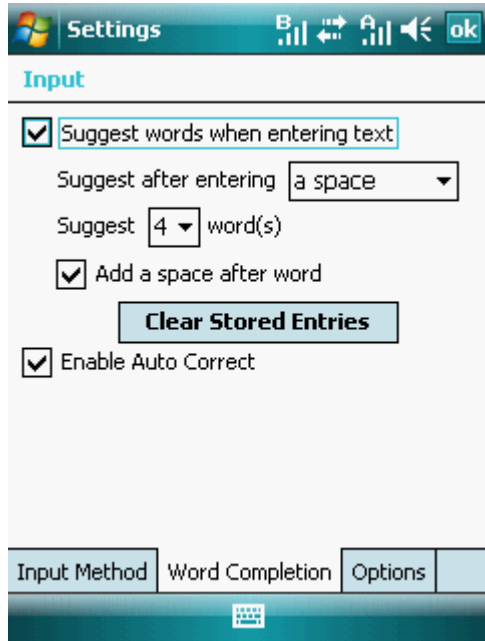


 - On the **Options** tab, you can choose the Voice recording format, the Default zoom level for writing and the Default zoom level for typing.

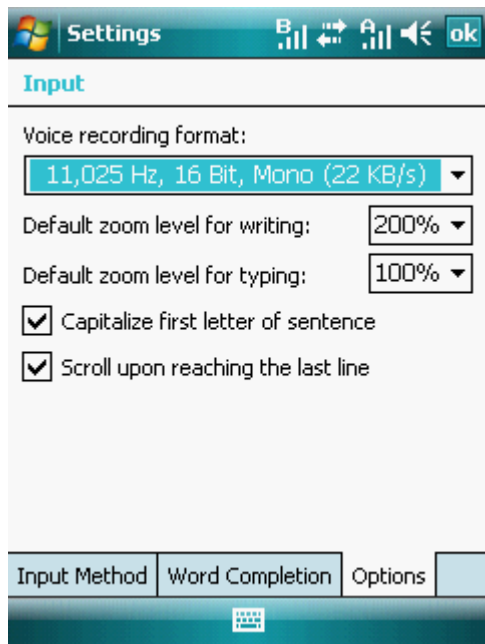

Lock

 - You can help your device more secure by requiring a password every time the device is turned on.
- **Start >Settings > Personal tab>Lock**

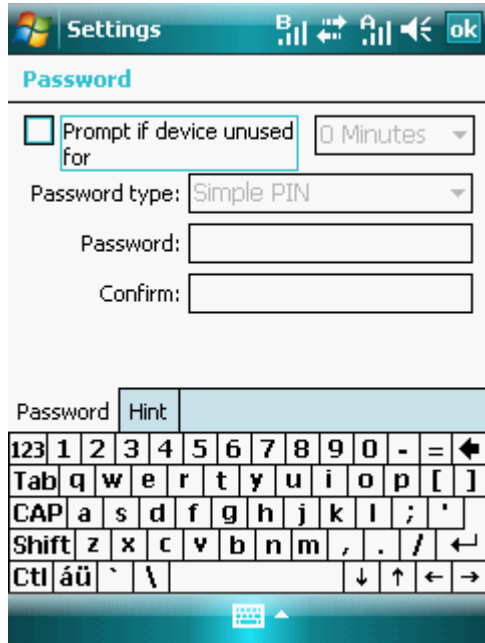

- On the **Hint** tab, enter a phrase that will help you to remember your password.

SIM Information

Tap **Start >Settings > Personal tab >SIM Information>A-SIM tab**

- To display the current memory status of the phonebooks of the A-SIM Card.
- To display the current memory status of the messages of the A-SIM Card.
- You can also edit the name and the number of the A-SIM Card.

 
Tap **Start >Settings > Personal tab >SIM Information>B-SIM tab**

- To display the current memory status of the phonebooks of the B-SIM Card.
- To display the current memory status of the messages of the B-SIM Card.
- You can also edit the name and the number of the B-SIM Card.

System Settings


GPS Settings

- Tap **Start >Settings > System tab>External GPS**

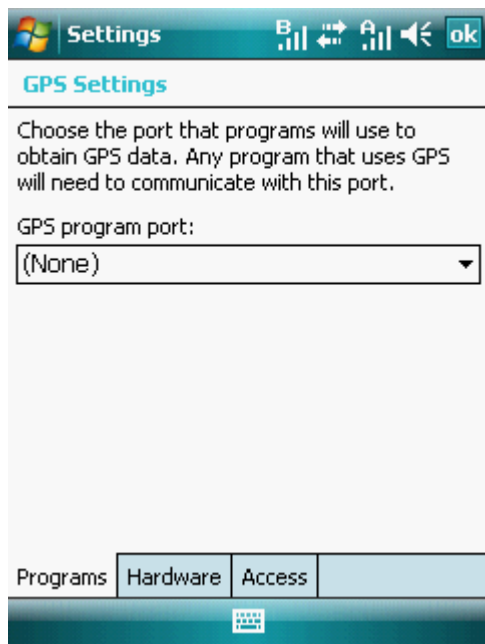


To change the device name

 - Tap **Start >Settings > System tab> About**
- Tap the **Device ID** tab.
- Enter a name.

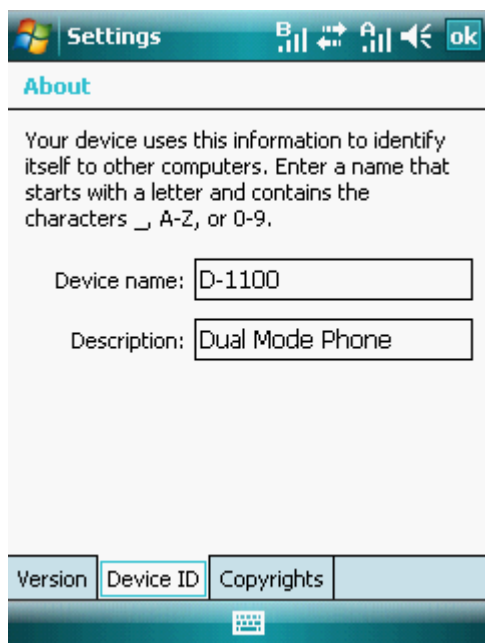


Memory

 - To display the allocations status and memory card information, you can also stop currently running programs.

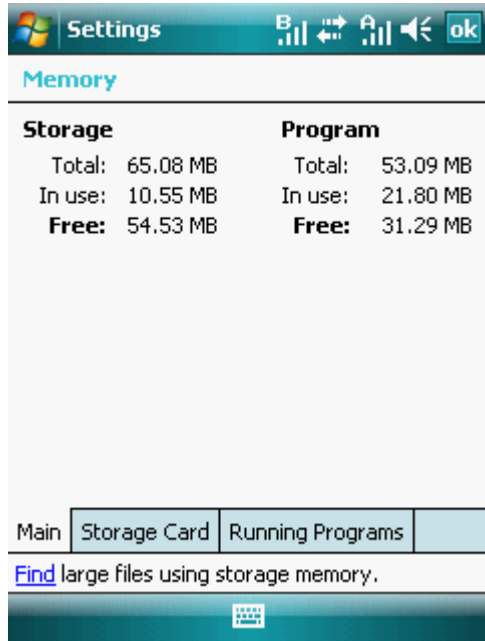


To remove programs

 - You can also remove the programs that you installed.

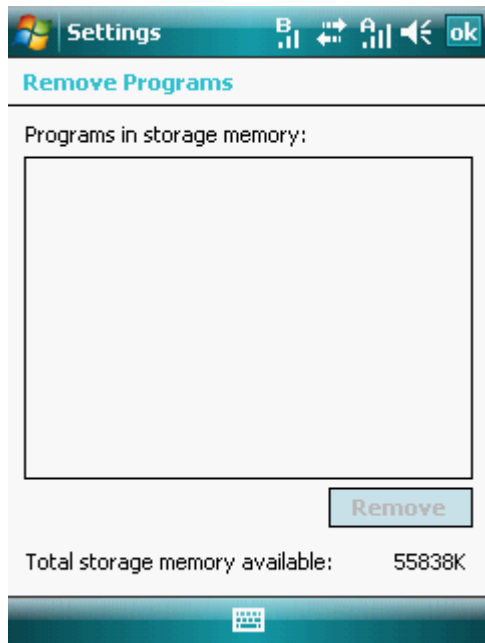


Regional Settings

 - Set the Regional configuration to use, including the format for Region, displaying numbers, currency, date, and time on your device.

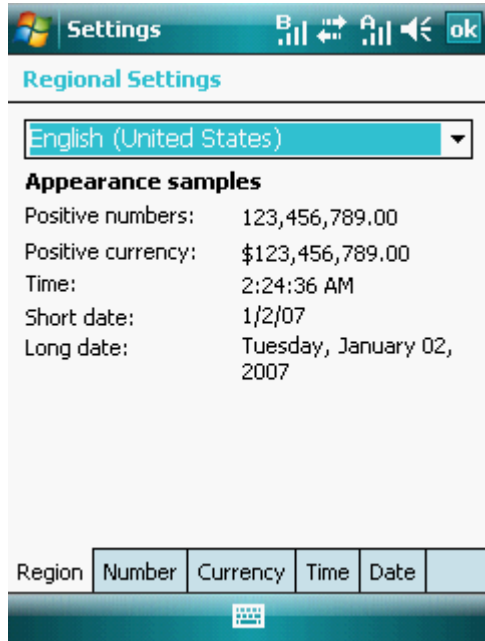

Screen Settings

 - Change the screen orientation, re-calibrate the screen, and change the screen text size.

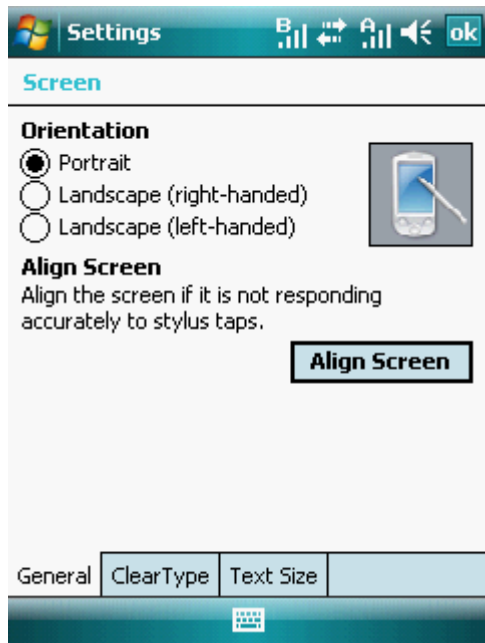

Reset to factory Settings

- To remove all your data and files from the memory and reset your device to factory default settings.



Reset to factory settings

 
Note: This operation will clean all data. And all settings will be reset to default settings!

 
Please input '1122',and press 'Yes'.



Clock and Alarms


- Set the device clock to the date and time of the locale or to a visiting time zone when you are traveling. Alarms can also be set at specified days and times of a week.

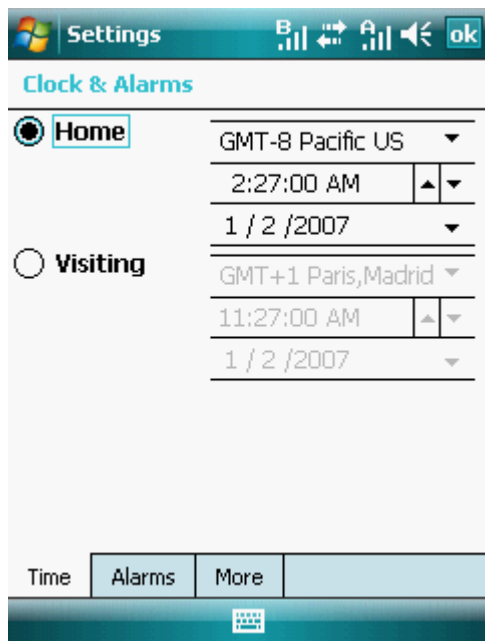

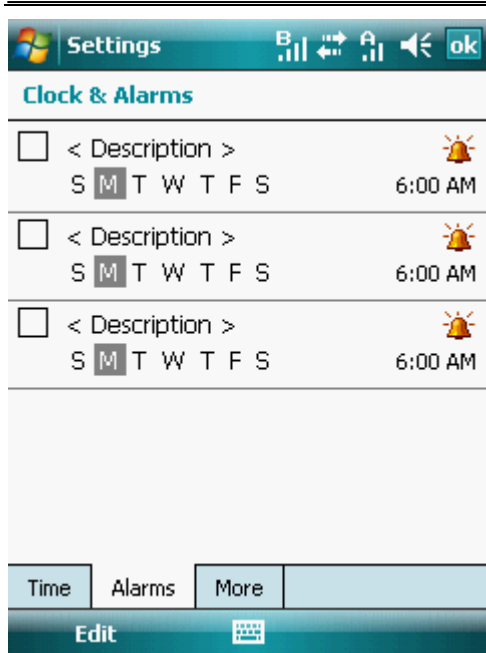


Power

 - Check the remaining battery power.

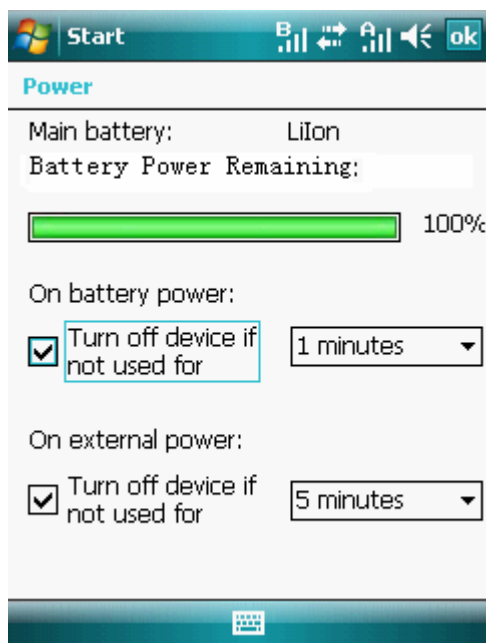


Backlight Settings

 - Set the backlight timer and adjust brightness.

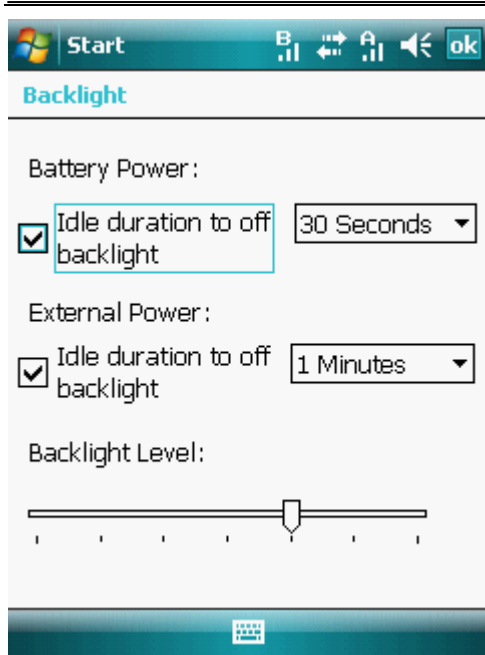

Certificates

 
- See information about certificates that are installed on your device.

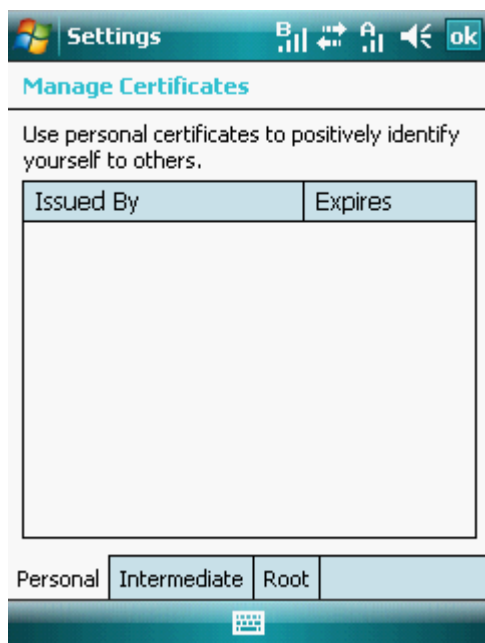

Connections Settings


Standby Mode Settings

 - Choose the standby mode for your device.

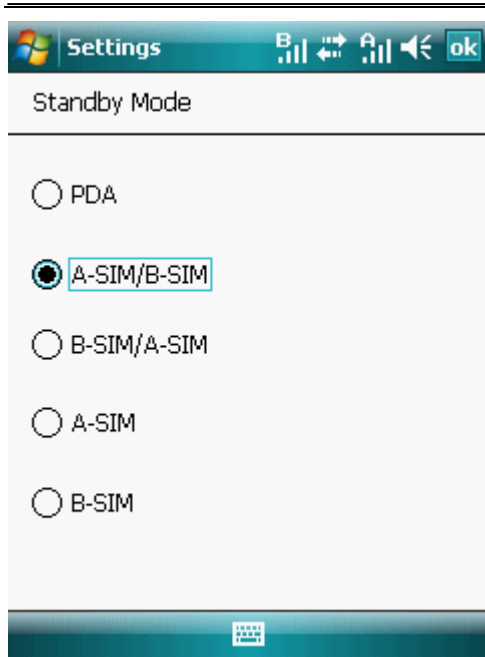


Beam

 - Set your device whether to receive all incoming beams.

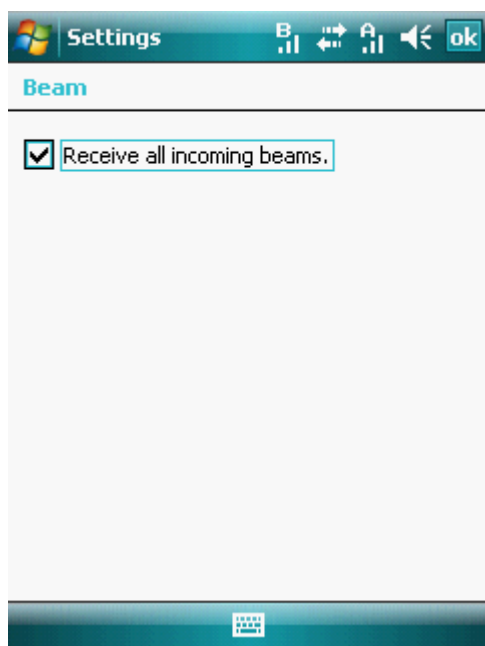


USB to PC

 - Set a USB serial connection between your device and PC when there are problems connecting ActiveSync.

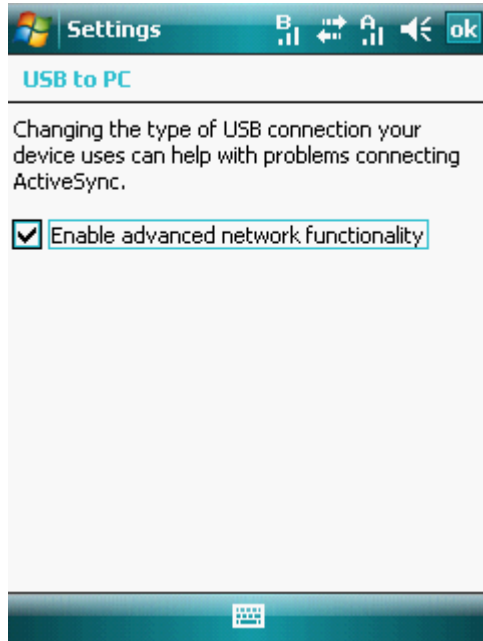

Network Cards

 - Allows your device to scan for available wireless network, also allows you to set up a network card (if you have one inserted on your device).

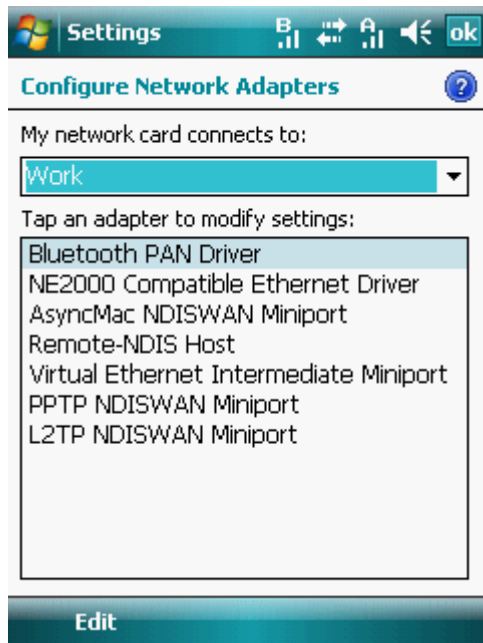


Bluetooth

- Tap Add new device to search for other Bluetooth devices.



 - You can turn Bluetooth on and make this device visible to other devices.

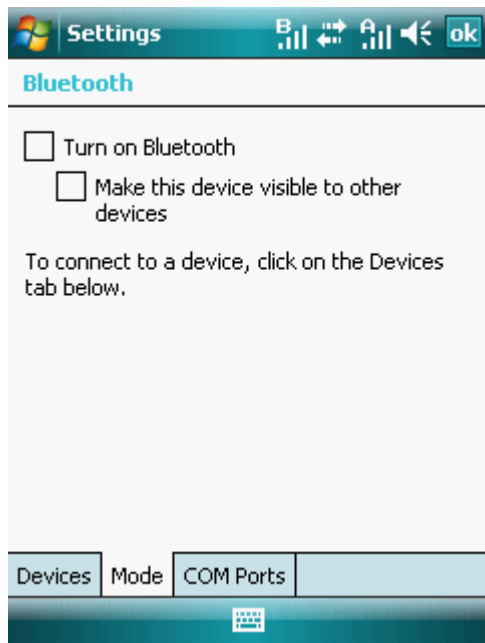


- To set up a COM port.



Connections

 - Set up one or more types of modem connections for your device, such as a phone dial-up, GPRS, and more so that your device can connect to the internet or a private local network.

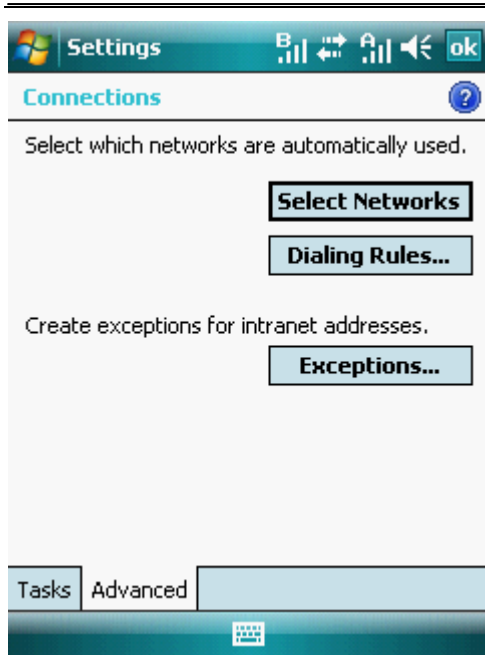


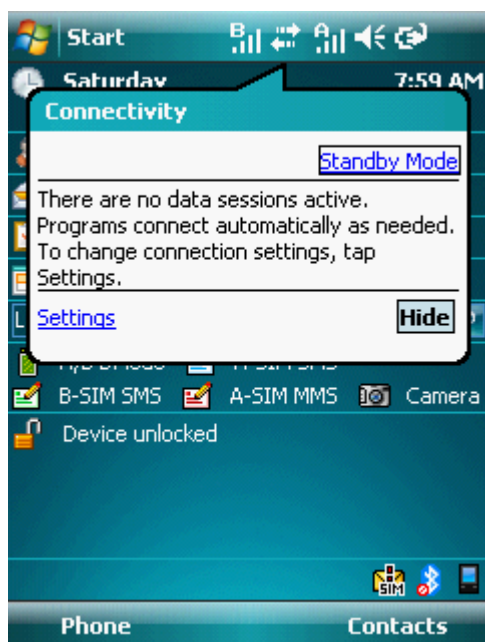 


Setting a GPRS Connection

 
Your device allows you to connect with GPRS .It supports a wide range of bandwidths that allows sending and receiving small bursts of data, such as email and web browsing.

To set a GPRS Connection in your device:


1. From the today screen, tap  on the status bar.
2. From the pop-up call out, tap settings.




From the setting screen, select the **Connections** tab then tap **Connections** icon.

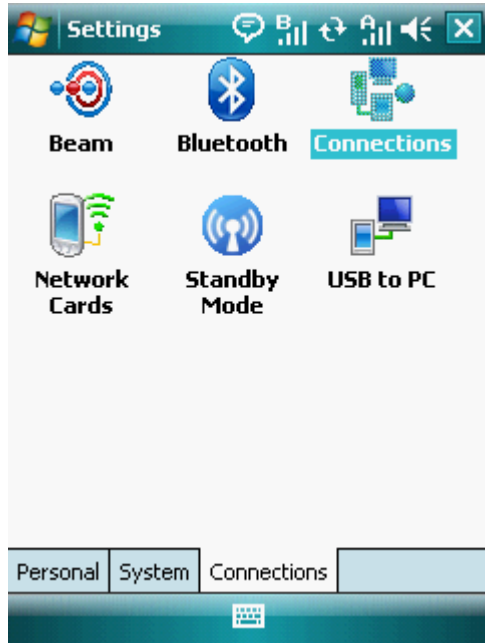

 
From the connection screen, tap Add a new modem connection.

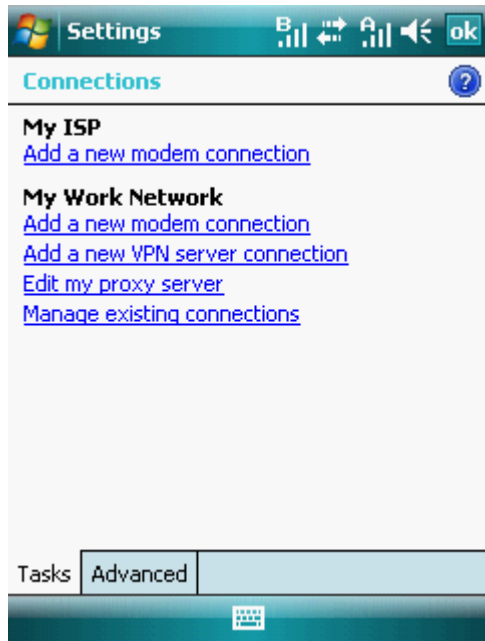

 
Input a unique name for the connection and then select Cellular Line (GPRS) from the modem list.

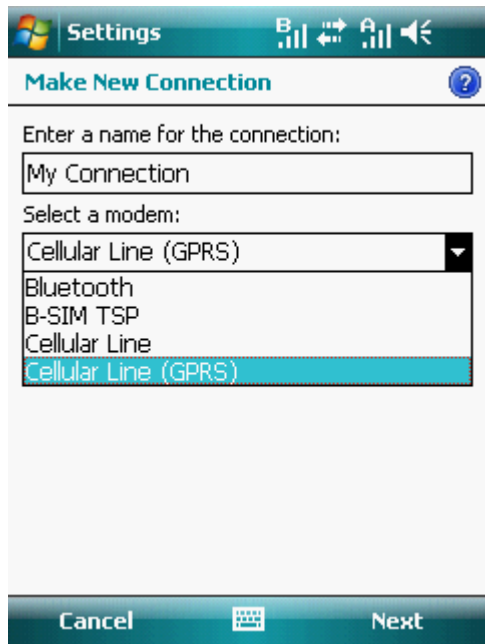

Input the Access point name.

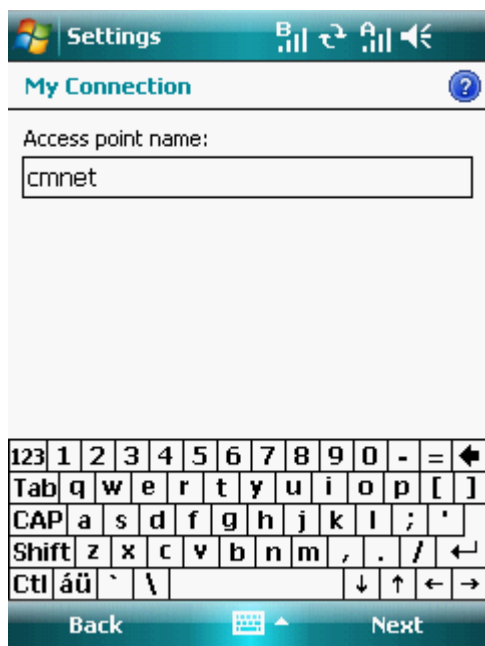 

 
Input your User name, Password and Domain then tap Finish. Contact your network administrator for assistance.

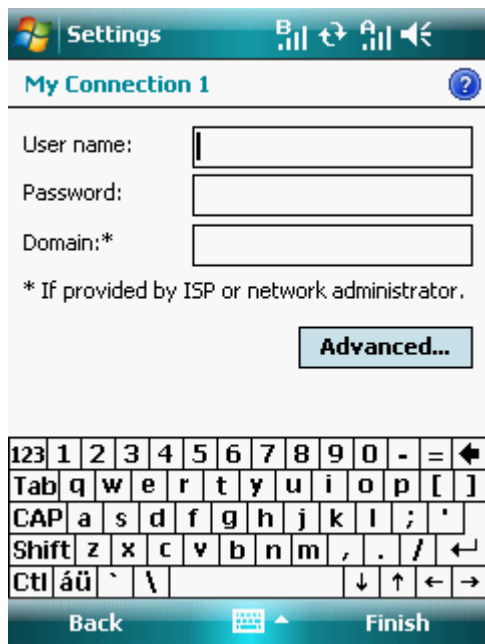


Connect GPRS

To connect GPRS:

  - Tap **Start >Settings>Connections** tab then tap **connections** icon.
- From the Connections screen, tap **Manage existing connections**.

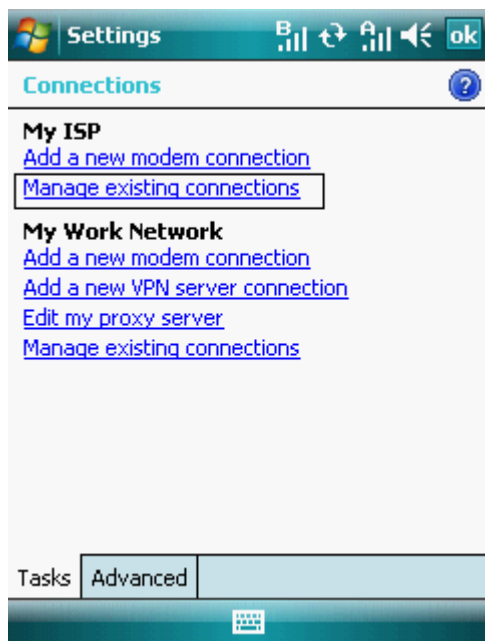


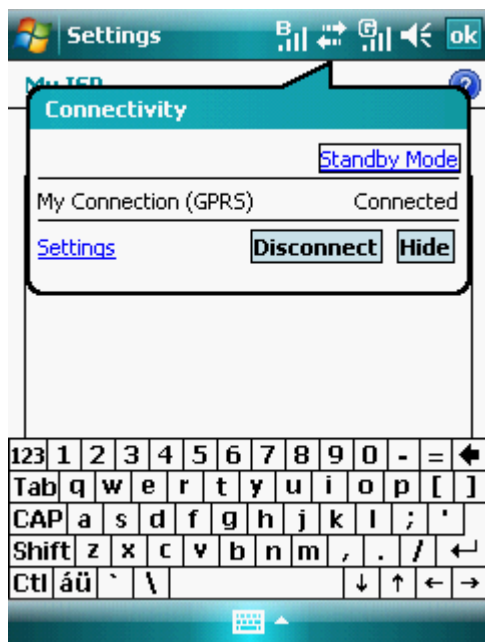 
- Tap and hold on an existing connection then from the pop-up menu tap **Connect**.
- Tap **Delete** to delete the selected connection setting.
- When connected, tap **ok** to exit.

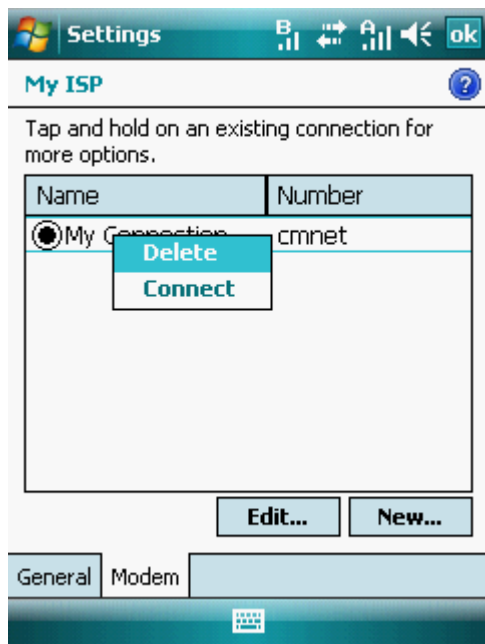

Disconnecting GPRS

To disconnect GPRS:

1. Tap  from the status bar.
2. From the pop-up callout, tap **Disconnect**.
3. Tap **ok** to exit.



Microsoft Office Word Mobile

Microsoft Office Word Mobile is a streamlined version of Microsoft Word. Word documents on your PC can be opened and edited on your device. You can also create and edit documents and templates in Word Mobile and save them *.doc*.rtf,*.txt, and *.doc files.

- Tap **Start > Office Mobile>Word Mobile**

1. In Word Mobile, tap **New**.
2. You will see either a blank document or template, depend on what you have selected as the default template.
3. Enter text as desired.
4. Tap **Menu** then choose whether to set the font, paragraph alignment and indentation, insert date, spelling and more.
5. When finished, tap **OK** to save the file.

To get more about Word Mobile:

When in Word Mobile, tap .

Microsoft Office Excel Mobile

Microsoft Office Excel Mobile makes it easy for you to open and edit Excel workbooks and templates created on your PC. You can also create new workbooks and templates on your device.

- Tap **Start > Office Mobile> Excel Mobile**

1. In Excel Mobile, tap **New**.
2. You will see a blank document.
3. Enter text as desired.
4. Tap **menu** then choose whether to insert cells, charts, symbols or functions, format rows and columns, and more.
5. When finished, tap **OK** to save the file.

To get more about Excel Mobile:

When in Excel Mobile, tap .

To use Excel built- in functions:

1. In Excel Mobile, tap **Menu>Insert>Function**
2. Tap **Function** to select the function to use.

Microsoft Office PowerPoint Mobile

Microsoft Office PowerPoint Mobile makes you open and view (not create) slide show presentations, *.ppt and *.pps formats, created on your PC.

To start a slide presentation:

1. Tap **Start > Office Mobile> PowerPoint Mobile** to open the program.
2. In the presentation list, tap the slide show you want to view.
3. Tap the current slide to advance to the next slide.
4. To navigation between slides, tap ▲>**Next** or **Previous** or tap **Go to Slide** and tap the slide you want to view.

If the presentation is set up as a timed slide show, slides will advance automatically.

To stop a slide show:

In a PowerPoint Mobile Presentation, tap ▲>**End Show**.

Pictures & Videos

You can view the pictures as a slide show, send them via e-mail or Bluetooth, edit them or set them as the background on the today screen.

To Open Pictures&Videos

- Tap **Start > Programs > Pictures & Videos**

To copy media files to your device

- Copy animation files from your PC or a storage card to the My Pictures folder on your device.
- Copy video files to the My Videos folder.

To view media files

- Tap **Start > Programs > Pictures & Videos**
- Select a media file and tap view or play (if Video File) to view or play back the file.

Pictures and Videos Menu

Select a media file onscreen and tap **Menu** to open a list of options that you can do with the selected media file.

Edit a picture

You can also edit a still image file such as rotate and crop.

 
- In Pictures & Videos, select the picture you want to edit and tap **View**.
- Tap **Menu>Edit**.
- Tap **Rotate** to rotate the picture 90 degrees or tap **Menu** to access more editing options.

Camera

Taking photos and recording video clips along with audio are easy with your device's built-in camera.

- Tap **Start > Programs > Pictures & Videos > Camera**, or press the **Camera Key**

Tap **Menu** displays the following functions:

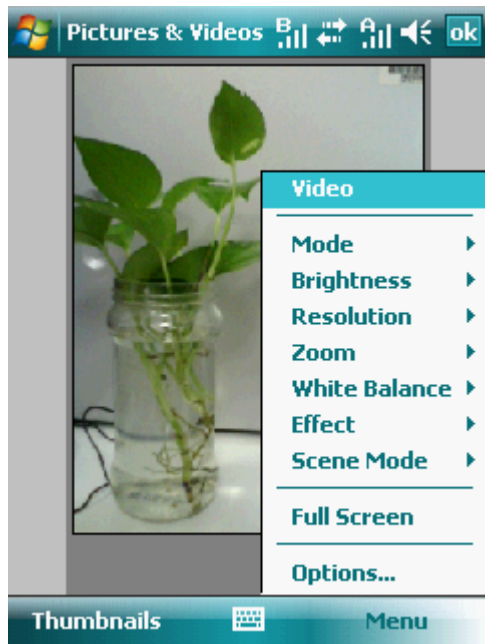

Video: To use the Video capture mode.

Mode: To select the capture mode.

Brightness: To adjust the brightness.

Resolution: To toggle among the different resolutions.

Zoom: To adjust the Zoom Ratio.

White Balance: To set the White Balance.

Effect: To set the special effect of photos.

Scene Mode: To set scene mode.

Full Screen: To enter Full Screen for capture.

Options: To input the filename prefix, select the memory of the files and the still image compression level.

Video

- Tap **Start > Programs > Pictures & Videos > Camera**, tap **Menu > Video**

For the relevant operations, see **Camera**.

 
Windows Media Player Mobile

Tap **Start > Windows Media**

You can use Windows Media Player Mobile to play digital audio and video files that are stored on your device or on a network, such as on a website.

Games

- Tap **Start > Programs > Games**

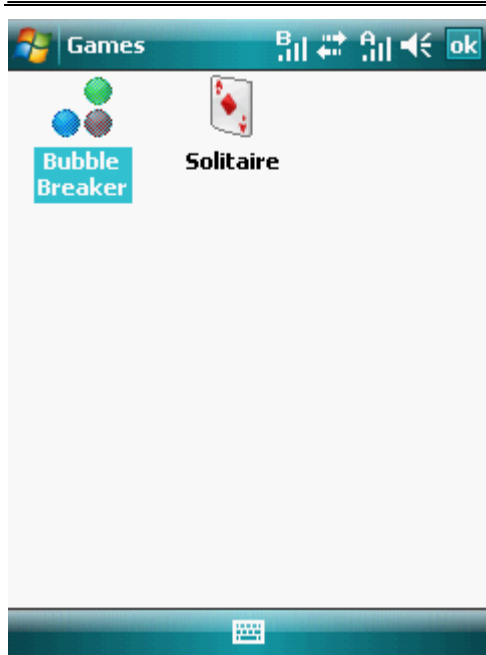

Calculator

- Tap **Start > Programs > Calculator**

Perform basic arithmetic and calculation, such as addition, subtraction, etc.

- Tap **Start > Programs > KJava**

You can expand phone functionalities by installing KJava applications

You may download add-on applications with these two means:

- Download the applications to PC, and transfer them to the phone via USB config.
- Download the applications via WAP.

Internet Sharing

Internet sharing connects your PC or notebook computer to the internet by using your device's data connection. You can choose to connect via Bluetooth or USB.

To set up your device as a USB modem:

1. Tap **Start>Program>Internet Sharing**
2. In the PC Connection select **USB**.
3. In the **Network Connection** list select the name of the connection that your device uses to connect to the Internet.
4. Plug the cable between your device and the computer.
5. Tap **Connect**.

To end the internet connection:

On the Internet sharing screen, tap **Disconnect**.

Bluetooth is a short-range wireless communications technology. Devices with Bluetooth capabilities can exchange information within a distance of about 10 meters without requiring a physical connection. You can even beam information to a device in a deferent room, as long as it is in the Bluetooth signal coverage range.

Bluetooth modes

Bluetooth on your device operates in three different modes:

- **On:** Bluetooth is turned on. Your device can detect other Bluetooth-enabled devices.
- **Off:** Bluetooth is turned off. In this mode, you can neither send nor receive information using Bluetooth.
- **Visible:** Bluetooth is turned on, and all other Bluetooth-enabled devices can detect your device.

Tip: By default, the Bluetooth is turned off. If you turn it on, then turn off your device, Bluetooth also turns off. When you turn on your device again, Bluetooth automatically turns on.

To turn Bluetooth on and make your device visible

1. On your device, tap **Start>Settings>Connections** tab>**Bluetooth>Mode** tab.
2. Select the **Turn on Bluetooth** and **Make this device visible to other devices** check boxes.
3. Tap **ok**.

Bluetooth partnerships

A Bluetooth partnership is a relationship that you create between your device and another Bluetooth-enabled device in order to exchange information in a secure manner. Creating a partnership between two devices involves entering a passcode again. Make sure that on the two devices, Bluetooth is turned on and in visible mode.

To create a Bluetooth Partnership:

1. On your device, tap **Start>Settings>Connections** tab >**Bluetooth**.
2. On the **device** tab, tap **Add a new device**. Your device search for other Bluetooth devices and display them in the box.
3. Tap the desired device name in the box.
4. Tap **Next**.
5. Wait for the paired device to accept the partnership. The receiving party needs to enter the same passcode that you specified.
6. The name of the paired device is then displayed. You may edit and enter a new name for that device.

7. Select the checkboxes of services that you want to use from the paired device.

8. Tap **Finish**.

To accept a Bluetooth partnership:

1. Ensure that the Bluetooth is turned on and in visible mode.
2. Tap **Yes** when prompted to establish a partnership with the other device.
3. Enter a passcode to establish a secure connection. The passcode must be between 1 and 16 characters.
4. Tap **Next**.
5. Tap **Finish**. You can now exchange information with the paired device.

Beam information using Bluetooth

You can beam information, such as contacts, calendar items, and tasks, as well as files from your device to your computer or to another Bluetooth enabled device.

Tip: If your computer does not have built-in Bluetooth capability, you need to connect and use a Bluetooth adapter.

To beam information from your device to a computer:


1. Turn on Bluetooth on your device, and make your device visible.
2. You also need to set Bluetooth on your computer to visible mode.
3. Create a Bluetooth partnership between the two devices. After a partnership has been created successfully, your computer is ready to receive Bluetooth beams.
4. On your device, you can select an item to beam, the item can be an appointment in your calendar, a task, a contact card or a file.
5. To beam a contact, tap **Menu>Send Contact>Beam**. To beam other types of information, tap **Menu>Beam [type of item]**.
6. Tap the device name to which you want to send the beam.

Tip: If the computer or the device you want to beam to does not appear in your device's Bluetooth list, make sure that its Bluetooth is turned on and set to visible mode.

The ngpay logo is displayed in a stylized, lowercase font with a slight shadow effect, set against a dark grey rectangular background.

You can use ngpay to buy air & rail tickets, pay your bills, buy movie tickets, shop for books & gifts, do banking, make payments and more from your mobile phone in a fast, simple and secure fashion.

 
- Tap **Start>Program>ngpay**

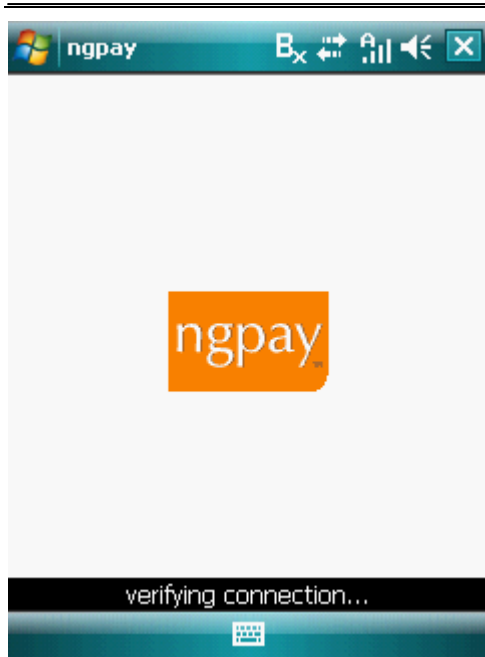

To use your ngpay

1. Register with ngpay by providing a few details - name, mobile no & address and a 6 digit ngpay PIN.3.
2. Create a list of your favorite ngpay partners and services. You can always update this list.
3. Select any partner from your favorite list and go through the intuitive steps. Once you reach the pay screen while transacting with any partner, pay using a variety of payment instruments. Currently, your regular Visa/MasterCard credit cards and HDFC Bank Account are supported.
4. Your transaction details get stored in the ngpay History under the My Profile menu. In addition, ngpay also sends you a SMS and an email with the transaction details.

 Reuters India gives you the latest India, World and Business news and more. Also, get the latest stock market information along with tools like the currency converter and weather in your city on your mobile phone.

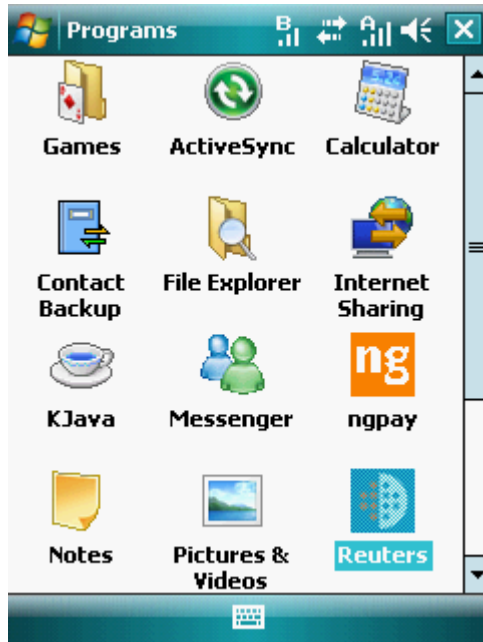

Tip: Please ensure that you have GPRS settings in your phone to open Reuters. Contact your operator for GPRS settings.

If your A-SIM supports STK, you may use the corresponding value-added services.

Tap **Start** > **Programs** > **SimTKUI**

About Synchronization

- ActiveSync synchronizes information on your device with information on your PC, such as Outlook content .ActiveSync can also synchronize over a wireless or cellular network with Microsoft Exchanger Server, if your company or service provider is running Microsoft Exchanger Server with Exchange ActiveSync. When you Synchronize, ActiveSync compares the information on your device with the information on your PC or exchange server, and updates all data with recent changes.
- You can select and synchronize data in the following location using ActiveSync:

Contacts

Calendar

Email

Tasks

Notes

Favorites

Files

Media

Before you can synchronize information with pc, you must first install ActiveSync on your PC and create a synchronization relationship between your device and the PC. You can install ActiveSync from the getting started disc that comes with your PC. ActiveSync is already installed on your device. If you lose your getting started CD, you can download the latest version of Microsoft ActiveSync from the Microsoft's Website (<http://www.microsoft.com>)

Once you have installed ActiveSync and setup a synchronization relationship, ActiveSync on the PC recognizes your device when you connect it, and automatically transfers the synchronization settings you specified on your device.

Synchronizing with Your PC

To synchronize your device with PC:

Follow the steps below to set up a synchronization to partnership:

 
1. Connect your device to your PC. The synchronization Setup Wizard automatically starts and guides you to create a synchronization partnership. Click **Next** to proceed.
2. To synchronize your device with your PC, clear the Synchronize directly with a server running Microsoft Exchange check box then click **Next**.
3. Select the information types that you want to synchronize then click **Next**.
4. Select or clear the **Allow wireless data connections (such as MMS or Internet Calling) on your device while it is connected to your computer** checkbox according to your preference.
5. Click **Finish**.

When you finish the Wizard, Active Sync synchronizes your device automatically. Note that support Outlook e-mails and other information will appear on your device after synchronization.


Synchronizing with Exchange Server

To synchronize your device with Exchange Server:


1. From the ActiveSync menu, tap **Menu** > **Add Server Source**.

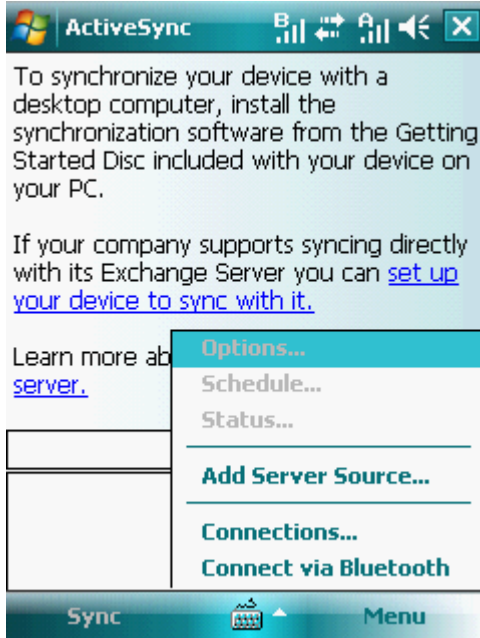

 
2. In the **Server Address** field, input the name of the server running Exchange Server then tap **Next**. If necessary tap the checkbox.

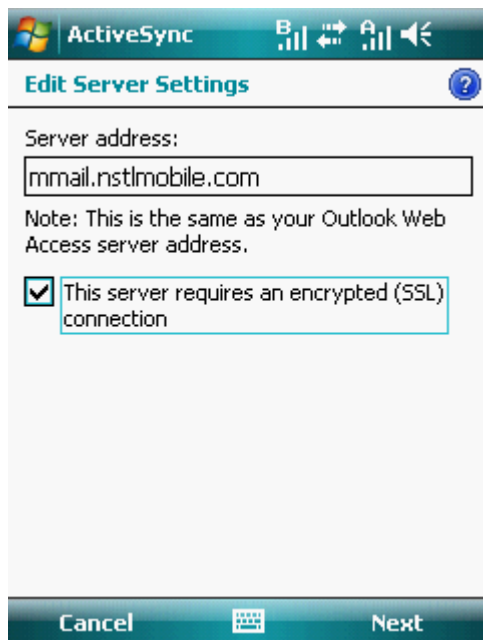

 3. Input your name, password, and domain then tap **Next**.

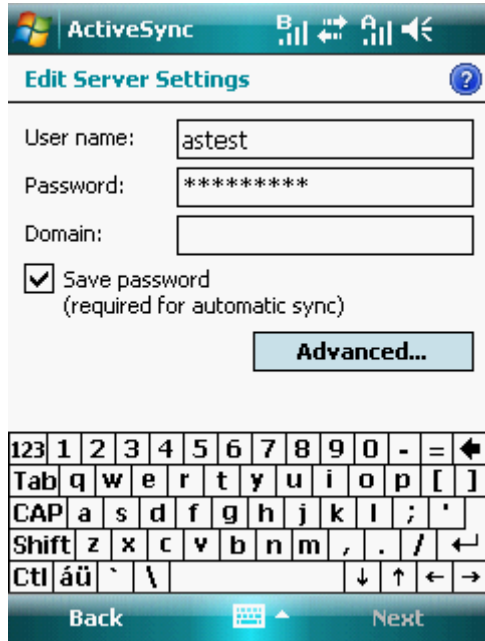

 4. Tap the check boxes to select the data items that you want to synchronize with Exchange Server. To change the available synchronization settings, select a data item then tap **Settings**. Tap **Finish** when done.

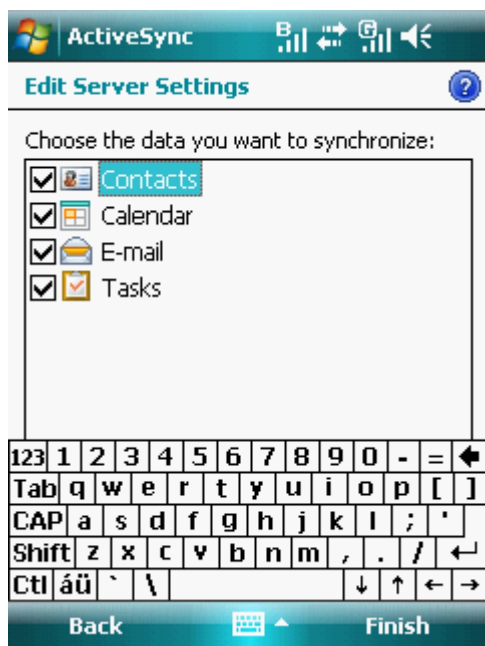

5. Tap **Sync** to start the sync process.

File Explorer

- Tap **Start > Programs >File Explorer**.

You can manage your files and folders using File Explorer.

Searching Information

- Tap **Start > Programs > Search**

You can search files and other items stored in My Documents folder or on an installed storage card of your memory.

Maintenance

- Use a dry soft cloth to wipe general dirt. For a large amount of dirt, use a soft towel soaked with neutral scour and twisted to gently wipe the dirt and use a dry soft cloth to wipe the phone.
- Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched, change color or fade.

Troubleshooting

If any problem occurs in your phone, please refer to the help information in the table below. If the problem continues, contact the dealer.

Problem	Possible Causes	Solutions
Unable to switch on	● Is the battery power low?	● Charge the battery.
	● Is the battery inserted correctly?	● Insert the battery correctly.
Unable to make a call	● Is the phone outside of the service area?	● Move to a place where signal can be received strongly.
	● Is the phone number correct?	● Check that the number is correct.
Communication interrupted suddenly	● Are you in a place with weak signal?	● Move to a place with strong signal.
	● Is there any object around that obstructs signal transmission?	● Go to another place.
	● Are you moving in high speed during conversation?	● The signal will interrupt when the phone switch between 2 cell station. Please move in low speed.
Unable to charge the battery	● Is the charger plugged to the phone correctly?	● Plug the charger to the phone correctly.
	● Is the power cable of the charger disconnected from the socket?	● Check the connection.
	● Is the battery too old?	● Contact the seller to replace the phone with a new battery.
Unable to respond to taps	● Is the screen aligned regularly?	● Align the screen

After Services

For details, see the After Service Guide supplied with the phone.



Spice Mobiles Limited,
D-1, Sector 3, Noida - 201301
Uttar Pradesh, India
www.spicemobile.in