

Spice Mobile Phone

www.spicemobile.com

Please read this guide carefully before using the phone for the first time.

Thank you for purchasing the Spice mobile phone.

Please read this document carefully before using, which helps you use the mobile phone correctly and better. Under no circumstances shall Spice Mobile be responsible for any loss of data or income or any special, incidental, consequential or indirect damages caused by misuse of the product due to ignoring or misunderstanding of the instructions. However, damages caused by professional technicians of Spice are not included.

This User's Guide has gone through strict and careful check and emendation by Spice Mobile. However, we do not guarantee that the User's Guide is free from any error or omission.

Spice Mobile operates a policy of continuous development. Spice Mobile reserves the right to make changes and improvements to the product, applications or the contents described in this document without prior notice.

The aim of this document is to help you properly use the Spice mobile phone and is not to describe the software or hardware configuration of the Spice mobile phone. Please check related contracts (if possible) or the Spice dealer for the configuration of the Spice mobile phone. The illustrations in this document are only for reference. If any illustration does not correspond with the actualities of the product, please accept the product as standard. A number of network features described in this document are those services provided by your service provider. Whether you can take advantage of them depends on your service provider.

All contents in this document are protected by intellectual property laws and regulations. Reproduction, storage, transfer, distribution or translation of part or all of the contents in this document in any form without the prior written permission of Spice Mobile is prohibited.

If you encounter disagreements between this document and the actualities of the product, or if you are interested in latest information about us, or if you have any questions or suggestions, you are welcome to contact us at:

Log on our websites:

Spice Mobile: [://www.Spice-mobile](http://www.Spice-mobile)

Contents

Care and Maintenance	6
Your Phone	8
1 PART OF THE PHONE.....	8
.1.1 English/Number Keys.....	8
.1.2 Status Indicators.....	9
2 BATTERY.....	10
.2.1 Installing and Removing the Battery.....	10
.2.2 Charging the Battery.....	12
3 CONNECTING TO NETWORK.....	12
.3.1 SIM Card.....	12
.3.2 Inserting and Removing the SIM Card.....	13
.3.3 Switch the Phone On/Off.....	13
.3.4 Security Code.....	14
.3.5 SIM Card Codes.....	14
.3.6 Connecting to Network.....	14
Basic Functions	15
1 INTRODUCTION.....	15
2 HOT KEY FUNCTIONS.....	16
3 MAKING A CALL.....	16
.3.1 Making a Domestic Call.....	16
.3.2 Calling a Fixed Telephone.....	16
.3.3 Making an International Call.....	17
.3.4 Calling a Recently Dialed Number.....	17
4 MAKING AN EMERGENCY CALL.....	17
5 ANSWERING A CALL.....	17
6 ENDING OR REJECTING A CALL.....	18
7 PHONEBOOK.....	18
8 CAMERA.....	19
9 CALL HISTORY.....	19
10 CALL SETTING.....	20
Function Menus	21
1 USAGE OF FUNCTION MENUS.....	21
.1.1 Quick Selection.....	21
.1.2 Quit a Menu.....	21
2 MENU TREE.....	21
3 MESSAGES.....	28
.3.1 Write Message.....	28
.3.2 Inbox.....	31
.3.3 Outbox.....	32
.3.4 Sent.....	33
.3.5 Drafts.....	34
.3.6 Templates.....	36
.3.7 Voice Mail Box.....	36
.3.8 Message Settings.....	36
.3.9 Scheduled SMS.....	38
.3.10 Broadcast Message.....	38

4	CALL HISTORY.....	39
4.1	Missed Calls.....	39
4.2	Received Calls.....	39
4.3	Dialed Calls.....	39
4.4	Delete Call Log.....	39
4.5	Call Time.....	40
4.6	Call Cost.....	40
4.7	SMS Counter.....	40
4.8	GPRS Counter.....	40
5	MEDIA CENTER.....	40
5.1	Audio Player.....	40
5.2	Video Player.....	41
5.3	Camera.....	41
5.4	File Manager.....	42
5.5	Sound Recorder.....	43
5.6	FM Radio.....	43
5.7	Schedule FM Record.....	43
5.8	E-Book Reader.....	43
6	SETTINGS.....	44
6.1	Display Characteristic.....	44
6.2	System Setup.....	45
6.3	Call Setup.....	46
6.4	Security Setup.....	48
6.5	Network Setup.....	49
6.6	Restore Factory Settings.....	50
7	USER PROFILES.....	50
8	ORGANIZER.....	51
8.1	Alarm.....	51
8.2	Calendar.....	51
8.3	To Do List.....	51
8.4	Stopwatch.....	51
8.5	World Clock.....	52
8.6	Calculator.....	52
8.7	Unit Converter.....	52
8.8	Currency Converter.....	53
8.9	Anniversary.....	53
9	INTERNET.....	53
9.1	STK*.....	53
9.2	WAP.....	53
9.3	Date Account.....	56
10	FUN SPICE.....	57
10.1	SpiceGang.....	57
10.2	Reuters.....	57
10.3	Ibibo.....	57
10.4	Voice Zone.....	57
10.5	M Gurujee.....	58
10.6	Email2SMS.....	58
10.7	Dazzle Ringtone.....	58
10.8	Fun & Games.....	58
10.9	Others.....	58

Input Modes	60
.1 INTRODUCTION	60
.2 KEYPAD	60
.3 INPUT MODES	60
.3.1 Smart English Mode	60
.3.2 English Mode	60
.3.3 Number Mode	61
.3.4 Hindi Mode	61
Troubleshooting	62
Glossary	64
Technical Data	65

1 Care and Maintenance

When using your phone, basic safety precautions as below should be always followed.

- Please read the User's Guide carefully before using your phone.
- Make sure the phone turned off in the airplane. Make sure to disable the functions which work even when the phone switched off before boarding.
- Keep away from heat sources and high-voltage environment, such as electric appliances or electric cooking equipment. Keep the phone in normal temperature. The phone could be damaged in an atmosphere with temperature higher than 55°C or lower than -10°C.
- Take action on anti-fire. You must switch off your phone when you access to the articles easy burning. Switch off your phone when in gas station or the fuel warehouse, etc.
- Do not use a hand-held phone while driving. Do not put the phone near the airbag, for it may be bounced off and hurt you when the airbag explodes.
- Only use the standard battery, battery charger and the accessories approved by the mobile phone vendor. We take no responsibility for any damage or any results caused by you using the accessories from a third party.
- Do not try to unpack the crust of the phone or battery. Nor to disassemble the phone or battery.
- Keep away from electrical appliance such as TV, radio or personal computer, cardiac pacemaker and hearing aid, etc. Keep your phone away from credit cards and away from the magnetic area.
- Do not subject your phone to mechanical vibration or shock. Do not tap the display with sharp objects.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use only soft cloth to clean your phone. Do not use the solvent such as benzene, thinner or alcohol. Keep your phone away from harsh chemicals, strong detergents and solvent.
- Do not subject the phone to excessive smoke or dust, nor directly to the strong sunshine.
- Keep your phone dry. Do not use it in the environment of high humidity, such as in a bathroom. The phone is not waterproof. Do not subject it to rain nor to get wet.
- Use the accessories like the earphone carefully. Do not touch the antenna unnecessarily. Only use the original antenna. The use of any unapproved antenna may damage your phone.
- When to plug out the charger from the phone, press and hold the side buttons of the charger then pull. Do not pull the wire of the charger. Do not touch the charger with wet hands.
- Do not use your phone as the only communication facility for emergency e.g. medical treatment and rescue.
- Please keep your phone out of the reach of small children to avoid danger.

When using the battery, please follow the safety precautions as follows.

- Before using the battery, please read the user guide carefully and pay attention to the labels.
- Please charge the battery indoors with cool and airy condition (temperature: 0-25°C, relative humidity: below 65%). If the environment temperature of charging is higher than expected, it leads the battery to get hot, smoking, distorted, damaged, blowing up, or even the worse... explosion.
- There are specific protecting circuits and parts inside the battery. Do not disassemble it, or you may cause leakage of toxic liquid which may destroy your vision. If the liquid happens to squirt into your eyes, rinse them with fresh water, and see a doctor immediately. Never knead your eyes.
- Do not squeeze and short-circuit the battery. Squeezing and short-circuit may damage the battery and the components. Short-circuit can occur when a metallic object (such as coin, clip or pen) makes the direct connection of the '+' and '-' poles of the battery. Therefore, do not put the battery together with metallic objects.
- Keep the metal contacts and the battery clean.
- Never use any battery which damaged or exhausted.

• Replace the battery which no longer working well. The battery may be recharged and discharged hundreds of times before replacement. The battery is rechargeable but it wears out eventually. When the working time (talk-time and standby time) of the battery is observably shorter than normal, it is time to replace it with a new one.

• Do not expose the battery to direct sunlight, nor subject to excessive smoke and dust. Do not use in high humidity environment, such as in a bathroom. The battery is not waterproof. So do not subject it to rain or to get wet.

• Do not leave the battery in a place too hot or too cold. The environment with the temperature higher than 55°C or lower than - 10°C deteriorates the battery performance.

• Do not dispose the battery in fire! Try best to avoid explosion.

• Do not dispose the battery in water! Water makes the electronic circuit short-circuited and makes the battery hot, smoking, distorted, damaged, and explosion.

• Dispose of batteries according to local regulations (e.g. recycling). Do not dispose batteries as household waste. Try best to avoid explosion and pollution.

• The battery must be charged only by the dedicated charger. Do not charge the battery continuously over 24 hours.

• Please keep the battery out of the reach of small children to avoid danger.

When using the charger, please follow the safety precautions as follows.

• Before using the charger, please read the user guide carefully and pay attention to the labels.

• Do not try to disassemble or refit the charger. Do not use it if the electric wire wears out, or it may cause damage to the charger or cause an electric shock or a fire.

• Do not touch the charger with wet hands. If it is exposed to water or other liquid, cut off the electricity immediately.

• Do not short-circuit the charger. Do not subject the charger to mechanical vibration or shock. Do not expose the charger to direct sunlight. Do not use it in the environment of high humidity, such as in a bathroom. The charger is not waterproof. Do not subject it to rain nor to get wet.

• Keep away from electrical appliance such as TV and radio.

 
• When unplugging the charger, be careful not to strain the electric wire.

• Please keep the charger out of the reach of small children to avoid danger.

2 Your Phone

Part of the Phone

2.1.1 English/Number Keys

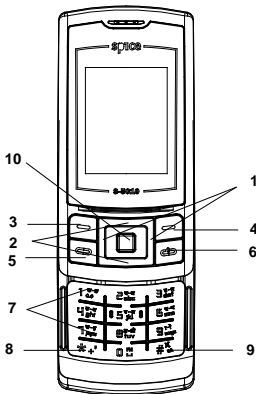

1 . Left Key & Right Key : When pressed in text-editing mode, move the cursor in left or right direction,

when **Left Key** is pressed in standby mode, accesses [Messages]/[Text Messages] menu; when **Right Key** is pressed in standby mode, accesses [Profiles] menu.

2 . Up Key & Down Key : Browse through business cards, phone numbers, text messages, multimedia messages and options in a menu. When pressed in text-editing mode, move the cursor in upwards or downwards direction, when **Up Key** is pressed in standby mode, accesses [Fun Spice] menu; when **Down Key** is pressed in standby mode, accesses [Settings] / [System Setup] / [Short Cuts] menu.

3 . Left Soft Key : Perform the function in lower left display.

4 . Right Soft Key : Perform the function in lower right display.

5 . Send Key : Make or answer a call. Pressing this key in standby mode shows the most recently dialed numbers.

6 . End Key : Turn the phone on/off, end a call, exit menu system to standby mode, or return to standby mode.

7 . Number Keys : Press 0-9 to input digits, letters or symbols , quick choice of options in a menu; when speed dial is enabled, long press 2-9(except 5) to define speed dial numbers (speed dial numbers should be saved in the phone or the SIM card). when **0 Key** is long pressed in standby mode, accesses FM radio.

8 . * Key : Function depends on mode and guiding text.






9 . # Key : Function depends on mode and guiding text.











10 . OK Key : When pressed in standby mode, accesses Audio Player mode. Same function as **Left Soft Key** in most cases.

Note: Here “press” means one stroke on the key; “long press” means pressing and holding for 2 or more secs. 1 and 2 are also known as Navigation Keys.

2.1.2

2.1.3 Status Indicators

Indicators	Descriptions	Areas
	Signal strength	Indicators
	GPRS service available	Indicators
	Keypad locked	Indicators
	Ring inactive; vibration active	Indicators
	Ring and vibration active	Indicators

	Ring active	Indicators
	Ring after vibration	Indicators
	New messages	Indicators
	New multimedia messages	Indicators
	New WAP service messages	Indicators
	Alarm set and active	Indicators
	All calls diverted	Indicators
	Battery charge level	Indicators
	The headset is being used.	Indicators
	You have missed calls.	Indicators

2.1.4

2.1.5

Battery

When you first time unpack a phone, the battery is not fully charged. It takes three charging-discharging cycles for the battery to reach its peak performance. So for the better performance of battery it is recommended that you fully Charge and Discharge battery at least three times.

 
2.1.6 Installing and Removing the Battery

Please follow the process to remove the battery:

① Pull the back cover off;


② Pull the battery in the opposite direction and remove the battery.

Note: *The phone should be switched off before you remove the battery, or else the phone and the SIM card may destroy.*

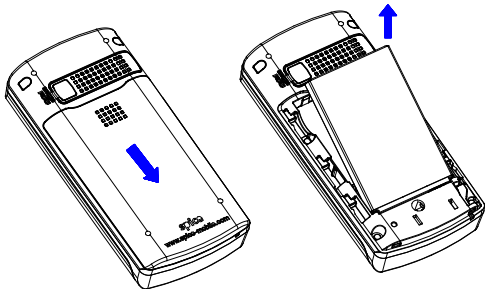

Please follow the process to install the battery:

 - ① Align the connectors on the battery with the corresponding connectors on the phone;
- ② Push the opposite end of the battery until it snaps into place.

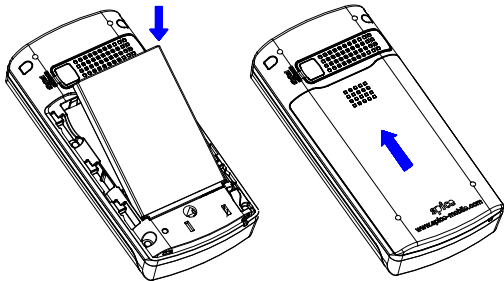

2.1.7 Charging the Battery

Connect the charger to an AC socket.

Connect the lead to the socket which is on top of your phone.

The indicator for battery charge level flashes if your phone is switched on or off. If the battery is completely empty, it may take a few minutes before the charging indicator appears on the display.

When the battery gets full charged the level indicator stops flashing. I.

Disconnect the charger after charging.

Note: Do not charge the battery temperature under temperature higher than 55°C or lower than - 10°C. Usage of unauthorized chargers may be dangerous and is not under Spice guarantee.

You should charge the battery in time if the phone shuts off automatically. If you charge the battery when it is not empty, the phone may automatically shorten the charging time.

Connecting to Network

2.1.8 SIM Card

Before using your phone, insert a SIM Card provided by a network operator.

All necessary information for your network connection is stored in the SIM Card. You also need the SIM Card to save telephone numbers and messages. You may remove the SIM Card from your mobile phone and insert it into any GSM mobile phone. The information stored in the SIM Card will be read automatically.

Keep the SIM Card clean and do not expose it to magnetism, as the SIM Card will destroy.

 
Note: You should switch off the phone before removing the SIM Card. Never insert or remove the SIM Card when the phone is connected to an adapter, else the SIM Card will get destroyed.

2.1.9 Inserting and Removing the SIM Card

Be careful while inserting the SIM Card, as the metal interface of the SIM Card is fragile.

Switch off your phone, remove the battery and other adapter.

Insert the SIM Card as shown in the illustration.

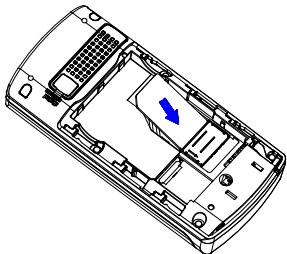

2.1.10 Switch the Phone On/Off

Long press **End Key** for switch ON/OFF the phone.

If the phone is switched on and SIM Card is unavailable, the text *Insert SIM* will be displayed on the display. Your phone will automatically check the validity of the SIM Card.

The following texts will be displayed in sequence:

Enter Security Code – if you have set one.

Enter PIN – if you have set the phone to request the PIN code.

Searching for Network – Your phone will search until a proper network is available.

2.1.11 Security Code

The security code protects your phone against unauthorized use. When the security code **is** enabled, your phone can be accessed only after the correct code is entered. You may choose to disable the security code. You can not protect your phone against unauthorized use when the security code is disabled.

When keying in the security code, press **Right Soft Key to clear typos**, press **# Key** or **OK Key** to enter. For example: the set security code is **1122**, and the process is:

1 1 2 2 # or 1 1 2 2 OK

If you forget your security code, please contact Spice dealer or the local authorized service center for help.

2.1.12 SIM Card Codes

The PIN (Personal Identification Number) code protects your SIM Card against unauthorized use. When the PIN code is enabled, your phone can be accessed only after the correct code is entered. You **may choose to disable the PIN code**. You may not protect your SIM Card against unauthorized use when the security code is disabled.

Long press **End Key** to switch on your phone

After entering the PIN code, press **Right Soft Key** to clear typos, press **# Key** or **OK Key** to enter. For example: the set PIN code is **1122**, and the process is:

1122 # or 1122 OK

If you enter incorrect PIN code three times, the phone will display *SIM blocked* and ask you to enter the PUK code.

Note: Your network operator may provide you with a reset PIN code (4-8 digits); you should change the code and keep the new code secret.

2.1.13 Connecting to Network

After the correct codes are entered, your phone automatically searches for network service (the text *Searching* may be displayed on the display). When a network service is available, the brand name of the service provider is shown on the upper center of the display. Your phone enters standby mode, in which you may make and answer calls, and also:

Browse menu by pressing **Left Soft Key**;

Browse name by pressing **Right Soft Key**.

Note: When the text *Emergency* is displayed on the display, you are out of service. However, an emergency call may be made depending on the signal strength.

Your Spice S-5010 mobile phone is approved for use of GPRS (General Packet Radio Service). You may have access to WAP service if you are subscribed to the GPRS service and the service is available.

3 Basic Functions

Introduction

Your Spice S-5010 is more than a mobile phone. It embodies abundant, practical and convenient multimedia functions. Here is a brief introduction to the functions of your phone.

Phonebook: You are provided with a quick search engine for relevant phone numbers. Every one of the 500 entries stored in the phone supports as many as 4 phone numbers. You may send a message directly on the phonebook menu, copy an entry to the SIM Card or the phone. You may copy entries from the SIM Card to the phone and vice versa. You may delete all entries in a second. You may organize your phonebook in groups and personalize each one with different ring tones and pictures.

Call Service: Your phone automatically saves a record for your latest calls. You may redial the number in the record, store it in the phonebook and send messages. You may delete one entry or all entries in the record in a second. You may choose to let the phone keep records automatically and monitor the GPRS data flow.

Text Message: You may store as many as 500 text messages in your phone. You may personalize the save directory priority; your phone supports EMS upgraded messages and pre-defined messages. You may monitor the free spaces in the phone and the SIM Card. You may extract the phone number directly from a message. Your phone supports voice mails and broadcasts.

Multimedia Message: Your phone supports multimedia message service. You may send and receive multimedia messages such as text, image and sound. You may send messages of the pictures taken by the camera function.

Audio Player: You may use your phone as an Audio Player. It supports music files in formats such as *.wav, *.amr, *.mid, *.imy.etc.

Sound Recorder: You may use your phone to record your calls and other sounds. You may also start the recorder by selecting the Media Center option and then select Recorder. The recorded sound can be set as ring tones. The time span of the recording is determined by the free space of the phone.

Camera: You may use your phone as a camera. The size of pictures, exposure and AE Meter are up to you. Options are available such as single picture and multiple pictures.

Profiles: You may customize the phone tones for different events and environments.

Tools: Your phone has practical functions such as Alarm Clock, Calculator, To Do List, Stopwatch and World Clock.

Settings: You may personalize your phone in system setup, call setup, network setup and security setup. You may set the time, date, speed dial, restricted number, etc.

WAP: Your phone supports WAP service. You may use the WAP browser to surf the Internet.

Fun and Games: Your phone has interesting games. You can enjoy by playing the games such as Copter, UFO, Panda.

Input Systems: Your phone has multiple input systems which help you conveniently input English letters, Hindi letters, Digits, and Symbols.

Hot Key Functions

Functions	Hot Keys	Phone Status
Power on	Long press End Key	Power off
Power off	Long press End Key	Power on
Menu	Press Left Soft Key	Standby mode
Phonebook	Press Right Soft Key	Standby mode
Fun Spice	Press Up Key	Standby mode
[Settings] / [Shortcuts]	Press Down Key	Standby mode
Audio Player	Press OK Key	Standby mode
Voice mail	Long press 1	Standby mode and it will display (Voice Mailbox is empty)
[Messages]/[Write Messages]	Press Left Key	Standby mode
[Camera]	Press Right Key	Standby mode
[Call History]/ [Dialed Calls]	Press Send Key	Standby mode
Disable/Enable Rings	Long press # Key	Standby mode
Dial a Number	Press Number Keys	Standby mode

Making a Call

When the brand name of your network service provider is displayed on your screen, you may make or answer calls. The signal strength is indicated on the top left of the display.

The signal may be blocked by impediments. Rapid moving may weaken the signal.

3.1.1 Making a Domestic Call

Enter the phone number by using **Number Keys**, then press **Send Key** to make a call. If you wish to change the phone number, press **Right Soft Key** to clear the numbers. **After pressing Send Key**, an animation is displayed. Press **End Key** to end the call.

For example:

Area Code Phone Number Send Key

3.1.2 Calling a Fixed Telephone

Some fixed phones may not **connect** directly. Firstly, enter Area code then enter exchange number, press **“*”** **Key** several times until you see a “P” on display, and at last enter extension, press send key.

For example :

Area Code Exchange Number P Extension Send Key

3.1.3 Making an International Call

If you wish to make an international call, you may first press ***** **Key** several times until you see a “+” on display. Then dial the number like this:

+ Country Code Complete Phone Number Send Key

The “+” should be followed by the country code and the complete phone number you wish to call. For example, the country code for Germany is 49, UK 44, and Sweden 46.

Like making an international call on a fixed telephone, the “0” before the area code is omitted.

For example, a call from out of India for Delhi is dialed like this:

+91 120 108

3.1.4 Calling a Recently Dialed Number

The calls that you made or answered recently are saved in Call Service. These phone numbers are categorized into **Dialed Calls**, **Received Calls** and **Missed Calls**. The numbers are listed sequentially. Old records may be deleted automatically when there is no room for new records.

Follow this procedure to check your records:

In standby mode, press **Send Key** to open records.

Any listed number can be dialed by pressing **Send Key**.

When a record is opened, press **OK** to check in detail, then press **Options** to select **Save** or **Delete**.

Making an Emergency Call

When a network service is available (check signal strength indicator on the top left of the display), you can make an **emergency Call**. If you are out of commercial service, the text **Emergency** appears on the display, which means you can make no calls except **Emergency Calls**. Even if a SIM Card is not available, you can make emergency call as long as there is a network service.

Answering a call

There are several different modes that you may choose to answer a call. Presumably you have to press **Send Key** or **Left Soft Key** to answer a call. However, you may also choose the **Cover Answer mode**, in which you may simply unfold the phone and answer a call directly. Or you may choose the **Any key Answer** mode, in which you may press any key except **End Key** & **Right Soft Key** to answer a call.

Ending or Rejecting a Call

When there is a call which you do not wish to answer, press **End Key** to reject it.

You may press **End Key** to end a call.

You may press **End Key** to stop dialing a number.

Phonebook

In standby mode, you may access **Phonebook** by pressing **Right Soft Key**. Your phone arranges your phonebook in the order of names. You may store such information as names, phone and fax numbers, company names, email addresses and personalized pictures, rings and groups in your phonebook.

Note: Your phone has an accommodation of 500 entries. The accommodation of your SIM Card is determined by your SIM Card provider.

You may browse the phonebook and select an entry by using **Up Key** or **Down Key**. You may press **Left Soft Key** or **OK Key** to select from the options:

View: Check out the detailed information about the selected entry. You may press **Up Key** and **Down Key** to browse the information. You may press **Left Soft Key** to preview the personalized picture if it is set.

Edit: Edit the selected entry.

New Message: Send the selected number a SMS or a MMS.

Call: You may dial the number. If the entry selected contains more than one number, you will be provided with a list of numbers. You can select a number from the list and press **OK Key** to dial.

Search Contact: Search for entries by name. In Phonebook, Browse mode, press **Right Soft Key** to return to the menu of last level.

Add New Entry: Follow this procedure to add new entries to the phonebook (either stored in the phone or the SIM Card).

Copy: Copy the selected entry to your phone or the SIM Card.

Multi operation: Multiple entries can be marked and then deleted/ copied/ moved to the SIM card or the phone.

Send Vcard: You can send the entry to other users by SMS or MMS, or store it in your phone.

Manage Phonebook: You may monitor Preferred Storage, Caller Group, Owner Number, Vcard Manage and Memory status here.

Preferred Storage: You can set default storage position of phone numbers.

SIM: Select this option, when storage location is to be selected for a new contact person, the cursor is on **To SIM** by default.

Phone: Select this option, when storage location is to be selected for a new contact person, the cursor is on **To Phone** by default.

Caller Group: There are 5 default groups in the group list, and groups can be added. Press **OK Key** to enter detail content interface of the group where the cursor is located. You can edit group name, group ringtone, group picture, and add/delete group members.

Note: Members of a caller group are only limited to entries on the mobile phone.

Owner Number: You can edit your own number of SIM card. Any changes made using this function will not affect the actual user number of your SIM card.

Vcard Manage: You decide whether to display phone and fax numbers, company names, email addresses and associate pictures, rings and groups in phonebook browse mode. You can also edit and send your vcard.

Memory status: You can see the status of the memory utilizations of your phone and the SIM Card here.

Delete: Delete the selected entry.

Camera

In standby mode, press **Right Key** to access camera preview mode. After adjustment, press **OK Key** to take a picture. Press **Left Soft Key** to save the picture into your **Photos**. You may browse your pictures in **[Camera]/[Photos]**.

Call History

Your phone automatically saves record for your **Missed Calls, Received Calls, Dialed Calls, Call Time, Call cost**, etc.

Call Setting

When talking on the phone, you may access Call Setting by pressing **Left Soft Key**, or enable/disable the loudspeaker by pressing **Right Soft Key**.

The Call Setting menu can only be seen when you are talking on the phone. Additionally, functions such as Call Waiting, Call holding and Call Meeting are available but it is up to your network service provider. These are the options in the Call Setting menu:

Hold/ Retrieve

Pause and resume the present call.

Swap *

Swap between held calls.

End

End the present call.

New Call

Dial a new phone number.

Phonebook

Browse the phonebook.

Messages

Access the message menu.

Sound Recorder

Record the present call.

Mute

When it is on, your voice will not be sent.

DTMF

Follow the guiding texts.

Conference*

Access the Call Meeting function. You may choose to talk to any single one, any group or all at the meeting.

Note: The options with a “*” are available under certain circumstances. For example, “swap” is highlighted only when you are talking to two or more users. In addition, the call Meeting function is available by subscription.

4 Function Menus

Usage of Function Menus

4.1.1 Quick Selection

Generally, menus and options are numbered. You may quickly select an option by entering its number.

In standby mode, press **Left Soft Key** to access the main menu, and press **Up key** or **Down Key** to browse.

Enter the number of the option that you wish to select and access the option. For example, when "4" is pressed in main menu mode, you access the Settings mode.

4.1.2 Quit a Menu

In menu mode, you may press **Right Soft Key** to quit the menu, or press **End Key** to quit to standby mode.

Menu Tree

Here is the menu tree of your phone:

1 Phone Book

2 Message

2-1 Write Message

2-2 Inbox

2-3 Outbox

2-4 Sent

2-5 Drafts

2-6 Templates

2-7 Voice Mail Box

- 2-8 Message Settings
- 2-9 Scheduled SMS
- 2-10 Broadcast Message

3 Call History

- 3-1 Missed Calls
- 3-2 Received Calls
- 3-3 Dialed Calls
- 3-4 Delete Call Log
 - 3-4-1 Missed Calls
 - 3-4-2 Received Calls
 - 3-4-3 Dialed Calls
 - 3-4-4 All Calls
- 3-5 Call Time
- 3-6 Call Cost
- 3-7 SMS Counter
- 3-8 GPRS Counter

4 Settings

- 4-1 Display Characteristic

- 4-1-1 Wallpaper
- 4-1-2 Power On Display
- 4-1-3 Power Off Display
- 4-1-4 Show Date and Time
- 4-1-5 Show Owner Number
- 4-1-6 LCD Backlight
- 4-2 System Setup
 - 4-2-1 Time and Date
 - 4-2-2 Language
 - 4-2-3 Set Home City
 - 4-2-4 Preferred Input Methods
 - 4-2-5 Schedule Power On/Off
 - 4-2-6 Shortcuts
 - 4-2-7 Dedicated Key
 - 4-2-8 Flight Mode
- 4-3 Call Setup
 - 4-3-1 Call Divert
 - 4-3-2 Call Time Reminder
 - 4-3-3 Call Time Display
 - 4-3-4 Reply SMS After Rejecting

- 4-3-5 Auto Redial
- 4-3-6 Call Waiting
- 4-3-7 Call Barring
- 4-3-8 Caller ID
- 4-3-9 Speed Dial
- 4-3-10 Call Filter
- 4-4 Security Setup
 - 4-4-1 Privacy Lock
 - 4-4-2 SIM Lock
 - 4-4-3 Phone Lock
 - 4-4-4 Change Password
 - 4-4-5 Panic Button
- 4-5 Network setup
 - 4-5-1 Network Selection
 - 4-5-2 Preferred Networks
 - 4-5-3 GPRS Connection
- 4-6 Restore Factory Settings

5 Media Center

- 5-1 Audio Player

- 5-2 Video Player
- 5-3 Camera
- 5-4 File Manager
- 5-5 Sound Recorder
- 5-6 FM Radio
- 5-7 Schedule FM Record
- 5-8 E-Book Reader

6 User Profiles

- 6-1 General
- 6-2 Meeting
- 6-3 Outdoor
- 6-4 Indoor
- 6-5 Headset
- 6-6 Timed Profiles

7 Organizer

- 7-1 Alarm
- 7-2 Calendar
- 7-3 To Do List

- 7-4 Stopwatch
- 7-5 world Clock
- 7-6 Calculator
- 7-7 Unit Converter
- 7-8 Currency Converter
- 7-9 Anniversary

8 Services

- 8-1 STK*
- 8-2 WAP
 - 8-2-1 Homepage
 - 8-2-2 Bookmarks
 - 8-2-3 Recent Pages
 - 8-2-4 Enter Address
 - 8-2-5 Settings
- 8-3 Date Account
 - 8-3-1 GSM Data
 - 8-3-2 GPRS

9 Fun Spice

9-1 Spice Gang

9-2 Reuters

9-2-1 News

9-2-2 Currency

9-2-3 Weather

9-2-4 Free Alerts

9-3 Ibibo

9-3-1 Free SMS

9-3-2 Cricket Update

9-3-3 Cool Stuff

9-3-4 Make New Friends

9-4 Voice Zone

9-4-1 Bhakti Sangeet

9-4-2 Sangeet

9-4-3 Suno Sunao

9-5 M Gurujee

9-5-1 Sample Papers

9-5-2 Education Search

9-5-3 Job Search

- 9-5-4 Calculator
- 9-6 Email2SMS
- 9-7 Dazzle Ringtone
- 9-8 Fun & Games
 - 9-8-1 Copter
 - 9-8-2 Panda
 - 9-8-3 UFO
 - 9-8-4 Games Settings
- 9-9 Others
 - 9-9-1 Mobile Tracker
 - 9-9-2 Call Filter
 - 9-9-3 Privacy Lock
 - 9-9-4 Panic Button

Note: The options with a “*” are available under certain circumstances, the content of “STK” in the Services menu may vary depending on network service providers.

Messages

In main menu mode, press **Left Key** or **Right key** to browse and select **“Messages”**. In the Message menu you will see such options:

4.1.3 Write Message

You may send and receive SMS and MMS via a message service center.

Write SMS

Your phone supports upgraded EMS. You may add pictures, animations, tones and sounds to a text message.

Select the **Write SMS** option and your phone is ready for a new message. Press **Left Soft Key** to access **Options**:

Done: When a new message is created, press to select from 'Send Only, Save and Send, Save to Drafts, Send to Many, Send by Groups'.

If you select **Send Only**, you will be requested a target number. You may either key in the number or press **Left Soft Key** and search for a number from the phonebook. If you select **Save and Send**, the message will be saved to **Sent** box after being sent. If you select **Save to Drafts**, the message will be saved to **Drafts** box and will not be sent. If you select **Send to Many**, you may send the message to several friends at the same time. If you select **Send by Groups**, you may send the message to all members of a group.

Use Templates: Select and add preset short message content.

Insert Object: You can add any object to your message:

Picture: Your phone embodies 8 preset pictures.

My Picture: Pictures that you have received from previous EMS.

Predefined Animation: Add animation where you want them.

My Animation: Animations that you have received from previous EMS.

Melody: Your phone embodies tones in the format of Melody.

My Melody: Tones in the format of Melody that you have received from previous EMS.

Predefined Sound: Your phone embodies chords for different occasions.

Format Text: You may set the Format of your text message:

Text Size: You are provided with options of **Large, Medium** and **Small** text size for English letters.

Text Style: You may select from **Bold, Italics, Underline** and **Strikethrough**.

Alignment: You may select from **Automatic, Left, Center** and **Right**.

New Paragraph: You can start a new paragraph.

Insert Number: Select and add a contact number in the phonebook.

Insert Contact: Select and add a contact name in the phonebook.

Insert Bookmark: Select and add a bookmark address in the Reuters.

Input Method: You can select input methods for text input. The menu provides a number of input methods to choose from.

Note: Some areas and cities only support text messages that contain no more than 160 English letters. The pictures, smileys

and animations can be only received by mobile phones that support EMS.

Write MMS

Multimedia Message Service (MMS) supports multimedia functions such as texts, pictures and sounds.

Press **OK Key** to access **Write MMS** menu and you may edit a multimedia message. You may fill the **To, CC** (copy the message to someone) and **BCC** (copy the message to someone without others knowing it) blanks. Both phone numbers and email addresses can be recipients, and you may send the message to multiple **recipients**. You may also edit the **Subject** of the multimedia message.

After the above settings, you may start editing the content of the multimedia message. You can also edit the content first and the settings later. Any objects can be added into a multimedia message. While editing the content, press **Left Soft Key** to access **Options**:

Done: Finish MMS content edit.

Input Method: Select input method for text input. You can also switch input methods by pressing **# Key** in an edit interface.

Add Picture: Add Picture from File Manager as content of the MMS.

Add Audio: Add an audio file from File Manager as content of the MMS.

Add Video: Add a video file from File Manager as content of the MMS.

Add Attachment: Add an attachment from File Manager as content of the MMS.

Add Slide Before: Add a new empty slide before current page.

Add Slide After: Add a new empty slide after current page.

Add Bookmark Text: Add a bookmark from **Bookmarks** as content of the MMS.

Preview: Preview the current MMS.

Slide Timing: Set the time to be played for the MMS. The time is between **1 and 60s**. When the time exceeds the range, corresponding prompt will be given when saving the slide and the phone will return to edit interface.

Note: Operations in the Options menu may vary according to your operation.

Once the recipient and MMS content has been edited, press **Right Soft Key** in the MMS edit window to perform following operations:

Send Only: Send the MMS.

Save and Send: Send the MMS and save it to Sent.

Save to Drafts: Save current MMS to Drafts.

Save as Template: Save the edited MMS to Template-User Defined.

Send Options: You can set following options in the Send Options:

Validity period: You can select MMS valid period as Max, 1h, 6h, 12h, 1day, 1week with **Left / Right Key**.

Send report: Set whether network feedback is needed so that you can be informed of whether the message has been successfully sent to the recipient. You can select to Turn off or Turn on this function. This function depends on the network conditions.

Read report: Set whether network feedback is needed so that you can be informed of whether the message has been read by the recipient. You can select to Turn off or Turn on this function. When the functions is on, if the message has been successfully received by the recipient, the recipient will be asked by a pop-up dialogue box whether to send a read report. If the recipient agrees, you will receive a read report sent by the recipient's mobile phone. This function depends on the network conditions.

Priority: You can set MMS priority, including Normal, High and Low.

Exit: Exit the MMS edit window (there will a prompt whether to save the message.)

4.1.4 Inbox

SMS

In this menu, you can read short messages received.

press **OK Key** to enter reading incoming message window, you can press **Left / Right Key** to switch to previous message or next message. For a short message, you can see message content, phone number of the sender and arrival time.

Press **Left soft key** in read message window, you can select following functions:

Reply: Reply a SMS or a MMS to the number that sent you message.

Forward: Forward the message to others. You can send to one party, multiple parties or a group.

Edit: Edit the message.

Delete: Delete the message.

Delete One's SMS: Delete all messages sent by the sender of this message.

Delete All: Delete all messages in the Inbox.

Call: Dial the number of sender of the selected message.

Use number: Extract numbers and phone number of the sender from the short message. You can directly save the phone number in the phonebook or dial the number or send a message to the number.

Use URL: Extract URL information from the short message. You can link to the URL or add it in Bookmarks.

Advanced: You can see following options in the Advanced:

Copy to SIM: Copy the message to the SIM card. (This option is for messages, saved in the mobile phone.)

Move to SIM: Move the message to the SIM card. (This option is for messages, saved in the mobile phone.)

Copy to Phone: Copy the message to mobile phone. (This option is for messages, saved in the SIM card.)

Move to Phone: Move the message to mobile phone. (This option is for messages, saved in the SIM card.)

Copy All Text Messages: If **From SIM card** is selected, all short messages in the Inbox saved on the SIM card will be

copied to the mobile phone until the space of the mobile phone is full. If **From mobile phone** is selected, all short messages in the Inbox saved on the mobile phone will be copied to the SIM card until the space of the SIM card is full.

Move All Text Messages: If **From SIM card** is selected, all short messages in the Inbox saved on the SIM card will be moved to the mobile phone until the space of the mobile phone is full. If **From mobile phone** is selected, all short messages in the Inbox saved on the mobile phone will be moved to the SIM card until the space of the SIM card is full.

Note: The Options menu may vary considerably depending on storage location of the message.

MMS

In this menu, you can read multimedia messages received.

Select a multimedia message in the inbox and press **Left Soft Key** to enter next level operation function menu. Depending on the network condition, the multimedia message may not have been downloaded to your mobile phone, then you will see the download option, if the multimedia message has been downloaded to your mobile phone, then you will see the view operation option instead of download option:

View: Play the multimedia message.

Reply by SMS: Reply a short message to the number that sent you the message.

Reply: Reply a multimedia message to the number that sent you the message.

Reply All: Reply a multimedia message to the number that sent you the message and your own number.

Forward: Forward the multimedia message to others.

Edit: Edit multimedia message.

Delete: Delete the multimedia message.

Delete All: Delete all messages of the Inbox.

properties: View details of the MMS.

Save object: Save text, images, videos, attachments and audios to [My documents] folder.

Use Details: Save numbers, email address, web address and phone numbers in the message. For a phone number, you can save it in the phone book or dial the number; For an email address, you can write a message or save it in the phonebook; for a web address, you link to the address and save it in Bookmarks.

Auto Play: Auto Play the multimedia message.

Note: The Options menu may vary considerably according to the content of the message.

4.1.5 Outbox

You can view unsent messages in this option.

SMS

When a message is being read, press **Left Soft Key** to access **Options**:

Send: Send the present message.

Edit: Edit the present message.

Delete: Delete the present message.

Delete All: Delete all messages in the Outbox.

Use numbers: Extract numbers and phone number of the sender from the short message. You can directly save the phone number in the phonebook or dial the number or send a message to the number.

Use URL: Extract URL information from the short message. You can link to the URL or add it in Bookmarks.

Advanced: You can see following options in the Advanced:

Copy to SIM: Copy the message to the SIM card. (This option is for messages saved in the mobile phone.)

Move to SIM: Move the message to the SIM card. (This option is for messages saved in the mobile phone.)

Copy to Phone: Copy the message to mobile phone. (This option is for messages saved in the SIM card.)

Move to Phone: Move the message to mobile phone. (This option is for messages saved in the SIM card.)

Copy All Text Messages: If **From SIM card** is selected, all short messages in the Outbox saved on the SIM card will be copied to the mobile phone until the space of the mobile phone is full. If **From mobile phone** is selected, all short messages in the Inbox saved on the mobile phone will be copied to the SIM card until the space of the SIM card is full.

Move All Text Messages: If **From SIM card** is selected, all short messages in the Inbox saved on the SIM card will be moved to the mobile phone until the space of the mobile phone is full. If **From mobile phone** is selected, all short messages in the Inbox saved on the mobile phone will be moved to the SIM card until the space of the SIM card is full.

Note: The Options menu may vary considerably depending on storage location of the message.

MMS

Use Up Key or Down Key to browse and press Left Soft Key to access **Options**:

View: Play the multimedia message.

Send: Send the multimedia message to others.

Edit: Edit the multimedia message.

Delete: Delete the multimedia message.

Delete All: Delete all messages of the Outbox.

properties: View details of the MMS.

Save object: Save text, images, videos, attachments and audio to [File Manager] folder.

Use Details: Save numbers, email address, web address and phone numbers in the message. For a phone number, you can save it in the phone book or dial the number; For an email address, you can write a message or save it in the phonebook., For a web address, you link to the address and save it in Bookmarks.

Auto Play: Auto Play the multimedia message.

Note: The Options menu may vary according to the content of the message.

4.1.6 Sent

You can view successfully sent messages in this option.

SMS

Press **Left soft key** in read message window, you can select following functions:

Forward: Forward the message to others. You can send to one party, multiple parties or a group.

Edit: Edit the message.

Delete: Delete the message.

Delete All: Delete all messages in the Inbox.

Use numbers: Extract numbers and phone number of the sender from the short message. You can directly save the phone number in the phonebook or dial the number or send a message to the number.

Use URL: Extract URL information from the short message. You can link to the URL or add it in Bookmarks.

Advanced: You can see following options in the Advanced:

Copy to SIM: Copy the message to the SIM card. (This option is for messages saved in the mobile phone.)

Move to SIM: Move the message to the SIM card. (This option is for messages saved in the mobile phone.)

Copy to Phone: Copy the message to mobile phone. (This option is for messages saved in the SIM card.)

Move to Phone: Move the message to mobile phone. (This option is for messages saved in the SIM card.)

Copy All Text Messages: If **From SIM card** is selected, all short messages in the Inbox saved on the SIM card will be copied to the mobile phone until the space of the mobile phone is full. If **From mobile phone** is selected, all short messages in the Inbox saved on the mobile phone will be copied to the SIM card until the space of the SIM card is full.

Move All Text Messages: If **From SIM card** is selected, all short messages in the Inbox saved on the SIM card will be moved to the mobile phone until the space of the mobile phone is full. If **From mobile phone** is selected, all short messages in the Inbox saved on the mobile phone will be moved to the SIM card until the space of the SIM card is full.

Note: The Options menu may vary considerably depending on storage location of the message.

MMS

Use Up Key or Down Key to browse and press Left Soft Key to access **Options**:

View: Play the multimedia message.

Forward: Forward the multimedia message to others.

Edit: Edit the multimedia message.

Delete: Delete the multimedia message.

Delete All: Delete all messages of the Outbox.

Save as Template: Save the edited MMS to Template-User Defined.

properties: View details of the MMS.

Save object: Save text, images, videos, attachments and audio to [My documents] folder.

Use Details: Save numbers, email address, web address and phone numbers in the message. For a phone number, you can save it in the phone book or dial the number; For an email address, you can write a message or save it in the phonebook; for a web address, you link to the address and save it in Bookmarks.

Auto Play: Auto Play the multimedia message.

Note: The Options menu may vary considerably according to the content of the message.

The **Draftbox** contains unfinished messages, which may be re-edited and sent.

SMS

Press **Left soft key** in read message window, you can select following functions:

Send: Send the present message.

Edit: Edit the present message.

Delete: Delete the present message.

Delete All: Delete all messages in the Outbox.

Use numbers: Extract numbers and phone number of the sender from the short message. You can directly save the phone number in the phonebook or dial the number or send a message to the number.

Use URL: Extract URL information from the short message. You can link to the URL or add it in Bookmarks.

Advanced: You can see following options in the Advanced:

Copy to SIM: Copy the message to the SIM card. (This option is for messages saved in the mobile phone.)

Move to SIM: Move the message to the SIM card. (This option is for messages saved in the mobile phone.)

Copy to Phone: Copy the message to mobile phone. (This option is for messages saved in the SIM card.)

Move to Phone: Move the message to mobile phone. (This option is for messages saved in the SIM card.)

Copy All Text Messages: If **From SIM card** is selected, all short messages in the Inbox saved on the SIM card will be copied to the mobile phone until the space of the mobile phone is full. If **From mobile phone** is selected, all short messages in the Inbox saved on the mobile phone will be copied to the SIM card until the space of the SIM card is full.

Move All Text Messages: If **From SIM card** is selected, all short messages in the Inbox saved on the SIM card will be moved to the mobile phone until the space of the mobile phone is full. If **From mobile phone** is selected, all short messages in the Inbox saved on the mobile phone will be moved to the SIM card until the space of the SIM card is full.

Note: The Options menu may vary considerably depending on storage location of the message.

MMS

Use Up Key or Down Key to browse and press **Left Soft Key** to access **Options**:

View: Play the multimedia message.

Send: Send the MMS.

Edit: Edit the multimedia message.

Delete: Delete the multimedia message.

Delete All: Delete all messages of the Outbox.

Save as Template: Save the edited MMS to Template-User Defined.

properties: View details of the MMS.

Save object: Save text, images, videos, attachments and audio to [My documents] folder.

Use Details: Save numbers, email address, web address and phone numbers in the message. For a phone number, you can save it in the phone book or dial the number; For an email address, you can write a message or save it in the phonebook; for a web address, you link to the address and save it in Bookmarks.

Auto Play: Auto Play the multimedia message.

Note: The Options menu may vary considerably according to the content of the message.

4.1.8 Templates

10 commonly used short messages , 2 commonly used multimedia messages and user defined messages are provided for your daily use.

SMS templates: set contents of message templates so that they can be inserted directly while you are editing a short message. Press **Left soft key** to enter the option window of the message templates. You can edit or delete the content of the short message and create a new short message from the template.

SMS templates:

User defined: When customized templates exist, press Left soft key to enter the option window of the message. You can perform operations such as view, create new message from the template, delete, delete all, details, etc.

Preset: Press Left soft key to enter the option window of the message template. You can perform operations such as view, create new message from the template, details, etc.

4.1.9 Voice Mail Box

When it is inconvenient for you to answer an incoming call, your phone can automatically transfer the incoming call to the Voice Mailbox number, which will allow the caller to leave a voice mail for you. Firstly **edit** the number for Voice Mail (the number is available from the Service Operator.) Next, choose **Connect to Voice Mail**, and the phone will dial the number of the mailbox that you have setup.

Hold down **1 key** when the phone is idle to directly dial the preset voice mailbox number.

Note: The voice mail feature requires network support. For more information on voice mail, please contact your local network service operator.

4.1.10 Message Settings

In this option, you can select settings related to SMS and MMS.

SMS Settings

Profile Setting: Set SMS center number of the selected SIM card.

Profile name: Set the name of the profile.

SMS center number: Set SMS center number, which can be obtained from your Network Service Operator.

Valid Period: Set the time that your short message will be saved in short message center of the Network Service Operator, options include: 1h, 6h, 12h, 1 day, 3 days, 1 week and Maximum.

Message Type: Set your short message type, options include Text, Fax, Page and E-mail.

Note: Not all networks support this function.

Common Setting: Set whether network feedback is needed so that you can be informed of whether the short message has

been sent to the mobile phone of the recipient successfully. This function depends on the network conditions.

Memory Status: You can check the number of short messages that have been stored and maximum storage capacity of the mobile phone and the selected SIM card.

Preferred Storage: Set the storage location of short message. It can be SIM card or mobile phone.

Preferred Connection:

SMS Filter: SMS filter function is used to block short messages sent from some numbers or receive short messages sent from some numbers only. If you have added a number to the blacklist, the SIM card you set will not receive short messages sent from this number; If you have added a number to the whitelist, the SIM card you set will only receive short messages sent from this number.

MMS Settings

Compose: You can select following functions.

Creation Mode: You can select Free or Restricted.

Picture Resize: If you use this function, image can be resized to 160*120, 320*240 or you can select off.

Auto Signature: You can turn on or turn off the auto signature function and edit the content of the auto signature. When you send a multimedia message, the auto signature will be added to the multimedia message automatically.

Send: You can select following functions.

Validity period: You can select maximum value, 1h, 6h, 12h or 1 week with Left/Right key.

Send report: Set whether network feedback is needed so that you can be informed of whether the multimedia message has been successfully sent to the recipient. You can select to Turn off or Turn on this function. This function depends on the network conditions.

Read report: Set whether network feedback is needed so that you can be informed of whether the message has been read by the recipient. You can select to Turn off or Turn on this function. When the functions is on, if the message has been successfully received by the recipient, the recipient will be asked by a pop-up dialogue box whether to send a read report. If the recipient agrees, you will receive a read report sent by the recipient's mobile phone. This function depends on the network conditions.

Priority: You can set MMS priority, including Normal, High and Low.

Slide Timing: You can set the playing time of a multimedia message slide. The time is between **1 and 60s**. When the time exceeds the range, corresponding prompt will be given when saving the slide and the phone will return to edit interface.

Delivery time: You can set delivery time of the multimedia message, including Immediate, In one hour, In 12 hours and In 24 hours.

Retrieve: You can select following functions.

Home network: You can set the home network to retrieve multimedia messages, options include: Immediate, Rejected and Delayed.

Roaming: You can set the roaming network to retrieve multimedia messages, options include: As Home, Delayed and Rejected.

Read Report: You can set whether to send a read report to the message sender for the multimedia message received, options include: On request, Send and Never Send.

Send Report: You can select whether delivery report will be sent.

Filter: You can select the following functions.

Anonymous: You can set to allow or reject messages from anonymous senders.

Advertisement: You can set to allow or reject advertisement message.

Server Profile: You can set server profiles.

Rename Profile: Rename the profile.

Homepage: Set the MMS center server address. The default homepage is <http://mms1.hutchworld.co.in/mms/>.

Data Account: Set data account, options: GSM data or GPRS.

Connection Type: You can select connection type: WAP or HTTP.

Username: You can edit user name.

Password: You can edit password.

Memory status: You can view status for multimedia messages and the remaining space size.

4.1.11 Scheduled SMS

You can set a scheduled SMS to others.

You may add new scheduled SMS by selecting **Add**. You may set the Date, Time, Content and Recipient by pressing Up Key and Down Key.

Date: Set the date.

Time: Set the time when the schedule SMS should be sent.

Content: Create a new message.

Recipient: Select and add a contact person number in the phonebook.

When the scheduled message is created, press **Done** to save it, and it will send the scheduled time.

4.1.12 Broadcast Message

CB messages are messages sent publicly by your network service operator. With broadcast messages, you can get information on various subjects, such as on weather, taxis or hospitals. For more information on subjects available, please contact your local network service operator.

Enter the CB message sub-menu and you will be able to see 4 options:

Receive Mode: Turn on or turn off the receiving of broadcast messages.

Read Message: Read the received broadcast message.

Language: You can choose whether to receive broadcast messages in all languages.

Channel Setting: you can select following functions.

Select: Turn on/off the spare channel to filter out unnecessary CB messages.

Add: Add a new broadcast channel and set up the channel title as well as the channel ID.

Edit: Modify the settings of the current channel.

Delete: Delete the selected BROADCAST MESSAGE spare channel.

Note: The availability of this service depends on your network service provider.

Dear Customer, Congratulations for being a proud owner of a SPICE Mobile phone.

With a view to facilitate search and discovery of mobile content, SPICE Mobile has introduced an SMS short code which is 56300.

Just type **SPHELP** ("SP" here stands for SPICE) and send the SMS to discover content menu available.

Alternatively, listed below are some of the exciting infotainment services which are readily available on 56300. So what are you waiting for! just go ahead and Spice Up your mobile.

- 1. SPJOKE:** Kick start your day in relaxed & light mood by receiving our jokes in your mobile through SPJOKE service. User type SPJOKE & send to 56300.
- 2. SPCRIC:** Know minute by minute Cricket score of your favorite teams through our Live SPCRIC service. User type SPCRIC & send to 56300.
- 3. SPNEWS:** Be the first to know what is happening all around the world through our SPNEWS service. User type SPNEWS & send to 56300.
- 4. SPOSHO:** Get Osho Quotes & change your existing mind block & get guidance to achieve inner peace through our SPOSHO service. User type SPOSHO & send to 56300.
- 5. SPWORD:** Carry dictionary in your mobile & get word powered daily through our SPWORD service. User type SPWORD & send to 56300.
- 6. SPHORO:** Janiye apne grahon ki dasha through our SPHORO Service. User type SPHORO & send to 56300.
- 7. SPEXAM:** Get tips on how to attempt your test questions and score more through our SPEXAM service. User type

SPEXAM & send to 56300.

8. SPGK: Know interesting facts of this world & enhance your knowledge through our SPGK Service. User type SPGK & send to 56300.

9. SPPAGE3: know all the Bollywood happenings through our SPPAGE3 service. User type SPPAGE3 & send to 56300.

Call History

Press **Right Key** or **Left Key** to browse the main menu, and select **Call History** by pressing **Left Soft Key** and you are provided with 8 sub-menus.

4.1.13 Missed Calls

You may check the call numbers and the callers' names (when the number is in the phonebook) that you have missed in **Missed Calls**. Press **Left Soft Key** to check detailed information of the highlighted call, including the date, time, the caller's name, number and times.

While checking the detail, press **Left Soft Key** to access **Options**:

Delete: Delete the selected phone number.

Save to Phonebook: Save the selected phone number to the phonebook. Storage location should be selected first.

Call: Dial the selected missed call. You can also press send key in the missed call list to directly dial this number.

Edit: Edit the selected phone number.

New Message: Send a SMS or a MMS to the selected phone number.

Add to Black List: Add the selected phone number To Blacklist.

Add to White List: Add the selected phone number To Whitelist.

Add to SMS of Black List: Add the selected phone number to SMS of Blacklist.

Add to SMS of White List: Add the selected phone number To Whitelist of SMS.

4.1.14 Received Calls

You may check your Received numbers in **Received Calls**. Press **Left Soft Key** to check detailed information of the highlighted number, including the date and time and the times that the call is made.

While checking the detail, press **Left Soft Key** to access **Options**, which are the same as in **Missed Calls**.

4.1.15 Dialed Calls

You may check the calls that you have Dialed in **Dialed Calls**. Press **Left Soft Key** to check detailed information of the highlighted call, including the date, time, the caller's number and times.

While checking the detail, press **Left Soft Key** to access **Options**, which are the same as in **Missed Calls**.

4.1.16 Delete Call Log

Press **Left Soft Key** to access the **Delete Call Log** menu. You may select to delete such records as **Missed Calls**, **Received Calls**, **Dialed Calls** and **All Calls**.

4.1.17 Call Time

You may check your call time records in the **Call Time** menu which can be accessed by pressing **Left Soft Key**.

Last Call Time: Your phone will display the time of your last call.

Total Received: Your phone will display the total time of all your received calls.

Total Sent: Your phone will display the total time of all your sent calls.

Reset All Time: ReSet all the above timers.

4.1.18 Call Cost

You may check your call cost in the **Call Cost** menu which can be accessed by pressing **Left Soft Key**.

Last Call Cost: Your phone will display the cost of your last call.

Total Cost: Your phone will display the total cost of all your calls.

Reset Cost: Reset the charge records after correctly keying in the PIN2 code.

Max Cost: Your phone will display your restriction on the call cost. "0" means "no restriction". Press **Left Soft Key** to set the restriction.

Price Per Unit: Your phone will display the price and unit. Press **Left Soft Key** to set the price and unit.

Note: The availability of this function depends on your network service provider. You are requested to enter the PIN2 code before setting Price Per Unit and Max Cost. Please check with your network service provider for the PIN2 code.

4.1.19 SMS Counter

You may check the number of your sent and received messages in the **SMS Counter** menu.

4.1.20 GPRS Counter

You may check your GPRS data flows, including **Last Sent**, **Last Received**, **All Sent** and **All Received** (measured in Byte). You may also **Reset** these counters.

Media Center

Here you can use entertainment functions here, including Audio Player, Video Player, Camera, etc.

4.1.21 Audio Player

You can use this function to enjoy music. Enter the audio player interface, press **Up** and **Down key** to adjust music volume, press **OK key** to play or pause current music, press **Left key** or **Right key** to play previous track or next track.

In the audio player interface, press **Left soft key** to enter track list, and then press **Option**, following functions are available:

Play: Play current music.

Details: View details of current music.

Add to Rings: Add current music to ringtone library. While setting ringtone of incoming call, message or alarm clock in the User Profiles, you can select current music as ringtone.

Refresh List: Refresh track list, refresh all music files that can be recognized under the My Music folder on the memory card.

Settings: Press **OK key** to enter the menu, you can perform following operations:

You can set automatic playlist generation, shuffle mode, random mode, background play, etc.

Note: Do not play music at maximum volume for a long time so as to prevent damage to the speakers. Due to large number of music formats, some formats of music can not be played or have time/progress bar error. Please try best to use MP3 format music (MPEG1.0 layer 3, CBR code).

4.1.22 Video Player

You can use this function to enjoy a video file. Enter the video player interface, you can select a video file to play. Press **left soft key** to perform following functions:

Play: Enter the video play interface.

Forward: You can forward To MMS.

Rename: Rename the selected file.

Delete: Delete the selected file.

Delete All Files: Delete all files in the playlist.

Sort by: Select sort operation. You can select to sort current list by name, by type, by time or by size; you can also select None, i.e. do not sort.

4.1.23 Camera

This mobile phone provides a camera function. In order to better use the camera function of this mobile phone, please carefully read the instructions in this section.

Once you have entered this function, you can see the image captured by the camera.

OK key: Press OK key to take the image shown in the capture window.

Left soft key Option: Following functions are provided:

Photos: Enter the album to view photos.

Camera Settings: The mobile phone provides following setting functions:

EV: Adjust screen brightness in the menu.

AE Meter: Spot, Weight, Average, Auto are available in the menu.

Bandng: "50Hz" and "60 Hz" are available in the menu.

Delay Timer: 5s, 10s or 15s delay or off can be configured.

Continuous Shot: Single continuous shot, three continuous shot and five continuous shot mode or off are can be configured.

Image Settings: This mobile phone includes following settings:

Image Size: In this menu, three image sizes are available for choose, namely “128*104”, “352*288”.

Image Quality: In this menu, three image quality levels can be selected: Low, Normal and High.

White Balance: You can select Auto, Daylight, Tungsten, Fluorescent and Incandescence in the menu.

Scene Mode: You can select Auto and Night in the menu.

Effect Settings: This menu allows you to use special effect when taking photos, including Normal, Grayscale, Sepia, Sepia Green, Sepia Blue, Color Invert, Embossment and Sketch.

Restore to Default: Restore the camera settings to initial status.

4.1.24 File Manager

File Manager is used to manage multimedia information saved on the storage card. This function allows users to view current status of use of the mobile phone and the storage card as well as e-book, video, music and image files.

Enter File Manager, you can perform following operations on folders and files.

Select a file holder and press **Left soft key**, following operations can be performed:

Open: List directories and files under the root directory.

Create Folder: Create a new folder and edit the name of the folder.

Rename: Rename the selected folder.

Delete: Delete the selected folder.

Sort by: Select sort operation. You can select to sort current list by name, by type, by time or by size; you can also select None, i.e. do not sort.

Enter a file in File Manager and press **Left soft key**, following operations can be performed:

Play: This menu will only appear if the file is a music or video file supported by the mobile phone.

View: This option will only be seen if the file is an image file or text file supported by the mobile phone. .

Forward: Contents under this option vary accordingly for different file formats. For **image** files, options include: send To MMS and set To Wallpaper, To Power On Display, To Power Off Display and To PhoneBook; For **video** files, options include: send To MMS and set To PhoneBook, To Power On Display and To Power Off Display; For **music** files, options include: To MMS, and To User Profile. In specific conditions, you can operate according to prompt on the screen.

Note: While sending an image to MMS, if the image size exceeds the limit, the mobile phone will compress the image according to the screen size. If the compressed image does not exceed the limit, the image will be used for MMS.

Detail: Display modify date and size of the file.

Rename: Rename the selected file.

Copy: Copy the selected file to an existing folder or a newly created folder.

Move: Move the selected file to an existing folder or a newly created folder.

Delete: Delete the selected file.

Delete All Files: Delete all files under current directory.

Sort by: Select sort operation. You can select to sort current list by name, by type, by time or by size; you can also select None, i.e. do not sort.

Note: Depending on file type and compatibility of the mobile phone to support that file, options above may not appear in option menu. .

4.1.25 Sound Recorder

Enter sound file list and press **Left soft key**, following operations can be performed:

Record: Start new sound recording. Press **Left soft key** or **OK key** in the sound recorder to pause/resume sound recording and press **Right soft key** to stop sound recording and save the sound recorded.

Play: Play current sound file.

Append: For AMR files, you can append recorded sound to current sound file and save all sound recording content to current file. (WAV files do not have this option)

Rename: Rename current file selected.

Delete: Delete the file selected.

Delete All Files: Delete all files selected.

Settings: Set sound file format and audio quality.

Forward: You can send current image to MMS, or To User Profile. Success of the operation is related to factors such as capacity of MMS space or size of the sound file.

4.1.26 FM Radio

The quality of the radio broadcast depends on the coverage of the radio station in that particular area.

Enter the FM Radio interface, press **Up** and **Down key** to adjust volume, press **OK key** to play or stop radio, press **Left key** or **Right key** to tune by 0.1 Hz. Press and hold **Left key** or **Right key** to make the phone automatically adjust the frequency rapidly.

In the FM Radio interface, press Option, following functions are available:

Channel List: You can save 30 FM radio channel, and edit the channel name and Frequency.

Manual Input: You can Manual Input channel.

Preset Auto Search: When you choose Preset Auto Search, your phone will auto search channel, and save them.

Settings: Press **OK key** to enter the menu, you can perform following operations: You can set Background and Loud Speaker.

Record: You can record your favourite programs.

Append: You can append recorded sound to current sound file and save all sound recording content to current file.

File List: Display sound file list.

4.1.27 Schedule FM Record

After accessing the schedule FM record menu, select a schedule FM record in the list, you can set on/off, time, Repeat, Channel Settings and Record Settings of the schedule FM record.

In Channel Settings, you can select Channel List or Manual Input to set channel. In Record Settings, you can edit Record Format, Audio quality and Record File.

4.1.28 E-Book Reader

This mobile phone provides E-book function, which enables users to read e-books in TXT format. In the E-book list, press **Left soft key**, you can perform following operations:

Open E-Book: Open the selected e-book.

Clean Up Bookshelf: Clearup the e-book.

Global Settings: You can set Font Style, Font Size and Background Color (available in full screen mode) of all e-books;

You can set to turn over by lines, turn pages automatically, turn-page speed, enable full screen and encoding method.

Book Info. : View details of the selected e-book.

Delete: Delete the selected e-book.

Delete All Files: Delete all e-books.

Sort by: Select sort operation. You can select to sort current list by name, by type, by time or by size, you can also select None, i.e. do not sort.

Apply Global Settings: Open and display the e-book according to Global Settings.

Help: View help content, which may help you better use functions of the e-book.

In e-book read interface, press **[Option] soft key** to perform following operations:

Find: You can find content you need in an e-book.

Jump to: You can jump to designated page by setting jump page and percentage.

Go to Bookmark: Select a bookmark in the bookmark list to enter the bookmark page.

Add Bookmark: Add the page displayed in the screen as bookmark, and the name of the bookmark can be edited.

Delete Bookmark: Delete the bookmark selected in the bookmark list.

Book Info.: View details of the bookmark selected.

Settings: You can set Font Style, Font Color and Background Color (available in full screen mode) of current e-books; You can set to turn over by lines, turn pages automatically, turn-page speed, enable full screen and encoding method.

Apply Global Settings: Open and display the e-book according to Global Settings.

Help: View help content, which may help you better use functions of the e-book.

Close: Exit e-book.

Settings

You may browse the main menu by pressing **Up Key** or **Down Key**, and access **Settings** by pressing **Left Soft Key**.

4.1.29 Display Characteristic

After accessing **Display Characteristic**, you will see the following options:

Wallpaper

You can modify the background image displayed in standby mode. The image can be selected from images in the mobile phone (including simulated clocks and theme images) or from File Manager via User Defined.

Note: When the wallpaper is set to "simulated clocks", the standby interface can not display information such as the name of current track and own number.

Power On Display

This function modifies the power-on display. You can select from 7 animations in the mobile phone.

Power Off Display

This function modifies the power-off display. You can select from 7 animations in the mobile phone.

Show Date and Time

You can select the style of standby screen and whether time+date are displayed.

Show Owner Number

You can select to turn on/off this function. Before turning on this function, the own number needs to be setup in the phonebook.

LCD Backlight

You can modify brightness and duration of background light.

4.1.30 System Setup

After accessing **System Setup**, you will see the following options:

Time and Date

You may set the time and date of your phone here:

Set Time/Date: You may set the time here in the present format.

Set Format: You may choose from the 12-hour and 24-hour time formats and the day/month/year, month/day/year and year/month/day formats.

Language

You may set the display language of your phone to **English** or **Hindi**.

Set Home City

You can select a city according to time zone.

Preferred Input Methods

You may choose from the input modes in your phone as the default input mode.

Schedule Power On/Off

You can set up to 4 schedule power-on or power-off times. For each schedule time, following settings can be made:

Status: Turn on or turn off the schedule event.

Edit Power On/Off: Select the schedule type as power-on or power-off.

Time: Use number key to enter schedule time.

Shortcuts

Modify functions in shortcut menu of Down key on the standby interface.

Dedicated Key

Modify dedicated functions of Up, Down, Left and Right key on the standby interface.

Flight Mode

When this function is enabled, network related functions in the mobile phone are restricted. For example, you can not dial/ answer calls or receive/ send messages, but multimedia entertainment functions such as MP3, video and camera can be used.

4.1.31 Call Setup

You are provided with such options in **Call Setup**.

Call Divert

Call Divert service allows you to divert your calls to another number upon your request. You may choose whether to enable or disable this function. The availability of this function depends on your network service provider. Please check with your network service provider for further information.

This function includes: Divert All Voice Calls, Divert If Unreachable, Divert If No Answer, Divert If Busy and Divert All Date. You are further provided in each selection with such options as:

Activate: Set the target number of the divert.

Diactivate: Disable this function.

Query Status: Check the status of this function.

After all these settings, you may disable this function when you do not need it by selecting **Cancel All Divert**.

Call Time Reminder

You can set remind time according to following procedures:

Press **Up key** or **Down key** to select Single or Periodic, then press Ok soft key.

Enter a number with the range of reminding and press Ok soft key.

You can also press Off to cancel this function.

Call Time Display

You can turn on/off this function.

Reply SMS After Rejecting

You can turn on/off this function.

Auto Redial

Set to redial the number after a certain delay when a dialed call is not put through. When the setting is cancelled, the number will be redialed.

Note: The mobile phone will automatically determine the need for redial according to the network conditions and the state of the other side.

Call Waiting

If this function is enabled, you will be notified if you are called by another user when you are on the phone. Please check with your network service provider for further information.

Activate: Enable this function.

Deactivate: Disable this function.

Query Status: Check the status of this function.

Call Barring

You may enhance your security by call barring. The availability of this function depends on your network service provider. Please check with your network service provider for further information. Your network service provider may provide you with a four-digit Network Password so that you may enable your restriction:

Outgoing Calls: You may **Activate** or **Deactivate** this feature to make All Calls, International Calls and International Calls except to home PLMN and Query Status of this function. If you restrict All Calls, you will not be able to make any calls except Emergency Call. You will be asked to set a password when **Activate** this function and asked for this password when **Deactivate** this function.

Incoming Calls: You may **Activate** or **Deactivate** answering All Calls and checking the status of this function. You may also enable or disable this function while Roaming.

Cancel All: You may cancel all your restrictions after correctly entering the password.

Change Password: You may change the original restricted numbers to new ones.

Caller ID

Set By Network: Use default settings of the network.

Hide ID: Your ID will not be displayed on the called party's phone.

Send ID: If the called party has enabled Caller ID display function, your number will be displayed on the called party's phone.

Speed Dial

You may Enable or Disable this function here. You may define the 2-9 keys(except 5 key) and dial these numbers quickly by long pressing these keys.

Call Filter

If you have activated Black List, you can not receive calls from numbers in the blacklist.

If you have activated White List, you can receive or answer calls only from certain call numbers in the whitelist.

4.1.32 Security Setup

You may prevent your phone from unauthorized use by setting security options:

Privacy Lock

The Privacy Lock can protect **Phone Book, Messages** and **Call History** from unauthorized use.

Access Privacy Lock and you will be provided with such options:

If the Privacy Lock is activated, you will be asked to enter the security code before accessing Phone Book, Messages and Call History.

Note: The default privacy protect code may be 1234, and you can change it to your own code.

SIM Lock

The SIM lock is realized by means of the PIN code so as to prevent your SIM Card from unauthorized use.

You may proceed according to guiding texts:

If the SIM Lock is Enabled, you will be asked to key in the PIN code before accessing the standby mode.

If the SIM Lock is Disabled, you will not be asked to key in the PIN code.

Note: If you enter the incorrect PIN code three times, your SIM card will be locked. Then you will need the PUK code to unlock it. Both PIN and PUK codes have been provided along with the SIM Card. If not, please check with your network service provider. The default PIN code is 1234, and you should change it to your own code immediately after purchasing the SIM Card.

Phone Lock

The **Phone Lock** can protect your phone from unauthorized use.

Access Phone Lock and you will be provided with such options:

If the Phone Lock is Enabled, you will be asked to key in the security code before accessing the standby mode.

If the Phone Lock is Disabled, you will not be asked to key in the security code.

Note: The default security code may be 1122, and you should change it to your own code immediately after uppercasing the phone.

Change Password

You may make changes to the three codes here:

PIN : If the present PIN code is enabled, you may change it.

PIN2 : Key in the old PIN2 code and change it to a new one.

Phone Password: Key in the old security code and change it to a new one.

Note: All codes should contain more than 4 and less than 8 digits.

Panic Button

You can use Panic Button like this:

1. Switch on Panic Button mode.
 2. Enter the message that you would like to go at the time of Panic or Emergency. The number of characters must be less than 140.
 3. Add the Mobile Number(s) which will receive the message (that you defined in Step2) at the press of Panic Button. The total numbers cannot exceed 5.
 4. Come out of the application.
- Now whenever you feel uneasy or in case of any emergency long press of 5 key will send the panic message to the mobile numbers defined by you.

4.1.33 Network Setup

Network Selection

You may choose either ways to select a network:

New Search: Search your network automatically .

Select Network: Select a network that can be used in the list of networks.

Selection Mode: Select Manual or Automatic mode.

Preferred Network

You may give priority to a certain network service provider. Access the menu, and you will see a list of networks with priority.

Press **Left Soft Key** to access **Options**:

Change Priority: Make changes to the present setting of priority.

Delete: Delete the highlighted network service provider.

GPRS Connection

Press **Left Soft Key** to **Change** the connection plan between **Always** and **When Needed**.

If the connection plan is set to **Always**, the indicator **G** will be on display in the top area.

4.1.34 Restore Factory Settings

You may set your phone back to factory settings after keying in the correct security code.

Note: You must key in the correct security code before set your phone back to default. You will probably have to restart your phone in order to set it back to defaults.

User Profiles

You can setup profiles of your mobile phone in this menu.

You can set function list under 6 modes including General mode, Meeting mode, Outdoor mode, Indoor mode, Headset mode (automatically enabled when an earphone is inserted) and Timed mode according to actual need.

Activate

Activate the profile.

Customize

Set the function list of each profile.

- **Tone Setup:** Set reminding ringtones of all applications.

Incoming Call: You can select the ringtone of incoming calls from 25 built-in ringtones and 5 custom ringtones.

Power On: You can select power-on ringtone from 10 built-in ringtones or select Mute to disable power-on ringtone.

Power Off: You can select power-off ringtone from 10 built-in ringtones or select Mute to disable power-off ringtone.

Cover Open: You can select cover-open ringtone from 10 built-in ringtones or select Mute to disable power-on ringtone.

Cover Close: You can select cover-close ringtone from 10 built-in ringtones or select Mute to disable power-off ringtone.

Message Tone: You can select the ringtone of messages from 10 built-in ringtones or select Mute to disable message ringtone.

Keypad Tone: You can select Silent, Click and Tone for keypad tone.

- **Volume:** Select the type and volume of ring tone and keypad tone. Use Up / Down key to select volume and then press OK key to confirm.

- **Alert Type:** Set reminding method for incoming calls, messages and alarm among Ring, Vibration Only, Vibra and Ring, and Vibra then Ring.

- **Ring Type:** You can select among Single, Repeat and Ascending as current ring type.

- **Extra Tone:** You can turn on/off reminding ring for Warning, Error, Camp on and Connect so as to give ring reminding in corresponding situation.

- **Answer Mode:** You can select Cover Answer or Any Key. If Any Key is selected, you can press any key other than End key and Right soft key to answer an incoming call.

Note: Once the earphone mode is enabled, other modes are disabled.

Organizer

Browse the main menu and select **Organizer**, you will see the useful functions provided by your phone.

4.1.35 Alarm

This mobile phone provides 5 alarms and supports power-off alarm. Select an alarm clock in the alarm list to set on/off, time, Repeat, Audio Options, Snooze and Alert type of the alarm. The Repeat can be once, every day or days (i.e. particular days in a week).

4.1.36 Calendar

You will see the calendar of this month after accessing the calendar menu, and the date of today is displayed in a different color. You may change the date in the Phone Settings submenu so as to renew the calendar.

Press Options soft key in the calendar interface for the following operations:

View Tasks

List task records of current date and press Left and Right key to view task records of different date. If there is not task, you can add tasks via Add; When task record is not empty, press Options soft key to perform following operations:

View: View content of current task.

Add: Add a new task. You can select the type of task reminding and edit date, time period, alarm clock on/off and reminding method.

Edit Task: Edit the selected task.

Delete Task: Delete the selected task.

Delete All: Delete all tasks of current date.

Send vCalendar: You can send current task via SMS, MMS and save it to a file.

Add Task

Add a new task. You can select the type of task reminding and edit date, time period, alarm clock on/off and reminding method.

Jump To Date

Once a date is entered, the screen will return to the calendar interface and the cursor will stop on the date entered.

Go to Monthly/Weekly View

You may choose 'go to monthly' or 'weekly view'.

4.1.37 To Do List

Display all to do lists. When the to do list is not empty, you can browse, add, edit and delete records, delete all records and send calendar tasks. The operation of delete all records will delete all to do lists.

4.1.38 Stopwatch

You can select Typical or nWay Stopwatch. In **Typical**, you can select two timing methods: Split Timing or Lap Timing, and you can also select View record.

You can use **nWay** Stopwatch function to record time in multiple ways respectively.

Note: In pause state of nWay Stopwatch, you can long press Left soft key to clear timing in all ways.

4.1.39 World Clock

You can check time of major cities in the world, select to turn on or off daylight saving time, and check world time with daylight saving time turned on/off.

4.1.40 Calculator

Your phone has a calculator with which you may make simple calculations.

After accessing the **Calculator** function:

Press **Number Keys 0-9** to key in digits and **# Key** to key in radix points.

Press **Up Key** to key in a "+", **Down Key** a "-", **Left Key** a "x" and **Right Key** a "÷".

Press Left Soft Key to calculate. Press **Right Soft Key** to clear, and press it again to quit.

Use the handwriting pen to select corresponding memory function key. "MR" recalls stored data; "MC" clears memory; "M+" add the displayed number to the number in the memory; "M-" subtract the displayed number from the number in the memory.

Note: The calculation is limited to a certain range. There can be errors if the calculation is beyond that range.

4.1.41 Unit Converter

Select Unit Converter, you can convert between different units including **Weight** and **Length**. Input/output precision of conversion is 8 effective figures (including the decimal). Use # key to enter decimal.

You can perform unit conversion in following steps:

Select a conversion type and press OK soft key to enter.

In unit conversion interface, use Up key and Down key to select corresponding unit column and use Left key and Right key to select conversion unit and enter numbers in the conversion unit column selected and enter input result in another unit column.

When there is input content, press Left soft key reset the input content.

4.1.42 Currency Converter

You can perform exchange rate conversion in following steps:

Enter currency exchange interface and enter exchange rate value (Use # key to enter decimal).

In the rate switching bar of the conversion interface, press Left key and Right key to select the rate of local currency and foreign currency, and enter a number in the local currency column.

Press OK soft key to display the conversion result in the foreign currency column.

4.1.43 Anniversary

List records of current date and press Left and Right key to view Anniversary of different date. If there is not record, you can add record via Add; When record is not empty, press Options soft key to perform following operations:

View: View content of current record.

Add: Add a new record .

Edit Task: Edit the selected task.

Delete Task: Delete the selected task.

Delete All: Delete all tasks of current date.

Send vCalendar: You can send current task via SMS, MMS and save it to a file.

Internet

Browse the main menu and select Internet. You will be further provided with three submenus: **STK**, **WAP** and **Date Account**.

4.1.44 STK*

The first submenu under **Internet** will be **STK**.

STK is a paid service provided by your network service provider.

Your phone supports the **STK** function. The availability of this function depends on your network service provider. Please check with your network service provider for further information.

4.1.45 WAP

Your phone supports the Wireless Appliances Protocol service (WAP). You may enjoy such WAP services as News, Weather Forecasts and Airlines. These services are provided by WAP service providers to mobile phone users only.

The availability of the WAP services depends on your network service provider. Please check with your network service provider for relevant information of the services.

The WAP services include Homepage, Bookmarks, Recent Pages, Enter Address and Settings.

Homepage

You may log on your homepage after selecting **Homepage**. You may customize your homepage.

Bookmarks

Select **Bookmarks** and you will see a list of bookmarks. Select from these bookmarks by using **Up Key** and **Down Key** and press **Left Soft Key** to access **Options**:

Goto: Log onto the bookmarked URL.

Edit: Edit the URL and the title.

Send: Send the URL via SMS or MMS.

Delete: Delete the highlighted bookmark.

Delete All: Delete all bookmark.

Add Bookmark: Add a new bookmark to the list.

Note: You should make sure that the bookmark list is not empty before using the WAP services. So we have provided you with several URLs that may be useful to you.

Recent Pages

You are provided with a list of URLs that you have visited. You may revisit a URL by selecting **Goto**.

Enter Address

You may key in the URL of the WAP service that you wish to visit. Then press **Left Soft Key** to visit this URL.

Note: You need not key in http:// before the URL, for this prefix is added automatically.

Settings

You will see the following submenus under **Settings**:

Edit Profile: You are provided with a list of WAP service setting records. You may select and edit a record. After editing, you may **Activate** the setting record.

Browser options: You can set the value of waiting time and select whether to display the image files on a web page.

Service message settings: You can select whether to receive service messages.

Clear cache: Information or services that you have accessed will be stored in the cache of the mobile phone. Select this operation to clear temporary information in the cache. Please clear such temporary files recording your Internet

browsing information promptly.

Clear cookies: Clear cookies.

Trusted certificates: View details of certificates.

Note: If you have visited or tried to visit websites that request a password (for example, an online banking service), please clear the cache, private information and history immediately after visiting.

Here are some instructions on most frequent operations during using the WAP services for your reference:

WAP Online Functions Instructions

Online Functions

While browsing a WAP website, press **Left Soft Key** to access the following **Options**:

Goto: Open the selected link.

Homepage: Open the homepage of the WAP services.

Refresh: Re-download the present page.

Bookmark: List the existing bookmarks. Press **Left Soft Key** to Visit, Edit, Delete or Add new bookmarks.

Offline: Check the list of visited URLs. You may revisit a URL by pressing Visit.

Enter Address: You may key in the URL of the WAP service that you wish to visit.

Set to Homepage: Set the present page to homepage.

Add Bookmark: Add it in Bookmarks.

Save Picture: Save a picture in a website.

Service Inbox: Receive PUSH messages.

Settings: Edit Setting Record, Rename Setting Record, Browsing Settings, Inbox, Clear Cache, Clear Private Information and License.

Exit: Quit WAP browser and disconnect.

Note: Whenever you are browsing WAP websites you may quit the WAP browser and disconnect by pressing End Key..

Usage of Keys:

- **Up Key & Down Key:** Scroll up and down the WAP page.
- **Left Key & Right Key:** Scroll left and right the WAP page.

- **Left Soft Key:** Online functions.
- **Number Keys 0-9:** Key in numbers and letters.
- *** Key:** Key in symbols.
- **# Key:** Switch input modes.
- **Right Soft Key:** Cancel or quit according to the guiding texts.

Note: The key functions may change with the WAP service. Please follow the guiding texts and check with your network service provider for further information.

4.1.46 Data Account

GSM Data

You will be provided with a list of **GSM IDs** for WAP services. You may select an ID and **Edit** it:

Account Name: You can change the name of ID.

Number: The connection number of the ID.

User name: Your user name on the server (instead of WAP Gateway). The default name is "wap".

Password: Your password on the server (instead of WAP Gateway). The default password is "wap".

Line Type: You make choose a line type from **Analogue** and **ISDN**.

Speed: The speed of your WAP data transfer. Press **Left Key** and **Right Key** to choose from 4.8Kbps, 9.6Kbps and 14.4Kbps.

DNS: The address of the DNS server of the WAP services.

GPRS

You will be provided with a list of GPRS IDs for WAP services. You may select an ID and **Edit** it:

Account Name: You may change the name of ID.

APN : Enter APN, the default is "portalnmms".

Username: Your username on the APN server.

Password: Your password on the APN server.

Authentication type: Press **Left Key** or **Right Key** and choose an authentication type from **Normal** and **Secure**. Press **OK** to apply it.

Note : Spice S-5010 dose not support phone as a modem function

Fun Spice

4.1.47 SpiceGang

SpiceGang is a wap portal from where user can download Ringtones, Wallpapers, Animations, Videos and other kind of content.

You can do like this:

1. Check the GPRS settings for your operator.
2. Initiate SpiceGang wap portal to browse and download the content.
3. Charges for download apply as per operator pricing.

Explore the whole world of Entertainment with SpiceGang.

4.1.48 Reuters

Reuters India gives you the latest India, World and Business news and more. Also, get the latest stock market information along with tools like the currency converter and weather in your city on your mobile phone.

The services pre loaded on Spice Phones are Latest News, Weather Check, Currency Details and Free News Alerts. Please ensure that you have GPRS settings in your phone to open Reuters. Contact your operator for GPRS settings.

4.1.49 Ibibo

Now connect with the ibibo community on Spice Mobiles. Go and create your profile, search for people based on their age, sex & location, make new friends and send or receive blurbs. Invite your existing friends to join your new community.

The services which are pre loaded on Spice Phones are **Free SMS**, **Cricket Updates**, **Cool Stuff** and **Make New Friends**. Please check your GPRS settings before accessing Ibibo.

4.1.50 Voice Zone

You are provided with options such as **Voice Zone**:

Bhakti Sangeet

Spice Mobiles present Bhakti Sangeet on IVR. Use this portal to listen to your favorite devotional songs at the click of a button, virtually, anytime and from anywhere.

Bhakti Sangeet is a third party application. Use of it is at your sole discretion. Spice Mobiles disclaims all responsibilities from its usage, whether express or implied. The IVR codes are owned and provided by third party and may change without prior notice.

Sangeet

Spice Mobiles presents Sangeet Portal – One Touch Access to the huge library of songs comprising of 17 languages and over 1 lakh tracks!

Sangeet is a third party application. Use of it is at your sole discretion. Spice Mobiles disclaims all responsibilities from its usage, whether express or implied. The IVR codes are owned and provided by third party and may change without prior notice.

Suno Sunao

Spice Mobiles brings SUNO SUNAO to its customers. It gives the anonymity, thrill, excitement and above that a chance to

Speak and listen to the Chat friend!

SUNO SUNAO is a third party application. Use of it is at your sole discretion. Spice Mobiles disclaims all responsibilities from its usage, whether express or implied. The IVR codes are owned and provided by third party and may change without prior notice.

4.1.51 M Gurujee

MGurujee is India's leading M-Learning portal. A mobile phone based on learning experience with access to a wide variety of quality knowledge content from market leaders.

The services pre loaded on Spice Phones are **Sample Papers, Education Search, Job Search and Calculator**. Please check your GPRS settings before accessing Mgurujee.

4.1.52 Email2SMS

Emergic Email2SMS is a product of Netcore Solutions Pvt. Ltd. provided by Spice Mobiles. Email2SMS allows you to receive email on your phone via SMS without GPRS. You can Read, Reply, Compose and Forward your emails via SMS. This service is only available for Gmail, Indiatimes and Corporate Account Holders. Spice Mobiles offers FREE subscription for one month.

You can use Bhakti Sangeet like this:

1. Just send **SPICE START <Location> to 575758** to register for Email2SMS service.
- For composing new mail type NEW <Receiver's Email-Id> S:<Subject> B:<Message> and send it to 575758.
2. For replying to any mail type **REPLY <Message-Id> <Message>** and send it to 575758.
3. For replying to all in the mail type **REPLY <Message-Id> <Message>** and send it to 575758.
4. For forwarding the mail type FWD <Message-Id> <Receiver's Email-Id> <Message> and send it to 575758.

For reading the remaining part of mail type **READ <Message-Id>** and send it to 575758.

NOTE: Message-id is the number which you get at the end of SMS. i.e., 01,02,03,04.

For more details contact Customer Support : Phone : +91 22 6662 8130, Email : cs@m3m.in, Chat ID : e2sms.support@gmail.com, e2sms.support@hotmail.com, e2sms.supp@yahoo.com.

4.1.53 Dazzle Ringtone

Abb Har Bar Naya Gana Bajega! You like lot of songs and also like to set those all songs to be a ring tone of your mobile phone? For this you have to change ring tone every time with new song.

Not anymore! This Spice model gives you the facility of Dazzle/Shuffle Ringtones. Where you can set up to 10 songs in one time as your ring tone.

Now whenever a new call will come every time a new song will play as your ring tone.

4.1.54 Fun & Games

The mobile phone contains three built-in game: Copter, Panda and UFO. For detail rules of a game, visit Game Help of corresponding game.

Game setting: You can turn on or off game sound effect and vibration.

4.1.55 Others

You are provided with such options in **Others:**

Mobile Tracker

Now be sure of your mobile phones with Mobile Tracker offered by Spice Mobiles. This feature allows users to track their phone if they are lost or stolen. Switch on MTracker application and whenever a new SIM is inserted in your phone, you will

receive a SMS on pre defined numbers.

Call Filter

If you have activated Blacklist, you can not receive calls from numbers in the blacklist.

If you have ctivated Whitelist, you can receive or answer calls only from certain contact in the whitelist.

Privacy Lock

The Privacy Protect can protect **Phone Book, Messages** and **Call History** from unauthorized use.

Access Privacy Protect and you will be provided with such options:

If the Privacy Protect is activated, you will be asked to key in the security code before accessing Phone Book, Messages and Call History.

Note: The default privacy protect code is 1234, and you can change it to your own code.

Panic Button

For using Panic Button,

1. Switch on Panic Button mode.
2. Enter the message that you would like to go at the time of Panic or Emergency. The number of characters must be less than 140.
3. Add the Mobile Number(s) which will receive the message (that you defined in Step2) at the press of Panic Button. The total numbers cannot exceed 5.
4. Come out of the application.

Now whenever you feel uneasy or in case of any emergency long press of 5 key will send the panic message to the mobile numbers defined by you.

5 Input Modes

Introduction

Your phone has input modes such as: Smart English (Capital and Small), Multitap ABC, Multitap abc, Numeric and Multitap Hindi. You may input texts in the following functions:

- Text messages
- Phonebook
- Search phonebook
- Salutatory
- Texts in multimedia messages
- Etc.

Keypad

Though detailed instructions of the input modes will be given in 5.3 "Input Modes", here is basic usage of the keys that you may frequently use:

Left Soft Key: Confirm.

Right Soft Key: Clear or quit.

OK Key: Input the selected word in Smart English input mode. While editing a text message, press it to finish or access EMS options.

Navigation Keys: Move the cursor or select from listed letters or words.

*** Key:** Input symbols.

Key: Switch input modes.

Input Modes

5.1.1 Smart English Mode

Smart English has both capital input and small input modes.

Normal input procedure of Smart English mode:

Your phone will automatically make a prediction of the word that you are keying in. Use **Navigation keys** to select words and **Left Soft key** or **OK Key** to confirm.

Press **# Key** to switch input modes.

Press *** Key** to select English symbols.

Press 0 to key in a 0 or a space.

Press **Right Soft key** to clear previous input. Long press to clear all text.

5.1.2 English Mode

English Mode has both capital input and small input modes.

Normal input procedure of English mode:

You may need to press a key more than once until you see the letter you wish to see.

Press * **Key** to select English symbols.

Press # **Key** to switch input modes.

Press 0 to key in a 0 or a space.

Press **Right Soft key** to clear previous input. Long press to clear all text.

5.1.3 Number Mode

Normal input procedure of number mode:

Press Number Keys 0-9 to input numbers.

Press # **Key** to switch input modes.

Press **Right Soft key** to clear previous input. Long press to clear all text.

5.1.4 Hindi Mode

Normal input procedure of Hindi mode:

You may need to press a key more than once until you see the letter you wish to see.

Press # **Key** to switch input modes.

Press **Right Soft key** to clear previous input. Long press to clear all text.

6 Troubleshooting

If you have problems with your phone, refer to the specific problems and the corresponding solutions below. If you need additional help, contact the **Spice** designated dealers or servicing provider.

■ Input PIN :

Input effective PIN code that SIM card takes. If you do not know the code, please contact with network service provider immediately.

■ Input PUK

Your SIM card will be locked if you enter incorrect PIN code three times. You will need a PUK code to unlock it, please contact your network service provider at once.

■ Insert SIM card

Please check if your SIM card is installed correctly. Check if your SIM card is working properly. If so, please contact your network service provider.

■ No connection to network :

Check the intensity indicator of the signal. There is no signal or signal is weak, if you are in the basement or network blind area or you might not in the network cover range Move to other place to receive the signal., please contact your service provider.

■Poor sound quality:

If the quality of sound is poor, disconnect the phone, then retry it, network service could provide you a better line..

■ Standby time too short :

The local signal is weak; it takes a long time to search the signal. When you do not want to answer a call, please switch off the phone temporarily. If the performance of your battery is poor, you should change the battery.

■ Phone can not be switched on :

Charge battery. Check charging indicator in the display.

■ Message can not be sent :

Check your service centre number, you might not enable SMS service, or the number you sent is not reachable. Or your service provider does not support this service.

■ **Battery charging error :**

There are three possible situation: Firstly, the phone charger does not work properly, you can contact the authorized distributor to replace the charger. Secondly, the temperature is not suitable, please move to a suitable place to recharge. Thirdly, contact problem, please check power supply and connection to the phone.

■ **Entries can not be made in phone book**

Phone book is full, please delete some entries.

■ **Some functions of the phone don't work**

There are possibilities that the function is inactive or the service provider does not support the function. Please contact with the distributor or service provider.

7 Glossary

■ **Broadcast**

The service allows you to receive broadcasting SMS, such as weather, traffic, etc.

■ **DTMF**

Sends out the signal of the audio frequency, used in the telephone banking, answering machine, etc.

■ **International Indicator**

When inputting a correct international phone number, you should add '+' before the number.

■ **Network Service Provider**

Before you can use your mobile, you must sign a contract to your network provider and get a SIM card.

■ **PIN (Personal Identification Number)**

PIN code authorizes you to use the function and information of the SIM card. It is provided by the network provider. It may be composed of 4 to 8 digits number. You can change it if necessary.

■ **PIN2 (Personal Identification Number 2)**

It is used for some special functions of SIM card. In some countries, the network provider might not offer PIN2 code to you.

■ **PUK (PIN Unlock code)**

To unlock the locked SIM card, provided by network provider.

■ **Roam**

Use your mobile out of the local network range.

■ **SIM (Subscriber Identification Module)**

It contains protocol details, security information and personal phone book.

■ **SMS (Short Message Service)**

Sending and receiving messages via the network center. It needs the support of network.

■ **WAP (Wireless Application Protocol)**

A special protocol for wireless device, which makes you accessing to Internet quickly and simply.

8 Technical Data

General

Name : Digital GSM DF GPRS Mobile Phone

Model : S-5010

System : GSM900/DCS1800

Ambient Temperatures

Maximum : +55 °C

Minimum : -10 °C

Basic Parameters

Weight : Approximately 92.4 g (including standard battery)

Dimensions(LxWxH) : 96.8x46.4x18mm

Talk time : 120 –240 minutes *

Standby time : 250 – 350 hours *

Battery Capacity : 780mAh

*** subject to local and network conditions**
