

spice™

S-525



Mobile Tracker



Smart FM Recording

F M S P I C E

USER'S MANUAL

www.spicemobile.in

spice™
MOBILE PHONES

-
- Please read this manual before using your phone.
 - All illustrations in this user manual are for illustration only and may not accurately depict the actual phone.
 - We operate a policy of continuous development and reserve the right to make changes and improvements to any of the products described in this manual without prior notice.
 - In this manual, press a key means to press and release it immediately. Press and hold a key means to keep pressing it for about 2 seconds and then release it.

Table of Contents

1. Safety information.....	3
2. General information	3
2.1 Checking the phone and accessories	3
2.2 Illustrations of the phone and function.....	3
2.3 Idle mode display.....	3
2.4 Technical specifications	3
2.5 SIM card & battery.....	3
2.5.1 Installing SIM card & battery	3
2.5.2 Removing SIM card & battery	3
2.5.3 Charging the battery	3
2.6 Power the phone on/off.....	3
2.7 Idle mode operations.....	3
3. Basic Operations.....	3
3.1 Making a call	3
3.1.1 Making a call from idle.....	3
3.1.2 Inserting a pause sign when dialing.....	3
3.1.3 Call History dialing.....	3
3.1.4 Phone Book dialing.....	3
3.1.5 Speed dialing.....	3
3.2 Answering/rejecting a call.....	3
3.3 Missed calls.....	3
3.4 During a call	3
3.4.1 Muting a call	3
3.4.2 Handsfree earpiece	3
3.4.3 Adjusting earpiece volume	3
3.4.4 Searching for a number from the phonebook.....	3
3.4.5 DTMF	3
3.5 SIM lock	3
3.6 Phone lock	3
3.7 Call waiting.....	3
3.8 Making a three party call.....	3
4. Entering text	3
4.1 Keypad mapping.....	3
4.2 ABC/abc input.....	3
4.3 Hindi input.....	3
4.4 ENG/eng input.....	3
4.5 123 input	3
4.6 Entering symbols.....	3
5. The menus.....	3
5.1 Menu Tree	3
5.2 Phone book.....	3
5.2.1 Add New Entry.....	3
5.2.1.1 Add New Entry to Phone.....	3

5.2.1.2 Add New Entry to SIM.....	3
5.2.2 Search Entry.....	3
5.2.3 View.....	3
5.2.4 Edit.....	3
5.2.5 Delete.....	3
5.2.6 Copy.....	3
5.2.7 Move.....	3
5.2.8 Caller Group.....	3
5.2.9 Owner Info.....	3
5.2.10 Speed Dial.....	3
5.2.11 Memory Status.....	3
5.2.12 Preferred Storage.....	3
5.3 Messages.....	3
5.3.1 Write Message.....	3
5.3.2 Inbox.....	3
5.3.3 Outbox.....	3
5.3.4 Message Template.....	3
5.3.5 Message Settings.....	3
5.3.6 Voice Mail.....	3
5.3.7 Broadcast.....	3
5.4 Call History.....	3
5.4.1 Missed Calls/Dialed Calls/Received Calls.....	3
5.4.2 Delete.....	3
5.4.3 Call Time.....	3
5.4.4 Call Cost.....	3
5.5 Settings.....	3
5.5.1 Phone Setup.....	3
5.5.1.1 Time and Date.....	3
5.5.1.2 Schedule Power on/off.....	3
5.5.1.3 Language.....	3
5.5.1.4 Input Method.....	3
5.5.1.5 Display.....	3
5.5.1.6 Wallpaper.....	3
5.5.1.7 Screen Saver.....	3
5.5.1.8 Contrast.....	3
5.5.1.9 Greeting Text.....	3
5.5.1.10 Dedicated key.....	3
5.5.2 Call Setup.....	3
5.5.2.1 Caller ID.....	3
5.5.2.2 Call Waiting.....	3
5.5.2.3 Call Divert.....	3
5.5.2.4 Call Barring.....	3
5.5.2.5 Line Switching.....	3
5.5.2.6 Reminder.....	3




5.5.2.7 Call Time Display.....	3
5.5.2.8 Auto Redial.....	3
5.5.2.9 Call Guard.....	3
5.5.3 Network.....	3
5.5.3.1 Network.....	3
5.5.3.2 Band.....	3
5.5.4 Security.....	3
5.5.4.1 SIM Lock.....	3
5.5.4.2 Phone Lock.....	3
5.5.4.3 KeyLock.....	3
5.5.4.4 Fixed Dial.....	3
5.5.4.5 Panic Button.....	3
5.5.4.6 Change Pwd.....	3
5.5.5 Field Phone Security.....	3
5.5.5.1 Mobile Tracker No.....	3
5.5.5.2 Mobile Tracker Lock.....	3
5.5.5.3 Change Pwd.....	3
5.5.6 Restore Factory Settings.....	3
5.6 File Manager.....	3
5.6.1 Images.....	3
5.6.2 Audio.....	3
5.7 Games.....	3
5.8 FM Radio.....	3
5.9 Profiles.....	3
5.9.1 Activating a profile.....	3
5.9.2 Customizing a profile.....	3
5.9.2.1 Tone Setup.....	3
5.9.2.2 Volume.....	3
5.9.2.3 Alert Type.....	3
5.9.2.4 Ring Type.....	3
5.9.2.5 Extra Tone.....	3
5.9.2.6 Answer Mode.....	3
5.9.2.7 LCD Backlight.....	3
5.10 Extra.....	3
5.10.1 Calendar.....	3
5.10.2 To do List.....	3
5.10.3 Alarm.....	3
5.10.4 Calculator.....	3
5.10.5 Converter.....	3
5.10.5.1 Weight.....	3
5.10.5.2 Length.....	3
5.10.6 Currency Converter.....	3
5.11 Shortcuts.....	3
5.12 Service.....	3

6. Troubleshooting	3
7. After-sale service.....	3





1. Safety information

Read these precautions carefully before you use your phone to ensure that you use the phone safely and correctly.

- The precautions listed here are intended to prevent injury to the phone user and to others, and to prevent unintended damage to property.
- The designations below Indicates the severity of the injury or damage that may be incurred if the designated precautions are not followed and the product is used incorrectly.

 DANGER	Indicates that, if this warning is ignored, improper handling of the product is likely to result in death or serious injury.
 WARNING	Indicates that, if this warning is ignored, improper handling of the product could result in death or serious injury.
 CAUTION	Indicates that, if this warning is ignored, improper handling of the product could result in personal injury or material damage.

The icons shown below are used to indicate instructions that should be observed.

 Prohibited	 Do not disassemble
 Essential	 Unplug

General Precautions When Using the Phone, Battery and AC adapter



DANGER

Only use the battery and AC adapter specified by our brand for use with this phone. The use of a battery or AC adapter other than that specified could result in the battery leaking fluids, overheating, bursting or igniting.



Essential

Only use **SPICE** specified battery and AC adapter for use with this phone.



WARNING

Do not subject this product to strong shocks or vibrations or throw it around, as this could result in the battery leaking fluids, overheating, bursting or igniting, and could damage the phone and cause faults or a fire.

Do not place the battery, the phone itself or the AC adapter in a microwave oven or pressure cooker, as this could result in the battery leaking fluids, overheating, bursting or igniting, or could cause the phone or AC adapter to overheat, emit smoke, or ignite, or could damage the circuitry inside the device.

Do not use this product in places where there are inflammable gases, as this could cause the gases to ignite or result in device damage, faults or a fire.

Do not put discarded battery together with garbage. When disposing discarded battery, please comply with the rules of local management department.

Do not put the SIM card in the place which is within children's reach.



Prohibited



CAUTION

Do not store this product in a very damp, dusty or hot location, as this could result in faulty operation.



Prohibited

Store this product out of the reach of small children, as it could cause injury if used as a toy.



Essential






Do not leave this product on an unstable or sloping surface, as it could fall and be damaged or cause injury.




Prohibited

Precautions When Using the Mobile Phone

WARNING





Do not use your mobile phone while driving, as this is dangerous and could cause a traffic accident. Pull over and park in a safe place before using the phone.	 Prohibited
Switch off the phone when you are in places where the use of mobile phones is prohibited, such as in an aircraft or hospital. Mobile phones can adversely affect the operation of electronic instrumentation and medical equipment. For information on using your phone in a medical facility, refer to the directives provided by the facility itself.	 Essential
Do not use your mobile phone around electronic devices that use very weak signals or require very precise control. Radio wave interference can cause malfunctions or other problems in electronic devices. Examples of affected devices: Hearing aids, pacemakers and other electronic medical aids, fire alarms, self-opening doors and other automatic control devices, etc. For more information on the effects of mobile phones on pacemakers and other electronic medical aids, check with the device manufacturer or supplier.	 Prohibited
Do not attempt to disassemble or modify your mobile phone as this could cause injury or electric shock and could damage the phone.	 Do not disassemble
Please make a copy of important data. Our company does not assume the loss of data due to malfunction.	 Essential

CAUTION



When the phone is used in some types of car, it could possibly affect the operation of electronic components in the car. Do not use the phone if it adversely affects the safe operation of the vehicle in any way.	 Prohibited
Do not use your mobile phone in crowded places as the antenna could strike someone and cause injury.	
Keep your mobile phone away from magnetic cards. Emissions from the phone can erase the information stored on floppy disks and cash cards or credit cards.	
Keep sharp metal objects such as thumbtacks away from the earpiece speaker. The dynamic speaker in the earpiece is magnetic and could attract sharp objects, causing injury.	
Keep the mobile phone dry. Water or other fluids entering the phone could cause overheating, electric shock or damage to the phone.	

Precautions When Using the Battery

DANGER

Do not dispose of the battery by throwing it in a fire, as this could cause the battery to ignite or burst.	
If you are having difficulty connecting the battery to your mobile phone, do not use force as this could cause the battery to leak fluids, overheat or ignite.	
Do not short-circuit the battery terminals, and do not touch the terminals with metal objects such as paper clips or needles. Also, do not carry or store the battery with objects such as metal necklaces. Any of these could cause the battery to leak fluids, overheat, burst or ignite.	 Prohibited
Do not solder the terminals as this could cause the battery to leak fluids, overheat, burst or ignite.	
Any fluid from inside the battery coming into contact with the eye could cause loss of vision. If this occurs, flush the affected eye with clean water (without rubbing) and seek immediate medical treatment.	 Essential
Do not attempt to disassemble or modify the battery as this could cause the battery to leak fluids, overheat, burst or ignite.	 Do not disassemble
Do not use or store the battery in hot places such as near a fire or heating appliance. This could cause the battery to leak fluids, overheat, burst or ignite.	 Prohibited

WARNING

If there are any noticeable changes in the battery while being used, charged or stored (overheating, discoloration, deformation, etc.), remove the battery from the phone or AC adapter and discard it. Continued use of the battery in such conditions could cause the battery to leak fluids, overheat, burst or ignite.	 Prohibited
Any battery fluid coming into contact with your skin or clothing could cause skin damage. Wash the fluid off immediately with clean water.	
If the battery is leaking fluid or producing any odor, move it away from any naked flame as this could cause the leaking fluid to ignite, resulting in a fire or in the battery bursting.	 Essential

CAUTION

Keep the battery dry. Moisture on the battery could cause the battery to overheat, emit smoke or corrode.

Do not use or leave the battery in direct sunlight or in hot places such as in a car on a hot day. This could cause the battery to leak fluids and overheat, and could impair the performance or reduce the lifetime of the battery.



Prohibited

Precautions When Using the AC adapter

DANGER

Always use the AC adapter with a domestic power supply (eg. 220 V AC). The use of other voltages could cause an electric shock, fire, or damage to the AC adapter.



Essential

Never short-circuit the AC adapter plug as this could cause an electric shock, fire, smoke, or damage to the AC adapter.



Prohibited

Do not use the AC adapter if the power cord is damaged (core wiring exposed or cut, etc.) as this could cause a fire or electric shock.

Clean off any dust on the power plug as this could cause a fire.



Essential

Do not place containers of water (jugs, etc.) near the AC adapter. Water on the AC adapter could cause overheating, an electric shock or damage to the devices.



Prohibited

If any water or other liquid gets into the AC adapter, immediately unplug the power cord. Failure to do so could cause the AC adapter to overheat or catch fire, or cause an electric shock or damage to the AC adapter.



Unplug

Do not attempt to disassemble or modify the AC adapter as this could cause injury, an electric shock, fire, or damage to the AC adapter.



Do not disassemble

Do not use the AC adapter in places with a lot of water vapour, such as a bathroom, as this could cause an electric shock.



Prohibited

Do not touch the AC adapter, the power cord or the power socket with wet hands as this could cause an electric shock.

CAUTION

Always unplug the AC adapter before performing any cleaning or maintenance. Failure to do so could cause an electric shock.



Essential

Do not place heavy objects on the power cord or attempt to modify the power cord as this could cause an electric shock or fire.



Prohibited

Always grasp the AC adapter itself when you unplug the AC adapter. Pulling on the power cord can damage the cord and cause an electric shock or fire.



Essential

General Notes on Cleaning and Maintenance

Do not splash water on the battery, phone or AC adapter.

The mobile phone, battery and AC adapter are not manufactured to waterproof specifications. Do not use them in places where there is a lot of water vapour, such as a bathroom, and take care to protect them from rain.

Use a soft, dry cloth to clean the battery, phone and AC adapter.

Wiping the battery, phone or AC adapter with a wet cloth could cause faults. Also, solvents such as alcohol, thinners or benzine may remove the printed lettering on the phone or cause discoloration.

Wipe the AC adapter plug clean occasionally with a dry cloth.

Soiled AC adapter plug result in a poor electrical connection which can cause power loss. This can also prevent the AC adapter from recharging the battery correctly.

Notes on the Mobile Phone

Do not expose the phone to extremely low or high temperatures.

Use the mobile phone in temperatures between 5°C and 35°C and a humidity of 35% to 85%.

Use the phone as far away as possible from equipment such as conventional phones, TVs, radios and electronic office equipment, as the mobile phone can affect the operation of such equipment.

Notes on the Battery

Store the battery in a cool, well-ventilated location that is not exposed to direct sunlight.

The battery has a limited life.

However, the life of any battery is limited, and the amount of time for which a battery can be used between recharges gradually decreases. If repeated recharging fails to restore the battery's functionality, the battery life has expired and should be replaced with a new battery of the specified type.

Do not dispose used batteries with ordinary household garbage.

Apply insulating tape to the battery terminals before you dispose of the battery. Check with the relevant local authorities for the correct method for disposing of your battery.

Notes on the AC adapter

To avoid malfunctions, do not charge the battery in the following places:


- In direct sunlight
- Where the ambient temperature is below 5°C or above 35°C
- In humid or dusty locations or places subject to vibrations (this could cause malfunctions)
- Near an appliance such as a TV or radio (this could impair picture or sound quality).



2. General information


2.1 Checking the phone and accessories

After unpacking, please check the accessories. If there is anything missing or there are pages lost in the user's manual, which cause it unreadable, please contact the local seller that you purchased the phone from.

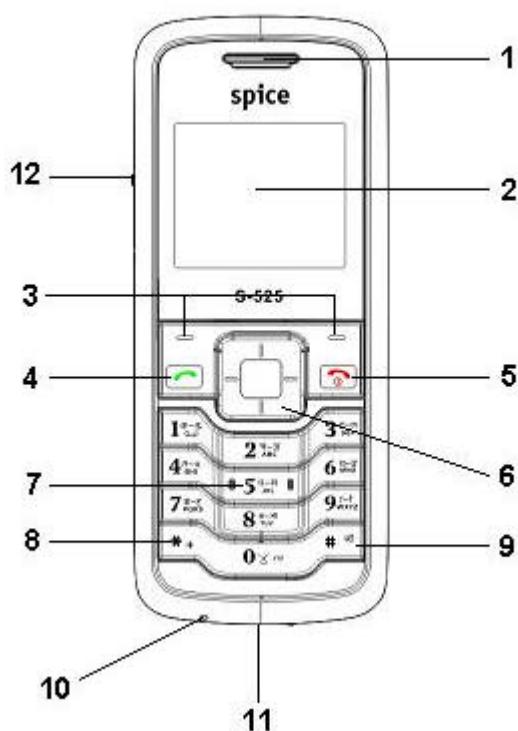2.2 Illustrations of the phone and function






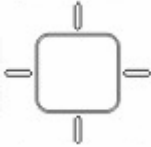






1	Earpiece	
2	Display	
3	Left Soft key	<ul style="list-style-type: none"> • Enter the phone book in idle • Execute the function shown at the bottom left of the display
	Right Soft key	<ul style="list-style-type: none"> • Enter the main menu in idle • Execute the function shown at the bottom right of the display
4		<ul style="list-style-type: none"> • Make or answer a call • Enter call History in idle
5		<ul style="list-style-type: none"> • Press and hold to power the phone on when the phone

		<p>is off</p> <ul style="list-style-type: none"> ● Press and hold to power the phone off ● End or reject a call. ● Return to idle display
6		<ul style="list-style-type: none"> ● Move the cursor ● Enter the shortcut menu in idle
7	Numeric key	<ul style="list-style-type: none"> ● Enter phone numbers, characters or select the function
8	*	<ul style="list-style-type: none"> ● When enter numbers, press once for “*”, twice for “+”, three times for “P” and four times for “W”. Or press and hold to display “*”, “+”, “P”, “W” in a loop. ● When edit, enter the symbol list.
9	#	<ul style="list-style-type: none"> ● When edit, switch input methods ● Press and hold to enter or exit the silent mode in idle ● Unlock the keypad by pressing right soft key and then #
10	Microphone	
11	Charger connector	
12	Headset	

 2.3 Idle mode display

  TIP: The locations of signal strength and battery power are fixed. Others are displayed according to the actual status of the phone.

Icon	Descriptions
1. 	Indicates signal strength level and more bars means better signal
2. 	Indicates the phone is in the connecting or connected status
3. 	Indicates the keypad is locked
4. 	Indicates you have unread messages
5. 	Fixed dial is set on
6. 	Indicates the alert type is “ Vibration Only”
7. 	Indicates the alarm is set on
8. 	Indicates battery power
9. 	Indicates the phone is in roaming status
10. 	Indicates all voice incoming calls have been diverted to a specified number

2.4 Technical specifications

Battery	Lithium battery, 3.7V, 700mAh
Charger	Input: 100~240V AC 50/60Hz Output: 5VDC, 400mA
Dimensions	102 X 42 X 19 (mm)
Weight	77g
Standby time*	About 175 hours
Talk time*	About 6 hours


* The idle time and call time depend on the network.

2.5 SIM card & battery


- Keep all SIM cards out of the reach of small children.
- The SIM card and its contacts can be easily damaged by scratches or bending, so be careful while handling, inserting or removing the card.
- Power off the phone before installing or removing the battery or SIM card to prevent damage to the phone.

2.5.1 Installing SIM card & battery


1. Place the SIM card into the slot with the metal contact facing down.

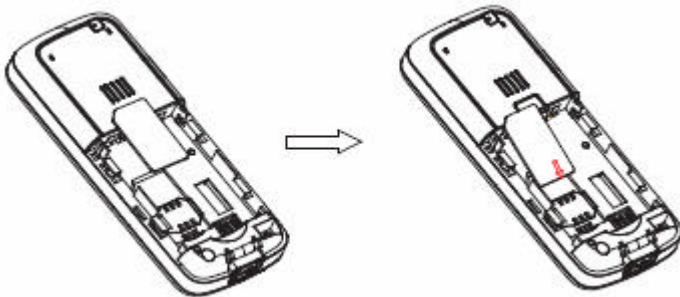

2. Attach the battery to the phone as shown below.

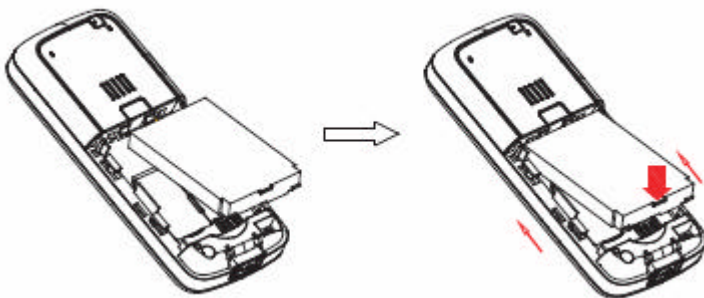


3. Push the battery cover upwards until it clicks into place.

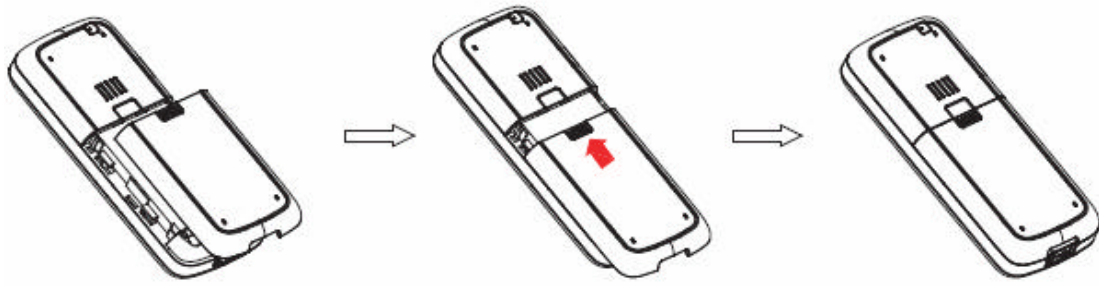


2.5.2 Removing SIM card & battery


1. Power off the phone.
2. Push the battery cover shown as below.

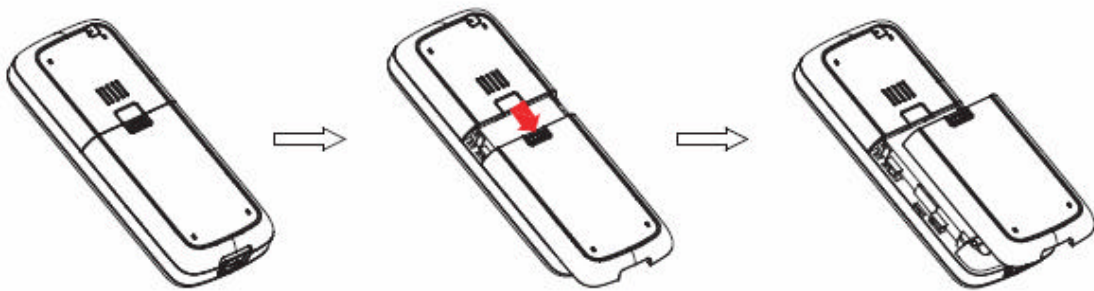

3. Remove the battery.

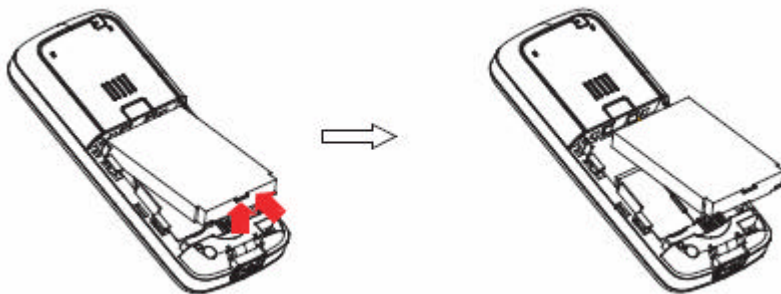

4. Slide the SIM card.

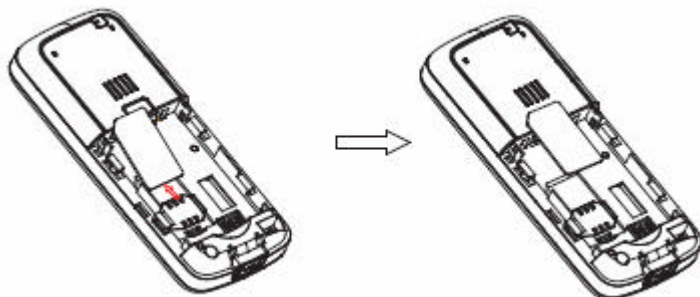

2.5.3 Charging the battery

1. Plug the connector of the charger into the jack at the bottom of the phone, and plug the charger into a standard AC wall outlet. During charging, the battery icon is

flashing.


- When charging is completed, the battery icon stops flashing.

Charging.....


Fully Charged




Notice:

- When  is shown in the screen, it indicates that there is not enough power, please charge the phone.
- You must fully charge the battery before using the phone for the first time. It is recommended you charge the battery for four hours for the first time.
- If the phone is turned on during charging, you can still make or answer calls, but this will consume battery power, thus extend the charging time of the phone.
- It is recommended you charge the battery when it runs out to enhance the battery life.

2.6 Power the phone on/off


To power the phone on, press and hold  when it is off.

- If phone lock is set on, you are required to enter the password. The phone password is preset to “1122” at the factory. See “5.5.4 Security”.
- If SIM lock is set on, you are required to enter the PIN. See “5.5.4 Security”. If you enter wrong PIN three times in a row, you need the PUK to unlock it. PIN and PUK are both provided by the network operator.

To power the phone off, press and hold  when it is in idle.


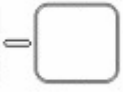



2.7 Idle mode operations

In idle

- Press (Menu) to enter the main menu. Press  to select the desired one and press (Ok). You can also enter the menu by pressing the corresponding numeric key.
- Press (Name) to enter Phone Book.



- Press  to enter Calendar.

-
- Press  to enter Shortcuts.
 - Press  to write the message.
 - Press  to enter Profiles.
 - Press and hold 0 to open FM radio.
 - Press  to enter the Call logs.
 - Press  to cancel the Broadcast.
 - Press and hold 1 to call the voice mailbox.
 - Press and hold # to enter the silent mode or return to the previous mode.


3. Basic Operations




3.1 Making a call

You can make or receive calls within the service area and with sufficient signal strength.
 Notice: The signal strength affects the quality of your call.

3.1.1 Making a call from idle

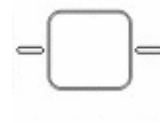 1. In idle enter phone numbers you want to call

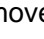


- If you make a mistake, press (Clear) to erase the last number; press  to move the cursor, press (Clear) to erase the number left to the cursor, press and hold (Clear) to erase all numbers.
 - To save the numbers to phone book, press (Save) to select the location (SIM or phone) and then enter phone book editor display.
2. Press  to call.
 3. Press  to end the call.

3.1.2 Inserting a pause sign when dialing


You can use the pause sign to dial an extension number automatically or manually.

In an automatic way

1. In idle enter the phone number.
2. Press * continuously three times to insert a "P".
3. Enter the extension number.
4. Press  to dial the number before "P". After the line is connected, the phone will dial the number after "P" automatically.

Notice: The suspending time depends on the number of the "P" you entered.

In a manual way


1. In idle enter the phone number.
2. Press * continuously four times to insert a "W".
3. Enter the extension number.
4. Press  to dial the number before "W". After the line is connected, the phone will ask you whether to dial the number after "W".

3.1.3 Call History dialing

Select Menu Call History (Or press  in idle).

Select a record from Missed, Dialed or Received calls list, then press  to call.

3.1.4 Phone Book dialing




In idle press (Name) or enter phone book from the main menu. Select one entry you want to call and press .

3.1.5 Speed dialing

After you have activated the speed dial function and assigned the phone number to the relevant numeric key, you can press and hold the key to call the number quickly in idle.

3.2 Answering/rejecting a call.

When there is an incoming call:

1. Press  to answer the call, press (Silence) to mute the ring.
2. Press  to reject the call.
3. Press  to end the call.

3.3 Missed calls

The missed calls are displayed in the display. Press (Read) to enter missed calls list to check.

3.4 During a call

3.4.1 Muting a call


You can mute the call during the conversation, and then the other party would not hear your voice.

1. During the call press (Option) and select **Mute**. Press (On) to mute the call.
2. To unmute the call, select **Mute** and press (Off) in the Option display.

3.4.2 Handsfree earpiece

1. Press (H-Free) to activate handsfree earpiece.
2. To deactivate handsfree earpiece, press (H-Held).

3.4.3 Adjusting earpiece volume

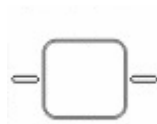

During a call press  to adjust earpiece volume.

3.4.4 Searching for a number from the phonebook

During a call, press (Option) and select **Phone book**.

3.4.5 DTMF

When DTMF is turned off, the entered numbers will not be responded as DTMF signals during a call.

1. During the call press (Option) and select **DTMF**. Press (Off) to deactivate DTMF.
2. To activate DTMF, select **DTMF** and press (On) in the Option display.

3.5 SIM lock

SIM lock protects the SIM card from unauthorized usage. With this function activated, the phone asks for a PIN each time you power ON the phone.

1. Select Menu? Settings? Security? SIM Lock.
2. Select **On** and press (Ok) to activate SIM lock.
3. Enter the PIN and press (Ok).

To deactivate SIM lock, you also need to enter the PIN which is provided by the network operator.

3.6 Phone lock

Phone lock protects the phone from any unauthorized usage. With this function activated, you need the password of the phone to unlock it.


1. Select Menu? Settings? Security? Phone Lock.
2. Select **On** and press (Ok) to activate phone lock.
3. Enter the password and press (Ok).

To deactivate phone lock, you also need to enter the password which is preset to “1122” at the factory.

3.7 Call waiting


This function allows you to put the current call on hold and then make or answer a second one. This feature is network dependent and before you can use it you need to get it activated from your telecom operator.

If another call comes when you are during a call, you will be notified of it by a call waiting tone and the phone number is displayed.

- Press (Reject) to reject the waiting call.
- Press (Option) and select **End** to end the current call.
- Press  or (Option) and select **Answer**, to hold the current call and answer the waiting call. Press (Option) and select **Swap** repeatedly to switch calls.

If you want to make a second call without ending the current one,

- Press (Option) and select **Hold** to hold the current call. Then call the second in the normal way. Press (Option) and select **Swap** repeatedly to switch calls.

Notice: Press  or (Option) and select **End Single** to end the call you selected. Press (Option) and select **End All** to end both calls.

3.8 Making a three party call

This function needs to be supported by the network. It allows up to five people to take part in simultaneously in a conference call.

- Press (Option) and select **Hold** to put the first participant on hold.
- Call the second participant in the normal way. Press (Option) and select **Conference** to join the participant to the conference call.
- Following instructions above to join the new person to the conference call.

4. Entering text

The phone provides several input methods including ABC input, abc input, ENG input, eng input, 123 input and Hindi input. Press # to switch input methods.

4.1 Keypad mapping

Input method	key	Characters or functions
abc/ABC	1	Display frequently used symbols
	2	a/b/c/2 (A/B/C/2)
	3	d/e/f/3 (D/E/F/3)
	4	g/h/i/4 (G/H/I/4)
	5	j/k/l/5 (J/K/L/5)
	6	m/n/o/6 (M/N/O/6)
	7	p/q/r/s/7 (P/Q/R/S/7)
	8	t/u/v/8 (T/U/V/8)
	9	w/x/y/z/9 (W/X/Y/Z/9)
	0	space, 0 Display frequently used symbols
	*	Display symbols
	#	Switch input methods
123	0~9	0~9
	*	Display symbols
	#	Switch input methods
ENG/eng	2~9	Multitap input, display dynamic English words for your choice.
	*	Display symbols
	#	Switch input methods
Hindi	1~9	Enter hindi characters
	0	space, 0 Display frequently used symbols
	*	Display symbols
	#	Switch input methods

4.2 ABC/abc input

Press # to switch to abc input.



4.3 Hindi input

Press # to switch to Hindi input.



4.4 ENG/eng input

Press # to switch to ENG/eng input.




4.5 123 input


Press # to switch to 123 input. Press the numeric key directly to enter the number.



4.6 Entering symbols

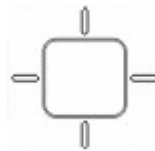

1. Press * to display symbols. Press  for the desired one and press (Ok). Press (Back) to exit the symbol display.

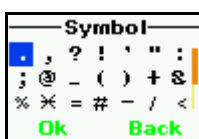

2. In abc/ABC input method, press 1 repeatedly for the frequently used symbols.



5. The menus

5.1 Menu Tree

Main menu	Sub-menu	Sub-menu	Sub-menu
1 Phone book*	1 Search Entry		
	2 Add New Entry		
	3 Delete All		
	4 Copy All		
	5 Caller Group		
	6 Owner Info		
	7 Speed Dial	1 Enable Speed Dial	
		2 Set Number	
	8 Preferred storage		
9 Memory Status			
2 Messages*	1 Write Message		
	2 Inbox		
	3 Outbox		
	4 Message Template		
	5 Message Settings	1 Profile	
		2 Common	
		3 Memory Status	
	6 Voice Mail		
7 Broadcast			
3 Call History*	1 Missed		
	2 Dialed		
	3 Received		
	4 Delete	1 Missed Calls	
		2 Dialed Calls	
		3 Received Calls	
		4 Delete All	
	5 Call Time	1 Last Call Time	
		2 Total Sent	
		3 Total Received	
4 Reset All Time			
6 Call Cost	1 Last Call Cost		

		2 Total Cost	
		3 Reset Cost	
		4 Max Cost	
		5 Price Per Unit	
4 Settings*	1 Phone Setup	1 Time and Date	1 Set Home City
			2 Set Time/Date
			3 Set Time Format
		2 Schedule Power On/Off	
		3 Language	
		4 Input Method	
		5 Display	
		6 Wallpaper	
		7 Screen saver	
		8 Contrast	
	9 Greeting Text		
	10 Dedicated key		
	2 Call Setup	1 Caller ID	1 Set by Network
			2 Hide Id
			3 Send Id
		2 Call Waiting	
		3 Call Divert	1 All Voice Calls
			2 If Unreachable
			3 If No Answer
			4 If Busy
			5 All Data Calls
			6 Cancel All Divert
	4 Call Barring	1 Outgoing	
		2 Incoming	
		3 Cancel All	
		4 Change Barring PW	
	5 Line Switching		
	6 Reminder		
	7 Call Time Display		
	8 Auto Redial		
	9 Call Guard	1 Mode	
		2 Number List	
3 Network	1 Network		
	2 Band		
4 Security	1 SIM Lock		
	2 Phone Lock		

		3 KeyLock	
		4 Fixed Dial	
		5 Panic Button	
		6 Change Pwd.	
	5 Field Phone Security	1 Mobile Tracker No.	
		2 Mobile Tracker Lock	
		3 Change Pwd.	
6 Predict			
7 Restore Factory Settings			
5 File Manager			
6 Games	1 Games		
	2 Game Setting		
7 FM Radio			
8 Profiles	1 General		
	2 Meeting		
	3 Outdoor		
	4 Indoor		
	5 Headset		
9 Extra	1 Calendar		
	2 To Do List		
	3 Alarm		
	4 Calculator		
	5 Converter		
	6 Currency Converter		
10 Shortcuts*			
11 Service*			

*Unavailable when the phone has no SIM card inserted

5.2 Phone book

You can store names and phone numbers in the memory of the phone or SIM card.

- Phone memory stores up to 500 entries.
- The storage of SIM card memory depends on its type. To check your sim card memory please check with your telecom operator.
- In idle, press (Name) to enter phone book list. The storage location of entries is indicated by different icons.

5.2.1 Add New Entry

5.2.1.1 Add New Entry to Phone

Enter phone numbers in idle and press (Save). Select **To Phone** to store it.

Or

1. Select Menu Phone book.
2. Select **Add New Entry** and press (Ok).
3. Select **To Phone** and then press (Ok).
4. Select **Name** and press (Edit). Enter the name and press (Ok).
5. Select **Number** and press (Edit). Enter the number and press (Ok)
6. Press (Done) to save.

5.2.1.2 Add New Entry to SIM

Enter phone numbers in idle and press (Save). Select **To SIM** to store it.

Or:

1. Select Menu Phone book.
2. Select **Add New Entry** and then press (Ok).
3. Select **To SIM** and then press (Ok).
4. Follow instructions in "Add New Entry to Phone" to enter the name and numbers.
5. Press (Done) to save.

5.2.2 Search Entry

1. Select Menu? Phone book.
2. Select **Search Entry** and press (Ok).
3. Enter characters (up to 8 characters), the phone lists matched entries. Press (Clear) to erase the characters entered and press # to switch the input methods.

Notice:

- As characters entered, the entries matched are listed accordingly.
- You cannot find the entries which name is empty.

5.2.3 View

1. In phone book list select the entry you want to view.
2. Press (Option) and select **View**.
3. Press (Ok) to view.

5.2.4 Edit

1. In phone book list select the entry you want to edit.
2. Press (Option) and select **Edit**, then press (Ok).
3. Press (Done) to save.

5.2.5 Delete

There are two ways to delete entries.

1. In phone book list
 - Select the entry you want to delete, press (Option) and select **Delete**. Press (Ok).
 - The message “Delete?” appears in the display.
 - Press (Yes) to confirm and press (No) to cancel the message.
2. Select Menu Phone book. Select **Delete All** and press (Ok).
 - **From SIM**: Delete all entries stored in the SIM card memory.
 - **From Phone**: Delete all entries stored in the phone memory.

5.2.6 Copy

There are two ways to copy entries between the phone and the SIM card memory

1. In phone book list
 - Select the entry you want to copy, press (Option) and select **Copy**. Press (Ok).
 - The message “Copy?” appears in the display.
 - Press (Yes) to confirm and press (No) to cancel the message.
2. Select Menu Phone book. Select **Copy All** and press (Ok).
 - **From SIM**: Copy all entries stored in the SIM card to the phone memory.
 - **From Phone**: Copy all entries stored in the phone memory to the SIM card.

5.2.7 Move

Move entries between the phone and the SIM card memory.

1. In phone book list, select the entry you want to move, press (Option) and select **Move**. Press (Ok).
2. The message “Move?” appears in the display.
3. Press (Yes) to confirm and press (No) to cancel the message.

5.2.8 Caller Group

Set groups of the phone numbers stored in the phone book.

Select one group and press (Ok).

You can edit the group name, set the ring for the group and edit number list.

5.2.9 Owner Info

Set the own number for the different lines. After the own number is set and Show Owner Info function (see 5.5.1.4 Display: Show Owner Info) is activated, the number is shown in the idle display.

1. Select one and press (Option).
 - **Edit**: Edit the name and number.
 - **Erase**: Erase the selected number.

5.2.10 Speed Dial

Select Menu Phone book? Speed Dial.

- **Enable Speed Dial:** Press (On/Off) to activate or deactivate the function.
- **Set Number:** Set the phone number for the relevant numeric key.

5.2.11 Memory Status

Select Menu Phone book Memory Status. The memory status of the SIM card and phone memory is shown in the display.

5.2.12 Preferred Storage

Select Menu Phone book Preferred Storage. Names can be stored in SIM or Phone.

5.3 Messages

You can store up to 200 messages in the phone memory. The SMS memory in SIM varies according to the capacity of SIM card.

5.3.1 Write Message

1. Select Menu Messages Write Message.
2. Write down the message you want. Press (Option) for the following options.
 - **Done:** Complete editing and enter the Send Option display.
 - **Use Template:** Enter template to select one.
 - **Insert Number :** Sending contact info to others.
 - **Insert Object:** Insert objects including the picture, animation, melody, sound.
 - **Format Text:** Set the text style, alignment, new paragraph.
3. In the Send Option display, there are for the following options:
 - **Send Only:** You can enter recipient's phone number directly or press (Search) to select one entry from the phone book. Press (Ok) to send the message.
 - **Save and Send:** You can enter recipient's phone number directly or press (Search) to select one entry from the phone book. Press (Ok) to send the message. After the message is sent, it will be saved to Outbox.
 - **Save:** Save the message to Outbox.
 - **Send To Many:** You can send up to 10 recipients at one time.

5.3.2 Inbox

1. Select Menu Messages Inbox. The messages you have read and unread are listed here.
2. When view a detailed message, press (Option) for the following options:

-
- **Reply:** Reply to the message.
 - **Forward:** Forward the message to other person.
 - **Edit:** Edit the message.
 - **Delete :** Delete the message.
 - **Delete All:** Delete all messages in Inbox.
 - **Use Number:** List the number of the sender as well as contained in the message for you to dial or store to the phone book.
 - **Save Objects:** Save the objects in the message to the C:\.

5.3.3 Outbox

1. Select Menu Messages Outbox. Messages sent successfully are listed here. Press (OK) to read the selected message.
2. When view a detailed message, press (Option) for the following options:
 - **Send:** Send the message again.
 - **Edit:** Edit the message.
 - **Delete :** Delete the selected message.
 - **Delete All:** Delete all messages in Outbox.
 - **Use Number:** List the number of the recipient as well as contained in the message for you to dial or store to the phone book.

5.3.4 Message Template

The phone has preset 10 templates for you to use when write the message. These templates can be modified

1. Select Menu Messages Message Template.
2. Select a template, press (Option) for the following options:
 - **Edit:** Edit the selected template.
 - **Erase:** Clear the contents of the selected template.

5.3.5 Message Settings

Select Menu Messages Message Settings.

Profile

- Edit the number of the message service center. With the SIM card inserted, the phone automatically searches for the number. You need to make sure the number is correct before sending and receiving the message.
- Select the period for the message saved. It is the time the service center's attempt to send the message. Please contact the network operator for more information.
- Select the format of the message to be sent. Please contact the network operator for more information.

Common

- **Delivery Report:** Get the delivery report when the message is successfully delivered to the recipient.
- **Reply Path:** Whether to use the service center which send the message to reply.

Memory Status

-
- Check the message memory status of the SIM and the phone.

5.3.6 Voice Mail

Select Menu Messages Voice Mail. Set a voice mail number. When connecting, you can call and listen to the voice mail.

Notice: If you have set the voice mail number, press and hold 1 in idle to dial the corresponding number.

5.3.7 Broadcast

This function needs to be supported by the network. Please contact the network operator for more information.

Before using the Broadcast, you need to:

1. Set Receive Mode to On.
2. Set the channel title and ID. You can store up to 10 channels.
3. Set the language.
4. The contents of the Broadcast is shown in the idle display.
5. Select **Read Message** to view the Broadcast (up to 3 messages) you have received. The old message will be replaced by the latest one.

5.4 Call History

5.4.1 Missed Calls/Dialed Calls/Received Calls

The phone registers the phone numbers of missed, dialed and received calls (up to 10 records each).

Below takes Missed Calls for example.

1. Select Menu Call History Missed.
2. Press (Ok) to view the selected record.
3. Press (Option) for the following options:
 - **Delete**: Delete the record.
 - **Save**: Save the phone number to phone book.
 - **Dial**: Dial the phone number.
 - **Edit**: Pick the phone number to the idle display to modify, then save or dial.

5.4.2 Delete

Select Menu Call History Delete. You can choose to delete records of missed calls, dialed calls or received calls respectively or delete them at one time.

5.4.3 Call Time

Select Menu Call History Call Time. You can view last call time, total sent time, total received time and reset all time.

5.4.4 Call Cost

This function needs to be supported by the network.

1. Select Menu Call History Call Cost.
 - **Last Call Cost:** Check the last call cost.
 - **Total Cost:** Check the total cost.
 - **Reset Cost:** You are asked to enter the PIN2 before resetting the cost.
 - **Max Cost:** Set a limit to the total call cost. You can not make a pay call when call goes beyond the limit. You are asked to enter the PIN2 to activate it.
 - **Price Per Unit:** Enter a currency base to calculate the call cost. You are asked to enter the PIN2 to activate it.

5.5 Settings

5.5.1 Phone Setup

5.5.1.1 Time and Date

1. Select Menu Settings Phone Setup Set Time/Date.
2. Set the home city, time, date and the format.
3. Press (Ok) to save.

5.5.1.2 Schedule Power on/off

Select Menu Settings? Phone Setup? Schedule Power on/off.

5.5.1.3 Language

Set a language for the display language. The preset language is English.

1. Select Menu Settings Phone Setup Language.
2. Select the desired one and press (Ok) to save.

5.5.1.4 Input Method

1. Select Menu Settings Phone Setup? Input Method.
2. Select the desired one and press (Ok) to save.

5.5.1.5 Display

Select Menu Settings? Phone Setup? Display.

- **Off:** Hide date, time and Owner Info in idle display.
- **Show Date and Time:** Show date and time in idle display.
- **Show Owner Info:** Show the own number in idle display. To show the number, you should first store the own number in the phone book.

5.5.1.6 Wallpaper

1. Select Menu Settings? Phone Setup? Wallpaper.
2. Select a picture then press (view) to view.
3. Press (Ok) to save.

5.5.1.7 Screen Saver


Select Menu Settings? Phone Setup? Screen Saver.

- **Settings:** You can activate or deactivate this function, and can set the waiting time.
- **Select:** Choose a picture as screen saver.

5.5.1.8 Contrast

1. Select Menu Settings? Phone Setup? Contrast.



2. Press  to adjust the contrast
3. Press (Ok) to save.

5.5.1.9 Greeting Text

Select Menu Settings? Phone Setup? Greeting Text.

If you edit the text and activate the function, the text is shown in the display each time you power the phone on.

Set the status on or off. Enter the greeting texts. Press (Done) to save.

5.5.1.10 Dedicated key

1. Select Menu Settings? Phone Setup? Dedicated key
2. Press (Edit) to designate shortcut function for navigation keys.
3. Press (Ok) to save.

5.5.2 Call Setup

5.5.2.1 Caller ID

Select Menu Settings? Call Setup? Caller ID. Decide whether to send the phone number to the person you are calling. This needs to be supported by the network.

- **Set by Network:** Send or hide the phone number depending on the network.
- **Hide Id:** Hide the phone number to the person you are calling. You may fail to make a call with this function in some areas. Please contact the network operator for more information.
- **Send Id:** Send the phone number to the person you are calling.

Select the desired one and press (Ok) to save.

5.5.2.2 Call Waiting

Select Menu Settings? Call Setup? Call Waiting.

This function allows you to put the current call on hold and then make or answer a second one. You can switch between calls.

5.5.2.3 Call Divert

Select Menu Settings? Call Setup? Call Divert.

With this function you can divert the incoming calls to a specified number.

- **All Voice Calls:** Divert all voice incoming calls.
- **If Unreachable:** Divert incoming calls when the phone is outside the network service area.
- **If No Answer:** Divert incoming calls when they are not answered.
- **If Busy:** Divert incoming calls when the phone is busy.
- **All Data Calls:** Divert all data incoming calls.
- **Cancel All Divert:** Cancel all divert calls.

Press (Ok) when done.

5.5.2.4 Call Barring

Select Menu Settings? Call Setup? Call Barring.

Call barring is a network-dependant service. Please contact your network operator for more information.

Outgoing

- **All Calls:** Bar all outgoing calls except the emergency call.
- **International Calls:** Bar outgoing international calls.
- **International Except Home:** Bar outgoing international calls except calls to the home country.

Incoming

- **All Calls:** Bar all incoming calls.
- **When Roaming:** Bar incoming calls when roaming.

Press (Ok) to save.

5.5.2.5 Line Switching

Select Menu Settings? Call Setup? Line Switching. Select to use Line 1 or Line 2.

Press (Ok) to save.

5.5.2.6 Reminder

Select Menu Settings? Call Setup? Reminder.

- **Off:** Deactivate the reminder.
- **Single:** Remind you only once during the period you set.
- **Periodic:** Remind you every XX seconds during the period you set.

Press (Ok) to save.

5.5.2.7 Call Time Display

Select Menu Settings? Call Setup? Call Time Display.

If this function is activated, Call time will display when call end.

5.5.2.8 Auto Redial

Select Menu Settings? Call Setup? Auto Redial.

If this function is activated, the phone redials the number up to 10 times automatically if the call is not answered.

5.5.2.9 Call Guard

Select Menu Settings? Call Setup? Call Guard.

- **Mode** : Press (On/Off) to activate or deactivate this function.
- **Number List**: set the numbers you want to reject.

5.5.3 Network

5.5.3.1 Network

The phone should access the network before making and receiving calls.

Select Menu Settings? Network? Network.

- **Automatic**: The phone selected automatically a network available.
- **Manual**: The phone lists networks available for your choice.

5.5.3.2 Band

The phone provides 900, 1800 and Dual Band for your choice.

5.5.4 Security

Select Menu Settings? Security.

5.5.4.1 SIM Lock

Select Menu Settings? Security? SIM Lock. You are required to enter the PIN before changing its status.

With this function activated, the phone asks for a PIN each time you power the phone on. If the PIN is entered incorrectly three times in a row, you need to unblock it using the PUK. The PIN and PUK are provided by the network operator.

5.5.4.2 Phone Lock

Phone lock protects the phone from being unauthorized use. With this function activated, you need to input the password of the phone to unlock it.

You are required to enter the password before changing its status. The preset password is "1122".

Select Menu Settings? Security? Phone Lock. Enter the password and press (Ok).

5.5.4.3 KeyLock

Select Menu Settings? Security? KeyLock. Select the time for the KeyLock and press (Ok).

5.5.4.4 Fixed Dial

If the SIM card supports fixed dial function, you can set limitations on the numbers you can call. PIN2 is required to activate it.

Select Menu Settings? Security? Fixed Dial. You can activate or deactivate the fixed dial. PIN2 is required to change the mode. Press (Ok) to save.

Notice :

- The amount of the fixed dial you can set depends on the type of the SIM card.
- Emergency call in some networks is allowed with this function activated.

5.5.4.5 Panic Button

Select Menu Settings? Security? Panic Button

Step1: Switch on Panic Button mode

Step2: Enter the message that you would like to go at the time of Panic or Emergency. The number of characters must be less than 140

Step3: Add the Mobile Number(s) which will receive the message (that you defined in Step2) at the press of Panic Button. The total numbers cannot exceed 5

Step4: Come out of the application.

Now whenever you feel uneasy or in case of any emergency long press of 5 key will send the panic message to the mobile numbers defined by you.

5.5.4.6 Change Pwd.

You can change the PIN, PIN2 and the phone password. Select Menu Settings? Security? Change Pwd.

You need to activate the SIM Lock before changing the PIN. First enter the old PIN to verify then enter the new PIN.

When change the password, you need to enter the new password and enter it again to confirm it.

The password should be 4~8 digits from 0 to 9. Press (Ok) when done.

5.5.5 Field Phone Security

Select Menu Settings? Field Phone Security.

Note: With this function activated, you need to input the password of the phone to unlock it.

5.5.5.1 Mobile Tracker No.

Select Menu? Settings? Field Phone Security? Mobile Tracker No..

Please enter and save any other mobile no on which default SMS will be sent.

Whenever you insert a new sim in the phone an SMS will send to Mobile Tracker No.

by using the new sim and the default message will be

“Dear customer, Your Phone (IMEI*****) is now used by the SMS sender No. If your phone is stolen or lost, please inform to the concern authorities.”

5.5.5.2 Mobile Tracker Lock

Select Menu? Settings? Field Phone Security? Mobile Tracker Lock.

5.5.5.3 Change Pwd.

You can change the Lock password. Select Menu Settings? Field Phone Security? Change Pwd.

When change the password, you need to enter the new password and enter it again to confirm it.

The password should be 4~8 digits from 0 to 9. Press (Ok) when done.

5.5.6 Restore Factory Settings

Reset some settings to factory default.

Select Menu Settings? Restore Factory Settings.

Notice: The phone's password is also required when restore to the factory settings. The preset password is “1122”. If you forget your password, please contact the local service provider's service center.

5.6 File Manager

The file manager stores the images and audio received via EMS. You can check the total memory and free memory.

Select Menu File Manager.

5.6.1 Images

Press (Open) and select Images. Press (Open) for the following options:

- **View:** View the image.

-
- **Forward:** Forward the image via EMS.
 - **Detail:** Check the date saved and size of the image.
 - **Rename :** Rename the image.
 - **Delete :** Delete the image.
 - **Delete All Files:** Delete all images.

5.6.2 Audio

Press (Open) and select Audio. Press (Open) for the following options:

- **Play:** Play the audio.
- **Forward:** Forward the audio via EMS.
- **Detail:** Check the date saved and size of the audio.
- **Rename:** Rename the audio.
- **Delete:** Delete the audio.
- **Delete All Files:** Delete all audio.

5.7 Games

The phone comes with two games: memory and puzzle.

Before starting the game, you can

- Set the game audio on or off by selecting Menu Games Game Setting.
- View the game rules by selecting Menu Games Games. Then select one game and Game Help.

5.8 FM Radio

Select Menu? FM Radio.

Press the related keys of earphone to increase or decrease volume.

Press **Up arrow key** or **Down arrow key** to increase or decrease the volume of speaker.

Press **Left arrow key** or **Right arrow key** to decrease or increase the frequency.

Press **Right Soft key** to exit.

Press numeric keys to switch to the related preset channel, press and hold numeric keys to store up the current frequency in related channels.

Press **Left soft key** (Option) for the following options:

- **Play:** Turn on or off the FM radio.
- **Channel List:** View and edit the channel.
- **Manual Input:** Directly input a frequency for FM radio.
- **Preset Auto Search:** Auto search and preset the channel.
- **Speaker:** Press **Left soft key** (On/Off) to switch the speaker on or off.
- **Sound Recorder:** Record current broadcasting content.
- **Settings:** Play FM background or not.

5.9 Profiles

Select Menu Profiles. The preset profile is General.

Tip: The handset supports TRUE TONES.

5.9.1 Activating a profile


Select one profile you want and press (Option). Select **Activate** and press (Ok). The activated profile is ticked.


5.9.2 Customizing a profile


You can customize a profile to suit your needs. Select one profile you want and press (Option). Select **Customize** and press (Ok).


Below takes General for example to explain how to customize the profile.

5.9.2.1 Tone Setup

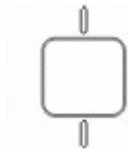


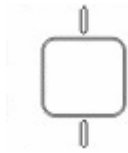
- **Call:** Press  to select the ring and press (Ok) to save.
- **Alarm:** Select a ring when alarm time reaches. See “Call” for detailed operations.

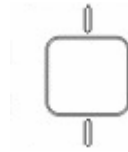

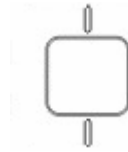- **Power On:** Select a ring when the phone is powered on. Press  to select the ring and press (Ok) to save.
- **Power Off:** Select a ring when the phone is powered off. See “Power On” for detailed operations.
- **Message:** Select a tone when a message has been received. See “Power On” for detailed operations.
- **Keypad Tone:** Select a tone when the key is pressed. The options include Silent, Click and Tone.

5.9.2.2 Volume

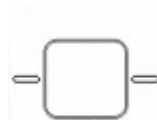

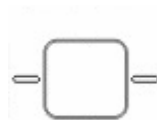Set the volume level for ring and key tones. Press  to adjust the volume and press (Ok) to save.

5.9.2.3 Alert Type

Set the alert type to Ring, Vibration Only, Vibrate and Ring, Vibration Then Ring, Light

Only.

Press (Ok) to save.

5.9.2.4 Ring Type

Set the ring type to Single, Repeat, or Ascending. Press (Ok) to save.

5.9.2.5 Extra Tone

Press (On / Off) to tick it and press (Done) to save.

5.9.2.6 Answer Mode

Set the answer mode to **Any Key** or not.

Press (On / Off) to tick it and press (Done) to save.

5.9.2.7 LCD Backlight


Set the duration of the LCD backlight.

Press (Ok) to save.

5.10 Extra

5.10.1 Calendar

1. Select Menu? Extra? Calendar. The calendar is shown in the display.

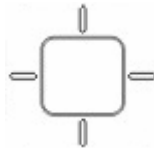

2. Press  to view.

3. Press (Option) for the following options:

- **To do List:** Enter task list to view them.
- **Jump to Date:** Enter the date (from 2000/01/01 to 2030/12/31) you want to go, and then press (Ok).

5.10.2 To do List

This function allows you to keep a list of up to 10 tasks that you need to do.

1. Select Menu? Extra? To do List.

2. In the task list, press (Option) for the following options:

- **Add:** Add a new task. Enter date, time, note and so on. Press (Done) to save.
- **Edit:** Edit the selected task.
- **Delete :** Delete the selected task.
- **Delete All:** Delete all tasks.

When the alarm is set on and the alarm time reaches, the phone rings or vibrates. You can

press (Ok) or  to turn off the alarm.

5.10.3 Alarm

Set up the alarm clock.

1. Select Menu? Extra? Alarm.
2. Select one alarm and press (Edit).
3. Set the alarm off/ once/ every day, the alarm time.
4. Press (Done) to save.

Notice: When the alarm time reaches, the phone reminds you even when it is powered off.


When the alarm time reaches, the phone rings or vibrates.

- Press (Stop) to turn off the alarm.
- Press (Snooze) to turn off the alarm temporarily. It reminds you again about 4 minutes latter. If you do not handle the alarm, it by default reminds you again about 4 minutes latter.

5.10.4 Calculator

The calculated numbers cannot exceed 8 digits due to accuracy limitation.

1. Select Menu? Extra? Calculator.
2. Key definitions in the calculator function are shown below.

	Select the operator
#	Decimal point
Left soft key	Equal, confirm
Right soft key	Erase numbers entered Erase the result and return to the initial state Exit the calculator


5.10.5 Converter

Select Menu? Extra? Converter. Press (Ok).

5.10.5.1 Weight

1. With the first line highlighted, press (Change) to select the conversion unit.




2. Press  to highlight the unit you want to convert. Press (Edit) to enter the


value and then press (Ok) for the result.


5.10.5.2 Length

See "5.10.5.1Weight" for detailed operations.

5.10.6 Currency Converter


1. Select Menu? Extra? Currency Converter.
2. Press (Edit) to set the currency rate. Enter the rate and then press (Ok).
3. Press .

4. Press  to highlight the Rate line. Press (Change) to change the rule.

5. Press  to highlight the Local line. Press (Edit) to enter the value and then press (Ok) for the result

5.11 Shortcuts


Set the frequently used functions as shortcuts. Then you can quick access it by

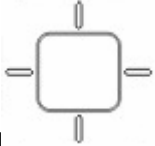pressing .

 is preset for Calendar,  for Shortcuts,  for Write

Message and  for Profiles.

1. Select Menu? Shortcuts.



2. Press  to select the function and press (Ok) to save.

5.12 Service

Select Menu? Service.

The content of the service depends on the SIM card. Please contact the operator for detailed information.

6. Troubleshooting

Problem	Possible cause	Solution
Unable to power on	● Is the battery power low?	● Please charge the battery.
	● Do you press  long enough?	● Please press and hold  for 2 seconds or longer.
	● Is the battery installed correctly?	● Please install the battery correctly.
Unable to make a call	● Is the phone outside of the service area?	● Move to a place where signal can be received strongly.
	● Is the number you dial correct?	● Check the number and dial again.
Communication interrupted suddenly	● Is the phone outside of the service area?	● Move to a place where signal can be received strongly.
	● Are you moving in high speed during conversation?	● The signal will interrupt when the phone switch between 2 cell station. Please move in low speed.
Insert the SIM card	● Do you insert the SIM card correctly?	● Please insert the SIM card correctly.
	● Is the SIM card connector dirty?	● Please clean the SIM card.
	● Is the SIM card damaged?	● Please check the SIM card and return it to the service provider.
Unable to charge the battery	● Is the charger plugged to the phone correctly?	● Please plug the charger to the phone correctly.
	● Is the connections OK?	● Please check the connection.
	● Is the battery old?	● Replace the phone with a new battery.

7. After-sale service

For after-sale service, please refer to Warranty Card attached to this booklet.



Spice Mobiles Limited,
D-1, Sector 3, Noida - 201301
Uttar Pradesh, India
www.spicemobile.in