


Spice S-705




User Manual








Copyright©2008 Spice Mobiles Ltd.

CONTENTS

YOUR PHONE	1
STANDBY MODE	3
GETTING STARTED.....	4
INSTALLING THE SIM CARD AND THE BATTERY	4
CHARGING THE BATTERY	7
SWITCHING THE PHONE ON AND OFF	8
CALL FUNCTIONS.....	9
MAKING A CALL	9
ANSWERING OR REJECTING AN INCOMING CALL ..	10
CALL WAITING.....	10
MAKE A CONFERENCE CALL	10
TIPS FOR CALL OPTIONS	11
INPUT METHOD.....	12
PHONE BOOK 	15
QUICK SEARCH	15
SEARCH ENTRY	17
ADD NEW ENTRY.....	17
COPY	18
DELETE	19
MOVE	19
CALLER GROUP.....	19
SEARCH BY CALLER GROUP	20
EXTRA NUMBER	20
CALLER PICTURE.....	22

 
CALLER RING TONE	22
CALL HISTORY 	22
MISSED CALLS	23
DIALED CALLS	23
RECEIVED CALLS	24
DELETE CALL LOG	24
CALL TIME	24
CALL COST	25
SMS COUNTER	25
GPRS COUNTER	26
SERVICES 	26
WAP	26
<i>Homepage</i>	27
<i>Bookmarks</i>	27
<i>Recent Pages</i>	28
<i>Enter Address</i>	28
SERVICE INBOX	28
<i>Settings</i>	29
MESSAGES 	32
SMS (SHORT MESSAGE SERVICE)	32
<i>To write a message</i>	33
<i>To read messages</i>	34
<i>To send a message</i>	35
MMS (MULTIMEDIA MESSAGE)	39
<i>To write a MMS</i>	39
<i>To send a MMS</i>	41

<i>Inbox</i>	42
<i>Outbox</i>	43
<i>Drafts</i>	44
<i>Template</i>	45
<i>MMS Settings</i>	45
CHAT	48
<i>To start chatting</i>	49
VOICE MAIL SERVER.....	50
BROADCAST MESSAGE	51
FILE MANAGER 	52
DRM RIGHTS	52
MEMORY CARD.....	52
ORGANIZER 	53
CALENDAR	53
TO DO LIST.....	55
ALARM.....	55
CALCULATOR.....	59
MUSIC PLAYER 	60
<i>Play the music</i>	60
MEDIA CENTER 	63
CAMERA	63
GAMES	65
IMAGE VIEWER	66
VIDEO RECORDER	68
VIDEO PLAYER	70

SOUND RECORDER.....	72
FM RADIO	73
SCHEDULE FM RECORD	75
SETTINGS 	76
USER PROFILES	76
<i>To activate the User Profiles.....</i>	<i>76</i>
<i>To edit the Profiles.....</i>	<i>77</i>
PHONE SETTING.....	78
TIME AND DATE	78
SET HOME CITY	78
SET TIME/DATE	78
SET FORMAT	79
SCHEDULE POWER ON/OFF	79
LANGUAGE.....	79
<i>Preferred Input Method.....</i>	<i>80</i>
DISPLAY SETTING	80
<i>Greeting Text</i>	<i>82</i>
SPEED DIAL	82
<i>Dedicated Key</i>	<i>83</i>
<i>Flight Mode</i>	<i>83</i>
<i>Misc Setting</i>	<i>83</i>
<i>Shortcuts.....</i>	<i>84</i>
CALL SETTING.....	86
<i>Caller ID</i>	<i>86</i>
<i>Call Waiting.....</i>	<i>86</i>
<i>Call Divert</i>	<i>87</i>
<i>Call Barring</i>	<i>88</i>
<i>Line Switching.....</i>	<i>88</i>

<i>Call Time Reminder</i>	89
<i>Call Time Display</i>	89
<i>Auto Redial</i>	89
<i>Closed User Group</i>	89
NETWORK SETTING	90
<i>Network Selection</i>	90
<i>Preferred Network</i>	90
<i>GPRS Connection</i>	92
SECURITY SETTING	92
<i>SIM Lock</i>	92
<i>Phone Lock</i>	92
<i>Auto Keypad Lock</i>	92
<i>Fixed Dial</i>	93
<i>Barred Dial</i>	93
<i>Change Password</i>	93
<i>Restore Factory Settings</i>	93
GENERAL INFORMATION	94
ACCESSORIES	94
BATTERY CARE	94
ACCESS CODES	96
CARE AND MAINTENANCE	97
IMPORTANT SAFETY INFORMATION	99
EMERGENCY CALLS	104

Your Phone

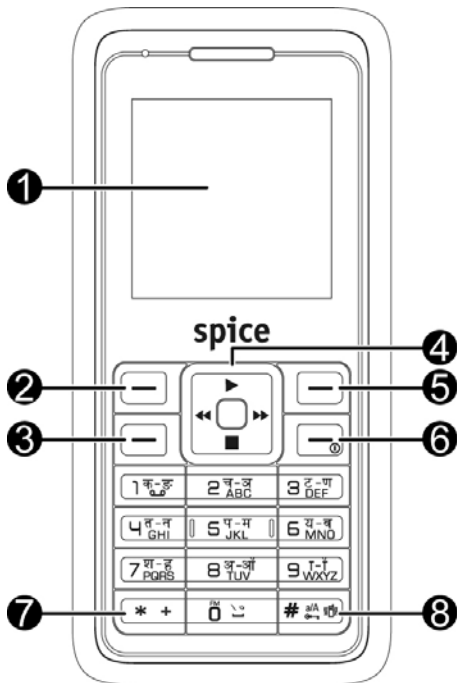

1. Main display
2. Left soft key (LSK)
3. Talk key/Yes key
4. Navigation keys
5. Right soft key (RSK)
6. Power on/End call
7. * key
8. # key



Side key- Volume (+ -)

- During a call, adjusts the earpiece volume.



Soft key

- The current functions are displayed in the bottom line of LCD. Access main menu and phonebook accordingly.



Off Hook

- To make phone call when dialing phone number or pick up a phone call



On Hook

- To hand on a call during a call
- Or power on/off use.



Navigation key

- In standby mode, quick access to

- ↑ Spice Gang
- ← Write Message
- Music Player
- ↓ Shortcut




OK/Confirm key



Number key



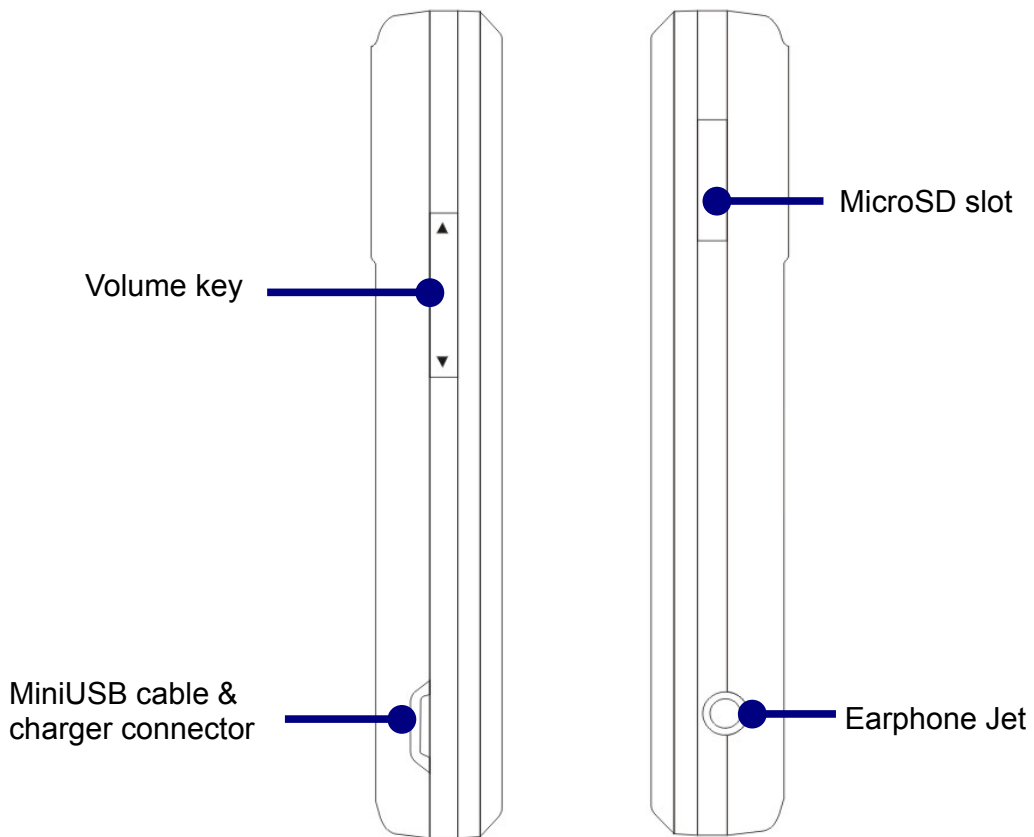











- Input number or characters



Standby Mode

In the main display, you may see several icons showed on your status bar.

The meaning of icons are explained in the below:

	The signal strength of the cellular network at your current location
	The battery charge level
	Phone locked
	Phone is in general, indoor profile (Alert type: Ring)
	Phone is in outdoor profile (Alert type: Ring and vibrate)
	Phone is in meeting, silent profile (Alert type: Vibrate only)
	Alert type: Ring than vibrate
	Alert type: Light only
	Phone is in headset profile
	The alarm clock is to set on
	You are in roaming
	Message(s) received
	Missed call
	Call forward; All your calls are diverted to another number


Getting Started

Installing the SIM card and the battery


You need to insert the SIM card and charge the battery before using the phone.

- Keep all miniature SIM cards out of the reach of little children.
 - Be careful to handle, insert or remove the SIM card since the SIM card and its contacts can easily be damaged by scratched or bending.
 - Before installing/removing the SIM card, always make sure that the phone is switched off.
1. Put your thumb on the button located on the top of the phone as indicated by the down-side arrow in the left-side picture **(A)** below. Then, press down and drag toward to the direction as shown by right-side arrow in the left-side picture **(A)**. Detach the battery cover from the mobile phone itself **(B)**.

(A)

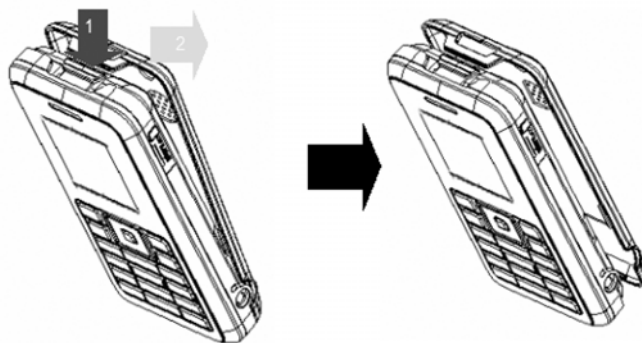


(B)

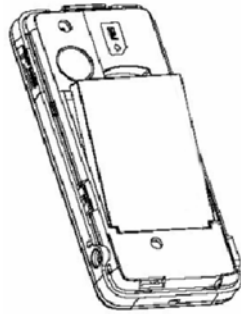


2. Insert and slide the SIM card **(C)**, battery **(D)** and battery cover **(E)**.


(C)

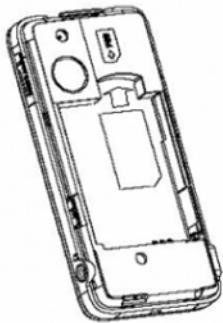

(D)

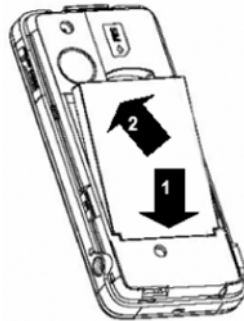

(E)

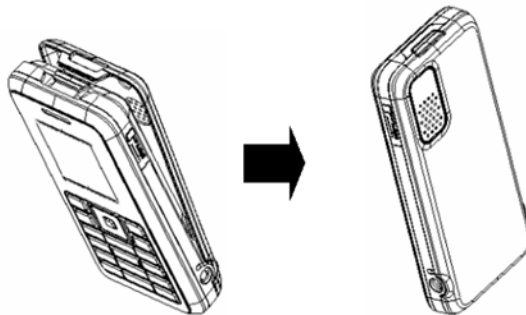

Change the front cover

Spice S-705 is designed with an exchangeable front cover. User is allowed to change the front cover according to personal preference.



Step1: press and hold the Battery Cover lock at position as shown in the picture

Step2: Remove Battery Cover

Step3: Remove Front Cover by pulling from the top in the direction as shown in the picture

Step4: Remove Key Pad from Front Cover

Insert the MicroSD card

Spice S-705 is designed to support expansion card—MicroSD card slot. Before inserting the MicroSD card, please make sure the golden pad side needs to be faced up, as shown below:



Charging the battery

You must fully charge the battery before using your phone for the first time.

1. Connect the lead of the travel adapter to the socket on the left of your phone **(A)**.
2. Connect the charger to an AC wall outlet **(B)**.

(A)





(B)





Notes:


1. You can use the phone while the charger is connected but charging is suspended during that time.
2. When the battery level is weak as indicated by “” on the display, you will hear a warning sound. When the battery level becomes too low as indicated by “” on the display, the phone will be switched off automatically.

Switching the phone on and off

- Press and hold  key.




Notes:

1. If the phone shows “Insert SIM” when SIM card is properly inserted, contact your network operator or service provider.
2. You can also use the phone without SIM card. The workable functions would include multimedia, profiles, Organizers & time and date except the dialing out and receiving the phone call.
3. If the phone asks PIN code, key in the PIN code, and press  left soft key (LSK) to confirm.
4. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



Call Functions

This gives you information about the calling service supported in your phone.

 

Making a call

In standby mode, key in the number, including the area code, press  key.

Making a call from the Phone Book


1. In standby mode, press  right soft key to enter **Contact**, select one name or key in the name in the search bar, followed by pressing  key to call.
2. You could also press **Menu** and choose to enter **Contact** submenu to make a call.

Making an international call



1. For international calls, double-press  key for the international prefix (character +).
2. Key in the country code, area code and the phone number.
3. Press  to call.

Answering or rejecting an incoming call


To answer the incoming call

- Press  to answer the call.

To reject the incoming call


- Press  to reject the call.
- You can also reject an incoming call by doing the following steps:
 - Press  (LSK) when the phone rings.
 - Select “Deflect” option to reject the call.

Call Waiting

You can answer another incoming call while you have a call in progress. During a call, press  left soft key (LSK) to enter option menu to hold a call.

Make a conference call

You can make a conference call while you have multi calls in progress.

1. Make a call to the first participant.
2. Call the second participant by pressing **Option** during an active call, and select **New call** to make a new call during an active call.
3. Press  LSK and select **Conference**. This joins the calls to the conference.
4. Repeat step 2 and 3 to allow new participants to be connected to the conference call.
5. Press **Options** and select **End all** to end the

call. Or press .

6. Any call (participant) can be disconnected by pressing Option and select End single.

Tips for call options

A call can be connected to any single caller by pressing **Option**. When you press **Option** during an active call, you would have following functions as listed in below:

1. **Hold**: put a call on
2. **End**: End a call.
3. **New call**: make a new call during an active call.
4. **Contact**: shortcut to Contact menu.
5. **SMS**: shortcut to Write message menu.
6. **Sound Recorder**: to record your conversation during an active phone call.
7. **Mute on/off**: set On/ Off to mute the call during the conversation.
8. **DTMF**: set On / Off for DTMF (Dual Tone Multi-Frequency) tone dialing system.

Input method

You can type text by using the traditional method or predictive smart input. You can enter letters individually or with predictive text entry, which helps you complete words as you enter them. You can enter letters in upper case, lower case, or both, or insert symbols. Your phone is designed to support **English** and **Hindi** languages.

To select input method

You can select the preferred language from **Setting>Phone Setting>Language**.

 


Note: The option of **Automatic** in **Language** depends on your service provider and languages supported by your phone. If you select **Automatic**, your phone will auto detect the language supported by your SIM and phone.

 
A quick way to change input method:

Short Press  to change the input method.

To insert a space

 
 
 
 

 
 
 
 
 
 
 
In multi-tap or T9 input method, you could use  key to insert spaces.

Traditional English input

Your phone provides Multi-tap function. For example, press  key twice to display letter B, and press three times to display letter C.

The character tables (English and Hindi) below display the characters when you press the keypad using English or Hindi input methods.

Characters Table










Key	Unshifted and shifted Character
	क ख ग घ ङ क ख ग १
	A B C a b c 2 च छ ज झ ञ २
	D E F d e f 3 ट ठ ड ढ ण ३
	G H I g h i 4 त थ द ध न ४
	J K L j k l 5 प फ ब भ म ५
	M N O m n o 6 य र ल ळ व ळ ६
	P Q R S p q r s 7 श ष स ह ७
	T U V t u v 8 अ आ इ ई उ ऊ ऋ ए ऐ ८
	W X Y Z x y z 9 ऋ ऌ ऍ औ ऋ ऌ ९
	SPACE 0 F.M. ० ० । ॐ ॥ ०
	* # @ \$ B ! ? ~ 4 % & ' " ^ /
	In Idle mode, short press to type # symbol, long press to activate vibrator, press after RSK to lock keypad. In Edit mode, press to change the input methods.

Text entry with “T9”

“T9” uses a built-in dictionary to recognize the most commonly used word for every sequence of key presses.

The selected input method will be shown the icon in the indication bar. You can choose to turn on or off your T9 input method in option list.

Input Methods options available:

 ABC	Multitap ABC
 Abc	Multitap Abc
 abc	Multitap abc
 ABC	Smart ABC
 Abc	Smart Abc
 abc	Smart abc (English Smart mode)
 123	Numeric
 Hindi	Hindi
 Hindi	Smart Hindi



Notes:

You can also Insert Symbol in Input Method. Press **Messages>SMS>Write Message>Option>Input Method>OK>Insert Symbols**. The phone offers 36 special symbols. Use four ways navigation keys to highlight the symbol you want to insert and press **OK** to select it.

Phone Book





Your phone book is saved either in the SIM card's memory or Phone's memory. You can also choose to save in both memories.


Quick Search

Allow you to search names and numbers saved in the contacts.

To search a number and a name:

In **Phone Book** menu, key in full name or first character of contact person's name through **Quick Search** or **Search Entry**. The contact list will automatically jump to the contact list with the character you have entered or the matched contact will be shown.

1. Also, you can review the contact list by scrolling up/down the navigation key . Select the one you wish to call by pressing  to start making a call.


Press  (Center-OK key) or **Option** to edit the selected phone number.

Your phone provides the following selections for **Entry Option**:

- **Send SMS**: Allow you to send the SMS to the selected person.
- **Send MMS**: Allow you to send the MMS to the selected person.
- **View**: Allow you to read the contact person's information.
- **Edit**: Allow you to edit name & phone number of the contact person.
- **Delete**: Allow you to delete the selected contact person's information.
- **Copy**: Allow you to copy the contact person's information to phone or SIM. (depend on where you have saved the phone number.)
- **Move**: Allow you to move the select contacted person's information to phone or SIM.
- **Duplicate**: Allow you to duplicate the selected contact person's information to the same memory storage.
- **Send vCard**: Allow you to send vCard to the selected contact person. Press **OK** to select sending vCard by **Send By SMS**, **Send By MMS** or **Save to File**.

Search Entry

Allow you to search names and numbers saved in the **Phone Book** by keying in the character.

1. In **Phone Book** menu, select **Search Entry**.
2. Key in full name or 1st letter of the name you wish to call. The matched contact will be shown.
3. Press  to start making a call.
4. The option list will be the same as you process quick search function.




Note: To quick change the input method, short press pound (#) key.

Add New Entry

Allow you add new name and number in the **Phone Book** saved in either in phone or SIM memory.

 
To add a phone number and a name in phone book.

1. In **Phone Book** menu, choose **Add New Entry**, select **Storage Location: To SIM card or To Phone**, press **OK** or  center key. Also, you may add contacts directly from idled screen by entering the numbers.
2. Key in the name, press **OK** and use navigation key to select the number column, and key in the phone number.

3. You may also edit the name, home number, company name, email address, office number, fax number, birthday, image, ring tone and caller group for individual contact if you choose to save the contact in phone instead of SIM card.



Notes:

1. Your phone allows you to save 1000 entries of phone numbers.
2. During editing the contact number, you may change the input method anytime by short pressing  .

Copy

You can copy and transfer your phone data from SIM card to your phone (or from phone to SIM).

1. In **Phone Book** menu, select **Copy**.
2. Choose an item from **All From SIM**, **All From Phone** or **One by One**, and press **OK**.

Delete

Your phone allows you to delete all numbers and names stored in the **Phone Book**.

1. In **Phone Book** menu, select **Delete**.
2. Choose **All From SIM**, **All From Phone** or **One by One**, and press **OK**.

Move

Your phone allows you to move all numbers and names stored in the **Phone Book**.

1. In **Phone Book** menu, select **Move**.
2. Choose **All From SIM**, **All From Phone** or **One by One**, and press **OK**.

Caller Group

You can send a message to all members of a group at the same time through this setting.

To add a name in a Caller Group:

1. In **Phone Book** menu, choose **Caller Group**, and press **OK**.
2. Choose one group from caller group list, and press **OK**.
3. You are allowed to edit ring tone, and pictures.
4. Choose **Member List**, press **OK**.
5. Press **Add**, and then choose from **Phone Book**.



Notes:

1. Your phone provides 5 caller groups including: **Friends, Family, VIP, Business & Others.**
2. You need to store contacts into phone if you want to add contacts into Caller Group function.

Your phone provides the following selections for your option:

- **Group Name:** Groups includes **Friends, Family, VIP, Business and Others.** You are allowed to edit the group name.
- **Ring Tone:** Allow you to set the profile of ring tone for this particular call group
- **Pictures:** Allow you to set a picture for the group.
- **Member List:** Allow you to add a member in the specified group.

Search By Caller Group

You can search your contact list by group. There are 5 different default caller groups: **Friends, Family, VIP, Business and Others.**

Extra number

Allow you to edit **Owner Number, Service Dial Number** and **SOS Number** for your personal preference.



Note: Your service provider may program some special phone numbers into your SIM. It is not possible to modify the Service Dial Numbers if it is not supported.

Settings

Your phone provides you various setting options to personalize your phone, including:

1. **Memory Status:** You can check what percentage of the phone's internal memory is unoccupied and how many name and number entries can still be stored in SIM card's and Phone's memory.
2. **Preferred Storage:** You can choose your preferred storage in phone, SIM or both.
3. **Fields:** You may customize the contact information you want to show on your display.
4. **My vCard:** Allow you to edit your personal vCard saved in the handset.
 - **Edit my vCard:** Enter the submenu, and you may input your vCard information
 - **Send my vCard:** Allow you to send your vCard via SMS, MMS or file transfer.

Caller Picture

Allow you to use your friend's photo or any other picture as his/her picture ID when calling.

Caller Ring Tone

Allow you to personalize the incoming ring tone for specific person or caller group in your contact list.

Call History

 


Your phone can save information for missed, received and dialed calls and the length and cost of your calls.



Notes:

1. For Missed, Dialed & Received Calls, you can press talk.
2. Once the call list exceeds the memory limitation, the oldest one is deleted.

Press  to have a quick review. Your phone provides several options: **Delete**, **Save to Contacts Dial**, **Edit**, **Send SMS** or **Send MMS** if you select a certain phone number.

Missed Calls

Your phone allows you to view the last 30 Missed Calls.

To view Missed Calls:

- In **Call History** menu, choose **Missed Calls**, and press **OK** to view the records.

Dialed Calls

Your phone allows you to view the last 30 outgoing calls.

To view Dialed Calls:

- In **Call History** menu, choose **Dialed Calls** and press **OK** to view the records.

Your phone provides the following selections for your option:

- **Delete:** Allow you to erase the number from the list.
- **Save to Contact:** Allow you to save the number in **Phone Book**.
- **Dial:** Allow you to call the number shown on the screen.
- **Edit:** Allow you to edit the number.
- **Send SMS:** Allow you to send a text message to the number shown on the screen.
- **Send MMS:** Allow you to send a multimedia message to the number shown on the screen.

Received Calls

Your phone allows you to view the last 30 Received Calls.

To view Received Calls

- In **Call History** menu, choose **Received Calls**, and press **OK** to view the records.

Delete Call Log

Your phone allows you to delete some of your call history.

- Missed Calls/Dialed Calls/Received Calls/
Delete All

Call Time

Your phone allows you to view the timers for calls made and received.

1. In **Call History** menu, choose **Call Time** and press **OK**.
2. Choose an item, and press **OK** to view the content.

Your phone provides the following selections for your option:

- **Last Call Time:** List out the last call time of your conversation.
- **Total Sent:** Sum of total time you have called out.
- **Total Received:** Sum of total call time you have received.
- **Reset All Time:** Reset the time counter to zero.

Call Cost

This function allows you to check the cost while making phone call. However, you would need to contact with your service provider for password.

Your phone provides the following selections for your option:

- **Last Call Cost:** Last call you made
- **Total Cost:** Sum of costs you made so far
- **Reset Cost:** To reset the counter
- **Max Cost:** To set the max cost allowed
- **Price Per Unit:** To set the unit cost of the call

SMS Counter

This function allows you to check the numbers of message. It is a counter. You may press reset to restart the counter.

- **Sent:** The message number you sent
- **Received:** The message number you received

GPRS Counter

This function allows you to check the data size of GPRS packet you used.

- **Last Sent:** The message size you last time sent
- **Last Received:** The message size last time you received
- **All Sent:** The total message size you have sent
- **All Received:** The total message size you have received
- **Reset Counter:** To reset the counter

Services

Services described below are supported by your service provider. If you cannot connect either one of those services, you might contact with your service provider for further information.

WAP

Your phones support Web Browser. You can obtain various services such as up-to date news, weather, sport, and other information as well as use e-mail and other Internet services. These services are designed and maintained by WAP service providers.

The WAP service uses Wireless Markup Language (WML) on their WAP pages. You may not view the Internet web pages on your phone.



Notes:

1. To activate WAP service, you may need to contact your service provider.
2. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Homepage

To access the browser from the standby mode, go to WAP in Service and press Homepage. Once connected, the homepage is displayed. The content depends on the service provider.

To exit the browser, press  key.

Bookmarks

You can use this menu to save URL addresses to quick access a website.

Your phone also provides you for the following selections for your option.

- **Goto:** Allow you to link the website.
- **Edit:** Allow you to edit URL address.
- **Delete:** Allow you to delete the selected bookmark.
- **Delete All:** Allow you to delete all bookmarks at once.
- **Add Bookmark:** Allow you to add URL address.

Recent Pages

You can view the recent pages you have visited. Press **Goto** to connect the selected page.

Enter Address

You can key in the URL address and enter the address followed by selecting **Done**. Your phone will connect the URL you just keyed in. After the address is entered, you may select the URL and press **OK** to connect next time.

Service Inbox

In addition to the functions available in the phone, your service provider may offer additional applications such as weather or stock market information via the SIM card. This function is only supported when SIM card inserted.

To set the **Service Inbox** service:

- In **WAP** under **Services** menu, choose **Service Inbox**, press **Select**.



Notes:

1. For availability, you need to register for the services from your service provider.
2. Accessing these services may involve sending an SMS for which you may be charged.

Settings

GPRS (General Packet Radio Service) is a technology used for sending and receiving data over the mobile network. The applications that use GPRS are WAP services, MMS and SMS messaging and GPRS dial-up (such as Internet and e-mail). You can set the phone to automatically register to a GPRS network when you switch the phone on.

WAP Setting

If the settings have been made by the service provider, you may begin immediately. If access profiles have been assigned by your service provider, select a profile and activate it.

Otherwise, you may key in settings manually. For appropriate settings, contact your network operator or service provider.

Key in the service settings manually:

1. In **WAP** menu, choose **Edit Profile** in **Settings**, and press **OK**.
2. Choose **Edit Profile**, select a profile to start setting. You will be requested to provide the information on **Homepage**, **Data account**, **Connection Type**, **User name**, and **Password** in your phone. To get the information, you may need to contact your operator.



Note: In most cases, you only need to use one of the default profiles to access the Internet. The settings are different from operator to operator. Please consult your operator or service provider for the correct settings and proceed with care. Wrong settings will cause connection to failure.

Activate WAP settings

After you complete all WAP settings (see WAP settings function), please choose **Activate Profile** in **WAP Profile** mode, and press **OK**.

Browser Options

You can set the timeout value for the browser. The purpose is to stop the browser connecting the website if the website does not respond within the timeout. Also, you can choose either **On** or **Off** to show the image while browsing.

Service Message Settings

You can choose either receive or not receive the service message which is saved in the service inbox sent by your service provider.

Clear Cache

The information or data you have accessed is all stored in the cache of the phone. A cache is a file buffer used to store data temporarily. You can clear the history by selecting this option.

Clear Cookies

Under the consideration of privacy and security issue, we would suggest you to clear cookies which may contain sensitive information just in case your phone is misplaced, lost or stolen.

Trusted Certificates

Displays trusted web certificates while browsing and manages your "trust list". **Trusted Certificates** are used to verify the WAP gateway that you are trying to connect to. If you press **Trusted Certificates** in **Settings** option under **WAP** menu, you will see two trusted certificates entries: Entrust.net and US VeriSign, Inc. You may also download certificates from Arima Communications Internet or other WAP pages.

Data Account

Default data accounts based on major operators at the time this phone is manufactured are provided.

You can access WAP via GSM or GPRS.

To get the analogue number or ISDN number information, you may need to contact your operator for the service.

To get the access point of GPRS, you may need to contact your operator for the service.

GSM Data

Press **Edit** to change the GSM data account settings, including: **Account name, Number, User name, Password, Line Type, Speed and DNS.**

GPRS

Press **Edit** to change the data account settings, including: **Account name, APN, User name, Password and Auth. type.**

Messages

Your phone services voice mail notification messages and text messages. Voice mail, short message service (SMS) and multimedia message (MMS) are network service.

SMS (Short Message Service)



Your phone services voice mail notification messages and text messages. Voice mail and short message service (SMS) are network service. Your phone also allows you to send and receive text messages containing pictures or melodies. A message with pictures was made up of several text messages. Therefore, sending messages with pictures may cost more than sending one text message.

To write a message


1. In **Messages** menu, choose **SMS**, press **OK**.
2. Choose **Write message**, press **OK** to write an message.
3. You can also personalize your message with more different special effect by selecting following functions in option list which are:
 - **Use Template:** You might insert default template for quick writing.
 - **Insert Object:** You might insert picture, animation, melody and sound in your text message.
 - **Format Text:** You might choose text size, style, alignment or start with new paragraph.
 - **Insert Contact Number:** You can select the phone number from phone book.
 - **Insert Contact Name:** You can select the name from phone book.
 - **Insert Bookmark:** You can insert the bookmark saved in your phone to share.
 - **Input Method:** You might choose an input method as you wish.



Notes:

1. To quick access Message function, you can press  of navigation key  in standby mode.
2. To key in the content, please refer to “**Input method** “ on page 12.

To read messages

When you have received a message, the indicator  will appear on the display. If your inbox is full, there will be a pop-up window to remind you to delete some of your old messages. Otherwise, your message will be saved in the phone instead of SIM Card.

1. In **Messages** menu, choose **SMS**, press **OK** and then select **Inbox**.
2. Choose one message you would like to read by pressing **OK** to view the content.



Note: The message you have received will be saved in SIM as default setting.

When you read the message, your phone provides following selections for your options.

- **Reply:** Allow you to reply by sending a text message.
- **Delete:** Allow you to delete the message in progress.
- **Edit:** Allow you to edit the text message.
- **Forward:** Allow you to forward a text message.
- **Copy to SIM:** Allow you to copy the selected text message to your SIM card.
- **Move to SIM:** Allow you to move the selected text message to your SIM card.
- **Chat:** Allow you to chat with Internet Messenger users. You need to launch your internet browser.

- **Delete All:** Allow you to delete all messages at once.
- **Copy All:** Allow you to copy all messages to your phone at once.
- **Move All:** Allow you to move all messages to your phone at once.
- **Use Number:** Allow you to save the number in your phone book.
- **Use URL:** Allow you to save the URL in your phone.

 : The message that has been read.

 : The message that has not been read.

To send a message

1. In **Messages** menu, choose **SMS** and press **OK**.
2. Choose **Write Message**, press **OK** to start writing a message.
3. After finishing the writing, select **Done**.



 


Note: To use picture message function, your network operator or service provider support is necessary. Only phones that contain this function can receive and display picture messages.

Your phone provides the following selections for your send option:

- **Send only:** Allow you to send a text message immediately.
- **Save and Send:** Allow you to save and send a text message.
- **Save:** Allow you to save the message and send it later.
- **Send to Many:** Allow you to send many contacts at once. Successful sent messages will not be stored in outbox.
- **Send by Group:** Allow you to send a caller group you have grouped in the phone.

Keypad Information

Key	Character
	Shift the cursor.
	Insert symbol.
	Change input method.

Outbox Message

After sending out the message, the message is saved in the outbox folder. You are allowed to read messages you have chosen to save with the following options:

- **Send:** Allow you to send the message.
- **Edit:** Allow you to edit the saved message.
- **Delete:** Allow you to delete the message in progress.
- **Copy to Phone:** Allow you to copy the selected text message to your phone.
- **Move to Phone:** Allow you to move the selected text message to your phone.
- **Delete All:** Allow you to delete all messages in your phone at once.
- **Copy All:** Allow you to copy all messages to your phone at once.
- **Move All:** Allow you to move all messages to your phone at once.
- **Use Number:** Allow you to save the number in your contacts.
- **Use URL:** Allow you to save the URL in your phone.

Template

There are several default templates in your phone for quick message writing. You can also edit or even erase these templates and change to your words.

Message Settings

Your phone allows you to set up default setting on the SMS feature.

In **Messages** menu, choose **SMS**, press **OK**.
Choose **Message Settings**, press **OK**.

Your phone provides the following settings:

- **Profile Setting:** If more than one message profile is allowed by your SIM, you may edit the profile separately.
- **Common Setting:** You may select whether to enable or disable the delivery report and change your reply path of your service center if any.
- **Memory Status:** Allow you to check your memory status in SIM card and phone
- **Preferred Storage:** Allow you to change your preferred storage either in SIM or phone.
- **Pref. Bearer:** Allow you to choose your preferred bearer-GSM or GPRS.

MMS (Multimedia message)

The feature allows you to send the message that contain text, sound and a picture.

Depending on the network, you may receive a text message that includes an Internet address where you can view the multimedia message.

Your phone supports the following formats in MMS function.

- **Picture:** JPG, GIF and BMP.
- **Sound:** Scalable Polyphonic MIDI (SP-MIDI), i-Meldoy.



Note: You are not able to receive multimedia messages during a call, a game, or any active WAP connection over GPRS data.

To write a MMS

1. For availability to the multimedia messaging service, please contact your network operator or service provider.
2. In **Messages** menu, choose **MMS** and press **OK**.
3. Choose **Write message** and press **OK**.
4. Add number or e-mail to: To, Cc, and Bcc fields you wish to send. Edit the subject and content by pressing **Edit**.
5. In content, you are able to add text, image, audio and attachment into the slide.



Notes:

1. To key in the content, you can refer to “**Input method**”.
2. To use picture message function, your network operator or service provider support is necessary.

Your phone provides the following selections for your option when editing the slides:

- **Done:** Allow you to exit the editing page and go back to **Edit** content page.
- **Input Method:** Allow to you change the input method.

After adding text into the content, you will see more options:

- **Add Text:** Allow you to add text in the slide show.
- **Add Image:** Allow you to add an image file in your message.
- **Add Audio:** Allow you to add an audio file in your message.
- **Add Attachment:** Allow you to attach a file in your message.
- **Add Slide Before:** Allow you to insert another slide before the text or slide in your message.
- **Add Slide After:** Allow you to insert another slide after the text or slide in your message.
- **Preview:** Allow you to preview the slide(s) you just wrote.
- **Slide Timing:** Allow you to edit the slide timing.

To send a MMS

1. In **Messaging** menu, choose **MMS** and then press **OK**.
2. Choose **Write Message**, and press **OK**.
3. After finished writing the message by following the steps, select **Done** to either **Send only**, **Save and Send**, **Save to Drafts**, **Send Options**, or **Exit** the message.
4. You can also choose the **Send options** to edit the MMS; otherwise the message will be sent as default setting.





 
Notes:

1. To key in the content, you can refer to “**Input method**”.
2. To use picture message function, your network operator or service provider support is necessary.

Your phone provides the following selections for your option:

- **Send only:** Allow you send a text message immediately.
- **Save and send:** Allow you to save a message and send immediately.
- **Save to drafts:** Allow you to save a message and send it later.
- **Send options:** Allow you to personalize the sending options, including **Validity period**, **Delivery report**, **Read report**, and **Priority**.
- **Exit:** Allow you to choose to save or not save the message you have written.

Keypad Information

Key	Character
	Shift the cursor.
	Insert symbol.
	Change input method.

Inbox

Your phone saves the multimedia messages that have been received in the Inbox folder of the Multimedia messages menu.

To read received multimedia messages

1. In **Messages** menu, choose **MMS** and then press **OK**.
2. Select **Inbox** and press **OK**.
3. Choose a message, press **Option** to view the message.

Your phone provides the following selections for your option:

- **View:** Allow you view a multimedia message immediately.
- **Reply:** Allow you to reply the sender.
- **Reply to All:** Allow you to reply the group.
- **Forward:** Allow you to forward the message.
- **Delete:** Allow you to delete the selected message.
- **Delete All:** Allow you to delete the all message.

- **Properties:** Allow you to view the mailing list.
- **Use Detail:** Allow you to add/view phone number and URL.

Outbox

Multimedia messages that have not been sent will be saved in Outbox folder of the multimedia messages menu. The multimedia messages that have been sent are saved in the Outbox folder of the multimedia messages menu.

To view outbox multimedia messages:

1. In **Messaging** menu, choose **MMS**, press **OK**, choose **Outbox**, press **Select**
2. Choose a message, press **OK** to view.

Your phone provides the following selections for your option:

- **View:** Allow you view a multimedia message immediately.
- **Resend:** Allow you to send the message to others.
- **Delete:** Allow you to delete the selected message.
- **Delete All:** Allow you to delete the all message.
- **Properties:** Allow you to view the mailing list
- **Use Detail:** Allow you to add/view phone number and URL.

Drafts

Your phone saves the multimedia messages that have not been sent in the **Drafts** folder of the multimedia messages menu.

To read unsent multimedia messages:

1. In **Messages** menu, choose **MMS** and press **OK**.
2. Select **Drafts**, and press **OK**.
3. Choose a message, press **Option** to view the message.

Your phone provides the following selections for your option:

- **View:** Allow you view a multimedia message immediately.
- **Send:** Allow you to send the message
- **Edit Message:** Allow you to edit the message.
- **Delete:** Allow you to delete the selected message.
- **Delete All:** Allow you to delete the all message.
- **Properties:** Allow you to view the mailing list
- **Use Details:** Allow you to add/view phone number and URL.

Template

This phone allows you to have a quick entry for your multimedia message.

1. In **Messages** menu, select **MMS** and press **OK**.
2. Select **Template**, press **OK**, select a template, press **Options**.
3. Choose **Write Message** to send the multimedia message.
4. Select **Done** to either send or save the message.

You can view the content of template via **View** options to read the slide and **Properties** to read the message content and size.

MMS Settings

Before you send the MMS message, you need to finish MMS setting

1. In **Messages** menu, choose **MMS** and press **OK**.
2. Select **Message Settings** and press **OK**.
3. Your phone provides the following selections for your option:
 - **Compose:** You can set your compose format based on the option listed below:
 - **Creation Mode:** Select **Free/Restricted** settings for what to allow in picture messages. Some content in picture messages might be

difficult for recipients to view.

- **Image Resizing:**
160x120/320x240/640x480/Off
- **Auto Signature:** On/Off
- **Sending:** this option contains 3 settings:
 - **Validity period:** Set the duration for how long to try to re-send failed messages. The length of time includes: **Max/ 1 Hours/ 12 Hours/ 1 Day/ 1 Week.**
 - **Delivery report:** You can turn on this function if you want to receive the confirmation from service provider that your message has been delivered.
 - **Read report:** You can choose to turn on this function if you want to receive the confirmation from service provider that your message has been read.
 - **Priority:** You can choose message priority which includes **Normal, High, and Low.**
 - **Slide Timing:** You can set slide timing by personal preference.
 - **Delivery Time:** The option of length of delivery time includes **Immediate, In one hour, In 12 hours and In 24 hours.**
- **Retrieval:**
 - **Home network:** The option of home network includes **Immediate, Restricted, and Delayed.**

- **Roaming:** The option of roaming network includes **As Home, Delayed** and **Restricted**.
- **Read Report:** The option of read report includes **On Request, Send** and **Never Send**.
- **Delivery Report:** You can choose to turn **On** this function to request the network to send delivery reports of the past message.
- **Filter:**
 - **Anonymous:** The option of **Anonymous** includes **Allow** and **Reject**.
 - **Max Size:** The limitation of 300 KB in file size for multimedia message.
 - **Advertisement:** The option to receive advertisements includes **Allow** and **Reject**.
- **Edit Profile:** You may receive and send multimedia messages through certain network or service provider. To activate or edit profile detailed setting, press **OK** (center key) to confirm.
- **Memory Status:** You can check the percentage of the MicroSD card memory is unoccupied.



Note: You may contact with your network service operator to consult MMS settings.

Chat

Your phone allows you to chat on-line, real-time with your friends and family using instant messaging. The phone offers you Chat Room1 and Chat Room2 for online conversation.

Before chatting, you need to do the following steps:

1. From the main menu, select **Messages** and press **OK**.
2. Select **Chat** and press **OK**.
3. Select **Chat Room1** or **Chat Room2** and press **Option**.
4. Select **Chat Room Info** and press **OK**.
5. Create a nickname by pressing **Edit**. After you finish inputting your nickname, press **Option**.
6. Press **Done** and select **Remote Number**.
7. Press **Search** and select a contact from the phone book. Press **OK**.

To start chatting

1. After chat room is set (See **Chat** on page 48), use the navigation keys to select **Messages** from the main menu and press **OK**.
2. Select **Chat** and press **OK**.
3. Select Chat Room1 or Chat Room2, press **Option > Start New**, and press **OK**.
4. Enter a message and press **Option**.
5. Select **Send** and press **OK**.
6. After sending the message, the Chat room is activated.
7. You can begin your chat now.

Your phone provides the following selections when you start to chat.

- **Send**: Send message you have written.
- **Use template**: Inserts a template in your SMS template option.
- **Insert PHB Number**: Inserts phone numbers from your contacts.
- **Insert PHB Name**: Inserts names from your contacts.
- **Input Method**: Changes your input method.

Your phone provides the following options while chatting:

 
- **Reply:** Replies to a received chat message.
- **Use number:** Saves the number of a chatter or a number sent by a chatter.
- **Clear chat:** Clears chat conversation.
- **Temp leave:** Temporarily leave the chat room.
- **Quit:** Quit chat.
- **Chat Room Info:** Displays chat room information.



Note: Upon temporarily leaving a chat, you can either Resume or End the chat.

Voice Mail Server

Your phone allows you to access your voice mailbox with a quick way if your operator supports this function. Your voice mail number will be provided by your service provider and showed in the phone. In the **Voice Mail Server** submenu, you can choose line 1 or 2 and options list including:

1. **Edit:** Allow you to edit name & number of voice mail line 1.
2. **Connect to Voice:** Allow you to connect your voice mailbox.
 - In standby mode, long press  to access your voice mail server directly.





Note: To use this function, you may need to enter the voice server number obtained from your service provider.

Broadcast Message

Your phone allows you to receive commercial message. You can either enable or disable the receiving mode and set some other settings based on your personal preference.

Your phone provides the following selections:

- **Receive Mode:** You can choose to receive or not receive the last broadcast message you have received.
- **Read Message:** You can read messages by pressing “**OK**” ( LRK or  center OK key) or exit by pressing “**Back**”.
- **Languages:** You can set up the languages of broadcast message you want to receive.
- **Channel Setting:** You can select channels from the channel list or add new channel where you want the messages to be received to the list. Then, select channel(s) from the select list. You are allowed to edit, add and delete it.

File Manager

In this menu, you can manage images, photos, recordings and tones you had. There will be a storage shown:

DRM Rights

Memory card

You may check files saved in your memory card.

To start viewing/organizing the File Manager:

1. When you enter this menu, you may see one drive named Memory card if you insert the MicroSD card in.
2. Scroll to the desired folder and press option select options: **Open, Create Folder, Format and Remove.**
3. Your phone provides the following selections for your option when you select the one of those **folders (Images, Audio, My Music, Photos and Videos).**
4. You can:
 - Open:** Allow you to open the folder.
 - Create Folder:** Allow you to create a new folder.
 - Rename:** Allow you to rename the file.
 - Delete:** Allow you to delete the selected file.
 - Sort:** Allow you to sort the files by name, type, time and size.

Organizer

Calendar

This feature allows you to keep track of your schedule and tasks saved in calendar. You can also switch alarm with the task for reminding.

To make a note and reminder in **Calendar** first time:

1. In **Organizer** menu, and choose **Calendar**.
2. Use left/right/up/down navigation keys to select a day in the calendar.
3. Press **Option**, choose **View Tasks** and press **OK**.
4. Press **Add** or center **OK** key to start edit your new task.
5. Input the start and end time of your task, and describe the task contents in **Note**.
6. In **Note**, you can use templates stored in **Option** by pressing **Edit**.
7. After you finish editing the contents of your task, press **Option** and select **Save** to save your Note.
8. Choose **Alarm** to turn on or off, and then press **Done** to either save or not to save the task.

 
 
 
 
Your phone provides the following selections for your option:

- **View:** To view the task stored in specified day.
- **Add:** To add new task in specified day.
- **Edit Task:** To edit the task in specified day.
- **Delete Task:** To delete the specific task.
- **Delete All:** To delete all tasks.
- **Send vCalendar:** To send the task by SMS and MMS, or save to file.

To quick jump to the wish date, you may:

1. In **Organizer** menu, choose **Calendar** and press **OK**.
2. Press **Option**, select **Jump to Date** and press **OK**.
3. Key in year, month and day to quick jump to the date you wish, followed by pressing **OK**.



Note: You could press  and  to go to previous and next year. You could also press  and  to go to previous and next month.

To Do List

This feature list out all your tasks you have added from calendar option. You can also view, edit or delete the tasks from the options under this feature. For the first time use, you will need to do the following steps:

1. Press **Add** in the Task List
2. Edit your To Do list by entering time, data, and note.
3. You can choose to turn the alarm on as the reminder and schedule of alarm.
4. Finally, select “**Yes**” to save your to-do list.

Your to-do list will then be shown in this sub-menu and will be highlighted in your **Calendar**. Your phone provides the same options as **Calendar** described above.

Alarm

This function allows you to set the alarm to ring at the time specified. The alarm clock works even when the phone is switched off.

1. In **Organizer** menu, choose **Alarm** and press **OK**.
2. Select **Edit** to input at most 5 sets of alarm times and select one time to edit.
3. To set the alarm, directly input the hours and minutes via numeric keys, using either 12-

hour or 24-hour time format. You can change the time format from 24-hour to 12-hour in **Set Format** under **Time and Date** option of **Phone Setting** submenu of **Settings** menu.

4. Choose **Once/Everyday/Days** in **Repeat** option for your ring mode, and press **OK**.
5. In **Audio Options**, you may customize the alarm tone from **tone/MIDI** selections provided or from an FM Radio channel. Press left/right side navigation keys to switch between **tone/FM Radio** options.

Setting Alarm Tone:

Tone: Select **Tone** in **Audio Options**, press **<empty>** and center **OK** key to select ring tones from Ring 1 to Ring 6, or MIDI melodies from MID1-5. The phone also allows you to record another five tunes according to user preference.

Setting FM Radio as Alarm alert:

- 1) If you intend to use the FM radio as your alarm clock alert, connect the headset to your phone first.
- 2) In **Audio Options**, press right side navigation key to switch to FM Radio option. Press down side navigation key, and press **Option** to select from **Channel List** and **Manual Input**.
- 3) In **Channel List**, you may select any FM channel from a list of 9 channels

at most.

- 4) Select one channel and press **Option**.
 - 5) Choose **Select** and press **OK**.
 - 6) Before choosing **Select**, you may also choose **Preview** to trial listen to the set FM channel.
 - 7) You may also input the FM channel frequency number you like through **Manual Input** option.
 - 8) Select **Alert Type** as **Vibra and Ring** by pressing left-arrow navigation key.
 - 9) Press **Done** and **OK** to save the setting.
 - 10) When the alarm time is reached, the FM radio alarm plays through the loudspeaker even though the headset is connected. If the headset is removed, the default alarm tone replaces the radio.
6. In **Snooze (Mins)** option, you may set the alarm to snooze from 1 to 5 minutes after the alarm time is up. Press navigation left-arrow key to set the minutes you prefer. After the phone alerts you at the set alarm time, you may press Snooze to activate the snooze function. If you don't like your phone to alert you the second time, press **Stop** to end the **Snooze** function.
7. In **Alert Type** option, you may set the alert method that you like your phone to remind you. You may select from three options: **Vibration**

Only, Vibration and Ring, and Ring. Press left/right navigation key to switch between the three options.

8. After you finish all the settings above, press **Done and OK** to validate the alarm setting.

When the alarm expires:

If the alarm time is reached while the device is powered off, the phone will switch itself on and the alarm will start to sound. If you press **Stop**, the phone asks whether you want to power on the phone or not. Press **No** to power off the phone or **Yes** to make and receive calls. When the alarm tone sounds while the phone is powered on, the display flashes the alarm clock image, and shows the current time. To turn off the alarm, press **Stop**. To stop the alarm for five minutes, press **Snooze**.

Calculator

The calculator applies simple calculator function such as addition, subtraction, multiplications and division.

To use the calculator:

- In **Organizer** menu, choose **Calculator**, and press **OK**.

Your phone provides the following compose mapping for your option:

- Four way key **Up**: + (Addition)
- Four way key **Down**: - (Subtraction)
- Four way key **Left**: x (Multiplication)
- Four way **Right**: ÷ (Division)
- Numeric # key: . (Point)
- Press **OK** to get the result.



Note: This calculator has a limited accuracy rounding errors may occur, especially in long divisions.

Music Player

Your phone provides you a friendly music player device for entertainment purpose. You may enter the music player via main menu or use the side key quick key to quick access. Also another way is the navigation key up to enter music player.

You may listen to music, speech, or even having an English lesson in MP3 and AAC format.

You may also download the music content via USB or other connection. Music tracks must to be saved in the **My Music** folder in the **File Manager** in order to be automatically detected and added into default play list. You may listen to the music through headset or loudspeaker.



Note: You can make or answer a call while using the audio player. During a phone call, the playback will be paused and resumed after you finished the call.

Play the music

Before using the music player, you will need to save songs into **My Music** folder in memory card.

Insert the memory card and go to **Music Player** menu. You may press **List** to access the following settings.

If you are 1st time user, your music player will automatically detect and add music tracks into music player.

When you use music player next time, select any music track. You will have the following options:

- **Play:** Allow you to play the selected song immediately.
- **Detail:** Allow you to review the channel, quality, size and time of selected song.
- **Add to Rings:** Allow you to add the selected song as ring tone.
- **Remove:** Allow you to remove the selected music track.
- **Remove All:** Allow you to remove all music tracks in the selected play list.
- **Playlist:** Allow you to create 3 your personal play lists.
- **Classify Audio:** Allow you to sort your music by **Artist, Album, Genre, and Year.**
- **Refresh List:** Allow you to refresh the list if you have changed the name of a song or even remove the song somehow.
- **Settings:** Allow you to select your play list from phone or SIM card, to turn on the auto gen., to change the skin, equalizer, etc. In the **Music Player** menu, select one song to enter the **Option** list. Choose **Settings.**

The setting options include:

- **Repeat:** you can choose to repeat all songs, one song or turn off this function.
- **Shuffle:** this function is to play music in random order.
- **Background Play:** this function allows the phone to play music continuously in idle mode.
- **Equalizer:** there are 8 kinds of equalizers which include **Normal, Bass, Dance, Classical, Treble, Party, Pop and Rock.**

Five Ways Navigation Key	Audio Play Function
↑	▶ Play / Pause music
↓	■ Stop
→	▶▶ Skip to next track
←	◀◀ Skip to previous track
□ (Center key)	Rotate EQ mode



Notes:

1. You can adjust this volume +/- through side keys.
2. Your mobile phone is designed to be able play the music during flight. You have to go to: **Settings→Phone Setting→Flight Mode** to change your setting to **Flight Mode** for flight security concern.

Media Center



Camera

You can use this phone in taking photos with the phone's built-in camera and adjust its settings. The camera lens is on the back of the phone, and the display of the phone works as a viewfinder. If there's not enough memory for camera, you need to delete old photos to free some spaces for new photos.



Note: Do not use this feature when it violates local laws.

To start using Camera:




 
 







1. In **Media Center** menu, select **Camera** and press **OK**. Hold the phone on the upside of the scene you like to shot to capture the image into the display. Press **OK** to complete taking the picture.
2. Press **Option** to personalize your camera setting. You can also take the picture by simply pressing center **OK** key.
3. To zoom screen in/out, please press volume key.



Note: The photo will be saved in the folder called **Photo** of **File Manager** menu. You can also view the picture by selecting Album mode from option list and press **OK** to jump to Image Viewer.

Setting the Camera:

1. In the preview mode, you can press “**Option**”. All options will be displayed at the bottom of the screen, and you can adjust the setting through the preview mode directly and your setting will be displayed on top of the screen.
2. Use Navigation key right/left to select different camera settings and up/down to select your preference. The options are listed below:

	Album mode	You can review pictures you have taken by pressing OK .
	Image Size	80x60, 128x128, 320x240, 640x480, 160x120
	Image Quality	Normal / High / Low
	Delay Timer	Off / 5, 10, 15 sec.
	Continue Shot	Off/ 3 Shot / 5 Shot / 9 Shot
	Effect Setting	Normal/ Grayscale/ Sepia/ Sepia Green/ Sepia Blue/ Color Invert
	White Balance	Auto/ Daylight/ Tungsten/ Fluorescent/ Cloud/Incandescence
	EV	EV-4 / EV-3 / EV-2 / EV-1 / EV 0 / EV+1 / EV+2 / EV+3 / EV+4
	Night Mode	Off / On
	Banding	50 / 60 Hz
	Shutter Sound	Sound 1/ Sound 2/ Sound 3
	Restore settings?	You can restore the factory setting by selecting this option.

Games

Spice S-705 builds in 5 creative games for this product. You may use navigation key to select the game you like and press **OK** to enter the game. After entering the game, you may start game, choose game level, check your grades in **Best Grades** and read the instruction manual in **Game Help**. You can also adjust the game setting at the very beginning when you enter the game menu.

The games in the phone offer the following options:

- **Start Game:** Start to play the game
- **Game Level:** Easy/ Normal/ Hard
- **Best Grades:** Ranking for your play history
- **Game Help:** Display the play rule for the game

Games Setting:

- **Game Audio:** You can turn on this function for audio play while playing a game.
- **Game Vibration:** You can set the phone to vibrate if you score any point while playing the game.

Image Viewer

All images from EMS, MMS, WAP, camera could be reviewed from here and storage is located in either phone or memory card. You may choose to view your images in List or Matrix Style.

Your phone provides the following selections for your option:

- **View:** Allow you to view the pictures saved in File Manager.
- **Browse Style:** Allow you to select the style when you browse pictures.
- **Forward:** Allow you to forward your pictures as wallpaper, screen saver, power on/off display, contact ID or send to others via MMS.
- **Rename:** Allow you to rename the file name.
- **Delete:** Allow you to delete the pictures in the File Manager.
- **Delete All Files:** Allow you to delete all pictures in once.
- **Sort:** Allow you to sort your photos by name, type, time, or size.



Note: When sending pictures via MMS, the message size cannot be larger than 300KB. Note your service provider determines the maximum size of pictures sent via MMS.

To view the pictures


1. From the **main menu**, select **Image Viewer** and press **OK**. The pictures are then displayed on the phone screen.
2. Press navigation keys up/ down to browse your pictures saved in your phone/ memory card.
3. Press  right soft key to go back to the file list page.

Image forward

Your pictures saved in your phone/ memory can be set as wallpaper, a screen saver, power on/ off display, contact, and multimedia message. Follow the steps below to set this function.

1. From the **main menu**, select **Image Viewer** and press **OK**. The pictures are then displayed on the phone screen.
2. Select the picture you like to forward and press **Option**.
3. Press **Forward** and select from **To Wallpaper/ To Screen Saver / To Power On Display/ To Power Off Display/ To PhoneBook/ To MMS**. Then forward the picture you select.

Video Recorder

You can record a video clip through the build-in camera. This function also enables audio recordings. See further details in the following descriptions.

To shoot a video clip

1. From the **main menu**, select **Video Recorder** from **Media Center** and press **OK** to start the recording.
2. Select **Video Recorder** and press **OK**.
3. Press **Options** to personalize your video recorder settings.
4. You may review your video clips in the **Video Player** mode.





 






Notes:

1. The video clip is saved as AVI (MJPEG) format and saved in the Video folder of File Manager. You can also listen to the audio clips from the **Album** or **Video Player** mode (see **Video Player** on page 70).
2. You can also jump to the camera function by selecting the camera mode.
3. See the table on the next page for function keys in **Video Recorder** mode.

Setting the Video Recorder:



1. In the preview mode, you can press “**Option**”. All options will be displayed at the bottom of the screen, and you can adjust the setting through the preview mode directly and your setting will be displayed on top of the screen.
2. Use Navigation key right/left to select different video recorder settings and up/down keys to select your preference. The options are listed below:

	Camera mode	You can jump to the camera function by selecting this mode.
	Album mode	Press OK to jump to Video Player mode review video clips you have taken.
	Image Quality	Normal / High / Low
	Effect Setting	Normal/ Grayscale/ Sepia/ Sepia Green/ Sepia Blue/ Color Invert/ Blue Carving/ Copper Carving
	White Balance	Auto/ Daylight/ Tungsten/ Fluorescent/ Cloud/Incandescence
	EV	EV-4 / EV-2 / EV 0 / EV+2/ EV+4
	Night Mode	Off / On
	Banding	50 / 60 Hz
	Restore settings?	You can restore the factory setting by selecting this option.

Video Player

This folder stores videos saved from your phone or downloaded from your PC. This phone supports AVI (MJPEG) format with 128x128 video size.

To play the video clip

1. From the main menu, select **Video Player** from **Media Center**.
2. Select the file you wish to play and press **OK**.
3. Press **Play** in option list.
4. Press the volume keys up/ down to adjust the volume. Press the  left soft key to pause playing the video clip, and press  right soft key to stop the playing.

Your phone provides the following selections when you select **Media Center > Video player > Option** from the main menu:

- **Play:** Plays and views video content.
- **Forward:** Allow you to forward the video to screen saver, power on display or power off display. You can also forward the video clip to contacts or new callers (thanks to caller ID) via MMS.
- **Rename:** Renames the video
- **Delete:** Deletes the melody saved in File Manager.
- **Delete All Files:** Deletes all videos saved in File Manager.

- **Sort:** Sorts video clips by name, type, time, or size.

Video clip forward

Your video clips saved in your phone/ memory can be set as multimedia message. Follow the steps below to set this function.

1. From the main menu, select **Media Center** and choose **Video Player**.
2. Select a video clip from the list and press **OK**.
3. Select **Forward** and select **To MMS**. Press **OK**. Your phone will request you to select the number or e-mail address of the receiver(s) of this multimedia message from **Phone Book** in **To, CC or BCC** columns. You will also need to type in **Subject**.
4. Press **Done** to send out the message; **Exit** to stop sending the message.

Sound Recorder

Sound recorder is a simple sound recording tool, providing functionalities for you to manage voice files.

To start recording:

1. In **Media Center** menu, choose **Sound Recorder**, and press **OK**.
2. Press **Option** and select **Record**, choose **OK** to start it.



Notes:

1. During recording, you may pause or stop the voice recording anytime by pressing soft keys.
2. After recording, the file is saved as AMR or WAV format.

Your phone provides the following selections for your option:

- **Record:** Allow you to record the sound during your phone call or other situation.
- **Play:** Allow you to play the sound record.
- **Append:** Allow you to record in the same file.
- **Rename:** Allow you to rename a file name.
- **Delete:** Allow you to delete the file saved in the Sound Recorder.
- **Delete All:** Allow you to delete all content saved in this folder.
- **Settings:** Allow you to choose your storage and file format.
- **Forward:** Allow you to forward the file to user profile or share to friends via MMS

FM Radio

This feature allows you to listen to your favorite FM radio station program anytime with frequencies ranging from 87.5MHz to 108.0MHz.

 

 
To start using

1. Before using FM radio, you will need to plug-in your headset which performs as FM antenna.
2. Then, go to **Media Center** menu, choose **FM Radio**, press **OK**.
3. You can choose to either turn on or off the auto search by clicking navigation up key.
4. Press right or left navigation key to start searching.



Note: To use auto search function, you will need to turn on Auto search mode by pressing navigation key up and navigation down at the same time.

Your phone provides the following selections for your option:

- **Channel List:** Allow you to bookmark 9 radio stations by entering the channel name and frequency. You can have quick access to the 9 radio stations through numeric keys from  to .
- **Manual Input:** Allow you to key in the radio station frequency manually. Use  key to add point (.) when you are keying in the radio station frequency.
- **Preset Auto Search:** Allow you to auto scan the radio station without pressing forward or

backward key all the time and station searched will be memorized in the channel list.

- **Loudspeaker:** Press **OK** to switch between **On** and **Off** of loudspeaker function.
- **Settings:** Allow you to change the background play, record format and storage. You could select record format as AMR or WAV.
- **Record:** Allow you to record your favor program.
- **Append:** Allow you to resume the file you have recorded and continue to record at the same file.
- **File List:** Allow you to listen the radio program you have recorded. You may play, forward, detail, rename, delete or sort the file.

Five Ways Navigation Key	Audio Play Function
↑	Search mode (manual/auto) on/off
↓	Turn on / off FM
➡	Forward
⬅	Backward
□	Recording on / off



Note: You have to plug-in the earphone in order to use the FM radio.

To quick listening to FM radio by channel list:

1. Before listening to FM radio programs, you will need to plug-in your headset which acts as FM antenna.
2. Then, go to **Media Center** menu, choose **FM Radio**, press **OK**.
3. Press **Option** to set the channel list and edit the channel list by entering the channel name and frequency.
4. There are 9 channel lists you may pre-set through 9 numeric keys for quick access.
5. Press any numeric key to jump to the radio station you have set.

Schedule FM Record

This phone allows you to pre-schedule programs from FM radio. You are able to record 4 programs according to your personal setting. The option of settings includes: to turn on/off recording, to set up dates and time period of program pre-scheduling, to record Days/ Weekly/ Monthly/ Once/ Everyday, to set up channels through Channel List or manual input, and to set up file format and storage.



Note: You must inset earphone headset as the antenna when setting the pre-scheduled radio channels.






Settings

User Profiles

You can set following different profiles to adapt to different environment conditions. Your phone provides 5 different profiles, including:

- **General:** Standard profile as phone default setting.
- **Meeting:** The alert type is set to be vibrated.
- **Outdoor:** Ring and key tone volume is set to be loud.
- **Indoor:** Ring and key tone volume is set to be low and vibrator is off.
- **Headset:** Profile for headset plug-in.

Indication Icon on the idle screen

Icon	Profile Mode
	General
	Meeting
	Outdoor
	Indoor
	Headset

To activate the User Profiles

1. In **User Profiles** menu, select a profile and press **OK**.
2. Choose **Activate** and press **OK**.

To edit the Profiles

You can customize **User Profiles** settings to meet your preference.

1. In **User Profiles** menu, select a profile and press **OK**.
2. Choose **Customize** and press **OK**.

Your phone provides the following selections for your personalize option:

- **Tone Setting:** Allow you to set ring tone for incoming calls, phone power on, phone power off, message tone and keypad tone according to your preference. You may select **Silent** when you power on/off your phone in **Power On** and **Power Off** options under **Tone Setting**.
- **Volume:** Allow you to adjust the volume of ring tone and key tone.
- **Alert Type:** Allow you to select different alert types, including **Ring**, **Vibration Only**, **Vibrate And Ring**, **Vibrate Then Ring**, and **Light Only**.
- **Ring Type:** Allow you to single, repeat or ascending ringing when an incoming call arrives.
- **Extra Tone:** Allow you to either turn on or off other tones. The options include **Warning**, **Error**, **Camp on**, **Connect**, and **Unread SMS/Missed call**. Press **OK** to switch between **On** and **Off** of each option.
- **Answer Mode:** Allow you to choose the way to answer the phone.

Phone Setting

Time and Date

This function allows you to set your home city, view and change the time and date set in your phone, and set the time format.

Set Home City

1. In **Phone Setting** menu, choose **Time and Date**, and press **OK**.
2. Select "**Set home city**", and press **OK**.
3. All major cities are listed in the phone. You may use navigation keys to scroll up/down for your selection. Or, press the first character of home city you wish to find by numeric key for quick search.
4. After finding your home city, press **OK** to go back to **Time and Date** submenu.

Set Time/Date

1. In **Settings** menu, choose **Time and Date**, and press **OK**.
2. Set **Time & Date** by using navigation and numeric keys, and press **OK**.
3. You can choose turn on/off daylight saving.

Set Format

1. In **Phone Setting** menu, choose **Time and Date**, and press **OK**.
2. Choose **Set Format**, and press **OK**.
3. Set **Time Format** as 24-hour or 12-hour format and **Date format** as MM/DD/YYYY or YYYY/MM/DD. Press **OK**.

Schedule Power On/Off

You are allowed to schedule power-on and off time for 4 different time settings.

Language

This phone allows you to set a language for the display in this phone.

- In **Phone Setting** menu, choose **Language**, press **OK**.
- Choose a language, and press **OK**.



Note: The option of **Automatic** depends on your service provider and languages supported by your phone. If you select **Automatic**, your phone will auto detect the language supported by your SIM and phone.

Preferred Input Method

You can decide your preferred input methods based on your use behavior. You may check page 12 “Input Method” section for types of input methods Spice S-705 provides.

Display Setting

This feature allows you to personalize your display setting through following options:

Wallpaper: Allow you to change wallpaper shown on idle screen.

Wall Paper Setting:

1. In **Phone Setting** menu, choose **Display Setting**, press **OK**.
2. Choose **Wallpaper**, press **OK**.
3. Choose **System** or **User define**, press **OK**.
4. Choose **System**, press **OK**, select **Image 1** or **Analog Clock**, press **View**, press **OK** to select as wallpaper.

Screen Saver: Allow you to play different screen savers. You may customize the screen saver’s setting with the options of turning on or off the screen saver, or display time. When you select **Display Time** for screen saver setting, the screen will show the current time in the idled mode. The waiting time after which the screen saver is activated is from 5 sec. to 1 min. The **Waiting** entry where you are supposed to enter the waiting time you desire will show Invalid when

you select the screen saver function as **Off** and **Display Time**, and you can't enter any waiting time for the two settings.

Select an Image for screen saver

After the above setting is completed, go back to the **Screen Saver** submenu, and choose **Select** to enter either **System** or **User Define** to choose an image as your screen saver. You may choose **Image 1** or **Analog Clock** image in System, or download images from **File Manager**. The operation press is the same as Wallpaper display setting.

Power On/Off Display: This phone allows you to set the power-on/off animation from system, phone/card memory or disable animation.

Themes: Allow you to change the theme based on you preference. There are three color themes options in your phone: **Blue White, Orange and Purple**. For each color themes, you can choose to **Activate, Update Period and Set Order**.

- **Activate:** allow you to activate the selected color theme.
- **Update Period:** allow you to update the color theme hourly, daily, weekly, monthly and seasonally.
- **Set Order:** allow you to arrange the display order of the color themes.

Show Date and Time: Allow you to show or not to show the date and time on idled screen.

 

Show Owner Number: Allow you to enable/disable your phone number shown on idled screen.



Show Operator Name: Allow you to choose either show or not to show your operator's name on idled screen.

Greeting Text

This function indicates the message when you power on in main display. You may edit any message for your welcome note.

Speed Dial

If you assign the number to one of the speed dialing keys (from  to ) saved in the **Phone Book**, you can dial the phone number by long pressing the assigned key in standby mode.

1. In **Phone Setting** menu, choose **Speed Dial**.
2. Turn on the **Speed Dial** from **Enable Speed Dial** option.
3. Select **Set Number** and press **OK** through LSK  or Center key  to edit the number from your phone book.

Dedicated Key

This function allows you to re-assign the quick-access-feature default setting in 4 directions of navigation key.

Flight Mode

This function allows you to play the music player during flight if you switch the mode to Flight Mode instead of Normal Mode. You will be able to listen to the music only.

Normal Mode: GSM/GPRS network still works, which means you are allowed to make a call.

Flight Mode: GSM/GPRS will be disabled for security reason if you wish to listen to the music on the airplane.

Query When Power On: You will be requested to select either Normal or Flight mode whenever your phone is powered on.

Misc Setting

Signal LED: This function allows you to enable or disable the LED indicator if there is any signal received.

LCD Backlight: Allow you to adjust LCD's brightness and time of turning dark.

Shortcuts

The phone allows you to customize shortcuts for phone functions frequently used. Press navigation down key to enter **Shortcuts** menu.

Add the first shortcut:

1. Press **Add** and **OK**.
2. Select one phone function you like to establish the shortcut, and press **OK**.
3. Then you will enter the **Change Order** window which shows the phone function you just selected as a shortcut is ordered no.1. Press **OK**.

Add more shortcuts:

Press **Option** under **Shortcuts** list screen, and press **Add** to select more phone functions as shortcuts.

Shortcuts provides several options as follows:

- **Add:** this function allows you to add new functions as shortcuts.
- **Edit:** this function allows you to replace the current shortcut with another phone function.
- **Delete:** this function allows you to remove the shortcut you select.
- **Delete All:** this function allows you to remove all the shortcuts that have been set.
- **Disable:** this function allows you to shut off the shortcut selected. After you select **Disable** option for the selected shortcut, you will find the pink ball inside the blue square icon preceding the function text will disappear.
- **Change Order:** this function allows you to change the order that the selected shortcut is arranged in **Shortcuts** list. Press navigation right key to change the order number.

Call Setting

Caller ID

This function allows you to either send or hide your ID during calling or sending out the message. Your phone is defaulted in **Set by Network**, which means your ID is determined by your service provider.

Call Waiting

This network service enables you to be informed when someone is trying to reach you during another call.

1. In **Settings** menu, choose **Call Setting**, and press **OK**.
2. Choose **Call Waiting**, press **OK**, choose **Activate** or **Deactivate** and press **OK**.
3. Select **Query Status** to see this function is activated or deactivated.

Call Divert

You can set the call condition by which calls are diverted to another number.

To set call divert

1. In **Settings** menu, choose **Call Setting**, and press **OK**.
2. Choose **Call Divert**, press **OK** and then choose one option, press **OK**.
3. Choose **Activate**, and press **OK**.
4. Enter the number where you want your calls to divert, and press **OK**.

Your phone provides the following divert selections for your option:

- **Divert All Voice Calls:** All voice calls are diverted.
- **Divert If Unreachable:** Calls are diverted when you not in a location covered by your service provider.
- **Divert If No Answer:** Calls are diverted when the call is not answered.
- **Divert If Busy:** Calls are diverted when your phone is engaged on other calls.
- **Divert All Data Calls:** All data calls are diverted.
- **Cancel All Divert:** Cancel the above settings.

Call Barring

This network service allows you to restrict incoming calls and outgoing calls from your phone. A barring password is required for using the function.

- **Outgoing Calls:** To bar All Calls/International Calls/ International Call Except Home.
- **Incoming Calls:** To bar All Calls/When Roaming.
- **Cancel All:** To cancel all the bar call setting (you will need to enter the barring password).
- **Change Barring Password:** To set barring call, you are asked to input you barring call password. This menu enables you to change your barring call password. To know the default password setting, please contact your service operator.

Line Switching

This is a network service to select phone line 1 or 2, which is the subscriber number for making calls within ALS Setting submenu.



Note: If you select Line 2 but not subscribe this network service, you will not be able to make a call. However, calls on both lines can be answered regardless of the selected line.

Call Time Reminder

This function allows you to set a time reminder during a call.

1. In **Settings** menu, choose **Call Setting**, and press **OK**.
2. Choose **Call Time Reminder**, press **OK**.
3. Choose an item, press **OK**.

Your phone provides the following time alert selections for your option:

- Off
- Single
- Periodic



Note: The minimum time of Periodic is 30 seconds at least.

Call Time Display

This function allows you to enable/disable the call time shown on display.

Auto Redial

This function allows you to set auto redial. Select **On** and your phone will make a maximum of ten attempts to connect the call after an unsuccessful call attempt.

Closed User Group

This function allows you to set the limited call

group. Only the person in the specific group is allowed to make a call to you and receive call from.

Network Setting

Network Selection

Your phone provides you 3 selections for your network connectivity.

- **New Search:** You can always refresh your network connectivity before using network.
- **Select Network:** Your phone will list the network list for your selection if you select **Manual** mode.
- **Selection Mode:** The function enables you to make operator selection by **Manual** or **Automatic**.

If you select **Automatic mode**, the phone automatically selects one of the cellular networks available in your area and then press **OK**.

In **Manual mode**, the phone will show a list of available networks and you can select the desired network if this network has a roaming agreement with your home network operator.

Preferred Network

Preferred Network is used when the network selection mode has been set to **Automatic**. The location numbers in the preferred network list

show the search priority. Your service provider's network will be shown in the display. This feature helps you to select your GSM/GPRS network if your service provider does provide more than one network choice. However, please make sure you have applied the international roaming service when you are traveling aboard.

Your phone provides the following options:

- **Add From List:** Allow you to add network list selecting from over 300 networks in the worlds.
- **Create New:** Allow you to create new network list by entering MCC/MNC and adjust the priority.
- **Change Priority:** Allow you to change the priority of your preferred network list.
- **Delete:** Allow you to delete the selected item.

GPRS Connection

You can change GPRS connection status of your phone through options: “**When Needed / Always**” by pressing **OK** to switch.

Security Setting

SIM Lock

This function allows you to lock the phone with a specific SIM card. The feature is designed to prevent the use of your phone by means of another person’s SIM cards if your phone becomes lost.

You can switch on or off to activate the PIN lock function.

Phone Lock

You can switch on or off to activate the phone lock function to protect your phone. If you switch Phone Lock on, you need enter the password to set the request on. The default password is “1111”.

Auto Keypad Lock

This allows you to lock the phone’s keypad to prevent accidental key pressed.

In **Auto Keypad Lock** submenu, select the time that after the last key press will be disabled, and press **OK**.

Fixed Dial

This function dials only the numbers in the fixed dialing number (FDN). To save and edit numbers on the list, you need the PIN2 code.

Barred Dial

You can switch the mode on and off to have a restricted call. However, you need to check if your SIM supports this function or not.

Change Password

- **PIN:** Allows you to change the PIN number.
- **PIN2:** Allows you to change the PIN2 number. You would need to check with your service provider for old PIN2 number.
- **Phone Lock Password:** Allows you to change the phone lock password.

Restore Factory Settings

This function allows you to reset the entire phone setting to the original setting when it is produced. The security code is needed to access this function.

General Information

Accessories

There are various accessories for your mobile phone. Your pack will include standard battery x 1, headset x 1, travel adapter x 1, and data cable x 1. Please note:

- Use only accessories and charging devices approved by the phone manufacturer otherwise you would risk serious damage to health and property.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions.

Battery Care

Your phone is powered by a rechargeable battery.

- The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, you should buy a new battery at the time.
- Unplug the charger when not in use, and don't leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime.
- Overcharging may shorten its lifetime, and if left unused a fully charged battery may discharge itself over time.
- Temperature extremes can affect the ability of

your battery to charge.

- Do not use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- Extreme temperatures will affect the charging capacity of your battery.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter condition.
- Never expose the battery pack to temperature above 55°C ($^{\circ}\text{F}$), such as in a car parked in the sun or under direct sunlight. Ambient temperature when battery operation: $-10^{\circ}\text{C} \sim +55^{\circ}\text{C}$; when charging: $0^{\circ}\text{C} \sim +45^{\circ}\text{C}$
- Do not short-circuit the battery. Short-circuiting the terminals may damage the battery or the connecting object.
- Dispose of batteries according to local regulations. Always recycle. Do not dispose of batteries in a fire.

Access Codes

PIN code

The PIN (Personal Identification Number) code protects your SIM card against unauthorized. Your SIM card usually supplies the PIN code.



Notes:

1. You may need to obtain the password from your service provider.
2. If you key in an incorrect PIN code three times in succession, you may need to key in PUK code.

PIN2 code

The PIN2 code may be supplied with the SIM card. Some functions will require PIN2 support, such Set tariff. Obtain the password from your service provider.

PUK

The PUK (Personal Unblocking Key) code is required to change a blocked PIN code, and a blocked PIN2 code.



Notes:

1. You may need to obtain the password from service provider.
2. If you key in an incorrect PIN2 code three times in succession, you may need to key in PUK2 code.
3. If you key in an incorrect PUK code ten times in succession, the SIM card cannot be used anymore. Contact your service provider for a new card.

Phone code

Phone code protects the phone against unauthorized use. It is not on when you buy the phone. You can change the phone code (1111) to any four to eight-digit personal codes.

Care and Maintenance

Read this information before using your mobile phone.

Your mobile phone is a highly sophisticated electronic device. When using your phone, battery, charger or any accessory, please read this first.

Product Care

- Keep your mobile phone and all its parts out of young children's reach.
- Keep your mobile phone dry.
- Avoid exposing your mobile phone to extreme hot or cold temperatures.
- Avoid placing your mobile phone close to lit cigarettes, naked flames or any heat source.
- Do not attempt to disassemble it. Non-expert handling of the device may damage it.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.
- Do not paint your mobile phone as the paint could obstruct the earphone, microphone or any moveable parts and prevent normal use.

- Treat your mobile phone with care, keep it in a clean and dust free place.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a light burn. Please contact an authorized service center to replace the damaged antenna.
- Do not touch the antenna unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than needed and shorten talk and standby times.
- Hold the phone as you speak to any other telephone. While speaking directly into the microphone, angle the antenna in a direction up and over your shoulder. If the antenna is extendable/retractable, it should be extended during the call.

Important Safety Information

Radio frequency energy

Your mobile phone is a radio transmitter and receiver. When the phone is turned on, it receives and transmits radio frequency (RF) energy. Depending on the type of mobile phone you possess, it operates on different frequency ranges and employs commonly used modulation techniques. The system that handles your call when you are using your phone controls the power level at which your phone transmits.

Specific Absorption Rate (SAR) information

Your phone has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at this highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various Spice phone models, they are all designed to meet the relevant

guidelines for exposure to radio waves.

- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over then (10) gram of tissue.
- This highest SAR value for this model phone tested by SGS for use at the ear is 0.887 W/kg (10g).

SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue.

Electronic devices

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone, therefore:

- Don not use your mobile phone near medical equipment without requesting permission.

Pacemaker

Mobile phones may affect the operation of some implanted cardiac pacemakers and other medically implanted equipment. Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) be maintained between a hand-held wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on;
- should not carry the phone in a breast pocket;
- should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing Aids

Some hearing aids might be disturbed by mobile phones. In the event of such disturbance, you may want to consult your service provider, or call the customer services line to discuss alternatives.

Aircraft

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.
- To prevent interference with communication systems, you must not use your mobile phone while the plane is in the air.

Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. It is rare, but your phone or its accessories could generate sparks. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fuelling areas, such as petrol station, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Driving

Check the laws and regulations on the use of mobile phones in the areas where you drive. If you are going to use your phone while driving, please:

- Give full attention to driving
- Use handsfree. Law in many countries requires vehicle handsfree.
- Pull off the road and park before making or answering a call if driving conditions so require.

RF energy may affect some electronic systems in motor vehicles such as car stereo, safety equipment etc. in addition, some vehicle manufacturers do not allow use of mobile phones, unless the installation is supported by a handsfree kit with an external antenna in their vehicles. Check with your vehicle manufacturer's representative to be sure that your mobile phone will not affect the electronic systems in your vehicle.

Emergency Calls

Important:

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service provider.