 


**TOSHIBA**

**TS605** 携  
帯電  
話

User Guide

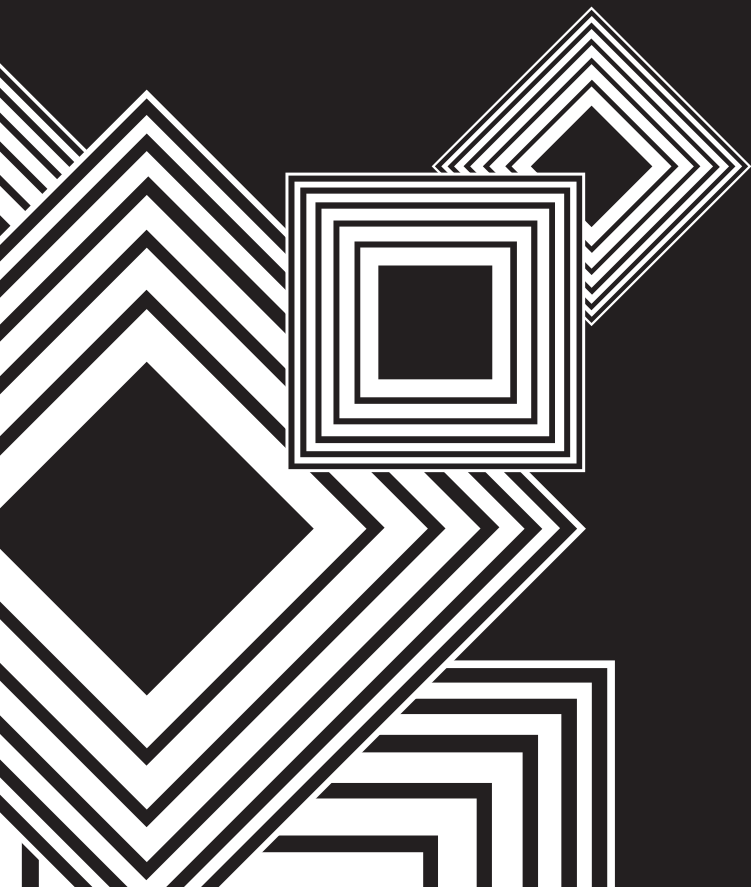

# TABLE OF CONTENTS

<b>Warranty and Safety</b> .....	<b>4</b>
After Sales Service .....	4
Safety Guidelines .....	4
General .....	4
Operating Environment .....	5
Electronic Devices .....	5
Battery Safety .....	6
SOS Soft Key .....	6
Care and Maintenance .....	7
FCC Notice .....	8
European RF Exposure Information .....	8
FCC RF Exposure Information .....	9
Licences .....	11
Declaration of Conformity of Toshiba .....	12
<b>Setting up the Phone</b> .....	<b>13</b>
Battery .....	13
Inserting or Changing the Battery .....	13
Charging the Battery .....	15
Charging Indicator .....	16
SIM Card .....	17
Inserting / Removing the SIM Card .....	17
Personal Identification Numbers (PINs) .....	19
Memory slot .....	19
<b>General Information</b> .....	<b>21</b>
Parts and Functions .....	21
Keys .....	22
The 4-Way Key .....	23
Quick keys .....	24
Soft Keys .....	25
Main menu .....	26
Icons .....	29

Basic Phone Use .....	30
Making an Emergency Call .....	30
Making/Ending a Call .....	30
Receiving/Rejecting a Call .....	31
Holding a Call .....	31
Making/Receiving a Second Call .....	32
Making a Conference Call .....	32
Receiving a Third Call .....	32
Text Entry .....	33
Changing Entry Mode .....	33
T9 Language .....	33
Character Table .....	35
<b>Settings .....</b>	<b>36</b>
General .....	36
Language .....	36
Time & date .....	36
Security .....	38
Voice control .....	39
Auto keypad lock .....	41
Headset .....	41
Shortcuts .....	41
Default storage .....	42
Flight mode .....	42
Profiles .....	43
Default settings .....	43
Display .....	43
Wallpaper .....	43
Themes .....	44
Backlight level .....	44
Backlight duration .....	44
Greeting .....	44
Sounds .....	45
Alert type .....	45
Ringtones .....	45
Ring volume .....	45
Key sound .....	45

Shutter sound .....	46
Connectivity .....	46
Call options .....	46
Message settings .....	50
Network .....	50
Browser .....	52
Connections .....	52
Bluetooth .....	52
USB features .....	53
Install Software .....	54
Memory card .....	54
<b>Browser .....</b>	<b>55</b>
WAP setup .....	55
WAP Page Connection .....	56
WAP push setting .....	56
<b>Tools .....</b>	<b>57</b>
Calendar .....	57
Alarm .....	58
Appointments .....	58
Tasks .....	59
Notes .....	59
Calculator .....	60
Calculation keys .....	60
Unit converter .....	60
Countdown .....	61
STK (SIM Tool Kit) .....	61
<b>Camera .....</b>	<b>62</b>
Camera mode .....	62
Video mode .....	63
<b>Messages .....</b>	<b>65</b>
Text Messages .....	66
Multimedia Messages .....	68
E-mail .....	69
Templates .....	71
Push Inbox .....	71
Cell info .....	72
Memory status .....	72

Voice mail .....	72
<b>Entertainment .....</b>	<b>73</b>
Games .....	73
Composer .....	74
<b>Contacts .....</b>	<b>75</b>
Create/View Contacts/SIM contact or PhoneBook .....	75
View groups .....	76
Special numbers .....	77
Quick call .....	77
Advanced .....	78
Memory status .....	78
<b>My player .....</b>	<b>79</b>
FM Radio .....	79
Tracks .....	80
Last played .....	80
Playlists .....	81
Voice memo .....	81
Background MP3 .....	82
<b>My data .....</b>	<b>83</b>
Managing files .....	83
Phone memory .....	83
Memory card .....	84
<b>Calls .....</b>	<b>85</b>
Call history .....	85
Clear history .....	86
Call settings .....	86
<b>Index .....</b>	<b>91</b>

## **TOSHIBA CORPORATION**

**IMPORTANT NOTE: PLEASE READ BEFORE USING YOUR MOBILE PHONE BY ATTEMPTING TO USE ANY SOFTWARE ON THE SUPPLIED HANDSET THIS CONSTITUTES YOUR ACCEPTANCE OF THESE EULA TERMS. IF YOU REJECT OR DO NOT AGREE WITH ALL THE TERMS OF THIS EULA, DO NOT ATTEMPT TO ACCESS OR USE THE SUPPLIED SOFTWARE.**

### **End User Licence Agreement**

This End User Licence Agreement ("EULA") is a legal agreement between you (as the user) and TOSHIBA CORPORATION ("Toshiba") with regard to the copyrighted software as installed in a Toshiba 2.5G mobile phone handset supplied to you (the "Handset").

Use or disposal of any software installed in the Handset and related documentations (the "Software") will constitute your acceptance of these terms, unless separate terms are provided by the Software supplier on the Handset, in which case certain additional or different terms may apply. If you do not agree with the terms of this EULA, do not use or dispose the Software.

1. **Licence Grant.** Toshiba grants to you a personal, non-transferable and non-exclusive right to use the Software as set out in this EULA. Modifying, adapting, translating, renting, copying, making available, transferring or assigning all or part of the Software, or any rights granted hereunder, to any other persons and removing any proprietary notices, labels or marks from the Software is strictly prohibited, except as expressly permitted in this EULA. Furthermore, you hereby agree not to create derivative works based on the Software.
2. **Copyright.** The Software is licenced, not sold. You acknowledge that no title to the intellectual property in the Software is or will be transferred to you. You further acknowledge that title and full ownership rights to the Software will remain the exclusive property of Toshiba, Toshiba's affiliates, and/or their suppliers, and you will not acquire any rights to the Software, except as expressly set out in this EULA. You may keep a back-up copy of the Software only so far as necessary for its lawful use. All copies of the Software must contain the same proprietary notices as contained in or on the Software and are subject to the terms of this EULA. All rights not expressly granted

under this EULA are reserved to Toshiba, Toshiba's affiliates and/or their suppliers.

3. Reverse Engineering. You agree that you will not attempt, and if you are a business organisation, you will use your best efforts to prevent your employees, servants and contractors from attempting to reverse engineer, decompile, modify, translate or disassemble the Software in whole or in part except to the extent that such actions cannot be excluded by mandatory applicable law and only if those actions are taken in accordance with such applicable law. Any failure to comply with the above or any other terms and conditions contained herein will result in the automatic termination of this licence and the reversion of the rights granted hereunder to Toshiba.
4. LIMITED WARRANTY. Only during the warranty period for the Handset, Toshiba, Toshiba's affiliate, its suppliers or its authorised service company will repair or replace, at Toshiba's sole discretion, defective Software unless such defect results from acts or phenomenon beyond the reasonable control of Toshiba. EXCEPT AS PROVIDED IN THIS EULA: (A) TOSHIBA, TOSHIBA'S AFFILIATES, AND THEIR SUPPLIERS DISCLAIM ALL WARRANTIES, CONDITIONS OR OTHER TERMS (WHETHER EXPRESS OR IMPLIED), INCLUDING BUT NOT LIMITED TO WARRANTIES, CONDITIONS AND TERMS OF SATISFACTORY QUALITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS; AND (B) THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE SOFTWARE IS WITH YOU. YOU ACCEPT THAT SOFTWARE MAY NOT MEET YOUR REQUIREMENTS AND NO WARRANTY CAN BE GIVEN THAT OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE.
5. LIMITATION OF LIABILITY. TO THE FULLEST EXTENT LEGALLY PERMITTED, IN NO EVENT SHALL TOSHIBA, TOSHIBA'S AFFILIATES OR THEIR SUPPLIERS BE LIABLE TO YOU FOR ANY DAMAGES FOR (A) LOST BUSINESS OR REVENUE, BUSINESS INTERRUPTION, LOSS OF BUSINESS DATA; OR (B) CONSEQUENTIAL, SPECIAL, INCIDENTAL OR INDIRECT DAMAGES OF ANY KIND (WHETHER UNDER CONTRACT, TORT OR OTHERWISE) ARISING OUT OF: (I) THE USE OR INABILITY TO USE THE SOFTWARE, EVEN IF TOSHIBA, TOSHIBA'S AFFILIATES OR THEIR SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES; OR (II) ANY CLAIM BY A

THIRD PARTY. SAVE AS SET OUT IN THIS SECTION, TOSHIBA'S ENTIRE LIABILITY UNDER THIS EULA SHALL NOT EXCEED THE PRICE PAID FOR THE SOFTWARE, IF ANY.

THE ABOVE DISCLAIMER AND LIMITATION DOES NOT EXCLUDE OR LIMIT (A) LIABILITY FOR DEATH OR PERSONAL INJURY CAUSED BY NEGLIGENCE OR (B) ANY MANDATORY LEGAL RIGHT OR LIABILITY TO THE EXTENT THAT IT CANNOT BE LAWFULLY EXCLUDED OR LIMITED UNDER APPLICABLE LAW.

PLEASE MAKE AND RETAIN A COPY OF ALL DATA YOU HAVE INSERTED INTO YOUR PRODUCT, FOR EXAMPLE NAMES, ADDRESSES, PHONE NUMBERS, PICTURES, RINGTONES ETC, BEFORE SUBMITTING YOUR PRODUCT FOR A WARRANTY SERVICE, AS SUCH DATA MAY BE DELETED OR ERASED AS PART OF THE REPAIR OR SERVICE PROCESS.

6. Laws. This EULA will be governed by the laws of England and Wales. All disputes arising out of this EULA shall be subject to the exclusive jurisdiction of the English Court.
7. Export Laws. Any use, duplication or disposal of the Software involves products and/or technical data that may be controlled under the export laws of applicable countries or region and may be subject to the approval of the applicable governmental authorities prior to export. Any export, directly or indirectly, in contravention of the export laws of applicable countries or region is prohibited.
8. Third Party Beneficiary. You agree that certain suppliers of the Software to Toshiba have a right as a third party beneficiary to enforce the terms of this EULA against you as a user.
9. Transfers. The Software may be transferred only as installed on the Handset to a lawful third party user, where that party accepts the terms of this EULA which will continue to apply.
10. IF YOU ARE DEALING AS A CONSUMER IN THE UK & THE SOFTWARE QUALIFIES AS 'GOODS' YOUR STATUTORY RIGHTS UNDER APPLICABLE LAW ARE NOT AFFECTED.

# Warranty and Safety

This section addresses important warranty and safety issues. You should read and thoroughly familiarise yourself with this section before using your phone.

## After Sales Service

Your Toshiba mobile telephone contains no user serviceable parts. For further information on service, contact your retailer or service provider.

## Safety Guidelines

Follow the guidelines below to use your phone in a safe and legal manner.

### General

- Use your phone in the intended manner; for example, hold it to your ear. Incorrect usage may affect its performance.
- Use only compatible batteries and accessories. Using incompatible items may permanently damage the phone.
- Do not connect the phone to any other device without reading the provided documentation. The other device may be incompatible.
- When making emergency calls from your phone, ensure that the phone is switched on and in service.
- Interference may affect your phone's performance. Once you move away from the source of interference, the phone should function as usual.
- When using ear buds or other headphones, be careful not to listen at excessive volume. Listening to very loud sound levels may lead to hearing loss. Also, listening through the ear buds or headphones for prolonged periods of time, even at normal sound levels, may lead to hearing loss. You should consult your doctor for more information on proper use of ear buds or headphones.

## Operating Environment

- Do not use the phone hand-held while driving or otherwise operating machinery. If using the phone hand-held, park the vehicle before conversing. If using an integrated hands-free device, make sure the phone is securely in its holder.
- Switch your phone off when entering a hospital or other such institutions. Medical equipment may be effected by the phone so you should observe any building regulation governing phone usage.
- Switch your phone off when on an aircraft. The aircraft's systems may be affected by the phone signal. You are legally obliged to comply with this recommendation.
- Switch your phone off in any facility where posted notices so require.
- Do not use your phone when refuelling. You should keep your phone away from fuel and chemicals.
- Switch your phone off when blasting is in progress. Observe any provided guidelines or regulations.
- Switch your phone off when in an area of a potentially explosive atmosphere (for example fuel storage areas, spray paint facilities etc.).
- Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty. For more information, check with the manufacturer, or its representative for your vehicle.

## Electronic Devices

- If you wear a pacemaker, or are in the company of someone who does, you should be aware that there is a small risk of your phone interfering with the operation of the pacemaker. Only certain types of pacemakers are affected and only if the mobile phone is placed directly next to one. You should consult your doctor or the pacemaker manufacturer for more information.
- Your phone may interfere with some hearing aids. If this happens you should contact your service provider or doctor.
- Your phone may interfere with the functionality of inadequately shielded medical devices. Consult a physician or the device manufacturer to ensure safe practice.

- Your phone may interfere with the functionality of any inadequately shielded electronic system in a motor vehicle. Examples include air-bags and fuel injection systems. You should contact the vehicle manufacturer to ensure proper shielding.

## Battery Safety

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, buy a new battery.

- A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used. The battery can only be charged in temperatures between 0 °C (+32 °F) and +45 °C (+113 °F).
- Only use batteries approved by Toshiba and only recharge the battery with the recommended charger supplied by Toshiba.
- When the charger is not in use disconnect it from the power source.
- Do not leave the battery connected to the charger and power source for longer than necessary as overcharging it will shorten its life.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object causes a direct connection between the + and - terminals of the battery.
- Do not expose the battery to extreme temperatures, for example, a fridge or a car exposed to direct sunlight, as this will affect its performance.
- Do not dispose of the battery in a fire.
- Do not dispose of the battery in an ordinary bin. The battery contains toxic chemicals and must be disposed of in the correct manner. Contact your local authority for more information.

## SOS Soft Key

The **SOS** soft key enables you to call the emergency services without entering your PIN, inserting your SIM card or when your phone is blocked.

The **SOS** soft key is only active prior to the PIN being entered. To use it simply press and confirm with the **Yes** soft key.

## Care and Maintenance

If you maintain your phone and all other parts and accessories supplied with the original box, ("phone"), in good condition, the quality of your phone usage as well as the phone life span will be greatly enhanced. If you follow the suggestions below, this will also help you fulfil warranty obligations.

- Keep the phone and all the parts and accessories out of the reach of small children.
- Keep the phone dry as moisture of any kind can contain minerals that will corrode the electronic circuits.
- Do not use or store the phone in dusty or dirty locations as the movable parts of the phone can be damaged.
- Do not use or store the phone in excessively hot places. High temperatures will shorten the life-span of the phone, damage the battery or warp/melt the plastic used in the phone's manufacture.
- Do not store the phone in excessively cold places. When there is a difference in temperature between the room and the phone, condensation can form inside the phone, causing damage to the electronic circuits.
- Do not open the phone unless absolutely necessary, for example, to install the battery or SIM card. We recommend that you go to your dealer when problems arise with either of these items and allow their experts to handle the phone instead.
- Do not mishandle or abuse the phone. Dropping, knocking or shaking it can damage the internal circuits.
- Do not use harsh chemicals, strong detergents, or cleaning solvents to clean the phone. If you must clean it, then use a soft, clean and dry lint-free cloth.
- Do not apply paint or other such substances to the phone. This could clog the phone's movable parts.
- If the phone or any of the accessories are not working as they should, consult your dealer who can provide you with the expert assistance required.
- Electrical interference may affect your phone's performance. This is perfectly normal and once you move away from the source of interference, the phone should function as usual.
- Do not attempt to disassemble your product, including accessories. Only Toshiba authorised personnel should perform the service.

## The following information is for EU member states only:

The use of this symbol indicates that this product may not be treated as household waste. By ensuring the correct disposal of this product, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local city council, your household waste disposal service or the shop from where you purchased the product.



## FCC Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

## European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.707 W/kg\*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide\*\*. In this case, the highest tested SAR value is 0.937 W/kg

As SAR is measured utilising the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organisation has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body. Additional information can be found on the websites of the World Health Organisation (<http://www.who.int/emf>).

\* The tests are carried out in accordance with international guidelines for testing.

\*\* refer to the <FCC RF Exposure Information> section about body worn operation.

## **FCC RF Exposure Information**

In August 1996 the Federal Communication (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved internal antenna. Unauthorised antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset when tested for use at the ear is 0.749 W/kg and when worn on the body, as described in this user guide, is 0.529 W/kg. Body-worn Operation; This

device was tested for typical body-worn operations with the back of the handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

The FCC has granted an Equipment Authorisation for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccfid> after searching on FCC ID HFS-SD3-E02. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.phonefacts.net>.

## Licences

- T9® Text Input and the T9® logo are registered trademarks of Tegic Communication. "T9 Text Input is licenced under one or more of the following:



U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162, 6,646,573; Australian Pat. Nos. 727539, 746674, and 747901; Canadian Pat. Nos. 1,331,057, 2,302,595, and 2,227,904; Japan Pat. No. 3532780, 3492981; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK1010924; Republic of Singapore Pat. No. 51383, 66959, and 71979; European. Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2); Republic of Korea Pat. Nos. KR201211B1 and KR226206B1. People's Republic of China Pat. Application Nos. 98802801.8, 98809472.X and 96196739.0; Mexico Pat. No. 208141; Russian Federation Pat. No. 2206118; and additional patents are pending worldwide"

- This product contains Openwave Systems Inc.'s Openwave internet browser software.

Copyright © 1999-2006 Openwave Systems Inc.

Openwave® is a registered trademark or trademark of Openwave Systems Inc. in Japan and selected countries worldwide. It is certified with Master browser licence agreement No. 000336.

- CE 0168
- Bluetooth™ is a trademark of Bluetooth SIG, Inc. USA.



- Java™ and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc.
- microSD™ is a trademark of the SD Card Association.



# Declaration of Conformity of Toshiba

**TOSHIBA**

TOSHIBA INFORMATION SYSTEMS (U.K.) LTD  
MOBILE COMMUNICATIONS DIVISION  
Watchmoor Park, Riverside Way, Camberley, Surrey GU15 3YA  
Tel: +44 (0)1276 405100 Fax: +44 (0)1276 405111

## DECLARATION OF CONFORMITY

We, **Toshiba Information Systems UK (Ltd), Mobile Communications Division**

of **Toshiba Court  
Weybridge Business Park  
Addlestone Road  
Weybridge  
KT15 2UL**

declare under our sole responsibility that the product

**TS605/TS32/TS2050**  
Type (Model) Name is **SD3-E02**

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

**3GPP TS 51.010-1, EN 301 489-1, EN 301 489-7, EN 301 489-17, EN55013, EN55020, EN 300 328, EN 60950 and EN 50360**

We hereby declare that all essential radio test suites, EMC & safety requirements have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10(5) and detailed in Annex IV of Directive 199/5/EC has been followed with the involvement of the following Notified Body(ies):

**BABT, Claremont House, 34 Molesey Road, Walton-on-Thames, KT12 4RQ**

Identification mark: **0168**

The technical documentation relevant to the above equipment will be held at:

**Toshiba Information Systems UK (Ltd), Mobile Communications Division  
Riverside Way, Camberley, Surrey, GU15 3YA**

Name:- **Noritaka Tanigawa**

Title:- **Deputy Managing Director of TIU  
General Manager Mobile Communications Division**

Signature:-



Date:-

**5-10-06**



Registered Office: Toshiba Court, Weybridge Business Park, Addlestone Road, Weybridge, Surrey KT15 2UL  
Registered Number: 918861 England. Telephone (Switchboard) 01932 841600 Facsimile 01932 852455  
www.toshiba.co.uk



# Setting up the Phone

This section describes basic operations such as inserting your SIM card, charging the battery, and entering your PIN.

The following must be completed before you begin using the phone:

 
- Ensure that the battery is inserted
- Ensure that the SIM card is inserted
- Charge the phone's battery

## Battery


The battery included with your phone is not charged. Before switching on your phone for the first time, you need to insert the phone's battery and charge it.

## Inserting or Changing the Battery


To insert or change the battery:

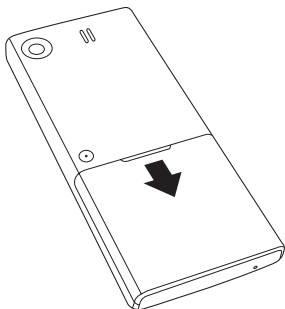

 **Step 1:**  
Pull down the battery  
cover to remove it.

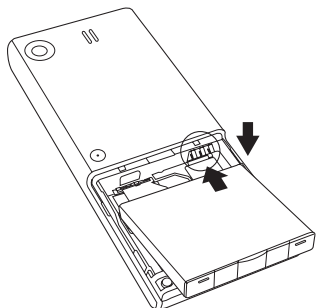

 
**Step 2:**  
Insert your battery with  
the metallic part in contact  
with the phone's and  
gently press it down.

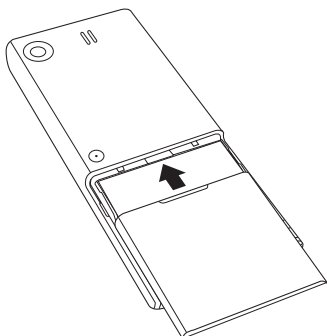


**Step 3:**  
Replace the battery cover.

## Charging the Battery

 To charge the battery:

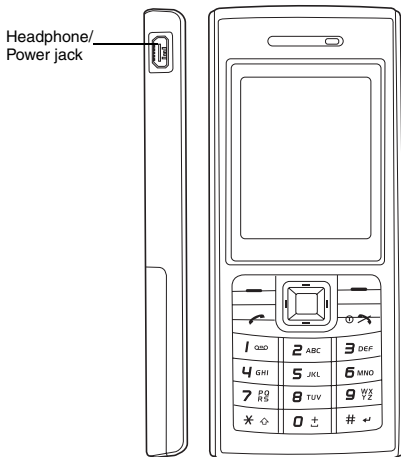

 **Step 1:**  
Locate your charger  
connector on your left of  
the phone

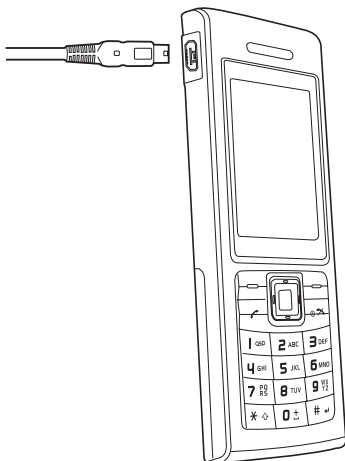

**Step 2:**  
Connect the charger to  
the phone. Plug the  
charger into a power  
socket. The charger  
connection screen will be  
displayed.



**During charging there is a possibility that the charging indicator may not appear. Please keep the phone charged for a while before you disconnect the charger.**

### Disconnecting the charger






To disconnect the charger, grip it tightly and pull. You should disconnect the charger from the power outlet before disconnecting the charger from the phone.

### Charging Indicator

The first time you charge your battery, you should leave it charging for 8 hours. The battery achieves optimum performance after two or three complete charges.

When the battery power is low, the phone starts beeping and the **Battery empty!** will be displayed every 30 seconds and will be automatically powered off within three minutes.

When in use and during charging, the indicator shows the following icons:

Icon	Description	Icon	Description
	Battery empty		Battery nearly full
	Battery nearly empty		Battery full
	Battery half full		

When the battery is fully discharged, the charging indicator is not displayed and will not appear after the phone has recharged sufficiently. For safety information regarding the battery, refer to *"Battery Safety" on page 6.*



Always turn off the phone before removing the battery.



Note that if the battery is empty and not used for a couple of days there is the possibility that the charging indicator may not be displayed until after a maximum time of 30 minutes after the phone is charged again.

 
## SIM Card

Your SIM card identifies your phone on the network and stores your details, including your PIN, call history, and subscription information. It can also be used to store some phone book data. For more information, refer to *"Contacts" on page 75*.


You should only remove your SIM card when absolutely necessary. If it is lost or damaged, the information stored on it cannot be retrieved.

### Inserting / Removing the SIM Card


Turn to the back of your phone to locate your battery cover. To insert or remove the SIM card (Steps 1-5):

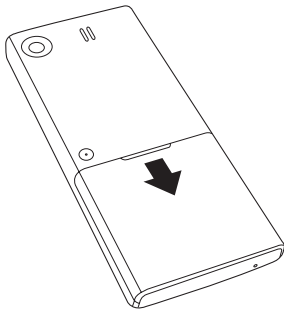

 
**Step 1:**  
Pull down the battery cover to remove it.

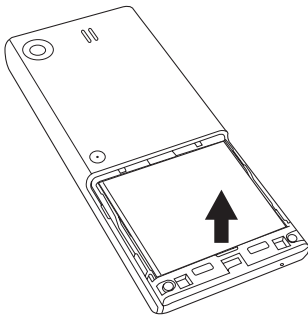

**Step 2:**  
Remove the battery.

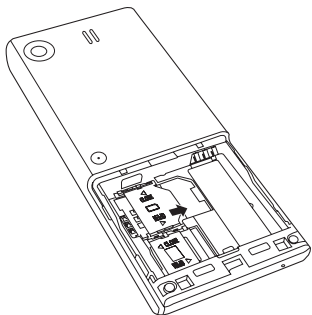 


 **Step 3:**  
Push the SIM locker to the right to unlock and lift it up.

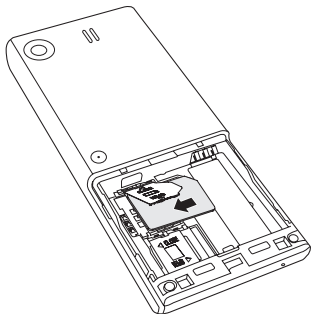

**Step 4:**  
Insert your SIM card into the SIM card holder with the card's metallic connector in contact with the phone's and the notched corner on the right.

 (To remove your SIM card, simply lift it off the SIM card holder.)

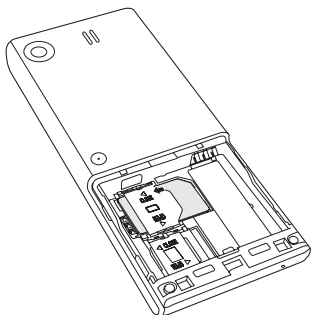

**Step 5:**  
Gently press down the SIM locker and push it to the left to lock.

## Personal Identification Numbers (PINs)

 
When you switch on your phone, you may be requested to enter your PIN or phone code if your phone requires you to do so. This number should be in the documentation supplied by your service provider.

If you enter the wrong PIN three times in a row your phone will be blocked. You will then require your PUK number to unblock it. For more information about your PIN and PUK number, refer to *"Security" on page 38*.


## Memory slot

Your phone supports a microSD card up to 1GB. The Memory card slot is located under the battery. The battery cover is located on the rear of the phone.


To insert or remove the Memory card (Steps 1-5):

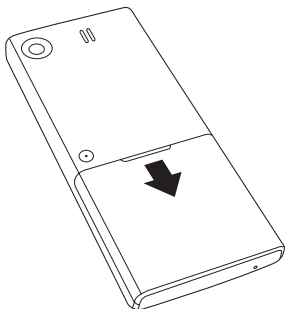

 
Step 1:  
Pull down the battery cover to remove it.

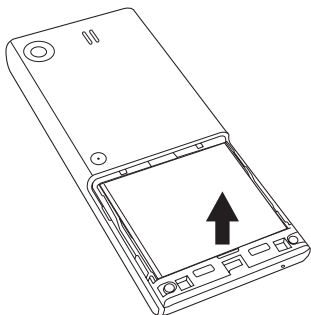

 Step 2:  
Remove the battery.

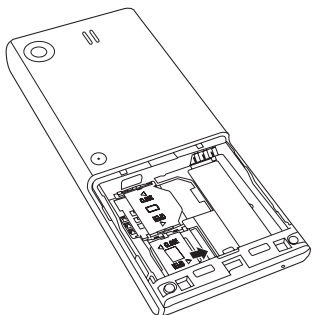


 **Step 3:**  
Push the memory card  
locker to the right to  
unlock and lift it up.

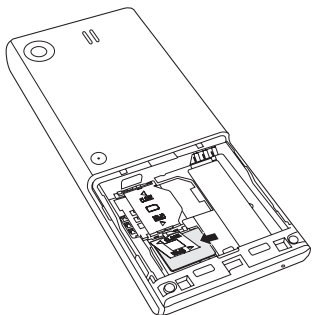

**Step 4:**  
Insert your memory card  
into the memory card  
holder with the card's  
metallic connector in  
contact with the phone's  
and the notched corner on  
the right.

 (To remove your memory  
card, lift it off the memory  
card holder.)

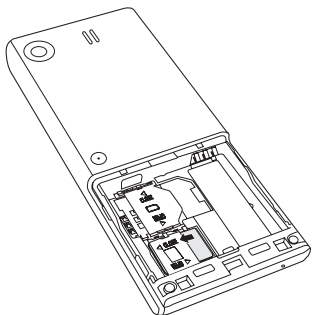


**Step 5:**  
Press down the memory  
locker and push it to the  
left to lock.

# General Information

 
 


 

 
This section explains the features of your phone. Familiarise yourself with the phone before you start using it.
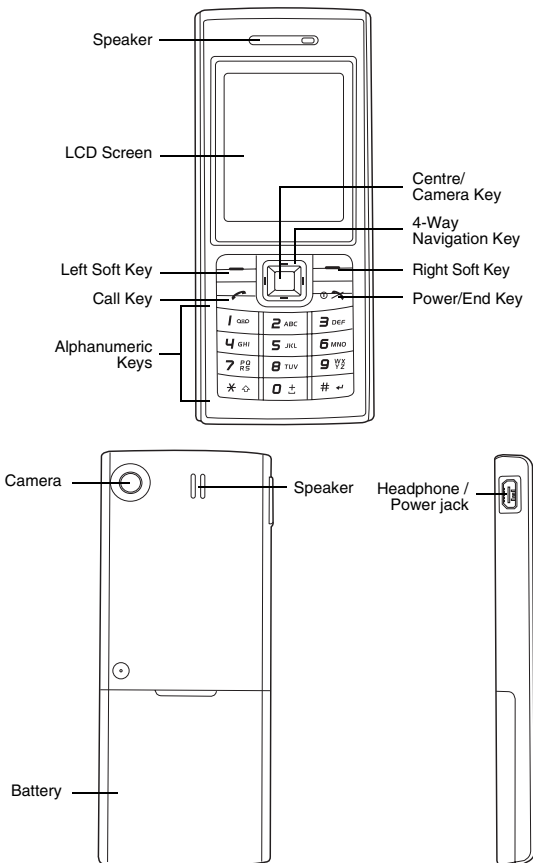
## Parts and Functions



## Keys

Each of the keys on your phone has one or more functions, as explained in the table below.

Key	Function(s)
<b>4-way key</b>	To navigate the phone's menu system. For more information, refer to <i>"The 4-Way Key" on page 23.</i>
<b>Centre key</b>	To enter the selected menu, confirm the selection, submit an entered number or piece of text. For more information, refer to <i>"The 4-Way Key" on page 23.</i>
<b>Soft keys</b>	Press to access the functions available for the soft keys. For more information, refer to <i>"Soft Keys" on page 25.</i>
	To dial a number or accept an incoming call; also from the idle screen, press once to display the <b>Dialled calls</b> list, and press twice to redial the last number called.
	To turn on/off the phone, reject an incoming call, end a call, cancel a selection, return to the idle screen from any phone menu.
	From the idle screen, press and hold to enter "+" and display the <b>Codes</b> (for international codes)."
	From the idle screen, press and hold to access <b>Voice mail</b> .
	Press and hold to access shortcut functions. For more information, refer to <i>"Shortcuts" on page 41.</i>
	From the idle screen, press and hold to lock the keypad. During text editing, press to switch entry method.
	During text editing, press to access to the symbol chart. In idle screen, press and hold to bring up the <b>Profiles</b> menu. And it also can be personalised in "Shortcuts".

## The 4-Way Key

 
Your phone has an easy-to-use menu system that can navigate you using the 4-way key.

### ▲ Up

- To scroll up lists or move the cursor upwards.
- To access **Calendar** menu from the idle screen.
- To increase the brightness level in camera preview mode.
- Short Press - Play previous song (if background MP3 is playing)

### ◀ Left

- To scroll left or move the cursor to the left of the screen.
- Press and hold to access **Create** from the idle screen.
- To select camera mode under the video mode.
- To decrease volume during a call.
- Long Press - Stops background MP3

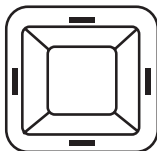

### Right ▶

- To scroll right or move the cursor to the right of the screen.
- To access **My data** from the idle screen.
- To select Video mode under the camera mode.
- To increase volume during a call.
- Long Press - activates background MP3 player
- Long Press - pause background MP3 track













- To scroll down or move the cursor downwards.
- To access **Phonebook/SIM contacts** from the idle screen.
- To reduce the brightness level in camera preview mode.
- Short Press - Play next song (if background MP3 is playing).





### Down ▼

### Centre key

- To confirm the function.
- To access the Main Menu from the idle screen.
- To toggle a desired function on/off in a menu screen.
- To take a picture/shoot a video in camera/video mode.

## Quick keys

To	Key Sequence	Mode
View recent calls	Press  once	Standby
Call voice mail	Press and hold 	Standby
Access <b>My Player</b>	Press the Right Soft Key	Standby
Access <b>Camera</b>	Press the Left Soft Key	Standby
Access <b>My data</b>	Press  key	Standby
Access <b>Phonebook / SIM contacts</b>	Press  key	Standby
Access <b>Calendar</b>	Press  key	Standby
Access <b>Create</b>	Press  key	Standby
Quick dial a phonebook number	Enter the number of <b>Position in SIM</b> and press  to display the number quickly. Press  to dial the number.	Standby
Switch on/off the phone	Press and hold 	Standby
Select a menu item	Press Centre key	In the menu
Exit a menu	Press  or Right Soft Key	In the menu
Put a call on hold or retrieve a call on hold	Press <b>Hold</b> or <b>Retrieve</b> soft keys.	During a call
Reject/end a call	Press 	Receiving/during a call
Enter a space	Press 	Entering text

To	Key Sequence	Mode
Enter a symbol	Press  until the desired symbol appears or press  to display the symbol chart. Use the arrow keys to select the symbol or press <b>options</b> . Add symbol to display the symbol chart.	Entering text
Lock keypad	Press and hold 	Standby
Unlock keypad	Press Right Soft Key and 	Standby

## Soft Keys

Your phone has two keys called "Soft keys." The function of these keys depends on the menu being displayed at the time. The available function is displayed above the soft keys, as shown below.

 
The default soft keys (i.e. the ones displayed in stand-by mode) are **Camera** and **My player**. Pressing the soft keys will take you directly to the functions. However, you can redefine the Softkey functions. For more information, refer to *"Shortcuts" on page 41*.



If PIN entry is required when you turn on your phone, the SOS soft key will be available before you enter the PIN. For more information, refer to *"SOS Soft Key" on page 6*.

## Main menu

Your phone's menu structure starts with the 12 Main menu icons in a grid view. Press the Centre key to access the **Main Menu** from the idle screen. Navigate to the desired menu by using the 4-way navigation key, then press the Centre key or **Select** to access the sub-menu.

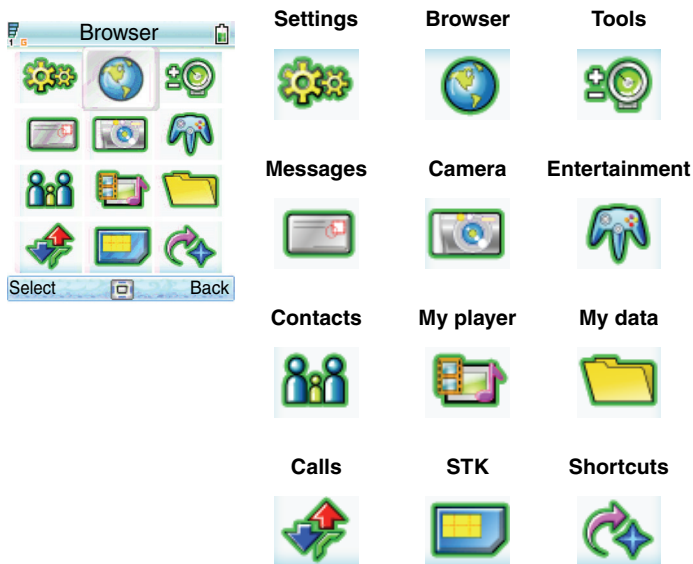

Menu	Description
<b>Settings</b>	Includes a variety of phone settings. For more information, refer to <i>"Settings" on page 36</i> .
<b>Browser</b>	Provides access to the Internet. For more information, refer to <i>"Browser" on page 55</i> .
<b>Tools</b>	Provides extra features such as <b>Calendar, Alarm, Appointments, Tasks, and Calculator</b> . For more information, refer to <i>"Tools" on page 57</i> .

Menu	Description
<b>Camera</b>	Allows you to take a picture/shoot a video by using the display as a view finder. For more information, refer to <i>"Camera" on page 62.</i>
<b>Messages</b>	Provides SMS/MMS/E-mail functions. For more information, refer to <i>"Messages" on page 65.</i>
<b>Entertainment</b>	Provides entertainment features: Games, Java Games and Composer. For more information, refer to <i>"Entertainment" on page 73.</i>
<b>Contacts</b>	Stores a list of phone contacts and shows memory status. For more information, refer to <i>"Contacts" on page 75.</i>
<b>My player</b>	Allows you to listen to music, the FM radio and record voice memos on your phone. For more information, refer to <i>"My player" on page 79.</i>
<b>My data</b>	Accesses all the files on your phone and manage your phones files. For more information, refer to <i>"My data" on page 83.</i>
<b>Calls</b>	Records a call history list. For more information, refer to <i>"Calls" on page 85.</i>
<b>STK</b>	Provides SIM related functions (depending on yourSIM card).
<b>Shortcuts</b>	Allows you to access some features quickly. For more information, refer to <i>"Shortcuts" on page 41.</i>

## Menu Structure



Note: On the **Main Menu** screen, you can press the 4-way key to scroll to the desired option. Alternatively, you can press the number key (0-9), the **\* ◁** and the **# ▷** to access any menu directly. For example, press **8 TUV** to access **My player**.

 
Key	Main Menu	2nd Level
<b>1 GHI</b>	Settings	General Display Sounds Connectivity
<b>2 ABC</b>	Browser	Homepage Favourites Settings
<b>3 DEF</b>	Tools	Calendar Alarm Appointments Tasks Notes Calculator Unit converter Countdown
<b>4 GHI</b>	Messages	Create Inbox Outbox Drafts Templates Push Inbox Cell info Memory Status Settings
<b>5 JKL</b>	Camera	<View Finder>
<b>6 MNO</b>	Entertainment	Games Composer

Key	Main Menu	2nd Level
<b>7 PQRS</b>	Contacts	View Contacts View groups Special numbers Calendar Advanced Memory status
<b>8 TUV</b>	My player	FM radio Tracks Last Played Playlists Voice memo Background MP3
<b>9 WXYZ</b>	My data	My data Memory card
<b>* ◁</b>	Calls	Call history Clear history Call Settings
<b>0 ±</b>	STK*	SIM related functions
<b># ▷</b>	Shortcuts	Fast keys Hot keys



\* The feature is subscription dependent. Contact your service provider.

## Icons

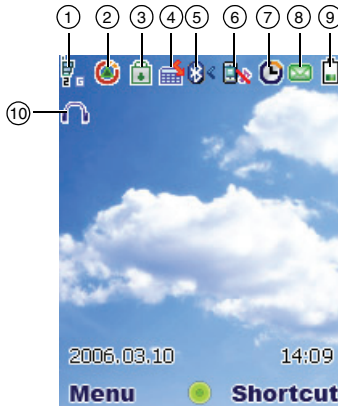Your phone has a 262,000-colour LCD screen. The icons displayed on the screen are explained below.



No.	Icon	Description
1		Signal strength (low to high)
2		Roaming
3		Keypad lock
4		Appointments
5		Bluetooth (active/ connecting)
6		Phone set to mute/Vibrate
7		Alarm set
8		Message indicator

No.	Icon	Description
9		Battery level (empty to full)
10		Headset

## Basic Phone Use


 
### Making an Emergency Call


Emergency calls can be made without credit on your phone and in some cases without a SIM card inserted. To make an emergency call, dial the local emergency number or, if available, press **SOS**, followed by **Yes**.

### Making/Ending a Call




Before you can make a call, you need to insert your SIM card and make sure your phone is switched on.

To make/end a call (Steps 1-3):


1. Enter a phone number (including area codes if necessary) using the keypad keys.
2. Press  to dial the number.
3. Press  to terminate the call.

Alternatively, you can select a contact from Contacts and press  to dial the number:

To make a call from Contacts (Steps 1-3):

 

1. Press  > **Contacts** > **View Contacts**. Alternatively, press  from the idle screen to view contacts.
2. Scroll to the desired entry.
3. Press .

When there is more than one phone entry in a contact, you may set one of the numbers as the **Default number**. Therefore, you can view/call it whenever you bring up the contact's detail.





1. Press  > **Contacts** > **View Contacts** > Select **Phonebook**.
2. Scroll to the desired entry.
3. Press **Options** > **Default number**

When you enter a new entry in your SIM contacts, the phone assigns a **Position in SIM** number. Use, this you can speed dial a number.

To speed dial a number (Steps 1-3):

1. Enter a **Position in SIM** number by using the keypad keys.
2. Press  to request the phone number from the contacts.
3. Press .


To dial a number from the **Call history** lists (Steps 1-4):

1. Press  from the idle screen.
2. Press  to scroll to the desired call list.
3. Press  to scroll to the desired number.
4. Press .

## Receiving/Rejecting a Call

 When there is an incoming call, the phone rings/vibrates (depending on your Profile set) and the screen displays the name (if recorded in the **Contacts**) or phone number of the caller (this feature is network dependent).

To receive a call, press  or **Options** > **Accept call**.

To reject a call, press  to **Reject**.

## Holding a Call

A call may be put on hold.

To place a call on hold:

During a call, press **Hold**. Alternatively, press **Options** and select **Hold**.

## Making/Receiving a Second Call

Your first call is put automatically on hold by your phone when you receive or dial a second call.

To make a second call (Steps 1-3):

1. During a call, press the keypad keys to enter a number.
2. Press **Options** and select **Dial**.



When you make the second call, the first call will be automatically put on hold.

3. Press **Swap** to switch between two calls.


## Making a Conference Call

When you have one active call and another one on hold, you can connect the two calls for a conference call.

To make a conference call (Steps 1-2):

1. Press **Options** > **Conference** to connect the two calls.
2. Press **Options** > **End Call** to disconnect the two calls.

To make a second call (Steps 1-2):

1. During an active call or during a call on hold, enter a phone number by pressing the keypad keys.
2. Press .



This feature is subscription dependent.

## Receiving a Third Call


If you have a third call is coming in while you have one call is on hold and another active, answering the third call will end the active call and replace it with the newly received one. Alternatively, you can receive a third call when you have the first two calls connected (using the **Conference Call** feature).

# Text Entry

## Changing Entry Mode

This section describes how to enter text by using your keypad keys.

In the edit screen, an indicator displays the currently applied entry mode. When creating a new SMS or MMS, there is a word counter above the indicator, telling you how many characters you can still enter.


To turn T9 predictive text input on/off, press and hold  in an edit screen.

To change entry method, press  to switch between the following modes:

T9 Entry Method	Normal Entry Method
T9 abc	abc
T9 Abc	Abc
T9 ABC	ABC
123	123

## T9 Language

Your phone supports T9 predictive text input in a number of languages. To select a T9 language (Steps 1-3):

1. Press  > **Settings** > **Language** > **T9 language** > **T9 language**.
2. Scroll to the desired language.
3. Press **Select**.




Setting the T9 language to **Automatic** allows the phone to select a language for you.

## T9 Preferred

The T9 preferred setting displays the preferred T9 language when you edit SMS or MMS messages. If the setting is off, T9 entry will be switched off when you edit messages.






To disable T9 preferred (Steps 1-2):

1. Press  > **Settings** > **Language** > **T9 Language** > **T9 preferred**.
2. Press **Change**.



 
### T9 English Entry Method

T9 predictive text offers possible word combinations by searching the T9 dictionary. Below is an example of how this is done.

To enter "Cat" in your edit screen (Steps 1-4):




1. Press    using the keypad keys. "**Act**" appears on the screen.
2. Press Left Soft Key to go to the next possible combination such as **Cat, Bat, Abu, Cau**, etc.
3. Stop pressing Left Soft Key when "**Cat**" appears on the screen.
4. Press  to add the word and press  to enter a space after the word.

Other key functions:


1.  : Enters the word and adds a space after it.
2. Right Soft Key: Deletes the letter on the left of the cursor.
3. Left Soft Key: Opens **Options** menu or goes to the next possible T9 word combination.
4.  : Press to switch between entry modes (upper or lower case).
5.  : Press once to open the symbols chart; press and hold to select T9 language.

### Normal Entry Method

To enter "Act" in your edit screen (Steps 1-3):

1. Press  once to enter "**A**".
2. Press  three times for the display to jump to "**c**".
3. Press  once for "**t**".

 
 










### Numeric Entry Method

Press  until 123 is displayed.


Press the numeric key to enter the number.

## Character Table

Numeric keys have different functions under different entry methods. refer to the following table for details

	Lower case	Upper case
	Press once to bring up the symbol chart; press and hold to select T9 language.	
	Press once to switch between different entry methods: <b>ABC, Abc, abc</b> or <b>123</b> ; press and hold to turn T9 predictive text input on/off.	
	Space, Enter and 0	
	., @ ? ! - & : ' / 1	
	abc2àáâãäåçæâ	ABC2ÀÁÂÃÄÅÇÆÄ
	def3èéêë	DEF3ÈÉÊË
	ghi4îï	GHI4 ÎÏ
	jkl5	JKL5
	mno6óôõöøœ	MNO6ÓÔÕÖØ
	pqrs7ß	PQRS7
	tuv8ùúûü	TUV8ÙÚÛÜ
	wxyz9ø	WXYZ9Ø



To change upper/lower case, press the  to switch between different entry modes (for example: abc or ABC).



# Settings

You can customise your phone by changing the following options in the **Settings** menu: **General**, **Display**, **Sounds** and **Connectivity**. After entering the **Settings** menu, you can press ◀▶ key to scroll to the desired submenu.



## General

Under the **General** submenu, you can define the following settings: **Language**, **Time & date**, **Security**, **Voice control**, **Auto keypad lock**, **Headset**, **Shortcuts**, **Default storage**, **Flight mode**, **Profiles** and **Default settings**.

## Language

This menu allows you to select a text entry language (T9 language) and phone language (**Display language**). For details about T9 language, refer to *"Text Entry" on page 33*.

To set a phone language (Steps 1-3):

1. Press  > **Settings** > **General** > **Language** > **Display language**.
2. Scroll ▲/▼ to select a desired language.
3. Press **Select** or  to confirm.




If you set the **Display language is set to Automatic**, the phone will automatically select a language for you.





## Time & date

This feature allows you to set the time and date.


To set the time display on/off (Steps 1-2):

1. Press  > **Settings** > **General** > **Time & date** > **Display time**.
2. Press **Change** to turn it on/off.


To set the **Time zone** (Steps 1-4):

1. Press  > **Settings** > **General** > **Time & date** > **Time zone**.
2. Press /  to scroll to the desired time zone.
3. Press **Select** or  to confirm.
4. Select **Yes/No** to use **Daylight saving** mode.



To set the time & date (Steps 1-5):

1. Press  > **Settings** > **General** > **Time & date** > **Set time & date**
2. Select **Time** and enter the time by using the keypad keys.
3. Press **Ok** to confirm and go back to the previous menu.
4. Select **Date** and enter the date by using the keypad keys.
5. Press **Ok** to confirm.




To set the **Time format** (Steps 1-2):

1. Press  > **Settings** > **General** > **Time & date** > **Time format**.
2. Press **Change** to switch between **12 hours** and **24 hours**.

To set the **Date format** (Steps 1-2):

1. Press  **Settings** > **General** > **Time & date** > **Date format**.
2. Press **Select** or  to choose a format (**DD/MM/YYYY**, **MM/DD/YYYY**, **YYYY/MM/DD**, **YYYY.MM.DD**, **DD.MM.YYYY**, **YYYY-MM-DD**, **DD-MM-YYYY**).

To set the **Power-on/Power-off time** (Steps 1-4):

1. Press  > **Settings** > **General** > **Time & date** > **Power-on time or Power-off time**.
2. Press **Change** and /  to turn the feature on/off.
3. When the **Power-on time/Power-off time** feature is turned on, you need to specify an exact time by using the keypad keys.
4. Press **Save**.

## Security


The Security menu provides settings that prevent unauthorised use of your phone. Before you can change any security settings, you will be asked to enter the following codes:

- **PIN code request** (a SIM protection feature)
- **PIN code** (a protection code if your SIM is stolen. It is provided by your network)
- **PIN2 code** (a protection code for charging information and FDN service)
- **PUK/PUK 2 code** (unlocking codes in case you forget your PIN/PIN2 codes)
- **Phone lock** (provided by the phone)

### PIN code request

This setting allows you to enable the SIM PIN feature, protecting your SIM card from unauthorised use. Contact your service provider for your SIM PIN code.

To set your PIN code request (Steps 1-3):

1. Press  > **Settings** > **General** > **Security** > **PIN code request**.
2. Press **Select** to turn **PIN code request Enable/Disable**.
3. To turn on **PIN code request**, the phone asks you to Enter a **PIN code**.




If you enter the wrong PIN code three times, the SIM card will be locked.

### Changing PIN/PIN2

You will be requested to enter your PIN when the phone is switched on. However, this feature can be turned off, which leaves your phone at risk of unauthorised use if it is lost or stolen. You can only change PIN codes when PIN code request is set to enable.

To change PIN/PIN2 lock code (Steps 1-5):


1. Press  > **Settings** > **General** > **Security** > **Change PIN/PIN2 lock code**.
2. Key in the current code.

3. Key in the new code.
4. Enter the new code again.
5. Press **Ok**.

### Phone Lock


This setting allows you to enable the phone lock feature, preventing unauthorised use. Note that the default phone lock code is 123456.

To turn on your phone lock (Steps 1-2):

1. Press  > **Settings** > **General** > **Security** > **Phone lock** > **On**.
2. When the phone lock is set to **On**, enter the default phone lock code to unlock your phone.

### Phone lock code

This setting allows the changing of the phone lock code

1. Press  > **Settings** > **General** > **Security** > **Phone lock code**.
2. Enter the current phone code (default 123456) press OK.
3. Enter the new phone code using the numeric keypad (min 6 and max 16 numbers).


### Voice control

By pre-recording voice tags on your phone, you can call up an option or a contact's phone number by saying the recorded voice tag to your phone. For example, if you have recorded **Calculator** in your phone, you can call up the feature later by saying **Calculator**.

## Voice command

Voice command allows you to record a voice tag for the options you would like to activate later by a voice command.

To create a Voice command (Steps 1-5):

1. Press  > **Settings** > **General** > **Voice control** > **Voice command**.
2. Scroll ▲/▼ to the desired feature and press **Record**.
3. Press **Yes** to create **Recording for**: the desired feature.
4. You can record the voice tag up to three times.
5. Press **Save**.


## Voice Dialling

Voice Dialling allows you to record a voice tag for the contact's name.


To create a voice tag (Steps 1-5):



Voice tags can only be applied to contacts stored on the phone.


1. Press  > **Contacts** > **View contacts** > **Phonebook**.
2. Scroll ▲/▼ to the desired contact and press **Options**.
3. Select **View**.
4. Press **Edit** and Scroll down to Voice command and press **Record**.
5. Press **Yes** and start recording the voice tag (a maximum of 3 recordings will be needed to complete recording).

To view details of Voice dialling follow the instructions below:

1. Press  > **Settings** > **General** > **Voice control** > **Voice dialling**.
2. Scroll ▲/▼ to the desired contact and press **Select**.
3. Choose to:
  - View - See contacts details.
  - New sample - Re-Record the voice tag.
  - Delete - Delete the voice tag.
  - Delete all - Delete voice tags for all contacts.

- Play - Listen to the current voice tag.

Having created a voice tag follow the instructions below to use it.

1. Press  > **Shortcuts**.
2. Scroll ▲/▼ to the desired keypad number (1-9).
3. Press **Options** > **Personalise**.
4. Press Left Soft Key **Activate**.
5. Scroll ▲/▼ to Voice Recognition press **Select**.
6. On the main screen press and hold down the selected shortcut key.
7. Speak when asked to do so.

## Auto keypad lock

This feature allows you to lock the phone keypad automatically or after a desired period of time.

To set the Auto keypad lock:

1. Press  > **Settings** > **General** > **Auto keypad lock**.

Press **Select** to choose from the following settings: **Off**, **After 1 minute**, **After 2 minutes** and **After 5 minutes**.

## Headset

This feature allows you to choose the sound from Headset and speaker or Headset only.

To set the Headset:


1. Press  > **Settings** > **General** > **Headset**.

Press **Select** to choose from the following settings: **Headset&Speaker** and **Headset**.

## Shortcuts


Shortcuts allow you to access phone functions quickly by pressing (and holding) keypad keys-including numeric keys and 4-way navigation key.

To set shortcut functions for numeric keys (Steps 1-4):

1. Press  > **Settings** > **General** > **Shortcuts**.
2. Press ◀/▶ key to select **123** submenu.

3. Scroll ▲/▼ to a desired numeric key number and press **Options** > **Personalise**.
4. Scroll ▲/▼ to select a desired shortcut function for the key and press **Select** > **Ok**.

To set shortcut functions for 4-way navigation key (Steps 1-4):

1. Press  > **Settings** > **General** > **Shortcuts**.
2. Press ◀/▶ key to select 4-way navigation key icon.
3. Scroll ▲/▼ to a desired key icon and press **Options** > **Personalise**.
4. Scroll ▲/▼ to select a desired shortcut function for the key and press **Select** > **Ok**.




The following functions can be selected for shortcuts: **Phone number**, **Send text**, **Calculator**, **Homepage**, **Calendar**, **Shortcuts**, **Contacts**, **Voice recognition**, **Quick call**, **Messages**, **Create**, **Inbox**, **Mute**, **My data**, **Camera**, **My player**, **FM radio**, **Bluetooth**, **Profiles** or **Empty**.

## Default storage

This feature allows you to check the memory space on your phone and in your memory card.


To check the **Phone memory** or **Memory card**:

Press  > **Settings** > **General** > **Default storage** > **Phone memory** or **Memory card**.

## Flight mode

When you are in aircraft to disable cellular functionality, your phone is not allowed to be turned on. This feature allows you quickly to disable cellular and Bluetooth functionality so your phone can be on for listening to music, playing games and so on.


To turn the **Flight mode On/Off** (Steps 1-2):

1. Press  > **Settings** > **General** > **Flight mode**.
2. Scroll ▲/▼ to set the feature **On/Off** and press **Select**.

## Profiles

Your phone has five sound profiles-**Normal, Outdoors, Headset, Meeting** and **USB cable**. For different situations, you can set your phone to sound differently. For example, you can set the phone to **Meeting** mode, when you are in a meeting, when muting your phone may be necessary. The **USB cable** profile you can select **Ringtones** only from the Phone memory; they are not supported from External memory. For more details, please refer to **Sounds** on page 45.


To customise a profile (Steps 1-7):

1. Press  > **Settings** > **General** > **Profiles**.
2. Select a profile and press **Options** > **Personalise**.
3. Define an alert type: **Ring only, Vibrate only, Ring & Vibrate, Vibrate then ring** or **None**.
4. Set the **Key sound On/Off** by pressing **Select**.
5. Select **Ringtones** for a specific event.
6. Set the **Ring Volume**. Press **Ok** when the scrolling volume is on the level required.
7. Press **Back** when you have finished.

## Default settings

This feature allows you to restore default values for your phone.

To restore **Default settings** (Steps 1-2):

1. Press  > **Settings** > **General** > **Default settings**.
2. Select **Yes** and enter the phone lock code, as described on page 39, to confirm you want to **Restore default setting**.


## Display

Under the **Display** submenu, you can define settings such as **Wallpaper, Themes, Backlight level, Backlight duration** and **Greeting** can be defined.

## Wallpaper


You can select an image from the folders and set it as the background image to the idle screen.

To set the wallpaper (Steps 1-4):

1. Press  > **Settings** > **Display** > **Wallpaper**.
2. Select **On** to go to a desired folder.
3. Scroll ▲/▼ to go to the desired image and press **Select**.
4. Set the **Display wallpaper** to **Stretch** or **Centre**.

## Themes

To set a different colour style for your phone (Steps 1-3):

1. Press  > **Settings** > **Display** > **Themes**.
2. Scroll ▲/▼ to select a theme from **Theme 1**, **Theme 2** and **Theme 3**.
3. Press **Select**.


## Backlight level

To set the phone's backlight level (Steps 1-3):

1. Press  > **Settings** > **Display** > **Backlight level**.
2. Scroll ▲/▼ to select from **Maximum**, **High**, **Medium** and **Low**.
3. Press **Select**.

## Backlight duration


To set the duration of the phone's backlight (Steps 1-3):

1. Press  > **Settings** > **Display** > **Backlight duration**.
2. Scroll ▲/▼ to select from **1 minute**, **30 seconds** and **15 seconds**.
3. Press **Select**.

## Greeting

This feature provides a text greeting when the phone is switched on.

To set a text greeting (Steps 1-3):


1. Press  > **Settings** > **Display** > **Greeting**.
2. Select **On** to open the text edit screen.
3. Enter the text and press **Ok**.

## Sounds

Use the **Sounds** menu to set **Alert type**, **Ringtones**, **Ring Volume**, **Key sound**, **Shutter sound** and **Power on melody** for your phone. For details about customising a sound profile, refer to Profiles on page 43.


### Alert type

To specify an Alert type (Steps 1-3):

1. Press  > **Settings** > **Sounds** > **Alert type**.
2. Scroll ▲/▼ to go to the desired alert type: **Ring only**, **Vibrate only**, **Ring & Vibrate**, **Vibrate then ring** or **None**.
3. Press **Select**.



### Ringtones

To set a ring tone for a specific event (Steps 1-4):

1. Press  > **Settings** > **Sounds** > **Ringtones**.
2. Press ▲/▼ key to scroll to the desired event (**All contacts calls**, **All calls**, **Alarm**, **Appointments**, **Messages**, **Cell info** or **Group 1-10**).
3. Press **Select** and choose a **Ringtones** source: **Phone memory** or **Memory card**.
4. Scroll ▲/▼ to select a sound file and press **Select** > **Ok**.


### Ring volume

To adjust the **Ring Volume** (Steps 1-3):

1. Press  > **Settings** > **Sounds** > **Ring Volume**.
2. Press **Ok**. Press **Ok** when the scrolling volume is on the level required.
3. Press  or **Ok** to confirm.


### Key sound

To set Key sound (Steps 1-2):

1. Press  > **Settings** > **Sounds** > **Key sound**.
2. Press **Select** to turn the **Key sound On/Off**.

## Shutter sound

To set Shutter sound (Steps 1-2):

1. Press  > **Settings** > **Sounds** > **Shutter sound**.
2. Press **Select** to turn the **Shutter sound Off** or select **Shutter sound 1** or **2**.

## Connectivity


In addition to the network and phone connection settings, the **Connectivity** submenu also provides **Call options**, **Message settings**, **Network**, **Browser**, **Connections**, **Bluetooth**, **USB features**, and **Memory card** features.

### Call options

**Call Options** include the following settings: **Auto Answer**, **Any key answer**, **Seconds reminder**, **Call services**, **Call divert**, **Call barring**, **Fixed dialling** and **Closed user group**.


#### Auto Answer

To turn **Auto Answer On/Off** (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Auto Answer**.
2. Press **Change** to turn the **Auto Answer On/Off**.


#### Any key answer

To turn **Any key answer On/Off** (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Any key answer**.
2. Press **Change** to turn the **Any key answer On/Off**.

#### Seconds reminder

To turn **Seconds reminder On/Off** (Steps 1-4):


1. Press  > **Settings** > **Connectivity** > **Call options** > **Seconds reminder**.
2. Press **Change** and ◀▶ key to turn the **seconds reminder On/Off**.

3. When the feature is set to **On**, you need to specify the Start time by using the keypad keys.
4. Press **Save**.

### Call services


**Call services** provides the following settings: **Time & credit**, **Call waiting**, **Hide ID**, **Caller ID** and **Cost Settings**.


To check/reset **Last call/Total incoming/Total outgoing/Credit remaining/All voice calls**:

1. Press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Time & credit** > **Last call/Total incoming/Total outgoing/Credit remaining/All voice calls**
2. Press **Ok** to return to the previous screen or **Reset** to clean the history record.

### Call waiting


To Activate/Cancel **Call waiting**:

1. Press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Call waiting**
2. Scroll **▲/▼** to select **Activate/Cancel** and press **Select**.

To check status, press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Call waiting** > **Check status**.

### Hide ID

To Hide ID (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Hide ID**.
2. Press **Yes** to **Hide ID** for all calls or **Hide ID for next call**.


### Caller ID

To check caller ID status (Steps 1-2):


1. Press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Caller ID**.
2. Press **Caller ID** to check Caller ID status.

## Cost Settings


Service provider dependent.

To set **Currency**, press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Cost Settings** > **Currency**.


To set **Cost/unit** (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Cost Settings** > **Cost/unit**.
2. Enter the rate Per unit and Per minute.

To set **Maximum cost** (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Cost Settings** > **Maximum cost**.
2. Press **Edit** to turn **Display credit On/Off** and specify the **Maximum cost** by using the keypad keys.

To set **Auto display** (Step 1-2):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Cost Settings** > **Auto display**.
2. Set the **Auto display** to be **Off** or show **Cost/Duration/Both**.

## Call divert

You can select call diversion when you are unable to pick up a phone call in the following conditions:

- **Divert all calls** (diverts all incoming calls to the number you assigned).
- **All conditional** (diverts an incoming call when it is not answered).
- **Not reachable** (diverts all incoming calls to the number you assigned when the phone is turned off or out of signal range).
- **When no reply** (diverts an incoming call when it is not answered for a period of time determined by your network).
- **Busy** (diverts the incoming call when the line is busy).
- **Divert all data calls** (diverts the incoming call when the phone is receiving data).

To set **Call divert** (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Call divert**.

2. Select **Call divert** condition: **Divert for all calls, All conditional, Not reachable, When no reply, Busy, Divert all data calls** or **Cancel all**.


To check **Call divert** status, press  > **Settings > Connectivity > Call options > Call divert > Check status**.

### Call barring

This feature allows you to bar different types of calls made or received on your phone. Ask your service provider for a 4-digit password if you want to activate the feature. There are five types of calls that can be barred:

1. **All outgoing** (except emergency calls)
2. **Outgoing international** (only calls within the home country can be dialled)
3. **Outgoing international except home** (international calls to your home network are allowed, but all other international calls are barred)
4. **All incoming** (bars all incoming calls)
5. **Incoming when roaming** (bars incoming calls when you are out of your home network range)

To set **Call barring** (Steps 1-2):


1. Press  > **Settings > Connectivity > Call options > Call barring**.
2. Select a barred call type: **All outgoing, Outgoing international, Outgoing international except home, All incoming, Incoming when roaming** or **Cancel all**.

To check **Call barring** status, press  > **Settings > Connectivity > Call options > Call barring > Check status**.

### Fixed dialling


Fixed dialling allows you to dial only certain predefined numbers.

To turn on Fixed dialling (Steps 1-3):


1. Press  > **Settings > Connectivity > Call options > Fixed dialling**.
2. Enter PIN2 code. An activating/deactivating message will be displayed on the screen.
3. Press **Ok**.


## Closed user group

Closed user group is a network service that specifies the group of people whom you can call and who can call you. For more information, contact your network operator or service provider.

To turn **Closed user group On/Off**, press  > **Settings > Connectivity > Call options > Closed user group > Closed user group**.

To select a group, press  > **Settings > Connectivity > Call options > Closed user group > Select group**.

To turn **Outgo. access On/Off**, press  > **Settings > Connectivity > Call options > Closed user group > Outgo. access**.

To turn **Preferred group On/Off**, press  > **Settings > Connectivity > Call options > Closed user group > Preferred group**.

## Message settings

This menu includes setting options for Text message, Multimedia message, E-mail and Voice mail. For detailed Message settings, refer to *"Messages" on page 65*.


## Network

The Network menu provides the following settings.

### Select network


This feature allows you to search for the network automatically.

To select the network automatically (Steps 1-2):

1. Press  > **Settings > Connectivity > Network > Select network**.
2. Press **Yes** to search for available networks.

### Search mode


To select a network search mode (Steps 1-3):

1. Press  > **Settings > Connectivity > Network > Search mode**.
2. Press **Change** to select a mode from **Manual** or **Automatic**.


### Preferred Networks

This feature gives a list of available networks. You can view, edit and delete a network from the list.

To create a Preferred network (Steps 1-5):


1. Press  > **Settings** > **Connectivity** > **Network** > **Preferred networks**.
2. Press **List**.
3. Press **Options** > **Insert/Add to end**.
4. Press **Select** to select a network.
5. Press **Ok**.

To delete a Preferred network (Steps 1-4):

1. Press  > **Settings** > **Connectivity** > **Network** > **Preferred networks**.
2. Press **List**.
3. Press **Options** > **Delete**.
4. Press **Ok**.


### Select band

To select a network band (Steps 1-3):

1. Press  > **Settings** > **Connectivity** > **Network** > **Select band**.
2. Scroll to the desired band (900, 1800, 1900, 900/1800, 900/1900 MHz).
3. Press **Select**. The radio button will be marked when it is activated.

### Select line

To select a phone line (Steps 1-3):

1. Press  > **Settings** > **Connectivity** > **Network** > **Line** > **Select line**.
2. Select a line from **Line 1** and **Line 2**.
3. Press **Select**.

To protect the line, press  > **Settings** > **Connectivity** > **Network** > **Line** > **Protected** and select **On/Off**.



This feature is only available depending on the region or country.


## Browser

This menu includes browser setup options and Push messages. For detailed Browser settings, refer to "*Browser*" on page 55.


## Connections

This menu includes settings for **CSD profile**, **GPRS profile** and **GPRS info**.


To create a **CSD profile** (Steps 1-4):

1. Press  > **Settings** > **Connectivity** > **Connections** > **CSD profiles**.
2. Scroll ▲/▼ to go to a profile and press **Select**.
3. Enter information such as **Name**, **Call type (ISDN or Analogue)**, **Dial number**, **Login**, **Password** and **DNS**.
4. Press **Save**.

To create a **GPRS profile** (Steps 1-4):

1. Press  > **Settings** > **Connectivity** > **Connections** > **GPRS profiles**.
2. Scroll ▲/▼ to go to a profile and press **Select**.
3. Enter information such as **Name**, **APN**, **Login**, **Password**, **Authentication (On/Off)** and **DNS**.
4. Press **Save**.

To view **GPRS info** (Steps 1-3):

1. Press  > **Settings** > **Connectivity** > **Connections** > **GPRS info**.
2. Check **GPRS info (Received data and Total time of GPRS service)**
3. Press **Ok**.


## Bluetooth

Your phone features Bluetooth wireless technology. With Bluetooth, you can connect your phone to a Bluetooth-compatible device within 10 metres. The connection can be affected by any obstruction such as a wall or other electronic devices. Your phone memory can support a file size up to 350k. There is no file size limit for memory cards.

Ensure that the other device supports Bluetooth features so that you can build a successful Bluetooth connection. Contact the device's manufacturer or refer to the accompanying documentation to see if other devices support Bluetooth.

Your phone allows you to receive a VCard from other phone via Bluetooth. A notification is given when you receive a VCard, which will then be automatically saved in **My data > Others**. The VCard details appear after you unpack the VCard. The maximum number of VCard via Bluetooth is 9.

To create a Bluetooth connection (Steps 1-3):

1. Press  > **Settings > Connectivity > Bluetooth**.
2. Select **Activate**
3. Scroll down to **Search for devices**.
4. When the list of detected devices appears, select one to connect to.



If you do not intend to use Bluetooth for an extended period of time, deactivate it to save your phone's power.


The Bluetooth menu options include:

- **Activate:** Turn the Bluetooth feature on/off.
- **Search for devices:** Select to search for external devices that you would like to connect to your phone.
- **My devices:** Select to connect to devices that you prefer.
- **Preferences:** Select to change your **Preferences** settings, including **Phone name**, **Visible (On/Off)** and **Services supported (Dial-up, File transfer, Handsfree, Headset, Imaging, Object push, and Serial port)**.

## USB features

This menu allows you to connect your phone to a USB-compatible device. For details on using this feature refer to the help section of the installed software.

To make a USB connection (Steps 1-3):

1. Press  > **Settings > Connectivity > USB features**.
2. Scroll through **USB drive** and **PC software**.
3. Press **Select** to connect to the desired device.



Memory card is only available for USB drive. The phone memory is **NOT** available.

## Install Software

Software is required in order for the PC to recognise the mobile phone. Follow the instructions below to install the software:

1. Insert CD-ROM into the drive of the computer's CD drive.
2. Follow the on-screen instructions to install the software.
3. When complete restart the computer.

Once the software has been installed the following features are available: Contacts, Message, Album, Sound, Video, File Manager, Sync Manager.



See the software help function for details on using these applications.



The phone must be connected to the computer via the USB cable or via Bluetooth.



Please install the software to PC, before "PC software" using.

## Memory card

Your phone features a microSD card slot in order to increase the phone's memory. Your phone supports a microSD card up to 1GB with guaranteed performance and quality.


To format your memory card (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Memory card** > **Format**.
2. Press **Ok**.





## Browser

Your phone provides WAP services, enabling you to get up to date information, content and downloads. The use of WAP service depends on your service provider and the WAP settings in the phone.

When you are connected to the WAP browser, the predefined browser homepage will be displayed. The available menu options depend on the page you connect to. Hold down the  to terminate the WAP connection.

### WAP setup

To select WAP connection profiles (Steps 1-3):



1. Press  > **Browser** > **Settings** > **WAP profiles**. Alternatively, press  > **Settings** > **Connectivity** > **Browser** > **WAP profiles**.
2. Scroll to a desired network service provider.
3. Press **Options** > **Activate**.
4. Press **Options** > **Edit**.

The following Profile settings can be edited:

- **Name:** Enter the name of the service provider.
  - **IP address:** Enter the IP address.
  - **Port:** Enter the port number.
  - **Homepage:** Enter the address of the homepage.
  - **Linger time:** If the connection is not used for the preset linger time, the connection will cease.
  - **Connection mode:** Select from **Auto**, **CSD** and **GPRS**.
  - **CSD profiles:** Select a CSD profile from **Profile 1-16**.
  - **GPRS profiles:** Select a GPRS profile from **Profile 1-16**.
5. Press **Options** > **Delete** to delete the WAP profile.

## WAP Page Connection



You can connect to a WAP page in the following two ways.

1. Connect to your Homepage by pressing  > **Browser** > **Homepage**.
2. Connect to a previously saved Web page by pressing  > **Browser** > **Favourites** > the desired bookmark.

## WAP push setting

This feature allows you to select your preferences for messages sent from your service provider.


To set WAP push settings (Steps 1-3):

1. Press  > **Browser** > **Settings** > **Push messages**. Alternatively, press  > **Settings** > **Connectivity** > **Browser** > **Push messages**.
2. Select a mode from: **Always accept**, **Never accept** and **Only from address**.
3. Press **Select**.



## Tools

The Tools menu provides a variety of personal features to help you get the most out of your phone.

Press  > **Tools** to access this menu, which allows you to utilise the following features:


- Calendar, Appointments, Tasks and Notes
- Alarm and Countdown
- Calculator and Unit converter

### Calendar

To view the calendar in day/week format (Step 1-2):

1. Press  > **Tools** > **Calendar**.
2. Select **Options** > **View day/ View week**.


To schedule a new meeting (Steps 1-4):

1. Press  > **Tools** > **Calendar**.
2. Select **Options** > **New meeting**.
3. On the **New entry** screen, enter the meeting details: **Subject**, **Location**, **Start date**, **Start time**, **End date**, **End time**, **Reminder** (**At event time**, **5 mn before**, **15 mn before**, **1 hour before**, **1 day before**, **Other**, **No reminder**), and **Repetition** (**Once**, **Daily**, **Weekly**, **Monthly**, **Annually**).
4. Press **Save**.

To go to a specific date (Steps 1-2):

1. Press  > **Tools** > **Calendar**.
2. Select **Options** > **Go to date**.


To clear events (Steps 1-2):

1. Press  > **Tools** > **Calendar**.
2. Select **Options** > **Advanced** > **Clear all** (**All events**, **One day old** and **One week old**).


## Alarm

When an alarm is set, it will ring even if the phone is turned off.


To set **Simple alarm** (Steps 1-3):

1. Press  > **Tools** > **Alarm** > **Simple alarm**.
2. Press **Select** to turn the feature **On/Off**.
3. When **Alarm** is set to **On**, you need to specify the alarm time.

To set a **Repeat alarm** (Steps 1-5):

1. Press  > **Tools** > **Alarm** > **Repeat alarm**.
2. Press **Select** to turn the feature **On/Off**.
3. When **Alarm** is set to **On**, you need to specify the alarm time.
4. Scroll to week day indicators and press **Change** to select alarm frequency.
5. Press **Save**.

To set an **Alarm tone** (Steps 1-3):

1. Press  > **Tools** > **Alarm** > **Alarm tone**.
2. Select **Ring tones** from **Phone memory** or **Memory card**.
3. Press **Select**.


## Appointments

This feature allows you to create an appointment and to set a reminder.



The phone will switch on automatically if the appointment alarm is set to a specific time.

To create an appointment (Steps 1-4):


1. Press  > **Tools** > **Appointments**.
2. Select **New events** or press **Add**.
3. On the **New entry** screen, enter the **Appointments** details: **Subject**, **Location**, **Start date**, **Start time**, **End date**, **End time**, **Reminder** (**At event time**, **5 mn before**, **15 mn before**, **1 hour before**, **1 day before**, **Other**, **No reminder**) and **Repetition** (**Once**, **Daily**, **Weekly**, **Monthly**, **Annually**).

4. Press **Save**.

## Tasks

**Tasks** remind you of a task that is scheduled to be done at a specific time.


To create a **Tasks** (Steps 1-4):

1. Press  > **Tools** > **Tasks**.
2. Select **New events** or press **Add**.
3. On the **New entry** screen, enter the **Tasks** details: **Subject**, **Status** (**Pending** and **Done**), **Priority** (**High**, **Normal** and **Low**), Set date (**Yes** or **No**), **Due date**, **Due time**, and **Reminder** (**At event time**, **5 mn before**, **15 mn before**, **1 hour before**, **1 day before**, **Other**, **No reminder**).
4. Press **Save**.

## Notes

This feature allows you to write down some text for later reference.

To create **Notes** (Steps 1-4):

1. Press  > **Tools** > **Notes**.
2. Select <**New event**> or press **Add**.
3. Write down information.
4. Press **Save**.

Options for Notes include:

- **View**: View the content of the notes.
- **Edit**: Edit the note.
- **New entry**: Create a new entry.
- **Delete**: Delete a note.
- **Delete all**: Delete all notes.
- **Send**: Sends the note.
- **Capacity**: Check the maximum and free memory space.

## Calculator

You can perform calculations as if using a calculator. A maximum of 8 digits can be entered into this calculator, which will display a 9 digit or 6 decimal result. If the result exceeds 9 digits, the screen will display an **Over range** message.

### Calculation keys

1. ▲: Addition
2. ▼: Subtraction
3. ►: Multiplication
4. ◀: Division
5. Centre key: Equals (=)
6. Right Soft Key: Clear
7. Left Soft Key: Options
8. : Decimal point (.)
9. : Negative (-)

To perform a calculation (Step 1-3):

1. Press > **Tools** > **Calculator**.
2. Enter the digits with numeric keys and other calculation keys (listed above).
3. Press to return to the idle screen.

## Unit converter


This function allows you to enter a unit/ currency exchange rate and convert from one unit/currency to another.

To set an exchange rate (Steps 1-3):

1. Press > **Tools** > **Unit converter**
2. Press ◀/▶ to scroll to a desired unit (**Velocity, Mass, Area, Volume, Power, Time, Pressure, Length, Temperature, Currency or Energy**).
3. Enter a number and press **Change**.

## Countdown

To start a Countdown (Steps 1-4):

1. Press  > **Tools** > **Countdown**.
2. Select **Options** > **Change**.
3. Press ◀/▶ key to set the countdown time.
4. Press **Ok** > **Options** > **Start**.

## STK (SIM Tool Kit)

This option depends on your service provider.



## Camera


Your phone has an integrated camera that allows you to take pictures or shoot video clips and send them as MMS messages/attachments. The pictures are taken and saved in JPEG format, which can be viewed by most picture viewing programs.



Do not apply force to your camera lens, it may get damaged.

### Camera mode

To take a picture (Steps 1-4):

1. Press  > **Camera** to launch the Camera.
2. Press Centre key to take a picture.
3. The picture is saved automatically.
4. Press **Back** to go back to the camera's view finder screen.

In the saved screen see the following **Options**:

- **Send**: Send the saved image **Via multimedia msg, Via Bluetooth** or **Via e-mail**.
- **Take new picture**: Select this option to go back to the camera's view finder screen.
- **As contact ID**: Set the image as the contact ID.
- **As wallpaper**: Set the image as the wallpaper.
- **Delete**: Delete the image.
- **Rotate**: Rotate the image 90° clockwise, 90° anti-clockwise, 180° rotate, Flip horizontal and Flip vertical (Picture resolution must be below 320x240).



The "Rotate" menu is displayed after taking a picture.

In the view finder screen see the following **Options**:

- **Picture orientation**: Set the size of the **Picture orientation** to be **Portrait** or **Landscape** (1280 x 1024 resolution does not support **Portrait**).
- **Picture resolution**: Set the image resolution: **1280 x 1024**, **800 x 600**, **640 x 480**, **320 x 240** or **160 x 120**.
- **Picture quality**: Set the image quality to be **SuperFine**, **Fine** or **Normal**.
- **View pictures**: View the saved images in the **Photos** file.

Select the picture to view, press **Options** and select from the following: **View** (views the photo), **Send** (Send by MMS, Bluetooth or E-mail), **Organise** (Cut, Copy Rotate, Rename, Details, Delete all), **Delete**, **Use** (Set as Wallpaper or as Contact ID), **Slideshow**, **New Folder** (enter a New folder name), **Change View** (List, Grid or Full Screen), **Select Multiple** (one by one or all).


- **Mode**: Set the **Night mode** and **Multishot** to be **On/Off** or turn **On/Off** the **Self-timer**.
- **Effects**: Select the **Frames: 1, 2 or 3** (available when resolution is below 320x240); **Colour effects: Off, B&W, Sepia, Blue, Negative**.
- **Advanced**: Set the **Default storage (Phone memory or Memory card)**; Enter the **Default name** for the image to be saved; Set the **Anti-flicker** value (**50Hz** or **60Hz**); **Reset settings** returns to the factory settings under Camera menu.

On the camera's view finder screen, you can press the 4-way navigation keys to adjust the following two functions:

- **Zoom**: Press and hold **▲** to zoom in; press and hold **▼** to zoom out. The function is only available for image size 640 x 480, 320 x 240 and 160 x 120.
- **Brightness**: Press **▲** or **▼** to adjust the level of brightness on the camera's view finder screen.

## Video mode

To shoot a video (Steps 1-4):

1. Press  > **Camera** to launch the Camera. Then, press the right navigation key to launch video mode.

2. Press Centre key to start recording a video clip and press again to stop.
3. The video is saved automatically.
4. Press **Back** to go back.

In the saved video clip see the following **Options**:

- **Play**: Play the recorded video clip.
- **Send**: Send the saved image **Via multimedia msg, Via Bluetooth or Via e-mail**.
- **Record new video**: Select this option to go back and shoot a new video.



During recording, if the user exceeds the maximum file size allowance, an envelope icon will appear with a red line drawn through it symbolising that this video clip cannot be sent via MMS.

- **Delete**: Delete the video clip.

In the view finder screen see the following **Options**:

- **Video length**: Set the **Video length** to be **MMS length, Maximum length** or **Unlimited**.



When default storage is set to memory card, you can select **Unlimited** as Video length.

- **Video resolution**: Set the video resolution: **352 x 288** or **176X144**.
- **Video quality**: Set the video quality to be **Fine** or **Normal**.
- **View videos**: View the saved video clips in the **Videos** file.
- **Colour effects**: Select the **Colour effects: Off, B&W** or **Sepia**.
- **Advanced**: Enter the **Default name** for the image to be saved; **Reset settings** under Camera menu.

Before you start shooting a video clip, press the 4-way navigation keys to adjust the following two functions:

- **Zoom**: Press and hold **▲** or **▼** to zoom in/out. The function is only available for image size 176X144.
- **Brightness**: Press **▲** or **▼** to adjust the level of brightness.



## Messages

Messages offer a variety of messaging functions, including text messages, multimedia messages and E-mail. This chapter guides you through each messaging function and setting options.

The messages you receive and create are saved in three folders: **Inbox** (the received messages), **Outbox** (the sent messages) and **Drafts** (the messages that haven't been finalised and are to be sent later).

When you navigate through the list of messages in **Inbox**, press **Options** to access the following features:

1. **View**: Displays message contents.
2. **Reply**: Sends a message to the sender.
3. **Forward**: Forwards the message to others.
4. **Delete**: Deletes the selected message.
5. **Delete all**: Deletes all messages in the current folder.
6. **Details**: Displays message details, including **Date**, **Last edit time** and sender information.
7. **Call back**: Calls the person who sent you the message.
8. **Select multiple**: Deletes multiple messages selected individually or by selecting all.

When you navigate through the list of messages in **Outbox**, press **Options** to access the following features:

1. **View**: Displays message contents.
2. **Forward**: Forwards the message to others.
3. **Delete**: Deletes the selected message.
4. **Delete all**: Deletes all messages in the current folder.
5. **Details**: Displays message details, including **Date**, **Last edit time** and sender information.
6. **Call**: Calls the person who sent you the message.
7. **Select Multiple**: Select multiple messages to be deleted.

When you navigate through the list of messages in **Drafts**, press **Options** to access the following features:



1. **View:** Displays message contents.
2. **Edit:** Edits the message.
3. **Delete:** Deletes the selected message.
4. **Delete all:** Deletes all messages in the current folder.
5. **Details:** Displays message details, including **Date**, **Last edit time** and the number of the sender.
6. **Select multiple:** Deletes multiple messages selected individually or by selecting all.

## Text Messages

You can send a text message of up to 160 characters, including punctuation marks and spaces.

### Creating/Sending/Saving Text Messages

To create a new **Text message** (Steps 1-4):

1. Press  > **Messages** > **Create** > **Text message**.
2. Input your message.
3. When done, press  or press **Options** > **Continue** and add phone number(s) from the **Contacts** or use **Phone Number** to add numbers manually.
4. Or press **Options** > **Save as draft**.

For more information on entry methods, refer to *"Text Entry" on page 33*.



Options for Text Message editing include:

1. **Continue:** Continues to send the messages by selecting recipients from **Contacts** or by entering phone number(s) manually.
2. **Add symbol:** Displays the symbol chart for selection.
3. **Insert object:** Inserts objects from **Predefined sounds**, **Predefined animations**, **Own animations**, **Own pictures**, **Own sounds**, **Text template**, **Contact number** and **Bookmark**.
4. **Spell word:** Spells a word and add it to the message content.
5. **T9 language:** Selects T9 language. For more information, refer to *"Text Entry" on page 33*.
6. **T9 dictionary:** Turns T9 dictionary on/off.


7. **Save as draft:** Saves the message in the draft box.
8. **Text format:** Selects the **Font style** and **Font colour** for the message.

### Text Message Settings:

To select a text message account (Steps 1-3):

1. Press  > **Messages** > **Settings** > **Text message**.
2. Scroll ▲ or ▼ to select **Account 1** or **Account 2**.
3. Press **Options** > **Activate** or  > **Activate** to confirm your selection.

To personalise your text message account:

1. Press  > **Messages** > **Settings** > **Text message**.
2. Scroll ▲ or ▼ to select **Account 1** or **Account 2**.
3. Press **Options** > **Personalise**.

The personalise settings include the following:


- **Service centre:** Enters your text **Message centre** number.
- **Protocol:** Select your message type from **Standard text/Fax/X.400/Paging/ERMES/E-mail**.
- **Validity period:** Select the period from **1 hour/12 hours/1 day/1 week/Maximum**. This determines the length of times the SMS message is stored at the SMS centre. The radio button for the selection will be marked.
- **Delivery report:** This feature allows you to get a receipt when the SMS message is successfully delivered. Press **Select** to turn **On/Off** the feature. This feature is network dependent.
- **SMS via GPRS:** This feature allows you to send your SMS via GPRS rather than CSD. Press **Select** to turn **On/Off** the feature.
- **Direct reply:** If this feature is enabled and available from your service provider, you may pay for the message sent back to you. Press **Select** to turn **On/Off** the feature.

## Multimedia Messages

You can send a multimedia message, which includes multimedia files and texts.

### Creating/Sending/Saving Multimedia Messages

To create a new Multimedia message (Steps 1-4):


1. Press  > **Messages** > **Create** > **Multimedia message**.
2. Insert multimedia objects by pressing **Options** > **Insert object** or **Insert new**.
3. When this has been done, add the recipients phone number(s) from the **Contacts** or manually. Alternatively, press **Options** > **Continue**.
4. Or alternatively press **Options** > **Save**.

Options on the message editing screen include:


- **Continue:** Continues to send the messages by selecting recipients from **Contacts** or entering phone number(s) manually.
- **Insert object:** Inserts objects from **Pictures, Photos, Videos, Sounds** and **Page**.
- **Insert new:** Inserts objects by creating files from **Digital camera, Video camera** and **Sound recorder**.
- **Attachment:** Attach a **Business card** (of a contact's information), an **Appointment** entry and **Task**.
- **Preview message:** Selects to preview the whole multimedia message content or page by page.
- **Timing:** Sets the **Slide duration**.
- **Page list:** Displays a page list. Scroll to the desired page and access it directly.
- **Save:** Saves the message.

### Multimedia Message Settings:


To edit MMS profiles (Step 1-3):

1. Press  > **Messages** > **Settings** > **Multimedia message** > **Profiles**.
2. Scroll ▲ or ▼ to select a profile.
3. Press **Options** > **Edit**.

To delete a MMS profile (Steps 1-3):

1. Press  > **Messages** > **Settings** > **Multimedia message** > **Profiles**.
2. Scroll ▲ or ▼ to select a profile.
3. Press **Options** > **Delete**.

To customise **MMS options** (Steps 1-2):

1. Press  > **Messages** > **Settings** > **Multimedia message** > **MMS options**.
2. Scroll ▲ or ▼ to go to the desired option and press **Select** to change the setting.

The Sending options include the following settings:


- **Sender visibility:** This feature indicates whether to hide or show the sender's ID by turning it on/off.
- **Priority:** Defines the message priority to be **Low**, **Normal** or **High**.
- **Delivery report:** This feature allows you to get a receipt when the message is successfully delivered. Press **Select** to activate/inactivate the feature. This feature is network dependent.
- **Read report:** This feature allows you to get a report when the message is read. Press **Select** to activate/inactivate the feature. This feature is network dependent.
- **Expiry time:** When the expiry time is due, the message will be deleted. Set the **Expiry time: 1 hour, 3 hours, 6 hours, 12 hours, 1 day, 1 week** or **Maximum**.
- **Retrieval:** Sets the **Retrieval mode--Automatic, Deferred, or Auto. homenet**.
- **Advertisements:** Set the **Spam filter** to be on/off to reject/receive junk messages.

## E-mail

### Creating/Sending/Saving E-mail

To compose E-mail (Steps 1-4):

1. Press  > **Messages** > **Create** > **E-mail**.
2. Enter the text.

3. When done, press  and add e-mail address(es) from the **Contacts** or manually. Alternatively, press **Options > Continue**.
4. Or press **Options > Save**.

Options for the E-mail editing screen include:


- **Continue:** Continues to send the messages by selecting recipients from **Contacts** or entering e-mail address (es) manually.
- **Save:** Saves the input content.
- **New line:** Moves the cursor back to the starting place of the message.
- **Clear all:** Delete all the input text in the edit screen.
- **Back:** Exits the E-mail edit screen and go back to the **Create** menu screen.

## E-mail Settings

Before you start composing an E-mail, you need to set up an E-mail account. Under the E-mail settings, you can define the E-mail server and your E-mail account.

### Server


To create an E-mail **Server** (Steps 1-3):

1. Press  > **Messages > Settings > E-mail > Server**.
2. Scroll ▲ or ▼ to select a server.
3. Press **Options > Edit**.

The **Server** details include the following information:

- **Connection:** Defines settings such as **Connect using, CSD only, GPRS First** and **GPRS only**.
- **Incoming server:** Specify the name of the **Server, Port, Authentication (General and Security), Account, Password** and **Download (All and Header only)**.
- **Outgoing server:** Specify the name of the **Server, Port, Authentication (None, General and Security), Account** and **Password**.


To delete an E-mail **Server** (Steps 1-3):

1. Press  > **Messages > Settings > E-mail > Server**.
2. Scroll ▲ or ▼ to select a server.

3. Press **Options** > **Delete**.

## Account

To create an account (Steps 1-3):

1. Press  > **Messages** > **Settings** > **E-mail** > **Account**.
2. Edit the details.
3. Press **Save**.



A maximum of 5 E-mail accounts can be created.


The **Account** includes the following details:

- **User name:** Enters a user name.
- **Address:** Enters the E-mail address.
- **Server Profile:** Select from profile 1-5.
- **Signature:** Creates your own signature and send it with E-mails.

## Templates

The **Templates** menu provides a list of predefined text for you to add into the text messages.

To add a template (Steps 1-3):

1. Press  > **Messages** > **Templates** > **Text template**.
2. Select **<New template>** or press **Add**.
3. Enter the text and press **Options** > **Templates**.
4. Scroll ▲/▼ to select a predefined text.
5. Press **Options** > **Save**.

## Push Inbox

Push Inbox shows WAP Push message.




This is network dependent. Check with your service provider for details.

Press the menu button and use the left and right buttons to navigate between: **Navigate**, **Bookmarks**, **History** and **Tools**.

- **Navigate**: Use to goto a URL, set page security, Settings and Inbox
- **Bookmarks**: Preset URL bookmarks.
- **History**: Pages visited.
- **Tools**: Save Pages, find text on a web page, send links.


## Cell info

This feature is network dependent. You need to register with your service provider. To access this feature, press  > **Messages** > **Cell info**. From the menu, you can set up the following options:

- **Auto display**: This feature allows cell broadcast messages to be displayed automatically in standby mode. Press **Change** to turn **On/Off** the feature.
- **Broadcast**: Sets this feature on/off to read any new cell broadcast messages.
- **Message inbox**: Displays a list of received cell broadcast messages.
- **Topic list**: To select the received message type, select **Add new** from **My topics** to enter favourite topics or select an existing topic from the **Active topics** list to change or delete.
- **CB languages**: This feature allows you to specify the language in which your cell broadcast message is displayed.


## Memory status

To check the phone memory (Steps 1-2):

1. Press  > **Messages** > **Memory status**.
2. Scroll ▲/▼ to see the memory space of **Text msgs in phone**, **Text msgs in SIM**, **Multimedia msgs** and **E-mail**.

## Voice mail

To set up your voice mailbox (Steps 1-3):

1. Press  > **Messages** > **Settings** > **Voice mail**.
2. Enter the **Voice mail** number.
3. Press **Save**.



# Entertainment


Your phone provides various entertaining features: Games that include default games and Java games and Composer that allows you to create your personal music.

## Games

### Default games

Your phone has a number of pre-installed games.

To play a game (Steps 1-3):



1. Press  > **Entertainment** > **Games** > **Default games**.
2. Scroll to the game you would like to play.
3. Press **Select** > **Options** > **New**.

Options for a game include:

- **New:** Select to start a new game.
- **Level:** Choose the game's difficulty.
- **Top score:** See the best score record.
- **Instructions:** Information about how to play a game.

### Java Games

To play Java game (Steps 1-3):


1. Press  > **Entertainment** > **Games** > **Java Games**.
2. Scroll to the game you would like to play.
3. Press 

Your phone supports Java. With this feature, you can run Java-compatible applications such as downloaded games.

## Composer

Your phone features a composer that allows you to create your own personal music.


To create sounds (Steps 1-4):

1. Press  > **Entertainment** > **Composer**.
2. Scroll ▲/▼ to a desired sound file.
3. Press **Options** > **Edit** and select from **Main track**, **Sub track 1/Sub track 2/Sub track 3**.
4. Press **Options** to **Play** the music, set **Tempo**, **Instruments**, or press **Save**.




## Contacts

The Contacts menu is where you can record names, phone numbers and other personal details are stored. There are two storage areas: SIM card and phone memory. Contacts saved in the phone memory allow you to store more information (**E-mail, Web page, Street, Postal code, City State /Province, Country** and **Additional info**). The space available for these on the SIM card may vary according to the manufacturer.

To access phonebook lists, press  > **Contacts** > **View contacts**.  
Alternatively, press ▼ from the idle screen.

### Create/View Contacts/SIM contact or PhoneBook


To create a SIM/Phone contact (Steps 1-4):

1. Press  > **Contacts** > **View contacts** > **SIM contact** or **PhoneBook**.
2. Select **Add contact**.
3. Enter details.
4. Press **Save**.

Options for new SIM card entry include:

- **Name:** Enter the contact's name.
- **Number:** Enter the contact's home number.
- **Location:** Select where to save the entry: **SIM, Protected SIM**.
- **Position in SIM:** The phone will assign a number to the contact automatically; or you can enter one yourself.



To switch between SIM contacts and Phonebook contacts, press  > **Contacts** > **Advanced** > **Default phonebook**.

Options for new phone contact entry include the following:

- **First name/Last name:**
- **Mobile/Home/Work/Fax** numbers
- **E-mail/Webpage**
- **Picture/Ringtone/Voice command**
- **Groups**
- **Postal code/State/Province/City/Street/Country**
- **Additional info**

Make sure you provide at least a phone number so that you can create a contact. Not all of the fields require information.


Options for View contacts include:

- **View:** View the contact's detailed information.
- **Send message:** Send a **Text message** or **MMS Message** to the selected contact.
- **Call:** Call the selected contact.
- **Delete:** Delete the contact.
- **Default number:** Set the default contact number as either Mobile, Home or Work.
- **Send contact:** Send the contact's information via **Bluetooth** and via **Multimedia msg.**
- **Copy contact:** Select to copy the contact to phone/SIM.
- **Move contact:** Move the contact to phone/SIM.
- **Add picture:** Select a picture to add to the contact.
- **Select multiple:** Select to add multiple contacts, individually or as a group, to **Move to phone/SIM, Copy to phone/SIM, Delete,** and **Send contact.**

## View groups

This feature allows you to manage your contacts by assigning images and/or ringtones to a group of contacts and sending messages to the group.

To view group contacts (Steps 1-3):

1. Press  > **Contacts** > **View groups.**
2. Scroll ▲/▼ to a desired group.

3. Press **Options > View**.


Options for View groups include:

- **View:** Display the group members.
- **Set ringtone:** Select a ringtone that will sound when a member of the group calls.
- **Rename:** Rename the group.
- **Remove entries:** Remove all contacts from the group.
- **Add picture:** Add a picture to the group.
- **Send SMS:** Send an SMS to members of the group.

## Special numbers

This feature allows you to keep a list of useful numbers such as **My numbers**, **Service numbers**, **Voice mail** and **Emergency** numbers.

To enter a special number (Steps 1-5):

1. Press  > **Contacts > Special numbers > My numbers**.
2. Select **<Empty>**.
3. Press **Options > Edit**.
4. Enter details.
5. Press **Save**.

Options for **My numbers** include **View**, **Edit** and **Delete**.

## Quick call

You can edit a list of quick calls (Steps 1-5):

1. Press  > **Contacts > Quick call**.
2. Scroll to a desired image.
3. Press **Add** to go to the **Contacts** list.
4. Select a contact.
5. Press **Done**.

## Advanced

This menu provides a list of options so that you can view and edit your contacts.

Options for the **Advanced** menu include:

- **Default phonebook:** Switch between contacts recorded on the **SIM contacts** and **Phonebook**.
- **Sort names:** Find a contact by searching for his/her **First name** or **Last name** or **Position**.
- **Picture in contacts:** Turn the display of the caller's ID on/off.
- **Copy to SIM:** Copy all the contacts to SIM card.
- **Copy to phone:** Copy all the contacts to phone memory.
- **Move to SIM:** Move all the contacts to SIM card.
- **Move to phone:** Move all the contacts to phone memory.
- **Delete phone entries:** Delete all contacts.

## Memory status

This feature allows you to check your phone memory space.

To check Memory status, press  > **Contacts** > **Memory status**. You may see the following details: **SIM**, **Protected SIM** and **Phone**.



## My player

Your phone allows you to listen to the music from the network, save the music files, edit the **Playlist** and play the music. Your phone will automatically stop playing the music when there is an incoming call. The supported music format includes MP3, AAC and AAC+.

### FM Radio

You can listen to FM Radio on your phone. You can locate a channel by setting the frequency or set the channel ID, name and frequency for easy selection later.

To turn **FM Radio On/Off** (Steps 1-2):

1. Press  > **My player** > **FM Radio** > **Options** > **Switch On/Switch Off**.
2. Press **Select** to turn **FM Radio On/Off**.





This feature can be turned on only when the headset is plugged into the phone's headset connector.

Options for FM Radio include:

- **Switch On/Switch Off:** Turn FM Radio on/off.
- **LoudSpeaker:** Turn the loud speaker on/off.
- **Volume:** Press ▲/▼ keys to decrease/increase the volume.
- **Set Frequency:** Set the frequency by using the keypad keys.
- **Save Channel:** Enter **Channel ID** (from Ch0-Ch9), **Channel name** and **Frequency (100KHz)**. Press and hold alphanumeric key to launch the channel ID.
- **Erase Channel:** Enter the **Channel ID** to erase the channel.
- **Autoswitchoff radio:** Select **Autoswitchoff** on/off. When on, you must define the **Linger time**.
- **Display RDS:** RDS stands for Radio Data System. You can turn **Display RDS** on/off.
- **Backlight mode:** Set the **Backlight mode** to be **Automatic** or **On**.

## Tracks

You can play the downloaded music from Phone memory or Memory card. For example, to play tracks from a memory card (Steps 1-3):

1. Press  > **Music** > **Tracks** > **Memory card**.
2. Scroll ▲/▼ to the desired track.
3. Press **Options** > **Play** or .

Options for the tracks list screen include:

- **Play:** Play the selected track.
- **Play mode:** Set the mode to be **Off**, **Repeat**, **Shuffle** or **Shuffle & repeat**.
- **Add to playlist:** Add the selected track to the **Playlist**.
- **Details:** Show the detailed information of the selected track: **Name**, **Size**, **Time**, **Type** and **Duration**.
- **Delete:** Delete the selected track.

## Last played

You can access this feature to see a list of songs that you previously played. The song list is arranged chronologically.



Options for the Last played tracks include:

- **Play:** Play the selected track.
- **Play mode:** Set the mode to be **Off**, **Repeat**, **Shuffle** or **Shuffle & repeat**.
- **Add to playlist:** Add the selected track to the **Playlist**.
- **Details:** View the details of the previously played track. Displays the following information: **Name**, **File size**, **Creation time**, **File type** and **Duration**.
- **Delete:** Delete the selected track from Last played tracks.
- **Delete all:** Delete all tracks from Last played tracks.


## Playlists

With Playlists, you can edit your favourite songs list.

To add a playlist (Steps 1-3):

1. Press  > **My player** > **Playlists**.
2. Select **<New playlist>**.
3. Press **Add** or .

To edit the Playlists (Steps 1-3):

1. Press  > **Music** > **Playlists**.
2. Select a **Playlist** and press **Options**.
3. Scroll to a desired option and press **Select**.



Options for **Playlists** include:

- **Open**: Open the selected playlist.
- **Play**: Play the track in the selected playlist.
- **Delete**: Delete the selected playlist.
- **Rename**: Rename the selected playlist.
- **Help**: Help information about playlists.

## Voice memo

This function allows you to record a voice clip (of up to 36 seconds) using your phone's microphone. You can send the recorded voice clip as an MMS message attachment.


To record a voice clip (Steps 1-5):

1. Press  > **My player** > **Voice memo**.
2. Press **Record** or  to start recording.
3. Press **Stop/Pause** to cease/hold the recording.
4. When you press **Stop**, the recorded voice is saved.
5. Select **Play** to hear the recorded voice or **Send by MMS** to attach the voice memo to a MMS message or **Back** to return.

## Background MP3

This feature allows you to define the MP3 data source and customise the font colour.

To select memory source (Step 1-3) :

1. Press  > **My player** > **Background MP3**.
2. Press **Data** and choose **Auto, Memory card, Phone memory** or **Playlist**.
3. Press **Font colour** and choose **Black, Dark grey, Dark red, Dark yellow, Dark green, Dark cyan, Dark blue, Dark Magenta, Grey** or **White**.



A SIM card must be inserted for the Background MP3 player to work.



## My data

My data allows you to manage the files in your phone by separating them into different folders. In addition you can check the **Phone memory** or Memory card to see the memory capacity of your phone.






Your phone memory can support a file size up to 350k. There is no file size limit for memory cards.

## Managing files

Generally, **My data** in the **Phone memory** are separated into five folders: **Photos**, **Pictures**, **Videos**, **Sounds** and **Others**.

For example, to create a new folder under **My data** in **Phone memory** (Steps 1-5):




1. Press  > **My data**.
2. Scroll  to select the **Phone memory**.
3. Scroll  to select a folder and press **Select**.
4. Select **New Folder** and enter a name for the folder.
5. Press **Ok**.

Options for Folder list include:

- **New folder**: Create a new folder.
- **Change view**: Select the folder display type: **List view** or **Grid view**.


## Phone memory

To check **Phone memory** (Steps 1-4):

1. Press  > **My data**.
2. Scroll  to select **Phone memory**.
3. Scroll  to the **Memory status**.
4. The displayed information includes **Free memory**, **Used** and **Total size**.

## Memory card

To check the **Memory card** (Steps 1-4):

1. Press  > **My data**.
2. Scroll ◀/▶ to select **Memory card**.
3. Scroll ▲/▼ to the **Memory status**.
4. The displayed information includes **Free memory**, **Used** and **Total size**.




## Calls

Features under the Calls menu are mostly operator and/or subscription dependent and require either a PIN2 code or a phone code. For more information about PIN codes, refer to *"Security" on page 38*.

### Call history

Call history keeps a record of your dialled, received and missed calls.

To see a call history (Steps 1-3):

1. Press  > **Calls**.
2. Scroll ▲/▼ to select a call history.
3. Scroll ◀/▶ to switch between four **Call history** lists: **All calls**, **Missed calls**, **Answered calls** and **Outgoing calls**.

Options for a known number include:

- **Extract number**: Extracts the number to either: **Save number**, **Dial**, **Send message** or **Unit converter**.
- **Delete**: Delete the record from the call history.
- **Call**: Call the selected number.
- **Delete all**: Delete all the numbers from the call history list.
- **Text message**: Send a SMS to the selected number.
- **MMS message**: Send a MMS to the selected number.
- **Edit**: Edit the entry's details. For more information, refer to *"Contacts" on page 75*.

Options for an unknown number include:


- **Extract number**: Extracts the number to either: **Save number**, **Dial**, **Send message** or **Unit converter**.
- **Save number**: Save the number in the phonebook.
- **Delete**: Delete the selected number.
- **Call**: Call the selected number.
- **Delete all**: Delete all the numbers from the call history list.
- **Text message**: Send a SMS to the selected number.

- **MMS message:** Send a MMS to the selected number.

## Clear history

This menu allows you to clear a call history record. You can select **Clear outgoing**, **Clear answered**, **Clear missed**, or **Clear all**.

To clear a call history (Steps 1-3):


1. Press  > **Calls** > **Clear history**.
2. Scroll ▲/▼ to a desired option.
3. Press **Select** > **Yes**.

## Call settings

**Call settings** include the following **Call options**: **Auto Answer**, **Any key answer**, **Seconds reminder**, **Call services**, **Call divert**, **Call barring**, **Fixed dialling** and **Closed user group**.


### Auto answer

To turn **Auto answer** on/off (Steps 1-2):

1. Press  > **Calls** > **Call settings** > **Auto answer**.
2. Press **Change** to turn the **Auto answer On/Off**.


### Any key answer

To turn **Any key answer** on/off (Steps 1-2):

1. Press  > **Calls** > **Call settings** > **Any key answer**.
2. Press **Change** to turn the **Any key answer On/Off**.

### Seconds reminder


To turn **Seconds Reminder** on/off (Steps 1-4):

1. Press  > **Calls** > **Call settings** > **Seconds reminder**.
2. Press **Change** and ◀▶ key to turn the **Seconds reminder On/Off**.
3. When the feature is set to **On**, you need to specify the **Start time** by using the keypad keys.
4. Press **Save**.

## Call Services

**Call services** provides the following settings: **Time & credit**, **Call waiting**, **Hide ID**, **Caller ID** and **Cost Settings**.

To check/reset **Last call/Total incoming/Total outgoing/Credit remaining/All voice calls** (Steps 1-2):

1. Press  > **Calls** > **Call settings** > **Call services** > **Time & credit** > **Last call**, **Total incoming**, **Total outgoing**, **Credit remaining**, **All voice calls**
2. Press **Ok** to return to the previous screen or **Reset** to clean the history record.

## Call Waiting


To **Activate/Cancel Call waiting** (Steps 1-2):

1. Press  > **Calls** > **Call settings** > **Call services** > **Call waiting**
2. Scroll ▲/▼ to select **Activate/Cancel** and press **Select**.

To check status, press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Call waiting** > **Check status**.

## Hide ID

To **Hide ID** (Steps 1-2):


1. Press  > **Calls** > **Call settings** > **Call services** > **Hide ID**.
2. Press **Yes** to **Hide ID for all calls** or **Hide ID for next call**.

## Caller ID


To check caller ID status (Steps 1-2):

1. Press  > **Settings** > **Connectivity** > **Call options** > **Call services** > **Caller ID**.
2. Press **Caller ID** to check Caller ID status.


## Cost Settings

To set **Currency**, press  > **Calls** > **Call settings** > **Call services** > **Cost Settings** > **Currency**.


To set **Cost/unit** (Steps 1-2):

1. Press  > **Calls** > **Call settings** > **Call services** > **Cost Settings** > **Cost/unit**.
2. Enter the rate **Per unit** and **Per minute**.

To set **Maximum cost** (Steps 1-2):

1. Press  > **Calls** > **Call settings** > **Call services** > **Cost Settings** > **Maximum cost**.
2. Press **Edit** to turn **Display credit On/Off** and specify the **Maximum cost** by using the keypad keys.

To set **Auto display** (Steps 1-2):


1. Press  > **Calls** > **Call settings** > **Call services** > **Cost Settings** > **Auto display**.
2. Set the Auto display to be **Off** or show **Cost/Duration/Both**.


## Call divert

You can select call diversion when you are unable to pick up a phone call in the following conditions:

- **Divert all calls** (diverts all incoming calls to the number you assigned).
- **All conditional** (diverts an incoming call when it is not answered)
- **Not reachable** (diverts all incoming calls to the number you assigned when the phone is turned off or out of signal range).
- **When no reply** (diverts an incoming call when it is not answered for a period of time determined by your network).
- **Busy** (diverts the incoming call when the line is busy).
- **Divert all data calls** (diverts the incoming call when the phone is receiving data).
- **Check Status** (Displays the divert status).

To set **Call divert** (Steps 1-2):

1. Press  > **Calls** > **Call settings** > **Call divert**.
2. Select **Call divert** condition: **Divert all calls**, **All conditional**, **Not reachable**, **When no reply**, **Busy**, **Divert all data calls** or **Cancel all**.


To check **Call divert** status, press  > **Calls > Call settings > Call divert > Check status.**


### Call barring

This feature allows you to bar different types of calls made or received on your phone. Ask your service provider for a 4-digit password if you want to activate the feature. There are four types of calls that can be barred

- **All outgoing** (except emergency calls)
- **Outgoing international** (only calls within your home country can be dialled)
- **Outgoing international except home** (international calls to your home network are allowed, but all other international calls are barred.)
- **All incoming** (bars all incoming calls)
- **Incoming when roaming** (bars incoming calls when you are out of your home network range)
- **Check Status** (Displays the roaming status)

To set **Call barring** (Steps 1-2):


1. Press  > **Calls > Call settings > Call barring.**
2. Select a barred call type: **All outgoing, Outgoing international, Outgoing international except home, All incoming, Incoming when roaming** and **Cancel all.**

To check call barring status, press  > **Calls > Call settings > Call barring > Check status.**

### Fixed dialling


Fixed dialling allows you to dial only certain predefined numbers.

To turn on Fixed dialling (Steps 1-3):


1. Press  > **Calls > Call settings > Fixed dialling.**
2. Enter PIN2 code. An activating/deactivating message will be displayed on the screen.
3. Press **Ok.**


## Closed user group

Closed user group is a network service that specifies the group of people whom you can call and who can call you. For more information, contact your network operator or service provider.

To turn **Closed user group On/Off**, press  > **Calls** > **Call settings** > **Closed user group** > **Closed user group**.

To select a group, press  > **Calls** > **Call settings** > **Closed user group** > **Select group**.

To turn **Outgo. access On/Off**, press  > **Calls** > **Call settings** > **Closed user group** > **Outgo. access**.

To turn **Preferred group On/Off**, press  > **Calls** > **Call settings** > **Closed user group** > **Preferred group**.

# INDEX

## A

- Alarm 58
- Alert type 45
- Any key answer 46, 86
- Appointments 58
- Auto Answer 46, 86
- Auto keypad lock 41

## B

- Background MP3 82
- Backlight duration 44
- Backlight level 44
- Bar calls 49, 89
- Battery 13
- Bluetooth 52
- Browser 52, 55

## C

- Calculator 60
- Calendar 57
- Call divert 48, 88
- Call history 85
- Call options 46
- Call Services 47, 87
- Call settings 86
- Call Waiting 47, 87
- Caller ID 47, 87
- Camera 62
- Camera mode 62
- Cell info 72
- Changing PIN/PIN2 38
- Character Table 35
- Charging the Battery 15
- Clear history 86
- Closed user group 50, 90

- Composer 74
- Connections 52
- Connectivity 46
- Contacts 75
- Cost Settings 48, 87
- Countdown 61

## D

- Default settings 43
- Default storage 42
- Display 43

## E

- E-mail 69
- Entertainment 73

## F

- Fixed dialling 49, 89
- Flight mode 42
- FM Radio 79

## G

- Games 73
- Greeting 44

## H

- Headset 41
- Holding a Call 31

## I

- Icons 29
- Inserting / Removing the SIM Card  
17

## K

- Key sound 45

Keys 22

## L

Language 36

Last played 80

## M

Main menu 26

Making a Conference Call 32

Making an Emergency Call 30

Making/Ending a Call 30

Making/Receiving a Second Call  
32

Managing files 83

Memory card 54, 84

Memory slot 19

Memory status 72, 78

Message settings 50

Messages 65

Multimedia Messages 68

My Data 83

My player 79

## N

Network 50

Notes 59

## P

Personal Identification Numbers  
19

Phone Lock 39

Phone memory 83

Playlists 81

Preferred Networks 50

Profiles 43

Push Inbox 71

## Q

Quick call 77

Quick keys 24

## R

Receiving a Third Call 32

Receiving/Rejecting a Call 31

Repeat alarm 58

Ring volume 45

Ringtones 45

## S

Search mode 50

Seconds reminder 86

Security 38

Select band 51

Select line 51

Settings 36

Shortcuts 41

Shutter sound 46

SIM Card 17

Soft Keys 25

SOS Soft Key 6

Special numbers 77

STK (SIM Tool Kit) 61

## T

T9 Language 33

Tasks 59

Templates 71

Text Entry 33

Text Messages 66

The 4-Way Key 23

Themes 44

Time & date 36

Tools 57

Tracks 80

## U

Unit converter 60

USB features 53

## V

Video mode 63

View groups 76  
Voice command 40  
Voice control 39  
Voice Dialling 40  
Voice mail 72

Voice memo 81

## **W**

Wallpaper 43  
WAP setup 55