



User Manual

- V1302





Table of Contents

SAFETY PRECAUTIONS/MEASURES	6
PHONE LAYOUT	7
1 GETTING STARTED	8
1.1 Removing the battery cover.....	8
1.2 Removing the battery	8
1.3 Inserting the SIM card.....	8
1.4 Inserting the Memory card.....	9
1.5 Re-Inserting the battery	9
1.6 Putting back the battery cover	9
1.7 Switching On/Off the handset.....	9
2 BASIC FUNCTION	10
2.1 MAKING A CALL.....	10
2.1.1 Making domestic calls.....	10
2.1.2 Dialing international calls.....	10
2.1.3 Dialing phone numbers in the call records.....	10
2.2 EMERGENCY CALLS	11
2.3 ANSWERING A CALL.....	11
2.4 CALL RECORDS.....	11
2.5 CALL OPTIONS.....	11
2.6 INPUT METHOD	12
2.6.1 Keyboard	12
2.6.2 Navigation keys (Up/Down and Left/Right keys)	12
2.6.3 Pound key.....	13
2.6.4 Number keys.....	13
2.6.5 Asterisk key	13
2.6.6 Communication control keys.....	13
2.6.7 Connection jack.....	13
3 PHONEBOOK	14
3.1 QUICK SEARCH	14
3.2 SEARCH CONTACT.....	14
3.3 ADD NEW CONTACT.....	14
3.4 COPY ALL.....	15
3.5 DELETE.....	15
3.6 CALLER GROUPS	15
3.7 EXTRA NUMBERS.....	15
3.8 SETTINGS.....	15
3.8.1 Memory status	15
3.8.2 Preferred storage.....	15
3.8.3 Fields.....	16

3.8.4	My vCard	16
3.8.5	vCard version.....	16
4	MESSAGES.....	16
4.1	SMS.....	16
4.1.1	Inbox.....	16
4.1.2	Outbox.....	17
4.1.3	Drafts.....	18
4.1.4	Write message.....	18
4.1.5	Templates.....	18
4.1.6	Text message settings.....	18
4.2	MMS.....	19
4.2.1	Write message.....	19
4.2.2	Inbox.....	20
4.2.3	Outbox.....	20
4.2.4	Drafts.....	20
4.2.5	Template.....	20
4.2.6	MMS settings.....	20
4.3	CHAT.....	21
4.4	VOICE MAIL SERVER.....	21
4.5	BROADCAST MESSAGE.....	21
5	CALL SETUP.....	21
5.1	CALL HISTORY.....	21
5.1.1	SIM 1 call history.....	21
5.1.1.1	SIM1 missed calls.....	21
5.1.1.2	SIM 1 dialed calls.....	21
5.1.1.3	SIM 1 received calls.....	22
5.1.1.4	Delete SIM 1 call logs.....	22
5.1.1.5	SIM 1 call timers.....	22
5.1.1.6	SIM 1 call cost.....	22
5.1.1.7	SIM 1 text message counter.....	22
5.1.1.8	SIM 1 GPRS counter.....	22
5.1.2	SIM 2 call history.....	22
5.2	CALL SETTINGS.....	22
5.2.1	SIM 1 call settings.....	22
5.2.1.1	Caller ID.....	22
5.2.1.2	Call waiting.....	22
5.2.1.2.1	Activate.....	22
5.2.1.2.2	Deactivate.....	22
5.2.1.2.3	Query Status.....	23
5.2.1.3	Call divert.....	23
5.2.1.4	Call barring.....	23
5.2.1.5	Line switching.....	23
5.2.1.6	Closed user group.....	23
5.2.2	SIM 2 call settings.....	23

5.2.3	Blacklist.....	23
5.2.3.1	Mode.....	23
5.2.3.2	Blacklist Number.....	23
5.2.4	Auto redial.....	23
5.2.5	Speed dial.....	23
5.2.6	IP dial.....	23
5.2.7	Background sound.....	23
5.2.8	Call time display.....	23
5.2.9	Call time reminder.....	24
5.2.10	Auto call disconnect.....	24
5.3	VOICE CHANGER.....	24
6	FILE MANAGER.....	24
7	MULTIMEDIA.....	25
7.1	IMAGE VIEWER.....	25
7.2	VIDEO PLAYER.....	25
7.3	AUDIO PLAYER.....	25
7.4	SOUND RECORDER.....	26
7.5	FM RADIO.....	26
7.6	SCHEDULE FM RECORD.....	26
7.7	MELODY COMPOSER.....	26
8	GAMES.....	27
9	SERVICES.....	28
9.1	STK.....	28
9.2	WAP.....	28
9.3	DATA ACCOUNT.....	28
10	ORGANISER.....	29
10.1	E-BOOK READER.....	29
10.2	CALENDAR.....	29
10.3	CALCULATOR.....	29
10.4	UNIT CONVERTER.....	30
10.5	CURRENCY CONVERTER.....	30
10.6	TO DO LIST.....	30
10.7	STOPWATCH.....	30
10.7.1	Typical stopwatch.....	30
10.7.2	nWay stopwatch.....	30
10.8	ALARM.....	31
10.9	WORLD CLOCK.....	31
10.10	HEALTH.....	31
10.10.1	BMI (Body Mass Index).....	31
10.10.2	Menstrual.....	31
10.11	FLASHLIGHT.....	31



11 SETTINGS	32
11.1 DUAL SIM SETTINGS	32
11.2 PHONE SETTINGS	32
11.3 USER PROFILES	33
11.4 NETWORK SETUP	33
11.4.1 SIM 1 network setup	33
11.4.1.1 Network selection	33
11.4.1.2 Preferred networks	33
11.4.2 SIM 2 network setup	33
11.5 SECURITY SETUP	33
11.5.1 SIM 1 security setup	33
11.5.1.1 SIM 1 lock	33
11.5.1.2 Fixed dial	34
11.5.1.3 Barred dial	34
11.5.1.4 Change password	34
11.5.2 SIM 2 security setup	34
11.5.3 Phone lock	34
11.5.4 Auto keypad lock	34
11.5.5 Change password	34
11.5.6 Mobile Tracker	34
11.5.6.1 Setting Status	34
11.5.6.2 Guard Number	34
11.5.6.3 Trace Content	34
11.5.7 Long distance control	34
11.6 RESTORE FACTORY SETTINGS	35
12 DISCLAIMER	36
APPENDIX I: TROUBLESHOOTING	37
APPENDIX II: ABBREVIATIONS AND EXPLANATION	39



SAFETY PRECAUTIONS/MEASURES

Please comply with these precautions/asures to avoid dangerous or illegal situations and to ensure peak performance of your phone.



ROAD SAFETY COMES FIRST

Do not use the phone hand-held while driving. Park the vehicle on the road side, if phone is hand-held.



SWITCH OFF IN AIRCRAFT

Switch your phone off while boarding an aircraft. Signal from your phone can affect aircraft system. You are legally obliged to comply with this recommendation.



SWITCH OFF NEAR EXPLOSIVES

Switch your phone off when entering any explosive area. Observe any provided guidelines or regulations.



SWITCH OFF WHEN REFUELING

Do not use your phone when refueling. You should keep your phone away from fuel and chemicals.



SWITCH OFF IN HOSPITALS

Switch the phone off in hospitals. Follow any instructions if provided.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



AVOID INTERFERENCE WITH PACEMAKERS

Maintain a minimum distance of 15 cm between the mobile phone and pacemaker to avoid potential interference.



 
USE QUALIFIED SERVICING

Only open the phone to replace the battery, SIM and microSD card. You must not open the battery under any other circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.




PHONE LAYOUT


Front

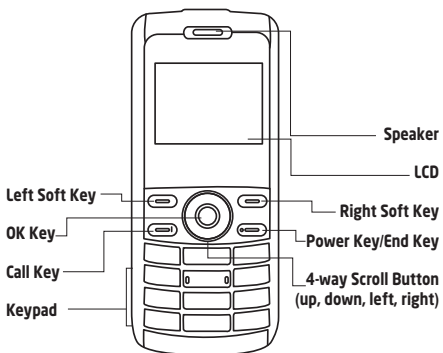

Back

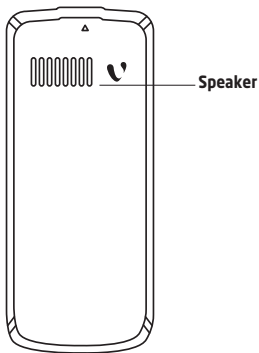 


1 GETTING STARTED

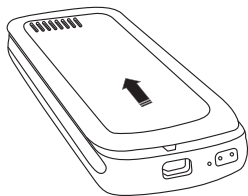 


1.1 Removing the battery cover:

 - 1.1.1 Ensure that the phone is switched off
- 1.1.2 Press and slide the battery cover in the upwards direction to unlock the battery
- 1.1.3 Lift the battery cover up to open

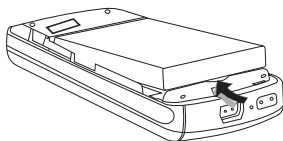


1.2 Removing the battery from the compartment:

 - 1.2.1 Locate the battery groove at the bottom middle of the battery compartment
- 1.2.2 Lift the battery up with your fingers
- 1.2.3 Remove the battery out from the phone

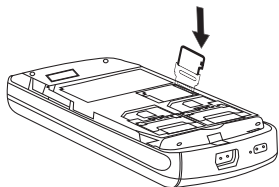


1.3 Installation of Memory Card:

 - 1.3.1 Locate the Memory Card slot at the bottom of the battery compartment
- 1.3.2 Push the Memory Card cover in right direction to unlock and pull it upwards to open
- 1.3.3 Place the Memory Card into Memory Card slot with the metal connectors of the Memory Card facing down
- 1.3.4 Close the Memory Card cover and push it in left direction to lock the Memory Card cover

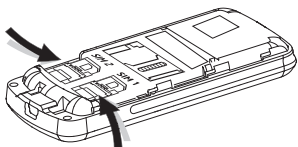


1.4 Installation of SIM Card:

 - 1.4.1 Locate the SIM Card sockets
- 1.4.2 Slide the SIM Cards into SIM Card sockets (as shown below)

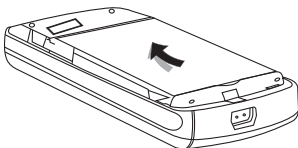


1.5 Installing the battery:

 - 1.5.1 Slide the battery into the compartment in such a way that the metal connectors of the battery are aligned with the metal connectors of the phone
- 1.5.2 Push the battery down into the compartment and ensure that the battery is securely placed in the compartment

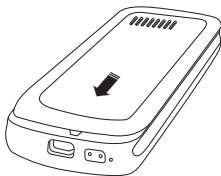

1.6 Putting the battery cover:

 - 1.6.1 Place the battery back cover over the phone squarely with arrow on the battery cover facing up
- 1.6.2 Slide the back cover in downward direction to engage the locks

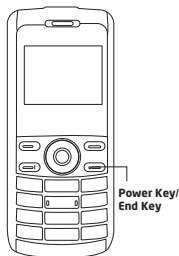

1.7 Switch On/Off the handset by gently pressing the Power Key/ End Key:

- 1.7.1 Gently press the Power/ End Key and keep it pressed for 3-5 seconds to Switch On/Off the handset



2 BASIC FUNCTION

2.1 Making a Call

When the logo of the service provider appears on the display screen, you can dial or receive calls. The information bar at the upper left corner of the display screen shows the network signal strength (when there are 5 information bars, the signal is at its strongest).

The call quality is very likely to be affected by obstructions, therefore movement in a small area can effectively improve call performance.

2.1.1 Making domestic calls

Enter phone number, and then press the Dial Key to make a call. If you want to change the entered phone number, press right soft key to delete the numbers. Call state information will be shown on the screen after the called party ends the call. To enter and dial domestic call, follow the order:

1. Area code
2. Phone number
3. Dial key

2.1.2 Dialing international calls

To make an international call, you may press * key to power continually, till the screen displays the pre-digit symbol "+" for international long distance call, which will enable you to make a call from any country without knowing the local international access code. Enter numbers in the following sequence to make an international call:

1. The pre-digit symbol, +
2. Country code
3. Complete phone number
4. Dial key

2.1.3 Dialing phone numbers in the call records

Every phone number you have dialed or received will be stored in the list of phone call records. The latest dialed, received and missed numbers will be listed, according to their types, in the respective menu of dialed calls, received calls and missed calls. When the call record list gets full, the old numbers automatically get deleted. To view the call record list, do the following:

1. In standby state press Dial 1/2 key to view the call record list of dialed calls.
2. All phone numbers in the list can be dialed directly by pressing the Dial key.
3. When the list is displayed, press "OK" to read the details, then "Options" to Save or Delete the number.



2.2 EMERGENCY CALLS

As long as in the network service range (which can be confirmed by checking the signal strength bars on the top left corner of the screen), you can always call emergency service. If your network supplier does not provide roaming service in your area, the screen will display "Emergency", to inform you that only emergency call is permitted. If you are within the network emergency range, you can make emergency calls even without the SIM card.

2.3 ANSWERING A CALL

To answer any incoming call, press "dialing" key or "answer" key. If an earphone has been connected, use the button on the earphone to answer a call, and if it is not convenient for you to press it, set automatic answer as on, assuring that the earphone is plugged on, so as to answer the calls automatically while the phone rings or vibrates. If "Any" key answer function is chosen, by pressing any key, other than "Ring off" key and "right soft" key, can answer an incoming call.

2.4 CALL RECORDS

Your phone can store call records of the latest missed calls, received calls, dialed calls, the time of last call as well as total amount of received calls and total dialed calls, for you.

2.5 CALL OPTIONS

In connected state, press left soft key to view call options or press right soft key for "H-free" and activate the speaker. Under activated hands-free condition, press right soft key for "H-hold" and power off the speaker. Operation methods of call options are similar to that of the Function menu.

The call options can only be viewed during call process, moreover, the functions of call waiting, call holding, and conference calls need service support. Please contact your service provider for more details. Under call options, you can perform the following operations:

- **Hold Single:** Put the current call on hold.
- **End Single:** End the current call.
- **New Call:** Enter new dialing interface.
- **Phonebook:** Enter phonebook menu.
- **Messages:** Enter short message menu. Owing to restrictions of network engagement, MMS function is barred during call process.
- **Sound Recorder:** Record a call.
- **Background Sound:** Set the background sound for a call.
- **Voice Changer:** Set voice changer for a call.
- **Mute:** Enables you to make your voice response mute.



- **DTMF:** Power on/off the operations of DTMF.
- **Conference*:** Enter multiple party conference call state. By following the prompts, you can have the following functions: receive waiting calls, add them into multiple party call, maintain the multiple party call, talk privately with one party of the conference while maintaining all other callers, connect one party in the call conference with another party while exiting the multiple party call oneself, maintain one party of the multiple party call and end current call and all other maintained calls.






Note:

The menu marked * items will only appear in special circumstances. For conference function, it is necessary to apply for service supply to corresponding service operator.

2.6 INPUT METHOD

This mobile phone provides the following input methods:

Input Method Icon	Explanation
	Upper case English input method
	Lower case English input method
	Digit input method

2.6.1 Keyboard

In idle screen, press the left soft key to directly access the Menu. In idle screen, press the right soft key to directly access the Phonebook list. While accessing menu, the current functions of the left and right soft keys will be shown in the bottom line of the screen, as they are closely related to the current status of the phone.

2.6.2 Navigation keys (Up/Down and Left/Right keys)

Direction keys are used to readily access different functions which can be assigned by dedicating the keys by Dedicated Keys option in Settings.

2.6.3 Pound key

Press the pound key to enter “#”.

Press and hold the pound key in idle screen to activate/deactivate the Silent mode.

While working on the editing screen, press the pound key to change the input method.

2.6.4 Number keys

Press number keys (0-9) to enter numbers.

Press and hold number keys (2-9) to start speed dial.

You can also use number keys to select menu. If a number is shown before an option in the menu list, you can select the option quickly by pressing the corresponding number key.

2.6.5 Asterisk key

Press the asterisk key to enter “*”.

Press the asterisk key twice in a row to enter “+”, to make an international call.

2.6.6 Communication control keys









Calling key is used to make a call after a number has been entered or selected from the phonebook or to answer an incoming call.

Ending key is used to end a call during calling or conversation, or to quit the menu and return to idle screen. Press and hold the ending key for about five seconds to turn on/off the phone.

2.6.7 Connection jack

The connection jack is used to connect charger and headset.

The following icons may be displayed in the first line of the screen.

	Signal strength for SIM 1
	Signal strength for SIM 2
	Battery status
	Keypad locked
	Alarm activated
	Connected to the GPRS network
	Ring
	Vibration only



3 PHONEBOOK

You can store information such as names, phone numbers, and e-mail addresses in the phonebook. Phone numbers can be stored in your mobile phone or SIM card. The mobile phone can store up to 1000 records, the amount of phone numbers that SIM card can store vary with its capacity.

In standby state, you can access this interface with the help of right soft key.

3.1 QUICK SEARCH

Quick Search allows you to quickly search an entry in the Phonebook by entering the key letters or words of the name.

You can quickly locate the number of the person you want to contact. Enter the initial letter of the person's name, and related records about it will display on the screen. Please use the Up / Down key to select the number as desired, and then press Talk Key to make a call.

3.2 SEARCH CONTACT

Search contact allows you to search the specified contact by entering some words in the edit interface and searching out that specified contact.



3.3 ADD NEW CONTACT

You can add a new contact entry to the phonebook of SIM 1, SIM 2 and phone memory.

On selecting SIM 1 and SIM 2 to save the phone number, you get the following fields to edit:

- Name
- Number

On selecting Phone memory to save the phone number, you get the following fields to edit:

- Name
 - Number
 - Home Number
 - Company Name
 - E-mail Address
 - Office Number
 - Fax Number
 - Birthday
 - Associated Picture
 - Associated Video
 - Associated Sound
 - Caller Group
- 

3.4 COPY ALL

This function enables you to copy all entries both from the SIM card to Phone / Other SIM and vice versa.

3.5 DELETE

You can delete entries from the SIM card and Phone.

To delete entries from SIM card or Phone select "From SIM 1", "From SIM 2" (if both are inserted in the phone) and "From Phone" respectively.

You can select "One by One" to delete entries by selecting a particular phone number.

3.6 CALLER GROUPS

This mobile phone supports incoming call group function. You can select groups, view and edit group details under incoming call group list interface.



Note:

Member addition or reduction of incoming groups is only limited to phone record on the mobile phone.

3.7 EXTRA NUMBERS

This feature enables you to enter Service Dialing Numbers and SOS Numbers in SIM 1 and SIM 2.

3.8 SETTINGS

This function enables you to check memory status and preferred storage location.

3.8.1 Memory status

It is the default storage location of the phone number. You can also select different storage location when saving a phone number.

3.8.2 Preferred storage

It enables you to select your preferred storage location as "SIM memory" or "Phone memory".



Note:

If either of your storage location gets full, the phone will automatically save your message at an alternate location.



3.8.3 Fields

It enables you to set vCard details, such as Home number, Company name, E-mail address, etc.

3.8.4 My vCard

You can create your own card via vCard method. The options available are:

Edit my vCard: Enables to edit the vCard by entering details in the following fields:

- **Name**
- **Number**
- **Home Number**
- **Company Name**
- **E-mail Address**
- **Office Number**
- **Fax Number**

Send my vCard: Enables you to send your vCard.

3.8.5 vCard version

This function enables you to set the version of your vCard.

4 MESSAGES

4.1 SMS

The phone supports Short Message Service (SMS). Picture, animation, melody and sound can be added in the short message. Short message can also be created by using templates.

4.1.1 Inbox

All received messages are saved in the inbox. You can further edit or forward these messages.

Select **SMS > Inbox**, for accessing SIM1 and SIM 2 messages and to select the SIM use the navigation key. On selecting the message, press Option and the following options will display:

Reply: Enables to reply to the sender of the message.

Delete: Enables to delete the current message.

Edit: Enables you to edit and forward the current message.

Forward: Enables you to forward the current message.

Copy to Phone/SIM: Enables to copy the messages to SIM/Phone.





Move to Phone/SIM: Enables to move the messages to SIM/Phone.

Chat: Enables to chat with the sender of the current message.

Delete All: Enables to delete all the messages in the inbox.

Copy All: Enables to copy all the messages from SIM/Phone.

Move All: Enables to move all the messages from SIM/Phone.

Use Number: Enables you to extract the number from the message and then provides the option to dial or save the number in the phonebook.

Use URL: Enables you to extract/use the URL address from the message.

Use USSD: Enables you to extract/use the USSD from the message.

4.1.2 **Outbox**

This folder contains the saved messages which are successfully sent to the destination. On selecting outbox, press Option and the following options will display:

Send from SIM 1: Enables you to send the current message from SIM 1.

Send from SIM 2: Enables you to send the current message from SIM 2.

Edit: Enables you to edit and forward the current message.

Delete: Enables to delete the current message.

Copy: Enables you to copy the current message to Phone/SIM.

Move: Enables you to move the current message to phone/SIM.

Delete All: Enables you to delete all the messages from outbox.

Copy All: Enables you to copy all the messages from SIM to Phone and Phone to SIM.

Move All: Enables you to move all the messages from SIM to Phone and Phone to SIM.

Use Number: Enables you to extract the number from the current message and then provides the option to dial or save the number in the phonebook.

Use URL: Enables you to extract/use the URL address from the current message.

Use USSD: Enables you to extract/use the USSD from the current message.



4.1.3 Drafts

This folder temporarily contains the messages which are saved to be sent or edited later.

4.1.4 Write message

You can create and send messages by this option:

Select **Menu > Messages > SMS > Write Message**. You can write a message maximum of 612 characters. It also displays the length indicator which counts backwards from 160 to 0, but it varies from page to page as you can write a 4 page message too.

Selecting Option provides the following sub-options:

SIM 1 done: This option provides you with various options to send the message using SIM 1.

SIM 2 done: This option provides you with various options to send the message using SIM 2.

Use Templates: It provides option to insert the templates available in the phone.

Insert Object: It provides option to insert object such as Picture, Animation, Melody and Sound from their respective folders.

Format Text: It enables you to define Text style, Alignment and New paragraph.

Insert Number: Enables you to insert number in the message from the phonebook.

Insert Name: Enables you to insert a name in the message from the phonebook.

Insert Bookmark: Enables you to insert a bookmark in the message.

Input Method: It enables you to select the method of editing the message.

4.1.5 Templates

Your phone contains 10 SMSes which can be used commonly. You can Edit or Erase them.

4.1.6 Text message settings

SMS settings help in to edit the settings for the text messages. It provides the following options:

SIM 1 message settings

Profile settings:

Enables to select the profile you have configured in your mobile phone.

Common settings:

- **Delivery report:** Enables to get the delivery notification by making the status ON/OFF.

Memory status:

It enables to check SIM and Phone memory status.

Preferred storage:

It enables you to select your preferred storage location as "SIM memory" or "Phone memory".



Note:

If either of your storage location is already full, the phone will automatically save your message to the corresponding location

SIM 2 message settings:

Please refer to the content in "**SIM 1 message settings**".

4.2 MMS

MMS stands for Multimedia Message Service, whose largest feature is its support for multimedia function, capable of transmitting multimedia format information such as texts, images and voice.

MMS service needs service provider support, before use. Please confirm whether your SIM card supports this service or consult relevant service provider. If your phone supports MMS function, you need to make some necessary MMS settings for receiving and sending multimedia information.

4.2.1 Write message

You can create multimedia messages by this option. You can edit all the fields with the help of left soft key. The fields which can be entered are:

To: Enables you to insert the main recipient number.

Cc: Enables you to enter carbon copy recipient.

Bcc: Enables you to enter blind carbon copy recipient.

Subject: Enables you to enter and edit subject.

Edit Content: Enables you to edit the content.

4.2.2 Inbox

This folder contains multimedia messages received from other users.

4.2.3 Outbox

This folder contains the saved messages which are delivered to the recipient.

4.2.4 Drafts

This folder is a temporary storage place for MMS that are waiting to be sent.

4.2.5 Template

Your phone contains a default template of multimedia messages.

4.2.6 MMS settings

MMS settings help in to edit the settings for multimedia messages. The different options are:

Compose: Enables to compose a multimedia message, including Creation mode, Picture resizing, Auto signature and Signature.

Send: Enables to set Validity period, Delivery report, Read report, Priority, Slide timing, Delivery time for sending multimedia messages.

Retrieve: Enables to set Home network, Roaming, Read report and Delivery report for receiving multimedia messages.

Filter: Enables to set allow/reject multimedia messages on some criteria:

Anonymous – Allow/Reject

Advertisement – Allow/Reject

Server Profile: Enables to activate and edit the server profile. Please contact your service provider for settings.

Memory Status: Enables to view the memory usage ratio i.e. used space and free space for multimedia messaging.



Note:

1. Cases of delivery report and anonymous transmission are related to the service provided by your service provider, for more information contact your service provider.
2. Your phone has specially reserved certain space for storing MMS. Saving a large amount of MMS might totally occupy this available storage capacity, therefore your phone might prompt your storage capacity as full. At this time you must first delete redundant information in all the MMS mail directories, so as to ensure there is sufficient space for saving new MMS.

4.3 CHAT

It is possible to set up two Chat rooms by formulating "My Nickname" and "Remote Number", in this way chatting through short messages with the other party becomes possible.

4.4 VOICE MAIL SERVER

When you cannot answer a call, you can request the caller to leave a message through Voice mail service which you can listen to, by accessing your Voice mail. Voice Mail Server is a network service to which you may need to subscribe. For more information, contact your service provider.

Select **Messages > Voice Mail Server**, to access this option.

4.5 BROADCAST MESSAGE

Broadcast Message enables you to receive messages on various topics, such as weather or traffic conditions from your service provider (network service). For available topics, relevant topic numbers and more information contact your service provider.

The options available under it are:

Receive Mode: Enables to make receiving mode ON/OFF.

Read Message: Enables to read the messages received.

Languages: Enables to set out the preferred language.

Channel Settings: Enables to set out the preferred channel.

5 CALL SETUP

On standby mode, press the calling key to directly access the call logs of the SIM 1 card, and press the left soft key to directly access the dialed call logs of the SIM 2 card.

5.1 Call history

You can view SIM 1's/SIM 2's information related to call records, including Missed Calls, Dialed Calls, Received Calls, Delete Call Log, Call Time, Call Cost, SMS Counter and GPRS Counter. If you have inserted only one SIM card, you can see only one of the SIM card's phone records.

5.1.1 SIM 1 call history

5.1.1.1 SIM 1 missed calls

You can see the latest missed calls.

5.1.1.2 SIM 1 dialed calls

You can see the latest dialed calls.



5.1.1.3 SIM 1 received calls

You can see the latest received calls.

5.1.1.4 Delete SIM 1 call logs

You can delete Missed calls, Dialed calls, Received calls and All calls from SIM 1 card.

5.1.1.5 SIM 1 call timers

You can view time of the Last call, Dialed calls, Received calls and Reset all call's time on SIM 1 card.

5.1.1.6 SIM 1 call cost

You can view call cost of the Last call and Total call cost on SIM 1 card. You can also Reset cost and set the Maximum cost and the Price per unit on SIM 1 card. It requires network support.

5.1.1.7 SIM 1 text message counter

View and reset the numbers of short messages sent and received on SIM 1 card.

5.1.1.8 SIM 1 GPRS counter

View the volume of GPRS last sent, last received, all sent and all received on SIM 1 card. You can also reset the counter on SIM 1 card.

5.1.2 SIM 2 call history

Please refer to the content in "SIM 1 call history".

5.2 CALL SETTINGS

5.2.1 SIM 1 Call Settings

5.2.1.1 Caller ID

This option enables you to set your caller ID by network, hide your caller ID or send your caller ID. You can hide your caller ID only if it is supported by your network provider.

5.2.1.2 Call waiting

This option enables you to Activate/Deactivate call diversion and check the query status.

5.2.1.2.1 Activate

If activated, an incoming call is signaled by a call waiting tone when you are on another call. The number/name of the incoming call will be displayed simultaneously.

5.2.1.2.2 Deactivate

Enables you to cancel all the call waiting functions.





5.2.1.2.3 Query Status

Enables to enquire the current status of your query from the network.

5.2.1.3 Call divert

Enables to set Divert all voice calls, Divert if unreachable, Divert if no answer, Divert if busy, Divert all data calls and Cancel all divers.

5.2.1.4 Call barring

It allows you to restrict the calls that you make and receive on your phone. You can set outgoing calls, incoming calls, cancel all calls or change the call barring password. It is a network based service.

5.2.1.5 Line switching

This option enables you to change the phone line in use.

5.2.1.6 Closed user group

Enables you to create group of contacts and configure them for various tasks.

5.2.2 SIM 2 Call Settings

Please refer to the content in “SIM 1 call settings”.

5.2.3 Blacklist

This function enables you to add the number in the blacklist and activating it enables you to block calls from that number.

5.2.3.1 Mode

Enables you to set the mode to On or Off.

5.2.3.2 Blacklist Number

This function enables you to add the number in the blacklist to block calls from that number.

5.2.4 Auto redial

This option enables you to set auto redial on/off.

5.2.5 Speed dial

This option enables you to set the speed dial phone numbers. You can set 8 speed dial options on number keys 2-9.

5.2.6 IP dial

Set and activate the IP* dial to dial a phone number with an automatically added IP prefix. This function needs network support.

5.2.7 Background sound

This option enables you to play a background sound during an active call. You can also add your own sound.

5.2.8 Call time display

It enables you to power on/off the call time display.





5.2.9 Call time reminder

This function enables you to set the call time reminder as Single time or Periodic.

5.2.10 Auto call disconnect

It enables you to disconnect the current call automatically after certain duration of time. You can on/off this option and set the time between 1 and 9999 seconds.

5.3 VOICE CHANGER

Voice changer is the unique feature of the phone which let you to change the voice. You can set the voice changer On/Off and select different kinds of voices.

6 FILE MANAGER

You can use File Manager to organise your files in folders, in the phone and memory card. If a memory card is inserted, the files stored on it are organised separately.

Select Phone or Memory card and then select Options to browse, copy, delete, and move files in folders. Depending on the size and type of memory card the read time will differ.





7 MULTIMEDIA

7.1 IMAGE VIEWER

Image Viewer provides you with a quick view of the picture functions. You can view the pictures from the photo's folder.

View: Enables you to view the captured images.

Browse Style: You can view images in List style or Matrix style.

Use: Enables you to send the image to wallpaper, screensaver or to the phonebook.

Send: Enables you to send the images via MMS or Bluetooth.

Rename: Enables you to change the name of the image.


Delete: Enables you to delete the current image.

Delete all Files: Enables you to delete all the image files stored in the image viewer folder.


Sort By: Enables you to sort the images in the Image Viewer by name, type, time and size.

Storage: Enables you to set the storage location for the image.

7.2 VIDEO PLAYER



Video player enables you to play the video files stored on your Phone or Memory card. Select a video file that you want to play using direction keys "Up" and "Down" and then press OK key to enter the options menu. The option enables you to perform operations such as Play, Forward, Rename, Delete, Delete All Files, Sort and Store.



In the playing interface, press OK key to play current video file. Press "OK" key again to pause playing. Press right soft key to stop playing. Press up or down key to adjust volume and left or right key to quickly adjust the speed of video playing. Your phone supports AVI video and certain 3GP video formats.

7.3 AUDIO PLAYER

Audio player allows you to play audio files. The phone supports T-Flash Memory card. You need to save music files to My Music folder to have a direct access.

- **Play:** Play the music files.
- **Detail:** Check the details of music files.
- **Add to Ringtones:** Add the music to ringtones.
- **Refresh List:** Enables you to update the play list.
- **Settings:** Settings includes Auto generated list, Repeat, Shuffle, Background play and Sound effects.



7.4 SOUND RECORDER

Your phone supports two kinds of recording formats: **AMR** and **WAV**. Select a format from settings in options. You can also record and save a call in the Phone or the Memory card.

7.5 FM RADIO

You can use your phone to listen to FM radio stations once the original Headset is plugged into the accessory's connector.

Select **Menu > Multimedia > FM Radio**, to access radio controls, it also provides the following options:

- **Channel List:** Enables you to check out the list off all the available channels.
- **Manual Input:** Enables you to receive and set the channels manually.
- **Preset Auto Search:** Enables you to search for channels automatically and reset the channel list.
- **Settings:** Enables to set the settings for "Background Play", "Loud Speaker", "Record Format", "Audio Quality" and "Record Storage".
- **Record:** Enables you to record FM programmes, while you are enjoying them. It can be processed by pressing OK Key.
- **Append:** If there is any record, then you can append record after it.
- **File List:** Enables to scroll over all of the records available in phone.

7.6 SCHEDULE FM RECORD

You can schedule to record one or more FM programmes at a time, as per you configure. You can set up to four sets of recordings.



Note:

Make sure you have enough free memory on your Phone or the Memory card to store the recordings.

7.7 MELODY COMPOSER

You can compose your own ringtones and music by using this option.





8 GAMES

Select **Menu > Games**, to access the games.

Game interface offers option to select a game, the user can select the following games from the interface:

- **F1 race**
- **Riches**
- **Puzzle**

On selecting a game the user will receive the following options:

Start Game: To start the game

Game Level: Enables to configure the game level.

Best Grades: Enables to see best grades/score.

Game Help: Displays the introduction about how to play the game.

Game interface also displays the Game settings option:

Game Settings: You can configure your game settings such as background music and sound effect by this option





9 SERVICES

9.1 STK

STK (SIM Application ToolKit) is shown only if it is provided on your SIM card. For further details, please contact your network operator.

9.2 WAP

WAP function enables you to use the phone to surf the internet.

Homepage: Enables to connect browser to the homepage, you have set.

Bookmarks: The phone displays a list of stored bookmarks. To add a page to bookmarks go to Bookmarks > Options > Add bookmark.

Recent Pages: Displays the recent web pages visited.

Offline Pages: Displays the list of web pages, previously visited, while you are working offline.

Enter Address: Enables you to enter the website address for visiting a particular web page.

Service Inbox: This folder stores all the messages from the operator and the WAP functional messages.

Settings: Enables to set the browser settings, including SIM selection, Profile editing, Browser options, Service Message settings, Clearing cache, Clearing cookies and Trusted certificates.

9.3 DATA ACCOUNT

This function enables you to set the account information:

GSM Data: Enables you to set Account name, Number, User name, Password, Line type, Speed and DNS.

GPRS: Enables to set Account name, APN, User name, Password and Authentication type.



10 ORGANISER

10.1 E-BOOK READER

Your phone can be used to read the books by storing them in ***.txt file*** format. It supports view of UCS-2, ASCII and UTF-8 encoding documents.

Select **Menu > Organiser > E-Book Reader**, to access/read the books stored in your E-Book folder.

10.2 CALENDAR

You can use the phone's calendar to keep track of reminders, calls you need to make, meetings and birthdays. You can set the calendar to sound an alarm for your task.

Pressing the left soft key for "Option" which enables you to View Tasks, Add task, Jump To Date and Go to weekly view.

View Tasks: Enables you to view task's list and add tasks.

Add Task: Use Navigation keys for moving to the day you want and press Options to Add Task. You can select task type such as: Reminder / Meeting / Course / Date / Call / Anniversary.

Jump to Date: Enables you to input a date to jump to a particular date.

Go to Weekly View: Enables you to access monthly view and weekly view.

10.3 CALCULATOR

You can use your phone's calculator to add, subtract, multiply and divide.

1. Press the # key to enter decimal point.
2. Press the up, down, left and right key and OK key to select +, -, x, /, + and = respectively.
3. Press Clear to delete the figures.



Note:

This calculator is limited in accuracy and rounding off, thus, errors might occur.



10.4 UNIT CONVERTER

You can make the units conversion for weight and length.

In the first entry field, select the format from which unit you want to convert and to which. In the second entry field, enter the value to be converted. After entering the value, press OK to automatically convert it into required value.

10.5 CURRENCY CONVERTER



You can use your phone for converting currency. You have to select the amount and currency to which it has to be converted.

10.6 TO DO LIST

Use your phone to keep a track of Reminder, Meeting, Course, Date, Call and Anniversary. It displays all schedules for present and the future days, under the option menu, it is possible to Browse, Add, Edit, Delete, and Delete All the entries.

10.7 STOPWATCH

10.7.1 Typical stopwatch

- 
- 
- **Split Timing:** Enables you to take intermediate timings in a sequence. To start the time observation, press Start. Press Split every time you want to record an intermediate time. To stop the time observation, press Stop. To start the time observation again, press Resume, the new time will be added to the previous time.
 - **Lap timing:** To record repetitive lap timing, reset each period to zero. To start the time observation, press Start. Press Lap every time you complete a lap and want to reset time for the next lap. To start the time observation again, press Resume and the new time will be added to the previous time.
 - **View Record:** Enables you to View, Add, Edit, Delete and Delete all the list of records.

10.7.2 nWay stopwatch

It offers to take the intermediate time for all the directions by pressing up/down/left/right key. The total time is displayed on the top of the screen.



10.8 ALARM

You can set the device to sound an alarm at a desired time. The mobile phone can set upto five alarms, and supports shutdown alarm.

Select **Menu > Extras > Alarm**, to access the alarm.

To set the Alarm, select the time and set the Options: On /Off, Time, Repeat Type, Snooze time and Alert type.

You can repeat the alarm **Once, Everyday** or as **User Defined**.

10.9 WORLD CLOCK

You can scroll to browse every city's time zone in the world map. The related date and time will be displayed at the bottom of the screen.

10.10 HEALTH

Your phone is a complete health calculator, it offers two different calculations:

10.10.1 BMI (Body Mass Index)

This feature enables you to calculate Body Mass Index, by entering the details in the field:

Select Male / Female.

Height: Enter the height in Cm.

Weight: Enter weight in Kg.

10.10.2 Menstrual

This feature enables you to perform menstrual calculations, by entering the details in the field:

Last Menses Date: Enter the last menstrual date.

Average Period: Enter the average period in days.

10.11 FLASHLIGHT

Your phone is equipped with flashlight and you can switch ON/OFF as per your convenience.



11 SETTINGS

11.1 DUAL SIM SETTINGS

You can set the dual SIM mode on your mobile phone, according to the following options:

- **Dual SIM Active**
- **Only SIM 1 Active**
- **Only SIM 2 Active**
- **Flight Mode**

11.2 PHONE SETTINGS

Select **Menu > Settings > Phone Settings**, to get access to these options:

Time and Date: Enables to set time and date by setting home city, time, date and format.

Schedule Power: Enables to set the time for automatic power on/off.

Language: Enables to select the desired language for the display text.

Preferred Input Methods: Enables to select the desired input method for the default input method.

Display Properties: Enable to set display characters such as Wallpaper, Screen saver, Date and Time.

Greeting Text: Enables you to enter words as your greeting text once you switch on the phone.

Sound Effect: Enables you to set the audio effects.

Shortcuts: Enables you to set the shortcuts for the functions you use frequently.

Dedicated Key: Enables to dedicate specific keys for specific functions.

Auto Update of Date and Time: Enables to update the date and time automatically.



11.3 USER PROFILES

You can select your own user profile for the phone.

Select **Menu > Settings > User Profiles**, to access different profiles.

- **General**
- **Meeting**
- **Outdoor**
- **Indoor**
- **Headset**
- **Save Power**

You can activate and customise them as per your need.

Activate: Enables to select a particular profile and activate it.

Customise: Enables to set Tone setup, Volume, Alert type, Ring type, Extra tone and Answer mode.

11.4 NETWORK SETUP

11.4.1 SIM 1 network setup

11.4.1.1 Network selection

Search or select network can help search the network where you are. You can select the network selection mode as: Automatic or Manual. When you select automatic, the phone will make the preferential selection according to the network. When you select manual, you are required to select the same network as the registered network.

11.4.1.2 Preferred networks

Select your preferred network. The default network is the service provider of your SIM card.

11.4.2 SIM 2 network setup

Please refer to the content in "SIM 1 network setup".

11.5 SECURITY SETUP

11.5.1 SIM 1 security setup

11.5.1.1 SIM 1 lock

The PIN number can prevent the illegal use of your SIM card. You can set SIM 1 lock On/Off by this feature.



Note:

If you input the wrong PIN code thrice you will be asked for the PUK code. PUK is used to release and modify the locked PIN. If the PUK code is not provided or missed, then please contact your network operator.



11.5.1.2 Fixed dial

This function enables you to set the fixed dial option On or Off.

11.5.1.3 Barred dial

This function enables you to set the barred dial option On or Off.

11.5.1.4 Change password

This option let you to change the password of your phone.

11.5.2 SIM 2 security setup

Please refer to the content in “SIM 1 security setup”.

11.5.3 Phone lock

You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be required to enter the phone password.

11.5.4 Auto keypad lock

You can lock or unlock the phone keyboard and set the key lock time between 5 sec. – 5 min.

11.5.5 Change password

This option lets you change the password of your phone.



11.5.6 Mobile Tracker

This function enables you to trace the phone incase it gets lost. Your default password is “0000”. If someone inserts another SIM card in to your lost mobile, you will receive an SMS from the new SIM card indicating the new user. The different options which have to be configured are:

11.5.6.1 Setting Status

Enables to set the Status to On or Off.

11.5.6.2 Guard Number

Enables you to specify the bonding number to which the message should be sent in case the SIM is changed.

11.5.6.3 Trace Content

Enables you to specify and edit the contents of the message mean't to be received, incase the SIM is changed.

11.5.7 Long distance Control

This function is useful when you lose your mobile. You can control your lost mobile from a distance. Your default password is “0000”. You can also change the password for your security. To set a new password go to **Settings > Security Setup > Change Password**.

You can execute the following functions in long distance control:

Control Functions:

- **Power Off** - It will power off the lost mobile.
- **Disk Format** – It will format the disk.
- **Delete Phonebook** – It will delete all phone book entries.
- **Delete SMS** – It will delete all SMSes.
- **Phone lock** – It locks the phone.

Control Number:

Control Number Mode:

- **Appoint Mode** - You need to define a specific mobile number as the Appoint Number for instance +91*****, from which you can control your lost phone.
- **Random Mode** – If you select random, you will be able to control your lost phone from any mobile.

Appoint Number:

You can define up to 5 mobile numbers with +91***** from which you can control your lost mobile.

Receive Content:

It enables you to send content to your lost mobile through SMS.

11.6 RESTORE FACTORY SETTINGS

All settings can be restored to factory settings with this function. The Lock code for the phone in factory setting is 0000.





Note:

On restoring, the phone to factory settings, the default network settings will remain the same which was previously configured.



12 DISCLAIMER

Features and specifications specified in this manual are subject to change without prior notice. Certain mobile phone features may not be activated by your service provider, and/or their network settings may limit the feature's functionality. Services and some features such as GPRS, e-mail may be dependent on the network, SIM card, as well as on the compatibility of the devices used and the content formats supported, and may require network/service subscription/solutions. Data transfer speeds are network dependent. You must use the same Bluetooth Profile to enable the Bluetooth devices to communicate with one another. To determine the profiles supported by other Videocon products, visit <http://www.videoconmobiles.com> For other devices, contact their respective manufacturers. Certain Bluetooth features including those listed may not be supported by all compatible Bluetooth enabled devices, and/ or the functionality of such features may be limited in certain devices, or certain wireless carriers. Always demand for original Videocon mobile phones to protect yourself from buying tinkered and/or used or tampered phones. Buy Videocon tested and Videocon certified compatible accessories and add-ons. The warranty is applicable only for Videocon phones, the company is not responsible for any loss or theft. Always use Videocon original Enhancements (including batteries) for safety. The use of any other type may invalidate warranty applicable to the mobile phone and can also be dangerous. The phone is designed to operate using Lithium-ion batteries approved by the Videocon phone manufacturers. Using non approved batteries with the phone may result in poor performance and can cause damage to the phone or its enhancements or attachments. The display and products visualisation here are for illustrative purposes only. All features, functionality and other product specifications are based on the latest available information and are correct at the time of printing, however such product specifications are subject to change without notice based on newer versions and enhancements. The unauthorised copying of copyrighted material is not legal and is inimical to the provisions of the Copyright Laws of India and other countries. Kindly refer to <http://www.videoconmobiles.com> website for knowing newer versions of information provided in this manual, which might be of further use.



APPENDIX I: TROUBLESHOOTING

If you encounter problems while using the phone or if it performs erratically, you can consult the information in the following table. If a particular problem cannot be resolved by using the following information, contact the dealer from whom you purchased the phone.

Problems	Possible causes	Possible solutions
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, wireless transmissions cannot reach effectively.	Move to a location where you can receive the network signal properly.
	The network is busy at the current time, for example, during the peak times, there may be too much of network traffic to handle additional calls.	Avoid using the phone at such time or try again after waiting for a while.
	You are too far from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network trunk quality on the part of your service provider.	Press the ending key and dial again. You may be switched to a better quality network trunk or phone line.
	Poor local telephone line quality	Press the ending key and dial again. You may be switched to a better quality network trunk or phone line.
Battery not charging properly	The battery or battery charger is damaged.	Contact the dealer.
	The temperature of the phone is below -10°C or higher than 55°C.	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been made properly.
Shortened	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily switch off the phone.
	The battery is depleted. In high temperature environments, battery life gets shortened.	Use a new battery.

	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten the standby time.	Change your location to one where the network is accessible or temporarily turn off your phone.
You cannot switch your phone on	Battery power has exhausted.	Recharge the battery.
SIM card error	SIM card malfunctioning or damaged.	Take the SIM card to your service provider for testing.
	SIM card is inserted improperly.	Insert the SIM card properly.
	Debris on the SIM card metal area.	Use a soft and dry cloth to clean the SIM card metal area.
Unable to connect to the network	SIM card invalid.	Contact your service provider.
	You are not within the service area of the network.	Check the service area with your service provider.
	Poor signal.	Move to an open space or if you are inside a building, move closer to a window.
PIN code is blocked	You have entered an incorrect PIN code for three consecutive times.	Contact your service provider. If the service provider provides the PUK code of the SIM card, use the PUK code to unlock the SIM card.
Unable to enter information into the phonebook	The memory of the phonebook is already full.	Delete unnecessary data from the phonebook.
Unable to select certain features	Your service provider does not support these features or you have not applied for services that provide these features.	Contact your service provider.

APPENDIX II: ABBREVIATIONS AND EXPLANATION

GSM	Global System of Mobile Communication
GPRS	General Packet Radio Service
SMS	Short Message Service
WAP	Wireless Application Protocol
FDN	Fixed Dialing Numbers
SIM	Subscriber Identity Module
PIN	Personal Identification Number
PUK	Personal Unblocking Key
IMEI	International Mobile Equipment Identity
MCC	Mobile Country Code
MNC	Mobile Network Code
Call waiting	A service provided by the network, which allows you to answer another incoming call without interrupting the active call, but it is different from a conference call. You can only talk to one party at a time while another party is put on hold.
Call divert	A service provided by the network, which allows you to divert an incoming call to a specified number according to different circumstances.
Roaming	The phone is not used in the area of its local registered network. It includes international and domestic roaming. In this manual it refers to international roaming only.
STK	SIM Application Toolkit