



Part List, Mechanical

Applicable for K700i and K700c


Contents

1	Exploded View K700i/K700c	2
1.1	Exploded view Phone	2
1.2	Exploded view Frame Assembly	3
2	Part List K700i/K700c	5
2.1	Part List Phone	5
2.2	Part List Frame Assembly	6
3	Part List Label.....	6
4	Revision History	7




1 Exploded View K700i/K700c



1.1 Exploded view Phone

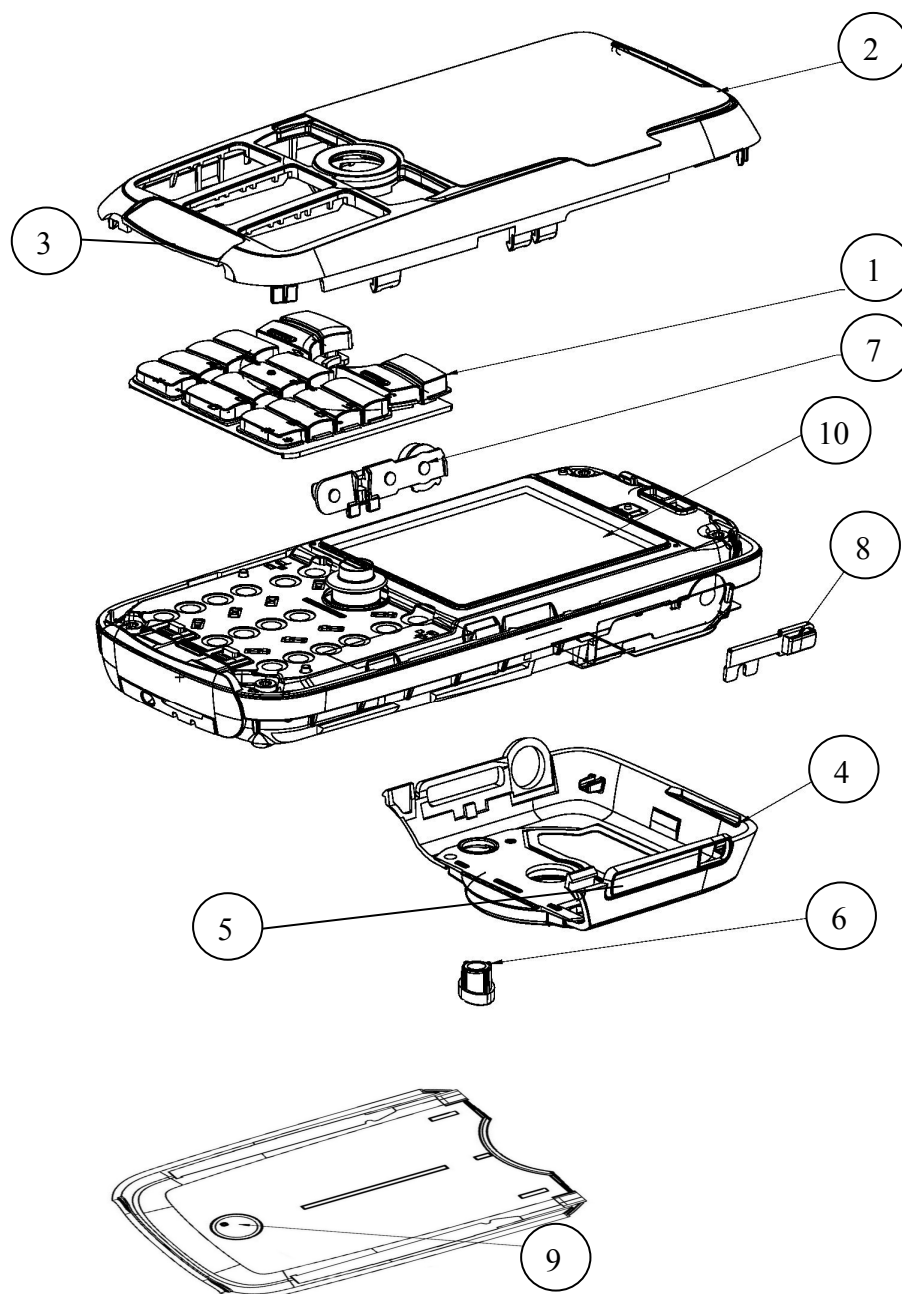



1.2 Exploded view Frame Assembly

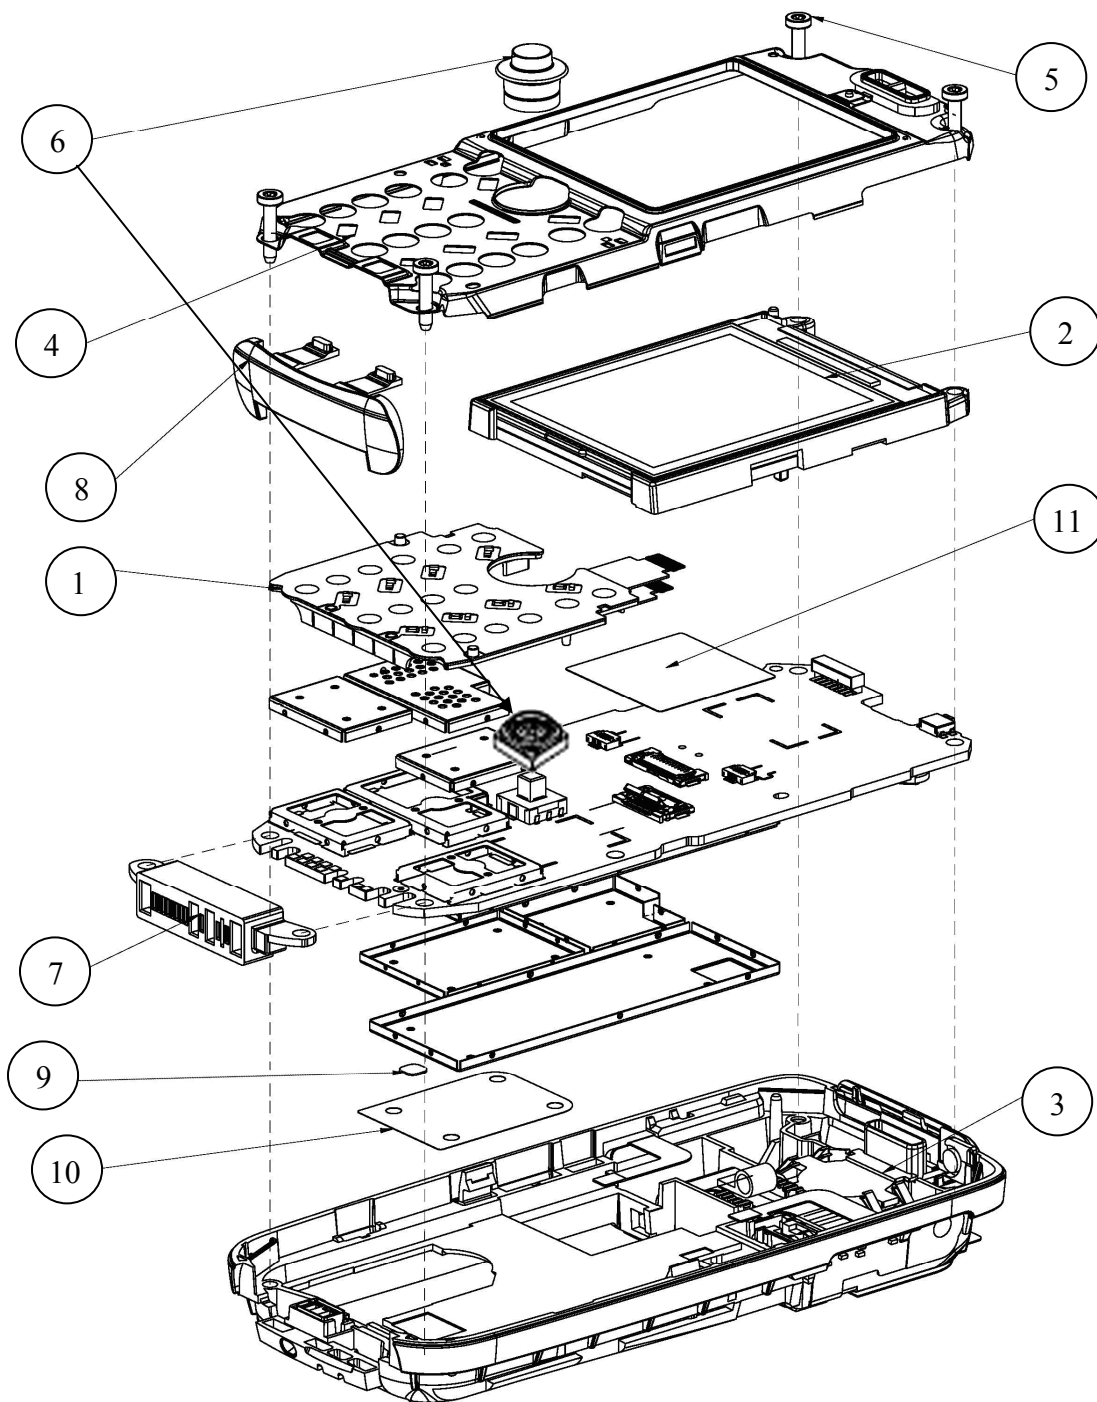

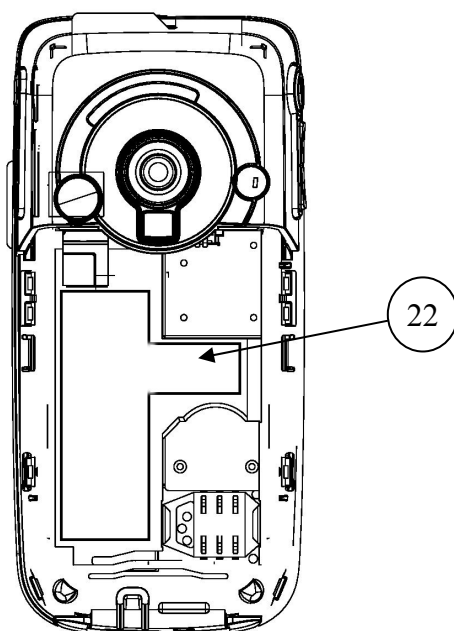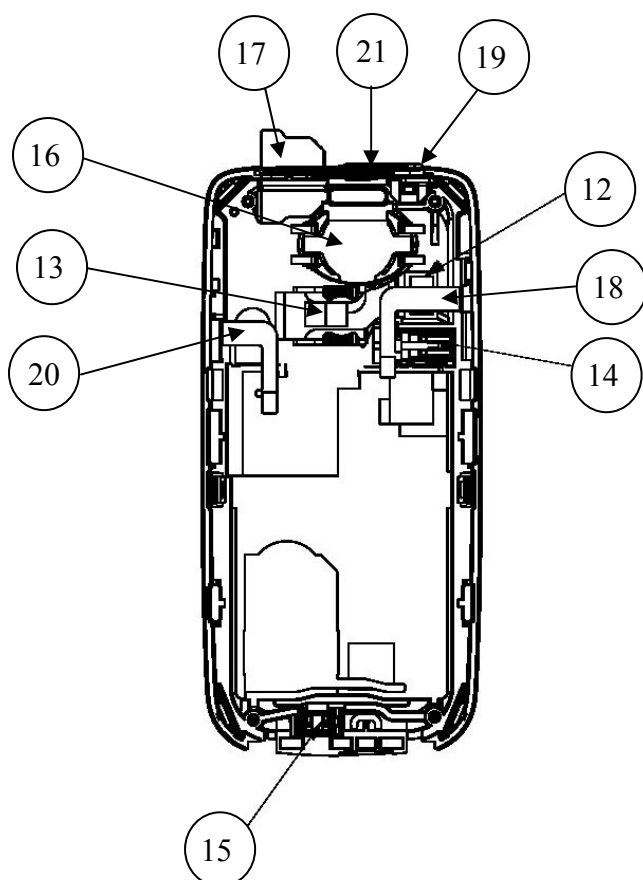



2 Part List K700i/K700c

2.1 Part List Phone

Containing mechanical parts.

Pos. number refers to the Exploded View.

Parts available to order will be found in the Web Shop.

Pos.	Description	Part Number	Comments
1	Keyboard Latin	SXA 109 4552	
1	Keyboard Arabic	SXA 109 4552/2	
1	Keyboard Chinese	SXA 109 4552/3	
1	Keyboard Cyrillic	SXA 109 4552/5	
1	Keyboard Bopomofo	SXA 109 4552/6	
1	Keyboard Thai	SXA 109 4552/7	
2	Front Complete/Optic Silver	SXX 109 5790/Z	
3	Front Label/ Quick Share	SVF 930 1344/2	
3	Front Label/ Vodafone	SVF 930 1344/3	
3	Front Label/ T-Mobile	SVF 930 1344/4	
3	Front Label/ Orange	SVF 930 1344/5	
3	Front Label/ Amena	SVF930 1344/6	
3	Front Label/ Telefonica	SVF930 1344/14	
3	Front Label/TIM	SVF930 1344/15	
3	Front Label/CMCC	SVF930 1344/8	
3	Front Label/O2	SVF 930 1344/10	
3	Front Label/Swisscom	SVF 930 1344/12	
3	Front Label/Virgin	SVF 930 1344/16	
3	Front Label/Mobikom	SVF 930 1344/19	
3	Front Label/Telefonica	SVF 930 1344/20	
4	Antenna Cover Complete	SXX 109 5951	
5	Side Key Label/Online	SVF 930 1345/2	
5	Side Key Label/T-Zone	SVF 930 1345/3	
5	Side Key Label/Orange	SVF 930 1345/5	
6	Plug - External antenna connector	SXA 109 4656	
7	Volume + Camera Keys	SXA 109 4560	
8	Internet Access Key	SXA 109 4636	
9	Battery Cover Assembly	SXX 109 5792	
	Battery Cover Pressure Pad	SXA 109 4992	
10	Frame Assembly		See frame assembly



2.2 Part List Frame Assembly

Pos.	Description	Part Number	Comments
1	Keyboard Foil Assembly	SXK 109 5787	
2	Display Assy	RNH 942 27	<i>New partnumber</i>
3	Frame	SXA 109 4543	
4	Metal carrier	SXA 109 4549	
4	Conductive Gasket	SXA 109 2797	Assembled inside metal carrier
4	Display Driver Pad	SXA 109 4979	Assembled inside metal carrier
5	Screw	SXA 109 4777	
6	Joystick button assembly	SXK1097870	<i>New partnumber</i>
7	System Connector	RNV 799 30	
8	Plug System Connector	SXA 109 4626	
9	Water Indicator Label	SXA 109 4884	
10	Insulation Label Radio Lid	SXA 109 4804	
11	Tape/Zif Connector	SXA 109 4970	
12	Camera (VGA) assembly	SXK1095745	
13	Conductive Gasket Camera	SXA 109 4889	Assembled on Camera flex
14	Vibrator	BKE 902 019/14Z	
15	Microphone Assy	RLC 509 418	
16	Dual Speaker	RLE 908 15/2	
17	Antenna Flex	KRE 101 1359	
18	Camera Light Assy	SXK 109 5841	
19	On Off Button	SXA 109 4638	
20	Flexfilm volume and camera key	SXA 109 4637	
21	IRDA Window	SXA 109 4555	
22	KRH Label	SVF 930 1353	For full roll order 2500 pcs

3 Part List Label

Pos.	Description	Part Number	Comments
	KRH-Label	SVF 930 1353	
	Printer Ribbon	LZK 102 734/1	



4 Revision History

Rev.	Date	Changes / Comments
A	2004-05-27	Initial release
B	2004-08-19	Battery Cover Pressure Pad (SXA 109 4992) added
C	2004-10-20	New partnumber for Display Assy
D	2005-02-02	New partnumber for Camera Assy, 4 new front labels
E	2005-10-17	New parts added SVF 930 1344/10, SVF 930 1344/12, SVF 930 1344/16, SVF 930 1344/19, SVF 930 1344/20
F	2005-12-19	Joystick Gasket Added SXA 109 6501
G	2007-02-13	New Joystick button assembly part number: SXA109 7644R1
H	2007-05-02	New Joystick button assembly part number: SXX1097870