



Part List, SP/Mechanical



Applicable for T610/T618

Contents

1	Exploded View T610/T618	2
1.1	Exploded view Phone	2
1.2	Exploded view Frame	3
2	Part List T610/T618	4
2.1	Part List Phone	4
2.2	Part List Frame	5
3	Label Part List	5
4	Revision History	6



1 Exploded View T610/T618

1.1 Exploded view Phone

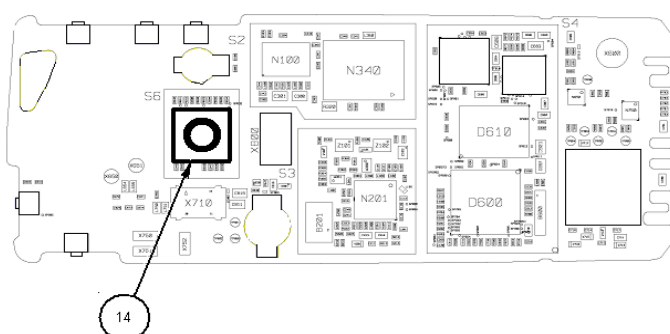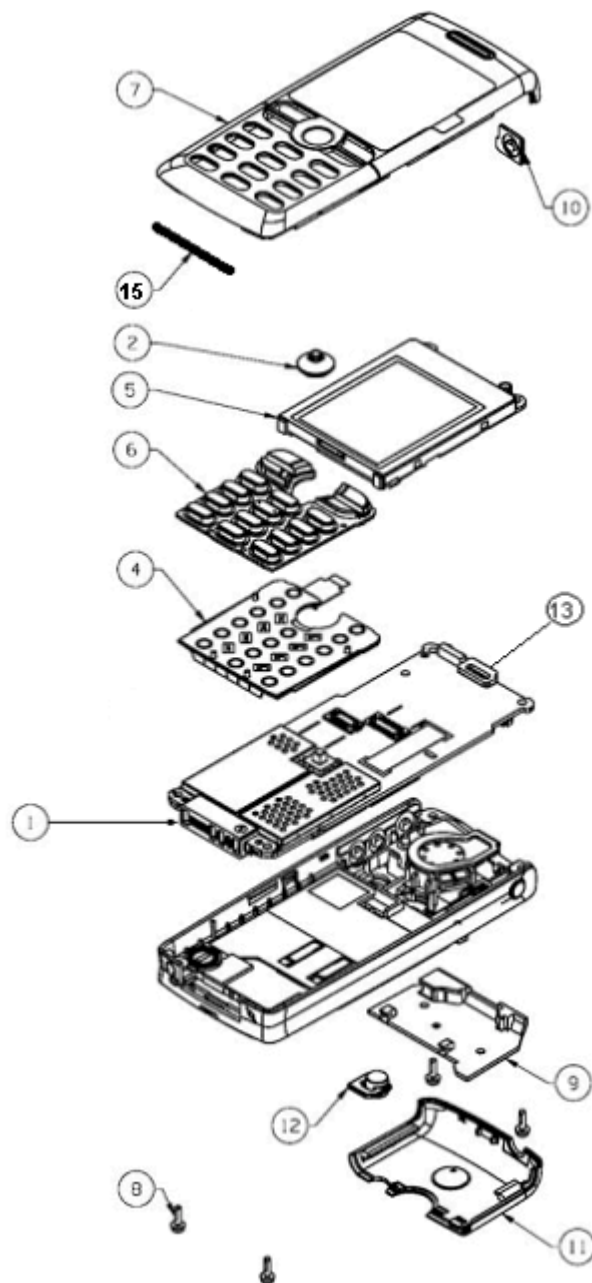



1.2 Exploded view Frame

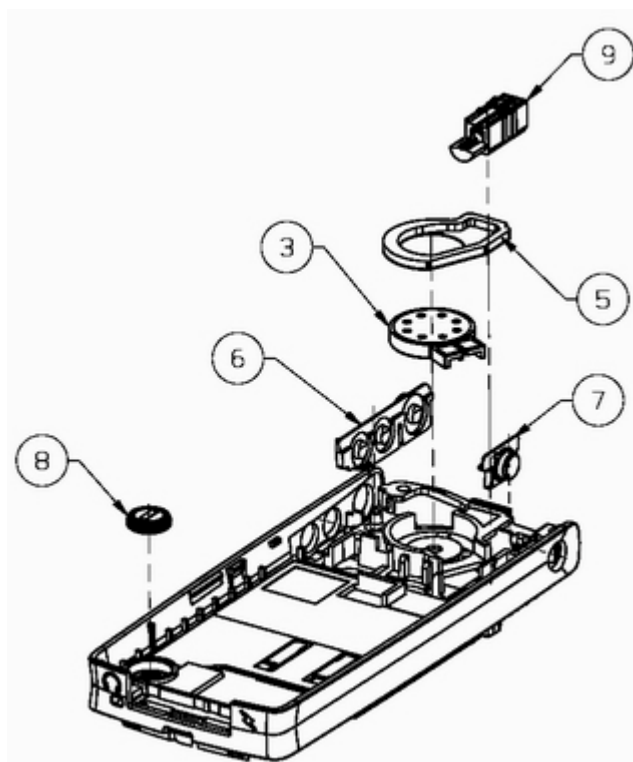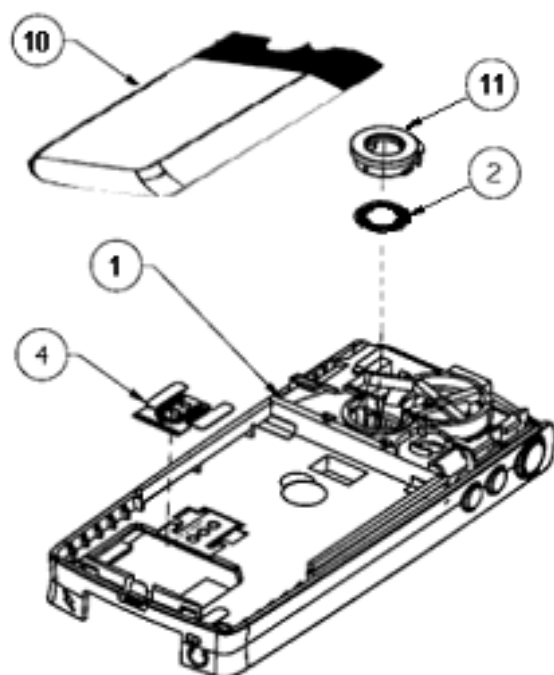



2 Part List T610/T618

2.1 Part List Phone

This Part List includes all parts possible to replace by using the Mechanical Repair Process.
Parts available to order will be found in the Web Shop.
Pos. number refers to the Exploded View.

Pos.	Description	Part Number	Comments
1	System connector	RNV 799 13	
2	Joystick Button	SXA 109 3015	
2	Joystick Button Dust Gasket	SXA 109 4427	
4	Dome foil assy.	SXK 109 4975	
5	Display assy.	SXK 1095637	
6	Keyboard, Latin	SXA 109 2384	
6	Keyboard, Arabic	SXA 109 2384/2	
6	Keyboard, Chinese	SXA 109 2384/3	
6	Keyboard, Hebrew	SXA 109 2384/4	
6	Keyboard, Cyrillic	SXA 109 2384/5	
6	Keyboard, Bopomofo	SXA 109 2384/6	
6	Keyboard, Tailand	SXA 109 2384/7	
7	Front assy. Aluminium Haze	SXK 109 4959	
7	Front assy. Al. Haze, Orange	SXK 109 4959/2	
7	Front assy. Al. Haze, T-Mobile	SXK 109 4959/3	
7	Front assy. Al. Haze, Vodafone	SXK 109 4959/4	
7	Front assy. Al. Haze, AT&T	SXK 109 4959/5	
7	Front assy. Al. Haze, Cingular	SXK 109 4959/6	
7	Front assy. Abyss Blue	SXK 109 4959/20	
7	Front assy. Volcanic Red	SXK 109 4959/40	
8	Screw with washer	SXA 109 3392	
9	Antenna assy.	SXK 109 4967	
10	Power on/off key	SXA 109 2387	
11	Antenna cover assy.	SXK 109 4960	
12	Rubber plug for ext. antenna	SXA 109 2560	
	Mirror plug	SXA 109 3078	
13	Sound channel gasket	SXA 109 3006	
14	Camera module	SXK 1095635	
15	Light Gasket	SXK 109 4446	



2.2 Part List Frame

Pos.	Description	Part Number	Comments
1	Frame	SXA 109 2381	
2	Camera module gasket	SXA 109 3013	
3	Speaker	RLE 907 17	
4	SIM-Lock Lid	SXA 109 3008	
5	Speaker gasket	SXA 109 2385	
6	Volume/Camera keys	SXA 109 2386	
7	Internet access keys	SXA 109 2544	
8	Microphone assy	SXK1094962	
9	Vibrator	SXK1095217	
10	Battery cover assy. Aluminium	SXK 109 5077	
10	Battery cover assy. Al., Vodafone	SXK 109 5077/2	
10	Battery cover assy. Volcanic Red	SXK 109 5077/40	
10	Battery cover assy. Abyss Blue	SXK 109 5077/20	
11	Camera ring	SXA 109 2543	

3 Label Part List

Pos	Description	Part Number	Comments
P2-1	KRH-Label	SVF 930 361/1	
PS-1	Chinese Label/Markingplate	SVF 930 2286	T618
P2-2	Printer Ribbon	LZK 102 734/1	



4 Revision History

Rev.	Date	Changes / Comments
A	2003-04-24	First release
B	2003-06-19	Changed partnuber on Vibrator and Light Gasket, added part number for Chineese KRH-label
C	2003-07-24	Front Assys, Battery Cover Assys and Chinese Label added