

Thank you for choosing X76 color screen GSM/GPRS digital phone.

This is a GSM/GPRS phone. In addition to common call functions, it also provides you with a variety of practical functions including bluetooth, camera, MP3 player, Video player, U Disk, memory card (T-Flash card), recorder, calculator, GPRS, MMS (Multimedia Message Service), handsfree call. With this manual, you can acquire a full understanding of the usage of this phone. Our company reserves the right to revise contents in this manual without any prior notice.

Table of Contents

Attention and Precautions.....	4
1 Safety Precautions	4
2 Precautions When Using Phone	4
3 Precautions When Using Batteries	5
4 Precautions for children.....	5
Description of keypad keys	6
Getting Started	9
1 Battery	9
2 Connecting to Network.....	11
Basic Functions.....	14
1 Making a call.....	14
2 Emergency calls.....	16
3 Answering a call	16
4 Call records	16
5 Call options	16
Usage of function menu	18
1 Scrolling search and select function.....	18
2 Exit menu	18
Instructions of Function menu	18
1 Application.....	18
2 Contact	20

3 Relaxation	21
4 My Files.....	21
5 Messages	21
6 Multimedia	24
7 Wireless Connection	26
8 Camera.....	27
9 Network Services	28
10 Call history	29
11 Settings	29
12 User Profiles.....	33
Input method	34
Guide to Fast Usage	35

Contents

Attention and Precautions

Please read these brief rules. Violation of these rules might cause danger or break laws.

1.Safety Precautions

1.1 Road safety comes first

When driving, care must be taken for using phone; if driving conditions are poor, please pull up at road side to use the phone.

1.2 Swtich off your phone in hospitals

Please abide by relevant regulations or rules. Please switch off when close to medical equipment.

1.3 Switch off your phone in aircrafts

Wireless phones can cause interference. Using phones in aircraft is both dangerous and illegal.

1.4 Swtich off your phone when refuelling

Do not use the phone at a refuelling station or near fuels or chemicals.

1.5 Swtich off your phone when close to blasting area

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “turn off twoway radio”. Obey all signs and instructions.

2.Precautions When Using Phone

2.1 Interference

All phones are subject to interference, which will affect their performance.

2.2 Use sensibly

Use phone only in its normal position. Please do not touch antenna area unless necessary.

2.3 Use qualified servicing

Only qualified maintenance staff can assemble or repair the equipment.

2.4 Waterproof

Your phone is not waterproof, please keep it dry.

2.5 Emergency calls

Make sure the phone is switched on and in service. Input emergency service number and press Dial key, give your location and do not end the call until told to do so.

3.Precautions When Using Batteries



3.1 Keep the batteries away from fire; do not dispose of batteries in a fire lest there should be danger.

3.2 Do not dispose of used batteries in rubbish, and they should be sent to designated recycling center.

4.Precautions for children

Keep the phone out of the reach of children, lest children treat it as toy and cause personal injury.

Description of keypad keys

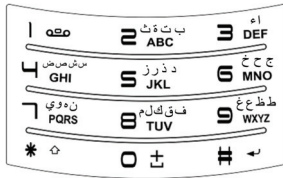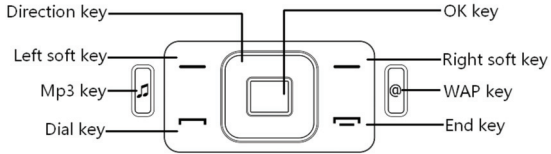

Keys	Description
[Dial key]	Dial a phone number or answer an incoming call. In standby state, press this key to show the SIM 1/SIM 2 call history .
[End key]	End a call. Long press this key to turn on/off your mobile phone. In other cases, pressing this key will make the phone return to standby state.
[OK Key]	Enter the menu that has been selected.
[Left soft key]	Performs the function of the prompt displayed at lower left corner of the screen.
[Right soft key]	Performs the function of the prompt displayed at right corner of the screen. In edit mode, tap this button to delete the character in front of the cursor. Long press of this key will delete all the characters in the editing window. In idle screen, press the RSK to access Contact.

[Navigation key]	<p>The key is split into 4 directional keys: up, down, left and right. Move the cursor up, down, left and right in edit mode.</p> <p>Press the directional key in idle interface to enter the corresponding function interface.</p> <p>Up Key: to access Camera.</p> <p>Down Key: to access Alarm.</p> <p>Left Key: to access Write Message.</p> <p>Right Key: to access User profiles.</p>
[Number Keys]	<p>Number keys are used to input numbers, letters and special characters.</p> <p>They can also be used as shortcut keys to quickly access the options within a menu.</p>
[WAP key]	<p>In idle screen, press this key can access Internet service.</p>
[Mp3 key]	<p>In idle screen, press this key can access audio player.</p>

Getting Started


1 Battery

The battery at its initial condition is charged to 50% full, and can be used after unwrapping. For the first three times of charging, do not recharge until the battery is totally exhausted, so that the battery can reach its best usage performance.

1.1 Removing and installing battery

For removing:

- Push the battery back cover in the arrow direction;
- Lift the battery up as indicated by the arrow;
- Take the battery out.

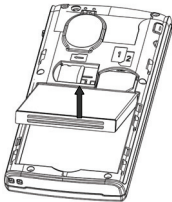


Warning: Make sure to switch off the phone before taking out SIM card, otherwise your SIM card might be damaged.

For installing:

A. Follow the arrow direction, place the metal contact points of the battery upward and flush with metal contact points in the battery bay, then insert the bottom of battery into battery bay;

B. Place the back cover of the battery onto the phone squarely, and push in the direction of the arrow till it clicks into place.

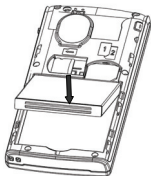

1.2 Charging Battery

While charging, the power supply indicator at phone's screen icon zone will flash in a rotation manner, if the phone is off while charging, a charging screen will still appear, indicating that the phone is recharging. If the phone is still being overused while the power supply is insufficient, the recharging indicator will appear on the screen after the recharging has started for a while.

When the power supply indicator at the screen's icon zone shows full and stops flashing, it means charging has completed. If it takes place when the phone is off, the screen will display charging-finished

icon. The process generally takes about 2.5 hours. It is normal that the battery, the phone and the charger will become hot during the charging process.

Charging completing, disconnect the phone and the charger from the AC power supply.

Note: Battery must be charged in a well ventilated place with surrounding temperature at $-10^{\circ}\text{C} \sim +55^{\circ}\text{C}$, and it is imperative that a charger provided by manufacturer is used. Using unauthorized charger might cause danger, which also violates warranty terms prescribed by the manufacturer. If the charging temperature is too high or too low, the phone will automatically give warning and stop charging, so as to prevent damages to battery or dangers.

2 Connecting to Network


2.1 SIM card

A valid SIM (Subscriber Identity Module) card must be inserted in the phone before using it.

All information related to making connection to the network are recorded in the chips of SIM card, including the names, phone numbers and short messages you have stored in the SIM card Phone book. In order to prevent loss or damage of the info in the SIM card, it is necessary to avoid touching metal contact surface, and keep SIM card far from electricity current and magnet.


2.2 Inserting and removing SIM card

- Switch off the phone; remove battery and other external power connection, as shown in the image.
- Insert SIM card into SIM card socket.
- When you need to remove SIM card, please switch off the phone first, remove battery, then remove the card.

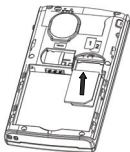

2.3 Inserting and removing memory card

- Switch off the phone; remove battery and other external power connection.
- Insert memory card into card slot as shown in the image.

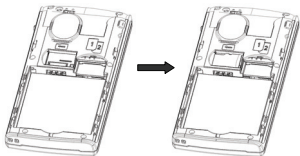

2.4 Switch on/off phone

To switch on or switch off phone, please press and hold the **End key**. If you have switched on phone without inserting SIM card in the first place, the phone will prompt “Insert SIM card”.

Then the screen will display the following prompts in sequential order:

Enter phone password – if you have set up phone lock password.

Enter PIN – if you have set up SIM card password.

Search – the phone will search till finding appropriate network connection.

2.5 Unlocking SIM card

To prevent illegal usage, PIN (Personal Identification Number) code is adopted to encrypt for protection of your SIM card. Selecting this option and if having set up PIN code protection, you have to enter PIN code each time you start it, unlocking SIM card to use the mobile phone.

Users can erase SIM card password; however, in this case SIM card cannot prevent illegal usage.

■ Press and hold the **End key** to switch on the phone;

■ Enter PIN1 code. For instance, if PIN1 setting is 1234, then enter the following input: 1 2 3 4 “OK”

If there are three consecutive input errors, your SIM card will be locked up by the network, the phone will inquire PUK1 code.

Note: Your service provider will set up a standard PIN (4 to 8 digits) number for your SIM card, you should change it into your private password as soon as possible.

2.6 Unlocking phone

To prevent phone from being illegally used, you can set up mobile phone lock Password for protection. Selecting this option, you must input mobile phone lock password to unlocking it and make it normal. Users can switch off mobile phone lock, but illegal usage cannot be prevented for mobile phone in this case.

■ Pressing the End key continuously to start up mobile phone.

■ Input mobile phone lock Password.

For instance, if mobile phone Password is set up as 0000, then input the following: 0 0 0 0 “OK”.

If you forget mobile phone Password, you have to contact local authorized repair center, so as to unlock your mobile phone’s Password.

2.7 Connecting to network

After SIM card is successfully unlocked, the phone will automatically search available network (with searching showing on the screen). Once the connection is made, the name of the service provider will be displayed on the top central part of the text and graphic area. At this time your phone has been connected to the service network.

Note: If the screen prompts “Emergency “, this means you have moved out of the normal network coverage (service range) or your card has not passed authentication, but you can still transmit emergency calls based on signal strength.

Basic Functions

1 Making a call

When the logo of service provider appears on the display screen, you can dial or receive calls. The info bar at the upper left corner of the display screen shows network signal strength (when there are 5 info bars the signal is at its strongest).

The call quality is very likely to be affected by obstructions; therefore movement in a small area can effectively improve call performance.

1.1 Making domestic calls

Enter phone number, then press Dial Key to make the call. If the user needs to change phone number,

press “Clear” back and delete numbers. Dialing animation will be displayed on the screen during dialing. Call state info will be shown on the screen after the called party ends the call
You can enter and dial domestic call following the order:

Area code Phone number Dial

1.2 Dialing extension number of fixed-line telephone

Some extension numbers of fixed-line telephone cannot be connected directly, you must dial the switchboard phone number, then press * key to switch continually until the screen displays “P”, then dial extension number.

You can dial extension numbers of fixed-line telephone in the following order:

Area code Switchboard number P Extension number Dial Key

1.3 Dialing international calls

To make an international call, you may press * key to switch continually till the screen displays the pre-digit symbol “+” for international long distance call, which will enable you to make a call from any country without knowing the local international access code (for instance, in China it is 86).

You can enter numbers in the following sequence to make an international call: + country code complete phone number Dial Key

After inputting prefix number, input the code and the complete phone number of the wanted country. The country code follows usual practice, such as Germany 49, UK 44, Sweden 46, etc.

Like making an international call, the “0” before city code number should be dropped.

For instance, if making a call to a service hotline from other countries to Shanghai, you should dial: +86 21 114

1.4 Dialing phone numbers in the call records

Every phone number you have dialed or received will be stored in the list of phone call records. The latest

dialed, received and missed numbers will be listed, according to their types, in the respective menu of dialed calls, received calls and missed calls. When call record list is full, the old numbers will automatically be deleted. To view the list, do the followings:

- In standby state press Dial key to view the record for all calls.
- All phone numbers in the list can be dialed directly by pressing the Dial key.
- When the list is displayed, press “OK” to read the details, then “options” to Save or Delete the number.

2 Emergency calls

As long as in the network service range (which can be confirmed by checking the signal strength bars on the top left corner of the screen), you can always call emergency service. If your network supplier does not provide roaming service in your area, the screen will display “Emergency”, to inform you that only emergency call is permitted. If you are within the network service range, you can also make emergency calls even without the SIM card.

3 Answering a call

Simply press dialing key can answer an incoming call. If an earphone has been connected, use the button on the earphone to answer a call, and if it is not convenient for you to press it, set automatic answer as on, assuring that the earphone is plugged on, so as to make calls automatically answered while the phone rings or vibrates. If Any Key answer function is chosen, pressing any key, other than End key, can answer an incoming call.

4 Call records

Your phone can also store call records of the latest missed calls, received calls, dialed calls, the time of last call as well as total amount of received calls and total dialed calls for you.

5 Call options

In connected state, pressing “Options” can enter call option, or pressing “H-free” to activate speaker, Under activated-handsfree condition, press “ Normal” to switch off speaker. Operation methods of call options are the same with that of Function menu.

This call options can only be viewed during call process, moreover, the functions of call waiting, call holding, and conference calls need service support, please contact your service provider for details.

In the call options, you can make the following operations:

- Hold Single call:Make the current call hold.
- End Single call:End the current call.
- New call:Enter new dialing interface.
- Phone book:Enter Phone book menu.
- Messages:Enter message menu. Owing to restriction of network engagement, MMS function is barred during call process.
- Sound Recorder:Record the current call.
- Voice changer :Setup voice changer for the current calling.
- Mute:Setting of switches, which disables transmission of local call when Mute function is on.
- DTMF:Operations of DTMF switching on and off
- Conference*

Enter multiple party conference call state. By following the prompts, you can have the following functions: receive waiting calls, add them into multiple party call, maintain the multiple party call, talk privately with one party of the conference while maintaining all other callers, connect one party in the call conference with another party while exiting the multiple party call oneself, maintain one party of the multiple party call and end current call and all other maintained calls.

Note: The menu marked * items will only appear in special circumstances. For conference function, it is

necessary to apply for service supply to corresponding service operator.

Usage of function menu

1 Scrolling search and select function

In standby state, press left soft key “menu” to enter function menu, or during the call, press “Options” to enter call option menu.

At all main menu or sub-menu interface, it is possible to press up, down, right and left keys of keypad (under menu of page scrolling, press up or down keys to realize scrolling up or down) to scroll to the function you need, then press left soft key, or OK key, to enter that function option.

2 Exit menu

In function menu, generally you can exit a menu by right soft key, or press End key to return to standby state.

Instructions of Function menu

1.Application

1.1 T-Card Backup

Phone book backup

Can Backup or restore the numbers in Phonebook.

SMS backup

Can export the SMS in Inbox, Outbox, Drafts and Archive.

1.2 Calendar

After entering calendar sub-menu, the screen will display the current month's calendar, with the current date marked with special color background box. The user may directly use direction keys to click and select digits in the calendar, calendar information on the screen will also be updated.

1.3 Tasks

It displays all schedules for today and the future days, under the option menu, it is possible to View, Add, Edit , Delete, Delete overdue, Delete All, Jump to date, Send vCalendar, Save as file..

1.4 Alarm

The mobile phone can set up at most five alarms, and supports shutdown alarm. In the alarm list of the alarm menu display, select an alarm to edit and set up switching on or off, set time and select ringing alert type. Wherein repeat can be selected as: once, everyday, custom (for default alarm from Monday to Friday, the user may also set up certain days in a week based one's own needs).

1.5 World Clock

Use the direction keys to browse the current time.

1.6 Calculator

The mobile phone provides you with a calculator with simple functions, you can use the direction keys to make addition, subtraction, multiplication and division, and carry out corresponding memory operations when selecting M+, M-, MR, MC.

Note: This calculator is limited in accuracy, rounding off errors might occur.

1.7 Ebook reader

The phone supports reading files in the *.txt format, which is ideal for reading an e-Book. Store the *.txt files in the Ebook folder, and then you can read them in E-Book reader.

2.Contact

You can store info such as names, phone numbers, and mobile phone numbers.

Phone numbers can be stored in your mobile phone or SIM card. The amount of phone numbers that SIM card can store vary with its capacity.

Add New contact

Add a new number record to SIM card or mobile phone in Phone book.

Mark several

You can mark several contacts one time, then send SMS and delete operations. You can also mark all or unmark all.

Batch Operations

You can do the operation such as copy contacts, move contacts ,delete all contacts.

Phonebook Settings

The options such as memory status, or preferred storage are available .

Preferred Storage destination: can choose SIM card/Cell Phone as a preferred storage.

My card:edit my number,or send my number.

Name Card version: Can choose to use version 2.1 or 3.0 version of the card version.

Note: When phone number records are stored in SIM card, only record the info of name and phone number.

Other numbers: Can set owner number.

Check Memory Status: can inquiry a local or the SIM card for the phone book of records as well as storage space has been occupied.

3.Relaxation

3.1 Games

The phone provide games for entertainment.

3.2 MSN

3.3 Paradise

3.4 Yahoo!

4.My Files

You can use File Manager to organize your files in folders in the Memory Card or Cell Phone.

If a memory card is inserted,the files stored on it are organized separately.

Select Memory card and select Options to Open, New folder, Rename,Delete ,sort by.

5.Messages

After entering this menu, the following function options can be viewed: SMS ,MMS, Broadcast message.

5.1 SMS

5.1.1 Write Message

Create a new short message.

1.Enter text

2.Press the left function key (Options) and select the required items,including Send to, Insert template , Insert vcard, Insert Call log, Insert bookmark, Save to Drafts and Input method.

3.Press the left function key (Options) and select Send from SIM1, Send from SIM2,Edit recipient, Remove recipient, Remove all recipient.

Note: Short message center in some cities and areas do not support long short messages with over 140 English letters.

5.1.2 Inbox

View received Short message in Inbox sub-menu.

5.1.3 Sent

Enter sent list to view short messages you saved in Outbox (including SIM1 card and SIM 2 card).

5.1.4 Drafts

Drafts stores SMS unprepared for sending for future revision and sending.

5.1.5 Archive

Can save the received SMS to Archive.

5.1.6 Scheduled SMS

With this function you can write an SMS and schedule for later delivery at a specified time.

5.1.7 SMS Settings

Before using Short message function, you need to make corresponding setup. Enter message settings, and select the following settings:

■ **Profile Settings:** Please contact your local service provider, so as to receive short message service center number. Entering this sub-menu will display the current info mode setup list, the number of lists will vary subject to service provider and SIM card types. After selecting mode selection, press "Edit" to set up file name, short message center number, expiration time of an undelivered message as well as sending format in sequential order.

Note: Realization of message, valid period, fax, paging, e-mail need service provider support.

■ **Voicemail server:** Set voicemail serve.

■ **Common Settings:** will activate/deactivate delivery report and reply path.

- Check memory status: Short message memory status conditions in SIM card and the phone will be displayed.
- Preferred Storage destination: It is possible to select to use default saving for incoming short messages on cell phone or SIM.

5. 2 MMS

MMS stands for Multimedia Message Service, whose largest feature is its support for multimedia function, capable of transmitting multimedia format info such as texts, images, voice.

MMS service needs service provider support, before use please confirm your SIM card supports this service or consult relevant service provider.

Your phone supports MMS function, you only need to make some necessary MMS setup before you can receive and send multimedia info.

5.2.1 Write Message

Create a new Multimedia Message.

- 1.Enter recipients in to by pressing the left function key (Edit) .Confirm with Done.
- 2.Enter a subject in Subject by selecting Edit.Press the left function key (Options) and select Done.
- 3.Enter text in Edit content by selecting Edit.
- 4.Press the left function key (Options) and select the items you want to send ,including images (add picture),audio (add audio),add video files in other formats(Add attachment) and slide (add slide before/ after),add bookmark text,preview and so on.
- 5.Confirm the contents by selecting Options and Done.
- 6.Press the right function key(Done) for send, Save and send, Save, send options or Exit..

5.2.2 Inbox

Inbox will store up all received MMS.

5.2.3 Outbox

Outbox stores MMS selected for storage during message sending.

5.2.4 Drafts

Drafts stores MMS unprepared for sending for future revision and sending.

5.2.5 MMS Settings

If the user needs to use MMS service, necessary setup must be done first. Enter to make the following setup.

■ Proxy setting: Add new or edit current account.

■ Common settings :You can do Edit setting, Send,Retrieve,Filter,and Memory status.

Note: 1. Cases of delivery report and anonymous transmission are related to the service provided by your service provider, for more info please contact your service provider.

2. Your phone has specially reserved a certain available spaces for storing MMS. Saving a large amount of MMS might totally occupy this available storage capacity, therefore your phone might prompt your storage capacity is full. At this time you must first delete redundant info in all MMS mail directories, so as to ensure there is sufficient space for keep saving new MMS .

5.3 Broadcast Message

Broadcast message refers to the public message sent by service provider. Using broadcasting of short message service, you can receive info on various topics from the service provider, such as weather, taxis, hospital, etc. For detailed info of relevant topics available, please contact your local service provider.

6.Multimedia

6.1 Audio player

Audio player allows you to play audio files.

The phone supports T-Flash memory card. You need to save downloaded music files to directory My Music, so that they can be played normally.

6.2 Image Viewer

Entry the sub-menu of Image Viewer, you can conveniently view images that saved in photos shot by camera, and can View,Browse Style, Send, Use as, Rename, Delete, Sort by,Delete All Files , Storage.

6.3 Video Recorder

In Preview, press left or right keys to adjust camera exposure compensation parameter; press up or down keys to adjust Camera focus.Press OK key to film a video.In the course of filming,press right soft key to stop filming.After filming,it will inquire wheahter need to save .If choose YES,then will save to the appropriate folder, choose "No", then give up the filming of video.

Press left soft key to make the following operations:

- To player:to video player list.
- Camcorder Settings: Including adjusting EV,Night mode ,Anti-flicker.
- Video Settings: Include adjusting Video Quality.
- White balance:choose white balance style.
- Effect Settings: Set up special effects for video.
- Storage: Set up saving path for the movie, phone or memory card.
- Restore Default: Press "OK", the parameters of video recorder will be restored to default setting.

6.4 Video Player

Select Video player sub-menu, and enter movie list, use up or down keys to select files to be played, press OK key to preview; press "Options" to perform operations such as Play, send, Rename, Delete, Delete all files, Sort by, Storage.

At the playing interface, press OK key to play current media files.(It support MP4 video and 3gp video).

6.5 FM Radio

To use of radios, it is necessary to connect compatible cell phone headset first. Headphone cable as the antenna used at the same time. In order to guarantee the effect, do not pull out the headphones or the headphone cable bending.

FM radio interface, press left soft key (options) and can enter the following features:

- Channel list: Storage channel, the channel can be carried out manually edit. Or from 'Preset Auto Search' automatic generation function.
- Manual input: can automatically jump to manually input channel.
- Auto Search: Automatically search available channels to store to the channel list.
- Settings: Set up background play, cell phone speakers, and so on
- Record: Can record the checked channel.
- Append: Add to the former recorder files .
- File list: Enter to MY Documents to look over the files.

6.6 Sound Recorder

Your phone supports sound recorder.Select a format from settings in Options.A call may also be recorded and saved to the phone or the memory card.

7.Wireless Connection

7.1 Bluetooth

Activate Bluetooth:on/off Bluetooth function.when the Bluetooth is on, main LCD interface status bar will display the Bluetooth icon.

Inquiry audio device: open ,the search Bluetooth hands-free devices.

Search for Bluetooth device: Inquiry devices and choose for match.

Connecting Device: show devices connection with my device.

Settings: Include the following

- This device is visible: whether the device can be searched
- Name for this device :change device name
- Set audio path: set up voice to transfer path for Bluetooth headset or remain in the machine.
- Storage: set up the storage, such as phone, memory card, or always ask.

My Bluetooth: Service records.

7.2 Data Account

GPRS

This sub-menu will give a list of GPRS access account data of the current WAP setting file, by selecting one certain setup file, you can edit the following contents of the GPRS access account data in the setting file:

- Proxy Name: This enables editing and setup the name of account data file.
- Access point of GPRS: Enter APN,
- User Name: User identity of APN server
- Password: Password necessary for APN server to recognize your identity
- Auth. Type: Selecting Normal or Secure by pressing right and left keys, you can finish setting, thus setting up the authentication method adopted in the WAP identity authentication.
- Primary DNS: setup primary DNS.
- Secondary DNS: setup secondary DNS.

8.Camera

In standby interface, press right and left keys to adjust camera exposure compensation parameter; press

up and down keys to adjust camera focus; press the number key of 1 to set up photo size ; press the number key of 2 to select photo quality; press the number key of 4 to set up white balance; press the number key of 6 to set up delayed time of taking photo; press the number key of 7 to setup cont. shot; press OK key to take photos.

9. Network Services

9.1 STK

In addition to the functions available in the phone, your SIM card may provide additional services that you can access in this menu.

This menu is shown only if it is supported by your SIM card. The name and contents of this menu depend on the services available.

9.2 Internet service

Your mobile phone supports service based on Wireless Application Protocol (WAP). You can access a variety of WAP services.

WAP service needs network supported, regarding the availability, price and taxation of WAP service, please consult your network operator and / or the service provider that provide you with the service you need. Service provider will also provide explanations on how to use its services.

Under internet network service menu, you can use value-added service that the network operator provides you. This menu mainly includes the following menu option: Homepage, Bookmarks , input Address, recent pages, Setting, Service Inbox.

■ **Homepage:** Homepage is the WAP site you have set up in [Setting]. If you haven't set it up, the default is null.

■ **Bookmarks:** Select "bookmarks", display each existing bookmark of bookmark list. Select one needed bookmark, you can perform operations on the bookmark such as Go to, Edit, Send, Delete, Delete all,

Add bookmark.

Note: Before use, please confirm your mobile phone's bookmark list is not empty..

■ **Recent Pages:** Under this sub-menu, the web records you recently visited are listed, so as to facilitate you to directly select 'Go to' to visit that webpage when history record has been selected.

■ **Input address:** Under this sub-menu, enter the URL address to be visited for WAP service, then press "OK" to complete, which will enable you to be connected to the WAP site you wish to access. So as to provide you with a flexible channel to visit the network in addition to bookmark information and webpage history record.

■ **Service Inbox:** "Service Inbox ", through which received service information can be viewed. Your mobile phone can receive service information (also called PUSH info) sent by your service provider. For instance: service information can be a notice on relevant news summary, which can contain a piece of text information or a kind of WAP service address. For service information, there are three processing methods: Read, Delete ,Delete All, Add bookmark/Add to trust list.

■ **Settings:** Under browser setup sub-menu, it includes setup menus of Select SIM, profiles, Browser options, Service Message Settings, Clear Cache, Clear Cookies, for you to set up relevant contents of WAP service.

10.Call history

You can view info related to call records, including: Missed Calls, Dialed calls, Received calls. If you only have been inserted a SIM card, you can only see one of the SIM card phone records.

11.Settings

11.1 Display settings

You can set Themes, 3D effects main menu,Wallpaper,Screen saver,Power on display,Power off display, Show date and time,Show owner number, Screen switch effect,show operator name.

11.2 Call Settings

For a general setting, such as, SIM1/SIM2 call settings (including call waiting, call divert, call barring), Connect notice, Low battery protect, Voice changer, Reply by SMS,, Advance settings.

11.3 Phone Settings

Dual SIM settings

- Dual SIM open: SIM1 and SIM2 are all power on.
- Only SIM1 open: SIM1 is power on, but SIM2 is power off.
- Only SIM2 open: SIM1 is power off, but SIM2 is power on.

Time and Date: Including set home city, time/date and format.

Schedule Power On/Off : There are four different times to set for the phone to auto power on/off according to the setting type.

Note: If the setting times are the same, it will cause failure, please set different times.

Language: You can set a desired language to be displayed on your phone.

Pref. Input Methods: There are a number of input methods for you to select.

Dedicated key: You can select specific functions for the up/down/left/right navigation keys to quick access in the idle screen.

Auto update of date and time: you can setup on/off.

LCD backlight: LCD backlighting time, LCD backlighting brightness setting.

11.4 Network Settings

Network Selection

The Network Selection feature enables you to: select a network automatic or manually.

Preferences

Support selection preferred networks.

11.5 Security Settings

11.5.1 SIM1(SIM2) Security Setting

SIM Lock

When the PIN Check feature is enabled, you must enter your PIN each time you switch the phone on. Any person who does not have your PIN cannot, therefore, use your phone without your approval. Referring to the current status provided by status bar floating close to the item, you can make the following setup:

If SIM card lock is off, you can select "on", then enter the pin code to set the sim lock on, then you must enter the PIN each time the phone is switched on;; if PIN check is "on" now, selecting "off" to turn off the pin check.

Note: If PIN code is wrongly inputted for three times, SIM card will be locked, then you'll be asked to enter PUK code to unlock SIM card.

PIN code and PUK code may be supplied to you together with SIM card, else, please contact your network operator. Please replace it with your own password as soon as possible.

Fixed Dial

The FDN(Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers. The following options are available.

Mode: enter your PIN2 code, to switch fixed dialing mode on/off.

Fixed Dial List: you can add, edit, delete your fixed dialing numbers here

Note: For switch on/off this mode, you need to enter PIN2 code, please contact your network operator to acquire PIN2 code. After switching on fixed dialing mode, there will be mark by the side of the phone number in the phonebook to tell you the number is also the one in the fixed dial list

Barred Dial

If your SIM card supports this function, you can bar dialing selected phone numbers. When this option is on, the numbers can't be dialed in the current barred dialing list.

Note: you need to enter PIN2 code to switch on this function, please contact your network operator to acquire PIN2 code. After switching on Barred Dial option, the barred number will not be displayed in the phone book.

Change Password

The change password feature allows you to change your current PIN2 PIN1 password to a new one. You must enter the current password before you can specify a new one.

Note: To successfully change password, the above entered password must be digits between 4 digits (including 4 digits) and 8 digits (including 8 digits) then press "OK", or enter any digits no more than 8 digits (including 8 digits) then add # at the end.

11.5.2 Phone Lock

Mobile phone lock can prevent your mobile phone being illegally used.

to change your current phone password to a new one. You must enter the current password before you can specify a new one.

Note: The password is factory set to 0000, please replace it with your own password as soon as possible.

11.5.3 Auto Keypad Lock

In standby mode, unlock your phone according to the interface prompt.

By the way, if keypad lock time has been set up in the "Keypad lock" option, then, when a corresponding period of time passes and the phone receives none operation instructions, keypad will be automatically lock up.

11.5.4 Change Password

You can change phone password and private protect pwd.The default phone password is 0000.

11.5.5 Private Protection

In this menu, you can set password-protected on the need of menu.

For the menu open the private protection, need to input a phone password when you entered.

Enter the other module which has opened the function, do not input the password again until return to idle to give up operation of authority.

11.6 Restore Factory Settings

In this menu, enter mobile phone lock Password, then confirm to restore relevant parameters of the mobile phone to its factory settings values.

12.User Profiles

Your mobile phone provides a variety of Profiles, so as to facilitate you to configure individualized settings of the ring tone such as volume, ring tone mode, ring tone type, prompt sound and receiving method for different events and surroundings. Selectable Profiles include General, Meeting, Outdoor, Indoor , Silent,Headset, Bluetooth mode.

Pressing "Activate" can start using the selected Profiles.

Note: six modes have been set up at factory configuration, with the General mode activated as default mode.

Input method

The indicator of the current text input mode is displayed on the upper left corner of the screen. You can press # key to change the text input mode. This mobile phone supports English, French, Arabic, Digit ... etc input methods.

Guide to Fast Usage

Special functions

Beside basic functions of a mobile phone, your mobile phone also supports plenty of, practical, and convenient special multimedia functions, which are briefly introduced as follows:

- **Two SIM Cards:** This mobile phone supports two SIM cards. You can enter to “Settings” to change the two cards.
- **SMS:** It can insert preset short messages on templates while writing a short message; you can view message storage capacity of SIM card and mobile phone; you can extract phone number from short message
- **MMS:** receive and send message in various format including text, image, and voice; you can send photos taken with camera to your friends and colleagues through MMS.
- **MP3 playing:** Your mobile phone can play music files as well as the music format of *.wav, *.amr, *.mp3, etc. If you downloaded lyrics file carrying the same name as the song, and stored in the same folder, when music plays you can also view lyrics synchronized with the music on the screen.
- **U flash disk:** This mobile phone has mobile memory (i.e. U card) function. When the mobile phone is power off, connect to PC with the USB cable, the mobile phone becomes a U flash disk that supports the mobile saving of data; under power on status, connect USB data cable with the PC, you can select as a storage device
- **Application:** Your mobile phone supports alarms, calculator, and tasks functions;
- **Setting:** You can set up mobile phone to make individualized settings as required, including items of mobile phone setup, call setup, network setup as well as security setup, under each item there are various flexible functions for you to custom-tailor based on different preferences, such as time and date, scheduled startup and shutdown, rapid dialing, call restriction, mobile phone lock, etc.

■ **Network Service:** Your mobile phone supports WAP service. You can use WAP browser to access and indulge yourself in wireless network to obtain a variety of information.

نشكركم على اختياركم للهاتف الرقمي X76 بالشاشة الملونة.

هذا الهاتف مزود بوظائف GPRS/GSM ، ويقدم الوظائف المفيدة من البلوتوث، الكاميرا، مشغل الموسيقى، مشغل الفيديو، قرص U ، بطاقة الذاكرة (بطاقة T-Flash)، المسجل، الحاسبة، وظيفة GPRS، وظيفة MMS (خدمة الرسالة عن طريق الوسائط المتعددة)، المكالمة الخالية اليد، بالإضافة إلى وظائف المكالمة العامة. يمكنك مع هذا الكتيب أن تفهم بشكل كامل كيفية استخدام هذا الهاتف. ويحق لشركتها أن نجدد مضامين الكتيب دون اخباركم مقدماً.

الفهرس

4 الانتباه والملاحظة
4 1. الملاحظة الآمنة
4 2. الملاحظة خلال استخدام الهاتف
5 3. الملاحظة خلال استخدام البطارية
5 4. الملاحظة للأطفال
6 الوصف للمفاتيح على لوحة المفاتيح
9 بدأ الاستخدام
9 1. البطارية
11 2. الاتصال بالشبكة
14 الوظائف الأساسية
14 1. طلب المكالمات
16 2. مكالمات الطوارئ
16 3. الرد على الاتصال
16 4. تاريخ المكالمات
17 5. خيارات الاتصال
18 استخدام قائمة الوظائف
18 1. البحث بصورة التدرج على القائمة واختيار الوظائف
18 2. الخروج من القائمة
18 التعليمات لقائمة الوظيفة

18	1. التطبيقات
20	2. الشخص المتصل به
21	3. الترفيه
21	4. الملفات
21	5. الرسائل
25	6. الوسائط المتعددة
27	7. الاتصالات اللاسلكية
29	8. الكاميرا
29	9. خدمات الشبكة
31	10. تاريخ المكالمة
31	11. الإعدادات
35	12. الملامح للمستخدم
36	أسلوب الإدخال
36	الدليل علي الاستخدام السريع

المحتويات

الانتباه والملاحظة

اقرأ هذه القواعد البسيطة من فضلك. قد يؤدي أي عدم الالتزام بالقوانين إلى الأضرار أو مخالفة القوانين.

1. الملاحظة الآمنة

1.1 الأمن على الطريق في المكان الأول

من اللازم أن تهتم باستخدام الهاتف خلال قيادة السيارة؛ أوقف السيارة بجانب الطريق من فضلك تحت ظروف الطريق السيئة.

1.2 اغلق هاتفك في المستشفى

التزم باللوائح أو القواعد المتعلقة من فضلك. اغلق هاتفك من فضلك وأنت بالقرب من الأجهزة الطبية.

1.3 اغلق هاتفك على متن الطائرة

من المحتمل أن تتسبب الهواتف اللاسلكية بالتشويش. من الخطر وغير القانوني استخدام الهاتف على متن الطائرة.

1.4 اغلق هاتفك خلال ملأ الوقود للسيارة

لا تستخدم الهاتف اللاسلكي وأنت في محطة البنزين أو بالقرب منها أو من المواد الكيماوية.

1.5 اغلق هاتفك بالقرب من منطقة الانفجار

اغلق هاتفك من أجل تجنب تشويش عملية الاسعاف وأنت في منطقة الانفجار أو في المناطق التي يوجد بها تحذير مكتوب عليه " اغلق الراديو اذو الاشارة الثنائية الاتجاه " . التزم بجميع العلامات والتعليمات.

2. الملاحظة خلال استخدام الهاتف

2.1 التشويش

كافة الهواتف خاضعة للتشوش الذي قد يؤثر على عملها.

2.2 الاستخدام بصورة معقولة

استخدم الهاتف بالصورة الاعتيادية. لا تلمس منطقة الأريال إلا في الأحوال الضرورية.

2.3 قبول الخدمات المؤهلة

لا يستطيع غير موظف الصيانة المؤهل أن يفك او يجمع اجزاء الهاتف أو يصلحه.

2.4 المقاومة للماء

ليس هاتفك مقاوماً للماء. حافظ به بصورة جافة.

2.5 مكالمة الطوارئ

تأكد من أن هاتفك مفتوح وتحت الخدمة. وادخل رقم خدمة الطوارئ قبل الضغط على مفتاح "الاتصال". واعطى مكانك ولا تنتهي المكالمة حتى يطلب منك انهاؤها .

3. الملاحظة خلال استخدام البطارية

3.1 ابعد البطارية عن النار. لا تقم برمي البطارية في النار خشية حدوث مخاطر وخيمة.


3.2 لا تقم بالتخلص من البطارية المستعملة عن طريق رميها في القمامات وعليك أن ترسلها إلى مركز إعادة الاستخدام.

4. الملاحظة للأطفال

لا تضع الهاتف في متناول الأطفال خشية أن الأطفال يعتبرونه كالعلة مما يتسبب في المخاطر.

الوصف للمفاتيح على لوحة المفاتيح

مفتاح الاتجاهات
المفتاح الوظيفي اليمين
مفتاح مشغل الموسيقى
مفتاح المكالمة

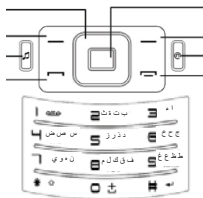

مفتاح OK
المفتاح الوظيفي اليسار
مفتاح WAP
مفتاح الانهاء

المفاتيح	الوصف
مفتاح المكالمة	تقوم بالمكالمة أو تزد على الاتصال عبره. في وضع الاستعداد، اضغط على هذا المفتاح من أجل تاريخ المكالمة لSIM1/SIM2
مفتاح الانهاء	لانهاء المكالمة. اضغط على هذا المفتاح لمدة طويلة نسبياً لفتح الهاتف أو إغلاقه. في الأحوال الأخرى بإمكانك إعادة الهاتف إلى وضع الاستعداد عن طريق الضغط على هذا المفتاح.
مفتاح OK	للدخول القائمة المختارة
المفتاح الوظيفي اليسار	يعمل تبعاً للوظيفة الموجودة في الجزء اليسار الأسفل من الشاشة
المفتاح الوظيفي اليمين	يشتغل كالإشارة الموجودة في الجزء اليمين الأسفل من الشاشة. في وضع التحرير، اضغط على هذا المفتاح لحذف الحرف المتواجد امام المؤشر . سيقوم بحذف جميع الأحرف المتواجدة على شاشة التحرير عن طريق الضغط على هذا المفتاح على المدى الطويل. في الشاشة الخاملة، اضغط على مفتاح RSK لدخول قائمة الاتصالات.

<p>ينقسم هذا المفتاح إلى 4 مفاتيح اتجاهات: الأعلى، الأدنى، اليسار، اليمين. حرك المؤشر إلى الأعلى، الأدنى، اليسار، اليمين في وضع التحرير. اضغط على مفتاح الاتجاهات في الواجهة الخاملة لدخول الواجهة المتطابقة للوظيفة.</p> <p>مفتاح الأعلى: لدخول "الكاميرا" مفتاح الأدنى : لدخول "الساعة المنبهة" مفتاح اليسار: لدخول "كتابة الرسالة" مفتاح اليمين: لدخول "الملاح للمستخدم"</p>	<p>مفتاح الملاحه</p>
<p>تستخدم مفاتيح الرقم لإدخال الأرقام والحروف والرموز الخاصة. في حين أن تستخدم كالتطريق المختصر لدخول الخيارات سريعاً داخل القائمة.</p>	<p>مفتاح الرقم</p>
<p>في الشاشة الخاملة، اضغط على هذا المفتاح لدخول خدمة الانترنت.</p>	<p>مفتاح WAP</p>
<p>في الشاشة الخاملة، اضغط على هذا المفتاح لدخول مشغل الصوت.</p>	<p>مفتاح مشغل الموسيقى</p>


بدأ الاستخدام 1. البطارية

عند الاستخدام الاول للبطارية تكون بالعادة مشحونة بمقدار 50% ، حيث بإمكانك استخدامها مباشرة بعد فتح العلبة .
اما بالنسبة للمرات الثلاث الاولى من الاستخدام تأكد من عدم اعادة شحن البطارية حتى تستهلك تماماً ، مما يضمن عملها بصورة طبيعية.

1.1 إزالة البطارية وتركيبها

بالنسبة إلي الإزالة:

- ادفع غطاء البطارية على امتداد اتجاه السهم؛
- ارفع البطارية كما يشير السهم؛
- اخرج البطارية

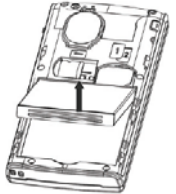

التحذير: تأكد من إغلاق الهاتف قبل إخراج بطاقة SIM. الا فتخضع بطاقة SIM لأضرار.

بالنسبة إلى التركيب:

- أ. اتبع اتجاه السهم وقم بوضع نقط اللمس المعدنية للبطارية إلى الأعلى على وضع مواجه لنقاط اللمس المعدنية في حيز البطارية. وادخل البطارية في حيز البطارية.
- ب. ضع غطاء البطارية الخلفي في الهاتف مربعا، وادفعه على اتجاه السهم حتى تسمع صوت قرقرة في مكانه.



1.2 شحن البطارية

سيلمح مؤشر الطاقة في منطقة الرمز من الشاشة بأسلوب الدوران خلال الشحن. ستظهر شاشة الشحن خلال الشحن والهاتف مقفل، مشيراً إلى عملية الشحن. عند استخدام الهاتف مع كون الطاقة غير كافية، سيظهر مؤشر إعادة الشحن على الشاشة بعد بدأ إعادة الشحن بعد المدة. عندما يظهر مؤشر الطاقة في منطقة الرمز أن البطارية كاملة ويتوقف عن الحركة، هكذا يعنى انتهاء عملية الشحن. وعندما تنتهي عملية الشحن والهاتف مقفل، سيظهر رمز انتهاء الشحن على الشاشة.

على وجه العموم، تستغرق العملية ساعتين ونصف تقريباً. من الطبيعي أن يصير الهاتف والبطارية وجهاز الشحن حاراً أثناء العملية.

افصل الهاتف وجهاز الشحن من مصدر القوة الكهربائية بعد انتهاء عملية الشحن.

الملاحظة: من اللازم أن تشحن البطارية في مكان متعرض للتحوئة تحت درجة حرارة بين 10°C إلى 55°C . ومن الضروري أن تشحن بجهاز الشحن المقدم من الصانع. وقد يؤدي استخدام جهاز الشحن غير ملائم إلى تسبب المخاطر، ويعتبر مخالفة لشروط الضمان المنصوصة من قبل الصانع. في حالة كون درجة الحرارة فيها مرتفعة أو منخفضة للغاية، سيظهر التحذير على الشاشة قبل انتهاء الشحن بغرض حماية البطارية من الأضرار أو المخاطر.

2. الاتصال بالشبكة

2.1 بطاقة SIM

من الضروري أن تدخل بطاقة SIM السارية المفعول في الهاتف قبل استخدامه.

يتم تسجيل جميع المعلومات المتعلقة بالاتصال بالشبكة على بطاقة SIM نفسه، بما فيها الأسماء وأرقام الهاتف والرسائل القصيرة التي تم تخزينها في "كتاب الهاتف من بطاقة SIM".


من الممنوع أن تلمس سطح اللمس المعدني من أجل تجنب فقدان المعلومات أو أضرارها في بطاقة SIM. وابتعد بطاقة SIM عن التيار الكهربائي والمغناطيس.

2.2 إدخال بطاقة SIM وإزالتها

■ اغلق الهاتف قبل إزالة البطارية وقم بفصل الوصلات الكهربائية الداخلية الأخرى كما يشار في الصورة.


■ ادخل بطاقة SIM في حيز بطاقة SIM.

■ عندما تحتاج إلى إزالة بطاقة SIM، من الأفضل أن تغلق الهاتف أولاً قبل إزالة البطارية وإزالة البطاقة.

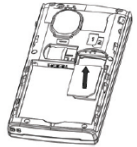

2.3 إدخال بطاقة الذاكرة وإزالتها

- اغلق الهاتف قبل إزالة البطارية والوصلات الكهربائية الداخلية الأخرى.
- ادخل بطاقة الذاكرة في حيز البطاقة.

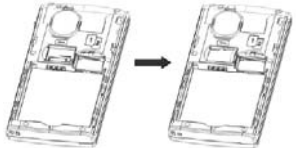

2.4 فتح الهاتف وإغلاقه

اضغط على مفتاح الانتهاء لمدة طويلة نسبياً لفتح الهاتف وإغلاقه. في حالة فتح الهاتف بدون ادخال بطاقة SIM مقدماً، ستظهر إشارة ادخال بطاقة SIM على الهاتف.

وتم ستظهر على الشاشة الإشارات التالية بشكل مرتب:
إشارة ادخال كلمة السر للهاتف- في حالة وجود كلمة السر المحددة لإقفال الهاتف.
إشارة إدخال PIN- في حالة وجود كلمة السر المحددة لبطاقة SIM.
إشارة البحث- سيواصل الهاتف البحث حتى نجاحه في اكتشاف الشبكة المناسبة.

2.5 فتح القفل لبطاقة SIM

يُستخدم PIN للتشفير من أجل تجنب الاستخدام غير القانوني وحماية بطاقة SIM. من الضروري أن تدخل رقم PIN كلما تفتح الهاتف لو اخترت خيار PIN وحددت رقم PIN، فاتحاً القفل لبطاقة SIM لاستخدام الهاتف. يمكن للمستخدم أن يحدف كلمة السر لبطاقة SIM. مع العلم انه في هذه الحالة لا تستمتع بطاقة SIM بالحماية من الاستخدام غير القانوني في هذه الحالة.

■ اضغط على مفتاح الانتهاء لدة طويلة نسبياً لفتح الهاتف

■ ادخل رقم PIN1. على سبيل المثال، كان رقم PIN1 المحدد "1234"، ثم ادخل المفاتيح التالي: "1" "2" "3" "4" "OK".

في حال ادخال الرقم بصورة خاطئة 3 مرات متعاقبة، ستقفّل بطاقة SIM من قبل الشبكة. ويحتاج الهاتف إلى رقم PUK1 في هذه الحالة.

الملاحظة: سيحدد مقدم الخدمة رقم PIN النموذجي (4 إلى 8 أعداد) لبطاقة SIM. يجب عليك أن تغيّره إلى كلمة السر الشخصية في أسرع وقت ممكن.

2.6 فتح القفل للهاتف

يمكنك أن تحدد كلمة السر لهاتفك بغرض الحماية وتجنب الاستخدام غير القانوني.

من اللازم أن تدخل كلمة السر للهاتف لفتحه كل مرة بعد اختيارك لهذا الخيار.
يمكن للمستخدم أن يغلق قفل الهاتف، غير أن الهاتف لا يستطيع تجنب الاستخدام غير القانوني في هذه الحالة.

■ اضغط على مفتاح الانتهاء لمدة طويلة نسبياً لإغلاق الهاتف
■ ادخل كلمة السر للهاتف

على سبيل المثال، ان كانت كلمة السر المحددة للهاتف "0000"، قم بادخال الارقام بالاسلوب التالي: "0" "0" "0"
"0" "OK".

لو نسيت كلمة السر للهاتف، من الضروري أن تتصل بمركز الإصلاح المعتمد المحلي من أجل فتح القفل لكلمة السر للهاتف.

2.7 الاتصال بالشبكة

سيبحث الهاتف أوتوماتيكياً في الشبكة المتوفرة (مع ظهور إشارة " البحث " على الشاشة) بعد فتح القفل لبطاقة SIM بالنجاح.

وسيظهر اسم مقدم الخدمة في الجزء الوسط الأعلى من منطقة الكتابة والصورة بعد نجاحه في الاتصال بالشبكة. في هذا الوقت، قد تم اتصال هاتفك بشبكة الخدمة.

الملاحظة : لو ظهرت إشارة " الطوارئ " على الشاشة، يعني أنك خارج تغطية الشبكة أو أن ليس لدى بطاقتك الصلاحية. ولكن يمكنك أن تقوم بمكالمات الطوارئ حسب قوة تغطية الإشارة.

الوظائف الأساسية

1. طلب المكالمات

عندما يظهر شعار مقدم الخدمة على الشاشة، يمكنك أن تقوم بالمكالمة أو ترد على الاتصال. يشير شريط المعلومات الموجود في الزاوية اليسار الأعلى من الشاشة إلى قوة الإشارة (يعني 5 أشربة أقوى إشارة).

من المحتمل أن تتأثر جودة المكالمات بالإعاقات. لذا يمكنك أن تتحرك في المنطقة على مسافة قصيرة نسبياً حتى يتم

تحسين جودة الاتصال.

1.1 طلب الرقم المحلي

ادخل رقم الهاتف، ثم اضغط على مفتاح المكالمة. إذا احتاج المستخدم إلى تغيير رقم الهاتف، اضغط على مفتاح الحذف. ستظهر الرسوم المتحركة على الشاشة أثناء الضغط على مفاتيح الأرقام. كما تظهر المعلومات المتعلقة بوضع الاتصال بعد انتهاء المكالمة. يمكنك أن تدخل الأرقام للمكالمة المحلية حسب الترتيب التالي:
مفتاح المنطقة رقم الهاتف المكالمة

1.2 اجراء المكالمات للارقام الثابتة او ذات التحويلات

لا يمكنك أن تتصل ببعض الأرقام ذات التحويلات مباشرة، لذا عليك أن تضغط على مفاتيح الأرقام من لوحة الأرقام، ثم تضغط على مفتاح * حتى يظهر " P " على الشاشة قبل الاتصال على الرقم ذو التحويلة. يمكنك أن كتابة للرقم الثابت او ذو التحويلة حسب الترتيب التالي:
مفتاح المنطقة رقم لوحة التغيير P الرقم الملحق مفتاح المكالمة

1.3 طلب الرقم الدولي

يمكنك أن تضغط على مفتاح * حتى تظهر العلامة " + " للمكالمة الدولية، التي يمكنك من اجراء المكالمات من أي دولة بدون أن تعرف متفاح المنطقة (على سبيل المثال، هو 86 في الصين). يمكنك أن تدخل الأرقام بحسب الترتيب التالي من أجل القيام بالمكالمة الدولية: "+ مفتاح الدولة الرقم الكامل مفتاح المكالمة

ادخل مفتاح المنطقة والرقم الكامل بعد ادخال بادئة الرقم.

تلتزم مفاتيح الدول بالقواعد التالي، على سبيل المثال، 49 لألمانيا، 44 لبريطانيا، 46 للسويد الخ اضغط على " 0 " قبل مفتاح المدينة مثل القيام ب المكالمة الدولية.

على سبيل المثال، عندما تتصل بالخط الساخن للخدمات في شانغهاي من الدول الأخرى، عليك أن تضغط:

1.4 طلب أرقام الهاتف من سجل تاريخ المكالمات

يتم تسجيل أرقام الهاتف التي طلبتها ورددت عليها في قائمة تاريخ المكالمات. وتدرج أرقام تم طلبها والمكالمات المستلمة والمكالمات لم يرد عليها بموجب أنواعها في القائمة الخاصة للأرقام تم طلبها والمكالمات المستلمة ومكالمات لم يرد عليها. عندما تصبح قائمة تاريخ المكالمات ملئية، ستحذف الأرقام القديمة أوتوماتيكياً.

اتبع الاجراءات التالية للنظر إلى القائمة:

- في وضع الاستعداد، اضغط على مفتاح المكالمة للنظر إلى قائمة تاريخ سجل جميع المكالمات.
- يمكنك أن تطلب جميع أرقام الهاتف في القائمة عن طريق الضغط على مفتاح " المكالمة ".
- عندما تظهر القائمة على الشاشة، اضغط على " OK " لقراءة التفاصيل من خلال " الخيارات " لحفظ الرقم أو حذفه.

2. مكالمات الطوارئ

دائماً ما يمكنك أن تقوم بمكالمات الطوارئ ما دمت متواجداً في نطاق التغطية الذي يمكنك التأكد منه من خلال فحص قوة الإشارة في الجزء الأيسر الأعلى من الشاشة. في حال عدم تقديم مقدم خدمة الشبكة خدمة التجول في منطقتك، ستظهر على الشاشة عبارة " الطوارئ " لإشعارك بأن مجرد مكالمة الطوارئ مسموحة. في حال التواجد داخل نطاق التغطية، يمكنك أيضاً أن تقوم بمكالمات الطوارئ دون بطاقة SIM.

3. الرد على الاتصال

يمكنك أن ترد على الاتصال من خلال الضغط على مفتاح المكالمة. في حالة وجود السماعات، اضغط على الزر للرد على الاتصال. في حال كون الضغط على السماعة غير مناسباً، عليك أن تشغل وظيفة الرد الأوتوماتيكي من أجل الرد أوتوماتيكياً على الاتصال في حالة وجود السماعة عندما يرن أو يهتز الهاتف. لو شغلت وظيفة الرد من خلال أي مفتاح، فيمكنك أن تضغط على أي مفتاح ما عدا مفتاح الانهاء للرد على الاتصال الجاري.

4. تاريخ المكالمات

يستطيع هاتفك أن يخزن تاريخ المكالمات للمكالمات لم يرد عليها والمكالمات المستلمة والأرقام التي تم طلبها، الوقت للطلب الأخير بالإضافة إلى العدد الإجمالي للمكالمات المستلمة والمكالمات التي تم طلبها.

5. خيارات الاتصال

في وضع الاتصال بالشبكة، يمكنك أن تدخل خيار الاتصال من خلال الضغط على " الخيارات " أو تفعل مكبر الصوت من خلال الضغط على خيار " استخدام السماعات ". اضغط على " طبيعي " لإيقاف مكبر الصوت بعد تشغيل مكبر الصوت. مع العلم بان طريقة تشغيل هذه القائمة مماثلة لقائمة الوظائف .

لا يمكنك أن ترى خيارات الاتصال هذه إلا اثناء عملية الاتصال. علاوة إلى ذلك، تحتاج عدة من الوظائف مثل انتظار الاتصال والمكالمات الجماعية الى الدعم من الشبكة المقدمة للخدمة، اتصل بمقدم الخدمة من أجل التفاصيل.

في خيارات الاتصال، يمكنك أن تتبّع الاجراءات التالية:

■ انتظار الاتصال المفرد: جعل الاتصال الجاري ينتظر.

■ انتهاء الاتصال المفرد: انتهاء الاتصال الجاري

■ الاتصال الجديد: ادخال واجهة الطلب الجديد

■ سجل الهاتف: ادخال قائمة كتاب الهاتف.

■ الرسائل: ادخال قائمة الرسالة. تمنع وظيفة MMS اثناء عملية الاتصال بسبب التقييد للشبكة.

■ مسجل الصوت: تسجيل الاتصال الجاري

■ مغير الصوت: تشغيل مغير الصوت للاتصال الجاري

■ الصامت: الضبط للتغيير الذي يعجز إرسال الاتصال المحلى بعد تشغيل هذه الوظيفة

■ DTMF: الاجراءات لتشغيل DTMF وايقافها

■ الاجتماع *

ادخل وضع المكالمات الجماعية المتعددة الاطراف. يمكنك أن تتمتع بالاجراءات التالية من خلال تتبع الإشارات، استلام الاتصالات المنتظرة، و اضافتها إلى الاتصال المتعدد الأطراف، المحافظة على الاتصال المتعدد الأطراف،

المكاملة بصورة خصوصية مع الطرف من الاجتماع اثناء المحافظة على باقي المتصلين، الربط بالطرف من اجتماع الاتصال مع الطرف الآخر اثناء الخروج من الاجتماع، المحافظة على الطرف من الاجتماع المتعدد الأطراف وانهاء الاتصال الجاري وكافة الاتصالات المحافظ عليها.

الملاحظة: ستظهر القائمة ب* في مجرد الأحوال الخاصة.
أما وظيفة الاجتماع، فمن الضروري الطلب بدعم الخدمة من مقدم الخدمة المتطابق.

استخدام قائمة الوظائف

1. البحث بصورة التدرج على القائمة واختيار الوظائف

في وضع الاستعداد، اضغط على " القائمة " من خلال الضغط على مفتاح الاختيار الايسر لدخول قائمة الوظيفة. أو اضغط على " الخيارات " اثناء الاتصال لدخول قائمة خيار الاتصال.

في واجهة القائمة الرئيسية أو القائمة الفرعية، يمكنك أن التدرج إلى الوظيفة المطلوبة عن طريق مفاتيح " الأعلى " و " الأدنى " و " اليسار " و " اليمين " من لوحة المفاتيح (في قائمة درج الصفحة، اضغط على مفاتيح " الأعلى " و " الأدنى " التدرج إلى الأعلى أو الأدنى). ثم اضغط على مفتاح الاختيار الايسر أو مفتاح " OK " لدخول خيار الوظيفة.

2. الخروج من القائمة

في قائمة الوظيفة، على وجه العموم، يمكنك الخروج من القائمة من خلال مفتاح الاختيار الايمن أو مفتاح الانهاء للرجوع إلى وضع الاستعداد.

التعليمات الخاصة بقائمة الوظائف

1. التطبيقات

1.1 انشاء الاحتياط لبطاقة T

انشاء الاحتياط لسجل الهاتف
يمكن انشاء احتياط للارقام المتواجدة في كتاب الهاتف أو تخزينها

انشاء احتياط لرسائل SMS

يمكن اخراج SMS من صندوق الوارد وصندوق الارسال والمسودات والحافظات

1.2 التقويم

سيظهر التقويم الحالي على الشاشة مع التاريخ الحالي في المربع بالخلفية الملونة بعد دخول القائمة الفرعية للتقويم.
يمكن للمستخدم أن ينقر ويختار التاريخ من التقويم من خلال مفاتيح الاتجاهات مباشرة. كما سيتم التجديد لمعلومات التقويم على الشاشة.

1.3 المهمات

تظهر مواعيد المهمات لليوم والأيام القادمة تحت قائمة الخيار. بإمكانك مشاهدة و اضافة والتحرير والحذف وحذف ما قبل اليوم وحذف الكل والقفز إلى التاريخ المحدد والارسال عبر التقويم والحفظ كملف.

1.4 الساعة المنبهاة

يستطيع الهاتف أن يضبط 5 ساعات منبهاة على الأكثر ويدعم وظيفة الساعة المنبهاة والهاتف مقفل. عليك ان تختار ساعة للضبط وتحديد التشغيل أو الإيقاف وتحديد الوقت واختيار نوع الرنة للساعة المنبهاة من قائمة الساعة المنبهاة. عليك أن تختار وضع التكرير: مرة واحدة، كل يوم، المعتاد (الافتراض: الساعة المنبهاة من يوم الإثنين إلى يوم الجمعة. يمكن للمستخدم أن يضبط الأيام المعينة من الأسبوع بحسب الحاجات).

1.5 ساعة العالم

استخدم مفاتيح الاتجاهات للنظر إلى الوقت الحالي.

1.6 الحاسبة

يقدم لك الهاتف حاسبة مع الوظائف البسيطة. يمكنك أن تقوم بالزيادة والنقص والضرب والتقسيم من خلال مفاتيح الاتجاهات ويمكنك أيضا تطبيق اجراءات الذاكرة المتطابقة من خلال +M, -M, MR, MC. **الملاحظة:** هذه الحاسبة محددة القدرة من حيث الدقة. من المحتمل أن تحصل الأخطاء.

1.7 برنامج قراءة الكتاب الإلكتروني

يدعم الهاتف ملفات الكتب الإلكترونية بشكل *.txt الذي يعتبر مثالياً للكتاب الإلكتروني. اخزن الملفات بشكل *.txt في ملف الكتاب الإلكتروني، ثم يمكنك أن تقرأها من خلال برنامج قراءة الكتاب الإلكتروني.

2. الشخص المتصل به

يمكنك أن تخزن المعلومات بما فيها الأسماء وأرقام الهاتف وأرقام الهاتف المحمول. تُخزن أرقام الهاتف في جهاز الهاتف أو في بطاقة SIM. يختلف عدد أرقام الهاتف الذي تستطيع بطاقة SIM استيعابه حسب سعتها.

إضافة الشخص المتصل به الجديد

قم بإضافة الرقم الجديد في بطاقة SIM أو في كتاب الهاتف من الهاتف المحمول. يمكنك أن ان تحدد عدة اشخاص مرة واحدة، ثم ترسل SMS. كما يمكنك حذفهم أو تحديد جميع الاشخاص او الغاء التحديد.

الاجراءات بالدفعة

يمكنك أن تقوم بنسخ الأشخاص ونقلهم وحذف جميع الأشخاص.

ضبط سجل الهاتف

تتوفر خيارات كثير مثل وضع الذاكرة او اسلوب التخزين المفضل.

موضع التخزين المفضل: يمكنك أن تختار بطاقة SIM أو الهاتف المحمول موضع التخزين المفضل.

بطاقتي: يمكنك أن تحرر رقمك أو ترسله
صيغة بطاقة الاسم: يمكنك أن تختار صيغة 2.1 أو صيغة 3.0 من البطاقة.
الملاحظة: لعند حفظ رقم الهاتف في بطاقة SIM، اخزن مجرد الاسم ورقم الهاتف.
الأرقام الأخرى: يمكنك أن تضبط رقم المستخدم.
فحص وضع الذاكرة: يمكنك أن تفحص التسجيل لكتاب الهاتف من بطاقة SIM ما إذا كانت الذاكرة مليئة.

3. الترفيه

3.1 الألعاب

يوفر الهاتف ألعاب التسلية.

MSN 3.2

Paradise 3.3

Yahoo! 3.4

4. الملفات

يمكنك استخدام إدارة الملفات لتنظيم الملفات في المجلدات في بطاقة الذاكرة أو الهاتف النقال. إذا تم إدخال بطاقة الذاكرة، وسيتم تنظيم الملفات المخزنة عليها بشكل منفصل.
اختر بطاقة الذاكرة واختر خيارات الفتح، المجلد الجديد، التسمية، الحذف، التصنيف.

5. الرسائل

بعد دخول هذه القائمة، يمكن استعراض الخيارات التالية: الرسائل القصيرة (SMS)، رسائل الوسائط المتعددة (MMS)، ورسائل البث.

5.1 الرسائل القصيرة (SMS)

5.1.1 كتابة الرسالة

إنشاء رسالة جديدة قصيرة.

1. ادخل النص

2. اضغط على مفتاح الوظيفة الأيسر (خيارات) واختر البنود المطلوبة، بما في ذلك إرسال إلى، إدراج القالب، إدراج محتوى الرسالة القصيرة، إدراج البطاقة الإلكترونية، إدراج سجل المكالمات، إدراج الإشارة المرجعية، الحفظ إلى المسودات وطريقة إدخال النص.

3. اضغط على مفتاح الوظيفة الأيسر (خيارات) واختر إرسال من SIM1. إرسال من SIM2. تحرير المرسل إليه، وإزالة المرسل إليه، وإزالة جميع المرسلين إليهم.

الملاحظة: مركز الرسائل القصيرة في بعض المدن والمناطق لا تدعم رسائل قصيرة طويلة مع أكثر من 140 الأحرف الإنجليزية.

5.1.2 صندوق الرسائل الواردة

يمكن استعراض الرسالة القصيرة المستلمة في قائمة فرعية لصندوق الرسائل الواردة.

5.1.3 صندوق الرسائل المرسلة

أدخل قائمة الرسائل المرسلة لعرض الرسائل القصيرة التي قمت بحفظها في صندوق الرسائل المرسلة (بما في ذلك بطاقة SIM1 وبطاقة SIM2).

5.1.4 المسودات

تخزن المسودات رسائل قصيرة غير مستعدة للإرسال للمراجعة في المستقبل والإرسال.

5.1.5 الأرشيف

يمكن حفظ الرسائل القصيرة الواردة إلى الأرشيف.

5.1.6 الرسائل القصيرة المجدولة

مع هذه الوظيفة يمكنك كتابة الرسائل القصيرة وجدولتها للتسليم في وقت محدد لاحق.

5.1.7 إعدادات الرسائل القصيرة

قبل استخدام وظيفة الرسائل القصيرة، تحتاج إلى إجراء الإعداد اللازمة. أدخل إعدادات الرسائل، وحدد الإعدادات التالية :

■ إعدادات الملف الشخصي: يرجى الاتصال بمقدم الخدمة المحلي، وذلك لتلقي رقم مركز خدمة الرسائل القصيرة. من خلال دخول هذه القائمة الفرعية سيتم عرض قائمة الإعداد لوضع المعلومات الحالي، فإن عدد القوائم ستكون مختلفة وهي خاضعة لمقدم الخدمة وأنواع بطاقة SIM. بعد تحديد اختيار الوضع، اضغط على "تحرير" لإنشاء اسم الملف، رقم مركز الرسائل القصيرة، وقت انتهاء الصلاحية للرسائل الغير مرسله وكذلك صيغة الارسال في ترتيب متسلسل. **الملاحظة:** إن وظائف التحقق من الرسالة ، فترة الصلاحية ، الفاكس ، الارسال، والبريد الإلكتروني تحتاج إلي دعم من مقدم الخدمة.

■ سيرفر البريد الصوتي: تعيين خدمة البريد الصوتي.

■ الإعدادات المشتركة : يتم تفعيل / تعطيل تسليم التقرير ومسار الرد.

■ تحقق من حالة الذاكرة: سيتم عرض ظروف حالة الذاكرة للرسائل القصيرة في بطاقة SIM والهاتف.

■ مواضع التخزين المفضلة: ومن الممكن لتحديد استخدام الحفظ الافتراضي للرسائل القصيرة الواردة على الهاتف النقال أو بطاقة SIM.

5.2 رسائل الوسائط المتعددة (MMS)

رسائل الوسائط المتعددة تتمثل بخدمة رسائل الوسائط المتعددة، وأكبر ميزة لها هي دعمها لوظيفة الوسائط المتعددة، والقادرة على نقل معلومات الوسائط المتعددة مثل النصوص والصور والصوت.

خدمة رسائل الوسائط المتعددة تحتاج إلي دعم من مقدم الخدمة، يرجى التأكد من دعم بطاقة SIM لهذه الخدمة أو استشارة مقدم الخدمة قبل استخدامه.

يدعم الهاتف وظيفة رسائل الوسائط المتعددة، ما عليك سوى أن اجراء بعض اعدادات رسائل الوسائط المتعددة اللازمة قبل أن تتمكن من استقبال وإرسال معلومات متعددة الوسائط.

5.2.1 كتابة رسالة

إنشاء رسالة وسائط متعددة جديدة.

1. أدخل المستلمين في عن طريق الضغط على مفتاح الوظيفة الأيسر (التحرير)، ووال تأكيد باختيار موافق.
2. أدخل موضوعا في الموضوع من خلال تحديد التحرير. اضغط على مفتاح الوظيفة الأيسر (الخيارات) واختر موافق.

3. أدخل النص في محتوى التحرير من خلال تحديد التحرير.

4. اضغط على مفتاح الوظيفة الأيسر (الخيارات) واختيار البنود التي تريد إرسالها، بما في ذلك الصور (إضافة صورة)، الصوت (إضافة الصوت)، إضافة ملفات الفيديو في صيغات أخرى (إضافة المرفق) والشريحة (إضافة الشريحة قبل / بعد)، إضافة نص الإشارة المرجعية، معاينة الخ.

5. التأكد من المحتويات عن طريق تحديد الخيارات و ثم اختر موافق.

6. اضغط على مفتاح وظيفة اليمين (التم) لإرسال، حفظ وإرسال، حفظ، خيارات الإرسال أو الخروج..

5.2.2 صندوق الرسائل الواردة

صندوق الرسائل الواردة يقوم بتخزين جميع رسائل الوسائط المتعددة الواردة.

5.2.3 صندوق الرسائل المرسلة

صندوق الرسائل المرسلة تقوم بتخزين الرسائل المتعددة المختارة للحفظ خلال ارسال الرسالة.

5.2.4 المسودات

المسودات تخزن رسائل متعددة الوسائط غير مستعدة للإرسال للمراجعة في المستقبل والإرسال.

5.2.5 إعدادات رسائل الوسائط المتعددة

إذا كان المستخدم يحتاج إلى استخدام خدمة رسائل الوسائط المتعددة، يجب أن يتم إعدادات ضرورية أولاً. أدخل لإجراء الإعداد التالي.

■ إعدادات الوكيل (البروكسي): إضافة الحساب الجديد أو تعديل الحساب الجاري.

■ الإعدادات المشتركة: يمكنك ان تفعل إعداد التحرير، الإرسال، الاسترداد، الحذف، وحالة الذاكرة.

الملاحظة: 1. تكون حالات لتقرير التسليم والنقل المجهول مرتبطة بالخدمة المقدمة من قبل مقدم الخدمة، لمزيد من المعلومات يرجى الاتصال بمقدم الخدمة.

2. يتم تخصيص مساحات معينة في الذاكرة المعينة المتاحة لتخزين رسائل الوسائط المتعددة. حفظ كمية كبيرة من رسائل الوسائط المتعددة قد يحتل احتلالاً تاماً هذه السعة التخزينية المتاحة، مما قد يؤدي الى امتلاء ذاكرة تخزين هاتفك. في هذا الوقت يجب عليك أولاً حذف المعلومات الغير لازمة عن الحاجة في كافة دلائل البريد لرسائل الوسائط المتعددة، وذلك لضمان وجود مساحة كافية للحفاظ على قدرة استلام الوسائط المتعددة الجديدة.

5.3 رسالة البث

رسالة البث تشير إلى الرسالة العامة المرسله من قبل مقدم الخدمة. من خلال استخدام خدمة بث الرسائل القصيرة، يمكنك الحصول على معلومات حول موضوعات متعددة من مقدم الخدمة، مثل الطقس، وسيارات الأجرة، والمستشفيات، وما إلى ذلك. للحصول على معلومات مفصلة من المواضيع ذات الصلة، يرجى الاتصال بمقدم الخدمة المحلي.

6.الوسائط المتعددة

6.1 لاعب الصوت

لاعب الصوت يسمح لك بتشغيل الملفات الصوتية.

يدعم الهاتف بطاقة الذاكرة T-Flash. تحتاج إلى حفظ ملفات الموسيقى الجديدة إلى الدليل الموسيقى، بحيث يمكن ان تقوم بتشغيلها بشكل طبيعي.

6.2 عارض الصور

من خلال الدخول الى القائمة الفرعية من عارض الصور، يمكنك استعراض الصور التي تم التقاطها عبر الكاميرا بصورة مريحة ، ويمكنك المشاهدة، تصفح السلايل، الإرسال، الاستخدام ك، اعادة التسمية ، الحذف، التصنيف، حذف كافة الملفات والتخزين.

6.3 مسجل فيديو

في المعاينة، اضغط المفاتيح الايسر او اليمين لضبط خواص عرض الكاميرا الكاميرا؛ اضغط علي المفاتيح لأعلى أو لأسفل لضبط تركيز الكاميرا. اضغط على مفتاح "موافق" لتصوير فيلم الفيديو. في أثناء التصوير، اضغط على المفتاح الوظيفي الأيمن لوقف التصوير. بعد التصوير، فإنه سيستقر عما إذا تحتاج إلى الحفظ، وإذا اخترت "نعم"، ثم سيحفظ إلى المجلد المناسب، واختر "لا" ، ثم قم بتصوير الفيديو. اضغط على المفتاح الوظيفي الايسر لإجراء العمليات التالية :

- التشغيل : تشغيل قائمة الفيديو.
- إعدادات كاميرا الفيديو: بما في ذلك ضبط EV، وضع ليلة، ومكافحة تومض.
- إعدادات الفيديو: تضمن ضبط جودة الفيديو.
- توازن اللون الأبيض: اختر نمط توازن اللون الأبيض.
- اعدادات التأثيرات: إعداد مؤثرات خاصة للفيديو.
- التخزين: إعداد مسار الحفظ للهاتف، الفيلم أو بطاقة الذاكرة.
- الاستعادة الافتراضية: اضغط على "موافق"، ستتم استعادة المعالم لمسجل الفيديو إلى الإعداد الافتراضي.

6.4 مشغل الفيديو

اختر القائمة الفرعية لمشغل الفيديو، وأدخل قائمة الفيلم، واستخدم مفاتيح الأعلى أو الأسفل لتحديد الملفات المراد تشغيلها، اضغط على مفتاح "موافق" للمعاينة؛ اضغط على "الخيارات" لتنفيذ عمليات مثل اللعب، والإرسال، إعادة التسمية، الحذف، حذف كافة الملفات، التصنيف والتخزين.

في واجهة اللعب، اضغط مفتاح "الموافق" للعب ملفات الوسائط الحالية. (يدعم الفيديو MP4 والفيديو 3gp).

6.5 الراديو FM

لاستخدام خدمة الراديو ، فمن الضروري للتوصيل بسماعة الهاتف النقال المتوافق أولاً وفي الوقت نفسه استخدم كابل سماعة الرأس كالهوائي. من أجل ضمان التأثير، لا تقوم بسحب كبل سماعات أو سماعة الرأس.

واجهة الراديو FM، اضغط على المفتاح الوظيفي اليسار (الخيارات) ويمكن أن تدخل الميزات التالية :

- قائمة القنوات: تخزين القنوات، يمكن الاضطلاع عليها للقيام بالتحريك اليدوي أو من وظيفة الجيل التلقائي لضبط البحث التلقائي مقدماً.

- الإدخال اليدوي: يمكن الانتقال تلقائياً إلى ادخال القناة اليدوي.

- البحث التلقائي: البحث تلقائياً عن القنوات المتاحة ثم تخزينها إلى قائمة القنوات.

- الإعدادات: إعدادات ثم تخزينها الخلفية، متكلمي الهاتف النقال الخ.

- التسجيل: يمكن تسجيل القناة الحالية.

- الإلحاق: الإضافة إلى ملفات المسجل السابق.

- قائمة الملف: أدخل إلى المستندات للنظر الى عدد من الملفات من الملفات.

6.6 مسجل الصوت

يدعم الهاتف مسجل الصوت. بإمكانك تحديد عدد من الإعدادات في الخيارات. ويمكن أيضاً تسجيل مكالمات أو حفظها على الهاتف أو بطاقة الذاكرة.

7. الاتصالات اللاسلكية

7.1 بلوتوث

تنشيط بلوتوث: وظائف فتح/ إغلاق بلوتوث. عندما يكون بلوتوث مفتوحاً، سيعرض شريط حالة واجهة الشاشة الشاشة الرئيسية رمز البلوتوث.

جهاز البحث عن الأجهزة الصوتية : فتح خيار البحث عن أجهزة بلوتوث حر اليبدين.

البحث عن جهاز بلوتوث: أجهزة البحث والاختيار للموافقة.
جهاز التوصيل: عرض توصيل الأجهزة بجهاز المستخدم.

الإعدادات : تتضمن ما يلي

- يكون هذا الجهاز مرئياً: ما إذا كان يمكن أن يكون هذا الجهاز باحثاً.
 - اسم لهذا الجهاز: تغيير اسم الجهاز
 - إعداد مسار الصوت: إعداد الصوت لنقل مسار سماعة بلوتوث أو البقاء في الجهاز
 - التخزين: إعداد التخزين، مثل الهاتف، وبطاقة الذاكرة، أو دائماً اسأل.
- بلوتوث المستخدم: سجلات الخدمة.

7.2 بيانات الحساب

GPRS

هذه القائمة الفرعية ستعطي قائمة من بيانات الحساب لوصول GPRS لملف إعداد WAP الحالي، من خلال تحديد ملف الإعداد المعين، يمكنك تحرير المحتويات التالية لبيانات الحساب لوصول GPRS في ملف الإعداد :

■ اسم الوكيل: وهذا يتيح تحرير وإعداد اسم ملف بيانات الحساب.

■ نقطة الوصول لـ GPRS: أدخل APN

■ اسم المستخدم: هوية المستخدم من خادم APN

■ كلمة المرور: كلمة المرور اللازمة لخادم APN للتأكد من هويتك.

■ المصادقة. نوع: من خلال اختيار الأمن أو العادي عن طريق الضغط على مفاتيح اليمين واليسار، ويمكنك الانتهاء من الإعداد، ثم إعداد أسلوب المصادقة المعتمدة في مصادقة هوية WAP.

■ DNS الابتدائي: إعداد DNS الابتدائي.

■ DNS الثانوي: إعداد DNS الثانوي .

8. الكاميرا

في واجهة الاستعداد ، اضغط مفاتيح اليمين واليسار لضبط خيارات عرض الكاميرا ؛ اضغط على المفاتيح لأعلى أو لأسفل لضبط تركيز الكاميرا. اضغط على مفتاح الرقم "1" لإعداد حجم الصورة؛ واضغط على مفتاح الرقم "2" لتحديد جودة الصورة؛ واضغط على مفتاح الرقم "4" لإعداد توازن اللون الأبيض؛ واضغط على مفتاح الرقم "6" لإعداد الوقت المتأخر لأخذ الصورة؛ واضغط على مفتاح الرقم "7" لإعداد التصوير المستمر واضغط مفتاح "الموافق" لأخذ الصور.

9. خدمات الشبكة

STK 9.1

بالإضافة إلى الوظائف المتاحة في الهاتف، قد تتيح بطاقة SIM خدمات إضافية يمكنك الوصول إليها في هذه القائمة. يتم عرض هذه القائمة فقط إذا كانت مدعومة من قبل بطاقة SIM. الاسم والمحتويات لهذه القائمة تعتمد على الخدمات المتاحة.

9.2 خدمة الإنترنت

هاتفك النقال يدعم خدمة على أساس بروتوكول التطبيقات اللاسلكية (WAP). يمكنك الوصول إلى مجموعة متنوعة من خدمات WAP.

خدمة WAP تحتاج إلى شبكة الاتصال المعتمدة، فيما يتعلق بالتوافر والأسعار والضرائب المفروضة على خدمة WAP، يرجى الرجوع إلى مشغل الشبكة و / أو مقدم الخدمة الذي يوفر لك الخدمة التي تحتاجها. مقدم الخدمة سوف يقدم أيضا إيضاحات حول كيفية استخدام الخدمات التي يقدمها.

في إطار قائمة خدمة شبكة الإنترنت، يمكنك استخدام الخدمة ذات القيمة المضافة التي يقدمها مشغل الشبكة لك. هذه القائمة تضمن أساسا خيار القائمة التالية: الصفحة الرئيسية، والإشارات المرجعية، العناوين المدخلة، الصفحات الأخيرة، والإعداد، وعلبة الخدمة.

■ الصفحة الرئيسية: الصفحة الرئيسية هي موقع WAP المحدد من قبلك [الإعداد]. إذا لم تم تحدد، يكون الافتراضي فارغاً.

■ الإشارات المرجعية: اختر "الإشارات المرجعية" لعرض كل إشارة مرجعية موجودة في قائمة الإشارات المرجعية واختر واحدة منها، يمكنك تنفيذ عمليات على الإشارة المرجعية مثل الذهاب إليها، والتحرير، الإرسال، الحذف، وحذف الكل.

إضافة الإشارة المرجعية.

الملاحظة: قبل الاستخدام ، يرجى التأكد من أن قائمة الإشارات المرجعية في هاتفك النقال ليس فارغة..

■ الصفحات الأخيرة: بموجب هذه القائمة الفرعية، تُسجل في القائمة سجلات شبكة الإنترنت التي قمت بزيارتها مؤخراً، وذلك لتيسير الاختيار لك مباشرة 'الذهاب إلى' لزيارة صفحة الشبكة التي تم اختيارها من سجل تاريخ التصفح.

■ عنوان الإدخال: بموجب هذه القائمة الفرعية، أدخل عنوان URL المراد زيارته لخدمة WAP، ثم اضغط على "موافق" لإكماله، مما سيمكن لتكون متصلاً إلى موقع WAP كنت ترغب في الوصول إليه. و ذلك لتوفر لك طريقة سهلة لزيارة الشبكة بالإضافة إلى معلومات الإشارة المرجعية وسجل التاريخ صفحات الشبكة.

■ علبة الخدمة الواردة: "علبة الخدمة الواردة" التي يمكن عرض معلومات الخدمة المستلمة من خلاله. هاتفك النقال يمكن الحصول على معلومات الخدمة (وتسمى أيضا معلومات دفعة) مرسله من قبل مقدم الخدمة. على سبيل المثال: يمكن أن تكون معلومات الخدمة إشعاراً في موجز الأخبار ذات الصلة، التي يمكن أن تحتوي على قطعة من معلومات النص أو نوعاً من عنوان خدمة الشبكة. للحصول على معلومات الخدمة، وهناك ثلاث طرق للمعالجة: القراءة، الحذف، حذف الكل، إضافة الإشارة المرجعية / إضافة الى القائمة الموثوقة.

■ الإعدادات: بموجب القائمة الفرعية لإعداد المتصفح، يتضمن قوائم الإعداد من اختر بطاقة SIM، تحرير الحساب، خيارات المتصفح، إعدادات رسائل الخدمة، مسح ذاكرة التخزين المؤقت، ومسح الكوكيز لإعداد المحتويات ذات الصلة من خدمة الشبكة.

10. تاريخ المكالمة

يمكنك الإطلاع علي معلومات ذات صلة بسجلات المكالمات، بما في ذلك: المكالمات التي لم يرد عليها، المكالمات الصادرة، المكالمات المستلمة. إذا اذقت بادخال بطاقة SIM واحدة ، يمكنك ان ترى واحدة من سجلات الهاتف بالبطاقة SIM.

11. الإعدادات

11.1 إعداد العرض

يمكنك ان تحدد الموضوعات، القائمة الرئيسية لآثار الأبعاد الثلاثة (3D)، أوراق الجدران، حافظ الشاشة، وعرض الفتح، عرض الإغلاق، إظهار الوقت والتاريخ، إظهار رقم المستخدم، تأثير تبديل الشاشة وإظهار اسم المشغل.

11.2 إعدادات المكالمة

للإعداد العام، مثل إعدادات المكالمة SIM1/SIM2 (بما في ذلك خدمة انتظار المكالمة، تحويل المكالمة، حظر المكالمة)، اشعار الاتصال، حماية البطارية القليلة، مغير الصوت، الرد عن طريق الرسائل القصيرة، والإعدادات المتقدمة.

11.3 إعدادات الهاتف

إعدادات SIM المزدوج

■ فتح SIM المزدوج : تكون SIM1 SIM2 كليهما قيد التشغيل.

■ فتح SIM1 فقط : تكون SIM1 علي السلطة، ولكن SIM2 هي خارج نطاق التشغيل.

■ فتح SIM2 فقط: تكون SIM2 علي السلطة، ولكن SIM1 هي خارج نطاق التشغيل.

الوقت والتاريخ: يضمن ضبط المدينة الرئيسية، الوقت والتاريخ والصيغة.

الجدول الزمني للتشغيل والايقاف: هناك أربعة أوقات مختلفة لضبط الهاتف علي للتشغيل والايقاف وفقا لنوع الإعداد.

الملاحظة: في حال كون أوقات الإعداد هي نفسها، سيتسبب في الفشل، من فضلكم ضبط أوقات مختلفة:

اللغة: يمكنك ضبط اللغة المطلوبة ليتم عرضها علي هاتفك.

اساليب الادخال المفضلة: هناك عدد من أساليب الإدخال لتختارها.
المفتاح المخصص: يمكنك اختيار وظائف محددة لمفاتيح أعلى / أسفل / يسار / يمين لتسريع الوصول في الشاشة الخاملة.

التحديث التلقائي للوقت والتاريخ: يمكنك إعداد التشغيل أو القفل.
ضوء الخلفية للشاشة الكريستالية: زمن ضوء الخلفية للشاشة الكريستالية، ضبط شدة الإضاءة لضوء الخلفية للشاشة الكريستالية.

11.4 إعدادات الشبكة

اختيار الشبكة

ميزة اختيار الشبكة تتيح لك: لاختيار الشبكة تلقائيا أو يدويا.

التفضيلات

دعم الشبكات المفضلة بالاختيارات.

11.5 إعدادات الأمن

11.5.1 إعدادات الأمن SIM1 SIM2 (SIM)

قفل SIM

عندما يتم تمكين ميزة التحقق من رقم التعريف الشخصي (PIN)، يجب عليك إدخال رقم التعريف الشخصي الخاص بك كل مرة تقوم فيها بتشغيل الهاتف. لذلك أي الشخص الذي ليس لديه رقم التعريف الشخصي الخاص بك لا يمكن استخدام الهاتف الخاص بك دون موافقتك. بالإشارة الى الوضع الحالي المتقدم من قبل شريط الحالة العلوي قريبا من هذا البند، يمكنك إجراء الإعدادات التالية:

في حال كون قفل بطاقة SIM مغلقا، يمكنك اختيار 'مفتوح'، ثم أدخل الرقم السري لضبط قفل SIM على، ثم يجب عليك إدخال رقم التعريف الشخصي في كل مرة يتم تشغيل الهاتف، وإذا يكون التحقق من رقم التعريف الشخصي "مفتوحا" حاليا، اختر "مغلق" لإغلاق التحقق من رقم التعريف الشخصي.

ملاحظة : إذا تم ادخال الرقم السري بصورة خاطئة ثلاث مرات، و سيتم تأمين بطاقة SIM، في هذا الحال سيطلب منك أن تدخل رمز الحماية الاضافي (PUK) لفتح البطاقة.

قد يتم تزويد رمز التعريف الشخصي و رمز الحماية الاضافي مع بطاقة SIM، عدا ذلك، يرجى الاتصال بمشغل الشبكة. يرجى الاستعاضة عنها بكلمة المرور الخاصة بك في أقرب وقت ممكن.
الطلب المحدد

إذا يكون وضع FDN (رقم الطلب المحدد) معتمدا من بطاقة SIM لك، فهو سيسمح لك بتقييد المكالمات الصادرة إلى مجموعة محدودة من أرقام الهواتف. وتتوفر الخيارات التالية.

الوضع: أدخل رمز PIN2 تحويل نمط الطلب المحدد الثابت مفتوحا / مغلقا.

قائمة قائمة الطلب المحدد: يمكنك إضافة، تحرير، وحذف أرقام الاتصال المحددة الخاصة بك هنا

الملاحظة: لفتح/إغلاق هذا الوضع، تحتاج إلى إدخال رمز PIN2. يرجى الاتصال بمشغل الشبكة للحصول على رمز PIN2. بعد فتح وضع الاتصال بأرقام محددة، ستكون هناك علامة على جانب رقم الهاتف في دليل الهاتف ليخبرك انه أيضا من قائمة الأرقام المحددة.

الطلب الممنوع

إذا كانت البطاقة تدعم هذه الوظيفة، يمكنك الاتصال بأرقام هواتف محددة. عندما يكون هذا الخيار مفتوحا، لا يمكن أن تكون الأرقام التي تم الاتصال بها في قائمة الأرقام المحجوزة حاليا.

الملاحظة: أنت بحاجة إلى إدخال رمز PIN2 لتشغيل هذه الوظيفة، يرجى الاتصال بمشغل الشبكة للحصول على رمز PIN2. بعد فتح خيار الطلب الممنوع، لن يتم عرض للأرقام الممنوعة في دليل الهاتف.

تغيير كلمة المرور

إن ميزة تغيير كلمة المرور تسمح لك بتغيير كلمة المرور PIN1 و PIN2 حاليا إلى اخر جديد. يجب عليك إدخال كلمة المرور الحالية قبل أن تتمكن من تحديد اخر جديد.

ملاحظة: لتغيير كلمة المرور بنجاح، يجب أن تكون كلمة المرور المدخلة بين 4 أرقام (بما في ذلك 4 أرقام) و 8 أرقام (بما في ذلك 8 أرقام) ثم اضغط على "موافق"، أو قم بادخال أي أرقام لا يزيد عن 8 أرقام (بما في ذلك 8 أرقام) ثم اضغط على # في النهاية.

11.5.2 قفل الهاتف

قفل الهاتف النقال يمكن أن يمنع هاتفك النقال من أن يستخدم بطريقة غير مشروعة. لتغيير كلمة المرور الحالية لهاتفك النقال إلى أخرى جديدة، يجب عليك إدخال كلمة المرور الحالية قبل أن تتمكن من تحديد أخرى جديدة.

الملاحظة: كلمة المرور الافتراضية من المصنع هي 0000، يرجى الاستعاضة عنها بكلمة المرور الخاصة بك في أقرب وقت ممكن.

11.5.3 القفل الاوتوماتيكي للوحة المفاتيح

في وضع الاستعداد، افتح الهاتف الخاص بك وفقا إلى تعليمات الواجهة. بالمناسبة، إذا تم تعيين وقت لقفل لوحة المفاتيح في خيار "قفل لوحة المفاتيح"، عندما تتم الفترة المقابلة من الوقت والهاتف لم يتلقى أي تعليمات عملية، لوحة المفاتيح ستقف تلقائيا.

11.5.4 تغيير كلمة المرور

يمكنك تغيير كلمة المرور للهاتف وكلمة المرور للحماية الخاصة. كلمة المرور للهاتف الافتراضي عبارة عن 0000.

11.5.5 الحماية الخاصة

في هذه القائمة، يمكنك تعيين كلمة المرور الخاصة من القائمة. لفتح قائمة حماية خاصة يحتاج إلى إدخال كلمة المرور للهاتف بعد الادخال. أدخل الكلمة الأخرى التي تقوم بفتح الوظيفة، لا تدخل كلمة المرور مرة أخرى حتى العودة إلى الخمول للتخلي عن عملية التشغيل.

11.6 استعادة إعدادات المصنع

في هذه القائمة ، أدخل أمة المرور لقفل الهاتف النقال، ثم ثم اختيار موافق لاستعادة لاستعادة الهاتف النقال إلى قيم إعدادات المصنع.

12. اوضاع المستخدم

ماتفك النقال يوفر مجموعة متنوعة من الملفات، وذلك لتسهيل لك تكوين إعدادات فردية من نغمة الرنين مثل حجم، وضع نغمة الرنين، نوع نغمة الرنين، والصوت الموجه وطريقة الاستلام لمختلف الاحداث والمناطق المحيطة بها. تشمل الملامح المتاحة العامة، الاجتماع، في الخارج، في الداخل، صامت، سماعة، وواسطة بلوتوث. الضغط على "التفعيل" يمكن البدء باستخدام الملامح المختارة. **الملاحظة** : تم إعداد ستة أوضاع في التكوين في المصنع، مع الوضع العام المنشط أالوضع الافتراضي.

أسلوب الإدخال

يتم عرض مؤشر وضع إدخال النص الحالي في الزاوية اليسرى العليا من الشاشة. يمكنك الضغط على مفتاح # لتغيير وضع إدخال النص. هذا الهاتف النقال يدعم الانكليزية والفرنسية والعربية والأرقام وغيرها من أساليب الإدخال.

دليل الاستخدام السريع

الوظائف الخاصة

بجانب الوظائف الأساسية للهاتف النقال، ماتفك النقال يدعم أيضا الكثير من وظائف الوسائط المتعددة العملية والمرحة الخاصة، والتي يتم تقديمها على النحو التالي :

■ اثنين من بطاقات SIM: هذا الهاتف النقال يدعم اثنين من بطاقات SIM. يمكنك الدخول إلى "الإعدادات" لتغيير الاثنين من البطاقات.

■ الرسائل القصيرة: إنه يمكن إدراج الرسائل القصيرة المنشئة مسبقا على القوالب أثناء آتابة رسالة قصيرة، ويمكنك الإطلاع السعة التخزينية للرسائل في البطاقة والهاتف النقال، ويمكنك استخراج رقم ماتف من الرسائل القصيرة.

■ رسائل الوسائط المتعددة: تلقي وإرسال رسالة في صيغات مختلفة بما في ذلك النص، الصورة والصوت، ويمكنك إرسال الصور الملتقطة من خلال الكاميرا لأصدقائك وزملائك من خلال رسائل الوسائط المتعددة.

■ لعب MP3: الهاتف النقال يمكن تشغيل ملفات الموسيقى فضلا عن صيغات موسيقية مثل "wav" و"amr". و"mp3". الخ. ما إذا أنت أنزلت ملف الإغاني يحمل نفس اسم الأغنية، وخرزنتها في نفس الملف، عندما يلعب الموسيقى يمكنك أيضا عرض آلمات مترامنة مع الموسيقى التي تظهر على الشاشة.

■ قرص فلاش U: هذا الهاتف النقال لديه وظيفة الذارة المتنقلة (أي بطاقة U) . عندما يكون الهاتف النقال خارج السلطة، اربطه مع جهاز أمبيوتر بكابل usb، سيصبح الهاتف النقال قرص فلاش U الذي يدعم حفاظ البيانات المتنقل، بموجب وضع التشغيل، اربط آبل البيانات مع جهاز الكمبيوتر، يمكنك تحديده أوحدة التخزين.

■ التطبيق: الهاتف النقال يدعم وظائف التنبيه، الحاسبة والمهام؛

■ الإعداد: يمكنك إعداد الهاتف النقال لإجراء إعدادات فردية أما مي مطلوبة، بما في ذلك البنود من إعداد الهاتف النقال، وإعداد المكالمة، إعداد الشبكة، وأذلك الإعداد الأمني، في إطار آل بند هناك وظائف مرنة مختلفة مخصصة لك بناء على تفضيلات مختلفة، مثل الوقت والتاريخ، والفتح والإغلاق الجدول، الطلب السريع، منع المكالمة، قفل الهاتف النقال الخ.

■ خدمة الشبكة: هاتفك النقال يدعم خدمة WAP. يمكنك استخدام متصفح WAP للوصول اليها والانغماس في شبكة الانترنت اللاسلكية للحصول على مجموعة متنوعة من المعلومات.