docomo

Easy Search/Contents/Precautions

Before Using the Handset

Voice/Videophone Calls

Phonebook

Sound/Screen/Light Settings

Security Settings

Camera

i-mode/i-motion/i-Channel

Mail

i-αppli

Osaifu-Keitai/ToruCa

1Seg

Full Browser

Data Display/Edit/Management

Music&Video Channel/
Music Playback

Convenient Functions

Character Entry

Network Services

PC Connection

Overseas Use

Appendix/External Devices/
Troubleshooting

Index/Quick Manual

FOMA® SO706i

ISSUE DATE: '08.7

NAME:

PHONE NUMBER:

MAIL ADDRESS:

INSTRUCTION MANUAL

DOCOMO
W-CDMA and GSM/GPRS Systems

Thank you for choosing FOMA SO706i.
Read this manual carefully before use or during operation as well as separate manuals for other components, and use FOMA SO706i properly. If you have further questions regarding manuals, contact the inquiries number provided on the back of this manual.
FOMA SO706i is your useful companion. Take good care of it for so long a period.

Notes on use

- FOMA terminals use wireless communications and cannot be used in tunnels, underground areas, buildings, and other areas without reception; in outdoor locations with weak reception; or outside the service area. Reception may also be weak in even some unobstructed upper floors of high-rise buildings and apartments. Please be aware that calls or communications may be disconnected even under optimal conditions when reception is strong and all three antenna marks are displayed, and when in a stationary position.
- Please be careful not to disturb people around you when using your mobile phone in public places, crowded areas, or quiet locations.
- A third party may be able to use special equipment to listen in on your calls, as FOMA terminals use radio waves. However, W-CDMA and GSM/GPRS automatically support privacy protection with a scrambling function for all calls to make conversations incomprehensive to third parties.
- FOMA terminals convert voice into digital signals for wireless communications, and therefore if you are in an area where radio reception is weak, these signals may not be properly reconverted and this may result in distortion of the caller's voice.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS. Neither DOCOMO nor the certifier as listed herein makes any representation or warranty as for security in the use of SSL/TLS. In the event that the user shall sustain damage or loss due to the use of SSL/TLS, neither DOCOMO nor the certifier shall be responsible for any damage or loss.
  Certifier: VeriSign Japan K.K., Cybertrust Co., Ltd., GlobalSign K.K., RSA Security Inc. and SECOM Trust Systems Co., Ltd.
- This FOMA terminal is available in FOMA Plus-Area/FOMA HIGH-SPEED area.
- The FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.
- Please keep a separate record of the information (Phonebook, Schedule, Text memo, Record message, Voice memo, Video memo, etc.) you have registered in your FOMA terminal or FOMA card. Please be aware that DOCOMO bears no obligation or responsibility in the event that data is altered or lost.
- It is recommended to back up the important data to the microSD card. If you own a PC, you can also transfer and save the data such as Phonebook, Mail or Schedule to your PC by using DOCOMO keitai datalink.

Before using this manual

This FOMA terminal supports Kisekae Tool (p.97). When you change the design of the menu display using Kisekae Tool, the menu structure may change in accordance with frequency of using functions. Also, you cannot access some functions entering the menu number assigned to the functions.
In this case, it is not possible to operate it according to this manual, so be sure to switch the main menu to "Standard Menu" (p.33) or perform "Reset menu op. log" (p.91).

Latest information regarding to this manual may be downloaded from the DOCOMO website.
· To download "Instruction Manual" (PDF file), access the following site
http://www.nttdocomo.co.jp/english/support/manual/index.html
* The URL and the contents are subject to change without notice.

How to Refer to This Manual

In this manual, following methods are available to find the descriptions of functions and services.

Index → p.396

You can find keywords and functions displayed on the display of the FOMA terminal.

Easy Search → p.4

You can find often-used functions and convenient functions in simple terms.

Index on the front cover → Cover

You can find the table of contents for each chapter by using the Index on the front cover.

See the next page for details.

Contents → p.6

You can find descriptions using the Table of Contents which is divided by the function.

Feature Preview → p.8

You can find main functions of the FOMA SO706i, such as new functions and convenient functions.

Menu Function List → p.340

You can find menu displayed on the display of the FOMA SO706i and default settings.

Quick Manual → p.408

You can find brief descriptions of the basic functions. You can also remove the pages to take along.

Take Quick Manual (For Overseas Use) when using your FOMA terminal abroad.

- In this manual for FOMA SO706i, the “FOMA SO706i” is described as the “FOMA terminal”.
- This manual describes functions that use the microSD card. To use these functions, the microSD card is required. microSD Card→p.243
- It is prohibited to reprint a part or all of the contents of this manual without permission.
- The contents of this manual may change without prior notification.
- Main menu and screen color patterns are described using default settings when the phone color is platinum white.

How to Refer to This Manual (continued)

Following example shows how to look up the alarm function using “Index”, “Easy Search” and “Index on the front cover”.

Index → p.396

You can find keywords and functions displayed on the display of the FOMA terminal.

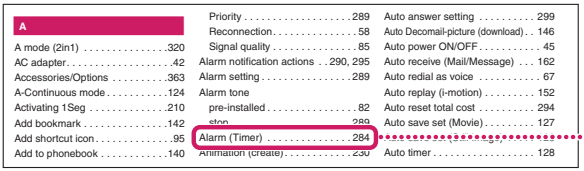

Easy Search → p.4

You can find often-used functions and convenient functions in simple terms.

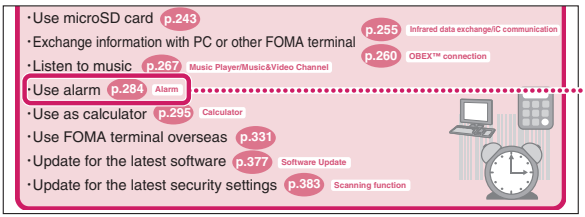

Index on the Cover → Cover

Refer to “Cover”, “Chapter title page” and “Description pages” sequentially to find the descriptions of the function you want to set. You can find the detailed table of contents on the chapter title page.

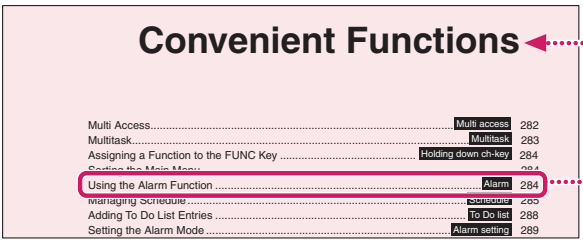

* The contents above differ from the actual ones in this manual.

This manual uses illustrations and marks to explain how to operate the function so that you can use the FOMA terminal correctly.

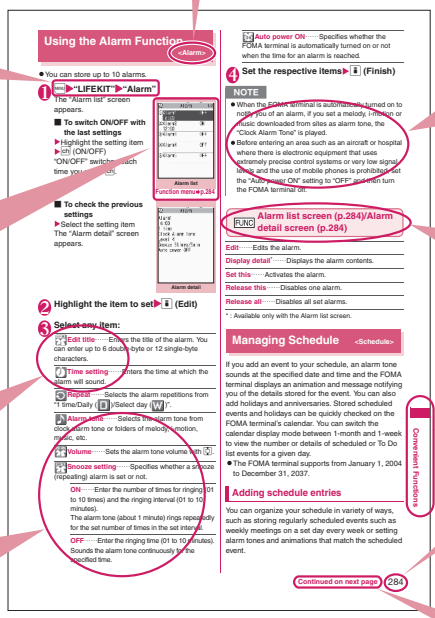

Describes the function name.

Describes the operation on each step.

Describes the screen at the time of the operation. Compare it with the screen when you operate.

Describes the items displayed on the screen (some items cannot be operated depending on the operation).

Describes the explanation of each item.

Describes the necessary settings, notes or useful information about the function.

The function menu title is described with the icon of the function menu and the screen name on which the function menu is displayed.

You can search the chapters using the index.

Page number

Indicates that the descriptions go on to the next page.

* The contents above differ from the actual ones in this manual.

- The screens shown as examples in this manual are displayed when "English" is set for "バイリンガル" (Select language). Set "English" for "バイリンガル" (Select language) in advance. →p.45
- To view a sample screen easily, this manual adopts the color setting to white as background and black as font with "Stand-by display" set to "OFF". In addition, "Style" is set to "24th clock" and "Size" is set to "Big" as the main clock description.
- Descriptions are basically based on the default settings, and screens displayed on the FOMA terminal may differ from the descriptions in this manual.
- A screen is used as an image in this manual. Some screens are zoomed in for explanation. Therefore they may differ from the actual ones.
- In this manual, "Osaifu-Keitai i-αppli compatible with IC card function" is described as "Osaifu-Keitai i-αppli".
- In the operation explanation in this manual, simple key illustrations are used to indicate the operation to press the key.

Easy Search

Find out a function with easy words from the Easy Search index below.

Useful functions for talking

- Show/Hide your caller ID p.46 Caller ID Notification
- Switch voice/videophone call during call p.50
- Adjust the volume during a call p.61 Volume
- Hold the current call p.62 Holding

When you cannot answer incoming call

- Hold the ringing call without answering p.62 On hold
- Notify that you cannot answer the call p.62 Public mode (Driving mode) p.63 Public mode (Power OFF)
- Have your party record voice/videophone message p.64 Record message

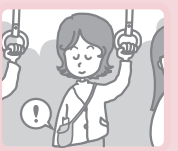

Change melody or illumination

- Adjust the ring volume p.61 Ring volume
- Set ring tone to specify party p.77 Ring tone/Image
- Change ring tone p.82 Select ring tone
- Set vibration to notify incoming call or mail p.84 Vibrator
- Mute keypad tone p.85 Keypad sound
- Set silent mode p.86 Manner mode
- Change illumination color or pattern p.92 Illumination set

Change/Understand display

- Mark (icon) on the display p.27 Display
- Switch menu display p.33 Simple Menu
- Change standby screen (wallpaper) p.88 Display setting
- Display calendar on the standby screen p.89
- Change font size p.93 Font

Master mail

- Send Deco-mail p.158 Deco-mail
- Send image or melody p.160 Attach file
- Sort and save mail automatically p.174 Auto-sort

Master camera

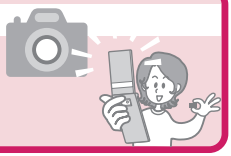

- Change the size of image to shoot p.122
- Display the shot p.225 My picture
- Save image on the microSD card p.249

Use your phone without worries

- Lock the FOMA terminal remotely when lost p.101 Omakase Lock*1
- Prevent others from viewing the phonebook p.103 Secret mode/Secret data only mode
- Reject unidentified calls p.114 Call setting w/o ID
- Reject calls from callers who are not stored in phonebook p.114 Reject unknown
- Save data such as phonebook in case of loss of data p.115 Data Security Service*2

*1: Omakase Lock is a pay service.
*2: Data Security Service is a pay service you need to apply for. (i-mode subscription is necessary to apply for this service.)

Master 1Seg

- Watch 1Seg p.210 Active 1Seg
- Record 1Seg p.213 Record 1Seg
- Program 1Seg p.214 Booking program list/Timer recording list
- Change TV/sound settings p.215 User settings

Miscellaneous

- Read QR code or bar code p.129 Bar code reader
- Use microSD card p.243
- Exchange information with PC or other FOMA terminal p.255 Infrared data exchange/iC communication p.260 OBEX™ connection
- Listen to music p.267 Music Player/Music&Video Channel
- Use alarm p.284 Alarm
- Use as calculator p.295 Calculator
- Use FOMA terminal overseas p.331
- Update for the latest software p.377 Software Update
- Update for the latest security settings p.383 Scanning function

For mode information about other operation guides, see “How to refer to this manual”. →p.1
Also, “Quick Manual” instructs you how to operate the functions used often. →p.408

Contents

How to Refer to This Manual 1
Easy Search 4
Contents 6
Feature Preview of the FOMA SO706i 8
Mastering the FOMA SO706i! 10
Precautions 12
Handling with Care 18
Intellectual Property Right 20
Package Contents 22

Before Using the Handset p.23	• Names and functions • How to view the display • Selecting the menu • Basic operations • FOMA card (UIM) • Attaching/Removing the battery pack • Charging • Turning on the FOMA terminal • Initial setting • Set time • Caller ID Notification, etc.
Voice/Videophone Calls p.47	• Making a voice/videophone call • Switching between voice/videophone calls • Handsfree • Redial/Received calls • Chaku-moji • WORLD CALL • Receiving a voice/videophone call • Volume • Ring volume • Answer hold • Public mode (Driving mode/Power off) • Record message • Videophone settings, etc.
Phonebook p.69	• Add to phonebook • Group setting • Search phonebook • Editing/Deleting phonebook entries • Ring tone/Image • Choku-Den • Data Security Service, etc.
Sound/Screen/Light Settings p.81	• Ring tone • Vibrator • Manner mode • Display setting • Shield view • Backlight • Display design • Changing menu display • Illumination set • Kisekae Tool, etc.
Security Settings p.99	• Security code • PIN code • Dial lock • Omakase Lock • Secret mode • Secret folder • Original lock • Keypad lock • IC card authentication • Side key guard • Self mode, etc.
Camera p.117	• Photo mode • Movie mode • Settings for shooting • Bar code reader • Text reader, etc.
i-mode/i-motion/ i-Channel p.135	• What is i-mode? • Viewing sites • How to view sites and operations • i-mode password • Internet access • Bookmark • Phone To/AV Phone To · Mail To · Web To · Media To • Downloading i-motion • Using i-Channel, etc.
Mail p.155	• What is i-mode mail? • Composing/Sending i-mode mail • Deco-mail • Attaching files • Receiving mails • Check new messages • Replying/Forwarding mails • Saving attached files • Using mail boxes • Mail Setting • Message service • What is Early Warning “Area Mail”? • SMS, etc.
i-αppli p.185	• What is an i-αppli? • Downloading an i-αppli • Launching an i-αppli • Pre-installed software • i-αppli standby screen • Upgrading an i-αppli, etc.

Osaifu-Keitai/ ToruCa p.201	• What is Osaifu-Keitai? • What is iC transfer service? • Using Osaifu-Keitai • What is ToruCa? • Acquiring ToruCa • Viewing ToruCa • IC card lock, etc.
1Seg p.207	• What is 1Seg? • Channel setting • Viewing 1Seg • Data broadcasting • Booking program/Timer recording • 1Seg settings, etc.
Full Browser p.217	• Displaying website designed for PC • Full Browser settings, etc.
Data Display/Edit/ Management p.223	• Data box • Still image • Movie/i-motion • Playing video • Chara-den • Melody • Kisekae Tool • microSD card • Movable contents • UIM operation • Infrared data exchange/iC communication • Viewing PDF data • Viewing documents, etc.
Music&Video Channel/Music Playback p.267	• What is Music&Video Channel? • Downloading Chaku-Uta-Full® • Playing music • Using playlist • Using the Music Player, etc. * "Chaku-Uta-Full" is a registered trademark of Sony Music Entertainment (Japan) Inc.
Convenient Functions p.281	• Multi access • Multitask • Alarm • Schedule • To Do list • Alarm setting • My profile • Checking Call data • Calculator • Text memo • Dictionary • Earphone/Microphone with switch • Reset settings • Initialize, etc.
Character Entry p.301	• Character entry • 5-touch • Fixed common phrases • Copying/Cutting/Pasting text • Own dictionary • Clear learned • Download dictionary • 2-touch, etc.
Network Services p.311	• Voice Mail service • Call Waiting • Call Forwarding service • Nuisance Call Blocking • Caller ID Request service • Dual Network service • 2in1, etc.
PC Connection p.325	• Data communication available for the FOMA terminal, etc. * The details are described in "Manual for PC Connection" (PDF format) in the provided CD-ROM.
Overseas Use p.331	• WORLD WING • Available overseas service • Checking before using overseas • Making/Receiving a call abroad • NW search mode, etc.
Appendix/External Devices/ Troubleshooting p.339	• Menu function list • Character assignment to dial keys • Symbols/Pictographs/Face marks/Fixed common phrases list • Multi access/Multitask combination patterns • Options/Accessories • Troubleshooting • Software Update • Specifications, etc.
Index/Quick Manual p.395	• Index • Quick Manual • Quick Manual (For Overseas Use)

Feature Preview of the FOMA SO706i

FOMA is the name of DOCOMO's service based on the W-CDMA system approved as one of the global standards for third-generation mobile telecommunication systems (IMT-2000).

i-mode
i-mode is an online service that you can use to send e-mail as well as using the useful information from the i-mode menu site (program) and i-mode compatible website.

●●●●● Features of SO706i ●●●●●

■ i-mode mail/Deco-mail/Deco-mail pictograph →pp.156, 158

In addition to the message body, you can attach pictures or video clips. As the FOMA terminal is compatible with Deco-mail/Deco-mail pictograph, you can change the character color, size, or background color of the message body or insert images or moving pictographs.

■ International roaming →p.332

The FOMA terminal, phone number and mail address you use in Japan are also available overseas (GSM/3G areas). You can use voice call, videophone call, i-mode, i-mode mail, SMS and network services.

■ High-speed communication

The data is received at the maximum speed of 3.6 Mbps and sent at the maximum speed of 384 kbps in the FOMA high speed communication area.

* 3.6M bps and 384K bps are maximum values on technical standards, and the actual communication speed varies depending on the network congestion or environment. When out of FOMA HIGH-SPEED area or connecting to an access point such as mopera incompatible with HIGH-SPEED, data are sent and received at 384K bps max.

■ Mega i-αppli/Chokkan game (touchy-feely game) →p.185

You can automatically receive updated stock prices, weather information, etc., and play games. As the FOMA terminal supports chokkan games, you can enjoy touchy-feely operations when playing games by waving/shaking the handset or talking.

■ Chaku-Uta-Full®/Uta-hodai/Music&Video Channel*/Video clip →pp.272, 267, 151

*: This is a pay service you need to apply for.
You can download the entire track (Chaku-Uta-Full®) and use another service (Uta-hodai) that you can download the entire track as many as you want with fixed monthly charge.
Music&Video Channel is also available, that you can enjoy the music/video programs downloaded by the automatic operation at night time only by setting it beforehand. The FOMA terminal also supports i-motion up to 10M bytes, you can enjoy music clips of the entire track or video clips.

■ Osaifu-Keitai/ToruCa →pp.195, 201

By downloading an Osaifu-Keitai i-αppli, you can transmit electric money from the site into the IC card in your FOMA terminal or check the accountant balance or transaction history. The i-αppli of the DOCOMO credit service "DCMX" is pre-installed in your FOMA terminal. "iC transfer service" is also supported so that you can easily move your IC card data to a new terminal when replacing your FOMA terminal.
ToruCa can be acquired via a reader/writer unit or websites and easily exchanged via mail or Infrared data exchange.

■ Kisekae Tool →p.97

Favorite standby screen or menu screen can be replaced at a time. SO706i enables the change of menu sequence in high use and customization of the menu screen to your favor.

●●●●● Wide variety of functions ●●●●●

Colorful illuminations →p.92

3 lamps, 11 patterns and 20 color combinations offer favorites illuminations.
Time signal can be received using illumination.

Style-Up® panel

Style-Up® panel is adopted. You can enjoy changing the optional panel to your moods.
Also, it is available to download panel-fit Kisekae Tool from "PlayNow" by SO.

"POBox Pro" and handy text entry →p.301

The prediction conversion function "POBox Pro" (Predictive Operation Based On eXample Pro) is installed. Pressing [□] for 1 second or longer moves the candidates in "POBOx" on a line basis and selects a target word. Press and hold the dial keys and you can switch the character assigned to the dial keys consecutively such as "a→b→c→A→B→C→2→…".

Stand-by books →p.89

Flash contents with a difference are preinstalled. Every time you open the standby screen, various information such as bits of knowledge, general knowledge and picture books appear. Select your favorite contents from DATA BOX▶My picture▶Pre-installed and set it to the standby screen for your enjoyment.

Contents useful when traveling overseas →pp.89, 298

Contains Flash content "TALKMAN" useful for foreign language conversation. The content can be downloaded from "PlayNow" by SO. Also contains "地球の歩き方" (Chikyu-no Arukikata) and "世界遺産" (World Heritage) as stand-by books, supporting overseas travel.

Dictionary →p.296

Japanese, English-Japanese and Japanese-English dictionaries are available.

Wide scale display

The approximately 2.8-inch high-resolution display is adopted. This recreates the still images or videos in bright and vivid colors.

Camera →p.117

Use the camera with the effective pixels 2 million (maximum recorded pixels 1.9 million) to take 2M (1,200 × 1,600) pictures.

microSD card →pp.243, 252

Your FOMA terminal supports the microSD card where you can copy data such as phonebook entries, mail messages and images from the FOMA terminal storage and view them on the display.
Connecting the FOMA terminal with PC enables you to use it as a reader/writer for the microSD card.

Full Browser →p.217

You can access websites for PC to view more information.

PDF viewer/Document viewer →pp.261, 263

- With the PDF viewer, you can easily view useful information such as map, catalogue or time table on your i-mode terminal.
- The document viewer allows you to view Microsoft® Word, Microsoft® Excel and Microsoft® PowerPoint files.

Infrared data exchange or Infrared remote control →pp.257, 261

You can exchange data with other FOMA terminals using infrared communication. You can also operate the devices such as a TV which supports the infrared remote control.

Multi access/Multitask →pp.282, 283

You can use voice phone, packet communication and SMS simultaneously (Multi access). You can activate multiple functions and use them simultaneously by switching them (Multitask).

●●●●● Security ●●●●●

Omakase Lock →p.102

You can lock your FOMA terminal if you lost it, and cancel lock on your request. For inquiries, see the back cover of this manual.

* Omakase Lock service is charged. However, it shall be free of charge when you subscribe to this service at the same time or during the period that you suspend the subscription of the FOMA terminal.
* Omakase Lock is a service to lock the FOMA terminal at the subscriber's request. If the subscriber and user are different, the FOMA terminal may be locked on the subscriber's request.

Data Security Service →p.115

Back up the Phonebook and other data on your FOMA terminal at Data Center on the i-mode network to be able to smoothly restore data if you lose your FOMA terminal, etc. You can edit or manage data stored at Data Center using a PC and restore edited data on the FOMA terminal.

* For precautions and usage instructions on "Data Security Service", see "Mobile Phone User's Guide [i-mode] FOMA version". For inquiries, see the back of this manual.
* This is a pay service you need to subscribe to.

●●●●● Wide variety of network services (→p.311) ●●●●●

- Voice Mail (charged)*
- Call Waiting (charged)*
- Call Forwarding (free)*
- Nuisance Call Blocking (free)
- Caller ID Request (free)*
- Dual Network (charged)*
- English Guidance (free)
- Multi Number (charged)*
- 2in1(charged)*

*: You need to apply for.

Mastering the FOMA SO706i!

Send and receive real-time movie while talking
Videophone→p.49

You can talk to the other party seeing images.
Your FOMA terminal is set to emit other party's voice through the speaker by default so that you can start talking immediately when making or answering a call. Furthermore, you can change the call mode from voice to videophone without having to end the call.

* FOMA SO706i does not contain front camera. A substitute image (Chara-den) or rear camera image will be sent to the other party.

Illustrations Dick Bruna
© copyright Mercis bv, 1953-2008
www.miffy.com

Digital terrestrial TV service
1Seg→p.207

Enjoy viewing 1Seg (mobile digital terrestrial TV service).
View subtitles or data broadcast, or record programs you are viewing.
Program booking and timer recording are also supported.

The telop appears on the standby screen when the latest information is distributed
i-Channel→p.153

You can receive news or weather report as graphical information.
You can also select optional channels on the channel list screen to receive rich, detailed information which was created by Flash (more detail→p.140).

* This is a pay service you need to apply for.

Notify the arrival of your phone call with an animation before answering
Chaku-moji→p.55

When calling someone, you can show a message on the screen of the other party's phone. The other party can see your business or feeling from the message before answering the call.

Use 2 phone numbers and e-mail addresses for your FOMA terminal
2in1→p.320

You can separately use 2 phone numbers and 2 mail addresses on your FOMA terminal as if you have 2 terminals. You can manage the data in your FOMA terminal, such as Phonebook, Mail boxes, Dialed calls or standby screen, separately in “A mode” and “B mode”, or all together of A/B mode in “Dual mode”.

* Subscription is required (Charged).

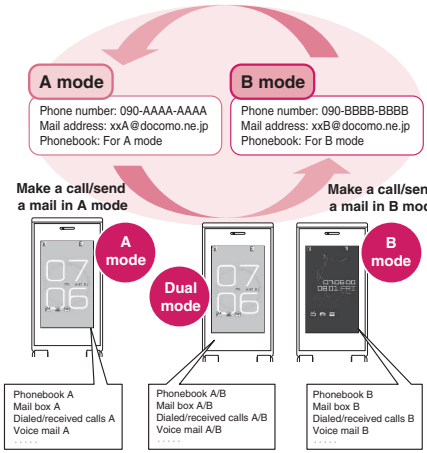

“Napster®” compatible
Music Player→p.277

“Napster®” service provides you of copying songs downloaded from sites or on music CDs to the microSD card using a PC and play music on the FOMA terminal. Since “Chaku-Uta-Full®” is supported, you can download the entire track from an online music distribution site to play it. Other functions include BGM playback, which allows you to listen to music while you use other functions, display of album cover images and lyric sheets, and creation of the playlist on the FOMA terminal. You can also play the i-motion and use Music&Video Channel that downloads the specified program automatically during the night.

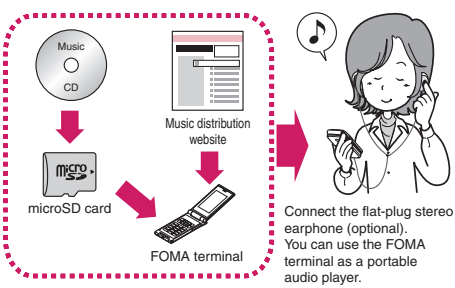

Set display design simultaneously
Kisekae Tool/Direct Menu→p.97

Installed “ダイレクトメニュー” (Direct menu) allows you to access often-used functions/services easily. Menus are categorized into 4 and located vertically and horizontally. “LAST10” button is located at the center and automatically displays 10 previously-used functions/services. The 5 categories link to the multi-function key, and are easy to memorize and operate.

- : SERVICES (Mail, i-mode, i-αppli, Full Browser, Osaifu-Keitai, 1Seg, etc.)
- : TOOLS (Alarm, Caluculator, Text memo, Schedule, Receive Ir data, etc.)
- : SETTINGS (Settings, Network services, My profile)
- : DATABOX (My picture, etc.)
- : LAST10 (10 previously-used menu items appear)

* Functions are stored at the time of purchase.

Menus

Precautions
(ALWAYS FOLLOW THESE DIRECTIONS)

■ To ensure that you use your FOMA terminal correctly, read the Precautions carefully before use. Keep this manual after reading for future reference.

■ The precautions must be observed at all times since they contain the information intended to prevent the bodily injuries or the damage to the property.

■ The following symbols indicate the different degrees of injuries and damage that may occur if the information provided is not observed and the FOMA terminal is used incorrectly:

⚠ DANGER	Indicates that the death or serious bodily injury may result directly and immediately from the improper use.
⚠ WARNING	Indicates that the death or serious bodily injury may result from the improper use.
⚠ CAUTION	Indicates that the bodily injury and/or damage to the property may result from the improper use.

■ The following symbols indicate the specific directions:

Don't	Indicates that it is prohibited.
No disassembly	Indicates that it must not be disassembled.
No wet hands	Indicates that you must not touch it with your wet hand.
No liquids	Indicates that it must not be used near the water, which means that you must not wet it.
Do	Indicates that you must do it following the instructions.
Unplug	Indicates that you must unplug the power code from the outlet.

■ Safety Precautions are explained in the following categories:

1. Handling the FOMA terminal, Battery Pack, Adapter (including the Charger) and FOMA card (UIM) (Common) 12
2. Handling the FOMA terminal 13
3. Handling the Battery Pack 15
4. Handling the Adapter (including the Charger) 16
5. Handling the FOMA card (UIM) 17
6. Handling Mobile Phones near Electronic Medical Equipment 17

1. Handling the FOMA terminal, Battery Pack, Adapter (including the Charger) and FOMA card (UIM) (Common)

⚠ DANGER

Don't

Do not use, keep or leave the devices in locations subject to high temperatures, such as near the fire or heater, in direct sunlight or inside a car on a hot day.
This may cause the battery pack to leak, overheat, explode or ignite, cause the devices to malfunction or be deformed, or suffer performance loss and a reduced service life. Also, this may cause a part of the case to become hot and burn you.

No disassembly

Do not disassemble or rebuild. Also, do not solder the devices.
This may cause fire, injury, electric shock or malfunction.
This also may cause the battery pack to leak, overheat, explode or ignite.

No liquids

Do not wet the devices.
Exposing the FOMA terminal and other devices to liquids such as water or pet urine may cause overheating, electric shock, fire, malfunction, injury, etc. Be careful where and how you use the devices.

Do

Use the battery pack and adapter (including the charger) specified by NTT DOCOMO for the FOMA terminal.
Using the devices other than those specified by NTT DOCOMO Group may cause the FOMA terminal, battery pack and other devices to leak, overheat, explode, ignite or malfunction.

Battery Pack SO03
Desktop Holder SO11
FOMA AC Adapter 01/02
FOMA DC Adapter 01/02
FOMA AC Adapter 01 for Global use
FOMA Dry Battery Adapter 01
FOMA USB Cable with Charge Function 01/02
FOMA Portable Charging Adapter 01

* For the information on other compatible products, contact a DOCOMO shop or service counter.

⚠WARNING

Don't

Do not place the FOMA terminal, battery pack, adapters (including the charger) or FOMA card (UIM) in cooking appliances such as microwave ovens or in a pressure cooker.
This may cause the battery pack to leak, overheat, explode or ignite, cause the FOMA terminal or adapter (including the charger) to overheat, smoke or ignite, or damage the IC.

Don't

Do not shock or throw the FOMA terminal.
This may cause the battery pack to leak, overheat, explode or ignite, or cause the devices to malfunction or ignite.

Don't

Keep the conductive foreign materials (metal, pencil lead, etc.) away from the charge terminal or external connector. Do not insert those matters inside.
This may result in the short-circuit causing the FOMA terminal to ignite or malfunction.

Do

Turn off the FOMA terminal, when you are near the flammable gas such as at the gas station. Do not also charge. It may cause to ignite to the gas.
Turn off the FOMA terminal, when you use Osaifu-keitai at the gas station (if IC card lock is set, turn the FOMA Terminal off after lock is released).

Do

If you find extraordinary happenings, such as an unusual odor, overheating, discoloration or deformation during the use, charge or storage, make sure to:
1. **Unplug the power code from the power outlet or the cigar lighter outlet.**
2. **Turn off the FOMA terminal.**
3. **Remove the battery pack from the FOMA terminal.**

Continuing to use or charge the FOMA terminal may cause it to overheat, explode, ignite or leak of battery.

⚠CAUTION

Don't

Do not leave the FOMA terminal on a slope or unstable surface.
This may fall the FOMA terminal and cause the injury or malfunction.

Don't

Keep the FOMA terminal away from the humid, dusty or hot places.
This may cause malfunction.

Do

If your child uses the FOMA terminal, instruct him/her how to use it. Make sure that he/she always uses the FOMA terminal correctly as you instruct.
Improper usage could result in the bodily injury.

Do

Keep the FOMA terminal out of young children's reach.
A young child may swallow it or suffer from the injury.

Do

Pay a special attention when you use the FOMA terminal connected to the adapter (including the charger) for a long duration.
If you use i-αppli or videophone or view 1Seg for a long time while charging the FOMA terminal, the temperature of the FOMA terminal, battery pack or adapter (including charger) may rise. If you touch the warm part of these devices for a long period of time, it may cause redness, itch, skin irritation, or burns depending on your constitution or physical condition.

2. Handling the FOMA terminal

⚠WARNING

Don't

Do not direct the infrared data port towards your or another person's eyes.
This may cause the eye injury. Do not aim or direct the infrared data port towards another infrared device as this may interfere with the operation of the device.

Don't

Do not put the FOMA terminal on the dashboard, etc. as a problem may occur due to air bag inflation.
The air bag inflation may cause the FOMA terminal to hit you or another person, which may lead to injury, malfunction, breakage, etc.

Don't

If you are wearing electronic medical equipment, do not put the FOMA terminal in your breast pocket or in the inside pocket.
Using the FOMA terminal in close proximity to electronic medical equipment may cause the equipment to malfunction.

Continued on next page

Do not put fluids such as water or objects such as pieces of metal or flammable materials into the FOMA card (UIM) inserting slots or microSD card slots inside of the FOMA terminal.
Such actions could cause fire, electric shock or malfunction.

Turn off the FOMA terminal in a place where it is prohibited to use the mobile phone, such as in an airplane or in a hospital.
This may affect the electric or medical equipment. If the FOMA terminal is set with the Auto power function, make sure to disable the function before turning off the FOMA terminal. Follow the instructions provided by the medical facility about using the mobile phone.
If you use the phone in an airplane, which is prohibited, you may be punished by law.

Make sure to hold the FOMA terminal off your ear and keep enough distance from it when you talk in the handsfree mode. When you also play games or music with an earphone-microphone connected to the FOMA terminal, adjust the volume properly.
If the volume is too high, it may cause an auditory disturbance.
Also, it may cause an accident if you have difficulty in hearing the sound of your surroundings.

If you have a weak heart, take precautions when setting the Vibrator or Ring volume.
This may affect your heart.

If you hear thunder while using the FOMA terminal outdoors, immediately turn off the FOMA terminal and take shelter in a safe location.
There is a risk of being struck by the lightning and suffering an electric shock.

Turn off the FOMA terminal near the electric equipment using the high-precision control or weak signals.
This may interfere with the operation of sensitive electronic equipment.

* Take great care on the following electric devices:

Hearing aids, implantable cardiac pacemakers, implantable cardioverter-defibrillators, and other electronic medical equipment, fire alarms, automatic doors and other equipment controlled by electronic signals.
If you use an implantable cardiac pacemaker, implantable cardioverter-defibrillator or other electronic medical equipment, contact the respective manufacturer or vendor to check whether the operation of the equipment is affected by radio waves.

If the display or camera lens is broken, be careful of the broken glass and the inside of exposed FOMA terminal.
The surface of the display or camera lens is covered by a plastic panel to minimize the possibility of glass scattering. However, touching the broken or exposed parts cause the injury.

⚠CAUTION

Do not swing the FOMA terminal by its strap or other parts.
The FOMA terminal may strike you or others around you, resulting in body injury, malfunction or damage to the FOMA terminal or other property.

When you use the motion tracking, be sure to confirm surrounding safety, grasp the FOMA terminal firmly and do not swing the FOMA terminal more than the necessity.
Motion tracking is a function to operate the FOMA terminal by inclining and shaking it. It hits the person and others because of the shake too much, and there is a possibility of causing a serious accident and damage.

With metallic straps or other metallic objects in the FOMA terminal and applying the motion tracking, be sure to not hit the person or others.
It causes injury, malfunction or breakage.

Do not let the FOMA terminal come close to or sandwich magnetic cards, etc. between the FOMA terminal.
The magnetic data stored on cash cards, credit cards, telephone cards, floppy disks, etc. may be erased.

Do not let the FOMA terminal come close to magnetism.
If strong magnetism is brought close, operation may fail.

If the display is broken and the liquid crystal leaks, do not take it in, draw it in or put it on your skin.
If the liquid crystal comes into your eyes or mouth, immediately rinse your eyes or mouth with clean water and see a doctor.
If the liquid crystal adheres to your skin or clothing, immediately wipe it off with alcohol and rinse it off with water and soap.
It may cause a loss of eyesight or damage your skin.

When the FOMA terminal plays the ring tone or plays a melody, do not bring the speaker close to your ear.
It may cause a hearing defect.

Do

In some types of vehicle, using the FOMA terminal in the vehicle may interfere with the operation of the vehicle's electronic equipment.
Do not use the FOMA terminal if the terminal may impair the safe driving.

Do

Using the FOMA terminal may cause skin irritations such as itch, rashes or eczema. If this occurs, immediately stop using the FOMA terminal and see a doctor.
Metal components are used for the following parts.

Parts	Material	Finish
Multifunction key	PC resin	Aluminum deposition + UV coating
Sidekeys		
Illumination parts		Tin deposition + UV coating
Camera parts	ABS resin	Tin deposition + UV coating
Hinge parts	Nickel	Chromium plating
Charging terminal (contact terminal for desktop holder)	Phosphorus bronze	Nickel + Gold plate

Do

Take care not to pinch your finger or strap when opening or folding the FOMA terminal.
It cause injury or breakage.

Do

When viewing 1Seg programs, keep a proper distance from the display in a bright place.
Failure to observe this precaution may cause visual deterioration.

3. Handling the Battery Pack

■ **Refer to the information shown on the battery pack label to check the type of battery pack you have.**

Display	Battery type
Li-ion00	Lithium-ion

⚠DANGER

Don't

Do not let wire or other metals touch the terminal. Also, do not carry or store the battery pack with metallic necklaces, etc.
This may cause the battery pack to leak, overheat, explode or ignite.

Don't

If you have difficulty in attaching the battery pack to the FOMA terminal, do not use the excessive pressure to force the battery into place. Check that the battery pack is facing in the correct direction before you try to attach it.
This may cause the battery pack to leak, overheat, explode or ignite.

Don't

Do not throw the battery pack into a fire.
This may cause the battery pack to leak, overheat, explode or ignite.

Don't

Do not puncture the battery pack, hit it with a hammer or step on it.
This may cause the battery pack to leak, overheat, explode or ignite.

Do

If battery fluid comes into your eyes, do not rub your eyes but immediately rinse your eyes with clean water and see a doctor.
This may result in loss of eyesight.

⚠WARNING

Don't

If a battery pack malfunction is found due to an external shock such as deformation or damage by a fall, immediately stop using the FOMA terminal.
This may cause the battery pack to leak, overheat, explode or ignite, or cause the devices to malfunction or ignite.

Do

If the battery pack is not fully charged after the specified charging time has elapsed, stop charging.
This may cause the battery pack to leak, overheat, explode or ignite.

Do

If the battery pack leaks or emits an unusual odor, stop using it immediately and move it away from any flame or fire.
The battery fluid is flammable and could ignite, causing a fire or explosion.

Do

Be sure that your pet doesn't bite to the battery pack.
This may cause the battery pack to leak, overheat, explode or ignite, or cause the devices to malfunction or ignite.

⚠CAUTION

Don't

Do not dispose of used battery packs with ordinary garbage.
This causes a fire and constitute an environmental hazard. Apply insulation tape to the terminal of used battery pack and return it to a DOCOMO shop or service counter, or dispose the battery pack in accordance with your local regulations.

Continued on next page

Do not charge the wet battery pack.
This causes the battery pack to overheat, ignite, or explode.

If battery fluid comes into contact with your skin or clothing, stop using the FOMA terminal immediately and rinse it off with clean water.
Battery fluid is harmful to your skin.

4. Handling the Adapter (including the Charger)

⚠WARNING

Do not use the adapter (including charger) of which the cord or power cord is damaged.
This may cause electric shock, overheat or fire.

Do not use the AC adapter or desktop holder in humid locations such as bathroom.
This may cause an electric shock.

The DC adapter must be used only for vehicles with a negative ground. Do not use the adapter in positively grounded vehicles.
This may cause a fire.

Do not touch the FOMA terminal, adapter (including charger) when you hear a crash of thunder.
There is a risk of being struck by the lightning and suffering an electric shock.

Do not short-circuit the charging terminal when the adapter or charger is plugged to the power outlet or the socket in a vehicle. Also, do not let the charging terminal contact with your body (hand, finger, etc.).
This may cause fire, malfunction, electric shock or injury.

Place the charger or desktop holder on a stable surface during charging. Also, do not cover or wrap the charger or desktop holder with clothing or bedding.
This may cause the FOMA terminal to fall out of the charger or heat to build up, resulting in a fire or malfunction.

Do not put heavy objects on the power cord of the adapter (including charger).
This may cause electric shock or fire.

Do not touch the power cords of the adapter (including charger) or the power outlet with wet hands.
This may cause an electric shock.

Use the specified power supply and voltage.
Using the adapters with incorrect voltage may cause a fire or malfunction. Use the AC adapter for global use to charge the terminal overseas.
AC adapter: AC 100V
DC adapter:
DC12V/24V (specific to vehicle with negative ground)
AC Adapter for global use:
100V to 240V AC (should be plugged to AC power outlet for home use only)

If the fuse in the DC adapter blows, always replace it with the specified type of fuse.
Using the unspecified fuse may cause a fire or malfunction.
Refer to the respective manuals for the information on the specified fuse.

Wipe off any dust on the plug.
This may cause a fire.

When plugging the AC adapter into a power outlet, make sure that no metallic straps or other metallic objects are caught between the plug and the socket.
This may result in an electric shock, short-circuit or fire.

Always grasp the plug when unplugging the adapter or charger from the power outlet or cigar lighter socket. Do not pull the cord itself.
Pulling the cord may damage the cord and cause an electric shock or fire.

Unplug the power code from the power outlet when it will be left unused for a long period.
This may cause electrical shock, fire or malfunction.

If any water or other liquid gets into the adapter or charger, immediately unplug it from the power outlet or socket.
This may cause an electric shock, smoke emission or fire.

Unplug the adapter or charger from the power outlet or cigar lighter socket before cleaning.
This may cause an electric shock.

5. Handling the FOMA card (UIM)

⚠CAUTION

Do

Be careful about a cut surface when dismounting the FOMA card (UIM) (IC part).
This may injure your hands or fingers.

6. Handling Mobile Phones near Electronic Medical Equipment

■ **The following precautions conform to the guidelines drawn up during the Electromagnetic Compatibility Conference Japan, regarding how to protect electronic medical equipment from radio waves emitted by mobile phones.**

⚠WARNING

Do

Observe the following in hospitals or other medical facilities:

- Do not take your FOMA terminal into operating rooms, ICUs (Intensive Care Units) or CCUs (Coronary Care Units).
- Turn off your FOMA terminal inside hospital wards.
- Turn off the FOMA terminal even if you are in a hospital lobby when electronic medical equipments are in use nearby.
- If a medical facility gives specific instructions prohibiting you from carrying or using mobile phones, follow those instructions.
- If the FOMA terminal is set with the Auto power function, make sure to disable the function before turning off the FOMA terminal.

Do

Turn off the FOMA terminal in crowded places such as rush-hour trains in case somebody nearby is using an implantable cardiac pacemaker or implantable cardioverter-defibrillator.
Radio waves may affect the operation of implantable cardiac pacemakers or implantable cardioverter-defibrillators.

Do

If you use an implantable cardiac pacemaker or implantable cardioverter-defibrillator, keep the FOMA terminal at least 22 cm away from the devices.
Radio waves may affect the operation of implantable cardiac pacemakers or implantable cardioverter-defibrillators.

Do

If you use the electronic medical equipment other than implantable cardiac pacemakers or implantable cardioverter-defibrillators out of the medical facility due to the home treatment, etc,, consult the respective manufacturers for the information about the effects of radio waves on the equipment.
Radio waves may affect the operations of the electronic medical equipment.

Handling with Care

General Notes

- **Do not water the devices.**
  The FOMA terminal, battery pack, adapter (including the charger) and the FOMA card (UIM) are not water-proof. Do not use them in humid locations such as bathrooms, and avoid exposing them to rain. If you carry your FOMA terminal close to your skin, sweat may cause internal components to corrode and result in a malfunction. If the problem is found to be due to moisture, it will not be covered by the warranty and in some cases may be irreparable. Even if it can be fixed, you will be charged since the damage is not covered by the warranty.
- **Wipe with a soft, dry cloth (such as a cloth for glasses).**
  - The surface of the FOMA terminal's LCD has a specific coating to improve the visibility of the color display. Rubbing the LCD of the FOMA terminal with a dry cloth to clean it may scratch the LCD surface. Handle the FOMA terminal carefully and clean it using a soft dry cloth (of a type used for eyeglasses). The LCD coating may peel off or stain if moisture or soiling is left on the surface for a long period.
  - Never use chemicals such as alcohol, thinners, benzene or detergents as these agents may erase the printing on the FOMA terminal or cause discoloration.
- **Occasionally clean the connection terminals with a dry cotton bud.**
  Soiled connection terminals may result in poor connections and loss of power. Also, as it may cause insufficient charging, clean the terminal with a dry cloth or cotton bud when it is dirty.
- **Do not place the FOMA terminal near an air conditioning vent.**
  Condensation may form due to rapid changes in temperature, and this may cause internal corrosion and malfunction.
- **Do not apply an excessive pressure or weight to the FOMA terminal and battery pack.**
  Do not put the FOMA terminal in a bag filled with many objects or in the hip pocket of clothing as you sit down. This may result in faults or damage to the LCD, other internal components or battery pack. When an external device is connected to external connector, it may cause connecting breakage or malfunction.
- **Read the separate manuals supplied with the FOMA terminal, adapter and charger carefully.**
- **Do not scrabble the display with metallic objects.**
  This may cause scratch, malfunction or damage.

Handling the FOMA Terminal

- **Avoid using the FOMA terminal in extremely high or low temperatures.**
  Use the FOMA card (UIM) within a temperature range between 5°C and 35°C with humidity between 45% and 85%.
- **Using the FOMA terminal close to ordinary phones, TVs or radios may affect the operation of such devices. Use the FOMA terminal away from such devices.**
- **It is your responsibility to keep a separate record of all data stored on your FOMA terminal.**
  Under no circumstances shall NTT DOCOMO be liable for any loss or damage to the data stored on your FOMA terminal.
- **When connecting an external device to the external connector (Earphone/microphone terminal), do not plug inclined in the connector or pull the code.**
  This may cause malfunction or damage.
- **Do not fold the FOMA terminal with its strap caught between the folding parts.**
  This may cause malfunction or damage.
- **It is normal for the FOMA terminal to become warm while being used or charged. It is not a malfunction and you can keep on using.**
- **Do not leave the camera exposed to direct sunlight.**
  This may discolor or burn the element.
- **Usually fit the external connector cap and microSD card slot cap before use.**
  Failing to fit these covers may cause the FOMA terminal to malfunction due to the dust or water getting in.
- **Do not use FOMA terminal when the back cover is removed.**
  This may cause of removing the battery pack, malfunction or damage.
- **Do not put a sticker with an extreme thickness, etc. on the face of the display or keys.**
  This may cause malfunction.
- **Do not remove the microSD card or turn off the FOMA terminal when using the microSD card.**
  Otherwise, loss of data or malfunction may result.

Handling the Battery Pack

- **The battery pack is consumable.**
  If the battery pack does not work for enough time even when it is fully charged, it is time to exchange it. Exchange it for a specified new battery pack.
- **Charge the battery pack within the proper ambient temperature range (5°C to 35°C).**
- **Make sure to charge the battery when you use the FOMA terminal for the first time or if you have not used it for a long period of time.**

- **The available operating time of the battery pack depends on the conditions in which you use it and the condition of the battery pack itself.**
- **When the life of the battery pack is near end, the battery pack may expand a little according to the usage condition, but this is not a malfunction.**
- **Do not keep or leave the battery pack empty.**
  The performance and life of the battery pack may be deteriorated.

Handling the Adapter (including the Charger)

- **Charge the battery pack within the proper ambient temperature range (5°C to 35°C).**
- **Do not charge the battery pack in the following places:**
  - In a humid, dusty or shaky place
  - Near your home phone, TV or radio
- **It is normal for the adapter or charger to become warm while being charged. It is not a malfunction and you can keep on using.**
- **Do not use the DC adapter to charge the battery pack when the car engine is not running.**
  This may drain the car battery.
- **If you use an electrical outlet with a disconnection prevention mechanism, follow the instructions of the user's manual of the outlet.**
- **Do not shock the adapter or charger. Do not deform the charging terminal.**
  This may cause malfunction.

Handling the FOMA card (UIM)

- **Do not apply unnecessary force to attach or remove the FOMA card (UIM).**
- **It is normal for the FOMA card (UIM) to become warm while being used. It is not a malfunction and you can keep on using.**
- **The warranty does not cover damage caused by inserting the FOMA card (UIM) into some other type of IC Card reader/writer.**
- **Always keep the IC part clean.**
- **Wipe with a soft, dry cloth (such as a cloth for glasses).**
- **It is the user's responsibility to keep a separate record of all data stored on your FOMA card (UIM).**
  Under no circumstances shall NTT DOCOMO be liable for any loss or damage to the data stored on your FOMA terminal.
- **To preserve the environment, take discarded FOMA card (UIM) to a DOCOMO shop or service counter.**
- **Avoid using the FOMA card (UIM) in extremely high or low temperatures.**
- **Do not damage, scratch, touch imprudently, or short circuit the IC.**
  Otherwise, loss of data or malfunction may result.
- **Be careful not to drop the FOMA card (UIM) or apply an impact to it.**
  This may cause malfunction.
- **Do not bend the FOMA card (UIM) or place a heavy object on it.**
  This may cause malfunction.
- **Do not attach the FOMA card (UIM) to the FOMA terminal with a label or sticker is pasted.**
  This may cause malfunction.

Handling the FeliCa Reader/Writer

- **The FeliCa reader/writer function of the FOMA terminal uses very weak radio waves that require no licensing of radio stations.**
- **The 13.56MHz frequency band is used. If there is another reader/writer around, keep enough distance between the FOMA terminal and that reader/writer. Also, make sure that there is no radio equipment using the same frequency band nearby.**

Caution

- **Do not use the altered FOMA terminal. Using the altered device is a violation of the Radio Law.**
  The FOMA terminal is certified to conform to technical regulations for specified radio equipments that are based on the Radio Law, and "Technical Conformity Mark (R)" is affixed on the model name seal as the certification. If you remove the screw and alter inside of the FOMA terminal, the technical regulations conformity certification becomes invalid. Do not use the FOMA terminal with the certification invalid, as it is a violation of the Radio Law.
- **Be careful when you use the FOMA terminal while driving a vehicle.**
  The penalty is imposed on using a mobile phone while driving. Unwillingly receiving a call, use handsfree mode to tell the caller that you will call back, then stop the car in a safe place before using the phone.
- **Use the FeliCa reader/writer function in Japan.**
  The FeliCa reader/writer function of the FOMA terminal complies with radio standard in Japan. You may be punished if you use it overseas.
- **Use the IC card authentication function in Japan.**
  The IC card authentication function of the FOMA terminal complies with radio standard in Japan and is certified. You may be punished if you use it overseas.

Intellectual Property Right

Copyright and Portrait Right

It is prohibited to duplicate, modify or publicly transmit content such as text, images, music or software that was photographed using the FOMA terminal or downloaded from Internet website and that is subject to third-party copyright without the permission of the copyright folder, except where the duplication or quoting of the content for personal use is permitted under copyright law.
It may be prohibited to shoot or record the stage performance, entertainment or exhibition even if it is for personal use.
Shooting a photo of someone by the FOMA terminal without his or her permission, or displaying a photo of someone shot by the FOMA terminal on the website without his or her permission is a breach of portrait right.

Trademarks

- "FOMA", "mova", "i-mode", "i-αppli", "i-αppli DX", "i-motion", "Deco-mail", "Chaku-motion", "Chara-den", "ToruCa", "mopera", "mopera U", "WORLD CALL", "Dual Network", "FirstPass", "visualnet", "V-live", "i-Channel", "DCMX", "iD", "Security Scan", "i-shot", "i-motion mail", "i-area", "Short Mail", "WORLD WING", "Public mode", "DoPa", "sigmarion", "musea", "IMCS", "OFFICEED", "2in1", "FOMA" logo, "i-mode" logo, "i-αppli" logo, "ToruCa" logo, "DCMX" logo, "iD" logo and "HIGH-SPEED" logo are trademarks or registered trademarks of NTT DOCOMO, INC.
- Free Dial logo mark is a registered trademark of NTT Communications Corporation.
- "Catch Phone (Call waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- McAfee® is registered trademarks or trademarks of McAfee, Inc. and/or its affiliates in the US and/or other countries.
- G-GUIDE, G-GUIDE MOBILE and their logos are registered trademarks in Japan of U.S. Gemstar-TV Guide International, Inc. and/or its affiliates.
- Powered by JBlend™ Copyright 2002-2008 Aplix Corporation.
  All rights reserved.
  JBlend and JBlend-related trademarks are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.
- is a registered trademark of FeliCa Networks, Inc.
- The microSD logo is a trademark.
- "Multitask" is a registered trademark of NEC Corporation.
- "Ericle", "deco-e maker", "Style-Up", "Stand-by books", "Shield View", and "My Shortcut" are trademarks or registered trademarks of Sony Ericsson Mobile Communications Japan, Inc.
- "PlayNow" is a trademark of Sony Ericsson Mobile Communications AB.
- "TALKMAN" is a registered trademark of Sony Computer Entertainment, Inc.
- "地球の歩き方" (Chikyu-no Arukikata; Globe-Trotter) is a registered trademark of Diamond-Big Co., Ltd.
- "POBox" and "POBox Pro" are trademarks or registered trademarks of Sony Corporation.
- QuickTime is a registered trademark of Apple Inc., in the US and other countries.
- Microsoft®, Windows®, Windows Media® and Windows Vista® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- "Napster" is a registered trademark of Napster, LLC. and/or its affiliates in the US and/or other countries.
- QR code is a registered trademark of Denso Wave Inc.
- Java and all Java-related trademarks and logos are trademarks or registered trademarks of US Sun Microsystems, Inc. in the United States and other countries.
- Powered By Mascot Capsule®/Micro3D Edition™ MASCOT CAPSULE® is a registered trademark of HI CORPORATION.
- The other company names and brand names described in this manual are trademarks or registered trademarks of the respective companies.

Others

- This product is licensed complying with MPEG-4 Visual Patent Portfolio License, and you are permitted to use personally and for the nonprofit purpose in the following situations:
  - To record a movie based on the standard of MPEG-4 Visual (MPEG-4 Video)
  - To play MPEG-4 Video recorded by the consumer engaged in the nonprofit activities
  - To play MPEG-4 Video provided by the provider licensed by MPEG-LA

  When you use it for other purposes, such as promotion, in-house information and profit activity, contact the U.S. corporation MPEG LA, LLC.
- FeliCa is a contactless IC card technology developed by Sony Corporation. FeliCa is a registered trademark of Sony Corporation.
- POBox technology has been developed by Sony Computer Science Laboratories, Inc. and Sony Ericsson Mobile Communications Japan, Inc.

- Contains Adobe® Flash® Lite™ and Adobe® Reader® LE technology by Adobe Systems Incorporated.
  Adobe Flash Lite Copyright© 2003-2007 Adobe Systems Incorporated. All rights reserved.
  Adobe Reader LE Copyright© 1993-2007 Adobe Systems Incorporated. All rights reserved.
  Adobe, Adobe Reader, Flash and Flash Lite are registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- Content owners protect copyrighted intellectual properties by WMDRM (Windows Media digital rights management) technology. This product uses the WMDRM software to access WMDRM-protected contents. If the WMDRM software is unable to protect contents, the content owners request Microsoft to disable the WMDRM function of the software for playing or copying protected contents. No contents other than protected ones are affected by disabling the function. Please note that, if downloading the license to use protected contents, Microsoft may include the revocation list in the license. Content owners may request upgrading of the WMDRM software when you access the contents. If rejecting the upgrade, contents requiring the upgrade cannot be accessed.
- This product contains NetFront Browser and NetFront Sync Client of ACCESS CO., LTD. ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan, the United States and other countries.
  Copyright© 2008 ACCESS CO., LTD. All rights reserved.
- This product contains the module developed by Independent JPEG Group.
- This product contains NetFront Document Viewer as a document viewer function by ACCESS CO., LTD.
  ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and/or other countries.
- IrSimple™, IrSS™ or IrSimpleShot™ are trademarks of Infrared Data Association®.
- This product is equipped with IrFront by ACCESS CO,. LTD. as the infrared data exchange function.
  Copyright© 1996-2008 ACCESS CO., LTD.
  ACCESS and IrFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and/or other countries.
- Dialog Clarity and WOW technologies are industrialized based on the license from SRS Labs, Inc.
  Dialog Clarity, SRS, WOW and the symbol are trademarks of SRS Labs, Inc.
- This product contains software licensed complying with GNU General Public License (GPL), GNU Lesser General Public License (LGPL), etc. For more details, see “readme.txt” in the “GPL・LGPL等について” folder on the bundled CD-ROM. (“readme.txt” is only available in Japanese version.)
- This product is equipped with NetFront DTV Profile Wireless Edition as data broadcast BML browser by ACCESS CO., LTD.
  This product is equipped with Media:/media colon as broadcast content activation function by ACCESS CO., LTD.
  Copyright© 1996-2008 ACCESS CO., LTD.
  ACCESS, NetFront and Media:/media colon are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and/or other countries.
- This product is equipped with the font “FontAvenue” product by NEC Corporation.
  FontAvenue is a registered trademark of NEC Corporation.
- “Google” and “Google Maps For Mobile” are trademarks of Google, Inc.
- © ATR-Trek Co.,Ltd.
- This product is equipped with GestureTek technology.
  Copyright© 2006-2008, GestureTek, Inc. All Rights Reserved.

Description of Windows

- In this manual, each OS (Japanese Edition) is described as follows:
  - Windows Vista stands for Windows Vista® (Home Basic, Home Premium, Business, Enterprise, Ultimate).
  - Windows XP stands for Microsoft® Windows® XP Professional operating system or Microsoft® Windows® XP Home Edition operating system.
  - Windows 2000 stands for Microsoft® Windows® 2000 Professional operating system.

Package Contents

<Main Components>

FOMA SO706i
(Including the warranty and Back Cover SO12)

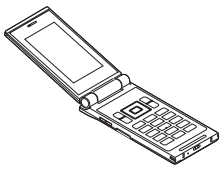

Manual for FOMA SO706i
(This manual)



* The Quick Manual starts on p.408.

CD-ROM for FOMA SO706i

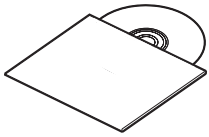

* This CD-ROM contains the PDF files of "Manual for PC Connection" and "Kuten Code List".

Battery Pack SO03

<Optional Equipment>

FOMA AC Adapter 01/02
(Including warranty and manual)

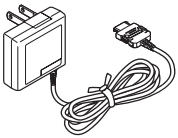

Desktop Holder SO11
(Including manual)

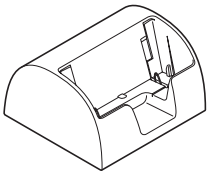

Other options and accessories→p.363

Before Using the Handset

Component Names and Functions 24
Display 27
Menu Selection 29
Changing the Main Menu 33
Basic Operations on the Screens 34
Description of the Operations 36
Function Menu 37
Setting the FOMA Card (UIM) 39
Attaching/Removing the Battery Pack 41
Charging 41
Checking the Battery Level ..... Battery level 44
Turning the FOMA Terminal On/Off ..... Power ON/OFF 44
Switching Between Japanese and English ..... Select language 45
Setting the Default ..... Initial setting 45
Setting the Clock 45
Notifying the Other Party of Your Phone Number ..... Caller ID Notification 46
Checking Your Own Phone Number ..... My Profile 46

Component Names and Functions

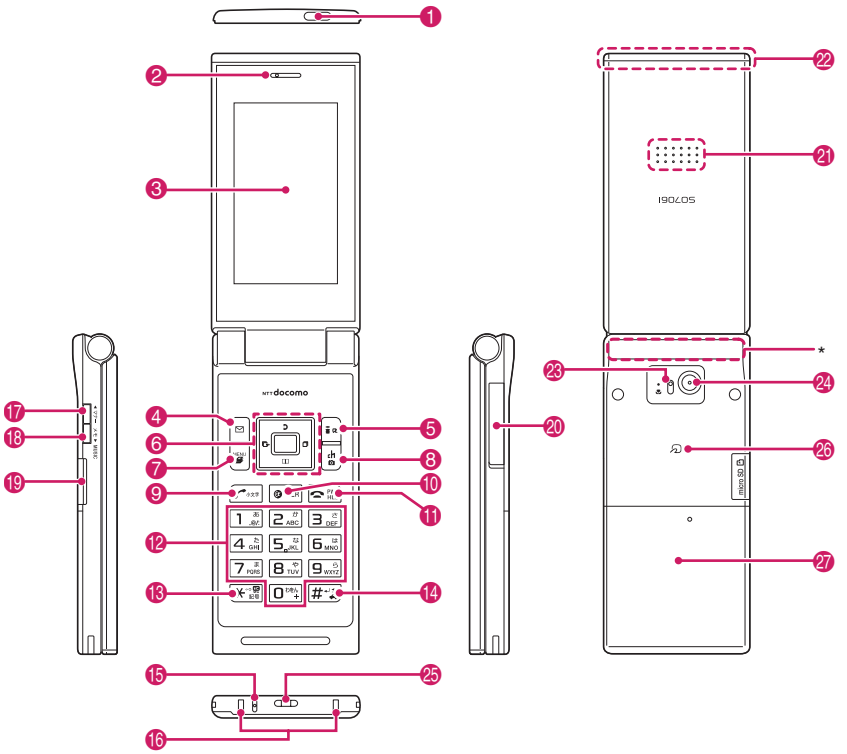

* : The Antenna of the FOMA terminal is built-in.

■Functions

❶ Infrared data port→p.257

❷ Earpiece

❸ Display

❹ Function key 1

- Performs the function displayed (principally the FUNC menu)→p.32
- Displays the mail menu

❺ Function key 2

- Performs the displayed function→p.32
- Displays the i-mode menu
- Makes videophone calls→p.48
- Switches the character type when entering characters→p.306

❻ Multi-function keys

/

- Moves the cursor or the displayed contents, etc. up or down (scrolls continuously when the key is held down)
- : Displays Choku-Den→p.78
- : Displays the phonebook

/

- Moves the cursor to the left or right
- Scrolls the display to the previous or next screens by pages→p.34
- : Displays the Received calls record→p.53
- : Displays the Redial→p.53

■
- Performs the function displayed (“Select” or “Set”, mainly) →p.32

7 MENU Function key 3
- Performs the function displayed→p.32
- Displays the main menu/Simple Menu →pp.29, 33
- Displays the task change screen→p.283

8 ch Function key 4
- Performs the function displayed→p.32
- Displays the i-Channel list

9 Send key
- Makes voice calls→p.48
- Receives voice/videophone calls→p.59
- Switches the entered character into upper or lower case→p.306

10 CLR Back (Clear) key
- Undoes the last step in the operation→p.35
- Puts a call on hold→p.62
- Deletes the entered phone number or characters→pp.48, 307

11 Power/End of operation/Hold key
- Turns on the power (1 second or longer)/turns off the power (2 seconds or longer)→p.44
- Ends each function→p.35
- Ends a call→p.49
- Puts an incoming call on hold→p.62

12 0 to 9 Dial keys
- Enters phone numbers, characters and numbers

13 ✳ key
- Sets the IC card lock (1 second or longer) →p.206
- Enters “✳” or dakuten/handakuten/kutoten →p.306

14 #/Public mode (Driving mode) key
- Sets Public mode (Driving mode) (1 second or longer)→p.62
- Enters “#” or the line feed “↵”→p.306
- Returns to the previous reading in 5-touch →p.306

15 Mouthpiece/Microphone

16 Charging terminal

17 (▲マナー) Volume up key
- Sets Manner mode (1 second or longer)→p.86
- Raises the earpiece volume during a call→p.61
- Scrolls back the display to the previous screens by pages→p.34
- Connects to the site set as “Home URL”→p.148

18 (▼メモ) Volume down key/MUSIC
- Lowers the earpiece volume during a call→p.61
- Scrolls the display to the next screens by pages →p.34
- Reads out the current time (Voice clock)→p.64
- Plays recorded messages→p.65

19 microSD card slot
- Used to insert the microSD card→p.244

20 External connecter
- Connects an AC adapter (optional), DC adapter (optional), FOMA USB Cable with Charge Function 01/02 (optional) or Earphone Plug Adapter for External connector terminal (optional)* etc.

* : Connects the flat-plug stereo earphone set (optional) or the flat-plug earphone/microphone with switch (optional), etc.

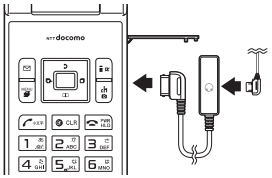

21 Speaker (mono)

22 Illumination lamp
- Flashes in the set color when a call/mail arrives →p.92
- Flashes when there is a missed call/new mail →p.92
- The center lamp lights in red while charging →p.44
- The center lamp flashes in red during shooting mode→p.119
- The center lamp flashes in blue while the auto timer is activated→p.119

23 Lens selector switch
- Switches ● (Standard)/ (Macro) for the camera→p.118

24 Camera
- Shoots still images and movies
- Shoots the movie of scenery during videophone calls

25 Through-hole for strap

26 FeliCa mark
- Reads the IC card→p.203
- iC communication→p.259

27 Back cover

*** (▲マナー) and (▼メモ) are referred to as side keys in this manual.**

Functions that involve holding down keys for 1 second or longer

The functions available by holding down each key for 1 second or longer in the standby screen are as follows:

Key	Function	Ref. page
[Received]	Displays the Received address list.	p.177
[Sent]	Displays the Sent address list.	p.177
[2]	Switches the Shield view.	p.90
[5]	Turns the display light on/off.	p.90
[7]	Displays the font setting screen.	p.93
[8]	Sets 2in1.	p.320
[0]	Enters “+”.	p.51
[#]	Sets/Releases Public mode (Driving mode).	p.62
[*]	Sets/Releases IC card lock.	p.206

Key	Function	Ref. page
[Volume]	Adjusts the earpiece volume.	p.61
(▲マナー)	Sets/Releases Manner mode.	p.86
(▼メモ)	Activates the Music Player and Quits it when playing BGM.	p.280
[Mail]	Check new messages	p.164
[i]	Displays the i-αppli software list screen.	p.187
[ch]	Activates the function set in “Holding down ch-key” (Default: The Photo mode screen appears)	pp.118, 284
[CLR]	Clears the advising shortcut icons.	p.95

Display

- The symbols (such as , , , etc.) displayed on the screen are referred to as icons.
- A calendar, etc. can be set to the display.→p.89

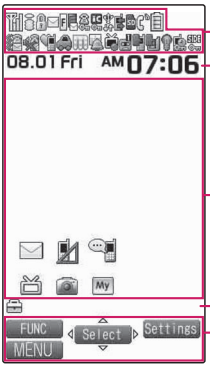

The status of the FOMA terminal is indicated with icons in this area→p.27

Clock display→p.93

Shortcut icon display area
- etc. : Advising shortcut icons→p.94
- etc. : Pasted shortcut icons→p.94

(1Seg), (Photo mode) and (My selection) are the default settings.

Task icon display area
- etc. : Task icons of the activated functions→p.283

Function /i-Channel ticker display area→pp.32, 153

Icons that indicates the status of the FOMA terminal

Display

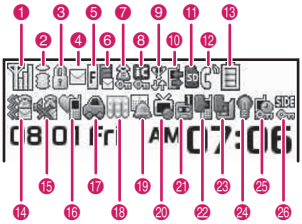

Icon	Description
❶	Signal strength→p.44
	Out of service area/Radio wave does not reach→p.44
self	Self mode→p.115
❷	i-mode/i-mode communication in progress→p.136
	Packet communication in progress (no data exchange/sending/receiving)*
	Packet communication in progress (sending/receiving)*
❸	SSL-compatible page displayed →p.138

Icon	Description
❹ (Red)	Unread mail/Inbox is full→p.163
	SMS in the FOMA card (UIM) is full →p.254
	Unread mail/SMS in the FOMA card (UIM) is full→pp.163, 254
(Red)	Inbox is full/SMS in the FOMA card (UIM) is full→pp.163, 254
	Unread Area Mail→p.181
❺ R/R (Red)	Unread MessageR/Full→p.179
F/F (Red)	Unread MessageF/Full→p.179

Continued on next page

	Icon	Description
❺		Unread message R and F (in red when each of them is full)→p.179
❻	(Red)	Mail kept at the i-mode Center/Full →p.164
		"Receive option setting" is set to "ON" and a mail is kept at the i-mode Center→p.164
	(Red)	MessageR kept at the i-mode Center/Full→p.179
	(Red)	MessageF kept at the i-mode Center/Full→p.179
❼		Dial lock→p.101
		Secret mode/Secret data only mode→p.103
	/	Original lock/Original lock released temporarily→pp.106, 107
	/	Secret mode or Secret data only mode and Original lock is set or released temporarily→pp.103, 106
❽		IC card lock→p.206
❾	/	microSD mode/MTP mode set→p.251
	/ /	USB cable connected and Communication mode/microSD mode/MTP mode set→p.251
	/ /	Handsfree compatible device connected and Communication mode/microSD mode/MTP mode set→pp.59, 251
	/ /	USB cable/Handsfree compatible device connected and Communication mode/microSD mode/MTP mode set→pp.59, 251
❿		Infrared data exchange in progress →p.257
		Infrared remote control operated →p.261
		IC card authentication in progress →p.111
		iC communication in progress (sending/receiving data)→p.259
⓫		microSD card inserted→p.244
		microSD card (invalid) inserted →p.244

	Icon	Description
⓫		microSD reader/writer operated →p.252
		microSD being accessed→p.247
⓬		During a voice call→p.48
		64K data communication in progress*
		During a videophone call→p.48
		Switching between voice call and videophone call→pp.50, 60
⓭		Battery level→p.44
⓮		Vibrator→p.84
⓯		Ring volume set to "Silent"→p.61 Mail/Msg. ring time is set to "OFF" →p.85
⓰		Manner mode→p.86
⓱		Public mode (Driving mode)→p.62
⓲		Music&Video Channel program reservation set→p.269
⓳		Alarm notification function→p.289
⓴		1Seg timer recording→p.214
㉑	to	Voice mail message→p.312
㉒	to	Record message→p.64
㉓	to	Record VP message→p.64
㉔		Display light set to "OFF"→p.90
		Shied view set to "ON"→p.90
		Shield view set to "ON", backlight set to "OFF"→p.90
㉕		Keypad being locked/standby (Timer set)→p.110
㉖		Side key guard set to "ON"→p.112

* : For details on the icons, refer to the "Manual for PC Connection" (PDF format) in the provided CD-ROM.

NOTE

- The display adopts state-of-the-art technology; some dots (points) may not light up while others may constantly light up due to its characteristics. Note that this phenomenon is not a failure.
- You can check the name of the displayed icons by selecting "SETTINGS"▶"Display"▶"Icons description".

Menu Selection

You can run, set, and check the FOMA terminal's functions in a variety of ways. There are various methods of the rest though the method of selecting the function from the main menu is general.

Selecting functions from the main menu

You can select the functions of the FOMA terminal from the main menu displayed by pressing MENU in the standby screen. The menus are sorted by function. →p.340

<Example: To set "Setting when folded">

1 Press MENU on the standby screen to display the main menu

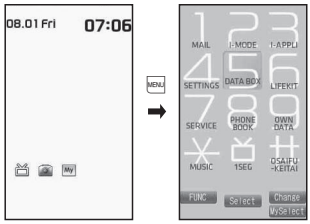

Tip

If you do not press any key for 15 seconds while the main menu is displayed, the main menu is turned off and returns to the previous screen.

2 Use ⊕ to move the highlight, then press ■ (Select) to select the displayed menu sequentially

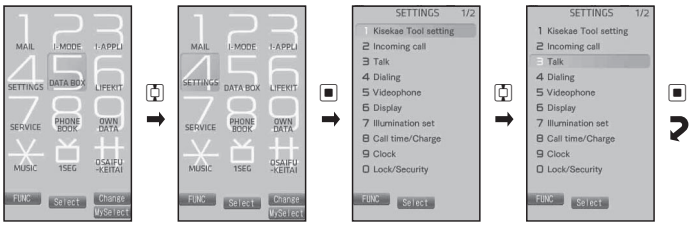

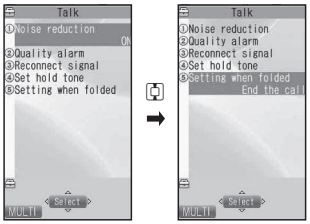

The highlighted item is displayed in two lines and the current setting is displayed.

Tip

Holding down ⊕ moves the highlight in sequence.

Accessing functions with the function keys

On each screen, you can access functions easily by pressing the function keys pre-assigned to the function.

1 Press the function key on the standby screen

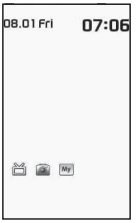

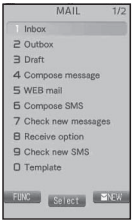

Pressing ✉ displays the mail menu. →p.156

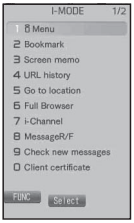

Pressing i displays the i-mode menu. →p.136

Pressing ch displays the Channel list. →p.153

Pressing 📋 displays the Choku-Den screen. →p.78

Pressing 📒 displays the phonebook list screen. →p.73

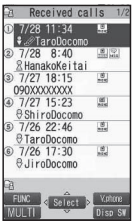

Pressing 📞 displays the Received calls screen. →p.53

Pressing 📞 displays the Redial screen. →p.53

NOTE

- When using the Simple Menu (p.33), pressing ✉ or i on the standby screen displays the Simple Menu's Mail menu or i-mode menu.

Searching menu items to access functions

Even if you do not know the procedure to access the menu, you can still access the desired function by entering key words to search menu items.

<Example: To access “Select ring tone”>

1 Press MENU on the standby screen, then press ✉ (FUNC), and highlight “Search”, then press ■ (Select)

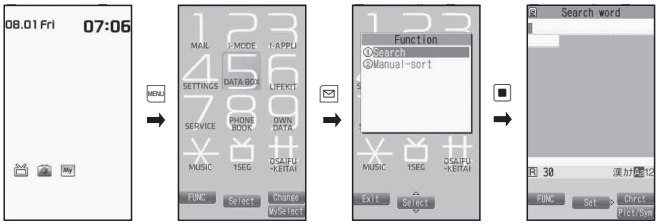

2 Enter “ring” and press ■ (Set), then select the displayed menu

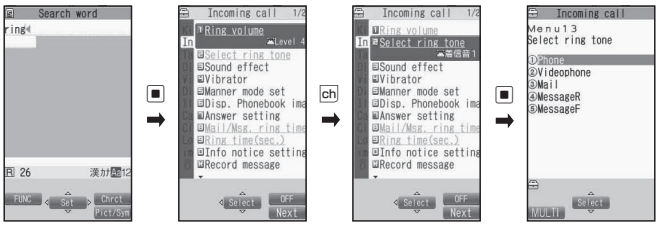

The search result is displayed with an underline.

If there are two or more search results, press ch (Next) to move the frame.

Selecting functions from My select

By storing your frequently used functions (p.92), you can access the menus easily.

1 Press MENU on the standby screen to display the main menu, then press ch (MySelect) in sequence

Pressing ch switches between the main menu and My select.

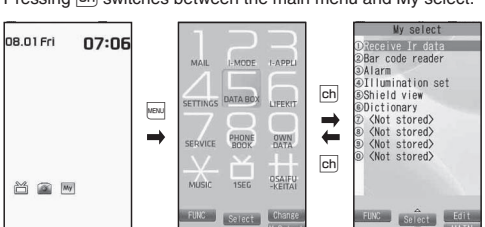

Accessing functions by selecting menu numbers

When the main menu is set to “Standard Menu” (p.33), you can access functions quickly by pressing the keys pre-assigned to the menu numbers (p.340).

<Example: To access “Select ring tone”>

1 Press MENU on the standby screen, then press 1 3 in sequence

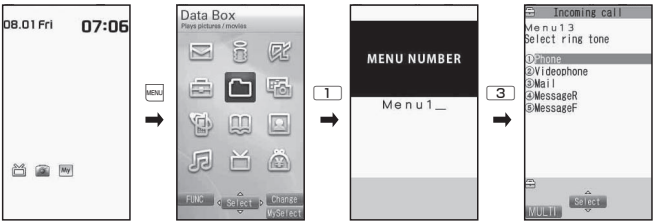

How to use the function keys

The operation icons (Function display) corresponding to ✉, ■, ▮, MENU, ch and the direction icons corresponding to ✣ are displayed on the screen. Only when the corresponding keys can be used, those icons are displayed.

■ Performing the functions assigned to the function key

Press the key for ❶ to ❺, the function is activated.

❶ includes (FUNC), (Exit), etc.
When the FUNC key is displayed, press ✉ to show the function menu.
→p.37

The center of ❷ includes (Select), (Set), (Play), (Dial) etc.

❸ includes (Edit), (Finish), (Chrct) etc.

❹ includes (MENU) and (MULTI).

❺ includes (ch), (Change), (Ir data), (Pict/Sym) etc.

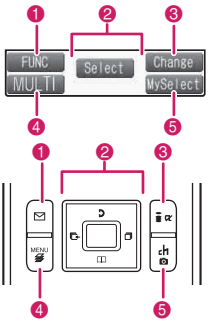

■ Moving or scrolling the screen

Press ✣ in the direction you want to scroll.

[Notation]

■ Description of the function display

In this manual, operations related to the keys for the function display are generally described with the function display in the parenthesis, such as ■ (Select) and ✉ (FUNC).

Changing the Main Menu

You can change the design of the main menu (style for background or icon, etc.) as you want.

- When you change the design of the menu display using Kisekae Tool, the menu structure may change in accordance with frequency of using functions. Also, you cannot access some functions entering the menu number assigned to the functions. In this case, change the main menu to “Standard Menu” (p.33) or perform “Reset menu op. log” (p.91) so as to operate as described in this manual.

1 Press [MENU] on the standby screen, then press [i] (Change) in sequence

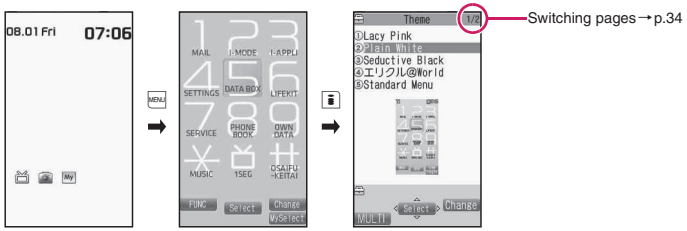

Main Menu　　Theme

2 Select an item

“Lacy Pink” to **“Standard Menu”**

Switches the display design in each menu. When set to “Standard Menu”, you can access functions by entering the menu numbers.→p.32

“Large Menu”

Large-font menu appears.

“Simple Menu”

Simple Menu consists of frequently used menus, and its character size is large and operation procedure is simple.→p.349

Sets the character size of the screens to “X-large” all at once. →p.93

Simple Menu

“Original theme”→p.91

You can change the icons and background image used on the main menu. You can also set the picture you shot as the background.

“Kisekae Tool”→p.97

You can change various design of the FOMA terminal such as the main menu all at once with the Kisekae Tool package.

■ Changing the Main Menu temporarily

Highlight an item on the theme screen and press [i] (Change) to change the main menu temporarily. When the main menu is displayed again, the main menu before it sets is displayed.

NOTE

- When you set the menu that supports the user customizing, you can sort the menu items by selecting “Manual-sort” by pressing [✉] (FUNC) in the main menu.→p.284

[Notation]

■ Description of the main menu

The menu name may be different depending on the selected theme of Menu display set. Steps are described using default settings when the phone color is platinum white.

①MAIL	②I-MODE	③I-APPLI	④SETTINGS
⑤DATA BOX	⑥LIFEKIT	⑦SERVICE	⑧PHONEBOOK
⑨OWN DATA	⑩MUSIC	⑪1SEG	⑫OSAIFU-KEITAI

Basic Operations on the Screens

● When items appear in multiple pages

1 Press [▷] to display other pages

To switch the page, press [◁] (or [ ] (▲マナー)) for the previous page and press [▷] (or [ ] (▼メモ)) for the next page.

Current page/Total pages

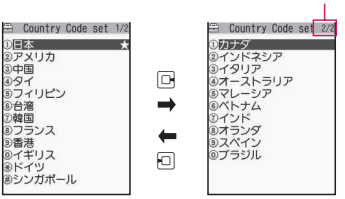

■ To display other pages using [ ]

Pressing [ ] displays the previous page when the highlight is located at the top of the list, and pressing [ ] displays the next page when the highlight is located at the bottom of the list.

● Using the dial keys to select items

1 Press [1] to [9] [0] [*] [#] corresponding to the menu numbers

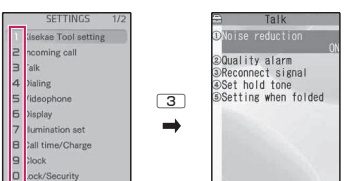

The number corresponding to the dial key

● Selecting “YES/NO” or “ON/OFF”

1 Press [ ] to move the frame, then press [■] (Select)

● To display images in 9 images display

1 Press ⊕ to move the frame, then press ■ (Disp.)

● Entering a security code

1 Enter the 4 to 8 digit security code, then press ■ (Set)

The numbers of the entered security code is displayed as "_".
The detail screen of the function is displayed when the security code is successfully entered.

■ **If the entered security code is incorrect**

A message notifying that the security code is wrong is displayed. Re-enter the security code from the beginning.

● Entering numbers

1 Enter numbers by pressing 0 to 9



To enter a 1-digit number or 2-digit number in a 3-digit number entry screen, press 0 twice or once before entering a number.

■ **To enter "3"**

▶0 0 3

● To cancel operations, and to return to the standby screen

■ CLR

Press CLR to cancel the last operation, such as when you select wrong menu item. Though the previous screen appears basically, another screen may appear depending on the function.

■ ☎

Press ☎ to complete operations such as settings and to return to the standby screen. Though the function is completed and the standby screen appears basically, another screen may appear depending on the current displayed screen and function. If you press ☎ during setting operation, the setting operation is canceled and the standby screen reappears.

Description of the Operations

In this manual, instructions for menu operations are briefly described in almost all cases as follows:

The example of description of operations and the actual operations



①: Press MENU on the standby screen.
②: Press ⊕ to move the highlight to the menu in the double quotation mark, then press ■ (Select).
③: Press ⊕ to move the highlight to the item in the double quotation mark, and then press ■ (Select).
Or, press 1 to 9 0 * # for the menu number in the double quotation mark.
④: Press ⊕ to move the highlight.
⑤: Press the key for the function displayed in parentheses.

[Notation]

■ Omission of ■ in the “Select” and “Set” operations

- When a target function is selected from the main menu or list, such as example ② and ③, ■ (Select) is omitted.
- In the cases such as “Select an item” or “Enter your security code”, ■ (Select) and ■ (Set) are omitted in the same way.
- When you are supposed to move to the next step without pressing ■ (Select), “Highlight xxx” is used, such as example ④.

■ Easy operations are preferred

- Though the operation of the main menu has been described, this manual gives priority to the operations by short cut keys operations (p.30).
- If you select the menu from the Simple Menu, refer to “Simple Menu function list” (p.349).

■ Omission of the descriptions after completing the operations

- The descriptions for the operations after completing the function are omitted.
- “To cancel operations, and to return to the standby screen”→p.35

■ Brief description of keys and menus

- In this manual, instructions for key illustrations/menu displays/holding down keys are simply described as follows:

	Key	Menu display	Holding down keys
Actual display/operation	1	Menu	Press and hold down # for 1 second or longer
Description in this manual	1	iMenu	# (1 second or longer)

Function Menu

“Function Menu” is one of the menus of the FOMA terminal that can be accessed from the function display. The function menu activates supplementary functions of each screen.
For example, you can use the function menu to delete a mail after reading it, or to select the folder to save an image you shot with the camera.

● How to use the function menu

There are mainly three ways to use the function menus. Use the appropriate method depending on the situation.

① Refer to the explanation of the function menu items from the reference page stated with the operation screen.
② Refer to the explanation of the function menu items from the function menu index.
③ Find the procedure to display the operation screen from the reference page of the function menu.

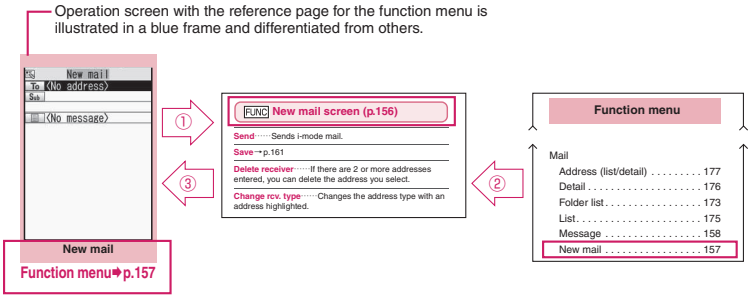

* “Function menu item” and “Function menu index” in the above illustration are only excerpts.

● Operation target on the list screen

In the function menu on the list screen, either data highlighted in the list or all the data in the list is targeted by the function. For example, “Edit title” or “Delete this” targets a highlighted title or data, and “Delete all” targets all the data.
When you select a function menu which targets one data in the list, such as “Edit title” or “Delete this”, highlight the data, then press [✉] (FUNC).

<Example: To edit the bookmark title on the list screen>

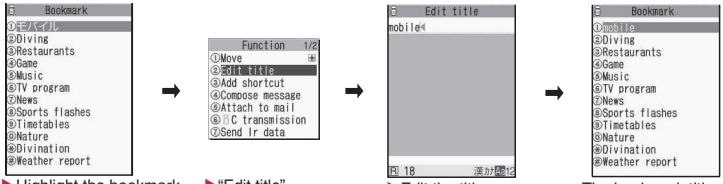

About multiple-choice

When you delete unnecessary data, protect important data or move the data you do not want to be viewed by others to the secret folder, etc., you can select not only one data or all data but also multiple data. In this case, perform the following operation.

<Example: To delete multiple mail on the received mail list screen>

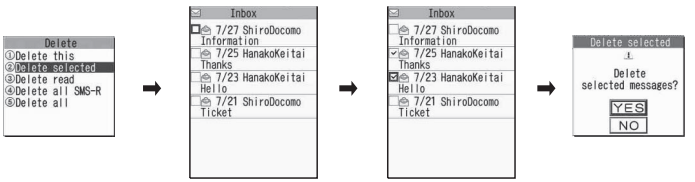

▶"Delete selected" ▶Check mails to delete ▶[i] (Finish) ▶"YES"

Marking a checkbox

When you use [⊹] to move the frame to the item to select and press [●] (Select), the checkbox changes from ☐ to ☑. This means that the item is selected. Pressing [●] (Select) switches between ☐ and ☑. In the images display, ☑ appears when the item is selected. Nothing appears when unselected.

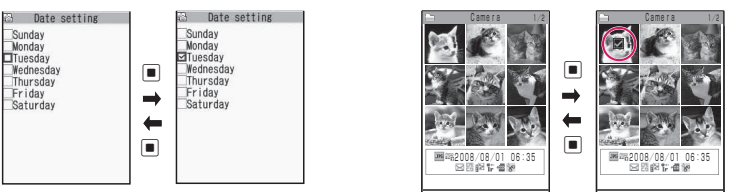

- When "FUNC" appears on the function display area, pressing [✉] (FUNC) allows you to use "Select all" or "Release all".

Menus which switch alternately

Depending on the menu, menu items switches alternately as follows:

<Example 1>

When normal font is set



<Example 2>

When large font is set



When the Phonebook detail screen is displayed in "Set normal font" mode, "Set large font" appears as in <Example 1>. If "Set large font" is selected, the font mode changes to large font mode, and "Set normal font" appears next time the function menu appears.

[Notation]

■ Description of the menus which switch alternately

Such menus are described as "**Set large font⇔Set normal font**".

NOTE

- When the displayed menu contains sub menus, "[⊹]" appears on the right.
- The displayed contents of the function menu may vary or you may not be able to select the item of function menu depending on the operating function and settings. The function menu items you cannot select are displayed in gray.

Setting the FOMA Card (UIM)

The FOMA card (UIM) is an IC card that contains private information such as your phone number. Before inserting or removing the FOMA card (UIM), first turn the power off and remove the battery pack. →p.41
Note also that when you try to insert or remove the FOMA card (UIM), keep the FOMA terminal folded and held in your hand.

● Attaching/Removing the FOMA card (UIM)

The illustration shows how to attach the FOMA card (UIM).

1 Put the FOMA card (UIM) into the card inserting slot with the IC side downward as shown in the illustration

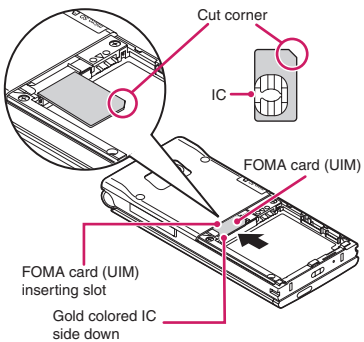

2 Insert the FOMA card (UIM) until it is fixed

To remove the FOMA card (UIM), carefully pull it out straight from the following status.

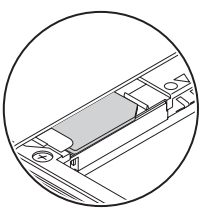

Properly inserted

Security codes

You can set two security codes of PIN1 code and PIN2 code for the FOMA card (UIM). →p.100

FOMA card security function

The FOMA terminal incorporates the FOMA card security function (FOMA card operational restriction function) to protect your data and files.

- When you download data or files from sites or receive data attached to mails, the FOMA card security function is automatically set to these data and files.
- Data and files with this function set are accessible only when the same FOMA card (UIM) used when downloading these data or files is used.
- Target data and files for the FOMA card security function are as follows:
  - File attached to i-mode mail (except for ToruCa)
  - Screen memo
  - Image inserted into Deco-mail or signature
  - i-αppli (including i-αppli standby screen)
  - Image (including the animation and Flash movie)
  - Melody
  - Word/Excel/PowerPoint data
  - Image of ToruCa (detail)
  - Image downloaded from the Data Security Center
  - Program of the Music&Video Channel
  - Movable contents data
  - i-motion
  - Chara-den
  - Chaku-Uta®*/Chaku-Uta-Full®
  - PDF data
  - Kisekae Tool
  - Record VP message
  - Template including data to protect
  - Download dictionary
  - MessageR/F with attached file (melody/image)

  * : “Chaku-Uta” is a registered trademark of Sony Music Entertainment (Japan) Inc.
- The FOMA card (UIM) that was inserted when you downloaded or received data or files is referred to as “your FOMA card (UIM)” and other FOMA cards as “other FOMA card (UIM)” hereinafter.

Continued on next page

When the inserted FOMA card (UIM) was used to download data or receive mails, you can view or play the data that applies to the FOMA card security function.

When the inserted FOMA card (UIM) was not used to download data or receive mails, you cannot view or play the data that applies to the FOMA card security function.

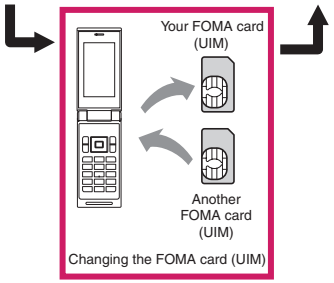

Changing the FOMA card (UIM)

NOTE

- If the FOMA card (UIM) is not attached or you replace the FOMA card (UIM) with another one, "" is attached to data and files with this function set and you cannot set these data to "Display setting" or "Select ring tone".
- Data and files with this function set are only can be moved and deleted with other FOMA cards (UIM).
- If you remove the FOMA card (UIM) or change to other FOMA card (UIM) when data or a file with this function set is set to "Display setting" or "Select ring tone", these settings are reset to the default settings. When your FOMA card (UIM) is inserted again, the settings return to your settings.

Settings for replacing the FOMA card (UIM)

When you replace the FOMA card (UIM) inserted to the FOMA terminal with other FOMA card (UIM), the following settings are changed:

- Functions of which settings are changed to settings stored on the newly inserted FOMA card (UIM)
  - Select language
  - SMS center selection
  - SMS validity period
  - PIN setting
  - Host selection of i-mode common set
- Functions that are reverted to the default setting
  - i-Channel setting
  - Access setting for Full Browser
- Functions that are set to "Invalid"
  - Cookie settings for Full Browser (Cookie information is kept)
- Functions of which current settings of the FOMA card (UIM) become invalid
  - Program setting of the Music&Video Channel (Set the program again)

FOMA card (UIM) type

The FOMA card (UIM) (blue) has the following functional differences from the FOMA card (UIM) (green/white).

Function	Blue	Green/White
Max number of digits for phone number to be stored in the FOMA card (UIM) phonebook	20 digits	26 digits
User certificate operation to use FirstPass	Not available	Available
WORLD WING	Not available	Available
Service Numbers	Not available	Available

WORLD WING

WORLD WING is DOCOMO's FOMA international roaming service that you can make or receive a call with your proper phone number even oversea using your FOMA terminal with the FOMA card (UIM) (green/white) and supporting services.

- For the customers who have subscribed to the FOMA service on September 1, 2005 or after, a separate subscription is not necessary. However, customers who declared that they did not require this service at the FOMA service subscription or who unsubscribe from this service need a separate subscription.
- For the customers who have subscribed to the FOMA service on August 31, 2005 or before without subscribing to "WORLD WING", a separate subscription is necessary.
- This service is not available in some payment plans.
- In case the FOMA card (UIM) (green/white) is lost or stolen in overseas, contact to DOCOMO as soon as possible and take the course of service interruption. Refer to the back of this manual for the inquiries numbers. Note that you are charged for the call and communication even after the FOMA card (UIM) (green/white) is lost or stolen.

Attaching/Removing the Battery Pack

- Make sure to turn the FOMA terminal off before removing the battery pack. Note also that keep the FOMA terminal folded and held in your hand.

Attaching

1 Remove the back cover

Pressing the back cover in direction ①, slide it in direction ② to remove the back cover.

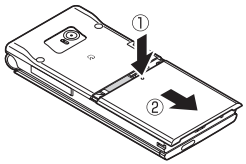

2 Attach the battery pack

With the "A" side of the battery pack facing up, attach the battery pack in direction ③ making sure that the "▲" mark of the battery pack fits the "▲" mark of the FOMA terminal (Phone), then press the battery pack down in direction ④.

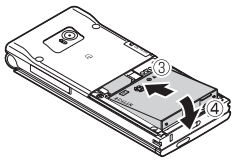

3 Attach the back cover

Lift the back cover about 3 mm and fit the back claws in the groove of the FOMA terminal (Phone). Pressing the back cover in direction ⑤, slide it in direction ⑥ and press the back cover until the catch clicks shut.

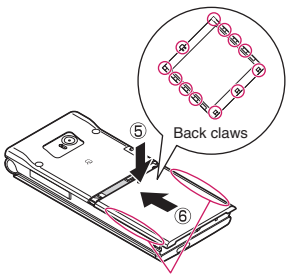

Make sure that there is no space between the Back cover and the FOMA terminal (Phone).

Removing

1 Remove the back cover

2 Remove the battery pack

Press the tab on the side of the battery pack in direction ①, then lift upwards in direction ② to remove the battery pack.

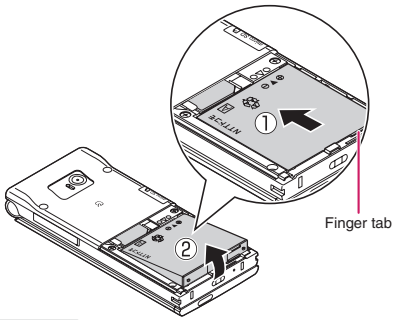

NOTE

- Do not use excessive force when the tip of the back cover is inserted into the FOMA terminal. The finger tab of the back cover may be broken.

Charging

Use the specified Battery Pack SO03 for the FOMA terminal.

■ Battery pack life

- The battery pack is consumable. The amount of usable time decreases every time the battery pack is recharged.
- When a fully charged battery pack only lasts half as long as it did at the time of purchase, the battery pack life is almost over, so it is recommended to replace it with a new one. When the life of the battery pack is near end, the battery pack may expand a little according to the usage condition, but this is not a malfunction.
- The battery pack life may be shortened if i-αppli or videophone is used or 1Seg is viewed for a long time while charging.

Li-ion00

To protect the environment, take used battery packs to NTT DOCOMO, the agency, the recycle shop, etc.

Continued on next page

■Battery pack charging

- For details, refer to the manuals for the FOMA AC Adapter 01/02 (optional), FOMA AC Adapter for Global Use 01 (optional) and FOMA DC Adapter 01/02 (optional).
- FOMA AC Adapter 01 supports voltage of 100V AC only.
- FOMA AC Adapter 02 and FOMA AC Adapter 01 for Global Use support voltage from 100V AC to 240V AC, but the plug shape of the AC adapter is for 100V AC (domestic). For overseas use, the compatible conversion plug adapter is required. Do not charge the battery using the transformer for travel.
- When charging the battery pack, the battery pack must be attached to the FOMA terminal.
- You can receive calls during charging if the FOMA terminal is turned on. However, the battery level will fall during the call and the time required for charging will increase. Charging time also increases when “Charging” of “Backlight” setting is set to “All time ON”.
- When plugging in or out the connector, do it slowly and securely not to apply an excessive force.
- When you make a call or perform packet communication during charging in a high-temperature environment, the FOMA terminal’s temperature may rise and the charging may be stopped. If this occurs, stop a running function and wait for the temperature or the FOMA terminal to fall before you retry charging.

■Do not charge the battery pack for a long period of time (several days) with the FOMA terminal turned on

- If you charge the battery pack for a long period of time with the FOMA terminal turned on, power to the FOMA terminal will be supplied from the battery pack once charging ends. As a result, you will only be able to use the FOMA terminal for a short time and the low-voltage alarm may sound immediately. In this case, recharge the battery pack correctly. Disconnect the FOMA terminal from the AC adapter (or desktop holder) or DC adapter, then set it again for recharging.

■Battery usage rough time (The duration varies depending on the charging time and the deterioration of the battery pack)

Continuous Standby Time	
[FOMA/3G]	Stationary (“Auto”*): Approx. 580 hrs. In transit (“3G”*): Approx. 430 hrs. In transit (“Auto”*): Approx. 360 hrs.
[GSM]	Stationary (“Auto”*): Approx. 290 hrs.

Continuous Talk Time	
[FOMA/3G]	Voice communications: Approx. 220 min. Videophone: Approx. 100 min.
[GSM]	Voice communications: Approx. 190 min.
1Seg Viewing Time	
Normal: Approx. 280 min.	ECO mode: Approx. 350 min.

* : To switch networks, use “3G/GSM setting” (p.336).

- The continuous standby time in stationary is the average usage time when the FOMA terminal is folded and standing still while radio waves can be normally received.
- The continuous standby time in moving is the average usage time when the FOMA terminal is folded under condition of “stationary”, “moving”, and “out of service area” within the area where radio waves can be normally received.
- Note that the actual continuous talk/standby time and 1Seg viewing time may decrease by as much as half depending on the following conditions: the battery pack charging level, the function settings, ambient environment such as temperature, the status of radio waves (out of service area or weak radio waves). It may shorten the talk (communication)/standby time to make i-mode communication, compose i-mode mail, transfer data, execute multi access, activate i-αppli or i-αppli standby screen, use camera, play movie/i-motion/music and view 1Seg.
- Depending on the network condition of the country, talk (communications) and standby time may decrease.
- When using in Japan, talk (communications) and standby times will be longer if “3G/GSM setting” (p.336) is set to “3G”.

Charging the battery pack with the AC/DC adapter

■AC adapter (optional)

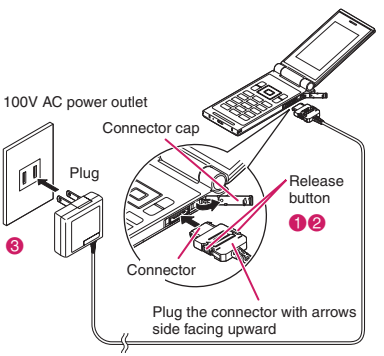

FOMA AC Adapter 01/02

■**DC adapter (optional)**

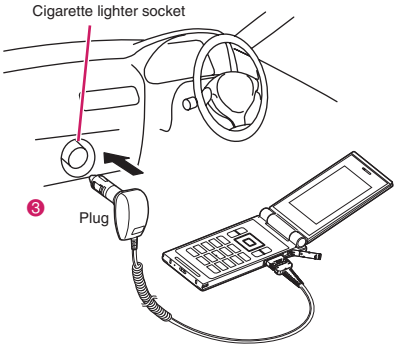

FOMA DC Adapter 01/02

1 Open the external connector cap of the FOMA terminal

2 Plug the AC/DC adapter connector horizontally into the FOMA terminal's external connector

3 Plug the AC adapter into the outlet
Plug the DC adapter into the cigarette lighter socket in your car
Charging starts.

Standard charging time
Approx. 120 min.

4 When charging is completed, remove the AC adapter/DC adapter connector horizontally from the FOMA terminal while pressing the release button
Do not pull the connector with excessive force because this may cause a malfunction.

5 Unplug the AC adapter from the outlet
Unplug the DC adapter from the cigarette lighter socket in your car

6 Close the external connector cap of the FOMA terminal

Charging the battery pack with the desktop holder

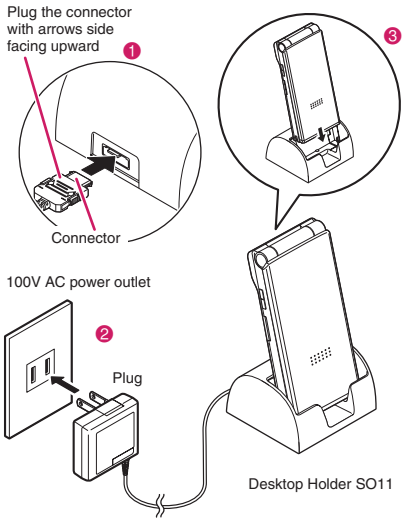

FOMA AC Adapter 01/02

1 Plug the connector of the AC adapter (optional) horizontally to the terminal on the back of the desktop holder (optional)

2 Plug the AC adapter into the outlet

3 Hold down the desktop holder and place the FOMA terminal securely in the direction of the arrow

Standard charging time
Approx. 120 min.

4 After charging is completed, hold down the desktop holder, then lift the FOMA terminal up in the direction of the arrow

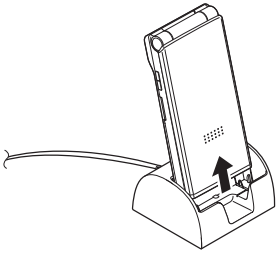

Continued on next page

NOTE

- The center illumination lamp lights up in red during charging. The charge lamp turns off when charging ends (Full charge). If the FOMA terminal is turned on, "" flashes during charging and "" lights when charging ends.
  You can set illumination for charge start/end. →p.92
- The battery pack cannot be charged separately. Always charge the battery pack while it is attached to the FOMA terminal.
- If the battery runs out, the center illumination lamp may not lights up right away, but the charging itself has started.

<AC adapter/DC adapter>

- When the center illumination lamp of the FOMA terminal (Phone) and "" on the display disappears, and the message "Charge unusual Stop charge" is displayed, disconnect the FOMA terminal from the AC adapter or DC adapter and remove the battery pack. Then set them again for recharging. If the same error occurs again, there may be a problem or fault on the AC adapter or DC adapter. Contact a DOCOMO shop or service counter.
- The DC Adapter uses a 2A fuse. If the fuse (2A) blows, always use a fuse with the same specifications. Fuses (2A) are consumable items. Purchase a replacement fuse at your local car accessory shop, etc.

<Desktop holder>

- Attach the FOMA terminal to the desktop holder securely. Also, take care not to pinch the strap.

Checking the Battery Level <Battery level>

The battery level is indicated only as a guide.

Checking the battery level with icon

When the FOMA terminal is turned on, the icon indicating the remaining battery level is displayed.

: Full charge.

: Partial charge.

: The battery is almost running out. Recharge the battery.

Checking the battery level with sound and animation

The current battery level is indicated by sound and animation.

1 MENU ▶"SETTINGS"▶"Other settings"▶"Battery level"

The check screen is displayed, and beeps sound in accordance with the level. The battery level animation disappears in about 3 seconds.

"3 short beeps" : Full charge.
"2 short beeps" : Partial charge.
"1 short beep" : The battery is almost running out. Recharge the battery.

When the battery runs out

The screen as shown on the left appears and the low-voltage alarm sounds. The alarm sounds for about 10 seconds and the power is turned off in about 1 minute. To stop this alarm, press any key (except for side keys).

NOTE

- The recharge battery screen and 3 short beeps sound during a voice call and the recharge battery screen ("カメラオフ Camera Off" message to the other party) appears during a videophone call to notify. Note that the call will be disconnected in about 20 seconds and the power turns off in about one minute.

Turning the FOMA Terminal On/Off <Power ON/OFF>

Turning the FOMA terminal on

- Before turning the FOMA terminal on, make sure that the FOMA card (UIM) is inserted correctly.

1 (1 second or longer)

After Wake-up screen appears, the standby screen or initial settings screen appears. If you have just attached the battery pack or you turn the FOMA terminal back on immediately after turning it off, "Wait a minute" message may appear for a short time.

■ **When "" appears**

You are outside the FOMA service area or in a place where radio waves do not reach. Move to a place where the radio reception level icon such as "" appears. The reception level is displayed as follows:

Good ⟷ Poor

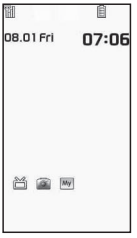

Standby

■ **If the Initial setting screen appears →p.45**

■ **If the PIN1 code/PIN2 code entry screen appears →p.100**

NOTE

- When you change the FOMA card (UIM), you have to enter the 4 to 8 digit security code after turning on the FOMA terminal. The standby screen appears when the security code is successfully entered. When you enter wrong security code for 5 times, the FOMA terminal turns off (however, you can turn on the FOMA terminal again).

NOTE

- If the battery runs out or “Auto power OFF” activates then the power is turned off, a screen appears indicating that the power was turned off last time.

Turning the FOMA terminal off

1 (2 seconds or longer)

The shutdown screen “SO706i” appears and the power is turned off.

Turning the FOMA terminal on/off automatically <Auto power ON/OFF>

Set the Auto power function, the power supply automatically on or off at the specified time.

- The FOMA terminal does not turn off during using another function, even if the Auto power OFF set time is reached. In addition, the FOMA terminal does not turn off when the alarm notification time or the i-αppli Auto-start time is the same as the Auto power OFF set time. The FOMA terminal turns off after finish the function.
- If the FOMA terminal turns off, the Music&Video Channel program is not downloaded and reserved update of the software or 1Seg timer recording is not available. Note above when setting Auto power OFF.

<Example: To turn the FOMA terminal on automatically>

1 MENU▶“SETTINGS”▶“Clock”▶“Auto power ON”

■ To turn the FOMA terminal off automatically

▶“Auto power OFF”

2 “Active”▶Enter the time▶Select whether to repeat or not

■ To cancel the Auto power ON/OFF

▶“Inactive”

NOTE

- Before entering an area such as an aircraft or hospital where there is electronic equipment that uses extremely precise control systems or very low signal levels and the use of mobile phones is prohibited, set the “Auto power ON” setting to “Inactive” and then turn the FOMA terminal off.

Switching Between Japanese and English <Select language>

You can switch the languages between Japanese and English to display function names and messages on the display.

1 MENU▶“SETTINGS”▶“Display”▶“Select language”▶“English”

■ To change from English to Japanese

▶“日本語”

NOTE

- When the FOMA card (UIM) is inserted, Select language setting is stored on the FOMA card (UIM).
- When “Select language” is set to “English”, only two options of “ON/OFF” are available for “Info notice setting”.

You can switch announcement language between Japanese and English for outgoing and incoming calls in some announcements.→p.316

Setting the Default <Initial setting>

After turning the FOMA terminal on, you can set “Set main time”, “Change security code”, “Character size” and “Keypad sound” as initial settings.

1 Initial setting screen▶“YES”

2 Set the main time→p.46

3 Change the security code→p.101

The default setting is “0000” (4 zeros).

Initial setting

4 Set the font size→p.93

5 Set the keypad sound→p.85

6 Check the contents about Software Update, then select “OK”

NOTE

- When you set all functions, the initial setting screen no longer appears when you turn on the FOMA terminal.

Setting the Clock

Use “Set main time” to set the date and time for the FOMA terminal. Use “Set sub clock” to show/hide the sub clock or set the display mode.

- The FOMA terminal offers the function to retrieve the time information (Greenwich Mean Time, GMT) and time zone information (Area you are in) and adjust time automatically.
- There are different time zones from GMT. If multiple cities or areas are registered in the same time zone, “Change” appears. Press [i] to change cities or areas.

Setting the main clock <Set main time>

1 MENU▶"SETTINGS"▶"Clock"▶"Set main time"▶"Auto time adjust"

■ **To set summer time**

▶"Summer time"

When set to "ON", time is displayed with 1 hour added.

2 Select any item:

Auto……Adjusts the date and time of the main clock automatically.

> **Auto**……Adjusts the date and time automatically based on the retrieved time information and time zone information. Local time appears during international roaming.
>
> **Manual(Time zone set)**……Select a time zone to display the local time.

Manual(Date time set)……Set the date and time of the main clock manually. Select a time zone, and enter the date and time.

■ **To enter the date and time**

Use ⊡ to move the highlight, then use the dial keys to enter the numbers.

NOTE

- After you set the date and time, you can use functions such as "Alarm" or "Schedule" which manages the date and time.
- The adjustable range of the date and time is between 00:00 on January 1, 2004 and 23:59 on December 31, 2037.

<Auto time adjust>

- Time is automatically adjusted e.g. when the power is turned on with a FOMA card (UIM) inserted.
- A several-second time lag may occur. Time may not be adjusted depending on the signal status or i-αppli set as the standby screen.
- Time may not be adjusted depending on the overseas carrier's network.

Setting the sub clock <Set sub clock>

1 MENU▶"SETTINGS"▶"Clock"▶"Set sub clock"▶"display method"

■ **To set summer time**

▶"Summer time"

When set to "ON", time is displayed with 1 hour added.

2 Select any item:

Auto……Displays the sub clock automatically during international roaming. If the main time "Auto time adjust" is set to "Auto", the main time automatically changes to the local time, but the Japan time appears for the sub clock.

Always……Select a time zone to always display the local time for the sub clock.

OFF……Hides the sub clock.

3 "YES" or "NO"

Select "YES" to display the sub clock.

If "OFF" is selected in Step 2, this step is skipped.

NOTE

- The sub clock appears only when "Size" under "Clock display" is set to "Small".
- If "Auto" is selected here and "GMT+09" is not selected as time zone under "Set main time", the Japan time appears for the sub clock (If the time zone is "GMT+09", the sub clock does not appear in Japan.

Notifying the Other Party of Your Phone Number <Caller ID Notification>

The FOMA terminal can send your phone number (caller ID) to the other party's phone (Display) when you make a call.

- Since the phone number is important information, please take care when you send your caller ID.
- You cannot perform the setting when " 184 " is displayed.

1 MENU▶"SERVICE"▶"Caller ID Notification"▶Select any item:

Activate/Deactivate……Sets whether to send your caller ID or not.

Check setting……Checks the current Caller ID Notification settings.

NOTE

- This function is available only when the other party's phone is capable of displaying the caller ID.
- If you hear a message requesting your caller ID, make a call again after setting your caller ID activated.

Checking Your Own Phone Number <My Profile>

You can display and check your phone number (own number) stored in your FOMA card (UIM).

1 MENU 0

NOTE

- You can easily quote the information stored in "My Profile" when entering the owner information (such as name or mail address) on websites, etc. →p.307
- You can check your i-mode address by selecting "i-mode menu"▶"iMenu"▶"English"▶"Options"▶"Mail Settings"▶"Confirm Settings".
- When 2in1 is in Dual mode, press ⊡ to switch the My Profile display.
- Reset My Profile in B mode when you exchange the FOMA card (UIM) while using 2in1. →p.291

Voice/Videophone Calls

Making a Voice/Videophone Call

Making a Voice/Videophone Call 48
Switching a Voice/Videophone Call During a Call (Caller) 50
Making International Calls ..... WORLD CALL 51
Using Handsfree Call During a Call ..... Hands-free 52
Using the Redial/Dialed Calls/Received Calls Record ..... Redial/Dialed calls/Received calls 53
Using Chaku-moji ..... Chaku-moji 55
Setting Caller ID Notification 56
Sending Push Signals ..... Pause dial 57
Using the Prefix Function 57
Setting Sub-addresses When Making Calls ..... Sub-address setting 58
Setting the Alarm Used for Reconnection ..... Reconnect signal 58
Blocking Out Ambient Noise ..... Noise reduction 58
Making Handsfree Calls in the Car ..... In-car Hands-free 59

Receiving a Voice/Videophone Call

Receiving a Voice/Videophone Call 59
When the Other Party Switches a Voice/Videophone Call (Caller) 60
Using the Dial Keys to Answer a Call ..... Answer setting 60
Ending/Holding Calls with the FOMA Terminal Folded ..... Setting when folded 61
Adjusting the Earpiece Volume ..... Volume 61
Adjusting the Ring Volume ..... Ring volume 61

Settings for when you cannot take calls

Holding the Ringing/Current Call ..... Answer hold/Holding 62
Using the Public Mode (Driving Mode) ..... Public mode (Driving mode) 62
Using the Public Mode (Power OFF) ..... Public mode (Power OFF) 63
When You Cannot Answer a Received Call ..... Missed calls 64
Having the Caller Leave a Message ..... Record message 64
Having Callers Leave a Message During an Incoming Call ..... Quick message 65
Playing/Erasing Recorded Messages and Voice Memos 65

Setting the Videophone

Using Chara-den 66
Setting Functions for the Videophone 67
Using the Videophone Connecting to External Devices 68

Making a Voice/Videophone Call

* **FOMA SO706i does not contain front camera. A substitute image (Chara-den) or rear camera image will be sent to the other party. A substitute image (Chara-den) can be changed to an image in "My picture", etc. using "Select image".→p.67**

1 Enter the phone number of the other party

The "Enter phone number" screen appears.
Always start by entering the area code, even for calls within the same area.
You can enter up to 80 digits for the phone number. However, only the last 26 digits are displayed.

Enter phone number

Function menu➡p.49

<When you enter a wrong number>

■ **To insert a number**
Press ⊙ to move the cursor to the number to the left of the position where you want to insert the number, then enter the number.

■ **To delete a number**
Press ⊙ to move the cursor to the number you want to delete, then press CLR.
Hold down CLR for 1 second or longer to delete all the numbers to the left of the cursor and the number in the cursor position.

■ **To re-enter the number**
Move the cursor to the beginning or end of the number and hold down CLR for 1 second or longer to return to the standby screen.

<Videophone>
■ **To change a substitute image (Chara-den)**
▶✉ (FUNC)▶"Select image"▶"Chara-den"▶Select Chara-den

2 📞 (voice call) / 📹 (V.phone)

<Voice call>
The "In-call" screen appears.
" 📞 " flashes while dialing and lights up during the call.

In-call

■ **If you hear the busy tone**
The line is busy. Call again after a while.

■ **If you hear a message saying that the other party cannot be reached**
The other party's mobile phone is not turned on or is out of signal range. Call again after a while.

■ **If you hear a message requesting your caller ID**
Call again with Caller ID Notification enabled.
→p.46

<Videophone>
The "Videophone in-call" screen appears.
" 📹 " flashes while dialing a videophone call and lights up during the call.

Videophone in-call

Function menu➡p.49

Illustrations Dick Bruna
© copyright Mercis bv, 1953-2008
www.miffy.com

■ **If a videophone call is not connected**→p.50

■ **To switch between substitute image and camera image**
▶● (Change)
Each time you press ● (Change), the substitute image and camera image switch.

■ **To switch the main screen**
▶● (1 second or longer)
"Change main disp."→p.49

■ **To enlarge the image to be sent**
▶Adjust the zoom using ⊙
Zoom→p.128

■ **To mute the voice to send**
▶🎙 (▲マナー) (1 second or longer)
The "MUTE" icon is displayed.
Press 🎙 (▲マナー) (1 second or longer) again cancels muting.

■ **To switch a voice/videophone call during a call**→p.50

■ **To put the current voice/videophone call on hold**→p.62

■ **When the 2in1 is in Dual mode**

The Outgoing number selection screen appears. Select a phone number.

3 after talking

NOTE

<Videophone call>

- If you make a videophone call to an emergency number (110, 119 or 118) from the FOMA terminal, the call is automatically changed to a voice call.
- You cannot receive i-mode mail or a MessageR/F during a videophone call (you can receive SMS). Received mail is kept at the i-mode Center and can be retrieved using "Check new messages" after the videophone call.
- When you are using videophone and recording 1Seg simultaneously with the camera during charging, the "Camera Off" message may appear and the camera may turn off depending on the temperature of the FOMA terminal.
- Digital communication charges are still applied to the caller when the substitute image is displayed during a videophone call.

What is the Videophone

You can use the videophone call function between the terminals that support the DOCOMO videophone system.

- DOCOMO videophone conforms to "the 3G-324M*2 standard set down in the international 3GPP*1 standards". Your FOMA terminal cannot connect to a videophone terminal that uses a different system from DOCOMO videophones.

*1: 3GPP (3rd Generation Partnership Project)
A regional standardization body established to develop commonly applied technical specifications for 3rd-generation mobile communications systems (IMT-2000).

*2: 3G-324M
An international standard for 3rd-generation mobile videophones.

■ **How to view the videophone screen**

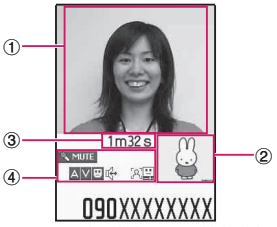

Illustrations Dick Bruna © copyright Mercis bv,1953-2008
www.miffy.com

① Main screen (Camera image of the other party is displayed at the time of purchase)
② Sub-screen (Your substitute image is displayed at the time of purchase)
③ Call duration
④ Settings
: Sending or receiving voice/ Transmission error
: Sending or receiving video/ Transmission error
: Sending camera image/Sending substitute image
: Handsfree ON/OFF
MUTE: Muting microphone (in silence)
: Photo mode (Portrait/Scenery/ Close-up)
: Key operation mode (DTMF mode*1/Whole action mode*2/ Parts action mode*2)
: Sending Chara-den

*1: "Send DTMF tone/DTMF tone OFF"→p.50
*2: "Using Chara-den"→p.66

FUNC Enter phone number screen (p.48)

Notify Caller ID→p.56

Prefix numbers→p.58

Chaku-moji→p.55

Int'l call→p.52

Multi Number→p.319

Add to phonebook→p.70

Compose message*→p.156

Select image·····Selects the image used during a videophone call from "Chara-den".
Select "Release settings" to cancel the setting.

* : Not available when 2in1 is in B mode.

FUNC Videophone in-call screen (p.48)

Substitute image⇔Camera image·····Switches between the camera image and the substitute image.

Change main disp.·····Changes the main display.
The screen changes in the order of "Displaying the image from the other party's camera on your main screen"→ "Displaying your image on your main screen"→ "Displaying only the image from the other party's camera"→"Displaying only your image"

V.phone settings·····Sets the screen for videophone call.

Visual prefer.·····Sets the image sent to and received from the other party from "Normal/Prefer img qual/Prefer motion spd".
This setting is only retained during the call.

Continued on next page

Brightness……Five brightness levels (-2 to 0 to +2) are available.

White balance……Sets image color tones. →p.123
This setting is also applied to the equivalent camera functions.

Color mode set……Selects the image effect from "Normal/Sepia/Monochrome".
This setting is only retained during the call.

Photo mode……Sets modes suited to the scene being shot. →p.122

Chara-den set.……Set the following when Chara-den is used. This setting cannot be set for the camera images.

Switch Chara-den……Selects the character to be displayed.

Action List……Checks the available actions and the corresponding keys. You can also view the action list by pressing [*].

Change Action……Changes the Action mode.

Switch image……Displays the image selected in "Substitute image" (p.67) on the other party's display.

Display light……Sets lighting of backlight.

All time ON (default)……Turns the backlight on all the time.

15 seconds ON……Turns the backlight on for 15 seconds only.

Own number……Displays your phone number during a videophone call.

Send DTMF tone⇔DTMF tone OFF……Sets/cancels push signal transmission mode during Chara-den. Except for Chara-den, videophone calls are always in push signal transmission mode.

Change to voice →p.50

● If a videophone call is not connected

When a videophone call is not connected, the cause of the failure appears.

- The cause may not appear depending on the situation.
- Depending on the type of other party's phone or the possible lack of a network service subscription, the reason may not accurately reflect the other party's actual status.

Display	Cause
Check number then redial	Phone number is not available
Busy	The line is busy
Busy with packet transmission	The other party is using packet communication
Out of service area/ power off	The other party is out of service area or the phone is turned off
Your call is being forwarded	The call is being forwarded (A Videophone call is made when the forwarding number is for a 3G-324M-compatible videophone.)
Redial using voice call	The phone for the forwarding number is not compatible with videophone calls.
Please activate caller ID before dialing again	The other party sets the Caller ID request service.
Your call cannot be connected	The other party sets the Nuisance call blocking service.
Upper limit has been exceeded Connection failed	The upper limit set for a Limit billing plan (Type Limit and Family Wide Limit) is exceeded.
Connection failed	Set Caller ID Notification to "ON" and retry You connected without notifying your caller ID (when dialing into visualnet, etc.) • This message may also appear in other situations.
Please make your call from the i-mode web page	You attempted to make a videophone call to watch V-live without browsing the i-mode official site.

- If the videophone call is not connected, your call is automatically switched to a voice call when you set "Auto redial as voice" to "ON". However, the call may not be handled in this way if you call an ISDN synchronous 64K, ISDN videophone which does not support the 3G-324M standard (as of May, 2008) or if you dial a wrong number. Note that call charge may be applied in some cases.

Switching a Voice/Videophone Call During a Call (Caller)

- You can use this function with the terminals compatible with voice call/videophone call switch.
- You can switch the voice call only when you are the caller.
- To switch the call, the receiver needs to set "Ntfy switch-mode" to notify the switch beforehand. →p.67

<Example: To switch a voice call to a videophone call>

1 In-call screen (p.48)▶[■] (V.phone)▶"YES"

While switching, the screen which indicates that the calls are being switched appears and the voice guidance is played.

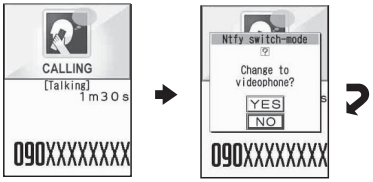

The digital communication fee is charged after the appearance of this screen.

Illustrations Dick Bruna © copyright Mercis bv, 1953-2008 www.miffy.com

■ **To switch a videophone call to a voice call**

▶Videophone in-call screen (p.48)▶ (FUNC) ▶"Change to voice"

NOTE

- It takes about 5 seconds to switch the calls. Note that the signal quality may affect how long it takes.
- You cannot switch the calls during calling in the following cases:
  - When the other party is holding the call
  - When the other party activates Record message
- The displayed call duration is reset to 0 second each time the calls are switched. However, the total time for voice and videophone call is displayed after ending a call.
- Depending on the other party's communication conditions or the signal quality, you may not be able to switch the calls and the call may be canceled.
- When the call is switched, the first dialed or received call is registered to the Redial/Dialed calls records or Received calls records.

<When switching from voice call to videophone call>

- If the caller is using i-mode, the i-mode communication is canceled to switch to videophone.
- If the other party is using packet communication (including i-mode), you receive the message "No Switch" meaning you cannot switch the calls.
- You cannot switch the calls when "Call Waiting" is activated.

Making International Calls

<WORLD CALL>

WORLD CALL is an international dialing service that can be used from DOCOMO mobile phones. FOMA service subscribers are also subscribed to "WORLD CALL" when they subscribe to the FOMA service. (This excludes subscribers who declared that they did not require the service.)

- WORLD CALL can be used to call around 240 countries and regions worldwide.
- The "WORLD CALL" is charged with your monthly call charges.
- In addition to dialing a phone number, you can make an international call by adding "+" or selecting "Int'l call" or "Prefix numbers" from the function menu in the enter phone number screen, Redial/Dialed calls screen, Received calls screen or Phonebook detail screen.
- This service is not available in some payment plans.

For additional information regarding WORLD CALL, refer to the contact information provided on the back of the manual.

"International videophone calls" can be made to users of some specific overseas 3G mobile terminals by pressing (V.phone) to make the call after using the dialing procedure below.

- See the DOCOMO website for information on accessible countries and operators.
- Depending on the other party's terminal, the image of the other party displayed on your FOMA terminal may be distorted or the connection may fail when making a international videophone.

Using dial keys to make international calls

1 Dial the number in the following order: 010→Country code→Area code (Long distance code)→The other party's phone number

"009130" can be added first.

If the area code (long distance code) begins with "0", omit the first "0". However, to call to ordinary phones in Italy, "0" is required.

2

The international call is made.

Quick and simple procedures for making an international call

- You can store the country codes and IDD prefix codes in "Int'l dial assistance".

● Using "+" to make an international call

By using the "+" that is automatically replaced with the "IDD Prefix Code" set in the "Auto int'l call set.", you can make international calls without dialing the IDD prefix code.

Continued on next page

● As “Auto int’l call set.” in “Int’l dial assistance” is set to “ON” (automatically added) at the time of purchase, the FOMA terminal automatically dials the IDD prefix code.

1 On the standby screen, dial the following; + (0 (1 second or longer)) →Country code→Area code (Long distance code)→The other party’s phone number

If the area code (long distance code) begins with “0”, omit the first “0”. However, to call to ordinary phones in Italy, “0” is required.

2 ▶“Dial”

The international call is made.

■ **To make a call without converting “+” into the IDD prefix code**

▶“Original phone No.”

* Not available in this terminal.

■ **To cancel the call**

▶“Cancel”

● Making an international call from the function menu

You can make an international call by adding a country code and IDD prefix code from the function menu.

● You can use the international dial function from the “Enter phone number” screen and the detail screens of “Phonebook/Received calls/Dialed calls/Redial” screens.

<Example: To use the international dial function from the enter phone number screen>

1 Enter the phone number of the other party

2 (FUNC)▶“Int’l call”▶Select the country code▶Select the IDD prefix code

The selected country code and IDD prefix code are added. If the area code (long distance code) begins with “0”, the first “0” is automatically deleted (except when “Italy” is selected for the country code).

3

The international call is made.

Making the setting for the international call <Int’l dial assistance>

You can set the automatic conversion of “+”, and also edit and store the country codes and IDD prefix code for international calls.

1 MENU▶“SETTINGS”▶“Dialing”▶“Int’l dial assistance”▶Select any item:

Auto int’l call set.……You can set the automatic conversion of “+” when you make an international call.

▶“ON”▶Select a country code▶Select an IDD prefix code

■ **When you do not convert automatically**

▶“OFF”

Country Code setting……Stores up to 22 country names and country codes used when you make an international call. See the DOCOMO website for information on country codes.

▶Highlight an item▶i (Edit)▶Enter the country name▶Enter the country code

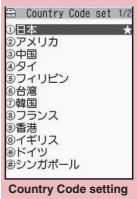

Country Code setting

Function menu➡p.52

IDD Prefix setting……Stores the IDD prefix name and IDD prefix code used when you make an international call. Up to 3 entries can be stored.

▶Highlight an item to be stored or changed▶i (Edit)▶Enter the IDD prefix name▶Enter the IDD prefix code



IDD Prefix setting

Function menu➡p.58

FUNC Country Code setting screen (p.52)

Edit……Edits the country code.

Delete……Selects the deleting method from “Delete this/Delete selected/Delete all”.

“About multiple-choice”→p.38

Using Handsfree Call During a Call <Hands-free>

You can hear the other party’s voice from the speaker while talking.

1 In-call screen (p.48)▶i (Handsfree On)

“ ” appears and you can hear other party’s voice through a speaker during a handsfree call. While your terminal is ringing, you can switch to handsfree operation by pressing i (Handsfree On / Handsfree Off).

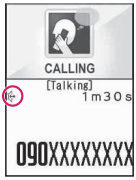

Ex. Voice call

Ex. Videophone call

Illustrations Dick Bruna
© copyright Mercis bv,
1953-2008
www.miffy.com

■ **To cancel the handsfree operation**

▶Press [i] ([Off]) during a handsfree call

"[icon]" disappears when you make a voice call.

"[icon]" is changed to "[icon]" in case of videophone.

● Notes on using the handsfree operation

It is recommended to keep a distance of about 30 cm from the FOMA terminal during a handsfree call. If the distance is longer or shorter than 30 cm, the other party may find it difficult to hear you or your voice may sound differently.

NOTE

- Move to an area where your call will not disturb other people before switching to a handsfree call.
- When a call is finished, the handsfree setting is canceled.

Using the Redial/Dialed Calls/ Received Calls Record

<Redial/Dialed calls/Received calls>

Information on dialed or received calls, including the caller's phone number and the date and time are stored in the Redial/Dialed calls/Received calls record. You can make a call to the other party easily by using these records.

- When you make calls to the same phone number repeatedly, the latest entry is stored as the Redial record and separate entries are stored for the Dialed calls record.
- The Redial record can hold up to 30 phone numbers for voice/videophone calls.
- The Dialed calls/Received calls record stores up to 30 voice/videophone call entries and 30 packet communication or 64K data communication entries.
- If the maximum number of logs is exceeded, logs are overwritten starting with the oldest one.

<Example: To make a call from the Redial/Received calls list screen>

1 On the standby screen▶[Redial]/[Received calls]

The "Redial screen (list)"/ "Received calls screen (list)" appears.

■ **To check the Dialed calls**

▶[MENU]▶"OWN DATA"▶ "Dialed calls"

The "Dialed calls screen (list)" appears.

Ex. Redial (list)

Function menu➡p.54

2 Highlight the Redial/Received calls record entry

■ **To make a call after checking the details of the Redial/Received calls record**

▶Select the Redial/ Received calls record entry

The "Redial screen (detail)" or "Received calls screen (detail)" appears.

Ex. Redial (detail)

Function menu➡p.54

3 [Voice call]/[V.phone]

● Checking the number of missed calls

■ **To confirm only the missed calls from the Received calls record**

▶[MENU]▶"OWN DATA"▶"Received calls"

Total number of received calls, the number of missed calls and the number of unconfirmed missed calls appear.

When you select "Missed calls", only the missed calls appears.

■ **Redial/Dialed calls/Received calls record icons**

Icon*1	Description
[PHONE]/[MISS]/[MISS]	Incoming and outgoing/missed/ unconfirmed missed voice calls
[INT'L PHONE]/[INT'L MISS]/[INT'L MISS]	Incoming and outgoing/missed/ unconfirmed missed international voice calls
[PHONE]/[MISS]/[MISS]	Incoming and outgoing/missed/ unconfirmed missed videophone calls

Continued on next page

Icon*1	Description
PHONE / MISS / MISS	Incoming and outgoing/missed/unconfirmed missed international videophone calls
B *2	Incoming and outgoing calls to B mode for 2in1 setting
MSG / MSG	Recorded voice record message/videophone message
	Received calls with Chaku-moji
PACKET / PACKET MISS / MISS	Outgoing/Incoming/missed/unconfirmed missed packet communication
64K / MISS / MISS	Incoming and outgoing/missed/unconfirmed missed 64K data communication
NO CONNECT	Incoming packet communication or 64K data communication that is received without external device connected
GMT	Incoming and outgoing calls when the time zone is not "GMT+09" regardless of the "Auto time adjust" setting (if summer time is set, the summer time setting applies)

*1: Some icons look different between the detail screen and the list screen.
*2: Displayed only when the 2in1 is in Dual mode.

NOTE

- If you use 2in1, up to 30 records are stored for each phone number. Also, when set to Dual mode, up to 30 Redial/Dialed calls/Received calls records for both phone numbers and total of the 60 records are displayed.
- If the same phone number is registered in the multiple phonebook entries with different names, the name retrieved by the phonebook search in the order of reading is displayed in the Redial/Dialed calls/Received calls record. →p.73

<Redial/Dialed calls>
- Setting "Restrict dialing" deletes all the Redial/Dialed calls records.
- If you make a call by selecting Multi number from the function menu, the registered name and number of the additional number are displayed under the phone number in the Redial screen (detail)/Dialed calls record screen (detail). If you make a call without using the function menu, nothing is displayed even when "Set Multi Number" is set to additional number.

<Received calls>
- When "Missed calls display" in the "Ring time(sec.)" is set to "Not display" and you receive a call of which ring tone sounded for shorter time than the time set in the "Set mute seconds", the call is not displayed on the Received calls record.
- If the caller is using "Dial-in", a number different from the "Dial-in" number may be displayed.

NOTE

- When you have subscribed to Multi number and make a call from the Received calls record screen, the phone call is made from the number which received the call regardless of the "Set Multi Number" setting.
- When you receive a call for additional number of Multi number, the registered name of the additional number are displayed under the phone number in the Received calls record screen (detail).

FUNC Redial/Dialed calls/Received calls screen (p.53)

Notify Caller ID*1 →p.56

Prefix numbers*1 →p.58

Chaku-moji*1 →p.55

Int'l call*1 →p.52

2in1/Multi Num.*1……When 2in1 is set to ON and Dual mode, selects from "Number A/Number B/Cancel number" (p.323) (not available when A mode or B mode is set).
Selects from "Basic number/Additional number 1/Additional number 2/Cancel number" (p.319) at the Multi Number when 2in1 set to OFF.

Ring time*2*3……Displays the missed call record entries with the ringing times.

Add to phonebook →p.72

Look-up phonebook……"Accessing the phonebook from the Redial or Dialed Calls record" →p.74

Add shortcut →p.94

Compose message*4 →p.156

Compose SMS*4 →p.182

Sent address*5*6……Displays the sent address list.

Received address*2……Displays the received address list.

Select image……Selects the image used during a videophone call from "Chara-den".
Select "Release settings" to cancel the setting.

Set large font⇔Set normal font*3……Switches the character size of the displayed name. →p.93

Delete……Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice" →p.38

*1: Available only for the detail screen.
*2: Available only for the Received calls screen.
*3: Available only for the list screen.
*4: Available only when 2in1 is in A mode or Dual mode, and selecting the record screen for the A mode.
*5: Available only for the Redial/Dialed calls screen.
*6: Not available when 2in1 is in B mode.

NOTE

- Selecting “Delete all” from the Redial/Dialed calls record deletes all the Redial and Dialed calls records. Note that selecting “Delete this” or “Delete selected” for the Redial record does not delete the entries of Dialed calls record, and selecting “Delete this” or “Delete selected” for the Dialed calls record does not delete the entries of the Redial record.

<Compose message>

- When the phonebook stores the phone number and the mail address, an address listed first is used as destination to create a message.

Using Chaku-moji <Chaku-moji>

When making a voice call or videophone call, you can send a message (Chaku-moji) to the other party to show the summary of the call, etc. beforehand.

- 5 Chaku-moji messages are stored at the time of purchase. You can change the pre-installed Chaku-moji messages.
- You can include pictographs or face marks in Chaku-moji, and you can send a message of up to 10 characters including pictograph/symbol/double-byte character/single-byte character.
- For details on Chaku-moji and the compatible models, refer to the DOCOMO website or “Mobile Phone User’s Guide [Network services]”.

Making a call with a message

You can add Chaku-moji when making a voice or videophone call from the “Enter phone number” screen and the detail screen of the “Phonebook” or “Redial/Dialed calls/Received calls”.

<Example: To make a call with Chaku-moji from the enter phone number screen>

1 Enter phone number screen (p.48)▶ [✉] (FUNC)▶“Chaku-moji”▶Select any item:

Create message……Enters Chaku-moji. You can enter up to 10 characters.

Select message……Selects from the stored Chaku-moji.
You can edit Chaku-moji by pressing [i] (Edit) on the message selection screen.

Sent messages……Selects from the previously sent Chaku-moji. You can edit Chaku-moji by pressing [i] (Edit) on the sent message screen.

■ To delete the entered Chaku-moji (to make a call without Chaku-moji)

▶[✉] (FUNC)▶“Chaku-moji”▶“Create message”▶Clear all the entered Chaku-moji

2 [📞] (voice call) / [i] (V.phone)

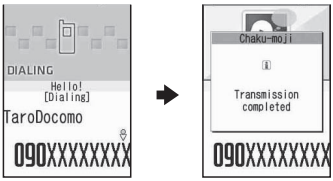

When the other party’s terminal receives Chaku-moji, the result “Transmission completed” appears.

NOTE

- Sending Chaku-moji is charged. Receiving Chaku-moji is not charged.
- You can store up to 30 Chaku-moji in the sent messages record (if you use 2in1, up to 30 sent messages records when set to each mode, and up to 30 sent messages records for each and total of the 60 records are stored when set to Dual mode). When you send same Chaku-moji repeatedly, only the latest one is recorded. When the entries exceed the maximum number, entries are overwritten from the oldest entry.
- If the receiver’s terminal is under the following conditions, Chaku-moji cannot be sent. In this case, no sending charges apply.
  - The terminal is not compatible with Chaku-moji (“Transmission failed” appears)
  - Chaku-moji does not appear on the screen of the receiver terminal because of the “MSG display settings” on the receiver terminal (“Transmission failed” appears)
  - Public mode (Driving mode) is set
  - The ringing time for recording message is set to 0 second.
  - “ ” or the FOMA terminal is turned off.
- Depending on the signal status, sending result does not appear on the sender terminal even when the receiver terminal receives Chaku-moji. In this case, sending charges apply.
- You cannot send or receive Chaku-moji when using the FOMA terminal overseas.

● When you receive a voice or videophone call with a message

The Chaku-moji appears on the ringing screen. The Chaku-moji disappears when you answer the call.

Ex. Voice call

Continued on next page

NOTE

- Even when you receive a call whose ring tone sounded for shorter time than the time set in the “Set mute seconds” of “Ring time (sec.)”, Chaku-moji is displayed and recorded in the Received calls record.
- Depending on the status of the sender or receiver, Chaku-moji may not be displayed even if you receive a call with Chaku-moji.
- When the Original lock is set to “Chaku-moji”, Chaku-moji is not displayed even if you receive a call with Chaku-moji. In this case, Chaku-moji is stored to the Received calls record after releasing the lock.

Displaying a message from the Received calls record

When you receive Chaku-moji, the “ ” icon appears on the Received calls record, and you can check the Chaku-moji message on the “Received calls screen (detail)”.

NOTE

- Even when you make a call using the Received calls record, the Chaku-moji in the record is not sent.

Editing and setting messages

1 MENU▶“SERVICE”▶“Chaku-moji”▶Select any item:

Create message……Stores or edits frequently used Chaku-moji. You can store up to 30 Chaku-moji (including 5 pre-installed).
▶Highlight an item to be stored or edited▶ (Edit)▶Enter the Chaku-moji

Create message list

Function menu➡p.56

MSG display settings……Sets the Chaku-moji display setting when you receive a call with Chaku-moji.

- **Display all messages**……Displays all Chaku-moji messages.
- **Only number in PH-book**……Displays only the Chaku-moji messages from senders stored in the phonebook.
- **Calls with Caller ID**……Displays only the Chaku-moji messages from senders providing the caller ID.
- **Hide all messages**……Hides all Chaku-moji messages.

FUNC Create message list screen (p.56)

Edit……Edits Chaku-moji.

Delete……Selects the deleting method from “Delete this/Delete selected/Delete all”.
“About multiple-choice”→p.38

NOTE

- You cannot delete the pre-installed Chaku-moji. Even when you change a pre-installed Chaku-moji and delete the Chaku-moji, it is restored to the default.

Setting Caller ID Notification

Set whether to display your phone number (caller ID) on the other party’s phone (display) each time you make a call.

- Take care when informing others of your phone number, as this is important personal information.
- You can set Caller ID Notification all at once.→p.46

Adding the “186”/“184” prefix to the other party’s phone number

To provide your caller ID, add the “186” prefix when you dial the phone number. To withhold your caller ID, use the “184” prefix.

■To provide your phone number
186 - “The other party’s phone number” - (voice call)/ (V.phone)

■To withhold your phone number
184 - “The other party’s phone number” - (voice call)/ (V.phone)

Selecting from the function menu

Select “OFF” or “ON” from the function menu the “Enter phone number” screen and the detail screens of “Phonebook”/“Received calls”/“Dialed calls”/“Redial”.

<Example: To make a voice call from the Enter phone number screen>

1 Enter the phone number of the other party

2 (FUNC)▶“Notify Caller ID”▶“OFF” or “ON”

■ To cancel “Notify Caller ID”
▶“Cancel prefix”
When “Cancel prefix” is selected, the “Caller ID Notification” setting is applied.

3 (voice call)/ (V.phone)

NOTE

- This function is available only when the other party's phone can display caller ID.
- If you hear a message requesting your caller ID, show your caller ID.
- When making an international call, "186"/"184" may be disabled. Select "Notify Caller ID" from the function menu.
- If you make a call with the "186"/"184" prefix, the phone number including this prefix is recorded in the Redial/Dialed calls.

Sending Push Signals

<Pause dial>

By sending push signals from the FOMA terminal, you can use services such as ticket ordering and bank balance requests.

Storing dialing data as pause dial record entries

You can store the dialing data used as push signals to Pause dial beforehand. Inserting P (pause) into the dialing data allows you to send data with a separation where a pause lies.

- You can store 1 dialing data, consisting of up to 128 characters.
- You can enter numbers from 0 to 9, the # and ✳ symbols, and P (pause) for dialing data.
- You cannot enter P (pause) in succession or at the beginning of the dialing data.

1 MENU▶"SETTINGS"▶"Dialing"▶"Pause dial"

The "Pause dial" screen appears.

■ If there is dialing data already stored

The stored dialing data appears.

Function menu➡p.57

2 (Edit)▶Enter the dialing data

Press 0 to 9, # and ✳ to enter the dialing data.

■ To enter P (pause)

▶✳ (1 second or longer)

FUNC Pause dial screen (p.57)

Edit……Edits the dialing data.

Send pause dial……Enters the phone number of the other party and sends the dialing data.
Each time you press , the dialing data up to P (pause) is transmitted.

Delete……Deletes the stored dialing data.

Transmitting the dialing data as a pause dial

1 MENU▶"SETTINGS"▶"Dialing"▶"Pause dial"▶■ (Send)

2 Dial the phone number of the destination▶

The FOMA terminal calls the entered phone number and displays the dialing data up to the first P (pause) while the dialed phone is ringing. P (pause) is not displayed.

3

Each time you press , the dialing data up to P (pause) is transmitted. Once the FOMA terminal has finished sending the last number, the in-call screen reappears.

■ To transmit all the dialing data at once

▶ (1 second or longer)▶"Send at one time"

It may not be possible to send all the data at once to some recipients.

NOTE

- Some phones may be unable to receive push signals.

Using the Prefix Function

You can store the prefix numbers such as IDD prefix code and 186/184 for notifying/withholding your caller ID beforehand and add these prefix numbers when you make calls.

Storing the prefix numbers

<Prefix setting>

- You can store up to 7 prefix numbers.
- You can enter numbers from 0 to 9 and the #, ✳ and + symbols.

Continued on next page

1 MENU▶“SETTINGS”▶“Dialing”▶“Prefix setting”
The “Prefix setting” screen appears.

Prefix setting

2 Highlight the item to store or change▶ i (Edit)

3 Enter the name to be stored
You can enter up to 8 double-byte or 16 single-byte characters.

Function menu➡p.58

4 Enter the numbers (prefix)
You can enter up to 10 digits.

FUNC Prefix setting screen (p.58)/IDD Prefix setting screen (p.52)

Edit……Edits the prefix number or IDD prefix code.

Delete this • Delete all……Deletes one or all prefix numbers/IDD prefix codes.

Making a call with the Prefix numbers
<Prefix numbers>

- You can add the prefix numbers from the “Enter phone number” screen and the detail screens of “Phonebook/Received calls/Dialed calls/Redial” screens.

<Example: To make a voice call by adding prefix numbers from the enter phone number screen>

1 Enter the phone number of the other party

2 (FUNC) ▶“Prefix numbers”▶Select the stored name▶

Setting Sub-addresses When Making Calls
<Sub-address setting>

You can set whether to specify “✳” in the phone number as a separator so that the numbers following “✳” are recognized as a sub-address (ON/OFF).

- Sub-addresses are used in ISDN to identify calls made from specific communications devices and to select content in “V-live”.

1 MENU▶“SETTINGS”▶“Dialing”▶“Sub-address setting”▶“ON” or “OFF”

NOTE

- In the following cases, “✳” does not function as a sub-address separator. The entered number including “✳” is recognized as an ordinary phone number:
  - When the “✳” is entered at the beginning of a phone number
  - When “✳” immediately follows “186”/“184” at the beginning of a phone number
  - When “✳” immediately follows a number entered using “Prefix numbers”
  - When the phone number contains “✳590#/✳591#/✳592#”

Setting the Alarm Used for Reconnection
<Reconnect signal>

When the signal quality deteriorates during a voice/videophone call and the call drops out, the FOMA terminal will automatically reconnect the call if the signal quality quickly improves. Set the type of alarm when a call is reconnected for this function.

- The interval for reconnection varies depending on communication conditions or the signal quality. It takes about 10 seconds.

1 MENU▶“SETTINGS”▶“Talk”▶“Reconnect signal”▶Select an alarm tone
Select from “No tone/High tone/Low tone”.

NOTE

- Call charges apply in the interval (up to about 10 seconds) for reconnection.

Blocking Out Ambient Noise
<Noise reduction>

This function suppresses ambient noise and makes it easier for the other party in a voice or videophone call to hear you.

1 MENU▶“SETTINGS”▶“Talk”▶“Noise reduction”▶“ON” or “OFF”

Making Handsfree Calls in the Car <In-car Hands-free>

You can make or receive voice calls with handsfree compatible devices by connecting the FOMA terminal to handsfree compatible devices such as the In-Car Hands-Free Kit 01 (optional) or a car navigation system. For information on how to use the handsfree device, refer to the manual provided with the device. The FOMA In-Car Hands-Free Cable 01 (optional) is required to use the In-Car Hands-Free Kit 01 (optional).

NOTE

- To operate from the handsfree device, set the USB mode to “Communication mode”.
- The display and ring tones used for incoming calls and mail are as specified in the FOMA terminal settings.
- When the handsfree device is set to emit the sound from the handsfree device, the ring tone still sound through the handsfree device even when the FOMA terminal is set to Manner mode or the ring volume is set to “Silent”.
- When the Public mode (Driving mode) is set, operation for incoming calls and messages is as specified in the “Public mode (Driving mode)” settings.
- When the Record message is set, operation for incoming calls is as specified in the “Record message” settings.
- When the handsfree device is set to emit the sound from the FOMA terminal, operation when the FOMA terminal is folded during a call is as specified in “Setting when folded”. When the handsfree device is set to emit sound from the handsfree device, folding the FOMA terminal does not affect the call status regardless of the “Setting when folded” setting.

Receiving a Voice/ Videophone Call

*** FOMA SO706i does not contain front camera. A substitute image (Chara-den) or rear camera image will be sent to the other party. A substitute image (Chara-den) can be changed to an image in “My picture”, etc. using “Select image”. →p.67**

1 Voice/Videophone call is received

The ring tone sounds and the illumination flashes. The “Ringing” screen/“Videophone ringing” screen appears.

Ringing

Function menu➡p.60

Videophone ringing

Function menu➡p.60

■ When you receive a call with Chaku-moji

The Chaku-moji appears on the ringing screen/ videophone ringing screen. →p.55

■ To put a voice/videophone call on hold while the FOMA terminal is ringing →p.62

2 [Talk]

The “In-call” screen/“Videophone in-call” screen appears.

■ Operations during a videophone call

You can perform various operations such as changing the camera image to the substitute image and muting the sound. →p.48

■ When the other party switches a voice/ videophone call during a call →p.60

■ To put the current voice/videophone call on hold →p.62

3 To end the call, press [End]

Display while receiving a call

■When the other party’s phone number is notified

The other party’s phone number appears on the screen. When the caller is stored in the phonebook, the name stored in the phonebook appears (only the name is displayed while Keypad lock is set). →p.70

- If the same phone number is registered in the multiple phonebook entries with different names, the first name retrieved by the phonebook search in the order of reading appears. →p.73
- If the caller is stored as secret data, the name or other information does not appear and only the phone number appears.
- When you receive a call for additional number of Multi number, the registered name of the additional number is displayed on the ringing screen.

■When the other party’s phone number is not notified

The reason of not notifying appears.

FUNC Ringing screen/Videophone ringing screen (p.59)

Call Rejection……Terminates the receiving call without answering.

Call Forwarding……Forwards the call.
The call is forwarded regardless of the “Call Forwarding” setting “Activate/Deactivate”.

Voice Mail……Connects the call to the voice mail service center.
The call is connected to the voice mail service center regardless of the “Voice Mail” setting “Activate/Deactivate”.

Change Display……Switches the display from additional number 1 or 2 to the number from which the call is forwarded. This can be selected when receiving multi number call (for additional number 1 or 2) and the call is forwarded at the same time.

NOTE

- You can receive a call using a flat-plug earphone/microphone with switch (optional). →p.298
- If you have subscribed to the Call waiting, Voice mail or Call forwarding service, activate “Set in-call arrival” and set “Incoming Call Mng” to “Answer”, you will hear a short double-beep (“bibip”) when you receive a call when you are already on a call.
  - If you subscribe to the Voice mail or Call forwarding service, you can answer the call by ending the current call.
  - If you subscribe to the Call waiting service, you can answer the voice call by putting the current call on hold and you can answer the videophone call by ending the current call.
- You can set the incoming call management from the caller who is not stored in the phonebook. →p.114
- You can set the incoming call restriction for each phone number stored in the phonebook. →p.112

<Videophone>

- It may take a few seconds to switch from a camera image to a substitute image (Chara-den) depending on the Chara-den.

When the Other Party Switches a Voice/Videophone Call (Caller)

When you receive a voice/videophone call, the other party can switch the call between voice call and videophone call.

- The receiver cannot switch a voice call to a videophone call.
- To switch the call, the receiver needs to set “Ntfy switch-mode” to notify the switch beforehand. →p.67
- You can use this function with the terminals compatible with voice call/videophone call switch.

<Example: When the other party switched a voice call to a videophone call>

1 In-call screen (p.48)▶The other party switches to a videophone call

While switching, the screen which indicates that the calls are being switched appears and the voice guidance is played.
When the voice call is switched to the videophone call, the substitute image is sent to the other party.

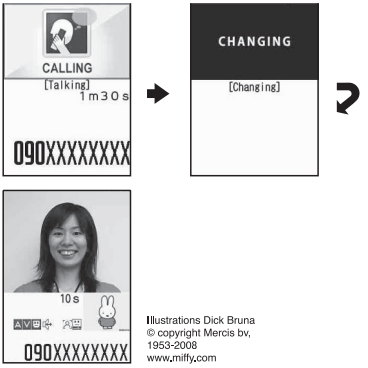

Illustrations Dick Bruna
© copyright Mercis bv, 1953-2008
www.miffy.com

■ When the other party switched a videophone call to a voice call

▶Videophone in-call screen (p.48)▶The other party switches to a voice call
The videophone call is switched to the voice call.

Using the Dial Keys to Answer a Call <Answer setting>

You can use this setting to turn off the ring tone or answer the phone quickly when you receive a call.

1 MENU▶“SETTINGS”▶“Incoming call”▶“Answer setting”▶Select any item:

Any key answer……Valid for voice calls. You can answer the call by pressing any of the following keys.
[Call], [■] (Answer) , [0] to [9], [#], [*], [CLR], [i], [ch], [Camera]

* For videophone calls, you can answer the call only by ordinary key operations ([Call], [■] (Subst.)).

Quick silent……Pressing any of the following keys or opening the FOMA terminal stops the incoming call reaction while the caller continues to hear the ring tone.
[0] to [9], [#], [*], [CLR], [Camera], [ch] or [i] (for voice calls only)
To answer the call, press [Call] or [■] (Answer/Subst.).

OFF……You can answer the call only with [ ] or [●] (Answer/Subst.).

NOTE

- Even when “Quick silent” is set, the “Any key answer” function is used in Manner mode.

Ending/Holding Calls with the FOMA Terminal Folded

<Setting when folded>

You can set how your FOMA terminal operates when it is folded during a voice or videophone call.

1 [MENU]▶“SETTINGS”▶“Talk”▶“Setting when folded”▶Select any item:

No tone……Mutes the sound. The other party does not hear the hold tone.

Tone on……Puts a call on hold (holding). When the FOMA terminal is folded, the other party hears the hold tone. For videophone calls, the image for holding is sent to the other party.

Speaker ON……The hold tone is sent to the other party and also plays through the speaker.

Speaker OFF……Only the other party hears the hold tone.

End the call……Ends the call. It is the same operation as pressing [ ].

NOTE

- When Manner mode is set, no sound is played through the speaker even if “Speaker ON” is set.
- When a flat-plug earphone/microphone with switch (optional) is connected, this function is disabled.
- Even if the “Tone on” setting is selected, folding the FOMA terminal activates the “No tone” setting if “Call Waiting” is switched on.

Adjusting the Earpiece Volume

<Volume>

1 On the standby screen▶[ ] (1 second or longer)▶Adjust the volume with [ ]

Pressing [ ] (1 second or longer) displays the earpiece volume screen. If no operation is conducted for 2 seconds or longer when the earpiece volume screen is displayed, the earpiece volume screen is expired.

You can adjust the volume in 6 steps from “Level 1” (quietest) to “Level 6” (loudest).

■ To adjust the earpiece volume during a call

During a voice call: [ ] (1 second or longer)
During a videophone call: [ ]

- You can also adjust with [ ] (▲マナー)/[ ] (▼メモ).

NOTE

- If you adjust the volume during a call, the adjusted setting is retained after you end the call.

Adjusting the Ring Volume

<Ring volume>

You can adjust the volume of the ring tone for a incoming call, mail, MessageR/F in 6 steps for each type of call. You can also set to silent or to gradually get louder.

1 [MENU]▶“SETTINGS”▶“Incoming call”▶“Ring volume”▶Select an item to adjust its volume

Select “Phone” to adjust the ring tone volume for voice calls and 64K data communication.
Select “Mail” to adjust the ring tone volume for i-mode mail, Area Mail, SMS or packet communication.

2 Use [ ] to adjust the ring volume▶[●] (Set)

■ To raise the volume gradually

▶Press [ ] in “Level 6”
When set to “Step”, the ring volume becomes louder and louder in every 3 seconds.

■ To set to silent

▶Press [ ] in “Level 1”
An icon appears in the standby screen to confirm that a “Silent” ring tone is set.

: “Phone” or “Videophone” is set to “Silent”
: “Silent” is set for “Mail”, “MessageR” and/or “MessageF”.
: Both “” and “” are set.

NOTE

- The ring volume setting specified for “Phone” in this function is also applied to the “Select ring tone” setting for a voice call, the alarm tones for “Schedule” and “To Do list”.

Holding the Ringing/Current Call <Answer hold/Holding>

<Example: To put the ringing call on hold>

1 While ringing▶[☎]

The FOMA terminal makes three rapid beeps and puts the call on hold.
The caller hears a message saying that you cannot answer at the moment and the call is held without hanging up.

■ **To put the current call on hold**
▶During a call▶[CLR]

■ **To end the call during answer hold/holding**
▶[☎]

2 Press [☎] to resume the call
You can also use [CLR] to cancel holding when you put the current call on hold.

NOTE

- Call charges apply while putting the ringing call or current call on hold.

Setting the hold tone <Set hold tone>

You can set the guidance messages to the other party during the answer hold.

- You cannot change the hold tone that is played during a call.

1 [MENU]▶"SETTINGS"▶"Talk"▶"Set hold tone"▶"On hold tone" ▶Select the hold tone
Select from "Tone 1/Tone 2/Voice announce 1*/Voice announce 2*".
* : Not available when no Voice announce is recorded.

Using the Public Mode (Driving Mode) <Public mode (Driving mode)>

The Public mode is an automatic answering service provided to keep manner in public circumstances. During Public mode, a caller hears a message that you cannot answer the call because you are driving or you are in the place you have to refrain from calling (on the train or bus, in the theater, etc.), then the call ends.

- Public mode can only be set/released from the standby screen. (It can also be set/released when the "圏外" icon is displayed.)
- You can still make calls when the FOMA terminal is in Public mode.
- This function is not available during data communication.
- When you receive a call of "User unset" while Caller ID Request is set to "Activate", caller ID request message is announced. (The Public mode message is not announced.)

1 On the standby screen▶[#] (1 second or longer)



Public mode is set and "🚗" appears.
When you receive a call, the caller hears the message "I can't answer the call because I am driving or I have to refrain from calling now. Please call back later."

■ **To release the Public mode (Driving mode)**
▶On the standby screen▶[#] (1 second or longer)
Public mode is canceled and "🚗" disappears.

NOTE

- The Public mode setting takes priority when "Record message" is "ON".
- The Public mode setting takes priority when Manner mode is set at the same time.
- If you make a voice call to an emergency number (110, 119 or 118) while Public mode is set, Public mode is released.
- The following tones do not sound in Public mode:
  - Ring tone for voice/videophone call
  - Ring tone for mail or message
  - Alarm tone
  - Charge sound
  - Software tone for i-αppli
  - Ring tone for packet communication/64k data communication

● When Public mode (Driving mode) is set

The FOMA terminal does not ring when you receive a voice or videophone call. Calls are logged in the "Received calls" record as "Missed calls" record, and the "Missed call" shortcut icon appears on the standby screen.

- A caller making a voice call hears a message that you cannot answer the call because you are driving or you are in the place you have to refrain from using mobile phones, then the call ends.
- A caller making a videophone call sees the Public mode video message on his or her display, then the call ends.

- If the FOMA terminal is set to Public mode (Driving mode) while network services are activated, voice calls and videophone calls are handled as shown in the **Table 1** (p.63).
- When you receive a mail, the ring tone does not sound and the "New mail" shortcut icon appears on the standby screen.

NOTE

- If the power is off or "圏外" is displayed, the message for "圏外" is announced instead of the Public mode message even when Public mode is set.

Using the Public Mode (Power OFF) <Public mode (Power OFF)>

The Public mode (Power OFF) is an automatic answering service provided to keep manner in public circumstances. During Public mode (Power OFF), a caller who made a call while the FOMA terminal is turned off hears a message that you cannot answer the call because you are in the place you have to turn off the mobile phone (in the hospital, on the airplane, around the priority seat on the train, etc.), then the call ends.

1 On the standby screen▶

[✳][2][5][2][5][1][📞]

Public mode (Power OFF) is set. (Nothing changes on the standby screen.)

When you receive a call after setting Public mode (Power OFF) and turning off the FOMA terminal, the caller hears the message "The person you are calling is in an area where cell phone should not be used. Please call back later."

■ To cancel the Public mode (Power OFF)

▶On the standby screen▶

[✳][2][5][2][5][0][📞]

■ To check Public mode (Power OFF) setting

▶On the standby screen▶

[✳][2][5][2][5][9][📞]

● When Public mode (Power OFF) is set

The setting is valid until "✳25250" is dialed to release the Public mode (Power OFF). The setting is not canceled only by turning on the FOMA terminal. The Public mode (Power OFF) message is announced even when you are in an out-of-service area or where the reception is very poor.

- A caller making a voice call hears a message that you cannot answer the call because you are in the place you have to turn off the mobile phone, then the call ends.
- A caller making a videophone call sees the Public mode (Power OFF) video message on his or her display, then the call ends.
- If the FOMA terminal is set to Public mode (Power OFF) while network services are activated, voice calls and videophone calls are handled as shown in the **Table 1** (p.63).

[Table 1] Handling of received calls when network services and Public mode (Driving mode/Power OFF) are set

Service	When a voice call is received	When a videophone call is received
Voice Mail Service	• Connects to the Voice mail service center after announcing the Public mode message.*	• Connects to the Voice mail service center without showing the Public mode video message.
Call Forwarding Service	• Transfers the call to the forwarding number after announcing the Public mode message.* • The Public mode message is announced or not depending on the setting of the call forwarding service.	• Transfers the videophone call to the forwarding number without showing the Public mode video message. • The connection is not established when the videophone for the forwarding number is not compatible with 3G-324M.
Nuisance Call Blocking	• Ends the call after showing the message that the connection could not be established for the barred callers. • Ends the call after announcing the Public mode message for other callers.	• Ends the call after showing the video message that the connection could not be established for the barred callers. • Ends the call after showing the Public mode video message for other callers.
Caller ID Request	• Ends the call after announcing the caller ID request message for the callers who do not provide the caller ID. • Ends the call after announcing the Public mode message for the callers who provide the caller ID.	• Ends the call after showing the caller ID request video message for the callers who do not provide the caller ID. • Ends the call after showing the Public mode video message for the callers who provide the caller ID.

* : If the ring time is set to 0 second, the Public mode message is not announced and the "Voice Mail Service" or "Call Forwarding Service" is applied. In addition, they are not recorded in the "Received calls" record and "Missed call" shortcut icon does not appear.

When You Cannot Answer a Received Call <Missed calls>

When you cannot answer a received call, the 📵 appears on the standby screen. When you select 📵, you can check the date, time and the caller ID about the call.

● “Advising shortcut icons”→p.94

1 On the standby screen▶■▶Select “📵”

The Received calls list screen appears.→p.53

To check the information with the FOMA terminal folded

When there is a missed call or new mail (i-mode mail, Area Mail and SMS), the illumination keeps on flashing. When you press ▽(▼メモ), you can confirm the caller or sender in the voice.

1 Press ▽(▼メモ) with the FOMA terminal folded

Notify it with a voice according to the setting of “Info notice setting”.

● Illumination flashing

When there is a missed call or new mail, the illumination continues flashing according to the following patterns and colors:

- Voice call/Videophone
  Lighting pattern: Slow Beat
  Flashing color: Citrine orange
- New mail/Area mail
  Lighting pattern: Slow Beat
  Flashing color: Light purple

■Flashing conditions

- If “Missed call” under “Illumination set” is set to “OFF”, the illumination does not work when there is a missed call.
- If “Missed mail” under “Illumination set” is set to “OFF”, the illumination does not work when a new mail arrives.
- The illumination does not flash in Public mode (Driving mode).

■To turn off the lamp

- Selects the icon for “Missed call” or “New mail” in the display or push CLR (1 second or longer) to check the description.

Setting the Notification Method for Missed Calls <Info notice setting>

You can set the notification type when ▽(▼メモ) is pressed.

● The following shows options and actions:

Item	When there is a missed call, new mail, etc.	When there is no missed call, new mail, etc.
ON	“Bibip, bibip” tone.	“Bibip” tone.
OFF	The Confirmation Tone does not sound.	

1 MENU▶“SETTINGS”▶“Incoming call”▶“Info notice setting”▶“ON” or “OFF”

■ When ボイス(Voice) is selected

If you set “日本語” (Japanese) in “Select language”, you can select “電子音” (electronic sound), “ボイス” (voice) and “OFF”.

You can set the voice to read out (ON) the name or not (OFF) when the caller is stored in the phonebook, when a message is recorded or when a mail arrives.

NOTE

- This function alerts you using a “YES” indication when the “Missed call”, “New mail”, etc. shortcut icon is displayed on the standby screen.→p.94
- You cannot use ▽(▼メモ) to check for missed calls or new mail in the following cases:
  - When Side key guard is set to “ON”
  - When playing music with the Music Player/ Music&Video Channel
- The volume set in the “Phone” in the “Ring volume” setting is used (if “Phone” is set to “Silent” or “Step”, the volume is set to “Level 2”).
- Opening the FOMA terminal during the notification stops the notification.
- If the reading of caller’s name is not stored in the phonebook or the name stored in the phonebook is not displayed, the caller’s name is not read out even when “名前通知” (name notification) of “ボイス” (voice) is set to “ON” in Japanese language mode.

Having the Caller Leave a Message <Record message>

When you cannot answer a voice or videophone call, this function allows you to record a message from the caller on your FOMA terminal.

● The voice call can record 5 messages up to 20 seconds, and the videophone call can record 2 messages up to 20 seconds for each 1 case.

Setting Record message

1 MENU▶“SETTINGS”▶“Incoming call”▶“Record message”▶Select any item:

ON……Select the desired type of answer message from “Japanese 1/Japanese 2/English/Voice announce 1*/Voice announce 2*”, then set the record message.

OFF……Cancels the Record message setting.

* : Not available when no Voice announce is recorded.

2 **Enter the ringing time (between 000 to 120 seconds in 3 digits)**

The record message is set and “ ” and “ ” appear on the standby screen.

NOTE

- To give priority to “Record message” function when “Voice Mail”, “Call Forwarding” and “Record message” are set at the same time, set the ringing time of Record message shorter than that of Voice mail and Call forwarding.
- If the mute time set in “Ring time(sec.)” is longer than the ringing time set for the Record message function, the FOMA terminal switches directly to Record message without ringing first. To have the FOMA terminal ring before it records a message, make sure that the ringing time for Record message is longer than the mute time.
- You can use “Ring tone/Image” (for each phonebook entry) to set an answer message for each phone number and “Ring tone/Image” (for the phonebook group) to set an answer message for each group.

When “Record message” is set

The record message activates when the set time is elapsed.

- To the caller of a voice call, the answer message is played and the recording starts.
- To the caller of a videophone call, the “Preparing” image is sent and the answer message is played, then the “Recording” image is sent and the recording starts.

■When message recording starts

- The recording screen appears. The caller’s voice can be heard through the FOMA terminal earpiece during message recording.

Ex. Voice call

■ To answer a voice/videophone call while recording

▶

■When message recording ends

- The original screen reappears and the “Missed call” and “Record message” shortcut icons appear on the standby screen. You can check the contents by selecting the one of the shortcut icons.→p.65
- Number of recordings are displayed with icons on the icon display area at the top of the screen.

 to : Recorded voice messages (1 to 5)

 / : Recorded videophone messages (1 or 2)

NOTE

- When Manner mode is set, you cannot hear the caller’s voice during a message recording.
- You cannot answer another call while recording a message.

Having Callers Leave a Message During an Incoming Call <Quick message>

Even when the “Record message” function is not set to “ON”, you can record messages while receiving a call by pressing a key.

1 **While ringing▶ (▼メモ)**

The recording of the message starts.

■ To set Manner mode when recording starts

▶While ringing▶ (▲マナー)

NOTE

- You cannot set “Record message” to “ON” with this operation.
- If a voice/videophone call arrives when full of voices/videos, Record message does not activate but the call keeps ringing (with operational conditions set in “Manner mode set” when (▲マナー) is pressed).

Playing/Erasing Recorded Messages and Voice Memos

- When there is a recorded message which has not been played, “ ” (Record message) or “ ” (Record VP message) appears on the standby screen.

Continued on next page

<Example: To check the recorded message which has not been played>

1 On the standby screen▶■▶Select “” (Record message) or “” (Record VP message)

The “Play/Erase msg.” screen or “Play/Erase VP msg.” screen appears. “★” appears for the recorded item.

Play/Erase msg.

Function menu➡p.66

■ **To play the recorded message with the menu operation**

▶MENU▶“LIFEKIT”▶“Play/Erase. msg.” or “Play/Erase. VP msg.”

2 Select the item to play

<Record message/Voice memo>

The FOMA terminal beeps and playback begins. When the playback ends, the FOMA terminal gives 2 short beeps and the “Play/Erase msg.” screen reappears.

You can also play the messages by pressing ▽(▼メモ) on the standby screen.

■ **To play the next message while playing a message**

▶▽(▼メモ)

Each time you press ▽(▼メモ), the recorded messages are played from the newest one. Voice memos are played last.

■ **To stop the playback**

▶■ (Stop) or CLR

The “Play/Erase msg.” screen reappears.

<Record VP message>

The playback starts. When the playback ends, the “Play/Erase VP msg.” screen reappears.

■ **To play another message while playing a message**

▶

■ **To adjust volume while playing a message**

▶

■ **To switch ON/OFF of the speaker while playing a message**

▶✉ (FUNC)▶“Speaker ON” or “Speaker OFF”

■ **To pause the playback**

▶■ (Stop)

To resume playback, press ■ (Play).

■ **To stop the playback**

▶CLR

The “Play/Erase VP msg.” screen reappears.

■ **To make a voice/videophone call to the phone number displayed while playing a message**

▶ (voice call) / (V.phone)

■ **To erase the playing message**

▶✉ (FUNC)▶“Erase”▶“YES”

NOTE

- When 2in1 is in A mode or B mode, “★” does not appear for the recorded message recorded in the unused phone number. When set to “Dual mode”, “★” appears for the recorded message recorded in the both phone numbers.

FUNC Play/Erase msg. screen (voice/video) (p.66)

Play……Plays the message.

Delete this……Erases one recorded message or voice memo.

Delete rec. msg.*……Erases all the recorded messages. Voice memos are not erased.

Delete all……Erases all the recorded messages and voice memos.

* : Available only with the Play/Erase msg. screen.

Using Chara-den

This function sends a cartoon character instead of your own image when you make a videophone call.
“What is Chara-den?”→p.237

- You can display your favorite Chara-den if you set “Substitute image” of “Select image” to “Chara-den” beforehand.
  You can also use Chara-den by setting Chara-den in the phonebook or Ring tone/Image function.

1 Sending a substitute image (Chara-den) on videophone▶Control your character by pressing the dial keys

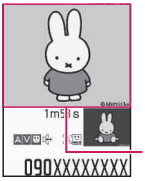

Chara-den

Illustrations Dick Bruna © copyright Mercis bv, 1953-2008 www.miffy.com

Pressing a dial key makes the character perform the action assigned to that key.
“Using Chara-den characters”→p.238

Setting Functions for the Videophone

1 MENU ▶“SETTINGS”▶“Videophone”

The “Videophone settings” screen appears.

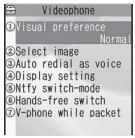

Videophone settings

2 Select any item:

Visual preference……Selects the image quality of videophone calls from “Normal/Prefer img qual/Prefer motion spd”.

Select image→p.67

Auto redial as voice……Sets whether to switch to a voice call when a videophone call cannot be made (ON/OFF).

Display setting

Main display……Selects the image displayed on the main display from “Other side/My side”.

Ntfy switch-mode→p.67

Hands-free switch……Sets whether to switch to Handsfree automatically when starting a videophone call (ON/OFF).

V-phone while packet→p.67

Setting an image to send <Select image>

- You can set a JPEG image whose file size is 100K bytes or less and not larger than 854 dots wide × 854 dots high, or a GIF image whose file size is 100K bytes or less and not larger than 854 dots wide × 480 dots high or 480 dots wide × 854 dots high (except for the files with restrictions).

1 Videophone settings screen (p.67) ▶ “Select image”▶Select any item:

On hold……Sets the image sent for a call on answer hold.

Holding……Sets the image sent while holding a call.

Substitute image……Sets the image.

Record message……You can set the image sent while recording videophone messages.

Preparing……You can set the image sent while preparing for recording videophone messages.

Voice memo……Sets the image sent while recording the voice memo.

2 Select the image to be sent:

Pre-installed……Sends only a message.

Original……Sends an image and a message. To change the image, select an image from My picture from “Change setting” of the function menu.

Chara-den*……Sends the image selected in “Substitute image”.
Function menu of Chara-den list screen→p.238
Priority order for Chara-den setting→p.71
To change the Chara-den, select a Chara-den from Chara-den list from “Change setting” of the function menu.

* : Available only when “Substitute image” is selected.

Setting for Switching between Voice Call and Videophone Call <Ntfy switch-mode>

You can set whether to notify the other party that your FOMA terminal supports the switch between a voice call and a videophone call.

- The other party cannot switch the call when set to “Indication OFF”.
- You cannot set this function during a call or while “ ” appears.

1 Videophone settings screen (p.67) ▶ “Ntfy switch-mode”▶Select any item:

Indication ON • Indication OFF……Activates or deactivates the Ntfy switch-mode.

Check Indication……Displays the “Ntfy switch-mode” setting.

Setting the answer mode when you receive a videophone call during i-mode <V-phone while packet>

- As the multi access function cannot be used for videophone, incoming videophone calls during i-mode communication or while sending or receiving mails are handled according to this setting.→p.360

1 Videophone settings screen (p.67)▶“V-phone while packet”▶Select any item:

V-phone priority……Switches to the videophone ringing screen. When you answer the incoming videophone, i-mode communication is disconnected.

Packet downld priority……Rejects the incoming videophone call.

Continued on next page

V-phone answerphone……If you have subscribed to the “Voice Mail Service”, the videophone call is connected to the Voice Mail service center regardless of “Activate/Deactivate” setting of Voice Mail. When you have not subscribed to this service, “Packet downld priority” is activated.

Call forwarding……If you have subscribed to the Call Forwarding Service, the videophone call is forwarded regardless of “Activate/Deactivate” setting of “Call Forwarding”. When you have not subscribed to this service, “Packet downld priority” is activated.

NOTE

<Visual preference>

- If the signal quality deteriorates during a videophone call, the image may become grainy or patchy regardless of the settings in “Visual preference”.

<Select image>

- If you delete the original still image, the “pre-installed” image is displayed (sent).
- When the Chara-den character set as the substitute image is deleted and the “Chara-den” substitute image cannot be displayed, the pre-installed “ミッフィー (Miffy)” is sent. If you delete the pre-installed “ミッフィー (Miffy)”, the “Pre-installed” substitute still image is sent.

<Auto redial as voice>

- When a videophone call is switched and redialed as a voice call, the call is charged as a voice call and digital communication charges are not applied.
- When a call is redialed, only the voice call records are logged in the “Redial/Dialed calls” record.
- Even if “Auto redial as voice” is set to “ON”, it may not be possible to redial due to the conditions of the network or the other party, such as busy.

<Hands-free switch>

- The FOMA terminal does not switch to handsfree mode automatically in the following cases even when “Hands-free switch” is set to “ON”:
  - While Manner mode is set
  - When a flat-plug earphone/microphone with switch (optional) is connected (however, the microphone operation follows the “Select microphone” setting)
  - When holding a call or Record message is activated for the incoming call

<V-phone while packet>

- Even when set to “V-phone priority”, you cannot answer the videophone call if you are using multi access such as using the i-mode communication during a voice call.
- When set to “Packet downld priority”, “V-phone answerphone” or “Call forwarding”, the received videophone calls are recorded as “Missed calls” in the “Received calls”.
- Even when set to “V-phone priority” or “Packet downld priority”, “Voice Mail” or “Call Forwarding” service is activated if the ring time for the “Voice Mail” or “Call Forwarding” service is set to 0 second.

Using the Videophone Connecting to External Devices

You can make or receive videophone calls from external devices such as the PC by connecting to the FOMA terminal with the FOMA USB Cable with Charge Function 01/02 (Optional).
To use this function, you have to install a videophone application on the dedicated external device or PC and prepare commercially available devices such as an earphone/microphone and USB compatible Web camera.

- Set the USB mode setting to “Communication mode”. There is no specific settings for connecting external devices.
- For details on the operational environment, settings, operations of the videophone application, refer to the manuals supplied with the external terminals.
- “ドコモテレビ電話ソフト (DOCOMO Videophone Software)” (Japanese) is available as the application which is compatible with this function. You can download the Software from the website of DOCOMO Videophone Software (Japanese). (For details of the PC operating environment, etc., refer to the support website (Japanese).)

http://videophonesoft.nttdocomo.co.jp/

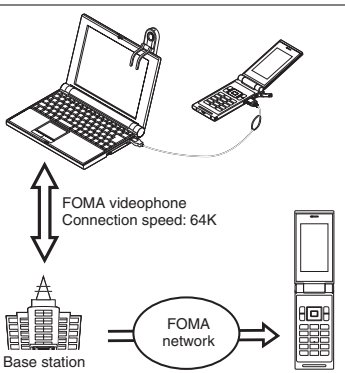

NOTE

- You cannot make a videophone call from the external device during a voice call.
- When you have subscribed to either of the Call Waiting service, Voice Mail Service or Call Forwarding and you receive a videophone call from an external device during a voice call, you can answer the call after ending the current call. When you receive a voice call, videophone call or 64K data communication during a videophone call from the external device, you can answer these calls in the same way.

Phonebook

Phonebooks Available with the FOMA Terminal 70
Adding Information to the Phonebook ..... Add to phonebook 70
Adding Phonebook Entries from the Redial, Dialed Calls and Other Records 72
Renaming Groups..... Group setting 72
Making a Call from the Phonebook..... Search phonebook 73
Editing the Phonebook..... Edit phonebook 76
Deleting a Phonebook Entry ..... Delete data 76
Checking the Phonebook Storage Status..... No. of phonebook 76
Setting Different FOMA Terminal Actions for Each Phone Number and Mail Address ..... Ring tone/Image 77
Using Choku-Den ..... Choku-Den 78
Using Dialing Shortcuts ..... Two-touch dialing 79
Storing the Phonebook at the Data Security Center..... Data security serv. 79

Phonebooks Available with the FOMA Terminal

Your FOMA terminal contains two phonebooks. One is the phonebook in the FOMA terminal (Phone) itself, for which you can set a range of functions, and the other is the UIM (FOMA card) phonebook, which can also be used in other FOMA terminals. Each phonebook can be used differently depending on the purpose.

Differences between the FOMA terminal (Phone) and FOMA card (UIM) phonebooks

■Phonebook data

Entry	FOMA terminal (Phone)	FOMA card (UIM)
Number of entries	Up to 1,000 entries	Up to 50 entries
Group	No Group, Group 01 to 19	No Group, Group 01 to 10
Phone number storage	4 numbers per entry (4,000 numbers in total in the phonebook)	1 number per entry
	You can select from 23 icons	" " only
E-mail address storage	3 addresses per entry (3,000 addresses in total in the phonebook)	1 address per entry
	You can select from 5 icons	" " only
Image storage	1 sill image and 1 Chara-den per entry (respectively 100 in total in the phonebook)	—
Other data storage	Name, Reading, ZIP code, Address, Birthday, Memo	Name, Reading

■Features of the FOMA terminal (Phone) phonebook

The following utility functions can be used with entries stored in the FOMA terminal (Phone) phonebook:

- "Choku-Den"→p.78
- "Two-touch dialing"→p.79
- "Ring tone/Image"→p.77
- "Restrictions"→p.112
- Storing as secret data→p.103
- Secret code setting→p.75

■Features of the UIM phonebook

As phonebook entries are stored on the FOMA card (UIM), you can transfer your phonebook entries to another FOMA terminal simply by switching the FOMA card (UIM). This makes the UIM phonebook very useful when you use multiple FOMA terminals.

Displaying names

■Voice and videophone calls

When receiving a call with caller ID notified from someone who is stored in the phonebook, the phone number and caller's name is displayed.

When a still image is stored in the phonebook, the image is displayed. However, depending on the size and amount of data of the stored image, it may take time to display the image. The caller's name is also displayed in the "Received calls", "Dialed calls" and "Redial" records.

■Displaying names for i-mode mail and SMS

When you send/receive i-mode mail or SMS to/from someone who is stored in the phonebook, his/her name is displayed in the sent/received mail list/detail screen or address list.

Adding Information to the Phonebook <Add to phonebook>

- The entry cannot be stored unless the "Name" field is filled.

1 MENU▶"PHONEBOOK"▶✉ (FUNC)▶"Add to phonebook"▶Select a phonebook▶Enter a name

You can enter kanji characters, hiragana, katakana, alphabets, numbers, symbols and pictographs (Phone only).
You can store up to 16 double-byte or 32 single-byte characters for "Phone" and 10 double-byte or 21 single-byte alphanumeric characters only (including some single-byte symbols) for "UIM".

2 Check the reading▶■ (Set)

■ When the reading is incorrect

Correct the reading using katakana (single-byte for "Phone" and double-byte for "UIM"), single-byte alphabet, numbers and symbols.
You can store up to 32 single-byte characters for "Phone" and 12 double-byte or 25 single-byte alphanumeric characters only (including some single-byte symbols) for "UIM".

3 Select any item:

(group)……Selects a group number among “Group 01-19” for “Phone” or among “Group 01-10” for “UIM”. If no group is selected, the entry is automatically assigned to “No Group”.

(phone number)……Enters the phone number.
- Also select an icon for “Phone”. You can enter up to 26 digits for the phone number. Once you have stored the first phone number, the “ <Not stored>” option appears on the Phonebook edit screen. Select this option to store an additional phone number.
- You can enter 20 digits for a blue FOMA card (UIM), and 26 digits for a green/white FOMA card (UIM).

(mail address)……Enters the e-mail address. You can enter up to 50 single-byte alphabets, numbers and symbols.
Also select an icon for “Phone”. Once you have stored the first e-mail address, the “ <Not stored>” option appears on the Phonebook edit screen. Select this option to store an additional e-mail address.

(address)……Enters the ZIP code and street address. Enter the 7 single-byte numbers for ZIP codes. You can enter up to 50 double-byte or 100 single-byte kanji characters, hiragana, katakana, alphabets, numbers and pictographs.

(birthday)……Enters the contact’s birthday (year, month and day).
Any year from 1800 to 2099 can be set.

(memorandums)……Enters a memo (short note). You can enter up to 100 double-byte or 200 single-byte characters which include kanji characters, hiragana, katakana, alphabets, numbers and pictographs.

(image)……Shoots or selects the image displayed when you receive a call from the contact.

(Chara-den)……Selects the “Chara-den” character displayed as the substitute image for videophone calls.

(memory No.)……Memory numbers are automatically* assigned when an entry is stored in the phonebook, but can be changed to any number between 000 and 999.

* : Assigned to the available number between 010 to 999 from the smallest number. If no number is available from 010 to 999, it is assigned to the available number between 000 to 009.

4 (Finish)

NOTE

- Phonebook entries stored using symbols or pictographs may not be displayed correctly when data are transferred by the infrared communication, etc.
- Enter the correct domain when storing e-mail addresses. The domain is the part of the address that follows the “@” symbol.
  However, if the contact’s e-mail address is in the “[phone number]@docomo.ne.jp” format, store just the phone number as the e-mail address.
- “2in1 setting” in Phonebook is specified according to the 2in1 mode at registration. The setting of “Phonebook 2in1 setting” (/ /) is displayed on the Phonebook list screen or Phonebook detail screen when 2in1 mode is in Dual mode. However, when attaching the phonebook to a mail or copying it to the UIM phonebook, Phonebook 2in1 setting is not to be sent.

Mode	Phonebook 2in1 setting
Dual mode	A
A mode	A
B mode	B
OFF	A

You can change the Phonebook 2in1 setting in “2in1 setting”. →p.322

<Chara-den settings priority sequence>
- The priority order for Chara-den settings is as follows:
  ① Chara-den setting of Ring tone/Image (for individual)
  ② Chara-den setting of Ring tone/Image (for group)
  ③ Chara-den stored in the phonebook entry
  ④ Substitute image in Select image

When phonebook editing is interrupted

You can resume editing the phonebook entry which is stopped being edited because of the emit of the low-voltage alarm or activation of a task of Tool groups using Multitask, etc.

1 MENU▶“PHONEBOOK”▶ (FUNC)▶“Add to phonebook”▶Select the destination▶“Recall”

When you are re-editing the entry, if you cancel editing without storing the changes, the data being edited is erased.

■ To add a new phonebook entry
▶“New”

Adding Phonebook Entries from the Redial, Dialed Calls and Other Records

You can add information to the phonebook from the “Received calls”, “Dialed calls”, “Redial”, “Received address”, “Sent address”, “Text reader”, Site screen or enter phone number screen, etc.

<Example: To add information from the “Received calls” record to the FOMA terminal (Phone) phonebook>

1 Received calls screen (p.53)▶ (FUNC)▶“Add to phonebook”▶“Phone”

■ **To add to the FOMA card (UIM)**
▶“UIM”

2 “Add”▶Search for the phonebook entry to add the information

Searching the phonebook→p.73

■ **To add a new phonebook entry**
▶“New”

■ **To add information to the FOMA card (UIM)**
▶“New” or “Overwrite”

3 Display the phonebook detail screen▶ (Select)

Phone number is automatically entered and the phonebook editing screen appears.
Editing the phonebook→p.76

4 After completing the changes, press (Finish)

■ **If a message appears asking whether to overwrite existing data**
▶“YES”

NOTE

- The “Notify Caller ID” setting (“Notify” or “Not notify”) displayed in the “Dialed calls” and “Redial” records is not stored in the phonebook.

Renaming Groups <Group setting>

You can assign your stored phonebook entries to groups according to the contact role (“Work”, “Friends”, etc.) or by hobby (“Baseball”, “Football”, etc.). This allows you to use the phonebook as if it were divided into different volumes according to purpose.

- “No Group” cannot be renamed.

1 Phonebook list screen (p.73)▶ (FUNC)▶“Group setting”

The “Group setting” screen appears.

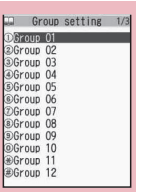

Group setting
Function menu➡p.72

2 Select a group▶Enter the new group name

The “ ” icon appears next to UIM groups.
You can enter up to 10 double-byte or 21 single-byte characters.
If the same name is used for groups on the FOMA terminal (Phone) and UIM, they are displayed as separate groups.

FUNC Group setting screen (p.72)

Edit group name……Edits the group name.

Ring tone/Image→p.77

Reset group name……The changed group name is reset to the default name assigned at the time of purchase.

NOTE

- Resetting the group name does not clear the “Ring tone/Image” setting.

Making a Call from the Phonebook <Search phonebook>

You can make a call by searching for the phonebook entry from the FOMA terminal (Phone) phonebook or the FOMA card (UIM) phonebook.

- When tabs appear on the phonebook list screen, you can switch the display as follows:
  <Example: To switch tabs from "他 (Others)" to "Ta-column" in the Alphabet display>

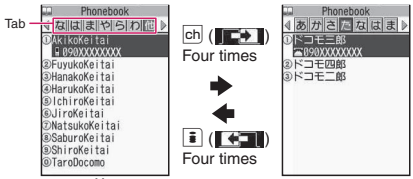

List of "他 (Others)" List of "Ta-column"

NOTE

- You can use ch to switch pages within the same tab.
- You cannot switch the tab with i (◀) when you store to the Choku-Den or compose a message with using the Look-up phonebook.

Searching for the phonebook entry of the person you want to make a call

1 MENU▶"PHONEBOOK"

The "Phonebook list" screen appears.

Phonebook list

Function menu➡p.74

■ To make a voice call from the list screen

▶Highlight the phonebook entry you want to call▶ (voice call)

If the phonebook entry contains multiple phone numbers, the call is made to the first phone number stored for that entry.

■ To switch the tab display

▶ (FUNC)▶"Change Display"

Select the tab from "Alphabet/Memory No./Group".

Alphabet

Memory No.

Group

2 Select the phonebook entry you want

The "Phonebook detail" screen appears.

Phonebook detail

Function menu➡p.75

3 Use ch to display the phone number you want▶ (voice call) or i (V.phone)

■ To send a mail

▶Use ch to display the e-mail address you want▶ (MAIL)

"Composing and Sending i-mode Mail"→p.156

NOTE

- Pressing ⊡ during a call displays the group search screen and pressing ⊡ displays the column search screen.

Searching for the phonebook entry by specifying the search method

You can search for a phonebook entry using any of 8 search criteria; reading, name, phone number, e-mail address, memory number, group or "column" in Japanese phonetics (a, ka, sa, ta, na, etc.) or all.

- Search results are displayed in the sequence shown below based on the reading entered when the entry was stored (except for memory number search).
  katakana → alphabets → numbers → symbols → the reading of caller's name is not stored
  * If a space is placed at the beginning, it is searched first.

1 On the standby screen ▶⊡▶ (FUNC)▶Search phonebook

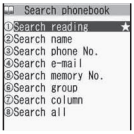

■ To display your preferred search method first

▶Highlight the search method that you want to display first▶i (Prefer)▶"OK"

"★" appears next to the preferred search method. Pressing ⊡ on the standby screen displays the phonebook search screen with your preferred method.

■ To cancel your preferred search method setting

▶On the standby screen▶⊡▶CLR▶Highlight the search method with the star "★"▶i (Reset)

Continued on next page

2 Select the search method:

Search reading·····▶**Enter the reading**▶[Ⓒ]
Enter the reading from the beginning. You do not need to enter the entire name.

Search name·····▶**Enter the name**▶[Ⓒ]
Enter the name from the beginning. You do not need to enter the entire name.

Search phone No.·····▶**Enter the phone number**▶[Ⓒ]
Enter some digits numbers of the phone number. You can also search the phone number by entering a part of the phone number and press [Ⓒ] on the "Enter phone number" screen (p.48).

Search e-mail·····▶**Enter the e-mail address**▶[Ⓒ]
You do not need to enter the entire address.

Search memory No.·····▶**Enter the 3 digits memory number.**
You cannot search the UIM phonebook by memory number.

Search group·····▶**Select the group you want**
Note that the UIM phonebook uses different groups from the FOMA terminal (Phone) phonebook.

Search column·····▶**Press the key for the "column" (tab) you want to search**

[1]: "a" column	[2]: "ka" column
[3]: "sa" column	[4]: "ta" column
[5]: "na" column	[6]: "ha" column
[7]: "ma" column	[8]: "ya" column
[9]: "ra" column	[0]: "wa" column
[*]: Others (alphabet or number, etc.)	

Search all·····All the stored phonebook entries are displayed in the "Alphabet" tab.

When the search ends, the "Phonebook list" screen that meets the searching conditions appears. "[UIM]" is displayed for the UIM phonebook.

Phonebook list

Function menu➡p.74

Accessing the phonebook from the Redial or Dialed Calls record

You can access the stored phonebook detail screen from the function menu of "Received calls", "Dialed calls", "Redial", "Received address" or "Sent address" screen by selecting "Look-up phonebook".

FUNC Phonebook list screen (p.73)

- The available functions vary depending on the searching method and display method.

Add to phonebook→p.70

Connect to Center·····Stores the phonebook data at the DOCOMO Data Security Center.→p.79

Search phonebook·····Select the search type and call the phonebook entry.→p.73

Sort*1·····Sorts the phonebook list in a selected criteria.

Change Display·····Select from "Alphabet/Memory No./Group".

Ring tone/Image→p.78

Restrictions→p.112

Group setting→p.72

Copy to microSD*2→p.248
- When "Copy all" is selected, you can select whether to copy the My Profile data in addition to the phonebook data.

iC transmission*2→p.259

iC trans. all*2→p.260

Send Ir data*2→p.258

Send all Ir data*2→p.258

No. of phonebook→p.76

Attach to mail*2·····Displays a new mail screen with the phonebook data attached.

Set large font⇔**Set normal font**·····Switches the displayed font size between "Big font/Standard font".→p.93

microSD phonebook⇔**Original phonebook**·····Refers to the phonebook in the microSD card or the FOMA terminal (Phone).

Delete data·····Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice"→p.38
- "Delete all" deletes the phonebook on the FOMA card (UIM).

*1: Available on the result screen displayed when the phonebook is searched by entering a condition such as Search reading.
*2: Not operate for the phonebook stored in the FOMA card (UIM)

FUNC Phonebook detail screen (p.73)

Edit phonebook→p.76

Notify Caller ID→p.56

Chaku-moji→p.55

Dial setting

- **Prefix numbers**→p.58
- **Int'l call**→p.52
- **2in1/Multi Num.**……When 2in1 is set to ON and Dual mode, selects from "Number A/Number B/Cancel number" (p.323) (not available when A mode or B mode is set).
  Selects from "Basic number/Additional number 1/Additional number 2/Cancel number" (p.319) at the Multi Number when 2in1 set to OFF.
- **Select image**……Selects the image used during a videophone call from "My side/Chara-den".
  Select "Release settings" to cancel the setting.

Ring tone/Image[*1]→p.77

Restrictions[*1]→p.112

Move to top[*1]……Moves the displayed phone number/mail address to the top when multiple phone numbers/mail addresses are stored in one phonebook entry.

Add to Choku-Den[*1]→p.78

Add shortcut→p.94

Compose message[*2]→p.156

Attach to mail[*1*2]……Displays a new mail screen with the phonebook data attached.

Compose SMS[*2]→p.182

iC transmission[*1]→p.259

iC trans. all[*1]→p.260

Send Ir data[*1]→p.258

Send all Ir data[*1]→p.258

Copy to microSD[*1]→p.248

Copy

- **Name**……Copies the name. The copied name can be pasted into input and other screens.→p.308
- **Phone number**[*3]……Copies the phone number. The copied phone number can be pasted into input and other screens.→p.308

Secret code[*1]→p.75

- **Set code**……Sets the secret code (4 digits).
- **Check code**……Confirms the set secret code.
- **Release settings**……Cancels the set secret code.

Set secret[*1*4]→p.103

Copy to UIM[*5]→p.255

Set large font⇔**Set normal font**……Switches the displayed font size between "Big font/Standard font".→p.93

Delete data→p.76

*1: Not operate for the UIM phonebook.
*2: Not available when 2in1 is in B mode.
*3: Depending on the selected item, one of "Mail address/Address/Birthday/Memorandums" appears.
*4: "Release secret" when referring to the phonebook of the secret data.
*5: "Copy from UIM" when referring to the UIM phonebook.

NOTE

<Add to Choku-Den>
- When stored to Choku-Den, "★" appears on the function menu.

Secret code

When the mail address of the other party is "[phone number]@docomo.ne.jp" and he/she sets a secret code, you have to specify "[phone number + secret code]@docomo.ne.jp" as the e-mail address.
There are 2 ways to send an e-mail to such a destination.

- Set a secret code for the phonebook entry from the phonebook detail screen function menu (when referring to the mail address, the secret code is automatically added to the mail address in the phonebook).
- Store the mail address with a secret code in the phonebook.

NOTE

- Secret code settings are valid only to mail addresses in "[phone number]@docomo.ne.jp" or "phone number" format.
- You cannot set secret codes for the UIM phonebook.

Editing the Phonebook
<Edit phonebook>

1 Phonebook detail screen (p.73)▶ (FUNC)▶“Edit phonebook”▶Edit the respective items

Edit the required items using the procedure used in “Add to phonebook”.
Adding information to the phonebook→p.70

■ **To store in a new memory number**

▶Select “No”▶Enter a memory number (000 to 999) that has not already been stored.
The original phonebook entry is left in its pre-edited state and the edited entry is stored as a new phonebook entry with a different memory number.

2 After editing, press (Finish)▶“YES”

■ **To add information to the UIM**

▶ (Finish)▶“Overwrite” or “Add”
Selecting “Overwrite” stores the edited information.
Selecting “Add” leaves the original phonebook entry unchanged and stores the edited entry as a new phonebook entry.

NOTE

- When the edited entry is stored to the Choku-Den, the Choku-Den is also changed.

Deleting a Phonebook Entry
<Delete data>

1 Phonebook detail screen (p.73)▶ (FUNC)▶“Delete data”▶Select any item:

Delete phone No.*·····Deletes the selected phone number (e-mail address, address, birthday, memorandums, image or “Chara-den” character).

Delete this·····Deletes the phonebook entry.

* : Depending on the selected item, one of “Delete mail add./Delete address/Delete birthday/Delete memorandums/Delete image/Delete Chara-den” appears.

NOTE

- If you delete a phone number or mail address in the phonebook entry in which multiple phone numbers or mail addresses are stored, the order of the subsequent phone numbers or mail addresses moves up.

Checking the Phonebook Storage Status
<No. of phonebook>

1 Phonebook list screen (p.73)▶ (FUNC)▶“No. of phonebook”

■ **Phone (the phonebook stored on the FOMA terminal)**

Phonebook : Displays the number of entries stored in the phonebook.
Number of stored data/1,000 (storage limit)

Secret : Displays the number of entries stored as secret data. (This can only be displayed in “Secret mode” or “Secret data only mode”.)

Image : Displays the number of images stored in the phonebook.
Number of stored data/100 (storage limit)

Chara-den : Displays the number of “Chara-den” characters stored in the phonebook.
Number of stored data/100 (storage limit)

■ **UIM (the phonebook stored on the FOMA card (UIM))**

Phonebook : Displays the number of entries stored in the phonebook.
Number of stored data/50 (storage limit)

Setting Different FOMA Terminal Actions for Each Phone Number and Mail Address

<Ring tone/Image>

You can set different ring tones or answer messages for the Record message depending on groups, phone numbers or e-mail address in the phonebook. This function is useful when you want to distinguish the caller only by the ring tone.

- You cannot set this setting for “No Group” on the FOMA terminal (Phone) or the phonebook or groups on the FOMA card (UIM).
- The Ring tone/Image functions are disabled when the caller does not notify the caller ID. It is recommended to set the “Caller ID Request” service.

1 Phonebook detail screen (p.73)▶ ✉ (FUNC)▶“Ring tone/Image”

The “Ring tone/Image” screen appears.
“★” appears next to the selected function.
The available functions vary depending on the item selected in the phonebook detail screen.



Ring tone/Image

■ To set this function for each group

▶Group setting screen (p.72)▶✉ (FUNC)▶“Ring tone/Image”

2 Select the item to distinguish

Select the item from “Voice call (recv.)/V.phone (dial/recv.)/Mail (recv.)”.

- When “Mail (recv.)” is selected, this function is applied not only i-mode mail but SMS.

3 Select any item:

“★” appears next to the selected function.

■ To release a selected function

▶Highlight the function with “★”▶ (Reset)
The function is released and the “★” disappears.

Ring tone[*1]……Sets ring tones to distinguish the caller of the phone or sender of mail.
“Changing the Ring Tone”→p.82

Image[*1*2]……Sets images to distinguish the caller of the phone. “Changing the Display”→p.88

Chara-den setup[*3]……Selects Chara-den to be displayed as the substitute image for videophone calls.

Set illumination[*1]……Sets the illumination pattern and color to distinguish the caller of the phone or sender of mail.
“Setting the Flashing Mode of the Illumination”→p.92

Vibrator[*1]……Sets vibration patterns to distinguish the caller of the phone or sender of mail.
“Setting the Vibration to Notify You of Incoming Calls”→p.84

Answer message[*2]……Changes the answer message used when record message[*4] or quick message starts up depending on the caller.
“Having the Caller Leave a Message”→p.64

*1: You can also distinguish the incoming 64K data communication.
*2: Available only when “Voice call (recv.)” or “V.phone (dial/recv.)” is selected.
*3: Available only when “V.phone (dial/recv.)” is selected.
*4: You need to set “Record message” to “ON” beforehand.

■ When you set Ring tone/Image

An icon appears in the phonebook detail screen indicating that each item is set.

- : Ring tone (voice/videophone call)
- : Ring tone (mail)
- : Illumination (voice/videophone call)
- : Illumination (mail)
- : Vibration (voice/videophone call)
- : Vibration (mail)
- : Image (voice/videophone call)
- : Answer message (voice/videophone call)
- : Chara-den (videophone call)

NOTE

- You cannot set this setting for the phonebook stored as the secret data. Even if the setting is made for the group, it is disabled for the phonebook entry stored as the secret data.
- The “Mail (recv.)” setting set for a phone number is activated when you receive an SMS or the sender’s e-mail address is “[phone-number]@ docomo.ne.jp”.
- Refer to the following pages for the priority when the Ring tone/Image settings and other settings for incoming calls, etc. are duplicated.
  - Ring tone priority→p.83
  - Vibrator priority→p.84
  - Image priority→p.83
  - Illumination priority→p.93
  - Chara-den priority→p.71

Checking the Ring tone/Image settings

You can check the phonebook entries or groups set in “Ring tone/Image” by function or item.

1 Phonebook list screen (p.73)▶ ✉ (FUNC)▶“Ring tone/Image”

The “Ring tone/Image” screen appears.
“★” appears next to the items to which this function is set.

2 Select the function or item with “★” ▶Highlight the function or item with “★”▶ ✉ (FUNC)▶Select any item:

Check settings……Checks the setting status.
▶Highlight the function or item with “★”* ▶Check the phonebook or group which is set

Release settings……Releases all the settings of the functions marked with “★”.

* : The number of the selected items (the number of times ● is pressed) varies depending on the function or setting specified.

Using Choku-Den <Choku-Den>

By storing frequently used phonebook to Choku-Den, you can make a call or send a mail quickly.

- You can store up to 5 Choku-Den by quoting the stored data (such as phone number) from the FOMA terminal (Phone) phonebook.
- When mail addresses are stored to Choku-Den, you can compose i-mode mail to all the members easily.
- You cannot use this function in Secret data only mode.
- You can use this function in Secret mode, but you cannot add the phonebook stored as secret data to Choku-Den.

Adding to Choku-Den

1 On the standby screen▶ ▯

The “Choku-Den” screen appears.
When there is a stored data, the Choku-Den screen of the first tab with the stored data appears.

Choku-Den
Function menu➡p.79

■ To change the location to add

▶Use ◁▷ to move the tab
You can also use 1 to 5 to move to the tab of the respective number.

2 ▯ (Store) ▶Search the phonebook

Searching the phonebook→p.73

■ To change the added contents

▶▯ (Edit)

3 ● (Select)

The “Quote phonebook” screen appears.

Quote phonebook

4 Use ▯ to select a checkbox (☐)

Select only one phone number and mail address to add respectively.
When a checkbox (☐) is selected, other phone numbers or mail addresses are displayed in gray and the checkbox cannot be selected. To select another checkbox, release the selected checkbox first.

5 ▯ (Finish)

NOTE

- The setting of “Phonebook 2in1 setting” is displayed on the Choku-Den screen when 2in1 mode is in Dual mode.
- When an image is stored in the phonebook, the image in the phonebook is added to Choku-Den.

Making a call/composing a mail from Choku-Den

<Example: To make a call>

1 Choku-Den screen (p.78)▶Use ⊡ to display Choku-Den screen to make a call

You can also use 1 to 5 to move to the tab of the respective number.

2 Use ⊡ to select "CALL"

■ **To compose a mail**

▶Use ⊡ to select "MAIL" →p.156

■ **To make a videophone call**

▶Use ⊡ to select "VIDEO PHONE"

FUNC Choku-Den screen (p.78)

Store/Edit……Adds a phonebook to Choku-Den which is not stored or edits the stored Choku-Den. →p.78

Image……Changes the image displayed in Choku-Den by selecting an image from "My picture".

Broadcast mail……Displays the new mail screen with all mail addresses stored to Choku-Den are entered to the address. →p.156

Release this • Release all……Releases one or all Choku-Den.

NOTE

<Image>

- You can add an image whose file size is 100K bytes or smaller and whose width or height is 854 dots or smaller.
- You cannot add images other than JPEG or GIF.

Using Dialing Shortcuts

<Two-touch dialing>

By assigning memory numbers "000" to "009" to phone numbers in the phonebook, you can call those phone numbers only by pressing one of 0 to 9 (last digit of the memory number) and ☎.

1 0 to 9▶☎ (voice call)/ ⊡ (V.phone)

NOTE

- If the phonebook entry contains multiple phone numbers, the call is made to the first phone number stored for that entry.

Storing the Phonebook at the Data Security Center

<Data security serv.>

You can store the FOMA terminal (Phone) phonebook at the DOCOMO Data Security Center. The stored phonebook can be restored to the FOMA terminal or updated by connecting to the Data Security Center.

- Data Security Service is a pay service you need to apply for. If you have not subscribed to the service and try to connect to the Data Security Center, the notification screen appears.
- The service is not available when out of i-mode service area or the power is off.
- Follow the procedure below to restore the phonebook or set the auto update (Japanese): ⊡▶"iMenu"▶"マイメニュー" (My Menu)▶"電話帳お預かり" (Data Security)
- For details on how to use the Data Security Service, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

1 MENU▶"LIFEKIT"▶"Data security serv."▶"Connect to Center"

■ **To set about sending images in the phonebook**

▶"Sndg img in Phonebook"▶"ON" (default: "OFF")

The images stored in the phonebook are also stored at the Data Security Center.

2 Enter your security code▶"YES"

The FOMA terminal connects to the Data Security Center to start saving the phonebook.

3 ⊡ (Finish)

NOTE

- You cannot store the phonebook stored in the FOMA card (UIM) at the Data Security Center.
- A phonebook entry with an image larger than 100K bytes cannot be stored or updated.

● Restoring/updating the phonebook

The phonebook data stored at the Data Security Center can be stored on the FOMA terminal from the site of the Data Security Center.
You can also edit the phonebook data stored at the Data Security Center from a PC, etc.
For details on how to use, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

NOTE

- Automatic update is not performed when another function is activated while updating the phonebook.
- When the phonebook is not updated, it is notified with “ ” shortcut icon.
- When you restore the phonebook data stored at the Data Security Center to the FOMA terminal, icons stored with phone number or mail address may be replaced with “ ” or “ ”.
- Deleting the FOMA terminal’s phonebook also deletes the phonebook in the Data Security Center when updated. To download the phonebook in the Data Security Center to the FOMA terminal, follow the procedure below (Japanese):
  i▶“iMenu”▶“マイメニュー” (My Menu)▶“電話帳お預かり” (Data Security)▶“お預かりセンター” (Data Security Center)▶Enter your i-mode password▶“決定” (Select)▶“ケータイへダウンロード” (Download to Phone)▶“OK”
  Download starts in about 15 seconds. Redisplay the standby screen.

● Checking the communication log with the Data Security Center

- You can check up to 30 communication logs. If the maximum number of logs is exceeded, logs are overwritten starting with the oldest one.
- On the communication log detail screen, the transmission results, dates, transmission details, data sizes, sending results to the Data Security Center, reception results of the mobile phone and number of data files left in the Data Security Center appear.

1 MENU▶“LIFEKIT”▶“Data security serv.”▶“Exchanging history”

The “Exchanging history” screen appears.

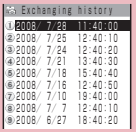

Exchanging history

Function menu➡p.80

2 Select the communication log item

FUNC **Exchanging history screen (p.80)**

Delete this • Delete selected • Delete all……Select the deleting method. “About multiple-choice”→p.38

Sound/Screen/Light Settings

Sound Settings

Changing the Ring Tone ..... Select ring tone 82
Setting 3D Sound ..... Sound effect 84
Setting the Vibration to Notify You of Incoming Calls ..... Vibrator 84
Changing the Ringback Tone ..... Melody Call setting 84
Setting the Keypad Tone ..... Keypad sound 85
Setting the Confirmation Tone for Charging ..... Charge sound 85
Setting the Clock Alarm Tone ..... Clock Alarm Tone set 85
Setting the FOMA Terminal to Warn You before a Call Drops Out ..... Quality alarm 85
Setting the Ring Time for Incoming Mail ..... Mail/Msg. ring time 85
Enabling the Tone to Ring through the Earphone and Speaker ..... Headset usage setting 85
Switching Off the FOMA Terminal's Tone ..... Manner mode 86
Modifying Manner Mode ..... Manner mode set 86

Screen/Light Settings

Changing the Display ..... Display setting 88
Displaying Phonebook Images When You Receive Calls ..... Disp. Phonebook image 89
Setting the Color for Incoming Call Display ..... Disp. call/receive No. 90
Preventing Others from Peeping the Screen ..... Shield view 90
Setting the Display and Keypad Lighting ..... Backlight 90
Changing the Display Design ..... Display design 91
Changing the Menu Display 91
Setting the Illumination Flashing ..... Illumination set 92
Changing the Font ..... Font 93
Setting the Clock Display ..... Clock display 93
Using Shortcut Icons ..... My shortcut 94
Selecting the Icons to Display on the Standby Screen ..... Icons setting 96
Setting the Kisekae Tool ..... Kisekae Tool setting 97

Changing the Ring Tone

<Select ring tone>

You can set the ring tone and receiving screen in each voice call, videophone call or i-mode mail. You can also set the ring tone for specified phone number, mail address or group of phonebook respectively.
→p.77

- Guide to the melody list→p.241
- Setting the sending screen→p.88

1 MENU▶"SETTINGS"▶"Incoming call"▶"Select ring tone"▶Select an item to set a ring tone:

Select the item from "Phone/Videophone/Mail/MessageR/MessageF".

- When "Phone" is selected, the ring tone for voice calls and 64K data communication is set.
- When "Mail" is selected, the ring tone for i-mode mails, SMS and packet communication is set.

2 "Select ring tone"▶Select any item:

Melody……Select the ring tone or melody.

i-motion……Select the i-motion/Chaku-Uta® downloaded to the FOMA terminal or a movie (i-motion) shot using the camera.
When you receive a call, the video or sound for the selected i-motion is played (Chaku-motion).

Music……Sets the Chaku-Uta-Full®. Set any item from the following when the Chaku-Uta-Full® contains the portion where the ring tone is specified by the provider:

Fullsong ring tone……Sets the whole song as the ring tone.

Point ring tone……Sets a part of the song as the ring tone.
▶Use ○ to specify the portion (displayed in orange) to set as the ring tone▶■ (Set)
When you select "Movable contents" folder, select "YES" and select the destination folder.

Voice announce……Sets the message recorded using "Voice announce".

Random melody……Selects a folder containing stored melodies. When you receive a call or message, one of the melodies stored in the folder played at random.

OFF……The FOMA terminal plays no ring tone.

■ To set the calling/receiving display
▶"Select calling disp." or "Select receiving disp."
In "Ringing" screen, select an image from the My picture or i-motion.
In "Select receiving disp.", select an image from the My picture.

3 Select the ring tone

When you select a melody, the FOMA terminal plays the melody.
Press ☎, #, ✉, i or ch to stop the melody playback.

■Pre-installed ring tones, melodies and alarms

Track Title	Track Title
着信音1 to 5	Grand Clock
Go For It!	Elevator
Sophisticated Lady	Whistle
Classy Walts	Piano Man
Kanon	Hand Bell
Forest	Brilliance
Cuckoo Clock	Typewriter
School Chime	Vibe X Vibe

■Pre-installed Chaku-Uta-Full®

Track Title
What Can U Do (Mashup Style)

NOTE

- Some i-motion (i-motion with video only) and Chaku-Uta-Full ® cannot be specified to the ring tone.
- An i-motion with sound only (an i-motion with no video, such as a singer's voice) cannot be specified as the receiving display.
- Flash movies can be set in the Select calling disp. / Select receiving disp., but the ring tone used is the tone set in "Select ring tone".
- Even if the movie/i-motion can be set as Chaku-motion or image displayed for incoming calls, you cannot set these movie/i-motion in the following cases:
  - When the movie/i-motion is transferred to a PC or other FOMA terminal through infrared data exchange function, IC communication function or DOCOMO keitai datalink (p.329), then returned to the FOMA terminal (Phone)
  - When the movie/i-motion is copied from a microSD card to the FOMA terminal (Phone) (including the case that the movie/i-motion is copied from the FOMA terminal (Phone) to a microSD card, then copied to the FOMA terminal (Phone))
- When you select the i-motion in the Movable contents folder, the selected i-motion is moved to the Inbox folder of "i-motion".

NOTE

- When you select the Chaku-Uta-Full® in the Movable contents folder and “Fullsong ring tone” is set, the selected Chaku-Uta-Full® is moved to the Inbox folder of “Music”. When “Point ring tone” is set, the selected portion is clipped as an i-motion and stored in the folder of “i-motion”.
- When you set Chaku-Uta-Full® stored on the FOMA terminal (Phone) as a ring tone with “Point ring tone”, it is not clipped as an i-motion and the selected portion is set to the ring tone.
- The ring tone is played at the volume set in “Ring volume” while selecting the ring tone.
- If you set an i-motion that includes both video and sound as the ring tone and receiving display, the FOMA terminal plays the i-motion set as the ring tone.
- If you set something other than an i-motion that includes both video and sound as the ring tone and then set an i-motion that includes both video and sound as the receiving display, the FOMA terminal plays the i-motion set as the receiving display.
- When the i-motion is set to the ring tone for mail, the default ring tone of “Mail” is used for the ring tone of packet communication. The special screen appears when packet communication is received regardless of the incoming screen settings.
- When you set Chaku-Uta-Full® which contains the jacket image as the ring tone, the jacket image is not displayed when you receive a call.
- When multiple mails or MessageR/F are received at the same time, the operation of the ring tone becomes as follows:

Received contents	Operation of the ring tone
Multiple mails are received	The ring tone set for the last received mail is used.
Mail and MessageR/F are received at the same time	
MessageR/F are received at the same time	The ring tone set for MessageR is used.

NOTE

<Ring tone priority for incoming calls>

- When the ring tone settings for incoming calls are duplicated, the priority is assigned as follows:
  ①Ring tone for Multi number (additional number 1, 2)
  ②Ring tone for Ring tone/Image (for individual)
  ③Ring tone for Ring tone/Image (for group)
  ④Ring tone for B mode of 2in1
  ⑤Ring tone for Select ring tone/Kisekae Tool setting
  * The priority is assigned as follows in the Ring tone/Image (② above) and the Ring tone/Image (③ above).
    ①i-motion for Ring tone
    ②i-motion for Calling display
    ③i-motion for Ring tone (i-motion with no video, such as a singer’s voice), melody or Chaku-Uta-Full®

<Ring tone priority for mails (including SMS)>

- When the ring tone settings for mails are duplicated, the priority is assigned as follows:
  ①Ring tone for Ring tone/Image (for individual)
  ②Ring tone for Ring tone/Image (for group)
  ③Ring tone for Select ring tone/Kisekae Tool setting

<Image priority>

- When the image settings for incoming calls are duplicated, the priority is assigned as follows:
  ①Image setting for Ring tone/Image (for individual)
  ②Image setting for “Ring tone/Image (for group)”
  ③Still image stored in the phonebook
  ④Image setting for B mode of 2in1
  ⑤i-motion for Select ring tone
  ⑥Display setting/Kisekae Tool setting
  * The priority is assigned as follows in the “Ring tone/Image (for individual)” (① above) and the “Ring tone/Image (for group)” (② above):
    ①i-motion for Ring tone
    ②i-motion or still image/image for Select calling disp.

Setting 3D Sound <Sound effect>

Enjoy rich sounds of melodies, voice/videophone call and mail ring tones, sound effects and i-motion when an earphone/microphone (optional) is connected.

1 MENU▶"SETTINGS"▶"Incoming call"▶"Sound effect"▶"Stereo&3D sound"▶"ON" or "OFF"

● Sound effects

Create 3-dimensional and resonating sounds using an earphone/microphone. Sound effects allow you to enjoy i-αppli games and melody playback with richer and more realistic sound.

Playing i-motion with sound effects adds effects such as "natural third dimension", "rich low sound" and "clear instrumental or voice sound" to sounds heard through earphone.

- An icon appears for i-motion with sound effects on the movie list screen. →p.226

NOTE

- Individuals feel differently about 3 dimension. If sound bothers you, set this function to "OFF".
- Setting this function to "ON" does not add effects to sounds heard through the built-in speaker.
- This function is not available if "Headset usage setting" is set to "Headset+speaker". To enable the function, set the setting to "Headset only".

Setting the Vibration to Notify You of Incoming Calls <Vibrator>

You can set different vibration patterns to notify you when you receive a voice call, videophone call or mail.

1 MENU▶"SETTINGS"▶"Incoming call"▶"Vibrator"▶Select an item to set the vibration:

Select "Phone" to set the vibration for voice calls and 64K data communication.

Select "Mail" to set the vibration for i-mode mail, Area Mail, SMS and packet communication.

2 Select the vibration pattern:

Pattern 1-Pattern 3·····Vibrates in each pattern. When you switch the highlighted item while selecting an item, the FOMA terminal vibrates in the highlighted pattern.

Melody linkage·····The FOMA terminal vibrates in a pattern matched to the melody set as the ring tone.

OFF·····The FOMA terminal does not vibrate.

■Icons on the standby screen while setting the vibration pattern

: The vibration starts when receiving either voice or videophone calls.

: The vibration starts when receiving either mail/MessageR/F.

: Both "" and "" are set.

NOTE

- When the vibration is set, take care that the vibration does not move the FOMA terminal towards fire (e.g. on a space heater) or cause it to fall off a table, etc.
- Even when "Melody linkage" is selected, the FOMA terminal not always vibrates to the melody. When no vibration pattern is set for the melody or when an i-motion or Chaku-Uta-Full® is set as the ring tone, the FOMA terminal vibrates in Pattern 2.
- When receiving Area Mail, vibration is linked with the beep sound (when the buzzer sounds) or follows the settings in "Mail" under "Vibrator" (when an incoming Area Mail sounds).

<Vibrator priority>

- When the vibrator settings are duplicated, the priority is assigned as follows:
  ①Vibrator for "Ring tone/Image (for individual)"
  ②Vibrator for "Ring tone/Image (for group)"
  ③Vibrator setting

Changing the Ringback Tone <Melody Call setting>

You can set whether to change the tone heard by the other party or not (YES/NO) when you receive a voice call.

1 MENU▶"SETTINGS"▶"Incoming call"▶"Melody Call setting"▶"YES" or "NO"

When you select "YES", accesses the Melody Call i-mode site. Packet communications charges apply when accessing an IP site, i-mode menu site or free music corner except the setup site.

Follow the instructions on the screen to set.

NOTE

- Melody Call is not activated when the other party dial up from a videophone call.

Setting the Keypad Tone <Keypad sound>

- Setting this function to “OFF” also disables the battery level tone and the warning tone.
- The keypad sound is played at the level set in “Volume” during a call, and fixed at the same level while not talking on the phone.

1 MENU▶**“SETTINGS”▶“Other settings”▶“Keypad sound”▶“ON” or “OFF”**

Setting the Confirmation Tone for Charging <Charge sound>

This function sets to emit a sound when charging starts or is completed.

- When the screen other than Standby screen is displayed or when Manner mode or Public mode (Driving mode) is set, the charge sound does not ring.

1 MENU▶**“SETTINGS”▶“Other settings”▶“Charge sound”▶“ON” or “OFF”**

Setting the Clock Alarm Tone <Clock Alarm Tone set>

You can change the clock alarm tone for Alarm, Schedule, To Do list and 1Seg booking program.

1 MENU▶**“SETTINGS”▶“Clock”▶“Clock Alarm Tone set”▶Select any item:**
Select the alarm tone from “Melody/i-motion/Music/Voice announce/OFF”.

Setting the FOMA Terminal to Warn You before a Call Drops Out <Quality alarm>

The FOMA terminal emits an alarm tone to warn you that the signal quality is deteriorating and the call is likely to drop out.

- The call may drop out without a warning tone if the signal quality worsens very quickly.

1 MENU▶**“SETTINGS”▶“Talk”▶“Quality alarm”▶Select an alarm tone**
Select the alarm tone from “No tone/High tone/Low tone”.

Setting the Ring Time for Incoming Mail <Mail/Msg. ring time>

You can set a ring time when you receive mail or a MessageR/F.

1 MENU▶**“SETTINGS”▶“Incoming call”▶“Mail/Msg. ring time”▶Select an item to set the ring time:**
Select “Mail” to set the ring time for i-mode mail, Area Mail and SMS.

2 **“ON”▶Enter the ring time (01 to 30 seconds in 2 digits)**

■ **To turn off the ring tone**
▶“OFF”
When “Vibrator” is activated, the vibration stops.

Enabling the Tone to Ring through the Earphone and Speaker <Headset usage setting>

You can set the FOMA terminal to play the ring tone or alarm notification through the earphones and speaker when a flat-plug earphone/microphone with switch (optional) is connected.

1 MENU▶**“SETTINGS”▶“External connection”▶“Headset usage setting”▶“Headset+speaker” or “Headset only”**

NOTE

- If “Ring volume” is set to “Silent”, there is no sound from the earphone or speaker.
- When “Phone vol.” and “Mail vol.” in the Manner mode (Original) is set to other than “Silent”, the ring tone still sound. However, Manner mode (Manner mode and Super silent) is set, the ring tone sounds only from the earphones.

Switching Off the FOMA Terminal's Tone <Manner mode>

You can set the FOMA terminal not to play the ring tones or keypad tones through the speaker with a single key operation.

- Refer to the **Table 1** (p.87) and **Table 2** (p.87) for details of Manner mode setting.
- In "Manner mode set", you can select "Manner mode/Super silent/Original" as the FOMA terminal operation mode when Manner mode is set.

1 On the standby screen▶ (▲マナー) (1 second or longer)



You can set the Manner mode by pressing (▲マナー) (1 second or longer) during a voice call.
The FOMA terminal is set to Manner mode, "" appears, and the information specified in "Manner mode set" is displayed.

: The FOMA terminal notifies you using "Vibrator"

: "Ring volume" is set to "Silent"

to : "Record message" and "Record VP message" is set to record messages (The number indicates the number of recorded messages)

During a voice call, the FOMA terminal emits a short double-beep ("bibip") and a message appears notifying you that Manner mode is set.

■ To cancel Manner mode

▶On the standby screen▶ (▲マナー) (1 second or longer)
You can cancel the Manner mode by pressing (▲マナー) (1 second or longer) during a voice call.
Manner mode is canceled and "" disappears.
During a voice call, the FOMA terminal emits a short double-beep ("bibip") and a message appears notifying you that Manner mode is canceled.

NOTE

- Even in Manner mode, the camera shutter clicks.
- When the vibration is set, take care that the vibration does not move the FOMA terminal towards fire (e.g. on a space heater) or cause it to fall off a table, etc.

Modifying Manner Mode <Manner mode set>

You can select the FOMA terminal operations used in Manner mode.

1 MENU▶"SETTINGS"▶"Incoming call"▶"Manner mode set"

The "Manner mode set" screen appears.



Manner mode set

2 Select any item:

Manner mode……Mutes all tones played through the speaker and uses vibration to notify you of incoming calls, etc. However, confirmation tones played through earpiece (when a voice memo or memo is played) are not muted.

Super silent……Mutes all tones played through the speaker and confirmation tones played through the earpiece and uses vibration to notify you of incoming calls, etc.

Original→p.88

[Table 1] When you set Manner mode

Item	Manner Mode	Super silent	Original (displays the Original manner mode settings)
Record message activation	Record message (p.65) setting		“Record message” setting
Vibrator	ON		“Vibrator” setting
Ring volume for voice/videophone call and 64K data communication	Silent		“Phone vol.” setting
Ring volume for mail, packet communication, MessageR/F and Area Mail	Silent		“Mail vol.” setting
Area Mail beep tone	Silent		“Level 6”*
Alarm volume (including snooze function)	Silent		“Alarm vol.” setting
i-αppli volume	Silent		“i-αppli vol.” setting
Schedule/To Do List/Cost limit alarm volume	Silent		“Phone vol.” setting
Activation and completion tones for recorded messages, voice memos, etc.	ON	OFF	“VM tone” setting
Keypad sound	OFF		“Keypad sound” setting
Microphone sensitivity during calls	Up		“Mic sensitiv.” setting
Holding tone	Silent		“Phone vol.” setting Played at “Level 1” when set to other than “Silent”
On hold tone	Silent		“Phone vol.” setting Played at “Level 2” when set to “Step”
Low-voltage alarm	OFF		“LVA tone” setting Even when “Phone vol.” is set to “Silent”, the low-voltage alarm sounds at “Level 1” when “LVA tone” is set to “ON”.
Reading out received mails	“Phone” setting of “Ring volume” Played at “Level 2” when set to “Silent” or “Step” Valid only when “Read out message” in the function menu of the received mail detail screen is selected		
Voice clock (Standby, Snoozing) Missed call/new mail confirmation tones when the FOMA terminal is folded	Silent		“Phone vol.” setting Played at “Level 2” when set to “Step”
ToruCa acquisition tone	Silent		“Phone vol.” setting Played at “Level 4” when set to “Step”

* : If all the following are set to “OFF” or “Silent”, the beep tone does not sound:
“Phone vol.” “Mail vol.” “Alarm vol.” “i-αppli vol.” “Keypad sound” “Record msg.” “LVA tone” “VM tone”

[Table 2] When earphones are connected

Item	Manner Mode	Super silent	Original (displays the Original manner mode settings)
Reading out received mails	“Phone” setting of “Ring volume” Played at “Level 2” when set to “Silent” or “Step”		
Voice clock (during standby or snooze) and missed call/new mail confirmation tones when the FOMA terminal is folded	“Phone” setting of “Ring volume” Played at “Level 2” when set to “Silent” or “Step”		“Phone vol.” setting Played at “Level 2” when set to “Step”
Music Player volume	Volume setting of the Music Player (p.278)		
1Seg viewing/recording playback volume	Volume setting for 1Seg viewing/recording playback (p.210)		

Setting the Original manner

You can set your preferred Manner mode setting.

- The following are the default settings of the "Original" manner mode:
  - Record msg.: OFF
  - Vibrator: ON
  - Phone vol.: Silent
  - Mail vol.: Silent
  - Alarm vol.: Silent
  - i-αppli vol.: Silent
  - VM tone: ON
  - Keypad sound: OFF
  - Mic sensitiv.: Up
  - LVA tone: OFF

1 Manner mode set screen (p.86)▶"Original"▶Select any item:

Record msg.·····Sets the Record message. →p.64

Vibrator·····Sets the vibrator. →p.84

Phone vol.·····Sets the ring tone volume for voice/videophone calls and 64K data communication. →p.61

Mail vol.·····Sets the ring tone volume for mail, packet communication and MessageR/F. →p.61

Alarm vol.·····Sets the volume of the alarm. →p.284

i-αppli vol.·····Sets the volume of the i-αppli. →p.189
However, "Step" cannot be set.

VM tone·····Sets confirmation tones for "Record msg.", "Voice memo", etc.

Keypad sound·····Sets the keypad sound. →p.85

Mic sensitiv.·····Selects from "Normal/Up" for the microphone sensitivity during calls.

LVA tone·····Sets the low-voltage alarm. "When the battery runs out" →p.44

2 Set the respective items▶[i] (Finish)

NOTE

- The record message function set in "Original" starts up after the ringing time set in "Record message" (p.64) (when set to "OFF", the recording starts after 13 seconds).
- If the microphone sensitivity during calls is set to "Up", the volume of the voice heard by the other party raises even if you speak quietly. The microphone sensitivity is set to "Normal" when shooting movies in "Camera" mode.

Changing the Display

<Display setting>

You can also set the still images you shot or downloaded images as the standby screen, dialing/calling screen, etc.

1 MENU▶"SETTINGS"▶"Display"▶"Display setting"

The "Display setting" screen appears.

Display setting

2 Select any item:

Stand-by display·····Changes the standby screen image. →p.89

Wake-up display·····Specifies a message or image displayed when the FOMA terminal is turned on.

- **OFF**·····Does not display an image, etc.
- **Message**·····Enters a message. You can enter up to 50 double-byte or 100 single-byte characters.
- **My picture**·····Selects an image to be displayed from My picture.

Dialing/Calling/V.phone Dialing/V.phone Calling/Mail sending/Mail receiving·····Sets the image displayed when making/receiving voice/videophone calls or sending/receiving mails (i-mode mails and SMS).

■**Dialing/V.phone Dialing/Mail sending setting**
Select from My picture.

■**Calling/V.phone Calling/Mail receiving setting**
"Changing the Ring Tone (Step 2)" →p.82

Check new messages・Mail rec'd result·····Selects the image displayed for "Check new messages" (i-mode mails and messages), "Check new SMS" or mail received result screen from My picture.

NOTE

- Some i-motion cannot be specified.

Changing the standby screen image

- Some screens change its image depending on the timing.
- This function sets the standby screen when 2in1 is in A mode or "2in1 setting" is set to OFF. The settings are not applied when set to "B mode" or "Dual mode". Set "Standby display" of "2in1 setting".

1 Display setting screen (p.88)▶"Stand-by display"▶Select any item:

OFF……No image is displayed.

Calendar……Sets a calendar.

Background……For the background image for the calendar, selects one from My picture.

No background……Displays the calendar only.

My picture……Selects the standby screen image. To set "Stand-by books", select "ミッフィー おばけ", "地球の歩き方 1 to 5" or "世界遺産 1 to 6" from "Pre-installed".

i-motion*……Selects the i-motion to be displayed on the standby screen.

i-αppli display……Sets the i-αppli standby screen. →p.198
When the i-αppli standby screen is set, "★" is displayed.

Random display……Displays an image in the specified folder at random each time you open the FOMA terminal or display the standby screen.

* : When you select the i-motion in the Movable contents folder, the content is moved to the Inbox folder of the FOMA terminal, then set.

■ When the screen for setting the display style is displayed

▶Select the display style▶Check the image▶ ■ (Set)

The following display styles are available:

- Centering disp. (centering an image on the screen)
- Fit in disp. (enlarging/reducing an image size until its height or width fits to the screen)
- Arrange disp. (displaying images from upper left side in order)
- Full-screen disp. (enlarging or clipping an image to fit it into the screen size)

NOTE

- You may not select how to display depends on images you select.
- When "Bigger" is set to "Clock display" and Calendar is also set, "Big" is applied.
- If a movie or i-motion is set in the standby screen, it is played when you open the FOMA terminal.

NOTE

- When a Flash movie or GIF animation is set as the standby screen, the movie or animation is played when the following operations are performed (no sound):
  - FOMA terminal is opened
  - CLR is pressed on the standby screen
  - Return to the standby screen from another screen

  If Keypad lock, etc. is active, Flash movies do not work. Release the lock.

<Flash movie that works as clock>

- If the Flash movie clock stops, play the Flash movie to restart the clock. If the time is not correct, it will be adjusted within a minute after playback ends.

<Priority sequence for standby screen>

- Priority is assigned as follows when standby screen settings are duplicated:
  ①Standby screen (i-αppli)
  ②Display setting/Kisekae Tool setting

When you set the calendar for the standby screen

The calendar appears on the standby screen. You can quickly and easily refer to previous or next calendar dates or activate the schedule.

■ To check the adjacent months on the calendar

Press ■ on the standby screen to select the shortcut icons or calendar. After using ↕ to highlight the calendar, press ■ (Select). The shortcut icons disappear and you can check the calendar of previous or next month with ↕.

■ To activate the schedule function

When the calendar of the previous or the next month can be displayed with ↑ or ↓, press ■ (Select) to launch the schedule function and store a scheduled event for the displayed month.

Displaying Phonebook Images When You Receive Calls <Disp. Phonebook image>

You can set whether to display a still image when receiving a voice/videophone call from a phone number of which still image is stored in the phonebook (ON/OFF).

1 MENU▶"SETTINGS"▶"Incoming call"▶"Disp. Phonebook image"▶"ON" or "OFF"

Setting the Color for Incoming Call Display

<Disp. call/receive No.>

You can display names, phone numbers or mail address on the Redial/Received calls screen or sent/received address list screen with their font color changed.

1 MENU▶"SETTINGS"▶"Incoming call"▶"Disp. call/receive No."▶Select a color

■ To revert the setting to the original

▶ch (Reset)

NOTE

- Press i (Change) to switch the number of colors to be selected from 16 to 256. The pallet of 16 colors and 256 colors switches each time you press i (Change).
- This setting may change depending on the "Color pattern" setting. To return to the setting corresponding to "Color pattern", press ch (Reset) after changing this setting.
- When you use 2in1, information of Number A/Address A are displayed in the color set in this function. To display the information of Number B/Address B in different color, set "Disp. call/receive No." of "2in1 setting".

Preventing Others from Peeping the Screen

<Shield view>

You can make it difficult for others to see the contents on the display.

1 2 (1 second or longer)

Shield view is set and "📹" appears.

■ To release the setting

▶2 (1 second or longer)

NOTE

- You cannot set or release shield view during editing the text or i-αppli is activated.

Setting the Display and Keypad Lighting

<Backlight>

1 MENU▶"SETTINGS"▶"Display"▶"Backlight"▶Select any item:

Lighting……Selects "ON" or "OFF".

Enter the waiting time for the Power saver mode (01 to 20 minutes in 2 digits) when you set the Power saver mode to "ON".

- You can also change the backlight operation (ON/OFF) with 5 (1 second or longer).
- Setting the normal lighting settings for the backlight to "OFF" displays the "💡" icon on the standby screen.
- If you set the Power saver mode to "ON", the standby screen turns off when the specified waiting time has elapsed. If any key is pressed during the Power saver mode, the Power saver mode is canceled.

Charging……Selects "Standard" or "All time ON".

- When set to "Standard", the backlight lights up with the setting of Lighting ON (not enter Power saver mode).
- When set to "All time ON", the backlight of the screen lights up all the time (when there is no operation for about 15 seconds, the brightness is set to "Dark").

Area……Selects "LCD+Keys" or "LCD".

Brightness……Selects backlight brightness from "Bright/Middle/Dark".

NOTE

- When "Lighting" is set to "ON", the backlight turns on when a call is received and lights for about 15 seconds when you turn the FOMA terminal on, press one of the keys, or unfold the FOMA terminal. The backlight also stays on while using the camera or playing a movie/i-motion. If you select "OFF", the backlight does not turn on. However, the backlight turns on during movie shooting regardless of the "Lighting" setting.

Changing the Display Design

<Display design>

You can change the text, background and the background pattern for the function keys.

1 MENU▶“SETTINGS”▶“Display”▶“Display design”▶Select any item:

Color pattern……Selects the color pattern from “White/Yellow/Blue/Red/Black”.

Icon pattern……Selects the design for the Battery icon or Antenna icon from Pattern “1” to “5”.

Soft key……Selects the background pattern for the function keys from Pattern “1” to “3”.

NOTE

- There are some screens or functions that are not affected by the changes made to the settings of this function, such as i-mode sites.

Changing the Menu Display

Setting the menu display mode

<Menu display set>

You can change the display of the branch settings (functions) of “Settings” and the main menu design. You can also set the last one function of the Main Menu and Simple Menu.

1 MENU▶“SETTINGS”▶“Display”▶“Menu display set”

The “Menu display set” screen appears.

Menu display set

2 Select any item:

Menu display……Selects the display mode for the branch settings from “List/Detail”.

Theme……Selects the background or icon for the main menu from “Lacy Pink/Plain White/Seductive Black/エリクル@World (Ericle@World)/Standard Menu/Large Menu/Simple Menu/Original theme/Kisekae Tool”.

- When Original theme is selected→p.91
- When Kisekae Tool is selected→p.242

Memory focus……Sets whether to highlight the last selected main setting when the Main Menu or Simple Menu is redisplayed (Last one function).

Reset menu op. log*……Resets the menu for the automatically sort of menu items (p.33).

* : Only available on the menu display that supports this function.

NOTE

- Last one function memorize the main menu icon when a branch menu is displayed. The icon is not memorized when the operation is interrupted while sub item is selected.

Changing the main menu screen

You can change the icons and background image used on the main setting selection screen (main menu).

1 Menu display set screen (p.91)▶“Theme”▶“Original theme”

The “Original theme” screen appears.

Original theme

Function menu➡p.92

2 Select any item:

Mail • i-mode • i-αppli • Settings • Data box • LifeKit • Network service • Phonebook • Own data • MUSIC • 1Seg • Osaifu-Keitai……Selects the icon images for the main menu from My picture.

Background image……Selects the background image for the main menu from My picture.

NOTE

- You cannot set the following images:
  - 100KB-or-larger image
  - JPEG image larger than 854 dots wide × 854 dots high
  - GIF image larger than 854 dots wide × 480 dots high or 480 dots wide × 854 dots high
- If the image is larger than the display area, the size is reduced without changing the aspect ratio, and displayed in the middle if the image is smaller than the display area.

FUNC Original theme screen (p.91)

- This setting is displayed only when you change the Original theme setting.

Reset……Restores the changed main menu icon or background image to the default settings.

All reset……Restores all the main menu icons and background image to the default settings.

Creating My select <My select>

You can store the frequently used functions as “My select” and easily call them up.→p.31

- You can store up to 10 My select entries.
- You can set the main menu of “Mail”, “i-mode” or “i-αppli” or each item under “Settings”, “Data Box”, “LifeKit”, “Service”, “Phonebook”, “Own data”, “MUSIC”, “1Seg” and “Osaifu-keitai” as My select.
- You cannot store the same function twice.

1 MENU▶ch (MySelect)

The “My select” screen appears.

2 Highlight an item to be stored or changed▶ (Edit) ▶Use to select the function

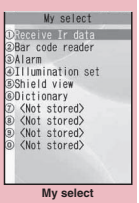

My select

Function menu➡p.92

FUNC My select screen (p.92)

Add to org. menu……Creates My select.

Sort……Press to move the highlighted menu then sort My select.

Add shortcut icon→p.94

Reset my select……Restores the menu to the default settings.

Release……Removes one function from My select.

Release all……Removes all the stored functions from My select.

Setting the Illumination Flashing <Illumination set>

Set the illumination flashing mode of receiving a voice/videophone call or mail. You can also set the illumination for power-on/off, alarm or time signal.

1 MENU▶“SETTINGS”▶“Illumination set”▶Select any item:

Dialing……Set the illumination (ON/OFF) for voice/videophone call reception.

Incoming Call, Incoming V.phone, Call light, Mail receiving, Mail sending……Select the illumination lighting pattern/flashing color.

- To disable the illumination flashing, set the pattern to “OFF”.
- “Incoming Call” can set illumination for receiving a voice call or 64K data communication.
- “Mail receiving” can set illumination for receiving i-mode mail, SMS or packet communication.
- You can set different lighting patterns/flashing colors respectively for calls or messages from specific phone numbers, mail addresses and groups.→p.77

Missed mail……Set the illumination (ON/OFF) for new mail.

Missed call……Set the illumination (ON/OFF) for missed calls.

Open phone, Close phone……Select the illumination lighting pattern/flashing color.
To disable the illumination flashing, set the pattern to “OFF”.

Power ON……Set the illumination (ON/OFF) for power-on.

Power OFF……Set the illumination (ON/OFF) for power-off.

Charging start, Charging end, To Do, Schedule/Alarm……Select the illumination lighting pattern/flashing color.
To disable the illumination flashing, set the pattern to “OFF”.

Time signal……Select the illumination pattern, color and cycle (30 minutes/60 minutes).
To disable time signal, set the pattern to “OFF”.

Exchanging data……Set the illumination (ON/OFF) for infrared communications.

Play sound……Set the illumination (ON/OFF) for music playback.

Activate 1Seg……Set the illumination (ON/OFF) for 1Seg activation.

Demo play……Flashes the illumination in order in patterns other than Random and Melody linked. (Color is all in “Rainbow”)

■ To check the pattern or color for each setting

▶[i] (Play)

NOTE

- When the Pattern/Color list screen is displayed, illumination flashes in the highlighted pattern or color.
- If Pattern is set to “Melody linked” but the melody-linkage-compatible pattern is not registered, the default pattern applies.
- Area Mail Illumination works as follows:
  - Pattern: Flashes in Mail linkage when beep sounds, and follows this function’s settings when new mail tone sounds.
  - Color: Red (Ruby red)
- If you receive multiple mail at the same time, the illumination flashes according to the illumination setting of the last received mail.

<Illumination priority for reception>

- When the illumination settings are duplicated, the priority is assigned as follows:
  ① Illumination for ring tones/images
  ② Illumination for group ring tones/images
  ③ “Incoming Call” or “Incoming V.phone” under Illumination set

Changing the Font <Font>

You can change the characters displayed on the screen to your favorite font (typeface).

❶ On the standby screen▶[7] (1 second or longer)▶Select any item:

Font type……Selects “Gothic” or “Ming-cho”.

Thickness……Selects “Thin” or “Bold”.

Character size……Sets the character size for the respective screens.

Standard • X-large……Sets the character size of the screens to “Standard” or “X-large” all at once.

Separate setting……Sets the character size of the screens respectively.
“Screens that can be set with Separate setting” →p.93

■ Screens that can be set with Separate setting

Item	Target screen for setting
Char. Input	The character entry screen (Edit), the new mail screen (excluding SMS), the preview screen (excluding he sent SMS, etc)
Mail	Mail list/detail screen, screens displayed when referring to Header/Signature/ Template
i-mode	Sites screen, Screen memo, Message list/detail screen
Full brw.	Full Browser screen (except Original layout)
Phonebook	Phonebook list/detail screen, My Profile screen
History data	Redial/Dialed/Received calls screen, Address list screen
i-Channel	i-Channel ticker

NOTE

- The character in the enter phone number screen is not included in this function.
- You can change the character size in the following menus.
  Char. Input: CHG input size→p.303
  Mail: Font size→pp.176, 178
  i-mode: Font size→p.148
  Full brw.: Change font size→p.220
  Phonebook: Set large font⇔Set normal font →pp.74, 75, 291
  History data: Set large font⇔Set normal font →pp.54, 177
  i-Channel: Ticker size setting→p.154

Setting the Clock Display <Clock display>

You can set the Clock display format (12h clock/24h clock), size and character color. You can also set not to display the date or time.

- In the screens other than standby screen, only the time is displayed in small size at the top of the display regardless of this setting.
- Sub clock can be displayed when setting “Size” to “Small”.

❶ [MENU]▶“SETTINGS”▶“Clock”▶“Clock display”▶Select any item:

Style……Selects “12h clock” or “24h clock”.

Size……Selects the display size of date and time from “Bigger/Big/Small/Up Small/OFF”.

Color……Selects “Black” or “White”.

Continued on next page

NOTE

- The Flash movie clock time on the standby screen cannot be set in this function.

Using Shortcut Icons

<My shortcut>

Pasting frequently phone numbers and functions to the standby screen as shortcut icons provides a quick and simple way of accessing those numbers and functions. When you cannot answer a received call or when you receive a mail, the icon appears on the standby screen.

■Shortcut icons that can be pasted

Icon	Operation when selected
	Phone number: Displays the Enter phone number screen with the phone number entered
	Mail address: Displays the New mail screen with the e-mail address entered
	SMS address: Displays the New SMS screen with the phone number entered
	URL (i-mode): Displays the site
	URL (Full Browser): Displays the site
	Melody: Plays the melody
	Image: Displays the image
	Movie or i-motion: Plays the movie or i-motion
	Chara-den: Displays the Chara-den
	PDF: Displays PDF data
	i-αppli software: Launches the i-αppli
	Inbox folder: Displays the Received mail list screen
	Photo mode: Activates the Photo mode
	Movie mode: Activates the Movie mode
	Voice mode: Activates the Voice mode
	To Do list: Displays the To Do list screen
	Schedule: Displays the Schedule screen
	Text memo: Displays the Text memo screen
	Text reader: Activates the Text reader
	Bar code reader: Activates the Bar code reader
	i-Channel: Displays the i-Channel
	Music&Video Channel: Displays the Music&Video Channel screen
	Music: Displays the Music Player screen
	Receive Ir data: Displays the Receive Ir data screen
	Dictionary: Displays the Dictionary screen
	My select: Displays My select
	Calculator: Activates the Calculator
	1Seg: Activates 1Seg

* When a shortcut icon is selected, only the first 11 double-byte or 22 single-byte characters of the title are displayed. You can edit the title.→p.95

■Advising shortcut icons

Icon	Operation when selected
	New mail: Displays received mail detail screen
	New message: Displays the received message detail screen
	New ToruCa: Displays the ToruCa list screen
	Missed call: Displays the missed call screen
	Record message: Displays the play/erase msg. screen
	Record VP message: Displays the play/erase VP msg screen
	Message in the voice mail service center: Displays the voice mail screen
	Missed alarm: Displays the details of the missed alarm
	If i-αppli could not be launched automatically: Displays the auto-start info screen
	if i-αppli standby screen shut down due to an error: Displays the security error history screen
	Receive software update notifications: Updating Software **When the software update has been completed**: Displays the update results screen after entering your security code **When the timer rewriting is set**: Displays the install content preview screen
	When 1Seg timer recording ends: Displays the result screen
	When 1Seg booking program alarm does not work: Displays unviewed program info screen
	When accumulated charge exceeds the cost limit set: Displays the alarm information for notify cost limit after entering your security code
	Automatic updating result of the pattern data for the scanning function has been completed: Displays the automatic updating result of the pattern data

Icon	Operation when selected
	When the updating has not been done successfully or when the new pattern data has been released: The screen prompting you to update the pattern data for the scanning function appears
	When the Data Security Service could not be updated: Displays the screen that allows you to connect to the Data Security Center after you enter your security code
	When the Music&Video channel download has been completed: Displays the Music&Video Channel screen

* The shortcut icon that provides information disappears when it is called from each function or when it is performed.
* To erase the display of the shortcut icon that provides information, hold down CLR for 1 second or longer (you cannot erase some icons).

Pasting shortcut icons

Select "Add shortcut icon" from the function menu on the screen of the function you want to paste, the list screen or the detail screen of the data.

- (1Seg), (Photo mode) and (My selection) are pasted at default.
- You can paste up to 15 shortcut icons for Theme 1 to 3 respectively.

<Example: To paste a phone number from the phonebook>
"Add shortcut icon" in the Function menu (Phonebook detail screen)→p.75

Using shortcut icons to retrieve data or functions

1 On the standby screen▶■

The "Shortcut icon" screen appears, and you can select a shortcut icon. The title of the highlighted shortcut icon is displayed in the balloon.



Desktop icon
Function menu➡p.95

2 Use to select the shortcut icon

■ **If there are 6 or more shortcut icons stored**

The "◀▶" appears on the left or right of the screen. You can use to scroll through the shortcut icons.

Changing the theme of My shortcut on the standby screen

1 MENU▶"SETTINGS"▶"Display"▶"My shortcut"

The "My shortcut" screen (Theme) appears. The "SET" appears for the theme that is set.

My shortcut screen (Theme)
Function menu➡p.95

2 Select a theme▶"YES"

When adding shortcut icons to the standby screen (p.95) after this procedure, you can sort and paste shortcut icons to the selected theme.

■ **To check the theme contents**

▶Highlight the theme▶ (Detail)
"My shortcut" screen (Detail) appears.



My shortcut screen (Detail)
Function menu➡p.95

FUNC Shortcut icon screen (p.95)/My shortcut screen (Theme/Detail) (p.95)

- As available functions are different between the Shortcut icon screen and My shortcut screen (Theme/Detail), displayed items vary.

Add new icon……Select an icon to paste from the function name list.

Create icon……Selects icons to be pasted from the function name list, then selects the theme.

Sort icon……Changes the position of desktop icons.

Display setting……Selects the icon display method from "Display always/Display at use". When set to "Display at use", the desktop icons are displayed only when you press ■ on the standby screen.

Edit title……You can enter up to 16 double-byte or 32 single-byte characters for the icon title, and 11 double-byte or 22 single-byte characters for the theme.

Shortcut icon info……Displays the icon title, type, contents, etc.

Copy……Selects from "Copy this/Copy selected/Copy all" and copies the ions to another theme.
"About multiple-choice"→p.38

Move……Selects from "Move this/Move selected/Move all" and moves the icons to another theme.
"About multiple-choice"→p.38

Continued on next page

Reset my shortcut……Restores the settings to the default settings (“1Seg”, “Photo mode” and “My selection”).

Change theme……Changes the theme of My shortcut.

Delete……Selects the deleting method from “Delete this/Delete selected/Delete all”.
“About multiple-choice”→p.38

Setting the standby screen

1 On the standby screen▶■▶ (Settings)▶Select any item:

Stand-by image set……Changes the standby screen image.→p.89

Kisekae Tool set.→p.97

ch-key setting→p.284

Clock disp set……Sets the clock on the standby screen.→p.93

Selecting the Icons to Display on the Standby Screen

<Icons setting>

You can set whether to use ✣ or not (ON/OFF) for selecting the icons, date or time displayed on the standby screen.

1 MENU▶“SETTINGS”▶“Display”▶“Icons setting”▶“ON” or “OFF”

Selecting displayed icons

1 On the standby screen▶■▶Highlight the icon with ✣



The title of the highlighted icon is displayed.

2 ■ (Select)

The setting screen for the selected icon, etc. is displayed.

■Icon you can select

Icon	After selected
	Displays “Display design”
	Displays “Display design”
self	Displays the screen for releasing “Self mode”
(Red) (Red)	Displays the unread mail list
	Displays the “Inbox”
(Red) (Red)	Displays “MessageR” or “MessageF”
(Red) (R: Red) (F: Red)	Displays the screen for selecting “MessageR” or “MessageF”
	Displays the unread mail list
(Red) (Red) (Red)	Performs “Check new messages”
	Displays the “Lock function selection” screen
	Displays the screen for releasing “IC card lock setting”
	Displays “USB mode setting”
	Displays the screen for selecting “Vibrator” or “Mail/Msg. ring time”
	When Manner mode is not set : Displays the screen for selecting “Ring volume” or “Mail/Msg. ring time” **When Manner mode or Super silent mode is set** : Displays the message that the setting is not available **When Original manner is set** : Displays the screen for selecting “Original” or “Mail/Msg. ring time”
	Displays “Manner mode set”
	Displays the screen for selecting “Schedule”, “Alarm”, “To Do list”, “1Seg booking program” or “1Seg timer recording”
to	Displays “Voice Mail”
, to	Displays a message notifying that nothing is recorded. Or, displays “Play/Erase msg.”

Icon	After selected
	Displays a message notifying that nothing is recorded. Or, displays “Play/Erase VP msg.”
	Displays the screen for selecting “Backlight” or “Shield view”
	Displays the screen for setting “Keypad lock”
	Displays “Side key guard”
Date	Displays “Schedule” Displays “Set main time” when the time is not set
Main clock	Displays “Alarm” Displays “Set main time” when the time is not set
Sub clock	Displays “Set sub clock”
	Switches and displays the active tasks

Setting the Kisekae Tool

<Kisekae Tool setting>

You can change various design of the FOMA terminal such as screens and ring tones all at once with the Kisekae Tool package.

- In addition to Kisekae Tool designed for the phone color, “ミッフィー”, “エリクル@World” and “ダイレクトメニュー” are pre-installed at the time of purchase.
- You can download the Kisekae Tool package from sites.→p.146
  The downloaded packages are stored in Data Box and you can check the contents.→p.225
- The following items can be set all at once.
  - “Display setting”
  - “Select ring tone”
  - “Clock Alarm Tone set”
  - “Menu display set” - “Theme”
  - “i-Channel” - “i-Channel setting” - “Ticker color setting”
  - “Change skin” of the Music Player
  - “Clock display”
  - “Display design”
- When 2in1 is set, Kisekae Tool set in any mode is applied to all modes/phone numbers/mail addresses except for the following:
  - Standby screen are applied only to A mode.
  - Ring tones for voice call and videophone call, Voice call ringing screen and Videophone ringing screen are applied only to A mode.
  - Ring tone for mail is applied only to A mode.
- When you change the design of the menu display using Kisekae Tool, the menu structure may change in accordance with frequency of using functions. Also, you cannot access some functions entering the menu number assigned to the functions. In this case, change the main menu to “Standard Menu” (p.33) or perform “Reset menu op. log” (p.91) so as to operate as described in this manual.

Setting a package

- If you store the current settings to “お気に入り” (My favorite) before setting all at once, you can restore the stored setting later.→p.98

1 MENU▶“SETTINGS”▶“Kisekae Tool setting”

The “Kisekae Tool set” screen appears.

Kisekae Tool set

Function menu➡p.98

2 Select an item▶“YES”

No item is set in “お気に入り” (My favorite) at the time of purchase.

■ To check the settings

▶Highlight an item▶i (Detail)▶Highlight an item▶i (Play)

■ To search packages by i-mode

▶“Search by i-mode”▶“YES”

NOTE

- Items to be changed vary depending on the package.
- When a package is set, the color of “Disp. call/receive No.” may be changed.
- Highlighting the pre-install package in Kisekae-tool setting list screen displays the color pattern and standby image and the thumbnail of the main menu.

FUNC Kisekae Tool set list screen (p.97)

Edit title……Edits the title. You can enter up to 10 double-byte or 20 single-byte characters.

Check Setting info……Checks the set contents.

Reset Setting info……Deletes the “お気に入り” (My favorite) settings.

Storing the current setting to “お気に入り” (My favorite)

1 Kisekae Tool set list screen (p.97)▶Highlight “お気に入り”(My favorite)▶ (Detail)

The “Contents checking” screen appears.
“No data” appears for items with no settings.

2 (FUNC)▶“Take Setting info”▶“YES”

Contents checking

Function menu➡p.98

● Changing “お気に入り” (My favorite) settings

You can change the items stored in “お気に入り” (My favorite) on the contents checking screen.

1 Contents checking screen (p.98)▶Select an item▶Change the setting

NOTE

- The details of “i-αppli display” is not stored to “Stand-by image” in “お気に入り” (My favorite).
- If an image, i-motion or melody stored in “お気に入り” (My favorite) is deleted, it is also deleted from “お気に入り” (My favorite) and “No data” appears.

FUNC Contents checking screen (p.98)

Set all[*1]**/Finish**[*2]……Sets to the currently displayed items all at once.

Take Setting info[*2]……Retains the current settings and stores in “お気に入り” (My favorite).

Reset Setting info[*2]……Deletes settings stored in “お気に入り” (My favorite) and set all items to “No data”.

*1: Available only for “ミッフィー”, “ダイレクトメニュー” and downloaded Kisekae Tool package ( ) from sites.
*2: Displayed only with the data with “ ”

Security Settings

About Your Security Codes

Security Codes Used on the FOMA Terminal 100
Changing Your Security Code ..... Change security code 101
Setting Your PIN Codes ..... PIN setting 101
Releasing PIN Lock 101

Restricting the Phone Controls and Functions

Preventing Others from Using Your Terminal ..... Dial lock/Omakase Lock 101
Preventing Others from Viewing Your Phonebook or Schedule Data ..... Secret mode/Secret data only mode 103
Preventing Others from Viewing Data ..... Secret folder 104
Preventing Others from Viewing Your Personal Information or Performing the Phone/Mail Operations ..... Original lock 106
Locking the Key Operation Automatically ..... Keypad lock 110
Using the IC Card Authentication ..... IC card authentic. 111
Disabling the Side Key ..... Side key guard 112

Restricting Incoming and Outgoing Calls or Transmissions

Preventing Unwanted Mail Display ..... Mail box lock/Folder lock 112
Restricting Incoming and Outgoing Calls for Specific Phone Numbers ..... Restrictions 112
Rejecting Calls from Unidentified Callers ..... Call setting w/o ID 114
Muting Ring Tones for Callers Not Stored in the Phonebook ..... Ring time(sec.) 114
Rejecting Calls from Callers Not Stored in the Phonebook ..... Reject unknown 114
Disabling Making/Receiving Calls, etc. ..... Self mode 115

Other Security Settings

Data Security Service ..... Data Security Service 115
Other Security Settings 116

Security Codes Used on the FOMA Terminal

To make the FOMA terminal more convenient and secure, some functions require the security code. In addition to the security code for various FOMA terminal operations, you also have the Network security code for accessing network services and the i-mode password. Make use of the FOMA terminal using an appropriate security code according to the purpose.

Notes on the security codes

- Avoid using a readily predictable number such as “birthday”, “part of the phone number”, “street address number or room number”, “1111” and “1234”. Make sure to make a note of the security code you set in case you forget it.
- Take great care not to disclose your security code to others. If your security code is disclosed to others and abused, NTT DOCOMO shall have no liability for any damage due to any unauthorized use of it.
- DOCOMO by no means inquire your security code.
- If you forget any of your security codes, you must bring your official identification providing that you are the subscriber (such as a driver’s license), the FOMA terminal, and the FOMA card (UIM) with you to a DOCOMO shop.
  For details, contact the inquiries number provided on the back of this manual.

■Security Code

The security code is set to “0000” (4 zeros) at the time of purchase. You can change the security code by yourself. →p.101

When the security code screen appears, enter the 4 to 8 digit security code and press ■ (Set).

- The entered security code is displayed as “_” and the numbers are not displayed.
- When you enter a wrong security code or enter nothing for about 15 seconds, a warning tone sounds and a warning message appears.

■Network Security Code

The network security code is a 4-digit number required for using the DOCOMO e-site or various network services. You can set any number at the time of subscription but you can change it afterwards by yourself.
If you have the “docomo ID/Password” for general PC support site “My docomo”, you can change the network security code from your PC.
You can also change it by yourself using i-mode, from “各種手続き” (Applications and Procedures) on the DOCOMO e-site. (Japanese)

* For details of “My docomo” and “DOCOMO e-site”, see the back of the back cover of this manual.

■i-mode Password

You will need a 4-digit “i-mode password” to register or unregister site in My Menu, subscribe to or cancel Message Service and fee-based i-mode sites, and enter Mail Settings (There may be other passwords set independently by the information service providers). The default i-mode password when you apply for i-mode service is set to 0000. Please set a new password.
You can change the password using i-mode, by selecting i▶“iMenu”▶“English”▶“Options”▶“Change i-mode Password”.

■PIN1 Code and PIN2 Code

You can set 2 PIN codes on the FOMA card (UIM) for your FOMA terminal, the PIN1 code and PIN2 code. These security codes are set to “0000” (4 zeros) at the time of subscription. You can change the PIN1/PIN2 codes by yourself. →p.101
PIN1 is a four- to eight-digit number (code) and must be entered every time you insert the FOMA card (UIM) into the FOMA terminal or turn on the handset power. The PIN1 code is used to verify the handset user and prevent others from gaining unauthorized access to your mobile phone handset. When the PIN1 code setting is set to “ON”, you can make and receive calls and use handset functions after entering the correct PIN code. PIN2 code is a 4- to 8-digit password that you enter when using or requesting user certificates or performing tasks such as resetting total call charges.

* When you purchase a new FOMA terminal and insert your current FOMA card (UIM), use the PIN1 and PIN2 codes you set to the current card.

When the PIN1 or PIN2 code entry screen appears, enter the 4 to 8 digit PIN1/PIN2 code and press ■ (Set).

Ex. PIN1 code

- The entered PIN1/PIN2 code is displayed as “_”.
- If you enter a wrong PIN1/PIN2 code three times consecutively, the PIN1/PIN2 code is locked and cannot be used anymore. (The remaining number of times for the entry appears on the screen.) When you enter the correct PIN1/PIN2 code, the number of times for entry is reset to 3.

■PIN Unlock Code (PUK Code)

The PIN unlock code (PUK code) is an 8-digit number for releasing the lock of PIN1/PIN2 code. You cannot change the PUK code.

● If you enter a wrong PUK code ten times consecutively, the FOMA card (UIM) is locked.

<When powering on>

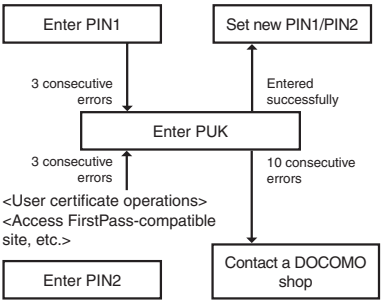

Changing Your Security Code

<Change security code>

1 MENU▶"SETTINGS"▶"Lock/Security"▶"Change security code"▶Enter your current security code▶Enter new 4 to 8 digits security code▶"YES"

Setting Your PIN Codes

<PIN setting>

You can set PIN1 code and PIN2 code for your FOMA card (UIM). PIN1 code and PIN2 code →p.100

● PIN1 code, PIN2 code and PIN1 code entry set are recorded to the FOMA card (UIM).

● To change your PIN1 code, select "ON" in "PIN1 code entry set".

1 MENU▶"SETTINGS"▶"Lock/Security"▶"PIN setting"▶Enter your security code

The "PIN setting" screen appears.

PIN setting

2 Select any item:

Change PIN1 code……Enter the current PIN1 code (4 to 8 digit) and enter a new PIN1 code 2 times (1 time for confirmation).

Change PIN2 code……Enter the current PIN2 code (4 to 8 digit) and enter a new PIN2 code 2 times (1 time for confirmation).

PIN1 code entry set……Sets whether PIN1 code to be input when you turn the FOMA terminal on or not (ON/OFF).

Releasing PIN Lock

If you enter incorrect PIN1 code or PIN2 code 3 times in a row, you must unlock the locked PIN1 code or PIN2 code then set a new PIN1 code or PIN2 code.

<Example: To unlock your PIN1 code>

1 Enter the 8 digit PUK code

2 Enter a new 4 to 8 digit PIN1 code▶Enter the new 4 to 8 digit PIN1 code again

Preventing Others from Using Your Terminal

<Dial lock/Omakase Lock>

To lock your FOMA terminal to prevent others from using, you can set "Dial lock" that can be set on the FOMA terminal and "Omakase Lock" that can be set remotely.

● Dial lock or Omakase Lock is not released even when the power is turned off.

● Available operations and functions when Dial lock or Omakase Lock is set

Function	Dial lock	Omakase Lock
Turning the FOMA Terminal on/off	○	○
Calling emergency numbers (110, 119 or 118)	○	×
Setting/releasing Dial lock	○	×
Setting/releasing Omakase Lock	○	○
Receiving a voice or videophone calls	○	○
Updating the Data Security Service data	○	×

○: Available ×: Unavailable

Continued on next page

- When Dial lock or Omakase Lock is set, the “Alarm”, “Schedule”, “To Do list”, “1Seg booking program” and “1Seg timer recording” are not given. Once Dial lock or Omakase Lock is released, the “ (Missed alarm)” or “ (Missed program)” shortcut icon appears on the standby screen.
- The shortcut icon is not displayed when Dial lock or Omakase Lock is set. Once Dial lock or Omakase Lock is released, these icons reappear.
- Even when you receive calls from the callers stored in the phonebook, only the phone numbers are displayed when Dial lock or Omakase Lock is set.

Setting the Dial lock

1 MENU▶“SETTINGS”▶“Lock/Security”▶“Lock”▶Enter your security code▶“Dial lock”

Operations during Dial lock

- “Dial lock” and “ ” appear on the screen. IC card lock is also set to “ON” and IC card functions become unavailable (Dial lock can be released using the IC card authentication function).
- You can still receive MessageR/F, i-mode mail or SMS automatically when Dial lock is set, but the receiving screen or reception results screen does not appear. Once Dial lock is released, the icon for the received message/mail appears on the standby screen.
  - You can still receive the Area Mail automatically and view the contents.

Releasing Dial lock

- If you fail to release Dial lock 5 times in a row, the FOMA terminal turns off. However, you can turn it on again.

1 Enter your security code on the screen when Dial lock is set▶■

Dial lock is released and “ ” disappears.

■ **To release the lock using the IC card authentication→p.111**

NOTE

- Even if an incorrect security code is input while releasing Dial lock, no error message appears. Press and input a correct security code again.

Using Omakase Lock

This service enables you to remotely lock the FOMA terminal with the FOMA card (UIM) you subscribed to inserted by contacting DOCOMO or from My docomo when you lost your FOMA terminal. You can release the lock by calling DOCOMO, etc.

* Omakase Lock is a pay service. If you subscribe to the service at the same time with the subscription of suspending the service or while the service is suspended, no charge applies.

Call Center (for setting/releasing Omakase Lock)

0120-524-360 (Operating time: 24 hours a day) (only in Japanese)

* My docomo is also available to set/release Omakase Lock via a PC, etc.

* For details on Omakase Lock, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

Operations during Omakase Lock

- “おまかせロック中です” (Omakase Lock set) appears on the display.
- When Omakase Lock is set, all the key operations except answering voice/videophone calls and powering on/off are locked, and the functions (including IC card) become unusable.
- Although you can receive voice/videophone calls, only the phone number appears on the display while the name, image, etc. stored in the phonebook do not.
- Mails received when Omakase Lock is set are kept at i-mode center.
- You can turn the FOMA terminal on/off, but Omakase Lock is not released even when the power is turned off.
- The FOMA card (UIM) and microSD card remain unlocked.

NOTE

- When other function is activated, the function is terminated and the FOMA terminal is locked (the editing data may be canceled before terminating).
- You can set Omakase Lock even when other lock function is set. In this case, releasing Omakase Lock returns to the lock setting before Omakase Lock is set (however, Secret or Secret data only mode are released).
- Lock is not set when “ ”, Self mode is set or the FOMA terminal is turned off.
- The lock is not set if you subscribed to the “Dual Network” service and are using the mova service.

NOTE

- The FOMA terminal is locked if the subscriber requests even if the subscriber and the user of the FOMA terminal are different.
- If the FOMA terminal is on voice or videophone call when you try to release Omakase Lock, the lock is released after the call ends.

Preventing Others from Viewing Your Phonebook or Schedule Data

<Secret mode/Secret data only mode>

When the phonebook or schedule entries are stored in Secret or Secret data only mode, these entries are stored as secret data and are not displayed in normal mode. To display the secret data, set the FOMA terminal to Secret mode (displays all data including the secret data) or Secret data only mode (displays only the secret data).

- You can also keep the data in “My picture”, “i-motion”, “Received mails”, “Sent mails” and “Bookmark” into the secret folder to prevent others from viewing the data.→p.104

Setting to Secret or Secret data only mode

1 MENU▶“SETTINGS”▶“Lock/Security”▶“Secret mode” or “Secret data only mode”▶Enter your security code

When setting to Secret mode, “ ” appears. When setting to Secret data only mode, “ ” flashes and the number of secret data is displayed for about 2 seconds.

Icons displayed when other lock function is set at the same time→p.27

Storing/viewing the Secret data and setting the Secret data back to normal data

- You cannot set phonebook entries as secret data on the FOMA card (UIM).
- When making or receiving voice/videophone calls during secret mode or secret data only mode, set mode is released even if you do not answer the call.

■Setting phonebook entries or schedule entries as secret data

Store the information in Secret or Secret data only mode.
Adding information to the phonebook→p.70
Adding information to your schedule→p.285

■Setting the stored phonebook entries as secret data

Select “Set secret” from the function menu of the phonebook detail screen.

* If you set the phonebook entry stored to Choku-Den as a secret data, the entry is deleted from Choku-Den.

■Viewing the secret data

Set the FOMA terminal to Secret or Secret data only mode, then view the phonebook or schedule.
Searching the phonebook→p.73
Checking your schedule→p.287

■Setting the secret data back to normal data

Set the FOMA terminal to Secret or Secret data only mode, display the “Phonebook detail” screen (p.73) or “Schedule list” screen (p.287) to select “Release secret” from the function menu.

Canceling Secret or Secret data only mode

1 In Secret or Secret data only mode,

Secret or Secret data only mode is canceled and “ ” disappears.

You can also release the set mode by selecting MENU▶“SETTINGS”▶“Lock/Security”▶“Secret mode” or “Secret data only mode”

NOTE

- When a secret data is highlighted in the list screen during Secret mode or when the detail screen of a secret data is displayed, the lighting of “ ” changes to flashing.
- “Phonebook” or “Schedule” entries stored as secret data can only be retrieved, modified, deleted or referred in Secret or Secret data only mode. When the FOMA terminal is in normal mode, you will be notified of schedule events stored as secret data by an alarm, but no alarm message is displayed.

Continued on next page

NOTE

- If the caller of the incoming call is stored as secret data and notifies the caller ID, the stored name or image is not displayed and only the phone number is displayed. Only the phone number is displayed in “Received calls” record. Setting Secret mode or Secret data only mode displays the name stored in the “Received calls” record.
- If the Secret mode or Secret data only mode is released when you receive mail from a sender stored as secret data, not the name but the mail address is displayed. The mail address is not stored in “Received address” record.
- If you modify your “Phonebook” or “Schedule” in Secret mode, the modified data becomes secret data. If you modify the phonebook, all the items stored under the modified memory number become secret data.
- If “Dial lock/Omakase Lock” is set at the same time with “Secret mode” or “Secret data only mode”, releasing “Dial lock/Omakase Lock” also cancels “Secret mode” or “Secret data only mode”.
- When you make a call or send a mail using the phonebook stored as a secret data, it is not recorded in the “Redial”, “Dialed calls” or “Sent address” records.

Preventing Others from Viewing Data <Secret folder>

You can store images, movies, i-motion, received mail, sent mail, and bookmarks you want to prevent others from viewing data, using Secret folder which is displayed only in Secret mode or Secret data only mode.

- You can store the data stored in the FOMA terminal only.
- The maximum number of data records that can be stored in each secret folder is as follows:

My picture	i-motion	Received mail
Approx. 100 (Approx. 2M bytes)	Approx. 10 (Approx. 10M bytes)	Approx. 100 (Approx. 1.2M bytes)
Sent mail	**Bookmark (i-mode)**	**Bookmark (Full Browser)**
Approx. 100 (Approx. 1.2M bytes)	Approx. 10 (Approx. 3K bytes)	Approx. 10 (Approx. 6K bytes)

* The data may not be able to be stored up to the maximum number depending on the file size of each data.

<Example: To store an image in My picture into the Secret folder>

1 Switch the FOMA terminal to Secret mode or Secret data only mode→p.103

2 Image list screen (p.225)▶Use ⊕ to move the frame of the image▶ ✉ (FUNC)▶“Keep in secret”

NOTE

- The Secret folder is already prepared for the FOMA terminal. You cannot create another Secret folder, or delete or rename the existing Secret folder.
- If the secret/secret data only mode is canceled by an incoming call, etc. while displaying the data in the secret folder, the screen returns to the list screen of each folder.

<Received mail> <Sent mail>

- When you receive the SMS report for the SMS stored in the Secret folder, you cannot select “Disp. SMS report” from the function menu of the SMS detail screen. You can select after putting out a mail message from the Secret folder.

NOTE

<Shortcut icon>

- When the image, movie or i-motion pasted as a shortcut icon is stored in the Secret folder, it is not displayed even when the shortcut icon is selected.
- Even when the Bookmark, received mail or sent mail pasted as a shortcut icon is stored in the Secret folder, normal operation is performed when the shortcut icon is selected.

● Function menu of the Secret folder

Some functions for the folder or data in the folder are restricted in the Secret folder. The table below shows the available functions on the folder list screen, the data list screen, and the data detail screen. For information on “Put out”, refer to “Changing a secret data to normal data” (p.106).

■Function menu when the Secret folder is highlighted on the folder list screen

My picture (p.253)	i-motion (p.253)
Add folder Delete all image*1 Memory info	Add folder Delete all*1 Memory info
Received/Sent mail (p.173)	**Bookmark (p.142)**
Add folder No. of messages*1 Open folder iC trans. all*1 Send all Ir data*1 CopyAll to microSD*1 Delete read*1*2 Delete all*1	Add folder No. of bookmarks*1 iC trans. all*1 Send all Ir data*1 CopyAll to microSD*1 Delete all*1

*1: The data in the Secret folder are not included.
*2: Available only with the Inbox folder list screen.

■Function menu (Data list screen)

My picture (p.228)	i-motion (p.233)
Display image Image info Memory info Chg. list view*1 Delete Put out	i-motion info Memory info List setting Delete Put out
Received/Sent mail (p.175)	**Bookmark (p.143)**
Color coding List setting Protect*2 Unprotect*2 Protect ON/OFF*3 Unprotect all*3 Mail info*2 No. of messages Delete Put out	No. of bookmarks Delete Put out

*1: In list display, “Chg. images view” appears.
*2: Available only with the received mail list screen.
*3: Available only with the sent mail list screen.

■Function menu (Data detail screen)

My picture (p.228)	i-motion (p.279)
Image info Set image disp. Full screen* Retry Delete this	Action setting Play menu Detail Info Select file Help
Received/Sent mail (p.176)	
Protect ON/OFF Scroll Font size Delete Put out	

* : “Normal” appears when in the Full screen mode.

Changing a secret data to normal data

To change the secret data back to normal data, move the data from the Secret folder to another folder.

<Example: To return an image from the Secret folder of My picture to normal data>

1 Switch the FOMA terminal to Secret mode or Secret data only mode→p.103

2 Folder list screen (p.225)▶"Secret"▶Move the frame to an image▶ (FUNC)▶"Put out"

3 Select a folder

NOTE

- If you put out a mail message from the Secret folder, the mail turns into a normal mail message. Therefore, an old mail message may be deleted when new mail messages are sent or received. It is recommended to protect the mail message before putting it out from the Secret folder.

Preventing Others from Viewing Your Personal Information or Performing the Phone/Mail Operations

<Original lock>

You can lock the functions which use your personal information such as mails and phonebook to prevent others from viewing these information or altering improperly. You can also restrict making or receiving voice/videophone calls, and sending i-mode mails or SMS.

- You can store the function or data you want to lock to Original lock 1 to 3 individually depending on the usage or purpose.
- Original lock is not released even when the power is turned off.
- Functions and data you can lock are described in **Table 1** (p.108). You can specify (customize) whether to lock or not for each group and item. →p.107

Activating Original lock

1 MENU▶"SETTINGS"▶"Lock/Security"▶"Lock"▶Enter your security code

The "Lock selection" screen appears.

Lock selection

2 Select Original lock 1 to 3

The lock is activated and the function or data to be locked is locked.

" " appears on the screen.

Icons displayed when other lock function is set at the same time→p.27

■ **To change the function or data to be locked→p.107**

■ **To edit the title**

▶Highlight one of Original lock 1 to 3▶ (FUNC)▶"Edit title"▶Enter the title

■ **To release Original lock**

▶"OFF"

● Operations during Original lock

If you try to use the locked function or data when Original lock is set, you are asked to enter your security code.

- If you enter your security code, the lock is deactivated temporarily and you can use the locked function or data (you cannot use the functions of "Dial/sending mail" and "Incoming/Mail disp." when the lock is released temporarily). When you exit from the activated function and return to the standby screen, the lock is activated again.

<Example: To view an i-mode mail when Original lock is set>

1 On the standby screen▶✉

2 Enter your security code

Original lock is released temporarily and the mail menu appears.

3 Read an i-mode mail

4 Exit the mail menu and return to the standby screen

Original lock is activated and " 🔒 " appears on the screen.

Customizing the function or data to be locked

- You can store particular settings such as "locking the phonebook only" or "restricting the outgoing calls/mails only" to Original lock 1 to 3 individually depending on the usage or purpose.
- You can set (customize) the lock by each category, group or function such as **Table 1** (p.108).
- The contents of the lock you set (customize) are retained even when Original lock is set or released.

1 Lock selection screen (p.106) ▶ Highlight one of Original lock 1 to 3▶ i (Detail)

The "Category list" screen appears.

"🔑" appears when any of the item in the category is to be locked and "ALL🔑" appears when all items are to be locked.

Category list

Function menu➡p.110

2 Select the category you want to change the setting

The "Group list" screen appears.

"🔑" appears when any of the item in the group is to be locked and "ALL🔑" appears when all items are to be locked.

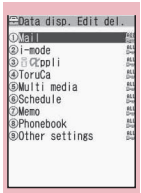

Group list

Function menu➡p.110

3 Select the group you want to change the setting

The "Function list" screen appears.

4 Use ◉ to select ☐ (checkbox)▶ i (Finish)

The checked (☑) item is to be locked.

Deselect items you do not want to lock.

Function list

Function menu➡p.110

5 i (Finish)▶ i (Finish)▶■ (Set)

The number of times you press i (Finish) varies depending on the category.

Continued on next page

[Table 1] Functions and data for the Original lock

Group	Function	Operations when locked/Notes
Data disp. Edit del.		
Mail	Mail Mail member	Locks the activation of each function. • You can view the Area Mail contents.
i-mode	i-mode	Locks the i-mode function (i-mode, Full Browser and i-Channel).
	Bookmark	Locks the i-mode and Full Browser bookmark list displays.
i-αppli	i-αppli	Locks the i-αppli function or IC card list display. • IC card function is not locked. • When the i-αppli standby screen is set, the i-αppli standby screen is deactivated when the lock is set.
ToruCa	ToruCa	Locks the display of ToruCa folder list screen. • The ToruCa acquisition is available with a reader/writer unit even when the lock is set, but the “New ToruCa” shortcut icon does not appear (once the lock is released, the “New ToruCa” shortcut icon appears).
Multi media	My picture Music i-motion Melody 1Seg Kisekae Tool My document Chara-den Document viewer Voice announce	Locks the activation of each function. • The data cannot be accessed from other functions. • If the data to be locked is set as the ring tone, receiving screen, standby screen, etc., the default settings are used when the lock is set. • When “My picture” or “Chara-den” is to be locked and an substitute image is sent for a videophone call when the lock is set, the “Pre-installed” substitute image is sent.
	Music&Video Channel Camera Bar code reader Text reader	Locks the activation of each function. • Music&Video Channel programs can be downloaded even when the lock is set.
Schedule	Schedule Alarm To Do list	Locks the activation of each function. • The alarm notification is not given when the lock is set and “Missed alarm” shortcut icon appears.
Memo	Play/Erase msg. Play/Erase VP msg.	Locks the activation of each function (you can set the Record message). • During any lock function is set, and when you press ▼メモ with the FOMA terminal folded, you cannot check “Record message”.
	Voice memo Voice memo (in-call)	Locks the activation of each function. • The play/erase a voice memo is not locked (Set the lock for “Play/Erase msg.” screen)
Phonebook	Phonebook/ Choku-Den	Locks the activation of the phonebook and Choku-Den (this affects many other functions which use the phonebook). • The stored name is not displayed when the lock is set in the Dialed and Received call or Mail list screen. A phone number or mail address is displayed. • When “MSG display settings” of “Chaku-moji” is set to “Only number in PH-book”, a Chaku-moji message is not displayed. • You cannot set “Reject unknown” at the same time. • “Call rejection”, “Call acceptation”, “Call Forwarding” and “Voice Mail” settings are deactivated. • Even if you press ▼メモ with the FOMA terminal folded while lock is set, the FOMA terminal does not read out the caller or sender’s name of a missed call or new mail.
	My profile	Locks the activation of My Profile.
	Dialed calls	Locks the activation of “Dialed calls”, “Redial” and “Sent address”.
	Received calls	Locks the activation of “Received calls” and “Received address”. • Even if you press ▼メモ with the FOMA terminal folded while lock is set, the FOMA terminal does not check a missed call.

Group	Function	Operations when locked/Notes
Other settings	Text memo	Locks the activation of text memo.
	Notice designate calls	No alarm notification is given even when the specified upper cost limit is exceeded. • Once the lock is released, the “Notice designate calls” shortcut icon appears.
	Chaku-moji	Locks the function of editing or setting Chaku-moji, and the function of “Select message” or “Sent messages” when you send the Chaku-moji, and Chaku-moji is not displayed. • You can send or receive the Chaku-moji.
Dial/sending mail		
Keypad dial	Keypad dial	You cannot make calls by dialing the phone number directly (you can make calls using the phonebook, Redial/Dialed calls records and the Received calls record of the recorded party.). • You cannot add or edit phonebook entries, perform UIM operation or copy phonebook from a microSD card. • You can still call the emergency numbers (110, 119 or 118).
Sending mail	Input add by keypad	Locks to send i-mode mails or SMS by entering the address directly (you can use only the phonebook, Redial/Dialed calls records, the sent address list, the received calls record or the received address of the recorded party.). • You cannot add or edit phonebook entries, perform UIM operation or copy phonebook from a microSD card. • Addresses of all mails in the Draft mailbox and the mails with addresses only are deleted.
	Sending mail	Locks the i-mode mail and SMS.
Incoming/Mail disp.		
Incoming call		Rejects voice and videophone calls and packet communication (these are recorded as missed calls). • Once the lock is released, the “Missed call” shortcut icon appears.
Disp. recv. mail/msg.		You can still receive MessageR/F, i-mode mail or SMS automatically, but the receiving screen or reception results screen does not appear. Also, there is no ring tone or other reaction when a call comes in and you are not notified of a received call. • You can still receive the Area Mail automatically and view the contents. • Once the lock is released, shortcut icons such as “New mail” appear.

* When the data to be locked are pasted as “Shortcut icon” on the standby screen, these shortcut icons are not displayed when the lock is set.

FUNC Category list screen (p.107)/ Group list screen (p.107)

Select……Selects all items in the highlighted item.

Release……Deselects all selected items in the highlighted item.

Select all……Selects all items under the displayed item.

Release all……Deselects all selected items under the displayed item.

FUNC Function list screen (p.107)

Select all……Selects all the displayed items.

Release all……Deselects all the displayed items.

Locking the Key Operation Automatically <Keypad lock>

You can lock the key operations automatically when the FOMA terminal is folded or no operation is performed for a certain period of time.

- The center illumination lamp flashes in blue while in Keypad lock.

Setting Keypad lock

1 MENU▶"SETTINGS"▶"Lock/Security"▶"Keypad lock"▶Enter your security code▶Select any item:

After folded……Sets whether to lock the keypad automatically when the FOMA terminal is folded (ON/OFF).

Timer……Selects the setting from "OFF/ON after 1 minute/ON after 5 minutes/ON after 15 minutes/ON after 30 minutes".
For example, when set to "ON after 5 minutes", the lock is set automatically after no operation is performed for 5 minutes. When set to "OFF", timer is deactivated and no lock is set.

2 Set the respective items▶ (Finish)

Operations during Keypad lock

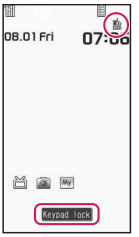

- "Keypad lock" and " " appear on the screen while the Keypad lock is set.
- During Keypad lock, all the key operations are unavailable except for answering voice or videophone calls, turning on/off the FOMA terminal, the operation of IC card authentication function and (▲マナー) (check for missed call/new mail).
- While in Keypad lock, the FOMA terminal receives MessageR/F, i-mode mail, SMS and Area mail, but viewing or reading out messages is not available.
  - You can still receive the Area Mail automatically and view the contents.
- Even when Keypad lock is set, the "Alarm", "Schedule", "To Do list", "1Seg booking program" and "1Seg timer recording" alarms are given.
- If you can operate the FOMA terminal even when Keypad lock is set (e.g. when receiving a voice call or alarm notification is given), " " appears under the function display.

NOTE

- Even when keypad lock is set, you can directly dial and make voice calls to emergency numbers (110, 119 and 118).
- The lock may not be set during a call, data communication (such as i-mode) or playback of melody/i-motion/music, or when activating the camera, etc.
- When "After folded" or "Timer" is set to ON then the power is turned off, Keypad lock automatically activates even if the FOMA terminal remains opened or the time has not reached the specified time.

Releasing Keypad lock temporarily

1 Enter your security code on the screen when Keypad lock is set▶■

■ To release the lock temporarily using the IC card authentication→p.111

Using the IC Card Authentication <IC card authentic.>

You can release Dial lock or Keypad lock or you can perform the user authentication without entering your security code on the screen which requires your security code entry only by placing the FOMA terminal on a FeliCa-compatible contactless IC card (external IC card).

- You can use the IC card authentication even when IC card lock is set.
- You can store up to 2 contactless IC cards.

Activating the IC card authentication

You can store the contactless IC card to enable the user authentication.

1 MENU▶"SETTINGS"▶"Lock/Security"▶"IC card authentic."▶Enter your security code

The "IC card authentic." screen appears.

IC card authentic.

Function menu➡p.111

2 "ON"▶"OK"

■ **To activate the stored contactless IC card**
▶"ON"

■ **To deactivate the IC card authentication**
▶"OFF"▶"YES" or "NO"
Select "YES" when you delete all the contactless IC card data, and select "NO" when you do not delete them.

3 Place the contactless IC card on the FeliCa mark "" on the FOMA terminal

"" disappears when the card is stored.

FUNC **IC card authentic. screen (p.111)**

New ext. IC card……Stores up to 2 contactless IC cards. If 2 cards are already stored, delete the old data to store the card.

Del. ext. IC card……Deletes the contactless IC card data.

Using the IC Card Authentication

<Example: To release the Dial lock/Keypad lock>

1 Open the FOMA terminal when Dial lock/Keypad lock is set

"" appears on the screen and the user authentication is enabled for about 10 seconds. Pressing ch (iC auth.) on the standby screen also enables the user authentication.

■ **To release the lock with the FOMA terminal folded**
Pressing (▲マナー) (1 second or longer) enables the user authentication for about 10 seconds.

2 Place the contactless IC card on the FeliCa mark "" on the FOMA terminal

The lock is released when the user authentication is performed successfully.

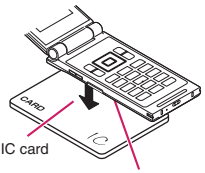

Contactless IC card

Hold the contactless IC card and the FOMA terminal in your hand, and put "" of the back cover close to the IC card.

* Put the IC card close to the FOMA terminal as illustrated The FOMA terminal may have difficulty in authentication depending on the IC card. In this case move the card horizontal or vertical.

■ **When entering your security code**
"" appears when the security code entry screen appears and the user authentication is enabled for about 10 seconds. If you place the contactless IC card stored with this function on the FeliCa mark on the FOMA terminal, the user authentication is performed.

NOTE

- Even though the contactless card is compatible with FeliCa, this function may not be available depending on the card.
- When using the IC card authentication, hold the contactless IC card and the FOMA terminal with your hands.
- If you fail 5 times in sequence, the IC card authentication is deactivated and the authentication can be performed only with the security code. After the authentication with your security code is performed successfully, you can use the IC card authentication again.

Disabling the Side Key

<Side key guard>

You can disable the function of the side keys (▲マナー) and (▼メモ)) when the FOMA terminal is folded.

- In the following situations, the side key is enabled regardless of this setting:
  - When the FOMA terminal is opened
  - When a flat-plug earphone/microphone with switch (optional), etc. is connected

1 MENU▶✳ (1 second or longer)

The side key operations are disabled (ON) and " " appears.



■ To enable the external keys when the FOMA terminal is folded

▶Repeat step 1

" " disappears.

Preventing Unwanted Mail Display

<Mail box lock/Folder lock>

You can lock your Inbox, Outbox, Draft mailboxes or other folders so that their contents cannot be viewed by other people without your approval. Mail box or folders which is locked cannot be opened without entering a security code.

- Once you enter your security code, it remains valid until the mail task is finished, and you can open mail folders without security code even if the lock is set.
- For folders that are locked, icons such as " " or " " appear before the folder name on the folder list screen.
- Icons such as " " appear next to the mail box which is locked. (Only when in Standard Menu, Simple Menu or Original theme)
- When lock is set to mail box or folder, mail addresses for which lock is set are not recorded in the Sent address and Received address lists.

Setting lock for individual mail boxes

1 ✉▶"Mail settings"▶"Mail box lock"▶Enter your security code

2 Use ● to select a checkbox (□)

"About multiple-choice"→p.38

3 ▮ (Finish)

Setting lock for individual folders

1 Inbox/Outbox folder list screen (pp.170, 171)▶Highlight the folder to be locked ▶✉ (FUNC)▶"Folder lock"▶Enter your security code▶"YES"

■ To release the setting

▶Repeat step 1

Restricting Incoming and Outgoing Calls for Specific Phone Numbers

<Restrictions>

You can restrict incoming and outgoing calls for each phone number stored in the Phonebook to prevent personal phone calls or nuisance calls.

- You can specify restrictions for up to 20 phone numbers in each directory.
- This setting is not available for the FOMA card (UIM) phonebook.
- This function is applied to only calls of which caller ID is notified. It is recommended to set "Caller ID Request" or "Call setting w/o ID" at the same time.
- You cannot set Call rejection and Call acceptation to the same phone number, or Call forwarding and Voice mail to the same number.
- If you set restrictions for the phone number and then edit or delete that phone number, the restrictions on the selected function are released (however, when "Restrict dialing" is set, you cannot edit or delete the phonebook).

Setting restrictions

1 Phonebook detail screen (p.73)▶✉ (FUNC)▶"Restrictions"▶Enter your security code▶Select any item:

Restrict dialing……Restricts outgoing calls to the phone numbers that are not specified. To make a call to the specified phone number, call the number from the phonebook.

Call rejection……Restricts incoming calls from the specified phone number.

Call acceptation……Restricts incoming calls from the phone numbers that are not specified.

Call Forwarding……Forwards incoming calls from the specified phone number regardless of the Call forwarding service setting (Activate/Deactivate).

Voice Mail……Transfers incoming calls from the specified phone number to the Voice mail service center regardless of the Voice mail service setting (Activate/Deactivate).

"★" appears next to the selected function.

■ **To release a selected function**

▶Select the function with "★"

The function is released and the "★" disappears.

■ **To set restrictions for multiple phone numbers**

▶Press CLR twice to return to the phonebook list screen▶Select the phonebook entry you want▶Repeat step 1

Once you press ⏎ to return to the standby screen after setting Restrict dialing, you cannot continue to add restrictions. To add more numbers, release the Restrict dialing that have already been set for the phone number and then set the Restrictions again including the released phone number.

When Restrict dialing is set

- You cannot dial including the specified phone numbers using the Dialed calls and Received calls records. Also, you cannot call numbers other than the specified ones, add to, edit or delete phonebook, exchange data between the FOMA terminal (Phone) and the FOMA card (UIM), or operate phonebook by "UIM operation".
- The current records of Redial/Dialed calls and Sent address list are deleted after setting the Restrict dialing. However, you can dial or send mails using the records of Redial/Dialed calls or Sent address list that have been stored after setting.

NOTE

- If you use 2in1, the restrictions on the selected function work differently depending on the combination of the current mode setting and Phonebook 2in1 setting as shown below.
  - In A mode, the specified phone number in the A or common setting phonebook is applied.
  - In B mode, the specified phone number in the B or common setting phonebook is applied.
  - In Dual mode, the specified phone number in all of the phonebooks is applied.

  However, as for Restrict dialing, you cannot call the phone numbers that are not specified regardless of the 2in1 mode setting.

<Restrict dialing>

- You can still make calls to emergency numbers (110, 119 and 118) when the Restrict dialing is set.

NOTE

<Call rejection> <Call acceptation>

- The FOMA terminal receives i-mode mail and SMS regardless of this function.
- If you receive a call from a number that is specified on Call rejection or from a number that is not specified on Call acceptation, the number is recorded as "Missed calls" in the received calls records and the "Missed call" shortcut icon is displayed on the standby screen.
- If you receive a call from a phone number for which Call rejection is set or from a phone number other than the number for which Call acceptation is set, the call is rejected even when the "Voice Mail" and "Call Forwarding" services are "Activate". Note that if the FOMA terminal is turned off or " " or if the ringing time set for "Voice Mail" or "Call Forwarding" is 0 (zero) second, "Voice Mail" or "Call Forwarding" is enabled.

<Call Forwarding> <Voice Mail>

- If you receive a call from the specified phone number, the FOMA terminal rings for about 1 second and the call is forwarded to the designated number or connected to the Voice mail service center, and the "Missed call" shortcut icon appears on the standby screen.
- If no call forwarding number is designated or if you have not subscribed to the "Call Forwarding" or "Voice Mail" service, calls from the specified phone number are handled as missed calls.

Checking the restriction settings

1 Phonebook list screen (p.73)▶ ✉ (FUNC)▶"Restrictions"▶Enter your security code

The "Restrictions" screen appears.



Function menu➡p.113

FUNC Restrictions screen (p.113)

Check settings……Displays a list of the phonebook entries for which the function is set.

Release settings……Releases the function and "★" disappears.

Rejecting Calls from Unidentified Callers

<Call setting w/o ID>

You can accept or reject voice/videophone calls from callers who do not provide the caller ID depending on the reason for no caller ID.

1 MENU▶"SETTINGS"▶"Lock/Security"▶"Call setting w/o ID"▶Enter your security code▶Select any item:

Unknown……Specifies whether to accept or reject calls from callers who are unable to provide the caller ID, such as calls from overseas or calls from ordinary phones sent via a call forwarding service. Some phone companies provide caller IDs.

Payphone……Specifies whether to accept or reject calls dialed from pay phones.

User unset……Specifies whether to accept or reject calls made by callers who withhold their caller IDs.

2 "Accept" or "Reject"

■ **When "Accept" is selected**

▶"Select ring tone" or "Select calling disp."

- Select the ring tone from "Same as ring tone/Melody/i-motion/Music/Voice announce/Random melody/OFF" for "Select ring tone" (when "Same as ring tone" is selected, the "Phone" setting of "Select ring tone" is used).
- Select the calling display from "Same as display/My picture/i-motion" for "Select calling disp." (when "Same as display" is selected, the "Calling" setting of "Display setting" is used).

■ **When "Reject" is selected**

The call is rejected and the other party hears the busy tone.

NOTE

- The ring tone or calling display selected in this function is the setting for voice phone calls without caller ID. When you receive videophone calls without the caller ID, "Videophone" of "Select ring tone" or "V.phone Calling" of "Display setting" is used.
- When you receive a call from a caller who is set to "Reject", the call is rejected even when "Voice Mail" or "Call Forwarding" service is set to "Activate". However, if the FOMA terminal is turned off or "圏外", or if the ringing time set for "Voice Mail" or "Call Forwarding" is 0 (zero) second, "Voice Mail" or "Call Forwarding" is enabled.
- The FOMA terminal receives i-mode mail and SMS regardless of this function.

Muting Ring Tones for Callers Not Stored in the Phonebook

<Ring time(sec.)>

You can set the mute period for the ring tone for voice/videophone calls from the phone number which is not stored in the FOMA terminal (Phone) phonebook or UIM phonebook (Set mute seconds). You can prevent accidentally dialing numbers, such as nuisance calls that only ring for a short period from Received calls record.

- "Set mute seconds" also works when you receive a voice/videophone call without caller ID or when there is another incoming call during a voice/videophone call.
- You cannot set "Set mute seconds" when "Reject unknown" is set to "Reject".

1 MENU▶"SETTINGS"▶"Incoming call"▶"Ring time(sec.)"▶Select any item:

Set mute seconds

ON……Enters the time for which the ring tone is muted before starting up (01 to 99 seconds).

OFF……Sets the time for which the ring tone is muted before starting up to 0 second.

Missed calls display……Specifies whether to record received calls for which no ring tone sounded to the missed calls record or the shortcut icon.

NOTE

- When you receive a call from someone who is stored in the phonebook as a secret data, the FOMA terminal operates as specified in this function.
- If the mute time is longer than the ringing time for the Record message function, the FOMA terminal switches directly to Record message without ringing first. To have the FOMA terminal ring before it records a message, make sure that the ringing time for Record message is longer than the mute time. The same applies to the ringing times for Voice Mail, Call Forwarding and Auto answer setting.

Rejecting Calls from Callers Not Stored in the Phonebook

<Reject unknown>

You can specify whether to accept or reject calls from callers who are not stored in the phonebook of the FOMA terminal (Phone) or the FOMA card (UIM).

- This function is applied to only calls of which caller ID is notified. It is recommended to set "Caller ID Request" or "Call setting w/o ID" at the same time.

● You cannot set “Reject unknown” when “Set mute seconds” of “Ring time(sec.)” is set to “ON”.

1 MENU▶“SETTINGS”▶“Lock/Security”▶“Reject unknown”▶Enter your security code▶“Reject” or “Accept”

NOTE

- When you receive a call from someone who is stored in the phonebook as a secret data, the call is not rejected regardless of this setting.
- When this function is set to “Reject”, the caller hears the busy tone even if you have activated “Voice Mail” or “Call Forwarding”. If the FOMA terminal is turned off or “ 圏外 ” is displayed or if the ringing time set for “Voice Mail” or “Call Forwarding” is 0 (zero) second, the caller does not hear the busy tone and is connected to the Voice Mail service center or the forwarding number.
- The FOMA terminal receives i-mode mail and SMS regardless of this function.

Disabling Making/Receiving Calls, etc.

<Self mode>

You can set the FOMA terminal not to make or receive voice or videophone calls, use i-mode, or send or receive mails. This is useful when you want to use the FOMA terminal without worrying about interruptions such as incoming voice or videophone calls.

- You can make voice calls to emergency numbers (110, 119 and 118) even when Self mode is set. Note that making a voice call at an emergency number cancels Self mode.

1 MENU▶“SETTINGS”▶“Lock/Security”▶“Self mode”▶“YES”

Self mode is set and “self” appears.

■ To cancel Self mode

▶Repeat step 1

Self mode is canceled and “self” disappears.

● When Self mode is set

- Received voice or videophone calls are not recorded in the “Received calls” record and the “Missed call” shortcut icon also does not appear on the standby screen.
- MessageR/F or i-mode mails sent to you are kept at the i-mode center and SMS are kept at the SMS center.
- The caller of the voice or videophone call is notified with a guidance or message that the FOMA terminal is in out of signal range or is turned off. When you use the “Voice Mail” or “Call Forwarding” service, you can use the same service provided when the FOMA terminal is turned off.
- Data exchange via Infrared data exchange/iC communication, packet communication or 64K data communication with a PC connected, user authentication by IC card authentication are also unavailable. However, you can read and write data on the IC card using data transfer via USB connection (OBEX™ connection) or Osaifu-Keitai i-αppli.

Data Security Service

<Data Security Service>

The automatic update function allows you to back up the Phonebook and other data on your FOMA terminal at Data Center to be able to smoothly restore data if you lose your FOMA terminal or when changing models. Broadcast report is available to let others know that you changed your mail address. Packet communications charges do not apply to send mail. The service gives you even more convenience if you have a PC (My docomo).

* For details on how to use the Data Security Service, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

How the service works

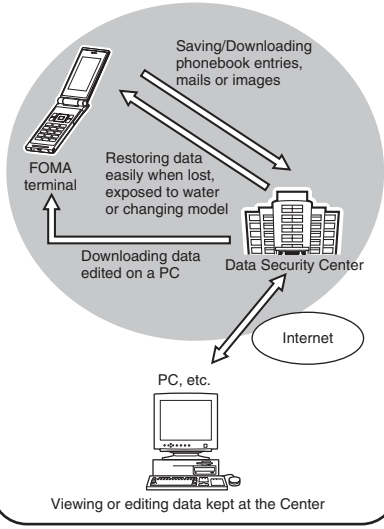

- Data Security Service is a pay service you need subscription (you need to subscribe to i-mode service in advance).

Continued on next page

● Refer to the following pages for storing operations of Data Security Service:
- “Storing the Phonebook at the Data Security Center”→p.79
- “Storing mails at the Data Security Center”→p.176
- “Storing images at the Data Security Center”→p.229

Other Security Settings

Apart from those explained in this chapter, there are functions/services relating to security settings as shown below.

Purpose	Function/ Service name
To prevent others from using the IC card functions	IC card lock setting →p.206
To avoid “nuisance phone calls” such as prank phone calls or unsolicited sales phone calls	Nuisance Call Blocking→p.315
To reject calls that has no caller ID	Caller ID Request →p.316
To send data securely by using the user certificate service * Only available on sites that support FirstPass	FirstPass→p.150
To update the FOMA terminal software when necessary	Software Update →p.377
Protecting the FOMA Terminal from Harmful Data	Scanning function →p.383
To accept only necessary mails when receiving i-mode mails	Receive option →p.164
To leave/hear the information about the safety using i-mode at the time of disaster	“i-mode Disaster Message Board” service*
To change your mail address	Change Mail Address*
To reject mails with URLs	Spam Mail Prevention (Reject Mail with URL)*
To accept/reject mail from specified domain	Spam Mail Prevention (Reject/ Receive Mail Settings)*
To accept/reject i-mode mail only	
To accept/reject mail from specified address	
To set the recommended settings of Spam Mail Prevention easily	Spam Mail Prevention (かんたんメール設定 (Simple mail setting))*
To reject i-mode mail from senders who have already sent 500 or more messages from the same i-mode mobile phone in the same day	Spam Mail Prevention (Reject Mass i-mode Mail Senders)*
To reject SMS	Spam Mail Prevention (SMS Rejection Settings)*
To reject advertisements	Spam Mail Prevention (Reject Unsolicited Ad Mail)*
To restrict the size of received mail	Limit Mail Size*
To check the status of the mail function settings	Confirm Settings*
To temporarily stop the mail function	Suspend Mail*
To search for the rough location of your lost mobile phone	Keitai-Osagashi Service*

* : Refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

NOTE

● Be careful when calling back to the numbers you do not know. In particular, sending your caller ID to the unknown party may cause unnecessary problems.

<Nuisance Call Blocking priority sequence>

● Priority is assigned when nuisance call barring function is set at the same time:
① Nuisance Call Blocking service
② Reject unknown or Ring time(sec.)/Call setting w/o ID/Call rejection

Camera

Before Using the Camera 118
Shooting Still Images ..... Photo mode 123
Shooting Movies ..... Movie mode 126
Capturing Important Scenes ..... Chance capture 128
Using Voice Mode ..... Voice mode 128
Changing the Shooting Settings 128
Using the Bar Code Reader ..... Bar code reader 129
Scanning Text ..... Text reader 131

Copyright/Portrait Right

Take care not to infringe on the copyrights when you duplicate or edit the images you shot or recorded using the FOMA terminal. Also take care not to infringe on the portrait rights by using or altering another person's portrait without his or her permission. It may be prohibited to shoot or record the stage performance, entertainment or exhibition even if you only want to enjoy it personally.

Please be considerate of the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones.

Before Using the Camera

You can use the FOMA terminal's built-in camera to shoot photos (still images) and movies.

- You cannot activate the camera function or shoot images when the FOMA terminal is folded.

Using the camera

To set to camera mode

There are 3 methods:

① Select the shortcut icon ( ) on the standby screen

② Press [ch] (1 second or longer) on the standby screen.

③ Select "Camera" from "LIFEKIT" of the main menu or Simple Menu.

- When there is no key operation for more than about 3 minutes, the camera mode ends automatically.

NOTE

- To paste the shortcut icon again after deleting it, select "Camera" in step ③'s main menu above and press [✉] (FUNC) to select "Add shortcut".

Lens selector switch

- To take a close-up image, set to the close-up mode by moving the lens selector switch to (macro lens). When set to the close-up mode, the camera is focused on an object approx. 6 to 8 cm away from the camera.
- To use Bar code reader or Text reader, set to the close-up mode by moving the lens selector switch to (macro lens).
- When you move the lens selector switch, move the switch to the ● (standard lens) position or the (macro lens) position. Do not leave the switch in the middle of these positions.

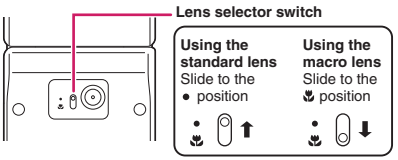

When using the camera

■Notes on shooting

- The camera of the FOMA terminal is made with the extremely high-precision technology. However, it may include lines or spots that look dark or bright. Noises such as white lines may also appear on the photographed images particularly when shooting in very poorly lit locations.
- Before shooting, wipe the lens clean with a soft cloth. Fingerprints or grease spots on the lens could prevent the camera from focusing properly and cause blurred images.
- Take care not to press the lens with excessive force when folding the FOMA terminal. This may cause malfunction.
- Image quality may be adversely affected if the FOMA terminal is left in a hot location for a long period of time.
- The color tones and brightness levels in still images and movies shot may differ from those of the actual object.
- Do not leave the camera under the direct sunlight for a long period of time or shoot the sun or a powerful lamp directly. This could lead to the discoloration of the photographed images or cause the camera to malfunction.
- Take care that your fingers, hair, or the strap do not cover the lens when you shoot images.
- The shooting uses a large amount of the battery. It is recommended to turn off the camera immediately after you finish shooting. The screen may look dark or blurred if you shoot images when the battery is low.
- You cannot change or delete the volume of the shutter sound and Auto timer tone. Also, you cannot set the downloaded melody as the shutter sound.
- When shooting a still image, keep the FOMA terminal steady until it emits the shutter sound and finishes loading the shot image.
- When you take pictures indoors, flickering may appear due to the effect of fluorescent lighting, etc. In such a case, changing the "Flicker" setting to the electric wave frequency in the use region additionally may suppress flickering.
- After you display the shooting screen, switch the camera modes or change the camera settings, it may take time for the brightness or color tone to become its best.

■**Flashing of illumination when shooting**

- The center illumination lamp lights up or flashes as follows:
  - Shooting screen activated: Flashes in red
  - Shooting still images, M-continuous mode: Lights in red (about 3 seconds)
  - A-continuous mode: Lights in red (when shooting)
  - Shooting movies, recording in Voice mode: Flashes in red
  - Auto timer activated: Flashes in blue→p.128

■**Saving the still images, movies, etc. you shot**

- The images, movies, etc. are saved in the folder specified in "Select to save".
- You can save the still images, movies, etc. you shot automatically when "Auto save set" is set to "ON".
- If the battery is low, you may not be able to save the still images, movies, etc. you shot.
- If the FOMA terminal is turned off or the battery pack is removed while saving the files, incomplete files may be saved.

■**When the shooting is interrupted**

- The shooting is interrupted when you receive a voice/videophone or 64K data communication, or alarm notification (1Seg booking program, 1Seg timer recording, Alarm, Schedule or To Do list), or operate other functions.
  - When shooting images continuously or shooting movies, the shooting is interrupted and respective screens appear. When you exit from these screens, the camera screen reappears so that you can save the data you shot before receiving calls or alarm notification.
  - When adjusting the zoom or brightness of the camera, the adjusting setting is set and the screen returns to the camera menu.
  - The Auto timer is canceled.
- The shooting is not interrupted in the following cases:
  - When you receive mails or MessageR/F when using the camera (including the case that the shooting screen appears), the reception result screen does not appear and the shooting mode continues regardless of the "Receiving setting".
  - When "Alarm setting" is set to "Operation preferred", you can continue the shooting, make settings or operate the Auto timer without interruption even when the alarm specified time is reached.

■ **When using the microSD card**

- When saving the data on the microSD card, " " flashes. Do not remove the microSD card during this period. This may cause a malfunction to the FOMA terminal or microSD card.
- When "microSD" is selected in "Select to save" and there is no folder in the microSD card, a folder is created automatically.
- If the number of files in the microSD folder selected in "Select to save" has reached the maximum, you cannot set to the folder.

Image size and maximum number of images/shooting time

The following **Table 1 to 3** (pp.119, 120) shows the image sizes, number of still images and movie shooting time supported by FOMA SO706i.

[Table 1] The image sizes and shooting mode

Image size	Photo mode	Continuous mode	Movie mode
2M (1,200 × 1,600)	○	×	×
1M (960 × 1,280)	○	×	×
VGA (640 × 480)	○	×	×
CIF (352 × 288)	○	○	×
Screen (240 × 427)	○	○	×
QVGA V. (240 × 320)	○	○	×
QVGA (320 × 240)	×	×	○
QCIF (176 × 144)	○	○	○
SubQCIF (128 × 96)	○	○	○

[Table 2] The approximate number of still images that can be saved by destination to save

Quality	2M	1M	VGA	CIF	Screen	QVGA V.	QCIF	SubQCIF
Destination: FOMA SO706i (Phone)								
Super Fine	116		140	341	700		1,000	
Fine	140		700	1,000				
Normal	229		1,000					
Destination: microSD (64M bytes)								
Super Fine	99		118	291	542		948	1,897
Fine	118		542	948			1,897	
Normal	189		948	1,265			3,795	

- The number of images that can be saved varies depending on the shooting environment, etc.

Continued on next page

[Table 3] The approximate shooting time that can be saved by destination to save

Image Size	File size	Movie type set	Available shooting time for a single movie				Available total shooting time			
			Quality setting				Quality setting			
			Long dur. mode	Normal	Fine mode	Super Fine mode	Long dur. mode	Normal	Fine mode	Super Fine mode
Destination: FOMA SO706i (Phone)										
QVGA	2MB	Normal	82s	34s	16s	8s	47min.	19min.	9min.	280s
		Video	88s	35s	17s	8s	50min.	20min.	10min.	280s
		Voice	21min.				735min.			
QCIF	500KB	Normal	104s	53s	20s	16s	247min.	125min.	47min.	38min.
		Video	128s	64s	22s	16s	303min.	151min.	52min.	38min.
		Voice	316s				750min.			
	2MB	Normal	428s	219s	82s	63s	249min.	127min.	47min.	37min.
		Video	524s	262s	88s	66s	305min.	152min.	51min.	39min.
		Voice	21min.				735min.			
Sub QCIF	500KB	Normal	176s	67s	29s	20s	418min.	159min.	68min.	47min.
		Video	256s	86s	32s	22s	608min.	204min.	75min.	52min.
		Voice	316s				750min.			
	2MB	Normal	12min.	276s	119s	82s	420min.	161min.	69min.	47min.
		Video	17min.	350s	131s	88s	595min.	204min.	76min.	51min.
		Voice	21min.				735min.			
Destination: microSD (64M bytes)										
QVGA	2MB	Normal	82s	34s	16s	8s	43min.	18min.	512s	256s
		Video	88s	35s	17s	8s	46min.	18min.	544s	256s
		Voice	21min.				672min.			
	Long time	Normal	27min.	11min.	327s	164s	27min.	11min.	327s	164s
		Video	28min.	11min.	331s	165s	28min.	11min.	331s	165s
		Voice	120min.				672min.			
QCIF	500KB	Normal	104s	53s	20s	16s	227min.	115min.	43min.	34min.
		Video	128s	64s	22s	16s	279min.	139min.	48min.	34min.
		Voice	316s				689min.			
	2MB	Normal	428s	219s	82s	63s	228min.	116min.	43min.	33min.
		Video	524s	262s	88s	66s	279min.	139min.	46min.	35min.
		Voice	21min.				672min.			
	Long time	Normal	120min.	71min.	27min.	20min.	228min.	71min.	27min.	20min.
		Video	120min.	86min.	28min.	21min.	279min.	86min.	28min.	21min.
		Voice	120min.				672min.			
Sub QCIF	500KB	Normal	176s	67s	29s	20s	384min.	146min.	63min.	43min.
		Video	256s	86s	32s	22s	558min.	187min.	69min.	48min.
		Voice	316s				689min.			
	2MB	Normal	12min.	276s	119s	82s	384min.	147min.	63min.	43min.
		Video	17min.	350s	131s	88s	544min.	186min.	69min.	46min.
		Voice	21min.				672min.			
	Long time	Normal	120min.	90min.	39min.	27min.	384min.	90min.	39min.	27min.
		Video	120min.	115min.	43min.	28min.	544min.	115min.	43min.	28min.
		Voice	120min.				672min.			

- Available recording times if deletable pre-installed data are deleted.
- The time is the approximate time that can be shot with the file size.
- The available shooting time varies depending on the shooting environment, etc.

Key operation for camera mode

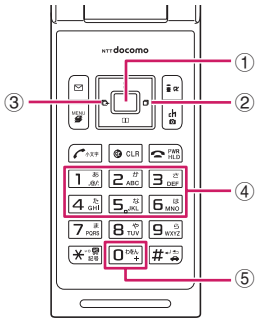

① [■]: Shutter
② [▭+]: Zoom in
③ [▭-]: Zoom out
④ [1] to [6]: Displays the following shooting menu respectively
- [1]: CHG camera-mode
- [2]: Select size
- [3]: Quality setting or File size setting
- [4]: Photo mode
- [5]: Brightness
- [6]: White balance

●Some menus are not displayed depending on the camera mode.

⑤ [0]: Displays the explanation of keys

Guide to the shooting screen

The shooting screens display the icons of the Camera settings. Each icon means as follows:

Photo mode shooting

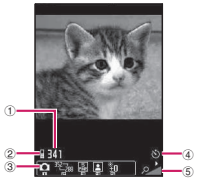

Movie mode standby

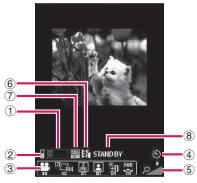

Movie mode shooting

① **Remaining storage count/Memory info**[*1]

123 ····· The number of images that can be saved
- •White: 11 or more
- •Yellow: 10 or less
- •Red: No memory available

▬ ····· The available capacity that can be saved against the total capacity
- • Blue: 500K bytes or more remaining
- • Yellow: Less than 500K bytes remaining
- • Red: No memory available[*2]

*1: The displayed count and the capacity are only an approximate figure. This icon does not appear when the destination to save is set to "microSD" and no microSD card is inserted.

*2: Shooting is available except when shooting movies with "File size" set to "Long time". The shot is saved or overwrites the data in the FOMA terminal (Phone)/microSD card after shooting.

② **Select to save (pp.123, 127)**

[▯] [SD] ····· The destination set to save (FOMA terminal (Phone)/microSD card)

③ **Shooting menu (p.122)**

·····The settings of the shooting menu

④ **Auto timer (p.128)**

[⏲] ·····The Auto timer is set

⑤ **Zoom (p.128)**

[▭] to [▭] to [▭] ·····The zoom settings

⑥ **Movie type set (p.127)**

[▯] ·····Normal (video and voice)
[▯] ·····Video only
[▯] ·····Voice only

⑦ **Quality setting (p.127)**

[▯] ·····Long dur. mode
[▯] ·····Normal
[▯] ·····Fine mode
[▯] ·····Super Fine mode

⑧ **Shooting status**

●REC ····· The movie is being shot
STAND BY ····· The movie shooting is in standby mode

⑨ **Shooting time**

0:03:38 ·····Remaining time (hour: minutes: seconds)

Selecting the shooting menu

When you display the shooting menu on the screen, you can set various settings only by selecting icons.

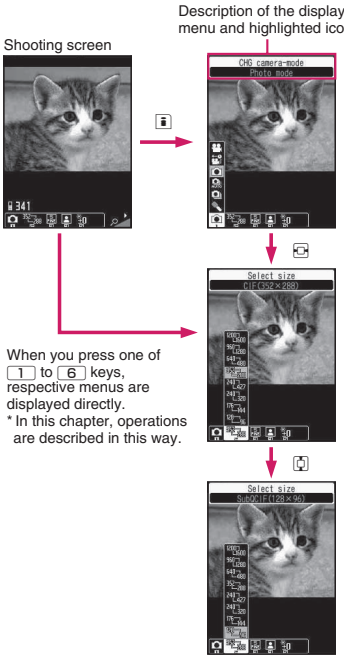

Icons and settings of the shooting menu

- The selectable items are different depending on the camera mode.
- Some menus are unavailable depending on the shooting condition (when using the camera from other function such as mail function, etc.)



① **CHG camera-mode**

- Movie mode……p.126
- Chance capture……p.128
- Photo mode……p.123
- A-Continuous mode……p.124
- M-Continuous mode……p.124
- Voice mode……p.128

② **Select size Photo mode (Default: Screen)**

1200×1600 to 128×96 …… 2M (1,200 × 1,600) to SubQCIF (128 × 96)

Movie mode (Default: QCIF)

320×240 to 128×96 …… QVGA (320 × 240) to SubQCIF (128 × 96)

③ **Quality setting/File size setting**

Photo mode (Quality setting)

(Default: Super Fine)

- SUPER FINE Super Fine……Super Fine mode (File size: large)
- FINE Fine……Fine mode (File size: medium)
- NORMAL Normal……Normal mode (File size: small)

Movie mode (File size setting)

(Default: 2MB)

- 500KB 500KB……Up to 500K bytes
- 2MB 2MB……Up to 2M bytes
- ∞ FILE Long time……Long time (microSD only)

④ **Photo mode**

Photo mode (Default: Auto)

Movie mode (Default: Portrait)

- Auto……Automatic shooting mode
- Portrait……Suitable for shooting portraits
- Scenery…… Suitable for shooting scenery (including night view)
- Close-up……Suitable for close-up shooting
- Sports mode…… Suitable for shooting moving objects
- Night mode…… Suitable for shooting portraits, etc. in the dark

OFF……Turns off the shooting effects.

* Only “Portrait”, “Scenery” or “Close-up” can be set for Movie mode.

⑤**Brightness** (When the camera launched: ±0)

+2/+1/±0/-1/-2……Brightness of the image (+2/+1/±0/-1/-2)

⑥**White balance** (Default: Auto)

In Photo mode, this can be set only when “Photo mode” is set to “OFF”.

Auto……Compensates the tone automatically

Fine…… Suitable for shooting outside on a sunny day

Cloudy……Suitable for shooting outside on a cloudy day or in the shade

Light bulb…… Suitable for shooting under the incandescence

Fluorescent lamp…… Suitable for shooting under the fluorescence

Shooting Still Images

<Photo mode>

1 On the standby screen▶■▶Select “ ”

The “Photo mode shooting” screen appears.

Photo mode shooting

Function menu➡p.123

2 Point the camera at the object▶■ (Record)

The “Photo mode checking” screen appears.

■ **To retake the shot**

▶CLR▶“YES”

Photo mode checking

Function menu➡p.124

3 ■ (Save)

NOTE

- Depending on image size, image quality may be degraded.

Photo mode shooting screen FUNC (p.123)/Continuous mode screen (p.124)

CHG camera-mode……Changes the camera mode.

Select size • Quality setting……Sets the same setting as the shooting menu (p.122).

Interval/Number*1……Sets the shooting interval and the number of images you want to take on the continuous mode.➡p.125

Camera Settings

Photo mode……Sets the same setting as the shooting menu (p.122).

Brightness……Adjusts the brightness for shooting in 5 steps “-2～±0～+2” using .
The brightness is automatically specified if you do not press any key for 2 seconds.
“±0” is the default setting when you launch the camera.

White balance……Sets the same settings as the shooting menu (p.123).

Color mode set……Selects the effect for the photographed image from “Normal/Sepia/Monochrome”.

Flicker……Avoids the flicker on the shooting screen. Selects from “Auto/Mode 1(50Hz)/Mode 2(60Hz)”.

Shutter sound (default: Sound 1)……Sets the shutter sound.

Auto timer……Sets the auto timer.➡p.128

Select frame*2……Sets the frames for images.➡p.126

Auto save set……Specifies whether to save a shot image to the folder selected in “Select to save” automatically or not (ON/OFF).

Select to save (default: “Camera” of Phone)……Sets the folder to save the shot image.

File restriction (default: File unrestricted)……Specifies whether to allow the redistribution of the shot image.➡p.228

Memory info……Displays the amount of stored images.

Help……Displays the guide for shooting.

*1: This function is available only for the Continuous mode screen.

*2: This function is available only for the Photo mode screen.

NOTE

<Shutter sound>

- When Manner mode is set (“VM tone” set to “OFF”), the FOMA terminal does not play the shutter sound for checking.

Continued on next page

NOTE

<Memory info>

- The displayed file size is only an approximation.

FUNC Photo mode checking screen (p.123)

Save……Saves the images to the folder specified in "Select to save".

Mirror save……Inverts the left and right of the displayed image and saves the image to the folder specified in the "Select to save" setting.

Compose message*→p.126

You can also compose an i-mode mail or Deco-mail by pressing [i] (MAIL) on the Photo mode checking screen.

Edit image……Adds a frame or effect to the image. "Editing Images"→p.231

Set as display……Sets the still image to the standby screen, etc.
"Changing the Display"→p.88
"Setting an image to send"→p.67

Change frame……"Shooting framed images"→p.126

Mirror display⇔Normal display……Selects the checking screen display from normal display or mirrored display.

Select to save (default: "Camera" of Phone)……Sets the folder to save the shot image.

File restriction (default: File unrestricted)……Specifies whether to allow the redistribution of the shot image. →p.228

Cancel……Deletes the photographed image and returns to the photo mode shooting screen.

* : Not available when 2in1 is in B mode.

NOTE

<Edit image>

- Selecting "Edit image" changes the display to the Normal display.
- You cannot edit the image larger than 1M (960 × 1,280).

<Set as display>

- You cannot set the image larger than 1M (960 × 1,280). If the file size exceeds 100K bytes, the image cannot be set other than standby screen and wake-up display.
- The still images to be set to the standby screen are saved to the folder set in "Select to save". However, when set to "microSD", the images are saved to the Camera folder under My pictures of the FOMA terminal (Phone) (the images is not saved on the microSD card).

Shooting continuously <Continuous mode>

You can shoot up to 20 still images continuously. There are two types of continuous mode: A-Continuous mode (Auto) and M-Continuous mode (Manual).

- A-Continuous mode is the function that automatically shoots images of specified numbers at the set interval once you release the shutter.
- M-Continuous mode enables you to shoot images for the set number, releasing the shutter for one by one.
- You can enjoy the continuously shot images as an animation after putting them into the Original animation.
- Folding the FOMA terminal terminates the continuous mode.

❶ Photo mode shooting screen (p.123)▶ 1 ▶"AUTO" or "M"

The "Continuous mode" screen appears.

Shot number/ Max. shot count

Continuous mode (Ex. manual)

Function menu➡p.123

❷ Point the camera at the object▶ ■ (Cont./Record)

■ To stop the continuous mode

A-Continuous mode:
▶ [C] ▶"NO"
M-Continuous mode:
▶ CLR
The shooting is finished and the "Continuous mode checking" screen appears.

Continuous mode checking

Function menu➡p.125

■ To check the images in detail

▶Use ⊕ to move the frame to the image you want to check▶ [i] (Detail)
Use ⊕ to change the image to check.

Continuous mode detail checking

Function menu➡p.125

■ To save only 1 still image displayed in detail

▶■ (Save)

3 ch (撮影) (1 second or longer)▶ **“Save” or “Mirror save”**

The image is saved to the folder specified in “Select to save”.

■ **To store selection**

▶Select images you want to save▶ch (撮影)▶“Save” or “Mirror save”

“About multiple-choice”→p.38

■ **To store Original animation**

▶✉ (FUNC)▶“Store all&anime”▶“Save” or “Mirror save”

NOTE

- If you shoot strong light or moving object in A-Continuous mode, the interval may become longer than the specified one.

● Setting the shooting interval and number of images

1 **Continuous mode screen (p.124)▶✉ (FUNC)▶“Interval/Number”▶Select any item:**

Shot interval (default: 0.5 seconds)……Selects the interval for shooting images from “0.5 seconds/1.0 seconds/2.0 seconds”.
Cannot be set for M-Continuous mode.

Shot number (default: 5)……Sets the number of images (05 to 20 images in 2 digits).
The maximum number of images varies by the image size. When the image size is CIF (352 × 288), the number of shots is automatically set to 4. When the image size is Screen (240 × 427) or QVGA V. (240 × 320), the number of shots is set to about 5 to 10.

2 **After setting is finished, press CLR▶CLR**

The continuous mode screen reappears.

FUNC Continuous mode checking screen (p.124)

Store selection……Saves the still image marked with a checkbox (☑).

Store all……Saves all the still images in normal or mirror display.

Store all&anime……Saves all the still images you shot in normal or mirror display, and stores as the Original animation.

Select this……Selects the still image indicated by the frame and marks the checkbox of the image (☑).

Select all……Selects all the still images you shot and marks the checkboxes of the images (☑).

Release this……Releases the still image indicated by the frame and releases the checkbox of the image (☑).

Release all……Releases all the still images and releases the checkboxes of the images (☑).

Mirror display⇔Normal display……Selects the checking screen display from Mirror display or Normal display.

Select to save (default: “Camera” of Phone)……Sets the folder to save the shot image.

File restriction (default: File unrestricted)……Specifies whether to allow the redistribution of the image with ☑. →p.228

Restriction all (default: File unrestricted)……Specifies whether to allow the redistribution of all the shot image. →p.228

Cancel……Deletes all the photographed images and returns to the continuous mode screen.

NOTE

<Store all&anime>

- When “Select to save” is set to “microSD”, the images are saved to the Camera folder under My pictures of the FOMA terminal (Phone) (the images is not saved on the microSD card).

FUNC Continuous mode detail checking screen (p.124)

Save……Saves the images to the folder specified in “Select to save”.

Mirror save……Inverts the left and right of the displayed image and saves the image to the folder specified in the “Select to save” setting.

Compose message*→p.126
You can also compose an i-mode mail or Deco-mail by pressing i (MAIL) on the Continuous mode detail checking screen.

Mirror display⇔Normal display……Selects the checking screen display from normal display or mirrored display.

File restriction (default: File unrestricted)……Specifies whether to allow the redistribution of the shot image.→p.228

* : Not available when 2in1 is in B mode.

Shooting framed images
<Framed photography>

The image sizes supported by FOMA SO706i is under VGA (640 × 480).

- You can use the downloaded frames in addition to the pre-installed ones.

1 Photo mode shooting screen (p.123)▶ [✉] (FUNC)▶"Select frame"▶Select a frame

■ **To cancel the framed image**
▶"OFF"

2 Point the camera at the object▶ [■] (Record)

The "Frame shooting check" screen appears.

■ **To change the frame before saving**
▶[✉] (FUNC)▶"Change frame"

3 [■] (Save)

Composing an i-mode mail message or Deco-mail message using the still image

You can compose an i-mode mail message with the still image you shot attached or insert the still image into the Deco-mail message body.

1 Photo mode checking screen (p.123)▶[i] (MAIL)▶Select any item:

Attach image[*1]

- **Attach mail**……Attaches the image without changing the image size.
- **QVGA scale down**……Attaches the image by changing the image and file size without changing the aspect ratio.

Insert image[*2]

- **Insert mail**[*3]……Inserts the image without changing the image size.
- **SubQCIF scale down**……Inserts the image by changing the image and file size without changing the aspect ratio.

*1: When the image is shot with the image size smaller than QVGA V. (240 × 320), the selection screen of "Attach mail/QVGA scale down" does not appear.
*2: When the image is shot with the image size of SubQCIF (128 × 96), the selection screen of "Insert mail/SubQCIF scale down" does not appear.
*3: Cannot be selected when the image size is other than QCIF (176 × 144).

2 Compose the message

Composing and sending i-mode mail→p.156
Composing and sending Deco-mail→p.158

NOTE

- Not available when 2in1 is in B mode.

Shooting Movies
<Movie mode>

- When "File size" is set to "Long time", the shooting ends after saving the shot movie on the microSD card.
- The shooting time varies by the conditions.
- You cannot shoot a movie while you are talking on the phone.
- Folding the FOMA terminal terminates the movie shooting.

1 Photo mode shooting screen (p.123)▶[1]▶"[movie]"

The "Movie mode shooting" screen appears.

Movie mode shooting

Function menu➡p.127

2 Point the camera at the object▶ [■] (Record)

The shooting starts.
You can zoom in/out during the shooting.

Movie mode shooting screen

■ **If the file size reaches the limit specified in File size**
▶"OK"
The movie mode checking screen appears.

3 [■] (Stop)

The shooting terminates and the "Movie mode checking" screen appears.

■ **To play the movie you shot**
▶[ch] (Play)

■ **To retake the shot**
▶[CLR]▶"YES"

Movie mode checking

Function menu➡p.127

4 [■] (Save)

NOTE

- If you perform a key operation such as zoom in/out during the shooting, the operation sound may be recorded.

FUNC Movie mode shooting screen (p.126)

CHG camera-mode……Changes the camera mode.

Select size • File size……Sets the same setting as the shooting menu (p.122).

Quality setting (default: Normal)……Selects the quality and duration for shooting movies from “Long dur. mode/Normal/Fine mode/Super Fine mode”.
When set to “Long dur. mode”, the shooting time becomes the longest but the image quality becomes the lowest. Contrary, when set to “Super Fine mode”, the image quality becomes the highest but the shooting time becomes the shortest.

Camera Settings

Photo mode*……Sets the same setting as the shooting menu (p.122).

Brightness……Adjusts the brightness for shooting in 5 steps “-2～±0～+2” using .
The brightness is automatically specified if you do not press any key for 2 seconds.
“±0” is the default setting when you launch the camera.

White balance……Sets the same settings as the shooting menu (p.123).

Color mode set……Selects the effect for the photographed image from “Normal/Sepia/Monochrome”.

Flicker*……Avoids the flicker on the shooting screen. Selects from “Auto/Mode 1(50Hz)/Mode 2(60Hz)”.

Shutter sound (default: Sound 1)……Sets the shutter sound.

Auto timer……Sets the auto timer.→p.128

Movie type set

Normal (when the camera is launched)……Records video and voice.

Video……Shoots a movie without any voice.

Voice……Records voice without movies.

Auto save set……Specifies whether to save a shot movie to the folder selected in “Select to save” automatically or not (ON/OFF).

Select to save (default: “Camera” of Phone)……Sets the folder to save the shot movie or movie with voice only. When saving the movie on the microSD card, movie with video is saved in “SD Video folder” and movie with voice only is saved in “Multi media folder”.

File restriction (default: File unrestricted)……Specifies whether to allow the redistribution of the shot movie.→p.228

Memory info……Displays the amount of stored data for movies.

Help……Displays the guide for shooting.

* : Cannot be operated/set for the front camera.

NOTE

<Photo mode>
- The Photo mode is fixed to the Portrait for the front camera.

<Shutter sound>
- When Manner mode is set (“VM tone” set to “OFF”), the FOMA terminal does not play the shutter sound for checking.
- You cannot set the downloaded melody as the shutter sound. In addition, you cannot change the volume of the shutter sound.

<Memory info>
- The displayed file size is only an approximation.

FUNC Movie mode checking screen (p.126)

Play……Plays the movie you shot.

Save……Saves the movie to the folder specified in “Select to save”.

Compose message*……Composes an i-mode mail with the shot movie attached.→p.156
You can compose an i-mode mail with the shot movie attached by pressing (MAIL) on the movie mode checking screen.

Set as stand-by……Sets the shot movie to the standby screen.

Edit title……Edits the movie title. You can enter up to 9 double-byte or 18 single-byte characters.

Select to save (default: “Camera” of Phone)……Sets the folder to save the shot movie or movie with voice only. When saving the movie on the microSD card, movie with video is saved in “SD Video folder” and movie with voice only is saved in “Multi media folder”.

File restriction (default: File unrestricted)……Specifies whether to allow the redistribution of the shot movie.→p.228

Cancel……Deletes the movie and returns to the movie mode screen.

* : Not available when 2in1 is in B mode.

NOTE

<Set as stand-by>
- The movie to set to the standby screen is saved to the folder set in “Select to save”. However, when set to “microSD”, the movie is saved to the Camera folder under i-motion of the FOMA terminal (Phone).

Capturing Important Scenes <Chance capture>

Even if the available shooting time is reached when shooting a movie, you can continue the shooting until the scene you want to shoot comes.

- The movie you shot is saved for the available shooting time (the default is 3 minutes 38 seconds) from the end of the movie with the starting point reset to fit that time. The movie shot before that time is not saved.

1. **Photo mode shooting screen (p.123)▶ [1]▶“ ”**
2. **Point the camera at the object▶ [■] (Record)**
   The shooting starts.
   You can zoom in/out during the shooting.
   After the available shooting time is reached, the remaining time display flashes.
3. **[■] (Stop)**
   The shooting is finished.
4. **[■] (Save)**

Using Voice Mode <Voice mode>

You can record your voice without movies.

1. **Photo mode shooting screen (p.123)▶ [1]▶“ ”**
   The “Recording start” screen appears.
   Function menu of the movie mode screen →p.127
2. **[■] (Record)**
   The recording starts.
3. **[■] (Stop)**
   The recording finished. The “Recording check” screen appears.
   Function menu of the movie mode checking screen →p.127
4. **[■] (Save)**

Changing the Shooting Settings

You can change the camera settings such as the zoom or Auto timer.

Using the zoom

Using the zoom enables you to adjust the image being shot to your desired size.

- The zoom is digital.

1. **Each shooting screen▶Use [ ] to adjust the zoom**
   The image is zoomed in/out by one step each time you press [ ], and hold down it to zoom in/out continuously.

NOTE

- “1×” is the default setting when you launch the camera. Changing the image size or camera mode also changes the zoom to “1×”.

■Maximum zoom rate (16 steps) for each image size

Image size	Photo mode	Movie mode
2M/1M	—	—
VGA	Approx. 1.8×	—
CIF	Approx. 1.7×	—
Screen	Approx. 1.8×	—
QVGA V.	Approx. 2.4×	—
QVGA	—	Approx. 1.8×
QCIF	Approx. 3.3×	Approx. 3.3×
SubQCIF	Approx. 4.6×	Approx. 4.6×

Using the auto timer

- The Auto timer is reset to “OFF” each time you finish shooting.

1. **Each shooting screen▶[✉] (FUNC)▶“Auto timer”▶“ON”▶Enter the time for the Auto timer (01 to 15 seconds in 2 digits)**
   “10 seconds” is the default setting.

● If you set the Auto timer

“ ” appears on the screen to indicate that the Auto timer is set.
Pressing [■] (Record) plays the Auto timer tone and the Auto timer starts.
The center illumination lamp flashes in blue and “ ” on the screen also flashes.
The countdown tone sounds about 5 seconds before the shooting. The illumination flashes rapidly.

■ **To cancel the Auto timer settings**
▶[✉] (FUNC)▶“Auto timer”▶“OFF”

■ **To stop the timer while it is running**
▶[i] (Quit) or [CLR]

NOTE

- During the Auto timer countdown, you can shoot manually by pressing [■] (Record).
- The Auto timer cannot be used in M-Continuous mode.

Using the Bar Code Reader

<Bar code reader>

The FOMA terminal can scan JAN codes and QR codes using the camera. The scanned data can be used for displaying/copying the text, using the functions of Phone To/AV Phone To, Mail To, Web To, i-αppli To, or adding to bookmark/phonebook especially in QR code. The FOMA terminal can also scan the image, melody or ToruCa data to play or save.

- The FOMA terminal can save up to 5 scanned bar codes.
- Hold the FOMA terminal firmly to ensure that it does not shake during the scanning.
- When scanning bar codes, use the rear camera and hold the FOMA terminal about 6 to 8 cm away from the scanned code.

■ **JAN codes and QR codes**

- JAN code
  A bar code consisting of vertical lines (bars) of various widths and spaces to represent numbers. The FOMA terminal can scan 8-digit (JAN8) and 13-digit (JAN13) bar codes.

  * When the FOMA terminal scans the JAN code on the right above, it is displayed as “4942857113068”.

- QR code
  A type of two-dimensional codes consisting of the horizontal and vertical patterns to represent numbers, alphabets, kanji, kana or pictographs. Some QR codes express images or melodies. Some data are divided into several QR codes.

  * When the FOMA terminal scans the QR code on the right above, it is displayed as “株式会社NTTドコモ” (NTT DOCOMO, INC.).

Scanning codes

- Before scanning, set to the close-up mode by moving the lens selector switch to (macro lens). →p.118

1 [MENU]▶“LIFEKIT”▶“Bar code reader”

2 **Position the JAN code or QR code inside the recognition field**

The scanning starts automatically.
The recognition field is expressed using “ ⌜,⌝ , ⌞ , ⌟ ” at the corners of the screen.
Focus the JAN code or QR code so that the entire code is displayed as big as possible inside the recognition field.

Function menu➡p.130

Finishing the scan plays the completion sound. It may take time to scan the data.

■ **To cancel the scanning**
▶[■] (Quit) ▶“OK”

■ **To adjust the zoom**
[▷]: Zooms in.
[◁]: Returns to default.

■ **To scan the data consisting of several QR codes**
▶“OK”▶[■] (Read) ▶Position the QR code inside the recognition field
The FOMA terminal can scan up to 16 QR codes expressing one data.

3 **Check the scanned data**

■ **To discard the scanned data**
▶[CLR]▶“YES”

4 [✉] **(FUNC) ▶“Store”▶“YES”▶“OK”**
The scanned data is saved.

NOTE

- The FOMA terminal cannot scan a code if it is not a JAN code or QR code. You may be unable to scan some bar code, depending on the size.
- The FOMA terminal may fail to scan the code, depending on the scratch, stain, damage, print quality, the reflection of light or the QR code version.
- You can also run the Bar code reader from the text editing screen. The scanned data is entered in the screen.
- Some scanned images cannot be saved depending on the image size or file size.

Continued on next page

NOTE

- You cannot save the scanned data to the microSD card.

FUNC Scanning screen (p.129)

Reading data list……"Using the scanned data"→p.130

Add shortcut→p.94

Using the scanned data

- You can use the following scanned data:

Item	Description
Add to phonebook	Stores the name, reading, phone number, mail address, birthday, postal code, address and memo to the phonebook→p.70
Compose message	Composes an i-mode mail with the recipient address, subject and message entered→p.156
Add bookmark	Stores the URL and title to the Bookmark →p.142
Activate i-αppli	Runs the specified i-αppli→p.187
Melody icon	Plays the melody→p.240
Phone number	"Phone To/AV Phone To function" →p.147
ToruCa Icon	Displays the ToruCa→p.204
Mail address	"Mail To function"→p.147
URL	"Web To function"→p.147
Image	Save image→p.144

1 Scanning screen (p.129)▶✉ (FUNC) ▶"Reading data list"

The "Reading data list" screen appears.

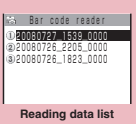

Reading data list

Function menu➡p.130

2 Select the scanned data

The "Reading data detail" screen appears.

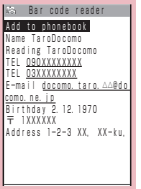

Reading data detail

Function menu➡p.130

3 Select any of the displayed items

NOTE

- If the data you want to scan contains characters that cannot be read by the Bar code reader, those characters are converted to spaces (blanks).
- The title of the scanned data will be:
  - Title: yyyymmdd_hhmm_xxxx (Year/month/day_time_4-digit number)
    If the same date and time are set for more than once, the 4-digit numbers are assigned to the data in numerical order.

FUNC Reading data list screen (p.130)

Edit title……Edits the title of the data. You can enter up to 9 double-byte or 18 single-byte characters.

Result……Displays the Bar code reader reading data detail screen.

Delete this • Delete all……Deletes one or all scanned data.

FUNC Reading data detail screen (p.130)

Store……Saves the reading data.

Display list……Displays the Reading data list screen. If the displayed data is not stored yet, a message appears asking whether to delete the data.

Internet……Accesses the site when the URL is highlighted. "Web To function"→p.147

Compose message*……Composes an i-mode mail with the reading data entered when "Compose message" is highlighted.
When the mail address is highlighted, an i-mode mail with the address entered is composed.

Dialing……Calls the phone number when it is highlighted. "Phone To/AV Phone To function"→p.147

Add to phonebook……Stores the scanned data to the phonebook when “Add to phonebook” is highlighted. →p.70
When a phone number is highlighted, it is stored to the phonebook.
When a mail address is highlighted, it is stored to the phonebook.

Add bookmark……Stores the reading data to Bookmark when “Add bookmark” is highlighted. →p.142
When a URL is highlighted, it is stored to Bookmark.

Save image……Stores the image data to My picture of the Data box.
If you do not set the image to the standby screen, select “NO” after selecting the folder.

Save melody……Stores the melody data to Melody of the Data box.
If you do not set the melody to the ring tone, select “NO” after selecting the folder.

Save ToruCa……Stores the ToruCa to the ToruCa folder.

Start i-αppli……Runs the i-αppli specified in the scanned data when “Start i-αppli” is highlighted.

Copy……Copies the text included in the scanned data. →p.308

* : Not available when 2in1 is in B mode.

NOTE

<Internet> <Add bookmark>
- You cannot use the Web To function or add a bookmark if there are unusable characters in the URL.

<Compose message>
- The address cannot be entered if it includes characters that cannot be entered.

<Dialing>
- As the image settings for videophone are not retained after the dialing or talking is finished, set this item each time you make a call.

Scanning Text <Text reader>

Using the camera, the FOMA terminal can scan printed text then add the scanned text data as a phonebook entry or bookmark, or use the data to compose a mail. You can also make a call or access website using the data.
- The FOMA terminal can save up to 8 scanned bar codes.
- Hold the FOMA terminal firmly to ensure that it does not shake during the scanning.
- When scanning text, hold the camera about 6 to 8 cm away from the text.
- The FOMA terminal can scan vertically written Japanese text.

■Scanning mode

The following are the scan modes. Select the mode suitable for the data to scan:

Item	Description
Card read	Scans the name, phone number, mail address, postal code, address and memo printed on the business card to add to the phonebook.
Compose message	Composes an i-mode message with the scanned recipient address, subject and message entered.
URL	Scans URL, and accesses the site or adds the URL to bookmark.
Mail address	Scans the mail address and composes an i-mode message.
Phone number	Scans the phone number and makes a call.
Free memo	Scans Japanese or English text to save to Text memo.

■The number of characters that can be scanned

The following table shows the maximum number of characters that can be scanned for each item:

Item		Maximum number of characters that can be scanned
Card read	Name	16 in double-byte, 32 in single-byte
	Phone number	26 in single-byte numbers including #, ＊, +, p (pause), (,), -
	Mail address	50 in single-byte alphabets, numbers and symbols
	Postal code	7 in single-byte
	Address	50 in double-byte, 100 in single-byte
	Memo	100 in double-byte, 200 in single-byte
Compose message	Receiver	50 in single-byte alphabets, numbers and symbols
	Subject	100 in double-byte, 200 in single-byte
	Message	128 in double-byte, 256 in single-byte
URL		256 in single-byte alphabets, numbers and symbols
Mail address		256 in single-byte alphabets, numbers and symbols
Phone number		256 in single-byte numbers including #, (,), -
Free memo		128 in double-byte, 256 in single-byte

Continued on next page

Item		Maximum number of characters that can be scanned
Dictionary*	Japanese	32 in double-byte, 64 in single-byte
	English	64 in single-byte

* : This option is available when the Text reader is launched from Dictionary.

■Guide to the scanning screen

<Example: Card read mode>

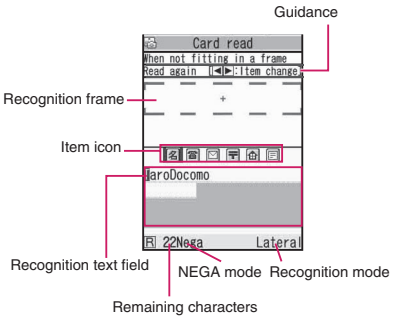

Guidance : Displays the operation.
Recognition frame: Displays the recognition field.
Item icon : Displays the item to scan.
Card read mode: “Name/phone number/mail address/postal code/address/memo”
Compose message mode: “Receiver/subject/message”
Recognized text field:
Displays the scanned text (The guidance appears on some screens).
Recognition mode:
Displays the recognition mode used for scanning “Kanji (lateral writing/vertical writing)/postal code/phone number/mail address/URL”.
Remaining characters:
Displays the remaining number of single-byte characters that can be scanned.
NEGA mode : Appears if the NEGA/POSI mode is set to Negative fix.

Scanning text

<Example: To scan text in Card read mode>

- Before scanning, set to the close-up mode by moving the lens selector switch to (macro lens). →p.118

❶ MENU▶“LIFEKIT”▶“Text reader”

The “Text reader” screen appears.



Text reader

Function menu➡p.133

❷ “New”

The “Scanning mode selection” screen appears.
“Scanning mode”→p.131

❸ “Card read”

The “Text reader scanning” screen appears.

Text reader scanning

Function menu➡p.133

❹ Use to highlight the icon for the item to scan▶Display the text in the recognition field

Focus the text so that the entire text appears as large as possible inside the recognition field.
If the recognition field cannot display the whole text, the text can be scanned several times.

■ To adjust the zoom

: Changes from “Normal” to “Large”.
: Returns from “Large” to “Normal”.

❺ (Read)

The FOMA terminal scans the text, and the recognized text appears in red.

■ To rescan the text

▶CLR▶“YES”

If the screen does not display the entire text, press to check.
Pressing (Store) stores the scanned text, and then the reading data screen (detail) appears.
The following are the two methods to edit the scanned text:

■ **To select the character to edit**

▶Use ⊡ to highlight the character to edit▶Press the candidate No.

Press ⌐ to change the cases between upper and lower if it can be changed.

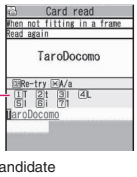

Candidate

■ **To edit in the text editing**

▶✉ (FUNC) ▶“Edit”▶Edit the text

The text can be edited in the typical text editing.

To return to the candidate selection, press ✉ (FUNC) and select “Select recog. data”.

Go on to Step 6 when you finish editing.



6 ■ (Set)

The entry is fixed as the text.

■ **To scan the remaining text**

▶Display text in the recognition range▶Repeat Steps 5 to 6

Ensure that the last two or more characters of the scanned text are included in the recognition field.

■ **To scan another item**

▶Repeat Steps 4 to 6

In Card read mode, you can scan up to 4 phone numbers and up to 3 mail addresses.

7 ✉ (FUNC) ▶“Store”

The Reading data detail screen appears. Press CLR to return to the Reading data list screen.

NOTE

- Do not move the FOMA terminal while the “Processing” message appears on the screen.
- The FOMA terminal cannot recognize handwritten characters. If the text is faxed or copied, if the fonts are decorated, if the character spaces are not fixed, or if the fonts and background cannot be easily distinguished, the FOMA terminal may fail to recognize the text. Also, the FOMA terminal may not recognize the text correctly depend on the ambient lighting.

FUNC Text reader screen (p.132)

Add shortcut→p.94

Using the text data

- You can use the following scanned data:

Item	Description
Add to phonebook	Adds the name, phone number, mail address, postal code, address and memo to the phonebook→p.70
Compose message	Composes an i-mode mail with the recipient address, subject and message entered→p.156

* Select any displayed item such as Phone number or Mail address to edit the data.

1 MENU ▶“LIFEKIT”▶“Text reader”▶“Reading data list”

The “Reading data screen (list)” appears.

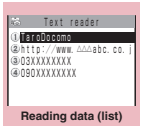

Reading data (list)

Function menu➡p.133

2 Select the scanned data

The “Reading data screen (detail)” appears.

Reading data (detail)

Function menu➡p.133

3 Select any of the displayed items

Text reader scanning screen FUNC (p.132)/Reading data screen (list/detail) (p.133)

Edit*1……Edits the scanned text.

Store*2……Saves the reading data.

Internet……Accesses the site of the scanned URL in URL mode. “Web To function”→p.147

Compose message*3……Displays the New mail screen with the reading data entered and composes i-mode mail. The entered data varies depending on the displayed reading data or screen.

Dialing……Calls or sends the SMS of the phone number in Phone number mode.

“Phone To/AV Phone To function”→p.147

Continued on next page

Add to phonebook……Adds the scanned data to the phonebook. The stored data varies depending on the displayed reading data or screen.

Add bookmark……Add the URL to the Bookmark in URL mode.

Search phonebook……Searches the phonebook using the scanned data.
You cannot search the phonebook on the scanning screen, in Card read mode or Compose message mode.

Add to memo……Adds the scanned data to Text memo.
You cannot store the scanned data in Card read mode or Compose message mode.

Reading mode set[*2]……Selects the scanning mode from "Card read/Compose message/URL/Mail address/Phone number/Free memo".

NEGA/POSI mode[*2] ……Sets the type of printing.

- **Auto setting**……Automatically sets the positive or negative.
- **Positive fix**……Suitable for printing the dark text on the light background.
- **Negative fix**……Suitable for printing the light text on the dark background.

Guidance OFF⇔**Guidance ON**[*2]……Sets whether to display the guidance or not.

Vertical writing⇔**Lateral writing**[*2]……Selects the vertical writing or lateral writing for the Japanese text to scan.

Display detail[*4]……Displays the Reading data screen (detail).

Display list[*5]……Displays the Reading data screen (list).

Copy[*6]……Copies text contained in the scanned data.

Delete this • Delete all[*6]……Deletes one or all scanned data.

*1: Unavailable on the Reading data screen (list).
*2: Available only on the Scanning screen.
*3: Not available when 2in1 is in B mode.
*4: Available only on the Reading data screen (list).
*5: Available only on the Reading data screen (detail).
*6: Unavailable on the Scanning screen.

NOTE

- As the image settings for videophone are not retained after the dialing or talking is finished, set this item each time you make a call.

i-mode/i-motion/i-Channel

What is i-mode? 136

Viewing sites

Viewing a Site ..... i-mode menu/site 136
Viewing and Using Sites 139
Registering My Menu Entries ..... My Menu 141
Changing Your i-mode Password ..... Change i-mode Password 141
Viewing Websites ..... Internet connection 141
Accessing Websites and Sites Quickly ..... Bookmark 142
Saving Site Contents ..... Screen memo 143

Downloading images and melodies from sites

Downloading Charged Contents 144
Downloading Images from Sites ..... Save image 144
Downloading Melodies from Sites ..... i-melody 145
Downloading PDF Data from Sites 145
Downloading Kisekae Tool from Sites 146
Downloading Various Data from Sites 146

i-mode utility functions

Using the Phone To/AV Phone To, Mail To, Web To and Media To Functions ..... Phone To/AV Phone To, Mail To, Web To and Media To 147
Using Location Information 148

Specifying your i-mode settings

Specifying Your i-mode Settings 148

Using certificates

Using SSL Certificates 149
Setting FirstPass 150
Changing the Certificate Host 151

Using i-motion

What is i-motion? 151
Downloading i-motion ..... Download i-motion 152
Setting Whether to Play an i-motion Automatically ..... i-motion auto-replay 152

Using i-Channel

What is i-Channel? 153
Viewing Sites from the Channel List 153
Setting i-Channel ..... i-Channel setting 154

What is i-mode?

The i-mode service enables you to use an i-mode-compatible FOMA terminal (i-mode terminal) display to access online services such as i-mode mail, connecting to the Internet and sites (programs), etc.

- i-mode is a pay service you need to apply for.
- For details on i-mode, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

■Notes on using i-mode

- Contents on sites (programs) or Internet websites are normally protected by copyright laws. The loaded documents, pictures, and other data from these sites (programs) or websites to your i-mode terminal is permitted only when intended for your personal use only. No data may be copied in part or in whole, whether modified or not, for resale or redistribution without the consent of the copyright holder.
- Note also that when the FOMA card (UIM) is replaced or the mobile phone is turned on with no FOMA card (UIM) inserted, some types of mobile phone may be incapable of viewing or playing melodies, images and movies downloaded from sites, files attached to sent or received mail (images, movies or melodies), screen memos and MessageR/F.
- If a file with restrictions on viewing and playback imposed by the FOMA card (UIM) is set as the standby screen or as a ring tone, the FOMA terminal operates under the default settings if the FOMA card (UIM) is replaced or the FOMA terminal is turned on without the FOMA card (UIM) inserted.

Viewing a Site <i-mode menu/site>

You can access the services provided by IPs (information service provider). (You may need a subscription.)

1 i▶“iMenu”

“i-mode menu” screen appears first, then “iMenu” screen appears.

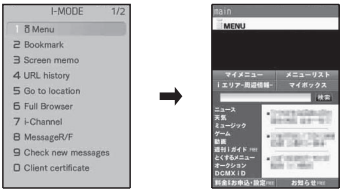

i-mode menu　　iMenu

Select “iMenu” in the i-mode menu screen, then i-mode communication starts.
“ ” icon flashes while the communication with the i-mode Center is in progress, and “ ” icon flashes when you are receiving i-mode service (during i-mode).

2 Select links and other options to display the site screen you want to view

“Viewing and Using Sites” →p.139

■ To cancel the download of pages
▶CLR

Sites

Function menu➡p.137

3 To quit i-mode, press ▶“YES”

After “ ” blinks, “ ” disappears.

NOTE

- The i-mode service area is the same as the FOMA service area (the area in which calls can be made and received).
- Some sites may require you to pay additional information fee.
- The number of colors displayed on certain sites exceeds the maximum number of colors that the FOMA terminal can display. For this reason, the site may not appear as intended.

NOTE

- On some i-mode-compatible site and websites, some characters may be difficult or impossible to see due to the selected colors.
- When you are requested information on music you play by the site, the confirmation screen concerning transmission of music information appears. Select "YES" to send the information (title, artist name and play date) on the music you play in your FOMA terminal. The information is used to offer information that IP (information service provider) customized to the customer.

iMenu in English

English iMenu is available.

1 ▶"iMenu"▶Scroll down to the bottom to select "English"

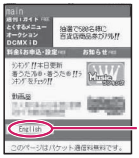

"English"

Select "日本語" to return to the Japanese display.

NOTE

- English iMenu is not available for とくするメニュー (tokusuru menu), 楽オク (Rakuten-auction), ｉエリア (i-area), マイボックス (My Box) and お知らせ (News).
- Generally, the What's New site is updated every other Monday.
- English iMenu sites differ from Japanese version.

Mobile phone/FOMA Card (UIM) serial number information

If you select an item while a site or website is displayed on the FOMA terminal, a message may appear notifying you that the mobile phone/FOMA Card (UIM) serial number information will be sent.

- The disclosure notification message is always displayed before your mobile phone/FOMA Card (UIM) serial number information is sent. Such information is never sent automatically.

NOTE

- The "mobile phone/FOMA Card (UIM) serial number information" is used by the IP (information service provider) to classify customers and provide customized services for you and to confirm that you can use the content the IP is offering.
- The "mobile phone/FOMA Card (UIM) serial number information" is sent to the IP (information service provider) via the internet and may be disclosed to the third party as a result. However, this operation does not disclose your phone number, address, age and gender to the IP (information service provider), etc.

FUNC Sites screen (p.136)

Add bookmark→p.142

Bookmark→p.142

Add screen memo→p.143

Screen memo list→p.143

Save image→p.144

URL history→p.138

Window

- **Open new window**……"Using multi window"→p.140
- **Close window**……Closes the displayed window.
- **Change window**……Switches windows when multiple websites are open.
- **i-Channel**→p.153

Enter URL……Enters a URL to connect to the website.

Add to phonebook→p.140

Add shortcut→p.94

Save schedule……Stores a scheduled event while browsing the page.→p.285

Refer dictionary……Starts the dictionary.→p.296

Home

- **Set as home URL**……Stores the URL of the displayed page as home URL. You can only store 1 URL as the home URL.
- **Display home**……Displays the page stored as the home URL.
  Available when "Home URL" is set to "Valid".→p.148

Reload……Refreshes the page.

Compose message*……Composes i-mode mail or Deco-mail with a URL for the page pasted into the message or the image pasted/attached.

iMenu……Displays the iMenu screen.

Continued on next page

Site info

Title……Displays the page title to check.

URL……Displays the page URL to check. If the entire URL does not appear, press ■ (Select), then use ⊡ to move the cursor to check the rest of the URL. Pressing ■ (Select) again hides the cursor.

Certificate……Displays the contents of the SSL certificate when the page is compatible with SSL.

Site settings

Replay……Plays the Flash movie or animation on the page again from the beginning.

Set image disp.……Sets whether to display the images on the page or not. When set to "OFF", "" appears instead of the image which is not displayed.

Sound effect……Sets whether to play the Flash movie sound effect or not (ON/OFF).

Change CHR code……Changes the character code to redisplay the page that is not displayed correctly.

Switch to FB……Switches to the Full Browser to display a website that cannot be displayed in i-mode. →p.218

* : Not available when 2in1 is in B mode.

NOTE

<Certificate>

- When certificates are displayed, the screen scrolls at the regular speed regardless of the "Scroll" setting.

<Change CHR code>

- If text is not displayed correctly, repeat the procedure. Note that when you perform the procedure for the 4th time, the site is displayed in the original character code setting.
- Some sites may not be displayed correctly even when the character code is changed.
- If you change the character code when a site is displayed correctly, the site may not be displayed correctly.

Displaying SSL pages

To view SSL pages, the following certificates are required:

- CA certificate: Issued by an certification organization and stored in your FOMA terminal at the time of purchase.
- DOCOMO CA certificate: Required for connecting to the FirstPass center and stored in the FOMA card (UIM) (green/white).
- Client certificate: Downloaded from the FirstPass center by selecting "Client certificate" in the i-mode menu and stored in the FOMA card (UIM) (green/white).

1 Display an SSL page

The SSL page and the "" icon appears.

■ **To cancel the authentication**

▶"Cancel"

SSL page

2 Move from the SSL page to an ordinary page▶"YES"

SSL communication ends and the "" icon disappears.

NOTE

- The message "This site is not certified Connect?" may appear when you attempt to open an SSL page. This message appears when the SSL certificate for the page has expired or is not supported. In this case, you can continue to view the page by selecting "YES". However, you may not be able to safely send your personal information such as your credit card number or contacts.

Reconnecting to sites you visited before

<URL history>

"URL history" records the last 30 URLs of the sites you visited before. You can reconnect to the website displayed using the "URL history".

1 ▶"URL history"

The "URL history" screen appears.

2 Select the record

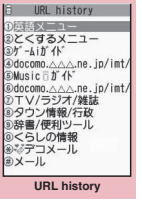

URL history

Function menu➡p.138

FUNC URL history screen (p.138)

Add bookmark→p.142

URL……Displays the stored URL.

Delete……Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice"→p.38

Viewing and Using Sites

This section describes the operations for viewing sites or websites.

Image display

- The FOMA SO706i can display GIF and JPEG format images and Flash movies (p.140). However, the FOMA terminal may be unable to display some images regardless of the format.
- When a Flash movie is displayed, the display operation may differ from that on a normal site.
- When you play the Flash movie that is stored in Data Box, Screen memo, microSD card, the display operation may differ in some stored parts.
- You can specify whether or not images are displayed in the “Set image disp.” setting.

■Displayed image icons

(color): Displayed while an image is loaded or when “OFF” is selected in the “Set image disp.” setting

: Displayed when image loading is failed

(B/W): Displayed when image cannot be loaded

Scroll function

When you are viewing a page on a site and the text or a list does not fit in the screen, you can scroll up or down to view the rest of the text.

: Scrolls down

: Scrolls up

(▼メモ): Scrolls down by screens

(▲マナー): Scrolls up by screens

• Scroll setting→p.148

Selecting links and other options

When you are using i-mode, you may need to perform operations such as those described below.

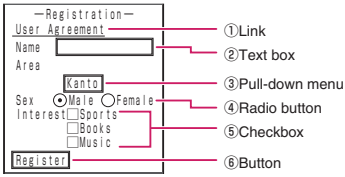

①Link

Select the item to proceed to the linked page.

②Text box

You can enter text directly. When you select a text box, the Character entry (edit) screen appears.

③Pull-down menu

You can select one option from the list of selectable options. Only a part of the selectable options is displayed but hidden options appear as a list when you select the pull-down menu.

④Radio button

You can select only one option. ⊙ indicates a selected radio button.

⑤Checkbox

You can select multiple options from a range of options. ☑ indicates a selected checkbox.

⑥Button

When you select a button, the function assigned to the button is activated.

Jumping to previous/next pages

You can jump forward or back to a page that has been stored in the FOMA terminal’s cache. Up to 30 pages are stored in per window (up to 100 pages are stored in all windows).

1 Press to jump back to the previous page or to jump forward to the next page

■When the page display sequence is “A”, “B”, “C”, “B” and “D”

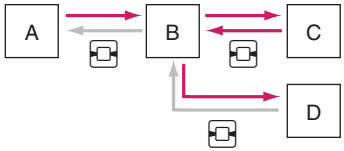

: Sequence of viewing pages

: Back from the screen “D”

■To display the pages stored in cache

- Cache refers to an area of memory on the FOMA terminal itself in which data from sites or Internet websites you have visited is temporarily stored. If you press to move to another page while you are viewing a site or website, the FOMA terminal displays the page stored in cache rather than connecting to the i-mode Center and accessing the page on the actual site. However, if the cache is full or if the page is set to always display the latest information, the FOMA terminal connects to the site even when you press . Also, even when the page is stored in the cache, if the date and time information for that page has been updated, the FOMA terminal connects to the site and displays the latest data.

Continued on next page

- When site data is loaded from cache, the text and settings you entered on previous visits is not displayed.
- The cache is cleared when you exit i-mode.
- When you download SSL-compatible pages from cache, the message appears indicating that the SSL page will be displayed.

Using multi window

You can open up to 5 websites (up to 6 websites when including i-Channel).

- You can use the tab to switch pages with i ( ) when multiple websites are opened.

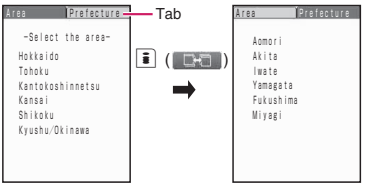

1 Sites screen (p.136)▶Highlight the link ▶ch (Open)

The page opens with a new window.

■ To close a opened website

▶CLR▶"YES"

Opening websites other than linked pages

1 Sites screen (p.136)▶✉ (FUNC)▶"Window"▶"Open new window"▶Select any item:

Link……Displays the linked pages in the same way as ch (Open).

Bookmark……Displays the website registered as bookmark.

Enter URL……Enters a URL to display the website.

Display home……Displays a website registered as home URL.

NOTE

- You cannot arrange the multi-opened websites side-by-side.

Adding phone number and e-mail address to the phonebook

<Add to phonebook>

You can add a phone number or e-mail address displayed on a site page or screen memo to your phonebook.

<Example: To add a phone number displayed on a site page>

1 Sites screen (p.136)▶✉ (FUNC)▶"Add to phonebook"▶"YES"▶Add the phone number to phonebook

Adding information to the phonebook→p.70

If the name, reading and mail address are attached to phone number, they are also entered to the phonebook together with phone number. Enter remains of necessary items and then save to the phonebook.

Operating the Flash movies

Flash is an animation technique supported by the FOMA terminal that uses both images and sound. Flash gives you access to a wide range of animations and visually exciting sites. You can also download a Flash movie to your FOMA terminal and set it as the standby screen.

- A Flash playing error prevents successful completion of the saving.
- Note that if you play a Flash movie to which vibration is set, your FOMA terminal vibrates regardless of the "Vibrator" setting.
- Some Flash movies may not run correctly.
- You may also be able to control a Flash movie even when "◁⇕▷" does not appear at the bottom of the screen.
- Flash movies are not displayed if you select "OFF" in "Set image disp.".
- Selecting "YES" in "Use phone information" allows you to use the FOMA terminal data (time, date, reception level, battery level, ring volume, language, model type and model info).

NOTE

- Some Flash movies use sound effects. To run a Flash movie without the sound effects, select "Sound effect" and then select "OFF". Even if "Vibrator" is set to "Melody linkage", this setting is invalid for sound effects of Flash movie.
- When a Flash movie is set as a screen such as standby by using "Display setting", the sound effects or vibrator that are set in the Flash movie do not run. "Replay" is also unavailable.→p.138

NOTE

- When some Flash movies are saved or saved as a screen memo, part of the images may not be saved or they may otherwise differ from the way they appear on the site.

Registering My Menu Entries

<My Menu>

My Menu provides you with a quick and convenient way to connect to frequently visited sites.

- You can register up to 45 sites in My Menu.
- Some sites cannot be registered to My Menu.
- To connect quickly to a website, use “Bookmark”.

1. **Sites screen (p.136)▶“My Menu Registration”▶Select the “Input password” box▶Enter your i-mode password▶“Select”**
   i-mode password→p.141

NOTE

- Charged sites in the iMenu list are automatically registered to My Menu after subscription.

Viewing sites registered to My Menu

1. **▶“iMenu”▶“English”▶“My Menu”▶Select a site**

Changing Your i-mode Password

<Change i-mode Password>

You will need a 4-digit “i-mode password” to register or unregister site in My Menu, subscribe to or cancel Message Service and fee-based i-mode sites, and enter Mail Settings.

- The default i-mode password when you apply for i-mode service is set to 0000. Please set a new password.
- Please keep your i-mode password private and avoid sharing it with others.
- If you have forgotten your i-mode password, please bring official documents that verify your identity, such as a driver’s license, to a DOCOMO shop to have your password reset to 0000.

1. **▶“iMenu”▶“English”▶“Options”▶“Change i-mode Password”**
2. **Select the “Current Password” box▶Enter your current i-mode password**
   The numbers of the entered password is displayed as “＊”.
3. **Select the “New Password” box▶Enter the new i-mode password**
   Enter a 4-digit number.
4. **Select the “New Password (Confirmation)” box▶Enter the new i-mode password again**
   Enter the number you entered in step 3.
5. **“Select”**

Viewing Websites

<Internet connection>

This function allows you to view website by entering its URL.

- Websites that are not i-mode-compliant may not be displayed properly.
- A website may be displayed differently in your terminal from when it is viewed on PC.
- You can view websites designed for a PC in Full Browser.
- You can enter a URL up to 256 single-byte characters long including “http://” or “https://”.

1. **▶“Go to location”▶“Enter URL”**
   The “URL list” screen appears.



URL list

Function menu➡p.142

2. **“<NEW>”▶Enter URL▶“OK”**

Viewing sites from the URL history

The FOMA terminal records the last 10 URLs you entered in the URL history.

1. **▶“Go to location”▶“Enter URL”**
2. **Select a URL▶“OK”**

■ **To edit the selected URL**

▶Select the “Internet address” box▶Edit the URL

Continued on next page

NOTE

- When you enter URLs and connect to sites, visits to the same URL are logged as separate entries.

FUNC URL list screen (p.141)

Add shortcut→p.94

Compose message*·····Composes an i-mode mail with the URL pasted in the message.

Set as home URL·····Stores a URL as your home URL. You can only store 1 URL as your home URL.

Delete·····Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice"→p.38

* : Not available when 2in1 is in B mode.

Accessing Websites and Sites Quickly <Bookmark>

Adding frequently visited websites or sites to your Bookmarks folders allows you to access those sites quickly and easily.

- You can change the titles of your bookmarks and organize the bookmarks into categories by using folders.

Adding bookmarks

- You can bookmark up to 100 sites.
- You can enter up to 256 single-byte characters for a URL.
- Some sites cannot be bookmarked.

<Example: While displaying a site>

1 Sites screen (p.136)▶✉ (FUNC)▶"Add bookmark"▶"YES"▶Select a folder

NOTE

- Bookmark titles can consist of up to 12 double-byte or 24 single-byte characters. Longer titles are truncated when the bookmark is added. If no title is given, the URL is displayed (excluding "http://" or "https://").

Using a bookmark to access a site or website

1 i▶"Bookmark"

The "Bookmark folder list" screen appears.
When the FOMA terminal is in Secret mode or Secret data only mode, the Secret folder is also displayed.

Bookmark folder list
Function menu➡p.142

2 Select a folder

The "Bookmark list" screen appears.

3 Select a bookmark

Bookmark list
Function menu➡p.143

FUNC Bookmark folder list screen (p.142)

- You cannot rename or delete the "Bookmark" folder already created on the FOMA terminal at the time of purchase.

Add folder·····Enters a folder name to add a folder. You can add up to 9 folders. You can enter up to 10 double-byte or 20 single-byte characters.

Edit folder name·····Edits the folder name of the added folder. You can enter up to 10 double-byte or 20 single-byte characters.

Sort folder·····Selects the position to move to and rearranges the folder.

No. of bookmarks·····Displays the total number of bookmarks in all the folders.

iC trans. all→p.260

Send all Ir data→p.258

CopyAll to microSD→p.248

Delete folder·····Deletes the folder and bookmarks in the folder.

Delete all·····Deletes all the bookmarks. However, the bookmark folders are not deleted.

NOTE

<No. of bookmarks>

- The number of data in the microSD folder and Secret folder are not displayed.

FUNC Bookmark list screen (p.142)

Move……Selects from “Move this/Move selected/Move all” and moves the bookmark to the other folder you select. “About multiple-choice”→p.38

Edit title……Edits the title. You can enter up to 12 double-byte or 24 single-byte characters.

Add shortcut→p.94

Compose message[*1]……Composes an i-mode mail with the URL pasted in the message.

Attach to mail[*1]……Composes an i-mode mail with a bookmark attached.

iC transmission→p.259

Send Ir data→p.258

Copy to microSD→p.248

Set as home URL……Stores a URL as your home URL. You can only store 1 URL as your home URL.

Copy URL……Copies a bookmarked URL.
▶Use ✣ to move the cursor to the first character to copy▶● (Start)▶Use ✣ to highlight the end of text to copy▶● (End)
You can paste the copied URL to the Character entry (edit) screen.→p.309

No. of bookmarks……Displays the total number of bookmarks in the folder.

Delete……Selects the deleting method from “Delete this/Delete selected/Delete all”.
“About multiple-choice”→p.38

Keep in secret⇔Put out[*2]……“Preventing Others from Viewing Data”→p.104

Bookmark info[*3]……Displays the bookmark information.

*1: Not available when 2in1 is in B mode.
*2: Available only in Secret or Secret data only mode.
*3: Available only for bookmarks stored on the microSD card.

Saving Site Contents

<Screen memo>

When you have found some useful information (travel information, etc.), you can save the displayed page on your FOMA terminal as a screen memo for later reference.

- You can save up to 100 screen memos. However, the number you can actually save varies depending on the amount of data on each saved page.

Saving a screen memo

1 Sites screen (p.136)▶✉ (FUNC)▶“Add screen memo”▶“YES”

NOTE

- When you save a screen memo of an SSL page, the SSL certificate for that page is also saved.
- If you save the same page twice, it is saved as a new screen memo and is not replaced with the earlier save.
- If you save a site in which an item is already entered in a radio button, checkbox, text box, pull-down menu or selection box as a screen memo, you cannot view the item when displaying the screen memo.
- When you save a screen such as the data acquisition screen, the data for that screen is saved along with the screen. However, the data acquisition screen for i-motion or Chaku-Uta-Full® with set playback period can not be saved as a screen memo.

Displaying a screen memo

1 i▶“Screen memo”
The “Screen memo list” screen appears.



Screen memo list

Function menu➡p.144

2 Select a screen memo
The “Screen memo detail” screen appears.

Screen memo
(Screen memo detail)

Function menu➡p.144

NOTE

- Information on the screen memo is the one stored and may differ from the latest one.

FUNC Screen memo list screen (p.143)

Edit title……Edits the title. You can enter up to 11 double-byte or 22 single-byte characters.

Protect ON/OFF……Protects or unprotects screen memo. Protected memo titles are marked with "".

No. of memos……Displays the numbers of stored and protected screen memos respectively.

Delete……Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice"→p.38

NOTE

<Protect ON/OFF>

- Up to 50 screen memos can be protected. However, the number of screen memos you can protect varies depending on the data size.

FUNC Screen memo detail screen (p.143)

Save image……Saves the images displayed in a screen memo.→p.144

Add to phonebook……Adds the phone number and e-mail address displayed on the screen memo to the Phonebook.→p.70

Edit title……Edits the title of the screen memo. You can enter up to 11 double-byte or 22 single-byte characters.

Protect ON/OFF……Protects or unprotects screen memo. Protected memo titles are marked with "".

Compose message*……Composes i-mode mail and Deco-mail with the URL for a screen memo pasted into the message or the image pasted/attached.

Save schedule……Stores a scheduled event by browsing the screen memos.

Refer dictionary……Starts the dictionary.→p.296

URL……Displays and checks the screen memo URL.

Certificate……Displays the SSL certificate details when the screen memo is SSL-compatible.

Sound effect……Specifies whether the settings for Flash movie sound effects are enabled or not (ON/OFF).

Replay……Plays the Flash movie or animation in the screen memo again from the beginning.

Delete……Deletes the screen memo.

* : Not available when 2in1 is in B mode.

Downloading Charged Contents

Some sites may charge you for downloading contents (images, melodies or Chaku-Uta-Full®). When you try to download charged contents, a confirmation message for the purchase and the i-mode password entry screen appears.

NOTE

- You cannot download the contents if more than 2 minutes have passed before starting downloading after you enter the i-mode password. Enter the i-mode password again.

Downloading Images from Sites <Save image>

You can save an image, background image or animation displayed or attached to the currently displayed site, screen memo, i-mode mail or MessageR/F, then set the saved image in screens such as standby screen and wake-up display.

- You can store up to 1,000 images including images that can be set as Deco-mail pictures or Deco-mail pictographs as well as shot still images (the number of images you can actually store may be reduced depending on the file size).

<Example: To save a normal image displayed on a site page>

1 Sites screen (p.136)▶✉ (FUNC)▶"Save image"▶"Normal image"▶Select an image▶"YES"▶Select a folder

Position the frame ▭ over the image to be saved.

■ **To save the background image**

▶"Save image"▶"Background image"▶"YES"▶Select a folder

2 "YES"▶Select an item

■ **When you do not set the image to the standby screen, etc.**

▶"NO"

NOTE

- When 2in1 is set to Dual mode or B mode, and also "Setting standby screens for each mode" is set to other than "Same as A Number", the saved image cannot be set to the standby screen. The screen for A mode or OFF in 2in1 mode is applied.

Downloading Melodies from Sites <i-melody>

You can set your favorite song, the latest hit song downloaded from a site or a stored melody attached to an i-mode mail as a ring tone on your FOMA terminal.

- You can store up to 200 melodies (the number of melodies you can actually store may be reduced depending on the file size).

<Example: To save a melody downloaded from a site>

1 Sites screen (p.136)▶Select a melody

2 "Save"▶"YES"▶Select a folder

■ **To play a melody**
▶"Play"

■ **To display melody information**
▶"Property"

3 "YES"▶Select an item

■ **When you do not set the melody to the ring tone, etc.**
▶"NO"

NOTE

- Downloaded melodies may be subject to restrictions such that only a pre-designated part of the melody can be played. While a melody of this type is played in full when played back on the FOMA terminal, when it is set as a ring tone, only the designated section is played.

Downloading PDF Data from Sites

You can download PDF-formatted data from a website and display it on the FOMA terminal (Phone).

- You can store up to 400 PDF data on the FOMA terminal. (The number of data you can actually store may be reduced depending on the file size.)

1 Sites screen (p.136)▶Select a PDF data file

The "PDF data" (p.261) screen appears.
Operation for viewing a PDF document→p.263

* When a PDF file that enables you to download the specified pages is selected, the first downloaded page appears. The subsequent pages are downloaded when you move to those pages.

■ **To cancel the download**
▶[i] (Quit) or [CLR]
When the message asking whether to save the partly downloaded data appears, select "YES" to save it. In this case, you can download the remaining data later.→p.146

■ **If the password entry screen appears**
Enter the password set to the PDF data.

■ **To save the PDF data**
▶[✉] (FUNC)▶"Save"▶"YES"▶Select a folder
For PDF data that requires download of all the data, all the pages are saved. For PDF data that enables you to download the specified pages, the data (pages) downloaded so far are saved. You can download the remaining pages later.
→p.145

■ **To end display of PDF data**
▶[CLR]
When the PDF data is not saved, a message asking whether to close the PDF appears. To save the PDF data, select "NO".

Downloading remaining PDF data after downloading partially

When you have saved partly downloaded PDF data, you can download the remaining pages (data) later. The method of downloading varies depending on the status of the downloaded PDF data.

● For partially downloaded (by page) PDF data ((pale blue))

1 PDF list screen (p.261)▶Select a PDF file to view

The message notifying that downloading will resume appears and then the "PDF data" screen (p.261) appears.
Operation for viewing a PDF document→p.263

2 [i] (Tool)▶Press ◀ ▶ on the toolbar to view pages not yet downloaded

Connected to the site to download the pages.

■ **To specify the page number you want to download**
▶Select page number display on the toolbar▶Enter the page number you want to view

■ **To download all the remaining data at one time**
▶[✉] (FUNC)▶"DL remaining data"▶"YES"

■ **To save the PDF data**
▶[✉] (FUNC)▶"Save"▶"YES"
The document including the newly downloaded pages is saved.

● **For PDF data that could only be downloaded partially < (pale blue), (pale blue)>**

1 PDF list screen (p.261)▶Select a PDF file to view

Before the document is displayed, a message appears asking whether to download all the remaining data.

2 “YES”

Connected to the site and downloading of all the remaining data starts. After downloading is completed, the “PDF data” screen (p.261) appears. (Some documents may not be viewable even if the download was successful.)

■ **To save the PDF data**

▶ (FUNC)▶“Save”▶“YES”

NOTE

- It may take a long time to display some PDF data.
- PDF data may not be properly displayed if it contains formats unsupported by PDF viewer or complicated designs.
- Note that the communication fee for downloading large amounts of data will be expensive.
- If you attempt to download a PDF file larger than 500K bytes, the confirmation message asking whether to download the file appears.
- You cannot download a PDF file whose size is unknown or larger than 2M bytes.
- When the PDF data that you try to download has the same definition file (information file for defining PDF) as the PDF data stored in the FOMA terminal or microSD card, they are recognized as the same data. Consequently, the PDF data will not be downloaded and the saved PDF data will be displayed.

Downloading Kisekae Tool from Sites

You can download Kisekae Tool packages from i-mode sites and save them on your FOMA terminal.

- You can save up to 100 Kisekae Tool packages, including the pre-installed ones (the number of packages that can be saved may be less depending on the size of Kisekae Tool data).

1 Sites screen (p.136)▶Select a Kisekae Tool package

■ **To cancel the download**

▶ CLR

You can resume downloading if the message asking whether to do it appears.

Selecting “NO” allows you to save the partly downloaded data.

2 “Save”▶“YES”

■ **To check the Kisekae Tool package**

▶“Preview”

■ **To display the Kisekae Tool package information**

▶“Property”

NOTE

- If the pre-installed Kisekae Tool is deleted, you can download from “PlayNow” by SO.
  “iMenu”▶“メニューリスト” (Menu List)▶“ケータイ電話メーカー ” (Mobile phone manufacturer)▶“PlayNow by SO”
  You can read the QR code on the right and select the displayed URL to access website.

Downloading Various Data from Sites

You can enormously expand the range of uses for your FOMA terminal by downloading additional data such as dictionaries, Deco-mail pictures, Template, Chara-den, and ToruCa from sites.

- You can save up to the following number of downloaded data, including the pre-installed data.
  - Dictionary : up to 5
  - Deco-mail picture, etc. : up to 1000
  - Template : up to 500
  - Chara-den : 10
  - ToruCa : up to 100

* The number of data you can actually store may be reduced depending on the file size.

<Example: To download a dictionary from a site>

1 Sites screen (p.136)▶Select a data▶“Save”▶“YES”

■ **To display dictionary information**

▶“Property”

■ **When the dictionaries are full**

▶Select the dictionary to delete▶“YES”

The selected dictionary is overwritten and new dictionary is saved.

NOTE

- If the pre-installed Chara-den is deleted, you can download from “PlayNow” by SO.
  “iMenu”▶“メニューリスト” (Menu List)▶“ケータイ電話メーカー ” (Mobile phone manufacturer)▶“PlayNow by SO”
  You can read the QR code on the right and select the displayed URL to access website.
- The file name used for Template with no title is “YYYY/MM/DD hh:mm” (Y = year, M = month, D = day, h = hour, m = minute).
- You may not be able to download data depending on sites or the file size.

Using the Phone To/AV Phone To, Mail To, Web To and Media To Functions

<Phone To/AV Phone To, Mail To, Web To and Media To>

These functions provide quick and simple procedures for making calls, composing SMS, sending mail or viewing websites using information (phone numbers, e-mail addresses, URLs, etc.) displayed in mail or on a site. 1Seg can be activated.

- You may not be able to use this function for the mails or sites sent from a PC.
- You may use items in which a phone number, mail address, and URL are not indicated but linked (e.g. “Please contact here”).

Phone To/AV Phone To function

You can call or compose an SMS for the phone number in the displayed site or mail.

- You can enter up to 26 digits as a phone number.

<Example: To make a voice call to a number displayed on a site>

1. **Sites screen (p.136)▶Select a phone number**

   ■ When the 2in1 is in Dual mode
   The Outgoing number selection screen appears. Select a phone number.

2. **“Voice phone”**

3. **“Dial”**

Mail To function

You can send a mail to a mail address displayed on a site, in a mail, PDF data or the Full Browser screen.

- You cannot use the Mail To function when draft mails are full.
- You may not be able to use the Mail To function when 2 or more e-mail addresses are displayed in sequence.
- You can enter up to 50 single-byte characters as an e-mail address.
- When 2in1 is in B mode, this function is not available.

<Example: To send mail from the sites screen>

1. **Sites screen (p.136)▶Select a mail address**

2. **Compose and send an i-mode mail →p.156**

Web To function

You can display websites in the displayed site or mail.

- You can enter up to 512 single-byte characters as a URL.

<Example: To open another website from the sites screen>

1. **Sites screen (p.136)▶Select a URL**

Media To function

Use information such as date and time, channel and program name displayed in a web page or mail to activate 1Seg or book viewing/recording.

<Example: To activate 1Seg from a site>

1. **Site screen (p.136)▶Select date and time, channel, program name, etc.**

NOTE

- The Media To function may not work even if information is selected.

Using Location Information

Select a link with location information added on a site, use the location information.

<Example: To use the information on a site>

1 Sites screen (p.136)▶Select a link with location information added▶Select any item:

Run i-αppli……Displays the list of i-αppli compatible with the location information function (that can use location information).

Read a Map……Accesses the i-mode site and displays the peripheral map, etc. using the location information.

Paste to mail*……Pastes the location information URL into an i-mode message to compose a new message.

* : Not available when 2in1 is in B mode.

NOTE

- When the location information URL is pasted into the message, " ▷ " is prefixed to the location information URL.
- The number of characters of the pasted location information URL is counted as the number of characters of the message.

Specifying Your i-mode Settings

1 i▶"i-mode settings"

The "i-mode settings" screen appears.

i-mode settings

2 Select any item:

Scroll……Sets the scrolling speed and link display of the detail screen for a site, screen memo or MessageR/F.

Speed (default: High speed)……Selects the scrolling speed from "High speed/Low speed".

During scroll in focus (default: OFF)……Sets whether to highlight the linked pages while scrolling.

Font size (default: Standard)……Selects the character size of the detail screen for a screen memo, MessageR/F or a page on a site, from "Small/Standard/Large/X-large". →p.93

Set image disp. (default: ON)……Sets whether the detail screen for screen memos and pages on a site are displayed or not. If you select "OFF", the " " icon will be displayed instead of the images not to be displayed.

i-motion auto-replay (default: ON) →p.152

Auto-display setting (default: MessageR preferred)……Sets for the automatic display of MessageR/F.

Start attachment (auto) (default: ON)……Sets whether the attached/pasted melody automatically plays when opening the MessageR/F.

Use phone information (default: Accept) →p.149

Message list display (default: 2 lines)……Sets the number of lines in the message list screen.

Home URL……Sets for using the home URL display function. When set to "Valid", pressing ▯ on the standby screen displays the screen of the stored URL. You can enter up to 256 single-byte characters for the URL.

Invalid (default)……Disables the home URL display setting.

Valid……Enables the home URL display setting.
Select the Home URL field and enter a URL to be stored.

Sound effect (default: ON)……Sets whether to play the sound effects for the Flash movies in a site or screen memo.

Tab display setting (default: Open at the back side)……Sets whether to change (Open at the front) or keep (Open at the back side) the current display when you open a website in new window.

Check settings……Displays the settings set in "i-mode settings".

Reset……Resets the settings specified in "i-mode settings" to the default settings.

NOTE

<Home URL>

- If a flat-plug earphone/microphone with switch (optional) is connected to the FOMA terminal, pressing the switch in the standby screen will also display the site set as the home.

<Sound effect>

- Even if sound effects are set to "ON", some Flash movies may not make any sound.

Setting the connection timeout

<Set connection timeout>

This option sets time-out duration for which the FOMA terminal automatically stops trying to connect when a site is busy and there is no response.

1 MENU▶"SETTINGS"▶"i-mode common set"▶"Set connection timeout"▶Select any item:

60 seconds……Automatically stops connecting if there is no response for 60 seconds.

90 seconds……Automatically stops connecting if there is no response for 90 seconds.

Unlimited……Does not automatically stop connecting.

Setting a host different from i-mode host (ISP connection)

<Host selection>

*** There is normally no need to change this setting.**

You need to select a different host when you want to use a service other than i-mode. If you change the host to a host other than i-mode, you can not use i-mode and i-mode mail.

- You can store up to 10 hosts other than "i-mode".

1 MENU▶"SETTINGS"▶"i-mode common set"▶"Host selection"▶Highlight "<Not recorded>"▶i (Edit)▶Enter your security code▶Select any item:

Host name……Sets the host name. You can enter up to 9 double-byte or 18 single-byte characters.

Host number……Sets the host number. You can enter up to 99 single-byte characters.

Host address……Sets the host address. You can enter up to 30 single-byte characters.

Host address2……Sets the host address2. You can enter up to 30 single-byte characters.

2 Set the respective items▶i (Finish)

NOTE

- Note that costs of packet communication while you are connected to a host other than i-mode are not covered by the Pake-Houdai or Pake-Houdai full deal.
- When you change the host, the ticker of i-Channel is turned off. The ticker is turned on again automatically when the information is updated automatically or when ch is pressed to receive the latest information.

NOTE

- After changing the host, the i-Channel information may not be updated automatically. To receive the latest information, press ch to display the channel list screen.

Specifying whether to use terminal data in Flash movies

<Use phone information>

Use this function to specify whether terminal data is used when a Flash movie is running.

- The terminal data may be used depending on the particular Flash movie. Select "Accept" in "Use phone information" of "i-mode settings" so that images use the terminal data. The default setting is "Accept". Such movies may use the following types of terminal data:
  - Battery level
  - Signal strength
  - Date and time
  - Ring volume setting
  - Select language
  - Model data

1 i-mode setting screen (p.148)▶"Use phone information"▶"Accept" or "Reject"

Using SSL Certificates

You can check the details of an SSL certificate or to set to valid/invalid.

1 MENU▶"SETTINGS"▶"i-mode common set"▶"Certificate"

2 Select a certificate▶Check the details

■ **To validate or invalidate SSL certificates**

▶Highlight a certificate▶✉ (FUNC)▶"Valid/Invalid"

NOTE

- When set to "Valid", " " appears. When set to "Invalid", " " appears.
- If you select "Invalid", you cannot view SSL pages with that SSL certificate.

Setting FirstPass

User certificates prove that the user is a proper FOMA service subscriber. Downloaded user certificates are saved on your FOMA card (UIM) and enable you to access client authentication-compliant sites.

Connecting to the FirstPass Center

Follow the procedure below to request and download the user certificate.

- You can request a user certificate or download from the FirstPass Center.
- User certificates cannot be used with the FOMA card (UIM) (blue).
- The FirstPass cannot be used overseas.
- To connect to the FirstPass Center, you must first set the date and time on your FOMA terminal. →p.45
- The screens and procedures used at the FirstPass Center are subject to change.

1 i▶"Client certificate"▶Check the description▶"English"

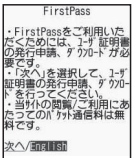

2 "Request your certificate"

■ **To apply invalidation**

Select "Other settings" and then select "Revoke your certificate".

Enter your PIN2 code and then proceed as directed by the on-screen instructions.

3 Check the description▶"Continue"

4 Enter the PIN2 code

PIN2 code→p.100

5 Check the message▶"Download"▶Check the description▶"Continue"▶"Menu"

The confirmation message appears.

The FirstPass menu screen reappears after the downloading is completed.

NOTE

- Packet communication charge for connection to the FirstPass Center is free.

NOTE

- Before using the FirstPass Center, select "The usage regulation (Japanese only)" and read the information carefully.
- You cannot use the following function during connection to the FirstPass Center.
  - Sending or receiving i-mode mail (sending and receiving SMS is available)
  - Check new message (Check new SMS is available)
  - Reception of MessageR/F
  - Downloading attached files of mails manually
  - Web To function from the mail detail screen
- Always send a certificate request before downloading a new or updated user certificate. You cannot download a certificate without first requesting the certificate.
- Once an application for user certificate invalidation has been completed, you can no longer access FirstPass-compliant sites that require that user certificate.
- If you use FirstPass after completion of invalidation, apply issue for the user certification again and download it.

Using a user certificate to connect to a site

1 Sites screen (p.136)▶Confirm user certificate transmission▶"YES"▶Enter your PIN2 code

NOTE

- The Packet communication charge of connecting to FirstPass-compliant sites is covered by the Pake-Houdai or Pake-Houdai full deal.
- FirstPass is also available in Full Browser. However, the packet communication charge for connecting to FirstPass-compliant sites in Full Browser is not covered by the Pake-Houdai or Pake-Houdai full deal.
- If you connect to a FirstPass-compliant site without a user certificate, or if your user certificate has expired, a message appears informing you of that fact. You can still connect to the site and view subsequent pages by selecting "YES" in some cases, but note that it may not be safe to send your personal information (credit card number, contact details, etc.). To disconnect, select "NO", then reconnect the site after downloading the user certificate from the FirstPass Center.

■ **Notes on using FirstPass**

- FirstPass is DOCOMO's digital authentication service. Using FirstPass enables the client authentication in which the site authenticates the FOMA terminal.

- FirstPass can be used either when the FOMA terminal is directly connected to the Internet or when it is connected via a PC. When the FOMA terminal is connected to the Internet via a PC, the FirstPass PC software included in the provided CD-ROM for FOMA SO706i is required. For more information, refer to the PDF-format "FirstPass-Manual" contained in the "FirstPassPCSoft" folder on the CD-ROM. (The "FirstPass-Manual" is in Japanese only.)
  To view the PDF-format "FirstPass Manual", Adobe® Reader® is required.
  If this software is not installed on your PC, install the Adobe® Reader® in the provided CD-ROM to view the file.
  Refer to the "Adobe Reader ヘルプ" (Help of the Adobe Reader) for details on how to use it.
- When requesting a user certificate, carefully read and agree to the "The usage regulation" of FirstPass displayed on your screen before proceeding with your request.
- To use a user certificate, you will need to enter your PIN2 code (p.100). Take great care to prevent unauthorized persons from using your FOMA card (UIM) or PIN2 code since all the actions performed subsequent to PIN2 code entry will be assumed to have been performed by you.
- If your FOMA card (UIM) is lost or stolen, you can have your user certificates invalidated at NTT DOCOMO Information counter on the back cover of this manual.
- NTT DOCOMO is not responsible for and accepts no liability whatsoever regarding the sites or the content provided by FirstPass-compliant sites. Any disputes are to be resolved between the customer and the FirstPass-compliant site.
- NTT DOCOMO and its authentication company provide no guarantee regarding security or secrecy in the use of FirstPass and SSL certificates. Such certificates are used entirely at the discretion of the user.

Changing the Certificate Host

*** There is normally no need to change this setting.**

You can set the host for downloading the user certificate.

1 MENU▶"SETTINGS"▶"i-mode common set"▶"Certificate host"

2 Highlight "<Not recorded>"▶i (Edit)▶Enter your security code▶Select any item:

Default URL……Sets the URL of the initial screen for the host. You can enter up to 100 single-byte characters.

Host number……Sets the host number. You can enter up to 99 single-byte characters.

3 Set the respective items▶i (Finish)

NOTE

- To change a stored "User setting host", use the same procedure for storing.
- To delete a stored "User setting host", select "Delete" from the function menu.

What is i-motion?

An i-motion is a file containing video, voice and music data. It can be downloaded from an i-motion site to your FOMA terminal. You can also set an i-motion as a ring tone. Chaku-motion→p.82

● i-motion types

i-motion can be broadly divided into 2 types as follows. The type of the i-motion you downloaded depends on the site or data.

Type		Description
Type	Playback type	
Standard type (Can be saved*) (Up to 10M bytes)	Playback after downloading	Plays the i-motion after downloading all the data.
	Playback while downloading	Plays the i-motion while downloading the i-motion data.
Streaming type (Cannot be saved) (Up to 10M bytes)	Playback while downloading	Plays the i-motion while downloading the i-motion data. As the data is discarded after the playback, you cannot repeat playback or save the i-motion to the FOMA terminal.

* : May not be saved depending on the i-motion.

Downloading i-motion

<Download i-motion>

1 Sites screen (p.136)▶Select i-motion

When data downloading is completed, the “Data acquisition” screen appears.

■ **To cancel downloading**

▶CLR

2 “Play”

The downloaded i-motion is played.

“Operations on the Music Player” screen→p.278

Data acquisition

Function menu➡p.152

NOTE

- Some sites and i-motion do not allow downloading or the playback during the download.
- For standard type i-motion, the downloading itself continues even if the playback is stopped during downloading.
- Some i-motion is restricted to be played. “” is displayed at the beginning of the title for the i-motion with restrictions on the play count, period or time limit. The i-motion restricted on the playback period cannot be played before or after the period. If the battery pack is removed from the FOMA terminal for a long period of time, the date and time settings stored on the FOMA terminal may be reset. In this case i-motion restricted on the playback period or time limit cannot be played.
- Some i-motion cannot be correctly played.
- The playback while downloading may be interrupted or the images may be distorted due to the signal reception.

FUNC Data acquisition screen (p.152)

Add screen memo……Saves the data acquisition screen to the screen memo.→p.143

Certificate……Displays the contents of the SSL certificate when the page is compatible with SSL.

NOTE

- You can also play an i-motion from a “Screen memo” after saving the data acquisition screen as a screen memo.

  However, you cannot save the data acquisition screen of:
  - i-motion restricted to be played
  - Streaming type i-motion
  - Incomplete i-motion

Saving i-motion

- Some i-motion cannot be saved on the FOMA terminal.
- You can save up to 100 i-motion, including the movies shot by the camera. The maximum number of i-motion to be stored varies depending on the amount of various stored data.
- i-motion folder→p.224

1 Data acquisition screen (p.152)▶“Save”▶“YES”

■ **To cancel the saving**

▶“NO”

Returns to the data acquisition screen without saving the i-motion.

2 Select a folder

NOTE

- An i-motion without title is listed as “movieXXX” (XXX are numbers).

Viewing i-motion details

You can check the details of the i-motion, including the title, file size and replay restrictions.

1 Data acquisition screen (p.152)▶“Property”

The i-motion info screen appears. Use to scroll the display up or down to check the details such as the remaining count of the replay, the playback period and the time limit.

Setting Whether to Play an i-motion Automatically

<i-motion auto-replay>

- You can set whether to play an i-motion automatically when:
  - Downloading i-motion from the site screen
  - Displaying the Screen memo of the data acquisition screen
- “i-motion auto-replay” setting is activated only for the standard type i-motion. The streaming type i-motion is played back automatically regardless of this setting.

  i-motion types→p.151

1 i-mode settings screen (p.148)▶“i-motion auto-replay”▶Select any item:

ON (default)·····Automatically plays the i-motion after downloading. Some i-motion is played while downloading.

OFF·····Displays the data acquisition screen without playing the i-motion automatically after downloading.

What is i-Channel?

i-channel is a news and information service distributed for i-mode subscribers with i-channel compatible handsets. A variety of information including news and weather forecasts is automatically delivered to the phone’s standby screen as subtitles, and subscribers can check a channel list of the information received by simply pressing the i-channel button (ch). (Displaying the channel list→p.153) i-Channel is a pay service you need to subscribe to (you need to subscribe to i-mode service).

There are two types of channels that you can enjoy with i-channel service: “Basic Channel” distributed by DOCOMO and “Optional Channel” by information service providers (IP). “Basic Channel” does not incur packet communications charges when information is updated. “Optional Channel” that users can choose and register at their own will incurs packet communications charges when information is updated. Detailed content will incur packet communications charges. During international roaming, both auto update and detailed content view incur packet communications charges.

For details on i-Channel, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

This service provides only Japanese channels.

Ticker on the standby screen

If you have subscribed to i-Channel, the information is displayed on the standby screen as a ticker when the information is received.

- “ ” flashes while i-Channel information is being delivered.
- You can set the ticker display with “i-Channel setting”. →p.154

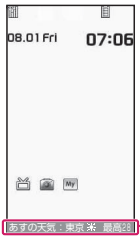

Ticker

NOTE

- Ticker is displayed even when i-motion or i-αppli standby screen is set on the standby screen. Ticker is also displayed when the Self mode is set.
- The ticker does not appear when the FOMA card (UIM) is not inserted, when Public mode (Driving mode) is set or in Power saver mode.

Viewing Sites from the Channel List

You can display channel list screen to access information sites of i-Channel.
You can display up to 15 channels including both “Basic channel” and “Optional channel” on the channel list.

1 On the standby screen▶ch

The “Channel list” screen appears.

■ From the main menu
▶ ▶“i-Channel”▶“i-Channel list”

Channel list

Function menu➡p.154

2 Select channel item

NOTE

- Information may be received when the channel list screen is displayed in some cases.

Continued on next page

NOTE

- When information is received, the ring tone will not sound, and the vibrator does not vibrate. Also, the illumination does not flash.

FUNC Channel list screen (p.153)

Add shortcut→p.94

Replay……Displays the channel list screen from the beginning.

Sound effect……Sets whether to play the sound effect of the channel list screen or not (ON/OFF).

Window

Open new window……"Using multi window"→p.140

Close window……Closes the displayed i-Channel window.

Change window……Switches windows when multiple websites are open.

NOTE

- The setting of "Sound effect" set on the channel list screen is applied to "Sound effect" of "i-mode settings".

Setting i-Channel

<i-Channel setting>

You can set whether i-Channel information is displayed on the standby screen as a ticker or not. You can also set the scroll speed, color/front size of the ticker on the standby screen.

- When set to "ON", ticker always appears on the standby screen. When set to "Receiving", ticker appears twice on the standby screen when news is received.

1 i▶"i-Channel"▶Select any item:

i-Channel list……Displays the channel list.

i-Channel setting

Ticker display setting (default: ON)……Sets whether the ticker of channel information is displayed on the standby screen (ON/Receiving/OFF).

Ticker speed setting (default: Normal)……Selects the scrolling speed of the ticker from "Normal/High/Low".

Ticker color setting*……Selects the ticker color ("White"/"Yellow"/"Blue"/"Red"/"Green").

* : Move the highlight to display the ticker color.

Ticker size setting (default: Standard)……Selects the ticker font size from "Small/Standard/Large".→p.93

Reset i-Channel……Resets the i-Channel settings to the default settings.

NOTE

- The i-Channel setting cannot be changed in Public mode (Driving mode), at the time of purchase (Reset i-Channel) or if the FOMA card (UIM) is not inserted, etc.

<Ticker display setting>

- The ticker display setting remains when you unsubscribe from i-Channel or when you unsubscribe from i-mode service before unsubscribing from i-Channel, but tickers will not be displayed automatically.
- Settings are retained for each mode of 2in1.

<Reset i-Channel>

- i-Channel tickers are not displayed just after resetting i-Channel. The ticker is turned on again automatically when the information is updated automatically or when ch is pressed to receive the latest information.

Mail

What is i-mode Mail? 156

■Composing i-mode mail/Deco-mail

Composing and Sending i-mode Mail ..... Compose message/Send 156
Composing Deco-mail ..... Deco-mail 158
Using Templates to Create Deco-mail ..... Template 159
Attaching Files ..... Attach file 160
Saving i-mode Mail to Send Later ..... Save i-mode mail 161
Storing Addresses in Mailing Lists 162

■Receiving and using i-mode mail

When You Receive i-mode Mail 162
Receiving i-mode Mail Selectively ..... Receive option 164
Checking for i-mode Mail ..... Check new messages 164
Replying to i-mode Mail ..... Reply to mail 165
Forwarding i-mode Mail to Other Recipients ..... Forward mail 165
Adding Mail Addresses to Phonebook 166
Downloading Attached Files Selectively 166
Checking and Saving the File Attached to i-mode Mail 166
Having the FOMA Terminal Read Out Mail 168

■Using mail boxes

Displaying Mail in the Inbox and Outbox ..... Inbox/Outbox 170

■Using mail records

Using Mail Records ..... Sent address/Received address 177

■Specifying mail settings

Setting up the FOMA Terminal Mail Functions ..... Mail Setting 178

■Using the message services

When You Receive a Message 179
Viewing Messages in the Message Box ..... MessageR/F 180

■Using Early Warning “Area Mail”

What is Early Warning “Area Mail”? 181
When You Receive Early Warning “Area Mail” ..... Receive Area Mail 181
Setting Early Warning “Area Mail” ..... Area Mail setting 182

■Using SMS

Composing and Sending SMS ..... Compose SMS/Send 182
When You Receive an SMS ..... Receive SMS 183
Checking for SMS ..... Check new SMS 184
Specifying the SMS center setting ..... SMS center selection 184

What is i-mode Mail?

Subscribing to i-mode enables you to send and receive e-mail messages via the Internet not only between i-mode terminals.
In addition to the message body, you can attach up to 10 files (pictures, videos, etc.) within the total of 2M bytes. As the FOMA terminal is compatible with Deco-mail, you can send expressive mail by changing font color, size, or background color of the message body or using Deco-mail pictographs.

- For details on i-mode mail, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

Composing and Sending i-mode Mail <Compose message/Send>

Use this procedure to compose and send a new i-mode mail message.

- You can change the size and color of the text used in the message body, assign actions to the text and insert images, lines and other decorative features. Deco-mail→p.158
- You can store up to 500 sent mails (i-mode mail and SMS) (the number of mails you can actually store may be reduced depending on the file size).

1 ▶“Compose message”



Mail menu



New mail

Function menu➡p.157

The “New mail” screen appears.

2 “To <No address>”▶Enter an address

Enter an address to select the mail address input method.

■ **Searching in the phonebook**
▶“Phonebook”▶Search the phonebook (p.73)▶Select a mail address in the phonebook detail screen

■ **Searching in the address list**
▶“Sent address” or “Received address”▶Select a mail address

■ **Using Mail member**
▶“Mail member”▶Select a mail member
For information on mail member→p.162

■ **Entering a mail address directly**
▶“Enter address”▶Enter a mail address
You can enter up to 50 single-byte alphabets, numbers or symbols for a mail address.
When you enter a mail address, the new mail address field is displayed below the filled field.
You can enter other mail addresses and send a same mail message to multiple recipients. You can enter up to 5 mail addresses.

3 “Sub ”▶Enter a subject

The “Subject” screen appears.
You can enter up to 100 double-byte or 200 single-byte characters.

4 “ <No message>”▶Enter the message body

You can enter up to 5,000 double-byte characters.
You can also insert a line feed (hard return) while editing the message. You can also insert a line feed by pressing [□] at the end of a sentence. “ ” is also counted as 1 double-byte character. Spaces are also counted in the same way as characters.
You can also compose Deco-mail.→p.158
You can use Template to compose and send the Deco-mail.→p.159

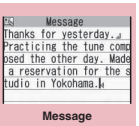

Message

Function menu➡pp.158, 306

5 (Send)

When you enter the message, number of bytes of the message appears on the upper right corner of the message.
An animation appears while sending a mail. After sending a mail, select “OK” to return to the mail menu screen. After sending a mail, select “OK” to return to the mail menu screen.

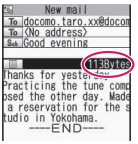

■ **To cancel the transmission**
▶[ch] (Quit) or [CLR] (1 second or longer)
Depending on the timing, the i-mode mail may be sent.

■ **When you are requested to send the mail again**
▶“YES”

● Entering Deco-mail pictographs

Deco-mail pictograph is an image which fulfills certain conditions including moving pictograph. On the SO706i, you can enter Deco-mail pictograph in the mail message easily because Deco-mail pictograph entry is arranged by the categories.

- You can download Deco-mail pictograph from websites, in addition to the pre-installed Deco-mail pictograph. →p.144
- Mails with Deco-mail pictographs are handled as Deco-mail.

■Entering Deco-mail pictograph

Press and hold ch (Pict/Sym) ("LONG Pictograph D" in the operation guidance area) for 1 second or longer on the Message screen to display the Pictograph D (Deco-mail pictograph) entry screen which is arranged by the categories. Use ⊕ to move the frame and press ■ (Select) to enter Deco-mail pictograph.

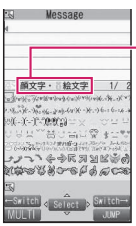

[Category]
顔文字・i 絵文字 (Face mark/i-pictograph)
装飾 (Decoration)
天気・季節 (Weather/Seasons)
生活 (Life)
食べ物 (Food)
キャラクター (Character)
文字・せりふ (Text/Phrase)
いろいろ (Miscellaneous)

[Other key operations]
✉ (←Switch): Displays the previous category
i (Switch→): Displays the next category
ch (JUMP): Displays the category list
CLR: Quits entering Deco-mail pictograph

● Composing i-mode mail from the phonebook screen

Locate and display an e-mail address stored in the phonebook and then press ■ (MAIL), then the new mail screen with the mail address entered to the address appears.

Searching the phonebook →p.73

● WEB mail

Selecting "WEB mail" on the Mail menu (p.156), you can access the WEB mail site and compose and send mail from Address B of 2in1*.

* : For details on 2in1, refer to "Mobile Phone User's Guide [2in1]".

NOTE

- If the storage capacity for sent mails is full when you send a mail, mails are deleted from the oldest one (protected mails and mails in the Secret folder are not deleted).

NOTE

- Some phones may be unable to receive a part of a subject.
- When you use pictographs in the subject or message body and send the mail to the devices of other mobile phone companies (au/SoftBank), the pictographs are automatically converted to similar ones on the other party's device. However, pictographs may not be displayed properly depending on the model or functions of the other party's mobile Phone. When the receiver does not have the corresponding pictographs, the pictographs are converted to characters or "〓".
- When the recipient address is a phone number and the number is preceded by the "184" or "186" prefix, a message appears asking whether to delete the prefix before sending the mail when you try to send i-mode mail.
- Depending on the signal quality, the recipient may not be able to display the text correctly. Also, the "Transmission failed" message may appear even after the message has been sent.
- When 2in1 is in B mode, you cannot compose and send i-mode mail.

FUNC New mail screen (p.156)

Send……Sends i-mode mail.

Save→p.161

Delete receiver……If there are 2 or more addresses entered, you can delete the address you select.

Change rcv. type……Changes the address type with an address highlighted.

> **To**……The recipient's address. The mail address entered in the "To" field is displayed in other recipient's terminals.
>
> **Cc**……Broadcasts address. The mail address entered in the Cc field are also displayed to the other recipients. Select this option to send copies of the message sent to the address in the To field to other addresses.
>
> **Bcc**……Broadcasts address. The mail address entered in the Bcc field are not displayed to the other recipients.

Template→p.159

Attach file……Attaches a file such as melody, image or i-motion to an i-mode mail.→p.160

Activate camera……Activates the camera function to shoot still images or movies.

> **Photo mode**→p.123
>
> **Movie mode**→p.126

Delete att. file • Del all att. files……Deletes one or all attached file(s).

Add header……Pastes a header into the i-mode mail message.

Continued on next page

Add signature……Pastes your signature into the i-mode mail message.

Erase message……Erases the message body in the current i-mode mail message.

Delete……Deletes the current i-mode mail message.

NOTE

<Change rcv. type>

- E-mail addresses entered in the "To" and "Cc" fields are usually displayed to the recipient. However, depending on the terminal device and mail software used by the recipient, the e-mail addresses may not be displayed.

FUNC Message screen (p.156)

- For the functions other than the following, refer to the function menu of the "Character entry (edit)" screen (p.306).

Decorate mail……"Decoration menus"→p.158

Select area……You can decorate, copy or cut the selected text.→p.308

Property……Displays the file name and size of an image inserted into the message when the cursor is at the left of the image.

Preview……Displays a preview of the message.

Composing Deco-mail

<Deco-mail>

The Deco-mail function allows you to make your text in the i-mode mail more visually appealing and exciting by changing the size and color of the text, the background color, assigning actions to text, and inserting images into your message.

- If you decorate the message, you can enter fewer characters than in the i-mode mail which is not decorated.
- When decorating text, you can enter text while decorating or you can decorate text after entering.

1 Message screen (p.156)▶▶Use to move the frame to select the decoration menu

The "Decoration menu" appears.→p.158

■ Decorating text while entering

Decorated text is entered after decoration menu is selected.

Decoration menu

■ Decorating the entered text

Select Edit from the decoration menu, specify the text you want to decorate and select decorating menu. The specified text is decorated.

2 Press (Exit) to end the decoration menu

NOTE

- If you forward received Deco-mail or quote Deco-mail in a reply, inserted images and decorations appear as quoted in the message.
- If you quote or forward Deco-mail that includes an image that cannot be sent as mail, the image is deleted.
- Some i-mode terminals receive mail that includes URL for viewing the Deco-mail. However, incompatible terminals may receive only the message with no URL.

Decoration menus

- When decoration applied by lines (ticker/swing/inserting line/alignment) is selected, a line feed is automatically inserted when the menu is selected.
- You can combine multiple decorations (example: changing the color and size of characters and making them blink).

Menu	Description
	Changes the character color. You can select the pallet of 25 colors or 256 colors. <25 colors> 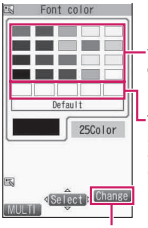 Use to move the frame and select the color to change. The latest 5 colors selected from the pallet of 256 colors are displayed at the bottom. The pallet of 25 colors and 256 colors switches each time you press (Change).
	Selects the character size from / / (Large/Standard/Small).
*1	Selects the image to insert from My picture folder.
/ /	Makes characters "Blink/Scroll from right to left (Ticker)/Scroll from right to left and left to right (Swing)".
	Begin / End *1 — "Starts" or "Ends" the decoration.
	Select / Reset *2 — "Sets" or "Releases" the decoration of specified area.

Menu	Description
	Selects the character alignment position from / / (Left/Center/Right).
*1	Inserts a line.
*1	Changes the background color of the message. Select the background color from the pallet in the same way as the character color.
Undo	Return the entered character or message decoration 1 step back.
Edit *1	Decorates the entered characters, or sets/releases the decoration.
Reset *2	Releases the decoration.
Reset All *1	Releases all the decoration.
	Displays the preview screen of the decoration.

*1: Cannot be selected in the decoration menu when Edit is selected.
*2: Available in the decoration menu only when Edit is selected.

NOTE

<Font color/Background color>
- Pictographs are also displayed in the specified color. To return them to their original color, select "Edit", specify the area to be changed and then select "Reset". However, you cannot specify the character color of Deco-mail pictographs.

<Font size>
- You cannot change the size of Deco-mail pictographs.

<Insert image>
- You can insert up to 20 files, up to 90K bytes, of JPEG or GIF images, or Deco-mail pictographs regardless of the number of bytes of the message body or the file size of the attached file (the maximum number depends on the file size).
- If you insert multiple copies of the same image, they are handled as 1 image. However, if you save or send an image once and then edit the image and insert it again, it is handled as a separate image.
- If you insert an animation, the animation stops once a set time has elapsed.

<Blink/Ticker/Swing>
- Blinking, ticker subtitling or swinging stops once a set time has elapsed.

<Edit decoration>
- Even if you delete the decorated text, the decoration data itself may be retained and the number of characters that can be entered may be reduced. You should remove the decorations and then delete the text. If you hold down CLR for 1 second or longer, all the characters and decoration data are deleted.

Using Templates to Create Deco-mail <Template>

Template is a form for Deco-mail to which the layout and the ornament are already set. By using a template, you can compose Deco-mail easily.
- You can download Template from sites. →p.146
- When you try to use Template in the following cases, a message appears asking whether to delete the edited content in the message:
  - When text is already entered in the mail message
  - When the header or signature is automatically inserted
  - When there is an attached file

1 ▶"Template"

The "Template list" screen appears.

■ **To search templates by i-mode**
▶"Search by i-mode"
▶"YES"

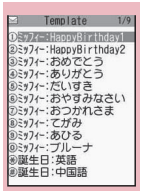

Template list

Function menu➡p.160

2 Select Template

The "Template preview" screen appears.
- During preview display, use to display other templates.

Template preview

Function menu➡p.160

3 (MAIL)▶Edit the message body

■ **To activate Template from the New mail screen (p.156)**
▶(FUNC)▶"Template"▶"Load template"▶Select Template

Saving a template

You can save Deco-mail you compose as Template.
- You can save up to 500 Templates.
- If the message has any attached file other than inserted images, the file is deleted.
- Template is saved in “Template” in the Mail menu.

1 Message-decorated New mail screen▶ (FUNC)▶“Template”▶“Save template”▶“YES”

NOTE
- The subject of the message being composed is used as Template title. If no subject is entered, “YYYY/MM/DD hh:mm” is used as the title (Y: year, M: month, D: day, h: hour, m: minute).

FUNC Template list screen (p.159)

Compose message……Uses Template to create Deco-mail.→p.159

Sort……Sorts Template in a selected criteria.

Edit title……Edits the title of Template. You can enter up to 10 double-byte or 20 single-byte characters.

Info……Displays Template size, save date and whether or not it includes images.

No. of messages……Displays the number of saved Template.

Delete……Selects the deleting method from “Delete this/Delete selected/Delete all”.
“About multiple-choice”→p.38

FUNC Template preview screen (p.159)

Compose message……Uses Template to create Deco-mail.→p.159

Edit……Edits Template.

Save insert image……Selects the image inserted to Template and saves it on the My picture folder. If the image can be set as the standby screen, you can select whether to set it as the standby screen or not after saving it.

NOTE
- Template is not available when 2in1 is in B mode.

<Edit>
- The title used when the template is saved as a separate file is “YYYY/MM/DD hh:mm” (Y: year, M: month, D: day, h: hour, m: minute).

Attaching Files <Attach file>

You can send i-mode mails with files attached.
- You can attach the following files:
  - Image (still image, image)
  - SWF Flash movie
  - movie, i-motion
  - Melody
  - PDF data
  - Documents in a microSD card
  - ToruCa, ToruCa (detail)
  - Phonebook entry
  - My profile data
  - Schedule or To Do list entry
  - Bookmark
  - Other files in the microSD card

1 New mail screen (p.156)▶ch (Att.)▶Select any item:

Image • i-motion • Melody • PDF……Selects a folder on the Phone or microSD, and then selects data to attach.
The number of selecting folders varies depending on the selected device (Phone/microSD).

Document……Select a document in a microSD card.

ToruCa……Selects a folder on the Phone or microSD, and then selects data to attach.
The number of selecting folders varies depending on the selected device (Phone/microSD).

Phonebook……Selects the phonebook on the Phone or microSD, and then searches for a phonebook entry (selects a folder for microSD) to select data to attach.
How to search the phonebook→p.73

My Profile……Attaches the My Profile data.

Schedule……Selects the Schedule or To Do list, and then selects data to attach.

Bookmark……Selects the bookmark on the Phone (i-mode/Full Browser) or microSD, and then selects data to attach.

Other……Selects other files in the microSD card.

■ **To send an image to a mova terminal as i-shot**

You can send a mail attached with an image to a mova terminal as i-shot.

When you send a mail to a mova terminal, you can attach only 1 JPEG image. If you attach a GIF image downloaded from sites, etc., the attached file is deleted and only the message reaches the recipient.

When you send mail to a mova terminal, unless the recipient has set the incoming message length, he or she can only receive a message up to 184 double-byte characters (369 bytes) long. If the recipient has set the incoming message length, the recipient can receive a message up to 2,000 double-byte characters including the i-shot URL (where the image is kept).

❷ Compose and send an i-mode mail

■ **To check the attached file**

▶Select a file

You cannot play the melody which exceeds 100K bytes or the SWF Flash movie.

■ **To delete the attached file**

▶Highlight the file▶✉ (FUNC)▶“Delete att. file”▶“YES”

To delete all the attached files, select “Del all att. files”.

For details of the subsequent procedure, see “Composing and Sending i-mode Mail” (p.156).

NOTE

- You can attach up to 10 files, up to 2M bytes regardless of the number of bytes of the message body or the file size of the inserted image (the maximum number depends on the file size). When attaching ToruCa, you can attach ToruCa up to 1K bytes and ToruCa (detail) up to 100K bytes for 1 case.
- You cannot attach a file which is forbidden to be sent as a mail attachment or output from your FOMA terminal.
- You can attach images or movies shot with the camera even if “File restriction” is set to “File restricted”.
- If you send an attached file which is not supported by the receiving terminal, the attached file may be deleted automatically at the i-mode Center. In this case, the “添付ファイル削除” (Attached file deleted) message is added to the mail message.
- If an image selected for “Image” is larger than 320 dots wide × 240 dots high or 240 dots wide × 320 dots high, “Attach image” appears and you can select “Attach mail” or “QVGA scale down”.
- Depending on the recipient’s mobile phone model, sent image may be displayed incorrectly or may not be displayed. A coarse image may also be displayed.

NOTE

- When you send an i-motion mail to the terminal which is not compatible with the i-motion mail (i-motion attached i-mode mail), the recipient receives an mail with the URL for viewing the i-motion and can view the i-motion by selecting the URL.
- When you send an i-motion mail, depending on the recipient’s mobile phone model, movies may not be received or displayed correctly, may be choppy or converted to continuous still images for viewing. When sending a mail to a terminal other than 2MB-compatible handsets, it is recommended to set “File size” to “500KB”, “Select size” to “QCIF (176 × 144)” and “Quality setting” to “Fine mode” when shooting movies. Playing movies→p.233
- If the recipient is not FOMA SO706i, melodies you send may not be played correctly.

Saving i-mode Mail to Send Later <Save i-mode mail>

You can save the composing mail on the FOMA terminal temporarily, then edit and send the saved mail afterwards.

Saving i-mode mail

- The Draft mailbox can hold up to 50 i-mode mail and SMS in total.
- You cannot compose i-mode mail when draft mails are full.

❶ New mail screen (p.156)▶✉ (FUNC)▶“Save”

The mail which is not edited cannot be saved.

Sending draft i-mode mail

❶ ✉▶“Draft”

The “Draft mail list” screen appears.

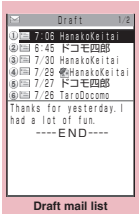

Draft mail list

Function menu➡p.162

❷ Select a mail▶Edit the address, subject or message body and then send the mail

Continued on next page

NOTE

- When 2in1 is in B mode, you cannot display the Draft mail list screen.

FUNC Draft mail list screen (p.161)

List setting……Selects a mail-list format from “Subject/Name/Address”.

iC transmission→p.259

Send Ir data→p.258

iC trans. all→p.260

Send all Ir data→p.258

Copy to microSD→p.248

No. of messages……Displays the number of mails in the Draft mailbox.

Store in Center→p.176

Delete……Selects the deleting method from “Delete this/Delete selected/Delete all”.
“About multiple-choice”→p.38

Storing Addresses in Mailing Lists

By storing addresses in the Mail member, you can easily enter multiple addresses only by selecting the Mail member.

- You can store up to 20 mail members with up to 5 e-mail addresses in each list.

1 MENU▶“OWN DATA”▶“Mail member”

The “Mail member list” screen appears.

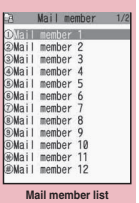

Mail member list

Function menu➡p.162

2 Select a mail member

The “Mail member detail” screen appears.



Mail member detail

Function menu➡p.162

3 Highlight “<Not stored>”▶ (Edit)▶Enter the mail address

To store more e-mail addresses, repeat step 3.

FUNC Mail member list screen (p.162)

Compose message……Composes an i-mode mail message with the members of the mail member pasted into the recipients field.

Edit member name……Edits the name of the mail member. You can enter up to 10 double-byte or 20 single-byte characters.

Reset member name……Resets the mail member name to the default name.

FUNC Mail member detail screen (p.162)

Edit address……Edits the e-mail address.

Look-up address……Enters the e-mail address by browsing the phonebook, sent address list or received address list.

Delete this • Delete all……Deletes one or all mail member(s).

When You Receive i-mode Mail

When the FOMA terminal is in a service area, i-mode mail or MessageR/F is automatically sent to the FOMA terminal from the i-mode Center.

- You can store up to 1,000 received mails (i-mode mail and SMS) (the number of mails you can actually store may be reduced depending on the file size).
- You can have the FOMA terminal read out the received mail message.→p.168

Displaying new messages automatically <Auto receive mail/Message>

[1] The “Receiving” screen appears when the reception of i-mode mail or Message starts and the “Received result” screen appears when the reception is finished.

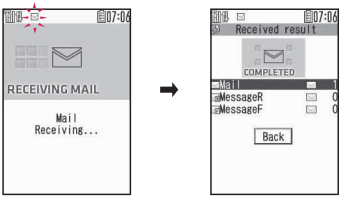

- “ ” flashes while receiving a mail and “ ” stops flashing and lights up when the reception is finished.
- “R” or “F” flashes while receiving a Message.

[2] The number of received mail or MessageR/F appears on the received result screen.
- The number of mails includes the number of SMS.
- When you select mail or Message on the received result screen, the Received mail list screen (pp.170, 171) or Message list screen (p.180) appears.
- If no operation is performed for about 15 seconds while the received result screen is displayed, the previous screen appears for mails and Detail screen appears for Message. The display duration may vary depending on the “Mail/Msg. ring time” setting.
- Press (Read) on the received result screen to have the FOMA terminal read out the mail message. →p.168
- The detail screen of MessageR/F is displayed automatically when the message is received on the standby screen.
- If no operation is performed for about 15 seconds while the Message detail screen is displayed, the standby screen reappears. However, if you use operations such as scrolling, the detail screen continues to be displayed.
- You can set the FOMA terminal to display the detail screen of MessageR/F automatically with “Auto-display setting”.

■ When you receive a mail exceeds 100K bytes

If the total amount of mail message, inserted image(s) and attached file(s) exceeds 100K bytes, the attached file(s) cannot be automatically received when receiving mail. In this case, receive manually later on.
You can download the attached file which exceeds 100K bytes manually from the i-mode Center. →p.166

NOTE
- If the storage capacity for received mails is full when you receive a mail, mails are deleted from oldest read mails (unread or protected mails and mails in the Secret folder are not deleted).
- When the FOMA terminal cannot receive any more mails (because it is full with unread and protected mails), (red)/ (red) appear. Read the unread mails or unprotect the unnecessary mails.
- When 2in1 is in A mode or B mode and a mail arrives only at address in unspecified mode, the “Mail Receiving...” screen appears, but the receiving results screen and “ ” do not appear. In addition, the mail ring tone does not sound.

NOTE
- If you receive i-mode mail from a terminal capable of specifying “To”, “Cc” and “Bcc” recipients, refer to the mail detail screen to see whether your own address is in the “To”, “Cc” or “Bcc” field. →pp.170, 172
- If you receive i-mode mail when the standby screen is not displayed and “Operation preferred” is set in “Receiving setting”, the FOMA terminal does not ring. When “Alarm preferred” is selected, the FOMA terminal plays the ring tone and displays the reception results screen.
- If you receive an i-shot service mail sent from a mova terminal, images arrive as attached files.

Viewing a new mail

1 On the standby screen▶■▶Select “ ”



■ To display the unread mail list

▶On the standby screen▶■▶Use to select “ ”
The “Unread mail list” screen appears.

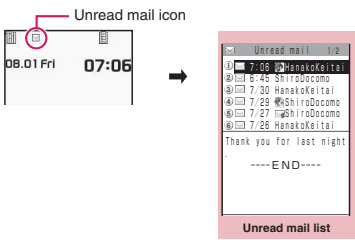

Function menu➡p.175

NOTE
- Characters that cannot be displayed appear as spaces.
- If the number of characters in the i-mode mail message body exceeds the maximum number of characters that can be received, either “/” or “//” is inserted at the end of the message and the remaining portion is automatically deleted.
- If the size of received i-mode mail exceeds the size set in “Limit Mail Size”, the pasted data is deleted at the i-mode Center and you cannot download it.
- If you receive decorated mail (HTML mail) from a PC, the decorations may not be displayed correctly.

Receiving i-mode Mail Selectively <Receive option>

You can check the subject of i-mode mail kept at the i-mode Center, then select the mail to receive or delete the mail at the i-mode Center without receiving.

- To use this function, set “Receive option setting” to “ON” beforehand. When set to “ON”, you cannot receive i-mode mail automatically.

When mail arrives

A message appears saying that mail is kept at the i-mode Center, and “ ” icon is displayed at the top of the screen. When you confirm the message and press any key, the message and icon disappear.

Receiving mail selectively

1 ▶“Receive option”

You can also access “Receive option” as follows:

- ▶“iMenu”▶“メニューリスト (Menu List)”▶“メール選択受信” (Receive option)

■ If “Receive option setting” is set to “OFF”

A message appears asking whether you want to enable mail receive options. Select “Receive option setting” to specify the “Receive option” setting. When you set the receive option to “ON”, the Mail menu screen reappears.

2 Select and set option for each item of i-mode mail

受信 (Accept): Accepts the selected mail.
削除 (Delete): Deletes the selected mail.
保留 (Hold): Leaves the selected mail at the i-mode Center.
Use “Check new message” to receive the mail.

■ To delete all mails

▶“削除” (Delete) at the bottom of the page▶“決定” (OK)

■ When there are multiple pages of mail

▶“前ページ” (Previous page) or “次ページ” (Next page)▶Move to other pages and select the mail to be accepted

When you view the 2nd page, your selections on the 1st page remain valid.

The meanings of the icons displayed after “サイズ (Size):XXXバイト (bytes)” are as follows:

: Image file attached
: Melody file attached
: i-motion attached
: ToruCa attached
: Other file attached

3 “受信／削除” (Receive/Delete)▶“決定” (OK)

The completion screen appears and mail reception begins.

■ To cancel selective reception

▶“キャンセル” (Cancel)

■ When there are multiple pages of mail

Selecting “受信/削除” (Receive/Delete) mid-way through the pages applies your options (hold, receive or delete) to the mail up to the selected page and mail on the remaining pages remains kept at the i-mode Center.

NOTE

- If you use “Check new messages”, all messages are received even if the receive option setting is set to “ON”. Deselect “Mail” in “Set check new messages” if you do not want to receive any mail.
- If you display the receive option screen, the “ ” icon disappears even when you do not receive or delete mail.
  The “ ” icon also disappears if you turn the FOMA terminal off or display the mail screen.
- When 2in1 is in B mode, you cannot launch the Receive option.

Checking for i-mode Mail <Check new messages>

The i-mode mail or Messages which the FOMA terminal could not receive are kept at the i-mode Center. You can receive the kept i-mode mail or Messages by checking for i-mode mail at the i-mode Center.

- i-mode mail messages are kept at the i-mode Center in the following cases:
  - When the FOMA terminal is turned off
  - When “ 圏外 ” is displayed
  - When the Inbox is full
  - When “Receive option setting” is set to “ON”
  - During a videophone call
  - When Self mode is set
  - When connecting to the FirstPass Center
- Use “Set check new messages” to specify which items are checked for.

1 [✉] (1 second or longer)

The check new messages screen appears.

You can also check new messages by following procedures.

- [i]▶"Check new messages"
- [✉]▶"Check new messages"

■ **To cancel the inquiry**

▶[ch] (Quit) or [CLR] (1 second or longer) during the inquiry

A message may be received depending on the timing of the cancellation.

2 Check for new i-mode mails, Message R/F▶"Back"

NOTE

- Depending on the signal reception status, you cannot check for new mails or the checking may be canceled.
- Even when there is i-mode mail kept at the i-mode Center, the "" icon may not be displayed if the mail arrived at the Center while the FOMA terminal is turned off or the " " is displayed.
- You can store up to 300 MessageR/F respectively for up to 72 hours at the i-mode Center. Once the maximum number of stored messages is reached, messages are deleted as a new message arrives, starting with the oldest message.

Replying to i-mode Mail <Reply to mail>

You can send a reply to an i-mode mail message. You can also quote the received i-mode mail in your reply.

1 Received mail list screen (p.171)/ Received mail detail screen (p.172)▶[i] (Reply)

■ **To reply by quoting the received message**

▶[✉] (FUNC)▶"Reply with quote"

You can select this option on the received mail detail screen.

A single quotation symbol (set to ">" by default) is displayed at the start of the quoted message in the reply.

To edit the quotation symbol→p.179

■ **To reply to the sender of mail with multiple addresses**

▶"Reply" or "Reply with quote"▶"To sender"

■ **To reply to the sender and all addresses of mail with multiple addresses**

▶"Reply" or "Reply with quote"▶"To all"

If replies cannot be sent to the sender, all the addresses, including the other broadcast addresses, are deleted from the displayed mail reply screen.

If the list of broadcast addresses includes some to which replies cannot be sent, these addresses to which replies cannot be sent are deleted from the displayed mail reply screen.

2 Edit the subject and message body▶[i] (Send)

After the reply has been sent the "" icon changes to "".

NOTE

- When 2in1 is in B mode or Dual mode, you cannot reply or reply with quote an i-mode mail sent to Address B.
- When data such as a melody or specification for activating i-αppli is pasted into the mail message, the pasted data is deleted.

Forwarding i-mode Mail to Other Recipients <Forward mail>

You can forward i-mode mail you have received to other people.

1 Received mail detail screen (pp.170, 172)▶[✉] (FUNC)▶"Forward"▶" To <No address>"▶Enter an address

You can edit the subject and message body before you send a mail.

2 [i] (Send)

After the reply has been sent the "" icon changes to "".

NOTE

- If the file which is prohibited to be attached to mails or output from the FOMA terminal is attached to or pasted, the file and its information are deleted.
- When data such as a melody or specification for activating i-αppli is pasted into the mail message, the pasted data is deleted.
- When there is any attached file whose downloading is not completed, the file is not attached.→p.166
- When 2in1 is in B mode, you cannot forward the mail.
- When 2in1 is in Dual mode, a forwarded mail to Address B is sent as a mail of Address A.

Adding Mail Addresses to Phonebook

You can add the e-mail address or phone number of the sender of received mail to your phonebook.

- For the received SMS message, the sender's phone number is stored in the Phonebook as a phone number.

<Example: To add the sender's e-mail address to the phonebook>

1 Received mail detail screen (pp.170, 172)▶✉ (FUNC)▶"Save address"

■ When there are multiple e-mail addresses to be added

▶On the e-mail address selection screen, select the e-mail address you want to add

■ To add an e-mail address or phone number included in the body

▶Mail detail screen▶Highlight an e-mail address or phone number you want to add▶✉ (FUNC)▶"Add to phonebook"

2 "YES"▶"Phone" or "UIM"

Adding information to the phonebook→p.70

Downloading Attached Files Selectively

When the size of a mail including the message body, inserted images and attached files exceeds 100K bytes, you cannot receive the attached files automatically when you receive the mail. In this case, you need to download the attached files, manually.

- You also have to download the files manually for the files that are not checked in "Prefer attachment".
- On the received mail detail screen, "" appears when the attached file is not downloaded and "" appears when the attached file is downloaded halfway.

1 Received mail detail screen (pp.170, 172)▶Select the attached file with "" or "" icon

Data downloading begins.

When data downloading is completed, the screen about data downloading completion appears.

■ To cancel downloading

▶ch (Quit)

The data downloaded halfway is saved. In this case, you can download the rest of the data repeating step 1.

2 After downloading the data, contents of the data is displayed according to the file type of the attached file

NOTE

- When there is any attached file whose downloading is not completed, the data retention period of the attached file is displayed on the "Received mail detail" screen(pp.170, 172). When all the attached files are downloaded, the retention period disappears from the screen. You cannot download the attached file whose retention period is expired.
- When the storage capacity of Inbox is exceeded when you receive an attached file, the received mails are deleted automatically according to the size of the attached file (many received mails may be deleted depending on the size of the attached file). Note that unread or protected received mails and received mails in Secret folder are not deleted. It is recommended to protect mails you want to keep.→p.175

Checking and Saving the File Attached to i-mode Mail

You can check and save the data attached to or pasted into received i-mode mail.

- You cannot save the attached file whose downloading has not completed. To save the data, download the data beforehand.→p.166

Saving melodies <Save melody>

You can save a melody () attached to or pasted into received i-mode mail to the FOMA terminal.

- If the sender is not FOMA SO706i, the received melodies may not be played correctly.

1 Received mail detail screen (pp.170, 172)▶Highlight the melody▶✉ (FUNC)▶"Save data"▶"YES"▶Select a folder

■ To stop the melody

▶ch, , 0 to 9, *, #

2 "YES"▶Select an item

■ When you do not set the melody to the ring tone, etc.

▶"NO"

NOTE

- If there are multiple pasted files, you may not be able to view the pasted files themselves.
- To prevent melodies from playing automatically when you open mail, set "Start attachment (auto)" to "OFF".

Saving images <Save image>

You can save images ( ) attached to or pasted into received i-mode mail.
Saving the inserted image→p.176

1 Received mail detail screen (pp.170, 172)▶Move the frame to the image▶ (FUNC)▶“Save data”▶“YES”▶Select a folder

■ **To change image display to file name display**
▶Select an image
To return to the image display, select the file name.

2 “YES”▶Select an item

■ **When you do not set the image to the standby screen, etc.**
▶“NO”

Saving i-motion <Save i-motion>

You can save the i-motion ( ) attached to received i-mode mail.

1 Received mail detail screen (pp.170, 172) ▶Highlight an i-motion▶ (FUNC)▶“Save data”▶“YES”▶Select a folder

Saving ToruCa <Save ToruCa>

You can save the ToruCa and ToruCa (detail) ( ) attached to received i-mode mail.

1 Received mail detail screen (pp.170, 172)▶Select a ToruCa
The ToruCa appears.

2 (Save)▶Select a folder
You can also save the data by selecting “Save data” from the function menu.

Saving PDF data and documents

Save PDF data (PDF) or documents ( ) attached to received i-mode mail.

1 Received mail detail screen (pp.170, 172)▶Select a file
A PDF data or document appears.
Viewing PDF data or documents→p.263

2 (FUNC)▶“Save”▶“YES”▶Select a folder
- Documents can only be saved to a microSD card.
- If there is no folder in the microSD card, a folder is created automatically and there is no need to select one.

■ **To return to the received mail detail screen**
▶CLR

Saving the tool data

You can save the tool data (phonebook, schedule or bookmark) ( ) attached to received i-mode mail.

<Example: To save the schedule>

1 Received mail detail screen (pp.170, 172)▶Select a file
The information of schedule appears.
You can also save the data by selecting “Save data” from the function menu.

2 (Save)

■ **Phonebook**
▶ (Save)▶“Phone” or “UIM”
Adding information to the phonebook→p.70

■ **Bookmark**
▶ (Select)▶Select the destination
For i-mode, “i-mode Browser” and “microSD” can be selected. For the Full Browser, “Full Browser” and “microSD” can be selected.

NOTE
- You cannot save the schedule on the microSD card.
- When you save the file which contains multiple data on the FOMA terminal, only the first data is saved (when you save the data on the microSD card, all the data is saved).

Saving other files

You can save other files ( ) attached to received i-mode mail.
- Other files are automatically saved to the “Other” folder on the microSD card. When the data is saved, the file name is changed.→p.244

1 Received mail detail screen (pp.170, 172)▶Highlight the other file▶ (FUNC)▶“Save data”▶“YES”

Having the FOMA Terminal Read Out Mail

- The voice may be heard by others while reading out, so move to an area where it will not disturb other people.
- The FOMA terminal reads out at the volume level set in “Phone” in “Ring volume”. When set to “Silent” or “Step”, messages are read out at the “Level 2” volume.
- A mail is not read out when:
  - “Read out received mail” under “Read out setting” is set to “OFF”
  - During a call or data communication (excluding packet communication)
  - In Manner mode and no equipment such as a flat plug earphone/microphone with switch (optional) is connected
  - Playing music with the Music Player

Having the FOMA terminal read out new mail

When the reception results screen appears with receiving the mail or when the checking result screen appears after performing “Check new messages”, the FOMA terminal can read out the mail message.

- When “Select language” is set to English, a mail is not read out.

<Example: When Check new messages is performed>

1 Press [i] (Read) while the checking result screen is displayed

If the sender’s name and e-mail address are stored in the phonebook, the message is read out after the voice notification “○○さんからのメール” (This is from ○○).

When reading out mails is completed, the FOMA terminal emits the “pipip” tone and ends the reading out screen.

■ When you receive multiple mail at the same time

The FOMA terminal reads out mails in reverse chronological order of reception date.

When you press [▷] during reading out, the FOMA terminal emits the beep sound before reading out the next mail. If there is no more mail, the FOMA terminal stops the reading out.

Having the FOMA terminal read out mail in the mail box

Messages written in English are spelled out in alphabetic reading.

1 Received mail detail screen (pp.170, 172)▶[✉] (FUNC)▶“Read out message”

■ To cancel reading out

▶[■] (Stop)

Press [■] (PLAY) again to start over reading out.

■ To end reading out

▶[i] (Exit)

NOTE

- While a message is being read out, an image appears in the upper half of the screen. When the sent address and image of the received mail are stored in the phonebook, the stored image appears.
- While a message is being read out, press [▲マナー] or [▼メモ] to scroll the message. Pressing any of other keys cancels reading out. However, when you press [5] or [2] for 1 second or longer to turn the display light or Shield view function ON or OFF, it does not end reading out.
- If you receive a call while a message is being read out, reading out is canceled and the ringing screen appears.
- If you receive a new mail or message while a message is being read out, the setting in “Receiving setting” is applied. When the specified alarm time is reached while a message is being read out, the setting in “Alarm setting” is applied.
- Mail-linked i-αppli mail cannot be read out on the result screen but on the detail screen.
- The FOMA terminal cannot read out SMS report.
- The FOMA terminal may not be able to read out mails received from PCs.

Reading out rules

The read out mail function generally follows the following rules when reading out received mail.

■Symbols and pictographs

Symbols and pictographs are not read out, except for certain symbols.

* The FOMA terminal may not correctly read out sentences that include symbols and pictographs.

■Numbers

The FOMA terminal reads out numbers up to 16 digits long.

Example: 1234 → “Sen nihyaku sanju yon”

■Amount of money

If a currency symbol (e.g. “￥” (single-byte or double-byte)) is placed at the beginning of a number up to 16 digits long, the FOMA terminal reads out the number as amount of money.

If commas (,) are used as a delimiting character in an input string, the FOMA will recognize the string as amount of money only if the commas are used every 3 digits.

Example: ￥12345
￥12,345 → “Ichiman nisen sanbyaku yonjuu goen”

■Phone number

If numbers are delimited by hyphens “-” or parentheses “()” as the phone number for the general phone, the mobile phone or the free dial phone, the FOMA terminal reads them out as phone numbers but not as sequences of digits. The FOMA terminal will also read numbers preceded by “Tel:” as phone numbers.

Example: Tel: 0120-102-... → Teru zeroichinizero ichizeroni ...

■Time

Numbers separated by a colon “:” are read out as time.* If the hour component is a 1- or 2-digit number and the minute component is a 2-digit number, the number is read out as time. If “AM” or “PM” is added before or after the number, it is read out before the number.

“Hour” : “Minute” (“Hour” = 0 to 29: “Minute” = 00 to 59) Example: 23:15 → “Nijusanji jugofun”
AM “Hour” : “Minute” or “Hour” : “Minute” AM (“Hour” = 0 to 12: “Minute” = 00 to 59) Example: AM 5:05 → “Gozen goji gofun”

* : The time entered in the format of “Hour” : “Minute” : “Second” (e.g. 23:15:10) is not read out.

■Date

Numbers separated by a slash (/) or a period (.) in the pattern for date are read out as date. If “M”, “T”, “S” or “H” (upper case) is inserted before a date, the corresponding (Japanese) era name (Meiji, Taisho, Showa, Heisei) is read out.

“Year”/“Month”/“Day” or “Year”.“Month”.“Day” (“Year” = 0 to 9999; “Month” = 1 to 12; “Day” = 1 to 31) Example: 2008/8/1 2008/8/01 2008.8.1 2008.8.01 → “Nisenhachinen hachigatsu tsuitachi”
“H” “Year”/“Month”/“Day” or “H” “Year”.“Month”.“Day” (“Year” = 0 to 99; “Month” = 1 to 12; “Day” = 1 to 31) Example: H20.8.1 → “Heisei nijunen hachigatsu tsuitachi”

- The above formats for numbers, amount of money, phone numbers, time and date are also used for double-byte characters.
- When amount of money, phone numbers, time or date are read out and the string read out is immediately preceded or followed by any of the characters listed below, the numbers will not be delimited correctly. If you want to have the FOMA terminal read out amount of money, phone numbers, time or date correctly, it is recommended to use a space as the delimiting character before and after the string.

“0 to 9”, “A to Z (upper case)”, “:”, “￥”, “/”, “.”, “-” (double-byte or single-byte)

■Symbol

The FOMA terminal can read out the following symbols when used with numbers.

$ (dollars)→doru	% (percent)→paasento
￥ (yen)→en	° (degrees)→do
℃ (degrees)→do	￥ (yen)→en
$ (dollars)→doru	％ (percent)→paasento
㎜ (mm)→miri	㎏ (kilograms)→kiro
㎝ (cm)→senchi	㍍ (meters)→meetoru
㌘ (grams)→guramu	㌧ (tons)→ton
㏃ (ares)→aaru	㏊ (hectares)→hekutaaru
㍑ (liters)→rittoru	㍗ (watts)→watto
㎈ (calories)→karorii	㌦ (dollars)→doru
㌣ (cents)→sento	㌫ (percent)→paasento
㍉ (millibars)→miribaaru	㌻ (pages)→peeji
㎜ (millimeters)→mirimeetoru	㎝ (centimeters)→senchimeetoru
㎞ (kilometers)→kiromeetoru	㎎ (milligrams)→miriguramu
㎏ (kilograms)→kiroguramu	㏄ (cc)→siisii
㎡ (square meters)→heihoumeetoru	

■Others

- Alphabetic characters are read out in alphabet reading, but may be read otherwise in certain combinations.
- Depending on the content of a sentence or description (especially geographic names or proper nouns), the FOMA terminal may not read out the sentence or may read it out incorrectly.
- The voice used to read out is different from natural voice. The pronunciation or accent may be difficult to understand in some cases.
- The FOMA terminal separates sentences to read out when there is punctuation marks (periods and commas), line feeds and spaces, except when a period (.) or comma (,) is preceded and/or followed by numbers. When there is no delimiting punctuation in the text, the sentences are separated automatically.

Depending on the sentences, it may take time before the FOMA terminal starts reading out. The FOMA terminal may read out incorrectly when there are kanji characters. To ensure that the content of the mail is read out correctly, it is

Continued on next page

recommended to ask people you frequently correspond to follow the following guidelines:

- Create message using katakana for nouns, especially and proper nouns such as geographic names and personal names.
- Create message using punctuation marks.

Displaying Mail in the Inbox and Outbox <Inbox/Outbox>

- The FOMA terminal can store up to 1,000 received i-mode mail and SMS in total and up to 500 sent i-mode mail and SMS in total.
- You can protect up to 500 received mails and 250 sent mails.
- The number of the messages the FOMA terminal can store or protect varies depending on the data size. When data with large file size is stored, the number decreases.

Reading i-mode mail messages

<Example: To read a received mail message>

1 ✉▶"Inbox"▶Select a folder▶Select a mail

The Secret folder is displayed in the folder list screen when the FOMA terminal is in Secret mode or Secret data only mode.

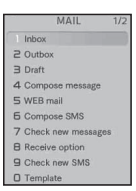

Mail menu

Inbox folder list

Function menu➡p.173

Received mail list

Function menu➡p.175

Received mail detail

Function menu➡p.176

Press ⊡ on the mail detail screen too view the previous or next mail.

NOTE

- On the received mail detail screen, you can have the FOMA terminal read out the mail message.➡p.168
- When 2in1 is in B mode, you cannot display the Outbox folder list screen.

Changing the mail character size or list display mode

Changing the mail character size

- Press ⊡ on the mail detail screen for 1 second or longer to change the character size.

NOTE

- When you change the display mode with the above keypad operation, the settings of "Mail" of "Character size" in "Font" and "Font size" also changes.

Changing the mail list screen display mode (1line+body/2 lines/1 line)

- You can switch among "1line + body", "2 lines" and "1 line" using the "Mail list disp." setting in "Mail Setting" in the Mail menu.

1line+body

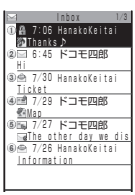

2 lines

1 line

Changing the mail list screen display mode (Name/Address/Subject)

- Press # on the mail detail screen for 1 second or longer to switch the "Subject" "Name" "Address".

<Example: "1 line+body">

Subject

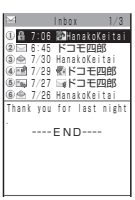

Name

Address

NOTE

- You can also change the display mode by selecting “List setting” from the function menu of the mail list screen, then selecting “Subject”, “Name”, or “Address”.
- The part of Subject/Name/Address may not be displayed properly.

Display light function

- When you open the FOMA terminal, press a key or send or receive an i-mode mail or SMS, the FOMA terminal’s display light is turned on for about 15 seconds (The time for which the backlight stays on varies depending on “Mail/Msg. ring time” setting). However, when an i-mode mail or SMS is displayed, the time for which the backlight stays on varies depending on the length of the message.
- The backlight does not turn on if “Lighting” is set to “OFF” in “Backlight”.

Guide to the mail folder list screens

Inbox folder list

Outbox folder list

Icon	Description
	Normal folder
	Mail-linked i-αppli folder
	Secret folder

: Contains unread mail

: Folder lock set

: Automatic sorting settings (p.174) set

Guide to the mail list screens

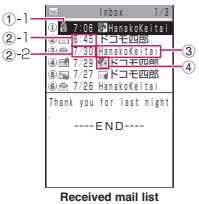

Received mail list

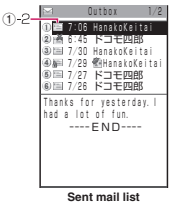

Sent mail list

①Mail status

①-1 Received mail

Icon	Description
	Unread mail
	Read mail
	Read and protected mail
	Forwarded mail
	Replied-to mail

: Protected

①-2 Sent mail

Icon	Description
	Mail to one recipient
	Mail to multiple recipients (broadcast mail)

: Protected

: Failed to send some mails

: Failed to send

②Message sent/received time and date

②-1 The time is displayed for mail sent/received today

②-2 The date is displayed for mail sent/received yesterday or earlier

③Sender/receiver, subject or information
When there is no subject, “No title” is displayed.

④Mail type, attached file information

Icon	Description
	SMS in the FOMA terminal
	SMS in the FOMA card (UIM)

Continued on next page

Icon	Description
	SMS with SMS report received
	Area Mail
	Mail to Address B of 2in1
	Time-adjusted mail
	Mail with an attached or pasted melody
	Mail with attached or inserted images
	Mail with an attached i-motion
	Mail with attached ToruCa or ToruCa (detail)
	PDF-attached mail
	Mail with attached Tool data (phonebook, schedule or bookmark)
	Document-attached mail
	Mail with attached Other files
	An i-αppli can be launched from the message body
	An i-αppli cannot be launched from the message body (the mail is moved to the Secret folder)
	Mails sent/received by a mail-linked i-αppli
	Mail with undownloaded attached file →p.166
	Mail with incomplete attached file →p.166
	Mail with undownloadable attached file
	Mail with multiple attached files or mixture of attached files and pasted files
	Mail with multiple pasted data (also displayed when the data is pasted along with i-αppli To)
	Mail with the FOMA card security function (you use the FOMA card (UIM) different from the one used when the mail is sent/received)

* : Displayed only when the 2in1 is in Dual mode

: Attached file is deleted (for ToruCa or Flash movie, also displayed when the attached file is deleted by scanning function)
All the files of multiple files are deleted

: A part of the file of multiple files is deleted

NOTE

- When you view i-mode mail with an attached image in the received mail detail screen, the screen switches between image display and file name display each time you move the frame to the image and press ■ (Select). On the sent mail detail screen, selecting file name display displays images. Press CLR or ☎ to display file names.
- When 2in1 is in A mode or B mode, a mail arrived at the unused address is not displayed.

Guide to the mail detail screens

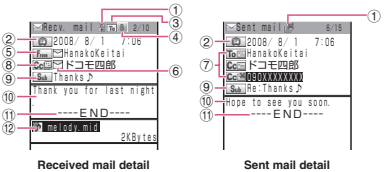

Received mail detail　　Sent mail detail

①Mail status
Refer to ① of "Guide to the mail list" screen (p.171)

②Mail sent/received time and date

③Recipient type (Received mail)

Icon	Description
To Cc Bcc	The recipient type addressed by the sender→p.157

④Mail address information of the 2in1 setting

Icon	Description
	Mail to Address B of 2in1

* : Displayed only when the 2in1 is in Dual mode

⑤Sender (Received mail)

Icon	Description
From	The name or e-mail address of the sender

: Cannot reply-to

⑥Icon stored in the phonebook
When the mail address or phone number is stored in the phonebook, the icon stored in the phonebook is displayed.

⑦Recipient and recipient type (Sent mail)

Icon	Description
	The name, e-mail address of the recipient and the recipient type→p.157

: Failed to send

⑧Recipient and recipient type of broadcast mail (Received mail)
Up to 4 recipients can be displayed.

Icon	Description
	The names, e-mail addresses of the recipients except yourself and the recipient type for broadcast mail→p.157

: Cannot reply-to

⑨Subject
If there is no subject, “No title” is displayed.
Displays “ ” at the beginning for received SMS (displays the “ ” when the SMS is on the FOMA card (UIM))
When an SMS report has been received, “ ” is also displayed.
Displays “Area Mail” when an Area Mail has been received

⑩Message body

⑪Displayed at the end of the message body

⑫Attached file information
The file name and file size are also displayed.

Icon	Description
	Invalid inserted image

* Other than the above icons, the same icons as the list screen may appear in some cases. Refer to “④Mail type, attached file information” in p.171.

NOTE

- In the following cases, the e-mail address is displayed instead of “Name”, even when the phone number or e-mail address is stored in the phonebook:
  - When “Restrict dialing” is set and the phone number is not designated in the “Restrict dialing” setting
  - When the FOMA terminal is in Secret data only mode and the phone number or e-mail address is not stored as secret data
  - When the FOMA terminal is not in Secret or Secret data only mode and the phone number or e-mail address is stored as secret data
  - When 2in1 is set to A mode and the phonebook is set to B mode, or the mode is set to B mode and the phonebook is set to A mode.

FUNC Mail folder list screen (pp.170, 171)

Add folder……Adds a folder and set the Auto-sort for the new folder. Also, set whether to add the same folder to the Inbox/Outbox.
You can add up to 22 folders.
“Setting Auto-sort”→p.174

Auto-sort→p.174

Edit folder name……Edits the folder name of the added folder. You can enter up to 10 double-byte or 20 single-byte characters.

Folder lock……Sets/Releases the folder lock.→p.112

Sort folder……Selects the position to move to and rearranges the folder.

No. of messages……Displays the number of messages, unread messages and protected messages in all the folders.

Open folder……Displays list of the mails in a folder.

Add shortcut*→p.94

iC trans. all→p.260

Send all Ir data→p.258

CopyAll to microSD→p.248

Delete folder……Deletes a folder.

Delete read*……Deletes all the read mails.

Delete all……Deletes all mails.

* : This function is available only for the Inbox folder list screen.

NOTE

- You cannot delete, sort or rename the folders (Inbox and Outbox) that are already installed on the FOMA terminal at the time of purchase. You cannot use the Auto-sort function with these folders either.

<Add folder>
- When you download a mail-linked i-αppli, an i-αppli mail folder is automatically created (up to 5).

<Sort folder>
- You cannot run Sort folder when only one folder is added.

<No. of messages>
- You cannot check the number of the following i-mode mail or SMS messages.
  - Messages in the Secret folder
  - Messages set not to be displayed in the 2in1 setting
- You cannot check the MessageR/F.

<iC trans. all> <Send all Ir data> <CopyAll to microSD>
- The MessageR/F are not included.

Continued on next page

NOTE

<Delete folder>

- You cannot delete an i-αppli mail folder if there is a corresponding mail-linked i-αppli. You can delete an i-αppli mail folder if there is no corresponding software, but the folder created in the Inbox folder screen or Outbox folder screen is also deleted.
- If you delete a folder that is specified in the "Auto-sort" settings, the automatic sorting setting for that folder is also canceled.

<Delete read> <Delete all>

- The following i-mode mail or SMS messages will not be deleted.
  - Protected messages
  - Messages in the Secret folder
- For Delete all, hidden mail messages are also deleted by 2in1 setting.
- The MessageR/F are not deleted.

● Setting Auto-sort

You can sort mail messages into the specified folders by the set criteria such as mail address or subject.

1 Mail folder list screen (pp.170, 171)▶Highlight the destination folder▶✉ (FUNC)▶"Auto-sort"▶Set any item from the following

When the sorting is already set, the setting is displayed. Press ✉ (FUNC) again.

■ When Original lock is set to the Phonebook or mail members

When checking auto-sort-set folder conditions, the group name appears as "Group" even after changed, and the mail member name appears as "Mail member" even after changed.

Address sort……Sets the e-mail address.

- **Look-up address**……Sets the e-mail address by browsing the phonebook or address list.
- **Look-up group**……Sets the group of the phonebook.
- **Look-up member**……Sets the mail member.
- **Enter address**……Sets a mail addresses by entering it.

Subject sort……Sets the subject.

Reply impossible (Send impossible)……Sets an e-mail address to which you cannot reply or you could not send a mail as an Auto-sort criteria.

Sort all……This can only be set for mail-linked i-αppli folders. Sorts all mails into a mail-linked i-αppli folder.

Edit addr/subj……Edits a previously specified e-mail address or mail subject.

List setting……Selects a mail-list format from "Name/Address".

Release……Releases the Auto-sort criteria by selecting "Release this/Release selected/Release all". "About multiple-choice"→p.38

NOTE

- If received or sent mail meets multiple sort criteria, the priority of the Auto-sort settings is assigned as follows.
  ①Sort all ②Subject sort
  ③Reply/Send impossible
  ④Mail address/Phone number
  ⑤Mail member ⑥Phonebook group
- Mail received or sent before the Auto-sort settings are not sorted.
- The mails sent as broadcast message are searched for the sorting criteria in the order of address entered.
- When using 2in1 and setting Auto-sort, select the criteria from "Look-up address (Phonebook,/Sent address/Received address list)", "Look-up member", "Direct input", "Subject sort", "Reply impossible", "Sort all", or "Edit addr/subj".
- The Area Mail is not included for "Address sort", "Subject sort" and "Reply impossible".

<Address sort>

- You can set a total of 700 addresses for automatic sorting (more than one setting is available for 1 folder).

<Address sort (Look-up group)>

- When you set address sort to the mail address stored as secret data and receive mail from the address, the mail is stored in the "Inbox" folder when the FOMA terminal is not in Secret or Secret data only mode and stored in the sorting destination folder when the FOMA terminal is in Secret or Secret data only mode.

<Address sort (Enter address)>

- Ensure that the e-mail address domain (the part that follows the @ symbol) is entered correctly. However, if the address format is "[phone number]@docomo.ne.jp", simply enter the phone number.

<Subject sort>

- If the subject meets the sort criteria for multiple folders, the mail is sorted into the folder closest to the Inbox or Outbox folder.
- You cannot use this function to sort i-mode mail that has no subject entered and is displayed as "No title" even if you set "No title" as a sort criteria.
- You cannot use this option to sort SMS.

<Reply impossible>

- You cannot use this option to sort SMS reports.
- "Reply impossible" can only be set for 1 folder of Inbox.

<Send impossible>

- "Send impossible" can only be set for 1 folder of Inbox.

NOTE

<Sort all>

- You cannot use this option to sort SMS reports or SMS received directly to the FOMA card (UIM).
- "Sort all" can only be set for 1 i-αppli mail folder for received and sent i-αppli mail respectively.

FUNC Mail list screen (pp.170, 171)

Reply[*1] →p.165

Edit[*2]……Edits the recipient, subject or message body of the sent mail. Press [i] (Send) to send the mail.

Move……Selects from "Move this/Move selected/Move all" and moves the mail to the other folder you select.
"About multiple-choice" →p.38

Search mail……Searches for mail using a specified criteria.

Search sender[*1]**/Search receiver**[*2]……Searches for mail by specifying the mail address from the phonebook mail address list or entering the mail address manually.

Search subject……Enters a subject to search.

Display all……Returns the search and sort displays or displays that use filter functions to their original display settings (all Chronological ↑).

Sort……Sorts the mail in a selected criteria.

Filter……Displays only the mails which meet the selected criteria.

Color coding……Sets the color coding for the mail from "Default (black)/Red/Blue". You can also change the color by pressing [*] (1 second or longer) in the mail list screen.

List setting……Selects a mail-list format from "Subject/Name/Address".

Read all[*1]……Marks all the unread mail in the folder as read.

Protect[*1]……Selects the protecting method from "Protect this/Protect selected/Protect all"[*3].
"About multiple-choice" →p.38

Unprotect[*1]……Selects the unprotecting method from "Unprotect this/Unprotect selected/Unprotect all".
"About multiple-choice" →p.38

Protect ON/OFF[*2]……Protects or unprotects mail.

Unprotect all[*2]……Unprotects all protected mail.

iC transmission →p.259

Send Ir data →p.258

Copy to microSD →p.248

UIM operation……"Moving or copying SMS from the mail screen" →p.255

Mail info[*1]……Displays the information such as sender of the mail.

No. of messages……Displays the total number of mails in the folder.

Store in Center →p.176

Delete……Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice" →p.38

- For received mails, you can delete only read mails or SMS reports at once by selecting "Delete read/Delete all SMS-R".

Keep in secret⇔Put out[*4]……Select the setting from "Keep this/keep selected/keep all".
"About multiple-choice" →p.38
"Preventing Others from Viewing Data" →p.104

*1: Available only with the received mail list screen.
*2: Available only with the sent mail list screen.
*3: Only available in the Secret folder.
*4: Available only in Secret or Secret data only mode. Unread mail or Area Mail cannot be saved to the Secret folder.

FUNC Unread mail list screen (p.163)

Reply →p.165

List setting……Selects a mail-list format from "Subject/Name/Address".

Protect ON/OFF……Protects or unprotects mail.

Delete this……Deletes one mail.

NOTE

<Search mail>

- You can also search the results of a search.
- You cannot use this function to search i-mode mail that has no subject entered and is displayed as "No title" even if you set "No title" as a criteria for searching by subject.

<Sort> <Filter>

- The sort and filter function can be used together. For example, to view only the unread mail in the received mail list screen in chronological order, select "Chronological ↓ " in the sort menu and then "Unread" in the Filter menu.
- When you exit from the mail list screen, the sort display and filter function are canceled.

<Read all>

- If you view mail with the filter function and then select "Read all", only the currently displayed mail is marked as read.

Continued on next page

NOTE

<Protect ON/OFF>
- A mail that is not displayed by the setting of 2in1 is not targeted for setting of “Protect all” nor “Unprotect all” even if either of them is selected.

<Keep in secret> <Put out>
- A mail that is not displayed by the setting of 2in1 is not targeted for setting of “Keep all” nor “Put out all” even if either of them is selected.

Storing mails at the Data Security Center

You can store i-mode mails and SMS stored in the FOMA terminal at the Data Security Center.
- Data Security Service is a pay service you need to apply for. If you have not subscribed to the service and try to connect to the Data Security Center, the notification screen appears.

1 Mail list screen (pp.161, 170)▶ (FUNC)▶“Store in Center”▶Use to select (checkbox)▶ (Finish)
You can select up to 10 mails.

2 Enter your security code▶“YES”
The FOMA terminal connects to the Data Security Center to start saving the mails.

3 (Finish)

NOTE
- You cannot store SMS stored in the FOMA card (UIM) at the Data Security Center.
- When saving mails with attached files, the attached files are deleted.
- When saving received mails in which images prohibited to be output from the FOMA terminal are pasted into, these images are deleted.
- The setting of “Color coding” is not saved.

■To restore the mail

The mail data stored at the Data Security Center can be stored on the FOMA terminal from the site of the Data Security Center. For details on how to use, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

FUNC Mail detail screen (pp.170, 172)

Reply[*1*2]→p.165

Reply with quote[*1*2]→p.165

Forward[*1*2]→p.165

Edit[*3]……Edits the recipient, subject or message body of the sent mail. Press (Send) to send the mail.

Resend[*3]……Resends the message.

Protect ON/OFF……Protects or unprotects mail.

Move……Selects the destination folder to move a mail message to the folder.

Copy……Copies the message body, subject or e-mail address. The copied text can be pasted into the Character entry screens, etc.→p.308

Save address • Add to phonebook→p.166

Save data……“Checking and Saving the File Attached to i-mode Mail”→p.166

Save insert image……Selects the image inserted to the Deco-mail and saves it on the My picture folder. After saving the image, you can specify whether to set it as the standby screen.

Add shortcut→p.94

Save template……Saves an i-mode mail as a template.→p.160

Refer dictionary……Starts the dictionary.→p.296

Property……Selects an image to display the file name and size of an image inserted into the message in Deco-mail.

Read out message[*1]→p.168

Disp. SMS report[*3]……Displays the SMS report for an SMS.

iC transmission→p.259

Send Ir data→p.258

Copy to microSD→p.248

UIM operation……“Moving or copying SMS from the mail screen”→p.255

Message scroll (default: 1 line)……Selects the number of scrolling lines in a screen from “1 line/3 lines/5 lines”.

Font size (default: Standard)……Selects the font size from “Small/Standard/Large/X-large”.→p.93

Delete att. file • Del all att. files……Deletes one or all attached file(s).

Delete……Deletes a mail.

Keep in secret⇔Put out[*4]……“Preventing Others from Viewing Data”→p.104

*1: Available only with the received mail detail screen.
*2: Not available when 2in1 is in B mode.
*3: Available only with the sent mail detail screen.
*4: Available only in Secret or Secret data only mode.

NOTE

<Delete att. file> <Del all att. files>
- You cannot delete the data pasted into the message body or undownloadable file ( ).

Using Mail Records

<Sent address/Received address>

When you send or receive mail, the mail addresses are recorded in the Sent address list or Received address list. You can send mail by selecting an address from these address lists.

- Up to 30 i-mode mail address or SMS phone number entries can be stored in the respective Sent address and Received address lists. However, up to 60 received addresses can be stored if you use 2in1.
- When the Mail box lock is set to Inbox or Outbox, the mail address is not recorded in the address list.

Checking an address list

<Example: To open the received address screen>

1 On the standby screen▶ (1 second or longer)

The “Received address screen (list)” appears.

Received address (list)

Function menu➡p.177

■ **To display the sent address screen (list)**

(1 second or longer)

■ **Displayed icon on the Address screen (list)**

/ : i-mode mail transmission successful/failed

/ : SMS transmission successful/failed

2 Select a sender

The “Received address screen (detail)” appears.

Received address (detail)

Function menu➡p.177

■ **Displayed icon on the Address screen (detail)**

/ : i-mode mail transmission successful/failed

/ : SMS transmission successful/failed

3 Check the details

NOTE

- Turning the FOMA terminal off or deleting sent or received mail messages does not delete the entries in the address lists. You should delete the record entries themselves to prevent others from viewing them.

NOTE

- When 2in1 is set to A mode or B mode, up to 30 message histories arrived at or sent from the used address are displayed. However, if set to B mode, the Sent address list screen cannot be displayed.
- When 2in1 mode is set to Dual mode, “ B ” icon appears in Number B/Address B received records.

FUNC Address screen (list/detail) (p.177)

Add to phonebook……Adds the mail address to the phonebook. →p.166

Look-up phonebook……Displays the detail screen of the phonebook in which the mail address is stored.

Add shortcut →p.94

Compose message*1……Composes an i-mode mail with the mail address set as the recipient.

Dialing……Uses the Phone To/AV Phone To function to make a voice/videophone call for the phone number in the phonebook entry that contains the e-mail address. →p.147

Received calls*2……Switches to the Received calls record screen. →p.53

Redial*3……Switches to the Redial screen. →p.53

Big font⇔Standard font*4……Switches the font size between “Big font/Standard font”. →p.93

Delete……Selects the deleting method from “Delete this/Delete selected/Delete all”. “About multiple-choice” →p.38

*1: When an SMS is selected, this option changes to “Compose SMS”, which composes an SMS with the phone number pasted in as the recipient. “Composing and Sending SMS” →p.182

*2: This function is available only for the received address screens (list/detail).

*3: This function is available only for the sent address screens (list/detail). If the Sent address screen appears from Dialed calls, “Dialed calls” appears.

*4: Only available on the Address screen (list).

Setting up the FOMA Terminal Mail Functions <Mail Setting>

❶ ▶"Mail settings"

The "Mail Setting" screen appears.

Mail Setting

❷ Select any item:

Message scroll (default: 1 line)·····Selects the number of lines that are scrolled when you press [▲] on the mail detail screen, from "1 line/3 lines/5 lines".

Font size (default: Standard)·····Selects the font size displayed on the mail detail screen from "Small/Standard/Large/X-large". →p.93

Mail list disp. (default: 1line+body)·····Sets the number of lines and item to be displayed on the mail list screen. Select the lines to display from "2 lines/1 line/1 line+body" and the format from "Subject/Name/Address".

Message display·····Sets the position from where to start displaying the message body.

- **From header** (default)·····Displays the message from the headers onwards (date and time received/sent).
- **From message**·····Displays the message from the message body onwards.

Start attachment (auto) (default: ON)·····Sets whether to automatically play the attached or pasted melody when opening an i-mode mail.

Header/Signature →p.179

Mail box lock →p.112

Receiving setting·····Sets whether to give display priority to the receiving and received result screen if a mail, MessageR/F is received while you are using the FOMA terminal.

- **Alarm preferred** (default)·····Displays the receiving and received result screen.
- **Operation preferred**·····Gives priority to the screen being used rather than displaying the receiving and received result screen.

Receive option setting (default: OFF)·····Sets whether to receive mails selectively (ON) or automatically(OFF).

Prefer attachment (default: all selected)·····Selects the attached file type to receive at the time you receive the mail from "Image/i-motion/Melody/PDF/ToruCa/Tool data (Phonebook, Schedule, Bookmark)/Other (including documents)". "About multiple-choice" →p.38

Read out setting

- **Select voice** (default: Female 1)·····Sets the type of voice used for reading out mail.
- **Read out received mail** (default: ON)·····Sets whether to allow the mail to be read out or not when it is received.

SMS settings

- **SMS report request** (detail: OFF)·····Sets whether to request an SMS report after sending an SMS.
- **SMS validity period** (default: 3 days)·····Selects the storage period of the sent SMS kept at the SMS center from "None/1 day/2 days/3 days". When set to "None", SMS messages are not stored at the SMS center.
- **SMS input character** (default: Japanese (70char.))·····Sets the SMS body character input method. When set to Japanese, you can enter up to 70 characters regardless of double-byte or single-byte. When set to English, you can enter up to 160 single-byte alphanumeric characters.

Area Mail setting →p.182

Check settings·····Allows you to check the settings specified in "Mail Setting".

Reset·····Resets the settings specified in "Mail Setting" to the default settings.

NOTE

- When 2in1 is in B mode, you cannot select "Mail Setting".

<Font size> <Mail list disp.>

- When set to "X-large", the "Mail list disp." setting is automatically set to "2 lines". When "Mail list disp." is set to "1 line" or "1 line+body" while Font size is set to "X-large", automatically switch it setting to "Large".

<Receiving setting>

- When you are receiving/sending a voice call, during a voice call or using functions such as an i-αppli or the camera, the receiving and received result screen may not appear when you receive mail or Message R/F even when set to "Alarm preferred".
- When 2in1 is in A mode and a mail arrives only at the mail address of B mode, the receiving screen appears, but the received result screen does not appear even when set to "Alarm preferred".

NOTE

<Receive option setting>

- This option applies to i-mode mail only. SMS, MessageR/F are received automatically regardless of this setting.

<Prefer attachment>

- To check the contents of the file, you have to download the file manually afterwards. →p.166
- When "Other" is deselected, documents are not received.

Editing Headers, Signatures and Quotation Marks

By storing your header or signature, you can automatically paste it into an i-mode message. You can also edit the quotation marks when you reply to received mail by quoting the original message.

1 Mail Setting screen (p.178)▶"Header/ Signature"

2 "Edit header" or "Edit signature"▶ ■ (Edit)

■ **To edit the quotation marks**

▶"Edit Quotation marks"

3 Enter the header or signature▶ (Finish)

You can enter up to 5,000 double-byte or 10,000 single-byte characters for the header and signature.

You can decorate the header or signature. →p.158

■ **To enter the quotation marks**

▶Enter the quotation marks

You can enter up to 10 double-byte or 20 single-byte characters.

■ **When you add the header or signature automatically**

▶"Insert setting"▶Select the checkbox of "Header" and/or "Signature"▶ (Finish)

Deselect the checkbox when you do not add it automatically.

NOTE

- Even if you select the "Insert setting" checkbox, the header or signature is not pasted into i-mode mail composed using Template. Insertion is also unavailable when sending i-αppli mail with mail-linked i-αppli.

Specifying which items are checked for in Center inquiries

<Set check new messages>

You can specify which items are checked for "Check new messages" whether to check for "Mail" (i-mode mail), "MessageR" and/or "MessageF".

1 MENU▶"SETTINGS"▶"i-mode common set"▶"Set check new messages"

2 Use to select ☐ (checkbox)▶ (Finish)

A deselected checkbox (☐) denotes that the FOMA terminal will not check for that item.

When You Receive a Message

When the FOMA terminal is in a service area, MessageR/F are automatically sent to the FOMA terminal from the i-mode Center. →p.162

- You can store up to 100 MessageR/F respectively on the FOMA terminal (the number of messages you can actually store may be reduced depending on the file size).
- Perform "Check new messages" when you receive the messages kept in i-mode center. →p.164

NOTE

- If the storage capacity for messages is full when you receive a message, read messages are deleted from the oldest one (unread or protected messages are not deleted).
- When the FOMA terminal cannot receive any more messages (because it is full with unread and protected messages), R (red)/ F (red) appears (R F (red), R F (R: red), R F (F: red) may appear to display the 2 conditions simultaneously). Read the unread messages or unprotect the unnecessary messages.
- When the i-mode center keeps Messages, R/ F appears. Perform "Check new messages" to receive messages. When the messages kept at the i-mode center are full, R (red)/ F (red) appears.
- Received MessageR/F are not automatically displayed when displaying other than the standby screen, an i-αppli is running, Public mode (Driving mode) is set, Dial lock is set, or when Original lock is set to "i-mode" or "Mail disp."

How to view the MessageR/F screens

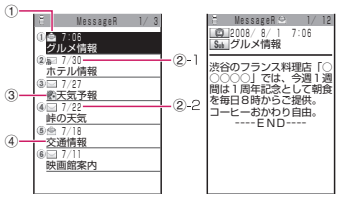

List (2-line display) Detail

①Message status

Icon	Description
	Unread Message
	Read Message
	Read and protected Message

: Protected

②Message received time and date

②-1 The time is displayed for Message received today

②-2 The date is displayed for Message received yesterday or earlier

③Attached file information

<List screen>

Icon	Description
	Message with an attached or pasted melody
	Message with an attached image
	Message with an attached ToruCa
	Message with multiple attached or pasted data

: One or more data is invalid

: Invalid data

: Deleted by the scanning function

<Detail screen>

Icon	Description
	Pasted melody

: Invalid data

④Subject

Viewing Messages in the Message Box <MessageR/F>

- When a MessageR/F from the i-mode Center arrives on the FOMA terminal, the "R" or "F" icon appears at the top of the screen.

❶ ▶"Inbox"▶"MessageR" or "MessageF"

The "Message list" screen appears.

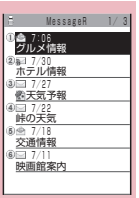

Message list

Function menu➡p.180

❷ Select a message

The "Message detail" screen appears.

To display the next or previous message in the message detail screen, press .

In the message detail screen, press CLR to return to the message list screen.

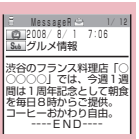

Message detail

Function menu➡p.181

FUNC Message list screen (p.180)

Display all……The original display (all Chronological ↑) is reverted from a sorted or filtered display.

Sort……Sorts the messages in a selected criteria.

Filter……Displays only the messages which meet the selected criteria.

Protect ON/OFF……Protects or unprotects MessageR/F.

Unprotect all……Unprotects all the protected MessageR/F.

No. of messages……Displays the number of stored MessageR/F, unread messages and protected messages.

Delete……Selects the deleting method from "Delete this/ Delete selected/Delete read/Delete all".

"About multiple-choice"→p.38

- When selecting "Delete read", you can delete only the read messages at once.

Mail

NOTE

<Sort> <Filter>

- The sort display and filter function can be used together. For example, if you want to display the unread messages in chronological order, select "Chronological ↓ " in the sort menu, then select "Unread" in the filter menu.
- When you exit from the MessageR/F list screen, the sort and filter are canceled.

FUNC Message detail screen (p.180)

Add to phonebook·····Adds the phone number and e-mail address displayed on MessageR/F to the phonebook. →p.70

Save melody·····Saves a melody attached to MessageR/F.

Save image·····Saves an image attached to or inserted in MessageR/F.

Save ToruCa·····Saves a ToruCa attached to MessageR/F.

Protect ON/OFF·····Protects or unprotects MessageR/F.

Delete·····Deletes the MessageR/F.

NOTE

<Save melody>

- Some saved melodies may not play correctly.

What is Early Warning "Area Mail"?

A service that you can receive the urgent earthquake news flash, etc. delivered by the Meteorological Agency.

- Area Mail is available without subscribing to i-mode.
- To receive Area Mail, the receiving setting is required. →p.182
  In the following situations, area mails are not received regardless of this setting.
  - During international roaming
  - Omakase Lock is set
  - When Self mode is set
- Area Mails may not be received when:
  - During a videophone call
  - Data communication in progress

When You Receive Early Warning "Area Mail"

<Receive Area Mail>

When the FOMA terminal is in a service area, the Area Mail is automatically received.

- When you receive Area Mail, the "[icon]" icon appears at the top of the screen.
- Received Area Mail is stored in Inbox.
- You can store up to 100 Area Mails on the FOMA terminal.
- The Area Mail ring tone sounds in the pattern and color set in "Mail receiving" under "Illumination set". →p.92

NOTE

- The set alarm does not sound with the notification screen open.
- The vibration pattern links to the beep tone/ring tone regardless of the "Vibrator" setting.
- If the storage capacity for Area Mails is full when you receive an Area Mail, Area Mails are deleted from the older read mails first and then the older unread ones in order.

● When you receive the Area Mail for the earthquake early warning

When you receive the Area Mail, you are notified on the description screen with beep and vibration.
The screen returns to the previous screen, when you press any of ■, CLR and ☎ .

- The beep tone volume is fixed to "Level 6" and cannot be adjusted. However, you can set the ring time for beep or the beep ON/OFF with setting for "Beep setting" in the "Area Mail setting".
  The ring tone for the Area Mail sounds when the beep sound setting is set to "OFF".
- When Manner mode is set, the beep is determined by "Manner mode set".
- Vibrator pattern links to the beep while in beep sounding, and follows the "Mail" setting under "Vibrator" while in incoming mail sounding. If an earthquake early warning is received, the vibrator always works regardless of the manner mode setting.

● When you receive the Area Mail other than the earthquake early warning

When you receive the Area Mail, you are notified on the "Receive Area Mail" or the "Description Screen", then notifies them with a beep for the Area Mail (the screen is specified by the provider).
The "Receive Area Mail" screen returns to the previous screen, if no operation is performed or you press any key. The description screen returns to the previous screen, when you press any key ■, CLR and ☎ .

Continued on next page

NOTE

- The volume of the ring tone is set to the same volume set at “Mail” of “Ring volume”.
- The description screen or “Receive Area Mail” screen may not appear when you receive the Area Mail during using functions such as an i-αppli or the camera. If an earthquake early warning is received, the vibrator always works regardless of the manner mode setting.

Setting Early Warning “Area Mail” <Area Mail setting>

Make the settings for receiving Area Mail.

1 Mail Setting screen (p.178)▶“Area Mail setting”

“Area Mail setting” screen appears.

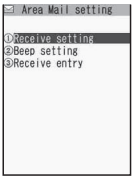

Area Mail setting

2 Select any item:

Receive setting (default: No)……Sets whether to receive the Area Mail.

- The confirmation message asking whether to use Area Mail appears before setting, read the given notes carefully and select “YES”/“NO”.

Beep setting

Beep setting (default: ON)……Turns the beep ON/OFF.

Beep time (default: 10 seconds)……Sets the beep time between 01 and 30 seconds.

Receive entry……Registers “Area Mail name” (any name) and “Message ID” (provided by the service provider) of information you want to receive except early warning. Select “<Not recorded>” at the “Receive entry” screen, and enter “Area Mail name” and “Message ID” after you enter your security code. The urgent news flash is sent regardless of the settings of Receive entry.

Composing and Sending SMS <Compose SMS/Send>

- Your SMS address is your “subscriber mobile phone number”.
- This service allows you to exchange text messages with subscribers to overseas carriers other than DOCOMO. For information on the supported country and the supported overseas carriers, refer to the DOCOMO website.

1 ✉▶“Compose SMS”

The “New SMS” screen appears.

New SMS
Function menu➡p.183

2 “To <No address>”▶Enter an address

Select the mail address input method to enter the address. Sets the e-mail address by browsing the phonebook, received address list or entering text directly→p.156

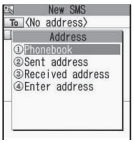

■ If the recipient is using an overseas carrier other than DOCOMO

▶Enter + (0 (1 second or longer)), the country code, the other party’s mobile phone number

If the mobile phone number begins with zero (0), omit the zero.

You can also send SMS by entering “010”, the country code, the other party’s mobile phone number in this order. (To reply to received SMS from overseas, enter “010”.)

3 “ ”▶Enter the message body

The numbers and types of characters that can be entered are as specified in the “SMS input character” settings. When set to “Japanese”, you can enter up to 70 characters regardless of double-byte or single-byte. When set to “English”, you can enter up to 160 single-byte alphanumeric characters and symbols.

Spaces are also counted in the same way as characters.

4 (Send)

An animation is displayed while the SMS is being sent.

Editing sent and unsent SMS→pp.175, 176

NOTE

- You cannot send SMS to the entered address when:
  - The address contains the characters other than numbers, "✱" or "#"
  - The address contains "+" except for the head of the address
  - The address contains a space
- Depending on the signal quality, types of characters or device of the other party, the recipient may not be able to display the text correctly.
- Even when "Caller ID Notification" is set to "OFF", your caller ID is provided to the recipient during SMS transmission.
- The line feed symbol is counted as 2 characters in Japanese input mode and as 1 character in English input mode.
- You cannot send an SMS from the additional number of multi number. Set the multi number setting to the basic number.
- When 2in1 is in B mode, you cannot compose and send SMS.

FUNC New SMS screen (p.182)

Send……Sends an SMS.

Preview……Allows you to check the SMS recipient and message before sending it.

Save→p.161

SMS report req.* (detail: OFF)……Sets whether to request an SMS report after sending an SMS.

SMS valid. per. *(default: 3 days)……Selects the storage period of the sent SMS kept at the SMS center from "None/1 day/2 days/3 days". When set to "None", the SMS is resent and deleted when set time elapses.

SMS input char.*……Sets the SMS body character input method.

- **Japanese** (default)……You can enter up to 70 characters regardless of double-byte or single-byte.
- **English**……You can enter up to 160 single-byte alphanumeric characters.

Erase message……Only the message body is deleted.

Delete……Deletes the SMS being edited.

* : This function menu is only valid for the current SMS. Set in the "Mail Setting" (p.178) if you want to keep the setting to all SMS.

● SMS reports <SMS report req.>

SMS reports are the mail to notify you that the other party has received SMS. You can check SMS reports in the Inbox or in the "Disp. SMS report" in the function menu of the sent SMS detail screen. SMS reports are indicated by "SMS report" in the subject line.

When You Receive an SMS <Receive SMS>

When the FOMA terminal is in a service area, SMS is automatically sent to the FOMA terminal from the SMS Center.

- The operations when SMS is received is same as the operations when i-mode mail is received. Also, the storage capacity and the operation when the storage capacity for received mails becomes full are the same as i-mode mail.→p.162
- SMS in the received mail list screen, the beginning of the message is displayed as the subject.

NOTE

- If you receive Short Mail sent from a mova terminal, etc., the sender's phone number is displayed. If the caller ID is not provided, the reason is displayed.
- If a received SMS includes double-byte characters that are not listed in the Kuten code list, those characters are displayed as blanks (spaces). For the Kuten code list, refer to the PDF format "Kuten Code List" in the provided CD-ROM.
- Pressing ■ (Select) while the sender of the current SMS is highlighted allows you to make a voice or videophone call to that number, compose SMS or select an image for videophone (Phone To, AV Phone To, and Mail To function).→p.147

Forwarding and replying to received SMS

You can forward SMS and send a reply to the sender.→p.165

- You cannot enter a subject.

NOTE

- You cannot reply to an SMS when the sender has withheld his or her caller ID (User unset) or is sending from a pay phone (Payphone) or a phone that does not support caller ID notification (Not supported).
- Even if you reply to or forward an SMS on the FOMA card (UIM), the "" remains on the received mail list screen and received mail detail screen and the ""/"" icon does not appear.
- When 2in1 is in B mode or Dual mode, you cannot reply an SMS sent to Number B.

Checking for SMS <Check new SMS>

The SMS that are not received by the FOMA terminal are kept at the SMS Center. You can receive the kept SMS by checking new SMS.

- SMS are kept in the following cases:
  - When the FOMA terminal is turned off
  - When " " is displayed
  - When the Inbox is full
  - When Self mode is set

1 ▶**"Check new SMS"**

"SMS Checking" appears while you check for new SMS. Press (Select) after checking for new SMS. The automatic receiving starts if the center keeps any SMS.

The automatic receiving may not start immediately after inquiry.

Specifying the SMS center setting <SMS center selection>

- Refer to the "SMS settings" (p.178) in the "Mail Setting" screen about the SMS settings other than the SMS center.

* There is normally no need to change this setting.

Use this setting to specify whether the FOMA terminal uses the DOCOMO SMS Center or another provider's SMS center for SMS.

1 MENU▶**"SETTINGS"▶"i-mode common set"▶"SMS center selection"▶ Select any item:**

DoCoMo……Uses the DOCOMO SMS Center.

User setting……Enters SMS center's address, then selects from "International/Unknown" to use the other SMS center.

Reset……Deletes the "User setting" data and resets the setting to "DoCoMo".

NOTE

- If the entered SMS Center address includes "#" or "✳", you cannot select "International".

i-αppli

What is an i-αppli? 186
Downloading i-αppli from Sites 186
Launching an i-αppli 187
Pre-installed Software 190
Launching i-αppli Automatically 197
Launching an i-αppli from a Site or Mail ..... i-αppli To 197
Setting the i-αppli Standby Screen ..... Set i-αppli stand-by 198
Organizing i-αppli 199

What is an i-αppli?

Downloading an i-αppli from a site enables you to use i-mode terminal in more convenient. Some i-αppli allow you to store data from the i-αppli directly into the phonebook or your schedule, and some i-αppli linked to Data box allow you to save or download images. As the FOMA terminal supports mega i-αppli with large capacity, you can enjoy high-resolution 3D games or long roll-playing games.

- For details on i-αppli, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

Downloading i-αppli from Sites

You can download software from an i-mode site and run the software on your FOMA terminal.

- Up to 1M-byte i-αppli can be downloaded. Up to 200 i-αppli can be stored. The maximum number of software applications that can be saved varies depending on the data size. The number includes partly downloaded i-αppli.

1 Select software

Press ■ (Select) when the “Completed” message appears. For the software that is immediately launched from the site, the software starts up without displaying a completion message.

■ To cancel data downloading in progress

▶During downloading▶■ (Cancel) or CLR

■ When the software setting screen appears

▶Set the software▶“YES”

Software settings→p.188

2 “YES”

The downloaded software is launched.

■ Not to launch the software

▶“NO”

● Downloading mail-linked i-αppli

- When you download a mail-linked i-αppli, an i-αppli mail folder is automatically created in the inbox or Outbox folder. The folder names are assigned by the downloaded mail-linked i-αppli and cannot be changed. The FOMA terminal can store up to 5 mail-linked i-αppli.
- Mail sent and received using a mail-linked i-αppli is automatically sorted into the dedicated folders created when that mail-linked i-αppli was downloaded. You can also manually sort received mails.
- You cannot download mail-linked i-αppli in the following cases:
  - If there are already 5 dedicated folders for mail-linked i-αppli
  - If there is already saved a mail-linked i-αppli that uses the same folder
  - Mail box lock is set for Inbox/Outbox

NOTE

- To restore deleted software that had been pre-installed, download from “PlayNow” by SO.
  “iMenu”▶“メニューリスト” (Menu List)▶“ケータイ電話メーカー ” (Mobile phone manufacturer)▶“PlayNow by SO”
  QR code on the right is also available to select the displayed URL and access the site.
- Some i-αppli software automatically opens communication after being downloaded. You can set your terminal not to automatically communicate by using “Network set” in “Software setting”.
- If you download an i-αppli that uses the terminal data (the stored information or mobile phone/FOMA Card (UIM) serial number information) or an i-αppli DX, a message appears notifying that the i-αppli uses the terminal data. When you select “YES”, your terminal information is sent to the IP (information service provider) via the internet and may be disclosed to the third party as a result.
- Depending on the data storage capacity of the IC card, you may not be able to download Osaifu-Keitai i-αppli even when there is capacity available in the software storage area. Follow the confirmation screen, delete the displayed software and download again. You may not be able to delete the software depending on the software type you are going to download. Depending on the software, the software itself is deleted after the software is launched and data in the IC card is deleted.
- When 2in1 is set to B mode, the activation confirmation screen may not appear after download, depending on the i-αppli.

Viewing i-αppli information during downloading

<Disp. Software info>

You can specify whether the software information is displayed for checking when downloading software.

1 MENU▶“SETTINGS”▶“i-αppli settings”▶“Disp. Software info”▶“Display”

■ Not to check information

▶“Not display”

Launching an i-αppli

Launching an i-αppli

1 [i] (1 second or longer)

The “Software list” screen appears at the bottom of the screen.

■ **To search i-αppli by i-mode**

▶“Search by i-mode”▶“YES”

Software list

Function menu➡p.188

Illustrations Dick Bruna
© copyright Mercis bv, 1953-2008
www.miffy.com

2 Select software

When you launch the software, “ ” or “ ” appears at the bottom of the screen.

Pre-installed software→p.190

Quitting an i-αppli

1 [CLR] (1 second or longer) or [ ]▶“YES”

NOTE

- If you receive a voice or videophone call while i-αppli is active, the software is paused. The software screen reappears when the call ends. However, the setting of “V-phone while packet” applies to videophone during i-αppli communication.
- The i-αppli mail used with mail-linked i-αppli may not be displayed correctly.
- You can save the data you use (i-αppli data (microSD)) to the microSD card depending on the software.
- Some i-αppli allows you to use the Phone To/AV Phone To or Web To function from the i-αppli. However, you cannot use these functions from the i-αppli standby screen. (You can use these functions when an i-αppli is activated.)
- Images used in i-αppli* and data you enter may be automatically sent to the server via the Internet.

  *: Images used in i-αppli refers to images shot by the camera activated by a camera-linked i-αppli, images retrieved using an i-αppli Infrared data exchange or iC communication function, images downloaded by an i-αppli from an i-mode site or website or images loaded by an i-αppli from Data box.

NOTE

- If the memory used to store trace information is full, the oldest entry is overwritten.
- Some i-αppli software may not make sounds.
- If the camera is activated from an i-αppli, the shot images are saved and used as part of the i-αppli.
- You can use an i-αppli to activate the Bar code reader and read JAN codes and QR codes. The read data are used by the software.
- With some software applications, the IP (information service provider) may access software stored on your FOMA terminal and directly disable the use of the software. In this case, you can no longer launch, upgrade or set the software as the standby screen. You can only delete the software or view the software information. To use the software again, you have to contact the IP and have them send an instruction to re-enable the software.
- With some software applications, the IP (information service provider) may send data to software stored on your FOMA terminal.
- When an IP (information service provider) sends a disable or re-enable instruction or other data to software stored on your FOMA terminal, the “ ” icon flashes. No communication charges are applied in this case.
- When 2in1 is set to B mode or Dual mode, you may not be able to launch, operate or set an i-αppli depending on the i-αppli.
- You cannot launch an i-αppli:
  - While an image is edited
  - While an i-motion or Chaku-Uta Full® is downloaded
- Some software is displayed on fullscreen, and the remaining battery icon or the signal strength icon may not be displayed.

● Motion tracking

The FOMA terminal supports “motion tracking” that operates i-αppli using camera recognition technology (by waving or shaking the FOMA terminal).

- The function may not be available in the following cases:
  - The camera lens is dirty
  - Clothes and background colors are similar
  - Background changes quickly, e.g. when in transit
  - The location is dark or too bright

■ Warning

- Motion tracking i-αppli is a game that you play by tilting or shaking the FOMA terminal. Shaking the terminal may hit a person, thing, etc. and result in an accident or damage. When playing the game, firmly grip the FOMA terminal, do not shake it too much, and confirm safety around.

FUNC Software list screen (p.187)/ IC card content screen (p.202)

Software setting……Specifies the software settings. Press [i] (Finish) to finish the setting operation.

Stand-by display→p.198

Network set……Sets whether to communicate when an i-αppli is launched. When “Check every start” is selected, you can select whether to communicate every time you launch an i-αppli.

Stand-by net……Sets whether the i-αppli set as standby screen communicates.

Icon info……Specifies whether the use of unread mail or message icon information is permitted when an i-αppli is running.

Change mld./img.……Specifies whether to allow the ring tones for phone calls, mail and messages, images such as those used in the standby screen or when mail is sent or received or menu icon to be changed when an i-αppli DX is running. When “Check every change” is set, you can select whether to change the ring tone or image every time an i-αppli attempt to change such item automatically.

See P.book/hist.……Sets whether to allow the application to look up the phonebook, the latest Dialed and Received calls records, and the latest unread mail automatically when an i-αppli DX is launched.

Program guide……Sets whether to use the software as program guide i-αppli to activate by pressing [ch] (EPG) on the 1Seg screen (p.210). Downloaded program guide i-αppli can also be set. “Gガイド番組表リモコン” (G-GUIDE EPG Remote Control) is set at the time of purchase.

Power saver……Sets whether to set the Power saver during i-αppli is activated. Sets whether to pause the i-αppli when the FOMA terminal is folded during i-αppli is activated, or sets whether to pause the i-αppli following the setting of “Backlight ” in “Settings” when the FOMA terminal is not operated during i-αppli is activated.

Software info→p.189

Upgrade→p.199

List setting……Selects the list display style for i-αppli from “Title image+icon/Icon/Software name”.

Set i-αppli To→p.197

Auto-start time→p.197

Add shortcut icon→p.94

Move to microSD……Moves one i-αppli or i-αppli data in the FOMA terminal to the microSD card.
“Displaying the i-αppli data in the microSD card”→p.199

Memory info……Displays the amount of the stored i-αppli.

Delete……Selects the deleting method from “Delete this/ Delete selected/Delete all”.
“About multiple-choice”→p.38

NOTE

<Software setting (Network set)>
- If you specify “OFF”, note that you may not be able to receive timely information.

<Software setting (Icon info)>
- If you set this function to “ON”, as information about whether there are unread messages and mail, icons for in/out of service area, the battery level and the status of manner mode are sent to the IP (information service provider) via the Internet in the same way as your mobile phone/FOMA Card (UIM) serial number information, there is a possibility that the information may be disclosed to the third party.
- If this function is set to “OFF”, some i-αppli that require the icon information may not work.

<Software setting (Program guide key set)>
- When “No” is selected, a message appears asking whether to release the setting. When “Yes” is selected, the pre-installed “Gガイド番組表リモコン” (G-GUIDE EPG Remote Control) is set.
- This can only be set for 1Seg-linked i-αppli DX whose “Program guide key “i-αppli To”” in “Software info” is set to “ON”.

<Software setting (Power saver)>
- When “After folded” is set to “ON”, the software is paused when the FOMA terminal is folded. Note that you may not be able to receive timely information.
- When “Timer” is set to “ON”, the software is paused following the setting of “Backlight ” in “Settings” when FOMA terminal is not operated during i-αppli is activated. Note that you may not be able to receive timely information.

<Move to microSD>
- When i-αppli on the FOMA terminal (Phone) is moved to the microSD card, the data of i-αppli on the FOMA terminal (Phone) is also moved to the microSD card.
- Mail-linked i-αppli folder in the FOMA terminal is not deleted even if the mail-linked i-αppli is moved to the microSD card.
- Use “Software info” (p.189) to check whether the i-αppli can be saved to the microSD card.

NOTE

<Delete>

- When deleting a mail-linked i-αppli, a message appears asking if you also delete the corresponding dedicated folder for the mail-linked i-αppli. Select "NO" to delete only the software and select "YES" to delete the folder at the same time. However, even when you select "YES", you cannot delete the folder dedicated for the mail-linked i-αppli if it is being used, if the folder is locked, or if the folder contains a protected mail.
- For some Osaifu-Keitai i-αppli, the software itself is deleted after the data in the IC card is deleted. After selecting "Delete this" for this kind of software, launch and delete the data in the IC card following the confirmation screen, then delete the software itself. Since "Delete selected" or "Delete all" cannot launch the software, delete the data before deleting the software.
- Some Osaifu-Keitai i-αppli cannot be deleted.
- When 2in1 is in B mode, some i-αppli cannot be deleted.

Adjusting the volume of i-αppli

<i-αppli vol.>

You can adjust the volume of i-αppli.

1 MENU▶"SETTINGS"▶"i-αppli settings"▶"i-αppli vol."

2 Adjust the volume

NOTE

- You can set the volume depending on the software. However, when "i-αppli vol." is set to "Silent", there is no sound regardless of the volume setting of the software.
- When Manner mode is set, the volume of the i-αppli is set to the Manner mode setting.

Checking the information of i-αppli

1 Software list screen (p.187)▶ (FUNC)▶"Software info"▶Check the software information

NOTE

- The software name displayed by this function cannot be changed.
- On the software list screen, software types and settings can be checked by the following icons.

: i-αppli DX
: Mail-linked i-αppli
: "Auto-start time" is set
: "Set i-αppli stand-by" is set
: "Auto-start time" and "Set i-αppli stand-by" are set
: "i-αppli To setting" can be set
: "Set i-αppli stand-by" can be set
: "i-αppli To setting" and "Set i-αppli stand-by" can be set
: Software downloaded from an SSL-compatible page
: Software whose data can be saved to the microSD card→p.200
: Partially downloaded i-αppli
: Osaifu-Keitai i-αppli→p.202

- When you select partly downloaded i-αppli ( ) or i-αppli only with management information ( ) on the "Software list" screen (p.187) or "IC card content" screen (p.202), you can download the rest of the data.

Checking the security error history

When an i-αppli or i-αppli DX attempts to launch a function that is not permitted to run, a security error occurs and the details of the error are recorded in the security error history.

1 MENU▶"I-APPLI"▶"i-αppli action info"▶"Security error history"

The "Security error history" screen appears.



Security error history

Function menu➡p.190

2 Check the details of the security errors

FUNC **Security error history screen (p.189)**

Copy info……Copies the security error details.

Delete info……Deletes the security error details.

Launching software from active software

Activate software from the currently active software. Downloading software that launches the specified software enables you to launch that software without returning to the software list screen.

- If the software to be launched is not specified, specify the software.
- If the software to be launched is specified but is not stored on the FOMA terminal, you must download the software beforehand.

1 Select an item for launching software

Pre-installed Software

10 applications are pre-installed at the time of purchase.

- Note that looking at the display for extended periods of time may cause eye strain.

モバイルGoogleマップ (Google Maps For Mobile)

Enjoy interactive maps, aerial photos and rich shopping store/service information. Zoom in/out and scrolling are available. You can look up detailed maps or local information on 16 or more countries over the world including United States and Europe.

- For first time use, agree with the terms of service.

1 Software list screen (p.187)▶“モバイルGoogleマップ” (Google Maps For Mobile)

■ **To exit**
▶✉ (メニュー (Menu))▶“終了” (Exit)

■ **To see how to play**
▶✉ (メニュー (Menu))▶“ヘルプ” (Help)

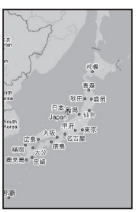

©2008 Google - 地図データ
©2008 Geocentre Consulting, NFGIS, Zenrin, Europa Technologie

デコ絵つくーる® (deco-e maker®)

Clip text, face, etc. out of pictures taken with Camera and edit them to use for Deco-mail.

1 Software list screen (p.187)▶“デコ絵つくーる” (deco-e maker)

■ **To exit**
▶✉ (終了 (Exit))▶“はい” (YES)

■ **To mute**
▶“サウンド：オン” (Sound: On)

■ **To see how to play**
▶“ヘルプ” (Help)

はじめてのおつかい for SO (First Errand for SO)

Shopping game to buy requested things. Cooperate with fellows to enjoy shopping.

1 Software list screen (p.187)▶“はじめてのおつかい” (First errand)

■ **To exit**
▶i (終了 (Exit))

■ **To mute**
▶✉ (♪○)

■ **To see how to play**
▶“ヘルプ” (Help)

Illustrations Dick Bruna
© copyright Mercis bv, 1953-2008
www.miffy.com

地図アプリ (Map i-αppli)

“地図アプリ” (Map i-αppli) is i-αppli that you can get the confirmation at current location with Open i-area, get a map you specify or find the route.
You can use transfer guide easily through voice input.

- Packet communications charges apply for use. For this software, use of Pake-houdai/Pake-houdai Full is recommended.
- To restore this software after deletion, download from “ｉエリアー周辺情報ー” (i-area -Surrounding area information-).
- Not available if 2in1 is in the B mode.
- We are not liable for accuracy and immediacy of the map and route information.
- During driving, a person other than the driver must operate the software.
- This i-αppli supports motion tracking.

● Basic service and additional service

This software provides the basic service and additional service.

Basic service: Service provided by DOCOMO free of charge

Additional service: Pay service provided by ZENRIN DataCom

The additional services other than traffic information are available free of charge for 90 days from the first launch of this software.

To use additional services thereafter, membership registration (charged) for “ゼンリン地図＋ナビ” (ZENRIN Map + Navi) provided by ZENRIN DataCom is necessary.

If you register membership during the use of this software, you need not download the software again. This software can be used as it is.

Menu	Description	91st day and later
地図 (Map)	• Use Open i-area or enter a keyword, address, phone number, etc. to view the current location map. • Enter an address by voice to view a map easily.	Free
	• Check the map of the location stored in this software or the server, or the location you previously searched. • Save location to the server to share with a PC.	Charged
周辺検索 (Local Search)	• Check information including shops (iD accepted shop as well) or facilities around the current or specified location, and acquire coupons from gourmet information. • Check information on parking lots nearby. • Check surrounding area information simply through voice input.	Free
ルート案内 (Route)	• Search for routes by all transportation means including vehicle, walk and car. • Search for routes to home you marked.	Charged
乗換案内 (Transfer)	• Check transfer and timetable of the train. • Check the train route by map and set the alarm before departure. • Start the transfer guidance simply through voice input.	Charged
エクストラ (Extra)	• Change the map mode to the normal map, moving map by waving the FOMA terminal, 3D map, train-route-emphasized map, etc. • Show colored views of previously Open i-area-positioned locations in the unit of city, town, village, ward and prefecture.	Free
	• Back up information on previously Open i-area-positioned locations to the server.	Charged
災害用メニュー (Emergency)	• Search for facilities useful in case of emergency. • Emergency i-αppli without any communication required, linking to the map i-αppli.	Charged
設定/ヘルプ (Setting/Help)	• Check the settings and usage of map view and route view.	Free

● Screen and operation for the TOP menu of “地図アプリ” (Map i-αppli)

- The screens shown here are for reference only and may look different from the actual screens.
- Upon the initial activation, the terms of service and precautions on use are displayed.

■Top screen

Menu list appears on the front top screen. Closing menu returns to the last map accessed.

Top menu

■If 90 days elapse without membership registration

Message appears to notify limitation of the available function and make inquiry for subscription when using this software first time on 91st day or later.

The similar messages are displayed when the additional service menu is selected.

* Subscribe on the website of “ゼンリン地図＋ナビ” (ZENRIN Map+Navi) using this software when you register as a member.

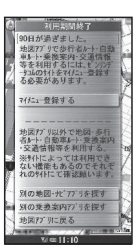

● Map view and operations

■Map view

©2008 ZENRIN
DataCom CO., LTD.

■Key operations in map view

Key operation	Action
✉ (メニュー (Menu))	Displays menu screen.
■	Displays easy access menu
i (拡縮 (Zoom))	A scale slide bar appears. Press 📷 and 🔍 to zoom in and out, respectively. Press i (閉じる) to set the scale and clear up the slide bar.
✥	Moves on the map in all directions.
CLR	Closes menu screen or returns to the location accessed last.
*	Rotates the map counterclockwise.
0	Sets the north of the map to the north.
#	Rotates the map clockwise.

■Key operations in the easy access menu

Key operation	Action
📷 (周辺を調べる (Search around))	Checks information on the focused area of the map shown and the surrounding area as well.
🔍 (ココへのルート (Here))	Searches for a route from a specified starting location to the center of the displayed map.
📷 (ココを✉送信 (Send here))	Fires off the URL of the displayed map.
📹 (ココを登録 (Save here))	Saves location information on the center of the map into this software or the server. Saving location into the server enables you to share its information in PC as well.
■ (地図へ (To map))	Exits the easy access menu.
1 (3Dパノラマ (3D Panorama))	Displays the point that allows you to browse the 3D intersection or panorama image. When the point is selected, you can view the 3D intersection or panorama image.
2 (ビル テナント (Tenant))	Displays buildings in the area and allows you to check the tenants by clicking.

● Screen and operation for the search result for surrounding area information

- The screens shown here are for reference only and may look different from the actual screens.
- The screen and operation are provided when the search result is displayed with the map but not provided as a result of selection from the list.

■Search result screen for surrounding area information

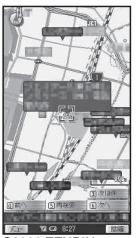

©2008 ZENRIN
DataCom CO., LTD.

■Key operation in the search result screen for surrounding area information

- If the cursor does not hit the shop, etc. as the search result, the easy access menu appears.

Key operation	Action
■	Checks detail information of the search result.
✥	Moves the map in four directions.
5	Re-searches with the displayed map as the center.
4	Checks the previous search result.
6	Checks the next search result.
✉ (メニュー (Menu))	Displays menu screen.
i (拡縮 (Zoom))	The scale slide bar appears. Press 📷 to display a wider range, or 🔍 to display the detailed map. Press i (閉じる) (close) to set the scale and clear up the slide bar.

● Finding the route

Set the start and destination to search for a route. Displays the route for walk, public transport, and cars.

1 Top Menu screen (p.191)▶“ルート案内” (Route)▶“ルート検索” (Search route)

2 Select “出発地” (Start) from following items:

このあたり (Here)……Positions and sets the approximate location by Open i-area.

フリーワード検索 (By keyword)……Searches by keyword.

地図上で指定 (From map)……Sets the starting location with map.

TEL／〒検索 (By number/code)……Searches by phone number or zip code.

住所一覧から (From address list)……Selects an address.

ジャンルから (From genre)……Selects a category.

履歴から (From history)……Selects from previously viewed maps.

登録地点から (From marked point)……Sets from the location information stored in this software or the server.

自宅 (Home)……Sets location information on your home.

出発地の確認 (Check)……Checks information on the starting location.

3 Select “目的地” (Destination) as in Step 2

4 Select “時間指定” (Time) from the following item:

現時刻で検索 (Current time)……Checks the route using the current time.

出発時刻指定 (Start time)……Sets the start time to check the route.

到着時刻指定 (Arrival time)……Sets the arrival time to check the route.

終電を利用 (Last train)……Checks the route with the last train of the day.

5 Select “条件設定” (Condition) from the following item▶“上記で設定” (Set above)

乗換条件 (Transfer)……Selects transfer priority criteria from “早い／安い／楽々” (Fast/Cheap/Easy).

徒歩ルート (Walking route)……Selects route priority criteria from “おまかせ／屋根多い／階段少ない” (Recommended/Many roofs/Less up-and-down).

特急利用 (Express)……Selects whether to use an express if the total distance of the route is 100km or shorter.

通常利用車種 (Vehicle type)……Selects the vehicle type to be used.

6 Search for route

Using a variety of route search “で検索” (Search by) and car route search “のみで検索” (Search only by car), you can search and find the route. As a search result, a route (up to 6 routes) are displayed. If there is another transfer route, the characteristics of the route are indicated by icon.

Route Level	Meaning
早 (Fast)	Takes a short time
安 (Cheap)	Low cost
楽 (Easy)	Fewer transfer times
オススメ (Recommended)	Meets the above three conditions
有料 (Toll)	Uses toll road (car)
一般 (Open)	Uses open road (car)

■ **To register the route**

▶“ルートを登録” (Register route)

7 Select the route▶“ルート確認” (Check route)

Starts checking route to the destination.

● Using the voice input

The voice input menu enables voice input to simply check surrounding area information and transfer guidance, or view a map.

<Example: To use the Local Search voice input>

1 TOP menu screen (p.191)▶“周辺検索” (Local Search)▶“音声入力” (Voice input)

The voice input guidance screen appears.

2 “音声入力開始” (Voice input start)▶Enter information through voice input

After the voice input screen appears, enter the desired peripheral information through voice input.

<Example: “この辺のコンビニ” (Convenience stores near here)>

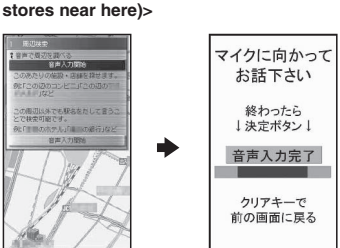

Continued on next page

❸ Voice is recognized and a confirmation screen appears

■ **When recognition is incorrect**

▶“音声再入力” (Retry)

● Using 設定/ヘルプ (Setting/Help)

❶ TOP menu screen (p.191)▶“設定/ヘルプ” (Setting/Help)▶Select any item:

各種設定 (Settings)……Make the basic settings/route guide settings/home settings/station settings, delete history and reset the settings.

ヘルプ・規約 (Help/Terms)……Shows usage, FAQ and terms of service.

会員情報確認 (Membership information)……Checks your subscription state to “ゼンリン地図＋ナビ” (ZENRIN Map+Navi).

PC確認方法 (PC check method)……View URL, login ID or password to view a PC-designed map i-αppli site.

Gガイド番組表リモコン (G-GUIDE EPG Remote Control)

This is a useful monthly-charge-free i-αppli containing the program guide and AV remote control function. You can obtain digital, analog or BS digital TV program information easily anywhere at any time. You can check the program title, contents of program and start/end time, etc. 1Seg can be activated from the program guide. The program guide can be activated from 1Seg. If you are interested in some program, you can set timer recording via the Internet to record the program on the DVD recorder (a DVD recorder compatible with the online timer recording function is required. To use this function, you need initial settings on this application). You can also search for program information by keyword such as TV program genre, your favorite personality or pickup keyword on the top of the main screen. Moreover, the remote control is possible for TV/Video/DVD player (some models do not support this function).

- When you use this application for the first time, agree to the license agreement and set the default settings.
- Packet communication charges will apply.
- When using this software overseas, set “Set main time” to the Japanese time.
- For details on Gガイド番組表リモコン (G-GUIDE EPG Remote Control), refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

* The above is a screen image. The actual screen may look different. The displayed TV guide corresponds to the area where you live.

■Booking program function

You can book a 1Seg view by selecting a program from the program guide of this application.

- Timer activation

  Activate this application to select a program you want to watch. Select “予約実行” (Book) from “視聴予約” (Book program) in メニュー (Menu) to activate the booking scheduler. Follow the on-screen instructions.

■Timer recording function

You can reserve 1Seg recording by selecting a program from the program guide of this application.

- Timer recording

  Activate this application to select a program you want to record. Select “予約実行” (Book) from “＃ワンセグ録画予約” (#1Seg timer recording) in メニュー (Menu) to activate the booking scheduler. Follow on-screen instructions.

  (* Alternatively, activate this application, select a program, and press ＃.)

■Online timer recording

If you have a DVD recorder compatible with the online timer recording, you can set timer recording from the program guide of this application via the Internet while you are away from your house. To use online timer recording, you need initial settings on this application.

- Initial settings

  ① Perform the Internet connection setting on the DVD recorder (refer to the manual supplied with the DVD recorder).

  ② Launch this application. When you select “リモート録画予約” (Online timer recording) on メニュー (Menu), instructions appear. Follow the instructions to perform initial settings.

- Timer recording
  After initial settings completes, specify the program and select リモート録画予約 (Online timer recording) from the menu. You can connect to the DVD player set with this application and set the timer recording.
  * If a timer recording is already set for the time you set, a message appears on the program guide.
- You are charged for the packet communication.

NOTE

- Not available when 2in1 is in B mode.
- NTT DOCOMO accepts no liability whatsoever regarding the information set on the FOMA terminal.

iD設定アプリ (iD setting application)

The electronic cash “iD” does not need to be charged, it is the credit service which enables you to pay or use a cashing service only by holding the Osaifu-Keitai. You can easily enjoy shopping without leaving signature. The cash service is also available according to the credit card company.

* The above is a screen image. The actual screen may look different.

- To use “iD”, besides a subscription to a company issuing iD-supported credit card, you also need iD application and Osaifu-Keitai for which settings for the card application provided by the card company are completed or a credit card that contains “iD”.
- To use “iD” as Osaifu-Keitai, complete the iD appli settings, download or start the card application provided by the card issuer, and configure the specified settings on the card application. Depending on the card, only the card application settings are required, and the iD appli settings not required.
- The cost for using the card compatible with iD (such as annual fee) varies depending on the card company.
- See the i-mode site of “iD” for information on “iD”.
  - i-mode site (Japanese) : i▶iMenu▶“メニューリスト” (Menu List)▶“iD”

DCMXクレジットアプリ (DCMX credit application)

“DCMX” is the iD-compatible credit service provided by NTT DOCOMO. DCMX is categorized into DCMX mini that will offer a monthly credit line of 10,000 yen, and DCMX/DCMX GOLD that offers the higher limit than DCMX mini while earning DOCOMO Point.
You can easily apply for “DCMX mini” from this application and start the mobile credit service immediately.

* The above is a screen image. The actual screen may look different.

■ Function

Application/Audit*1

↓

Set card information

↓

Use
No complicated charging! Wave your mobile phone over a reader at stores with the following iD mark, and enjoy shopping without your signature*2.

Check
Check the DCMX service content, monthly available credit*3, receipt, etc!

Change
Make model change settings or validity term updates!

*1 : A simple audit will be performed online at the time of application. Applications for other than DCMX mini will be connected to the application page on i-mode.
*2 : Security code entry may be required.
*3 : Only available for DCMX mini.

- See the i-mode site of DCMX for details on the service contents or how to apply.
  - i-mode site (Japanese) : i▶iMenu▶DCMX iD

Continued on next page

NOTE

- When you launch this application for the first time, agree with “ご利用上の注意” (Notes on using the application).
- Packet communication charges are applied for settings or operations.

■Notes on Osaifu-Keitai i-αppli

- NTT DOCOMO accepts no liability whatsoever regarding the information set on the IC card.

i アプリバンキング (i-αppli banking)

This i-αppli enables you to conveniently use mobile banking. Mobile banking is a service that you can check your bank balance or account activity, or you can transfer money whenever or wherever, by using a mobile phone. You can use Mobile banking for up to 2 banking facilities, only by entering the password you have set when launching the i-αppli.

- To use the mobile banking service, a bank account of the banking facility and application to the mobile banking service is required.
- You are charged for the packet communication.
- For details on i-αppli banking, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.
- For information on i-αppli banking, see the i-mode site.
  - i-mode site (Japanese) : i▶iMenu▶“メニューリスト” (Menu List)▶“モバイルバンキング” (Mobile banking)▶“ｉアプリバンキング” (i-αppli banking)

* The above is a screen image. The actual screen may look different.

楽オク出品アプリ2 (Rakuten Auction application 2)

楽オク出品アプリ2 (Rakuten Auction application 2) is a useful application that you can easily sell goods at Rakuten Auction site. It provides a guidance display for new users who use the i-αppli for the first time. There are helpful functions such as shooting/editing a photo or saving the history, and you can bring goods to the auction in a shorter time than from a site.

- You need to agree to “利用規約” (Terms and conditions) before you use i-αppli for the first time.
- Packet communication is charged.
- For more information, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.
- Member subscription and auctioneer registration to Rakuten are required to sell goods on Rakuten Auction.
- For details, see i-mode site (Japanese).
  - i-mode site: i▶iMenu▶オークション (Auction)

* The above is a screen image. The actual screen may look different.

FOMA通信環境確認アプリ (FOMA communication environment check application)

FOMA communication environment check application is the application that checks whether the FOMA terminal can use the FOMA High-speed area.

- To use the FOMA communication environment check application, agree with “ご利用上の注意” (Notes on using the application).

* The above is a screen image. The actual screen may look different.

NOTE

- The displayed items may be different or the description that the FOMA terminal is out of service area is displayed depending on the conditions (weather, the signal quality, or network traffic) even if it is the same place and time.
- When you use other functions during this application is activated, the checking may fail.

Launching i-αppli Automatically

You can set the software to launch automatically at the specified date and time or interval of time.

Enabling automatic launching

<Auto-start set>

- You can set 3 automatic startup times for each application.
- Set to "OFF" at the time of purchase.

1 MENU ▶"I-APPLI"▶"Auto-start set"▶"ON" or "OFF"

Setting the launch date/time

<Auto-start time>

You can specify the date and time to launch the software automatically.

- Software does not start up automatically in the following cases:
  - When the FOMA terminal is turned off
  - When another function is running
  - During calls
  - During communication
  - When the time for Software Update, Alarm, Schedule, To Do list or 1Seg booking program is the same as Auto-start time
  - If the time to launch is set within 10 minutes after the same application is automatically launched for the last time

1 Software list screen (p.197)▶ (FUNC)▶"Auto-start time"▶Use to select a checkbox (☐)

■ **To enable the time interval set for the software**

▶Check the "Time interval set" checkbox

■ **To set the launch date and time**

▶Check the "Start time set" checkbox

2 (Finish)▶Set the launch date and time

■ **To set the launch date and time**

▶Select a date and time▶Enter the launch date and time

■ **To set the automatic launch repetition**

▶Select the repeat setting item▶"Daily" or "Weekly"

If you select "Weekly", use to select a checkbox (☐) and press (Finish).

3 (Finish)

Checking whether an i-αppli launched automatically

You can check whether an i-αppli automatically started up at the specified time.

- You can also check for the software whose launching from the IC card function failed.

1 MENU▶"I-APPLI"▶"i-αppli action info"▶"Auto-start info"

The screen displays information such as the software name, the automatic launch time and whether or not the software was launched. "StartO" indicates that the software started up automatically, "StartX" indicates that it did not start up automatically and "Start-" indicates that the time for automatic launch has not yet been reached.

NOTE

- If the software could not be launched automatically, the " " (Not run soft) shortcut icon appears on the standby screen. Select the icon to view the Auto-start info screen. Select software that could not be activated.

Shortcut icons that provide information→p.94

Launching an i-αppli from a Site or Mail

<i-αppli To>

You can launch an i-αppli from a function other than i-αppli, such as an i-mode site or mail.

Enabling software launching with i-αppli To

<Set i-αppli To>

You can specify whether i-αppli software can be launched from i-mode sites, mail, the Infrared data exchange function, Bar code reader, IC card function, ToruCa or data broadcast.

- This setting can be specified separately for each software application.

1 Software list screen (p.197)▶ (FUNC)▶"Set i-αppli To"

2 Use to select ☐ (checkbox)▶ (Finish)

Launching i-αppli from a site

When an i-αppli software launch specification is displayed on an i-mode site, this setting allows the software to be launched from the site.

- This function cannot be used with some sites.

1 Sites screen (p.136)▶Select an item for launching the software▶“YES”

NOTE

- Unlike ordinary i-αppli, some i-αppli software is immediately launched from an i-mode site.
  - These i-αppli are not stored on the FOMA terminal after downloading from i-mode sites,
  - Some i-αppli software cannot be stored on the FOMA terminal.

Launching i-αppli from a mail

When an i-αppli software launch specification is pasted into a received i-mode mail, this setting allows the software to be launched from the i-mode mail.

1 Received mail detail screen (pp.170, 172)▶Select an item for launching the software▶“YES”

NOTE

- The i-αppli launch specification cannot be quoted even when you reply with a quote or forward the i-mode mail. You cannot quote a launch specification of an i-αppli by forwarding mail using the Infrared data exchange function or DOCOMO keitai datalink (p.329), etc.

Launching i-αppli from other functions

You can launch an i-αppli from various functions such as Infrared data exchange function, Bar code reader, IC card function, ToruCa, data broadcast, etc.

■Infrared data exchange function

When the FOMA terminal received the i-αppli launching signal while Infrared data exchange, i-αppli software launches.

■Bar code reader

When the data scanned by the Bar code reader contains an i-αppli software launch specification, you can launch the software from the Bar code reader.

■IC card function

You can launch the software by holding the FeliCa mark on the FOMA terminal over the reader/writer unit.

■ToruCa

When an i-αppli software launch specification is pasted into an acquired ToruCa, you can launch the software from ToruCa.

■Data broadcast

When 1Seg data broadcast site contains i-αppli activation specification, the software can be activated from the site.

NOTE

<IC card function>

- The software is not launched in the following cases:
  - When another function is running
  - During calls
  - When the software you want to launch cannot be found

Setting the i-αppli Standby Screen <Set i-αppli stand-by>

You can set a selected i-αppli software as the standby screen.

- Some software applications cannot be set as the standby screen.

1 Software list screen (p.187)▶[i] (Set)▶“Stand-by display”▶“ON”▶[i] (Finish)

NOTE

- Only 1 i-αppli can be set as the i-αppli standby screen.
- If software that communicates is set as the standby screen, it may not run correctly when problems such as poor signal quality occur.
- If you select “OFF” for “Stand-by net” in “Software setting”, note that you may not be able to receive timely information.
- If “Dial lock” or “Original lock” is set or 2in1 is set to B mode or Dual mode while the i-αppli standby screen is displayed, the i-αppli standby screen ends. If “Dial lock” or “Original lock” is released or 2in1 is set to A mode, the i-αppli standby screen reappears.
- When you switch tasks and display the standby screen, the screen specified in “Stand-by display” of “Display setting” appears even though the i-αppli standby screen is set.

Activating the i-αppli standby screen

You can activate the software set as the i-αppli standby screen.

1 On the i-αppli standby screen▶CLR

The i-αppli is activated and or flashes at the bottom of the screen.

Deactivating the i-αppli standby screen <Deactivate i-αppli standby screen>

● Deactivating the i-αppli standby screen while running an i-αppli

1 While running an i-αppli▶CLR (1 second or longer) or ☎▶Select any item:

Cancel……Returns to the screen of running the i-αppli standby screen.

End……Returns to the i-αppli standby screen.

Terminate……Deactivates the setting of the i-αppli standby screen.

● Deactivating the i-αppli standby screen while it is displayed

1 MENU▶"SETTINGS"▶"i-αppli settings"▶"End stand-by display"

2 "Terminate"▶"Yes"

■ **To cancel deactivating**
▶"End"

Checking the i-αppli standby screen exit information

If an error occurs that causes the i-αppli standby screen to be deactivated, you can check the recorded information on the name of the software in which the error occurred, the time of the error and the reason.

1 MENU▶"I-APPLI"▶"i-αppli action info"▶"End stand-by info"
The "End stand-by info" screen appears.

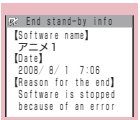

End stand-by info

Function menu➡p.199

FUNC End stand-by info screen (p.199)

Copy info……Copies the contents of the end stand-by info screen.

Delete info……Deletes the contents of the end stand-by info screen.

NOTE

- No information is recorded if the i-αppli standby screen ends normally (at normal exit).

Organizing i-αppli

Upgrading i-αppli <Upgrade>

You can upgrade downloaded software when a new version is available on the site.

1 Software list screen (p.187)▶✉ (FUNC)▶"Upgrade"▶"YES"

NOTE

- You cannot upgrade mail-linked i-αppli that rename mail folders in the following cases:
  - Mail box lock is set
  - Folder lock is set
  - Inbox or Outbox folder for the mail-linked i-αppli to be upgraded is being used

Displaying the i-αppli software in the microSD card <microSD software>

You can display the i-αppli data list which is stored on the microSD card.

1 MENU▶"I-APPLI"▶"microSD"▶"microSD software"
The "microSD software list" screen appears.
Function menu→p.199

FUNC microSD software list screen (p.199)

Software info……Displays the i-αppli software data which is stored on the microSD card.

Move to phone……Moves one i-αppli or i-αppli data in the microSD card to the FOMA terminal.

Memory info……Displays the amount of the stored i-αppli.

Delete……Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice"→p.38

NOTE

- You cannot launch an i-αppli from the microSD software list.
- You may not be able to use the i-αppli saved on the microSD card on the other FOMA terminal.

Continued on next page

NOTE

- When i-αppli that is stored on the microSD card is moved to the FOMA terminal (Phone), the data of i-αppli that is stored on the microSD card is also moved to the FOMA terminal (Phone).
- Use “Software info” (p.189) to check whether the i-αppli can be moved to the FOMA terminal (Phone) from the microSD card.

Displaying the i-αppli data in the microSD card <microSD data>

You can display the folder name list of the i-αppli data (microSD) stored on the microSD card.

1 MENU▶“I-APPLI”▶“microSD”▶“microSD data”

The “microSD data list” screen appears.

Function menu→p.200

FUNC microSD data list screen (p.200)

Display info……Displays the maker of the i-αppli, the available software and whether to use the microSD card.

Delete this • Delete selected • Delete all……Select the deleting method. “About multiple-choice”→p.38

NOTE

- You may not be able to use the i-αppli data saved on the microSD card from the software on the other FOMA terminal.
- Use “Software info” (p.189) to check whether the i-αppli data will be saved to the microSD card from the software.

Osaifu-Keitai/ToruCa

What is Osaifu-Keitai? 202
What is iC Transfer Service? 202
Launching Osaifu-Keitai i-αppli 202
Checking the IC Card Owner Information ..... Check IC owner 203
What is ToruCa? ..... ToruCa 203
Acquiring ToruCa ..... Acquire ToruCa 204
Viewing ToruCa ..... ToruCa viewer 204
Making the ToruCa Settings ..... ToruCa settings 206
Setting Illumination for IC Card Function ..... IC card Illumination 206
Locking the IC Card Function ..... IC card lock setting 206

What is Osaifu-Keitai?

Hold the “Osaifu-Keitai” up to a reader/writer at a member store and pay for your shopping, or utilize as membership card, coupons, and more.
You can also use the i-mode network to add e-money credit, check balances and usage history. Enough security is provided so the Osaifu-Keitai can be used without worries.

- For details, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

* In order to use Osaifu-Keitai services, please download the i-αppli for Osaifu-Keitai from the Osaifu-Keitai site* and then make the necessary settings.

*: i-mode site (Japanese): i▶iMenu▶メニューリスト (Menu List)▶おサイフケータイ (Osaifu-Keitai)

- If a malfunction occurs with the FOMA terminal, the data (including e-money, points, etc.) on the IC card may be erased or altered (If you need to send your cell phone to NTT DOCOMO for repairs, please delete the data yourself as we cannot accept your cell phone for repair if there is data on it). For support such as having data reissued or restored or to have it temporarily kept or transferred (except for transferring data using iC transfer service), please contact your Osaifu-Keitai service provider. Make sure to use the service which provides backup service for important data.
- NTT DOCOMO shall not be liable for any loss of or damage to data stored on the IC card, or any other loss related to Osaifu-Keitai service under any circumstances whatsoever, including but not limited to malfunctions, model changes, etc.
- If the FOMA terminal is lost or stolen, contact your Osaifu-Keitai service provider immediately about what to do. Please note, you can use Omakase Lock and IC Card lock with this FOMA terminal.
→pp.101, 206

What is iC Transfer Service?

The iC Transfer Service*1 is a service that allows you to move all the data on your Osaifu-Keitai’s IC card*2 to a replacement Osaifu-Keitai*3 when your Osaifu-Keitai is replaced due to a model change, repairs, etc. Once you move the IC card data, it is a snap to start using the Osaifu-Keitai services by simply downloading*4 the Osaifu-Keitai i-αppli. The iC transfer service is available at a DOCOMO shop or service counter near you.

- For details, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

*1 : To use the iC Transfer Service, both the new and the old phones must be Osaifu-Keitai compatible. To use the service, please visit your nearest DOCOMO shop or service counter.

*2 : Some iC transfer services may not be supported by all Osaifu-Keitai services; only the data inside the IC card of an iC transfer service compatible Osaifu-Keitai service can be moved.

*3 : This service does not copy the data; it moves it, so no data inside the IC card is left on the source FOMA terminal. There may be instances when the iC transfer service may not be utilized. Use back-up services of your Osaifu-Keitai service.

*4 : Packet communication charges do apply for downloading i-αppli and the different kinds of settings.

Launching Osaifu-Keitai i-αppli

You can launch the Osaifu-Keitai i-αppli from the software list screen. You can use the Osaifu-Keitai i-αppli to read and write the data in the IC card to use useful functions such as charging electronic money or ticket, or browsing the balance and transaction history on the FOMA terminal.

- Take great care not to disclose your security code and passwords of each service to others.
- The reading/writing of the data from the software to the IC card is interrupted in the following cases. In this case, the read/written data is discarded. The operation after the call varies depending on the service.
  - If you receive a call while launching i-αppli
  - If the battery fails
- When Osaifu-Keitai i-αppli is activated or downloaded for the first time, FOMA card (UIM) information is linked to an IC card. After this, you cannot use the IC card function unless the linked FOMA card (UIM) is inserted.
  If you use another FOMA card (UIM), you cannot use the IC card functions unless you delete (Reset IC owner) Osaifu-Keitai i-αppli first.

1 MENU▶“OSAIFU-KEITAI”▶“IC card content”

The “IC card content” screen appears.

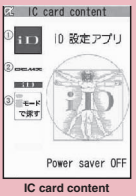

IC card content

Function menu➡p.188

2 Select the Osaifu-Keitai i-αppli

You can also launch the Osaifu-Keitai i-αppli from the “Software list” screen (p.187).

NOTE

- When 2in1 is set to B mode, you cannot launch an i-αppli which uses the mail function.

Using the Osaifu-Keitai

By holding the FeliCa mark "" on the FOMA terminal over the reader/writer unit, you can pay with the electronic cash or use the FOMA terminal as a ticket. These functions can be used without launching the software.

- Though you cannot launch the Osaifu-Keitai i-αppli during a call, you can use the Osaifu-Keitai by holding the FeliCa mark over the reader/writer unit.

1 Hold the FeliCa mark "" over the reader/writer unit to use the service you want

The center illumination flashes following the "IC card Illumination" setting when you use Osaifu-Keitai.

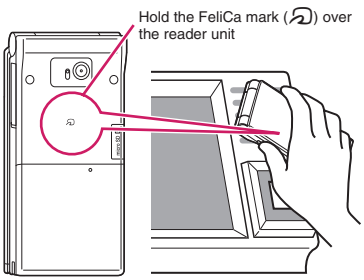

NOTE

- You can use the IC card function by holding the FeliCa mark over the reader/writer unit even when the FOMA terminal is turned off or the battery is low. (You cannot launch the Osaifu-Keitai i-αppli.) However, you may not be able to use this function when the battery pack is not attached, the battery pack is attached but not used for a long period of time, or when the FOMA terminal is left uncharged after the battery alarm sounds, so be sure to charge the battery pack.
- Do not shock the FOMA terminal when holding the FeliCa mark over a reader/writer unit.
- If the FeliCa mark is not recognized, hold the FOMA terminal close to the reader/writer section of the unit, move the FOMA terminal back and forth and around to be parallel to the reader/writer unit.
- The Osaifu-Keitai i-αppli may be launched when you hold the FeliCa mark over the reader/writer unit.

Checking the IC Card Owner Information <Check IC owner>

Check if the IC card in Osaifu-Keitai links to the inserted FOMA card (UIM).
To use another FOMA card (UIM), delete (reset) the Osaifu-Keitai i-αppli then use the IC card functions.

1 MENU▶"OSAIFU-KEITAI"▶"Check IC owner"

If another FOMA card (UIM) is inserted, select "Reset IC owner" to change the IC owner (reset Osaifu-Keitai i-αppli).

■ **To change the IC owner (reset Osaifu-Keitai i-αppli)**

▶"Change IC owner"▶"Reset IC owner"▶"YES"▶Enter your security code▶"YES"

What is ToruCa? <ToruCa>

ToruCa is the electronic card that can be acquired via Osaifu-Keitai, which can be used as an flyer, restaurant card, coupon, etc.
ToruCa can be acquired via a reader/writer unit or websites, and can be easily exchanged via mail, Infrared data exchange or microSD card.

- The acquired ToruCa is stored in "ToruCa" of "OSAIFU-KEITAI" menu.
- This function is available with ToruCa-compatible models. For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

ToruCa usage flow

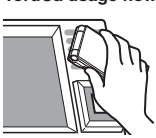

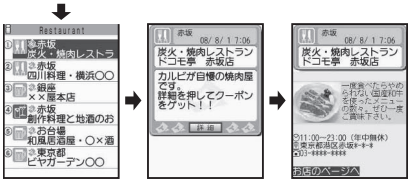

ToruCa **ToruCa (detail)**

Select ToruCa from the list. Pressing the "詳細" (Detail) button displays the detailed information.

Continued on next page

How to acquire ToruCa

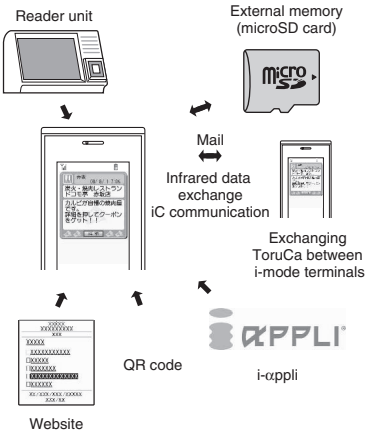

NOTE

- Packet communication charge is applied when acquiring ToruCa or ToruCa (detail) from sites.
- Depending on settings of the IP (Information service provider), some ToruCa cannot be updated or redistributed using a mail or Infrared data exchange.

Acquiring ToruCa <Acquire ToruCa>

You can acquire ToruCa from the reader/writer unit.

- You can save up to 100* ToruCa on the ToruCa folder. You can save up to 1K bytes for 1 ToruCa. You can save up to 100K bytes for 1 ToruCa (detail).

  * : You can save up to 20 ToruCa separately in the used ToruCa folder.

1 Hold the FeliCa mark "" on the FOMA terminal over the reader/writer unit

The illumination flashes following the "IC card Illumination" setting. ToruCa acquisition tone sounds, and the acquired ToruCa or ToruCa (detail) are displayed for about 15 seconds. When holding the FOMA terminal over the reader/writer unit →p.203

NOTE

- Acquired ToruCa is not displayed when another function is activated.
- You cannot change the ToruCa acquisition tone. The volume is set to the same volume set at "Phone" of "Ring volume". When set to "Step", the tone sounds at the volume of "Level 4".
- You cannot acquire ToruCa from the reader/writer unit when IC card lock or Omakase Lock is set.

Viewing ToruCa <ToruCa viewer>

1 MENU▶"OSAIFU-KEITAI"▶"ToruCa"

The "ToruCa folder list" screen appears.

ToruCa folder list

Function menu➡p.205

2 Select a folder▶Select ToruCa

The "ToruCa display" screen appears.

Guide to the ToruCa list screens/ToruCa display screen

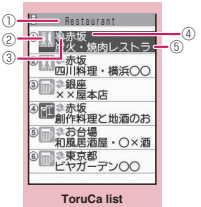

ToruCa list

Function menu➡p.205

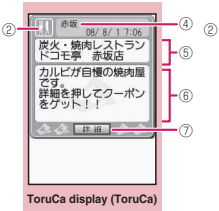

ToruCa display (ToruCa)

Function menu➡p.205

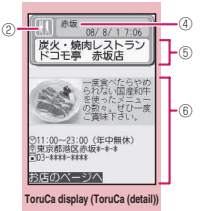

ToruCa display (ToruCa (detail))

Function menu➡p.205

①Folder title
②ToruCa category icon
③ToruCa status

: Unread ToruCa

: Read ToruCa

: Expired ToruCa

④Location, etc. (index)
⑤ToruCa title
⑥ToruCa contents (you can also use the Phone To/AV Phone To, Mail To, Web To or i-αppli To* function)
*: Available with ToruCa (detail) only
⑦Acquire ToruCa (detail)

NOTE

- You may not be able to use the Phone To/AV Phone To, Mail To, Web To or i-αppli To function depending on ToruCa.

FUNC ToruCa folder list screen (p.204)

Add folder……Enters a folder name to add a folder. You can add up to 20 folders on the FOMA terminal. For the folders on the FOMA terminal, you can enter up to 10 double-byte or 20 single-byte characters, and for the folder on the microSD card, you can enter up to 31 double-byte or 63 single-byte characters.

Edit folder name[*1]……Edits the folder name of the added folder.

Search all[*2*3]……Displays the corresponding ToruCa list by selecting the item (Index/Title) and entering the text to search.

Filter all[*2*3]……Displays only the ToruCa which meets the selected criteria.

Display all[*2*3]……Displays all the saved ToruCa after releasing the display arranged by Search all or Filter all function (except for data in the "microSD" or "Used ToruCa" folder).

iC trans. all[*2*3]→p.260

Send all Ir data[*2*3]→p.258

Delete folder[*1]……Deletes the folder.

No. of ToruCa[*3]……Displays the number of ToruCa stored on the FOMA terminal.

Delete all……Deletes all the ToruCa stored on the FOMA terminal.

*1: Unavailable with the folder other than the user-created folders.
*2: Unavailable with the folder in the "microSD" folder.
*3: Except for the data in the "microSD" and "Used ToruCa" folders.

FUNC ToruCa list screen (p.204)

Move[*1]……Selects from "Move this/Move selected/Move all" and moves ToruCa to the other folder you select. "About multiple-choice"→p.38

Copy[*1]……Selects from "Copy this/Copy selected/Copy all" and copies the ToruCa to the other folder you selected. "About multiple-choice"→p.38

Search[*2]……Displays the corresponding ToruCa list by selecting the item (Index/Title) and entering the text to search.

Disp all in folder[*2]……Releases the search, sort or filter result display, and all ToruCa in the folder appear.

- When "Search all", "Filter all" or "Display all" is performed on the ToruCa folder list screen, this item is displays as "Display all".

Sort[*2]……Sorts ToruCa in a selected criteria.

Filter[*2]……Displays only the ToruCa which meets the selected criteria.

Compose message[*1*3]……Composes an i-mode mail with ToruCa attached.

iC transmission[*2]→p.259

Send Ir data[*2]→p.258

Copy to microSD[*2]→p.248

Copy to phone[*4]→p.249

No. of ToruCa[*1]……Displays the number of ToruCa saved in the FOMA terminal.

ToruCa info[*1]……Displays the ToruCa information.

Delete……Selects the deleting method from "Delete this/Delete selected/Delete all". "About multiple-choice"→p.38

*1: Unavailable in the "used ToruCa" folder.
*2: Unavailable in the "microSD" and "Used ToruCa" folders.
*3: Unavailable when 2in1 is in B mode.
*4: Available only for ToruCa stored on the microSD card.

FUNC ToruCa display screen (p.204)

Move……Selects the destination folder to move a ToruCa to the folder.

Copy……Selects the destination folder to copy a ToruCa to the folder.

Compose message[*1]……Composes an i-mode mail with ToruCa attached.

iC transmission[*2]→p.259

Send Ir data[*2]→p.258

Copy to microSD[*2]→p.248

Copy to phone[*3]→p.249

Update[*2*4]……Updates ToruCa (detail) information.

Save image[*2*4]……Saves the ToruCa (detail) image. Selects the setting from "Normal image/Background image".

Add to phonebook[*2]……Stores the phone number or mail address displayed on ToruCa.→p.70

Replay[*2*4]……Plays the Flash movie or animation of ToruCa (detail) again from the beginning.

Delete……Deletes 1 ToruCa.

*1: Unavailable when 2in1 is in B mode.

Continued on next page

*2: Unavailable in the “microSD” folder.
*3: Available only for ToruCa stored on the microSD card.
*4: Available only when ToruCa (detail) stored on the FOMA terminal is displayed.

NOTE

- You may not be able to copy ToruCa, perform attaching ToruCa to mail, iC transmission, Send Ir data, copying to the microSD card or updating depending on ToruCa.

Making the ToruCa Settings <ToruCa settings>

1 MENU▶“OSAIFU-KEITAI”▶“Setting”▶“ToruCa settings”▶Select any item:

Receive from R/W……Sets whether to acquire (Accept) ToruCa or not (Reject) when holding the FeliCa mark over a reader/writer unit.
When set to “Accept”, set whether to check if the acquired ToruCa is duplicated with those stored on the FOMA terminal (except for “Used ToruCa” folder and expired ToruCa).

Auto reading setting……Sets whether to automatically read the available ToruCa when holding the FOMA terminal over the reader/writer unit to use ToruCa.
When set to “ON”, an available ToruCa on the FOMA terminal (except for “Used ToruCa” folder and expired ToruCa) is recognized automatically and moved to “Used ToruCa” folder.

Scroll……Selects the number of scrolling lines in a screen from “1 line/3 lines/5 lines”.

NOTE

<Receive from R/W>
- When the Repetition check is set to “Yes”, you cannot acquire the same ToruCa. If you want to acquire the same ToruCa, set to “No”. The default setting is “Yes”.

<Auto reading setting>
- If you hold the FOMA terminal over the reader/writer when set to “OFF”, a confirmation message about using the auto reading function or a message that the auto reading is not available may appear. To use ToruCa, select “YES” and set this function to “ON”.

Setting Illumination for IC Card Function <IC card Illumination>

Turn on/off the illumination for IC card function.

1 MENU▶“OSAIFU-KEITAI”▶“Setting”▶“IC card Illumination”▶“ON” or “OFF”

Locking the IC Card Function <IC card lock setting>

You can lock the IC card function to prevent others from using the IC card functions without your consent.
- IC card lock is not released even when the power is turned off.

1 On the standby screen▶✳ (1 second or longer)

IC card lock is set and “ ” appears.

■ **To release the setting**
▶✳ (1 second or longer)
▶Enter your security code

NOTE

- When you remove the battery pack, IC card lock is set automatically. In this case, attaching the battery pack automatically release IC card lock.
- IC card lock is not released even when the power is turned off because the battery runs out when IC card lock is set.
- You may not be able to download, version upgrade or uninstall some Osaifu-Keitai i-αppli when IC card lock is set.

Locking the IC card function when the power is turned off <IC lock (power-off)>

You can lock the IC card function to disable the Osaifu-Keitai when the power is turned off.

1 MENU▶“OSAIFU-KEITAI”▶“IC card lock setting”▶Enter your security code▶“IC lock (power-off)”▶Select any item:

Maintain……Keeps the same IC card lock setting as before turning off the power.

IC card lock ON……The IC card function is locked regardless of the IC card lock setting.

1Seg

What is 1Seg? 208
Setting Channels ..... Channel setting 209
Watching 1Seg Programs ..... Active 1Seg 210
Using G-GUIDE EPG Remote Control ..... G-GUIDE EPG Remote Control 212
Using Data Broadcasting ..... Data broadcast 212
Using TV Link ..... TV link 213
Recording Scenes While Watching ..... Record 1Seg 213
Using Timer Activation/Recording ..... Booking program list/Timer recording list 214
Configuring 1Seg Settings ..... User settings 215
Notifying New Message Arrival While Watching ..... Mail ticker 216

What is 1Seg?

1Seg is a mobile digital terrestrial audio/video and data broadcasting service. Use i-mode to get detailed program information, join a quiz show, enjoy TV shopping, etc.
For 1Seg service details, visit the following website:
The Association for Promotion of Digital Broadcasting (Dpa)
PC: http://www.dpa.or.jp/english/index.html
i-mode: http://www.dpa.or.jp/1seg/k/ (Japanese)

Using 1Seg

- 1Seg service is provided by TV broadcast station, etc.
- 1Seg video/audio/data broadcast can be received for free, and no application is required.
- There are two types of data displayed in the storage area: “Data broadcast” and “Data broadcast site”.
  “Data broadcast” is broadcast with video and audio. By “Data broadcast site”, a site that TV broadcast station, etc. prepares is accessed from broadcast information. “i-mode site”, etc. may be accessed. i-mode application is required for site access.
- Packet communications charges apply to view “Data broadcast site” and “i-mode site”. Information charges may apply for some sites (i-mode pay sites).

Signals

1Seg is one of the broadcast services, and receive signals (broadcast waves) different from those of FOMA services. Programs cannot be viewed in/out of FOMA range when waves do not reach or broadcast is paused.
Even in digital terrestrial broadcast range, signals may be weak or not be received in the following cases:

- Far from the signal tower
- Hiding behind objects; e.g. in a mountain or building
- In tunnels, underground areas, buildings, etc.

1Seg antenna is built in the FOMA terminal. Also, attempt to move the antenna, keep the FOMA terminal away from/close to your body, or move to another location for better reception.

Display when using 1Seg for the first time

The disclaimer screen appears.
Press [▽] or [▷] to check content, press [■] (OK), then select “YES”.
If “NO” is selected, the screen will not appear from the next time.

Storage area for broadcasts

The storage area for broadcasts is a storage area in the handset that is dedicated to 1Seg. Some information you enter while following the instructions of data broadcasts when watching programs may be saved to the storage area for broadcasts.
That includes answers to quizzes, membership numbers, and your gender, age, and occupation. Furthermore, stored information may be displayed while viewing a data broadcast or data broadcasting site without re-entering or sent to the corresponding broadcasting company (broadcaster).

To reset storage area→p.215

If another FOMA card (UIM) is inserted, a message appears asking whether to initialize storage area. Select “YES” to initialize. When “NO” is selected, storage area services are not available.

■Display when reading storage area

When using information stored in storage area while watching program, “Use saved information? It may include information used by the same broadcasting group” appears. Select “YES” not to confirm by screen display when reading information while watching the same program hereafter.
If “YES(Always)” is selected, the screen will not appear from the next time even if programs are changed.

Before use

View procedure

Step 1 Set channels →p.209

Register channels for the area and set a list.

Step 2 View 1Seg →p.210

■When a call, etc. arrives while watching or recording

When one of the following arrives while watching or recording, video and audio are interrupted and each function activates (Recording is not interrupted). Watching can be resumed after each function is finished.

- Voice call
- Videophone call
- Alarm, Schedule, To Do, booked program (When "Alarm setting" is set to "Alarm preferred")

NOTE

- 1Seg programs cannot be viewed if FOMA card (UIM) is not inserted, subscription to DOCOMO is canceled, or FOMA service usage is stopped.
- Even if subscribed FOMA card (UIM) is inserted, 1Seg may not be activated, e.g. if 1Seg programs are watched repeatedly out of FOMA range. In this case, move into FOMA range and retry activation.
- Do not activate in the following situations when watching 1Seg programs for the first time:
  - Out of FOMA range
  - Self mode activating
- Prolonged 1Seg watching while charging may shorten battery life.

■Important

- The information stored in your mobile phone (still images recorded with 1Seg, TV links, information saved to the storage area for broadcasts, etc.) cannot be transferred. We recommend that you take precautions such as keeping a separate note of important information.

Setting Channels

<Channel setting>

To use 1Seg, set channels and select a channel list beforehand. Register a channel list for each area. Selecting the channel list allows you to watch local channels.

- Up to 10 channel lists can be registered, each of which can contain up to 50 broadcast stations.
- Receivable channels vary depending on the area.

Registering channel lists

1 MENU▶"1SEG"▶"Channel setting"▶"Select area"

■ To search for channels automatically and register a channel list

▶"Auto channel setting"▶"YES"▶"YES"▶Enter title

To interrupt search, press [i] (Cancel) or CLR then select "YES".

2 Select area▶Select prefecture▶"YES"

NOTE

- "Select area" may not work properly depending on the area. In this case, use "Auto channel setting".
- Perform "Auto channel setting" in a digital terrestrial TV service area with strong signals.
- "Remote control No. duplicated" may appear in "Auto channel setting". In this case, select area manually.

Changing channel lists

Select a channel list to set channels.

1 MENU▶"1SEG"▶"Channel list"

The "Channel list" screen appears.

Channel list

Function menu➡p.210

Continued on next page

❷ Select channel list

Channel list is set, and the “Channel info” screen appears.

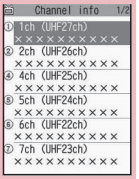

Channel info

Function menu➡p.210

FUNC Channel list screen (p.209)

Channel setting→p.209

Edit title……Edit channel list title.

Delete this……Delete the channel list.

FUNC Channel info screen (p.210)

Remote control No.……Change channel set to remote control No.

Delete this……Delete the channel.
When all channels in the channel list are deleted, the channel list is also deleted.

NOTE

- Current channel list cannot be deleted on the channel list selection screen or channel info screen. Change the channel list then delete.

Watching 1Seg Programs

<Active 1Seg>

❶ MENU▶“1SEG”▶“Active 1Seg”

The “1Seg” screen appears with last-viewed channel.

- To end watching, press [⏻], or [CLR] (1 second or longer), then select “YES”.
- The disclaimer screen appears the first time 1Seg activates.→p.208

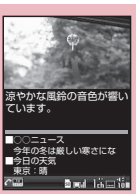

1Seg

Function menu➡p.211

NOTE

- G-GUIDE EPG Remote Control, channel link displayed on a site or mail message, etc. are also available to activate 1Seg.
  “Media To function”→p.147

Guide to the 1Seg screen

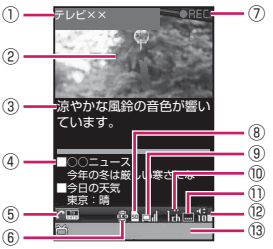

Portrait

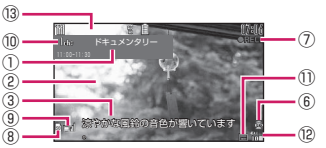

Landscape

① Program title
② Video
③ Subtitles
④ Data broadcasting
⑤ TV/Data mode→p.212
  TV……TV mode
  DATA……Data broadcast mode
⑥ ECO mode→p.215
  ……ECO mode activating
⑦ Recording status
  ●REC……Recording/Timer recording
  ●‖……Recording paused
⑧ Save destination
  SD……microSD
⑨ Signal strength (approximate)

Good ⟷ Poor

  appears when out of range.

⑩ Channel (remote control No.)
⑪ Subtitle reception
  appears when receiving subtitles.
⑫ Volume

⑬ Mail ticker
Ticker displays information on i-mode mail, SMS, Area Mail and MessageR/F received while viewing 1Seg.

Operations available while viewing 1Seg

- Some key operations are not available in data broadcast mode.

Key	Action
[◎]	Forward channel selection
[0] to [9] [*] [#]	One-touch channel selection Press keys corresponding to channels from 1 to 12.
[◎] (1 second or longer)	Channel search Searches for receivable channels in frequency order. To interrupt search, press [i] or [CLR].
[▲] ([▲マナー)/[▼] ([▼メモ))	Volume adjustment
[CLR]	Mute
[■] [9] (1 second or longer)	Switch screen directions In order of “Portrait” → “Wide (90° right)” → “Wide (90° left)”
[⌒]	Switch TV/data BC
[⌒] (1 second or longer)	Switch display In order of “Data broadcast”→ “Visual image+DBC”→ “V.img+Caption+DBC”
[i]	Still image recording, Recording end
[i] (1 second or longer)	Recording start
[ch]	Activate G-GUIDE EPG Remote Control

- In data broadcast mode, press [▲]/[■] to highlight/select a link, [◎] to move between pages, and [CLR] to go back.

NOTE

- Subtitles may not appear depending on the program.
- Data broadcast cannot be displayed in landscape display.
- E.g. when you move to another location and perform channel search, you may find a channel that was not found in Auto channel setting. Perform “Add Channel” to watch the channel from the next time.

[FUNC] 1Seg screen (p.210)

Program info……Display information on the viewed program.

Mail*

- **Inbox**……Shows the Inbox folder list screen.
- **Compose message**→p.156
- **Suggested message**……Compose mail by pasting information on a channel being viewed into the message body.→p.156
  On the recipient handset, the program can be activated using the Media To function.

Program guide……Activate G-GUIDE EPG Remote Control.→p.212

Display setting

- **Switch display**……Change screens.
  - **Visual image+DBC**……Display TV/data broadcast.
  - **V.img+Caption+DBC**……Display TV, subtitles and data broadcast.
  - **Data broadcast**……Display data broadcast only. 1Seg audio plays.
- **Subtitles**……Show subtitles at bottom (ON(Wide:Bottom)), at top (ON(Wide:Top)), or hide (OFF).
- **Brightness**……Adjust brightness between three levels.
- **Icon show(Wide)** (default: Show always)……Set whether to always or temporarily show icons other than program title in landscape mode (p.210).

Sound

- **Main/Sub sound** (default: Main sound)……Set sound output mode.
- **Sound switch**……Change sounds. Can only be performed when the sound can be changed.
- **TV sound w/ closed**……Set whether to continue outputting sound when the FOMA terminal is closed while watching.

ECO mode (default: OFF)……Set whether to reduce backlight brightness to conserve battery.

Channel

- **Channel info**……Display information on the selected channel list.
- **Channel list**→p.209
- **Channel setting**→p.209

Continued on next page

Select service……Select service to view when multiple services (programs) are broadcast from the same channel.

Add channel……Add currently viewed channel to channel list.

Data broadcast

TV link list……Display the TV link list screen. →p.213

Re-read……Reload the displayed data broadcast site.

Show certificate……Display certificate used on SSL communication. →p.149

Back to data BC……End viewing data broadcast site and return to data broadcast.

Data BC settings

Set image disp. (default: ON)……Set whether to display images on data broadcast site.

Sound effect (default: ON)……Set whether to enable sound effects for data broadcast/data broadcast site.

Reset disp. set.……Set to hide a confirmation screen afterwards by selecting "YES(Always)". Perform this setting to redisplay a confirmation screen.

Switch TV/data BC……Switch between TV and data broadcast modes while viewing.

Add desktop icon →p.94

*: When 2in1 is in B mode, you cannot compose and send i-mode mail. →p.320

Using G-GUIDE EPG Remote Control <G-GUIDE EPG Remote Control>

G-GUIDE EPG Remote Control allows activating 1Seg from program guide or booking program/timer recording. →p.194

1 MENU▶**"1SEG"▶"Program guide"**
The program guide appears.

■ **To view a program**
▶Highlight a program▶✉ (TV起動 (Activate TV))

NOTE

- To use downloaded Program guide i-αppli, select "Program guide" from the Software setting on the Software list screen (p.188).

Using Data Broadcasting <Data broadcast>

In 1Seg, use data broadcast as well as video/audio. Make use of program-linked site and other various information including pictures and videos.
Select item (link) to use Phone To/Mail To functions, etc. →p.147

- Data broadcast cannot be displayed in landscape display.

1 **1Seg screen (TV mode) (p.210)▶**
Data broadcast mode activates and TO MAIL appears.

■ **To view data broadcast only**
▶1Seg screen▶✉ (FUNC)▶"Display setting"▶"Switch display"▶"Data broadcast"

2 **Select an item (link)**
If i-mode access confirmation appears, select "YES". If "YES(Always)" is selected, the screen will not appear from the next time.
• Operation during site viewing →p.139

NOTE

- 1Seg audio plays in data broadcast mode.
- In data broadcast/data broadcast site text entry, pictographs cannot be entered.
- If "YES(Always)" is selected on the data broadcast confirmation screen, data broadcast information automatically updates and packet communications charges may apply.

Using TV Link <TV link>

Sites or memos can be added to TV link depending on data broadcast/data broadcast site. Add to TV link to view often-used sites or memos easily.

Adding to TV link

If selected item (link) can be added to TV link, a message appears asking whether to add to TV link.

- Up to 50 entries can be added.

1 On the 1Seg screen (data broadcast mode) (p.212)▶Select available item▶“YES”

■ If selected URL or memo is already added

A message appears asking whether to overwrite the existing one. Select “YES” to overwrite.

NOTE

- URLs or memos added to TV link are only available on 1Seg, not on i-mode or full browser.
- Some links may have validity periods.

Opening sites or memos from TV link

1 MENU▶“1SEG”▶“TV link”▶Select TV link

If i-mode access confirmation appears, select “YES”.

■ If validity period has expired

A message appears asking whether to delete the link.

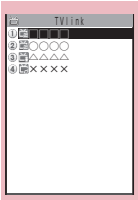

TV link list

Function menu➡p.213

TV link list icons

Icon	Type
	Memo
	Data broadcast site
	i-mode contents

- Videos/Subtitles do not appear even if accessing data broadcast site.

FUNC TV link list screen (p.213)

Display detail……View Title, URL, Outline, Contents type and Expiration Date.

No. of TVlink……View the number of stored TV links.

Delete this/Delete selected/Delete all……Select the deletion method.
“Selecting multiple”→p.38

Recording Scenes While Watching <Record 1Seg>

Save current program as a video or picture.

- Recorded videos are saved to a microSD card.
  - Maximum number of videos: 99*1
  - Maximum recording time*2: 600 min.*3

*1 : Actual storable count may be decreased depending on the data size.
*2 : Maximum recording time varies depending on the channel or program.
*3 : Figure estimated with 2GB microSD card.

- Pictures are saved to the Image folder in Data Box 1Seg folder.

<Example: To record video>

1 On the 1Seg screen (p.210)▶ (1 second or longer)

Recording starts.
Channels cannot be changed during recording.

■ To record picture

▶

Picture is saved.

2

Recording ends and video is saved.

- If storage area becomes full, recording automatically ends and video recorded until then is saved.

NOTE

- Recording may not be performed due to copyright restrictions, etc.
- Recorded video or picture cannot be set as standby screen, ring tone, receiving screen, etc.
- Data broadcast cannot be recorded.
- The following shows saved video file name and title:
  File name: PRGXXX (XXX: Alphanumeric)
  Title: YYYYMMDDhhmmXXX (Y: Year, M: Month, D: Day, h: Hour, m: Minute, X: Number)
- The following shows saved picture file name and title:
  YYYYMMDDhhmmXXX (Y: Year, M: Month, D: Day, h: Hour, m: Minute, X: Number)
- Video cannot be recorded if signal strength is .

Continued on next page

NOTE

<Video recording>

- If signal strength becomes , recording continues but video/audio are not saved.
- "" flashes during recording.
- Recording is not interrupted even if screens are changed by Multitask or a call arrives.
- During recording, alarm sounds for about 2 seconds, one minute before recording scheduled time. Operation is performed based on "Priority" set at the time of timer recording registration as follows:
  - "Recording": Confirmation message appears, video recording is finished and timer recording starts.
  - "Operation preferred": Message appears asking whether to start timer recording. Select "YES" to end video recording and start timer recording. Select "NO" to continue video recording.
- Some data cannot be recorded until the memory is full.
- 1Seg contains copy control signals: "Copy Never", "Copy Once", "Copy Free". Each broadcast station sets copy control signals.
- "Copy Never" program cannot be recorded. When copy control signal changes to "Copy Never" during recording, recording stops and video recorded until then will be saved.

Using Timer Activation/ Recording

<Booking program list/Timer recording list>

Set date and time, channel, program title, etc. Alarm sounds at specified date and time indicating the program/recording start.

- Timer activation/recording alarms→p.289
- Up to 100 activation/recording entries can be booked.
- Program guide i-αppli, channel link displayed on a site or mail message, etc. are also available for timer activation/recording.

<Example: To book activation>

1 MENU▶"1SEG"▶"Booking program list"

The "Booking program list" screen appears.

■ To book timer recording

▶"Timer recording list"

The "Timer recording list" screen appears.

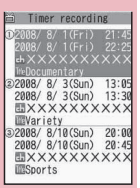

Booking program list

Function menu➡p.215

2 (FUNC)▶"New"

■ To edit booked schedule

▶(FUNC)▶"Edit"

Software key displays "New" if no entry is stored and "Edit" if any.

3 Select any item

Date setting (Start/End)*1……Enter date and time to start/end.

- **Enter date**……Enter date and time.
- **Choose date**……Select date from Calendar, then enter time.

Channel……Select channel.

Edit title……Enter program title.

Repeat……Select "1 time", "Daily" or "Select day".

Alarm*2……Set whether to play the alarm at specified date and time of time recording.

Alarm*3……Select "ON", "ON/Set time" ("15 seconds before" to "10 minutes before") or "OFF" for alarm at timer activation date and time.

Alarm tone*3……Select the alarm tone from Clock Alarm Tone or melody, i-motion or music folders at timer activation date and time.

Volume……Use to adjust the alarm tone volume.

Priority*2……Set operation to be performed when the start date and time arrives while using 1Seg/Music group (1Seg, Data Box (1Seg), Music, Music&Video Channel).

- **Recording**……Interrupt/End current operation to start recording.
- **Operation preferred**……A screen appears asking whether to start recording. Select "YES" to interrupt/end current operation to start recording.

Activate TV w/ alarm*3……Set whether to activate 1Seg from the alarm notification screen. If "ON" is selected, press ■ (TV) then select "YES" to activate 1Seg in alarm notification.

*1 : For booking program, set "Date setting(from)".
*2 : Set only for timer recording.
*3 : Set only for booking program.

4 Set each item▶ (Finish)

● When recording is finished

“ ” appears on the standby screen. Select “ ” to view up to 100 results from the latest.
Select recording result to play recorded program.

NOTE

<Booking program>
- If multiple alarm entries are added for the same date and time, priority is given to an entry with earlier start date and time. If the same start date and time is set, priority is given to an entry added later.
- To set alarm illumination, go to “Illumination set” then “Schedule/Alarm”.

<Timer recording>
- Recording is not possible if the FOMA terminal is in the following statuses one minute before start date and time:
  - Powered off
  - During Dial lock/Omakase Lock
  - During infrared data exchange/iC communication
  - Software updating
- Recording may not start at specified date and time in the following cases:
  - Weak signals
  - Unstable reception
  - Video image is not provided
  - Insufficient memory in destination
  - During international roaming
  - Out of FOMA service area
- 1Seg audio does not play while recording by timer recording. To play audio, press CLR or adjust volume.

Booking program list screen (p.214)/Timer recording list screen (p.214)

FUNC

New, Edit·····Newly add or edit booking program/timer recording entries. →p.214

Sort·····Sort entries by selected condition.

Delete·····Select “Delete this”, “Delete selected”, “Delete past” or “Delete all”.
“Selecting multiple” →p.38
- “Delete past” deletes entries with start date and time set before current date and time.

Memory info*·····View video storage capacity.

*: Only available on the Timer recording list screen.

Configuring 1Seg Settings

<User settings>

1 MENU ▶“1SEG”▶“User settings”

2 **Select any item**

Subtitles·····Show subtitles at bottom (ON(Wide:Bottom)), at top (ON(Wide:Top)), or hide (OFF).

Rec. while low battery·····Set whether to continue recording when battery becomes low while recording.

ON (default)·····Continue recording without displaying the confirmation screen.

OFF·····A screen appears asking whether to finish recording.

TV sound while closed (default: ON)·····Set whether to continue outputting sound when the FOMA terminal is closed while watching.

ECO mode (default: OFF)·····Set whether to reduce backlight brightness to conserve battery.

Display light·····Set display light for watching.

Constant light (default)·····Always turn on display light.

Lighting duration·····Set display light duration (01 to 30 minutes).

Data BC settings

Set image disp. (default: ON)·····Set whether to display images on data broadcast site.

Sound effect (default: ON)·····Set whether to enable sound effects for data broadcast/data broadcast site.

Reset disp. set.·····Set to hide a confirmation screen afterwards by selecting “YES(Always)”. Perform this setting to redisplay a confirmation screen.

Icon show(Wide) (default: Show always)·····Set whether to always or temporarily show icons other than program title in landscape display (p.210).

Check TV settings·····Confirm User settings.

Reset channel setting·····Delete all channels.

Reset storage area·····Delete channel information from storage area.

Delete this·····Delete selected channel only.

Delete all·····Delete all channels.

Reset TV settings·····Reset “User settings” to default.

Continued on next page

NOTE

<TV sound while closed>

- If set to “ON”, data broadcast site information may automatically update and packet communications charges may apply even when the FOMA terminal is closed.

<ECO mode>

- When activating the view style in ECO mode, cache data broadcast site data will be cleared.

<Reset disp. set.>

- 1Seg activation confirmation screen (p.208) is not reset.

<Icon show(Wide)>

- Even if set to “Show temporarily”, an icon may appear in a weak signal location.

Notifying New Message Arrival While Watching

<Mail ticker>

Ticker shows new message arrival while viewing 1Seg: i-mode mail, SMS, Area Mail and MessageR/F.

1 MENU ▶“SETTINGS”▶“Display”▶“Mail ticker”▶Select any item

Display sender·····Display sender name stored in Phonebook.

Display sender/subject·····Display sender name stored in Phonebook and subject.

Not display·····Hide mail ticker.

NOTE

- Only new arrival appears in the following cases:
  - Sender e-mail address is not stored in phonebook
  - Area Mail or MessageR/F arrives
  - New filtering message comes to lock-active folder
  - Inbox is locked
  - Original lock is active for the phonebook or message

Full Browser

Displaying Website Designed for PC ..... Full Browser 218
Setting the Full Browser..... Full Browser settings 221
Cookie..... 221
Referer..... 222

Home URL, bookmark and other data registered in Full Browser are not available for i-mode. Furthermore, the settings performed in Full Browser are invalid for i-mode.

Displaying Website Designed for PC <Full Browser>

You can enjoy viewing websites designed for PC with the Full Browser function. Some websites incompatible with i-mode can be displayed correctly.

- Some websites may not be displayed or be displayed incorrectly.
- Note that the communication charge can become expensive if large volumes of data is acquired by viewing websites containing many image data or downloading files. For details on packet communication fee, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.
- You can view a website composed of frames*1. You can also select a frame to display it. →p.220
- You can view SSL/TLS*2-compliant websites in Full Browser.

*1: The “frame” used in this chapter refers to each of separated sections that constitute a website page and differs from that used for framed photography.

*2: SSL and TLS are authentication/encryption technology to protect your privacy in data transmissions. Data sent to or received from a SSL/TLS page is encrypted to prevent hackers from eavesdropping data, site spoofing or altering, thus making credit card transactions and the sending of personal information (e.g. address) safer.

Displaying a website

1 i▶“Full Browser”

2 **Select any item:**

Home·····Displays a website with the URL registered as home URL.

Bookmark·····Displays the website registered as bookmark.

URL history →p.138

Enter URL·····Enters a URL to display the website.

Full Browser settings →p.221

■ When the confirmation message asking whether to use Full Browser appears

The default setting of “Access setting” (setting whether to use Full Browser) is “OFF”.
When “OFF” is set for “Access setting”, the confirmation message asking whether to use Full Browser appears. Read the given notes carefully and perform the setting.
When you select “Yes” on the confirmation message, “ON” is set for “Access setting” (p.221) and the setting will be retained.

NOTE

- You cannot save a page displayed in Full Browser as a screen memo.
- Websites displayed in Full Browser cannot be viewed in i-mode.
- The Full Browser does not support Flash movies or PDF.
- Be sure to insert the FOMA card (UIM) before setting “Access setting”.
- When “Access setting” is set to “ON” and the FOMA card (UIM) is replaced, the “Access setting” changes to “OFF”.

Guide to the Full Browser screen

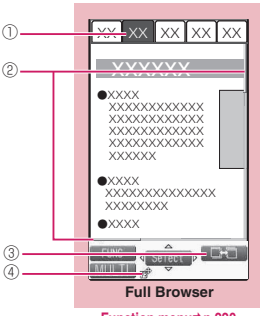

Function menu➡p.220

①Tab
- As many tabs and titles as the number of websites displayed simultaneously (if there is no title, the URL is displayed)
- “” indicating that the selected frame (p.220) appears
- “” is also displayed when another frame is in communication while the selected frame is displayed (p.220).

②Scroll bar
Current position in the displayed website (Not displayed for Mobile layout)

③ Change window icon
Pressing [i] ( ) switches pages when multiple websites are open.
④ or
Appears during connection to the Internet with Full Browser.
(Displays "" when Mobile layout mode is used)

● Layout

2 display mode are available (Original layout/Mobile layout).

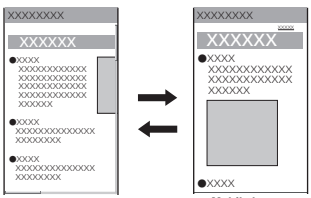

■Original layout

Websites are displayed in the similar size to the display of 800 dots wide × 600 dots high on a PC. You can view the area not displayed on the screen by scrolling vertically and horizontally.

■Mobile layout

Websites are displayed in the width of a FOMA terminal display. Only vertical scrolling is required for viewing websites.

■Switching the display mode

The display mode switches between Original layout and Mobile layout each time you select "Change disp. mode" from the function menu.

- The default mode can be set in "Display mode setting" (p.221) of "Full Browser settings".
- The display mode is retained when Full Browser is exit. The same display mode is applied when the Full Browser is activated next time.

Operations on the Full Browser screen

● Scrolling

Key	Description
	Scrolls to the direction that the key is pressed. Holding the key scrolls the screen continuously in the same direction.
(▲マナー) (▼メモ)	Scrolls up or down by screens.
(▲マナー) (1 second or longer) (▼メモ) (1 second or longer)	Jumps to the top or bottom of the website.

● Useful keys for the Full Browser screen

Key	Description
1	Zooms out (Makes the font size smaller in Mobile layout)
2*	Selecting a desired portion of the entire page, then displaying the designated part. (Not available for the landscape screen)
3	Zooms in (Makes the font size bigger in Mobile layout)
4	Goes back one page from the current page.
5	Displays the Bookmark folder list screen.
6	Jump forward to a page that has been stored in the FOMA terminal's cache.
9*	Displays the website in landscape screen or release the landscape screen (return to the portrait screen).
0	Displays a description of an operation assigned to a key.

* : Available only in Original layout.

NOTE

- The function key is available in the landscape screen even though the function screen is not displayed.
- The landscape screen returns to the portrait screen after pressing CLR to close any window while multiple windows are active.

● Displaying a page composed of frames

You can view websites composed of frames that are designed for PC.

❶ Full Browser screen (p.218)▶Display a website composed of frames

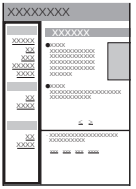

❷ Select a frame

The selected frame is displayed.

All frames　　Selected frame

■ **To return to the all frames screen**

▶CLR

NOTE

- For a website including several frames, all the frames may not be displayed (resulting in frames without characters or images).

● Uploading images

You can upload JPEG or GIF images stored in your FOMA terminal to websites depending on websites.

- Procedure for uploading images depends on websites. Follow the procedure described on the website you visit.

NOTE

- You cannot upload multiple images that exceed 80K bytes in total or data in which the selected image and other data exceed 100K bytes in total.
- Some websites may not support uploading function.
- You cannot upload images that are not allowed to be output to a device outside the FOMA terminal.

FUNC Full Browser screen (p.218)

Add bookmark……Adds the website to the bookmark. Up to 100 entries can be stored.

Bookmark……Opens the Bookmark folder list screen. Up to 12 Bookmark folders can be created, and the minimum folders are 3 (including Secret folders).

Save image……Saves the image on the displayed page.

Enter URL……Enters a URL to display the website.

URL history→p.138

Change side mode⇔Release side mode[*1]……Displays the website in landscape screen or release the landscape screen (return to the portrait screen).

Zoom[*2]……Selects the screen size from “Small 2/Small 1/Standard/Large 1/Large 2/Zoom in position”.
When you select the “Zoom in position”, select a desired portion of the entire page.

Change font size[*3]……Selects the font size from “Small/Standard/Large/X-large”.→p.93

Window

- **Open new window**……“Using multi window”→p.140
- **Close window**……Closes the displayed window.
- **Change window**……Switches windows when multiple websites are open.

All frames……Returns to the all frames screen from the Selected frame screen

Change disp. mode……Switches between “Original layout” and “Mobile layout”.

Reload……Refreshes the displayed website.

Compose message……Pastes the URL of the displayed website to compose an i-mode message.

History back……Goes back one page from the current page.

History forward……Returns to the page that had been displayed before performing “History back”.

Add shortcut→p.94

Home

- **Set as home URL**……Registers the URL of the displayed website as the home URL. Only one URL can be stored.
- **Display home**……Displays a website registered as home URL.

Site info

- **Title**……Displays the title of the displayed website.
- **URL**……Displays the URL of the displayed website.

Certificate……Displays the SSL/TLS certificate details when the displayed website supports SSL/TLS.

Browser settings

Replay……Plays an animation in the displayed website from the beginning.

Set image disp. (default: ON)……Sets whether to display images. When “OFF” is set, “” appears instead of images.

Referer setting (default: Send)→p.222

Cookie settings (default: Valid)→p.222

Delete cookies→p.222

Change CHR code……Changes the character code to redisplay a website that is not displayed correctly.

Help……Displays a description of an operation assigned to a key.

*1: Unavailable in Mobile layout.
*2: Appears when Original layout mode is used.
*3: Appears when Mobile layout mode is used.

NOTE

<Save image>

- PNG and BMP images are automatically saved in an “OUDXXX” (XXX are numerals) folder under the “OTHER” folder of the microSD card.

Setting the Full Browser

<Full Browser settings>

1 ▶“Full Browser”▶“Full Browser settings”▶Select any item:

Access setting (default: No)……Sets whether to use the Full Browser.

Home URL (default: Google (http://www.google.co.jp))……Sets the home URL.

Scroll

Speed (default: High speed)……Selects the scrolling speed from “High speed/Low speed”.

During scroll in focus (default: OFF)……Sets whether to highlight the linked pages while scrolling.

Set image disp. (default: ON)……Sets whether to display images. When “OFF” is set, “” appears instead of images.

Cookie settings (default: Valid)→p.222

Delete cookies→p.222

Referer setting (default: Send)→p.222

Display mode setting (default: Original layout)

Original layout (default: Standard)……Selects the display from “Small 2/Small 1/Standard/Large 1/Large 2”.

Mobile layout (default: Standard)……Selects the font size from “Small/Standard/Large/X-large”.

Script setting (default: Valid)……Sets whether to validate JavaScript* or not when displaying a page. Some websites may be displayed incorrectly unless “Script setting” is set to “Valid”.

Window open guard (default: Invalid)……Sets whether to automatically open a new window by using JavaScript*. When set to “Valid”, a window is not opened automatically.

Tab display setting (default: Open at the back side)……Sets whether to switch the screen (Open at the front) or not (Open at the back side) while the current screen is displayed.

Check settings……Checks the Full Browser settings.

Reset……Resets the settings specified in “Full Browser settings” to the default settings.

* : JavaScript is a programming language that can be included on web pages to make them more interactive.

Cookie

Using Cookie* enables you to effectively access the websites that you have seen once.

* : Cookie is the mechanism for temporarily saving the date you accessed the website, number of accesses and your other information. The information is sent from server, saved temporarily in your FOMA terminal and used for contents service.
If Cookie is sent, the information such as date you accessed the website and number of accesses is also sent to the site. Please note that NTT DOCOMO is not responsible for any reveal of your information to third parties because of sending Cookie.
However, some websites and contents services require you to validate the Cookie settings for their correct display and use.

Setting Cookie

1 ▶“Full Browser”▶“Full Browser settings”▶“Cookie settings”▶Select any item:

Valid……Always validates Cookie.
No confirmation is made when Cookie is sent or received.

Invalid……Always invalidates Cookie.

Notify (sending)……Enables you to choose whether to send Cookie every time you connect to a page. No confirmation is made when Cookie is received and the information is saved in your FOMA terminal.

Notify (receiving)……Enables you to choose whether to receive Cookie every time you connect to a page. No confirmation is made when Cookie is sent.

Notify (send/recv.)……Enables you to choose whether to send or receive Cookie every time you connect to a page.

NOTE

- Cookies are deleted in the ascending order of no use when the number and size of Cookies exceed the maximum limit.
- Resetting the Full Browser settings deletes Cookies.

Deleting Cookie

You can delete the Cookies for Full Browser stored in your FOMA terminal.

1 ▶“Full Browser”▶“Full Browser settings”▶“Delete Cookies”▶Enter your security code▶“YES”
All the Cookies for Full Browser stored in your FOMA terminal are deleted. (You cannot delete them separately.)

Referer

You can set whether to send Referer*.

* : Referer is information of source link. Sending Referer transfers information such as the page from which you access the site.
Please note that NTT DOCOMO is not responsible for any reveal of your information to third parties because of sending Referer.
However, you may not access the linked pages in some websites unless Referer is sent.

Setting Referer

1 ▶“Full Browser”▶“Full Browser settings”▶“Referer setting”▶Select any item:

Send……Sends Referer.

Unsend……Does not send Referer.

Notify……Confirms whether to send Referer.

Data Display/Edit/Management

Data Box 224

Mastering still images

Displaying the Stored Images ..... My picture 225
Editing Images ..... Edit image 231

Mastering movies

Playing Movies/i-motion ..... i-motion 233
Editing Movies ..... Edit movie 235

Mastering video

Playing Video ..... Video player 235

Mastering Chara-den

What is Chara-den? 237
Saving Chara-den Character as Image or Movie ..... Rec. Chara-den 239

Mastering melodies

Playing Melodies ..... Melody 240

Mastering Kisekae Tool

Managing Kisekae Tool ..... Kisekae Tool 242

Mastering Memory Cards

microSD Card 243
Displaying the Data in the microSD Card 247
Exchanging the Data Between the microSD Card and FOMA Terminal 248
Moving the Copyrighted Data Among the microSD Card and FOMA Terminal ..... Movable contents 250
Managing the microSD Card 251
Setting the USB Mode ..... USB mode setting 251
Using the FOMA Terminal as a microSD Reader/Writer 252
Setting How to Print Images Stored on the microSD Card ..... DPOF setting 252

Mastering various data

Working with Folders and Files 253
Managing the Phonebook and SMS on the FOMA Card (UIM) ..... UIM operation 254

Transferring data with Infrared data exchange/iC communication/cable connection

Infrared Data Exchange/iC Communication 255
Forwarding Data with Infrared Data Exchange ..... Infrared data exchange 257
Forwarding Data with iC Communication ..... iC communication 259
Forwarding Data by Cable Connection ..... OBEX™ connection 260
Barring Phonebook Image Forwarding ..... Forwarding image 260
Using the Infrared Remote Control Function 261

Mastering PDF/Document viewer

Viewing PDF Data ..... My document 261
Viewing Documents ..... Document viewer 263
PDF Data Screen/Document View Screen 263

Data Box

In Data Box, still images and movies shot using the FOMA terminal's camera or data downloaded from mails or websites are saved.

■**Folders**

- The following items and folders are prepared and you can categorize the data into the folders depending on the file type.

Folder	Contents
My picture	
Inbox	You can select this folder to save still images shot using the FOMA terminal's camera, and images retrieved from websites, mails or Bar code reader. Images copied from the microSD card or forwarded by infrared data exchange are automatically saved to this folder.
Camera	You can select this folder to save same images as Inbox. Images shot with Chara-den shooting are automatically saved to this folder.
Decomail-picture*1	Images for Deco-mail are pre-installed. You can select this folder to save same images as Inbox.
Decorate PI*2	Deco-mail pictographs are stored in the folder which is arranged by the categories. Deco-mail pictographs downloaded from website, attached to mails or copied from the microSD card are saved.
Pre-installed	Standby screens, wakeup images and animations are pre-installed.
Secret*3	Save the images you want to prevent others from viewing.
User-created folder*4	You can select this folder to save same images as Inbox.
Original animation	Animations created from continuous mode and original animations are stored.

Folder		Contents
micro SD	Picture	Still images you shot, JPEG/GIF images copied from the FOMA terminal, JPEG/GIF images stored on the microSD card from a PC are saved.
	Decorate PI*2	Deco-mail pictographs copied from the FOMA terminal or stored on the microSD card from a PC are saved.
	Image Box	GIF animations and SWF Flash movie copied from the FOMA terminal, JPEG images, GIF animations stored and SWF Flash on the microSD card from a PC are saved.
Frame		Frames are pre-installed. Frames retrieved from websites are automatically saved to this folder.
Stamp		Image stamps are pre-installed. Stamps retrieved from websites are automatically saved to this folder.
Music		
Playlist		Playlists created on the FOMA terminal are saved.
Inbox		You can select this folder to save music data.
WMA		Music data transferred from a PC to the microSD card is saved.
Movable contents		Music data moved from the FOMA terminal to the microSD card is saved.
Pre-installed		Music data is pre-installed.
User-created folder*4		You can select this folder to save same the music data as Inbox.
Music&Video Channel		
Delivery program		The stored programs appear.
User-created folder*4		You can select this folder to save the programs that is moved from the Delivery program.
i-motion		
Inbox		You can select this folder to save movies shot using the FOMA terminal's camera, movies and i-motion retrieved from websites or mails. Movies/i-motion copied from the microSD card or forwarded by infrared data exchange are automatically saved to this folder.
Camera		You can select this folder to save same movies and i-motion as Inbox. Movies shot with Chara-den shooting are automatically saved to this folder.

Folder		Contents
Secret*3		Save the movies and i-motion you want to prevent others from viewing.
User-created folder*4		You can select this folder to save same movies and i-motion as Inbox.
micro SD	SD Video*5	Movies you shot, movies/i-motion copied from the FOMA terminal or movies stored on the microSD card from a PC are saved.
	Multimedia*6	
Movable contents		Movie/i-motion moved from the FOMA terminal to the microSD card is saved.
Playlist		This folder is used for playing a movie playlist. →p.234
Melody		
Inbox		You can select this folder to save melodies retrieved from websites, mails or Bar code reader. Melodies copied from the microSD card or forwarded by infrared data exchange are automatically saved to this folder.
Pre-installed		Melodies and sound effect are pre-installed.
User-created folder*4		You can select this folder to save same melodies as Inbox.
Voice announce		Voice recorded using the voice announce function is automatically saved to this folder.
microSD		Melodies copied from the FOMA terminal or stored on the microSD card from a PC are saved.
Playlist		This folder is used for playing a melody playlist. →p.242
My document		
Inbox		PDF data is pre-installed. You can select this folder to save PDF data obtained from websites or mail. PDF files copied from a microSD card or forwarded by infrared data exchange are automatically saved to this folder.
User-created folder*4		You can select this folder like Inbox to save PDF data.
microSD		PDF files copied from the FOMA terminal or PC to a microSD card are saved.
Chara-den		
Chara-den is pre-installed. Chara-den retrieved from websites are automatically saved to this folder.		
Kisekae Tool		
Packages are pre-installed. Packages retrieved from websites are automatically saved to this folder.		

Folder		Contents
1Seg		
Image	Inbox	1Seg still images are automatically saved here.
	User-created folder*4	Still images can be moved from Inbox to save here.
Video	microSD	1Seg videos are saved here.
Document viewer		
microSD		Documents obtained from mail or copied from a PC to a microSD card are saved.

*1: Images set to functions cannot be saved.
*2: You can save only Deco-mail pictographs (20 dots wide × 20 dots high, non-file-restricted JPEG/GIF images, GIF animations) to this folder.
*3: Displayed only in Secret or Secret data only mode.
*4: You can create up to 20 folders with “Add folder”. Enter the folder name when using “Add folder”. You can change the folder name afterwards using “Edit folder name”.
*5: Movies/i-motion with video are saved.
*6: Movies/i-motion with sound only (including the music data of AAC format) can be stored.

Displaying the Stored Images
<My picture>

Still images shot using the FOMA terminal’s camera or downloaded from websites can be displayed in My picture of the Data Box.

1 MENU▶“DATA BOX”▶“My picture”

The “Folder list” screen appears.
Contents of the My picture folder →p.224

Folder list

Function menu➡p.253

■ **To view still images recorded with 1Seg**
▶MENU▶“DATA BOX”▶“1Seg”▶“Image”

2 Select a folder

The “Image list” screen (9 images) appears.
Image list screen →p.226

Image list

Function menu➡p.228

■ **To search images by i-mode**
▶“Search by i-mode”▶“YES”

Continued on next page

3 Select an image

The “My picture” screen appears.

Use [Navi] to display the previous or next image.

My picture

Function menu➡p.228

■ To switch the screen mode

▶[ch] (Normal/Full)

In the Full screen mode, the oblong image is displayed just as it is, and rectangular image rotates to the right 90 degrees and displayed.

■ To zoom in an image

▶[■] ([🔍])

The image is zoomed in or out by one step each time you press [📱] (+) or [ch] (-).

Pressing [✉] (Actual) displays the image in the actual size.

If the image does not fit in the screen, use [Navi] to scroll the image.

To return to the original zoom, press [■] (Back).

NOTE

- The following images cannot be displayed:
  - An image which exceeds 2M bytes
  - An image whose width or height exceeds 2,592 dots or total number of dots exceeds 2,592 × 1,944 dots
  - A progressive JPEG or GIF image whose total number of dots exceeds 854 × 480
- While displaying in the large size, you cannot change to the previous or next image by using [Navi] or display the function menu.
- When enlarging an image larger than 1,705 dots wide × 1,705 dots high, you may not be able to display the image in the actual size.
- Original animation, GIF-formatted animation or Flash movie cannot be displayed in the large size.
- Flash movies are played at the volume set in “Phone” in the “Ring volume” settings (if “Step” is set, Flash movies are played at the “Level 2” volume).

Guide to the 9 images view/list view

● Setting the Image list display mode

<Viewer settings>

1 [MENU]▶“SETTINGS”▶“Display”▶“Viewer settings”▶Select any item:

List only……Changes to the list view.

9 images (default)……Changes to the images view.

● Guide to the 9 images view/list view

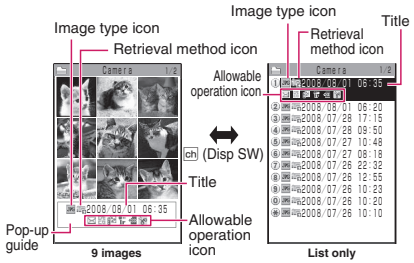

■9 images

9 images stored on the FOMA terminal appear on the screen.

* Original animations are always displayed in list view.

■List only

11 images are listed on the screen.

■Image type icon

Icon	Description
JPG	JPEG format image
GIF	GIF format image
	GIF (IFM) frame, image stamp
	SWF Flash movie
	MP4 movie/i-motion
(Blue note)	MP4 i-motion with sound effect
(Orange note)	ASF i-motion
	MP4 i-motion with playback restriction
	MP4 format i-motion with sound effect and playback restriction
	Partially downloaded i-motion
(Green note)	i-motion that can be moved to the FOMA terminal (Phone)
(Blue note)	Sound effected i-motion that can be moved to the FOMA terminal (Phone)
	i-motion that is prohibited to move to the FOMA terminal (Phone)
	AFD Chara-den
	Video recorded with 1Seg
	Image to which the FOMA card security function applies

: Data that are file-restricted or not allowed to be attached to mails or output from the FOMA terminal

: i-motion with playback restriction (“” turns to “” when the playback count, period or limit expires)

: Movable only when the FOMA card (UIM) being used was also used to save the i-motion

: Movable only when the model and FOMA card (UIM) being used were also used to save the i-motion

■Retrieval method icon

Icon	Description
No icon	Pre-installed data
	Data downloaded from site, mail, ToruCa or retrieved from i-αppli
	Data you shot with camera
	Data acquired via Infrared data exchange, iC communication, the microSD card, Bar code reader or PC
	Downloaded frames and image stamps
	Chara-den shots
	Data recorded with 1Seg
	Data clipped out of PDF data

■Allowable operation icon

Icon	Description
QVGA	Movies/i-motion of QVGA size (can be displayed only on the i-motion folder)
VGA	Movies/i-motion data of VGA size (can be displayed only on the i-motion folder)
	Can be attached to i-mode mail (2M bytes or smaller)
	Can be inserted into Deco-mail
	Can be set to the screen
	Can be specified as Ring tone
	Can be transferred via Infrared data exchange and iC communication
	Can be copied to the microSD card
	Can be edited
	i-motion data that can be moved to the microSD card
	Larger than 10M bytes (10M bytes is not included) (can be displayed only on the microSD folder)

: Movable only when the FOMA card (UIM) being used was also used to save the i-motion

: Movable only when the model and FOMA card (UIM) being used were also used to save the i-motion

■File format

Folder	File format
My picture	
Inbox	JPEG, GIF, SWF
Camera	
Decomail-picture	
Decorate PI	JPEG, GIF
Pre-installed	JPEG, SWF
Secret	JPEG, GIF, SWF
User-created folder	
Original animation	—
microSD	JPEG, GIF, SWF
Frame	IFM
Stamp	
Music	
Playlist	—
Inbox	3GP
WMA	WMA
Movable contents	SB2
Pre-installed	3GP
User-created folder	
Music&Video Channel	
Delivery program	3GP, MP4
User-created folder	
i-motion	
Inbox	MP4
Camera	
Secret	
User-created folder	
microSD	MP4, ASF (ASF is for playback only)
Movable contents	SB1
Playlist	—
Melody	
Inbox	SMF, MFi
Pre-installed	MFi
User-created folder	SMF, MFi
Voice announce	—
microSD	SMF, MFi
Playlist	—
My document	
Inbox	PDF
User-created folder	
microSD	
Chara-den	
—	AFD

Continued on next page

Folder	File format
Kisekae Tool	
–	UCM, UCP
1Seg	
Image	JPEG
Video	MPEG2-TS
Document viewer	
microSD	Word, Excel, PowerPoint

■**Titles and file names**

- Still images or movies you shot are automatically titled and named.
  Title : yyyy/mm/dd hh:mm (Year/Month/Day Time*)
  File name : yyyymmddhhmmxxx
  Date and time*
  (3-digit number is added in the xxx part for still image)
  * : The time when the still image is saved or when the movie shooting is finished is used. Note that the time when the movie is saved is used if the "Auto save set" is set to "OFF".
- Original titles are assigned to downloaded i-motion and Chara-den characters.
- The file names and titles are the same for downloaded images.
- Titles and file names of videos or still images recorded with 1Seg→p.213
- The title is displayed on the Image list screen of the FOMA terminal.
- The file name is displayed when the data is transmitted to PC.
- If the file name contains an inappropriate character, the file is automatically renamed to "imagexxx" or "moviexxx".

■**File restriction**

This setting specifies whether you allow the receiver's FOMA terminal to redistribute (attach or forward) the image or movie you shot or melody when attaching it to a mail. When set to "File unrestricted", the receiver can redistribute the file freely. However, when set to "File restricted", the receiver cannot redistribute the file.

- You can change the file restriction setting after saving the image or movie.→pp.228, 234, 241

FUNC Image list screen (p.225) /My picture screen (p.226)

● The available functions vary depending on the folders, which means that the items listed in the function menu are different.

Edit image→p.231

Edit title*1……Edits the title of the image.
You can enter up to 9 double-byte or 18 single-byte characters (you can enter up to 18 double-byte or 36 single-byte characters for the microSD card.

Display image*1……Displays the image (displays the My picture screen).

Set as display……Sets the image for screens such as the standby screen.
"★" appears next to the selected item.
"Changing the Display"→p.88
"Setting an image to send"→p.67

Image info……File name and File save date and time are displayed.

Compose message*2……Composes an i-mode mail by selecting either attaching the still image or inserting it in the message.→p.230

iC transmission→p.259

Send Ir data • IrSS→p.258

Set image disp.*3……Sets the display size of images.

- **Normal** (default)……Displays the image in the actual size.
- **Fit in display**……Displays the image fit in the screen regardless of the image size.

Normal⇔Full screen*3……In the Full screen mode, the oblong image is displayed just as it is, and rectangular image rotates to the right 90 degrees and displayed. In the Normal mode, the oblong image or the rectangular image is displayed just as it is.

Add shortcut→p.94

Copy to microSD→p.248

Add image to PB……Saves the image to the phonebook.→p.71

Edit file name*1……Edits the file name of the image. You can enter up to 36 single-byte alphanumeric characters and symbols ("-" and "_" only).

File restriction*1……Specifies whether to allow the redistribution of the saved image.→p.228

Move*1……Selects from "Move this/Move selected/Move all" and moves the image to the other folder you select. "About multiple-choice"→p.38

Memory info*1……Displays the amount of image stored and available space (the amount of the data of the FOMA terminal does not contain the amount of the secret data).

Sort*1……Sorts images in a selected criteria.

Chg. list view⇔Chg. images view*1……Switches between list view and images view.

Composite image*1→p.230

Retry*3……Replays the displayed animation from the beginning.

Store in Center*1→p.229

Delete[*1]……Selects the deleting method from “Delete this/Delete selected/Delete all”.
“About multiple-choice”→p.38

Delete this[*3]……Deletes one image.

Keep in secret⇔Put out[*1*4]……“Preventing Others from Viewing Data”→p.104

Copy to phone[*5]→p.249

DPOF setting[*5]→p.252

Copy[*1*5]……“Copying the data to the different folder in the microSD card”→p.250

*1: Available only with the Image list screen.
*2: Not available when 2in1 is in B mode.
*3: Available only with the My picture screen.
*4: Available only in Secret or Secret data only mode.
*5: Available only for images stored on the microSD card.

NOTE

<Edit title>
- You may not be able to edit the title when the space is not enough on the microSD card.
- You cannot edit the titles of the pre-installed images.

<Set as display>
- You can set the images in Inbox, Camera or User-created folder to the following screens:
  - Stand-by display/Wake-up display
  - V.phone Dialing/V.phone Calling
  - Mail sending/Mail receiving/Check new messages/Mail rec’d result
  - On hold/Holding/Substitute image/Record message/Preparing/Voice memo for Videophone
- You cannot specify the following images to the screens:
  - An image whose width or height is larger than 854 dots
  - An image whose file size exceeds 100K bytes (except for standby and wake-up display)

<Normal/Full screen>
- In case of GIF animations and SWF Flash movies, the display does not change even if you switch the Normal mode and Full screen.

<Add image to PB>
- You can add an image whose size is 100K bytes or smaller and whose width or height is 854 dots or smaller.
- You cannot add images other than JPEG or GIF.

<Edit file name>
- You cannot edit the names of the following images:
  - Pre-installed images
  - A still image of Chara-den character with “Rec. File Restriction”
  - Images that is prohibited to be output from your FOMA terminal
- You cannot use single-byte spaces for file names.

<File restriction>
- You cannot change restrictions if it is:
  - Neither JPEG nor GIF
  - A still image of Chara-den character with “Rec. File Restriction”

NOTE

<Sort>
- “By source” sorts the images in the following order.
  - ① Downloaded images or images acquired from i-αppli or ToruCa
  - ② Still images shot by the camera
  - ③ Images retrieved using Infrared data exchange, iC communication or from microSD card, etc.
  - ④ Chara-den shots
  - ⑤ Images clipped out of PDF data
  - ⑥ Pre-installed images

● Storing images at the Data Security Center

You can store images, etc. stored in the FOMA terminal at the Data Security Center.
- Data Security Service is a pay service you need to apply for. If you have not subscribed to the service and try to connect to the Data Security Center, the notification screen appears.

1 Image list screen (p.225)▶✉ (FUNC)▶“Store in Center”▶Use ✣ to select an image▶i (Finish)
You can select up to 10 images.

2 Enter your security code▶“YES”
The FOMA terminal connects to the Data Security Center to start saving the images.

3 i (Finish)

NOTE
- You cannot save images when the file size for a image exceeds 100K bytes, when it is prohibited to be output from the FOMA terminal, pre-installed Deco-mail pictures or pictographs.

■To restore images

The image data stored at the Data Security Center can be stored on the FOMA terminal from the site of the Data Security Center. For details on how to use, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

● Attaching or inserting image to compose an i-mode mail or Deco-mail

You can attach the saved still image to an i-mode mail message or insert it in a Deco-mail message.

1 Image list screen (p.225)▶✉ (FUNC)▶"Compose message"▶Select any item:

Attach image……Attaches the image that is not larger than 240 dots wide × 320 dots high or 320 dots wide × 240 dots high. Select any of the following items to attach an image that is larger than the image described above.

- **Attach mail**……Attaches the image without changing the image size.
- **QVGA scale down**……Attaches image by reducing its image size to 240 dots wide × 320 dots high or 320 dots wide × 240 dots high or smaller without changing its aspect ratio.

Insert image……Inserts the image that is smaller than 96 dots wide × 128 dots high or 128 dots wide × 96 dots high and its file size is 90K bytes or less to the Deco-mail message. Select any of the following items to attach an image that is larger than the image described above.

- **Insert mail**……Inserts image by reducing its file size to 90K bytes or less without changing the image size.
- **SubQCIF scale down**……Inserts image by reducing its image size to 96 dots wide × 128 dots high or 128 dots wide × 96 dots high without changing its aspect ratio. Also, changes the file size if its file size is larger than the maximum.

2 Check the edited image▶● (Set)▶Compose message

■ When you select "Attach mail/Insert mail"

There is no checking operation of the image.

"Composing and Sending i-mode Mail"→p.156
"Composing Deco-mail"→p.158

● Making a composite image from 4 images

- You cannot specify images larger than 352 dots wide × 288 dots high or 288 dots wide × 352 dots high, except the following:
  - VGA (640 × 480), VGA V. (480 × 640)
  - Screen (240 × 427)
  - CIF V. (288 × 352)
  - QVGA V. (240 × 320)

1 Image list screen (p.225)▶✉ (FUNC)▶"Composite image"

2 Select the position▶Select a folder▶Select an image▶Repeat the step to select 4 images

■ To cancel the specified image

▶Select the image to cancel▶"Release this" on the folder selection screen

3 ▯ (Finish)▶● (Save)

■ To retry creating the composite image

▶▯ (Cancel)

Creating animations <Original animation>

You can create an animated cartoon made of up to 20 frames using stored images.

- You can specify JPEG images which are 854 dots wide × 854 dots high or smaller as an original animation.
- You can create up to 20 animations.

1 MENU▶"DATA BOX"▶"My picture"▶"Original animation"

The "Original animation list" screen appears.

Original animation list

Function menu➡p.231

2 "<New>"

3 Select a frame▶Select a folder▶Select an image▶Repeat the step to specify images

■ To cancel the specified image

▶Select the frame to cancel▶"Release this" on the folder selection screen

4 (Finish)

FUNC Original animation list screen (p.230)

Edit title……Edits the title of the original animation. You can enter up to 9 double-byte or 18 single-byte characters.

Org. animation……Newly creates Original animation when “<New>” is highlighted.
Edits the original animation when the existing one is highlighted.

Display image……Plays the original animation (Displays the original animation playback screen).

Set as display……Selects the item to which the original animation is set.

Image info……Checks the destination to save the original animation set in “Set as display”.
If there is no setting, “No set” is displayed.

Release animation……Cancels the original animation.

Playing the original animation

1 Original animation list screen (p.230)▶Select an original animation

The “Original animation playback” screen appears.
If there are two original animations or more, use to play the previous or next animation.

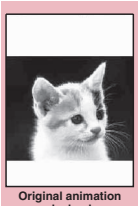

Original animation playback

Function menu➡p.231

FUNC Original animation playback screen (p.231)

Set as display……Selects the item to which the image is set.

Set image disp.……Specifies the display mode of an image smaller than the image display area.

- **Normal** (default)……Displays the image in the actual size.
- **Fit in display**……Enlarges the movie to the display size.

Retry……Plays the animation from the beginning.

Editing Images <Edit image>

You can edit the still images you shot, etc.

- The following are the contents and size you can edit:

[Frame]
- 854 × 480, 480 × 854 dots
- 640 × 480, 480 × 640 dots
- 352 × 288, 288 × 352 dots
- 320 × 240, 240 × 320 dots
- 427 × 240, 240 × 427 dots
- 176 × 144, 144 × 176 dots
- 128 × 96, 96 × 128 dots

[Image effect/Correct backlight/Refresh skin tone]
- Up to 854 × 480, 480 × 854 dots

[Image stamp/Character stamp/Trim away/Brightness/Rotate/Change size]
- 2,592 × 1,944, 1,944 × 2,592 dots
- 2,304 × 1,728, 1,728 × 2,304 dots
- 2,048 × 1,536, 1,536 × 2,048 dots
- 1,616 × 1,212, 1,212 × 1,616 dots
- 1,600 × 1,200, 1,200 × 1,600 dots
- 1,280 × 960, 960 × 1,280 dots
- Up to 854 × 480, 480 × 854 dots
  However, an image larger than 854 × 480 or 480 × 854 dots is scaled down to 640 × 480 or 480 × 640 dots before editing.

* Even if the image size is able to edit in the descriptions above, some image may not support editing function. You can edit only the image with “”. You cannot select the menu that cannot be edited.

- When “Edit image” is selected in the photo mode checking screen function menu, only the “Frame”, “Image effect”, “Refresh skin tone” and “Correct backlight” are available.

1 My picture screen (p.226)▶ (FUNC)▶“Edit image”▶Select any item:

Frame→p.232

Image effect……Applies effects to the image.

- **Sharp**……Sharpens the outline of the image.
- **Blur**……Softens the outline of the image.
- **Sepia**……Makes the sepia-tone image.
- **Emboss**……Brings out the image in relief.
- **Negative**……Makes the negative image.
- **Horizontal flip**……Reverses the left and right in the image (mirroring).

Image stamp→p.232

Character stamp→p.232

Continued on next page

Trim away……Trim a constant size.
▶**Select the image size for trimming**▶ **Adjust the position to trim with** ▶■ **(Set)**

Brightness……Selects the brightness in 5 levels from “-2 to ±0 to +2” using .

Rotate……Selects the angle to rotate the image from “90° to right/90° to left/180°”.

Change size……Selects the image size for changing. The image is enlarged or reduced to fit in the selected size keeping the aspect ratio.

Correct backlight……Makes the dark part clear, which is caused by the backlight.

Refresh skin tone……Corrects the skin parts.

Compose message[*1*2]→p.230

Save[*1]……Saves the edited image.

*1: This function is available after editing an image.
*2: Not available when 2in1 is in B mode.

2 Check the edited image▶■ (Set)

3 ■ (Save)▶“YES” or “NO”
Selecting “YES” overwrites the original image. Selecting “NO” saves a new image to the folder where the original is stored.

NOTE
- Editing repeatedly may impair the image quality or increase the file size.

Adding frames

- You can use the downloaded frames in addition to the pre-installed ones.

1 My picture screen (p.226)▶ (FUNC)▶“Edit image”▶“Frame”▶Select a frame
The image is displayed in the selected frame. Use to change to another frame.

■ **To rotate the frame 180°**
▶ (Rotate)

■ **To cancel the selected frame**
▶ (FUNC)▶“Cancel”

NOTE
- If the size of the image that has been trimmed or resized is the same as that of the frame, the image can be framed.

Pasting image stamps

- You can use downloaded image stamps in addition to pre-installed ones.
- You can rotate, enlarge or reduce image stamps.

1 My picture screen (p.226)▶ (FUNC)▶“Edit image”▶“Image stamp”▶Select an image stamp

■ **To edit an image stamp**
▶ (FUNC)▶Select any item:

90° to right……Rotates 90° clockwise.

90° to left……Rotates 90° counterclockwise.

180°……Rotates 180°.

Scale up……Doubles the size.

Scale down……Reduces the size to half.

2 Adjust the image stamp position with ▶■ (Put)

■ **To paste another image stamp**
▶ (Add)▶Repeat steps 1 to 2

NOTE
- You can only use downloaded stamps of 240 dots wide × 240 dots high or smaller. The stamps larger than the above size are handled as GIF images.

Pasting character stamps

- You can enter up to 15 double-byte or 30 single-byte characters as a stamp. The number of characters that can be entered differs depending on the image size and character size.
- You can change the character stamp color, font and size.

1 My picture screen (p.226)▶ (FUNC)▶“Edit image”▶“Character stamp”▶Enter characters

■ **To edit a character stamp**
▶ (FUNC)▶Select any item:

Character input……Enters the character.

Character color……Sets the color.
To use another color palette, press (Change).

Font type……Selects “Gothic” or “Ming-cho”.

Font size……Selects the size from “Enlargement size/Standard size/Reduction size”.

2 Adjust the character stamp position with ▶■ (Put)

NOTE
- The font thickness is specified in the “Font” setting.

Playing Movies/i-motion

<i-motion>

You can play movies you have shot and i-motion downloaded from i-mode sites or websites.

1 MENU ▶“DATA BOX”▶“i-motion”

The “Folder list” screen appears.
i-motion folder→p.224



Folder list

Function menu➡p.253

2 Select a folder

The “Movie list screen (Preview)” appears.
Movie list screen→p.233

Movie list (Preview)

Function menu➡p.233

■ **To search i-motion by i-mode**

▶“Search by i-mode”▶“YES”

■ **For partly downloaded i-motion**

A confirmation message about downloading the remaining data appears. You cannot play the i-motion unless you download the rest of the data.

- Selecting “YES” starts downloading of the rest of the data.
- Selecting “NO” redisplays the “Movie list” screen.

3 Select a movie

The “Music Player” screen appears and the movie playback starts.
“Guide to Music Player” screen→p.277
“Operations on the Music Player” screen→p.278

NOTE

- Movies transmitted from blu-ray disc recorder can be played. For details, visit the following website:
  http://www.sonyericsson.co.jp/so706i/bd.html
- A movie may not be properly played if it was not shot with FOMA SO706i.
- You can start playback from the point the playback was stopped last time when you receive a call during playback or when the playback is stopped by CLR or ☎. However, the playback may not start the precise point the playback was stopped last time.

NOTE

- For some i-motion, you can also select a chapter to play.

Guide to the preview/list view

- The icons for image types, retrieval methods and the available settings→p.226
- Titles and file names→p.228

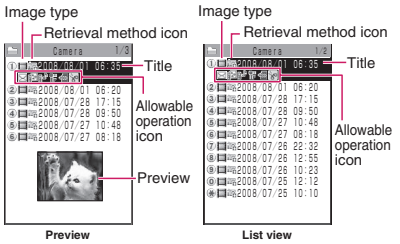

■ **Preview**

The screen lists 6 movies and displays a preview image of the highlighted movie under the list. Preview images are not displayed for movies with no video such as a sound only i-motion (an i-motion with no video, such as a singer’s voice).

■ **List view**

11 movies are listed on the screen.

FUNC Movie list screen (p.233)

- The available functions vary depending on the folders, which means that the items listed in the function menu are different.

Edit movie→p.235

Edit title……Edits the movie title.
You can enter up to 9 double-byte or 18 single-byte characters (You can enter up to 18 double-byte or 36 single-byte characters for the microSD card).

Select ring tone……Sets the movie sound as a ring tone.→p.82

Stand-by display……Sets the movie to the standby screen.

i-motion info……Displays an i-motion file name, a file save date and whether the i-motion can be moved to the microSD card.

Compose message[*1]……Composes an i-mode mail message with the movie attached.→p.156

iC transmission→p.259

Send Ir data→p.258

Continued on next page

Copy to microSD→p.248

Move to microSD→p.250

Move……Selects from “Move this/Move selected/Move all” and moves the movie to the other folder you select. “About multiple-choice”→p.38

Add shortcut→p.94

Edit file name……Edits the file name of the movie. You can enter up to 36 single-byte alphanumeric characters and symbols (“-” and “_” only).

File restriction……Specifies whether to allow the redistribution of the saved movie. “File restriction”→p.228

Reset title……Resets the title to the default.

Memory info……Displays the amount of movie stored and available space (the amount of the data of the FOMA terminal does not contain the amount of the secret data).

Sort……Sorts the movies in a selected criteria.

List setting……Specifies how to list the movies. The displayed menu differs on the FOMA terminal and microSD card.

Delete……Selects the deleting method from “Delete this/Delete selected/Delete all”.
“About multiple-choice”→p.38

Keep in secret⇔**Put out***2……“Preventing Others from Viewing Data”→p.104

Copy to phone*3→p.249

Move to phone*4→p.250

Copy*3……“Copying the data to the different folder in the microSD card”→p.250

*1: Not available when 2in1 is in B mode.
*2: Available only in Secret or Secret data only mode.
*3: Available only for movies stored on the microSD card.
*4: Available only for movies stored on the movable contents folder.

NOTE

<Select ring tone>
- You can only set a movie or i-motion with the Set as ring tone “Available”. Refer to the “i-motion info” to check whether it is “Available” or “Unavailable”.
- You cannot set the following movie or i-motion to the ring tone:
  - A movie or i-motion without audio
  - i-motion with the playback restriction
  - The size of the movie/i-motion is larger than QVGA (320 × 240) and smaller than VGA (640 × 480)
- If a movie larger than VGA (640 × 480) is set as a ring tone, an i-motion image does not appear on the screen.

NOTE

<Stand-by display>
- You cannot set the movie to the standby screen when:
  - The movie or i-motion is voice only
  - i-motion with the playback restriction
  - The size of the movie is larger than QVGA (320 × 240)

<Memory info>
- The displayed file size is only an approximation.

<Sort>
- “By source” sorts the images in the following order. Movies or i-motion with the same retrieval icon are arranged in the order in which they were displayed before you selected “By source”.
  - ① Downloaded i-motion or i-motion retrieved from i-αppli, etc.
  - ② Movies shot by camera
  - ③ Movies retrieved using Infrared data exchange, iC communication or from microSD card, etc.
  - ④ Chara-den shots

● Playing movies in your preferred order <Play movie playlist>

You can select and store up to 25 movies or i-motion to play multiple movies in sequence.
- There are 5 Playlist folders.

1 Folder list screen (p.233)▶Select “Playlist”

The “Playlist folder list” screen appears.

Playlist folder list
Function menu➡p.235

2 Highlight the destination playlist folder▶✉ (FUNC)▶“Edit playlist”

3 Select No. for the movie▶Select a folder▶Select a movie ▶Repeat steps to add

■ **To release the added movie**
▶Select the movie to release▶Select “Release this” on the folder selection screen▶“YES”

4 i (Finish)

The i-motion Playlist folder list screen appears. Selecting the Playlist folder starts the playback of the playlist and the stored movie is played repeatedly.

FUNC Playlist folder list screen (p.234)

Edit playlist……Starts editing the playlist. You can edit a playlist which is already set.

Release playlist……Deletes the set movies and releases a playlist.

Editing Movies <Edit movie>

● You can edit the movies with "✂" only.

<Example: Movie list screen for Inbox, Camera or User-created folders>

1 Movie list screen (p.233)▶✉ (FUNC)▶"Edit movie"

The "Edit movie" screen appears.

Edit movie

2 ✉ (FUNC)▶Select any item:

Trim i-motion→p.235

Compose message*……Composes an i-mode mail with the movie attached.

File restriction……Specifies whether to allow the redistribution of the trimmed movie with "Trim i-motion". "File restriction"→p.228

* : Not available when 2in1 is in B mode.

NOTE

- You cannot use the Multitask function while editing movies.
- Editing may impair the movie quality.

● Trimming a part of the movie

1 Edit movie screen (p.235)▶✉ (FUNC)▶"Trim i-motion"

2 "Any size" or "500KB"▶i (Start)

Trimming starts.

■ **To start trimming at a scene mid-way through the movie**

▶■ (Play)▶Press ■ (Stop) when it is the first frame you want to trim▶i (Start)

3 Press ■ (Stop) when it is the last frame you want to trim▶i (End)

■ **When you select "500KB"**

Trimming automatically stops once the trimmed size reaches 500K bytes.

4 The trimmed section of the movie is played

The playback stops automatically when it ends.

5 ■ (Set)▶■ (Save)▶"YES"

NOTE

- A movie whose size is larger than QCIF (176 × 144) cannot be trimmed away.

Playing Video <Video player>

Use the Video Player to play videos recorded from 1Seg.

1 MENU▶"DATA BOX"▶"1Seg"▶"Video"

The "Folder list" screen appears.
Contents in the Video folder →p.225

Folder list

2 Select the microSD folder

The "Video list" screen appears.
Guide to the Video list screen→p.236

Video list (Preview)
Function menu➡p.236

3 Select the video

The "Video play" screen appears and video playback starts.
"Operation during the Video playback"→p.237

Video playback
Function menu➡p.237

NOTE

- Some types of video may not be played to the end.

Guide to the preview/list view

- Image type icons and retrieval method icons →p.226
- Titles and file names→p.213

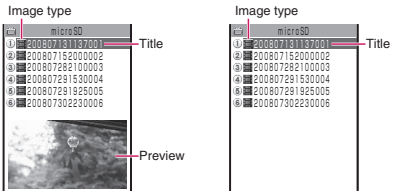

Preview　　List view

■Preview

The screen lists 7 movies and displays a preview image of the highlighted movie under the list.

■List view

12 images are listed on the screen.

FUNC Video list screen (p.235)

Edit title……Edits the video title.

Show info……Displays the video program name, date and time of recording, etc.

Delete this/Delete all……Select the deletion method.

Multiple-choice……Delete multiple videos.

Check memory……Displays the video storage capacity.

Switch list……Specifies how to display the video list screen.

Initialize title……Resets the title to the default.

Guide to the video player screen

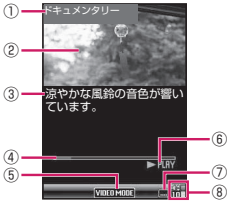

Portrait display

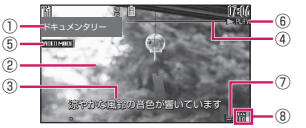

Landscape display

① Program title
② Image
③ Subtitles
④ Play position indication

The current playback position is indicated with a marker. Selecting “Position to play” from the Function menu and moving the marker with ◎ and pressing ■ (Set) during pause starts playback from the position.

⑤ VIDEO MODE fixed display
⑥ Playback status
PLAY: During playback
PAUSE: During pause
×1.3: Quick view (x1.3)
⑦ Subtitles on/off
“” is displayed if there are subtitles.
⑧ Volume
Indicates volume level from 0 to 20.

Operation during video playback

Key press	Operation
■ 9 (1 second or longer)	Switch screen directions In order of “Portrait” → “Wide (90° right)” → “Wide (90° left)”
●	Pause/Resume playback
ch	Mute
▲ (▲マナー)/ ▼ (▼メモ))	Adjust volume
▶	Return to fast forward playback at 1.3×/normal playback (During pause) Frame forward
◀	Return to fast forward playback at 1.3×/normal playback
◀ (1 second or longer)	30-second skip backward
▶ (1 second or longer)	30-second skip forward
↷ (1 second or longer)	Turn subtitles on/off
CLR	Stops playback

FUNC Video playback screen (p.235)

Show information……Displays the video program name, date and time of recording, etc.

Subtitles*……Sets whether to display subtitles.

- **ON (Wide:Bottom)** (default)……Displays subtitles at the bottom of the video playback screen.
- **ON (Wide:Top)**……Displays subtitles at the top of the video playback screen.
- **OFF**……No subtitle display.

Play……Plays at normal speed.

Quick view (×1.3)……Fast play at 1.3x speed.

Stop……Ends playback.

Location……Use ▶ to adjust and select the play position.

Main/Sub setting……Sets the audio output method.

- **Main sound** (default)……Outputs main sound only.
- **Sub sound**……Outputs secondary sound only.
- **Main+sub sound**……Outputs both primary and secondary sound.

Icon show(Wide)* (default: Show always)……Set whether to always or temporarily show icons such as playback position in landscape display.

*: This setting is also applied to the equivalent 1Seg functions.

NOTE

- The function menu is available only when playback is paused.

<Quick view (×1.3)>

- Sound may hardly be heard during quick view.

What is Chara-den?

You can send a cartoon character to your party's FOMA terminal in a videophone call instead of the image from your own FOMA terminal camera.

Displaying Chara-den

- Downloading “Chara-den” characters→p.146

1 MENU▶**“DATA BOX”**▶**“Chara-den”**

The “Chara-den list” screen appears.

Chara-den list

Function menu➡p.238

2 **Select Chara-den**

The “Chara-den player” screen appears.

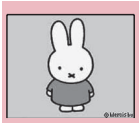

Chara-den

Function menu➡p.238

Illustrations Dick Bruna
© copyright Mercis bv, 1953-2008
www.miffy.com

Guide to the Chara-den list

- The icons for image types, retrieval methods and the available settings→p.226
- Titles and file names→p.228

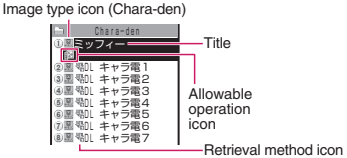

Using Chara-den characters

This function allows you to play a Chara-den character by selecting from pre-installed actions.

1 Chara-den player screen (p.237)▶ Using Chara-den characters

■ To check the action list

▶[*]

The actions displayed in the list differ depending on the type of character.

The number such as “1” or “#1” displayed on the right of the action indicates that pressing that key during the Chara-den playback will perform the corresponding action.

<To check the action details>

▶Highlight the action▶[i] (Detail)▶Check the details▶[✉] (Exit)

■ To change the Action mode

▶[i] (Parts/Whole)

This command switches to Parts action mode when [image_ref id="1" box="0.151,0.376,0.181,0.400" /] is displayed and to Whole action mode when [image_ref id="2" box="0.199,0.376,0.230,0.400" /] is displayed.

[image_ref id="3" box="0.103,0.400,0.133,0.424" /] (Whole): The action mode in which the entire Chara-den character moves to express feelings.

[image_ref id="4" box="0.103,0.424,0.133,0.448" /] (Parts): The action mode in which the parts of the Chara-den character (head, hands, feet, etc.) move.

■ To use the keypad to select actions during the Chara-den playback

The keypad keys that can be pressed to make the displayed character perform actions are as follows:

“Whole”: 1 digit number on the right side of the action name ([1] to [9]) or [#][1] to [#][9]

“Parts”: 2 digit number on the right side of the action name ([1][1] to [9][9])

<Example: To select “おやすみ” (Good night) in Whole action mode>

* The Chara-den is displayed normally (not in mirror).

[i] (Whole) ➡ [image_ref id="5" box="0.141,0.793,0.280,0.871" /] [8] ➡ [image_ref id="6" box="0.349,0.793,0.488,0.871" /]

Illustrations Dick Bruna © copyright Mercis bv,1953-2008
www.miffy.com

■ To have the character’s mouth synchronize your voice

Some Chara-den characters can move the mouth synchronizing your voice as if it is talking. If you use the Function menu or press the key to make the character perform an action, the character performs the selected action rather than moving its mouth.

FUNC Chara-den list screen (p.237)/ Chara-den player screen (p.237)

Chara-den call……Makes a videophone call with the Chara-den character as the substitute image.
Use [✉] to search for a phone number from the Received calls, Redial or phonebook on the Chara-den dialing screen.

Substitute image……Sets the Chara-den character as the substitute image for videophone calls.

Rec. Chara-den→p.239

Edit title*1……Edits the title of the Chara-den.
You can enter up to 18 double-byte or 36 single-byte characters.

Switch Chara-den*2……Selects the Chara-den to display.

Action List*2……Displays the Action list.

Change Action*2……Changes the Action mode.

Chara-den info……Cara-den file name and file save date and time are displayed.

Memory info*1……Displays the amount of the stored Chara-den.

Add shortcut→p.94

Set image disp.

- **Normal**……Displays the image in the actual size.
- **Fit in display** (default)……Enlarges the image to the display size.

Reset title*1……Resets the title to the default.

Delete*1……Selects the deleting method from “Delete this/Delete selected/Delete all”.
“About multiple-choice”→p.38

*1: Available only with the Chara-den list screen.
*2: Available only with the Chara-den player screen.

Saving Chara-den character as Image or Movie <Rec. Chara-den>

■Guide to the Rec. Chara-den screen

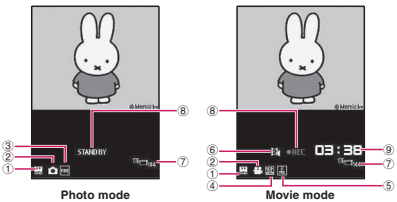

①Currently selected action mode
: Whole
: Parts
②Shooting mode
: Photo mode
: Movie mode
③Setting of “Storage setting” (Image)
: Normal
: Fine
: Super Fine
④Setting of “Storage setting” (Movie)
: Normal
: Prefer img qual
: Prefer time
: Prefer motion spd
⑤Setting of “File size setting”
: 500KB
: 2MB
⑥Setting of “Movie type set”
: Video + voice
: Video
⑦Indicates the size selected in “Select size”
: QCIF (176 × 144)
: Small (117 × 96)
⑧Shooting status
STANDBY: Standby
●REC: Shooting
⑨Remaining shooting time in the “min:sec” format (not displayed until shooting starts)

● Shooting Still Images

1 Chara-den player screen (p.237)▶ [✉] (FUNC)▶“Rec. Chara-den”

The “Rec. Chara-den (image)” screen appears.

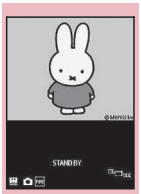

Rec. Chara-den (image)
Function menu➡p.240

2 Perform an action▶ [■] (Record)

Operation of actions →p.238

■ **To perform a Parts action**
▶[i] (Parts)

■ **To compose an i-mode message with a shot image attached/ inserted**
▶[i] (MAIL)▶“Attach image” or “Insert image”

■ **To retake the shot**
▶[CLR]

3 [■] (Save)

The shot image is saved to the Camera folder under My picture.

● Shooting movies

1 Rec. Chara-den (image) screen (p.239)▶[✉] (FUNC)▶“Movie mode”

The “Rec. Chara-den (movie)” screen appears.

Rec. Chara-den (movie)
Function menu➡p.240

2 [■] (Record)▶ Perform an action

Operation of actions →p.238

■ **To perform a Parts action**
▶[i] (Parts)

3 [■] (Stop)

■ **To compose an i-mode message with the recorded movie attached**
▶[i] (MAIL)

■ **To check the movie**
▶[✉] (FUNC)▶“Check w/ playing”

■ **To retake the shot**
▶[CLR]

4 [■] (Save)

The movie is saved to the Camera folder under i-motion.

Illustrations Dick Bruna © copyright Mercis bv,1953-2008
www.miffy.com

Continued on next page

NOTE

- The image size (QCIF (176 × 144)) cannot be changed.
- Performing an action during shooting may record keypad sounds.

FUNC Rec. Chara-den screen (p.239)

Switch Chara-den……Changes a Chara-den character to shoot.

Substitute image……Sets the Chara-den character as the substitute image for videophone calls.

Action List……Displays the Action list.

Change Action……Changes the Action mode.

Set image disp.

- **Normal**……Displays the image in the actual size.
- **Fit in display** (default)……Enlarges the image to the display size.

Movie mode⇔Photo mode……Switches between Movie mode and Photo mode.

Select size[*1]……Sets the size of character to shoot. Numbers in parentheses displayed in the menu is the size in dots (width × height).

Movie type set[*2]

- **Video + voice** (default)……Shoots a movie including sound.
- **Video**……Shoots a movie without any voice.

Storage setting[*2]

- **Normal** (default)……Shoots a movie with the normal quality and duration.
- **Prefer img qual**……Select this option to shoot a movie with higher quality. The available shooting time is shorter than for Normal.
- **Prefer time**……Select this option to shoot a long movie. The quality is not as high as for Normal.
- **Prefer motion spd**……Select this option to shoot a movie with smoother motion.

Storage setting[*1]……Selects the quality for image shooting from “Normal/Fine/Super Fine”.

File size setting[*2]

- **500KB**……You can shoot up to 500K bytes.
- **2MB** (default)……You can shoot up to 2M bytes.

*1: Available only in the Photo mode.
*2: Available only in the Movie mode.

NOTE

<Switch Chara-den>

- Changing a Chara-den character sets the action mode to Whole.

Playing Melodies <Melody>

You can play the pre-installed melodies, sound effects or the melodies downloaded from the sites in the “Melody” folder of Data Box.

1 MENU▶“DATA BOX”▶“Melody”

The “Folder list” screen appears.
Contents in the Melody folder→p.225

Folder list
Function menu➡p.253

2 Select a folder

The “Melody list” screen appears.
Guide to the melody list →p.241

■ **To search melody by i-mode**
▶“Search by i-mode”
▶ “YES”

Melody list
Function menu➡p.241

3 Select a melody

The “Melody” screen appears and the melody playback begins.
“Operation during the melody playback”→p.241

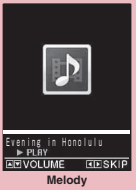

Melody
Function menu➡p.241

NOTE

- Melodies are played at the volume set in “Phone” under the “Ring volume” settings (played at “Level 2” when “Silent” or “Step” is set).
- Playback illumination pattern is “Melody linked” (if Melody linked is not registered, “Flash” applies).

Guide to the Melody list

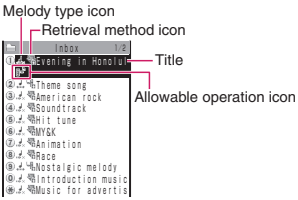

■Melody type icon

Icon	Description
	MFi/SMF melody

: Data that are file-restricted or not allowed to be attached to mails or output from the FOMA terminal

■Retrieval method icon

Icon	Description
No icon	Pre-installed melody
	Melody downloaded from sites
	Melody retrieved through the Infrared data exchange, iC communication, microSD card, Bar code reader or PC

■Allowable operation icon

Icon	Description
	Can be attached to i-mode mail (2M bytes or smaller)
	Can be specified as Ring tone
	Can be transmitted via infrared data exchange or iC communication
	Can be copied to the microSD card

■Titles and file names

Original titles are assigned to downloaded melodies. The title is listed on the Melody list screen of the FOMA terminal.

The file name is displayed when the data is transmitted to PC.

If the file name contains an inappropriate character, it is turned to “melodyxxx” (xxx: 3-digit number).

The 3-digit number at the end of the file name is a serial number assigned to distinguish the file from other files.

Operation during the melody playback

You can use the following operations during the melody playback:

Key operation	Operation
	Plays the previous or next melody
(▲マナー), (▼メモ)	Adjusting the volume*
0 to 9, ＊, ＃, , , , ch	Stops the playback
CLR	Ends

* : When the melody is finished, the volume is restored to the level specified in “Ring volume”.

FUNC Melody list screen (p.240)/ Melody screen (p.240)

- The function menu varies depending on the folder containing the melody.

Edit title*1……Edits the title of the melody. You can enter up to 25 double-byte or 50 single-byte characters.

Edit file name*1……Edits the file name of the melody. You can enter up to 36 single-byte alphanumeric characters and symbols (“-” and “_” only).

Play melody*1……Plays the melody (Displays Melody screen).

Ring tone……Selects the item to which the melody is set.

File restriction*1……Specifies whether to allow the redistribution of the saved melody. →p.228

Set repeat play*2……Repeats the playback of the melody in the same folder.

Add shortcut →p.94

Compose message*3……Composes an i-mode mail with the melody attached. →p.156

iC transmission*1 →p.259

Send Ir data*1 →p.258

Copy to microSD →p.248

Copy to phone*4 →p.249

Melody info……Melody file name and file save date and time are displayed.

Memory info*1……Displays the amount of the stored melody.

Copy*4……“Copying the data to the different folder in the microSD card” →p.250

Reset title*1……Resets the title to the default.

Continued on next page

Sort[*1]……Sorts melodies in a selected criteria.

Move[*1]……Selects from “Move this/Move selected/Move all” and moves the melody to the other folder you select.
“About multiple-choice”→p.38

Delete[*1]……Selects the deleting method from “Delete this/Delete selected/Delete all”.
“About multiple-choice”→p.38

*1: Available only with the melody list screen.
*2: Available only with the melody screen.
*3: Not available when 2in1 is in B mode.
*4: Available only for melodies stored on the microSD card.

NOTE

<Edit file name>
- You cannot edit the file name of the file-restricted melody. However, you can edit the file name of the melody received by the Infrared data exchange, iC communication or OBEX™ connection.

<Ring tone>
- Some melodies may have restrictions so that only a designated part of the melody will be played. When such melodies are set as a ring tone, only the designated part can be played. Play the melody from the Melody in Data Box to play all the parts of the melody.

<Sort>
- “By source” sorts the melodies in the following order. Melodies with the same retrieval icon are arranged in the order in which they were displayed before you selected “By source”:
  ①Melody downloaded from website or melody retrieved from i-αppli
  ②Melodies retrieved using Infrared data exchange, iC communication or from microSD card, etc.

● Playing melodies in your preferred order
<Melody play playlist>

You can select and register up to 10 melodies, and play them in sequence.

1 Folder list screen (p.240)▶Highlight “Playlist”▶✉ (FUNC)▶“Edit playlist”▶Select the number to which the melody is to be added▶Select a folder▶Select a melody▶Repeat the procedure

■ **To release the added melody**
▶Select the melody to release▶Select “Release this” on the folder selection screen

2 i (Finish)
The “Folder list” screen appears.
Selecting the Playlist folder starts the playback of the playlist and the stored melodies are played repeatedly.

NOTE
- The playlist playback is canceled if the registered melody titles or file names are changed or the data is deleted.

Managing Kisekae Tool
<Kisekae Tool>

Check the packages of Kisekae Tool downloaded from sites.
- “ダイレクトメニュー” and “ミッフィー” are stored at the time of purchase.
- Downloading from sites→p.146

1 MENU▶“DATA BOX”▶“Kisekae Tool”
The “Package list” screen appears.
Package list screen→p.243



Package list
Function menu➡p.243

■ **To search packages by i-mode**
▶“Search by i-mode”▶“YES”

2 Select a package

■ **To set the package**
▶✉ (FUNC)▶“Set all”
Kisekae Tool package settings→p.97

■ **When you select a partially downloaded package**
When you attempt to open a partially downloaded package, due to interruption at data acquisition, etc., a message appears asking whether to download the remaining data. To download the remaining data, follow the message to download the data.
When the remaining data is downloaded, the partially downloaded data will be deleted. If the remaining data is invalid, the data downloading cannot be completed. However, if you download the data in this case, partially stored invalid data will be deleted.

NOTE
- Sound-related items such as ring tone are played at the volume set in “Ring volume” while checking (Played at “level 2” when set to “Step”, and no sound when set to “Silent”).
  However, i-motion sounds at “Level 2” when set to “Silent”.

Guide to the package list

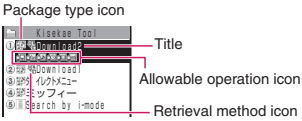

■Package type icon

Icon	Description
	All the data have been downloaded
	Only a part of the data has been downloaded
	Subject to the FOMA card security function

■Retrieval method icon

Icon	Description
No icon	Pre-installed Data
	Downloaded data

■Allowable operation icon

Icon	Description
	Standby screen, wake-up display
	Dialing screen, etc. (other than standby screen and Wake-up display)
	Ring tone or clock alarm tone
	Menu*
	Background on the Music Player screen
	Clock display
	Color pattern
	Icons such as battery icon

* : “ ” also appears if the package contains large-font menu.

FUNC Package list screen (p.242)

Set all……Sets the Kisekae Tool.→p.97

Edit title……Edits the package title.
You can enter up to 10 double-byte or 20 single-byte characters.

Kisekae Tool info……Package file name and file save date and time are displayed.

Reset title……Resets the title to the default.

Reset screen/sound……Resets the items that can be set all at once to the default (p.97).

Memory info……Displays the amount of the stored Kisekae Tool.

Sort……Sorts packages by the specified criteria.

Delete……Selects the deleting method from “Delete this/Delete selected/Delete all”.
“About multiple-choice”→p.38

microSD Card

FOMA SO706i supports microSD cards with up to 2G-byte (commercially available) (As of May, 2008). Visit the following website for the latest operation check information such as the manufacturer or the capacity of the microSD card. Note that the microSD card which is not listed on the website may not be operated on the FOMA terminal.

- i-mode: “PlayNow” by SO
  (As of May, 2008)
  “iMenu”▶“メニューリスト” (Menu List)▶“ケータイ電話メーカー” (Mobile phone manufacturer)▶“PlayNow by SO”
  QR code on the right is also available to select displayed URL and access the site.
- PC (Japanese):
  Sony Ericsson Mobile Communications
  http://www.SonyEricsson.co.jp/memorycard/
  Note that the information on the website is only the result of the operation check and does not guarantee all the operations.

Notes on handling

* Make sure to format the microSD card on the FOMA SO706i. You may not be able to use the microSD card formatted on the other terminal or PC.→p.251

- Insert or remove the microSD card after turning off the FOMA terminal.
- Do not paste a label or sticker on the microSD card.
- It is your responsibility to keep a separate record of all data saved on the microSD card. Under no circumstances shall NTT DOCOMO be liable for any loss or alternation to the saved data.

Inserting/removing the microSD card

Insert or remove the microSD card after turning off the FOMA terminal.

1 Open the cap of the microSD card slot

2 Insert the microSD card into the microSD card slot and push it until it locks into the place

Insert the microSD card straight and slowly with the printed side up.

When fully inserted, the card is locked in the place.

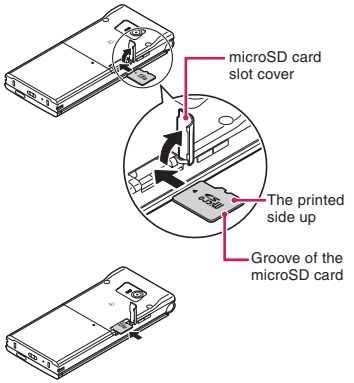

■ **To remove the card**

When you push the microSD card in and release, the card pops up slightly.

* Note that the card may fly out of the slot.

Grip the groove of the microSD card and slowly pull the card out.

3 Close the cap of the microSD card slot

When you turn on the FOMA terminal after inserting the microSD card, "SD" appears.

NOTE

- Do not insert or remove the microSD card with the FOMA terminal turned on. Doing so may damage the microSD card or the data on the card.
- Note that the microSD card may fly out of the slot when inserting or removing the microSD card.
- When you remove the microSD card, make sure to keep the card in the supplied protective case. You may not be able to use the microSD card if the card is kept in different protective case.
- Make sure to insert or remove the microSD card straightly in the right direction (inserting the microSD card at an angle may damage the card).

NOTE

- It may take long to read or write data for the first time after the microSD card is inserted.

Folder tree on the microSD Card

When you copy the data from the FOMA terminal to the microSD card, folders are created as shown in the **Table 1** (p.245) and the data are stored on the respective folders. The folder name and file names are set automatically as shown in the **Table 1**.

- When the data is copied from a PC to the microSD card, the folder structure and file name shown in the **Table 1** (p.245) are needed.

NOTE

- When you copy multiple data to the SD_PIM folder, the data is automatically named with year/month/day/hour/minute (yyyy/mm/dd hh:mm).
- You can save a movie with video from a PC to the MMFILE folder, but you cannot play the movie on the FOMA terminal.
- A file edited on a PC then saved to the microSD card may not be displayed or played correctly on the FOMA SO706i if you use characters different from the folder/file names shown in Table 1 (p.245).
- File names of PDF data/documents copied to a microSD card remain unchanged (up to single-byte 59 characters/double-byte 29 characters). If a file name is the same as that of an existing file stored in the microSD card, a 3-digit number will be added to the original file name.
- When the microSD card is formatted and SDVIDEO.DAT, MMFILE.DAT or DCIM.DAT file is deleted, the settings of the destination folder are canceled. In this case, reset the setting of "Select to save".
- Do not delete or move folders in the microSD card on a PC. Doing so may prevent FOMA SO706i from reading the microSD card.
- You may not be able to display or play the data on the microSD card stored from the other device. Also, you may not be able to display or play the data on the microSD card stored from the FOMA terminal on the other device.
- Before purchasing the microSD card reader/writer or PC card adapter, ask the manufacturer of the microSD card if it is available for the FOMA SO706i.

(Table 1) Folder tree on the microSD Card and storage file (Enclosed in parentheses are file extensions)

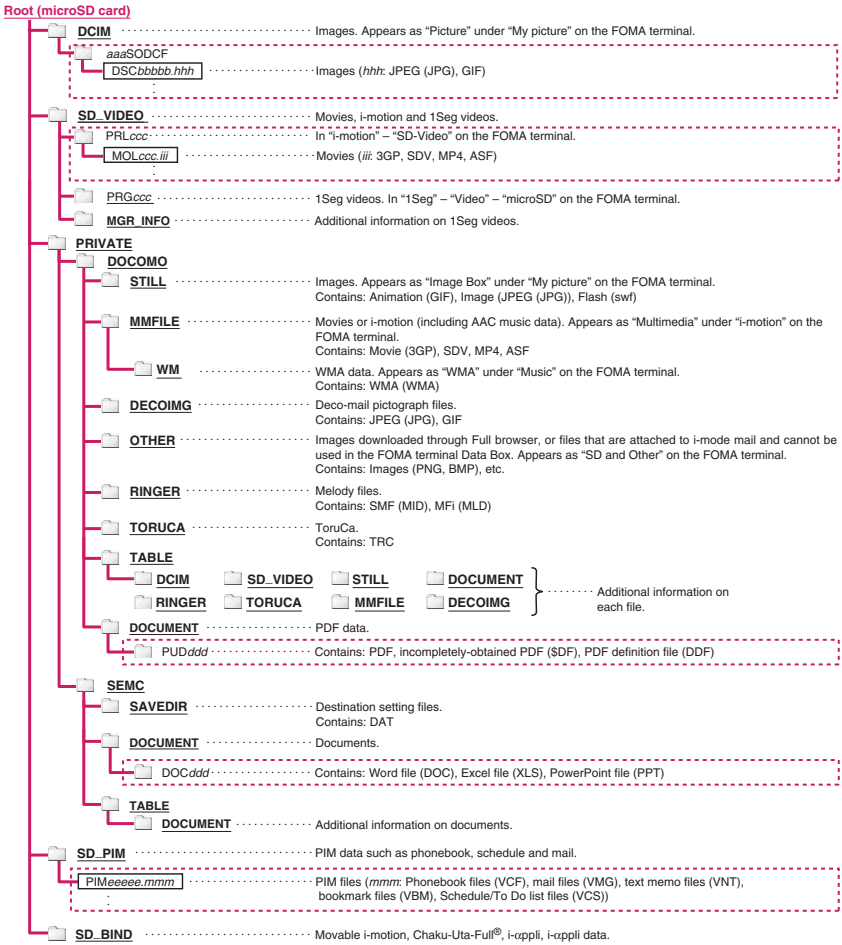

* Alphabets in italic that is no explanation in table mean following single-byte numbers.
aaa: 100 to 999 *bbbbb*: 00001 to 09999 *ddd*: 001 to 999 *eeeee*: 00001 to 65535 (Decimal numbers)
ccc: 001 to FFF (hexadecimal numbers)

* When you store the data on the microSD card from a PC and edit the data on the microSD card, follow the instructions of [ ]. The data may not be displayed or played correctly if you use wrong characters.

● Number of files that can be stored on the microSD card

The number of files that can be stored on the microSD card varies depending on the memory capacity of the microSD card. The maximum number of files that can be stored in 1 folder and the maximum number of folders are as follows:

Folder name	Maximum number of folders	Maximum number of files that can be stored in 1 folder
DCIM	900	9,999
PRL	4,095	4,095
PRG	99	4
SD_PIM	1	65,535
STILL	999	9,999
MMFILE	999	9,999
DECOIMG	999	9,999
OTHER	999	999
RINGER	999	9,999
TORUCA	999	999
DOCUMENT	999	999

- You can save more files by adding folders and changing the location to copy. However, you may not be able to store the data to the maximum number depending on the file size.
- You can not copy or move the data when the space is not enough on the microSD card.
- When the microSD card is full, you cannot add folders or edit titles for still image, image, movies or i-motion.
- Music data cannot move from the FOMA terminal to the microSD card.
- If the number of files in the destination folder has reached the maximum, a new folder is automatically created and data will be saved to the new folder (except SD-PIM). However, a folder is not automatically created when taking a picture with Camera and saving directly to a microSD card.

Data that can be exchanged between the FOMA terminal and the microSD card

■PIM data

Data type	Details
Phonebook	Name, Reading, Phone number, Mail address, Memo, Address, Birthday, Image, Memory number*1, Secret store*2*3, Group number*3, Group name*3, Phonebook 2in1 setting
Schedule	Date (from), Date (to), Summary, Contents, Secret store*2*3, category*4, Alarm, Repeat
To Do list	Contents, Category*5, Completion date, Period, Change status, Priority, Alarm
Text memo	Make date, Last modify date, Category, Contents
Received mail*6, Sent mail*6, Draft mail	Unread/Read, Message type, Saved in, Sender, Receiver, Title, Receive/Send date, Message, Attach, 2in1 setting
Bookmark*6*7	URL, Title

*1: May be assigned to the available number to copy and add.
*2: Secret store indicated whether the data is stored as a secret data.
*3: Can be copied by “Copy all”.
*4: Category is the icon information set in the schedule.
*5: Category is the category set in the To Do list.
*6: Folders (folder names) can be transferred by copying all the received mails, sent mails or bookmarks.
*7: When copied from the microSD card to the FOMA terminal, i-mode bookmarks are stored in the “Bookmark” folder of “i-mode menu”. Full Browser bookmarks are saved to the “Bookmark” folder under “Full Browser”.

■Data in the Data Box

Data type	Details
Still image	JPEG, GIF and SWF data in the Inbox, Camera, Decomail-picture, Decorate PI, microSD or user created folder
Movie	MP4 data in the Inbox, Camera, microSD or user created folder
Melody	MFi/SMF melody in the Inbox, microSD or user created folder
PDF data	PDF data in the Inbox, microSD or user-created folder

■Other data

Data type	Details
ToruCa	ToruCa in the ToruCa, microSD or user created folder

NOTE

- If a schedule with a user icon is copied, the “Category” information is not copied.
- You cannot copy while microSD card being accessed.

Displaying the Data in the microSD Card

Displaying the PIM data on the microSD card <microSD manager>

You can display the PIM data such as phonebook, schedule, mail or bookmarks on the microSD card.

1 MENU ▶ **“LIFEKIT”** ▶ **“microSD manager”**

The “Categories” screen appears.

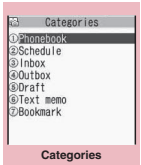

Categories

Function menu➡p.247

2 **Select an item**

The “File list” screen appears.



File list

Function menu➡p.248

3 **Select a file**

The “Data list” screen appears.

Data list

Function menu➡p.248

4 **Select a data**

The “Data detail” screen appears.

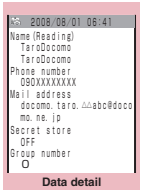

Data detail

Function menu➡p.248

NOTE

- While running microSD manager or displaying the data details, you cannot launch another function.
- “ ” appears for a bookmark added on the i-mode browser screen, and “ ” for the one added on the Full Browser screen.

NOTE

- Deco-mail appears without decorations.

FUNC Categories screen (p.247)

microSD info➡p.251

Copy from phone……Copies all the item data to the microSD card.

- For “Schedule”, you can select from “Schedule/To Do list/All”.
- For “Bookmark”, you can select from “i-mode brow./Full Brow./All”.

microSD format➡p.251

Check microSD……Checks the microSD card and fixes errors.

NOTE

<Check microSD>

- Do not remove the microSD card during checking the microSD card. This may cause a malfunction to the FOMA terminal or microSD card.
- The data may not be recovered depending on the microSD card.
- You cannot check the unformatted or incompatible microSD card.
- “ ” flashes during Check microSD.
- When you press (Quit) or while checking the microSD card, the checking is canceled and “ ” appears.
- When the checking of microSD card is interrupted, some data may remain to be recovered. In this case, check the microSD card again.
- It may take time to check the microSD card depending on the amount of data on the microSD card.
- When you check the microSD card, the titles of the data in the microSD card are renamed to the file names.
  Titles and file names➡pp.228, 241

FUNC File list screen (p.247)

Edit title……Edits the file title.
You can enter up to 15 double-byte or 31 single-byte characters.

Copy & add • Copy & overwrite→p.249

Copy from phone……Copies all the item data to the microSD card.
- For “Schedule”, you can select from “Schedule/To Do list/All”.
- For “Bookmark”, you can select from “i-mode brow./Full Brow./All”.

microSD info……Displays the amount of available space and data stored on the microSD card.

Delete……Selects the deleting method from “Delete this/Delete selected/Delete all”. “About multiple-choice”→p.38

FUNC Data list screen (p.247)/Data detail screen (p.247)

Copy & add this • Copy & add all • Copy & OW all*……
- “Copy & add this” copies one data additionally.
- “Copy & add all” is the same function as “Copy & add” of the function menu of the file list screen.
- “Copy & OW all” is the same function as “Copy & overwrite” of the function menu of the file list screen.

“Copying the PIM data to the FOMA terminal”→p.249

microSD info……Checks the amount of available space and data stored on the microSD card.

* : “Copy & add all” and “Copy & OW all” are available only for the data list screen.

Displaying other data in the microSD card

You can display the data in the Data Box such as images, i-motion or melodies or ToruCa stored on the microSD card.

<Example: To display an image in My picture>

1 Folder list screen (p.225)▶“microSD”▶“Picture”, “Decorate PI” or “Image Box”

The “microSD folder list” screen appears.



Ex. microSD folder list (Picture)

Function menu➡p.253

2 Select a folder▶Select an image

Exchanging the Data Between the microSD Card and FOMA Terminal

Copying the data on the FOMA terminal to the microSD card

● Copying the data such as the phonebook to the microSD card

You can save the phonebook, schedule, To Do list, text memo, mail or bookmarks stored on the FOMA terminal to the microSD card.

1 List screen of the data (such as the phonebook list screen)▶✉ (FUNC)▶“Copy to microSD”▶Select any item:

Copy this • Copy selected • Copy all*……Selects the copying method.
“About multiple-choice”→p.38

* : Only the data in the folder can be copied for copying all the received mails, sent mails or bookmarks. To copy all the data, select “CopyAll to microSD” from the function menu of the folder list screen.

■Function menu of the detail screen
The function of “Copy to microSD” on the detail screen is same as “Copy this” of the list screen.

■Function menu of the category screen
The function menu “Copy from phone” of the category list (p.247) is same as “Copy all” of the list screen of the phonebook, schedule, To Do list, draft mail or text memo. Similarly, this function is same as “CopyAll to microSD” of the folder list screen of received mail, sent mail or bookmark.

NOTE

- When you copy the mail with an i-αppli software launch specification, the information about launching i-αppli in the mail is deleted.
- When you copy one secret data (phonebook or schedule), the secret setting is released when saved.
- When you copy all the data to the microSD card, secret data (phonebook or schedule) are also copied. However, the data in the secret folder are not copied.
- When you copy mails, the attached files may be deleted depending on the file type.
- Copy all the data of My Profile after operating the “Display all data”.

● Copying the data such as images to the microSD card

You can copy the data in the Inbox, Camera or user created folder to the microSD card.

● Still images recorded with 1Seg cannot be copied.

1 List screen of the data (such as the image list screen)▶✉ (FUNC)▶“Copy to microSD”▶Select any item:

Copy this • Copy selected • Copy all……Selects the copying method, then selects the destination folder to copy the data to the folder of microSD card. “About multiple-choice”→p.38

NOTE

- Pre-installed data cannot be copied to the microSD card.
- When you receive a call, mail or alarm notification while copying still images or movies to the microSD card, the copying to the microSD card is interrupted.
- When the destination folder is full, a new folder is created automatically and the data is stored in the folder.

<Copy image>

- The file name is set as follows after copied:
  - File name: DSC_mmmmm (mmmmm = 00001 to 09999)
- You cannot copy the data to the microSD card in the following cases:
  - Images other than JPEG, GIF or SWF
  - The file size exceeds 2M bytes when copied
- The file size may increase when copied to the microSD card.

<Copy movie>

- The file name is set as follows after copied:
  - File name: MOLxxx (xxx = 001 to FFF: in hexadecimal)

Copying the data on the microSD card to the FOMA terminal

● Copying the PIM data to the FOMA terminal

You can copy and add/overwrite the phonebook, schedule, mail or bookmarks stored on the microSD card to the FOMA terminal.

- When you copy and overwrite the schedule, the To Do list data is also copied and overwritten (when only one of these data is stored, only the stored data is overwritten).
- Note that when you copy and overwrite data (Copy & OW this/Copy & OW selected/Copy & OW all), the data stored on the FOMA terminal before copying are erased and replaced by the data in the selected microSD card.
  Check if there is an important data before copying and overwriting the data.

1 File list screen (p.247)▶✉ (FUNC)▶“Copy & add” or “Copy & overwrite”▶Select any item:

Copy & add this • Copy & OW this……Copies and adds/overwrites all the data of a file.

Copy & add selected • Copy & OW selected……Copies and adds/overwrites all the data of the selected file. “About multiple-choice”→p.38

Copy & add all • Copy & OW all……Copies and adds/overwrites all the data of all the files.

■Function menu of the data list screen/data detail screen

- “Copy & add all” and “Copy & OW all” on the data list screen (p.247) are the same functions as “Copy & add” and “Copy & overwrite” of the file list screen.
- “Copy & add this” of the data list screen/data detail screen (p.247) copies the selected one data additionally.

NOTE

- You cannot copy the phonebook data when “Restrict dialing” is set.
- If Copy & add is selected for the phonebook, group names on the microSD card differ from the one of the FOMA terminal, the data is saved to “No Group” in the phonebook.
- When the Inbox or Outbox is full, copying one received mail from the data list screen/data detail screen overwrites the oldest unprotected mail or read mail.

● Copying other data to the FOMA terminal

You can copy the data such as images stored on the microSD card to the folder of the FOMA terminal.

● Videos recorded with 1Seg cannot be copied.

❶ List screen of the data (such as the image list screen)▶✉ (FUNC)▶"Copy to phone"▶Select any item:

Copy this • Copy selected • Copy all……Selects the copying method.
"About multiple-choice"→p.38

NOTE

<Copy image>

● The following images cannot be copied:
- SWF Flash movie which exceeds 100K bytes
- An image which exceeds 2M bytes
- An image whose width or height exceeds 2,592 dots or total number of dots exceeds 2,592 × 1,944 dots
- A progressive JPEG/GIF image whose width or height exceeds 854 dots or total number of dots exceeds 854 × 480 dots

<Copy movie>

● You cannot copy a movie in the following cases:
- Movies other than MP4
- MP4 movies that cannot be played
- Movies whose file size exceeds 10M bytes

* You may not be able to copy the movie in other cases depending on the movie.

<Copy PDF>

● PDF data larger than 2M bytes cannot be copied.

Copying the data to the different folder in the microSD card

You can copy the data in the microSD card to the different folder in the microSD card.

● You have to create a destination folder beforehand. →p.253

❶ List screen of the data (such as the image list screen)▶✉ (FUNC)▶"Copy"▶Select any item:

Copy this • Copy selected • Copy all……Selects the copying method, then selects the destination folder to copy the data to the other folder.
"About multiple-choice"→p.38

NOTE

● Do not remove the microSD card until the coping completes. This may cause a malfunction to the FOMA terminal or microSD card.

Moving the Copyrighted Data Among the microSD Card and FOMA Terminal <Movable contents>

You can move the movable i-motion or Chaku-Uta-Full® with copyrights.

Moving the data on the FOMA terminal to the microSD card

● Moved i-motion is saved to the Movable contents folder (p.224) under i-motion.

● The moved Chaku-Uta-Full® are saved to the Movable contents folder (p.224) under Music.

❶ Movie list screen (p.233)/Music list screen (p.273)▶✉ (FUNC)▶"Move to microSD"▶Select any item:

Move this……**▶Select the destination folder▶"Select this folder"**

Move selected……**▶Select the destination folder▶"Select this folder"▶Use ✣ to select a checkbox (□)▶● (Finish)▶"YES"**

Move all……**▶Enter your security code▶Select the destination folder▶"Select this folder"▶"YES"**

Moving the data on the microSD card to the FOMA terminal

● The moved i-motion are stored to the Inbox folder of i-motion.

● The moved Chaku-Uta-Full® are stored to the Inbox of Music.

● Videos recorded with 1Seg cannot be moved.

❶ Folder list screen (pp.233, 273)▶"Movable contents"▶Select a folder▶"View files"

The "Movie list" screen (p.233)/"Music list" screen (p.273) appears.

❷ ✉ (FUNC)▶"Move to phone"▶Select any item:

Move this • Move selected • Move all……Selects the moving method. "About multiple-choice"→p.38

NOTE

● Do not remove the microSD card while moving the data. This may cause a malfunction to the FOMA terminal or microSD card.

NOTE

- To check whether the i-motion or Chaku-Uta-Full® can be moved, see “i-motion info” (p.233), “File property” (p.274) or Icons (pp.227, 274).

Managing the microSD Card

Formatting the microSD card enables you to use the card on the FOMA terminal or check the usage status.

Formatting the microSD card

*** Make sure to format the microSD card on the FOMA SO706i. You may not be able to use the microSD card formatted on the other terminal or PC.**

- When the memory card is formatted, all the stored data are deleted. Check if there is an important data before formatting.

1 Category screen (p.247)▶✉ (FUNC)▶“microSD format”▶Enter your security code▶“YES”

NOTE

- Do not remove the microSD card while formatting. This may cause a malfunction to the FOMA terminal or microSD card.
- Data stored on the microSD card are not guaranteed if formatting is interrupted.

Checking the microSD card usage status

You can display the amount of available space and data stored on the microSD card.

- The displayed memory capacity is smaller than the memory capacity indicated on the microSD card.
- Number of files that can be stored on the microSD card→p.246

1 Category screen (p.247)▶✉ (FUNC)▶“microSD info”

Setting the USB Mode

<USB mode setting>

You can set the USB mode to use various functions by connecting a PC and the FOMA terminal.

- USB mode is categorized into “Communication mode”, “microSD mode” and “MTP mode”.

<Communication mode>

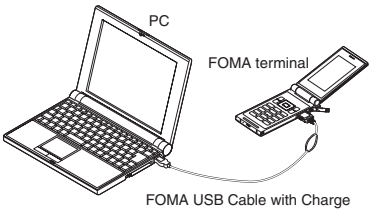

<microSD mode/MTP mode>

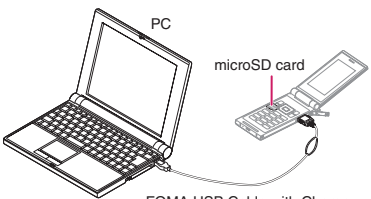

1 MENU▶“SETTINGS”▶“External connection”▶“USB mode setting”

The “USB mode setting” screen appears.

2 Select any item:

Communication mode……Uses the external connector for packet communication, 64K data communication or data exchange via cable connection.

- “ ”: The FOMA USB Cable with Charge Function 01/02 is connected and data are ready to be exchanged between the FOMA terminal and a PC

microSD mode……Uses the external connecter as a reader/writer of the microSD card.

- “ ”: The FOMA USB Cable with Charge Function 01/02 is not connected
- “ ”: The FOMA USB Cable with Charge Function 01/02 is connected (You cannot transfer data between the FOMA terminal and the microSD card, display data in memory or format the microSD card)

Continued on next page

MTP mode……Uses the external connector for WMA data exchange.

- “ ”: The FOMA USB Cable with Charge Function 01/02 is not connected
- “ ”: The FOMA USB Cable with Charge Function 01/02 is connected

Using the FOMA Terminal as a microSD Reader/Writer

You can connect the FOMA terminal to a PC with the microSD card inserted and read/write the data in the microSD card.

- To use the FOMA terminal as a microSD reader/writer, the following devices are required.

Item	Description
Cable	FOMA USB Cable with Charge Function 01/02 (optional)
PC	PC with USB port (compliant with the Universal Serial Bus Specification Rev1.1/2.0) compatible with the FOMA USB Cable with Charge Function 01/02 (optional)
Supported OS	Windows 2000, Windows XP, Windows Vista (Japanese edition)

1 USB mode setting screen (p.251)▶“microSD mode”

When set to “microSD mode”, “ ” appears.

2 Connect the FOMA terminal and a PC with the FOMA USB Cable with Charge Function 01/02

The “ ” icon is displayed.

The microSD card is displayed in My Computer window on the PC as a storage memory (external storage device).

To remove the FOMA USB Cable with Charge Function 01/02 from the PC, follow the safe removal procedure on each OS.

■ Important

- Ensure that the FOMA terminal and PC are properly connected. An improper connection could not only prevent data exchange but also result in the loss of data.
- Attempting to exchange data when the FOMA terminal’s battery level is low or empty could not only prevent data exchange but also result in the loss of data. Make sure that the FOMA terminal’s battery is charged enough. Also, check the power of PC.
- Do not remove the FOMA USB Cable with Charge Function 01/02 while copying the data from the PC to the FOMA terminal (the center illumination lamp flashes). This may prevent not only data exchange but also result in the loss of data.

Setting How to Print Images Stored on the microSD Card

<DPOF setting>

You can set DPOF (Digital Print Order Format) to the images stored in the microSD card.

- DPOF is a format to print the images shot by digital camera.
- When you save still images shot with the FOMA terminal to a microSD card, and specify still images to print, the number of sheets, etc., you can print the images on a DPOF-compatible printer or in a print service shop.

1 Folder list screen (p.225)▶“microSD”▶“Picture”▶Select a folder▶ (FUNC)▶“DPOF setting”

■ To use DPOF set One

Move the frame to the image you want to set on the image list screen or select the image to display the My picture screen. When you select the My picture function menu, go to Step 3.

2 Select the setting

DPOF set One……Sets the print settings for one image.

DPOF set Choice……Selects images to set DPOF settings. “About multiple-choice”→p.38

3 “Print”▶Select any item:

Print Sheets……Enters the number of sheets (01 to 99) to print.

a date……Selects whether to stamp the date.

■ To cancel the print setting of the selected image

▶“Print OFF”

■ **To cancel the print setting of all the stored images**

▶"All print OFF"

4 [i] **(Finish)**

NOTE

- You can set the DPOF setting up to 999 images. However, you cannot print up to the specified number depending on the printer.
- You cannot set the DPOF settings for following images:
  - An image whose width or height exceeds 2,592 dots
  - An image whose total number of dots exceeds 2,592 × 1,944 dots
  - An image whose file size exceeds 2M bytes
  - A progressive JPEG image whose width or height exceeds 854 dots
  - A progressive JPEG image whose total number of dots exceeds 854 × 480 dots
- You may not be able to set the DPOF setting when the space is not enough on the microSD card.
- You can check the number of sheets you set in "Image info".

Working with Folders and Files

You can add folders to each folder/microSD folder list screen of the Data Box to organize the files.

■**Movable contents folder**

- For Music, you can use the function menus "Add folder", "Edit folder name", "Delete folder" and "Memory info" of the following " FUNC Folder list" screen.
- For i-motion, you can use the same function menus as the following " FUNC microSD folder list" screen.

Creating, editing and deleting folders

FUNC Folder list screen

Add folder……Enters a folder name to add a folder.
You can enter up to 10 double-byte or 20 single-byte characters.

Edit folder name……Edits the folder name of the added folder.
You can enter up to 10 double-byte or 20 single-byte characters.

Add shortcut*1→p.94

Delete folder……You can also delete a folder that stores data.

- For Music, select the deleting method from "Delete this/Delete selected/Delete all" after entering your security code.

"About multiple-choice"→p.38

Delete all*2*3……Deletes all the stored data. Note that the data saved in the secret folder are not deleted.

Edit playlist*4……Starts editing the playlist.
"Playing melodies in your preferred order"→p.242

Release playlist*4……Releases the playlist.

Memory info……Displays the amount of the stored data.

*1: It is only available in the Music.
*2: "Delete all image" appears for My picture, "Delete all" for i-motion and Melody, and "Delete all doc." for My document.
*3: Not available for Music, movable contents folder of Music and Music&Video Channel.
*4: Available only when the playlist folder of Melody is highlighted.

NOTE

<Add folder>

- The maximum number of folders of the movable contents folder is 65,535 and the maximum number of files that can be stored in a folder is 65,535.

<Delete folder/Delete all image/Delete all>

- If you try to use "Delete folder", "Delete all image" or "Delete all" to delete an image or movie that has been set in a display, original animation or user icon of Schedule, or if you use "Delete folder" or "Delete all" to delete a melody that has been set as a ring tone or alarm or set in a playlist or random melody, the corresponding feature (display, etc.) changes as follows:
  - The screens, ring tone and alarm settings are reset to the default.
  - The original animation, playlist and random melody are canceled.
  - The alarm notification screen for the schedule switches to the screen on which you set "".

FUNC microSD folder list screen (p.248)

Edit folder name*1……Edits the folder title.
You can enter up to 31 double-byte or 63 single-byte characters. *2

Create folder*1……Enters a folder name to create a folder.
You can enter up to 31 double-byte or 63 single-byte characters.*2

Delete folder……Deletes a folder.

Memory info……Displays the amount of the stored data.

*1: Not available for "Image Box" or "Decorate PI".
*2: You can enter up to 10 double-byte or 20 single-byte characters for i-motion movable contents folder or Melody.

Continued on next page

NOTE

- When you attempt to access the data in the microSD card while i-αppli saves data to the microSD card, a message appears notifying that you cannot operate the card.

<Create folder>

- You cannot create folder in the "Image Box" or "Decorate PI" on the FOMA terminal. You can create these folders on a PC, etc.

When the memory is insufficient or there are too many stored items

When you try to save the photographed still images, movies or downloaded data, a message appears asking whether to delete some unnecessary data to save the new data. To save the new data, delete unnecessary data.

1 Select "YES" on the message

■ **Not to save the data**

▶"NO"

2 Select a folder▶Select data to be deleted

Some data co-use the storage area, select which data is to be deleted before selecting a folder.

3 [i] (Finish)▶"YES"

[i] (Finish) is not displayed until enough memory is allocated to save the data.

Managing the Phonebook and SMS on the FOMA Card (UIM)

<UIM operation>

You can exchange phonebook or SMS data between the FOMA terminal (Phone) and the FOMA card (UIM). You can also delete SMS data or phonebook entries stored on the FOMA terminal (Phone) or FOMA card (UIM).

- You cannot send/receive a voice/videophone call or i-mode mail while copying or deleting data. Also, you cannot activate other functions.
- You cannot copy items that cannot be stored in the UIM phonebook.
  Items and number of entries that can be copied →p.70
- You can save the received SMS and sent SMS up to 20 in total on the FOMA card (UIM).

Copying or deleting the phonebook entry or SMS from the main menu

<Example: To copy the phonebook entry or SMS>

1 [MENU]▶"LIFEKIT"▶"UIM operation"▶Enter your security code

When you enter your security code, " [icon] " appears and communication such as incoming calls becomes unavailable. If you receive a call or other communication before entering your security code, the UIM operation ends.

2 "Copy"

■ **To delete**

▶"Delete"

3 "Phone→UIM" or "UIM→Phone"

■ **To delete**

▶"Phone" or "UIM"

4 Select any item:

Phonebook……Searches and displays the phonebook list screen.
How to search the phonebook →p.73

SMS……Selects the SMS data.

- **Inbox**……Displays the Inbox list screen.
- **Outbox**……Displays the Outbox list screen.

5 Use [icon] to select a checkbox (□)▶[i] (Finish)▶"YES"

Select "YES" one more time when you copy the phonebook from the FOMA terminal (Phone) to the FOMA card (UIM).

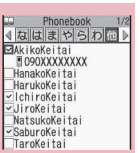

UIM operation
EX. Phonebook (Search all)

Function menu➡p.254

[FUNC] UIM operation screen (p.254)

- For the phonebook, available functions vary depending on the selected tab, etc.

Start copy[*1]……Starts copying operation.

Start deletion[*2]……Starts deleting operation.

Select this……Selects the data.

Select all……Selects all the data.

Release this……Deselects the selected data.

Release all……Deselects all the data.

Detail……Displays the data details.

*1: Available only with the copy screen.
*2: Available only with the delete screen.

Copying a phonebook entry from the phonebook detail screen

1 Phonebook detail screen (p.73)▶ ✉ (FUNC)▶“Copy to UIM” or “Copy from UIM”▶“YES”

The menu displayed when ✉ (FUNC) is pressed depends on where to save the phonebook entry (to the FOMA terminal or the FOMA card (UIM)).

Moving or copying SMS from the mail screen

- You can perform the UIM operation on the mail screens from the function menus of received mail list/detail screens and sent mails list/detail screens.

<Example: To move or copy received SMS on the FOMA terminal to the FOMA card (UIM)>

1 Received mail list screen (pp.170, 171)▶Highlight SMS

2 ✉ (FUNC)▶“UIM operation”▶“Move to UIM” or “Copy to UIM”▶“YES”

■ To move or copy received SMS on the FOMA card (UIM)

▶“Move from UIM” or “Copy from UIM”

Move or copy to the “Inbox” folder.

NOTE

<Phonebook>

- Copying the phonebook from the FOMA terminal (Phone) to the FOMA card (UIM) converts “katakana” included in name and reading to double-byte. You can copy up to 10 double-byte or 21 single-byte characters for name and up to 12 double-byte or 25 single-byte characters for reading, and remaining characters are not copied.
- As the number of phone numbers and e-mail addresses that can be stored in a single phonebook entry on the FOMA terminal (Phone) and FOMA card (UIM) is different, the second and subsequent phone numbers/e-mail addresses stored on the FOMA terminal (Phone) cannot be copied to the FOMA card (UIM).
- As the types of characters that can be used on the FOMA terminal (Phone) and FOMA card (UIM) are different, some characters may be converted to spaces or other characters.
- Phonebook entries stored as secret data cannot be copied using this function even when the FOMA terminal is set to “Secret mode” or “Secret data only mode”.
- If the same group names are set on the FOMA terminal (Phone) and the FOMA card (UIM), the phonebook group settings are retained. If there is no group with the same name, the entries are stored in “No Group”.

<SMS>

- Copying the sent SMS will also copy the SMS report saved for the sent SMS. You cannot copy the SMS report only.
- You cannot protect SMS moved or copied to the FOMA card (UIM). If you move or copy protected SMS to the FOMA card (UIM), the protection is removed from the SMS on the FOMA card (UIM). “Replied to” or “Transferred” icon is also changed to “Read”.
- When an SMS for Number B of 2in1 is moved or copied, it is saved as an SMS for Number A.

Infrared Data Exchange/iC Communication

You can exchange the data such as phonebook entries and received mails with other devices with the Infrared data exchange or iC communication function.

- Data exchange function of the FOMA terminal via the Infrared data exchange/iC communication conforms to the IrMC™1.1 standard. However, you may not be able to forward data depending on the other party’s device or the application even when IrMC™1.1 is supported.
- You can forward the data one by one or all data at one time.
- You can forward the data as shown in the **Table 2** (p.256).

Note on forwarding data

- You cannot forward data while Dial lock, Self mode, Omakase Lock or Keypad lock is set. Also, you cannot use the iC communication when IC card lock is set.
- You cannot receive the phonebook data while Restrict dialing is set. However, you can send the phonebook data which is set to “Restrict dialing” and personal data of My Profile when sending the phonebook data.
- You may not be able to forward data depending on the status of the other party’s device. Also, depending on the model of the other party’s device, it may not reflect the settings of the received mail or bookmark folder tree, or it may not receive the Deco-mail correctly.
- The FOMA terminal is set to Out of Area during the data exchange, which means you cannot make/receive a voice/videophone call or use i-mode, i-mode mail, packet communication or 64K data communication. Also, the FOMA terminal may remain the status of Out of Area for a while after the data exchange.
- It may take time to exchange data depending on the amount of data. Also, you may not be able to receive data.
- The progress bar indicates the number of sent data. A large amount of data may slow down the progress indicator or it may look different between the parties even when the data are being exchanged successfully.

Sent/received data

- The data received on the FOMA terminal is saved as shown in the **Table 2** (p.256).
- The FOMA terminal may not properly receive some symbols or pictographs entered in mail or phonebook.
- You cannot send or receive:
  - UIM phonebook, SMS
  - Frame or stamp data (can be received only)
  - Melody, still image, movie, i-motion and PDF data with FOMA card security
  - Data in the Secret folder
- You cannot receive:
  - Neither JPEG, GIF nor SWF Flash movie
  - Movie other than MP4 or 3GP
  - Still image, movie, i-motion, melody and PDF data whose image size or file size exceeds the capacity of the FOMA SO706i

[Table 2] Where to store the forward and received data

Data	Receive one	Receive all
Still image, melody	The first in the Inbox folder	(Cannot send all at once)
Movie (i-motion), PDF data	In date order in Inbox folder	(Cannot send all at once)
ToruCa, ToruCa (detail)	The first in the ToruCa folder	Replaced with ToruCa of the sender
Phonebook, My Profile	The smallest memory number available between “010” and “999” (If none of the numbers above is available, it is saved under the smallest memory number available between “000” and “009”)	Replaced with Phonebook of the sender (My Profile data is sent, and the data stored in “My Profile” (except for the phone number) is replaced)
Schedule	In the date order of the received schedules	Replaced with Schedule of the sender
To Do list	The first in the To Do list	Replaced with To Do list of the sender
Received mail, Sent mail	The Inbox/Outbox folder in the date order of mails	Replaced with Outbox/Inbox of the sender
Draft mail	The Draft box in the date order of mails	Replaced with Draft of the sender
Text memo	The first <Not recorded>	Replaced with Text memo of the sender
Common phrases	The first <Not recorded>	Replaced with Common Phrases of the sender
Own dictionary	The first in the Own dictionary	Replaced with Own dictionary of the sender
Bookmark (i-mode, Full Browser)	The first in the Bookmark folder	Replaced with Bookmark of the sender

- You can send/receive up to 9 double-byte or 18 single-byte characters for titles of still images, movies, i-motion and PDF data, and up to 25 double-byte or 50 single-byte characters for titles of Melody. If the length of the title exceeds the maximum, the exceeding part is deleted.
- Note the following when you transfer the phonebook data:
  - The secret code cannot be forwarded.
  - When you transfer one data of the phonebook stored as the secret data, the secret setting is canceled when transferred.
  - The still images stored in the phonebook you receive are stored in the Inbox folder of “My picture”. However, if the amount of data exceeds the storage limit of “My picture”, the exceeding images are deleted and the phonebook is stored.
- Note the following when you transfer the mail data:
  - Some phones may be unable to receive a part of a subject.
  - When receiving all the mails, the mails are received after deleting all the mails and user-created folders.
  - If there is not enough space in the Inbox when receiving one received mail, mails are deleted automatically in the order of old received mails. However, unread mails, protected received mails, i-mode mails and SMS in the secret folder are not deleted. It is recommended to protect mails you want to keep.
  - If there is not enough space in the Outbox when receiving one sent mail, the oldest unprotected sent mail in the Outbox is overwritten.
  - When there is an attached file whose downloading is not completed, the mail is sent after the attached file is deleted.
  - When the i-αppli launch information or mail-linked i-αppli information is pasted into the mail, the mail is sent after the pasted data is deleted. When the data attached to the mail is set to “File restricted”, the mail is also sent after the data is deleted. Also, a still image may be deleted depending on the file format. However, when sending sent mails or draft mails, the data received via cable connection or copied from the microSD card are sent even when they are set to “File restricted”.
  - You cannot transfer the received mail folder and sent mail folder of the mail-linked i-αppli. All the mails in the folder are saved to the Inbox or Outbox.
  - The setting of “Color coding” set in the received mail list screen or sent mail list screen cannot be transferred.
  - When using the Infrared data exchange, a mail larger than 2M bytes may not be sent correctly.
- When original common phrases already fill in Folder 9 (“Original”) and fixed common phrases in Folder 1 to 8 have not changed since the time of purchase, received common phrases will be stored in Folder 1 to 8, overwriting the fixed common phrases.
- The data may not be saved in the same order depending on the model of the sender when transferring all bookmarks.

Session number

- Transferring all requires the session number to authenticate the sender and recipient. Before sending or receiving, the sender and recipient should agree on a 4-digit number as the session number and then both enter the same number.

Forwarding Data with Infrared Data Exchange

<Infrared data exchange>

When you forward data by Infrared data exchange

- Place the devices so that the Infrared data ports are aligned on the same level and facing each other.
- Do not move the devices until the confirmation message about completing the exchange appears. Also, do not place anything between the devices or cover the Infrared data ports.
- The devices may not communicate successfully if they are placed in direct sunlight, directly under a fluorescent light, or close to other infrared equipment.

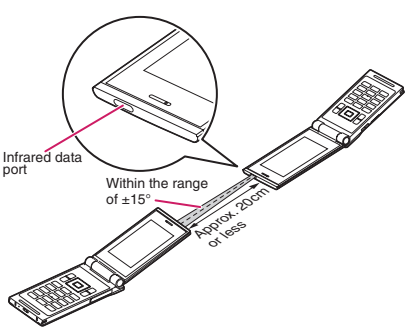

Transferring one data at a time using the Infrared data exchange

<Send/Receive Ir data>

You can exchange one data at a time with other devices using the Infrared data exchange function.

● Sending one data

Select “Send Ir data” from the function menu of Data list screen or detail screen. When you send the data of JPEG, you can select High-speed Ir send (IrSS™).

<Example: To send one image>

1 My picture screen (p.226)▶✉ (FUNC)▶“Send Ir data” or “IrSS”

■ **IrSS™**

JPEG image can be also sent by i (IrSS).

2 Set the receiving device ready to receive

3 Direct the Infrared data port toward the other party’s device▶“YES”

The data transmission starts.

When the data is sent, a notification message about completing the exchange appears.

■ **To cancel sending**

▶“NO”

■ **To exit during sending**

▶i (Quit)

NOTE

- When you select “IrSS”, the sender may be completed correctly even though the other party cannot received the data correctly.

● Receiving one data

1 MENU▶“LIFEKIT”▶“Receive Ir data”

The “Receive Ir data” screen appears.



Receive Ir data

Function menu➡p.258

2 “Receive”▶Direct the Infrared data port toward the other party’s device▶Receive data from the other party’s device

The data reception starts.

3 “YES”

When the received data is saved, a notification message about completing the save appears. The received data is discarded if no operation is performed for about 30 seconds after it is received.

■ **To exit during the receiving**

▶i (Quit)

■ **When you do not save the received data**

▶“NO”

FUNC Receive Ir data screen (p.258)

Add shortcut→p.94

Transferring all data at a time using the Infrared data exchange

<Send/Receive all Ir data>

You can exchange all data at a time with other devices using the Infrared data exchange function.

- When you receive all, all the data on the FOMA terminal is overwritten by the received data and stored data are deleted including protected mails and secret data of the phonebook or schedule. However, frames and secret data in the secret folder are not deleted. Check if there is an important data before receiving all the data.
- Transferring all may change the order of data on the recipient.

● Sending all data at a time

Select “Send all Ir data” from the function menu of Data list screen or detail screen.

<Example: To send all data stored in the phonebook>

1 Phonebook list screen (p.73)▶✉ (FUNC)▶“Send all Ir data”

2 Enter your security code▶Enter session number

“Session number”→p.257

3 Set the receiving device ready to receive

4 Set the receiving device ready to receive▶“YES”

Transmission of all data starts.

When the data is sent, a notification message about completing the exchange appears.

■ **To cancel sending all data**

▶“NO”

■ **To exit during sending**

▶i (Quit)

● Receiving all data at a time

1. **Receive Ir data screen (p.258)▶ “Receive all”**
2. **Enter your security code▶Enter session number**
   “Session number”→p.257
3. **Direct the Infrared data port toward the other party’s device▶“YES”**
   ■ To cancel receiving all Ir data
   ▶“NO”
4. **Select “YES” when the overwrite confirmation screen appears**
   ■ To cancel receiving all Ir data
   ▶“NO”
5. **Receive all data from other party’s device**
   All the data reception starts.
   When the received data is saved, a notification message appears indicating that the communication is completed.
   ■ To exit during the receiving
   ▶ (Quit)

Forwarding Data with iC Communication <iC Communication>

When transferring data using the iC Communication

- Place the FeliCa mark “” on the FOMA terminal (sender) over the FeliCa mark “” on the FOMA terminal (receiver).
- Data transmission may not be smooth depending on the FOMA terminal of the other party. Move FOMA terminals so that the FeliCa marks “” of the sender and the receiver get close or distant, or move them to the right, left, up and down.

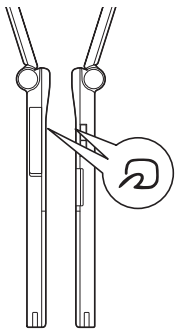

Transferring one data at a time using the iC communication

<iC transmission/Touch to receive data>

You can exchange one data at a time with other devices using the iC communication function.

● Sending one data

Select “iC transmission” from the function menu of Data list screen or detail screen.

<Example: To send one phonebook data>

1. **Phonebook detail screen (p.73)▶ (FUNC)▶“iC transmission”**
2. **Put the FeliCa mark “” close to the FeliCa mark “” of the other party▶“YES”**
   The data transmission starts.
   When the data is sent, a notification message about completing the exchange appears.
   ■ To cancel sending
   ▶“NO”
   ■ To exit during sending
   ▶ (Quit)

● Receiving one data

1. **Put the FeliCa mark “” close to the FeliCa mark “” of the other party▶Perform the operation to send the data from the FOMA terminal of the other party**
   The data reception starts and the progress bar appears.
2. **“YES”**
   When the received data is saved, a notification message about completing the save appears.
   The received data is discarded if no operation is performed for about 30 seconds after it is received.
   ■ To exit during the receiving
   ▶ (Quit)
   ■ When you do not save the received data
   ▶“NO”

Transferring all data at a time using the iC communication

<iC trans. all/Touch to receive all>

You can exchange all data at a time with other devices using the iC communication function.

● Sending all data at a time

Select “iC trans. all” from the function menu of list screen or detail screen of the data you want to send all.

<Example: To send all the phonebook data>

1. **Phonebook list screen (p.73)▶ [✉] (FUNC)▶“iC trans. all”**
2. **Enter your security code▶Enter session number**
   “Session number”→p.257
3. **Put the FeliCa mark “” close to the FeliCa mark “” of the other party▶“YES”**
   Transmission of all data starts.
   When the data is sent, a notification message appears indicating that the communication is completed.

   ■ To cancel sending all data
   ▶“NO”

   ■ To exit during sending
   ▶[i] (Quit)

● Receiving all data at a time

1. **Put the FeliCa mark “” close to the FeliCa mark “” of the other party**
2. **Perform the data sending operation of all data from the FOMA terminal of the other party**
3. **Enter your security code▶Enter session number**
   “Session number”→p.257
4. **Select “YES” when the overwrite confirmation screen appears**
   The data reception starts and the progress bar appears.
   When the received data is saved, a notification message appears indicating that the communication is completed.

   ■ To quit receiving data
   ▶“NO”

   ■ To exit during the receiving
   ▶[i] (Quit)

Forwarding Data by Cable Connection

<OBEX™ connection>

By connecting the FOMA terminal and your PC with the FOMA USB Cable with Charge Function 01/02 (optional), you can exchange various data such as phonebook entries or images.

- When you exchange data using the FOMA USB Cable with Charge Function 01/02 (OBEX™ connection), you have to install “ドコモケータイ datalink” (DOCOMO keitai datalink) (p.329) and “FOMA通信設定ファイル” (FOMA Communication Setting File) in the provided CD-ROM.
- For details such as installing of the “ドコモケータイ datalink” (DOCOMO keitai datalink), refer to the download page of the software. For details on data exchange, refer to the help files of the software.
- For details on installing “FOMA通信設定ファイル” (FOMA Communication Setting File) and the operational environment, refer to “PC Connection” chapter and “Manual for PC Connection” (PDF format) in the provided CD-ROM.
- Set “USB mode setting” to “Communication mode” before transferring data.

■ Important

- Ensure that the FOMA terminal and PC are properly connected. An improper connection could not only prevent data exchange but also result in the loss of data.
- Attempting to exchange data when the FOMA terminal’s battery level is low or empty could not only prevent data exchange but also result in the loss of data. Make sure that the FOMA terminal’s battery is charged enough. Also, check the power of PC.
- All the data on the FOMA terminal may be erased if an error occurs while forwarding all from PC to the FOMA terminal. Before forwarding all, check the cable connection, the battery level of the FOMA terminal and the power of PC.

Barring Phonebook Image Forwarding

<Forwarding image>

When you use the Infrared data exchange, iC communication, copying to microSD card function or data exchange (OBEX™ connection) to transfer phonebook data, you can prevent transferring still images stored in the phonebook.

1. **[MENU]▶“LIFEKIT”▶“Forwarding image”▶“OFF”**

   ■ To forward
   ▶“ON”

Using the Infrared Remote Control Function

- To use the remote controller function, download the software according to the device you use (the key operations of the remote controller vary depending on the software).
- “Gガイド番組表リモコン” (G-GUIDE program guide remote control) is pre-installed at the time of purchase. →p.194
- The remote operation may not be possible depending on the device.
- You cannot use the Infrared Remote Control during the Self mode.

Using remote control

- Point the infrared data port of the FOMA terminal directly at the remote control sensor on the TV, etc. and operate the FOMA terminal as a remote control. The remote control is effective within about 4 meters away from the device. This may vary depending on the ambient light level.

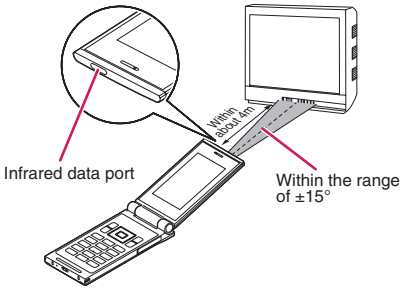

Viewing PDF Data <My document>

Use PDF Viewer to view PDF documents downloaded from sites and saved. You can also view PDF documents stored on a microSD card.

- Downloading from sites →p.145

1 MENU ▶“DATA BOX”▶“My document”

The “Folder list” screen appears.



Folder list

Function menu➡p.253

2 **Select a folder**

The “PDF list” screen appears.

PDF list

Function menu➡p.262

3 **Select a PDF document**

The “PDF data” screen appears.

PDF data

Function menu➡p.265

■ **If the password entry screen appears**

Enter the password set to the PDF data.

■ **If a message about resuming the download appears**

You are attempting to open a document, a part of which has been downloaded by page. You can additionally download the remaining pages later on. →p.145

■ **If a message appears asking whether to download all remaining data**

You are attempting to open an incomplete PDF document which has been downloaded partially due to interruption at data acquisition, etc. You have to download the remaining data additionally. →p.145

NOTE

- It may take a long time to display some PDF data.
- A PDF data may not be properly displayed if it contain formats unsupported by the PDF viewer or complicated designs.
- While viewing a part of a PDF data which has been downloaded by page, attempting to view a page that has not been downloaded starts the download. You can download the remaining pages at a time. →p.145
- To transfer a PDF document from a PC to the microSD card, use the specified folder tree/name. →p.244
  A document cannot be displayed on the FOMA terminal if the folder tree/name is different from the specified format.
- “SD” flashes while viewing a PDF document stored on the microSD card.

Guide to the PDF list



■PDF type icon

Icon	Description
(Pale blue) (blue)	All the pages have been downloaded * The file size of the PDF document with a blue icon exceeds 2M bytes, which cannot be stored on the FOMA terminal (Phone).
(Pale blue)	Partially downloaded by pages
(Pale blue)	Incomplete data which has been downloaded partially (data forwarding unavailable)

: File restricted data (data forwarding and copy to microSD card are unavailable)

■Retrieval method icon

Icon	Description
	Downloaded from a site, etc.
	Obtained from a microSD card, PC, etc.

■Allowable operation icon

Icon	Description
	Can be attached to an i-mode mail (2M bytes or smaller)
Ir	Can be transferred via Infrared data exchange and iC transmission
SD	Can be copied to the microSD card

NOTE

- A PDF document stored on a microSD card, which appears with a blue icon "PDF" (blue) or "PDF" (blue), cannot be viewed on the FOMA terminal.

FUNC PDF list screen (p.261)/ Document list screen (p.263)

- The usable functions vary according to the selected folder, so the items displayed in the function menu also vary.

Edit title……Edits the title. You can enter up to 9 double-byte or 18 single-byte characters.

Display document……For PDF document, select the page to display from "From the last"/"First page"/"i-mode bookmark".
For other documents, the contents are displayed from the first page.

Document info……The file name of the PDF data/document, the date and time it was saved, and other information are displayed.

DL remaining data*1……"Downloading remaining PDF data after downloading partially"→p.145

Add desktop icon*1*2→p.94

Compose message*3……Composes an i-mode message with the PDF document/document attached.

iC transmission*1*2→p.259

Send Ir data*1*2→p.258

Copy to microSD*1*2→p.248

Move……Select "Move this"/"Move selected"/"Move all", then selects a destination folder and moves the PDF document/document to another folder.
"About multiple-choice"→p.38

Memory info……Displays the capacity used, etc.

Sort*1*2……Sorts the PDF documents by the specified criteria.

Delete……Select "Delete this"/"Delete selected"/"Delete all". "About multiple-choice"→p.38

Copy to phone*1*4→p.249

Copy*4……"Copying the data to the different folder in the microSD card"→p.250

*1 : Available only with the PDF data list screen.
*2 : Not usable on the list screen of the microSD card.
*3 : This function is unavailable when 2in1 mode is in B mode.
*4 : Not usable on the PDF list screen of the FOMA terminal.

NOTE

<Sort>

- "By source" sorts in the following order.
  ① PDF documents downloaded from sites
  ② PDF documents acquired via the Infrared data exchange or from a microSD card

Viewing Documents

<Document viewer>

Document viewer is available to view a document attached to a mail message or stored on a microSD card.

■**Viewable document type**

Type	Extension
Excel	xls
Word	doc
PowerPoint	ppt

1 MENU▶“DATA BOX”▶“Document viewer”

The “microSD folder list” screen appears.



microSD folder list (Document)

Function menu➡p.253

2 **Select a folder**

The “Document list” screen appears.



Document list

Function menu➡p.262

3 **Select a document**

The “Document view” screen appears.

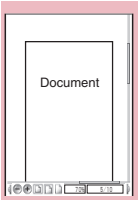

Document view

Function menu➡p.265

NOTE

- It may take long to display some documents.
- A document may not be properly displayed if it contain formats unsupported by the Document viewer or complicated designs.

NOTE

- To transfer a document from a PC to the microSD card, use the specified folder tree/name. →p.244 A document cannot be displayed on the FOMA terminal if the folder tree/name is different from the specified format.

Guide to the document list



■**Document type icon**

DOC XLS PPT	Viewable document type

■**Allowable operation icon**

✉	Can be attached to a mail

PDF Data Screen/Document View Screen

On the PDF data screen and document view screen, the scroll bar to check the position on the screen and the tool bar for various screen operations are displayed.

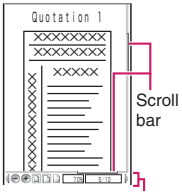

<PDF data screen>

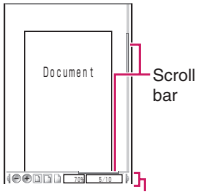

<Document view screen>

Operations on the screen

You can use the dial keys with assigned functions and tool bar icons as well as the function menu to change the display mode such as zoom in/out.

- You can also set i-mode bookmarks and marks, or clip and save a page on the PDF data screen.

Scrolling

■Use ⊕ to scroll

Press ⊕ in the direction you want to scroll.

■▲ (▲マナー), ▼ (▼メモ) to scroll

Press ▲ (▲マナー) to scroll up and ▼ (▼メモ) to scroll down.

Guide to the tool bar

8: Switches view/close of the tool bar (scroll bar)

i (Tool): Switch from the page operation to the tool bar operation

i (Cancel): Switch from the tool bar operation to the page operation

⊡: Switch of the icon display during the tool bar operation

⊡: Icon selection during the tool bar operation

Icon	Description
Zoom	The zoom factor appears. Specify a zoom percentage to display pages in the specified percentage. **■ (Select)▶Enter a 4-digit number**
Page	The current page number appears. Specify a page number to go to the page. **■ (Select)▶Enter a 4-digit number**
	Zooms out.
	Zooms in.
	Displays the entire page.
	Displays a page at 100%.
	Adjusts the page width to the display.
	Displays the first page.
	Displays the previous page.
	Displays the next page.
	Displays the last page.
	Searches for text. →p.264
	Rotates a page 90° clockwise.
	Rotates a page 90° counterclockwise.
*	Copies text. →p.308
*	“Clipping a page” →p.266
	Displays a description of an operation assigned to a tool bar or a key.
*	Displays a single page on the screen.
*	Displays pages continuously.
*	Displays the document in double-page spread.
*	Displays the Bookmark list screen.

*: Available only with the PDF data screen.

Useful keys on the PDF data/Document view screen

Key	Description
1	Zooms out.
2	Displays the entire page.
3	Zooms in.
4	Displays the previous page.
6	Displays the next page.
7	Searches for text. →p.264
8	Switches view/close of the tool bar and the scroll bar.
0	Displays a description of an operation assigned to a tool bar or a key.
#	Searches next.
*	Searches previous.

Searching for text

1 PDF data screen (p.261)/Document view screen (p.263)▶i (Tool)▶Select “🔭”▶Select the text entry box▶Enter text to search for

You can enter up to 8 double-byte or 16 single-byte characters. However, some special characters may not be searched for.

2 Select the checkbox (☐) of the condition▶i (Search)

When the text is found, a page containing the text appears.

Press * to search from the current position to the beginning of the page under the same condition.

Press # to search from the current position to the end of the page under the same condition.

■ To search in an Excel file

Select “Search in page” or “Search in file”. “Search in page” searches in the currently displayed sheet. “Search in file” searches in the whole Excel document currently displayed.

Using a bookmark to view a PDF document

■To use a "bookmark" already set in a PDF document

- If bookmarks are already set in a PDF document, follow the steps below to jump to the location (page) where a bookmark is set.

1 PDF data screen (p.261)▶[i] (Tool)▶Select "[ ]"▶Select a bookmark you want to view

The location (page) where the bookmark is set appears.

If there is no bookmark in the PDF document, a message appears notifying that no bookmark is found.

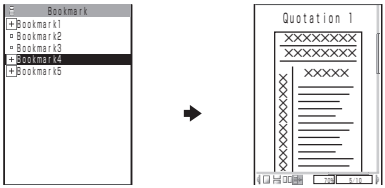

If you press [i] ([ ]) at the bookmark with [+], other bookmarks under the bookmark appear.

■To use "i-mode bookmark"

- i-mode bookmark allows you to set a bookmark anywhere you like so that you can immediately jump to any page or location (up to 10 bookmarks in one PDF document).
- To jump to the location (page) where you set an i-mode bookmark, follow the steps below:

1 PDF data screen (p.261)▶[✉] (FUNC)▶"i-mode bookmark"▶Select an i-mode bookmark you want to view

The location (page) appears in the same display mode (zoom, etc.) as the one when you set the bookmark.

■ To add an i-mode bookmark

▶[i] (Add)▶"YES"▶Enter a title of the i-mode bookmark

The current display mode (page, zoom, etc.) is saved as an i-mode bookmark.

■ To edit the title of an i-mode bookmark

▶[✉] (FUNC)▶"Edit title"▶Enter a title

■ To delete an i-mode bookmark

▶[✉] (FUNC)▶"Delete"▶"YES"

■ To delete all i-mode bookmarks set in a PDF document

▶[✉] (FUNC)▶"Delete all"▶Enter your security code▶"YES"

FUNC PDF data screen (p.261)/ Document view screen (p.263)

Zoom out……Zooms out a page.

Zoom in……Zooms in a page.

View types……Select the display size of a page from "Zoom to"/"Fit page"/"Actual size"/"Fit width".

Go to……Select a page to display from "First page"/"Previous page"/"Next page"/"Last page"/"Specified page".

Search[*1]……"Searching for text"→p.264

Page layout[*2]……Select the page display style from "Single page"/"Continuous"/"ContinuousFacing".

Display link[*1*2]……Select a URL, phone number or mail address to access, make a call or compose an i-mode message.

* The scroll and tool bars do not appear when you display the link destination in the document. Press [CLR] to return to the normal PDF data screen.

Hide tool/scr.bars⇔Show tool/scr.bars……Hides/shows the tool bar and scroll bar.

Rotate view……Select the direction to rotate the page from "Clockwise"/"Counterclockwise".

Bookmark[*2]……"Using a bookmark to view a PDF document"→p.265

Copy[*1*2]……Copies text.→p.308

i-mode bookmark[*2]……"To use "i-mode bookmark""→p.265

Mark[*1*2]……Adds/changes/deletes a mark. Up to 10 marks can be set.

Capture screen[*1*2]……"Clipping a page"→p.266

Compose message[*1*3]……Composes an i-mode message with the PDF document/document attached.

Add desktop icon[*1*2*4]→p.94

DL remaining data[*1*2*4]……"Downloading remaining PDF data after downloading partially"→p.145

Save[*1]……Saves the currently displayed PDF document/document.

Help……Displays a description of an operation assigned to a tool bar or key.

Document property[*1*2]……Displays the document properties.

End……Closes the current screen.

Document info[*1]……The file name of the PDF data/document, the date and time it was saved, and other information are displayed.

Continued on next page

Delete this[*1]……Deletes the currently displayed PDF document/document.

*1 : May not be available when viewing PDF data or documents attached in composing message or on a site.
*2 : Available only with the PDF data screen.
*3 : This function is unavailable when 2in1 mode is in B mode.
*4 : Not usable for PDF documents on a microSD card.

● Clipping a page

You can clip a part of the PDF data screen and save as a JPEG image.

❶ Display a page to clip▶[i] (Tool)▶Select "[image_ref id="1" box="0.299,0.276,0.327,0.292" /]"▶[■] (Set)▶"YES"▶Select the destination folder

The clipped page is saved.

NOTE

- An image clipped out of a PDF document that is not allowed to be output from the FOMA terminal cannot be output from the FOMA terminal, e.g. attached to a mail or copied to a microSD card.
- You may not be able to clip an image if it is prohibited to copy the PDF document.

Music&Video Channel/ Music Playback

■Music&Video Channel

Music&Video Channel 268
Setting Up Program 268
Playing Program 270

■Music

Downloading and Saving Chaku-Uta-Full® from a Site 272
Playing Music 273
Using the Playlist 275
Saving the WMA Data on the microSD Card 276

■Music Player

Using the Music Player ..... Music Player 277

Handling the music data

- In this manual, Chaku-Uta-Full® and Windows Media Audio (WMA) file are described as “Audio data”.
- You can play Windows Media Audio (WMA) file and Chaku-Uta-Full® that are protected by the copyright protection function on the FOMA terminal.
- When downloading the music data from websites, carefully read the use condition (permission and prohibition act, etc.).
- Windows Media Audio (WMA) file that is protected by the copyright protection function plays with the specific information to your FOMA terminal. When the specific information in your FOMA terminal is changed caused by malfunction, repair or model change, Windows Media Audio (WMA) file saved before changing information may not be played.
  In the above case, transfer WMA files from your PC after deleting all WMA data in the FOMA terminal.
- Note that NTT DOCOMO accepts no liability whatsoever for handling of the copy control CD (CCCD) and the music data that cannot be saved as a Windows Media Audio (WMA) file.
- You can enjoy the music stored in the microSD card and the FOMA terminal (Phone) within personal use. Take care not to infringe on the third party’s intellectual property right such as copyright. Do not copy or move the music data in the microSD card and the FOMA terminal (Phone) on a PC or other media.

Music&Video Channel

Music&Video Channel is a service that a music program of up to 1 hour is automatically distributed during the night only by setting your favorite channel in advance. You can also enjoy the movie programs in high quality of up to 30 minutes. The program is updated regularly and you can enjoy the distributed program anytime such as during commuting time to work or school.

■Notes on using Music&Video Channel

- Music&Video Channel is a pay service you need subscription (you need to subscribe to i-mode and Pake-Houdai/Pake-Houdai full beforehand).
- Some programs may charge you an information fee besides the Music&Video Channel service charge.
- For details on Music&Video Channel, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.
- After you subscribe to the Music&Video Channel service, when inserting the FOMA card (UIM) to a Music&Video Channel incompatible FOMA terminal, you cannot use the service. Even in this case, note that you would be charged the service fee unless you unsubscribe from the Music&Video Channel.
- You cannot set or download Music Channel during international roaming*. Stop the distribution before you go abroad. Restart the distribution service after you come back. For details, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

* : Note that the packet communication charges for the i-mode connection when you attempt to set or download programs during international roaming.

■BGM play (Background play)

You can view i-mode sites or mails while playing a Music&Video Channel program.→p.280

Setting Up Program

When you set a desired program beforehand, the program data is automatically delivered at night.

1 MENU▶“MUSIC”▶“Music&Video Channel”

The “Music&Video Channel” screen appears.

Music&Video Channel

Function menu➡p.270

2 “Set program”▶Follow on-screen instructions

For details, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

NOTE

- You can set 2 program for Music Channel at a time.
- You need to add a site providing Music&Video Channel programs to My Menu (p.141) before setting a program.
- When you have not subscribed to the Music&Video Channel service, the message notifies you that the service is not subscribed. When you select “Music&Videoチャネルのお申し込みへ” (Subscribe to the Music&Video Channel) on the screen, you can subscribe to the Music&Video Channel service.

● Checking/canceling the program setting

1 Music&Video Channel screen (p.268)▶“Set program”▶Follow on-screen instructions

For details, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

NOTE

- Resetting the program does not delete the added My Menu.

After setting up the program

- “ ” appears on the standby screen 12 hours before the downloading starts.

- The program is automatically downloaded at night, and the shortcut icon “ ” indicating Music&Video Channel is updated appears after successful downloading. The shortcut icon “ ” indicating Music&Video Channel is not updated appears when the downloading fails. In this case, you can download the program manually. →p.269

NOTE

- If the communication is interrupted, the FOMA terminal attempts to resume the downloading up to 5 times at 3-minute intervals.
- You can save 2 program. When a new program is downloaded, the previously downloaded program is deleted and you cannot play it. Save the program to the Data Box if you do not want to lose. →p.270
- You cannot copy the downloaded program.
- You cannot save the downloaded program to the microSD card.
- Since downloading a program may take time, make sure that the FOMA terminal is fully charged and used in an area where the signal status is good.
- Downloading failure is caused by the following reasons: “out of the service area”, “the terminal is turned off”, “no sufficient battery”, or “combination of Multitask/Multi access”, etc. In case that the downloading is failed for those reasons, the FOMA terminal will download the program at the next night. When download is interrupted, the FOMA terminal may not download the program.
- The FOMA terminal cannot download a program automatically when you insert a different FOMA card (UIM) or after you initialize the terminal. Set programs again from the Music&Video Channel screen.
- When you eject the FOMA card (UIM) from the FOMA terminal that you set the program, and insert the card into other Music&Video Channel compatible FOMA terminal, the program is not downloaded automatically. When you select “Set program” on the Music&Video Channel screen, the FOMA terminal updates its program settings automatically and the program can be downloaded automatically.
- The program data in the program folder may be deleted when subscription to Music&Video Channel or i-mode is canceled.

Guide to the icons on the Music&Video Channel screen

Icon	Description
	The normal program
	The program corresponding to a synchronized play with a broadcasting wave
	Program downloaded in failure
	The program downloaded from sites
WEB	Program included information for site access (URL)
NEW	The program which has not been played

: Partially downloaded program

: Program with playback restriction (the icon turns to more light color overall, and then “ (gray)” turns to “ (red)” when the playback count, period or limit expires)

Downloading a program manually

When the download of Music Channel is failed, you can download the program manually.

1 Music&Video Channel screen (p.268) ▶ Select a program ▶ “YES”

NOTE

- The shortcut icon indicating that update of Music&Video Channel is failed disappears once you display the “Music&Video Channel” screen. You can manually download a program that you failed to download even if the shortcut icon disappears.
- When download is interrupted, the partly downloaded program until the interruption can be saved. You can operate the FOMA terminal to resume downloading for the remaining data except during specific hours.
- You cannot re-download a program whose playback restrictions have expired. You cannot update until the next distribution date.
- During certain hours of a day, you may not be able to download a program manually.

FUNC Music&Video Channel screen (p.268)

Chapter list……Displays the list of title, artist and playback time of each chapter.
Select a chapter to play it *1. “Chapter list”→p.270

Move program……Select a folder, and move the program to the user-created folder of the Music&Video channel in the Data Box*2.

Program info……Displays the program title, the play count, time limit, or period.

Program image……Displays the images stored in the program*3.

Connect to URL……Accesses the site using the Web To function if the URL is included in the program.

Add shortcut→p.94

Delete……Deletes a program.

*1: You cannot select the chapter of which all of the data are not downloaded.
*2: You can not move the partially downloaded program and the program corresponding to a synchronized play with a broadcasting wave.
*3: When an animation GIF image is stored, the animation is played. You cannot save program images.

● Chapter list

Select “Chapter list” on the function menu of the Music&Video Channel screen to display the chapter list of the program.

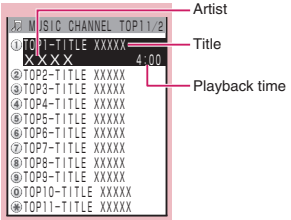

Chapter list

Function menu➡p.270

FUNC Chapter list screen (p.270)

Chapter info……Displays the chapter title and the playback time.

Chapter image……Displays the images stored in the chapter*.

Connect to URL……Accesses the site using the Web To function if the URL is included in the program.

* : When an animation GIF image is stored, the animation is played. If the program is made up of i-motion, the image is not displayed. Note that images stored in the chapters cannot be saved.

Playing Program

1 Music&Video Channel screen (p.268) ▶Select the program

The “Music Player” screen appears and the music playback starts.
“Guide to Music Player” screen→p.277
“Operations on the Music Player” screen→p.278

NOTE

- When earphones are connected, the sound comes only from the earphones regardless of the “Headset usage setting”.
- When you select the program that you stop the playback last time, the playback starts from the beginning of the chapter where you stop the playback.
- Some programs have playback restrictions. “ ” is displayed at the beginning of the title for the program with restrictions on the play count, period or time limit. The program restricted on the playback period cannot be played before or after the period. If the battery pack is removed from the FOMA terminal for a long period of time, the date and time settings stored on the FOMA terminal may be reset. In this case, the program restricted on the playback period or time limit cannot be played.

The program corresponding to a synchronized play with a broadcasting wave playback

When you play the program, you can play the same content with a broadcasting wave by accepting the synchronization that flows by the broadcasting wave.

- The program must be downloaded beforehand.
- You can play the program in the same way with a usual program, but it cannot be played before or after the playback period.

NOTE

- The playback time is connected with the time setting by the auto time adjust function, so that the playback time cannot be changed even if you manually change the time and date on the FOMA terminal.
- You cannot play the partially downloaded program.

Playing the program in the Data Box

1 MENU▶"DATA BOX"▶"Music&Video Channel"

The "Folder list" screen appears.
The Music&Video Channel folder→p.224



Folder list

Function menu➡p.253

2 **Select a folder**

The "Program list (Preview)" screen appears.
Guide to the program list screens→p.271

Program list (Preview)

Function menu➡p.271

3 **Select the program**

The "Music Player" screen appears and the program playback starts.

Guide to the Preview/List displays

- The icon for the Program list screen→p.269

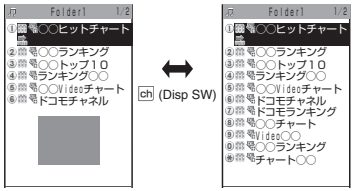

Preview　List

■Preview display

The screen lists 6 movies and a preview image from the selected movie under the list.

■List display

11 programs are listed on the screen.

FUNC Program list screen (p.271)

Chapter list……Displays the list of title, artist and playback time of each chapter.
Select a chapter to play it *1. "Chapter list"→p.270

Edit title……Edits the program title.

Move program*2……Select a folder, and move the program to the user-created folder.

Move*3……Selects from "Move this/Move selected/Move all" and moves the program to the other folder you select. "About multiple-choice"→p.38

Program info……Displays the program title, the play count, time limit, or period.

Program image……Displays the images stored in the program. *4

Sort……Sorts programs by the specified criteria.

List setting……Specifies how to list the programs.

Connect to URL……Accesses the site using the Web To function if the URL is included in the program.

Memory info……Displays the amount of the stored program.

Reset title……Resets the title to the default.

Delete*2……Deletes a program.

Delete*3……Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice"→p.38

*1: You cannot select the chapter of which all of the data are not downloaded.
*2: Available only with the program folder.
*3: Available only with the user-created folder.
*4: When an animation GIF image is stored, the animation is played. You cannot save program images.

Downloading and Saving Chaku-Uta-Full® from a Site

- You can store up to 100 Chaku-Uta-Full® on the FOMA terminal (the actual number of data to be stored may be lower depending on the stored file size of various data).

1 Sites screen (p.136)▶Select Chaku-Uta-Full®

When data downloading is completed, the "Data acquisition" screen appears.

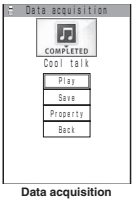

Data acquisition

■ **To cancel downloading**

▶CLR

■ **To play the downloaded Chaku-Uta-Full®**

▶"Play"

"Guide to Music Player" screen→p.277

"Operations on the Music Player" screen→p.278

■ **To display information about Chaku-Uta-Full®**

▶"Property"

2 "Save"▶"YES"

■ **When only a part of the data can be saved**

When downloading is interrupted because of the signal condition or when the downloading is quitted, you may be able to save the downloaded portion only. In such a case, you can save only the downloaded portion.

■ **To cancel saving**

▶"NO"

3 Select a destination folder

NOTE

- Some Chaku-Uta-Full® have the playback restrictions. "🕒" is displayed at the beginning of the title for the Chaku-Uta-Full® with restrictions on the play count, period or time limit. The Chaku-Uta-Full® restricted on the playback period cannot be played before or after the period.
- If the battery pack is removed from the FOMA terminal for a long period of time, the date and time settings stored on the FOMA terminal may be reset. In this case, Chaku-Uta-Full® restricted on the playback period or time limit cannot be played.
- You cannot download Chaku-Uta-Full® which exceeds 5M bytes or whose size is unknown.

NOTE

- You can save Chaku-Uta-Full® to the "Screen memo" using "Add screen memo" on the function menu of the data acquisition screen (p.272), then start playback from the screen memo.→p.143

Downloading the remaining data of partially downloaded Chaku-Uta-Full®

When you select Chaku-Uta-Full® which is downloaded partially from the saved folder, a confirmation message about downloading the remaining data appears. Select "YES" to connect to the site and download the remaining data.

When you download and save all data, the partially saved data are deleted.

- Icons in the "Music list" screen indicates the data downloading status.→p.273
- If the playback period or limit of Chaku-Uta-Full® which is partially downloaded is expired, you cannot download the remaining data (except for Uta-hodai tracks). You can delete the partially saved data when downloading the data.

Updating playback restrictions for Uta-hodai tracks

When you play a playlist or folder contains Uta-hodai tracks whose playback restrictions have expired and can be updated, a message to require the update of the playback restrictions appears. Select "YES" to connect to the site and update the playback restrictions (packet communication charge apply). When you select "NO", you cannot play the data.

When there are two or more Uta-hodai tracks whose playback restrictions can be updated, select an online music distribution site you want to update.

- Uta-hodai is music data that is allowed to play while you subscribe to the service of a contents provider. The playback period is specified by the license information downloaded with the music data. Music data whose playback period has expired can be played back again by updating the license. The license information may include playback extension period in addition to the playback period. You can play the music data without updating the playback period during the playback extension period, but the data cannot be played after the playback extension period has elapsed.

  If you download a music data without updating the playback period, the music data cannot be played until it is saved.
- The packet communication charges for the update of the playback period during international roaming is not covered by Pake-Houdai or Pake-Houdai full.

- When you perform the operation overseas, the time limit may be expired before or after other than the displayed period.
- Icons in the “Music list” screen indicates the status of the playback restrictions. →p.273
- Since updating playback restrictions is performed while connecting a site, packet communication charges will apply.
- It is recommended to initialize your FOMA terminal when you exchange the FOMA card (UIM).

NOTE

- When the Uta-hodai track which is set to the ring tone or alarm tone is disabled to be played, the default demo sound, ring tone or alarm tone is played.

Playing Music

- You can store music in a playlist and play your favorite music in your favorite order. →p.275

1 MENU ▶“DATA BOX”▶“Music”

The “Folder list” screen appears.

Folder list

Function menu➡p.253

2 Select a folder

The “Music list” screen appears.

“Guide to Music list” →p.273

■ **To search music by i-mode**

▶“Search by i-mode”

▶“YES”

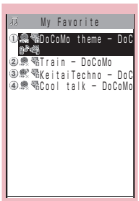

Music list

Function menu➡p.274

3 Select a music file

The “Music Player” screen appears and the music playback starts.

“Guide to Music Player” screen →p.277

“Operations on the Music Player” screen →p.278

■ **Chaku-Uta-Full® that is downloaded partially**

A confirmation message about downloading the remaining data appears. Select “YES” to download the remaining data. →p.272

NOTE

- When earphones are connected, the sound comes from the earphones even when manner mode is set. If you disconnect earphones when manner mode is set, the playback is paused.
- Some music files have playback restrictions. “” is displayed at the beginning of the title for the music file with restrictions on the play count, period or time limit. The music files restricted on the playback period cannot be played before or after the period.

Guide to Music list

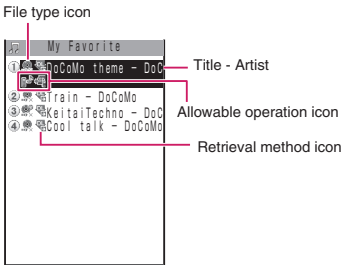

■ **File type icon**

Icon	Description
	Music stored on the FOMA terminal (Phone)
	Music stored on the microSD card and can be moved to the FOMA terminal (Phone)
	Music stored on the microSD card and prohibited to be moved to the FOMA terminal (Phone) * Also displayed in the Playlist music list screen of the FOMA terminal (Phone) when the microSD card which contains the music file stored in the playlist is not inserted to the FOMA terminal.
	Music that cannot be played or music with playback restrictions which cannot be updated
WMA	WMA music
	Partially downloaded music
	Music to which the FOMA card security function applied

: Music with the file restriction

Continued on next page

: Music with playback restriction ("" turns to "" when the playback count, period or limit expires) Playback restrictions of music with the pale blue icon can be updated

: Playable only when the FOMA card (UIM) being used was also used to save the music

: Playable only when the model and FOMA card (UIM) being used were also used to save the music

■**Retrieval method icon**

Icon	Description
None	Pre-installed music
	Music downloaded from a site
	Music downloaded from a PC

■**Allowable operation icon**

Icon	Description
	Music that can be set as a ring tone
	Music that can be moved to the microSD card
WEB	Music that can use the Web To function

FUNC Music list screen (p.273)

- The available functions and items listed in the function menu vary depending on the selected folder. The items are also different when searching or sorting.

Add to playlist……Adds the music to the end of the playlist.

Create playlist→p.275

Move to microSD*1→p.250

Move……Selects from "Move this/Move selected/Move all" and moves the music to the other folder you select. "About multiple-choice"→p.38

Edit information……Edits the title, artist name, album name, etc.

Edit disp. title……Edits the title of music displayed on the music list screen. You can enter up to 9 double-byte or 18 single-byte characters.

Reset info……Resets the information to the status when the "Music information" was retrieved.

Select ring tone……Sets the music as a ring tone. →p.82

Fullsong ring tone……Sets the whole music as a ring tone.

Point ring tone……Selects the part of the song set as a ring tone using .

Search*1……Searches music in a selected criteria.

Sort*1……Sorts programs by the specified criteria.

List setting……Selects a music-list format from "List/List+image".

File property……Display a music file name, a file save date and whether the music can be moved to the microSD card.

Lyric……Displays the lyric of the music. If the lyrics cannot be displayed on a single page, you can switch the page with .

Jacket image……Displays the jacket image of the music. If there are two or more images, use to switch images.

Memory info……Displays the amount of the stored music.

Repeat setting

OFF (default)……Does not repeat the playback.

All repeat……Repeats the playback of all music in the folder.

Single repeat……Repeats the playback of the music which is highlighted.

Shuffle (default: OFF)……Sets ON/OFF of the shuffle playback.

Connect to URL……Accesses the site using the Web To function if the URL is included in the music.

Delete……Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice"→p.38

Move to phone*2→p.250

*1: Unavailable in the music list screen of the movable contents folder or WMA folder.
*2: Only available for the movable contents folder.

NOTE

<Move to microSD>

- To check whether a Chaku-Uta-Full® can be moved, select "File property" to see the music information. Some Chaku-Uta-Full® are movable only among the same model.

Using the Playlist

You can store music in a playlist and play your favorite music in your favorite order.

- The number of tracks and playlists you can store on the FOMA terminal (Phone) are as follows:

Tracks	Up to 100
Playlists*	Up to 21 (including a list of all tracks)

* : You can store up to 99 tracks for 1 playlist (except for a list of all tracks).

- You can store the music (Chaku-Uta-Full®) stored on the FOMA terminal (Phone), the music (Chaku-Uta-Full®) stored on the microSD card and WMA data in the same playlist.

Creating a Playlist

1 Playlist list screen (p.275)/Music list screen (p.273)▶✉ (FUNC)▶"Create playlist"

2 Select a folder▶Use ↕ to select ☐ (checkbox)▶● (Finish)

Multiple music can be stored to a playlist.

■ Music list screen

Select "Set this", "Set selected" or "Set all" instead of selecting a folder. "About multiple-choice"→p.38

When selecting "Set all", stores all music files in the music list screen to a playlist.

3 Enter the playlist name

The playlist is created and the "Playlist music list" screen appears.

■ To start playback

▶■ (Play)

Playing a Playlist

1 Folder list screen (p.273)▶"Playlist"

The "Playlist list" screen appears.



Playlist list

Function menu➡p.275

■ To play the playlist immediately

▶Highlight the playlist to play▶● (Play)

2 Select a playlist

The "Playlist music list" screen appears.

Playlist music list

Function menu➡p.276

■ When "All tracks (phone)" is selected

The playlist which contains all music (playable music files) stored on the FOMA terminal (Phone) appears.

3 ■ (Play)

The playback of the playlist starts and the music are played in the stored order.

NOTE

- When all music files stored on the playlist are deleted, the playlist is also deleted.

FUNC Playlist list screen (p.275)

Create playlist→p.275

Edit playlist name……Edits the playlist name. You can enter up to 128 double-byte or 256 single-byte characters.

Copy to playlist……Creates a copy of the playlist in the playlist list.

Search……Searches music in a selected criteria.

Playlist info……Displays the playlist name, number of tracks in the playlist and the playback time of the playlist.

Delete playlist……Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice"→p.38

FUNC Playlist music list screen (p.275)

Create playlist→p.275

Edit playlist

Sort playlist……Selects the position to move to and rearranges the music.

Add music……Selects the playlist to move to and add the music to the last of the other playlist.
"About multiple-choice"→p.38

Release settings……Selects from "Release this/Release selected/Release all" to release the music from the playlist.
"About multiple-choice"→p.38

Search……Searches music in a selected criteria.

Sort……Sorts music in the playlist in a selected criteria.

List setting……Select "List only" or "List w/ images".

File property……Music file name and file save date and time are displayed.

Lyric……Displays the lyric of the music. If the lyrics cannot be displayed on a single page, you can switch the page with .

Jacket image……Displays the jacket image of the music. If there are two or more images, use to switch images.

Repeat setting

OFF (default)……Does not repeat the playback.

All repeat……Repeats the playback of all music in the playlist.

Single repeat……Repeats the playback of the playing (paused) music.

Shuffle (default: OFF)……Sets ON/OFF of the shuffle playback.

Connect to URL……Access the site using the web to function if the URL is included in the music.

NOTE

<Edit playlist>

- Releasing music from the playlist does not delete the original data.

Saving the WMA Data on the microSD Card

"Windows Media Player" enables you to convert the music CD data to WMA data and save it on the microSD card.

- The data format, number of playlists and tracks that can be played on the FOMA terminal are as follows:

File format	WMA9 (Windows Media Audio 9 Standard)
Bit rate	32 to 192 kbps
DRM	Windows Media DRM10 for Portable Devices
Tracks	Up to 999
Playlists*	Up to 100 (including a list of all tracks)

* : Up to 999 music files can be stored on one playlist.

- Windows Media Player 10/11
  Use Windows XP Service Pack 2 or a later version to use Windows Media Player 10/11. Use Windows Media Player 11 for Windows Vista. For how to operate the software, refer to Windows Media Player 10/11 help.
- If you do not have a microSD card, you can purchase one at your local electrical-appliance store.

1 Prepare the following

- PC which satisfies the operational environment for "Windows Media Player"
- microSD card

2 USB mode setting screen (p.251)▶"MTP mode"

When set to "MTP mode", " " appears.

3 Connect the FOMA terminal and a PC with the FOMA USB Cable with Charge Function 01/02

" " appears when the microSD card is inserted and the FOMA USB Cable with Charge Function 01/02 is connected during the MTP mode.

4 Launch "Windows Media Player" on the PC and convert the music data such as music CD data to WMA format

It may take some time for "Windows Media Player" to recognize the FOMA terminal.

5 Transfer WMA data stored on the PC to the microSD card

6 Disconnect the FOMA USB Cable with Charge Function 01/02 after the data transfer

7 Set the USB mode of the FOMA terminal back to "Communication mode"

NOTE

- You can also use the Napster® application to save the music data.
  - You can download the Napster® application from the following webpage: http://www.napster.jp/
  - For detailed information on the Napster® application, visit the following webpage: http://www.napster.jp/support/
- WMA data moved to the microSD card in another FOMA terminal may not be displayed/played on the FOMA SO706i.
- When you use a microSD card to which WMA data has been transferred in another FOMA terminal, it may not be recognized by the PC even though you change to MTP mode. In this case, perform "Delete all" in the function menu for WMA folder list screen, or format the microSD card (p.251). Note that the all data is deleted when you format the microSD card.
- WMA data cannot be set as the ring tone.

Using the Music Player

<Music Player>

Using the Music Player, you can play Chaku-Uta-Full®, i-motion, the Music&Video Channel program and music stored in the microSD card.

- Besides the pre-installed Chaku-Uta-Full®, you can play the i-motion or Chaku-Uta-Full® downloaded from i-mode sites, the Music&Video channel program, or music data transferred from music CDs.
  "Downloading i-motion"→p.152
  "Downloading and saving Chaku-Uta-Full® from a Site"→p.272
  "Setting Up Program"→p.268
  "Saving the WMA Data on the microSD Card"→p.276
- You can enjoy the stereo sound by connecting the flat-plug stereo earphone set (optional). To connect a flat-plug stereo earphone set to the FOMA terminal, the Earphone Plug Adapter for External connector terminal is required.→p.25
- When earphones are connected, the sound comes only from the earphones regardless of the "Headset usage setting".

■BGM play (Background play)

You can use mails or display i-mode sites while listening to music with the Music Player. →p.280

Guide to Music Player screen

- Function menu for the Music Player screen→p.279
- If setting to play i-motion on the Full screen, i-motion is played on the landscape (full) screen.

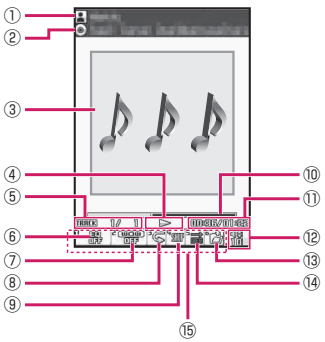

① Artist name
Music: Artist name
Music&Video Channel : Program title
i-motion : Creator

② Title
Music : Title
Music&Video Channel : Chapter title and Artist name
i-motion : Title

③ Image/Movie
Music : Jacket image
Music&Video Channel : Chapter image or Program movie
i-motion : Movie

④ Playback status
: During playback
: During pause
: During fast forward
: During rewind
SLOW : Slow playback
PLAY : Fast playback

⑤ Track
Music : Playing track number/Total number of tracks in the folder
Music&Video Channel : Playing chapter number/Total number of chapters
i-motion : Playing file number/Total number of files in the folder

Continued on next page

⑥ Sound quality (Equalizer)

EQ OFF : OFF Bass : Bass amplified

Treble : Treble amplified Treble Reducer : Treble reduced

Pop Jazz Rock Techno Classical : Suitable for each genre

Speech : Suitable for voice

⑦ Sound effects (SRS_WOW)

WOW OFF : OFF

WOW +1 WOW +2 WOW +3 : Bass adjusted (+1 to +3)

WOW ((S)) : Surround

WOW +1((S)) WOW +2((S)) WOW +3((S)) : Bass adjusted (+1 to +3)/ Surround

WOW User1 WOW User2 WOW User3 : User setting 1 to 3

⑧ Repeat

: OFF

: All repeat

: Single repeat

⑨ Shuffle

SHUF OFF : OFF

SHUF : ON

⑩ Playback position display

Displays the marker in the playback position display (moving the marker with ▭ and pressing ■ (Play) during pause starts playback from the position).

⑪ Elapsed time (minutes: seconds)/Total playback time (minutes: seconds)

⑫ Volume (Level 0 to Level 20)
Displays in the Manner mode

⑬ Select the music/file/chapter
Change the music/file/chapter to play

⑭ Web To function available
Accesses the URL included in the music or program.

⑮ Setting menu→p.279

Operations on the Music Player screen

- The following operations may not work depending on the type of music, the program of Music&Video Channel and i-motion.

Key operation	Operation
■	Pauses/Resumes playback
▭	Adjusting the volume
◁	Play from the beginning Plays the previous music/chapter/ movie when pressed within 1 second from the beginning of the music*
▷	Play the next music/chapter/ movie*
◁ (1 second or longer)	Rewind
▷ (1 second or longer)	Fast forward
▭ during pause	Moves the marker in the playback position display
ch 6	Select the music/file/chapter to play
# *	Switches the image when multiple images are stored
CLR	Ends
i	Uses the setting menus→p.279
1	Sets the Equalizer
2	Sets the SRS_WOW
3	Sets the Repeat
4	ON/OFF for Shuffle
5	Connect to URL
9	Switch the screen mode between Normal and Full screen

* : Plays the previous or next music regardless of the order in the folder or playlist during shuffle playback.

NOTE

- The volume can be selected between Level 0 and Level 20 (default: Level 10), and the setting is retained next time the i-motion is played.
- The volume set for Music Player does not affect the ring volumes set in “Ring volume”.
- On the Music&Video Channel program, if some playback operations are restricted, the operations are not available (operation with ▭, mainly).
- Rewind and Fast forward is unavailable depending on the data.

Using the setting menus

1 During Play/Pause/Stop▶i (MENU)
The cursor moves to the setting menu.
"Guide to Music Player" screen→p.277

2 Use ⊙ to select the function , then ■ (Select)
You can also set the function using 1 to 6. →p.278
Press CLR to return to the play/pause/stop.

When a flat-plug stereo earphone set, etc. is connected

You can use the switch to perform the following operations:

Switch operation	Operation
Once	Play/Pause each time you press the switch
Twice in a row during playback	Play the next music/chapter
Three times in a row during playback	Play from the beginning Plays the previous music/chapter when pressed within 3 second from the beginning of the music.
1 second or longer during playback	Quits the Music Player

FUNC Music Player screen (p.273)

- There is some unavailable functions depending on the type of music, the program of Music&Video Channel and i-motion.

Action setting

Sound effect……Sets the sound quality and effect.

Equalizer (default: OFF)……Sets the sound quality.

SRS_WOW (default: OFF)……Adds sound effects (i-motion with sound effect can set →p.226).

■**To select the user setting**
▶Highlight the user setting 1 to 3▶i (Detail)▶Set with ⊙▶■ (Set)

Repeat setting

OFF……The FOMA terminal does not repeat the playback.

All repeat……Repeats the playback of all music in the folder.

Single repeat……Repeats the playback of the playing (paused) music.

Shuffle……Turns the shuffle playback ON/OFF.

Screen setting……Sets how to display the player screen.

Normal screen mode……Plays on the portrait screen.

Full screen mode……Plays on the landscape screen (Full screen).

Change skin……Sets the design of the Music Player screen.

Set image disp.……Sets the display size of images in the normal screen mode.

Normal……Displays the image in the actual size.

Fit in display……Displays the image fit in the screen regardless of the image size.

Set repeat play……Specifies whether to play files continuously in the folder.

Play menu

Fast……Plays fast. Press i (Play) to return to normal playback.

Slow……Plays slowly. Press i (Play) to return to normal playback.

Position to play……Specifies the part of the music moving the marker in the playback position display with ⊙ and plays only the part of the music. This function is not available depending on the music.

Chapter list……Displays the chapter list (p.270). Select a chapter to play it.

Detail Info

File property……Displays a music file name, a file save date and whether the music can be moved to the microSD card.

i-motion info……Displays an i-motion file name, a file save date and whether the i-motion can be moved to the microSD card.

Chapter info……Displays the chapter title and the playback time.

Lyric……Displays the lyric of the music. If the lyrics cannot be displayed on a single page, you can switch the page with ⊙.

Jacket image……Switches the jacket image of the playing music using ⊙.

Chapter image……Displays the images/animations stored in the played chapter.

Image……Displayed only on i-motion, but displayed in gray and not available.

Continued on next page

Connect to URL……Accesses the site using the Web To function if the URL is included.

Change music……Changes the track to play.

Select file……Changes the file to play.

Chapter list……Changes the chapter to play.

Help……Displays a description of an operation assigned to a key.

NOTE

<Chapter image>

- Images stored in the chapters cannot be saved.

Using Other Functions During Music Playback <Switch to BGM>

You can play the music and Music&Video Channel program while using other functions.

- When you connect the flat-plug stereo earphone set (optional) or the flat-plug earphone/microphone with switch (optional), etc. to the FOMA terminal, use the Earphone Plug Adapter for External connector terminal. →p.25
- You cannot use the BGM in the Music&Video Channel programs of i-motion.

1 Music Player screen (p.277)▶(☎)▶"Switch to BGM"

The standby screen appears and you can use other functions.

■ To quit the Music Player

▶"Quit music"/"Quit Music&Video ch"

■ To quit the BGM play

Change a task to the music group, and stop the Music Player. →p.283

Functions available during BGM play

Function	Availability
Voice/Videophone Calls	×
Mail	○*1
i-mode	○
i-αppli	△*2
Data Box	△
LifeKit	△
Phonebook	○
Own data	○
Settings	△
Service	△
Osaifu-Keitai/ToruCa	○

○: Available △: Partially available ×: Unavailable

*1: When "Receiving setting" of mail is set to "Alarm preferred", the music playback pauses when receiving a mail (even when set to "Operation preferred", the music playback pauses when receiving a mail while the standby screen is displayed). When composing i-mode mail, some functions such as "Activate camera" are not available.

*2: Activating i-αppli pauses playback.

Playing when the FOMA terminal is folded

The side key enables you to operate the Music Player with the FOMA terminal folded.

- Music tracks and Music&Video Channel programs can be played with the FOMA terminal folded. However, only music tracks can activate with the FOMA terminal folded.

Key operation	Operation
(▲マナー) (▼MUSIC)	■During playback or pause Adjusts volume
(▲マナー) (1 second or longer)	■During playback or pause Plays from the beginning Plays the previous music/chapter when pressed continuously
(▼MUSIC) (1 second or longer)	■During playback or pause Plays the next music/chapter ■While the Music Player is not active (the standby screen is displayed) Activates the Music Player and plays the music stopped at the last playback ■During the BGM play (on the standby screen) Quits the Music Player

NOTE

- You cannot activate the Music Player by pressing (▼MUSIC) in Manner mode (however, it is possible when earphones, etc. are connected).
- When the battery is low, you cannot activate the Music Player by pressing (▼MUSIC).

Convenient Functions

Multi Access ..... Multi access 282
Multitask ..... Multitask 283
Assigning a Function to the FUNC Key ..... Holding down ch-key 284
Sorting the Main Menu 284
Using the Alarm Function ..... Alarm 284
Managing Schedule ..... Schedule 285
Adding To Do List Entries ..... To Do list 288
Setting the Alarm Mode ..... Alarm setting 289
Storing Your Own Name and Image ..... My Profile 290
Recording Your and the Other Party's Voice ..... Voice memo 292
Recording and Playing Alarm Tones and On Hold Tones ..... Voice announce 293
Checking Call Times and Charges ..... Call data 293
Setting the Upper Limit of Charge to Notify the Alarm ..... Notice designate calls 294
Using the FOMA Terminal as Calculator ..... Calculator 295
Composing Text Memo ..... Text memo 296
Using Dictionaries ..... Dictionary 296
Using Conversation Help Useful Overseas ..... TALKMAN 298
Using an Earphone/Microphone with Switch ..... Earphone/microphone with switch 298
Resetting the Function Settings ..... Reset settings 299
Resetting to the Default Settings of the FOMA Terminal ..... Initialize 300

Multi Access <Multi access>

Multi access is a function that allows the 3 communication lines such as voice calls, packet communication and SMS to be conducted at the same time.
“Multi Access Combination Patterns”→p.360

- The FOMA terminal can use the 3 communication lines listed below at a time.

Voice call	1 line
Packet communication connected with i-mode, i-αppli, i-mode mail and PC	1 line
SMS	1 line

NOTE

- Communication charges are applied for each of the lines used during Multi access communication.

When you receive a call during communication

Receiving an i-mode mail during a voice call

When you receive an i-mode mail during a voice call, the in-call screen remains displayed while receiving the i-mode mail. You can then read the i-mode mail without interrupting your call.

1 (MENU) (MULTI)▶Select “ (Transmission)”
The reception result screen for the i-mode mail appears.
Switching tasks→p.283

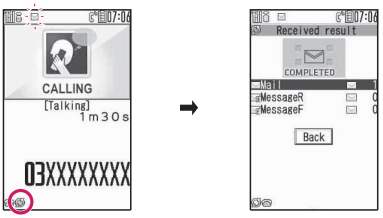

2 Checking the i-mode mail
Reading i-mode mail→p.170

3 (MENU) (MULTI)▶Select “ (Talking)”
The screen changes to the voice call screen.

Receiving a voice call during i-mode or packet communication

When you receive a voice call while using i-mode, receiving or sending an i-mode mail or using packet communication with the FOMA terminal and PC connected, the voice call ringing screen appears and you can answer the call without ending i-mode or packet communication.

<Example: When a voice call arrives during i-mode>

1
The In-call screen appears, and you can talk.

■ **To return to the i-mode screen without answering the voice call**
▶(MENU) (MULTI)▶Select “ (Browser)”
The caller hears ringing without a message.

2 To end the call, press
The call is ended and the i-mode screen reappears.

■ **To return to the i-mode screen without ending a voice call**
▶(MENU) (MULTI)▶Select “ (Browser)”

To use other type of communication while communicating

You can use another type of communication without interrupting your current communications.

- To switch screens during Multi access, select the desired function on the task icon display area. →p.283

Making a voice call during i-mode

While connecting to i-mode or sending/receiving a mail, you can make a voice call without ending i-mode.

1 During i-mode▶(MENU) (MULTI) (1 second or longer)
The standby screen appears.

2 Make a voice call
Making voice calls→p.48

3 To end the call, press
The call is ended and the i-mode screen reappears.

■ **To return to the i-mode screen without ending a voice call**
▶(MENU) (MULTI)▶Select “ (Browser)”

Multitask <Multitask>

Multitask enables you to use multiple functions at the same time. Up to 3 functions can be performed at once, one from each of the Main menu groups shown below (excluding 1Seg/Music group).

Group	Main menu item (task)
Mail group	Mail
i-mode group	i-mode
i-αppli group	i-αppli
Settings group	Settings, Service
Tool group	Data Box, LifeKit, Phonebook, Own data
1Seg/Music group	MUSIC, 1Seg

* : Multitask Combination Patterns→p.361

- The icon of the running task is displayed on the task icon display area during Multitask. When multiple tasks are active, you can change tasks using this icon.

- While receiving a Music&Video Channel program , 1 function enters the operated mode and the task icon " " appears.
- The voice call charge continues to increase while you are concurrently using another function during a voice call.

Activating tasks (functions)

You can activate new task (function) without finishing the current tasks.

1 While using a task▶MENU (MULTI)
The "Task change" screen (p.283) appears.

2 MENU (MENU)▶Select new task

■ **To access the Mail menu**
▶✉ (MAIL)

■ **To access the i-mode menu**
▶i (i-mode)

■ **To access the channel list**
▶ch (ch)

■ **To call a function assigned to ch →p.284**
▶ch (ch) (1 second or longer)

NOTE

- Some functions are activated as one of another group.

NOTE

- In the following cases, 1 task is added to compose a mail while viewing another mail.
  - Accessing the Mail menu to compose a mail
  - Accessing the Mail menu to compose SMS
  - Using Template to create a Deco-mail
  - Using Reply/Reply with quote/Forward for a received mail
  - Editing a sent mail
  - Editing a draft mail

Operations of the task change screen

When you are running multiple tasks, you can switch them to change an active task or finish all tasks at the same time.

1 While using multiple task▶MENU (MULTI)
The "Task change" screen appears.

■ **To switch the task**
▶Select the task icon to change

■ **To display the Main Menu**
▶MENU (MENU)

■ **To Display the standby screen**
▶

The "Task changing" screen appears again when you press MENU during the standby screen is displayed.

* You can display the standby screen without displaying the Task change screen by pressing MENU (1 second or longer) during the task is activated.

■ **To end tasks**
▶▶ "Quit selected" or "Quit all function"

Assigning a Function to the FUNC Key <Holding down ch-key>

Change functions to call by pressing and holding ch while the standby screen or task change screen is displayed.

- Camera, Schedule, Music Player, Music&Video Channel and 1Seg can be assigned.

1 MENU▶"SETTINGS"▶"Other settings"▶"Holding down ch-key"

■ **To reset to default**

▶✉ (FUNC)▶"Reset ch-key"

2 Select a function to assign▶"YES"

Sorting the Main Menu

You can sort the menu that can be customized by yourself. You can also place the sub item.

<To sort the first hierarchy menu>

1 While the menu you can sort is displayed▶Highlight the place to be newly allocated▶✉ (FUNC)▶"Manual-sort"▶Select the menu

2 "Replace"▶"OK"

■ **Selecting the sub item**

▶"Select sub item"▶Select the menu▶"Replace"▶"OK"

The menus are changed.

Using the Alarm Function <Alarm>

- You can store up to 10 alarms.

1 MENU▶"LIFEKIT"▶"Alarm"

The "Alarm list" screen appears.

■ **To switch ON/OFF with the last settings**

▶Highlight the setting item ▶ch (ON/OFF)

"ON/OFF" switches each time you press ch.

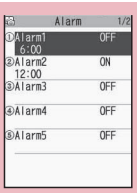

Alarm list

Function menu➡p.285

■ **To check the previous settings**

▶Select the setting item

The "Alarm detail" screen appears.

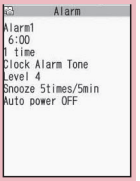

Alarm detail

2 Highlight the item to set▶i (Edit)

3 Select any item:

Edit title……Enters the title of the alarm. You can enter up to 6 double-byte or 12 single-byte characters.

Time setting……Enters the time at which the alarm will sound.

Repeat……Selects the alarm repetitions from "1 time/Daily (D)/Select day (W)".

Alarm tone……Selects the alarm tone from clock alarm tone or folders of melody, i-motion, music, etc.

Volume……Sets the alarm tone volume with ▲▼.

Snooze setting……Specifies whether a snooze (repeating) alarm is set or not.

- **ON**……Enter the number of times for ringing (01 to 10 times) and the ringing interval (01 to 10 minutes).
  The alarm tone (about 1 minute) rings repeatedly for the set number of times in the set interval.
- **OFF**……Enter the ringing time (01 to 10 minutes). Sounds the alarm tone continuously for the specified time.

Auto power ON……Specifies whether the FOMA terminal is automatically turned on or not when the time for an alarm is reached.

4 Set the respective items▶i (Finish)

NOTE

- When the FOMA terminal is automatically turned on to notify you of an alarm, if you set a melody, i-motion or music downloaded from sites as alarm tone, the "Clock Alarm Tone" is played.
- Before entering an area such as an aircraft or hospital where there is electronic equipment that uses extremely precise control systems or very low signal levels and the use of mobile phones is prohibited, set the "Auto power ON" setting to "OFF" and then turn the FOMA terminal off.

FUNC Alarm list screen (p.284)/Alarm detail screen (p.284)

Edit……Edits the alarm.

Display detail*……Displays the alarm contents.

Set this……Activates the alarm.

Release this……Disables one alarm.

Release all……Disables all set alarms.

* : Available only with the Alarm list screen.

Managing Schedule <Schedule>

If you add an event to your schedule, an alarm tone sounds at the specified date and time and the FOMA terminal displays an animation and message notifying you of the details stored for the event. You can also add holidays and anniversaries. Stored scheduled events and holidays can be quickly checked on the FOMA terminal's calendar. You can switch the calendar display mode between 1-month and 1-week to view the number or details of scheduled or To Do list events for a given day.

- The FOMA terminal supports from January 1, 2004 to December 31, 2037.

Adding schedule entries

You can organize your schedule in variety of ways, such as storing regularly scheduled events such as weekly meetings on a set day every week or setting alarm tones and animations that match the scheduled event.

- Up to 500 entries can be stored. You can also store multiple scheduled events for a day.
- Schedule alarms→p.289

1 MENU▶"LIFEKIT"▶"Schedule"

The "Schedule" screen appears.

Schedule

Function menu➡p.285

2 i (New)▶"Schedule"

3 **Select any item:**

Edit schedule……Enters the scheduled event details and selects an icon. You can enter up to 256 double-byte or 512 single-byte characters. The entered details are displayed during alarm notification.

Date setting……Sets the start/end date and time for the scheduled event.

Repeat……Selects the schedule repetitions from "1 time/Daily (D)/Select day (W)".

Alarm……Specifies the alarm notification settings used when the due date is reached from "ON/ON/Set time (01 to 99 minutes) /OFF".

Alarm tone……Selects the alarm tone from clock alarm tone or folders of melody, i-motion, music, etc.

Edit summary……Enters the summary of the scheduled event. You can enter up to 20 double-byte or 40 single-byte characters.
The entered summary appears on the screen during alarm notification.

4 **Set the respective items▶i (Finish)**

NOTE

- When set to "ON/Set time", the alarm notification is given only at the specified date and time before the scheduled event. The alarm notification is not given at the date and time set for the scheduled event.
- Scheduled events can be stored to notify the alarm at the same date and time only with the setting combination of "Daily"/"Select day" and "1 time" (no repeats). In this case, the scheduled event with the "1 time" setting has priority.
- If the day of the week set as the starting time and the day of the week set in the Repeat setting are different, the day set in the Repeat setting has priority and the scheduled event is added on the first specified day after the starting time.

FUNC Schedule screen (p.285)

New……"Adding schedule entries"→p.285
"Adding holidays and anniversaries"→p.286

Weekly display⇔Monthly display→p.286

Icon display……Selects an icon and displays scheduled event, holiday or anniversary by icon. Repeating scheduled events (D or W) are displayed as a single item.

User icon setting→p.286

Switch To Do list……Switches to the To Do list screen (p.288).

No. of schedules……Displays the number of stored schedule entries, holidays and anniversaries. In Secret mode/Secret data only mode, you can also check the number of records kept as the secret data.

Continued on next page

iC trans. all→p.260

Send all Ir data→p.258

Reset holiday……Resets the national public holidays to default.

Delete……Selects the deleting method from “Delete selected/Delete all/Delete past”.
“About multiple-choice”→p.38
- When “Delete past” is selected, all the entries before the data with the cursor on the schedule screen are deleted.
- When “Delete all/Delete past” is selected, select the item from “Schedule/Holiday/Anniversary/All”.

NOTE
- Selecting “Holiday” or “All” of “Delete all” resets the holidays to the default settings.

Changing the Schedule display mode

The Schedule can be displayed either as “Monthly display” or “Weekly display”. By pressing ⊕ to highlight a particular date, you can check icons and the number of scheduled events and To Do list stored for the selected date.
- In Monthly display, press ▯ (▲マナー)/▯ (▼メモ) to switch months.

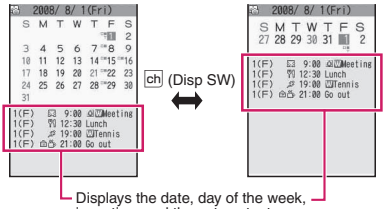

Blue dates: Saturdays
Red dates: Sundays, public holidays and holidays
Pink dates: Anniversaries
__: Today
□: Scheduled event stored for the morning
■: Scheduled event stored for the afternoon
T: Stored To Do list

The public holidays are set in accordance with the「国民の祝日に関する法律」(昭和23年法律第178号）及びその改正法（平成17年法律第43号までのもの）(“The Public Holiday Law” (Law No. 178, 1948)) and the revised laws (up to Law No. 43, 2005). The Spring and Autumnal Equinox Days are determined by the government on February 1st in the previous year and may differ (as of May, 2008).

Adding holidays and anniversaries

- You can store up to 100 holidays and anniversaries. The national public holidays stored on the FOMA terminal at the time of purchase are not included in this number.
- You can store only 1 holiday or anniversary per day.

<Example: To add a holiday>

1 Schedule screen (p.285)▶i (New)▶“Holiday”

■ **To add an anniversary**
▶“Anniversary”

2 Select any item:

Date setting……Enters the date of the added holiday or anniversary.

Repeat……Selects the holiday or anniversary repetitions from “1 time/Annually (Y)”.

Edit holiday • Edit anniversary……Enters the details of the holiday or anniversary. You can enter up to 10 double-byte or 20 single-byte characters.

3 Set the respective items▶i (Finish)

Setting your favorite image as your user icon

You can set an image or animation stored in My picture as a user icon. Icons set as user icons are displayed as “1” to “5” in the icon selection display. When you set a user icon, the selected image or animation is displayed when the alarm notification is given.
- You can store up to 5 user icons.

1 Schedule screen (p.285)▶✉ (FUNC)▶“User icon setting”▶Select an item to store or change

■ **To clear all the user icon settings**
▶“Release all”▶“YES”

2 Select a folder

■ **To release the icon**
▶“Release this”▶“YES”
To release the icon which is not stored in the schedule, “YES” is not available.

3 Select an image
The selected image is previewed, then the screen returns to the user icon list after a while.

Checking scheduled event, holiday or anniversary

You can check scheduled event, holiday or anniversary.

1 Schedule screen (p.285)▶Select the date on which the scheduled event, holiday or anniversary is stored

The “Schedule list” screen appears.
In the list display, the stored contents and the settings are described with the following icons.

Schedule list

Function menu➡p.287

- Scheduled event (Scheduled event icon is displayed)
- Holiday
- Anniversary
- To Do list
- Alarm
- Daily repeating event
- Weekly repeating event on a specified day of the week
- Annual repeating event
- Scheduled event over a day (0:00 to 23:59)

2 Select an item

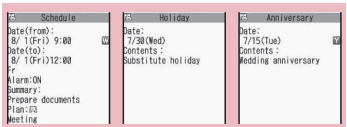

Schedule detail　Holiday detail　Anniversary detail

Function menu➡p.287

Schedule list screen (p.287)/ FUNC Schedule/Holiday/Anniversary detail screen (p.287)

New……“Adding schedule entries”→p.285
“Adding holidays and anniversaries”→p.286

Edit……Edits the scheduled event, holiday or anniversary.

Copy……Copies scheduled event, holiday or anniversary. When the copied entry has a repeat setting, the repeat setting is released when the entry is pasted.

Icon display……Selects an icon and displays scheduled event, holiday or anniversary by icon. Repeating scheduled events (D or W) are displayed as a single item.

User icon setting→p.286

Switch To Do list……Switches to the To Do list screen (p.288).

Release secret[*1]……Changes the data stored in the Secret mode/Secret data only mode to the normal data. →p.103

Compose message[*1*2]→p.156

Attach to mail[*1*2]……Composes an i-mode mail with the schedule attached.

Add shortcut→p.94

iC transmission[*1]→p.259

Send Ir data[*1]→p.258

iC trans. all→p.260

Send all Ir data→p.258

Copy to microSD[*1]→p.248

Delete……Selects the deleting method from “Delete this/ Delete selected/Delete all/Delete past”.
“About multiple-choice”→p.38
- When “Delete past” is selected, all the entries before the displayed data are deleted.
- When “Delete all/Delete past” is selected, select the item from “Schedule/Holiday/Anniversary/All”.

*1: Only available for Schedule
*2: Unavailable when 2in1 is set to B mode

Adding To Do List Entries

<To Do list>

You can manage your schedule by adding events to To Do list. You can also set alarms for events.

- You can set from January 1, 2004 to December 31, 2037.

Adding/editing entries

- Up to 100 entries can be stored.
- You must enter “Contents”. You cannot store an To Do list entry with no “Contents”.
- To Do list alarms →p.289

<Example: To add an entry>

1 MENU ▶“LIFEKIT”▶“To Do list”

The “To Do list” screen appears.

To Do list

Function menu➡p.288

2 ✉ (FUNC)▶“New”

■ **To edit an entry**

▶✉ (FUNC)▶“Edit”

Function key [i] displays (New) when no entry is stored and (Edit) when any is stored.

3 **Select any item:**

Edit To Do list……Enters the contents for the entry. You can enter up to 100 double-byte or 200 single-byte characters.

Due date……Sets the due date for an entry.

- **Enter date**……Enters the date and time.
- **Choose date**……Selects a date from the calendar, then enters the time.
- **No date**……No due date is set.

Priority……Selects the priority for the entry from “ H / L /None”.

Category……Selects a category of the entry from “None/Personal/Holiday/Travel/Business/Meeting”.

Alarm……Specifies the alarm notification settings used when the due date is reached from “ON/ON/Set time (01 to 99 min.) /OFF”.

Alarm tone……Selects the alarm tone from clock alarm tone or folders of melody, i-motion, music, etc.

Completion date*……Sets the completion date for an entry.

- **Enter date**……Enters the date.
- **Choose date**……Selects a date from the calendar.
- **No date**……No completion date is set.

* : Available only when an existing stored entry with a “Status” of “Completion” is edited.

4 **Set the respective items▶[i] (Finish)**

NOTE

- When set to “ON/Set time”, the alarm notification is given only at the set time before the To Do list event (01 to 99 minutes in advance). The alarm notification is not given at the date and time set for the To Do list event.

FUNC To Do list screen (p.288) /To Do list detail screen (p.289)

New • Edit →p.288

Switch schedule……Switches to the schedule screen (p.285).

Change status……Selects an entry status from “Plan/Acceptance/Request/Provisional plan/Confirmation/Denial/Completion/Substitution”.
When you select “Completion”, set the completion date.

Category display*1……Selects entries from “All/None/Personal/Holiday/Travel/Business/Meeting”, and displays them by category.

Sort/Filter*1……Sorts entries in a specified order or displays only the specified events with the filter function.

Add shortcut*1 →p.94

Attach to mail*2……Composes an i-mode mail with the entry attached.

iC transmission →p.259

Send Ir data →p.258

iC trans. all*1 →p.260

Send all Ir data*1 →p.258

Copy to microSD →p.248

Delete……Selects the deleting method from “Delete this/Delete selected*1/Delete completed*1/Delete all*1”. “About multiple-choice” →p.38

- When “Delete Completed” is selected, all the completed entries are deleted.

*1: Available only for the To Do list screen
*2: Unavailable when 2in1 is set to B mode

Checking entries

1 To Do list screen (p.288)▶Select an entry

The “To Do list detail” screen appears.

Shows the entry status. The blue icon turns into red when the specified day has elapsed.

Shows the priority.



To Do list

Function menu➡p.288

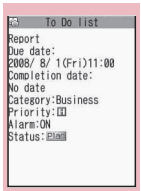

To Do list detail

Function menu➡p.288

Setting the Alarm Mode

<Alarm setting>

You can select either “Operation preferred” or “Alarm preferred” as the alarm notification setting for “Alarm”, “Schedule”, “To Do list” or “1Seg booking program”.

- 1Seg timer recording alarm works according to “Priority” set at the time of setting timer recording.

1 MENU▶“SETTINGS”▶“Clock”▶“Alarm setting”▶“Operation preferred” or “Alarm preferred”

When set to “Operation preferred”, the alarm is given only when the standby screen is displayed. When set to “Alarm preferred”, the alarm is given even when operating the FOMA terminal or during talking.

Alarm notification actions

When you set an alarm

After setting the alarm notification in “Alarm”, “Schedule”, “To Do list”, “1Seg booking program” and “1Seg timer recording” the icon appears on the standby screen.

■ **Icon display on the standby screen**

“ ” appears and turns to “ ” on the specified day.

When the specified time is reached

Alarm for each function is given as shown in the **Table 1** (p.290).

- When you set i-motion to the alarm, the FOMA terminal notifies the alarm with the movie and the voice (the animation during the alarm notification may be changed depending on the icons and categories you set).

NOTE

- The volume of the “Schedule” and “To Do list” alarms is determined by the “Phone” setting in “Ring volume”.
- The volume for the Clock Alarm Tone during a call is same as “Volume” setting level.
- The alarm tone during a call is not played in Snooze even when the Snooze setting is set to “ON”.
- Even if an i-motion is set in the “Alarm tone” setting, the alarm is notified with the Clock Alarm tone and the animation for the specified icon and category when i-motion cannot be activated such as during a call.
- Illumination alarm works according to “Schedule/ Alarm” under “Illumination set” for “Alarm”, “Schedule”, “1Seg booking program” and “1Seg timer recording”, and “To Do” under “Illumination set” for “To Do list”.

<Alarm notification priority sequence>

- If “Alarm”, “Schedule”, “To Do list”, “1Seg booking program” and “1Seg timer recording” alarms are set at the same time, alarm priority is assigned as follows:
  ①Alarm ②1Seg timer recording ③To Do list ④Schedule ⑤1Seg booking program
  If alarm notification is failed, the “ (Missed alarm)” or “ (Missed program)” shortcut icon appears on the standby screen. → p.290

To stop the alarm tone

■ **Alarm**

When the Snooze setting is set to “OFF”
Pressing any key stops the alarm tone and the animation/i-motion. Pressing any key again emits the release tone “pipip” and the display disappears.
When the Snooze setting is set to “ON”
Pressing any key stops the alarm tone and the animation/i-motion, an alarm message “Snooze...” appears, then the alarm is notified again in the set ringing interval (minutes). Pressing while “Snooze...” appears emits the release tone “pipip” and the snooze is canceled.

Continued on next page

■**Other alarm tones**
Pressing any key stops the alarm tone, freezes the animation or i-motion and the alarm message remains displayed. Pressing any key again clears the alarm message (When “Activate TV w/ alarm” is set to “OFF” for 1Seg booking program). However, if you press the side key when the FOMA terminal is folded, the alarm notification display is not cleared.

■**If you receive a call during alarm notification**
Alarm notification stops and the FOMA terminal receives the call. The “Alarm” Snooze setting is also canceled.

Checking alarm details when notification fails

If the alarm notification fails, the “ (Missed alarm)” or “ (Missed program)” shortcut icon appears on the standby screen. You can check the details of the missed alarm (Missed alarm info) from the shortcut icon.

1 On the standby screen▶■▶Select “ (Missed alarm)” or “ (Missed program)”
The Missed alarm info appears.
■ **To clear the shortcut icon**
▶CLR (1 second or longer)
Once you clear the shortcut icon, you can no longer check the missed alarm information.

2 Check the details
The standby screen reappears by pressing CLR, and the shortcut icon disappears.

[Table 1] Alarm notification actions

Status	Alarm	Schedule/To Do list/1Seg booking program/ 1Seg timer recording
On standby screen using i-mode/sending or receiving mail*	Notifies you the alarm with the operation you set. Animations appear on the display.	The alarm tone rings repeatedly about 5 minute. Animations appear on the display. For 1Seg timer recording, alarm sounds for about 2 seconds, one minute before start time. A confirmation screen appears, then the 1Seg screen appears.
When Power is OFF	The setting of “Auto power ON” is applied. When you select “OFF” in “Auto power ON”, the shortcut icon does not appear after the FOMA terminal is turned on.	The alarm is not notified. The shortcut icon does not appear after the power is turned on. 1Seg timer recording does not start if the power is off about one minute before start time.
During a call*	The alarm tone rings through the FOMA terminal earpiece. Animations appear on the display.	
Earphone/microphone is connected	Alarm notification is the same as for the “Standby screen displayed”. The alarm tone sounds from the earphone or speaker according to the “Headset usage setting”.	
Dial lock/Omakase Lock is set	The alarm is not notified. The shortcut icon appears after each lock is released. 1Seg timer recording does not start if locks are not released about one minute before start time.	
Original lock is set	Alarm, Schedule and To Do list alarms do not work. The shortcut icons appear. 1Seg booking program/1Seg timer recording alarms work.	

* : Operations when “Alarm preferred” is set. When “Operation preferred” is set, the “ (Missed alarm)” or “ (Missed program)” shortcut icon appears on the standby screen.

Storing Your Own Name and Image <My Profile>

You can store your own personal information such as your name, home phone number and e-mail address. Stored personal information provides the FOMA terminal with a way of confirming that you are the owner and can also be quoted in the Character entry (edit) screen.
- You cannot change or delete the FOMA terminal’s own phone number.
- Items other than Own number are stored on the FOMA terminal. If you insert another FOMA card (UIM), the data stored on the FOMA terminal are displayed.

Displaying My Profile

When this function is activated, it displays only your name, the FOMA terminal’s own phone number and the first e-mail address.

1 MENU▶“LIFEKIT”▶“My Profile”
The “My Profile” screen appears.
If you have stored your personal data such as your home phone number or address, you can display all the data by selecting “Display all data” from the function menu and entering security code.

My Profile

Function menu➡p.291

NOTE

- When 2in1 mode is in Dual mode, you can switch the informaitno of Number A and Number B to press [ ] in the My profile screen.
- Reset My Profile in B mode when you exchange the FOMA card (UIM) while using 2in1. →p.291

FUNC My Profile screen (p.290)

Edit→p.291

Display all data·····Use [ ] to check the details.

Copy name·····Copies the name stored in My Profile. The copied name can be pasted into input and other screens.→p.308

Copy phone number*1·····Copies the currently displayed phone number. The copied phone number can be pasted into input and other screens.→p.308

Attach to mail*2·····Composes an i-mode mail with the My Profile data attached.

iC transmission→p.259

Send Ir data→p.258

Copy to microSD→p.248

Big font⇔Standard font·····Switches the character size of the displayed name.→p.93

Check 2in1*3·····Obtains information on Number B and stores it in the My Profile screen of Number B.

Reset·····Resets (deletes) My Profile except for your Own number and restores the default settings set at the time of purchase.

Delete phone No.*4·····Deletes the currently displayed phone number.

*1: Depending on the selected item, one of "Copy mail add./ Copy address/Copy birthday/Copy memorandums" appears.
*2: Available only when displaying all data. Unavailable when 2in1 mode is in B mode.
*3: Available only while My Profile screen of Number B in 2in1 is displayed.
*4: Depending on the selected item, one of "Delete mail add./ Delete address/Delete birthday/Delete memorandums/ Delete image" appears.

Storing My Profile

1 My Profile screen (p.290)▶[ ] (Edit)▶ Enter your security code

2 Select any item:

FN **Edit name Last**·····Enters your last name. You can enter up to 16 double-byte or 32 single-byte characters which include kanji characters, hiragana, katakana, alphabets, numbers, pictographs and N.

R **Edit reading Last**·····As the reading is entered automatically when you enter your last name, change it if necessary. You can enter up to 32 characters including single-byte katakana, alphabets, numbers, symbols and reading of the first name.

N **Edit name First**·····Enters your first name in the same way as your last name.

R **Edit reading First**·····As the reading is entered automatically when you enter your first name in the same way as your last name, change it if necessary.

Edit phone number·····Adds a phone number other than the FOMA terminal's own number and selects an icon. You can enter up to 26 digits for the phone number.
When you store a new phone number, the "<Not stored>" option appears in the My Profile edit screen. Select this option to store an additional phone number. Up to 3 phone numbers can be added.

Mail Address·····Enters the e-mail address and selects an icon. You can enter up to 50 single-byte alphabets, numbers and symbols.
If the mail address is not stored, you can acquire the set mail address from the i-mode Center automatically by selecting "Acquire Automatically" (the secret code is automatically retrieved when the secret code is stored in the mail address).
Once you have stored the first e-mail address, the "<Not stored>" option appears on the My Profile edit screen. Select this option to store an additional e-mail address. Up to 3 mail addresses can be stored.

Edit address·····Enters a zip code and address (prefecture/city/street/apartment name). Enter the 7 single-byte numbers for ZIP codes. You can enter up to 50 double-byte or 100 single-byte kanji characters, hiragana, katakana, alphabets, numbers and pictographs for the address other than the Zip code.

Enter birthday·····Enters the contact's birthday (year, month and day).
Any year from 1800 to 2099 can be set.

Continued on next page

Edit memorandums……Enters a memo (short note). You can enter up to 100 double-byte or 200 single-byte characters which include kanji characters, hiragana, katakana, alphabets, numbers and pictographs.

Set image……Shoots a still image with the camera or select an image form My picture to display it on the My Profile. Select “Release this” to release the set still image.

3 Set the respective items▶[i] (Finish)

NOTE

- When you change your own e-mail address or store a secret code, also change the mail address of this function (it is not changed automatically).
- If your birthday is stored, the illumination of Incoming Call, etc. works in the birthday pattern and color on birthday.

Quoting the personal information (My Profile)

Storing personal information allows you to identify your FOMA terminal and quote the stored information on the Character entry (edit) screen or i-mode.

<Example: To quote personal data on the i-mode site>
The items to select vary depending on the site.

1 Display a site to quote the personal information▶Select “Quote My Profile”▶Enter your security code

The list of quotable items appears.

■ **To select items to quote**
▶Deselect checkboxes of items not to be quoted with [*]

■ **When the 2in1 is in Dual mode**
▶“My Profile A” or “My Profile B”

2 [i] (Finish)

The items to be quoted are entered automatically.

NOTE

- When you quote a street address on the Text entry or i-mode site, a space may be entered between items.
- When you quote the My Profile, the data except the items entered automatically are not quoted.

Recording Your and the Other Party’s Voice <Voice memo>

There are 2 types of Voice memo. “Voice memo(in-call)” allows you to record the other party’s voice during a voice or videophone call. “Voice memo” allows you to record your own voice while the standby screen is displayed.

- You can record either 1 voice memo(in-call) or 1 voice memo, which overwrites the existing memo.
- You can record voice up to about 20 seconds.
- For information on playing and erasing recorded voice memo →p.65

Recording the other party’s voice during a call

1 During a call▶[ ] (▼メモ) (1 second or longer)

The FOMA terminal beeps and recording begins. The FOMA terminal beeps 5 seconds before the recording time (about 20 seconds) ends. When recording ends, the FOMA terminal gives a short double-beep and the “Recording” display returns to the in-call screen.

■ **To stop recording in progress**
▶[■] (Stop) or [ ] (▼メモ) (1 second or longer)

Recording your own voice in standby mode

1 [MENU]▶“LIFEKIT”▶“Voice memo”▶“YES”▶Record the voice memo

When the FOMA terminal beeps, begin speaking into the mouthpiece. The FOMA terminal beeps 5 seconds before the recording time (about 20 seconds) ends. When recording ends, the terminal gives a short double-beep and the “Recording” screen changes back to the “LifeKit list” screen.

■ **To stop recording in progress**
▶[■] (Stop)

NOTE

- When you receive a call, the “Alarm”, “Schedule”, “To Do list”, “1Seg booking program” or “1Seg timer recording” alarm is notified or operate other function while recording a voice memo, the recording stops.

<Voice memo>

- You cannot record voice while a videophone call is on hold or while you are using a Function menu option.
- When 2in1 is in A mode or B mode and you record the other party’s voice received at the unused number, “★” does not appear on the Play/Erase msg. screen and you cannot play the voice memo.

Recording and Playing Alarm Tones and On Hold Tones

<Voice announce>

You can record the voice and set it as original ring tone or answer message.

- You can make 2 voice recordings: “Voice announce 1” and “Voice announce 2”.
- You can record voice up to about 15 seconds.
- “★” appears in the “Voice announce” screen when “Voice announce” is recorded.
- Voice recordings made using this function can be set in the following functions:
  - Ring tone (voice call, videophone call, mail, MessageR/F, Call setting w/o ID, Multi Number, Number B of 2in1)
  - Alarm tone (Alarm, Schedule, To Do list, Clock Alarm Tone, 1Seg booking program, Notice designate calls)
  - On hold tone
  - Answer message (Record message)

Recording voice

1 MENU▶“LIFEKIT”▶“Voice announce”▶Select an item▶“YES”▶Record the voice

Speak into the mouthpiece. The FOMA terminal beeps 5 seconds before the recording time (about 15 seconds) ends. When recording ends, the FOMA terminal gives a short double-beep and the “Recording” screen returns to the previous screen.



Voice announce

Function menu➡p.293

■ **To stop recording in progress**

▶■ (Stop)

NOTE

- When you receive a call, the “Alarm”, “Schedule”, “To Do list”, “1Seg booking program” or “1Seg timer recording” alarm is notified or operate other function while recording a voice, the recording stops.

Playing voice announce recordings

1 MENU▶“LIFEKIT”▶“Voice announce”▶Select an item

■ **To stop playback in progress**

▶■ (Stop)

FUNC Voice announce screen (p.293)

Record……Records voice.

Play……Plays the recorded voice.

Erase……Erases the recorded voice.

Checking Call Times and Charges

<Call data>

You can check the previous or total call time/charge for voice/videophone calls, etc.

- The following items can be checked.

Item	Displayed contents
Last call duration	Displays the duration of the last call
Last call cost	Displays the charge for the last call (voice calls, videophone calls and 64K data communication) *
Total calls duration	Displays the total duration of all the calls made since the last reset (voice calls, videophone calls and 64K data communication) *
Total calls cost	Displays the total calls cost of all the calls made since the last reset (voice calls, videophone calls and 64K data communication)
Total duration reset	Displays the date and time of the last call reset
Total cost reset	Displays the date and time of the last charge reset

* : “Digital (AV)” for videophone calls and “Digital (UD)” for 64K data communication are displayed.

- When you switch between voice call and videophone call, the total call time of voice and videophone calls is displayed in the last duration area, and the charges of voice and videophone calls are displayed separately in the last charge area. The displayed charge may differ from the actual charge.
- The call time is displayed for both voice calls and digital calls and communication (videophone calls and 64K data communication). Times for both calls made and received calls are counted.
- Charges are only displayed for dialed calls. However, if you call at toll free number such as directory assistance (104), “¥0” or “¥✻✻” is displayed.
- As charges are accumulated on the FOMA card (UIM), the accumulated charge (starting from December 2004) is displayed on the Charge line when you change your FOMA card (UIM).
  * Charges are accumulated on FOMA cards (UIM) in FOMA terminals released before the 901i series, but they cannot be displayed.
- You can reset displayed call times and charges.

Continued on next page

- Displayed call times and charges may differ from the actual figures. Consumption tax is not included in the call charges.
- If you have subscribed to the 2in1, the total amount of Number A/B appears as the Total calls duration and Total calls cost.

1 MENU▶"SETTINGS"▶"Call time/Charge"▶"Call data"

NOTE

- If the last or total voice or digital calls duration exceeds "199h59m59s", the call count returns to "0s".
- The time and charge of i-mode or packet communication, and the charge of sending Chaku-moji are not counted. To check i-mode communication charges, see the "Mobile Phone User's Guide [i-mode] FOMA version".
- The time taken to pick up a call, or for the other party to pick up a call, and the time for switching a voice call and a videophone call are not counted.
- When the FOMA terminal is turned off, the duration and charge for the last call reverts to "0s" and "¥✻✻" respectively.
- Turning the FOMA terminal off does not affect the total duration and charge.
- The international call charge for WORLD CALL is counted. For other international call services, the charge is not counted.

Resetting the total call time and total call charges <Reset total>

You can reset the Total calls duration or Total calls charge displayed in the "Call data" to zero.

1 MENU▶"SETTINGS"▶"Call time/Charge"▶"Reset total"▶Enter your security code▶Select any item:

Reset total duration……Resets the accumulated duration.

Reset total cost……Enters PIN2 code and resets the accumulated charge.
PIN2 code→p.100

Resetting charges automatically <Auto reset total cost>

You can set the FOMA terminal to reset the Total calls cost displayed in "Call data" to zero automatically on the 1st day every month, at 0:00.

1 MENU▶"SETTINGS"▶"Call time/Charge"▶"Auto reset total cost"▶Enter your security code

2 "Auto reset"▶"ON"▶Enter PIN2 code
PIN2 code→p.100

■ Not to set Auto reset
▶"OFF"

NOTE

- Setting Auto reset total cost to "ON" and changing the month in "Set main time" resets the Total calls cost.
- The Auto reset total cost is reset to "OFF" when:
  - The FOMA terminal is turned on without the FOMA card (UIM) inserted
  - CLR is pressed on the PIN2 code input screen which appears when the FOMA terminal is turned on
  - The PIN2 code is locked→p.100
  - An error occurs on the FOMA card (UIM)

Setting the Upper Limit of Charge to Notify the Alarm <Notice designate calls>

When accumulated charge displayed at "Call data" exceeds the cost limit set in this function, you are notified on the standby screen or with alarms.

- The alarm notification works only once when the accumulated charge exceeds the set cost limit.
- Exceeding the limit does not prevent you from making a call.

1 MENU▶"SETTINGS"▶"Call time/Charge"▶"Notice designate calls"▶Enter your security code

2 Select any item:

Cost limit setting……Sets the cost limit between 10 and 100,000 by 10 units.

Notify setting

Notify cost limit……Specifies whether to notify the cost limit.

Alarm tone……Selects an alarm tone.

Volume……Sets the alarm tone volume with ▲▼.

3 Set the respective items▶i (Finish)

NOTE

- The charges for i-mode or packet communication, and the charges for sending Chaku-moji are not included in this function. To check i-mode communication charges, see the "Mobile Phone User's Guide [i-mode] FOMA version".

● Alarm notification actions

After ending a call, the function notifies you with the following methods when accumulated charges exceed the cost limit.

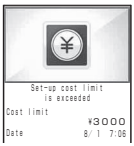

■When Notify cost limit is set to "ON" and alarm tone is set to other than "OFF"

When the accumulated charge exceeds the preset cost limit, the alarm tone sounds for about 5 minutes starting 3 seconds after finishing the call, and the notification screen appears. To stop the alarm tone, press any key. After the notification, pressing CLR or ☎ displays "¥" (Notice designate calls) shortcut icon on the standby screen.

■When Notify cost limit is set to "ON" and alarm tone is set to "OFF"

When the accumulated charge exceeds the preset cost limit, "¥" (Call billing) shortcut icon appears on the standby screen.

● Checking details of "¥" (Notice designate calls)

The details of Notify cost limit is displayed by selecting "¥ (Notice designate calls)" shortcut icon on the standby screen.

1 On the standby screen▶■▶Select "¥ (Notice designate calls)"▶Enter your security code

The details of "Notice designate calls" are displayed.

2 Check the details▶■ (OK)

The standby screen reappears and "¥" (Notice designate calls) disappears.

Using the FOMA Terminal as Calculator <Calculator>

You can use the FOMA terminal to perform 4 different types of arithmetical calculations (addition, subtraction, multiplication and division).

- The number can be displayed up to 10 digits. Below the decimal point, up to 9 digits can be displayed.
- If the result of a calculation exceeds 10 digits, ".E" is displayed.

1 MENU▶"LIFEKIT"▶"Calculator"▶Calculate

■ To calculate "23 + 57"

2 3 + 5 7 =

2 3 ▷ 5 7 ■

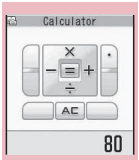

Calculator

Function menu➡p.295

■ To use negative numbers in a calculation

To calculate using negative amounts, simply insert "-" before the first digit.

− 2 3 + 5 7 =

◁ 2 3 ▷ 5 7 ■

NOTE

- CLR (AC or C) can be used in the following cases.
  - After pressing +, −, ×, ÷, =, AC is displayed. You can start calculation from the beginning by pressing CLR.
  - While inputting numbers or decimal points, C is displayed. You can delete wrong numbers or decimal points by pressing CLR.

FUNC **Calculator screen (p.295)**

Add shortcut→p.94

Composing Text Memo <Text memo>

You can write short messages in the form of text memos. You can paste a composed text memo into your schedule or mail message.

- You can store up to 10 text memos.
- You can enter up to 256 double-byte or 512 single-byte characters for a text memo.

1 MENU▶**"LIFEKIT"**▶**"Text memo"**

The "Text memo" screen appears.

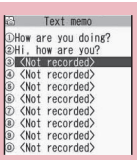

Text memo

Function menu➡p.296

2 **Highlight the item to store or change▶ (Edit)**

3 **Write the memo**

FUNC Text memo screen (p.296)

Edit……Edits the text memo.

Compose message→p.156

Edit schedule→p.285

Add shortcut→p.94

iC transmission→p.259

Send Ir data→p.258

iC trans. all→p.260

Send all Ir data→p.258

Copy to microSD→p.248

Text memo info……Displays the creation date/time and category.

Category……Selects a category to categorize from "None/Personal/Holiday/Travel/Business/Meeting".

Delete……Selects the deleting method from "Delete this/Delete selected/Delete all".
"About multiple-choice"→p.38

Using Dictionaries <Dictionary>

- You can use dictionaries from the function menu of each text entry screen.→p.297

1 MENU▶**"LIFEKIT"**▶**"Dictionary"**

The "Dictionary" screen appears.



Dictionary

Function menu➡p.297

2 **Select any item:**

Enter word……Enters a word. You can enter up to 32 double-byte or 64 single-byte characters.

Text reader……Enters a word from the Text reader.→p.132

Reference history……Searches the dictionary using the history of previously retrieved words.
"Using reference history"→p.297

3 **Select the dictionary type**

The "Reference result (list)" screen appears. When the searched word is not in the dictionary, the cursor is placed at the similar word.

■ **To display the previous or next list**

▶Reference result (list) screen▶

Reference result (list)

Function menu➡p.297

4 **Select a word**

The "Reference result (detail)" screen appears.

■ **To display the previous or next word**

▶Reference result (detail) screen▶

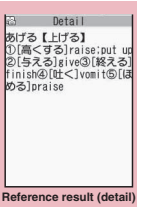

Reference result (detail)

Function menu➡p.297

FUNC Dictionary screen (p.296)

Add shortcut→p.94

FUNC Reference result (list/detail) screen (p.296)

Change window*·····Switches the screen between Reference result and Text edit (available only when it can be switched).

Copy·····Copies the word.
List screen: Copies the word in 【 】of the reference result for Japanese-English or Japanese dictionary, and copies the word of the reference result for English-Japanese dictionary
Detail screen: Copies the text by selecting the range.
The copied word can be pasted into text entry screens, etc.
→p.308

Search from detail*·····Search for another word from the reference result (detail) screen.
▶■ (Start) on the first character of the string▶Use ⊕ to highlight to the end of the string and press ■ (End)▶Select the dictionary type▶Select a word

Refer dic.·····Searches for the retrieved word in another dictionary.

Refer edit*·····Edits text referring to the Reference result (available only when Refer edit is available).
"Divided" screen→p.303

* : Available only for the reference result (detail) screen.

Using reference history

1 Dictionary screen (p.296)▶"Reference history"
The "Reference history" screen appears.

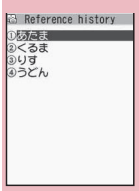

Reference history
Function menu➡p.297

2 Select a word

FUNC Reference history screen (p.297)

Delete this • Delete all·····Deletes one or all reference history (histories).

Using dictionaries from other functions

Select "Refer dic." from the respective function menus in the following screens:
- The text edit screen, mail detail screen or message screen for i-mode mail
- Pages on sites and while a screen memo is displayed

■ When activating a dictionary from the text edit screen, mail detail screen or message screen for i-mode mail
You can select "Enter word", "Select area" or "Reference history".
Selecting "Select area" allows you to specify the range of the words you want to look up.

■ When you activate the dictionary from a site or from a screen memo
You can select "Enter word", "Site refer (enter)" or "Reference history".
Selecting "Site refer (enter)" allows you to enter the word you want to look up while referring to a screen memo or a page on a site.

● Guide to the dictionary reference screen

When you select "Refer edit" or "Site refer (enter)", the display is split into top and bottom halves.
Each time you select "Change window" from the function menu, the window you can use switches between ① and ②.

■ When you selected "Refer edit" from the Reference result (detail) screen
①Dictionary detail screen
②Text edit screen
③Separation line
To exit the dictionary, select "Quit dic." from the function menu or switch to window ① and press ⏻ (End).

■ When you selected "Site refer (enter)" from a screen memo or a page on a site
①Site page or screen memo screen
②Search term entry screen
③Separation line
Enter the search term and press ■ (Set). The dictionary selection display appears with the search term entered.

Using Conversation Help Useful Overseas <TALKMAN>

TalkManFlash offers content to see conversation help useful overseas by text and voice. Select a language to see translated text and check the pronunciation.

© 2008 SCEI

- English and Chinese conversations are stored at the time of purchase although the voice is not available. Download voice-compatible content including English, Chinese, French, Spanish, German and Korean from “PlayNow” by SO (The site is in Japanese):
“iMenu”▶“メニューリスト” (Menu List)▶“ケータイ電話メーカー ” (Mobile phone manufacturer)▶“PlayNow by SO”
Alternatively, scan the QR code on the right and select the displayed URL to access the site.

Using an Earphone/ Microphone with Switch <Earphone/microphone with switch>

You can make or receive a call by using a flat-plug earphone/microphone with switch (optional).

- Use the Earphone Plug Adapter for External connector terminal to connect a flat-plug stereo earphone set (optional) or flat-plug earphone/microphone with switch (optional) to the FOMA terminal. →p.25
- The tone of the switch operation for receiving or ending the call sounds regardless of the “Keypad sound” setting.
- Do not wrap the FOMA terminal with the cord of the flat-plug earphone/microphone with switch. This may interfere with signal reception. Also, if you move the cord of the flat-plug earphone/microphone with switch closer to the FOMA terminal while talking, you may hear the noise.
- You can make and receive a phone call with the FOMA terminal folded.

Setting the switch operation <Headset sw to dial>

You can specify whether to make a call when you hold down the switch for 1 second or longer.

- You can set phone numbers stored in the phonebook of the FOMA terminal (Phone) to this function.

1 MENU▶**“SETTINGS”▶“Dialing”▶“Headset sw to dial”▶“Voice call” or “OFF”**

2 **Display a phone number you want to set on the phonebook detail screen▶■ (Select)**
Searching the phonebook →p.73

NOTE

- If the phone number set in this function is not available due to the 2in1 setting, you cannot dial using a flat-plug earphone/microphone with switch.

Selecting a microphone when an earphone/microphone is connected <Select microphone>

You can select the microphone to use when a flat-plug earphone/microphone with switch (optional) is connected from the microphone of the FOMA terminal or the microphone of the earphone/microphone.

1 MENU▶**“SETTINGS”▶“External connection”▶“Select microphone”▶“Internal microphone” or “External microphone”**
When you connect earphones without a microphone, select “Internal microphone”.

NOTE

- When “Select microphone” is set to “Internal microphone”, the microphone sensitivity becomes the same as the setting when handsfree is set to ON. When an earphone/microphone is connected, you do not need to talk with your mouth close to the mouthpiece.

Using the switch to make calls

1 Press the switch for 1 second or longer on the standby screen

The FOMA terminal makes a call to a phone number set at “Headset sw to dial”.

■ **To dial by entering a phone number**

▶Enter a phone number▶Press the switch for 1 second or longer

You can also make a phone call from the phonebook, Redial/Dialed calls/Received calls.

2 When you finish talking, hold down the switch for 1 second or longer

The FOMA terminal emits a short double-beep and ends the call.

Using the switch to accept calls

1 While ringing▶Press the switch

The FOMA terminal emits a short beep and answers the call.

2 When you finish talking, hold down the switch for 1 second or longer

The FOMA terminal emits a short double-beep and ends the call.

NOTE

- If you have subscribed to the “Call Waiting”, you can answer a call that comes in during another call by pressing the switch on the flat-plug earphone/microphone with switch. You can also switch calls by pressing the switch for 1 second or longer. However, pressing the switch does not end the current call.
- Do not repeatedly press and release the switch on the flat-plug earphone/microphone. The FOMA terminal may answer the call automatically.

Automatically receiving calls with an earphone/microphone connected

<Auto answer setting>

When a flat-plug earphone/microphone with switch (optional) is connected, this function allows you to answer received calls automatically without pressing the switch.

- You cannot answer the call automatically during a voice or videophone call.

1 MENU▶“SETTINGS”▶“External connection”▶“Auto answer setting”▶“Phone” or “Videophone”▶“ON”▶Enter the ring time (001 to 120 in 3 digits)

■ **To disable the setting**

▶“OFF”

NOTE

- When answering a videophone call automatically, your substitute image is displayed to the caller.
- Connecting an earphone/microphone with switch while the FOMA terminal is ringing does not answer a call automatically, but removing it while the terminal is ringing answers a call automatically.

Resetting the Function Settings

<Reset settings>

You can reset the FOMA terminal’s function settings to the defaults set at the time of purchase.

Do not mistake “Initialize” for “Reset settings”. If you perform “Initialize”, you will lose all the data you have stored. →p.300

- For details on the functions that are reset, refer to “Menu Function List” (p.340).
- When the FOMA terminal is connected to an external device such as a PC, the setting of “USB mode setting” is not reset to the default setting.
- To reset the functions below to default, run Reset settings in each function:
  - i-mode settings (reset) →p.148
  - Reset mail settings →p.178
  - Reset Full Browser settings →p.221

1 MENU▶“SETTINGS”▶“Other settings”▶“Reset settings”▶Enter your security code▶“YES”

NOTE

- “3G/GSM setting” may not be reset to default depending on the network condition.

Resetting to the Default Settings of the FOMA Terminal <Initialize>

This function deletes stored data and returns the settings for the FOMA terminal's functions to their defaults set at the time of purchase.

"Initialize" deletes all of your important data including phonebook, mail, downloaded images or melodies, i-αppli, PDF data, still images and movies shot with the camera (even protected data).

- Pre-installed data is not deleted.
- For more information on the restored default settings, see "Reset settings".
- "Initialize" resets the functions reset by "Reset settings" and the functions and data listed below to their default settings set at the time of purchase.

- Mail data*1
- Mail folders*1
- Template*1
- i-mode settings
- URL history
- Additional service
- Multi Number (Phone number setting)
- FOMA terminal (Phone) Phonebook*2
- My Profile*1
- Software list
- i-αppli Auto-start set
- i-αppli action info
- Call data
- Kisekae Tool
- Pause dial
- Security code
- Learning record (Clear learned under Character input set)
- To Do list
- Schedule
- Play/Erase msg. (Record message*1/Voice memo (in-call)*1/Voice memo)
- Play/Erase VP msg.*1
- Exchanging history (Data security service)
- Data stored by the user*3
- The operating history for the menu display setting
- Choku-Den*2
- The software updating information
- Music play history information
- Programs of the Music&Video Channel
- Bookmark
- Screen memo
- Enter URL
- Go to location
- Chaku-moji sent messages record
- Full Browser settings
- i-Channel setting
- Channel list
- Group setting*2
- Received calls*1
- Redial/Dialed calls*1
- Received address*1
- Sent address*1
- Mail member*1
- Own dictionary
- Download dictionary
- Text memo
- External IC card information (IC card authentic.)
- Voice announce
- Mail Setting*1
- Message
- Text reader
- Bar code reader
- Reference history of the dictionary
- Chara-den
- TV link
- Channel list
- Booking program list/ Timer recording list
- (1Seg) Display setting
- Recording result
- PDF data
- Deco-mail pictographs

*1: All data are initialized even if some data are not displayed in 2in1 A mode or B mode.
*2: All the data of A mode/B mode is reset regardless of the 2in1 mode.
*3: Stored data, downloaded data, i-αppli, still images or movies shot with the camera, etc.

- Group names and folder names, etc. that you have edited revert to their default names.
- The secret data or data in Secret folder are also deleted.
- Ensure that the battery is fully charged before initializing the FOMA terminal. It may not be possible to initialize the FOMA terminal if the battery is low.
- Do not turn the FOMA terminal off while initializing.
- You cannot use any other functions while the FOMA terminal is being initialized. Also, you cannot receive voice or videophone calls or mails.

- Performing "Initialize" restores your FOMA terminal to the default settings.
  It is recommended to back up the data stored on the FOMA terminal by taking a note or using DOCOMO keitai datalink (p.329) or the microSD card.

1 MENU▶"SETTINGS"▶"Other settings"▶"Initialize"▶Enter your security code

2 "YES"▶"YES"

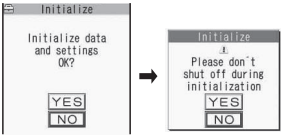

Initialization begins.
Initialization may take several minutes.
When initialization ends, the FOMA terminal is automatically restarted and displays the Software Update descriptions.

■ If initialization is not completed correctly
▶"OK" after turning the power on
The initialization starts again.

NOTE

- When the FOMA terminal is initialized, the i-Channel ticker is not displayed. The ticker is turned on again automatically when the information is updated automatically or when ch is pressed to receive the latest information.
- Settings of data communication which uses a PC are not initialized.
- The data of the Osaifu-Keitai i-αppli and the data on the IC card are not deleted.

Character Entry

Character Entry 302
Entering Text Using 5-Touch 5-touch 304
Modifying/Storing Common Phrases ..... Store common phrases 308
Copying, Cutting and Pasting Text 308
Entering Text Using Kuten Codes ..... Kuten code 309
Storing Frequently Used Words ..... Own dictionary 309
Resetting the Learning Record ..... Clear learned 310
Using Download Dictionaries ..... Download dictionary 310
Entering Text Using 2-Touch 2-touch 310

For the “Kuten code list”, refer to the PDF format “Kuten Code List” in the provided CD-ROM.
To view the PDF format “Kuten Code List”, Adobe® Reader® is required. If this software is not installed on your PC, install the Adobe® Reader® in the CD-ROM. Refer to the “Adobe Reader ヘルプ” (Help of the Adobe Reader) for details on how to use it.

Character Entry

The FOMA terminal has 2 character entry mode: “5-touch” and “2-touch”. This section explains the character entry mainly using the “5-touch input”.

- Refer to the following sections for the settings, characteristics and method of each character entry mode.
  “Setting the character entry mode”→ p.303
  “Entering Text Using 5-Touch”→p.304
  “Entering Text Using 2-Touch”→p.310

Character entry (edit) screen

The Character entry (edit) screen is made up of ① text entry area, ② information display area, and ③ list display area. The descriptions of icons displayed in each area are as follows:

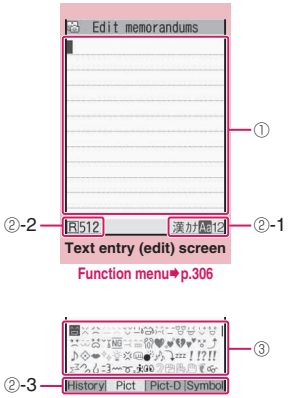

①Character entry area

Icon	Description
	Cursor (Text entry position)
	Line feed mark (Line break position)

②Information display area

②-1 Input mode display
Currently selected input mode highlights.
Displayed content varies depending on used input method.

- 区 also appears in Kuten mode.→p.309

5-touch

Display	Input mode
Aa	Single-byte alphabet
12	Single-byte number
漢	Kanji/Hiragana
ｶﾅ	Single-byte katakana
A	Double-byte alphabet
1	Double-byte number
カ	Double-byte katakana

2-touch

Display	Input mode
1/2	Single-byte
1/1	Double-byte
UC	Uppercase
LC	Lowercase

②-2 Character count display

Display	Input mode
R	Number of remaining bytes that can be entered (single-byte character: 1 byte, double-byte character: 2 bytes)
In	Number of characters that have been entered

②-3 Pictograph/Symbol type display
Type of listed pictographs/symbols.

Display	Input mode
History	Pictograph/Symbol input history
Pict	Pictographs
Pict-D	Pictograph D
Symbol	Symbols

③List display area
List of pictographs/symbols, conversion candidates, etc.

NOTE

- Even in single-byte mode, double-byte characters are entered in Kanji/Hiragana input mode.
- Pictograph D is Deco-mail pictograph that can only be entered on the Compose message screen, Edit header/signature screen or Edit Template screen.
- The number of characters that have been entered appears only in some functions, e.g. composing SMS.
- On the i-mode Message or Edit Template screen, if the number of characters that can be entered is exceeded, "－" (minus) appears.

Divided screen

Some screens, such as that for storing schedule entries while referring to the original message, are split into 2 windows displaying the function operation screen and the Character entry (edit) screen at the same time.

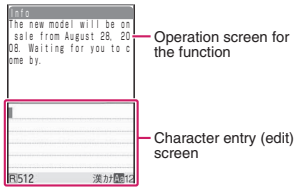

Saving schedule referring from i-mode

- The function operation screen and Character entry (edit) screen are displayed at the same time in the following cases:
  - Adding schedule entries while referring to an i-mode screen
  - Entering words to search by activating dictionaries from an i-mode screen
  - Editing text while referring to the results of a dictionary search

● Changing windows

When a function operation screen and the Character entry (edit) screen are displayed at the same time, select "Change window" from the function menu to switch between screen.

Setting the character entry mode

You can set the character entry mode you use from 2 character entry modes (5-touch/2-touch).

1 MENU▶"SETTINGS"▶"Other settings"▶"Character input set"▶"Input mode"▶Select input mode

NOTE

- You can change input modes using the function menu while entering text. →p.306

Switching the character entry size

You can select the character size on the character entry (edit) screen or Symbol/Pictograph entry screen from 4 types of "Small/Standard/Large/X-large".

1 MENU▶"SETTINGS"▶"Other settings"▶"Character input set"▶"CHG input size"▶Select the input size

Setting the conversion method

Set the conversion method for Kanji/Hiragana input mode.

- Prediction candidates are stored at the time of purchase.
- Using Prediction to input characters →p.304

1 MENU▶"SETTINGS"▶"Other settings"▶"Character input set"▶"Select conversion"▶Select conversion method

Prediction (default)·····Predicts a word for an entered character or following word for a selected word.

User conversion·····Converts the entire reading after entered.

NOTE

- You can change conversion methods using the function menu while entering text.

Entering Text Using 5-Touch

<5-touch>

You can enter 1 character by pressing a dial key for several times. For example, to enter “う”, the third character of the “あ column”, “あいうえお”, press 1 3 times.

- Refer to “Characters that can be entered using 5-touch” (p.350) for details on the character assignment.

Entering kanji/hiragana/katakana

Enter the readings in hiragana, then convert them into the character such as kanji, hiragana or katakana.

● Using Prediction to enter text

<Example: To enter “携帯電話”>

1 Character entry (edit) screen (p.302)▶ Set Kanji/Hiragana input mode

When “Kanji/Hiragana input mode (漢)” is not set, press i (Chrct) to switch the mode.

2 Enter a part of the reading

2 4 times

け

“け” is entered in the text entry area and predicted candidates appear.

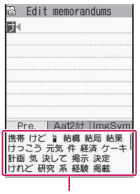

Predicted candidate list

3 ●▶Select a word

▶Select “携帯”

The selected words appears in the text entry area. Next predicted candidates which follows the selected word appears in the candidate list.

■ **When the candidates do not includes the word you want to enter**

▶CLR

Return to the reading entry. The predicted candidates change as you continue entering the reading.

■ **To convert temporarily**

▶ch (Convert)

User conversion list appears.→p.304

■ **To display alphanumeric-katakana candidate list or image-symbol candidate list**

▶✉ (◀tab) or i (tab▶)

Each candidate list appears.

■ **To confirm the hiragana**

▶● (Set)

4 ●▶Select next word

▶Select “電話”

NOTE

- Pictograph idioms appear in the candidate list depending on the entered reading.
  Pictograph idiom readings→p.355
- Use “Operation in item” to change operation modes to select word from candidate list.→p.305
- Conversion candidate list does not appear in the input mode other than Kanji/Hiragana input mode.
- A word entered once is added to the predicted candidate by the learning function. You can delete the added word by highlighting the word and pressing CLR for 1 second or longer.
  To delete all the learned predicted candidates, clear the leaned records of the word prediction with “Clear learned”.→p.310

● Using User conversion

<Example: To enter “健闘を祈る”>

1 Change the conversion method to “User conversion”

“Setting the conversion method”→p.303

2 Character entry (edit) screen (p.302)▶ Set Kanji/Hiragana input mode

When “Kanji/Hiragana input mode (漢)” is not set, press i (Chrct) to switch the mode.

3 Enter hiragana

2 4 times (け) 0 3 times (ん)
4 5 times (と) 1 3 times (う)
0 twice (を) 1 twice (い)
5 5 times (の) 9 3 times (る)

■ **If you press the wrong key**

▶Press CLR to delete the character

■ **If you press a key too many times**

▶#

The previous character assigned to that key appears.

■ **When the next character to be entered is assigned to the same key**

▶→ or wait for cursor to move automatically

Cursor moves and the following characters can be entered. The wait time can be set from the function menu.→p.306

■ **To confirm the hiragana**

▶● (Set)

4 ▶Convert entered text

The first syllable converts and highlights. The unconfirmed text is underlined (_).

■ If the conversion candidate is the desired kanji or katakana

▶● (Select)

The word is confirmed and the next phrase is highlighted.

■ If the conversion candidate is not the kanji or katakana you want

▶▶Select word

Select a word from the User Conversion Item. Hiragana and katakana are included in the User Conversion Item.

If the readings in the conversion range consists entirely of “あ”-level characters, numbers are also included in the conversion candidates. For example, entering 1 2 3 (あかさ) also shows the conversion candidate “123”.

■ To change the conversion range

▶Press ↔ to change the conversion range▶▶Select word

Candidates listed in the User Conversion Item change as the conversion range changes.

■ To display the alphanumeric-katakana conversion candidate list

▶CLR▶ (Aa12カナ)

Aa12カナ Conversion Item of alphanumeric-katakana candidates appears. For example, pressing 2 3 (かさ) (Aa12カナ) shows the conversion candidates such as “AD”, “23” or “カサ”.

For numbers of 2 to 4 digits which can be used as date (ex. 10/19) or time (ex. 10:19), such date and time are also displayed as conversion candidates.

NOTE

- If the User Conversion Item includes symbols, pictographs or face marks, you can convert the text to these symbols.
  Refer to the following lists for the readings of symbols, pictographs and face marks.
  - “Symbols List”→p.352
  - “Pictographs List”→p.353
  - “Face Marks List”→p.358
- For other text entry operations such as entering symbols, pictographs, or inserting a space or a line-feed, refer to “Useful keys to assist text entry” (p.306) and “Function menu of the Character entry (edit)” screen (p.306).
- You can use kuten codes to enter kanji that cannot be entered by conversion.→p.309

● Changing selection methods

Select ✣ method or ● method to select word from Prediction list or User Conversion Item.

1 MENU▶“SETTINGS”▶“Other settings”▶“Character input set”▶“Operation in item”▶Select any item:

↑ ↓ ←→ **Key** (default)……Use ✣ to select word from the displayed list. To change the conversion range, press CLR then use ↔.

↑ ↓ **Key**……Use ● to select word from the displayed list. Press ● to highlight next candidate, and ▯ to highlight previous candidate. Press and hold ● for 1 second or longer to move between candidate lines. To change the conversion range, use ↔.

● The number of characters and scrolling

■ The number of bytes remaining and the number entered

The number of bytes that can be entered or characters that have been entered on the Character entry (edit) screen is counted according to the rules listed below.

- When the number of bytes is counted, each double-byte character is counted as 2 bytes and each single-byte character is counted as 1 byte.
- When the number of characters is counted, single-byte/double-byte character, single-byte dakuten “゛” and han-dakuten “゜” are counted as 1 character respectively.

In the Character entry (edit) screen, if the number of characters that can be entered using the current function is exceeded, the exceeding part appears in gray. Use as an approximate guide to how many more characters you can enter.

■ Scrolling

In the Character entry (edit) screen, use ● to scroll up and down one line at a time, and ▯ (▼メモ) and ▯ (▲マナー) to scroll 1 page at a time.

In the conversion candidates list, you can also use ▯ (▼メモ) or ▯ (▲マナー) to scroll 1 page at a time.

● Data protection during text entry and editing

When you are entering text in the Character entry (edit) screen and the battery fails or you receive a voice call, the entered text is stored and not cleared from the screen.

■ If the battery fails

If the low-voltage alarm sounds during text entry, the Character entry (edit) screen is replaced by the “Recharge battery” message screen. When this happens, the entered text is automatically confirmed

Continued on next page

and saved so that you can continue entering the text when you turn the FOMA terminal back on and retrieve the function. However, in some functions, the entered data is not saved. Also, unconfirmed text that is being converted is not saved.
Re-editing the phonebook→p.71

■If you press [end]

If you press [end] while entering text, a message appears asking whether to discard and exit text entry. However, this message does not appear if no text is entered.
<To quit without saving the text>
Select "YES". The previous screen or standby screen reappears without saving the entered text.
You can also exit the text entry screen without saving the entered text by pressing [end].
<To continue entering text>
Select "NO". The Character entry (edit) screen reappears with the entered text still displayed.
You can also return to the Character entry (edit) screen by pressing [CLR].

■When you receive a voice call

If you receive a voice call while entering text, you can answer the call without disturbing the text being entered. When the call ends, the Character entry (edit) screen reappears. You can use [MENU] (MULTI) during a voice call to display the task switch screen and return to the Character entry (edit) screen while talking.→p.283

Other text entry functions

For the operations such as switching the character entry mode on the Character entry (edit) screen or entering symbols or pictographs, you can use useful keys as well as the function menus.

● Useful keys to assist text entry

Key	Description
[ch] (Pict/Sym)	Enters pictographs or symbols continuously. The list changes as follows every pressing [ch] (Pict/Sym). History→Pict→Pict-D*→Symbol *: Only appears on the Compose message screen, Edit header/Edit signature screens and Edit Template screen. To end the continuous entry, press [✉] (Close) or [CLR]. "Symbols list"→p.352 "Pictographs"→p.353
[ch] (Pict/Sym) (1 second or longer)	Displays the Pictgraph D (Deco-mail pictograph) entry screen which is arranged by the categories.→p.157 *: Only available on the Compose message screen, Edit header/signature screen or Edit Template screen.
[i] (Chrct)	● The character mode switches each time you press [i] (Chrct) in 5-touch mode. Alphabetic (single-byte)→Numeric (single-byte)→Kanji/Hiragana (double-byte)→Katakana (single-byte) * Use the function menu "Single-byte/Double-byte" to switch "Single-byte" and "Double-byte" in Katakana, alphabets and numbers modes. ● Double-byte and single-byte switches each time you press [i] (A/AB) in 2-touch mode. Double-byte→Single-byte
[*]	Enter Dakuten, Han-dakuten or punctuation marks.
[#]	● Enters a line feed "↵" and moves the cursor to the next line. ● Returns to the previous reading in 5-touch input mode. (Example: え→う)
[↗]	Convert entered character to uppercase/lowercase. (Example: つ→っ, a→A)
[0]	● Press repeatedly to enter a space. ● Enter a punctuation mark, etc.
[↵]	When the cursor is at the end of the text, pressing [↵] enters a space and pressing [↵] enters a line feed symbol "↵".

NOTE

<History>
● Previously entered pictographs and symbols appear.

[FUNC] Character entry (edit) screen (p.302)

Single-byte⇔Double-byte……Switches the single-byte/double-byte modes.

Common phrases→p.307

Copy • Cut • Paste→p.308

Undo……Undo the previous operation.

Input method……Set input method.

Input mode (default: 5-touch)……Toggle 5-touch/2-touch.

Auto cursor (default: 1(slow))……Set speed of auto cursor movement (□ to l). Select "off" or "1" to "5".
off: Does not move (remains □)
1: Slowest, 5: Fastest

Select conv.→p.303

Quote phonebook……Searches for a phonebook entry to quote from and selects an item to quote.
"About multiple-choice"→p.38
Searching the phonebook→p.73

Quote My Profile……Selects an item to quote. "About multiple-choice"→p.38

Kuten code→p.309

Bar code reader……Quote data read by Bar code reader.→p.129

Refer dictionary……Starts the dictionary.→p.296

Enter……Save edited text and exit text entry (edit).

Cancel……Exit text entry without saving edited text.

Change window*……Switches to the window on the upper of the screen.→p.303

* : Appears only when the screen is divided.

NOTE

- You cannot switch the double-byte/single-byte modes in "Kanji/Hiragana input mode".
- You can delete the line-feed symbol "↵" in the same way as other characters.
- You cannot enter double-byte symbols in the e-mail address registration screen, i-mode mail address input screen or URL input screen.
- In the Character entry (edit) screens for specific items such as postal codes, it may not be able to switch the text entry mode.

<Undo>
- The following operations can be undone:
  - Enter text
  - Enter common phrases→p.307
  - Enter Pictographs/Symbols→p.306
  - Enter Kuten code→p.309
  - Cut & Paste→p.308
  - Delete text→p.307
  - Quote phonebook/My Profile→p.307

<Quote My Profile>
- When you quote an address information, a space may be entered between each item.
- NTT DOCOMO accepts no liability whatsoever regarding the problem caused by the incorrect input of the owner information.

Deleting text

Use ⊕ to move the cursor to the character you want to delete and hold down CLR briefly (less than 1 second). The character under cursor is deleted.

■If you hold down CLR for 1 second or longer
Text under and following the cursor is deleted.

■When there is no character under cursor and in the right side of cursor position
The character to the left of the cursor is deleted.

■If you hold down CLR for 1 second or longer when there is no character under and following the cursor
All the text is deleted.

Entering common phrases

- Modifying/Storing Common Phrases→p.308

❶ Character entry (edit) screen (p.302)▶ ✉ (FUNC)▶"Common phrases"▶ Select a folder

❷ Select a common phrase▶ ■ (Select)

NOTE

- Common phrases can be used in the following Character entry (edit) screens:
  - Edit text memo
  - i-mode mail subject/message
  - i-mode mail headers/signatures/quotation marks
  - Enter mail search subject
  - Enter auto sort setting subject
  - Common phrase folder/Editing common phrase
  - Edit alarm title
  - Refer dic. words input
  - Edit To Do list
  - Edit Wake-up message
  - Edit i-mode text box
  - Edit i-αppli text

Modifying/Storing Common Phrases <Store common phrases>

You can store frequently used phrases as common phrases in advance so that they can be retrieved when entering text.

- Up to 10 original common phrases can be stored in the “Original” folder.
- Each of the 8 category folders other than “Original” contains 10 pre-installed common phrases. →p.359
- Pre-installed common phrases can be edited.
- Folders can be renamed.

Composing a new common phrase

1 MENU▶“OWN DATA”▶“Common phrases”

The “Common phrase folder list” screen appears.

Common phrase folder list

Function menu➡p.308

2 Select a folder

The “Common phrase list” screen appears.

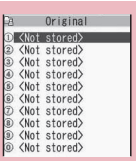

Common phrase list

Function menu➡p.308

3 Highlight “<Not stored>”▶i (Edit)▶Enter the common phrase

NOTE

- You can use pictographs in common phrases for mails.

FUNC Common phrase folder list screen (p.308)

Edit folder name……Edits the folder name. You can enter up to 10 double-byte or 20 single-byte characters.

Reset name……Resets the folder name to the default folder name.

iC trans. all→p.260

Send all Ir data→p.258

FUNC Common phrase list screen (p.308)

Edit……Edits the common phrase.

iC transmission→p.259

Send Ir data→p.258

Delete this • Delete all……Deletes one or all common phrase(s).

Copying, Cutting and Pasting Text

- Only one item of copied or cut data can be stored. Copying or cutting a new item overwrites the previously stored text.

Copying (or cutting) text

1 Character entry (edit) screen (p.302)▶✉ (FUNC)▶“Copy” or “Cut”

2 Move the cursor to the beginning of the text to be copied or cut▶■ (Start)

■ **To select all text**

▶i (All)

3 Move the cursor to the end of the text to be copied or cut▶■ (End)

The selected text is stored. You can store up to 5,000 double-byte characters or 10,000 single-byte characters.

■ **If the text is cut**

The selected text is deleted, but it is stored in the FOMA terminal.

Pasting text

- Once you have cut or copied text, you can paste that text as many times as you like until you cut or copy other text next time or turn the FOMA terminal off.

1 Character entry (edit) screen (p.302)▶Move the cursor to the position to paste▶✉ (FUNC)▶“Paste”

■ If the text to be pasted includes characters that cannot be entered in the intended Character entry (edit) screen

A message appears notifying you that the characters will be replaced by spaces when the text is pasted.

Entering Text Using Kuten Codes <Kuten code>

This function provides a way of entering kanji, hiragana, katakana, symbols and alphanumeric characters using 4-digit “kuten” codes.

- For the Kuten code and the characters that can be input using the Kuten code, refer to the PDF format “Kuten Code List” in the provided CD-ROM.
- The character or a symbol in the Kuten Code List may be displayed differently on the screen.

<Example: To enter “慶” (kuten code 2336)>

1 Character entry (edit) screen (p.302)▶✉ (FUNC)▶“Kuten code”

The input mode changes to “Kuten code input mode” and “” appears in the information display area.

2 Enter kuten code 2 3 3 6

The character (“慶” in this example) for the entered code appears and the FOMA terminal reverts to the original input mode.

■ If there is no corresponding character for the entered kuten code

A space is entered.

Storing Frequently Used Words <Own dictionary>

You can store frequently used words in the own dictionary under your preferred reading and recall these words by entering and converting the reading in the Character entry (edit) screen.

- Own dictionary can store up to 100 words.
- Each Word can contain up to 10 double-byte or 20 single-byte characters. Readings can include up to 10 double-byte hiragana.

1 MENU▶“OWN DATA”▶“Own dictionary”

The “Own dictionary” screen appears.



Own dictionary

Function menu➡p.309

2 “<New>”▶Enter the word▶Enter the reading

■ To check the words

▶Selecting checking words

■ To edit a word

▶Highlight the word you want to change▶ (Edit)

NOTE

- Registered words can be entered using Prediction. Some readings do not show candidates until converted and entered.

FUNC Own dictionary screen (p.309)

Edit……Edits the stored word.

iC transmission→p.259

Send Ir data→p.258

iC trans. all→p.260

Send all Ir data→p.258

Delete……Selects the deleting method from “Delete this/Delete selected/Delete all”.
“About multiple-choice”→p.38

Resetting the Learning Record

<Clear learned>

The learning record contains character strings that were entered in the past and automatically stored as candidates for character conversion. This procedure resets the learning record to its default status at the time of purchase.

1 MENU ▶"SETTINGS"▶"Other settings"▶"Character input set"▶"Clear learned"▶Enter your security code

Prediction/ImgSym.……Clears the learned records stored using "Prediction", "Pictograph", "Face Mark" and "Symbol".

Kana/Kanji change……Clears the learned record order for User conversion.

Using Download Dictionaries

<Download dictionary>

You can set the dictionaries downloaded from i-mode sites, etc. for Prediction.

- The FOMA terminal can store up to 5 download dictionaries.
- The dictionary is activated when downloaded.
- For information on downloading dictionaries →p.146

1 MENU ▶"OWN DATA"▶"DL dictionary"

The "Download dictionary" screen appears.



Download dictionary

Function menu➡p.310

2 Select a dictionary

A star "★" appears next to the active dictionary.

■ To inactivate

▶Select a dictionary marked with a star "★".

The dictionary is inactivated and the star "★" disappears.

FUNC Download dictionary screen (p.310)

Edit title……Edits the title of the download dictionary. You can enter up to 10 double-byte or 20 single-byte characters.

Set dictionary……Activates or inactivates the download dictionary.

Dictionary info……Displays information for the download dictionary.

Delete this • Delete all……Deletes one or all download dictionary (dictionaries).

Entering Text Using 2-Touch

<2-touch>

You can enter 1 character by pressing 2 dial keys. For example, to enter "う", press 1 3 in sequence as "う" is the third character of the "あ column", "あいうえお".

- Refer to "Characters that can be entered using 2-touch" (p.351) for details on the character assignment.
- The conversion method using Prediction/User conversion is the same as that of 5-touch. →p.304

<Example: To enter "けんとう">

1 Character entry (edit) screen (p.302)▶Set to Double-byte input mode

When "Double-byte input mode (全)" is not set, press # (A/AB) to switch the mode.

2 Enter the hiragana

2 4 (け) 0 3 (ん) 4 5 (と) 1 3 (う)

NOTE

- * is also available to enter "Dakuten/Han-dakuten" or to switch.
- C is also available to toggle "Uppercase/Lowercase".
- Function menu "Single-byte/Double-byte" is also available to toggle "Single-byte/Double-byte".

Network Services

Voice Mail Service ..... Voice Mail 312
Call Waiting ..... Call Waiting 313
Call Forwarding Service ..... Call Forwarding 314
Nuisance Call Blocking Service ..... Nuisance Call Blk 315
Caller ID Request Service ..... Caller ID Request 316
Dual Network Service ..... Dual Network 316
English Guidance ..... English Guidance 316
Service Dialing Number ..... Service Numbers 317
Handling Calls Received During a Call ..... In-Call Function Selection 317
Setting up Remote Control ..... Remote Control 318
Multi Number ..... Multi Number 319
2in1 ..... 2in1 320
OFFICEED ..... OFFICEED 324
Adding and Using Services ..... Additional service 324

Available Network Services

- Your FOMA terminal provides you with access to a range of useful DOCOMO network services. For the outline and the details on the services, refer to the reference pages in the following table.

Service name	Subscription	Monthly usage fees	Ref. page
Voice Mail Service	Required	Charged	p.312
Call Waiting	Required	Charged	p.313
Call Forwarding Service	Required	Free	p.314
Nuisance Call Blocking	Not required	Free	p.315
Caller ID Notification	Not required	Free	p.46
Caller ID Request	Not required	Free	p.316

Service name	Subscription	Monthly usage fees	Ref. page
Public mode (Driving mode)	Not required	Free	p.62
Public mode (Power OFF)	Not required	Free	p.63
Dual Network Service	Required	Charged	p.316
English Guidance	Not required	Free	p.316
Multi Number	Required	Charged	p.319
2in1	Required	Charged	p.320
OFFICEED	Required	Charged	p.324
Melody call	Required	Charged	p.84

- For the service used by connecting to the Network Service Center, you cannot operate the service with “ ”.
- For the application and questions, contact the inquiries number provided on the back of this manual.
- This section explains the overview of the network services using the menus on the FOMA terminal. For more details, see “Mobile Phone User’s Guide [Network services]”.
- “OFFICEED” is a fee-based service and requires a subscription. For details, visit DOCOMO Website for corporates (http://www.docomo.biz/d/212/) (Japanese).

Voice Mail Service <Voice Mail>

When you are in the out of service area, when the FOMA terminal is not turned on, or when you cannot answer the call, this service plays an answer message to the caller of the voice or videophone call and stores the caller's message on your behalf.

- To give priority to voice mail when "Record message" (p.64) is set at the same time, ensure that the ring time set for voice mail is shorter than the ring time set for "Record message".
- When you do not answer the voice or videophone call when the Voice mail service is set to "Activate", calls are logged in the "Received calls" record as "Missed calls" record, and the "Missed call" shortcut icon appears on the standby screen.
- The message can be recorded up to 3 minutes for 1 message, up to 20 messages for each of the voice and videophone calls, and stored up to 72 hours.

Basic flow of Voice mail service operation

Voice Mail service activated

⬇

Your FOMA terminal receives a voice/ videophone call

⬇

You cannot answer the call and it is connected to the Voice Mail service center

⬇

The caller records a message

If the caller is in a hurry and wishes to leave a message without listening to the Voice Mail answering message, he or she can interrupt the answering message and switch to message recording mode immediately by pressing #.

⬇

The Voice Mail service center notifies you that you have a recorded message

⬇

You listen to the recorded message

Using the Voice Mail service

1 MENU ▶"SERVICE"▶"Voice Mail"▶Select any item:

Play messages[*1]……The FOMA terminal calls the Voice mail service center.
Plays the recorded messages by following the audio guidance.

Activate[*1]……Activates the Voice Mail service.
The ring time (000 to 120 seconds) can be set.
When set to 0 second, received calls are not recorded in the "Received calls" record.

Deactivate[*1]……Deactivates the Voice mail service.

Set ring time……Changes the ring time only (000 to 120 seconds).

Check setting[*1]……Checks the current Voice mail service settings.

- About the function menu of the displayed "Voice Mail setting" screen. →p.313

Setting[*1]……Changes the Voice mail service settings using audio guidance.
The FOMA terminal calls the Voice mail service center.
Specify the settings by following the audio guidance.

Check messages……Checking whether there is a recorded message.

Message notification[*2]……Emits the original notification tone when the number of recorded messages stored at the Voice mail service center increases.

Erase icon……Clears the " " icon (Voice mail icon) from the standby screen.

Activate notice call……When you receive a call while the FOMA terminal is turned off or is out of the service area, an SMS is sent to notify you of the information about the call (date, time and the caller ID) once you turn the FOMA terminal back on or move back in to the service area.

- **All Calls**……Notifies you of all received calls.
- **Calls with Caller ID**……Notifies you of only the calls with the caller ID.

Deactivate notice call……Deactivates the notice call.

Notice call status……Checks the current Notice call service settings.

*1: When 2in1 is set to Dual mode, the screen appears to select Number A or Number B. However, the selection screen appears for "Check setting" even in B mode.
*2: Only for the recorded message of voice calls.

NOTE

- To change the Voice mail service setting for videophone calls, make a voice call to “1412”.
- DTMF is not available if connected to Voice Mail with Chara-den. Select “Send DTMF tone” from the function menu to activate Send DTMF tone mode. →p.50

<Check setting>

- When checking Number B setting for 2in1, only the active or inactive information appears.

<Check messages>

- If you have the recorded messages stored at the Voice mail service center, the “ ” (voice mail icon) and “ ” (“Voice mail” shortcut icon) appear on the standby screen for the recorded messages of voice calls. The recorded messages of videophone calls are notified by SMS.
- The number in the voice mail icon changes according to the number of stored messages “ ”, “ ”, “ ” ... “ ” (10 messages or more).
  The displayed number of Voice mail messages is the number of new messages announced by the Voice mail center. The number of stored messages is not included.
- You may not be able to use this function to check for the message recorded after checking the message.

<Message notification>

- When 2in1 is set to A mode or B mode, the notification tone does not sound when a message is recorded for the unused number.

<Erase icon>

- Clearing the icon does not delete the corresponding recorded messages. The voice mail icon appears again when you check for messages.

<Activate notice call>

- Even if you set the SMS Rejection setting, the FOMA terminal receives the notification.

FUNC Voice Mail setting screen (p.312)

Activate • Deactivate……Activates or deactivates the Voice mail service.

Set ring time……Changes the ring time.

Call Waiting <Call Waiting>

When you receive a call while talking on a call, this service notifies the call with a ring tone and you can answer the newly received call by putting the current call on hold. You can also put your current call on hold and make a new call to someone else.

- To use Call waiting, select “Answer” in “Incoming Call Mng” (p.317) beforehand. If another setting is selected, you will not be able to answer a voice call received during another voice call even when Call waiting is activated.
- You can answer another call when you receive a videophone call during a voice call or when you receive a voice call or videophone call during a videophone call if you activate Call waiting and set “Incoming Call Mng” to “Answer”. In this case, you have to end the current voice call or videophone call (You cannot put the current call on hold). →p.317

Using the Call Waiting

1 MENU▶“SERVICE”▶“Call Waiting”▶ Select any item:

Activate • Deactivate……Activates or deactivates the Call waiting service.

Check setting……Checks the current Call waiting service settings.

Putting the current voice call on hold to answer a new received voice call

1 When you hear the double tones (repeated soft double-beeps) during a voice call, press

Your first call is automatically put on hold and the FOMA terminal answers the new voice call.

2 Switch back to the first call

■ **To end the call with the second caller**

▶ ▶

This ends the call with the second caller and returns you to your first call.

■ **To put the second caller on hold**

▶

This puts the second caller on hold and returns you to your first call.
You can switch back and forth between the 2 calls by pressing .

Continued on next page

■ **To end the voice call on hold**
▶✉ (FUNC)▶“End held call”

Ending the current voice call to answer another voice call

1 When you hear the double tones (repeated soft double-beeps), press ☎
The first call is ended and the ring tone sounds.

2 ✆
The FOMA terminal answers the new voice call.

Putting the current voice call on hold to make a voice call to someone else

You can put your current voice call on hold and make a new voice call to someone else.

1 Dial another phone number during your current call▶✆
Your first call is automatically put on hold and the FOMA terminal switches to the new call.
You can also make calls by searching the phonebook.
Searching the phonebook→p.73

2 Switch back to the first call

■ **To end the new call**
▶☎▶✆
This ends the new call and returns you to your first call.

■ **To put the new call on hold**
▶✆
This puts the new call on hold and returns you to your first call.
You can switch back and forth between the 2 calls by pressing ✆.

■ **To end the voice call on hold**
▶✉ (FUNC)▶“End held call”

Call Forwarding Service
<Call Forwarding>

When you are in out of service area or when the FOMA terminal is not turned on, or when you do not answer the call within the set ringing time, this service forwards the voice/videophone call.

- To give priority to the Call forwarding service when “Record message” (p.64) is set at the same time, ensure that the ring time set for the Call forwarding service is shorter than the ring time set for “Record message”.
- When you do not answer the voice or videophone call when the Call forwarding service is set to “Activate”, calls are logged in the “Received calls” record as “Missed calls” record, and the “Missed call” shortcut icon appears on the standby screen.

Basic flow of Call forwarding service operation

Call Forwarding number registered
↓
Call Forwarding service activated
↓
Your FOMA terminal receives a voice or videophone call
↓
If you do not answer the voice or videophone call, it is automatically forwarded to the specified number

Call forwarding service call charges

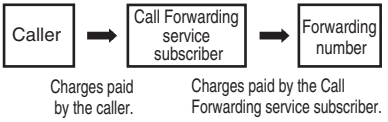

Using the Call Forwarding service

1 MENU ▶ **"SERVICE" ▶ "Call Forwarding" ▶ Select any item:**

Activate[*1]·····Set the forwarding number and the ring time, then select "Activate".

Register fwd number·····Enter the forwarding number.
Once you set the number, a star "★" appears next to "Register fwd number".
- You can use 📖 or 🔍 to enter the number by searching the phonebook.
  How to search the phonebook→p.73

Set ring time·····Enter the ring time (000 to 120 seconds).
Once you set the number, a star "★" appears next to "Set ringing time". When set to 0 second, received calls are not recorded in the "Received calls" record.

Activate·····Activates the Call forwarding service.

Deactivate[*1]·····Deactivates the Call forwarding service.

Change forwarding No·····Enter a phone number to set a new forwarding number.
When you select "Change No.+Activate", you can also set the Call Forwarding Service to "Activate" at the same time.

Fwd number busy[*2]·····When the forwarding number is busy, received calls are transferred to the Voice mail service center.

Check setting[*1]·····Checks the current Call forwarding service settings.

*1: When 2in1 is set to Dual mode, the screen appears to select Number A or Number B. However, the selection screen appears for "Check setting" even in B mode.
*2: The subscription to the "Voice Mail service" is required.

NOTE

<Activate>
- When 2in1 is set to B mode, you cannot select "Register fwd number" and "Set ring time".

<Change forwarding number>
- When 2in1 is set to B mode, you cannot select "Change No. + Activate".

<Check setting>
- When checking Number B setting for 2in1, only "Active" or "Inactive" appears.

Setting or canceling the call forwarding guidance message

1 **On the standby screen ▶** 1 4 2 9 **▶** 📞

- Set the call forwarding guidance message by following the audio guidance message.
- For more information, refer to the "Mobile Phone User's Guide [Network Services]".

Nuisance Call Blocking Service <Nuisance Call Blk>

This service enables you to reject receiving "Nuisance calls". Once you store the number to reject, calls from the number are automatically rejected and answered by a message.
- The ring tone does not sound even when you receive a call from the number stored to reject. Also, the call is not recorded in "Received calls" record.

Using the Nuisance Call Blocking service

1 MENU ▶ **"SERVICE" ▶ "Nuisance Call Blk" ▶ Select any item:**

Register Caller·····Registers the number of the last caller you answered as a barred numbers.

Register number·····Registers the phone number by using the dial keys or quoting from the phonebook or Received calls record, etc.
- You can use 📖 or 🔍 to enter the number by searching the phonebook. Searching the phonebook→p.73
- You can use 📞 to search the Received calls record and 📞 to search the Redial record.

Delete last entry·····Deletes the last registered phone number. By repeating the same procedure, you can delete the stored barred number one by one from the last one.

Delete all entries·····Deletes all the barred numbers.

The number of entries·····Checks the number of call barring entries.

Caller ID Request Service

<Caller ID Request>

When you receive a voice/videophone call from a caller hiding phone number (caller ID), the call is answered by a message requesting the Caller ID, then the call automatically ends.

- Calls rejected by the Caller ID request service are not logged in the “Received calls” record and no “Missed call” shortcut icon appears.

Using the Caller ID Request service

1 MENU▶“SERVICE”▶“Caller ID Request”▶ **Select any item:**

Activate • Deactivate……Activates or deactivates the Caller ID request service.

Check setting……Checks the current Caller ID Request service settings.

Dual Network Service

<Dual Network>

This service enables you to use the mova terminal with the phone number of your FOMA terminal. You can switch between the FOMA network and the mova network depending on the service area.

- You cannot use the FOMA terminal and the mova terminal at the same time.
- Switch the Dual network service from the terminal which is not using the service.
- For details on how to access the service from a mova terminal, refer to the “Mobile Phone User’s Guide [Network Services]”.

Using the Dual Network service

1 MENU▶“SERVICE”▶“Dual Network”▶ **Select any item:**

Dual Network switching……The network security code is required to switch.
Network security code→p.100

Check setting……Checks whether the FOMA terminal can access the services or not.

NOTE

- If you use Dual Network Service on the mova terminal in Japan after using the FOMA terminal overseas, turn on the FOMA terminal before use.

<Dual Network switching>

- To switch networks, end communication from the terminal that is currently able to access services before making the switch.

English Guidance

<English Guidance>

You can set English as the language used in guidance messages for setting network services such as the “Voice Mail” service or the audio message such as the out of area warnings.

Item	Language	Guidance
Outgoing (including the guidance for the settings of the network services)	Japanese	Plays in Japanese.
	English	Plays in English.
Incoming (guidance messages played to callers)	Japanese	Plays in Japanese.
	Japanese +English	Plays in Japanese first and then in English.
	English+ Japanese	Plays in English first and then in Japanese.

NOTE

- Caller’s setting has priority over receiver’s setting between DOCOMO’s handsets.

Using the English Guidance

1 MENU ▶“SERVICE”▶“English Guidance” ▶Select any item:

Guidance setting……Selects the setting from the following:

Outgoing+Incoming……Selects the language for outgoing calls from “Japanese/English”, then selects the language for incoming calls from “Japanese/Japanese+English/English+Japanese”.

Outgoing call……Selects the language only for the outgoing calls from “Japanese/English”.

Incoming call……Selects the language only for the incoming calls from “Japanese/Japanese+English/English+Japanese”.

Check setting……Checks the current English guidance settings.

Service Dialing Number

<Service Numbers>

You can make a call to the DOCOMO general help desk and service counter for information on faults, etc.

- The displayed items may be different or the items are not displayed depending on the FOMA card (UIM) you are using.

1 MENU ▶“SERVICE”▶“Service Numbers”▶ Select any item:

ドコモ故障問合せ……Calls the DOCOMO service desk.

ドコモ総合案内・受付……Calls the DOCOMO Information Center.

Handling Calls Received During a Call

<In-Call Function Selection>

You can specify how to handle voice calls, videophone calls and 64K data communication that arrives during a call when you have subscribed to the “Voice Mail”, “Call Forwarding” or “Call Waiting” service.

- If you have not subscribed to “Voice Mail”, “Call Forwarding” or “Call Waiting” service, you cannot answer the calls received during calls.
- To use “Incoming Call Mng”, set “Set in-call arrival” to “Active”.

Selecting how to handle incoming calls during another call

<Incoming Call Mng>

1 MENU ▶“SERVICE”▶“Incoming Call Mng” ▶Select any item:

Voice Mail……Transfers voice or videophone calls received during a call to the Voice mail service center regardless of the “Call Waiting” and “Voice Mail” service settings.

Call Forwarding……Transfers voice and videophone calls received during a call to the forwarding number regardless of the “Call Waiting” and “Call Forwarding” service settings.

Call Rejection……Rejects voice and videophone calls and 64K data communication received during a call.

Answer……If “Call Waiting” is activated and a voice call is received during another voice call, you can use the “Call Waiting” service. If call waiting is not activated or during a videophone call or 64K data communication, the call can be handled in any of the following ways:

- You can end the current voice or videophone call or 64K data communication, and answer the received voice or videophone call or 64K data communication.
- You can use the function menu to manually handle a voice call, videophone call or 64K data communication received during a call. →p.318
- If “Voice Mail” service or “Call Forwarding” service is activated, calls can be handled using these service settings.

Set in-call arrival

Activates/deactivates the function setting selected in “Incoming Call Mng” or checks the setting.

1 MENU ▶“SERVICE”▶“Set in-call arrival”▶ Select any item:

Activate……Activates the “Incoming Call Mng” setting.

Deactivate……Deactivates the “Incoming Call Mng” setting.

Check setting……Displays the current setting.

Ending the current call or 64K data communication to answer a received call

● When the current call and incoming call are the same type

<Example: To end the current voice call to answer an incoming voice call>

1 When you hear the double tones (repeated soft double-beeps), press [end]

This ends the current call and the FOMA terminal starts ringing.

■ **For videophone or 64K data communication**

The ringing call screen appears.

▶[end]

2 [call]

This accepts the incoming voice call.

■ **For 64K data communication**

▶Receive the call on a PC

● When the current call and incoming call are different types

If you receive a videophone call or 64K data communication during a voice call, if you receive a voice call or 64K data communication during a videophone call, or if you receive a voice or videophone call during 64K data communication, use this procedure to end your current call or 64K data communication to answer the incoming call.

<Example: To end the current videophone call to answer an incoming voice call>

1 You hear the double tones (repeated soft double-beeps) and the voice call ringing screen appears

When you receive a 64K data communication, the double tones (repeated soft double-beeps) do not sound.

2 [call]

■ **For 64K data communication**

▶[end]▶Receive the call on a PC

Manually rejecting calls or connecting to the Call Forwarding or Voice Mail service

<Example: When Set in-call arrival is set to "Activate" and Incoming Call Mng is set to "Answer">

1 When you hear the double tones (repeated soft double-beeps), press [mail] **(FUNC)**

2 Select how to handle the received call

■ **To reject a received call**

▶"Call Rejection"

■ **To forward a received call to the forwarding number**

▶"Call Forwarding"

■ **To transfer a call to the Voice mail service center**

▶"Voice Mail"

With any of the above procedures, you can return to your first call.

Setting up Remote Control

<Remote Control>

You can operate the "Voice Mail" or "Call Forwarding Service", etc. from push-key-type ordinary phones, payphones, DOCOMO mobile phones, etc.

- To use the "Voice Mail" or "Call Forwarding" service overseas, set Remote Control beforehand.
- For details on operating network services from a payphone, etc., refer to the "Mobile Phone User's Guide [Network Services]".

1 [MENU]**▶"SERVICE"▶"Remote Control"▶ Select any item:**

Activate • Deactivate	Activates or deactivates the Remote control.
Check setting	Checks the current Remote control settings.

Multi Number <Multi Number>

You can add and use the maximum of two additional numbers (additional number 1 and additional number 2) other than the basic number as the phone numbers of the FOMA terminal.

- Cannot be used with 2in1 at the same time.
- The name stored for the multi number (basic number, additional number 1/2) respectively appears on the screen when making or receiving a call.
- When you make a call using the Redial/Received calls record, the multi number used for making or receiving a call at the last time is displayed and the call is made from the number.

Using Multi Number

1 MENU▶"SERVICE"▶"Multi Number"▶Select any item:

Set Multi Number……Specifies the phone number you use for ordinary calls.

Basic Number*……Sets to call from the subscribed phone number (basic number).

Additional Number1 • Additional Number2*……Sets to call from the additional number.

Check setting……Checks the current Multi number settings.

Number Setting……Registers the additional number notified at the subscription of the Multi number to the FOMA terminal.

▶Highlight the item to register (or change) the additional number▶i (Edit)▶Enter the name▶Enter the additional number

You can enter up to 8 double-byte or 16 single-byte characters for the name and you can enter up to 26 digits for the additional number.

- About the function menu of the "Multi Number setting" screen which appears when "Phone number record" is selected. →p.319

Select ring tone……Sets the ring tone for the received calls to the additional number 1 and additional number 2 respectively. →p.82

* : When the name is changed, registered name appears respectively.

NOTE

- If you remove the FOMA card (UIM) or change to other FOMA card (UIM), the multi number settings data (names and phone numbers, etc) on the FOMA terminal may be erased. In this case, saving the data again.

NOTE

<Number Setting>

- The name appears when you make various settings of the multi number function or when you select a phone number to use for each call.

<Select ring tone>

- Refer to p.83 for the priority when the ring tone settings are duplicated.

FUNC Multi Number setting screen (p.319)

Edit……Edits the name in the basic number or the phone number in the additional number.

Delete this……Deletes one name in the basic number or one name and phone number in the additional number.

Delete all……Deletes all names in the basic number and all names and phone numbers in the additional number.

Switching the phone number for each call

You can switch the phone number each time you make a call.

1 Enter phone number screen (p.48)▶✉ (FUNC)▶"Multi Number"▶Select any item:

Basic Number*……Sets to call from the subscribed phone number (basic number).

Additional Number1 • Additional Number2*……Sets to call from the additional number.

Cancel number……Cancels the setting, allowing you to dial following "Set Multi Number" setting.

* : When the name is changed, registered name appears respectively.

NOTE

- You can also switch the phone number from the function menu of phonebook detail screen, detail screen of Redial/Dialed calls/Received calls records, etc.

2in1 <2in1>

You can separately use 2 phone numbers and 2 mail addresses on your FOMA terminal as if you have 2 terminals.

- In this function, your phone number and mail address is called “Number A and Address A” and the additional phone number and mail address is “Number B and Address B”.
- Cannot be used at the same time as Multi Number.

NOTE

- Information of Number B and Address B can be obtained with the following operation.
  - Number B: Run “Check 2in1” from the function menu in the My Profile screen for Number B→p.291
  - Address B: Run “Acquire Automatically” for the mail address when registering My Profile for Number B →p.291
- For details on 2in1, refer to “Mobile Phone User’s Guide [2in1]”.

About Modes

In 2in1, modes can be set to “A mode”, “B mode” or “Dual mode”.

Mode	Description
A mode	You can dial with your phone number (Number A), send i-mode mails with Address A, or browse related data.
B mode	You can dial with 2in1 phone number (Number B), access to sites where WEB mail is available with Address B, and browse related data.
Dual mode	The mode that supports both functions of A and B mode.

- See **Table 1**(p.320) for the details of available services in each mode.

NOTE

- Mail transmission for Address B is executed in the specified WEB mail site.
- Packet communication in B mode is available while subscribing to the i-mode service.
- Set A mode before you replace a FOMA card (UIM) with the subscription to 2in1 service to the FOMA card (UIM) without subscription.

[Table 1] Services available for each mode

- Only the functions with different operations depending on the mode are listed. (Those which operate in the same way as A mode are omitted.)

Service			A mode	B mode	Dual mode
Voice call/ Videophone	Dialing		Number A	Number B	Selectable on making a call[*1]
	Receiving[*2]		All		
Phonebook[*3]	Display[*4]		A: Common	B: Common	All
	Name conversion[*5]		A: Common	B: Common	All
	2in1 setting on a new entry		A	B	A
	Receives all data through infrared data port/iC/ microSD card		Copies Phonebook 2in1 setting in the original source[*6]		
	Receives one data through infrared data port/iC/ microSD card		A	B	A
	UIM Phonebook	Copy to UIM	Phonebook 2in1 setting is common		
		Copy to phone	A	B	A
Redial	Display		Dials with Number A	Dials with Number B	All
Received calls	Display		Receives with Number A	Receives with Number B	All

Service			A mode	B mode	Dual mode
Mail/ SMS	Display*4		Sent/received mails with Address A Sent/received SMS with Number A	(FOMA terminal) Received mails (when “端末に保存 (Save to Phone)” is selected on the WEB mail site) or alert mails for new message/alarm to Address B which are saved in your FOMA terminal SMS received with Number B (WEB mail site) Sent/received mails with Address B	(FOMA terminal) Sent/received mails with Address A, and received mails or alert mails for new message/alarm to Address B which are saved in your FOMA terminal Sent/received SMS with Number A SMS received with Number B (WEB mail site) Sent/received mails with Address B
	Send		(FOMA terminal) Mails from Address A SMS from Number A	(FOMA terminal) Unavailable for sending mails/SMS (WEB mail site) Mails with Address B	(FOMA terminal) Mails from Address A*7 SMS from Number A (WEB mail site) Mails with Address B
	Receive		Mails to Address A/ SMS to Number A (vibration) Mails or alert mails for new message/alarm to Address B saved in FOMA terminal, or SMS with Number B (no vibration)	Mails to Address A/ SMS to Number A (no vibration) Mails or alert mails for new message/ alarm to Address B saved in FOMA terminal, or SMS with Number B (vibration)	Mails to Address A/ SMS to Number A (vibration) Mails or alert mails for new message/alarm to Address B saved in FOMA terminal, or SMS with Number B (vibration)
	Receives all data through infrared data port/iC/ microSD card		Copies the status in the original source.*6		
	Receives one data through infrared data port/iC/ microSD card		A		
	FOMA Card (UIM) (SMS only)	Copy to UIM	A		
		Copy to phone	A	Cannot be displayed	A
i-αppli			All available	Available*8	Available*9
My Profile			Number A and Address A	Number B and Address B	Number A/B Address A/B

*1: When A or common setting phonebook is set, dialing is made with Number A, and Number B is applied with B setting phonebook.

*2: The restrictions on the selected function is operated differently depending on the combination of settings as shown below.

- A mode is for the specified phone number in the A or common setting phonebook.
- B mode is for the specified phone number in the B or common setting phonebook.
- Dual mode is for the specified phone number in all the phonebook.

However, when Restrict dialing is set, you cannot call the phone numbers that are not specified regardless of the 2in1 mode setting.

*3: Gives priority to Secret data when the data is saved as secret.

*4: In B mode, all phonebook entries in microSD card are displayed in a list. However the details are not displayed when 2in1 is set to A mode.
Although mails/SMS are also listed, the details are not displayed if the mail/SMS has been sent to Number A/ Address A.

Continued on next page

*5: This function shows names which are checked against the name of data saved in phonebook with each number/address and converted into that name, when phone numbers on dialing/incoming, numbers on sending/receiving or addresses on sending/receiving are saved in phonebook.
*6: A is applied when the terminal of the sender does not support 2in1.
*7: The destination address is selectable from B setting phonebook when composing a new mail in Dual mode, however, please note that the mail is sent from Address A. Note that if you forward a mail to Address B in Dual mode, the mail is sent from Address A.
*8: Unavailable for each i-αppli standby screen, Mail-linked i-αppli and the i-αppli used with mail functions.
*9: Unavailable for i-αppli standby screen.

Using 2in1

Set 2in1 to ON and perform settings operations.

1 MENU▶"SERVICE"▶"2in1 setting"▶Enter your security code▶"YES"▶Select any item:

■ When 2in1 is set to ON

After entering the security code, 2in1 setting screen appears without showing the screen to confirm whether to set 2in1 to ON is not displayed.

Mode switching·····Selects the 2in1 mode from "A mode/B mode/Dual mode".
"About Modes"→p.320

Phonebook 2in1 setting

Phonebook 2in1 setting·····Highlight the phonebook entry to set and press ■ (Switch) to select the mode, then press i (Finish).
The mode switches as follows each time you press ■ (Switch): A (A mode)→ B (B mode)→ AB (Dual mode)
How to search the phonebook→p.73

Group 2in1 setting·····Highlight the group to set and press ■ (Switch) to select the mode, then press i (Finish).
The mode switches as follows each time you press ■ (Switch): no setting→ AB (Dual mode)→ A (A mode)→ B (B mode)

Stand-by display·····Sets the standby screen displayed in B mode or Dual mode respectively.
→p.89
"★" appears for the changed item. To reset the setting, press i (Release).

Set call/receive No.

Disp. call/receive No.·····Sets to display the information (name, phone number, mail address, etc.) of "Number A (Address A)" and "Number B (Address B)" in different font color to distinguish when making/receiving a call.
Press i (Switch) to switch the color of the pallet (16 colors or 256 colors).
Press ch (Reset) to reset to the default setting.

Ringtone for Number B·····Set the incoming operation (ring tone, image, illumination, vibration, answer message) performed when receiving a voice call, videophone call or mail (Ring tone, illumination and vibration can be set in Mail (recv.)).

Voice call (recv.), V.phone (recv.), Mail (recv.)·····
- "Ring tone": Go to Step 2 in "Changing the Ring Tone" (p.82).
- "Image": Go to Step 2 in "Changing the Display" (p.88).
- "Illumination": Go to Step that comes after selecting "Incoming Call", "Incoming V.phone" or "Mail receiving" in Step 1 of "Setting the Illumination Flashing" (p.92).
- "Vibrator": Go to Step 2 in "Setting the Vibration to Notify You of Incoming Calls" (p.84).
- "Answer message": Go to the subsequent step after selecting "ON" in "Setting Record message" (p.64).

2in1 function OFF·····Sets 2in1 to OFF.

Rcv. avoid. setting·····Restricts incoming calls for Number A and Number B.

Change rcv. avoid.·····Sets the Rcv. avoid. setting for Number A and Number B.

Check rcv. avoid.·····Checks the Rcv. avoid. setting for Number A and Number B.

Mode link·····Sets the linkage for changing 2in1 mode and Rcv. avoid. setting. Incoming calls only for Number A are accepted in A mode, incoming calls only for Number B are accepted in B mode, and incoming calls for both mode are accepted in Dual mode.
* When the function is activated, you cannot switch the mode with "[icon]" displayed.

Rcv. avoid. (abroad)·····Sets the Rcv. avoid. setting overseas (when Mode link is active, the Rcv. avoid. (abroad) is disabled).

NOTE

- When 2in1 is set to OFF, you can also perform “2in1 settings” by pressing 8 for 1 second or longer on the standby screen.

<Mode switching>

- You can also change mode by pressing 8 for 1 second or longer on the standby screen.

<Phonebook 2in1 setting>

- You cannot set this function to UIM phonebook entries.
- Select “Display detail” from the function menu to display “Phonebook detail” screen from “Phonebook list” screen in this function.

<Standby display>

- When Change Mode is set to A mode, standby screens are displayed according to “Display setting”.
- When set to the Kisekae Tool you downloaded, the i-αppli standby screen or the random display, the default screen appears even when “Same as Number A” is set.

<Disp. call/receive No.>

- Names, phone numbers and mail addresses in the screens below will be displayed in the set color.
  - In-call screen
  - Dialing/Receiving screen
  - Redial/Dialed calls (list/detail)
  - Received calls (list/detail)
  - Sent*/Received address record screen (list/detail)
  - Chaku-moji Sent messages record screen

  * : In B mode, the screen for sent addresses cannot be displayed.
- The setting for Number A/Number B (Address A/Address B) applies to each screen even when 2in1 is set to OFF.

<Ringtone for Number B>

- When making the same settings to Number A and Address A, set each item as “Same as Number A”.
- When the ring tone settings are duplicated, the priority applies. →p.83
  When you receive a call without caller ID on Number B, priority is given to the “Ringtone for Number B” setting.

Switching phone numbers each time when making a call

When 2in1 is set to ON and the mode is set to Dual mode, phone numbers can be switched when making a call.

- This function is available only on the detail screen of “Phonebook/Received calls/Dialed calls/Redial”.

<Example: To make a call using the phonebook>

1 Phonebook detail screen (p.73)▶ ✉ (FUNC)▶“Dial setting”▶“2in1/Multi Num.”▶Select any item:

Number A……Allows calls to be made from Number A.

Number B……Allows calls to be made from Number B.

Cancel number……Releases the setting and allows calls to made according to Phonebook 2in1 setting.

NOTE

- “2in1/Multi Num.” in the function menu cannot be selected when the mode is set to A mode or B mode.
- When the following operations are performed, the phone number selection screen is displayed and the phone number to use can be selected.
  - When making calls by entering phone number in the phone number entry screen
  - When using services from the special number registered in Additional service
  - When “Dialing” from the function menu in Sent/Received address list is selected
  - When using the Phone to function
  - When pressing the switch on the flat-plug earphone/microphone with switch (optional) on the phone number entry screen
- Dialing or AT command dialing from an external device uses Number A for A mode/Dual mode and Number B for B mode.

OFFICEED <OFFICEED>

"OFFICEED" is an in-group flat-rate service provided by specified Inbuilding Mobile Communication System (IMCS). A separate subscription is required to use the service. For details, visit DOCOMO website for corporates (http://www.docomo.biz/d/212/) (Japanese).

Adding and Using Services <Additional service>

When a new network service is added by DOCOMO, you can add the service to the menu and use the service.

Adding new services and response messages

1 MENU▶"SERVICE"▶"Additional service"▶Select any item:

Additional service……Adds new services.
▶Highlight "<Not stored>"▶✉ (FUNC)▶"Add new service"▶Enter the service name▶Select any item:
You can enter up to 10 double-byte or 20 single-byte characters for the service name.

Enter number……Uses the number to connect.
You can enter up to 20 digits.

Enter USSD number……Uses the service code to connect.
You can enter up to 40 digits.

- About the function menu of the "Additional service" screen which appears when "Additional service" is selected→p.324

Additional guidance……Registers the response messages for the commands posted from the network when using the added network service with "USSD" (service code).
▶Highlight "<Not stored>"▶✉ (FUNC)▶"Add new guidance"▶Enter the command▶Enter the response message name▶"YES"
You can enter up to 20 digits for the command and you can enter up to 10 double-byte or 20 single-byte characters for the response message.

- About the function menu of the "Additional guidance" screen which appears when "Additional guidance" is selected→p.324

NOTE

<Additional service>
- To use the service, enter the "number" or "service code" provided by DOCOMO. The "number" is the number used to connect to the service center. The "service code" (USSD) is the code used for notifying the service center.

Additional service screen FUNC (p.324)/Additional guidance screen (p.324)

Add new service • Add new guidance……Adds a setting.

Edit……Changes the setting.

Delete this • Delete all……Deletes one or all additional service(s) or additional guidance(s).

Using the newly added service

1 MENU▶"SERVICE"▶"Additional service"▶"Additional service"

2 Select a service▶ (Send)

PC Connection

Data Communication 326
Before Using 327
Checking the Procedure 328
AT Commands 329
CD-ROM 329
DOCOMO keitai datalink 329

For details on the data communication, refer to the “Manual for PC Connection” (PDF format) in the provided CD-ROM or DOCOMO’s website.
To view the PDF-format “Manual for PC Connection ”, Adobe® Reader® is required. If this software is not installed on your PC, install the Adobe® Reader® in the provided CD-ROM. Refer to the “Adobe Reader ヘルプ” (Help of the Adobe Reader) for details on how to use it.

Data Communication

Data communication available on the FOMA terminal

Available data communication between the FOMA terminal and PCs is classified in 3 categories: data exchange (OBEX™ connection), packet communication and 64K data communication.

Data exchange (OBEX™ connection)

You can exchange data such as images, music, phonebook and mail between the other FOMA terminal or PC, etc.

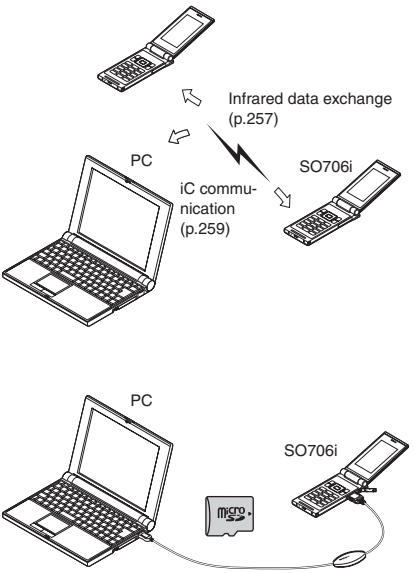

FOMA USB Cable with Charge Function 01/02
microSD card (p.243)
DOCOMO keitai datalink (p.329)

Packet communication

Packet communication is charged according to the amount of data sent and received*1, and the data is received at the maximum speed of 3.6 Mbps*2 and sent at the maximum speed of 384 kbps.
You can also access a corporate LAN connected to the FOMA network.
Use an access point that supports FOMA packet communication, such as DOCOMO Internet connection service “mopera U” or “mopera”.
Packet communication is performed via the FOMA USB Cable with Charge Function 01/02 (optional) to a PC or via a dedicated cable connection to a PDA.

*1: Note that the communication charge can become very expensive when large files are sent and received.
*2: The communication speed is 384kbps at maximum for both sending and receiving in the following cases:
- When you are outside the FOMA HIGH-SPEED area
- When you use access points for “mopera”
- When you use packet communication with DOCOMO PDA “sigmarion Ⅲ” or “musea”

64K data communication

Regardless of the data amount, 64K data communication is charged according to the length of time the line is connected. *
Use an access point that supports FOMA 64K data communication, such as DOCOMO Internet connection service “mopera U” or “mopera”, or ISDN synchronized 64K access point.
64K data communication is performed via the FOMA USB Cable with Charge Function 01/02 to a PC or via a dedicated cable connection to a PDA.

- 64K data communication is not available for overseas service.
- When performing packet communications overseas, use the IP connection (the PPP connection is not available for packet communications).

* : Note that the communication charge can become very expensive when the line is connected for a long time.

Notice before using

Internet service provider fees

In addition to FOMA service charges, you may need to pay user fees to an Internet service provider to use the Internet. These fees must be paid directly to the Internet service provider in addition to service fees of FOMA service. Contact your Internet service provider for details. DOCOMO Internet connection service “mopera U” or “mopera” is available. “mopera U” is a pay service for which you need to apply. “mopera” is a free service for which you do not need to apply.

Setting an access point (e.g. Internet service provider)

Packet communication and 64K data communication use different access points. If you are using packet communication, use an applicable access point for it; if 64K data communication, use an access point for FOMA 64K data communication or ISDN synchronized 64K.

- You cannot use DoPa access points.

User authorization when accessing network

Some access points may require your user authorization (ID and password) when connecting. Use communication software (Dial-up network) to enter your ID and password. ID and password will be provided by your Internet service provider or the network administrator. Contact the Internet service provider or administrator for details.

Access authorization when using a browser

When using FirstPass compliant sites on your PC’s browser, FirstPass (user certification) for access authorization is required. Install the FirstPass PC software from the CD-ROM packaged provided with this product and conduct the setting. For details, refer to “FirstPass Manual” (PDF format) stored in the “FirstPassPCSoft” folder included on the CD-ROM. (The “FirstPass Manual” is in Japanese.)

Before Using

Operational environment

The PC operation environment to use data communication is as shown below:

Item	Description
PC unit	• PC/AT compatible model with CD-ROM drive • USBUSB port (compliant to Universal Serial Bus Specification Rev1.1/2.0) • Display resolution of 800 dots wide × 600 dots high, High Color (65,536 colors) is recommended
OS*1	• Windows 2000, Windows XP, Windows Vista (Japanese versions)
Required memory	• Windows 2000: 64M bytes or more*2 • Windows XP: 128M bytes or more*2 • Windows Vista: 512M bytes or more*2
Hard disk space	• 5M bytes or more*2

*1: Operations after the OS upgrade are not covered by the warranty.
*2: May differ depending on the PC’s system configuration.

NOTE

- You can transmit data with the FOMA SO706i connected to the DOCOMO PDA “musea” or “sigmarionⅢ”. Update “musea” to connect them to the FOMA SO706i. For how to update it and other details, visit the DOCOMO website.
- The FOMA SO706i is not compatible with Remote Wakeup function.
- The FOMA SO706i is not compatible with the FAX communication.

Required devices

The following hardware and software, in addition to the FOMA terminal and a PC, are required.

- FOMA USB Cable with Charge Function 01/02 (optional) or FOMA USB Cable (optional)
- Bundled CD-ROM “CD-ROM for FOMA SO706i”

NOTE

- Purchase the specified “FOMA USB Cable with Charge Function 01/02” or “FOMA USB Cable”. The USB cable for PC cannot be used because the shape of the connector is different.
- USB HUB may not function correctly.

Checking the Procedure

In data communication, the connection is made through a dial-up connection with Internet service providers or LANs that support FOMA data communication.

■About the software provided in the provided “CD-ROM for FOMA SO706i”

- The CD-ROM contains the SO706i Communication setting file (drivers), FOMA PC setting software and FirstPass PC software.
- The FOMA Communication setting file is software (driver) required for connecting the FOMA terminal with a PC via the FOMA USB Cable with Charge Function 01/02 (optional) to carry out packet communication, 64K data communication or data transfer (OBEX™ connection). Installing the FOMA Communication setting file embeds each driver into Windows.
  Using the FOMA PC setting software, you can easily set up packet communication and 64K data communication and create a dial-up connection.

Flow chart for completing the data communication setup

■Data exchange (OBEX™ connection)

When you use the FOMA USB Cable with Charge Function 01/02 (optional), you have to install “FOMA 通信設定ファイル” (FOMA Communication setting file).

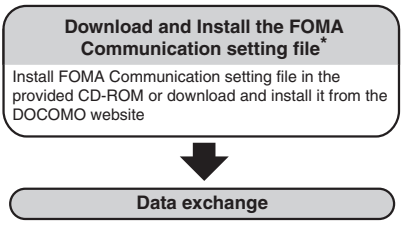

* : Install DOCOMO keitai datalink (p.329) in addition.

■Packet communication/64K data communication

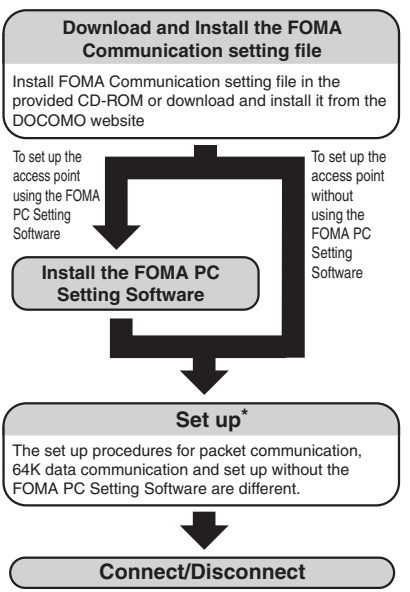

* : To use Internet with the FOMA terminal and PC connected, “mopera U” (separate subscription is required) is useful, which supports broadband connection, etc. Consider the plan in which you are charged only in a month when you use the service. If you use “mopera” for which you do not need a subscription, you can access Internet immediately.
  For more information, visit the DOCOMO website.

AT Commands

AT commands are commands for controlling modem, etc. The FOMA terminal complies AT commands and supports some enhanced commands and its own AT commands.
For details on AT commands to set the FOMA terminal functions from your PC, refer to the “Manual for PC Connection” (PDF format) in the provided CD-ROM.

CD-ROM

The provided CD-ROM contains the software for using the data communication with the FOMA terminal, “Manual for PC Connection” and “Kuten Code List” (PDF). For details, refer to the provided CD-ROM.

Supplied software/PDF

The provided CD-ROM contains the following software/PDF:

- FOMA Communication setting file
- FOMA PC設定ソフト (FOMA PC setting software)
- FOMA バイトカウンタ (FOMA byte counter)
- Guide to DOCOMO keitai datalink
- Guide to i-mode.net notifier
- FirstPass PCソフト (FirstPass PC software)
- Guide to mopera U (mopera U start up tool/mopera U connection & setting tool/FOMA byte counter/ mopera U requesting original data)
- Guide to Napster®
- “パソコン接続マニュアル”/“Manual for PC Connection” (PDF)
- “区点コード一覧”/“Kuten Code List” (PDF)
- Declaration of Conformity (DoC)
- Adobe® Reader®

The following warning screen may appear when you insert the CD-ROM into a PC. This warning is displayed according to the security setting of the Internet Explorer and does not affect the usage of the software. Click “はい” (Yes).

* The screen is the example when Windows XP is used. The displayed screen may be different depending on the PC environment.

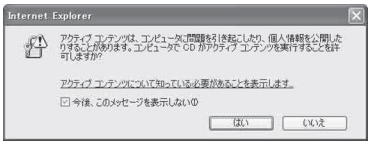

DOCOMO keitai datalink

“DOCOMO keitai datalink” (Japanese) is the software which enables you to back up your “Phonebook”, “Mail”, etc. on the FOMA terminal on a PC and edit the data. This software is provided on the DOCOMO website. For details and downloading, see the following website. You can also access to the following website from the provided CD-ROM.

http://datalink.nttdocomo.co.jp/ (Japanese)

For details such as downloading method, transferable data, operating environment of each OS, installing method, operations and restrictions, see the above website. As for the operations after the installation, refer to the help files of the software. You need “USB Cable (optional)” to use DOCOMO keitai datalink.

Overseas Use

Overview of International Roaming (WORLD WING) 332
Available Services 333
Before Using the FOMA Terminal Overseas 333
Making a Call Abroad 335
Receiving a Call Abroad 336
Setting the Network Connection Switching Method ..... 3G/GSM setting 336
Setting the Search Mode of the Operator ..... NW search mode 336
Displaying the Roaming Operator's Name ..... Display operator name 337
Commencing Roaming Guidance ..... Roam. Guidance 338
Setting to Bar Incoming Calls During Roaming ..... Bar incoming when roam 338
Network Services During Roaming ..... Service(Int.) 338

Overview of International Roaming (WORLD WING)

International roaming (WORLD WING) is a service that allows you to make/receive calls or use i-mode through the network of roaming service operator overseas.

- You can use the FOMA SO706i within the roaming area of DOCOMO overseas. For details on the service area and charge, see the DOCOMO "International Services Website".
- There are 3 international networks: 3G network, GPRS network and GSM network.
  - 3G network is the 3rd generation mobile network compliant with the 3GPP*1 global standard.
  - The GPRS*2 network is a 2.5th-generation mobile communication network enabling high-speed packet communications by GPRS on the GSM network.
  - The GSM*3 network is a 2nd-generation digital-type mobile communication network most popular throughout the world.

*1: 3GPP (3rd Generation Partnership Project)
A regional standardization body established to develop commonly applied technical specifications for 3rd-generation mobile communications systems (IMT-2000).

*2: GPRS (General Packet Radio Service)
Implements high-speed GSM and facilitates data communications including packet communications.

*3: GSM (Global System for Mobile Communications)
A 2nd-generation digital-type mobile communication network most popular throughout the world.

■Country codes of main countries

Enter the following country codes when using international call or setting "Country code" in "Int'l dial assistance".

(as of May, 2008)

Area	Code	Area	Code
Australia	61	Korea	82
Austria	43	Macau	853
Belgium	32	Malaysia	60
Brazil	55	Maldives	960
Canada	1	New Caledonia	687
China	86	New Zealand	64
Czech	420	Norway	47
Egypt	20	Peru	51
Fiji	679	Philippines	63
Finland	358	Russia	7
France	33	Singapore	65
French Polynesia	689	Spain	34
Germany	49	Sweden	46
Greece	30	Switzerland	41
Holland	31	Taiwan	886
Hong Kong	852	Thailand	66
Hungary	36	Turkey	90
India	91	United Kingdom	44
Indonesia	62	United States of America	1
Italy	39		
Japan	81	Vietnam	84

* For other country codes and details, see the DOCOMO "international Services Website".

Available Services

- Some services may not be available depending on the operator or area.
- For details on communication services available during international roaming, refer to the international service guide such as “Mobile Phone User’s Guide [World Services]”.

■Available communication services overseas

Network	3G	GPRS	GSM
Make/Receive a voice call	○*1	○*1	○*1
Make/Receive a videophone call	○*1*2	×	×
Use i-mode (including Full Browser)	○	○	×
Receive MessageR	○	○	×
Send/Receive i-mode mail	○	○	×
Packet communication via PC	○	○	×
Send/Receive SMS	○	○	○
i-Channel	○*3	○*3	×

*1: Outgoing calls using Number B of 2in1 is not available (when receive a call for Number B, some operators cannot recognized to which number the call was made). You cannot make a call from the additional number of multi number.

*2: International videophone calls are available with users of specific roaming operators overseas or FOMA terminals in Japan.

*3: The automatic update will be automatically paused when a roaming operator is connected. To resume the i-Channel automatic update, it is required to set the i-Channel setting again. However, you are charged for the packet communication in addition to the monthly charge. In addition, when you automatically update information on “Basic Channel”, the packet communication charges will apply.

NOTE

- During international roaming, you cannot receive MessageF, receive Area Mail, send/receive Chakumoji, “Pattern data update” and “Set auto-update” of Scanning function, update software, use 64K data communication connected with a PC or ON in 2in1 setting.

■Displayed icons

A network in use and its status appear in the task icon display area (p.27).

Icon	Meaning
FOMA / FOMA	Only dialing available/Only packet transmission available, when using the domestic FOMA network
3G / 3G / 3G	Only dialing available/Only packet transmission available/Both dialing and packet transmission available, when using the overseas 3G network
GSM / GPRS / GPRS	Only dialing available/Only packet transmission available/Both dialing and packet transmission available, when using the overseas GSM/GPRS network

Before Using the FOMA Terminal Overseas

- Before using the FOMA terminal overseas, also refer to the “Mobile Phone User’s Guide [Network Services]” and “Mobile Phone User’s Guide [World Services]”.
- For the customers who have subscribed to the FOMA service on September 1, 2005 or after, a separate subscription is not necessary. However, customers who declared that they did not require this service at the FOMA service subscription or who unsubscribe from this service need a separate subscription.
- For the customers who have subscribed to the FOMA service on August 31, 2005 or before without subscribing to “WORLD WING”, a separate subscription is necessary.
- To use the international roaming service, the FOMA card (UIM) (other than blue) which is compatible with WORLD WING must be inserted.
- This service is not available in some payment plans.
- Usage charges for the overseas services are included in your monthly bill of FOMA services. However, it may be charged in subsequent month due to the conditions of the roaming operator overseas.
- The call charge in “Call data” includes both incoming and outgoing calls. However, the displayed call charge may differ from the actual one, or “¥＊＊” may be displayed.

■Battery pack charging

- Precautions for handling the AC adapter→p.19 “Handling the Adapter (including the Charger)”
- Charging with the AC adapter→p.41 “Charging”

Continued on next page

■**Viewing i-mode sites**

To view i-mode sites from overseas, set “International Settings” from “iMenu” beforehand.

- For details, refer to “Mobile Phone User’s Guide [i-mode] FOMA version”.

■**Network Services**

You can also use network services such as the Voice Mail service and Call Forwarding service if you have subscribed to these network services.

- Before using the network services overseas, “Remote Control” (p.318) must be set to “Activate”.
- Even when the operation such as Activate or Deactivate is available, the services may be restricted or unavailable. For details, refer to the “Mobile Phone User’s Guide [Network Services]” and the international service guide such as “Mobile Phone User’s Guide [World Services]”, etc.

■**SMS**

This service allows you to exchange text messages with subscribers to overseas carriers other than DOCOMO.

- To send an SMS to a user of a roaming operator overseas, enter “+” and the country code in front of the phone number (when the phone number begins with “0”, omit the first “0”).
  You can also send SMS by entering “010”, the country code, the other party’s phone number in this order. (To reply to received SMS from overseas, enter “010”.)
- When sending a SMS to a user of a roaming operator overseas and a character contained in SMS is not supported by the other party’s mobile phone, the character may not be properly displayed. See international service guides such as “Mobile Phone User’s Guide [World Services]” for details.

● Inquiries overseas

For inquiries overseas such as lost, stolen, charge accumulation or malfunction, refer to “For lost, stolen, accumulated amount settlement overseas” or “For malfunction overseas” on the back cover of this manual. Note that you are charged for the call and communication even after the FOMA terminal is lost or stolen.

- For the latest information, see the DOCOMO “International Services Website”.

■**International call access code of main countries (Table 1)**

(as of March, 2008)

Area	Code	Area	Code
Australia	0011	Macau	00
Belgium	00	Malaysia	00
Brazil	0021/ 0014	Monaco	00
		New Zealand	00
Canada	011	Norway	00
China	00	Philippines	00
Czech	00	Poland	00
Denmark	00	Portugal	00
Finland	00	Russia	810
France	00	Singapore	001
Germany	00	Spain	00
Greece	00	Sweden	00
Holland	00	Switzerland	00
Hong Kong	001	Taiwan	002
Hungary	00	Thailand	001
India	00	Turkey	00
Indonesia	001	United Arab Emirates	00
Ireland	00	United Kingdom	00
Italy	00	United States of America	011
Korea	001		
Luxemburg	00	Vietnam	00

* Charges apply for calls made to Japan.

■**International Prefix number for the universal number (Table 2)**

(As of March, 2008)

Area	Code	Area	Code
Argentina	00	Korea	001
Australia	0011	Luxemburg	00
Austria	00	Malaysia	00
Belgium	00	New Zealand	00
Brazil	0021	Norway	00
Bulgaria	00	Peru	00
Canada	011	Philippines	00
China	00	Portugal	00
Colombia	009	Singapore	001
Denmark	00	South Africa	09
Finland	990	Spain	00
France	00	Sweden	00
Germany	00	Switzerland	00
Holland	00	Taiwan	00
Hong Kong	001	Thailand	001
Hungary	00	United Kingdom	00
Ireland	00	United States of America	011
Israel	014		
Italy	00		

* Note that the universal numbers may not be available from mobile phones, public phones or hotels.

* The universal numbers are available only in the above countries.
* If you make a call from a hotel, the fees may be charged by the hotel. Check with the hotel before using.
* From mobile phones, domestic charges apply in the country.

Use in the local area

This FOMA SO706i is available in 3G, GPRS and GSM roaming areas. When the FOMA terminal is turned on after you arrive in the destination overseas, a local roaming operator is automatically set.

● Display, date and time

While using the FOMA terminal overseas, the name of the operator connected appears on the standby screen.

- "Displaying the Roaming Operator's Name"→p.337
- Regardless of "Set main time" setting, the received address list are time stamped as the date and time in Japan standard time.
- When "圏外" remains on the screen, set "NW search mode" to "Auto". It may take some time to search network just after turning on the FOMA terminal and "圏外" may appear while searching.
- If the used network or operator does not notify the caller ID, the caller ID does not appear on the FOMA terminal screen and displays "Unknown" or "withholding" even when the caller ID is notified. The FOMA terminal screen also displays "Unknown" even when "Caller ID Request Service" is set.

● After returning to Japan

After returning to Japan and turning on the FOMA terminal, the network will be automatically searched and set to the FOMA network (DoCoMo).
"Setting the Search Mode of the Operator"→p.336

Making a Call Abroad

You can use the international roaming service to make voice or videophone calls from abroad.

Making a local call abroad

To make a call, dial the phone number of the other party's ordinary phone or mobile phone as making a call in Japan. →p.48

- The "Int'l dial assistance" message may appear when you use the phonebook to make a call. Select "Original phone No.".

Making a call to outside your destination country (including Japan)

1 On the standby screen, dial the following; + (0 (1 second or longer)) →Country code→Area code (Long distance code)→The other party's phone number

If the area code (long distance code) begins with "0", omit the first "0". However, to call to ordinary phones in Italy, "0" may be required.

2 (voice call)/ (V.phone)

● Making a call to a country stored in "Country Code setting" in the "Int'l dial assistance"

You can easily dial the number by storing the country name and codes of a party you often call to "Int'l dial assistance".

- You can also make an international call from the phonebook, Redial or Dialed calls record.

1 Enter the phone number of the other party▶ (FUNC)▶"Int'l call"▶Select a country▶ (voice call)/ (V.phone)

"+" and "Country code" is prefixed and an international call is made.

Making a call to a country set in "Auto int'l call set." under "Int'l dial assistance"

- You can also make an international call from the phonebook, Redial or Dialed calls record.
- Only available when the phone number begins with "0".
- Set "Auto int'l call set." under "Int'l dial assistance" to "ON".

1 Enter the phone number of the other party▶[ ] (voice call)/[ ] (V.phone)▶"Dial"

Making a call to the overseas user of WORLD WING

When the other party is using the international roaming, make a call as an international call to Japan (dial "81" (Japan) as the country code) even when the other party is in the country you are staying.

Receiving a Call Abroad

You can use the international roaming service to receive a call without changing the phone number. →p.59

The other party's procedure to make a call

■To have the other party make a call from Japan to your destination country

To have the other party make a call from Japan to your FOMA terminal in your destination country, the other party only needs to dial the phone number as in Japan.

090 (or 080)-XXXX-XXXX

■To have the other party make a call from outside Japan to your destination country

The other party needs to dial the international access code and "81" (country code of Japan) no matter whether you are in Japan or overseas.

International access code-81-90 (or 80)-XXXX-XXXX

NOTE

- When you receive a call while using international roaming services, the call is sent to your usual mobile phone number in Japan and then forwarded to your travel destination no matter from which country the call originates. The caller has to bear charges for calls to Japan, and you have to bear incoming call charges including international forwarding charges.

Setting the Network Connection Switching Method <3G/GSM setting>

Set the method of switching the network accessed overseas.

1 MENU▶"SETTINGS"▶"Int'l roaming set"▶"3G/GSM setting"▶Select any item:

AUTO……Automatically switches between the 3G network and GSM/GPRS network.

3G……Fixes to the 3G network.

GSM/GPRS……Fixes to the GSM/GPRS network.

NOTE

- Set "AUTO" or set according to the network to be accessed overseas.

Setting the Search Mode of the Operator <NW search mode>

When you move out of the service area of the operator you are using, the FOMA terminal is reconnected to another operator's network.

- This function may not be set depending on the conditions of radio waves or networks.
- As of May 2008, no service provider other than NTT DOCOMO can be selected in Japan.
- When "圏外" appears when you return to Japan, check that "NW search mode" is set to "Auto".

Changing the operator manually

1 MENU▶"SETTINGS"▶"Int'l roaming set"▶"NW search mode"▶"Display ON" or "Display OFF"

The "NW search mode" screen appears.



NW search mode

2 "Manual"▶Select an operator

■To switch the operator automatically

▶"Auto"

You can set an operator to be preferably connected when searching the operator automatically. →p.337

Re-searching for the network

<Network re-search>

- You can re-search for a network then connect to the network if “NW search mode” is set to “Auto” and an operator could not be searched for, or if “NW search mode” is set to “Manual” and you want to change operators.

1 NW search mode screen (p.336)▶“Network re-search”▶Select an operator

■ **When “NW search mode” is set to “Auto”**

▶“Network re-search”

Setting an operator to be preferably connected

You can set an operator to be preferably connected when searching or re-searching the network automatically.

- The PLMN network list can store up to 20 operators.
- Operators designated by DOCOMO are stored to the PLMN network list.

1 NW search mode screen (p.336)▶“PLMN setting”

The “PLMN setting” screen appears. Operators are listed in the priority order.

PLMN setting

Function menu➡p.337

2 Highlight the operator whose priority is to be changed▶(FUNC)▶“Change priority”

3 Highlight the position to move to▶(Select)

The selected operator moves to the position above the highlighted item. Select “<last>” to move to the end.

4 (Finish)▶“YES”

FUNC PLMN setting screen (p.337)

PLMN manual select……Enters and stores Country code (Operator Code (MCC)) and Network code (Operator Code (MNC)).

PLMN select……Selects and stores the operator from the list.

Set VPLMN to PLMN……Stores the currently selected operator.

Change priority→p.337

Delete……Selects the deleting method from “Delete this/Delete selected/Delete all”.
“About multiple-choice”→p.38

NOTE

- The priority may not apply depending on the conditions of radio waves or networks.

Displaying the Roaming Operator’s Name

<Display operator name>

You can set whether to display the name of the currently connected operator on the display during the international roaming.

1 MENU▶“SETTINGS”▶“Int’l roaming set”▶“Display operator name”▶“Display ON” or “Display OFF”

NOTE

- Even when set to “Display ON”, the name of the operator is not displayed when you are in Japan (in the FOMA network).
- When “NW search mode” is set to “Manual” and the FOMA terminal is in “圏外” area, “select net” appears.

Commencing Roaming Guidance <Roam. Guidance>

You can set the FOMA terminal to notify the other party that you are roaming internationally when you receive a voice call or videophone call during international roaming.

- Make the setting in Japan.

1 MENU▶"SERVICE"▶"Roam. Guidance"▶Select any item:

Activate • Deactivate……Activates or deactivates the roaming guidance.

Check setting……Checks the setting.

NOTE

- Even when the guidance is not set, the other party hears the ring tone set by the operator.
- The caller may hear the guidance in a foreign language depending on the conditions of the operators overseas.

Setting to Bar Incoming Calls During Roaming <Bar incoming when roam>

- Depending on the operator overseas, the setting may be unavailable.

1 MENU▶"SERVICE"▶"Bar incoming when roam"▶Select any item:

Activate……Selects from "Bar All incoming" (bars all incoming calls) or "Data calls Barring" (bars incoming videophone calls and 64K data communications*)
The network security code (p.100) is required for the setting.

Deactivate……Deactivates the barring of incoming calls when roaming.
The network security code (p.100) is required for deactivating.

Check setting……Checks the setting.

* : 64K data communication is not available on FOMA SO706i during international roaming.

Network Services During Roaming <Service(Int.)>

- You can use some network services such as "Voice Mail" or "Call Forwarding" overseas.
- To use "Voice Mail(Int.)" or "Call Forwarding(Int.)", the subscription to "Voice Mail" or "Call Forwarding" is required beforehand. Also, "Remote Control" must be set beforehand.
- You cannot perform the setting when "圏外" is displayed.
- When you perform the operation overseas, you must bear the international call charges of the country you are staying.
- For details on the network services, refer to the "Mobile Phone User's Guide [Network Services]" and "Mobile Phone User's Guide [World Services]", etc.

1 MENU▶"SERVICE"▶"Service(Int.)"▶Select any item:

Voice Mail(Int.)

Activate • Deactivate • Play messages • Set ring time • Setting……Follow the audio guidance to specify the setting.

Call Forwarding(Int.)

Activate • Deactivate • Setting……Follow the audio guidance to specify the setting.

Roam. Guidance(Int.)……Specify the settings by following the audio guidance.

Remote access(Int.)……Specify the settings by following the audio guidance.

Caller ID req.(Int.)……Specify the settings by following the audio guidance.

Appendix/External Devices/Troubleshooting

Menu Function List 340
Character Assignment to Dial Keys 350
Symbols and Special Characters 352
Pictographs 353
Face Marks 358
Common Phrases 359
Multi Access Combination Patterns 360
Multitask Combination Patterns 361
Services Available for the FOMA Terminal 362
Options and Accessories 363

■ **Using the FOMA Terminal with External Devices**

Movie Playing Software 363

■ **Troubleshooting**

Malfunction Checklist 364
If Any Error Message Appears 368
Warranty and After-Sales Service 375
i-mode Malfunction Check Site 377
Updating Software ..... Software Update 377
Protecting the FOMA Terminal from Harmful Data ..... Scanning function 383
Specifications 385
Number of Data that can be Stored/Registered/Protected on the FOMA Terminal 386
Specific Absorption Rate of Mobile Phones, etc. 387
Export Administration Regulations 394

Menu Function List

- The settings with are restored to the default settings by “Reset settings”.
- Refer to the **Table1** (p.348) for details of the reset settings of ① to ⑭ and other functions.
- The key operation which uses menu numbers is available only when the main menu is set to “Standard Menu”. →pp.32, 33

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
MAIL	Inbox		—		—	p.170
	Outbox		—		—	p.170
	Draft		—		—	p.161
	Compose message		—		—	p.156
	WEB mail		—		—	p.157
	Compose SMS		—		—	p.182
	Check new messages		✉ (1 second or longer)		—	p.164
	Receive option		—		—	p.164
	Check new SMS		—		—	p.184
	Template		—		—	p.159
	Mail settings		—		—	p.178
I-MODE	iMenu		—		—	p.136
	Bookmark		—		—	p.142
	Screen memo		—		—	p.143
	URL history		—		—	p.138
	Go to location		—		—	p.141
	Full Browser		—		Specified URL http://www.google.co.jp	p.218
	i-Channel		ch		—	p.153
	MessageR/F		—		—	p.180
	Check new messages		✉ (1 second or longer)		—	p.164
	Client certificate		—		—	p.150
	i-mode settings		—		—	p.148
I-APPLI	Software list		i (1 second or longer)		—	p.187
	microSD		—		—	p.200
	Auto-start set		—		—	p.197
	i-αppli action info		—		—	p.189
SETTINGS	Kisekae Tool setting		—		—	p.97
	Incoming call	Ring volume	MENU 5 0	Phone to MessageF	All Level 4	p.61
		Select ring tone	MENU 1 3	Phone	着信音 1	p.82
				Videophone	着信音 1	
				Mail	着信音 1	
				MessageR/ MessageF	着信音 1	
		Sound effect	MENU 6 4	Stereo&3D sound	ON	p.84
		Vibrator	MENU 5 4	Phone to MessageF	All OFF	p.84
		Manner mode set	MENU 2 0		Manner mode (Original settings: Default →p.88)	p.86

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
SETTINGS	Incoming call	Disp. Phonebook image	—		ON	p.89
		Answer setting	MENU 5 8		Any key answer	p.60
		Mail/Msg. ring time	MENU 6 8	Mail to MessageF	All ON (Ring time: 5 seconds)	p.85
		Ring time(sec.)	MENU 9 0	Set mute seconds	OFF Mute seconds: 1 sec (Set mute seconds is set to “ON”)	p.114
				Missed calls display	Display	
		Info notice setting	MENU 6 5		In Japanese display: ボイス (Voice) (名前通知 (Name notification) : OFF) In English display: ON	p.64
		Record message	MENU 5 5		OFF Answer message: Japanese 1 (When Record message is set to “ON”) Ringing time: 13 seconds (When Record message is set to “ON”)	p.64
		Disp. call/receive No.	—		White (phone color: Onyx Black) Black (phone color: Pink Gold, Platinum White)	p.90
		Melody Call setting	—		—	p.84
	Talk	Noise reduction	MENU 7 6		ON	p.58
		Quality alarm	MENU 7 5		No tone	p.85
		Reconnect signal	MENU 7 7		No tone	p.58
		Set hold tone	—	On hold tone	Tone 1	p.62
		Setting when folded	MENU 1 8		End the call	p.61
	Dialing	Pause dial	MENU 8 4		—	p.57
		Sub-address setting	—		ON	p.58
		Prefix setting	—		“WORLD CALL” (009130010) User setting: Not recorded	p.57
		Headset sw to dial	—		OFF	p.298
		Int’l dial assistance	—	Auto int’l call set.	ON (automatically added)	p.52
				Country Code setting	“日本” (Country code: 81) 22 country codes are already stored.	
				IDD Prefix setting	“WORLD CALL” (009130010) User setting: Not recorded	
	Videophone	Visual preference	—		Normal	p.67
		Select image	—	On hold	Pre-installed	p.67
				Holding	Pre-installed	
				Substitute image	Chara-den (ミッフィー)	
				Record message	Pre-installed	
				Preparing	Pre-installed	
				Voice memo	Pre-installed	
		Auto redial as voice	—		OFF	p.67
		Display setting	—	Main display	Other side	p.67
		Ntfy switch-mode	—		Indication ON	p.67
		Hands-free switch	—		ON	p.67

Continued on next page

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
SETTINGS	Videophone	V-phone while packet	—		V-phone priority	p.67
	Display	Display setting	MENU 5 6	Stand-by display	Pink (phone color: Pink Gold), White (phone color: Platinum White), Black (phone color: Onyx Black)	p.88
				Wake-up display	ウェイクアップ Message: Not stored	
				Dialing, V.phone Dialing	発信中１ (phone color: Pink Gold), 発信中２ (phone color: Platinum White), 発信中３ (phone color: Onyx Black)	
				Calling, V.phone Calling	着信中１ (phone color: Pink Gold), 着信中２ (phone color: Platinum White), 着信中３ (phone color: Onyx Black)	
				Mail sending	メール送信中１ (phone color: Pink Gold), メール送信中２ (phone color: Platinum White), メール送信中３ (phone color: Onyx Black)	
				Mail receiving	メール受信中１ (phone color: Pink Gold), メール受信中２ (phone color: Platinum White), メール受信中３ (phone color: Onyx Black)	
				Check new messages	問合わせ中１ (phone color: Pink Gold), 問合わせ中２ (phone color: Platinum White), 問合わせ中３ (phone color: Onyx Black)	
				Mail rec'd result	メール受信結果画面１ (phone color: Pink Gold), メール受信結果画面２ (phone color: Platinum White), メール受信結果画面３ (phone color: Onyx Black)	
		Backlight	MENU 7 0	Lighting	ON (lighting) + Saver (Light time: 2 minutes)	p.90
				Charging	Standard	
				Area	LCD+Keys	
				Brightness	ON+Middle	
		Display design	MENU 8 6	Color pattern	Red (phone color: Pink Gold), White (phone color: Platinum White), Black (phone color: Onyx Black)	p.91
				Icon pattern	Battery icon/Antenna icon Pattern 2 (phone color: Pink Gold), Pattern 3 (phone color: Platinum White), Pattern 4 (phone color: Onyx Black)	
				Soft key	Pattern 1 (phone color: Pink Gold), Pattern 2 (phone color: Platinum White), Pattern 3 (phone color: Onyx Black)	
		Font	MENU 6 6	Font type	Gothic	p.93
				Thickness	Bold	
				Character size	Standard	

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
SETTINGS	Display	My shortcut	MENU 6 3		Standard (1Seg, Photo mode, My selection)	p.94
		Select language	MENU 1 5		Japanese	p.45
		My selection	MENU 5 2		Receive Ir data Bar code reader Alarm Illumination set Shield view Dictionary	p.92
		Menu display set	MENU 5 7	Menu display	List	p.91
				Theme	Lacy Pink (phone color: Pink Gold), Plain White (phone color: Platinum White), Seductive Black (phone color: Onyx Black)	
				Memory focus	ON	
				Reset menu op. log	Operation log: Default	
		Viewer settings	—		9 images	p.226
		Icons description	MENU 3 6		—	p.28
		Icons setting	—		ON	p.96
		Shield view	2 (1 second or longer)		OFF	p.90
		Mail ticker	—		Display sender	p.216
	Illumination set		MENU 9 3	Dialing	ON	p.92
				Incoming Call	Pattern: Flow Color: Citrine orange	
				Incoming V.phone	Pattern: Flow Color: Citrine orange	
				Call light	Pattern: OFF Color: —	
				Mail receiving	Pattern: Flow Color: Light purple	
				Mail sending	Pattern: Flow Color: Pink tourmaline	
				Missed mail	ON	
				Missed call	ON	
				Open phone	Pattern: Twins Color: Pink tourmaline	
				Close phone	Pattern: Twins Color: Pink tourmaline	
				Power ON	ON	
				Power OFF	ON	
				Charging start	Pattern: Slow Beat Color: Pink tourmaline	
				Charging end	Pattern: Slow Beat Color: Pink tourmaline	
				To Do	Pattern: Slide Color: Pink tourmaline	
				Schedule/Alarm	Pattern: Slide Color: Pink tourmaline Time cycle: 60 minutes	
				Time signal	Pattern: Slide Color: Pink tourmaline	

Continued on next page

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
SETTINGS	Illumination set		MENU 9 3	Exchanging data	ON	p.92
				Play sound	ON	
				Activate 1Seg	ON	
	Call time/ Charge	Call data	MENU 6 1		—	p.293
		Notice designate calls	—	Cost limit setting	Not set	p.294
				Notify cost limit	OFF	
				Alarm tone	Alarm Tone	
				Volume	Level 4	
		Reset total	MENU 6 0		—	p.294
		Auto reset total cost	—		OFF	p.294
	Clock	Set main time	MENU 3 1	Auto time adjust	Auto	p.46
				Summer time	OFF	
		Set sub clock	—	display method	Auto	p.46
				Summer time	OFF	
		Clock display	MENU 3 9	Style	12h clock (phone color: Pink Gold, Platinum White), 24h clock (phone color: Onyx Black)	p.93
				Size	Small (phone color: Pink Gold), OFF (phone color: Platinum White, Onyx Black)	
				Color	Black (phone color: Pink Gold, Platinum White), White (phone color: Onyx Black)	
		Alarm setting	—		Alarm preferred	p.289
		Clock Alarm Tone set	—		Alarm Tone	p.85
		Auto power ON	—		Inactive	p.45
		Auto power OFF	—		Inactive	
	Lock/ Security	Lock	—	Dial lock	Release	p.101
			—	Original lock 1 to 3	Release	p.106
					Group and item settings Data disp. Edit del.: All selected Dial/sending mail, Incoming/ Mail disp.: All deselected	
		IC card lock setting	✳ (1 second or longer)	IC card lock	OFF	p.206
			—	IC lock (power-off)	Maintain	
		Keypad lock	—	After folded	OFF	p.110
			—	Timer	OFF	
		Self mode	—		Release	p.115
		Secret mode	MENU 4 0		Release	p.103
		Secret data only mode	MENU 4 1		Release	
		Reject unknown	—		Accept	p.114
		Call setting w/o ID	MENU 1 0	Unknown to User unset	All Accept Select ring tone: Same as normal ring tone Select calling disp.: Same as normal display	p.114
		Change security code	MENU 2 9		0000 (4 zeros)	p.101

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
SETTINGS	Lock/ Security	IC card authentic.	—		OFF	p.111
					Ext. IC card: Not set	
		PIN setting	—		—	p.101
		Scanning function	—	Set scan	Scan: ON	p.383
					Message scan: ON	
	i-mode common set	Set connection timeout	—		60 seconds	p.149
		Set check new messages	—	Mail to MessageF	All checked	p.179
		Host selection	MENU 8 1		i-mode User setting: Not recorded	p.149
		SMS center selection	—		DoCoMo User setting: Not recorded	p.184
		Certificate	—		All Valid	p.149
		Certificate host	—		DoCoMo User setting: Not recorded	p.151
	i-αppli settings	Disp. Software info	—		Not display	p.186
		End stand-by display	—		—	p.199
		i-αppli vol.	—		Level 4	p.189
	External connection	USB mode setting	—		Communication mode	p.251
		Headset usage setting	MENU 5 1		Headset+speaker	p.85
		Select microphone	—		External microphone	p.298
		Auto answer setting	MENU 9 4	Phone	OFF	p.299
				Videophone		
	Int'l roaming set	NW search mode	—		Auto	p.336
		3G/GSM setting	—		AUTO	p.336
		Display operator name	—		Display ON	p.337
	Other settings	Keypad sound	MENU 3 0		ON	p.85
		Charge sound	—		ON	p.85
		Battery level	MENU 7 1		—	p.44
		Side key guard	MENU ✱ (1 second or longer)		OFF	p.112
		Character input set	MENU 3 5	Input mode	5-touch	p.303
				Auto cursor	1(Slow)	p.306
				Select conversion	Prediction	p.303
				CHG input size	Standard	p.303
				Operation in item	↑ ↓ ←→ Key	p.305
				Clear learned	—	p.310
		Holding down ch-key	—		Camera	p.284
		Reset settings	MENU 2 3		—	p.299
		Initialize	—		—	p.300
		Software Update	—	Set auto-update	Auto-update Date: Everyday Time: 03:00	p.377

Continued on next page

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
DATA BOX	My picture		MENU 4 6		①	p.225
	Music		—		② ⑤	p.273
	Music&Video Channel		—		③ ⑤	p.271
	i-motion		—		④ ⑤	p.233
	Melody		MENU 1 6		⑥	p.240
	1Seg		—		—	p.235
	My document		—		⑦	p.261
	Chara-den		—		⑧	p.237
	Kisekae Tool		—		⑨	p.242
	Document viewer		—		—	p.263
LIFEKIT	Bar code reader		—		—	p.129
	Receive Ir data		MENU 7 9		—	p.258
	microSD manager		—		—	p.247
	Camera		ch (1 second or longer) (default)		⑩	p.123 p.126
	Data security serv.		—	Sndg img in Phonebook	OFF	p.79
	Schedule		MENU 4 5		⑪	p.285
	Alarm		MENU 4 4		All OFF	p.284
	To Do list		MENU 9 5		—	p.288
	Text memo		MENU 4 2		—	p.296
	Calculator		MENU 8 5		—	p.295
	Play/Erase msg.		(▼メモ)		—	p.65
	Play/Erase VP msg.		—		—	p.65
	Voice memo*		MENU 4 3		—	p.292
	Voice announce		MENU 9 1		—	p.293
	UIM operation		—		—	p.254
	My Profile		MENU 0		⑫	p.46 p.290
	Forwarding image		—		ON	p.260
	Text reader		—		—	p.131
	Dictionary		—		—	p.296
SERVICE	Chaku-moji		—	Create message	5 messages pre-installed	p.55
				MSG display settings	Calls with Caller ID	
	Caller ID Notification		MENU 1 7		—	p.46
	Voice Mail		—		—	p.312
	Call Waiting		—		—	p.313
	Call Forwarding		—		—	p.314
	2in1 setting		8 (1 second or longer)		OFF	p.320
				Mode switching	Dual mode	p.322
				Phonebook 2in1 setting	—	
				Stand-by display	Dual mode: White B mode: Black	

*: "Voice memo" may appear depending on the main menu type.

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
SERVICE	2in1 setting		8 (1 second or longer)	Set call/receive No.	Disp. call/receive No. Number A: White (phone color: Onyx Black)/Black (phone color: Pink Gold, Platinum White) Number B: Gray Ringtone for Number B Voice call (recv.) Ring tone: 着信音2 Other than above: Same as Number A V.phone (recv.) Ring tone: 着信音2 Other than above: Same as Number A Mail (recv.) Ring tone: 着信音2 Other than above: Same as Number A	p.322
				2in1 function OFF	—	
				Rcv. avoid. setting	—	
	Nuisance Call Blk		—		—	p.315
	Caller ID Request		—		—	p.316
	Incoming Call Mng		—		Answer	p.317
	Set in-call arrival		—		—	p.317
	Remote Control		—		—	p.318
	Dual Network		—		—	p.316
	English Guidance		—		—	p.316
	Additional service		—		—	p.324
	Service Numbers		—		—	p.317
	Multi Number		—	Select ring tone	Same as normal ring tone	p.319
	Roam. Guidance		—		—	p.338
	Bar incoming when roam		—		—	p.338
	Service(Int.)		—		—	p.338
PHONEBOOK	Phonebook		—		⑬	p.70 p.73
OWN DATA	Received calls		MENU 2 4		—	p.53
	Dialed calls		—		—	p.53
	Mail member		MENU 9 7		—	p.162
	Choku-Den		▲		—	p.78
	Common phrases		MENU 3 8		Default common phrases	p.308
	Own dictionary		MENU 8 2		—	p.309
	DL dictionary		—		—	p.310
MUSIC	Music Player		▼(▼メモ) (1 second or longer)		② ⑤	p.277
	Music&Video Channel		—		③ ⑤	p.268
1SEG			—		⑭	p.207
OSAIFU-KEITAI	IC card content		—		—	p.202
	DCMX		—		—	p.195
	ToruCa		—		—	p.204

Continued on next page

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
OSAIFU-KEITAI	IC card lock setting		✳ (1 second or longer)	IC card lock	OFF	p.206
			—	IC lock(power-off)	Maintain	
	Setting		—	ToruCa settings	Receive from R/W: Accept Repetition check: Yes Auto reading setting: ON Scroll: 1 line	p.206
				IC card Illumination	ON	p.206
	Check IC owner		—		—	p.203
	Change IC owner					
	Search by i-mode		—		—	—

[Table 1] Other reset setting functions

Function	Default setting
①My picture	Sort: Chronological ↑ Set image disp.: Normal
②Music	List setting: List Resume play: No data
③Music&Video Channel	Sort: Chronological ↑ List setting: List+image Playback start position: Beginning
④i-motion	Sort: Chronological ↑ List setting: List+image (FOMA terminal), Name+image (microSD) Playback start position: No data
⑤Music Player	Sound effect Equalizer: OFF SRS_WOW: OFF Repeat setting: OFF Shuffle: OFF Volume: Level 10 Screen setting: Normal screen mode Set image disp.: Normal Change skin: Lacy Pink (phone color: Pink Gold), Plain White (phone color: Platinum White), Seductive Black (phone color: Onyx Black) Set repeat play: OFF
⑥Melody	Sort: Chronological ↑ Set repeat play: OFF
⑦My document	Sort: Chronological ↑
⑧Chara-den	Substitute image: ミッフィー Set image disp.: Fit in display Rec. Chara-den: Photo mode Select size: QCIF (176 × 144) Movie type set: Video + voice Storage setting (movie): Normal Storage setting (image): Fine File size setting: 2MB

Function	Default setting
⑨Kisekae Tool	Sort: Chronological ↑
⑩Camera	Movie mode Select size: QCIF (176 × 144) File size setting: 2MB Quality setting: Normal Camera Settings Photo mode: Portrait White balance: Auto Flicker: Auto Shutter sound: Sound 1 Select to save: Phone (Camera folder) Voice mode Shutter sound: Sound 1 Select to save: Phone (Camera folder) Photo mode Select size: Screen (240 × 427) Quality setting: Super Fine Camera Settings Photo mode: Auto White balance: Auto Flicker: Auto Shutter sound: Sound 1 Select to save: Phone (Camera folder) Movie mode/Photo mode Auto timer: OFF (Delay time: 10 seconds) Auto save set: OFF File restriction: File unrestricted Continuous mode→p.124
⑪Schedule	Display: Monthly display User icon setting: Not recorded
⑫My Profile	Big font⇔Standard font: Standard font

Function	Default setting
⑬Phonebook	Ring tone/Image: All OFF Restrictions: All released Set large font⇔Set normal font: Set normal font
⑭1Seg	User settings Subtitles: ON(Wide:Bottom) Rec. while low battery: ON TV sound while closed: ON ECO mode: OFF Display light: Constant light Data BC settings Sound effect: ON Icon show(Wide): Show always

Function	Default setting
Other functions	During a videophone call Brightness of V.phone settings: 0 Display light: All time ON Last one function* Main menu: Data Box Phonebook: Search all (Prefer) Volume: Level 4 Manner mode: Released Public mode (Driving mode): Deactivated

* : “Last one function” makes the FOMA terminal select the function you select last time automatically when you operate the FOMA terminal next time.

Simple Menu function list

Main item	Sub item/Branch item	Ref. page
Phone	Phonebook	p.73
	Dialed calls	p.53
	Received calls	p.53
	Play/Erase msg.	p.64
	Add to phonebook	p.70
	My profile	p.46, p.290
Mail	Inbox	p.170
	Outbox	p.170
	Draft	p.161
	Compose msg.	p.156
	Check new msg.	p.164

Main item	Sub item/Branch item	Ref. page
i-mode	iMenu	p.136
	Bookmark	p.142
	Screen memo	p.143
Camera	Photo mode	p.123
	Movie mode	p.126
	My picture	p.225
	i-motion	p.233
Settings/Tools	Incoming call	p.82
	Display	p.89
	Alarm clock	p.284
	Calculator	p.295
	Call time/Charge	p.293
	Voice Mail	p.312

Character Assignment to Dial Keys

Characters that can be entered using 5-touch

Key	Kanji/Hiragana input mode	Katakana input mode	Alphabetic input mode	Numeric input mode
1	あいうえおぁぃぅぇぉ	アイウエオァィゥェォ	.@/:ー-～¯1	1
2	かきくけこ	カキクケコカケ	ABCabc2	2
3	さしすせそ	サシスセソ	DEFdef3	3
4	たちつてとっ	タチツテトッ	GHIghi4	4
5	なにぬねの	ナニヌネノ	JKLjkl5	5
6	はひふへほ	ハヒフヘホ	MNOmno6	6
7	まみむめも	マミムメモ	PQRSpqrs7	7
8	やゆよゃゅょ	ヤユヨャュョ	TUVtuv8	8
9	らりるれろ	ラリルレロ	WXYZwxyz9	9
0	わをんゎSpace、。ー・！？	ワヲンヮ Space 、。ー・！？「」	Space！？ー，゛;()"__～¯&￥0	0＋*1
*	、。ー・゛゜！？*2	、。ー・゛゜！？「」*2*3	！？ー，゛;()"__～¯&￥	*
#	———— *4			#

- ■ only appears in double-byte input mode.
- Red text only appears in single-byte input mode.

*1: "+" can be entered when you enter an SMS address by holding down the key for 1 second or longer.
*2: Dakuten/Handakuten change when pressed before entering Dakuten/Handakuten character.
*3: "゛" or "゜" appears at the beginning in single-byte input mode.
*4: Line feed "↵" is entered when pressed after text is set.
Assigned text changes in descending order when pressed before text is set.

Characters that can be entered using 2-touch

■ Double-byte input mode

Key		2nd key									
		1	2	3	4	5	6	7	8	9	0
1st key	1	あ ぁ	い ぃ	う ぅ	え ぇ	お ぉ	A a	B b	C c	D d	E e
	2	か	き	く	け	こ	F f	G g	H h	I i	J j
	3	さ	し	す	せ	そ	K k	L l	M m	N n	O o
	4	た	ち	つ っ	て	と	P p	Q q	R r	S s	T t
	5	な	に	ぬ	ね	の	U u	V v	W w	X x	Y y
	6	は	ひ	ふ	へ	ほ	Z z	?	!	ー	／
	7	ま	み	む	め	も	¥	&		*1	
	8	や ゃ	（	ゆ ゅ	）	よ ょ	＊	＃		*1	*2
	9	ら	り	る	れ	ろ	1	2	3	4	5
	0	わ ゎ	を	ん	*3 ゛ 、	*3 ゜ 。	6	7	8	9	0

■ Single-byte input mode

Key		2nd key									
		1	2	3	4	5	6	7	8	9	0
1st key	1	ｱ ｧ	ｲ ｨ	ｳ ｩ	ｴ ｪ	ｵ ｫ	A a	B b	C c	D d	E e
	2	ｶ	ｷ	ｸ	ｹ	ｺ	F f	G g	H h	I i	J j
	3	ｻ	ｼ	ｽ	ｾ	ｿ	K k	L l	M m	N n	O o
	4	ﾀ	ﾁ	ﾂ ｯ	ﾃ	ﾄ	P p	Q q	R r	S s	T t
	5	ﾅ	ﾆ	ﾇ	ﾈ	ﾉ	U u	V v	W w	X x	Y y
	6	ﾊ	ﾋ	ﾌ	ﾍ	ﾎ	Z z	?	!	-	/
	7	ﾏ	ﾐ	ﾑ	ﾒ	ﾓ	¥	&		*1	
	8	ﾔ ｬ	(	ﾕ ｭ	)	ﾖ ｮ	*	#		*1	*2
	9	ﾗ @	ﾘ /	ﾙ -	ﾚ _	ﾛ :	1 .ne.jp	2 .co.jp	3 .ac.jp	4 @docomo. ne.jp	5
	0	ﾜ ~	ｦ '	ﾝ	゛ ,	゜ .	6 www.	7 .com	8 .html	9 http://	0 https://

- During reading input when you are storing entries in the UIM phonebook, Double-byte input mode becomes katakana input.

*1: These can also be used only when pictograph input is possible, such as “Text memo” or storing “Common phrases”. Note that these icons are always entered as double-byte characters. “Pictograph” is not available when you are composing an SMS, but “☎” and “♥” can be entered.

*2: Pressing 8 0 switches between upper case input mode (top) and lower case input mode (bottom). You can also enter upper case text and then change it to lower case by pressing ↩.

*3: In “Double-byte input mode”, dakuten “゛” and han-dakuten “゜” are only displayed for characters with which dakuten can be used. Dakuten entered with other characters appear as spaces.

： Spaces are entered.

Symbols and Special Characters

■ Double-byte symbols

* The space at the first character is a “Double-byte space”.
* When entering the message of SMS, ♥ and ☎ appear at the end of the list.

■ Single-byte symbols

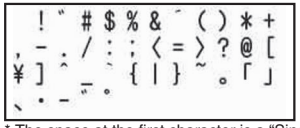

* The space at the first character is a “Single-byte space”.

■ Symbols reading for conversion

Enter and convert “きごう”, and some symbols are displayed as conversion candidates. Entering reading as follows enables conversion to the corresponding symbol:

Reading	Symbol
あっと、あっとまーく	@
いこーる	=
えん	¥
おす	☆
おなじ	々
おなじく	〃
おんぷ	♪
かける	×
かっこ	() 〔〕 [] ｛｝ 〈〉《》「」『』【】 ‘’ “” () 〈〉 [] ｛｝ 「」

Reading	Symbol
から	～
こめ	※
ころん	：
こんま	，
さんかく	△▲▽▼
しゃせん	／＼
しかく	□■◇◆
しめ	〆
たす	＋
どう	ヽゞゝゞ〃々
ばーせんと	％

Reading	Symbol
ひく	－
ひしがた	◇◆
ほし	☆★
まる	○●◎
むげん	∞
めす	♀
やじるし	→←↑↓
ゆうびん	〒
るーと	√
わる	÷

Pictographs

■ Pictographs

You can enter the pictographs by entering and converting the following readings.

	Reading
	はーと
	はーと
	しつれん・はーと
	はーと
	わーい・かお・うれしい
	いかり・かお
	がく・かお・かなしい
	やだ・かお・かなしい
	ふらふら・かお
	るんるん・おんぷ
	おんせん
	かわいい・はな
	きすまーく・きす・ちゅっ
	ぴかぴか・あたらしい・きら・ぴか
	ひらめき・きら・ぴか
	むかっ・いかり
	ばんち・いかり・て
	ばくだん・ばくはつ・いかり
	むーど・おんぷ
	ねむい・すいみん・ねる・ぐー
	びっくり・おどろき
	びっくり・おどろき
	びっくり・おどろき
	どんっ・しょうげき
	あせあせ・あせ
	あせ
	だっしゅ・にげろ
	ー
	ー
	ぐっど・やじるし・や・うえ
	ばっど・やじるし・や・した
	やじるし・うえ
	やじるし・した
	やじるし・うえ
	やじるし・した
	はれ・てんき・たいよう
	くもり・てんき・くも
	あめ・てんき・かさ

	Reading
	ゆき・てんき・ゆきだるま
	かみなり・てんき・ぴか
	たいふう・てんき・まる・ぐるぐる
	きり・てんき
	こさめ・てんき・かさ
	おひつじざ・せいざ
	おうしざ・せいざ
	ふたござ・せいざ
	かにざ・せいざ
	ししざ・せいざ
	おとめざ・せいざ
	てんびんざ・せいざ
	さそりざ・せいざ
	いてざ・せいざ
	やぎざ・せいざ
	みずがめざ・せいざ
	うおざ・せいざ
	すぽーつ・ふく
	やきゅう・すぽーつ・ぼーる
	ごるふ・すぽーつ
	てにす・すぽーつ
	さっかー・すぽーつ・ぼーる
	すきー・すぽーつ
	ばすけっとぼーる・すぽーつ・ばすけ・ばすけっと
	もーたーすぽーつ・はた・ふらっぐ・えふわん
	ぼけっとべる・ぼけべる・べる
	でんしゃ・のりもの
	ちかてつ・のりもの・めとろ
	しんかんせん・のりもの
	くるま・のりもの・せだん
	くるま・のりもの・あーるぶい
	ばす・のりもの
	ふね・のりもの
	ひこうき・のりもの
	いえ・たてもの・うち
	びる・たてもの・かいしゃ
	ゆうびんきょく・ゆうびん

	Reading
	びょういん
	ぎんこう・ばんく
	えーてぃーえむ・ばんく
	ほてる
	こんびに
	がそりんすたんど・がすすたんど・がす
	ちゅうしゃじょう・ぱーきんぐ・ぴー
	しんごう
	といれ・べんじょ
	れすとらん・しょくじ・ごはん・めし
	きっさてん・しょくじ・さてん・おちゃ
	ばー・しょくじ・さけ・かんぱい
	びーる・しょくじ・さけ・かんぱい
	ふぁーすとふーど・しょくじ・はんばーがー
	ぶてぃっく・くつ・ふく・はいひーる
	びよういん・はさみ・とこや
	からおけ・まいく・うた
	えいが・びでお
	ゆうえんち
	おんがく・きく・へっどほん
	あーと・かいが
	えんげき・しばい
	いべんと
	ちけっと・きっぷ
	きつえん・たばこ
	きんえん・たばこ
	かめら・しゃしん
	かばん・ばっぐ
	ほん
	りぼん
	ぷれぜんと・おめでとう
	ばーすでー・おめでとう・たんじょうび
	でんわ
	けいたいでんわ・けいたい・けーたい・でんわ

Continued on next page

	Reading
	めも
	てれび
	げーむ
	しーでぃー
	はーと・とらんぷ
	すぺーど・とらんぷ
	だいや・とらんぷ
	くらぶ・とらんぷ
	め・みる・みて
	みみ・きく
	て・ぐー
	て・ちょき
	て・ぱー
	あし・あしあと
	くつ
	めがね
	くるまいす
	しんげつ・つき・まる
	はんつき・つき
	はんつき・つき
	みかづき・つき
	まんげつ・つき・まる
	いぬ・どうぶつ
	ねこ・どうぶつ
	りぞーと・よっと・ふね
	くりすます・き
	かちんこ・かっと・かんとく
	ふくろ
	ぺん・めも
	ひとかげ
	いす
	よる・つき・おやすみ
	えんど・おわり
	とけい・じかん
	でんわ・でんわばんごう
	めーる・あどれす
	ふぁっくす
	あいもーど・あい
	あいもーど・あい
	めーる・てがみ・あどれす
	どこも

	Reading
	どこもぽいんと・どこも
	ゆうりょう・えん・かね
	むりょう・ただ・ふりー
	あいでぃー
	ぱすわーど・かぎ
	つぎ・りたーん
	くりあ
	さーち・しらべる・むしめがね
	にゅー・にゅう・あたらしい
	はた・ふらっぐ・いち
	ふりーだいやる
	しゃーぷ
	いち・すうじ
	に・すうじ
	さん・すうじ
	し・よん・すうじ
	ご・すうじ
	ろく・すうじ
	なな・しち・すうじ
	はち・すうじ
	きゅう・く・すうじ
	ぜろ・れい・すうじ
	けってい・おーけー・おっけー
	あいあぶり・あぶり
	あいあぶり・あぶり
	てぃーしゃつ・しゃつ・ふく
	さいふ・かね・おかね
	けしょう・くちべに
	じーんず・ふく・ずぼん
	すのぼ・すのーぼーど・すぼーつ
	ちゃべる・べる・かね
	どあ・とびら
	どるぶくろ・かね・おかね
	ぱそこん・ぴーしー
	らぶれたー・らぶめーる・てがみ・めーる
	れんち・しゅうり
	えんぴつ・めも
	おうかん・かんむり・おう
	ゆびわ
	すなどけい・じかん

	Reading
	じてんしゃ・のりもの・ちゃり
	ゆのみ・おちゃ・ちゃ
	うでどけい・とけい・じかん
	かんがえる・かお・うーむ
	ほっ・かお
	ひやあせ・かお
	ひやあせ・かお
	いかり・かお・ぷー
	ぼけー・かお
	はーと・かお
	おーけー・て・おっけー
	あかんべ・かお・べー
	うぃんく・かお
	うれしい・かお・にこ
	がまん・かお
	ねこ・どうぶつ
	なみだ・かお・なき
	なみだ・かお・なき
	えぬじー・だめ
	くりっぷ・てんぷ
	はしるひと・だっしゅ・はしる・にげる
	まるひ・ひみつ
	りさいくる
	きけん・ちゅうい
	きんし
	くうしつ・くうせき・くうしゃ・あき
	ごうかく
	まんしつ・まんせき・まんしゃ・いっぱい
	やじるし・や
	やじるし・や
	がっこう
	なみ・うぇーぶ・うみ
	ふじさん・やま
	くろーばー・はな
	さくらんぼ・はな・ちぇりー
	ちゅーりっぷ・はな
	ばなな・たべもの
	りんご・たべもの
	め・はな

	Reading
	もみじ・はな
	さくら・はな
	おにぎり・おむすび・たべもの
	しょーとけーき・けーき・たべもの
	とっくり・おちょこ・さけ・かんぱい
	どんぶり・ごはん・たべもの・しょくじ

	Reading
	ぱん・しょくじ・たべもの
	かたつむり・どうぶつ
	ひよこ・どうぶつ
	ぺんぎん・どうぶつ
	さかな・どうぶつ
	うまい・たべる・かお
	にやり・かお・わらい

	Reading
	うま・どうぶつ・けいば
	ぶた・どうぶつ
	わいんぐらす・わいん・さけ・かんぱい
	げっそり・さけび・むんく・かお

* Pictographs with no reading can be entered only by Pictograph.

■Pictograph idioms

In predicted conversion mode, some readings convert to pictograph idioms combining multiple pictographs.

Reading	Idiom
おたんじょうびおめでとう／はっぴーばーすでー	
るんるん	
わーい	
るるるー	
きゃぴきゃぴ	
めろめろ	
わくわく	
はっぴー	
うきうき	
らぶらぶ	
どきどき	
やったー	
だいすき	
わおっ	
がっかり	
しくしく	
しょんぼり	
ぶんぶん	
がーん	
きらい	
しょっく	
つかれた	
すやすや	
おはよう	
こんにちは	
はろー	
こんばんは	
おやすみ	
ばいばい	

Reading	Idiom
たのしみ	
おつかれさま	
ありがとう	
ごめんね	
がんばろう	
ひさしぶり	
げんき？	
にんまり	
らぶりー	
すてき	
うれしい	
かなしい	
おいしい	
はやく	
いそいでいる	
ゆっくり	
ほんとうにはやく	
もうだっしゅ	
つうきん	
しはつ	
しゅうでん	
まんいんでんしゃ	
どらいぶ	
じゅうたい	
がすけつ	
かえる	
だんしこう	
じょしこう	
だいがく	
しょうがっこう	

Continued on next page

Reading	Idiom
てすとべんきょう	
てすとはんい	→ ←
もうべんきょうちゅう	中
がっこうがやすみ	
しりょくけんさ	C ←
ざんぎょう	
かえれない	
じゅうようしょるい	
きゅうりょうかっと	
のんびり	Y
きがえる	
ひとりぐらし	
やちん	
ろくが	
ゆめのなか	zzz zzz
ばくすい	zzz
おふろにはいる	
すかっ	
さいこう	
さいあく	
ほんとうにつらい	
おこったぞ	
おこったぞ	
げきど	
きれそう	
りょうかい	
らじゃー	
あそぼう	
だいじょうぶ	
よろしく	
おねがい	
おっけー	
ほのぼの	
わかった	
あそびにいく	
よっぱらう	
ばかんす	
ぱちんこ	
でぃーじぇー	
れすとらん	

Reading	Idiom
えすて	
なんぱ	
らいぶはうす	
ごうこん	
しんかんこんぱ	
いけめん	
いけめん	
ひとめぼれ	
としした	
としうえ	
こいのよかん	
えんきょりれんあい	
ややもち	
ふたまた	
えんをきる	
けっこん	
なやみちゅう	中
おんしんふつう	
かっぷる	
でーと	
ちこく	
まくどなるど	
てをつなぐ	
はなび	
かんぱい	
くりすます	
えきまえ	
とない	
いどうじかん	
くやしい	
うるさい	
びっくり	
うらやましい	
はれめ	
まじで？	
さみしい	
たいへん	
はらいた	
なつばて	夏 ○
ふらふら	

Reading	Idiom
ごうきゅう	
のみすぎ	
めにくま	
めーるそうしん	
うれしめーる	
うれしめーる	
らぶめーる	
はやめーる	
りれーめーる	
しーくれっとめーる	
あつい	
ひじょうにあつい	
おおゆき	
さむい	
ありがとう	

Reading	Idiom
ごめんなさい	
きいて	
おしえて	
みみよりじょうほう	
おはよう	
よろしく	
ふぁいと	
こんばんにゃ	
こんばんわん	
わんぎり	
ながでんわ	
こくさいでんわ	
ときがたつ	
おみやげ	

NOTE

- When you send pictographs to the mobile phone other than i-mode terminal or a PC, they may not be displayed correctly. Pictographs may not be displayed correctly depending on the model of the other party even when it is the i-mode terminal.

Face Marks

■Face marks reading

You can enter the face marks by entering and converting the following readings. Also, all the following marks are displayed as conversion candidates when you enter “かお” or “かおもじ” and press ch (Convert) to convert.

Reading	Face mark
ありがと(う)	m(_)m
ばんざい	＼(^o^)／
わーい	(^o^)
	(^∀^)
	(*^□^*)
	o(^∇^o)(o^∇^)o
	(≧▼≦)
おーい	(^o^)／
ぶい	(^^)v
ぎゃはは	(^Q^)/^
あは	(o^o^o)
	^□^;
にこ	(^-^)
	(*^^*)
	(n‘∀‘n)
	(n^∀^n)
	(’∀’●)
	(●^-^●)
	(o^∇^o)
ちゅ	(^3^)/
	(^ε^)-☆Chu!!
わくわく	o(^-^)o
ういんく	(^_-)
さよなら	(^^)/~
	(_^^)/~~
がんば	ρ(^^)q
ね	(^^)b
ぽりぽり	(^^)ゞ
ひやあせ	(^o^;
あせあせ	(;^^)A
びくっ	(*_*)
どき	((◎-◎;))
え	(@_@;)
めがてん	(▪▪;)

Reading	Face mark
はてな	(▪▪?)
きらーん	(☆。☆)
しくしく	(T_T)
さよなら	(T_T)/~
いたた	(>_<)
	(><)
えーん	(;_;)
	(ToT)
	Ω Å Ω;
	(ノдく。)゜。
	°。(p>Λ<q)。°°
	(T ω ヽ)
なぜ	(?_?)
がーん	(￣□￣;)!!
	(￣;)
	∑(￣□□￣;)
えへん	(￣^￣)
む	(－＿＿－メ)
	o(￣^￣ o)
いかり	(`ー´)
むか	(;-_-+
	(`へ´)
	(ﾒ^^;)
こそこそ	(▪.▪|
じーっ	(-_-)
きこえない	|(-_-)|
こまったもんだ	(￣～￣)ξ
ぶたー	ｿo^(
こあら	(－Q－)
いっぷく	(^Y^)y~
	(^_^)y-~~~
ほし	☆彡
ねてる	(-_-)zz
ねむい	＼(^o^)／

Reading	Face mark
ねむい	(ρ_-)ノ
めも	φ(..)
うん	(°_°)(。_。)
かんぱい	(^^)／▽☆▽＼(^^)
ども	＼(^_^)(^_^)／
がまん	(;´∩`)
こんにちは	ヾ(=^▽^=)ノ
	(▪∀▪)ノ
	(●´∀`●)ノ
いいな	(o)ω(o)
	(@°▽°@)
	(m’□’m)
うーん	(￣～￣;)
てれる	(／_＼;)
	(*/ω＼*)
	(//∀//)
	(≧ω≦)
しあわせ	°+。(*´▽`)。+°
	ヽ(´▽`)/
	(*´∀`*)
なかよし	^ー^)人(^ー^
ごめん	(*ｃ*)
いじいじ	φ(.. ;)
いじわる	Ψ(`∀´#)
よろしく	☆ヽ(▽´ *)
こまった	><;
やだ	(○>_<)
へこむ	(´ `)
	(´ω`)
びっくり	(o д O;)
	w(°o°)w
だっしゅ	ε=ε=ε=┌(▪_▪)┘

Common Phrases

Category		Common Phrase			
①	Internet	①	.co.jp	⑥	.go.jp
		②	.ne.jp	⑦	@docomo.ne.jp
		③	.com	⑧	http://
		④	.or.jp	⑨	https://
		⑤	.ac.jp	⓪	www.
②	Emoticon1	①	^^;	⑥	(>_<)
		②	(^.^)	⑦	(^^ゞ
		③	>^_^<	⑧	(@_@)
		④	(;_;)	⑨	m(__)m
		⑤	(+_+)	⓪	(^−^)ノ~~
③	Emoticon2	①	o(^ワ^)o	⑥	*￣0￣)ノ
		②	(o^−')b	⑦	(￣^￣)y−~~
		③	＼(~δ~)／	⑧	(o｀∀´o)
		④	(ρ_—)o	⑨	(｀□´)
		⑤	(￣▽￣)v	⓪	(¥△¥;)
④	Emoticon3	①	(≧εε≦)	⑥	(^・^)Chu♪
		②	(≧▽≦)ゞ	⑦	ι(◎д◎)ノヾ
		③	(;□;)!!	⑧	ε=┏(;￣▽￣)┛
		④	(u_u)o〃	⑨	♪d(⌒O⌒)b♪
		⑤	=^ェ^=	⓪	へ(^−^)乂(^o^)ノ
⑤	Greetings	①	おはようございます	⑥	お疲れさまでした
		②	おやすみなさい	⑦	お世話になっております
		③	昨日は、どうもありがとうございました	⑧	こんにちは
		④	行ってきます	⑨	こんばんは
		⑤	いってらっしゃい	⓪	よろしくお願い致します
⑥	Business	①	直行します	⑥	本日の会議は中止となりました
		②	直帰します	⑦	出欠をご連絡ください
		③	休暇をとります	⑧	次の指示を待ってください
		④	半休します	⑨	携帯の電源を切ります
		⑤	電車遅延のため、遅れます	⓪	メールで連絡してください
⑦	Private	①	遊びに行こう	⑥	先に行きます
		②	飲みにいきませんか？	⑦	先に帰ります
		③	遅れます	⑧	時間です
		④	変更します	⑨	何してるの？
		⑤	中止です	⓪	どこにいるの？
⑧	Reply	①	OKです	⑥	今忙しい
		②	NGです	⑦	後で連絡を入れます
		③	ありがとう	⑧	保留です
		④	ごめんなさい	⑨	キャンセルです
		⑤	待ってて！	⓪	時間がありません
⑨	Original				

Multi Access Combination Patterns

Another communication / Current condition	Voice call		Videophone		Using i-mode*1	Using i-αppli	i-mode mail	
	Dialing	Incoming call	Dialing	Incoming call			Send	Receive
During a voice call	△*2	△*3	×	△*4	○	×	○	○
During a videophone call	×	△*4	—	△*4	×	×	×	×*8
During i-mode*1	○	○	△*5	△*6	—	○	○	○
During packet communication with a PC	○	○	×	×	×	△*7	×	×*8
During 64K data communication	×	△*4	×	△*4	×	×	×	×*8

Another communication / Current condition	SMS		Packet communication		64K data communication	
	Send	Receive	Send	Receive	Send	Receive
During a voice call	○	○	○	○	×	△*4
During a videophone call	×	○	×	×*9	×	△*4
During i-mode*1	○	○	×	×	×	×
During packet communication with a PC	○	○	—	—	×	×
During 64K data communication	○	○	×	×	×	△*4

○: Can be activated. ×: Cannot be activated. △: Can be activated depending on situation.
—: Functionally incompatible.

*1: Includes i-Channel site view and communication via Full Browser or ToruCa.
*2: If you have subscribed to “Call Waiting”, you can hold the current voice call to make another call.
*3: If you have subscribed to “Call Waiting”, you can hold the current voice call to answer an incoming call. If you have subscribed to “Voice Mail” or “Call Forwarding”, you can end the current communication and then answer a new incoming communication. →p.317
*4: If you have subscribed to “Call Waiting”, “Voice Mail” or “Call Forwarding”, you can end the current communication and then answer a new incoming communication. →p.317
*5: Make a videophone call after disconnecting the current i-mode.
*6: If “V-phone while packet” is set to “V-phone priority”, answering an incoming videophone call disconnects i-mode communication.
*7: You cannot communicate via i-αppli software.
*8: An i-mode mail, MessageR or MessageF is not received, but is stored in the i-mode Center. You can receive a stored i-mode message, MessageR or MessageF by performing “Check new messages” after the current communication ends.
*9: It is logged as a missed call.

Multitask Combination Patterns

Current status \ Function	Mail	i-mode menu/ i-Channel list	i-αppli	Settings	Data Box	LifeKit	Service
Mail group activates	○*2	○	○	○*8	○	○*12	○*15
i-mode group activates	○	×	○	○*8	○	○*12	○*15
i-αppli group activates	○	○*5	×	○*8	○*11	○*12	○*15
Settings group activates	○	○	○	×	○	○*12	×
Tools group activates*1	○	○	○	○*8	×	×	○*15
1Seg/Music group	○*3	○*6	○*7	○*8	○*6	○*8	○*15
During a voice call	○*4	○*4	×	×*4*9	×	×*4*13	○*4*15 *16*17
During a videophone call	×	×	×	×	×	×*4*14	×
During packet communication with a PC	○	○*22	○	○*8	○	○*12	○*15
During 64K data communication	○	○*22	×	×*9*10	×	○*8	○*15*16 *17

Current status \ Function	Phonebook	Own data	MUSIC	1Seg	Osaifu-Keitai	My selection
Mail group activates	○*18	○	○	○	○*8	○
i-mode group activates	○*18	○	○	○	○*8	○
i-αppli group activates	○*18	○	○	○	○*8	○
Settings group activates	○*18	○	○	○	○*8	○
Tools group activates*1	×	×	○*8	○*8	○*8	○
1Seg/Music group	○*18	○	×	×	○*8	○
During a voice call	○*4*18	○*4*19	×	×*4*21	×*4*20	○*4
During a videophone call	×	×	×	×	×	×
During packet communication with a PC	○*18	○	×	×*21	○*8	○
During 64K data communication	○*18	○*19	×	×*21	×*20	○

○: Can be activated. ×: Cannot be activated.

*1 : The function is unavailable when “Receive Ir data”, “microSD manager” or “UIM operation” is selected.

*2 : “Compose message” and “Compose SMS” cannot be used simultaneously.

*3 : Read out mail function is not available during music playback. In addition, playing sounds such as melodies attached to files is not possible.

*4 : It is not available while switching between a voice call and a videophone call.

*5 : i-motion, Chaku-Uta-Full® and Music&Video Channel cannot be downloaded.

*6 : Playing sounds such as melodies and i-motion is not possible during playback of Music Player.

*7 : “1Seg”/“Music&Video Channel”/“Music Player” is paused. May not be available during 1Seg recording.

*8 : Some functions are unavailable.

*9 : Only “Pause dial”, “IC card lock setting” and “Keypad sound” are available.

*10 : Only “Ntfy switch-mode” is available.

*11 : Editing, storing and copying still images to microSD card, editing, forwarding and copying/moving movies to FOMA terminal⇔microSD card, moving Chaku-Uta-Full® to FOMA terminal⇔microSD card are not available.

*12 : “Receive Ir data”, “microSD manager”, “Voice announce” and “UIM operation” are unavailable.

*13 : Only “Bar code reader”, “Camera”, “Data security serv.”, “Schedule”, “To Do list”, “Text memo”, “Calculator”, “Voice memo”, “My Profile”, “Text reader” and “Dictionary” are available. However, only “Photo mode” and “Continuous mode” are available in “Camera”.

Continued on next page

*14 : “Voice memo” is activated only by pressing (▼メモ) for 1 second or longer. However, it is not available while switching between a voice call and a videophone call.
*15 : “Chaku-moji” is unavailable. Some functions such as “Phonebook 2in1 setting” are not available depending on the 2in1 setting.
*16 : “Voice Mail” messages cannot be played. The Service Numbers (p.317) and special number (p.324) cannot be dialed (but can be dialed using USSD).
*17 : “Caller ID Notification” and “2in1 setting” is unavailable.
*18 : “Restrictions” is unavailable.
*19 : “Common phrases”, “Own dictionary” and “Download dictionary” are unavailable.
*20 : Only “ToruCa”, “IC card lock setting” and “Search by i-mode” are available.
*21 : Only “Booking program list” and “Timer recording list” are available.
*22 : i-mode communications are not available.

Services Available for the FOMA Terminal

Available service	Phone number
Directory assistance (pay: service charge + call charge) * Unlisted phone numbers cannot be given.	(No area code) 104
Telegram (pay: telegram charge)	(No area code) 115
Time (pay)	(No area code) 117
Weather forecast (pay)	Area code of an area you want to know + 177
Emergency call to the police	(No area code) 110
Emergency call for a fire engine or an ambulance	(No area code) 119
Emergency call for help with maritime accidents	(No area code) 118
Emergency Message Recording System (pay)	(No area code) 171
Collect call (pay: service charge + call charge)	(No area code) 106

NOTE

- When you use the Collect Call Service (106), the receiver will be billed for the call charge plus an additional service charge of 90 yen (94.5 yen tax included) for each call. (as of May, 2008)
- When you use the Directory Assistance Service (104), you will be billed for the call charge plus an additional service charge of 100 yen (105 yen tax included). A free service is available for persons with impaired vision or disability of the arms or hands. For further details, call 116 (NTT inquiries) from ordinary phones. (as of May, 2008)
- This FOMA terminal supports “緊急通報位置通知” (Emergency Location Report). When calling 110, 118 or 119 from the FOMA terminal, your current location (location information) is automatically notified to a concerned organization such as police office.
  The location information may not be correctly sent depending on your current location or the condition of the signal reception.
  If you dialed with “184” attached not to notify the caller information, your location information and caller ID is not notified. However, when the concerned organization judges the information is necessary for protection of a human life, your location information and caller ID may be acquired. Where and when to start the support of “緊急通報位置通知” (Emergency Location Report), differ in every local organization.
- When calling 110, 119 or 118 from the FOMA terminal, first inform that you are calling from a mobile phone, give your number, and state your location clearly so that the police or fire department can call you back. Also, do not move around when making the call. Do not turn off the FOMA terminal immediately after ending the call, but leave it turned on for another ten minutes or so, so that you can receive a call.
- Depending on the area you are calling from, you may not be connected with the nearest police or fire department. In that case, call again from a public phone or land line.
- If you are using a “Call Forwarding” service from a general phone and if a mobile phone is set as the forwarding number, depending on the settings of the general phone or mobile phone, the caller may simply hear the ring tone even when the mobile phone is busy with another call, out of range or turned off.
- Other services such as 116 (NTT inquiries), Dial Q2, message (Dengon) Dial, and Credit Call Service are not available (However, Credit Call Service calls can be made from public or general subscriber phones to the FOMA terminals).

Options and Accessories

By combining various options and accessories sold separately, your FOMA terminal can support a wide range of applications to meet both your personal and professional needs. Note that some products may not be available depending on the area you are in. For more information, contact a DOCOMO shop or service counter.
For details of options and accessories, refer to relevant User's Manual.

- Earphone/Microphone with Switch P001*1/P002*1
- Stereo Earphone Set P001*1
- Flat-plug Earphone/Microphone with Switch P01/P02*2
- Flat-plug Stereo Earphone Set P01*2
- Bone conduction microphone/receiver 01*2
- FOMA USB Cable*3
- FOMA AC Adapter 01/02*4
- FOMA Dry Battery Adapter 01
- Carry Case S 01
- FOMA USB Cable with Charge Function 01/02*3
- FOMA Portable Charging Adapter 01
- In-Car Hands-Free Kit 01*5
- FOMA In-Car Hands-Free Cable 01
- FOMA Indoor Booster Antenna*6
- FOMA Indoor Booster Antenna (Stand Type)*6
- In-Car Holder 01*7
- FOMA AC Adapter 01 for Global Use*4
- FOMA DC Adapter 01/02
- Desktop Holder SO11
- Battery Pack SO03
- Back Cover SO12
- Earphone Plug Adapter for External Connector Terminal 01
- Earphone Plug Adapter P001
- Style-Up® Panel SO03

*1: To connect to FOMA SO706i, the Earphone Plug Adapter P001 and Earphone Plug Adapter 01 for External connector terminal 01 are required.
*2: To connect to FOMA SO706i, the Earphone Plug Adapter for External connector terminal is required.
*3: USB HUB may not function correctly.
*4: Charging with the AC adapter→pp.41, 42
*5: To connect/charge FOMA SO706i with USB, the FOMA In-car Hands-free Cable 01 is required.
*6: Use in Japan only.
*7: To attach FOMA SO706i to the In-Car Holder, attach to "5th position" shown as ② on the list of "In-Car Holder 01 Manual".

Movie Playing Software

- To play a movie (MP4-formatted file) on PC, install QuickTime Player (free) ver. 6.4 or later (or ver. 6.3 + 3GPP) of Apple Inc.
- Download QuickTime from the following website:
  http://www.apple.com/jp/quicktime/download/
  - To download, you need PC to access Internet. You are charged for the Internet communication fee to download the software.
  - View the website above for more details on the environment, how to download or how to operate.

Malfunction Checklist

- Check first whether the software update is required. If it is required, update the software. →p.377
- In the following table, problems are written in red, and points to check and reference pages are written in black.

The FOMA terminal does not turn on (The FOMA terminal cannot be used)

- Is the battery pack properly attached? →p.41
- Has the battery run out? →p.44

The animation shown on the right appears and an alarm tone sounds

- The battery has run out. Recharge the battery. →pp.41, 44

The " 圏外 " icon appears and I cannot make a call

- Are you out of range or is the reception poor? →p.44

Cannot access functions quickly by pressing the keys pre-assigned to the menu numbers (p.340)

- Set the Theme of the main menu to "Standard Menu". →p.33

I cannot make a call by pressing the dial keys

- Is Original lock for "Keypad dial" under "Dial/sending mail" set? →p.109
- Is Keypad lock set? →p.110
- Is Restrict dialing set? →p.112

I dialed a number and initiated a call, but all I hear is a busy tone

- Did you start dialing before hearing the dial tone? →p.48
- Did you forget to dial the area code? →p.48
- Is "Please wait" displayed?

I cannot receive calls. Or I cannot hear the ring tone.

- Are any of the following functions set?
  Restrictions →p.112
  - Call rejection
  - Call acceptation
  - Call forwarding
  - Voice Mail

  Ring time(sec.) →p.114
  - Set mute seconds

  Reject unknown →p.114
  Call setting w/o ID →p.114
  - Unknown: Reject
  - Payphone: Reject
  - User unset: Reject
- Is the FOMA terminal in Manner mode? →p.86
- Is the FOMA terminal in Public mode (Driving mode)? →p.62
- Is Original lock for "Incoming call" under "Incoming/Mail disp." set? →p.109
- Is Self mode set? →p.115
- Is the start time of Voice Mail or Call Forwarding service set to "0 second"? →pp.312, 315
- Is Caller ID Request set to Activate? →p.316
- Is mova valid with the Dual Network service? →p.316
- Is the ring volume set to "Silent"? →p.61
- Is "0 second" set as the ring time for Record message? →p.65

Mail ring tones and alarm tones sound but no ring tone sounds when receiving a call

- Is "Set mute seconds" under "Ring time(sec.)" set to longer time (e.g. 99 seconds)? Set "Set mute seconds" to shorter time. →p.114

The records of Dialed calls/Redial, Sent address disappear automatically

- Is "Restrict dialing" under "Restrictions" set? →p.112

The ring tone sounding when receiving a voice call or videophone call is different from what I selected

- When the ring tone settings are duplicated, the priority applies. →p.83

The image appearing when receiving a voice call or videophone call is different from what I selected

- When the image settings are duplicated, the priority applies. →p.83

When receiving a voice call or videophone call, the color or pattern of the illumination is different from what I set up

- When the illumination settings are duplicated, the priority sequence will be assigned. →p.93

It takes long to display or play a movie/i-motion or a Chaku-Uta- Full®

- Is the movie/i-motion or the Chaku-Uta-Full® saved in "Movable contents" folder?
  It may take long to display or play the data saved in the "Movable contents" folder.

Cannot copy or move a movie/i-motion or a Chaku-Uta-Full® to microSD card

- Is the Chaku-Uta-Full® saved partially? →p.273
- Is the replay restriction (number of times, period, time limit) of the movie/i-motion or the Chaku-Uta-Full® invalid? →pp.226, 273

A PDF document is not properly displayed

- A PDF data may not be properly displayed if it contains formats unsupported by the PDF viewer or complicated designs.

It takes long to display a PDF document

- It may take long to display a large-sized PDF document.

Cannot copy a PDF document to the FOMA terminal

- Does the PDF file size exceed 2M bytes? →p.262

Cannot copy a PDF document to a microSD card

- Was the PDF document downloaded by page? →p.262

A document is not properly displayed

- A document may not be properly displayed if it contains formats unsupported by Document viewer or complicated designs.

It takes time to display a document

- It may take long to display a large-sized document.

The screen or ring tone for an incoming call or message is the default setting

- Depending on the combination of receiving screen and ring tone or the priority sequence, either the receiving screen or ring tone may be restored to default.
- If setting i-motion or music as ring tone after setting a Flash movie as receiving screen, a pre-installed image may appear.

The ring tone sounding when receiving a message is different from what I selected for the mail address

- When the ring tone settings are duplicated, the priority applies. →p.83
- If you have received two or more messages, the tone set for the last received mail address sounds. →p.83
- If the format of the sender's mail address is "(phone number) @docomo.ne.jp", save only that phone number as a mail address and set a distinctive ring tone for that mail address in Select ring tone under Mail (recv.). →p.77
- Is the sender's mail address (a mail address shown on the received mail details screen) stored in the phonebook correctly and did you set a distinctive ring tone for that mail address in Select ring tone under Mail (recv.)? →p.77
- If you receive an SMS, a distinctive ring tone set in Mail (recv.) for the phone number in the phonebook sounds. →p.77

An icon appears instead of image, i-motion, music or Music&Video Channel

- The following icons indicate that the image, i-motion, music or Music&Video Channel cannot be selected for the function. Select another data. →pp.225, 233, 270, 273

Cannot view 1Seg

- Out of digital terrestrial TV service area or in a weak signal location?
- Is a FOMA card (UIM) inserted?
- Are channels set? →p.209

The color of the illumination flashing when receiving a mail is different from what I selected for the mail address

- When the illumination settings are duplicated, the priority applies. →p.93
- If you receive two or more messages, the illumination flashes following the settings of the illumination under Mail (recv.) that is set to the last received mail address. →p.92
- If the format of the sender's mail address is "(phone number) @docomo.ne.jp", save only that phone number as a mail address and set distinctive illumination for that mail address in illumination under Mail (recv.). →p.77
- Is the sender's mail address (a mail address shown on the received mail details screen) stored in the phonebook correctly and did you set illumination for that mail address in illumination under Mail (recv.)? →p.77
- If you receive an SMS, distinctive illumination set in illumination under Mail (recv.) for the phone number in the phonebook flashes. →p.77

Cannot charge the FOMA terminal (the center illumination of the FOMA terminal does not light)

- Is the battery pack properly attached to the FOMA terminal? →p.41
- Is the adapter firmly plugged into the electrical socket or cigarette lighter socket? →p.42
- Are the adapter and the FOMA terminal correctly connected (is the AC adapter firmly connected to the FOMA terminal or the desktop holder)?

Battery life is short

- Is the battery pack at the end of it's life? The lifespan of the battery pack may be shortened depending on usage environment. →p.41
- Battery life will depend on how the FOMA terminal is used. →p.42

The key does not sound when I press it

- Is "Keypad sound" set to "OFF"? →p.85
- Is the FOMA terminal in Manner mode? →p.86

I cannot use Any key answer to answer a voice call or videophone call

- Is "Answer setting" set to "Quick silent" or "OFF"? →p.60
- You cannot use Any key answer to answer a videophone call.

The other party's voice is difficult to hear during a call

- Is the earpiece speaker properly placed against your ear? →p.24
- Is anything (e.g. a sticker) obstructing the earpiece speaker?
- Is anything obstructing the speaker in handsfree mode?
- Did you change the "Volume" setting?
  Change the setting so that you can hear the other party clearly. →p.61

Continued on next page

The other party's voice is too loud during a call

- Did you change the "Volume" setting?
  Change the setting so that you can hear the other party clearly. →p.61

Pressing the side key does not operate the folded FOMA terminal

- Is Keypad lock set? →p.110
- Is "Side key guard" set to "ON"? →p.112

Pressing (▼メモ) does not check missed calls, etc. when the FOMA terminal is folded
Pressing and holding down (▼メモ) for 1 second or longer does not launch the Music Player

- Is "Info notice setting" set to "OFF"? →p.64
- Is Keypad lock set? →p.110
- Is "Side key guard" set to "ON"? →p.112

The display is hard to see

- Is Brightness under Backlight set to "Dark"? →p.90
- Is "Shield view" set to "ON"? →p.90

The display light of the display or keypad does not turn on

- Is Lighting under Backlight set to "OFF"? →p.90
- Press and hold 5 for 1 second or longer to turn the backlight on or off.
  Note that pressing and holding 5 for 1 second or longer will turn off the backlight e.g. while composing a message.

Receiving an incoming call immediately after turning on the power displays the phone number but does not display the name stored in the phonebook

- The FOMA terminal may be reading the FOMA card (UIM) immediately after turning on the power. The phonebook function may not be available then.

It takes some time for the power to turn on after pressing and holding for 1 second or longer

- Data checking may take time (e.g. if the phonebook is full of data). →p.76

Nothing appears on the display

- Is the FOMA terminal set to Power saver mode? Press any key to cancel Power saver mode. →p.90

The FOMA terminal does not perform incoming call operations (ring tone sounding, vibrator, illumination flashing) when receiving a call

- The FOMA terminal does not perform incoming call operations (ring tone sounding, vibrator, illumination flashing) until the set time is reached, when receiving a call from a phone number not stored in the phonebook or from a caller who does not notify his/her caller ID and if "Set mute seconds" under "Ring time(sec.)" is set to "ON". →p.114

Receiving an SMS does not display the sender's name stored in the phonebook

- Did you correctly store the sender's phone number on the phone number line ( ) of the phonebook? →p.70

Mails are not automatically filtered

- If the sender's mail address is "(Phone number)@docomo.ne.jp", save only the phone number in the Auto-sort settings. →p.174
- If the sender's mail address is not "(Phone number)@docomo.ne.jp", save the entire address including the domain in the Auto-sort settings. →p.174

A message is not automatically received

- If you have set "Receive option setting" to "ON", set it to "OFF". →pp.164, 178

Cannot install the FOMA communication setting file (driver) or make data communication

- Is the USB mode setting set to "microSD mode" or "MTP mode"? Set it to "Communication mode". →p.251

Data transmission is not performed

- Do you use USB HUB? USB HUB may not function correctly.

PC cannot be connected in MTP mode.

- The microSD card which created on the other FOMA terminal is not available.

i-mode, i-mode mail, i-αppli and i-Channel cannot be connected

- Is "Host selection" set to something other than "i-mode"? →p.149
- If you had started using the FOMA terminal before you subscribed to i-mode, turn the FOMA terminal off and then turn it back on.

The FOMA terminal does not perform receiving message operations (ring tone sounding, vibrator, illumination flashing) when receiving a message

- Is "Mail/Msg. ring time" set to "OFF"? →p.85
- Is Original lock for "Disp. recv. mail/msg." under "Incoming/Mail disp." set? →p.109
- Is "Receiving setting" set to "Operation preferred"? →p.178

A sent message is not saved to the Outbox

- Is "Sort all" set to the folder of mail-linked i-αppli? Highlight the folder of mail-linked i-αppli then select "Open folder" from the function menu to confirm the setting. →pp.171, 173

A received message is not saved to the Inbox, and " (white)" does not disappear

- Does " " appear on the folder of mail-linked i-αppli in the Inbox? Or is "Sort all" set to the folder of mail-linked i-αppli?
  Highlight the folder of mail-linked i-αppli then select "Open folder" from the function menu to confirm the setting. →pp.171, 173

I was disconnected while sending a message, then received an SMS
A message appears when I retry

- SMS interrupts communication and notifies you that a large amount of data is being transferred within a given time. Follow the contents of SMS and the displayed message.

Images taken with camera are flickered

- When you take pictures indoors, flickering may appear due to the effect of fluorescent lighting, etc. Changing the “Flicker” setting may suppress flickering. →p.123

Still images or movies shot with camera look too bright

- You may shoot them outside or in a bright place with “Flicker” set to “Mode 1(50Hz)” or “Mode 2(60Hz)”. Restore the “Flicker” setting to “Auto”. →p.123

Still images or movies look blurred

- Move the lens selector switch of the lens to the ● position (standard lens) for normal shooting or to the position (macro lens) to switch to the close-up mode for close-up shooting. →p.118
- Set a mode suited to the scene being shot. →p.122

When I attempt to display the image or play for demonstration or see a preview, “ ” appears

- “ ” may appear when the image data is corrupted.

The terminal operates slowly when any keypads are pressed

- It may occur if a large amount of data is stored on the FOMA terminal or if you exchange large data by using the microSD reader/writer function.

Chance capture shooting shortens the shooting time

- Chance capture shooting saves control data together with movie data, which may shorten the shooting time.

Chokkan game cannot be used

- Is Original lock set to Camera? →p.106

■For overseas use

“ ” or “select net” does not disappear from the screen, and international roaming service cannot be used

- Are you out of international roaming service area or is the reception poor?
- See the international service guide such as “Mobile Phone User’s Guide [World Services]” to check if the area or operator is available.
- Turn off the FOMA terminal then turn it back on the first time you use the service after you move from Japan to overseas.
- Launch “NW search mode” to search for a compatible operator. →p.336

A voice call or videophone call cannot be received

- Is “Bar incoming when roam” set to “Activate”? →p.338
- Is “V-phone while packet” set to something other than “V-phone priority”? →p.67
- Videophone is not available while using GSM/GPRS network.

The other party’s caller ID is not notified.
The notified caller ID is not the other party’s
The FOMA terminal does not perform operations using phonebook data or Caller ID Notification

- If the used network or operator does not notify the caller ID, the caller ID does not appear on the FOMA terminal screen even when the caller ID is notified. Depending on the used network or operator, the notified caller ID may be different from the other party’s.

If Any Error Message Appears

- In the following table, error messages are written in red, and explanation/solution and reference pages are written in black.
- Error messages are described in alphabetical and Kana order.
- Numbers in parentheses are codes used by the i-mode Center as separators between transmitted errors.

"ACMmax restriction cannot call"

- This message appears when the accumulated call charges exceed the upper limit set in a FOMA card (UIM) and a call cannot be made. Perform "Reset total cost" to release the restriction. →p.294

"Activating BOX lock Cannot download"

- There is a lock on the inbox and outbox as a whole, or on folders using mail-linked i-αppli, so mail-linked i-αppli cannot be downloaded or upgraded. To download or upgrade the mail-linked i-αppli, release the Mail box lock. →p.112

"Activating BOX lock Unable to delete"

- There is a lock on the inbox and outbox as a whole, or on folders using mail-linked i-αppli, so the mail-linked i-αppli and the folders using them cannot be deleted. To delete the mail-linked i-αppli and the folders using them, release the Mail box lock.
  If you delete only the mail-linked i-αppli, a message will be displayed asking whether to delete the corresponding mail folders dedicated to that i-αppli. Select "NO". →p.112

"Activating folder lock Cannot download"

- See "Activating BOX lock Cannot download" (p.368) for the explanation and solution.

"Activating folder lock Unable to delete"

- See "Activating BOX lock Unable to delete" (p.368) for the explanation and solution.

"Activating restrict dialing"

- This message appears when you attempt a prohibited operation while Restrict dialing is set. →p.112

"Address is not valid (451)"

- Displayed when the mail has not been sent to the specified address correctly. →p.156

"Attached file is deleted"

- This message appears when an i-mode message received that you attempt to quote to send a reply has any file attached. It is also displayed if you attempt to forward an i-mode mail that has a file attached that is prohibited from being attached to mail or output from the FOMA terminal. The attached file is deleted when you press ■.

"Authentication canceled (401)"

- This message appears when the Cancel button is pressed on the Authentication screen.

"Authentication type is not supported (401)"

- This message appears when authentication fails. Press ■ to return to the original page.

"Cannot dial by Number B abroad Dial by Number A"

- This message appears when the 2in1 mode is set to B mode and you attempted to make a call while overseas. Select OFF for "Caller ID Notification" to make calls without caller ID with Number A.

"Cannot reset by this Ext. IC card"

- This message appears when you put the FeliCa mark close to an unregistered contactless IC card during user authentication with the IC card authentication function. →p.111

"Cannot save attached file"

- This message appears when a mail is received with an attached file that cannot be registered for Receive Ir data, cable connection communication or copying from microSD card.

"Cannot set this schedule"

- This message appears when you have attempted to use "Copy & add this" on a schedule item with the same date and time as an existing item, or if you have received such a schedule item via infrared or iC communication or cable connection.

"Caution! This SMS includes Phone Nos. or URLs. Be careful if you do not recognize the sender."

- This message appears when you set "Message scan" under "Scanning function" to ON and attempt to open SMS containing a phone number or URL. Check the sender, then press ■ to display the text of the SMS. →p.383

"Certificate is rejected (tampered)"

- This message appears when an altered SSL certificate has been received. An SSL communication cannot be established with this site.
- This message appears when an altered SSL/TLS certificate has been received. An SSL/TLS communication cannot be established with this site.

"Check new messages is set all OFF"

- New messages cannot be checked because none of the items is selected in "Set check new messages". Select items to check in "Set check new messages". →p.179

"Connection failed"

- This message appears when the host settings are incorrect. Set the host correctly, using "Host selection" under i-mode common set. →p.149
- Connection to i-mode failed for some reason. Retry connection.
- Set "Caller ID Notification" to "ON" and retry. →p.46

“Connection failed (403)”

- Connection to the site failed for some reason. Retry connection.

“Connection interrupted”

- i-mode connection was interrupted due to poor reception. Move to a location where the reception is good before using the i-mode service. →p.44
- If this message appears when the signal is strong and the “” mark is displayed, the connected site is very busy. Retry later.

“Continue using i-αppli and transmit data?”

- This message appears when you selected “NO” or “Terminate i-αppli” in response to “The number of i-αppli communications is large. Continue communication?” Select “YES” to continue i-αppli communication. Select “Terminate i-αppli” to stop using the i-αppli.

“Current UIM is not registered as IC owner Unable to delete”
“Current UIM is not registered as IC owner Unable to download”
“Current UIM is not registered as IC owner Unable to move”
“Current UIM is not registered as IC owner Unable to run”
“Current UIM is not registered as IC owner Unable to upgrade”

- This message appears when the inserted UIM does not match the UIM information registered for FeliCa or you tried to run Osaifu-Keitai i-αppli.

“Data in IC card is full Unable to download Delete service?”
“Data in IC card is full Unable to move Delete service?”
“Data in IC card is full Unable to run Delete service?”
“Data in IC card is full Unable to upgrade Delete service?”

- This message appears when Osaifu-Keitai i-αppli is downloaded or moved from a microSD card but there is not enough data capacity left on the IC card. Select “YES” to display a list of the Osaifu-Keitai service names already registered, the space (bytes) which would be freed by deleting each service, and the size of the capacity shortage. Select one or more services to delete, then follow the messages to start an i-αppli to delete them.

“Data is too long A part is deleted”

- The size of address, subject or text or more than one data exceeds the maximum, and the Compose message screen appears with the excess part deleted.

“Data is too long Please delete message”

- The combined double-byte character count for the main text and quotation symbols in a reply-with-quote i-mode mail exceeds 5,000 characters. Delete text to bring the count to 5,000 double-byte characters or less.

“Data transmission is frequent Continue transmission?”

- This message appears when the number of communications when using an i-αppli becomes very large within a certain period. Select “Yes” to carry on i-αppli communication, or “No” to stop communication. Select “Terminate i-αppli” to stop using the i-αppli.

“Data transmission is frequent Press CLR and confirm data transmission”

- This message appears when the number of communications from an i-αppli standby screen becomes very large within a certain period. Press CLR to select whether or not to permit communications from the i-αppli standby display, or to close the i-αppli standby display. →p.199

“Dial/Receive calls activating Original lock”

- This message appears when you have attempted a prohibited operation while the original lock is applied to “Dial/sending mail”. →p.109

“Download failed”

- This message appears when a download of a melody, Chara-den or download dictionary suffered a communication error or improper data.

“Editing now Unable to delete”

- This message appears when you attempt to delete a mail message saved in Draft while it is being edited.

“Enter correct Network Security Code”

- This message appears when an incorrect network security code was input for a function which requires network security code entry. Enter the correct network security code. →p.100

“Error in image Does not work correctly”

- This message appears when a Flash movie cannot be played due to an error found in the data.

“Error Register forwarding number”

- This message appears when you have subscribed to the Call Forwarding service and attempt to forward an incoming call by selecting “Call Forwarding” from the function menu without setting the forwarding number. →p.314

“Failed to Copy all”

- Copying could not be complete, for some reason. Replace with a different microSD card and try to copy again.

“Failed to Copy this”

- Copying could not be completed, for some reason. Replace with a different microSD card and try to copy again.

“Failed to read”

- Copying could not be completed, for some reason. Replace with a different microSD card and try to copy again.

Continued on next page

“Failed to retrieve channel information”

- This message appears when you display the channel list screen for the first time after purchase or when you attempt to display the channel list screen after resetting the i-Channel, changing the i-Channel host URL, initializing the FOMA terminal or exchanging the FOMA card (UIM), and then if i-Channel information cannot be obtained. Move to a location where “ ” is displayed, then display the channel list screen again. →p.153

“Format microSD for your phone”

- There is an error such as a microSD card that has not been initialized. Reformat the microSD card. →p.251

“Frame number of this page is not supported”

- The webpage cannot be displayed because the frame count exceeds the maximum that can be displayed on Full Browser or pixel browser.

“Function cannot operate any more”

- Close another function before continuing the operation.

“i-αppli stand-by display terminated due to security error”
“Software terminated due to security error”

- This message appears when an i-αppli or i-αppli standby screen (including i-αppli DX) was closed because you attempted to perform an unauthorized operation. →pp.189, 199

““i-αppli To” function is not set”

- This message appears when you attempted to start software from a site, mail, Send Ir data, Bar code reader, IC card, ToruCa or data broadcast, but the software could not start because the specified software has no association permission. →p.197

“Input error (205)”

- This message appears after you input and send data on an i-mode or Internet website. Press [■] to cancel the input text or settings (The set or input content has been sent, so this operation does not cancel the transmission).

“Insert microSD”

- The microSD card is not inserted correctly, or may be broken. Check that the microSD card is correctly inserted into the FOMA terminal. →p.244

“Insert UIM”

- This message appears when the UIM is not inserted correctly, or could be broken. Check that the FOMA card (UIM) is inserted correctly. →p.39

“Invalid address”

- The address contains a “,” and is invalid. Delete “,”.
- Mail cannot be replied to because the address of the received mail exceeds 50 single-byte characters.
- SMS cannot be sent because the address includes characters other than numerals, “#” and “✳”. Delete characters and spaces other than numerals, “#” and “✳”.

“Invalid UIM Auto-start failed”

- This message appears when an i-αppli that is restricted by FOMA card security attempted to start automatically. →p.39

“Invalid UIM Requested service not available”

- This message appears when you select and attempt to run a shortcut icon for data that is protected by FOMA card security. →p.39
- This message appears when you select and attempt to run a screen memo or MessageR/F that is protected by FOMA card security. →p.39

“Invalid UIM Requested software failed to start”

- This message appears when you specify and attempt to start an i-αppli that is restricted by FOMA card security. →p.39

“Invalid URL”

- This message appears when you entered a URL using “Enter URL” or “Home URL”, but it began with something other than “http://” or “https://”, or you selected OK without any input. Enter the URL again. →pp.141, 148, 218

“Is the ToruCa automatic reading function in a mobile phone used through the reader/writer?”

- This message appears when you swiped the FeliCa mark over a reader with “Auto reading setting” set to “OFF”. Select “YES” to use the automatic reading function. →p.206

“Memory full Cannot move”

- This message appears when you try to move data out of a secret folder but the destination folder is full. Delete data from the destination folder, then move the data again. →p.104

“Memory No.:XXX Cannot overwrite”

- This message appears when you are not in Secret mode or Secret data only mode, but you try to register the same phone number as a secret data memory number in the phonebook. →p.103

“Memory shortage”

- This message appears when the software cannot be launched due to memory shortage.
- Operation is interrupted due to memory shortage. If this message often appears, reboot handset.

“Memory shortage Quit”

- The process is interrupted due to memory shortage. When you are composing an i-mode mail, the number of tasks running and the combination of characters may make it impossible to input as many as 5,000 double-byte characters.

“Memory shortage Return to Full Browser menu”

- The process was interrupted due to memory shortage. Press [■] to return to the Full Browser menu.

“Memory shortage Return to i-mode menu”

- The process is interrupted due to memory shortage. Press [■] to return to the i-mode menu.

“Message too long to add header”

- This message appears when the character count of the text and header in total exceeds 5,000 double-byte characters and the header cannot be added.

“Message too long to add header & signature”

- This message appears when you are forwarding i-mode mail, but it was not possible to automatically paste the header/signature because they would cause the character count to exceed the limit of 5,000 double-byte characters.

“Message too long to add signature”

- The signature cannot be pasted because the total of main text and signature would exceed 5,000 double-byte characters.

“No channel info”

- There is no channel information, and you cannot compose a suggested message.

“No data”

- This message appears when there is no phonebook entry that matches the search conditions when you perform Phonebook search.

“No requested data Delete this shortcut icon?”

- This message appears when you select the shortcut icon for data that has been deleted and attempt to start it.

“No requested software”

- It is displayed when an i-αppli is started from mail, Send Ir data function, Bar code reader, IC card or data broadcast, and the relevant software is absent.

“No response”

- This message appears when the IC card authentication function was used for user authentication, but authentication timed out and failed. →p.111

“No response (408)”

- There was no response from the site, and communication was cut off. Retry connection.

“No response Retry?”
(During infrared data exchange/iC communication)

- The receiving terminal cannot be found/detected. If infrared communication is used, make sure the infrared ports are facing each other. If iC communication is used, check the FeliCa marks and place them together again. You can select “YES”, then press ■ to try again. →pp.257, 259

“No Switch”

- This message appears when you cannot switch to a videophone call during a voice call because the other party is establishing a packet communication (including i-mode). Check the other party’s status and retry. →p.50

“Not correspond contents”

- The information acquired by the bar code reader includes content not supported by this FOMA terminal, so it cannot be recognized.

“おまかせロック設定中です”

- Omakase lock is set. While Omakase Lock is set, all key operations are locked except receiving a voice call/videophone call and turning the power on/off. →p.102

“Other function active Cannot start”
“Other function active Cannot operate”

- This message appears when you attempt an unavailable operation when another function is running.

“Out of service area”

- This message appears when you attempt to use an i-mode service outside the service area, or where the radio waves do not reach. Move to a place where “圏外” is displayed, then use the i-mode service. →p.44

“Page is not found (404)”

- The site is not found. It may not exist.

“Password is not correct (401)”

- This message appears when the authentication did not go through on the “Authentication” or “Re-authentication” screen. Select “YES” to retry authentication.

“Phone/UIM ID will be sent?”

- This may be displayed during viewing of an Internet page or other site. Select “YES” to send your mobile phone manufacturer number. Otherwise, select “NO”. →p.137

“PIN1 code blocked”

- This message appears when powered on during PIN1 code lock. Press ■ to display the input screen for the PIN lock release code, then enter the PIN lock release code correctly to unlock. →p.100

“Please wait for a while”

- The voice line or packet communication device may be malfunctioning. Otherwise, the voice line/packet communication network may be congested. Attempt to use a voice call, videophone call or i-mode later. You can still make an emergency call (110, 119 and 118). However, you may not be connected depending on the condition.

“Please wait for a while (packet)”

- The packet communication device may be malfunctioning. Otherwise, the packet communication network may be congested. Retry later.

“PUK code blocked”

- This message appears when you turn on the power and attempt a UIM operation while the PUK code is locked. Contact a DOCOMO shop. →p.100

“Reading UIM Cannot start”

- This message appears when you attempt an operation related to the UIM while it is being read. Please try again later.

“Replace with a new one or check the disk”

- Run checkdisk on the microSD card. →p.247

Continued on next page

“Replay period has expired”

- This message appears when you select and attempt to run the shortcut icon for an i-motion which has finished its play duration or play time limit.

“Replay period has expired Delete?”

- This message appears when you attempt to play an i-motion or Chaku-Uta-Full® for which the playback period has expired. Select “YES” to delete.

“Root certificate has expired Connect?”

- This message appears when the CN (name) of an SSL certificate does not match. Select “YES” to connect. Otherwise, select “NO”.

“Root certificate is not valid”

- This message appears when you receive an SSL/TLS certificate with the “Certificate” set to “Invalid”. Check the contents of the certificate, set the certificate to valid and reconnect. →p.149
- This message appears when a certificate is received that is rendered invalid by Certificate settings. Check the content of the certificate, then set it as valid before trying to reconnect. →p.149

“Security code is 4 to 8 digits”
“Wrong security code”

- This message appears when an incorrect security code was input for a function which requires security code entry. Enter the correct security code. →p.100

“Service is used by the previous software Unable to download Delete a service?”
“Service is used by the previous software Unable to move Delete a service?”
“Service is used by the previous software Unable to update Delete a service?”

- When the same service has been already downloaded, you cannot download, upgrade or move new service from a microSD card unless you delete the existing service. If you select “YES”, the service subject to deletion is displayed. Delete the previously registered service.

“Service not registered”

- The i-mode service is not available because you have not subscribed to the service. A separate subscription is required to use the service.
- If you had started using the FOMA terminal before you subscribed to i-mode, turn the FOMA terminal off and then turn it back on.

“Services are full Music of overwritten service is unable to play Overwrite?”

- This message appears when a limit has been exceeded on the number of music services which can be registered (member services). Select “YES” to overwrite service with the oldest playback time limit. Music downloaded from the overwritten service can no longer be played.

“Size of data is not supported”
“Size of this page is not supported”

- The size of the data downloaded from a website (via i-mode, Full Browser) or Internet webpage exceeds the maximum of one page. The download is interrupted, and only the downloaded data is displayed.
- This message appears when the limit is exceeded while downloading a melody, download dictionary or Chara-den character.

“Software for this folder deleted Refer to Open folder”

- The software cannot be launched because the mail-linked i-αppli corresponding to the selected mail folder is deleted. Select a message contained in the folder from the function menu. →p.173

“Software is stopped because of an error”

- This message appears when software is running but suffers an error that prevents it from functioning further.

“Some addresses is invalid”

- This message appears when you attempt to reply to two or more addresses but not all addresses are valid.

“Some attached file will be deleted”

- A file is attached to the i-mode mail you are going to forward that is prohibited from being attached to mail or output from the FOMA terminal. Press [■] to delete the file that is prohibited from being attached to mail or output from the FOMA terminal.

“Some mails not sent (561)”

- Mail could not be sent correctly to some recipients.

“SSL session cannot be established”

- This message appears when it was not possible to connect to a site or Internet page that uses SSL communication. Retry connection.

“SSL session failed”

- This message appears when an authentication error occurred during SSL communication, causing interruption.

“SSL/TLS session failed”

- This message appears when an SSL communication is interrupted due to an error occurring during authentication for an SSL/TLS connection.

“Syntax error”
“Syntax error (XXX)”

- The received data contains an error and cannot be displayed. The received data is discarded. A number indicating the contents of an error may appear in “XXX”.

“Talking now Cannot operate”
“Talking now Cannot start”

- This message appears when you attempt an operation that is not possible while talking. →pp.283, 360, 361

“This certificate has expired Connect?”

- This message appears when an SSL server certificate is received that has expired, or has not reached its period of validity. Select “YES” to connect. Otherwise, select “NO”.
- This message appears when you try to connect to a site or Internet page that uses SSL communication, if you have not made the “Set time” setting. Make the “Set time” setting. →p.46

“This certificate is not valid for this URL Connect?”

- The site requested a User Certificate, but the certificate has expired. It may be possible to display the site by selecting “YES”, but you are advised to download a new User Certificate. →p.150

“This data can no longer be replayed”

- This message appears when you select and attempt to run the shortcut icon for an i-motion which has finished its number of plays.

“This data can no longer be replayed Delete?”

- This message appears when you attempt to play an i-motion or Chaku-Uta-Full® which has finished its number of plays. Select “YES” to delete.

“This data is not supported by this phone”

- This message appears when an i-motion could not be acquired due to incompatible non-i-motion data.

“This data may not be replayed”

- This message appears when the format of the acquired i-motion is not MP4 (Mobile MP4).

“This site is not certified Connect?”

- This message appears when an unsupported SSL certificate is received. Select “YES” to connect. Otherwise, select “NO”.

“This software contains an error”
“This software contains an error Unable to download”
“This software contains an error Unable to move”
“This software contains an error Unable to update”

- This message appears when the software cannot be downloaded, updated or moved from a microSD card because its data is inaccurate.

“This software is not supported by this phone”

- This message appears when the acquired software cannot be downloaded or moved from a microSD card because it is not compatible with this FOMA terminal.

“This UIM cannot be recognized”

- This message appears when a UIM that cannot be used in this FOMA terminal may have been inserted. Check that the right FOMA card (UIM) is inserted. →p.39

“Time out”

- Accessing a site or sending a message was interrupted because the time, which is set in “Set connection timeout”, has elapsed. Retry later. →p.149

“Too much data was entered”

- Too many characters are entered, and the data cannot be sent. Reduce the number of characters before trying to resend. →p.139

“Unable to activate 1Seg Please activate after resetting Self mode or moving to FOMA coverage”

- 1Seg cannot be activated as 1Seg viewing was repeated when a communication could not be established, e.g. in Self mode or out of service area. Release Self mode or move into FOMA service area to enable communication, and retry activation.

“Unable to download Data exceeds maximum size (452)”

- This message appears when data being received cannot be received because it exceeds the maximum size.

“Unable to obtain data due to replay restriction data error”

- The playback period of playback limit for a partially-acquired Chaku-Uta-Full® has expired, so the remaining data cannot be acquired. The partially saved data will be deleted.

“Unable to receive”

- This message appears when you attempt to obtain data and a data error or communication error occurs.

“Unable to retrieve the requested URL (504)”

- Connection to the site failed for some reason. Retry connection.

“Unable to support this card”

- The FOMA terminal does not support this microSD card. Use a compatible microSD card. →p.243

“Upper limit has been exceeded Connection failed”

- The upper limit set for a Limit billing plan (Type Limit and Family Wide Limit) is exceeded.

“URL address changed (301)”

- The URL has changed because the site has been relocated. If the URL was registered as a bookmark, shortcut icon or home URL, re-register it. →pp.94, 142, 148, 221

“URL is too long to register”

- The URL exceeds 256 single-byte characters, so the bookmark or URL cannot be registered.

“Usage is currently restricted Try again later”

- This message appears when an extremely high volume of data communication occurred within a certain period while using a flat-rate i-mode packet service. Connection may become impossible for a period, so try to use i-mode again later.

“Wrong password”

- This message appears when you enter a wrong password on the password entry screen in viewing or downloading a PDF document. →pp.145, 261

Continued on next page

“You have no certificate Connect?”

- User Certificate has not been downloaded. It may be possible to display the site by selecting “YES”, but for some sites it may be impossible to continue.→p.150

“Your certificate has expired Connect?”

- This message appears when an SSL server certificate out of the validity period has been received. Select “YES” to connect. Otherwise, select “NO”.
- This message appears when there was a request for a client certificate during connection to site of Internet page that uses SSL communication.→p.138

“Your certificate is requested Send your certificate?”

- The site has requested a User Certificate. Select “YES” to send the User Certificate or “No” to avoid sending it.

““●▲■.ne.jp” 宛のメールが混み合っているため、送信できません (555) Unable to send.
“●▲■.ne.jp” is not available temporarily.”

* Domain name indication differs according to the recipient.

- The telephone lines are down or extremely busy. Please try again later.

Warranty and After-Sales Service

Warranty

- Make sure that the warranty card is included with your FOMA terminal at the time of purchase. Check the contents, the information about “the shop or date of purchase”, etc. and keep the card in a safe place. If the card does not contain necessary information, immediately contact the shop and request them to fill in the card. The warranty period is one year from the date of purchase.
- The whole or part of the product, including its accessories, is subject to improvement without notice.
- The stored data such as phonebook entries may be altered or lost through the damage, repair or improper use of the FOMA terminal. It is recommended to take notes of the stored data such as phonebook entries just in case. Repairing the FOMA terminal cannot transfer most of the data downloaded via i-mode or i-αppli, complying with the copyright law.
  * With this FOMA terminal, you can save the data such as the phonebook, data used with i-motion or i-αppli to the microSD card.
  * With this FOMA terminal, you can keep the data such as the phonebook at the Data Security Center by using the Data Security Service (a pay service you need subscription).
  * If you have a PC, you can transfer and save the data such as phonebook entries to your PC by using the DOCOMO keitai datalink (p.329) and the FOMA USB Cable with Charge Function 01/02 (Optional) or the FOMA USB Cable (optional).

After-sales service

● If you have problems with your FOMA terminal

Before having your FOMA terminal repaired, see the “Malfunction Checklist” in this manual.
If you still have problems, call at the technical inquiries number described on the back of the manual.

● If, after contacting DOCOMO, you are informed that your FOMA terminal is in need of repairs

Take your FOMA terminal to a designated repair shop. The repair shop is only open during business hours. Remember to take your warranty card with you.

■ During the warranty period

- The FOMA terminal will be repaired free of charge in accordance with our written warranty policy.
- Make sure to take the warranty card with you when having your FOMA terminal repaired. Even during the warranty period, a charge will be made for the repair if you cannot show the warranty card or if the malfunction or damage has resulted from improper use.
- Even during the warranty period, a charge will be made for the repair if the malfunction has resulted from the use of devices or consumables that are not specified by NTT DOCOMO.
- A charge will be made for repairs in the event of damage to the LCD screen, connectors and similar components after purchase.

■ Repairs may not be possible in the following circumstances

- Repairs Inquiries detect water exposure (Example: the water exposure detection sticker detects water exposure)
- Tests determine that corrosion has occurred due to water exposure, condensation, perspiration, etc. or the circuit board has been damaged or altered (the external connector (earphone/microphone connector), liquid crystal, case, etc. has been damaged)

* These cases are not covered by the warranty, and any repairs that may be possible will be carried out at the subscriber’s expense.

■ After the warranty period has expired

You can request to have your FOMA terminal repaired, although a charge will be made for the repair.

Continued on next page

■Stock period of parts

Replacement parts (required for maintaining the functionality of the FOMA terminal) will be kept in stock basically for minimum of 6 years following the termination of production. However, the FOMA terminal may not be able to be repaired due to the lack of parts depending on the damaged parts. The repair may still be able to be performed even after the stock period has expired. Call at the technical inquiries number described on the back of the manual.

■Important

- Do not attempt to adapt the FOMA terminal or its accessories by yourself.
  - Doing so may cause fire, injury or malfunction.
  - Repairs to modified devices will be accepted on the condition that the customer agrees to the said modifications being restored to their original condition. You may be rejected depending on the modification.
    The following may be regarded as modifications:
    - Labels etc. affixed to the screen or keys.
    - Decorations to the FOMA terminal involving the use of adhesives.
    - Replacement of the exterior etc. of the terminal with non-DOCOMO components.
  - Even during the warranty period, a charge will be made for the repair if the malfunction or damage has resulted from adaptation.
- Do not peel off the model name seal attached to the FOMA terminal.
  The model name seal plays the part of the certificate verifying that the FOMA terminal complies with the technical standard. If the seal cannot be confirmed because it has been peeled off or replaced, the conformity to the technical standard cannot be judged, and then the repair may be unable to be accepted.
- The settings of the functions or the information about total call time may be cleared (reset) due to the damage, repair or improper use of the FOMA terminal. In this case, specify the settings again.
- Magnetic components are used for the following part of the FOMA terminal. A cash card (ATM card, bank card), etc. which is easily affected by magnetism, may become unusable if it is kept close to the components:
  Down-right of [#]
- If your FOMA terminal gets wet or moist, immediately turn it off, remove the battery pack, and take the FOMA terminal to the repair shop as soon as possible. Note that the FOMA terminal may be unable to be repaired depending on the condition.

Memory dial (phonebook function) and downloaded information

- It is your responsibility to keep a separate record of all data stored on your FOMA terminal. NTT DOCOMO disclaims any responsibility for alteration or loss of data.
- The data you created, imported or downloaded may be modified or lost when you change the mobile phone model or send the FOMA terminal to repair. NTT DOCOMO accepts no liability whatsoever for any modification to or loss of such data. NTT DOCOMO may sent you a replacement of your FOMA terminal, instead of renovation. The data which contains the images and ring tones downloaded to the FOMA terminal, and the user created data are transferred to the replacement only when the FOMA terminal is repaired (some contents can not be transferred. The data may not be transferred depending on the damage).
  * It may take time to transfer the data or the data may not be transferred depending on the amount of the data stored on the FOMA terminal.

i-mode Malfunction Check Site

You can check if sending/receiving mails, downloading images/melodies or other operations are normally performed on the FOMA terminal by yourself.

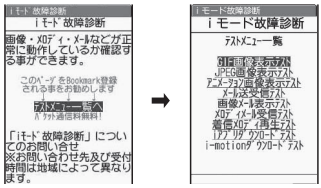

- Connecting to “i-mode Malfunction Check Site” (Japanese)
  - ch▶“iMenu”▶“お知らせ”▶“サービス・機能”▶“ｉモード”▶“ｉモード故障診断”

QR code for connecting to the site

- Packet communication charge is not charged for the i-mode malfunction check site.
  * Charges apply when accessing from overseas.
- Test items vary depending on the FOMA terminal models. Also, the test items are subject to change.
- To check the operation with each test item, read the notes on the site carefully before performing test.
- When connecting to the i-mode malfunction check site or testing the mail sending, information specific to your FOMA terminal (model, mail address, etc.) is automatically sent to the server (i-mode malfunction check server). The information sent to DOCOMO is not used for any other purpose than i-mode malfunction checking.
- When there seems to be a malfunction as a result of the checking, contact the inquiries number provided on the back of this manual.

Updating Software

<Software Update>

Check whether it is necessary to update software on the FOMA terminal. Download and update the software via packet communication if necessary.
You will be notified of the update in the DOCOMO website or in “お知らせ” (News) of iMenu.

- A charge will not be made for the packet communication to update the software.
- There are 3 ways to update: “Auto-update”, “Now update” and “Reserved update”.
  Auto-update: The new software is downloaded automatically and overwritten at the preset time.
  Now update: Updates immediately.
  Reserved update: Updates automatically on the date and time you specified.
- You can update the software if the i-mode host is set as the user defined host.
- Updating the software (downloading and installing) may take some time.
- When you update the software, an SSL connection is established with the server (the software update server managed by NTT DOCOMO). Validate the certificate beforehand (default: Valid. Setting procedure →p.149).
- Before updating the software, charge the battery to the full.

Continued on next page

- It is recommended that you perform software updates when the handset is stationary and in a location with good signal quality (three bars for the antenna icon).
  * If the reception becomes poor and then the download is interrupted, try to update again in a place where the reception is good.
- Updating the software with the “PIN1 code entry set” set to “ON” displays the PIN1 code entry screen in the automatic restart after installing the software. You cannot make or receive a call or use other communication functions if you do not enter the correct PIN1 code.
- You cannot download the update software:
  - When the FOMA card (UIM) is not inserted
  - When the FOMA card (UIM) is invalid
  - When PIN lock is set
  - When PIN Unlock Code (PUK Code) is locked
  - When date and time are not set
  - When Omakase Lock is set
  - When the Self mode is set
  - When “ ” is displayed
  - When packet dialing is restricted
  - While using mova terminal with Dual Network service
  - During 64K data communication
  - During international roaming

  When the reservation time comes while the other function is used, downloading starts after finishing the function (cannot start depending on functions)
- You cannot rewrite the updated software:
  - When Omakase Lock is set
  - While other functions are running

  If the auto-update rewriting fails, rewriting again at the Set auto-update time (next day or one week later).
- Calls, communications and other functions are not available while software is being updated. However, voice calls can be answered while downloading.
- If the software has already been updated, “No update is needed Please continue to use as before” is displayed when you check for new software updates.
- After updating the software, the displayed i-mode Center storage status icon disappears. Also, if the receive option is set to “ON” and mail is received while updating the software, the mail notification screen may not be displayed after the software has been updated.
- When you update the software, information specific to your FOMA terminal (model, manufacturer number, etc.) is automatically sent to the server (the server for software updates managed by NTT DOCOMO). The information sent to NTT DOCOMO is not used for any other purpose than updating the software.
- If the update fails, the message “Rewrite failed” will appear and all operations will become unavailable. In this case, please seek advice at a repair counter designated by DOCOMO.

NOTE

- Do not remove the battery pack while updating the software. Doing so may cause the update to fail.
- It is possible to perform software updates while keeping your Phonebook entries, camera images, downloaded data and other data saved on the FOMA terminal intact. However, note that in some cases data cannot be protected depending on the condition of your FOMA terminal (malfunction, damage, water exposure, etc.). It is recommended that you back up important data. (It may not be possible to back up some data such as downloaded data.)
- In case of Now update or Reserved update, when the software update is completed without operation for confirmation, you will see the shortcut icon “ ” (Update complete) on the standby screen. Select “ ” and enter the security code to see the detail results of the update.

Performing Software Update automatically

<Auto-update>

The new software is downloaded automatically and rewritten at the preset time. When rewriting is possible, (Rewrite) is displayed on the standby screen. You can check the time of the update and change the time, or perform immediate rewrite.

● The default setting is “Auto-update” (date: unspecified, time: 03:00).

1 MENU▶**“SETTINGS”▶“Other settings”▶“Software Update”▶Enter your security code**

2 **“Set auto-update”▶“Auto-update”▶ (set)**

The new software is automatically downloaded, and (Rewrite) is displayed on the standby screen.

Software Update function list

■ **To change the date and time for updates**

▶Select and set “Date” or “Time”▶ (set)

■ **To set for notification of updates only**

▶Select “Only notification”▶ (set)

If a software update is necessary, (Update) is displayed on the standby screen.

■ **To leave auto-update set to off**

▶Select “Disable”▶ (set)▶“Yes”

3 **On the standby screen▶ ▶Select “ ”**

4 **“OK”**

Updating begins at the scheduled time.→p.381

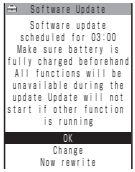

■ **To change the time of the update**

▶Select “Change” and set time▶ (set)

■ **To perform the software update immediately**

▶“Now rewrite”▶Enter your security code

Proceed to step 2 in “Updating software immediately” (p.380).

NOTE

● (Update notification icon) appears when there is a notification from DOCOMO or if update is failed.

Running Software Update

To run Software Update, you can select (Update) that appears on the standby screen or from the menu screen.

● Selecting (Update) to perform Software Update

1 **On the standby screen▶ ▶Select “ ”**

2 **“YES”**

■ **To delete without running Software update**

▶“NO”▶“YES”

3 **Enter your security code**

Continued on next page

4 Check whether software update is required

Now it is required to send the FOMA terminal-specific information to the server.

5 The check result appears

■ **When “Update is needed” appears**

▶Select “Now update” or “Reserve”

Select “Now update” to update the software immediately.→p.380

Select “Reserve” to update on the set time.→p.381

Check result

■ **When “No update is needed” appears**

▶“OK”

Continue using the FOMA terminal as there is no need to update the software.

● Running Software Update from the menu

1 MENU▶“SETTINGS”▶“Other settings”▶“Software Update”▶Enter your security code

The Software Update function list screen (p.379) appears.

2 “Update”

Proceed to step 4 (p.380) in “Selecting (Update) to perform Software Update”.

Updating software immediately

<Now update>

1 Check result screen (p.380)▶“Now update”▶Select “OK” when “Start download Notice” is displayed

Downloading starts immediately.

Download starts after a while, even if you do not select “OK”.

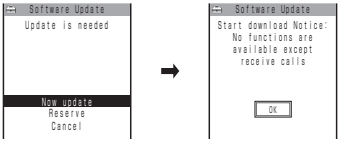

2 When the download ends and “Starting to rewrite” appears, select “OK”

The software starts rewriting.

Rewrite starts after a while, even if you do not select “OK”. It may take time to start rewriting.

All keys are disabled during software rewriting. You cannot stop rewriting either.

When the software is rewritten, the FOMA terminal will reload automatically.
After reloading, the message “Software update is complete” is displayed, select “OK” (not display for the Auto-update). Software update is completed.



NOTE

- If you stop downloading before the download is completed, the data that has been downloaded until then is deleted.
- Even if the power is switched off during rewriting, it resumes when power is restored.
- Once you start downloading, the update starts automatically with no need of selecting any item such as menu.
- The screen on the right may be displayed if the server is busy.
  In this case, select “Reserve” to perform the reserved update.

Selecting the reservation date and time to update software

<Reserved update>

If it takes a long time to download or when the server is busy, you can select the time to startup Software update by communicating with the server beforehand.

<Example: To reserve at 7:30 AM on August 16 (Saturday)>

1 Check result screen (p.380)▶“Reserve”▶Select the date and time

■ **If there is no date and time you do want to reserve**

▶“Others”→p.382

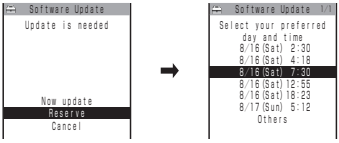

2 Check the selected date and time▶“YES”▶“OK”



The software update is reserved.

■ **To change the date and/or time**

▶“NO”

● At the scheduled time

The screen on the left appears and the FOMA terminal starts the software update automatically, 5 seconds later. Charge the battery fully, put the FOMA terminal at a location with strong radio wave reception and display the standby screen before the reservation time. The rest of operation is same as “Updating software immediately <Now update>” (p.380).

Continued on next page

NOTE

- The reservation time for the software update will be based on the server's time.
- When the reservation time for the software update is the same as the alarm notification time, priority is assigned to the software update.
- When the reservation time comes while the other function is used, updating starts after finishing the function.
- If you perform "Initialize" after the reservation procedure is complete, the software update does not start at the scheduled time. Reschedule the time for update.

● If you select "Others"

You can select the desired date and period of time after communicating with the server if you select "Others" at step 1 in p.381.

1 Select a desired date

In the date selection display, you will see the update availability represented as shown below:

○ : Available
△ : Almost full
None : Full

2 Select an hour

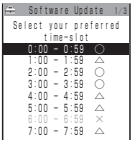

In the time selection display, you will see the update availability represented as shown below:

○: Available
△: Almost full
×: Full

Select the period of time to display the candidates for the reservation time by communicating with the server again.

3 Confirm the software update date and time



If you check the selected date and time and select "YES", you will communicate with the server again.

The software update is reserved.

● Checking/Changing/Canceling the reservation date and time

<Example: To cancel the reservation after checking it>

1 MENU ▶"SETTINGS"▶"Other settings"▶"Software Update"▶Enter your security code▶"Update"

2 "Cancel"

■ **To accept the reservation date and time**

▶"OK"

■ **To change the reservation date and time**

▶"Change"

Once information specific to your FOMA terminal has been sent to the server, follow the procedure used when "Others" is selected. →p.382

3 When you see the message “Cancel this reservation?”, select “YES”

At this point, information specific to your FOMA terminal is sent to the server.
NTT DOCOMO will never disclose or forward your FOMA terminal information (model and manufacturer number) to a third party.
After the message “The reservation is canceled” is displayed, select “OK”. The reservation is canceled.



Protecting the FOMA Terminal from Harmful Data

<Scanning function>

First, update the pattern data for the latest data.
When the FOMA terminal is downloading external files or programs from sites or i-mode mail, this function scans the data and deletes any data or cancels program activation where the data or the program could cause a fault.

- Pattern data is used for the check. Update the pattern data when it is upgraded because a problem has been detected. →p.384
- The Scanning function prevents the data that causes some fault from invading your FOMA terminal when viewing sites and websites or receiving mail. If the pattern data that fixes the error is not installed on your FOMA terminal or if the pattern data that fixes the fault does not exist, the Scanning function cannot prevent the error from occurring.
- The pattern data varies depending on the model of the FOMA terminal. As a matter of convenience, NTT DOCOMO may discontinue to distribute the pattern data for the model if three years have passed since it is first released.
- Set the date (year, month and day) correctly on the FOMA terminal.
- When the FOMA terminal is updating automatically or when you update the pattern data, information specific to your FOMA terminal (model, manufacturer number, etc.) is automatically sent to the server (scanning function server managed by NTT DOCOMO). NTT DOCOMO will not use that information for any purpose other than scanning function.
- Update of pattern data will be interrupted if a voice call is received or the FOMA terminal moves out of the service area while updating the pattern data.

Setting the scanning function

<Set scan>

When the Scanning function is set to “ON”, data and programs are automatically checked when they are executed.
When the message scan is set to “ON”, the message body of SMS is automatically checked.

1 MENU ▶“SETTINGS”▶“Lock/Security”▶“Scanning function”

The “Scanning function” screen appears.

Scanning function

2 “Set scan”▶“Scan” or “Message scan”▶“ON”

■ If a message appears asking whether to change the settings

▶“YES”

* If you enable the Scanning function and it detects potentially harmful data, the event is displayed using one of 5 warning levels. →p.384

NOTE

- The Voice mail notification is not checked even when “Message scan” is set to “ON”.

Updating pattern data

<Pattern data update>

1 Scanning function screen (p.383)▶“Update”▶“YES”▶“YES”

* If no pattern data update is required, the “Pattern definitions are up-to-date” message appears. Continue using your current pattern data.

NOTE

- You cannot update the pattern data when the update information is notified from the network, when other function is activated, or during i-mode communication, packet communication or international roaming.

Updating pattern data automatically

<Set auto-update>

1 Scanning function screen (p.383)▶“Set auto-update”▶“ON”▶“YES”▶“YES”

The scanning results display

■ Displaying problems detected by scanning

A list of up to 5 problems detected by the Scanning function is displayed, starting with the highest-level problem. If 6 or more problems were detected, the names of the 6th and subsequent problems are omitted.
The rest of the problem elements (sixth and later), of which names are omitted, are displayed as follows:
1 to 9998: The remaining count is displayed as it is.
9999 or more: “Other:9999” is displayed regardless of the count.

■ Results of scanning

Warning level 0	Warning level 1	Warning level 2	Warning level 3	Warning level 4
Operation may not run properly	Operation may not run properly Cancel operation?	Operation may not run properly Canceling operation	Operation may not run properly Delete data?	Operation may not run properly Deleting data
■ (Set)···Continues the operation.	■ (Cancel)···Stops and cancels the operation. i (Continue)···Continues the operation.	■ (Set)···Stops and cancels the operation.	i (Delete)···Deletes the data and cancels the operation. ■ (Back)···Stops and cancels the operation.	■ (Set)···Deletes the data and cancels the operation.

NOTE

- A message other than the above may appear depending on the condition.

Checking the pattern data version

<Version>

1 Scanning function screen (p.383)▶“Version”

Specifications

■ Phone

Model name		FOMA SO706i	
Size		Height 105 mm × Width 49 mm × Thickness 13.4 mm (When folded)	
Weight		Approx. 98 g (Battery pack attached)	
Continuous standby time		FOMA/3G Stationary (“Auto”[*1]): Approx. 580 hrs. In transit (“3G”[*1]): Approx. 430 hrs. In transit (“Auto”[*1]): Approx. 360 hrs. GSM Stationary (“Auto”[*1]): Approx. 290 hrs.	
Continuous talk time		FOMA/3G Voice communications: Approx. 220 min. Videophone: Approx. 100 min. GSM Voice communications: Approx. 190 min.	
Charging time		AC Adapter: Approx. 120 min. DC Adapter: Approx. 120 min.	
Color LCD	Type	Display: TFT 262,144 colors	
	Size	Display: Approx. 2.8 inches	
	Pixels	Display: 102,480 pixels (240 × 427 dots)	
Imaging device	Type	CMOS	
	Size	1/4 inches	
	Effective pixels	Approx. 2.0 mill. pixels	
Camera	Maximum recorded pixels	Approx. 1.9 mill. pixels	
	Digital zoom	Up to approx. 4.6 ×	
Record	Still image	Approx. 1,000 photos[*2]	
	Continuous mode	4 to 20[*3]	
	Still image file type	JPEG	
	Movie record time	Save to Phone: Approx. 276 sec.[*4] Save to microSD card (64M bytes): Approx. 90 min.[*4]	
	Movie file type	MP4	
Music playback	Continuous playback time	i-motion	Approx. 930 min.[*5]
		Chaku-Uta-Full®	Approx. 1,300 min.[*5*6]
		Windows Media Audio (WMA) file	Approx. 1,400 min.[*6]
		Music&Video Channel	Approx. 1,500 min. (Audio)[*6] Approx. 350 min. (Movie)
Memory	Chaku-Uta® · Chaku-Uta-Full®	Approx. 70M bytes[*7*8]	

*1: To switch networks, use “3G/GSM setting” (p.336).
*2: Select size=SubQCIF (128 × 96) Quality (Quality setting)=Fine (in case of File size=10KB)
*3: Varies depending on image size.
*4: Record time for 1 item under the following conditions.
<Phone>
Select size=SubQCIF (128 × 96) Quality setting=Normal File size=2MB Movie type set=Normal
<microSD card (64M bytes)>
Select size=SubQCIF (128 × 96) Quality setting=Normal File size=Long time Movie type set=Normal
*5: File type=AAC format
*6: Background play supported
*7: Up to 10M bytes of Chaku-Uta® can be separately saved to the Secret folder.
*8: Shared with images, i-motion, PDF data and Screen memo

Continued on next page

■ Battery pack

Product name	Battery Pack SO03
Battery type	Lithium-ion
Nominal voltage	3.8V DC
Nominal size	770mAh

Number of Data that can be Stored/ Registered/Protected on the FOMA Terminal

Item		Store/Register	Protect
Phonebook		1,000 max.*1	—
1Seg	TV link	50	—
	Booking program	100	—
	Timer recording	100	—
Schedule	Schedule	500	—
	Holiday	100	—
	Anniversary	100	—
To Do list		100	—
Mail (SMS + i-mode)	Received mail	1,000 max.*2*3*4	500 max.*2
	Sent mail	500 max.*2*3*4	250 max.*2
	Draft mail	50 max.*2	—
Area Mail		100 max.*2	—
Template		500 max.*2*5	—
Message	MessageR	100 max.*2	50 max.*2
	MessageF	100 max.*2	50 max.*2
Bookmark	i-mode	100*6	—
	Full Browser	100*6	—
Screen memo		100 max.*2	50 max.*2
i-αppli		200 max.*2 (5 for mail-linked i-αppli)	—
ToruCa		100 max.*2	—
Still image		1,000 max.*2*4	—
Movie/i-motion		100 max.*2*6	—
Still images recorded with 1Seg		100 max.*2	—
Chara-den		10*5	—
Melody		200 max.*2	—
Kisekae Tool		100 max.*2*5	—
PDF data		400 max.*2*5	—
Music&Video Channel		30 max.*2	—
Music		100 max.*2	—

*1: Up to 50 phonebooks can be stored on the FOMA card (UIM).
*2: Actual storable, registerable or protectable counts may be decreased depending on the data size.
*3: Up to 20 more received or sent SMS messages can be additionally stored on the FOMA card (UIM). →p.254
*4: Up to 100 items can be additionally stored on the secret folder.
*5: Pre-installed data are included.
*6: Up to 10 items can be additionally stored or registered on the secret folder.

Specific Absorption Rate of Mobile Phones, etc.

★Mobile Phone GSM/GPRS 900/1800/1900 & UMTS JP/EU

Specific Absorption Rate (SAR) of Mobile Phones

This model phone FOMA SO706i meets the MIC's*1 technical regulation for exposure to radio waves. The technical regulation established permitted levels of radio frequency energy, based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The regulation employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit is 2 watts/kilogram (W/kg)*2 averaged over ten grams of tissue. The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The value of the limit is equal to the international guidelines recommended by ICNIRP*3.
All phone models should be confirmed to comply with the regulation, before they are available for sale to the public. The highest SAR value for this model phone FOMA SO706i is 0.739 W/kg. It was taken by the Telecom Engineering Center (TELEC), a Registered Certification Agency on the Radio Law. The test for SAR was conducted in accordance with the MIC testing procedure using standard operating positions with the phone transmitting at its highest permitted power level in all tested frequency bands. While there may be differences between the SAR levels of various phones and at various positions, they all meet the MIC's technical regulation. Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum value.
For further information about SAR, please see the following websites:

World Health Organization (WHO): http://www.who.int/peh-emf/
ICNIRP: http://www.icnirp.de/
MIC: http://www.tele.soumu.go.jp/e/ele/body/index.htm
TELEC: http://www.telec.or.jp/ENG/Index_e.htm
NTT DOCOMO: http://www.nttdocomo.co.jp/english/product/
Sony Ericsson Mobile Communications Japan, Inc.: http://www.SonyEricsson.co.jp/product/SAR/ (Japanese)
Association of Radio Industries and Businesses: http://www.arib-emf.org/index.html (Japanese)

*1: Ministry of Internet Affairs and Communications
*2: The technical regulation is provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.
*3: International Commission on Non-Ionizing Radiation Protection

Radio Wave Exposure and Specific Absorption Rate (SAR) Information

● United States

THIS PHONE MODEL HAS BEEN CERTIFIED IN COMPLIANCE WITH THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

The SO706i mobile phones have been designed to comply with applicable safety requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed to not exceed the limits* of exposure to radio frequency (RF) energy set by governmental authorities. These limits establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by international scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a safety margin designed to assure the safety of all individuals, regardless of age and health.

Continued on next page

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands. While there may be differences between the SAR levels of various phone models, they are all designed to meet the relevant guidelines for exposure to radio waves. For more information on SAR, please refer to the safe and efficient use chapter in the User Guide.

The highest SAR value as reported to the authorities for this phone model when tested for use by the ear is 0.92 W/kg*, and when worn on the body is 0.55 W/kg* for speech and 0.56 W/kg* for data calls. Body worn measurements are made while the phone is in use and worn on the body with a Sony Ericsson accessory supplied with or designated for use with this phone. It is therefore recommended that only Ericsson and Sony Ericsson original accessories be used in conjunction with Sony Ericsson phones.

**Before a phone model is available for sale to the public in the US, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by the government-adopted requirement for safe exposure*. The tests are performed in positions and locations (i.e., by the ear and worn on the body) as required by the FCC for each model. The FCC has granted an Equipment Authorization for this phone model with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. While there may be differences between the SAR levels of various phones, all mobile phones granted an FCC equipment authorization meet the government requirement for safe exposure. SAR information on this phone model is on file at the FCC and can be found under the Display Grant section of http://www.fcc. gov/oet/ea after searching on FCC ID PY7A3880003. Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) website at http://www.ctia.org/.

** In the United States, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a margin of safety to give additional protection for the public and to account for any variations in measurements.*

***This paragraph is only applicable to authorities and customers in the United States.*

● Europe

This mobile phone model SO706i has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.

While there may be differences between the SAR levels of various phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

For more information on SAR, please refer to the safety chapter in the User's Guide.

SAR data information for residents in countries that have adopted the SAR limit recommended by the International Commission of Non-Ionizing Radiation Protection (ICNIRP), which is 2 W/kg averaged over ten (10) gram of tissue (for example European Union, Japan, Brazil and New Zealand):

The highest SAR value for this model phone tested by Sony Ericsson for use at the ear is 1.05 W/kg (10g).

Radio Frequency (RF) Exposure and SAR

Your mobile phone is a low-power radio transmitter and receiver.
When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below this value. This is because the mobile phone is designed to use the minimum power required to reach the network.

Variations in SAR below the radio frequency exposure guidelines do not mean that there are variations in safety. While there may be differences in SAR levels among mobile phones, all Sony Ericsson mobile phone models are designed to meet radio frequency exposure guidelines.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when used with the original Sony Ericsson body worn accessory intended for this phone. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

SAR information for this mobile phone model is included with the material that comes with this mobile phone. This information can also be found, together with more information on radio frequency exposure and SAR, on: www.sonyericsson.com

Guidelines for Safe and Efficient Use

Please read this information before using your mobile phone.

These instructions are intended for your safety. Please follow these guidelines. If the product has been subject to any of the conditions listed below or you have any doubt as to its proper function make sure you have the product checked by a certified service partner before charging or using it. Failure to do so might entail a risk of product malfunction or even a potential hazard to your health.

Recommendations for safe use of product (mobile phone, battery, charger and other accessories)

- ☐ Always treat your product with care and keep it in a clean and dust-free place.
- ☐ Warning! May explode if disposed of in fire.
- ☐ Do not expose your product to liquid or moisture or humidity.
- ☐ Do not expose your product to extremely high or low temperatures. Do not expose the battery to temperatures above +35°C (+95°F).
- ☐ Do not expose your product to open flames or lit tobacco products.
- ☐ Do not drop, throw or try to bend your product.

Continued on next page

☐Do not paint your product.
☐Do not attempt to disassemble or modify your product.

☐Do not close your product with an object inserted between keypad and display if you have a clamshell phone; this may damage your product.
☐Do not use your product near medical equipment without requesting permission from your treating physician or authorized medical staff.
☐Do not use your product when in, or around aircraft, or areas showing the sign “turn off two-way radio”.
☐Do not use your product in an area where a potentially explosive atmosphere exists.
☐Do not place your product or install wireless equipment in the area above an air bag in your car.
☐Caution: Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.

CHILDREN

KEEP OUT OF CHILDRENS REACH. DO NOT ALLOW CHILDREN TO PLAY WITH YOUR MOBILE PHONE OR ITS ACCESSORIES. THEY COULD HURT THEMSELVES OR OTHERS, OR COULD ACCIDENTALLY DAMAGE THE MOBILE PHONE OR ACCESSORY. YOUR MOBILE PHONE OR ITS ACCESSORY MAY CONTAIN SMALL PARTS THAT COULD BECOME DETACHED AND CREATE A CHOKING HAZARD.

Power supply (Charger)
Connect the AC power adapter only to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp areas. Never alter the cord or plug.

Battery
We recommend that you fully charge the battery before you use your mobile phone for the first time. A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used. The battery should only be charged in temperatures between +5°C (+41°F) and +35°C (+95°F).

Use only original batteries intended for use with your mobile phone. Using other batteries and chargers could be dangerous.

Talk and standby times depend on several different conditions such as signal strength, operating temperature, application usage patterns, features selected and voice or data transmissions when the mobile phone is being used.

Turn off your mobile phone before removing the battery. Do not put the battery into your mouth. Battery electrolytes may be toxic if swallowed. Do not let the metal contacts on the battery touch another metal object. Doing this could short-circuit and damage the battery. Use the battery for the intended purpose only.

Personal medical devices
Mobile phones may affect the operation of pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, e.g. in your breast pocket. When using the mobile phone, use it at the ear on the opposite side of the body to the pacemaker. If a minimum distance of 22 cm (8.7 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you have any reason to suspect that interference is taking place, immediately turn off your mobile phone. Contact your medical doctor for more information.

For other medical devices, please consult your physician and the manufacturer of the device.

Driving
Please check if local laws and regulations restrict the use of mobile phones while driving or require drivers to use handsfree solutions.

For the use of mobile phones in the vehicle, please follow instructions from vehicle manufacturers.

Always pay full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

Emergency calls
Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. You should therefore never rely solely upon any mobile phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

Efficient use
Hold your mobile phone as you would any other phone. Do not cover the hinge area when the phone is in use, as this affects call quality and may cause the phone to operate at a higher power level than needed, thus shortening talk and standby times.

Disposal of old electrical and electronic equipment

This symbol indicates that all electrical and electronic equipment included shall not be treated as household waste. Instead it shall be left at the appropriate collection point for recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Disposing of the battery

Please check local regulations for disposal of batteries or call your local Sony Ericsson Call Center for information.

The battery should never be placed in municipal waste. Use a battery disposal facility if available.

Memory Card
If your product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If your product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

WARNING:
If your device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Continued on next page

Precautions on Memory Card Use

□Do not expose the memory card to moisture.

□Do not touch terminal connections with your hand or any metal object.

□Do not strike, bend, or drop the memory card.

□Do not attempt to disassemble or modify the memory card.

□Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.

□Do not press or bend the end of the memory card adapter with excessive force.

□Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.

□Check you have inserted the memory card correctly.

□Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.

□We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.

□Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

Protection of personal information

To safeguard your privacy and prevent information being accessible to a third party, you should erase all personal data before selling or disposing of the product. To delete personal data, perform a master reset, remove the memory card or format the media memory. DELETION OF MATERIAL FROM THE PHONE AND MEDIA MEMORIES DOES NOT ENSURE THAT SAID INFORMATION CANNOT BE RECOVERED BY A SUBSEQUENT USER. DOCOMO/SONY ERICSSON DOES NOT WARRANT AGAINST A SUBSEQUENT USER OF THE DEVICE ACCESSING YOUR INFORMATION AND DOES NOT ASSUME ANY RESPONSIBILITY FOR SUBSEQUENT DISCLOSURE OF SAID INFORMATION EVEN IF A MASTER RESET AND A MEDIA MEMORY FORMAT HAS BEEN PERFORMED. If you are concerned about such potential disclosure retain your device or secure its permanent destruction.

Accessories

DOCOMO recommends use of DOCOMO's original accessories for safe and efficient use of its products. Use of third-party accessories may decrease performance or pose a risk to your health or safety.

LOUDNESS WARNING:

Please adjust the audio volume cautiously when using third-party audio accessories to avoid volume levels that may be harmful to your hearing. DOCOMO does not test use of third-party audio accessories with this mobile phone. DOCOMO recommends using only DOCOMO's original audio accessories.

FCC Statement for the USA

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

DECLARATION OF CONFORMITY

We,
Sony Ericsson Mobile Communications AB of
Nya Vattentornet
SE-221 88 Lund, Sweden
declare under our sole responsibility that our product

Sony Ericsson type AAD-3880003-BV

and in combination with FOMA global AC charger 01(MODEL:MAS-BH0008-A 002), to which this declaration relates is in conformity with the appropriate standards EN 301 511:V9.0.2, EN 301 908-1:V2.2.1, EN 301 908-2:V2.2.1, EN 301 489-24:V1.3.1, EN 301 489-7:V1.3.1, EN 301 489-3:V1.4.1, EN 302 291-2:V1.1.1, and EN 60950-1:2006, following the provisions of, Radio Equipment and Telecommunication Terminal Equipment Directive **1999/5/EC**

Lund, May 2008

CE0682

Signature .....

Yukio Kubota, Head of Product Business Unit JAPAN

われわれは R&TTE 指令の要求事項を満たしています(**1999/5/EC**)
We fulfill the requirements of the R&TTE Directive (**1999/5/EC**)

Export Administration Regulations

This product and its accessories may be subject to the Japan Export Administration Regulations (the “Foreign Exchange and Foreign Trade Law” and its related regulations). When exporting this product and its accessories, take the required steps at your expense and under your responsibility. For more details, contact the Ministry of Economy, Trade and Industry (METI).

Index/Quick Manual

Index 396
Quick Manual 408

Index

Index search

- This index has the function as an alphabetical list of contents. Not only can you find the words in this manual, but you can also the words that summarizes content of description. Try to search for another keyword if the words that wants to know is not collected.

<Example 1: To set the keypad lock to “ON”>



<Example 2: When you cannot answer a received call immediately>

<Example 3: When the keyword is described by another term>

- “Function menu” index comes after “Alphabetical/Numerical/Kana” index. When you search the item of function menu (p.37), use this index.

Alphabetical/Numerical/Kana

A

A mode (2in1) 320
AC adapter. 42
Accessories/Options 363
A-Continuous mode 124
Activating 1Seg 210
Add bookmark 142
Add shortcut icon 95
Add to phonebook 140
Adding a new word (Own dictionary) . .309
Adding “186”/“184” 56
Additional service (network services) . .324
Address→Mail address
Adjusting the volume 61
i-αppli vol. 189
Ring tone 61
Volume 61
After returning to Japan 335
After-sales service 375
Alarm details (check) 290
Alarm notification
Priority 289
Reconnection 58
Signal quality 85
Alarm notification actions . . 290, 295
Alarm setting 289
Alarm tone
pre-installed 82
stop 289
Alarm (Timer) 284
Animation (create) 230
Animation (playback) 231
Answer hold. 62
Answer setting. 60
Any key answer 60
Area Mail (Early warning) 181
Area Mail setting 182
Area Mail (Storage capacity) 386
AT Commands. 329
Attach file
Download selectively 166
Save 166
Send 160
Auto answer setting 299
Auto Decomail-picture (download) . . .146
Auto power ON/OFF 45
Auto receive (Mail/Message) 162
Auto redial as voice 67
Auto replay (i-motion) 152
Auto reset total cost 294
Auto save set (Movie) 127
Auto save set (Still image) 123
Auto timer 128
Auto-display setting 148
Auto-sort settings (Mail) 174
Auto-start set (i-αppli) 197
Auto-start time (i-αppli) 197
Auto-update (Software Update) 379
AV Phone To function 147
Available services overseas 333

B

B mode (2in1). 320
Background play. 280
Backlight. 90
Bar code reader 129
Bar incoming when roam (Overseas) . . 338
Basic channel (i-Channel) 153
Basic operation 34
Battery
Attaching/removing the battery pack . . 41
Battery pack life 41
Charging the FOMA terminal . . 41
Checking battery level. 44
Low-voltage alarm 44
Power saver mode 90
Usage time 42
Blocking noise (Noise reduction) . . 58
Booking program
G-GUIDE EPG Remote Control. . 194
1Seg 214
Bookmark. 142
Copy from microSD to Phone . . 249
Copy from Phone to microSD . . 248
PIM data display 247
Saving the attached file 167
Send attach file. 160
Storage capacity. 386
Brightness
Camera. 123
My picture 232
Videophone. 50
Brightness (Edit image) 232

C

CA certificate 138
Cable connection (USB). 260
Cache. 139
Calculator. 295
Calendar (standby screen). 89
Call acceptation (Restrictions) . . 112
Call charge (setting the upper limit) . . 294
Call Forwarding 314
Call forwarding (Restrictions) . . . 112
Call Forwarding(Int.). 338
Call rejection (Restrictions) 112
Call setting w/o ID 114
Call Waiting 313
Caller ID Notification
Basic setting 46
Caller ID Request. 316
Caller ID req. (Int.) 338
Camera
Activate 118
Guide to the shooting screen . . . 121
How to use the camera 118
Key operation 121
Notes on using 118
Shooting settings 128
When using the microSD card . . . 119
Canceling operation. 35
case conversion. 306
CD-ROM for FOMA SO706i 329
Chaku-moji 55
Chaku-Uta-Full®
Acquire 272
Move among Phone/microSD. . . 250
Play 273
Pre-installed data 82
Save 272
Chance capture 128
Change i-mode Password 141
Change rcv. type (mail) 157
Change security code 101
Change size (Edit image) 232
Change skin. 279
Changing menu icon 91
Changing the certificate host. . . . 151
Changing the main menu 33
Changing the Ring Tone 84
Changing window (Entering text
divided screen) 303
Channel list (i-Channel). 153
Channel setting (One-Seg) 209
Chapter list 270
Character
Changing the conversion range . . 305
Common phrases. 307
Convert. 305
Copy. 308
Cut 308
Delete. 307
Kuten code 309
Line feed 306
Paste 309
Pict/Sym continuous entry 306
Single-byte/Double-byte 306
Switching upper/lower case . . . 306
Type/thickness/size 93
Character assignment (5-touch/2-touch) . . . 350
Character entry 301
Clear learned 310
Download dictionary setting . . . 310
2-touch 310
5-touch 304
Character entry (edit) screen . . . 302
Character input mode (5-touch/2-touch). . . 303
Character stamp (Edit image) . . . 232
Chara-den
Display. 237
Download. 146
For videophone 66
Guide to the Chara-den list . . . 237
Operation. 238
Shooting 239
Storage capacity 386
What is Chara-den?. 237
Chara-den setting 50
Chara-den settings priority 71
Charge (setting the upper limit). . 294
Charge sound 85
Charging the FOMA terminal 41
Check i-mode settings 148
Check new messages
Mail/Message 164
Set. 179
Check new SMS 184
Confirm Settings
Restrictions 113
Ring tone/Image 78
Checking an address list. 177
Checking call times and charges. . 293
Checking the i-αppli information . . 189
Checking the i-motion details . . . 152
CHG camera-mode. 122
Choku-Den 78
Clear learned (Character entry). . . 310
Client certificate 138
Clock Alarm Tone set 85
Clock display. 93
Clock setting 45
Close-up mode 118
CLR (CLR) key 35
Column search (Phonebook) 74
Common phrases 359
Communication mode. 251
Component names and functions . . 24
Composite image (4 images) . . . 230
Continuous mode 124
Continuous standby time 42
Continuous talk time 42
Convert readings to kanji 305
Cookie settings 222
Copy
Character. 308
From microSD to Phone 249
From Phone to microSD 248
To the different folder in the microSD . . . 250

Copy to microSD
Images, etc. 249
Phonebook, etc. (PIM data) . . .248
Copy to phone
Images, etc. 250
Phonebook, etc. (PIM data) . . .249
Copy to the FOMA terminal
Images, etc. 250
Phonebook, etc. (PIM data) . . .249
Copyright 20
Correct backlight (Edit image) . . .232
Cost limit setting. 294
Country code 332
Cut (Text) 308

D

Data Box
Folder structure 224
Folder (create/delete/edit) 253
Data broadcast. 212
Data Communication 325
Data exchange (OBEX™ connection) . . .326
Data security serv. 115
Image 229
Mail. 176
Phonebook 79
Datalink software→DOCOMO keitai datalink
Date setting 45
DC adapter. 42
Deco-mail
Compose/send 158
Compose/send (Template) 159
Decomail-picture (download) 146
Decorate PI 157
Delete
Bookmark 143
Channel list. 210
Character 307
Chara-den. 238
Cookie (Full Browser) 222
Delete all bookmarks 142
Delete all images (own data) . .253
Delete all mails (read/received/sent) . .173
Delete all melodies (own data) . .253
Delete all movies (own data) . .253
Document 262
Document viewer 262, 266
Download dictionary 310
Folder (microSD) 253
Folder (Phone) 253
i-αppli 188
Image 229
Kisekae Tool 243
Mail 175, 176
Melody 242
Message 180
Movie/i-motion 234
Music 274
Music&Video Channel 270
Own dictionary 309
PDF data 262
Phonebook (detail screen) 76
Phonebook (list screen) 74
Playlist (music) 275
Received calls 54
Record message/Voice memo/VP message . . .66
Redial/Dialed calls 54
Screen memo 144
shortcut icon 96
Storage area 215
Template 160
Text memo 296
To Do list 288
ToruCa 205
URL history 142
Video 236
Voice 293
1Seg (Booking program/Timer recording) . .215
Delete receiver 157
Description (Operation procedure). . 36
Desktop holder 43
Dial lock. 102
Dialed calls 53
Dictionary 296
Dictionary setting (Download dictionary). . .310
Dictionary (download) 146
Digital broadcasting. 208
Display
Backlight 90
Color pattern/background 91
Font 93
How to view the display 27
Shield view. 90
Display design. 91
Display during dialing/receiving calls . . .88
Display during dialing/receiving videophone calls 88
Display during mail/message checking . . .88
Display operator name (Overseas) . .337
Display setting. 67, 88
Display when the FOMA terminal is turned on . .88
Display while receiving a call. 59
Displaying menu 91
Displaying SSL pages 138
Disp. call/receive No. 90
Disp. phonebook image. 89
Disp. Software info (i-αppli). 186
DOCOMO CA certificate. 138
DOCOMO keitai datalink 329
Document viewer 263
Display. 263
Guide to the document list . . .263
Operation. 263
Scroll 264
Searching for text 264
Double-byte 306
Download
Chaku-Uta-Full® 272
Chara-den 146
Charged contents 144
Client certificate. 150
Decomail-picture 146
Dictionary 146
i-αppli 186
Image 144
i-melody. 145
i-motion 152
Kisekae Tool 146
PDF data 145
Template 146
ToruCa. 146
Download dictionary setting 310
Downloading charged contents. . . 144
Downloading remaining data
Chaku-Uta-Full® 272
i-motion 233
Kisekae Tool 242
Downloading the program. 269
DPOF setting 252
Driving mode→Public mode
Dual mode (2in1) 320
Dual Network 316

E

Early warning “Area Mail” 181
Earphone/microphone with switch . . 298
Earpiece volume adjustment 61
Earthquake early warning. 181
Easy search 4
Edit
Draft mail. 161
Image 231
Movie/i-motion. 235
Phonebook 76
Edit file name
Image 228
Melody. 241
Movie/i-motion. 234
Edit image. 231

Edit title
Bar code reader 130
Bookmark 143
Chara-den 238
Document 262
Download dictionary 310
Image 228
Melody 241
microSD 248
Movie/i-motion 233
Music&Video Channel 271
Original animation 231
PDF data 262
Screen memo 144
Shortcut icon 95
Template 160
Video 236
Edit (Mail) 176
English display 45
English Guidance 316
Entering a mail address from the address list 156
Entering a mail address from the phonebook 156
Entering common phrases 307
Entering numbers 35
Entering security code 35
Enter/add an address 156
Erase/play memo (voice/movie) . . 65
Error message list 368
Export administration regulations . . 394

F

Face marks list 358
Favorite channel (i-Channel) . . . 153
FeliCa 202
FeliCa mark (おサイフケータイ)
Acquire ToruCa 204
IC card authentication 111
iC communication 259
Osaifu-Keitai 203
File attached mail 160
File restriction 228
File size 122
Filter function
Mail 175
Message 180
To Do list 288
ToruCa 205
FirstPass setting 150
Flash movie 140
Folder lock 112
Folder (create/delete/edit)
Bookmark 142
Data Box 253
Mail 173
microSD 253
FOMA card (UIM)
Add to phonebook 70
Insert/remove 39
Managing SMS 254
Managing the phonebook entry . . . 254
Manufacturer number 137
Security code 100
Security function (Operational restriction function) . . 39
Setting for replacing 40
Type 40
Font 93
Font size
CHG input size 303
Font 93
Font size (i-mode) 148
Font size (Mail) 178
Phonebook (Big font/Standard font) . . . 74
Ticker size setting (i-Channel) . . 154
Format (microSD) 251
Forward (Mail) 165
Forwarding image 260
Frame (Edit image) 232
Framed photography 126
Full Browser 217
How to view the screen 218
Operations on the screen 219
Full Browser settings 221
Function display 32
Function menu 37

G

Go to location 141
GPRS network 332
Group search (Phonebook) 74
GSM network 332
Guide to screens
Document view 263
Full Browser 218
Music Player 277
PDF data 262
Rec. Chara-den 239
Shooting 121
ToruCa display 204
Videophone 49
1Seg 210
Guide to the PDF list 262
Guide to the shooting screen (camera) . . 121

H

Handling with care 18
Hands-free switch (videophone) . . 67
Hands-free (switch during a call) . . . 52
Header/Signature 179
Headset sw to dial 298
Headset usage setting 85
High-speed Ir send (IrSS) 258
Holding (during incoming call, talking) . . 62
Holiday (check) 287
Home URL (i-mode) 148
Host selection (i-mode) 149
How to refer to this manual 1
How to use the function keys 32
How to view the main menu 29

I

i-αppli 185
Adjusting the volume 189
Auto-start set 197
Auto-start time 197
Checking the security error history . . . 189
Delete 188
Download 186
Installed software 190
Launch (from a site/mail) 197
Storage capacity 386
Upgrade 199
i-αppli info
Launch/quit 187
Mail-linked i-αppli 186
What is an i-αppli? 186
i-αppli stand-by screen
End stand-by info 199
Release 199
Set 198
IC card authentic 111
IC card lock setting 206
iC communication 259
FeliCa mark (おサイフケータイ) 259
Send/Receive all data 260
Send/receive one data 259
IC lock (power-off) 206
iC Transfer Service 202
iC trans. all (iC communication) . . . 260
i-Channel setting 154
Icon description
Activate 1Seg screen 210
Display 27
Document viewer 263
i-αppli 189
Image 139

Image/movie 226
Kisekae Tool 243
Mail detail screen 172
Mail folder list screen 171
Mail list screen 171
Melody 241
MessageR/F screens 180
Music 273
Music&Video Channel screen. . .269
My shortcut (paste). 94
My shortcut (providing information) . .94
Overseas use 333
PDF data 262
Received calls/missed calls 53
Redial/Dialed calls 53
Ring tone/Image 77
Shooting menu 122
Shooting screen (camera) 121
Text entry (edit) screen. 302
Tool bar (Document view). 263
Tool bar (PDF data) 264
TV link list 213
Vibrator 84
Video player 236
Videophone screen. 49
Icon operation
Icons setting 96
My shortcut icon 95
Icons setting. 96
Illumination flash (shooting) 119
Illumination priority. 93
Illumination set 92
Illumination (for missed call/new mail) . .64
Image
Copy from microSD to Phone. .250
Copy from Phone to microSD. .249
Delete 229
Display (microSD). 248
Display (Phone) 225
Download 144
Edit 231
Move. 228
Save (from site/message). 144
Saving the attached file 167
Send attach file. 160
Shooting 123
Size. 119
Storage capacity. 386
Switching list display mode. . . .226
Titles and file names. 228
Image display in the picture list . . .35
Image effect (Edit image). 231
Image priority 83
Image stamp (Edit image) 232
i-melody (download) 145
iMenu. 136
i-mode host 149
i-mode info
Displaying SSL pages 138
Image display. 139
Jumping to previous/next pages . . 139
Operations for viewing sites . . . 139
Scroll function 139
Start/exit. 136
Viewing the iMenu screen 136
What is i-mode?. 136
i-mode mail→mail
i-mode malfunction check 377
i-mode menu 136
i-mode password 100
i-mode settings 148
i-mode settings (reset). 148
i-motion
Automatic replay 152
Copy from microSD to Phone. . . 250
Copy from Phone to microSD. . . 249
Delete 234
Download. 152
Edit. 235
Folder (create/delete/edit) 253
Move 234
Move among Phone/microSD . . 250
Playback (microSD) 248
Playback (Phone). 233
Save (from site) 152
Saving the attached file 167
Send attach file 160
Storage capacity 386
Trimming (Edit i-motion). 235
What is i-motion? 151
Inbox 170
In-Call Function Selection 317
In-car Hands-free 59
Incoming Call Mng 317
Indicator display (setting) 92
Info notice setting 64
Infrared data exchange 257
High-speed Ir send (IrSS™). . . 258
Infrared data port 257
Send/Receive all Ir data. 258
Send/receive Ir data. 258
Infrared remote control 261
Initial setting 45
Initialize 300
Initialize→Reset
Intellectual property right. 20
International Access Code 334
International calls 51
International ID Code 334
International roaming 332
Internet connection. 141
Interval/number for shooting
(continuous mode) 125
Int'l dial assistance 52
ISP connection 149

J

JAN code 129

K

Key operation
Holding down. 26
How to use the function keys . . 32
Key names and functions 24
Short cut key function 30
Key (Character assignment) 350
Keypad light setting 90
Keypad lock 110
Kisekae Tool
Download 146
Manage 242
Set. 97
Storage capacity 386
Kuten code 309
Kuten code list→Refer to the provided CD-ROM

L

Large Menu. 33
Launching i-αppli from a mail . . . 198
Launching i-αppli from a site . . . 198
Launching i-αppli from Data broadcast . . 198
Launching i-αppli from IC card . . 198
Launching i-αppli from ToruCa . . 198
Launching i-αppli with Infrared
data exchange 198
Launching i-αppli with the Bar
code reader 198
Lens selector switch 118
Light setting (backlight). 90
Line feed. 306
Location information 148
Lock function
Call setting w/o ID 114
Dial lock/Omakase Lock 101
IC card authentic. 111
IC card lock setting 206
Keypad lock. 110
Mail box lock/Folder lock 112
Original lock 106

Reject unknown 114
Restrictions 112
Ring time (sec.) 114
Secret (data only) mode 103
Secret folder 104
Self mode 115
Side key guard 112
Lower case 306

M

Macro lens 118
Mail address
Search (Phonebook) 74
Store (receiver's/sender's address) . . 166
Mail address storing 166
Mail box lock 112
Mail info
Changing the list screen display mode . . . 170
Changing the mail character size . . 170
Compose/send 156
Displaying mail menu 156
Guide to the folder list screens . . 171
Guide to the mail detail screens . . 172
Guide to the mail list screens . . 171
Mail display (Mail box) 170
Read out mail 168
Viewing new i-mode mail 163
What is i-mode Mail? 156
When you receive a message . . 162
Mail message (send/receive)
Auto receive mail 162
Edit 176
Forward 165
Receive option 164
Reply 165
Resend 176
Send (from a site/mail) 147
Sending draft i-mode mail 161
View (new message) 163
Mail settings
Auto-sort settings 174
Check settings 178
Display during sending/receiving mails . . 88
Mail box lock/Folder lock 112
Mail Setting 178
Mail/Msg. ring time 85
Reset mail settings 178
Set check new messages 179
Mail To function 147
Mail (compose)
Change rcv. type 157
Delete receiver 157
Entering an address from Mail member . . 156
Saving i-mode mail 161
Send attach file 160
Mail (manage)
Copy from microSD to Phone . . . 249
Copy from Phone to microSD . . . 248
Delete 175, 176
Display (Inbox) 170
Folder (create/delete/edit) 173
Move (among folders) . . . 175, 176
No. of messages 173, 175
PIM data display 247
Protect ON/OFF 175, 176
Saving the attached file 166
Search 175
Storage capacity 386
Storing addresses in mail members . . 162
View (unread mail) 163
Mail (Ring tone)
Adjusting the volume 61
Priority 83
Ring time 85
Select 82
Mail-linked i-αppli 186
Main menu change 91
Main menu (sort) 284
Making phone calls 48
Chaku-moji 55
Choku-Den 79
Dialing 48
Earphone/microphone with switch . . 299
From site/mail 147
International calls 51
Overseas Use 335
Phonebook 73
Received calls 53
Redial/Dialed calls 53
Two-touch dialing 79
Malfunction check (i-mode) 377
Malfunction checklist 364
Manner mode 86
Manner mode set 86
Manner mode when earphones are connected . . . 87
Marker stamp (Edit image) 232
Marking a checkbox 38
M-Continuous mode 124
Melody
Copy from microSD to Phone . . . 250
Copy from Phone to microSD . . . 249
Delete 242
Download 145
Folder (create/delete/edit) 253
Move 242
Operations during playback . . . 241
Playback (microSD) 248
Playback (Phone) 240
Playlist 242
Pre-installed data 82
Save (from site) 145
Saving the attached file 166
Send attach file 160
Storage capacity 386
Titles and file names 241
Melody Call setting 84
Melody linkage (vibrator) 84
Memory card→microSD
Memory info
Booking list 215
Chara-den list 238
Document list 262
Image list 228
Melody list 241
Movie list 234
Movie mode 127
PDF list 262
Still image/continuous mode . . 123
Video list 236
Memory No. search (Phonebook) . . 74
Menu display set 91
Menu function list 340
Menu numbers for function display . . . 32
Menu operation description 36
Message
Auto receive mail 162
Delete 180
No. of messages 180
Protect ON/OFF 180
Set check new messages 179
Storage capacity 386
View (read/new message) 180
Message display (Mail settings) . . 178
Message info
Icon description 180
When you receive a message . . 179
Message list display 148
Message (Ring tone)
Adjusting the volume 61
Ring time 85
Select 82
microSD
Data that can be copied 246
Displaying images, etc. 248
Displaying phonebook ,etc. (PIM data) . . 247
Folder structure 244
Folder (create/delete/edit) 253
Format 251
Handling with care 243

Insert/remove 244
Storage capacity 246
microSD card→microSD
microSD data (i-αppli) 200
microSD manager 247
microSD mode 251
microSD reader/writer 252
microSD software 199
Missed call
Check 64
Checking the number of missed calls . . .53
Illumination information 64
Record 53
Setting the notification tone 64
Missed calls display 114
Mobile phone manufacturer number . . .137
Movable contents 250
Move (among folders)
Bookmark 143
Image 228
Mail 175, 176
Melody 242
Movie/i-motion 234
Music 274
ToruCa 205
Move (among Phone/microSD)
Chaku-Uta-Full® 250
Movie/i-motion 250
Movie
Copy from microSD to Phone . .250
Copy from Phone to microSD . .249
Delete 234
Edit 235
Move 234
Move among Phone/microSD . .250
Movie playing software (for PC) . . .363
Playback (microSD) 248
Playback (Phone) 233
Playlist 234
Send attach file 160
Shooting 126
Shooting time 120
Storage capacity 386
Titles and file names 228
Movie mode 126
MTP mode 252
Multi access 282
Multi access combination patterns . .360
Multi Number 319
Multi window 140
Multiple-choice 38
Multitask 283
Music Player 277
Guide to Music Player screen . .277
Operations during playback . . .278
Play 273
Playlist 275
Music&Video Channel 268
Music&Video Channel (Storage capacity) . .386
My document 261
My Menu 141
My picture
Display 225
Folder (create/delete/edit) 253
My Profile
Checking your own phone number . . .46
Display 290
Send attach file 160
Store 291
My select 92
My select display 31

N

Name search (Phonebook) 74
Network re-search (Overseas) . .337
Network security code 100
Network services 311
Additional service 324
Call Forwarding 314
Call Forwarding(Int.) 338
Call Waiting 313
Caller ID Request 316
Caller ID req. (Int.) 338
Dual Network 316
English Guidance 316
Multi Number 319
Nuisance Call Blk 315
OFFICEED 324
Remote access(Int.) 338
Remote Control 318
Roam. Guidance (Int.) 338
Service Numbers 317
Voice Mail 312
Voice Mail(Int.) 338
2in1 320
New mail
Display 163
Illumination information 64
Setting the notification tone 64
Noise reduction 58
Notes on shooting 118
Notice designate calls 294
Notification tone
Charging 85
Key 85
Missed call/new mail 64
Notify Caller ID 56
Calling with “186”/“184” added . . .56
Setting for each dial 56
Now update (Software update) . .380
No. of messages
Mail 173, 175
Message 180
Screen memo 144
Template 160
Ntfy switch-mode 67
Nuisance Call Blk 315
Nuisance Call Blocking priority . .116
Number of data that can be protected . .386
Number/Address A (2in1) 320
Number/Address B (2in1) 320
NW search mode (Overseas) . . .336

O

OBEX™ connection 260, 326
OFFICEED 324
Omakase Lock 102
Online timer recording
(Gガイド番組表リモコン) 194
Open tab setting (i-mode) 148
Operation description in this manual . . .36
Operation descriptions 36
Operation for incoming calls when
the Public mode is set 63
Operations during playback
Melody 241
Music Player 278
Video player 237
Optional equipment 22
Options/Accessories 363
Original animation (playback) . . .231
Original animations (create) 230
Original lock 106
Original manner mode 88
Osaifu-Keitai 202
IC card lock setting 206
Read/write data 202
Using Osaifu-Keitai 203
Osaifu-Keitai i-αppli 202
Outbox 170
Own dictionary 309

P

Packet communication 326
Page display
Bookmark 142
From site/mail 147
i-Channel 153

i-mode site 136
Multi window 140
My Menu 141
Screen memo 143
URL history 138, 141
Website 141
Website designed for PC 218
Password change (i-mode) 141
Paste (Text) 309
Pasting desktop icons 95
Pattern data update 384
Pause dial 57
PC Connection 325
PDF data 261
Clipping a page 266
Display 261
Download 145
i-mode bookmark 265
Operation 263
Save 145
Scroll 264
Searching for text 264
Phone call (Ring tone)
Adjusting the volume 61
Priority 83
Select 82
Phone number
Check (your own) 46
Re-entering phone numbers . . . 48
Search (Phonebook) 74
Phone number notification 46
Phone To function 147
Phonebook 69
Add entries (from other screens) . . 72
Add entries (Phone, UIM) 70
Call acceptation 112
Call forwarding (Restrictions) . . 112
Call rejection 112
Compose message 157
Copy from microSD to Phone . . 249
Copy from Phone to microSD . . 248
Delete (detail screen) 76
Delete (list screen) 74
Difference between phone and UIM . . . 70
Edit 76
List screen (Tab display) 73
No. of phonebooks 76
PIM data display 247
Reject unknown 114
Renaming group name 72
Restrict dialing 112
Ring tone/Image 77
Saving the attached file 167
Search 73
Secret code setting 75
Secret data 103
Send attach file 160
Storage capacity 386
Stored data 70
Storing data from sites 140
Voice mail (Restrictions) 112
Photo mode 122, 123
Pictographs list 353
Pict/Sym continuous entry 306
Picture→Image
Picture 226
PIN code (PIN1/PIN2) 100
PIN setting 101
Play
Recorded memo/voice memo . . 65
Video player 235
Voice 293
Playlist 275
Play/erase recorded messages . . . 65
Play/erase voice memo 65
PLMN setting (Overseas) 337
Portrait right 20
Power ON/OFF 44
Power saver mode 90
Precautions 12
Prefer attachment 178
Prefix 57
Pre-installed data
Chaku-Uta-Full® 82
Common phrase 359
i-αppli software 190
Kisekae Tool 97
PDF data 261
Ring tone/melody/alarm 82
Preview screen 233
Preview (SMS) 183
Print setting (microSD) 252
Priority of functions
Alarm notification 289
Chara-den setting 71
Illumination 93
Nuisance call blocking functions . . 116
Ring tone/Image 83
Standby screen 89
Vibrator 84
Program playback (Music&Video Channel) . . . 270
Program setting (Music&Video Channel) . . . 268
Protect
Mail 175, 176
Message 180
Screen memo 144
Public mode (Driving mode) 62
Public mode (Power OFF) 63

Q

QR code 129
Quality alarm 85
Quality setting (camera) 122
Quick Info setting 216
Quick Manual 408
Quick message 65
Quick silent 60
Quotation mark 179
Quote My Profile 307
Quote phonebook 307

R

Reading out alarm contents 290
Reading out rules 168
Reading search (Phonebook) 74
Receive option (Mail) 164
Received address list 177
Received calls 53
Receiving display (set) 88
Receiving operation (Public mode) . . . 63
Receiving phone calls 59
Receiving phone calls (Earphone/microphone with switch) 299
Receiving phone calls (Overseas) . . 336
Receiving setting (Mail) 178
Reception level (Signal strength) . . . 44
Reconnect signal 58
Record
Voice 293
Voice memo 292
Record message setting 65
Redial 53
Referer setting 222
Refresh skin tone (Edit image) . . 232
Registered trademark 20
Registering a channel list 209
Reject unknown 114
Release
Dial lock 102
i-αppli stand-by screen 199
Mail protect 175, 176
Manner mode 86
Message protection 180
PIN lock 101
Protect for screen memo 144
Public mode (Driving mode) . . . 62
Public mode (Power OFF) 63
Restrictions 112
Secret code 75

Secret data 103
Secret (data only) mode 103
Vibrator 84
Release PIN lock 101
Releasing Keypad lock temporarily . . .110
Remaining data acquisition
Chaku-Uta-Full® 272
i-motion 233
Kisekae Tool 242
PDF data 145
Remote access(Int.) 338
Remote control function 261
Remote Control (Network service) . .318
Renaming groups (phonebook) . . .72
Reply with quote (Mail) 165
Reply (Mail) 165
Resend (Mail) 176
Reserved update (Software update) . . .381
Reset
Auto reset total cost 294
Clear learned 310
i-mode settings (reset) 148
Initialize 300
My profile 291
My shortcut 96
Reset channel setting 215
Reset (Full Browser) 221
Reset i-Channel 154
Reset mail settings 178
Reset menu op. log 91
Reset My select 92
Reset settings 299
Reset total 294
Reset TV setting 215
Reset channel setting 215
Reset desktop 96
Reset i-Channel 154
Reset menu op. log 91
Reset settings 299
Reset total (call time/charge) 294
Restrict dialing 112
Restrict dialing (Restrictions) 112
Restriction
Dial lock/Omakase Lock 101
IC card lock setting 206
Keypad lock 110
Original lock 106
Restrict dialing 112
Self mode 115
Side key guard 112
Restrictions 112
Restrictions (release) 112
Retouch (Edit image) 231
Ring time (sec.) 114
Ring tone
Adjusting the volume 61
Increasing (Step) 61
Pre-installed data 82
Priority 83
Ring time (mail/message) 85
Silent 61
Ring tone/Image 77
Ring tone/Image (Check settings) . .78
Roam. Guidance (Int.) 338
Rotate (Edit image) 232

S

SAR (Specific absorption rate) . .387
Save address 166
Save image 167
Save i-motion 167
Saving movies 119
Saving still images 119
Scanning function 383
Schedule 285
Adding holidays and anniversaries . . .286
Alarm notification actions 290
Check 287
Clock Alarm Tone set 85
Copy from microSD to Phone . . .249
Copy from Phone to microSD . . .248
Display mode (monthly/weekly) . .286
PIM data display 247
Saving the attached file 167
Secret data 103
Send attach file 160
Storage capacity 386
Store 285
User icon setting 286
Screen memo 143
Scroll function
Document viewer 264
i-mode 139
PDF data 264
Scroll function (i-mode) 139
Scroll setting (i-mode) 148
Scroll setting (Mail) 178
Search all (Phonebook) 74
Search column (Phonebook) 74
Search group (Phoneboook) 74
Search (Phonebook) 73
Searching menu items 31
Secret code setting 75
Secret data 103
Secret data releasing 103
Secret folder 104
Secret folder function 105
Secret (data only) mode 103
Secret (data only) mode releasing . .103
Security code 100
Change 101
Entry method 35
Security codes for the FOMA terminal . .100
Security error history (i-αppli) . . .189
Security scan→Scanning function
Select image 67
Select language 45
Select microphone 298
Select ring tone 82
Select size 122
Select to save 123, 127
Selecting items with dial keys 34
Selecting multiple items 38
Selecting ON/OFF 34
Selecting the menu 29
Selecting the shooting menu . . .122
Selecting YES/NO 34
Self mode 115
Send DTMF tone 50
Sending all data (Infrared data exchange) . . .258
Sending one data (iC communication) . .259
Sending one data (Infrared data exchange) . .258
Sending push signals 57
Sending the manufacturer number (i-mode) . .137
Sent address list 177
Sent/received data (data exchange) . .256
Service Numbers 317
Services available for the FOMA terminal . .362
Service(Int.) 338
Session number (data exchange) . .257
Set auto-update (Pattern data) . .384
Set connection timeout (i-mode) . .149
Set hold tone 62
Set i-αppli To 197
Set image disp. (i-mode) 148
Set in-call arrival 317
Set main time 46
Set mute seconds 114
Set sub clock 46
Set time 45
Setting backlight 90
Setting the clock display (standby screen) . .93
Setting when folded 61
Shield view 90
Shooting
Compose message 126
Continuous mode 124
Movie 126
Still image 123

Shooting indicator (Flashing) . . . 119
Shooting menu icons 122
Shooting settings 128
Short cut key function. 30
Short message→SMS
Shot image (display). 225
Side key guard 112
Signal strength (Reception level) . . 44
Silent (Erase)
Recorded memo/voice memo . . 65
Ring volume 61
Voice announce 293
Simple Menu 33
Simple Menu function list 349
Single-byte 306
SMS
Compose/send 182
Copy from microSD to Phone . . 249
Copy from Phone to microSD . . 248
Preview (sent mail) 183
Receive. 183
SMS center selection 184
SMS input char. 183
SMS report req. 183
SMS settings 178
SMS valid. per. 183
Software
DOCOMO keitai datalink 329
Software key→Function key
Software Update 377
Sort→Sort function, Filter function
Sort function
Document 262
Image 228
Mail 175
Melody 242
Message 180
Movie/i-motion 234
Music 274
PDF data. 262
Phonebook 74
Template 160
To Do list 288
ToruCa 205
Sound effect 84
Sound effect (i-mode). 148
Special character 352
Specific absorption rate (SAR). . 387
Specifications 385
Standard lens 118
Standard type i-motion 151
Stand-by book 9, 89
Standby screen
Display setting 89
Priority 89
Return to the standby screen . . . 35
Standby screen (i-αppli) 198
Start attachment (auto) (Mail settings) . . 178
Start attachment (auto) (Message) . . . 148
Still image
Copy from microSD to Phone . . . 250
Copy from Phone to microSD . . . 249
Display (microSD) 248
Display (Phone) 225
Edit 231
Shooting 123
Storage capacity 119
Storage area for broadcast 208
Storage capacity for music data . . . 386
Storage capacity for screen memo . . . 386
Storage capacity (respective data) . . . 386
Store common phrases 308
Storing phone number/mail address on sites 140
Storing receiver's address (Mail address) 166
Storing WMA data 276
Storing/displaying personal data . . 290
Streaming type i-motion. 151
Style-Up® panel 9
Sub-address setting. 58
Super silent 86
Switch to BGM. 280
Switching pages 34
Switching screens (Text entry divided screen) 303
Switching the network 336
Symbols list 352

T

Tab display setting 148, 221
TALKMAN 298
Template
Download 146
No. of messages 160
Storage capacity 386
Text memo 296
Text reader. 131
Theme change. 91
Ticker. 153
Ticker color setting. 154
Ticker display setting 154
Ticker speed setting. 154
Time signal (Indicator display) 92
Timer (Alarm). 284
Title list (Image) 226
Title list (Movie). 233
TLS 218
To Do list 288
Alarm notification actions 290
Check 289
Clock Alarm Tone set. 85
Copy from microSD to Phone . . 249
Copy from Phone to microSD . . 248
Storage capacity 386
Store 288
Tone
Charge sound 85
Keypad sound 85
Missed calls/New mail 64
ToruCa 203
Acquire 204
Copy from microSD to Phone . . 250
Copy from Phone to microSD . . 249
Display. 204
Display (microSD) 248
Download. 146
Guide to the screen 204
Saving the attached file 167
Send attach file 160
Set 206
Storage capacity 386
ToruCa viewer 204
Trademark 20
Trimming (Edit image) 232
Turning the FOMA terminal on/off . . 44
TV link. 213
TV remote control 261
Two-touch dialing 79

U

UIM→FOMA card
UIM operation 254
Universal Number International ID Code . . 334
Updating pattern data 384
Updating playback restrictions (Uta-hodai) . . . 272
Updating Software 377
Upgrade (i-αppli) 199
Upper case 306
URL entry 141
URL history 138, 141
USB cable connection. 260
USB mode setting. 251
Use phone information (i-mode) . . 149
Using SSL Certificates 149

V

Version (Pattern data) 384
Vibrator 84

Vibrator priority 84
Video
Delete 236
Play 235
Video player 235
Videophone
Answer mode during i-mode 67
Auto redial as voice 67
Chara-den setting 50
External devices 68
Hands-free switch 67
How to view the screen 49
Making videophone calls 48
Play/erase recorded messages . . .65
Receiving 59
Select image 67
Using Chara-den 66
Visual preference 67
When a call is not connected . . .50
Videophone (Ring tone)
Adjusting the volume 61
Select 82
Videophone/voice phone switch (Caller) . .50
Videophone/voice phone switch (Receiver) . .60
View style
How to view the screen (One-Seg) 210
How to view the screen (Video player) 236
Operation (One-Seg) 211
Operation (Video player) 237
Viewer settings 226
Viewing sites
Bookmark 142
From site/mail 147
Full Browser 218
i-Channel 153
i-mode 136
Multi window 140
My Menu 141
Screen memo 143
URL history 138, 141
Voice announce 293
Voice clock 64
Voice Mail 312
Voice mail (Restrictions) 112
Voice Mail(Int.) 338
Voice memo 292
Voice memo(in-call) 292
Voice mode 128
Voice monitor 64
Voice/videophone switch (Caller) . . .50
Voice/videophone switch (Receiver) . .60
V-phone while packet 67

W

Wake-up display setting 88
Warranty and after-sales service . . 375
WEB Mail 157
Web To function 147
Website 141
What is Area Mail? 181
What is i-Channel? 153
When the shooting is interrupted . . 119
White balance 123
Word prediction 303
WORLD CALL 51
WORLD WING 40, 332

Z

Zoom adjustment 128

Numerical

1Seg 207
Alarm notification actions 290
Channel list 209
Channel setting 209
Data broadcast 212
G-GUIDE EPG Remote Control . .212
Guide to the 1Seg screen 210
Play a recording 235
Program guide i-αppli 212
Record 213
Timer activation/recording 214
TV link 213
User settings 215
Watch 210
1Seg viewing time (battery) 42
2in1 320
2-touch (Character assignment) . . 351
2-touch (Character entry) 310
3G network 332
3G/GSM setting 336
4 images composite (Edit image) . . 230
5-touch (Character assignment) . . 350
5-touch (Character entry) 304
64K data communication 326

Kana

ｉアプリバンキング 196
iD設定アプリ 195
拡大メニュー (Kisekae Tool) 97
圏外 (out-of-service area) 44
Gガイド番組表リモコン 194
地図アプリ (Map i-αppli) 190
DCMXクレジットアプリ 195
デコ絵つくーる (deco-e maker) . . 190
ドコモテレビ電話ソフト (DOCOMO Videophone Software) 68
はじめてのおつかい for SO 190
FOMA通信環境確認アプリ 196
モバイルGoogleマップ 190
楽オク出品アプリ2 (Rakuten Auction application 2) 196

Function menu

Alarm
Detail 285
List 285
Bar code reader
Reading data detail 130
Reading data list 130
Scanning 130
Bookmark
Folder list 142
List 143
Calculator 295
Channel list 154
Character entry (edit) 306
Chara-den
List 238
Player 238
Shooting 240
Choku-Den 79
Common phrases
Folder list 308
List 308
Continuous mode
Checking 125
Detail checking 125
Shooting 123
Country Code setting 52
Create message list 56
Data Box
Folder list 253
Deco-mail
Template list 160
Template preview 160
Dialed calls 54
Dictionary
Dictionary 297
Reference history 297
Reference result (list/detail) . . . 297
Document
Document view 265
PDF list 262
Download dictionary 310
Draft mail list 162

Exchanging history 80
Full Browser 220
i-αppli
End stand-by info 199
IC card content 188
microSD data list 200
microSD software list 199
Security error history 190
Software list 188
IC card authentic 111
IDD Prefix setting 58
i-motion
Data acquisition 152
Kisekae Tool
Contents checking 98
Package list 243
Set list 98
Mail
Address (list/detail) 177
Detail 176
Folder list 173
List 175
Message 158
New mail 157
Unread mail list 175
Mail member
Detail 162
List 162
Melody
List 241
Melody 241
Message
Detail 181
List 180
microSD
Categories 247
Data detail 248
Data list 248
File list 248
Folder list 253
Movie
List 233
Playlist folder list 235
Movie mode
Checking 127
Shooting 127
Music Player
Music list 274
Player 279
Playlist list 275
Playlist music list 276
Music&Video Channel
Chapter list 270
Music&Video Channel 270
Program list 271
My picture
Image list 228
My picture 228
My Profile 291
My select 92
Network services
Additional guidance 324
Additional service 324
Multi Number setting 319
Voice Mail setting 313
New SMS 183
One-Seg
Booking program list 215
Channel info 210
Channel list 210
One-Seg 211
Timer recording list 215
TV link list 213
Original animation
List 231
Player 231
Original lock
Category list 110
Function list 110
Group list 110
Original theme 92
Own dictionary 309
Pause dial 57
PDF
Data list 262
PDF data 265
Phonebook
Detail 75
Group setting 72
List 74
Photo mode
Checking 124
Shooting 123
Play/Erase msg. (voice/video) 66
PLMN setting 337
Prefix setting 58
Receive Ir data 258
Received calls 54
Redial 54
Restrictions 113
Schedule
List 287
Schedule 285
Schedule/Holiday/Anniversary detail . . . 287
Screen memo
Detail 144
List 144
Shortcut icon
My shortcut (Theme/Detail) 95
Shortcut 95
Site
Sites 137
URL history 138
URL list 142
Text memo 296
Text reader
Reading data (list/detail) 133
Text reader 133
To Do list
Detail 288
To Do list 288
ToruCa
Display 205
Folder list 205
List 205
UIM operation 254
Video player
Video list 236
Video playback 237
Voice announce 293
Voice/Videophone Calls
Enter phone number 49
In-call 49
Ringing 60

Quick Manual

How to use the Quick Manual

The Quick Manual describes basic operations and displays of the FOMA terminal.
To use the Quick Manual embedded in this manual, cut the sheets along the cutting line and fold them as described below. Take the Quick Manual (For Overseas Use) when using international roaming (WORLD WING) abroad.

■How to cut

Cut the Quick Manual sheets along the cutting line.
Use a ruler to cut along the cutting line as described below.
Detach one page at a time so that you do not tear other pages.
* Take care not to hurt yourself when cutting with scissors, etc.

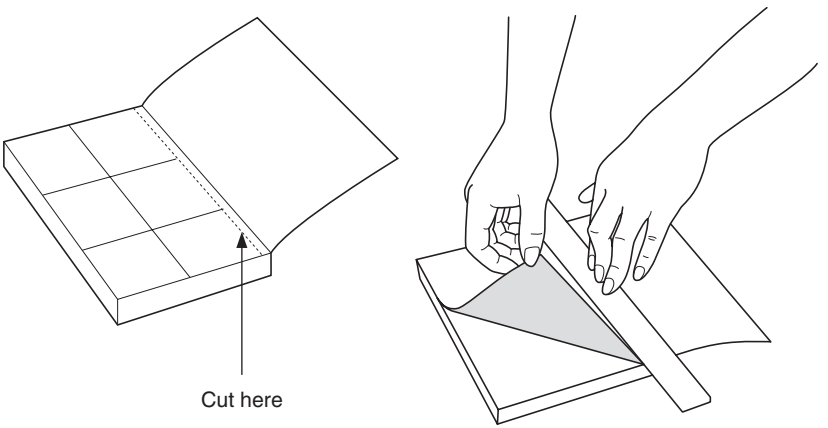

■How to fold

Fold the Quick Manual along with the folding line as described below so that the front cover comes to the front.

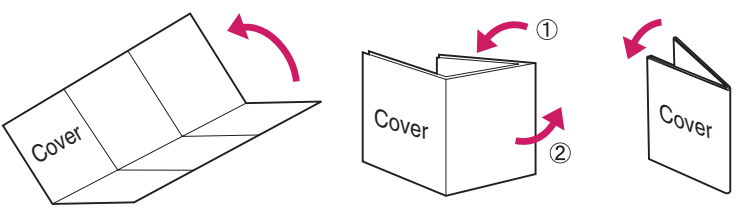

docomo FOMA® SO706i

Quick Manual

○For Inquiries <DOCOMO Information Center>
For DOCOMO mobile phone:

(No prefix) 151 (toll free) (only in Japanese)
* You cannot call this number from an ordinary (landline) phone.
From an ordinary (landline) phone:

0120-005-250 (toll free) (in English)
* Can be called from mobile phones and PHSs.
●Check the phone number carefully before calling.
○For Technical Inquiries
For DOCOMO mobile phone:

(No prefix) 113 (toll free) (only in Japanese)
* You cannot call this number from an ordinary (landline) phone.
From an ordinary (landline) phone:

0120-800-000 (only in Japanese)
* Can be called from mobile phones and PHSs.
●Check the phone number carefully before calling.
●For details, check the "Service station list" provided with the FOMA terminal.

Add to phonebook

1 MENU➔"PHONEBOOK"➔(FUNC)➔"Add to phonebook"

● **To add data from the received calls record**
On the Standby screen➔➔Received calls record entry➔(FUNC) ➔ "Add to phonebook"

● **To add data from the redial**
On the Standby screen➔➔Select the redial➔(FUNC) ➔ "Add to phonebook"

2 **Select the destination➔Enter a name➔Check the reading of the name➔(Set)**

3 **Select items and enter them**

■Group (00 to 19, No Group)
GP <Not stored>➔Select a group

■Phone number (up to 4)
<Not stored>➔Enter phone number➔Select an icon

■Mail address (up to 3)
<Not stored>➔Enter mail address➔Select an icon

■Address
<Not stored>➔Enter zip code➔Enter address

■Birthday
<Not stored>➔Enter birthday

■Memorandums
<Not stored>➔Enter memorandums

■Image
<Not stored>➔Select the photo mode or image

■Chara-den
<Not stored>➔Select Chara-den

■Memory number (000 to 999)
No➔Enter memory number

4 (Finish)
Only name, reading, group, phone number and mail address can be stored to the FOMA card (UIM).

Edit/delete phonebook data

■Edit the phonebook data

Display the phonebook detail screen➔(FUNC)➔"Edit Phonebook"➔Edit the items if necessary➔(Finish)➔"YES" (For the FOMA card (UIM), press (Finish) and select "Overwrite"➔"YES")

■Delete phonebook data

Display the phonebook list screen➔(FUNC)➔"Delete data"➔"Delete this"➔"YES" (Select "YES" again depending on the phonebook)

Character entry

■Character entry (edit) screen

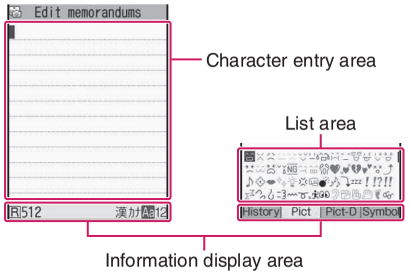

■Switch text entry mode
(FUNC)➔"Input method"➔"Input mode"

■Enter dakuten, han-dakuten
* (one time or more)

■Enter "、" or "。"
(one time or more)

■Change input modes
(Chrct) (one time or more, Selected mode highlights)

● **Single-byte**
Aa→12→漢→カナ

● **Double-byte**
A→1→漢→カ

Cutting line

■Enter pictograph and symbol continuously

ch (Pict/Sym)➜Select pictograph or symbol➜ ✉ (Close) or CLR after entering

■Clear character

Use ✣ to move the cursor onto the character to clear ➜CLR

■Enter space

0 (one time or more)

(Only when the cursor is at the end of the text)

■Insert a line feed

#

(Only when the cursor is at the end of the text)

■Switch the upper case/lower case of entered text

Enter “携帯” on Text memo

■Character entry (edit) screen

MENU➜“LIFEKIT”➜“Text memo”➜● (Edit)➜● (Chrct) (one time or more)➜Switch to “Kanji/hiragana input mode”➜

け➜2 4 times, い➜1 twice,
た➜4 once, い➜1 twice

■Character conversion

➜✣➜Select “携帯” from the candidates

Camera

■Shoot still image

MENU➜“LIFEKIT”➜“Camera”➜“Photo mode”➜ ■ (Record)➜■ (Save)

■Continuous mode

MENU➜“LIFEKIT”➜“Camera”➜“Photo mode”➜✉ (FUNC)➜“CHG camera-mode”➜“Continuous mode”➜“Auto” or “Manual”➜■ (Cont. /Record)➜✉ (FUNC)➜Select saving method

■Movie mode

MENU➜“LIFEKIT”➜“Camera”➜“Movie mode”➜ ■ (Record)➜■ (Stop)➜■ (Save)

1Seg

■Registering the channel list

MENU➜“1SEG”➜“Channel setting”➜“Select area”➜Select area➜Select prefecture

■Switching channel lists

MENU➜“1SEG”➜“Channel list”➜Select channel list

■Viewing 1Seg

MENU➜“1SEG”➜“Active 1Seg”

■Recording 1Seg

On the 1Seg screen, press ● (1 second or longer)➜●

Display still image/movie/play melody

■Displaying a still image

MENU➜“DATA BOX”➜“My picture”➜Select folder➜Select still image

■Playing a movie

MENU➜“DATA BOX”➜“i-motion”➜Select folder➜Select movie

■Playing a melody

MENU➜“DATA BOX”➜“Melody”➜Select folder➜Select melody

Using the Music Player

■Playing the Music

MENU➜“DATA BOX”➜“Music”➜Select folder➜Select music

Making/receiving videophone call

■Make a videophone call

Enter the phone number➜● (V.phone)➜ ☎ after talking

■Receiving a videophone call

When the ring tone sounds and the illumination flashes, press ✆➜☎ after talking

■During a call

●: Switches handsfree on/off

■ (Change): Switches between substitute image and camera image

Cutting line

i-mode mail

Composing/sending i-mode mail

■Compose message screen

✉➔“Compose message”

■Enter an address

“ To ”➔Enter an address

■Enter a subject

“ Sub ”➔Enter a subject

■Enter the message body

“ ▤ ”➔Enter the message body

■Sending the mail

i (Send)➔“OK”

Attaching files

■Attaching an image, i-motion, melody, PDF, document, ToruCa, or other data

Display the new mail screen➔ch (Att.)➔Select an item ➔Select a folder➔Select data

■Attaching phonebook

Display the new mail screen➔ch (Att.)➔“Phonebook”➔ “Phone”➔Search a phonebook➔Select a phonebook

■Attaching My Profile

Display the new mail screen ➔ch (Att.)➔“My Profile” ➔ Enter your security code ➔■ (Set)

■Attaching schedule

Display the new mail screen ➔ch (Att.)➔“Schedule” ➔ Select an item ➔ Select the data ➔■ (Select)

■Attaching bookmark

Display the new mail screen ➔ch (Att.)➔“Bookmark”➔ Select an item ➔ Select a folder ➔ Select the data ➔ ■ (Select)

Receiving i-mode mail

“✉” flashes➔Received results screen appears➔ Select “ ✉ ”

Other mail functions

■Replying mail

Display the mail to reply➔i (Reply) ➔“ ▤ ”➔ Enter message➔i (Send) ➔“OK”

■Forwarding mail

Display the mail to forward ➔✉ (FUNC) ➔“Forward”➔ “ To ”➔Enter a mail address➔i (Send)➔“OK”

Check new messages

✉ (1 second or longer)

Menu function list

Main item	Sub item	Branch item
MAIL	Inbox	
	Outbox	
	Draft	
	Compose message	
	WEB mail	
	Compose SMS	
	Check new messages	
	Receive option	
	Check new SMS	
	Template	
	Mail settings	
I-MODE	iMenu	
	Bookmark	
	Screen memo	

Main item	Sub item	Branch item
I-MODE	URL history	
	Go to location	
	Full Browser	
	i-Channel	
	Message R/F	
	Check new messages	
	Client certificate	
	i-mode settings	
I-APPLI	Software list	
	microSD	
	Auto-start set	
	i-αppli action info	
SETTINGS	Kisekae Tool setting	
	Incoming call	Ring volume
		Select ring tone
		Sound effect
		Vibrator

Cutting line

Main item	Sub item	Branch item
SETTINGS	Incoming call	Manner mode set
		Disp. Phonebook image
		Answer setting
		Mail/Msg. ring time
		Ring time(sec.)
		Info notice setting
		Record message
		Disp. call/receive No.
		Melody Call setting
	Talk	Noise reduction
		Quality alarm
		Reconnect signal
		Set hold tone
		Setting when folded
	Dialing	Pause dial
		Sub-address setting
		Prefix setting

Main item	Sub item	Branch item
SETTINGS	Dialing	Headset sw to dial
		Int'l dial assistance
	Videophone	Visual preference
		Select image
		Auto redial as voice
		Display setting
		Ntfy switch-mode
		Hands-free switch
		V-phone while packet
	Display	Display setting
		Backlight
		Display design
		Font
		My shortcut
		Select language
		My selection
		Menu display set

Main item	Sub item	Branch item	
SETTINGS	Display	Viewer settings	
		Icons description	
		Icons setting	
		Shield view	
		Mail ticker	
	Illumination setting		
	Call time/Charge	Call data	
		Notice designate calls	
		Reset total	
		Auto reset total cost	
	Clock	Set main time	
		Set sub clock	
		Clock display	
		Alarm setting	
		Clock Alarm Tone set	
		Auto power ON	
		Auto power OFF	
	Lock/ Security	Lock	Dial lock
			Original lock
		IC card lock setting	
		Keypad lock	
		Self mode	

Main item	Sub item	Branch item
SETTINGS	Lock/ Security	Secret mode
		Secret data only mode
		Reject unknown
		Call setting w/o ID
		Change security code
		IC card authentic.
		PIN setting
		Scanning function
	i-mode common set	Set connection timeout
		Set check new messages
		Host selection
		SMS center selection
		Certificate
		Certificate host
	i-αppli settings	Disp. Software info
		End stand-by display
		i-αppli vol.

Main item	Sub item	Branch item
SETTINGS	External connection	USB mode setting
		Headset usage setting
		Select microphone
		Auto answer setting
	Int'l roaming set	NW search mode
		3G/GSM setting
		Display operator name
	Other settings	Keypad sound
		Charge sound
		Battery level
		Side key guard
		Character input set
		Holding down ch-key
		Reset settings
		Initialize
		Software Update

Main item	Sub item	Branch item
DATA BOX	My picture	
	Music	
	Music&Video Channel	
	i-motion	
	Melody	
	1Seg	
	My document	
	Chara-den	
	Kisekae Tool	
	Document viewer	
LIFEKIT	Bar code reader	
	Receive Ir data	
	microSD manager	
	Camera	
	Data security serv.	
	Schedule	
	Alarm	
	To Do list	

Cutting line

Main item	Sub item	Branch item
LIFEKIT	Text memo	
	Calculator	
	Play/Erase msg.	
	Play/Erase VP msg.	
	Voice memo	
	Voice announce	
	UIM operation	
	My Profile	
	Forwarding image	
	Text reader	
	Dictionary	
SERVICE	Chaku-moji	
	Caller ID Notification	
	Voice Mail	
	Call Waiting	
	Call Forwarding	
	2in1 setting	
	Nuisance Call Blk	

Main item	Sub item	Branch item
SERVICE	Caller ID Request	
	Incoming Call Mng	
	Set in-call arrival	
	Remote Control	
	Dual Network	
	English Guidance	
	Additional service	
	Service Numbers	
	Multi Number	
	Roam. Guidance	
	Bar incoming when roam	
	Service(Int.)	
PHONEBOOK	Phonebook	
OWN DATA	Received calls	
	Dialed calls	
	Mail member	
	Choku-Den	

Main item	Sub item	Branch item
OWN DATA	Common phrases	
	Own dictionary	
	DL dictionary	
MUSIC	Music Player	
	Music&Video Channel	
1SEG		
OSAIFU-KEITAI	IC card content	
	DCMX	
	ToruCa	
	IC card lock setting	
	Setting	
	Check IC owner	
	Change IC owner	
	Search by i-mode	

<Other functions>

- Manner mode : ▯ (▲マナー) (1 second or longer) (Set/release with each press)
- Public mode
  (Driving mode) : # (1 second or longer) (Set/release with each press)

Network services

Voice Mail Service

■Activate

MENU➜“SERVICE”➜“Voice Mail”➜“Activate”➜“YES”➜“YES”➜Enter “Ringing time (seconds)”

■Deactivate

MENU➜“SERVICE”➜“Voice Mail”➜“Deactivate”➜“YES”

■Play messages

MENU➜“SERVICE”➜“Voice Mail”➜“Play messages”➜“YES”➜Follow the voice guidance

Call Waiting

■Activate

MENU➜“SERVICE”➜“Call Waiting”➜“Activate”➜“YES”

■Deactivate

MENU➜“SERVICE”➜“Call Waiting”➜“Deactivate”➜“YES”

■Answering another incoming call

Press ☎ to switch to incoming call

To switch the calls, press ☎.

Call Forwarding Service

■Activate

MENU➜“SERVICE”➜“Call Forwarding”➜“Activate”➜Set a forwarding number and the ring time, then select “Activate”➜“YES”

■Deactivate

MENU➜“SERVICE”➜“Call Forwarding”➜“Deactivate”➜“YES”

Caller ID Request

■Activate

MENU➜“SERVICE”➜“Caller ID Request”➜“Activate”➜“YES”➜“OK”

■Deactivate

MENU➜“SERVICE”➜“Caller ID Request”➜“Deactivate”➜“YES”➜“OK”

Cutting line

Services available for the FOMA terminal

Directory assistance (charged: service charge + call charge)*1	(No area code) 104
Telegram (pay: telegram charge)	(No area code) 115
Time (pay)	(No area code) 117
Weather forecast (pay)	Area code of an area you want to know + 177
Emergency call to the police*2	(No area code) 110
Emergency call for a fire engine or an ambulance*2	(No area code) 119
Emergency call for help with maritime accidents	(No area code) 118
Emergency Message Recording System (pay)	(No area code) 171
Collect call (charged: service charge + call charge)	(No area code) 106

*1: Unlisted phone numbers cannot be given.

*2: An emergency call to the local fire station or police station may not be connected in some areas. In that case, call again from a public phone or land line.

Main icons

Icon display area

: Signal strength

: i-mode in progress

: SSL-compatible page displayed

: Unread mail

: Unread Message R

: Mail kept at the i-mode Center

: When Dial lock is set

: When IC card lock is set

: Communication mode set (USB cable connected)

: Ir data exchange in progress

: microSD card inserted

: During a voice call

: Battery level

: Vibrator is set

: “Ring volume” is set to “Silent”

: Manner mode is set

: Public mode (Driving mode) is set

: Music&Video Channel reservation is set

/ : Alarm is set

: 1Seg timer recording in progress

to , : Voice mail message

to : Record message is set

to : Record message (Record VP message) is set

: Backlight is set to “OFF”

: Keypad lock is set/ready

: Side key guard is set to “ON”

<Contact for lost, etc>

Omakase Lock

- Omakase Lock is a pay service. If you subscribe to the service at the same time with the subscription of suspending the service or while the service is suspended, no charge applies.

Set/Release Omakase Lock

0120-524-360

24 hours available (only in Japanese)

* Omakase Lock can be set/released from the My docomo site on a PC, etc.

Other contacts

<Contact: >

<Contact: >

<Contact: >

* Check the phone number carefully before dialing.

Cutting line

docomo NTT FOMA® SO706i

Quick Manual (For Overseas Use)

○For lost, stolen, charge accumulation, etc. overseas

<DOCOMO Information Center> (24 hours) (Only in Japanese)

●For DOCOMO mobile phone

International call access code of the country (Table 1) **-81-3-5366-3114*** (toll free)

* When you make a call from an ordinary phone, etc., the call charge applies.

* When calling from the SO706i, dial +81-3-5366-3114 (press and hold the "0" key for 1 second or longer to enter "+").

●For ordinary phone, etc. <Universal Number>

International Prefix number for the universal number (Table 2) **-800-0120-0151***

* Local call charge may apply in the country you are staying.

* Refer to p.9 for the International call access code of main countries (Table 1) and p.10 for the International Prefix number for the universal number (Table 2).

○For malfunctions overseas

<Network Technical Support and Operation Center> (24 hours)

●For DOCOMO mobile phone

International call access code of the country (Table 1) **-81-3-6718-1414*** (toll free)

* When you make a call from an ordinary phone, etc., the call charge applies.

* When calling from the SO706i, dial +81-3-6718-1414 (press and hold the "0" key for 1 second or longer to enter "+").

●For ordinary phone, etc. <Universal Number>

International Prefix number for the universal number (Table 2) **-800-5931-8600***

*** Local call charge may apply in the country you are staying.**

* Refer to p.9 for the International call access code of main countries (Table 1) and p.10 for the International Prefix number for the universal number (Table 2).

Before traveling

i-mode settings

■Setting in Japan

i→"iMenu"→"English"→"Options"→"International Settings"→"i-mode services Settings"→"Yes"→Enter i-mode password→"Select"

■Setting abroad

i→"iMenu"→"English"→"International Settings"→"i-mode services Settings"→"Yes"→Enter i-mode password→"Select"

Remote Control

■Setting in Japan

MENU→"SERVICE"→"Remote Control"→"Activate"→"YES"

■Setting abroad

MENU→"SERVICE"→"Service(Int.)"→"Remote access (Int.)"→"YES"→Follow the audio guidance

Setting time adjustment

MENU→"SETTINGS"→"Clock"→"Set main time"→"Auto time adjust"→Select "Auto" in "Auto time" and "Auto time difference"

Setting sub clock display

MENU→"SETTINGS"→"Clock"→"Set sub clock"→"display method"→"Auto"

Available Services Overseas

- Voice/videophone calls
- i-mode (including Full Browser)
- i-Channel
- Packet communication via PC
- i-mode mail
- Sending/Receiving SMS
- MessageR

*Some services may not be available depending on the network or operator.

Setting Network Switching Method

MENU→"SETTINGS"→"Int'l roaming set"→"3G/GSM setting"→"AUTO", "3G" or "GSM/GPRS"

Setting the Search Mode of the Operator

■Switching the operator automatically or manually

MENU→"SETTINGS"→"Int'l roaming set"→"NW search mode"→"Auto" or "Manual"

When set to "Manual", select an operator.

■Re-searching the connectable operator

MENU→"SETTINGS"→"Int'l roaming set"→"NW search mode"→"Network re-search"

When set to "Manual", select an operator.

Setting an operator to be preferably connected

MENU→"SETTINGS"→"Int'l roaming set"→"NW search mode"→"PLMN setting"→Highlight the operator to change the priority→✉ (FUNC)→"Change priority"→Highlight the destination→■ (Select)→i (Finish)→"YES"

Setting operator name display

MENU→"SETTINGS"→"Int'l roaming set"→"Display operator name"→"Display ON" or "Display OFF"

■Display on the screen

The name of the currently connected operator appears on the task icon display area.

After returning to Japan

When you returned to Japan and turn on the FOMA terminal, the network will be automatically searched and set to the FOMA network (DoCoMo).
"Setting the Search Mode of the Operator"→p.4

Making a Call

Making a call to outside your destination country (including Japan)

■Making a call to a country registered in "Int'l dial assistance"

Dial the other party's phone number→✉ (FUNC)→"Int'l call"→Select a country→📞 or i (V.phone)

■Making a call by dialing from the country code

On the standby screen, dial + (0 (1 second or longer)) →Country code→Area code (Long distance code)→The other party's phone number→📞 or i (V.phone)

Cutting line

Making a local call abroad

Dial the other party's phone number➔ or (V.phone)

Receiving a call

When you receive a voice/videophone call, press

Network services

Before using the network services overseas, you have to set "Remote Control".

Roam. Guidance

- Make the setting in Japan.
  MENU➔"SERVICE"➔"Roam. Guidance"➔"Activate" or "Deactivate"➔"YES"

Bar incoming when roam

- Depending on the operator overseas, the setting may be unavailable.
  MENU➔"SERVICE"➔"Bar incoming when roam"➔"Activate" or "Deactivate"
  When set to "Activate", select the setting from "Bar All incoming" or "Data calls Barring"➔"YES"➔Enter your network security code

Voice Mail (Int.)

MENU➔"SERVICE"➔"Service(Int.)"➔"Voice Mail(Int.)"➔Select the service➔"YES"➔Follow the audio guidance

Call Forwarding (Int.)

MENU➔"SERVICE"➔"Service(Int.)"➔"Call Forwarding (Int.)"➔Select the service➔"YES"➔Follow the audio guidance

Roam. Guidance (Int.)

MENU➔"SERVICE"➔"Service(Int.)"➔"Roam. Guidance (Int.)"➔"YES"➔Follow the audio guidance

Remote access (Int.)

MENU➔"SERVICE"➔"Service(Int.)"➔"Remote access (Int.)"➔"YES"➔Follow the audio guidance

Caller ID req. (Int.)

MENU➔"SERVICE"➔"Service(Int.)"➔"Caller ID req. (Int.)"➔"YES"➔Follow the audio guidance

Country codes of major countries

Enter the following country codes when using international call or setting "Int'l dial assistance".

(As of May, 2008)

Area	Code	Area	Code	Area	Code
Australia	61	Holland	31	Peru	51
Austria	43	Hong Kong	852	Philippines	63
Belgium	32	Hungary	36	Russia	7
Brazil	55	India	91	Singapore	65
Canada	1	Indonesia	62	Spain	34
China	86	Italy	39	Sweden	46
Czech	420	Japan	81	Switzerland	41
Egypt	20	Korea	82	Taiwan	886
Fiji	679	Macau	853	Thailand	66
Finland	358	Malaysia	60	Turkey	90
France	33	Maldives	960	United Kingdom	44
French Polynesia	689	New Caledonia	687	United States of America	1
Germany	49	New Zealand	64		
Greece	30	Norway	47	Vietnam	84

* For other country codes and details, see the DOCOMO "International Services Website".

International call access code of main countries (Table 1)

(As of March, 2008)

Area	Code	Area	Code	Area	Code
Australia	0011	Hungary	00	Portugal	00
Belgium	00	India	00	Russia	810
Brazil	0021/ 0014	Indonesia	001	Singapore	001
		Ireland	00	Spain	00
Canada	011	Italy	00	Sweden	00
China	00	Korea	001	Switzerland	00
Czech	00	Luxemburg	00	Taiwan	002
Denmark	00	Macau	00	Thailand	001
Finland	00	Malaysia	00	Turkey	00
France	00	Monaco	00	United Arab Emirates	00
Germany	00	New Zealand	00	United Kingdom	00
Greece	00	Norway	00	United States of America	011
Holland	00	Philippines	00		
Hong Kong	001	Poland	00	Vietnam	00

* For the latest information, see the DOCOMO "International Services Website".

International Prefix number for the universal number (Table 2)

(As of March, 2008)

Area	Code	Area	Code	Area	Code
Argentina	00	Holland	00	Portugal	00
Australia	0011	Hong Kong	001	Singapore	001
Austria	00	Hungary	00	South Africa	09
Belgium	00	Ireland	00	Spain	00
Brazil	0021	Israel	014	Sweden	00
Bulgar	00	Italy	00	Switzerland	00
Canada	011	Korea	001	Taiwan	00
China	00	Luxemburg	00	Thailand	001
Colombia	009	Malaysia	00	United Kingdom	00
Denmark	00	New Zealand	00	United States of America	011
Finland	990	Norway	00		
France	00	Peru	00		
Germany	00	Philippines	00		

* Note that the universal numbers may not be available from mobile phones, public phones or hotels.

* For the latest information, see the DOCOMO "International Services Website".

Inquiries

For inquiries overseas such as lost, stolen, charge accumulation or malfunction, refer to "For lost, stolen, charge accumulation, etc. overseas" on the front cover of the Quick Manual (For Overseas Use) or "For malfunctions overseas" in p.1.

- When dialing to the inquiries numbers, "International call access code (Table 1)" or "International Prefix number for the universal number (Table 2)" assigned to your destination country is required. For details, refer to the "Mobile Phone User's Guide [World Services]".

* Note that the universal numbers may not be available from mobile phones, public phones or hotels.

Cutting line

Access DOCOMO e-site for procedures to change your address or billing plan and for request of information materials.

From i-mode iMenu ⇒ 料金&お申込・設定 (Charges & Applications/Setting) ⇒ 各種手続き (ドコモeサイト) (Application procedure (DOCOMO e-site)) Packet communication charges free

From PC My docomo (http://www.mydocomo.com/) ⇒ 各種手続き (ドコモeサイト) (Application procedure (DOCOMO e-site))

* You will need your "network ID" to access e-site from i-mode.
* No packet communication charges are incurred when accessing e-site from i-mode. Accessing from overseas will incur charges.
* You will need your "docomo ID/password" to access e-site from PC.
* If you do not have or you have forgotten your "network ID" or "docomo ID/password", contact the DOCOMO Information Center listed on the back cover of this manual.
* DOCOMO e-site may not be available depending upon the content of your subscription.
* You may not be able to access e-site services due to system maintenance, etc.

Using your FOMA Terminal Politely

When using your FOMA terminal, do not forget to consider the feelings of people around you.

Turn off your FOMA terminal when you are:

■ In a place where it is prohibited to use a mobile phone.
It is prohibited to use a mobile phone in some places. Turn off your FOMA terminal in:
・An airplane ・A hospital
* There is not only a person in a ward who uses medical electrical equipment.Turn off your FOMA terminal even in a lobby or waiting room.

■ Driving
The penalty shall be imposed on use of a handset held in your hand while driving.
* If you are obliged to receive a call, tell the other to call back later in handsfree mode and stop the car at a secure location for dialing.

■ In a crowded place such as rush-hour train, where somebody nearby may be using an implantable cardiac pacemaker or implantable cardioverter-defibrillator
Radio waves may affect the operation of implantable cardiac pacemakers or implantable cardioverter-defibrillators.

■ In a public place such as theater, cinema, or museum
Using the FOMA terminal in a public place, where you need to be quiet, annoys people around you.

Mind where you use your FOMA terminal and the loudness of your voice or the ring tone

■ If you use your FOMA terminal in a quiet place such as restaurant or hotel lobby, mind the loudness of your voice is, etc.

■ Take care not to disturb other people when you use your FOMA terminal in a public place.

Respect privacy

Please be considerate of the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones.

These functions enable you to be well-mannered

Your FOMA terminal is equipped with useful functions not to answer an incoming call or to mute the sounds of the FOMA terminal.

[Manner mode/Original manner mode]→p.86
Manner mode mutes the sounds of the FOMA terminal such as the keypad sounds and the ring tone. You can customize Manner mode by changing the settings of the Record message function, vibrator or ring tone (Original manner mode). However, neither Manner mode nor Original manner mode can mute the shutter sound of the camera.

[Public mode (Driving mode/Power OFF)]→pp.62, 63
The FOMA terminal announces to the caller that you cannot answer the call because you are driving, or you are in the place you have to refrain from calling or you have to turn off the mobile phone.

[Vibrator]→p.84
The FOMA terminal vibrates to notify you of an incoming call.

[Record message]→p.64
When you cannot answer a call, the caller can leave a message.
You can also use optional services such as the Voice Mail service (p.312) and Call Forwarding service (p.314).

This manual is bound in consideration of recycling. When this manual becomes unnecessary, we appreciate your cooperation of taking this manual out to the collection or recycling.

General Inquiries
＜DOCOMO Information Center＞

(In English)

0120-005-250 (toll free)

*Can be called from mobile phones and PHSs.

(In Japanese only)

(No prefix) 151 (toll free)

*Can only be called from DOCOMO mobile phones.

Repairs

(In Japanese only)

(No prefix) 113 (toll free)

*Can only be called from DOCOMO mobile phones.

(In Japanese only)

0120-800-000 (toll free)

*Can be called from mobile phones and PHSs.

●Please confirm the phone number before you dial.

●For application procedure, repairs and after-sales service, call inquiries above or contact your local DOCOMO shop on DOCOMO website or i-mode site.

DOCOMO website: http://www.nttdocomo.co.jp/english/

i-mode site: iMenu ⇒ お知らせ (Information) ⇒ ドコモショップ (DOCOMO shop) (Japanese)

Lost or theft of FOMA terminal, or payment of cumulative cost overseas
<DOCOMO Information Center> (available 24 hours a day)

DOCOMO mobile phone

International call access number of the country you stay (Table 1) **-81-3-5366-3114*** (toll free)

*Calling from the fixed phone will be charged according to the call rate for Japan.

＊If you use SO706i, you should dial the number +81-3-5366-3114 (to dial "+", press the "0" key for over a second).

Fixed phone

＜Universal number＞

Universal number international prefix (Table 2) **-800-0120-0151***

*You may be charged according to the call rate for the country where you are staying.

＊See p.334 for International call access code of main countries (Table 1) and International Prefix number for the universal number (Table 2) in this manual.

Failures encountered overseas
<Network Technical Support and Operation Center> (available 24 hours a day)

DOCOMO mobile phone

International call access number of the country you stay (Table 1) **-81-3-6718-1414*** (toll free)

*Calling from the fixed phone will be charged according to the call rate for Japan.

＊If you use SO706i, you should dial the number +81-3-6718-1414 (to dial "+", press the "0" key for over a second).

Fixed phone

＜Universal number＞

Universal number international prefix (Table 2) **-800-5931-8600***

*You may be charged according to the call rate for the country where you are staying.

＊See p.334 for International call access code of main countries (Table 1) and International Prefix number for the universal number (Table 2) in this manual.

●If your FOMA terminal is lost or stolen overseas, take procedure to suspend the subscription immediately.

●If your FOMA terminal has been damaged overseas, bring it to a repair counter designated by DOCOMO after returning to Japan.

Don't forget your cellular phone ...
or your manners!

○When using your mobile phone in public, don't forget to show common courtesy and consideration for others around you.

Sales: NTT DOCOMO, INC.
Manufacturer: Sony Ericsson Mobile Communications Japan, Inc.

Li-ion00

To prevent damage to the environment, bring used battery packs to an NTT DOCOMO service counter, an NTT DOCOMO agent or a recycle center.

PRINTED WITH SOY INK

This manual is printed using an ink based on soy bean oil.

Utilizing recycled papers

'08.7 (1st Edition)
MDT-000091-EAA0

FOMA® SO706i
Manual for PC Connection

Data Communication 1
Before Using 4
Checking the Procedure 5
Setting the PC 9
About the FOMA PC Setting Software 12
How to Set Various Settings 18
Executing Set Data Communication 24
Optimizing Communication Settings 27
Access Point Name (APN) Settings 28
Setting up Dial-up Network 29
Setting up Dial-up 36
AT Command List 47

About Manual for PC Connection

This manual describes necessary information for data communication using the FOMA SO706i and how to install "FOMA communication setting file" and "FOMA PC setting software" provided in the provided CD-ROM.

The procedures or screens may vary depending on your environment.

Data Communication

Data Communication Available for the FOMA Terminal

Available data communication between the FOMA terminal and PCs is classified in 3 categories: data exchange (OBEX™ communication), packet communication and 64K data communication.

Data exchange (OBEX™ communication)

The data such as images, music files, phonebook entries, mails, and more can be exchanged with equipment such as other FOMA terminals and PCs.

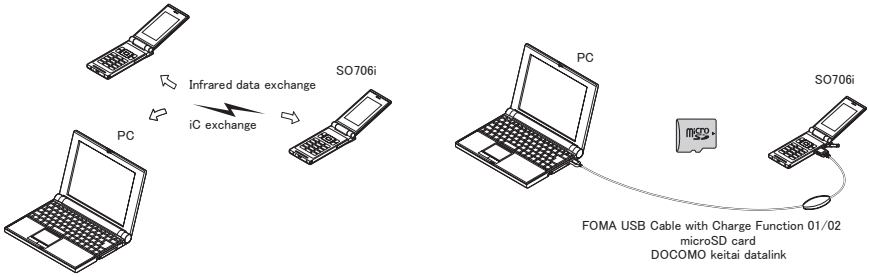

Packet communication

Packet communication is charged according to the amount of data sent and received, and the data is received at the maximum speed of 3.6Mbps and sent at the maximum speed of 384kbps (The communication speed is 384kbps at maximum for both sending and receiving outside FOMA HIGH-SPEED area.). This is suitable for exchanging small amount of data at high speed.

- When you use packet communication with DOCOMO PDA "sigmarion Ⅲ " or "musea", the communication speed is 384kbps at maximum for both sending and receiving. It is not compatible with FOMA HIGH-SPEED Area communication.

You can also access a corporate LAN connected to the FOMA network.

Use an access point that supports FOMA packet communication, such as DOCOMO Internet connection service “mopera U” or “mopera” (When you use access points for "mopera", the communication speed is 384kbps at maximum for both sending and receiving.).

Packet communication is performed via the FOMA USB Cable with Charge Function 01/02 (optional) to a PC or via a dedicated cable connection to a PDA.

*Note that the communication charge can become very expensive when large files are sent and received.

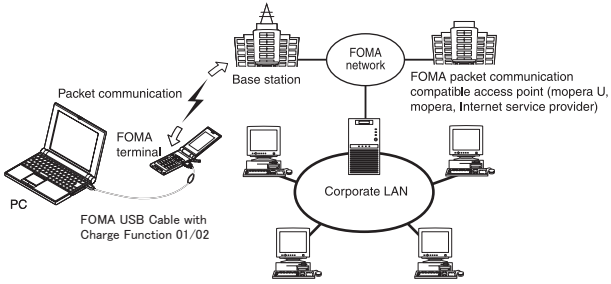

64K data communication

64K data communication is charged according to the length of time the line is connected, regardless of the amount of data.
Use an access point that supports FOMA 64K data communication, such as DOCOMO Internet connection service “mopera U” or “mopera”, or ISDN synchronized 64K access point.
64K data communication is performed via the FOMA USB Cable with Charge Function 01/02 to a PC or via a dedicated cable connection to a PDA.
*Note that the communication charge can become very expensive when the line is connected for a long time.

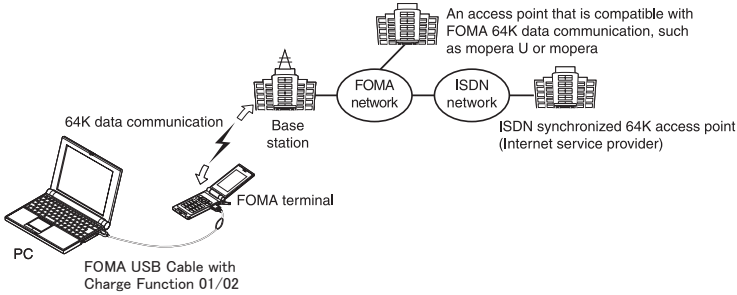

NOTE

- The communication speed is 384kbps at maximum for receiving and 64kbps at maximum for sending outside the FOMA service area and overseas.
- Select IP connection method when you perform packet communication overseas. (Packet communication using PPP connection is not supported.)
- 64K data communication is not available overseas.

Notice before using

Internet service provider fees

In addition to FOMA service charges, you may need to pay user fees to an Internet service provider to use the Internet. These fees must be paid directly to the Internet service provider in addition to service fees of FOMA service. Contact your Internet service provider for details.
DOCOMO Internet connection service "mopera U" or "mopera" is available. "mopera U" is a pay service for which you need to apply. "mopera" is a free service for which you do not need to apply.

Setting an access point (e.g. Internet service provider)

Packet communication and 64K data communication use different access points. If you are using packet communication, use an applicable access point for it; if 64K data communication, use an access point for FOMA 64K data communication or ISDN synchronized 64K.

- You cannot use DoPa access points.

User authorization when accessing network

Some access points may require your user authorization (ID and password) when connecting. Use communication software (Dial-up network) to enter your ID and password. ID and password will be provided by your Internet service provider or the network administrator. Contact the Internet service provider or network administrator for details.

Access authorization when using the browser

To view FirstPass compliant sites on your PC's browser, FirstPass (user certification) for access authorization is needed. Install the FirstPass PC software from the attached CD-ROM and conduct the setting. For details, refer to "FirstPassManual" (PDF format) under the "FirstPassPCSoft" folder provided in the CD-ROM. (The "FirstPassManual" is only in Japanese.) To view the "FirstPassManual" (PDF format), Adobe® Reader® is required. Unless you install it on your PC, install the Adobe® Reader® from the CD-ROM to read the document. For how to use it, refer to the "Adobe Reader help".

Required conditions for performing packet and 64K data communication

The following conditions are required to perform communication using the FOMA terminal (For communication in Japan):

- Your PC is compatible with the FOMA USB Cable with Charge Function 01/02 (optional).
- You are in the FOMA service area.
- For packet communication, the access point supports FOMA packet communication.
- For 64K data communication, the access point supports FOMA 64K data communication or ISDN synchronized 64K.

However, depending on congestion of the base station or weaker signal strength, you cannot perform communication even when the above conditions are satisfied.

Before Using

Operational environment

The PC operation environment to use data communication is as shown below:

PC unit	• PC/AT compatible model with CD-ROM drive • USB port (compliant to Universal Serial Bus Specification Rev1.1/2.0) • Display resolution of 800 dots wide × 600 dots high, High Color (65,536 colors) is recommended
OS*1	• Windows 2000 (Japanese version) • Windows XP (Japanese version) • Windows Vista (Japanese version)
Required memory	• Windows 2000: 64M bytes or higher*2 • Windows XP: 128M bytes or higher*2 • Windows Vista: 512M bytes or higher*2
Hard disk space	• 5M bytes or higher*2

*1： The proper operations on the upgraded OS are not guaranteed.
*2： The required memory and necessary hard disk space may differ depending on the PC's system configuration.

● Microsoft Internet Explorer 6.0 or later is recommended to run the menu (For Windows Vista, Microsoft Internet Explorer 7.0 or later is recommended.). If the menu screen does not appear even when you insert the CD-ROM, use the following procedure:

① Open "スタート" (Start) → "マイコンピュータ" (My Computer)
For Windows Vista, open " " → "コンピュータ" (Computer)
② Right-click the CD-ROM icon and select "開く" (Open)
③ Double-click "index.html"

When the CD-ROM is inserted to the PC, the warning screen as shown right may appear. This warning is displayed according to the security setting of the Internet Explorer. There is no matter with using the software. Click "はい" (Yes).

* This screen is an example when using Windows XP.
The warning screen may differ depending on the environments of your PC.

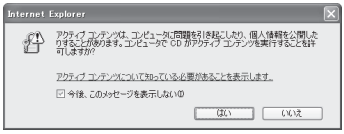

NOTE

● You can transmit data with the FOMA terminal connected to the DOCOMO PDA "musea" or "sigmarion Ⅲ". Update "musea" when you connect it to a FOMA terminal. For how to update it and other details, visit the DOCOMO website.
● This FOMA terminal is not compatible with Remote Wakeup function.
● This FOMA terminal is not compatible with the FAX communication.

Required devices

The following hardware and software, in addition to the FOMA terminal and a PC, are required.

• "FOMA USB Cable with Charge Function 01/02" (optional) or "FOMA USB Cable" (optional)
• Provided CD- ROM "CD-ROM for FOMA SO706i"

NOTE

● Purchase the specified "FOMA USB Cable with Charge Function 01/02" or "FOMA USB Cable". The USB cable for PC cannot be used because the shape of the connector is different.
● The FOMA USB Cables may not function properly when connected to a USB HUB.

Checking the Procedure

In data communication, the connection is made through a dial-up connection with Internet service providers or LANs that support FOMA data communication.

■**About the "CD-ROM for FOMA SO706i"**

- The CD-ROM contains the FOMA communication setting file (drivers), FOMA PC setting software and FirstPass PC software.
- The FOMA communication setting file is software (driver) needed for connecting the FOMA terminal with a PC via a FOMA USB Cable with Charge Function 01/02 (optional) to carry out packet communication, 64K data communication and data transfer (OBEX^{TM} communication). Installing the FOMA communication setting file embeds each driver into Windows.
  Using the FOMA PC setting software, you can easily set up packet communication and 64K data communication and create a dial-up connection.

Flow chart for completing the data communication setup

■**Data exchange (OBEX^{TM} communication)**

Install the FOMA communication setting file to use the FOMA USB Cable with Charge Function 01/02 (optional).

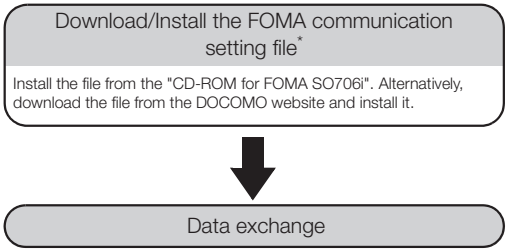

*：Install DOCOMO keitai datalink in addition.

■Packet communication and 64K data communication

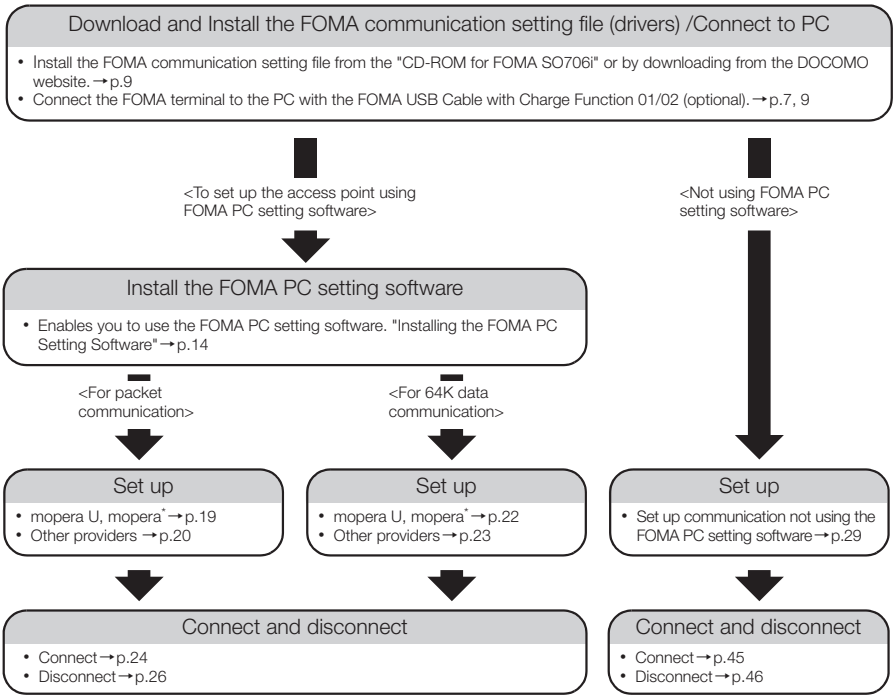

* : To use Internet with the FOMA terminal and PC connected, "mopera U" (you need to apply for) is useful, which supports broadband connection, etc. Consider the plan in which you are charged only in a month when you use the service. If you use "mopera" for which you do not need to apply, you can access Internet immediately.
For more information, visit the DOCOMO website.

Setting the USB mode setting to "Communication mode"

● Set the mode before connecting to PC.

1 MENU ▶"Settings"▶"External connection"▶"USB mode setting"▶"Communication mode"

Connecting the devices

The following procedure explains how to connect the FOMA USB Cable with Charge Function 01/02 (optional).

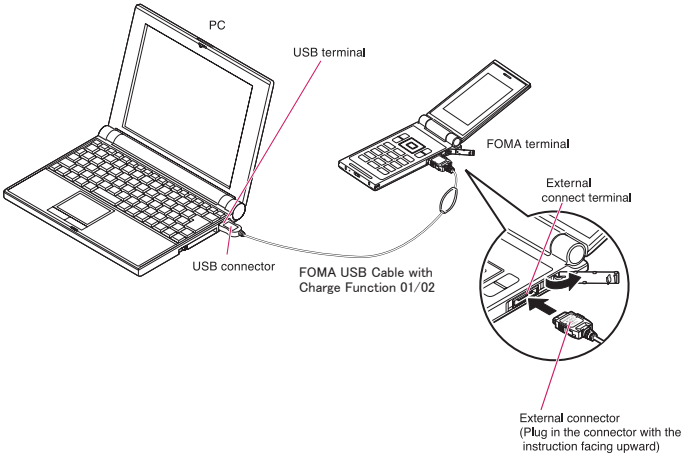

1 Open the external connector cap of the FOMA terminal

2 Check the orientation of the external connector of the FOMA terminal, then insert the external connector of the FOMA USB Cable with Charge Function 01/02 horizontally until you hear a click

3 Connect the USB connector of the FOMA USB Cable with Charge Function 01/02 to the USB terminal of your PC

" " appears on the FOMA terminal when the FOMA USB Cable with Charge Function 01/02 is connected.

NOTE

● " " appears on the FOMA terminal display when the FOMA communication setting file is installed and the connection with a PC is recognized.

Disconnecting the devices

The following procedure explains how to disconnect the FOMA USB Cable with Charge Function 01/02 (optional).

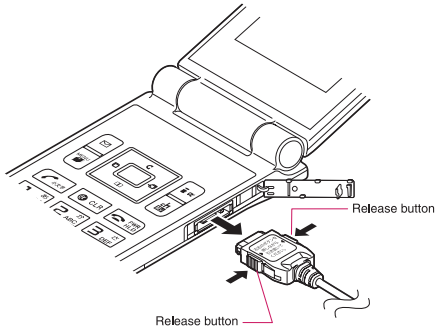

1 Remove the FOMA USB Cable with Charge Function 01/02 from the USB terminal of the PC

2 Pull the FOMA USB Cable with Charge Function 01/02 out horizontally while pressing the release buttons of the external connector of FOMA USB Cable

3 Close the external connector cap of the FOMA terminal

NOTE

- When you connect and disconnect the FOMA USB Cable with Charge Function 01/02 repeatedly, wait for a while in each step because the FOMA terminal may not recognize the PC correctly.
- Do not disconnect the FOMA USB Cable with Charge Function 01/02 during data communication because this may cause the disconnection of communication, malfunction or loss of data.
- Keep pressing the release buttons of the external connector of the FOMA USB Cable with Charge Function 01/02 when pulling it out of the external connector of the FOMA terminal. Using excessive force to pull the cable may cause malfunction.

Setting the PC

Installing the FOMA communication setting file (drivers)

- When installing FOMA communication setting file, be sure to log on as Administrator. If you attempt to install the file with another account, an error occurs. Contact your PC's manufacturer or Microsoft for information on how to set Administrator privileges on your PC.
- You can download the FOMA communication setting file from the DOCOMO website.

1 **Start up Windows and insert the "CD-ROM for FOMA SO706i" in the CD-ROM drive of your PC**

This screen will automatically appear.

2 **Click "データリンクソフト・各種設定ソフト" (Setup software)**

3 **Click "インストール" (Install) of "FOMA通信設定ファイル（USBドライバ）" (FOMA communication setting file (USB driver))**

4 **Double-click "FOMAinst.exe" in the appeared folder**

It is displayed as "FOMAinst" depending on the setting of your PC.

5 **Upon confirming the software license agreement, click "同意する" (Agree) to agree to it**

If you click "同意しない" (Not agree), the installation is canceled.

6 **Turn on the FOMA terminal and then connect the FOMA USB Cable with Charge Function 01/02 (optional) to your FOMA terminal**

7 **After the message requesting to connect the FOMA terminal to PC appears, connect the FOMA USB Cable with Charge Function 01/02 to the USB terminal of your PC**

Installing the drivers automatically starts.
After drivers are successfully installed, FOMA byte counter can be installed successively. To install FOMA byte counter, click "インストールする（推奨）" (Install (Recommended)). Click "完了" (Complete) not to install it.
Proceed to the "Checking the installed driver" (p.10) for further steps.

Checking the installed driver

Check that the FOMA communication setting file (drivers) has been correctly installed.
This section describes an example using Windows XP.

1 Select "スタート" (Start) → "コントロールパネル" (Control Panel)

For Windows Vista

Select " " → "コントロールパネル" (Control Panel)

For Windows 2000

Select "スタート" (Start) → "設定" (Settings) → "コントロールパネル" (Control Panel)

2 Click the "システム" (System) icon in "パフォーマンスとメンテナンス" (Performance and maintenance)

For Windows Vista

Open "システムとメンテナンス" (Systems and maintenance) in the "コントロールパネル" (Control Panel)

For Windows 2000

Open "システム" (System) in the "コントロールパネル" (Control Panel)

3 Click the "ハードウェア" (Hardware) tab and click "デバイスマネージャ " (Device manager)

For Windows Vista

Select "デバイスマネージャ " (Device Manager) and click "続行" (Continue)

For Windows 2000

Click the "ハードウェア" (Hardware) tab and click "デバイスマネージャ " (Device manager)

4 Click each device to check the installed driver name

Check that all the driver names are displayed under "ユニバーサルシリアルバスコントローラ" (Universal Serial Bus Controller) or "USB（Universal Serial Bus）コントローラ" (USB (Universal Serial Bus) controller), "ポート（COMとLPT）" (Ports (COM& LPT)) and "モデム" (Modems).
Check the driver name and proceed to "About the FOMA PC Setting Software" (p.12).

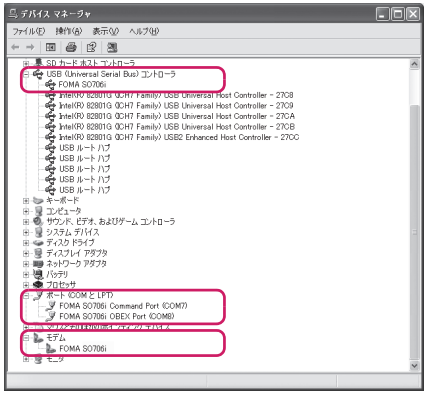

Device name	Driver name
ユニバーサルシリアルバスコントローラ or USB (Universal Serial Bus) コントローラ	• FOMA SO706i
ポート(COMとLPT)	• FOMA SO706i Command Port • FOMA SO706i OBEX Port
モデム	• FOMA SO706i

NOTE

● When you check the above, if not all the driver names appear, follow the uninstall instructions (p.11) to delete the FOMA communication setting file and install the proper file.

Uninstalling the FOMA communication setting file (drivers)

If necessary (when updating the drivers, etc.), uninstall the drivers as follows. The procedure for uninstalling from a Windows XP machine is described as an example.

- Uninstallation is not available while connecting the FOMA terminal with PC.
- When uninstalling FOMA communication setting file, be sure to log on as Administrator. If you attempt to uninstall the file with another account, an error occurs. Contact your PC's manufacturer or Microsoft for information on how to set Administrator privileges on your PC.

1 If the FOMA terminal and the PC are connected by the FOMA USB Cable with Charge Function 01/02 (optional), remove the FOMA USB Cable with Charge Function 01/02

2 Start "プログラムの追加と削除" (Add and remove applications) on the Windows

Click "スタート" (Start)→"コントロールパネル" (Control Panel)→"プログラムの追加と削除" (Add and remove applications)

For Windows Vista

Click " " → "コントロールパネル" (Control Panel)→"プログラムのアンインストール" (Uninstall a program)

For Windows 2000

Open "スタート" (Start) → "設定" (Settings) → "コントロールパネル" (Control Panel) → "アプリケーションの追加と削除" (Add and remove applications)

3 Select "FOMA SO706i USB" and click "変更と削除" (Change and delete)

For Windows Vista

Select "FOMA SO706i USB" and click "アンインストールと変更" (Uninstall/Change) and then "続行" (Continue)

For Windows 2000

Select "FOMA SO706i USB" and click "変更と削除" (Change and delete)

4 Click "OK" to uninstall

To cancel uninstallation, click "キャンセル" (Cancel).

5 Click "はい" (Yes) to restart Windows

Now the uninstallation is completed.
If you click "いいえ" (No), restart Windows manually.

NOTE

- When "FOMA SO706i USB" is not displayed in the "プログラムの追加と削除" (Add and remove applications) on the Windows, perform the following procedure:
  ①Insert the "CD-ROM for FOMA SO706i" in the CD-ROM drive of your PC
  ②Open "スタート" (Start)→"マイコンピュータ" (My Computer)
  For Windows Vista, open " " →"コンピュータ" (Computer)
  ③Right-click the CD-ROM icon and select "開く" (Open)
  ④Open "SO706i_USB_Driver"→"Drivers"→"Win2k_XP" folder in the CD-ROM
  For Windows Vista, open "SO706i_USB_Driver"→"Drivers"→"WinVista32" folder
  ⑤Double-click "so706iun.exe" *
  *：It is displayed as "so706iun" depending on the setting of your PC.

About the FOMA PC Setting Software

By using the FOMA PC setting software, you can easily set up the followings:

- You can also set up packet communication and 64K data communication without using the FOMA PC setting software. →p.29

See p.7 for the connection between the FOMA terminal and PC.

かんたん設定 (Easy settings)

The guide walks you through the procedures for "FOMAデータ通信用ダイヤルアップの作成" (Making a new dial-up connection for FOMA data communication) and "通信設定最適化" (Optimize communication settings) together.

通信設定最適化 (Optimize communication settings)

Optimizes the communication settings of a PC before using "FOMA packet communication".
To get the most out of communication performance, it is necessary to optimize communication settings.

接続先（APN）の設定 (Access Point Name (APN) settings)

Sets the access point name (APN) required for packet communication.
Unlike 64K data communication, a normal phone number is not used for FOMA packet communication access point. Before you connect, register the APN (Access Point Name) of each access point in the FOMA terminal and assign its registration number (cid) to the connection point phone number field.
As the APN of mopera "mopera.ne.jp" is assigned to cid1 and APN of mopera U "mopera.net" to cid3 by default, assign the APN to cid2 or between cid4 to cid10.
cid [Context Identifier] … a number used to manage the Access Point Name (APN) for the packet communication registered in the FOMA terminal. It is set when registering the APN in the FOMA terminal.

NOTE

- When the old version of FOMA PC setting software (version 4.0.0 or older, hereafter referred to Previous FOMA PC setting software) is installed, uninstall it in advance.

Procedures ranging from installation of the FOMA PC setting software to connection to the Internet

STEP 1
Installing software

Install the "FOMA PC setting software"

See p.14 for installation details.
When the "Previous FOMA PC setting software" is installed, you cannot install the "FOMA PC setting software Ver4.0.0". Uninstall the "Previous FOMA PC setting software" beforehand.
If a screen appears indicating that "Previous W-TCP setting software" or "Previous APN setting software" is installed, see p.15.

STEP 2
Setting preparation

Make preparations for making various settings

Before making various settings, ensure that the FOMA terminal is connected to the PC and has been properly recognized by the PC.
See p.7 for how to connect the FOMA terminal to the PC.
See "Setting the PC" (p.9) for how to make the PC recognize the FOMA terminal properly.
If the FOMA terminal is not properly recognized by the PC, you cannot make various settings nor perform communication.

STEP 3
Various settings

Set according to the communication method you use

Easy settings: "Settings for Packet communication using mopera U or mopera" →p.19
Easy settings: "Settings for Packet communication using other providers" →p.20
Easy settings: "Settings for 64K data communication using mopera U or mopera" →p.22
Easy settings: "Settings for 64K data communication using other providers" →p.23
For other settings, see p.27 or the following pages.

STEP 4
Connecting

Connect to the Internet

See p.24 for the executing communication.

Installing the FOMA PC Setting Software

- Check the operating environment prior to the installation of the FOMA PC setting software. →p.4
- When installing the "FOMA PC setting software", be sure to log on as Administrator. If you attempt to install the software with another account, an error occurs. Contact your PC's manufacturer or Microsoft for information on how to set Administrator privileges on your PC.

1 Insert the CD-ROM in the CD-ROM drive of the PC

This screen will automatically appear.

2 Click "データリンクソフト・各種設定ソフト" (Data Link Software/Various Settings Software)

3 Click "インストール" (Install) of "FOMA PC設定ソフト" (FOMA PC setting software)

When clicking "インストール" (Install), the warning screen as shown below may appear. This warning is displayed according to the security setting of the Internet Explorer. There is no matter with using the software.

* This screen is an example when using Windows XP. The warning screen may differ depending on the environments of your PC.

When the "ファイルのダウンロードーセキュリティの警告" (Download file－Security warning) screen appears

Click "実行" (Execute).

When the "Internet Explorerーセキュリティの警告" (Internet Explorer－Security warning) screen appears

Click "実行する" (Execute) and continue installation. This screen informs that no publishers are confirmed. However, to use the software is acceptable.

For Windows Vista, you must next also click "許可" (Permission).

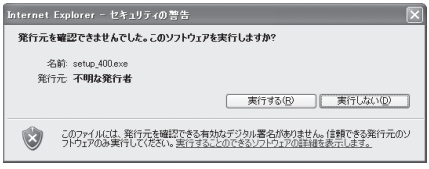

4 Click "はい" (Yes)

Before starting the installation, make sure that no other program is currently running or resident. If there is any program running, click "いいえ" (No) to exit the program and resume installation.

5 Click "次へ" (Next)

If a screen appears indicating that Previous W-TCP setting software or Previous APN setting software is installed, proceed to p.15.

6 Upon confirming the user agreement of "FOMA PC設定ソフト" (FOMA PC setting software), click "はい" (Yes) to agree to it

If you click "いいえ" (No) and then click "はい" (Yes), the installation is canceled.
For Windows Vista, proceed to Step 8.

7 Click "次へ" (Next)

Select whether or not you want "通信設定最適化" (Optimize communication settings) to reside in the task-tray.
If you let it reside in the task-tray, click "次へ" (Next) with "タスクトレイに常駐する" (Let it reside in the task-tray) checked and continue with the installation. Even after installation, you can change the settings by selecting "メニュー" (Menu) → "「通信設定最適化」をタスクトレイに常駐させる" (Let Optimize communication settings reside in the task-tray) on the FOMA PC setting software.
(Note): This option is disabled when the "タスクトレイに常駐する" (Let it reside in the task-tray) setting is in effect.

If you let it reside in the task-tray, the 通信設定最適化 (Optimize communication settings) icon appears in the task-tray located at the bottom-right of the desktop.

8 Select the installation location and click "次へ" (Next)

If you want to change the location, click "参照" (Reference), specify the location and click "次へ" (Next).

9 Check the name of program folder and click "次へ" (Next)

If you want to change it, enter a new folder name and click "次へ" (Next).

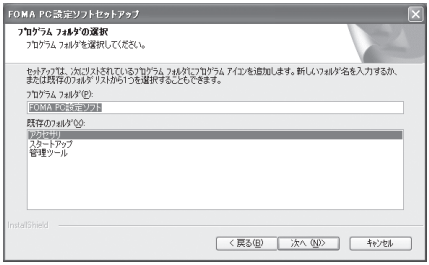

10 Click "完了" (Finish)

When the setup process is completed, the "FOMA PC設定ソフト" (FOMA PC setting software) operation screen appears. You can specify various settings at this point.

Notes on installation of the FOMA PC setting software

<If the Previous W-TCP setting software is installed>

- Open "アプリケーション（プログラム）の追加と削除" (Add/Remove programs) and delete the old W-TCP setting software.

<If the Previous APN setting software is installed>

- When you click "OK", the previous APN setting software is automatically uninstalled, and the FOMA PC setting software will be installed.

<If the FOMA PC setting software is already installed>

- Click "OK", and the install is interrupted. Uninstall the already installed "FOMA PC設定ソフト" (FOMA PC setting software), and then reinstall the software.
  "Uninstalling the FOMA PC Setting Software" →p.17
- Perform the same procedure when an old version of "FOMA PC setting software" is installed.

<If the "キャンセル" (Cancel) button is clicked during installation>

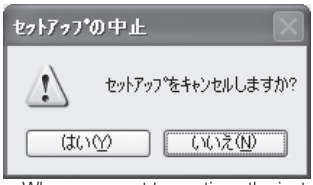

- When you want to continue the installation, click "いいえ" (No). When you want to stop the procedure, click "はい" (Yes).

Confirming the version information of the FOMA PC setting software

1 Open "FOMA PC設定ソフト" (FOMA PC setting software)

For Windows Vista and Windows XP

Open "スタート" (Start) or " " → "すべてのプログラム" (All programs) → "FOMA PC設定ソフト" (FOMA PC setting software) → "FOMA PC設定ソフト" (FOMA PC setting software)

For Windows 2000

Open "スタート" (Start) → "プログラム" (Program) → "FOMA PC設定ソフト" (FOMA PC setting software) → "FOMA PC設定ソフト" (FOMA PC setting software)

2 Open "メニュー" (Menu) → "バージョン情報" (Version information) of the toolbar

The version information of the FOMA PC setting software is displayed.

Uninstalling the FOMA PC Setting Software

If necessary (when upgrading the FOMA PC setting software, etc.), uninstall the software as follows. The procedure for uninstalling from a Windows XP machine is described as an example.

- When uninstalling the "FOMA PC setting software", be sure to log on as Administrator. If you attempt to uninstall the software with another account, an error occurs. Contact your PC's manufacturer or Microsoft for information on how to set Administrator privileges on your PC.

1 Before uninstalling

For Windows XP and 2000, before starting the uninstallation process of the "FOMA PC設定ソフト" (FOMA PC setting software), the various changes made for FOMA must be returned to their default settings. For Windows Vista, proceed to Step 2.

(1) Disable the "通信設定最適化" (Optimize communication settings) in the task-tray

Right-click the "通信設定最適化" (Optimize communication settings) icon in the task-tray located at the bottom-right of the desktop and select "終了" (End).

(2) Exit any running program

If you try to begin uninstallation while the "FOMA PC setting software" or "通信設定最適化" (Optimize communication settings) is in operation, this screen appears. Cancel the uninstallation program and exit the respective programs.

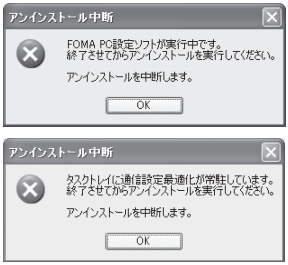

2 Start uninstallation

Open "スタート" (Start) → "コントロールパネル" (Control Panel) → "プログラムの追加と削除" (Add and remove programs)

For Windows Vista

Open " " → "コントロールパネル" (Control Panel) → "プログラムのアンインストール" (Uninstall a program)

For Windows 2000

Open "スタート" (Start) → "設定" (Settings) → "コントロールパネル" (Control Panel) → "アプリケーションの追加と削除" (Add and remove applications)

3 Select "NTT DoCoMo FOMA PC設定ソフト" (NTT DoCoMo FOMA PC setting software) and click "削除" (Delete)

For Windows Vista

Select "NTT DoCoMo FOMA PC設定ソフト" (NTT DoCoMo FOMA PC setting software) and click "続行" (Continue)

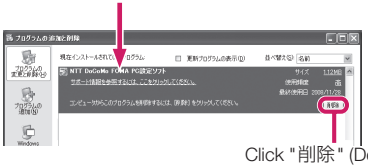

For Windows 2000

Select "NTT DoCoMo FOMA PC設定ソフト" (NTT DoCoMo FOMA PC setting software) and click "変更と削除" (Change and delete)

4 Check the program name to be deleted and click "はい" (Yes)

Uninstallation starts.

5 Click "完了" (Finish)

Uninstallation of the "FOMA PC setting software" is completed.

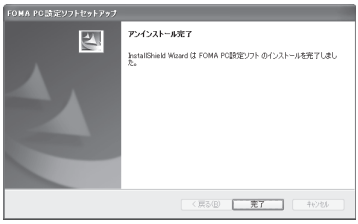

NOTE

● Canceling "通信設定最適化" (Optimize communication settings)

For Windows XP and 2000, this screen appears when "通信設定最適化" (Optimize communication settings) is performed. Usually, click "はい" (Yes) to uninstall and cancel the optimization.

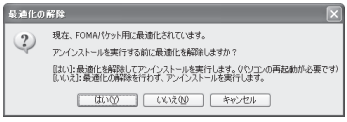

The cancellation of communication settings optimization is valid after the restart.

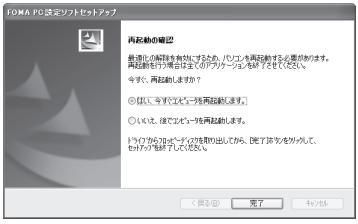

How to Set Various Settings

The FOMA terminal needs to be connected to your PC via FOMA USB Cable with Charge Function 01/02 (optional), and the FOMA communication setting file (drivers) needs to be properly recognized on the device of your PC to specify various settings.

1 Open "FOMA PC設定ソフト" (FOMA PC setting software)

This operation screen appears when the software is started.

For Windows Vista and Windows XP

Open "スタート" (Start) or " " → "すべてのプログラム" (All programs) → "FOMA PC設定ソフト" (FOMA PC setting software) → "FOMA PC設定ソフト" (FOMA PC setting software)

For Windows 2000

Open "スタート" (Start) → "プログラム" (Program) → "FOMA PC設定ソフト" (FOMA PC setting software) → "FOMA PC設定ソフト" (FOMA PC setting software)

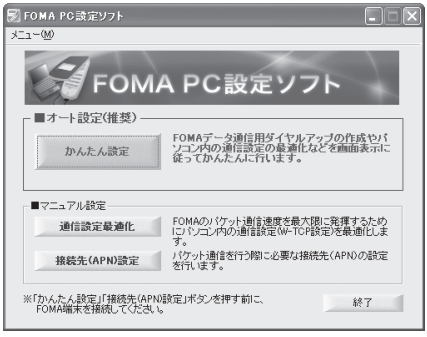

Easy settings: "Settings for Packet communication using mopera U or mopera"

- This section explains how to make settings for a packet communication of 3.6Mbps maximum. The DOCOMO Internet connection service "mopera U" or "mopera" will be used as a provider (When you use "mopera", the communication speed is 384kbps at maximum for both sending and receiving.).
  Packet communication: Enables high-speed packet communication of up to 3.6Mbps for receiving and up to 384kbps for sending (The communication speed is 384kbps at maximum for both sending and receiving outside FOMA HIGH-SPEED area.). Since you will be charged according to the amount of data transferred, you can enjoy data communication without worrying about time.
- Note that the communication charge can become expensive if "packet communication" is used to communicate large volumes of data such as to view sites and websites containing images or to download files.

1 Click "かんたん設定" (Easy settings)

2 Select "パケット通信（HIGH-SPEED対応端末）" (Packet communication (HIGH-SPEED phone)) and click "次へ" (Next)

For Windows Vista

Select "パケット通信" (Packet communication) and click "次へ" (Next)

3 Select "『mopera U』への接続" ('mopera U' access) or "『mopera』への接続" ('mopera' access) and click "次へ" (Next)

When you select "『mopera U』への接続" ('mopera U' access), subscription confirmation message appears. Click "はい" (Yes) when you have already subscribed to mopera U.
See p.20 if you use a provider other than mopera U or mopera.

4 Click "OK"

The access point (APN) settings will be obtained from the FOMA terminal which is connected to the PC. Wait for a while.

5 Enter the connection name, select the connection method and click "次へ" (Next)

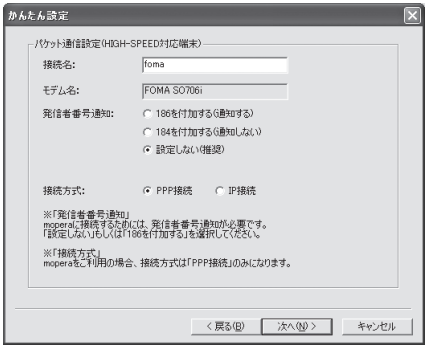

You can specify the name of the connection. Enter a name easy to recognize in the "接続名" (Connection name) column.
You cannot use the following reserved characters: ¥/: * ?!<> | " (half-pitch only).
Select the "発信者番号通知" (Caller ID setting) and "接続方式" (Connection method).
As for "発信者番号通知" (Caller ID setting), select "設定しない（推奨）" (OFF (Recommended)) for overseas use.
As for "接続方式" (Connection method), mopera U supports both "PPP接続" (PPP connection) and "IP接続" (IP connection). Select "IP接続" (IP connection) for overseas use. mopera supports "PPP接続" (PPP connection) only, therefore is not available overseas.

6 Specify a user ID and password, select the accessible user and click "次へ" (Next)

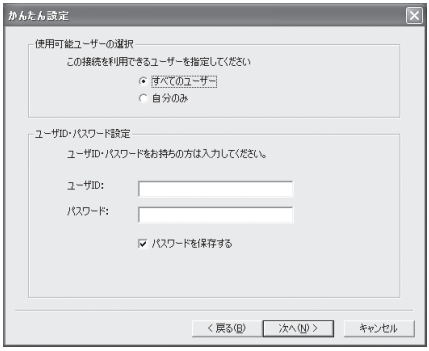

You can leave user ID and password blank for the mopera U or mopera connection.
When "すべてのユーザー" (All users) is selected in the "使用可能ユーザーの選択" (Selecting accessible user) column, the connection setting is applied to all the users registered in Windows.

For Windows Vista

Specify the user ID and password and click "次へ" (Next)
Proceed to Step 8.

7 Check "最適化を行う" (Optimize the setting) and click "次へ" (Next)

Optimize the communication settings of a PC to use FOMA packet communication. When "HIGH-SPEED対応端末の確認 (Confirmation for HIGH-SPEED phone)" screen appears, click "はい" (Yes).
→p.27
If they are already optimized, the screen of Step 7 does not appear.

8 Check the setting information and click "完了" (Finish)

The contents of the settings are listed. Make sure that all settings are correct.
Checking "デスクトップにダイヤルアップのショートカットを作成する" (Add dial-up shortcut on desktop) automatically creates a shortcut icon.
To change any setting, click "戻る" (Back).

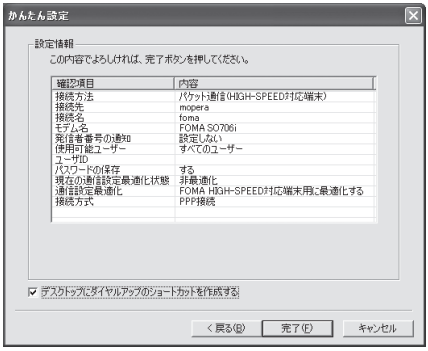

9 Click "OK"

You need to restart the PC to enable the optimized settings. If the restart selection screen appears, click "はい" (Yes).
Execute communication.
→p.24

Easy settings: "Settings for Packet communication using other providers"

1 Click "かんたん設定" (Easy settings)

2 Select "パケット通信（HIGH-SPEED対応端末）" (Packet communication (HIGH-SPEED phone)) and click "次へ" (Next)

For Windows Vista

Select "パケット通信" (Packet communication) and click "次へ" (Next)

3 Select "その他" (Other) and click "次へ" (Next)

4 Click "OK"

The access point (APN) settings will be obtained from the FOMA terminal which is connected to the PC. Wait for a while.

5 Specify the packet communication settings

After the terminal setting is completely acquired, the screen "パケット通信設定" (Packet communication setting) appears.
Enter any name in "接続名" (Connection name). You cannot use the following reserved characters: ¥/: * ?!<> | " (half-pitch only).
For the caller ID settings, follow the instructions from the provider.
Select "設定しない" (OFF) for overseas use.

6 Click "接続先（APN）設定" (Specify the access point (APN))

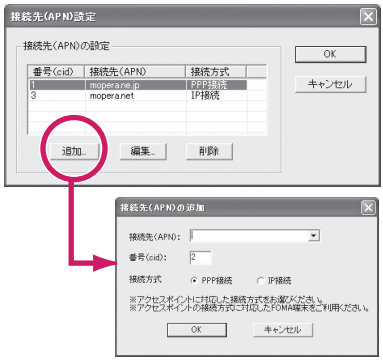

As the APN of mopera "mopera.ne.jp" is assigned to cid1 and APN of mopera U "mopera.net" to cid3 by default, assign the APN to cid2 or between cid4 to cid10.
Open the "接続先（APN）の追加" (Add the access point (APN)) screen by clicking the "追加" (Add) button, select the connection method, specify an access point name that supports FOMA packet communication and click "OK".
The "接続先（APN）設定" (Specify the access point (APN)) screen reappears.
Half-pitch alphanumeric characters, hyphen (-) and dots (.) can only be entered for the access point.

7 Select the Access point (APN) and click "OK"

The screen of Step 5 reappears.
The access point (APN) entered in Step 6 is displayed on "接続先（APN）の選択" (Select the access point (APN)).

8 Confirm the Access point (APN) on "接続先(APN)の選択" (Select the access point (APN)) and click "次へ" (Next)

To specify advanced settings (TCP/IP settings)

Clicking "詳細情報の設定" (Detailed settings) displays the setup screen for "IP address" and "Name server". If they must be input as the provider or corporate LAN information, follow the input information directions and enter the addresses.

9 Specify a user ID and password, select the accessible user and click "次へ" (Next)

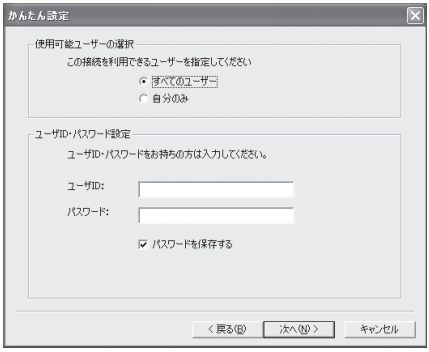

When "すべてのユーザー" (All users) is selected in the "使用可能ユーザーの選択" (Selecting accessible user) column, the connection setting is applied to all the users registered in Windows.

When setting the user ID and password, input the correct, case-sensitive data provided by the service provider.

For Windows Vista

Specify the user ID and password and click "次へ" (Next)
Proceed to Step 11.

10 Check "最適化を行う" (Optimize the setting) and click "次へ" (Next)

Optimize the communication settings of a PC to use FOMA packet communication. When "HIGH-SPEED 対応端末の確認 (Confirmation for HIGH-SPEED phone)" screen appears, click "はい" (Yes). →p.27
If they are already optimized, the screen of Step 10 does not appear. Proceed to Step 11.

11 Check the setting information and click "完了" (Finish)

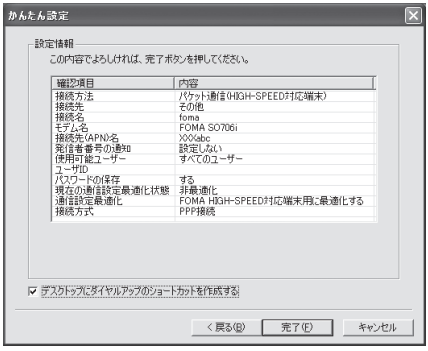

The contents of the settings are listed. Make sure that all settings are correct.
Checking "デスクトップにダイヤルアップのショートカットを作成する" (Add dial-up shortcut on desktop) automatically creates a shortcut icon.
To change any setting, click "戻る" (Back).

12 Click "OK"

You need to restart the PC to enable the optimized settings. If the restart selection screen appears, click "はい" (Yes).
Execute communication. →p.24

Easy settings: "Settings for 64K data communication using mopera U or mopera"

- This section explains how to specify settings for 64K data communication at the maximum speed of 64kbps. The DOCOMO Internet connection service "mopera U" or "mopera" will be used as a provider.
- 64K data communication is charged according to the length of time you connected.
- Note that the communication charge can become expensive if "64K data communication" is used for a long time.

1 Click "かんたん設定" (Easy settings)

2 Select "64Kデータ通信" (64K data communication) and click "次へ" (Next)

3 Select "『mopera U』への接続" ('mopera U' access) or "『mopera』への接続" ('mopera' access) and click "次へ" (Next)

When you select "『mopera U』への接続" ('mopera U' access), subscription confirmation message appears. Click "はい" (Yes) when you have already subscribed to mopera U.
See p.23 if you use a provider other than mopera U or mopera.

4 Enter the access point name and select the modem, and click "次へ" (Next)

The "64Kデータ通信設定" (64K data communication setting) screen appears. You can specify the name of the connection. Enter a name easy to recognize in the "接続名" (Connection name) column.
You cannot use the following reserved characters: ¥/: * ?!<> | " (half-pitch only).
When using the FOMA USB Cable with Charge Function 01/02 (optional), confirm that modem name is set to "FOMA SO706i".
Select "設定しない" (OFF) or "186を付加する" (Add 186) for the caller ID settings.

5 Specify a user ID and password, select the accessible user and click "次へ" (Next)

You can leave user ID and password blank for the mopera U or mopera connection.
When "すべてのユーザー" (All users) is selected in the "使用可能ユーザーの選択" (Selecting accessible user) column, the connection setting is applied to all the users registered in Windows.

For Windows Vista

Specify the user ID and password and click "次へ" (Next)

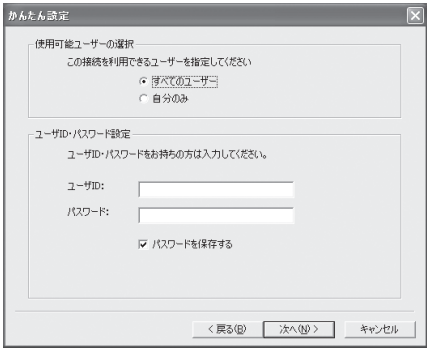

6 Check the setting information and click "完了" (Finish)

The contents of the settings are listed. Make sure that all settings are correct.
Checking "デスクトップにダイヤルアップのショートカットを作成する" (Add dial-up shortcut on desktop) automatically creates a shortcut icon.
To change any setting, click "戻る" (Back).

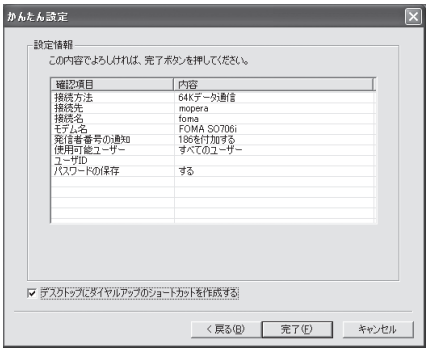

7 Click "OK"

Execute communication. →p.24

Easy settings: "Settings for 64K data communication using other providers"

1 Click "かんたん設定" (Easy settings)

2 Select "64Kデータ通信" (64K data communication) and click "次へ" (Next)

3 Select "その他" (Other) and click "次へ" (Next)

4 Enter the dial-up information and click "次へ" (Next)

Register the following items in order to connect to a service provider with ISDN synchronous 64K access points other than mopera U or mopera when creating a dial-up;

- "接続名" (Connection name) (optional)
- "モデムの選択" (Modem Selection) (FOMA SO706i)
- "電話番号" (Phone number)
- Notifying or not notifying the caller ID for dial-up connection

You cannot use the following reserved characters: ¥/: * ?!<> | " (half-pitch only).

Enter the correct information according to the provider information. Enter the correct, case-sensitive phone number in half-pitch.
For the caller ID settings, follow the instructions from the provider.

To specify advanced settings (TCP/IP settings)

Clicking "詳細情報の設定" (Detailed settings) displays the setup screen for "IP address" and "Name server". If they must be input as the provider or corporate LAN information, follow the input information directions and enter the addresses.

5 Specify a user ID and password, select the accessible user and click "次へ" (Next)

When "すべてのユーザー" (All users) is selected in the "使用可能ユーザーの選択" (Selecting accessible user) column, the connection setting is applied to all the users registered in Windows.

When setting the user ID and password, input the correct, case-sensitive data provided by the service provider.

For Windows Vista

Specify the user ID and password and click "次へ" (Next)

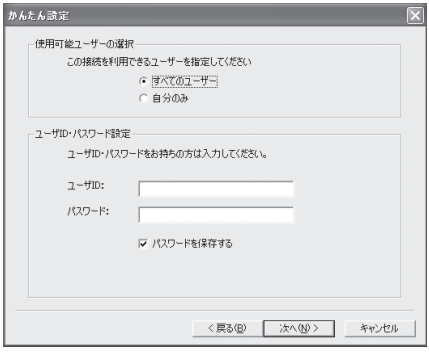

6 Check the setting information and click "完了" (Finish)

The contents of the settings are listed. Make sure that all settings are correct.
Checking "デスクトップにダイヤルアップのショートカットを作成する" (Add dial-up shortcut on desktop) automatically creates a shortcut icon.
To change any setting, click "戻る" (Back).

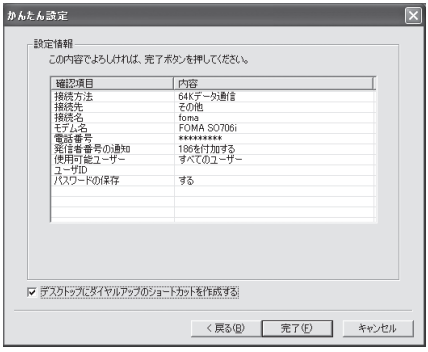

7 Click "OK"

Execute communication. →p.24

Executing Set Data Communication

1 Double-click the connection icon on the desktop

If the connection icon does not appear on the desktop, use the following procedure:

For Windows Vista

Open " " → "接続先" (Access point), select the access point and click "接続" (Connection)

For Windows XP

Open "スタート" (Start) → "すべてのプログラム" (All Programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ネットワーク接続" (Network connections) → Open the access point

For Windows 2000

Open "スタート" (Start) → "プログラム" (Programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ネットワークとダイヤルアップ接続" (Network and dialup connection) → Open the access point

2 Click "ダイヤル" (Dial) and execute access operation

You can leave user name and password blank for the mopera U or mopera connection. If you select an Internet service provider other than mopera U, mopera or you use dial-up connection, enter the "ユーザー名" (User name) and "パスワード" (Password) and click "ダイヤル" (Dial).

<The Connecting screen appears>

While this screen appears, the log-on process such as confirmation of the user name and password is performed.

<Completion of the connection>

When the connection is complete, a message appears from the indicator of the taskbar located on the bottom-right of the desktop for a few seconds.
You can start browser software to view sites and websites or to use e-mail.
If this message does not appear, check “Setting up Dial-up Network” (p.29) and “Setting up Dial-up” (p.36).

- During packet communication, a different icon appears on the FOMA terminal depending on the communication conditions.

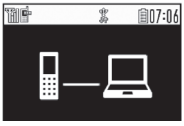

(Communicating, sending data)
(Communicating, receiving data)
(Communicating, no data transfer)
(Sending, or disconnecting)
(Receiving, or disconnecting)

- " " appears on the FOMA terminal during 64K data communication.

NOTE

- When executing data communication by using the FOMA USB Cable with Charge Function 01/02 (optional), dialing from the dial-up icon is only valid for the FOMA terminal used when the icon is created. Therefore, to connect to another FOMA terminal, the communication setting file (drivers) must be installed again.

How to disconnect

Since just closing the browser on your PC may not disconnect, be sure to disconnect by the following procedure:

1 Double-click the dial-up icon in the task-tray

The connecting screen appears.

Dial-up icon

For Windows Vista

Open "⊞" → "接続先" (Access point)
Select the dial-up currently connected.

2 Click "切断" (Disconnect)

NOTE

● The communication speed displayed on the PC may be different from the actual communication speed.

When this happens

● Check the followings if you cannot connect to the network or dial-up successfully.

Problem	Points to check
"FOMA SO706i" is not recognized by the PC.	· Check if your PC satisfies the required operational environment (p.4). · Check if the FOMA communication setting file (drivers) is installed. · Check if the FOMA terminal is connected to the PC and the power is turned on. · Check if the FOMA USB Cable with Charge Function 01/02 (optional) is firmly connected. · Check if the USB mode setting (p.7) is set to "Communication mode".
Unable to connect with the access point.	· Check if the settings for the ID (user name) and password are correct. · Check if the FOMA USB Cable with Charge Function 01/02 (optional) is firmly connected. · If the access point requires the Caller ID, make sure that "184" is not added to the phone number. · Check if the box of "フロー制御を使う" (Use the flow control) of the modem property is checked. · Check if the APN is set correctly. · If you still cannot connect to the other end after checking the above, consult with the Internet service provider or network administrator about the setting method.

Optimizing Communication Settings

"通信設定最適化" (Optimize communication settings) is a "TCP parameter setup tool" to optimize the transmission capability of TCP/IP when "Packet communication" is carried out on the FOMA network. The communication settings by this software are required to make the most of communication performance of the FOMA terminal on Windows XP or 2000.

● Cancel optimization beforehand when you perform the PC connection overseas.

Setting up and canceling optimization

The procedure for setting up and canceling optimization from a Windows XP machine is described as an example.

1 Start the program

(1) If you are operating from "FOMA PC設定ソフト" (FOMA PC setting software)

Click "通信設定最適化" (Optimize communication settings) of "マニュアル設定" (Manual setup) after starting the program.

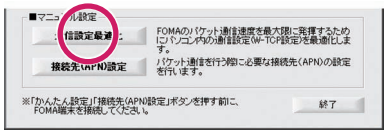

(2) If you are operating from the task-tray

Click the "通信設定最適化" (Optimize communication settings) icon in the task-tray located at the bottom-right of the desktop to start the program.

2 Proceed with the following

(1) If the system settings have not been optimized

Select "FOMA HIGH-SPEED対応端末 （受信最大3.6Mbps） " (FOMA HIGH-SPEED phone (up to 3.6Mbps for receiving)) and click "最適化を行う" (Optimize the setting).

"HIGH-SPEED対応端末の確認 (Confirmation for HIGH-SPEED phone)" screen appears. Click "はい" (Yes) to optimize the system settings.

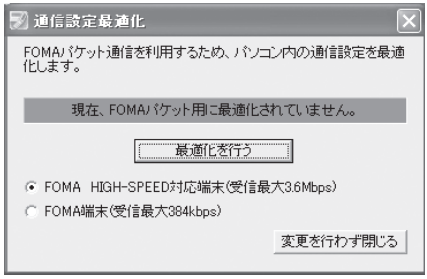

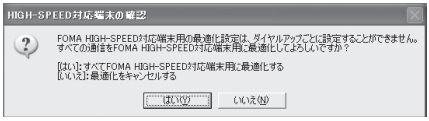

(2) If the system settings have been optimized

When canceling the optimization settings to execute communication via a device other than a FOMA terminal, click "最適化を解除する" (Cancel optimization).

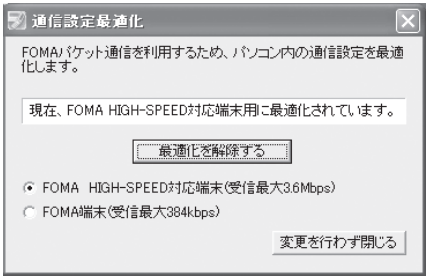

Close all the programs open and follow the screen instructions to restart the PC. The optimized system settings become valid after the restart.

Access Point Name (APN) Settings

Set up the access point (APN) for packet communication. You can set up to 10 destinations and administer them by registering them into cid (Registration Numbers) 1 through 10.

● As the APN of mopera "mopera.ne.jp" is assigned to cid1 and APN of mopera U "mopera.net" to cid3 by default, assign the APN to cid2 or between cid4 to cid10.

1 After starting "FOMA PC設定ソフト" (FOMA PC setting software), click "接続先(APN)設定" (Set up Access point (APN))

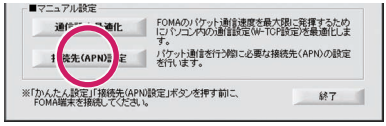

2 Click "OK" on the FOMA terminal settings acquisition screen

Automatically accesses the connected FOMA terminal and reads the registered Access point (APN) information.
It does not start if no FOMA terminal is connected.

3 Set up the access point (APN)

Adding/Editing/Deleting the Access point (APN)

- **To add an access point (APN)**
  Click "追加" (Add) on the "接続先（APN）設定" (Set up Access point (APN)) screen.
- **To edit a registered access point (APN)**
  Select the applicable access point (APN) from the list and click "編集" (Edit) on the "接続先（APN）設定" (Set up Access point (APN)) screen.
- **To delete a registered access point (APN)**
  Select the applicable access point (APN) from the list and click "削除" (Delete) on the "接続先（APN）設定" (Set up Access point (APN)) screen.
  You cannot delete the access point assigned to cid1 and cid3 (Even if you select cid3 and click "削除" (Delete), the access point is not deleted and remains "mopera.net").

Saving in File

If you want to back up the access point (APN) settings registered on the FOMA terminal and/or save the access point (APN) settings being edited, you can save the access point (APN) settings by setting from the "ファイル" (File) menu of the toolbar.

Reading from File

If you want to edit the saved access point (APN) settings and/or write into the FOMA terminal, you can read the access point (APN) settings saved on the PC by operating from the "ファイル" (File) menu of the toolbar.

Writing Access point (APN) information into FOMA terminal

Clicking "FOMA端末へ設定を書き込む" (Write settings into FOMA terminal) on the "接続先（APN）設定" (Set up Access point (APN)) screen allows you to write the displayed access point (APN) settings into the FOMA terminal.

Dial-up creating function

Select the added/edited access point (APN) on the "接続先（APN）設定" (Set up Access point (APN)) screen and click "ダイヤルアップ作成" (Create dial-up).
When the screen for writing into the FOMA terminal appears, click "はい" (Yes). After finishing writing into the FOMA terminal, the "パケット通信用ダイヤルアップの作成" (Create dial-up for packet communication) appears.

Enter any connection name you want and click "ユーザID・パスワードの設定" (Set up User ID/Password). Enter the user ID and password, and follow the onscreen instructions to configure the settings. You can leave the user ID and password blank for mopera U or mopera.

If your provider has given you instructions for setting IP and DNS information, click "詳細情報の設定" (Detailed settings) on the "パケット通信用ダイヤルアップの作成" (Create dial-up for packet communication) screen, register necessary information and click "OK".
After entering the settings, click "FOMA端末へ設定を書き込む" (Write settings into FOMA terminal), confirm overwriting and start writing.

NOTE

- The APN settings (the access point for FOMA packet communication) are stored in the FOMA terminal. Therefore, the APN must be registered again if you connect to another FOMA terminal.
- When continuously using the dial-up setting created on the PC, register the same APN setting (cid setting) number with the FOMA terminal.

Setting up Dial-up Network

This section describes how to set up a dial-up connection for packet communication / 64K data communication without using the FOMA PC setting software. The flow of operation is described below.

- It is unnecessary to set up the dial-up network for 64K data communication. Go on to "Setting up Dial-up" (p.36).

About AT commands

- AT commands are commands for modem control. The FOMA terminal complies AT commands and supports some enhanced commands and its own AT commands.
- Entering an AT command allows you to set or confirm (display) the detail settings and the contents of the settings for the "Data communication" and FOMA terminal.

Checking the COM port

- To set up the access point (APN), you need to specify the COM port number assigned to "FOMA SO706i" (Modem) built in after installing the FOMA communication setting file (drivers). This section describes how to confirm the COM port number. The COM port confirmed here will be used in the access point (APN) set up (p.32).

Preparation

1 Connect the FOMA USB Cable with Charge Function 01/02 (optional) to the FOMA terminal

2 Turn on the FOMA terminal, then connect the FOMA USB Cable with Charge Function 01/02 connected to the FOMA terminal to your PC

● To check the COM port on Windows Vista

1. Open "" → "コントロールパネル" (Control Panel)
2. Open "ハードウェアとサウンド" (Hardware and Sound) → "電話とモデムのオプション" (Telephone and modem options) in Control Panel
3. If the "所在地情報" (Address information) screen is displayed, enter "市外局番／エリアコード" (Area code) and click "OK"
4. Click the "モデム" (Modem) tab to confirm the COM port of the "接続先" (Access point) column of "FOMA SO706i" and click "OK"

   The COM port confirmed here will be used in the access point (APN) set up (p.32).

   The contents displayed on the screen and the COM port number differ depending on the PC.

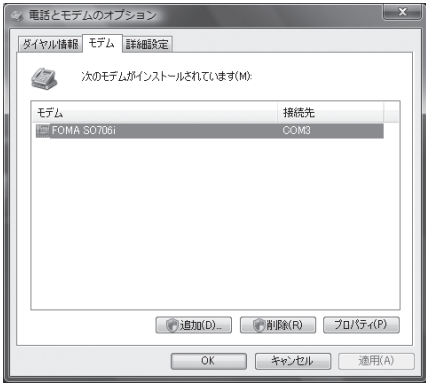

● To check the COM port on Windows XP

1. Open "スタート" (Start) → "コントロールパネル" (Control Panel)

2. Open "電話とモデムのオプション" (Telephone and modem options) from "プリンタとその他のハードウェア" (Printers and other hardware) in Control Panel

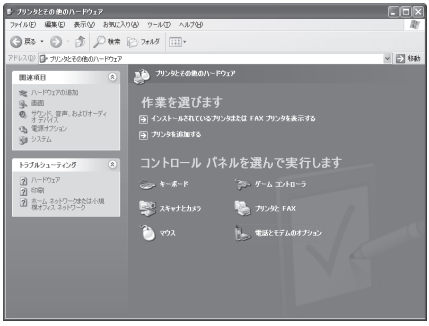

3 If the "所在地情報" (Address information) screen is displayed, enter "市外局番／エリアコード" (Area code) and click "OK"

4 Click the "モデム" (Modem) tab to confirm the COM port of the "接続先" (Access point) column of "FOMA SO706i" and click "OK"

The COM port confirmed here will be used in the access point (APN) set up (p.32).

The contents displayed on the screen and the COM port number differ depending on the PC.

● To check the COM port on Windows 2000

1 Open "スタート" (Start) → "設定" (Settings) → "コントロールパネル" (Control Panel)

2 Open "電話とモデムのオプション" (Telephone and modem options) in Control Panel

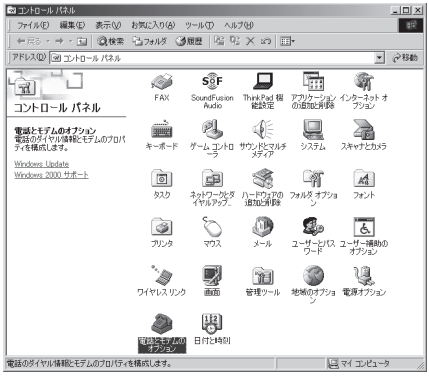

3 If the "所在地情報" (Address information) screen appears, enter "市外局番" (Area Code) and click "OK"

4 Click the "モデム" (Modem) tab to confirm the COM port of the "接続先" (Access point) column of "FOMA SO706i" and click "OK"

The COM port confirmed here will be used in the access point (APN) set up (p.32).

The contents displayed on the screen and the COM port number differ depending on the PC.

Setting up the access point (APN)

Default setting	cid1：mopera.ne.jp　cid3：mopera.net　cid2, 4 to 10：not set

Communication software to enter AT commands is required for the settings. This section describes how to set it up using "Hyper terminal" that comes with Windows.

- Windows Vista is not compatible with "Hyper terminal". For Windows Vista, set with compatible software. (Follow the instructions for the setting of the software.)

Access points <APN/cid>

- Normal telephone numbers are not used for access points for packet communication unlike 64K data communication. Set up APN instead of a telephone number for connection.
- The APN setting is just like registering a Phonebook for packet communication from a PC. Assign registration number (cid) 1 through 10 to register, which is used as a part of the access point number. As the APN of mopera "mopera.ne.jp" is assigned to cid1 and APN of mopera U "mopera.net" to cid3 by default, assign the APN to cid2 or between cid4 to cid10.*1
- APN is administered by "cid (administration numbers 1 through 10)". Specifying "＊99＊＊＊<cid number>＃" as the access point number enables the connection to the access point with the cid number.
- Specifying "＊99＊＊＊1＃" as the access point number for the mopera connection or "＊99＊＊＊3＃" for the mopera U connection enables you to use mopera or mopera U easily.*2
- The APN setting registers the access point to the FOMA terminal just like registering other parties' information (telephone number, etc.) on a mobile phone. The following are comparisons with the Phonebook of the mobile phone:

		APN setting	Phonebook of mobile phone
Data to be registered		APN	Phone number
		cid	Memory number of Phonebook
		—	Other party's name
How to register	Register using PC	○ (FOMA PC setting software, etc.)	○ (Dedicated software required)
	Register using Mobile phone	× (Cannot even confirm)	○
How to use		Specify cid to connect	Look up Phonebook to call
		—	Enter the telephone number directly from the dial key on the FOMA terminal to call.

- Registered cid will be connection numbers in the dialup connection settings.
- Contact your Internet service provider or network administrator for an access point (APN) other than mopera U or mopera.

*1： Set up the APN setting for the access point (Internet service provider) on the FOMA terminal in advance instead of entering APN in the Telephone Number column of "ダイヤルアップネットワーク" (Dial-up Network) for connection.

*2： To connect to other Internet service providers, set the APN and assign it to cid2 or cid4 to cid10.

<Example: For Windows XP>

1 Connect the FOMA USB Cable with Charge Function 01/02 (optional) to the FOMA terminal

2 Turn on the FOMA terminal, then connect the FOMA USB Cable with Charge Function 01/02 connected to the FOMA terminal to the PC

3 Click "スタート" (Start) → "すべてのプログラム" (All programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ハイパーターミナル" (Hyper terminal) to start Hyper terminal

For Windows 2000

Open "スタート" (Start) → "プログラム" (Programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ハイパーターミナル" (Hyper terminal).

4 Select the "今後、このメッセージを表示しない" (Do not display this message again) checkbox and then click "はい" (Yes)

5 Enter any name in the "名前" (Name) column and click "OK"

"sample" is entered here as an example.

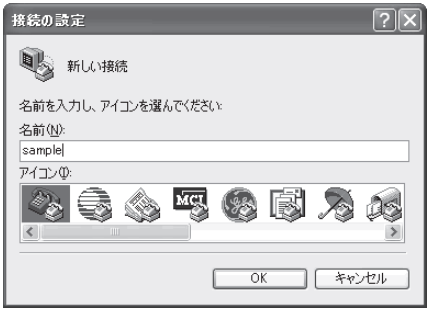

6 Select "FOMA SO706i" from "接続方法" (Connection method), and click "OK"

Click "キャンセル" (Cancel) after the connection screen appears.

If a COM port of "FOMA SO706i" can be selected

When Properties of the COM port is displayed, click "OK".
In this example, "COM3" is selected. See "Checking the COM port" (p.29) to confirm the actual COM port number of "FOMA SO706i" to be selected in "接続方法" (Connection method).

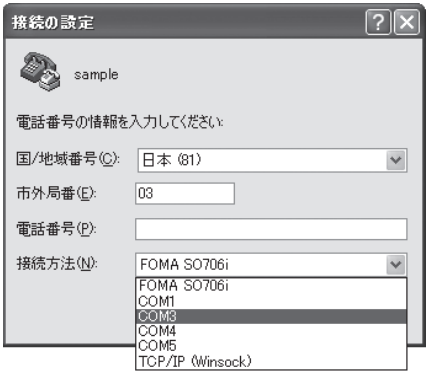

If a COM port of "FOMA SO706i" cannot be selected

Click "キャンセル" (Cancel) to close the "接続の設定" (Connection Settings) screen and then follow the steps below:

(1) Select "ファイル" (File) menu → "プロパティ " (Properties)
(2) Select "FOMA SO706i" in the "接続方法" (Connection method) column of the "接続の設定" (Connection Settings) tab on the "sampleのプロパティ " (sample Properties) screen
(3) Uncheck "国/地域番号と市外局番を使う" (Use the Country/Region Code and Area Code)
(4) Click "OK"

7 Enter the access point (APN) and press ↵

Enter in the format of AT+CGDCONT=<cid>, "PDP_type", "APN"

<cid>： Enter any number from 2 or between 4 and 10.

Please be cautious because if cid has been already set, the setting will be overwritten.

"PDP_type"：Enter "PPP" or "IP".

"APN"： Put " " around the access point (APN) to enter.

If "OK" is displayed, the settings for the access point (APN) are completed.

Example: To enter APN named XXX.abc in cid Number2

Enter AT+CGDCONT=2,"PPP","XXX.abc" ↵.

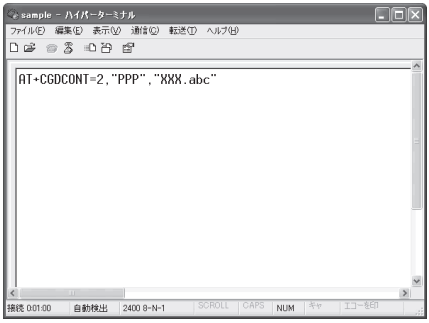

8 Confirm that "OK" appears and click "ハイパーターミナルの終了" (Close Hyper terminal) in the "ファイル" (File) menu

""sample"と名前付けされた接続を保存しますか？ " (Are you going to save the connection "sample"?) appears, but it is not necessary to save.

NOTE

- The AT commands entered in "Hyper terminal" may not be displayed after Step 7 on p.34. In this case, if you enter ATE1 ↵, AT commands you enter from then on are displayed.
- To reset the access point (APN) settings using the AT command
  - If reset, the access point (APN) setting with cid=1 will return to "mopera.ne.jp" (Default value) and cid=3 to "mopera.net" (Default value), and cid=2, 4 through 10 will be unregistered.

  <How to enter>

  AT+CGDCONT= ↵ (to reset all cid)

  AT+CGDCONT=〈cid〉 ↵ (to reset a certain cid only)
- To confirm the access point (APN) settings using the AT command
  - Display the current settings.

  <How to enter>

  AT+CGDCONT? ↵

Notifying or Not notifying the Caller ID

- You can set whether to notify the other person of your caller ID when packet communication is carried out. Since the caller ID is important information, please take care when you send your caller ID.
- You can set up the Notify or not notify Caller ID setting using the AT command prior to a dial-up connection.
- Use the ＊DGPIR command (p.48) to notify or not notify the caller ID or change back to "Not set" (Default value).

1 Start "ハイパーターミナル" (Hyper terminal)

For how to start Hyper terminal, see "Setting up the access point (APN)" (p.32).

2 Set up Notify (186) or Not notify (184) Caller ID for packet communication

Enter in the format of "AT ＊DGPIR=<*n*>".

To automatically attach 184 (Not notify) for dialing an outgoing call/answering an incoming call

Enter the following:

AT ＊DGPIR=1 ↵

To automatically attach 186 (Notify) for dialing an outgoing call/answering an incoming call

Enter the following:

AT ＊DGPIR=2 ↵

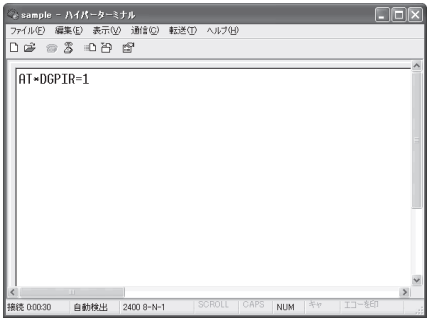

3 Confirm that "OK" appears and click "ハイパーターミナルの終了" (Close Hyper terminal) in the "ファイル" (File) menu

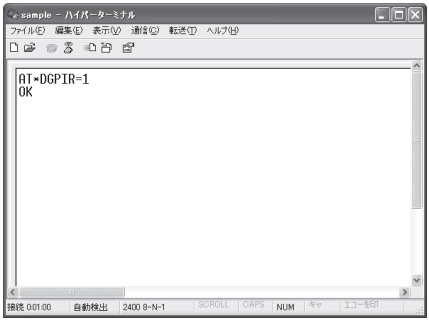

NOTE

- The Caller ID needs to be set to "Notify" to use DOCOMO's internet connection service mopera U or mopera.

About 186 (Notify)/184 (Not notify) in Dial-up Network

You can attach 186/184 to the access point number in the Dial-up network settings as well.
The following table shows what happens if you set 186/184 both for the ＊DGPIR command and the Dial-up network setting.

Dial-up network setting (for cid=1)	Notify/Not notify setting by ＊DGPIR command	Notify/Not notify Caller ID
＊99＊＊＊1#	Not set	Notify
	Not notify	Not notify
	Notify	Notify
184＊99＊＊＊1#	Not set	Not notify (Dial-up network notification 184 has the priority)
	Not notify	
	Notify	
186＊99＊＊＊1#	Not set	Notify (Dial-up network notification 186 has the priority)
	Not notify	
	Notify	

Setting up Dial-up

- This section takes accessing mopera U by packet communication for example.
- To connect using packet communication, enter "＊99＊＊＊3#" as the number of access point for mopera U or "＊99＊＊＊1#" for mopera. To connect using 64K data communication, enter "＊8701" as the number of access point for mopera U or "＊9601" for mopera.

Setting up dial-up on Windows Vista

1 Open "" → "接続先" (Access point)

2 Click "接続またはネットワークをセットアップします" (Set up the connection or network)

3 Select "ダイヤルアップ接続をセットアップします" (Set up dial-up connection) and click "次へ" (Next)

4 If the modem selection screen appears, click "FOMA SO706i モデム" (FOMA SO706i modem)

The modem selection screen appears only if there are multiple modems.

5 Select the "ダイヤルアップの電話番号" (Phone number for dial-up) and enter the number of the access point

You can leave user name and password blank for mopera U or mopera connection.
To connect to any other provider than mopera U or mopera, enter the user name and password specified by the provider or network administrator in the "ユーザー名" (User Name) and "パスワード" (Password) columns as this screen.

This screen is an example of accessing mopera U by packet communication.

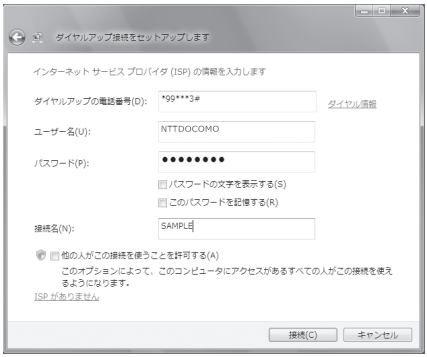

6 Click "接続" (Connect) and then click "スキップ" (Skip)

To confirm the settings, cancel a connection test.

7 Click "接続をセットアップします" (Set up the connection) and then "閉じる" (Close)

8 Open " "→ "接続先" (Access point)

9 Right-click the icon created for the dial-up and click "プロパティ" (Properties)

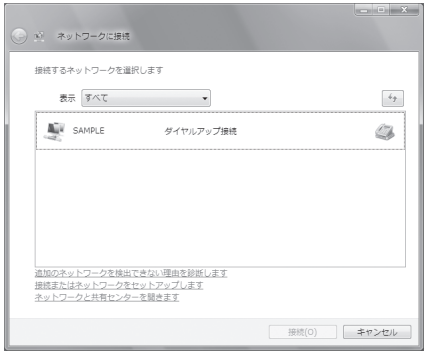

10 Confirm the settings on the "全般" (General) tab

If two or more modems are connected to the PC, confirm that only "モデム－FOMA SO706i" (Modem - FOMA SO706i) is checked in the "接続の方法" (Connection method) column. If not, check it.
Confirm that "ダイヤル情報を使う" (Use Dial Information) is unchecked. If not, uncheck it.

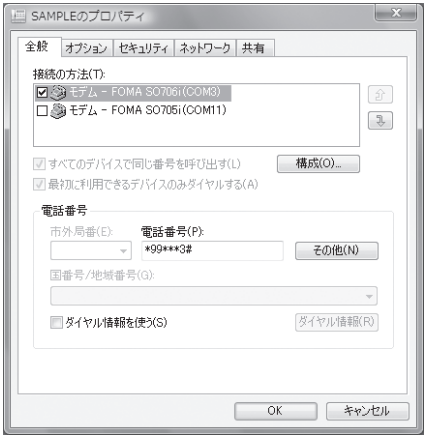

11 Click the "ネットワーク" (Network) tab and set up each setting

Check only "インターネット プロトコル バージョン4（TCP/IPv4）" (Internet Protocol version 4 (TCP/IPv4)) in the "この接続は次の項目を使用します" (Use the following items for this connection). Check "QoS パケットスケジューラ" (QoS Packet Scheduler) and other items if instructed by the provider.

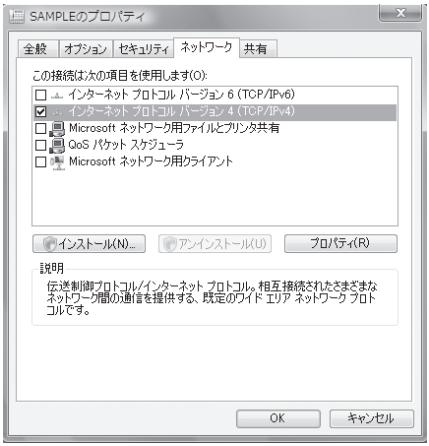

12 Click the "オプション" (Options) tab and click "PPP設定" (PPP settings)

13 Clear all the boxes and click "OK"

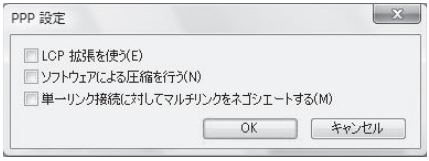

14 Click "OK"

Setting up dial-up on Windows XP

1. Open "スタート" (Start) → "すべてのプログラム" (All programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "新しい接続ウィザード" (New connection wizard)

2. When the "新しい接続ウィザード" (New Connection Wizard) screen appears, click "次へ" (Next)

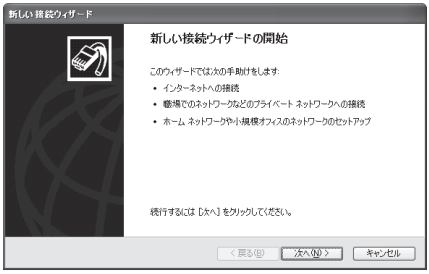

3. Select "インターネットに接続する" (Connect to the Internet) and click "次へ" (Next)

4. Select "接続を手動でセットアップする" (Set up the connection manually) and click "次へ" (Next)

5. Select "ダイヤルアップモデムを使用して接続する" (Connect using a dial-up modem) and click "次へ" (Next)

6. If the "デバイスの選択" (Select the device) screen appears, select only "モデム－FOMA SO706i (COMx)" (Modem－FOMA SO706i (COMx)), and click "次へ" (Next)

   The "デバイスの選択" (Select the device) screen appears only if there are multiple modems. (COMx) is a number of COM port displayed in "Checking the COM port" (p.29).

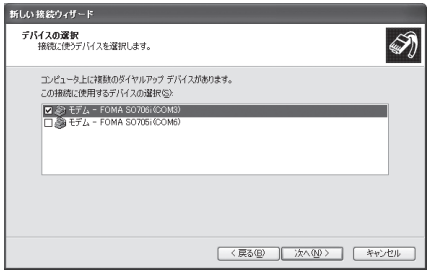

7. Enter any name you want in the "ISP名" (ISP Name) and click "次へ" (Next)

8 Enter the number of the access point in the "電話番号" (Telephone Number) column and click "次へ" (Next)

This screen is an example of accessing mopera U by packet communication.

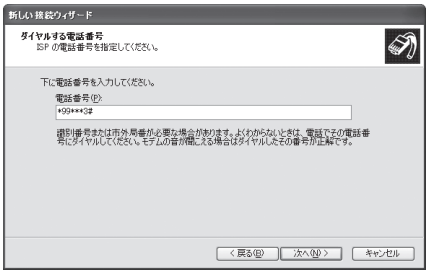

9 Click "次へ" (Next)

You can leave user name and password blank for mopera U or mopera connection.
To connect to any other provider than mopera U or mopera, enter exact information specified by the provider or network administrator in the "ユーザー名" (User Name), "パスワード" (Password) and "パスワードの確認入力" (Confirm Password) columns as this screen.

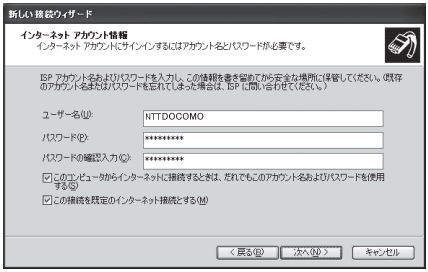

10 Click "完了" (Finish)

The newly created connection wizard appears.

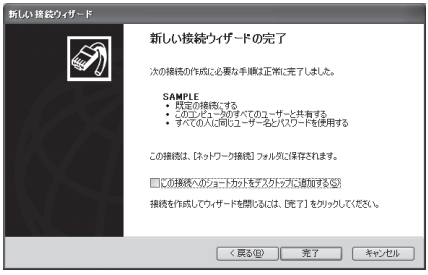

11 Open "スタート" (Start) → "すべてのプログラム" (All programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ネットワーク接続" (Network connections)

12 Select the icon created for the dial-up and open "プロパティ" (Properties) in the "ファイル" (File) menu

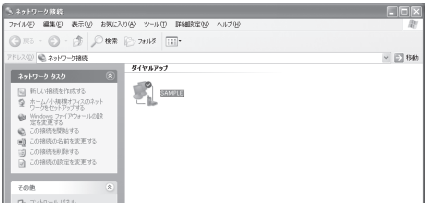

13 Confirm the settings on the "全般" (General) tab

If two or more modems are connected to the PC, confirm that only "モデム－FOMA SO706i" (Modem - FOMA SO706i) is checked in the "接続方法" (Connection method) column. If not, check it. Confirm that "ダイヤル情報を使う" (Use Dial Information) is unchecked. If it is checked, uncheck it.

This screen is an example of accessing mopera U by packet communication.

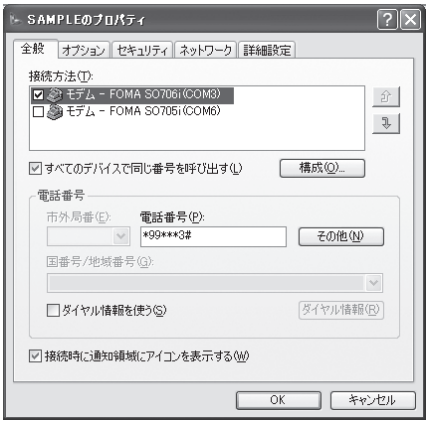

14 Click the "ネットワーク" (Network) tab and set up each setting

Select "PPP: Windows 95/98/NT4/2000, Internet" in the "呼び出すダイヤルアップサーバーの種類" (Type of the dial-up server to call).

Select "インターネットプロトコル（TCP/IP）" (Internet Protocol (TCP/IP)) in the "この接続は次の項目を使用します" (Use the following items for this connection). Since the setting of "QoSパケットスケジューラ" (QoS Packet Scheduler) cannot be changed, leave it as it is.

15 Click "設定" (Settings)

16 Clear all the boxes and click "OK"

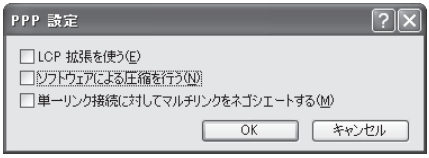

17 When the Step 14 screen reappears, click "OK"

Setting up dial-up on Windows 2000

1 Open "スタート" (Start) → "プログラム" (Programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ネットワークとダイヤルアップ接続" (Network and Dial-up connections)

2 Double-click "新しい接続の作成" (Create a new connection) in Network and Dial-up Connections

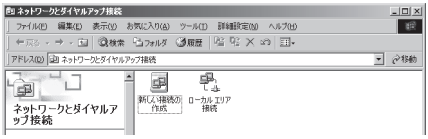

3 If the "所在地情報" (Address information) screen appears, enter "市外局番" (Area Code) and click "OK"

The "所在地情報" (Address Information) screen appears only when "新しい接続の作成" (Create a new connection) is started for the first time in Step 2.
This screen does not appear from the second time on, but the "ネットワークの接続ウィザード" (Network Connection Wizard) screen does instead, proceed to Step 5.

4 When the "電話とモデムのオプション" (Telephone and Modem options) screen appears, click "OK"

5 When the "ネットワークの接続ウィザード" (Network Connection Wizard) screen appears, click "次へ" (Next)

6 Select "インターネットにダイヤルアップ接続する" (Connect to the Internet via dial-up) and click "次へ" (Next)

7 Select "インターネット接続を手動で設定するか、またはローカルエリアネットワーク(LAN)を使って接続します" (Set up an internet connection manually or connect using Local Area Network (LAN)) and click "次へ" (Next)

8 Select "電話回線とモデムを使ってインターネットに接続します" (Connect to the internet using a telephone line and a modem) and click "次へ" (Next)

9 Confirm that the "インターネットへの接続に使うモデムを選択する" (Select the modem used to connect to the internet) has "FOMA SO706i" and click "次へ" (Next)

If "FOMA SO706i" is not selected, select "FOMA SO706i".

If no other modem than "FOMA SO706i" has been installed, this screen does not appear.

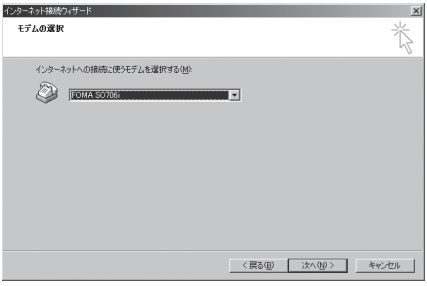

10 Enter the number of the access point in the "電話番号" (Telephone number) column and click "詳細設定" (Advanced settings)

Uncheck "市外局番とダイヤル情報を使う" (Use Area Code and Dial information).

This screen is an example of accessing mopera U by packet communication.

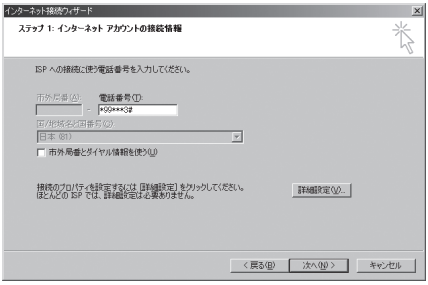

11 Set up the "接続" (Connection) tab as shown on the right and click the "アドレス" (Address) tab

To connect to any other provider than mopera U or mopera, enter exact information specified by the Internet service provider or network administrator in "接続の種類" (Connection Type) and "ログオンの手続き" (Logon Procedure).

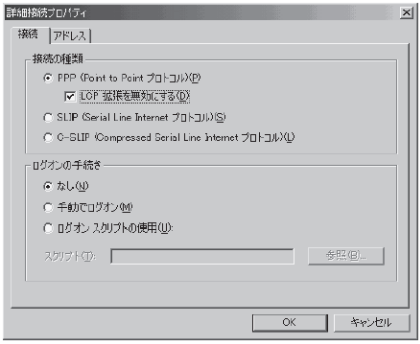

12 Set up the IP address and DNS (Domain Name Service) address on the "アドレス" (Address) tab as shown on the right and click "OK"

To connect to any other provider than mopera U or mopera, enter exact information specified by the Internet service provider or network administrator in "IPアドレス" (IP address) and "ISPによるDNS（ドメインネームサービス）アドレスの自動割り当て" (Automatically assign DNS (Domain Name Service) by ISP).

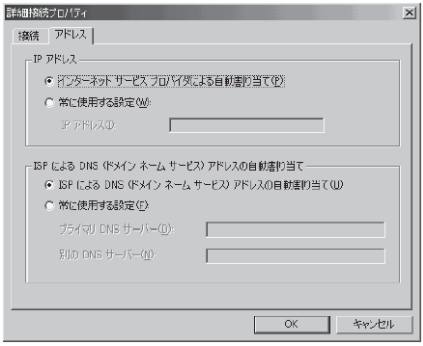

13 When the screen returns to Step 10, click "次へ" (Next)

14 Click "次へ" (Next)

You can leave user name and password blank for mopera U or mopera connection.
To connect to any other provider than mopera U or mopera, enter exact information specified by the Internet service provider or network administrator in "ユーザー名" (User Name) and "パスワード" (Password) columns as this screen.

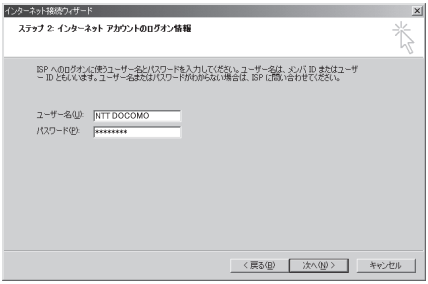

15 Enter any name you want in the "接続名" (Connection name) and click "次へ" (Next)

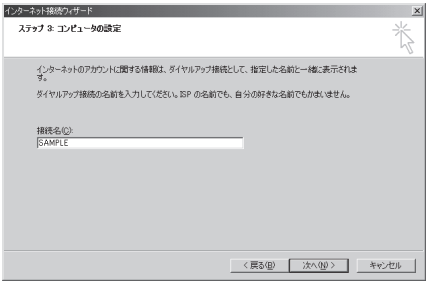

16 Select "いいえ" (No) and click "次へ" (Next)

17 Click "完了" (Finish)

18 Select the icon created for the dial-up and open "プロパティ" (Properties) in the "ファイル" (File) menu

19 Confirm the settings on the "全般" (General) tab

If two or more modems are connected to the PC, confirm that only "モデム－FOMA SO706i" (Modem - FOMA SO706i) is checked in the "接続の方法" (Connection method) column. If not, check it.
Confirm that "ダイヤル情報を使う" (Use Dial Information) is unchecked. If not, uncheck it.

This screen is an example of accessing mopera U by packet communication.

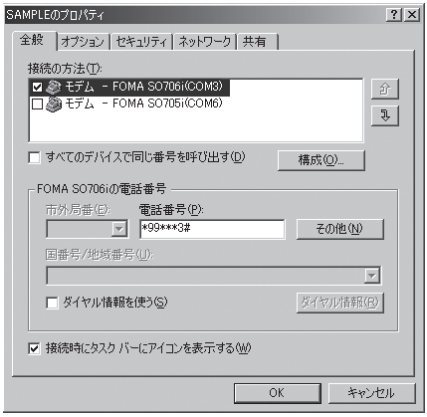

20 Click the "ネットワーク" (Network) tab and set up each setting

Select "PPP: Windows 95/98/NT4/2000, Internet" in the "呼び出すダイヤルアップサーバーの種類" (Type of the dial-up server to call).

Check only "インターネットプロトコル（TCP/IP）" (Internet Protocol (TCP/IP)) for components.

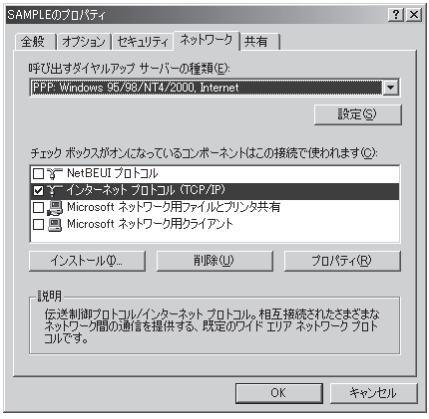

21 Click "設定" (Settings)

22 Clear all the boxes and click "OK"

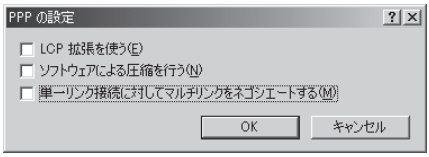

23 When the Step 20 screen reappears, click "OK"

Running dial-up connection

This section describes how to make a dial-up connection for packet communication by using the dial-up setting.

<Example: For Windows XP>

1 Connect the FOMA terminal to the PC with the FOMA USB Cable with Charge Function 01/02 (optional)

"Connecting the devices"→p.7

2 Open "スタート" (Start) → "すべてのプログラム" (All programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ネットワーク接続" (Network connections)

3 Open Access point

Select the dial-up access point icon with the ISP name set in Step 7 on p.39 to select "ネットワークタスク" (Network task) → "この接続を開始する" (Start this connection) or double-click the icon of the access point.

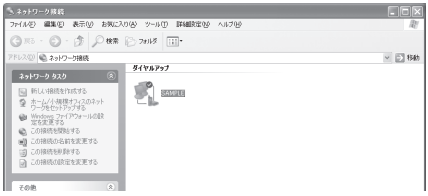

4 Confirm the settings and click "ダイヤル" (Dial)

This screen is an example for mopera U connection. You can leave user name and password blank for mopera U or mopera connection.

<The Connecting screen appears>

While this screen appears, the log-on process such as confirmation of the user name and password is performed.

<Completion of the connection>

When the connection is complete, a message appears from the indicator of the taskbar located on the bottom-right of the desktop for a few seconds (The completion of the connection screen may appear depending on the OS. Click "OK").
You can start browser software to view sites and websites or to use e-mail.
If this message does not appear, check "Setting up Dial-up Network" (p.29) and "Setting up Dial-up" (p.36).
See p.25 for communication conditions.

How to disconnect

Just closing the Internet browser may not disconnect the communication line. Follow the instructions below to disconnect for sure. This section describes an example using Windows XP.

1 Click the dial-up icon in the task-tray

The connection condition screen for Internet will be displayed.

Dial-up icon

For Windows Vista

Open "⊕" → "接続先" (Access point)
Select the dial-up currently connected.

2 Click "切断" (Disconnect)

NOTE

● The communication speed displayed on the PC may be different from the actual communication speed.

AT Command List

AT commands available on FOMA terminal

- The following abbreviations are used in the AT command list;
  [&F] : Command of which setting is initialized by AT&F command.
  [&W] : Command of which setting is saved by AT&W command. The setting can be retrieved by ATZ command.
- When you make a call via an external device or using AT command, the call is made from Number A in A mode/Dual mode, and from Number B in B mode.

Modem port command list

The followings are the usable commands for "FOMA SO706i (モデム)" (modem):

AT command	Outline	Parameter/description	Command execution example
A/	Executes the last executed command again. No carriage return is necessary.	—	A/ OK
AT	—	The modem function of a FOMA terminal is controllable by adding the command of this table after this command. * OK is answered even when only AT is entered.	AT OK
AT%V	Displays the version of the FOMA terminal.	—	AT%V Ver1.00 OK
AT&C*n* [&F] [&W]	Selects the operating condition of the circuit CD signal to DTE.	*n*=0 : CD is always ON. *n*=1 : CD changes according to the carrier of the other party's modem (initial value).	AT&C1 OK
AT&D*n* [&F] [&W]	Selects the operation to take place when the circuit ER signal received from DTE transits between ON and OFF.	*n*=0 : Ignores ER status (always assumed to be ON). *n*=1 : When ER changes from ON to OFF, it becomes an on-line command status. *n*=2 : If ER changes from ON to OFF, a connection is disconnected and it will be in an off-line command status (initial value).	AT&D1 OK
AT&E*n* [&F] [&W]	Selects how to display the connection speed.	*n*=0 : Displays the wireless network transmission speed. *n*=1 : Displays the DTE serial transmission speed (initial value).	AT&E0 OK
AT&F*n*	Restores all of registers to their defaults. If this command is input during communication, the line will be disconnected.	Only *n*=0 can be specified (can be omitted).	(At the time of off-line mode) AT&F OK AT&F? ERROR AT&F=? ERROR (At the time of on-line command mode) AT&F NO CARRIER (Change to off-line mode)
AT&S*n* [&F] [&W]	Sets the Data Set Ready signal to be output to DTE.	*n*=0 : DR is always ON (initial value). *n*=1 : DR signal is ON when the line is connected (when the communication call is established).	AT&S0 OK

AT command	Outline	Parameter/description	Command execution example
AT&W*n*	Stores the current settings.	Only *n*=0 can be specified (can be omitted).	AT&W0 OK AT&W OK AT&W? ERROR AT&W=? ERROR
AT＊DANTE	Displays the FOMA terminal signal reception level.	0：FOMA terminal signal reception level is displayed as out of area. 1：FOMA terminal signal reception level is 0 or 1 bar. 2：FOMA terminal signal reception level is 2 bars. 3：FOMA terminal signal reception level is 3 bars.	AT＊DANTE ＊DANTE:3 OK AT＊DANTE=? ＊DANTE:(0-3) OK
AT＊DGANSM=*n*	Sets the reject/permit mode setting for the packet incoming call. This command is effective for those incoming packet calls after the setting command is input.	*n*=0：Disables the incoming call reject (AT＊DGARL)/permit setting (AT＊DGAPL) (initial value). *n*=1：Enables the incoming call reject setting. *n*=2：Enables the incoming call permit setting. AT＊DGANSM? ：Displays the current setting.	AT＊DGANSM=0 OK AT＊DGANSM? ＊DGANSM:0 OK
AT＊DGAPL=*n* [,cid]	Sets APN, which permits incoming packet calls, by using <cid> parameter defined by +CGDCONT	*n*=0：Adds the APN defined by <cid> to incoming call permission list. *n*=1：Deletes the APN defined by <cid> from incoming call permission list. If <cid> is omitted, this will apply to all cid. AT＊DGAPL? ：Displays incoming call permission list.	AT＊DGAPL=0,1 OK AT＊DGAPL? ＊DGAPL:1 OK AT＊DGAPL=1 OK AT＊DGAPL? OK
AT＊DGARL=*n* [,cid]	Sets APN, which rejects incoming packet calls, by using <cid> parameter defined by +CGDCONT	*n*=0：Adds the APN defined by <cid> to incoming call rejection list. *n*=1：Deletes the APN defined by <cid> from incoming call rejection list. If <cid> is omitted, this will apply to all cid. AT＊DGARL? ：Displays incoming call rejection list.	AT＊DGARL=0,1 OK AT＊DGARL? ＊DGARL:1 OK AT＊DGARL=1 OK AT＊DGARL? OK
AT＊DGPIR=*n*	This command validates the setting for notifying Caller ID when sending/receiving packet communication. Even in the dial up network setting, you can also add 186 (notify) or 184 (not notify) to the access point number. (p.35)	*n*=0：Uses APN as it is (initial value). *n*=1：Uses APN by adding "184". (Caller ID is always not sent.) *n*=2：Uses APN by adding "186". (Caller ID is always sent.) AT＊DGPIR? ：Displays the current setting.	AT＊DGPIR=0 OK AT＊DGPIR? ＊DGPIR:0 OK
AT＊DRPW	Displays the indicator value of the receiving power of the FOMA terminal.	—	AT＊DRPW ＊DRPW:0 OK AT＊DRPW=? ＊DRPW:(0-75) OK
AT+CAOC	Inquires for the current charge.	—	AT+CAOC +CAOC:"000014" OK

AT command	Outline	Parameter/description	Command execution example
AT+CBC	Displays the battery status of the FOMA terminal.	Result: +CBC:<bcs>,<bcl> bcs: 0 : FOMA terminal is powered by the battery. 1 : FOMA terminal is not powered by the battery. 2 : FOMA terminal is not connected to the battery. 3 : FOMA terminal is out of transmission due to the power-supply error. bcl: 0 : Battery has run out, or battery is not connected. 1-100 : Battery remained	AT+CBC +CBC:0,70 OK AT+CBC? ERROR AT+CBC=? +CBC:(0-3),(0-100) OK
AT+CBST [&F] [&W]	Changes the bearer service type.	Format: AT+CBST=<*n*>,1,0 *n*=116 : 64,000bps (bit transparent) (initial value) *n*=134 : 64,000bps (multimedia)	AT+CBST=134,1,0 OK AT+CBST? +CBST:134,1,0 OK AT+CBST=? +CBST:(116,134), (1),(0) OK
AT+CEER	Displays the reason for disconnection of the previous call.	Result: +CEER:<report> report: List of disconnection reasons (p.59).	AT+CEER +CEER:36 OK
AT+CGDCONT	Sets the access point name (APN) for packet origination.	p.56	p.56
AT+CGEQMIN	Registers a criterion to be used to decide whether or not to allow the QoS (quality of service) that is informed from the network side when PPP packet communication is established.	p.56	p.56
AT+CGEQREQ	Sets the QoS (quality of service) to be requested to network when originating a PPP packet communication.	p.57	p.57
AT+CGMR	Displays the version of the FOMA terminal.	—	AT+CGMR 12345xxxxxxxxxx OK
AT+CGREG=*n* [&F] [&W]	Specifies whether to notify the network registration condition. The returned notification displays whether you are inside or out of service.	*n*=0 : Not informed (initial value). *n*=1 : Informed. Informed when switching between "Inside the service area" and "Outside the service area" is completed. AT+CGREG? : Displays the current setting. +CGREG : <*n*>, <stat> *n*: Set value stat : 0: Out of packet area 1: Within packet area 4: Unknown 5: Within packet area	AT+CGREG=1 OK (Set to informed) AT+CGREG? +CGREG: 1,0 OK AT+CGREG=? +CGREG: (0,1) OK (Outside the service area) (When you move from "outside the service area" to "inside the service area".) +CGREG:1
AT+CGSN	Displays the product number of the FOMA terminal.	—	AT+CGSN 12345xxxxxxxxxx OK
AT+CLIP=*n* [&F] [&W]	Displays the other party's Caller ID on a PC when a 64K data communication call is received.	*n*=0 : Not display the result (initial value) *n*=1 : Display the result AT+CLIP? : Displays the current setting. +CLIP:*n*,*m* *m*=0 : NW setting not notifying the other party of the Caller ID in outgoing call. *m*=1 : NW setting notifying the other party of the Caller ID in outgoing call. *m*=2 : Unknown	AT+CLIP=0 OK AT+CLIP=? +CLIP:(0,1) OK (A call is received when +CLIP=1 is set) RING +CLIP: "090XXXXXXXX",177, "123",136

AT command	Outline	Parameter/description	Command execution example
AT+CLIR=*n*	Sets whether or not to notify the other party of the phone number when originating a 64K data communication call.	*n*=0 : Complies to the CLIR service contract. *n*=1 : Not notify the other party of the caller's phone number. *n*=2 : Notify the other party of the caller's phone number (initial value). AT+CLIR? : Displays the current setting. +CLIR:*n*,*m* *m*=0 : CLIR is not started (Caller ID is always sent) *m*=1 : CLIR is started (Caller ID is always not sent) *m*=2 : Unknown *m*=3 : CLIR temporary mode (default is not notify) *m*=4 : CLIR temporary mode (default is notify)	AT+CLIR=0 OK AT+CLIR? +CLIR:0,1 OK AT+CLIR=? +CLIR:(0-2) OK
AT+CMEE=*n* [&F] [&W]	Sets whether the error report of the FOMA terminal is present.	*n*=0 : Use the ERROR result (initial value). *n*=1 : +CME ERROR:<err> result code is used, and a numeral value is used for <err>. *n*=2 : +CME ERROR:<err> result code is used, and characters are used for <err>. AT+CMEE? : Displays the current setting. The command displayed on the right is the execution example for cases when there is a FOMA terminal problem or a connection error. +CME ERROR result code is as follows. 1 : no connection to phone 10 : SIM not inserted 15 : SIM wrong 16 : incorrect password 100 : unknown	AT+CMEE=0 OK AT+CNUM ERROR AT+CMEE=1 OK AT+CNUM +CME ERROR:10 AT+CMEE=2 OK AT+CNUM +CME ERROR:SIM not inserted
AT+CNUM	Displays the own number of the FOMA terminal.	Result: +CNUM:,<number>,<type> number: phone number type : 129 or 145 129 : International access code (+) is not included. 145 : International access code (+) is included.	AT+CNUM +CNUM:,"+8190XXXXXXXX",145 OK
AT+COPS	Selects the network operator to connect.	Format : AT+COPS=<mode>,2,<oper> mode=0 : automatic (searches the network and switches the network operator automatically) mode=1 : manual (connects to the network operator specified in <oper>) mode=2 : Disconnects the connection to the network operator mode=3 : Mapping is not performed. mode=4 : manual/automatic (if the connection to the network operator specified in <oper> fails, works as automatic mode.) <oper> is a hexadecimal value which consists of Country code (MCC) and Network code (MNC). The format is as follows: Digit 1 of MCC ··· octet 1 bits 1 to 4 Digit 2 of MCC ··· octet 1 bits 5 to 8 Digit 3 of MCC ··· octet 2 bits 1 to 4 Digit 3 of MNC ··· octet 2 bits 5 to 8 Digit 2 of MNC ··· octet 3 bits 5 to 8	AT+COPS=0 OK AT+COPS? +COPS:0 OK AT+COPS=? +COPS:(2,,,"44F001"),(3,,,"44F002"),,(0,1),(2) OK

AT command	Outline	Parameter/description	Command execution example
AT+CPAS	Displays whether the control signal to the FOMA terminal is available or not.	Result: +CPAS: <pas> pas: 0 : FOMA terminal can send/receive control signal. 1 : FOMA terminal can not send/receive control signal. 2 : Unknown (control signal sending/ receiving is not assured). 3 : FOMA terminal can send/receive control signal and it is currently receiving. 4 : FOMA terminal can send/receive control signal and it is currently communicating.	AT+CPAS +CPAS:0 OK AT+CPAS? ERROR AT+CPAS=? +CPAS:(0-4)
AT+CPIN	Enters the PIN code in the FOMA terminal.	Format: AT+CPIN="<pin>","<newpin>" This command is to enter the PIN1, PIN2, or PUK code - depending on the state of the result code returned when AT+CPIN? is entered - of the FOMA terminal. Even if PIN code entry or the PUK code is requested on the screen, depending on the state of the result code when AT+CPIN? is entered, you may not be able to use this command to enter the PIN. Do not use this command to change PIN code. Put <pin> and <newpin> in " ". AT+CPIN? result +CPIN：READY：PIN1 code, PIN2 code Cannot enter the PUK1 or PUK2 code +CPIN：SIM PIN：PIN1 entry standby +CPIN：SIM PIN2：PIN2 entry standby +CPIN：SIM PUK：PIN1 blocked (Can enter PUK1 code) +CPIN:SIM PUK2 : PIN2 blocked (Can enter PUK2 code) The command displayed on the right is an entry sample of PIN code "1234" and PUK code "12345678".	(The status in which +CPIN: READY is answered when +CPIN? is entered) AT+CPIN="1234" ERROR (The status in which +CPIN: READY is answered when +CPIN? is entered) AT+CPIN="12345678", "1234" ERROR (The status in which +CPIN: SIM PIN is answered when +CPIN? is entered) AT+CPIN="1234" OK (The status in which +CPIN: SIM PUK is answered when +CPIN? is entered: PIN1 lock status) AT+CPIN="12345678", "1234" OK (The status in which +CPIN: SIM PUK2 is answered when +CPIN? is entered: PIN2 lock status) AT+CPIN="12345678", "1234" OK AT+CPIN? +CPIN:READY OK AT+CPIN=? OK
AT+CR=*n* [&F] [&W]	When the line is connected, displays the bearer service type before the CONNECT result code is displayed.	*n*=0 : Not display (initial value). *n*=1 : Display. <serv> : Displays only "GPRS", which means packet communication. (Displaying "SYNC" or "AV64K" depending on the line type.) AT+CR?: ：Displays the current setting.	AT+CR =1 OK ATD＊99＊＊＊1# +CR : GPRS CONNECT

AT command	Outline	Parameter/description	Command execution example
AT+CRC=*n* [&F] [&W]	Sets whether to use the extended result code for the incoming call.	*n*=0 : Not use +CRING (initial value). *n*=1 : Use +CRING.<type>. Format of +CRING: +CRING：SYNC +CRING：AV64K : GPRS “PPP” ,,, “<APN>” AT+CRC? : Displays the current setting.	AT+CRC=0 OK AT+CRC? +CRC ：0 OK (PPPoverUD received) +CRING：SYNC (AV64K received) +CRING：AV64K (PPP packet received) +CRING：GPRS “PPP” ,,, “〈APN〉”
AT+CREG=*n* [&F] [&W]	Specifies whether the result screen is present regarding the inside/outside the service area information display. ● This setting may not be available depending on the Operating System.	*n*=0 : Not informed (initial value). *n*=1 : Informed. Informed when switching between "Inside the service area" and "Outside the service area" is complete. AT+CREG? : Displays the current setting. +CREG ：<*n*>,<stat> *n*: Set value stat: 0: Outside voice call area 1: Inside voice call area 4: Unknown 5: Inside voice call area	AT+CREG=1 OK (Set to informed) AT+CREG? +CREG ：1,0 OK (Outside the service area) (When you move from outside the service area to inside the service area.) +CREG ：1
AT+CUSD [&F] [&W]	Specifies or inquires for the network setting regarding the additional services.	Format: AT+CUSD=<*n*>,"<str>"[,0] *n*=0 : Does not send mid result <m>[<str>,<dcs>] (initial value) *n*=1 : Sends mid result <m>[<str>,<dcs>] Mid result: *m*=0 : The settings completed *m*=1 : The network requires the information. str : Only 0-9, #, ✻ can be entered. Enclose <str> with "" (double quotation mark).	AT+CUSD=0, "xxxxxxxxx" OK AT+CUSD=1," ✻ 148 ✻ 1 ✻ 0000#",0 +CUSD:0,"148 ✻ 7#",0 OK AT+CUSD? +CUSD:0 OK AT+CUSD =? +CUSD:(0,1) OK
AT+FCLASS=*n* [&F] [&W]	Sets the communication class supported by the FOMA terminal.	*n*=0 : data is only supported. (initial value)	AT+FCLASS=0 OK
AT+GCAP	Displays the supported area for the AT commands available for the FOMA terminal.	Result: +GCAP:<area>,<area>,<area> area : +CGSM : Some or all GSM commands are supported. +FCLASS : +FCLASS command is supported. +W : +W command is supported.	AT+GCAP +GCAP:+CGSM,+FCLASS,+W OK
AT+GMI	Displays the manufacturer name.	—	AT+GMI SEMC Japan, Inc. OK
AT+GMM	Displays the FOMA terminal product name (FOMA SO706i).	—	AT+GMM FOMA SO706i OK
AT+GMR	Displays the version of the FOMA terminal.	—	AT+GMR Ver1.00 OK

AT command	Outline	Parameter/description	Command execution example
AT+IFC=*n*,*m* [&F] [&W]	Selects the flow control method.	*n* : DCE by DTE *m* : DTE by DCE 0 : No flow control 1 : XON/XOFF flow control. 2 : RS/CS (RTS/CTS) flow control. initial value: *n*,*m* =2, 2 AT+IFC?: Displays the current setting.	AT+IFC=2,2 OK AT+IFC? +IFC : 2,2 OK AT+IFC=? +IFC : (0,1,2) ,(0,1,2) OK
AT+WS46	Displays the wireless communication network of the FOMA terminal.	12 : GSM/GPRS fixed mode 22 : IMT fixed mode 25 : Auto mode	AT+WS46? 25 OK
AT¥S	Displays the contents of commands and S registers currently set.	—	AT¥S E1 Q0 V1 X4 &C1 &D2 &S0 &E1 ¥V0 S000=000 S002=043 S003=013 S004=010 S005=008 S006=005 S007=060 S008=003 S010=001 S030=000 S103=001 S104=001 OK
AT¥V*n* [&F] [&W]	Selects the response code specification for connecting the line.	*n*=0 : Not use extended result code (initial value). *n*=1 : Use extended result code.	AT¥V0 OK
ATA	Handles the incoming call process according to the mode received by the FOMA terminal.	—	RING ATA CONNECT
ATD	Handles the automatic calling process for the FOMA terminal according to the specified parameters and dial parameters.	ATD＊99＊＊＊<cid>#: Packet communication <cid> 1 to 10: displays APN with +CGDCONT setting. AT+CBST=116,1,0 ATD<phone number> : 64K communication AT+CBST=134,1,0 ATD<phone number> : AV64K communication	<Packet communication> ATD＊99＊＊＊1# CONNECT <64K communication> AT+CBST=116,1,0 OK ATD090xxxxxxxx CONNECT <AV64K communication> AT+CBST=134,1,0 OK ATD090xxxxxxxx CONNECT
ATE*n* [&F] [&W]	Selects whether the echo back is present for DTE in the command mode.	*n*=0 : Echo back absent. *n*=1 : Echo back present (initial value).	ATE1 OK
ATH*n*	Performs on-hook operation for the FOMA terminal.	*n*=0 : Disconnect the line (can be omitted).	(During packet communication) +++ OK ATH NO CARRIER

AT command	Outline	Parameter/description	Command execution example
ATI*n*	Displays the ID code.	*n*=0 : Displays "NTT DoCoMo". *n*=1 : Displays the product name (same with +GMM). *n*=2 : Displays the version of the FOMA terminal (same with +GMR). *n* =3 : Displays the each element of ACMP signal. *n* =4 : Displays the details of communication functions of the FOMA terminal.	ATI0 NTT DoCoMo OK ATI1 FOMA SO706i OK
ATO*n*	Returns from the online command mode to the online data mode during communication.	*n*=0 : Returns from online command mode to online data mode (can be omitted).	ATO CONNECT
ATQ*n* [&F] [&W]	Specifies whether or not to display the result code for DTE.	*n*=0 : Displays the result code (initial value). *n*=1 : Not display the result code.	ATQ0 OK ATQ1 (At that time, OK is not returned.)
ATS0=*n* [&F] [&W]	Specifies how many times the FOMA terminal rings before it automatically receives a call.	*n*=0 : No automatic answer (initial value). *n*=1- 255: A call is automatically answered after the specified number of rings. ATS0?: Displays the current setting.	ATS0=0 OK ATS0? 000 OK
ATS2=*n* [&F]	Sets an escape character.	*n*=43 : Initial value. *n*=127 : Escapes processing is invalid. ATS2? : Displays the current setting.	ATS2=43 OK ATS2? 043 OK
ATS3=*n* [&F]	Sets a carriage return (CR) character.	*n*=13 : Initial value (Only *n*=13 can be specified). ATS3? : Displays the current setting.	ATS3=13 OK ATS3? 013 OK
ATS4=*n* [&F]	Sets a line feed (LF) character.	*n*=10 : Initial value (Only *n*=10 can be specified). ATS4? : Displays the current setting.	ATS4=10 OK ATS4? 010 OK
ATS5=*n* [&F]	Sets a backspace (BS) character.	*n*=8 : Initial value (Only *n*=8 can be specified). ATS5? : Displays the current setting.	ATS5=8 OK ATS5? 008 OK
ATS6=*n* [&F]	Sets the pause time (second) until a dial starting.	This command can be set but cannot be operated.	ATS6=5 OK ATS6? 005 OK ATS6=? ERROR
ATS8=*n* [&F]	Sets the pause time (second) by using the comma dial.	This command can be set but cannot be operated.	ATS8=3 OK ATS8? 003 OK ATS8=? ERROR
ATS10=*n* [&F][&W]	Automatic disconnection delay time setting. (1/10 second)	This command can be set but cannot be operated.	ATS10=1 OK ATS10? 001 OK ATS10=? ERROR

AT command	Outline	Parameter/description	Command execution example
ATS30=*n* [&F]	Disconnects the line when there is no user data exchange for the time set in this command.	*n*=0 : Inactive timer off (initial value) *n*=0 - 255 Where n is the number of minutes.	ATS30=0 OK ATS30? 000 OK ATS30=? ERROR
ATS103=*n* [&F]	Sets the called sub address character.	*n*=0 : * *n*=1 : / (initial value) *n*=2 : ¥ (¥ mark or back slash)	ATS103=0 OK ATS103? 000 OK ATS103=? ERROR
ATS104=*n* [&F]	Sets the calling sub address character.	*n*=0 : # *n*=1 : % (initial value) *n*=2 : &	ATS104=0 OK ATS104? 000 OK ATS104=? ERROR
ATV*n* [&F] [&W]	Specifies whether the result code is returned in numerals or alphabets.	*n*=0 : Returns the result code in numeral value. *n*=1 : Returns the result code in characters (initial value).	ATV1 OK
ATX*n* [&F] [&W]	Specifies whether the speed indication is present in the CONNECT display when connecting the line. Also detects a busy tone or a dial tone.	*n*=0 : Without dial tone detection; without busy tone detection; without speed display. *n*=1 : Without dial tone detection; without busy tone detection; with speed display. *n*=2 : With dial tone detection; without busy tone detection; with speed display. *n*=3 : Without dial tone detection; with busy tone detection; with speed display. *n*=4 : With dial tone detection; with busy tone detection; with speed display. (initial value)	ATX1 OK
ATZ	Resets the current setting to the contents of the non-volatile memory. If this command is input during communication, the line will be disconnected.	—	(Online command mode) ATZ NO CARRIER (Offline command mode) ATZ OK
+++	In response to the escape sequence, the online data mode changes to the online command mode while maintaining the line connection.	—	(Online data mode) +++ (No display) OK

● Supplementary explanation of AT command

■ Commands which do not function

The following commands do not generate errors but will not function as a command:

・ ATT (Tone setting)
・ ATP (Pulse setting)

■ Command name: +CGDCONT

・ Outline

Sets the access point name (APN) for packet origination.

Though this command is a setting command, it will not be recorded in non-volatile memory written by [&W], nor reset by [&F] or [Z].

・ Format

+CGDCONT=[<cid>[,"<PDP_type>"[,"<APN>"]]]

・ Explanation of the parameters

Sets the access point name (APN) for packet origination. See the following command execution example:

<cid>*1：1 ~ 10

<PDP_type>*2：PPP or IP

<APN>*3：Any value

*1：<cid> is a number for managing the access point name (APN) registered in the FOMA terminal for a packet communication. For the FOMA terminal, you can register from number 1 to 10. As "mopera.ne.jp" is assigned to <cid>=1 and "mopera.net" is assigned to <cid>=3 by default, assign to cid2 or cid4 to cid10.

*2：<PDP_type> is the connection method. For the FOMA terminal, you can specify PPP or IP. PPP is assigned to <cid>=1 and IP is assigned to <cid>=3 by default.

*3：<APN> is an arbitrary character string indicating each access point name.

・ Operation performed when the parameter is omitted

+CGDCONT=：Sets the initial value to all <cid>.

+CGDCONT=<cid>：Sets the specified <cid> to the initial value.

+CGDCONT=?：Displays a list of values that can be set.

+CGDCONT?：Displays the current setting.

・ Command execution example

Command for registering an APN name of abc (when cid is 2).

AT+CGDCONT=2,"PPP","abc"

OK

■ Command name: +CGEQMIN=[parameter]

・ Outline

Registers a criterion to be used to decide whether or not to allow the QoS (quality of service) that is informed from the network side when PPP packet communication is established.

There are 4 setting patterns as described in the following command execution example.

Though this command is a setting command, it will not be recorded in non-volatile memory written by [&W], nor reset by [&F] or [Z].

・ Format

+CGEQMIN=[<cid>[,,<Maximum bitrate UL>[,<Maximum bitrate DL>]]

・ Explanation of the parameters

<cid>*1：1～10

<Maximum bitrate UL>*2：None (initial value) or 384

<Maximum bitrate DL>*2：None (initial value) or 3,648

*1：<cid> is a number for managing the access point name (APN) registered in the FOMA terminal for a packet communication. For the FOMA terminal, you can register from number 1 to 10. As "mopera.ne.jp" is assigned to <cid>=1 and "mopera.net" is assigned to <cid>=3 by default, assign to cid2 or cid4 to cid10.

*2：<Maximum bitrate UL> and <Maximum bitrate DL> set the minimum communication speed (kbps) of uplink and downlink between the FOMA terminal and base station. When it is set to "None" (initial value), all speeds will be permitted, but when set to 384 or 3,648, a connection at a speed of other values will not be permitted, and a packet communication may not be connected.

・ Operation performed when the parameter is omitted

+CGEQMIN=：Sets the initial value to all <cid>.

+CGEQMIN=<cid>：Sets the specified <cid> to the initial value.

+CGEQMIN=?：Displays a list of values that can be set.

+CGEQMIN?：Displays the current setting.

・**Command execution example**

Only the following 4 patterns can be set. (1) is set as an initial value to each cid.

(1) Command for permitting all speeds of both uplink and downlink (when cid is 2)
AT+CGEQMIN=2
OK

(2) Command for permitting only the speed of uplink 384kbps and downlink 3,648kbps (when cid is 4)
AT+CGEQMIN=4,,384,3648
OK

(3) Command for permitting uplink 384kbps and all speeds of downlink (when cid is 5).
AT+CGEQMIN=5,,384
OK

(4) Command for permitting all speeds of uplink and only 3,648kbps of downlink (when cid is 6)
AT+CGEQMIN=6,,,3648
OK

■ **Command name: +CGEQREQ=[parameter]**

・**Outline**

Sets the QoS (quality of service) to be requested to network when originating a PPP packet communication.
For setting, only the following pattern in the command execution example can be set, which is also set as an initial value.
Though this command is a setting command, it will not be recorded in non-volatile memory written by [&W], nor reset by [&F] or [Z].

・**Format**

+CGEQREQ=[<cid>]

・**Explanation of the parameters**

<cid>* : 1 to 10

* : <cid> is a number for managing the access point name (APN) registered in the FOMA terminal for a packet communication. For the FOMA terminal, you can register from number 1 to 10. As "mopera.ne.jp" is assigned to <cid>=1 and "mopera.net" is assigned to <cid>=3 by default, assign to cid2 or cid4 to cid10.

・**Operation performed when the parameter is omitted**

+CGEQREQ= : Sets the initial value to all <cid>.

+CGEQREQ=<cid> : Sets the specified <cid> to the initial value.

+CGEQREQ=? : Displays a list of values that can be set.

+CGEQREQ? : Displays the current setting.

・**Command execution example**

Only the following 1 pattern can be set. This is set to each cid as an initial value.
Command for requesting a connection at a speed of uplink 384kbps and downlink 3,648kbps (when cid is 2).
AT+CGEQREQ=2
OK

Saving modem port command setting value

The values set by AT commands are initialized every time the power of FOMA terminal is turned on or off, except the access point name (APN) set by AT+CGDCONT command (p.32), QoS setting by AT+CGEQMIN/AT+CGEQREQ command, permit or reject incoming call setting by AT＊DGAPL/AT＊DGARL/AT＊DGANSM command and the setting for specifying sending/not sending caller ID of packet communication set by AT＊DGPIR command. However, you can save the values set by commands with [&W] if you enter

AT&W ↵

after the setting. In this case, other set values with [&W] will also be saved. These values can be retrieved by entering

ATZ ↵

even after the power is turned on or off.

Result codes

■ Result codes related with data communication

Number indication	Character indication	Description
0	OK	Successfully executed.
1	CONNECT	Connected.
2	RING	Incoming call.
3	NO CARRIER	Line disconnected.
4	ERROR	Command not acceptable.
6	NO DIALTONE	Unable to detect dialing tone.
7	BUSY	Busy tone detected.
8	NO ANSWER	Time out in connection completing.
100	RESTRICTION	Network restricted.
101	DELAYED	Redialing restricted.

■ Extended result codes

• &E0

Number indication	Character indication	Description
122	CONNECT 64000	Connected between the FOMA terminal and base station at 64,000bps.
125	CONNECT 384000	Connected between the FOMA terminal and base station at 384,000bps.
133	CONNECT 3648000	Connected between the FOMA terminal and base station at 3,648,000bps.

• &E1

Number indication	Character indication	Description
5	CONNECT 1200	Connected between the FOMA terminal and PC at 1,200bps.
10	CONNECT 2400	Connected between the FOMA terminal and PC at 2,400bps.
11	CONNECT 4800	Connected between the FOMA terminal and PC at 4,800bps.
13	CONNECT 7200	Connected between the FOMA terminal and PC at 7,200bps.
12	CONNECT 9600	Connected between the FOMA terminal and PC at 9,600bps.
15	CONNECT 14400	Connected between the FOMA terminal and PC at 14,400bps.
16	CONNECT 19200	Connected between the FOMA terminal and PC at 19,200bps.
17	CONNECT 38400	Connected between the FOMA terminal and PC at 38,400bps.
18	CONNECT 57600	Connected between the FOMA terminal and PC at 57,600bps.
19	CONNECT 115200	Connected between the FOMA terminal and PC at 115,200bps.
20	CONNECT 230400	Connected between the FOMA terminal and PC at 230,400bps.
21	CONNECT 460800	Connected between the FOMA terminal and PC at 460,800bps.

■ Communication protocol result codes

Number indication	Character indication	Description
1	PPPoverUD	Connected by PPPoverUD (BC=UDI, +CBST=116,1,0)
3	AV64K	Connected by AV (Videophone) [64K]
5	PACKET	Connected by Packet

NOTE

- The result code appears as character indication (default value) when ATV*n* command (p.55) is set to *n*=1, and as number indication when the command is set to *n*=0.
- Though the communication speed appears in order to maintain a compatibility with the modem connected by traditional RS-232C, it differs from the actual connection speed because the FOMA terminal and PC are connected via FOMA USB Cable with Charge Function 01/02 (optional).
- "RESTRICTION" (Number indication: 100) indicates that the network is congested. If this is displayed, wait for a while and then try again.

Result code display example

■ **When ATX0 is set**

Regardless of the AT¥V*n* command (p.53) setting, only CONNECT appears when the connection is completed.

Character indication example: ATD ＊99＊＊＊1#
CONNECT

Number indication example: ATD ＊99＊＊＊1#
1

■ **When ATX1 is set**

・**ATX1, AT¥V0 are set (default)**

Displayed in CONNECT <rate between the FOMA terminal and the PC> format when the connection is completed.

Character indication example: ATD ＊99＊＊＊1#
CONNECT 460800

Number indication example: ATD ＊99＊＊＊1#
1 21

・**ATX1, AT¥V1 are set** *

The following format appears when the connection is completed:

CONNECT <rate between the FOMA terminal and the PC> PACKET <Connecting party's APN>/ <Upstream (the FOMA terminal→ Wireless base station) maximum rate>/<Downstream (the FOMA terminal ← Wireless base station) maximum rate>

The following sample indicates that a connection is made to mopera.ne.jp at maximum 384kbps for sending, and maximum 3,648kbps for receiving.

Character indication example: ATD ＊99＊＊＊1#
CONNECT 460800 PACKET mopera.ne.jp/384/3648

Number indication example: ATD ＊99＊＊＊1#
1 21 5

＊: If both ATX1 and AT¥V1 are set simultaneously, a dial-up connection may not be correctly made. The single setting of AT¥V0 is recommended.

List of disconnection reasons

■ **Packet communication**

Value	Reason
26 27	Missing or incorrect APN.
30	Activation rejected by the network.
33	Requested service option not subscribed.
36	Disconnected successfully.

■ **64K data communication**

Value	Reason
1	The specified number does not exist.
16	Disconnected successfully.
17	Cannot communicate because the other party's line is busy.
18	Dialed, but no response within the specified time.
19	Cannot communicate because the other party is ringing.
21	The other party has rejected the communication.
63	The service or option of the network is not valid.
65	A transmission capacity not provided has been specified.
88	Sent to a terminal with different terminal attributes or received call.

Kuten Code List

Kuten Code List

<Guide to the kuten code table>

First enter “digits 1-3 of the kuten code” then “digit 4”.

● Some kuten codes in the table here may look different from what actually appear on screens.

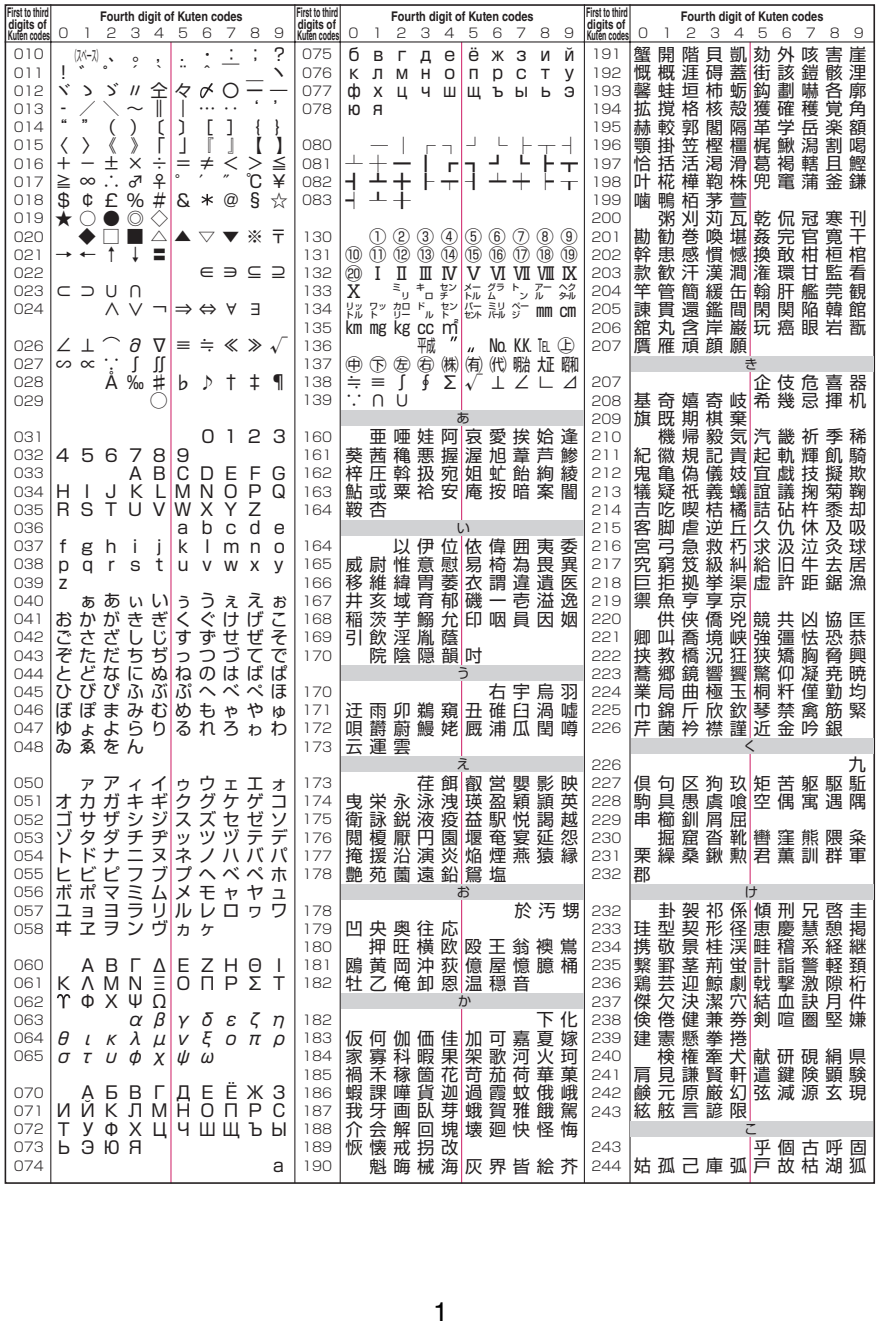

First to third digits of Kuten codes	Fourth digit of Kuten codes 0	1	2	3	4	5	6	7	8	9
245	菰	伍	瑚	侯	向	垢	庚	晃	満	耕
246	糊	顧	御	乞	効					
247	胡	互	檎	佼	口	坑	広	昂	港	綱
248	股	五	梢	交	厚	喉	幸	攻	浩	絞
249	袴	鼓	悟	鯉	匂	項	根			
250	股	五	巷	控	洪	紘	荒	鋼	傷	穀
251		巧	拘	江	紅	航	硫	号	告	忽
252	雇	後	醐	功						
253	鈷	娯	護	公	宏	慌	梗	稿	腔	酵
254	跨	吾	誤	光	孝	恒	校	硬	肱	郊
255	誇	呉	語	倖	好	康	更	申	考	貢
256	虎	午	暮	候	坤	痕				
257	五	五	六	厚	喉	幸	攻	浩	絞	行
258	五	五	六	厚	喉	幸	攻	浩	絞	行
259	五	五	六	厚	喉	幸	攻	浩	絞	行
260	五	五	六	厚	喉	幸	攻	浩	絞	行
261	五	五	六	厚	喉	幸	攻	浩	絞	行
262	五	五	六	厚	喉	幸	攻	浩	絞	行
263	五	五	六	厚	喉	幸	攻	浩	絞	行
264	五	五	六	厚	喉	幸	攻	浩	絞	行
265	五	五	六	厚	喉	幸	攻	浩	絞	行
266	五	五	六	厚	喉	幸	攻	浩	絞	行
267	五	五	六	厚	喉	幸	攻	浩	絞	行
268	五	五	六	厚	喉	幸	攻	浩	絞	行
269	五	五	六	厚	喉	幸	攻	浩	絞	行
270	五	五	六	厚	喉	幸	攻	浩	絞	行
271	五	五	六	厚	喉	幸	攻	浩	絞	行
272	五	五	六	厚	喉	幸	攻	浩	絞	行
273	五	五	六	厚	喉	幸	攻	浩	絞	行
273	五	五	六	厚	喉	幸	攻	浩	絞	行
274	五	五	六	厚	喉	幸	攻	浩	絞	行
275	五	五	六	厚	喉	幸	攻	浩	絞	行
276	五	五	六	厚	喉	幸	攻	浩	絞	行
277	五	五	六	厚	喉	幸	攻	浩	絞	行
278	五	五	六	厚	喉	幸	攻	浩	絞	行
279	五	五	六	厚	喉	幸	攻	浩	絞	行
280	五	五	六	厚	喉	幸	攻	浩	絞	行
281	五	五	六	厚	喉	幸	攻	浩	絞	行
282	五	五	六	厚	喉	幸	攻	浩	絞	行
283	五	五	六	厚	喉	幸	攻	浩	絞	行
284	五	五	六	厚	喉	幸	攻	浩	絞	行
285	五	五	六	厚	喉	幸	攻	浩	絞	行
286	五	五	六	厚	喉	幸	攻	浩	絞	行
287	五	五	六	厚	喉	幸	攻	浩	絞	行
288	五	五	六	厚	喉	幸	攻	浩	絞	行
289	五	五	六	厚	喉	幸	攻	浩	絞	行
290	五	五	六	厚	喉	幸	攻	浩	絞	行
291	五	五	六	厚	喉	幸	攻	浩	絞	行
292	五	五	六	厚	喉	幸	攻	浩	絞	行
293	五	五	六	厚	喉	幸	攻	浩	絞	行
294	五	五	六	厚	喉	幸	攻	浩	絞	行
295	五	五	六	厚	喉	幸	攻	浩	絞	行
296	五	五	六	厚	喉	幸	攻	浩	絞	行
297	五	五	六	厚	喉	幸	攻	浩	絞	行
298	五	五	六	厚	喉	幸	攻	浩	絞	行
299	五	五	六	厚	喉	幸	攻	浩	絞	行
300	五	五	六	厚	喉	幸	攻	浩	絞	行
301	五	五	六	厚	喉	幸	攻	浩	絞	行
302	五	五	六	厚	喉	幸	攻	浩	絞	行
303	五	五	六	厚	喉	幸	攻	浩	絞	行
304	五	五	六	厚	喉	幸	攻	浩	絞	行
305	五	五	六	厚	喉	幸	攻	浩	絞	行
306	五	五	六	厚	喉	幸	攻	浩	絞	行
307	五	五	六	厚	喉	幸	攻	浩	絞	行
308	五	五	六	厚	喉	幸	攻	浩	絞	行
309	五	五	六	厚	喉	幸	攻	浩	絞	行
310	五	五	六	厚	喉	幸	攻	浩	絞	行
311	五	五	六	厚	喉	幸	攻	浩	絞	行
312	五	五	六	厚	喉	幸	攻	浩	絞	行
313	五	五	六	厚	喉	幸	攻	浩	絞	行
314	五	五	六	厚	喉	幸	攻	浩	絞	行
315	五	五	六	厚	喉	幸	攻	浩	絞	行

First to third digits of Kuten codes	Fourth digit of Kuten codes 0	1	2	3	4	5	6	7	8	9
316	す									
317					逗	衰	数	裾		
318				厨	翠	高	奢	寸		
319			図	粋	崇	顔	摺			
320		酢	睡	髄	菅	澄				
321	せ									
322					世	成	生	逝	赤	窃
323					性	牲	請	惜	責	設
324				征	清	誓	席	脊	汗	先
325		姓	正	誠	隻	績	摂	仙	撰	旋
326										
327										
328										
329										
330										
331										
332										
333	そ									
334					疎	阻	奏	掻	痩	喪
335				狙	訴	壮	挿	争	葬	像
336		楚	蘇	喪	掃	燥	荘	騒	臓	束
337										
338										
339										
340										
341										
342	た									
343					詑	駄	惰	打	耐	胎
344					太	陀	怠	貸	態	退
345					太	楕	待	袋	第	択
346					多	舵	帯	苔	大	托
347					他	柁	岱	駄	台	宅
348	ち									
349										
350										
351										
352										
353										
354	つ									
355					稚	蓄	忠	駐	喋	庁
356					痴	筑	宙	鋳	凋	帳
357					池	竹	仲	酎	兆	帖
358					智	畜	中	註	丁	
359										
360										
361										
362										
363										
364	て									
365										
366										
367										
368										
369										
370										
371										
372										
373										
374	と									
375										
376										

First to third digits of Kuten codes	Fourth digit of Kuten codes 0	1	2	3	4	5	6	7	8	9
377										
378										
379										
380										
381										
382										
383										
384										
385										
386										
386	な									
387										
388										
388	に									
389										
390										
390	ぬ									
391										
392										
393										
393	は									
394										
395										
396										
397										
398										
399										
400										
401										
402	ひ									
403										
404										
405										
405	ふ									
406										
407										
408										
409										
410										
411										
412										
413	へ									
414										
415										
415	ほ									
416										
417										
418										
419										
420										
421										
422	ま									
422										
423										
424										
425										
426										
426	み									
427										
428										
429										
430										
431										
432										
433	む									
434										
435										
436										

First to third digits of Kuten codes	Fourth digit of Kuten codes										
	0	1	2	3	4	5	6	7	8	9	
	ま										
436			摩							妹	柾
437			槙	又	哩	磨	魔	麻	埋	鮪	迄
438			侯	慢	每	幕	膜	枕	妹		
439	昧	枚	万	末	所	抹	末	沫			
440	鱒	檀	麿	曼	蔓						
	み										
440					味	未	魅	巳	岬	密	
441	蜜		蓑		稔	脈	妙	粍	民	眠	
	む										
441										務	
442										娘	
443	夢	無	牟	矛	霧	鵡	椋	婿			
	め										
442										冥	滅
443										牝	
444	名	免	命	棉	明	綿	盟	緬	迷	面	
	も								銘	麺	
444										妄	黙	悶
445							摸	模	茂	木	問	
446	孟	目	毛	杢	猛	勿	蒙	儲	網	尤		
447	紋		門		勿	匁	耗	戻	賞	籾		
	や										
447										弥	数
448	矢		厄		也	冶	夜	役	耶	野	柳	
449	鑓				約	薬	訳		爺	靖		
	ゆ								躍			
449										幽	由	
450					癒	油						
451	悠	祐			愈	輸	優	友	宥	猷	夕	
452					有	揖	湧	勇	猶	融		
	よ				遊	諭	郵	涌	獣			
452						誉		雄				
453						擁				予		
454						抑				庸	用	
455						欲				容	陽	
456						浴				熔	淀	
	ら											
456										羅		
457						頼				落	酪	
458						濫						
	り											
458										吏		
459					璃	里						
460					理	裡				立		
461					来	料				粒		
462					嵐	寮				率		
463					棚	諒				硫		
464					来	涼				亮		
465					嵐	梁				瞭		
	る～れ											
465						量				緑		
466						琳				鱗		
467					類	苓				励	麗	憐
468					累	劣				冷	霊	恋
469					礼	聯				例	零	倫
470					列	烈				零	廉	麟
	ろ											
470					呂	練				路	浪	禄
471					弄	錬				賂	麓	
472					廊	老				脇	椀	
473					婁	露				炉	楢	六
	わ				籠	論				櫓	楼	郎
473						和				賄	蕨	
474					倭	鰐				歪	藁	
475					亙							
476												
477												
478												
479												
480					丕	亡				乂	亞	
481					丐	乱				仆	仏	
482					冗	亢				仔	仕	
483					仡	仂				仍	仄	
484					仗	仔				仟	伉	
485					伜	伴				伽	佃	
486					佯	佶				侈	佻	
487					侶	侭				俔	俑	

First to third digits of Kuten codes	Fourth digit of Kuten codes										
	0	1	2	3	4	5	6	7	8	9	
488	傀	儡			修	傚	偬	僂	偬	偸	
489	傀	儡			傲	僂	僂	僂			
490					僊	僂	僂	僂			
491					僊	僂	僂	僂			
492					僊	僂	僂	僂			
493					僊	僂	僂	僂			
494					僊	僂	僂	僂			
495					僊	僂	僂	僂			
496					僊	僂	僂	僂			
497					僊	僂	僂	僂			
498					僊	僂	僂	僂			
499					僊	僂	僂	僂			
500					僊	僂	僂	僂			
501					僊	僂	僂	僂			
502					僊	僂	僂	僂			
503					僊	僂	僂	僂			
504					僊	僂	僂	僂			
505					僊	僂	僂	僂			
506					僊	僂	僂	僂			
507					僊	僂	僂	僂			
508					僊	僂	僂	僂			
509					僊	僂	僂	僂			
510					僊	僂	僂	僂			
511					僊	僂	僂	僂			
512					僊	僂	僂	僂			
513					僊	僂	僂	僂			
514					僊	僂	僂	僂			
515					僊	僂	僂	僂			
516					僊	僂	僂	僂			
517					僊	僂	僂	僂			
518					僊	僂	僂	僂			
519					僊	僂	僂	僂			
520					僊	僂	僂	僂			
521					僊	僂	僂	僂			
522					僊	僂	僂	僂			
523					僊	僂	僂	僂			
524					僊	僂	僂	僂			
525					僊	僂	僂	僂			
526					僊	僂	僂	僂			
527					僊	僂	僂	僂			
528					僊	僂	僂	僂			
529					僊	僂	僂	僂			
530					僊	僂	僂	僂			
531					僊	僂	僂	僂			
532					僊	僂	僂	僂			
533					僊	僂	僂	僂			
534					僊	僂	僂	僂			
535					僊	僂	僂	僂			
536					僊	僂	僂	僂			
537					僊	僂	僂	僂			
538					僊	僂	僂	僂			
539					僊	僂	僂	僂			
540					僊	僂	僂	僂			
541					僊	僂	僂	僂			
542					僊	僂	僂	僂			
543					僊	僂	僂	僂			
544					僊	僂	僂	僂			
545					僊	僂	僂	僂			
546					僊	僂	僂	僂			
547					僊	僂	僂	僂			
548					僊	僂	僂	僂			
549					僊	僂	僂	僂			
550					僊	僂	僂	僂			
551					僊	僂	僂	僂			
552					僊	僂	僂	僂			
553					僊	僂	僂	僂			
554					僊	僂	僂	僂			
555					僊	僂	僂	僂			
556					僊	僂	僂	僂			
557					僊	僂	僂	僂			
558					僊	僂	僂	僂			
559					僊	僂	僂	僂			
560					僊	僂	僂	僂			
561					僊	僂	僂	僂			
562					僊	僂	僂	僂			
563					僊	僂	僂	僂			

First to third digits of Kuten codes	Fourth digit of Kuten codes										
	0	1	2	3	4	5	6	7	8	9	
564											
565											
566											
567											
568											
569											
570											
571											
572											
573											
574											
575											
576											
577											
578											
579											
580											
581											
582											
583											
584											
585											
586											
587											
588											
589											
590											
591											
592											
593											
594											
595											
596											
597											
598											
599											
600											
601											
602											
603											
604											
605											
606											
607											
608											
609											
610											
611											
612											
613											
614											
615											
616											
617											
618											
619											
620											
621											
622											
623											
624											
625											
626											
627											
628											
629											
630											
631											
632											
633											
634											
635											
636											
637											
638											
639											

First to third digits of Kuten codes	Fourth digit of Kuten codes										
	0	1	2	3	4	5	6	7	8	9	
564											
565											
566											
567											
568											
569											
570											
571											
572											
573											
574											
575											
576											
577											
578											
579											
580											
581											
582											
583											
584											
585											
586											
587											
588											
589											
590											
591											
592											
593											
594											
595											
596											
597											
598											
599											
600											
601											
602											
603											
604											
605											
606											
607											
608											
609											
610											
611											
612											
613											
614											
615											
616											
617											
618											
619											
620											
621											
622											
623											
624											
625											
626											
627											
628											
629											
630											
631											
632											
633											
634											
635											
636											
637											
638											
639											

First to third digits of Kuten codes	Fourth digit of Kuten codes										
	0	1	2	3	4	5	6	7	8	9	
640		爨	爩	爪	爫	爬	爭	爰	爲	爻	爼
641	爿	牀	牁	牂	牄	牆	片	版	牉	牋	牌
642	牒	牓	牕	牖	牘	牙	牚	牛	牝	牟	牠
643	牡	牢	牣	牤	牥	牧	物	牮	牯	牲	牳
644	牴	牷	牸	牻	牽	牾	牿	犀	犁	犂	犄
645	犅	犆	犇	犉	犋	犌	犍	犎	犒	犖	犗
646	犘	犛	犝	犞	犟	犠	犡	犢	犣	犤	犥
647	犦	犧	犨	犩	犪	犫	犬	犮	犯	犰	犱
648	犲	犳	犴	犵	状	犷	犸	犹	狀	狁	狂
649	狃	狄	狆	狇	狈	狉	狊	狋	狌	狍	狎
650	狐	狒	狓	狔	狕	狖	狗	狘	狙	狚	狛
651	狜	狝	狞	狟	狠	狡	狢	狣	狤	狥	狦
652	狧	狨	狩	狪	狫	狭	狮	狯	狰	狱	狲
653	狳	狴	狵	狶	狷	狸	狺	狻	狼	猀	猁
654	猂	猃	猄	猅	猆	猇	猈	猉	猊	猋	猌
655	猍	猎	猏	猐	猑	猒	猓	猔	猕	猖	猗
656	猘	猙	猚	猛	猜	猝	猞	猟	猠	猡	猢
657	猣	猤	猥	猦	猧	猨	猩	猪	猫	猬	猭
658	献	猯	猰	猱	猲	猳	猴	猵	猶	猷	猸
659	猹	猺	猻	猼	猽	猾	猿	獀	獁	獂	獃
660	獄	獅	獆	獇	獈	獉	獊	獋	獌	獍	獎
661	獏	獐	獑	獒	獓	獔	獕	獖	獗	獘	獙
662	獚	獛	獜	獝	獞	獟	獠	獡	獢	獣	獤
663	獥	獦	獧	獨	獩	獪	獫	獬	獭	獮	獯
664	獰	獱	獲	獳	獴	獵	獶	獷	獸	獹	獺
665	獻	獼	獽	獾	獿	玀	玁	玂	玃	玄	玅
666	玆	率	玈	玉	玊	王	玍	玎	玏	玐	玑
667	玒	玓	玔	玕	玖	玗	玘	玙	玚	玛	玜
668	玝	玞	玟	玠	玡	玢	玣	玤	玥	玦	玧
669	玨	玩	玪	玫	玬	玭	玮	环	玱	玲	玳
670	玴	玵	玶	玷	玸	玹	玺	玻	玼	玽	玾
671	玿	珀	珁	珂	珃	珄	珅	珆	珇	珈	珉
672	珊	珋	珌	珍	珎	珏	珐	珑	珒	珓	珔
673	珕	珖	珗	珘	珙	珚	珛	珜	珝	珞	珟
674	珠	珡	珢	珣	珤	珥	珦	珧	珨	珩	珪
675	珫	珬	珮	珯	珰	珱	珲	珳	珴	珵	珶
676	珷	珸	珹	珺	珻	珼	珽	現	珿	琀	琁
677	琂	球	琄	琅	理	琇	琈	琉	琊	琋	琌
678	琍	琎	琏	琐	琑	琒	琓	琔	琕	琖	琗
679	琘	琙	琚	琛	琜	琝	琞	琟	琠	琡	琢
680	琣	琤	琥	琦	琧	琨	琩	琪	琫	琬	琭
681	琮	琯	琰	琱	琲	琳	琴	琵	琶	琷	琸
682	琹	琺	琻	琼	琽	琾	琿	瑀	瑁	瑂	瑃
683	瑄	瑅	瑆	瑇	瑈	瑉	瑊	瑋	瑌	瑍	瑎
684	瑏	瑐	瑑	瑒	瑓	瑔	瑕	瑖	瑗	瑘	瑙
685	瑚	瑛	瑜	瑝	瑞	瑟	瑠	瑡	瑢	瑣	瑤
686	瑥	瑦	瑧	瑨	瑩	瑪	瑫	瑬	瑭	瑮	瑯
687	瑰	瑱	瑲	瑳	瑴	瑵	瑶	瑷	瑸	瑹	瑺
688	瑻	瑼	瑽	瑾	瑿	璀	璁	璂	璃	璄	璅
689	璆	璇	璈	璉	璊	璋	璌	璍	璎	璏	璐
690	璑	璒	璓	璔	璕	璖	璗	璘	璙	璚	璛
691	璜	璝	璞	璟	璠	璡	璢	璣	璤	璥	璦
692	璧	璨	璩	璪	璫	璬	璭	璮	璯	環	璱
693	璲	璳	璴	璵	璶	璷	璸	璹	璺	璻	璼
694	璽	璾	璿	瓀	瓁	瓂	瓃	瓄	瓅	瓆	瓇
695	瓈	瓉	瓊	瓋	瓌	瓍	瓎	瓏	瓐	瓑	瓒
696	瓓	瓔	瓕	瓖	瓗	瓘	瓙	瓚	瓛	瓜	瓝
697	瓞	瓟	瓠	瓡	瓢	瓣	瓤	瓥	瓦	瓧	瓨
698	瓩	瓪	瓫	瓬	瓭	瓮	瓯	瓰	瓱	瓲	瓳
699	瓴	瓵	瓶	瓷	瓸	瓹	瓺	瓻	瓼	瓽	瓾
700	瓿	甀	甁	甂	甃	甄	甅	甆	甇	甈	甉
701	甊	甋	甌	甍	甎	甏	甐	甑	甒	甓	甔
702	甕	甖	甗	甘	甙	甚	甛	甜	甝	甞	生
703	甠	甡	産	甤	甥	甦	甧	用	甩	甪	甫
704	甬	甭	甮	甯	田	由	甲	申	甴	电	甶
705	男	甸	甹	町	画	甼	甽	甾	甿	畀	畁
706	畂	畃	畄	畅	畆	畇	畈	畉	畊	畋	界
707	畍	畎	畏	畐	畑	畒	畓	畔	畕	畖	畗
708	畘	留	畚	畛	畜	畝	畞	畟	畠	畡	畢
709	畣	畤	畦	畧	畨	畩	畫	畬	畭	畮	畯
710	異	畱	畲	畳	畴	當	畷	畸	畹	畺	畻
711	畼	畽	畾	畿	疀	疁	疂	疃	疄	疅	疆
712	疇	疈	疉	疊	疋	疌	疍	疎	疏	疐	疑
713	疒	疓	疔	疕	疖	疗	疘	疙	疚	疛	疜
714	疝	疞	疟	疠	疡	疢	疣	疤	疥	疦	疧
715	疨	疩	疪	疫	疬	疭	疮	疯	疰	疱	疲

First to third digits of Kuten codes	Fourth digit of Kuten codes										
	0	1	2	3	4	5	6	7	8	9	
716	疳	疴	疵	疶	疷	疸	疹	疺	疻	疼	疽
717	疾	病	症	痀	痁	痂	痃	痄	病	痆	症
718	痈	痉	痊	痋	痌	痍	痎	痏	痐	痑	痒
719	痓	痔	痕	痖	痗	痘	痙	痚	痛	痜	痝
720	痞	痟	痠	痡	痢	痣	痤	痥	痦	痧	痨
721	痩	痪	痫	痬	痭	痮	痯	痰	痱	痲	痳
722	痴	痵	痶	痷	痸	痹	痺	痻	痼	痽	痾
723	痿	瘀	瘁	瘂	瘃	瘄	瘅	瘆	瘇	瘈	瘉
724	瘊	瘋	瘌	瘍	瘎	瘏	瘐	瘑	瘒	瘓	瘔
725	瘕	瘖	瘗	瘘	瘙	瘚	瘛	瘜	瘝	瘞	瘟
726	瘠	瘡	瘢	瘣	瘤	瘥	瘦	瘧	瘨	瘩	瘪
727	瘫	瘬	瘭	瘮	瘯	瘰	瘱	瘲	瘳	瘴	瘵
728	瘶	瘷	瘸	瘹	瘺	瘻	瘼	瘽	瘾	瘿	癀
729	癁	療	癃	癄	癅	癆	癇	癈	癉	癊	癋
730	癌	癍	癎	癏	癐	癑	癒	癓	癔	癕	癖
731	癗	癘	癙	癚	癛	癜	癝	癞	癟	癠	癡
732	癢	癣	癤	癥	癦	癧	癨	癩	癪	癫	癬
733	癭	癮	癯	癰	癱	癲	癳	癴	癵	癶	癷
734	癸	癹	発	登	發	白	百	皀	皁	的	皃
735	皆	皇	皈	皉	皊	皋	皌	皍	皎	皏	皐
736	皑	皒	皓	皔	皕	皖	皗	皘	皙	皚	皛
737	皜	皝	皞	皟	皠	皡	皢	皣	皤	皥	皦
738	皧	皨	皩	皪	皫	皬	皭	皮	皯	皰	皱
739	皲	皳	皴	皵	皶	皷	皸	皹	皺	皻	皼
740	皽	皾	皿	盀	盁	盂	盃	盄	盅	盆	盇
741	盈	益	盌	盍	盎	盏	盐	监	盒	盓	盔
742	盕	盖	盗	盘	盙	盚	盛	盜	盝	盞	盟
743	盠	盡	盢	監	盤	盥	盦	盧	盨	盩	盪
744	盫	盬	盭	目	盯	盰	盱	盲	盳	直	盵
745	盶	盷	相	盹	盺	盻	盼	盽	盾	盿	眀
746	眂	眃	眄	眅	眆	眇	眈	眉	眊	看	眍
747	眎	眏	眐	眑	眒	眓	眔	眕	眖	眗	眘
748	眙	眚	眛	眜	眝	眞	眠	眡	眢	眣	眤
749	眥	眦	眧	眨	眩	眪	眫	眬	眭	眮	眯
750	眰	眱	眲	眳	眴	眵	眶	眷	眸	眹	眺
751	眻	眼	眽	眾	着	睁	睂	睃	睄	睅	睆
752	睇	睈	睉	睊	睋	睌	睍	睎	睏	睐	睑
753	睒	睓	睔	睕	睖	睗	睘	睙	睚	睛	睜
754	睝	睞	睟	睠	睡	睢	督	睤	睥	睦	睧
755	睨	睩	睪	睫	睬	睭	睮	睯	睰	睱	睲
756	睳	睴	睵	睶	睷	睸	睹	睺	睻	睼	睽
757	睾	睿	瞀	瞁	瞂	瞃	瞄	瞅	瞆	瞇	瞈
758	瞉	瞊	瞋	瞌	瞍	瞎	瞏	瞐	瞑	瞒	瞓
759	瞔	瞕	瞖	瞗	瞘	瞙	瞚	瞛	瞜	瞝	瞞
760	瞟	瞠	瞡	瞢	瞣	瞤	瞥	瞦	瞧	瞨	瞩
761	瞪	瞫	瞬	瞭	瞮	瞯	瞰	瞱	瞲	瞳	瞴
762	瞵	瞶	瞷	瞸	瞹	瞺	瞻	瞼	瞽	瞾	瞿
763	矀	矁	矂	矃	矄	矅	矆	矇	矈	矉	矊
764	矋	矌	矍	矎	矏	矐	矑	矒	矓	矔	矕
765	矖	矗	矘	矙	矚	矛	矜	矝	矞	矟	矠
766	矡	矢	矣	矤	知	矦	矧	矨	矩	矪	矫
767	矬	短	矮	矯	石	矱	矲	矴	矵	矶	矷
768	矸	矹	矺	矻	矼	矽	矾	矿	砀	码	砂
769	砃	砄	砅	砆	砇	砈	砉	砊	砋	砌	砍
770	砎	砏	砐	砑	砒	砓	研	砕	砖	砗	砘
771	砙	砚	砛	砜	砝	砞	砟	砠	砡	砢	砣
772	砤	砥	砦	砧	砨	砩	砪	砫	砬	砭	砮
773	砯	砰	砱	砲	砳	破	砵	砶	砷	砸	砹
774	砺	砻	砼	砽	砾	砿	础	硁	硂	硃	硄
775	硅	硆	硇	硈	硉	硊	硌	硍	硎	硏	硐
776	硑	硒	硓	硔	硕	硖	硗	硘	硙	硚	硛
777	硜	硝	硞	硟	硠	硡	硢	硣	硤	硥	硦
778	硧	硨	硩	硪	硫	硬	硭	确	硯	硰	硱
779	硲	硳	硴	硵	硶	硷	硸	硹	硺	硻	硼
780	硽	硾	硿	碀	碁	碂	碃	碄	碅	碆	碇
781	碈	碉	碊	碋	碌	碍	碎	碏	碐	碑	碒
782	碓	碔	碕	碖	碗	碘	碙	碚	碛	碜	碝
783	碞	碟	碠	碡	碢	碣	碤	碥	碦	碧	碨
784	碩	碪	碫	碬	碭	碮	碯	碰	碱	碲	碳
785	碴	碵	碶	碷	碸	碹	碻	碼	碽	碾	碿
786	磀	磁	磂	磃	磄	磅	磆	磇	磈	磉	磊
787	磋	磌	磍	磎	磏	磐	磑	磒	磓	磔	磕
788	磖	磗	磘	磙	磚	磛	磜	磝	磞	磟	磠
789	磡	磢	磣	磤	磥	磦	磧	磨	磩	磪	磫
790	磬	磭	磮	磯	磰	磱	磲	磳	磴	磵	磶
791	磷	磸	磹	磺	磻	磼	磽	磾	磿	礀	礁

First to third digits of Kuten codes	Fourth digit of Kuten codes										
	0	1	2	3	4	5	6	7	8	9	
792	礂	礃	礄	礅	礆	礇	礈	礉	礊	礋	礌
793	礍	礎	礏	礐	礑	礒	礓	礔	礕	礖	礗
794	礘	礙	礚	礛	礜	礝	礞	礟	礠	礡	礢
795	礣	礤	礥	礦	礧	礨	礩	礪	礫	礬	礭
796	礮	礯	礰	礱	礲	礳	礴	礵	礶	礷	礸
797	礹	示	礻	礼	礽	社	社	祁	祂	祃	祄
798	祅	祆	祇	祈	祉	祊	祋	祌	祍	祎	祏
799	祐	祑	祒	祓	祔	祕	祖	祗	祘	祙	祚
800	祛	祜	祝	神	祟	祠	祡	祢	祣	祤	祥
801	祦	祧	票	祩	祪	祫	祬	祭	祮	祯	祰
802	祱	祲	祳	祴	祵	祶	祷	祸	祹	祺	祻
803	祼	祽	祾	祿	禀	禁	禂	禃	禄	禅	禆
804	禇	禈	禉	禊	禋	禌	禍	禎	福	禐	禑
805	禒	禓	禔	禕	禖	禗	禘	禙	禚	禛	禜
806	禝	禞	禟	禠	禡	禢	禣	禤	禥	禦	禧
807	禨	禩	禪	禫	禬	禭	禮	禯	禰	禱	禲
808	禳	禴	禵	禶	禷	禸	禹	禺	离	禼	禽
809	禾	禿	秀	私	秂	秃	秄	秅	秆	秇	秈
810	秉	秊	秋	秌	秎	秏	秐	秒	秓	秔	秕
811	秖	秗	秘	秙	秚	秛	秜	秝	秞	租	秠
812	秡	秢	秣	秤	秥	秦	秧	秨	秩	秪	秫
813	秬	秭	秮	积	秱	秲	秳	秴	秵	秶	秷
814	秸	秹	秺	秼	秽	秾	秿	稀	稁	稂	稃
815	稄	稅	稆	稇	稈	稉	稊	稌	稍	稏	稐
816	稑	稒	稓	稔	稕	稖	稗	稘	稙	稚	稛
817	稜	稝	稞	稟	稠	稡	稢	稣	稤	稥	稦
818	稧	稨	稩	稪	稫	稬	稭	種	稯	稰	稱
819	稲	稳	稴	稵	稶	稷	稸	稹	稺	稻	稼
820	稽	稾	稿	穀	穁	穂	穃	穄	穅	穆	穇
821	穈	穉	穊	穋	穌	積	穎	穏	穐	穑	穒
822	穓	穔	穕	穖	穗	穘	穙	穚	穛	穜	穝
823	穞	穟	穠	穡	穢	穣	穤	穥	穦	穧	穨
824	穩	穪	穫	穬	穭	穮	穯	穰	穱	穲	穳
825	穴	穵	穸	穹	穻	穽	穾	穿	窀	突	窂
826	窃	窄	窅	窆	窇	窈	窉	窊	窋	窌	窍
827	窎	窏	窐	窑	窒	窓	窔	窕	窖	窗	窘
828	窙	窚	窛	窜	窝	窞	窟	窠	窡	窢	窣
829	窤	窥	窦	窧	窨	窩	窪	窫	窬	窭	窮
830	窯	窰	窱	窲	窳	窴	窵	窶	窷	窸	窹
831	窺	窻	窼	窽	窾	窿	竀	竁	竂	竃	竄
832	竅	竆	竇	竈	竉	竊	竌	竍	竎	竏	竐
833	竑	竒	竓	竔	竕	竖	竗	竘	竚	竛	竜
834	竝	竞	竟	竡	竢	竣	竤	童	竦	竧	竨
835	竩	竪	竫	竬	竭	竮	端	竰	竱	竲	竳
836	竴	竵	競	竷	竸	竹	竺	竻	竼	竽	竾
837	竿	笀	笁	笂	笃	笄	笅	笆	笇	笈	笉
838	笊	笋	笌	笍	笎	笏	笐	笑	笒	笓	笔
839	笕	笖	笗	笘	笙	笚	笛	笜	笝	笞	笟
840	笠	笡	笢	笣	笤	笥	符	笧	笨	笩	笪