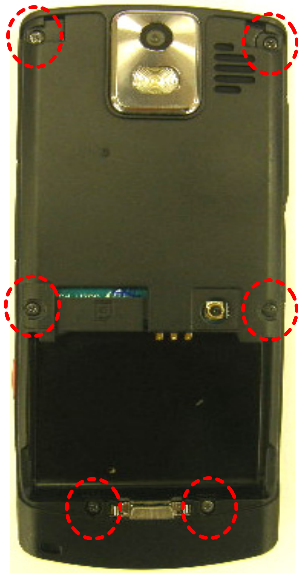


7. Disassembly and Assembly Instructions

7-1. Disassembly

1

1) Unscrew 6 bolts.



1) Be careful not to make any scratch or damage on the exterior.

2

1) Unlock the lockers forcibly following the directions below.

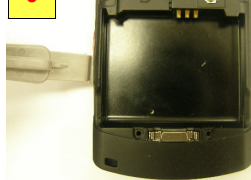
1



2




3



4



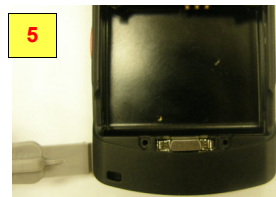5



1) Be careful not to make any scratch or damage on the exterior.

3

1) Unscrew 2 bolts.

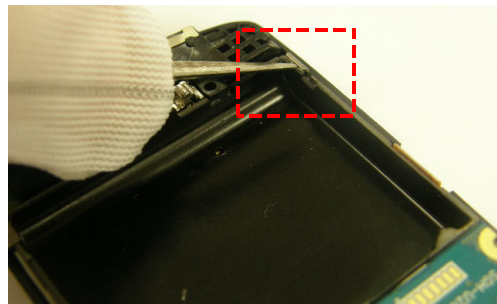


1) Be careful not to make any damage to the pba

4

1) Disassemble the pba assembly.

push down this point using tool.



1) Be careful not to make any damage to the pba


5 1) Separate LCD connector from the pba 2) Separate volume key pcb from the pba 3) Separate innテナ connector from the pba 1 2 3	6 1) Separate camera from the bracket 2) turn over the pba 3) Separate key connector from the pba pull up this point using tool.
1) Be careful not to make any damage to the pba	1) Be careful not to make any damage to the pba 2) Be careful not to make any damage to the camera
7 1) Detach window from the pba pull up this point using tool.	8 1) Detach LCD from the bracket. push down this point using tool.
1) Separate slowly with no damage to the window and LCD.	1) Separate slowly with no damage to the LCD.

7-2. Assembly

1

1) Assemble LCD to the bracket

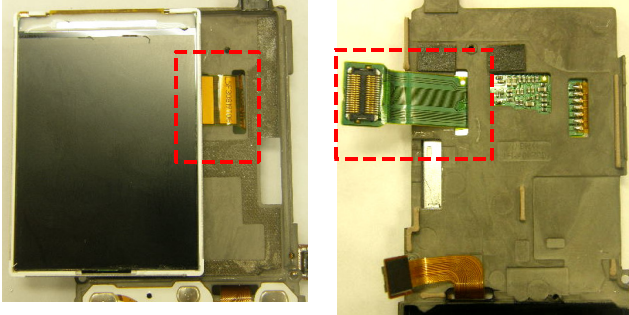insert LCD connector into the bracket hole



- 1) Check dust and dirt on the LCD.
- 2) Be careful not to make any damage to the LCD.

2

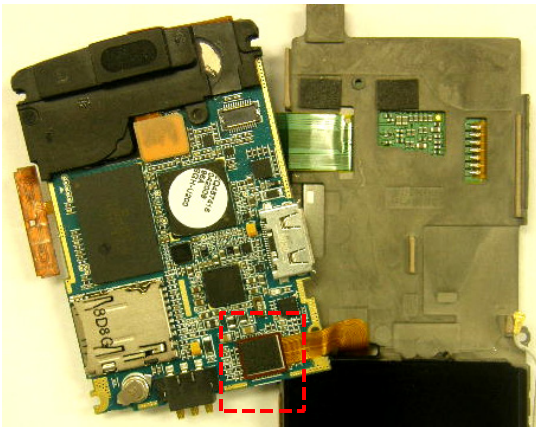
1) Attach the window to the LCD.



- 1) Check dust and dirt on the LCD and window.

3


- 1) Connect the key connector.
- 2) Turn over the pba.









- 1) Check completely connected.

4

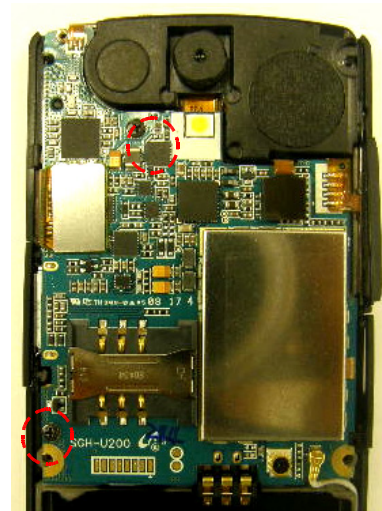1) Screw 2 bolts.



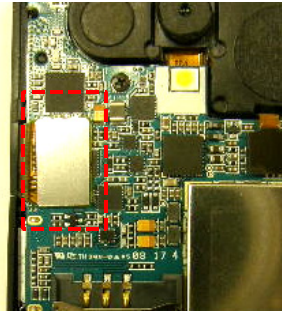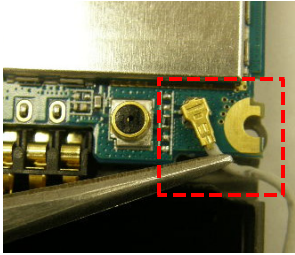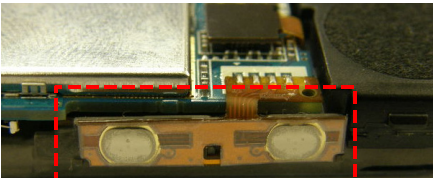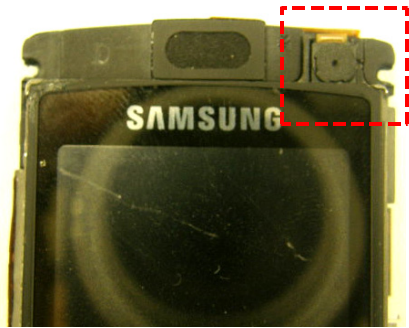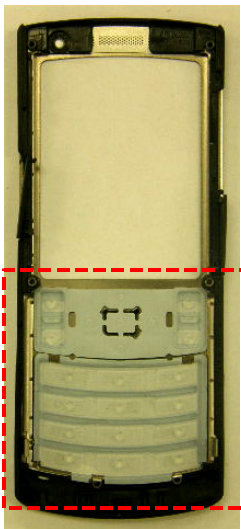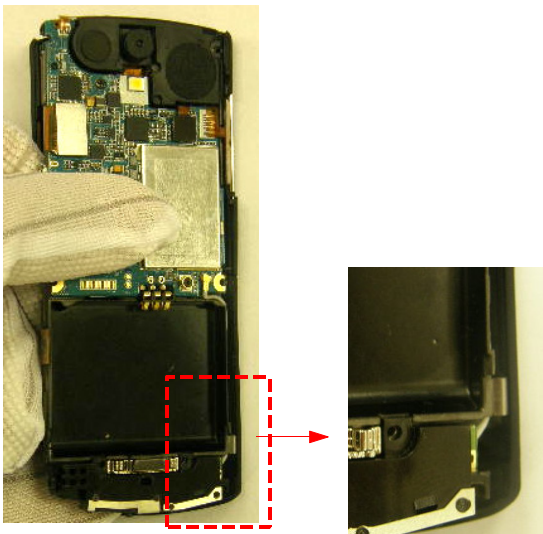- 1) Be careful not to make any damage to the pba

5 1) Connect LCD connector to the pba 2) Connect inntena wire to the pba 3) Attach volume key pcb to the braket 1  2  3 	6 1) Attach camera to the braket 
1) Check completely connected. 2) Be careful not to make any damage to the pba	2) Be careful not to make any damage to the camera.
7 1) Assemble the key pad with front. 	8 1) Assemble the pba with front. insert pba into the right's hook 
1) Be careful not to make any scratch or damage on the exterior.	1) Be careful not to move the key pad



9

1) Assemble the pba with front.

insert pba into the left's hook using tool.

**10**

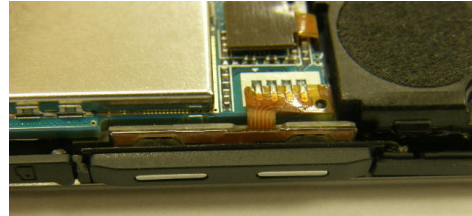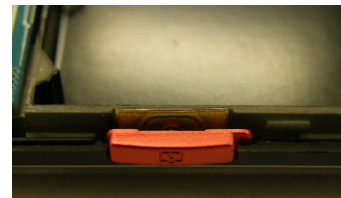1) Assemble the volume key pad with front.
2) Assemble the camera key pad with front.

1**2**

1) Be careful not to move the key pad

1) Be careful not to move the key pad

11

1) Assemble the rear with front.



1) Be careful not to make any scratch or damage on the exterior.

12

1) Screw 6 bolts.



1) Be careful not to make any scratch or damage on the exterior.