

# F-02C

**INSTRUCTION MANUAL '10.11** 

docomo STYLE series

## **DOCOMO W-CDMA, GSM/GPRS System**

#### Thank you for purchasing "docomo STYLE series F-02C" mobile terminal.

Before using F-02C, read this manual to ensure safe use and handling.

#### About manual of F-02C

The operations of F-02C are described in this manual, "使いかたガイド (Guide)" (installed in FOMA terminal) and "Instruction manual (detailed version)" (in pdf format).

# Instruction manual (this manual)

This manual provides information about screens and operations of basic functions. (@ indicates index term for "使いかたガイド (Guide)". (In Japanese only))

#### "使いかたガイド (Guide)" (installed in FOMA terminal)

This guide provides overviews and operations of frequently-used functions. (In Japanese only) In F-02C Stand-by display, MENU ▶ 6 Tool ▶ # Guide ▶ Select a search method

# "Instruction manual (detailed version)" (in pdf format)

This manual provides detailed information and operations of all the functions. (In Japanese only) <From a PC> This manual can be downloaded from NTT DOCOMO website. http://www.nttdocomo.co.ip/support/trouble/manual/download/index.html

- \* The URL and contents are subject to change without prior notice.
- In this "F-02C INSTRUCTION MANUAL", "F-02C" mobile terminal is usually referred to as "FOMA terminal".
- The images or illustration used in this manual are examples. They may differ from the actual displays.
- The images used in this manual assume that Kisekae Tool is set to "White" and Color theme setting is set to "White".
- In this manual, "authenticate" indicates the operating procedure for entering the terminal security code in 4-8 digits (⇒P35) or performing fingerprint
  authentication (⇒P37).

#### Basic package

#### F-02C **Battery Pack F19** Feeling piece F01 **Desktop Holder F30** Instruction manual (including Back \*Two types of Cover F54 and feeling piece warranty) F01 are included CD-ROM for F-02C Feeling piece case (sample) Desktop Holder F30 is made of recycled ABS from used products Compatible options ⇒P82

- Unauthorized copying of parts of or this entire manual is prohibited.
- The contents in this manual, URL and contents are subject to change without prior notice.

# Contents

Introduction

Introduction	
FOMA terminal	2
What you can do with F-02C	3
Part names and functions	4
Attaching/Removing Feeling piece	6
Using the Open assist button	6
Precautions (Always follow these directions)	7
Handling precautions	14
Waterproof/Dustproof function	17

## **Basic Operation**



Before Using	22
Screen Explanation	25
Character Entry	29
Sound/Screen Setting	30
Lock/Security	35

#### **Connect**



Call Telephone	41
Mail	49
Phonebook	52

## Search



	i-mode/Full Browser	53
٦	i-Channel	56
	Map/GPS	57

## Enjoy



Camera	59
1Seg	61
Music	63
i-α <b>ppli</b>	65
i-motion/Movie	66

## **More Convenient**



Osaifu-Keitai	67
i-concier	68
Convenient tools	69
Data Management	72

## Others

Support	76
Appendix	83
Index	95

Introduction

Basic Operation

Connect

Search

**Enjoy** 

More Convenient

Others

## FOMA terminal

#### ...

- Because your FOMA terminal uses wireless transmission, it may not function in locations where it is difficult for radio waves to penetrate, such as tunnels, underground passages and some buildings, in areas where radio waves are weak, or out of service area. Even when you are high up in a tall building or condominium and nothing blocks your view outside, your FOMA terminal may not be able to receive or transmit signals. Also, communication may be interrupted even when the signal meter on your FOMA terminal indicates there are strong radio waves and you are not moving (traveling).
- Use your FOMA terminal in a way that does not disturb others in public spaces, crowded locations or quiet places.
- Because your FOMA terminal uses radio waves to communicate, it is possible that a third party may attempt to tap your calls. However, the W-CDMA, GSM/GPRS system automatically applies a confidential communication function to all calls, so even if a third party could somehow tap a call, they only hear noise.
- Your FOMA terminal encodes voice communication as digital data. When you are operating your FOMA terminal while moving to a location subject to weaker radio wave conditions, the transmitted digital data may not be correctly decoded and as a result the decoded voice may differ somewhat from the actual voice.
- Maintain a separate record of the data (Phonebook, Schedule, Memo, Recorded messages, Voice memos, Moving picture memos, etc.) you registered in your FOMA terminal. Note that DOCOMO assumes no responsibility for any loss of saved contents of data resulting from malfunction, repair, changing of the model or other handling of FOMA terminal.

- You are recommended to save important data to microSD card.
   Using DOCOMO keitai datalink, you can transfer and save phonebook, mail, schedule and other data to a PC.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS.
   Neither DOCOMO nor the certifier as listed herein makes any representation and warranty as for the security in the use of SSL/ TLS. If the data should be erased, DOCOMO assumes no responsibility for the loss of any data.
  - Certifier: VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd., Comodo CA Ltd., Entrust, Inc., Go Daddy, Inc.
- This FOMA terminal supports FOMA Plus-Area and FOMA HIGH-SPEED Area.
- FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.

# What you can do with F-02C

i-concier

68

It is a service for supporting your life like a butler or concierge. It stores your various information (area of residence, memo, schedule, ToruCa, phonebook, etc.) and offers you information that matches contents of Memo or Schedule, your living area or current location, or preferences and interest at the right time. (In Japanese only)



#### **AUTO-GPS**

58

The AUTO-GPS function allows for useful services that deliver information about the weather or shops around where you are, or sightseeing information. (In Japanese only)



## 使いかたガイド (Guide)

28

This function allows you to learn operations you want to use on the FOMA terminal. Without the instruction manual at your hand, you can check the operations readily. (In Japanese only)



#### Quick voice activation

26

By just speaking a function you want to use, you can activate the function. It is useful when you do not know where is a desired function in the menu or when you want to activate the function immediately. (In Japanese only)

## Waterproofness/Dustproofness

17

Waterproofness of IPX5 and IPX8 and dustproofness of IP5X are provided by firmly closing the external connection jack cap and installing the back cover in a locked state.



## High functionality camera

59

Camera offers approximately 12,2 million pixels (effective pixels) and a lot of high functionality like digital camera.



## Part names and functions

Part names of F-02C and major functions assigned to each part are as follows. Some keys work for the different function by pressing length. When using function, refer to this manual or "使いかたガイド (Guide)" (in Japanese only) installed in the FOMA terminal.

1 Humidity/Temperature sensor

\* It may not work when you cover this section or close the FOMA terminal. Temperature/ Humidity values are just guides.

2 Sub-camera

Shoot yourself image/Send the image via videophone

- Oisplay⇒P25
- 4 Microphone
  - \* Do not cover it during use.
- MENU MENU key Display the menu

6 ☑ Mail/Character key Display the mail menu, or switch text input modes

CLR ch/Clear key Display i-Channel, or return to the previous screen


Start a voice call key Start voice call, switch to hands-free call or perform quick voice activation

O - Keypads
 Enter phone number or characters, or select menu item

\*/Public mode (Drive mode) key Enter "\*" or voiced/semi-voiced sound, or start/cancel Public mode (Drive mode)

fi wir i-Widget/TV key
Start/Exit i-Widget, or watch 1Seg

Search key
 Activate Quick search/Quick voice search

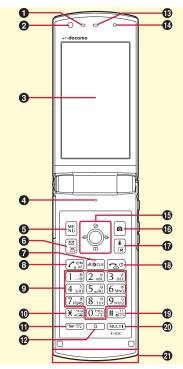

B Earpiece

Light sensor

\* Sense ambient brightness and adjust screen backlight automatically. When the section is covered, adjustment may not work correctly.

**ⓑ** Multi-cursor key

Move the cursor, or operate menu

- Perform an operation.
- Tisplay Schedule, or adjust sound volume
- 2 : Display Phonebook, or adjust sound volume
- : Display Received calls.
- : Display Redial.
- 8-direction operations are available depending on functions.
- Camera key
  Activate the still camera shooting
- Timode/i-αppli key
  Display iMenu or i-αppli folder
- Turn ON/OFF FOMA terminal, or exit a running function
- # #/Silent mode key Enter "#" or punctuation, or start/cancel Silent mode
- Perform another function during a call or operation, or activate/deactivate Privacy view.
- 3 1Seg antenna
  - The antenna is positioned here when the terminal closed. Whole terminal receives signals when it is opened.⇒P61

#### **22** Charging light

Nofity charging or missed call or turn on/ blink during a call etc.

#### (28) Indicator light

Turn on/blink to notify various status such as incoming call or mail, etc.

- 2 Sub-display
- Feeling piece attaching part
- TOMA antenna (built-in)
  - \* For a call in better conditions, do not cover the antenna with your hand.
- Main-camera

Shoot still image/moving picture, or send an image via videophone

Fingerprint sensor

Register fingerprint and authenticate

② Infrared data port

Infrared communication, infrared remote control function


Speaker

Hear ring alert or voice of the caller with the handsfree function ON

**⑤** ⋒ Mark

Use Osaifu-Keitai, or send/receive data via iC transmission

- ② Light/Shooting light Camera light
- Back cover
  - \* To access UIM slot and the microSD card slot, remove the back cover and the battery pack.

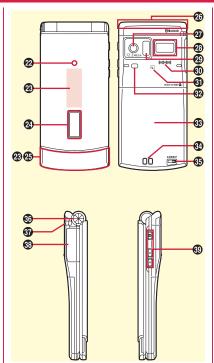

- Charging jack
- Back cover lever
  - Firmly attach the back cover and lock it with the lever to avoid water seepage or dust ingress.

Open assist button

Press this button to open the FOMA terminal.

Strap opening

External connection jack


Connect optional AC adapter, DC adapter, FOMA USB Cable with Charge Function 02, Stereo Earphone Set 01 etc.


Side camera key

Record video during 1Seg watching or activate Movie camera

▲ Side up/down keys
Adjust the volume or switch views

▲ for stopping ring tone/alarm sound/ vibrator, activating Record message/Voice memo, ▼ for checking new mail/messages, etc.

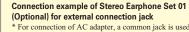

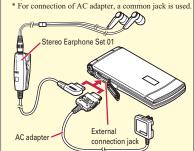


# **Attaching/Removing Feeling piece**

By attaching accessory Feeling piece, you can change the outer appearance readily by the various scene or add differences in vision when the light turns on or blinks.

It is recommended to store the Feeling piece in the attached Feeling piece case to prevent from damage or loss

#### ♣ Attaching

Align the groove on the FOMA terminal with the projection of Feeling piece and hold in the direction **1**, then align the other sides and push in the direction **2** until it clicks.

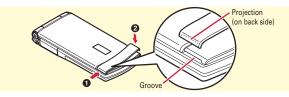

#### ♣ Removing


Hook to the groove at one end of Feeling piece with your fingertip  $(\P)$ , hold it up in the direction  $\P$ .



# **Using the Open assist button**

You can open the FOMA terminal easily just by pressing the dedicated button.

 Even without using the button, the FOMA terminal can be opened easily with light force.

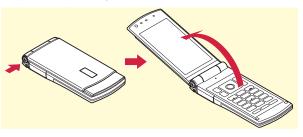

#### **Point**


- It is recommended to hold the FOMA terminal in your hand for the operation. Be careful not to hit your face, people or objects when opening the FOMA terminal or not to drop the FOMA terminal by the rebound when opening.
- Depending on the orientation, the FOMA terminal may not opened completely even by pressing the button.
- Close the FOMA terminal with your hand. If the FOMA terminal is not closed completely, once open it completely and then close it.

# **Precautions (Always follow these directions)**

- Before using your FOMA terminal, or when necessary, read the precautions below to ensure safe use and handling. After reading this manual, keep it carefully.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.

DANGER	This sign denotes that death or serious injury may directly result from improper use.		
WARNING	This sign denotes that death or serious injury may result from improper use.		
CAUTION	This sign denotes that minor injury or damage to property may result from improper use.		

The symbols below show specific directions.

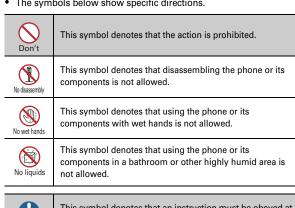



This symbol denotes that an instruction must be obeyed at all times.



This symbol denotes that the equipment should be unplugged.

#### Precautions contain the description below.

Handling FOMA terminal, battery pack, adapter, desktop holder, UIM and Feeling piece (common) .......8 Handling FOMA terminal......9 Handling adapter and desktop holder......11 Handling UIM......12  Handling FOMA terminal. battery pack, adapter, desktop holder, UIM and Feeling piece (common)

#### **⚠** DANGER



Do not use, store, or leave the equipment in hot areas such as near flames or in areas under strong direct sunlight such as inside a vehicle.

May cause fire, burns or injuries.



Do not put the terminal into heating cooking device such as microwave oven or high-pressure container.

May cause fire, burns, injuries, electric shock.



Do not disassemble or remodel the equipment.

No disassembly May cause fire, burns, injuries, electric shock.



Do not let the terminal get wet with water, drinking water, urine of pet No liquids animals, etc.

> May cause fire, burns, injuries, electric shock. For waterproof, see ⇒P17



Use the battery pack and adapter specified by NTT DOCOMO for your FOMA terminal.

May cause fire, burns, injuries, electric shock.

## **♠ WARNING**



Do not throw the equipment or give hard shock to it.

May cause fire, burns, injuries, electric shock.



Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the charging jack or external connection jack. Do not put those materials inside the terminal. May cause fire, burns, injuries, electric shock.

Don't

Do not cover or wrap the terminal with a blanket, etc while using or charging.

May cause fire or burns.



Turn FOMA terminal OFF and stop charging before entering a place such as a gas station where flammable gases are generated.

The gas may catch fire.

When using Osaifu-Keitai in a place as a gas station, turn OFF the terminal before using it. (When IC card lock is activated, deactivate it before turning OFF the terminal.)



If the equipment starts giving off a strange smell, overheats, becomes discolored or deformed during use. charging or in storage, immediately perform the following operations.

- · Remove the power plug from the wall outlet or cigarette lighter socket.
- Turn FOMA terminal OFF.
- Remove the battery pack from FOMA terminal.

Failure to do so may cause fire, burns, injuries, electric shock.

#### **CAUTION**



Do not leave the equipment on unstable or sloping surfaces.

May cause injuries. Don't



Do not store the equipment in extremely humid, dusty or hot areas. May cause fire, burns, electric shock.



Children using the equipment should be instructed in proper operation by an adult. Do not allow them to use the equipment without adult supervision. May cause injuries.



Store the equipment out of reach of small children.

May be accidentally swallowed or cause injuries.



Be careful especially when using FOMA terminal connected to the adapter continuously for a long time.

If you use i-αppli, a videophone call or 1Seq. watching while charging the battery for a long time, FOMA terminal, battery pack and adapter may be heated.

Directly touching a hot part for a long time. you may have redness, itching or rash on your skin, or it may result in low-temperature burns depending on your constitution and/or health condition.

#### **Handling FOMA terminal**

## **↑**WARNING



Do not direct the infrared data port toward your eye and transmit signals.

May cause harmful effect on eyes.



Do not direct the infrared data port toward home electric appliances etc. equipped with infrared device when using infrared communication.

May cause an accident because of malfunction of infrared device.



Do not turn on the light by getting the lighting part closer to other person's eves.

May impair eyesight. And may cause accidents like injury etc., by dazzling or astounding other people.



Do not put foreign objects such as liquid like water, metal pieces or burnable things into UIM or microSD card slot.

May cause fire, burns, injuries, electric shock.



Do not turn on the light aiming directly at the driver of the car etc.

May disturb driving and cause an accident.



# Turn FOMA terminal OFF in areas where use is prohibited, such as in airplanes and hospitals.

Failure to do so may cause electronic equipment or electronic medical equipment to fail or malfunction. If the function which automatically turns the power ON is set, cancel the setting before turning the power OFF

When using the phone in a medical facility, be sure to observe the regulations of the facility. If you do prohibited act such as using the phone in an airplane, you will be punished according to law.



When you talk by setting handsfree or ring alert is sounding, keep FOMA terminal away from your ear.

And, when connecting the earphone/ microphone etc. to the FOMA terminal and play a game or music, adjust the volume moderately.

Too loud volume may cause a hearing loss. And, if you cannot hear the sound around you clearly, it may cause an accident.



If you have weak heart, be careful when setting the Vibrate alert (vibration) or alert volume setting.

May cause harmful effect on heart.



When you use electronic medical equipment, check with the equipment manufacturer to determine how the device is affected by radio waves before using.

May cause harmful effect on electronic medical equipment etc.



#### Turn FOMA terminal OFF near highprecision electronic control equipment or electronic equipment using low-power signals.

Failure to do so may cause the equipment to fail or malfunction.

Examples of electronic equipment to avoid. Hearing aids, implanted pacemakers or defibrillators, other electronic medical equipment, fire alarms, automatic doors and other automatic control equipment.

Users wearing implanted pacemakers or defibrillators or other electronic medical equipment should check with the manufacturer or sales outlet about the effect of radio frequencies on the equipment.



When the display or camera lens is accidentally broken, be careful of broken glass or exposed internal parts of FOMA terminal.

Surfaces of display and camera lens are made of plastic panels and they are structured for the glass not to scatter, however, if you mistakenly touch broken or exposed parts, you may be injured.



To sound the high-pitched alarm, always keep FOMA terminal away from your ears.

Failure to do so may cause hearing defect.

## **CAUTION**



Do not swing the FOMA terminal by the strap.

May cause accident such as injury to yourself or others by hitting.



Do not use damaged FOMA terminal.

May cause fire, burns, injuries, electric shock.



When using the motion tracking or motion sensor, check the safety around you, hold FOMA terminal firmly, and do not shake it unnecessarily.

May cause accident such as injuries.



If the display part is accidentally broken and the substance such as liquid crystal leaks out, do not make the substance contact with your skin of face or hands.

May cause loss of sight or skin problems. If the substance such as liquid crystal gets into your eyes or mouth, rinse it with clean water and see a doctor immediately. And, if the liquid adheres to skin or clothing, use alcohol etc. to wipe it off, then wash with soap.



To use the terminal in car, check with automobile manufacturer or dealer to determine how the device is affected by radio waves before using.

In rare cases, using the phone in some vehicle models can cause the vehicle's electronic equipment to malfunction. In that case, stop using the terminal immediately.



Mobile phones can give some users skin problems such as itching, allergic reactions or rashes. If you develop skin problems, stop using the phone immediately, and see a doctor.⇒
"Material list (P13)"



When opening or closing FOMA terminal, take care not to have your fingers or strap caught by the terminal.

May cause accident such as injuries.



When watching the display, take a certain distance from the display in a fully bright place.

May reduce visual acuity.

#### **Handling battery pack**

Check that the battery type matches the type displayed on the battery pack label.

Display	Battery type	
Li-ion 00	Li-ion battery	

#### **DANGER**



Do not connect a wire or other metal objects to the jack. And, do not carry or store FOMA terminal with objects like a metal necklace.

May cause the battery pack to ignite, burst, heat or leak



Check the orientation of battery pack to install it to FOMA terminal, and do not try to force the battery pack onto FOMA terminal if you are having trouble installing it.

May cause battery pack to ignite, burst, heat or leak



Do not throw the battery pack into the fire.

May cause battery pack to ignite, burst, heat or leak.



Do not nail the battery pack, hit with a hammer or step on it.

May cause battery pack to ignite, burst, heat or leak.



If the battery pack's fluid etc. contacts eyes, immediately flush the eyes with clean water and see a doctor right away. Do not rub the eyes.

May cause loss of sight.

#### **MARNING**



If the battery pack seems to have abnormalities such as deformation or scratches due to falling, never use it.

May cause battery pack to ignite, burst, heat or leak.



If the battery pack leaks or gives off a strange smell, immediately remove it from the vicinity of open flames.

The vapors from leaking battery pack fluid may ignite or explode.





Be careful not to let your pet bite the battery pack.

May cause battery pack to ignite, burst, heat or leak.

## **CAUTION**



# Do not discard old battery packs together with other garbage.

May cause igniting or environmental destruction. Tape the terminals of old battery packs to insulate them, and then bring them into a sales outlet such as docomo Shop. If your local municipality has a battery recycling program, dispose of them as provided for.



Do not use or charge a wet battery pack.

May cause battery pack to ignite, burst, heat or leak.



If fluid etc. leaks out from the battery pack, do not make the fluid contact with your skin of face or hands.

May cause loss of sight or skin problems. If the fluid etc. put into your eyes or mouth, or contacts skin or clothes, immediately flush the contacted area with clean water. If the fluid put into the eyes or mouth, immediately see a doctor after flushing.

# Handling adapter and desktop holder

#### **♠WARNING**



Do not use the adapter cord if it gets damaged.

Don't May cause fire, burns, electric shock.



Do not use the AC adapter or desktop holder in a bathroom or other highly humid area.

May cause fire, burns, electric shock.



Always use the DC adapter with a negative-ground vehicle. Do not plug it into a positive-ground vehicle.

May cause fire, burns, electric shock.



When it starts to thunder, do not touch adapter.

t May cause electric shock.



Do not short the charging jack while it is connected to the outlet or cigarette lighter socket. Do not touch the charging jack with a part of your body such as your hand or finger.

May cause fire, burns, electric shock.



Do not place heavy objects on the adapter cord.

Don'

May cause fire, burns, electric shock.



When you insert and remove AC adapter from power outlet, do not contact a metal strap or other metal objects with the jack.

May cause fire, burns, electric shock.



Do not touch the adapter cord, desktop holder or outlet with wet hands.

May cause fire, burns, electric shock.



Only use with the specified power source and voltage.

When charging FOMA terminal overseas, use AC Adapter for global use.

If incorrect voltage is used, this may cause fire burns or electric shock

AC adapter : AC100V

DC adapter: 12 or 24V DC (specific for negative ground vehicle)

AC adapter for global use: Between 100V and 240V AC (Connect to the AC outlet for internal household use)



# If the DC adapter's fuse blows, replace it only with the specified fuse.

May cause fire, burns, electric shock. For the specified fuse, see the instructions that come with the DC adapter.



Wipe off any dust that accumulates on the power plug.

Do

Failure to do so may cause fire, burns, electric shock.



When you connect the AC adapter to an outlet, firmly connect to the outlet. Failure to do so may cause fire, burns, electric shock



When you disconnect the adapter from the outlet or cigarette lighter socket, do not pull the adapter cord with excessive force. Instead, hold the power plug to disconnect.

May cause fire, burns, electric shock.



Always remove the power plug from the outlet or cigarette lighter when not using the adapter for an extended period.

Failure to do so may cause fire, burns, electric shock.



Immediately remove the power plug from the outlet or cigarette lighter socket if water or other fluids get into the adapter.

Failure to do so may cause fire, burns, electric shock.



Always remove the power plug from the cigarette lighter socket when cleaning the equipment.

Failure to do so may cause fire, burns, electric shock.

#### Handling UIM





Be careful of the cut surface when removing UIM.

May cause injuries.

#### **Handling Feeling piece**

#### **ACAUTION**



Do not push the corner of Feeling piece against your body or do not scratch your body with the corner. May cause injuries.

# Handling mobile phones near electronic medical equipment

■ These precautions are based on the guidelines produced at the Electromagnetic Compatibility Conference Japan, regarding the protection of electronic medical equipment from radio waves emitted by mobile phone units.

#### **WARNING**



Obey the following rules inside medical facilities.

- Do not bring FOMA terminal into operating rooms (ORs), intensive care units (ICUs) or coronary care units (CCUs).
- Turn FOMA terminal OFF in hospital wards.
- Turn FOMA terminal OFF in hospital lobbies and corridors if electronic medical equipment could be nearby.
- If the medical facility has specified zones where use or possession of mobile devices is prohibited, obey those instructions.
- If the function to automatically turn ON the power is set, cancel the setting before turning the power OFF.



Turn FOMA terminal OFF in crowded trains or other public places where pacemaker or defibrillator wearers could be nearby.

FOMA terminal's signals may affect the operation of implanted pacemakers or defibrillators, and other devices.



Wearers of implanted pacemakers or defibrillators must carry and use FOMA terminal at least 22 cm away from the implanted device.

FOMA terminal's signals may affect the operation of implanted pacemakers or defibrillators, and other devices.



When electronic medical equipment other than implanted pacemakers or defibrillators are in use outside of medical facilities (such as in home care settings), check with the device manufacturer to determine how the device is affected by electrical signals.

FOMA terminal's signals may affect the performance of electronic medical equipment.

## Material list

Part		Material	Surface treatmen
Exterior case	Movable part/Rear surface	PC resin	UV hard coating
	Movable part/ Display	PC+ABS resin	UV hard coating
	Fixed part/ Keypad	PA-GF resin	UV hard coating
	Fixed part/ Battery	PC+ABS resin	UV hard coating
	Hinge part/ Movable side	PC+ABS resin	UV hard coating
	Hinge part/Fixed side	PC+ABS resin	UV hard coating
	Back cover	PC+ABS resin, stainless steel, silicone rubber (VMQ)	UV hard coating
	Back cover lock lever	POM resin	None
	Back cover inside plate	Stainless steel	None

Pa	art	Material	Surface treatment
Case pad		Urethane acrylate resin	None
Main displ	ay panel	Acrylate resin	UV hard coating
Sub-displa	y panel	Acrylate resin	UV hard coating
Camera ler panel	ns, camera	Acrylate resin	UV hard coating
Side keys		PC resin	UV hard coating
Keypad	Keypad		UV hard coating
Open assis	Open assist button		UV hard coating
Mobile ligh	Mobile light panel		Wrinkled
Front screv	v cap	Acrylate resin	UV hard coating
External connection	Phone body	PC+ABS resin	UV hard coating
jack cap	Flexure	Elastomer resin (TPE)	None
	Water stop	PC resin	None
	D ring	Synthetic rubber (EPDM)	None
External co	nnection	Stainless steel	Tin plating

P	art	Material	Surface treatment
Battery contacts	Battery contacts connector	PPS resin	None
	Battery contacts	Beryllium copper	Gold plating (base : Ni- Pd plating)
Screw (bat recess)	Screw (battery install recess)		None
Battery ins	Battery install recess face		Gold plating
Battery pack	Battery pack	PC resin	None
	Contacts	Beryllium copper	Gold plating
Charging contates	Contacts	Stainless steel	Gold plating
	Attaching holder section	LCP resin	None
Fingerprint sensor		Flexible PC board	None
UIM tray		POM resin	None

# **Handling precautions**

#### General

- F-02C is waterproof/dustproof, however, do not allow water or dust to seep into FOMA terminal and do not allow accessories or optional devices to get wet or let dust attach.
  - Battery pack, adapter, UIM are not waterproof/dustproof. Do not use in a bathroom or other highly humid area or do not let rain attached. Or putting the terminal on your body, humidity of sweat may cause internal corrosion and malfunction. Note that malfunctions, which are determined to be caused by water as result of inspections, are not covered by the warranty. Since these conditions are outside the scope of the warranty, a repair, if at all possible, is charged.
- . Clean FOMA terminal with a dry soft cloth (such as a cloth for eyeglasses).
  - Rubbing it roughly with a dry cloth may scratch the display.
  - Drops of water or dirt left on the display may cause stains.
  - If FOMA terminal is wiped with alcohol, paint thinner, benzine or detergent, the printing may disappear or color may fade.
- Clean the jack occasionally with a dry cotton swab etc.
  - If the jack is soiled, connection gets worse and it may cause power to be turned
    off or insufficient battery charge, so clean the jack with a dry cotton swab etc.
     Also, be careful never to damage the jack when cleaning it.
- . Do not place FOMA terminal near an air-conditioner outlet.
  - The rapid change in temperature may cause condensation, causing internal corrosion and malfunction.
- When using, be careful not to subject excessive force to FOMA terminal or the battery.
- If FOMA terminal is crammed into a brimming bag or placed in a pocket and sat on, display, internal PCBs or battery pack may be damaged or malfunction. And, if external devices are plugged into the external connection jack (earphone/ microphone jack), the breakage of the connector or malfunction may result.
- Do not rub or scrape the display with a metal piece etc.
  - It may scratch the display, causing malfunction or damage.
- Carefully read the separate instructions that come with the battery pack or the adapter.

#### **FOMA terminal**

- Avoid extreme temperature.
- Use FOMA terminal where the temperature ranges between 5 and 40℃ (limited to the temporary use in a bathroom etc. when temperature is above 36℃) and humidity ranges between 45 and 85%.
- FOMA terminal may affect land-line phones, TVs or radios in use nearby, so use
  it as far as possible from these appliances.
- Maintain a separate record of the data you saved in your FOMA terminal.
  - If the data is deleted, DOCOMO assumes no responsibility for the loss of any data.
- . Do not drop FOMA terminal or subject it to shocks.
- May cause malfunction or damage.
- Do not plug external devices into the external connection jack (earphone/ microphone jack) at a slant, or do not pull it forcibly while it is plugged.
  - May cause malfunction or damage.
- Do not close FOMA terminal with the strap etc. held inside.
  - May cause malfunction or damage.
- It is normal for FOMA terminal to become warm during use or charging.
   Continue to use it.
- Do not leave FOMA terminal with the camera in areas under strong direct sunlight.
- May cause discoloring or burn-in of materials.
- Use FOMA terminal with the external connection jack cap closed.
  - Dust and/or water brought into FOMA terminal cause troubles.
- . Do not use FOMA terminal with the back cover removed.
- May cause removal of battery pack, malfunction or damage.
- Do not put extreme thick sticker on the display or keypad face.
- May cause malfunction, damage or erroneous operation.
- . Do not put strong impact on the fingerprint sensor or scratch its surface.
  - It may cause malfunction of fingerprint sensor and disable authentication operation.

- · Clean the fingerprint sensor with a dry soft cloth (such as a cloth for eyeglasses).
  - If the fingerprint sensor is dirty or water is sit on its surface, the sensor cannot read fingerprints, and it may cause decrease authentication performance or malfunction.
- While microSD card is being used, do not take the card out and do not turn off FOMA terminal.
  - May cause data loss or malfunction.
- Do not bring magnetic cards etc. close to FOMA terminal nor clip it by FOMA terminal.
  - Magnetic data in cash cards, credit cards, telephone cards, floppy disks, etc. may be erased.
- . Do not bring magnetized objects close to FOMA terminal.
  - Bringing strong magnetism close may cause a malfunction.

#### Battery pack

- . The battery pack is a consumable part.
  - Replace the battery pack if FOMA terminal has extremely short operation time on a full charge, though it may vary by operating conditions. Purchase a new battery pack of the specified type.
- Charge the battery in an area within the proper ambient temperature range (5-35°C).
- The operation time provided by the battery pack varies by the operating environment and battery pack's deterioration.
- The battery pack may swell out as it comes to near the end of its lifetime depending on the usage conditions, but it is not a problem.
- Be careful especially about the following points when preserving the battery pack.
  - Keeping under the state of the full charge (right after charging ends)
  - Keeping under the state of the empty charge (too exhausted to turn on FOMA terminal)

They may cause the battery pack performance to be degraded or its lifetime to be shortened.

A recommended battery level to keep the battery pack is the battery icon in 2 cells or in 40 % of remaining battery level as a guide.

#### **Adapter**

- Charge the battery in an area within the proper ambient temperature range (5-35°C).
- . Do not charge the battery in the areas below.
  - In areas of excessive humidity, dust or vibrations
  - Near land-line phones or TVs/radios
- . It is normal for the adapter to become hot while charging. Continue to use it.
- When using the DC adapter for charging, keep the vehicle engine running.
   The vehicle's battery could become flat.
- When using an outlet with a mechanism preventing unplugging, follow the handling instructions for that outlet.
- Do not give strong shock. Do not deform the charging jack.
  - Doing so may cause malfunction.

#### UIM


- . Do not use excessive force to install/remove UIM.
- Note that DOCOMO assumes no responsibility for malfunctions occurring as the result of inserting and using UIM with another IC card reader/writer.
- · Always keep UIM ICs clean.
- Clean UIM with a soft, dry cloth (such as a cloth for eyeglasses).
- Maintain a separate record of the data you saved in UIM.
  - If the data is deleted, DOCOMO assumes no responsibility for the loss of any data.
- To preserve the environment, bring the old UIM to a sales outlet such as docomo Shop.
- Take care not to scratch, touch accidentally or short IC.
- May cause data loss or malfunction.
- Do not drop UIM or subject it to shocks.
  - May cause malfunction.
- Do not bend UIM or place heavy objects on it.
   May cause malfunction.
- Do not install UIM into FOMA terminal with a label or sticker put on.
  - May cause malfunction.

#### Feeling piece

- Do not make a major impact on the Feeling piece or give excessive force when attaching/removing.
  - It may cause deform or damage the Feeling piece.

#### Bluetooth® devices

- This FOMA terminal is equipped with the security features, that are compliant
  with Bluetooth standards for communication via Bluetooth. However,
  depending on the settings, there may not be enough security. Be aware of
  security risks when using Bluetooth.
- DOCOMO assumes no responsibility for any information which may be leaked during communication via Bluetooth.
- You can use headset, handsfree, audio, keyboard, dial-up connection, data transfer, serial port, image transfer or health devices with FOMA terminal. An audio/video remote control may be available with an audio device (only Bluetooth compatible devices).
- Frequency bands
   Frequency bands used by FOMA terminal Bluetooth function are as below.

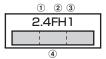

- 1 2.4: Radio equipment that uses the 2400 MHz band.
- 2 FH: The modulation is the FH-SS method.
- 3 1: The expected interference distance is 10 m or shorter.
- All bandwidths between 2400 MHz and 2483.5 MHz are used, and the bandwidth used by mobile object identification devices cannot be avoided.

#### Cautions on using Bluetooth devices

In the bandwidth used by this terminal, in addition to home electric appliances such as a microwave oven and industrial/scientific/medical devices, in-plant radio stations used to identify mobile objects used in production lines of a factory that require a license, specified low power radio stations, or amateur radio stations that do not require a license (hereafter "other radio stations") can be in operation.

- Before using this terminal, check whether other radio stations are in operation in your neighborhood.
- If radio wave interference occurs between the terminal and "other radio stations", use the terminal in a different location or "Turn the power OFF" to avoid the radio wave interference.
- 3. For details, contact "General Inquiries" on the last page of this manual.

#### FeliCa reader/writer

- FeliCa reader/writer function of FOMA terminal uses weak waves requiring no licenses for radio stations.
- It uses 13.56 MHz frequency band. When using other reader/writers in your surroundings, keep FOMA terminal away sufficiently from them. Before using the FeliCa reader/writer, confirm that there are no radio stations using the same frequency band nearby.

#### **CAUTION**

 Do not use a remodeled FOMA terminal. Using a remodeled terminal violates the Radio Law.

FOMA terminal is certified according to technical standard conformance of specified wireless equipment based on the Radio Law, and as a proof of it, the "Technical Compliance Mark (\$\epsilon\)" is depicted on the engraved sticker of FOMA terminal.

If you remodel FOMA terminal by removing its screws, your certification of technical standard conformance becomes invalid.

Do not use FOMA terminal with its certification of technical standard conformance invalid as it violates the Radio Law.

Be careful when you use FOMA terminal while driving a car etc.
 Using a mobile phone while driving is subject to penal regulations.
 However, absolutely necessary cases such as rescue of a sick person or maintaining public's safety are exempted.

. Use the Bluetooth function only in Japan.

The Bluetooth function of the FOMA terminal is compliant with wireless standards and is authorized for use only in Japan.

If you use this function overseas, you may be punished.

· Use FeliCa reader/writer function only in Japan.

FeliCa reader/writer function of FOMA terminal conforms to Japanese radio standards.

If you use this function overseas, you may be punished.

# **Waterproof/Dustproof function**

F-02C provides waterproofness of IPX5 (former JIS protection code 5)\*1, IPX8\*2 and dustproofness of IP5X (JIS protection code 5)\*3 with firmly closing the external connection jack cap and installing the back cover in a locked state.


- \*1 IPX5 means that a phone keeps functioning after applying a jet flow of 12.5 L/min. from every direction from a distance of approximately 3 m for at least 3 minutes using water nozzle in 6.3 mm inner diameter.
- \*2 For F-02C, IPX8 means that a phone keeps functioning after F-02C is slowly submerged to depth of 1.5m in static tap water at room temperature, left there for 30 minutes and then taken out, and the mobile phone keeps shooting still images or moving pictures in approximately 30 minutes in static tap water at room temperature.
- \*3 IP5X means a protection degree that a phone keeps functioning and safety after it is placed in a device with dust in diameter 75 μ or less for 8 hours, agitated and then taken out.
- What you can do with waterproofness/dustproofness of F-02C
- You can talk or watch 1Seg programs without using an umbrella in the rain (for rainfall of 20 mm or less per hour).
  - When your hands or FOMA terminal are wet, avoid installing/ removing the back cover or opening/closing the external connection jack cap.

- You can also shoot still images and moving pictures in the pool depth of 1.5 m.
  - Do not perform other operations underwater than shooting still images and moving pictures.
  - If you put the terminal in water of swimming pool, be sure to have it within 30 minutes.
  - If FOMA terminal gets wet with water from the swimming pool, wash it in specified procedure (⇒P20).
- · You can use FOMA terminal in a bathroom.
- Do not put the terminal in the bathtub. Do not use the terminal in hot water. May cause malfunction.
- Never put FOMA terminal in hot spring water or water containing soap, detergent or bath powder.

#### To ensure waterproofness/dustproofness


#### To avoid water/dust ingress, be sure to observe the following points.

- Do not throw any liquid other than room-temperature tap water on FOMA terminal, or soak it in such liquid.
- Open/close the external connection jack cap as described below.
   Opening the external connection jack cap>
   Pull the cap up with your finger by the groove.

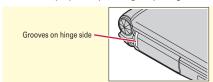

#### <Closing the external connection jack cap>


Close the external connection jack cap not giving any gap with FOMA terminal by firmly pressing in the direction of arrow mark. Make sure that the cap is completely closed without slack.

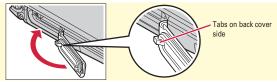

Install the back cover as described below.

#### <Installing the back cover>

Align 8 tabs of the back cover with concaves of FOMA terminal. While pressing the back cover in the direction of ① so that there is no gap between FOMA terminal and back cover, slide the back cover in the direction of ② to install, then slide the back cover lever in the direction of ③ to lock.

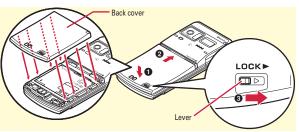

\* Make sure that the back cover is completely closed without slack. Slide the back cover in the direction of the arrow shown on the lever, and then make sure the cover is securely locked before using.

- Securely lock the back cover and firmly close the external connection jack cap. Even a fine obstacle (one hair, one grain of sand, tiny fiber, etc.) put between contact surfaces may allow water to enter.
- Do not poke the microphone, earpiece or speaker with a swab or sharp object.
- Do not let FOMA terminal fall. It may become scratched causing the waterproof/dustproof performance to degrade.
- The external connection jack cap and the rubber packing of the rear side of the back cover play an important role for keeping waterproofness/dustproofness. Do not deform by twisting the back cover or peel off or damage the rubber packing. Also, prevent dust from adhering to it.
- To keep FOMA terminal waterproofness/dustproofness, replacement of parts is required every 2 years regardless of whether FOMA terminal appears normal or abnormal. DOCOMO replaces the parts as a chargeable service. Bring FOMA terminal to a sales outlet such as a DOCOMO-specified repair office.

#### Important precautions

Do not perform actions shown in the illustrations below.

<Example>



Using Soap/Detergent/ Bath power



Applying strong water flow



Washing with brush/sponge



Soaking in ocean water



Machine-washing



Using in hot spring

#### Observe the following precautions to use FOMA terminal properly.

- Accessories and optional devices are not waterproof/dustproof.
   When watching 1Seg etc. with FOMA terminal installed in the included desktop holder, do not use it in a bathroom, shower room, kitchen or lavatory even if it is not connected to the AC adapter.
- Do not apply water flow stronger than allowed (⇒P17) (e.g., such water flow that gives you pain when applied to your skin directly from a faucet or shower). F-02C provides IPX5 waterproof performances. However, it causes malfunction.
- If FOMA terminal gets wet with salt water, sea water, refreshing beverage or mud or soil adhered, wash it immediately. If they dry out, it is hard to remove the dirt and it may cause damage or malfunction.
- Do not put FOMA terminal in hot water, use it in a sauna or apply hot airflow (from a hair dryer etc.) to it.
- Do not move in water or slam the terminal against the surface of water with FOMA terminal opened.
- If you put the terminal in tap water or in water of swimming pool, be sure to have it within 30 minutes.
- When you use the terminal in swimming pool, obey rules of the facility.
- · FOMA terminal does not float on water.
- Do not leave water on FOMA terminal. May short-circuit the power jacks, or in a cold region, water may freeze causing malfunction.
- Do not leave water on the microphone, earpiece or speaker. Such water may interfere with talking.
- If the back cover is damaged, replace it. Water may enter inside from a damaged section causing troubles such as electric shocks or corrosion of the battery.
- Do not leave water on the temperature/humidity sensor. Measuring temperature and humidity may not be correct.

- If FOMA terminal gets wet with water or other liquids with the
  external connection jack cap or the back cover opened, the liquid
  may get inside the terminal causing electric shocks or malfunction.
   Stop using FOMA terminal, turn the power OFF, remove the battery
  pack and contact a DOCOMO-specified repair office.
- If the external connection jack cap or the rubber gasket on the rear side of the back cover is damaged or deformed, replace it at DOCOMO-specified repair office.
- DOCOMO does not guarantee actual operations under all states.

  Malfunctions deemed to be caused by inappropriate operation by the customer are not covered by the warranty.

## **Washing FOMA terminal**

With pressing and holding the external connection jack cap not to open, wash the terminal in tap water without rubbing hard.



Do not apply water flow stronger than allowed (\$\Rightarrow\$P17) (e.g., such water flow that gives you pain when applied to your skin directly from a faucet or shower).

- In locked state with the back cover attached, with pressing and holding the external connection jack cap not to open, wash the terminal in tap water in room temperature without rubbing hard.
- Do not use brush, sponge, soap, detergent, etc.
- If mud or soil is adhered to the terminal, do not open or close the terminal. Eliminate the dirt first by shaking several times in tap water of wash-basin and then wash the terminal with running water.
- After washing, wipe the surface with dry cloth well, drain water by the following procedure and let the terminal dry naturally.

## **Draining water from FOMA terminal**

When FOMA terminal is wet, water may flow out after wiping it off; drain the water in the following steps.


Wipe moisture on FOMA terminal surface off with dry, clean cloth etc.



② Shake FOMA terminal approximately 20 times, firmly holding its hinge section, until there is no more water splattering.



③ To drain water in the microphone, earpiece, speaker, gap between keys, hinge section, charging jack, etc., press FOMA terminal into dry, clean cloth etc. lightly and wipe it off.

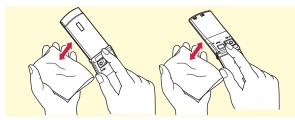

- Wipe off water drained from FOMA terminal with dry, clean cloth etc., and dry naturally.
  - Water, if any, remaining in FOMA terminal may ooze up after wiping off.
  - Do not wipe off water remaining in gaps directly with a cotton swab etc.

#### Charging

#### Check the following before and after charging.

- Check if FOMA terminal is not wet. Never try to charge the battery pack when FOMA terminal is wet.
- Accessories and optional devices are not waterproof/dustproof.
- When charging the battery when or after FOMA terminal is wet, adequately drain it and wipe off water with a dry, clean cloth etc., before connecting the accessory desktop holder or opening the external connection jack cap.
- When the external connection jack cap is opened for charging, close the cap firmly after charging. It is recommended to use the desktop holder for charging to prevent water from seeping inside from the external connection jack.
- Do not use the AC adapter or desktop holder in a bathroom, shower room, kitchen, lavatory or other highly humid area. May cause fire or electric shock.
- Do not touch the AC adapter or desktop holder with wet hands. May cause electric shock.


#### **Before Using**

# **Attaching UIM/battery pack**

After turning power OFF, close FOMA terminal and hold it in your hand so that you can properly attach UIM/battery pack.


#### Removing back cover

Slide the lever in the direction ① to unlock, slide pressing the back cover with your thumb (when it is hard to slide the back cover, holding the FOMA terminal with your both hands and pressing the back cover with your both thumbs) in the direction ② by approximately 2 mm to remove it.

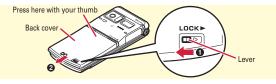

#### ♣ Attaching UIM

Pull the tab with your nail and pull out the tray until it clicks (1). Hold UIM with the IC side down, align the corner cut with the tray (2) and push into the tray until it stops (3).

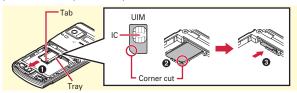


#### Point

 UIM (blue) is not available for the FOMA terminal. If you have the UIM (blue), bring it to a docomo Shop to replace.


#### Installing battery pack

With the label side of the battery pack upward, align convex parts of the battery pack with the concave parts of the FOMA terminal and slide the battery pack in the direction ①, press the battery pack in the direction ② to set it in.

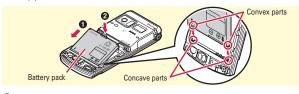

## ♣ Installing back cover

Place the 8 tabs of back cover to the notches, press back cover in the direction of 10 to avoid forming any clearance between FOMA terminal and back cover, then slide it in the direction of 20 to install it. Finally, slide the lever in the direction of 30 to lock.

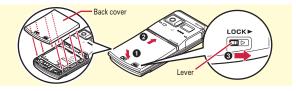

#### Point

- Firmly attach the back cover and lock it with the lever to avoid water or dust ingress.
- The rubber packing of the rear side of the back cover play an important role for keeping waterproofness/dustproofness. Do not deform by twisting the back cover or peel off or damage the rubber packing. Also, prevent dust from adhering to it.


## **Before Using**

# Charging

The battery pack does not have a full charge at time of purchase. Use AC adapter for FOMA terminal to charge the battery before using FOMA terminal.

## **Charging using desktop holder**


- Insert the connector of AC adapter horizontally to the accessory desktop holder, with the arrows mark side upward
- Unfold the AC adapter's power plug and insert it into a 100V AC outlet
- 3 With FOMA terminal closed, insert it into the desktop holder
  - \* Check that the charging light turns on.

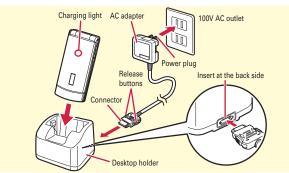

4 After charging is completed, remove FOMA terminal from the desktop holder

## **Charging using AC adapter**

- Open jack cap (♠) of FOMA terminal, hold the connector horizontally with the arrows side upward and insert it to the jack (♠)
- 2 Unfold the power plug and insert it into a 100V AC outlet
  - \* Check that the charging light turns on.

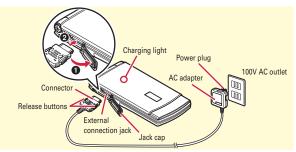

- 3 When charging is over, pull out the power plug from the outlet, and pull out from FOMA terminal horizontally while pressing the release buttons on both sides of the connector
- Operations for charging

When charging starts, a charge start alert sounds. While charging, the charging light turns on and the battery icon on the display blinks. When charging is over, a charge completion alert sounds.

#### **Before Using**

## **Turning power ON - Configuring default setting**

Initial setting is an operation when FOMA terminal is turned ON for the first time.

1 (2 sec. or more)
The screen shown to the right appears.

2 Set required items ▶ [5]
[Complete]

Always set Change security code and Request permit/deny. If you exit without setting, Initial setting screen reappears when the power is turned ON the next time.



On a confirmation screen of software update function,

The stand-by display appears. And then Machi-chara asks a name (user name). Press • twice to enter an user name.

#### Point

- If no operation is performed, the display light is automatically turned off according to the settings in Light time-out or eco mode setting. The display light turns on again if there is any operation or incoming call.
- The battery usage state is automatically recorded while using the FOMA terminal. The record is used only for repair diagnosis.

Turning power off: (2 sec. or more)
Changing the initial setting: MENU 892

Changing screen display to English: MENU ▶ 8 4 4 ▶ Select "English"

## **Before Using**

# **Checking Profile**

Check a model name or own phone number.

For details of checking/changing a mail address, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

MENU ► 0 Profile

The screen shown to the right appears.



<User information screen>

Point

Editing the profile : On User information screen, 

Authenticate ➤ Set required items ➤ 

\*\*Total Control of the Control of t


Checking a phone number during a call : MULTI ▶ 0

#### **Screen Explanation**

# Viewing display

The current state can be checked by the icon appearing on the screen. Major icons are as follows.

■Top of the display
Battery level (Battery icon)

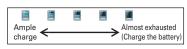

#### Signal strength (Antenna icon)



**52Lf**: Self mode ON

: In data transfer mode

: Connecting to i-mode

: Infrared communication in operation

3: Bluetooth ON

‡: The total calls cost exceeds the limit

: Communication using handsfreecompatible device in progress

: Handsfree ON

: Femtocell available

🔁 : eco mode ON

: Positioning with GPS

📻 : Location request setting

🙀 : Unread Area Mail exists

: Arrival i-concier information exists

: Unreceived i-mode mail exists in imode Center : A phonebook entry, memo or schedule has secret attribute

ี : Displaying SSL/TLS page etc.

: In-area auto-send mail exists

: Music&Video Channel program obtaining reservation exists

🛜 : High-pitched alarm is "ON"

⊕: Kid-safe mode ON

Conting i-αppli operation

» : i-αppli call exists

: AutoKeyLock ON

: Alarm is set

: 1Seg watching/recording reserved or the alarm of Memo set

: Inside OFFICEED area

#### ■Bottom of the display



Arrival information icons (Starting from the left, missed call, recorded message, message of voice mail service, unread message, unread ToruCa, i-appli call)

😲 : Manner mode ON

: Call alert volume OFF

**!!!** : Vibration mode for voice call ON

← : In Public mode (Drive mode)

奛 : Manner support ON

■ : Record message setting ON

🦺 : Keypad dial lock ON

※ : GPS Request failed♣ : Personal data lock ON

: Loading UIM

🚟: IC card lock ON

: Available multi-cursor key

3: Recording 1Seg in the FOMA terminal

🛴 : i-αppli Auto start failed

: microSD card installed during Communication mode

: Connected to external device using USB cable

🏃 : Pedometer/ACT monitor is set

: Software update rewrite notice

: Auto-update of latest pattern definition failure

#### **Screen Explanation**

# Viewing sub-display and light

Even when the FOMA terminal is closed, the icons in the subdisplay and light provide information. When no operation is performed for a certain period of time, the sub-display light is turned off, but it turns on again when you press either side key.

#### **Sub-display**

#### Switching views

Each time you press  $\blacksquare$ , the view switches in the order of icon and clock  $\Rightarrow$  date and clock  $\Rightarrow$  big clock. When "Use" is set to Set Pedometer/Activity monitor, each time you press  $\blacksquare$ , the view switches in the order of steps  $\Rightarrow$  activity  $\Rightarrow$  clock.

#### Arrival information

When a missed call, recorded message, unread message, or voice message of Voice Mail service, etc. exists, press ▼ with clock displayed to display the number of calls or messages, and then press ▲ to scroll reception date/time and information about the senders.

#### Charging light/Indicator light

The light turns on or blinks for charging or missed call notification, or according to the settings of Light alert (⇒P33), etc.

#### Information

• The light on the sub-display turns on just by holding and tilting the FOMA terminal. 【 @ 背面自動点灯設定 (Auto light on)】

#### **Screen Explanation**

## Quick voice activation

When you do not know the desired function menu or you want to activate the function quickly, call up the function from the standby display by voice sound. (In Japanese only)

## 1 (1 sec. or more)

For the first activation, select "利用する (Use)" on the guidance screen or press <u>\*</u> From the second time, "それではどうぞ★★音声受付中★★ (Please go ahead ★★ voice input available ★★)" is displayed.

# 2 Speak a function name toward the microphone within 10 seconds.

When a message asking for re-entry appears, press 
and speak again.

When the voice input is recognized, the function activates. If the function is not identified, the keyword list of 使いかたガイド (Guide) appears.

#### Control

- · Speak clearly with natural conversation speed.
- Depending on the environment or way of speaking, recognition result may vary.
- You can speak function name (電卓 (Calculator), ワンセグ (1Seg), etc.), keyword (計算 (calculation), テレビ (TV), アドレス交換 (address exchange), etc.) or combination of keywords (写真 見る (view photo), メール 問合せ (mail check), スケジュール 4月25日 (schedule 25th April), ○○さん\*にメール (mail to Mr. ○○), etc.) to activate the function.
  - \* Name registered to the phonebook
- When Machi-chara is not set or Machi-chara for voice output is set, a
  question can be read. In Step 2, pressing MENU switches ON (speaker)/ON
  (earpiece)/OFF.

## **Screen Explanation**

# Menu operation

On the stand-by display, press MENU and then perform the functions from the menu. You can select a menu item with shortcut operations, which use the keypad, Menulti-cursor operation, which uses the multi-cursor key to move the cursor.

<Example> Selecting "Calculator"

#### **Shortcut operations**

1 MENU 6 2

#### Multi-cursor key operations

Menu ► Move the cursor to "6 Tool" ► ● [OK] ► Move the cursor to "2 Calculator" ► ● [OK]


#### Point

- Even when a function is running, you can perform the same operation if "Submenu" is displayed on the guide area.
- To return to the previous screen, press CLR. To return to the stand-by display, press .

#### **Guide area and key operation**

Operations that can be performed by pressing MENU,  $\square$ ,  $\bullet$ ,  $\bullet$  and  $\bullet$  are displayed in the guide area.

in the guide area corresponds to of multicursor key.

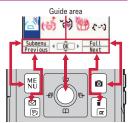

## **Switching menu screens**

You can switch among "Kisekae menu", the design of which can be changed using Kisekae Tool (⇒P34), "Basic menu", which has the fixed menu numbers, and "Shortcut menu", to which menu items can be saved freely.

A Kisekae menu matched with the color of the FOMA terminal is set by default.



#### Point --

- In some types of Kisekae menus, the menu structure is changed according to usage frequency, or the number assigned to menu item (item number) may not be applicable.
- The menu that appears when MENU is pressed on the stand-by display can be changed in Select startup menu. ⇒P32

## Using icon on the stand-by display

On the stand-by display with arrival information or i-concier information displayed, or with Info/calendar layout set, press to change the display to the focus mode that allows you to quickly display the corresponding information.



Press CLR or with the cursor on the icon to cancel the focus mode.

#### **Screen Explanation**

# 使いかたガイド (Guide)

You can check overviews and operations of functions, and troubleshooting. (In Japanese only)

- I MENU ▶ 6 Tool ▶ # Guide ▶ Select a search method
  - 目次 (Contents): Search from a list of functions.
  - 索引 (Index): Search from a list of words sorted according to Japanese syllabary.
  - フリーワード検索 (Free word search): Enter a keyword to search for.
  - ブックマーク (Bookmark) : Search from a list of registered bookmarks.



<Guide screen>

- 困ったときには (Troubleshooting): Search from lists of troubles or error messages.
- その他のご案内 (More information): Access to guide page introducing useful site.

#### Point

- On the description screen, select "この機能を使う (Use this function)" to perform a function.
- Selecting a link item in "関連機能 (Related functions)" or "→コチラ (See more)" displays a corresponding description screen.
- Terms indicated with [@] in this manual are index terms in "Guide".

#### 🎢 Information

• You can also access the free word search 【@クイック検索 (Quick search)】.

# Entering characters

## Difference between key operation and touch operation

	①5-touch	②2-touch
Outline	Multiple characters are assigned to one key. Press to switch the character and enter it.	A character is entered by pressing a combination of 2 keys.
Character entry (in Hiragana /Kanji mode)	"5": 9 (5 times) "0": 4 (3 times) > ** "I\$": 6 (5 times) > ** (twice) "b": 0 (3 times) "\$\text{2} (Twice) > **	"5": 9 5 "0": 8 0 4 3 "\$": 8 0 6 5 0 5 "h": 0 3 "\$": 2 2 0 4
Operations during character	Return to the previous character. (Example : $\vec{b} \Rightarrow \vec{\lambda}$ $\Rightarrow \vec{j} \Rightarrow \cdots$ )	-
entry	CLR : Delete characters	

## **Switching input modes**

On the character entry screen, press [ ItextMode] to display Switch input mode palette and switch selecting "Hiragana/Kanji", "Katakana", "Alphanumeric", "Number", etc.


## **Text input**

Set a text input method or operation during text entry.

MENU ▶ 8 Setting ▶ 4 Text display/input ▶ 3 Text input ▶ 1 Text input method ▶ Set required items ▶
Set [Set]

## **Entering pictograms/smileys**

#### **Entering pictograms**

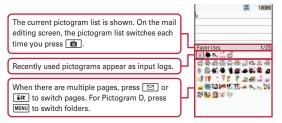

Select a pictogram

Press **CLR** to close the pictogram list.

## Entering smiley on the mail message editing screen

On the character entry screen, MENU [Submenu] ▶ 4
Quote phrase/data ▶ 9 Pict/Symbol/Smiley ▶ 3
Smiley ▶ Select a smiley type ▶ Select a smiley
Entering smiley on the other character entry screen: MENU ▶

5 3 ▶ Select a smiley type ▶ Select a smiley

#### 🎢 Information

- You can save often-used sentences and words. 【@文字入力 (Character Entry) ▷ 定型文 | 単語登録 (Common phrases/Store word)】
   You can copy, cut and paste entered characters. 【@文字入力
- ・You can copy, cut and paste entered characters. 【⑩文字入り (Character Entry) ▷ コピー | 切り取り | 貼り付け (Copy/Cut/Paste)】

## **Sound/Screen Setting**

# **Sound settings**

You can set tones, such as changing a ring alert, adjusting the volume, or muting the sound emitted from FOMA terminal.

#### Ring tone

You can set your favorite melody for a ring alert or alarm.

#### <Example> Setting ring tone

- MENU ▶ 8 Setting ▶ 2 Sound/
  Vibration/Manner ▶ 1 Ring tone
  In addition to Call ring tone, you can set
  Videophone, Mail ring tone, MessageR/F
  ring tone, SMS ring alert.
- 2 1 Call ring tone ▶ 1 Call ring tone ▶ Set required items ▶ ⑤ [Set]



<Ring tone setting screen>

#### Point

- . When Call ring tone is set, the setting applies to Incoming call.
- · Some music or moving pictures/i-motion may not be set to the ring alert.

## **Adjust volume**

You can set the volume of a ring tone, alarm sound, etc.

#### <Example> Setting Call alert volume

II MENU ▶ 8 Setting ▶ 2 Sound/ Vibration/Manner ▶ 3 Adjust volume

In addition to the volume of the ring tone, you can set the volume of the alerts such as mail ring alert, message ring alert and iconcier ring alert.

2 1 Alert/Call volume ▶ 1 Call alert volume ▶ 2 or ▲ ▼ ▶ ● [Select]
The volume can be selected from "Silent",
"Level 1" - "Level 10" or "Steptone".



<Volume setting screen>

#### Point

 w appears on the stand-by display when "Silent" is set. appears when a vibrator for incoming call is also set.

#### Information

- You can set call ring alert or image display, call vibrator operation pattern, light alert and keypad illumination. 【@電話着信設定 (Incoming call)】【@テレビ電話着信設定 (Videophone receiving)】
- You can set incoming call or alarm to be notified with vibration, instead of sound. 【@バイブレータ設定 (Vibration mode)】

#### Silent mode

This function mutes the sound emitted from the FOMA terminal such as ring alert, Keypad sound, Open/Close sound, Alarm sound, confirmation sound for reading a code with Bar code reader, and notifies the incoming call with vibrator (vibration).

1 ct (1 sec. or more)

appears on the stand-by display in Silent mode.

Canceling Silent mode: # (1 sec. or more)

#### Point

- · Shutter sound is emitted even in Silent mode.
- Also, microphone is sensitized in Silent mode, and you can call in a small voice.

## Muting the keypad sound

You can mute the sound emitted when pressing keys.

MENU ▶ 8 Setting ▶ 2 Sound/
Vibration/Manner ▶ 2 Other sounds
▶ 4 System sound

In addition to Keypad sound, you can mute Open/Close sound or change Shutter sound.

2 1 Keypad sound ▶ 5 OFF

A message indicating the keypad sound is turned off appears, and the screen shown to the right appears.

To change the tone, select "1 Key sound 1" - "4 Sol-fa".



<System sound setting screen>

## 🥜 Information

- You can change Silent mode operations. 【@マナーモード (Silent mode) ▷マナーモード選択 (Silent mode)】
- You can set the terminal to sense your boarding vehicle or to detect place and prompt setting of Silent mode or auto-reply of mails. 【@マナーサポート設定 (Manner support)】

#### **Sound/Screen Setting**

# **Setting display**

## Stand-by display setting

The default stand-by display is set according to Kisekae Tool, but you can set stand-by display image, clock display, battery icon, etc. individually.

<Example> Setting an image

MENU ▶ 8 Setting ▶ 1 Screen/Display ▶
 2 Stand-by display setting ▶ 1 Image/i-αppli ▶
 1 Set image

When Kisekae Tool is set, the confirmation screen for canceling appears.

#### **Select startup menu**

Set the menu displayed when pressing MENU on the stand-by display.

■ MENU ■ 8 Setting ■ 1 Screen/Display ■ 6 Menu preference ■ 1 Select startup menu ■ Select a menu type

## **Font size**

You can change the font size for i-mode site, the mail creation screen, etc.

<Example> Changing font size collectively

MENU ▶ 8 Setting ▶ 4 Text display/input ▶ 1 Font size ▶ 1 All ▶ Select font size
For some font sizes selected, a confirmation screen for

changing the MENU font size appears. When pressing "Yes", Kisekae Tool applicable to the selected font size can be selected.

#### Point

• When you change the font size collectively but items do not support the font size, the closest font size can be set.

## **Privacy view**

This function allows the display to be less-visible to the people around you. You can start/cancel on the screen other than the stand-by display.

MULTI (1 sec. or more)

Canceling Privacy view: MULTI (1 sec. or more)

#### Information

- You can set to display/not to display the clock or temperature/humidity on the stand-by display or change the design. 【 @ 時計表示設定 (Clock format)】
   【 @ 温度・湿度センサー設定 (TempHmd sensor Sttg)】
- The stand-by display can be divided into several areas and you can set to display arrival information, schedule, calendar, steps/activity information in each area. 【 ②待受画面設定 (Stand-by display setting) トカレンダー/特受カスタマイズ (Info/calendar layout)】
- You can set a visibility level in Privacy view. 【@プライバシービュー (Privacy view) ▷ レベル設定 (Privacy view level)】

## **Setting Machi-chara**

You can set a character to be displayed on the stand-by display.

MENU ▶ 8 Setting ▶ 1 Screen/Display ▶ 5 Machichara setting ▶ 1 Display setting ▶ Set required items ▶ 1 [Set]

#### Point

- Machi-chara does not appear when i-αppli stand-by display is set or while playing moving picture/i-motion set for the stand-by display.
- Confirmation messages for setting can be expressed in the way of Machichara speaking or Machi-chara with friendly message which displays messages according to the state of the terminal or contents of entered text is also available.
  - "リーフロボット", "バカボンのパパ" and "ドロンジョ様" stored by default are the friendly message support Machi-chara.
- ©赤塚不二夫/ぴえろ (Fujio Akatsuka/Pierrot)
- ©Tatsunoko,YTV 2008 designed by DEVILROBOTS

## Display light time

You can set the duration, for which the display light is turned on. <Example> Setting "Normal use"

- I MENU ▶ 8 Setting ▶ 3 Backlight/Illumination ▶ 1
  Display light ▶ 1 Display light time
- 2 1 Normal use ► 1 0 sec 7 Always on

#### Point

 When setting to "Phone setting" by selecting other than "Normal use" in Step 2, the lighting time set in "Normal use" applies.

## 🥕 Information

You can set time-out of the display light or adjust the brightness of the display backlight. 【@照明設定 (Display light) ▷画面オフ時間設定 | 明るさ調整 (Light time-out | Brightness)】

## **Sound/Screen Setting**

# **Light setting**

## **Light alert**

You can set the light operation that is turned on for incoming call or during a call.

<Example> Setting illumination for incoming call/mail

Illumination ▶ 2 Light alert ▶ 2
Custom settings

You can set the illumination other than for incoming call/mail. Collective setting is also available.

2 1 Light alert ▶ Set required items ▶ ⑤ [Set]



<Custom setting screen>

## Indicator light

You are notified of missed call or unread mail (i-mode mail, SMS) by the charging light when the FOMA terminal is closed.

MENU ▶ 8 Setting ▶ 1 Screen/Display ▶ 4 Each display setting ▶ 4 Info display & light ▶ 2 Indicator light ▶ 1 ON or 2 OFF

#### Point

 The charging light blinks at approximately 10 seconds interval. However, when you close the FOMA terminal without checking the arrival information, the light blinks at approximately 30 minutes interval.

#### 🧨 Information

 You can set the keypad illumination to turn on when receiving call/mail, sending mail, sending/receiving data, etc. 【@キーイルミネーション設定 (KeypadILLUM settings)】

#### **Sound/Screen Setting**

## Kisekae Tool

You can set the stand-by display, menu, incoming/outgoing call screens, etc. at once with a predefined combination. A Kisekae Tool matched with the color of the FOMA terminal is set by default. <Example> Setting preinstalled Kisekae Tool

1 MENU ► 5 Data Box ► 7 Kisekae
Tool ► 3 Preinstall
The screen shown to the right appears.
To display details of the Kisekae Tool

To display details of the Kisekae Tool, select a Kisekae Tool. To display the image of coordinate, select "Preview".



<KisekaeTool list screen>

#### Information

- When you set 【@スペシャルモード (Special mode)】, a new Kisekae Tool is added.
- You can change settings of Silent mode or Auto-reply by time or place, or change screen design or Privacy mode setting at the specified time.
   【⑩ライフスタイル設定 (Timed theme settings)】

#### Sound/Screen Setting

## eco mode

Save the battery power by adjusting the display backlight or sound temporarily.

■ MENU ► 8 Setting ► 7 Battery ► 1 eco mode setting ► 1 eco mode ON/OFF

Each time you select the option, ON/OFF switches. When ON is set, 
☐ appears in the display.

## eco mode options

You can set operations when eco mode is ON.

MENU ▶ 8 Setting ▶ 7 Battery ▶ 1 eco mode setting
 ▶ 2 eco mode options ▶ 1 Std. saving or 2 Full saving

**Std. saving**: Change settings of System sound, Light alert, Indicator light, Light time-out, brightness of screen, 1Seg eco mode, etc. to save the battery power.

Full saving: With Std. saving applied, restrict the usage of motion sensor, TempHmd sensor, Immobile sensor of Lock when immobile, AUTO-GPS, Pedometer/ACT monitor, etc. to save the battery power.

### **Lock/Security**

# Security codes of FOMA terminal

Security codes vary by functions. Security code protects personal information. Be careful about handling the security code.

#### ...

- To set a security code, avoid imaginable numbers such as "birth date", "a part of phone number", "street address or room number", "1111" or "1234". Maintain a separate record not to forget the numbers.
- Be careful never to reveal your security code to others. If a security code is known to and misused by others, DOCOMO assumes no responsibility for damages resulted from it.
- If you forget your security codes, you need to bring a document (a drivers license etc.) to identify your subscription, the FOMA terminal and the UIM to a docomo Shop.

  For details, contact "General Inquiries" on the lest page of this.

  The details contact "General Inquiries" on the lest page of this.

  The details contact "General Inquiries" on the lest page of this contact.

  The details are the lest page of this contact "General Inquiries" on the lest page of this contact.

For details, contact "General Inquiries" on the last page of this manual.

# Terminal security code (Default: 0000)

The code is the security code to be used when changing settings or deleting all the items at once. To change the code, perform the following operation.

- II MENU ▶ 8 Setting ▶ 6 Lock/Security ▶ 3 Code & Fingerprint ▶ 1 Change security code ▶ Authenticate
- 2 Enter a new terminal security code ▶ Enter the new terminal security code in New terminal security codecheck field ▶ ⑤ [Save]

#### Poin

 If a wrong terminal security code is entered 5 times consecutively, the power is turned OFF.

#### PIN1/PIN2 code (At subscription: 0000)

You can set 2 security codes to the UIM: PIN1 code and PIN2 code. The PIN1 code is a security code to be used when installing the UIM or turning ON the FOMA terminal.

The PIN2 code is the security code to be used when requesting the issuance of a user certificate, resetting Total calls cost or resetting the total call costs.

To change either code, perform the following operation. When changing PIN1 code, set PIN1 entry ON/OFF to "ON".

- MENU 8 Setting 6 Lock/Security 9 UIM setting
   1 Change PIN1 code or 2 Change PIN2 code ■
  Authenticate
- Enter the current PIN code ▶ Enter a new PIN code in New PIN code field and New PIN code - check field ▶
  Save

#### Poin

- To display the PIN1 code entry screen when turning power on, MENU > 8 6 9 3 1, and then set PIN1 entry ON/OFF to "ON".
- Even if PIN2 code is locked by entering incorrect PIN2 code 3 times consecutively, making/receiving calls or sending/receiving mail is available; if PIN code is locked by entering incorrect PIN code 3 times consecutively, these operations are unavailable.
- If the PIN1 code/PIN2 code is locked by entering incorrectly 3 times consecutively, enter the PUK code given at subscription. If the UIM is locked by entering the PUK code incorrectly 10 times consecutively, contact docomo Shop.
- The PUK code is written on a subscription form (copy for user) handed at subscription in a docomo Shop. For users subscribed in other than docomo Shop, bring a document (a drivers license etc.) to identify your subscription and the UIM to a docomo Shop, or contact "General Inquiries" on the last page of this manual.

#### Network security code (At subscription : Set any code)

Network security code is required when DOCOMO identifies the subscriber at docomo Shop, docomo Information Center or "お客様サポート (user support)" or when you subscribe Network Services. To change the code, "iMenu" in i-mode site  $\Rightarrow$  "お客様サポート (User support)"  $\Rightarrow$  "各種設定 (確認・変更・利用) (Settings (Check/Change/Use))"  $\Rightarrow$  "ネットワーク暗証番号変更 (Change Network security code)" (in Japanese only).

#### i-mode password (At subscription : 0000)

i-mode password is required to save to/delete My Menu, use Message Service, subscribe/cancel i-mode charged services, etc. To change the password, "iMenu" in i-mode site  $\Rightarrow$ "English"  $\Rightarrow$  "Options"  $\Rightarrow$  "Change i-mode Password".

#### microSD password

You can set a password to the microSD card. If you attach the microSD card with password to the other mobile phone to use, the mobile phone requires password authentication. On a PC or mobile phone without password setting function, you cannot use the data in the microSD card or format it.

However, some microSD cards may not support this function.



- You can restrict some functions to let your children use the FOMA terminal.【@親子モード (Kid-safe mode)】
- You can register authentication information such as user names and passwords. 【@パスワードマネージャー (Password manager)】

### **Lock/Security**

# Fingerprint authentication

Instead of entering the terminal security code, you can authenticate yourself by sliding your fingertip on the fingerprint sensor. Once your fingerprint is registered, the fingerprint authentication screen appears when authentication is required. Up to 10 fingerprints can be registered for authentication.

- MENU 8 Setting 6 Lock/Security
   3 Code & Fingerprint 2
  Register fingerprint Authenticate
- 2 "OK" Following the onscreen message, place your finger against the fingerprint sensor and slide.
- 3 Enter a register name (up to 10 twobyte (20 one-byte) characters) ▶ ⑤ [Save]



<Fingerprint registration screen>

#### Point

 To switch to the terminal security code entry screen, press MENU or press dial key on the fingerprint authentication screen.

#### 🏂 Information

• You can set FOMA terminal so that the terminal can authenticate users only with fingerprints. 【@指紋のみ認証設定 (Fingerprint access)】 If authentication is disabled for any registered fingers due to your finger conditions, failure of the fingerprint sensor, etc. you need to bring a document (such as a drivers license) for identifying that you are a subscriber, the FOMA terminal and the UIM to a docomo Shop.

#### Lock/Security

# Various lock functions

Use various lock functions for your purpose.

#### All lock

Menu operation is unavailable. You can use only a part of operations such as answering calls, receiving mails, turning power ON/OFF.

Activate : MENU ▶ 8 6 1 2 ▶ Authenticate

Deactivate: Enter the terminal security code (When the fingerprint authentication is set, MENU ▶ Authenticate)

#### Self mode

All functions requiring communication are unavailable.

Activate/Deactivate: MENU | 8 9 1 | 1 or 2 | "Yes"

# Personal data lock

Besides personal information such as phonebook entries, mails or schedule cannot be displayed and menu operations can be restricted.

Activate/Deactivate: MENU | 8 6 1 3 | Authenticate | 1 or 2

# Keypad dial lock

Calls can be made only by using phonebook.

Activate/Deactivate: MENU > 8 6 1 4 > Authenticate > 1 or 2

# Side key hold

Side keys operations with the FOMA terminal closed are unavailable to avoid erroneous operations for carrying the terminal.

Activate/Deactivate: MENU (1 sec. or more)

## AutoKeyLock

#### Lock on close

Lock key operations other than by side keys when the FOMA terminal is closed.

Activate: MENU ▶ 8 6 1 1 1 ▶ Authenticate ▶ Set required items ▶ 16

**Deactivate temporarily**: Open the FOMA terminal and authenticate

#### Lock when immobile

When no operations are performed for the specified time, key operations are locked.

However, when the FOMA terminal is closed, side key operation is available.

Activate: MENU ▶86112 ▶ Authenticate ▶ Set required items ▶ 16

**Deactivate temporarily**: MENU ▶ Authenticate

#### IC card lock

Osaifu-Keitai, obtainment of ToruCa from IC card reader, iC transmission, etc are unavailable.

Activate : (1 sec. or more) ► "Yes"

Deactivate : (1 sec. or more) ▶ Authenticate

#### **Omakase Lock**

The personal data of phonebook etc. or IC card function of Osaifu-Keitai is locked only by contacting DOCOMO in case FOMA terminal is misplaced etc.

#### ■ Setting/Canceling Omakase Lock

(In Japanese only)

- Unavailable from part of IP phones.
- Omakase Lock can be set/canceled from My docomo site using a PC etc. (in Japanese only)
- For details, refer to "Mobile Phone User's Guide [Basic Usage]".

## **Data Security Service**

You can backup the terminal data in the FOMA terminal to DOCOMO Data Security and restore the data in case of a loss or accidentally deleting data.

- Note that when you use Data Security Service overseas, a packet communication charge will be higher than the one in Japan. (imode packet flat-rate service is not applied.)
- For details of Data Security Service, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- Data Security Service is a charged service requiring subscription (Subscription is required subscription of i-mode).



\*You can set authentication for using personal information or to hide specified phonebook entries, memos/schedules, incoming calls, sent/received mails, etc. 【@プライバシーモード (Privacy mode)】

# Lock/Security

# **Incoming call restriction**

There are some ways to restrict incoming calls.

# Specifying Accept/Reject call for each phone number

Set each phonebook, and then activate settings of Accept/Reject call (setting of Specified caller).

When using this function, it is recommended that you use both Caller ID request and Call rejection setting.

- Search phonebook ➤ Move the cursor to a phonebook entry to set ➤ MENU [Submenu] ➤ 3 Edit/ Settings ➤ 4 Advanced settings ➤ 3 Accept/Reject call ➤ Authenticate ➤ Select a phone number ➤ 1 Accept call 3 No setting
- 2 Following the operation above, on the stand-by display, MENU ▶ 7 TEL function ▶ 4 Dial/Receive call setting ▶ # Reject/Accept call ▶ 1 Specified caller ▶ Authenticate ▶ 1 Cancel settings 3 Accept call

# **Call rejection setting**

For each reason for hiding caller ID (Anonymous, Payphone, Unavailable), you can set a receiving operation.

1 MENU ▶ 7 TEL function ▶ 4 Dial/Receive call setting ▶ 9 Call rejection setting ▶ Authenticate ▶ 1 Anonymous - 3 Unavailable ▶ Set required items ▶ 1 [Set]

# Ring alert delay

To prevent prank calls such as one-ring phone scam or calls from anonymous callers, you can set FOMA terminal so that you will not immediately answer calls from the party not saved in phonebook.

MENU ▶ 7 TEL function ▶ 4 Dial/Receive call setting ▶ 6 Receive call detailed setting ▶ 3 Set mute ring time(sec.) ▶ Set required items ▶ ★ [Set]

### **Unregistered caller**

You can reject calls from phone numbers not saved in phonebook.

I MENU ▶ 7 TEL function ▶ 4 Dial/Receive call setting ▶
# Reject/Accept call ▶ 2 Unregistered caller ▶
Authenticate ▶ 1 ON or 2 OFF

### Lock/Security

# Resetting to default

#### Reset

You can restore functions in red characters on the menu list to the default settings. ⇒P83

II MENU ▶ 8 Setting ▶ 9 Other setting ▶ 4 Reset ▶
Authenticate ▶ Select an item to reset ▶ 1 [Reset]
▶ "Yes"

When you reset the basic settings, a confirmation screen for software update function appears. Press • to display the menu screen.

#### **Delete all data**

You can delete data saved in FOMA terminal, and restore the each function's settings to the default.

MENU ▶ 8 Setting ▶ 9 Other setting ▶ 3 Delete all data ▶ Authenticate ▶ "Yes"

All data is deleted while restarting. Do not turn power off until the stand-by display is displayed.

#### Point

• Even after all data is deleted, the data registered by default is not deleted.

#### Lock/Security

# Restricting usage by remote control

There are two services to restrict the functions of FOMA terminal by remote control.

#### Inquiries

# DOCOMO business website docomo Business Online

- From a PC http://www.docomo.biz/ (In Japanese only)
- \* May be unavailable for system maintenance.

#### ♣ Remote initialization

With subscription to use this function (Business mopera anshin manager), this service allows an administrator to request to initialize data (memory in phone/microSD card/UIM) in the target FOMA terminal.

#### ♣ Remote customization

With subscription to use this function (Business mopera anshin manager), this service allows an administrator to request to remotely restrict or set ON/OFF to functions (camera function, lock setting, etc.) in the target FOMA terminal.

#### Point

Check remote setting: MENU ▶ 8 9 6

#### 🎢 Information

• For details of Reset and Delete all data, refer to "使いかたガイド (Guide)" installed in FOMA terminal (in Japanese only).

# Making a call/videophone call

To specify a phone number to call, you can directly enter a phone number, or select it from Redial/Received calls, Recorded messages, voice memo while talking or phonebook.

# **Entering a phone number**

Always enter area code even when calling from the same city.

Enter a phone number (Up to 80 digits) calls) or (videophone calls) When ending the call.

# Using redial/received calls

Up to each 30 items are displayed in Redial and Received calls. When the maximum is exceeded, older logs are overwritten first.

(Redial) or 🔎 (Received calls)

> Icons in the list represent types of incoming/outgoing calls. Followings are major icons and their definitions.





<Received calls screen>

Received calls

12/24(Fr) 10:00 miles

12/23(Th)15:00 9mm

12/22 (We) 18:00 9

<Redial screen>

: Voice call / / i : Missed call/Unchecked missed call ■: Videophone call \( \overline{\overline recorded message\*

\* If recorded message is deleted, this icon changes to missed call icon.

Move the cursor to the party ▶ < calls)



To display the details of a party, move the cursor to the party, and then press .

• DOCOMO videophone specifications conform to "3G-324M, an international standard prepared by 3GPP". The connection with the videophones of different specifications cannot be established.

# Using phonebook

**□** Search phonebook

The phonebook list of the Show all names is displayed by default.

You can switch lines by or switch the previous/next pages by A.



<Phonebook search result screen>

Move the cursor to the party ▶ <a> </a> (voice calls) or **I I I I** (videophone calls)

To create an i-mode mail, move the cursor to a party, and then press .

• You can make calls using logs of mails, GPS, etc if phone numbers are saved in phonebook.

#### Information

• You can set the search method displayed when pressing 🖸 on the stand-by display. 【 @電話帳検索優先設定 (Default search setting)】

#### International calls

You can make international calls from Japan using WORLD CALL.

#### **♦ WORLD CALL**

"WORLD CALL" is the international call service available from DOCOMO mobile phones. You are subscribed to "WORLD CALL" at the time of subscription to the FOMA service (Unless you request not to subscribe to it).

- · No subscription or monthly charges apply.
- DOCOMO charges customers for "WORLD CALL" fee and monthly FOMA service call fee all together.
- For details of "WORLD CALL", contact "General Inquiries" on the last page of this manual.
- To use international call services except DOCOMO service, contact the carrier for details.
- For countries and overseas telecommunications carriers available, refer to "Mobile Phone User's Guide [International Services]" or DOCOMO International Services website.
- The image of the other party displayed on FOMA terminal may be distorted or connection may not be established depending on the other party's terminal connected through the international videophone line.

Enter "010-phone number without the leading 0 of Country code (City code)" ▶ ✓ (voice call) or (videophone call)

In some countries and areas such as Italy, "0" is required.

# **Caller ID notification** (At subscription : Notify)

You can notify your phone number (caller ID) to the other party's terminal when making a voice call.

MENU ▶ 7 TEL function ▶ 4 Dial/Receive call setting ▶ 3 Caller ID notification ▶ 2 Setting ▶ 1 ON

Select "2 OFF" if you do not want to notify.

#### Point

- Caller ID is your important personal information. Carefully consider whether you want to include caller ID information when making a call.
- If you hear an announcement of requesting caller ID when making a call, set Caller ID notification or add prefix "186" to the phone number to call again.

#### Information

- You can set whether to automatically convert an international call access code, or to add a country code for a call from overseas. Also, you can save/edit international call access codes and country codes. 【@国際ダイヤルアシスト (International dialing assist)】
- You can notify/hide your caller ID on the other party's terminal for each call.【@発信者番号通知/非通知 (Caller ID notification/Not notify) ▷ 186/184】
- You can set calling options each time you make a call. 【@発信オプション (Call option)】

# Receiving a call/videophone call

Basic operation for receiving incoming calls is described here.

#### Receive

You are notified of an incoming call with ring alert, light alert, etc. On the display, the phone number appears when caller ID is sent, and caller's name appears when phone number is saved in the phonebook. When caller ID is not sent ,the reason (Anonymous, Payphone or Unavailable) appears.

: Adjust the alert volume

▲ : Stop the ring alert and the vibrator

: On-hold

2 (voice/videophone calls) or (videophone calls)

3 When ending the call, 🗖

#### Point

- When you cannot answer an incoming call, ( The digit indicates the number of missed calls) appears on the stand-by display. The incoming calls are recorded as missed calls in Received calls.

# 🦯 Information

- You can set FOMA terminal so that you can answer an incoming voice call by pressing any key other than 
   【@エニーキーアンサー設定 (Any key answer)】
- There are some ways to restrict incoming calls by setting conditions. ⇒ P39
- You can answer a call by opening the FOMA terminal, 【@着信中才-プン応答 (Open and answer)】 or select to disconnect/hold the call by closing 【@通話中クローズ設定 (Close settings)】.

#### Call Telephone

# **Operation during a call**

You can use useful functions during a call.

#### On hold

A melody is played while on hold. For a videophone call, the videophone on-hold image is displayed on the phone of the other party and yourself.

■ During a call, ● [OnHold]

#### Poin

Canceling the voice call on hold: 
or
Canceling the videophone call on hold (send the image before on hold):
Canceling the videophone call on hold (send the camera image):
or
or

Canceling the videophone call on hold (send substitute image) :

# **Listening volume**

You can adjust listening volume during a call.

During a call, 
 or 
 or □

#### Point

• This setting applies to Listen volume in Adjust volume.

# 

• According to the volume of the other party or ambient noise, the other party's voice becomes easier to hear with 【@はっきりボイス (Voice clear)】, or the voice slows down with 【@ゆっくりボイス (Voice slowing)】.

Voice sound can be adjusted to be heard easily according to your action during Voice clear. 【@ぴったりボイス (Voice adjusting)】

# When you cannot answer a call

Use an appropriate function according to a situation or place where you cannot answer a call.

## **Record message**

When Record message is set to "ON", a greeting message is played and the caller can record message when you cannot answer the call.

- MENU ▶ 7 TEL function ▶ 2 Record message/Voice memo ▶ 4 Record message ▶ 1 ON
  - appears on the stand-by display.

#### Point

- You can record up to 4 voice/videophone calls in total, approximately 30 seconds for each call. When reaching the savable number, appears on the stand-by display and Record message does not work. Delete unnecessary recorded messages.
- Even when Record message is not set to "ON", you can activate it only once by pressing a for 1 second or more while receiving a call (Quick recorded message).
- Even when the greeting message is being played or a message is being recorded, you can answer a call by pressing <a href="#">✓</a>. For videophone call, <a href="#">▼</a>. For videophone call, <a href="#">▼</a> to send your own image and <a href="#">▼</a> to send the substitute image. In this case, the message before the call was answered cannot be recorded.

Setting a response time : MENU ▶ 7243 ► Enter time

Playing a recorded message : MENU ▶ 721 ► Select a message ▶ Select

Playing a recorded message : MENU ▶ 7 2 1 ▶ Select a message ▶ Select whether to delete

## **Public mode**

Public mode is an automatic answering service putting emphasis on manners in a highly public place or when driving a car.

#### Public mode (Drive mode)

When there is an incoming call, a guidance message is played to inform the other party of the reason that you cannot answer the call and request to call back, and then the call ends.

- 1 sec. or more)
  - appears on the stand-by display.

#### Point

 In Public mode (Drive mode), no receiving action is performed, and calls are recorded as Missed call.

Canceling: (1 sec. or more)

#### Public mode (Power OFF)

When there is an incoming call while turning off the power, a guidance message is played to inform the other party of the reason that you cannot answer the call and request to call back, and then the call ends.

1 Enter "\*25251" ▶ 7

Even when Public mode (Power OFF) is set, no indicators such as icons appear on the display.

#### Point

Canceling: Enter "\*25250" ▶ ✓

Checking the settings : Enter "\*25259" ▶ <a> </a>

## **Network Service**

You can use the DOCOMO network services below with FOMA terminal.

Service	Application	Monthly charge
Voice Mail Service	Required	Charged
Call Waiting Service	Required	Charged
Call Forwarding Service	Required	Free
Nuisance Call Blocking Service	Not required	Free
Caller ID Display Request Service	Not required	Free
<b>Dual Network Service</b>	Required	Charged
English guidance	Not required	Free
Multi Number	Required	Charged
2in1	Required	Charged
OFFICEED	Required	Charged
Public mode (Drive mode)	Not required	Free
Public mode (Power OFF)	Not required	Free
Melody Call	Required	Charged

- Network services are not available out of service area or where radio waves are hard to reach.
- For subscription and details of the services, contact "General Inquiries" on the last page of this manual.
- For details, refer to "Mobile Phone User's Guide [Network Services]".
- "OFFICEED" is a service requiring subscription. For details, refer to DOCOMO's business website (http://www.docomo.biz/html/ service/officeed/ (In Japanese only)).

# **Setting network service**

The operations for major network services are as follows.

Service	Operating procedure
Voice Mail Service	MENU ▶ 7 TEL function ▶ 0 Voice mail service ▶ Perform the following operation Activate : 1 ▶ "Yes" ▶ "Yes" ▶ Enter ring time  Deactivate : 3 ▶ "Yes"  Flay messages : 5 ▶ 1 or 2 ▶ "Yes" ▶ Follow the guidance to operate
Call Waiting Service	MENU ▶ 7 TEL function ▶ ★ Other network service ▶ 2 Call waiting ▶ Perform the following operation Activate : 1 ▶ "Yes" Deactivate : 2 ▶ "Yes"
Call Forwarding Service	MENU

#### Point

- When ring time is set to "0 sec." for Voice Mail Service or Call Forwarding Service, incoming calls are not recorded in Received calls.
- To answer a call from another party during a call when call waiting is activated, press . When a party is put on hold, press ire to switch the parties to talk to.

# **Emergency call**

You can make the following emergency calls with the FOMA terminal.

Police	110 (no area code)
Fire and ambulance	119 (no area code)
Marine emergencies	118 (no area code)

• This FOMA terminal is applicable to "Emergency Location Report". When making an emergency call to 110, 119, 118, etc., information of your location (location information) is automatically informed to an emergency call receiving organization such as police. For some locations and/or wave reception conditions, the emergency call receiving organization cannot recognize the correct location. When location information is notified, the name of the emergency call receiving organization the information is sent to appears on the stand-by display.

When the caller ID is hidden for the call, i.e., by appending "184" to the dialed number, none of location information or your phone number is notified; however, the organization may acquire the location information and phone number regardless of your settings, if they have determined that such information is necessary for the protection of life etc. The area and timing of implementing "Emergency Location Report" vary by the preparatory state of respective emergency call receiving organizations.

- When calling to 110, 119 or 118 from the FOMA terminal, inform
  them that you are calling from a mobile phone and give your
  phone number and your current location precisely since the
  police or fire department has to call you back for confirmation.
  To make sure that you are not cut off during the call, do not
  move during the call and do not turn OFF the phone just after the
  call, but keep it on for about 10 minutes.
- For some areas you are calling from, you are not connected to the local police or fire department. Use a public payphone or land-line phone in that case.
- When Auto redial as voice of Operation is set to "ON", videophone call to 110, 119 or 118 from the FOMA terminal changes automatically to voice call.

# **Using overseas**

You can talk with FOMA terminal and use i-mode overseas.

#### International Roaming (WORLD WING)

International roaming (WORLD WING) is a service that allows you to make voice calls and access i-mode using network of telecommunications carriers affiliated with DOCOMO overseas. Before using this service, check its subscription status. For details, contact "General Inquiries" on the last page of this manual.

- The service is available in areas that 3G Network or GSM/GPRS Network covers. Also, it is available in countries or districts where 3G 850 MHz is applied. Check the service area.
- Refer to the following documents before using FOMA terminal overseas.
  - "Mobile Phone User's Guide [International Services]"
- DOCOMO International Services website
- "海外ご利用ガイド" preinstalled in My Document in Data Box (In Japanese only)

#### **Available service overseas**

Available communication services vary by the telecommunications carrier and the network of the country you stay. The icon of the network in use and a name of the connected telecommunications carrier are displayed on the stand-by display.

	Network		
Communication services	3G	GPRS	GSM
	36	EF.	G SM
Voice call	0	0	0
Videophone call	0	×	X
i-mode <sup>*1</sup>	0	0	X

	Network		
Communication services	3G	GPRS	GSM
	36	髵	G SM
i-mode mail	0	0	×
SMS*2	0	0	0
i-Channel*1, 3	0	0	×
i-concier*4	0	0	×
i-Widget <sup>*5</sup>	0	0	×
Position location of GPS*6	0	0	×
Packet communication (PC connection)	0	0	×

- \*1 International settings of i-mode are required.
  - 2 When you send SMS to FOMA terminal, enter the party's phone number as well as in Japan.
- \*3 International settings of i-Channel are required. Packet communication fee is also charged for auto update for Basic channel (included in i-Channel usage fee in Japan).
- \*4 International Settings of i-concier is required. Packet communication fee is charged each time you receive information.
- \*5 i-Widget roaming set is required. When multiple Widget Appli communicate, a packet communication fee is charged per one communication.
- \*6 No fee is charged for GPS positioning. However, when displaying a map using location information etc. a packet communication fee is charged.

# Making a call from overseas

You can make a call in simple operation using memory No. (Quick dial).

When you enter a number within 2-digits overseas, a screen asking for selecting "Quick dial" or "Call" appears. If you select "Call", the call is made as it is (used for emergency overseas).

#### Making an international call (including Japan)

- 1 O (1 sec. or more)
  - "+" is entered.
  - Enter "Country code (for Japan, 81)-phone number without the leading 0 of Area code (City code)" ▶ 

    (voice call) or (videophone call)

In some countries and areas such as Italy, "0" is required.

#### Making a call inside the country you stay

#### Making a call to WORLD WING user overseas

O (1 sec. or more) ► Enter "81 - mobile phone number without the leading 0" ► (voice call) or (videophone call)

#### Point

 The call is forwarded internationally from Japan even when staying in the same country as the party to be called, so enter "+" and the country code of Japan, "81".

# Receiving a call inside the country you stay

1 A call is received ► (voice calls) or (videophone calls)

#### **Point**

 Regardless of the country, from which the call is made, the call is internationally forwarded from Japan. The caller is charged for call fees to Japan, and the receiver is charged for receiving the call.

## **Setting after returning to Japan**

When you turn the FOMA terminal ON, the connection to the FOMA network is established automatically. If it is not automatically connected, set Network search setting to "Auto" and 3G/GSM setting to "AUTO".


# **Sending i-mode mail/Sending SMS**

## Sending i-mode mail

Only by subscribing to i-mode, i-mode mails can be exchanged not only with i-mode terminals but also via Internet.

- For details of i-mode mail, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

The screen shown below appears.

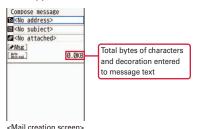

When sending is completed correctly, the mail is automatically saved in a folder of Outbox.

#### Point

Adding addresses (Simultaneous sending): On the mail creation screen, select second or lower receiver field

#### **Attachments**

You can attach up to 10 files and up to 2 Mbytes of image or moving picture/i-motion, etc. in total.

- On the mail creation screen, select the attachment field

  ▶ Select a file type ▶ Attach a file
- 2 Edit a mail ▶ 📵 [Send]

#### Point

 Sending an attachment file of a big size may take time. After sending such file, a lot of mail in folders of Outbox may be deleted.

Removing attachment: On the mail creation screen, select the attachment field ➤ Move the cursor to the attachment ➤ 1 - 3(for ➤ 2, selecting operation is needed) ➤ "Yes"

# **Sending SMS**

When you do not know receiver's mail address, you can send a text message to mobile phone number instead of the mail address.

- SMS can be also sent to or received from the parties using overseas service providers except DOCOMO. For countries and overseas telecommunications carriers available, refer to "Mobile Phone User's Guide [International Services]" or DOCOMO International Services website.
- ☐ ☑ ▶ 7 Compose new SMS ▶ Enter an address and message ▶ ☑ [Send]

#### Point

 When there is an incoming SMS, FOMA terminal operates in the same way as an incoming i-mode mail. ⇒P51

# **Deco-mail/Decome-Anime**

You can create amusing mails using decoration or images.

#### **Deco-mail**

You can change a font size or background color, or insert still images, Deco-mail picture or Deco-mail pict. To decorate characters, specify decoration and then enter characters, or vice versa.

<Example> Specifying decoration before entering characters

- I On the creation screen, "Msg" ▶ 🖼 [Decorate]
- 2 Select a decoration icon ▶ Decorate
  Decoration types are as follows.

■ IMAGE	Insert image	COLOR	Font color	SIZE	Font size
A BLINK	Blink	A TICK	Ticker	A SWING	Swing
ALIGN	Word alignment	LINE	Insert line	₽ BG.	Background color

3 Edit a mail ▶ 📵 [Send]

#### Poin

- When "Auto Deco-mail" is selected after the message text entry, the
  message is automatically decorated according to the message content.
   Each time you press , Deco-mail options appear one after another.
- To check the decoration (preview), press are for 1 second or more on the message entry screen. The bytes of the remaining data amount you can enter is displayed in the upper-right corner of the preview screen. To return to the previous screen, press .

### **Decome-Anime**

You can create more expressive Deco-mail using templates made with Flash graphics.

- Move to the cursor to a template

  ▶ ⑤ [OK]
- 3 Edit the text or image

Changing template: MENU [Submenu]

▶ 1 Open template ▶ "Yes" ▶ Go back to step 2





<Decome-Anime template list>

#### Point

To preview, after loading the template, press 
 while editing text or images. To return to the previous screen, press 
 MENU.

• You can send an i-mode mail created out of service area automatically and set sending date and time. 【@送信予約 (Send reservation)】

# Connect

# Receiving i-mode mail

No specific operations or settings are required for receiving mails (mail automatic reception).

- Receive i-mode mails The screen shown to the right appears.
- On the completion of receiving mail screen, "Mail" Select a folder Select a mail





Checking mails in the mailbox: On the stand-by display, □ ▶ 1 - 3 ▶ Select a folder Select a mail

## Checking new mail/message

You can make inquiry for any i-mode mail or MessageR/F delivered while you were out of service area or the power was turned OFF.

Checking new SMS : □ ▶ 9

# Information

- You can check the subject of a mail in the i-mode Center and then specify if you receive the mail or delete it without receiving. 【@ i モードメール (imode mail) ▷ 選択受信 (Receive option setting)】
- You can set to reply automatically with i-mode mail when you cannot answer calls or mails while driving, sleeping, etc. 【@メール自動返信設定 (Auto-reply)】

# Replying to mails

- ✓ Inbox Select a folder Select a mail MENU [Submenu] ▶ 1 Reply/Forward ▶ 1 Reply - 6 Reply with quote

• By selecting a mail and then pressing , you can reply easily using stored common phrases (Quick reply).

## Setting mail sort rule

Sent/received mails can be automatically sorted.

- **Inbox** or **2** Outbox ▶ Move the cursor to a folder
- MENU [Submenu] ▶ 4 Sort rules ▶ Select a number
- Select a sort rule Set a rule
- [Complete]

Re-sorting saved i-mode mail/SMS: □ 1 or 2 MENU 5 5 Authenticate ▶ "Yes"

# Early warning "Area Mail"

This is a service that you can receive emergency earthquake flash report etc. delivered by the Meteorological Agency. i-mode subscription is not required.

## **Receiving Area Mail**

When there is an incoming Area Mail, A turns on, and you are notified of reception with blinking light, the dedicated buzzer alarm and vibrate alert.

#### Point

 You cannot receive Area mail during a videophone call or Omakase lock, while using infrared communication/iC transmission.

## **Receive setting**

You can set if you receive Area Mail.

Mail Setting ► Early warning "Area Mail" setting ► 1 Receive setting ► 1 Yes or 2 No

#### f Information

・You can set the beep time, or the alert method when receiving Area Mail in Silent mode or Public mode (Drive mode). 【@緊急速報「エリアメール」(Early warning "Area Mail") ▷ 設定 (Settings)】

#### **Phonebook**

# Phonebook new entry

There are two phonebooks: the FOMA terminal phonebook and the UIM phonebook. Saving to the FOMA terminal phonebook is explained here.

- 1 (1 sec. or more) ► Enter a name
  The screen shown to the right appears.
- 2 Set required items
  In addition to items in the screen shown to
  the right, you can save "Department", "Job
  title" and "URI"



New entry

3 📵 [Save]

<Phonebook new entry screen>

## Adding Phonebook entries from redial/received call

(Redial) or (Received calls) Move the cursor to the party MENU [Submenu] 5 Add 1 Add to phonebook or 2 Update phonebook 1 In phone memory or 2 In UIM

To update a phonebook entry, select the entry to add a phone number to.

2 Set required items ▶ 📵 [Save]

#### Point

Searching a phonebook entry : MENU ▶ 7 1 1 ▶ 1 - 7

Editing a phonebook entry: Search the phonebook Move the cursor to a phonebook entry Select an item and edit Select a

Saving to UIM phonebook : MENU ▶ 7 1 3 ▶ Enter a name ▶ Set required items ▶ 1

# **Displaying i-mode site/website**

With i-mode, you can use services such as site connection, Internet connection or i-mode mail by the display of i-mode terminal. You can use Full Browser to display websites created for a PC.

- · i-mode is a charged service requiring subscription.
- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- ...
  - The contents of sites and Internet websites are generally protected by copyright laws. All or any portion of text, image or other data imported to your i-mode terminal from a site or website cannot be altered except for personal use, and cannot be sold or redistributed in any form without the express permission of the copyright holder.
- When you attach a UIM except yours or turn ON the FOMA terminal without UIM, still images/i-motion/melodies downloaded from sites, attached files sent/received by mail, screen memos and MessageR/F for some models cannot be displayed or played.
- When the stand-by display, ring alert, etc. is set by data with the UIM operation restriction, if you replace the UIM with another one or turn the power ON without UIM, it operates in the default data or standard data.
- i-mode and Full Browser have different charging systems. It is recommended that you subscribe to i-mode packet flat-rate service because a high packet communication fee is required to use Full Browser according to data communication volume.

# **Browsing i-mode website**

II I ■ Select an item to view

During i-mode communication, blinks on the display.

To display English menu, scroll down to the bottom of the iMenu screen and select "English".

When quitting viewing a site, 
"Yes"



# Displaying web pages designed for PC

- MENU ≥ i-mode/web ≥ Full Browser Home A confirmation screen for using Full Browser appears by default.
- 2 After reading a website, ☐ ► "Yes"

# **Switching Browsers**

Switching i-mode/Full Browser: When a site or website is displayed, MENU ▶ 5 2

# 🎢 Information

# **Useful functions**

# **URL** entry

- MENU ≥ 2 i-mode/web > 5 Enter URL > 1 Enter URL
  Enter a URL (up to 2,033 one-byte characters) >
  - "i-mode" or "Full Browser"

#### **Bookmark**

You can bookmark frequently visited sites or websites to quickly display them the next time you want to visit.

Saving: When a site or website is displayed, MENU [Submenu]

12 Enter a title (up to 12 two-byte (24 one-byte) characters)

"OK" Select a folder to save to

**Displaying**: MENU ▶ 2 2 ▶ Select a folder ▶ Select a bookmark

### **Screen Memo**

Currently displayed contents of a site or website can be saved as a screen memo or captured image.

Saving: When a site or website is displayed, MENU [Submenu] ▶ 2 2 1 1 - 3 ▶ "Yes"

Displaying: MENU ▶ 2 3 ▶ 1 or 2 ▶ Select a screen memo

#### Point

 If the site or website disapproves of saving screen memos etc, the screen memo may not be saved.

## **RSS** reader

You can collect the latest information of websites by saving RSS to RSS reader.

Saving: When a website is displayed, MENU [Submenu] ▶ 0 3 2

▶ Select RSS ▶ "Yes"

Displaying: MENU ▶ 2 7 ▶ Select a channel ▶ Select an item

## **Save login info**

Register Save login info (ID or password) to paste it to the character entry field.

Registering : MENU ▶ 2936 ▶ Authenticate ▶ Move the cursor to Not registered ▶ ● [Edit] ▶ Set required items ▶ MENU [Save]

Pasting: When a site or website is displayed, MENU [Submenu] ► 0 6 2 1 or 0 7 2 2 Authenticate Select a login info

\*1 When using i-mode \*2 When using Full Browser

# Viewing and operating screen

In sites and websites, as with Internet websites on your PC, you can enter characters, jump to the linked page, select radio buttons or check boxes.

Status, title/URL

Pointer

<Browser screen>

Scrolling up and down\*: Scrolling up and down
continuously\*: (1 sec. or more)

Switching tabs : 
Closing a tab/Ending a
browser : CLR > "Yes"

Switching normal/scroll mode

: SW opera]

In normal mode

Changing pages :  $\square$  [ $\leftarrow$  Back]/  $\blacksquare$  [Next  $\rightarrow$ ]

Visual history: ☐ [← Back] (1 sec. or more)/ [IV [Next →] (1

sec. or more)

In scroll mode

Scrolling up or down: □ [↑ Page]/ in □ [↓ Page]
Scrolling up or down successively: □ [↑ Page] (1 sec. or more)/ in □ [↓ Page] (1 sec. or more)

- In Full Browser screen, MENU ► \* 9 to display functions assigned to the keys.
- \* When Display Mode in Full Browser is set to PC layout mode, (1 sec. or more) to scroll right and left/scroll right and left continuously.

# Operating browser screen

When a site or website is displayed, you can perform operations by pressing  $\underline{\text{MENU}}$  [Submenu].

To do	Operation
Browsing history	MENU [Submenu] ▶ 3 ▶ Select a history
	item
iMenu	MENU [Submenu] ▶ 4 *1 or 5 1 *2
Full Browser Home	MENU [Submenu]  51 *1 or 41 *2
Reload information	MENU [Submenu] ▶ 7
Display a URL	MENU [Submenu] ▶ 8 3
Show/hide the guide area	MENU [Submenu] ▶ 9 5 *1 or 9 7 *2 ▶ 1 or 2
Display Visual history	MENU [Submenu] ▶ 0 1
Create a mail	MENU [Submenu]  > 0 3 *1 or 0 4 *2
Add to phonebook	Move the cursor to the phone number or mail address ▶ MENU [Submenu] ▶ 0 4 1 1 or 0 5 1 2 1 0 2 1 "Yes"
Move pages, back to the frame display	MENU [Submenu] ▶ * ▶ 1 - 5

- \*1 When using i-mode
- \*2 When using Full Browser

# **Using i-Channel**

...

i-Channel is a service that news, weather information, etc. is distributed to the i-Channel compatible terminal. The auto-recieved information appears in the ticker on the stand-by display. Press CLR to display the channel list.

The following two types of i-Channel are available. (In Japanese only)

#### Basic Channel

The channel is provided by DOCOMO, and the packet communication fee for automatically updating the distributed information is not charged.

#### Okonomi (Optional) channel

The channel is provided by an IP (Information Provider), and the packet communication fee for automatically updating the distributed information is separately charged.

When viewing detail information in Basic Channel or Okonomi Channel, a packet communication fee is separately charged. For overseas use, packet communication fee is charged for both automatic update and viewing detail information.

- i-Channel is a charged service requiring subscription. i-mode subscription is required for the service.
- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

To view the detail information of the ticker displayed, perform the following operation.

On the stand-by screen, CLR ▶ Select a channel The site is connected and the detail information appears.



#### Point

 When the detail information of i-Channel is displayed, the same operations as the ones when i-mode sites or websites are available.⇒P55



• You can change the display options of the i-Channel ticker. 【@ i チャネル (i-Channel) レテロップ表示設定 (Ticker display set.)】

above.

- This function is unavailable as a navigation device for aircraft. vehicles or persons or as high-precision location surveying GPS. DOCOMO is not liable to any purely economic damages including troubles, if any, caused by missing opportunities of viewing positioning results or making communications due to failures or malfunctions of the FOMA terminal or external events such as defect, power interruption (including battery exhaustion) in using the FOMA terminal for purposes including but not limited to the
- Because GPS is managed by U.S. Department of Defense, GPS wave conditions may be controlled (accuracy degraded or wave stopped) for security reasons of the U.S. And, wave conditions differ by satellite locations; therefore, positioning operations in the same location under the same environmental conditions may not vield the same result.
- Because GPS uses waves transmitted from satellites, waves may not be received or become hard to be received, resulting in a margin of error of 300 m or more in location information.
- When using Location request and Notify location functions, check instructions and precautions given in website of GPS service providers and NTT DOCOMO. And, you may be charged for using these functions.
- The GPS function except Position location is unavailable out of service area.

# **Map/Navigation**

You can start GPS compatible i-αppli to display maps after positioning location or navigate.

MENU 9 Map/Overseas 1 Map or 2 Navigation

• i-appli set in Select map in Map setting starts. "地図アプリ (Map Application)" is set by default.

#### Position location

You can check where you are. No packet communication fee applies for positioning of Position location, but a packet communication fee is required separately with map displayed using location information.

MENU ▶ 9 Map/Overseas ▶ 6

Position location/Location notification 1 Position location

When positioning is in progress, \* blinks. When positioning is completed, the position location menu appears. From the menu, you can select options to read map, use GPS compatible i-αppi, display the mail creation screen on which location information is pasted, add to phonebook, etc.

Position location Position located. Paste to mail Add to phonebook Update phonebook Add to image 7 Check Loc. info

cl ocation information usage menu>

#### Information

- · You can set FOMA terminal so that location information can be provided upon request from other set parties. This service requires a separate subscription to use. And, you may be charged for using the service. 【❷GPS ▷位置提供 (Location request)】
- Various i-αppli that are compatible with Map/GPS function are stored by default. 【@GPS対応 i アプリ (GPS compatible i-αppli)】

# **AUTO-GPS**

Your current location or measurement information by Pedometer/ ACT monitor is automatically sent to service providers on a regular basis (approximately once in every 5 minutes), which allows you to services that deliver information about the weather or shops around where you are, or sightseeing information. (In Japanese only)

- To use an AUTO-GPS compatible service, set AUTO-GPS service information from its AUTO-GPS compatible i-αppli.
- When All lock, Personal data lock, Self mode, or Omakase Lock is activated, the AUTO-GPS function is unavailable.
- When using the AUTO-GPS function, check instructions and precautions given in website of GPS service providers and NTT DOCOMO. And, you may be charged for using these services.
- Note that more power is consumed in FOMA terminal due to a regular communication depending on your usage condition.

## Setting services provided by DOCOMO

To use AUTO-GPS services that work with i-concier or services provided by DOCOMO, set whether to send your location information to DOCOMO on a regular basis. These services require separate subscriptions to use.

MENU ▶ 9 Map/Overseas ▶ 7 Map&GPS setting/ history ▶ 5 AUTO-GPS ▶ 1 DOCOMO service set ▶ "ON" or "OFF"

# Setting AUTO-GPS

Set whether to use the AUTO-GPS function.

MENU ▶ 9 Map/Overseas ▶ 7 Map&GPS setting/ history ▶ 5 AUTO-GPS ▶ 2 AUTO-GPS setting ▶ 1 ON or 2 OFF

#### Setup service list

Display a list of the names of i- $\alpha$ ppli (the service name), to which AUTO-GPS service information is set, and its status.

1 MENU ▶ 9 Map/Overseas ▶ 7 Map&GPS setting/ history ▶ 5 AUTO-GPS ▶ 3 Setup service list Canceling the service (including AUTO-GPS) : MENU ▶ 1 ▶ 1 - 3




• You can set FOMA terminal so that the AUTO-GPS function will stop when the battery level gets low. [@GPS ▷ 低電力時動作設定 (Low battery setting)]

# Camera

# Shooting still images/moving pictures

# **Viewing shooting screen**

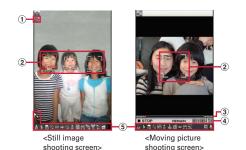

- ① Sense orientation icon : Sense orientation when shooting and indicate the top
- ② Focus frame, face detection frame: When AF mode is set to "Face First AF", detect face
- 3 Zoom rate : To zoom in/out.
- 4 Available shooting time estimate
- 5 Scene mode/effect icon: Current shooting mode
  - Attach location 🔏 AF mode 🛂 Shooting light 🚮 Brightness
  - Auto timer Im Shoot by scene
  - Fix camera shake
  - Number of Continuous/Panorama shooting
  - Image quality Image size Snap movie mode
  - White balance 🛂 Best-shot select
  - 💹 Panorama 🔤 Quick shooting mode
  - Smooth Slo-Mo 📓 Smile-finder
  - 🔭 Tracking focus 📠 Skew correction
  - Switch img/voice

# **Shooting still images**

- 1 📵
- Point the camera at an object, [to] or ■
  When Auto save mode is OFF, a confirmation screen appears.

# **Shooting moving pictures**

- 1 👨
- Point the camera at an object, [Rec/Record] or ■
- 3 To stop shooting, [Stop] or ▶ 1 Save

# Key operations on shooting screen

Ø	Display the all settings change screen	5	Select size
	Switch still image/moving picture	6	Select image quality
	Brightness	7	Shoot by scene (still image), Scene/Effect shoot (moving picture)
~	Focus lock	8	Shoot with frame (still image), fix camera shake (moving picture)
1	Switch camera mode	9	White balance
2	Display Data Box	<b>*</b>	Save to
3	Shooting light	0	Change a face detection frame to be focused (still image)
4	Auto timer (still image), switch image/voice (moving picture)	#	AF mode

## **Shooting in various methods**

To do	Operation
Switching Main- camera/Sub-camera	On the shooting screen, (1 sec. or more)
Smile-finder	On the still image shooting screen, MENU [Submenu] • 6 4 • Select a smile rate
Best-shot select/ Continuous/Panorama shooting	On the still image shooting screen, MENU [Submenu] ▶ 2 6 ▶ Select a shooting method
Quick shooting mode	On the still image shooting screen, MENU [Submenu] > 3 2
Smooth Slo-Mo	On the moving picture shooting screen,  MENU [Submenu] ▶ 2 3 ▶ 1 or 2
Snap movie mode	On the moving picture shooting screen,  [MENU] [Submenu] 32

#### Point

- If FOMA terminal is left in a warm place or exposed to direct sunlight for a long time, images to be shot may be deteriorated.
- If the FOMA terminal is closed or no operations are performed for approximately 2 minutes during shooting stand-by, the camera ends.
- Before shooting still image/moving picture underwater of pool, carefully read the mention of waterproofness. P17

#### Information

 The camera can track the subject with Tracking focus, or detect a registered face with Find-me focus. [@カメラ (Camera) ▷ トラッキン グフォーカス | サーチミーフォーカス (Tracking focus/Find-me focus)]

#### Camera

# Viewing and editing still images/moving pictures

Still images/moving pictures are saved to Data Box.

■ENU ► 5 Data Box ► For still image, 1 My picture or for moving picture, 4 i-motion/Movie ► Select a folder
 ► Select data

#### Point

Creating mail with file attachment: On the list screen, move the cursor to data ▶ For still image, MENU ▶ 21 or For moving picture, ☑ ▶1 (▶ For more than 500 Kbytes, 1 - 3)

Setting a file to the stand-by display: On the list screen, move the cursor to data ▶ MENU ▶ 4 1

# **Editing a still image**

You can change the image size, trim the image or add effect to the image.

- MENU ► 5 Data Box ► 1 My picture ► Select a folder ► Move the cursor to a still image
- 2 MENU [Submenu] ▶ 1 Edit/File property ▶ 1 Edit image

Besides editing image, adding makeup effect on person's face (Facial treatment) or editing title or file name are available.

3 Edit the image ► [Complete] ► "Yes" ► "OK"

# Watching 1Seg

#### Using 1Seg

1Seg is a service provided by TV broadcasting enterprises (stations), etc. A communication fee for receiving video picture and sound is not required. Contact NHK for details on your NHK viewing fees.

- \* For viewing "Data broadcasting site", "i-mode site", etc., packet communication fees are charged. Some sites require information fees (i-mode pay sites).
- \* For details of "ISeg" service, refer to the following websites.

  The Association for Promotion of Digital Broadcasting

  From a PC: http://www.dpa.or.jp/english/

  From i-mode: http://www.dpa.or.jp/1seg/k/ (In Japanese only)

#### Airwayes

1Seg is one of the broadcast services and a different type of radio waves (airwaves) from that of FOMA service is received. In the following cases, reception condition may become bad or reception may be unavailable.

- A place far from the tower that the airwayes are sent from
- · Mountain-ringed regions or a place between buildings
- Tunnel, underground or far back from a building
- \* To receive stronger radio waves, try moving the FOMA terminal closer or further from your body or moving to another location.

#### Screen appearing when using 1Seg for the first time

A confirmation screen for disclaimers appears. If you agree and then press "OK", the confirmation screen does not appear again.

# Creating a channel list using preset (for the first-time creation)

To watch 1Seg, you need to create a channel list. Loading broadcasting stations and channels that are pre-registered to FOMA terminal is explained here.

MENU ▶ 4 CAMERA/TV/MUSIC ▶ 2 1Seg ▶ 7
Channel setting ▶ "Yes" ▶ "Use preset"

Selecting "Auto setting" searches for broadcasting stations and channels that can be received in your current location. Perform Auto setting in digital terrestrial broadcasting service area.

2 Select an area ▶ "Yes"

### Setting a channel list

When you have multiple channel lists or move to another area, you need to switch the channel lists.

A list of channel numbers appears. To watch a channel, move the cursor to the channel, and then press .

### Watching 1Seg

1 www (1 sec. or more)

# Enjoy

# Viewing and operating watching screen

You can watch 1Seg in full screen, or divide the screen to watch the data broadcasting.



<Horizontal display (Full screen)>

When Switch active operations in Image & Effect is "OFF", the following operations are available.

Adjusting the volume :  $\square$  [Low]/  $\square$  [High]

Starting Program guide i-appli : [6] [EPG]

Selecting a channel: 1 - 9, ★, 0, #

Selecting the previous and next channel :

Recording still images :

Starting/Stopping a video recording: [6] (1 sec. or more)

Switching the watching screen :

Showing/Hiding Subtitle: (1 sec. ore more)

#### Point

You can reserve watching/recording, set Time out, Close setting, Smooth image, 1Seg eco mode ON/OFF, etc., output via Bluetooth, etc.
 Displaying key function help: While watching, MENU 9

# **Watching/Recording reservation**

You can automatically activate 1Seg watching or recording, or set the alarm sound to notify you of start of a program.

- I MENU ► 4 CAMERA/TV/MUSIC ► 2 1Seg ► 4 TV timer list
- 2 MENU [Submenu] ▶ 1 Set new timer ▶ Select timer option ▶ 📵 [Save]

When selecting "Manual reception" or "Manual recording", you proceed to set the reservation details such as time and date or channel.

Selecting "By program guide" activates program guide i- $\alpha$ ppli. When you reserve watching or recording a program by selecting it in the program guide i- $\alpha$ ppli, the reservation information is saved and displayed on the setting screen.

3 📵 [Save]

#### Point

 If "Record to:" in "Record setting" is set to "Auto (phone first)" or "Auto (microSD first)" on the recording reservation screen, the saving location switches automatically according to free space or savable number.

# Playing a recorded program

1 MENU ▶ 5 Data Box ▶ 0 1Seg ▶ Select a folder ▶ Select data

# Music&Video Channel

Music&Video Channel is a service which automatically distributes a program of up to approximately 1 hour at night. You can also enjoy high-quality video program of up to approximately 30 minutes. (In Japanese only)

- ...
- Music&Video Channel is a charged service requiring subscription.
   Subscriptions to i-mode and i-mode packet flat-rate services are required for the service.
- Information fee may be required additionally for some programs besides Music&Video Channel service fee.
- If docomo UIM is used on a Music&Video Channel incompatible FOMA terminal after subscribing to Music&Video Channel, Music&Video Channel cannot be used. Note that the service fee is charged unless Music&Video Channel is unsubscribed.
- Program setting and downloading are unavailable during international roaming\*. Stop distribution of programs before leaving Japan. When you return to Japan, resume distribution of programs.
- \* Note that attempting program setting or downloading during international roaming requires packet communication fee for i-mode connection.
- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

# **Program setting**

To set programs, registering Music&Video Channel program site in My Menu may be required.

- MENU ▶ 4 CAMERA/TV/MUSIC ▶ 4

  Music&Video Channel

  The screen shown to the right appears.
- Program setting Set a program according to instructions on the screen



<Music&Video Channel screen>

## Playing a program

MENU ► 4 CAMERA/TV/MUSIC ► 4
Music&Video Channel ► Select a
program

The following operations are available on the player screen.

Pausing/Playing: ● [PAUSE/PLAY] or ■
Adjusting the volume: ② or ▲▼
Rewinding/Fast forwarding: ○ (1 sec. or more)

Jumping to the beginning of chapter: 2 seconds or more in play time, or

(1 sec. or more)

Jumping to the previous chapter: Less than 2 seconds in play time, o or (4) (1 sec. or more)

Jumping to the next chapter : or ▼ (1 sec. or more)



<Music&Video Channel player screen>

# **MUSIC Player**

You can play Chaku-uta full downloaded from a site and Windows Media® Audio (WMA) files imported from music CDs, the Internet, etc. to a PC. And Uta-moii lyrics downloaded from a site can be displayed on the player screen by setting Link lyrics & song.

\* For details of MUSIC Player, refer to NTT DOCOMO website, For Windows Media Player, contact the manufacturer of your PC.

# **Downloading Chaku-uta full**

1 Display a site ► Select Chaku-uta full ► "Save" ► "Phone" or "microSD"

# Saving WMA file on a PC to micro SD

For connection to a PC, FOMA USB Cable (optional) is required. For details, refer to "Manual for PC Connection" in the attached CD-ROM.

- MENU ▶ 8 Setting ▶ 8 External connection ▶ 1 USB mode ▶ 3 MTP mode ▶ "Yes"
- 2 With Windows Media Player activated, connect FOMA terminal to a PC using USB cable ▶ Send WMA file from the PC

# Playing music data

MENU 4 CAMERA/TV/MUSIC 3 MUSIC Player ▶ Select a folder or playlist > Select music data

The following operations are available on the player screen. Pausing/Plaving: 

[PAUSE/PLAY] or 

[Selection of the image of the im

Adjusting the volume : ♥ or ▶ v

Rewinding/Fast forwarding: (1 sec. or

more)

Jumping to the beginning of track: 2

seconds or more in play time, or (1 sec. or more)

Jumping to the previous track: Less than 2 seconds in play time, or (1 sec. or more)

Jumping to the next track : or or ▼ (1 sec. or more)

Adding to Quick playlist: Press Is twice quickly

Ending: (1 sec. or more)

n childhood ▲ 和木瓜楽団

<MUSIC Player screen>

- When downloading music data from Internet websites etc., check the use conditions.
- Music data saved in FOMA terminal or microSD card is allowed for personal use only. When using the music data, take extreme care not to infringe intellectual property rights of a third party such as copyrights etc.

# i-αppli/i-Widget

•••

i-appli is a software for i-mode compatible mobile phones, which updates the information of stock price or weather automatically, or provides games that can be played without connecting to the network. i-Widget allows you to easily access to frequently-used any contents such as calculator, clock, Memo and stock price information.

Either i- $\alpha$ ppli or i-Widget can be downloaded from i-mode site or sites provided by IPs (Information Providers). For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

- When downloading or displaying i-Widget screen, etc. a packet communication fee may be separately charged.
- When i-Widget screen is displayed, multiple Widget Appli may communicate.
- A packet communication fee for overseas use differs from the one in Japan.
- DOCOMO assumes no responsibility for the information set in Osaifu-Keitai compatible i-αppli (IC card).

# **Downloading**

Display a site ➤ Select i-αppli ➤ After completion of downloading, "Yes" or "No"

Downloaded i- $\alpha$ ppli is saved to "My folder" of Software list. When Message i- $\alpha$ ppli is downloaded, the folders for Message i- $\alpha$ ppli are automatically created in the folder list.

# **Starting i-αppli**

1 (1 sec. or more) ▶ Select a folder ▶ Select i-αppli

#### Point

Starting Osaifu-Keitai compatible i-αppli : MENU ▶ #1 ▶ Select i-αppli Starting GPS compatible i-αppli : MENU ▶ 9 5 ▶ Select i-αppli

# **Starting i-Widget**

1 ₩m ► Select Widget Appli

#### 🎢 Information

• If you delete stored i-αppli, you can download the software from "@Fケータイ応援団 (@F mobile phone supporters)" site. "@Fケータイ応援団 (@F mobile phone supporters)" (as of September, 2010) iMenu ⇒ メニューリスト (Menu list) ⇒ ケータイ電話メーカー (Mobile phone manufacturer) ⇒ @Fケータイ応援団 (@F mobile phone supporters) (In Japanese only)

\*The access method may be changed without previous notice.

QR code for site access



# **Playing i-motion/movie**

You can obtain i-motion/movie (images, sound, etc) from sites or websites.

#### ♣ Playable i-motion

Туре	Playing action
Standard type (can be saved*)	While the i-motion data is downloaded, it is played.  The downloaded i-motion can be operated in the same way as the i-motion which is played after entire data is downloaded.
	After the entire i-motion data is downloaded, it is played.
Streaming type (cannot be saved)	While the i-motion data is downloaded, it is played.  • After the i-motion data is played, it is deleted.

<sup>\*</sup> Some i-motion cannot be saved.

#### ♣ Playable movies

Туре	Distribution method	Playing action
Streaming type (cannot be saved)	Real-time distribution	The movie is distributed in real time.  • Pausing/Resuming play/Moving play position are unavailable.
	On-demand distribution	Distribute movies that are prepared in advance.

# **Downloading i-motion/Movie**

Select i-motion/movie while site or website is displayed

Playback starts while data is downloaded or when the download is completed.

2 "Save" ► Move the cursor to a folder to save ► [OK]

For streaming type i-motion, select "Back" to return to the site screen.

#### Point

 Note that communication of a large amount of data, such as downloading a movie, requires high packet communication charges.

# Playing moving picture/i-motion

1 MENU ► 5 Data Box ► 4 i-motion/Movie ► Select a folder ► Select a moving picture/i-motion

The following operations are available during playback.

Adjusting the volume : 
or 
or

Pausing/Playing/Playing from the beginning (while stopping)

: •

Stopping: FR

#### Information

- You can set whether to automatically play normal type i-motion while downloading or after it is downloaded. 【@動画自動再生設定 (Movie auto play set.)】
- You can save programs recorded in a Blu-ray Disc recorder to a microSD card in FOMA terminal. 【@ブルーレイディスクレコーダー連携 (Linkage with a Blu-ray Disc recorder)】

• • •

Osaifu-Keitai is equipped with IC card and allows you to pay money or to use coupon or stamp rally only by holding FOMA terminal over the IC card reader in stores etc.

And you can access site or web site by holding the FOMA terminal over IC card reader, obtain the latest coupon by using communication, credit electronic money, or check the usage. Various security systems are also equipped. For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".


- The data (including electronic money, points, etc.) in the IC card may be lost or modified because of the malfunction of FOMA terminal (When we take your Osaifu-Keitai for repair etc., as we cannot take it with data remained, you are required to erase the data by yourself). For support such as reissuance, restoration, temporary preservation or transfer of data except transfer by iC transfer service, confirm with Osaifu-Keitai compatible service provider. For important data, be sure to use a service with backup service.
- If the data in the IC card is lost, modified or damaged by any means related to Osaifu-Keitai compatible service such as malfunction or model change, DOCOMO assumes no responsibility for the loss of data.
- If FOMA terminal is stolen or misplaced, immediately contact Osaifu-Keitai compatible service provider for an advice.

# Steps for using Osaifu-Keitai

You can start Osaifu-Keitai compatible i- $\alpha$ ppli to credit money or check the balance or usage. You can use the Osaifu-Keitai services compatible with Osaifu-Keitai Web plug-in from a site.

- 1 Download Osaifu-Keitai compatible i-αppli as necessary
- 2 Start Osaifu-Keitai compatible i-αppli and make the initial settings of the service
- 3 Hold  $oldsymbol{
  heightsize}$  mark of the FOMA terminal over IC card reader

At this time, starting
Osaifu-Keitai compatible iαppli is not required.
If IC card is not detected
successfully when you
hold mark of the
FOMA terminal over IC

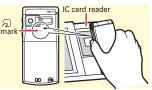

card reader, try moving the FOMA terminal back, forth and around.

# Information

- You can disable IC card functions. ⇒P38
- When replacing Osaifu-Keitai in such cases as model change or repair, data in an IC card can be transferred collectively to a new Osaifu-Keitai. 【@iC お引っこしサービス (iC transfer service)】
- You can obtain electronic cards such as coupon tickets from an IC card reader or a site. [@トルカ (ToruCa)]

# **Using i-concier**

i-concier is a service that Machi-chara (a character on the stand-by display) supports your life like a butler or concierge. It stores your information such as area of residence, memo, schedule, ToruCa, phonebook and offers you information that matches contents of Memo or Schedule, your living area or current location, or preferences and interest at the right time. It can offer information related to memos, schedules and ToDo saved in the FOMA terminal, automatically update schedules and ToruCa, and automatically add useful information such as shop hours to the phonebook. (In Japanese only) The stored schedules or images can be shared with group of your friends, family, etc. You can print the stored images easily.

- i-concier is a charged service requiring subscription (Subscription is required subscription of i-mode).
- If you do not subscribe Data Security Service, when you subscribe i-concier, you subscribe Data Security Service, too.
- A packet communication fee is separately required to receive information except for some information.
- A packet communication fee is separately required to use detail information.
- To use i-concier overseas, International service settings require to be set. For using international roaming services, a packet communication fee is charged for both receiving/viewing detail information (it differs from the charge in Japan).
- Information fee may be additionally required for some contents besides i-concier monthly service fee.
- Automatic updating i-schedule/Memo/ToruCa/phonebook, etc. requires a packet communication fee separately.
- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

# **Receiving information**

Information is sent automatically.

- Information is received
  appears on the stand-by display with light or ring alert for notification.
- 2 On the stand-by display, select a popup message ► Select a piece of information Some pieces of information may have memo of Schedule, ToruCa attachment or a link to a site. To display details, select the icon.



Butler Sheep)\*
©NTT DOCOMO

<Information reception screen>

#### Point

MENU | ▶ "インフォメーション一覧 (Information list)" ▶ Select a piece of information



#### Information

You can set whether to display information on the stand-by display
when i-concier information is received. 【@インフォメーション表示設定 (Information display setting)】

#### **Convenient tools**

## **Schedule**

Manage memos with Schedule or check downloaded i-schedule. (In Japanese only)

Display of the schedule or function varies by schedule type. Type of "Normal" that can be managed with linking i-concier and memo list is explained here.

When you start or end Schedule, a message may appear depending on the subscription status of i-concier.

## Registering memo from the schedule

[Submenu] ▶ 1 New entry

The screen shown to the right appears.

2 Set required items ▶ ■☑ [Save]
Showing/Hiding hint: ③ [Hint ON/OFF]
You can select entry options from the hint
displayed in "シール (Seal)", "しいつ?
(When?)", "どこで? (Where?)", "だれと?
(With whom?)", "共有設定 (Share setting)",
"添付 (Attachment)" field.



<Schedule creatio screen>

#### Point

# Checking a schedule

#### Convenient tools

# Alarm

Alarm sounds at specified time. You can also set to activate 1Seg after sounding alarm.



<Alarm setting screen>

#### Point

- In "Snooze (Snz)", set the sound intervals for 30 minutes.
- When you set "Contact" on Set contact screen to "Yes", a confirmation screen for dialing appears when Alarm stops.
- When "Activate 1Seg" on 1Seg alarm screen is set to "Yes", 1Seg activates at end or stop of the alarm (1Seg alarm clock).
- While alarm clock is sounding, it stops or starts snooze with no operations for approximately 1 minute, by pressing a key other than , wm and , or double-tap. Press to end the alarm clock.



#### You can set to turn on the power at alarm time even when FOMA terminal turns OFF. 【@アラーム自動電源ON設定 (Alarm auto power ON)】

- MENU ► 6 Tool ► 1 Bar code reader
- When scanning is completed, a confirmation sound is heard and the scanned data appears. On the screen after scanning, you can copy or save the data from the submenu. For some data, you can save certain types of data to phonebook, or create mails, or connect to sites or websites.



<Scanning screen>

#### Point

- When a bar code is hard to read, press to switch to shutter mode.
   The readability of bar code may be raised by adjusting distance between camera and code, angle or orientation.
- Scratches, dirt, damages, low print quality and the strong reflection of light may disable code reading.
- To read CODE128 code, downloading compatible i-αppli is required.

#### 🏂 Information

You can change the settings of focus lock, light, zoom, AF mode, etc. before reading bar code. 【@バーコードリーダー (Bar code reader) ▷ 設定変更 (Changing settings)】

#### Convenient tools

# **Dictionaries**

You can search word meanings, spelling of English word, etc. with Dictionaries.

- MENU ▶ 6 Tool ▶ "Dictionary"
- 2 1 Jpn Dic (Gakken Mobile Jpn Dic) 3 EJ Dic (Gakken Mobile EJ Dic)
- 3 Enter a word (up to 20 two-byte (40 one-byte))
- 4 Select a word from the search result list



#### Point

• To search "Today's trivia" or "Today in history", press 4 or 5 in Step 2.

Using search function: MENU ▶ 6 ▶ "Dictionaries" ▶ 1 - 3 ▶ MENU ▶ 1 ▶

Select a word

You can establish a wireless connection between FOMA terminal and a Bluetooth device. For operations of the Bluetooth device, refer to the operation manual of your Bluetooth device.

\* Wireless communication is not guaranteed for all Bluetooth devices.

## Compatible version

Bluetooth standard Version 2 1+FDR

#### ♣ Functions available with Bluetooth

- · You can call wirelessly by connecting Bluetooth Headset F01 (optional), etc. Also, handsfree call is available by connecting Bluetooth device (commercially available) such as car navigation.
- You can play wirelessly voice sounds or music, or operate by remote control by connecting Wireless Earphone Set 02 (optional) or a Bluetooth audio device (commercially available).
- You can enter characters using Bluetooth compatible keyboard (commercially available).
- You can perform packet communication or 64K data transmission by connecting to a Bluetooth compatible PC using the FOMA terminal as a modem.
- You can send or receive profile, phonebook entries, notes, received/ sent/unsent mails, bookmarks, ToruCa, location notification by connecting to Bluetooth device.
- You can enjoy a versus game of i-αppli or receive measured data by connecting other terminal, Bluetooth compatibel health check device (commercially available), etc.
- You can print or view still images, or receive images by connecting Bluetooth compatible printer or photo frame (commercially available).

#### Radio wave interference with Wireless LAN

Bluetooth device and Wireless LAN (IEEE802.11b/g) use the same frequency band (2.4GHz). If you use the terminal near a wireless LAN device, reception interference may occur. It may cause lower speed of communication, noise or connection problem. In this case, turn off Wireless LAN or leave the FOMA terminal or Bluetooth device from the Wireless I AN more than 10 m.

## **Registering Bluetooth devices**

Set a Bluetooth device to registration stand-by mode in advance.

- 1 MENU ▶ 6 Tool ▶ 8 Bluetooth ▶ 5 Register new dev After Bluetooth device is searched, the registering new device screen appears.
- Select a Bluetooth device to register Enter the Bluetooth passkey

• For Bluetooth passkey, see the instruction manual of the Bluetooth device. When registering Wireless Earphone Set 02 or Bluetooth device compatible with Bluetooth standards Ver.2.1. Bluetooth passkey entry is not required (it is required for some Bluetooth devices).

## **Connecting with registered Bluetooth** devices

1 MENU ▶ 6 Tool ▶ 8 Bluetooth ▶ 4 List/cnnct/discnct Select a Bluetooth device to connect.

More Convenient

You can save still images, moving pictures, melodies, etc. or backup data of phonebook, schedule, etc. in microSD card.

 F-02C supports microSD card of up to 2 Gbytes, and microSDHC card of up to 16 Gbytes (as of September, 2010). For information about latest operation check results, refer to the followings.
 Note that information described is the result of operation confirmation and does not guarantee all operations.

From i-mode : iMenu  $\Rightarrow$ 

manufacturer) ⇒ @Fケータイ応援団

(@F mobile phone supporters) ⇒ ×

モリーカード対応情報 (Memory card support information) (In Japanese only)

From PC : FMWORLD (http://www.fmworld.net/) ⇒ 携帯電話 (Mobile phone) ⇒ microSD対応状況、microSDHC対応状況 (microSDHc support information) (In Japanese only)


\* The access method may be changed without previous notice.

## Precautions on using microSD card

 The data saved from another device such as a PC may not be displayed or played in FOMA terminal. And the data saved from FOMA terminal may not be displayed or played in other device.

## Installing

- 1 Turn FOMA terminal OFF and remove the battery pack
- 2 Insert the microSD card slowly into the slot with metal contacts side down (as shown right), and insert it further until it clicks

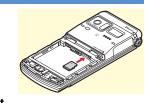

\* To remove the microSD card, push it lightly to pop it out, and then pull it out.

## **Formatting**

Format microSD card with FOMA terminal before using.

1 MENU ▶ 6 Tool ▶ ★ microSD ▶ 🔞 [Format] ▶
Authenticate ▶ "Yes"

#### Point

• Formatting microSD card deletes the data in the card.

## Moving/Copying images to microSD card

1 MENU ► 5 Data Box ► 1 My picture ► Select a folder ► Move the cursor to data

When the folder list of microSD card is displayed, select "→phone".

2 MENU [Submenu] ▶ 5 Move/Copy

Moving: 2 ▶ 1 - 3 ▶ Mover the cursor to a folder ▶ 🐞 
"Yes"

Copying: 3 ▶ 1 - 3 ▶ Move the cursor to a folder ▶ ७ "Yes"

When moving/copying one item, omit pressing "Yes".

#### Point

 $\bullet$  You cannot move or copy the data that is inhibited to output from FOMA terminal.

## Moving/Copying images to the FOMA terminal

- 1 MENU ▶ 6 Tool ▶ \* microSD ▶ 1 Data box ▶ 1 My Picture ▶ Select a folder ▶ Move the cursor to data
- 2 MENU [Submenu] ▶ 5 Move/Copy

Moving: 2 ▶ 1 - 3 ▶ Mover the cursor to a folder ▶ **⑤** ▶ "Confirm"

Copying: 3 ▶ 1 - 3 ▶ Move the cursor to a folder ▶ □
"Confirm"

When moving/copying one item, omit pressing "Confirm".

## Displaying data in microSD card

1 MENU ▶ 6 Tool ▶ \* microSD ▶ Select a data type ▶ Select a folder or data type ▶ Select data

## **Backing up at once**

You can back up phonebook entries, notes, mails, bookmarks, set item data all at once in the microSD card. Data is overwritten for the second-time backup or later.

- MENU ▶ 6 Tool ▶ ★ microSD ▶ 7 Backup/Restore ▶

  1 Backup to microSD
- 2 Authenticate ▶ "Yes"
  When phonebook is not saved, omit Step 3.
- 3 "Yes" or "No"

#### Point


- Some restrictions apply, such as moving pictures saved in phonebook or the part of the attachment files in excess of 100 Kbytes are not backed up.
- Select "2 Restore to phone" at the end of Step 1 to restore data collectively backed up in the microSD card to the FOMA terminal. This operation deletes the latest data in the FOMA terminal and overwrites it.

## Information

- You can check the memory status of microSD card or synchronize the data which was changed, added or deleted in another device correctly.
  【@microSDカード (microSD card) ▷ 使用状況 | 情報更新 (Memory Status/Sync data info)】
- You can organize still images and moving pictures into album regardless of saved location, and view them. 【@マイコレクション (My collection)】

## Infrared communication/iC transmission

You can send/receive data to/from devices such as FOMA terminal supporting infrared communication function or iC transmission function.

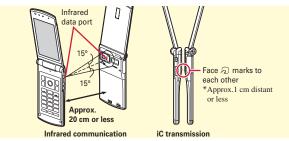

#### Point

- When sending/receiving all data items, the sender and receiver need to determine a 4-digit authentication password in advance. For infrared communication, the receiver's terminal must be ready for communication first.
- When sending/receiving all data items, the data saved in the receiver is
  deleted, and the newly received data is saved. However, if the receiver is
  F-02C and the sending data is image, moving picture, melody, document
  (PDF data) or Decome-Template, the data is added. Folder names or order
  of data may differ from the ones of sender.
- · While charging, sending data by iC transmission is unavailable.

# Sending a phonebook entry via infrared communication/iC transmission

Move the cursor to a phonebook entry ▶ MENU
[Submenu] ▶ 8 Send data ▶ 1 Send Ir data or 2 iC
transmission ▶ 1 Send ▶ "Yes"

# Sending all items via infrared communication/iC transmission

1 MENU ▶ 6 Tool ▶ 4 Infrared/iC communications ▶ 2 Send all infrared data or 3 All iC transmission ▶ Select items ▶ Authenticate ▶ Enter an authentication password ▶ "Yes"

## Receiving an item via infrared communication

1 MENU ▶ 6 Tool ▶ 4 Infrared/iC communications ▶
1 Receive infrared data ▶ 1 Receive ▶ "Yes" ▶ Send data from a sender ▶ After receiving, "Yes"

## Receiving an item via iC transmission

Send data from a sender ➤ With the stand-by display on a receiver, place marks close to each other ➤ After receiving, "Yes"

## Receiving all items via infrared communication

1 MENU ▶ 6 Tool ▶ 4 Infrared/iC communications ▶
1 Receive infrared data ▶ 2 Receive all ▶ Authenticate
▶ Enter an authentication password ▶ "Yes" ▶ Send data from a sender ▶ After receiving, "Yes"

## Receiving all items via iC transmission

1 Send data from a sender ▶ With the stand-by display on a receiver, place marks close to each other ▶ Authenticate ▶ Enter an authentication password ▶ Place the marks close to each other ▶ After receiving, "Yes"

You can connect FOMA terminal to a PC to transfer WMA files or images in the microSD card.

Also, connecting to the Internet for data communication is available.

 FOMA USB Cable with Charge Function 02 (optional) or FOMA USB Cable (optional) is required.

## **USB** mode

From a PC, you can operate data in a microSD card in FOMA terminal.

1 MENU ▶ 8 Setting ▶ 8 External connection ▶ 1 USB mode ▶ Select a mode

Communication mode: Set for packet communication, 64K data communication or data transfer by connecting to a PC. microSD mode: Set for recognizing the microSD card in FOMA terminal as a drive and operating the data by PC operation. MTP mode: Set for music data transfer to microSD card using Windows Media Player.

2 "Yes"

## **DOCOMO** keitai datalink

DOCOMO keitai datalink is a software for backing up phonebook, mail and other data in your mobile phone to a PC and editing them. It can be downloaded from NTT DOCOMO website. For details and downloading, refer to the following website. You can also access to this site from the attached CD-ROM. http://datalink.nttdocomo.co.jp/ (In Japanese only)
For details including downloading procedures, data that can be transferred, operating environments, installing procedures and operations, refer to the website above. For operations after installation, see Help in the software.

#### Point

- To perform data transfer using data communication or DOCOMO keital datalink, installation of FOMA communication configuration file from the attached CD-ROM. For details, refer to "Manual for PC Connection" in the attached CD-ROM.
- When USB mode is set to "microSD mode" or "MTP mode", installation of FOMA communication configuration file is not necessary.

## **Troubleshooting**

Check for the necessity of software update first, and update the software if necessary. ⇒P79

When checking the following items not to improve the state, contact "Repairs" on the last page of this manual (in Japanese only) or DOCOMO-specified repair office.

## Power supply and charging

- FOMA terminal cannot be turned ON.
- Is the battery pack installed correctly?
- · Is the battery exhausted?
- The FOMA terminal cannot be charged (the charging light does not turn on).
  - Is the battery pack installed correctly?
  - Are the adapter and FOMA terminal set correctly?
  - Is the AC adapter connector securely inserted to FOMA terminal or the desktop holder that came with the terminal when you use AC adapter (optional)?
  - Is AC adapter's power plug or cigarette lighter plug inserted to the outlet or cigarette lighter socket correctly?
  - Is the charging jack of FOMA terminal dirty when you use desktop holder? If it is dirty, clean with a dry cotton swab etc.
  - If you call or perform communication or operate the other function for a long time while charging, the temperature of the FOMA terminal is raised and the charging light may be turned off. In high temperature condition, the FOMA terminal may stop charging for safety. Wait until the temperature of the FOMA terminal is dropped after use of the terminal and then charge again.

#### ♣ Terminal operation

 Turning the power off or restarting automatically happens.

If the jack of battery pack is dirty, the contact may become poor and the power may shut OFF. If it is dirty, clean with a dry cotton swab etc.

- No operations are performed by key operations.
- Have you activated All lock, Omakase Lock, Side key hold or AutoKeyLock?
- The operation time provided by the battery pack is short.
  - Is your terminal left for a long time under the state of out of service area? Out of service area, much powers is consumed to search available radio waves.
  - The operation time provided by the battery pack varies by the operating environment and battery pack's deterioration.
  - The battery pack is a consumable part. Each time it is charged, time available with each charging reduces. Even the full charge state, when the operation time is too short, purchase a new battery pack of the specified type.
- The UIM is not recognized.
  - Is the UIM installed in the right direction?
    Is the UIM (blue) inserted?
- FOMA terminal etc. become hot while operating/ charging.

While operating or charging, or if you use i- $\alpha$ ppli, videophone call, 1Seg watching, etc. for a long time while charging the battery, FOMA terminal, battery pack and adapter may become hot. There is no problem about safety and continue to use it.

Clock is not correct.

In the state of turning on the power over a long period of time, the clock time may become incorrect. Set Auto time adjust of Date and time setting to "ON" and turn off/on the power in a place with strong radio wave conditions.

#### Calls

- Calls are not connected (Even when moving, "國外 (out of service area)" does not disappear or although radio waves are enough, making/ receiving calls is unavailable).
  - Turn the power off and on, or remove and attach the battery pack or the UIM.
- Even when the signal meter on your FOMA terminal indicates there are strong radio waves, due to the type of radio waves, making/receiving calls may be unavailable. Move to call again.
- Is Specified caller, Call rejection setting, Unregistered caller or 3G/GSM setting set?
- Due to the crossing of radio waves, at the crowded public places, calls/mails are crossed and the connection status may not be good. In this case, "Please wait for a while" appears and the caller hears a busy tone. Move to other place or call again at other time.
- Calls cannot be made using the keypads. Have you activated All lock, Omakase Lock, Self mode, Keypad dial lock or AutoKeyLock?

#### Osaifu-Keitai

- Osaifu-Keitai function is unavailable.
  - When removing the battery pack, IC card functions are unavailable regardless of the IC card lock settings.
  - · Have you activated Omakase Lock or IC card lock?
  - Do you place mark of FOMA terminal over IC card reader?

## **Warranty and After-Sales Service**

## Warranty

- FOMA terminal is provided with a written warranty. Make sure that you receive it. Check the written contents and items such as "販売店名・お買い上げ日 (Shop name/date of purchase)" and keep it in a safe place. If it does not contain the necessary information, immediately contact the shop where you bought it. The warranty is valid for a period of one year from the date of purchase.
- This product and all accessories are subject to change, in part or whole, for the sake of improvement without prior notice.

## **After-Sales Service**

#### ♣ When problems occur

Before requesting repair, read the section on "Troubleshooting" in this manual or in "使いかたガイド (Guide)" installed in FOMA terminal (in Japanese only). If the problem still persists, contact "Repairs" on the last page of this manual (in Japanese only).

#### If the result of inquiries indicates that a repair is required

Take your FOMA terminal to DOCOMO-specified repair office. Be sure to check the opening hours of the office before you go. Note that, repair may take longer time depending on the state of damage.

#### In the warranty period

- FOMA terminal is repaired at no charge subject to the conditions of the warranty.
- The warranty must be presented to receive warranty service. The subscriber is charged for the repair of items not covered in the warranty or repairs of defects resulting from misuse (damage of the display or connector, etc.), accident, neglect, etc. even during the warranty period.
- The subscriber is charged even during the warranty period for the repair of failures caused by the use of devices or consumable items that are not DOCOMO-specified.

#### Repairs may not be possible in the following cases.

- When judged as malfunction due to moisture at the repair office (e.g. when detected in a moisture seal reaction)
- When corrosion due to moisture, condensation, perspiration, etc. is detected, or if any of the internal boards are damaged or deformed (repairs may not be possible if external connection jack, earphone/ microphone jack or display is damaged, or the terminal outer case is lifted)
- \* Even in case that a repair is possible, since those conditions are outside the range of the warranty, a repair is charged.

#### After expiration of the warranty

All repairs that are requested are charged.

#### Replacement parts

Replacement parts (parts required to maintain the product functions) are basically kept in stock for at least 6 years after termination of production. However, repair may not be possible due to lack of repair parts etc.

#### Notes

- · Do not modify FOMA terminal or its accessories.
- Repair may be refused depending on the nature of modification.
   The following cases may be regarded as modifications.
  - A sticker etc. is put on the display or keypad part
  - FOMA terminal is embellished with adhesive material etc.
  - Exteriors are replaced with other than DOCOMO's genuine parts
- Repair of failures or damage caused by modification is charged even during the warranty period.
- Do not remove any inscription stickers attached to FOMA terminal.
   If confirmation of the inscription sticker's content is impossible,
   determination of whether specific technical standards are satisfied cannot be made. Therefore, repair may be refused.
- Function settings and information such as total calls may be cleared (reset) by malfunctions, repair or other handling of FOMA terminal. Should that happen, set up the functions again.
- If repair is executed, Bluetooth address may be changed regardless of malfunction part.
- Magnetic components are used in the earpiece, speaker, etc. of FOMA terminal. Do not allow cash cards or other devices that are vulnerable to magnetism to come into contact with the phone.
- This FOMA terminal is waterproof. However, if inside of the terminal gets wet or moist, turn the power off, remove the battery pack immediately, and bring the terminal to a repair office as soon as possible. However, repair may not be possible depending on the condition of FOMA terminal.

## **Support**

## i-mode fault diagnosis site

Using your FOMA terminal, you can check whether sending/ receiving of messages and downloading of images and melodies are normally performed. When FOMA terminal is assumed to have malfunctions as the result of the diagnosis, contact "Repairs" on the last page of this manual (in Japanese only).

# Accessing to "i モード故障診断サイト (i-mode fault diagnosis site)"

i-mode site: iMenu⇒お知らせ (Notice)⇒サポート情報 (Support information)⇒お問い合わせ (Inquiries)⇒故障・電波状況お問い合わせ先 (Checking malfunction/radio wave condition)⇒ i モード故障診断 (i-mode fault diagnosis site) (In Japanese only)

QR code for site access



- The access method may be changed without previous notice.
- · Accessing from overseas is charged.

## **Updating software**

This function allows you to connect the network and check if software in the FOMA terminal needs to be updated, and if software update is necessary, download a part of software using packet communication and update the software.

When software update is required, information is posted in "お客様サポート (user support)" on NTT DOCOMO website or iMenu (in Japanese only). Software may be updated in 3 methods: "Autoupdate", "Immediate update" and "Reserved update".

\* Software update can be done even when various data, such as a phonebook registered in FOMA terminal, camera images, downloaded data, are remaining; note that data protection sometimes cannot be secured according to the conditions of your FOMA terminal (such as malfunction, damage, or water leak). DOCOMO recommends backing up necessary data. However some data such as downloaded data may not be backed up.

#### ♣ When updating software

- Do not remove the battery pack while updating software. The update may fail.
- · Software update should be done with battery fully charged.
- Software update (downloading or rewriting) may take time.
- Making/Receiving calls, communications functions and other functions are disabled during software update (Only incoming voice calls can be answered while downloading.).

- It is recommended that software update be executed in good radio wave conditions with three bars of the antenna icon displayed and the terminal not moved. If radio wave conditions become weaker during software download or the download is stopped, retry software update in a place with strong radio wave conditions.
- When updating software, your private information concerning the FOMA terminal (model, serial number, etc.) is automatically sent to the server (the server for software update managed by DOCOMO).
   DOCOMO does not use the sent information for purposes except software update.
- When software update has failed, "Rewrite failed" appears and all operation becomes unavailable. In that case, please bring FOMA terminal to DOCOMO-specified repair office.

## Set auto-update (Default : Auto-update)

Select automatic update of software or alert notification of the necessity of update.

■ MENU ■ 8 Setting ■ 9 Other setting ■ 5 Software update ■ Authenticate ■ "Set auto-update" ■ Set required items ■ 🚳 [Set]

When "Set auto-update" is set and update is required, the update file is automatically downloaded, and (rewrite notice icon) appears on the stand-by display. Select the icon to confirm or change the start time of update.

When "Only notification" is set and update is required, update notification icon) appears.

## **Immediate update**

Select [3] (update notification icon) on the stand-by display or an item on the menu.

Immediate update may not be available when the server is busy. <Example> Selecting the notification icon to update

- Select ♀ (update notification icon) ► "Yes" ► Authenticate
- "Now update" After about 5 seconds, download starts automatically

**Canceling download**: On the downloading screen. ●

When the server is busy, a selection screen prompts you to reserve the update time or cancel update.

3 Download is complete and after about 5 seconds, software update starts automatically ▶ When update is completed, restart is automatically made ▶ "OK"

## Reserved update

When download takes time, or the server is busy, reserve the update time.



<Software update screen>


<Example> Selecting from displayed options

1 On Software Update screen, "Reserve"

Available dates for reservation are shown by the time of the server.

Select preferred day and time ► "Yes" ► "OK"

Selecting "Others" allows you to select other date and time options than displayed ones. When setting is completed, [4] (reservation icon) appears on the stand-by display.

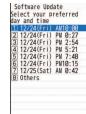

<Preferred date and time selection screen>

## **Checking software update reservation**

You can check or change the reserved date and time.

■ MENU ■ 8 Setting ■ 9 Other setting ■ 5 Software update ■ Authenticate ■ "Update"

A reservation confirmation screen appears.

2 Check the reservation ▶ "OK"

Point

Changing the reservation: On a reservation confirmation screen,

"Change" ▶ Select a date ▶ Select a time period ▶ Select a date and time ▶ "Yes" ▶ "OK"

Canceling the reservation: On a reservation confirmation screen, "Cancel"

"Yes" > "OK"

## **Scanning function (Security Scan)**

For the data or programs that are imported to FOMA terminal, this function detects data and deletes data or inhibits activation of applications that may cause troubles.

- The Scanning function provides a certain countermeasure against invasion of data which causes some trouble in the mobile phone, when viewing website, receiving messages, etc. Note that, if pattern definition corresponding to specific troubles has not been downloaded to the mobile phone or such pattern definition does not exist, this function cannot prevent those troubles from occurring.
- Different pattern definition is used for different FOMA terminal models. Note that DOCOMO may stop distribution of pattern definition for models that have been on the market for 3 years or more.

#### Update pattern definition

Update pattern definition first, then keep the pattern definition up-to-date.

## Set auto-update

You can set FOMA terminal so that pattern definitions can be automatically updated.

11 MENU ▶ 8 Setting ▶ 6 Lock/Security ▶ 6 Scanning function ▶ 2 Set auto-update ▶ "Enable" ▶ "Yes" ▶ "Yes" ▶ "OK"

When the Auto-updating pattern definitions is executed,  $\mathbb{Q}$  or  $\mathbb{Q}$  appears on the stand-by display.

Warning level	Scan result screen	Actions
0	Problem detected. Operation may not ru n properly	"OK" : Continue processing of the started application
	OK Detail	
1	Problem detected. Operation may not ru n properly. Cancel operation?	"Yes": Stop processing of the application that may cause troubles "No": Continue processing of the started
•	Yes No Detail	application
2	Problem detected. Operation may not ru n properly. Canceling operation	"OK" : Stop processing of the application that may cause troubles
	OK Detail	
3	Problem detected. Operation may not ru n properly. Delete data?	"Yes": Delete data that may cause troubles "No": Stop processing of the application that may cause troubles
	Yes No Detail	
4	Problem detected. Operation may not ru n properly. Deleting data	"OK" : Delete data that may cause troubles
	OK Detail	

\* Selecting "Detail" on each screen displays a list of names of the detected problem elements. When 6 or more problem elements have been detected, the names of the 6th and subsequent problem names are omitted.

## Introduction of options and related devices

Combining FOMA terminal with optional accessories supports a wide variety of uses from personal use to business use. Some products are unavailable depending on the area.

For details, contact a sales outlet such as docomo Shop. For details about the optional devices, refer to the instruction manual for each device.

- · Battery Pack F19
- Back Cover F54
- · Feeling piece F01
- FOMA AC Adapter 01/02\*1
- Desktop Holder F30
- Carry Case L 01
- · Carry Case 02
- Flat-plug Stereo Earphone Set P01\*2
- Flat-plug Earphone/Microphone with Switch P01\*2/P02\*2
- Earphone Plug Adapter for External connector terminal 01
- Earphone Plug Adapter 01
- Stereo Earphone Set 01
- Earphone/Microphone 01
- FOMA USB Cable with Charge Function 02\*3
- In-Car Holder 01
- FOMA DC Adapter 01/02
- In-Car Hands-Free Kit 01\*4
- FOMA In-Car Hands-Free Cable 01
- FOMA USB Cable\*3
- FOMA Dry Battery Adapter 01
- FOMA Portable Charging Adapter 01/02
- Earphone Plug Adapter P001\*2

- Earphone/Microphone with Switch P001\*5/P002\*5
- Stereo Earphone Set P001\*5
- Remote controller with microphone F01\*2
- Earphone Terminal P001\*5
- · Wireless Earphone Set P01
- Wireless Earphone Set 02
- · Bluetooth Headset F01
- AC adapter for Bluetooth Headset F01
- FOMA AC Adapter 01 for Global use\*1
- FOMA Indoor Booster Antenna\*6
- FOMA Indoor Booster Antenna (Stand Type)\*6
- Bone conduction microphone/receiver 01\*2/02
- \*1 When using FOMA terminal overseas, use the adapter plug that is suitable for use in your travel destination. Also, do not charge the battery with a transformer for overseas travel.
- \*2 Earphone Plug Adapter for External connector terminal 01 is required to connect to F-02C.
- \*3 If you use USB HUB, operations may not be performed correctly.
- \*4 FOMA In-Car Hands-Free Cable 01 is required to charge F-02C.
- \*5 Earphone Plug Adapter for External connector terminal 01 and Earphone Plug Adapter P001 are required to connect to F-02C.
- \*6 Use this only in Japan.

- Menu list for the case Select startup menu is set to "Basic menu" is described.
- Menus indicated in red can be restored to the default by executing Reset (including the menu whose partial sub content menu will be
  reset to the default).

_		_			
Mail		i-mode/web		i-αppli setting	Sound effect volume
Inbox	<del>-</del>	iMenu Search		<u> </u>	Software info disp.
Outbox		Bookmark		<del></del>	Auto-start
Unsent messages		Screen Memo		<del></del>	i-Widget settings
Compose new message	e	Browsing history		<del></del>	AUTO-GPS preferred setting
Create new Decome-Ar	nime	Enter URL	Enter URL	<del></del>	Sort software
Decome-Template	Deco-mail		URL enter history	<del></del>	Display light time
	Decome-Anime	i-Channel	i-Channel list		Brightness
Compose new SMS	<u> </u>		Ticker display set.		Vibration mode
Check new mail/messa	ge		Reset i-Channel		i-αppli shortcuts
Check new SMS		RSS reader	<b>"</b>		i-αppli power saver
Receive option		Access shortcuts			i-αppli call DL set
Mail Setting	Receive setting	i-mode/web setting	i-mode Browser Set.		About i-αppli
	Display		FB settings		
	Edit signature		Common Settings	— ■CAMERA/TV/I	MUSIC
	Common phrases/Store word		Check i-mode setting	Camera	Still image shooting
	Check new mail/message		Reset i-mode setting		Movie shooting
	setting	Search engine			Still image album
	Reply setting	Full Browser Home			Movie play
	Auto-reply			1Seg	Activate 1Seg
	Mail group	■i-αppli			Program guide
	Blog/Movie/SNS post setting	Software list			1Seg image/video
	Address/Spam setting	i-αppli call logs			TV timer list
	Auto save setting when editing	i-αppli run information			Recording result
	SMS settings				TVlink
	Early warning "Area Mail"				Channel setting
Matter	setting				User setting
Mail logs	Sent msg. log			MUSIC Player	•
	Received msg. log				

		_		_	
Music&Video Channel		Pedometer/ACT monitor	Steps/Activity/Calories info	Record message/Voice memo	Record message list
			Set Pedometer/Activity		Voice memo list
■ Data Box		_	monitor		Record voice memo
My picture		Data Security Service	Data check/Download		Record message
MUSIC		<del>_</del>	Update phonebooks etc.	Dialed/Received calls	Received calls
Music&Video Channel		<del>_</del>	Update images		Redial
i-motion/Movie		<del>_</del>	Update setting information	Dial/Receive call setting	Nuisance call blocking service
Melody		<del>_</del>	Detailed setting/Exchanging		Caller ID request
My document		microSD	history		Caller ID notification
Kisekae Tool		— Microso — Guide			Arrival call act
Machi-chara			In Dis (Caldes Makila Inc.		Dial call detailed setting
Chara-den		<ul><li>Dictionary</li></ul>	Jpn Dic (Gakken Mobile Jpn Dic)		Receive call detailed setting
1Seg		<del>_</del>	JE Dic (Gakken Mobile JE Dic)		In-call detailed setting
Illumination		<del>_</del>	EJ Dic (Gakken Mobile EJ Dic)		Headset function setting
Other		<del>_</del>	Todav's trivia		Call rejection setting
My collection		<del>_</del>	Today in history		Missed call notification
		Countdown timer	,		Sound & Image
Tool		High-pitched alarm			Reject/Accept call
Bar code reader		Mirror		Videophone setting	V.phone dialing img.
Calculator		Common phrases/Store word	Common phrases		Videophone receiving
Alarm		<u> </u>	Store word		Data session arv. Act
Infrared/iC communications	Receive infrared data	Download dictionary			Operation
	Send all infrared data	Contact DOCOMO	ドコモ総合案内・受付		Image setting
	All iC transmission		ドコモ故障問合せ		Notify switchable mode
	Data exchange settings	<del>_</del>	海外紛失·盗難等		External device
Schedule		<del>_</del>	海外故障	Call duration/charge	Call charge
Memo			7-22 THAT I		Call duration
Voice recorder		■TEL function			Reset call cost
Bluetooth	Accept registered	Phonebook	Search phonebook		Call cost limit
	Receive data	_	Add to phonebook		Hide call cost icon
	Send all via BT	<del>_</del>	UIM operation	Chaku-moji	Create message
	List/cnnct/discnct	<del>_</del>	Add group		Message display settings
	Register new dev		U F		
	Bluetooth Power ON/OFF	<del>_</del>			

Bluetooth setting

	T
2in1	2in1 mode switching
	Ph.book 2in1 setting
	Stand-by display setting
	Call/receive settings
	2in1 function OFF
	Receive avoidance
Melody call	•
Voice mail service	Activate
	Ring time
	Deactivate
	Check setting
	Play messages
	Setting
	Check messages
	Tone/Vibration message notification
	Delete icon
	Setting for videophone
Other network service	Call forwarding
	Call waiting
	English guidance
	Remote access
	Multi Number
	Dual network
	Additional service
	OFFICEED
Fake call	Activate
	Alert&Time settings
	Alert&Time settings

Setting		Lock/Security
Screen/Display	Kisekae Tool setting	_
	Stand-by display setting	_
	Color theme setting	_
	Each display setting	_
	Machi-chara setting	_
	Menu preference	_
	Auto light on	_
	Privacy view level	_
Sound/Vibration/Manner	Ring tone	_
	Other sounds	_
	Adjust volume	
	Vibration mode	Battery
	Silent mode	_
	BGM play	
	Machi-chara chat setting	External connection
Backlight/Illumination	Display light	_
	Light alert	_
	KeypadILLUM settings	<u> </u>
Text display/input	Font size	
	Font style	Other setting
	Text input	_
	バイリンガル	<u> </u>
	Discreet display mode	<u> </u>
Time	Date and time setting	_
	Clock format	<del>_</del>
	Auto power ON/OFF	_
	Time tone setting	_
	Phone refresh	

	Lock/Security	Locks		
	_	Privacy mode		
ting	_	Code & Fingerprint		
	_	Security indicator		
	=	Kid-safe mode		
	_	Scanning function		
	_	Password manager		
	_	microSD password setting		
	_	UIM setting		
	_	Call rejection setting		
	_	IC card lock		
	<del>-</del>	Caller/Sender info		
	Battery	eco mode setting		
	_	Battery level		
	_	Battery icon setting		
ing	External connection	USB mode		
	_	Bluetooth		
	_	Femtocell		
IS	_	Data exchange settings		
	_	Backup/Restore		
	Other setting	Self mode		
	_	Initial setting		
	_	Delete all data		
е	_	Reset		
	=	Software update Check remote setting		
	=			
	_	Memory status		
	_	Side key shortcut		
	=	Motion sensor TempHmd sensor set.		
	- 			
	Kisekae/Themes	Kisekae Tool		
		Style theme		
		Timed theme		
		Manner support		

Map/Overseas	
Map	
Navigation	
imadoco search	imadoco kantan search
madoo odaron	imadoco search
i-area	inidadeo scaren
GPS αppli list	
Position location/Location	Position location
notification	Notify location
Map&GPS setting/history	Loc. history
,	Map setting
	GPS button setting
	Request permit/deny
	AUTO-GPS
	Positioning mode setting
	LCS clients list
	Service setting
	Service settings
	Light color/Alert
Overseas network search	3G/GSM setting
	Network search setting
	PLMN setting
	Display operator name setting
	Display area status
	Re-search icon display setting
Overseas setting	Inquiries(overseas)
	Barring incoming call when
	roaming
	Missed call notification for roaming
	Roaming guidance
	International dialing assist
	i-mode service setting
	Mail/Message usage setting
	Network service

### i-concier i-concier Profile Profile Osaifu-Keitai IC card content DCMX ToruCa IC card lock setting IC card lock Lock preference Timed lock Programed activation IC lock(power-off) Setting ToruCa from IC card ToruCa from 1Seg ToruCa duple check ToruCa auto-read ToruCa auto display ToruCa sound effect Check IC owner Change IC owner Search by i-mode

Overseas user's guide

# **Main specifications**

## Phone

Product nam	·•	F-02C		
	ie .	Approx. 111 mm (H)X51 mm (W)X13.2 mm (T) (Thickest part : Approx. 16.9 mm)		
Size				
Weight		Approx. 122 g (with battery) Approx. 123 g (with battery and Feeling piece)		
Continuous stand-by time*1, 2, 3	FOMA/3G	Stationary (Auto) : Approx. 580 H Moving (Auto) : Approx. 380 H Moving (3G static) : Approx. 400 H		
	GSM	Stationary (Auto) : Approx. 260 H		
Continuous call time*2,	FOMA/3G	Voice call : Approx. 210 min. Videophone call : Approx. 110 min.		
3, 4	GSM	Approx. 250 min.		
1Seg watchi	ng time <sup>*2, 5</sup>	Approx. 300 min. (1Seg eco mode : Approx. 360 min.)		
Charging tin	ıe <sup>*6</sup>	AC adapter : Approx. 140 min. DC adapter : Approx. 140 min.		
Display	Туре	Display : TFT 16,777,216 colors Sub-display : Mono-color organic electro- luminescence		
	Size	Display : Approx. 3.3 inches Sub-display : Approx. 0.8 inches		
	Number of pixels	Display : 409,920 pixels (480×854 dots) Sub-display : 3,744 pixels (39×96 dots)		
Image pickup	Туре	Main-camera : CMOS Sub-camera : CMOS		
device	Size	Main-camera : 1/3.2 inches Sub-camera : 1/10.0 inches		
	Number of effective pixels	Main-camera : Approx. 12,200,000 pixels Sub-camera : Approx. 320,000 pixels		

Camera section	Number of recording pixels (Max.)	Main-camera : Approx. 12,000,000 pixels Sub-camera : Approx. 310,000 pixels
	Zoom (digital)	Main-camera : Up to approx. 34.0x (still image), up to approx. 16.0x (moving picture) Sub-camera : Up to approx. 2.0x
Recording section	Savable still images*7	Up to approx. 1,300 images (default)
	Continuous shooting of still images	2 - 7
	File format for still image	JPEG
	Moving picture shooting time*8	Up to approx. 34 min. (save to phone) Up to approx. 60 min. (save to 2GB microSD card)
	Moving picture file format	MP4
	1Seg recording time	Up to approx. 105 min. (save to phone/ default) Up to approx. 640 min. (save to 2GB microSD card)
Playing music	Continuous play time	i-motion : Approx. 1,012 min.*9 Chaku-uta full : Approx. 4,208 min.*9,10 WMA file : Approx. 3,903 min.*10 Music&Video Channel (sound) : Approx. 4,208 min.*10 Music&Video Channel (moving picture) : Approx. 329 min.
Recording size	Chaku-uta/ Chaku-uta full	Approx. 346 MB

- \*1 Continuous stand-by time indicates the estimated time when FOMA terminal is closed and able to receive radio waves normally. Stationary continuous stand-by time indicates the average utilization time FOMA terminal is closed and able to receive radio waves normally remains stationary. Moving continuous stand-by time indicates the average utilization time when FOMA terminal is closed and able to receive radio waves normally with a combination of "stationary". "moving", and "out of service area" status.
- \*2 Call, communication or stand-by time may be reduced to about half, or 1Seg watching time may be reduced due to battery pack charging condition, function settings, operating environment such as ambient temperature, radio wave conditions in the area of use (the radio waves are weak or absent), etc.
- \*3 The call, communication or stand-by times are reduced by making i-mode communications, creating i-mode mail, activating downloaded i-αppli, making i-αppli stand-by display settings, downloading or playing Music&Video Channel program, playing tune with MUSIC Player, using AUTO-GPS, activating or recording 1Seg, or Bluetooth connection etc.
- \*4 Continuous call time indicates the approximate time that the phone can send or receive radio waves normally.
- \*5 1Seg watching time indicates the approximate watching time with receiving radio waves normally and using Stereo Earphone Set 01 (optional).
- \*6 Charging time indicates the estimated time for charging an empty battery with FOMA terminal turned OFF. Charging with FOMA terminal turned ON or charging in lower temperature requires longer time.
- \*7 The number of savable still images is based on "QVGA (320×240)" in Select size, "NORMAL" in Image quality and 25 Kbytes in File size.
- \*8 The moving picture shooting time means allowable time for one movie. The number is based on "QCIF (176X144)" in Select size and "NORMAL" in Image quality. Varies depending on the moving picture to be recorded.
- \*9 AAC format files.
- \*10 Background playing is available.

#### **■**Battery Pack

Quality	Battery Pack F19
Battery used	Li-ion battery
Nominal voltage	3.7V
Nominal capacity	820mAh

## Savable/Recordable/Protectable number

	Туре	Savable/Recordable number	Protectable number
Phoneboo	ok <sup>*1</sup>	Up to 2,000	_
UIM phon	ebook	Up to 50	_
Kisekae T	ool <sup>*1</sup>	Up to 50	_
Mail*1, 2	Received messages	Up to 2,500	Up to 2,500
	Sent messages	Up to 500	Up to 500
	Unsent messages	Up to 500	Up to 500
Area Mail		Up to 30	_
Bookmark		Up to 200	_
Screen m	emo <sup>*1, 3</sup>	Up to 400	Up to 400
Music*1	Chaku-uta full	Up to 100	_
	Uta-moji Lyrics	Up to 100	_
i-αppli <sup>*1,</sup>	4	Up to 100	_
Images*1,	, 5	Up to 3,000	_
Moving p	icture/i-motion*1	Up to 200	_
Melodies <sup>3</sup>		Up to 500	_
Video rec	orded in 1Seg *1	Up to 10	_
Note/Sch	edule <sup>*1, 6</sup>	Up to 2,600	_

- \*1 Depending on the size of data or usage status of common memory space, the actual number of items that can be saved and recorded may be fewer.
- \*2 The total number of i-mode mail and SMS.
- \*3 The total number of i-mode and Full Browser.
- \*4 Total number of i-αppli and Message i-αppli. Up to 5 items of Message i-αppli can be saved.
- \*5 Total number of images and still images recorded in 1Seg.
- \*6 Total number of notes/schedules, schedules in i-schedule and watching/recording reservation. Up to 100 items of watching/recording reservation in total can be saved.

## **Specific Absorption Rate (SAR) of Mobile Phones**

This model F-02C mobile phone complies with Japanese technical regulations and international guidelines regarding exposure to radio waves.

This mobile phone was designed in observance of Japanese technical regulations regarding exposure to radio waves (\*1) and limits to exposure to radio waves recommended by a set of equivalent international guidelines. This set of international guidelines was set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health condition.

The technical regulations and international guidelines set out limits for radio waves as the Specific Absorption Rate, or SAR, which is the value of absorbed energy in any 10 grams of tissue over a 6-minute period. The SAR limit for mobile phones is 2.0 W/kg. The highest SAR value for this mobile phone when tested for use at the ear is 0.670 W/kg. There may be slight differences between the SAR levels for each product, but they all satisfy the limit.

The actual SAR of this mobile phone while operating can be well below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum required to reach the network. Therefore in general, the closer you are to a base station, the lower the power output of the device.

This mobile phone can be used in positions other than against your ear. This mobile phone satisfies the international guidelines when used with a carrying case or a wearable accessory approved by NTT DOCOMO, INC. (\*2) In case you are not using the approved accessory , please use a product that does not contain any metals, and one that positions the mobile phone at least 1.5 cm away from your body.

The World Health Organization has stated that present scientific information does not indicate that there are harmful effects attributed to the use of mobile devices. They recommend that if you are worried about your exposure then you can limit your usage or simply use a hands-free kit to keep the mobile device away from the head and body.

Please refer to the WHO website if you would like more detailed information. http://www.who.int/docstore/peh-emf/publications/facts\_press/fact\_english.htm Please refer to the websites listed below if you would like more detailed information regarding SAR.

Ministry of Internal Affairs and Communications Website: http://www.tele.soumu.go.jp/e/sys/ele/index.htm

Association of Radio Industries and Businesses Website: http://www.arib-emf.org/index02.html (in Japanese only)

NTT DOCOMO, INC. Website: http://www.nttdocomo.co.jp/english/product/sar/FUJITSU LIMITED Website: http://www.fmworld.net/product/phone/sar/

- \*1 Technical regulations are defined by the Ministerial Ordinance Related to Radio Law (Article 14-2 of Radio Equipment Regulations).
- \*2 Regarding the method of measuring SAR when using mobile phones in positions other than against the ear, international standards (IEC62209-2) were set in March of 2010. On the other hand, technical regulation is currently being deliberated on by national council. (As of September, 2010)

## **Declaration of Conformity**

• • •

The product "F-02C" is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1(a), 3.1(b) and 3.2. The Declaration of Conformity can be found on http://www.fmworld.net/product/phone/doc/.

This mobile phone complies with the EU requirements for exposure to radio waves.

Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR\* limits\*\* for exposure to radio-frequency(RF) energy, which SAR\* value, when tested for compliance against the standard was 0.715W/Kg. While there may be differences between the SAR\* levels of various phones and at various positions, they all meet\*\*\* the EU requirements for RF exposure.

\* The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.

- \*\* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/Kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- \*\*\* Tests for SAR have been conducted using standard operation positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

# Federal Communications Commission (FCC) Notice

- This device complies with part 15 of the FCC rules.
   Operation is subject to the following two conditions:
  - 1 this device may not cause harmful interference, and
  - ② this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications made in or to the radio phone, not expressly approved by the manufacturer, will void the user's authority to operate the equipment.

## **FCC RF Exposure Information**

This model phone meets the U.S. Government's requirements for exposure to radio waves.

This model phone contains a radio transmitter and receiver. This model phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy as set by the FCC of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions as accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output level of the phone. Before a phone model is available for sale to the public, it must be tested and certified to prove to the FCC that it does not exceed the limit established by the U.S. government-adopted requirement for safe exposure. The tests are performed on position and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC, when tested for use at the ear, is 0.834W/kg, and when worn on the body, is 0.369W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. government requirements.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Equipment Authorization Search section at http://www.fcc.gov/oet/ea/fccid/ (please search on FCC ID VQK-F02C).

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and which positions the handset at a minimum distance of 1.5 cm from the body.

\* In the United States, the SAR limit for wireless mobile phones used by the general public is 1.6 Watts/kg (W/kg), averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

occur in a particular installation.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Important Safety Information**

#### AIRCRAFT

Switch off your wireless device when boarding an aircraft or whenever you are instructed to do so by airline staff. If your device offers flight mode or similar feature consult airline staff as to whether it can be used on board.

#### DRIVING

Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

#### HOSPITALS

Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

#### PETROL STATIONS

Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

#### INTERFERENCE

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

#### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pace maker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and does not carry it in a breast pocket.

#### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

#### For other Medical Devices :

Please consult your physician and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

## **Export Administration Regulations/Intellectual Property Right**

## **Export Administration Regulations**

This product and its accessories may be under coverage of the Export Administration Regulations of Japan ("Foreign Exchange and Foreign Trade Control Laws" and the related laws and regulations). When exporting this product and its accessories, take necessary procedures on your responsibility and expense. For details, contact Ministry of Economy, Trade and Industry of Japan.

## **Intellectual Property Right**

## Copyrights and portrait rights

Except for the case protected by copyright laws such as personal use, use of FOMA terminal to reproduce, alter, or publicly transmit recorded pictures or sounds, or copyrighted text, images, music or software downloaded from websites without the copyright holder's authorization is prohibited. Note that taking photos or recordings at some demonstrations, performances or exhibitions may be prohibited even when only for personal use. Avoid taking pictures of others with FOMA terminal without their consent or disclosing recorded pictures of others without their consent to general public through Internet websites etc., because they may infringe on portrait rights.

#### **Trademarks**

Company and product names mentioned in this manual are trademarks or registered trademarks of their respective holders.

- "FOMA", "i-mode", "i-αppli", "i-motion", "Deco-mail", "Chara-den", "ToruCa",
   "mopera", "WORLD CALL", "DCMX", "iD", "WORLD WING", "OFFICEED",
   "2in1", "docomo STYLE series", and logos of "FOMA", "i-mode", "i-αppli",
   "Music&Video Channel" and "iC" are trademarks or registered trademarks of
   NTT DOCOMO.
- Free Dial logo mark is a registered trademark of NTT Communications Corporation.
- "Catch Phone (Call waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- McAfee® is registered trademarks or trademarks of McAfee, Inc. and/or its affiliates in the US and/or other countries.
- G-GUIDE, G-GUIDE MOBILE and their logos are registered trademarks in Japan of U.S. Gemstar-TV Guide International, Inc. and/or its affiliates.
- Contains Adobe<sup>®</sup> Flash<sup>®</sup> Lite<sup>®</sup> and Adobe Reader<sup>®</sup> Mobile technology by Adobe Systems Incorporated.

Adobe Flash Lite Copyright  $^{\!\odot}$  2003-2010 Adobe Systems Incorporated. All rights reserved.

Adobe Reader Mobile Copyright<sup>©</sup> 1993-2010 Adobe Systems Incorporated. All rights reserved.

Adobe, Adobe Reader, Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.




9:11

 This product contains NetFront Browser, NetFront Document Viewer and NetFront Sync Client of ACCESS CO., LTD.


ACCESS, the ACCESS logo and NetFront are registered trademarks or trademarks of ACCESS CO., LTD. in the United States, Japan and/or other countries.

Copyright<sup>©</sup> 2010 ACCESS CO., LTD. All rights reserved.

 Powered by JBlend<sup>™</sup> Copyright 2002-2010 Aplix Corporation. All rights reserved.

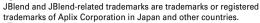

- kappa is a registered trademark of FeliCa Networks, Inc.
- QR code is a registered trademark of Denso Wave Inc.
- microSDHC Logo is a trademark of SD-3C, LLC.
- "Multitask" is a registered trademark of NEC Corporation.
- QuickTime is a registered trademark of Apple Inc., in the US and other countries.
- Microsoft<sup>®</sup>, Windows<sup>®</sup>, Windows Vista<sup>®</sup>, Windows Media<sup>®</sup> and PowerPoint<sup>®</sup> are trademarks or registered trademarks of "Microsoft Corporation" in the US and other countries.
- Microsoft Excel and Microsoft Word are product names of Microsoft Corporation in the U.S.A. In this manual, they may be described as Excel and Word.
- The abbreviations of operating systems (Japanese versions) below are used in this manual.
  - Windows 7 stands for Microsoft<sup>®</sup> Windows<sup>®</sup> 7 (Starter, Home Basic, Home Premium, Professional, Enterprise and Ultimate).
  - Windows Vista stands for Windows Vista<sup>®</sup> (Home Basic, Home Premium, Business, Enterprise and Ultimate).
- Windows XP indicates the Microsoft<sup>®</sup> Windows<sup>®</sup> XP Professional operating system or Microsoft<sup>®</sup> Windows<sup>®</sup> XP Home Edition operating system.
- · Google and Google Map for Mobile are trademarks of Google Inc.
- The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by NTT DOCOMO, Inc. is under license. Other trademarks and trade names are those of their respective owners.
- "CROSS YOU" is a trademark of Sony Corporation.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- iWnn of OMRON SOFTWARE Co., Ltd. is used for conversion methods for Japanese language, and for phrase prediction methods for English.
   iWnn© OMRON SOFTWARE Co., Ltd. 2008-2010 All Rights Reserved.
- "AXIS Font" is a trademark of AXIS Inc., and the "AXIS" font is a font developed by Type Project Inc.

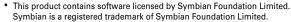

- "Privacy mode" is a registered trademark of FUJITSU LIMITED.
- "Uni-Type" is a universal designed font jointly-developed by LIM Corp., Ltd. and Faculty of Engineering, Chiba University.
   Uni-Type is a registered trademark of LIM Corp., Ltd.
- "丸ゴシック (Maru Gothic)", "レイミン (Reimin)" and "丸フォーク (Maru Fork)" are provided by Morisawa & Company, Ltd. and the copyrights of these font data belong to them. Names of "レイミン" and "丸フォーク" are their trademarks.
- IrSimple™, IrSS™ and IrSimpleShot™ are trademarks of Infrared Data Association®.
- Infrared Data Association

Blu-ray Disc and its logo are trademarks.

Migro

 Other company and product names mentioned in this manual are trademarks or registered trademarks of their respective holders.

#### Others

- This product contains a module developed by the Independent JPEG Group.
- FeliCa is a contactless IC card technology developed by Sony Corporation.
   FeliCa is a registered trademark of Sony Corporation.
- This product is equipped with the technologies of GestureTek, Inc. Copyright<sup>©</sup> 2006-2010, GestureTek, Inc. All Rights Reserved.
- "学研モバイル国語辞典 (Gakken Mobile Jpn Dic)", "学研モバイル和英辞典 (Gakken Mobile JE Dic)", "学研モバイル英和辞典 (Gakken Mobile EJ Dic)", "今 日は何の日 (Today's trival", "今日の歴史 (Today in history)" are copyrighted by GAKKEN CO., LTD.
- This product is licensed based on MPEG-4 Visual Patent Portfolio License.
   The use of MPEG-4 Video Codec function is allowed for personal and nonprofit use only in the cases below.
  - Recording moving pictures and i-motion that conform to MPEG-4 Visual Standard (hereinafter referred to as MPEG-4 Video)
  - Playing MPEG-4 Videos recorded personally by consumers not engaged in profit activities
  - Playing MPEG-4 Video supplied from the provider licensed from MPEG-LA For further utilizing such as promotion, in-house use or profit-making business, please contact MPEG LA, LLC in U.S.
- Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When downloading licenses for protected content, you agree that Microsoft may include a "Revocation List" with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you cannot access a content that requires the upgrade.
- The HMM-Based Speech Synthesis Engine embedded in this product uses the Simplified BSD License.

The HMM-Based Speech Synthesis System (HTS) hts\_engine API developed by HTS Working Group http://hts-engine.sourceforge.net/

Copyright© 2001-2010 Nagoya Institute of Technology, Department of Computer Science 2001-2008 Tokyo Institute of Technology, Interdisciplinary Graduate School of Science and Engineering All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the HTS working group nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## Index

A		Desktop Holder		Information	
AC adapter	22	Dictionaries		Infrared communication	
Accept/Reject call	20	Display light time	33	Initial setting	
Adjust volume		Displaying phone number	24	Input mode	29
After-Sales Service		Displaying web pages DOCOMO keitai datalink	53	International calls	
Alarm		DOCOMO keitai datalink	75	International Roaming	
All lock		_		i-Widget	65
Attachments		E		••	
AUTO-GPS		Early warning "Area Mail"	52	K	
AutoKeyLock		eco mode		Keypad dial lock	37
AutoreyLock	30	Emergency call	46	Keypad sound	31
В		<b>3</b> ,		Kisekae Tool	34
		F			
Back Cover		Feeling piece	6	L	
Backup at once		FeliCa (Osaifu-Keitai)	67	Light	26
Bar code reader		Fingerprint authentication	37	Light alert	
Battery pack	22	Focus mode		Listening volume	
Bluetooth function		Font size		Lock on close	38
Bookmark		Full Browser		Lock when immobile	
Browsing i-mode website	53				
С		G		M	
	45	G GPS function	57	Machi-chara setting	33
Call Forwarding Service				***	
Call Forwarding Service	39	GPS function	28	Machi-chara setting	41
Call Forwarding Service Call rejection setting. Call Waiting Service	39 45	GPS function	28	Machi-chara setting Making a call	41 41
Call Forwarding Service	39 45 42	GPS function	28	Machi-chara setting Making a call Making a videophone call	41 41 57
Call Forwarding Service Call rejection setting	39 45 42 64	GPS function	28 27	Machi-chara setting	41 57 83 27
Call Forwarding Service Call rejection setting Call Waiting Service Caller ID notification Chaku-uta full Channel list	39 45 64 61	GPS function Guide Guide area  I i-αppli	28 27	Machi-chara setting	
Call Forwarding Service Call rejection setting	39 45 42 64 61	GPS function Guide Guide area  I i-αppli IC card lock		Machi-chara setting Making a call Making a videophone call Map Map Menu List Menu operation microSD card microSD password	
Call Forwarding Service Call rejection setting Call Waiting Service Caller ID notification Chaku-uta full Channel list Character entry Charging		GPS function Guide Guide area  i-αppli IC card lock iC transmission		Machi-chara setting Making a call Making a videophone call Map Map Menu List Menu operation microSD card microSD password	
Call Forwarding Service Call rejection setting		GPS function Guide Guide area  I i-αppli IC card lock iC transmission i-Channel		Machi-chara setting Making a call Making a videophone call Map Menu List Menu operation microSD card microSD password Moving picture display MUSIC Player	
Call Forwarding Service Call rejection setting Call Waiting Service Caller ID notification Chaku-uta full Channel list Character entry Charging		GPS function Guide Guide area  I i-αppli IC card lock IC transmission I-Channel Icon		Machi-chara setting Making a call Making a videophone call Map Map Menu List Menu operation microSD card microSD password Moving picture display	
Call Forwarding Service Call rejection setting		GPS function Guide Guide area  I i-αppli IC card lock iC transmission i-Channel lcon i-concier		Machi-chara setting Making a call Making a videophone call Map Map Menu List Menu operation microSD card microSD password Moving picture display MUSIC Player Music&Video Channel	
Call Forwarding Service Call rejection setting	39 45 42 64 61 29 23 26 51	GPS function Guide Guide area  i-αppli IC card lock iC transmission i-Channel lcon i-concier Immediate update	28 27 65 38 74 56 25 68	Machi-chara setting Making a call Making a videophone call Map Menu List Menu operation microSD card microSD password Moving picture display MUSIC Player	
Call Forwarding Service Call rejection setting	39 45 42 64 61 29 23 26 51	GPS function Guide Guide area  I i-αppli IC card lock iC transmission i-Channel lcon i-concier		Machi-chara setting Making a call Making a videophone call Map Map Menu List Menu operation microSD card microSD password Moving picture display MUSIC Player Music&Video Channel	
Call Forwarding Service Call rejection setting	39 45 42 64 61 29 23 26 51	GPS function Guide Guide area  i-αppli Ic card lock ic transmission i-Channel Icon Iconcier Immediate update Immed fault diagnosis site	28 27 65 38 74 56 25 68 80 78	Machi-chara setting	41 41 41 57 83 36 60 64 63 57 57
Call Forwarding Service Call rejection setting	39 45 42 64 61 29 23 26 51	GPS function Guide Guide area  I i-αppli IC card lock IC transmission I-Channel Icon I-concier Immediate update I-mode fault diagnosis site I-mode password I-motion/Movie	28 27 65 38 74 56 68 80 78 36 66	Machi-chara setting Making a call Making a videophone call Map Map Menu List Menu operation microSD card microSD password Moving picture display MUSIC Player Music&Video Channel	41 41 57 83 83 27 72 36 60 64 63 57 36
Call Forwarding Service Call rejection setting	39 45 42 64 61 29 23 26 51	GPS function Guide Guide area  I i-αppli IC card lock IC transmission I-Channel Icon I-concier Immediate update I-mode fault diagnosis site I-mode password	28 27 65 38 56 56 25 68 80 78 36 66 66	Machi-chara setting Making a call Making a videophone call Map Menu List Menu operation microSD card microSD password Moving picture display MUSIC Player Music&Video Channel  Navigation Network security code	41 41 57 83 83 27 72 36 60 64 63 57 36

	0
On hold Open assist butto Options and relat Osaifu-Keitai	
	Р
Personal data loc Phonebook Phonebook Pictogram PIN1/PIN2 code Position location Privacy view Profile Program setting Public mode	75 k 37 41, 52 29 35 35 32 24 63 44
	Q
Quick dial Quick schedule	
	R
Received calls Receiving a call Receiving a video Receiving i-mode Record message . Recording reserving Redial Remote customiz	52 41 43 phone call 43 mail 51 44 ation 62 41 ation 40 ion 40

Restricting usage	
Ring alert delay	
Ring tone	30
NSS reader	54
S	
SAR	89
Savable/Recordable/Protectable number	
Save login info	54
Saving mode options	34
Scanning function	
Schedule	
Screen Memo	
Security code	
Security Scan	81
Select startup menu	32
Self mode	3/
Sending i-mode mails	49
Sending SMS	49
Set auto-update7	
Setting mail sort rule	
Shooting moving pictures	59
Side key hold	55
Silent mode	3/
Smiley	
Specification	
Specified caller	
Stand-by display setting	32
Still image display	
Sub-display	
Terminal security code	
Terminal security code	35
Text Input	23
Troubleshooting	76
U	
UIM	
Unregistered caller	
Updating software	

URL entryUSB mode	54 75
V	
Voice Mail Service	45
W	
Warranty	62 64 42
Numeric	
1Seg 1Seg alarm 2-touch 5-touch	69 29

#### Please ask checking/changing subscription detail, application of various services and request of various information materials online.

From i-mode

(Various application/Procedures)

iMenu ⇒ お客様サポート (Support) ⇒ お申込・お手続き (Application/Procedures) ⇒ 各種お申込・お手続き

No packet communication charges \* In Japanese only

From PCs

My docomo (http://www.mydocomo.com/) ⇒ 各種お申込・お手続き (Various application/Procedures) \* In Japanese only

- \* You need your "Network security code" to use the site from i-mode.
- \* No packet communication charge applies to access the site from i-mode. Packet communication charge applies to access from overseas.
- \* You need "docomo ID/Password" to access the site from your PC.

- \* If you do not have or forget "Network security code" or "docomo ID/Password". contact to the numbers for "General Inquiries" on the last page of this manual.
- \* You may not use the services depending on your subscription.
- \* There are cases where the site may not be available to system maintenance, etc.



## Using mobile phone with your manners!

When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you.

## Always turn OFF your FOMA terminal in cases below

- In a place where use of mobile phones is prohibited
- · Always turn OFF your FOMA terminal in an aircraft or hospital.

### Always set Public mode in cases below

- When driving
- Using a mobile phone by holding it with the hand while driving is subject to penalty.
- In public places such as a theater, movie theater or art museum

## **Consider privacy**



Please be considerate of the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones.



## DOCOMO's environmental effort

## Fewer pages in the instruction manual

In Japanese version, instruction manual covers instructions only for basic functions to reduce pages and paper usage.

For frequently-used functions and their details, see 使いかたガイド (Guide) (installed in this FOMA terminal, in Japanese only) or visit NTT DOCOMO website.

## Recycle of mobile phones



To protect environment and recycle the precious resources, mobile phone and PHS enterprises collect phones, batteries and chargers, regardless of brands and manufacturers, at shops labeled with the mark shown to the left. Bring these devices to your nearest docomo Shop.

#### General Inquiries <docomo Information Center>

#### 00 0120-005-250 (toll free)

\* Service available in: English, Portuguese, Chinese, Spanish, Korean,

\* Unavailable from part of IP phones.

(Business hours: 9:00 a.m. to 8:00 p.m.)

From DOCOMO mobile phones (In Japanese only)

From land-line phones (In Japanese only)

(No prefix) 151 (toll free) 0120-800-000 (toll free)

\* Unavailable from land-line phones, etc.

\* Unavailable from part of IP phones.

(Business hours: 9:00 a.m. to 8:00 p.m. (open all year round))

- Please confirm the phone number before you dial.
- For Applications or Repairs and After-Sales Service, please contact the above-mentioned information center or the docomo shop etc. near you on the NTT DOCOMO website or the i-mode site. ▶i-mode site iMenu⇒お客様サポート (user support)⇒ドコモショップ (docomo Shop) \* In Japanese only
- ▶ NTT DOCOMO website http://www.nttdocomo.co.ip/english/

From land-line phones

0120-800-000 (toll free)

\* Unavailable from part of IP phones.

(In Japanese only)

#### Loss or theft of FOMA terminal or payment of cumulative cost overseas <docomo Information Center>

(available 24 hours a day) From DOCOMO mobile phones

International call access code for the country you stay

-81-3-6832-6600\* (toll free)

- \* You are charged a call fee to Japan when calling from a land-line phone, etc. \*If you use F-02C, you should dial the number +81-3-6832-6600 (to enter '+'. press and hold the '0' key for at least one second).
- From land-line phones <Universal number>

Universal number international prefix

-8000120-0151\*

\* You might be charged a domestic call fee according to the call rate for the country you stay. \*For international call access codes for major countries and universal number international prefix, refer to DOCOMO International Services website.

Failures encountered overseas <Network Support and Operation Center>

Repairs

(available 24 hours a day) From DOCOMO mobile phones

International call access code for the country you stay

From DOCOMO mobile phones

(No prefix) 113 (toll free)

(Business hours: 24 hours (open all year round))

\* Unavailable from land-line phones, etc.

(In Japanese only)

-81-3-6718-1414\* (toll free)

- \* You are charged a call fee to Japan when calling from a land-line phone, etc. \*If you use F-02C, you should dial the number +81-3-6718-1414 (to enter '+'. press and hold the '0' key for at least one second).
- From land-line phones <Universal number>

Universal number international prefix

-8005931-8600\*

- \* You might be charged a domestic call fee according to the call rate for the country you stay. \*For international call access codes for major countries and universal number international prefix, refer to DOCOMO International Services website.
- If you lose your FOMA terminal or have it stolen, immediately take the steps necessary for suspending the use of the FOMA terminal.
- If the FOMA terminal you purchased is damaged, bring your FOMA terminal to a repair counter specified by DOCOMO after returning to Japan.



Don't forget your mobile phone · · · or your manners! When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you. Sales: NTT DOCOMO, INC. Manufacturer: FUJITSU LIMITED

> 2010.11 (1st Edition) CA92002-6172



To prevent damage to the environment. bring used battery packs to a docomo service counter, a docomo agent or a recycle center.

# F-02C Manual for PC Connection

Data Communication	1
Before use	2
Flow of setup for data transfer (OBEX <sup>TM</sup> communication)	4
Flow of setup for data communication	5
Connecting up PC to the FOMA terminal	6
Installing FOMA communication configuration file (driver)	7
Preparing for Bluetooth® connection Dialup communication service	10
Using DOCOMO Connection Manager	12
Setting communications without using DOCOMO Connection Manager	18
ΔT command	28

#### **About Manual for PC Connection**

This manual describes about data communications using F-02C and how to install "FOMA communication configuration file" and "DOCOMO Connection Manager" contained in CD-ROM.

Depending on the environment of your PC, some of operation procedures and/or screens may be different.


## **Data Communication**

There are 3 communication modes available by connecting FOMA terminal and a PC: data transfer (OBEX<sup>TM</sup> communication), packet communication and 64K data communication.

- To make packet communications or 64K data communications or edit data such as the phonebook using a PC connected, installation of the software in the attached CD-ROM and various settings are required.
- When performing packet communication overseas, use IP connection (packet communication is unavailable with PPP connection). 64K data communication cannot be used overseas.
- FOMA terminal does not support FAX communication or Remote Wakeup.
- Data communication can be performed connecting with DOCOMO's PDA like sigmarion III. However, FOMA terminal does not support high-speed communication compatible with HIGH-SPEED area.

## **❖** Data transfer (OBEX™ communication)

You can send and receive data such as image, music, phonebook or mail etc. to/from other FOMA terminals or PCs etc.

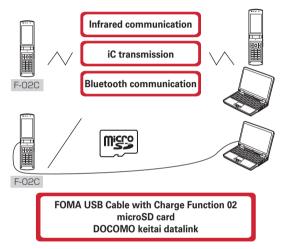

#### Packet communication

You can connect to the Internet and perform data communication (packet communication). Packet communication charges are based on the amount of data sent and received, which makes it suitable for high-speed exchange of comparatively small amounts of data as in sending and receiving mail. No communication charges are required when no data are exchanged even if you are connected to the network. Therefore, sending/receiving data as needed while remaining connected to the network is possible.

High-speed packet communication can be performed at a maximum reception speed of 7.2Mbps and a maximum transmission speed of 5.7Mbps by using access points that support FOMA packet communication such as mopera U of DOCOMO's Internet connection service. Best effort method which the actual communication speed varies with the environment and the rate of congestion offers. Note that communications of large-size data such as viewing websites containing images and downloading will require high charges.

- \* The communication speed may be slower when connecting out of FOMA HIGH-SPEED area, connecting to access points incompatible with HIGH-SPEED, or using devices incompatible with HIGH-SPEED such as DOCOMO's PDA; sigmarion III.
- \* For Bluetooth connection, though the communication speed of FOMA terminal is equal to HIGH-SPEED, communication may not be performed by maximum speed because the communication speed between Bluetooth devices has limits.
- \* Maximum speed of reception 7.2Mbps and transmission 5.7Mbps are the values in technical standards, thus they are not indicated actual communication speed. Actual communication speed varies by the network congestion or environment of communication.

#### 64K data communication

You can connect to the Internet and perform 64K data communication.

Communication charges are based on the duration of the connection to the network regardless of the volume of data, which makes it suitable for sending and receiving relatively large amounts of data as in downloading multi-media contents.

Access points that support FOMA 64K data communication services such as mopera U of DOCOMO's Internet connection service or ISDN synchronized 64K access points can be used.

Please be careful that a high cost will be charged for long-time communications.

## Before use

## Operating environment

The operation environment for using data communication is as shown below. They may vary depending on the PC system configurations.

Item	Requirements
Computer	PC/AT compatible computer
	For USB cable connection : USB port (conform to USB specification 1.1/2.0)
	For Bluetooth connection : Compatible with up to Bluetooth Standard Ver. 2.1 +
	EDR (dialup networking profiles) supporting dialup networking profile
	Recommended 1,024×600 dots (1,024×768 dots*) or more in display resolution
	and High Color 16 bits or more
OS (Japanese version)	Windows XP, Windows Vista, Windows 7
Memory requirements	Windows XP: 128MB or more Windows Vista: 512MB or more
	Windows 7 : 1GB or more for 32-bit, 2GB or more for 64-bit
Hard disk capacity	5MB (10MB*) or more free disk space
Web browser*	Internet Explorer 6.0 or more
Mailer software*	Windows Mail and Outlook Express 6.0

- \* For operating environment of using DOCOMO Connection Manager.
- For the latest information about operating environment, refer to NTT DOCOMO website.
- DOCOMO will not guarantee operations on upgraded OS or added/changed operating environment.
- Note that utilization may not be possible in certain operating environments. DOCOMO assumes no responsibility for pertaining to operation under conditions other than that described above.
- Recommended environment for operating the menu is Microsoft Internet Explorer 7.0 or later (For Windows XP, Microsoft Internet Explorer 6.0 or later). If no menu appears when CD-ROM is set, take actions given below.
  - ① Under Windows 7, Windows Vista: Click ② (Start)→"すべてのプログラム (All programs)"→"アクセサリ (Accessories)"→"ファイル名を指定して実行 (Run)".
    - Under Windows XP: Click "スタート (Start)"→"ファイル名を指定して実行 (Run)".
  - ② Enter as follows in "名前 (Name)" and click "OK".
    - <CD-ROM drive name> : ¥index.html
    - \* CD-ROM drive name varies depending on a PC to be used.
- When the CD-ROM is inserted into the PC's CD-ROM drive, the warning screen may be displayed. This warning depends on the security settings of Internet Explorer but it is not a problem for use. Click "(\$\tau\) (Yes)".
  - \* Depending on the environment of your PC, the screen may be different.

## Devices required

The following devices are required in addition to FOMA terminal and a PC.

- FOMA USB Cable with Charge Function 02 (optional) or FOMA USB Cable (optional)
- Attached CD-ROM "CD-ROM for F-02C"
- \* For USB connection

#### **∠INFORMATION**

- USB cable for PC is not available because the connector type is different.
- · When using USB HUB, it may not operate properly.

## Usage precautions

## Internet service provider usage charges

When using the Internet on a PC, usage charge to your Internet service provider (hereinafter referred to as Provider) is required. This charge is paid directly to the Provider, and is separated from the FOMA service charge. For details, contact your Provider.

 DOCOMO's Internet connection service mopera U is available. mopera U is a charged service requiring subscription.

#### **❖** Dialup connection (Provider etc.)

Different dialup connections are required for packet communication and 64K data communication. When performing packet communication, use the dialup connection for packet communication. When performing 64K data communication, use the dialup connection for FOMA 64K data communication or ISDN synchronized 64K data communication.

- Connections to DoPa access points are unavailable.
- For service and connection/settings of mopera, refer to mopera website. http://www.mopera.net/mopera/index.html

#### User authentication

Some dialup connections require user authentication before a connection can be established. If user authentication is required, you must use your communication software or dialup network to enter your ID and password and connect. Your ID and password will be assigned by the network administrator of the connection destination such as your provider or corporate LAN. For details, contact your provider or network administrator.

#### Access authentication during using PC browser

If FirstPass (user certificate) is required for the access authentication during using PC browser, use FirstPass PC software. It is provided on NTT DOCOMO website. For details and download, refer to the following website. You can also access to the following website from the attached CD-ROM.

Details of the service: http://www.nttdocomo.co.jp/service/safety/firstpass/

Download: http://www.nttdocomo.co.jp/support/utilization/application/foma/utility/firstpass/index.html

#### Conditions of packet communication and 64K data communication

To perform data communication in Japan, the following conditions must be satisfied.

- You must be within the FOMA service area.
- Packet communication requires an access point that supports FOMA packet communications.
- 64K data communication requires a dialup connection that supports FOMA 64K data communications or ISDN synchronized 64K.
- For Bluetooth connection, a PC requires compatible with up to Bluetooth Standard Ver. 2.1 + EDR (dialup networking profiles) supporting dialup networking profile.
- \* Note that even when the above requirements are satisfied, you may not be able to perform data communication if base station traffic is heavy or the radio wave conditions are poor.

## **♦ Using CD-ROM**

The attached CD-ROM includes software to use the data communication with FOMA terminal, "Kuten Code List" in the PDF version, etc.

#### Introduction of DOCOMO keitai datalink

DOCOMO keitai datalink is software to back up and edit your phone information such as phonebook and mail. It is provided on NTT DOCOMO website. For details and download of this software, refer to the following website. You can also access to the following website from the attached CD-ROM. http://datalink.nttdocomo.co.jp/

- To use DOCOMO keitai datalink, installing FOMA communication configuration file in advance is required.
- For details of downloading procedure, data that can be transferred, operating environments, installing
  procedure, operation procedure, etc., refer to the website above. For operations after installation, see
  Help in the software.
- To use DOCOMO keitai datalink, USB cable is required.

# Flow of setup for data transfer (OBEX<sup>TM</sup> communication)

When using FOMA USB Cable with Charge Function 02 (optional), install FOMA communication configuration file in advance.

Downloading and installing FOMA communication configuration file


- · Installing from attached CD-ROM
- · Downloading from DOCOMO website and installing



Data transfer

## Flow of setup for data communication

This section describes the setup work for performing packet communication or 64K data communication by connecting to a PC with USB cable or Bluetooth connection.

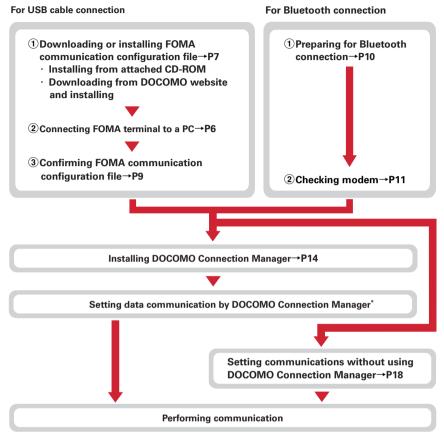

\* For setting of DOCOMO Connection Manager, refer to "ドコモ コネクションマネージャ操作マニュアル (DOCOMO Connection Manager operation manual)".

#### \* FOMA communication configuration file

When performing Packet communication or 64K data communication by connecting to a PC with USB cable, install FOMA communication configuration file.

#### Using Bluetooth connection

You can make packet communication or 64K data communication by connecting a PC compatible with Bluetooth and FOMA terminal using Bluetooth.

• For details, refer to "Preparing for Bluetooth connection".→P10

#### DOCOMO Connection Manager

When DOCOMO Connection Manager (found on the attached CD-ROM) is installed on a PC, a number of settings required for packet communication or 64K data communication can be simply operated from a PC.

#### Precautions for installation/uninstallation

- Before starting operation, make sure that no other program is running and exit the program if any.
- \* Exit any resident programs on Windows including antivirus software.
- Example: Right-click the icon displayed in the task bar, click "閉じる (Close)" or "終了 (End)".
- For installing/uninstalling FOMA communication configuration file or DOCOMO Connection Manager, make sure that a user with administrator's privilege performs the operation. Installing/uninstalling the software by other users may produce an error. For details on PC administrator privileges, contact your PC manufacturer or Microsoft Corporation.
- When "ユーザーアカウント制御 (User account control)" screen is appeared, perform the following operations (it does not appear on Windows XP).
  - Windows 7: Click "はい (Yes)", or enter password and click "OK".
  - Windows Vista: Click "許可 (Permit)" or "続行 (Continue)", or enter password and click "OK".
- For operations of a PC, settings of administrator privileges, etc., refer to the Instructions Manual of the PC.


## **Connecting up PC to the FOMA terminal**

# Connecting/disconnecting to PC is explained here. Installing FOMA communication configuration file is described separately. $\rightarrow$ P7

- If you connect FOMA terminal to a PC before installing FOMA communication configuration file, Windows may automatically detect that USB cable has been inserted, and may request the driver. In such a case, click "キャンセル (Cancel)" on the displayed screen to end.
- The connection should be made with a PC and FOMA terminal both turned ON.
- In this manual, the description takes the case of FOMA USB Cable with Charge Function 02 (optional) for example.


## ♦ Inserting USB cable

- Insert the connector of the USB cable into FOMA terminal's external connection jack.
- Insert the other end of the USB cable connector into the PC USB port.

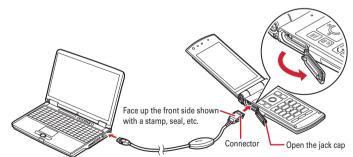

When a PC and FOMA terminal are connected, appears on the stand-by display of FOMA terminal.

Press the USB cable's release buttons on both sides of the connector (1) and remove the connector from FOMA terminal (2).

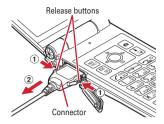

Remove the USB cable out from the PC.

#### **∠INFORMATION**

- Be careful not to give excessive force to the connecter of the USB cable when connecting/disconnecting the cable to/from FOMA terminal.
  - When disconnecting the connector, be sure to pull it straight while pressing the release button. Applying an excessive force to disconnect the connector may give damage to it.
- Do not remove the USB cable during data communication. The data communication is disconnected and it may cause data loss or malfunction.

# Installing FOMA communication configuration file (driver)

To make data communication by connecting FOMA terminal and a PC with USB cable, FOMA communication configuration file (driver) is required. Install the file before connecting FOMA terminal for the first time to the PC.

- Before operating, refer to "Precautions for installation/uninstallation".→P6
- For without using USB connection cable, installing FOMA communication configuration file is not required.
- Do not connect FOMA terminal until a message that instructs you to connect FOMA terminal to a PC appears in Step 5.

<Example> Installing under Windows 7

Insert the CD-ROM into the PC's CD-ROM drive.

**2** Click "データリンクソフト・各種設定ソフト (Data link software/Configuration software)".



3 Click "インストール (Install)" of "FOMA通信設定ファイル (USBドライバ) (FOMA communication configuration file (USB driver))" and double-click "F02Cst.exe" icon from a window displayed.



- ✓ Click "インストール開始 (Start installation)".
- When a message indicating to connect FOMA terminal to the PC appears, connect FOMA terminal to the PC.
  - Connect FOMA terminal while the power is ON.
- 6 On the Installation completion screen, click "OK".

Installing "DOCOMO Connection Manager"→P14

# Confirming FOMA communication configuration file

• When a PC does not detect FOMA terminal correctly, settings and communication cannot be performed.

## <Example> Checking on Windows 7

(Start)→"コントロールパネル (Control panel)"→"システムとセキュリティ (System and security)"→"デバイスマネージャー (Device manager)" in the "システム (System)" category.

#### **Under Windows Vista**

Click 

(Start)→"コントロールパネル (Control panel)"→"システムとメンテナンス (System and maintenance)"→"デバイスマネージャ (Device manager)".

#### **Under Windows XP**

- ① Click "スタート (Start)"→"コントロールパネル (Control panel)"→"パフォーマンスとメンテナンス (Performance and maintenance)"→"システム (System)".
- ② On the "システムのプロパティ (Property of system)" screen, click "ハードウェア (Hardware)" tab
  →"デバイスマネージャ (Device manager)".
- 2 Double-click the type of each device → Confirm that the name of the following devices are registered.
  - Device types and names are shown as below.

The order to be displayed differs depending on OSs.

- -ポート(COMとLPT) (Port (COM and LPT)) : FOMA F02C Command Port (COMx)\* FOMA F02C OBEX Port (COMx)\*
- -モデム (Modem): FOMA F02C
- -ユニバーサルシリアルバスコントローラ (Universal Serial Bus Controller) or USB (Universal Serial Bus) コントローラ (Controller): FOMA F02C
- \* Depending on the PC environment, x represents different numbers.



# **◆** Uninstalling FOMA communication configuration file

- Before operating, refer to "Precautions for installation/uninstallation".→P6
- Before operating, remove FOMA terminal from the PC.

<Example> Uninstalling the driver under Windows 7, Windows Vista

Click (Start)→"コントロールパネル (Control panel)"→"プログラムのアンインストール (Uninstall programs)" in the "プログラム (Programs)" category.

#### **Under Windows XP**

Click "スタート (Start)"→"コントロールパネル (Control panel)"→"プログラムの追加と削除 (Add/delete Programs)".

2 Select "FOMA F02C USB" and click "アンインストールと変更 (Uninstall and change)" (for Windows XP, "変更と削除 (Change and delete)").

- **3** Confirm that "FOMA F02C Uninstaller" is displayed and click "はい (Yes)". The uninstall process starts.
- ▲ If the "ドライバを削除しました (Driver deleted)" screen appears, click "OK".

#### **∠INFORMATION**

 When "FOMA F02C USB" is not displayed on the deletion screen, execute the operations in "Installing FOMA communication configuration file" again and uninstall.→P7

## Dialup communication service

# Preparing for Bluetooth<sup>®</sup> connection

You can make data communication by connecting a PC compatible with Bluetooth and FOMA terminal using Bluetooth.

- For operations of a PC, refer to the instructions manual of the PC you use.
- If the FOMA terminal is put on Bluetooth connection standby, (3 (blue) appears on the stand-by display. If the FOMA terminal and a PC are successfully connected in Bluetooth, (3 (blue) blinks.

# Registering a PC to the FOMA terminal

Register a PC for connecting to FOMA terminal with Bluetooth connection for the first time.

- Depending on the PC environment, Bluetooth passkey may be required.
- On FOMA terminal, MENU 6 8 1.

The FOMA terminal starts the registration waiting and returns to the stand-by display.

- · If connecting cannot be started within 5 minutes, registration is canceled automatically.
- On a PC, Search for the FOMA terminal and register a device.
  - · Perform while the FOMA terminal is in the registration waiting.
  - By some PC instruction manual, "探索 (Quest)" or "サーチ (Search)" may be used instead of "検索 (Retrieve)" or "ペアリング (Pairing)" may be used instead of "機器登録 (Registering device)".
- **3** When a connecting confirmation screen appears on the FOMA terminal, select "はい (Yes)".
- ▲ When a registration confirmation screen appears, select "はい (Yes)".

#### For entering Bluetooth passkey

Enter Bluetooth pass key (one-byte number 4 - 16 digit) 

[OK]

- Enter the same Bluetooth passkey on FOMA terminal and a PC.
- When a confirmation screen of the default connection device (audio) setting appears, select "No".
- After the PC is registered as a device and the registration is completed, the FOMA terminal returns
  to the stand-by display in the registration waiting state. Perform settings/operations on the PC as
  required.

#### **∠INFORMATION**

When registering FOMA terminal in a PC, distinguish FOMA terminal by the name of device if the PC recognizes
plural devices. When the PC recognizes many devices of the same name, distinguish by the address of device.

# Connecting to a registered PC

When connecting a registered PC to FOMA terminal using Bluetooth, set the FOMA terminal in connecting stand-by.

- On FOMA terminal, MENU 6 8.
- 2 ☑ [Type]→Mark "Dial-up(DUN)" to ☑→ 📵 [Confrm]

The FOMA terminal starts the registration waiting and returns to the stand-by display.

- When other Bluetooth device is connected, a confirmation screen for asking whether to disconnect the device in connection and start the registration waiting.
- Operate for connecting on the PC.

# **♦** Checking modem

Confirm the name of modem used on a PC or COM port number set for dialup connection.

• When a PC does not detect FOMA terminal correctly, settings and communication cannot be performed.

## <Example> Checking on Windows 7

Click (Start)→"コントロールパネル (Control panel)"→"システムとセキュリティ (System and security)"→"デバイスマネージャー (Device manager)" in the "システム (System)" category.

## **Under Windows Vista**

#### **Under Windows XP**

- ① Click "スタート (Start)"→"コントロールパネル (Control panel)"→"パフォーマンスとメンテナンス (Performance and maintenance)"→"システム (System)".
- ② On the "システムのプロパティ (Property of system)" screen, click "ハードウェア (Hardware)" tab
  →"デバイスマネージャ (Device manager)".
- 2 Double-click the type of each device → Confirm the modem name or COM port number.
  - Name of Modem or COM port is shown under "モデム (Modem)", "ポート (COMとLPT) (Port (COM and LPT))".

# **Using DOCOMO Connection Manager**

DOCOMO Connection Manager is convenient software to use flat-rate data communication or pay-as-you-go data communication. You can easily subscribe to mopera U and make a PC setting according to your subscription status.

Also, you can check an estimate of data communication volume or usage fees by the charge counter function.

The method of installing DOCOMO Connection Manager is explained here.



 For Internet connection with FOMA terminal, you need to subscribe to Internet service provider (mopera U etc.) applicable to services and data communication.
 For details, refer to DOCOMO website.

#### **∠INFORMATION**

#### Using pay-as-you-go data communication (including i-mode flat-rate packet communication services)

 Note that communications of large-size data such as viewing websites containing images using packet communication and downloading (example: updating of application, music, movie, OS or anti-virus software) will require high charges.

Note that FOMA flat-rate packet services such as Pake-hodai and Pake-hodai full are not applied to the data communication by connecting the FOMA terminal to a PC or another device with a USB cable.

## Using flat-rate data plan

• For using of flat-rate data plan, you need to subscribe to Internet service provider applicable to flat-rate data communication charging plan. For details, refer to DOCOMO website.

#### Using mopera

 For connection/settings of mopera, refer to mopera website. http://www.mopera.net/mopera/support/index.html

# Before installing DOCOMO Connection Manager

Before installing DOCOMO Connection Manager, check the items below and perform to change setting of software/uninstall as required.

- Prepare FOMA terminal and USB Cable with Charge Function 02 (optional) or FOMA USB Cable (optional) (For Bluetooth connection, USB cable is not required).
- Check the contents of subscription for services and Internet service provider.
- If installing connection software except for DOCOMO Connection Manager, change the setting not to be activated automatically as required.→P13 "Using connection software except for DOCOMO Connection Manager"

## Changing setting of Internet Explorer

• Before installing DOCOMO Connection Manager, set to "ダイヤルしない (No dialing)" for connection setting at "インターネットオプション (Internet option)" field of Internet Explorer in advance.

<Example> Changing under Windows 7, Windows Vista

- | Click ② (Start)→"すべてのプログラム (All programs)"→"Internet Explorer".

  Under Windows XP
  Click "スタート (Start)"→Select "すべてのプログラム (All programs)" → Click "Internet Explorer".
- **7** Click "ツール (Tool)"→"インターネットオプション (Internet option)".
- **Q** Click "接続 (Connection)" tab→Select "ダイヤルしない (No dialing)".



4 Click "OK".

# Using connection software except for DOCOMO Connection Manager

DOCOMO Connection Manager includes same function as that of software below and using together is not required. Perform to change setting not to be activated or uninstall as required.

- · mopera U start up tool
- · mopera U connection & setting tool
- · FOMA PC configuration software
- · FOMA Byte counter

To use Mzone (docomo Public wireless LAN service) by DOCOMO Connection Manager, uninstall the following public wireless LAN connection software. And, when installing all at once, Mzone connection cannot be used by DOCOMO Connection Manager.

- U公衆無線LANユーティリティソフト (U public wireless LAN utility software)
- ドコモ公衆無線LANユーティリティソフト (DOCOMO public wireless LAN utility software)
- ドコモ公衆無線LANユーティリティプログラム (DOCOMO public wireless LAN utility program)

# ◆Installing DOCOMO Connection Manager

<Example> Installing under Windows 7

- Insert the CD-ROM into the PC's CD-ROM drive.
- Click "インターネット接続 (Internet connection)".



- Click "インストール (Install)" field in Step ③ of "本CD-ROMからのFOMAデータ通信の設定方法 (Setting method of FOMA data communication from this CD-ROM)".
  - When the warning screen of security is displayed, click "実行 (Execute)".



 For Windows XP, when the confirmation screen for installing of MSXML6/Wireless LAN API is displayed, click "Install" to install MSXML6/Wireless LAN API. After performing to install MSXML6/ Wireless LAN API, reboot Windows to start installation of DOCOMO Connection Manager automatically. ✓ Click "次へ (Next)".



Confirm "注意事項 (Precautions)" and click "次へ (Next)".




6 Confirm the contents of ソフトウェア使用許諾契約 (Software license agreement) and if you agree to the agreement, select "使用許諾契約の条項に同意します (Agree to the clauses of the agreement)" and click "次へ (Next)".



# **7** Confirm the installing folder and click "次へ (Next)".

 To change the installation destination, click "変更 (Change)" and specify any installation destination.

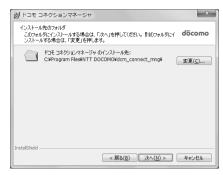

8 Click "インストール (Install)".



**9** When the "InstallShieldウィザードを完了しました (InstallShield wizard is completed)" screen appears, click "完了 (Done)".

Installing DOCOMO Connection Manager is completed.



## **✓INFORMATION**

- Installation may take a few minutes.
- · When a message notifying you to reboot Windows is displayed, follow the instruction of screen and reboot.
- · Do not install during data communication.

# Starting DOCOMO Connection Manager

Before operating, make sure that a PC and FOMA terminal are properly connected.

<Example> Setting under Windows 7, Windows Vista

Click 🚱 (Start)→"すべてのプログラム (All Programs)"→ "NTT DOCOMO"→"ドコモ コネクションマネージャ (DOCOMO Connection Manager)"→"ドコモ コネクションマネージャ (DOCOMO Connection Manager)".

#### **Under Windows XP**

Click "スタート (Start)"→Select "すべてのプログラム (All programs)"→"NTT DOCOMO"→"ドコモ コネクションマネージャ (DOCOMO Connection Manager)" and click "ドコモ コネクションマネージャ (DOCOMO Connection Manager)".

**DOCOMO** Connection Manager starts.

When booting a PC at first time, the setting wizard screen appears automatically.



According to the setting wizard, perform to set for making data communication connecting to

After setting, you can perform communication using DOCOMO Connection Manager. For details, refer to "ドコモ コネクションマネージャ操作マニュアル (DOCOMO Connection Manager operation manual)".

#### **∠INFORMATION**

- Just exiting the Internet browser or mail software may not disconnect communication. When you do not use communication, be sure to disconnect the communication from "切断する (Disconnect)" button of DOCOMO Connection Manager.
- Please note that if auto update is set for OS update etc., the software is updated automatically and high cost may be charged for the packet communication fee.



# Setting communications without using DOCOMO Connection Manager

## The method of dialup connection setup without DOCOMO Connection Manager is explained.

 When using an access point compatible with HIGH-SPEED such as mopera for packet communication, make settings using DOCOMO Connection Manager.

# Flow of dialup network setting

- Flow of setup for data communication→P5
- · Before operating, make sure that a PC and FOMA terminal are properly connected.

## Setting the dialup connection (APN)\*→P18

· When the access point is mopera U or mopera, you do not need to set.



## Setting Show/Hide caller ID\*→P20

· Set as required.



## Setting Dialup Network

- · Setting for Windows 7, Windows Vista→P21
- · Setting for Windows XP→P24
- \* Set for packet communication.

Communication software to input AT commands is required for settings.

The method of setting using " $\mathcal{N}\mathcal{N}-\mathcal{S}-\mathcal{S}\mathcal{N}$  (Hyper terminal)" that comes with Windows XP is explained here. Windows 7 and Windows Vista do not support " $\mathcal{N}\mathcal{N}-\mathcal{S}-\mathcal{S}\mathcal{N}$  (Hyper terminal)". For Windows 7 and Windows Vista, set using the software supported by Each OS (Follow the method for the software to be used.).

# **♦** Setting the dialup connection (APN)

## The dialup connection (APN) and registration number (cid)

The dialup connections (APN) for packet communication can be set for registration numbers (cid) between 1 and 10 in FOMA terminal. By default, "mopera.ne.jp" (APN) to connect to mopera is registered in cid1, "mopera.net" (APN) to connect to mopera U is registered in cid2 and 3, and "mpr.ex-pkt.net" (APN) to connect in 128K communication is registered in cid4. For connecting to other providers or corporate LANs, register APN for cid5-10.

- For the dialup connections (APN), inquire your provider or network administrator.
- · For USB cable connection and Bluetooth connection, setting each dialup connections (APN) is required.
- For packet communication, if switching between USB cable connection and Bluetooth connection, setting the dialup connections (APN) is required again.
- The dialup connection settings can be considered as phonebook entries registered for packet communication. The comparison between dialup connection settings and FOMA terminal phonebook is as shown below.

Connection (APN)	Phonebook item
Registration number (cid)	Registration number (Phonebook No.)
Connection name (APN)	Party's name
*99 * * * <cid># (packet communication)</cid>	Party's phone number

The registered cid become the connection number in the dialup connection numbers setting.

<Example> Setting under Windows XP

- 【Click "スタート (Start)"→Select "すべてのプログラム (All programs)"→"アクセサリ (Accessories)"→"通信 (Communication)" and click "ハイパーターミナル (Hyper terminal)".
- **了** Enter the desired dialup connection name in "名前 (Name)"→Click "OK".
  - The following characters (one-byte) cannot be used in "名前 (Name)".
     \(\frac{1}{2}\): \* ?<> | "



- 3 Enter a fictional phone number (such as "0") for "電話番号 (Phone number)"
  →Select "接続方法 (Connection method)"→Click "OK".
  - "市外局番 (Area code)" differs depending on the PC environment. The code does not relate to Dialup connection (APN) setup. So no need to change.
  - Set as follows at "接続方法 (Connection method)" field.

For USB cable connection: Select "FOMA F02C".
For Bluetooth connection: Select "で使用の Bluetoothリンク経由標準モデム (Standard modem via Bluetooth link you use)" or "Bluetooth機器メーカが提供しているBluetoothモデム (Bluetooth modem provided by Bluetooth device manufacturer)".



- ⚠ Click "キャンセル (Cancel)" on the "接続 (Connect)" screen.
- 5 Enter the dialup connection (APN) in the format "AT+CGDCONT =<cid>, "<PDP TYPE>", "<APN>""→□

<cid>: Enter any number between 5-10.

<PDP TYPE> : IP or PPP

<APN> : Dialup connection (APN)

- +CGDCONT command→P35 "Supplement to AT command"
- If nothing is displayed even when AT command is entered, enter ATE1 and press ...



- 6 Confirm that "OK" is displayed and click "ファイル (File)"→Click "ハイパーターミナルの終了 (End HyperTerminal)".
- 7 When confirming disconnection, click "はい (Yes)"→When confirming saving, click "いいえ (No)".

# Setting Show/Hide caller ID

You can set to show/hide call ID for packet communication at once.

Caller ID is your important information. Take care when deciding to disclose your caller ID.

• If "Not notify" is set when using mopera U or mopera, connection is unavailable.

## <Example> Setting under Windows XP

- Perform Step 1 4 in "Setting the dialup connection (APN)".
- 2 Enter notify/not notify of caller ID in the format "AT \* DGPIR=<n>"→ [.].
  <n>: 0-2
  - 0: Connect directly (Default)
  - 1: Connect prefixing 184 (Not notify)
  - 2: Connect prefixing 186 (Notify)



- 3 Confirm that "OK" is displayed and click "ファイル (File)"→Click "ハイパーターミナルの終了 (End HyperTerminal)".
- 4 When confirming disconnection, click "はい (Yes)"→When confirming saving, click "いいえ (No)".

## Show/Hide caller ID function by dialup network settings

The dialup network settings can also be used to append 186 (Notify)/184 (Not notify) to the dialup connection number.

 The Show/Hide of caller ID when both of the \* DGPIR command and dialup network settings are set is as shown below.

Setting made by * DGPIR Dialup network command setting ( <cid>=3)</cid>	No setting	Caller ID is not sent	Caller ID is sent
*99***3#	Caller ID is sent	Caller ID is not sent	Caller ID is sent
184 * 99 * * * 3#		Caller ID is not sent	
186 * 99 * * * 3#		Caller ID is sent	

# Setting dialup network

In this manual, the description takes the case of IP connection to mopera U via packet communication for example.

 When connecting to mopera U or mopera via packet communication, enter the following number in the phone number field.

mopera U (PPP connection): \*99 \* \* \*2# mopera U (IP connection): \*99 \* \* \*3#

128K communication (PPP connection): \*99 \* \* \* 4#

mopera (PPP connection): \*99 \* \* \* 1#

 When connecting to mopera U or mopera via 64K data communication, enter the following number in the phone number field to connect to.

mopera U: \*8701 mopera: \*9601

## Setting for Windows 7, Windows Vista

Click (Start)→"コントロールパネル (Control panel)"→"ネットワークの状態とタスクの表示 (Network status and tasks)" in the "ネットワークとインターネット (Network and Internet)" category.

#### **Under Windows Vista**

**2** Click "新しい接続またはネットワークのセットアップ (Setup new connection or network)".

#### **Under Windows Vista**

Click "接続またはネットワークをセットアップします (Set up connection or network)".

Select "ダイヤルアップ接続をセットアップします (Set up dialup connection)" and click "次へ (Next)".



When the "どのモデムを使いますか? (Which modem will you use?)" screen is displayed For USB cable connection: Click "FOMA F02C".

For Bluetooth connection: Click "ご使用のBluetoothリンク経由標準モデム (Standard modem via Bluetooth link you use)" or "Bluetooth機器メーカが提供しているBluetoothモデム (Bluetooth modem provided by Bluetooth device manufacturer)".

4 Enter the phone number of the dialup connection in "ダイヤルアップの電話番号 (Dialup phone number)" ("\*99\*\*\*<cid>#" for packet communication) with one-byte→Enter "ユーザー名 (User name)"→Enter "パスワード (Password)"→Enter "接続名 (Connection name)" and click "接続 (Connect)". <cid>: The number registered in P19 "Setting the dialup connection (APN)"

- In "ユーザー名 (User name)" and "パスワード (Password)", enter the user name and password specified by your provider or network administrator.
- When the access point is mopera U or mopera, you do not need to enter "ユーザー名 (User name)" or "パスワード (Password)".
- You cannot use "." (one-byte period) at the beginning of "接続名 (Connection name)". Also, the following characters (one-byte) cannot be used.

¥/: \* ?<>



- On the connecting screen, click "スキップ (Skip)".
  - · Only make settings without connecting to the Internet right away.
- 6 On the "接続の使用準備ができました (Preparation for using is completed)" screen, click "閉じる (Close)".

#### **Under Windows Vista**

- ① On the "インターネット接続テストに失敗しました (Failed in Internet connection test)" screen, click "接続をセットアップします (Set up connection)".
- ② Click "閉じる (Close)".
- 7 On the "ネットワークと共有センター (Network and shared center)" screen, click "アダプターの設定の変更 (Change adapter configuration)" appeared on the left of the top.

## **Under Windows Vista**

Right-click the dialup connection created and click "プロパティ (Property)".

# Onfirm the setting of each item in "全般 (General)" tab.

 When multiple modems are connected to a PC, set as follows.

For USB cable connection: Select only "モデム-FOMA F02C (Modem-FOMA F02C)" at "接続の方法 (Connection method)" field

For Bluetooth connection: Select "モデム- (ご使用のBluetoothリンク経由標準モデム) (Modem-(Standard modem via Bluetooth link you use))" or "モデム- (Bluetooth機器メーカーが提供しているBluetoothモデム) (Modem- (Bluetooth modem provided by Bluetooth device manufacturer))" at "接続の方法 (Connection method)" field.

- Uncheck ( ) other than selected modem.
- COM port number assigned to the modem displayed at "接続の方法 (Connection method)" field differs by the environment of a PC you use.
- Uncheck (一) "ダイヤル情報を使う (Use dial information)".



# 【 Click "ネットワーク (Network)" tab→Set each item as shown below.

- Uncheck (□) "インターネットプロトコルバージョン6 (TCP/IPv6) (Internet Protocol Version 6 (TCP/IPv6))".
- When settings of IP and DNS information have been requested from the provider, etc. select "インターネットプロトコルバージョン4 (TCP/IPv4) (Internet Protocol Version 4 (TCP/IPv4))", click "プロパティ (Property)" and set various information.
- When settings of "QoSパケットスケジューラ (QoS packet scheduler)" and other items have been requested from the provider, etc., check/uncheck as required.



- 】】 Click "オプション (Option)" tab→Click "PPP設定 (PPP settings)".
- 17 Uncheck all items ( ) and click "OK".



Click "OK".

Performing communication→P26

- 【 Click "スタート (Start)"→Select "すべてのプログラム (All programs)"→"アクセサリ (Accessories)"→"通信 (Communication)" and click "新しい接続ウィザード (New connection wizard)".
- **2** On the "新しい接続ウィザードの開始 (Start new connection wizard start)" screen, click "次へ (Next)".
- Select "インターネットに接続する (Connect to Internet)" and click "次へ (Next)".
- 4 Select "接続を手動でセットアップする (Set up connection manually)" and click "次へ (Next)".
- 5 Select "ダイヤルアップモデムを使用して接続する (Use dialup modem to connect)" and click "次へ (Next)".

## When "デバイスの選択 (Device selection)" screen is displayed

For USB cable connection : Select "モデム-FOMA F02C (Modem-FOMA F02C)" and click "次へ (Next)".

For Bluetooth connection: Select "モデム- (ご使用のBluetoothリンク経由標準モデム) (Modem-(Standard modem via Bluetooth link you use))" or "モデム- (Bluetooth機器メーカが提供している Bluetoothモデム) (Modem- (Bluetooth modem provided by Bluetooth device manufacturer))" and click "次へ (Next)".

- 6 Enter the desired dialup connection name in "ISP名 (ISP name)"→Click "次へ (Next)".
  - You cannot use "." (one-byte period) at the beginning of "ISP名 (ISP name)". Also, the following characters (one-byte) cannot be used.
     ¥/:\*?<> | "



7 Enter the phone number of the dialup connection in "電話番号 (Phone number)" (" \* 99 \* \* \* <cid>#" for packet communication) with one-byte→Click "次へ (Next)".

<cid>: The number registered in P19 "Setting the dialup connection (APN)"



- 8 Enter "ユーザー名 (User name)"→Enter "パスワード (Password)"→Enter "パスワードの確認入力 (Password confirmation entry)"→Select all items as shown below and click "次へ (Next)".
  - In "ユーザー名 (User name)" and "パスワード (Password)", enter the user name and password specified by your provider or network administrator.
  - When the access point is mopera U or mopera, you do not need to enter "ユーザー名 (User name)", "パスワード (Password)" or "パスワード の確認入力 (Password confirmation entry)".



- On the "新しい接続ウィザードの完了 (New connection wizard is completed)" screen, click "完了 (Done)".
- 【 Click "スタート (Start)"→Select "すべてのプログラム (All programs)"→"アクセサリ (Accessories)"→"通信 (Communication)" and click "ネットワーク接続 (Network connection)".
- Select the created dialup connection icon and click "ファイル (File)"→Click " プロパティ (Property)".



**了** Confirm the setting of each item in "全般 (General)" tab.

 When plural modems are connected to a PC, set as follows.

For USB cable connection : Select only "モデム-FOMA F02C (Modem-FOMA F02C)" at "接続方法 (Connection method)" field.

For Bluetooth connection: Select "モデム- (ご使用のBluetoothリンク経由標準モデム) (Modem-(Standard modem via Bluetooth link you use))" or "モデム- (Bluetooth機器メーカが提供しているBluetoothモデム) (Modem-(Bluetooth modem provided by Bluetooth device manufacturer))" at "接続方法 (Connection method)" field.

- Uncheck ( ) other than selected modem.
- COM port number assigned to the modem displayed at "接続方法 (Connection method)" field differs by the environment of a PC you use.
- Uncheck ( ) "ダイヤル情報を使う (Use dial information)".



# 13 Click "ネットワーク (Network)" tab→Set each item as shown below→Click " 設定 (Settings)".

- Since "QoSパケットスケジューラ (QoS packet scheduler)" settings in "この接続は次の項目を使用します (Use these items for this connection)" can not be changed, leave it as it is.
- When settings of IP and DNS information have been requested from the provider, etc. select "インターネットプロトコル (TCP/IP) (Internet protocol (TCP/IP))", click "プロパティ (Property)" and set necessary information.



■ Uncheck all items ( ) and click "OK".



- Click "OK".
  Performing communication → P26
- **♦** Performing communication via dialup connection

Starting communication and disconnection are explained here.

<Example> Under Windows 7

Connect FOMA terminal to a PC.

For USB cable connection→P6 For Bluetooth connection→P11

**2** Click ② (Start)→"コントロールパネル (Control panel)"→"ネットワークの状態とタスクの表示 (Network status and tasks)" in the "ネットワークとインターネット (Network and Internet)" category.

## **Under Windows Vista**

Click ❷ (Start)→"接続先 (Dialup connection)"→Select the dialup connection and click "接続 (Connect)".→Go to Step 4

#### **Under Windows XP**

Click "スタート (Start)"→Select "すべてのプログラム (All programs)"→"アクセサリ (Accessories)"→
"通信 (Communication)" and click "ネットワーク接続 (Network connection)"→Double-click the connection icon.→Go to Step 4

3 On the "ネットワークと共有センター (Network and shared center)" screen, click "アダプターの設定の変更 (Change adapter configuration)" appeared on the left of the top→Double-click the connection icon.

# Enter "ユーザー名 (User name)"→Enter "パスワード (Password)"→Click "ダイ ヤル (Dial)".

- In "ユーザー名 (User name)" and "パスワード (Password)", enter the user name and password specified by your provider or network administrator.
- When using mopera U or mopera, you do not need to enter "ユーザー名 (User name)" or "パス ワード (Password)".
- When "ユーザー名 (User name)" was entered or " パスワード (Password)" was saved while settings, these entries are no longer necessary.
- Click "OK" when the connection established screen is displayed.




Connected 64K

27sec

### **∠INFORMATION**

 FOMA terminal displays a connecting screen when you execute packet communication or 64K data communication. The following screens are displayed when a connection has been established.

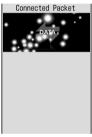



For packet communication

- The communication speed displayed on your PC may differ from actual speed.
- . The communication is available only with FOMA terminal that was connected when the connection icon was created.

## Disconnecting communication

Just exiting the PC browser may not disconnect communication. To ensure disconnection, perform the following operation.

## <Example> Under Windows 7

Click 🗖 on the task tray→Connection name to disconnect→"切断 (Disconnect)".

## Under Windows Vista

Right-click 🗐 in the task tray→Select "切断 (Disconnect)" and click the dialup connection to disconnect.

#### **Under Windows XP**

Click dial-up icon in the task tray→Click "切断 (Disconnect)".


## AT command

AT commands are commands for setting FOMA terminal functions using a PC. FOMA terminals comply with AT commands and support some extended commands and proprietary AT commands.

## AT command input format

"AT" must be entered before each AT command. Commands must be entered in one-byte alphanumeric characters.

#### <Example> Connecting to mopera U with ATD command

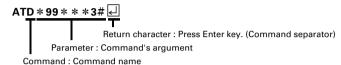

AT commands and their parameters must be entered on a single line. All the characters from the first character until the character directly preceding unst be entered on a single line. Each line can be up to 256 characters including "AT".

## AT command input mode

To operate FOMA terminal using AT commands, a PC must be in terminal mode. Terminal mode is a mode that lets the PC operate as a single communication terminal. When terminal mode is set, the characters entered from the keyboard are sent directly to the communication port to operate FOMA terminal.

#### Offline mode

FOMA terminal is in stand-by. FOMA terminal must be in stand-by status to use AT commands to control it.

## Online data mode

FOMA terminal is communicating. If you enter AT commands when FOMA terminal is performing communication, the sent characters are sent directly to the communication receiver and may cause the receiver's modem to malfunction. Do not enter AT commands while FOMA terminal is performing communication.

#### Online command mode

AT commands can be used even when FOMA terminal is in communication mode. These operations make it possible to execute AT commands without interfering with the connection to the communication receiver, and normal communication can continue after the commands have finished executing.

## Switching between online data mode and online command mode

To switch FOMA terminal from online data mode to online command mode, you can use either of the following procedures.

- Enter +++ command or code set in the S2 register.
- Turn the RS-232C\*ER signal OFF when set in "AT&D1".
  - \* The USB or Bluetooth interface emulates an RS-232C signal line so RS-232C signal control using communication applications is possible.

## *∨***INFORMATION**

 When making a call or sending an AT command from external device, it is sent from Number A with 2in1 in Dual mode or A mode, and from Number B in B mode.

# **◆ List of AT command**

- The followings are AT command that can be used via the FOMA F02C (Modem).
- Entering "\displays may cause "\" to appear depending on the font setting for a PC or communication software.
- If the battery pack is removed from FOMA terminal before the terminal power is turned off, the setting
  values may not be recorded.

Upper slot : Command Lower slot : Example	Description	
A/ A/ OK	Execute the previously executed command again.  When previous response is "ERROR", "ERROR" is returned.	
AT AT OK	Use commands on this list by prefixing to commands other than A/ or +++. When using only this command, "OK" is returned with FOMA terminal enabled for using AT commands.	
RING ATALL CONNECT	Perform the receiving process when entered while receiving a packet communication or 64K data communication. The following commands can be entered when receiving a packet communication. ATA184: Handling of incoming calls: Send caller ID function OFF ATA186: Handling of incoming calls: Send caller ID function ON	
ATD ATD * 99 * * * 1# - CONNECT 460800	ATD * 99 * * * <cid>* : Performs calling process for packet communication.  If <cid> or * * * <cid> is omitted, <cid>=1 is set.  ATD [parameter] [phone number] : Perform calling process for 64K data communication.  Calling process is not permitted if phone number contains characters other than the following.  0-9, *, #, A, a, B, b, C, c  The following characters and a space can be entered but are not recognized in dialing.  ,(comma), !, -, @, D, d, P, p, T, t, W, w  Setting Show/Hide caller ID is enabled by inserting 186 or 184 after ATD.  ATDN or ATDL can be used for redial calling.</cid></cid></cid></cid>	
ATE <n>*1  ATE1  OK</n>	Set whether FOMA terminal will return echo for command sent from a PC.  n=0: Echo OFF	
ATH ATH NO CARRIER	Disconnect line when entered during a communication.  Execute in online command mode.→P28	
ATI <n> ATIO NTT DoCoMo OK</n>	Display the confirmation code.  n=0: "NTT DoCoMo" n=1: Display model name of FOMA terminal n=2: Display version of FOMA terminal n=3: Display elements of ACMP signals n=4: Display details of functions that can be communicated by FOMA terminal in numeric	
ATO ATO CONNECT 460800	Return from online command mode to online data mode during communication.	
ATQ <n>*1 ATQ0 L OK</n>	Set whether to display result code.  n=0 : Display (default)	
ATS0= <n>*1  ATS0=0 4  OK</n>	Set number of rings until FOMA terminal receives communication automatically.  n=0: Not receive automatically (default) n=1-255: Receive automatically with specified number of rings ATS07: Display current settings	
ATS2= <n> ATS2=43  OK</n>	Set escape character.  n=0-127 (default : n=43) When n=127 is set, escape is unavailable.  ATS2? : Display current settings  Set the carriage return (CR) character that identifies the end of AT command character string. Appended to end of echoed command character string and result code.  n=13 (fixed value)  ATS3? : Display current settings	
ATS3= <n> ATS3=13 U OK</n>		

Upper slot : Command Lower slot : Example	Description	
ATS4= <n></n>	Set the line feed (LF) character. When result code is displayed as alphabetic characters,	
ATS4=10 [4]	appends the character after the carriage return (CR) character.	
OK	n=10 (fixed value)	
	ATS4? : Display current settings	
ATS5= <n></n>	Set the back space (BS) character. When this character is detected during command input, the last character in the input buffer is deleted.	
ATS5=8 U	n=8 (fixed value)	
OK	ATS5? : Display current settings	
ATS6= <n></n>	Set pause time (seconds) until dialing commences but do not operate.	
ATS6=5₽	n=2-10 (default : n=5) ATS6? : Display current settings	
OK	· · ·	
ATS8= <n></n>	Set pause time (seconds) until commas are dialed but do not operate.  n=0-255 (default : n=3)	
ATS8=3 🚽	ATS8?: Display current settings	
OK ATS10= <n>*1</n>	· · · · · · · · · · · · · · · · · · ·	
	Set the delay time (1/10 seconds) for automatic disconnection but do not operate.  n=1-255 (default : n=1)	
ATS10=1 4 OK	ATS10? : Display current settings	
ATS30= <n></n>	Set a period of time (minutes) with no data transmission/reception to terminate the	
ATS30=0 ←	connection for 64K data communications.	
OK	n=0-255 : (default : n=0, n=0 indicates that inactive timer is set to OFF.)	
470400	ATS30? : Display current settings	
ATS103= <n></n>	Set the separator of received sub addresses for 64K data communication.  n=0: * n=1:/(default) n=2: ¥ or \	
ATS103=1닡 OK	ATS103? : Display current settings	
ATS104= <n></n>	Set the separator of sent sub addresses for 64K data communication.	
ATS104=1	n=0:# n=1:% (default)	
OK OK	ATS104? : Display current settings	
ATV <n>*1</n>	Set result code display method.	
ATV1₽	n=0 : Number display	
OK	When ATV0 is executed, "0" is not returned to the same line.	
ATX <n>*1</n>	Set whether to detect busy or dial tones and whether to display the speed in the	
ATX4₽	"CONNECT" display for the connection.  Busy tone detection: Send "BUSY" response when dialup connection is busy.	
OK	Dial tone detection : Detect whether FOMA terminal is connected.	
	n=0: No busy tone, no dial tone detected, and no speed is displayed	
	n=1 : No busy tone, no dial tone detected, and speed is displayed n=2 : No busy tone, dial tone detected, and speed is displayed	
	n=3 : Busy tone detected, no dial tone detected, and speed is displayed	
	n=4: Busy tone detected, dial tone detected, and speed is displayed (default)	
ATZ*3	When n=0 is set, AT&E and AT¥V command will be unavailable.	
	Reset the current setting to the registered state.  When this command is executed during communication, the terminal is reset after the line	
ATZ닏 OK (When in offline mode)	is disconnected (displaying "NO CARRIER").	
AT%V	Display FOMA terminal version.	
AT%V↓		
Ver1.00 OK		
AT&C <n>*1</n>	Set the operating conditions of the circuit CD (DCD) for DTE.	
AT&C1	n=0 : Always ON n=1 : Vary according to line connection status (default)	
OK	When set to n=0, the CD signal is set to ON directly before sending "CONNECT" when	
	ending connection. The CD signal is set to OFF directly before the line is disconnected and "NO CARRIER" is sent.	
AT&D <n>*1</n>	Set the operation performed when circuit ER (DTR) signal received from DTE is switched	
AT&D2	from ON to OFF while online data mode takes effect.	
OK	n=0: Ignore status (status is always considered to be ON)	
	n=1 : Move to online command mode when status changes from ON to OFF n=2 : Disconnect line and move to offline mode when status changes from ON to OFF	
	(default)	

Upper slot : Command Lower slot : Example	Description	
AT&E <n>*1 AT&amp;E1 ← OK</n>	Set the speed display used when connection is made. n=0: Display communication speed of wireless zone n=1: Display communication speed between a PC and FOMA terminal (default)	
AT&F  AT&F  OK (When in offline mode)	Reset the current setting to the default.  When this command is executed during communication, the terminal is reset after the line is disconnected (displaying "NO CARRIER").  Set control of the data set ready (DR) signal to be output to DTE.  n=0: Always ON (default) n=1: ON at time of connection	
AT&S <n>*1 AT&amp;S0</n>		
AT&W AT&W OK	Register the current settings in FOMA terminal.	
AT * DANTE  AT * DANTE    * DANTE : 3  OK  AT * DGANSM= <n>*2</n>	Indicate FOMA terminal reception level in the "* DANTE: <n>" format.  n=0: Out of service area n=1: Received signal level of FOMA terminal is 0 or 1 antenna.  n=2: Received signal level of FOMA terminal is 2 antennas.  n=3: Received signal level of FOMA terminal is 3 antennas.  AT * DANTE=?: Display a list of displayable values  Set to reject or permit incoming packet communications.</n>	
AT * DGANSM=0 — OK	n=0 : Reject setting = OFF, Accept setting = OFF (default) n=1 : Reject setting=ON	
AT * DGAPL= <n> [,<cid>)<sup>*2</sup> AT * DGAPL=0,1  AT</cid></n>	Set the dialup connections (APN) to permit incoming packet communications. APN uses coids defined by +CGDCONT command.  n=0: Add to list of APN permitted for incoming communications n=1: Delete from list of APN permitted for incoming communications  If the <cid> is not defined by the +CGDCONT command, it can still be added to/deleted from the list.  If the <cid> is omitted, all the <cid> are added to/deleted from the list.  AT * DGAPL=?: Display current settings  AT * DGAPL=?: Display a list of assignable values</cid></cid></cid>	
AT * DGARL= <n> [,<cid>]*2  AT * DGARL=0,1  OK</cid></n>	Set the dialup connections (APN) to refuse incoming packet communications. APN uses <cid> defined by +CGDCONT command.  n=0: Add to list of APN rejected for incoming communications  n=1: Delete from list of APN rejected for incoming communications  If the <cid> is not defined by the +CGDCONT command, it can still be added to/deleted from the list.  If the <cid> is omitted, all the <cid> are added to/deleted from the list.  AT * DGARL?: Display current settings  AT * DGARL=?: Display a list of assignable values</cid></cid></cid></cid>	
AT * DGPIR=0**2  AT * DGPIR=0** OK	Set Caller ID notification when packet communication connection is being performed. This command is available when a communication is sent or received.  n=0: Connect to APN directly (default) n=1: Connect to APN prefixing 184  n=2: Connect to APN prefixing 186  When Show/Hide caller ID is specified by dialup network→P20  AT * DGPIR?: Display current settings  AT * DGPIR=?: Display a list of assignable values	
AT * DRPW  AT * DRPW =   * DRPW : 0  OK	Indicate an index for the reception power of the radio waves that FOMA terminal receive.  AT * DRPW=? : Display a list of displayable values	
AT+CAOC AT+CAOC + +CAOC : "000024" OK	Display last call cost.	
AT+CBC  AT+CBC L +CBC: 0,100 OK	Display FOMA terminal's battery level in the "+CBC : <bs></bs> bcs=0 : Powered by the battery pack bcs=1 : Not powered by the battery pack bcs=2 : Battery pack removed bcs=3 : Power-supply error bcl=0 : No battery remained or battery pack removed bcl=1-100 : Battery remained AT+CBC=? : Display a list of displayable values	

Upper slot : Command Lower slot : Example	Description
AT+CBST= <n>.1.0*1</n>	Set the line to use (Setting of bearer service)
AT+CBST=116,1,0 ←	n=116 : 64K data communication (default)
ОК	AT+CBST?: Display current settings AT+CBST=?: Display a list of assignable values
AT+CDIP= <n>*1</n>	Set to notify/not to notify the sub address when receiving in packet communication or 64
AT+CDIP=0←	data communication. And, subscription status of Multi Number can be confirmed. n=0: The information of sub address is not displayed. (default)
OK	n=1 : The information of sub address is not displayed.
	m=0 : Multi Number not subscribed. m=1 : Multi Number subscribed. AT+CDIP? : Display the current settings and status in the "+CDIP: <n>,<m>" format AT+CDIP=? : List of the settable values is displayed.</m></n>
AT+CEER	Display the reason of immediate disconnection.
AT+CEER ←	Disconnection reason list→P34
+CEER: 36	
OK	
AT+CGDCONT*2	Set dialup connection (APN) for packet communication.→P35
→P35	
AT+CGEQMIN*2	Set the criteria for judging whether to permit QoS (Quality of Service) provisioned by the network when packet communication is established.→P36
→P36	· · · · · · · · · · · · · · · · · · ·
AT+CGEQREQ*2	Set QoS (Quality of Service) requested to the network at the transmission of packet communication.→P36
→P36	
AT+CGMR	Display FOMA terminal version.
AT+CGMR ←	
1234567890123456 OK	
AT+CGREG= <n>*1</n>	Set whether to report network service registration status (Within/Out).
AT+CGREG=0   ✓	n=0 : Not notified (default)
OK	n=1: When the terminal is moved from Within service area to Out of service area or vice versa, the status is reported in the "+CGREG: <stat>" format.</stat>
	stat=0 : Out of packet service area stat=1 : Within packet service area
	stat=4 : Unknown
	stat=5: Within packet service area (during international roaming)
	AT+CGREG? : Display the current settings and status in the "+CGREG : <n>,<stat>" format AT+CGREG=? : Display a list of assignable values</stat></n>
AT+CGSN	Display FOMA terminal serial No.
AT+CGSN↓	- Signa, i Silin Kalininia, osila. Noi
123456789012345	
OK	
AT+CLIP= <n>*1</n>	Set whether to display sender's caller ID on a PC when receiving 64K data communication.
AT+CLIP=0←	n=0 : Not display result (default) n=1 : Display result
OK	m=0 : Network setting not to send caller ID m=1 : Network setting to send caller ID m=2 : Unknown
	AT+CLIP?: Display the current settings and status in the "+CLIP: <n>,<m>" format</m></n>
	AT+CLIP=? : Display a list of assignable values
AT+CLIR= <n>*2</n>	Set Caller ID notification when sending 64K data communication.
AT+CLIR=2←	n=0 : Use the setting in Caller ID notification of FOMA terminal n=1 : Not send n=2 : Send (default)
OK	n=2 : Send (default) m=0 : CLIR not operating (always sends) m=1 : CLIR operating (never sends)
	m=2: Unknown m=3: CLIR temporary mode (default=does not send)
	m=4 : CLIR temporary mode (default=sends)
	AT+CLIR?: Display the current settings and status in the "+CLIR: <n>,<m>" format AT+CLIR=?: Display a list of assignable values</m></n>
AT+CMEE= <n>*1</n>	Set whether to display an error report at FOMA terminal.
AT+CMEE=0	n=0 : Display "ERROR" and no result code (default)
ОК	n=1: Use result code, displaying reason as number n=2: Use result code, displaying reason as alphabetic characters
	Display reasons in the "+CME ERROR: xxxx" format when n=1 or n=2 is set (xxxx = number
	or alphabetic characters) P35 "Error messages list"
	AT+CMEE?: Display current settings AT+CMEE=?: Display a list of assignable values

Upper slot : Command		
Lower slot : Example	Description	
AT+CNUM AT+CNUM + CNUM : ,"090XXXXXXXX", 129 OK	Display FOMA terminal's own phone number in the "+CNUM:," <number>",<type>" format. number: Own phone number (With 2in1, display Number B in B mode or Number A in other mode) type=129: International access code + not included type=145: International access code + included</type></number>	
AT+COPS= <n>,2, <oper> *2 AT+COPS=0 &amp; OK</oper></n>	Set search method for network operator to connect.  n=0: Auto (default)	
AT+CPAS AT+CPAS + +CPAS: 0 OK	Display whether FOMA terminal can send and receive AT commands to external devices in "+CPAS: <n>" format.  n=0: Possible</n>	
AT+CPIN=" <pin>", "<newpin>" AT+CPIN="0000"  OK</newpin></pin>	Enter these commands for entering PIN1/PIN2 codes or PUK with PIN1 code ON. To enter PUK, enter new PIN1/PIN2 code in <newpin>. Even if entering in <newpin> when entry of PIN1/PIN2 code is request, PIN1/PIN2 code cannot be changed.  n=READY: Entry of code not requested n=SIM PIN: Entry of PIN1 code waited n=SIM PIN2: Entry of PIN2 code waited n=SIM PUK: Entry of PIN2 waited due to failure in unblocking PIN1 code n=SIM PUK2: Entry of PUK waited due to failure in unblocking PIN2 code AT+CPIN?: Display the code currently requested in "+CPIN: <n>" format</n></newpin></newpin>	
AT+CR=or*1 AT+CR=0rd OK	Set whether to display the communication type before "CONNECT" is displayed during connection.  n=0: Not display (default) n=1: Display the communication type in the "+CR: <serv>" format serv=GPRS: Packet communication serv=SYNC: 64K data communication serv=AV64K: 64K videophone  AT+CR?: Display current settings  AT+CR?: Display a list of assignable values</serv>	
AT+CRC= <n>*1  AT+CRC=0 OK</n>	Set whether to use +CRING result codes when communication is received.  n=0: Not use (default) n=1: Use "+CRING: <type>" result codes type=GPRS "PPP",,,"<apn>": Packet communication type=SYNC: 64K data communication type=AV64K: 64K videophone AT+CRC?: Display current settings AT+CRC=?: Display a list of assignable values</apn></type>	
AT+CREG= <n>*1 AT+CREG=0 L OK</n>	Set whether to report network service registration status (Within/Out).  n=0: Not notified (default) n=1: When the terminal is moved from Within service area to Out of service area or vice versa, the status is reported in the "+CREG: -stat>" format.  stat=0: Out of sound service area stat=1: Within sound service area stat=4: Unknown stat=4: Unknown stat=5: Within sound service area (during international roaming) AT+CREG?: Display the current settings and status in the "+CREG: -n>,-stat>" format AT+CREG=?: Display a list of assignable values	
AT+CUSD=<0,"012345678"  AT+CUSD=0,"012345678"  OK	Set Additional service (Register USSD) of Network Services. Enter Service code provided by DOCOMO in <str></str>	
AT+FCLASS=0 L OK	Set communication type supported by FOMA terminal. n=0 : Only data supported (fixed value) AT+FCLASS? : Display current settings AT+FCLASS=? : Display a list of assignable values	
AT+GCAP AT+GCAP + +GCAP: +CGSM,+FCLASS, +W OK	Display the range of AT commands supported by FOMA terminal in the "+GCAP : <n>" format. n=+CGSM : Support GSM commands (including the case for supporting a part) n=+FCLASS : Support +FCLASS commands n=+W : Support +W commands</n>	

Upper slot : Command Lower slot : Example	Description
AT+GMI AT+GMI FUJITSU OK	Display FOMA terminal manufacturer name.
AT+GMM AT+GMM FOMA F02C OK	Display model name of FOMA terminal.
AT+GMR AT+GMR Ver1.00 OK	Display FOMA terminal version.
AT+IFC= <n,m>*1 AT+IFC=2,2   OK</n,m>	Set how to control local flow between a PC and FOMA terminal.  n, m=0: No flow control
AT+WS46= <n>*1</n>	Display wireless network used when sending communication in n number.  When entering AT+WS46= <n>, ERROR is returned because it cannot be changed.  n=12: GSM network</n>
AT¥S  AT¥S  E1 Q0 V1 X4 &C1 &D2  &S0 · · · (snip) · · · ·  S104=001  OK	Display the currently set commands and S register settings.
AT¥V <n>*1 AT¥V0 OK</n>	Set whether to use expanded result codes when connection is made. n=0: Not use expanded result codes (default) n=1: Use expanded result codes
+++ (not displayed) OK	Move from online data mode to online command mode when entered during a communication. The escape guard interval is 1 second (fixed value).

<sup>\*1</sup> Registered in FOMA terminal by &W command.

# ◆ Disconnection reason list

## ■ Packet communication

Value	Description
26	APN is not present or is incorrect.
27	
30	Disconnected by network.
33	Terminal does not subscribe to packet communication.
36	Normal disconnection.

<sup>\*2</sup> Not reset by &F and Z commands.

<sup>\*3</sup> When Z command is executed before the &W command, the terminal is reset to the last status registered in memory, and prior changes are erased.

### ■ 64K data communication

Value	Description	
1	Specified number does not exist.	
16	Normal disconnection.	
17	Communication is impossible because remote device is busy.	
18	You made a call but did not receive a response within the specified time.	
19	The remote device is called but no response.	
21	The remote device rejected incoming calls.	
63	The service and option of the network are not valid.	
65	Unavailable processing speed was specified.	
88	You made a call to a terminal or received a call from a terminal with different terminal properties.	

# **◆**Error messages list

No.	Text display	Description
10	SIM not inserted	docomo UIM is not set.
15	SIM wrong	Other than DOCOMO SIM (IC card equivalent to docomo UIM) is inserted.
16	incorrect password	Incorrect password
100	unknown	Unknown error

# **♦** Supplement to AT command

- <cid> is the number used to control dialup connection (APN) for packet communication to be registered in FOMA terminal. "1-10" can be registered in FOMA terminal.
- By default, the following APNs are registered in cid1-4.

cid1: mopera.ne.jp (APN mopera, PPP connection)

cid2: mopera.net (APN mopera U, PPP connection)

cid3: mopera.net (APN mopera U, IP connection)

cid4: mpr.ex-pkt.net (APN mopera U, PPP connection, 128K communication)

<APN> is an optional string for each connection to indicate dialup connection.

## ■ Command name : +CGDCONT=[parameter]

#### Outline

Set dialup connection (APN) for packet communication.

#### Format

+CGDCONT= [<cid> [,"<PDP TYPE>" [,"<APN>"] ] ]

#### Parameter description

<cid>: 1-10

<PDP TYPE>: IP or PPP

<APN>: Optional

### · Example of execution

The command used to register an APN named "abc" for PPP connection (when <cid>=5).

AT+CGDCONT=5,"PPP","abc"

OK

## · Operation performed when parameter is omitted

AT+CGDCONT=: Return all <cid> to the setting by default.

AT+CGDCONT=<cid>: Return the specified <cid> to the setting by default.

AT+CGDCONT?: Display current settings.

AT+CGDCONT=?: Display a list of assignable values.

## ■ Command name : +CGEQMIN=[parameter]

## Outline

Set the criteria for judging whether to permit QoS (Quality of Service) provisioned by the network when packet communication is established.

#### Format

AT+CGEQMIN= [<cid>[,,<Maximum bitrate UL> [,<Maximum bitrate DL>]]]

## · Parameter description

<cid>: 1-10

<Maximum bitrate UL> : None (default) or 5,760

<Maximum bitrate DL>: None (default) or 7,232

\* For <Maximum bitrate UL> and <Maximum bitrate DL>, the maximum communication speed (in kbps) is set for both upload and download traffic between FOMA terminal and the base station. If the parameter is set to "None (default)", all speeds are permissible. If "5,760" and "7,232" are set, any connection at a speed less than the above limit is not permitted, and chances are that packet communication will not be connected.

#### Example of execution

- Command used to permit all speeds both upload and download (when <cid>=5)

AT+CGEQMIN=5↓

OK

- Command used to permit only 5,760kbps upload and 7,232kbps download (when <cid>=6)

AT+CGEQMIN=6,,5760,7232 ←

OK

- Command used to permit only 5,760kbps upload and all speeds download (when <cid>=7)

AT+CGEQMIN=7,,5760 □

OK

- Command used to permit all speeds upload and only 7,232kbps download (when <cid>=8)

AT+CGEQMIN=8,,,7232 ←

OK

#### Operation performed when parameter is omitted

AT+CGEQMIN=: Returns all <cid> to the setting by default.

AT+CGEQMIN=<cid>: Returns the specified <cid> to the setting by default.

AT+CGEQMIN?: Displays current settings.

AT+CGEQMIN=?: Displays a list of assignable values.

## ■ Command name : +CGEQREQ=[parameter]

#### Outline

Set QoS (Quality of Service) requested to the network at the transmission of packet communication.

### Format

AT+CGEQREQ= [<cid>]

## · Parameter description

Only commands that require connection at 64-5,760kbps upload, 64-7,232kbps download can be set. The contents are set by default for each <cid>.

<cid>: 1-10

#### Example of execution

(when <cid>=3)

AT+CGEQREQ=3₽

OK

#### · Operation performed when parameter is omitted

AT+CGEQREQ=: Returns all <cid> to the setting by default.

AT+CGEQREQ=<cid>: Returns the specified <cid> to the setting by default.

AT+CGEQREQ?: Displays current settings.

AT+CGEQREQ=? : Displays a list of assignable values.

# ◆ Result codes

When ATV command is set to n=1 (default), the result code is displayed in alphabetic characters. When
the command is set to n=0, the result code is displayed numerically.→P30

## ■ Result codes

No.	Text display	Meaning
0	OK	Operation performed normally
1	CONNECT	Terminal connected to other party
2	RING	Incoming call
3	NO CARRIER	Line disconnected
4	ERROR	Unable to accept command
6	NO DIALTONE	Unable to detect dial tone
7	BUSY	Detecting the busy tone
8	NO ANSWER	Completed connection Time-out
100	RESTRICTION	Network restriction in place (The communication network is
		busy. Please wait for a while and retry.)
101	DELAYED	Redial call restricted

## ■ Extended result code

## . When AT&E is set to n=0

No.	Text display	Connection speed between FOMA terminal and base station
122	CONNECT 64000	64000bps
125	CONNECT 384000	384000bps
133	CONNECT 3648000	3648000bps
135	CONNECT 7232000	7232000bps

## • When AT&E is set to n=1

No.	Text display	Connection speed between FOMA terminal and a PC
5	CONNECT 1200	1200bps
10	CONNECT 2400	2400bps
11	CONNECT 4800	4800bps
13	CONNECT 7200	7200bps
12	CONNECT 9600	9600bps
15	CONNECT 14400	14400bps
16	CONNECT 19200	19200bps
17	CONNECT 38400	38400bps
18	CONNECT 57600	57600bps
19	CONNECT 115200	115200bps
20	CONNECT 230400	230400bps
21	CONNECT 460800	460800bps

<sup>\*</sup> To retain compatibility with a modern connected via conventional RS-232C, communication speed is displayed, but it differs from the actual connection speed because FOMA terminal is connected to a PC with a USB cable or Bluetooth function.

## ■ Communication protocol result code

No.	Text display Meaning					
1	PPPoverUD	Connect via 64K data communication (BC=UDI, +CBST=116,1,0)				
3	AV64K	Connect via 64K videophone				
5	PACKET	Connect via packet communication				

## ■ Display example of result code

## When ATX0 is set

Regardless of the settings of AT¥V command, only "CONNECT" is displayed upon completion of connection.

Text display example : ATD \* 99 \* \* \* 1# CONNECT

Number display example : ATD \* 99 \* \* \* 1#

1

#### When ATX1 is set

When ATX1, AT ¥ V0 (default) is set

Upon completion of connection, the result code is displayed in the following format: "CONNECT <speed between FOMA terminal - PC>".

Text display example: ATD \* 99 \* \* \* 1#

**CONNECT 460800** 

Number display example: ATD \* 99 \* \* \* 1#

1 2

When ATX1, AT¥V1 is set\*1

The code is displayed upon completion of connection in the following format.

"CONNECT<speed between FOMA terminal - PC><Communication protocol><dialup connection (APN)>/
<upstream maximum speed (between FOMA terminal → radio base station)>/<downstream maximum
speed (between FOMA terminal ← radio base station)>"\*²

Text display example: ATD \* 99 \* \* \* 1#

CONNECT 460800 PACKET mopera.ne.jp/5760/7232

(Indicates the terminal is connected to mopera.ne.jp providing a maximum upload speed of 5,760kbps and a maximum download speed of 7,232kbps.)

Number display example : ATD \* 99 \* \* \* 1#

1 21 5

- \*1 When ATX1 and AT¥V1 are set at the same time, it is likely that dialup connection will fail. It is recommended that only AT¥V0 be used.
- \*2 When AT¥V1 is set, <dialup connection (APN)> and the following are displayed only when packet is used for connection.

# **Kuten Code List**

For entering characters using code, see "Entering characters using code" in the attached manual. Note that some characters in the code input list may look different from actual ones.

1st	4th digit	t of code	1st	4th digit of code	1st	4th digit	t of code
-3rd 010	0 1 2 3 4	5 6 7 8 9	-3rd 081	0 1 2 3 4 5 6 7 8 9 ++	-3rd 203	0 1 2 3 4 款 歓 汗 漢 潤	5 6 7 8 9 淮 環 甘 監 看
010	i , , , , ,	· · · (	082	┃┴┼ <b>╼</b> ┃┏ <mark>┑┙┕┝┯</mark> ┃┫┻╋╞┯┨┷┿┝┰	203	款飲汗漢澗	潅 環 甘 監 看 翰 肝 艦 莞 観
012	ヾゝゞ〃全		083	i + + i i i i i i i i i i i i i i i i i	205	諌 貫 還 鑑 間	閑 関 陥 韓 館
013 014	· · ( ) [	] [] {}	130	1 2 3 4 5 6 7 8 9	206 207	舘丸含岸巌 贋雁頑顔願	玩癌 眼岩 翫
015	$\langle \rangle \langle \rangle$		131		207	鷹雁頑顔願	ŧ
016	+ - ± × ÷	= ≠ < > ≦	132		207		企伎危喜器
017 018	≥ ∞ ∴ ♂ ♀ \$ ¢ £ % #	°′″°C¥ &*@§☆	133 134	X = y + z *	208 209	基奇嬉寄岐旗既期棋棄	希 幾 忌 揮 机
019	$\star \circ \bullet \circ \diamond$		135	km mg kg cc mî	210	機帰毅気	汽 畿 祈 季 稀
020 021	◆ □ ■ △ → ← ↑ ↓ ≡	▲ ▽ ▼ ※ 〒	136 137	〒	211 212	紀徽規記貴鬼亀偽儀妓	起軌輝飢騎宜戯技擬欺
022	· · · •	€∋⊆⊇	138	$ \dot{=} \equiv \int \oint \Sigma \sqrt{\perp \angle \perp \angle} $	213	海 电 闹 嵌 X 犠 疑 祇 義 蟻	直議掬菊鞠
023	$\subset \supset \cup \cup \cup$		139	∵ n u	214	吉吃喫桔橘	詰砧杵黍却
024	^ V ¬	⇒ ⇔ ∀ ∃	160	亜 唖 娃 阿 哀 愛 挨 姶 逢	215 216	客脚虐逆丘宫弓急救朽	久 仇 休 及 吸 求 汲 泣 灸 球
026	∠ ⊥ ^ ∂ ⊽	≡ ≒ ≪ ≫ √	161	葵 茜 穐 悪 握 渥 旭 葦 芦 鯵	217	究窮笈級糾	給旧牛去居
027 028	∞ ∞ ∵ ∫ ∬ Å ‰ #	ь ♪ † ‡ ¶	162 163	梓 圧 斡 扱 宛 姐 虻 飴 絢 綾 鮎 或 粟 袷 安 庵 按 暗 案 闇	218 219	巨拒拠挙渠禦魚亨享京	虚許距鋸漁
029	7, 7, 7,		164	鞍杏	220	供侠僑兇	競共凶協匡
031		0123	164	以 伊 位 【依 偉 囲 夷 委	221 222	卿 叫 喬 境 峡 挟 教 橋 況 狂	強彊怯恐恭狭矯胸脅興
031	45678	9	165	以伊位 依偉囲夷委 威尉惟意慰易椅為畏異	223	挟 教 橋 況 狂 蕎 郷 鏡 響 饗	深
033	A B	CDEFG	166	移維緯胃萎 衣謂違遺医	224	業局曲極玉	桐粁僅勤均
034 035	H I J K L R S T U V	M N O P Q W X Y Z	167 168	井 亥 域 育 郁 機 一 壱 溢 逸 稲 茨 芋 鰯 允 印 咽 員 因 姻	225 226	巾錦斤欣欽芹菌衿襟謹	琴 禁 禽 筋 緊 近 金 吟 銀
036		abcde	169	引飲淫胤蔭		71 EE 17 131 EE	<
037 038	fghij pqrst	klmno uvwxy	170	院陰隠韻」吋	226 227	<b>俱句区狗玖</b>	九 矩 苦 躯 駆 駈
039	Z		170	右宇烏羽	228	駒 具 愚 虞 喰	空偶寓遇隅
040 041	ぁ あ ぃ い お か が き ぎ	ぅ う ぇ え ぉ く ぐ け げ こ	171 172	迂雨卯鵜窺 丑碓臼渦嘘唄欝蔚鰻姥 厩浦瓜閨噂	229 230	串櫛釧屑屈掘窟沓靴	轡窪熊隈粂
042	ごさざしじ	すずせぜそ	173	云運 雲	231	栗 繰 桑 鍬 勲	君薫訓群軍
043 044	ぞただちぢ とどなにぬ	っつづてで ねのはばぱ	173	える。	232	郡	+
045	ひびぴふぶ	ぷへべぺほ	174	在 餌 叡 営 嬰 影 映 曳 栄 永 泳 洩 瑛 盈 穎 頴 英	232	卦 袈 祁 係	傾 刑 兄 啓 圭
046	ぼぽまみむ	めもゃやゅ	175	衛詠鋭液疫益駅悦謁越	233	珪型契形径	恵慶慧憩掲
047 048	ゆょよらり ゐゑをん	るれろゎゎ	176 177	閱 榎 厭 円 園 堰 奄 宴 延 怨 掩 援 沿 演 炎 焔 煙 燕 猿 縁	234 235	携敬景桂渓繋罫茎荊蛍	畦 稽 系 経 継 計 詣 警 軽 頚
050			178	艶 苑 薗 遠 鉛 鴛 塩	236 237	鶏芸迎鯨劇	戟 擊 激 隙 桁
050	ァアィイ オカガキギ	ゥウェエォクグケゲコ	178	お	238	傑欠決潔穴	結 血 訣 月 件 剣 喧 圏 堅 嫌
052	ゴサザシジ	スズセゼソ	179	凹 央 奥 往 応	239	建憲懸拳捲	
053 054	ゾ タ ダ チ ヂ ト ド ナ ニ ヌ	ッツヅテデネノハバパ	180 181	押旺横欧殴王翁襖鴬鸡黄岡沖荻億屋憶臆桶	240 241	検権牽犬肩見謙賢軒	献研硯絹県遺鍵険顕験
055	ヒビピフブ	プヘベペホ	182	牡乙俺卸恩 温穏音	242	鹸 元 原 厳 幻	弦減源玄現
056 057	ボポマミムユョヨラリ	メモャヤュルレロヮワ	182	下 化	243	絃 舷 言 諺 限	
058	<b>キ</b> ヱ ヲ ン ヴ	ル レ ロ <i>,</i> フ フ	183	仮何伽価佳 加可嘉夏嫁	243		乎 個 古 呼 固
060	АВΓΔ	EZHOI	184 185	家寡科暇果 架歌河火珂禍禾稼箇花 苛茄荷華菓	244 245	姑 孤 己 庫 弧糊 袴 股 胡 菰	戸 故 枯 湖 狐 虎 誇 跨 鈷 雇
061	K A M N E	ΟΠΡΣΤ	186	蝦 課 嘩 貨 迦 過 霞 蚊 俄 峨	246	顧鼓五互伍	午呉吾娯後
062 063	ΥΦΧΨΩ αβ	γδεζη	187 188	我牙画臥芽 蛾賀雅 餓駕介会解回塊 壊廻快怪悔	247 248	御悟梧檎瑚乞鯉交佼侯	碁語誤護醐候倖光公功
064	θικλμ	νξοπρ	189	恢 懐 戒 拐 改	249	効 勾 厚 口 向	
065	στυφχ	ψω	190 191	魁 晦 械 海 灰 界 皆 絵 芥 蟹 開 階 貝 凱 劾 外 咳 害 崖	250 251	后喉坑垢巧巷幸広庚	好 孔 孝 宏 工 康 弘 恒 慌 抗
070	АБВГ	деёжз	192	慨 概 涯 碍 蓋 街 該 鎧 骸 浬	252	拘控攻昂晃	更杭校梗構
071	ИЙКЛМ	нопрс	193	馨蛙垣柿蛎 鈎劃嚇各廓	253	江 洪 浩 港 溝	甲皇硬稿糠
072 073	ТУФХЦ ЬЭЮЯ	чшщъы	194 195	拡 撹 格 核 殻 獲 確 穫 覚 角 赫 較 郭 閣 隔 革 学 岳 楽 額	254 255	紅紘絞綱耕航荒行衡講	考 肯 肱 腔 膏 貢 購 郊 酵 鉱
074		a a	196	顎掛笠樫橿 梶鰍潟割喝	256	砿 鋼 閤 降 項	香高鴻剛劫
075 076	бвгде клмно	ёжзий прсту	197 198	恰括活渴滑 葛褐轄 旦鰹叶椛樺 鞄株 兜電蒲釜鎌	257 258	号合 壕 拷 濠 告 国 榖 酷 鵠	豪 轟 麹 克 刻 黒 獄 漉 腰 甑
077	фхцчш	щъыьэ	199	噛 鴨 栢 茅 萱	259	忽惚骨狛込	
078	юя		200 201	粥 刈 苅 瓦 乾 侃 冠 寒 刊 勘 勧 巻 喚 堪 姦 完 官 寛 干	260 261	此頃今困昏昆根梱混	坤 墾 婚 恨 懇 痕 紺 艮 魂
080	— I га	J L F T 1	202	幹患感慣憾換敢柑桓棺		20 11 20	

1	1st	4th digit	t of code	1st	4th digit of code 1st 4th digit of code	
19.00   19.			<u>+</u>		全 禅 繕 膳 糎 391 祢 寧 葱 猫 熟 年 念 担	
266   267	262 263	詐 鎖 裟 坐 座	差 査 沙 瑳 砂 挫 債 催 再 最	333	「	農納 能
262   19	265	災采犀砕砦	祭斎細菜裁	335	倉喪壮奏爽 宋層匝惣想 は	来翻如
270	267 268	堺 榊 肴 咲 崎	埼碕鷺作削	337	漕 燥 争 痩 相 窓 糟 総 綜 聡 394   波 派 琶 破 婆   罵 芭 ♬	馬 俳 廃
272   273   274   275   276   277	270	察拶撮擦		340	臓 蔵 贈 造 促 側 則 即 息 397 陪 這 蝿 秤 矧 萩 伯 郭	り博 拍
	272	惨撒散栈燦	珊 産 算 纂 蚕		卒袖其揃存孫尊損村遜 399 爆縛莫駁麦	
275		l	仕 仔 伺	344	他多太汰記 唾 望 妥 惰 打 401 畑 畠 八 鉢 溌 発 酰 射 柁 舵 楕 陀 駄 騨 体 堆 対 耐 402 抜 筏 閥 鳩 噺 塙 蛤 st	後 伐 罰 非 伴 判
277   19	275	子屍市師志	思指支孜斯	346	腿苔袋貸退 逮隊黛鯛代 404 犯班畔繁般 藩販隼	危 釆 煩
280	277	紙紫肢脂至	視詞詩試誌	348	宅托択拓沢 濯琢託鐸濁 ひ	
282	280	次滋治爾		351	棚谷狸鱈樽 誰丹単嘆坦 407 比泌疲皮碑 秘緋	化肥 被
284   286   1   286   287   288	282	軸宍雫七叱	執失嫉室悉	353	綻 耽 胆 蛋 誕 鍛 団 壇 弾 断 409 枇 毘 琵 眉 美	
287   288   289	284 285	屡 蕊 縞 舎 写	射 捨 赦 斜 煮 遮 蛇 邪 借 勺	354	5 411 肘 弼 必 畢 筆 逼 桧 y 正	臣媛 紐
289   289	287	惹主取守手	朱 殊 狩 珠 種	356	畜竹筑蓄逐 秩窒茶嫡着 414 蛭鰭品彬斌 浜瀕貧	
291   292   293   294   294   295   296   296   296   296   297   298   299   299   200   298   299   200   298   299   200   298   299   200   299   200	289	綬 需 囚 収 周		358	註 酎 鋳 駐 樗 瀦 猪 苧 著 貯	富富布
295	292	終 繍 習 臭 舟輯 週 酋 酬 集	蒐 衆 襲 讐 蹴 醜 什 住 充 十	361	帖 帳 庁 弔 張 彫 徴 懲 挑 416 府 怖 扶 敷 斧 普 浮 3 暢 朝 潮 牒 町 眺 聴 脹 腸 蝶 417 膚 芙 譜 負 賦 赴 阜 阝	と符腐け 無
297   296   297   297   298   299	294	夙宿 淑祝縮	粛塾 熟出術		直 朕 沈 珍 賃 鎮 陳 419 伏 副 復 幅 服	
299   299   300   301   302   306   303   301   303   304   305   307   307   307   407   407   307   307   407   407   307   307   407   407   308   407	296 297	旬 楯 殉 淳 準醇 順 処 初 所	潤盾純巡遵暑曙渚庶緒	364	津 墜 椎   421   物 鮒 分 吻 噴 墳 墳 打	
301   安原   1	299	恕鋤除傷償			嬬紬爪吊釣 鶴 422 丙代	
304	301	妾 娼 宵 将 小	少尚庄床廠		亭低停偵 424 僻壁癖碧別 瞥蔑的	10 偏変
306	304	松梢樟樵沼照症省硝礁	消 渉 湘 焼 焦 祥 称 章 笑 粧	369	(	
1	306	詳象賞醤鉦	鍾鐘障鞘上	371	的笛適鏑溺 哲徹撤轍 选 427 穂募墓慕戊 暮母乳	9 菩 倣
311	308	情擾条杖浄			転 顛 点 伝 殿 澱 田 電 429 抱 捧 放 方 朋	
313   314   315   316   316   317   318   318   319   319   320   321   321   321   321   321   321   321   321   321   321   321   321   321   322   322   322   322   323   323   323   323   324   326   326   326   326   327   328   329   329   320   320   321   322   322   322   323   324   325   326   326   326   327   328   329   329   320	311	蝕辱尻伸信	侵唇娠寝審	374	東 吐     431     蜂 褒 訪 豊 邦     鋒 飽 順       堵 塗 妬 屠 徒     斗 杜 渡 登 莬     432     亡 傍 剖 坊 妨     帽 忘 十	亂 鵬 乏 亡 房 暴
315	313	疹真神秦紳	臣 芯 薪 親 診	376	怒 倒 党 冬 凍 刀 唐 塔 塘 套   434   鉾 防 吠 頬 北   僕 卜 暑	፟ と 撲 朴
316     須酢 図 厨 豆 豆 胶 垂 帥 推 水 381     381     體	315			378 379	盗淘湯涛灯     盤当痘祷等     436       答簡糖統到     ま	ш 196 9-г
318	316		吹垂帥推水	381	鐙陶頭騰關動同堂導 437 昧枚毎哩槙幕膜木	丸 鮪 柾
320	318	瑞髓崇嵩数		383	鴇匿得徳涜 特督禿篤毒 439 繭磨万慢満	* 16 18
321		澄 摺 寸 t			寅酉 瀞 噸 屯     惇敦 沌 豚 遁       頓吞 曇 鈍     440	
323   西誠誓講逝   醒青静斉茂   388   軟難次   442   夢無牟矛霧   鵡椋婿娘   325   籍議育責赤   節韻雪絕舌   389   虹廿日乳入   442   夢無牟矛霧   鵡椋婿娘   388   数   1	321	勢姓征性成	政整星睛棲		奈那内乍凪薙む	
325     籍續育責赤     辦讀碩切拙     388     二尼弐迩匂賑內     442     名命明盟迷     第       327     媒伯先千占     宣專尖川戦     390     如尿並任 好忍認     444     名命明盟迷     銘鳴 姪牝滅       328     京撰栓梅泉     浅洗染潜煎     390     本44     人棉綿緬面     類       330     織奏腺件船薦詮     船薦詮     大路     本44     本44     本44     本44	323 324	西越誓請逝脆隻席惜戚	醒青静斉税 斥昔析石積	388	数難   数   数   数   数   数   数   数   数   数	
328     扇撰栓梅泉     浅洗染潜煎       329     煽旋穿箭線       330     織羨腺舛船薦詮賎践         444       445       孟毛猛盲網 耗蒙儲木黙	326	籍績脊責赤接摂折設窃	跡蹟碩切拙節説雪絶舌	389	虹廿日乳入 443 名命明盟迷 銘鳴如	
330 織羨腺舛 船薦詮賎践 445 孟毛猛盲網 耗蒙儲木黙	328	扇撰栓栴泉			b	莫茂妄
	330		船薦 詮 賎 践鲜 前善 漸然		ね 445 孟毛猛盲網 耗蒙値	者 木 黙

1st	4th digit of code	1st	4th digit	of code	1st	4th digi	of code
-3rd	0 1 2 3 4 5 6 7 8	-3rd	0 1 2 3 4	5 6 7 8 9	-3rd	0 1 2 3 4	5 6 7 8 9
447	紋門匁	510 511	思 哂 咤 咾 唔 哽 哮 哭 哺	周 听 哥 哦 唏 哢 唹 啀 啣 啌	588 589	晟 哲 晰 暃 暈 暨 暹 曉 暾 暼	暎 暉 暄 暘 暝
447		512	售啜啅啖啗	唸唳啝喙喀	590	曄 暸 曖 曚	曠昿曦曩日
448 449	矢 厄 役 約 薬 訳 躍 靖 柳 鑓	友 513 514	咯喊喟啻啾啾啼鳴嗅	端 卿 單 啼 喃 嗟 嗄 嗜 嗤 嗔	591 592	曳 曷 朏 朖 朞 朶 杁 朸 朷 杆	朦朧霸朮束
443	地	515	嘔嗷噴嗾嗽	嗟 嗄 嗜 嗤 嗔   嘛 嗹 噎 器 營	593	朶 杁 朸 朷 杆 枉 杰 枩 杼 杪	杞 杠 杙 杣 杤 粉 枋 枦 枡 枅
449	愉 愈 油 癒	516	嘴嘶嘲嘸噫	噤 嘯 噬 噪 嚆	594	枷柯枴柬枳	柩 栒 柤 柞 柝
450 451		<ul><li>517</li><li>518</li></ul>		嚥 嚮 嚶 嚴 囂   喘 囑 喝 口 囮	595 596	抵 柮 枹 柎 柆 桀 桍 栲 桎 梳	極 標 框 栩
452	祐裕誘遊邑 郵雄融夕	519	<b> </b>	7/B 7/90 1/22   III III	597	梟 梏 梭 梔 條	梛 梃 檮 梹 桴
452	<u>ځ</u>	520 5 521	圏 國 圍 圓 圷 址 坎 圻 址	團圖 嗇 圜 圦 坏 坩 埀 垈 坡	598 599	梵 梠 梺 椏 梍 椢 椦 棡 椌 棍	桾 椁 棊 椈 棘
453	余与誉輿預傭幼妖容	522		近 近 並 並 版   近 坊	600	悟 棧 棕 椶	椒接棗棣椥
454	揚 揺 擁 曜 楊 様 洋 溶 熔	523	埔埒埓堊埖	埣 堋 堙 堝 塲	601	棹 棠 棯 椨 椪	椚 椣 椡 棆 楹
455 456	窯 羊 耀 葉 蓉 要 謡 踊 遥 養 慾 抑 欲 沃 浴 翌 翼 淀	易 524 525	堡 塢 塋 塰 毀 墟 墫 墺 壊 墻	時 堽 塹 墅 墹 墸 墮 壅 壓 壑	602 603	楷 楜 楸 楫 楔 楙 椰 楡 楞 楝	楾 楮 椹 楴 椽 榁 楪 榲 榮 槐
	6	526	壗 壙 壘 壥 壜	壤 壟 壯 壺 壹	604	榿 槁 槓 榾 槎	寨 槊 槝 榻 槃
456 457	<b>細 妍 立 芙 葯 声 次 炒 芩</b>	至 527 各 528	壻 壺 壽 夂 夂	<b>夏</b> 夛 梦 夥 夬	605 606	框 樮 榑 榠 榜	榕榴樟椰樂
458	螺 裸 来 莱 頼   雷 洛 絡 落   乱 卵 嵐 欄 濫   藍 蘭 覧	各 528 529	天 卒 夸 夾 竒 奢 奠 奧 獎 奩	変 奐 奎 奚 奘	607		乗 樅 榱 樞 槭 樣 樓 橄 樌 橲
	b	530	奸 妁 妝 佞	侫 妣 妲 姆 姨	608	樶 橸 橇 橢 橙	撞機機機體
458 459	利 履 李 梨 理 璃	531 532	姜妍姙姚娥婀婬婉娵娶	娟 娑 娜 娉 娚 婢 娎 媚 媼 媾	609 610	億 檠 檄 檢 檣 檗 蘗 檻 櫃	櫂 檸 檳 檬 櫞
460	痢 裏 裡 里 離 陸 律 率	533	嫋 嫂 媽 嫣 嫗	嫦嫩嫖燗嫻	611	櫑 櫟 檪 櫚 櫪	櫻欅蘗櫺欒
461 462		± 534 ∓ 535	嬌嬋嬖嬲嫐	嬪嬶嬾孃孅	612	欖鬱欟欸欷	盗欹飲歇歃
462		テレー 535 麦 536	媚子孕孚孛學斈孺宀它	琴 孩 孰 孳 孵 宦 宸 寃 寇 寉	613 614	歉 歐 歙 歔 歛 殀 殄 殃 殍 殘	歟 歡 歸 歹 歿 殕 殞 殤 殪 殫
464	糧良諒遼量 陵領力緑	<b>537</b>	寔 寐 寤 實 寢	寞寥寫寰寶	615	殯殲 殱 殳 殷	殼毆毋毓毟
465	厘林淋燐琳 臨輪隣鱗	538 539	寶 尅 將 專 對 尹 屁 屆 屎 屓	尔 尠 尤 尨 尸	616 617	毬 毫 毳 毯 麾 氣 汞 汕 辻 汪	氈氓气氛氤
466		540	屐 屏 孱 屬	屮 乢 屶 屹 岌	618	汾汨汳沒沐	泄 決 泓 沽 泗
466	n n	541 542	岑 盆 妛 岫 岻	帕峄岷峅屿	619	泅泝沮沱沾	
467		カ 542 電 543	咨 時 報 峽 便 崗 嵜 崟 崛 崑	峭 嶌 峪 崋 崕 崔 崢 崚 崙 崘	620 621	油 泛 泯 泙 洽 洸 洙 洵 洳	泪洟衍洶油  洒洌浣涓浤
468	齢 暦 歴 列 劣 烈 裂 廉 恋	<b>544</b>	嵌品嵎嵋嵬	差嵶嶇嶄嶂	622	浚浹浙涎涕	濤 涅 淹 渕 渊
469 470	連 煉 簾 練 聯 蓮 連 錬	545 546	<ul><li>嶢 嶝 嶬 嶮 嶽</li><li>巓 巒 巖 巛 巫</li></ul>	隆嶷 嶼 巉 巍 已 巵 帋 帚 帙	623 624	涵 淇 淦 涸 淆 淅 淺 淙 淤 淕	淬 淞 淌 淨 淒 淪 淮 渭 湮 菏
470	選 達 域 ろ	547	新 帛 帶 帷 幄	韓幀幎幗幔	625	渙 湲 湟 渾 渣	湫渫湶湍渟
470		各 548	幟幢幣幇幵	并幺麼广庠	626	湃渺 湎 渤 滿	渝游 溂溪 溘
471 472		弱 549 录 550	順 廂 廈 廐 廏 廖 廣 廝 廚	塵 廢 廡 廨 廩	627 628	滉溷滓溽溯 溥滂溟潁溉	滄 溲 滔 滕 溏 灌 滬 滸 滾 漿
473	肋 録 論	551	廬廱廳廰廴	廸 廾 弃 弉 彝	629	滲 漱 滯 漲 滌	
473	を 和 話 歪 賄 脇	552 553	舞 弋 弑 弖 弩 彎 弯 彑 彖 彗	强 弸 彁 彈 彌 彙 彡 彭 彳 彷	630 631	漾 漓 滷 澆 潛 潭 澂 潼	潺 潸 澁 澀 潯 潘 澎 澑 濂 潦
474		等 554	往 徂 彿 徊 很	徑徇從徙徘	632	澳澣澡澤澹	清 澪 濟 濕 濬
475	碗腕	555 556	徐 徨 徭 徼 忖	忻忤忸忱忝	633 634	瀬 濘 濱 濮 濛	瀉瀋濺瀑濱
		557	惠 忿 怡 恠 怙 怕 怫 怦 快 怺	恂 怩 怎 忽 怛   恚 恁 恪 恷 恟	635	瀏濾 瀛 瀚 潴 瀲 灑 灣 炙 炒	瀝 瀘 瀟 瀰 瀾 炯 烱 炬 炸 炳
480	1 5 五 个 別 、 丼 丿	558	協恆恍恣恃	恤恂恬恫恙	636	炮 烟 烋 烝 烙	焉 烽 焜 焙 煥
481 482		559 560	情 悍 惧 悃 悚 悄 悛 悖 悗	悒 悧 悋 惡 悸	637 638	熙熙煦榮煌 煩熨熬燗熹	援 煬 熏 燻 熄 熾 燒 燉 燔 燎
483	仂 仗 仞 仭 仟 价 伉 佚 估	· 第 561	惠惓悴忰悽	惆 悵 惘 慍 愕	639	燠 燬 燧 燵 燼	
484 485		562 第 563	愆惶 惷 愀 惴	惺惶惚惻惱	640 641	燹 燿 爍 爐	爛爨爭爬爰
486		差 563 空 564	愍 愎 慇 愾 慤 愴 愽 慂 慄 慳	愧 慊 愿 愼 愬 慷 慘 慙 慚 慫	642	爲 爻 爼 爿 牀 犂 犁 犇 犒 犖	牆 牋 牘 牴 牾
487	倅 伜 俶 倡 倩 倬 俾 俯 們	565	慴 慯 慥 慱 慟	慝 慓 慵 憙 慭	643	狆 狄 狎 狒 狢	狠狡狹狷倏
488 489	偃 假 會 偕 偐 偈 做 偖 偬 傀 傚 傅 傴 傲	566 567	想 憬 憔 憚 憊 應 懷 懈 懃 懆	憑 憫 憮 懌 懊 憺 懋 罹 懍 懦	644 645	猗 猊 猜 猖 猝 獎 獏 默 獗 獪	猴 猯 猩 猥 猾 獨 獰 獸 獵 獻
490	僉 僊 傳 僂 僖 僞 僥 僭	568	懣 懶 懺 懴 懿	權懼攝戀戈	646	獺珈玳珎玻	珀珥珮珞璢
491 492		夢 569 克 570	成 戍 戌 戔 戛		647 648	琅琊琥珸琲	琺 瑕 琿 瑟 瑙
492		き 570 身 571	憂 戡 截 戮 扞 扣 扛 扠 扨	戰 戲 戳 扁 扎   扼 抂 抉 找 抒	649	瑁 瑜 瑩 瑰 瑣 璧 瓊 瓏 瓔 珱	瑪 瑶 瑾 璋 璞
494	冏 胄 冓 冕 □ 冤 冦 冢 冩	572	抓抖拔抃抔	拗 拑 抻 拏 拿	650	瓠 瓣 瓧 瓩	瓮 瓲 瓰 瓱 瓸
495 496		<ul><li>573</li><li>574</li></ul>	拆擔 拈 拜 拌 挌 拮 拱 挧 挂	拊 拂 拇 抛 拉 挈 拯 拵 捐 挾	651 652	瓷 甄 甃 甅 區 甦 甬 甼 畄 畍	朝 甍 甕 甓 甞 畊 畉 畛 畆 畚
497	刎 刧 刪 刮 刳 刹 剏 剄 剋	575	捍 搜 捏 掖 掎	掀掫捶掣掏	653	畩 畤 畧 畫 畭	畸 當 疆 疇 畴
498 499	剞剔剪剴剩 剳剿剽劍 細細 ##	§ 576 577	掉捉掵捫捩	掾 揩 揀 揆 揣 寒 塿 垟 崒 焓	654 655	疊 疉 疂 疔 疚	疝 疥 疣 痂 疳
500	劒 剱 劈 劑 辨 辨 劬 劭 劼 券 勁 勍 勗	§ 578	揉插揶揄搖 攝搗揚搏摧	搴 搆 搓 搦 搶 摰 摶 摎 攪 撕	656	痃 疵 疽 疸 疼 痣 痞 痾 痿 痼	疱 痍 痊 痒 痙 瘁 痰 痺 痲 痳
501	勣 勦 飭 勠 勳 勵 勸 勹 匆	579	撓 撥 撩 撈 撼		657	瘋瘍 瘉 瘟 瘧	瘠瘡瘢瘤瘴
502 503		§ 580 581	據 擒 擅 擇舉 擠 擡 抬 擣	達 擘 擂 擱 擧 擯 攬 擶 擴 擲	658 659	寮 痩 癇 癈 癆 癩 癪 癧 癬 癰	<b>癜 癘 癡 癢 癨</b>
504	卮 夘 卻 卷 厂 彫 厠 厦 厥	582	擺攀擽攘攜	攅 攤 攣 攫 攴	660	癲癶癸發	皀 皃 皈 皋 皎
505 506		7] 583 h 584	<b>女                                    </b>	效敖敕敍敘	661 662	皖 皓 晳 皚 皰	皴 皸 皹 皺 盂
506 507		为 584 占 585	敞敝敲數斂斷旃旆旁旄	斃 變 斛 斟 斫 旌 旒 旛 旙 无	662 663	<u> </u>	盤 盧 盪 蘯 盻
508	咒 呻 咀 呶 咄 附 咆 哇 咢	586	无 旱 杲 昊 昃	昱 杳 昵 昶 昴	664	眸睇睚睨睫	睛 脾 睿 睾 睹
509	咥 咬 哄 哈 咨	587	易晏晄晉晁	晞 晝 晤 晧 晨	665	瞎瞋瞑瞠瞞	瞰瞶瞹瞿瞼

1st	4th digit	of code	1st	4th digit	of code	1st	4th digit of	f code
-3rd	0 1 2 3 4	5 6 7 8 9	-3rd	0 1 2 3 4	5 6 7 8 9	-3rd	_	5 6 7 8 9
666 667	瞽瞻矇矍矗 砌砒礦砠礪	矚 矜 矣 矮 矼 硅 碎 硴 碆 硼	743 744	蠑 蠖 蠕 蠢 蠡 衄 衂 衒 衙 衞	盡 蠶 蠹 蠹 蠻 衢 衫 袁 衾 袞	820 821		鬟鬢 鬣門 鬧
668	品 碌 碣 碵 碪	碯磑磆磋磔	745	祖衽衽衲袂	10 10 25 25 25 26 26 26 26 26 26 26 26 26 26 26 26 26	822		平 鮑 鮖 鮗 鮟
669	碾碼磅磊磬	ALL 113 N.L 111	746	袍 袤 袰 袿 袱	裃 裄 裔 裘 裙	823	鮠 鮨 鮴 鯀 鯊 魚	蛸 鯆 鯏 鯑 鯒
670	磧 磚 磽 磴	礇礒礑礙礬	747	装裹褂裼装	裨裲褄褌褊	824		攀 鯲 鯱 鯰 鰕
671 672	礫 祀 祠 祗 祟 禊 禝 禧 齋 禪	祚 祕 祓 祺 禄 禮 穰 禹 禺 秉	748 749	裸 襃 褞 褥 褪	褫 襁 襄 褻 褶	825 826		蝶 鰒 鰊 鰄 鰮 糠 鰲 鱆 鰾 鱚
673	N	程 稍 稘 稙 稠	750	襦 襤 襭 襪	親襴襷襾覃	827		<sup>表</sup>
674	稟禀稱稻稾	稷 穃 穂 穉 穡	751	覈 覊 覓 覘 覡	覩 覦 覬 覯 覲	828	鴃 鴆 鴪 鴦 鶯 古	鳴 鵐 鶏 鴕 鴒
675 676	穢 穩 龝 穣 穹 窖 窩 竈 窰 窶	穿 窈 窗 窕 窘 竅 竄 窿 邃 寶	752 753	覺 覽 覿 觀 觚	觜 觝 觧 觴 觸	829 830	郊 鴿 鴾 鵆 鵈 鶏 鵞 鵤 鵑	in the the see and
677	窖窩竈窰窶	竅 竄 窿 邃 竇 站 竚 並 竡 竢	754	計設計証訛	訝 訥 訶 詁 詛 詬 詢 誅 誂 誄	831		鳴鵙鵲鶉鶇
678	竦竭竰笂笏	笊 笆 笳 笘 笙	755	誨 誠 誑 誥 誦	誚 誣 諄 諍 諂	832	鶸 鶺 鵙 鷾 鴛	陰 鷓 鷸 鷦 鷸
679 680	答 第 策 <b>笑</b> 筐	not not once only	756 757	に に に に に に に に に に に に に に	諱謔諠諢諷	833 834		鹵 鹹 鹽 麁 麈
681	筐 笄 筍 笋 筧 筰 筱 筬 筮	等 筅 筵 筥 筴 箝 箘 箟 箍 箜	758	編 諛 謌 謇 謚 謳 鞫 謦 謫 謾	諡 謖 謐 謗 謠 謨 譁 譌 譏 譎	835		麝麥 麩 麸 麪 腐 黔 黜 點 黝
682		箙篋篁篌篏	759	證潛潜譚譜	DA DA DIS DO DA	836		緊贖荷敵輔
683	箴篆篝飾簑	<b>簑篦篥籠簀</b>	760	操警譯譴	譽讀讌讎讒	837		1 題 鼾 齊 齒
684 685	簇 簓 篳 篷 簗 簟 簷 簫 簽 籌		761 762	譲 讖 讙 讚 谺 豐 豕 豢 豬 豸	豁 谿 豈 豌 豎 豺 貂 貉 貅 貊	838 839	齔 齣 齟 齠 齢   齒 齲 齶 龕 龜 龠	銀齧 齬 齪 齷
686	<b>藤 籟 籤 籤 籥</b>	離 料 粃 粐 粤	763	狸 貎 貔 豼 貘	財 貭 貪 貽 貲	840		稟熙
687	<b>粭粢 粫 粡 粨</b>	粳 粲 粱 粮 粹	764	貳貮貶賈賁	賤賣賷賽賺			
688 689	粽 糀 糅 糂 稼	糒 糜 糢 鬻 糯	765 766	賻 贄 贄 贄 贇 賍 贔 贖 赧 赭	贏 贍 贐 齎 贓 赱 赳 趁 趙 跂			
690	M	絅 絋 紮 紲 紿	767	趾 趺 跏 跚 跖	<b>跌 跛 跋 跪 跫</b>			
691	紵絆絳絖 絎	絲絨絮絏絣	768	跟跣跼踈踉	跿 踝 踞 踐 踟			
692 693	經綉絛綏絽	綛 綺 綮 綣 綵 綯 縣 綸 綟 綰	769 770	深 踵 踰 踴 蹊 蹇 蹉 蹌 蹐	蹈蹙蹤蹠踪			
694	編 緝 緤 緞 緻	神 幡 縅 縊 縣	771	猫 蹕 蹶 蹲 蹼	四 是 W 四 55 躁 躇 躅 躄 躋			
695	縡 縒 縱 縟 縉	縋 縢 繆 繦 縻	772	躊躓躑躔躙	躪 躡 躬 躰 軆			
696 697	援 縹 繃 縷 縲 繙 繚 繹 繪 繩	縺 繧 繝 繖 繞 繼 繻 纃 緕 繽	773 774	駅 躾 軅 軈 軋	軛 軣 軼 軻 軫 輙 輓 輜 輟 輛			
698	辯 繿 纈 纉 續	繼繻纃緕繽纒纐纓纔纖	775	軾 軽 輅 輕 輒 輔 輦 輳 輻 輹	軟 輓 輜 輟 輛轅 轂 輾 轌 轉			
699	纖纛纜缸缺		776	轆 轎 轗 轜 轢	轣轤辜辟辣			
700 701	瓣 罌 罍 罎	罐网罕罔罘	777 778	辭辯 : 連 迥	迢迪迯邇迴			
701	苦 罠 罨 罩 罧 羇 羌 羔 羞 羝	野 羂 羆 羃 羈 羚 羣 羯 羲 羹	779	逅迹迺逑逕 逧逶逵逹迸	逡 逍 逞 逖 逋			
703	羮 羶 羸 譱 翅	翠翊翕翔翡	780	遏 遐 遑 遒	逎 遉 逾 遖 遘			
704	翦翩翳翹飜	耆耄耋 耒 耘	781	遞 遨 遯 遶 隨	遅 邂 遽 邁 邀			
705 706	耙 耜 耡 耨 耿 聚 聟 聢 聨 聳	耻 聊 聆 聒 聘 聲 聰 聶 聹 聽	782 783	邊邊邏邨邯郛鄂鄒鄙鄲	邱 邵 郢 郤 扈 鄰 酊 酖 酘 酣			
707	聿肄肆肅肛	育肚 肭 胃 肬	784	酥酪醋醋醋	韶 鎦 語 桶 顇			
708	胛胥胙胝胄	胚胖脉膀胱	785	醪醣醴醣醸	釁釉釋釐釖			
709 710	脛 脩 脣 脯 腋 隋 腆 脾 腓	腑 胼 腱 腮 腥	786 787	針 釜 釛 釼 釵 鈕 鈑 鉞 鉗 鉅	釶 鈞 釿 鈔 鈬 鉉 鉤 鉈 銕 鈿			
711	腦腴膃膈膊	膀臀膠膕膤	788	鉋 鉐 銜 銖 銓	銛 鉚 鋏 銹 銷			
712	膣膣腸膩膰	膵膾隨膽臀	789	<b></b>	A++ A++ A-1 A(1) A+4			
713 714	臂膺臉臍臑	臙 臘 臈 臚 臟 异 舂 舅 與 舊	790 791	錙 錢 錚 錣 鍼 鍮 鍖 鎰 鎬	錺 錵 錻 鍜 鍠 鎭 鎔 鎹 鏖 鏗			
715	舍舐舖船舫	所 舶 艀 艙 艘	792	整縮 鏘 鏃 鏝	錽鏈 鏤鐚鐔			
716	艝 艚 艟 艤 艢	艨艪艫舮艱	793	缴 鏡 鐇 鐐 鐶	鐫鐵鐵鐵鐵鑁			
717 718	艷 艸 艾 芍 芒 苣 苟 苒 苴 苳	芫 芟 芻 芬 苡 苺 莓 范 苻 苹	794 795	鑒 鑄 鑛 鑠 鑢 鑷 鑽 鑚 鑼 鑾	鑞 鑪 鈩 鑰 鑵 钁 鑿 閂 閇 閊			
719	苞 茆 苜 茉 苙		796	関   関   関   関	閨閧閭閼閻			
720	茵茴茖茲	茱葡菇蓉蓉	797	閹閾闊濶買	閣関関関			
721 722	茯 茫 茗 茘 莅 莫 莎 莇 莊 荼	莚 莪 莟 莢 莖 莵 荳 荵 莠 莉	798 799	關闡闡開阡 随随风	阨 阮 阯 陂 陌			
723	莨 菴 萱 菫 菎	菽 萃 菘 萋 菁	800	陝陟陦陲	陬 隍 隘 隕 隗			
724	蒂萇菠菲萍	范 萠 莽 萸 蔆	801	險隧隱隲隰	隴隶隸佳睢			
725 726	菻 葭 萪 萼 蕚 蒂 葩 葆 萬 葯	蒄 葷 葫 蒭 葭 葹 萵 蓊 葢 蒹	802 803	馬 雉 雍 襍 雜 霈 霓 霎 霑 霏	霍雕電霄霆霖 霧霉霉霉			
727	蒿 蒟 蓙 蓍 蒻	彦 蓐 蓁 蓆 蓖	804	牌 霽 霾 靄 靆	<b>無 異 留 注 取</b> 靈 靂 靉 靜 靠			
728	蒡 蔡 蓿 蓴 蔗	夢 蔬 蔟 蔕 蔔	805	靤 醌 靨 勒 靫	靱 靹 鞅 靼 鞁			
729 730	蓼 蕀 蕣 蕘 蕈 蕁 蘂 蕋 蕕	薀 薤 薈 薑 薊	806 807	靺 鞆 鞋 鞏 鞐   鞴 韃 韆 韈 韋	鞜 鞨 鞦 鞣 鞳 韜 韭 齏 韲 竟			
731	売 蕭 薔 薛 藪	一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一一	808	韶韵頏頌頸	頭 頡 頷 頹 顆			
732	藉薺藏薹藐	藕 藝 藥 藜 藹	809	顏顋顫顯顰				
733 734	蘊 蘓 蘋 藾 藺 虍 乕 虔 號 虧	蘆 龍 蘚 蘰 蘿 虱 蚓 蚣 蚩 蚪	810 811	顧額顧風	颯 颱 颶 飄 飃 餒 餔 餘 餡 餝			
735		蛆 蚰 蛉 蠣 蚫	812		朗 韶 韶 饉 饅			
736	蛔 蛞 蛩 蛬 蛟	蛛蛯蜒蜆蜈	813	饐 饋 饑 饒 饌	饕馗 馘 馥 馭			
737 738	蜀 蜃 蜕 蜑 蜉 蜷 蜻 蜥 蜩 蜚	蜍蛹蜊蜴蜿蝠蝟蝸蝌蝎	814 815	馬 財 駟 駛 駝 駲 駻 駸 騁 騏	胎 駑 駭 駮 駱 騅 駢 騙 騫 騷			
738	郑 朔 朔 朔 萬 朔 蝗 蝨 蝮 蝙	地 明 驹 矫 蹈	816	新	駐 新 編 駦 騒 驕 縣 縣 縣			
740	蝓 蝣 蝪 蠅	螢 螟 螂 螯 蟋	817	驢 驥 驤 驩 驫	驪 骭 骰 骼 髀			
741	螽 蟀 蟐 雖 螫	蟄 螳 蟇 蟆 螻	818 819	機 髑 髓 體 髞	髟 髢 髣 髦 髯			
742	蟯 蟲 蟠 蠏 蠍	蟾蝗蟷蟒蟒	8 I 9	髫 髮 髴 髱 髷				