

Easy Search/Contents/Precautions

Before Using the Handset

Voice/Videophone Calls/PushTalk

Phonebook

Sound/Screen/Light Settings

Security Settings

	Mail	
N-09A i-mode/Full Brow		
ISSUE DATE: 09.5	i-motion/Movie/ i-Channel/i-concier	
	Camera	
NAME:	1Seg	
PUONE NUMBER	1009	
PHONE NUMBER:	Music	
MAIL ADDRESS:	i-αppli/i-Widget	
	Osaifu-Keitai/ToruCa	
	Map/GPS Function	
INSTRUCTION MANUAL Data Manager		
	Convenient Functions	
	<u>.</u>	

Character Entry

Network Services

Overseas Use

PC Connection

Appendix/Troubleshooting

Index/Quick Manual



DOCOMO W-CDMA and GSM/GPRS Systems

Thank you for choosing "docomo SMART series N-09A".

Read this manual carefully before use or during operation as well as separate manuals for other components, and use N-09A properly. If you have further questions regarding the contents of the instruction manual, contact the general inquiries provided on the outside back cover of this manual.

N-09A is your useful partner. Take good care of it for so long a period.

Notes on use

- FOMA terminals use wireless communications and cannot be used in tunnels, underground areas, buildings, and other areas without reception; in outdoor locations with weak reception; or outside the service area. Reception may also be weak in even some unobstructed upper floors of high-rise buildings and apartments. Please be aware that calls or communications may be disconnected even under optimal conditions when reception is strong and all three antenna marks are displayed, and when in a stationary position.
- Please be careful not to disturb people around you when using your FOMA terminal in public places, crowded areas, or quiet locations.
- A third party may be able to use special equipment to listen in on your calls, as FOMA terminals use radio waves. However, W-CDMA and GSM/GPRS systems automatically support privacy protection with a scrambling function for all calls to make conversations incomprehensive to third parties.
- FOMA terminals convert voice into digital signals for wireless communications, and therefore if you are in an
 area where radio reception is weak, these digital signals may not be properly restored and this may result in
 distortion of the actual caller's voice.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS. Neither DOCOMO nor the certifier as listed herein makes any representation or warranty as for security in the use of SSL/TLS. In the event that the user shall sustain damage or loss due to the use of SSL/TLS, neither DOCOMO nor the certifier shall be responsible for any damage or loss. Certifier: VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd. and Comodo CA Ltd.
- This FOMA terminal is available for use in the FOMA Plus-Area and FOMA HIGH-SPEED area.
- The FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.
- Please keep a separate record of the information (Phonebook, Schedule, Text memo, Record message, Voice memo or VP message) you have registered in your FOMA terminal. Please be aware that DOCOMO bears no obligation or responsibility in the event that data is altered or lost.
- It is recommended that you back up important data to a microSD card. If you own a PC, you can also transfer and save data, such as Phonebook, Mail or Schedule, to your PC using DOCOMO keitai datalink.

Before using this manual


This FOMA terminal supports Kisekae Tool (p.121). When you use Kisekae Tool to change the menu display design, the menu structure may change in accordance with the frequency of use. Also, you cannot access some functions entering the menu number (p.424) assigned to the functions.

You can download the latest manual information from the NTT DOCOMO Website.

- · "User's Manual Download" (PDF)
- http://www.nttdocomo.co.jp/english/support/manual/index.html
- * The URL and content may change without prior notice.

How to Use This Manual

This manual provides various search methods to find the pages describing the functions and services you are looking for.

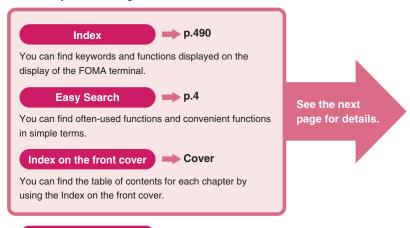

You can find descriptions using the Table of Contents which is divided by the function.

p.6



You can find main functions of N-09A, such as new functions and convenient functions.

Menu Function List p.424

Contents

You can find menus displayed on N-09A and default settings at the time of purchase.

Quick Manual p.504

You can find brief descriptions of the basic functions. Bring these separate slips with you when guiding outside.

Quick Manual (For Overseas Use) is also available so that you may use them when needed.

- In this "N-09A INSTRUCTION MANUAL", read "N-09A" as the "FOMA terminal."
- This manual describes functions that use a microSD card. To use these functions, a microSD card is required. microSD Card → p.323
- Subscribers are prohibited from reprinting the content of this manual in whole or in part without permission.
- The content of this manual may change without prior notification.
- The color patterns and icons of the screens are described based on the following settings:
 - Kisekae Tool setting: "Black & White"
 - Display design: Color theme "WHITE", Icon pattern "Basic"
 - Main menu: "Standard"

How to Use This Manual (continued)

Following example shows how to look up the alarm function using "Index", "Easy Search" and "Index on the front cover".




You can find keywords and functions displayed on the display of the FOMA terminal.




Easy Search p.4

You can find often-used functions and convenient functions in simple terms.




Index on the front cover Cover

Refer to "Cover", "Chapter title page" and "Description pages" sequentially to find the descriptions of the function you want to set. You can find the detailed table of contents on the chapter title page.

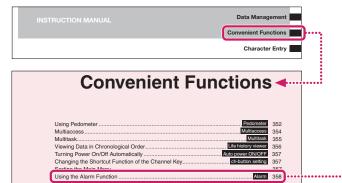

^{*} The page numbers in these examples may differ from the actual ones in this manual.

This manual uses illustrations and marks to explain how to operate the function so that you can use the FOMA terminal correctly.

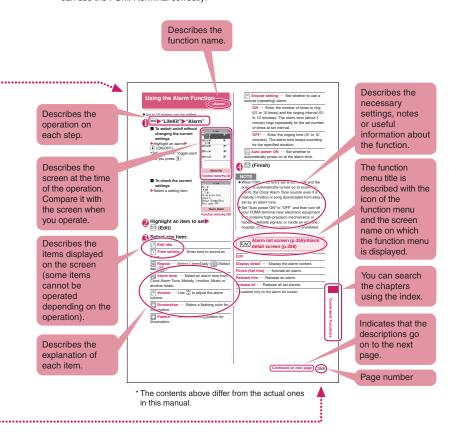

- Set "バイリンガル" (Select language) to "English" to operate the screen menus as described in this manual. → p.48
- To read a screen easily in this manual, "Stand-by display" is set to "OFF", and the font color is black while
 the background color is white. Some part of the screen may be focused or zoomed in to understand the
 operation clearly.
- Changing the default settings may cause the different appearance between the main operating instructions in this manual and your FOMA terminal.
- Screens used in this manual are for illustrative purposes only, and may differ from actual ones.
- In this manual, the "Osaifu-Keitai i-αppli compatible with the IC card function" is described as the "Osaifu-Keitai i-αppli".
- Simple key illustrations are used to show key press operations.

Easy Search

Find out a function with easy words from the Easy Search index below.

Useful functions for talking

- •Do/do not notify your party of your caller ID p.50
- ·Switch voice/videophone call during call p.55
- ·Adjust the volume during a call (p.67) volume
- ·Hold the current call p.68 Holding

When you cannot answer incoming call

- ·Hold the ringing call without answering p.68 On hold
- ·Notify that you cannot answer the call
 - p.68 Public mode (Driving mode) p.69 Public mode (Power OFF)
- Have your party record voice/videophone message p.71



Change melody or illumination

- Adjust the ring volume p.67 Ring volume
- Set ring tone to specify party (p.93)
- Change ring tone p.98 Select ring tone
- Set vibration to notify incoming call or mail p.100 vibrator
- •Mute keypad tone p.101 Keypad sound
- ·Set silent mode (p.103) Manner mode
- ·Change color or pattern of incoming call lamp

- ·Change key illumination flashing pattern p.113

Change/understand display view

- Understand mark (icon) on the display (p.24)
- ·Switch menu display p.35 Simple Menu
- ·Change standby screen (wallpaper) p.106 Display setting
- Display calendar on the standby screen (p.108)
- ·Change font size p.115 Font



Master mail

- ·Send Deco-mail p.148 Deco-mail
- ·Send image or melody (p.152) Attach file
- ·Sort and save mail automatically (p.167)



Master camera

- ·Change the size of image to shoot p.219
- Display the shot (p.304) My picture
- ·Save image on the microSD card p.329



Use your phone without worries

- Lock the FOMA terminal from remote location when the FOMA terminal is lost p.125 Omakase Lock*
- Prevent others from viewing the phonebook (p.127) Secret mode/Secret data only mode
- Reject calls from callers who are not stored in phonebook (p.139)
- Save data such as phonebook in case of loss of data p.140 Data Security Service*2

· Reject unidentified calls (p.138) Call setting w/o ID



*2: Data Security Service is a pay service you need to apply for. (i-mode subscription is necessary to apply for this service.)

Master 1Seq

- •Watch 1Seg p.240 Activate 1Seg
- ·Record 1Seg programs p.244 1Seg recording

p.337

p.342

OBEX™

- Book programs for 1Seg watching/timer recording p.245 Booking program list/Timer recording list
- ·Change audio and video modes p.247

Miscellaneous

- · Save battery life p.109 Backlight (ECO mode)
- · Read QR code or bar code (p.230) Bar code reader
- · Listen to music (p.249) Music&Video Channel/Music Playback
- ·Use GPS function p.291 GPS function
- ·Use microSD card 0.323
- Exchange information with PC or other FOMA terminal
- ·Use alarm p.358 Alarm
- ·Use as calculator p.371 Calculator
- Use FOMA terminal overseas p.409
- · Update to the latest software p.465 Software Update
- Update to the latest security settings p.472 Scanning function

Infrared data exchange/iC communication

For more information about other operation guides, see "How to Use This Manual", →p.1 Also, the "Quick Manual" offers instructions on often-used functions. → p.504

now to use this Manual
Easy Search4
Contents6
Main Features of N-09A8
Precautions10
Notes on Handling16
Package Contents19
Part names and functions Viewing the display
Changing between vertical and horizontal displays Selecting the menu
Attaching/Removing the battery pack
• Turning the power on • Initial settings • Time settings
Caller ID notification, etc.
Making a voice/videophone call Switching between voice and videophone call Handsfree
Redial/Received calls
Receiving a voice/videophone call Volume Ring volume Answer hold Public mode (Driving mode/Power OFF)
Record message Videophone settings Remote monitoring
Making/Receiving a PushTalk call PushTalk phonebook
PushTalk setting, etc.
Add to phonebook Group setting Search phonebook Editing/Deleting phonebook entries Ring tone/Image
Choku-Den, etc.
Ring tone Vibrator Manner mode Display setting
Privacy angle
 Indicator display Illumination Key illumination Key backlight Machi-chara setting Kisekae Tool, etc.
•
Security code PIN code Dial lock Omakase Lock Secret mode Secret folder Original lock Keypad lock
• IC card authentication • Face authentication • Side key guard
Self mode Reset settings Initialize, etc.
Composing/Sending i-mode mail Deco-mail/Auto Deco-mail
Attaching files Receiving mail Checking new messages Replying/Forwarding mails Saving attached files
Using mail boxes
Early Warning "Area Mail" SMS, etc.
Viewing and Operating i-mode Sites or Internet Websites in mode password a Ovide search
i-mode password Quick search Internet connection Bookmarks
 Phone To/AV Phone To, Mail To, Web To and Media To
i-mode browser setting, Browser setting, etc.
Downloading i-motion Using i-Channel Using i-concier, etc.

Camera	Photo mode Movie mode Shooting settings Bar code reader Text reader, etc.
p.215	Toxi Toddol, Glo.
1Seg	Setting channels • Watching 1Seg programs • Data broadcast 1Seg recording • Booking program/Timer recording
p.237	• 1Seg settings, etc.
Music	Music&Video Channel Downloading Chaku-Uta-Full® Playing music Using playlist Using the Music Player, etc.
040	* "Chaku-Uta-Full" is a registered trademark of Sony Music
p.249	Entertainment (Japan) Inc.
i-αppli/i-Widget	 Downloading i-αppli Activating i-αppli Fre-installed software i-αppli Using i-Widget, etc.
p.265	20. () 11. 0 % (%) 10 11 1 18
Osaifu-Keitai/ ToruCa	iC transfer service Using Osaifu-Keitai IC card lock settings Receiving ToruCa Displaying ToruCa, etc.
p.283	
Map/GPS Function	Checking the current location
p.291	Providing location information Notifying the current location Location history, etc.
Data Management	Data box • Photo • i-motion/Movie • Playing videos • Chara-den
Data Mariagement	Machi-chara Melody
	Infrared data exchange/IrSSTM/iC communication/Bluetooth Viewing PDF data Viewing documents
p.301	Viewing e-books/e-comic, etc.
Convenient	Pedometer Multi access Multitask Life history viewer Alarm Schedule To Do list
Functions	Checking call data
p.351	, , , , , , , , , , , , , , , , , , ,
Character Entry	Text entry • 5-touch • Common phrases Copying/Cutting/Pasting text • Own dictionary • Clear learned
p.381	Download dictionary • 2-touch • T9 input • Voice input, etc.
Network Services	Voice Mail service Call Waiting Call Forwarding service Nuisance Call Blocking service Caller ID Request service
p.395	Dual Network service • 2in1, etc.
Overseas Use	WORLD WING
p.409	Making/Receiving a call in the country of stayNW search mode, etc.
PC Connection	Data communications, etc.
p.417	 For more details, refer to the "Manual for PC Connection" (PDF format) in the provided CD-ROM.
Appendix/	Menu list List of characters assigned to dial keys List of readings for Symbols/Pictograms/Face marks
Troubleshooting	Multi access/Multitask combinations Options/Accessories
p.423	Troubleshooting
Index/Quick Manual	Index Quick Manual Quick Manual (For Overseas Use)
p.489	Quion manual (1 01 0 volisous 030)

Main Features of N-09A

i-concier

→p.210

Battery level

Kev illumination

→ p.47

i-concier is a service where Machi-chara (character on the standby screen) delivers useful information. Also, download schedules (i-schedule) from sites to make better use of the service.

Downloaded i-schedule or ToruCa is automatically updated. Shop or company addresses are automatically added to the phonebook.

i-αppli call

→ p.277

i-appli call is a useful function that allows you to prompt a third party or content provider to start a specified application, e.g. the other party's application when playing games with the other party.

i-Widaet

→ p.280

i-Widget is a convenient function that allows you to quickly access frequently used content and tools (Widget Appli) such as a calculator, clock, program guide and stock price information.

Simply open the i-Widget screen to instantly view the latest information.

i-mode

→p.180

Operability improves and you can more conveniently utilize the site information. Moreover, i-mode newly supports Flash® Video or Windows Media® Video and you can enjoy even various moving picture contents.

International roaming

→pp.271, 410

The FOMA terminal, phone number and mail address you use in Japan are also available for use overseas (in GSM and 3G areas). You can use voice call, videophone call, i-mode, i-mode mail, SMS and network services.

"日英版しゃべって翻訳 for N", which translates between Japanese and English speech, is pre-installed.

Dallely level

→pp.113, 114

Enjoy key illumination when opening the FOMA terminal or when the registered birthday comes. Key illumination can link to emotion-expressing mail. You can change the key backlight color.

The detailed battery level can be shown in 100 steps.

■ Auto-change Screen function → pp.30, 114

When 1Seg, My picture, etc. is viewed, the FOMA terminal detects the display orientation and automatically changes between vertical and horizontal displays.

Pedometer

→ p.352

Measure and check your amount of walking distance and calories burned based on walking steps and time. Make use of the data for your daily health care. When you continue walking for 10 minutes or longer at a pace of 90 or more steps per minute, the steps are counted as reference steps providing an accurate step count.

i-mode mail/Deco-mail/Deco-mail pictogram → pp.146, 147, 148

You can attach photo/moving picture files, etc. to mail main text. Deco-mail and Deco-mail pictograms are supported, and you can change the character color/ size and background color, or insert images/moving pictograms in the main text. 1,200 Deco-mail pictograms are pre-installed.

■ Auto Deco-mail/Emotion-expressing mail → pp.150, 156

- The FOMA terminal will automatically select text colors and backgrounds, as well as illustrations, etc. based on the emotional content of the mail. (Auto Deco-mail)
- An icon and key illumination express the emotion matching the content of the received mail. (Emotion-expressing mail)

Camera →p.215 Seg →p.238

 The CMOS (rear camera), with effective 8.1 mega pixels, enables you to take high resolution photos of 8 MB (3,264 × 2,448 dots).

- The camera is equipped with Digital Anti-Shake feature. You can easily take clear photos in dark places or moving pictures that are difficult to stabilize. Also, Smile mode automatically takes a photo when the subject smiles.
- Capture a 240-degree wide range in a single photo using the panorama shot function.
- Equipped with the high-speed moving picture shooting feature "Speed Movie". Fast moving scene can be played in slow motion.

3.2 inch Full Wide VGA LCD

With a full wide LCD (480 × 854 dots), you can enjoy 1Seg images and photos taken with the camera.

Full Browser → p.182

The Full Browser enables sites created for PCs to be viewed on the screen of a mobile phone, which can provide you with more information.

Multi window/One-touch multi window → pp.187. 191

- · You can connect to up to 5 sites at a time.
- · Switch tabs to view connected pages.

Quick Search

→p.188

You can easily search for information while viewing i-mode sites, mail, schedule, etc. Information can be searched in Map or Dictionary.

Time linkage prediction input/voice character input → pp.384, 393

- Time-linked words appear as predicted candidates when you compose mail.
- Convert voice to text to compose mail or perform quick search. (In Japanese only)

View mobile digital terrestrial broadcasting "1Seg". You can record still images/videos while viewing 1Seg.

SRS TruMedia/virtual 5.1ch surround

- Equipped with new technology from "SRS TruMedia" to deliver true-to-life sound. You can enjoy music, movie and 1Seg with powerful sound.
- In compatible broadcast or content, you can enjoy more true-to-life virtual 5.1ch surround sound when using stereo headphones.

■ Bluetooth → p.374

Connect the FOMA terminal to a Bluetooth device wirelessly to make calls or play music or 1Seg audio even while the FOMA terminal is in a bag, etc. Packet communications and 64K data communications are also available by connecting to a Bluetooth-compatible PC.

iC communications

→p.340

You can exchange data by aligning FeliCa marks $(\mbox{$\mbox{\triangle}})$ of sending and receiving FOMA terminals to each other.

IC card authentication

→ p.134

Instead of entering a security code, aligning your FOMA terminal with a contactless FeliCa IC card performs user authentication to release Dial lock or Keypad lock.

Face authentication

→ p.136

To lock keys or to release IC card lock, you can use face authentication.

- Videophone → p.51
- Chaku-moji → p.60
- Kisekae Tool → p.121
- Security settings → p.123
- Chaku-Uta-Full[®]/Uta-hodai/ Music&Video Channel → pp.206, 250, 253

- Music Player → p.260
- i-αppli/Mega i-αppli/Chokkan game → p.265
- Osaifu-Keitai/ToruCa → p.283
- Maps and GPS → p.291
- Network services → p.395
- High-speed communications → p.418

Precautions

(Always follow these directions)

- To ensure that you use your FOMA terminal correctly, read "Precautions" carefully before use. Keep this manual after reading for future reference.
- The precautions must be observed at all times since they contain information intended to prevent the bodily injury or damage to property.
- The following symbols indicate the different degrees of injury and damage that may occur if the information provided is not observed and the FOMA terminal is used incorrectly:

DANGER	Indicates that death or serious bodily injury may result directly and immediately from improper use.
MARNING	Indicates that death or serious bodily injury may result from improper use.
CAUTION	Indicates that bodily injury and/or damage to property may result from improper use.

■ The following symbols indicate specific directions:



Indicates that it is prohibited.



Indicates that it must not be disassembled.



Indicates that you must not touch it with wet hands.



Indicates that it must not be used near water, which means that you must not let it become wet.



Indicates that it is an instructionbased compulsory conduct (must be acted).



Indicates that you must unplug the power code from the outlet.

- Safety Precautions are explained in the following categories:

 - 2. Precautions for the FOMA Terminal 11

 - 5. Precautions for the FOMA Card (UIM) 15
- 1. Precautions for the FOMA Terminal, Battery Pack, Adapter and FOMA Card (UIM) (Common)

↑ DANGER



Do not use, keep or leave the devices in locations subject to high temperatures, such as near fire or heater, in direct sunlight or inside a car on a hot day.

Doing so may cause the battery pack to leak, overheat, explode or ignite, the devices to malfunction or be deformed or suffer performance loss and a reduced operating life. Also, doing so may cause part of the case to become hot and burn your skin.



Do not disassemble, modify or solder the equipment.

Doing so may damage the equipment, or cause fire, electrical shock or injury (burns, etc.)

Doing so may cause the battery to leak, overheat, crack or catch fire.



Do not allow the devices to become wet.

Device contact with liquids, such as water or pet urine, may cause overheating, electric shock, fire, malfunction, injury, etc. Be careful not to use the devices in areas where they could get wet.



Use the battery pack and adapter specified by NTT DOCOMO for the FOMA terminal.

Do

Third-party products might subject the FOMA terminal, battery pack and other devices to high voltage/current leading to leaking, overheating, crack, fire, or product damage.

⚠ WARNING



Do not put the battery, FOMA terminal, adapter or FOMA card (UIM) in a microwave oven or pressurized container.

Doing so may cause the battery pack to leak, overheat, explode or ignite, cause the FOMA terminal or adapter to overheat. smoke or ignite, or damage the IC.



Do not throw the FOMA terminal or expose it to strong shocks.

Failure to observe this precaution may cause the battery pack to leak, overheat, explode or ignite, or cause the devices to malfunction or ianite.



Do not place electrically conductive objects (wires, pencil leads, etc.) in contact with the charging terminals or external jacks. Do not insert those materials inside the terminal.

Any of these improper uses might result in a short circuit and damage the equipment or cause fire.



Make sure to turn off the FOMA terminal before you get close to the places like a gas station where a flammable gas is generated. Do not attempt to charge a battery as well. Doing so may cause the gas to ignite.

Turn off the power, when you use Osaifukeitai at a gasoline filling station (if the IC card lock is set, turn the power off after the lock is released).



If something unusual happens, such as unusual odor, overheating, discoloration or deformation during use, charge or storage, be sure to:

- 1. Unplug the power code from the power outlet or the cigar lighter socket.
- 2. Turn off the power.
- 3. Remove the battery pack from the FOMA terminal.

Continuing to use or charge the battery may cause it to overheat, explode, or ignite; or the battery to leak.





Do not leave the FOMA terminal on a slope or unstable surface.

The FOMA terminal may fall and cause injury or malfunction.



Do not leave the devices in humid. dusty or hot places.

Doing so may cause malfunction.



If your child uses the FOMA terminal, instruct him/her on how to use it. Make sure that he/she always uses the FOMA terminal correctly as you instruct.

Improper usage could result in bodily injury.



Keep the FOMA terminal out of young children's reach.

A young child may try to swallow it or suffer



Pay special attention when you use the FOMA terminal connected to the adapter for a long period.

If you use i-αppli or videophone or watch 1Seg programs for a long time while charging, the temperature of the FOMA terminal, battery pack or adapter may rise. If you touch the warm part of these devices for a long period of time, it may cause redness, itch, skin irritation or low temperature burns depending on your constitution or physical condition.

2. Precautions for the FOMA Terminal

↑ WARNING



Do not direct the infrared data port towards your or another person's eves.

Doing so may cause eye injury. Do not aim or direct the infrared data port towards another infrared device as this may interfere with the operation of the device.



Do not put the FOMA terminal on the dashboard, etc. as a problem may occur due to air bag inflation.

An air bag inflation may cause the FOMA terminal to hit you or another person, which may lead to injury, malfunction, breakage, etc.



If you are wearing electronic medical equipment, do not put the FOMA terminal in your breast pocket or in an inside pocket.

Using the FOMA terminal in close proximity to electronic medical equipment may cause the equipment to malfunction.



Do not put fluids such as water or substances such as pieces of metal or flammable materials into the FOMA card (UIM) slot or microSD card slot inside of the FOMA terminal.

Doing so may cause fire, electric shock or malfunction.



Please turn off your FOMA terminal when inside an airplane, hospital, or other area where use is prohibited.

The device may affect electronic or medical equipment. If the Auto power function is set, make sure to disable the function before turning off the power.

Follow the instructions provided by the medical facility for the use of mobile phones. Use of the phone in an airplane is prohibited, and may be punishable by law.



Make sure to hold the FOMA terminal at a safe distance from your ear when you use the handsfree mode. Also, when you play games or music with an earphone/microphone connected to the FOMA terminal, adjust the volume properly.

Too large a volume may lead to defective

Also, hearing difficulties may cause an accident.



If you have a weak heart, take precautions when setting the Vibrator or Ring volume.

Sudden loud sounds or vibrations may affect your heart.



If you see lightning or hear thunder while using outdoors, immediately turn off the power and take shelter in a safe place.

There is a risk of being struck by lightning and causing electric shock.



Please turn off the power near electronic equipment that contains high-precision mechanisms or handles delicate signals.

The terminal may interfere with the operation of sensitive electronic equipment.

* Electronic equipment to watch out for:

Hearing aids, implanted cardiac pacemakers, and other electronic medical devices; fire alarms, automatic doors, and other automatically controlled apparatus. Users of implanted cardiac pacemakers, ICDs, and other electronic medical devices are advised to ask the manufacturer or sales agent whether or not these devices can be affected by radio waves.



If the display or camera lens is broken, be careful with the broken glass and any exposed FOMA terminal parts.

The display and camera lens surfaces are covered by plastic to minimize the possibility of glass scattering. However, touching broken or exposed parts may cause injury.

↑ CAUTION



Do not swing the FOMA terminal by its strap or other parts.

The FOMA terminal may strike you or others around you, resulting in bodily injury, malfunction or damage to the FOMA terminal or other property.



When using motion tracking, make sure you are in a safe place, hold the FOMA terminal securely, and do not shake it more than necessary.

Motion tracking is a function that works by tilting or shaking the FOMA terminal. It may hit people or objects if shaken too much, causing serious accidents, damage, etc.



Do not hit other people with metallic straps, etc. of the FOMA terminal while using motion tracking.

Failure to observe this precaution may result in injury, malfunction or breakage.



If the display is broken and the liquid crystal leaks, do not lick, swallow, or touch it.

If the liquid crystal comes into your eyes or mouth, immediately rinse with clean water and see a doctor. If the liquid crystal adheres to your skin or clothing, immediately wipe it off with alcohol and wash with soap and water.

Failure to observe these precautions may cause loss of eyesight or damage to your skin.



When a ring tone or melody is played, do not put the speaker close to your ear. Doing so may lead to defective hearing.



In some types of vehicle, using the FOMA terminal may interfere with the operation of the vehicle's electronic equipment.

Do not use the FOMA terminal if doing so may impair safe driving.



There may be cases where the customer's physical condition or predisposition leads to itchiness, rashes, or sores. If this occurs, immediately stop using the FOMA terminal and see a doctor.

Metal components are used in the following parts:

Parts	Material	Coating
Charging terminal (Connector for desktop holder)	Phosphor bronze	Gold plating
Rear camera ring	ABS resin	Tin deposition + UV coating
Multi function key (Select key)	Polycarbonate	Aluminum deposition + UV coating



Take care not to pinch your fingers or the strap when opening/closing the FOMA terminal.

Such pinching may cause injury or breakage.



When viewing 1Seg, keep a proper distance between your eyes and the display in a bright place.

Failure to observe this precaution may impair your vision.

3. Precautions for the Battery Pack

Refer to the information shown on the battery pack label to check the type of battery pack.

ı	Display	Battery type
	Li-ion00	Lithium-ion



Do not place metal items such as wires in contact with the charging terminals. Also, do not carry or store the battery with metal items such as necklaces.

Doing so may cause the battery pack to leak, overheat, explode or ignite.



If you have difficulty attaching the battery pack to the FOMA terminal, do not put excessive pressure on the battery. Check the orientation of the battery pack before attaching it.

Failure to observe these precautions may cause the battery pack to leak, overheat, explode or ignite.



Do not throw the battery pack into fire.

Doing so may cause the battery pack to leak, overheat, explode or ignite.



Do not puncture the battery pack, hit it with a hammer or step on it.

Doing so may cause the battery pack to leak, overheat, explode or ignite.



If battery fluid comes into contact with your eyes, do not rub your eyes but immediately rinse your eyes with clean water and see a doctor.

Failure to observe this precaution may result in loss of eyesight.

⚠ WARNING



If a battery has been subjected to strong impact and something abnormal such as deformation. damage, stop using it immediately.

Continued use may cause the battery pack to leak, overheat, explode or ignite, or cause the devices to malfunction or ignite.



If the battery is not fully charged after the specified charging time has elapsed, stop charging.

Continued charging may cause the battery pack to leak, overheat, explode or ignite.



If the battery pack leaks or emits an unusual odor, stop using it immediately and move it away from any flame or fire.

The battery fluid is flammable and could ignite, causing a fire or explosion.



Keep your pets away from the battery pack as they may accidentally bite it.

Failure to observe this precaution may cause the battery pack to leak, overheat, explode or ignite, or cause the devices to malfunction or ignite.

⚠ CAUTION



Do not dispose of used battery packs with ordinary garbage.

Doing so may cause fire and create an environmental hazard. Put insulation tape on the terminals of a used battery pack and return it to a docomo Shop or Service Counter, or dispose of the battery pack in accordance with your local regulations.



Do not charge a wet battery pack.

Doing so may cause the battery pack to overheat, ignite, or explode.



If battery fluid comes into contact with your skin or clothing, stop using it immediately and rinse with clean water. Battery fluid is harmful to your skin.

4. Precautions for the Adapter



⚠ WARNING



Do not use the adapter if the power cord is damaged.

Doing so may cause electric shock, overheating or fire.



Do not use the AC adapter or desktop holder in humid locations such as a

Failure to observe this precaution may cause electric shock.



The DC adapter must be used only in vehicles with a negative ground. Do not use the adapter in vehicles with a positive ground.

Failure to observe this precaution may cause



Do not touch the FOMA terminal or adapter when you see lightning or hear thunder.

There is a risk of being struck by lightning and causing electric shock.



Do not short-circuit the charging terminals when the adapter is plugged into a power outlet or cigarette lighter socket. Also, do not let the charging terminals contact with your body (hand, finger, etc.).

Doing so may cause fire, malfunction. electric shock or injury.



Place the adapter or desktop holder on a stable surface during charging. Also, do not cover or wrap the adapter or desktop holder with clothing or bedding.

This may cause the FOMA terminal to fall out of the adapter or heat to build up. resulting in a fire or malfunction.



Do not put heavy objects on the power cord of the adapter.

Doing so may cause electric shock or fire.



Do not touch the power cords of the adapter or the power outlet with wet hands.

Doing so may cause electric shock.



Use the specified voltage and current.

Using the adapters with incorrect voltage may cause fire or malfunction. Use the AC Adapter for Global Use to charge the battery overseas.

AC Adapter: AC 100V

DC Adapter:

DC 12V/24V (specific to vehicle with negative ground)

AC Adapter for Global Use:

AC 100V to 240V (household AC outlet only)



If the fuse in the DC adapter blows, always replace it with the specified type of fuse.

Using the unspecified fuse may cause fire or malfunction.

Refer to the respective manuals for the information on the specified fuse.



Wipe off any dust on the plug.

Failure to observe this precaution may cause fire



When plugging the AC adapter into a power outlet, make sure that no metallic straps or other metallic objects are caught between the plug and the socket.

Metallic objects may cause electric shock, short-circuit or fire.



Always grasp the plug when unplugging the adapter from the power outlet or cigarette lighter socket. Do not pull the cord itself.

Pulling the cord may damage the cord and cause electric shock or fire.



Unplug the power code from the power outlet when the adapter will be left unused for a long period.

Failure to observe this precaution may cause electrical shock, fire or malfunction.



If water or other liquid gets into the adapter, immediately unplug it from the power outlet or socket.

Failure to observe this precaution may cause an electric shock, smoke emission or fire.



Unplug the adapter from the power outlet or cigarette lighter socket before cleaning it.

Failure to observe this precaution may cause electric shock.

5. Precautions for the FOMA Card (UIM)

! CAUTION



Be careful with sharp edges when removing the FOMA card (UIM) (IC part).

Sharp edges may injure your hands or fingers.

6. Precautions for Use Near Electronic Medical Devices

According to the Guidelines on the Use of Radiocommunication Equipment such as Cellular Telephones - Safeguards for Electronic Medical Equipment established by the Electromagnetic Compatibility Conference Japan.

MARNING



Take care of the following inside hospitals:

- Do not take your FOMA terminal into an operating room, intensive care unit (ICU), or coronary care unit (CCU).
- Turn off power inside hospital wards.
- Turn off power even in hospital lobbies, waiting rooms, and corridors if electronic medical devices may be in use near you.
- For use inside medical institutions, please follow the instructions given at individual locations.
- If the Auto power function is set, make sure to disable the function before turning off the power.



Turn off the power in crowded places such as peak-hour trains if implanted electronic medical devices may be in use near you.

Radio waves emitted by the FOMA terminal may adversely affect implanted pacemakers and ICDs when used in close proximity.



A person with an implantable cardiac pacemaker or defibrillator should use or carry the FOMA terminal at a distance more than 22 cm from the site of implantation.

Radio waves emitted by the FOMA terminal may adversely affect implanted pacemakers and ICDs when used in close proximity.



Electronic medical devices other than implanted pacemakers and ICDs may also be used outside hospitals. Users of electronic medical devices are advised to ask the manufacturer whether these instruments can be affected by radio waves.

Radio waves from the FOMA terminal can adversely affect electronic medical devices.

Notes on Handling

General Notes

Do not allow the devices to become wet.

The FOMA terminal, battery pack, adapter and the FOMA card (UIM) are not waterproof. Do not use them in humid locations such as bathrooms, and avoid exposing them to rain. If you carry the FOMA terminal close to your skin, sweat may cause internal components to corrode and result in malfunction. The FOMA terminal cannot be repaired in the following cases: the water exposure detection sticker shows water exposure; tests determine that corrosion has occurred due to water exposure, condensation, or perspiration. These cases are not covered by the warranty, and any repairs that may be possible will be carried out at the subscriber's expense.

- Wipe with a soft, dry cloth (such as a cloth designed for glasses).
 - The surface of the FOMA terminal LCD may be coated to improve the visibility of the color display. Rubbing the LCD of the FOMA terminal with a dry cloth to clean it may scratch the LCD surface. Handle the FOMA terminal carefully and clean it using a soft dry cloth (such as a cloth used for glasses). The LCD coating may peel off or stain if moisture or dirt is left on the surface for a long period.
 - Never use chemicals such as alcohol, thinners, benzene or detergents as these agents may erase the printing on the FOMA terminal or cause discoloration.
- Occasionally clean the connection terminals with a dry cotton bud, etc.
 Soiled connectors may result in poor connections, loss of power, or incomplete charging. Wipe with
- dry cloth or cotton swab. When cleaning, take care not to damage connectors.

 Do not place the FOMA terminal near an air conditioning vent.

Condensation may form due to rapid changes in temperature, and this may cause internal corrosion and malfunction.

 Do not put excessive pressure on the FOMA terminal or battery.

Do not put the FOMÁ terminal in a bag filled with many objects or sit down with it in a hip pocket. Excessive pressure may result in malfunction or damage to the LCD, internal circuit or the battery pack. Also, if an external device is connected to the external connector, excessive pressure may cause connector breakage or malfunction.

 Read the separate manuals supplied with the FOMA terminal, adapter and desktop holder carefully. Do not scratch the display with metallic objects.

Doing so may cause scratches, malfunction or damage.

Handling the FOMA Terminal

 Avoid using the FOMA terminal in extremely high or low temperatures.

The ambient temperature of the room should be 5°C - 35°C with humidity 45% - 85%.

- Reception may be affected if you use your FOMA terminal near a landline phone, television, or radio in use. Use the FOMA terminal away from such devices.
- Please keep a separate record of the information you have registered in your FOMA terminal.

Please be aware that DOCOMO bears no obligation or responsibility in the event that data is altered or lost.

- Do not drop the FOMA card (UIM) or expose it to strong shocks.
 - Doing so may cause malfunction or damage.
- When connecting an external device to the external connector (earphone/microphone terminal), do not insert at an angle or pull the code.

Doing so may cause malfunction or damage.

- Do not fold the FOMA terminal with the strap pinched between the folding parts.
 Doing so may cause malfunction or damage.
- It is normal for the FOMA terminal to become warm while being used or charged.
 This is not a malfunction. Keep using it.
- Do not leave the camera exposed to direct sunlight.

Doing so may discolor or burn the components of the camera.

 Keep the external connector cap and microSD card slot cap closed when not in use.

Failure to observe this precaution may cause malfunction due to dust or water getting in.

 Do not use FOMA terminal with the back cover removed.

Doing so may cause the battery pack to fall out, or cause malfunction or damage.

- Do not put an extremely-thick sticker, etc. on the display, keys or keypads.
 Doing so may cause malfunction.
- Do not remove the microSD card or turn off the power while in use.

Doing so may cause data loss or malfunction.

 Do not let magnetic cards, etc. come close to or be sandwiched between FOMA terminal parts.

The magnetic data in cash cards, credit cards, telephone cards, floppy disks, etc. may be erased.

Do not bring strong magnetic objects close to the FOMA terminal.

Strong magnetic objects may cause misoperation.

Handling the Battery Pack

The battery pack is consumable.

Battery life varies depending on usage conditions, etc., but it is time to change battery packs when the usage time has become extremely short even though the battery pack has been fully recharged. In this case, please purchase a new battery pack.

- The ambient temperature of the room should be 5°C - 35°C.
- Make sure to charge the battery when you use the FOMA terminal for the first time or if you have not used it for a long period of time.
- The available operating time of the battery pack depends on the conditions of usage and battery pack.
- Depending on the usage condition, the battery pack may inflate slightly when the battery life is almost over. This is not a malfunction.
- Do not store the battery pack for a long period of time in the following cases:
 - The battery is fully charged (immediately after the charging is complete)
 - The battery has run out (the phone cannot power on)

The performance and life of the battery pack may deteriorate

It is recommended that you store the battery pack for a long period of time with two or three battery marks displayed.

Handling the Adapter

- The ambient temperature of the room should be 5°C - 35°C.
- Do not charge the battery pack:
 - In a humid, dusty or unstable place
 - · Near a landline phone, TV or radio
- It is normal that the adapter become warm while charging. Keep using it.
 Do not use the DC adapter to charge the
- Do not use the DC adapter to charge the battery when the car engine is not running.
 Doing so may drain the car battery.
- If you use an electrical outlet with an unplugging-protection mechanism, follow the instructions of the manual for the outlet.
- Do not expose the adapter to strong shocks. Do not deform the charging terminal.

Doing so may cause malfunction.

Handling the FOMA Card (UIM)

- Do not apply excessive force to the FOMA card (UIM) when attaching/removing it.
- It is normal that the FOMA card (UIM) become warm while being used. Keep using it
- Note that the warranty does not cover damage caused by inserting the FOMA card (UIM) into another type of IC card reader or writer.
- Always keep the IC part clean.
- Wipe with a soft, dry cloth (such as eyeglass cloth).
- Please keep a separate record of the information you have registered in your FOMA card (UIM).

Please be aware that DOCOMO bears no obligation or responsibility in the event that data is altered or lost.

- To preserve the environment, bring discarded FOMA cards (UIM) to a docomo Shop or Service Counter.
- Avoid using the FOMA card (UIM) in extremely high or low temperatures.
- Do not damage, scratch, unnecessarily touch, or short circuit the IC.

Doing so may cause data loss or malfunction.

- Do not drop the FOMA card (UIM) or expose it to strong shocks.
 - Doing so may cause malfunction.
- Do not bend the FOMA card (UIM) or place a heavy object on it.
 - Doing so may cause malfunction.
- Do not put a label or sticker on the FOMA card (UIM) when attaching it to the FOMA terminal.

Doing so may cause malfunction.

Using the Bluetooth Function

- To secure the Bluetooth communication security, the FOMA terminal supports the security function compliant with Bluetooth standards, but the security may not be sufficient depending on the setting.
 Concern about the communication using the Bluetooth function.
- Please be aware that DOCOMO is not responsible for data leak when making data communications using Bluetooth.
- You can use a headset, handsfree, audio, dial-up communications, object push and serial port on the FOMA terminal. The audio/ video remote control may be available for audio. (Only on compatible Bluetooth devices)
- Frequency band

The following are frequency bands that the FOMA terminal's Bluetooth function uses:



2.4

This radio equipment uses the 2400 MHz band.

FH

- : Modulation scheme is the FH-SS system.
- : The estimated interference distance is 10m or less

The full band between 2400 MHz and 2483.5 MHz is used and the band of the mobile identification device cannot be avoided.

■ Bluetooth cautions

The operating frequency band of this equipment is used by industrial, scientific, consumer and medical equipment including microwave ovens, premises radio stations for identifying mobile units used in the manufacturing lines of plants (radio stations requiring a license), specified low power radio stations (radio stations requiring no license) and amateur radio stations (hereinafter referred to as "another station").

- Before using this terminal, confirm that "another station" is not being operated nearby.
- In the event of this terminal causing harmful radio wave interference with "another station", promptly change the operating frequency or stop radio wave emission by turning off the power, etc.
- 3. If you have further questions, contact General inquiries provided on the back of this manual.

Handling the FeliCa Reader/Writer

- The FeliCa reader/writer function of the FOMA terminal handles delicate signals that require no radio station license.
- The 13.56 MHz frequency band is used. If there is another reader/writer around, keep enough distance between the FOMA terminal and the reader/writer. Also, make sure that there is no radio station using the same frequency band nearby.

Cautions

 Do not deform the FOMA terminal. Using an altered device is a violation of the Radio Law.

A "Technical Conformity Mark (**)" affixed on the manufacturer's specification sticker certifies that the FOMA terminal meets technical regulations for specified radio equipment that are based on the Radio Law. If you remove the screws and alter the inside of the FOMA terminal, the technical regulations conformity certification becomes invalid. Do not use the FOMA terminal with the certification invalid, as it is a violation of the Radio Law.

 Be careful when using the FOMA terminal while driving.

A penalty may be imposed for holding a mobile phone while driving. When you need to receive a call, tell the caller that you will call back later using handsfree functions, then pull off the road before using the phone.

- Use the Bluetooth function only in Japan.
 The Bluetooth function of the FOMA terminal complies with radio standards of Japan and is certified. You may be punished if you use it overseas.
- Use the FeliCa reader/writer function only in Japan.

The FeliCa reader/writer function of the FOMA terminal complies with radio standards of Japan. You may be punished if you use it overseas.

 Use the IC card authentication function in Japan.

The IC card authentication function of the FOMA terminal complies with radio standards of Japan and is certified. You may be punished if you use it overseas.

Package Contents

<Basic Package>

N-09A

(Including the warranty and Back Cover N40)



N-09A INSTRUCTION MANUAL

(This manual)



* The Quick Manual starts on p.504.

CD-ROM for N-09A



* This CD-ROM contains PDF data "Manual for PC Connection" and "Kuten Code List".

Battery Pack N16



<Optional Equipment>

FOMA AC Adapter 01/02 (Including warranty and manual)



Desktop Holder N15

(Including manual)




Other options and accessories → p.449

Before Using the Handset

Part Names and Functions	2
Viewing Display	24
How to View the Indicator Display (Rear Panel Display)	28
Function Display and Key Operations	29
i-Widget Display and Operations	29
Changing Between Vertical and Horizontal Displays	30
Selecting Menu	31
Basic Operations on the Screens	36
Description of the Operations	38
Function Menu	39
Using UIM (FOMA Card)	41
Attaching/Removing Battery Pack	43
Charging	44
Checking Battery Level Battery	47
Turning Power On/Off	47
Switching Between Japanese and English Select language	48
Configuring Default SettingInitial setting	48
Setting Clock	49
Notifying the Other Party of Your Phone NumberCaller ID Notification	50
Checking Your Own Phone Number	50

Part Names and Functions

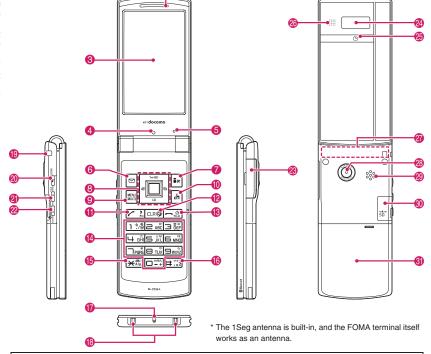

<Using Earphone>

Connect an external-connector-compatible earphone (optional).

To use an incompatible earphone, connect an adapter converter (optional).

Flat-plug earphone/microphone with switch (optional) connection example Phone plug Flat-plug of earphone/ microphone with switch Earphone connector (flat)

■ Functions

- Infrared data port → p.339
- 2 Earpiece
- O Display
- 4 Front camera
 - Take a photo of yourself using the camera function
 - Show the video of yourself during videophone calls

6 Illuminance sensor → p.109

6 Function key 1

- Perform the function displayed on this key→p.29
- · Display the mail menu
- Make videophone calls → p.52
- Switch the character mode when entering text
 → p.386

7 Function key 2

- Perform the function displayed on this key→p.29
- Activate the function selected in "i-mode button set." → p.182
- * The iMenu screen opens at the time of purchase.

8 Multi-function keys

🗖/🖵 Up/Down key

- Move the cursor, displayed content, etc. up or down (Scroll continuously when the key is held down)
- Display the i-Widget screen → p.281
- 🖵: Display the search phonebook menu screen

□/□ Left/Right kev

- . Move the cursor to the left or right
- Scroll the display to the previous or next screens by page → p.36
- □: Display the Received call history → p.58
- □: Display the Redial → p.58

OK kev

 Perform the function displayed on this key (Mainly "Select" or "Set") → p.29

- Perform the function displayed on this key→p.29
- Display the Main Menu/Simple Menu→pp.31, 35
- Display the task change screen → p.355

(1) ch Function key 4

- Perform the function displayed on this key (mainly function menus) → p.29
- Activate the function selected in "ch-button setting" → p.357
- * Display the i-Channel list at the time of purchase.

1 Send key

- Make voice calls → p.52
- Answer voice/videophone calls → p.64
- Display Choku-Den → p.94
- Return to the previous reading when entering text in 5-touch → p.382

CLR Back (Clear) key

- Return to the previous step → p.37
- Put a call on hold → p.68
- Delete the entered phone number or characters
 →pp.52, 388

Power/End/Hold key

- Turn the power on (1 second or longer)/off (2 seconds or longer) → p.47
- End each function → p.37
- End a call → p.53
- Put an incoming call on hold → p.68

10 - 9 Dial keys

· Enter phone numbers, characters and numbers

(b ★/Public mode (Driving mode) key

- Set Public mode (Driving mode) (1 second or longer)→p.68
- Switch the entered character into upper or lower case → p.386
- Enter " * " or dakuten/han-dakuten → p.439

1 # /Manner key

- Set Manner mode (1 second or longer) → p.103
- Enter "#", punctuation marks, etc. → p.439

Mouthpiece/Microphone

- (B) Charging terminal
- Strap hole

PushTalk key/(MUSIC)

- Use PushTalk → p.77
- Display PushTalk phonebook while on the standby screen → p.81
- Check missed calls or new mail with the FOMA terminal folded → p.28
- Read out mail or alarm content (Japanese mode)
- Activate Music Player → p.256

❷ ▲ Volume up key/(マナー)

- Set Manner mode (1 second or longer) → p.103
- Raise the earpiece volume during a call → p.67
- Check missed calls or new mail with the FOMA terminal folded → p.28
- Scroll back to the previous screen by page → p.36

- Display the Photo mode screen (1 second or longer) → p.216
- Lower the earpiece volume during a call → p.67
- Scroll forward to the next screen by page → p.36
- Read out the current time (Voice clock) (Japanese mode)
- Play recorded messages → p.72

External connector

- Use when charging, connecting an earphone, etc.
- Connect an AC adapter (optional), DC adapter (optional), FOMA USB Cable with Charge Function 02 (optional), Earphone Plug Adapter 01 for External connector terminal (optional)*, etc.
 - *: Connect a flat-plug stereo earphone set (optional), flat-plug earphone/microphone with switch (optional), etc.

4 Indicator display

 Indicate the clock or status of the FOMA terminal→p.28

mark

- Read the IC card → p.284
- iC communications → p.340

② Illumination/Charge lamp

- Flash when there is a missed call or new mail
 →p.111
- Light up/Flash when using the camera or IC card → pp.217, 286
- Light up in red while charging

FOMA antenna

 The FOMA antenna is built-in. To make calls under better condition, do not cover the antenna part with your hands.

Rear camera

- · Take photos and moving pictures
- Show the video of scenery, etc. during videophone calls

Speaker (Monaural)

microSD card slot

Insert a microSD card → p.324

Back cover

* In this manual, 🗓, 🛦 (マナー) and 🔽 (🖎) are referred to as sidekeys.

Hold-down operations

The following functions are available by holding down each key for 1 second or longer in standby:


Key	Function	Ref. page
Ð	Display the Received address list	p.170
□	Display the Sent address list	p.170
1	Display current location using the GPS function	p.293
2	Configure 2in1 settings	p.406
3	Set the IC card lock	p.286
5	Switch ECO mode	p.109
7	Display the font setting screen	p.115
8	Switch Privacy angle	p.108
9	Reset the screen/sound settings	p.322
0	Enter "+"	p.56

Key	Function	Ref. page
*	Set/Release Public mode (Driving mode)	p.68
#	Set/Release Manner mode	p.103
()	Adjust the earpiece volume	p.67
	Check new messages	p.158
•	Display the i-αppli software list	p.267
P (MUSIC	Start/End Music Player (End during BGM playback)	p.256
v (a)	Display the Photo mode screen	p.220
▲ (マナー	Set/Release Manner mode	p.103

Viewing Display

- Marks (\(\frac{1}{8} \), \(\sum_1 \), \(\frac{3}{8} \), etc.) displayed on the display or indicator display are referred to as icons.
- A calendar, etc. can be set to the display. → p.107

Display

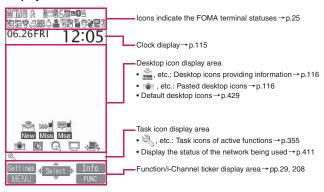





- Icon display area


Icons indicating the status of the FOMA terminal



	lcon	Description
0		Battery level → p.47
	<u>~</u>	Temperature monitor → p.44
2	Til	Signal reception level → p.47
	*	Out of service area/ln a place with no reception → p.47
	self	Self mode → p.140
3	1 / 2	During i-mode/i-mode communications in progress →p.180
	₫/ \$ / \$	Packet communications in progress (no data exchange/ dialing/receiving)*
	⇒ / ^	Packet communications in progress (sending/receiving)*
	g [*]	PushTalk call in progress → p.77
4	Ř	Measuring steps with Pedometer →p.352
6	31 31	SSL/TLS page displayed → p.185
6	(Red)	Unread mail/Inbox is full → p.155
		SMS in the FOMA card (UIM) is full → p.336

· · · · · · · · · · · · · · · · · · ·		
Icon	Description	
(Red)	Unread mail, SMS in the FOMA card (UIM) is full/Inbox is full, SMS in the FOMA card (UIM) is full → pp.155, 336	
(Red)	Mail stored at the i-mode center/ Full→p.158	
(Red)	i-mode center is full, Unread mail/ i-mode center is full, Inbox is full →pp.155, 158	
(Red)	Mail stored at the i-mode center, SMS in the FOMA card (UIM) is full/i-mode center is full, SMS in the FOMA card (UIM) is full →pp.158, 336	
(Red)	i-mode center is full, Unread mail, SMS in the FOMA card (UIM) is full/i-mode center is full, Inbox is full, SMS in the FOMA card (UIM) is full → pp.155, 158, 336	
(Red)	Mail stored at the i-mode center, Unread mail/Mail stored at the i-mode center, Inbox is full → pp.155, 158	
(Red)	Mail stored at the i-mode center, Unread mail, SMS in the FOMA card (UIM) is full/Mail stored at the i-mode center, Inbox is full, SMS in the FOMA card (UIM) is full → pp.155, 158, 336	
	["Receive option setting" is set to "ON"]	
	Mail stored at the i-mode center → p.157	
(Red)	Mail stored at the i-mode center, Unread mail/Mail stored at the i-mode center, Inbox is full →pp.155, 157	

25

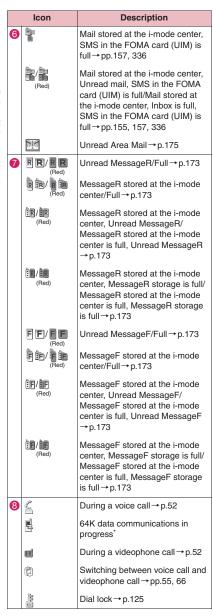

	Icon	Description
8	Fo	Secret mode/Secret data only mode → p.127
	D/D Cur Cur	Original lock/Original lock released temporarily →pp.130, 131
	%/% Car Cur	Secret mode or Secret data only mode and Original lock is set or released temporarily →pp.127, 130, 131
	ïr	Infrared data exchange in progress → p.339
	•	Infrared remote control operated → p.342
	1	IC card authentication in progress →p.134
	监	IC communications in progress (sending/receiving data) → p.340
9		GPS location request active (Location request set to "ON")/ GPS location request active (Location request set to "OFF" while Permission period is set) → p.295
	2	GPS positioning → p.293
1	O	i-concier information → p.211
	DOG!	Invitation report (i-αppli call) →p.277
	Dec	i-concier information/Invitation report (i-αppli call) → pp.211, 277
0	(blue)	Bluetooth power on (Light)/ Bluetooth connected (Flash) →p.376
	8	Bluetooth call in progress → p.378
	(Black)	In Bluetooth power saver mode →p.376
12	SD	microSD card inserted→p.324
	SD	microSD card (invalid) inserted →p.324
	+	microSD reader/writer operated → p.334
	4	microSD being accessed → p.327

	Icon	Description
14	S	Ring volume set to "Silent" → p.67 Mail/Msg. ring time set to "OFF" → p.102
1		Manner mode → p.103
	% / %	Auto manner mode set ON/ release ON→p.103
		Remote monitoring (Auto manner mode set ON/OFF) → pp.76, 103
16	2	Public mode (Driving mode) →p.68
1	TT	Music&Video Channel booked → p.251
18	♦ 4	Alarm notification function → pp.245, 363
19	O REC	1Seg Timer recording → p.245
20	9911	Voice Mail message → p.396
2		[Record message ON, Auto voice memo ON]
	Dida:	No Record message or Auto voice memo → pp.71, 368
	3	Record message only → p.71
	\$	Auto voice memo only → p.368
		Record message and Auto voice memo → pp.71, 368
		[Record message OFF, Auto voice memo ON]
	9 - S	Auto voice memo 0 - 2→p.368
		[Record message ON, Auto voice memo OFF]
	Ş1 - Ş1	Record message 0 - 5 → p.71

	Icon	Description
22	-	Record VP message → p.71
23	6	ECO mode "ON"→p.109
	ď	Privacy angle "ON" → p.108
	056	Privacy angle "ON", ECO mode "ON" → pp.108, 109
24	3	Keypad lock active → p.134
25	ic s	IC card lock → p.286
		Side key guard set to "ON" → p.135
	HE HEV Cur	Side key guard and IC card lock setting → pp.135, 286
26	\$0/_	microSD mode/MTP mode set →p.333
] /ss/=	USB cable connected and Communication mode/microSD mode/MTP mode set → p.333
	7/39/11	Handsfree device connected and Communication mode/microSD mode/MTP mode set →pp.64, 333
	7/39/13	USB cable/Handsfree device connected and Communication mode/microSD mode/MTP mode set→pp.64, 333

^{*:} For details on packet communications and 64K data communications, refer to "Manual for PC Connection" (PDF) in the bundled CD-ROM.

NOTE

- The display adopts state-of-the-art technology; some dots (points) may not light up while others may
 constantly light up due to its characteristics. Note that this phenomenon is not a failure.
- To check the names of displayed icons, select "Settings/NW Service" ▶ "Display" ▶ "Icons".

How to View the Indicator Display (Rear Panel Display)

On the indicator display, incoming call, mail or alarm notifications appear with various messages, images or animations.

Display example



Checking missed calls/new mail

■ Checking a missed call



Checking new mail

Press ♣ (¬¬¬) to view sender/received date and time/subject (when "Mail" under "Indicator display" is set to "ON").



* Press 🗹 to display the "New mail" icon. When you press 🗹 again, the sender and mail message are read out (Japanese mode).

NOTE

- If there are multiple missed calls or new mail, you can check the content of the latest one only.
- When the activation of the Received calls record or mail function is locked in the "Original lock", information
 on the missed call or mail is not displayed but only the "Missed call" or "New mail" icon appears.

Flashing of the Incoming call lamp

- When there is a missed call or new mail, the incoming call lamp keeps flashing in the color set in "Illumination".
- <Flashing color and conditions>
- The lamp does not flash when "Missed info" under "Illumination" is set to "OFF".
- When Gradation is set under "Illumination", the lamp flashes in the default color.
- When the color is set for the caller/sender in the phonebook, the lamp flashes in the specified color.
- The lamp does not flash in Public mode (Driving mode).
- <To turn off the lamp>

When you check the content of "Missed call", "New mail" or "New chat mail" displayed on the display or indicator display and icons disappear, the lamp is turned off.

Displaying the clock to check time

Press ♣ (¬¬¬) or • (♠) with the FOMA terminal folded to turn the indicator display on and display the clock.

When you press (a), the clock is displayed and the current time is read out at the same time (when there is no missed call, new mail, etc.) (Japanese mode).

NOTE

 You can select the clock type (4 types) or the display time (15 seconds/30 seconds/60 seconds) in "Indicator display". The clock cannot be displayed at all times.

Function Display and Key Operations

The soft keys (Function display) corresponding to \square , \square , \square , \square , \square and the direction icons corresponding to \square are displayed on the screen. These icons appear only when the corresponding keys can be used.

■ Performing the functions assigned to the function key

Press the key for 1 to 5 to activate the function.

1 shows (Settings), (Edit), (Finish), (Play), (Send), (New), etc. The center of 2 shows (Select), (Set), (Play), (Dial), etc.

- 3 shows (Disp. SW), (Ir data), (Info), etc.
- 4 shows (MENU) and (MULTI).
- 5 shows (ch), (FUNC), (Close), etc.

Press ch while (FUNC) is displayed to open the function menu.

→ p.39

■ Moving or scrolling the screen (6)

The icon $(4\Leftrightarrow \flat)$ only displays available directions. Use T to move or scroll in the direction.

Select Func Func MENU Menu

[Notation]

■ Description of the function display

In this manual, operations related to the keys for the function display are generally described with the function display in parenthesis, such as (Select) and (Ch) (FUNC).

i-Widget Display and Operations

The i-Widget screen shows a list of multiple Widget Appli running simultaneously.

- i-Widget operations → p.281
- Widget Appli

Display Widget Appli.
Select Widget Appli to display only the Widget Appli.

2 Navigation

Display navigation linked to key operation.


Press i (シャッフル (Change Layout)) on the i-Widget screen to shuffle Widget Appli randomly.



Changing Between Vertical and Horizontal Displays

While viewing 1Seg or using Full Browser, rotating the FOMA terminal 90 degrees counterclockwise changes the display to horizontal automatically.

• Rotating the FOMA terminal back also changes the display back to vertical.

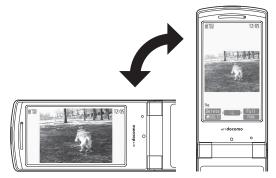

- The display orientation can be changed when:
 - The Full Browser is active → p.182
 - The camera is active → pp.220, 224, 226
 - Viewing 1Seg^{*} → p.240
 - Playing a Music&Video Channel program → p.260
 - Playing i-motion/movie → p.260
 - Viewing an image in My picture → p.304
 - . Viewing an image in Quick Album → p.310
 - Plaving a video^{*} → p.315
 - *: Rotating the FOMA terminal 90 degrees clockwise also changes the display to horizontal.

NOTE

- Rotate the handset when the display is vertical to the ground. When horizontal, rotating the handset does
 not change the display orientation.
- When "Auto-change Screen" (p.114) is set to "OFF", use the function menu or key operations.

Selecting Menu

You can run, set, and check the FOMA terminal's functions in a variety of ways. This manual explains how to access functions from the main menu as a standard. Menus are classified according to functions. → p.424

Selecting functions from the main menu

You can select various functions of the FOMA terminal from the main menu, which appears when you press | on the standby screen.

<Example: To set the "Illumination in talk" function>



Press | MENU on the standby screen to display the main menu





Tip

If no key is pressed for 15 seconds while the main menu is displayed, the main menu ends and the previous screen reappears.


Use 🖟 to move the highlight, then press 🔳 (Select) to select the displayed menu sequentially















The highlighted item is displayed in two lines and the current setting is displayed.





Accessing functions with shortcut keys

On each screen, you can access a function easily by pressing the function key pre-assigned to the function.

Press the function key on the standby screen









Pressing displays the Mail menu. → p.146 (1) Search phonebook

Pressing idisplays the iMenu screen. →p.180 Received calls

Pressing ch displays the Channel list. →p.209







■ 6/26 11:37 ■ SaburoKeitai ■ 6/25 15:35 ■ HanakoKeitai ■ 6/24 22:00 ■ TaroDocomo H 6/24 20:05 6/22 20:05 ■ SaburoDocomo 6/22 11:45 ∐JiroDocomo Select Disp Pressing displays



→ p.58

the i-Widget screen. +p.281

Pressing displays the Search phonebook screen. → p.90

the Received calls screen. → p.58


NOTE

- When using the Simple Menu (p.35), pressing on the standby screen displays the Simple Menu.
- You can change functions to access with ch kev. → p.357

Searching menu items to access functions

Even if you do not know the procedure to access a function, you can still access the desired function by entering keywords to search menu items.

<Example: To access "Select ring tone">

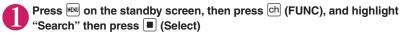



Enter "ring" and press 🔳 (Set), then select the displayed menu














Selecting functions from the original menu

By storing your frequently used functions (p.110), you can access the menus quickly.

Press on the standby screen to display the main menu, then press (Original)

Pressing switches between the main and original menus.

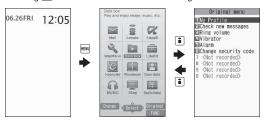

Accessing functions by selecting menu numbers

When the main menu is set to "Standard" (p.34), you can access functions quickly by pressing the keys pre-assigned to the menu numbers (p.424).


<Example: To access "Select ring tone">



Changing the main menu

You can change the design of the main menu (background, icon, etc.).

 When you use Kisekae Tool to change the menu display design, the menu structure may change in accordance with the frequency of use. Also, some menu numbers assigned to functions do not work.

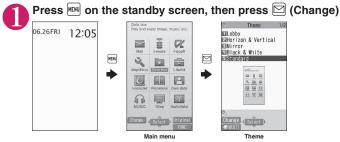



Select an item

"Lobby" - "Standard"

The display design switches to each menu. When set to "Standard", you can access functions by entering the menu numbers. → p.34

"Simple Menu" → p.35

"Original theme" → p.110

You can change the icons and background image used on the main menu. You can also set a photo you took as the background.

"Kisekae Tool" → p.121

You can change various designs of the FOMA terminal such as the main menu all at once with the Kisekae Tool package. Selecting "拡大メニュー" (Enlarged menu) activates the menu in the large character size.

To change the main menu temporarily

Highlight an item on the theme screen and press \square (Change) to change the main menu temporarily. When the main menu is displayed again, the previously set main menu appears.

NOTE

 When you set the menu that can be customized, you can sort the menu items by pressing cn (FUNC) in the main menu and selecting "Replace item". → p.357


Switching to Simple Menu

Simple Menu consists of frequently used menus, and its character size is large and operation procedure is simple.

- The font size of the screens can be set to "X-large" all at once. →p.115
- For the menus, refer to "Simple Menu function list". →p.438



Press on the standby screen, then press (Change)

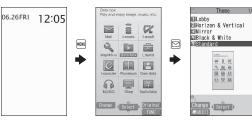

Select "Simple Menu", and further "YES" if you want to change the font size to X-large

Select "NO" not to change the font size.



Basic Operations on the Screens

This section describes basic key operations.

When items appear in multiple pages



Use 🗗 to display other pages

Press \square (or \square (\neg \vdash \vdash)) to go to the previous page, and press \square (or \square (\square)) to go to the next page.


Current page/Total pages



■ To display other pages using

Pressing displays the previous page when the highlight is located at the top of the list, and pressing displays the next page when the highlight is located at the bottom of the list.

Using dial keys to select items

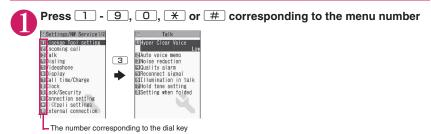

Selecting YES/NO or ON/OFF



Use ☐ to move the frame, then press ☐ (Select)



Displaying an image in the picture list



Use
 to move the frame, then press
 (Disp.)



Entering your security code



Enter a 4- to 8-digit security code, then press (Set)



The entered security code appears as a "__" string.

The detail screen of the function is displayed when the security code is successfully entered.

If the entered security code is incorrect

A message appears indicating that the entered code is wrong. Re-enter the security code from the beginning.

Entering numbers



Enter numbers by pressing 0 - 9



To enter a 1-digit or 2-digit number on a 3-digit number entry screen, press twice or once before entering the number.

■ To enter "3"

Canceling operations/Returning to the standby screen



Press CLR to cancel the last operation, e.g. when you select a wrong menu item. Although the previous screen appears basically, another screen may appear depending on the function.



Press — to end operations such as settings and return to the standby screen. Although the function ends and the standby screen appears basically, another screen may appear depending on the current screen and function. If you press — during setting operation, the setting operation is canceled and the standby screen reappears.

Description of the Operations

In this manual, instructions for menu operations are briefly described in almost all cases as follows.

The operation description example and the actual operations



- 1: Press on the standby screen.
- 2: Use to move the highlight to the item in double quotation marks, and then press (Select).
- ③: Use ♀ to move the highlight to the item in double quotation marks, and then press (Select).

 Alternatively, press 1 9 ★ # corresponding to the menu number in double quotation marks.
- 4: Use to move the highlight.
- 5: Press the key for the function displayed in parentheses.

[Notation]

■ Omission of ■ in the "Select" and "Set" operations

- When a target function is selected from the main menu or list, such as examples ② and ③, (Select) is
 omitted
- In cases such as "Select any item" or "Enter your security code", (Select) or (Set) is also omitted.
- When you are supposed to move to the next step without pressing (Select), "Highlight XXX" is used, such as example (4).

Priority given to easy operations

- Although operations performed from the main menu are described, this manual gives priority to shortcut key operations (p.32) if any.
- To select a function from the Simple Menu, refer to "Simple Menu function list" (p.438).

Omission of the descriptions of subsequent steps after the operation is complete

- The descriptions of subsequent steps after the operation is complete are omitted.
- "Canceling operations/Returning to the standby screen" → p.37

■ Brief description of keys and menus

 In this manual, instructions on key illustrations/menu displays/holding down keys are simply described as follows:

	Key	Menu display	Holding down keys
Actual display/operation	า */®	Menu/Search	Press # for 1 second or longer
Description in this manual	1	iMenu/Search	# (1 second or longer)

■ Omission of menu descriptions and combined description of menu items

- Menu descriptions for items are omitted when you can easily guess a target and method of the operation only by looking at an item name so that no descriptions seem to be necessary.
- To describe multiple items with menu descriptions omitted at once, "," is placed between the items.

Function Menu

"Function menu" is one of the menus that can be accessed from the function display. The function menu activates supplementary functions of each screen.

For example, you can use the function menu to delete mail after reading it, or to select the folder to save a photo taken with the camera.

Using the function menu

There are mainly three methods to use the function menu. Use the appropriate method depending on the situation.

- oxdot Refer to the explanation of the function menu items from the reference page stated on the operation screen
- ② Refer to the explanation of the function menu items from the function menu index
- (3) Find the procedure to display the operation screen from the reference page of the function menu
 - Operation screen with the reference page for the function menu is illustrated in a colored frame and differentiated from others.




^{* &}quot;Function menu items" and "Function menu index" in the above illustration are only excerpts.

Operation target on the list screen

In the function menu on the list screen, there are cases where highlighted data are targeted or all the data in the list are targeted. For example, "Edit title" or "Delete this" targets a highlighted title or data, and "Delete all" targets all the data.

When you select a function menu that targets a data in the list, such as "Edit title" or "Delete this", highlight the data, then press [ch] (FUNC).

<Example: To edit the bookmark title on the list screen>

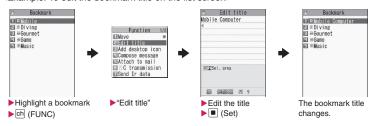

Selecting multiple items

When you delete unnecessary data, protect important data or move the data to prevent others from viewing to the Secret folder, you can select not only one data or all data but also multiple data. In this case, perform the following operation:

<Example: To delete multiple mail on the Received mail list screen>





Use ⚠ to move the frame to the item to select and press ■ (Select). The checkbox changes from ■ to ■. This means that the item is selected. Pressing ■ (Select) switches between ■ and ■. In the picture list, ■ appears when the item is selected. Nothing appears when unselected.






When "FUNC" appears on the function display area, pressing ch (FUNC) allows you to use "Select all" or "Release all".

Menus toggling

Depending on the menu, menu items toggle as follows:



When the shooting screen is displayed and "Rear camera" is used, "Front camera" appears as in <Example 1>. If you select "Front camera" at this point, the "Front camera" activates, and "Rear camera" appears next time the function menu appears.

[Notation]

Description of menus toggling

Such menus are described as "Front camera ⇔ Rear camera".

NOTE

- When the displayed menu contains sub menus, " # " appears on the right.
- The function menu may contain different items or some items may not be available depending on the operating function and settings. Unavailable function menu items are grayed out.

Using UIM (FOMA Card)

The FOMA card (UIM) is an IC card that contains private information such as your phone number. Before inserting or removing the FOMA card (UIM), turn the power off and remove the battery pack.


→ p.43

Also, insert or remove the FOMA card (UIM) with the FOMA terminal folded and held in your hand.

Inserting/Removing the FOMA card (UIM)

The illustration shows how to insert the FOMA card (UIM).


Insert the FOMA card (UIM) into the slot with the IC side down as shown in the illustration

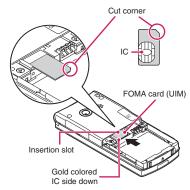

Insert the FOMA card (UIM) until it locks in place

To remove the FOMA card (UIM), gently pull it out straight from the position described below.

Properly inserted



NOTE

 Inserting/Removing the FOMA card (UIM) forcefully may damage the card.

Security codes

You can set 2 PIN codes on the FOMA card (UIM) for your FOMA terminal, the PIN1 code and PIN2 code.

→p.124

FOMA card security function

The FOMA terminal is equipped with the FOMA card security function (FOMA card operational restriction function) to protect your data and files.

- When you download data or files from sites or receive data attached to mail, the FOMA card security is automatically set on these data and files.
- Data and files with this function set are accessible only when the inserted FOMA card (UIM) was also used when downloading these data or files.
- The following are data and files subject to the FOMA card security function:
 - Files attached to i-mode mail (except for ToruCa)
 - Screen memo
 - · Image inserted into Deco-mail or signature
 - i-αppli (including i-αppli standby screen)
 - Image (including animation and Flash movie)
- Melody
- · Image of ToruCa (detail)
- Image downloaded from the Data Security Center
- · Program of Music&Video Channel
- · Movable contents data
- i-motion
- · Chara-den
- Chaku-Uta®*/Chaku-Uta-Full®
- PDF data
- Kisekae Tool
- · Record VP message
- Mail templates containing data subject to operational restrictions
- · Machi-chara
- · Download dictionary
- MessageR/F with attachment (melody/image)
- e-book/e-comic
- *: "Chaku-Uta" is a registered trademark of Sony Music Entertainment (Japan) Inc.


 A FOMA card (UIM) that was inserted when you downloaded or received data or files is hereinafter referred to as "your FOMA card (UIM)", and other FOMA cards as "other FOMA card (UIM)".



When the inserted FOMA card (UIM) was used to download data or receive mails, you can view or play the data that applies to the FOMA card Security function.



When the inserted FOMA card (UIM) was not used to download data or receive mails, you cannot view or play the data that applies to the FOMA card Security function.

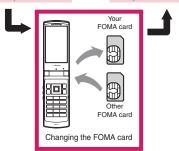

NOTE

- If the FOMA card (UIM) is not inserted or you replace the FOMA card (UIM) with another one, "appears for data and files with this function set and you cannot set these data in "Display setting" or "Select ring tone".
- Data and files with this function set can be moved or deleted with another FOMA card (UIM) inserted.
- If you remove the FOMA card (UIM) or change to another FOMA card (UIM) when data or files with this function set are set in "Display setting" or "Select ring tone", these settings are reset to default. When your FOMA card (UIM) is inserted again, the settings return to your settings.
- If replaced with another FOMA card (UIM), Widget Appli you downloaded will not start from the i-Widget screen or Widget Appli list screen.

Settings for replacing the FOMA card (UIM)

When you replace the FOMA card (UIM) inserted in the FOMA terminal with another FOMA card (UIM), the following settings are changed:

- Functions of which settings are changed to settings stored on the new FOMA card (UIM)
 - Select language
- · SMS center selection
- SMS validity period
 PIN setting
- Host selection under Connection setting
- Functions that are reset to default
 - · i-Channel setting
 - · FB usage set.
- Functions that are set to "Invalid", "OFF", etc.
 - Cookie setting for Full Browser (Cookie information remains)
- Functions where the current settings of the FOMA card (UIM) become invalid
 - Program setting of the Music&Video Channel (Set programs again)

FOMA card types

The FOMA card (UIM) (blue) has the following functional differences from the FOMA card (green/white):

Function	Blue	Green/ White
Max number of digits for phone number to be stored in the UIM phonebook	20 digits	26 digits
User certificate operation to use FirstPass	Not available	Available
WORLD WING	Not available	Available
Service Numbers	Not available	Available

WORLD WING


WORLD WING is DOCOMO's international roaming service that enables you to use your mobile phone number and mail address while overseas as you do in Japan, using a FOMA card (green/white) and compatible terminal.

- If you started to use FOMA services after September 1, 2005, you do not have to apply for international roaming services to use it. However, if you did not wish to use it, you have to apply for it separately.
- If you started to use FOMA services before August 31, 2005 and have not applied for "WORLD WING" yet, you have to apply for it separately.
- Services are not available in some billing plans.
- If your FOMA card (UIM) (green/white) is lost or stolen, please immediately contact us and follow the procedure to cancel services. Refer to the back of this manual for the inquiries numbers. Note that you must pay communication charges incurred after it is lost or stolen.


Attaching/Removing Battery **Pack**

 Make sure to turn the power off before removing the battery pack. Also, keep the FOMA terminal folded and held in your hand.

Attaching



Press the back cover in direction ①, and slide it in direction (2) to remove the back cover.



Attach the battery pack


With the product name facing up, attach the battery pack in direction 3 making sure to fit the position of the metal connector on both the battery pack and the FOMA terminal (Phone), then press the battery pack down in direction 4.



Attach the back cover

Lift the back cover about 3 mm and align it to the groove of the FOMA terminal (Phone). Press the back cover in direction (5), slide it in direction (6) and press the back cover until it clicks.

Make sure that there is no space between the Back cover and the FOMA terminal (Phone).




Removing

Remove the back cover

Remove the battery pack

Press the tab on the side of the battery pack in direction ①, then lift upwards in direction ② to remove the battery pack.

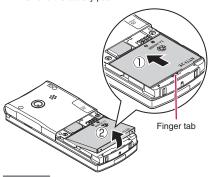

NOTE

• Do not apply excessive force when the tip of the back cover is inserted into the FOMA terminal. The finger tab of the back cover may be broken.

Charging

Use the specified Battery Pack N16.

Battery pack life

- The battery pack is consumable. The operation time for battery packs steadily decreases with each charge.
- When the operation time drops to as low as half the
 time at the time of purchase, the battery pack life is
 almost over. It is recommended that you replace it
 with a new one. When the life of the battery pack is
 near end, the battery pack may expand a little
 depending on the usage condition, but this is not a
 malfunction.
- The battery pack life may be shortened if i-αppli, videophone or 1Seg is used for a long time while charging.



To protect the environment, bring used battery packs to a docomo Shop, agency, recycle shop, etc.

■ Charging

- For details, refer to the manuals for the FOMA AC Adapter 01/02 (optional), FOMA AC Adapter for Global Use 01 (optional) and FOMA DC Adapter 01/02 (optional).
- FOMA AC Adapter 01 supports voltage of 100 V AC only.
- FOMA AC Adapter 02 and FOMA AC Adapter 01 for Global use supports voltage from 100 V AC to 240 V AC, but the plug shape of the AC adapter is for 100 V AC (domestic). For overseas use with the AC adapter supporting voltage from 100 V AC to 240 V AC, the compatible conversion plug adapter is required. Do not charge the battery using the transformer for travel.
- When charging, the battery pack must be attached to the FOMA terminal.
- You can receive calls during charging if the power is turned on. However, the battery level will fall during the call and the time required for charging will increase. Charging time also increases when "Charging" under "Backlight" is set to "All time ON".
- When plugging in or out the connector, do it slowly and securely not to apply excessive force.
- When the charge lamp and "A" flash, charging is not available due to temperature monitoring until the terminal temperature cools down enough for charging.

- When you make a call or perform packet communications during charging in a hightemperature environment, the FOMA terminal's temperature may rise and the charging may be stopped. If this occurs, stop a running function and wait for the temperature of the FOMA terminal to fall before you retry charging.
- Charging may stop before the battery level reach to 100% depending on the usage condition. In this case, exit all function and then charge again.
 Disconnect the FOMA terminal from the AC adapter (or desktop holder) or DC adapter, then set it again for recharging.

Do not charge the battery pack for a long period of time (several days) with the power turned on

- If you charge the battery pack for a long period of time with the power turned on, power to the FOMA terminal will be supplied from the battery pack once charging ends. As a result, you will only be able to use the FOMA terminal for a short time and the low-voltage alarm may sound immediately. In this case, recharge the battery pack correctly. Disconnect the FOMA terminal from the AC adapter (or desktop holder) or DC adapter, then set it again for recharging.
- Battery usage time (the duration varies depending on the charging time and the deterioration of the battery pack)

Continuous standby time

FOMA/3G Stationary ("Auto""): Approx. 550 hours In transit ("3G""): Approx. 410 hours In transit ("4uto"): Approx. 360 hours GSM Stationary ("4uto""): Approx. 280 hours

Continuous talk time

FOMA/3G Voice communications: Approx. 200 min.
Videophone: Approx. 100 min.
GSM Voice communications: Approx. 190 min.

1Seg viewing time

Viewing: Approx. 210 min. 1Seg ECO mode: Approx. 300 min.

- *: Switch networks in "3G/GSM setting" (p.414).
- "Stationary standby time" is the estimated average battery operational time when the FOMA terminal is closed and stationary in the service area where reception is normal.
- "In transit standby time" is the estimated average battery life when the FOMA terminal is folded and remains in the combined conditions of being stationary or in transit in the service area where reception is normal, and outside the service area.

- 1Seg viewing time is an estimate of the viewing time using Stereo Earphone/Microphone 01 (optional) when reception is normal.
- In certain circumstances, talk, communications and standby times may drop to as low as half the times shown as well as 1Seg viewing time may be shortened due to the battery charge, function settings, temperature, or radio reception in the area (weak or no reception).
- Frequent use of functions such as i-mode, mail, data communication, multiaccess, i-αppli, camera, video/i-motion/music, 1Seg and Pedometer may reduce the actual usage time.
- Times may be shorter depending on the network conditions of the country of stay.
- If "3G/GSM setting" (p.414) is set to "3G", the talk (or communications) and standby times will be longer when using it in Japan.


■ Battery pack charging time

Charging time is the time required to charge a completely empty battery pack with the FOMA terminal power turned off.


AC adapter	Approx. 120 min.
DC adapter	Approx. 120 min.

Charging with the AC/DC adapter

■AC adapter (optional)

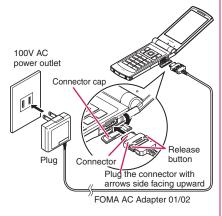

■ DC adapter (optional)

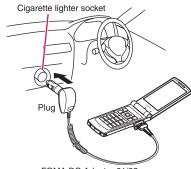


FOMA DC Adapter 01/02

- Open the external connector cap of the FOMA terminal
- Plug the AC/DC adapter connector horizontally into the FOMA terminal's external connector
- Plug the AC adapter into the outlet Plug the DC adapter into the cigarette lighter socket in your car Charging starts.
- When charging is complete, press the release button and simultaneously remove the AC adapter/DC adapter connector horizontally from the FOMA terminal

Do not apply excessive force as doing so may cause a malfunction.

- Unplug the AC adapter from the outlet
 Unplug the DC adapter from the cigarette lighter socket in your car
- Close the external connector cap of the FOMA terminal

Charging with the desktop holder

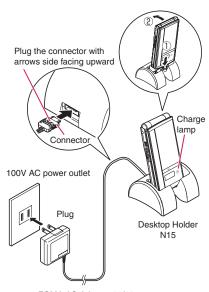

FOMA AC Adapter 01/02

- Plug the connector of the AC adapter (optional) horizontally to the terminal on the back of the desktop holder (optional)
- Plug the AC adapter into the outlet
- As shown in the illustration, hold the desktop holder down and insert the FOMA terminal in direction ① and place it in direction ②

After charging is complete, hold down the desktop holder, then lay and lift the FOMA terminal up in the direction of the arrow



NOTE

- The charge lamp lights up in red during charging.
 The charge lamp turns off when charging ends (fully charged).
- The battery pack cannot be charged separately.
 Always charge with the battery pack attached to the FOMA terminal.
- If the battery runs out, the charging lamp may not light up immediately, but the charging itself has started.

<AC adapter/DC adapter>

- If the power is on, "all" flashes during charging, and the battery level indicator appears. After charging ends, "all" lights up.
- When the charge lamp of the FOMA terminal (Phone) turns off, "ji" disappears and the message "Charge unusual Stop charge" appears, disconnect the FOMA terminal from the AC adapter or DC adapter and remove the battery pack. Then set them again for recharging. If the same error occurs again, there may be a problem or fault on the AC adapter or DC adapter. Contact a docomo Shop or Service Counter.
- The DC Adapter uses a 2A fuse. If the fuse (2A) blows, always use the dedicated fuse. Fuses (2A) are consumable items. Purchase a replacement fuse at your local car accessory shop, etc.

<Desktop holder>

 Attach the FOMA terminal to the desktop holder securely. Also, take care not to pinch the strap.

Checking Battery Level <Battery>

The indicated battery level is approximate.

Checking the battery level with icon

When the power is turned on, an icon appears indicating the remaining battery level.


 Highlight the battery icon to view the battery level.








Battery level is 81 - 100% Fully charged.







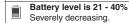



NOTE

- The battery level may not be properly displayed immediately after the battery pack is attached or depending on the temperature.

Checking the battery level with sound and animation

The current battery level is indicated by sound and animation.



The check screen appears, and beeps battery confirmation sound in accordance with the level. The battery level animation disappears in about 3 seconds.

"5 short beeps": Battery level is 81 - 100% Fully charged.

"4 short beeps": Battery level is 61 - 80% Slightly decreasing.

"3 short beeps": Battery level is 41 - 60% Decreasing.

"2 short beeps": Battery level is 21 - 40% Severely decreasing.

"1 short beep": Battery level is 0 - 20% Almost empty. Recharge the battery.

NOTE

 When Manner mode is set or "Keypad sound" is set to "OFF", the buttery level confirmation sound is not played.

When the battery runs out

The alarm sounds for about 10 seconds and the power is turned off in about 1 minute. To stop this alarm, press any key.



NOTE

The recharge battery screen appears and 3 short beeps sound during a voice call, and the recharge battery screen ("カメラオフ Camera Off" message to the other party) appears during a videophone call. The call is disconnected in about 20 seconds and the power turns off in about 1 minute.

Turning Power On/Off

<Power ON/OFF>

Turning the power on

 Before turning the power on, make sure that the FOMA card (UIM) is inserted correctly.




(1 second or longer)

After the Wake-up display appears at the same time as the Wake-up tone rings, the standby screen or initial setting screen appears. If you have just attached the battery pack or you turn the power back on immediately after turning it off, "WAIT A MINUTE" may appear for a short time.

■ When " 💥 " is displayed

You are out of the service area or in a place with no reception. Move until the signal strength indicator appears. The reception level is displayed as follows:

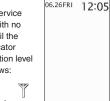

Standby screen



If the Initial setting screen appears → p.48

If the PIN1 code/PIN2 code entry screen appears → p.124

■ Pre-stored mail

"Welcome 』ドコモ動画庫" (Welcome mail) and "緊急速報「エリアメール」のご案内" (Guide to Early Warning "Area Mail") are stored at the time of purchase. →p.163

NOTE

- The wake-up tone can be set to "ON" or "OFF" from the function menu of "Wake-up display" under "Display setting". → p.107
- You cannot change the Wake-up tone melody. The volume is determined by "Phone" under "Ring volume" (Played at "Level 2" when set to "Step").
 Press any key to stop melody.
- When you change the FOMA card (UIM), you
 have to enter the 4- to 8-digit security code after
 turning on the power. The standby screen appears
 when the security code is successfully entered. If
 you enter a wrong security code 5 times, the
 power turns off (you can turn on the power again).
- If the battery ran out or the Auto power OFF function worked to turn off the power last time, the notification screen appears when you turn on the power again.
- After powering off, wait a while before powering back on.

Turning the power off



The shutdown screen "SEE YOU" appears and the power is turned off.

Switching Between Japanese and English <Select language>

Switch the display language from Japanese (default) to English.

- **・** 設定 / NWサービス"▶"ディスプレイ"▶"バイリンガル"▶"English"
 - To change from English to Japanese

 ► Settings/NW Service" → "Display" →
 "Select language" → "日本語"

NOTE

- When a FOMA card (UIM) is inserted, the Select language setting is saved to the FOMA card (UIM).
- When "Select language" is set to "English", "ON" and "OFF" will be the options for "Display" under "Clock display" and for "Info notice setting".

English announcement is available for some services. → p.400

Configuring Default Setting

<Initial setting>

After turning the power on, configure initial settings of "Set main time", "Change security code", "Character size", "Permit to send loc." and "Keypad sound".

■ Initial setting screen "YES"




Initial setting

- Set the main time → p.49
- Change the security code → p.125
 The default setting is "0000" (4 zeros).
- Set the character size → p.115
- Set whether to send location information via the GPS function → p.295

If "Permit to send loc." is set to "ON", enter your security code.



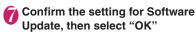

 After you set all functions, the initial setting screen will no longer appear at power on.


Setting Clock

Set the date and time in "Set main time". In "Set sub clock", set the show/hide setting and display mode of the sub clock.

- The FOMA terminal can automatically adjust time based on the time information (Greenwich Mean Time, GMT) and the time zone (the local time).
- The time zone is set as time difference to Greenwich Mean Time set every hour on the hour. When another city or area is registered by the same time difference, "Change" appears in the function display. Press ⋈ to change the city or area.

Setting the main time

<Set main time>

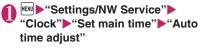

- To set the summer time
- ▶ "Summer time"

When set to "ON", time is displayed with 1 hour added.

Select any item:

Auto Automatically adjust the main clock date and time.

Auto Automatically adjust the date and time based on the retrieved time information and time zone information. The local time is displayed during international roaming.

Manual (Time zone set)······Select time zone to display the local time.

Manual (Date time set) ·····Enter date and time in the main clock manually. Select the time zone, then enter date and time.

■ To enter date and time

Use 🔁 to move the highlight, then use dial keys to enter numbers.

NOTE


- After you set the date and time, you can use functions such as "Alarm" and "Schedule" that use the date and time
- The adjustable range of date and time is between 00:00 on January 1, 2004 and 23:59 on December 31, 2037.

<Auto time adjust>

- When the power is turned on with a FOMA card (UIM) inserted, the time is adjusted automatically.
- If time is not adjusted for long periods after the power is turned on, reboot the power.
- A time lag of several seconds may occur. Also, time may not be adjusted depending on the signal quality.
- When you use your FOMA terminal overseas, time may not be adjusted depending upon network conditions of roaming operator. In this case, select the time zone manually.

Setting the sub clock

<Set sub clock>

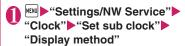

■ To set the summer time

▶ "Summer time"

When set to "ON", time is displayed with 1 hour added.

■ To display the area name

▶ "Area name"

When set to "Display", the sub clock displays the area name.

Select any item:

Auto Automatically display the sub clock during international roaming. For example, the main time automatically switches to the local time when the time adjustment is set to "Auto", but the sub clock displays the Japan Standard Time.

Always Select the time zone to always display the local time as the sub clock.

OFF.....Hide the sub clock.

NOTE

 If "Size" under "Clock display" is set to "Up Small", the sub clock is not displayed.

 When this function is set to "Auto", the sub clock displays the Japan Standard Time when the time zone of "Set main time" is not "GMT+09" (the sub clock is not displayed in Japan when it is "GMT+09").

Notifying the Other Party of Your Phone Number

<Caller ID Notification>

Show your phone number (caller ID) on the other party's phone (Display) when making a call.

- Take care when informing others of your phone number, as this is important personal information.
- You cannot use the service when " is displayed



Activate/Deactivate ······ Set whether to send vour caller ID.

Check setting······Check the current Caller ID Notification setting.

NOTE

- This function is available only when the other party's phone supports the caller ID display.
- If you hear a message requesting your caller ID, make a call again after setting your caller ID notification.
- Even if you add "186"/"184" to make an international call, the setting may be disabled.
 Select "Notify Caller ID" from the function menu.
- If you make a call with the "186"/"184" prefix, the phone number including this prefix is recorded in Redial/Dialed calls.
- When you make a PushTalk call, this function's setting applies.

Checking Your Own Phone Number My Profile>

Display and check your phone number (own number) stored in your FOMA card (UIM).



NOTE

- You can easily quote information stored in "My Profile" when entering owner information (such as name or mail address) on websites, etc. → p.388
- To check your i-mode mail address, select
 "English" ➤ Options ➤ "Mail Settings" ➤ "Confirm Settings".
- When 2in1 is in Dual mode, use to switch the My Profile display.
- Reset My Profile for Number B first before you exchange FOMA cards (UIM) while using 2in1. →p.366

Voice/Videophone Calls/PushTalk

Making calls/videophone calls	
Making a Voice/Videophone Call	52
Switching a Voice/Videophone Call During a Call	55
Making International Calls	
Using Handsfree During a Call	57
Making a Call Using Redial/Dialed Calls/Received Calls	
Redial/Dialed calls/Received calls Using Chaku-moji Chaku-moji	
Showing/Hiding Caller ID When Making a Call	60 61
Sending Touch-tone Signals Pause dial	62
Using the Prefix Function	62
Making a Call Specifying a Sub-Address	63
Setting the Alarm for Reconnection	63
Making the Earpiece Sounds Clear Hyper Clear Voice	
Reducing Surrounding Noise to Make Voice Clear	64
Talking Handsfree While Driving	64
Receiving calls/videophone calls	
Receiving a Voice/Videophone Call	64
When the Other Party Switches a Voice/Videophone Call	66
Pressing a Dial Key to Answer a Call	66
Ending/Holding Call by Folding the FOMA TerminalSetting when folded	67
Adjusting Earpiece Volume	67 67
Adjusting Ring Volume	07
When you can/could not answer a voice/videophone call	
Holding Incoming/Current Calls On hold/Holding	
Using Public Mode	68 70
When You Cannot Answer an Incoming Call	
Recording Voice/Video Messages When You Cannot Answer the Call	70
Recording Voice/Video Messages When You Cannot Answer the Call Record message	70
Recording Voice/Video Messages When You Cannot Answer the Call Record message Recording a Message When You Cannot Answer Incoming Call Quick message	71
Record message	71
Record message Recording a Message When You Cannot Answer Incoming Call	71 72
Record message Recording a Message When You Cannot Answer Incoming Call	71 72
Record message Recording a Message When You Cannot Answer Incoming Call	71 72 72
Record message Recording a Message When You Cannot Answer Incoming Call	71 72 72 73
Record message Recording a Message When You Cannot Answer Incoming Call	71 72 72 73 73 76
Record message Recording a Message When You Cannot Answer Incoming Call	71 72 72 73 73 76
Record message Recording a Message When You Cannot Answer Incoming Call	71 72 72 73 73 76
Record message Recording a Message When You Cannot Answer Incoming Call	71 72 72 73 73 76 76
Record message Recording a Message When You Cannot Answer Incoming Call	71 72 72 73 73 76 76 77 78 80
Record message Recording a Message When You Cannot Answer Incoming Call	71 72 72 73 73 76 76 77 78 80 80
Record message Recording a Message When You Cannot Answer Incoming Call	71 72 72 73 73 76 76 76 77 78 80 80 81
Record message Recording a Message When You Cannot Answer Incoming Call	71 72 72 73 73 76 76 77 78 80 80 81 82
Record message Recording a Message When You Cannot Answer Incoming Call	71 72 72 73 73 76 76 76 77 78 80 80 81

Making a Voice/Videophone Call

Enter the phone number of the other party

Always start with the area code, even for a call within the same area

You can enter up to 80 digits for the phone number. However, only the last 26 digits are displayed.



Function menu⇒p.54

<When you enter a wrong number>

■ To insert a number

Press to move the cursor to the number to the left of the position where you want to insert the number, then enter the number.


■ To delete a number

Press to move the cursor to the number you want to delete, then press CLR.

Hold down CLR for 1 second or longer to delete all the numbers to the left of the cursor and the number in the cursor position.

<Videophone>

- To make a videophone call with Chara-
- ► ch (FUNC) Select image Lara-den"
- Select Chara-den



<Voice call>

- " & " flashes while dialing and lights up during the call.
- If you hear the busy tone

The line is busy. Call again after a while

If you hear a message that the other party cannot be reached



The other party's mobile phone is not turned on or is out of signal range. Call again after a while.

If you hear a message requesting your caller ID

Call again with Caller ID Notification enabled. → pp.50, 61

<Videophone>

- " all " flashes while dialing a videophone call and lights up during the call.
- If a videophone call is not connected → p.55
- To switch between camera image and substitute image
- ▶ch (FUNC)▶

"Substitute image" ⇔ "My side"



Function menu⇒p.54

- To send video captured with the rear camera
- ▶ (Change)

The front camera and rear camera switch each time you press (Change).

- To switch the main screen
- (Change) (1 second or longer)

"Change main disp." → p.54

- To enlarge a camera image to be sent ►Use 🕞 to adjust zoom Zoom → p.229
- To mute the voice to send
- ▶ (マナー) (1 second or longer)
- MUTE " appears.

To cancel muting, press (マナー) for 1 second or longer again.

- To set Hyper Clear Voice → p.63
- Switching a Voice/Videophone Call During a Call → p.55
- To put the current voice/videophone call on hold → p.68
- To switch between the FOMA terminal and Bluetooth device (p.378)
- ▶ ✓ (1 second or longer)
- When 2in1 is in Dual mode

The Outgoing number selection screen appears. Select a phone number.

To end the call, press

NOTE

- If no keys are pressed for 15 seconds during a voice call, the Power saver mode activates.
- If you make an emergency videophone call (110, 119 or 118), the call automatically changes to a voice call.
- You cannot receive i-mode mail or MessageR/F during a videophone call (you can receive SMS). Received mail is stored at the i-mode center and can be retrieved using "Check new messages" after the videophone call.
- Digital communications charges apply when the substitute image is displayed during a videophone call.

Videophone

You can use the videophone call function between terminals that support the DOCOMO videophone system.

- DOCOMO's Videophone is compliant with the 3G-324M*2 international standard established by the 3GPP*1 (the 3rd Generation Partnership Project that sets standards for 3rd generation mobile communications systems). Connections with videophones using different standards cannot be made.
 - *1: 3GPP (3rd Generation Partnership Project) A regional standardization body established to develop commonly applied technical specifications for 3rd-generation mobile communications systems (IMT-2000).
- *2: 3G-324M

An international standard for 3rd-generation mobile videophones.

■ Guide to the videophone screen



- Main screen (Camera image of the other party is displayed by default)
- ②Sub-screen (Your own camera image is displayed by default)
- 3 Last call duration
- (4) Settinas

: Hyper Clear Voice (Low/High)

Voice being transmitted/Transmission

: Video being transmitted/Transmission

: Camera image/Substitute image/ Chara-den being transmitted

MUTE: : Muting

: Visual check in progress

: Photo mode (Portrait/Scenery/Close-up)

E : Key operation mode (DTMF

mode*1/Whole action mode*2/ Parts action mode*2)

*1: "Send DTMF tone/DTMF tone OFF" → p.54

*2: "Using Chara-den" → p.73

Enter phone number screen (p.52)

Notify Caller ID → p.61

Prefix numbers → p.62

Chaku-moji → p.60

Int'l call → p.57

Multi Number → p.402

Add to phonebook → p.86

Compose message → p.146

Select image ······ Select Me/Chara-den as an image used during a videophone call. Select "Release settings" to release the setting.

FUNC In-call screen (p.52)

Bluetooth/Phone······Switch between the FOMA terminal and Bluetooth device (p.378).

Videophone in-call screen (p.52)

Petit message → p.75

Decoration → p.75

Off decoration Delete the displayed message or stamp.

Substitute image

My side

Switch between the camera image and substitute image.

Rear camera ⇔ Front camera ······ Switch between the front and rear cameras.

This setting is only retained during the call.

Change main disp.Change the main display.
The screen changes in the following order:
"Displaying the image from the other party's camera
on your main screen" → "Displaying the image from
your own camera on your main screen" → "Displaying
only the image from the other party's camera" →
"Displaying only the image from your own camera".

Bluetooth/Phone ······ Switch between the FOMA terminal and Bluetooth device (p.378).

Visual check ⇔ Visual check off······View yourself with the front camera during a videophone call. Otherwise, end checking. "

"
" appears and the substitute image is sent to the other party during visual check.

V.phone settings······Set the screen for videophone calls.

Visual prefer. Select Normal/Prefer img qual/Prefer motion spd for an image sent to and received from the other party. This setting is only retained during the call.

Brightness ······ Adjust the brightness between five levels (–2 to 0 to +2).

White balance → p.220 (Shooting menu item)

Color mode set.....Select Normal/Sepia/ Monochrome as an image effect. This setting is only retained during the call.

Photo mode······Select a shooting mode.

→p.220

Cannot be set for the front camera.

Chara-den set. Set the following when Charaden is used. This setting cannot be set for the camera images.

Switch Chara-den, Action List, Change Action → p.317 (Function menu items)

Switch image Display an image selected in "Substitute image" (p.74) on the other party's display.

Display light······Turn on the light all the time or follow the "Lighting" settings under "Backlight".

FrontCamera Rev. Set whether to display your camera image as a mirror image (ON) or normal image (OFF) on your FOMA terminal during a call.

Own number ····· Display your phone number during a videophone call.

Send DTMF tone ⇔ DTMF tone OFF······Set/
Release push signal transmission mode during
Chara-den. Videophone calls other than Chara-den

are always in push signal transmission mode.

Change to voice → p.55

Loc. notification → p.299

If a videophone call is not connected

When a videophone call is not connected, the cause of the failure appears.

- The cause may not appear depending on the situation.
- Depending on the type of the other party's phone or network service subscription, the reason may not accurately reflect the other party's actual status.

	e other party's actual status.
Display	Cause
Check number then redial	The dialed phone number is not in use
Busy	The line is busy This message may also appear during packet communication, depending on the other party's terminal.
Busy with packet transmission	The other party is using packet communication
Out of service area/power off	The other party is out of range or the phone is turned off
Your call is being forwarded	The call is being forwarded (a videophone call is made when the forwarding number is for a 3G-324M-compatible videophone)
Redial using voice call	The forwarding phone is not compatible with videophone
Please activate caller ID before dialing again	The other party has set the Caller ID request service
This number is not available	The other party has set the Nuisance call blocking service
Upper limit has been exceeded Connection failed	The upper limit set for a Limit billing plan (Type Limit or Family Wide Limit) is exceeded
Connection failed	You attempted to connect without notifying your caller ID (when dialing into visualnet, etc.) • This message may also appear in other situations. Set Caller ID Notification to "ON" and retry.
Please make your call from the i-mode web page	You attempted to make a videophone call to watch V-live without browsing the i-mode official site

• If the videophone call is not supported, your call is automatically switched to a voice call when you set "Auto redial as voice" to "ON". However, the videophone may not work properly if you call an ISDN synchronous 64 KB access point, 3G-324Mincompatible ISDN videophone (as of April, 2009) or if you dial a wrong number. Call charges may apply.


Switching a Voice/ Videophone Call during a Call

- You can use this function with terminals compatible with voice call/videophone call switch.
- You can switch calls only when you are the caller.
- To switch calls, the receiver needs to set "Ntfy switch-mode" beforehand. → p.74

<Example: To switch a voice call to a videophone call>



During switching, a screen appears indicating that the calls are being switched, and voice announcement is played.

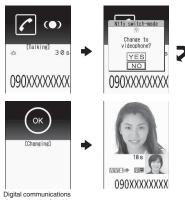

Digital communications charges apply after this screen appears.

- To switch a videophone call to a voice call
- ► Videophone in-call screen (p.52) Ch (FUNC)
- ▶ "Change to voice"

NOTE

 It takes about 5 seconds to switch the calls. Note that the signal quality may affect the switching time.

- You cannot switch calls in the following cases:
 - When the other party is holding the call
 - When the other party activates Record message
- The displayed call duration is reset to 0 second each time the calls are switched. However, the total time of the voice and videophone calls is displayed after the call ends.
- Depending on the other party's communication conditions or signal quality, you may not be able to switch the calls and the call may be disconnected.
- When the call is switched, the first dialed or received call is stored in the Redial/Dialed calls or Received calls.

<When switching from voice call to videophone call>

- If the caller is using i-mode, i-mode is disconnected and the call is switched to videophone.
- If the other party is using packet communication (including i-mode), the message "No Switch" appears and the calls cannot be switched.
- You cannot switch the calls when "Call Waiting" is active.

Making International Calls <WORLD CALL>

WORLD CALL is a service where you can use your DOCOMO mobile phone to call overseas.

You applied for "WORLD CALL" when you started to use FOMA services. (Except if you did not wish to

- You can make a call to approximately 240 countries and regions worldwide.
- "WORLD CALL" charges are billed with your monthly FOMA call charges.
- In addition to directly dialing a phone number, you can make an international call by adding "+" or selecting "Int'l call" or "Prefix numbers" from the function menu of the enter phone number screen or Phonebook/Redial/Dialed calls/Received calls detail screen.
- Services are not available in some billing plans.

For WORLD CALL, call at general inquiries provided on the back of the manual.

International videophone calls are available with users of specific roaming operators overseas or FOMA terminals in Japan.

- See "Mobile Phone User's Guide [International Services]" or the DOCOMO International services website for countries and operators.
- In some types of the other party, international videophone is not available or the other party's picture on FOMA is distorted.

Dialing a phone number to make an international call

Dial the phone number in the following order: 010 → Country code → Area code (City code) → Other party's phone number

Dial the other party's phone number excluding "0" at the beginning of the mobile phone number or area code (city code). However, to call to some countries/areas, such as in Italy, "0" is required. You can also make an international call by dialing the phone number in the following order: 009130→010→Country code→Area code (City code)→Other party's phone number.





The international call is made.

Simple procedures for making international calls

- You can store country codes and international call access codes in "Int'l dial assistance".
- Using "+" to make an international call
- "+" changes to "IDD prefix code" set in "Auto int'l call set.", and you can make an international call without dialing the IDD prefix code.
- Since "Auto int'l call set." under "Int'l dial assistance" is set to "ON" (automatically added) by default, the IDD prefix code is automatically dialed.
 - On the standby screen, dial the following: + ((1 second or longer)) → Country code → Area code (City code) → Other party's phone number

Dial the other party's phone number excluding "0" at the beginning of the mobile phone number or area code (city code). However, to call to some countries/areas, such as in Italy, "0" is required.

apply for it.)





The international call is made

- To make a call with the numbers entered in Step 1
- "Original phone No."


The international call is made.

- To cancel calling
- ▶"Cancel"

Making an international call from the function menu

Open the function menu and add the country code and IDD prefix code to make an international call.

- You can use the international dialing function on the Enter phone number screen or Phonebook/ Received calls/Dialed calls/Redial detail screen.
- <Example: To use the international dial function on the enter phone number screen>

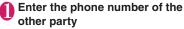



The selected country code and IDD prefix code are added. "0" at the beginning of the mobile phone number or area code (city code) is automatically deleted (except when "Italy" is selected for the country code).





The international call is made.

NOTE

• Even if Caller ID Notification is active, the caller ID may not appear properly depending on the operator. In this case, calls cannot be made from the Received calls screen.

Setting international calls

<Int'l dial assistance>

Set the auto conversion of "+", and edit or store country codes and IDD prefix codes.



MENU ► "Settings/NW Service" ►

"Dialing" "Int'l dial assistance" Select any item:

Auto int'l call set......Set the auto conversion of "+" used when making an international call. ►"ON" Select a country code Select an **IDD Prefix code**

- To disable auto conversion
- "OFF"

Country Code setting Store up to 22 country names and country codes to use when making international calls. See "Country codes of major countries" (p.410) or the DOCOMO International services website for country codes.

► Highlight an item ► (Edit) ► Enter a country name Enter a country code

■ To delete a country code

► ch (FUNC) "Delete" Select a deletion method

IDD Prefix setting Store the IDD prefix name and IDD prefix code to use when making an international call. Up to 3 entries can be added.

- ► Highlight an item to store or edit ► (Edit) ►Enter an IDD prefix name Enter an IDD
- To delete the IDD Prefix

prefix code

► ch (FUNC) Select a deletion method

Using Handsfree During a Call <Handsfree>

The other party's voice comes from the speaker during a call.

In-call screen (p.52), Videophone in-call screen (p.52) ▶ ☐ (♣ 🏗)

" " appears and the other party's voice comes from the speaker during a handsfree call.

While ringing, you can switch to handsfree by pressing ☐ (♣+01 / ♣+0ff).





■ To release handsfree

▶ Press 🖾 (🕪 off) during a handsfree call

" disappears for voice call or PushTalk.

"changes to "for videophone.

Notes on use

It is recommended that you keep a distance of about 30 cm from the FOMA terminal during a handsfree call. If it is too close or too far, the other party may find it difficult to hear you or your voice may sound differently.

NOTE

- Before switching to a handsfree call, move to an area where your call will not disturb other people.
- When a call is finished, the handsfree setting is released.


Making a Call Using Redial/ Dialed Calls/Received Calls

<Redial/Dialed calls/Received calls>

Information on the other party's phone number and the date and time is stored in the Redial/Dialed calls/ Received calls. You can make a call to the other party quickly by using these records.

- When you make calls to the same phone number repeatedly, the latest entry is saved to Redial and separate entries are saved to Dialed calls.
- Up to 30 phone numbers for voice calls, videophone calls, and PushTalk calls can be stored in Redial.
- Up to 30 voice call, videophone call, and PushTalk call entries and 30 packet communication and 64 KB data communication entries can be stored in Dialed calls/Received calls.
- If the maximum number of entries is exceeded, older entries are overwritten.
- Redial/Dialed calls/Received calls of PushTalk
 →n 79

<Example: To make a call from the Redial/Received calls list screen>



■ To check Dialed calls

• "Own data" • "Dialed calls"

2	Redial	
0	6/27 11:37	200
	■ SaburoKeitai	
8	6/26 15:35	33
	∐HanakoKeitai	
	6/25 22:00	â.
	H TaroDocomo	
	6/25 20:05	200
L	■ ShiroDocomo	
6	6/23 20:05	31
L	■ SaburoDocomo	1000
U	6/23 11:45	909
	∄JiroDocomo	
۰		
	Ex. Redial (I	ist)

Function menu⇒p.59

Highlight a Redial/Received calls entry

- To make a call after checking the details of the Redial/Received calls entry
- ► Select a Redial/Received calls entry



Function menu⇒p.59

(voice call), ⊠ (V.phone), (PushTalk)

Checking the number of missed calls

■ To check only missed calls in Received calls

► Own data ► "Received calls"

The total number of received calls, the number of missed calls and the number of unconfirmed missed calls appear.

When you select "Missed calls", only the missed calls appear.

Icons for redial/dialed calls and received calls

Icon*1	Description
APHONE / MISS /	Incoming and Outgoing/Missed/ Unconfirmed missed voice calls
PHONE / MISS /	Incoming and Outgoing/Missed/ Unconfirmed missed international voice calls
EIPHONE / EIMISS /	Incoming and Outgoing/Missed/ Unconfirmed missed videophone calls
EPHONE / EIMISS /	Incoming and Outgoing/Missed/ Unconfirmed missed international videophone calls
/ MISS /	Incoming and Outgoing/Missed/ Unconfirmed missed PushTalk calls (one-to-one communication)
32 / 32MISS /	Incoming and Outgoing/Missed/ Unconfirmed missed PushTalk calls (group communication)
B *2	Incoming and Outgoing calls in B mode of 2in1
■MSG / ■MSG	Record message/Record VP message
₫.	Received calls with Chaku-moji
■ PACKET · ■ PACKET / ■ MISS / ■	Incoming and Outgoing/Missed/ Unconfirmed missed packet communication

Icon*1	Description
[264k / [2 MISS /	Incoming and Outgoing/Missed/ Unconfirmed missed 64K data communication
PENOTE/	Incoming remote monitoring
NO CONNECT	Incoming packet communication or 64K data communication that is received without an external device connected
(L) GMT	Incoming and Outgoing calls when the Time zone is not "GMT+09" regardless of the "Auto time adjust" (p.49) setting (the summer time is displayed when you set the summer time)

^{*1 :} Some icons look different between the detail screen and list screen.

 When using 2in1, up to 30 entries for Number A and for Number B respectively are stored in Redial/ Dialed calls/Received calls regardless of the mode.

<Redial/Dialed calls>

- Activating "Restrict dialing" deletes all Redial/ Dialed calls entries.
- When you make a call by selecting Multi number from the function menu, the registered name and number of the additional number are displayed under the phone number on the Redial screen (detail)/Dialed calls screen (detail). When you make a call without using the function menu, nothing is displayed even when "Set Multi Number" (p.403) is set to additional number.

<Received calls>

- "Callback" appears on the Received calls screen of a voice call for callers who are not stored in the phonebook and stored in Redial.
- When "Missed calls display" under "Ring time (sec.)" is set to "Not display" and you receive a call of which ring tone sounded for a shorter time than the time set in "Set mute seconds", the call is not displayed in Received calls.
- If the caller is using a direct line, a number different from the direct dialing number may be displayed.
- If the same phone number is registered in multiple phonebook entries with different names, the names appear in reading order on the Received calls screen. → p.90
- When you have subscribed to Multi number and make a call from the Received calls screen, the phone call is made from the number that received the call regardless of the "Set Multi Number" (p.403) setting.

NOTE

 When you receive a call for the additional number of Multi number, the registered name of the additional number is displayed under the phone number on the Received calls screen (detail).

Redial/Dialed calls/Received calls screen (p.58) Notify Caller ID*1→p.61 Prefix numbers*1*2→p.62

Chaku-moji*1*2 → p.60 Int'l call*1*2 → p.57

2in1/Multi Num.*1*2······Select Number A/Number B/ Cancel number when 2in1 is set to ON in Dual mode (p.407) (not available when A mode or B mode is set).

(p.407) (not available when A mode or B mode is set). When the 2in1 setting is set OFF, select Basic Number/Additional Number 1/Additional Number 2/ Cancel number (p.403).

Select PushTalk*3*4......"Redial/Dialed calls/ Received calls of PushTalk" → p.79

Ring time*5*6.....Display missed call entries with ringing times.

Add to phonebook → p.88

Look-up phonebook*2······"Accessing the phonebook from Redial, Dialed calls, etc."→p.90

Add desktop icon → p.116

Compose message*2 → p.146

Compose SMS*2*4 → p.176

Search location*2······Access the i-mode site and execute imadoco kantan search using the phone number.

Sent address*7, **Received address***6......Display respective screens.

Select image *2......Select My side/Chara-den for an image used during a videophone call. Select "Release settings" to release the setting.

Big font⇔**Standard font***6······Change the font size of the displayed name.

Delete Select Delete this/Delete selected/Delete all.

- *1: Available only on the detail screen.
- *2 : Not available for PushTalk (group communication) history screen.
- *3 : Available only for PushTalk (group communication) history screen.
- *4 : Available only when 2in1 is in A mode or Dual mode, and a record of A mode is selected.
- *5 : Available only on the Received calls screen.

^{*2:} Displayed only when 2in1 is in Dual mode.

- *6: Available only on the list screen.
- *7 : Available only on the Redial or Dialed calls screen.

- Selecting "Delete all" on the Redial/Dialed calls deletes all Redial and Dialed calls entries. Note that selecting "Delete this" or "Delete selected" for a Redial entry does not delete the entry from Dialed calls, and selecting "Delete this" or "Delete selected" for a Dialed calls entry does not delete the entry from Redial.
- When 2in1 is set to ON, selecting "Delete all" on the Redial/Dialed calls/Received calls screen deletes all Redial/Dialed calls/Received calls entries in A or B mode regardless of the 2in1 mode.

<Compose message>

 Compose mail with a mail address specified as the recipient when the mail address is stored in the phonebook together with the phone number. If multiple mail addresses are stored, the first address is used.

Using Chaku-moji

<Chaku-moii>

When making a voice call or videophone call, send a message (Chaku-moji) to the other party to show a summary of the call, etc. beforehand.

- 5 Chaku-moji messages are stored at the time of purchase. You can change the pre-installed Chakumoji messages.
- You can include pictograms or face marks in Chaku-moji, and you can send a message of up to 10 characters including pictograms/symbols/ double-byte characters/single-byte characters.
- For details on Chaku-moji and the compatible models, refer to the NTT DOCOMO website or "Mobile Phone User's Guide [Network Services]".
- Chaku-moji is not compatible with PushTalk.

Adding, editing and setting messages

● "Settings/NW Service"
"Network service"
"Chaku-moji"
Select any item:

Create message·····Store or edit frequently used Chaku-moji. Up to 30 Chaku-moji messages (including 5 pre-installed) can be stored

- ► Highlight an item to store or edit ► (Edit)
 ► Enter Chaku-moii
- To delete a message

 ch (FUNC) "Delete" Select a deletion method

MSG display settings ····· Select Display all messages/Only number in PH-book/Calls with Caller ID/Hide all messages as the Chaku-moji display setting for an incoming call with Chaku-moji.

3D message display·····Set whether to display Chaku-moji in 3D animation.

NOTE

You cannot delete the pre-installed Chaku-moji.
 Even when you change a pre-installed Chaku-moji and delete the Chaku-moji, it is restored to default.

Making a call with a message

You can add Chaku-moji when making a voice or videophone call from the "Enter phone number" screen and the detail screen of the "Phonebook", "Redial", "Dialed calls" or "Received calls".

<Example: To make a voice call with Chaku-moji from the enter phone number screen>

Enter phone number screen (p.52)

ch (FUNC)▶"Chaku-moji"▶


Select any item:

Create message ······ Enter Chaku-moji. Up to 10 characters can be entered.

Select message ····· Select a stored Chakumoji. You can edit Chaku-moji by pressing
(Edit) on the message selection screen.

Sent messages ····· Select a previously sent Chaku-moji. You can edit Chaku-moji by pressing (Edit) on the sent message screen.

- To delete the entered Chaku-moji (to make a call without Chaku-moji)
- Ch (FUNC) Chaku-moji" Create message" Create message"
- Clear the entered text

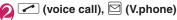



When the other party's terminal receives Chakumoii, "Transmission completed" appears.

- Charges apply to send Chaku-moji. Charges do not apply to receive Chaku-moji.
- Up to 30 sent Chaku-moji can be stored in Sent messages. (Regardless of the modes in the use of 2in1, up to 30 Sent messages are stored in A and B numbers, respectively.) When you send the same Chaku-moji repeatedly, only the latest one is recorded. When the number of entries exceeds the maximum, older entries are overwritten.
- If the receiver's handset is under the following conditions, Chaku-moji cannot be sent. In this case, no sending charges apply.
 - The handset does not support Chaku-moji ("Transmission failed" appears)
 - Chaku-moji does not appear on the receiver display due to the "MSG display settings" on the receiver handset "Transmission failed" appears)
 - Public mode (Driving mode) is set
 - The ringing time for Record message is set to 0 second
 - " 👺 " is displayed or the power is off
- Depending on the signal quality, the transmission result may not appear on the sender terminal even when the receiver terminal receives Chaku-moji.
 In this case, sending charges apply.
- You cannot send or receive Chaku-moji overseas.

When you receive a voice or videophone call with a message

The Chaku-moji appears on the ringing screen. The Chaku-moji disappears when you answer the call.

The received Chakumoji is displayed in 3D animation.



Ex: Voice call

NOTE

- Even when you receive a call whose ring tone sounded for a shorter time than the time set in "Set mute seconds" under "Ring time (sec.)", Chaku-moji is displayed and recorded in Received calls.
- Some pictograms are not displayed in 3D animation.
- Depending on the status of the sender or receiver, Chaku-moji may not be displayed even when you receive a call with Chaku-moji.

NOTE

 When the Original lock is set on "Chaku-moji",
 Chaku-moji is not displayed even if you receive a call with Chaku-moji. You can view the Chaku-moji in Received calls after releasing the lock.

Displaying a message from Received calls

When you receive Chaku-moji, the " " icon appears on the Received calls entry, and you can check the Chaku-moji on the "Received calls" screen (detail).

NOTE

 Even when you make a call using the Received calls entry the Chaku-moii in the entry is not sent.

Showing/Hiding Caller ID When Making a Call

Adding the "186"/"184" prefix to the other party's phone number

To show your caller ID, add the "186" prefix when you dial the phone number. To hide your caller ID, add the "184" prefix.

 Adding the "186" or "184" prefix to phone numbers is not valid when making PushTalk calls.

To show your phone number

186 - (The other party's phone number)

✓ (voice call) or ☑ (V.phone)

To hide your phone number

184 - (The other party's phone number)

✓ (voice call) or
✓ (V.phone)

Showing/Hiding your caller ID from the function menu

Show/Hide your caller ID using the function menu of a detail screen such as "Enter phone number" screen, "Phonebook", "Received calls", "Dialed calls" or "Redial".

<Example: To make a voice call from the Enter phone number screen>





■ To release the "Notify Caller ID" setting

▶"Cancel prefix"

When "Cancel prefix" is selected, the "Caller ID Notification" setting applies.



Sending Touch-tone Signals <Pause dial>

Use services such as ticket ordering or checking bank balances by sending push signals from the FOMA terminal.

Register dialing data used as push signals to Pause dial beforehand, then send the data. Inserting p (pause) into the dialing data allows you to send data with a separation where a pause lies.

- Only a single entry can be saved.
- You can enter characters from 0 to 9, #, X, and p (pause) for dialing data.
- You cannot enter p (pause) in succession or at the beginning of the dialing data.
- "Settings/NW Service" "Dialing" Pause dial"
 - If there is dialing data already stored

The stored dialing data appears. When you send the displayed dialing data as is, go to Step 3.

- To delete a dialing data
- ▶ch (FUNC)▶"Delete"
- - To enter p (pause)

 ★ (1 second or longer)
- (Send) Dial the phone number of the destination

A call is made to the entered phone number and the dialing data up to the first p (pause) is displayed while the dialed phone is ringing. p (pause) is not displayed.

- Each time you press , the dialing data up to p (pause) is transmitted. When the last number is sent, the in-call screen reappears.
 - To transmit all dialing data at once

 □ (1 second or longer) "Send at one time"

 It may not be possible to send all the data at once to some recipients.

NOTE

 Some phones may be unable to receive push signals.

Using the Prefix Function

Store prefix numbers such as IDD Prefix code and 186/184 for showing/hiding your caller ID beforehand and add these prefix numbers when you make calls.

Storing prefix numbers <Prefix setting>

- Up to 7 prefix numbers can be stored.
- You can enter characters from 0 to 9, #,
 [¥] and +.
- "Settings/NW Service"
 "Dialing"
 "Prefix setting"
 - To delete prefix numbers
- ► ch (FUNC) ► Select a deletion method
- Highlight an item to store or change ► (Edit)
- Enter a name
- Enter a number (prefix)
 You can enter up to 10 digits.

Making a call with a prefix number

<Prefix numbers>


- You can add prefix numbers on the "Enter phone number" screen and the detail screen of "Phonebook", "Received calls", "Dialed calls" or "Redial".
- <Example: To make a voice call by adding a prefix number on the enter phone number screen>
- Enter the phone number of the other party
- © (FUNC) Prefix numbers" Select a stored name ✓

Making a Call Specifying a Sub-Address

<Sub-address setting>

Set whether to specify "X" in the phone number as a separator so that the digits following "\(\mathcal{X} \)" are recognized as a sub-address (ON or OFF).

 Sub-addresses are used in ISDN to identify calls made from specific communications devices and to select content in "V-live".

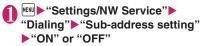


NOTE

- sub-address separator. The number including "X" is recognized as an ordinary phone number.
 - When "X" is entered at the beginning of a phone number
 - When "X" immediately follows "186" or "184" at the beginning of a phone number
 - When "X" immediately follows a number entered using "Prefix numbers"
 - When the phone number contains "¥590#". "#591#" or "#592#"

Setting the Alarm for Reconnection <Reconnect signal>

When the signal quality deteriorates during a voice/ videophone call or PushTalk communication and the call disconnects, the FOMA terminal will automatically reconnect the call if the signal quality quickly improves. Set the type of alarm when a call is reconnected.

 The time required for reconnection varies depending on communication conditions or the signal quality. It takes about 10 seconds.



Select "No tone", "High tone" or "Low tone".

NOTE

 Call charges also apply until reconnected (up to about 10 seconds).

Making the Earpiece Sounds Clear <Hyper Clear Voice>

This function detects ambient noise and makes the other party's voice clear during a voice or videophone call.

- When handsfree is on or an external device such as earphone/microphone (optional) is connected. this function is disabled.
- In-call screen (p.52), Videophone in-call screen (p.52)

Pressing switches the setting in the following order: "High" → "OFF" → "Low".





High.....Activate the function even when quiet. regardless of the ambient noise.

Low Activate the function only when the ambient noise is high.

OFF.....Deactivate the function.

■ To set from the main menu

► "Settings/NW Service" - "Talk" - "Hyper Clear Voice" High", "Low" or "OFF"


NOTE

- This function changes the sound quality or volume. Change the setting if necessary.
- The effect may vary depending on the other party's voice, etc.
- The ambient noise detected via the microphone activates this function. It may be activated by your voice.

Reducing Surrounding Noise to Make Voice Clear

<Noise reduction>

This function suppresses ambient noise and makes it easier for the other party to hear you during a voice/videophone call or PushTalk call.

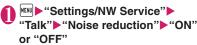

Talking Handsfree While Driving nnc.google.com/n

You can make or receive voice calls with handsfree devices by connecting the FOMA terminal to handsfree devices such as In-Car Hands-Free Kit 01 (optional) or a car navigation system.

For information on how to use the handsfree device, refer to the manual provided with the device. The FOMA In-Car Hands-Free Cable 01 (optional) is required to use the In-Car Hands-Free Kit 01.

NOTE

- To operate from the handsfree device, set the USB mode to "Communication mode"
- The display and ring tones used for incoming calls and mail follow the FOMA terminal settings.
- When the handsfree device is set to emit sounds, the ring tone comes from the handsfree device even when in Manner mode or the Ring volume is set to "Silent".
- When the Public mode (Driving mode) is set, operation for incoming calls and mail follows the "Public mode (Driving mode)" settings.
- When Record message is set, operation for incoming calls follows the "Record message" settings.
- When the FOMA terminal is set to emit sounds, operation when the FOMA terminal is folded during a call follows "Setting when folded". When the handsfree device is set to emit sounds, folding the FOMA terminal does not affect the call status regardless of the "Setting when folded" setting.

Receiving a Voice/ Videophone Call

Receive a voice or videophone call

The ring tone sounds and the illumination flashes.

■ When you receive a call with Chaku-moji The Chaku-moji appears on the ringing screen or videophone ringing screen. → p.61





To put a voice/videophone call on hold while ringing → p.68





- To answer a videophone call with the substitute image
- ▶ (Subst.)
- Operations during a videophone call

You can perform various operations such as changing the camera image to the substitute image and muting sounds during a videophone call. → p.52

- To set Hyper Clear Voice → p.63
- When the other party switches a voice/ videophone call during a call → p.66
- To put the current voice/videophone call on hold → p.68
- To switch between the FOMA terminal and Bluetooth device (p.378)
- (1 second or longer)
- To end the call, press 💳

Display while receiving a call =

■ When the other party's phone number is notified

The other party's phone number appears on the screen. When the caller is stored in the phonebook, the name stored in the phonebook appears (only the name is displayed while Keypad lock is set with "Security code" set to "YES"). → p.86

- If the same phone number is registered in multiple phonebook entries with different names, the first name retrieved by Search reading appears. →p.90
- If the caller is stored as secret data, the name, etc. do not appear but only the phone number appears.
- When you receive a call for the additional number of Multi number, the registered name of the additional number is displayed on the ringing screen.

■ When the other party's phone number is not notified

The reason appears.

■ If Callback appears

"Callback" appears on the ringing screen for callers who are not stored in the phonebook and stored in Redial.



Ringing screen/Videophone ringing screen (p.64)

Call Rejection Terminate the incoming call without answering it.

Call Forwarding · · · · · Forward the call to the forwarding number regardless of the Activate/ Deactivate setting of Call Forwarding.

Voice Mail·····Connect the call to the voice mail service center regardless of the Activate/Deactivate setting of Voice Mail.

Change Display Switch the display from the additional number 1 or 2 to the number from which the call is forwarded. This can be selected when the received multi number call (for additional number 1 or 2) was forwarded.

NOTE

- You can use an earphone/microphone (optional) to receive a call. → p.372
- If you have subscribed to the Call waiting, Voice mail or Call forwarding service and you activate "Set in-call arrival" and set "Arrival Call Act" to "Answer", you will hear a short double beep ("bibip") when you receive a call during a call.
 - If you subscribe to the Voice Mail or Call Forwarding service, you can answer a call after ending the current call.
 - If you subscribe to the Call Waiting service, you can answer a voice call after putting the current call on hold, and you can answer a videophone call after ending the current call.
- You can set the operation for calls from callers not stored in the phonebook. → p.139
- You can set restrictions for each phone number stored in the phonebook. → p.137

<Videophone>


- It may take a few seconds to switch from the camera image to the substitute image (Charaden) depending on the Chara-den.

When the Other Party Switches a Voice/Videophone Call

When you receive a voice/videophone call, the other party can switch between voice call and videophone call.

- The receiver cannot switch the call.
- To switch calls, the receiver needs to set "Ntfy switch-mode" beforehand. → p.74
- You can use this function with terminals compatible with voice call/videophone call switch.


<Example: When the other party switched a voice call to a videophone call>

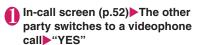

During switching, a screen appears indicating that the calls are being switched, and voice announcement is played.

When a voice call is switched to a videophone call, the camera image is sent to the other party.

- To send substitute image to the other party
- ▶"NO"

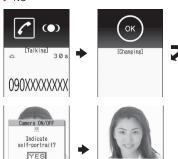

- When switching a videophone call to a voice call
- ➤ Videophone in-call screen (p.52) ➤ The other party switches to a voice call

The videophone call is switched to the voice call.

090XXXXXXXX

Pressing a Dial Key to Answer a Call <Answer setting>

Turn off the ring tone or answer an incoming call quickly.



Any key answer ·····Press any of the following keys to answer voice calls or PushTalk:

✓, ■ (Talk), ○ to ᠑, ※, ⓒ, ☑, ⑤, ⓐ, ② (∀ナー), ۞ (voice calls), ☑ (PushTalk)

* You can answer a videophone call only by normal key operations (✓, ■ (Subst.) or ☑ (V.phone)).

Quick silent ······Stop the ring tone while the caller continues to hear the ringback tone by opening the FOMA terminal or pressing any of the following keys:

O to 9, 来, CLR, む, i, i (マナー) or (voice calls or PushTalk)

To answer the call, press ✓, ■ (Answer/Subst.)

(V.phone), or (PushTalk).

OFF.....Answer a call only by normal key operations.

✓, ■ (Answer/Subst.), ☑ (V.phone),
☑ (PushTalk)


NOTE

- Even when set to "Quick silent", "Any key answer" is active in Manner mode.
- "Any key answer" or "Quick silent" does not work if you press 5 (ECO mode ON/OFF) or 8 (Privacy angle ON/OFF) for 1 second or longer.
- When set to "Any key answer", a voice call is put on hold if (¬¬¬) is pressed with the FOMA terminal folded. The hold tone sounds with "Setting when folded" set to "Tone on", but does not sound when set to "No tone" or "End the call".

Ending/Holding Call by Folding the FOMA Terminal

<Setting when folded>

Set the operation to be performed when the FOMA terminal is folded during a voice or videophone call.



No tone Mute the sound. For videophone calls, "Substitute image" is sent to the other party. The other party does not hear the hold tone.

Tone on.....Put the call on hold (holding). While the terminal is folded, the other party hears the hold tone. For videophone calls, the call hold image is sent to the other party.

> Speaker ON.....Send the hold tone to the other party and also play it through the speaker.

> Speaker OFF Send the hold tone to the other party only.

End the call.....End the call. This is the same operation as pressing -

NOTE

- In Manner mode, no sound comes from the speaker even if set to "Speaker ON".
- When an earphone/microphone (optional) is connected, this function is disabled.
- Even if set to "Tone on", folding the FOMA terminal activates "No tone" when "Call Waiting" is switched on.
- This setting does not work during PushTalk communication. The operation follows "Setting when folded" of the PushTalk settings.

Adjusting Earpiece Volume

On the standby screen (1 second or longer) ► Use (1) to adjust volume

Pressing (1 second or longer) displays the earpiece volume screen. If no operation is performed for 2 seconds or longer while the earpiece volume screen is displayed, earpiece volume adjustment ends.



Adjust the volume between 6 steps from "Level 1" (quietest) to "Level 6" (loudest).

■ To adjust the earpiece volume during a

During a voice call: (1 second or longer) During a videophone call:

• 🏻 (マナー) or 🔻 (🛕) is also available to adjust volume.

NOTE

- The volume setting adjusted during a call is retained after you end the call.
- You can also adjust volume during PushTalk or handsfree call.

Adjusting Ring Volume

<Ring volume>


Adjust the ring tone volume for incoming call, mail, MessageR/F or i-concier information between 6 steps. You can also mute or gradually increase volume.



MENU ► "Settinas/NW Service" ► "Incoming call" "Ring volume" Select an item to adjust the volume

Select "Phone" to adjust ring tone volume for voice calls and 64K data communication. Select "Mail" to adjust the ring tone volume for i-mode mail, Area Mail, SMS and packet communication





■ To increase volume gradually

▶ Press 🗀 at "Level 6"

When set to "Step", the ring volume increases every 3 seconds.

To mute the ring tone

▶Press □ at "Level 1"

The icon on the standby screen indicates which items are set to "Silent".

- ": "Silent" is set for "Phone", "Videophone" and/or "PushTalk"
- S: "Silent" is set for "Mail", "MessageR" and/or "MessageF"
- \$\textstyle \textstyle \textstyle

NOTE

• The ring volume setting specified for "Phone" in this function is also applied to the "Select ring tone" setting for a voice call, and the alarm tones for "Schedule" and "To Do list".

Holding Incoming/Current Calls

<On hold/Holding>

<Example: To put an incoming call on hold>



While ringing -

Three short beeps sound and the call is put on hold. The caller hears an announcement that you cannot answer now, and the call is put on hold.



- To put the current call on hold
- ▶During a call▶CLR
- To end the call during on hold/call hold



Press **to** resume the call

You can also press CLR to resume the held call.

NOTE

 Call charges apply while an incoming call or current call is put on hold.

Setting the hold tone

<Hold tone setting>

Set the announcement to be played to the caller during on hold.

You cannot change the hold tone played during a



Select "Tone 1", "Tone 2", "Voice announce 1*" or "Voice announce 2*".

*: Not available when no voice announcement is recorded.

Using Public Mode

Public mode (Driving mode/Power OFF) is an automatic answering service provided for public places and circumstances in which mobile phones should not be used.

- When Public mode and network services are set concurrently, Voice Mail service*1, Call Forwarding service*1 and Caller ID Request service*2 take precedence over Public mode.
 - *1 : For a voice call whose ring time is not "0 second", a service activates after the Public mode announcement is played.
 - *2: When the caller notifies the caller ID, Public mode
- Public mode does not work for a call from a phone number registered for Nuisance Call Blocking.

Using Public Mode (Driving Mode)

<Public mode (Driving mode)>

When Public mode is set, a caller hears a message that you cannot answer the call because you are driving or in a place where you have to refrain from using a mobile phone (on a train or bus, in a theater, etc.), then the call ends.

- Public mode can only be set or released from the standby screen (can also be set or released when " w is displayed.).
- You can make calls when Public mode is set.
- This function is not available during data communication.
- When you receive a call with no caller ID while Caller ID Request service is set to "Activate", the caller ID request announcement is played (Public mode announcement is not played.)

On the standby screen► ★ (1 second or longer)

Public mode is set and " <a> " appears.

When you receive a call, the caller hears the



announcement "The person you are calling is currently driving or in an area where cellphones should not be used. Please try again later."

■ To release Public mode (Driving mode)

On the standby screen

★ (1 second or longer)

Public mode is released and " " disappears.

NOTE

- The Public mode setting takes priority even when "Record message" is "ON".
- The Public mode setting takes priority when Manner mode is set at the same time.
- If you make an emergency call using a voice call (110, 119 or 118) while Public mode is set, Public mode is released.
- The following tones do not sound in Public mode:
- Ring tone for voice call/videophone/PushTalk
- · Ring tone for mail and message
- · Various alarm tones
- · Wake-up tone
- · Open-Close sound
- · Charge sound
- Software tone for i-αppli
- Ring tone for packet communication/64K data communication
- · Search request notification tone for GPS

When Public mode (Driving mode) is set

The ring tone does not sound when a voice call, videophone call or PushTalk call arrives. Calls are logged as "Missed calls" in "Received calls", and the "Missed call" desktop icon appears on the standby screen.

- A voice caller hears a message that you cannot answer the call because you are driving or in the place where you have to refrain from using a mobile phone, and then the call ends.
- A videophone caller sees the Public mode video message on his or her display, and then the call ends.
- An incoming PushTalk call is not answered. A PushTalk caller sees the "Connection failed" message on his or her display. In a conversation between three or more people, the participating members will know that you are driving.
- When you receive mail, the ring tone does not sound and the "New mail" desktop icon appears on the standby screen.

NOTE

 If the power is off or " " is displayed, the announcement for " " is played instead of the Public mode message even when Public mode is set. However, in case of PushTalk, "Disconnected" appears on the members' displays.

Using Public Mode (Power OFF)

<Public mode (Power OFF)>

When Public mode (Power OFF) is set, a caller who made a call while the power is off hears a message that you cannot answer the call because you are in a place where you have to turn off the mobile phone (in a hospital, on an airplane, around a priority seat on a train, etc.), then the call ends.

On the standby screen

Public mode (Power OFF) is set (Nothing changes on the standby screen). When you receive a call after setting Public mode (Power OFF) and turning off the power, the caller hears the announcement "The person you are calling is currently in an area where use is prohibited. Please try again later."

■ To release Public mode (Power OFF)

On the standby screen

* 2 5 2 5 0

■ To check the Public mode (Power OFF) setting

On the standby screen

* 2 5 2 5 9

When Public mode (Power OFF) is set

The setting is valid until "#25250" is dialed to release Public mode (Power OFF). The setting is not released by simply turning on the power.


The Public mode (Power OFF) announcement is played even when you are out of service area or where the reception is very poor.

- A voice caller hears a message that you cannot answer the call because you are in a place where you have to turn off the mobile phone, and then the call ends.
- A videophone caller sees the Public mode (Power OFF) video message on his or her display, and then the call ends.
- An incoming PushTalk call is not answered. A PushTalk caller sees the "Connection failed" message on his or her display. In a conversation between 3 or more people, the participating members will know that you are not participating.

When You Cannot Answer an Incoming Call <a h

When you could not answer an incoming call, appears on the standby screen. When you select you can check the date, time and caller's name of the call

"Desktop icons providing information" → p.116



The "Missed call list" screen appears.

To check information with the FOMA terminal folded

When there is a missed call or new mail (i-mode mail, Area Mail, SMS), the incoming call lamp keeps flashing. Press $\boxed{()}$ (\bigcirc) to sound the short tone.

Press (a) with the FOMA terminal folded

A short tone notifies you of the information in accordance with "Info notice setting".

Flashing of the Incoming call lamp

When there is a missed call, new mail or other information, the incoming call lamp keeps flashing in the respective color set in "Illumination".

- Phone/Videophone: Color set for "Phone"
- New mail: Color set for "Mail"

Flashing colors and conditions

- The lamp does not flash when "Missed info" under "Illumination" is set to "OFF".
- When "Gradation" under "Illumination" is set, the lamp flashes in the default color.
- You can configure individual illumination settings in the phonebook. → p.93
- The lamp does not flash in Public mode (Driving mode).

■ To turn off the lamp

 Select the icon for "Missed call" or "New mail" on the display to check information, or press
 CLR (1 second or longer).

Setting the notification method for missed calls https://www.nfc.notice.com/nfc.notice.com/

Set the notification method to be performed when $\boxed{}$ (\bigcirc) is pressed with the FOMA terminal folded.

- The setting items and notification methods using

 √ (♠) are as follows:
- The "ポイス" (Voice) option is available in Japanese mode, which reads out the information of incoming calls and messages (voice monitor), or the current time (voice clock).
- When there is a missed call, new mail, etc.

Setting item	Tone and vibration*1	Illumination
ON	The "Pipip, pipip" tone plays.	The incoming call lamp lights for about 6 seconds in the color set for "Illumination". If there are different types of information such as call and mail, the lamp changes to each of the corresponding color at 1-second intervals. "2

When there is no missed call, new mail, etc.

Setting item	Tone and vibration*1	Illumination
ON	The "pipipip" tone plays.	The lamp flashes in "Color 12" for about 6 seconds.

- *1 : Vibration works when "Phone" of "Vibrator" is not set to "OFF".
- *2: When the color of "Illumination" is set to "Gradation", the lamp flashes in the default color.



NOTE

- This function alerts you using a "YES" indication when a desktop icon such as "Missed call" or "New mail" is displayed on the standby screen.
 →p.116
- You cannot use (a) to check for missed calls or new mail in the following cases:
 - When Side key guard is set to "ON"
 - When playing music with Music Player/ Music&Video Channel
- The volume is determined by "Phone" under "Ring volume" (Played at "Level 2" when set to "Silent" or "Step").
- Opening the FOMA terminal during notification stops the notification.

Recording Voice/Video Messages When You Cannot Answer the Call <Record message>

Have the caller leave a message on your FOMA terminal when you cannot answer a voice or videophone call.

 Each message can be up to 20 seconds long, and 5 messages can be recorded for voice calls and 2 messages can be recorded for videophone calls.

Setting Record message



ON······Select Japanese 1/Japanese 2/English/ Voice announce 1*/Voice announce 2*.

OFF.....Release the Record message setting.

*: Not available when no voice announcement is recorded.

Enter the ringing time (000 to 120 seconds in 3 digits)

Record message is set, and "" and "" and "" appear on the standby screen.

NOTE

- To give priority to the "Record message" function when "Voice Mail", "Call Forwarding" and "Record message" are set simultaneously, set the ringing time of Record message shorter than that of Voice Mail and Call Forwarding.
- If the mute time set for "Ring time (sec.)" is longer than the ringing time set for Record message, Record message activates without ringing. To activate Record message after ringing, set the Record message ringing time longer than the mute time.
- You can use "Ring tone/Image" (individual) to set an answer message for each phone number and "Ring tone/Image" (group) to set an answer message for each group.

When "Record message" is set to "ON" and you receive a call

Record message activates when the set time has elapsed.

- The voice caller hears the answer message, and recording starts.
- To a videophone caller, the "伝言メモ準備中 Preparing" image is sent, the answer message is played, the "伝言メモ録画中 Recording" image is sent, then recording starts.

■ When message recording starts

- The recording screen appears. The caller's voice can be heard through the FOMA terminal earpiece during recording.
- To answer a voice call during recording



■ To answer a videophone call during recording

▶Press to answer with the camera image or (Subst.) to answer with the substitute image



Ex. Voice call

■When message recording ends

The previous screen reappears and the "Missed call" desktop icon and "Record message"/ "Record VP message" desktop icon appear on the standby screen. You can check the content by selecting one of the desktop icons. —p.72



- The number of recordings is indicated by icons in the icon display area at the top of the screen.
 - 3 3 : Record message (the number indicates the number of messages)
 - | Record VP message (the number indicates the number of messages)
 - * When Auto voice memo is set to ON, the following icons appear but the number of messages does not:
 - : Record message
 - : Record message and Auto voice memo

NOTE

- When Manner mode is set, you cannot hear the caller's voice during recording.
- You cannot answer another call during recording.

Recording a Message When You Cannot Answer Incoming call

<Quick message>

Even when "Record message" is not set to "ON", you can record a message while receiving a call by pressing a key.



While ringing ▶ ▼ (🛕)

- To set Manner mode when recording starts
- ►While ringing #

NOTE

- You cannot set "Record message" to "ON" with this operation.
- When the messages are full and you receive a voice or videophone call, Record message does not activate and the FOMA terminal keeps on ringing (when # is pressed, the ringing continues in accordance with the "Manner mode set" setting).

Playing/Deleting Record Messages/Voice Memos/ **Moving Picture Memos**

- When there is an unplayed recorded message, " !!" (Record message) or " !!!" (Record VP message) appears on the standby screen.
- <Example: To check an unplayed recorded message>



On the standby screen▶■▶ Select " (Record message) or "" (Record VP message)

- "* appears for items recorded.
- To play a message with a menu operation
- ► MENU ► "LifeKit" ► "Plav/Erase msg." or "Play/Erase VP msq."

Play/Erase msg. TRecord message1 ■Record message2 ElRecord message3 ERecord message4 ■Record message5 ☑Voice memo MAuto voice memo1 □Auto voice memo2 Play/Erase msg.

- To erase a recorded message or voice
- ▶ ch (FUNC) Select a erasing method

Select an item to play

<Record message/Voice memo/Auto voice memo>

A beep sounds and playback starts. When the playback ends, two short beeps sound and the "Play/Erase msg." screen reappears. You can also play a message by pressing

(a) on the standby screen with the FOMA terminal folded.

To play the next message while playing a message

▶▼ (**1**

Each time you press (a), the messages are played in the following order: Record message → Voice memo → Auto voice memo.

- To stop playback
- ▶ (Stop) or CLR

The "Play/Erase msg." screen reappears.

<Record VP message>

Playback starts. When the playback ends, the "Play/Erase VP msg." screen reappears.

- To play another message while playing a message
- To adjust volume while playing a message
- To switch the speaker on/off while playing a message
- ▶ ch (FUNC) Speaker ON" or "Speaker OFF"
- To pause playback
- ▶ (Stop)

To resume playback, press (Play)

- To stop playback
- CLR

The "Play/Erase VP msg." screen reappears.

- To make a voice call, videophone call, or PushTalk call to the displayed phone number during playback
- Voice call*1), ☐ (V.phone), ☐ (PushTalk*2)
- *1: The "Phone number entry" screen (p.52) appears. For subsequent steps, refer to "Making a Voice/Videophone call" (p.52).
- *2: Only one-to-one communication is possible.
- To erase a message being played ▶ ch (FUNC)▶"Erase"▶"YES"

NOTE

When 2in1 is in A mode or B mode, "** " does not appear for a recorded message of the unused phone number. To play the memo, change the mode or set it to Dual mode.

Using Chara-den


Send a cartoon character instead of your own image when you make a videophone call. "Chara-den"

→n 317

 You can display your favorite Chara-den if you set "Substitute image" under "Select image" to "Charaden" beforehand.

You can also use Chara-den by setting Chara-den in a phonebook entry or as Ring tone/Image.

- To switch from the camera image to Chara-den during a videophone call, select "Substitute image" from the function menu.
- When you receive a videophone call, press (Subst.)
- Control your character by pressing dial keys



Pressing a dial key makes the character perform the action assigned to the key.

"Using Chara-den characters" → p.317

Setting Videophone Functions

● "Settings/NW Service" "Videophone"



Videophone settings

Select any item:

Visual preference······Select Normal/Prefer img qual/Prefer motion spd.

Select image → p.74

Auto redial as voice Set whether to switch to a voice call when a videophone call cannot be made (ON or OFF).

Remote monitoring → p.76

Display setting.....Set an image to display on the main display or how to display your own camera image.

Main display.....Select Other side/My side as an image to display on the main display.

Front camera Reverse Set whether to display your camera image as a mirror image (ON) or normal image (OFF) on your FOMA terminal.

Ntfy switch-mode → p.74

Hands-free switch·····Set whether to switch to handsfree automatically when starting a videophone call (ON or OFF).

V.phone while packet → p.74

Setting an image to send during videophone calls <Select image>

Set an image to send instead of the camera image.

 You can set a JPEG image whose file size is 100 KB or less and not larger than 854 dots wide × 854 dots high, or a GIF image whose file size is 100 KB or less and not larger than 854 dots wide × 480 dots high or 480 dots wide × 854 dots high (except file-restricted images).



Videophone settings screen (p.73) "Select image" Select any item:

On hold, Holding, Substitute image, Record message, Preparing, Voice memo



Select an image to send

Pre-installed ····· Send only a message.

Original ····· Send an image and message. To change the image, select "Change setting" from the function menu then select an image from My picture.

Chara-den*.....Send the image selected as "Substitute image".

Function menu of the "Chara-den list" screen →p.317

Chara-den priority → p.87

To change the Chara-den, select Change setting from the function menu then select Chara-den from the Chara-den list.

*: Available only when "Substitute image" is selected.

Setting switch between a voice call and videophone call <Ntfy switch-mode>

Set whether to let the other party know that your FOMA terminal supports switching between a voice call and videophone call.

- Calls cannot be switched when set to "Indication" OFF".
- You cannot set this function during a call/when you are out of range.



Videophone settings screen (p.73) "Ntfy switch-mode" Select any item:

Indication ON, Indication OFF Activate/ Deactivate Ntfv switch-mode.

Check Indication Display the "Ntfy switchmode" setting status.

Setting the answer mode for a videophone call incoming during i-mode <V.phone while packet>

 As the multi access function cannot be used for videophone, incoming videophone calls during i-mode communication or while sending or receiving mail are handled according to this setting. → p.446



Videophone settings screen (p.73) "V.phone while packet" Select anv item:

V.phone priority Switch to the videophone ringing screen. When you answer the incoming videophone call, i-mode communication is disconnected.

Packet downld priority Reject the incoming videophone call.

V.phone answerphone Connect the call to the Voice Mail service center if you have subscribed to the Voice Mail service regardless of the Activate/Deactivate setting of Voice Mail. If you have not subscribed to this service, "Packet downld priority" applies.

Call forwarding......Forward the call to the forwarding number if you have subscribed to the Call Forwarding service, regardless of the Activate/Deactivate setting of Call Forwarding. If you have not set a forwarding number or subscribed to this service, "Packet downld priority" applies.

NOTE

<Visual preference>

 If the signal quality deteriorates during a videophone call, the image may become grainy or patchy regardless of the settings in "Visual preference".

<Select image>

- If you delete the original still image, the "Preinstalled" image is displayed (sent).
- When the Chara-den character set as the substitute image is deleted and the "Chara-den" substitute image cannot be displayed, the preinstalled "ビーンズ (Beans)" is sent. If you delete the pre-installed "ビーンズ (Beans)", the "Preinstalled" substitute still image is sent.

NOTE

<Auto redial as voice>

- When a videophone call is switched and redialed as a voice call, not digital communications charges but voice call charges apply.
- When a call is redialed, only the voice call is logged in "Redial"/"Dialed calls".
- Even if "Auto redial as voice" is set to "ON", dialing may not be possible depending on the network or other party, e.g. the line is busy.

<Hands-free switch>

- Even when "Hands-free switch" is set to "ON", handsfree does not activate automatically in the following cases:
 - · While Manner mode is set
 - When an earphone/microphone (optional) is connected (the microphone operation is in accordance with "Headset mic. setting")
 - When holding a call or Record message is activated for an incoming call


<V.phone while packet>

- Even when "V.phone priority" is set, you cannot answer a videophone call if you are using multi access such as i-mode communication during a voice call.
- When set to "Packet downld priority", "V.phone answerphone" or "Call forwarding", received videophone calls are recorded as "Missed calls" in "Received calls"
- Even when set to "V.phone priority" or "Packet downld priority", the "Voice Mail" or "Call Forwarding" service is activated if the ring time for the "Voice Mail" or "Call Forwarding" service is set to 0 second.

Enlarging an image to be sent

Enlarge your image and send it to the other party during a videophone call.

- The zoom can be adjusted between 2 steps, 1x and approximately 2x. If you end the videophone call, the zoom ratio returns to 1x (standard).
- The substitute image being sent cannot be enlarged.



Decorate your videophone call screen (your camera image) with a stamp and frame.



Frame······Select a frame from the Frame selection screen.

Stamp······Select a stamp from the Stamp selection screen and decide the paste position.

■ To erase a frame or stamp

Select "Off decoration" from the function menu of the videophone in-call screen.

NOTE

 If "Front camera Reverse" is set to "OFF" for your camera image, the decoration is displayed normally, and a stamp with text can be read correctly.

Sending a message during a videophone call (sending camera image) <Petit message



Videophone in-call screen (p.52) □ch (FUNC) Petit message" Enter a message

The message is displayed. The message disappears automatically in approximately 15 seconds.

- To cancel entering a message in text entry
- ► Erase the message CLR
- To erase the message manually after it is displayed
- ▶ CLR (1 second or longer)

You can also erase a message by selecting "Off decoration" from the function menu.

NOTE

 If "Front camera Reverse" is set to "OFF" for your camera image, the decoration is displayed normally, and text can be read correctly.

Using Videophone Call by Interfacing to External Device

You can make or receive videophone calls from external devices such as a PC by connecting the FOMA terminal to the device using the FOMA USB Cable with Charge Function 02 (Optional).

To use this function, you have to install a videophone application on the dedicated external device or PC and prepare commercially available devices such as an earphone/microphone and USB compatible Web camera

- Set USB mode to "Communication mode". No specific settings are required to connect external devices.
- For details on the operating environment, settings, operating procedure of the videophone application, refer to the manuals supplied with the external devices.
- "ドコモテレビ電話ソフト" (DOCOMO Videophone Software) (Japanese) is compatible with this function.

Download the software from the NTT DOCOMO website (Japanese).

NOTE

- You cannot make a videophone call from the external device during a voice call.
- When you have subscribed to Call Waiting, Voice Mail or Call Forwarding and you receive a videophone call from an external device during a voice call, you can answer the call after ending the current call. When you receive a voice call, videophone call or 64K data communication during a videophone call from the external device, you can answer the call in the same way.

Checking Inside Room When You Are Out Remote monitoring

Remote monitoring is only available between FOMA terminals or between a FOMA terminal and a phone equipped with a 3G-324M-compatible videophone function. The FOMA terminal can be used as the dialing or receiving phone for remote monitoring.

Preparing the receiving phone

Set the phone number of the dialing phone (Other ID) and the delay until remote monitoring begins (Ringing time) on the phone performing remote monitoring (receiving phone).

• Up to 5 other IDs can be stored.

Videophone settings screen (p.73)

▶"Remote monitoring" ►Enter
your security code ➤ "Other ID"



12:05

- Highlight an item to be stored or changed Enter the phone
- changed Enter the phone number to accept monitoring
- Press CLR to return to the remote monitoring screen
- "Ringing time" Enter ring time (003 to 120 seconds in 3 digits)
 The ringing time is set.
- G "Set"▶"ON"
 - "j" or "w" appears on the standby screen.
 - To turn remote monitoring off
 - ▶"OFF"

Position the FOMA terminal

During remote monitoring, the image captured with the front camera is sent to the dialing phone. Place the receiving FOMA terminal in the monitoring position, and make sure it is switched on and open.

If the FOMA terminal is left open, only the voice is sent and the camera image is not sent. The substitute image is sent with "カメラオフ Camera Off" displayed on the image.



NOTE

- When positioning the FOMA terminal, set "Videophone" under "Vibrator" to "OFF" to prevent the FOMA terminal from moving when calls are received.
- If the ringing time set for "Voice Mail" and "Call Forwarding" on the receiver side is shorter than the ringing time set for remote monitoring, "Voice Mail Service" and "Call forwarding" take priority.

FUNC Other ID screen (p.76)

Look-up address ······Look up an address in Phonebook, Dialed calls or Received calls, and enter the address

Delete this, Delete all......If all IDs are deleted, the "Set" setting is set to "OFF".

Starting/Ending remote monitoring

 To perform remote monitoring, make a videophone call with caller ID (phone number) notified from the FOMA terminal registered as the other ID on the receiving phone.

Make a videophone call to the receiving phone

After the ringing time set on the receiving phone has elapsed, remote monitoring

The video image from the receiving phone is displayed and sound comes from the speaker on the dialing phone.



To answer a videophone call on the receiving phone without accepting remote monitoring

▶ Press before the ringing time elapses To answer with a substitute image, press (Subst.).



To end the call, press



The call duration is displayed and remote monitoring ends. You can also end remote monitoring by pressing - on the receiving phone.

NOTE

- A call can be received as a remote monitoring call even when Dial lock or Omakase Lock is set.
- Remote monitoring is not available when the following functions are set:
 - Public mode (Driving mode)
 - Manner mode
 - · Call rejection/acceptation*
 - · Reject unknown*
 - *: When "Call acceptation" is set for a phone number other than the other ID phone number or "Call rejection" is set for the other ID phone number, or when "Reject unknown" is set and the other ID phone number is not stored in the phonebook

- The specific ring tone is used for remote monitoring and cannot be changed.
- The ring tone is played at the volume set in "Videophone" under "Ring volume" (if set to "Silent", "Level 1" or "Step", the volume will be "Level 2").
- You cannot put a call on hold when a remote monitoring call arrives. Press - to end the call.
- You cannot switch cameras from the receiver during remote monitoring.



Please be considerate of the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones. Improper use of the FOMA terminal in ways that constitute a serious public nuisance may be punishable under laws or ordinances intended to prevent such behavior (privacy protection laws, etc.).

PushTalk

PushTalk is an all-new communications service that allows a group of up to five people to talk to each other at once. Press the PushTalk key to talk.

- * PushTalk communications charges apply each time you press the key (talk).
- For details on PushTalk and compatible models, refer to the NTT DOCOMO website or "Mobile Phone User's Guide [Network Services]".

PushTalkPlus

view of the status of members.

* A separate subscription is required PushTalkPlus is a PushTalk communications service that allows a group of up to 20 people to talk to each other at once. This service enhances PushTalk by providing a shared phonebook on the network, or a

• For details about operations, refer to the brochure you received at subscription.

Making a PushTalk Call

<PushTalk dial>

PushTalk talking

Speaker

090XXXXXXXX

Joined number 1/1


PushTalk talking screen



- · When the other party answers the call, a tone beeps, and the "PushTalk talking" screen appears.
- · The other party's voice comes from the speaker.
- To talk with more than one party

Make a call using the

PushTalk phonebook. → p.82





You can set "Hands-free setting" (p.84) to not answer calls using handsfree.



Hold down while you talk

- · When you obtain the right to speak, a tone beeps, and you can speak.
- · While another party is talking, you cannot obtain the right and an error tone sounds.
- When F is released, a tone sounds, and another member can speak.
- When an earphone/microphone (optional) is connected, you can speak by holding down the switch of the earphone/microphone.
- When a member leaves a PushTalk conversation. (ends the call), a tone sounds.

Adding members

Even after a PushTalk call has started, you can still call and add members. → p.80



🔁 To end the call, press 💳 Other parties hear the tone.

■ To reioin a PushTalk call

Even if you end a call, you can rejoin the call if other parties continue the call. → p.79

NOTE

∠Dial>

 You can also make PushTalk calls using the regular phonebook, Redial/Dialed calls/Received calls, or Phone To.

"Redial/Dialed calls/Received calls of PushTalk"

- The Caller ID setting for PushTalk calls is in accord with the "Caller ID Notification" (p.50) setting.
- When "Set Caller ID" is set to "ON" and a call is made, each member who receives the call is notified of all the other members' phone numbers. When set to "OFF", "User unset" appears on the PushTalk talking screen of all members who received the call.

- A PushTalk call cannot be made during a voice call, videophone call, or data communication.
- If a PushTalk call is made during i-mode, the i-mode communication is disconnected. Also, if a PushTalk call is made while i-αppli is running, the i-αppli stops.
- When a videophone or another PushTalk call, or 64K data communication arrives during a PushTalk call, the new call is recorded in Received calls, and the current PushTalk call remains connected.
- Speaking time is limited with each right to speak. When the time draws to an end, the speech right release notice tone sounds and a message appears indicating that the duration is almost over. When the duration is over, the speech right will end.
- If the PushTalk button is not pressed by any member of the group (if nobody speaks) for a given time, the connection is automatically cut.
- The speaker will bear PushTalk communications charges when the speaker presses and a tone beeps (charges apply every time he/she obtains the right to speak).
- Emergency calls (110, 119 and 118) cannot be made using PushTalk.
- The Outgoing number selection screen appears when the 2in1 is in Dual mode. Select "Number A".
- PushTalk calls cannot be made when 2in1 is in B mode

- When "Setting when folded" (p.84) under PushTalk setting is set to "End the call", you can end a PushTalk call by folding the FOMA terminal during the PushTalk call. However, when the earphone/microphone is connected, the call continues.
- Pressing the switch of the earphone/microphone does not end a PushTalk call even if the earphone/microphone is connected.

Guide to the PushTalk talking screen



- ①Current speaker's name*1
 - ("Myself" appears when you are speaking, and "?" appears for an unknown speaker)
- ② Name of the group specified when the call was made
- (Nothing appears if no group was specified)
- 3 Members' names (excluding you)*1
- 4 Status of members*2

The party is being paged
The party has joined the PushTalk call
The party's phone does not support PushTalk
The party's terminal is out of range or turned off.
The party is in a voice/ videophone/PushTalk call
You made a call to the party who uses the "Caller ID Request" service without your caller ID.
Public mode (Driving mode) is active on the party's terminal.
The party's terminal has been set to Public mode (Power OFF) and is out of range or turned off.
The party who has given the priority to i-mode under "Set i-mode arrival act" is doing i-mode communication.
You made a call to the number currently unused
The party is in the status other than above, e.g. the party does not answer the call, ended the call or does not use a DOCOMO mobile phone.

- ⑤ Number of participants (excluding you)
- 6 Elapsed time since the talk started
- (7) Handsfree is on

- *1: When the caller has set "Caller ID Notification" (p.50) or "Set Caller ID" (p.83) to "ON", the name stored in the phonebook appears. If the caller is not stored in the phonebook, the phone number appears. Also, when the caller has set "Notify Caller ID" or "Caller ID Notification" to "OFF", "User unset" appears for names of all members.
- *2 : Statuses of members other than "Calling" and "Join" appear only when three or more people are participating.

Joining an ongoing PushTalk call

Perform the following steps to rejoin an ongoing PushTalk call or join after you answered with "Disconnected" when the call arrived:

<Example: To join using "Redial">

Redial screen (p.58)▶Highlight a PushTalk call▶₽

If the PushTalk call is still connected, the "PushTalk talking" screen appears.

PushTalk Redial/Dialed calls/Received calls

- One-to-one PushTalk calls and group calls are recorded separately in PushTalk Redial/Dialed calls/Received calls.
- A group call is recorded as a single entry in Redial/ Dialed calls/Received calls.
- The following are available using a record in each Call history:

Item	One-to-one call history (such as or MISS)	Group call history (such as or AMISS)
Make a one-to- one PushTalk call	0	<u></u> ^*1
Make a PushTalk call to more than one party	×	O*2
Make a voice call/ videophone call	0	×
Add to the FOMA terminal phonebook	0	0

- *1 : To make a one-to-one PushTalk call, select "Select PushTalk" from the function menu of Redial/Dialed calls/Received calls, and select a single party.
- *2 : A call can be made to the same group, or to a selected party in the group.

NOTE

 A Redial record of a group call will be updated only when a call is made by selecting the same parties from Radial/Dialed Calls. If at least a single party is different, the call is recorded as a different Redial entry.

Adding a Member during a PushTalk Call

Call and add a new member to the current PushTalk call.

• Only the original caller can invite a new member.



Phonebook.....Select a phone number from a phonebook entry stored in the FOMA terminal or FOMA card (UIM).

PushTalk phonebook ····· Select members from the PushTalk phonebook. You can also open the group list and select group members. "Making a Call Using PushTalk Phonebook" → p.82

Redial/Received calls·····Select an entry from Radial or Received calls.

■ To select an additional member from the group PushTalk call history

In the History list Select an entry from group calls (Select) Use to select the checkbox (□) (Finish)

Direct input·····Enter a phone number.





A PushTalk call is made to the added party. After the call is made, the party is added to the list of participants on the "PushTalk talking" screen.



NOTE

 Up to five parties including the caller can participate in the call. New parties can be added repeatedly until four parties are called. When four parties have already been called, you can call a party that did not join the call, but a new party cannot be added.

NOTE

- A new member cannot be added while a PushTalk call is in progress with five participants. Even if a participant leaves the PushTalk call, a new party cannot be added.
- The added party will not be recorded in Redial/ Dialed calls of the caller or in Received calls of the receiver.
- A party using a terminal that is not capable of adding participants can be added. The added member does not appear on a terminal that is not capable of adding participants, and the beep does not sound. Also, a caller using a terminal that is not capable of adding participants cannot add participants.
- When 2in1 is in Dual mode, when a member is added using "Direct input", the Outgoing number selection screen appears. Select "Number A".

Receiving a PushTalk Call

<PushTalk call>

Answer an incoming PushTalk call and join the PushTalk.

- When a PushTalk call arrives, the ring tone sounds, the incoming call lamp flashes, and the "PushTalk call" screen appears.
- The names of the caller and other participants who are being paged (for a group call) appear on the "PushTalk call" screen.



While a PushTalk call is being received ▶ ₽

You can also answer the call with
or

(Answer).

When you answer the call, the tone beeps, and the "PushTalk talking" screen appears.

- When an earphone/microphone (optional) is connected, you can answer PushTalk by pressing the switch of the earphone/microphone.
- To not respond (respond with "Disconnected")
- ►While a call is being received, press Even if you answer an incoming call with "Disconnected", you can join the call later if other participants are still continuing the PushTalk call. →p.79
- To automatically answer PushTalk calls Select "ON" in "Auto answer setting" (p.84) under PushTalk settings.



Join the PushTalk call

Go to Step 2 in "Making a PushTalk Call" (p.78)

NOTE

- Pressing ▼ (♠) or # while a call is being received does not activate "Quick message" but disconnects the call. "Disconnected" appears on the other party's terminal.
- When the Public mode (Driving mode) is active, the ring tone does not sound and the incoming call lamp does not flash. For a group call, "Driving" appears on the terminals of the other parties.
- You can answer a call using handsfree by pressing when the FOMA terminal is folded.
- Pressing while a call is being received does not activate "On hold" but disconnects the call. "Disconnected" appears on the other party's terminal.
- If a call arrives from a phone number specified in "Call rejection" or "Reject unknown", the call is answered with "Disconnected". However, the call is answered with "ID Request" when the Caller ID request service is set.
- The members who joined an ongoing PushTalk call appear on the "PushTalk talking" screen, but they are not recorded in "Group call history ()".
- If a PushTalk call arrives during a voice call, videophone call, another PushTalk call, or data communication, the PushTalk call cannot be answered. However, when the call arrives during a voice call or another PushTalk call, the call is recorded in Missed calls.
- When a PushTalk call arrives during i-mode, the "Set i-mode arrival act" settings apply. → p.199

Adding Entries to PushTalk Phonebook <Add to PushTalk>

Add members to the PushTalk phonebook using the FOMA terminal phonebook data (such as phone number).

• Up to 1,000 members can be added.



On the standby screen

The "PushTalk phonebook" screen (p.82) appears.




Search the phonebook

Searching the phonebook → p.90

■ To enter directly

► Mew (New) "Direct input" ► Add the phonebook entry

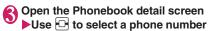

A screen appears asking whether to add to the PushTalk phonebook.

- To add from the Phonebook entry list screen
- ► Highlight a phonebook entry ► (Finish) If the Phonebook entry contains more than one phone number, the phone number saved at the top will be added to the PushTalk phonebook.



"YES"

A new member is added to the member list.

If a phone number has been already saved to the same memory number as you selected

A message appears asking whether to overwrite. Select "YES" to overwrite.

NOTE

- The entries in the Member list appear as follows:
 - · When a new member is added to the member list or added to a group, the new member appears at the top.
 - The PushTalk phonebook screen retains the last
- The PushTalk phonebook is not available when 2in1 is in B mode.

Adding entries to a group

You can create a "Group" in a PushTalk phonebook entry to categorize members.

Creating a group

Up to 10 groups can be created.

PushTalk phonebook screen (p.82) ch (FUNC) "Group setting" Compose group"

Enter a group name

The new group name is added to the group list.

Adding a member to a group


Add members to the member list in advance. → p.81 Up to 19 members can be added to a group, but a call can only be made to up to 4 members simultaneously.

<Example: To add from a group list>



"Add member"

The "Group member selection" screen appears.

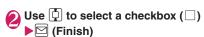


The selected member is added to the group.

NOTE

- Group members appear as follows:
 - After a member is added to a group, the added member appears at the top.
 - The member list in the PushTalk phonebook screen retains the last order.

Switching PushTalk phonebook lists -

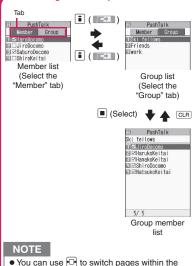

Adding entries to the PushTalk phonebook from Redial, Dialed calls, etc.

Add entries to PushTalk members or a PushTalk group from the "Received calls", "Dialed calls" or "Redial" screen.

<Example: To add a new entry to a PushTalk group from "Received calls" of voice communications>



"Add to PushTalk Gr"

same tab.

- To add from Redial, Dialed calls, or Received calls of PushTalk calls (group calls)
- ▶Use to select a checkbox (□)

- To add PushTalk members
- "Add to PushTalk"
- To add to the FOMA terminal or FOMA card (UIM)
- "Add to phonebook"
- "Adding entries to the phonebook from Redial, Dialed calls, etc."→p.88
- "New" Add to the phonebook
 - To add to an existing phonebook entry
 - ►"Add" Search the phonebook Open the phonebook detail screen ■ (Select) ► Add to the phonebook "YES"
- 🚹 Select a group
 - To add a new group
 - New> Enter a group name

NOTE


• " har appears next to a record that cannot be added to the PushTalk phonebook in the PushTalk (group call) Redial/Dialed calls/Received calls.

Making a Call from PushTalk **Phonebook**

Select members from the PushTalk phonebook and make a call.

• Up to four members can be specified and called.





Function menu⇒p.83

👰 Use 🖣 to select a checkbox ([

You can also place a checkmark using 1 to 9 or 0.

When the other party answers the call, a tone beeps, and the "PushTalk talking" screen appears. For subsequent steps, go to Step 2 in "Making a PushTalk Call" (p.78)



■ To view checked members before calling them by pressing 🗹

►ch (FUNC)►"Members to call"

NOTE

- If all members you made a call to receiving a call cannot connect because of "Disconnected", "No PT Func", etc., the PushTalk ends.
- When "Activate/Deactivate" (p.50) or "Set Caller ID" (p.83) is set to "ON" and a communication is sent, each member who receives the communication is notified of all the other members' phone numbers. Take care when informing others of your phone number, as this is important personal information.

Making calls from a PushTalk group



In the group list Highlight a group

A call is made to all members of the highlighted group.

- To exclude a member
- ▶Select a group▶Use 🗓 to unselect a member
- **₽**°

NOTE

- A PushTalk group communication continues even if the caller cuts the communication. →p.78
- If a group communication continues after the caller cuts it, he/she can rejoin the communication by dialing PushTalk from Redial. → p.79

PushTalk phonebook screen (p.82)

 Available options vary depending on the member list, group list or group member list.

New Add to the PushTalk phonebook.

View phonebook Search for a phone number from the FOMA terminal phonebook and add it to the PushTalk phonebook.

Direct input Create a new FOMA terminal phonebook entry and add a phone number to the entry. The added phone number is also added to the PushTalk phonebook.

Set Caller ID.....Set whether to show the numbers of all members (including members added during a PushTalk call) to the members to be called. If "Cancel prefix" is selected, the "Caller ID Notification" setting applies.

Members to call.....List members to be called.

PushTalk setting······Configure PushTalk settings.

→ p.84

Network connection ······ Connect to the network to use "PushTalkPlus". → p.77

Available only for PushTalkPlus subscribers.

SortSort the list by specified criteria.*

Group setting······Create a new group, add members to a group, or rename a group. →p.81

Release all members in the member list and group member list.

No. of PushTalk······View the number of members, groups, and members per group. To switch screens, use Θ , $\mathbb{R}(\neg \uparrow \vdash \neg)$ or $\mathbb{R}(\Phi)$.

Delete → p.83

*: The group list cannot be sorted by reading.

NOTE

<Set Caller ID>

- When the Caller ID settings are duplicated, the priority applies:
- Set Caller ID
 Caller ID Notification

Deleting PushTalk Phonebook Entries

<Delete PushTalk phonebook>

Delete members, groups or group members from the PushTalk phonebook.



Open the list to delete

Member list: Open this list to delete members from the PushTalk phonebook.

Group list : Open this list to delete a group. Group member list

: Open this list to delete a member in a group.

"Switching PushTalk phonebook lists" → p.82



Delete this Delete one member, group, or group member highlighted in Step 1. To delete a member from the Member list, select whether to delete only the PushTalk phonebook or delete also from the FOMA terminal phonebook.

Delete selected, Delete all······Delete multiple or all members, groups or group members.

NOTE

- If a member is deleted from the member list, the member will be deleted from all groups to which the member belongs.
- Even after a group is deleted, members in the group will not be deleted from the member list.
- Deleting a group member deletes it only from the currently displayed group. If the deleted member belongs to another group, it will not be deleted from the group.

Setting PushTalk <PushTalk setting>

Configure PushTalk settings.

PushTalk phonebook screen (p.82) ch (FUNC) "PushTalk setting" Select any item:

Auto answer setting Select whether to answer a PushTalk call automatically. When set to "ON", handsfree activates when a call is automatically answered and a member's voice comes from the speaker regardless of whether the FOMA terminal is folded or opened.

Ring time settingSet the ring time (from 01 to 60 seconds) when a PushTalk call arrives. After the set time elapses, the call is automatically answered with "Disconnected" and the ring tone stops.

Setting when folded·····Set the operation to be performed when the FOMA terminal is folded during a PushTalk call.

Speaker talk.....Continue talking in handsfree mode. Opening the FOMA terminal restores the status held before it was closed.

End the call······End the call. This is the same operation as pressing —.

PushTalk arrival act·····Set the operation to be performed when a voice call arrives while a PushTalk call is being made or received, or during a PushTalk call.

Answer Open the voice call ringing screen. However, the screen does not open while a PushTalk call is being made or received.

When answering a voice call using during a PushTalk call

The PushTalk call ends and the Voice call screen opens.

When a voice call is answered during a handsfree PushTalk call, handsfree is turned off.

■To continue the PushTalk call

Voice call ringing screen ch (FUNC)

"Call Rejection", "Call Forwarding" or

"Voice Mail"

Call Rejection ······ Reject an incoming voice call.

Voice Mail ····· Connect the call to the Voice Mail service center if you have subscribed to the Voice Mail service regardless of the Activate/Deactivate setting of Voice Mail. If you have not subscribed to the service, the "Answer" setting works.

Call Forwarding · · · · · Forward the call to the forwarding number if you have subscribed to the Call Forwarding service, regardless of the Activate/Deactivate setting of Call Forwarding. If you have not subscribed to the service, the "Answer" setting works.

Hands-free setting·····Set whether to automatically activate handsfree when a PushTalk call starts.

NOTE

<Auto answer setting>

- In Manner mode, a call must be answered manually even if this option is set to "ON".
- In Public mode (Driving mode), a call is not answered regardless of the "Auto answer setting".
 All participants will know that you are driving.
- When "PushTalk" under "Auto answer setting" under "External connection" is set to "ON", this setting is disabled.
- When set to "ON", this setting takes precedence over "Ring time setting" (p.84) under PushTalk setting.

<Ring time setting>

 When an earphone/microphone (optional) is connected, the shorter ring time set in "Ring time setting" and "Auto answer setting" takes precedence. If the same ring time is set, "Ring time setting" takes precedence.

<Setting when folded>

- This setting is valid only for PushTalk calls. The "Setting when folded" setting of voice calls or videophone calls does not apply.
- When set to "Speaker talk" and the FOMA terminal is folded, the handsfree mode activates regardless of the Manner mode setting.
- When an earphone/microphone is connected, this option becomes invalid. The call remains the same even when the FOMA terminal is folded.

<Hands-free setting>

- When an earphone/microphone is connected, this option becomes disabled and handsfree does not become active automatically.
- When Manner mode is active, this option becomes "OFF" regardless of the "Hands-free setting".

Phonebook

Adding Entries to the FOMA Terminal Phonebook
Adding Phonebook Entries from Redial/Dialed Calls etc.
Adding I horiebook Entires from Fledial/Blated Galls etc
Changing a Group Name Group setting 8
Making a Call from Phonebook Search phonebook
Editing Phonebook Entries Edit phonebook
Deleting Phonebook Entries
Checking Phonebook Storage Status
Setting Different FOMA Terminal Actions for Each Phone Number and Mail Address
Ring tone/Image 9
Using Choku-Den Choku-Den 9
Making a Call with a Few Key Operations

Phonebook Available for the FOMA Terminal

Your FOMA terminal has Phonebook in the FOMA terminal (Phone) for which you can set a range of functions, and UIM phonebook that can also be used in other FOMA terminals. Each phonebook can be used differently for your purpose.

 In addition, there is "PushTalk phonebook" for PushTalk. You can use the data stored in the phonebook in the FOMA terminal (Phone) to create entries in the PushTalk phonebook.

Differences between the FOMA terminal (Phone) phonebook and UIM phonebook

■ Data stored

Data stored	FOMA terminal (Phone) phonebook	UIM phonebook
Number of entries	Up to 1,000	Up to 50
Group	No Group, Group 01 - 19	No Group, Group 01 - 10
Phone number storage	4 numbers per entry (4,000 numbers in total in the phonebook)	1 number per entry
	Select from 23 icons	" 🕾 " only
Mail address storage	3 addresses per entry (3,000 addresses in total in the phonebook)	1 address per entry
	Select from 5 icons	" 📲 " only
Image storage	1 still image and 1 Chara-Den per entry (respectively 100 in total in the phonebook)	_
Other data storage	Name, Reading, ZIP code, Address, Location information, Birthday, Memo, i-concier address*, i-concier URL*, i-concier memo*	Name, Reading

^{*:} Automatically added/updated when phonebook data is updated in Data security service. You cannot add them by yourself. Not displayed if not subscribed to i-concier.

■ Features of the FOMA terminal (Phone) phonebook

The following utility functions can be used with entries stored in the FOMA terminal (Phone) phonebook:

- · "Choku-Den" → p.94
- "Two-touch dialing" → p.96
- "Ring tone/Image"→p.93
- "Restrictions" → p.137

- . Storing as secret data → p.127
- Secret code setting→p.92
- Adding members to PushTalk phonebook→p.81

Features of the UIM phonebook

Since phonebook entries are saved to a FOMA card (UIM), you can also use the same phonebook entries on another FOMA terminal simply by changing FOMA cards (UIM). This makes the UIM phonebook very useful when you use multiple FOMA terminals.

Displaying names

■ Voice and videophone calls When you receive a call with caller ID notified from someone who is stored in the phonebook, the phone number and caller's name appear.



When a still image is stored in the phonebook, the image appears. However, depending on the size and amount of data of the stored image, it may take time to display the image.

The caller's name is also displayed in "Received calls", "Dialed calls" and "Redial".



■ Displaying names for i-mode mail and SMS

When you send/receive i-mode mail or SMS to/from someone who is stored in the phonebook, his/her name is displayed in the sent/received mail list/detail screen or address list.

Adding Entries to the FOMA Terminal Phonebook

<Add to phonebook>

 An entry cannot be stored unless you fill in the "Name" field.



Select a phonebook Enter a name

You can enter kanji, hiragana, katakana, alphanumeric characters, symbols and pictograms (Phone only).

You can store up to 16 double-byte or 32 single-byte characters for Phone and only 10 double-byte or 21 single-byte alphanumeric characters (including some single-byte symbols) for FOMA card (UIM).



Check the reading▶■ (Set)

■ When the reading is incorrect

Correct the reading using katakana (single-byte for the Phone or Phone+PushTalk phonebook, and double-byte for FOMA card (UIM)), single-byte alphanumeric characters and symbols. You can store up to 32 single-byte characters for Phone or Phone+PushTalk phonebook, and only 12 double-byte or 25 single-byte alphanumeric characters (including some single-byte symbols) for FOMA card (UIM).

Select any item:

Select group.....Select a group number from "Group 01-19" for Phone or Phone+PushTalk phonebook, and from "Group 01-10" for FOMA card (UIM). If no group is selected, the entry is automatically assigned to "No Group".

Enter phone number

- Further select an icon in Phone or Phone+PushTalk phonebook. You can enter up to 26 digits for the phone number.
- Select "A < Not stored>" to add a phone number.
- You can enter up to 20 digits for a blue FOMA card (UIM), and up to 26 digits for a green/ white FOMA card (UIM).

Edit mail address

- Enter up to 50 single-byte alphanumeric characters and symbols. Further select an icon in Phone or Phone+PushTalk phonebook.
- Select "
 Not stored>" to add a mail address.
- Edit ZIP code, Edit address ····· Enter up to 50 double-byte or 100 single-byte kanji, hiragana, katakana, alphanumeric characters and pictograms for the address.
- Attach locationSelect From position loc./From location history/From Image. If you select "Location info detail", you can confirm the registered latitude, longitude, geographical coordinate system, and positioning level. If you select "Delete location Info", you can delete the registered location information.
- Enter birthdaySelect Enter birthday and enter the contact's birthday (year, month and day). Any year from 1800 to 2099 can be set. Select Reminder and then 1 Week Before/3 Days Before/Day Before/On the Day. At 0:00 AM on the day registered here, the incoming call lamp flashes and a desktop icon appears on the display to inform you of the notification. -> p.116

Edit memorandums.....Enter up to 100 double-byte or 200 single-byte kanji, hiragana, katakana, alphanumeric characters and pictograms.

Set image ·····Take a photo or select an image to be displayed when you receive a call.

Select Chara-den Select a Chara-den character to be displayed as the substitute image for videophone calls.

The Enter memory No.....Enter any number from 000 to 999 although memory numbers are automatically assigned when an entry is stored in the phonebook.

*: The smallest available number from 010 to 999 is assigned. If no number from 010 to 999 is available, an available number from 000 to 009 is assigned.



☑ (Finish)

■ When storage location is Phone+PushTalk phonebook

When a phone number is stored, the number is saved to the PushTalk phonebook.

When multiple phone numbers are to be stored, select a phone number to save to the PushTalk phonebook. You can add PushTalk phone numbers and register a group from the PushTalk phonebook. "Adding Entries to PushTalk Phonebook" → p.81

NOTE

- Stored phonebook entries containing symbols or pictograms may not be displayed correctly when data is transferred via infrared communications, etc.
- Enter the correct domain when storing mail addresses. The domain is the part of the address that follows the "@" sign.

However, if the contact's mail address is "phone number@docomo.ne.jp", store only the phone number as the mail address.

 If you use 2in1, "Phonebook 2in1 setting" (p.406) is also automatically set when adding the entry to the phonebook (Number A is set in A mode, and Number B in B mode).

The setting for the "Phonebook 2in1 setting" (A/B) is displayed on the Phonebook list screen or Phonebook detail screen (only when in Dual mode).

<Chara-den settings priority sequence>

- The priority order for Chara-den settings:
 - ①Chara-den setting for individual Ring tone/Image
 - ② Chara-den setting for group Ring tone/Image
 - 3 Chara-den stored in the phonebook entry
 - 4 Substitute image of Select image

When phonebook editing is interrupted

You can resume phonebook editing that was stopped e.g. because the battery ran out or a new task of Tool groups was activated using Multitask.



"Phonebook" Phonebook" ► ch (FUNC)►"Add to phonebook"

►Select a phonebook ► "Recall"

When re-editing the entry, if you cancel editing without storing the changes, the data being edited is erased.



To add a new phonebook entry

▶"New"

Adding Phonebook Entries from Redial/Dialed Calls etc.

Add information to the phonebook from "Received calls", "Dialed calls", "Redial", "Received address", "Sent address", "Text reader", i-mode Browser screen, enter phone number screen, etc.

<Example: To add information from "Received calls" to the FOMA terminal (Phone) phonebook>



Received calls screen (p.58) ch (FUNC)▶"Add to phonebook"



"Add to phonebook"

- Redial/Dialed calls/Received calls of PushTalk (group communication)
- Select a person (phone number) to add to the phonebook
- To add information to the PushTalk phonebook
- ▶ "Add PushTalk" or "Add PushTalk Gr" "Adding to the PushTalk phonebook from Redial or Dialed Calls record"→p.82



- To add information to FOMA terminal (Phone) + PushTalk phonebook
- ▶"Phone+PushTalk"
- To add information to the FOMA card (MIU)
- ▶"UIM"

"Add" Search for a phonebook entry

Searching the phonebook → p.90

- To add a new phonebook entry ▶"New"
- To add information to the FOMA card (MIU)
- "New" or "Overwrite"

S Display the phonebook detail screen▶ (Select)

The phone number is automatically entered and the phonebook editing screen appears. Editing the phonebook → p.92

- After editing, press □ (Finish)
 - If a message appears asking whether to overwrite the existing data
 - ▶"YES"

NOTE

 The "Notify Caller ID" setting ("Notify" or "Not notify") displayed in "Dialed calls" and "Redial" is not stored in the phonebook.


Changing a Group Name

<Group setting>

You can assign your stored phonebook entries to groups by contact role ("Work", "Friends", etc.) or by hobby ("Baseball", "Football", etc.). This allows you to use the phonebook as if it were divided into different volumes by purpose.

"No Group" cannot be renamed.

Phonebook list screen (p.89) ch (FUNC)▶"Group setting"

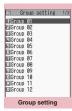

Function menu⇒p.89

Select a group Enter a new group name

" ighthered with a group indicates that the group is stored in a FOMA card (UIM). If the same name is used for a groups on the FOMA terminal (Phone) and the FOMA card

(UIM), they are displayed as separate groups.

FUNC Group setting screen (p.88)

Edit group name

Ring tone/Image → p.93

Reset group name Reset the group name to default.

NOTE

 Resetting the group name does not reset the "Ring tone/Image" setting.

Making a Call from Phonebook <Search phonebook>

Search for a phonebook entry to make a call.



To make a voice call from the list screen

Highlight a phonebook entry > < If the phonebook entry


contains multiple phone numbers, a call is made to the first phone number stored in the entry.



Function menu⇒p.90

To switch tabs

<Example: To switch tabs from the "他" (Others) to the "た" (ta-column) in Alphabet display>



■ To change the tab display

▶ ch (FUNC)▶"Change Display" Select "Alphabet", "Memory No.", or "Group".



4 ROB 050 100 150 > Memory No.

4 10 No Group 01 ▶ kikoKeitai

Group

Select a phonebook entry



Function menu⇒p.91

Use 🕒 to display a phone number (voice call) or (V.phone)

■ To send mail

►Use to display a mail address (MAIL) "Composing and Sending i-mode Mail" → p.146

NOTE

- Pressing during a call displays the group search screen, and pressing [] displays the column search screen.
- You can use to switch pages within the same tab in the phonebook list screen.
- The look-up operation with (() is not available when storing Choku-Den.
- Display the i-concier URL and press
 on the Phonebook detail screen to access the relevant URL website. "Web To function" → p.197

Searching for a phonebook entry by specifying the search method

Search for a phonebook entry using any of 8 search methods: reading, name, phone number, mail address, memory number, group, columns in Japanese phonetics $(\bar{\sigma}(a), \bar{D}'(ka), \bar{C}'(sa), \bar{C}'(ta), \bar{C}'(na), etc.)$ or all entries.

- Search results are displayed in the order shown below based on the reading entered when the entry was stored (except for memory number search): Katakana → Alphabets → Numbers → Symbols → Reading not stored
 - * If a space is entered at the beginning, the entry is searched first.

On the standby screen □

- To set your preferred search method first
- ► Highlight a search method you want to display first ► ☐ (Prefer) ► "OK"
- "★" appears next to the preferred search method.

Pressing on the standby screen displays the phonebook search screen for your preferred search method.

Search phonebook

TSearch reading

■Search phone No. ■Search e-mail

Search memory No.

■Search name

■Search group

⊠Search column ⊡Search all

- To release your preferred search method setting
- ► On the standby screen ☐ ☐ CLR Highlight a search method with "★" ☐ (Reset)

Select a search method

Search reading ••• Enter the reading • ①
Enter the reading from the beginning. You do not need to enter the entire reading.

Search name → Enter the name → □

Enter the name from the beginning. You do not need to enter the entire name.

Search phone No.·····▶Enter the phone number▶↓

Enter the first or middle digits of the phone number. Alternatively, enter a part of the phone number and press ① on the Enter phone number screen (p.52).

Search e-mail······▶Enter the mail address▶↓
You do not need to enter the entire address.

Search memory No. ····· ▶ Enter the 3-digit memory number

You cannot search the UIM phonebook by memory number.

Search group Select a group
Groups are different between UIM phonebook
and FOMA terminal (Phone) phonebook.

Search column·····▶ Press the key for the column (tab) you want to search

□: あ (a) column
②: さ (sa) column
⑤: な (na) column
⑥: ま (na) column
⑦: ま (ma) column
⑨: ら (ra) column
⑥: か (wa) column
※: 他 (others) (alphabet, number, etc.)

Search all Display all the stored phonebook entries in the Alphabet tab.

When the search ends, the Phonebook list screen containing entries that meet the search condition appears.

- "appears for phonebook entries stored in a FOMA card (UIM).
- " appears for phonebook entries containing i-concier address, i-concier URL or i-concier memo.



Function menu⇒p.90

Accessing the phonebook from Redial or Dialed calls

You can access the detail screen for stored phonebook entries by selecting "Look-up phonebook" from the function menu of "Received calls", "Dialed calls", "Redial", "Received address" or "Sent address" screen.

FUNC Phonebook list screen (p.89)

 The available functions vary depending on the search method and display method.

Add to phonebook → p.86

Connect to Center → p.141

Sort*1······Sort the phonebook list by selected condition.

Change Display ······ Select Alphabet/Memory No./ Group.

Ring tone/Image → p.94

Restrictions → p.137

Group setting → p.88

Copy to microSD*2 → p.329

- When "Copy all" is selected, select whether to copy the My Profile data in addition to the phonebook data.
- With "Copy all" and "Copy selected", information stored in the PushTalk phonebook is also copied.

iC transmission*2, iC trans. all*2 → p.341

Send Ir data*2, Send all Ir data*2 → p.340

Send one/Bluetooth*2, Send all/Bluetooth*2→p.341

No. of phonebook → p.93

Search location Access the i-mode site and execute imadoco kantan search using the phone number

Attach to mail *2.....Display the new mail screen with the phonebook data attached.

Big font⇔Standard font·····Switch the font size.

microSD phonebook ⇔ Original phonebook · · · · · Refer to the phonebook in a microSD card or the FOMA terminal (Phone).

Birthday reminder "3......Display the Birthday reminder screen. Select BD reminder list to display phonebook entries with birthday reminder set. Set Reminder illum. to ON to select the illumination color and pattern. On the day of the reminder, the incoming call lamp flashes in the pattern set here.

Delete data·····Select Delete this/Delete selected/ Delete all.

- "Delete all" also deletes phonebook entries on a FOMA card (UIM).
- *1: Use the function on the result screen displayed when a condition such as reading was entered and phonebook search was performed.
- *2: Does not function for the UIM phonebook.
- *3: Not available if "Reminder" is not set.

FUNC Phonebook detail screen (p.89)

Edit phonebook → p.92

Notify Caller ID → p.61

Chaku-moji → p.60

Dial setting

Prefix numbers → p.62

Int'l call → p.57

2in1/Multi Num. → p.59 (Function menu)

Select imageSelect Me/Chara-den as an image used during a videophone call. Select "Release settings" to release the setting.

Ring tone/Image*1 → p.93

Restrictions*1 → p.137

Move to top*1......Move the displayed phone number or mail address to the top when multiple phone numbers or mail addresses are stored in one phonebook entry.

Add to PushTalk*1*2 → p.81

Add to Choku-Den*1 → p.95

Add desktop icon → p.116

Compose message → p.146

Attach to mail*1.....Display the new mail screen with the phonebook data attached.

Compose SMS*2 → p.176

iC transmission*1, iC trans. all*1 → p.341

Send Ir data*1, Send all Ir data*1 → p.340

Send one/Bluetooth*1, Send all/Bluetooth*1→p.341

Copy to microSD*1 → p.329

Copy · · · · · Copy Name or Phone number (Mail address, Address, Location info, Birthday, Memorandums, i-concier address, i-concier URL or i-concier memo depending on the selected item). The copied item can be pasted into the text entry (edit) screen, etc. → p.390

Secret code*1 → p.92

Set code ·····Set the secret code (4 digits).

Check code ····· Check the set secret code.

Release settings ······Release the set secret code.

Set secret*1*3 → p.127

Copy to UIM*4 → p.336

Search location Access the i-mode site and execute imadoco kantan search using the phone number.

Map/GPS αppli*1.....Display a list of i-αppli that support the Map/GPS function.

Read Map*1······Activate GPS i-αppli set in "Select Map" (p.293).

Paste to mail*1*2......Display a new mail screen with the location information URL stored in the phonebook pasted into the screen.

Attach to image*1······Add location information to a still image.

Big font⇔Standard font ····· Switch the font size.

Delete data → p.92

- *1 : Does not function for the UIM phonebook.
- *2: Not available when 2in1 is in B mode.
- *3: "Release secret" appears when referring to a secret data phonebook entry.
- *4: "Copy to phone" appears when referring to the UIM phonebook.

NOTE

<Add to PushTalk phonebook>

<Add to Choku-Den>

 When information is stored to Choku-Den, "★" appears in the function menu.

Secret code

When the mail address of the other party is "phone number@docomo.ne.jp" and he/she sets a secret code, you need to specify "phone number + secret code@docomo.ne.jp" as the mail address.

There are 2 methods to send mail to such a recipient:

- Set a secret code for the phonebook entry from the phonebook detail screen function menu (when referring to the mail address, the secret code is automatically added to the mail address in the
- Store the mail address with a secret code in the phonebook.

NOTE

phonebook).

 Secret code settings are valid only for mail addresses in "phone number@docomo.ne.jp" or "phone number" format.

Editing Phonebook Entries

<Edit phonebook>

Phonebook detail screen (p.89) ch (FUNC) "Edit phonebook" Edit the respective items

Edit the required items using the same procedure as "Add to phonebook".

Adding information to the phonebook→p.86

■ To store in a new memory number

► Select "No" Enter a memory number (000 - 999) that has not yet been stored.

The original phonebook entry remains unchanged, and the edited entry is stored as a new phonebook entry with a different memory number.

After editing, press ☐ (Finish)► "YES"

■ To add information to the FOMA card (UIM)

▶ [Finish] "Overwrite" or "Add" Selecting "Overwrite" stores the edited information.

Selecting "Add" leaves the original phonebook entry unchanged and stores the edited entry as a new phonebook entry.

NOTE

- You cannot edit the i-concier address, i-concier URL and i-concier memo.
- When the edited entry is stored in the PushTalk phonebook or Choku-Den, the PushTalk phonebook or Choku-Den is also changed automatically.
- If the original entry is stored in Choku-Den or member list/Group list of the PushTalk phonebook, editing the memory No. does not copy the data to the edited entry.

Deleting Phonebook Entries

Phonebook detail screen (p.89)

ch (FUNC)▶"Delete data"▶Select
any item:

Delete phone No.*·····Delete the selected phone number.

Delete this

*: Depending on the selected item, "Delete mail add.", "Delete phone No.", "Delete loc. info", "Delete birthday", "Delete memorandums", "Delete image" or "Delete Chara-den" appears. Not available when "i-concier address", "i-concier URL" or "i-concier memo" is selected.

NOTE

 If you delete a phone number or mail address in a phonebook entry in which multiple phone numbers or mail addresses are stored, the subsequent phone numbers or mail addresses move up.

Checking Phonebook Storage Status No. of phonebook>

Phonebook list screen (p.89)
ch (FUNC) "No. of phonebook"

Phone (phonebook stored on the FOMA terminal)

Phonebook: Display the number of entries

stored in the phonebook. Number of items stored/1,000

(maximum)

Secret: Display the number of entries

stored as secret data. (Displayed only in Secret or Secret data only mode)

Image: Display the number of images stored in the phonebook.

Number of items stored/100

(maximum)

Chara-den: Display the number of Chara-

den characters stored in the

phonebook.

Number of items stored/100

(maximum)

Birthday remind: Display the number of entries

with birthday reminder set. Number of items stored/100

(maximum)

UIM (phonebook stored in a FOMA card (UIM))

Phonebook: Display the number of entries

stored in the phonebook. Number of items stored/50

(maximum)

Setting Different FOMA Terminal Actions for Each Phone Number and Mail

Address <Ring tone/Image>

Set the ring tone or answering message of Record message individually for each phone number or mail address in the phonebook, or each group. This function is useful when you want to distinguish the caller by ring tone.

 You cannot set this setting for "No Group" on the FOMA terminal (Phone), or the UIM phonebook or groups. Ring tone/Image is disabled when the caller does not show the caller ID. It is recommended that you set the "Caller ID Request" service.

Phonebook detail screen (p.89) ch (FUNC) "Ring tone/Image"

"★" appears next to a set function.

The available functions vary depending on the item selected in the phonebook detail screen.

■ To set this function for each group

► Group setting screen (p.88) ch (FUNC) "Ring tone/Image"

Select an item to distinguish by ring tone

Select "Voice call (recv.)", "V.phone (recv.)", "SMS (recv.)" or "Mail (recv.)".

Select any item:

Ring tone*1······Set ring tones to distinguish the caller or sender. "Changing Ring Tone"→p.98

Image*1*2·····Set images to distinguish the caller. "Changing the Display" → p.106

Chara-den setup*3......Select Chara-den to be displayed as a substitute image for videophone calls.

Illumination*1.....Set the color of incoming call lamp to distinguish the caller or sender.

Vibrator*1 ·····Set vibration patterns to distinguish the caller or sender. "Informing You of Incoming Calls by Vibration" → p.100

Answer message 2......Change the answer message used when record message 4 or quick message starts depending on the caller.

"Recording Voice/Video Massages When You Cannot Answer the Call" → P.71


- *1 : You can also distinguish incoming 64K data communications.
- *2 : Available only when "Voice call (recv.)" or "V.phone (recv.)" is selected.
- *3: Available only when "V.phone (recv.)" is selected.
- *4 : You need to set "Record message" to "ON" beforehand.
- "* appears next to a set function.

■ To release a set function

► Highlight a function with "★" ► 🖾 (Reset)
The function is released and "★" disappears.

■ When you set Ring tone/Image


An icon appears in the phonebook detail screen indicating that each item is set.



Ring tone (mail)

: Illumination (voice,

videophone call)

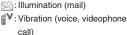

: Vibration (mail)

: Image (voice, videophone call)

is : Answer message (voice, videophone call)

: Chara-den (videophone call)



- You cannot set this setting for a phonebook entry stored as secret data. Even if the setting is made for a group, it is disabled for a phonebook entry stored as secret data.
- The "SMS (recv.)" setting set for a phone number is activated when you receive SMS or the sender's mail address is "phone number@docomo.ne.jp".
- Refer to the following pages for the priority when the Ring tone/Image settings and other settings for incoming calls, etc. are duplicated.
 - Ring tone priority → p.99
 - Vibrator priority → p.100
 - Image priority → p.99
 - Illumination priority → p.112
 - Chara-den priority → p.87



(1 (V) (2) (2) (m) (0)

Checking the Ring tone/Image settings

Check the phonebook entries or groups set in "Ring tone/Image" by function or item.



Select a function or item with "★"

► Highlight a function or item with "★" ▶ Ch (FUNC) ➤ Select any item:

Check settings·····Check the setting status.

► Highlight a function or item with "★"

Check the set entry or group

Release settings ·····Release all the settings of the functions marked with "★".

*: The number of selected items (number of times
is pressed) varies depending on the function or setting specified.

Using Choku-Den

<Choku-Den>

By storing frequently used phonebook entries to Choku-Den, you can make a call or send mail quickly.

- You can store entries to Choku-Den by quoting the data (phone numbers and mail addresses) stored in the FOMA terminal (Phone) phonebook. If no data is stored in the phonebook, add the entry in the FOMA terminal (Phone) phonebook from the "Choke-Den" screen and then add it to Choke-Den.
- Up to 5 entries can be stored.
- You can send i-mode mail to up to 5 mail addresses stored in Choke-den at the same time.
- You cannot use this function in Secret data only
 mode.
- You can use this function in Secret mode, but you cannot save a phonebook entry, which is stored as secret data, to Choke-Den. Also, you cannot add the entry to Choke-Den after adding the data to the phonebook in this mode.

Adding to Choku-Den

On the standby screen

When there is data stored. the Choku-Den screen of the first tab with data stored appears.

To change the destination

▶Use 🕞 to move the tab You can also use 1 - 5 to move to the tab of the respective number.



Function menu⇒p.95



■ To change stored information

► (Edit)

"View phonebook" Search for a phonebook entry

Searching the phonebook → p.90

To store data after adding it to the phonebook

▶"Direct input"

Go on to Step 5 when you finish adding entries to the phonebook (p.86).





Use [◘] to select a checkbox (□) Select only one phone number and mail address

to add respectively.

When a checkbox is selected, other phone numbers or mail addresses are grayed out and the checkbox cannot be selected. To select a checkbox, clear the checkboxes first.



NOTE

- The "Phonebook 2in1 setting" is displayed on the Choku-Den screen when 2in1 is in Dual mode.
- When an image is stored in the phonebook entry, the image in the entry is added to Choku-Den.

Making calls/Composing mail from Choku-Den

<Example: To make a call>

Choku-Den screen (p.95)▶Use 🕒 to display the Choku-Den screen to make a call

Alternatively, press 1 -5 to move to the tab of the respective number.





2 Use 🗓 to select "CALL"

- To compose mail
- Use to select "MAIL" → p.146
- To make a videophone call
- ▶Use to select "VIDEO PHONE"

FUNC Choku-Den screen (p.95)

Store, Edit

Image*.....Select an image from "My picture" to change the image displayed in Choku-Den.

Broadcast mail Display the new mail screen with all mail addresses of Choku-Den set in the To field. →p.146

Release this, Release all

*: Appears for stored Choku-Den.

NOTE

<lmaqe>

 You can add an image whose file size is 100 KB or smaller and whose width or height is 854 dots or smaller. However, you cannot add images other than JPEG or GIF.

Making a Call with a Few Key Operations Two-touch dialing>



Only one-to-one communication is available for PushTalk.

NOTE

 If the phonebook entry contains multiple phone numbers, a call is made to the first phone number stored in the entry.

Sound/Screen/Light Settings

Sound settings	
Changing Ring Tone Select ring tone	98
Setting Sound Effect for Ring Tones and MelodiesStereo&3D sound	100
Informing You of Incoming Calls by Vibration	100
Changing Ringing Tone	101
Setting Keypad Sound Keypad sound	101
Setting the Notification Tone and Illumination for GPS Function	101
Setting the Open-Close Sound	102
Setting Confirmation Tone for Charging	102
Setting the Clock Alarm Tone	102
Sounding Alarm When a Line is Likely to be Disconnected	102
Setting Ring Time for Incoming Mail	102
Sounding Ring Tone from the Earphone and Speaker Headset usage setting	103
Muting Ring Tone from the FOMA Terminal	103
Changing Manner Mode Settings	106
Screen/Light settings	
Changing the Display	106
Displaying Images Saved in Album	108
Setting the Color for Caller ID Display	108
Making It Difficult for Others to See the Display	108
Setting Lights for Display and Keypad	109
Changing the Display Design	109
Changing the Menu Display	110
Setting the Display Mode of the Indicator Display	111
Setting the Flashing Mode of the Incoming Call Lamp for Incoming Calls Illumination	111
Setting the Flashing Mode of the Incoming Call Lamp During Calls Illumination in talk	112
Setting the Flashing Mode for Handset Closing	112
Setting the Flashing Mode of Key Illumination	113
Setting the Key Backlight Color	114
Setting the Image Display Mode	114
Setting Display Vertical/Horizontal Switch Auto-change Screen	114
Setting Machi-chara as Standby Screen	114
Setting the Effects for Display Change	115
Changing Character FontFont	115
Setting Clock Display Clock display	115
Using Desktop Icons/Desktop Info	116
Displaying Desktop Icon Messages for New Mail in 3D Animation 3D display setting	119
Selecting Icons to Display on the Standby Screen	119
Setting Kisekae Tool Kisekae Tool setting	121

Changing Ring Tone

<Select ring tone>


Set the ring tone and receiving screen for Phone, Videophone, PushTalk or Mail. You can also set the ring tone for specified phone number, mail address or group in the phonebook respectively. →p.93

- Guide to the melody list"→p.320
- Setting the dialing/sending screen → p.106



Select "Phone", "Videophone", "PushTalk", "Mail", "MessageR", "MessageF" or "i-concier".

- When "Phone" is selected, the ring tone for voice calls and 64K data communications is set
- When "Mail" is selected, the ring tone for i-mode mail, SMS and packet communications is set.

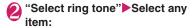

Melody.....Set the ring tone or melody.

i-motion·····Set i-motion/Chaku-Uta[®] downloaded to the FOMA terminal or movie (i-motion) taken with the camera. When you receive a call, the video or sound for the selected i-motion is played (Chaku-motion).

Music·····Set Chaku-Uta-Full[®]. Set any item from the following when the Chaku-Uta-Full[®] contains the portion where the ring tone is specified by the provider:

Fullsong ring tone Set the entire song as the ring tone.

Point ring tone······Set a part of the song as the ring tone.

►Use ⊡ to specify the portion (displayed in orange) to set as the ring tone ■ (Set)

When the "Movable contents" folder is selected, select "YES" then the destination folder.

Voice announce······Set the message recorded using "Voice announce".

Random melody ····· Select a folder containing melodies. When you receive a call or mail, melodies stored in the folder are played randomly.

OFF Do not play a ring tone.

■ To set the calling/receiving display

► "Select calling disp." or "Select receiving disp." On "Select calling disp.", select an image from My picture or i-motion.

On "Select receiving disp.", select an image from My picture.

Select a ring tone

When you select a melody, the melody plays. Press , #, , , or ch to stop melody playback.

Pre-installed ring tones, melodies and alarms

Display	3D sound compatible
Pattern 1 to 4	×
Melody 1	×
Melody 2	×
Melody 3	×
Melody 4	×
Melody 5	0
Melody 6	0
Melody 7	×
Alarm 1	×
Alarm 2	×
Alarm 3	×
Alarm 4	×
Alarm 5	×
Alarm 6	×
Alarm 7	×
Alarm 8	×
Alarm 9	×
Alarm 10	×
Alarm 11	×
Open-Close 1 to 3	×

■ Pre-installed Chaku-motion

a la carte

NOTE

- Some i-motion (i-motion with video only) and Chaku-Uta-Full[®] cannot be set as a ring tone.
- Only i-motion with sound only (i-motion with no video such as a singer's voice) can be set as a ring tone for PushTalk or i-concier.

NOTE

- i-motion with sound only (i-motion with no video, such as a singer's voice) cannot be set as the receiving display.
- Flash movies can be set as the receiving display/ mail receiving display, but the ring tone used is a tone set in "Select ring tone".
- Flash movies including Flash[®]Video are not played.
- When you select i-motion in the Movable contents folder, the selected i-motion is moved to the Inbox folder under "i-motion/Movie".
- When you select Chaku-Uta-Full[®] in the Movable contents folder and "Fullsong ring tone" is set, the selected Chaku-Uta-Full[®] is moved to the Inbox folder under "Music". When "Point ring tone" is set, the selected portion is clipped as i-motion and saved to the "i-motion" folder.
- When you set Chaku-Uta-Full[®] stored in the FOMA terminal as a ring tone with "Point ring tone", it is not clipped as i-motion and the selected portion is set as a ring tone.
- While selecting a ring tone, the ring tone is played at the volume set in "Ring volume".
- When i-motion with video and sound is set as a ring tone and receiving display, i-motion set as the ring tone is played.
- If you set other than i-motion with video and sound as the ring tone and then set i-motion with video and sound as the receiving display, i-motion set as the receiving display is played.
- When i-motion or Chaku-Uta-Full[®] is set as a mail ring tone, the default "Mail" ring tone is used as a packet communication ring tone. The dedicated screen appears when packet communication is received regardless of the receiving display settings.
- When Chaku-Uta-Full[®] that contains a jacket image is set as a ring tone, the Chaku-Uta-Full[®]'s jacket image does not appear when you receive a call.
- The following table shows the ring tone operations performed when multiple mail or MessageR/F are received simultaneously:

Received content	Ring tone operation
Multiple mail are received	Play the ring tone
Mail and MessageR/F are received simultaneously	set for the last received mail.
MessageR/F are received simultaneously	Play the ring tone set for MessageR.

NOTE

<Phone ring tone priority>

- When the ring tone settings for incoming calls are duplicated, the priority is assigned as follows:
- ① Ring tone for Ring tone/Image (individual)
- ②Ring tone for Ring tone/Image (group)
- ③ Ring tone for B mode of 2in1/Multi number (Additional number 1, 2)
- A Ring tone for Select ring tone/Kisekae Tool setting
- * The priority is assigned as follows for ① "Ring tone/Image" (individual) and ② "Ring tone/Image" (group):
 - ①i-motion for Ring tone
 - ②i-motion for Calling display
 - ③i-motion for Ring tone (i-motion with no video, such as a singer's voice), melody or Chaku-Uta-Full[®]

<Ring tone priority for mail (including SMS)>

- When the ring tone settings for mail are duplicated, the priority is assigned as follows:
 - Mail/SMS ring tone for Ring tone/Image (individual)
 - ②Ring tone for Ring tone/Image (group)
 - 3 Ring tone for B mode of 2in1
 - ④ Ring tone for Select ring tone/Kisekae Tool setting

<Image priority>

- When the image settings for incoming calls are duplicated, the priority is assigned as follows:
 - ① Calling display for Ring tone/Image (individual)
- ②Calling display for Ring tone/Image (group)
- 3 Still image stored in the phonebook
- (4) Calling display for B mode of 2in1
- ⑤i-motion set in Select ring tone
- 6 Display setting/Kisekae Tool setting
- * The priority is assigned as follows for ① "Ring tone/Image" (individual) and ② "Ring tone/Image" (group):
 - ①i-motion for Ring tone
- ②i-motion or still image/image set in Select calling disp.

Setting Sound Effect for Ring Tones and Melodies

<Stereo&3D sound>

Get rich and exciting sounds of melodies, ring tones for voice/videophone/PushTalk call or mail, sound effects and i-motion sound when a stereo earphone set (optional) is connected.



"Settings/NW Service" "Incoming call" "Stereo&3D sound" "ON"

■ Not to set Stereo&3D sound

• "OFF"

What is 3D sound?

The 3D sound function uses the stereo earphones set to produce 3-dimensional and resonating sound. This function allows you to enjoy i- α ppli games and melody playback with richer and more realistic sound.

 The 3D effect may vary depending on the individual. If the 3D sound bothers you, set "Stereo&3D sound" to "OFF".

When playing i-motion with sound effects

When you play i-motion with sound effects, the effects simultaneously enhance the sound played through the speaker and earphone. Stereo sound played through earphones is enhanced by effects that provide a natural-sounding 3D sound field and rich low tones as well as clearly defined voice and music audio.

 i-motion with sound effects can be identified by icon shown on the movie list screen. →p.305

NOTE

- Even when set to "ON", sound effects do not work for sounds coming from the built-in speaker.
- When "Headset usage setting" is set to "Headset+speaker" and ring tones/melody alarm sounds are played with a stereo earphone set connected, the "Stereo&3D sound" setting is disabled. When set to "Headset only", the "Stereo&3D sound" setting is enabled.

Informing You of Incoming Calls by Vibration < Vibrator>

Set vibration patterns to notify you when you receive a Voice call. Videophone. PushTalk or Mail.



When "Phone" is selected, the vibrator for voice calls and 64K data communications is set.

When "Mail" is selected, the vibrator for i-mode mail. SMS and packet communications is set.



Select the vibration pattern:

Pattern 1 - Pattern 3 ·····Vibrate in each pattern. When you move the highlight while selecting an item, the FOMA terminal vibrates in the highlighted pattern.

Melody linkage······Vibrate in a pattern linked to melody set as a ring tone.

OFF Do not vibrate.

■Icons on the standby screen while setting the vibration pattern

Yibrate when receiving a voice call, videophone call or PushTalk

\[
\mathbb{\rightarrow}
\]: Vibrate when receiving mail or MessageR/F
\]
 \[
\mathbb{\rightarrow}
\]: Both "\\mathbb{\rightarrow}
\] and "\\mathbb{\rightarrow}
\] are set

NOTE

- Take care not to bring the FOMA terminal close to fire (e.g. space heater) or drop it off a table due to vibration.
- Even when "Melody linkage" is selected, the FOMA terminal does not always vibrate to the melody. When no vibration pattern is set for the melody or when i-motion or Chaku-Uta-Full[®] is set as a ring tone, the FOMA terminal vibrates in Pattern 2.
- When receiving Area Mail, Vibrator links to the ring tone or beep regardless of this setting.
 Vibrator does not work when Area Mail arrives but "Mail" vibration pattern is set to "OFF".


<Vibrator priority>

- When the vibrator settings are duplicated, the priority is assigned as follows:
 - ①Vibrator for Ring tone/Image (individual)
 - ② Vibrator for Ring tone/Image (group)
 - ③ Vibrator for B mode of 2in1
 - (4) Vibrator setting

Changing Ringing Tone

<Melody Call setting>

Set whether to change the ringback tone heard by the other party (YES/NO) when you receive a voice call.

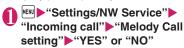

When "YES" is selected, the Melody Call i-mode site is accessed. Packet communications charges do not apply for the setting site. However, the IP site, i-mode menu site and free music page incur packet communications charges.

Follow the on-screen instructions.


NOTE

 Melody Call is not played when the other party dials from Videophone or PushTalk.

Setting Keypad Sound

<Keypad sound>

- Setting this function to "OFF" also disables the battery level tone and each warning tone.
- The keypad sound is played at the volume set in "Volume" during a call, and fixed at a given volume while not talking on the phone.

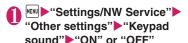


Setting the Notification Tone and Illumination for GPS Function

Set the notification tone and illumination for Position location, Location notification and request.

 If "Permit to send loc." under "Loc. request setting" is set to "ON" and Public mode (Driving mode) is set, the location information is sent upon request without notification tone, vibrator or illumination.

Setting the notification tone/vibrator





Ring volume······Select an item, then use to adjust volume.

Select ring tone ······Select an item to set the notification tone, then select Melody/OFF (no notification tone).

Vibrator. Select an item to set the vibrator, then select Pattern 1 to 3/Melody linkage/OFF (no vibration). When Melody linkage is selected, the FOMA terminal vibrates to the pattern of the melody set as a notification tone.

Ring time Select an item to set the ring time, then select ON/OFF (no notification). When ON is selected, enter the ring time (2 digits from 01 to 30 seconds)*.

*: For "Loc. request/confirm", enter a 2-digit number from 01 - 20.

Setting the illumination



Select an item▶Select any item:

Color 1 - 7······Flash in the selected color.


Gradation······Flash in the order from Color 1 to 7.


OFF.....Do not flash. OFF cannot be set when Loc. request/permit or Loc. request/confirm is selected.

Setting the Open-Close Sound

<Open-Close sound>

Set sound to be played when the FOMA terminal is opened or closed.

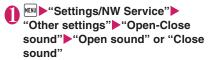

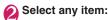

Melody······Select open-close sound from the Melody folder.

Ring time · · · · · Select the ring time of open-close sound.

OFF

NOTE

- The volume of open-close sound cannot be adjusted.
- The open-close sound does not play when the i-motion or i-αppli is set as the standby screen.

Setting Confirmation Tone for Charging <Charge sound>

Emit a short double-beep ("bibip") when charging starts and ends.

- When the standby screen is not displayed or when Manner mode or Public mode (Driving mode) is set, the charge sound is not played.
- "Settings/NW Service" "Other settings" ► "Charge sound" ► "ON" or "OFF"

Setting the Clock Alarm Tone

<Clock Alarm Tone set>

Change the clock alarm tone for Alarm, Schedule, To Do list and Booking program.

● "Settings/NW Service" "Clock" > "Clock Alarm Tone set" > Select an alarm tone

Select "Melody"/"i-motion"/"Music"/"Voice announce"/"OFF".

Sounding Alarm When a Line is Likely to be Disconnected

<Quality alarm>

Emit an alarm tone to warn you that the signal quality is deteriorating and the line is likely to be disconnected.

- The line may be disconnected without the alarm tone if the signal quality deteriorates suddenly.
- "Settings/NW Service" "Talk" ► "Quality alarm" ► Select an alarm tone

Select "No tone"/"High tone"/"Low tone".

Setting Ring Time for Incoming Mail Mail/Msg.ring time>

Set ring time of the ring tone played when you receive mail. MessageR/F or i-concier information.

● "Settings/NW Service" "Incoming call" ■ "Mail/Msg. ring time" ■ Select an item to set ring time

When "Mail" is selected, the ring time for i-mode mail, Area Mail and SMS is set.

- "ON" Enter ring time (2 digits from 01 to 30 seconds)
 - To turn off the ring tone
 - "OFF"

When "Vibrator" is activated, the vibration is disabled.

Sounding Ring Tone from the **Earphone and Speaker**

<Headset usage setting>

Set a ring tone or alarm notification to be heard from the earphone and speaker when an earphone/ microphone (optional) is connected.

MENU ► "Settings/NW Service" ► "External connection" Headset usage setting"▶"Headset+ speaker" or "Headset only"


NOTE

- If "Ring volume" is set to "Silent", no sound comes from the earphone or speaker.
- When "Phone vol." and "Mail vol." in Manner mode (Original) is set to other than "Silent", the ring tone still sounds. However, in manner mode (Manner mode/Super silent), the ring tone sounds only from the earphones.

Muting Ring Tone from the FOMA Terminal

Set the FOMA terminal not to play ring tones or keypad tones through the speaker with a single key operation.

- Refer to Table 1 (p.104) and Table 2 (p.105) for the Manner mode setting.
- You can select "Manner mode". "Super silent" or "Original" under "Manner mode set" for the manner mode operations.

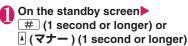

You can set the manner mode by pressing

(1 second or longer) during a call.

The manner mode is set, " 💜 " appears, and the settings set in "Manner mode set" appear.

: Notify by "Vibrator" Vie

S S S : "Ring volume" is set to "Silent"

Record message" and "Record VP message" set to record messages

During a call, a short double-beep ("bibip") sounds and a message appears indicating that the manner mode is set.

■ To release the manner mode

▶On the standby screen▶# (1 second or You can release the manner mode by pressing # (1 second or longer) during a call. The manner mode is released and " " " disappears.

During a call, a short double-beep ("bibip") sounds and a message appears indicating that the manner mode is released

NOTE

- Even in Manner mode, the camera shutter sound or auto focus sound plays.
- Take care not to bring the FOMA terminal close to fire (e.g. space heater) or drop it off a table due to vibration

Setting/Releasing manner mode automatically <Auto manner mode>

Set/Release manner mode automatically at the specified time.

- Up to 2 entries can be added to the start time and release time respectively.
- <Example: To set automatically>
 - MENU ► "Settings/NW Service" ► "Incoming call" - "Manner mode setting" "Manner start time"
 - To release automatically
 - ▶ "Manner release time"
 - To switch on/off without changing the current settinas
 - ► Highlight an alarm ► (ON/OFF) "ON" and "OFF" toggle each

time you press .

Manner mode cannot start when other function active

Manner start (release) time list

Manner start time

Enter the start time for manner mode


To check the current settinas

► Select a setting item









Time setting.....Enter time to set or release automatically.

Repeat······Select 1 time/Daily ()/Select day (W)



NOTE

- This function does not work at the specified time if the power is off.
- The manner mode is not set/released automatically at the specified time while another function is active. Set/Released after the function exits.

When auto manner mode is set

- The following icons appear on the standby screen: : Auto start is set

 - : Auto release is set
 - . Auto start is set/Remote monitoring
- When manner mode is set by pressing # (1 second or longer), the manner mode is released at the auto release time.
- When manner mode is set by auto start, the manner mode can be released by pressing # (1 second or longer).



Manner start (release) time list screen (p.103)/Manner start (release) time detail screen (p.103)

Edit

Display detail*.....Display the setting.

Finish (Set this) Set the setting.

Release this Release a setting.

Release all Release all the settings.

*: Available only on the Manner start (release) time list screen.

[Table 1] When manner mode is set

Item	Manner mode	Super silent	Original (Original manner mode settings)
Record message activation	"Record message" (p.71) setting		"Record msg." setting
Vibrator		ON	"Vibrator" setting
Ring volume for voice/videophone call, PushTalk call and 64K data communications	Silent		"Phone vol." setting
Ring volume for mail, packet communications, MessageR/F, i-concier information and i-αppli call	Silent		"Mail vol." setting
Alarm volume (including snooze)	Silent		"Alarm vol." setting
Wake-up tone	Silent		"Phone vol." setting Played at "Level 2" when set to "Step"
i-αppli volume, i-Widget sound effect	Silent		"i-αppli vol." setting
Alarm volume for Schedule, To Do List, Booking program/Timer recording, and Cost limit	Silent		"Phone vol." setting
Confirmation, activation and completion tones for Voice memo, Record message, etc.	ON	OFF	"VM tone" setting
Keypad sound, battery level confirmation tone	ÖFF		"Keypad sound" setting
Microphone sensitivity during calls	Up		"Mic sensitiv." setting

Item	Manner mode	Super silent	Original (Original manner mode settings)
Holding tone	Silent		"Phone vol." setting Played at a given volume when set to other than "Silent"
On hold tone	Silent		"Phone vol." setting Played at "Level 2" when set to "Step"
Low-voltage alarm	OFF		"LVA tone" setting Even when "Phone vol." is set to "Silent", the low-voltage alarm sounds at "Level 1" when "LVA tone" is set to "ON"
Reading out received mail	"Phone" setting under "Ring volume" Played at "Level 2" when set to "Silent" or "Step" Valid only when "Read out message" is selected from the function menu of the Received mail detail screen		
Voice clock (during standby or snooze) and missed call/new mail confirmation tones when the FOMA terminal is folded	S	ilent	"Level 2" Silent when "Phone vol." is set to "Silent"
ToruCa acquisition tone	S	ilent	"Phone vol." setting Played at "Level 4" when set to "Step"
GPS position location or notification tone	S	ilent	Silent regardless of the "Original" setting
Open-Close sound	OFF		

[Table 2] When earphones are connected

Item	Manner mode	Super silent	Original (Original manner mode settings)
Reading out received mail	"Phone" setting under "Ring volume" Played at "Level 2" when set to "Silent" or "Step"		
Voice clock (during standby or snooze) and missed call/new mail confirmation tones when the FOMA terminal is folded	"Phone" setting under "Ring volume" Played at "Level 2" when set to "Silent" or "Step"		"Phone vol." setting Played at "Level 2" when set to "Step"
Music Player volume	Music Player volume setting (p.261)		
Volume while viewing 1Seg or playing a recorded program	Volume setting while viewing 1Seg or playing a recorded program (p.241)		
Open-Close sound	"Level 2"		

Changing Manner Mode Settings < Manner mode set>

Select the manner mode operations.



"Settings/NW Service"
"Incoming call"
"Manner mode setting"
"Manner mode set"



Manner mode set



Select any item:

Manner mode Mute all sounds coming from the speaker, and use vibration to notify you of incoming calls, etc. However, confirmation tones played through earpiece (when a voice memo or memo is played) are not muted.

Super silent·····Mute all sounds coming from the speaker and confirmation tones coming from the earpiece, and use vibration to notify you of incoming calls, etc.

Original → p.106

Setting the original manner

Set your preferred manner mode settings.

- The following are the default settings of the "Original" manner mode:
 - Record msg.: OFFVibrator: ON
 - Phone vol.: Silent
 - Mail vol.: Silent
 - Alarm vol.: Silent
 i-αppli vol.: Silent
 - VM tone: ON
 - Keypad sound: OFF
 - Mic sensitiv.: Up
 - LVA tone: OFF



Manner mode set screen (p.106)▶
"Original"▶Select any item:

Record msg. → p.71

Vibrator → p.100

Phone vol.Set the ring tone volume for voice/videophone calls, PushTalk calls and 64K data communications. → p.67

Mail vol. ·····Set the ring tone volume for mail, packet communications, MessageR/F, i-concier information and i- α ppli call. \rightarrow p.67

Alarm vol. → p.358

i-αppli vol. → p.269

However, "Step" cannot be set.

VM tone······Set confirmation tones for "Record message", "Voice memo", etc.

Keypad sound → p.101

Mic sensitiv. Select Normal/Up for the microphone sensitivity during calls.

LVA tone·····Set the low-voltage alarm. "When the battery runs out" → p.47





NOTE

- The record message function set in "Original" starts when the ring time set in "Record message" (p.71) is over (when set to "OFF", recording starts in 13 seconds).
- If the microphone sensitivity during calls is set to "Up", the voice heard by the other party gets loud even if you speak quietly. The microphone sensitivity is set to "Normal" when capturing movies with "Camera".

Changing the Display

<Display setting>

You can also set photos you took or downloaded as the standby screen, dialing/calling screen, etc.





Display setting



Select any item:

Stand-by display······Change the standby screen image. →p.107

Wake-up display······Set a message or image displayed at power-on.

■ Wake-up sound setting

Use the function menu to set ON or OFF.

OFF·····Do not show an image or play a wake-up tone.

Message

My picture ····· Select an image from My picture.

Dialing, Calling, V.phone dialing, V.phone calling, Mail sending, Mail receiving.....Set an image to be displayed when making/receiving voice/videophone calls or sending/receiving mail (i-mode mail and SMS).

- Dialing/Sending screen setting Select from My picture.
- Calling/Receiving screen setting
 "Changing the Ring Tone" (Step 2) → p.98

Check new messages, Mail rec'd result······ Select an image from My picture to be displayed for "Check new messages" (i-mode mail and message), "Check new SMS" or mail received result screen.

NOTE

- Some i-motion cannot be specified.
- <Stand-by display priority>
- Priority is assigned as follows when the Stand-by display settings are duplicated:
 - ①i-αppli display
 - ②Display setting/Kisekae Tool setting

Changing the standby screen image

- The image may change depending on the display timing, etc.
- When Calendar or i-αppli display is set while Machi-chara is set, the Machi-chara is released.
- Set the standby screen displayed when 2in1 is in A mode or "2in1 setting" is set to OFF. The setting does not apply when set to "B mode" or "Dual mode". Set "Stand-by display" under "2in1 setting".

Display setting screen (p.106)► "Stand-by display"► Select any item:

OFF.....Do not display an image, etc.

Calendar.....Set a calendar.

Background ······ Select an image from My picture for the calendar background.

No background······Display the calendar only.

My picture ····· Select a standby screen image.

i-motion*······Select i-motion to display on the standby screen.

i-αppli display·····Set the i-αppli standby screen. → p.278

When the i- α ppli standby screen is set, " \bigstar " appears.

Random display Display images in the specified folder randomly when the standby screen appears.

- *: When you select i-motion from the Movable contents folder, the content is moved to the Inbox folder in the FOMA terminal, then set.
- When the display mode setting screen appears
- ➤ Select the display mode ➤ Check the image ➤ (Set)

The following display modes are available:

- Centering disp. (centering an image on the screen)
- Fit in disp. (enlarging/reducing an image size until its height or width fits to the screen)
- Arrange disp. (displaying images from upper left in order)
- Full screen disp. (enlarging or clipping an image to fit it into the screen size)

NOTE

- You may not be able to select the display mode depending on the image type.
- i-motion set as the standby screen is played when the FOMA terminal is opened. To stop playback, press CLR or ♥. When playback ends, the first frame appears on the standby screen.
- Flash movie, GIF animation or original animation set as the standby screen is played when the following operations are performed (no melody):
 - Open the FOMA terminal
 - Press CLR on the standby screen
 - · Return to the standby screen

NOTE

- i-motion, Flash movie, GIF animation or original animation set as the standby screen is not played when the Kevpad lock, etc. is on. To play it. release the lock.
- Preset Flash[®]Video does not play.

<Flash movie that works as clock>

- If the Flash movie clock stops, play the Flash movie to resume the clock. The fast or slow clock is adjusted within a minute after playback ends.
- If the standby screen appears, a Flash movie such as clock or GIF animation is played for a given time and then stopped.

When you set the calendar as the standby screen

The calendar appears on the standby screen. You can quickly and easily check the previous or next calendar dates or activate the schedule.

To check the adjacent months on the calendar Press on the standby screen to select desktop icons or calendar. Use 🗓 to highlight the calendar. then press (Select). The desktop icons disappear and you can check the adjacent months on the calendar with 1.

■ To activate the schedule function

When and are available to check the adjacent months on the calendar, press (Select) to activate the schedule function and add schedule for the displayed month.

Displaying Images Saved in Album

<Disp. phonebook image>

Set whether to display a still image when receiving a voice/videophone call from a phone number whose still image is stored in the phonebook.

"Settings/NW Service" "Incoming call" b "Disp. phonebook image"▶"ON" or "OFF"

Setting the Color for Caller ID **Display** <Disp. call/receive No.>

Display names, phone numbers and mail addresses on the Redial/Received calls screen or Sent/ Received address list screen with the font color changed.



NOTE

- Press (Change) to switch the number of colors from 16 to 256. The palette switches between 16 colors and 256 colors each time you press (Change).
- The color setting of this function may change depending on the "Color theme" setting. After changing the setting of this function, press (Reset) to reset to the color corresponding to the "Color theme" setting.
- When you use 2in1, Number A and Address A appear in the color set here. To display Number B and Address B in different colors, set "Disp, call/ receive No." of "2in1 setting".

Making It Difficult for Others to See the Display <Privacy angle>

8 (1 second or longer)

The privacy angle is set and " | appears.

■ To release the lock 8 (1 second or longer)

NOTE

- You may not be able to set/release the privacy angle while using a function, e.g. editing text. Set/ Release the privacy angle on the standby screen beforehand.
- Even in Privacy angle mode, this function does not apply to the pointer when using the i-mode or Full Browser

Setting Lights for Display and Keypad <Backlight>

"Settings/NW Service" "Display" ►"Backlight" ► Select any item:

Lighting · · · · · Select ON/OFF for the normal backlight and Power saver mode. When setting Lighting to ON, select the lighting time. When setting Power saver mode to ON, enter the waiting time for Power saver mode (01 to 20 minutes in 2 digits).

 When Power saver mode is set to ON, the display turns off when the specified delay time has elapsed. When any key is pressed in Power saver mode, the Power saver mode is released.

Charging······Select Standard/All time ON for the backlight during charging.

- When set to Standard, the backlight lights up with the normal backlight setting.
- When set to All time ON, the display backlight lights up all the time.

Brightness Set whether to adjust the backlight automatically, and select the brightness from Level 1 to 6.

 When set to ON, the illuminance sensor detects the ambient brightness, and the backlight brightness is automatically adjusted.
 The keypad light is turned on/off automatically.

Reducing battery consumption at once (ECO mode)

When ECO mode is set, backlight/sound/screen settings are changed at once to reduce battery consumption. This mode is effective for saving battery.

- In ECO mode, the usage is restricted or the settings are changed for the following functions:
 - Lighting-related: Backlight, Indicator display, Illumination (Closed illumination, Key illumination, Key backlight), Illumination in talk
 - Sound-related: Stereo&3D sound, Read out message, Movie auto play set., Keypad sound, Open-Close sound
 - Screen-related: Display setting, Color theme, i-Channel Ticker display, Disp. call/receive No., Auto-change Screen

🚹 互 (1 second or longer)

ECO mode is set and " (?) " appears.

■ To release the lock

▶ 5 (1 second or longer)

ECO mode is released and " @ " disappears.

NOTE

- When "Key backlight" under "Illumination" is set to "OFF", the key backlight does not turn on.
- You cannot set or release ECO mode while text is edited or i-αppli is active.
- ECO mode is released at power on/off.
- When "Lighting" is set to "ON", the backlight turns on when a call is received, and lights for the "Lighting" time when you turn the power on, press keys, or open the FOMA terminal. The backlight is always on while using the camera or playing a moving picture/i-motion. When set to "OFF", the backlight does not turn on. However, the backlight turns on during movie/panorama shooting regardless of the "Lighting" setting.
- When the FOMA terminal is open and Power saver mode activates, the multi-function key section flashes.
- Even if ECO mode is set, the function settings do not change. Also, even if settings are changed, the ECO mode operations are not affected (except for Disp. call/receive No.).
- If your finger, etc. covers the illuminance censor, the brightness may not be detected correctly.

Changing the Display Design <Display design

Change text, background, function key background, etc.

"Settings/NW Service"
"Display" "Display design"
Select any item:

Color theme ····· Select a color pattern.

Icon pattern······Select a design for battery icon/antenna icon.

Soft key······Select a function background pattern.

NOTE

 Some screens (e.g. i-mode Browser) or functions are not affected by changes made to the settings of this function.

Changing the Menu Display

Setting the menu display mode

<Menu display set>

Change the display of the "Settings/NW Service" branch options (functions) or the main menu design. Also, set the last one function of the Main Menu and Simple Menu.



MENU ► "Settings/NW Service" ► "Display" - "Menu display set"



Menu display set



Select any item:

Menu display · · · · · Select List/Detail.

Theme Select the main menu background or icons.

- When Original theme is selected → p.110
- When Kisekae Tool is selected → p.121

Memory focus Set whether to highlight the menu containing the last selected function when the Main Menu or Simple Menu reappears (Last one function).


Reset menu op. log ······Reset the menu operation history. Effective for the automatically sorted menu items (p.34), etc.

NOTE

 The Last one function memorizes the main menu. icon when the branch menu appears. The icon is not memorized when the operation is interrupted while the sub item is displayed.

Setting the original theme for the main menu

Change the main menu icons or background image, based on "Standard".

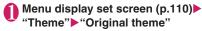

- To reset the changed icon/background image to default
- ► ch (FUNC) Select a reset method



Select any item:

Mail, i-mode, i-αppli, Settings/NW Service, Data box, LifeKit, i-concier, Phonebook, Own data, MUSIC, 1Seq, Osaifu-Keitai Select the icon image for the main menu from My picture.

Background image Select the background image for the main menu from My picture.

NOTE

- The following images cannot be set:
 - · Image whose width or height is larger than 854
 - Image larger than 500 KB
 - · Flash movie
- If the image is larger than the display area, the size is reduced without changing the aspect ratio. If the image is smaller than the display area, the image appears in the center.

Creating an original menu <Original menu>

You can add often-used functions as "Original menu" and quickly call them. → p.33

- Up to 10 original menu items can be added.
- The main items of "Mail", "i-mode", "i-αppli" and "i-concier", and the sub items and branch items of "Settings/NW Service", "Data box", "LifeKit", "Phonebook", "Own data", "MUSIC", "1Seg" and "Osaifu-Keitai" can be set as the Original menu.
- The same function cannot be added twice.





(Original)





FUNC Original menu screen (p.110)

Add to org. menu

Sort·····Use to move the highlighted menu to sort the original menu.

Add desktop icon → p.116

Reset org. menu ······ Reset the menu to default.

Release, Release all

Setting the Display Mode of the Indicator Display

<Indicator display>

Set the display mode of messages or clock on the indicator display.

 "How to View the Indicator Display (Rear Panel Display)" → p.28



■ To display nothing on the indicator display ▶"OFF"

2

Select any item:

Disp. clock only·····Set whether to display the clock only. When set to ON, messages for incoming calls and animations such as alarm notifications are not displayed.

Clock type······Select from Digital 1 to Digital 4 for the clock display.

CalledSet whether to display the other party's phone number (name) while receiving calls.

Mail ····· Set whether to display the sender, date and time, subject when receiving mail.

Connection Set whether to display an image or animation while sending/receiving voice/videophone or PushTalk calls or while infrared data exchange/iC communication, data communication or IC authentication is in progress.

Background i- α **ppli**······Set whether to display the i- α ppli for the indicator display.

Time signal······Specify whether to display the time signal.

When set to ON, also set time (30 minutes, 60 minutes), color (Color 1 to 7) and pattern (Pattern 1 to Pattern 10).

When you select an item and move the highlight, the incoming call lamp flashes in the highlighted color or pattern.

Display time······Select 15 seconds/30 seconds/60 seconds.





NOTE

 When a phone/videophone call with Chaku-moji arrives, the Chaku-moji appears on the indicator display (the Chaku-moji and receiving indication appears alternately). However, when "Called" is set to "OFF", the Chaku-moji does not appear.

Setting the Flashing Mode of the Incoming Call Lamp for Incoming Calls

Set the illumination flashing color or mode (pattern) used when you receive voice, videophone or PushTalk calls, mail, MessageR/F or i-concier information.

 You can set different flashing colors for calls or mail from specific phone numbers, mail addresses or groups, →p.93



"Settings/NW Service" "Incoming call" "Illumination" Select any item:

Set color.....Select Phone/Videophone/
PushTalk/Mail/MessageR/MessageF/i-concier.
Illumination lights in the highlighted item (color).
Color 1 to 7: Flash in the selected color.
Gradation: Flash in the order from Color 1 to 7.

When "Mail" is selected, the illumination for i-mode mail and SMS is set.

Set pattern Select Pattern 1 - Pattern 10 or Melody linkage for an illumination flashing pattern.

Missed info Set whether to keep on flashing the incoming call lamp when a missed call or new mail (i-mode mail, Area Mail, SMS) icon appears on the screen (The interval of flashing is about 5 seconds, and about 10 seconds in Power saver mode).

NOTE


- If "Pattern 1" "Pattern 4" is set as a ring tone, the incoming call lamp flashes to the ring tone regardless of the "Pattern" setting.
- Even when set to "Melody linkage", "Pattern 1" applies to Chaku-motion or Chaku-Uta-Full[®] if the ring tones do not contain melody linkage flashing pattern.
- The illumination color for Area Mail is Color 5 (red) regardless of this setting.
- When you receive Earthquake Early Warning Area Mail, the incoming call lamp flashes linked with the beep regardless of this setting.
- When multiple mail or MessageR/F are received simultaneously, the following illumination operations are performed:

Received content	Illumination operations
Multiple mail are received	The Illumination
Mail and MessageR/F are received simultaneously	setting set for the last received mail applies.
MessageR/F are received simultaneously	The Illumination setting set for the MessageR applies.

Illumination priority>

- When the Illumination settings are duplicated, the priority is assigned as follows:
 - ① Illumination for Ring tone/Image (individual)
 - ②Illumination for Ring tone/Image (group)
 - 3 Illumination for B mode of 2in1
 - 4 Illumination setting

Set the Illumination flashing performed during a voice call, videophone or PushTalk.

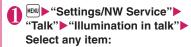

OFF.....Do not flash.

Color 1 to 7.....Flash in the selected color.

Gradation 1 to 3

Setting the Flashing Mode for Handset Closing <Closed illumination>

- "Settings/NW Service" "Other settings" ■ "Illumination" "Closed illum." ■ "ON"
 - To not use closed illumination

 "OFF"
- Select any item:

Set color······Select an illumination flash color. Color 1 to 7: Flash in the selected color.

Set pattern Select Pattern 1 - Pattern 10.

NOTE

- When you select an item and move the highlight, the incoming call lamp flashes in the highlighted color or pattern.
- With "Time signal" set to "ON" and the timer reaches 0 for the time-signal display during "Closed illumination" flashing, "Time signal" takes priority. When the Birthday reminder and Time signal settings are duplicated, the Birthday reminder takes priority.

Setting the Flashing Mode of Key Illumination Key Illumination

Set key illumination flashed when the FOMA terminal is opened or on the birthday stored in Phonebook, or whether to flash key illumination linked to emotion-expressing mail.

- Phonebook birthday → p.86
- "Emotion-expressing mail"→p.156



■ To not use key illumination

"OFF"



Select any item:

Power ON, Power OFF······Set whether to flash when the power is turned on/off.

Incoming call, Dialing.....Set the flashing pattern for voice/videophone calls and PushTalk calls.

Talking start·····Set the flashing pattern when a voice/videophone call starts or you get the PushTalk speech right.

Mail receiving.....Set the flashing pattern for mail (SMS, i-mode mail, MessageR/F, Area Mail) and i-concier information reception.

Mail sending.....Set the flashing pattern for mail (SMS, i-mode mail) transmission.

Emotion·····Set whether to flash in the emotion-icon-linked pattern when the Mail detail screen is opened.

 Regardless of unread/read, select Always to flash key illumination at all times, or Unread mail only to flash for unread mail only.

Alarm·····Set the flashing pattern for each alarm (Alarm, To Do list, Booking program/Timer recording, Notice designate calls).

Snooze Set whether to flash during alarm snooze.

Ir/IC Exchanging·····Set whether to flash during infrared data exchange or iC communication.

Missed call·····Set the flashing pattern when the Missed call or New mail (i-mode mail, Area Mail, SMS, MessageR/F) icon is displayed. **Open**······Set the flashing pattern when the FOMA terminal is opened.

Event·····Set whether to flash key illumination on New Year's Day, the eve of the beginning of spring, Christmas, etc.

Birthday ······ Set the flashing pattern when the Birthday reminder icon is displayed.

NOTE

<Incoming call, Dialing, Talking start, Mail receiving, Mail sending, Alarm, Missed call, Open. Birthday>

- When you select an item and move the highlight, the key illumination flashes in the highlighted
 setters.
- When set to "Random", the pre-installed or downloaded patterns are set randomly.
- To turn off key illumination flashing, select "OFF".

<Event>

- The flashing pattern of key illumination on New Year's Day, the eve of the beginning of spring, Christmas, etc. is dedicated to each event.
- The eve of the beginning of spring will be always February 3.

<Missed call, Open, Event, Birthday>

 The lamp flashes when key illumination can flash and the FOMA terminal is opened. The following is the priority sequence of key illumination flash:
 Missed call ②Birthday ③Event ④Open

Setting the Key Backlight Color Key backlight>

Change the key backlight color.



Single Color1 to Single Color7·····Light up in the selected color.

Random·····Change randomly from Single Color1 to Single Color7.

Dual Color1 to Dual Color3······Light up in a two color combination.

Multi Color1 to Multi Color3······Light up in a multiple color combination.

OFF Turn off the key backlight.

NOTE

 When you select an item and move the highlight, the key backlight lights up in the highlighted color.

Select "Normal", "Vivid" or "Dynamic" for the FOMA terminal display mode.

● "Settings/NW Service"

"Display" "Image display mode"

Select any item:

"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:
"Select any item:

Normal Display in normal quality.

Vivid Display in vivid quality.

Dynamic·····Display in high contrast mode.

NOTE

- "Visual image effect" under "1Seg effect" applies when viewing 1Seg.
- While selecting an item, move the highlight to preview each mode and check the effect.

Setting Display Vertical/ Horizontal Switch

<Auto-change Screen>

When the FOMA terminal detects the display orientation, change automatically between vertical and horizontal displays (ON), or change manually (OFF). → p.30

"Settings/NW Service"
"Other settings" - "Auto-change
Screen" - "ON" or "OFF"

NOTE

- Press (Training) on the Auto-change Screen setting screen to try the change operation.
- In ECO mode, the display cannot be changed automatically even if set to "ON". Change the display manually.

Setting Machi-Chara as Standby Screen Machi-chara setting>

Set Machi-chara, and a character appears on the standby screen to inform you of i-concier information, missed call, new mail, unread mail, etc. Operations and display of Machi-chara change according to the FOMA terminal status, hour, etc.

- Machi-chara can be downloaded. → p.193
 - - To leave Machi-chara set to off

 "OFF"
- Select a folder

Guide to the Machi-chara list screen → p.319

- To search Machi-chara by i-mode

 "Search by i-mode" "YES"
- Select Machi-chara
 - When selecting "Not available" or "No preview data"

"Not available" Machi-chara cannot be set. There may be a case where "No preview data" Machi-chara can be set.

NOTE


 Machi-chara cannot be set simultaneously when Calendar or i-αppli is set as the standby screen.

NOTE

 A part of Machi-chara may not appear depending on the action.

Setting the Effects for Display Change <Screen effect>

Set whether to apply effects to screen change performed when the standby screen reappears.



Changing Character Font

Specify your preferred font to use for text displayed on the screen.

On the standby screen

7 (1 second or longer)▶Select
any item:

Font type ······ Select Gothic/Ming-cho.

Thickness ······ Select Thin/Bold.

Character size·····Set the font size for the respective screens.

Standard, X-large ······ Set the font size of the screens to Standard/X-large all at once.

Separate setting ·····Set the font size of the respective screens. "Screens that the Separate setting applies to" → p.115

Screens that the Separate setting applies to

Item	Target screen
Char. Input	Text entry (edit) screen, new mail screen (excluding SMS), preview screen (excluding SMS sending, etc.)
Mail	Mail list/detail screen, screens displayed when referring to header/ signature/template
i-mode	i-mode Browser screen, Bookmark folder list screen, Bookmark list screen, Screen memo, Message list/detail screen
Full brw.	Full Browser screen (Keitai mode only)

Item	Target screen
Phonebook	Phonebook list/detail screen, My Profile screen
History data	Redial/Dialed/Received calls screen (list), Address screen (list)
i-Channel	i-Channel ticker
Desktop info.	Desktop info

NOTE

- This function does not apply to text on the phone number entry screen, etc.
- Only the Keitai mode font size can be set in "Character size" - "Separate setting" - "Full brw.". → p.184
- Character size can also be changed using the setting menu or function menu of an item that the Separate setting applies to.

Setting Clock Display

<Clock display>

Set the display size or color of the clock time. You can also hide the date and time of the main clock.

 On screens other than standby screen, only the time appears in small size at the top of the screen regardless of this setting.



Display······Select ON/OFF. When set to "OFF", the date and time do not appear.

Size ····· Select Big/Small/Up Small.

Color Select Black/White.

Using Desktop Icons/Desktop Info <Desktop icon>

Pasting often-used phone numbers or functions into the standby screen as desktop icons allows you to access those numbers or functions quickly. When you cannot answer an incoming call or when you receive a mail, the icon appears on the standby screen to let you know.

Phone numbers or functions pasted as desktop icons, or notification icons for missed calls or new mail, appear in the Desktop info display area.

Desktop icons that can be pasted

Icon	Description
Display data	
Mar.	Phone number
Pa+ 1 / SMF Pa+ 1	Mail address/SMS address
gr.	Inbox
■1 / FB1	URL (i-mode/Full Browser)
	One-touch multi window (i-mode/ Full Browser)
Ç <u>ğ</u> ı	i-αppli software * The icon varies depending on the i-αppli.
21/11	Image/Movie/i-motion
91	Chara-den
√m ·	Melody
PDF 1	PDF data
PLI	Manga&Book
Activate a function	
	Original menu
Q	Quick search
ch / 🖸	i-Channel/i-concier
/ ** / ** /	Photo mode/Movie mode/Voice mode
	Text reader/Bar code reader
	1Seg
-MI / A	Music&Video Channel/Music
	Quick Album
-	Receive Ir data
Citi	Life history viewer
* / *	Schedule/To Do list
=	Calculator
	Text memo
	Dictionary
*	Bluetooth

Icon	Description
	Send the current location information to the LCS client
	Illumination
3/4	Pedometer

When a desktop icon is highlighted, up to the first 11 double-byte or 22 single-byte characters of the title are displayed. The title can be edited. →p.117

■ Desktop icons that provide information

Icon	Description
Miss	Missed calls
Msg Msg	Record message/Record VP message
₩ VM	Voice Mail
UPDATE	Data Security Service update failed
New	New mail
R/F New	New message
Toruca	New ToruCa
FINISH ALARM	Recorded program/Missed program
UPDATE Miss	Music&Video Channel download completed
© <u>Ľ</u> Notrun	i-αppli not yet active
APPLI	i-αppli standby screen aborted
Invite	i-αppli call
Search	Network re-search
CONNECT	USB mode
((Å)) Miss	Missed alarm
Info	Birthday
¥ MAX	Notice designate calls
UPDATE	Software Update info, successful, completed, rewrite notice
UPDATE	Scanning function pattern data update completed, failed, new pattern data

Icon	Description
Miss SUCESS Miss	GPS Location request/Response succeeded without operation/ Response failed without operation

- * A desktop icon that provides information disappears when the function is called or activated.
- * To erase the desktop icon that provides information. press CLR for 1 second or longer (some icons do not disappear).

Pasting desktop icons

Select "Add desktop icon" from the function menu of the function or the data list/detail screen.

 You can paste up to 15 desktop icons for Theme 1 -3 respectively.

<Example: To paste a phone number from the phonebook>

"Add desktop icon" in the function menu of the Phonebook detail screen → p.91



Using desktop icons to call data or functions



On the standby screen



A desktop icon can be selected. The title of the highlighted desktop icon appears in a balloon. Press [(Info) to display the Desktop info screen. → p.118



Function menu⇒p.117

If the Desktop info appeared last time, the Desktop info screen appears. Press (Icon) to display the Desktop icon screen.



🚺 Use 🔁 to select a desktop icon

If 5 or more desktop icons are registered "

"

appear on the left and right of the screen." Use (to scroll through the icons.

Changing the desktop theme of the standby screen



■ "Settings/NW Service" "Display" - "Desktop icon"

" SET " appears for the active theme.



Function menu⇒p.117



Select a theme "YES"

When adding desktop icons (p.117), you can paste icons for the selected theme.

- To check the theme content
- ► Highlight a theme ► (Detail)



Function menu⇒p.117



Desktop icon screen (p.117)/ FUNC Desktop screen (Theme/Detail) (p.117)

Create icon*1.....Select an icon to paste from the function name list, then select the theme.

Sort*2.....Sort icons.

Display setting*3......Select Display always/Display at use. When set to Display at use, the desktop icons appear when you press .

Edit title

CHG icon image*2.....Select Select icon image/ Default icon image. Select Select icon image to change the icon image. Select Default icon image to reset the icon image to default.

Icon info setting*1......Display the icon title, type. content. etc.

Copy*4.....Select Copy this/Copy selected/Copy all to copy icons to another theme.

Move*4.....Select Move this/Move selected/Move all to move icons to another theme.

Reset desktop*2.....Reset the desktop of the displayed theme (Theme 1 - 3) to default.

Original menu*1 → p.110

Delete *2······Select Delete this/Delete selected/

- *1 : Only appears on the Desktop icon screen.
- *2 : Does not appear on the Desktop screen (Theme).
- *3 : Only appears on the Desktop screen (Theme).
- *4 : Only appears on the Desktop screen (Detail).

Setting the desktop display



Change desktop······Change the desktop theme.

Display setting······Select Display always/
Display at use. When set to Display at use, the desktop icons appear when you press

Stand-by display → p.107

Kisekae Tool set. → p.121

ch-button setting······Assign the function to the function key ch. → p.357

Set time ····· Set the clock on the standby screen. → p.115

Using Desktop info to call data or functions

On the standby screen







Desktop icon

Use 🗗 to select information

■ Desktop info items

Item	Operation performed when selected
What's New	Icon information: Desktop icon (p.116) or popup message (p.211) that provides information
New mail	New mail: The Received mail detail screen
Schedule	Today/Tomorrow's schedule: The Schedule detail screen Today/Tomorrow's To Do list: The To Do list detail screen
i-Channel	i-Channel: i-Channel
Favorite	Function: Desktop icon (p.116) that can be pasted
Favorite user	Phone number: The phone number entry screen with a phone number entered
	Mail address: The New mail screen with a mail address entered
Favorite site	Bookmark: Site
Favorite image	Still image: Image Movie or i-motion: Movie or i-motion
Calendar	Calendar: The Schedule screen
Clock	Clock: The Alarm setting screen The Set main time screen when the time is not set
Setting	Setting: Select or sort items to display in the Desktop info area

NOTE

- While playing music, movies or i-motion cannot be played.
- When the Character size of "Desktop info." is set to "Large", "Enlarged content" appears in large font size. When set to "Standard", "Normal content" appears in normal font size.

^{*:} When 2in1 is in B mode or Dual mode, the current 2in1 Stand-by display is changed. → p.406

Displaying Desktop Icon Messages for New Mail in 3D Animation <3D display setting>

When the new mail or message desktop icon is highlighted, the new mail subject or emotion-expressing mail icon appears. Display pictograms contained in the mail subject or the emotion-expressing mail icon in 3D animation.

- The first 22 double-byte or 44 single-byte characters of the subject appear.
- Emotion-expressing mail icon → p.156



New mail (Example: When set to "ON")



New mail (Example: When set to "OFF")



■ To disable 3D animation

▶"OFF"

NOTE

- When the destination folder is locked, the emotion-expressing mail icon, pictogram 3D animation or subject does not appear.
- When the subject of a new mail or message is "No title" or SMS is received, the emotion-expressing mail icon appears in 3D animation and "New mail" or "New message" appears when the desktop icon is highlighted.


Selecting Icons to Display on the Standby Screen <|cons setting>

Enable/Disable 🔁 to select icons, date and time displayed on the standby screen.

● "Settings/NW Service" "Display" • "Icons setting" • "ON" or "OFF"

Selecting icons

<Example: To select icons with the multi-function key $(\stackrel{\frown}{[\Gamma]}) >$

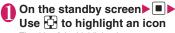

The title of the highlighted icon appears.





(Select)

The setting screen for the selected icon, etc. appears.

Selectable icon

Icon	After selected
	"Display design"
	"Display design"
self	"Self mode" release screen
	Unread mail list
(100 pt)	"Inbox"
	"Check new messages"
	"Receive option"
	Select "Unread mail list", "Inbox", "Check new messages" or "Receive option"
(M)	Unread mail list
RRFF	"MessageR", "MessageF"
	"Check new messages"

Icon	After selected
etc.	Select "MessageR", "MessageF" or "Check new messages" * The selectable items vary depending on the combination.
0 %	Lock function selection screen
* *	"Permit to send loc."
	i-concier screen
W65	"i-αppli call logs"
DOC.	"i-concier"/"i-αppli call logs" selection screen
8 8	"Bluetooth" menu screen
No Am Am	"Vibrator" or "Mail/Msg. ring time" selection screen
	Manner mode is not set: "Ring volume" or "Mail/ Msg. ring time" selection screen Manner mode or Super silent is set: Message indicating that the setting is not available Original manner is set: "Original" or "Mail/Msg. ring time" selection screen
	"Manner mode set"
<₽	"Manner release time"
2	"Manner start time"
**************************************	"Manner start time"/ "Remote Control"
5	"Remote Control"
₽	"Schedule", "Alarm", "To Do list", "Booking program" or "Timer recording" selection screen
7 - 7	"Voice Mail"/"Play messages" screen
## ## ## ## - ## ## - ##	Message notifying that nothing is recorded Or "Play/Erase msg."
	Message notifying that nothing is recorded Or "Play/Erase VP msg."

Icon	After selected
	"Privacy angle"
3	"Keypad lock"
	"Side key guard"
FC Our	"IC card lock setting" unlock screen
SEY SEY Cur	"Side key guard"/"Release IC card lock" selection screen
	"USB mode setting"
Date	"Schedule"
	"Set main time" when the time is not set
Main clock	"Alarm"
	"Set main time" when the
	time is not set
Sub clock	"Set sub clock"
	Switch active tasks
# * * * 9 ,	

Setting Kisekae Tool

<Kisekae Tool setting>

Use the Kisekae Tool package to set various FOMA terminal designs such as screens and ring tones all at once.


- In addition to Kisekae Tool designed for the phone color, "Black&White, "拡大メニュー" (Enlarged menu) and "ダイレクトメニュー" (Direct menu) are stored at the time of purchase.
- You can download Kisekae Tool packages from sites. → p.195

The downloaded packages are stored in Data box, and you can check the content. → p.302

- The following items can be set all at once:
 - "Display setting"
 - · "Select ring tone"
 - "Map/GPS settings" "Tone/Vibrator" "Select ring tone*1"
 - "Clock Alarm Tone set"
 - "Menu display set" "Theme"
 - "Clock display"
 - "Display design*2"
 - "Indicator display" "Clock type"
 - "i-Channel" "i-Channel setting" "Ticker color setting"
 - · "Change skin" of Music Player
 - "Illumination" "Set color"
 - "Illumination" "Closed illumination", "Key illumination" (Open), "Key backlight"
 - *1 : "Select ring tone" can only be performed for "
 - *2: "Soft key" can only be performed for " ata.
- In 2in1 setting, changes made to Stand-by display, voice call/videophone receiving display/ring tone/ illumination and mail ring tone/illumination apply only to A mode. Other changes apply to all modes.
- When you use Kisekae Tool to change the menu display design, the menu structure may change in accordance with the frequency of use. Also, some menu numbers (p.424) assigned to functions do not work.

Setting a package

Save the current settings to "お気に入り" (Favorite) before setting all at once, and you can restore the settings later. → p.122





Function menu⇒p.121



Select an item▶"YES"

"お気に入り" (Favorite) is not stored at the time of purchase.

■ To check the settings

► Highlight an item ► (Detail) ► Highlight an item ► (Play)

■ To search packages by i-mode

▶"Search by i-mode"▶"YES"

NOTE

- Items to be changed vary depending on the package.
- When a package is set, the color of "Disp. call/ receive No." may change.
- If "ダイレクトメニュー" (Direct menu) is selected, main and sub menus appear in Japanese.

FUNC Kisekae Tool set screen (p.121)

Edit title, Check Setting info

Reset Setting info······Reset the "お気に入り" (Favorite) settings.

Saving the current settings to "お気に入り" (Favorite)

削 Kisekae Tool set screen (p.121)▶ Highlight "お気に入り" (Favorite)▶ ☑ (Detail)

The "Contents checking" screen appears.
"No data" appears when

nothing is stored.



Function menu⇒p.122



● Changing "お気に入り" (Favorite) settings

Change items stored in "お気に入り" (Favorite) on the contents checking screen.

Contents checking screen (p.122)

Select an item Change the setting

NOTE

- The "i-αppli display" settings are not saved to "Stand-by image" under "お気に入り" (Favorite).
- If an image, i-motion or melody saved as "お気に入り" (Favorite) is deleted, it is also deleted from "お気に入り" (Favorite), and "No data" appears.

Contents checking screen (p.122)

Set all*1, Finish*2.....Set the currently displayed items all at once.

Take Setting info*2······Obtain the current settings and save them to "お気に入り" (Favorite).

Reset Setting info*2......Reset the settings saved as "お気に入り" (Favorite), and set "No data" all.

- *1 : Available only for "拡大メニュー" (Enlarged menu), "ダイレクトメニュー" (Direct menu) and Kisekae Tool package (謹即) downloaded from sites.
- *2 : Appears for " ar data.

Security Settings

Security code	
Security Codes Used on the FOMA Terminal	124
Changing the Security Code	125
Setting PIN Codes PIN setting	125
Releasing PIN Lock	125
■ Restricting operations and functions on mobile phone	
Restricting Others from Using	125
Restricting Display of Phonebook and Schedule etc Secret mode/Secret data only mode	127
Preventing Others from Viewing DataSecret folder	129
Preventing Others from Viewing Your Personal Information or	
Performing the Phone/Mail OperationsOriginal lock	130
Locking Key Operations AutomaticallyKeypad lock	134
Using IC Card AuthenticationIC card authentic.	134
Restricting Side Key OperationSide key guard	135
Using Face Authentication Face authentication	136
■ Restricting outgoing/incoming calls and messages	
Preventing Unwanted Mail Display Mail box lock/Folder lock	137
Restricting Incoming and Outgoing Calls for Specific Phone NumbersRestrictions	137
Rejecting a Call without Caller ID Call setting w/o ID	138
Muting Ring Tone for a Caller Unset in Phonebook	139
Rejecting a Call from a Caller Unset in Phonebook	139
Restricting Making/Receiving Calls	140
Using Data Security ServiceData security service	140
Resetting Various Functions Reset settings	142
Resetting to the Factory SettingsInitialize	142
Resetting Data by Remote Control	143
Other security settings	
Other Security Settings	144

Security Codes Used on the FOMA Terminal

To make the FOMA terminal more convenient and secure, some functions require the security code. In addition to the security code for various operations, you also have the network security code for network services and the i-mode password. Use FOMA terminal security codes appropriately.

Notes on the security codes

- When selecting a security code, avoid using personal information such as date of birth, telephone number, street address/room number. "1111" and "1234" that may be guessed by a third party. Keep records of your security codes.
- Keep your security code private, and avoid sharing it with others. If the security code is disclosed to others and abused, DOCOMO shall have no liability for any damage due to any unauthorized use of it.
- If you have forgotten your security codes, please bring your FOMA terminal, FOMA card (UIM) and official documents that verify your identity, such as a driver's license, to a docomo Shop Service Counter. For details, contact the inquiries number provided on the back of this manual.

Security code

The default security code is "0000" (four zeros). Please set a new security code. → p.125

When the security code screen appears, enter the 4- to 8-digit security code and press (Set).



- The entered security code is displayed as a " " string and the numbers are not displayed.
- If you enter a wrong security code or enter nothing for about 15 seconds, a warning tone sounds and a warning message appears.

■ Network security code

4-digit number required to verify your identity, used for various applications at a docomo Shop, docomo Information Center or in "お客様サポート" (Customer support), and network services. Your code is set at time of subscription, and you can change it to a different 4-digit number of your choice.

You can change your network security code on the general support PC site "My docomo" (Japanese) if you have "docomo ID/password".

You can also change it via i-mode, in "各種設定(確 認·変更·利用) " (Various settings [confirm, change, usel) under "お客様サポート" (Customer support).

* For details on "My docomo" and "お客様サポート" (Customer support), see the back of the back cover of this manual

i-mode password

You will need a 4-digit "i-mode password" to register or unregister site in Mv Menu, subscribe to or cancel Message Service and fee-based i-mode sites, and enter Mail Settings. (There may be other passwords set independently by the information service providers.)

The default i-mode password when you apply for i-mode service is set to "0000". Please set a new password.


To change the password from the i-mode site, select "English" ➤ "Options" ➤ "Change i-mode Password".

■ PIN1 code and PIN2 code

You can set 2 PIN codes on the FOMA card (UIM) for your FOMA terminal, the PIN1 code and PIN2 code. These security codes are set to "0000" (four zeros) at the time of subscription. You can change your code to a different 4-digit number of your choice. →p.125 PIN1 is a 4- to 8-digit number (code) and must be entered every time you insert the FOMA card (UIM) into the FOMA terminal or turn on the handset power. The PIN1 code is used to verify the handset user and prevent others from gaining unauthorized access to your mobile phone handset. When the PIN1 code setting is set to "ON", you can make and receive calls and use handset functions after entering the correct PIN code.

PIN2 code is a 4- to 8-digit password that you enter when using or requesting user certificates or performing tasks such as resetting total call charges. * When you purchase a new FOMA terminal and insert the current FOMA card (UIM), use the PIN1 and PIN2 codes you set on the current card.

When the PIN1 or PIN2 code entry screen appears, enter the 4- to




Fx PIN1 code

- The entered PIN1/PIN2 code is displayed as a "_" string.
- If you enter an incorrect PIN1/ PIN2 code three times consecutively, the PIN1/PIN2 code is locked and cannot be used any more (the remaining number of times for the entry appears on the screen). After you enter the correct PIN1/PIN2 code, the number of times for entry is reset to three.

■ PIN Lock Disable Code

The PIN Lock Disable Code is an 8-digit number used to unlock PIN1 or PIN2. The PIN Lock Disable Code cannot be changed.

• If the wrong PIN Lock Disable Code is entered ten times in a row, the FOMA card (UIM) is then completely locked.

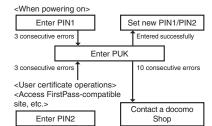

Changing the Security Code Change security code>

"Settings/NW Service"
"Lock/Security" "Change
security code" Enter the current
security code Enter a new 4- to
8-digit security code "YES"

Setting PIN Codes <PIN setting>

You can set PIN1 code and PIN2 code for the FOMA card (UIM). PIN1 code and PIN2 code → p.124

- PIN1 code, PIN2 code and PIN1 code entry set are saved to the FOMA card (UIM).
- To change the PIN1 code, set "PIN1 code entry set" to "ON".
- "Settings/NW Service" "Lock/Security" PIN setting" Enter your security code Select any item:

Change PIN1 codeEnter the current PIN1 code (4- to 8-digit) and enter a new PIN1 code twice (for confirmation).

Change PIN2 code Enter the current PIN2 code (4- to 8-digit) and enter a new PIN2 code twice (for confirmation).

PIN1 code entry set ······Set whether to require the PIN1 code (ON/OFF) when the power is turned on.

Releasing PIN Lock

If you enter an incorrect PIN1 code or PIN2 code three times in a row, you must unlock the locked PIN1 code or PIN2 code then set a new PIN1 code or PIN2 code.

<Example: To unlock the PIN1 code>

Enter the 8-digit PIN Lock Disable Code



Enter a new 4- to 8-digit PIN1 code

Enter the new PIN1 code again

Restricting Others from Using <Dial lock/Omakase Lock>

To lock your FOMA terminal to prevent others from using, set "Dial lock" that can be set on the FOMA terminal or "Omakase Lock" that can be set remotely.

- Dial lock and Omakase Lock will not be unlocked by turning off power.
- Operations and functions available when Dial lock or Omakase Lock is set

Dial lock	Omakase Lock
0	0
0	×
0	×
0	0
0	0
0	0
0	×
0	0

: Available : Unavailable

*: Voice, videophone, or PushTalk calls cannot be made. If a PushTalk call arrives, no arrival action takes place and the call is recorded in Missed Calls. When the Public mode (Driving mode) is set, incoming calls cannot be received.

- When Dial lock or Omakase Lock is set, the "Alarm", "Schedule", "To Do list", "1Seg Booking program" and "1Seg Timer recording" alarms will not work. Once Dial lock or Omakase Lock is released, the "♠ (Missed alarm)", "♠ (Missed program)" or "♠ (Recorded program)" desktop icon appears on the standby screen.
- The desktop icon is not displayed when Dial lock or Omakase Lock is set. Once Dial lock or Omakase Lock is released, these icons reappear.
- Even when you receive calls from callers in the phonebook, only the phone numbers appear when Dial lock or Omakase Lock is set.

Setting the Dial lock

- "Settings/NW Service"

 "Lock/Security" → "Lock" ➤ Enter

 your security code → "Dial lock"
- Operations when Dial lock is active
- "Dial lock", " \(\begin{align*} \



- You can still receive MessageR/F, i-mode mail or SMS automatically when Dial lock is set, but the receiving screen or received results screen does not appear. Once the Dial lock is released, an icon for received message/mail appears on the standby screen.
 - You can receive Area Mail automatically and view its content

Releasing Dial lock

 If you fail to release Dial lock 5 times in a row, the power turns off. You can turn it on again.



Dial lock is released and " \(\frac{1}{6} \)" and " \(\frac{1}{6} \)" and " \(\frac{1}{6} \)".

■ To release the lock using the IC card authentication → p.134

NOTE

 Even if an incorrect security code is entered when releasing Dial lock, no error message appears.
 Press — and enter the correct security code.

Using Omakase Lock

You can lock your Phonebook and other personal data as well as the "Osaifu-Keitai" IC card function on your phone if you misplace or otherwise lose it. All you have to do is contact DOCOMO by telephone. Protect your privacy and Osaifu-Keitai. If Omakase Lock cannot be activated at the time of application, it will be activated automatically if the FOMA terminal becomes capable of communications within one year. The FOMA terminal will not be automatically locked even if it becomes capable of communications within one year if a new FOMA card is issued (only when locked with the number specified) in the following cases; the line is cancelled, service suspended, phone number changed, lost, etc.

To release the lock, contact DOCOMO by telephone, etc.

- * If you are a DOCOMO Premier Club member, you can use this service any number of times with no commission. Charges will apply if you have not join a DOCOMO Premier Club yet. (However, application is free if made at the same time as application for service suspension or during service suspension.) Omakase Lock charges are covered by Keitai Anshin Pack flat-rate monthly charges if subscribed to Keitai Anshin Pack.
- * If "Permit to send loc." is set to "ON" (p.295), location information services that use GPS can be used even when Omakase Lock is activated.

Call Center (for setting/releasing Omakase Lock)

0120-524-360 (Operating time: 24 hours a day)
(only in Japanese)

- * My docomo is also available to set/release Omakase Lock via a PC, etc.
- * For details on Omakase Look, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Operations when Omakase Lock is active

ii Til

06.26FRI

12:05

おまかせロック中です

- "おまかせロック中です" (Omakase Lock active) appears on the screen.
- Omakase Lock locks all key operations except for receiving incoming voice and

videophone calls and turning power on and off, and it disables functions such as IC card functions.

- You can answer voice or videophone calls, but the caller's name and image in the Phonebook do not appear on the screen. Only the phone number appears.
- Mail sent to the FOMA terminal while Omakase Lock is activated will be stored at the i-mode center. Area Mail is discarded.
- You can turn the power on/off, but Omakase Lock will not be unlocked by turning off power.
- It will not lock the FOMA card (UIM), microSD cards, etc.

NOTE

- When another function is active, the function is terminated and the FOMA terminal is locked.
 (Data being edited may be discarded before the function terminates.)
- Forced locking with Omakase Lock can be done even when other functions are operating. In this case, releasing Omakase Lock restores the locked status before Omakase Lock is activated. (Secret or Secret data only mode is deactivated.)
- You cannot lock/unlock the FOMA terminal when it is out of range, turned off or used overseas.
- Omakase Lock is not available when you use mova with Dual Network Service.
- If the subscriber and FOMA terminal user are not the same, the subscriber may request the FOMA terminal be locked without the consent of the user.
- Omakase Lock can only be deactivated when the FOMA card (UIM) with the same phone number as that on it at the time of activation is inserted into the FOMA terminal. If you cannot deactivate Omakase Lock, contact the inquiries number provided on the back of this manual.
- If you attempt to deactivate Omakase Lock during a voice or videophone call, the lock is deactivated after the call is terminated.

Restricting Display of Phonebook and Schedule etc.

<Secret mode/Secret data only mode>

When the phonebook or schedule entries are stored in Secret or Secret data only mode, these entries are stored as secret data and are not displayed in normal mode. To display secret data, activate Secret mode (display all data including secret data) or Secret data only mode (display only secret data).

 You can also save data in "My picture", "i-motion", "Received mail", "Sent mail" and "Bookmark" to the secret folder to prevent others from viewing the data. → p.129

Activating Secret or Secret data only mode

● "Settings/NW Service" "Lock/Security" ► "Secret mode" or "Secret data only mode" ► Enter your security code

When Secret mode is activated, "" appears. When Secret data only mode is activated, "" flashes and the number of stored secret files is displayed for about 2 seconds.

Icons displayed when another lock is set at the same time → p.25

- Storing/Viewing secret data and resetting secret data to normal data
- You cannot save phonebook entries as secret data to the FOMA card (UIM).
- To save phonebook entries or schedule events as secret data

Save the data in Secret or Secret data only mode. Adding information to the phonebook → p.86 Adding events to your schedule → p.359

- To turn stored phonebook entries to secret data Select "Set secret" from the function menu of the phonebook detail screen.
- * If you save a phonebook entry in Choku-Den as a secret data, the entry is deleted from Choku-Den.

■ To view secret data

Activate Secret or Secret data only mode, then view the phonebook or schedule.

Searching the phonebook → p.90 Checking your schedule → p.360

■ To restore secret data to normal data

Activate Secret or Secret data only mode, open the "Phonebook detail" screen (p.89) or "Schedule list" screen (p.360), and select "Release secret" from the function menu.

Releasing Secret or Secret data only mode

On the standby screen while in Secret or Secret data only mode, press

Secret or Secret data only mode is released and "\$\sum_" disappears.

When another function is running, you cannot release these modes.

You can also release by selecting Solution "Settings/NW Service" Lock/Security" Secret mode" or "Secret data only mode".

NOTE

- When a secret entry is highlighted on the list screen in Secret mode or the secret data detail screen is displayed, the lit ""," starts flashing.
- "Phonebook" or "Schedule" entries stored as secret data can only be accessed, edited, deleted or viewed in Secret or Secret data only mode. In normal mode, the alarm tone sounds for a secret schedule event, but no alarm message is displayed.
- If a call arrives from a caller stored as secret with the caller ID sent, the stored name and image are not displayed, and only the phone number is displayed. Only the phone number is displayed in "Received calls". When Secret mode or Secret data only mode is activated, the stored name is displayed in "Received calls".
- When mail arrives from a sender stored as secret,
 "
 " and "
 " do not appear on the "Received result" screen and desktop, and the mail ring tone does not sound if Secret mode or Secret data only mode is released.

NOTE

- When you receive mail from a sender stored as secret data, the mail address is not recorded in the Received address list regardless of this function. The mail address is recorded if the sender is stored as normal data in Secret data only mode.
- Mail sent from a sender stored as secret is not displayed when Secret mode or Secret data only mode is released. The above also applies to sent mail if the recipient is stored as secret data.
- If you edit "Phonebook" or "Schedule" entries in Secret mode, the edited entries become secret data. If you edit a phonebook entry, all the items stored under the edited memory number become secret data.
- If "Dial lock/Omakase Lock" is set at the same time with "Secret mode" or "Secret data only mode", releasing "Dial lock/Omakase Lock" also releases "Secret mode" or "Secret data only mode".
- When you make a call or send mail using a phonebook entry stored as secret data, the call or mail is not recorded in "Redial", "Dialed calls" or "Sent address".
- The birthday reminder of a phonebook entry stored as secret data does not work.

Preventing Others from Viewing Data Secret folder>


Save images, moving pictures, i-motion, received mail, sent mail, and bookmarks you want to prevent others from viewing into the Secret folder that appears only in Secret mode or Secret data only mode.


- Only data stored in the FOMA terminal can be saved to the folder.
- The following table shows the approximate maximum numbers of files that can be stored in a secret folder under each folder:

My picture	i-motion	Inbox
100	10	100
(4 MB)	(10 MB)	(1.2 MB)
Outbox	Bookmark (i-mode Browser/Full Browser)	
100	20	
(1.2 MB)	(12 KB)	

^{*} It may not be possible to store the maximum number of data depending on the size of each data.

<Example: To store an image in My picture into the Secret folder>



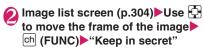

NOTE

 The Secret folder is pre-installed in the FOMA terminal. You cannot create, delete or rename the Secret folder.

<Inbox> <Outbox>

 When you receive an SMS report for an SMS stored in the Secret folder, you cannot select "Disp. SMS report" from the function menu of the SMS detail screen. You can select the option after moving the mail from the Secret folder.

<Desktop icon>

- When an image, movie or i-motion pasted as a desktop icon is stored in the Secret folder, it is not displayed even when the desktop icon is selected.
- When a Bookmark, received mail or sent mail pasted as a desktop icon is stored in the Secret folder, the desktop icon works as usual when it is selected

Function menu of the Secret folder

Some functions for the folder or data in the folder are restricted in the Secret folder. The table below shows the available functions on the folder list screen, the data list screen, and the data detail screen. For information about "Put out", see "Restoring data in the Secret folder back to normal data" (p.130).

■ Function menu when the Secret folder is highlighted on the folder list screen

My picture	i-motion
(p.335)	(p.335)
Add folder	Add folder
Send all Ir data ^{*1}	Send all Ir data*1
Delete all image ^{*1}	Delete all*1
Memory info	Memory info
Inbox/Outbox	Bookmark
(p.166)	(p.190)
Add folder No. of messages*1 Open folder iC trans. all*1 Send all Ir data*1 Send all/Bluetooth*1 CopyAll to microSD*1 Delete read*1*2 Delete all*1	Add folder No. of Bookmarks*1 iC trans. all*1 Send all Ir data*1 Send via Bluetooth*1 CopyAll to microSD*1 Delete all*1

- *1: The data in the Secret folder are not included.
- *2 : Available only on the Inbox folder list screen.

Function menu (Data list screen)

My picture	i-motion
(p.307)	(p.313)
Display image Image info Memory info Title name*1 Delete Put out	i-motion info Memory info List setting Delete Put out
Inbox/Outbox	Bookmark
(p.168)	(p.190)
Color coding List setting Protect*2* Unprotect*2* Protect ON/OFF*3* Unprotect all*3* Mail info*2* No. of messages Delete Put out	No. of Bookmarks Delete Put out

- *1: "Picture" appears when "Title name" is active. *2 : Available only on the received mail list screen.
- *3: Available only on the sent mail list screen.

Function menu (Data detail screen)


T unction menu (Data detail screen)		
My picture (p.307)	i-motion (p.262)	
Image info Set image disp. Full screen*1 Retry Delete this Icon always show	Action setting Play menu Detail Info Select file Help	
Inbox/Outbox (p.169)		
Protect ON/OFF Quick search*2 Scroll Font size Delete Put out		

- *1: "Normal" appears in full screen mode.
- *2: Available only on the received mail detail screen.

Restoring data in the Secret folder back to normal data

To restore the secret data to normal data, move the data from the Secret folder to another folder.

<Example: To restore an image in the Secret folder of My picture to normal data>



Folder list screen (p.304) "Secret" ▶ Use 🗗 to move the frame to an image ch (FUNC) "Put out"

Select a folder

 If you move a mail from the Secret folder, it becomes a normal mail. An old mail may be deleted when new mail are sent/received

Preventing Others from Viewing Your Personal Information or Performing the **Phone/Mail Operations** <Original lock>

Lock functions that use private information such as mail or phonebook entries to prevent others from viewing or altering these improperly. Also, restrict making or receiving voice, videophone or PushTalk calls, or sending i-mode mail or SMS.

- You can individually set functions or data to Original lock (High), (Mid.), or (Low) depending on the usage or purpose.
- Will not be unlocked by turning off power.
- Table 1 (p.132) shows functions and data you can lock. You can set (customize) whether to lock each group or item. → p.131

Activating Original lock

MENU ► "Settings/NW Service" ► "Lock/Security" Lock" Enter vour security code

> Dial lock ElOriginal lock (High) Coriginal lock (Low)

Lock selection

Select Original lock from (High) to (Low)

The lock is activated and the function or data is locked.

" 🗓 " appears on the screen.

Icons displayed when another lock is set at the same time → p.25

- To customize functions or data to be locked → p.131
- To edit the title
- ► Highlight Original lock from (High) to (Low) ch (FUNC)▶"Edit title"▶Enter a title
- To release Original lock
- ▶"OFF"


Operations when Original lock is set

If you try to use the locked function or data when Original lock is set, you are asked to enter the security code.

 After you enter the correct security code, the lock is deactivated temporarily and you can use the locked function or data (functions of "Dial/sending mail" and "Incoming/Mail disp." are not available when the lock is released temporarily). After exiting the active function and returning to the standby screen, the lock is activated again.

<Example: To view an i-mode mail when Original lock is set>





Original lock is released temporarily and the mail menu appears.

- Read i-mode mail
- Exit the mail menu and return to the standby screen

Original lock is activated and " " appears on the screen.

Customizing functions or data to be locked

- You can store particular settings such as locking only the phonebook or restricting only the outgoing calls/mail to Original lock (High), (Mid.), or (Low) depending on the usage or purpose.
- You can set (customize) items to be locked by category, group or function as shown in Table 1 (p.132).

Lock selection screen (p.131) Highlight Original lock (High) to (Low)► (Detail)

"may appears when any of the items in the category is to be locked and "ALL" appears when all items are to be locked



- · "Select"/"Belease" or
 - "Select all"/"Release all" can be selected from ch (FUNC).

Select a category where you want to change the setting

" par appears when any of the items in the group is to be locked and "ALL" appears when all items are to be locked.



∿Data disp. edit del.

· "Select"/"Release" or "Select all"/"Release all" can be selected from ch (FUNC).

Group list

Select a group where you want to change the setting

🚺 Use 🖣 to select a checkbox (🗌) ▶⊠ (Finish)

The checked () items will be locked.

Deselect items you do not want to lock.

 "Select all"/"Release all" can be selected from ch (FUNC).



The number of times you press (Finish)

varies depending on the category.

[Table 1] Functions and data that can be locked with the Original lock

Group	Function	Operations/Notes when locked
Data disp. e	Data disp. edit del.	
Mail	Mail	Lock mail activation. • You can view the Area Mail content. • The main text will not be read out by pressing with the FOMA terminal folded.
	Blog/Mail member	Lock Blog/Mail member activation.
i-mode	i-mode	Lock the i-mode function (i-mode Browser, Full Browser and i-Channel).
	Bookmark	Lock Bookmark function (i-mode, Full Browser) activation.
i-αppli	i-αppli	Lock the i-αppli function, IC card list display and i-Widget screen display. • IC card function is not locked. • When the i-αppli standby screen is set, the i-αppli standby screen is deactivated when the lock is set.
ToruCa	ToruCa	Lock the ToruCa folder list screen display.
		ToruCa can be obtained from the reader even when locked.
i-concier Data box/To	i-concier ol My picture	Lock i-concier activation. Lock each function activation.
Schedule	Music i-motion/Movie Melody 1Seg recording data Kisekae Tool Machi-chara My document Manga&Book Chara-den Voice announce Other Music&Video Channel Camera Bar code reader Text reader Schedule Alarm To Do list Play/Erase wsg. Play/Erase VP msg. Voice memo Voice memo Voice memo (in-call)	The data cannot be accessed from other functions. If data to be locked is set as a ring tone or receiving screen, the default settings are used when the lock is set. (i-motion or image set as Stand-by display will appear on the standby screen when the lock is set.) When "My picture" or "Chara-den" is to be locked and the substitute image is sent for a videophone call when the lock is set, the "pre-installed" substitute image is sent. Machi-chara appears on the standby screen even when subject to lock. Lock each function activation. Music&Video Channel programs can be downloaded even when the lock is set. Lock each function activation. The alarm notification is not given when the lock is set and "Missed alarm" desktop icon appears. Lock each function activation (Record message can be set). When either of the functions is locked and the FOMA terminal is folded, you cannot check "Record message" by pressing (♠). Lock each function activation.
Phonebook	Phonebook/ Choku-Den	msg.") Lock phonebook and Choku-Den activation. (This affects many functions such as phonebook viewing.) Stored names are not displayed on the Dialed and Received calls or Mail list screen when the lock is set. Phone numbers or mail addresses are displayed instead. When "MSG display settings" under "Chaku-moji" is set to "Only number in PH-book", a Chaku-moji message is not displayed. You cannot set "Reject unknown" at the same time. "Call rejection", "Call acceptation", "Call Forwarding" and "Voice Mail" are deactivated. Even if you press (△) with the FOMA terminal folded while lock is set, the name of the caller or sender cannot be read out.

Group	Function	Operations/Notes when locked
Phonebook	My Profile	Lock My Profile activation.
	Dialed calls	Lock activation of "Dialed calls", "Redial" and "Sent address".
	Received calls	Lock activation of "Received calls" and "Received address".
		• Even if you press (a) with the FOMA terminal folded while lock
		is set, you cannot check a missed call.
Other	Text memo	Lock text memo activation.
settings	Notice designate	No alarm notification is given even when the specified upper cost
	calls	limit is exceeded.
		Once the lock is released, the "Notice designate calls" desktop icon
		appears.
	Chaku-moji	Lock functions of "Select message" and "Sent messages" when
		editing, setting or sending Chaku-moji. Chaku-moji is not displayed.
		You can send or receive Chaku-moji.
Dial/sending m		
Keypad dial	Keypad dial	Lock outgoing calls by entering phone numbers directly, and
		outgoing calls to phone numbers not stored in the phonebook by
		using records in Redial/Dialed calls/Received calls. • You cannot edit or add phonebook entries (including FOMA card
		(UIM) and microSD card).
		You can still make emergency calls (110, 119 or 118).
Sending mail	Input add by keypad	Lock sending i-mode mail or SMS by entering addresses directly.
Serialing mail	iliput add by keypad	(You cannot compose mail or SMS to recipients not stored in the
		phonebook using Redial/Sent mail/Sent address/Received mail/
		Received address.)
		You cannot edit or add phonebook entries (including FOMA card
		(UIM) and microSD card).
		Recipients in draft mail are deleted, and mail without main text are
		also deleted.
	Sending mail	Lock sending i-mode mail and SMS.
Incoming/Mail	disp.	
Incoming call		Reject voice, videophone and PushTalk calls, and packet
		communications. (They are recorded as missed calls.)
		Once the lock is released, the "Missed call" desktop icon appears.
Disp. recv. mail/msg.		You can receive MessageR/F, i-mode mail, SMS or i-concier
		information automatically, but the receiving screen or received
		results screen does not appear. No ring tone or other incoming
		actions take place.
		You can receive Area Mail automatically and view its content.
		Once the lock is released, desktop icons such as "New mail"
		appear.
GPS		
GPS		Lock GPS activation.
		You can send location upon request from a party using a location information against a party as party using a location
		information service such as DOCOMO's imadoco search.

Operations/Notes when locked

Group

Function

^{*} When data to be locked are pasted as "Desktop icon" on the standby screen, these desktop icons are not displayed when the lock is set.

Locking Key Operations Automatically <Keypad lock>

Lock key operations automatically when the FOMA terminal is folded or turned off, or no operation is performed for a certain period of time.

- The Incoming call lamp flashes in pale blue while Keypad lock is set.
- Will not be unlocked by turning off power.
- If either "After closed" or "Timer" is set to "ON", the Keypad lock is activated when the power is turned off.

Setting Keypad lock



After closed ·····Set whether to lock the keypad automatically when the FOMA terminal is closed (ON/OFF).

Timer·····Select OFF/ON after 1 minute/ON after 5 minutes/ON after 15 minutes/ON after 30 minutes. For example, when set to "ON after 5 minutes" is selected, the lock is set automatically if no operation is performed for 5 minutes. When set to "OFF", timer is disabled and no lock is set.



🔄 (Finish)

Operations when Keypad lock is set

- " and " Keypad lock " appear on the screen while the Keypad lock is set.
- Keypad lock locks all key operations except for receiving incoming voice, videophone and PushTalk calls, turning power on and off, IC card authentication function, keypad unlock by face authentication and Indicator display operations by sidekeys.



- When Keypad lock is set, the FOMA terminal receives MessageR/F, i-mode mail and SMS, but you cannot view the content.
 - You can receive Area Mail automatically and view its content.
 - A pop up message appears to show i-concier information, but cannot be selected.

- Even when Keypad lock is set, alarm of "Alarm", "Schedule", "To Do list", "1Seg Booking program" or "1Seg Timer recording" is given.
- If a function is available even when Keypad lock is set such as receiving a voice call or alarm notification, "a" appears under the function.

NOTE

- Even when keypad lock is set, you can directly dial to make emergency calls (110, 119 or 118).
- The lock may not be set during a call or playback of melody/i-motion/music, when the camera is activated, etc.

Releasing Keypad lock temporarily

- Enter your security code when Keypad is locked ■
 - To release temporarily using Face recognition → p.136
 - To release temporarily using the IC card authentication → p.135

Using the IC card authentication <IC card authentic.>

You can release Dial lock or Keypad lock or you can perform user authentication without entering the security code when the security code is required, simply by placing the FOMA terminal on a FeliCa-compatible contactless IC card (external IC card)

- You can use the IC card authentication even when the IC card is locked.
- You can register up to 2 contactless IC cards.

Activating the IC card authentication

Register a contactless IC card to enable the user authentication.

"Settings/NW Service"

"Lock/Security"

"IC card
authentic."

Enter your security
code



Function menu⇒p.135



- To activate the registered contactless IC card
- ▶"ON"
- To deactivate the IC card authentication
- ▶"OFF"▶"YES" or "NO"

Select "YES" to delete all data from the contactless IC card, and "NO" not to delete.

Place the contactless IC card on the mark of the FOMA terminal

" $\frac{1}{4}$ " disappears when the card is registered.

FUNC IC card authentic. screen (p.134)

New ext. IC card Register up to 2 contactless IC cards. If two cards are already registered, delete the old entry to register a new one.

Del. ext. IC card

Using the IC card authentication


<Example: To release Dial lock/Keypad lock>

Open the FOMA terminal when Dial lock/Keypad lock is set


"I" appears on the screen and the user authentication is enabled for about 10 seconds. Pressing (Cath) on the standby screen also enables the user authentication.

■ To release the lock with the FOMA terminal folded

▶ Pressing [(マナー) (1 second or longer) enables the user authentication for about 10 seconds



The lock is released when the user authentication is performed successfully.



Hold the contactless IC card and the FOMA terminal, and bring "\(\begin{align*} \hat{\text{D}} \end{align*} \) of the back cover close to the IC card

* Bring them close together as shown in the illustration. Some IC cards may not be recognized properly. In this case, wave them vertically and horizontally.

■ To use IC card authentication when the security code is required

"" appears when the security code entry screen opens, and the user authentication is enabled for about 10 seconds. Place the registered contactless IC card on the mark of the FOMA terminal to perform the user authentication


NOTE

- Some contactless cards compatible with FeliCa may not work.
- When using the IC card authentication, hold the contactless IC card and the FOMA terminal.
- If the authentication fails five times in a row, the IC card authentication is deactivated. Perform the authentication with the security code. After the authentication with the security code is performed successfully, you can use the IC card authentication again.

Restricting Side Key Operation <Side key guard>

Disable the sidekey (\vec{v}) , \vec{A} $(\vec{\nabla} + \vec{D})$, \vec{v} $(\vec{\Delta})$ functions available when the FOMA terminal is closed.

- The side keys are enabled regardless of this setting when:
 - The FOMA terminal is open
 - An earphone/microphone (optional), etc. is connected
 - · PushTalk is in progress



The side key operations are disabled ("ON") and " $\frac{1}{3}$ " appears.

■ To enable the side keys when the FOMA terminal is folded

- ▶Repeat Step 1
- "" disappears.



Using Face Authentication

Capture your portrait and save the image name as a keyword to be used if authentication fails for the following:

- · Releasing Keypad lock · Starting Initialize
- Releasing IC card lock
 Starting Face
- Starting Reset settings authentication

Clean with a soft cloth before capturing.

- A dirty front camera lens may cause misoperation.
- The rate of successful recognition may be reduced depending on image conditions. Try the following to improve the rate:

Possible cause of low recognition rate	Solution
There is too large a contrast between bright and dark parts of the face if the photo is taken under strong light or in a dark place without sufficient light	Move to a location where the face is evenly illuminated.
The entire face is so brightly illuminated so that the image looks white	
Important parts of the face (eyes, nose, mouth or eyebrows) cannot be discerned because of hair, eyeglasses or a mask	Put your hair back and take off eyeglasses or mask so that eyes, nose, mouth and eyebrows are exposed.

- Face recognition technology does not totally quarantee to recognize the user. Under no circumstances shall DOCOMO be liable for any loss or damage caused by use of this product by a third party or lost opportunity to use this product.
- "Settings/NW Service" "Lock/Security" - "Face authentication" Enter your security code





"ON"▶"OK"

The "New image" screen appears. Read onscreen cautions carefully.

- To validate the saved image
- ►"ON"
- To disable
- ▶"OFF"▶"YES" or "NO"



Shooting takes place three times. A photo is saved after each shot. If photos are not saved.

shooting is canceled, or fewer than three photos are taken, saved photos are deleted and no photo is registered.



New image

After three photos are saved, the "Edit image name" screen appears.

- To cancel shooting
- CLR "YES"



Enter an image name "YES"

The entered image name is a keyword to be used if authentication fails.

Enter 2 to 8 double-byte characters or 4 to 16 single-byte characters for the image name.

- To change the image name
- Select "NO" or the image name
- S Use 🖣 to select a checkbox (□) ▶ ☐ (Finish)

The checked () item can use the face authentication. Deselect items you do not want to authenticate.



Face authentication screen (p.136)

New image, Edit image name, Delete image

Function to reset ····· Select functions that can be unlocked using the face authentication.

NOTE

- The saved image name is required if authentication fails. Do not forget it. Avoid using readily predictable text for the image name and sharing it with others.
- Releasing Keypad lock temporarily by face authentication

After an image is saved on the "Face authentication" screen and "Keypad lock" is selected under "Function to reset", the face authentication will scan your face to authenticate as the user when releasing the lock.

- If the face authentication fails, enter the image name set in "Face authentication" as the keyword.
- To release IC card lock by face authentication → p.286

- On the standby screen
- Face straight to the camera lens to frame the entire face
 - If the face
 authentication fails
 ▶Enter the image name▶



Authenticating

Enter your security code
Keypad lock is released temporarily.

Preventing Unwanted Mail Display < Mail box lock/Folder lock>

Lock Inbox, Outbox, Draft, Mail history box or other folders so that mail in these boxes cannot be viewed by other people without your approval. To open locked mail boxes or folders, the security code is required.

- Once you enter the correct security code, the lock remains released until the mail task is finished. You can open mail boxes or folders without entering the security code.
- An icon such as "
 appears next to a locked mail box.
- For locked folders, icons such as " " and " " and " appear at the beginning of the folder name on the folder list screen.
- When a mail box or folder is locked, locked mail addresses are not recorded in the Sent address and Received address lists.
- You cannot lock Mail history box only or a folder under Mail history box only. When you lock Inbox, Outbox, and/or a folder under them, Mail history box is automatically locked.

Setting lock for each mail box

- "Mail Setting" "Mail box lock" ▶ Enter your security code
- ② Use ♀ to select a checkbox (□)
- 😝 🖾 (Finish)

Setting lock for each folder

- Inbox/Outbox folder list screen (pp.163, 164) ► Highlight a folder to be locked ► ch (FUNC) ► "Folder lock" ► Enter your security code ► "YES"
 - To release the lock
 ▶ Repeat Step 1

Restricting Incoming and Outgoing Calls for Specific Phone Numbers Restrictions

Restrict incoming and outgoing calls for each phone number in the Phonebook to prevent personal phone calls or nuisance calls.

- You can specify restrictions for up to 20 phone numbers in each category.
- This setting is not available for the UIM phonebook.
- This function is valid for only calls with caller ID. It is recommended that you also set "Caller ID Request" and "Call setting w/o ID".
- You cannot set Call rejection and Call acceptation, or Call Forwarding and Voice Mail for the same number concurrently.
- If you set restrictions for a phone number and then edit or delete the phone number, the restrictions on the selected function are released. (However, when "Restrict dialing" is set, you cannot edit or delete the phonebook entry.)
- Settings in "Restrict dialing", "Call rejection" and "Call acceptation" are also applied to the PushTalk phonebook.

Setting restrictions on dialing and receiving for phone numbers

Phonebook detail screen (p.89)

ch (FUNC)▶"Restrictions"▶Enter
your security code▶Select any
item:

Restrict dialing.....Restrict outgoing calls to the specified phone numbers. To make a call to the specified phone number, call the number from the phonebook.

Call rejection······Reject incoming calls from the specified phone number.

Call acceptation······Accept only incoming calls from the specified phone number.

Call Forwarding · · · · · Forward incoming calls from the specified phone number regardless of the Call Forwarding service setting (Activated/Deactivated).

Voice Mail·····Transfer incoming calls from the specified phone number to the Voice Mail service center regardless of the Voice Mail service setting (Activated/Deactivated).

- "★" appears next to a set function.
- To release a set function
- ► Select a function with "★"

The function is released and "★" disappears.

- To set restrictions for multiple phone numbers
- ▶ Press ©LR twice to return to the phonebook list screen ▶ Select a phonebook entry ▶ Perform Step 1 Once you press to return to the standby screen after setting restrictions, you cannot add further restrictions. To add phone numbers to restrict, release restrictions from the phone numbers already registered, then set the restrictions again including the released phone numbers.

When Restrict dialing is set

- You cannot dial from Dialed calls and Received calls entries containing the specified phone number. Also, you cannot call numbers other than the specified ones, add to, edit or delete phonebook entries, exchange data between the FOMA terminal (Phone) and the FOMA card (UIM), or use the phonebook with "UIM operation".
- The current records of Redial/Dialed calls and Sent address list are deleted after Restrict dialing is set. However, you can dial or send mail using the records of Redial/Dialed calls or Sent address list that are stored after Restrict dialing is set.

NOTE

<Restrict dialing>

 You can still make emergency calls (110, 119 and 118) when Restrict dialing is set.

<Call rejection> <Call acceptation>

- i-mode mail and SMS are received regardless of this function.
- When you receive a call from a number that is specified in Call rejection or from a number that is not specified in Call acceptation, the call is recorded as "Missed calls" in Received calls, and the "Missed call" desktop icon is displayed on the standby screen.
- When you receive a call from a number that is specified in Call rejection or from a number that is not specified in Call acceptation, the call is rejected even when the "Voice Mail" and "Call Forwarding" services are activated. If the power is off or when " is displayed, or if the ringing time set for "Voice Mail" or "Call Forwarding" is 0 (zero) seconds, "Voice Mail" or "Call Forwarding" is enabled.

NOTE

<Call Forwarding> <Voice Mail>

- If you receive a call from the specified phone number, the ring tone sounds for about 1 second, then the call is forwarded to the designated number or connected to the Voice Mail service center, and the "Missed call" desktop icon appears on the standby screen.
- If no call forwarding number is specified or if you do not subscribe to the "Call Forwarding" or "Voice Mail" service, calls from the specified phone number are handled as missed calls.

Checking the restriction settings

Phonebook list screen (p.89)

ch (FUNC) "Restrictions" Enter
your security code



Function menu⇒p.138

FUNC Restrictions screen (p.138)

Check settings.....Display a list of phonebook entries with the function set.

Release settings······Release the function, and "★" disappears.

Rejecting a Call without Caller ID Call setting w/o ID>

Accept/Reject voice, videophone or PushTalk calls from unidentified numbers by configuring the setting for each reason.

"Lock/Security" > "Call setting w/o
ID" > Enter your security code >
Select any item:

Unknown.....Set whether to accept or reject calls from callers who are unable to provide the caller ID, such as calls from overseas or calls from landline phones sent via a call forwarding service. Some phone companies provide caller IDs.

Payphone ······ Set whether to accept or reject calls dialed from pay phones.

User unset······Set whether to accept or reject calls made by callers who opt not to send Caller ID.



"Accept" or "Reject"

- When "Accept" is selected
- ▶ "Select ring tone" or "Select calling disp."
- Select Same as ring tone/Melody/i-motion/ Music/Voice announce/Random melody/OFF under Select ring tone. (When "Same as ring tone" is selected, the "Phone" setting of "Select ring tone" is applied.)
- Select Same as display/My picture/i-motion under Select calling disp. (When "Same as display" is selected, the "Calling" setting of "Display setting" is applied.)

■ When "Reject" is selected

The call is rejected and the caller hears the busy tone.

NOTE

- The ring tone or calling display selected in this option is the setting for voice phone calls without caller ID. When you receive videophone calls without caller ID, "Videophone" of "Select ring tone" or "V.phone Calling" of "Display setting" is applied. When you receive PushTalk calls without caller ID, "PushTalk" of "Select ring tone" is applied.
- When you receive a call from a phone number set to "Reject", the call is rejected even when "Voice Mail" or "Call Forwarding" service is set to "Activate". If the power is off or when " " is displayed, or if the ringing time set for "Voice Mail" or "Call Forwarding" is 0 (zero) seconds, "Voice Mail" or "Call Forwarding" service is enabled.
- i-mode mail and SMS are received regardless of this option.

Muting Ring Tone for a Caller Unset in Phonebook

<Ring time (sec.)>

Set the mute period for the ring tone for voice/ videophone calls from phone numbers not in the FOMA terminal (Phone) phonebook or UIM phonebook (Set mute seconds). Prevent accidentally dialing numbers from Received calls, such as nuisance calls that only ring for a short period.

 "Set mute seconds" also works when you receive a voice, videophone or PushTalk call without caller ID or when there is another incoming call during a voice, videophone or PushTalk call. You cannot set "Set mute seconds" when "Reject unknown" is set to "Reject".



"Incoming call" "Ring time (sec.)" Select any item:

Set mute seconds

ON·····Enter the first silent seconds (01 to 99 seconds).

OFF······Set the first silent seconds to 0 seconds.

Missed calls display ·····Set whether to record incoming calls for which no ring tone sounds as Missed calls, or to display the desktop icon.

NOTE

- When you receive a call from a caller stored as secret data in the phonebook, only the phone number is displayed with "Set mute seconds" as 0 seconds.
- If the mute time is longer than the ringing time for Record message, Record message is activated without ringing first. To activate Record message after ringing, set the ringing time for Record message longer than the mute time. The same applies to ringing times for Voice Mail, Call Forwarding and Auto answer.

Rejecting a Call from a Caller Unset in Phonebook

<Reject unknown>

Set whether to accept or reject calls from callers not in the phonebook of the FOMA terminal (Phone) or the FOMA card (UIM).

- This function is valid for only calls with caller ID. It is recommended that you also set "Caller ID Request" and "Call setting w/o ID".
- You cannot set "Reject unknown" when "Set mute seconds" under "Ring time (sec.)" is set to "ON".



NOTE

 When you receive a call from a caller stored as secret data in the phonebook, the call is not rejected regardless of this setting.

NOTE

- When this option is set to "Reject", the caller hears the busy tone even if "Voice Mail" or "Call Forwarding" service is activated. Note that if the power is off or when " is displayed, or if the ringing time set for "Voice Mail" or "Call Forwarding" is 0 (zero) seconds, the busy tone is not heard, and "Voice Mail" or "Call Forwarding" is enabled.
- i-mode mail and SMS are received regardless of this option.

Restricting Making/Receiving Calls

Disable voice/videophone/PushTalk call transmission, i-mode, and mail transmission. This is useful when you want to use the FOMA terminal without being interrupted by incoming voice, videophone or PushTalk calls.

 You can make emergency calls (110, 119 and 118) even when Self mode is set. Making an emergency call releases Self mode.



Self mode is set and "self" appears.

- To release Self mode
- ▶Repeat Step 1

Self mode is released and "self "disappears.

When Self mode is set

- Received voice or videophone calls are not recorded in Received calls, and the "Missed call" desktop icon does not appear on the standby screen.
- Arriving MessageR/F or i-mode mail are stored at the i-mode center and SMS are stored at the SMS center.
- The voice or videophone caller hears an announcement or message that the FOMA terminal is out of range or turned off. When you use the "Voice Mail" or "Call Forwarding" service, you can use the same service provided when the power is off.
- When a PushTalk call arrives, "Disconnected" is sent to other members.


• Data exchange via Infrared data exchange/iC communication, packet communications or 64K data communications with a PC connected, user authentication by IC card authentication, and Bluetooth communications are also unavailable. However, data transmission using the USB cable (OBEX™ communications) and reading data from the IC card using Osaifu-keitai i-αppli are available.

Using Data Security Service

<Data security service>

Back up the Phonebook, images, mail, ToruCa and Schedule (hereinafter referred to as "stored data") on your FOMA terminal at DOCOMO's Data Center to be able to smoothly restore data if you lose your FOMA terminal or when changing models. You can also report change of mail address to all contacts at once. Packet communications charges do not apply to send the report mail. The service gives you even more convenience if you have a PC (My docomo).

- For details on Data Security Service, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- Data Security Service requires a subscription and is a fee based service (i-mode application is required).

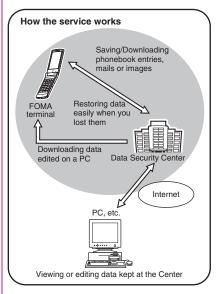

Storing/Updating/Restoring phonebook data at the Data Security Center

Store the FOMA terminal (Phone) phonebook at the Data Security Center. To restore the stored phonebook or set automatic update, use "電話帳お預かり" (Data Security Service) on the i-mode site.

 Data Security Service cannot be used when you are out of the i-mode service area or the power is off.



■ To set transmission of images in the phonebook

► "Sndg img in Phonebook" ► "ON"
The images stored in the phonebook are also stored at the Data Security Center.

■ To check the communication history

- ▶ "Exchanging history" ▶ Select an item
- You can check the phonebook and all records of communications established between the FOMA terminal and the Data Security Center.
- Communication records can be deleted using the function menu of the Exchanging history screen.



(Finish)

When connecting to "電話帳お預かり" (Data Security Service) on the i-mode site

You can set the phonebook to update automatically, or download and restore the stored FOMA phonebook. You can also create a backup (Safeguard Copy function) and reacquire Phonebook data that was accidentally erased from the Data Center. [i] ディイメニュー" (My Menu) 電話帳お預かり" (Data Security Service)

*: If subscribed to i-concier, "お預かり/ i コンシェル" (Store/i-concier) appears.

■ To download the phonebook from the Data Security Center to the FOMA terminal

If phonebook entries of the FOMA terminal are deleted, the entries at the Data Security Center will also be deleted at the time of phonebook update. When you download phonebook entries from the Data Security Center to the FOMA terminal, follow the procedure below to restore them:

■ "マイメニュー" (My Menu) "電話帳お預かり" (Data Security Service) ● "お預かりデータ確認" (View saved data) ■ Enter your i-mode password ● "決定" (OK) ● "ケータイヘダウンロード" (Download to phone) ●"OK"

*: If subscribed to i-concier, "お預かり/ i コンシェル" (Store/i-concier) appears.

Download starts in approximately 15 seconds. Return to the standby screen.

NOTE

<Save (Update)>

- If the phonebook is not updated, the "all" desktop icon appears.
- The phonebook stored in the FOMA card (UIM) cannot be stored at the Data Security Center.
- A phonebook entry with an image larger than 100 KB cannot be stored (updated).

<Exchanging history>

 Up to 30 communication records can be stored. If the maximum number of records is exceeded, older records are overwritten.

<Auto-update>

 Automatic update is not performed if another function is active when updating starts.

<Restore

 When you restore the phonebook data stored at the Data Security Center to the FOMA terminal, icons stored with phone numbers and mail addresses may be replaced with " " and " " and " " "

Storing/Updating/Restoring mail/ images/ToruCa/Schedule at the Data Security Center

Save i-mode mail/SMS/images/ToruCa/Schedule in the FOMA terminal to the Data Security Center.

<Example: To save (update) mail/images>

Mail list screen (p.163)/Image list screen (p.304) ▶ ch (FUNC) ▶ "Store in Center" ▶ Select mail/ image ▶ (Finish)

You can select up to 10 mails/images.

Enter your security code "YES"
The FOMA terminal connects to the Data

Security Center and starts saving mail/images.



■ To save (update) ToruCa/Schedule

Select "Connect to Center" from the function menu of the ToruCa folder list screen (p.288)/Schedule screen (p.359)/Schedule list screen (p.360).

■ To download the stored data from the Data Security Center to the FOMA terminal

Access the i-mode site to download the stored data to the FOMA terminal in the same way as the Phonebook.

 For details on use, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

NOTE

<Mail>

- You cannot save SMS in the FOMA card (UIM) to the Data Security Center.
- A file attached to i-mode mail is deleted before the mail is saved.
- When images are inserted into received mail and prohibited to be output from the FOMA terminal, the images are deleted.
- The "Color coding" setting is not saved.
- <lmage>
- You cannot save an image larger than 100 KB, image prohibited to be output from the FOMA terminal, pre-installed Deco-mail picture or Deco-mail pictogram.

Using Data Security Service with i-concier

If subscribed to i-concier, you can access the Data Security Center from the i-concier screen.

i-concier → p.210



自動お預かり 更新設定 (Automatic backup/ update settings)・・・・・Set interval to automatically back up Phonebook, ToruCa and Schedule to the Data Security Center, or set information update stop/resume.

お預かりデータ確認 (View saved data)······View the content of the phonebook stored at the Data Security Center.

お預かりデータ更新 (Update backup data)…… Save (update) data to the Data Security Center.

お預かり通信履歴 (History of backup communications) ······View the history of communications established to the Data Security Center .

Resetting Various Functions

<Reset settings>

Reset the function settings to default.

"Initialize" and "Reset settings" are different. Do not mix them up.

If you perform "Initialize", you will lose all data you have stored. →p.142

- For details on the functions that are reset, see "Menu Function List" (p.424).
- When the FOMA terminal is connected to an external device such as a PC, the "USB mode setting" will not be reset to default.



■ When the face authentication is active
► Face straight to the camera lens to frame the entire face ► Enter your security code

NOTE

 "3G/GSM switching" may not be reset to default depending on the network condition.

Resetting to the Factory Settings https://www.nitializes.com/https://www.nitializes.c

Delete stored data and reset the function settings to default.

"Initialize" deletes all of your important data, history and information (even protected data), including phonebook entries, mail, downloaded images and melodies, i-αppli, Widget Appli, PDF data, photos and videos taken with the camera.

- Pre-installed data will not be deleted.
- Data stored/registered/set in a FOMA card (UIM) or microSD card will not be deleted.
- Settings configured by connecting to the network will not be initialized.
- Pre-installed i-αppli/Widget Appli that were deleted will not be restored by "Initialize".
- i-αppli and Widget Appli will be deleted by "Initialize" in the following cases:
 - Pre-installed i-αppli/Widget Appli were upgraded
 - Pre-installed i-αppli/Widget Appli were deleted then downloaded

- All data in A mode/B mode will be initialized regardless of 2in1 mode.
- Group names and folder names you edited are reset to default.
- Secret data and data in the Secret folder will be deleted.
- Charge the battery fully before initializing.
 Initialization may not be possible if the battery is low.
- Do not turn off the power while initializing.
- You cannot use other functions while initializing.
 Also, you cannot receive voice, videophone or PushTalk calls or mail.
- Performing "Initialize" resets your phone settings to default

It is recommended that you back up data stored on the FOMA terminal by making notes, using DOCOMO keitai datalink (p.421), or a microSD card.



■ When the face authentication is active
►Face straight to the camera lens to frame the entire face ►Enter your security code



"YES" "YES"







Initialization starts.

Initialization may take several minutes to complete.

After initialization is completed, the FOMA terminal automatically reboots, the Initial setting screen appears.

- If initialization did not complete successfully
- Select "OK" after the power is turned on Initialization starts again.

NOTE

 After you perform initialization, the ticker of i-Channel is turned off. The ticker is turned on automatically when the information is updated automatically or when the latest information.

NOTE

- The settings for data communications that use a PC will not be initialized.
- Osaifu-Keitai i-αppli and the IC card data may not be deleted.
- After initialization, "Welcome 』ドコモ動画賞" (Welcome mail) and "緊急速報「エリアメール」 のご案内" (Guide to Early Warning Area Mail) will be stored in Inbox.

Resetting Data by Remote Control Reset rem

<Reset remotely>

Subscribe to this service (Business mopera anshin manager), and you may request the FOMA terminal data (memory in Phone/microSD card/FOMA card (UIM)) be reset.

Inquiries

maintenance, etc.

NTT DOCOMO corporate website

docomo Business Online

From PC http://www.docomo.biz (Japanese)

* May not be available due to the system

Other Security Settings

In addition to those explained in this chapter, there are functions/services relating to security settings as shown below.

Function/Service	Purpose	Ref. page
IC card lock setting	To prevent unauthorized use of the IC card function	p.286
Nuisance Call Blocking	To avoid nuisance phone calls such as prank phone calls or unsolicited sales phone calls	p.399
Caller ID Request	To reject calls without caller ID	p.400
FirstPass	To send data securely using the user certificate service 'Only available on FirstPass-compatible sites.	p.201
Software Update	To update the FOMA terminal software when necessary	p.465
Scanning function	To protect the FOMA terminal from harmful data	p.472
Receive option	To receive only necessary mail	p.157
"i-mode Disaster Message Board" service Change Mail Address	Refer to "Mobile Phon Guide [i-mode] FOMA version".	

Function/Service	Purpose	Ref. page
Spam Mail Prevention Reject Mail with URL Receive/Reject Mail Settings かんたんメール設定 (Simple mail settings) Reject Mass i-mode Mail Senders SMS Rejection Settings Reject Unsolicited Ad Mail Confirm Settings Suspend/Resume Mail Limit Mail Size Keitai-Osagashi Service (Phone Search) imadoco kantan search	Refer to "Mobile Phon Guide [i-mode] FOMA version".	

NOTE

- Do not call back a number you do not know. In particular, sending your caller ID to an unknown party may cause unnecessary problems.
- <Nuisance Call Blocking priority sequence>
- Priority is assigned when nuisance call blocking functions are set at the same time:
 - Nuisance Call Blocking service
 - ② Reject unknown or Ring time (sec.)/Call setting w/o ID/Call rejection

Mail

	146
■ Composing i-mode mail/Deco-mail	
Composing and Sending i-mode Mail	146
Creating Deco-mail Deco-mail	148
Composing Auto Deco-mail	150
Sending Decome-Anime Decome-Anime	150
Using a Template to Create Deco-mail/Decome-Anime	151
Attaching Files	152
Saving i-mode Mail Then, Sending LaterSave i-mode mail	153
Storing Addresses in Blog/Mail Member	154
Receiving and operating i-mode mail	
When You Receive i-mode Mail	155
Receiving i-mode Mail Selectively	157
Checking New i-mode Mail	158
Replying to i-mode Mail	158
Forwarding i-mode Mail to Other Address Forward i-mode	159
Adding Mail Addresses to Phonebook	159
Checking/Saving Files Attached to i-mode Mail	159
Reading Out Mail	160
Operating mailbox	
Displaying Mail in Mailbox	163
■ Using mail history	
Using Mail History	170
DSING Mail History	170
Configuring mail settings	
Configuring mail settings Setting Mail Functions of the FOMA Terminal	171
Setting Mail Functions of the FOMA Terminal	171
Setting Mail Functions of the FOMA Terminal	
Setting Mail Functions of the FOMA Terminal Mail Setting Using message services When You Receive a Message	171 173 174
Setting Mail Functions of the FOMA Terminal Mail Setting Using message services When You Receive a Message Displaying a Message in Message Box MessageR/F	173
Setting Mail Functions of the FOMA Terminal Mail Setting Using message services When You Receive a Message Displaying a Message in Message Box Using Early Warning "Area Mail"	173 174
Setting Mail Functions of the FOMA Terminal Mail Setting Using message services When You Receive a Message Displaying a Message in Message Box Using Early Warning "Area Mail" Early Warning "Area Mail"	173 174 174
Setting Mail Functions of the FOMA Terminal Mail Setting Using message services When You Receive a Message Displaying a Message Box Message Box Message FI Using Early Warning "Area Mail" Early Warning "Area Mail" Receive Area Mail	173 174 174 175
Setting Mail Functions of the FOMA Terminal Mail Setting Using message services When You Receive a Message Displaying a Message in Message Box Message R/F Using Early Warning "Area Mail" Early Warning "Area Mail" When You Receive Early Warning "Area Mail" Receive Area Mail Setting Early Warning "Area Mail" Area Mail setting	173 174 174
Setting Mail Functions of the FOMA Terminal Mail Setting Using message services When You Receive a Message Displaying a Message Box Message Box Message FI Using Early Warning "Area Mail" Early Warning "Area Mail" Receive Area Mail	173 174 174 175
Setting Mail Functions of the FOMA Terminal Mail Setting Using message services When You Receive a Message Displaying a Message in Message Box Message R/F Using Early Warning "Area Mail" Early Warning "Area Mail" When You Receive Early Warning "Area Mail" Setting Early Warning "Area Mail" Area Mail setting Using SMS Compose SMS/Send	173 174 174 175
Setting Mail Functions of the FOMA Terminal Mail Setting Using message services When You Receive a Message Displaying a Message in Message Box Message R/F Using Early Warning "Area Mail" Early Warning "Area Mail" When You Receive Early Warning "Area Mail" Setting Early Warning "Area Mail" Area Mail setting Using SMS Composing and Sending SMS Composing and Sending SMS Receive SMS	173 174 174 175 175
Setting Mail Functions of the FOMA Terminal Mail Setting Using message services When You Receive a Message Displaying a Message in Message Box Message R/F Using Early Warning "Area Mail" Early Warning "Area Mail" When You Receive Early Warning "Area Mail" Setting Early Warning "Area Mail" Area Mail setting Using SMS Compose SMS/Send	173 174 174 175 175

i-mode Mail

Mail can be exchanged between i-mode users or anyone who has an Internet e-mail address.

You can send up to 10 attachments (JPEG images, ToruCa, PDF data, etc.) up to 2 MB including text. By changing the character size and background color etc. and using pre-installed Deco-mail pictograms in the main text, you can compose and send fun, decorative i-mode mail.

Your FOMA terminal also supports Decome-Anime that uses message/image-inserted Flash.

 For details on i-mode mail, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Composing and Sending i-mode Mail < Compose message/Send>

Compose and send new i-mode mail.

- Deco-mail lets you freely decorate i-mode mail by changing the character size and background color and pasting images or lines in the mail. Deco-mail →p.148
- Up to 400 mail messages (i-mode mail and SMS) can be stored. The maximum number of messages that can be stored will depend on the size of mail.









Selecting "Compose message" on the Mail menu screen also opens the "New mail" screen.

■ When 2in1 is in Dual mode

▶ "Address A" or "Address B"

The sender's mail address will be Address A when 2in1 is in A mode, or Address B when 2in1 is in B mode.

Address A is set as the sender's address when 2in1 is in A mode and Address B is set when in B mode.

If the sender's address is Address B, "B" appears in the title.

You can also switch Address A and Address B by selecting "Chg.FromAddr A/B" from the function menu

2 "_To_<No address>"▶Enter an address

Select a mail address entry method and enter an address.

■ To search in the phonebook

- ▶ "Phonebook" ▶ Search the phonebook (p.90)
- Select a mail address on the phonebook detail

To search in the address list

► "Sent address" or "Received address" Select a mail address

■ To search in the Blog/Mail member

► "Blog/Mail member" Select a member Blog/Mail member → p.154

To enter a mail address directly

▶ "Enter address" ▶ Enter a mail address Alphabets, numbers and symbols can be entered. When you enter a mail address, a new mail address field appears below the filled field. You can enter other mail addresses and send the

address field appears below the filled field. You can enter other mail addresses and send the same mail to multiple recipients (broadcast message). You can enter up to 5 mail addresses.

6 " Subject <No subject>"▶Enter a subject

The "Subject" screen appears.

"Solution ">No message>"▶Enter the main text

You can break a line during text entry. At the end of a sentence, you can break a line by pressing ①. " 』" is also counted as 1 doublebyte character. Spaces are also counted in the same way as characters.



Function menu⇒p.148, 387

You can also compose Deco-mail. → p.148
You can use templates to compose and send
Deco-mail. → p.151

Link to the current time and display time-related words as candidates. → p.384



🖾 (Send)

When you enter the main text, the number of bytes of the main text appears at the upper right corner.

An animation appears while sending mail. After sending



mail, select "OK" to return to the mail menu screen.

■ To cancel transmission

- (Quit) or CLR (1 second or longer)
- i-mode mail may be sent depending on the timing.
- When you are requested to send the mail again
- ▶"YES"

Deco-mail pictogram

Deco-mail pictograms are images that meet certain conditions, including moving pictogram. On your FOMA terminal, Deco-mail pictograms are categorized and can be entered quickly.

- Deco-mail pictograms downloaded from websites can be used in addition to the pre-installed ones. → p.194
- If a Deco-mail pictogram is inserted, the message will automatically become a Deco-mail.

■ Entering a Deco-mail pictogram



[Other key operations]

(←Switch): Display the previous category
 (Switch→): Display the next category
 (JUMP): Display the category list
 CLR: Exit Deco-mail pictogram input

Composing i-mode mail from the phonebook screen

Locate and display a mail address stored in the phonebook and then press ■ (MAIL), then the new mail screen appears with the mail address entered. Searching the phonebook → p.90

NOTE

- If the total number/size of sent mails exceeds the limit that can be saved, sent messages are deleted from the oldest first. (Protected mails or mails in the Secret folder are not deleted.)
- Some phones may be unable to receive a part of the subject.
- If you send i-mode mail with pictograms to a non-DOCOMO mobile phone, the pictograms will automatically be converted into similar ones used by the recipient's carrier. Pictograms may not display properly depending on the recipient's phone and its features. If the recipients phone does not have an equivalent to the pictogram you send, it will be shown as a character or as " "."

NOTE

- When the recipient address is a phone number and the number is preceded by the "184" or "186" prefix, a message appears asking whether to delete the "184" or "186" prefix before sending the mail when you try to send i-mode mail.
- The recipient may not be able to view text correctly due to signal status. An error message such as "Transmission failed" may be displayed even if the delivery was successfully completed.



New mail screen (p.146)/New Deco-Anime screen (p.150)

Select template*1 → p.151

Preview*1.....Preview the image of entered text or decoration.

Send → p.146

Save → p.153

Delete receiver.....Delete the highlighted address if multiple addresses are entered.

Change rcv. type·····Change the address type with the address highlighted.

To.....The recipient's address. The addresses in the To field will be visible to other recipients.

Cc·····Carbon copy address. The addresses in the Cc field will be visible to other recipients. Enter addresses in the Cc field if you wish to notify other people of your correspondence by sending them exactly the same message.

Bcc·····Blind carbon copy address. The addresses in the Bcc field will not be visible to other recipients.

Deco-mail*2 → p.151

Attach file ····· Attach a file such as melody, image or i-motion to i-mode mail or Decome-Anime. → p.152

Activate camera Activate the camera to take photos or movies.

Delete att. file. Del all att. files

Add header *2, Add signature *2...... Paste header or signature registered in "Mail Setting".

Chg.FromAddr A/B·····Change the sender's address when 2in1 is in Dual mode.

Erase message, Delete

- *1: Not available on the New mail screen.
- *2: Not available on the New Deco-Anime screen.

 The addresses in the To and Cc fields will be visible to recipients. However, depending on the terminal, device, or mailer used by the recipient, the mail addresses may not be displayed.

<Activate camera>

- Some sizes cannot be selected depending on the capacity for attached files.
- When Photo mode is selected, Super Fine cannot be selected under Quality setting or the setting will always be Normal depending on the selected size or capacity for attached files.

FUNC Message screen (p.146)

• For functions other than the following, refer to the function menu of the "Text entry (edit)" screen (p.387).

Decorate mail······"Decoration menus" → p.149

Select area Decorate, copy or cut the selected text. → p.390

Load Deco-mail → p.151

Activate camera.....Take a photo to insert into the mail. Image size is QCIF (176 x 144). → p.220

Quick search → p.188

Voice input → p.393

Paste location Paste a location information URL into the main text.

From position loc. Obtain and paste the current location information.

From loc, history.....Paste the location information from checked history.

From phonebook Search the phonebook and paste the location information stored in the phonebook.

From My Profile Paste the location information stored in My Profile.

From image Paste the location information stored in My Profile.

Property.....Display the file name and size of an image inserted into the main text when the cursor is at the left of the image.

Undo----- Restore the entered text or decoration to the previous state.

Preview

<Paste location>

- When the location information URL is pasted into the main text, " > " is prefixed to the location information URI
- The number of characters of the pasted location information URL is included in the number of characters of the main text

<Undo>

 After you select "Undo" to restore the text or decoration to the previous state, you cannot cancel "Undo".

Creating Deco-mail

<Deco-mail>

Deco-mail is a service that allows the user to decorate i-mode mail by changing the character color/size and background color, waving characters and pasting images in the mail.

- If you decorate the mail, the number of characters that can be entered will be lower than in nondecorative i-mode mail.
- When decorating text, you can enter and decorate text simultaneously, or you can decorate already entered text.

Message screen (p.146)▶✓ Use To move the frame to select a decoration menu

To enter and decorate text simultaneously

Decorated text is entered after a decoration menu is selected.

■ To decorate already entered text

Press the decoration menu ¿ Edit | or ★ for 1 second or

Auto A- AA DUndo CD Edit Re B BZS R Decoration menu

longer, and specify the range to decorate (further select "Decorate" if * is pressed for 1 second or longer) then select a decoration

menu. The specified range of text is decorated. Press ch (Exit) to close the decoration menu

NOTE

- If you forward received Deco-mail or quote Decomail in a reply, inserted images and decorations appear as quoted in the main text.
- If you quote or forward Deco-mail containing an image that cannot be sent as mail, the image is deleted.

Depending on the i-mode handset, the recipient will receive a mail containing a URL from which the Deco-mail can be viewed. Depending on the non-compatible handset, the recipient will receive the message text only with no URL for viewing as Deco-mail.

Decoration menus

- When the decoration menu applied by line (ticker/ swing/line insertion/alignment) is selected, a line feed is automatically inserted.
- You can combine multiple decorations (example: change the font color and size and make them blink).

Menu	Description	
Auto 1	"Composing Auto Deco-mail" → p.150	
A**	Change the font color. You can select 25 colors or 256 colors. <25 colors > Fint color Use 10 to move the frame and select a color. The latest 5 colors selected from 256 color palette appear at the bottom. 25 colors and 256 colors switch each time you press (Change).	
AA:	Select AA/AA/AA (Large/ Standard/Small) for the font size.	
	Select an image from the My picture folder.	
A	Make text flash on and off (Blink)/scroll from right to left (Ticker)/move to the right and then back once it reaches the edge of the screen (Swing). Start/End the decoration.	
	Select Set/Reset the decoration of	
	Reset *2 the specified range.	
	Select (Left/Center/Right) for the alignment.	
**1	Insert a line.	
*1	Change the background color of the main text. Select a background color from the palette in the same way as the font color.	

Menu	Description
⊅ Undo	Restore the entered text or decoration to the previous state.
₹2 Edit	Decorate the entered text, or change/ reset the decoration.
Reset *2	Reset the decoration.
Reset All *1	Reset all decorations.
2	Display the preview screen of the decoration.

- *1 : Cannot be selected from the decoration menu opened when the selected.
- *2 : Only available on the decoration menu opened when

NOTE

<Change color>

 Pictograms are also displayed in the specified color. To return them to their original colors, select "Ordel", specify the range and then select "Rest.".
 However, the specified colors do not apply to Deco-mail pictograms.

<Change size>

You cannot change the size of Deco-mail pictogram.

<Insert image>

- You can insert up to 20 files, up to 90 KB of JPEG or GIF images, Deco-mail pictograms or Flash movies regardless of the number of bytes of the main text or the size of the attached file. The maximum number varies depending on the file size. The maximum number of Flash movies is 2.
- If you insert multiple copies of the same image, they are handled as 1 image. However, if you save or send the copies once and then edit and insert them again, they are handled as separate images.
- The inserted animation will automatically stop after a certain period of time.
- If embedded Flash[®]Video is inserted, it cannot be played. However, a Flash movie appears.
- When you send Deco-mail with Flash movie inserted to a Deco-mail-incompatible handset, the received mail includes either URL for viewing the converted images or only the messages the sender inserted/with the decoration released.

<Blink/Ticker/Swing>

 Blink, Ticker, and Swing will turn off automatically after a certain period of time.

<Edit>

 Even if you delete decorated text, the decorative data may be retained and the number of characters that can be entered may be reduced.
 Reset decorations and then delete the text. If you press CLP for 1 second or longer, all the text and decorative data are deleted.

Composing Auto Deco-mail

<Auto Deco-mail:

The FOMA terminal will automatically select text colors and backgrounds, as well as illustrations, etc. based on the emotional content of the mail.

- You can decorate your mail to express up to 2 emotions.
- When you download Auto Deco-mail pictures from websites (p.193), the pictures are also subject to automatic conversion.



Select one of the decoration patterns

The decoration pattern switches each time you press (i) (Next).

Pressing (ch) (PI ON/PI OFF) switches whether to insert pictograms automatically or not (the decoration pattern also switches).

■ To edit the decoration

You can edit the decoration by pressing (Edit).→p.148

NOTE


- You cannot create Auto Deco-mail when the main text exceeds 1,000 bytes.
- Depending on the message, the Deco-mail image displayed may not match the content.

Sending Decome-Anime

<Decome-Anime>

Decome-Anime is a service that allows you to compose decorative mail using animation templates with Flash containing messages/images.

You can use pre-installed templates or templates purchased from IP (information service provider) websites.





💫 Enter an address/subject

③ " □ <No message>"▶Select a Decome-Anime template▶☑ (Set)

■ To preview the template

▶ (Select)

On the preview screen, use \Box to display the previous or next template.

Select the Message field Edit the main text

Edit the entered text or insert images.

The Message field contains text such as "ここに本文を" (Enter text here). The content varies depending on the template. Also depending on the template, the template of the template, and the template of the template.



Function menu⇒p.151

the number of characters in a line is fixed and a separation line appears on the Message screen. Press ** to move the cursor by separation line and adjust the line break position.

You can select an image from My picture or take a photo using the camera.



NOTE

- You cannot insert a Deco-mail pictogram into the Decome-Anime message field. You cannot change the font and its size of Decome-Anime.
- Positions where images or text can be inserted depend on the template, and cannot be changed.
- Header/Signature cannot be added to Decome-Anime.
- You can create Decome-Anime up to 90 KB including template, main text and image in total. If exceeding 90 KB, main text or images cannot be inserted.
- The actual file size of Decome-Anime image is larger, and you may not be able to insert the image even if the image size is smaller than the remaining bytes displayed on the screen.
- The mail size is calculated after images/main text are inserted, and the bytes of the mail will be increased.
- When a GIF animation is inserted, the size may exceed the limit when composed.
- If embedded Flash[®]Video is inserted, it cannot be played. However, a Flash movie appears.

- When you select the template containing melody and attach another melody, only the attached melody will be played.
- When you send to a Decome-Anime incompatible handset, the received mail includes either URL for viewing the converted images or only the message the sender inserted.
- Unlike Deco-mail, the received Decome-Anime cannot be saved as a template.
- Decome-Anime cannot be quoted when sending a reply.
- Decome-Anime cannot be edited when forwarded.
- If you exit Decome-Anime while editing, you cannot re-edit the mail.
- Once saved, the Decome-Anime cannot be reedited
- Once sent, the Decome-Anime cannot be reedited.
- Some templates support key operations for playback.
- During Decome-Anime preview, the playback starts regardless of the "Start attachment (auto)" setting. Start attachment (auto) → p.171
- When an image is to be inserted but the number of remaining bytes is low, "Activate camera" may not work.

FUNC Edit menu screen (p.150)

Select template → p.151

Preview.....Display the main text preview.

Font color → p.149

Delete image

Using a Template to Create Deco-mail/Decome-Anime

<Template>

A template is a form for Deco-mail/Decome-Anime to which the layout and ornament are already set. Using a template allows you to compose Deco-mail/Decome-Anime easily.

- You can download templates from sites. → p.193
- When you attempt to use a template in the following cases, a message appears asking whether to delete the edited content in the main text:
 - · Main text is already entered
 - The header or signature is automatically inserted
 - A file is attached



- You can use templates by selecting "Load Decomail" from the function menu of the New mail screen (p.146).
- Decome-Anime template
- ►Select a folder
- To search Deco-mail/ Decome-Anime template by i-mode
- ► "Search by i-mode" ► "YES"
- To check the theme content







Function menu⇒p.152



(MAIL) ► Edit the main text

To open the Preview screen



Function menu⇒p.152



Function menu⇒p.152

Saving a Deco-mail template

Save composed Deco-mail as a template.

- Up to 1,000 Deco-mail templates can be stored.
- Attached files other than inserted images are deleted when saved.
- Templates are saved to "Template" in the Mail menu.



• The subject of the mail being composed is used as the template title. If no subject is entered, the title will be "YYYY/MM/DD hh:mm" (Y: Year, M: Month, D: Day, h: Hour, m: Minute).

FUNC

Deco-mail template list screen (p.151)/Preview screen (p.151)

Compose message ······ Use templates to compose Deco-mail. → p.151

Sort*1.....Sort templates by selected criteria.

Edit title 1

Info*1.....Display the template size, save date/time and whether it includes images.

No. of Deco-mail*1

Delete*1.....Select Delete this/Delete selected/ Delete all.

Edit*2

Save insert image*2.....Select an image inserted in the template and save it to the My picture folder. If the image can be set as the standby screen, you can select whether to set it as the standby screen.

- *1: Available only on the Deco-mail template list screen.
- *2 : Available only on the Deco-mail template preview screen.

NOTE

<Edit>

 When the template is saved as a separate data, the title will be "YYYY/MM/DD hh:mm" (Y: Year, M: Month, D: Day, h: Hour, m: Minute).

Decome-Anime template list FUNC screen (p.151)/Preview screen (p.151)

Create Deco-Anime.....Use templates to create Decome-Anime. → p.150

Edit title

Info*.....Display the title, file name, file type, and file restriction.

No. of Deco-Anime

iC transmission → p.341

Send Ir data, Send all Ir data → p.340

Copy to microSD → p.329

Delete*.....Select Delete this/Delete selected/Delete all

*: Available only on the Decome-Anime template list

Attaching Files

<Attach file>

Send i-mode mail with files attached.

- The following files can be attached:
 - · Still image, image
 - SWF Flash movie
 - · Moving picture, i-motion
 - Melody
 - PDF data
 - · Document in a microSD card
 - ToruCa, ToruCa (detail)
 - · Phonebook data
 - · My Profile data
 - Schedule or To Do list data
 - Bookmark
 - Other files in a microSD card

New mail screen (p.146), New Deco-Anime screen (p.150) Select any item:

Image, i-motion, Melody, PDF Select a folder in the Phone or microSD, and then select a file to attach. How many times you select folders varies depending on the destination (Phone/microSD).

Document Select a document data in the microSD card

ToruCa·····Select a folder in the Phone or microSD, and then select a file to attach. How many times you select folders varies depending on the destination (Phone/microSD).

Phonebook Select the phonebook in the Phone or microSD, and then search for a phonebook entry (select a folder in case of microSD) to select a file to attach. Searching the phonebook → p.90

Mv Profile

Schedule ····· Select Schedule or To Do list, and then select a file to attach.

Bookmark Select a bookmark in the Phone (i-mode Browser/Full Browser) or microSD, and then select a file to attach.

Other Select other files in the microSD card.

■ To send an image as i-shot to a mova terminal

You can send mail with an image attached as i-shot to a mova terminal.

Only a single still image in JPEG format can be sent with i-shot to mova phones. If you attach a GIF image downloaded from sites, etc., the attached file is deleted and only the main text reaches the recipient.

Main text of up to 184 double-byte characters long (369 bytes) can be sent to a mova phone if the Receive Divided Mail settings have not been configured. If the Receive Divided Mail settings have been configured, the recipient can receive main text of up to 2,000 double-byte characters including the i-shot URL (where the image is kept).



Compose and send i-mode mail or Decome-Anime

■ To check the attached file

Select a file

You cannot play a melody larger than 100 KB, SWF Flash movie larger than 500 KB or embedded Flash[®]Video (only Flash movie displayed).

■ To delete the attached file

► Highlight the file ► ch (FUNC) ► "Delete att. file" ► "YES"

To delete all the attached files, select "Del all att. files".

For the subsequent procedure, see "Composing and Sending i-mode Mail" (p.146).

NOTE

- You can attach up to 10 files, up to 2 MB regardless of the number of bytes of the main text or the file size of the inserted image (the maximum number varies depending on the file size). When attaching ToruCa, you can attach ToruCa of up to 1 KB and ToruCa (detail) up to 100 KB.
- You cannot attach a file if attaching to mail or outputting from the FOMA terminal is prohibited.
- You can attach photos or movies taken with the camera even if "File restriction" is set to "File restricted".
- For handsets not compatible with the attachment, it will be deleted at the i-mode center. In this case, a message indicating "添付ファイル削除" (Attachment deleted) will be added to the mail.

NOTE

- If an image selected for "Image" is larger than 320 dots wide × 240 dots high or 240 dots wide × 320 dots high, "Attach image" appears and you can select "Attach mail", "QVGA scale down" or "VGA scale down".
- Depending on the recipient's mobile phone model, the sent image may be displayed incorrectly or may not be displayed. A coarse image may also be displayed.
- When i-motion mail is sent to i-motion mail noncompatible handsets, i-motion will be sent as mail with URL. The recipient can access this URL to view i-motion.
- When you send i-motion mail, depending on the recipient's mobile phone model, i-motion may not be received or displayed correctly, may be choppy or converted to continuous still images. When sending mail to a terminal incompatible with 2 MB i-mode mail, it is recommended that you set "File size" to "500KB", "Select size" to "QCIF (176 x 144)" and "Quality setting" to "Fine mode" when taking movies.

Playing movies → p.312

 If the recipient's phone is not N-09A, melodies you send may not be played correctly.

Saving i-mode Mail then, Sending Later <Save i-mode mail>

Save mail being composed to the FOMA terminal temporarily, then edit and send the saved mail afterwards.

Saving i-mode mail

- Up to 20 mail messages including SMS can be stored.
- You cannot compose i-mode mail when the number of draft mail has reached the limit.



New mail screen (p.146)

ch (FUNC) "Save"

Mail that is not edited cannot be saved.

Sending draft i-mode mail





Function menu⇒p.154



FUNC Draft mail list screen (p.154)

List setting······Select Subject/Name/Address for the mail list display.

iC transmission, iC trans, all → p.341

Send Ir data, Send all Ir data → p.340

Send one/Bluetooth, Send all/Bluetooth → p.341

Copy to microSD→p.329

No. of messages

Store in Center → p.141

DeleteSelect Delete this/Delete selected/Delete all

Storing Addresses in Blog/ Mail Member

By storing addresses in the Blog/Mail member, you can easily contribute images to blog or easily enter multiple addresses simply by selecting the Blog/Mail member.

Mail address in the main text can be added to Blog/ Mail member. → p.159

- You can add up to 20 Blog/Mail members with up to 5 mail addresses for each.
- Only one Blog/Mail member can be set to blog to contribute to.



■ Mail member list/detail screen





Function menu⇒p.154

To set to a blog to contribute to

► Highlight a Blog/Mail member ► i (Blog)
The highlighted Blog/Mail member is set as the address, and "★" appears. If pressing
i (Reset) again, the blog contribution setting is reset.

Highlight "<Not stored>"▶
☑ (Edit)▶Enter a mail address

To add more mail addresses, repeat Step 2.

FUNC (p.154)

Compose message ······ Compose i-mode mail with the Blog/Mail member pasted as the address.

Edit member name

Reset member name Reset the Blog/Mail member name to default.

FUNC Blog/Mail member detail screen (p.154)

Edit address

Look-up address Enter a mail address by browsing the phonebook, sent address list or received address list.

Delete this, Delete all


When You Receive i-mode Mail

When the FOMA terminal is in the service area, the i-mode center automatically sends i-mode mail or MessageR/F.

- Up to 1,000 mail messages (i-mode mail and SMS) can be stored. The maximum number of messages that can be stored will depend on the size of mail.
- The received mail can be read out. → p.161

Displaying new messages automatically <Auto receive mail/message>

 The "Receiving" screen appears when the reception of i-mode mail or message starts, and the "Received result" screen appears when the reception is finished.



- " stops flashes while receiving i-mode mail, and
 " stops flashing and lights up when the reception is finished.
- " " or " " flashes while receiving a message.
- [2] The numbers of received mail and MessageR/F appear on the received result screen.
 - The number of mail includes the number of SMS
 - When you select mail or message on the received result screen, the Received mail list screen (p.163) or Message list screen (p.174) appears.
 - If no operation is performed for about 15 seconds while the received result screen is displayed, the previous screen reappears for mail and the Detail screen appears for message. The display duration may vary depending on the "Mail/Msg. ring time" setting.

 - The detail screen of MessageR/F is displayed automatically when the message is received on the standby screen.

- If no operation is performed for about 15 seconds while the Message detail screen is displayed, the standby screen reappears.
 However, if you perform operations such as scrolling, the detail screen remains displayed.
- Set the auto display of the MessageR/F detail screen in "Auto-display setting".

■ When you receive mail larger than 100 KB

You cannot automatically receive an attached file if the mail is larger than 100 KB including the attached file

You can download the attached file larger than 100 KB manually from the i-mode center. → p.160

NOTE

- If the total number/size of received mails exceeds the limit that can be saved, read received messages are deleted from the oldest first. (Unread/protected mails or mails in the Secret folder are not deleted.)
- When the FOMA terminal cannot receive any more mail (filled with unread and protected mail),
 - (red)/ (red) appear. Read unread mail, or unprotect unnecessary mail.
- When 2in1 is in A mode or B mode and a mail arrives only at the unused mode's address, the "Mail Receiving..." screen appears, but the Received result screen and " ™ " on on appear. In addition, the mail ring tone does not sound.
- If you receive i-mode mail from a terminal that can set To, Cc and Bcc, refer to the mail detail screen to see whether your address is in the To, Cc or Bcc field. → p.165
- If you receive i-mode mail while the standby screen is not displayed and "Receiving setting" is set to "Operation preferred", the ring tone does not sound. When set to "Alarm preferred", the ring tone sounds and the Received result screen appears.
- If you receive i-shot service mail sent from a mova terminal, images arrive as attached files.
- Decome-Anime is automatically played when selected on the Mail list screen.





- To display the unread mail list

Unread mail 1/2

I | 10:55 Harakokeitai

E | 0 6/25 Harakokeitai

Harakokeitai

Harakokeitai

Harakofeitai

H


Unread mail list
Function menu⇒p.169

NOTE

- Characters that cannot be displayed are converted to a dot (·) or other character.
- If the number of characters in the i-mode mail main text exceeds the maximum number of characters that can be received, "/" or "//" is inserted at the end of the main text, and the excess characters are automatically deleted.
- If the size of received i-mode mail exceeds the size set in "Limit Mail Size", the pasted data is deleted at the i-mode center and cannot be retrieved. To set the mail size limit, select "i-mode menu" > "iMenu" > "English" > "Options" > "Mail Settings" > "Other Settings" > "Limit Mail Size".
- If you receive decorated mail (HTML mail) from a PC, the decorations may not be displayed correctly.

Emotion-expressing mail

An icon pops up and displays the emotion matching the content of the received mail. When the Received mail detail screen (p.163) is displayed, the key illumination flashes in the pattern corresponding to the icon.



 The following table shows emotion-expressing mail icons (the key illumination flashing pattern cannot be changed):

Icon: Meaning	Flashing pattern	Icon: Meaning	Flashing pattern
: Love	Pattern 1	: Advice	Pattern 6
≫g: Sad	Pattern 2	: Join	
: Hurry	Pattern 3	: Please	
: Surprise		: OK	
: Dislike	Pattern 4	: Remark	Pattern 7
: Anger		: Reply	
: Happy	Pattern 5	?: Question	Pattern 8
: Fun		: Notice	
: Fight		: Information	
		: Icon unsupported*	No flashing

- *: The "Icon unsupported" appears for the following mail:
 - Mail forwarded via Infrared data exchange, iC communications, Bluetooth, etc.
 - · Mail retrieved from the Data Security Center
 - SMS copied or moved from a FOMA card (UIM)
 - . SMS in a FOMA card (UIM)
 - · Mail copied from a microSD card
- You can set whether to display an icon in "Emotion/ Keyword". You can set own keywords to display
 10, etc. → p.173
- "Key illumination" is available to set whether to enable key illumination flashing matching the emotion. → p.113

- When received mail contain keywords for the emotion-expressing mail icon and the Disp keyword icon, the Disp keyword icon is displayed.
- The filter function is available to pick up messages with the specified emotion-expressing mail icon.

→ p.168

NOTE

- Depending on the mail, the icon displayed may not match the content.
- The reception date and time, subject and main text of up to 1,000 bytes (500 double-byte characters) from the beginning are checked to determine the appropriate emotion-expressing mail icon. The subject and all the main text are checked to determine the "Disp keyword" icon.
- If the mail view is restricted by Mail box lock or Folder lock, the emotion-expressing mail icon does not appear on the Received result screen or desktop.
- When you receive multiple mail simultaneously, only the icon for the newest mail appears.

Receiving i-mode Mail Selectively <Receive option>

You can check the subject and select the mail to receive or delete at the i-mode center before retrieving.

 To select mail to be retrieved. "Receive option." setting" must first be set to "ON". When set to "ON", you cannot receive i-mode mail automatically.

When mail arrives

A message appears indicating that mail is kept at the i-mode Center, and the "im" icon appears at the top of the screen. When you confirm the message and press any key, the message and icon disappear.

Receiving mail selectively



™ "Receive option"

You can also access "Receive option" as follows: • **(Menu List)** "メニューリスト" (Menu List) **(Menu List)** "メール選 択受信" (Receive option)

If "Receive option setting" is set to "OFF" A message appears asking whether to set "Receive option". Select "Receive option setting" to configure the "Receive option" settings. When you set "Receive option" to "ON", the Mail menu screen reappears.



Select an item for each mail

受信 (Receive): Select and download the mail vou want to receive.

削除 (Delete): Select and delete the mail you do not want to receive.

保留 (Hold): Mail will be stored at the i-mode center.

Retrieve it through "Check new messages", etc.

■ To delete all mail

▶Select "削除" (Delete) at the bottom of the page "決定" (OK)

■ When there are multiple pages for mail

▶"前ページ" (Previous page) or "次ページ" (Next page) Move to other pages and select mail to be accepted

When you view the 2nd page, your selections on the 1st page remain valid.

Pictograms displayed after "サイズ: XXX バイ ├" (Size: xxx bytes) indicate the following:

: Image file attached

) : Melody file attached

: i-motion attached

: ToruCa attached : Other file attached



"受信/削除" (Receive/Delete)▶ "決定"(OK)

The completion screen appears and mail reception begins.

- To cancel selective reception
- ▶"キャンセル" (Cancel)
- When there are multiple pages for mail When "受信/削除" (Receive/Delete) is selected, pages up to the current page are held, received or deleted, and all the subsequent pages will be stored at the i-mode center.

NOTE

- Even if "Receive option setting" is set to "ON", performing "Check new messages" retrieves all mail. If you do not wish to receive them, you must deselect the "Mail" item from the list at the time of the inquiry ("Set check new messages").
- If you display the receive option screen, the "\(\begin{align*}{l}\ext{in}\)" icon disappears even when you do not receive or delete mail. The "a" icon also disappears if you turn the power off or display the mail screen.

i-mode mail or messages that the FOMA terminal could not receive are stored at the i-mode center. You can receive the mail stored at the center using Check new messages.

- i-mode mail or messages are stored at the i-mode center in the following cases:
 - The power is off
 - " w is displayed
 - Inbox is full
 - "Receive option setting" is set to "ON" (i-mode mail only)
 - · During a videophone call/remote monitoring
 - · In Self mode
 - During PushTalk
 - · Connecting to the FirstPass Center
- Use "Set check new messages" to set items to check for.



(1 second or longer)

The Check new messages screen appears. The following procedures are also available to check new messages:

- MENU >i-mode > "Check new messages"

■ To cancel inquiry

▶ Press (Quit) or CLR (1 second or longer) during inquiry

A message may be received depending on the timing of the cancellation.



Check the numbers of new i-mode mail and MessageR/F "Back"

NOTE

- Depending on the signal status, you cannot check for new mail or the checking may be interrupted.
- Even when i-mode mail is stored at the i-mode center, the "11 icon may not appear if the mail arrived at the center while the power is off or " 👺 " is displayed.
- Up to 300 MessageR/F respectively can be stored at the i-mode center for up to 72 hours. When the maximum number of stored messages is reached, messages are deleted from the oldest first.

Replying to i-mode Mail

<Reply i-mode>

Send a reply as i-mode mail or Decome-Anime. You can also quote the received i-mode mail in your reply.



To quote the main text

Ch (FUNC) ► "Reply/Forward" ► "Reply with

Only available on the Received mail detail


Only one quotation mark (set to ">" by default) appears at the beginning of the guoted main text in the reply.

To edit the quotation mark → p.172

- To reply to the sender of mail that was sent to multiple recipients
- ▶ "Reply" or "Reply/Forward" ▶ "Reply i-mode", "Reply Deco-Anime" or "Reply with quote" To sender"
- To reply to the sender and all recipients of mail that was sent to multiple recipients
- "Reply" or "Reply/Forward" "Reply i-mode". "Reply Deco-Anime" or "Reply with quote" To all"

If a reply cannot be sent to the sender, all the addresses, including the other broadcast addresses, are deleted from the displayed mail reply screen.

If the list of broadcast addresses includes ones to which a reply cannot be sent, the addresses are deleted from the displayed mail reply screen.

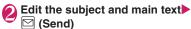

After sent, " n changes to " n.

NOTE

- When data such as a melody or i-αppli activation specification is pasted into the main text, the pasted data is deleted.
- When a received mail is highlighted on the Mail history box list screen, a reply can be sent to a mail address registered in Mail history box.

Forwarding i-mode Mail to Other Address <Forward i-mode>

Forward received i-mode mail to other people.

Received mail detail screen
(p.163) he (FUNC) "Reply/
Forward" "Forward" "To <No
address>" Enter an address

You can edit the subject and main text before sending.



After sent, "changes to " 1".

NOTE

- If an attached or pasted file is prohibited to be attached to mail or output from the FOMA terminal, the file and its information are deleted.
- When data such as a melody or i-αppli activation specification is pasted into the main text, the pasted data is deleted.
- When there is an attached file that has not been completely downloaded, the file is not attached.
 →p.160
- When you forward i-mode mail with other file attached, the file is not deleted.

Adding Mail Addresses to Phonebook

Add the mail address or phone number of the sender of received mail to the phonebook.

Mail address or phone number in the main text can be added to Phonebook or Blog/Mail member.

 For the received SMS, the sender's phone number is added to the Phonebook as a phone number.

<Example: To add the sender's mail address to the phonebook>

- Received mail detail screen (p.163) ▶ ch (FUNC) ▶ "Save sender"
 - When there are multiple mail addresses that can be added
 - ►On the mail address selection screen, select mail addresses

- To add a mail address or phone number included in the main text to Phonebook or Blog/Mail member
- ► Mail detail screen ► Highlight a mail address or phone number ► (FUNC) ► "Save address" ► "Phonebook" or "Blog/Mail member"
- 2 "YES" ➤ Select the destination
 Adding information to the phonebook → p.86

Checking/Saving Files Attached to i-mode Mail

Check/Save files attached to sent/received i-mode mail. Inserted images can also be saved.

Icon/Data type of attached file

Icon	Data type
13 [3	Melody
10	Image
	i-motion
A.	ToruCa, ToruCa (detail)
PDF	PDF data/Document
<u>•</u>	Tool data (Phonebook/Schedule/ Bookmark)
?	Other file
	Receive option is required → p.160

<Example: To check/save files attached to received mail>

Received mail detail screen (p.163)►Highlight a name of attached file

Saving attached images

Images attached under the main text may appear in file name. The display switches each time "File name" or "Image" is selected.

To save attached images displayed in "Image", specify by frame.

Saving inserted images

Unlike attached images, the frame does not appear for images inserted in the main text. To save them, select them in Step 2.

- oh (FUNC)▶"Save data"
 - Saving inserted images

 ► "Save insert image" ► Select an image
- Follow the on-screen instructions to select a folder or option

<Save melody>

- If the sender's phone is not N-09A, received melodies may not be played correctly.
- If multiple data are pasted, you may not be able to view the pasted data.
- To prevent melodies from playing automatically when you open mail, set "Start attachment (auto)" under "Mail Setting" to "OFF".

<Save Tool data>

- You cannot save a schedule to a microSD card.
- When you save a file containing multiple data to the FOMA terminal, only the first data is saved (when you save data to a microSD card, all the data are saved).

<Save other file>

 Other files are automatically saved to the "Other" folder in the microSD card. When the data is saved, the file name changes. → p.324

Downloading attached files selectively

If the size of a mail including the main text, inserted images and attached files exceeds 100 KB, you cannot receive the attached files automatically when you receive the mail. In this case, you need to download the attached files manually.

- You also need to manually download files of types that are not checked in "Prefer attachment" under "Mail Setting".
- On the Received mail detail screen, " " appears when the attached file is not downloaded, and " appears when the attached file has been downloaded partially.

Received mail detail screen (p.163)▶Select an attached file with " " or " " " icon

Data download starts.

When data download is completed, a screen appears indicating that download is complete.

■ To cancel download

▶ (Quit)

Partially downloaded data is saved. In this case, perform Step 1 again to download the remaining data.

View the content of the downloaded file

NOTE

- When there is an attached file that has not been completely downloaded, the data retention period of the attached file appears on the Received mail detail screen (p.163). When all the attached files are downloaded, the retention period disappears from the screen. You cannot download an attached file whose retention period is expired.
- When you receive an attached file and the storage capacity of Inbox is exceeded, the received mail are deleted automatically according to the size of the attached file (many received mail may be deleted depending on the size of the attached file). Note that unread or protected received mail and received mail in the Secret folder are not deleted. It is recommended that you protect important mail. → p.169

Reading Out Mail

- The voice may be heard by others during read out, so move to a location where it will not disturb other people.
- The read out volume is determined by "Phone" under "Ring volume". When set to "Silent" or "Step", mail are read out at "Level 2".
- Mail is not read out in the following cases:
 - "Read out received mail" under "Read out setting" is set to "OFF"
 - During a call, data communications (excluding packet communications) or PushTalk
 - Manner mode is on and no equipment such as an earphone/microphone (optional) is connected
 - · Music Player is active

Messages written in English are spelled out in alphabetic reading.

Reading out new mail (Japanese mode)

When mail arrives and "" is displayed on the Indicator display, the main text can be read out with the FOMA terminal folded.

When the received result screen is displayed or when "Check new messages" is performed and the checking result screen is displayed, the new mail can read out.

Reading out main text of new mail using the side key when the FOMA terminal is folded

- Set "Side key guard" to "OFF" before reading out with the FOMA terminal folded.
- When the FOMA terminal is folded, press ☑ ▶ Press ☑ within 10 seconds

The readout of mail starts.

- When "Info notice setting" is set to "OFF"
 The readout starts when

 is pressed with the FOMA terminal folded.
- Reading out main text of new mail when the FOMA terminal is open (Japanese mode)

<Example: When "Check new messages" is performed>

Press ☑ (Read) while the Checking result screen is displayed

If the senders name and mail address are stored in the phonebook, the mail is read out after the voice announcement "XX さんからのメール" (This is from XX).

When reading out is completed, the "pipip" tone sounds and the read out screen is closed.

■ When you receive multiple mail simultaneously

The read out starts from newer mail in reverse chronological order.

When you press during read out, the beep sounds then the next mail is read out. If there is no more mail, the read out stops.

Reading out mail in the mail box

- Received mail detail screen (p.163) ▶ ch (FUNC) ▶ "Read out message"
 - To cancel readout

▶ (Stop)

Press (Play) again to start reading out from the beginning.

- To end readout
- ► (Exit)

NOTE

 While mail is read out, an image appears in the upper half of the screen. When the sender's address and image of the received mail are stored in the phonebook, the stored image appears.

NOTE

- While mail is read out, press ①, ♣ (マナー) or ▼ (♠) to scroll the main text. Press another key to stop reading out. However, when you press ⑤ or ⑧ for 1 second or longer to turn ECO mode or privacy angle on/off, it does not end reading out.
- If you receive a call while mail is read out, reading out ends and the ringing screen appears.
- If you receive a new mail, etc. while mail is read out, the "Receiving setting" applies. When the specified alarm time is reached while mail is read out, the "Alarm setting" applies.
- Mail-linked i-αppli mail cannot be read out on the Received result screen but can be read out on the Received mail detail screen.
- SMS reports cannot be read out.
- Decome-Anime cannot be read out.
- Mail received from computers may not be able to be read out.
- When "Select language" is set to English, mail cannot be read out on the Received result screen but can be read out on the Received mail detail screen

Readout rules

The readout function generally follows the following rules when reading out received mail.

Symbols/Pictograms

Symbols/Pictograms are not read out. The FOMA terminal may not correctly read out sentences that contain symbols/pictograms. Some symbols are read out.

contain symbolo/plotogramo.	Corrio dyrribolo are road out.
\$ (dollars) → doru	%(percent) → paasento
¥ (yen) → en	° (degrees) → do
°C (degrees) → do	¥ (yen) → en
\$ (dollars) → doru	% (percent) → paasento
×y (mm) → miri	[‡] _□ (kilograms) → kiro
ਧੂਂਂ (cm) → senchi	メー (meters) → meetoru
পুঁচ (grams) → guramu	^ト > (tons) → ton
7− (ares) → aaru	^½ (hectares) → hekutaaru
ີ່ໄດ້ (liters) → rittoru	7" (watts) → watto
לֶם (calories) → karorii	F _N (dollars) → doru
t⇒ (cents) → sento	パー (percent) → paasento
್ಗ್ (millibars) → miribaaru	
mm (millimeters) → mirimeetoru	cm (centimeters) → senchimeetoru
km (kilometers) → kiromeetoru	mg (milligrams) → miriguramu
kg (kilograms) → kiroguramu	cc (cc) → siisii
mi (square meters) → heihoumeetoru	

Up to 16 digits are read out.

Example: 1234 → "Sen nihvaku saniu von"

■ Amount of money

If a currency symbol (e.g. "\delta" (single-byte/doublebyte)) is placed at the beginning of a number, up to 16 digits are read out as amount of money. If commas (,) are used as a separation symbol, the string is recognized as amount of money only if the commas are placed between every 3 digits.

Example: ¥12345 -"Ichiman nisen ¥12.345 sanbyaku yonju goen"

■ Phone number

If numbers are separated by hyphens - or parentheses () and recognized as landline phone number, mobile phone number or toll-free number. the numbers are read out as phone numbers but not as sequences of digits. "Tel:"-prefixed numbers are also read out as phone numbers.

Example: Tel: 0120-XXX-XXX → "Teru zeroichinizero XXX XXX"

Time

Numbers separated by ":" are read out as time. 1 If the hour component is a 1- or 2-digit number and the minute component is a 2-digit number, the number is read out as time. If "AM" or "PM" (uppercase) is added before or after the number, "Gozen" or "Gogo" is read out before the number

"Hour": "Minute" ("Hour" = 0 to 29. "Minute" = 00 to 59) Example: 23:15 → Nijusanji jugofun

AM "Hour": "Minute" or "Hour": "Minute" AM ("Hour" = 0 to 12, "Minute" = 00 to 59) Example: AM5:05 → "Gozen goji gofun"

*: Time entered in the format of "Hour": "Minute": "Second" (e.g. 23:15:10) is not read out.

Date

Numbers separated by "/" or "." in the date pattern are read out as date. If "M", "T", "S" or "H" (uppercase) is inserted before date, the corresponding Japanese era name (Meiji, Taisho, Showa, Heisei) is read out.

"Year"/"Month"/"Day" or "Year". "Month". "Day" ("Year" = 0 to 9999: "Month" = 1 to 12: "Day" = 1 to 31) Example: 2009/12/5 2009/12/05 "Nisenkyunen junigatsu 2009.12.5 itsuka" 2009.12.05

"H" "Year"/"Month"/"Day" or "H" "Year". "Month". "Day" ("Year" = 0 to 99: "Month" = 1 to 12: "Day" = 1 to 31) Example: H21.10.3 → "Heisei niiuichinen jugatsu mikka"

- The above formats for numbers, amount of money, phone numbers, time and date also support double-byte characters.
- When amount of money, phone number, time or date is read out and the string read out is immediately preceded or followed by any of the characters listed below, the number will not be read out correctly. To have the FOMA terminal read out amount of money, phone number, time or date correctly, it is recommended that you place a space, etc. as a separation character before and after the string. "0 to 9", "A to Z" (uppercase), ":", "\(\pi\''\), "\", ":", "-" (single-byte/double-byte)

Others

- Alphabets are read out in alphabetic reading, but may not be read out in alphabetic reading depending on the combination.
- Depending on the content of a sentence or description (especially geographic names or proper nouns), it may not be read out or may be read out incorrectly.
- The voice used to read out is different from natural voice. The pronunciation or accent may be difficult to understand in some cases.
- Sentences are separated to read out when there are punctuation marks (", ", ", ", .), line feeds and spaces, except when "." or "." is preceded and/or followed by numbers. When there is no separation in the text, the sentences are separated automatically. Depending on the sentence, it may take time to start reading out. It may not be read out correctly when there are kanji characters. To read out the content of the mail correctly, it is recommended that you ask people you frequently exchange mail with to follow the following auidelines:
 - Use katakana for nouns, especially proper nouns such as geographic names and personal names.
 - · Use punctuation marks, etc.


Displaying Mail in Mailbox Inbox/Outbox/Mail history box>

- At the time of purchase "Welcome 』ドコモ動画 ■" (Welcome to DOCOMO moving picture) (Welcome mail) and "緊急速報「エリアメール」の ご案内" (Guide to Early Warning "Area Mail") are stored in Inbox. Communications charges do not apply for the mail. Also, you cannot reply to the mail
- Up to 1,000 received i-mode mail and SMS in total, and up to 400 sent i-mode mail and SMS in total can be stored.
- Up to 1,000 received mail and up to 200 sent mail can be protected.
- The numbers of mail that can be stored and protected vary depending on the data size. Saving a large file reduces the numbers.

Reading i-mode mail

<Example: To read received mail>

The Secret folder appears on the folder list screen in Secret mode or Secret data only mode.

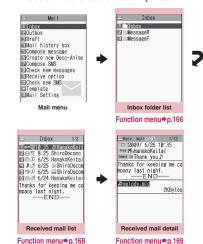

Press on the mail detail screen to view the previous or next mail.

■ Decome-Anime

The main text screen appears.

NOTE

- A part of Subject/Name/Address may not be displayed properly.
- On the Received mail detail screen, the mail can be read out. → p.161

Useful keys for the mail list/detail screen

■ Mail list screen

Key operation	Action
# (1 second	Switch "Name"/"Address"/
or longer)	"Subject"

Mail detail screen

Key operation	Action
•	Scroll in the pressed direction
-	Display the previous or next mail
(1 second or longer)	Change font size

NOTE

 When you change the display mode by the above key operation, the "Mail" setting in "Character size" under "Font" and the "Font size" setting also change.

Changing the mail list screen display mode (1 line+body/2 lines/1 line)

 Switch between "1 line+body", "2 lines" and "1 line" using the "Mail list disp." setting in "Mail Setting" under the Mail menu.



NOTE

 When "Mail list disp." is set to "1 line+body" or "1 line", the Mail history box list screen always shows mail in "Subject" mode.

- When you open the FOMA terminal, press a key or send or receive i-mode mail or SMS, the backlight is turned on. (The backlight time varies depending on the "Lighting" setting under "Backlight" or the "Mail/Msg. ring time" setting.) However, when i-mode mail or SMS is displayed, the backlight time varies depending on the length of the main text.
- The backlight does not turn on if "Lighting" under "Backlight" is set to "OFF".

Guide to the mail folder list screen

Inbox Inbox Inbox Information	Outbox Discharge mail	Mail history box White Mark Carl Hall Folder 62 Folder 63 Folder 64 Folder 64 Folder 67 Folder 68 Folder 68 Folder 68 Folder 69 Folder 79
Inbox folder list	Outbox folder list	Mail history box folder

lcon	Description
	Normal folder
	Mail-linked i-αppli folder
18081 D-co	Secret folder
☐: There is unread mail	

Folder lock set

Auto-sort settings (p.167) set

Guide to the mail list screen





(1) Mail status

1)-1 Received

Icon	Description
X	Unread mail
	Read mail
<u></u>	Protected read mail
1 1	Forwarded mail
55	Replied mail

: Protected

①-2 Sent

le	con	Description
5	EX	Mail to one recipient
		Mail to multiple recipients (broadcast mail)

Protected

Failed to send some mail

Failed to send

② Mail content

Icon	Description
etc.	Emotion-expressing mail → p.156

- 3 Sent/Received time and date
 - 3-1 Time appears for mail sent/received today
 - ③-2 Date appears for mail sent/received yesterday or earlier
- 4 Sender/Recipient, Subject, Information, etc. When there is no subject, "No title" appears
- ⑤ Mail type, attached file information

Icon	Description
SMS	SMS in the FOMA terminal
BARA STREET	SMS in a FOMA card (UIM)
	SMS whose SMS report is already received
(rillin)	Area Mail
B*	Mail sent/received using Address B of 2in1
GMI	Mail with time adjusted
n in	Mail with melody attached or pasted
To de	Mail with image attached or inserted
	Mail with i-motion attached
A B	Mail with ToruCa or ToruCa (detail) attached
PDF PDF	Mail with PDF data attached
	Mail with Tool data (Phonebook/ Schedule/Bookmark) attached
	Mail with document attached
? 2	Mail with other file attached
CK.	i-αppli can be activated from the main text
Œ	i-αppli cannot be activated from the main text (mail is moved to the Secret folder)
	Mail sent/received via mail-linked i-αppli
A A	Mail with undownloaded file attached → p.160
	Mail with incomplete file attached →p.160
4*	Mail with undownloadable file attached
	Mail with multiple files attached or mixture of files attached and pasted


Icon	Description
Ð	Mail with multiple data pasted (also displayed when the data is pasted along with i-αppli To)
	Mail restricted by the FOMA card security function (use a FOMA card (UIM) different from the one used when the mail is sent/ received)

^{*:} Displayed only when 2in1 is in Dual mode

<u>ii</u> :	Attached file is deleted
	Some files are deleted
×	All the files are deleted

- When you view i-mode mail with an image attached on the received mail detail screen or sent mail detail screen, the screen switches between image display and file name display each time you move the frame to the image and press
 (Select).
- When 2in1 is in A mode or B mode, mail sent in unused mode does not appear.

Guide to the mail detail screen



- Mail status Refer to ① of "Guide to the mail list screen" (p.164)
- 2 Sent/Received time and date
- 3 Recipient type (Received mail)

	lcon		Description
Ť,	Ľc.	Bcc	Sender type → p.147

(4) 2in1 mail address information

Icon	Description
B*	Mail sent/received using Address B of 2in1

^{*:} Displayed only when 2in1 is in Dual mode

Icon Description From Fm*5 Name or mail address of the sender

: Cannot reply to

® Icon stored in the phonebook When the mail address or phone number is stored in the phonebook, the icon stored in the phonebook appears

Recipient and its type (Sent mail)

To OK To IX Name or mail address of the recipient, and its type →p.147	Icon	Description
Bcc OK Bcc X	'CcOK	

: Failed to send

® Recipient and its type of broadcast mail (Received mail)

Up to 4 recipients are displayed

Icon	Description
	Names or mail addresses of the recipients except yourself and their types for broadcast mail → p.147

___*****: Cannot reply to

Subject

When there is no subject, "No title" appears "SMS" appears for received SMS ("sm") when the SMS is in a FOMA card (UIM))

When an SMS report has been received, " also appears

"Area Mail" appears when Area Mail has been received

(1) Mail content (Received mail)

Icon	Description
etc.	Emotion-expressing mail →p.156

- Main text
- Displayed at the end of the main text

① Attached file information

The file name and file size also appear

Icon	Description
4	Pasted melody (Invalid melody appears as text in the main text)
¥	Invalid inserted image

* Other than the above icons, the same icons as on the list screen may appear in some cases. Refer to "⑤ Mail type, attached file information" on p.165.

NOTE

- In the following cases, the mail address appears instead of "Name" even when the phone number or mail address is stored in the phonebook:
 - "Restrict dialing" is active and the phone number is not designated in the "Restrict dialing" setting
 - 2in1 is in A mode and "Phonebook 2in1 setting" is set to "B", or 2in1 is in B mode and "Phonebook 2in1 setting" is set to "A"

FUNC (p.163) Inbox/Outbox folder list screen

Add folder ·····Add a folder and set the auto-sort for the new folder. Also, set whether to add the same folder to Inbox/Outbox. You can add up to 22 folders. "Setting Auto-sort" → p.167

Auto-sort → p.167

Edit folder name · · · · · Edit the folder name of the added folder

Folder lock·····Set/Release the folder lock. → p.137

Sort folder······Select the position and rearrange the folder.

No. of messages

Open folder Display a list of the mail in the folder.

Add desktop icon^{*} → p.116

iC trans, all → p.341

Send all Ir data → p.340

Send all/Bluetooth → p.341

CopyAll to microSD → p.329

Delete folder.....Delete an added folder.

Delete read . Delete all

^{*:} Only available on the Inbox folder list screen.

 You cannot delete, sort or rename folders (Inbox, Outbox, etc) prestored in the FOMA terminal.
 Also, you cannot set the auto-sort on the folders.

<Add folder>

 When you download mail-linked i-αppli, a mail-linked i-αppli mail folder is automatically created (up to 5).

<Sort folder>

• You cannot sort when only one folder is added.

<No. of messages>

- You cannot check the number of the following i-mode mail or SMS:
 - · Messages in the Secret folder
 - Messages not displayed due to the 2in1 setting
 - Messages not displayed due to the Secret mode
- You cannot check the number of MessageR/F.

<iC trans, all> <Send all Ir data>

<Send all/Bluetooth> <CopyAll to microSD>

MessageR/F are not included.

<Delete folder>

- You cannot delete a mail-linked i-αppli mail folder if there is a corresponding mail-linked i-αppli.
- If you delete a folder with "Auto-sort" set, the autosort setting for the folder is released.

<Delete read> <Delete all>

- The following i-mode mail or SMS will not be deleted:
 - · Protected messages
 - · Messages in the Secret folder
- When Delete all is performed, messages not displayed due to the 2in1 setting or Secret mode will also be deleted.
- MessageR/F are not deleted.

Setting Auto-sort

Sort mail into the specified folders by preset criteria such as mail address or subject.

Inbox/Outbox folder list screen (pp.163, 164) Highlight the destination folder ch (FUNC) "Auto-sort" Set any of the following:

When the criterion is already set, it is displayed. Press $\stackrel{\hbox{\scriptsize ch}}{}$ (FUNC) again.

■ When Original lock is set on the Phonebook or Blog/Mail member

The group name appears as "Group" and the Blog/Mail member appears as "Blog/Mail member".

Address sort Set a mail address.

Look-up address······Set a mail address by browsing the phonebook or address list.

Look-up group······Set a group in the phonebook.

Look-up member······Set a Blog/Mail member.

Enter address·····Enter a mail address directly.

Subject sort Set the subject.

Reply impossible (Send impossible)..... Configure the sort setting for mail that you cannot reply to or send.

Sort all (All sort)·····Configure the setting only for a mail-linked i-αppli folder. Sort all mail into a mail-linked i-αppli folder.

A/B mode sort Configure the sort setting for 2in1 Address A/B.

Unregistered add......Configure the sort setting for mail that are not stored in the Phonebook.

Edit addr/subj ······ Edit an already set mail address or mail subject.

List setting······Select Name/Address for the mail list display.

ReleaseSelect Release this/Release selected/Release all to release the auto-sort criteria.

NOTE

- If received or sent mail meets multiple sort criteria, the priority is assigned as follows.
 - ①Sort all/All sort ②Subject sort
 - ③ Reply impossible/Send impossible
 - Mail address/Phone number
 - ⑤ Blog/Mail member ⑥ Phonebook group
 - ⑦ A/B mode sort
 ® Unregistered add.
- Mail received or sent before configuring the autosort settings are not sorted.
- Mail sent as broadcast message searches for the sorting criteria in the order of address entered.
- Area Mail is not subject to "Address sort", "Subject sort", "Reply impossible", "A/B mode sort" and "Unregistered add."

<Address sort>

 You can set up to 700 addresses for auto-sort (multiple addresses can be set for 1 folder).

<Address sort (Enter address)>

 Enter the mail address domain (part that follows the @ sign) correctly. However, if the address format is "phone number @docomo.ne.jp", enter the phone number only.

<Subject sort>

- If the subject meets the sort criteria for multiple folders, the mail is sorted into a folder closest to Inbox or Outbox.
- You cannot sort i-mode mail with no subject entered and "No title" displayed even if you set "No title".
- Subject sort is not available for SMS.

<Reply impossible>

- Reply impossible is not available for SMS reports.
- "Reply impossible" can only be set for 1 folder under Inbox.

<Send impossible>

 "Send impossible" can only be set for 1 folder under Outbox.

<Sort all/All sort>

- You cannot sort SMS reports or SMS received directly to a FOMA card (UIM).
- "Sort all" can only be set for a single mail-linked i-αppli mail folder for received and sent i-αppli mail respectively.

<A/B mode sort>

- When 2in1 is in Dual mode, the Address A/B setting can only be set for a single folder in Inbox and Outbox respectively.
- When 2in1 is in A mode or B mode, the auto-sort setting icon () does not appear for a folder with the "A/B mode sort" auto-sort setting.
- The settings for Address A/Address B mail sort are valid regardless of the 2in1 mode.
- If 2in1 is OFF, the "A/B mode sort" auto-sort setting set on the folder is retained but does not work.

<Unregistered add.>

- "Unregistered add." can only be set for a single folder in Inbox and Outbox respectively.
- Registering addresses to view sent/ received mail in Mail history box

Register addresses to view mail sent/received from the addresses in Mail history box.

 10 Mail history box folders are stored at the time of purchase. One mail address can be registered on one folder.



Select a mail address registration method, and register a mail address.

■ To add a mail address from the Phonebook

- ▶ "Phonebook" ▶ Search the phonebook (p.90)
- Select a mail address on the phonebook detail screen

To add a mail address from the address list

► "Sent address" or "Received address" Select a mail address

■ To enter a mail address directly

▶ "Enter address" ▶ Enter a mail address



Mail history box folder list screen (p.164)

Edit folder name

Unregister · · · · Release mail addresses registered on the highlighted folder in Mail history box. The folder in Mail history box reverts to default.

Del all in folder

FUNC Mail list screen (p.163)

Reply^{*1} \rightarrow p.158

Edit*2.....Edit the recipient, subject or main text of the sent mail. Press ☑ (Send) to send the mail.

Move*3.....Select Move this/Move selected/Move all then select the destination folder to move mail.

Search mail*3.....Search for mail by specified criteria.

Search sender*4, Search receiver*5.....

Search for mail by specifying a mail address from the phonebook or mail address list or entering the mail address directly.

Search subject

Display all ³······Reset the search, sort display or display via filter function to default (All Chronological ↑).

Sort*3.....Sort mail by selected criteria.

Filter*3.....Display only mail that meet the selected criteria

Color coding Select Default (black)/Red/Blue.
Alternatively, press * (1 second or longer) on the mail list screen.

List setting*3.....Select Subject/Name/Address for the mail list display.

Read all *4.....Change all unread mail in the folder to read mail.

Protect*1.....Select Protect this/Protect selected*4/
Protect all*4.

Unprotect*1······Select Unprotect this/Unprotect selected*4/Unprotect all*4.

Protect ON/OFF*2, Unprotect all*5

iC transmission → p.341

Send Ir data → p.340

Send one/Bluetooth → p.341

Copy to microSD → p.329

UIM operation*3......"Moving/Copying SMS from the Mail screen"→p.336

Mail info*1......Display information such as sender.

No. of messages*3

Store in Center*3 → p.141

DeleteSelect Delete this/Delete selected*3/ Delete all*3.

 For received mail, you can pick up read mail or SMS reports to delete at once by selecting "Delete read" or "Delete all SMS-R".

Keep in secret ⇔Put out*3*6......Select Keep this/ Keep selected/Keep all. "Preventing Others from Viewing Data" → p.129

- *1 : Available on the Received mail list screen or when received mail is highlighted on the Mail history box mail list screen.
- *2 : Available on the Sent mail list screen or when sent mail is highlighted on the Mail history box mail list screen.
- *3: Not available on the Mail history box mail list screen.
- *4: Available only on the Received mail list screen.
- *5 : Available only on the Sent mail list screen.
- *6: Available only in Secret or Secret data only mode.

FUNC Unread mail list screen (p.156)

Reply → p.158

List setting······Select Subject/Name/Address for the mail list display.

Protect ON/OFF, Delete this

NOTE

- When 2in1 is in B mode, you cannot display the Mail history box folder list screen.
- When 2in1 is in Dual mode, mail sent to Address B are not displayed in Mail history box.

NOTE

<Search mail>

- You can also search in the search results.
- You cannot search for i-mode mail with no subject entered and "No title" displayed even if you set "No title" in Search subject.

<Sort> <Filter>

- The sort and filter functions can be used together. For example, to view only unread mail in chronological order on the Received mail list screen, select Chronological ↓ in the sort menu and then Unread in the Filter menu.
- When you exit from the mail list screen, the sort and filter are released.

<Read all>

 If you view mail via the filter function and then select "Read all", only the currently displayed mail is marked as read.

<Protect ON/OFF>

 Mail not displayed due to the 2in1 setting/Secret mode is not subject to "Protect all" or "Unprotect all" even if selected.

Area Mail is not subject to "Protect all" even if selected.

<Keep in secret> <Put out>

 Mail not displayed due to the 2in1 setting is not subject to "Keep all" or "Put out all" even if selected.

FUNC Mail detail screen (p.163)

Reply/Forward* 1 → p.158

Edit*2..... Edit the recipient, subject or main text of the sent mail. Press ☐ (Send) to send the mail.

Resend*2, Protect ON/OFF

Move*3.....Select the destination folder to move mail to the folder.

Copy · · · · · Copy the main text, subject or mail address. The copied text can be pasted into the text entry screen. → p.390

Quick search*1 → p.188

Save sender^{*1}, Save receiver^{*3}, Save address →p.159

Save data, Save insert image → p.159

Add desktop icon → p.116

Save Deco-mail ······ Save i-mode mail as template.
→p.151

Refer dictionary *2 → p.371

Property.....Select an image to display the file name and size of the image inserted into the Deco-mail.

Read out message*1 → p.161

Disp. SMS report*2

iC transmission → p.341

Send Ir data → p.340

Send one/Bluetooth → p.341

Copy to microSD → p.329

UIM operation*3....."Moving/Copying SMS from the Mail screen"→p.336

Scroll Select 1 line/3 lines/5 lines as the number of scroll lines.

Font size ······ Select X-small/Small/Standard/Large/ X-large. → p.115

Delete att. file. Del all att. files. Delete

Keep in secret ⇔ Put out*3*4......"Preventing Others from Viewing Data"→p.129

- *1: Available only on the Received mail detail screen.
- *2 : Available only on the Sent mail detail screen.
- *3: Not available on the Mail history box mail detail
- *4 : Available only in Secret or Secret data only mode.

NOTE

<Delete att. file> <Del all att. files>

 You cannot delete data pasted into the main text or undownloadable file (1).

Using Mail History

<Sent address/Received address>

When you send or receive mail, the mail addresses are recorded in the Sent address list or Received address list. You can send mail by selecting an address from these address lists.

- Up to 30 i-mode mail addresses or SMS phone numbers are stored in the Sent address list and in the Received address list respectively. (When using 2in1, up to 30 received addresses are stored for Address A (Number A) and for Address B (Number B) respectively.)
- When the Mail box lock is set to Inbox or Outbox. the mail address is not recorded in the address list.

Checking the address list


<Example: To open the Received address screen>

On the standby screen (1 second or longer)

The "Received address" screen (list) appears.

- To open the Sent address screen (list) ▶☐ (1 second or longer)
- Icons on the Address screen (list/detail)

国。 (国 8 /国) (国 8 : i-mode mail sending or receiving succeeded/ sending failed



Function menu⇒p.170

SMS, SMS / SMS; SMS sending or receiving succeeded/sending failed

Select a sender

The "Received address" screen (detail) appears.



Function menu⇒p.170



Check the content

NOTE

- Turning the power off or deleting sent/received mail does not delete the entries in the address lists. To prevent others from viewing the addresses, delete them.
- When 2in1 is in A mode or B mode, up to 30 messages sent/received with the used address are displayed.



Address screen (list/detail) (p.170)

Add to phonebook → p.159

Look-up phonebook Display the detail screen of the phonebook in which the mail address is stored.

Add desktop icon → p.116

Compose message*1......Compose i-mode mail with the mail address pasted as the address.

Dialing ·····Use the Phone To/AV Phone To function to make a voice, videophone or PushTalk call to a phone number in the phonebook in which the mail address is stored. →p.197

Received calls^{*2}, Redial^{*3}, Dialed calls^{*3}→p.58

Big font ⇔ **Standard font***4...... Switch the font size between Big font and Standard font.

DeleteSelect Delete this/Delete selected/Delete all.

- *1: When SMS is selected, "Compose SMS" appears. Use "Compose SMS" to compose SMS with the phone number pasted as the recipient. "Composing and Sending SMS" -p.176
 *2: Available only on the Received address screen (list/
- detail).
- *3: Available only on the Sent address screen (list/detail).
- *4: Available only on the Address screen (list).

Setting Mail Functions of the FOMA Terminal





Mail Settins 1/2
LISTACIL
LIST

Mail Setting



Select any item:

Scroll·····Select 1 line/3 lines/5 lines as the number of lines to scroll when you press (on the mail detail screen.

Font size······Select X-small/Small/Standard/ Large/X-large. → p.115

Mail list disp.Set the content and number of lines displayed on the Mail list screen. Select 2 lines/1 line/1 line+body, and Subject/Name/Address.

Message display.....Set the position to start displaying the main text.

Standard·····Display the mail from the header (date and time received/sent).

From message ····· Display the mail from the main text.

Start attachment (auto)·····Set whether to automatically play the attached or pasted melody when opening i-mode mail.

Header/Signature → p.172

Mail box lock → p.137

Receiving setting Set whether to give display priority to the receiving screen and received result screen if mail, MessageR/F or i-concier information (p.211) is received while you are using the FOMA terminal.

Alarm preferred······Display the receiving screen and received result screen.

Operation preferred.....Give priority to the screen being used rather than the receiving screen and received result screen.

Receive option setting.....Set whether to receive mail selectively (ON) or automatically (OFF).

Prefer attachment ····· Select Image/i-motion/ Melody/PDF/ToruCa/Tool data (Phonebook, Schedule, Bookmark)/Other as the type of attached file to receive when you receive the mail.

Read out setting

Select voice Set the type of voice used to read out mail.

Read out received mail ······ Set whether to read out mail when received.

Emotion/Keyword → p.173

SMS settings

SMS report request ······ Set whether to request an SMS report when sending SMS.

SMS validity period ······ Select None/1 day/2 days/3 days as the storage period of the SMS to store at the SMS center. When set to "None", SMS are not stored at the SMS center.

SMS input character.....Set the SMS input mode. When set to Japanese, you can enter up to 70 characters regardless of double-byte or single-byte. When set to English, you can enter up to 160 single-byte albhanumeric characters.

Area Mail setting → p.175

Check settings Check the "Mail Setting".

Reset Reset the "Mail Setting" to default.

<Receiving setting>

- When you are receiving/making a voice call, during a voice call or using functions such as i-αppli or camera, the receiving screen and received result screen may not appear when you receive mail or MessageR/F even when set to "Alarm preferred".
- When 2in1 is in A mode or B mode and a mail arrives only at the mail address of the unset mode, the receiving screen appears, but the received result screen does not appear even when set to "Alarm preferred".
- When a mail arrives from the address stored as a Secret phonebook entry in normal mode or from the address other than a Secret phonebook entry in Secret data only mode, the receiving screen appears, but the received result screen does not appear even when set to "Alarm preferred".

<Receive option setting>

 This setting applies to i-mode mail only. SMS and MessageR/F are received automatically regardless of this setting.


<Pre><Prefer attachment>

- To check the file content, you have to download the file manually afterwards. →p.160
- When you deselect the "Other" checkbox, documents will not be received.

Editing header, signature and quotation marks

Stored header or signature can be automatically pasted into i-mode mail main text. You can also edit quotation marks used when you reply to received mail by quoting it.

- The header/signature can be set with Address A when 2in1 is OFF or in A mode, with Address B when in B mode, or with Address A or Address B when in Dual mode.
- Mail Setting screen (p.171)▶ "Header/Signature"
- ② "Edit header" or "Edit signature" ▶■ (Edit)
 - To edit quotation marks
 - ▶ "Fdit Quotation marks"
 - When 2in1 is in Dual mode
 - ▶ "Address A" or "Address B"



You can decorate the header or signature. → p.148

- To enter quotation marks
- ▶Enter quotation marks
- To configure the insert setting for the header or signature
- ▶ "Insert setting" ➤ Select the checkbox of "Header" or "Signature" ➤ ☑ (Finish)

 Deselect the checkbox when you do not insert it automatically.


NOTE

- Even if you select a checkbox under "Insert setting", the header or signature is not inserted when composing i-mode mail via template or maillinked i-αppli.
- If the Insert setting checkboxes are selected, the header/signature can be inserted automatically with Address A when 2in1 is OFF or in A mode, with Address B when in B mode, or with Address A or Address B when in Dual mode. If the header or signature is not set, it is not inserted automatically.

Setting items to check for center inquiries <Set check new messages>

Set items to check using "Check new messages" for "Mail" (i-mode mail), "MessageR" and "MessageF".

"Settings/NW Service"
 "Connection setting"
 "Set check new messages"

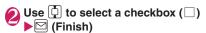

A deselected checkbox (\Box) denotes that the item will not be checked.

Setting Emotion/Keyword for emotionexpressing mail <Emotion/Keyword>

Set whether to display emotion-expressing mail icons when receiving mail. You can set keywords to display icons such as ""."

"Emotion-expressing mail" → p.156

Mail Setting screen (p.171)▶ "Emotion/Keyword"

■ To use "Disp. emotion"
Select the checkbox (□) of "Disp. emotion"
The checkbox is checked

"Disp. emotion"
The checkbox is checked
("'___"), and an emotionexpressing mail icon appears
when you receive mail.



■ To use "Disp. keyword"

► Select the checkbox (□) of "Disp. keyword" ► Enter one or more keywords

The checkbox is checked ("☑"), and the Disp. keyword icon (ଛ୦/ଛ୬/ଛ୬) matching "Keyword" appears.

To delete a keyword

► ch (FUNC) Select a deletion method



NOTE

 Changing or deleting the keywords also deletes the keyword icons displayed on the mail list screen, etc.

When You Receive a Message

When the FOMA terminal is in the service area, MessageR/F are automatically sent from the i-mode center. → p.155

- Up to 100 MessageR/F respectively can be stored.
 The maximum number of messages that can be stored will depend on the size.
- Perform "Check new messages" to receive messages stored at the i-mode center. → p.158
- Refer to p.199 for the MessageR/F settings.


NOTE

 If the total number/size of messages exceeds the limit that can be saved when you receive a message, read messages are deleted from the oldest first. (Unread or protected messages are not deleted.)

NOTE

- When messages are stored at the i-mode center,
 appears. When the number of messages stored at the i-mode center has reached the limit,
 (red)
 (red) appears.
- Received MessageR/F are not automatically displayed when the standby screen is not displayed, i-αppli is active, Public mode (Driving mode) is set, Dial lock is set, or when Original lock is set on "i-mode" or "Disp. recv. mail/msq."

Guide to the MessageR/F screen



Message status

•	
Icon	Description
	Unread message
	Read message
○ —"	Protected read message

- : Protected
- ② Received time and date
 - 2-1 Time appears for message received today
 - ②-2 Date appears for message received yesterday or earlier

Icon	Description		
u u	Message with melody attached or pasted		
e e	Message with image attached or inserted		
1. J.	Message with ToruCa attached		
4 £ £	Message with multiple data attached or pasted		

: Part of data is invalid

*: Data is invalid

<Detail screen>

Icon	Description	
T I	Pasted melody	

*: Data is invalid

4 Subject

Displaying a Message in Message Box <MessageR/F>

When MessageR/F arrives from the i-mode center,
 "R" or "F" appears at the top of the screen.





Function menu⇒p.174

Select a message

To display the next or previous message on the message detail screen, press .

On the message detail screen, press CLR to return to the message list screen.



Function menu⇒p.174

FUNC Message list screen (p.174)

Display all······Reset sort or filter display to default (all in Chronological ↑).

Sort ····· Sort messages by selected criteria.

Filter.....Display only messages that meet the selected criteria.

Protect ON/OFF, Unprotect all, No. of messages

DeleteSelect Delete this/Delete selected/Delete read/Delete all.

 When selecting "Delete read", you can delete only read messages at once.

NOTE

<Sort> <Filter>

- The sort and filter functions can be used together.
 For example, to display unread messages in chronological order, select "Chronological ↓" in the sort menu, then select "Unread" in the filter menu.
- When you exit from the MessageR/F list screen, the sort and filter are released.

FUNC Message detail screen (p.174)

Add to phonebook → p.159

Save melody, Save image, Save ToruCa·····Save a melody/image/ToruCa attached to MessageR/F.

Quick search → p.188

Protect ON/OFF, Change font size, Delete

NOTE

<Save melody>

Some saved melodies may not play correctly.

<Change font size>

 If this setting is changed, "Font size setting" under "i-mode Browser set." (p.198) is also changed.

Early Warning "Area Mail"

Area Mail is a service that enables you to receive Early Warnings issued by the Japan Meteorological Agency.

- An i-mode service subscription and application to receive messages are not necessary to receive Area Mail.
- Area Mail cannot be received regardless of the Receive setting in the following cases:
 - · The power is off
 - " 👺 " is displayed
 - · During a voice call
 - During a videophone call

- During international roaming
- In Omakase Lock
- In Self mode
- During infrared data exchange/iC communications/Bluetooth communications
- Area Mail cannot be received in the following cases:
 - · During i-mode communications
 - · During PushTalk
 - · During data communications
 - · During USB communications
 - · During Software Update
 - · During pattern data update

When You Receive Early Warning "Area Mail"

<Receive Area Mail>

When the FOMA terminal is in the service area, Area Mail is automatically received.

- When you receive Area Mail, " appears at the top of the screen.
- Vibrator works linking to ring tone and beep. As for ring tone, Vibrator does not work when "Mail" under "Vibrator" is set to "OFF".
- If "Manner/Public mode set" is set to "Follow each mode set.", the following applies:
 - When Manner mode is set, the "Manner mode setting" applies to the beep, ring tone linkage and illumination flash. However, if "Original" manner mode is set, the ring tone follows the mail ring volume setting, and the beep sounds when the following items are set to other than "Silent" or "OFF":
 - Record msg.
- Phone vol.
- Mail vol.
- Alarm vol.
- i-αppli vol.
- VM tone
- Keypad sound
- LVA tone
- When Manner mode is set, the "Manner mode setting" applies to the vibrator. Regardless of the "Manner mode setting", the beep always vibrates.
- In Public mode, the beep tone and ring tone do not sound, the vibration does not work, and the indicator does not flash.
- Messages are saved in the Inbox.
- You can store up to 100 Area Mail in the FOMA terminal.

NOTE

 If the storage capacity for Area Mail is full when you receive Area Mail, Area Mail are deleted from the older read Area Mail and unread Area Mail in order.

When you receive Earthquake Early Warning Area Mail

When receiving Area Mail, a screen with information details appears, and notification is made with a special ring tone and handset vibration.

Press , CLR or to return to the previous screen.

- The beep volume cannot be changed (fixed at Level 6). The beep time can be set in "Beep time" under "Area Mail setting".
- When you receive Area Mail other than Earthquake Early Warning

When you receive Area Mail, the "Receive Area Mail" or the "Notice" screen appears, then the Area Mail ring tone sounds (the screen is determined by the sender). The "Receive Area Mail" screen returns to the previous screen if no operation is performed for a given time or you press any key. Press , CLR or to return to the previous screen.

 The ring tone volume is determined by "Mail" under "Ring volume".

NOTE

- The notice screen or "Receive Area Mail" screen may not appear when you receive Area Mail in the following cases:
 - In Public mode (Driving mode)
 - · During streaming playback
 - · A microSD card is being accessed

Setting Early Warning "Area Mail" Area Mail setting>

Configure Area Mail receive settings.

Mail Setting screen (p.171)▶"Area Mail setting"▶Select any item:

Receive setting ······ Set whether to receive Area Mail.

Beep time Set the beep time between 01 and 30 seconds.

Manner/Public mode set ······Set whether to vibrate when Area Mail is received in Manner mode/Public mode. When set to Ring in manner/public, vibration works even in Manner mode/Public mode. When set to Follow each mode set., the Manner mode/Public mode settings apply.

Check ring tonePlay the ring tone for Earthquake Early Warnings/Disaster and Evacuation Information.

Other menu······Register ID for Area Mail to receive.

Receive entry······Register "Area Mail name" (any name) and "Message ID" (message ID issued by the service provider) of the information you want to receive except Early Warning. Select "<Not recorded>" on the "Receive entry" screen, then enter your security code to register. Early Warnings are received regardless of the Receive entry setting.


Composing and Sending SMS

The destination is designated by the phone number.

<Compose SMS/Send>

 This service allows you to exchange text messages with subscribers to overseas operators other than DOCOMO. For countries and operators, refer to "Mobile Phone User's Guide [International Services]" or the DOCOMO International services website.







Function menu⇒p.176

"<u>To</u><No address>"▶Enter an address

Select a mail address input method to enter the address. Entering from the

phonebook or received address list, Entering directly → p.146



If the recipient uses an overseas operator other than DOCOMO

► + (Enter + (() (1 second or longer)), country code, and the other party's mobile phone number

If the mobile phone number begins with zero (0), omit the zero.

You can also send SMS by entering "010", country code, then the other party's mobile phone number. (To reply to SMS received from overseas, enter "010".)



The number and type of characters that can be entered are based on the "SMS input character" settings.

Spaces are also counted in the same way as characters.



An animation is displayed while the SMS is sent.

NOTE

- You cannot send SMS to the entered address when:
 - The address contains characters other than numbers. "#" or "#"
 - "+" is entered at other than the beginning of the address
 - · The address contains a space
- Depending on the signal quality, character type or the other party's phone, text may not appear correctly.
- Even when "Caller ID Notification" is set to "OFF", your caller ID appears on the recipient's display when SMS is sent.
- A line feed is counted as 2 characters in Japanese input mode and as 1 character in English input mode.
- You cannot send SMS from the additional number of multi number. Set the multi number setting to the basic number.
- When 2in1 is in B mode, you cannot compose and send SMS
- You cannot send divided (concatenated) SMS.

FUNC New SMS screen (p.176)

Send

Preview Check the SMS recipient and content before sending it.

Save → p.153

SMS report req.* ······Set whether to request an SMS report when sending SMS.

SMS valid. per.*.....Select None/1 day/2 days/3 days as the storage period of the SMS to store at the SMS center when the SMS did not reach the recipient due to out of range, etc. When set to "None", the SMS is resent and deleted after a given time.

SMS input char.*.....Set the SMS input mode. Select Japanese (70 single-byte/double-byte characters) or English (160 characters).

Erase message, Delete

*: Available only for a single SMS being composed. To retain the settings for all SMS, configure the settings in "Mail Setting" (p.171).

SMS reports are mail to report that the other party has received SMS. You can check SMS reports using "Disp. SMS report" in the function menu of the Inbox or sent SMS detail screen. SMS reports are indicated by "SMS report" in the subject line.

When You Receive a SMS

<Receive SMS>

When the FOMA terminal is in the service area, SMS is automatically sent from the SMS center.

- Operations to be performed when SMS is received are the same as ones for i-mode mail. Also, the storage capacity and operations to be performed when the storage capacity for received mail becomes full are the same as for i-mode mail.
- The beginning of the SMS main text appears as the subject on the Received mail list screen.

NOTE

- If you receive Short Mail sent from a mova terminal, etc., the sender's phone number appears. If the caller ID is not notified, the reason appears.
- If received SMS contains double-byte characters that are not listed in Kuten Code List, those characters appear as spaces (blanks). For Kuten Code List, refer to the PDF "Kuten Code List" in the bundled CD-ROM.
- If concatenated SMS arrives, original SMSs appear without being concatenated.

Forwarding/Replying to received SMS

Forward SMS or send a reply to the sender. \rightarrow p.158

You cannot enter a subject.

NOTE

- You cannot reply to SMS when the sender did not show the caller ID (User unset), or sent SMS from a pay phone (Payphone) or phone that is not stored in the Phonebook (Unknown).
- Even if you reply to or forward SMS in a FOMA card (UIM), "
 " remains on the Received mail list screen/Received mail detail screen, while "
 "" "
 " does not appear.

NOTE

 When 2in1 is in B mode or Dual mode, you cannot reply to SMS sent to Number B.

Checking New SMS

<Check new SMS>

SMS that the FOMA terminal could not receive are stored at the SMS center. You can receive the stored SMS by checking new SMS.

- The message will be saved for you at the SMS Center in the following cases:
 - · The power is off
 - " 👺 " is displayed
 - Inbox is full
 - In Self mode



"SMS Checking..." is displayed during inquiry. Press (Select) after inquiry. The auto reception starts if any SMS is stored at the center.

The auto reception may not start immediately after inquiry.

Setting the SMS Center

<SMS center selection>

 Refer to "SMS settings" (p.171) on the "Mail Setting" screen for the SMS settings other than the SMS center.

* There is normally no need to change this setting.

Set whether to use the DOCOMO's SMS center or another SMS center.

■ "Settings/NW Service"
"Connection setting"
"SMS center selection"
Select any item:

DOCOMO Use the DOCOMO's SMS center.

User setting·····Enter the SMS center's address, then select International/Unknown to use another SMS center.

Reset·····Delete the "User setting" data and reset the setting to "DOCOMO".

NOTE

 If the entered SMS center address contains "#" or "X", you cannot select "International".

i-mode/Full Browser

I-III0de	100
Full Browser	182
Viewing and Operating i-mode Sites or Websites	185
Searching by KeywordQuick search	188
Displaying i-mode Sites or Websites by Entering URLInternet connection	189
Saving i-mode Sites or Websites for Quick Access Bookmark	190
Connecting to Multiple Pages Continuously	191
Saving i-mode Site or Website Contents	192
■ Downloading images, melodies, etc. from i-mode sites or website	es
Downloading Fee-Based Content	193
Downloading Data from i-mode Sites or Websites	193
Flash Function	196
■ Uploading images, moving pictures, etc. to i-mode sites or webs	ites
Uploading Images or Moving Pictures	197
■ Useful functions of i-mode	
Using Phone To/AV Phone To/Mail To/Web To/Media To Function	
Phone To/AV Phone To/Mail To/Web To/Media To function	197
Setting i-mode Browser/Full Browser	
Setting i-mode Browser/Full Browser	198
Cookie	200
Referer	201
■ Using certificates	
Setting SSL/TLS Certificates	201
Setting FirstPass	201
Changing Host for Certificate Issue	203

i-mode

i-mode is an online service that gives you access to a wide range of handy information via i-mode menu sites or i-mode compatible websites from your i-mode handset, and lets you easily exchange mail.

- i-mode requires a subscription and is a fee based
- For details on i-mode, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Notes on use

- · Information on i-mode menu sites and Internet websites is generally protected by copyright law. Text and images downloaded from these sites to i-mode handsets should be for personal use only and cannot be sold or redistributed in part or as a whole in their original or a modified form without the copyright holder's permission.
- . If the FOMA card (UIM) is replaced or the power is turned on with no FOMA card (UIM) inserted, some models cannot display/play images, movies and melodies downloaded from sites, files attached to mail (images, movies, melodies, etc.), "Screen memo" and "MessageR/F".
- · If a file whose display and playback are restricted by the FOMA card (UIM) is set as the standby screen or as a ring tone, the default settings apply if the FOMA card (UIM) is replaced or the power is turned on without the FOMA card (UIM) inserted.

Starting i-mode Browser

<i-mode menu/site>

Various services provided by content providers are available. (Application may be required.)

• Up to 500 KB per page can be viewed with the i-mode Browser.





"=" flashes while communicating with the i-mode Center, and " = " flashes when receiving i-mode services (during i-mode).

If "i-mode button set." (p.182) is set to "Display i-mode menu", the i-mode menu screen appears when is pressed.



To view an English i-mode site

Scroll down to the bottom of the iMenu screen to select "English"

- Some Japanese iMenu may not be available for English website.
- · Generally, "What's New" is updated every other Monday.
- · English iMenu sites differ from the Japanese ones.

To view sites registered in My Menu

▶"English" My Menu Select a site

"Viewing and Operating i-mode Sites or Websites"

→p.185 Tabs → p.182

Quick Search → p.188

To cancel downloading pages





Function menu⇒p.183

To quit i-mode, press **□** "YES"

NOTE

- The i-mode service area is the same as the service area for calls using the FOMA network.
- · i-mode information charges may apply depending
- The number of colors displayed on certain sites may exceed the maximum number of colors that the FOMA terminal can display. The site may look different from the actual one.
- On some i-mode-compatible sites and websites, text cannot or hardly can be seen with the preset colors.
- When information on tracks played on your mobile phone is requested from a site, a screen appears asking whether to send music information. Select "YES" to send the information (title, artist name and play date) on tracks played on your FOMA terminal. The sent music information is used to provide information that content providers customize for you.

Subscribing to a site in My Menu

<My Menu>

Simply register your favorite sites in My Menu and you will have quicker access the next time you choose to visit.

- Up to 45 sites can be registered in My Menu.
- Some sites cannot be registered.
- To quickly access an i-mode site or website, use "Bookmark"



NOTE

 When you apply for fee-based i-mode sites in the iMenu list, they are automatically registered in My Menu.

Changing i-mode password

<Change i-mode Password>

Your 4-digit "i-mode password" is required to register/ unregister sites in My Menu, to subscribe to message services or to configure mail settings.

- The default i-mode password when you apply for i-mode service is set to "0000". Please set a new password.
- Keep your i-mode password private, and avoid sharing it with others.
- If you have forgotten your i-mode password, please bring official documents that verify your identity, such as a driver's license, to a docomo Shop Service Counter
- "English" "Options" "Change i-mode Password"

(asterisk) string.

- Select "Current Password" Enter your current i-mode password
 The entered password appears as a " * "
- Select "New Password" Enter a new i-mode password

 Enter a 4-digit number.
- Select "New Password
 (Confirmation)" Enter the new
 i-mode password again
 Enter the same number that you entered in Step 3.



"みんなNらんど" (Only in Japanese)

Download and save i-αppli, dictionary, Deco-mail template from the site "みんないらんど" of iMenu that can be used for various purposes on your FOMA terminal

To restore the pre-installed i-αppli, PDF data, Deco-mail pictogram, etc. after deleted, download them from "みんないらんど". Packet communications charges apply to download.

There are two methods to access "みんなNらんど":

- **メニューリスト*** ** **ケータイ電話メーカー**● **みんなNらんど** (Japanese)
- Scan the QR code on the right and select the displayed URL → p.230



Mobile phone/FOMA Card (UIM) serial number information

When i-mode menu sites and Internet websites are displayed and you choose an item, the communications confirmation screen for mobile phone/FOMA Card (UIM) serial number information may be displayed.

 The confirmation screen will always be displayed before mobile phone/FOMA Card (UIM) serial number information is transmitted. Mobile phone/ FOMA Card (UIM) serial number information will not be transmitted automatically.

NOTE

- The transmitted mobile phone/FOMA Card (UIM) serial number information is used by content providers to identify you and provide customized services for you and to confirm that you can use content the providers offer.
- Any mobile phone/FOMA Card (UIM) serial number information is transmitted to content providers via the Internet, and may be disclosed to a third party as a result. The information such as your phone number, address, age or gender is not transmitted to content providers, etc.

Changing the shortcut function of the i-mode button <i-mode button set.>

Change the function to activate by pressing in on the standby screen. To display the i-mode menu screen, select "Display i-mode menu".

- ►"i-mode" i-mode settings" ▶"Common settings"▶"i-mode button set."
- Select "Connect by iMenu" or "Display i-mode menu"

Switching from i-mode Browser to Full **Browser**

Switch to the Full Browser to display an i-mode site or website that cannot be displayed with i-mode Browser.

When websites intended for computers are not displayed properly with i-mode Browser, you can view them by switching to the Full Browser.

- Note that charge systems are different between i-mode Browser and Full Browser.
- The website screen displayed via i-mode (FUNC) "Switch to FB" "OK" or "OK (default)"

Full Browser

The Full Browser function now makes it even easier to view websites intended for computers. Some websites incompatible with i-mode can be displayed correctly.

- Some websites may not be displayed or may be displayed incorrectly.
- Note that communications charges may be high if large volumes of data are transmitted by viewing websites containing many image data or downloading files. For details on packet communications charges, refer to "Mobile Phone User's Guide [i-mode] FOMA version". The i-Channel service is only available in Japanese.
- Up to 1.5 MB per page can be viewed with the Full Browser.

Starting Full Browser

"i-mode" Full Browser Home"

When a message appears asking whether to use Full Browser


The default setting of "FB usage set." (setting whether to use Full Browser) is "OFF". When "FB usage set," is set to "OFF", a message appears asking whether to use Full Browser. Read the given notes carefully and perform the setting.

If you select "Yes" here, "FB usage set." (p.198) is set to "ON" and the setting will be retained.

NOTE

- "FB usage set." cannot be set without a FOMA card (UIM) inserted.
- When "FB usage set." is set to "ON" and the FOMA card (UIM) is replaced, the "FB usage set." changes to "OFF".

How to view the screen

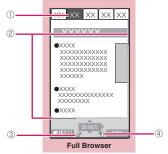

Function menu⇒p.183

- ① Tab
 - . Title of the displayed website (if there is no title, the URL appears)
 - · As many tabs as websites displayed simultaneously
- ②Scroll bar

Current position in the displayed website (Not displayed in Keitai mode)


③ 閉 or ๗

Displayed while connecting to the Internet with Full Browser (" R" when in Keitai mode)

Displayed when the pointer is available

Lavout

2 display modes are available for the Full Browser screen: PC layout mode and Keitai mode.



■PC layout mode

View websites in the size similar to the display of 800 dots wide \times 600 dots high on a PC. You can view the area not displayed on the screen by scrolling vertically and horizontally.

■ Keitai mode

Fit websites to the width of the FOMA terminal display. Only vertical scrolling is required for viewing websites.

■Switching display modes

PC layout mode and Keitai mode toggle each time you select "Change disp. Mode" from the function menu.

- The default mode can be set in "Display mode setting" (p.198) under "Full Browser set."
- The display mode is retained when you exit Full Browser. The same display mode is applied when the Full Browser is activated next time.

Operations in Drag mode

When "Pointer display" (p.198) is set to "ON", activating the drag mode with Full Browser allows you to operate the drag-mode-compatible content.

- The drag mode is not available in Keitai mode.
- The operations available while in drag mode may vary depending on the content.
- With the pointer on the content, pressing

 (1 second or longer) turns the pointer into "○" (Start), then you can grab and drag to move the content. On the destination, pressing turns the pointer into "○" (End) then the content drops. Pressing (1 second or longer) again or CLR restores the pointer to previous.
- If you place the pointer on the Flash movie in drag mode, "p" appears and the drag mode operations are disabled.

Useful keys for the Full Browser screen

Key	Description
1	Zoom out
	* Reduce the font size in Keitai mode
2	Select a desired portion in the entire page
	* In PC layout mode only
	* Not available in wide display
3	Zoom in
	* Enlarge the font size in Keitai mode
4	Jump back to a page stored in cache
5	Display the Bookmark folder list screen
6	Jump forward to a page stored in cache
9	View in wide display or release the display
	mode (return to the vertical display)
	* Only in PC layout mode and when "Auto-
	change Screen" (p.114) is set to "OFF"
0	Display the description of an operation
	assigned to a key
#	Show/Hide the pointer

FUNC

i-mode Browser screen (p.180)/ Full Browser screen (p.182)

Add Bookmark → p.190

Bookmark → p.190

Add Screen Memo → p.192

Screen Memo List → p.192

URL History → p.188

iMenu/Search → p.180

(This option appears under "Pointer setting" on the Full Browser screen.)

Switch to FB^{*1}······Switch to the Full Browser to display a website that cannot be displayed via i-mode.

→ p.182

Switch to i-mode *2······Switch to i-mode to display a website that cannot be displayed with the Full Browser. →p.185

Enter URL/info

Enter URL······Enter a URL to connect to a website.

Display URL. · · · · · Display and check the page URL. If the entire URL does not appear, press ■ (Select), then use □ to move the cursor to view the rest of the URL. Press ■ (Select) again to hide the cursor.

Title Display and check the page title.

Certificate Display the content of the SSL/ TLS certificate when the page is compatible with SSL/TLS

Save/Add

Save one image^{*1}, Save some images^{*1},
Background image^{*1}, Save image^{*2}→p.194

Save schedule*1······Save a schedule while browsing a page. → p.359

Add to phonebook → p.187

One-touch multi → p.191

Copy······Copy text on the displayed page.

►Use to move the cursor to the beginning of text to copy (Start) Use to highlight up to the end of text to copy (End)

Change font size*1*3......Select Small/Standard/ Large/X-large. →p.115

Zoom*4.....Select 60%/80%/100%/120%/150%/
180%/200%/250%/400%/Page size fitting*5. When Page size fitting is selected, further select a desired portion in the entire page.

Window

Open new window······"Viewing multiple websites" → p.187

Close window......Close the displayed window.

Change window······Switch windows when multiple websites are open.

i-Channel*1 → p.209

All Frames Return to the all frame screen from the selected frame screen

Add desktop icon → p.116

Compose message Compose i-mode mail or Deco-mail with the URL of a page pasted into the main text or an image inserted/attached.

Site display

Replay·····Play the Flash movie or animation on the page from the beginning.

Quick search → p.188

Reload ····· Refresh a page.

Previous page······Go back to a page viewed previously before the current page.

Next page······Return to a page that had been displayed before performing "Previous page".

Display home *1......Display the page set as the home URL. To use this option, set "Home URL" to "Valid". → p.198

Change CHR code······Change the character code to redisplay a page that is not displayed correctly.

Site settings

Set image disp. ·····Set whether to display images on the page. When set to "OFF", " appears for images that are not displayed.

Sound setting······Adjust the volume of the Flash.

Script setting · · · · · Set whether to validate JavaScript when displaying a page. Some websites may be displayed incorrectly unless set to "Valid".

Set as home URL*1......Set the URL of the displayed page as home URL. Only a single URL can be set as the home URL.

Set as FB home URL*2......Set the URL of the displayed page as home URL. Only a single URL can be set as the home URL.

Pointer setting → p.198 (Function menu)

Full Browser Home.....Display a website registered in FB Home setting. (This option appears under "URL History" on the Full Browser screen.)

Change disp. Mode *2 ····· Switch between PC layout mode and Keitai mode.

Change side mode ⇔ Release side mode *4*6......

View pages in wide display, or release the display mode (return to the vertical display).

- *1 : Available during i-mode communications.
- *2 : Available with the Full Browser.
- *3 : Available in Full Browser Keitai mode.
- *4 : Available in Full Browser PC layout mode.
- *5 : Not available when in full wide display.
- *6 : Available only when "Auto-change Screen" (p.114) is set to "OFF".

NOTE

<Add Screen Memo> <Save one image> <Save some image> <Background image> <Save image>

 An image or screen memo may not be saved if saving is prohibited on the page.

<Certificate>

 When a certificate is displayed, the screen scrolls at a constant speed regardless of the "Scroll" setting.

<Save one image> <Save image>

 BMP images are automatically saved to the "OUDXXX" (XXX: numeric) folder under the "OTHER" folder in a microSD card.

<Copy>

- Only a single data can be stored by Copy. Copying a new item overwrites the previously stored text.
- Text cannot be copied if copying is prohibited.

<Change CHR code>

- If text is not displayed correctly, repeat the procedure. If the procedure is repeated 4 times. the default character code applies.
- Some sites may not be displayed correctly even if the procedure is repeated.
- If you change the character code when a site is displayed correctly, the site may no longer be displayed correctly.

Switching from Full Browser to i-mode Browser

Switch to i-mode Browser to display a website that is being displayed with the Full Browser.



Website displayed with Full Browser ► ch (FUNC) - "Switch to i-mode"

NOTE

- You can go back or forward to a page stored in cache after the modes switch only if the current page is viewed in tab display.
- Text data is cleared when switching while entering text in the text box.
- If you open a Full Browser screen memo with the i-mode Browser or an i-mode screen memo with Full Browser, you cannot go back to the viewed
- If the browsers switch twice or more, you cannot go back to two pages ago.

Viewing and Operating i-mode Sites or Websites

This section describes operations to view i-mode sites or websites.

 Some websites may not be available for the pointer operation. In this case, it may be allowed if setting "Pointer display" (p.198) to "OFF".

Viewing SSL/TLS pages

To view SSL/TLS* pages, the following certificates are required:

- · CA Certificate: The certificate issued by the certificate authority is stored in the FOMA terminal at the time of purchase.
- DOCOMO Certificate: The certificate required to connect to the FirstPass center is stored in a FOMA card (UIM) (green/white).

- User Certificate: The certificate downloaded from the FirstPass center is saved to a FOMA card (UIM) (green/white) by operation in "Connecting to the FirstPass center" (p.201).
- *: SSL and TLS are authentication/encryption technology for secure data transmissions. Data sent to or received from a SSL/TLS page is encrypted to prevent hackers from eavesdropping data, site spoofing or altering, thus making credit card transactions and the sending of personal information (e.g. address) safer.

Open an SSL/TLS page

The SSL/TLS page and " 🎘 " appear.

■ To cancel authentication ▶"Cancel"







Move from an SSL/TLS page to a normal page "YES"

SSL/TLS communication ends and " 2" disappears.

NOTE

 A message such as "This site is not certified Connect?" may appear when you attempt to open an SSL/TLS page. Such a message appears when the SSL/TLS certificate for the page has expired or is not supported. You can open the page by selecting "YES", but you may not be able to safely send your personal information such as vour credit card number or contacts.

Displaying images

- The FOMA terminal can display GIF/JPEG/PNG/ BMP images and Flash movies (p.196). However, some images may not be displayed regardless of the format.
- When a Flash movie is displayed, the display operation may differ from that on a normal site.
- When you play a Flash movie stored in Data Box, Screen memo or microSD card, the movie may look different depending on the location.
- You can set whether to view images in "Set image disp."

Displayed image icons



(color): Appears while an image is loaded or when "Set image disp." is set to "OFF"



: Appears if an image could not be loaded

(B/W): Appears when an image cannot be loaded

Scroll function

If text or list on a page does not fit in the screen, scroll vertically or horizontally to view the entire page.

Key	Description
₩	Scroll in the direction that the key is pressed. Holding down the key scrolls the screen continuously in the same direction.
▼ (▲), 🌡 (マナー)	Scroll up or down by screen.
▼ (▲) (1 second or longer)), • (マナー) (1 second or longer)	Jump to the bottom or top of the website. * Not available with i-mode Browser

■ To scroll using the pointer


If "Pointer display" (p.198) is set to "ON", use + to move the cursor, and " - ", etc. appears when the cursor reaches the edge of screen, then the screen scrolls.

Double-click function

When an action such as enlarging is assigned to the content, double-tapping executes the action. However, it is unavailable in drag mode.

Selecting a link or item

You may need to perform the following operations on some i-mode sites or websites:



Link

Select the item to go to the linked page.

(2) Text box

Enter text directly. When you select a text box, the text entry (edit) screen appears.

- ③ Pull-down menu Select an option from the list. Only an option is displayed, and hidden options appear as a list when you select the pull-down menu.
- ④ Radio button Select one from choices. • indicates the selected item.

- (5) Checkbox
 - Select one or more items from choices.
 indicates the selected items.
- Button

Select the button, and the function assigned to the button is activated.

Jumping to the previous/next page


You can jump back or forward to a page stored in the cache. Up to 31 pages in a window (up to 155 in all windows).

Press ☑ (Back) to jump back to the previous page or • (Next) to jump forward to the next page

Using the function menu

Ch (FUNC) ► "Site display" ► "Previous page" or "Next page"

When the page display sequence is "A"→ "B"→"C"→"B"→"D"



: Display order

: Previous screen from "D"

■ To display pages stored in cache

- Cache refers to the memory that temporarily stores data from i-mode sites or websites you have visited. When you use ☑, ⑤ or the function menu to move to another page on an i-mode site or website, a page stored in cache is displayed without communicating. However, if the cache is full or if the page is set to always load the updates, a communication is established even when you go back or forward to the previous/next page. Also, even when the page is stored in cache, if the date and time information has been updated, a communication is established and the latest data appears.
- When site data is loaded from cache, the previously-entered text and settings do not appear.
- The cache is cleared when you close i-mode Browser/Full Browser.
- When you load an SSL/TLS page from cache, a message appears indicating that an SSL/TLS page will be displayed.

Viewing multiple websites <Multi-window>

Open up to 5 websites (up to 6 websites including i-Channel) at once.

 When multiple websites are open, you can use tabs to switch pages by pressing ☐ (1 second or longer) or selecting "Window" - "Change window" from the function menu.



i-mode Browser screen (p.180), Full Browser screen (p.182)► Highlight a link► (1 second or longer)

The page opens in a new window.

- To close an opened website
- CLR "YES"

Opening websites other than linked pages

i-mode Browser screen (p.180), Full Browser screen (p.182)▶ ch (FUNC)▶"Window"▶"Open new window"▶Select any item:

Link····· Display the linked page in the same way as (1 second or longer).

Bookmark Display a bookmarked website.

Enter URL Enter a URL to display the website.

Display home*1.....Display a website registered as the home URL.

Full Browser Home*2.....Display a website registered in FB Home setting.

- *1: Available with the i-mode Browser.
- *2: Available with the Full Browser.

NOTE

- You cannot arrange opened websites tiled.
- When you select a bookmark or URL of a browser different from the active browser, all open windows are closed and a new window is opened.
- When you press (1) (1 second or longer) to open a new page during page download, the download stops.

Adding a phone number or mail address to the phonebook

<Add to phonebook>

Add a phone number or mail address displayed on a page or screen memo to the phonebook.

<Example: To add a phone number displayed on a page>

i-mode Browser screen (p.180), Full Browser screen (p.182) ch (FUNC)▶"Save/Add"▶"Add to phonebook"▶"YES"▶Add the phone number to the phonebook

Adding information to the phonebook → p.86 The name, reading and mail address added to the phone number are also saved to the phonebook together with the phone number. Enter all necessary items and save to the phonebook.

Displaying a framed page

You can view framed websites by frame.

- *: The "frame" used in this chapter refers to each of separated sections that constitute a page and differs from that used for framed photography.
- When a framed website is displayed and some frames are not compatible with SSL/TLS, the download confirmation screen appears. Select "YES" to clear the SSL/TLS icon and display a non-SSL/TLS page.
- "@" appears when the frame is selected and displayed, and "f" appears when another frame is communicating while the selected frame is displayed.
- i-mode Browser screen (p.180), Full Browser screen (p.182)▶ Display a framed website





The selected frame is displayed.



To return to the framed screen CLR

NOTE

 If there are many separate frames, not all the frames may be displayed (frames without text or images may appear).

Reconnecting to previously-visited i-mode sites or websites <URL History>

Up to 30 previously-visited i-mode sites or websites are recorded in "URL History". Use "URL History" to reconnect to previously-visited i-mode sites or websites.

" appears for i-mode sites, and " = " for websites viewed with Full Browser.





Function menu⇒p.188



FUNC URL History screen (p.188)

Add Bookmark → p.190

Display URL → p.183

Delete Select Delete this/Delete selected/Delete all.

Searching by Keyword

<Quick search>

Open a search window in each function, and search for a keyword via i-mode or search engine such as Google to obtain information quickly.

- Quick search can be started from the following screens:
 - · i-mode, Full Browser, Screen memo or i-Channel
 - Received mail or MessageR/F detail screen or Compose message screen
 - · Schedule/Holiday detail screen

<Example: To make a guick search with i-mode Browser or Full Browser>

i-mode Browser screen (p.180), Full Browser screen (p.182) ch (FUNC) "Site display" "Quick search"

Select any item:

Enter keyword Enter a keyword directly.

Voice input → p.393

Quote keyword Select a portion of text for a keyword. Available only on the i-mode Browser screen, Full Browser screen, New mail Compose message screen, Received mail detail screen, or Schedule/Holiday detail screen.

History Select a keyword from previously entered words.

iMenu/Search → p.180

After entering a keyword, select anv item:

i-mode······Search via i-mode.

Refer dictionary → p.371

Read Map*1 → p.292

Google 検索 (Google search), Google 画像検索 (Google image search). Googleニュース検索 (Google news search) ······ Search with Full Browser.*2

- *1 : Available during i-mode communications.
- *2 : URLs registered in "Quick search URL" will be added. → p.189







- <Quote keyword>
- Text cannot be copied if copying is prohibited.

Setting the search engine for guick search <Quick search URL>

Set search engines for quick search with Full Browser, Up to 6 URLs can be stored.

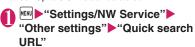



Retrieve a search item (URL) from the registered site.

To delete a registered URL

► Highlight a registered URL Ch (FUNC) "Delete this" YES"

Displaying i-mode Sites or Websites by Entering URL

<Internet connection>

Enter a URL to view a website

• " appears for i-mode sites, and " F " for websites viewed with Full Browser.





Function menu⇒p.189



- To view the site with i-mode Browser
- ▶"i-mode Browser"
- To view the site with Full Browser ("FB permission disp," is set to "Display always")
- ▶ "Full Browser" ▶ "OK" or "OK (default)"
- To view the site with Full Browser ("FB permission disp." is set to "Not display")
- "Full Browser"

Opening sites from the URL History

10 previously-entered URLs are recorded in URL History.



Select a URL

- To edit the selected URL
- ▶ Select "Internet address" ▶ Edit the URL
- To view the site with i-mode Browser
- ▶"i-mode Browser"
- To view the site with Full Browser ("FB permission disp." is set to "Display alwavs")
- ▶ "Full Browser" ▶ "OK" or "OK (default)"
- To view the site with Full Browser ("FB permission disp." is set to "Not display")
- ▶ "Full Browser"

NOTE

• When you enter a URL to connect to a site, visits to the same URL are recorded as separate

FUNC URL list screen (p.189)

Add desktop icon → p.116

Compose message ······ Compose i-mode mail with the URL pasted in the main text.

Set as home URL*1.....Register the URL as the home URL. Only a single URL can be set as the home URL.

Set as FB home URL*2

DeleteSelect Delete this/Delete selected/Delete

- *1 : Available when a URL opened with i-mode Browser is selected
- *2 : Available when a URL opened with Full Browser is selected.

Saving i-mode Sites or Websites for Quick Access

<Bookmark>

If you frequently access the same sites, mark them with bookmarks.

- You can change the titles of bookmarks and categorize the bookmarks by folder.
- You can access up to 5 bookmarked sites simultaneously. → p.191
- " " appears for i-mode bookmarks, and " " for Full Browser bookmarks.

Adding bookmarks

- Up to 200 sites can be bookmarked for i-mode and Full Browser
- You can register up to 256 single-byte characters of a URL for i-mode and 512 for Full Browser.
- Some i-mode sites or websites cannot be bookmarked.

<Example: While a site is open>

i-mode Browser screen (p.180), Full Browser screen (p.182)▶ ch (FUNC)▶"Add Bookmark"▶ "YES"▶Select a folder

NOTE

 Bookmark titles can consist of up to 12 doublebyte or 24 single-byte characters. The excess is truncated when the bookmark is added. If no title is given, the URL appears excluding "http://" or "https://".

Using a bookmark to access an i-mode site or website

- The bookmark opens the site with the browser used when registered.
- "i-mode" "Bookmark" Select a folder Select a bookmark
 - Bookmark list screen





Bookmark folder list screen (p.190)

 You cannot rename or delete the default Bookmark folder

Add folder Enter a folder name to add a folder. You can add up to 19 folders.

Edit folder name ······Edit the folder name of the added folder.

Sort folder······Select the position and rearrange the folder.

No. of Bookmarks.....Display the total number of bookmarks in all folders.

iC trans, all → p.341

Send all Ir data → p.340

Send via Bluetooth → p.341

CopyAll to microSD → p.329

Delete folder.....Delete a folder and bookmarks in the folder.

Delete allDelete all bookmarks. The bookmark folders are not deleted.

NOTE

<No. of Bookmarks>

 The number of bookmarks in the microSD folder or Secret folder does not appear.

FUNC Bookmark list screen (p.190)

MoveSelect Move this/Move selected/Move all, then select the destination folder to move the bookmarks.

Edit title

Add desktop icon → p.116

Compose message ····· Compose i-mode mail with the URL pasted in the main text.

Attach to mail ····· Compose i-mode mail with a bookmark attached.

iC transmission → p.341

Send Ir data → p.340

Send via Bluetooth → p.341

Copy to microSD → p.329

Set mlt win. · · · · · Register a bookmarked i-mode site or website for One-touch multi window. → p.191

Set as home URL^{*1}.....Register the URL as the home URL. Only a single URL can be set as the home URL.

Set as FB home URL*2

Copy URLCopy the URL of a bookmark. Copied URL can be pasted into the text entry (edit) screen, etc. → p.390

No. of Bookmarks

Delete ·····Select Delete this/Delete selected/Delete all.

Keep in secret ⇔Put out*3······*Preventing Others from Viewing Data"→p.129

Bookmark info*4......Display the bookmark title and URL.

- *1 : Available when an i-mode bookmark is selected.
- *2 : Available when a Full Browser bookmark is selected.
- *3: Available only in Secret or Secret data only mode.
- *4 : Available only for bookmarks stored in a microSD card.

Connecting to Multiple Pages Continuously <One-touch mlt win.>

Register up to 5 i-mode sites or websites (per group) to access at once, then display them all using multi window. Up to 20 groups can be registered for i-mode and Full Browser.

Adding i-mode sites or websites to access

- i-mode Browser screen (p.180), Full Browser screen (p.182) ch (FUNC) "One-touch multi" "Set disp. win." "YES"
 - To register all displayed windows
 - ▶"Set all window"▶"YES"



Function menu⇒p.191

Select a group▶"<Not recorded>"

To overwrite an already registered site

Select a registered site
"YFS"



Function menu⇒p.191

Connecting to all the registered i-mode sites or websites at once

Using the i-mode menu



- To list the group data
- ▶ (Detail)
- Using i-mode sites or websites
- i-mode Browser screen (p.180),
 Full Browser screen (p.182)

 ch (FUNC) "One-touch multi"
 "Group list" Select a group
 "YES"

FUNC Group list screen (p.191)

Edit group name

Add desktop icon → p.116

Delete group ······Reset the selected group to default.

Delete all group Reset all groups to default.

FUNC Data list screen (p.191)

Delete this, Delete all

Sort Sort the sites.

Site info.....Display the title and URL of the i-mode site or website.

Add Bookmark → p.190

Edit title

 When adding an i-mode site or website, the function menu may not appear depending on the operation.

Saving i-mode Site or Website **Contents**

<Screen memo>

Save previously displayed information such as transfer guide as screen memo or image (of page displayed on the screen) to the FOMA terminal.

Saving a screen memo

- Up to 200 screen memos and images can be stored for i-mode and Full Browser. The number of screen memos and images that can be stored varies depending on the data amount of each page.
- " appears for i-mode screen memos, and " Fa" for Full Browser screen memos.
- The maximum storable size of each screen memo is 500 KB for i-mode and 1.5 MB for Full Browser, and the maximum storable size of each image is 200 KB
- Some pages cannot be saved as screen memos.
- i-mode Browser screen (p.180), Full Browser screen (p.182)
 - ch (FUNC) "Add Screen memo"
 - To save a screen memo or image ▶"YES"
 - To save an image only
 - ▶"YES (Image only)"

NOTE

- When you save an SSL/TLS page, the SSL/TLS certificate of the page is also saved.
- If you save an already saved page, it is saved as a new screen memo without overwriting the existing
- If you save a page as a screen memo with items already selected/entered in a radio button, checkbox, text box, pull-down menu or selection box, the saved screen memo does not contain the item.

Displaying a screen memo

When a screen memo link is selected, the site opens with the browser used when the memo was saved.



Screen Memo list/detail screen



Function menu⇒p.192



Function menu⇒p.192

NOTE

 Screen memo data at the save time may differ from the latest data.



Edit title, Protect ON/OFF, No. of Memos

Display URL Display and check the page URL. If the entire URL does not appear, press (Select), then use 🗘 to move the cursor to view the rest of the URL. Press (Select) again to hide the cursor.

DeleteSelect Delete this/Delete selected/Delete all

NOTE

<Protect ON/OFF>

 Up to 100 screen memos or up to 10 MB can be protected. The number of screen memos that can be protected varies depending on the data size.



Edit title, Protect ON/OFF

Save/Add

Save one image*1, Save some images*1, Background image*1, Save image*2 → p.194

Save schedule*1.....Save a schedule while browsing screen memos.

Add to phonebook → p.86

Copy Copy text on the displayed page.

►Use 🗗 to move the cursor to the beginning of text to copy (Start) Use (To highlight up to the end of text to copy

Quick search → p.188

All Frames.....Return to the all frame screen from the selected frame screen.

Compose message Compose i-mode mail or Deco-mail with the URL of a screen memo pasted into the main text or an image inserted/attached.

Replay······Play the Flash movie or animation in the screen memo from the beginning.

Display URL → p.183

Certificate Display the SSL/TLS certificate content when the screen memo is SSL/TLS-compatible.

Sound setting ······ Adjust the volume of the Flash.

Change disp. Mode*2.....Switch between PC layout mode and Keitai mode.

Change font size*1*3......Select Small/Standard/ Large/X-large. →p.115

Zoom*4.....Select 60%/80%/100%/120%/150%/
180%/200%/250%/400%/Page size fitting*5. When Page size fitting is selected, further select a desired portion in the entire page.

Image display.....Display an image that was saved along with the displayed screen memo.

Detailed disp.*6.....Display a screen memo that was saved along with the displayed image.

Original site*6.....Display and check the image URL.

Delete

- *1 : Available when an i-mode screen memo is selected.
- *2 : Available when a Full Browser screen memo is selected.
- *3: Available in Full Browser Keitai mode.
- *4 : Available in Full Browser PC layout mode.
- *5 : Not available in full wide display.
- *6: Available when an image is displayed.

Downloading Fee-Based Content

Content (images, melodies, Chaku-Uta-Fulf[®], etc.) that can be downloaded from sites may be fee-based. When you attempt to download fee-based content, the purchase confirmation message and i-mode password entry screen appear.

NOTE

 You must start downloading within 2 minutes after entering the i-mode password. If long time passes, enter the i-mode password again.

Downloading Data from i-mode Sites or Websites

Download various data from sites, and save them to use for various purposes.

 The following table shows the number of downloaded data and the maximum size of a data, including pre-installed data:

Туре	Store/ Register	Maximum size	
Image*1*2		i-mode: 500 KB	
		Full Browser: 1.5 MB	
Deco-mail		_	
picture	1,000*3		
Auto Deco-mail picture		5 KB	
Deco-mail			
pictogram*4		_	
Deco-mail	1,000*3	200 KB	
template*5	.,000	(10 KB + 90 KB)	
Decome-Anime	1,000*3	100 KB	
template	,		
i-motion	100 ^{*3}	10 MB	
(Standard type) Chaku-Uta-Full	100*3	5 MB	
		-	
Melody	400	100 KB	
		Document: 2 MB	
PDF data*1*6	400 ^{*3}	Document definition file (DDF):	
		100 KB	
Kisekae Tool*7	100 ^{*3}	2 MB	
Chara-den	10	100 KB	
Machi-chara*7	100 ^{*3}	2 MB	
e-book/e-comic	400 ^{*3}	3 MB	
i-αppli	200 ^{*3}	2 MB	
Download	5	20 KB	
dictionary		20 KB	
ToruCa ^{*8}	200 ^{*3}	100 KB	
Schedule data	2,500	1 MB	
i-schedule	۷,300	I IVID	
Key illumination*4	50	3,948 B	

- *1 : Available for download with both i-mode and Full Browser.
 - * The following notes apply to i-mode only.
- *2: GIF animation, Flash movies (Cannot be saved with Full Browser) and GIF/JPEG/BMP images. The number will be 500 KB for stamps and frames.
- *3 : Actual storable or registerable counts may be decreased depending on the data size.
- *4 : Pre-installed data are not included.

- *5:10 KB for the main text only, 90 KB for inserted images only.
- *6 : PDF data with document definition file (DDF) cannot be downloaded with Full Browser.
- *7: Maximum size of meta file: 30 KB.
- *8 : Maximum size of ToruCa: 1 KB. Maximum size of ToruCa (detail): 100 KB.

- You may not be able to download data depending on the site or file size.
- If you download a data with playback restrictions and its playback period or deadline expires during download, the data cannot be saved or played.
- Packet communications charges may be high when downloading a large data.

Downloading images

Save an image, background image or animation displayed on or attached to the displayed i-mode site or website, screen memo, i-mode mail or MessageR/ F, then set the saved image as the standby screen or wake-up display.

<Example: To save a single image displayed on a site>



🚹 i-mode Browser screen (p.180). Full Browser screen (p.182) ch (FUNC) "Save/Add" "Save

one image" Select an image "YES" Select a folder

Position the frame over the image to be saved.

To save multiple images

► "Save/Add" ► "Save some images" ► Use 🔁 to select an image ► (Finish) *YES" Select a folder

You can select up to 100 images.

To save the background image

"Save/Add" ➤ "Background image" ➤ "YES" ➤ Select a folder

■ To save images with Full Browser

- ► "Save/Add" ► "Save image" ► Select an image
- "YFS" Select a folder




"YES" Select an item

- To not set the image as the standby screen, etc.
- ▶"NO"

- When 2in1 is in Dual mode or B mode and "Stand-by display" (p.406) is set to other than
 - "Same as Number A", the saved image does not appear as the standby screen. The image can be set as the standby screen when 2in1 is in A mode or OFF.
- Deco-mail pictograms are saved in the "Pictograph D" folder under "My picture".
- When you save multiple images, up to 300 images appear on the selection screen.
- BMP images can only be saved to a microSD card by selecting "Save one image" from the i-mode Browser function menu or "Save image" from the Full Browser function menu.

Downloading PDF data

Download PDF data from i-mode sites or websites. then view/save them

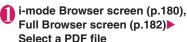

The "PDF data" screen (p.343) appears. Operations to view a PDF data → p.345

- * When a PDF data is downloaded by page, the first downloaded page appears. The subsequent pages are downloaded when you attempt to move to those pages.
- To cancel download
- ▶ 🖾 (Quit) or CLR

When a message appears asking whether to save partially-downloaded data, select "YES" to save it. In this case, you can download the remaining data later. → p.195

If the password entry screen appears Enter the password set on the PDF file.

■ To save a PDF data

►ch (FUNC)►"Save"►"YES"►Select a folder If the entire PDF data is downloaded first, all pages are saved. If the PDF data is downloaded by page, partially-downloaded pages are saved. You can download the remaining pages later. →p.195

■ To close a PDF data




When the PDF data is not saved, a message appears asking whether to close the data. To save the PDF data, select "NO".

Downloading remaining data of partially downloaded PDF data


If you saved a partially downloaded PDF data, download the remaining pages. The download procedure varies depending on the status of the downloaded PDF data.

<To download partially-downloaded (by page) PDF file (pale blue))>



A message appears notifying that the download will resume, and then the "PDF data" screen (p.343) appears.

Operations to view a PDF data → p.345



The site is accessed, and the download starts.

To specify the page number you want to download

Select a page number indicated on toolbar Enter a page number you want to view

- To download all the remaining data at once
- ▶ch (FUNC)▶"DL remaining data"▶"YES"
- To save a PDF data
- ▶ch (FUNC)▶"Save"▶"YES"

The data including newly downloaded pages is saved.

<To download a PDF data that was partially downloaded (pdf (pale blue), pdf (pale blue))>

PDF data list screen (p.343) Select a PDF data to view

Before the PDF data is displayed, a message appears asking whether to download all the remaining data.



The site is accessed, and the download of all remaining data starts. After the download is completed, the PDF data screen (p.343) appears (some data may not open even if the download is finished successfully).

To save a PDF data

▶ch (FUNC)▶"Save"▶"YES"

NOTE

- It may take a while to display some PDF files.
- A PDF data may not be properly displayed if the format is not supported by the PDF viewer or the data contains complicated designs.

NOTE

- If you attempt to download a PDF data larger than 500 KB, a message appears asking whether to download the data.
- You cannot download a PDF data whose size is unknown or larger than 2 MB.
- If a PDF data that you attempt to download has the same definition file (data file for identifying PDF) as one already stored in the FOMA terminal or microSD card, they are recognized as the same PDF data. The new PDF data will not be downloaded and the stored PDF data will be displayed.
- If you activate a new task in the same i-mode group after PDF data download, the task switches without saving the open PDF data.

Downloading various data

Download various data from sites: Auto Deco-mail picture, Decome-Anime template, Deco-mail template, Deco-mail picture, melody, Kisekae Tool package, Machi-chara, Chara-den, Download dictionary, e-book/e-comic, ToruCa, Key illumination, etc.

<Example: To save data>

i-mode Browser screen (p.180)
Select a data (melody, etc.)

"Save"▶"YES"

The selectable options displayed when the data is downloaded vary depending on the data type. "Play", "Preview", "Save", "Property", etc. appear.

Follow the on-screen instructions to select a folder or option

NOTE

- Downloaded i-melody may be subject to restrictions where only a pre-designated part of the melody can be played. If it is set as a ring tone, etc., only the designated part will be played.
- To restore the pre-installed Kisekae Tool, Machichara or Chara-den after deleted, download it from "みんなNらんど" (Japanese). →p.181
- i-concier service subscription is required to download Schedule data. → p.210

Flash Function

You can play Flash movies on a Flash-compatible i-mode site or website.

Using phone information in Flash movies → p.200

- Flash[®]Video can be played with i-mode Browser (excluding i-Channel), Full Browser or Screen memo (embedded Flash[®]Video only).
- If embedded Flash[®]Video is saved, it can only be played on a screen memo. If it cannot be played, only a Flash movie appears.
- The maximum playable size of Flash movie per page is 500 KB for i-mode and 1.5 MB for Full Browser
- Some files may not be played although can be played with Flash 8 (some with Flash 9), depending on the website.

Operating the Flash movies

Flash animation technology enables you to use rich and exciting sites with graphics and sound. You can download Flash movies to your i-mode handset and use them as standby screens.

- If vibration is set to a Flash movie, playing it activates vibration regardless of the "Vibrator" setting.
- There may be cases where Flash movies may not play properly even if they are displayed.
- You may be able to operate the Flash movie even if "(√⇒)" is not displayed at the bottom of the screen.
- Flash movies are not displayed if "Set image disp." is set to "OFF".
- When "Use phone information" is set to "YES", you
 can use the phone data (time, date, reception level,
 battery level, ring volume, language, model type
 and model info).

NOTE

- Some Flash movies may accompany sound effects. To mute the sound, select "Sound setting" and set the volume to zero. Even if "Vibrator" is set to "Melody linkage", it does not link to the Flash movie sound effects.
- If a Flash movie is set as standby screens, etc. under "Display setting", the sound effects or vibration set to the Flash movie will not be activated. Also, "Replay" is not available. → p.184
- Some Flash movies may appear differently from the ones played on sites, e.g. part of the image is not saved, even if they are saved or saved as a screen memo.

NOTE

- During Flash playback, the Power saver mode does not activate regardless of the Light time setting in "Backlight".
- Flash playback is paused if no key is pressed for approximately 5 minutes. The playback resumes if a key is pressed.

Flash[®] Video

Flash® Video (FLV) is a file format that can be played with Adobe Flash Player.

The following two types of FLV can be played:

Туре	Description
Progressive	Download video data created in addition to Flash movies from the server, and play it simultaneously.
Embedded	Embed video data as an element into Flash movies.

File extension	flv, swf		
Codec	Video Sorenson Spark/ On2VP6		
	Audio	MP3	
Bit rate	Video	400 Kbps	
	Audio	96 Kbps	
Video size	,	20 dots wide × 240 dots	
	high)		
Frame rate	15 fps		

- FLV streaming type cannot be played.
- Progressive FLV, which is compatible with up to 10 MB playback, may be a large volume of data. Note that communications charges may be high when large data are received.
- Progressive FLV cannot be saved. Screen Memo is not available.
- Some files cannot be downloaded or played even if the file format is compatible.

Playing Flash movies on i-mode sites or websites

You can play Flash movies when "Set image disp." is set to "ON".

You can adjust volume in "Sound setting" during Flash playback.





Place the pointer on the Flash

The pointer changes to " then Flash playback starts

NOTE

- Up to 2 Flash movies can be played simultaneously in embedded playback with i-mode Browser. You cannot play multiple Flash movies simultaneously with Full Browser. However, with both browsers, you can play Flash movie with GIF animation.
- If the Flash movie is located out of the displayed range, scroll to the Flash movie to start playback.
- Some Flash cannot be saved.
- Some Flash may not make sounds.
- When you place the pointer on the Flash movie but it is not played, it may be played by moving the pointer.
- Some websites may automatically play the Flash movie

Uploading Images or Moving Pictures

Upload images or movies stored in the FOMA terminal or microSD card from an i-mode site or website compatible with file upload.

- Data that can be uploaded: GIF (excluding frames, stamps), JPEG images and i-motion, including upto-2MB animation.
- The upload procedure varies depending on the page. Follow the on-screen instructions.
- Select a file selection link (such as "Browse") on i-mode sites or websites
- Select "My picture" or "i-motion"

- Select a folder Select an image or movie
- Select a transmission link (such as "Send") on i-mode sites or websites

The selected file is uploaded.

■ To cancel uploading

NOTE

- Some websites may not support uploading.
- You cannot upload images or movies that are not allowed to be output from the FOMA terminal.
- You cannot upload images or movies larger than 80 KB.


Using Phone To/AV Phone To/ Mail To/Web To/Media To Function

<Phone To/AV Phone To/Mail To/Web To/Media</p>
To function>

Select information displayed on i-mode sites, websites or mail to make calls or send mail.

- The following are available:
 - Phone number (Phone To/AV Phone To function): Make calls, send SMS
 - . Mail address (Mail To function): Send mail
 - URL (Web To function): View i-mode sites or websites
- Program information link (Media To function):
 Activate TV, Booking program/Timer recording
- These functions may not be available when mail or site is received from computers, etc.
- In addition to phone number, mail address or URL, items such as "Please contact here" may be available.
- Only the Web To function is available for Manga&Book.

<Example: To make a voice call with i-mode Browser>

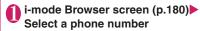



NOTE

<Mail To function>

 May not be available if multiple mail addresses are displayed in a row.

<Media To function>

- May not be available even if information is selected.
- Not available with Full Browser.

Setting i-mode Browser/Full Browser



"i-mode" "i-mode settings"
"i-mode Browser set." or "Full
Browser set."



In Full Browser set 1/2
LISBH Improvisions
EMOVIE dumlose set.
EMOVIE setting
EMUSER if cation set.
EMOVIE setting
9 beiste Cookies
EMINISTER

i-mode Browser set.

Full Browser set.



Select any item:

Set image disp......Set whether to display images or Flash for an i-mode site, website or screen memo detail screen. If "OFF" is selected, the " I icon will appear instead.

Movie auto play set. → p.208

Movie download set. Set whether to establish communications automatically when loading progressive FLV in i-mode sites or websites. When you select "Confirm always", a confirmation message appears every time you connect to a page.

Script settingSet whether to validate JavaScript *1 when displaying a page. Some websites may be displayed incorrectly unless set to "Valid".

Use phone information → p.200

Font size setting·····Select Small/Standard/ Large/X-large for the font size of i-mode sites or websites, screen memo or MessageR/F list/ detail screen. → p.115

Magnification set.*2.....Select 60%/80%/100%/120%/150%/180%/200%/250%/400%.

Cookie setting → p.200

Delete Cookies → p.201

Referer setting → p.201

Window auto-open·····Set whether to open a new window automatically using JavaScript*1. Setting to "OFF" disables the automatic window-opening.

Home URL*3.....Set use of the i-mode Browser home URL display.

Invalid······Disable the home URL display setting.

ValidValidate the home URL display setting. Select the Home URL field and enter a URL to be stored.

Pointer setting (This option appears under "Auto NW size setting" in Full Browser set.)

Pointer display ······Set whether to display the pointer.

Speed······Select Normal/High speed/Low speed.

FB Home setting*2······Set the Full Browser home URL.

Display mode setting*2......Set the first display mode. Select PC layout mode or Keitai mode.

FB permission disp.*2..... Set whether to display a confirmation screen when connecting with Full Browser. When you select "Display always", a confirmation message appears every time you connect to a page.

FB usage set.*2.....Set whether to use Full Browser

Auto NW size setting *2*......Set whether to allow communications beyond the capacity of the page. When you select "Confirm always", a message appears asking whether to establish those communications.

- *1 : JavaScript is a programming language that can be included on web pages to make them more interactive.
- *2 : Available only for Full Browser set.
- *3 : Available only for i-mode Browser set.

NOTE

<Set image disp.>

- Changing this setting under i-mode Browser set. also changes 1Seg "User settings" and "Set image disp." in the function menu of the 1Seg screen.
- Even if set to "OFF", images appear on the iMenu screen.

<Home URL>


 If an earphone/microphone (optional) is connected, pressing the switch in standby will also display the site set as Home.

<Pointer setting>

 If "Pointer display" is set to "ON", you may not be able to use Flash content. In this case, change the setting to "OFF", then retry.

Configuring browser common settings





i-mode button set. Change the function to activate by pressing . Select Connect by iMenu or Display i-mode menu.

Scroll·····Set the scroll speed and link display of an i-mode site or website, screen memo or MessageR/F detail screen. Select any of the following items:

Speed Select High speed/Low speed.

During scroll in focus ····· Set whether to highlight links while scrolling.

Open tab setting ·····Set whether to open a new window on top or in the background under the current window.

Sound setting······Adjust the volume of the Flash.

NOTE

<i-mode button set.>


 Even if set to "Connect by iMenu", the i-mode menu screen appears while overseas.

<Sound setting>

 Even if the volume is not set to zero, some Flash movies may not make any sounds.

Configuring MessageR/F settings





Auto-display setting······Set the MessageR/F auto-display mode.

Start attachment (auto) ····· Set whether to play the attached/pasted melody automatically when opening MessageR/F.

Message list display ······ Set the number of lines displayed on the Message list screen.

Checking the browser settings

● "i-mode" "i-mode settings" "Check settings"

Select any item:

i-mode Check set., FB Check set., Common Check set., MessageR/F Check set.

Resetting the i-mode settings <Reset>

Implies "i-mode" b "i-mode settings" b "Reset" b Enter your security code b "YES"

Setting PushTalk incoming during i-mode communications

<Set i-mode arrival act>

Set whether to give priority to PushTalk or i-mode when a PushTalk call arrives during i-mode.

● "Settings/NW Service" "Connection setting" Set i-mode arrival act"

Select "PushTalk preferred" or "i-mode preferred"

NOTE

 When set to "i-mode preferred", an incoming PushTalk is not recorded in Received calls.

Changing from i-mode to another ISP connection < Host selection:

* There is normally no need to change this setting.

Set a host for services other than i-mode. If you set other than "i-mode", you cannot use i-mode and i-mode mail.

 You can register up to 10 hosts in addition to "i-mode".



Host name Set the host name

Host number Set the host number.

Host address.....Set the host address.

Host address2······Set the host address2.





NOTE

- If you change the host, the ticker of i-Channel is turned off. The ticker is turned on automatically when the information is updated automatically or when is pressed to receive the latest information.
- After changing the host, the i-Channel information may not be updated automatically. To receive the latest information, press on to display the channel list screen.

Setting whether to use phone information for Flash movies

<Use phone information>

Set whether to use phone information when a Flash movie is played.

- Some Flash movies use phone information. Set the setting to "Accept" so that Flash movies can use phone information. Flash movies use the following types of phone information:
 - Battery level
- · Ring volume setting
- Signal strength
 Select language
- Date and time
 Model data

i-mode Browser set. screen (p.198), Full Browser set. screen (p.198) "Use phone information" "Accept" or "Reject"

Cookie

Using Cookie* enables you to effectively access i-mode sites or websites that you have visited once.

*: Cookies are a mechanism used by a site provider to send information related to a user, such as the days and times and number of visits to the site, to the handset of the user, where it is then stored. The information is sent from server, saved temporarily in your FOMA terminal and used for contents service. If Cookie is sent, user related information (day, time, number of visits to the website or i-mode site, etc.) is also sent to the site. Please note that DOCOMO is not responsible for any reveal of your information to third parties resulting from Cookie sending. However, some i-mode sites, websites and contents services require you to validate the Cookie settings for their correct display and use.

Setting Cookie



"i-mode" b"i-mode settings"

"i-mode Browser set." or "Full

Browser set." Cookie setting"

Select any item:

Valid······Always accept cookies. No confirmation is made when Cookie is sent or received.

Invalid Always reject cookies.

Notify (sending) Select whether to send Cookie every time you connect to a page. No confirmation is made when Cookie is received and the information is saved in your FOMA terminal.

Notify (receiving) ······Select whether to receive Cookie every time you connect to a page. No confirmation is made when Cookie is sent.

Notify (send/recv.)·····Select whether to send or receive Cookie every time you connect to a page.

NOTE

- Cookies are deleted in the ascending order of no use when the number and size of Cookies exceed the maximum limit.
- Each Cookie is deleted when executing Reset.

Deleting Cookies

You can delete the Cookies stored in your FOMA terminal.

"i-mode" "i-mode settings"
"i-mode Browser set." or "Full
Browser set." Delete Cookies"
Enter your security code "YES"

All Cookies stored in your FOMA terminal are deleted.

Referer

Set whether to send Referer*.

*: Referer is information on source link. Sending Referer transfers information such as page from which you access the site. Please note that DOCOMO is not responsible for any reveal of your information to third parties resulting from Referer sending. However, you may not access linked pages on some i-mode sites or websites unless Referer is sent.

Setting Referer

●"i-mode">"i-mode settings"
> "i-mode Browser set." or "Full
Browser set." ➤ "Referer setting"
Select any item:

Valid ······ Always accept Referer.

Invalid Always reject Referer.

Setting SSL/TLS Certificates

Check the SSL/TLS certificate content or set valid/invalid.

If the setting is set to "Invalid", the SSL/TLS page cannot open.

● "Settings/NW Service" "Connection setting" Certificate setting"

Select a certificate Check the content

■ To validate or invalidate SSL/TLS certificates

► Highlight a certificate ► ch (FUNC) ► "Valid/Invalid"

When set to "Valid", " appears. When set to "Invalid", " appears.

Setting FirstPass

User certificates prove that the user is a proper FOMA service subscriber. Downloaded user certificates are saved to the FOMA card (UIM) and allow you to access client authentication-compatible sites.

Connecting to the FirstPass center

Follow the procedure below to request and download a user certificate.

- You can request a user certificate or download it from the FirstPass center.
- User certificates cannot be used on the FOMA card (blue).
- The FirstPass cannot be used overseas.
- To connect to the FirstPass center, you must first set the date and time. → p.49
- Screens and procedures used at the FirstPass center are subject to change.





'Request your certificate"

To apply for invalidation

Select "Other settings" and then "Revoke your certificate".

Enter your PIN2 code and follow the on-screen instructions.







A confirmation message appears. After download is complete, the FirstPass menu screen reappears.

NOTE

- Packet communications charges do not apply to connect to the FirstPass center.
- The following functions are not available while connecting to the FirstPass center:
 - · Send/Receive i-mode mail (SMS can be sent/ received)
 - Check new messages (new SMS can be checked)
 - · Receive MessageR/F
 - · Download mail attachments manually
 - Activate the Web To function from the mail detail scraan
 - PushTalk
- Always send a certificate request before downloading a new or updated user certificate. You cannot download a certificate that is not requested.
- Once the application for user certificate invalidation is complete, you cannot access FirstPass sites that require the user certificate.
- To use FirstPass after completion of invalidation. apply for issuance of the user certification and download it again.

Using a user certificate to connect to a site



i-mode Browser screen (p.180) Allow to send the user certificate ►"YES" Enter your PIN2 code

NOTE

- Pake-hodai, Pake-hodai full and Pake-hodai double cover packet communications charges incurred when connecting to FirstPass.
- If you attempt to connect to a FirstPass site without a user certificate, or if your user certificate has expired, a warning message appears. You may still be able to connect to the site and view a page by selecting "YES" to establish a connection, but your personal information (credit card number, contact details, etc.) may not be sent securely. To disconnect, select "NO". Try to reconnect to the site after downloading a user certificate from the FirstPass center.

■ Notes on use

- · FirstPass is DOCOMO's digital authentication service. Using FirstPass enables client authentication by which a site authenticates the FOMA terminal.
- · FirstPass can be used for Internet connection from the FOMA terminal or Internet connection with the FOMA terminal connected to a PC. To use on a PC, the FirstPass PC software included in the bundled CD-ROM for N-09A is required. For more information, refer to "FirstPassManual" (PDF) contained in the "FirstPassPCSoft" folder in the CD-ROM. (The "FirstPassManual" is in Japanese only.) To view the "FirstPassManual" (PDF), Adobe® Reader® is required. If this software is not installed on your PC, install the Adobe® Reader® in the bundled CD-ROM to view the file. Refer to the "Adobe Reader ヘルプ" (Help) for usage, etc.
- · When requesting a user certificate, carefully read and agree to "The usage regulation" of FirstPass displayed on the screen.
- PIN2 code (p.124) must be entered in order to use a user certificate. Take great care to prevent unauthorized use of your FOMA card (UIM) or PIN2 code by third parties since all the actions performed after PIN2 code entry will be assumed to have been performed by you.
- If the FOMA card (UIM) is lost or stolen, you can have your user certificates invalidated at the docomo Information Center described on the back cover of this manual


- DOCOMO bears no obligation or responsibility for sites and information provided by FirstPass compatible sites. Disputes are to be settled between the subscriber and the FirstPass compatible site.
- DOCOMO and certificate authorities do not guarantee security when subscribers use FirstPass and SSL/TLS. Please understand that subscribers use FirstPass and SSL under their own responsibility and judgment.

Changing Host for Certificate Issue

* There is normally no need to change this setting.

Set a host to download a user certificate.



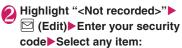

Default URL······Set the URL of the initial screen for the host.

Host number Set the host number.



NOTE

- To change a stored "User setting host", follow the same procedure.
- To delete a stored "User setting host", select "Delete" from the function menu.

i-motion/Movie/i-Channel/ i-concier

■ Using i-motion/movie	
-motion/Movie	206
Downloading i-motion/Movie from SitesDownload i-motion/movie	
Setting Whether to Play i-motion/Movie Automatically	208
Using i-Channel	
-Channel	208
Opening Sites from the Channel List	209
Setting i-Channel i-Channel setting	209
Using i-concier	
-concier	210
Viewing i-concier i-concier start	210
Receiving Information	211
Setting i-concier	212

i-motion/Movie

i-motion is sounds, moving pictures, etc. Download i-motion from i-motion sites to the FOMA terminal. You can set i-motion as a ring tone. Chaku-motion → p.98

You can download and play various movies provided on websites such as portal sites or moving picture sites.

• Music player supports playback with Windows Media Video (WMV) and Windows Media Audio (WMA). When downloading/streaming movies, the received file size may become very large. Note that communications charges may be high when large files (such as streaming type with no file size restriction) are received. For details on packet communications charges and billing plans, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

i-motion types

There are mainly two types of i-motion. The type of the i-motion you download varies depending on the site or data.

Category		
Туре	Playback method	Description
Standard type (Can be saved*)	Played after downloaded	i-motion is played after the entire data is downloaded.
(Up to 10 MB)	Played during download	i-motion is downloaded and played simultaneously.
Streaming type (Cannot be saved) (Up to 10 MB)	Played during download	i-motion is downloaded and played simultaneously. As the file is discarded after playback, you cannot repeat playback or save the i-motion to the FOMA terminal.

^{*:} Some i-motion cannot be saved.

Movie types

Category				
Туре	Playback method		Description	
Streaming type (Cannot be saved)	Live: Deliver movies in real time. Pausing is not available. On-demand: Deliver movies pre-loaded on servers.		Download and play movies simultaneously. You cannot save this type of movies. Long time playback is possible.	
Download type (Can be saved) (Up to 10 MB)	Played after downloaded		In addition to movie files acquired using the FOMA terminal, you can also save files created or acquired on a PC to a microSD card.	
File extension	wmv, wm	a, wv	x, wax, asf, asx	
Codec	Video	Windows Media Video 7 - 9		
•	Audio	Windows Media Audio 9, Windows Media Audio 9.1		
Bit rate	Video	Up to 96 Kbps*1, up to 1,000 Kbps*2		
•	Audio	Up to 320 Kbps		
•	Video + Audio		o 96 + 320 Kbps ^{*1} , o 1,000 + 320 Kbps ^{*2}	
Moving picture size	QCIF (176 dots wide × 144 dots high)*1, VGA (640 dots wide × 480 dots high)*2			

^{*1:} Windows Media Video 7/8

Frame rate

 The streaming type server only supports Microsoft Windows Media Services 9 or 4.1. You cannot play streaming type movies delivered from other servers

Up to 15 fps*1, up to 30 fps*2

- Some websites check the operating environment (browser type, OS, etc.). In this case, you may not be able to play movies on that site.
- Refer to File Format (p.306) for information on supported movie format.

^{*2 :} Windows Media Video 9

Downloading i-motion/Movie from Sites <Download i-motion/movie>

 i-motion can only be downloaded with i-mode Browser.

i-mode Browser screen (p.180), Full Browser screen (p.182)► Select i-motion or movie (In case of movie, ►"YES")

Streaming type

When movie download starts, the playback starts simultaneously.

When movie playback is finished, the i-mode Browser screen or Full Browser screen reappears.
"Operations on the music player screen" → p.261



Function menu⇒p.207

Standard type or Download type

When data download is finished, the "Download" screen appears.

■ To cancel download

CLR



"Play"

Downloaded i-motion or movie is played. "Operations on the music player screen"→p.261

■ Licensing (WMDRM (Windows Media digital rights management))

- Only streaming type movies can be played when they are protected by license. Download type movies are not supported.
- Some movies cannot be played depending on the license setting.

NOTE

- During streaming type i-motion/movie playback, if the connection fails, then the playback pauses.
 When you press CLR or to end playback, the screen displayed before the playback started appears.
- i-motion/Movies may not be downloaded depending on the site. Some i-motion may not be downloaded and played simultaneously.
- For standard type i-motion, the file download continues even if playback is stopped during download.

NOTE

- Some i-motion or streaming type movies are subject to playback restrictions. "□" appears at the beginning of the title of i-motion with restrictions on the play count, period or time limit. i-motion/Movies whose playback period is restricted cannot be played before or after the period. If the battery pack is removed from the FOMA terminal for a long period of time, the date and time settings stored in the FOMA terminal may be reset. In this case, i-motion/movie restricted on its playback period or with a time limit cannot be played.
- Some i-motion/movies cannot be correctly played.
- Playback during download may be interrupted or images may be distorted depending on the network speed, status or signal quality.

FUNC Download screen (p.207)

Certificate Display the SSL/TLS certificate content when the page is SSL/TLS-compatible.

Saving i-mode/movies

Streaming type i-motion/movie cannot be saved. Download type movies can only be saved to a microSD card.

- Some i-motion may not be saved to the FOMA terminal.
- You can save up to 100 i-motion, including moving pictures taken with the camera. The maximum number of i-motion that can be stored varies depending on the data size.
- Up to 10 MB i-motion/movies can be saved.
- i-motion/Movie folder → p.303
- i-mode Browser screen (p.180), Full Browser screen (p.182) Select i-motion or movie (In case of movie ▶"YES")▶"Save"▶
 - i-motion
 - ► Select a folder
 - To cancel saving
 - ▶"NO"

The download screen reappears without saving.

NOTE

• i-motion/Movie without a title is displayed as "movieXXX" (XXX: numeric).

Viewing i-motion/movie details

Check i-motion/movie details, such as the title, file size and playback restrictions.

i-mode Browser screen (p.180), Full Browser screen (p.182)▶ Select i-motion or movie (In case of movie ▶"YES")▶"Property"

The i-motion info screen or Movie info screen appears. Use 🔁 to scroll up/down to view details, including the title and file size.

Setting Whether to Play i-motion/Movie Automatically

<Movie auto play set.>

- Set whether to play i-motion/movie automatically when downloading it with i-mode Browser or Full Browser.
- "Movie auto play set." is only valid for standard type i-motion and download type movies. The streaming type i-motion/movie is played automatically regardless of this setting.
 i-motion/Movie types - p.206
- i-mode Browser set. screen (p.198), Full Browser set. screen (p.198) • "Movie auto play set." • Select any item:

ON·····Automatically play the i-motion/movie after downloaded. Some i-motion are downloaded and played simultaneously.

OFF·····Display the download screen without playing the i-motion/movie automatically after downloaded.

i-Channel

i-Channel is a news and information service distributed for i-mode subscribers with i-Channel compatible handsets. A variety of information including news and weather forecasts is automatically delivered to the standby screen as subtitles. Subscribers can check a channel list of the information received by simply pressing the i-channel button (ch) (p.209).

i-Channel requires a subscription and is a fee based service (i-mode subscription is required).

There are two types of channels that you can enjoy with i-channel service: "Basic Channel" distributed by DOCOMO and "Optional Channel" by information service providers (IP). Packet communications charges do not apply to automatically update basic channels. The packet communications charges do apply to automatically update optional channels. Detailed content will incur packet communications charges both for basic channels and for optional channels. Packet communications charges do apply both to automatically update and to view detailed content while overseas, and the charges differ from those in Japan.

For details on i-Channel, refer to "Mobile Phone User's Guide [i-mode] FOMA version". The i-Channel service is only available in Japanese.

Ticker on the standby screen/indicator display

If you have subscribed to i-Channel, the information is displayed on the standby screen/indicator display as a ticker when information is received.

- 🚖 flashes while i-Channel information is received.
- You can set the ticker display in "i-Channel setting".
 →p.209



NOTE

 Tickers are displayed even when i-motion or i-αppli is set as the standby screen. They are also displayed in Self mode.


• Tickers do not appear if the FOMA card (UIM) is not inserted, when the Public mode (Driving mode) is active, or when in Power saver mode.

Opening Sites from the Channel List

Open the channel list and access i-Channel sites.



On the standby screen ch



Opening from the main menu

If the shortcut function of the ch key is changed under "ch-button setting" (p.357), follow the procedure below to open the i-Channel list:

► "i-mode" • "i-Channel"

▶"i-Channel list"



Function menu⇒p.209

* Screens are for illustrative purposes only, and may differ from actual ones.



Select a channel

NOTE

- Information may be received when the channel list screen appears.
- Even if information is received, the ring tone and vibration do not work. Also, the incoming call lamp does not flash

FUNC Channel list screen (p.209)

Add desktop icon → p.116

Replay Display the channel list screen from the beginning.

Sound setting Adjust the volume of the Flash.

Pointer setting → p.198 (Function menu)

Window → p.184 (Function menu)

Quick search → p.188

NOTE

• The "Sound setting" configured on the channel list screen applies to "Sound setting" under "i-mode settinas".

 If pointer operations are not available on i-Channel, set the Pointer setting to "OFF".

Setting i-Channel <i-Channel setting>

Set whether to display i-Channel information on the standby screen or indicator display. Also set the scroll speed and ticker color.

- When "Ticker display setting" is set to "ON", tickers keep appearing on the standby screen. When set to "Receiving", tickers appear twice on the standby screen when new information is received.
- When the indicator display setting is set to "ON". tickers appear as follows:
 - · When the ticker display is set to "ON", tickers appear twice on the indicator display when new information is received or when the FOMA terminal is closed.
 - · When the ticker display is set to "Receiving", tickers appear twice when new information is received.
 - · While tickers are displayed on the indicator display. Power saver mode is not activated.



MENU ►"i-mode" ►"i-Channel" ► Select any item:

i-Channel list

i-Channel setting

Ticker display setting.....Set whether to display channel information on the standby screen (ON/Receiving/OFF).

When set to "ON" or "Receiving", further select whether to display ticker on the indicator display when the FOMA terminal is folded

Ticker speed setting ······ Select Normal/ High/Low.

Ticker color setting*.....Select White/ Yellow/Blue/Pink/Green

Ticker size setting*.....Select Small/ Standard/Large. → p.115

Reset i-Channel Reset the i-Channel settings to default.

*: When you move the highlight while selecting an item, the ticker setting appears on the screen.

• The i-Channel settings cannot be changed if the FOMA card (UIM) is not inserted, at the time of purchase (i-Channel has been reset), in Public mode (Driving mode), etc.

<Ticker display setting>

- The ticker display setting remains unchanged if vou unsubscribe from i-mode before unsubscribing from i-Channel, or after you unsubscribe from i-Channel, but tickers will not appear automatically.
- The settings are retained for each 2in1 mode. <Reset i-Channel>
- i-Channel tickers do not appear after resetting i-Channel. The ticker is turned on automatically when the information is updated automatically or when ch is pressed to receive the latest information.

i-concier

i-concier helps you in your daily life using a character that acts just like a butler (concierge). The service keeps your data (living area, schedules, ToruCa, Phonebook, etc.), and information is delivered timely to your mobile phone according to your living area and interests. Schedule information and ToruCa in the FOMA terminal are automatically updated to the latest, and useful information such as shop hours is automatically added to the Phonebook. Machi-chara (a character on the standby screen) gives you i-concier information on the standby screen.

■ Notes on use

- i-concier requires a subscription and is a fee based service (i-mode subscription is required).
- A non-subscriber to Data Security Service (p.140) will be the subscriber to Data Security Service at the same time when subscribing to i-concier.
- There are two types of information that you can enjoy with information service: distributed by DOCOMO and distributed by information service providers (IP). Packet communications charges do not apply to receive information distributed by DOCOMO. Packet communications charges apply to receive information distributed by information service providers (IP).
- Detailed content will incur packet communications charges.
- The packet communications charges do apply both to receive information and to view detailed content. while roaming overseas. Packet communications charges overseas are different from those in Japan.

- In addition to i-concier monthly charges, separate information charges may apply depending on the content (information, i-schedule, etc.).
- Packet communications charges apply to automatically update i-schedule/ToruCa/ Phonebook.
- For details on i-concier, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Viewing i-concier

<i-concier start>

Appears for



MENU "i-concier"

- To view from the received pop up message
- "When information is received"→p.211
- To view from the desktop icon
- ▶On the standby screen
- Select "©"
- * The i-concier desktop icon is pasted at the time of purchase. When it is not displayed, press ch on the

unread information 東京計片日本計劃線 運転見合 神奈川 横浜・川崎 大雨注: 東北白動車道 洗滞中 荷物お届けのお

i-concier

i-concier screen then select "Add desktop icon". (The FUNC soft key of ch does not appear.)

■ "Guide to the i-concier screen" → p.211 You can configure i-concier settings on the i-concier screen by checking information or displaying the menu bar.

NOTE

- When information on Schedule or ToruCa attached to mail is received, it is automatically saved. If the file cannot be saved due to insufficient memory, the download screen
- Even if you have subscribed to the i-concier service, the service suspension message may appear depending on the setting. In this case, follow the on-screen instructions to change the setting.

Guide to the i-concier screen





- Information details
- 2 Link guide

Appears when there is a link to detailed or related information in information details.

Press late view the information (Phonebook, i-mode Browser screen, ToruCa, Schedule, etc.).


- ③ Information list
 - Use to view details of information.
 - •" appears for unread information.
- 4 Menu bar

Press (MENU) on the i-concier screen to display the menu bar.

- Using Data Security Service → p.140
- Displaying the Schedule/ToruCa list→p.211
- Setting i-concier → p.212

Displaying the Schedule/ToruCa list

Quickly access Schedule or ToruCa from the i-concier screen.







Function menu⇒p.360

Receiving Information

When the FOMA terminal is in the FOMA service area, information is automatically received.

- When you receive information, " appears at the top of the screen.
- Up to 50 pieces of information can be saved. If the maximum number of pieces is exceeded, older pieces are overwritten.

When information is received

When information is automatically received, a pop up message appears on the standby screen.

- " lights up after information is received. If the icon has already lit up when information is received, it flashes temporarily.
- When multiple pieces of information are received simultaneously, only the latest one appears on the standby screen.
- If no operations are performed for about 15 seconds after a pop up message appears, the selection is released.
- You can set the Machi-chara display in "Machichara setting". → p.114



On the standby screen Select the received pop up message

The i-concier screen and information details appear.

■ To stop pop up message

or CLR (1 second or longer)

Select information

If the link guide is displayed


The information on the link appears.

NOTE

- When Original lock is set on "Disp. recv. mail/msg." under "Incoming/Mail disp.", a pop up message or " odes not appear on the screen and incoming operations (ring tone, vibrator, illumination flashing) are not performed even if information is received.
- The i-concier screen may not appear but only a site or information may appear depending on the information.
- When Original lock is set on "i-concier" under "Data disp. edit del." and information is received, the popup message "Receiving new information" appears on the standby screen. When the popup message is selected, the i-concier screen appears regardless of the content.

Displaying from a screen other than the standby screen

When "Receiving setting" under "Mail Setting" is set to "Alarm preferred", the "Received information" screen appears if information is received while the standby screen is not displayed.



The Received information screen appears.







The i-concier screen appears.

NOTE

• When "Receiving setting" under "Mail Setting" is set to "Operation preferred", a pop up message does not appear on the screen and incoming operations (ring tone, vibrator, illumination flashing) are not performed even if information is received while the standby screen is not displayed. "[70]" appears at the top of the screen.

Setting i-concier

Configure the information display setting for the standby screen

<Information display>

● "Settings/NW Service"
"Display" • "Information display"
• "ON" or "OFF"

Setting the i-concier ring tone

<Select ring tone>

Set the ring tone, illumination and vibrator for information reception.

- Ring volume setting → p.67
- Ring tone setting → p.98
- Ring time setting → p.102
- Vibrator setting → p.100
- Illumination setting → p.111

Setting information reception

<Receive information setting>

The settings include rail information, road traffic information, earthquake information, event information, etc. Only specified information can be viewed. You can also set reception stop/resume, reception hours, etc. or check the current settings.

i-concier screen (p.210)▶ ☑ (MENU)▶Select "☑"



- "インフォメーション受信設定" (Information receive settings)
- **Configure the settings**

Store your personal information such as name (nickname), gender, birthday and address area. Information can be received based on the stored information. For example, event information is received based on a set area.

- i-concier screen (p.210)▶
 ☑ (MENU)▶Select "☑"
- (Other common settings) Select "変更する" (Change) under プロフィール設定 (Profile settings) Enter your i-mode password

i-mode password → p.181

Enter each item

Enabling i-concier overseas

<Overseas use settings>

Enable information reception or Data Security Service overseas.

- i-concier screen (p.210)► (MENU)►Select "∠"
- ② "その他共通設定" (Other common settings)▶Select "変更する" (Change) under 海外利用設定 (Overseas use settings)▶"利用する" (Use)
 - To disable overseas use
 ▶Select "利用しない" (Do not use)
- <mark>§</mark> Enter your i-mode password▶"設 定" (Set)

i-mode password → p.181

Setting the timing to back up (update/ restore) data at Data Security Center

<Automatic backup/update settings>

Set interval to automatically back up Phonebook, ToruCa and Schedule to the Data Security Center, or set information update stop/resume. Storing/Updating/Restoring ToruCa/Schedule at the

i-concier screen (p.210)▶
☑ (MENU)▶Select "☑"

Data Security Center → p.141

- (Automatic backup/update settings)▶Select "変更する" (Change) under 電話帳/スケジューラ/トルカ (Phonebook/Scheduler/ToruCa)▶Configure the settings
 - **§** Enter your i-mode password▶"設 定" (Set)

i-mode password → p.181

Camera

Before Using Camera		216
Shooting Still Images	Photo mode	220
Shooting Continuously	Continuous mode	224
Taking Panoramas	Panorama cap. mode	226
Shooting Moving Pictures	Movie mode	226
Shooting a Fast Moving Subject in Slow Motion	Speed movie	228
Capturing Important Scenes		228
Recording Audio Only	Voice mode	228
Changing Settings for Shooting		229
Using Bar Code Reader	Bar code reader	230
Scanning Text	Text reader	232

Copyright and Portrait Rights Information

Please do not violate copyrights or other intellectual property rights, the right of portrait, or the right of privacy when taking and sending pictures. Taking photos, recording video or the sound of live performances and exhibitions may be prohibited even if you intend them for your own personal enjoyment.



Please be considerate of the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones.

Before Using Camera

Use the built-in camera to take photos (still images) and moving pictures.

 You cannot activate camera to take photos or moving pictures when the FOMA terminal is folded.

Using the camera

Turning on the camera

- ① Select the desktop icon () or desktop info () Photo mode) on the standby screen
- ② Press ▼ () (1 second or longer) on the standby screen
- ③ Select "Camera" from "LifeKit" of the main or simple menu
- If no keys are pressed for more than about 3 minutes, the camera mode closes.

Switching between front and rear cameras

Press (FUNC) on the shooting screen, then select "Front camera" or "Rear camera" from the function menu.





Rear camera

Use this camera to take pictures of other people, animals or scenery. What you see is what you get on the screen (Normal display: photographed as it is displayed on the screen). This camera is also suitable for close-ups.

You can use auto focus. → p.221

Front camera


Use this camera to take a picture of yourself. The taken image is displayed reversed, as if you were looking in the mirror. This camera is unavailable in Continuous mode.

Close-up

 To take closeups, select "Close-up" in "AF change" (p.221). Place the subject of the closeup about 10 cm from the rear lens.

Digital Shake Correction

This camera is equipped with Super Digital Anti-Shake. The rear camera stabilizes 6 axes, and movies on 4 axes.

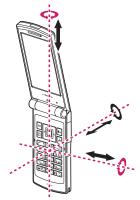

* Red arrows are only for a photo

"Setting the Digital Shake Correction"→p.230

Using your camera

Note:

- The camera uses high-precision technology, but photos may include lines or spots that look dark or bright. Noise such as white lines may appear on the photo when taken under poor lighting.
- Clean the lens with a soft cloth. A dirty lens can cause blurring or poor focus.
- Do not apply excessive force to the lens when folding the FOMA terminal. Doing so may cause malfunction.
- You may hear the sound of lens working when using the rear camera in AF mode. This is normal.
- If the camera is exposed to high temperatures for a long time, image quality may be poor.
- Color tones and brightness in photos and moving pictures may differ from those of the actual subject.
- Do not leave the camera in direct sunlight for a long period of time. Do not point the camera at the sun or other powerful light source. Doing so could lead to the discoloration of images or cause the camera to malfunction.
- Do not cover the lens with your fingers, hair, or the strap.
- The camera uses a lot of power. Turn it off as soon as you are finished using it. When the battery is low, the screen may look dark or blurred.

- The Auto timer tone, shutter sound, and auto focus locked sound cannot be changed or muted. You cannot set a downloaded melody as the shutter sound.
- To decrease blurring, set digital shake correction to Auto and hold the camera steady until the image is finished shooting.
- When taking photos, do not move the FOMA terminal since the shutter sound is played until the photo is captured.
- When you take pictures indoors, flickering may appear due to the effect of fluorescent lighting, etc.
 To reduce flicker when taking images under fluorescent lighting, set the Flicker setting to match the frequency of the fluorescent lighting.
- When the viewing screen opens, the camera is turned on, or camera settings are changed, it may take a couple of seconds before brightness and color reproduction become stable.

Flashing of the indicator

- The recording indicator lights up or flashes as follows:
 - · Shooting screen activated: Flash in red
 - Photo mode, M-continuous mode: Light in red (about 3 seconds)
 - A-continuous mode: Light in red (capturing)
 - Movie mode, Voice mode, Panorama mode:
 Flash in red
 - Auto timer activated: Flash in pale blue → p.229

Saving photos and moving pictures

- Photos and moving pictures are saved to a folder specified in "Select to save".
- Photos and moving pictures are saved automatically when "Auto save set" is set to "ON".
- If the battery is low, you may not be able to save photos or moving pictures.
- If the power is turned off or the battery pack is removed while files are being saved, the images may be corrupted.

■ Capturing may be interrupted

- Capturing is interrupted when you receive a voice/ videophone/PushTalk call/64K data communications, Area Mail or alarm notification (1Seg Booking program, 1Seg Timer recording, Alarm, Schedule or To Do list), or operate other functions.
 - In Continuous mode or Movie mode, the capturing is interrupted and the respective screen appears. When you exit from the screen, the camera screen reappears so that you can save data you took before receiving calls or alarm notification.

- When adjusting the zoom or brightness of the camera, the setting is confirmed and the camera menu reappears.
- The Auto timer is stopped.
- The capturing is not interrupted in the following cases:
 - When you receive mail (excluding Area Mail) or MessageR/F while using the camera (or while the shooting screen is open), the received result screen does not appear and the shooting continues regardless of the "Receiving setting."
 - When "Alarm setting" is set to "Operation preferred", you can continue capturing, make settings or use the Auto timer without interruption even when the alarm time comes. However, "1Seg Timer recording" alarm works interrupting capturing, settings or Auto timer.

■ When using a microSD card

- When "microSD" is selected in "Select to save" and there is no folder in the microSD card, a folder is created automatically.
- If the number of files in the microSD folder selected in "Select to save" has reached the maximum, you cannot select the folder.

Key operations in camera mode


- ■/▼ (🖎): Shutter
- 🕒: Zoom in
- □: Zoom out
- : Auto focus mode switching
- ☐: Focus lock
- (p.219) respectively:
- 1: CHG camera-mode
- 2: Select size
 3: Quality setting or File size setting
- 4: Photo mode
- 5 : Brightness
- 6: White balance
- * Some shooting menus may not appear depending on the camera mode.


1 to 6: Display the following Shooting menus

- 9: Change screens (Only when "Auto-change Screen" (p.114) is set to "OFF")
- O: Display the key explanation

Guide to the shooting screen

A shooting screen displays icons indicating the status of the camera settings. Each icon indicates as follows:





Movie mode (taking)



① Focus frame (p.220)



Auto focus frame when AF change is set to "AF ON" or "Close-up"

- · White: Before focusing
- · White dots: Focusing
- · Green: Successfully focused
- · Red dots: Focusing failed
- Auto focus frame when AF change is set to "Face ON"
- · White: Detecting
- Grav: Multiple faces detected. Frame not focused

Auto focus frame when AF change is set to "Face ON" and a face is detected

- · White: Focusing
- · Green: Successfully focused
- · Red: Focusing failed
- 2 Guide to the AF operation (p.220)

.....Guide to AF change and focus lock

3 AF status (p.221)

RFAF change is set to "Face ON"

RFINIAF change is set to "ON"

RFK2 ······AF change is set to "Close-up"

RFITHAF change is set to "OFF"

4 Remaining storage count/Memory info*1

·····The number of images that can be saved

- . White: 11 or more
- · Yellow: 10 or less
- Red: No memory available*2

Available capacity in total capacity

- · Blue: KB or more remaining
- Yellow: Less than 500 KB remaining
- Red: No memory available*2*3

- *1: The displayed count and the capacity are approximate. This icon does not appear when the destination is set to "microSD" and no microSD card is inserted.
- *2: The shot is saved or overwrites data in the FOMA terminal (Phone)/microSD card.
- *3 : Shooting is not available when recording movies with "File size" set to "10 MB" or "Long time".
- 5 Digital Anti-Shake (p.230)

((Shake correction is set to "Auto"

6 Select to save (pp.222, 227)

The destination status (Phone/ microSD card)

(7) Shooting menu (p.219)



(8) Face select mode (p.220)

Face selection mode

9 Auto timer (p.229)

.....Auto timer is on

10 Zoom (p.229)



2 - 2 -Zoom settings

1) Movie type set (p.227)

----Normal

·····Video

·····Voice

(2) Quality setting (p.227)

·····Long dur. mode

·····Normal

·····Fine mode ····Super Fine mode

(3) Shooting status

RECRecording STRVStandby

(4) Shooting time


Time remaining time (hour:min:sec)

NOTE

• appears when in side mode (pp.220, 224, 226). Point the arrow up then shoot.

Selecting the shooting menu


If you display the shooting menu on the screen with the phone opened, you can configure various settings by simply selecting icons.

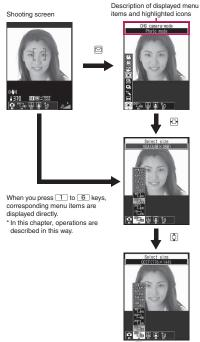

Press (Select) to specify the function indicated by the highlighted icon.

Icons and settings of the shooting menu

- The selectable items vary depending on the camera mode.
- Not all menu items are available when the camera is accessed from other functions such as mail, or when the front camera is used.




1) CHG camera-mode


- Movie mode·····p.226
- Speed movie····p.228
- Chance capture p.228
- Photo mode·····p.220
- A-Continuous mode·····p.224
- M-Continuous mode·····p.224
- Voice mode·····p.228
- Panorama cap. mode....p.226

2 Select size

Photo mode







*: Only appears when camera is activated by i-appli.

Movie mode

- 176 -VGA (640 × 480) - QCIF (176 × 144)

* Fixed to "QVGA" (320 x 240) for Speed movie.

③ Quality setting/File size setting Photo mode (Quality setting)

Super Fine ······ Super Fine mode (File size:

Fine.....Fine mode (File size: medium)

Normal·····Normal mode (File size: small)

Movie mode (File size setting)

₩ 500KB.....Up to 500 KB

2MB 2MB·····Up to 2 MB

2MB·····Up to 10 MB (microSD only)

Long time·····Long time (microSD only)

- (4) Photo mode Photo mode Movie mode
 - Auto······Automatic capturing mode
 - Portrait Suitable for capturing portraits
 - Smile Suitable for capturing smiles
 - Scenery.....Suitable for capturing scenery (including night view)
 - Backlight Suitable for capturing against the light
 - Sports mode Suitable for capturing moving subjects
 - Night mode.....Suitable for capturing portraits, etc. in the dark
 - Pet Suitable for capturing pets
 - Food Suitable for capturing food
 - GR OFF Turn off the effects
 - Only "Auto", "Portrait" or "Scenery" can be set in Movie mode.
 - * Only "Portrait", "Night mode" or "OFF" can be set for the front camera in Photo mode.
 - * Fixed to "Portrait" for the front camera in Movie mode
 - * Fixed to "Auto" on the panorama mode screen.
- ⑤ Brightness (When the camera activates: ±0) $(+2/+1/\pm0/-1/-2)$

6 White balance

In Photo mode, this can be set only when "Photo mode" is set to "OFF".


- Auto Compensate the tone automatically
- Fine Suitable for capturing outside on a sunny day
- Cloudy·····Suitable for capturing outside on a cloudy day or in the shade
- Light bulb Suitable for capturing under incandescent light
- Fluorescent lamp..... Suitable for capturing under fluorescence light
- * Cannot be operated/set on the panorama mode screen.

Shooting Still Images

- When Camera is activated, Auto focus is set to
 - "Auto focus shooting" → p.221

On the standby screen Select " ""

- To take a photo in wide display (Side mode)
- ▶ Rotate the FOMA terminal 90 degrees counterclockwise (when "Auto-change Screen" (p.114) is set to "OFF",
- ▶ ch (FUNC)▶ "Change side mode")





Function menu⇒p.222

- ▶ Press 🛅 (a few times) to confirm that Auto focus is off (RFIII)
- To activate Quick Album

Quick Album → p.310

Frame the shot

- To take a photo with Auto focus locked
 - ▶Press 🗖 to select auto focus type▶Position the subject in the center of the
 - focus frame and press 🖵 Change the camera angle to frame the shot
 - (Record)
 - When the focus is locked. the focus frame turns green

and you will hear the focus locked sound.



Function menu⇒p.222

If the focus lock failed, the focus frame will turn red. Press 🖵 to retry focus lock.

■ When multiple faces are detected (Face selection mode)

- (Next) to move the white focus frame to a face to focus on that area longer)
- To take again
- ▶CLR ▶"YES"

■ To zoom in an image



An image is zoomed in/out by one step each time you press $(+)/\square$ (-).

Pressing ch (Normal) displays the image in the actual size.



NOTE

 The image quality may deteriorate depending on the image size.

Auto focus

AF is available to capture a photo using the rear camera. You can use two modes: "Single auto focus" to focus in focus lock (pressed) and "Continuous auto focus" to continue focusing on the subject.

■ Face detection auto focus shooting (Auto focus: ON)

When you frame the shot, the face is detected and the white focus frame automatically moves to adjust focus and exposure.

- Face detection auto focus works when the photo mode is set to "Auto", "Portrait", "Backlight", "Smile face" or "OFF" and the image size is set to Screen (480 x 854 or 854 x 480) or larger.
- Up to 5 faces can be detected simultaneously. When multiple faces are detected, the focus is automatically adjusted according to the face size/ position. You can select a face to focus on. Face select mode → p.220
 - The focus frame is displayed in white for a face to be focused, and in gray for other faces.
- If a face cannot be detected or no face appears on the screen, the auto focus is used.

■ Smile mode shooting (Auto focus: ON)

When you frame the shot, the face is detected and the white focus frame automatically moves to adjust focus and exposure. When you press the shutter, the focus frame turns pink. The photo is taken the moment the person smiles.

■AF shooting (Auto focus: ON)

The camera automatically focuses on the subject in the center of the screen. When you change the camera direction to focus on another subject, the focus is automatically readjusted.

Close-up (Auto focus: ON)

The camera automatically focuses on the subject in the center of the screen (if no subject appears, the focus distance will be approximately 10 cm). When you change the camera direction to focus on another subject, the focus is automatically readjusted.

- Close-up is available when Photo mode is set to "Auto" or "OFF" or when the camera mode is "Panorama cap. mode".
- Fixed focus shooting (Auto focus: OFF)
 Take a photo with auto focus off.

■ AF lock shooting (Auto focus: ON)

If you want to focus on a subject other than the one in the center of the frame, first focus on the subject then turn the camera to change the composition.

NOTE

- Faces may not be detected when:
 - . The face turns away
 - The face is at an angle to the camera
 - The face is hidden with glasses, hat, mask, shadow, etc.
 - The face is too small, large, bright or dark
- Face detection is limited to a distance within 3 m from the camera.
- Auto focus only works at 15 cm or more from the camera.
- Accurate focus may not be possible when:
 - The place is dark
 - The contrast is poor
 - · Both near and far subjects are in the frame
 - There is a light, etc. in the range
 - The subject is moving
 - The camera is not held steady
- It may take time to complete the focus lock.
- Brightness is set when focus is locked. If the camera is moved after completing the focus lock, the camera brightness may be inappropriate. In this case, retry the focus lock or cancel the AF lock to adjust brightness.

FUNC

Photo mode screen (p.220)/Smile mode screen (p.223)/Continuous mode screen (p.224)/Panorama mode screen (p.226)

Front camera ⇔ Rear camera*1...... Switch between the front and rear cameras.

CHG camera-mode, Select size*2, Quality setting →p.219 (Shooting menu item)

Quick Album → p.310

AFchange*3*4.....Change the rear camera auto

Interval/Number*5.....Set the shooting interval and the number of images to take in continuous mode. →p.225

Camera Settings

Photo mode*2 → p.220 (Shooting menu item)

Smile level*1*3.....Select High/Middle/Low as the smile level to release the shutter

Brightness*1······Use ☐ to adjust brightness between 5 levels from -2 to ±0 to +2. The brightness is automatically specified if you do not press any key for about 2 seconds.

White balance*2*4 → p.220 (Shooting menu item)

Effect Select Full Color/Sepia/Monochrome.

Flicker Reduce the flicker on the shooting screen. Select Auto/Mode 1 (50Hz)/Mode 2 (60Hz).

Shutter sound

Auto timer*4→p.229

Select frame*1 → p.223

Auto save set Set whether to save a taken photo to a folder selected in "Select to save" automatically (ON/OFF).

Select to save

File restriction ····· Set whether to allow redistribution of the taken photo. → p.307

Memory info, Help

Shake correction*3*6 → p.230

Attach location

From position loc. Add the current location information

From loc. history, From phonebook, From my profile

Loc. info detail ····· Check the location details.

Delete loc, info

Change side mode⇔Release side mode*7..... Change the orientation.

- *1 : This function is available only on the Photo mode screen or smile mode screen.
- *2 : Cannot be operated/set on the panorama mode
- *3: Cannot be operated/set for the front camera.
- *4: Cannot be operated/set on the smile mode screen.
- *5: Only available on the continuous mode screen.
- *6: Cannot be operated/set on the continuous mode
- *7 : Available only when "Auto-change Screen" (p.114) is set to "OFF".

NOTE

<Photo mode>

- The auto focus function is not available in "Night
- High sensitive shooting is available when you are taking photos of "Screen" or smaller with the rear camera in "Night mode".

In high sensitive shooting, the anti-shake feature is off regardless of the "Shake correction" setting.

<Shutter sound>

 When Manner mode is set ("VM tone" set to "OFF"), the shutter sound is not played for confirmation.



Smile mode shooting checking screen FUNC (p.223)/Continuous mode detail checking screen (p.225)/Panorama shooting checking screen (p.226)

Photo mode checking screen (p.220)/

Save Save images to the folder specified in "Select to save".

Mirror save*1.....Invert the left and right of the displayed image and save the image to the folder specified in "Select to save".

Compose message → p.224

On the Photo mode checking screen, you can also press () to compose i-mode mail, Deco-mail or mail for a blog.

Edit image*2 → p.310

Set as display*1*2.....Set a photo as the standby screen, etc.

Change frame*1*2 → p.223

Mirror display ⇔ Normal display*1······Select the checking screen display.

Select to save*2

File restriction·····Set whether to allow redistribution of the taken photo. → p.307

Attach location*2→p.222 (Function menu item)

Cancel*2.....Delete a photo and return to the Photo mode screen.

- *1 : Cannot be operated/set on the Panorama shooting checking screen.
- *2 : Cannot be operated/set on the Continuous mode detail checking screen.

NOTE

<Edit image>

 Performing "Edit image" changes the display to the Normal display.


<Set as display>

- You cannot set images when:
 - An image size is FullHD (1,080 × 1,920 or 1,920 × 1,080) or larger.
 - An image file size exceeds 100 KB when set to the image to be sent during a videophone call.
- Photos to be set as the standby screen, etc. are saved in the folder specified in "Select to save".
 However, when set to "microSD", images are saved to the Camera folder under My picture of the FOMA terminal (Phone) (not saved to a microSD card).

Capturing smiles

The camera automatically detects smiles and takes the photo.

- Smile mode is available when the size is Screen (480 × 854 or 854 × 480) or larger.
- You can set the smile level when the photo is taken.
 → p.222

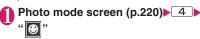



Function menu⇒p.222

Frame the shot▶■ (Smile)

The photo is taken automatically the moment the person smiles. While detecting smiles, keeps flashing.

- To take again
- ►CLR YES"
- To cancel smile detection
- ► (Quit)
- To take before smile detection
- ▶■ (Record)



NOTE

 In some cases, the camera releases the shutter without displaying the focus frame.

Taking framed photos

<Framed photography>

Smile mode shooting

checking screen

Function menu⇒p.222

- Supported image sizes are Screen (480 x 854 or 854 x 480) or smaller.
- You can use downloaded frames in addition to the pre-installed ones.
- Photo mode screen (p.220)▶
 ch (FUNC)▶"Select frame"▶
 Select a frame
 - To cancel framed photography

 "OFF"
- Frame the shot▶■ (Record)
 - The "Framed photography checking" screen appears.
 - To change the frame before saving

 | Ch (FUNC) Change frame"





Composing i-mode mail or Deco-mail with a photo

Attach a photo to i-mode mail, insert in Deco-mail text or compose mail for a blog.



Photo mode checking screen (p.220) ► (Select any

Attach image*1

Attach mail Attach an image without changing the image size.

QVGA scale down Attach the image after changing the image size without changing the aspect ratio.

VGA scale down Attach the image after changing the image and file size without changing the aspect ratio.

Insert

Insert mail*2.....Insert the image without changing the image size.

SubQCIF scale down Insert the image after changing the image and file size without changing the aspect ratio.

Blog cont.*1

Attach mail Attach an image without changing the image size.

QVGA scale down.....Attach the image after changing the image size without changing the aspect ratio.

VGA scale down.....Attach the image after changing the image and file size without changing the aspect ratio.

- *1 : When the image size is QVGA V. (240 \times 320), QVGA (320 × 240) or smaller, the Attach mail, QVGA scale down and VGA scale down screens do not appear. In Panorama mode, QVGA scale down and VGA scale down cannot be selected.
- *2: Cannot be selected when the image size is not QCIF (176 × 144).



Compose message

Composing i-mode mail → p.146 Composing Deco-mail → p.148

NOTE

 Blog addresses set in "Blog/Mail member" are automatically entered when composing mail with "Blog cont.". → p.154

 You cannot compose an mail using "Attach mail" when an image size is 8 M and Quality setting is set to "Fine" or "Super Fine".

Shooting Continuously

<Continuous mode:

Take up to 20 photos, one after the other, using the rear camera. There are two types of continuous shooting: A-continuous mode (Auto) and M-continuous mode (Manual).

- A-continuous mode automatically takes a specified number of photos at the set interval when you press the shutter. In A-continuous mode, AF is set with the first shot.
- M-continuous lets you take a specified number of photos by pressing the shutter for each shot. In M-continuous mode, you can change the AF settings for each shot.
- You can enjoy continuously taken photos as an Original animation.
- Folding the phone ends the Continuous mode.





To take a photo in wide display (Side mode)

▶ Rotate the FOMA terminal 90 degrees counterclockwise (when "Auto-change Screen" (p.114) is set to "OFF",

▶ ch (FUNC)▶ "Change side mode")

To take a photo with Auto focus OFF (fixed focus)

► Press ((Several times) to confirm that Auto focus is set to OFF (RF IFF)

■ To activate Quick Album

Quick Album → p.310



Frame the shot Record)

To take a photo with Auto focus locked Step 2 in "Shooting Still

■ To cancel continuous shooting

A-continuous mode:

Images" → p.220

"NO"

M-continuous mode: ▶ CLR

■ To select a photo to

Select a photo to be saved before doing Step 3.

■ To check details

►Use to move the check frame to a photo

You can change photos to check using Pd.

■ To save a single photo displayed in detail

▶ (Save)





Continuous mode detail checking Function menu⇒p.222

ch (FUNC) Select a saving method

Select "Store selection". "Store all" or "Store all&anime". → p.225

The image is saved to the folder specified in "Select to save".

If you select "Store selection", the "Continuous mode checking" screen appears excluding the saved photos.

• Press 🔳 (😤 🚜) briefly (less than 1 second) on the continuous mode checking screen to select and save.

Press ((+) or () () for 1 second or longer to save all images.

NOTE

 When taking photos of a brightly lit or moving subject, the shooting interval may be longer than the one you set.

Setting the interval and number of photos




"Interval/Number" Select any item:

Shot interval······Select 0.5 seconds/1.0 second/2.0 seconds. Cannot be set in M-continuous mode.

Shot number Enter the number of photos (2) digits from 05 to 20). The maximum number of photos varies depending on the image size. If the image size is Screen (240 × 427) or QVGA V. (240×320) , the number will be 5 - 10.

After setting is finished, press CLR CLR

The continuous mode screen reappears.



Store selection Save photos marked with



Store all Save all photos as normal or mirror images.

Store all&anime Save all photos you took as normal or mirror images, and store as an Original animation.

Select this, Select all Select a framed photo or all photos by marking with .

Release this, Release all......Release selection of a framed photo or all photos by removing .

Mirror display ⇔ Normal display ····· Select the checking screen display.

Select to save

File restriction Set whether to allow redistribution of a shot image marked with . →p.307

Restriction all Set whether to allow redistribution of all shot images. → p.307

Attach location → p.222 (Function menu item)

Cancel·····Delete all shot images and return to the continuous mode screen.

NOTE

<Store all&anime>


 When "Select to save" is set to "microSD", images are saved to the Camera folder under My picture of the FOMA terminal (Phone) (not saved to a microSD card).

Taking Panoramas

<Panorama cap. mode>

Move the camera horizontally to take a panorama. Capture broad landscapes in a single photograph.

- The front camera is not available.
- Moving the camera vertically during capturing may reduce the height of the panorama or blur the
- Moving subjects may not be properly captured.
- Capturing may fail if the subject is only a simple pattern or without patterns.

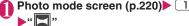

- To take a photo in wide display (Side mode)
- ▶ Rotate the FOMA terminal 90 degrees counterclockwise (when "Auto-change Screen" (p.114) is set to "OFF".
- ▶ ch (FUNC)▶"Change side mode")
- To activate Quick Album





scene you want to shoot. Keep your shots vertically aligned by matching the green line in each shot. When your panning speed is correct, "Goop" is displayed on the screen. If your panning speed is too fast, "FAST" appears and the



Panorama shooting

panorama may not be captured properly. When saved images reach the maximum capacity, shooting ends automatically and the panorama shooting checking screen appears.



- To take again
- ►CLR ►"YES"
- To zoom in an image

An image is zoomed in/out by one step each time you press (+)/(□ (-). Pressing ch (Normal) displays the image in the actual size.



Function menu⇒p.222





Shooting Moving Pictures

<Movie mode>


- When "File size" is set to "10MB" or "Long time", recording ends after the recorded movie is saved to the microSD card.
- The recording time varies depending on the condition.
- You cannot record a moving picture during a call.
- Folding the FOMA terminal ends recording in Movie mode.
- Moving pictures can be played on all FOMA terminals supporting the playback if recorded under the following settings:

Function	Setting
Select size	QCIF (176 × 144)
Quality setting	Normal, Fine mode
File size	500KB

Photo mode screen (p.220)▶ 1



- To take a moving picture in wide display (Side mode)
- ► Rotate the FOMA terminal 90 degrees counterclockwise (when "Auto-change Screen" (p.114) is set to "OFF",
- ▶ch (FUNC)▶"Change side mode")





Function menu⇒p.227



"Playing i-motion/Movie" → p.312

2

Frame the shot ▶■ (Record)

Recording starts.

You can zoom in/out during recording.

■ If the file size reaches the limit specified in File size





Movie mode





- To play the moving picture you recorded
- ▶ (Play)
- To record again
- CLR YES"



Function menu⇒p.228





NOTE

 If you press on the keys to zoom in or out while recording, the sound of the keys or zooming may be recorded to your movie.

FUNC Movie mode screen (p.226)

Front camera ⇔ Rear camera*1······Switch between the front and rear cameras.

CHG camera-mode, Select size, File size → p.219 (Shooting menu item)

Quality setting Select Long dur. mode/Normal/ Fine mode/Super Fine mode. In Long dur. mode, the recording time is the longest but the quality is the lowest. In Super Fine mode, the quality is the highest but the recording time is the shortest.

Reproduction → p.312

Camera Settings

Photo mode*1 → p.220 (Function menu)

Brightness Use □ to adjust brightness between 5 levels from −2 to ±0 to +2. The brightness is automatically specified if you do not press any key for about 2 seconds. "±0" is the default setting when the camera is activated.

White balance → p.220 (Function menu)

Effect Select Full Color/Sepia/Monochrome.

Flicker · · · · · Reduce the flicker on the shooting screen. Select Auto/Mode 1 (50Hz)/Mode 2 (60Hz).

Shutter sound

Auto timer → p.229

Movie type set ······Select Normal/Video/Voice.

Auto save set.....Set whether to save the recorded movie to a folder selected in "Select to save" automatically (ON/OFF).

Select to save Specify a saving destination for shot movies or sound-only movies. When a microSD card is specified, a movie with video is saved to "SD Video folder" and a sound-only movie is saved to "Multimedia folder".

File restriction ····· Set whether to allow redistribution of recorded movies. → p.307

Memory info, Help

Shake correction*1 → p.230

Change side mode ⇔ Release side mode*2······
Change the orientation.

- *1 : Cannot be operated/set for the front camera.
- *2 : Available only when "Auto-change Screen" (p.114) is set to "OFF".

NOTE

- <Photo mode>
- Fixed to Portrait for the front camera.
- <Shutter sound>
- When Manner mode is set ("VM tone" set to "OFF"), the shutter sound is not played for confirmation.
- You cannot set a downloaded melody as the shutter sound. In addition, you cannot change the volume of the shutter sound.

<Memory info>

The displayed file size is approximate.

Movie mode checking screen(p.227)

Play

Save.....Save the recorded movie to a folder specified in "Select to save".

Compose message · · · · Compose i-mode mail with the taken moving picture attached. → p.146

You can also compose i-mode mail or blog mail with

the recorded movie attached by pressing
() on the movie mode checking screen.

Set as stand-by.....Set the recorded movie as the standby screen.

Edit title

Select to save → p.227 (Function menu item)

File restriction ····· Set whether to allow redistribution of the recorded movie. → p.307

Cancel·····Delete the movie and return to the movie mode screen.

NOTE

<Set as stand-by>

 Movies that can set as the standby screen are saved in a folder set in "Select to save". However, when set to "microSD", the movie is saved to the Camera folder under i-motion/Movie of the FOMA terminal (Phone).

Shooting a Fast Moving Subject in Slow Motion

<Speed movie>

This is used to check a fast moving subject. Played in slow motion

- Only available in side mode (rotate the FOMA terminal 90 degrees counterclockwise).
- The front camera is not available in speed movie.
- Photo mode screen (p.220)
- Frame the shot (Record)
 Recording starts.
 - If the file size reaches the limit specified in File size
 - ►"OK"



- To play the moving picture you recorded
- ▶ (Play)
- To record again
- ►CLR ► "YES"



Capturing Important Scenes

Chance cap

Even when the maximum recording time is reached, you can continue recording.

- If you continue recording beyond the maximum capacity, only the last part of the movie will be saved. The beginning of the movie will be truncated to fit the specified recording time.
- Photo mode screen (p.220)▶ 1
- Frame the shot ▶■ (Record)

Recording starts.

You can zoom in/out during recording.

After the available recording time is reached, the remaining time display flashes.

(Stop)
The recording ends.

🚹 🔳 (Save)

Recording Audio Only

<Voice mode>

You can record sound-only movies.

Photo mode screen (p.220)

The "Recording start" screen appears.

Movie mode screen function menu → p.227

(Record)

Recording starts.

🚯 🔳 (Stop)

After recording ends, the "Recording check" screen appears.

Movie mode checking screen function menu →p.228



Changing Settings for Shooting

Configure the settings such as zoom, Auto timer or shake correction.

Using zoom

Zoom the image in/out.

- The zoom is digital.
- This function is not available in speed movie.



On each shooting screen ▶ Use ☐ to adjust the zoom

The image is zoomed in/out by one step each time you press . Hold down to zoom in/out continuously.

NOTE

 The ratio is set to "1x" by default. Changing the image size or camera mode also changes the ratio to "1x".

Maximum zoom ratio for each image size


Image size	Photo mode	Movie mode	
Rear camera (16 steps)			
8M 5M 3M FullHD Screen*1 Panorama	Shake correction Auto: Approx. 2.7x Shake correction OFF: Approx. 3.0x Shake correction Auto: Approx. 1.6x	_	
	Shake correction OFF: Approx. 3.0x		
VGA	Shake correction Auto: Approx. 2.7x Shake correction OFF: Approx. 3.0x	Shake correction Auto: Approx. 1.6x Shake correction OFF: Approx. 3.0x	
Wide	_		
Java*2*3 Screen*4	Approx. 3.0x	_	
QVGA V.	Shake correction Auto:		
QVGA	Approx. 5.4x Shake correction OFF: Approx. 6.0x	Shake correction Auto: Approx. 1.6x Shake correction OFF: Approx. 3.0x	
Java*2*5	Approx. 6.0x		
QCIF	Approx. 9.0x	Shake correction Auto: Approx. 1.6x Shake correction OFF: Approx. 3.0x	

Image size	Photo mode	Movie mode	
Front came	Front camera (1 step)		
VGA	Approx	k. 1.0x	
Wide	_	Approx. 1.0x	
Java*2*3*5 Screen*4	Approx. 1.0x	_	
Front came	Front camera (2 steps)		
QVGA V.	Approx. 1.5x	_	
QVGA		Vertical: Approx. 1.9x Horizontal: Approx. 1.5x	
QCIF	Approx. 1.9x		

- *1 : 480 dots wide \times 854 dots high, 854 dots wide \times 480 dots high
- *2 : Only appears when camera is activated by i- α ppli.
- *3:480 dots wide × 480 dots high
- *4 : 240 dots wide \times 427 dots high, 427 dots wide \times 240 dots high
- *5:240 dots wide × 240 dots high

Using the auto timer

 The Auto timer is reset to "OFF" each time capturing ends.

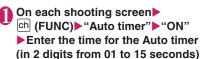

When the Auto timer is set

"" appears on the screen to indicate that the Auto timer is active.

Press (Record). The Auto timer tone sounds and the timer starts.

The illumination flashes in pale blue, and "\" on the screen also flashes.

The countdown tone starts about 5 seconds before the end of the Auto timer setting, and the flashing speed increases.

■ To turn off the Auto timer

▶ch (FUNC)▶"Auto timer"▶"OFF"

To stop the running timer

▶ ☐ (Quit) or CLR


NOTE

- During the Auto timer countdown, you can take a photo manually by pressing ■ (Record).
- The Auto timer cannot be used in Smile mode or M-continuous mode.
- When taking photos with Auto focus lock, focus on the subject beforehand then use the Auto timer.

Setting the Digital Shake Correction

When taking photos or movies with the rear camera, you can use the Digital Shake Correction.

 This function is available in Photo mode, Panorama mode, Movie mode and Chance capture mode. It is unavailable in Continuous mode and Speed movie.

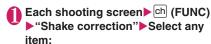

Auto······Correct camera shake automatically in Photo or Panorama mode when capturing indoors or in a dark place where camera shake easily occurs. Camera shake is always corrected in Movie mode or Chance capture regardless of conditions.

OFF······Take photos without camera shake correction

NOTE

- This function is only intended to reduce camera shake. The efficiency depends on the subject type or conditions.
- If a part of the scene is moving, blur or noise may appear. Set this option to "OFF" in such a case.

Using Bar Code Reader

<Bar code reader>

Use the rear camera to scan JAN code, QR code or CODE128. Scanned QR code allows you to use Phone To/AV Phone To, Mail To, Web To, i-αppli To, adding to bookmark/phonebook, displaying text and copying text. An image, melody or ToruCa data can be scanned, played or saved.

- Up to 5 scanned data can be stored.
- Hold the FOMA terminal firmly to avoid shaking during scanning.
- When scanning bar codes, use the rear camera about 10 cm away from the code.

■JAN codes, QR codes and CODE128

JAN codes

A bar code consisting of vertical lines (bars) of various widths and spaces to represent



numbers. 8-digit (JAN8) and 13-digit (JAN13) bar codes can be scanned.

* When the FOMA terminal scans the JAN code on the right above, the code is displayed as "4942857113068".

QR codes

A type of two-dimensional codes consisting of the horizontal and vertical patterns to represent numbers, alphabetic characters,



kanji, kana or pictograms. Some QR codes express images, melodies or ToruCa. Others may be divided into several QR codes.

* When the camera scans the QR code on the right above, the code is displayed as "株式会社NTTドコモ (NTT DOCOMO, INC.)".

CODE128

A bar code consisting of vertical lines (bars) of various widths and spaces to represent numbers, alphabets or symbols.

You need to download i- α ppli that support CODE128. \rightarrow p.280



Scanning codes

▶"LifeKit"▶"Bar code reader"

■ To paste the function on the desktop

| Ch | (FUNC) | Add desktop icon"

Display the barcode in the recognition field

Scanning starts automatically.

The recognition field is expressed using " 「, ¬ , ∟ and ¬ " at the corners of the screen.

Focus on the entire bar code so that it is displayed as large as possible inside the recognition field.



The scanning completion tone sounds when scanning completes successfully.

It may take a while to scan a code.

■ To cancel scanning

▶■ (Cancel)▶"OK"

To adjust zoom


ा: Zoom in.

- Return to default

■ To scan data consisting of several QR codes

► "OK" ► ■ (Read) ► Position the QR code inside the recognition field

Up to 16 QR codes blocks containing one item can be scanned.



■ To discard the scanned data

CLR "YES"



The scanned data is saved.

NOTE

- The FOMA terminal cannot scan a code other than a JAN code, QR code or CODE128. Some bar codes may not be able to be scanned depending on the size.
- Scanning may fail depending on the scratches, stains, damage, print quality, reflections or the QR code version.
- The scanning completion tone does not sound while in Manner mode.
- The Bar code reader can be activated from the text entry screen. The scanned data is entered into the text entry screen.
- You may be unable to save a scanned image depending on the image or file size.
- You cannot save the scanned data to a microSD card.

Using the scanned data

You can use the following scanned data:

Item	Description
Add to phonebook	Store the name, reading, phone number, mail address, birthday,
prioriogeon	postal code, address and memo to the phonebook → p.86
Compose	Compose i-mode mail with the
message	recipient address, subject and message entered → p.146
Add bookmark	Store the URL and title to the
	Bookmark→p.190
Start i-αppli	Start the specified i-αppli → p.278
Melody icon	Play the melody → p.319
Phone number	"Phone To/AV Phone To function" →p.197
ToruCa icon	Display the ToruCa → p.288
Mail address	"Mail To function" → p.197
URL	"Web To function" → p.197
Image	Save the image → p.194

Scanning screen (p.230) Ch (FUNC) "Reading data list" Select scanned data Select a displayed item

Reading data list/detail screen





Function menu⇒p.231

NOTE

- If the data you want to scan contains characters that cannot be read by Bar code reader, those characters are converted to spaces (blanks).
- The title of the scanned data will be:
 - Title: yyyymmdd_hhmm_xxxx (Year/month/ day_time_4-digit number)If multiple data are saved at the same date and time, the 4-digit numbers increment in save order.

FUNC (p.231)

Edit title

Result Display the reading data detail screen.

Delete this, Delete all

Reading data detail screen (p.231)

Store

Display list · · · · Display the Reading data list screen. If the displayed data is not stored, a message appears asking whether to delete the data.

Internet ·····Access the site of the highlighted URL. "Web To function" → p.197

Compose message·····Compose i-mode mail with the scanned data entered when "Compose message" is highlighted.→p.146

When a mail address is highlighted, i-mode mail with the address entered is composed.

Dialing·····Call the highlighted phone number. "Phone To/AV Phone To" → p.197

Add to phonebook·····Store the scanned data to the phonebook when "Add to phonebook" is highlighted. → p.86

When a phone number is highlighted, it is stored to the phonebook. When a mail address is highlighted, it is stored to the phonebook.

Add bookmark·····Store the scanned data to Bookmark when "Add bookmark" is highlighted.
→n 190

When a URL is highlighted, it is stored to Bookmark.

Save imageStore the image data to My picture under Data box. If you do not want to set the image as the standby screen, select "NO" after selecting the folder.

Save melodyStore the melody to Melody under Data box. If you do not want to set the melody as a ring tone, select "NO" after selecting the folder.

Save ToruCaSave ToruCa to Osaifu-Keitai ToruCa.

Start i-αppli·····Start i-αppli specified in the scanned data when "Start i-αppli" is highlighted.

→p.278

Copy·····Copy the scanned text. Scanned text can be pasted into the text entry (edit) screen, etc.
→p.390

NOTE

<Internet><Add bookmark>

 You cannot use Web To or add a Bookmark if the URL contains invalid characters.

<Compose message>

The address cannot be entered if it contains invalid characters

<Dialing:

 The videophone image is not retained after dialing or talking is finished. Set an image each time you make a call.

Scanning Text

<Text reader>

Use the rear camera to scan printed text then add the scanned text data as a phonebook entry or bookmark, or use the data to compose mail. You can also make a call or access a website using the data.

- Up to 8 scanned data can be stored.
- Hold the FOMA terminal firmly to avoid shaking during scanning.
- When scanning text, hold the rear camera about 10 cm away from the text.
- Vertically written Japanese text can be scanned.

■Scanning modes

The following are the scan modes. Select a mode suitable for the data to scan:

Item	Description
Card read	Scan the name, phone number, mail address, postal code, address and memo printed on the business card to add to the phonebook.
Compose message	Compose i-mode mail with the scanned recipient address, subject and message entered.
URL	Scan URL, and access the site or add the URL to bookmark.
Mail address	Scan the mail address and compose i-mode mail.
Phone number	Scan the phone number and make a call.
Free memo	Scan Japanese or English text to save to Text memo.

■The number of characters that can be scanned

The following table shows the maximum number of characters that can be scanned for each item:


Item to scan		Maximum number of characters that can be scanned
Card read	Name	16 in double-byte, 32 in single-byte
	Phone number	26 in single-byte numbers including #, **1, +*1, p (pause)*1, (,),
	Mail address	50 in single-byte alphabetic characters, numbers and symbols
	Postal code	7 in single-byte
	Address	50 in double-byte, 100 in single-byte
	Memo	100 in double-byte, 200 in single-byte
Compose message	Mail address	50 in single-byte alphabetic characters, numbers and symbols
	Subject	100 in double-byte, 200 in single-byte
	Message text	128 in double-byte, 256 in single-byte
URL		256 in single-byte alphabetic characters, numbers and symbols

Item to scan		Maximum number of characters that can be scanned
Mail address		256 in single-byte alphabetic characters, numbers and symbols
Phone number		256 in single-byte numbers including #, **1, +*1, p (pause)*1, (,), -
Free memo		128 in double-byte, 256 in single-byte
Dictionary*2	Japanese	32 in double-byte, 64 in single-byte
	English	64 in single-byte

- *1: *, + and p (pause) can be entered only in Edit text mode
- *2: This option is available when the Text reader is activated from Dictionary.

■ Guide to the scanning screen

<Example: Card read mode>



Guidance : Operation, etc. Recognition frame: Recognition field : Item to scan

Item icon

Card read mode · Name/Phone number/Mail

address/Postal code/Address/

Compose message mode: "To/

Subject/Message"

Recognized text field:

Scanned text (guidance appears on some screens)

Recognition mode: Recognition mode used to scan Kanii (lateral/vertical writing)/Postal code/Phone number/Mail address/URL/ **English words**

Remaining characters:

Number of single-byte

remaining characters that can

he scanned

NEGA mode : Appear if the NEGA/POSI

mode is set to Negative fix

Scanning text

<Example: To scan text in Card read mode>



To paste the function on the desktop ▶ ch (FUNC)▶"Add desktop icon"

"New"

"Scanning modes" → p.232

"Card read" The rear camera mode is set to "Close-up"

automatically.



Function menu⇒p.234

Use $\ \Box$ to highlight the icon of an item to scan Display text in the recognition field

Focus on the text so that the entire text appears as large as possible inside the recognition field. If the recognition field cannot display the entire text, the text can be scanned into several sections.

■ To use the zoom

: Change from "Normal" to "Large".

: Return from "Large" to "Normal".

I■ (Read)

The scanning completion tone sounds, and the recognized text appears in red or orange.

■ To re-scan

CLR "YFS" If the screen does not display the entire text, use

 \square , \square (\neg \forall), or \square (\square) to confirm. Pressing (Store) stores the scanned text. then the reading data screen (detail) appears. The following are two methods to edit the scanned text:

■ To select a character and edit

►Use to highlight a character to edit Press the candidate No. Use * to change between upper and lower cases if available



■ To edit in text editing

ch (FUNC) ■ "Edit" ► Edit

text

The text can be edited normally.

To return to the candidate selection, press ch (FUNC) and select "Select recog. data".

TaroDocomo

TaroDocomo

Go on to Step 6 when you finish editing.



The entry is confirmed as text.

■ To scan the remaining text

Display the text in the recognition field ▶Go to Step 5

Ensure that the last two or more characters of the already scanned text are included in the recognition field.

■ To scan another item

▶Go to Step 4

In Card read mode, you can scan up to 4 phone numbers and up to 3 mail addresses.



ch (FUNC)▶"Store"

The Reading data detail screen appears. Press CLR to return to the Reading data list screen.

NOTE

- Do not move the FOMA terminal while the "Processing" message is displayed.
- The scanning completion tone does not sound while in Manner mode.
- Handwritten text cannot be recognized. If the text is faxed or copied, fonts are decorated, character spaces are not fixed, or fonts and background cannot be easily distinguished, recognition may fail. Also, recognition may fail depending on the ambient lighting.

Using text information

You can use the following scanned data:

Item	Description	
Add to phonebook	Add the name, phone number, mail address, postal code, address and memo to the phonebook→p.86	
Compose message	Compose i-mode mail with the recipient address, subject and message entered → p.146	



Reading data list/detail screen





Function menu⇒p.234

Text reader scanning screen FUNC (p.233)/Reading data screen (list/detail) (p.234)

Edit*1, Store*2

Internet······Access the site of the scanned URL in URL mode. "Web To function" → p.197

Compose message..... Display the New mail screen with the reading data entered, and compose i-mode mail. The entered data varies depending on the displayed scanned data or screen.

Dialing.....Make a call or send SMS to the phone number in Phone number mode.

"Phone To/AV Phone To"→p.197

Add to phonebook.Add the scanned data to the phonebook. The stored data varies depending on the displayed scanned data or screen.

Add bookmark · · · · · · Add the URL to the Bookmark in URL mode.

Search phonebook Search phonebook using the scanned data. You cannot search the phonebook on the scanning screen, or in Card read mode or Compose message mode.

Add to memo······Add the scanned data to Text memo. Data scanned in the Card read mode and Compose message mode cannot be added on the Scanning screen or Reading data list screen.

Reading mode set 2......Select Card read/Compose message/URL/Mail address/Phone number/Free memo

NEGA/POSI mode*2..... Set the printing type.

Auto setting······Set positive or negative automatically.

Positive fix ······ Select when dark text is printed on light background.

Negative fix·····Select when light text is printed on dark background.

Guidance OFF⇔Guidance ON*2······Set whether to display the guidance.

Vertical writing ⇔ Lateral writing *2······ Select vertical or lateral writing for Japanese text to scan.

Display detail*3, Display list*4

Copy*5......Copy the scanned text. Scanned text can be pasted into the text entry (edit) screen, etc.

Delete this, Delete all*5

- *1 : Not available on the Reading data screen (list).
- *2: Available only on the Scanning screen.
- *3: Available only on the Reading data screen (list).
- *4: Available only on the Reading data screen (detail).
- *5: Not available on the Scanning screen.

NOTE

 The videophone image is not retained after dialing or talking is finished. Set an image each time you make a call.

1Seg

1Seg	238
Setting Channels Channel setting	239
Watching 1SegActivate 1Seg	240
Using G-GUIDE EPG Remote Control	243
Using Data BroadcastingData Broadcast	243
Using TV Link TV link	244
Recording a 1Seg Program while Watching Record 1Seg	244
Setting Timer for Watching or Recording 1Seg Program	
Booking program list/Timer recording list	245
Setting 1Seg	247
Notifying New Message Arrival while Watching	248

1Seg

1Seg is a mobile digital terrestrial audio/video and data broadcasting service. Use i-mode to get detailed program information, join a quiz show, enjoy TV shopping, etc.

For 1Seg service details, visit the following website: The Association for Promotion of Digital Broadcasting (Dpa)

PC: http://www.dpa.or.jp/

i-mode: http://www.dpa.or.jp/1seg/k/

Using 1Seg

- 1Seg service is provided by broadcasting companies (broadcasters). Packet communications charges do not apply. For details on NHK receiving fees, contact NHK.
- There are 2 types of data displayed in the storage area: "Data broadcast" and "Data broadcast site". "Data broadcast" is broadcast with video and audio. By "Data broadcast site", a site that a broadcasting company (broadcaster), etc. prepares is accessed from broadcast information. i-mode site, etc. may be accessed. i-mode application is required for site accesses.
- Packet communications charges apply to view data broadcast site and i-mode site.
 Information charges may apply for some sites
- ToruCa may be automatically saved while 1Seg is viewed. Packet communications charges apply if vou retrieve details from the saved ToruCa.

Signals

(i-mode pay sites).

1Seg is one of the broadcast services, and receive signals (broadcast waves) different from those of FOMA services. Programs cannot be viewed in/out of range when waves do not reach or broadcast is paused.

Even in digital terrestrial broadcast range, signals may be weak or not be received in the following cases:

- Far from the signal tower
- Hiding behind objects; e.g. in a mountain or building
- In environments where a broadcasting signal cannot be received, such as in subways, underground shopping centers, and some locations far inside buildings

The 1Seg antenna is built-in. To improve reception, attempt to keep the FOMA terminal away from/close to your body, or move to another location.

Display when using 1Seg for the first time

The disclaimer screen appears.

Press (OK), then select "YES".

If "NO" is selected, the screen will not appear from the next time

Storage area for broadcast

The storage area for broadcasts is a storage area in the FOMA terminal that is dedicated to 1Seg. Some information you enter while following the instructions of data broadcasts when watching programs may be saved to the storage area for broadcasts. That includes answers to quizzes, membership numbers, and your gender, age, and occupation.

Furthermore, stored information may be displayed while viewing a data broadcast or data broadcasting site without re-entering or sent to the corresponding broadcasting company (broadcaster).

To reset storage area for broadcast → p.247

If another FOMA card is inserted, a message appears asking whether to initialize storage area. Select "YES" to initialize. When "NO" is selected, storage area services are not available.

■ Display when reading storage area for broadcast

When using information stored in storage area while watching program, "Use saved information? It may include information used by the same broadcasting group" appears. Select "YES" not to confirm by screen display when reading information while watching the same program hereafter. If "YES (By default)" is selected, the screen will not appear from the next time even if programs are changed.

Before using 1Seg

View procedure

Set channels → p.239 Step 1

Register channels for the area, then set the channel list.



Step 2 Activate 1Seg → p.240

When a call, etc. arrives while watching or recordina

When one of the following arrives while watching or recording, video and audio are interrupted and each function activates (recording is not interrupted). Watching can be resumed after each function is finished.

- Voice call
- Videophone call
- PushTalk call
- Area Mail
- · Alarm, Schedule, To Do list, Booking program (When "Alarm setting" is set to "Alarm preferred")

NOTE

 Prolonged 1Seg watching while charging may shorten battery life.

Important

 Please be aware that DOCOMO bears no obligation or responsibility in the event that stored data is altered or lost. The information stored in your FOMA terminal (images recorded with 1Seq, TV links, information saved to the storage area for broadcasts, etc.) cannot be transferred when you change models or if your FOMA terminal needs to be repaired.

Setting Channels < Channel setting>

To use 1Seg, set channels and select a channel list beforehand. Register a channel list for each area. Selecting the channel list allows you to watch local channels.

- Up to 10 channel lists can be registered, each of which can contain up to 50 broadcast stations.
- Receivable channels vary depending on the area.

Registering channel lists



™™ ►"1Seg" ► "Channel setting" "Select area"

■ To search for channels automatically and register a channel list

► "Auto-channel setting" ► "YES" ► "YES" ► Enter

To interrupt search, press (Cancel) or CLR then select "YES".



Select area Select prefecture


NOTE

- "Select area" may not work properly depending on the area. In this case, use "Auto channel setting".
- Perform "Auto channel setting" in digital terrestrial broadcast range with strong signals.
- A message may appear indicating that remote control Nos. are duplicated in "Auto channel setting". In this case, select area manually.





Function menu⇒p.240





Channel Inio

Function menu⇒p.240

FUNC Channel list screen (p.240)

Channel setting → p.239

Edit title, Delete this

FUNC Channel info screen (p.240)

Remote control No. Change the channel assigned to the remote control No.

Delete this

*: When all channels in the channel list are deleted, the channel list is also deleted.

NOTE

 Current channel list cannot be deleted on the channel list screen or the channel info screen. Change the channel list then delete.

Watching 1Seg

<Activate 1Seg>

↑ MENU ► "1Seg" ► "Activate 1Seg"

The 1Seg screen appears with last-viewed channel.

- To end watching, press
 or CLR for 1 second or longer, then select "YES".
- The disclaimer screen appears the first time 1Seg activates. → p.238



Function menu⇒p.242

NOTE

- Gガイド番組表リモコン (G-GUIDE EPG Remote Control), channel link displayed on a site or mail message, etc. are also available to activate 1Seg. "Media To function" → p.197
- You can play 1Seg sounds with commercially available Bluetooth devices. →p.379

Guide to the 1Seg screen





Full wide display

- ① Program title
- 2 Video
- ③ Subtitles
- 4 Data broadcast

TSeg

⑤ 1Seg effect (sound effects) → p.247
□FF : Sound effects OFF

CS5.1ch : CS5.1ch (only available when

earphones are connected)

Variety / Movie : Each effect Manner : Manner mode

⑥ Operation mode → p.242
⑤ Improve the control of the c

-----Data broadcast mode

⑦ 1Seg ECO mode → p.247
⑤ 1Seg ECO mode activating

® Recording status

• REC ······Recording

• REC ······Timer recording activating IIPRUSE (Red)······Recording paused

Time Shift status

IIPRUSE (Green) ······ Pause

● PLRY ······Normal speed playback

②D1.3 ······1.3× speed playback ②DFF ······2× speed playback

Guidance display

View the guidance of [9] operations or program guide. (The guidance of [9] appears only when "Auto-change Screen" (p.114) is set to "OFF".)

Recording destination
 GrammicroSD

Signal strength (approximate)



appears when out of range.

(2) Channel (remote control No.)

Subtitle reception
 appears when receiving subtitles.

Wolume

15 Quick Info

Ticker displays information on i-mode mail, SMS, and MessageR/F received while watching 1Seg.

(b) If data broadcast is updated while viewing in full wide display, may appear on the screen.

Sound effect ON

Appears regardless of the program or handset settings.

Operations while watching 1Seg

 Some key operations are not available in data broadcast mode.

Key	Action
-	Forward channel selection
0 to 9 * #	One-touch channel selection*1 Press keys corresponding to channels from 1 to 12.
9 (1 second or longer)	Switch vertical and full wide displays*2
(1 second or longer)	Channel search Searches for receivable channels in frequency order. To interrupt search, press ☑ or CLR.
((マナー)/ (((マナー)/ ((((マナー)/	Volume adjustment*3
CLR	Mute*1
	Pause*1/Resume (Start time- shifting playback)*1/View (End time-shifting playback)*1 The order: Pause → Start time- shifting playback → End time- shifting playback (Normal view)
•	G-GUIDE EPG Remote Control start*4
(1 second or longer)	Screen display change (Vertical display only) "Data Broadcast" → "Visual image+DBC" → "V.img+Caption +DBC" Full wide display: Subtitles ON and OFF toggle each time you press this key.
(1 second or longer)	Recording start/end
[P]	Still image recording
*1 . Only evallable in	Switch TV/data BC (Vertical display only)

- *1 : Only available in TV mode.
- *2 : Available only when "Auto-change Screen" (p.114) is set to "OFF".
- *3: In data broadcast mode, side keys are only available for operation.
- *4 : You can also set downloaded program guide i-αppli.

NOTE

- Subtitles may not appear depending on the program.
- Data broadcast cannot be displayed in full wide mode.

NOTE

 When you move to another location and perform channel search, you may find a channel that was not found in Auto channel setting. Perform "Add channel" to watch the channel from the next time.

FUNC 1Seg screen (p.240)

1Seg effect → p.247

Program info·····Display information or start/end time on the viewed program.

Compose message······Select Compose message/ Suggested message. → p.146

When Suggested message is selected, information on the channel being viewed is entered into the main text. The mail recipient can activate 1Seg using the Media To function.

Program guide······Activate G-GUIDE EPG Remote Control. →p.243

Display setting

Switch display ······Select Visual image+DBC/ V.img+Caption+DBC/Data Broadcast. 1Seg audio plays even when only data broadcast is viewed.

Subtitles······Select ON (Wide: Bottom)/ ON (Wide: Top)/OFF.

Brightness······Adjust brightness between three levels

Icon always show·····Set whether to display icons other than the program title in full wide display (p.240).

Sound

Main/Sub sound ······ Select audio output mode.

Sound switch ····· Change sounds. Can only be performed when the sound can be changed.

TVsound w/ closed → p.247

Other setting

1Seg ECO mode, Time Shift setup →pp.247, 247 (User settings)

Channel

Channel info······Display information on the selected channel list.

Channel list → p.240

Channel setting → p.239

Select service Select service to view when multiple services (programs) are broadcast from the same channel.

Add channelAdd currently viewed channel to channel list.

Data Broadcast

TV link list · · · · · Display the TV link list screen. → p.244

Re-read······Reload the displayed data broadcast site.

Show certificate · · · · · Display certificate used on SSL/TLS communications. → p.185

Back to data BC·····End viewing data broadcast site and return to data broadcast.

Data BC settings → p.247 (User settings)

Switch TV/data BC······Switch between TV and data broadcast modes while watching in normal mode.

Add desktop icon → p.116

NOTE

<Set image disp.>

 If this setting is changed, "Set image disp." under "i-mode settings" is also changed.

Performing time-shift playback

Even if 1Seg program is paused, time shifting playback is available.

- Time-shifting playback is available when you pause 1Seg program or receive a voice call/videophone call/PushTalk while watching 1Seg.
- Time-shifting playback is disabled if a voice call/ videophone call/PushTalk arrives when Time Shift setup is set to "Auto OFF".
- 1Seg screen (p.240)▶■
 1Seg is paused.
- When 1Seg can be resumed, press
 - To start time-shifting playback from the beginning of the stored data
 - ▶₽□
 - To change playback speed



The order: 1.3× (with sound)

→2× (without sound) → Normal.



■ To end time-shifting playback

► Press during normal-speed time-shifting playback

Normal 1Seg watching resumes.

NOTE

- 1Seg data is stored for up to about one minute.
 Older data is overwritten after one-minute limit is exceeded.
 - If 1Seg is paused for 1 minute or longer, timeshifting playback starts from the beginning of the stored data, instead of the paused position.
- Time-shifting playback is paused if a voice call/ videophone call/PushTalk arrives when Time Shift setup is set to "Auto ON".
- Channels cannot be changed while 1Seg is paused or during time-shifting playback.
- Time-shifting playback returns to normal 1Seg watching if 1.3x/2x playback catches up with the currently-running scene.
- Sound may not be clear during 1.3x time-shifting playback.

Using G-GUIDE EPG Remote Control <G-GUIDE EPG Remote Control>

The G-GUIDE EPG Remote Control allows you to activate 1Seg from the program guide or set a timer to view/record 1Seg programs. → p.271



"1Seg" Program guide"

The Program guide screen appears.

■ To watch a program

▶Highlight a program▶☑ (TV起動) (Activate 1Seg)

If 1Seg activation confirmation appears, select "YES". If "YES (confirm once)" is selected, the screen will not appear from the next time.

NOTE


- To use downloaded program guide i-αppli, select "Program key" (p.268) on the i-αppli software list screen.
- Downloaded program guide i-αppli may not be available in 2in1 B mode.

Using Data Broadcasting

<Data Broadcast>

In 1Seg, use data broadcast as well as video/audio. Make use of program-linked site and other various information including pictures and videos. Select item (link) to use Phone To/Mail To functions, etc. → 0.197

Data broadcast is not available in full wide display.



Data broadcast mode activates and appears. Press again to return to TV mode.

- To view data broadcast only
- ▶1Seg screen▶ch (FUNC)▶"Display setting"
- ▶ "Switch display" ▶ "Data Broadcast"

Select an item (link)

If i-mode access confirmation appears, select "YES". If "YES (confirm once)" is selected, the screen will not appear from the next time.

Operation during site viewing → p.185

NOTE

- 1Seg audio plays in data broadcast mode.
- In data broadcast/data broadcast site text entry, pictograms cannot be entered.
- If "YES (confirm once)" is selected on the data broadcast confirmation screen, data broadcast information automatically updates and packet communications charges may apply.
- ToruCa may be acquired automatically when receiving data broadcast or data broadcast site.

Sites or memos can be added to TV link depending on data broadcast/data broadcast site. Add to TV link to view the target site or memo directly.

Adding to TV link

If selected item (link) can be added to TV link, a message appears asking whether to add to TV link.

- Up to 50 entries can be added.
- "YES" "Activate 1Seg" Select available item
 - If selected URL or memo is already added A message appears asking whether to overwrite. Select "YES" to overwrite.

NOTE

- URLs or memos added to TV link are only available on 1Seg, not with i-mode Browser or Full Browser.
- Some links may have validity periods.

Opening sites or memos from TV link

● "1Seg" "TV link" Select TV link

If i-mode access confirmation appears, select "YES".

If validity period has expired

A message appears asking whether to delete the link.



TVlink

Function menu⇒p.244

TV link list icons

Icon	Item	
増	Memo	
\mathbf{G}^d	Data broadcast site	
	i-mode content	
Ţ.	Full Browser content	

 Videos/Subtitles do not appear even if accessing data broadcast site. Display detail·····View Title, URL, Outline, Contents type and Expiration Date.

No. of TV link

Delete this, Delete selected, Delete all······Select the deletion method.

Recording a 1Seg Program while Watching <Record 1Seg>

Save current program as a video or picture.

- Recording may not be performed due to copyright restrictions, etc.
- 1Seg cannot be recorded during time-shifting playback.

Recording video

Recorded videos are saved to a microSD card.

- Video cannot be recorded if signal strength is
- To play recorded video → p.315
 - 1Seg screen (p.240)▶☑ (1 second or longer)

Recording starts.

 Channels cannot be changed during recording.

🙆 🗹 (1 second or longer)

Recording ends and video is saved.

- If storage area becomes full, recording automatically ends and video recorded until then is saved.
- Number of storable videos and recording duration estimates

	Max. number of videos*1	Max. recording duration (total)*2
microSD card	99	Approx. 600 min.*3

- *1 : Actual storable count may be decreased depending on the data size.
- *2 : Maximum recording time varies depending on the channel or program.
- *3: Figure estimated with 2 GB microSD card.

NOTE

- If signal strength becomes , recording continues but video/audio are not saved.
- Recording is not interrupted even if screens are changed by Multitask or a call arrives.

TSeg

NOTE

- During recording, alarm sounds for about 2 seconds, 1 minute before recording scheduled time. Operation is performed based on "Priority" set at the time of timer recording registration as follows:
 - "Recording": Confirmation message appears, video recording is finished and timer recording starts.
 - "Operation preferred": Message appears asking whether to start timer recording. Select "YES" to end video recording and start timer recording.
 Select "NO" to continue video recording.
- Recording may automatically end even if the memory is not full.
- The following shows saved video file name and title:

File name: PRGXXX (XXX: Alphanumeric)
Title: YYYYMMDDhhmmXXX

(Y: Year, M: Month, D: Day, h: Hour, m: Minute, X: Numeric)

- Recorded video cannot be set as standby screen, ring tone, receiving screen, etc.
- Data broadcast cannot be recorded as video.
- 1Seg contains copy control signals: "Copy Never", "Copy Once", "Copy Free". Each broadcaster sets copy control signals.
- "Copy Never" program cannot be recorded. When copy control signal changes to "Copy Never" during recording, recording stops and video recorded until then will be saved.

Saving pictures

Picture is saved to the Image folder in Data Box 1Seg folder.

- Picture cannot be saved to a microSD card.
- To play recorded picture → p.304



NOTE

 The following shows saved picture file name and title:

YYYYMMDDhhmmXXX

(Y: Year, M: Month, D: Day, h: Hour, m: Minute, X: Numeric)

- Recorded picture cannot be set as standby screen, receiving screen, etc.
- Subtitles or data broadcast cannot be recorded as picture.

Setting Timer for Watching or Recording 1Seg Program

<Booking program/Timer recording>

Perform Booking program list/Timer recording list.

Notify the start of the program or recording by alarm at the specified date and time.

- Booking program/Timer recording alarms → p.363
- For Booking program/Timer recording, up to 100 entries can be booked respectively.
- G-GUIDE EPG Remote Control, channel link displayed on a site or mail message, etc. are also available for Booking program/Timer recording.

<Example: To set timer recording>



■ To book programs

▶ "Booking program list"






■ To edit booked programs/timer recording

▶ch (FUNC)▶"Edit"

The function key displays (New) when no entry is stored, and (Edit) when any.



Date setting (Start/End)*1.....Enter date and time to start/end recording (watching).

Enter date Enter date and time.

Choose date Select date from Calendar, then enter time.

Channel Select channel.

Title Edit title Enter program title.

Repeat·····Select 1 time/Daily/Select day.

Alarm*2.....Set whether to play alarm sound at the set recording date and time.

Alarm*3.....Select ON/"ON/Set time"/OFF.

Alarm tone*3.....Select an alarm tone from the clock alarm tone, melody, i-motion or music

Music. Music&Video Channel).

VolumeUse (1) to adjust the alarm volume.

Priority²·····Set operation to be performed when the start date and time arrives while using 1Seq/Music group (1Seq, Data Box (1Seq),

Recording ·····Interrupt/End current operation to start recording.

Operation preferred.....Display the confirmation screen. Select "YES" to interrupt/end current operation to start recording.

Activate TV w/ alarm 3..... Set whether to activate (ON, OFF) 1Seg from the alarm notification screen. When ON" is set, pressing

 (ON) and selecting "YES" on the alarm notification screen activates 1Seg, and you can view the booked program.

- *1 : For Booking program, set "Date setting (from)".
- *2 : Set only for Timer recording.
- *3: Set only for Booking program.



folder

If timer recording confirmation appears, select "YES". If "YES (default)" is selected, the screen will not appear from the next time.

When the recording is completed

Desktop icon " III " appears. Select " III " to view up to 100 results from the latest.

Select recording result to play recorded program.

NOTE

<Booking program>

 If multiple programs are scheduled to perform alarm notification at the same date and time, priority is given to an entry with earlier start date and time. If the same start date and time is set, priority is given to an entry with earlier alarm notification.

NOTE

<Timer recording>

- If the recording time overlaps that of an existing entry, priority is given to an entry with later start time. If the same start time is set, priority is given to an entry booked later.
- You cannot record any program if the FOMA terminal is in the following status about 1 minute before start date and time:
 - · Powered off
 - During Dial lock/Omakase Lock
 - During infrared data exchange/iC communications/Bluetooth communications
 - Software updating
- Recording may not start at specified date and time in the following cases:
 - Weak signals
 - Unstable reception
 - · Video image is not provided
 - Insufficient memory in the destination
 - A microSD card is not inserted in the FOMA terminal
- 1Seg audio does not play during timer recording.
 To play audio, press CLR or adjust volume.



New. Edit

Sort Sort entries by selected condition.

DeleteSelect Delete this/Delete selected/Delete past/Delete all.

• "Delete past" deletes entries with start date and time set before current date and time.

Memory info

*: Only available on the Timer recording list screen.

Setting 1Seg

<User settings>



●"1Seg"▶"User settings"



Select any item:

Subtitles······Select ON (Wide: Bottom)/ ON (Wide: Top)/OFF.

Rec. while low batterySet whether to continue recording when battery becomes low while recording.

ON·····Do not display the confirmation screen, and recording continues.

OFF Display the confirmation screen.

1Seg effect

Sound effect······Set sound effects matching the program to be watched.

Visual image effect······Set visual image effects matching the program to be watched.

TV sound while closed ····· Set whether to continue outputting sound when the FOMA terminal is closed while watching.

1Seg ECO mode Activate 1Seg ECO mode that fixes the following settings to conserve battery. The settings return to default when 1Seg ECO mode deactivates.

- 1Seg effect: Sound effect/Visual image effect: OFF (Unchangeable)
- Backlight: 1Seg ECO mode settings
 Select "YES" to set/reset 1Seg ECO mode settings.

Display light Set display light for watching.

Constant light ····· Keep the backlight always on.

Lighting duration······Set display light duration (01 - 30 minutes).

Data BC settings

Set image disp. Set whether to display images for a data broadcast site.

Sound effect······Set whether to enable sound effects of a data broadcast site.

Reset disp. set. Set to hide a confirmation screen afterwards by selecting "YES (Always)". Configure this setting to redisplay a confirmation screen.

Icon always show·····Set whether to display icons other than the program title in full wide display (p.240).

Time Shift setup Set whether to pause 1Seg watching automatically (starting time-shift playback), e.g. when a call arrives.

Auto ON·····Perform time-shift playback. "Performing time-shift playback" → p.242

Auto OFF ····· Perform normal playback.

Check TV settings ····· Confirm User settings.

Reset channel setting ····· Delete all channels.

Reset storage area.....Delete channel information from storage area.

Delete this······Delete selected channel only.

Delete all Delete all channels.

Reset TV settings ······ Reset "User settings" to default.

NOTE

<TV sound while closed>

 If set to "ON", data broadcast site information may update automatically and incur packet communications charges even when the FOMA terminal is closed.

<Set image disp.>

 If this setting is changed, "Set image disp." under "i-mode settings" is also changed.

<Reset disp. set>

 1Seg activation confirmation screen (p.238) is not reset.

lcon always show>

 Even if set to "OFF", guidance may appear in a weak signal location.

Notifying New Message Arrival while Watching

<Quick Info setting>

Ticker shows new message arrival while watching/recording 1Seg: i-mode mail, SMS and MessageR/F.



Display sender······Display sender's name (mail address).

Display sender/subject·····Display sender's name (mail address), emotion-expressing mail icon and subject.

Not display Hide quick info.

NOTE

- Only new arrival notification appears in the following cases:
 - MessageR/F arrives
 - New mail is to be sorted into a lock-active folder
 - · Inbox is locked
 - · Original lock is active for the mail

Music

Music&Video Channel

Music&Video Channel	250
Setting Programs	250
Playing Programs	252
Music	
Downloading and Saving Chaku-Uta-Full® from a Site	253
Playing Music	255
Using Playlist	
Using SD-Audio	258
Saving WMA Data to a microSD Card	259
■ Music Player	
Using Music Player Music Player	260

Handling music data

- In this manual, Chaku-Uta-Full[®], Windows Media Audio (WMA) file, and SD-Audio data are referred to as "Music data".
- You can play Windows Media Audio (WMA) files and Chaku-Uta-Full[®] protected by copyright protection technology on the FOMA terminal.
- Before downloading music data from websites, confirm the terms of use (agreement, prohibited actions, etc.).
- WMA files protected by copyright protection technology are played using the specific information on your FOMA terminal. When the specific information on your FOMA terminal is changed due to malfunction, repairs or model change, WMA files saved before information changes may not be played.
 - In the above case, delete all WMA data in the FOMA terminal, then transfer WMA files from your PC.
- Note that DOCOMO accepts no liability whatsoever for handling of copy control CD (CCCD) and music data that cannot be saved as a WMA file.
- You can enjoy music data stored in the microSD card and the FOMA terminal (Phone) for
 personal use only. Please take care not to violate the rights of others such as copyrights and
 other intellectual property rights. Do not copy or move music data in the microSD card and the
 FOMA terminal (Phone) to a PC or other media.

Music&Video Channel

Music&Video Channel is a service that automatically performs overnight downloads of programs of up to approximately one hour in length (approx. 30 minutes of video programs). After just configuring it once, Music&Video Channel automatically updates content, so you can always carry the latest videos and audio programs with you.

■ Notes on use

- Music&Video Channel incurs charges and requires a subscription. (Subscribers are also required to apply for i-mode and Pake-hodai, Pake-hodai full or Pake-hodai double.)
- Some programs may result in separate information charges in addition to Music&Video usage charges.
- After you subscribe to the Music&Video Channel service, when inserting the FOMA card to a Music&Video Channel-incompatible FOMA terminal, you cannot use the service. You will continue to incur Music&Video usage charges until you terminate the Music&Video Channel subscription.
- Programs cannot be set or retrieved during international roaming^{*}. Stop download service before going overseas. Restart the download service after coming back.
 - *: Please note that if you try to set programs or retrieve a program during international roaming, your FOMA terminal will connect to i-mode and you will incur packet communications charges.
- You can view i-mode sites or mail while playing programs with Music&Video Channel (Background playback). However, you cannot view them while playing video programs. Functions that can be used simultaneously — p.263
- For details on the Music&Video Channel, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Setting Programs

Choose a program title you want to listen to once. After that, subsequent programs are downloaded automatically overnight, hassle-free.





Function menu⇒p.252

② "Set program"▶Follow the on-screen instructions

For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

NOTE

- You can set 2 programs at a time.
- You need to add a site providing Music&Video Channel programs to My Menu (p.181) before setting a program.
- When you have not subscribed to the Music&Video Channel service, a message appears indicating that the service is not subscribed. When you select "Music&Videoチャネルのお申し込みへ" (Application for Music&Video Channel) on the screen, you can subscribe to the Music&Video Channel service.

Checking/Releasing the program setting

Music&Video Channel screen (p.250)►"Set program"►Follow the on-screen instructions

For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

NOTE

 Resetting the program does not delete the added My Menu.

After setting the program

- "jij" appears on the standby screen 12 hours before download starts.
- The program is automatically downloaded at night, and the desktop icon " appears indicating "Update completed" when download is successful. If the program acquisition fails, the desktop icon " appears indicating "Update failed". In this case, you can download the program manually. → p.251



NOTE

- If the communication is interrupted, the FOMA terminal attempts to resume download up to 5 times at 3-minute interval.
- Up to 2 programs can be stored. When the latest program is distributed, the previously saved program is overwritten; therefore, access to past programs is not possible. Move the program to Data box if you do not want to delete it. → p.252
- You cannot copy a downloaded program.
- Downloaded programs cannot be saved to a microSD card.
- Since downloading a program may take time, make sure that the battery is fully charged and used in an area with good signal quality.
- Programs may be undeliverable when the FOMA terminal is outside of the i-mode service area, the power is off, its battery power is low or due to combination of Multitask/Multi access. When this happens, the programs will be retrieved next night. However, the retrieval may not be performed when download is interrupted.
- Programs cannot be retrieved automatically when you insert a different FOMA card or after you initialize the terminal. Set programs again on the "Music&Video Channel" screen.
- When you eject a FOMA card (UIM) from the FOMA terminal where programs are set and insert the card into another Music&Video Channel compatible FOMA terminal, programs are not downloaded automatically. When you select "Set program" on the "Music&Video Channel" screen, the FOMA terminal updates the program settings automatically, and programs can be downloaded automatically.
- Program data in the Delivery program folder may be deleted if unsubscribing from Music&Video Channel or i-mode.

Guide to the icons on the Music&Video Channel screen

Icon	Description			
ICOH	Description			
	Normal program			
m m				
Ď Ď	Program supporting playback			
Ø Ø	synchronized with content broadcast			
Ö Ö				
×	Program that failed to be acquired			
	Program downloaded from sites			
×	When download fails			
MEB	Program containing site access information (URL)			
NEW	Program that has not been played			

- : Partially downloaded program
- : Program with playback restriction (the icon turns pale overall, and then "" (gray) turns to "" (red) when the playback count, period or limit expires)
- Program that does not allow chapter backward, chapter skip, rewinding and fast forward

Downloading a program manually

When the auto download fails, download the program manually.

Music&Video Channel screen (p.250)▶Select a program▶"YES"

- The desktop icon "Music&Video Channel update failed" disappears once the "Music&Video Channel" screen opens. You can manually download a program that you failed to download even if the desktop icon disappears.
- When download is interrupted, the partially downloaded program can be saved. You can resume downloading the remaining data except during specific hours.
- You cannot re-download a program whose playback restrictions have expired. You cannot update until the next delivery date.
- You may not be able to download a program manually depending on the time.

Music&Video Channel screen FUNC (p.250)/Program list screen (p.253)

Chapter list Display the list of title, artist and playback time of each chapter. Select a chapter to play. 1 "Chapter list" \rightarrow p.252

Edit title*2

Move program *3*4..... Select a folder, and move the program to the user created folder of the Music&Video Channel in Data box.

Move*5.....Select Move this/Move selected/Move all then select the destination folder to move the program.

Program info.....Display the program title, the play count, time limit, or period.

Program image*6.....Display images stored in the program.

Sort*2.....Sort programs by specified criteria.

List setting*2.....Select the program list display mode

Connect to URL Access the site using the Web To function if the URL is contained in the program.

Memory info*2

Reset title*2.....Reset the title to default.

Add desktop icon*7→p.116

Delete*3

Delete*5.....Select Delete this/Delete selected/ Delete all.

- *1 : You cannot select the chapter of which all of the data are not downloaded.
- *2: Available only on the program list screen.
- *3: Available only for the Delivery program folder on the program list screen.
- *4: You cannot move a partially downloaded program. program supporting playback synchronized with content broadcast or program with playback period expired.
- *5: Available only for a user created folder on the program list screen.
- *6: When the stored image is a GIF animation, the animation is played. You cannot save program images.
- *7: Available only on the Music&Video Channel screen.

NOTE

<Delete>

 Deleting the program does not reset the program settina.

Chapter list

Select "Chapter list" from the function menu of the "Music&Video Channel" screen to display the chapter list of the program.



FUNC Chapter list screen (p.252)

Chapter info.....Display the chapter title and playback time.

Chapter image......Display images stored in the chapter.

Connect to URL Access the site using the Web To function if the URL is contained in the program.

*: When the stored image is a GIF animation, the animation is played. If the program consists of i-motion. the image is not displayed. Images stored in the chapter cannot be saved.

Playing Programs

Music&Video Channel screen (p.250) Select a program

The program playback starts.

"Guide to the music player screen" → p.260

"Operations on the music player screen" → p.261

- When earphones are connected, sound comes only from the earphones regardless of the "Headset usage setting".
- When you select a program where you stop playback last time, the playback starts from the beginning of the chapter where you stop the playback.

Data acquisition

Property

Back

Download complete

NOTE

- Some programs have playback restrictions. """ appears at the beginning of the title for programs with restrictions on the play count, period or time limit. Programs whose playback period is restricted cannot be played before or after the period. If the battery pack is removed from the FOMA terminal for a long period of time, the date and time settings stored on the FOMA terminal may be reset. In this case, programs whose playback period or limit is restricted cannot be played.
- When you perform the operation overseas, the time limit may expire before or after the displayed period.
- Playing programs supporting playback synchronized with content broadcast

The program to be played can synchronize with content broadcast and play the same content.

- The program must be downloaded beforehand.
- The playback procedure is the same as that of usual program, but it cannot be played before or after the playback period.

NOTE

- The playback time synchronizes with the automatically adjusted time, so it is not changed even if you manually change the date and time on the FOMA terminal.
- You cannot play a partially downloaded program.

Playing a program in Data box

"Data box" ► "Music&Video Channel" ► Select a folder ► Select a program

The program playback starts.

■ Music&Video Channel list screen



Function menu⇒p.335



Guide to the Preview/Title list

Icons on the Program list screen → p.251



Downloading and Saving Chaku-Uta-Full® from a Site

 You can store up to 100 Chaku-Uta-Full[®] on the FOMA terminal (the number of items you can actually store may be reduced depending on the file size of stored Chaku-Uta-Full[®]).

i-mode Browser screen (p.180) Select Chaku-Uta-Full®

When data download is complete, the "Download complete" screen appears.

- To cancel download
- CLH
- To play downloaded Chaku-Uta-Full[®]
- ▶"Play"

"Guide to the music player screen"→p.260




- To display information about Chaku-Uta-Full[®]
- ▶ "Property"



■ When only a part of the data can be saved When download is interrupted due to poor signal condition or when quitted, "Save" (partial save) may appear on the Download complete screen. In this case, you can save only partially downloaded data.

■ To cancel saving

▶"NC



NOTE

- Some Chaku-Uta-Full® have playback restrictions.
 "D" appears at the beginning of the title for Chaku-Uta-Full® with restrictions on the play count, period or time limit. Chaku-Uta-Full® whose playback period is restricted cannot be played before or after the period.
- If the battery pack is removed from the FOMA terminal for a long period of time, the date and time stored on the FOMA terminal may be reset. In this case, Chaku-Uta-Full[®] whose playback period or time limit is restricted cannot be played.
- You cannot download Chaku-Uta-Full[®] whose size exceeds 5 MB or Chaku-Uta-Full[®] whose size is unknown.

Downloading the remaining data of partially downloaded Chaku-Uta-Full[®]

When you select partially downloaded Chaku-Uta-Full® from the save folder, a message appears asking whether to download the remaining data. Select "YES" to connect to the site and download the remaining data.

When you download and save all data, the partially saved data are deleted.

- Icons on the Music list screen indicate data download status. → p.255
- If the playback period or limit of partially downloaded Chaku-Uta-Full® is expired, you cannot download the remaining data (except for Uta-hodai tracks). You can delete partially saved data when downloading the data.

Updating playback restrictions on Utahodai tracks

When you play a playlist containing Uta-hodai tracks whose playback restrictions have expired and can be updated, a message appears indicating that playback restriction update is required. Select "YES" to connect to the site and update the playback restrictions (packet communications charges apply). When you select "NO", you cannot play the data. When there are multiple Uta-hodai tracks whose playback restrictions can be updated, select an online music distribution site to update data.


- Uta-hodai is a service where you can play music data while you subscribe to the service of the content provider. Playback period is specified based on the license information downloaded with the music data. Music data whose playback period has expired can be played again by updating the license. The license information may contain playback extension period in addition to playback period. You can play the music data without updating the playback period during playback extension period, but the data cannot be played after the playback extension period expires. If you download music data without updating the playback period, the music data cannot be played until it is saved.
- Pake-hodai, Pake-hodai full and Pake-hodai double do not cover packet communications charges incurred when updating the playback period during international roaming.
- Icons on the Music list screen indicate playback restriction status. → p.255
- Since playback restriction update is performed by connecting to a site, packet communications charges will apply.
- It is recommended that you initialize your FOMA terminal when you replace a FOMA card (UIM).

NOTE

 When Uta-hodai track set as a ring tone or alarm cannot be played, the default demo sound, ring tone or alarm tone is played.

Playing Music

 Add tracks to a playlist and play your favorite tracks in your preferred order. → p.257





Function menu⇒p.335



"Guide to Music list" → p.255

To search music by i-mode

▶ "Search by i-mode" ▶ "YES"



Select a track

The program playback starts.

"Guide to the music player screen" → p.260 "Operations on the music player screen" → p.261


■ Partially downloaded Chaku-Uta-Full[®]

A message appears asking whether to download the remaining data. Select "YES" to download the remaining data. → p.254

NOTE

- When earphones are connected, the sound comes from the earphones even when manner mode is set. If you disconnect earphones when manner mode is set, the playback is paused.
- appears on the file type icon for the track with restrictions on the play count, period or time limit. Tracks whose playback period is restricted cannot be played before or after the period.

Guide to Music list

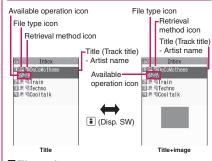

File type icon

Icon	Description
××	Track stored on the FOMA terminal (Phone)
**************************************	Track that is stored on a microSD card and can be moved to the FOMA terminal (Phone)
	Track that is stored on a microSD card and prohibited to be moved to the FOMA terminal (Phone) * Also displayed on the Playlist music list screen of the FOMA terminal (Phone) when the microSD card containing tracks stored in the playlist is not inserted into the FOMA terminal.
SD Audio	SD-Audio track
ON A	WMA track
® ₩×	Track that cannot be played or whose playback restrictions cannot be updated
77	Partially downloaded track
0	Track restricted by the FOMA card security function

- Track with file restrictions mb× w×
 - : Track with playback restrictions ("(")" changes to "a" when the playback count, period or limit expires) The pale blue icon indicates that playback restriction can be updated
 - * The playback-unrestricted icon appears even for a playback-restricted WMA track immediately after a list of tracks is displayed. To check the restriction, highlight the track. (When the track is highlighted, the restriction is checked and the icon display updates.)
- Playable only when the FOMA card (UIM) being used was also used to save the track
 - : Playable only when the model and FOMA card (UIM) being used were also used to save the music

Retrieval method icon

Icon	Description		
OIL.	Track downloaded from a site		
띹	Track downloaded from a PC		

Available operation icon

Icon	Description			
17	Track that can be set as a ring tone			
***	Track that can be moved to a microSD card			
WEB	Track that can use the Web To function			



: Movable only when the FOMA card (UIM) being used was also used to save the track

: Movable only when the model and FOMA card (UIM) being used were also used to save the music

FUNC Music list screen (p.255)

 Items listed in the function menu vary depending on the folder. Also may change after searched or sorted.

Add to playlist ······ Add a track to the end of the playlist.

Create playlist → p.257

Move to microSD → p.330

Move Select Move this/Move selected/Move all and select the destination folder to move the track.

Edit information ····· Edit the title, artist name, album name, etc.

Edit disp. title

Reset info······Reset the information to the status when the Music information was retrieved.

Ring tone → p.98

Fullsong ring tone Set the entire track as a ring tone.

Point ring tone ······Use to select a part of the track to set as a ring tone.

Search Search for tracks by selected criteria.

Sort Sort tracks by specified criteria.

List setting ······ Select Title/Title+image.

File property·····Display the music file name, the save date and time and whether the track can be moved to a microSD card.

Lyrics Display the lyrics. If the lyrics cannot be displayed in a single page, use \Box to switch pages.

Jacket image······View the jacket image. If there are multiple images, use \Box to switch images.

Memory info

Repeat setting, Shuffle → p.262 (Function menu)

Connect to URL → p.263 (Function menu)

DeleteSelect Delete this/Delete selected/Delete all.

Move to phone → p.331

NOTE

<Move to microSD>

 To check whether the Chaku-Uta-Full[®] can be moved, select "File property". Some Chaku-Uta-Full[®] can be moved only between the same models.

Playing with the FOMA terminal folded

(MUSIC) is available to activate Music Player with the FOMA terminal folded.

 A track or Music&Video Channel program can be played with the FOMA terminal folded. Only a track can be started with the FOMA terminal folded.



(MUSIC) (1 second or longer)

Playback of the track that was ended last time starts.

Operations during playback → p.261

- When the FOMA terminal is folded, you can check the playback status on the indicator display.
- You cannot activate Music Player or resume playback by pressing (MUSIC) in Manner mode (it is possible when earphones, etc. are connected).
- When the battery becomes low and the track is temporarily paused, playback is not resumed even if you press (MUSIC) (open the FOMA terminal to resume playback).

Using Playlist

Add tracks to a playlist and play your favorite tracks in your preferred order.

 The following shows the numbers of tracks and playlists that can be stored on the FOMA terminal (Phone):

Tracks	Up to 100
Playlists*	Up to 21 (including a list of all tracks)

- *: Up to 99 tracks can be added to a playlist (except for a list of all tracks).
- Up to 1,000 tracks can be added to a playlist of all tracks in total; up to 100 tracks in the FOMA terminal and 900 tracks in a microSD card (including SD-Audio data and WMA data).
- Tracks (Chaku-Uta-Full[®]) stored in the FOMA terminal (Phone), tracks (Chaku-Uta-Full[®]) stored in a microSD card, SD-Audio data and WMA data can be added to the same playlist.

Creating a Playlist

- Music list screen (p.255)▶
 ch (FUNC)▶"Create playlist"
- Select any item:

Set this. Set selected

Set all ······Add all tracks on the Music list screen to a playlist.

👔 Enter a playlist name

A playlist is created and the Playlist music list screen appears.

- To start playback
- ► Plav)

Playing a Playlist

● Folder list screen (p.255) "Playlist"

- To play the playlist immediately
- ► Highlight a playlist to play ► (Play)
- To add tracks in the microSD card to a list of all tracks
- ► Highlight "All tracks" to play (Update)



Function menu⇒p.258

Playlist1

Playlist music list

DoCoMothem



Select a playlist

■ When "All tracks" is selected

The playlist includes all tracks (playable tracks) stored in the FOMA terminal (Phone) and a microSD card.

card. Function menu⇒p.258
If a track in a microSD card
may have been updated, a message appears

国無唱Train

EL® ®Techno EL® ®Cooltalk

6

(Play)

Playlist playback starts and the tracks are played in the added order.

asking whether to update a list of all tracks.

- When all the tracks are deleted from the playlist, the playlist is also deleted.
- "All tracks" cannot be selected if no track is added, e.g. at the time of purchase. In this case, press
 (Update).

FUNC Playlist list screen (p.257)

Create playlist → p.257

Update all tracks Add tracks in a microSD card to a list of all tracks.

Edit playlist name

Copy to playlist Create a copy of the playlist in the playlist list.

Search Search for tracks by selected criteria.

Playlist info Display the playlist name, number of tracks in the playlist and the playback time.

Delete playlist Select Delete this/Delete selected/Delete all



Playlist music list screen (p.257)

Create playlist → p.257

Edit playlist

Sort playlist Select the position to move to and sort tracks.

Add music Select a playlist to move to and add the track to the end of another playlist.

Release settings ······ Select Release this/ Release selected/Release all to release tracks from the playlist.

Search, Sort, List setting, File property, Lyrics, Jacket image → p.256 (Function menu)

Repeat setting, Shuffle → p.262 (Function menu)

Connect to URL → p.263 (Function menu)

NOTE

<Edit playlist>

 Releasing tracks from the playlist does not delete the original data.

Using SD-Audio

If you save data obtained from a music CD or via music distribution service to a microSD card* using SD-Jukebox and PC, the data can be played on the FOMA terminal

- *: To save music data using SD-Jukebox, use a microSD card of up to 2 GB.
- The following shows the data format, number of playlists and tracks that can be played on the FOMA terminal:

File format	MPEG2 AAC (LC)/MPEG2 AAC+ SBR/ADTS Stream
Bit rate	16 to 192 kbps
Tracks	Up to 999
Playlists*	Up to 100 (including a list of all tracks)

- *: Up to 99 tracks can be added to a playlist (except for a list of all tracks).
- If you do not have a microSD card, purchase one at your local electrical appliance store.

SD-Jukebox

Purchase the SD-Jukebox on the following website: http://club.panasonic.co.jp/mall/sense/open/ (Japanese)

SD-Jukebox supports Windows 2000, Windows XP and Windows Vista. For the operating environment, visit the following website:

http://panasonic.jp/support/software/sdjb/ (Japanese)

Saving SD-Audio data to a microSD card

Prepare the following

- PC*1 that complies with the operating environment for "SD-Jukebox"
- microSD card reader/writer compatible with copyright protection function*2
- microSD card
- *1 : Install "SD-Jukebox" on your PC beforehand.
- *2: The software is required to write data from the PC to the microSD card. You can use the FOMA terminal as the microSD reader/writer using the FOMA USB Cable with Charge Function 02 (optional). → p.334



Start "SD-Jukebox" on the PC and convert music data such as music CD data to AAC format

For how to use "SD-Jukebox", refer to the "SD-Jukebox" help.

To write already converted music data, go to Step 3.

Use "SD-Jukebox" to save SD-Audio data to the microSD card

NOTE

SD-Audio data cannot be set as a ring tone.

Saving WMA Data to a microSD Card

Use "Windows Media Player" to convert music CD data to WMA data, and save them to a microSD card.

 The following shows the data format, number of playlists and tracks that can be played on the FOMA terminal:

File format	WMA9 (Windows Media Audio 9 Standard)
Bit rate	32 to 192 kbps
DRM	Windows Media DRM10 for Portable Devices
Tracks	Up to 999
Playlists*	Up to 100 (including a list of all tracks)

- *: Up to 999 tracks can be added to a playlist.
- Windows Media Player 10/11
 To use Windows Media Player 10 or 11 on
 Windows XP, Service Pack 2 or later is required.
 Use Windows Media Player 11 on Windows Vista.
 For how to operate the software, refer to the
 Windows Media Player 10/11 help.
- If you do not have a microSD card, purchase one at your local electrical appliance store.
 - Prepare the following
 - PC that complies with operating environment for "Windows Media Player"
 - microSD card
 - FOMA USB Cable with Charge Function 02
- "External connection" ➤ "USB mode setting" ➤ "MTP mode" When set to "MTP mode", "를" appears.
- Connect the FOMA terminal to a PC via the FOMA USB Cable with Charge Function 02

"" appears when a microSD card is inserted and the FOMA USB Cable with Charge Function 02 is connected in MTP mode.

Start "Windows Media Player" on the PC and convert music data such as music CD data to WMA format

It may take some time for "Windows Media Player" to recognize the FOMA terminal.

- Transfer WMA data stored on the PC to the microSD card
- Disconnect the FOMA USB Cable with Charge Function 02 after data transfer
- Set the USB mode of the FOMA terminal back to "Communication mode"

- WMA data cannot be set as a ring tone.
- You can also use the Napster[®] application to save music data.
 - You can download the Napster® Software from the following website: http://www.napster.jp/
 - For the Napster[®] Software, visit the following webpage: http://www.napster.jp/support/
- WMA data transferred to a microSD card with another FOMA terminal may not be displayed/ played on the N-09A.
- When you use a microSD card to which WMA data has been transferred with another FOMA terminal, it may not be recognized by a PC even if the MTP mode activates. In this case, perform "Delete all" in the function menu of the WMA Folder list screen, or format the microSD card (p.333). Note that all data will be deleted when you format the microSD card.

Using Music Player < Music Player>

Use the music player to play Chaku-Uta-Full[®], i-motion, movie, Music&Video Channel program and tracks stored in a microSD card.

- In addition to the pre-installed i-motion, you can play i-motion, movie or Chaku-Uta-Full[®] downloaded with i-mode Browser or Full Browser, Music&Video Channel program, or music data transferred from music CDs.
 - "Downloading i-motion/Movie from Sites" → p.207 "Downloading and Saving Chaku-Uta-Full® from a Site" → p.253
 - "Setting Programs" → p.250
 - "Using SD-Audio" → p.258
 - "Saving WMA Data to a microSD Card" → p.259
- You can enjoy stereo sounds with Stereo Earphone/Microphone 01 (optional). Use the Earphone Plug Adapter 01 for External connector terminal (optional) to connect the Stereo Earphone/Microphone 01 to the FOMA terminal. → p.22
- When earphones are connected, sound comes only from the earphones regardless of the "Headset usage setting".
- You can enjoy play music wirelessly with commercially available Bluetooth devices. → p.379
- For more information on Music Player, visit the NTT DOCOMO website.

■ BGM play (Background play)


You can read mail or display i-mode sites while listening to music with the music player. →p.263

Guide to the music player screen

i-motion/Movies and i-motion Music&Video Channel programs can be played in full wide display.

Function menu of the Music player screen → p.262

Normal screen

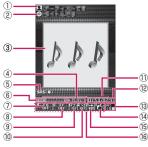

Full wide



① Artist name

Track: Artist name

Music&Video Channel: Program title

i-motion/Movie: Creator

② Title

Track: Title

Music&Video Channel: Chapter title and Artist

name

i-motion/Movie: Title

③ Image/Moving picture

Track: Jacket image

Music&Video Channel: Chapter image or Program

movina picture

i-motion/Movie: Moving picture

4 Playback status

► PLRY : During playback
■ PRUSE : During pause

During fast forward: During rewind

▶5L0W: During slow playback

PLAY: During fast playback

(5) Sound effect ON

Displayed regardless of the phone settings

⑥ Track

Track: Track No. being played/Total number of tracks in the folder

Music&Video Channel: Chapter No. being played/ Total number of chapters

i-motion/Movie: File No. being played/Total number of files in the folder

Sound quality (Equalizer)



® Sound effect



Repeat

翮: OFF

: All repeat

: Single repeat

10 Shuffle

: ON

Playback position

Playback position in marker (If you use to move the marker and press (Play) during pause, playback starts from the position)

- ② Elapsed time (minutes:seconds)/Total playback time (minutes:seconds)
- ③ Volume (Level 0 20)
 "௸" in Manner mode
- Select track/file/chapter Change track/file/chapter to play
- (b) Web To supported Access a URL contained in the track or program
- Setting menu → p.262

NOTE

 When the FOMA terminal is folded, you can check the playback status on the indicator display.

Operations on the music player screen

 The following operations may not be available depending on the type or activation method of a track, Music&Video Channel program, i-motion or movie.


Key	Action
	Pause/Resume playback
(1 second or longer)	■ During playback Stop playback ■ During pause (other functions displayed) Resume or stop playback
((マナー)/ (((マナー)/	Adjust volume
□ (▲(マナー) (1 second or longer))	Play from the beginning Play previous track/chapter/ moving picture when pressed within 1 second from the beginning *1"2
(1 second or longer))	Play the next track/chapter/ moving picture*1
(1 second or longer)	Skip backward
(1 second or longer)	Skip forward
during pause	If you move the playback position marker and press (Play), playback starts from the position.
i (6)	Select track/file/chapter to play
#/\ X	Switch images when multiple images are stored
CLR	Stop playback
	Use the setting menu → p.262
1	Set equalizer
2	Set effects
3	Repeat setting
4	Shuffle ON/OFF
5	Access the site
9	Switch vertical and full wide displays*3

- *1 : During shuffle playback, the previous or next track is played regardless of the order in the folder or playlist.
- *2: In case of (マナー) (1 second or longer), keep pressing after playback starts from the beginning to play the previous track.
- *3 : Available only when "Auto-change Screen" (p.114) is set to "OFF".

NOTE

- Volume can be adjusted between Level 0 and Level 20, and the setting is retained next time the i-motion is played.
- The volume set for Music Player does not affect ring volumes set in "Ring volume".
- Rewind and Fast forward are not available depending on the data.

Using the setting menus



The cursor moves to the setting menu.

"Guide to the music player screen" → p.260

Use to select a function, then press (Select)

You can also set functions using $\boxed{1}$ - $\boxed{6}$. \rightarrow p.261

Press CLR to return to play/pause/stop.

When a stereo earphone (optional), etc. is connected

On tracks or Music&Video Channel programs, you can use the switch to perform the following operations. The switch operation is not available in Music&Video Channel programs of i-motion:

Switch operation	Action
Once	Play/Pause each time you press the switch
2 times in a row during playback	Play the next track/chapter
3 times in a row during playback	Play from the beginning Play previous track/chapter when pressed within 3 seconds from the beginning
1 second or longer during playback	Quit the Music Player

FUNC Music Player screen (p.260)

 Some functions may not be available depending on the type of track, Music&Video Channel program, i-motion or movie being played.

Action setting

Sound effect Set the sound quality and effects.

Equalizer Set the sound quality.

■ To create your preferred sound quality

Highlight User 1 - 3 → (Detail) → Use to select frequency → Use to select strength (Set)

To restore the changed sound quality to default

► Highlight User 1 - 3 ► 🖾 (Detail) ► 🖂 (FLAT)

Effect Set the sound effects.

■ To create your preferred effects
►Highlight User 1 - 3►☑ (Detail)►Use
□ to select effect►Use □ to select

■ To use user setting to change existing effects

strength I (Set)

►Highlight User 1 - 3 ► (Detail)

(Set) Select effect

■ To restore the changed effect to the preset initial value

Highlight User 1 - 3▶☑ (Detail)▶☑ (Init.)

Repeat setting

OFF Do not repeat playback.

All repeat······Repeat playback of all tracks in the folder.

Single repeat ······Repeat playback of the track being played (paused).

Shuffle Turn shuffle playback on/off.

Screen setting*······Set the display mode of the playback screen.

Normal screen mode······Play in portrait display.

Full screen mode······Play in full wide display.

Change skin······Set the design of the music player screen.

Set image disp. Set the display size of images in normal screen mode.

Normal······Display the image in the actual size.

Fit in display ····· Display the image fit to the screen regardless of the image size.

Set repeat play······Set whether to play files continuously in the folder.

Play menu

Fast·····Play fast. Press ☑ (Play) to return to normal playback.

Slow·····Play slowly. Press ☑ (Play) to return to normal playback.

Position to play······Use ☐ to move the playback position marker, and play only a part of the track. This function may not work depending on the track.

Chapter list······Display the chapter list. Select a chapter to play.

Detail Info

File property, i-motion info·····Display the music or i-motion file name, file save date/time and whether the file can be moved to a microSD card.

Music&V Channel info

Program info·····Display the program title or creator.

Chapter info······Display the chapter title and playback time.

Movie info·····Display the movie file name, the save date and time and playback restrictions.

Lyrics Display the lyrics. If the lyrics cannot be displayed in a single page, use to switch pages.

Jacket image······Use to switch jacket images of the track being played.

Chapter image······Display images/animations stored in the chapter being played.

Image·····Display on i-motion or movie. Always grayed out and not available.

Connect to URL······Access the site using the Web To function if the URL is contained.

Change music, Select file, Chapter list ······ Select a track/file/chapter to play.

Help·····Display a description of an operation assigned to a key.

*: Available only when "Auto-change Screen" (p.114) is set to "OFF".

NOTE

- <Chapter image>
- Images stored in the chapters cannot be saved.

Using other functions during music playback <Switch to BGM>

You can play a track or Music&Video Channel program and use other functions simultaneously.

 Switch to BGM is not available in Music&Video Channel programs of i-motion.

Music Player screen (p.260)▶ "Switch to BGM"

The standby screen appears, and you can use other functions.

- To quit the Music Player
- ▶"Quit music" or "Quit Music&Video ch"

■ To quit BGM playback

Change a task to the music group, and stop the music player. →p.355

Functions available during BGM playback

Function	Availability
Voice/Videophone calls/PushTalk	×
Mail	○*1
i-mode	0
i-αppli	△*2
Settings/NW Service	\triangle
Data box	\triangle
LifeKit	\triangle
i-concier	0
Phonebook	\triangle
Own data	0
Osaifu-Keitai/ToruCa	0

- ○: Available △: Partially available ×: Unavailable
- *1: When "Receiving setting" is set to "Alarm preferred", playback pauses when a mail arrives (even when set to "Operation preferred", playback pauses when a mail arrives while in standby). When composing i-mode mail, some functions such as "Activate camera" are not available.
- *2 : When "Sound setting" is set to "i-αppli preferred", playback pauses when activating i-αppli.

i-αppli/i-Widget

i-αppli	266
Downloading i-αppli from Sites	266
Starting i-appli	267
Pre-installed i-αppli	270
Starting i-αppli Automatically	276
Using i-αppli Call	277
Setting i-αppli Calli-αppli call DL set	278
Starting i-αppli from Sites or Maili-αppli To function	278
Setting i-αppli Stand-by Display	278
Managing i-αppli	279
i-Widget	280
Using i-Widget	281
Downloading Widget Appli	282

i-αppli

i-appli are software applications that run on i-mode compatible handsets. You can automatically receive updated stock prices, weather information, etc., and play games without being connected to the network, by downloading 'i-appli from i-mode sites.

The FOMA terminal supports i-αppli online that enables many-to-many online communications via real-time communications or i-αppli call (p.277). Some i-αppli support i-Widget (p.280).

*: Packet communications charges will apply.

- Packet communications charges incurred overseas differ from those in Japan. → p.409
- For details on i-αppli, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Downloading i-αppli from Sites

Download up-to-2 MB i-αppli from an i-mode site and start it on the FOMA terminal.

 Up to 200 downloaded i-αppli can be stored. The maximum number of i-αppli that can be stored varies depending on the data size. The number includes partly-downloaded i-αppli.



The message "Download completed" appears. i-coppli that immediately starts from the site starts without displaying the message.

- To cancel data download in progress
- ▶ During download▶ (Cancel) or CLR
- When the software setting screen appears

 Configure i-αppli settings

 Software setting → p.268



The downloaded i-αppli starts.

- To not start i-αppli
- ▶"NO"

Downloading mail-linked i-αppli

- When you download a mail-linked i-αppli, the dedicated folders will be created automatically in the Outbox or Inbox folder. Folder names will be the same as the application and cannot be changed.
 Up to 5 mail-linked i-αppli can be stored.
- Mail sent and received using mail-linked i-αppli is automatically sorted into a mail-linked i-αppli folder.
 You can also manually sort received mail.

- You cannot download mail-linked i-αppli in the following cases:
 - There are already 5 folders dedicated to maillinked i-αppli
 - Stored mail-linked i-αppli uses the same folder
 - · Mail box lock is set

NOTE

- Some i-αppli may automatically establish a communication after downloaded. "Network set" under "Software setting" is available to disable automatic communication.
- If you download i-αppli that uses the terminal data (the stored information or mobile phone/FOMA Card (UIM) serial number information) or i-αppli DX, a message appears notifying that the i-αppli uses the terminal data. When you select "YES", your terminal information is sent to the IP (information service provider) via the Internet and may be disclosed to a third party as a result.
- Even if space is available to store software, you may not be able to download individual Osaifu-Keitai i-αppli depending on the size of the IC card data. Follow the on-screen instructions, delete the displayed i-αppli and download again. You may not be able to delete downloaded i-αppli depending on the type. Some i-αppli will be deleted after you activate the i-αppli and delete the IC card data.
- When 2in1 is in B mode, the activation confirmation screen may not appear after download, depending on the i-αppli.

Viewing i-αppli information during download <Disp. Software info>

You can check i- $\alpha ppli$ information when downloading the i- $\alpha ppli$



- To not check information
- "Not display"

Viewing a logo when downloading i-αppli <About i-αppli>

View the logo and registered trademark when downloading i-αppli.



Starting i-αppli

Starting i-appli

- 1 second or longer)
 - To search i-αppli by i-mode
 - ► "Search by i-mode" ► "YFS"



Function menu⇒p.268




When you start i-αppli, "反ζ" or " 戊χ" appears at the bottom of the screen.

Pre-installed i-αppli → p.270

■i-αppli status displayed on the Software list screen

Icon	Description
dr	i-αppli DX
25	Mail-linked i-αppli
@	"Auto start time" already set
QZ	"Set i-αppli stand-by" already set
a	"Auto start time" and "Set i-αppli stand- by" already set
3=C	"i-αppli To setting" can be set
<u>s</u>	"Set i-αppli stand-by" can be set
響	"i-αppli To setting" and "Set i-αppli stand-by" can be set
SSL	i-αppli downloaded from an SSL/TLS page
SD	i-αppli whose data can be saved to a microSD card → p.280
	Partially-downloaded i-αppli
EC	Osaifu-Keitai i-αppli → p.285
2	GPS i-αppli

Exiting i-appli



- To use another function while i-αppli is active
- ▶"Suspend(MULTI)"

- When you receive a voice call, videophone or PushTalk call while i-αppli is active, the i-αppli is paused. The i-αppli screen reappears when the call ends. However, the "V.phone while packet" setting applies to videophone calls during i-αppli communications.
- i-αppli mail using mail-linked i-αppli may not be displayed properly.
- Data (i-αppli data (microSD)) can be saved to a microSD card depending on the i-αppli.
- Some i-αppli allow you to use the Phone To/AV Phone To or Web To function from the i-αppli. However, you cannot use these functions from the i-αppli standby screen (except while i-αppli is active).
- Images or entered data used with i-αppli* may be automatically sent to the server via the Internet.
 - *: Images used with i-αppli refer to those taken with the camera activated from a camera-linked i-αppli, retrieved using the i-αppli infrared data exchange or iC communication function, downloaded with i-αppli from an i-mode site or website, or downloaded with i-αppli from Data box.
- If the trace information memory is full, older entries are overwritten.
- Some i-αppli may not make sounds.
- If the camera is activated from i-αppli, the taken photos are saved and used as part of the i-αppli.
- Some i-αppli support a function that activates the Bar code reader to scan JAN codes, QR codes or CODE128.
- With some i-αppli, content providers can access the i-αppli stored on the FOMA terminal, and suspend services. If this happens, the subscriber will not be able to activate the i-αppli, make standby settings, or perform upgrades. The subscriber will only be capable of deleting the i-αppli or displaying software details. Please contact the content provider in order to use the service again, as it is necessary for the subscriber to receive i-αppli suspend cancellation commands.
- With some i-αppli, content providers may send data to i-αppli stored in the FOMA terminal.

NOTE

- When a content provider suspends/resumes service or sends data, the FOMA terminal communicates with the network, making " ⊜ " blink. Packet communications charges will not apply.
- When 2in1 is in B mode or Dual mode, you may not be able to activate, operate or set some i-αppli.
- Some i-αppli may appear in full screen mode, and the battery icon or signal strength icon may not appear.

Motion tracking

Your FOMA terminal supports "Motion Tracking" that enables you to operate i-αppli (by tilting/shaking the FOMA terminal) using the recognition technology employed on the camera.

- Motion Tracking may not be available in the following cases:
 - When the lens of the camera is not clean
 - When your clothes color and the background cannot be easily distinguished
 - When the background condition is unstable e.g. in transit
 - When the location is dark or the background is too bright

Warning

 Motion Tracking i-αppli is a game that you play by tilting or shaking the FOMA terminal. The FOMA terminal may hit people or objects if shaken too much, causing serious accidents, damage, etc.
 When using virtual games, make sure you are in a safe place, hold the FOMA terminal securely, and do not shake it more than necessary.

Using i-αppli touch

When playing games, wave the nark over the one on another FOMA terminal compatible with this function to establish Bluetooth pairing easily.

Software list screen (p.267)/IC card content screen (p.285)

Software setting ······Configure the software settings. Press ☑ (Finish) to finish the setting operation.

Stand-by display → p.278

Network set······Set whether to communicate when i-αppli is activated.

Stand-by net······Set whether to communicate with i-αppli set as standby screen.

Icon info·····Set whether to allow use of unread mail/message icon information when i-αppli is activated.

Change mld./img. ····· Set whether to allow change of ring tones for calls, mail and messages, images on the standby screen or when mail is sent or received, or menu icons when i-αppli DX is activated. When set to "Check every session", you can select whether to change these every time i-αppli attempts to change them.

See P.book/hist......Set whether to allow i-αppli DX to look up in the phonebook, latest Call History, and latest unread mail when the i-αppli DX is activated.

Location usage·····Set whether to allow location information acquisition when i-αppli DX is active. When set to "Yes", the location information will be automatically acquired.

Program guide······Set whether to use the i-αppli as program guide i-αppli activated by pressing 🔹 (EPG) on the 1Seg screen (p.240). You can also set downloaded i-αppli as program guide i-αppli. "Gガイド番組表リモコン" (G-GUIDE EPG Remote Control) is set at the time of purchase.

Map set·····Set whether to specify the i-αppli when viewing a map using location information in an image or phonebook entry.

i-αppli call set······Set whether to allow the i-αppli to start when receiving i-αppli call (p.277).

Power saver·····Set whether to set the Power saver while i- α ppli is active. Set whether to pause the i- α ppli when the FOMA terminal is closed, or set whether to pause the i- α ppli according to the "Backlight" setting under "Settings/NW Service" if no operations/ communications occur while the i- α ppli is active.

Software info······View i-appli information.

Upgrade → p.279

List setting······Select Title image+icon/lcon/ Software name.

Set i-appli To → p.278

Auto-start time → p.276

Add desktop icon → p.116

Move to microSD······Move a single i-αppli or i-αppli data in the FOMA terminal to a microSD card. "Displaying i-αppli in a microSD card" → p.279

Memory info

DeleteSelect Delete this/Delete selected/Delete all

NOTE

<Software setting (Network set)>

• If set to "OFF", you may miss timely information.

<Software setting (Icon info)>

- If set to "ON", unread message and mail information, service area icons, battery level and manner mode status may be transmitted to content providers via the Internet in the same way as mobile phone/FOMA Card (UIM) serial number information is sent, and the information may be disclosed to a third party.
- If set to "OFF", some i-αppli that require icon information may not work.

<Software setting (Program guide)>

- When set to "NO", a message appears asking whether to release. When set to "YES", the preinstalled "Gガイド番組表リモコン" (G-GUIDE EPG Remote Control) is set.
- You can set only 1Seg-linked i-αppli DX whose "Program guide key "i-αppli To"" under "Software info" is set to "ON".

<Software setting (i-αppli call set)>

Even when set to "No", some i-αppli start.

<Software setting (Power saver setting)>

- When "After closed" is set to "ON", i-appli is paused when the FOMA terminal is closed. You may miss timely information.
- When "Timer" is set to "ON", i-αppli is paused according to the "Backlight" setting under "Settings/NW Service" if no operations/ communications occur while i-αppli is active. You may miss timely information.

<Software info>

- The displayed i-αppli name cannot be changed.
- On the "Software list" screen (p.267) or "IC card content" screen (p.285), select partiallydownloaded i-αppli () or i-αppli only with management information () to download the remaining data.

NOTE

<Move to microSD>

- When i-αppli in the FOMA terminal (Phone) is moved to a microSD card, the i-αppli data is also moved to the microSD card.
- Mail-linked i-αppli folder in the FOMA terminal is not deleted even if the mail-linked i-αppli is moved to a microSD card.
- Use "Software info" (p.268) to check whether the i-αppli can be saved to a microSD card.


<Delete>

- When deleting mail-linked i-αρpli, a message appears asking whether to delete the corresponding mail-linked i-αppli folder. Select "NO" to delete only i-αppli, and "YES" to delete the folder at the same time. However, even when "YES" is selected, you cannot delete the mail-linked i-αppli folder if it is being used, if it is locked, or if it contains protected mail.
- Some Osaifu-Keitai i-αppli may require you to erase the corresponding IC card data before you delete the i-αppli. When selecting "Delete this" for the i-αppli, follow the on-screen instructions to activate i-αppli and erase the IC card data, then delete the i-αppli. For "Delete selected" or "Delete all", i-αppli cannot be deleted. Erase the data before you delete the i-αppli.
- Some Osaifu-Keitai i-αppli cannot be deleted.
- When 2in1 is in B mode, some i-αppli cannot be deleted.
- "iD appli" cannot be deleted.

Adjusting i-αppli volume <i-αppli vol.>

Adjust i-αppli volume.






- You can set the volume depending on the i-αppli.
 However, if "i-αppli vol." is set to "Silent", sound is not played regardless of the volume setting of the i-αppli.
- i-αppli volume while in manner mode follows the manner mode setting.

Preferentially playing i-appli sounds Sound setting

Select which to play preferentially, i- α ppli sounds or Music Player sounds.





■ To give priority to Music Player sounds
► Select "Multimedia preferred"

Checking the security error history

When i-αppli or i-αppli DX attempts to perform a disallowed function, a security error occurs, and the details are recorded in the security error history.




You can copy/delete security error information using ch (FUNC).

Activating i-appli from active i-appli

Activate i-αppli from the active i-αppli. Download i-αppli, that can specify and activate another i-αppli, and you can activate the specified one without having to return to the Software list screen.

- Specify i-αppli to activate another one if not specified.
- If the specified i-αppli is not stored in the FOMA terminal, you must download the i-αppli beforehand.



Pre-installed i-αppli

20 i-αppli are stored at the time of purchase.

 Note that looking at the display for extended periods of time may cause eye strain.

ルミネス (LUMINES Live!)

Easy rules for dropping blocks, and a new puzzle game synchronized to music & play. Enjoy free distributed stages!



いっしょにデコ (Deco Together)

This is i-αppli-touch (p.268) compatible i-αppli that enables you to put a stamp on a photo taken together with your friend or draw lines/text and make decorations by simply bringing the (Δ) marks close to each other.

- Decorated images can be saved to a folder under My picture.
- For details, see "ヘルプ" (Help).



* Screens are for illustrative purposes only, and may differ from actual ones

i アバターメーカー (i-avatar maker)

Main features of i-avatar maker

■ Making avatars

The various parts provided with i-avatar maker can be used to make an avatar easily. You can also look at a photo taken with the camera or an image stored in Data Box while you make an avatar, or make an avatar based on one of the

provided sample avatars. (In

Japanese only) Using avatars

An avatar you have made can be converted for use as material for Deco-mail, Decomail pictograms, or Decome-Anime, or for use as a Machichara compatible with i-concier.



©2009 Acrodea, Inc./
©eitarosoft

* Screens are for illustrative purposes only, and may differ from actual ones

Registering an avatar you have made on an i-avatar site allows you to dress up the avatar with various clothing items, and show it off to everyone in a contest or on a compatible site.

- When you convert an avatar to a Decome-Anime or Machi-chara or register an avatar on an i-avatar site, packet communications charges apply.
- Packet communications charges apply to register an avatar on an i-avatar site.
- Dressing up an avatar on a site may sometimes require items to be purchased.
- i-avatar is a trademark of D2 Communications Inc.
- Avatar Maker is a trademark of Acrodea, Inc.

モバイルGoogleマップ (Mobile Google Map)

Open a map and easily search for local information, shop information and user-created content. You can also use aerial imagery or street view. In addition, you can get directions to a destination and be guided there.

Map screen



©2009 Google - Map data ©2009 ZENRIN

☐ : Open the menu

Search (Search for local shops, services and places, then display them on the map)

Move the cursor

 Context menu (Address, To here, From here, Street View, Save to My Maps, Search nearby)

1 : Zoom out

2 : Toggle Map/Satellite

3 : Zoom in

O: Display the current location

* : Save to My Maps/View My Maps

- When using this i-αppli for the first time, it is necessary to agree to the terms of use.
- Packet communications charges will apply. A Pakehodai, Pake-hodai full or Pake-hodai double subscription is recommended.
- For details, see "ヘルプ" (Help).

日英版しゃべって翻訳 for N (J-E Shabette Honyaku for N)

This i- α ppli provides a system that translates spoken utterances used mainly for travel in a source language to those in a target language (Japanese, English).

All services are available free of charge*1 for 60 days. To use all services thereafter, My Menu registration*2 is required.

- *1 : Packet communications charges will apply.
- *2: My Menu registration via "しゃべって翻訳" (Shabette Honyaku) site provided by ATR-Trek Co., Ltd. is required.

(Access: **1**▶ "メニューリスト" (Menu List)▶ "辞書/学習/便利ツール" (Dictionary/Learning/Tools)▶ "辞書/翻訳" (Dictionary/Translation)▶ "しゃべって翻訳" (Shabette Honyaku))

● Software list screen (p.267) ● "日英 シャベッテ翻訳_N" (J-E Shabette Honyaku_N)

■ To exit

▶回 (終了) (Exit)▶

"はい" (Yes)



② "日→英 翻訳" (Translate J to E) or "英→日 翻訳" (Translate E to J)

Follow the on-screen instructions and speak into the microphone, then translated phrases appear.

- To view detailed operation instructions ▶ "メニュー" (Menu) ▶ "チュートリアル" (Tutorial)
- To display in English

▶ (En/英)

Gガイド番組表リモコン (G-GUIDE EPG Remote Control)

The G-GUIDE EPG Remote Control is an i- α ppli that combines digital terrestrial and analog and BS digital TV program listings with audiovisual device remote control functions. Monthly charges do not apply. It allows easy access to details of programs that you want to see, and you can check the content, start/end time, etc. whenever and wherever you are. You can also activate 1Seg from the program list. You can also start the program list from 1Seq.

It is possible to set your digital video recorder to record programs while away from home by giving instructions via the Internet. (You need a hard disk recorder that is compatible with online timer recording. To use this service, you need to configure the initial settings.)

You can acquire details on TV programs as well as search for program information by genre or input text. You can also operate your TV set, VCR, or DVD player via remote control (some models do not support this function).

- To use this service, you will need to activate the G-GUIDE EPG Remote Control, configure the initial settings, and agree to the terms of use.
- Packet communications charges will apply.
- When using overseas, set the main time to the Japan Standard Time.

 For details on the G-GUIDE EPG Remote Control, refer to "Mobile Phone User's Guide [i-mode] FOMA version".



* Screens are for illustrative purposes only, and may differ from actual ones. Local channels appear.

■ Booking program

Select a program from the program guide, then you can book the program.

Booking a program

Start this i-αppli, select a program and "予約実行" (Book) in the "視聴予約" (Book program) menu, then the booking scheduler activates. Follow the on-screen instructions.

■ Timer recording

Select a program from the program guide, then you can set timer recording.

● Timer recording
Start this i-αppli, select a program and "予約実行"
(Book) in the "#ワンセグ録画予約" (1Seg Timer recording) menu, then the booking scheduler activates. Follow the on-screen instructions.

(* Alternatively, start this i-αppli, select a program and press #)

Online timer recording

If you own a hard disk recorder that is compatible with online timer recording, it is possible to set your digital video recorder to record programs while away from home by giving instructions via the Internet. To use online timer recording, you need to configure the initial settings.

- Initial settings
 - Configure the Internet connection setting on the DVD recorder (refer to the manual that came with the DVD recorder).
 - ② Select "リモート録画予約" (Online timer recording), and the instructions appear. Follow the instructions to configure initial settings.
- Timer recording

After the initial settings are complete, specify a program and select "リモート録画予約" (Online timer recording) from the menu. You can connect to the DVD player set with this i- α ppli and set the timer recording via the Internet.

- * If timer recording is already set for the time, a message appears.
- Packet communications charges will apply.

NOTE

 DOCOMO is not responsible for any FOMA terminal data damage the subscriber may incur.

ID 設定アプリ (iD appli)

"iD" is convenient e-money that uses a credit system. You can shop easier and faster by simply waving an Osaifu-Keitai or an iDenabled credit card with credit card information. You can register up to 2 credit cards on an Osaifu-Keitai. This allows you to use your credit cards appropriately for give-aways, coupons, etc. Depending



Screens are for illustrative purposes only, and may differ from actual ones.

on the credit card issuer, you can withdraw cash.

- If using iD with an Osaifu-Keitai, you will need to apply to a credit card issuer compatible with iD, as well as make configurations with iD appli and credit card i-αppli. Depending on the card, you will need to make configurations on the iD appli. Then you need to make the configurations for credit card i-αppli.
- Expenses (annual fees etc.) for using iDcompatible services differ by the credit card issuer.
- iD appli cannot be deleted. To reset the IC owner, perform "設定メニュー" (Settings menu) "iDアプリ初期化" (Reset iD appli) beforehand.
- For more information on iD, see the iD i-mode site.



DCMXクレジットアプリ (DCMX credit appli)

DCMX is an iD-compatible mobile credit service provided by NTT DOCOMO. DCMX mini will enable the use of up to \10,000. DCMX and DCMX GOLD let you purchase more than you can with DCMX mini and earn DOCOMO Points.

With DCMX mini, a quick and simple sign-up procedure will enable the use of mobile credit service immediately.



Screens are for illustrative purposes only, and may differ from actual ones

Function

Application/Screening*1



Set card information



Use

No complicated charging! Wave your mobile phone over a reader in a store, and enjoy shopping without your signature*2.

Check

Check the bill and balance*3 of this month with the application!

Change

Use this application for card update or model change!

- *1 : Applicants must submit to a screening process to sign up for DCMX mini. To sign up for other than DCMX mini, the i-mode application page will appear.
- *2 : The PIN number entry may be required.
- *3: Only available with DCMX mini.
- For more information on DCMX, see the DCMX i-mode site.
 - i-mode site (Japanese):

 **DCMX iD"



NOTE

- "size" is displayed on the Software list screen until the card information setting is complete.
- When you activate this i-αppli for the first time, agree with "ご利用上の注意" (Notes on use).
- Packet communications charges apply to configure various settings and perform procedures.

Notes on use

 DOCOMO is not responsible for any IC card data damage the subscriber may incur.

FOMA通信環境確認アプリ (FOMA Communications Environment Confirmation Appli)

FOMA Communications Environment Confirmation Appli is i- α ppli that checks to see if you are in the FOMA HIGH-SPEED area.

● To use the FOMA Communications Environment Confirmation Appli, agree with "ご利用上の注意" (Notes on use).



* Screens are for illustrative purposes only, and may differ from actual ones.

NOTE

- The actual data rate may differ depending on the communications environment (weather, signal quality and network congestion) even in the same location and time.
- When you use another function while this i-αppli is active, the result may not appear properly.

モバイルSuica登録用 i アプリ (Mobile Suica Setup i-αppli)

Mobile Suica Setup i- α ppli is an i- α ppli provided by NTT DOCOMO for configuring the initial settings necessary to begin using the Osaifu-Keitai compatible service Mobile Suica provided by JR East Japan. After you configure the initial settings with this application, follow the instructions on the screen to



* Screens are for illustrative purposes only, and may differ from actual ones.

download the Mobile Suica application from the JR East Japan website, and register to become a member. (Japanese)

- The first time you use this application, you need to agree to ご注意事項(必読)(Notes [must be read]).
- Packet communications charges will apply.
- This application can be deleted after you finish configuring the initial settings, but the set area within the contactless IC card remains in an occupied state. To use the corresponding area for another service, all of the data within the IC card needs to be initialized (hereinafter referred to as a full format).
- You need to take your handset to a docomo Shop to have a full format performed.

- Performing a full format will delete all of the data within the IC card.
- To use the Mobile Suica service again after a full format has been performed, the initial settings need to be configured again with this i-αppli.
- For information related to Mobile Suica, please see the i-mode site.
 - i-mode site (Japanese):
 - **i** ▶"メニューリスト" (Menu List)▶"おサイフ ケータイ" (Osaifu-Keitai)▶"モバイル Suica" (Mobile Suica)
- * "Mobile Suica" is a registered trademark of East Japan Railway Company.

i アプリバンキング (i-αppli Banking)

i-αppli Banking allows you to access bank account information through easy operations, providing the convenience of mobile banking such as checking balances and account activity statements, as well as making payments and money transfers. Activate i-αppli Banking and enter the password. You can choose up to two financial institutions. You can also pay bills and tax payment slips by Pay-easy.

- To use the mobile banking service, you must have signed up for mobile banking with a financial institution that handles this service.
- Packet communications charges will apply.
- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- For information on i-αppli Banking, see the i-mode site.



* Screens are for illustrative purposes only, and may differ from actual ones.



Widget Appli support

You can activate i-αppli Banking by simply entering your password on i-αppli Banking Widget, and make better use of financial institutions and options.



マクドナルド トクするアプリ (McDonald's TOKUSURU KEITAI application)

This i-αppli allows you to be among the first to check out McDonald's new products and other recommended information. You can download "かざすクーポン" (Contactless Coupon), an e-coupon that can be used in McDonald's.

To use "かざすクーポン", first register to become a member of "トクするケータイサイト"



* Screens are for illustrative purposes only, and may differ from actual ones.

(TOKUSURU KEITAI website), select and set the desired coupon from the application, and then wave your handset over a reader/writer placed in a McDonald's restaurant

- For information related to "マクドナルドトクする アプリ", visit the McDonald's official site "トクする ケータイサイト". (Japanese)
 - i-mode site (Japanese):
 i→"メニューリスト" (Menu List)→"グルメ/レシピ" (Gourmet/Recipe)→"マクドナルド≡トク
- する" (McDonald's beneficial deal) ●"かざすクーポン" cannot be used in some restaurants
- In areas where "かざすクーポン" cannot be used, use "見せるクーポン" (Show Coupon).
- おすすめ情報 (Recommended news) can also be viewed by people who are not members of "トクするケータイサイト".
- The functions and service content of "マクドナル ドトクするアプリ" are subject to change without notice.
- Packet communications charges will apply.

<How to use かざすクーポン>

Start the application.

Select the type and number of coupons.

● OK) to complete the setting

Press "決定" (OK) to complete the settings applying the coupons.

Wave your handset over the reader/writer to place an order.

Widget Appli support



When McDonald's おすすめ情報 (Recommended news) is updated. the McDonald's sign rotates in Widget Appli to notify you of the changes.

Select the sign to display the recommended information.

Press "もっと詳しく" (More) button in the recommended news to display more detailed information.

地図アプリ (Map Application)

See p.294 for "地図アプリ" (Map Application).

This i-αppli supports Motion Tracking.

楽オク☆アプリ (Rakuoku i-αppli)

This is convenient i-αppli that makes it easy to post items for sale on the Rakuten Auction site. It is easy for beginners too, with Advice Display and Trial Posting that allows you to simulate the procedure of posting an item for sale through sending it off to the buyer. The Easy Input function to compose the introduction easily or other useful functions to take/ edit pictures and save history allow you to post items within less time than from a site

- When using this i-αppli for the first time, it is necessary to agree to the terms of use.
- Packet communications charges will apply.
- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- You need to sign up for Rakuten from actual ones. membership and My menu to post items for sale on the Rakuten Auction site.
- For details, see the i-mode site.
 - i-mode site (Japanese): ■►"オークション" (Auction)





製成キシベーン情報!

MANAGE AND STREET

HARRIES.

Screens are for illustrative purposes

only, and may differ

Widget Appli support



You can immediately check the auction status of products recommended from Rakuoku or products you are after.

Start! iウィジェット (Start! i-Widget)

This Widget Appli shows you a movie on how to use i-Widget. You can even connect to i-mode and access sites from which new Widget Appli can be downloaded.

 Packet communications charges apply to access the download site through the ダウ ンロード (Download) button.



Screens are for illustrative purposes only, and may differ from actual ones.

お天気予報ウィジェットforN (Weather Report Widget for N [Widget Appli])

Use お天気予報 (Weather Report) Widget to check rain radar and today's and tomorrow's weather anytime!



駅探量乗換案内 (Ekitan Transfer Guide [Widget Appli])

This is a useful Ekitan i-Widget: give the names of train stations you are going to and from, and it tells you the best route to get there.





* Screens are for illustrative purposes only, and may differ from actual ones

i Wウォッチ (iW Watch [Widget Appli])

This Widget Appli lets you enjoy displaying watches or battery level graphically as i-Widgets. You can change their design or color.



* Screens are for illustrative purposes only, and may differ from actual ones.

株価アプリ (Stock Prices Application [Widget Appli])

This Widget Appli lets you simply check stock price information via i-Widget.

You can view stock price information for three indices - Nikkei 225, TOPIX, and Hercules. The current value of each index is displayed along with the daily change.

Chart information can be switched between intraday/daily/weekly/monthly. (In Japanese only)

- When using this i-αppli for the first time, it is necessary to agree to the terms of use.
- Packet communications charges will apply.
- Current index value information is delayed by approximately 20 minutes.
- Information in this application is not intended to be used for trading stocks, etc., or to support in such trading.

Although all efforts are made to ensure that the information contained in this application is accurate, such information is not guaranteed. DOCOMO and content providers bear no responsibility whatsoever for any damages incurred as a result of this information.



* Screens are for illustrative purposes only, and may differ from actual ones.

Googleモバイル (Google Mobile [Widget Appli])

Google Mobile is a Widget Appli that enables easy use of a mobile web search function. This is convenient because it enables you to enter the keywords you entered in the past, and words that are becoming hot trends.



Screens are for illustrative purposes only, and may differ from actual ones.

You can also easily access

useful Google services such as train transfer and mail service (Gmail). (In Japanese only)

Packet communications charges will apply.

Starting i-appli Automatically

Set the i- α ppli to activate automatically at the specified date and time or interval.

Setting automatic start <Auto-start set>

• Up to 3 automatic start times can be set.




Setting the activation date/time

<Auto-start time (i-appli)>

Set the date and time to activate i-αppli automatically.

- i-appli does not start automatically in the following cases:
 - . The power is off
 - Another function is active
 - · During calls
 - · During communications
 - Software Update/Alarm/Schedule/To Do list/ 1Seg Booking program/1Seg Timer recording time is the same as auto-start time
 - The activation time is set within 10 minutes after the same i-αppli is automatically activated last time
 - · "Keypad lock", "Dial lock", etc. is active

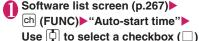

- To enable the time interval set for i-αppli
- Select the "Time interval set" checkbox
- To set the activation date and time
- Select the "Start time set" checkbox

(Finish)▶Set the activation

- To set the activation date and time Select date and time Enter start date and time
- To set the auto-start repetition
- ► Select a repeat setting item ► "Daily" or "Weekly"
- If you select "Weekly", use 🗓 to select a checkbox (\square) and press \square (Finish).



Checking whether i-appli activated automatically

Check whether the i-appli was automatically activated at the specified time.

• You can also check for i-αppli that failed to activate from the IC card



The screen shows the i-αppli name, automatic activation time and its result. "Start0" indicates that it was activated automatically. "StartX" indicates that it was not activated automatically and "Start-" indicates that the automatic activation time is not reached

NOTE


 If the i-αppli was not activated automatically, the " Kot run soft) desktop icon appears on the standby screen. Select the icon to view the Autostart info screen. Select i-αppli to activate. Desktop icons that give notice → p.116

Using i-αppli Call

i-αppli call is a function that allows you to use an i-αppli to call a friend that is in a distant location and then play a network game or share information. If you answer an incoming i- α ppli call, the corresponding i- α ppli starts.

Sending an invitation

Send an invitation to a party stored in the phonebook.

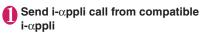

The procedure varies depending on the application. See Help of i-αppli.



When you receive

When an i-αppli call is received, the ring tone, illumination and vibrator work, and a message appears asking whether to answer.



Select "Accept" to answer

The corresponding i-αppli starts.

- To reject
- ▶"Reject"
- To put the call on hold
- ▶"Hold"

NOTE

- Depending on the i-αppli call, the i-αppli may start without a message asking whether to answer.
- If you answer a received i-αppli call, packet communications charges may apply.
- An i-αppli call may be sent directly from a content provider.
- Under "Software setting" "i-αppli call set" (p.268), you can set whether to allow i-αppli activation when receiving i-αppli call.
- You can reject all i-αppli calls. For details, see "Mobile Phone User's Guide [i-mode] FOMA version".
- The ring tone volume is determined by "Mail" under "Ring volume", and the pattern cannot be changed. "Set pattern" under "Illumination" is always "Color 2" (pale blue), and "Vibrator" is always "Pattern 1".

Checking history

<i-αppli call logs>

Information such as i-appli caller, period of validity. and answer status is recorded as i-αppli call log.

• Up to 30 entries are stored in the history. If the maximum number of entries is exceeded, older entries except one being called are overwritten. (If only the entry being called exists, it is overwritten.)



■ To delete a log

Ch (FUNC) ► "Delete this", "Delete selected" or "Delete all"



Displayed log status

Icon	Description
Invited	Being called (unanswered/hold). Can be answered within the period of validity
Answer	Accepted
Rejection	Rejected
Absence	Expired without answer

Answering i-αppli call being called

i-αppli call logs screen Select a call in progress "Accept"

Setting i-appli Call

<i-αppli call DL set>

Set whether to download i-αppli automatically when i-αppli call arrives and the corresponding i-αppli is not installed

MENU "Settings/NW Service" "i-αppli settings"▶"i-αppli call DL set" "Reject" or "Not reject"

Starting i-appli from Sites or Mail <i-αppli To function>

You can select an item to start i-appli from a function other than i-αppli, such as a site or mail.

Configuring the setting to start i-αppli using i-αppli To <Set i-appli To>

Configure the setting for each i-αppli to start the i-αppli To function.

Software list screen (p.267) ch (FUNC)▶"Set i-αppli To"

🚺 Use 🗓 to select a checkbox (🗌)

Functions that can start i-appli using i-αppli To

i-mode site

If the i-αppli activation specification is displayed on an i-mode site, the i-αppli can be started from the site.

■ Mail

If the i-αppli activation specification is pasted into received i-mode mail, the i-αppli can be started from the mail

■Infrared data exchange function

When i-αppli activation signal is received during infrared data exchange, i-αppli starts.

■ Bar code reader

When data scanned with the Bar code reader contains an i-αppli activation specification, the i-αppli can be started from the Bar code reader.

■IC card function

Start i- α ppli by waving the Ω mark on the FOMA terminal over a reader.

■ ToruCa

If the i-αppli activation specification is pasted into downloaded ToruCa, the i-appli can be started from the mail.

■ Data broadcast

When a 1Seg data broadcast site contains an i-αppli activation specification, the i-αppli can be started from the site.

NOTE

<i-mode site>

 Some i-αppli start immediately from i-mode sites. (Some i-αppli cannot be saved to the FOMA terminal.)

<Mail>

 The i-αppli activation specification cannot be quoted even when you reply with a quote or forward i-mode mail.


<IC card function>

- i-αppli is not activated in the following cases:
 - · Another function is active
 - · During calls
 - The i-αppli to activate cannot be found

Setting i-appli Stand-by Display <Set i-αppli stand-by>

i-αppli can be as standby screens.

Some i-αppli cannot be set as standby screens.

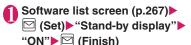


- Only a single i-αppli can be set as standby screens.
- Communication i-αppli set as standby screens may not work properly depending on the signal quality, etc.
- If "Stand-by net" under "Software setting" is set to "OFF", you may miss timely information.

NOTE

- If "Dial lock" is set, "Original lock" is set on i-αppli or 2in1 is set to B mode or Dual mode while the i-αppli standby screen is displayed, the i-αppli standby screen ends. If "Dial lock" or "Original lock" is released or 2in1 is set to A mode, the i-αppli standby screen reappears.
- Even if i-αppli is set as the standby screen, the screen set in "Stand-by display" under "Display setting" appears when you switch tasks to display the standby screen.

Activating the i-appli standby screen

Activate i- α ppli set as the i- α ppli standby screen.



The i- α ppli is activated, and " β " or " β "

Releasing the i-appli standby screen Release i-appli stand-by>

- Releasing while i-αppli is active
- While i-αppli is active

 ©LR (1 second or longer) or

 Select any item:

Cancel······Return to the active i-αppli standby screen.

End······Return to the i-αppli standby screen.

Terminate······Release the i-αppli standby screen settings.

- Releasing the active i-αppli standby screen
- "Settings/NW Service" "i-αppli settings" • "End stand-by display"
- "Terminate"
 "YES"
 - To cancel releasing
 - ▶"NO"
 - To end
 - ▶"Fnd"

The Stand-by i-αppli reboots.

Checking the i- α ppli standby screen exit information

If an error occurred and the i- α ppli standby screen was released, the i- α ppli name, time and reason are recorded, and you can check the details.



You can copy/delete End stand-by info using [ch] (FUNC).

NOTE

 No information will be recorded if the i-αppli standby screen ends successfully.

Managing i-αppli

Upgrading i- α ppli

<Upgrade>

You can upgrade downloaded i- α ppli when the new version is available on the site.

Software list screen (p.267)
ch (FUNC) "Upgrade" "YES"

NOTE

- You cannot upgrade mail-linked i-αppli that rename mail folders in the following cases:
 - Mail box lock is set
 - · Folder lock is set
 - Folder for mail-linked i-αppli to be upgraded is used

Displaying i-αppli in a microSD card «microSD software»

Display a list of i-αppli stored in a microSD card.



The "microSD software" screen appears. Function menu → p.279

FUNC microSD software screen

Software info·····Display information on i-αppli stored in a microSD card.

Move to phone·····Move a single i-αppli and i-αppli data from a microSD card to the FOMA terminal.

Memory info

Delete ·····Select Delete this/Delete selected/Delete all.

NOTE

- i-αppli cannot be activated from the microSD software list.
- i-αppli stored in a microSD card may not be available on another FOMA terminal.
- When i-αppli in a microSD card is moved to the FOMA terminal (Phone), the i-αppli data is also moved to the FOMA terminal (Phone).
- To check whether i-αppli can be moved from a microSD card to the FOMA terminal (Phone), see "Software info" (p.268).

Displaying i-appli data in a microSD card <microSD data>

Display a folder-name list of i- α ppli data (microSD) stored in a microSD card.



The "microSD data" list screen appears. Function menu → p.280

FUNC microSD data list screen

Display info·····Display the i-αppli creator, available software and microSD card availability.

Delete this, Delete selected, Delete all

NOTE

- i-αppli data saved from i-αppli to a microSD card may not be available on another FOMA terminal.
- To check whether the i-αppli data is saved from i-αppli to a microSD card, see "Software info" (p.268).

Using barcodes with i-αppli

- Select an item for activating Bar code reader while i-αppli is active The Camera (Bar code reader) starts.
- Position the barcode (JAN code, QR code, CODE128) inside the recognition field

The barcode (JAN code, QR code, CODE128) is scanned.

NOTE

To scan CODE128, download compatible i-αppli.
 The scanned data are used and saved with the i-αppli.

i-Widget

i-Widget is a convenient function that allows you to use a single i-Widget button () to access frequently used content (Widget Appli) such as a calculator, clock, and stock price information.

You can add Widget Appli by downloading them from sites provided by content providers. You can place up to eight Widget Appli on the i-Widget screen to personalize your handset.

- When you open the i-Widget screen, multiple Widget Appli may establish communications.
- When you download Widget Appli or display the i-Widget screen, packet communications charges apply.
- Packet communications charges apply when the i-Widget screen is opened overseas. Packet communications charges overseas are different from those in Japan.
- For details on i-Widget, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Pre-installed Widget Appli

Name	Description
i アプリバンキング (i-αppli	p.274
Banking)	
マクドナルド トクするアプリ	p.274
(McDonald's TOKUSURU KEITAI	
application)	
地図アプリ (Map Application)	p.294
楽オク☆アプリ (Rakuoku i-αppli)	p.275
Start! iウィジェット (Start!	p.275
i-Widget)	
お天気予報ウィジェットforN	p.275
(Weather Report Widget for N)	
駅探口乗換案内 (Ekitan Transfer	p.275
Guide)	
i Wウォッチ (iW Watch)	p.276
株価アプリ (Stock Prices	p.276
Application)	
Googleモバイル (Google Mobile)	p.276

Using i-Widget

Starting Widget Appli

Display the i-Widget screen/Widget Appli list screen to start Widget Appli.

- Starting from the Software list screen → p.267
- Place often-used Widget Appli on the i-Widget screen.
- Widget Appli is automatically placed on the i-Widget screen if started from the Widget Appli list screen or Software list screen.



On the standby screen

The i-Widget screen or Widget Appli list screen appears (if no Widget Appli is placed on the i-Widget screen).



- * If no Widget Appli is placed on the i-Widget screen, return to the standby screen.
- * Screens are for illustrative purposes only, and may differ from actual ones.
- To return from the i-Widget screen to the standby screen
- ► MENU (Quit i-Widget)



Select a Widget Appli

The Widget Appli starts.

- To view the i-Widget user guide
- ▶"Start! i ウィジェット" (Start! i-Widget)▶"使い方ガイド" (User quide)
- To exit the Widget Appli
- ▶ch (Deactivate)▶"YES"

The Widget Appli is removed from the i-Widget screen.

- To return to the i-Widget screen without removing the application, press (Quit i-Widget).
- To use another function while Widget Appli is active
- ▶ "中断 (MULTI)" (Suspend) Multitask → p.355

Widget Appli status displayed on the i-Widget screen

Icon	Description
OX.	Normal Widget Appli
dε	Widget Appli DX
СM	Widget Appli downloaded from an SSL/TLS page
¢	Widget Appli using communications
i€	Osaifu-Keitai Widget Appli → p.285
2	GPS Widget Appli

■ Widget Appli status displayed on the Widget Appli list screen

Icon	Description
NEW	Widget Appli that were downloaded within the past 48 hours
ACTIVE	Widget Appli placed on the i-Widget screen

NOTE

- You can place up to eight Widget Appli on the i-Widget screen. If you want to place another Widget Appli when there are already eight placed, end one of the Widget Appli that is already running and then place the application you want to add.
- If the i-Widget screen or Widget Appli list screen is opened and then no operation is performed for approximately three minutes, the standby screen is automatically redisplayed. When Widget Appli is active, the standby screen is not automatically redisplayed.

Changing the layout

Change the Widget Appli layout randomly on the i-Widget screen.



Setting i-Widget

Configure the settings for roaming network connections or sound effect volume for i-Widget start.



i-Widget sound effect······Set sound effect volume for i-Widget start.

i-Widget roaming set.·····Set whether to connect to the i-Widget network during international roaming.

NOTE

<i-Widget sound effect>

- i-Widget sound effect volume while in manner mode follows the "Manner mode set" setting.
- <i-Widget roaming set.>
- When you attempt to open the i-Widget screen for the first time after you leave Japan, the setting confirmation screen appears.

When CLP is pressed while the message is displayed, the setting applies as "No" and the i-Widget activates.

Setting Widget Appli

<Software setting>

Software list screen (p.267)►

(Set)►Set the respective items

Software setting → p.268

Downloading Widget Appli

Download Widget Appli from sites and start them on the FOMA terminal.

 Up to 200 downloaded Widget Appli and i-αppli altogether can be stored. The maximum number of applications that can be stored varies depending on the data size.

Select a Widget Appli

The message "Download completed" appears.

- To cancel data download in progress

 During download

 (Cancel) or CLR
- YES"

The downloaded Widget Appli starts.

- To not start Widget Appli
- ▶"NO"

Osaifu-Keitai/ToruCa

Osaifu-Keitai	284
iC Transfer Service	284
Starting Osaifu-Keitai i-αppli	285
Locking IC Card Function	ting 286
Setting the Illumination and Vibrator for IC Card	set 286
Checking Owner Information of IC Card	ner 287
ToruCa	Ca 287
Receiving ToruCa	Ca 288
Displaying ToruCa	wer 288
Setting ToruCa	

Osaifu-Keitai

Osaifu-Keitai is equipped with IC card and you can make payments simply by waving the FOMA terminal over a reader in a shop.

You can also use the i-mode network to add e-money credit, check balances and usage history. Enough security *1 is provided so the Osaifu-Keitai can be used without worries.

For details on Osaifu-Keitai, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

- To use the Osaifu-Keitai services, you need to download Osaifu-Keitai i-αppli from Osaifu-Keitai site^{*2}, and make settings.
- *1 : Omakase Lock and IC card lock are available.

 →pp.126, 286
- *2: (■) "メニューリスト" (Menu List) " "おサイフケータイ" (Osaifu-Keitai) (Japanese)
- Data (including e-money and points) stored in the IC card may happen to be erased or altered due to the malfunction of the FOMA terminal. (As a general rule, data should be deleted by the owner itself before undergoing repairs because the FOMA terminal cannot be kept remaining data.) For supports such as reissue or restore of data or temporary keeping or transferring data, contact the Osaifu-Keitai service provider except for transferring data using iC Transfer Service. For important data, please be sure to use any services supporting the backup service.
- Please be aware that DOCOMO is not responsible for disappearance and alteration of the IC card data, or any monetary injuries about Osaifu-Keitai services under any circumstance such as malfunction or changing your model.
- If your FOMA terminal is stolen or lost, contact the Osaifu-Keitai service provider immediately and seek for advice.

iC Transfer Service

iC Transfer Service *1 enables transfer of data *2 stored on the IC card all at once to Osaifu-Keitai *3 when changing models or when the phone is repaired. Once the IC card data are transferred, you can start using the Osaifu-Keitai services simply by downloading the Osaifu-Keitai i-αppli *4. iC Transfer Service is available at a docomo Shop or service counter.

For details on iC Transfer Service, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

- *1 : Both FOMA terminals from which and to which data will be transferred must be compatible with the iC Transfer Service. To use this service, visit your nearest docomo Shop.
- *2: Some Osaifu-Keitai services are not compatible with the iC Transfer Service. Those that can be transferred are IC card data of Osaifu-Keitai services that are compatible with iC Transfer Service.
- *3: This service transfers data rather than copying it, so IC card data will not be left in the FOMA terminal from which data is transferred. iC Transfer Service cannot be used in some cases, so please take necessary measures such as using the backup service of applicable Osaifu-Keitai services.
- *4 : Packet communication charges apply to download i-αppli or configure settings.

Starting Osaifu-Keitai i-appli

Start the Osaifu-Keitai i-appli from the Software list screen. The useful Osaifu-Keitai i-αppli enables e-money charge, balance inquires and usage history confirmation on the mobile phone by reading or writing data in the IC card.

- Be careful not to let others know your PIN and service passwords.
- Read/Write operations between i-αppli and the IC card are interrupted in the following cases. In this case, the read/written data is discarded.

Operations to perform after you finish talking vary depending on the service.

- A call arrives while i-αppli is active
- . The battery runs out
- FOMA card information and the IC card are linked when the Osaifu-Keitai compatible i-αppli is first downloaded to or launched. Hereafter, the IC card function is not available if the appropriate FOMA card (UIM) is not inserted.

If replacing with other FOMA card (UIM), the iC card function is not available unless you delete the Osaifu-Keitai i-appli (Reset IC owner) once. →p.287





Function menu⇒p.268



Select Osaifu-Keitai i-appli

Alternatively, use the "Software list" screen (p.267).


Using Osaifu-Keitai

By holding the amark printed on the FOMA terminal over the reader/writer unit, you can make payments with e-money or utilize as tickets. This function can be used without starting i-αppli.

 Osaifu-Keitai i-αppli cannot activate while you are talking on the phone, but you can hold up the mark to the reader/writer and use the Osaifu-Keitai function.

Wave the 🔊 mark over the reader/writer unit to use the service vou want

When using Osaifu-Keitai, notification is performed by Incoming call lamp and Vibrator according to the setting of "IC card notice set".

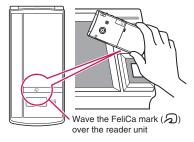

- Even when the power is turned off or the battery runs out, the IC card function is available by waving up the amark up to the reader/writer. (Osaifu-Keitai i-αppli cannot be activated.) The function may not be available, however, if you do not use the battery pack for a long time or leave the battery uncharged after the battery alert activates. Charge the battery.
- When waving the mark to the reader/writer. do not expose the FOMA terminal to strong shocks.
- If the A mark is not recognized, try waving the phone in different directions.
- The Osaifu-Keitai i-αppli may be activated when you wave the mark over the reader/writer.

Locking IC Card Function

<IC card lock setting>

You can lock the IC card function to prevent others from using it without your permission.

 IC card lock is not be unlocked even if turning off power.



IC card lock is set and " appears."

- appears.

 To release the lock
- ►3 (1 second or longer) ►Enter your security code

06.26FRI 12:05

NOTE

- When you remove the battery pack, IC card lock is set automatically. In this case, attaching the battery pack automatically releases IC card lock.
- IC card lock is not released even if the power is turned off because the battery runs out when IC card lock is set.
- Some Osaifu-Keitai i-αppli may not be allowed for downloading, upgrading or uninstalling when IC card lock is set.

Locking the IC card function when the power is turned off <|C lock (power-off)>

You can lock the IC card function to disable the Osaifu-Keitai when the power is turned off.

"Osaifu-Keitai" ► "IC card lock setting" ► Enter your security code ► "IC lock (power-off)" ► Select any item:

Maintain Maintain the same IC card lock setting as before turning off the power.

IC card lock ON·····Lock the IC card function regardless of the IC card lock setting.

Releasing IC card lock using face authentication

If an image is registered in "Face authentication" and "IC card lock" is selected under "Function to reset", the face authentication is performed to authenticate the user

- If the face authentication fails, enter the image name set in "Face authentication" as the keyword.
- "Using the Face Authentication" → p.136
- On the standby screen

 3 (1 second or longer)
- Prace straight to the camera lens to frame the entire face
 - If the face
 authentication fails
 ►Enter the image
 name►"OK"



Authenticating

Enter your security code

IC card lock is released and " !!! " disappears.

Setting the Illumination and Vibrator for IC Card

<IC card notice set>

Set whether to notify by Illumination or Vibrator (vibration) when using the IC card.

● "Osaifu-Keitai" > "Setting" > "IC card notice set" > Select any item:

Illumination······Set illumination to turn on when using the IC card.

Vibrator Set Vibrator to vibrate when using the IC card.

Checking Owner Information of IC Card <Check IC owner>

Check if the installed IC card links to the FOMA card (UIM) on the identical Osaifu-Keitai. If replacing with other FOMA card (UIM), delete (or initialize) the Osaifu-Keitai i-αppli and use the iC card function (Default Osaifu-Keitai i-αppli cannot be deleted).



When other FOMA card (UIM) is installed, select "Reset IC owner" to change the IC owner (reset Osaifu-Keitai i-appli).

■ To change the IC owner

► "Change IC owner" ► "Reset IC owner" ► "YES" ► Enter your security code ► "YES"

NOTE

 You may not be able to delete some Osaifu-Keitai i-αppli.

<ToruCa>

ToruCa

ToruCa is an electronic card that can be captured through "Osaifu-Keitai", and you can conveniently utilize it with application of flyers, restaurant cards, coupons, etc.

ToruCa can be obtained from the reader/writer or i-mode sites, etc., and you can readily trade items through mail, infrared data exchange and a microSD card

- The captured ToruCa is stored in "ToruCa" of the "Osaifu-Keitai" menu.
- For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

ToruCa usage flow



Wave the \bigcap mark of Osaifu-Keitai over the reader unit to acquire ToruCa






ToruCa



Select ToruCa from the list. Pressing the "詳細" (Detail) button displays the detailed information.

ToruCa (detail)

How to obtain ToruCa

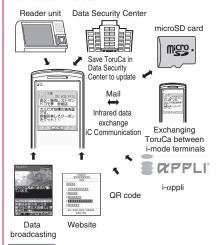

NOTE

 Packet communications charges will apply to download ToruCa or ToruCa (details) from i-mode sites.

NOTE

 ToruCa may not be updated or redistributed through mail, infrared data exchange, etc. depending on the settings of an information provider (IP).

Receiving ToruCa < Receive ToruCa>

Captrue ToruCa from the reader/writer unit.

- You can store up to 200 ToruCa cards to the ToruCa folder (The number of ToruCa that can be stored may be less depending on the file size). Up to 1 KB per ToruCa can be stored. Up to 100 KB per ToruCa (details) can be stored.
 - *: Up to 20 ToruCa can be additionally stored in the Used ToruCa folder.

Hold the mark of the FOMA terminal over a reader/writer

Vibrator and Incoming call lamp notifies you of the capture success of ToruCa according to "IC card notice set", the ToruCa tone sounds, and the captured ToruCa or ToruCa (details) appears for about 15 seconds.

Holding over a reader/writer → p.285

NOTE

- The captured ToruCa does not appear when other function is active.
- You cannot change the ToruCa tone. The tone sounds at the volume set in "Phone" under "Ring volume". When set to "Step", the tone sounds at the volume of "Level 4".
- ToruCa cannot be captured from a reader/writer unit in IC card lock, Dial lock, Self mode, Omakase Lock.

Displaying ToruCa < ToruCa viewer>






Select a folder▶Select ToruCa

Guide to the ToruCa list screen/ToruCa display screen




Function menu⇒p.289





- (1) Folder title
- ②ToruCa category icon
- ③ToruCa status
 - 🔏 :Unread ToruCa
 - .Bead ToruCa
 - Expired ToruCa
- (4) Icon showing favorite-registered
- (index)
- ⑥ToruCa title
- ⑦ ToruCa content (the Phone To/AV Phone To, Mail To, Web To or i-αppli To* function)
 - *: Available with ToruCa (details) only
- ® Obtain ToruCa (details)

Adding ToruCa to Favorite



- To display the favorite list
 ▶ i (tist)
- To release ToruCa in Favorite

 Select ToruCa □ (→ Mark)

NOTE

You may not be able to use the Phone To/AV
 Phone To, Mail To, Web To or i-αppli To function
 depending on the ToruCa.

ToruCa folder list screen (p.288)

Add folder Enter a folder name to add a folder. Up to 20 folders can be added on the FOMA terminal.

Edit folder name*1......Edit the folder name of the added folder.

Mark list*2*3.....Display a list of favorite-registered ToruCa.

Search all*2*3.....Select an item (index, title) and enter text to view a list of ToruCa matching the entered text.

Filter all*2*3.....Display only ToruCa that meet the selected criteria.

Display all *2*3.....Release Search all or Filter all and view all the stored ToruCa.

iC trans. all*2*3 → p.341

Send all Ir data*2*3 → p.340

Delete folder*1. No. of ToruCa*3

Connect to Center → p.141

Delete all ····· Delete all the ToruCa stored in the FOMA terminal.

- *1 : Not available for a folder other than user-created folders
- *2: Not available for a folder in the "microSD" folder.
- *3 : Except for data in the "microSD" and "Used ToruCa" folders.

FUNC ToruCa list screen (p.288)

Move *1*2.....Select Move this/Move selected/Move all to move ToruCa to another folder.

Copy*1*2.....Select Copy this/Copy selected/Copy all to copy ToruCa to another folder.

Mark list*1*3.....Display a list of favorite-registered ToruCa.

Mark/Reset*3.....Set/Release ToruCa in Favorite.

Search*1*3.....Select an item (index, title) and enter text to view a list of ToruCa matching the entered text.

Disp all in folder*1*3......Reset the search, sort or filter display to default.

 When "Search all", "Filter all" or "Display all" is performed on the ToruCa folder list screen, this item appears as "Display all".

Sort*1*3.....Sort ToruCa by selected criteria.

Filter*1*3.....Display only ToruCa that meet the selected criteria.

Compose message*2......Compose i-mode mail with ToruCa attached.

iC transmission*3 → p.341

Send Ir data*3 → p.340

Copy to microSD*3 → p.329

Copy to phone*4→p.330

No. of ToruCa*2

ToruCa info*2.....Display the title or expiration date.

Delete*1..... Select Delete this/Delete selected/

- *1 : Not available when " Mark list" is selected on the ToruCa folder screen or ToruCa list screen.
- *2 : Not available in the "Used ToruCa" folder.
- *3 : Not available in the "microSD" and "Used ToruCa" folders.
- *4 : Available only for ToruCa stored on a microSD card.

FUNC ToruCa display screen (p.288)

Move*1.....Select the destination folder to move ToruCa to the folder.

Copy*1.....Select the destination folder to copy
ToruCa to the folder.

Compose message ······ Compose i-mode mail with the movie attached.

iC transmission*2 → p.341

Send Ir data*2→p.340

Copy to microSD*2 → p.329

Copy to phone*3 → p.330

Update*2*4.....Update ToruCa (details) information.

Save image*2*4......Save a ToruCa (details) image. Select "Normal image/Background image".

Add to phonebook*2→p.86

Replay*2*4.....Play the Flash movie or animation of ToruCa (details) from the beginning.

Delete*1

- *1 : Not available when "☆ Mark list" is selected on the ToruCa folder screen or ToruCa list screen.
- *2 : Not available in the "microSD" folder.
- *3 : Available only for ToruCa stored on a microSD card.
- *4 : Available only when ToruCa (details) stored in the FOMA terminal is displayed.

NOTE

 Some ToruCa may not be allowed for copy, mail transmission with attachment, iC transmission, infrared data exchange, copy to microSD card and update.

Setting ToruCa

<ToruCa settings>

● "Osaifu-Keitai" "Setting"
 "ToruCa settings" Select any item:

Receive from IC card·····Set whether to receive (Yes) ToruCa or not (No) when holding over the mark to a reader/writer. When set to "Yes", set whether to check if the captured ToruCa is duplicated with those stored in the FOMA terminal (except for those in the "Used ToruCa" folder and expired ToruCa).

Receive from 1Seg ·····Set whether to obtain (Yes) ToruCa or not (No) from 1Seg data broadcast.

Auto reading setting Set whether to automatically read available ToruCa when holding over the mark to the reader/writer to capture ToruCa. When set to "ON", available ToruCa in the FOMA terminal (except for those in the "Used ToruCa" folder and expired ToruCa) is recognized automatically and moved to the "Used ToruCa" folder.

Scroll······Select 1 line/3 lines/5 lines as the number of scroll lines.

NOTE

<Receive from IC card>

 When the Repetition check is set to "Yes", you cannot capture the same ToruCa. To capture the same ToruCa, set to "No".

<Receive from 1Seq>

You cannot capture the same ToruCa.

<Auto reading setting>

 If you hold ToruCa over the reader/writer when set to "OFF", the auto reading confirmation message may appear or a message may appear indicating that the auto reading is not available. To use ToruCa, select ""Ves" and set this function to "ON".

Map/GPS Function

Using Maps and GPS	292
Reading MapMap	292
Checking Your Location Position location	293
Setting Position Location	293
Using Map/GPS Application	
Providing Location Information on Request Location request	295
Notifying Location InformationLocation notification	297
Displaying History of Checked Location Information Location history	299
Using Location Information on a Site, ToruCa, etc.	300

Using Maps and GPS

- Map/GPS operation continues even if a call or mail arrives
- Under no circumstances shall DOCOMO be held liable for any loss or damage, due to loss of opportunity such as positioning (communicating) result check, resulting from external causes such as failure, malfunction or battery death of the FOMA terminal or blackout.
- The FOMA terminal cannot be used to navigate an aircraft, vehicle, person, etc. Under no circumstances shall DOCOMO be held liable for any loss or damage resulting from use of location information.
- The FOMA terminal cannot be used as an accurate positioning GPS device. Under no circumstances shall DOCOMO be held liable for any loss or damage arising from positioning error.
- Position location, Location request and Location notification are not available under the following conditions:

Function	Inaccessible conditions
Position location	During a videophone call, in Keypad lock, in Dial lock, in Omakase Lock
Location notification	When " 💥 " is displayed, when used overseas, in Self mode, in Keypad lock, in Dial lock, in Omakase Lock, when a FOMA card (UIM) is not inserted
Location request	When " " is displayed, when used overseas, during positioning, in Self mode, when a FOMA card (UIM) is not inserted

NOTE

- You may need to subscribe to i-mode.
- GPS uses radio signals broadcast by satellites. The FOMA terminal cannot or hardly can receive the radio waves under the following conditions:
 - · In or under a building
 - In a tunnel, under the ground or water
 - In a bag or box
 - · Buildings or houses crowded
 - . In or under the thick bushes
 - Near a high-voltage cable
 - In a car or train
 - · Bad weather such as heavy rain or snow
 - Some interference (person, thing, etc.) around the mobile phone
 - With a hand covering the display, control keys, microphone, speaker, etc. of the mobile phone In these cases, the error of the location information may be larger than 300 m.

NOTE

- GPS is operated by the U.S. Department of Defense. Depending on the defense of the United States, the GPS radio waves may be controlled (accuracy deterioration, radio wave interference, etc.).
- GPS satellites are always moving. Even in the same environment, the signal reception is always varying. A large error may occur, or location may not be positioned.
- You cannot use the GPS functions excluding Position location when your FOMA terminal is out of service area (or overseas).

Reading Map

<Map

Start the GPS i-αppli to display a map.

- The GPS i-αppli selected in "Map setting" (p.293) is activated.
- ●"地図アプリ" (Map Application) is the default setting.







Map/GPS menu



For overseas use

To view the map, select whether to access the i-mode site or use i-αppli.

NOTE

- When using the map application or map site overseas, a map may not be provided or displayed properly. Even in this case, packet communications charges apply.
- Obtained location information (latitude and longitude) on the map may not be accurate due to laws of the country/region, etc.

Setting Map/GPS appli

Map/GPS menu screen (p.292)▶
"Map/GPS settings"▶"Map
setting"▶Select any item:

Select Map······Set the i- α ppli to activate when "Map" is selected.

Map activate setting ······ Set whether to obtain location information when "Map" is selected.

- Starting Map/GPS αppli by obtaining location information
- Set "Map activate setting" (p.293) to "After positioning".

Checking Your Location

<Position location>

Position location

Positioning completed

Positioning result

ElMan/GPS Cronli

EPaste to mail

ElAdd to phonebook ElAttach to image

Determine your current location and obtain location information. The obtained location information can be used to view the current location on a map or use Map/GPS α ppli.

- Packet communications charges do not apply for positioning. However, separate packet communications charges apply, e.g. if you open a map from location information.
- Map/GPS menu screen (p.292)▶ "Position location"
 - If a message appears indicating that positioning takes time
 - ▶"YES"
 - To cancel positioning

 ► ☐ (Cancel) or CLR
 - To use location information retrieved during positioning
 - ▶Positioning▶■ (Use)

Accuracy ★★★: Almost accurate (Error: less than 50 m).

Accuracy ★★☆: Relatively accurate (Error: less than 300 m).

Accuracy ★☆☆: Rough (Error: larger than 300 m).

The Accuracy is approximate. The actual positioning may vary depending on the ambient signal status, etc.

■ To retrieve location information

► (Retry)

Location information is retrieved in Quality mode.

Select any item:

Read Map·····Activate GPS i-αppli selected in "Map setting" (p.293). To view the map overseas, select whether to access the i-mode site or use i-αppli.

Map/GPS α **ppli**······Open the list of Map/GPS i- α ppli.

Paste to mail*.....Paste the location information URL into an i-mode message to compose a new message.

Add to phonebook······Add location information to the phonebook.

Attach to image······Select an image, then add location information to the image.

*: Location information URL can be displayed only on i-mode compatible terminals.

NOTE

- Pressing 1 for 1 second or longer on the standby screen also obtains location information.
 In this case, the item set in "GPS button setting" (p.293) is automatically selected.
- Position location may be available while out of range or overseas, but positioning may take time or fail depending on the situation.

Setting Position location

<Position settings>

GPS button setting

Specify a function to be run automatically when 1 is pressed for 1 second or longer on the standby screen.

Map/GPS menu screen (p.292)► "Map/GPS settings"



Map/GPS settings

"Position settings" ➤ "GPS button setting" ➤ Select a function to be run automatically

Select a function to be run automatically from the same items as Step 2 of "Checking Your Location" (p.293).

You can also configure the setting to select a function each time you press \(\begin{align*}\) without selecting a function to be run automatically. In this case, select "Check every position".

Setting the Positioning mode

Map/GPS menu screen (p.292)

"Map/GPS settings"

"Positioning mode"

Select any item:

Standard mode Give priority to positioning fast.

Quality mode ·····Position slowly. The result is more accurate than in Standard mode. The accuracy may not be high depending on the signal quality, etc.

Using Map/GPS Application

Set and start Map/GPS i- α ppli. You can set whether to obtain location information.

- If you use Map/GPS i-αppli, location information is sent to the i-αppli's information provider.
- To use Maps and GPS with Map/GPS i-αppli, set "Location usage" to "Yes" for the i-αppli. → p.268

Activating Map/GPS appli

Map/GPS menu screen (p.292)▶
"Map/GPS αppli"▶Select GPS
i-αppli

地図アプリ (Map Application)

Find out your current location and search for information. Convenient functions such as navigation are also available. Search for facilities that are helpful in times of emergency. Use Chizu Talk to exchange messages while displaying the location of a friend on a map.





©2009 ZENRIN DataCom CO., LTD

Charges

The services are categorized into the following:

- You can view a map, search for local information and coupons.
- Display by painting colors on the locations of cities or prefectures you have ever positioned using GPS.
 You can immediately check towns you have visited.
- Various map modes are available: Normal map, 3D map, Railway-emphasized map, Day/Night mode map, etc.

[Charged]

- All functions except for traffic congestion information can be used free of charge for 60 days from the first activation of Map Application.
- Registration to My Menu of "ゼンリン量地図+ナビ" (ZENRIN + Navi) from ZENRIN DataCom is required to use map appli after the 60-day trial period ends.
- Get total navigation support to your destination by public transport, walking, or driving. A route that avoids congestion can be searched.
- Get train transfer guidance and view timetables.
- Exchange messages while displaying the location of a friend on a map.
- Search for facilities that are helpful in times of emergency. Emergency Map Application can be used. No communication is required. Download the emergency map of local area beforehand just in case.

NOTE

- Packet communications charges will apply. A Pake-hodai, Pake-hodai full or Pake-hodai double subscription is recommended.
- To restore this software after deletion, download from "i エリアー周辺情報ー" (i-area Local Information-).
- We are not liable for accuracy and immediacy of the map and route information.
- While driving, a person other than the driver must operate the software.
- This i-αppli supports Motion Tracking.
- Screens are for illustrative purposes only, and may differ from actual ones.

Providing Location Information on Request

<Location request>

Set the location information to be provided when it is requested by a third party set for location request services such as DOCOMO "imadoco search".

- To use a location request service, a subscription to the service provider may be required. The service charges may apply.
- To use a location request service, you need to set "Permit to send loc." under "Request menu" (p.295) to "ON". It may be required to make the setting for each service.
- You may need to configure the location info usage setting via i-mode, in "各種設定(確認・変更・利用)" (Various settings [confirm, change, use]) under "お客様サポート" (Customer support).
- To use a location request service, see the service provider or NTT DOCOMO website.

NOTE

 This function is available only for Number A, regardless of the mode in 2in1. If the other party searches for Number B, the location information is not provided and the other party receives a report that the search failed.

Accepting/Rejecting location request

Set whether to provide the current location information when it is requested by the other party.

Map/GPS menu screen (p.292)

"Map/GPS settings"▶"Loc.

request setting"▶"Permit to send
loc."▶Enter your security code▶

Select any item:

ON, Reject numbers unset, OFF Set permission or permission policy for providing location information on request. Location information requests from callers not stored in the phonebook is automatically rejected when "Reject numbers unset" is set.

Permission schedule*1*2

Start time Enter start time.

End time..... Enter end time.

Repeat ······ Select 1 time/Daily/Select day.

Term of validity······Set "Start date" and "End date" under "Repeat".

- *1 : Operations when you set the period to accept location request → p.295
- *2: Does not appear when "OFF" is selected.

NOTE

- Even if "Reject numbers unset" is set, location information requests from callers not stored in the phonebook may be received depending on the setting situation.
- If "Permit to send loc." is set to "ON", location information may be sent to the requestor even if you do not operate the FOMA terminal.
- If the same time is set to Start time and End time, the following will apply:
 - When "Term of validity" and "Repeat" are not set:Location request is accepted for 24 hours from the set time.
 - When "Term of validity" is setLocation request is accepted until the end time of the day after "End date".
 - When "Select day" is set under "Repeat"
 Location request is accepted until the end time of the day after specified day.

Operations when you set the period to accept location request

<Example 1: Current time "2009/6/26 12:05", Start time 14:00. End time 21:00>

Repeat	Term of validity	Period for location request
1 time	_	2009/6/26 14:00 - 2009/6/26 21:00
Daily	Start date: 2009/7/2 End date: 2009/7/8	Everyday from 2009/7/2 to 2009/7/8 14:00 - 21:00
	Start date: 2009/6/22 End date: 2009/7/8	Everyday from 2009/6/26 to 2009/7/8 14:00 - 21:00
	OFF	2009/6/26 and subsequent days 14:00 - 21:00
Select day	Start date: 2009/7/2 End date: 2009/7/8	2009/7/2 - 2009/7/8 Specified day 14:00 - 21:00
	Start date: 2009/6/22 End date: 2009/7/8	2009/6/26 - 2009/7/8 Specified day 14:00 - 21:00
	OFF	Day specified from 2009/ 6/26 and subsequent days 14:00 - 21:00

<Example 2: Current time "2009/6/26 12:05", Start time 10:00, End time 21:00>

	T	Devil and from Land Maria
Repeat	Term of validity	Period for location request
	validity	•
1 time	_	2009/6/26 12:05 -
		2009/6/26 21:00
Daily	Start date:	Everyday from 2009/7/2
	2009/7/2	to 2009/7/8
	End date:	10:00 - 21:00
	2009/7/8	
	Start date:	Everyday from 2009/6/26
	2009/6/26	to 2009/7/8
	End date:	10:00 - 21:00
	2009/7/8	(12:05 - 21:00 on 6/26)
	OFF	2009/6/26 and
		subsequent days
		10:00 - 21:00
		(12:05 - 21:00 on 6/26)
Select	Start date:	2009/7/2 - 2009/7/8
day	2009/7/2	Specified day
	End date:	10:00 - 21:00
	2009/7/8	
	Start date:	2009/6/26 - 2009/7/8
	2009/6/22	Specified day
	End date:	10:00 - 21:00
	2009/7/8	(12:05 - 21:00 on 6/26)
	OFF	Day specified from 2009/
		6/26 and subsequent
		days
		10:00 - 21:00
		(12:05 - 21:00 on 6/26)
F		

<Example 3: Current time "2009/6/26 12:05", Start time 14:00, End time 21:00>

Repeat	Term of validity	Period for location request
1 time	_	2009/6/26 14:00 - 2009/6/27 10:00
Daily	Start date: 2009/7/2 End date: 2009/7/8	2009/7/2 - 2009/7/8 14:00 - next 10:00
	Start date: 2009/6/22 End date: 2009/7/8	2009/6/26 - 2009/7/8 14:00 - next 10:00
	OFF	2009/6/26 and after 14:00 - next 10:00

Repeat	Term of validity	Period for location request
Select day	Start date: 2009/7/2 End date: 2009/7/8	From 2009/7/2 to 2009/ 7/8 Specified day 14:00 - next 10:00
	Start date: 2009/6/22 End date: 2009/7/8	From 2009/6/26 to 2009/ 7/8 Specified day 14:00 - next 10:00
	OFF	2009/6/26 and after Specified day 14:00 - next 10:00

Setting positioning mode for request menu

Map/GPS menu screen (p.292)▶
"Map/GPS settings"▶"Loc.
request setting"▶"Positioning
mode"▶Select any item:

Standard mode, Quality mode → p.294

Setting the host

* There is normally no need to change this setting.

Set the host accessed for "Service settings".

- Map/GPS menu screen (p.292)

 "Map/GPS settings"

 "Loc.
 request setting"

 "Host selection"

 Select any item:
 - To add a host
 - ► Highlight "<Not recorded>" ► ☑ (Edit) ► Enter your security code ► Enter "Host name" and "Host address" ► ☑ (Finish)
 - To edit a host
 - ► Highlight an item to edit ► ☑ (Edit) ► Enter your security code ► Enter "Host name" and "Host address" ► ☑ (Finish)
 - To delete a host
 - ► Highlight an item to delete ► ch (FUNC) ► "Delete" ► Enter your security code ► "YES"

Making service settings

Access a host set in "Setting the host" (p.296) and make the settings for location request.

Map/GPS menu screen (p.292)▶
"Map/GPS settings"▶"Loc.
request setting"▶"Service
settings"▶Make the settings

For how to make the settings, contact the service provider (Japanese).

NOTE

 When you access a site via "Service settings" overseas, an error message appears and the service cannot be used. Even in this case, packet communications charges apply.

If location information is requested

If location information is requested by the other party, the current location is positioned and the information is provided to the party.

 If the settings for each service are set to confirm every time before sending, a confirmation message appears.







NOTE

- Location information may not reach the service provided depending on the signal quality, etc.
- The destination may not appear on the screen.
- In Public mode (Driving mode), the following will apply:
 - If the settings for each service are set to confirm every time before sending, location information is not provided on request.
 - If the settings for each service are set to accept location request, the ring tone, vibrator and illumination do not work but location information is provided only by the screen display.

NOTE

- When the party using imadoco kantan search requests location information
 - Each time a request is made, the location request confirmation window appears. If "YES" is selected, the rough positioning result is immediately reported to the party. After "YES" is selected, the GPS positioning screen appears.
 - Even though the location request is interrupted after "YES" is selected, the rough positioning result is reported to the party. In this case, it is recorded in the location history but location information is not displayed.
 - See the NTT DOCOMO website for imadoco kantan search.

Notifying Location Information < Location notification>

Show your current location information to service providers, etc. supporting location notification.

- Charges apply to use of the location notification function.
- To use a service supporting location notification, a subscription to the service provider may be required. The service charges may apply.
- To use the location notification function, see the service provider's or NTT DOCOMO website.

NOTE

 This function notifies the location information by Number A, regardless of the mode in 2in1.

Registering a party to report location information to <Register LCS client>

- Up to 5 clients can be stored.
- No client is stored at the time of purchase.
- Map/GPS menu screen (p.292)▶

 "Map/GPS settings"▶

 "Notification menu"▶Register
 LCS client▶"LCS client"



runction menu⇒p.2



☐ (New)►Select any item:

Service client name*......Enter a client name.

Service client ID Enter an ID specified by the service provider.

Phone number*.....Enter a client phone number.

Notify at dialing Select Yes/No/Confirm each calling to set how to notify a registered client of location information when you make a voice/ videophone call to the client. If your caller ID is not notified. location information is not notified.

*: The item can be quoted from a phonebook entry. Ch (FUNC) → "Refer to phonebook" ➤ Select a phonebook entry







New "Registering a party to report location information to" \rightarrow p.297

Edit

Add desktop icon → p.116

Copy to microSD Copy the LCS client to a microSD card.

iC transmission, iC trans. All → p.341


Send Ir data, Send all Ir data → p.340

Add to phonebook Add the name and phone number of the LCS client to the phonebook.

Delete Select Delete this/Delete selected/Delete all.

Managing clients in a microSD card

Check the content of "LCS client" copied from the FOMA terminal to a microSD card, and perform various functions from the function menu.

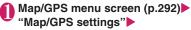


"Notification menu"▶"Register LCS client"▶"microSD"







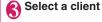



Function menu⇒p.298

microSD client folder screen FUNC (p.298)

Add folder, Edit folder name, Delete folder Select and execute an item.

microSD client list screen FUNC (p.298)/microSD client detail screen (p.298)

Move*1.....Select Move this/Move selected/Move all to move clients to another folder.

Copy Select Copy this/Copy selected/Copy all to copy clients to another folder.

Copy to phone*2.....Select a client then copy it to the phone.

microSD info*3......Display the amount of available space and data stored in the microSD card.

DeleteSelect Delete this/Delete selected/Delete all

- *1 : Only one client is moved on the client detail screen.
- *2 : Only one client is copied on the client detail screen.
- *3: Not available on the client detail screen.

Selecting a party to report location information to Location notification

Map/GPS menu screen (p.292)► "Location notification"►Select a

The current location is positioned and the information is reported.

To enter a client directly

"Enter client ID" Enter a client ID "Set"

NOTE

- Even if the latitude and longitude are stored in "Location history" (p.299), the information may not have reached the other party depending on the signal quality.
- The location information may be reported to the other party depending on the timing even though the canceling operation is performed while the current location is being reported.

Setting Positioning mode for Location notification

Map/GPS menu screen (p.292)►
"Map/GPS settings"►

"Notification menu" ▶ "Positioning mode" ▶ Select any item:

Standard mode, Quality mode → p.294

Displaying History of Checked Location Information Location history

Display the Location history such as current position, location request and LCS client.

 Up to 50 location records can be recorded. If the maximum number of records is exceeded, older records are overwritten.

Map/GPS menu screen (p.292)▶ "Location history"

The "Location history list" screen appears.

Select a location record
The "Location history detail" screen appears.

Guide to the Location history detail screen

- The function name
 Position: Position location
 Netter: Location potificat
 - Notify: Location notification Periosin: Location request
- ② The date and time③ Time adjust icon:
- Positioned when the time zone was not "GMT+09"
- ④ Overseas positioning icon: Positioned overseas



Function menu⇒p.300

■ Guide to the Location history detail screen

▶Select an item

- ① The date and time
- ② The function name
- The latitude (N) and longitude (E) of the location (described in degrees, minutes and seconds)
- wgs84 (World Geodetic System datum*)
- 5 The positioning accuracy
- The client name of the notification or the recipient name of the request
- The client ID of the notification or the recipient ID of the request
- ® The requestor name of the request
- (9) The requestor ID of the request
- ① Time adjust icon
- Overseas positioning icon
- *: Reference used to describe the location on the earth's surface, in latitude and longitude

NOTE

- The requestor name of the request will be a name in the phonebook when the requestor is stored.
- The displayed accuracy is only approximate. It may be different from the actual error.
- If positioning fails, the log cannot be used for any functions other than "Dialing requestor", "Mail to requestor" and "Delete".
- Even if the latitude and longitude are displayed in a location record, the information may not have reached the recipient or requestor depending on the signal quality, etc.
- The latitude, longitude, and positioning level recorded in the location history may be different from those which were sent to the requestor or client depending on the signal quality, etc.
- When positioned out of range, the overseas positioning icon does not appear for positioning overseas.

Location history list screen
FUNC (p.299)/Location history detail
screen (p.299)

Read Map, Map/GPS appli, Paste to mail → p.293

Dialing requestor · · · · · Make a call if the requestor ID is a phone number. "Phone To function" → p.197

Mail to requestor.....Display the New mail screen with the mail address entered if the requestor ID is a mail address.

Add to phonebook, Attach to image → p.293

DeleteSelect Delete this/Delete selected/Delete all.

Using Location Information on a Site, ToruCa, etc.

Select a link that can be used to send location information or a link with location information added on a site, ToruCa, etc., and you can send or use the location information.

Sending location information




From position loc. Obtain and send the current location information.

From loc. history ······ Send location information from a record.

From phonebook.....Search for a phonebook entry and send location information stored in the entry.

Using location information

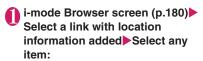

Read Map, Map/GPS α ppli, Paste to mail \rightarrow p.293

NOTE

- When the location information URL is pasted into the main text, " ≥" is prefixed to the location information URL.
- The number of characters of the pasted location information URL is included in the number of characters of the main text.

Data Management

Data Box	302
■ Making full use of images	
Displaying Saved Images	304
Editing Still Images Edit image	310
■ Making full use of moving picture	
Playing i-motion/Movie i-motion/Movie	312
Editing i-motionEdit i-motion	314
Making full use of videos	
Playing Videos	315
Making full use of Chara-den	
Chara-den	317
■ Making full use of Machi-chara	
Viewing Machi-chara Machi-chara	318
Making full use of melody	0.0
Playing a Melody Melody	319
■ Making full use of Kisekae Tool	010
Managing Kisekae Tool	321
■ Making full use of key illumination	321
Checking Key Illumination	322
	322
Making full use of memory card	000
microSD Card	323
Exchanging Data Between the microSD Card and FOMA Terminal	327 328
Moving Copy-Protected Data Between the microSD Card and FOMA Terminal	320
Movable contents	330
Backing Up All the FOMA Terminal Data at Once	331
Managing the microSD Card	333
Setting the USB Mode	
Using the FOMA Terminal as a microSD Reader/Writer	334
Setting the Print Mode for Images Stored in the microSD CardDPOF setting	
Making full use of various data	
Operating Folders and Data	335
Managing the Phonebook and SMS in a FOMA Card (UIM)UIM operation	336
■ Transferring data via infrared/iC/Bluetooth communication or cable connect	
Using Infrared/iC Communication	337
Forwarding Data via Infrared Communication	339
Forwarding Data via iC Communication	340
Forwarding Data via Bluetooth Communication	341
Forwarding Data via Cable Connection	342
Preventing Forwarding Phonebook Images Forwarding image	342
Using Infrared Remote Control Function	342
■ Making full use of PDF/Document viewer	
Viewing PDF Data	343
Viewing Documents	345
PDF Data Screen/Document Screen	345
Manga&Book	
Viewing e-books/e-comic Manga&Book	348

Data Box

In Data box, photos and moving pictures taken with the camera or data downloaded from mail or websites are stored.

Folders

 The following items and folders are pre-installed, and the data are categorized by file type.

and the data are categorized by file type.		
Folder	Contents	
My picture		
Inbox	You can select this folder to save photos taken with the camera, and images obtained from websites, mail or with the Bar code reader. Images copied/moved from a microSD card or forwarded via infrared data exchange are automatically saved to this folder.	
Camera	You can select this folder to save images as to Inbox. Images shot as Chara-den are automatically saved to this folder.	
Deco-mail picture	Images for Deco-mail are pre- installed. You can select this folder to save images as to Inbox.	
Pictograph D*1	Deco-mail pictograms are categorized and stored in the corresponding folders. Deco-mail pictograms downloaded from websites, attached to mail or copied from a microSD card are saved.	
Auto Deco-mail	Auto Deco-mail pictures are categorized and saved by emotion. Images downloaded from sites are saved.	
Pre-installed	Images for the standby screen, wake-up display, etc. and animations are pre-installed.	
Secret*2	Save images you want to prevent others from viewing.	
User created folder*3	You can select this folder to save images as to Inbox.	
Original animation	Animations created in continuous mode or original animations are saved.	

Fo	older	Contents
micro SD	Picture	Photos you took, JPEG/GIF images copied from the FOMA terminal or copied from a PC to a microSD card are saved.
	Pictograph D*1	Deco-mail pictograms copied from the FOMA terminal or copied from a PC to a microSD card are saved.
	Image Box	GIF animations/SWF Flash movies copied from the FOMA terminal, JPEG images/GIF animations/SWF Flash movies copied from a PC to a microSD card are saved.
Movabl content	-	Movies/images moved from the FOMA terminal to a microSD card are saved.
Frame		Frames are pre-installed. Frames downloaded from websites are automatically saved to this folder.
Stamp		Marker stamps are pre-installed. Stamps downloaded from websites are automatically saved to this folder.
Music		
Playlist		Playlists created on the FOMA terminal are saved.
Inbox		You can select this folder to save music data.
SD-Aud WMA	dio	Music data transferred from a PC to a microSD card is saved.
Movabl content	-	Music data moved from the FOMA terminal to a microSD card is saved.
User cr folder*3		You can select this folder to save music data as to Inbox.
Music&	Video Cha	nnel
Deliver prograr	•	The stored programs appear.
User cr folder*3		You can select this folder to save programs moved from the Delivery program.

Folder		Contents
i-motio	n/Movie	
Inbox		You can select this folder to save moving pictures taken with the camera, and moving pictures/ i-motion downloaded from websites or mail. Moving pictures/i-motion copied from a microSD card or forwarded via infrared data exchange are automatically saved to this folder.
Camera	a	You can select this folder to save moving pictures/i-motion as to Inbox. Moving pictures shot as Charaden are automatically saved to this folder.
Pre-ins	talled	i-motion is pre-installed.
Secret*	2	Save moving pictures/i-motion you want to prevent others from viewing.
User cr folder*3		You can select this folder to save moving pictures/i-motion as to Inbox.
micro SD	SD video*5 Multimedia*6	Moving pictures you took, moving pictures/i-motion copied from the FOMA terminal or moving pictures copied from a PC to a microSD card are saved.
Movabl	-	Moving pictures/i-motion moved from the FOMA terminal to a microSD card are saved.
Movie		Movies copied from a PC to a microSD card or obtained from sites are saved to this folder.
Playlist		This folder is used to play a moving picture playlist. → p.314
Melody	,	
Inbox		You can select this folder to save melodies obtained from websites, mail or with the Bar code reader. Images copied from a microSD card or forwarded via infrared data exchange are automatically saved to this folder.
Pre-ins	talled	Melodies and sound effects are pre-installed.
User cr folder*3		You can select this folder to save melodies as to Inbox.

Fo	older	Contents
Voice a	innounce	Voices recorded using the voice
		announce function are
		automatically saved to this
		folder.
microS	D	Melodies copied from the FOMA
		terminal or copied from a PC to
		a microSD card are saved.
Playlist		This folder is used to play a
		melody playlist. → p.321
My doc	ument	
Inbox		PDF data are pre-installed. You
		can select this folder to save
		PDF data downloaded from
		websites or mail. PDF data
		copied from a microSD card or forwarded via infrared data
		exchange are automatically
		saved to this folder.
User cr	reated	You can select this folder to save
folder*3		PDF data as to Inbox.
microS		PDF data copied from the
		FOMA terminal or copied from a
		PC to a microSD card are
		saved.
Kiseka	e Tool	
Packag	es are pre	-installed. Packages downloaded
from we	ebsites are	automatically saved to this folder.
Machi-	chara	
Inbox		Machi-chara is pre-installed.
		You can select this folder to save
		Machi-chara downloaded from
		websites.
User cr		You can select this folder to save
folder*3		Machi-chara as to Inbox.
Chara-	den	
		ters are pre-installed. Chara-den
		paded from websites are
	atically save	ed to this folder.
1Seg		
Image	Inbox	Still images recorded with 1Seg
		are automatically saved to this
		folder.
	User	You can select this folder to save
	created	still images moved from Inbox.
	folder*3	
Video	microSD	Videos recorded with 1Seg are
		saved.
Manga	&Book	
Inbox		You can select this folder to save
		e-books/e-comics downloaded
		from websites.
D !		

e-books are pre-installed.

Pre-installed

Folder	Contents
User created folder*3	You can select this folder to save e-books/e-comics as to Inbox.
Movable contents	e-books/e-comics moved from the FOMA terminal to a microSD card are saved.
Key illumination	
Inbox	Key illumination data downloaded from websites are automatically saved to this folder.
Pre-installed	Key illumination data are pre- installed.
Other	
microSD	Documents obtained from mail or copied from a PC to a microSD card are saved

- *1 : You can save only Deco-mail pictograms (20 dots wide × 20 dots high, JPEG/GIF image or GIF animation with no file restriction) to this folder.
- *2: Appears in Secret or Secret data only mode.
- *3: You can create up to 20 folders using "Add folder". Enter the folder name when performing "Add folder". You can change the folder name afterwards using "Edit folder name".
- *4: You cannot view images in the folder other than the one directly under the "Movable contents" folder. which has hierarchical folders because data has been moved from another FOMA terminal to a microSD card, or other reasons.
- *5: Moving pictures/i-motion with video are saved.
- *6: Moving pictures/i-motion with audio only (including AAC music data) are stored.

Displaying Saved Images

<Mv picture>

Images taken with the camera or downloaded from websites can be displayed in My picture of Data box.



MENU ►"Data box" ►"My picture"

My picture folder → p.302

- To display still images recorded with 1Seg
- ► MENU ► "Data box" ► "1Seg"
- ▶"Image"
- To view images with Quick Album → p.310



Function menu⇒p.335

Select a folder

Guide to the image list screen → p.305

- To search images by i-mode
- ▶ "Search by i-mode" ▶ "YFS"



Function menu⇒p.307



Select an image

Use In to display the previous or next image.

- To switch the screen modes
- ▶ (Normal/Full) In Full mode, portraitoriented images appear in portrait display, and landscape-oriented images in landscape display.



Function menu⇒p.307



■ To zoom in an image **▶ ■** (**Q**)

An image is zoomed in/out by one step each time you press (+)/() (-).

Pressing ch (Normal) displays the image in the actual size.

If the image does not fit in the screen, use 🗗 to scroll the image.

To restore the original zoom, press (Back).

NOTE


- The following images cannot be displayed:
 - . Image larger than 4 MB
 - An image whose width or height exceeds 4.096 dots or total number of dots exceeds 3,264 × 2.448 dots
 - · A progressive JPEG or GIF image whose total number of dots exceeds 854 × 480
- While the image is zoomed in, you cannot switch to the previous or next image using 🖸 or display the function menu.
- Original animations, GIF animations or Flash movies cannot be zoomed in.
- Flash movies are played at the volume set in "Phone" under "Ring volume" (if "Step" is set. Flash movies are played at "Level 2").
- Even if a Flash movie containing Flash[®]Video is displayed, the Flash®Video is not played.

Picture list and Title list

Setting the image list display mode <Viewer settings>

● "Settings/NW Service" "Display" • "Viewer settings" • "Picture" or "Title"

Picture list/Title list

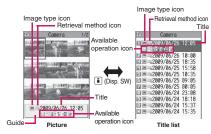

^{*} Original animations are always listed in title list mode.

■Image type icon

Icon	Description
JPG	JPEG image
GIF	GIF image
	GIF (IFM) frame, marker stamp
67	SWF Flash movie
	MP4 movie/i-motion
(Blue note)	MP4 i-motion with sound effects
(Orange note)	ASF i-motion
NO.	MP4 format i-motion with sound effects and playback restrictions
(Green note)	i-motion that can be moved to the FOMA terminal (Phone)
(Blue note)	i-motion with sound effects that can be moved to the FOMA terminal (Phone)
0° 0°	i-motion that is prohibited to move to the FOMA terminal (Phone)
	Partially downloaded i-motion, Machi-chara
	Movie
III)×	AFD Chara-den

Icon	Description
CED	Video recorded with 1Seg
B	Machi-chara
O _{stat}	Image restricted by the FOMA card security function
× •× : Data	a that are file-restricted or prohibited

Data that are file-restricted or prohibited to be attached to mail or output from the FOMA terminal

i-motion with playback restrictions ("O" turns to "O" when the playback count, period or limit expires)

Can be moved to the FOMA terminal only when the FOMA card (UIM) being used was also used to save data

Can be moved to the FOMA terminal only when the model and FOMA card (UIM) being used were also used to save data

Retrieval method icon

Icon	Description
No icon	Pre-installed data
	Data downloaded from sites, mail, ToruCa or retrieved from i-αppli
ir	Data taken with the camera
냽	Data obtained via infrared communication, iC communication, microSD card, Bar code reader or PC
	Downloaded frames and marker stamps
	Chara-den shots
트	Videos taken with 1Seg
PDF	Data clipped from a PDF data

Available operation icon

Icon	Description
D. VGA	Moving pictures/i-motion of QVGA (can be displayed only from the folders in the i-motion/Movie folder)
VGR	Moving pictures/i-motion of VGA (can be displayed only from the folders in the i-motion/Movie folder)
\boxtimes	Data that can be attached to i-mode mail (2 MB or smaller)
P.E.	Data that can be inserted into Deco-mail
	Data that can be set as a screen, etc.
47	Data that can be set as a ring tone
P	Data that uses location information
Îr	Data that can be transferred via infrared data exchange or iC communication

Icon	Description
⇒SD	Data that can be copied to a microSD card
80	Data that can be edited
÷₽ +₽	Data that can be moved to a microSD card
E	Data larger than 10 MB (excluding 10 MB) (can be displayed only from the microSD folder)

 Movable only when the FOMA card (UIM) being used was also used to save data

: Movable only when the model and FOMA card (UIM) being used were also used to save data

File format

Folder	File format
My picture	
Inbox	JPEG, GIF, SWF
Camera	
Deco-mail picture	
Pictograph D	JPEG, GIF
Auto Deco-mail	
Pre-installed	JPEG, GIF, SWF
Secret	
User created folder	
Original animation	_
microSD	JPEG, GIF, SWF
Movable contents	SB1
Frame	IFM
Stamp	
Music	
Playlist	_
Inbox	3GP
SD-Audio	SA1
WMA	WMA
Movable contents	SB2
User created folder	3GP
Music&Video Channel	
Delivery program	3GP, MP4
User created folder	
i-motion/Movie	
Inbox	MP4
Camera	
Pre-installed	
Secret	
User created folder	MP4
microSD	MP4, ASF (ASF can be
	played only)
Movable contents	SB1
Movie	WMA, WMV, ASF
Playlist	_

Folder	File format
Melody	
Inbox	SMF, MFi
Pre-installed	MFi
User created folder	SMF, MFi
Voice announce	_
microSD	SMF, MFi
Playlist	_
My document	
Inbox	PDF
User created folder	
microSD	
Kisekae Tool	
_	UCM, UCP
Machi-chara	
Inbox	MMD, CFD
User created folder	
Chara-den	
_	AFD
1Seg	
Image	JPEG
Video	MPEG2-TS
Manga&Book	
Inbox	XMDF, TEXT
Pre-installed	XMDF
User created folder	XMDF, TEXT
Movable contents	SB3
Key illumination	
Inbox	ILM
Pre-installed	
Other	
microSD	Word, Excel, PowerPoint, TEXT

■ Titles and file names

 Photos or moving pictures you took are automatically titled and named.

Title: yyyy/mm/dd hh:mm (Year/Month/Day Time*)
File name: yyyymmddhhmmxxx

Uate and time*
(3-digit number replaces the xxx part for still images)

- *: Time is the time when the photo was saved or when the moving picture shooting was finished. If "Auto save set" is set to "OFF", time is the time when the moving picture was saved.
- Unique titles are assigned to downloaded i-motion and Chara-den characters.
- The titles of downloaded images will be the same as the file names.
- Titles and files names of videos and still images recorded with 1Seg→p.245
- Title is a name displayed on the Image list screen.

- File name is the name of data displayed when transmitted to a PC.
- If a file name contains an invalid character, the file is automatically renamed to "imagexxx" or "moviexxx".

File restrictions

Set whether to allow the receiver's FOMA terminal to redistribute (attach, forward) an image, moving picture or melody attached to mail. When set to "File unrestricted", the receiver can redistribute the file freely. When set to "File restricted", the receiver cannot redistribute the file.

 After saving a file, you can still change the file restriction settings. → pp.307, 313, 320

FUNC

Image list screen (p.304)/My picture screen (p.304)

 The available functions vary depending on the selected folder. Menu items displayed in the function menu also vary.

Edit image → p.310

Edit title*1

Display image *1......Display the image (display the My picture screen).

Set as display ······Set the image as the standby screen, etc. "★" appears next to the selected item. "Changing the Display"→p.106

"Setting an image to send during videophone calls" →p.74

Image info.....Display the image name, the save date and time and whether the track can be moved to a microSD card.

Location info

Read a Map······Activate Map/GPS αppli selected in "Select Map" under "Map setting", and use location information pasted in the image to display the nearby map, etc.

Paste to mail······Paste location information in the image into main text.

Map/GPS αppli······Open the list of i-αppli using GPS.

Add to phonebook······Add location information in the image to the phonebook.

From position loc. Obtain the current location information and add it to the image.

From loc. history, From phonebook, From my profile, From image

Loc. info detail·····View location information in the image.

Delete loc. info······Delete location information from the image.

Compose message·····Compose i-mode mail/blog mail by attaching a still image to or inserting it into the main text. → p.308

iC transmission → p.341

Send Ir data, IrSS → p.340

Set image disp.*2······Select Normal/Fit in display for the image display size.

Normal ⇔ Full screen "2······In Full screen mode, portrait-oriented images appear in portrait display, and landscape-oriented images in landscape display. In Normal mode, the display will be vertical in both cases.

Add desktop icon → p.116

Copy to microSD → p.329

Move to microSD → p.330

Add image to PB······Add the image to the phonebook. → p.87

Edit file name*1.....Edit the file name using single-byte alphanumeric characters and symbols (only "-" and "_").

File restriction*1······Set whether to allow redistribution of the saved image. → p.307

Move*1······Select Move this/Move selected/Move all, then select the destination folder to move images.

Memory info*1

Sort*1.....Sort images by selected criteria.

Title name ⇔ Picture*1......Switch between Title name list and Picture list.

Composite image^{*1}→p.309

Retry*2······Play the displayed animation from the beginning.

Store in Center*1 → p.141

Delete*1.....Select Delete this/Delete selected/ Delete all.

Delete this*2

Icon always show*2.....Switch icon display in "Full screen".

Keep in secret ⇔ Put out*1*3······"Preventing Others from Viewing Data" → p.129

Copy to phone*4→p.330

Move to phone*1*5 → p.331

DPOF setting*4 → p.334

Copy*1*4······"Copying data to another folder in a microSD card" → p.330

- *1 : Available only on the Image list screen.
- *2 : Available only on the My picture screen.
- *3: Available only in Secret or Secret data only mode.
- *4: Available only for images stored in a microSD card.
- *5 : Available only for images stored in the movable contents folder.

NOTE

<Edit title>

- You may not be able to edit a title if the microSD card does not have enough free space.
- You cannot edit the titles of the pre-installed images.

<Set as display>

- You can set images in the Inbox, Camera or user created folder as the following screens:
 - · Stand-by display, Wake-up display
 - Sending/Receiving voice or videophone calls
 - Mail sending/Mail receiving/Check new messages/Mail rec'd result
 - On hold/Holding/Substitute image/Record message/Preparing/Voice memo for videophone
 Cannot be set depending on the image type and file
- An image whose width or height is larger than 854 dots cannot be set as display.

<Normal/Full screen>

 The display of GIF animations and SWF images does not change even if you switch between Normal and Full screen.

<Add image to PB>

- The following images cannot be added:
 - Image whose width or height is larger than 854 dots
 - Image larger than 100 KB
- You cannot add images other than JPEG or GIF.

<Edit file name>

- You cannot edit the file names of the following images:
 - · Pre-installed images
 - Still images of Chara-den character with "Rec. File Restriction"
 - Images that are prohibited to be output from the FOMA terminal
- You cannot use single-byte spaces for file names.

NOTE

<File restriction>

- You cannot restrict the following images:
- Images other than JPEG or GIF
- Still images of Chara-den character with "Rec. File Restriction"
- Images downloaded from sites such as the i-mode site and not edited yet
- Images restricted by FOMA card security function
- Images that are prohibited to be output from the FOMA terminal

<Sort>

- "By source" sorts in the following order.
 - ① Downloaded images or images obtained via i-αppli or ToruCa
 - 2 Photos taken with the camera
 - ③ Images obtained via infrared data exchange, iC communication or from a microSD card, etc.
 - 4 Chara-den shots
 - ⑤ Images clipped from PDF data
 - ⑥ Pre-installed images

Attaching or inserting images to compose i-mode mail or Deco-mail

Attach/Insert a saved still image to i-mode mail/Decomail/Blog mail.

Image list screen (p.304)▶

ch (FUNC)▶ "Compose message"

▶ Select any item:

Attach image····· Attach an image smaller than 240 dots wide × 320 dots high or 320 dots wide × 240 dots high and 2 MB or smaller to i-mode mail without changing the image size. Select any of the following items to attach an image larger than the size described above:

Attach mail······Attach an image without changing the image size. An image larger than 2 MB cannot be selected.

QVGA scale down......Attach an image by reducing it to 240 dots wide × 320 dots high, or 320 dots wide × 240 dots high, or smaller, without changing the aspect ratio. Change the file size if it is larger than 2 MB.

VGA scale down····· Attach an image by reducing it to 640 dots wide × 480 dots high, or 480 dots wide × 640 dots high, or smaller, without changing the aspect ratio. Change the file size if it is larger than 2 MB.

Insert imageInsert an image smaller than 96 dots wide × 128 dots high or 128 dots wide × 96 dots high and 90 KB or smaller to Deco-mail. Select any of the following items to insert an image larger than the size described above:

Insert mail·····Insert an image by reducing it to 90 KB or smaller without changing the image size. Even if reduced, an image larger than 90 KB cannot be selected.

SubQCIF scale down······Insert an image by reducing it to 96 dots wide × 128 dots high, or 128 dots wide × 96 dots high, without changing the aspect ratio. Change the file size if it is larger than the maximum.

Blog contribution Post an image smaller than 240 dots wide 320 dots high or 320 dots wide 240 dots high and smaller than 2 MB as a Blog entry. Select any of the following items to post an image larger than the size described above:

Attach mail, QVGA scale down, VGA scale down. Processing images in the same way as "Attach image"



■ When "Attach mail" or "Insert mail" is selected

There is no operation to view the image. "Composing and Sending i-mode Mail" → p.146 "Composing Deco-mail" → p.148

NOTE

 Blog addresses set in "Blog/Mail member" are automatically entered when composing mail with "Blog cont.". → p.154

Making a composite image from 4 images

- You cannot set an image larger than 854 dots wide × 480 dots high or 480 dots wide × 854 dots high.
- Image list screen (p.304)▶
 ch (FUNC)▶"Composite image"
- Select a position▶Select a folder
 ▶Select an image▶Repeat the
 steps to select 4 images
 - To cancel the specified images

 Select an image to cancel Select "Release this" on the folder selection screen



■ To retry creating the composite image ► (Cancel)

Creating animations <Original animation>

Create an animation made of up to 20 frames using stored images.

- You can specify a JPEG image of 854 dots wide x 854 dots high or smaller as original animation.
- You can create up to 20 animations.





Function menu⇒p.309

- (<New>"
- Select a frame Select a folder Select an image Repeat the steps to set images
 - To cancel the specified images

► Select a frame to cancel ► Select "Release this" on the folder selection screen



Original animation list screen (p.309)

Edit title

Orig. animation·····Add a new original animation when "<New>" is highlighted. When an existing animation is highlighted, edit the animation.


Display image.....Play an original animation (Open the original animation playback screen).

Set as display······Select an item to set the original animation as.

Image info·····Check the destination to set the original animation specified in Set as display.

Release animation

Playing an original animation



If there are two or more original animations, use to play the previous or next animation.



Original animation playback

Function menu⇒p.310

Original animation playback screen (p.310)

Set as display ······ Select an item to set the image as.

Set image disp.·····Select Normal/Fit in display for the image display size.

Retry·····Play the animation from the beginning.

Viewing still images with Quick Album

Photos taken with the camera or downloaded images can be viewed with Quick Album.

 JPEG images stored in "Inbox", "Camera" or user created folders under My picture, "Uploaded image" or "Picture" under microSD can be viewed.



The image appears. Use to display the previous or next image.

■ To zoom in an image

Zoom in/out an image by one step each time you press .

If the image does not fit in the screen, use dial keys to scroll the image.

Key	Direction	Key	Direction	Key	Direction
	Upper left	2	Up	3	Upper right
4	Left	5	_	6	Right
7	Lower left	8	Down	9	Lower right

To restore the original zoom, press (Initial).

■ To change effects when switching images

▶ (Slide/Fade/Cube/RGB)

"Slide", "Fade", "Cube" and "RGB" switch each time you press ⊠.

■ To detect faces

▶ (Face)

The detected face is zoomed in.

If there are multiple faces in the image, the faces switch each time you press (Face).

■ To start automatic display (slide show)

ch (Auto)

To end continuous entry, press ch or CLR.

NOTE

- Images are displayed in the following folder order.
 - ① Inbox
 - ②Camera
 - 3 User created folder
 - ④ "Picture" under microSD
 - * When Quick Album is activated from the camera, the order will be as follows:
 - ① Folder specified in Select to save
 - ② Camera
 - 3 Inbox
 - 4 User created folder
 - ⑤ "Picture" under microSD
- Images that cannot be viewed in My picture (due to image size or file size restriction) may be viewed with Quick Album.
- Displayed images are changed about every 2 seconds during automatic display. This time cannot be changed.

Editing Still Images

<Edit image>

Edit photos you took.

• The following are sizes of images that can be edited:

[Frame/Retouch/Correct backlight/Refresh skin tone]

• Up to 854 × 480, 480 × 854 dots [Marker stamp/Character stamp/Trim away/ Brightness/Rotate/Change size]

- Up to 3,264 × 2,448, 2,448 × 3,264 dots
- An image larger than 854 x 480 or 480 x 854 dots is reduced to smaller than 854 x 480 or 480 x 854 dots before being edited.
- * Even if the above description indicates that the image can be edited, the image may not be edited depending on the edit item. You can edit only images with "">".

 Unavailable menu items are grayed out.

My picture screen (p.304)▶

ch (FUNC)▶ "Edit image"▶Select
any item:

Frame → p.311

Retouch Add effects to the image.

Sharp······Sharpen the outline of the image.

Blur Soften the outline of the image.

Sepia Make the sepia-tone image.

Emboss Bring out the image in relief.

Negative Make the negative image.

Horizontal flip······Reverse the left and right of the image (mirroring).

Marker stamp → p.311

Character stamp → p.312

Trim away.....Trim an image.

➤ Select a size for trimming ➤ Use to adjust the position of the trimming frame (Set)

Brightness······Use to select the brightness between 5 levels from −2 to ±0 to +2.

Rotate ····· Select 90° to right/90° to left/180° as the angle to rotate the image.

Change size Change the image size. The image is enlarged or reduced to fit in the selected size without changing the aspect ratio.

Correct backlight ······ Make the dark part clear, which is caused by the backlight.

Refresh skin tone Correct the skin color.

Compose message* → p.308

Save*.....Save the edited image.

*: This function is available after editing an image.

Check the edited image ■ (Set)



Selecting "YES" overwrites the original image. Selecting "NO" saves the new image to the folder where the original is stored.

NOTE

 Editing repeatedly may impair the image quality or increase the file size.

NOTE

 When you edit an image then compose and send mail with the image attached or inserted, the attached or inserted image is not saved to My picture under Data box. The image can be saved on the Sent mail detail screen after sent.

p.159

Adding frames

- You can use downloaded frames in addition to the pre-installed ones
- My picture screen (p.304)▶ ch (FUNC)▶"Edit image"▶

"Frame"▶Select a frame

The image is displayed in the selected frame. Use \square to change the frame.

- To rotate the frame 180°
- ► (Rotate)
- To cancel the set frame
- ▶ch (FUNC)▶"Cancel"

NOTE

 If the size of the trimmed or resized image is the same as that of the frame, the image can be framed.

Pasting marker stamps

- You can use downloaded marker stamps in addition to the pre-installed ones.
- You can rotate, enlarge or reduce marker stamps.
 - My picture screen (p.304)
 ch (FUNC) "Edit image"
 - "Marker stamp" ➤ Select a marker stamp
 - You can rotate, enlarge or reduce marker stamps.
 - ▶ch (FUNC)▶Select an item
- Use ⊕ to adjust the marker stamp position (Put)
 - To paste another marker stamp
 - ► (Add) Repeat Steps 1 and 2

NOTE

 You can only use downloaded stamps of 240 dots wide x 240 dots high or smaller. Stamps larger than the above size are handled as GIF images.

Pasting character stamps

- You can enter up to 15 double-byte or 30 singlebyte characters as a stamp. The number of characters that can be entered varies depending on the image size and font size.
- You can change the character stamp color, font and size.



"Character stamp" Enter characters

■ To edit a character stamp

Ch (FUNC) Select any item:

Character input

Character color Set the color. To use another color palette, press (Change).

Font type Select Gothic/Ming-cho.

Font size ····· Select Enlargement size/Standard size/Reduction size.



NOTE

• The font thickness is specified in the "Font"

Playing i-motion/Movie <i-motion/Movie>

Play moving pictures you shot or i-motion/movies downloaded from i-mode sites or websites.

MENU ► "Data box" ► "i-motion/Movie"

i-motion/Movie folder \rightarrow p.303

■ To search i-motion by i-mode

▶"Search by i-mode" "YES"



Function menu⇒p.335

Select a folder

■ Moving picture list screen/Movie list screen





Function menu⇒p.313

Select a moving picture

Moving picture playback starts.

"Guide to the music player screen" → p.260 "Operations on the music player screen" → p.261

For partially downloaded i-motion

A message appears asking whether to download the remaining data. You cannot play i-motion until you download the remaining data.

- · Selecting "YES" starts downloading the remaining data.
- Selecting "NO" redisplays the Moving picture list screen.

For partially downloaded movie


When playable, it is half-played. The remaining data cannot be downloaded during movie playback.

NOTE

- Moving pictures taken with other than N-09A may not play correctly.
- You can start playback from the last end position if a call arrived during playback or playback was stopped by pressing CLR or - last time. However, the playback may not start from the precise last end position.
- You can select a chapter to play depending on the i-motion

Guide to the Preview/Title list

- Image type icon, Retrieval method icon, Available operation icon→p.305
- Titles and file names → p.306

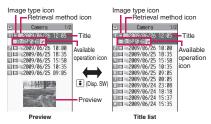

* Preview images do not appear for sound-only i-motion (i-motion with no video, e.g. a singer's voice), movies, etc.



 The available functions vary depending on the selected folder. Menu items displayed in the function menu also vary.

Edit i-motion → p.314

Edit title

Ring tone·····Set the moving picture sound as a ring tone. → p.98

Stand-by display

Chapter list·····Display the Chapter list. Select a chapter to start playback from the chapter.

i-motion info·····Display the i-motion file name, file save date/time and whether the i-motion can be moved to a microSD card.

Compose message ······ Compose i-mode mail/blog mail with the moving picture attached.

iC transmission → p.341

Send Ir data → p.340

Copy to microSD → p.329

Move to microSD → p.330

MoveSelect Move this/Move selected/Move all, then select the destination folder to move the moving pictures.

Add desktop icon → p.116

Edit file nameEdit the file name using singlebyte alphanumeric characters and symbols (only "-" and " ").

File restriction Set whether to allow redistribution of the saved moving picture.

"File restriction" → p.307

Reset title Reset the title to default.

Memory info*1

Sort Sort moving pictures by selected criteria.

List setting.....Set the movie list display mode. The displayed menu differs between the FOMA terminal and microSD card.

Delete*1.....Select Delete this/Delete selected/ Delete all.

Keep in secret ⇔Put out*2······"Preventing Others from Viewing Data" → p.129

Copy to phone*3 → p.330

Copy to phone*4→p.331

Copy*3······"Copying data to another folder in a microSD card" → p.330

Movie info*1*5.....Display the movie file name, the save date and time and playback restriction setting.

- *1 : Only "Memory info", "Delete" and "Movie info" are available on the Movie list screen.
- *2 : Available only in Secret or Secret data only mode.
- *3 : Available only for moving pictures stored in a microSD
- *4 : Available only for moving pictures stored in the movable contents folder.
- *5 : Available only on the Movie list screen.

NOTE

<Ring tone>

- You can set only a moving picture or i-motion with Select ring tone set to "Available". Check whether it is "Available" or "Unavailable" in "i-motion info".
- You cannot set the following movies or i-motion as a ring tone:
 - · Moving picture or i-motion without audio
 - · i-motion with playback restrictions
 - Moving picture larger than QVGA (320 \times 240) and smaller than VGA (640 \times 480)
 - Movie
- If a moving picture larger than VGA (640 x 480) is set as a ring tone, the i-motion image does not appear on the screen.

NOTE

- A moving picture/i-motion cannot be set as Chaku-motion or image displayed for incoming calls in the following cases:
 - When the moving picture/i-motion is transferred to a PC or another FOMA terminal via infrared communication, iC communication or DOCOMO keitai datalink (p.421), then returned to the FOMA terminal
 - When the moving picture/i-motion is copied from a microSD card to the FOMA terminal (including the case that the movie/i-motion is copied from the FOMA terminal to a microSD card, then copied to the FOMA terminal again)

<Stand-by display>

- You cannot set the following movies as the standby screen:
 - · Moving picture or i-motion with audio only
 - · i-motion with playback restrictions
 - Moving picture larger than QVGA (320 x 240)
 - Movie

<Compose message (Blog cont.)>

 Blog addresses set in "Blog/Mail member" are automatically entered when composing mail with "Blog cont.". → p.154

<Sort>

- "By source" sorts in the following order. Moving pictures or i-motion with the same source icon are sorted in the order displayed before "By source" is selected.
- ①Downloaded i-motion or i-motion obtained via
- 2 Moving pictures taken with the camera
- 3 Moving pictures obtained via infrared communication, iC transmission or from a microSD card, etc.
- (4) Chara-den shots

Playing i-motion in your preferred order

Select and store up to 25 moving pictures or i-motion to play multiple moving pictures continuously.

- There are 5 playlist folders.
- Folder list screen (p.312) Select "Plavlist"
- Highlight the destination playlist folder ch (FUNC) "Edit playlist"
 - To release a playlist ▶"Release playlist">"YES"

Select No. to add the moving picture to Select a folder Select a moving picture Repeat steps to add

To release added moving pictures

► Select a moving picture to release ► Select "Release playlist" on the folder selection screen "YFS"



☐ (Finish)

The i-motion/Movie Playlist folder list screen appears.

Selecting the Playlist folder starts playlist playback, and the added moving pictures are played repeatedly.

Editing i-motion

<Edit i-motion>

- You can edit only moving pictures with "\infty".
- <Example: Moving picture list screen for the Inbox, Camera or user created folder>
- Moving picture list screen (p.312) ►ch (FUNC)►"Edit i-motion"





ch (FUNC) Select any item:

Trim i-motion → p.315

Compose message ······ Compose i-mode mail/ blog mail with the moving picture attached.

File restriction Set whether to allow redistribution of the moving picture trimmed using "Trim i-motion".

"File restriction" → p.307

NOTE

- You cannot use the Multitask function while editing moving pictures.
- Editing may impair the movie quality.
- Blog addresses set in "Blog/Mail member" are automatically entered when composing mail with "Blog cont." under "Compose message". → p.154

Trimming a part of the i-motion

- Moving picture list screen (p.312) ▶ ch (FUNC)▶"Edit i-motion"▶ ch (FUNC) "Trim i-motion"
- "Any size" or "500KB"▶ ☐ (Start) Trimming starts.
 - To start trimming at a scene mid-way through the movie
 - want to start trimming | (Start)
- 🔁 Press 🔳 (Stop) at the scene you want to stop trimming ▶ [(End)
 - When "500KB" is selected

Trimming stops automatically when the size of the trimmed movie reaches 500 KB. Proceed to Step 5.

The trimmed section of the moving picture is played

The playback stops automatically when it ends.



NOTE

 A moving picture larger than QCIF (176 x 144) cannot be trimmed away.

Playing Videos

<Video player>

Use the video player to play videos recorded with 1Seg.



Folder list

Select the microSD folder

Video list screen → p.315



Function menu⇒p.315

Select a video

Video playback starts. "Operations during video playback"→p.316



NOTE

- Some videos may not play correctly.
- You can play video sounds with commercially available Bluetooth devices. → p.379

Guide to the Preview/Title list

- Image type icon, Retrieval method icon→p.305
- Titles and file names → p.245



FUNC Video list screen (p.315)

Show info..... Display the video program name and record date/time.

Delete this, Delete all, Multiple-choice, Check memory

Switch list Select the video list display mode.

Initialize title · · · · · Reset the title to default.

Video playback screen



- ① Program title
- ② Video
- ③ Subtitles
- 4 Playback position

Display the current playback position. Select "Location" from the function menu during pause, use to move the marker, and press (Set) to start playback from the position.

⑤ VIDEO MODE

Always display "VIDEO MODE"

6 1Seg effect (sound effects)

OFF : Sound effects OFF

CS5.1ch : CS5.1ch (only available when earphones are connected)

Ruta : Auto

Live / Concert / Drama / Sports /
News / Variety / Movie : Each effect

Manner : Manner

Guidance display

(p.114) is set to "OFF")

PAUSE: To pause, press

PLAY: To resume playback, press

® Playback status

OPPLRY: During playback IIPRUSE: During pause

201.3 : During quick view (x1.3)

- With or without subtitles
 appears for a video with subtitles.
- 10 Volume

The volume level is displayed between 0 and 20.

(1) Sound effect ON

Appear regardless of the program/FOMA terminal settings.

Operations during video playback

Key	Action
	Pause/Resume playback
(□ (マナー)/ (□))	Adjust volume
	Mute
(F (1 second or longer))	Return to Quick view (x1.3)/Normal playback
	Return to Quick view (x1.3)/Normal playback Frame forward during pause
(1 second or longer) ((a) (1 second or longer))	30-second skip backward*
□ (1 second or longer) ((マナー) (1 second or longer))	30-second skip forward*
(1 second or longer)	Subtitles ON/OFF
9 (1 second or longer)	Change display orientation* ² Order: Vertical → Full wide (Clockwise) → Full wide (Counterclockwise)
	Set 1Seg effect (sound effects)
CLR	Stop playback

*1 : Not available if the play time is less than 30 seconds.

*2 : Available only when "Auto-change Screen" (p.114) is set to "OFF".

FUNC Video playback screen (p.315)

Show information·····Display the video program name and record date/time.

Subtitles*.....Select ON (Wide: Bottom)/ON (Wide: Top)/OFF.

Play, Quick view (x1.3), Stop

Location.....Use to adjust the playback position, and select the position.

1Seg effect* → p.247 (Items under User settings)

Main/Sub setting ······Select Main sound/Sub sound/ Main + sub sound for audio output mode.

Icon always show*.....Set whether to always display the playback position or 1Seg effect icons in landscape display.

*: This setting also applies to the equivalent 1Seg functions.

NOTE

- <Quick view (x1.3)>
- The audio may be unclear during fast playback.

Chara-den

You can send a cartoon character instead of the camera image to the other party's FOMA terminal as the substitute image when you make a videophone call.

Using Chara-den characters

- Downloading Chara-den characters → p.195
- Some Chara-den characters can move the mouth synchronizing your voice.
- Icons displayed on the Chara-den list screen
 →p.305



Chara-den list/display screen





Using Chara-den characters

- You can use Chara-den by operating keys.
- You can view available actions by pressing
 * (Edit).
- Press "1" or "#1" dial key on the right side of the action name to perform actions.
- To change the action mode
- ► (Parts/Whole)
- : Part action mode
- : Whole action mode

Chara-den list screen (p.317)/ Chara-den screen (p.317)

Chara-den call Make a videophone call with the Chara-den character as the substitute image. In addition to entering a phone number, press to to search for a phone number from the Received calls, Redial or the phonebook on the Chara-den call screen.

Substitute imageSet the Chara-den character as the substitute image for videophone calls.

Rec. Chara-den → p.317

Edit title^{*1}, Switch Chara-den^{*2}, Action List^{*2}, Change Action^{*2}

Chara-den info·····Display the Chara-den file name, save date and time.

Memory info*1

Add desktop icon → p.116

Set image disp. · · · · · Select Normal/Fit in display.

Reset title*1.....Reset the title to default.

Delete*1······Select Delete this/Delete selected/ Delete all.

- *1 : Available only on the Chara-den list screen.
- *2 : Available only on the Chara-den player screen.

Saving Chara-den Character as Image or Moving picture <Rec. Chara-den>

Chara-den screen (p.317) ch (FUNC) ► "Rec. Chara-den"



Perform an action



<Moving picture>

- ▶ch (FUNC)▶"Movie mode"▶■ (Record)
- ▶Perform an action▶■ (End)
- To view the recorded moving picture
- Ch (FUNC) ► "Check w/ playing"

- To take again
- ▶ CLR
- To compose i-mode mail with a taken image/moving picture attached
- ► M (MAIL)

Also select "Attach image" or "Insert image for a still image.



(Save)

The still image is saved to the Camera folder under My picture, while the moving picture to the Camera folder under i-motion/Movie.

NOTE

- The image size (QCIF (176 x 144)) cannot be changed when taking moving pictures.
- Performing an action during taking moving pictures may record keypad sounds.

FUNC Rec. Chara-den screen (p.317)

Switch Chara-den, Substitute image, Action List, Change Action, Set image disp. → p.317 (Function menu items)

Movie mode ⇔ Photo mode ······ Switch between Movie mode and Photo mode.

Select size*1......Set the image size. The number enclosed in parentheses displayed in the menu is size in dots (width × height).

Movie type set*2.....Select Normal/Video.

Storage setting*2

Normal······Record in the normal quality and duration.

Prefer img qual······Record in higher quality.
The available recording time is shorter than for Normal.

Prefer time ······Record longer. The quality is not as high as for Normal.

Prefer motion spd······Record smoother.

Storage setting*1......Select Normal/Fine/Super Fine for the image quality.

File size setting*2.....Select 500KB/2MB.

- *1: Available only in Photo mode.
- *2 : Available only in Movie mode.

Viewing Machi-chara < Machi-chara>

View the content of Machi-chara pre-installed or downloaded from a site.

- Downloading from sites → p.195
- Machi-chara setting → p.114



Machi-chara folder → p.303



Function menu⇒p.335



Select a folder

Guide to the Machi-chara list screen → p.319

- To search Machi-chara by i-mode
- ► "Search by i-mode" ► "YES"



Function menu⇒p.319



Select Machi-chara

When partially downloaded Machichara is selected

A message appears asking whether to download the remaining data. To

download the remaining data, follow the on-screen instructions.


When the remaining data is downloaded, the partially downloaded data will be deleted




Function menu⇒p.319

Picture list and Title list

 Image type icon, Retrieval method icon, Available operation icon → p.305

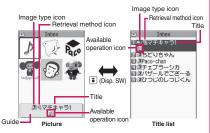

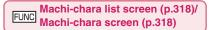

Set. Cancel → p.114

Sort*1.....Sort Machi-chara by selected criteria.

Title⇔Picture*1......Switch between Title list and Picture list

Reset all info Reset "setting duration", "total call duration" and "number of sent/received mails" (retained for each Machi-chara).

Machi-chara info Display the file name and the save date and time.

Edit title*1

Reset title*1.....Reset the title to default.

Memory info*1

Move*1.....Select Move this/Move selected/Move all, then select the destination folder to move Machi-chara.

Delete*1.....Select Delete this/Delete selected/ Delete all.


Delete this*2

- *1 : Available only on the Machi-chara list screen.
- *2: Available only on the Machi-chara screen.

Playing a Melody

<Melody>

Play pre-installed melodies, sound effects or melodies downloaded from sites in the "Melody" folder under Data box.





Function menu⇒p.335

Select a folder

- "Guide to the melody list" → p.320
 - To search melody by i-mode
 - ▶"Search by i-mode"▶ "YES"



Select a melody

The "Melody" screen appears and melody playback begins. "Operation during melody playback"→p.320



Function menu⇒p.320



Function menu⇒p.320

NOTE

 Melodies are played at the volume set in "Phone" under the "Ring volume" settings (played at "Level 2" when "Silent" or "Step" is set).

Guide to the melody list



■ Melody type icon

Icon	Description
4	MFi/SMF melody

Data that are file-restricted or prohibited to be attached to mail or output from the FOMA terminal

■ Retrieval method icon

Icon	Description
No icon	Pre-installed melody
	Melody downloaded from sites
니를	Melody obtained via infrared data exchange, iC communication, microSD card, Bar code reader or PC

Available operation icon

	·
Icon	Description
\boxtimes	Can be attached to i-mode mail (2 MB or smaller)
₫s²	Can be set as a ring tone
ir	Can be transmitted via infrared data exchange or iC communication
⇒SD	Can be copied to a microSD card

■ Titles and file names

Original titles are assigned to downloaded melodies. A title appears on the Melody list screen of the FOMA terminal.

A file name appears when data is transmitted to a PC.

A file name that contains an invalid character will change to "melodyxxx" (xxx: 3-digit number).

The 3-digit number at the end of the file name is a

The 3-digit number at the end of the file name is a serial number assigned to distinguish the file from other files.

Operations during melody playback

Key	Action
0	Play the previous or next melody
□ ((マナー)), □ ((1))	Adjust volume*1*2
O to 9, ¥, #, ✓, ⋈,	Stop playback
CLR	Stop playback

- *1 : After adjusting volume, press (Set) or wait for about 2 seconds to redisplay the melody screen.
- *2: When the melody is finished, the ring volume is restored to the level specified in "Phone".

Melody list screen (p.319)/ Melody screen (p.319)

 The function menu varies depending on the folder containing the melody.

Edit title*1

Edit file name 1.....Edit the file name using singlebyte alphanumeric characters and symbols (only "-" and "_").

Play melody*1

Ring tone Select an item to set the melody as.

File restriction*1······Set whether to allow redistribution of the saved melody. → p.307

Set repeat play*2······Play melodies in the same folder continuously.

Add desktop icon → p.116

Compose message·····Compose i-mode mail with the melody attached. → p.146

iC transmission*1 → p.341

Send Ir data*1 → p.340

Copy to microSD → p.329

Copy to phone*3 → p.330

Melody info·····Display the melody file name and save date and time.

Memory info*1

Copy*3······"Copying data to another folder in a microSD card" → p.330

Reset title*1.....Reset the title to default.

Sort*1......Sort melodies by selected criteria.

Move^{*1}.....Select Move this/Move selected/Move all, then select the destination folder to move the melodies.

Delete*1.....Select Delete this/Delete selected/ Delete all.

- *1 : Available only on the melody list screen.
- *2 : Available only on the melody screen.
- *3 : Available only for melodies stored in a microSD card.

NOTE

<Edit file name>

 You cannot edit the file name of a file-restricted melody. However, you can edit the file name of a melody received via infrared data exchange, iC communication or OBEX™ communication.

<Ring tone>

 Some melodies may be subject to restrictions where only a designated part of the melody will be played. When such melodies are set as a ring tone, only the designated part will be played. Play the melody in Melody under Data box to play the entire melody.

<Sort>

- - ② Melodies obtained via infrared data exchange, iC communication or from a microSD card. etc.
- Playing melodies in your preferred order <Playlist>

Select and store up to 10 melodies to play them continuously.

- Folder list screen (p.319)

 Highlight "Playlist"

 □h (FUNC)

 □ "Edit playlist"

 Select No. to

 add the melody to

 Select a folder

 Select a melody

 Repeat the

 steps
 - To release the added melody
 - Select a melody to release Select "Release this" on the folder selection screen



(Finish)

The Folder list screen appears.
Selecting the Playlist folder starts playlist playback, and the stored melodies are played repeatedly.

NOTE

 Playlist playback is released if stored melody titles or file names are changed or the data is deleted.

Managing Kisekae Tool

<Kisekae Tool>

View the content of a Kisekae Tool package downloaded from a site.

- "拡大メニュー" (Enlarged menu) and "ダイレクトメニュー" (Direct menu) are stored at the time of purchase.
- Downloading from sites → p.195



- To search packages by i-mode
- ► "Search by i-mode" ► "YES"



Function menu⇒p.322

Select a package

■ To set the package

►ch (FUNC) Set all"

Kisekae Tool package settings → p.121

■ When a partially downloaded package is selected

When you attempt to open a partially downloaded package, due to interruption at data acquisition, etc., a message appears asking whether to download the remaining data. To download the remaining data, follow the on-screen instructions.

When the remaining data is downloaded, the partially downloaded data will be deleted. If the remaining data is invalid, the data download cannot be completed. Even in this case, if you download the remaining data, stored invalid data will be deleted.

NOTE

 Sound-related items such as ring tone are played at the volume set in "Ring volume" while checked.
 However, even if the ring volume is set to "Silent" or "Step", the i-motion sounds at "Level 2".

Package list



■ Package type icon

Icon	Description	
	The entire data has been downloaded	
<u>~</u>	Data has been downloaded partially	
0	Restricted by the FOMA card security function	

Retrieval method icon

Icon	on Description	
No icon	Pre-installed data	
	Downloaded data	

Available operation icon

Icon	Description
STBY	Stand-by display, Wake-up display
<u></u>	Other than the above
2	Ring tone, Clock alarm tone
	Menu*
(Clock display
Color	Color theme
自平 Icon	Icons such as battery icon
	Background of the Music player screen
	Illumination

^{*:} If large font menus are contained in the menu, " also appears.

FUNC Package list screen (p.321)

Set all → p.121

Edit title

Kisekae Tool info····· Display the package file name and file save date and time.

Reset title Reset the title to default.

Reset scr./sound

All screen/sound······Reset items that can be set all at once (p.121) to default.

Only menu ····· Reset menu to default.

Memory info

Sort Sort packages by specified criteria.

Delete Select Delete this/Delete selected/Delete all.

Checking Key Illumination

<Key illumination>

Check the flashing pattern of pre-installed or downloaded key illumination data.

- Downloading from sites → p.195
- "Setting the Flashing Mode of Key Illumination"

 → p.113
- "Data box" "Key illumination"

Key illumination folder → p.304

Select a folder

"Guide to the key illumination list"→p.323



Select a key illumination data

- To stop playback
- ▶ (Stop)
- To set a data being played as key illumination
- ▶ (Set)
- "Setting the Flashing Mode of Key Illumination"

 →p.113
- "★" appears next to set data.

Guide to the key illumination list



■ Key illumination type icon

lcon	Description	
☆ 22 ***×	Key illumination data (File restricted)	

Retrieval method icon

	lcon	Description	
	No icon	Pre-installed key illumination data	
Downloaded key illumination data		Downloaded key illumination data	

Titles

Original titles are assigned to downloaded key illumination data.

Title is a key illumination data name displayed on the data list screen.

Key illumination list screen (p.322)

 Items listed in the function menu vary depending on the folder.

Set as Key illum·····"Setting the Flashing Mode of Key Illumination" → p.113

"*" appears next to set items.

Key illum. info.·····Display the title, file size and save date and time.

Delete this, Delete selected, Delete all · · · · · Select the deletion method.

microSD Card

N-09A supports commercially available microSD cards of up to 2 GB and microSDHC cards of up to 16 GB (as of April, 2009). Visit the following website for the latest information about supported cards such as manufacturers or capacity. Note that microSD cards not listed on the website may not be operated on the FOMA terminal.

- *: To save music data using SD-Jukebox, use the microSD card of up to 2 GB.
- i-mode access: Connecting to "みんなNらんど" (Japanese) →p.181
- PC access:

http://www.n-keitai.com/ (Japanese)

Note that information described on the website is only the result of the operation check and does not guarantee all operations.

Notes on handling

- * Make sure to format a card on N-09A. You may not be able to use a microSD card formatted on another handset or PC. → p.333
- Insert/Remove a microSD card while the power is off
- Do not put a label or sticker on a microSD card.
- Keep a backup copy of data stored in a microSD card. Please be aware that DOCOMO is not responsible for any damages the subscriber may incur due to the card data being deleted, erased, or altered.
- Note that all data in the microSD card will be deleted when you format it.

Inserting/Removing the microSD card

Insert/Remove a microSD card while the power is off.




Open the cap of the microSD card slot



Insert the microSD card into the microSD card slot and push it until it locks into the place

Insert the microSD card straight and slowly with the metal contacts side down.

When fully inserted, the card is locked in the place.

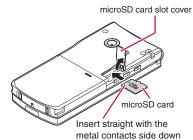

■ To remove the card

When you push the microSD card in and release, the card pops up slightly.

* Note that the card may fly out of the slot. Grip the groove of the microSD card and slowly pull the card out.



Close the cap of the microSD card

When you turn on the power after inserting the microSD card, " appears.

NOTE

- Do not insert or remove the microSD card while the power is on. Doing so may damage the microSD card or the card data.
- Note that the microSD card may eject from the slot when inserted or removed.
- When you remove the microSD card, make sure to keep the card in the supplied protective case. You may not be able to use the microSD card if the card is kept in another protective case.
- Make sure to insert or remove the microSD card straight in the right direction (inserting the microSD card at an angle may damage the card).
- It may take long to read or write data for the first time after the microSD card is inserted.

Folder structure in a microSD Card

When you copy data from the FOMA terminal to a microSD card, folders are created as shown in Table 1 (p.326) and the data are saved to the corresponding folders. The folder names and file names are set automatically as shown in Table 1.

 When transferring data from a PC to a microSD card, use the same folder structure and file names as shown in Table 1 (p.326).

NOTE

- When copying multiple data to the SD PIM folder, the data are automatically titled as year/month/ day/hour/minute (vvvv/mm/dd hh:mm).
- You can save a moving picture with video from a PC to the MMFILE folder, but cannot play the moving picture on the FOMA terminal.
- A file edited on a PC then saved to the microSD card may not be displayed or played correctly on the FOMA terminal if you use characters different from the folder/file names shown in Table 1 (p.326).
- When the SDVIDEO.DAT. MMFILE.DAT or DCIM.DAT file is deleted from the microSD card. the settings of the destination folder may be released or changed. In this case, reset the setting of "Select to save".
- Do not delete or move folders in the microSD card on a PC. The FOMA terminal may not be able to read the microSD card.
- Data saved from another device to the microSD card may not be able to be displayed or played on the FOMA terminal. Also, data saved from the FOMA terminal to the microSD card may not be able to be displayed or played on another device.
- Before purchasing a microSD reader/writer or PC card adapter, check with the manufacturer for the microSD card operations supported by the FOMA terminal.

Number of files that can be stored in the microSD card

The number of files that can be stored in a microSD card varies depending on the memory capacity of the microSD card. The following table shows the maximum number of files that can be stored in a single folder and the maximum number of folders:

Folder name	Maximum number of folders	Maximum number of files that can be stored in a single folder
DCIM	900	9,999
SD_VIDEO PRL PRG	4,095 99	4,095 4
SD_PIM	1	65,400
STILL	999	9,999
MMFILE	999	9,999
LCSCLIENT	999	999
DECOIMG	999	9,999
OTHER	999	999
RINGER	999	9,999
TORUCA	999	999
DOCUMENT	999	999
DICT	1	999
MOVIE	999	999
DECO_A_T	999	9,999
IM_DATA	1	999

- Up to about 65,400 folders/files can be recognized in a microSD card.
- You can save more files by adding folders or changing the location to copy. However, you may not be able to store data up to the maximum number depending on the file size.
- You cannot copy or move data when the space is not enough in the microSD card.
- When the microSD card capacity is full, you cannot add folders or edit titles for still image, image, moving pictures or i-motion.
- Music data cannot move from the FOMA terminal to the microSD card.
- When the number of files in the destination folder has reached the maximum, a new folder is created automatically and the data is saved to the folder. The data may be saved to the latest folder depending on the function. However, a folder is not created automatically when saving a still image directly to the microSD card after shooting with the camera.

[Table1] Folders and files in a microSD card

- A string enclosed in parentheses after description indicates file extension.
- When using folders/files on a PC, etc., follow the rules described in the table. The data may not be shown correctly on the FOMA terminal if you use different characters.
 - * Lowercase italic alphabets described in the rules indicate the following single-byte alphanumeric or double-byte characters:
 - aaa: 3-digit single-byte numbers from 100 to 999
 bbbb: 4-digit single-byte numbers from 0001 to 9999
 - ccc: 3-digit single-byte alphanumeric characters (hexadecimal) from 001 to FFF
 - ddd: 3-digit single-byte numbers from 001 to 999
 eeeee: 5-digit single-byte numbers from 00001 to 65535
 - ffffff: A string up to 64 bytes including double-byte characters (except for "\forall ", "/", ".", "*", "*", "<", "<", ">", "<", ">", "and "|")

	Folder struc		File
DCIM			Image in "Picture" under "My picture" (JPG, GIF)
			Folder name: aaaNECDT File name: NEC_bbbb
MISC			Setting file for DPOF print
SD_VIDEO			Moving pictures/i-motion in "SD Video" under "i-motion/Movie" (3GP, SDV, MP4, ASF) Folder name: PRLccc File name: MOLccc
			Video in "microSD" under "Video" under "1Sea"
			Folder name: PRGccc File name: PRGccc MOVccc
			* "MGR_INFO": Additional information on video
PRIVATE	DOCOMO	STILL	Image in "Image Box" under "My picture" (JPG, GIF, SWF)
			Folder name: SUDddd File name: STILbbbb
		MMFILE	Moving pictures/i-motion (including AAC music data) in "Multimedia"
			under "i-motion/Movie" (3GP, SDV, MP4, ASF)
			Folder name: MUDddd File name: MMFbbbb
		LCSCLIENT	LCS client (LSC)
		DE001140	Folder name: LSCddd File name: LSCDCddd
		DECOIMG	Deco-mail pictogram (JPG, GIF)
		OTHER	Folder name: DUDddd File name: DIMGbbbb Image/File in "Other" (BMP, etc.)
		OTHER	Folder name: OUDddd File name: OTHERddd
		RINGER	Melody (MID, MLD)
		HINGEH	Folder name: RUDddd File name: RINGbbbb
		TORUCA	ToruCa (TRC)
			Folder name: TRCddd File name: TORUCddd
		TABLE	Additional information on each file
		DOCUMENT	PDF data (PDF, \$DF (incomplete data), DDF (definition file))
			Folder name: PUDddd File name: ffffff
		DICT	Own dictionary information (SVD)
			File name: DICTddd
		MOVIE	PC movie (WMA, WMV, ASF)
		DE00 4 T	Folder name: MVUDddd File name: ffffff
		DECO_A_T	Decome-Anime (VGT) Folder name: DTUDddd File name: DEATbbbb
		BACKUP	Data backed up all at once
	NEC	SAVEDIR	Setting information on destination folder (DAT)
	INLO	DOCUMENT	Document (DOC, DOCX, XLS, XLSX, PPT, PPTX, TXT)
		DOCOMENT	Folder name: DOCddd File name: ffffff
		IM DATA	Learning data (NIM)
		_	File name: NECIMddd
		TABLE	Additional information on document
SD_PIM			PIM data (Phonebook: VCF, Mail: VMG, Text memo: VNT,
			Bookmark: VBM, Schedule/To Do list: VCS)
			File name: PIMeeeee
SD_BIND			Movable image, Chaku-Uta-Full [®] , e-book/e-comic, i-αppli data
			Folder name: SVCeeeee
SD_AUDIO			SD-Audio data

Viewing microSD Card Data

<microSD manager>

View microSD card data.

<Example: To view phonebook data>



"LifeKit" "microSD"



Function menu⇒p.327



"microSD manager"▶ "Phonebook"▶Select a file▶ Select data

microSD manager list/detail screen





Phonebook

Function menu⇒p.327 Function menu⇒p.328

Private

正正年初末

日田ドンコモ四郎

日田ドンコモ西郎

田田ドンコモ西郎

日田ドンコモ西郎

日田将本花子

田田携帯帯三郎

田田携帯帯一郎
日田携帯一郎
日田携帯一郎
日田携帯一郎
日田携帯一郎
日田携帯一郎



Function menu⇒p.328

Function menu⇒p.328

NOTE

- Another function cannot be activated while opening the file list/data list/data detail screen of PIM data (Phonebook/Schedule/Inbox/Outbox/ Draft/Text memo/Bookmark/Learning data/Own dictionary).
- Deco-mail are displayed without decorations.
- The data list screen or the data detail screen does not appear for the learning data.

FUNC microSD screen (p.327)

microSD format → p.333

Check microSD Check the microSD card to fix errors.

NOTE

<Check microSD>

- Do not remove the microSD card during Check microSD. Doing so may cause a malfunction to the FOMA terminal or microSD card.
- Data may not be recovered depending on the microSD card.
- You cannot check unformatted or incompatible microSD cards.
- " | " flashes during Check microSD.
- When you press ☐ (Quit) or ☐ during Check microSD, the check is canceled and " ☐ appears.
- When Check microSD is interrupted, some data may remain to be recovered. In this case, check the microSD card again.
- It may take time to check the microSD card depending on the amount of data in the microSD card.
- When you check the microSD card, the titles of data in the microSD card are renamed to the file names

Titles and file names → pp.306, 320



microSD manager screen (p.327)

microSD info → p.333

Copy to microSD*······Copy all items to the microSD card.

- For "Schedule", further select Schedule/To Do list/
- *: Only available for Phonebook/Schedule/Inbox/Outbox/ Draft/Text memo/Bookmark/Learning data/Own dictionary. "CP one to microSD" appears for learning data.

FUNC File list screen (p.327)

 When selecting data other than PIM data (Phonebook/Schedule/Inbox/Outbox/Draft/Text memo/Bookmark/Learning data/Own dictionary) in the microSD manager screen, the function menu of respective content appears.

Edit title

Copy/Add to ph., Copy/OW to phone^{*}→p.329

Copy to microSD······Copy all items to the microSD card.

• For "Schedule", further select Schedule/To Do list/ All.

microSD info → p.333

Delete Select Delete this/Delete selected/Delete all.

*: For learning data, "Copy/OW to phone" changes to "Copy/OW one to ph", and "Copy to microSD" changes to "CP one to microSD". "Copy/Add to ph." is not available.

FUNC

Data list screen (p.327)/Data detail screen (p.327)

 When selecting data other than PIM data (Phonebook/Schedule/Inbox/Outbox/Draft/Text memo/Bookmark/Learning data/Own dictionary) in the microSD manager screen, the function menu of respective content appears.

Copy/Add one to ph, Copy/Add all to ph, Copy/ OW all to ph*.....

- "Copy/Add one to ph" copies and adds a single data.
- "Copy/Add all to ph" is the same function as "Copy this" under "Copy/Add to phone" in the function menu of the file list screen.
- "Copy/OW all to ph" is the same function as "Copy this" under "Copy/OW to phone" in the function menu of the file list screen.

"Copying PIM data to the FOMA terminal" → p.329

microSD info → p.333

*: "Copy/Add all to ph" and "Copy/OW all to ph "are available only on the data list screen.

Exchanging Data Between the microSD Card and FOMA Terminal

Data that can be copied

■ PIM data

- Phonebook*1*2
- Schedule*2, To Do list
- Received mail*3/Sent mail*3/Draft mail
- Text memo
- Bookmark*3
- Learning data*4

Learned history for kana-kanji conversion, word prediction and T9 input mode

- Own dictionary
- *1: In case of Copy/Add, "Memory number" may be assigned to an empty number. "Group number", "Group name", "PushTalk group number" and "PushTalk group name" may not be copied depending on the copy type. "Chara-den" are not copied.
- *2: "Secret store" (indicating secret data) may not be copied depending on the copy type and the number of the stored data.
- *3 : Folder information may not be copied depending on the copy type.
- *4 : Can be copied to a microSD card only from the function menu of the microSD manager screen/file list screen

■ Data in Data box

Data with the "+sp" icon can be copied.

- Still image (My picture)
 JPEG/GIF/SWF data
- Moving picture (i-motion)
 MP4 data
- Melody
 - MFi/SMF melody
- PDF data (My document)

Other data

- ToruCa
- LCS client

LCS client name, Service client ID, Phone number, Auto notification

Decome-Anime template

NOTE

- Still images recorded with 1Seg cannot be copied.
- You cannot copy while the microSD card is being accessed.

Copying the FOMA terminal data to the microSD card

List screen of the data (Phonebook list screen, etc.) [ch] (FUNC) - "Copy to microSD" Select a copying method

- After selecting the copying method, select the destination folder depending on the data.
- "Copy all" for the Received mail, Sent mail or Bookmark copies all data in the respective folder. To copy all data, select "Copy to microSD" from the function menu of the folder list screen

Function menu of the detail screen

"Copy to microSD" on the detail screen is the same function as "Copy this" on the list screen.

■ Function menu of the microSD manager screen "Copy to microSD" under the function menu of the microSD manager screen (p.327) is the same function as "Copy all" on the list screen of the Phonebook, Schedule, To Do list, Draft mail, Text memo or Own dictionary. This function is also the same as "Copy to microSD" on the folder list screen of Received mail. Sent mail or Bookmark.

NOTE

- When you copy all data to the microSD card, secret data (phonebook or schedule) are also copied. However, data in the Secret folder are not copied.
- Some pre-installed data cannot be copied to the microSD card.
- When the destination folder is full, a new folder is created automatically and the data are saved to the folder.
- When you copy a single secret data (phonebook, schedule), secret is released then the data is saved
- When you copy a single phonebook entry, a PushTalk phonebook entry is not copied.
- To copy all My Profile data, perform "Display all data" first.
- When you receive a call, mail or alarm notification while copying still images or moving pictures to the microSD card, copying to the microSD card is interrupted.

<Copy Schedule>

- A single i-schedule data is copied as a normal Schedule data.
- When all Schedule data are copied, i-schedule data are not copied.

NOTE

<Copv mail>

- When you copy mail with i-αppli activation specification, information about i-αppli activation in the mail is deleted.
- When you copy mail, the attached files may be deleted depending on the file type.

<Copv image>

- The file name is set as follows after copied:
 - File name: NEC_mmmm (mmmm = 0001 to 9999)
- You cannot copy data to the microSD card in the following cases:
 - The image is not JPEG, GIF or SWF
 - The file size exceeds 4 MB when copied
- The file size may increase when copied to the microSD card.

<Copy moving picture>

- The file name is set as follows after copied:
 - File name: MOLxxx (xxx = 001 to FFF: hexadecimal)

Copying the microSD card data to the FOMA terminal

Copying PIM data to the FOMA terminal

Copy and add/overwrite the phonebook, schedule, mail or bookmarks stored on the microSD card to the FOMA terminal.

 Note that when you perform "Copy/OW to phone", the FOMA terminal data stored before copied are erased and replaced with the selected microSD card data.

Check if there is important data before copying and overwriting data.

File list screen (p.327) ch (FUNC) "Copy/Add to ph." or "Copy/OW to phone" Select any item:

 Only "Copy/OW one to ph" is available for the learning data. "Copy this"/"Copy selected"/
 "Copy all" cannot be selected.

■ Function menu of the data list screen/data detail screen

- "Copy/Add all to ph" and "Copy/OW all to ph" on the data list screen (p.327) are the same functions as "Copy/Add to ph." and "Copy/OW to phone" on the file list screen.
- "Copy/Add one to ph" on the data list screen/data detail screen (p.327) copies and adds the selected one data.

NOTE

<Copy phonebook>

- You cannot copy Phonebook data when "Restrict dialing" is set.
- When you select Copy/Add (Copy/Add to ph., Copy/Add all to ph) or Copy/OW (Copy/OW to phone, Copy/OW all to ph) on the file list screen, data list screen or data detail screen, the PushTalk phonebook data will also be copied.
- If Copy/Add is selected for Phonebook and group names in the microSD card differ from those in the FOMA terminal, the data are added to "No Group".

<Copy mail>

 When the Inbox or Outbox is full, performing "Copy/Add one to ph" on the data list screen/data detail screen overwrites the oldest unprotected mail or read mail.

<Copy Schedule>

 When you copy and overwrite Schedule, the To Do list data are also copied and overwritten (when only either of these is stored, only the stored data are overwritten).

<Copy bookmark>

 When you copy and overwrite Bookmark, the Full Browser bookmarks are also copied and overwritten (when only either of these is stored, only the stored data are overwritten).

Copying other data to the FOMA terminal

Copy data such as images in the microSD card to a folder in the FOMA terminal.

Videos recorded with 1Seg cannot be copied.

List screen of the data (Image list screen, etc.) ▶ ch (FUNC) ▶ "Copy to Phone" ▶ Select a copying method

NOTE

<Copy image>

- The following images cannot be copied:
 - SWF Flash movie larger than 500 KB
 - Image larger than 4 MB
 - Image whose width or height exceeds 4,096 dots or total number of dots exceeds 3,264 x 2.448 dots
 - Progressive JPEG/GIF image whose width or height exceeds 854 dots or total number of dots exceeds 854 x 480 dots

NOTE

<Copy moving picture>

- The following movies cannot be copied:
- Non-MP4 format
- MP4 movie that cannot be played
- Over 10 MB
- Movie
- * Some moving pictures may not be copied even in other cases above.

<Copy PDF data>

• You cannot copy a PDF data larger than 2 MB.

Copying data to another folder in the microSD card

 You have to create the destination folder beforehand. → p.335



 After selecting a copying method, select the destination folder to copy data.

NOTE

 Do not remove the microSD card until the copy completes. Doing so may cause a malfunction to the FOMA terminal or microSD card.

Moving Copy-Protected Data Between the microSD Card and FOMA Terminal

<Movable contents>

Move movable copyrighted i-motion, Chaku-Uta-Full®, and e-book/e-comic.

Moving data from the FOMA terminal to the microSD card

- Moved i-motion, Chaku-Uta-Full[®] or e-book/e-comic is saved to each Movable contents folder (p.302).
- Music list screen (p.255)/Image list screen (p.304)/Moving picture list screen (p.312), Manga&Book list screen (p.348) ▶ ch (FUNC) ▶ "Move to microSD" ▶ Select any item:

Move this ····· ▶ Select the destination folder ▶ "Select this folder"

Move selected ····· ► Select the destination folder ► "Select this folder" ► Use 🔂 to select a checkbox (□) ► 🖾 (Finish) ► "YES"

Move all·····▶Enter your security code▶
Select the destination folder▶ "Select this folder"▶ "YES"

Moving the microSD card data to the FOMA terminal

- Moved i-motion, Chaku-Uta-Full[®] or e-book/ecomic is saved to each Inbox folder.
- Videos recorded with 1Seg cannot be moved.
- Folder list screen (pp.255, 304, 312, 348) Movable contents Select a folder Wiew files

The "Music list" screen/"Image list" screen/
"Moving picture list" screen/"Manga&Book list" screen appears.



NOTE

- Do not remove the microSD card while moving data. Doing so may cause a malfunction to the FOMA terminal or microSD card.
- Use "Music info" (p.256), "Image info" (p.307), "i-motion info" (p.313), "Info" (p.349), and icons (pp.255, 305, 349) to check whether Chaku-Uta-Full[®], images, i-motion, or e-book/e-comic can be moved.

Backing Up All the FOMA Terminal Data at Once

Back up all the FOMA terminal data at once to a microSD card. You can restore backed-up data at once. Data can be transferred easily when changing models, etc.

 Phonebook/Schedule (including To Do list)/Text memo/Mail/Bookmark data and the following setting items can be backed up/restored. You cannot select data types to back up/restore.

Category	Setting item
Mail Setting	Auto-sort
	Font size
	Settings for Signature/Signature insertion
	Receive option setting

Category	Setting item
Mail Setting	Receiving setting
	Auto-display setting
	Prefer attachment
	Start attachment (auto)
	Settings for Area Mail reception/
	Beep time, settings applied in
	Manner mode/Public mode
	Set check new messages
Other	Reject unknown
settings	Call acceptation/rejection
	Call setting w/o ID
	Record message setting, ring time
Own data	Redial, Dialed/Received calls
	Sent/Received address list
Character	Own dictionary
entry	Learned records
LifeKit	Alarm

Backing up data

<Backup to microSD>

- Note that already backed-up data in the microSD card will be overwritten.
- microSD screen (p.327) "Backup/ Restore"

Backup/Restore
Backup to microSD
Restore to phone
ElRefer to backup data
UDelete backup data

Backup/Restore

- "Backup to microSD"
- Enter your security code "YES"

 Backup starts.
 - To cancel backup
 - ▶"Cancel"

NOTE

- If data that can be backed are only setting items, backup is not available.
- Mails received during backup may not be backed up.
- You cannot back up data when the space is not enough in the microSD card. Delete unnecessary data, or use a microSD card with enough space.
- If backup is interrupted, data cannot be restored.
 Back up data again.

Restoring data to the FOMA terminal

<Restore to phone>

- Note that stored FOMA terminal data will be replaced with backup data in the microSD card.
 Check if there is important data before restoring.
- microSD screen (p.327) "Backup/ Restore" "Restore to phone"
- Enter your security code▶"YES" Restoring starts.
 - To cancel restoring
 - ▶"Cancel"



NOTE

- If the FOMA terminal data type does not exist in the microSD card backup data, the FOMA terminal data of the type will be deleted. (E.g. if a phonebook data does not exist in the backup data, the FOMA terminal phonebook data will be deleted when restoring.)* However, if the backup data of the setting item does not exist, the setting that has not been restored will be retained.
 - *: If data that was backed up with other than your FOMA terminal is restored, the status of before restoration may be retained.
- When restoration is complete, the result screen appears to indicate restored items. Only items successfully restored are displayed.
- If no microSD card backup data can be restored, restoring is not available.
- Some data may not be restored when the space is not enough in the FOMA terminal.
- not enough in the FOMA terminal.

 If restoring is interrupted, data cannot be restored
- completely. Restore data again.

 If you restore to a phone other than the FOMA terminal, not all the setting items may be restored.
- In Dialed calls, only the latest record will be restored if the phone number was dialed repeatedly. The number of records may differ from before backup.

Viewing backup data <Refer to backup data>

View data backed up to a microSD card.

- microSD screen (p.327) "Backup/ Restore" "Refer to backup data" Select any item:
 - Refer to backup data screen/Backup data detail screen





Function menu⇒p.332

NOTE

• The setting item details cannot be displayed.

FUNC (p.332)/Backup data detail screen (p.332)

Backup date info*.....View the backup date/time.

microSD info→p.333

*: Available only on the Refer to backup data screen.

Deleting backup data <Delete backup data>

Delete data backed up to a microSD card.

- microSD screen (p.327)▶"Backup/ Restore"▶"Delete backup data"
- Enter your security code "YES"

 Deletion starts.

Managing the microSD Card

Formatting the microSD card enables you to use the card on the FOMA terminal or check the usage status

Formatting the microSD card

- * Make sure to format a card on N-09A. You may not be able to use a microSD card formatted on another handset or PC.
- Note that all data in the microSD card will be deleted when you format it.
- microSD screen (p.327)

 ch (FUNC) "microSD format"

 Enter your security code "YES"

NOTE

- Do not remove the microSD card while formatting.
 Doing so may cause a malfunction to the FOMA terminal or microSD card.
- Data in the microSD card are not guaranteed if formatting is interrupted.

Checking the microSD card usage status

View the amount of available space and data in the microSD card.


- The displayed memory capacity is smaller than the memory capacity indicated on the microSD card.
- Number of files that can be stored in the microSD card → p.325
- microSD manager screen (p.327)
 ch (FUNC) "microSD info"

Setting the USB Mode

<USB mode setting>


Set the USB mode to use various functions by connecting the FOMA terminal to a PC, etc.

- USB mode is categorized into "Communication mode", "microSD mode" and "MTP mode".
 - <Communication mode>



FOMA USB Cable with Charge Function 02 (optional)

<microSD mode/MTP mode>



FOMA USB Cable with Charge Function 02 (optional)

● "Settings/NW Service" "External connection" ■ "USB mode setting" ▶ Select any item:

Communication mode······Use the external connector for data transfer via packet communication, 64K data communication or cable connection.

 "()": The FOMA USB Cable with Charge Function 02 is connected, and data is ready to be exchanged between the FOMA terminal and a PC

microSD mode······Use the external connecter as a microSD card reader/writer.

- "
 ": The FOMA USB Cable with Charge Function 02 is not connected
- "": The FOMA USB Cable with Charge Function 02 is connected (you cannot transfer data between the FOMA terminal and the microSD card, display data in memory or format the microSD card)

MTP mode ······Use the external connector for WMA data transfer.

- " The FOMA USB Cable with Charge Function 02 is not connected
- " The FOMA USB Cable with Charge Function 02 is not connected

NOTE

 When the battery pack is removed, Communication mode is activated.

Using the FOMA Terminal as a microSD Reader/Writer

Connect the FOMA terminal to a PC with the microSD card inserted, and read/write data in the microSD card.

 To use the FOMA terminal as a microSD reader/ writer, the following devices are required:

Item	Description	
Cable	FOMA USB Cable with Charge	
	Function 02 (optional)	
PC	PC with USB Port (compliant to	
	Universal Serial Bus Specification	
	Rev1.1/2.0) compatible with FOMA	
	USB Cable with Charge Function 02	
	(optional)	
	* Your FOMA terminal does not support	
	"USB2.0 High-Speed".	
Operating	Windows 2000, Windows XP,	
System	Windows Vista (Japanese versions)	



Connect the FOMA terminal to a PC via the FOMA USB Cable with Charge Function 02

" 🗐 " appears.

The microSD card appears in My Computer window on the PC as a storage memory (external storage device).

To remove the FOMA USB Cable with Charge Function 02 from the PC, follow the safe removal procedure on each OS.

NOTE

 The "USB mode setting" cannot be changed while in Communication mode.

Important

- Ensure that the FOMA terminal and PC are properly connected. An improper connection may not only prevent data transfer but also result in data loss.
- Attempting to transfer data when the battery is low or empty may not only prevent data transfer but also result in data loss. Make sure that the battery is fully charged. Also, check the PC power.
- Do not remove the FOMA USB Cable with Charge Function 02 when the communication indicator flashes while copying data from the PC to the FOMA terminal. Doing so may not only prevent data transfer but also result in data loss.

Set DPOF (Digital Print Order Format) to images in the microSD card.

- DPOF is a format to print images taken with digital camera.
- When you save photos taken with the FOMA terminal to a microSD card, and specify photos to print, the number of prints, etc., you can print the photos on a DPOF-compatible printer or in a print service shop.
- Folder list screen (p.304)

 "microSD"▶"Picture"▶Select a
 - To set DPOF to a photo
 - Move the set frame to a photo ch (FUNC)
 "DPOF setting" → "DPOF set One"
 - To set DPOF to multiple photos

 ch (FUNC) DPOF setting DPOF set

 Choice Finish
- "Print"▶Select any item:

Print Sheets ······ Enter the number of sheets (01 to 99) to print.

date Select whether to stamp the date.

- To release the print settings of the selected photo
- ▶ "Print OFF"
- To release the print settings of all the stored photos
- ▶ "All print OFF"

(Finish)

NOTE

- You can set DPOF to up to 999 images. However, you may not be able to print up to the specified number depending on the printer.
- You cannot set DPOF to the following photos:
 - Photo whose width or height exceeds 4,096 dots
 - Photo whose total number of dots exceeds 3.264 x 2.448 dots
 - Photo larger than 4 MB
 - Progressive JPEG image whose width or height exceeds 854 dots
 - Progressive JPEG image whose total number of dots exceeds 854 x 480 dots
- You may not be able to set DPOF when the space is not enough on the microSD card.
- You can check the number of sheets you set in "Image info".

Operating Folders and Data

Add folders to each folder/microSD folder list screen of Data box to organize the files.

■ Movable contents folder

- For Music, use the function menus "Add folder", "Edit folder name", "Delete folder" and "Memory info" of "FUNC Folder list screen of each data" below.
- For i-motion/Movie and Manga&Book, use the same function menus as those of "FUNC microSD folder list screen" below.
- The maximum number of folders under the Movable contents folder is 65,400 and the maximum number of files that can be stored in a single folder is 65,400. For My picture, the maximum number of folders under the Movable contents folder is 900 and the maximum number of files that can be stored in a single folder is 9,999.

Creating/Editing/Deleting folders

FUNC Folder list screen of each data

Add folder.....Enter a folder name to add a folder.

Edit folder name Edit the folder name of the added folder.

Send all Ir data*1 → p.340

Add desktop icon*2 → p.116

Delete folder Delete a folder even if it contains data

• For Music, select Delete this/Delete selected/Delete all after entering your security code.

Delete all*3.....Delete all data other than in the Secret folder.

Edit playlist*5······"Playing melodies in your preferred order"→p.321

Release playlist*5, Memory info

- *1 : Only available for My picture, i-motion/Movie, Melody and My document.
- *2 : Only available for Music.
- *3: "Delete all image", "Delete all" or "Delete all doc." appears depending on the data type.
- *4 : Not available for Music, Movable contents folder under Music, Music&Video Channel, or 1Seq image.
- *5 : Only available when the Playlist folder under Melody is highlighted.

NOTE

<Delete folder/Delete all image/Delete all>

- When you attempt to use "Delete folder", "Delete all image" or "Delete all" to delete an image or moving picture that has been set as a display, original animation, etc., or when you attempt to use "Delete folder" or "Delete all" to delete a melody that has been set as a ring tone, alarm, playlist, random melody, etc., the corresponding feature (display, etc.) changes as follows:
 - The screens, ring tone and alarm settings are reset to default.
 - Original animations, playlists and random melodies are released.

FUNC microSD folder list screen

Edit folder name*1

Create folder*······Enter a folder name to create a folder.

Delete folder, Memory info

*: Not available for "Image Box" or "Pictograph D".

NOTE


 When you attempt to access data in the microSD card while i-αppli is saving data to the microSD card, a message appears indicating that you cannot operate the card.

<Create folder>

 You cannot create a folder in "Image Box" or "Pictograph D" on the FOMA terminal. You can create a folder on a PC, etc.

When the free memory space is insufficient or there are too many stored items

When you try to save the taken photos, moving pictures or downloaded data, a message appears asking whether to delete some unnecessary data to save new data. To save new data, delete unnecessary data.



- To not save the data
- ▶"NO"

Select a folder▶Select data to delete

As some data share the storage area, select which data to delete before selecting a folder.

(Finish)▶"YES"

(Finish) does not appear until enough memory is allocated to save the data.

Managing the Phonebook and SMS in a FOMA Card (UIM)

<UIM operation>

Exchange phonebook or SMS data between the FOMA terminal (Phone) and FOMA card (UIM). You can also delete phonebook or SMS data in the FOMA terminal (Phone) or FOMA card (UIM).

- You cannot send/receive a voice, videophone or PushTalk call or i-mode mail while copying or deleting data. Also, you cannot activate other functions.
- You cannot copy items that cannot be stored in the UIM phonebook.

Items and number of entries that can be copied →p.86

Copying/Deleting phonebook data or SMS from the main menu

<Example: To copy a phonebook data or SMS>

■ "LifeKit" "UIM operation" Enter your security code

When you enter your security code, communications such as receiving become unavailable and " " appears. If you receive a call, etc. before entering your security code, the UIM operation ends.



- To delete
- ▶"Delete"
- Phone → UIM" or "UIM → Phone"
 - To delete
 - ▶ "Phone" or "UIM"
- Select any item:

PhonebookSearch phonebook and display the phonebook list screen. Searching the phonebook → p.90

SMS······Select SMS data.

- "Select all"/"Release all" can be selected from ch (FUNC).
- To check the Phonebook/SMS content

 | Ch (FUNC) | "Display Detail"

Copying a phonebook entry from the phonebook detail screen

Phonebook detail screen (p.89)

ch (FUNC) "Copy to UIM" or
"Copy to phone" "YES"

The menu displayed when ch (FUNC) is pressed varies depending on the destination (the FOMA terminal or FOMA card (UIM)).

Moving/Copying SMS from the Mail screen

 You can perform the UIM operation from the function menu of the Received mail list/detail screen and Sent mail list/detail screen.

<Example: To move or copy received SMS in the FOMA terminal to the FOMA card (UIM)>

- Received mail list screen (p.163)
 Highlight SMS
- ② ch (FUNC)▶"UIM operation"▶
 "Move to UIM" or "Copy to UIM"▶
 "YES"
 - To move or copy received SMS in the FOMA card (UIM)
 - "Move from UIM" or "Copy from UIM"
 Data is moved or copied to the "Inbox" folder.

NOTE

<Phonebook>

- Copying the phonebook from the FOMA terminal (Phone) to the FOMA card (UIM) converts "katakana" included in name and reading to double-byte. Up to 10 double-byte or 21 singlebyte characters for name and up to 12 double-byte or 25 single-byte characters for reading will be copied, and the excess characters are not copied.
- As the numbers of phone numbers and mail addresses that can be stored in a single phonebook entry on the FOMA terminal (Phone) and FOMA card (UIM) are different, the second and subsequent phone numbers/mail addresses in the FOMA terminal (Phone) cannot be copied to the FOMA card (UIM).
- As the types of characters that can be used on the FOMA terminal (Phone) and FOMA card (UIM) are different, some characters may be converted to spaces or other characters.
- Phonebook entries stored as secret data cannot be copied using this function even when in "Secret mode" or "Secret data only mode".
- If the same group names are set on the FOMA terminal (Phone) and the FOMA card (UIM), the phonebook group settings are retained. If there is no group with the same name, the entries are saved to "No Group".

<SMS

- Copying sent SMS will also copy the SMS reports for the sent SMS. You cannot copy the SMS reports only.
- You cannot protect SMS moved or copied to the FOMA card (UIM). If you move or copy protected SMS to the FOMA card (UIM), the protection is removed from the SMS in the FOMA card (UIM). The "Replied to" or "Forwarded" mark also changes to "Read".
- When SMS sent to Number B of 2in1 is moved or copied, it is saved as SMS to Number A.

Using Infrared/iC Communication

Exchange data such as phonebook entries and received mail with other devices equipped with the infrared data exchange or iC communication function.

- The data exchange function of the FOMA terminal via infrared data exchange/iC communication conforms to the IrMC™1.1 standard. However, you may not be able to transfer data depending on the other party's device or the application even when IrMC™1.1 is supported.
- You can transfer a single data at a time or all data at once.
- Table 2 (p.338) shows data that can be transferred.

Note on data transfer

- You cannot transfer data while Dial lock, Self mode, Omakase Lock or Keypad lock is set. Also, you cannot use iC communications when IC card lock is set
- You cannot receive phonebook data while Restrict dialing is set. However, you can send phonebook data with "Restrict dialing" set and My Profile data when sending the phonebook data.
- You may not be able to transfer data depending on the status of the other party's device. Also, depending on the other party's device, the settings of the received mail or bookmark folder tree may not apply, or the Deco-mail content may not be saved correctly.
- The FOMA terminal is out of service area during data transfer, and you cannot make/receive a voice/ videophone call, PushTalk, use i-mode, i-mode mail, packet communication or 64K data communication. Also, the FOMA terminal may remain out of service area for a while after data transfer is finished.
- It may take time to transfer data depending on the amount of data. Also, you may not be able to receive data.
- The progress bar indicates the number of sent data as an approximate guide. A large amount of data may slow down the progress indicator or it may look different between the parties even when the data is being transferred successfully.

Transferred data

- For data received on the FOMA terminal, see
 Table 2 Saved as in (p.338).
- The FOMA terminal may not properly receive some symbols or pictograms entered in mail or phonebook.
- You cannot send or receive:
 - UIM phonebook, SMS
 - Frame or stamp data (can be received only)
 - Melody, still image, moving picture, i-motion or PDF data restricted by FOMA card security function
 - · Data in the Secret folder
- You cannot receive:
 - · Images other than JPEG, GIF, and SWF
 - · Moving pictures other than MP4 and 3GP
 - Still image, moving picture, i-motion, melody, PDF data whose image size or file size exceeds the capacity of the FOMA terminal
- When you receive all, the FOMA terminal data are overwritten with the received data, and stored data are deleted including protected mail and secret data of the phonebook or schedule. However, frames and secret data in the secret folder are not deleted. Check if there is important data before receiving all data.

- Transferring all may change the order of data on the recipient.
- You can send/receive up to 9 double-byte or 18 single-byte characters for titles of still images, moving pictures, i-motion or PDF data and up to 25 double-byte or 50 single-byte characters for titles of melodies. If the length of the title exceeds the maximum, the excess characters are deleted.
- Note the following when you transfer phonebook data:
 - The secret code cannot be transferred.
 - When you transfer a single phonebook entry stored as secret data, the secret setting is released when transferred.
 - Still images stored in the phonebook you receive are saved to the Inbox folder under "My picture".
 However, if the capacity of "My picture" is exceeded, a still image will not be saved and only the phonebook entry is saved.
 - "Send all" sends the phonebook and PushTalk phonebook, and "Send one" sends the phonebook only. However, the receiver sees a message asking whether to save the entry to the PushTalk phonebook, and it can be stored in the PushTalk phonebook.

[Table 2] Data that can be transferred and the destination

Data	Receive one	Receive all
Still image, melody	The first in the Inbox folder	Replaced with the source still images/
Deco-mail pictogram	The folder sorted by category (saved to "お気に入り" (My favorite) when a category is not specified)	melodies (Deco-mail pictograms are sent and replaced when all still images are sent)
Moving picture (i-motion), PDF data	In chronological order in the Inbox folder	Replaced with the source moving pictures (i-motion)/PDF data
ToruCa, ToruCa (detail)	The first in the ToruCa folder	Replaced with the source ToruCa
Phonebook, My Profile	The smallest memory number available between "010" and "999" (if none of the numbers above is available, it is saved under the smallest memory number available between "000" and "009")	Replaced with the source Phonebook (My Profile data are sent and replaced excluding phone number)
Schedule	In the date order of the received schedules	Replaced with the source Schedule
To Do list	The first in the To Do list	Replaced with the source To Do list
Received mail, Sent mail	In chronological order of mail in the Inbox/Outbox folder	Replaced with the source Inbox/Outbox
Draft	In chronological order of mail in Draft	Replaced with the source Draft
Text memo	The first <not recorded=""></not>	Replaced with the source Text memo
Common phrases	The first <not recorded=""></not>	Replaced with the source Common phrases
Own dictionary	The first in the Own dictionary	Replaced with the source Own dictionary
Bookmark (i-mode Browser, Full Browser)	The first in the Bookmark folder	Replaced with the source Bookmark
LCS client	The last in the LCS client list	The smallest number in the LCS client list
Decome-Anime	The first Decome-Anime	Replaced with the source Decome-Anime

- Note the following when you transfer Schedule data:
 - A single i-schedule data is transferred as a normal Schedule data.
 - · "Send all" does not send i-schedule data.
- Note the following when you transfer mail data:
 - Some phones may be unable to receive a part of a subject.
 - "Receive all" deletes all stored mail and user created folders then receives data.
 - If there is not enough free space in Inbox when receiving one received mail, old received mail are deleted automatically in order. However, unread mail, protected received mail, i-mode mail and SMS in the secret folder are not deleted. It is recommended that you protect important mail.
 - If there is not enough free space in Outbox when receiving one sent mail, the oldest unprotected sent mail in Outbox is overwritten.
 - When there is an attached file that has not been completely downloaded, the mail is sent after the attached file is deleted.
 - When the i- α ppli activation specification or mail-linked i- α ppli information is pasted into mail, the mail is sent after the pasted data is deleted. When a file attached to mail is restricted, the mail is sent after the data is deleted. Also, a still image may be deleted depending on the file format. However, when sending sent mail or draft mail, data received via cable connection or copied from a microSD card are sent even when "File restricted" is active.
 - Mail-linked i-αppli folder cannot be transferred.
 The folder will be saved as a user-created folder under the same name to the destination.
 - The "Color coding" setting set on the received mail list screen or sent mail list screen cannot be transferred
- Mail larger than 2 MB may not be sent correctly via infrared data exchange.
- When original common phrases are already stored in all folders from Folder 3 to Folder 5, and fixed common phrases in Folders 1 and 2 have not changed since the time of purchase, received common phrases will be stored in Folders 1 and 2, overwriting the fixed common phrases.
- Data may not be saved in the same order depending on the model of the sender when receiving all bookmarks.

Session number


 "Send all" and "Receive all" require the session number to authenticate the sender and recipient devices. Before sending and receiving, the sender and recipient should agree on a 4-digit number as the session number and then both enter the same number.

Forwarding Data via Infrared Communication

<Infrared data exchange>

When transferring data via infrared data exchange

- Place the devices so that the infrared data ports are aligned on the same level and facing each other. Also, do not place anything between the devices or cover the infrared data ports.
- Use the devices within 20 cm to perform infrared communications. Do not move the devices until a message appears indicating that transfer is complete
- The devices may not communicate successfully in direct sunlight, under a fluorescent light or near other infrared devices.

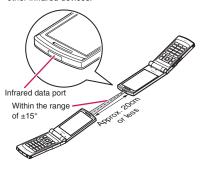

Sending data via infrared communication

<Send Ir data>

Send from the function menu of the Data list screen or detail screen.

 When you send a JPEG image, you can select High-speed infrared communication (IrSS™).

<Example: To send one phonebook data>



- To send all data at a time
- ► "Send all Ir data" ► Enter your security code ► Enter session number
- "Session number" → p.339

■ IrSS™

You can send a JPEG image via High-speed infrared communication (IrSS™) by pressing (IrSS) on the Image list screen (p.304).

- Set the receiving device ready to receive
- Oirect the infrared data port toward the other party's device
 "YES"

Data transmission starts.

After the data are sent, a message appears indicating that the communication is complete.

- To exit during transmission
- ▶ (Quit)

NOTE

 When you select "IrSS", sending is finished successfully on the sending device even if the receiving device cannot receive the data correctly.


Receiving Data via Infrared Data Exchange Receive Ir data>

- When you receive all, the FOMA terminal data are overwritten with the received data, and stored data are deleted including protected mail and secret data of the phonebook or schedule. However, frames and secret data in the secret folder are not deleted. Check if there is important data before receiving all data.
- Transferring all may change the order of data on the recipient.

<Example: To receive one phonebook data>

- "LifeKit" "Receive Ir data"
 - To paste the function on the desktop

 ch (FUNC) "Add desktop icon"

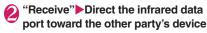

- To receive all data at a time
- ► "Receive all" ► Enter your security code ► Enter session number ► Direct the infrared data port toward the other party's device ► "YES" ► Select "YES" when the overwrite confirmation screen appears
- "Session number" → p.339

Receive data from the other party's device

Data reception starts.

Press "YES" to store the data.

The received data is discarded if no operation is performed for about 30 seconds after it is received. When you received all data at a time, they are stored on the FOMA terminal.

- To exit during reception
- ▶ (Quit)

Forwarding Data via iC Communication <iC communication>

To transfer data via iC communication

- Place the mark on the sending FOMA terminal over the mark on the receiving FOMA terminal.
- Data transmission may not be smooth depending on the other party's FOMA terminal. In this case, change the distance between the marks or wave them vertically and horizontally.
- Shortening the distance between the marks may clear the display depending on the other party's FOMA terminal. In this case, wave them vertically and horizontally.



Sending data via iC communication

<iC transmission>

Send from the function menu of the Data list screen or detail screen.

<Example: To send one phonebook data>



To send all data at a time

► "iC trans. all" ► Enter your security code ► Enter session number

"Session number" → p.339

Put your mark close to one of the other party's FOMA terminal "YES"

Data transmission starts.

After the data are sent, a message appears indicating that the communication is complete.

■ To exit during transmission

► (Quit)

Receiving data via iC communication

<iC communication>

Put your mark close to one of the other party's FOMA terminal Perform data transmission on the other party's FOMA terminal

Data reception starts.

Press "YFS" to store the data

The received data is discarded if no operation is performed for about 30 seconds after it is received.

■ To receive all data at a time

►Enter your security code ►Enter session number ►Select "YES" when the overwrite confirmation screen appears

Data reception starts.

Received data is stored on the FOMA terminal. "Session number"→p.339

■ To exit during reception

▶ (Quit)

Forwarding Data via Bluetooth Communication

<Bluetooth communication>

Exchange data such as phonebook entries and received mail with other Bluetooth devices equipped with the Bluetooth communication function.

 Phonebook/Schedule/To Do list/Text memo/Mail/ Bookmark/My Profile data can be transferred.
 Notes on sending/receiving of the data above and their data contents → p.337

Sending data via Bluetooth connection <Send o

<Send one/Bluetooth>

Send from the function menu of the Data list screen or detail screen.

<Example: To send one phonebook data>

- Phonebook detail screen (p.89)
 ch (FUNC) "Send one/Bluetooth"
 - To send all data at a time
 - ▶ "Send all/Bluetooth"
- Set the receiving device ready to receive
- Sluetooth menu screen (p.376)►
 "Device list"►Select a Bluetooth
 device

Registering/Connecting Bluetooth devices → p.376

To send all data at a time

►Enter your security code

When "Session number setting" (p.379) is set to "In-band ringing", enter your security code then the session number for transferring all data.

4 "YES"

Data transmission starts.

After the data are sent, a message appears indicating that the communication is complete.

■ To exit during transmission

▶ (Cancel)

Receiving Data via Bluetooth Connection <Receive data>



Send data from the other party's Bluetooth device

C "YES"

Data reception starts.

Press "YES" to store the data.

The received data is discarded if no operation is performed for about 30 seconds after it is received.

■ To receive all data at a time

- ► "YES" ➤ Select "YES" when the overwrite confirmation screen appears ➤ Enter your security code
- When the other party requires your session number, enter your security code and then the session number for transferring all data. The overwrite confirmation screen appears.

■ To exit during reception

► (Cancel)

Forwarding Data via Cable Connection <0BEXTM communication>

By connecting the FOMA terminal to your PC via the FOMA USB Cable with Charge Function 02 (optional), you can transfer various data such as phonebook entries or images.

- To transfer data using the FOMA USB Cable with Charge Function 02 (OBEX™ communication), you need to install "ドコモアータイ datalink" (DOCOMO keitai datalink) (p.421) and "FOMA通信設定ファイル" (FOMA communication setting file) in the bundled CD-ROM.
- For installation of "ドコモケータイ datalink" (DOCOMO keitai datalink), etc., refer to the download page of the software. For details on data transfer, refer to Help of the software.
- For installation of "FOMA通信設定ファイル" (FOMA communication setting file) and operating environment, refer to "PC Connection" and "Manual for PC Connection" (PDF) in the bundled CD-ROM.
- Set "USB mode setting" to "Communication mode" before transferring data.

Important

- Ensure that the FOMA terminal and PC are properly connected. An improper connection may not only prevent data transfer but also result in data loss.
- Attempting to transfer data when the battery is low or empty may not only prevent data transfer but also result in data loss. Make sure that the battery is fully charged. Also, check the PC power.
- All the data in the FOMA terminal may be erased if an error occurs while sending all from a PC to the FOMA terminal. Before sending all, check the cable connection, the battery level of the FOMA terminal and the PC power.

Preventing Forwarding Phonebook Image

<Forwarding image>

When using the infrared data exchange/iC communication/Bluetooth communication, copy to microSD card or data transfer function (OBEX™ communication) to transfer phonebook data, prevent transferring still images stored in the phonebook.



■ To forward ▶"ON"


Using Infrared Remote Control Function

- To use the remote control function, download the software supporting the device you use (the remote control key operations vary depending on the software).
- "Gガイド番組表リモコン" (G-GUIDE EPG Remote Control) is pre-installed at the time of purchase.

 →p.271
- Remote control operations may not be available depending on the device.
- You cannot use the infrared remote control function in Self mode.

Remote control

 Point the infrared data port of the FOMA terminal directly at the remote control sensor of a TV, etc. The remote control is effective within about 4 meters away from the device. This may vary depending on the ambient light level.

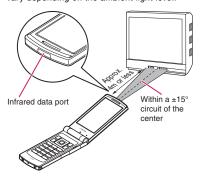

Viewing PDF Data <My document>

Use PDF Viewer to view PDF data downloaded from sites in addition to the pre-installed PDF data (Overseas Use Guide). You can also view PDF data stored in a microSD card.

Downloading from sites → p.194



List screens of My document







Select a PDF data

If the password entry screen appears

Enter the password set on the PDF file.

If a message appears indicating that download resumes

You are attempting to open a PDF data, partially downloaded by page. You can additionally download the remaining pages later on. → p.195



Function menu⇒p.347

■ If a message appears asking whether to download all remaining data

You are attempting to open an incomplete PDF data, partially downloaded due to data acquisition interruption, etc. You have to download the remaining data additionally.

→ p.195

NOTE

- It may take a while to display some PDF files.
- A PDF data may not be properly displayed if it contains formats unsupported by the PDF viewer or complicated designs.
- " \(\begin{align*} \begin{align*} \left flashes while viewing a PDF data stored in a microSD card.



PDF data type icon

lcon	Description
PDF (pale blue)	All pages have been
PDF (blue)	downloaded
PDF (blue)	* PDF data displayed in blue is a
	PDF data whose file size exceeds
	2 MB. It cannot be saved to the
	FOMA terminal.
(pale blue)	Partially downloaded by page
PDF (pale blue)	Incomplete data, partially
N. D. I	downloaded (data transfer
	unavailable)

:File-restricted PDF data (data transfer and copy to microSD card unavailable)

Retrieval method icon

Icon	Description
No icon	Pre-installed
	Downloaded from a site, etc.
냭	PDF data obtained via infrared data exchange, iC communication, microSD card or PC

Available operation icon

lcon	Description		
X	Can be attached to mail (2 MB or smaller)		
Ir	Can be transferred via infrared data exchange or iC communication		
⇒SD	Can be copied to a microSD card		

NOTE

 A PDF data stored in a microSD card, indicated by "m" (blue) or "m" (blue), cannot be viewed on the FOMA terminal.



PDF data list screen (p.343)/ Document list screen (p.345)

• The available functions vary depending on the selected folder. Menu items displayed in the function menu also vary.

Edit title

Display document Select From the last/First page/i-mode bookmark. The document is displayed from the first page.

Document info.....View the PDF data name and file save date and time.

DL remaining data*1......"Downloading remaining data of partially downloaded PDF data"→p.195

Add desktop icon*1*2→p.116

Compose message Compose i-mode mail with a PDF data/document attached.

iC transmission*1*2 → p.341

Send Ir data*1*2 → p.340

Copy to microSD*1*2 → p.329

Move Select Move this/Move selected/Move all and select the destination folder to move the PDF data/document.

Memory info

Sort*1*2.....Sort PDF data by specified criteria.

Delete Select Delete this/Delete selected/Delete all.

Copy to phone*1*3 → p.330

Copy*3....."Copying data to another folder in a microSD card"→p.330

- *1 : Available only on the PDF data list screen.
- *2 · Not available on the list screen of the microSD card
- *3: Not available on the PDF data list screen of the FOMA terminal.

NOTE

<Sort>

- "By source" sorts data in the following order:
 - PDF data downloaded from sites
 - 2 Images obtained via infrared data exchange, iC communication or from a microSD card, etc.

Viewing Documents

<Document viewer>

Use Document viewer to view a document attached to mail or stored in a microSD card.

Available document types

Document type	File extension
Excel (Excel 97 to Excel 2007)	xls, xlsx
Word (Word 97 to Word 2007)	doc, docx
PowerPoint (PowerPoint 97 to PowerPoint 2007)	ppt, pptx
TEXT	txt



■ List/Detail screen of Document viewer





Function menu⇒p.335

Function menu⇒p.344



Function menu⇒p.347

NOTE

- It may take a while to display some documents.
- A document may not be properly displayed if it contains formats unsupported by the Document viewer or complicated designs.

Document list



■ Document type icon


Icon	Description
doc xis ppt txt	Available document types


Available operation icon

Icon	Description	
\boxtimes	Can be attached to mail (2 MB or	
	smaller)	

PDF Data Screen/Document Screen

The PDF data screen and document screen display a scroll bar to check the position in a document and a tool bar to perform various operations.





<PDF data screen>

<Document screen>

Screen operations

Use dial keys and tool bar icons assigned to functions, as well as the function menu, to change the display mode such as zoom in/out.

Scrolling

■Use 🗘 to scroll

■Use 🏻 (マナー)/ (🏚) to scroll

Press $\boxed{(\forall + -)}$ to scroll up and $\boxed{()}$ to scroll down.

Using the toolbar

8: Show/Hide the toolbar (scroll bar)

(Tool): Switch from the page operation to the toolbar operation

(Cancel): Switch from the toolbar operation to the page operation

: Switch the icon display during toolbar operation

: Select icons during toolbar operation

Icon	Description	
Zoom	Display the zoom ratio (zoom ratio specification) ■ (Select)▶Enter a 4-digit number	
Page	Display a page number (page specification) ■ (Select) Enter a 4-digit number	
⊕ / ⊕	Zoom out/in	
	Display the entire page/Display a page at 100%/Fit the page width to the display	
	Display the first/previous/next/last page	
M	Searching for text→p.346	
13/50	Rotate a page 90° clockwise/ counterclockwise	
a	Copying text → p.390	
3	Clipping a page → p.348	
Мар	Showing/Hiding a reduced image of the entire page	
*	Enable/Disable word wrap on the handset display	
?	Display a description of an operation assigned to a toolbar icon or key.	
□/H/ □	Display a single page on the screen/pages continuously/the document in double-page spread.	
■	Display the Bookmark list screen.	

Useful keys on the PDF data screen/ document screen

Key	Description
	Zoom out
2	Display the entire page
3	Zoom in
4	Display the previous page
6	Display the next page
7	Searching for text → p.346
8	Show/Hide the toolbar and scroll bar
0	Display a description of an operation assigned to a toolbar icon or key
#	Search next
*	Search previous

Searching for text

PDF data screen (p.343)/
Document screen (p.345)▶

☐ (Tool)▶Select " → " >Select the text entry field▶Enter text
Some symbols may not be searched for.

Select a checkbox (□) of a condition ☑ (Search)

When the text is found, the page containing the text appears.

Press * to search from the current position to the beginning of the page under the same condition.


Press # to search from the current position to the end of the page under the same condition.

■ To search in Excel

Select "Search in page" or "Search in file". Search is performed in the current sheet for "Search in page". Search is performed in the entire current document (Excel) for "Search in file".


Using a bookmark to view a PDF data

 If bookmarks are already set in a PDF data, follow the steps below to jump to the location (page) where a bookmark is set.

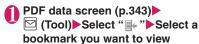

The location (page) where the bookmark is set appears.

If there is no bookmark in the PDF data, a message appears indicating that no bookmark is found.



If you press (() at a bookmark with +, other bookmarks under the bookmark appear.

Using "i-mode bookmark" to view a PDF data

- i-mode bookmark allows you to set a bookmark anywhere so that you can immediately jump to any page or location (up to 10 bookmarks in one PDF data).
 - PDF data screen (p.343)

 ch (FUNC)

 "i-mode bookmark"

 Select an i-mode bookmark you want to view

The location (page) appears in the same display mode (zoom, etc.) as the one used when you set the bookmark.

■ To add an i-mode bookmark

► ► (Add) ► "YES" ► Enter a title of the i-mode bookmark

The current display mode (page, zoom, etc.) is saved as an i-mode bookmark.

- To edit the title of the i-mode bookmark
- ►ch (FUNC)►"Edit title"►Enter a title
- To delete the i-mode bookmark

 | Ch (FUNC) | Delete | YES"
- To delete all i-mode bookmarks set in the PDF data
- ch (FUNC)▶"Delete all"▶Enter your security code▶"YES"

PDF data screen (p.343)/ Document screen (p.345)

 When opening from a site or mail or when opening a microSD card data, available functions vary.
 Menu items displayed in the function menu also vary.

Zoom out, Zoom in·····Zoom out/in.

View types·····Select Zoom to/Fit page/Actual size/ Fit width for the page display size.

Go toSelect First page/Previous page/Next page/Last page/Specified page.

Search ····· "Searching for text" → p.346

Page layout¹······Select Single page/Continuous/ Continuous Facing for the page display style.

Display link*1.....Select a URL to access the site, select a phone number to make a call, or select a mail address to compose i-mode mail.

* The scroll and tool bars do not appear when you display the link destination in a PDF data. Press CLR to return to the normal PDF data screen.

Hide tool/scr.bars⇔Show tool/scr.bars······Hide/ Show the tool bar and scroll bar.

Map On ⇔ Map Off*2······Show/Hide a reduced image of the entire page.

Rotate view Select Clockwise/Counterclockwise.

Bookmark*1 → p.347

Copy*1.....Copy text.

i-mode bookmark*1 → p.347

Mark*1 Add/Change/Delete a mark. Up to 10 marks can be set.

Capture screen*1······"Clipping a page" → p.348

Change disp. Mode*3.....Enable/Disable word wrap on the FOMA terminal display.

Compose message · · · · · Compose i-mode mail with a PDF data/document attached.

Add desktop icon*1→p.116

DL remaining data*1······"Downloading remaining data of partially downloaded PDF data" → p.195

Save Save the currently displayed PDF data/document.

Help·····Display a description of an operation assigned to a kev.

Document property*1······Display the PDF data properties.

End······Close the current screen.

Document info.....View the PDF data name and file save date and time

Delete this

- *1 : Available only on the PDF data screen.
- *2: Available only on the Document screen.
- *3: Only available for Word/Text data.

Clipping a page

Clip a part of the PDF data screen and save it as a JPEG image.



The clipped page is saved.

NOTE

- An image clipped out of a PDF data that is prohibited to be output from the FOMA terminal cannot be output from the FOMA terminal, e.g. attached to mail or copied to a microSD card.
- You may not be able to clip an image if copying the PDF data is prohibited.

Viewing e-books/e-comic

Use Manga&Book to view XMDF (extension zbf) or TEXT (extension zbk) e-book/e-comic downloaded from a website or stored in Data box or microSD card (Movable contents folder).



Manga&Book list/detail screen







Function menu⇒p.349



Function menu⇒p.350

NOTE

- If an e-book/e-comic contains information about voice/video playback or backlight flashing, you can view the e-book/e-comic but the voice/video playback or backlight flashing is not available.
- You can download or save a password-protected e-book/e-comic, but cannot view the e-book/ e-comic
- Manga&Book supports the mask function (hiding/ showing some text), character color specification, ticker, etc.

Manga&Book list



e-book/e-comic type icon

Icon	Description
	Stored in the FOMA terminal (Phone)
	Stored in a microSD card and can be moved to the FOMA terminal (Phone)
O _{man}	Restricted by the FOMA card security function

: With file restrictions

With playback restrictions (" " turns to " " when the playback count, period or limit expires)

Can be viewed only when the inserted FOMA card was also used when the e-book/e-comic was saved

Can be viewed only when the phone and inserted FOMA card were also used when the e-book/e-comic was saved

Retrieval method icon

	lcon	Description	
	No icon	Pre-installed	
•		Downloaded from sites, etc.	

Available operation icon

lcon	Description	
	Unread/Read	
*S *S	Data that can be moved to a microSD card	

Can be moved only when the inserted FOMA card was also used when the e-book/e-comic was saved

Can be moved only when the phone and inserted FOMA card were also used when the e-book/e-comic was saved

FUNC Manga&Book list screen (p.348)

 The available functions vary depending on the selected folder. Menu items displayed in the function menu also vary.

Edit title

Information·····Display the e-book/e-comic file name, the save date and whether the e-book/e-comic can be moved to a microSD card.

Move to microSD → p.330

Move to phone* → p.331

Move Select Move this/Move selected/Move all and select the destination folder to move e-book/e-comic.

Add desktop icon → p.116

Edit file name ····· Cannot enter single-byte symbols ("-" and "_" can be entered) or pictograms.

Reset title Reset the title to default.

Memory info

Sort ····· Sort e-books/e-comics by specified criteria.

DeleteSelect Delete this/Delete selected/Delete all.

*: Available only for e-books/e-comics stored in the movable contents folder. If "Move to phone" is performed. Read icons turn to Unread.

Screen operations

Key	Vertical writing	Horizontal writing	Comic view	
Ō	Display the previous page	Return to the previous line	Return to the previous frame	
·	Display the next page	Proceed to the next line	Proceed to the next frame	
Q	Proceed to the next line	Display the previous page	Proceed to the next frame	
<u> </u>	Return to the previous line	Display the next page	Return to the previous frame	
(Move)	Show the Move menu. "To top"/"To end"/"Table of contents": Display the first/last/table of contents page. "Move by %": Display a page whose position is specified by percentage (2-digit number from 01 to 99%). "Move back", "Move forward": Display the previous/next page in history.			
(Book mark)	Show the Bookmark menu. "Insert bookmark1"/"Insert bookmark2": Place Bookmark1/2 in the current page. "Move to bookmark1"/"Move to bookmark2": Display the page of Bookmark1/2.			

FUNC Manga&Book screen (p.348)

Settings

Font size ······Select Large/Standard/Small.

Text direction ·····Select Vertical/Horizontal.

Ruby ·····Select ON/OFF.

Vibrator ····Select ON/OFF.

Display size ·····Select Normal/Double.

Backlight ·····Follow the "Lighting" backlight settings (Standard) or turn on the light all the

Book info·····Display the e-book/e-comic title, author, etc.

time (All time ON).

Help·····Display a description of an operation assigned to a key.

NOTE

- Settings in the "Settings" may become invalid depending on the e-book/e-comic.
- The FOMA terminal does not support electronic dictionaries.
- Manga&Book supports the Web To function (does not support the Phone To/AV Phone To and Mail To functions). → p.197

Convenient Functions

Using PedometerPedon	leter	352
Multiaccess	cess	354
MultitaskMult	itask	355
Viewing Data in Chronological OrderLife history vi	ewer	356
Turning Power On/Off Automatically Auto power ON/	OFF	357
Changing the Shortcut Function of the Channel Keych-button se	tting	357
Sorting the Main Menu		357
Using the Alarm FunctionA	larm	358
Managing Schedules Schedules	dule	358
Saving To Do List To D	o list	362
Setting the Alarm Mode	tting	363
Reading Out Alarm Content		365
Using the Security Folder		365
Saving Your Own Name and Image My P		365
Recording Your or the Other Party's Voice		367
Recording the Other Party's Voice Automatically During a Call Auto voice m	emo	368
Recording and Playing Alarm Tones and On Hold Tones		368
Checking Call Duration/ChargeCall		369
Setting and Notifying Call Charge Upper Limit		370
Using the FOMA Terminal as CalculatorCalcu		371
Composing Text Memo Text m	_	371
Using DictionariesDictio		37
Using Earphone/Microphone with Switch Earphone/Microphone with switch	vitch	372
Using Bluetooth FunctionBluet	ooth	374

Using Pedometer

<Pedometer>

Measure walking steps and time, then check your daily amount of steps walked, walking distance, and calories/fat burned.

Measurement

- To get a more accurate step count, walk at a steady page
- Pedometer accurately measures steps no matter which direction the phone is facing, but conditions such as irregular walking patterns or vibration (measurement stops when the phone vibrates) may prevent an accurate step count. Walking distance and calories/fat burned are calculated based on your preset height, weight, and stride. Use measurement data as an approximate guide.
- When you start walking or change walking pace, the display does not change to avoid miscount by judging whether you start walking. The steps appear after you walk 5 seconds (10 steps) or so.

■ Pedometer cautions

- If the time is not set, this function is not available.
- Before operating the pedometer, stop in a safe place. We cannot accept any responsibility for accidents occurring while operating it.
- Do not use the pedometer for any purposes other than walking. When walking and using the pedometer, make sure you are in a safe place.
- You can set your stride automatically in "Calibration" (p.354).
- When placing the phone in Carry Case S01 (optional), attach the case to your belt, etc.
- When using a bag, pouch or other holders, place the phone in a pocket or partition.

● きっちり歩数 (Reference steps)

When you continue walking for 10 minutes or longer at a pace of 90 or more steps per minute, the steps are counted as reference steps. Other walking is measured as steps. Steps and reference steps are counted separately, so you can easily check and compare distance, time, etc.

Starting measurement

- When measurement starts, mappears on the standby screen. Even after Pedometer exits, measurement continues until "Set pedometer" is set to "OFF".
- Measurement data are not reset even when "Set pedometer" is set to "OFF". Data is added after "Set pedometer" is set to "ON" and measurement resumes.

 Before using Pedometer, you can set conditions such as your height, weight, and stride. Properly set data will give you an accurate step count.



Measuring for the first time

▶"OK"

Setting conditions → p.353



Function menu⇒p.353

② "SETTINGS"▶"Set pedometer"▶ "ON"

■ To end ▶"OFF"

NOTE

- Steps are saved every 10 minutes or so.
- The following are the maximum that can be displayed:
 - 歩数 (Steps)…999,999 steps
 - 歩行距離 (Distance)…999,999 km
 - きっちり歩数 (Reference steps)…999,999 steps
 - 歩行時間 (Time)…999:59:59
 - 消費カロリー (Calories burned)…999,999 kcal
 - 脂肪燃焼量 (Fat burned)…999,999 g
- Measurement is not performed when the power is off.
- Steps may not be counted accurately in the following circumstances:

[Irregular movement of the FOMA terminal]

- A bag containing the FOMA terminal hits your legs or waist and makes irregular movements
- The FOMA terminal hangs from your waist or han

[Irregular walking patterns]

- You shuffle or walk irregularly with sandals, geta, etc.
- · You walk in crowded places

[Shakes or quakes occurring]

- · You stand up or sit down
- · You play sports other than walking
- · You go up or down stairs or steep slopes
- The FOMA terminal shakes vertically or horizontally when you are in a vehicle (bicycle, car, train, bus, etc.)

[Jogging or walking extremely slowly]

FUNC Pedometer screen (p.352)

All data reset Reset all data.

Add desktop icon → p.116

Checking measurement data



Pedometer screen (p.352) "WALK"

Today's measurement data appear.



Function menu⇒p.353

■ WALK screen/DATA

- (Select): Change to the list display.
- (GRAPH): Change to the graph display.
- : Switch between DAILY, WEEKLY and MONTHLY displays.
- : Display the previous/next day, previous/next week or previous/next month.

■ WALK screen/GRAPH

- (Change): Switch between steps, distance and calories displays.
- (DATA): Change to the detailed display.
- (D): Switch between DAILY, WEEKLY and MONTHLY displays.
- Display the previous/next day, previous/next week or previous/next month.

■ WALK screen/LIST

- (Select): Change to the detailed display of the selected day.
- (Change): Change the list display in the following order: Steps/Reference steps → Distance/Time → Calories/Fat burned.
- : Move the cursor to the previous/next day.
- : Switch between previous and next months.

Data display and storage period

■ Data display

Display	Data		
DAILY	DATA	Accumulation of the day	
	GRAPH	Hourly	
	LIST	Daily	
WEEKLY	DATA	Accumulation of the	
		week	
	GRAPH	Daily	
	LIST		
MONTHLY	DATA	Accumulation of the	
		month	
	GRAPH	Daily	
	LIST		

^{* &}quot;0" appears when there is no measurement data

■ Data storage

 Measurement data are stored for the following period:

Hourly data: 31 days (32 days including today) Daily data: 365 days (366 days including today)

- When the period expires, the data is deleted.
- If the date/time changes, data later than the set date/time and data earlier than the storage period will be deleted.

FUNC WALK screen (p.353)

Set pedometer → p.352

Target of WALK → p.353

Today data reset Reset today's data.

Setting conditions



Pedometer screen (p.352) "SETTINGS" Select any item:

Set pedometer → p.352

Height/Weight······Enter Height and Weight after entering your security code.

Stride.....Set your stride. Calibration (p.354) is available to set your stride automatically.

Target of WALK······Set your target steps, distance and calories.

Using Calibration to set your stride

Walk to the point whose distance you know, and your stride is calculated from the number of steps. The calculated stride can be set as your "Stride".

- "Calibration" can be set when "Set pedometer" is set to "ON". → p.352
- Pedometer screen (p.352)►
 "SETTINGS"►"Stride"►
 ch (FUNC)►"Calibration"►Enter
 the distance► (START)
- After walking the entered distance, press ☑ (STOP)▶"YES" ▶☑ (Finish)
 - To cancel calibration
 - ▶ (CANCEL)

NOTE

 If the vibrator works while measuring your stride using Calibration, the measurement will be invalid.

Multiaccess

<Multiaccess>

This convenient service lets you use multiple lines simultaneously.

- Multiaccess Combinations → p.446
- The following three communication lines can be used simultaneously for FOMA:

Voice call	1 line
i-mode, i- α ppli, i-mode mail, packet communications via a PC	1 line
SMS	1 line

NOTE

 Communications charges apply for each line used during multiaccess.


When you receive a call during communication

Receiving i-mode mail during a voice call

When you receive i-mode mail during a voice call, the in-call screen remains displayed while receiving the i-mode mail. You can read the i-mode mail without interrupting the call.



The received result screen appears. Switching tasks → p.355



- Check the i-mode mail
 Reading i-mode mail → p.163
- (MULTI) Select " (Talking)"
 The voice in-call screen appears.
- Receiving a voice call during i-mode/ packet communication

When you receive a voice call while using i-mode, receiving or sending i-mode mail or using packet communications by connecting the FOMA terminal to a PC, the voice call ringing screen appears, and you can answer the call without ending i-mode or packet communications.

<Example: When a voice call arrives during i-mode>






The voice in-call screen appears, and you can talk.

- To return to the i-mode screen without answering the voice call
- ► MEW (MULTI) Select " ☐ " (Browser)

The caller hears a ring tone without a message.



The call ends and the i-mode screen reappears.

- To return to the i-mode screen without ending the voice call
- ► MENU (MULTI) ► Select " \(\begin{align*} \textit{" (Browser)} \end{align*}

To establish another communication during communication

Use another line to establish another communication without interrupting your current communication.


 To switch screens during multiaccess, select a preferred function in the task icon display area.
 →p.355

Making a voice call during i-mode

While connecting to i-mode or sending/receiving mail, make a voice call without ending i-mode.

During i-mode▶ (MULTI) (1 second or longer)

The standby screen appears.



Making voice calls → p.52

R To end the call, press

The call ends and the i-mode screen reappears.

■ To return to the i-mode screen without ending the voice call

► MENU (MULTI) Select " 膏 " (Browser)

Multitask

<Multitask>

Multitask enables you to use multiple functions simultaneously.

- Multitask Combinations → p.447
- Active task icons appear on the task change screen (p.355) during multitask. When multiple tasks are active, change tasks using the icons.
- Call charges apply to your current call even if you are using another function during a voice call.

Activating tasks (functions)

Activate a new task (function) without ending the active tasks.

While a task is active (MULTI)
The "Task change" screen (p.355) appears.

(MENU) ► Select a new task

- To access the Mail menu
- ► M (MAIL)
- To access a function assigned to (p.182)
- **▶** i

- To access a function assigned to ch (p.357)
- **▶**ch


NOTE

- Some functions are activated as another group's function
- In the following cases, a task is added to compose mail while viewing another mail:
 - · Accessing the Mail menu to compose mail
 - Accessing the Mail menu to compose SMS
 - Accessing the Mail menu to create Decome-Anime
 - Using a Deco-mail template to compose Deco-mail
 - Using a Decome-Anime template to create Decome-Anime
 - Using Reply/Reply with quote/Forward for received mail
 - · Editing sent mail
 - Editing draft mail

Switching tasks

When multiple tasks are active, switch them or end all tasks at once.

While multiple tasks are active



■ To switch tasks

► Select a task icon

■ To display the Main menu

► MENU (MENU)

■ To display the standby screen

When you press on the standby screen, the Task change screen reappears.

- * You can open the standby screen without opening the Task change screen by pressing [IIII] (1 second or longer) while a task is active.
- To end a task
- "Quit selected" or "Quit all function"

Viewing Data in Chronological Order

<Life history viewer>

View images you stored, mail sending/receiving history, etc. in chronological order.


- The following data types are available:
 - · JPEG still images and images
 - · Moving picture, i-motion
 - Schedule
 - Mail sending/receiving history



"Guide to the Life history viewer screen" → p.356

- To reduce/enlarge the time axis
- ► M (Red.)/ (Enl.)
- To display the selected data





When a moving picture or i-motion is selected, it is played on the Life history viewer enlarged screen.

■ To adjust volume of moving picture/ i-motion






Function menu⇒p.357



The function corresponding to the data type is activated, and data appears.

Alternatively, press F in Step 2.

Guide to the Life history viewer screen



- ① Time axis
- ② Time axis status display



(3) Icon

Still image, image: Image thumbnail Moving picture, i-motion: Moving picture icon Schedule: Schedule icon

Mail sending/receiving history: Mail sending/ receiving history icon

4 Data properties

Still image, image, moving picture, i-motion:

Not shown

Schedule: Schedule title

Mail sending/receiving history: The sender for received mail, the recipient for sent mail

⑤ Data type

: Still image, image

Moving picture, i-motion

: Schedule

Received/Sent/Transmitted mail history

⑥ Date and time

Still image, image, moving picture, i-motion:

Shoot/Update/ Save date and time

Schedule: Start date and time

Mail sending/receiving history: Received/Sent date

and time


(7) Title

Still image, image, moving picture, i-motion: Title Schedule: Schedule title

Mail sending/receiving history: The sender for

received mail, the recipient for sent mail



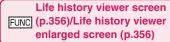

Disp. enlarge*······Display the Life history viewer enlarged screen.

Open······Activate a function corresponding to the data type, and display the data.

Display setting Select which type of data to display with Life history viewer. Alternatively, select Select all/Release all/Default from the function menu when selecting the data type.

Add desktop icon* → p.116

Enlargement, Reduction

Reload Update displayed information.

*: Not available on the Life history viewer enlarged screen.

Turning Power On/Off Automatically <Auto power ON/OFF>

Set the power to automatically turn on or off at the specified time.

- The power does not turn off while another function is active, even when the Auto power OFF time is reached. In addition, the power does not turn off when the alarm notification time or the i-αppli Autostart time is the same as the Auto power OFF time. The power turns off after the function is finished.
- If the power is off, the Music&Video Channel program download, reserved Software Update or Timer recording is not available.

<Example: To turn the power on automatically>



■ To turn the power off automatically • "Auto power OFF"



■ To release Auto power ON/OFF

"OFF"

NOTE

 Set "Auto power ON" to "OFF" and then turn off your FOMA terminal near electronic equipment that contains high-precision mechanisms or handles delicate signals, or inside an airplane, hospital, or other area where use is prohibited.

Changing the Shortcut Function of the Channel Key

<ch-button setting>

Change the function to activate by pressing ch on the standby screen or the Task change screen.

- i-Channel, Camera, Schedule, Music Player, Music&Video Channel and 1Seg can be assigned.
- "Settings/NW Service" "Other settings" • "ch-button setting"
 - To reset to default

Press ch (FUNC) on the ch-button setting screen, and select "Reset ch-button".

Select a function to assign

Sorting the Main Menu

Sort menus supporting user customization. You can also sort sub items.

- In the pre-installed menus, "拡大メニュー" (Enlarged menu) of the Kisekae Tool can be sorted.
- <To sort the main menu>
 - While displaying menu items that can be sorted Highlight a new position ch (FUNC) Replace item Select the menu item
- "Sort"▶"OK"
 - To select an item under the sub menu Select "Select sub item", then select menus to sort, and then select "Sort".

NOTE

● When the "拡大メニュー" (Enlarged menu) is set for the Kisekae Tool, select "お気に入り" (Favorite) from the main menu before performing Step 1.


Using the Alarm Function

Up to 10 alarms can be added.



- To switch on/off without changing the current settinas
- ► Highlight an alarm ► (ON/OFF)

"ON" and "OFF" toggle each time you press .



To check the current

settings


Select a setting item



Alarm Alarm1 8:00 1 time Clock Alarm Tone Level 4 Snooze 5times/5min Auto power OFF

Alarm detail Function menu⇒p.358

Highlight an item to set ► (Edit)



Edit title

Time setting......Enter time to sound an alarm.

Repeat······Select 1 time/Daily ()/Select day (W).

Alarm tone Select an alarm tone from Clock Alarm Tone, Melody, i-motion, Music or another folder

Volume Use 🚺 to adjust the alarm volume.

Illumination Select a flashing color for illumination.

Pattern Select a flashing pattern for illumination

Snooze setting ····· Set whether to use a snooze (repeating) alarm.

> ON.....Enter the number of times to ring (01 to 10 times) and the ringing interval (01 to 10 minutes). The alarm tone (about 1 minute) rings repeatedly for the set number of times at set interval

OFF.....Enter the ringing time (01 to 10 minutes). The alarm tone keeps sounding for the specified duration.

Auto power ON Set whether to automatically power on at the alarm time.



NOTE

- When PIN1 code entry set is set to ON and the power is automatically turned on to sound an alarm, the Clock Alarm Tone sounds even if a melody, i-motion or song downloaded from sites is set as an alarm tone.
- Set "Auto power ON" to "OFF" and then turn off your FOMA terminal near electronic equipment that contains high-precision mechanisms or handles delicate signals, or inside an airplane, hospital, or other area where use is prohibited.

Alarm list screen (p.358)/Alarm FUNC detail screen (p.358)

Edit

Display detail*.....Display the alarm content.

Finish (Set this) Activate an alarm.

Release this Release an alarm.

Release all ······ Release all set alarms.

*: Available only on the alarm list screen.

Managing Schedules <Schedule>

An alarm tone sounds at the specified date and time, and the message and animation notify you of the added content. You can also add holidays or birthdays. Birthdays set in the phonebook will be automatically added. Added schedules and holidays can be quickly viewed on the calendar. i-schedule is a service that allows you to download sports schedule, artist event information, etc. to your Schedule and automatically update information.

i-schedule links to Data Security Service and updates information automatically. → p.140

■ Data displayed on Calendar as Schedule

Data	Description
i-schedule	View i-schedule downloaded from sites.
Schedule	View added schedules or holidays.
Birthday	View birthday data added from the phonebook.
Weekly weather	View received whether report (8 days from today).

NOTE

 To download i-schedule or receive weekly whether report, i-concier subscription (p.210) is required.

Adding schedules

A variety of methods are available: add regular meeting or other schedules to a certain day of the week, set an alarm tone or animation appropriate for the content, and more.

- You can display/set dates from January 1, 2000 to December 31, 2037.
- Press ▲ (マナー) or ▼ (▲) to switch months.
- Up to 2500 entries can be added. Multiple schedules can be added to a single day.
- Schedule alarms → p.363







Function menu⇒p.360 ☑ (New)▶"Schedule"



Select any item:

Edit subject Enter a schedule name and select an icon. Entered content appears at the alarm time.

All day Select ON to activate schedule

Date setting (Start/End) ····· Set the start/ end date and time for a schedule.

Repeat ······ Select 1 time/Daily ()/ Weekly (W)/Monthly (M)/Annually (Y).

- Alarm ··· ·· Select ON/ON/Set time (01 to 99 minutes)/OFF.
- 🔊 Alarm tone, 🤝 Illumination, 🤝 Pattern → p.358 (Alarm settings)
- Edit place Enter a place. Edit details Enter the schedule content.



NOTE

- When "All day" is set to "ON", the "Date setting" start time and end time cannot be set.
- If the "Date setting" Start Time and End Time are set on different days, "Weekly"/"Monthly"/ "Annually" can be set only if the time between the two is within 7 days. If the received schedule does not meet this condition, the "Repeat" setting is reset.
- When set to "ON/Set time", the alarm sounds only at the specified date and time before the schedule. The alarm does not sound at the date and time set for the schedule.
- When the alarm timings are duplicated, the priority is assigned as follows:
 - Schedule with "All day" set to "ON"
 - 2 Start Time under "Date setting" of Schedule
 - ③ Schedule with "All day" set to "ON"
 - 4 Start Time under "Date setting" of i-schedule
- If a day of the week set as start and a day of the week set in the Select day repeat setting are different, priority is given to the day set in the Select day repeat setting and the schedule is added to the first specified day after the start time.

The public holidays are set based on 「国民の祝日 に関する法律及び老人福祉法の一部を改正する法 律」(平成17年法律第43号までのもの)(The Public Holiday Law and the revised laws of Welfare Law for the Aged (up to Law No. 43, 2005)). The Spring and Autumnal Equinox Days are determined by the government on February 1 in the previous year, and may differ (as of April, 2009).

Adding holidays

- Up to 100 holidays can be added. The national public holidays stored at the time of purchase are not included in this number.
- You can add only a single holiday per day.
- Schedule screen (p.359)

 ☑ (New) "Holiday"
- Select any item:
 - **Date setting**·····Enter a date to add a holiday.
 - Repeat······Select 1 time/Annually (Y).
 - Edit holiday Enter the holiday content.
- (Finish)

Checking schedules/holidays/ birthdays

Check schedules, holidays or birthdays.

Schedule screen (p.359) Select a date with Schedule/Holiday/
Birthday added

The content of the selected date appears in the list display.

Added Schedule/Public holiday/ Holiday/Birthday/i-schedule (Left end of i-schedule is colored orange)



Function menu⇒p.360

Select an item

If a phone number, URL or mail address is contained in the schedule content, the Phone To, Web To or Mail To function is available





Function menu⇒p.360

When Birthday is added to Phonebook

Use the phonebook (Phone) to enter a birthday. \rightarrow p.87

The entered birthday is automatically added, and displayed on the Schedule screen.

 You can make calls or send mail from the Birthday detail screen (p.360).

NOTE

- Birthdays can also be viewed by selecting on the standby screen. Select to display the Birthday detail screen. If multiple birthday entries are added to the same date, the detail screen that will appear is for the birthday that appears on the top of the Schedule list screen, etc.
- Birthday stored in "My Profile" cannot be added.

FUNC

Schedule screen (p.359)/ Schedule list screen (p.360)/ Schedule/Holiday detail screen (p.360)

New, Edit

Copy Copy the schedule or holiday.

Connect to Center → p.141

Quick search*1 → p.188

i-schedule list ······View the i-schedule list screen.
→p.361

Filter on.....Display only schedules linked to the selected schedule icons.

Filter off, No. of schedules*2

Release secret*3 → p.128

Compose message*3 → p.146

Attach to mail *3......Compose i-mode mail with a schedule attached.

Add desktop icon·····Place the schedule on the desktop. The Schedule screen appears when the icon is selected on the desktop. → p.116

iC transmission*3, iC trans. all → p.341

Send Ir data*3, Send all Ir data → p.340

Send one/Bluetooth^{*3}, Send all/Bluetooth → p.341

Copy to microSD*3 → p.329

Reset holiday*2.....Reset national public holidays to default. The added holiday data is deleted.

Delete Select Delete this/Delete selected/Delete all/Delete past.

- When Delete past is selected, all entries before the date with the cursor on the Schedule screen are
- When Delete all/Delete past is selected, further select Schedule/Holiday/All.
- *1 : Available only on the detail screen.
- *2: Available only on the Schedule screen.
- *3: Available only for schedules.

NOTE

- Selecting "Holiday" or "All" under "Delete all" resets holidays to default.
- i-schedule cannot be deleted.

<Attach to mail>

• i-schedule data is attached as a normal Schedule data.

Using i-schedule

i-schedule downloaded from sites or automatically received weekly weather information, as well as normal schedules or holidays, appear on the Schedule screen.

- Downloading schedule data and i-schedule → p.195
- "Guide to the i-concier screen" → p.211

Viewing i-schedule

You can view a list of i-schedule on the i-schedule list screen.



Schedule screen (p.359)

(i-schedule)

To search i-schedule by i-mode

▶"iスケジュールリストへ" (To i-schedule list)▶"YES"



Function menu⇒p.361

To check on the detail screen

▶Select a schedule

Function menu → p.361

NOTE

- If no i-schedule is stored, the description appears.
- When each i-schedule data is edited, the original data remains unchanged, and a new schedule data is added.

Checking the weather report

Check the weekly weather report automatically received via i-concier information on the Schedule screen.

 If weekly weather report data is received, reception. or i-concier display is not performed, and the weekly weather report updates automatically.



Receive information automatically



Select a date on the Schedule screen (p.359)

The weather report for the day appears on the Schedule list screen (p.360).



i-schedule list screen (p.361)/ i-schedule detail screen

Quick search* → p.188

Add desktop icon → p.116

Delete Select Delete this/Delete selected/Delete

*: Available only on the i-schedule detail screen.

Saving To Do List

<To Do list>

You can manage your schedule by adding entries to To Do list. You can also set alarms for entries.

• You can set dates from January 1, 2000 to December 31, 2037.

Adding/Editing entries

- Up to 100 entries can be added.
- You must enter "Content". You cannot add a To Do list entry without "Content".
- To Do list alarms → p.363

<Example: To add an entry>







Function menu⇒p.362





To edit the entry

▶ch (FUNC)▶"Edit"

The function key displays (New) when no entry is stored, and (Edit) when any.

Select any item:

Edit To Do list Enter the content.

Due date Set the due date.

Enter date Enter the date and time.

Choose date Select a date from the calendar, then set the time.

No date Do not set the due date.

Priority ····· Select / / / None.

→p.358 (Alarm settings)



Category ····· Select None/Personal/ Holiday/Travel/Business/Meeting.

Alarm ····· Select ON/ON/Set time (01 to 99 minutes)/OFF.

🔊 Alarm tone, 🔛 Illumination, 🌄 Pattern

Completion date*.....Set the completion date.

Enter date Enter the date.

Choose date Select a date from the calendar

No date Do not set the completion

*: Available only when an existing entry with "Status" set to "Completion" is edited.



(Finish)

NOTE

• When set to "ON/Set time", the alarm sounds only at the specified time before the schedule. The alarm does not sound at the date and time set for the To Do list entry.



To Do list screen (p.362)/To Do list detail screen (p.363)

New, Edit → p.362

Change status ······ Select Plan/Acceptance/ Request/Provisional plan/Confirmation/Denial/ Completion/Substitution. When "Completion" is selected, set the completion date.

Category display*.....Select All/None/Personal/ Holiday/Travel/Business/Meeting to display by category.

Sort/Filter*.....Sort entries in the specified order, or filter and display only the specified entries.

Add desktop icon* → p.116

Attach to mail Compose i-mode mail with an entry attached.

iC transmission, iC trans. all → p.341

Send Ir data, Send all Ir data^{*} → p.340

Send one/Bluetooth, Send all/Bluetooth* → p.341

Copy to microSD → p.329

DeleteSelect Delete this/Delete selected*/Delete completed*/Delete all*.

- · When Delete completed is selected, all completed entries are deleted.
- *: Available only on the To Do list screen.

Checking entries

To Do list screen (p.362)▶Select an entry

The status appears. The blue icon changes into red after the set date has passed.

The priority appears.

To Do list:All control of the status appears and the status appears.

To Do list the status appears appears.

Function menu⇒p.362





Function menu⇒p.362

Setting the Alarm Mode Alarm setting>

Set "Operation preferred" or "Alarm preferred" for the alarm setting of "Alarm", "Schedule", "To Do list" or "Booking program".

 "Timer recording" gives an alarm regardless of this setting.



When set to "Operation preferred", the alarm is given only when in standby.

When set to "Alarm preferred", the alarm is given even when operating the FOMA terminal or during a call.

Alarm notification action

When you set an alarm

After setting the alarm in "Alarm", "Schedule", "To Do list", "Booking program" or "Timer recording", the icon appears on the standby screen.



Icons on the standby screen

- . Alarm set
- : Before the set time on the preset date

At the preset time

Alarm is given for each function as shown in Table 1 (p.364).

 An animation displayed when an alarm is given varies depending on the set icon or category.
 However, if you set i-motion as an alarm tone, the alarm is given with the video or audio.

NOTE

- The volume of the "Schedule" and "To Do list" alarms is determined by "Phone" under "Ring volume".
- The volume of the alarm tone during a call is the same as "Volume".
- During a call, an alarm is not given in snooze mode even when the Snooze setting is set to "ON"
- Even if i-motion is set under "Alarm tone", an alarm is given with in alarm tone and animation when i-motion cannot be activated, e.g. during a call
- If the auto manner mode set/release time is set for the same time as "Alarm", "Schedule", "To Do list", "Booking program" or "Timer recording" alarm, the alarm sounds after the manner mode is set/ released

<Alarm notification priority sequence>

- If "Alarm", "Schedule", "To Do list", "Booking program" and "Timer recording" alarms are set for the same time, the priority applies:
 Alarm @Timer recording @To Do list
- ④ Schedule ⑤ Booking program

 If the alarm fails, the "♣ " (Missed alarm)/" □ "
 (Missed program) desktop icon appears on the standby screen to let you know. → p.364

Stopping the alarm

Alarm sound for Alarm

When the Snooze setting is set to "OFF" Press any key to stop the alarm, animation and i-motion. Press any key again, and the release tone "pipip" sounds, and the animation, etc. disappears. When the Snooze setting is set to "ON"

When the Snooze setting is set to "ON"

Press any key to stop the alarm, animation and i-motion. The alarm message "Snooze..." appears, then the alarm is given again at set interval (minutes). Pressing — while "Snooze..." is displayed emits the release tone "pipip", and snooze is released.

Other alarm tones

Press any key to stop the alarm, animation and i-motion. The alarm message remains displayed. Press any key again to clear the alarm message (For Timer recording, when "Activate TV w/ alarm" is set to "OFF").

■ When a call arrives during alarm notification Alarm notification stops and the call is received. The "Alarm" snooze is released.

Checking alarm content if notification fails

If the alarm fails, the " (Missed alarm)/" (Missed program) desktop icon appears on the standby screen. Check the missed alarm content (Missed alarm info) from the desktop icon.



On the standby screen ► ■ ► Select " 🚔 " (Missed alarm) or

" 🚟 " (Missed program)

The Missed alarm info appears.

■ To clear the desktop icon

►CLR (1 second or longer)

Once you clear the desktop icon, you can no longer view the missed alarm information.



Check the content

When CLR is pressed, the standby screen reappears and the desktop icon disappears.

[Table 1] Alarm notification actions

Status	Alarm	Schedule/To Do list1Seg Booking program/Timer recording
In standby During i-mode* Sending/Receiving mail*	An alarm is given with the set action. An animation appears on the display/indicator display.	An alarm is given repeatedly for about 5 minutes. An animation appears on the display/indicator display. For Timer recording, an alarm sounds for about 2 seconds, about 1 minute before the start time. After the alarm ends, the 1Seg screen appears.
When power off	The "Auto power ON" setting applies. When set to "OFF", the desktop icon does not appear even after the power is turned on.	An alarm is not given. The setting remains effective. Recording does not start if the power is off about 1 minute before start time. Desktop icon does not appear after powered on.
During a call*	An alarm sounds from the earpiece. An animation appears on the display.	
While the earphone/ microphone is connected	An alarm is given in the same way as for "In standby". An alarm sounds from the headset and speaker according to the "Headset usage setting".	
While in Dial Lock/Omakase Lock	An alarm is not given. Recording does not start if locks are not released about 1 minute before start time. Desktop icon appears after locks are released.	
While in Original lock	riginal lock The alarm of Alarm/Schedule/To Do list is not given. The desktop icon appears. The Booking program/Timer recording alarm is given.	

^{*:} Actions when set to "Alarm preferred". When set to "Operation preferred", the " (Missed alarm) and " (Missed program) desktop icons appear on the standby screen.

Reading Out Alarm Content

When an alarm is given while the FOMA terminal is folded, pressing \boxed{r} stops the alarm, and the alarm content starts to be read out.

- Reading out starts only when "Info notice setting" is set to "ボイス" (Voice) (Japanese mode).
- The voice may be heard by others during read out, so move to a location where it will not disturb other people.
- The readout volume is "Level 2".
- When "Select language" is set to "English", readout does not work.
- During alarm notification, press 🗹

The following contents are read out:

Alarm type	Content
Alarm	Current time
Schedule	Up to 20 double-byte characters of the stored schedule name
To Do list	Up to 20 double-byte characters of the stored entry

NOTE

- A schedule stored as secret data will not be read out (except in "Secret mode" or "Secret data only mode").

Using the Security Folder

Set a password of a site, etc. to the security folder of "Common phrases", and use it when entering the password on the site.

Storing Common Phrases → p.389

<Example: To enter a password from a common phrase in the security folder>









©h (FUNC)▶"Common phrases" ▶"Security folder"▶Enter your security code▶Select a title

The stored common phrase is entered.

Saving Your Own Name and Image My Profiles

Store your personal information such as your name, home phone number and mail address. Stored personal information allows you to check the FOMA terminal owner, quote the information on the text entry (edit) screen, etc.

- You cannot change or delete the own number.
- Items other than own number are saved to the FOMA terminal. If you insert another FOMA card (UIM), data stored in the FOMA terminal will appear without being changed.

Displaying My Profile

When this function is activated, only your name, the own number and the first mail address can be displayed.



►"LifeKit"▶"My Profile"

If you store your personal information such as your home phone number or postal address, you can display all data by selecting "Display all data" from the function menu and entering your security code.



Function menu⇒p.366

NOTE

- When 2in1 mode is in Dual mode, you can switch between Number A data and Number B data by pressing on the My Profile screen.
- Reset My Profile for Number B first before you exchange FOMA cards (UIM) while using 2in1.
 →p.366

FUNC My Profile screen (p.365)

Edit → p.366

Display all data Use To view the content.

Copy name Copy the name stored in My Profile. The copied name can be pasted into the entry screen, etc. → p.390

Copy phone number*1.....Copy the currently displayed phone number. The copied phone number can be pasted into the entry screen, etc. → p.390

Attach to mail*2......Compose i-mode mail with My Profile data attached.

Map/GPS αppli*3.....Display a list screen of i-αppli that support the Map/GPS function.

Read Map*3.....Activate GPS i-αppli set in "Select Map" (p.293).*4

Paste to mail*3......Paste the location information URL into i-mode mail main text to compose new mail.

Attach to image*3......Add location information to a still image.

iC transmission → p.341

Send Ir data → p.340

Send one/Bluetooth → p.341

Copy to microSD → p.329

Big font⇔Standard font ····· Change the font size of the displayed name.


Check 2in1*5......Obtain Number B information and store it to the My Profile screen for Number B.

Reset Reset (delete) My Profile data except own number.

Delete phone No.*6

- *1 : Depending on the selected item, "Copy mail add.", "Copy address", "Copy location info", "Copy birthday" or "Copy memorandums" appears.
- *2 : Available only when all data are displayed.
- *3: Available only when the location information is highlighted while all data are displayed.
- *4: During international roaming, a screen appears asking which to use, "i-mode site" or "i-αppli".
- *5 : Available only while the My Profile screen for Number B in 2in1 is displayed.
- *6: Depending on the selected item, "Delete mail add.", "Delete address", "Delete loc. info", "Delete birthday", "Delete memorandums" or "Delete image" appears.

Storing My Profile



code



Select any item:

FN Edit name Last Enter your last name. You can enter kanji, hiragana, katakana, alphabets, numbers and pictograms.

Edit reading Last ····· Change automatically entered reading if necessary. You can enter single-byte katakana, alphabets, numbers and symbols.

- Edit name First Enter your first name.
- Edit reading First Change automatically entered reading if necessary.
- Enter phone number Add a phone number other than Own number and select an icon. You can enter up to 26 digits for the phone number. Select " < Not stored > " to add a phone number.

Edit mail address Enter a mail address and select an icon. You can enter single-byte katakana, alphabets, numbers and symbols. If a mail address is not stored, you can select "Acquire Automatically" to automatically obtain the set mail address from the i-mode Center (the set secret code is also automatically obtained).

Select "<Not stored>" to add a mail address. Edit address Enter kanji, hiragana, katakana, alphabets, numbers and pictograms for the address other than the ZIP code.

Attach location Store location information by positioning the current location or selecting from the location history. To view the stored information, select "Location info detail"; to delete, select "Delete location info".

Enter birthday Enter your birthday (year, month and day). Any year from 1800 to 2099 can be set.

Edit memorandums ······ Enter a memo. You can enter kanii, hiragana, katakana, alphabets, numbers and pictograms.

Set image Take a photo with the camera, or select an image from My picture. Select "Release this" to release the set photo. *: Enter up to 100 single-byte/50 double-byte characters in total for "Prefecture", "City", "Street" and "Apartment Name, etc."



NOTE


 When you change your own mail address or store a secret code, change the mail address content of this function as well (it is not changed automatically).

Quoting your personal information (My Profile)

Stored personal information allows you to check the FOMA terminal owner, quote the information on the text entry (edit) screen or via i-mode.

<Example: To quote personal data on the i-mode site>

Items to select vary depending on the site.

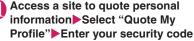

A list of quotable items appears.

- To select items to quote
 ►Use to deselect
- Use to deselect checkboxes
- When 2in1 is in Dual mode
- ► "My Profile A" or "My Profile B"





The items to be quoted are entered automatically.

NOTE

- When you quote a street address in text entry or on an i-mode site, a space may be entered between items.
- When you quote My Profile, data except items entered automatically are not quoted.

Recording Your or the Other Party's Voice

<Voice memo (in-call)/Voice memo>

There are two types of Voice memo: "Voice memo (incall)" allows you to record the other party's voice during a voice or videophone call. "Voice memo" (instandby) allows you to record your own voice while the standby screen is displayed.

- You can record either voice memo (in-call) or voice memo (in-standby), which overwrites the existing memo.
- You can record up to about 20 seconds.
- Playing/Erasing recorded voice memo → p.72

Recording the other party's voice during a call

Ouring a call (△) (1 second or longer)

A beep sounds and recording starts. The beep sounds 5 seconds before the recording time (about 20 seconds) is over. When recording ends, a double-beep sounds, "Recording" disappears and the in-call screen reappears.

- To stop recording
- ▶ (Stop) or ((a) (1 second or longer)

Recording your own voice in standby

U "YES" ► Record a voice memo" ►

When a beep sounds, start talking to the mouthpiece. The beep sounds 5 seconds before the recording time (about 20 seconds) is over. When recording ends, a double-beep sounds, "Recording" disappears and the "LifeKit" list screen appears.

- To stop recording
- ▶ (Stop)

NOTE

 Recording stops when you receive a call or activate another function while recording, or when the "Alarm", "Schedule", "To Do list", "Booking program" or "Timer recording" alarm is given.

<Voice memo (in-call)>

- You cannot record while a videophone call is on hold or while the function menu is open.
- When 2in1 is in A mode or B mode. "★" does not appear for a memo recorded under the unused phone number. To play the memo, change the mode or set it to Dual mode.

Recording the Other Party's Voice Automatically During a Call

<Auto voice memo>

Configure the setting to record the other party's voice automatically during a call.

- Only a voice call can be recorded automatically. About 1 minute of the end of the call will be recorded
- 2 memos can be recorded, and memos are overwritten from the older one.
- Playing/Erasing recorded voice memo → p.72



■ When Auto voice memo is set to ON The icon appears on the standby screen. → p.27

NOTE

- The recorded content is erased once, and recording starts again when the talk resumes, if the following operations are performed:
 - · Giving the "Alarm", "Schedule", "To Do list", "Booking program" or "Timer recording" alarm
 - . Opening the Phonebook, Redial, Dialed calls or Received calls
 - Switching to videophone
 - · Putting a call on hold
 - Activating Voice memo (in-call) by key operation
 - · Switching to another function in multitask
 - · Receiving a call during another call (When calls are switched, the last talk content will be recorded)
- The talk is not recorded while Record message is active. Recording starts when Record message switches to voice call.
- When 2in1 is in A mode or B mode. "★" does not appear for a memo recorded under the unused phone number. To play the memo, change the mode or set it to Dual mode.

Recording and Playing Alarm **Tones and On Hold Tones**

<Voice announces

Record voice and set it as an original ring tone or answer message.

- You can record 2 voice clips: Voice announce 1, 2.
- You can record up to about 15 seconds.
- "*\pi" appears on the "Voice announce" screen when "Voice announce" is active
- Recorded voice can be set to the following functions:
 - Ring tone (voice call, videophone, PushTalk.) Mail, MessageR/F, i-concier, Call setting w/o ID. Multi Number, Ringtone for Number B)
 - Alarm tone (Alarm, Schedule, To Do list, Booking) program, Clock alarm tone, Notice designate call)
 - On hold tone
 - Answer message (Record message)



■ To start playback

Select an item marked with "★"

To erase the voice Ch (FUNC) ► "Erase"

Select an item▶"YES"▶Record a voice clip

Speak into the mouthpiece. The beep sounds 5 seconds before the recording time (about 15 seconds) is over. When recording ends, a double-beep sounds, "Recording" disappears and the previous screen reappears.

■ To stop recording

▶ (Stop)

NOTE

 Recording stops when you receive a call or activate another function while recording, or when the "Alarm", "Schedule", "To Do list", "Booking program" or "Timer recording" alarm is given.

Checking Call Duration/ Charge <Call data>

Check the previous or total call time/charges for voice/videophone calls, etc.

• The following items can be checked:

Item	Description	
Last call duration	Display the duration of the last call	
Last call cost	Display the charges for the last call (each for voice call, videophone call and 64K data communications)*	
Total calls duration	Display the total duration of all calls made since the last reset (each for voice call, videophone call and 64K data communications)*	
Total calls cost	Display the total call cost of all calls made since the last reset (total of voice call, videophone call and 64K data communications)	
Total duration reset	Display the date and time of the last total duration reset	
Total cost reset	Display the date and time of the last total cost reset	

- *: "Talk" for voice call, "Digital (AV)" for videophone call and "Digital (UD)" for 64K data communications are displayed.
- When you switch between voice and videophone calls, the total call time of voice and videophone calls is displayed in the last duration area, and the charges of voice and videophone calls are displayed separately in the last charge area. The displayed charge may differ from the actual charge.

 The call time is displayed for voice calls, and distiplayed to the control of the call time is displayed for voice calls.
- The call time is displayed for voice calls, and digital calls and communications. Times for both incoming and outgoing calls are counted.
- Charges are only displayed for outgoing calls.
 However, if you call a toll free number or directory assistance (104), "¥0" or "¥ **" appears.
- As charges are accumulated on the FOMA card (UIM), the accumulated charges (starting from December, 2004) appear in the Charge field when you change the FOMA card (UIM).
- You can reset displayed call times and charges.
- Displayed call times and charges are approximate and may differ from the actual figures.
 Consumption tax is not included in the call charges.
- If you subscribe to 2in1, the total amount of Number A/B appears as the Total calls duration and Total calls cost.



NOTE

- If the last or total voice or digital calls duration exceeds "199h59m59s", the call count returns to "0s"
- The time and charge of PushTalk, i-mode or packet communications, and the Chaku-moji transmission charges are not counted. To check i-mode charges, see "Mobile Phone User's Guide [i-mode] FOMA version".
- Times for ringing or paging, and for switching between voice and videophone calls are not counted.
- When the power is turned off, the duration and charges for the last call revert to "0s" and "\(\frac{1}{2} \pi \pi^*\)" respectively.
- Turning the power off does not clear the total duration and charges.
- International call charges for WORLD CALL are counted. For other international call services, charges are not counted.

Resetting the total call time and total call charges <Reset total>

Reset the total calls duration and total calls charges displayed in "Call data" to zero.



Reset total duration

Reset total cost ······ Enter the PIN2 code to reset accumulated charges. PIN2 code → p.124

Resetting charges automatically

<Auto reset total cost>

Configure the setting to reset the total calls cost displayed in "Call data" to zero automatically at 0:00 on the first of every month.

- "Settings/NW Service" Call time/Charge" 4uto reset total cost" Enter your security code
- ② "Auto reset" ► "ON" ► Enter the PIN2 code

PIN2 code → p.124

- Not to set the address
- ▶"OFF"

NOTE

- Setting Auto reset total cost to "ON" and changing the month in "Set main time" resets the total calls cost
- \bullet The Auto reset total cost is reset to "OFF" when:
 - The power is turned on without a FOMA card (UIM) inserted
 - CLR is pressed on the PIN2 code entry screen that appears when the power is turned on
 - The PIN2 code is locked → p.124
 - · An error occurs on the FOMA card (UIM)

Setting and Notifying Call Charge Upper Limit

<Notice designate calls>

If accumulated charges displayed in "Call data" exceed the cost limit set in this function, the standby screen or alarm notifies you.

- The alarm notification works only once when the accumulated charges exceed the set cost limit.
- Exceeding the limit does not prevent you from making calls.

"Call time/Charge" ➤ "Notice designate calls" ➤ Enter your security code ➤ Select any item:

Cost limit setting ······ Set the cost limit between 10 and 100,000 yen in 10 yen increments.

Notify setting

Notify cost limit Set whether to inform the cost limit.



Volume Use (1) to adjust the alarm volume.



NOTE

 The charges for PushTalk, i-mode or packet communications and Chaku-moji transmission are not supported. To check i-mode charges, see "Mobile Phone User's Guide [i-mode] FOMA version".

Alarm notification action

After ending a call, the following actions notify you when accumulated charges exceed the cost limit.



■When Notify cost limit is set to "ON" and Alarm tone is not set to "OFF"

When the accumulated charges exceed the preset cost limit, the alarm tone sounds for about 5 minutes, 3 seconds after ending the call, and the notification screen appears. To stop the alarm tone, press any key. After the notification, pressing CLR or displays the " (Notice designate calls) desktop icon on the standby screen.

■When Notify cost limit is set to "ON" and Alarm tone is set to "OFF"

When the accumulated charges exceed the preset cost limit, the "" (Notice designate calls) desktop icon appears on the standby screen.

Checking the content of " (Notice designate calls)

Select the "" (Notice designate calls) desktop icon on the standby screen to check the content of Notice designate calls.

On the standby screen▶■▶
Select "" (Notice designate calls)▶Enter your security code

The content of "Notice designate calls" appears.

Check the content
■ (OK)

The standby screen reappears and " (Notice designate calls) disappears.

Using the FOMA Terminal as Calculator < Calculator>

Use the FOMA terminal to perform four arithmetic calculations (addition, subtraction, multiplication and division).

- Up to 10 digits can be displayed. Below the decimal point, up to 9 digits can be displayed.
- If the result exceeds 10 digits, ".E" appears.



■ To paste the function on the desktop

| Ch | (FUNC) | "Add desktop icon"



■ To calculate "23 + 57"

 $2 \ 3 + 5 \ 7 = 2 \ 3 \bigcirc 5 \ 7 \bigcirc 1$

■ To use a negative number in calculation
To calculate using negative amounts, simply insert "—" before the first digit.

-23+57=

NOTE

 To start calculation from the beginning, press CLP (AC). While entering numbers or decimal points,
 appears. You can delete numbers or decimal points by pressing CLP.

Composing Text Memo

<Text memo>

Write short messages as text memos. Created text memos can be pasted into schedule details or mail main text.

• Up to 10 text memos can be stored.





Function menu⇒p.371

FUNC Text memo screen (p.371)

Edit

Compose message → p.146

Edit schedule → p.359

Add desktop icon ·····Place the text memo on the desktop. The Text memo screen appears when the icon is selected on the desktop. → p.116

iC transmission, iC trans. all → p.341

Send Ir data, Send all Ir data → p.340

Send one/Bluetooth, Send all/Bluetooth → p.341

Copy to microSD → p.329

Text memo info·····Check the creation date/time and category.

Category ······Select None/Personal/Holiday/Travel/Business/Meeting.

DeleteSelect Delete this/Delete selected/Delete all.

Using Dictionaries

<Dictionary>

 You can activate dictionaries from the function menu of each text entry screen. → p.372



■ To paste the function on the desktop

►ch (FUNC)►"Add desktop icon"



Dictionary

Select any item:

Enter word.....Enter a word.

Text reader.....Enter a word from the Text reader. → p.233

Reference history ····· Search for a word using the history of previously retrieved words. "Using reference history" → p.372

R

Select a dictionary type

If the word is not in the dictionary, a similar word is highlighted.

- To display the previous or next list
- ▶Reference result (list) screen▶□



Function menu⇒p.372



- To display the previous or next word
- ► Reference result (detail) screen ► □



Reference result (detail)
Function menu⇒p.372

FUNC

Reference result screen (list/detail) (p.372)

Change window*.....Switch between Reference result and Text edit (available only when it can be switched).

Copy Copy a word.

List screen: Copy text enclosed by [] in the reference result for Japanese-English or Japanese dictionary, and copy a word in the reference result for English-Japanese dictionary

Detail screen: Copy text by selecting the range A copied word can be pasted on a text entry screen.
→ p.390

Search from detail*······Search for another word from the reference result.

► Use to move to the first character of the text and press (Start) Use to highlight to the end of the text and press (End) Select a dictionary type Select a word

Refer dic.

Refer edit*······Edit text referring to the reference result (available only when Refer edit is available). "Divided screen" → p.383

*: Available only on the reference result (detail) screen.

Using reference history

- Dictionary screen (p.371)▶ "Reference history"
 - To delete a search history

 In the children in the children
- Select a word

Using dictionaries from other functions

- Select "Refer dictionary" from the text edit screen or sent mail detail screen. After the dictionary starts, you can select "Enter word", "Select area" or "Reference history".
- Selecting "Select area" allows you to specify the range of a word to look up.
- Enter a keyword on the Quick search screen, then select "Refer dictionary". → p.188

Dictionary reference screen

When you select "Refer edit", the display is split into top and bottom halves. Each time you select Change window from the function menu, the active window switches between (1) and (2).



- ① Dictionary detail screen
- 2 Text edit screen
- ③ Separation line

To exit the dictionary, press \square (End) on \bigcirc or select "Quit dic." from the function menu of \bigcirc .

Using Earphone/Microphone with Switch

<Earphone/Microphone with switch>


Make or receive calls using Stereo Earphone/ Microphone (optional).

- The switch tone sounds when answering or hanging up regardless of the "Keypad sound" setting.
- Do not wrap the FOMA terminal with the cord of the Stereo Earphone/Microphone. Doing so may interfere with signal reception. If you move the cord of the Stereo Earphone/Microphone closer to the FOMA terminal during a call. you may hear a noise.
- You can make or receive calls with the FOMA terminal folded.

Setting earphone/microphone switch operation < Headset sw to dial

Configure the setting to make a voice call, PushTalk call, etc. to a preset party simply by pressing the switch for 1 second or longer.

 Specify a phone number stored on the FOMA terminal (Phone) phonebook to use this function.



Voice call·····Select a phone number stored in the phonebook. Searching the phonebook

→p.90

PushTalk call······Select a member or group stored in the PushTalk phonebook.

OFF.....Do not dial.

NOTE

- This setting is not available for the UIM phonebook.
- When the phone number specified for this function is not available due to the 2in1 setting, you cannot make calls using the switch of the Stereo Earphone/Microphone, etc.

Selecting a microphone to use when an earphone/microphone is connected <Headset mic. setting>

Set whether to use a microphone as the FOMA terminal's or as the earphone/microphone's when Stereo Earphone/Microphone is connected.

"Settings/NW Service"

"External connection" → "Headset mic. setting" → "Built-in microphone" or "Headset microphone"

To connect an earphone without a microphone, select "Built-in microphone".

NOTE

• When "Headset mic. setting" is set to "Built-in microphone", the microphone sensitivity is the same as the setting when handsfree is on. When an earphone/microphone is connected, you do not need to talk with your mouth close to the mouthpiece.

Using the switch to make calls

Enter a phone number Press the switch for 1 second or longer

You can also make a call from the Phonebook, Redial, Dialed calls or Received calls.

■ To not enter a phone number

A call is made to a phone number set in "Headset sw to dial".

To end the call, press the switch for 1 second or longer

A double-beep sounds and the call ends.

Using the switch to answer calls

While ringing Press the switch

■ To answer a voice call

A short beep sounds, and a voice call is answered.

■ To answer a videophone call

A short beep sounds, and a videophone call is answered using a substitute image with the FOMA terminal folded or your own image with the FOMA terminal open.

■ To answer a PushTalk call

A tone sounds, and a PushTalk is answered.

To end the call, press the switch for 1 second or longer

A double-beep sounds and the call ends.

NOTE

- If you subscribe to "Call Waiting", you can answer an incoming call during another call by pressing the switch on the Stereo Earphone/Microphone.
 You can also switch calls by pressing the switch for 1 second or longer. However, pressing the switch does not end the active call.
- Do not idly and repeatedly press and release the switch on the Stereo Earphone/Microphone. A call may be inadvertently answered automatically.
- Pressing the switch for 1 second or longer does not terminate a PushTalk call.

Automatically answering calls with an earphone/microphone connected

<Auto answer setting>

Configure the setting to answer incoming voice, videophone and PushTalk calls automatically without pressing the switch of Stereo Earphone/Microphone.

- You cannot answer a call automatically during a voice, videophone or PushTalk call.
- You can answer calls automatically with the FOMA terminal folded.



Phone, Videophone, PushTalk



"ON" Enter the ring time (001 to 120 seconds in 3 digits)

- To disable
- ▶"OFF"

NOTE

- When a videophone call is answered automatically, the substitute image is sent to the caller
- When a PushTalk call arrives, the shorter time of "Ring time" of PushTalk and "Auto answer setting" is used for the ring time before the call is answered automatically.
- Connecting Stereo Earphone/Microphone while ringing does not answer the call automatically, but removing the Stereo Earphone/Microphone while ringing answers the call automatically.
- For "PushTalk" ring time, enter 01 to 60 seconds in 2 digits.

Using Bluetooth Function

<Bluetooth

Connect Bluetooth devices wirelessly. For example, when Wireless Earphone Set 02 (optional) is connected to the FOMA terminal via Bluetooth connection, you can make calls or listen to music even if the FOMA terminal is in a bag, etc.

- Note that a Bluetooth connection uses much battery power.
- A wireless connection to a Bluetooth device may not always be established.
- You cannot use the Bluetooth function in Self mode.

Operations that can be performed via Bluetooth

6 services are available on the FOMA terminal: Headset Profile service, Hands-Free Profile service, Advanced Audio Distribution Profile service, Dial-Up Networking service, Object Push Profile service and Serial Port Profile service. Audio/Video remote control service may also be available for Advanced Audio Distribution Profile service (compatible Bluetooth device only).

Version

Bluetooth standard Ver. 2.0 + EDR compliant*1

Profile*2 (Service)

- HSP: Headset Profile
- HFP: Hands-Free Profile
- A2DP: Advanced Audio Distribution Profile
- AVRCP: Audio/Video Remote Control Profile
- DUN: Dial-up Networking Profile
- OPP: Object Push Profile
- SPP: Serial Port Profile
- *1: It is confirmed that the FOMA terminal and all Bluetooth devices are compliant with Bluetooth standards designated by Bluetooth SIG, and they are authenticated. However, the procedure may differ or data transfer may not be possible depending on the device's characteristics or specifications.
- *2 : Bluetooth device connection procedure standardized according to the product's characteristics.

■ Talking via headset (Headset Profile service)

You can talk wirelessly by connecting Wireless Earphone Set 02 (optional) or Bluetooth Headset (commercially available) to the FOMA terminal via Bluetooth connection.

Talking handsfree (Hands-Free Profile service)

You can talk handsfree using microphone/speaker such as car navigation by connecting a Bluetooth device (commercially available) such as car navigation to the FOMA terminal via Bluetooth connection.

■ Playing with an audio device (Advanced Audio Distribution Profile service)

You can play high quality stereo sounds wirelessly by connecting Wireless Earphone Set P01/02 (optional) or Bluetooth audio device (commercially available) to the FOMA terminal via Bluetooth connection

 Compatible devices are restricted as for 1Seg or video sounds, →p.379

Communicating wirelessly (Dial-Up Networking service)

You can use the FOMA terminal as a modem to establish packet communications or 64K data communications by connecting the FOMA terminal to a Bluetooth-compatible PC, etc. via Bluetooth connection.

- For details, refer to the "Manual for PC Connection" (PDF format) in the provided CD-ROM.
- Sending/Receiving data via Bluetooth connection (Object Push Profile service)

You can exchange Phonebook, Schedule, To Do list, Text memo, Mail, Bookmark and My Profile by connecting the FOMA terminal to a Bluetooth device via Bluetooth connection. → p.341

■Using the Bluetooth connection via i-αppli (Serial Port Profile service)

You can play games or manage data with i- α ppli by connecting the FOMA terminal to another mobile phone or Bluetooth device via Bluetooth connection.

■Sounds that come from a Bluetooth device

 The following may not apply depending on the Bluetooth device:

Sounds	Connection service		
Sourius	HSP	HFP	A2DP
Phone dialing tone	0	0	×
Phone/Videophone ring	O*1*2	○*2	×
tone			
Phone/Videophone	0	0	×
ringback tone			
The other party's voice	0	0	×
during a voice call/			
videophone call			
The other party's Record	0	0	×
message voice during a			
voice call			
PushTalk ring tone	×	×	×
1Seg sounds	×	×	0
Video playback sounds	×	×	0
Music Player playback	×	×	0
sounds			
Alarm notification tone	○*3	○*3	×
Mail ring tone	×	×	×

- O: Comes from a Bluetooth device.
- X: Does not come from a Bluetooth device but from the FOMA terminal.
- *1: When "Headset usage setting" is set to "Headset+speaker", sounds come both from a Bluetooth device and from the FOMA terminal.
- *2: When "Forward ring tone" is set to "OFF", you will hear a ring tone different from one set by the Bluetooth device.

*3: Sounds come from a Bluetooth device only during a call. The clock alarm tone, instead of a tone set as an alarm tone, comes from the Bluetooth device.

NOTE

Also see the Bluetooth device User's Guide.

Notes on Bluetooth devices

- Note the following for good connections:
- Place the FOMA terminal and Bluetooth device within about 10 m. The available connection distance may be shorter depending on the ambient environment (wall, furniture, etc.) or building structure. If there is an obstacle between the FOMA terminal and Bluetooth device, the available connection distance will be shorter. Especially in reinforced concrete buildings, a connection may not be established if a reinforced wall exists between the devices. The above connection distance is not guaranteed.
- Keep away from other devices (electrical appliances, AV devices, OA devices, etc., especially when using microwaves). When other devices are close and turned on, a connection may not be properly established, TV or radio noises may be heard, or reception interference may occur (some UHF or digital terrestrial broadcast channels on the TV screen may be disturbed).
- When a broadcaster or wireless device is near you and a connection cannot be properly established, move the Bluetooth device. A connection may not be properly established if ambient signals are too strong.
- A wireless connection can be established even if a Bluetooth device is in a bag or pocket. The connection may be slow or noise may occur if a human body exists between the FOMA terminal and Bluetooth device.

■ Radio interference with Wireless LAN A Bluetooth device and wireless LAN

(IEEE802.11b/g) use the same frequency band (2.4 GHz). If the device is used near a wireless LAN device, radio interference may occur, the connection may slow, noise or disconnection may occur. In this case, attempt the following:

- Keep the FOMA terminal and Bluetooth device at least 10 m away from a wireless LAN device.
- When you cannot keep the distance, turn off the wireless LAN device.
- Radio interference may cause communication interruption and voice distortion during streaming data playback, etc.

Radio waves from the Bluetooth device can adversely affect electronic medical devices.

Accidents may occur. Be sure to switch off the power of the FOMA terminal and ambient Bluetooth devices:

- In trains In airplanes In hospitals
- · Near automatic doors or fire alarms
- · In places with flammable gas, such as filling stations

Flow of Bluetooth usage

To use the Bluetooth functions, first register Bluetooth devices on the FOMA terminal and use the compatible services.

<Example: To connect with Wireless Earphone Set 02 (optional)>

Register the Bluetooth device (p.376)

Register Wireless Earphone Set 02 on the FOMA terminal.



<To play 1Seg sounds. moving pictures, music,

etc.>

Connect (p.376)

Connect via Headset Profile service or Hands-Free Profile service.

Connect (p.376)

Connect via Advanced Audio Distribution Profile service.



Talk (p.378) Play (p.379)

Talk via Wireless Earphone Set 02.

Use Wireless Earphone Set 02 to play 1Seg audio, moving pictures. music, etc.

Registering Bluetooth devices

Register Bluetooth devices on the FOMA terminal.

- Up to 20 Bluetooth devices can be added.
- Set Bluetooth devices standby beforehand to be reaistered.



the desktop

Ch (FUNC) ► "Add desktop icon"

Bluetooth Device list ■Register new devices Bluetooth ON 4 Accept registered

Accept dialup devices Receive data Bluetooth settings Bluetooth menu

"Device list" "YES"

Bluetooth device search starts.

When the search ends, the "Device list" screen (p.376) appears.

"Register new devices" is also available to search for Bluetooth devices.

If a Bluetooth device is already stored Press (Search) on the "Device list" screen (p.376) to start Bluetooth device search.

Select a Bluetooth device "YES"

🔼 Enter Bluetooth passkev 🕨 (Set)

If the device to register is Wireless Earphone Set 02 (optional). Bluetooth passkey entry is not required.

For Bluetooth passkey, see

the Bluetooth device User's Guide.



Connecting Bluetooth devices

Connect registered Bluetooth devices to the FOMA terminal

Bluetooth menu screen (p.376) "Device list"

"Guide to the Device list screen"→p.377

To search for Bluetooth devices

▶ ☐ (Search)

"Registering Bluetooth devices" → p.376

Device list HEMXX:XX:XX:XX:XX **Device list**

Function menu⇒p.378

Select a Bluetooth device

"Z" appears for a service being connected, and "" for a service in standby mode.

8

Select a service

The Bluetooth device is connected, and "\rightarrow" (blue) flashes on the display. If no communication is established to the Bluetooth device for a given time, the Power saver mode activates and the flashing changes to "\rightarrow" (black) lighting.

When "Dial-up" is selected, all devices, including ones connected before and ones registered in "Accept dialup devices", will be set to standby. If the Bluetooth device can be connected for multiple services, a message appears asking whether to connect for another service.

■ To cancel during connection

▶ (Cancel)

■ To quit a service being connected

► Select a service being connected ► "YES"

NOTE

- If the Bluetooth device power turns off or there is no response from the Bluetooth device during connection/disconnection process, the process may take time.
- If the Bluetooth device is disconnected, the connection standby mode activates. If the FOMA terminal power turns off while being connected, the connection standby mode activates when the power is turned on.
- While being connected in Advanced Audio Distribution Profile service, sounds may stop coming from the Bluetooth device in the following cases. The connection may be terminated depending on the Bluetooth device:
 - The Bluetooth device is disconnected.
 - · GPS location request is received
 - Mail or MessageR/F is received
 - PushTalk is received
 - An alarm (including low-voltage alarm) is notified
- The Bluetooth power is off and the device is disconnected while in Dial lock/Omakase Lock.
 After Dial lock/Omakase Lock is released, the Bluetooth power is turned on and the service will be in standby mode if it was being connected or in standby while in Dial lock/Omakase Lock.

Guide to the Device list screen



Device class icon

Icon	Description
	PC
• • • • • • • • • • • • • • • • • • •	Phone
1 1	Audio/Video
8	Other

: Protected

Status icon

 Only appears when Bluetooth devices are searched. → p.376

Icon	Description
0	Registered
NEW	Not registered (Newly detected)

Service icon

 If the device is not registered, the device (Bluetooth) address appears.

Icon	Description
HSP HSP HSP	Headset Profile service (HSP)
HEP HEP HEP	Hands-Free service (HFP)
R2DP R2DP R2DP	Advanced Audio Distribution service (A2DP)
RCP RCP RCP RCP	Audio/Video Remote Control service (AVRCP)
DUN DUN DUN	Dial-Up Networking service (DUN)
OPP OPP	Object Push Profile service (OPP)
SPP SPP	Serial Port Profile service (SPP)

(Gray text): There is no connection history

(White text): There is connection history

(White text, White frame): In connection standby mode

(Black text, Green background): Being connected

FUNC Device list screen (p.376)

Register devices → p.376

Protection setting, Change device name, Delete

Description View the Bluetooth Device name, Device (Bluetooth) address, Device class and Services.

Search Search for Bluetooth devices.

NOTE

<Register devices>

 When a registered Bluetooth device is selected, the information is updated.

Setting Bluetooth devices to standby mode

Set the standby mode of all registered Bluetooth devices.



"appears for a service being connected, and "a" for a service in standby mode.



- To release standby mode
- ▶ "Release all"
- To set separately for each service

► "Separate setting" ► Use to select a checkbox () ► (Finish)

A deselected checkbox (\square) denotes that the standby mode is released for the service.

Stopping the FOMA terminal Bluetooth functions

Stop all services being connected or in standby mode to stop the FOMA terminal Bluetooth functions.



- To activate Bluetooth functions
- ▶ "Bluetooth ON"

Connecting to a PC wirelessly

<Accept dialup devices>

Connect the FOMA terminal to a Bluetoothcompatible PC, etc. wirelessly, and establish packet communications or 64K data communications.

● Bluetooth menu screen (p.376) "Accept dialup devices"

For details on the subsequent steps, see "Preparing Bluetooth Communication" in the "Manual for PC Connection" (PDF format) in the provided CD-ROM.

Using the Bluetooth function to talk

Connect a Bluetooth device to the FOMA terminal via Headset Profile service or Hands-Free Profile service, and talk wirelessly.

Connect a Bluetooth device via Headset Profile service or HandsFree Profile service

Connecting Bluetooth devices → p.376

Make/Receive a call with the Bluetooth device

" appears on the screen while talking on the Bluetooth device.

For Bluetooth device operations, see the Bluetooth device User's Guide.

NOTE

- An incoming call cannot be answered with the Bluetooth device when Dial lock or Omakase Lock is set.
- When a call arrives while a Bluetooth device is connected via Headset Profile service or Hands-Free Profile service, the ring tone comes from the Bluetooth device even in Manner mode.
- While talking on the Bluetooth device, the Bluetooth device volume does not change even when the FOMA terminal volume is adjusted.
- While talking on the Bluetooth device, the talking status does not change even when the FOMA terminal is folded, regardless of "Setting when folded".
- When the Bluetooth connection is terminated while talking or dialing on the Bluetooth device, the talking or dialing ends.

Switching between the FOMA terminal and Bluetooth device



For operations from the Bluetooth device, see the Bluetooth device User's Guide.

NOTE

- Even if the Bluetooth device activates, you may not be able to talk on the Bluetooth device when a handsfree device or earphone/microphone (optional) is connected.
- You can switch the talk from the function menu of the voice call/videophone screen.

Using the Bluetooth device to play music, audio, etc.

To play Music Player tracks or sounds of 1Seg, videos and moving pictures on a Bluetooth device, connect the Bluetooth device to the FOMA terminal via Advanced Audio Distribution service.

Connect the Bluetooth device via Advanced Audio Distribution service

Connecting Bluetooth devices → p.376
If the Bluetooth device is connected via
Advanced Audio Distribution service while
Advanced Audio Distribution service is in
standby mode, the Music Player starts
automatically. Depending on the "Music Player
setting", etc., the Music Player may not start
automatically while the standby screen is not
displayed or another function is active.



Sounds come from the Bluetooth device.

NOTE

- 1Seg or Video sounds can only be played on the A2DP-compatible Bluetooth device supporting SCMS-T copyright protection.
- While sounds of 1Seg, video, moving picture and music come from the Bluetooth device, the Bluetooth device volume does not change even when the FOMA terminal volume is adjusted.
- You can also activate the Music Player by playback, pause and other operations of the Bluetooth device when it is connected via Audio service (compatible Bluetooth device only).
- The Bluetooth device remote control is available during Music Player background playback.

NOTE

- Sounds cannot come from the Bluetooth device when a stereo earphone set (optional) or earphone/microphone (optional) is connected.
- A Bluetooth device connection via Advanced Audio Distribution service is recorded in connection history. If there is connection history and the Bluetooth device is active (Bluetooth ON), the device is automatically connected when viewing 1Seg or playing a file even if it is not connected via Advanced Audio Distribution service. If connection succeeds, sounds come from the Bluetooth device. If connection fails, a message appears asking whether to listen to sounds from the FOMA terminal.
- If a Bluetooth connection is terminated during moving picture/video/music playback, a message appears indicating the disconnection. Depending on the "Music Player setting", the FOMA terminal open/close status, etc., the Music Player may exit automatically without the message appearing.

Setting Bluetooth

<Bluetooth settings>

■ Bluetooth menu screen (p.376) "Bluetooth settings" Select any item:

Set authentications·····Set whether to authenticate Bluetooth sending/receiving. To authenticate, set whether to encrypt data.

Session number setting ····· Set whether to enter a session number in Send all/Bluetooth.

Time-out to search······Set time (01 to 20 seconds) to search for Bluetooth devices.

Forward ring toneSet whether to send a voice call/videophone ring tone to the connected headset or handsfree device.

Music Player setting Set whether to activate the Music Player automatically on an Advanced Audio Distribution service-compatible Bluetooth device or to end the Music Player automatically when the Advanced Audio Distribution service is disconnected.

Dial from other device Set whether to enable dialing from an external device.

Bluetooth info······View the Bluetooth Device name, Device (Bluetooth) address, Device class and Services. The Device name can be changed by pressing
☐ (Edit).

<Forward ring tone>

 This setting cannot be configured while a Bluetooth device is connected via Headset Profile service or Hands-Free Profile service.

<Bluetooth info>

 If a pictogram is used for the Device name, it may not be properly displayed on the other party's Bluetooth device.

Character Entry

Text Entry		382
Entering Characters in 5-Touch Input Method	5-touch	384
Editing/Saving Common Phrases	n phrases	389
Copying/Cutting/Pasting Text		390
Entering Characters Using Kuten CodeK	uten code	390
Saving Often-Used WordsOwn	dictionary	390
Resetting Learning Dictionary Cle	ar learned	39
Using Downloaded DictionaryDownload	dictionary	39
Entering Characters in 2-Touch Input Method	2-touch	391
Entering Characters in T9 Input Method	T9 input	392
Using Voice Input		393


Text Entry

The 3 text entry methods can be used in the FOMA terminal: "5-touch", "2-touch" and "T9 input". This section explains text entry mainly using "5-touch".

- Refer to the following sections for the settings, characteristics and methods of each entry method.
 "Setting the entry method" → p.383
 - "Entering Characters in 5-Touch Input Method" →p.384
 - "Entering Characters in 2-Touch Input Method" →p.391
 - "Entering Characters in T9 Input Method"→p.392

Text entry (edit) screen

The text entry (edit) screen consists of ① Text entry area, ② operation guidance area, and ③ information display area. The descriptions of icons displayed in each area are as follows:

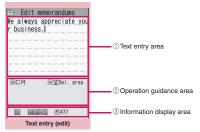

Function menu⇒p.387

①Text entry area

Icon	Description
I	Cursor (Text entry position)
◀	End mark (Text entry end position)

2 Operation guidance area

Icon	Description
▲ ▼chg	Displayed when 🗓 can be used for conversion
A VAII	Displayed when 🗘 can be used for phonebook search
▲ ► Area	Displayed when specifying the text copy (cut) range
 CR	Displayed when 🛨 can be used to break a line

Icon	Description
X A∕a " °	Displayed when ** can be used to switch between upper case and lower case, or to attach dakuten/han-dakuten
# AA→aa	Displayed when # can be used to release the CapsLock mode → p.387
 aa→Aa	Displayed when # can be used to activate the Shift mode → p.387
∰ Aa→AA	Displayed when # can be used to activate the CapsLock mode →p.387
X LUNG Sel. area	Displayed when ** (1 second or longer) can be used to specify the range
H LONG Paste	Displayed when copied or cut text exists and # (1 second or longer) can be used to paste them
Pictograph D	Displayed when Pictograph D (Deco-mail pictogram) can be entered by pressing (1 second or longer) e.g. while entering main text
	Displayed when ✓ can be used to return to the previous reading (Example: ¬¬) while entering text
Decorate	Displayed when Deco-mail can be composed by pressing e.g. while entering main text

3 Information display area

3 information display area			
Icon	Description		
2 9	Display text entry method (2-touch or T9 input) (No icon appears for 5-touch)		
INS OVR	Insert mode/Overwrite mode		
E 123 漢 カナ	Input character type		
×	Kuten code input mode → p.390		
1/1 1/2	Double-byte mode/Single-byte mode		
Sm	Lower case input mode		
Shift CAPS	Shift mode/CapsLock mode → p.387		
R	Number of remaining bytes that can be entered (single-byte character: 1, double-byte character: 2)		

Icon	Description
In	Number of characters that have been entered when adding entries in the UIM phonebook or when composing SMS

Divided screen

Some screens, such as that for storing schedule entries while referring to the original message, are split into the function operation screen and the text entry (edit) screen at the same time.



- The function operation window and text entry (edit) window appear at the same time in the following cases:
 - Adding schedule entries while referring to the i-mode screen
 - Editing text while referring to the results of a dictionary search
 - · Entering words from the Quick Search screen

Changing the active windows

When the function operation window and text entry (edit) window are displayed at the same time, select "Change window" from the function menu to change windows.

Setting the entry method

Select the entry method from 3 entry methods (5-touch/2-touch/T9 input).

"Settings/NW Service"
"Other settings" ➤ "Character input set" ➤ "Input mode" ➤ Select the entry method

NOTE

◆You can change entry methods while entering text. Press (Chrct) for 1 second or longer, or select "CHG input method" from the function menu.

Changing the font size

Select "Small", "Standard", "Large" or "X-large" for the font size on the text entry (edit) screen. "Changing the Font" → D.115



Setting auto cursor moving

If you set Auto cursor, the cursor automatically moves rightward each time you enter a single character while entering in 5-touch (kanji mode).

- The following are times until the cursor automatically moves:
 - Slow···About 1.5 seconds
 - Normal···About 1.0 seconds
 - Fast···About 0.5 seconds
 - "Settings/NW Service"

 "Other settings"

 "Character
 input set"

 "Auto cursor"

 Select
 the speed
 - To disable auto cursor
 - ▶"OFF"

To enter characters assigned to the same key in succession when set to "OFF", if you press or the same key again for 1 second or longer, the cursor moves and the next character can be entered.

NOTE

- This function is available other than in numeric input mode.
- Even after the cursor moves, you can press **
 to switch between upper and lower cases or add
 dakuten/han-dakuten.

Setting the word prediction

Set whether to use the word prediction (ON, OFF).

- Prediction candidates are stored at the time of purchase.
- Using word prediction to enter text → p.384
- "Settings/NW Service"
 "Other settings" ▶ "Character
 input set" ▶ "Prediction" ▶ "ON" or
 "OFF"

Entering Characters in 5-Touch Input Method

Enter a character by pressing a dial key several times. For example, to enter "う", the third character of the あ column (あいうえお), press 1 3 times.

• Refer to "Allowable characters in 5-touch" (p.439) for details on key assignment.


Entering kanji/hiragana/katakana

Enter a reading in hiragana, then convert it into text such as kanji, hiragana or katakana.

Using Prediction to enter text

The word prediction refers to prediction from a single character entry or prediction of a word to follow the selected word. Therefore, this function allows quick text entry with few key presses.

<Example: To enter "携帯電話" (Mobile phone)>

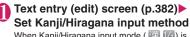

When Kanji/Hiragana input mode (漢 1/1) is not set, press (Chrct) to switch the method.

Enter a part of the reading



"け" is entered in the text entry area. Predicted candidates appear in the operation guidance area by predicting words from a single character entry.



Edit memorandums





The cursor appears in the operation guidance area and you can select predicted candidates.

If you do not want to enter any of the candidates



Return to the reading entry.

Predicted candidates change as you continue entering the reading. Alternatively, use the conversion function.

"Converting entered hiragana" → p.385

Select a predicted candidate

▶Select "携帯" (Mobile)

The selected word appears in the text entry area. Next predicted candidates that may follow the selected word appear in the operation guide area.

Select the next predicted candidate

- ▶Select "電話" (Phone)
- To close the predicted candidate window
- ▶ch (Exit)



NOTE

- Frequently used face marks, pictograms, etc. also appear as predicted candidates.
- Conversion candidates do not appear in other than Kanji/Hiragana input mode.
- A word entered once is added as a predicted candidate by the learning function. You can delete an added predicted candidate by highlighting the word and pressing CLR for 1 second or longer. To delete all the learned predicted candidates. clear the learned records of the word prediction using "Clear learned".
- My Profile information can be entered easily. → p.389

Time-linked prediction in mail = composition

In mail composition, time (morning/day/night)related words ("おはよう" (Good morning), "おや すみ" (Good night), etc.) appear as candidates, corresponding to the current time.

 Time-linked prediction does not work in SMS composition.

■ When the Message screen opens

Candidates including time-related words appear.

- No candidates appear if main text is already entered, e.g. when the header or signature is set or when you make a quote reply.
- When you enter the main text

Candidates change, corresponding to the current time, when you enter a character of the reading.

 Time-linked prediction does not work when you enter two or more characters of the reading.

Converting entered hiragana

When a word you want to enter does not appear as a predicted candidate or when the word prediction is set to OFF, change the entered hiragana to the word you want to enter.

<Example: To enter "秋のキャンプ" (Autumn camp)>

🚹 Enter hiragana



- *(Han-dakuten)

 If you press the wrong key
- ▶ Press CLR to delete the character
- If you press a key too many times

The previous character assigned to that key appears.

- To confirm the hiragana
- ▶ (Set)

Edit entered text

▶ Press ch (CHG) to change text to kanji or katakana

The conversion candidate for the first phrase is highlighted and the kanji candidates for the remaining unconfirmed text are underlined ().



If the conversion candidate is your preferred kanji or katakana

▶ (Set

The conversion candidate is confirmed and the next phrase is highlighted.

If the conversion candidate is not your preferred kanji or katakana

▶ Press ch (CHG) to display other conversion candidates▶ Select the characters to convert A list of conversion candidates for the highlighted phrase



appears. Hiragana and katakana are included in the conversion candidates.

If the readings in the conversion range consist entirely of "あ"-level characters, numbers are also included in the conversion candidates. For example, entering 123 (あかさ) also shows the conversion candidate "123".

■ To change the conversion range

►Use to change the conversion range The conversion candidates change as the conversion range changes.

■ To display the alphanumeric/katakana conversion candidates

▶ (ABC123)

The alphanumeric and katakana conversion candidates of the entered key appear. For example, pressing $23(\hbar \dot{\tau})$

i (ABC123) shows the conversion candidates such as "AD", "23" or "カサ".

If you enter a 2- to 4-digit number and the number can be displayed as date or time, the conversion candidates of date or time also appear.

- 10/19
- 10月19日
- 10:19
- 10 時 19 分
- 1019年

NOTE

 If the conversion candidate list includes symbols, pictograms or face marks, you can convert the text to these symbols.

Refer to the following lists for the readings of symbols, pictograms and face marks.

- "Symbol Reading List" → p.441
- "Pictogram Reading List" → p.442
- . "Face Mark Reading List" → p.445
- If date and time related reading ("ことし" (this year), "きょう" (today), "いま" (now), etc.) is entered, conversion candidates corresponding to the current date and time also appear.
- For other text entry operations such as entering symbols, pictograms, or inserting a space or linefeed, refer to "Useful keys to assist text entry" (p.386) and the function menu of the text entry (edit) screen (p.387).
- You can use kuten codes to enter kanji that cannot be converted. →p.390

Number of characters and scrolling

Numbers of characters remaining and already entered

Characters displayed in the text entry (edit) screen are counted according to the following rules:

• A single-byte character is counted as 1 byte and a double-byte character is counted as 2 bytes.

 A single-byte dakuten and han-dakuten are counted as 1 character respectively.

On the text entry (edit) screen, the end mark " \[\]" indicates the end of the text that can be entered using the current function. Use the end mark as an approximate guide to know how many more characters you can enter.

■ Scrolling

On the text entry (edit) screen, use \bigcirc to scroll by line, and $\boxed{}$ (\bigcirc), and $\boxed{}$ (\bigtriangledown) -) to scroll by page. In the conversion candidates list, you can also use $\boxed{}$ or $\boxed{}$ (\bigcirc) or $\boxed{}$ (\bigtriangledown) to scroll by page.

Data protection during text entry and editing

When the battery runs out or you receive a call during text entry, the entered text is stored.

If the battery runs out

If the low-voltage alarm sounds during text entry, the text entry (edit) screen changes to the "Recharge battery" message screen. When this happens, the entered text is automatically confirmed and saved, so that you can continue entering text when you turn the power back on and retrieve the function. However, in some functions, the entered data is not saved. Also, unconfirmed text that is being converted is not saved. Re-editing the phonebook →p.88

If you press -

If you press during text entry, a message appears asking whether to exit text entry. However, this message does not appear if no text is entered. <To quit without saving the text>

Select "YES". The previous screen or standby screen reappears without saving the entered text.

Alternatively, press to exit the text entry screen

without saving the entered text.

<To continue entering text> Select "NO". The text entry (edit) screen reappears with the entered text still displayed.

Alternatively, press CLR to return to the text entry (edit) screen.

If you receive a voice call

If you receive a voice call during text entry, you can answer the call without disturbing the text being entered. When the call ends, the text entry (edit) screen reappears. You can use [60] (MULTI) during a voice call to display the task switch screen and return to the text entry (edit) screen while talking. — p.355

Other text entry functions

When changing the text entry method on the text entry (edit) screen or entering symbols or pictograms, you can use useful kevs as well as the function menus.

Useful keys to assist text entry

Key	Description
☑ (Chrct)	The input method switches each time you press
(1 second or longer)	Switch the entry method. The mode switches as follows each time you press ☐ (Chrct) (1 second or longer). 5-touch → 2-touch → T9 input
i (PI·SB)	Enter pictograms/symbols continuously or enter face marks/ URLs. In the list display, press ☑ or i to switch tab displays. * Displayed only when Pictograph D (Deco-mail pictogram) is available. To end continuous entry, press □LF.
(1 second or longer)	When Deco-mail pictograms are available, the categorized Pictograph D (Deco-mail pictogram) entry screens appear. →p.147
*	Enter a line feed " J " and move the cursor to the next line (other than in numeric input mode). You can enter dakuten/han-dakuten or switch "Upper case/Lower case" in 5-touch or 2-touch.
(1 second or longer)	Specify text you want to decorate, copy or paste.
<u> </u>	When the cursor is at the end of the text, pressing ☐ enters a space and pressing ☐ enters a line feed.

Key	Description
#	The upper case/lower case mode switches each time you press this key in alphabetic mode of T9 input. Mode released → Shift mode → CapsLock mode Mode released: All characters are entered in lower case. Shift mode: Only the first character entered after switching mode is entered in upper case, then subsequent characters are entered in lower case (Shift mode is released). CapsLock mode: All characters are entered in upper case. Hiragana and Kanji input modes are switched in T9 input.
# (1 second or longer)	Paste the copied or cut text.
	Return to the previous reading in 5-touch. (Example: ₹→う) When Deco-mail can be composed, the decoration menu appears. →p.148
(1 second or longer)	Undo the operation such as converting, pasting or cutting.

< (PI · SB)>

- Previously entered pictograms and symbols are stored in the first line of Pictogram, Deco-mail pictogram (Pictograph D), Double-byte and Single-byte screens respectively.
- Pressing ch (Full) switches to the full-display and switches to the Pictograph screen or Symbols screen.

FUNC Text entry (edit) screen (p.382)

Face Mark.....Display the face marks list. The highlighted face mark appears in two lines in the face marks list, and the reading (meaning) also appears.

Lower case ⇔ Upper case ······ Switch Lower case/ Upper case before entering text.

Single-byte ⇔ Double-byte · · · · · · Switch single-byte/ double-byte modes.

Copy, Cut, Paste → p.390

Common phrases → p.388

Space·····Insert a space (blank). A single-byte space is inserted regardless of double-byte/single-byte input mode.

Line feed ·····Insert a line-feed " ↓ " and move the cursor down to the next line.

Symbols Display the symbols list.

Pictograph Display the Pictogram list.

Kuten code → p.390

Overwrite ⇔ Insert Switch between "Overwrite mode" and "Insert mode". When entering text, a character is inserted to the left of the cursor in "Insert mode" and the character in the cursor position is overwritten in "Overwrite mode". When the text entry (edit) screen opens, insert mode is active by default.

Quote data → p.388

Refer dic. → p.371

Prediction OFF⇔ Prediction ON······Turn Prediction on/off. → p.383

CHG input method······Switch the text entry mode (5-touch/2-touch/T9 input).

Auto cursor → p.383

T9 Kana CHG mode ⇔ T9 Kanji CHG mode ·····Set whether to convert the entered text to kana or kanji when using T9 input.

Jump.....Move the cursor quickly to the beginning or end of sentence.

UNDO.....Undo the operation such as converting, pasting or cutting.

Change window ······ Change the active window when the divided screen is displayed. → p.383

NOTE

<Single-byte/Double-byte>

• You cannot switch double-byte/single-byte modes in "Kanji/Hiragana input mode".

<Line feed>

You can delete or overwrite a line-feed symbol
 J " as well as other characters.

<Symbols>

- You cannot enter double-byte symbols on the mail address registration screen, i-mode mail address input screen or URL input screen.
- You can activate PI · SB input mode by pressing
 ch (PI · SB) after displaying the Symbols screen.

<Pictograph>

- Previously entered pictograms appear in the first line of the Pictogram and Deco-mail pictogram (Pictograph D) screens respectively.
- You can enter symbols while the Pictograms screen is displayed. The list switches each time you press or i.
- You can activate PI · SB input mode by pressing ch (PI · SB) after displaying the Pictograms screen.

<CHG input method>

 On the text entry (edit) screen for specific items such as postal codes, it may not be possible to switch the text entry method.

<T9 Kana CHG mode/T9 Kanji CHG mode>

 This setting is valid only for the current text entry (edit) screen. The next time the text entry (edit) screen appears, the conversion mode reverts to the "T9 change mode" setting.

Deleting text

Use 🔂 to move the cursor to the character you want to delete, and press CLR briefly (less than 1 second). A character to the right of cursor is deleted.





When there is no character in the right side of cursor position

A character to the left of the cursor is deleted.

- If you hold down CLR for 1 second or longer All characters to the right of the cursor are deleted.
- If you hold down CLR for 1 second or longer when there is no character to the right of the cursor

All characters are deleted.

Entering common phrases

- Depending on the input mode, the pre-installed fixed common phrases are entered in kanji/ hiragana or single-byte katakana.
- Editing/Saving common phrases → p.389
- Text entry (edit) screen (p.382)▶

 ch (FUNC)▶"Common phrases"
 ▶Select a folder
- Select a common phrase▶

 (Select)

NOTE

- Common phrases can be used on the following text entry (edit) screens:
 - Edit text memo
 - i-mode mail subject/main text
 - i-mode mail header/signature/quotation mark
 - · Enter mail search subject
 - · Enter auto sort setting subject
 - Edit the Common phrase folder name/Common phrases
 - Edit alarm title
 - · Enter Refer dic. words
 - Edit To Do list
 - Edit Wake-up message
 - Edit i-mode text box
 - Edit i-αppli text
 - Enter password
- If you enter a common phrase on the Password input screen, the entered characters are displayed as " * ".
- If you select a common phrase in the security folder, the common phrase linked to the title is entered instead of the title name.

Entering text by quoting the phonebook or My Profile

On the text entry (edit) screen for mail, site or text memo, you can quote the "Phonebook"/"My Profile" data

Using the guote data function

- You can quote Name, Reading, Phone number, Mail address, Address, Positioning info, Birthday, Memorandums, i-concier address, i-concier URL and i-concier memo.
- Data cannot be quoted on some text entry (edit) screens.
- Text entry (edit) screen (p.382) ch (FUNC) ► "Quote data" ► Select any item:

Quote phonebook······Search for a phonebook entry and select an item to quote. Searching the phonebook → p.89

Quote My Profile Select an item to quote.

Text reader → p.233

Bar code reader → p.230

<Quote My Profile>

- When you quote address information, a space may be entered between items.
- DOCOMO accepts no liability whatsoever regarding the problem resulting from the incorrect owner information entry.

Entering My Profile data

If Prediction is ON, My Profile data appear as candidates by entering keywords.

- Name, Phone number, Mail address, Postal code, Address and Birthday can be displayed. The following are the keywords:
 - Name: "なまえ"
 - Phone number: "でんわ"/"でんわばんごう"
 - Mail address: "めーる"/"めーるあどれす"/"めあ رر شل
 - Postal code: "ゆうびん"/"ゆうびんばんごう"
 - Address: "じゅうしょ"
 - Birthday: "たんじょうび"/"せいねんがっぴ"

NOTE

 If Original lock is set on My Profile, the data cannot be displayed as candidates.

Editing/Saving Common Phrases <Store common phrases>

Save frequently used phrases as common phrases in advance, so that they can be retrieved when entering text

- Common phrases are categorized into 6 folders. Folders 1 and 2 contain 10 pre-installed fixed common phrases respectively. Folders 3 - 5 and security folder can contain up to 10 original common phrases respectively.
- You can edit the fixed common phrases. Kanji, hiragana and single-byte katakana are not automatically distinguished by input mode. The edited text is entered.
- You can rename folders other than security folders to categorize common phrases for your purpose.

Composing a new common phrase

You can save a password to enter on the password entry screen, etc. as common phrases to the security folder.

 Using common phrases in the security folder → p.365



■ Common phrase list screen





Function menu⇒p.389



Highlight "<Not stored>"▶ (Edit) Enter a common phrase

For security folder

► Highlight "<Not stored>" ► (Edit) ► Enter a common phrase Enter the title

NOTE

You can use pictograms for mail common phrases.




Edit folder name

Reset name Reset the folder name to default.

iC trans. all → p.341

Send all Ir data → p.340

* The function menu is not available for the security folder.



Edit

iC transmission* → p.341

Send Ir data* → p.340

Delete this. Delete all

*: Not available for the security folder.

Copying/Cutting/Pasting Text

 Only a single item of copied or cut data can be stored. Copying or cutting a new item overwrites the previously stored text.

Copying (or cutting) text

- Text entry (edit) screen (p.382)▶

 ★ (1 second or longer)
- Move the cursor to the beginning of the text to be copied or cut▶

 (Start)
- Move the cursor to the end of the text to be copied or cut▶■ (End)
 ▶"Copy" or "Cut"

The selected text is stored. Up to 5,000 doublebyte characters or 10,000 single-byte characters can be selected.

You can also use the function menu to cut or paste by selecting "Copy" or "Cut".

If the text is cut

The selected text is deleted, but it is stored in the FOMA terminal.

NOTE

 You cannot copy or paste text when the predicted candidate is displayed.

Pasting text

- Copied or cut text can be pasted repeatedly until you cut or copy other text or turn the power off.
- Text entry (edit) screen (p.382)

 Move the cursor to the position to paste # (1 second or longer)

You can also paste text by selecting "Paste" from the function menu.

If text to be pasted contains characters that cannot be entered on the text entry (edit) screen

A message appears indicating that the characters will be replaced, then a space or " \cdot " will be pasted.

NOTE

 Not available when copied or cut text does not exist.

Entering Characters Using Kuten Code Kuten code>

Use 4-digit kuten codes to enter kanji, hiragana, katakana, symbols and alphanumeric characters.

- For kuten codes and characters that can be entered using kuten code, refer to the PDF format "Kuten Code List" in the provided CD-ROM.
- Characters or symbols in the Kuten Code List may be displayed differently on the screen.
- <Example: To enter "慶" (kuten code 2336)>
- Text entry (edit) screen (p.382)▶

 ch (FUNC)▶"Kuten code"

Kuten code input mode activates and "\(\overline{\overl

- - If there is no character corresponding to the entered kuten code

A space is entered.

Saving Often-Used Words

<Own dictionary>

Add frequently used words with your preferred reading to the own dictionary, and recall these words by entering and converting the reading on the text entry (edit) screen.

- Up to 100 words can be added to the own dictionary.
 - "Own data" "Own dictionary"



Function menu⇒p.391

- "<New>"►Enter a word►Enter the reading
 - To check a word
 - ▶Select a word
 - To edit a word
 - ►Highlight a word ► (Edit)

NOTE

 Added words can also be entered by word prediction.

FUNC Own dictionary screen (p.390)

Edit Edit a stored word.

iC transmission, iC trans. all → p.341

Send Ir data, Send all Ir data → p.340

Copy to microSD → p.329

DeleteSelect Delete this/Delete selected/Delete all.

Resetting Learning Dictionary

<Clear learned>

Clear the learning record (function to store entered text automatically and recall as conversion candidates) (Reset to default).

Settings/NW Service

"Other settings" ➤ "Character input set" ➤ "Clear learned" ➤ Enter your security code ➤ Select any item:

T9/Expect words/Pic. ····· Clear the learned record stored for T9 input, Prediction, Pictograph and Symbols.

Kana/Kanji change/face·····Clear the learned record stored for kana-kanji conversion and the sorting order of the face mark screen.

Using Downloaded Dictionary Oownload dictionary>

deal from Consideration

Set dictionaries downloaded from i-mode sites, etc. as conversion dictionaries.

- Up to 5 download dictionaries can be stored.
- A dictionary is activated when downloaded.
- Downloading dictionaries → p.195





Function menu⇒p.391

Select a dictionary

"* appears next to the active dictionary.

■ To deactivate

► Select a dictionary marked with "★"

The dictionary is deactivated and "★" disappears.

NOTE

- When you activate a face mark download dictionary, the setting is reflected on the list screen for entering face marks. Up to 625 (including the pre-installed 125) face marks are listed on the screen.
- When you download 2 face mark dictionaries and activate both of them, face marks of the first activated download dictionary appear in the list.

Download dictionary screen (p.391)

Edit title

Set dictionary······Activate/Deactivate the download dictionary.

Dictionary info······Display information on the download dictionary.

Delete this, Delete all

Entering Characters in 2-Touch Input Method <2-to

Press 2 dial keys to enter 1 character. For example, to enter "う", the third character of あ column (あいうえお), press コー3.

- Refer to "Allowable characters in 2-touch" (p.440) for details on the key assignment.
- The methods to select a predicted candidate in word prediction and to convert entered hiragana into your preferred word are the same as those of 5-touch. → p.384

<Example: To enter "あきのきゃんぷ">

Text entry (edit) screen (p.382)▶ Set Double-byte input mode

When Double-byte input mode () is not set, press (Chrct) to switch the mode.

Enter hiragana





NOTE

 You can also use ** to enter dakuten/handakuten or to switch Upper case/Lower case.

Entering Characters in T9 Input Method <T9 input>

You can enter a character with few key presses (1) character a time) and select a character or word from the candidates


For example, to enter "春", press 6 for は column. press 9 for ら column, then select "春" from the displayed candidates.

- The "Yomi edit" function works as T9 input assistance to correct the reading when the candidates do not contain your preferred text.
- Refer to "Allowable characters in T9 input" (p.441) for details on the key assignment.
- T9 input mode is available only when the input mode is Kanji/Hiragana, Katakana or Alphabetic. "5-touch" automatically activates in Numeric input mode. <Example: To enter "春" (Spring)>
- Text entry (edit) screen (p.382) Set Kanji/Hiragana input method

When Kanii/Hiragana input mode () is not set, press (Chrct) to switch the method.

Enter characters

6 (t column) 9 (5 column) The predicted candidates for the combination of (# column and 5 column are displayed.



Edit memorandums

characters are entered Characters that cannot be

recognized are displayed in gray. In this case, change the conversion area with To change the candidates.

To switch the candidate display

Kanii/Kana: # English/Japanese: 🖾



The cursor appears in the operation guidance area, and you can select a conversion candidate.

To return to text entry CLR

To display predicted candidates for the highlighted reading



Highlight the candidate and press for to display the predicted candidates for the highlighted candidate reading.

For example, predicted candidates such as "春 休み" or "遥か" appear for "春".

To display conversion candidates for the highlighted reading

Highlight the candidate and press ch (CHG) to display conversion candidates for the highlighted candidate reading.

For example, predicted candidates such as "張 る" or "貼る" appear for "春".

Select a conversion candidate

The selected word appears in the character entry area.



Editing a reading

<Example: To enter "らんらんと">

Enter characters



In this case, the candidates do not contain "らんらんと".





(Yomi)

The Yomi edit mode activates, and the cursor moves to the beginning. The 5 column characters appear in the operation guidance area.

Press the dial key corresponding to your preferred character

In this case, press (1) (5). If a character is edited, the cursor moves to the next character. Use the same procedure to edit the reading.



■ To not edit the reading

►Use to move the cursor to the next character to edit

■ To stop editing in mid-operation

▶ (Return)

The candidates for the reading at the end appear.

Setting T9 change mode

Set whether to convert entered text to kanji, katakana or hiragana when using T9 input.



Using Voice Input

Convert voice to text to compose mail or perform quick search. (Japanese mode)

- To use Voice input mail, application is required and charges apply. When applying for the first time, the service can be used for 30 days with no charges. (i-mode subscription is required.) Packet communications charges apply to use Voice input mail. For more information, visit the NTT DOCOMO website.
- Voice input can be used in the following functions:
 - Compose i-mode mail main text
 - · Enter a keyword for quick search
- Voice may not be recognized in the following circumstances:
 - · Ambient noise is loud
 - · Voice is not clear
 - · Speech is interrupted
 - · You cough or make noise before/after speech
 - You press or rub keys
- When using an earphone microphone (optional), keep your mouth close to the microphone.
- To use this service, you will need to configure the initial settings, and agree to the terms of use.

<Example: When speaking "お元気ですか" (How are you?)>



If a screen appears asking whether to establish communications, select "YES". If "YES (By default)" is selected, the screen will not appear from the next



(Start)

Start speaking after the vibration.

- To end voice input
- ▶ (End)

Return to the Message screen.

To view notes on voice input ▶ch (Guide)

🎧 Speak "お元気ですか"▶■

Speak within 30 seconds. When started from quick search, speak within 10 seconds.

Voice input ends automatically if you do not speak for 3 seconds or so. The volume bar shows the volume of your voice.

After you finish speaking, the handset vibrates.

Volume bar 音声入力中 マクに向かってお話しくださ Voice input

(Set)

Communications is established with the Voice input mail server, and the voice is converted to text. After the conversion is finished, the result of the recognition will be displayed, and conversion candidates will appear.

■ To interrupt voice input

► M (Cancel) or CLR

The voice input start screen reappears after the vibration

393

Check the converted text

Use 🕒 to move between segments. The conversion range cannot be changed.

- To select and enter a word from candidates
- ▶ ☐ Select a conversion candidate
- To re-enter
- ► Marry (Retry) "YES"

The content is discarded, and the voice input start screen reappears.

- To edit using the normal text entry
- ▶ ch (Edit)

The entire text is confirmed, and the Message screen reappears.

Not available when started from quick search.



(Set all)

The entire text is confirmed, and the voice input start screen reappears.

Alternatively, press (Set) when the last segment is highlighted.

NOTE

 Conversion candidates differ between Voice input mail and normal text entry.

Network Services

Voice Mail Service	Voice Mail	396
Call Waiting	Call Waiting	397
Call Forwarding Service	Call Forwarding	398
Nuisance Call Blocking Service	Nuis. call blocking	399
Caller ID Request Service	Caller ID Request	400
Dual Network Service	Dual Network	400
English Guidance	English Guidance	400
Service Numbers	Service Numbers	401
Selecting Actions for an Incoming Call During a Call	Select in-call function	401
Setting Remote Control	Remote Control	402
Multi Number	Multi Number	402
2in1	2in1	403
OFFICEED	OFFICEED	407
Saving and Using Services	Additional service	408

Available Network Services

 Your FOMA terminal provides you with access to a range of useful DOCOMO network services. For the outline and details on the services, refer to the reference pages in the following table.

Service name	Application	Monthly Charge	Ref. page
Voice Mail Service	Required	Charged	p.396
Call Waiting	Required	Charged	p.397
Call Forwarding Service	Required	Free	p.398
Nuisance Call Blocking	Not required	Free	p.399
Caller ID Notification	Not required	Free	p.50
Caller ID Request	Not required	Free	p.400

Service name	Application	Monthly Charge	Ref. page
Public mode (Driving mode)	Not required	Free	p.68
Public mode (Power OFF)	Not required	Free	p.69
Dual Network Service	Required	Charged	p.400
English Guidance	Not required	Free	p.400
Multi Number	Required	Charged	p.402
2in1	Required	Charged	p.403
OFFICEED	Required	Charged	p.407
Melody call	Required	Charged	p.101

- You cannot connect to the Network Service center when in " 📡 ".
- For the application and inquiries, contact the inquiries number provided on the back of this manual.
- This chapter explains the overview of the network services using the menus on the FOMA terminal.
 For details, see "Mobile Phone User's Guide [Network Services]".

Voice Mail Service

<Voice Mail>

This service takes voice messages at the Voice Mail Center when you are in a location with no reception (outside the service area) or when you turn the power off

- To give priority to voice mail when "Record message" (p.71) is set at the same time, set the Voice Mail ring time shorter than the Record message ring time.
- When you do not answer a voice or videophone call while the Voice Mail service is set to "Activate", calls are recorded as "Missed calls" in "Received calls", and the "Missed call" desktop icon appears on the standby screen.
- 20 messages of up to three minutes each can be recorded for voice/videophone calls respectively.
 Messages are stored for up to 72 hours.

Basic flow of Voice Mail service

Voice Mail service activated



Your FOMA terminal receives a voice/ videophone call



You cannot answer the call and it is connected to the Voice Mail service center



The caller records a message

If the caller is in a hurry and wishes to leave a message without listening to the Voice Mail answering message, he or she can interrupt the answering message and switch to message recording mode immediately by pressing #



The Voice Mail service center notifies you that you have a recorded message



You listen to the recorded message

Using the Voice Mail service



"Settings/NW Service" "Network service" "Voice Mail" Select any item:

Play messages*·····Call the Voice Mail center when playing or selecting a voice call/ videophone record message. Follow the audio instructions to play recorded messages.

Activate* Activate the Voice Mail service.

When the ring time (000 - 120 seconds) is set to 0 second, received calls are not recorded in "Beceived calls".

Deactivate

Set ring time······Change the ring time only (000 - 120 seconds).

Check setting* Select Activate/Deactivate/ Set ring time/Activate V.phone/Deactivate V.phone from the function menu of the Voice Mail setting screen.

Setting Select a voice call/videophone record message to change the Voice Mail service settings. A call is made to the Voice Mail center. Follow the audio instructions to configure the settings.

Check messages······Check whether there is a recorded message.

Message notification Emit the original notification tone when a message is added to the Voice Mail center. Only available for a message of a voice call/videophone.

Erase icon······Clear " " (Voice Mail icon) from the standby screen.

Activate notice callNotify you of missed call information via SMS when turning on the power or getting into range.

All Calls Notify you of all received calls.

Calls with Caller ID.....Notify you of only calls with the caller ID.

Deactivate notice call, Notice call status

Setting for videophone·····Set whether to support videophone record messages.

*: When 2in1 is in Dual mode, the screen appears for you to select Number A or Number B. However, the selection screen appears for "Check setting" even in B mode.

NOTE

 If Voice Mail service is activated during Charaden, DTMF tone operation is not available. Change to DTMF mode from the function menu. →p.54

<Check setting>

 When checking the Number B setting for 2in1, only the active or inactive information appears.

<Check messages>

- If you have voice call/videophone recorded messages at the Voice Mail center, " 3 " (voice mail icon) and "" ("Voice Mail" desktop icon) appear on the standby screen.
- The number in the voice mail icon changes according to the number of stored messages " 📱 ", " 🗣 ", " 🧣 " ... " 🥻 " (10 or more messages). The displayed number of recorded messages is the number of new messages announced when played. The number of stored messages is not included.
- You may not be able to use this function to check for messages recorded after checking messages.

<Message notification>

• When 2in1 is in A mode or B mode, the notification tone does not sound when a message is recorded for the unused number.

<Erase icon>

 Clearing the icon does not delete the corresponding recorded message. The voice mail icon appears again when you check for messages.

<Activate notice call>

 Even if you set the SMS Rejection setting, the history is reported.

Call Waiting

<Call Waiting>

Answer incoming voice calls even if you are already on the line. You will hear the Call Waiting tone, and with the touch of a button, you can put your first call on hold and answer the second one. You can also put your current voice call on hold and make a new voice call to someone else.

- To use Call Waiting, set "Arrival Call Act" (p.401) to "Answer" beforehand. If another setting is selected, you will not be able to answer a voice call received during another voice call even when Call Waiting is
- You can answer another call when you receive a videophone call during a voice call or when you receive a voice call or videophone call during a videophone call if you activate Call Waiting and set "Arrival Call Act" to "Answer". In this case, you have to end the current voice call or videophone call (You cannot put the current call on hold). → p.401

Using Call Waiting



MENU ► "Settings/NW Service" ►

"Network service" Call Waiting" Select anv item:

Activate, Deactivate, Check setting

Putting the current voice call on hold to answer a new voice call



When you hear a double-beep, press 🖍

Your first call is automatically put on hold and the new voice call is answered.



Return to the first caller

To end the call with the second caller

The call with the second caller ends, and the first call restarts.

To put the second caller on hold

The call with the second caller is put on hold, and the first call restarts.

You can switch back and forth between the 2 calls by pressing .

■ To end the voice call on hold

▶ ch (FUNC)▶"End held call"

Ending the current voice call on hold to answer a new voice call



When you hear a double-beep, press ---

The first call ends and the ring tone sounds.





Answer a new voice call.

Putting the current voice call on hold to make a voice call to someone else



Dial another phone number during a call

Your first call is automatically put on hold and the new call starts.

You can search for a phone number from Phonebook. Received calls or Redial. →pp.58, 90



Return to the first caller

■ To end the new call



The new call ends, and the first call restarts.

To put the new call on hold

The new call is put on hold, and the first call restarts

You can switch back and forth between the 2 calls by pressing ...

To end the voice call on hold

▶ch (FUNC)▶"End held call"

Call Forwarding Service

<Call Forwarding>

This service forwards an incoming voice/videophone call when radio signals are too weak, when the power is turned off or when you do not answer the call within the set ring duration.

- To give priority to the Call Forwarding service when "Record message" (p.71) is set at the same time, set the Call Forwarding ring time shorter than the Record message ring time.
- When you do not answer a voice or videophone call while the Call Forwarding service is set to "Activate", calls are recorded as "Missed calls" in "Received calls", and the "Missed call" desktop icon

Basic flow of Call Forwarding service

Call Forwarding number registered

appears on the standby screen.

Call Forwarding service activated

Your FOMA terminal receives a voice or videophone call

If you do not answer the voice or videophone call, it is automatically forwarded to the specified number

Call Forwarding service dialing charges



Charges paid by the caller.

Charges paid by the Call Forwarding service subscriber.

Using the Call Forwarding service



"Settings/NW Service" "Network service" Call Forwarding" Select any item:

Activate*1.....Set the forwarding number and ring time, then select "Activate".

Register fwd number ······ Enter the forwarding number. Once you set the number, "★" appears next to Register fwd

 You can use ① or ☐ to enter the number by searching the phonebook.
 Searching the phonebook → p.90

Set ring time ······Enter the ring time (000 - 120 seconds). Once you set the time, "★" appears next to Set ring time. When set to 0 second, received calls are not recorded in "Received calls".

Activate ······ Activate the Call Forwarding service.

Deactivate*1

Register number·····Enter the forwarding number, and select Register number/Register No.+Activate. When you select Register No.+Activate, you can also set the Call Forwarding service to Activate simultaneously.

If FWD number busy *2..... Connect an incoming voice call/videophone to the Voice Mail center when the forwarding party is busy.

Check setting*1

- *1: When 2in1 is in Dual mode, the screen appears for you to select Number A or Number B. However, the selection screen appears for "Check setting" even in B mode.
- *2: The "Voice Mail service" subscription is required.

NOTE

- <Activate>
- When 2in1 is in B mode, you cannot select "Register fwd number" and "Set ring time".
- <Register number>
- When 2in1 is in B mode, you cannot select "Register No. + Activate".

<Check setting>

 When checking the Number B setting for 2in1, only the "Active" or "Inactive" information appears.

Setting the Call Forwarding announcement




- Follow the audio instructions.
- For details, refer to "Mobile Phone User's Guide [Network Services]".

Nuisance Call Blocking Service <Nuis. call blocking>

If you receive prank calls, you can program your FOMA terminal to block calls. Calls are automatically blocked, and the caller will hear an announcement stating that the call cannot be accepted at the number reached.

 If someone tries to call you again from that number, your phone will not ring. The calls do not appear in your call history.

Using the Nuisance Call Blocking service



Register Caller ······ Add the number of the last call you answered to the Call Blocking list.

Register selected No·····Register numbers for incoming calls to be rejected by entering the numbers or using the Phonebook and incoming call histories.

- You can use to search the Received calls record and to search the Redial record.

Delete last entry·····Delete the last registered phone number. By repeating the same procedure, you can delete numbers in reverse chronological order.

Delete all entries, Check No of entries

Caller ID Request Service

<Caller ID Request>

If the caller's number is not displayed, they will hear an announcement instructing them to activate Caller ID Display by dialing 186 before the number and call again, and the call will end.

• Calls rejected by the Caller ID request service are not recorded in "Received calls", and the "Missed call" desktop icon does not appear.

Using the Caller ID Request service



"Settings/NW Service" "Network service" Caller ID Request" Select any item:

Activate, Deactivate, Check setting

NOTE

 In PushTalk, the caller sees the message "Turn on Caller ID Notification", and the call is automatically disconnected. If it is a group call, "ID Request" appears.

Dual Network Service

<Dual Network>

This service lets you use your FOMA terminal number with mova. Just change to your mova phone when you are out of the FOMA service area to make calls and communications, and vice versa.

- The FOMA and mova services cannot be used simultaneously.
- Switch the Dual network service from the terminal not using the service.
- For details on how to access the service from a mova terminal, refer to the "Mobile Phone User's Guide [Network Services]".

Using the Dual Network service



⋒ Settings/NW Service"▶ "Network service">"Dual Network"▶Select anv item:

Dual Network switching Enter your network security code to switch. Network security code → p.124

Check setting

NOTE

 If you use Dual Network Service on the mova terminal in Japan after using the FOMA terminal overseas, turn on the FOMA terminal before use.

<Dual Network switching>

 Switch networks only after finishing transmissions with the handset that is enabled for use.

English Guidance

<English Guidance>

Set your FOMA terminal to play recorded announcements in English when you are configuring network services such as the "Voice Mail" service or in a location with no reception (outside the service area).

Item	Language	Announcement
Outgoing	Japanese	Play in Japanese.
(including the announcement for configuring network services)	English	Play in English.
Incoming	Japanese	Play in Japanese.
(Announcement for person calling)	Japanese+ English	The English prompt follows the Japanese prompt.
	English+ Japanese	The Japanese prompt follows the English prompt.

Using the English Guidance



"Settings/NW Service" "Network service" "English Guidance" Select any item:

Guidance setting······Select the setting from the following:

Outgoing+Incoming·····Select Japanese/ English for outgoing calls, then select Japanese/Japanese+English/ English+Japanese for incoming calls.

Outgoing call ······ Select Japanese/ English for outgoing calls.

Incoming call·····Select Japanese/ Japanese+English/English+Japanese for incoming calls.

Check setting


NOTE

 If the call is made between DOCOMO mobile phones, the caller's announcement setting at the time of dialing takes priority over the receiver's setting at the time of receiving.

Service Numbers < Service Numbers>

Make a call to the DOCOMO General Inquiries or Repairs number.

 The displayed items may vary or the items may not appear depending on the FOMA card (UIM).



ドコモ故障問合せ……Call the DOCOMO Repairs Center.

ドコモ総合案内・受付……Call the DOCOMO General Inquiries Center.


Selecting Actions for an Incoming Call During a Call

<Select in-call function>

Set how to handle voice calls, videophone calls and 64K data communications incoming during a call when you have subscribed to the "Voice Mail", "Call Forwarding" or "Call Waiting" service.

- If you have not subscribed to "Voice Mail", "Call Forwarding" or "Call Waiting" service, you cannot answer calls incoming during a call.
- To use "Arrival Call Act", set "Set in-call arrival" to "Active". If "Call Waiting" is set to "Activate", there is no need to set "Set in-call arrival" to "Activate".

Selecting actions for calls incoming during a call < Arrival Call Act

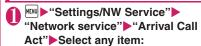

Voice Mail·····Transfer voice or videophone calls received during a call to the Voice Mail service center regardless of the "Call Waiting" and "Voice Mail" service settings.

Call Forwarding·····Forward voice and videophone calls received during a call to the forwarding number regardless of the "Call Waiting" and "Call Forwarding" service settings.

Call Rejection Reject voice and videophone calls and 64K data communications received during a call.


Answer Use "Call Waiting" when activated, if a voice call arrives during a voice call. During a voice call (with "Call Waiting" set to

"Deactivate"), videophone call or 64K data communications, the following operations can be performed:

- You can end the current voice call, videophone call or 64K data communications, and answer an incoming call or communication.
- You can use the function menu to manually handle a voice call, videophone call or 64K data communications incoming during a call.
 →p.402
- If the "Voice Mail" service or "Call Forwarding" service is active, the settings apply.

Set in-call arrival

Activate/Deactivate the function setting selected in "Arrival Call Act" or check the setting.

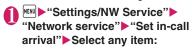


Activate, Deactivate ······ Activate/Deactivate the "Arrival Call Act" setting.

Check setting

Ending the current call or 64K data communications to answer an incoming call

 When the current call and incoming call are the same type

<Example: To end the current voice call to answer an incoming voice call>



The current call ends and the ring tone sounds.

For videophone or 64K data communications

The ringing screen appears.






Answer a new voice call.

- For 64K data communications
- ▶ Receive the call on a PC
- When the types of the current call and incoming call are not the same

If you receive a videophone call or 64K data communications during a voice call, if you receive a voice call or 64K data communications during a videophone call, or if you receive a voice or videophone call during 64K data communications, follow the procedure below to end your current call or 64K data communications to answer the incoming call.

<Example: To end the current videophone call to answer an incoming voice call>



When you receive a 64K data communication, the double-beep does not sound.





► Receive the call on a PC

Rejecting calls manually or connecting to the Call Forwarding or Voice Mail service

<Example: "Set in-call arrival" is set to "Activate" and "Arrival Call Act" is set to "Answer">

When you hear a double-beep, press ch (FUNC)

- Select how to handle the incoming call
 - To reject the incoming call
 - ▶ "Call Rejection"
 - To forward the incoming call to the forwarding number
 - ▶"Call Forwarding"
 - To transfer the incoming to the Voice Mail service center
 - ▶"Voice Mail"

In any of the above cases, you can return to your first call.

Setting Remote Control

<Remote Control>

Operate "Voice Mail", "Call Forwarding", etc. from touch-tone landline phones, payphones, DOCOMO mobile phones, etc.

- mobile phones, etc.

 To use the "Voice Mail" or "Call Forwarding" service overseas, set Remote Control beforehand.
- For details on operating network services from a payphone, etc., refer to "Mobile Phone User's Guide [Network Services]".



Activate, Deactivate, Check setting


Multi Number

<Multi Number>

Set up to two mobile phone numbers in addition to the number for your FOMA basic subscription.

- Cannot be used with 2in1 at the same time.
- Names corresponding to the multi number (basic number, Additional number 1/2) appear on the dialing/ringing screens.
- When you make a call using the Redial, Incoming and Outgoing call histories, the previously dialed/ received multi number appears, and a call is made using the number.

Using Multi Number

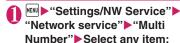

Set Multi Number Set the phone number used for normal dialing.

Basic Number*.....Dial using the subscribed phone number (basic number).

Additional Number1, Additional Number2*·····Dial using the additional number

Check setting

Number Setting · · · · · Register an additional number notified at the subscription of the Multi number to the FOMA terminal.

► Highlight an item to register (or change) an additional number ► ☑ (Edit) ► Enter a name ► Enter an additional number

You can enter up to 26 digits for the additional number.

 Function menu of the "Multi Number setting" screen opened when "Number Setting" is selected

p.403

Select ring tone·····Set ring tones for incoming calls to the additional number 1 and additional number 2 respectively. → p.98

*: If the registered name has been changed, the new name appears.

NOTE

 If you remove or replace the FOMA card (UIM), the Multi Number settings (name, phone number, etc) on the FOMA terminal may be erased. In this case, register the settings again.

<Number Setting>

 The registered name appears when configuring Multi Number settings or selecting a phone number for each call.

<Select ring tone>

 Refer to p.99 for the priority when the ring tone settings are duplicated.

FUNC Multi Number setting screen

EditEdit a basic number name or additional number phone number/name.

Delete this.....Delete a basic number name or additional number phone number/name.

Delete all·····Delete all basic number names or additional number phone numbers/names.

Switching the phone number for each call

Switch the phone number each time you make a call.

Enter phone number screen (p.52)

ch (FUNC)▶"Multi Number"▶

Select any item:

Basic Number*.....Dial using the subscribed phone number (basic number).

Additional Number1, Additional Number2

·····Dial using the additional number.

Cancel number······Cancel the setting and dial using the "Set Multi Number" setting.

*: If the registered name has been changed, the new name appears.

NOTE

 You can also switch the phone number from the function menu of the phonebook detail screen, Redial/Dialed calls/Received calls detail screen, etc.

2in1 <2in1>

2in1 is a service that adds another phone number and mail address to a mobile phone. This lets you switch your number and address by mode according to who you communicate with and the situation.

- In this function, your phone number and mail address are called "Number A/Address A" and an additional phone number and mail address are called "Number B/Address B".
- Cannot be used with Multi Number at the same time.

Modes

In 2in1, modes can be set to "A mode", "B mode" or "Dual mode".

Mode	Description
A mode	You can dial using your phone number (Number A), send i-mode mail using Address A, and browse related data.
B mode	You can dial using 2in1 phone number (Number B), send i-mode mail using Address B, and browse related data.
Dual mode	Dual mode contains both A and B modes.

 See Table 1 (p.404) for available services in each mode.

NOTE

- Number B/Address B information can be obtained following the procedure below:
 - Number B: Run "Check 2in1" from the function menu of the "My Profile" screen for Number B → p.366
 - Address B: Obtain a mail address automatically when registering My Profile for Number B →p.366
- For details on 2in1, refer to "Mobile Phone User's Guide [2in1]".

NOTE

- Packet communication is available in B mode while you are the i-mode service subscriber.
- Set A mode before you replace a 2in1-subscribed FOMA card (UIM) with a FOMA card (UIM) not subscribed.
- Reset My Profile for Number B first before you exchange FOMA cards (UIM) while using 2in1. →p.366

[Table 1] Services available for each mode

 The table lists only functions whose operations vary depending on the mode. (Excluding ones whose operations are the same as those of A mode)

	Service	•	A mode	B mode	Dual mode	
Voice call/ Videophone	Dial		Number A	Number B	Selectable when dialing*1	
	Receive*2		All			
Phonebook*3	Display*4		A: Common	B: Common	All	
	Name con	version ^{*5}	A: Common	B: Common	All	
	2in1 settin registration	•	A	В	A	
	iC commun	mmunications/	Copy the Phonebook	2in1 setting of the send	ler ^{*6}	
	iC commun	mmunications/	A	В	A	
	UIM	Copy to UIM	Phonebook 2in1 setting: Common			
	phonebook	Copy to phone	Α	В	Α	
Redial	Display		Dial with Number A	Dial with Number B	All	
Received calls	Display		Receive with Number A	Receive with Number B	All	
Mail/SMS	Display*4		Mail sent/received using Address A SMS sent/received using Number A	Mail sent/received using Address B SMS received using Number B	Mail sent/received using Address A Mail sent/received using Address B SMS sent/received using Number A SMS received using Number B	
	Send		Mail from Address A SMS from Number A	Mail from Address B SMS cannot be sent using Number B	Mail from Address A SMS from Number A Mail from Address B SMS cannot be sent using Number B	

Service		A mode	B mode	Dual mode	
Mail/SMS	Receive		Mail to Address A/ SMS to Number A (vibration) Mail to Address B/ SMS to Number B (no vibration)	Mail to Address A/ SMS to Number A (no vibration) Mail to Address B/ SMS to Number B (vibration)	Mail to Address A/ SMS to Number A (vibration) Mail to Address B/ SMS to Number B (vibration)
Receive all data via infrared communications/ iC communications/ Bluetooth communications or from a microSD card		Copy the sender's sta	tus ^{*6}		
	Receive one data via infrared communications/ iC communications/ Bluetooth communications or from a microSD card		A		
	FOMA	Copy to UIM	A		
	card (UIM) (SMS only)	Copy to phone	А	Cannot be displayed	А
PushTalk	Dial		Number A	Not available	Number A
	Receive*2		Number A		
	PushTalk phonebook		Display	Cannot be displayed	Display
i-αppli	i-αppli		All available	Available*7	Available*8
My Profile		Number A/Address A	Number B/Address B	Number A/B Address A/B	

^{*1:} Number A is dialed by default when "Phonebook 2in1 setting" is set to "A"/"AB" (common), and Number B is dialed by default when "Phonebook 2in1 setting" is set to "B".

^{*2:} If Call acceptation or Call rejection is active, calls are accepted/rejected regardless of the mode or Phonebook 2in1 setting.

^{*3:} Priority is given to Secret data when the data is saved as secret.

^{*4:} In B mode, all phonebook entries in a microSD card are displayed in a list. However, the details are not displayed when Phonebook 2in1 setting is set to A mode. Although mail/SMS are also listed, the details are not displayed if the mail/SMS is sent to Number A/Address A.

^{*5:} This function checks with phonebook data and converts caller's number, receiver's number, sender's number, recipient's number, sender's address and recipient's address into names in phonebook data.

^{*6: &}quot;A" applies when the sender uses a 2in1-incompatible phone.

^{*7 :} Except for mail-linked i-αppli and the i-αppli standby screen.

^{*8 :} Except for the i-αppli standby screen.

Using 2in1

Set 2in1 to ON and configure settings.



"Network service" "2in1 setting" Enter your security code "YES" Select any item:

■ When 2in1 is set to ON

After entering your security code, the 2in1 setting screen appears instead of a screen asking whether to set 2in1 to ON.

Mode switching······Select A mode/B mode/ Dual mode. "Modes" → p.403

Phonebook 2in1 setting.....Set "Phonebook 2in1 setting"/"Group 2in1 setting" for the phonebook to appear following the mode setting when in 2in1. Highlight a phonebook entry or group and press ■ (Switch) to select a mode, then press ■ (Finish). Each time you press ■ (Switch), the mode switches as follows: ■ (Switch), the mode switches as follows: → D.90

Stand-by display·····Set the standby screen displayed in B mode or Dual mode respectively. → p.107

"★" appears for the changed item. Press (Reset) to reset the setting to default.

Set call/receive No.

Ringtone for Number B.·····Set incoming operations for Number B. In "Voice call (recv.)" or "V.phone (recv.)", the following ① Ring tone, ② Image, ③ Illumination, ④ Vibrator and ⑤ Answer message can be set. In "Mail (recv.)", the following ① Ring tone, ③ Illumination and ④ Vibrator can be set:

Voice call (recv.), V.phone (recv.), Mail (recv.).....

- ① Ring tone: Go to Step 2 in "Select ring tone" (p.98)
- ② Image: Go to "To set the calling/ receiving display" under Step 2 in "Select ring tone" (p.98)
- ③ Illumination: Go to Step 1 in "Illumination" (p.111)
- ④ Vibrator: Go to Step 2 in "Vibrator" (p.100)
- ⑤ Answer message: Go to the step performed after selecting "ON" under Step 1 in "Record message" (p.71)

2in1 function OFF

Rcv. avoid. setting······Restrict incoming calls for Number A and Number B.

Change rcv. avoid. Set the Rcv. avoid. setting for Number A and Number B.

Check rcv. avoid.

Mode link·····Link the 2in1 Mode switching to Rcv. avoid. setting. Number A incoming call is accepted in A mode, Number B incoming call in B mode, and both calls in Dual mode.

*When the function is active, the mode cannot be switched with " * " displayed.

Rcv. avoid. (abroad) ····· Set the Rcv. avoid. setting overseas (disabled when Mode link is active).

NOTE

 When 2in1 is set to OFF, you can also configure "2in1 setting" by pressing 2 for 1 second or longer on the standby screen.

<Mode switching>

You can also switch modes by pressing 2 for 1 second or longer on the standby screen.

<Phonebook 2in1 setting>

- Phonebook entries in "B" setting cannot be added to the PushTalk phonebook.
- When entries in the PushTalk phonebook are set to "B", a confirmation screen appears indicating that PushTalk calls cannot be made.
- You cannot set this function for UIM phonebook entries.
- Select "Display detail" from the function menu to open the Phonebook detail screen from the Phonebook list screen.

NOTE

<Stand-by display>

- When the mode is set to A mode, the standby screen appears following "Display setting".
- When the pre-installed "ダイレクトメニュー" (Direct menu), downloaded Kisekae Tool, i-αppli standby screen or random display is set as the standby screen, the default screen for each mode appears even when "Same as Number A" is set.

<Disp. call/receive No.>

- Names, phone numbers and mail addresses will appear in the set color on the following screens:
 - In-call
 - Dialing/Receiving
 - Redial/Dialed calls (list/detail)
 - · Received calls (list/detail)
 - · Sent/Received addresses (list/detail)
 - · Chaku-moji Sent messages
- The Number A/Number B (Address A/Address B) setting applies to the ringing screen, etc. even when 2in1 is set to OFF.

<Ringtone for Number B>


- To set the same setting as Number A/Address A, set each item to "Same as Number A".
- When the ring tone settings are duplicated, the priority applies. → p.99
- If a call is made to Number B without caller ID displayed, "Call setting w/o ID" applies. When the setting under "Call setting w/o ID" is set to "Accept" then a videophone call arrives, "V.phone (recv.)" under "Ringtone for Number B" applies.

Switching the phone number for each call

When 2in1 is set to ON and the mode is set to Dual mode, phone numbers can be switched when making a call

 This function is available on the detail screen of Phonebook/Received calls/Dialed calls/Redial.

<Example: To make a call using the phonebook>

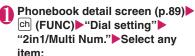

Number A, Number B······Allow calls to be made using Number A/Number B.

Cancel number Release the setting and allow calls to be made according to the Phonebook 2in1 setting.

NOTE

- When the following operations are performed, the phone number selection screen appears. Select a phone number.
 - When making a call by entering a phone number on the Enter phone number screen
 - When using services from the special number registered in Additional service
 - When selecting "Dialing" from the function menu in Sent/Received address list
 - When using the Phone to function
 - When holding down the switch of earphone/ microphone (optional), etc. on the Enter phone number screen
- When dialed from an external device or dialed with AT command, Number A is dialed in A mode or Dual mode, and Number B in B mode.

OFFICEED

<OFFICEED>

"OFFICEED" is a flat-rate group service provided by the specified IMCS (Inbuilding Mobile Communication System). A separate subscription is required. For details, refer to the NTT DOCOMO corporate website (http://www.docomo.biz/d/212/) (Japanese).

Saving and Using Services

<Additional service:

When DOCOMO offers a new network service, add the service to the menu and use it.

Adding a new service or answer message



Additional service · · · · Add new services.

► Highlight "<Not stored>" ► ch (FUNC) ► "Add new service" ► Enter a service name ► Select any item:

Enter number Use the special number to connect. You can enter up to 20 digits.

Enter USSD number Use the service code to connect. You can enter up to 40 digits.

Additional guidance Register an answer message for commands posted from the network when using the added network service with "USSD" (service code).

- ► Highlight "<Not stored>" ► (FUNC) ► "Add new guidance" ► Enter a command ► Enter an answer message name ► "YES"

 You can enter up to 20 digits for the command.
- To edit the additional service or additional guidance
- ▶ch (FUNC)▶"Edit"
- To delete the additional service or additional guidance
- ► Ch (FUNC) Select a deletion method

NOTE

<Additional service>

 To use the service, enter the "number" or "service code" provided by DOCOMO. The "number" is the number used to connect to the service center. The "service code" (USSD) is the code used to report to the service center.



Additional service screen/ Additional guidance screen

Add new service, Add new guidance, Edit, Delete this, Delete all ······ Select any item.

Using an added service

- "Settings/NW Service" "Network service" "Additional service" "Additional service"
- Select a service ► (Send)

Overseas Use

Outline of International Roaming (WORLD WING)	410
Available Services Overseas	410
Before Use Overseas	411
Making a Call from the Country You Stay	413
Receiving a Call in the Country You Stay	413
Switching Network Connections	414
Setting a Search Method of Telecommunications Carrier	414
Checking Available Communication Services Network status	414
Setting Telecommunications Carrier to Preferentially Connect toPLMN setting	414
Displaying Telecommunications Carrier During Roaming	415
Activating Roaming Guidance	415
Setting Incoming Call to Reject During RoamingBar incoming when roam	415
Setting SMS Report for Calls Received During Roaming Missed Call Notice	416
Using Network Services During Roaming Service (Int.)	416

Outline of International Roaming (WORLD WING)

WORLD WING is DOCOMO's international roaming service that enables you to use your FOMA terminal number and mail address while overseas as you do in Japan.

- N-09A can be used in the 3G and GSM/GPRS network service areas. Also can be used in countries/ regions compatible with 3G850MHz. For details on the service areas and charges, see "Mobile Phone User's Guide [International Services]" or the DOCOMO International services website.
- Overseas networks contain three types of communication methods: 3G, GPRS, and GSM.
 - 3G network:
 3rd generation mobile network compliant with the 3GPP* global standard.
 - GSM (Global System for Mobile Communications):
 - Digital second-generation mobile communication network most popular worldwide.
 - GPRS (General Packet Radio Service):
 2.5-generation mobile communication network which employs GSM communication method and provides packet communications.
 - *: A regional standardization body established to develop commonly applied technical specifications for 3rdgeneration mobile communications systems (IMT-2000).
- Before overseas use, refer to the following:
 - "Mobile Phone User's Guide [International Services]"
 - "Mobile Phone User's Guide [Network Services]"
 - DOCOMO International services website
 - PDF file "海外ご利用ガイド" (Overseas Use Guide) in My Document under Data box
- See p.410 and p.412 for country codes/international call access codes of major countries and international prefix numbers for the universal number.

■ Country codes of major countries

Enter the following country codes when using international call or setting "Country code" in "Int'l dial assistance".

Area	Code	Area	Code
Australia	61	Korea	82
Austria	43	Macau	853
Belgium	32	Malaysia	60
Brazil	55	Maldives	960
Canada	1	New Caledonia	687
China	86	New Zealand	64
Czech	420	Norway	47
Egypt	20	Peru	51

Area	Code	Area	Code
Fiji	679	Philippines	63
Finland	358	Russia	7
France	33	Singapore	65
French Polynesia	689	Spain	34
Germany	49	Sweden	46
Greece	30	Switzerland	41
Holland	31	Taiwan	886
Hong Kong	852	Thailand	66
Hungary	36	Turkey	90
India	91	United Kingdom	44
Indonesia	62	United States of	1
Italy	39	America	
Japan	81	Vietnam	84

^{*} For other country codes and details, see "Mobile Phone User's Guide [International Services]" or the DOCOMO International services website.

Available Services Overseas

- Some services may not be available depending on the operator or area. For countries and operators, see "Mobile Phone User's Guide [International Services]" or the DOCOMO International services website.
- Packet communications charges overseas are different from those in Japan.

Available communication services overseas

3G	GPRS	GSM
○*1	○*1	○*1
O*1*2	×	×
0	0	×
0	0	×
0	0	×
0	0	×
0	0	0
○*3	○*3	×
○*4	O*4	×
○*5	○*5	×
	0"1"2 0 0 0 0 0 0 0 0 0 0 0 0 14	0'1' 0'1 0'1'2

- *1 : Dialing using Number B of 2in1 is not available (when receiving a call to Number B, some operators cannot determine to which number the call was made). You cannot make a call from the additional number of Multi Number.
- *2: International videophone calls are available with users of specific roaming operators overseas or FOMA terminals in Japan.

- *3: The automatic update will be automatically paused when a roaming operator is connected. To resume the i-Channel automatic update, it is required to set the i-Channel setting again. However, packet communications charges apply in addition to monthly charges. When you automatically update information on "Basic Channel", the packet communications charges will apply. (Included in monthly information charges in Japan.)
- *4: For overseas use, i-concier "海外利用設定" (Overseas use settings) is required. →p.213
 - You may not be able to obtain all i-concier data depending on the network.
- *5 : For overseas use, "i-Widget roaming set" is required.

 → p.282
 - When you open the i-Widget screen, multiple Widget Appli may establish communications. Packet communications charges apply when the i-Widget screen is opened overseas. Packet communications charges incurred overseas differ from those in Japan.

NOTE

 During international roaming, you cannot receive MessageF, receive Area Mail, send/receive Chakumoji, perform "Pattern data update" and "Set autoupdate" of Scanning function, update software or use 64K data communication connected with a PC. However, you can delete harmful data or cancel activating malicious applications. 2in1 may not be set to ON depending on your destination.

■ Displayed icon

The name and status of currently used network appear in the task icon display area (p.24).

lcon	Meaning
	With the FOMA network in Japan, only dialing available/only packet communications available
36/36/36	With 3G network of roaming service operator overseas, only dialing available/only packet communications available/both dialing and packet communications available
6SM/GPRS/GPRS	With GSM/GPRS network of roaming service operator overseas, only dialing available/ only packet communications available/both dialing and packet communications available

Before Use Overseas

- If you started to use FOMA services after September 1, 2005, you do not have to apply for international roaming services to use it. However, if you did not wish to use it, you have to apply for it separately.
- If you started to use FOMA services before August 31, 2005 and have not applied for "WORLD WING" vet. you have to apply for it separately.
- To use international roaming services, a WORLD WING-compatible FOMA card (green/white) must be inserted.
- Services are not available in some billing plans.
- Usage charges overseas are included in monthly charges. Usage charges overseas may not be all billed in the same month, even if incurred in the same billing period, depending on conditions at the operator, etc. at your destination.
- Call charges displayed in "Call data" include both incoming and outgoing calls. However, the displayed call charges may differ from the actual ones, or "\fomega * *" may appear.
- By default, when the power is turned on after you arrive at the destination overseas, a local roaming operator is automatically searched and connected. If you move out of the service area, another available operator in that area will be automatically searched and connected. You can also set the operator manually. → p.414

■ Battery charging

- Precautions for the AC adapter → p.17 "Precautions for the Adapter"
- Charging via the AC adapter → p.44 "Charging"

■ Viewing i-mode sites

To view i-mode sites from overseas, set "International Settings" from "iMenu/Search" beforehand.

► "i-mode" ➤ "iMenu/Search" ➤ "English" ➤
"Options" ➤ "International Settings" ➤ "i-mode services
Settings" ➤ "Yes" ➤ Enter i-mode password ➤ "Select"

■ Network services

You can also use network services such as the Voice Mail service and Call Forwarding service if you have subscribed to these network services.

- Before using the network services overseas, "Remote Control" (p.402) must be set to "Activate".
- Even when operations such as activating/ deactivating are available, the services may be restricted or unavailable.

■SMS

This service allows you to exchange text messages with subscribers to overseas operators other than DOCOMO.

- To send an SMS to a user of a roaming operator overseas, enter "+" and the country code in front of the phone number (when the phone number begins with "0", omit the first "0").
 - You can also send SMS by entering "010", the country code, then the other party's phone number. (To reply to received SMS from overseas, enter "010").
- When sending a SMS to a user of a roaming operator overseas and a character contained in SMS is not supported by the other party's mobile phone, the character may not be properly displayed.

Inquiries overseas

For inquiries overseas such as lost, stolen, charge accumulation or malfunction, refer to "For lost, stolen, charge accumulation, etc. overseas" or "Repairs overseas" on the back cover of this manual. Note that you must pay communication charges incurred after it is lost or stolen.

 For international call access code and international prefix number for the universal number, see "Mobile Phone User's Guide [International Services]" or the DOCOMO International services website.

■ International call access code of major countries (Table 1)

Countries (Table 1)						
Area	Code	Area	Code			
Australia	0011	Malaysia	00			
Belgium	00	Monaco	00			
Brazil	0021/	New Zealand	00			
	0014	Norway	00			
Canada	011	Philippines	00			
China	00	Poland	00			
Czech	00	Portugal	00			
Denmark	00	Russia	810			
Finland	00	Singapore	001			
France	00	Spain	00			
Germany	00	Sweden	00			
Greece	00	Switzerland	00			
Holland	00	Taiwan	002			
Hong Kong	001	Thailand	001			
Hungary	00	Turkey	00			
India	00	United Arab	00			
Indonesia	001	Emirates				
Ireland	00	United Kingdom	00			
Italy	00	United States	011			
Korea	001	of America				
Luxembourg	00	Vietnam	00			
Macau	00					

International Prefix number for the universal number (Table 2)

Area	Code	Area	Code
Argentina	00	Korea	001
Australia	0011	Luxembourg	00
Austria	00	Malaysia	00
Belgium	00	New Zealand	00
Brazil	0021	Norway	00
Bulgaria	00	Peru	00
Canada	011	Philippines	00
China	00	Portugal	00
Colombia	009	Singapore	001
Denmark	00	South Africa	09
Finland	990	Spain	00
France	00	Sweden	00
Germany	00	Switzerland	00
Holland	00	Taiwan	00
Hong Kong	001	Thailand	001
Hungary	00	United Kingdom	00
Ireland	00	United States	011
Israel	014	of America	
Italy	00		

- * Note that you may not be able to use a universal number when making a call from your mobile phone, public phones, your hotel telephone, etc.
- * The universal number can only be used in countries and regions shown above.
- * If you make a call from a hotel, the hotel may bill telephone charges. (You are responsible for the charges.) Please make the inquiry at the hotel before making a call.

Use in the local area

This FOMA terminal is available in the 3G, GPRS, and GSM roaming area. When the power is turned on after you arrive overseas, a local roaming operator is automatically connected.

Display, date and time

While using overseas, the name of the operator connected appears on the standby screen.

- "Displaying the Roaming Operator's Name" → p.415
- When the auto time difference setting (p.49) is set to "Auto", the date and time/time difference on the FOMA terminal is adjusted automatically by receiving information on the local one from a connected network of an operator overseas. The adjustment timings vary depending on the network or operator overseas.
- The time may not be automatically adjusted overseas. In this case, set the date and time manually. → p.49
- Regardless of the "Set main time" setting, the Received address list is displayed based on the Japan standard time.

- When " "remains on the screen, set "NW search mode" to "Auto". It may take some time to search for networks immediately after turning on the power, and " " may be displayed while searching.
- Not the correct caller ID but "Unknown" or "User unsent" may appear on the other party's display depending upon conditions of roaming operator even when the caller ID is notified. A call may be received even when you use the "Caller ID Request" service.

After returning to Japan

When you return to Japan and turn on the power, the network will be automatically searched and connected to the FOMA network (DOCOMO). "Setting the Operator Search Mode" → p.414

Making a Call from the Country You Stay

You can use the international roaming service to make voice or videophone calls from abroad.

Making a local call in the country of stay

To make a call, dial the phone number of the other party's general phone or mobile phone as you do in Japan. →p.52

 The "Int'l dial assistance" message may appear when you use the phonebook to make a call. Select "Original phone No".

Making a call to outside your destination country (including Japan)

On the standby screen, dial the following; + (○ (1 second or longer)) → Country code → Area code (City code) → The other party's phone number

Dial the other party's phone number excluding "0" at the beginning of the mobile phone number or area code (city code). However, to call to some countries/areas, such as in Italy, "0" is required.

- (voice call), 🖾 (V.phone)
- Making a call to a country stored in "Country Code setting" under "Int'l dial assistance"

You can easily dial the number by storing the country name and codes of a party you often call in "Int'l dial assistance".

- "Int'l dial assistance" → p.57
- You can also make an international call from the phonebook, Redial or Dialed calls record.

- Enter the phone number of the other party ch (FUNC) "Int'l call" Select a country
 - (voice call) or (V.phone)
 - "+" and "Country code" are prefixed and an international call is made
- Making a call to a country set in "Auto int'l call set." under "Int'l dial assistance"
- You can also make an international call from the phonebook, Redial or Dialed calls record.
- Only available when the phone number begins with "0".
- Set "Auto int'l call set." under "Int'l dial assistance" to "ON".
- Enter the phone number of the other party ► (voice call) or □ (V.phone) ► "Dial"

Making a call to the overseas user of WORLD WING

When the other party is using the international roaming, make a call as an international call to Japan (dial "81" (Japan) as the country code) even when the other party is in your country of stay.

NOTE

 Even if Caller ID Notification is active, the caller ID may not appear properly depending on the operator. In this case, calls cannot be made from the Received calls screen.

Receiving a Call in the Country You Stay

You can use the international roaming service to receive a call.

The other party's procedure to make a call

■ To have the other party make a call from Japan to your destination country

To have the other party make a call from Japan to your FOMA terminal in your destination country, the other party only needs to dial the phone number as in Japan.

090 (or 080)-XXXX-XXXX

■ To have the other party make a call from outside Japan to your destination country

The other party needs to dial the international access code + "81" (country code of Japan) no matter whether you are in Japan or overseas. International access code-81-90 (or 80)-XXXX-XXXX

Switching Network Connections

<3G/GSM setting>

Set how to switch networks in your destination country.

"Settings/NW Service" "Int'l roaming set" "3G/GSM setting" Select any item:

AUTO Switch the 3G network and GSM/ GPRS network automatically.

3G ····· Use the 3G network only.

GSM/GPRS Use the GSM/GPRS network only.

NOTE

 Set "AUTO" or the network that can be connected in your destination country.

Setting a Search Method of **Telecommunications Carrier**

<NW search mode>

When you move out of the service area of the operator you are using, the FOMA terminal is reconnected to another operator's network.

- This function may not be set due to weak signals or network conditions.
- As of April, 2009, no service provider other than DOCOMO can be selected in Japan.
- When you have switched the operator manually overseas, set "NW search mode" to "Auto" after you return to Japan.

Changing the operator manually

"Settings/NW Service" "Int'l roaming set">"NW search mode"



NW search mode



→p.414

"Manual" Select an operator

■ To switch the operator automatically ▶"Auto"

You can set an operator to preferentially connect to when searching the operator automatically.

Re-searching for the network

<Network re-search>

- Re-search for a network then connect to the network if "NW search mode" is set to "Auto" and an operator could not be detected, or if "NW search mode" is set to "Manual" and you want to change the operator.
- If re-search is needed, e.g. an operator cannot be detected, the " (Network re-search) desktop icon appears on the standby screen when "NW search mode" is set to "Manual". Select the icon to re-search network
- NW search mode screen (p.414) "Network re-search" Select an operator
 - When "NW search mode" is set to "Auto"
 - "Network re-search"

Checking Available Communication Services

<Network status>

Check if calls, data communications or packet communications are available.

MENU ► "Settings/NW Service" ► "Other settings"▶"Network status"

Setting Telecommunications Carrier to Preferentially Connect to <PLMN setting>

Set an operator to preferentially connect to when searching or re-searching the network automatically.

- Up to 20 operators can be stored in the PLMN network list.
- Operators designated by DOCOMO are pre-stored in the PLMN network list as default.



Operators are listed in the priority order.



- Highlight an operator to change the priority ▶ ch (FUNC) ▶ "Change priority"
- Highlight the destination

 Gelect)

The selected operator moves to the position above the highlighted item. Select "<last>" to move to the end.

(Finish)▶"YES"

FUNC PLMN setting screen (p.415)

PLMN manual select·····Enter and store Country code (MCC) and Network code (MNC).

PLMN select ······Select and store an operator from the list.

Set VPLMN to PLMN······Store the currently selected operator.

Change priority → p.414

Delete ······Select Delete this/Delete selected/Delete all

NOTE

 The priority may not apply depending on the conditions of radio waves or networks.

Displaying Telecommunications Carrier During Roaming

<Display operator name>

Set whether to display the name of the currently connected operator on the display during international roaming.

● "Settings/NW Service" Int'l roaming set" "Display operator name" "Display ON" or "Display OFF"

NOTE

- Even when set to "Display ON", the name of the operator is not displayed when you are in Japan (in the FOMA network).
- When "NW search mode" is set to "Manual" in
 " area, the " " (Network re-search)
 desktop icon appears on the standby screen.
 Select the icon to re-search network.

Activating Roaming Guidance <- Roam. Guidance >- Roam. Guidance -- Roam. Guidance -

When you are using roaming services, make the setting for the announcement to play instead of the ringback tone, indicating that you are using international roaming services.

Make the setting in Japan.

"Settings/NW Service"
 "Network service"
 "Roam.
 Guidance"
 Select any item:

Activate, Deactivate, Check setting

NOTE

- If you do not make the announcement setting, callers will hear a ringback tone set by the local roaming operator.
- Foreign-language announcements may be played depending upon conditions of overseas roaming operator.

Setting Incoming Call to Reject During Roaming

<Bar incoming when roam>

- Depending on the operator overseas, the setting may be unavailable.
- "Settings/NW Service" "Int'l roaming set" "Bar incoming when roam" Select any item:

Activate ······ Select Bar All incoming (bar all incoming calls) or Data calls Barring (bar incoming videophone calls and 64K data communications*). The network security code (p.124) is required for the setting.

Deactivate.....Deactivate the incoming call blocking when roaming. The network security code (p.124) is required to deactivate.

Check setting

*: 64K data communication is not available on this FOMA terminal during international roaming.

Setting SMS Report for Calls Received During Roaming <Missed Call Notice>

Notify you of missed call information via SMS when turning on the power or getting into network range.

"Settings/NW Service" "Int'l roaming set" "Missed Call Notice" Select any item:

Activate, Deactivate, Check setting

Using Network Services During Roaming <Service(Int.)>

- Some network services such as "Voice Mail" or "Call Forwarding" are available overseas.
- To use "Voice Mail(Int.)" or "Call Forwarding(Int.)", the subscription to "Voice Mail" or "Call Forwarding" is required beforehand. Also, "Remote Control" must be set beforehand. → p.402
- You cannot use the services when " " is displayed.
- When you use the services overseas, you must bear the international call charges of your country of stay
- Depending on the operator overseas, the setting may be unavailable.

Using the Voice Mail service in the country you stay

- "Settings/NW Service" "Int'l roaming set" "Service(Int.)"
 "Voice Mail(Int.)" Select an item
 "YES" Follow the voice instructions
 - When "Play messages" or "Setting" is selected
 - ► Select a voice or videophone call ► "YES" ► Follow the voice instructions

Using the Call Forwarding service in the country you stay

● "Settings/NW Service" Int'l roaming set"

"Service(Int.)"

"Call Forwarding(Int.)"

Select an item

"YES"

Follow the voice instructions

Setting the remote access in the country you stay

● "Settings/NW Service" ■ "Int'I roaming set" ■ "Service(Int.)" ■ "Remote access(Int.)" ■ "YES" ■ Follow the voice instructions

Using the Caller ID Request service in the country you stay

● "Settings/NW Service" "Int'I roaming set" "Service(Int.)" "Caller ID req.(Int.)" "YES" Follow the voice instructions

Using the Roaming Guidance service in the country you stay

● "Settings/NW Service" Int'l roaming set" Service(Int.)" Roam. Guidance(Int.)" YES" Follow the voice instructions

Using the Missed Call Notice in the country you stay

"Settings/NW Service" ► "Int'I roaming set" ► "Service(Int.)" ► "MissedCallNotice(Int.)" ► "YES" ► Follow the voice instructions

PC Connection

Data Communications	418
Before Using Data Communications	419
Checking the Procedure	420
AT Commands	421
Using CD-ROM	421
DOCOMO keitai datalink	421

For details on the data communications, refer to the "Manual for PC Connection" (PDF format) in the provided CD-ROM or NTT DOCOMO website.

To view the PDF-format "Manual for PC Connection", Adobe[®] Reader[®] is required. If this software is not installed on your PC, install the Adobe[®] Reader[®] in the provided CD-ROM to view the file.

Refer to the "Adobe Reader ヘルプ" (Help of the Adobe Reader) for details on how to use it.


Data Communications

Data communications available for the FOMA terminal

Available data communications between the FOMA terminal and PCs are classified into 3 categories: packet communications, 64K data communications and data transfer (OBEX™ communications).

Data transfer (OBEX™ communications)

Exchange data such as images, music, phonebook and mail between other FOMA terminals or PCs, etc.

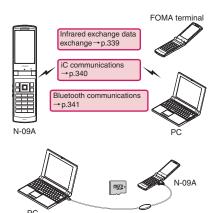

FOMA USB Cable with Charge Function 02→p.449 microSD card→p.323 DOCOMO keitai datalink→p.421

Packet communications

Charges are based on the volume of data transmitted 1, and the maximum receiving speed of 7.2 Mbps 2 and the maximum sending speed of 384 kbps 2 are available in the FOMA HIGH-SPEED area. Communications are provided on a best-effort basis, which may vary depending on communications and network conditions.

 When using packet communications with DOCOMO PDA "sigmarion II" or "musea", the communication speed may become slow. HIGH-SPEED area fast communications is not supported. This service also supports an enterprise LAN connected to the FOMA network.

Packet communications uses an access point that supports FOMA packet communications, such as DOCOMO Internet connection service "mopera U". PC connection is established via FOMA USB Cable with Charge Function 02 (optional) or Bluetooth and PDA connection via the dedicated cable.

- Use IP connections for packet communications overseas. (PPP connections are not available.)
- *1 : Please be aware that communications charges will be high when you use packet communications to transmit large volumes of data.
- *2: The above speed is the maximum value of the technical specification and the actual data rate depends on communications and network conditions. When out of the FOMA HIGH-SPEED area or connecting to a non-HIGH-SPEED access point, the communication speed may become slow.

64K data communications

Communications charges are based on the connection time, not on the volume of data.* 64K data communications uses an access point supporting FOMA 64K data communications such as DOCOMO Internet connection service "mopera U", or uses ISDN synchronous 64K access point. PC connection is established via FOMA USB Cable with Charge Function 02 (optional) or Bluetooth connection, and PDA connection via the dedicated cable

- 64K data communications is not available overseas.
- *: Communications charges may be high if connecting for a long time.

Notes on use

Internet service provider fees

In addition to FOMA service charges, you may need to pay user fees to an Internet service provider to use the Internet. These fees must be paid directly to the Internet service provider in addition to service fees of FOMA service. Contact your Internet service provider for details.

DOCOMO offers mopera U as an Internet access service. mopera U requires a subscription and is a fee based service.

PC Connectio

Setting an access point (e.g. Internet service provider)

Packet communications and 64K data communications use different access points. Select an access point supporting packet communications for packet communications, and FOMA 64K data communications or ISDN synchronous 64K access point for 64K data communications.

- · You cannot use DoPa access points.
- For the mopera service contents and how to make the connection settings, refer to the mopera website. http://www.mopera.net/mopera/index.html (Japanese)

Before Using Data Communications

Operating environment

The following table shows the PC operating environment to use data communications:

	environment to use data communications:					
Item	Description					
PC	PC/AT compatible model with CD-ROM drive Via FOMA USB Cable with Charge Function 02 (Optional): USB Port (compliant to Universal Serial Bus Specification Rev1.1/2.0) Your FOMA terminal does not support "USB2.0 High-Speed". Via Bluetooth communications: Compliant to Bluetooth Standard Ver. 1.1, Ver. 1.2 or Ver. 2.0 + EDR (Dial-Up Networking Profile) Display resolution of 800 dots wide × 600 dots high, High Color (65,536 colors) recommended					
Operating System*1	Windows 2000, Windows XP, Windows Vista (Japanese versions) DOCOMO Connection Manager: Windows 2000 + Service Pack 4 or later, Windows XP + Service Pack 2 or later (For details on the operating environment, visit the NTT DOCOMO website.)					
Required memory*2	Windows 2000: 64 MB or more Windows XP: 128 MB or more Windows Vista: 512 MB or more					
Hard disk size*2	5 MB or more available space DOCOMO Connection Manager: 15 MB or more available space					

- *1 : Operations on the upgraded Operating System are not covered by the warranty.
- *2: May differ depending on the PCs system configuration.

NOTE

- You can transmit data with this FOMA terminal connected to the DOCOMO PDA "musea" or "sigmarion III". Update "musea" to connect them to the FOMA terminal. For details on how to update, etc., visit the NTT DOCOMO website.
- This FOMA terminal does not support Remote Wakeup.
- This FOMA terminal does not support FAX data transmission.

Required devices

The following hardware and software are required as well as the FOMA terminal and a PC:

- FOMA USB Cable with Charge Function 02 (optional) or FOMA USB Cable (optional)*
- Bundled CD-ROM "CD-ROM for N-09A"
- *: USB connections

NOTE

- Purchase the dedicated FOMA USB Cable with Charge Function 02 or FOMA USB Cable. The USB cable for PC cannot be used as the shape of the connector is different.
- Using USB HUB may not work correctly.

In data communications, a connection is made through a dial-up connection with Internet service providers or LANs that support FOMA data communications

Software in the bundled "CD-ROM for N-09A"

- The CD-ROM contains the FOMA Communication setting file (drivers), DOCOMO Connection Manager and FirstPass PC software.
- The FOMA Communication setting file is software (driver) required for connecting the FOMA terminal with a PC via the FOMA USB Cable with Charge Function 02 (optional) to carry out packet communications, 64K data communications or data transfer (OBEX™ communications). Installing the FOMA Communication setting file embeds each driver into Windows.

The DOCOMO Connection Manager allows you to set up packet communications, 64K data communications or dial-up connections.

Flow for completing the setup

■ Data transfer (OBEX[™] communications)

To use the FOMA USB Cable with Charge Function 02, install the FOMA Communication setting file.

Download and Install the FOMA Communication setting file*

Install FOMA Communication setting file in the provided CD-ROM or download from the NTT DOCOMO website and install it



Data exchange

*: Also install DOCOMO keitai datalink (p.421).

■ Packet communications/64K data communications

USB Bluetooth Download and Connect the FOMA Install the FOMA terminal to PC Communication wirelessly via the setting file Bluetooth communication Install FOMA Communication setting file in the provided CD-ROM or download from the NTT DOCOMO website and install it Connect the FOMA terminal to PC using **FOMA USB Cable** with Charge Function 02 Confirm after installation Confirm the modem To set up



the access

point using

To set up the access point without using DOCOMO Connection Manager

Set up*

The set up procedures for packet communication, 64K data communication and set up without DOCOMO Connection Manager are different.



Connect/Disconnect

*: To use Internet with the FOMA terminal and PC connected, "mopera U" (separate subscription is required) is useful, which supports broadband connection, etc. Consider the billing plan in which you are only charged for a month when you use the service. For more information, visit the NTT DOCOMO website.

AT Commands

AT commands are commands for controlling modems and other devices. The FOMA terminal complies with AT commands, and supports some enhanced commands and its own AT commands. For details on AT commands to set the FOMA terminal functions from your PC, refer to the Manual for PC Connection (PDF format) in the provided CD-ROM.

Using CD-ROM

The provided CD-ROM contains software for using the data communications with the FOMA terminal, "Manual for PC Connection" and "Kuten Code List" (PDF). For details, refer to the provided CD-ROM.

 A warning message may appear when you insert the CD-ROM into a PC. This appears depending on the Internet Explorer security settings, but there is no problem to use the CD-ROM. Click "(\$\triangle 1\) (Yes)".

DOCOMO keitai datalink

DOCOMO keitai datalink (Japanese) is software to back up your Phonebook, Mail, etc. in the FOMA terminal to a PC and edit the data. This software is provided on the NTT DOCOMO website. For details and downloading, see the following website. You can also access the following website from the provided CD-ROM.

http://datalink.nttdocomo.co.jp/ (Japanese)

For details on downloading method, transferable data, operating environment of each OS, installing method, operations and restrictions, see the above website. For how to operate the software after installation, refer to the software help. You need a "USB Cable" (optional) to use "DOCOMO keitai datalink".

Appendix/Troubleshooting

Menu Function List	424
List of Characters Assigned to Dial Keys	439
Symbol Reading List	441
Pictogram Reading List	442
Face Mark Reading List	445
Multiaccess Combinations	446
Multitask Combinations	447
Service Available for the FOMA Terminal	448
Introduction of Options and Related Devices	449
■Interfacing to external devices	
Introduction of Moving Picture Playing Software	449
■ Troubleshooting	
Troubleshooting	450
If Error Message Appears Mentioned Below	456
Warranty and After-Sales Service	463
i-mode Fault Diagnosis Site	465
Updating Software Update	465
Protecting the FOMA Terminal from Harmful Data	472
Main Specifications	474
Photo Size, Maximum Number of Photos, and Recording Time	475
Number of Saved/Registered/Protected Items in the FOMA Terminal	478
Specific Absorption Rate of Mobile Phone, etc	479
Export Administration Regulations	481
Intellectual Property Rights	482

Menu Function List

- settings are reset to default by "Reset settings".
- Refer to the Table 1 (p.437) for details on the reset settings of ① ⁽¹⁶⁾ and other functions.
- settings are reset to default by the following reset/initialization:
 - Reset (Mail Setting) (p.171)

• Reset i-mode settings (p.199)

- Reset i-Channel (p.209)
- Key operations via menu numbers are only available when the main menu is set to "Standard". →p.34

Main item	Sub item	Branch item	Menu No. (Key operation)	1	Default setting	Ref. page
Mail	Inbox		_		-	p.163
	Outbox		_		_	p.163
	Draft		-		_	p.154
	Mail histor	y box	-		_	p.163
	Compose	message	-		_	p.146
	Create nev	w Deco-Anime	_		_	p.150
	Compose	SMS	_		_	p.176
		v messages	(1 second or longer)		_	p.158
	Receive of	otion	_		_	p.157
	Check nev	v SMS	_		_	p.177
	Template		_		_	p.151
	Mail	Scroll	_		1 line	p.171
	Setting	Font size	_		Standard	p.171
		Mail list disp.	_		1 line+body List setting: Name	p.171
		Message display	-		Standard	p.171
		Start attachment (auto)	-		ON	p.171
		Header/Signature	_	Edit header, Edit signature	Not recorded	p.172
				Edit Quotation marks	>	
				Insert setting	Header: Checked Signature: Checked	
		Mail box lock	-	Inbox, Outbox, Draft	All unchecked	p.137
		Receiving setting	-		Alarm preferred	p.171
		Receive option setting	_		OFF	p.171
		Prefer attachment	_	Image - Other	All checked	p.171
		Read out setting	_	Select voice	Female 1	p.171
			_	Read out received mail	ON	
		Emotion/Keyword	_		Disp. emotion: Checked Disp. keyword: Unchecked, Keyword not stored	p.173
		SMS settings	_	SMS report request	OFF	p.171
			_	SMS validity period	3 days	
			_	SMS input character	Japanese (70char.)	

Main item	Sub item	Branch item	Menu No. (Key operation)	1	Default setting	Ref. page
Mail	Mail	Area Mail setting	_	Receive setting	Yes	p.175
	Setting			Beep time	10 seconds	
				Manner/Public mode set	Ring in manner/public	
				Check ring tone	Earthquake Warning	
					Disaster/Evacuation	
				Other menu	Receive entry	
					Earthquake Warning (Pre- installed) Disaster/Evacuation (Pre- installed)	
		Charlenstings			<not recorded=""> (No data)</not>	p.171
		Check settings Reset	_	_	_	p.171
i-mode	iMenu/Sea		_	_	_	p.171
i-mode	Bookmark	ICH	_		_	p.190
			_		_	p.190 p.192
	Screen me		_		_	p.192
	URL Histor	•	_		_	p.189
	One-touch		_		_	p.189
		i-Channel list	- Ch		_	p.191 p.209
	i-Channel	I-Channel list	(Default)		_	p.209
		i-Channel setting	_	Ticker display setting	Display Indicator display: OFF	
			_	Ticker speed setting	Normal	
			_	Ticker color setting	WHITE	
			_	Ticker size setting	Standard	
		Reset i-Channel	_		_	
	MessageR/F		_		_	p.174
		/ messages	(1 second or longer)		_	p.158
	i-mode	i-mode Browser set.	_	Set image disp.	ON	p.198
	settings		_	Movie auto play set.	ON	p.208
			_	Movie download set.		p.198
			_	Script setting	Valid	
			_	Use phone information	Accept	
			_	Font size setting	Standard	
			_	Cookie setting	Valid	1
			_	Delete Cookies	-	1
			_	Referer setting	Valid	
			_	Window auto-open	ON	
			_	Home URL	Valid (iMenu/Search)	
			_	Pointer setting	Pointer display: OFF Speed: Normal	
		Full Browser set.		Set image disp.	ON	p.198
			_	Movie auto play set.	ON	

Main item	Sub item	Branch item	Menu No. (Key operation)		Default setting	Ref. page
i-mode	i-mode settings	Full Browser set.	-	Movie download set.	Confirm always	p.198
			_	Script setting	Valid	
			_	Use phone	Accept	
				information		
			_	Font size setting	Standard	
			-	Magnification set.	100%	
			_	Cookie setting	Valid	
			_	Delete Cookies	_	
			_	Referer setting	Valid	
			-	Window auto- open	ON	
			_	FB Home setting	http://www.google.co.jp	
			_	Display mode	PC layout mode	
				setting		
			_	FB permission disp.	Display always	
			_	FB usage set.	No	
			_	Auto NW size	Confirm always	
				setting		
			_	Pointer setting	Pointer display: ON Speed: Normal	
		Common settings	_	i-mode button set.	Connect by iMenu	p.199
			_	Scroll	Speed: Low speed During scroll in focus: OFF	
			_	Open tab setting	Open at the front	
			_	Sound setting	VOLUME 10	
		MessageR/F settings	-	Auto-display setting	MessageR preferred	p.199
			-	Start attachment (auto)	ON	
			-	Message list display	2 lines	
		Check settings	_		_	p.199
		Reset	_		_	p.199
	Full Brows	er Home	_		_	p.182
i-αppli	Software li	st	(1 second or longer)		-	p.267
	microSD		_	microSD software microSD data	_	p.280
	i-αppli call	logs	-		_	p.277
	Auto-start		-		OFF	p.276
	i-αppli acti	on info	-	End stand-by info - Trace info	All: No data	p.270
Settings/	Kisekae To	ool setting	-		お気に入り: Not stored	p.121
NW Service	Incoming	Ring volume	KENI 5 0	Phone - i-concier	All Level 4	p.67
	call	Select ring tone	MENU 1 3	Phone	Pattern 1	p.98
		-		Videophone	Pattern 3	
				PushTalk	Pattern 4	

Main item	Sub item	Branch item	Menu No. (Key operation)	peration) Default setting		Ref. page
Settings/	Incoming	Select ring tone	MENU 1 3	Mail	Alarm 7	p.98
NW Service	call			MessageR	Alarm 6	
				MessageF	Alarm 6	
				i-concier	Alarm 11	
		Stereo&3D sound	MENU 6 4		ON	p.100
		Vibrator	MENU 5 4	Phone - i-concier	All OFF	p.100
		Illumination	MM 8 9	Set color	Phone - PushTalk, i-concier: Color 7 (phone color: Silver Metal, Red Leather), Color 1 (phone color: Black Wood) Mail - MessageF: Color 2 (phone color: Silver Metal), Color 3 (phone color: Black Wood), Color 4 (phone color: Red Leather)	p.111
				Set pattern	Pattern 1	
				Missed info	ON	
		Manner mode setting	MENU 2 O	Manner mode set	Manner mode (Original settings: Initial value → p.106)	p.106
				Manner start time, Manner release time	All OFF	p.103
		Disp. phonebook image	_		ON	p.108
		Answer setting	MENU 5 8		Any key answer	p.66
		Mail/Msg. ring time	MENU 6 8	Mail - i-concier	All ON (Ring time: 5 seconds)	p.102
		Ring time (sec.)	MENI 9 0	Set mute seconds Missed calls	OFF Mute seconds: 1 (When "Set mute seconds" is set to "ON") Display	p.139
		Info nation patting		display	ON	n 70
		Info notice setting	KENU 6 5		ON	p.70
		Record message	MM 5 5		OFF Answer message: Japanese 1 (When "Record message" is set to "ON") Ringing time: 13 seconds (When "Record message" is set to "ON")	p.71
		Disp. call/receive No.	_		Black (phone color: Silver Metal), White (phone color: Black Wood, Red Leather)	p.108
		Melody Call setting	_		_	p.101
	Talk	Hyper Clear Voice	_		Low	p.63
		Auto voice memo	_		OFF	p.368
		Noise reduction	MENU 7 6		ON	p.64
		Quality alarm	MENU 7 5		No tone	p.102
		Reconnect signal	MENU 7 7		No tone	p.63
		Illumination in talk	_		OFF	p.112
		Hold tone setting	_	On hold tone	Tone 1	p.68
	1	Setting when folded	MENU 1 8		End the call	

Main item	Sub item	Branch item	Menu No. (Key operation)	ı	Default setting	Ref. page
Settings/	Dialing	Pause dial	WW 8 4		_	p.62
NW Service		Sub-address setting	-		ON	p.63
		Prefix setting	_		"WORLD CALL" (009130010) User setting: Not recorded	p.62
		Headset sw to dial	_		OFF	p.373
		Int'l dial assistance	_	Auto int'l call set.	ON (automatically added)	p.57
				Country Code setting	"日本" (Country code: 81) 22 country codes are already stored	
				IDD Prefix setting	"WORLD CALL" (009130010) User setting: Not recorded	
	Videophone	Visual preference	-		Normal	p.73
		Select image	_	On hold	Pre-installed	p.74
				Holding	Pre-installed	
				Substitute image	Chara-den (ビーンズ (Beans))	
				Record message	Pre-installed	
				Preparing	Pre-installed	
				Voice memo	Pre-installed	
		Auto redial as voice	_		OFF	p.73
		Remote monitoring	_	Other ID	Not recorded	p.76
				Ringing time	5 seconds	
				Set	OFF	
		Display setting	_	Main display	Other side	p.73
				Front camera Reverse	ON	
		Ntfy switch-mode	_		_	p.74
		Hands-free switch	-		ON	p.73
		V.phone while packet	-		V.phone priority	p.74
Display	Display	Display setting	EN 5 6	Stand-by display, Dialing - Mail rec'd result	Lobby (phone color: Silver Metal), Horizon&Vertical (phone color: Black Wood), Mirror (phone color: Red Leather)	p.106
				Wake-up display	Wake-up tone: ON Wake-up display: Diamond Cut Message: Not stored	
		Backlight	WENU 7 0	Lighting	ON (Lighting: 15 seconds) + Saver (Light time: 1 minute)	p.109
				Charging	Standard	
				Brightness	ON (Level 4)	

Main item	Sub item	Branch item	Menu No. (Key operation)		Default setting	Ref. page
Settings/ NW Service	Display	Display design	MEMI 8 6	Color theme	WHITE (phone color: Silver Metal), BLACK (phone color: Black Wood), RED (phone color: Red Leather)	p.109
				Icon pattern	Battery icon, Antenna icon White (phone color: Silver Metal), Black (phone color: Black Wood), Red (phone color: Red Leather)	
				Soft key	SILVER (phone color: Silver Metal), BLACK (phone color: Black Wood), RED (phone color: Red Leather)	
		Indicator display	m93		ON Disp. clock only: OFF Clock type: Digital 1 Called: ON Mail: OFF Connection: ON Background i-αppli: OFF Time signal: ON Set time: 60 minutes Illumination: Color 7 Pattern: Pattern 6 Display time: 15 seconds	p.111
		Font		Font type	Gothic	p.115
				Thickness	Bold	
				Character size	Standard	
		Desktop icon	MENU 6 3	Theme 1 - 3	Photo mode, i-concier, Quick Search, 1Seg, Illumination	p.117
		3D display setting			ON	p.119
		Select language	MENU 1 5		Japanese	p.48
		Original menu	MEN 5 2		My Profile Check new messages Ring volume Vibrator Alarm Change security code	p.110
		Menu display set	MENU 5 7	Menu display	List	p.110
				Theme	Lobby (phone color: Silver Metal), Horizon&Vertical (phone color: Black Wood), Mirror (phone color: Red Leather)	

Main item	Sub item	Branch item	Menu No. (Key operation)	Default setting		Ref. page
Settings/	Display	Menu display set	WENU 5 7	Memory focus	ON	p.110
NW Service				Reset menu op. log	_	
		Viewer settings	-		Picture	p.305
		Icons	MENU 3 6		_	p.24
		Icons setting	-		ON	p.119
		Privacy angle	(1 second or longer)		OFF	p.108
		Image display mode	_		Vivid	p.114
		Quick Info setting	_		Display sender	p.248
		Machi-chara setting	_		ON (ひつじのしつじくん)	p.114
		Information display	-		ON	p.212
		Screen effect	_		OFF	p.115
	Call time/	Call data	(ENI 6 1		_	p.369
	Charge	Notice designate calls	-	Cost limit setting	Not set	p.370
				Notify cost limit	OFF	
				Alarm tone	Alarm Tone	
				Volume	Level 4	
		Reset total	(ENU 6 0		_	p.369
		Auto reset total cost	_		OFF	p.370
	Clock	Set main time	WW 3 1	Auto time adjust	Auto time: Auto Auto time difference: Auto	p.49
				Summer time	OFF	
		Set sub clock	-	Display method	Auto	p.49
				Summer time	OFF	
				Area name	Display	
		Clock display	WW 3 9	Display	ON	p.115
				Size	Up Small (phone color: Silver Metal), Big (phone color: Black Wood, Red Leather)	
				Color	White (phone color: Silver Metal, Red Leather), Black (phone color: Black Wood)	
		Alarm setting	_		Alarm preferred	p.363
		Clock Alarm Tone set	_		Alarm Tone	p.102
		Auto power ON	-		OFF	p.357
		Auto power OFF	-		OFF	
	Lock/ Security	Lock	-	Dial lock	OFF	p.125
			_	Original lock	OFF	p.130
					Group and item settings Original lock (High): "Dial/ sending mail", "Incoming/Mail disp": All deselected Original lock (Mid.): "Mail", "Data box/Tool", "Phonebook" under "Data disp. edit del.": All selected Original lock (Low): "Mail" under "Data disp. edit del.": All selected	

Main item	Sub item	Branch item	Menu No. (Key operation)		Default setting	Ref. page
Settings/ NW Service	Lock/ Security	IC card lock setting	(1 second or longer)	IC card lock	OFF	p.286
THE COLVIDO	Cooding		_	IC lock (power- off)	Maintain	
		Keypad lock	-	After closed	OFF	p.134
			_	Timer	OFF	
		Face authentication	-		OFF	p.136
					New image: Not stored	
					Function to reset: Only "IC card lock" selected	
		Self mode	_		OFF	p.140
		Secret mode	MENU 4 0		OFF	p.127
		Secret data only	MENU 4 1		OFF	p.127
		mode				·
		Reject unknown	_		Accept	p.139
		Call setting w/o ID	HEM 1 O	Unknown - User unset	All Accept Select ring tone: Same as ring tone Select calling disp.: Same as display	p.138
		Change security code	MENU 2 9		0000 (4 zeros)	p.125
		IC card authentic.	-		OFF	p.134
					Ext. IC card: Not set	
		PIN setting	-		_	p.125
		Scanning function	-	Set scan	Scan: ON	p.472
					Message scan: ON	
	Connection	Certificate setting	_		All Valid	p.201
	setting	Secure service set.	_	Client certificate	_	p.201
				Center host setting	DOCOMO User setting: Not recorded	p.203
		Set check new	_	Mail - MessageF	Checked	p.172
		messages		Ü		
		Host selection	MENU 8 1		i-mode User setting: Not recorded	p.200
		SMS center selection	_		DOCOMO User setting: Not recorded	p.177
		Set i-mode arrival act	_		PushTalk preferred	p.199
	i-αppli	Disp. Software info	_		Not display	p.266
	settings	End stand-by display	_		_	p.279
		i-αppli vol.	_		Level 4	p.269
		Sound setting	_		Multimedia preferred	p.270
		i-Widget sound effect	_		Level 4	p.282
		i-αppli call DL set.	_		Not reject	p.278
		i-Widget roaming set.	_		No	p.282
		About i-αppli	_		-	p.266
	External	USB mode setting	_		Communication mode	p.333
	connection	Headset usage setting	MENU 5 1		Headset+speaker	p.103
		Headset mic. setting	_		Headset microphone	p.373
		Auto answer setting	MENU 9 4	Phone - PushTalk	OFF	p.374

Main item	Sub item	Branch item	Menu No. (Key operation)	ı	Default setting	Ref.
Settings/	Int'l	NW search mode	_		Auto	p.414
NW Service	0	PLMN setting	_		_	p.414
	set	3G/GSM setting	_		AUTO	p.414
		Display operator	-		Display ON	p.415
		name				
		Service (Int.)	_		_	p.416
		Bar incoming when roam	_		_	p.415
		Missed Call Notice	_		_	p.416
	Network	Chaku-moji	_	Create message	5 messages pre-installed	p.60
	service			MSG display settings	Calls with Caller ID	
				3D message display	ON	
		Caller ID Notification	WENU 1 7		_	p.50
		Voice Mail	_		_	p.396
		Call Waiting	_		_	p.397
		Call Forwarding	_		_	p.398
		2in1 setting	2		OFF	p.406
			(1 second or longer)	Mode switching	Dual mode	
				Phonebook 2in1 setting	_	
				Stand-by display	Dual mode: Room B mode: Plain	
				Set call/receive No. 2in1 function OFF Rev. avoid. setting	Disp. call/receive No. Number A: Black (phone color: Silver Metal), White (phone color: Black Wood, Red Leather) Number B: Moss green Ringtone for Number B Voice call (recv.) Ring tone: Pattern 2 Other than above: Same as Number A V.phone (recv.) Ring tone: Pattern 2 Other than above: Same as Number A Mail (recv.) Ring tone: Alarm 2 Other than above: Same as Number A Mail (recv.) Ring tone: Alarm 2 Other than above: Same as Number A	
		Nuis. call blocking	-		_	p.399
		Caller ID Request	_		_	p.400
		Arrival Call Act	_		Answer	p.401
		Set in-call arrival	-		_	p.402
		Remote Control	-		_	p.402
		Dual Network	_		_	p.400
		English Guidance	-		_	p.400
		Additional service	_		-	p.408

Main item	Sub item	Branch item	Menu No. (Key operation)	ı	Default setting	Ref.
Settings/	Network	Service Numbers	_		_	p.401
NW Service	service	Multi Number	_	Select ring tone	Same as ring tone	p.402
		Roam. Guidance	_		_	p.415
	Other	Keypad sound	MENU 3 O		ON	p.101
	settings	Charge sound	_		ON	p.102
		Battery	MENU 7 1	Battery level	_	p.47
		Network status	_		_	p.414
		Side key guard	(1 second or longer)		OFF	p.135
		Character input set	MENU 3 5	Input mode	5-touch	p.384
				Prediction	ON	p.383
				T9 change mode	T9 Kanji change mode	p.393
				Clear learned	_	p.391
				CHG input size	Standard	p.383
				Auto cursor	Normal	p.383
		Auto-change Screen	_		ON	p.114
		ch-button setting	_		i-Channel	p.357
		Quick Search URL	_		Google検索, Google画像検索, Googleニュース検索	p.189
		Illumination	_	Closed illum.	ON Set color: Color 7 Set pattern: Pattern 2	p.112
				Key illumination	ON Power ON: ON Power OFF: ON Incoming call: Deep Water Dialing: Reflex White Talking start: Fun Time Mail receiving: Cute Pink Mail sending: Rainbow Emotion: Always Alarm: Wavy Aqua Snooze: ON Ir/IC Exchanging: ON Missed call: Cosmetic Red Open: Clock (phone color: Silver Metal), Crossing Lines (phone color: Black Wood), Energize (phone color: Red Leather) Event: ON Birthday: Red and White	p.113
				Key backlight	Single Color7 (phone color: Silver Metal), Single Color1 (phone color: Black Wood), Single Color5 (phone color: Red Leather)	p.114
		Open-Close sound	_	Open sound	Melody: Open-Close1 Ring time: 2.0 seconds	p.102
				Close sound	Melody: Open-Close2 Ring time: 2.0 seconds	

Main item	Sub item	Branch item	Menu No. (Key operation)		Default setting	Ref.
Settings/	Other	Reset settings	WENI 2 3		_	p.142
NW Service	settings	Initialize	_		_	p.142
		Software Update	_	Set auto-update	Auto-update Date: Everyday Time: 03:00	p.465
Data box	My picture		MENU 4 6		1)	p.304
	Music		-		2 5	p.255
	Music&Vid	eo Channel	_		3 5	p.253
	i-motion/M	ovie	-		4 5	p.312
	Melody		KENI 1 6		6	p.319
	My docum	ent	_		⑦	p.343
	Kisekae To	ool	_		8	p.321
	Machi-cha	ra	_		9	p.318
	Chara-den		_		10	p.317
	1Seq		_		_	p.315
	Manga&Bo	ook	_		(ii)	p.348
	Key illumin		_		_	p.322
	Other		_		_	p.345
LifeKit	Bar code r	eader	_		_	p.230
	Receive Ir		WENU 7 9		_	p.340
	microSD	autu	_		_	p.327
	Camera		(1 second or longer)		12	p.220 p.220
	Pedometer		_	Set pedometer	OFF	p.352
				Height/Weight	160cm/60kg	
				Stride	60cm	
				Target of WALK	Not set 歩数: 10,000 歩行距離: 3Km 消費カロリー: 300kcal	
	Life history	viewer	-		_	p.356
	Map/GPS	Мар	(1 second or longer)		-	p.292
		Position location	-		_	p.293
		Location notification	_		Not recorded	p.297
		Location history	-		No location history	p.299
		Map/GPS αppli	_		モバイル Google マップ 地図アプリ (Map Application)	p.294
		Map/GPS settings	_	Map setting	Select Map: 地図アプリ	p.293
					Map activate setting: After positioning	
				Position settings	GPS button setting: Read Map Positioning mode: Standard mode	p.293
				Notification menu	Register LCS client: No location service client Positioning mode: Standard mode	p.29
				Loc. request setting	Permit to send loc.: OFF Positioning mode: Standard mode Host selection: Initial address Service settings: —	p.298

Main item	Sub item	Branch item	Menu No. (Key operation)		Default setting	Ref. page
LifeKit	Map/GPS	Map/GPS settings	-	Tone/Vibrator	Ring volume: Level 4 Select ring tone: Alarm 8 Vibrator: Pattern 1 Ring time Position location: OFF Location notification: ON (5 seconds) Loc. request/permit, Loc. request/confirm: ON (20 seconds)	p.101
				Illumination	Position location: OFF Location notification, Loc. request/permit, Loc. request/ confirm: Color 3	p.101
	Bluetooth	Device list	_		Not recorded Connection status: All stopped	p.376
		Register new devices	_		_	p.376
		Bluetooth ON⇔ Bluetooth OFF	_		Bluetooth ON* (*: Bluetooth is powered off)	p.378
		Accept registered	_		Separate setting: All OFF	p.378
		Accept dialup devices	_		_	p.378
		Receive data	_		_	p.342
		Bluetooth settings	_		Set authentications: OFF (Set encryptions: OFF) Session number setting: No inband ringing Time-out to search: 5 sec Forward ring tone: ON Music Player setting: Auto start/end ON Dial from other device: Valid	p.379
	Data secui	ity cory		Sndg img in	Bluetooth info: -	p.141
	Data Secui	ity serv.		Phonebook		p
	Schedule		MENU 4 5		_	p.358
	Alarm		MENU 4 4		All OFF	p.358
	To Do list		MENU 9 5		_	p.362
	Text memo	1	MENU 4 2		_	p.371
	Calculator		MENU 8 5		_	p.371
	Play/Erase	-	v (🖎)		_	p.72
	Play/Erase	•			_	p.72
	Voice men		MENU 4 3		_	p.367
	Voice anno		WENU 9 1		_	p.368
	UIM opera My Profile	tion	— WENU ()		— (13)	p.336 p.50
	Forwarding	Limago			ON	p.365 p.342
	Text reade	•	_		ON _	p.342 p.232
	Dictionary	1	_			p.232
	Pictional y		_		_	p.210

Main item	Sub item	Branch item	Menu No. (Key operation)		Default setting	Ref. page
Phonebook	Phonebook	(-		14	p.86 p.89
	PushTalk		E '		15	p.81 p.82
Own data	Received o	alls	EN 2 4		_	p.58
	Dialed calls	3	-		_	p.58
	Blog/Mail n	nember	WENU 9 7		_	p.154
	Choku-Der	1	~		_	p.94
	Common p	hrases	8		Default common phrases (Folder name: Folder 1, 2)	p.389
	Own diction	nary	KENI 8 2		_	p.390
	DL dictiona	ıry	_		_	p.391
MUSIC	Music Play	er	[I] (MUSIC) (1 second or longer)		2 6	p.260
	Music&Vid	eo Channel	-		3 5	p.250
1Seg	Activate 1S	Seg	_		-	p.240
	Program gi		-		_	p.243
	Booking program list		-		_	p.245
	Timer recording list		-		_	p.245
	Recording	result	-		_	p.246
	TV link		-		_	p.244
	Channel lis	t	-		_	p.240
	Channel se	etting	_		_	p.239
	User settin	gs	_		16	p.247
Osaifu-	IC card cor	ntent	_		_	p.285
Keitai	DCMX		_		_	p.272
	ToruCa		_		_	p.288
	IC card loc	k setting	(1 second or longer)	IC card lock	OFF	p.286
			_	IC lock (power- off)	Maintain	
	Setting		_	ToruCa settings IC card notice	Receive from IC card: Yes Repetition check: Yes Receive from 1Seg: Yes Auto reading setting: ON Scroll: 1 line	p.290 p.286
				set	Vibrator: OFF	
	Check IC o	******	_		_	p.287
	Change IC		_		-	
	Search by	i-mode	_		_	_

[Table 1] Other reset setting functions

Function	Default setting
My picture	Sort: Chronological † Set image disp.: Normal
@Music	Resume play: No data List setting: Title
3 Music&Video Channel	Play from: Beginning
4 i-motion/ Movie	Sort: Chronological † List setting: Title+image (Phone), Name+image (microSD)
5 Music Player	Sound effect Equalizer: OFF Effect: OFF
	Repeat setting: OFF Shuffle: OFF Volume: Level 10 Screen setting: Normal screen mode Set image disp.: Normal Change skin: Basic Set repeat play: OFF
6 Melody	Sort: Chronological † Set repeat play: OFF
My document	Sort: Chronological 1
® Kisekae Tool	Sort: Chronological ↑
9 Machi-chara	Sort: Chronological ↑ Title⇔Picture: Picture
(1) Chara-den	Substitute image: ビーンズ (Beans) Set image disp.: Fit in display Rec. Chara-den: Photo mode Photo mode Select size: QCIF (176 × 144) Storage setting: Fine Movie mode Movie type set: Video + voice Storage setting: Normal File size: 2MB
① Manga&Book	Resume play: No data Sort: Chronological † Font size: Standard Text direction: Vertical Ruby: OFF Vibrator: ON Display size: Double Backlight: Standard Bookmark: No value

Function	Default setting
[®] Camera	Movie mode Select size: VGA (640 × 480) File size: 2MB Quality setting: Super Fine mode
	Camera Settings Photo mode: Auto White balance: Auto Flicker: Auto
	Shutter sound: Sound 1 Select to save: Phone (Camera folder) Shake correction: Auto
	Voice mode File size: 2MB Shutter sound: Sound 1 Select to save: Phone (Camera folder)
	Photo mode Select size: Screen (480 × 854)
	Quality setting: Super Fine
	Camera Settings Photo mode: Auto Smile level: Low White balance: Auto Flicker: Auto
	Shutter sound: Sound 1 Select to save: Phone (Camera folder) Shake correction: Auto
	Continuous mode Shot interval: 0.5 seconds Shot number: 5
	Movie mode/Photo mode Camera: Rear camera Auto save set: OFF File restriction: File unrestricted
13 My Profile	Big font⇔Standard font: Standard font
(4) Phonebook	Ring tone/Image: All OFF Restrictions: All OFF Big font⇔Standard font: Standard font Birthday reminder
	Reminder illum.: ON Select color: Color 3 Select pattern: Pattern 8
[®] PushTalk	PushTalk setting Auto answer setting: OFF Ring time setting: 30 seconds Setting when folded: Speaker talk PushTalk arrival act: Answer Hands-free setting: ON

Function	Default setting
® 1Seg	User settings Subtitles: ON (Wide: Bottom) Rec. while low battery: ON 1Seg effect Sound effect: Auto Visual image effect: Dynamic
	TV sound while closed: ON 1Seg ECO mode: OFF Display light: Constant light Data BC settings Set image disp.*: ON (*: Reset by "Initialize".) Sound effect: ON Icon always show: ON Time Shift setup: Auto ON

Function	Default setting
Other functions	During a videophone call V.phone settings: Brightness: 0 Display light: All time ON Last one function Main menu: Data box Phonebook: Search reading Volume: Level 4 Manner mode: OFF Public mode (Driving mode): OFF
	Display setting: Display at use

^{*: &}quot;Last one function" activates the last-selected function when you operate the FOMA terminal next time.

Simple Menu function list

Main item	Sub item/Branch item	Ref. page
Phone	Phonebook	p.89
	Redial	p.58
	Received calls	p.58
	Message	p.71
	Add to phonebook	p.86
	My profile	p.365
Mail	Inbox	p.163
	Outbox	p.163
	Draft	p.153
	Compose message	p.146
	Check new messages	p.158
i-mode	iMenu	p.180
	Bookmark	p.190
	Screen memo	p.192

Main item	Sub item/Branch item	Ref. page
Camera	Photo mode	p.220
	Movie mode	p.226
	My picture	p.304
	i-motion	p.312
Settings/Tools	Incoming call	
	Volume (Phone)	p.67
	Volume (Mail)	
	Tone (Phone)	p.98
	Tone (Mail)	
	Stand-by display	p.107
	Alarm clock	p.358
	Calculator	p.371
	Call time/Charge	p.369
	Voice Mail	p.396
1Seg	Activate 1Seg	p.240
	Video	p.315

List of Characters Assigned to Dial Keys

Allowable characters in 5-touch

Key	Kanji/Hiragana input mode	Katakana input mode	Alphabetic input mode	Numeric input mode
1	あいうえおぁぃぅぇぉ	アイウエオァィゥェォ1	. / @ - : ~ ^{*5} _ 1	1
2	かきくけこ	カキクケコ2	ABCabc2	2
3	さしすせそ	サシスセソ3	DEFdef3	3
4	たちつてとっ	タチツテトッ4	GHIghi4	4
5	なにぬねの	ナニヌネノ5	JKLjkl5	5
6	はひふへほ	ハヒフへホ6	MNOmno6	6
7	まみむめも	マミムメモ7	PQRSpqrs7	7
8	やゆよゃゅょ	ヤユヨャュョ8	TUVtuv8	8
9	らりるれろ	ラリルレロ9	WXYZwxyg9	9
0	わをんゎー	ワヲンヮ ^{*1} – 0	0	0+*6
*	° ° *2, *3, *7	° ° *2, *3, *7	*2, *3	*
#	、。?!·Space *4	、。?!·Space*4	, . ?!'-&() ¥ space	#

^{*1 :} Lower case " $\ensuremath{\,\circlearrowleft\,}$ " can be entered in double-byte input mode.

^{*2:} You can switch between lower and upper cases.

^{*3 :} A line feed " 🎝 " is entered.

^{*4: &}quot;, ", ", ", ", ", " and " · " cannot be entered when you enter a reading into Own dictionary or UIM phonebook.

^{*5 :} Appears as "~" in double-byte input mode.

^{*6:} Press the key for 1 second or longer to enter "+".

^{*7 :} Press 🕒 while some text is not confirmed, and "_" appears temporarily. Press 🗶 while it is displayed to enter "" or "" .

Allowable characters in 2-touch

■ Double-byte input mode

Key	Key		d ke	у							
			2	3	4	5	6	7	8	9	0
1st	1	あ	い	う	え	お	Α	В	С	D	Е
Key		あ	い	う	え	お	а	b	С	d	е
	2	か	き	<	け	Z	F	G	Н	1	J
							f	g	h	i	j
	3	さ	し	す	せ	そ	Κ	L	М	Ν	0
							k	-	m	n	0
	4	た	5	つ	て	٢	Р	Q	R	S	Т
				つ			р	q	r	S	t
	5	な	に	ぬ	ね	の	U	V	W	Χ	Υ
							u	V	W	Х	У
	6	は	ひ	131	^	ほ	Ζ	?	!	_	/
							Z				
	7	ま	み	む	め	ŧ	¥	&		ā	
	8	ゃ	(ゆ)	ょ	*	#		*1	*2
		ゃ		ゆ		ょ					
	9	5	り	る	れ	ろ	1	2	3	4	5
	0	わ	を	h	"	۰	6	7	8	9	0
		わ			,						

■ Single-byte input mode

Key	Key		2nd key								
		1	2	3	4	5	6	7	8	9	0
1st	1	7	1	ゥ	Ι	才	Α	В	С	D	Е
Key		7	1	ゥ	I	オ	а	b	С	d	е
	2	ħ	‡	ク	٢		F	G	Н	-	J
							f	g	h	i	j
	3	Ħ	シ	ス	t	y	Κ	L	М	N	0
							k	-	m	n	0
	4	9	Ŧ	IJ	Ŧ	1	Р	Q	R	S	T
				ッ			р	q	r	S	t
	5	t	_	ヌ	ネ	1	U	V	W	Χ	Υ
							u	٧	W	Х	у
	6	Л	Ł	フ	Λ	ホ	Z	?	!	-	/
							Z				
	7	7	111	Ь	Х	Ŧ	¥	&		ä	
	8	ħ	(1)	3	*	#			*2
		Þ		ı		3					
	9	Ē	IJ	Ιlν	V		1	2	3	4	5
		@	/	-	_	:	.ne.jp	.co.jp	.ac.jp	@docomo. ne.jp	
	0	7	Ŧ	ソ	"	۰	6	7	8	9	0
		~	٠.		,		www.	.com	.html	http://	https://

- Entering a reading when adding entries to the UIM phonebook changes double-byte input mode to katakana input.
- *1 : Can only be used when "Pictograph" is available, e.g. adding "Text memo" or "Common phrases". These icons are always entered as double-byte characters. "Pictograph" is not available when you are composing SMS, but "
 and "
 "" can be entered.
- *2 : Pressing 800 switches between upper case input mode (top) and lower case input mode (bottom). You can also enter upper case text and then change it to lower case by pressing *\frac{\dagger}{\dagger}.
- : Spaces are entered.

Allowable characters in T9

Key	Kanji/Hiragana input mode	Katakana input mode	Alphabetic input mode
1	あ column, 1	ア column, 1	./ @ ?!(),:'~* ⁵ & ¥ 1 Space
2	か column, 2	力 column, 2	ABCabc2
3	さ column, 3	サ column, 3	DEFdef3
4	た column, 4	夕 column, 4	GHlghi4
5	な column, 5	ナ column, 5	JKLjkl5
6	は column, 6	八 column, 6	MNOmno6
7	ま column, 7	マ column, 7	PQRSpqrs7
8	や column, 8	ヤ column, 8	TUVtuv8
9	ි column, 9	∋ column, 9	WXYZwxyz9
0	わをんゎー,0	ワヲンヮ ^{*4} ー,0	0
*	*1, *2	*1, *2	*2, *6
#	*3	*3	

- For numeric input mode, see "5-touch" character assignments.
- Number candidates do not appear when you enter a reading into a UIM phonebook entry or "Own dictionary".
- In "CapsLock mode", all characters are entered in upper case. In "Shift mode", only the first character is
 entered in upper case, and other characters are entered in lower case. When the mode is released, all
 characters are entered in lower case.
- · After text is confirmed in Shift mode, the mode is released.
- *1 : Switch the conversion candidate readings with dakuten "" and han-dakuten " during reading edit.
- *2 : A line feed " 🎝 " is entered.
- *3: ", ", ", ", ", ", ", ", " or space appears after reading and text are confirmed.
- *4: The lower case """ can be entered in double-byte input mode only.
- *5 : Appears as " in double-byte input mode.
- *6: When pressed before text is confirmed, a space is entered and the text is confirmed.

Symbol Reading List

You can enter the following symbols by entering and converting the readings. Some of the following symbols appear as conversion candidates when you enter and convert "きごう".

Name (characters to enter)	Symbol
あっと、あっとまーく	@
いこーる	=
えん	¥
おす	\$
おなじ	Q Q
おなじく	//
おんぷ	>
かける	×
かっこ	000110
	<> [] [] [] "
	"" () ⟨⟩ [] {} []

Name (characters to enter)	Symbol
から	~
こめ	*
ころん	:
こんま	,
さんかく	△▲▽▼
しゃせん	
しかく	□■◇◆
しめ	d-
たす	+
どう	/ バンジ / / 々
ぱーせんと	%

Name (characters to enter)	Symbol
ひく	_
ひしがた	♦
ほし	☆★
まる	000
むげん	∞
めす	우
やじるし	→← ↑↓
ゆうびん	₹
る一と	$\sqrt{}$
わる	÷

Pictogram Reading List

You can enter pictograms by entering and converting the following readings.

	Reading
^^	カーい・かお・うれしい
\ \	いかり・かお
11	がく・かお・かなしい
1	やだ・かお・かなしい
~~	かんがえる・かお・う一む
~~	ほっ・かお
200	ひやあせ・かお
19	ひやあせ・かお
)~(いかり・かお・ぷー
	ぼけー・かお
20	は一と・かお
5	あかんべ・かお・ベー
- \	ういんく・かお
> ←	うれしい・かお・にこ
*	がまん・かお
w	ねこ・どうぶつ
à	なみだ・かお・なき
~ ŏ	なみだ・かお・なき
NG	えぬじー・だめ
<u>^</u>	うまい・たべる・かお
^^	にやり・かお・わらい
101	げっそり・さけび・むんく・ かお
•	は一と
روسي	は一と
()	しつれん・はーと
WA	は一と
××	ふらふら・かお
Ĵ	ぐっど・やじるし・や・うえ
1	るんるん・おんぷ
\Diamond	かわいい・はな
•	きすまーく・きす・ちゅっ
4	ぴかぴか・あたらしい・き ら・ぴか
-`	ひらめき・きら・ぴか
×	むかっ・いかり
(1)	ぱんち・いかり・て
	ばくだん・ばくはつ・いかり
22	むーど・おんぷ
1	ばっど・やじるし・や・した

	Reading
ZZZ	ねむい・すいみん・ねる・ ぐー
V	びっくり・おどろき
!?	びっくり・おどろき
77	びっくり・おどろき
ΣΖ	どんっ・しょうげき
2	あせあせ・あせ
6	あせ
=3	だっしゅ・にげろ
~~	_
0	_
<u>.</u> j¦	はしるひと・だっしゅ・は しる・にげる
00	め・みる・みて
3	みみ・きく
3	て・ぐー
B	て・ちょき
M	て・ぱー
•	あし・あしあと
ф	めがね
1	おーけー・て・おっけー
Υ	おひつじざ・せいざ
8	おうしざ・せいざ
)(ふたござ・せいざ
9	かにざ・せいざ
N	ししざ・せいざ
M	おとめざ・せいざ
Ω	てんびんざ・せいざ
M∱	さそりざ・せいざ
7	いてざ・せいざ
73	やぎざ・せいざ
m	みずがめざ・せいざ
+	うおざ・せいざ
	ぱけっとべる・ぱけべる・べる
<u>6</u>	かめら・しゃしん
	かばん・ばっぐ
	でんわ けいたいでんわ・けいた
EA	い・けーたい・でんわ
	めも

	Dooding
-	Reading
•	は一と・とらんぷ
•	すペーど・とらんぷ
•	だいや・とらんぷ
*	くらぶ・とらんぷ
Ġ	くるまいす
	かちんこ・かっと・かんとく
8	ふくろ
6	ぺん・めも
2	ひとかげ
Ħ	いす
\otimes	とけい・じかん
\boxtimes	めーる・てがみ・あどれす
ID	あいでぃー
7	ぱすわーど・かぎ
7	つぎ・りた―ん
CL	くりあ
Q	さーち・しらべる・むしめ がね
NEW	にゅー・にゅう・あたらしい
1	はた・ふらっぐ・いち ふり一だいやる
00	ふり一だいやる
#	しゃーぷ
Q	
OK	けってい・おーけー・おっ けー
æ	あいあぶり・あぶり
a	あいあぶり・あぶり
0	ちゃぺる・べる・かね
	どあ・とびら
\$	どるぶくろ・かね・おかね
	ぱそこん・ぴーしー
\Diamond	らぶれた―・らぶめ―る・ てがみ・め―る
1	れんち・しゅうり
0	くりっぷ・てんぷ
©	
TM	
秘	まるひ・ひみつ
0	りさいくる
®	

	Reading
<u></u>	きけん・ちゅうい
禁	きんし
空	くうしつ・くうせき・くう
合	しゃ・あき ごうかく
-	まんしつ・まんせき・まん
満	しゃ・いっぱい
<u></u>	はれ・てんき・たいよう
∞	くもり・てんき・くも
T	あめ・てんき・かさ
8	ゆき・てんき・ゆきだるま
1	かみなり・てんき・ぴか
0	たいふう・てんき・まる・ ぐるぐる
	きり・てんき
•	こさめ・てんき・かさ
	しんげつ・つき・まる
	みかづき・つき
	はんつき・つき
	はんつき・つき
0	まんげつ・つき・まる
と	よる・つき・おやすみ
16	なみ・うぇーぶ・うみ
36	くろーばー・はな
	ちゅーりっぷ・はな
90	め・はな
具	でんしゃ・のりもの
M	ちかてつ · のりもの · めとろ
Œ	しんかんせん・のりもの
4	くるま・のりもの・せだん
4	くるま・のりもの・あーるぶい
	ばす・のりもの
4	ふね・のりもの
4	ひこうき・のりもの
a	いえ・たてもの・うち
	びる・たてもの・かいしゃ
Î	ゆうびんきょく・ゆうびん
1	びょういん
BK	ぎんこう・ばんく
ATM	えーてぃーえむ・ばんく
H	ほてる
CVS	こんびに
GS	がそりんすたんど・がすす たんど・がす

	Reading
P	ちゅうしゃじょう・ぱーき んぐ・ぴー
•••	しんごう
İÅ	といれ・べんじょ
40	れすとらん・しょくじ・ご はん・めし
X	びよういん・はさみ・とこや
335	おんせん
	がっこう
	きっさてん・しょくじ・さ てん・おちゃ
¥	ばー・しょくじ・さけ・か んぱい
	びーる・しょくじ・さけ・ かんぱい
	ふぁーすとふーど・しょく じ・はんばーがー
50	ゆのみ・おちゃ・ちゃ
	さくらんぼ・はな・ちぇ りー
J	ばなな・たべもの
6	りんご・たべもの
	おにぎり・おむすび・たべもの
	しょーとけーき・けーき・ たべもの
Ä,	とっくり・おちょこ・さけ・ かんぱい
55	どんぶり・ごはん・たべも の・しょくじ
	ぱん・しょくじ・たべもの
	わいんぐらす・わいん・さ け・かんぱい
<u> </u>	いぬ・どうぶつ
·	ねこ・どうぶつ
Ø	かたつむり・どうぶつ
0	ひよこ・どうぶつ
13	ぺんぎん・どうぶつ
8	さかな・どうぶつ
S.	うま・どうぶつ・けいば
	ぶた・どうぶつ
2	ぶてぃっく・くつ・ふく・ はいひーる
N	くつ
1	ていーしゃつ・しゃつ・ふく
	さいふ・かね・おかね
B	けしょう・くちべに
	じーんず・ふく・ずぼん
	えんぴつ・めも

	Reading
W	おうかん・かんむり・おう
0	ゆびわ
	すなどけい・じかん
•	うでどけい・とけい・じかん
/	すぽーつ・ふく
00	やきゅう・すぽーつ・ぼーる
•	ごるふ・すぽーつ
Q	てにす・すぽ一つ
8	さっかー・すぽーつ・ぼーる
_	すきー・すぽ一つ
0	ばすけっとぼーる・すぽー つ・ばすけ・ばすけっと
poc	も一た一すぽ一つ・はた・
	ふらっぐ・えふわん からおけ・まいく・うた
	えいが・びでお
3	ゆうえんち
B	おんがく・きく・へっどほん
2	あーと・かいが
3	えんげき・しばい
4	いべんと
	ちけっと・きっぷ
2	きつえん・たばこ
\otimes	きんえん・たばこ
	ほん
Did	りぼん
	ぷれぜんと・おめでとう
iii	ばーすでー・おめでとう・
	たんじょうび
	てれび
₹	げーむ
(3)	しーでいー
4	りぞーと・よっと・ふね
*	くりすます・き すのぼ・すの一ぼ一ど・す
R	ぽーつ
₫₽	じてんしゃ・のりもの・ちゃり
	ふじさん・やま
*	もみじ・はな
283	さくら・はな
7	やじるし・うえ
7	やじるし・した
_	やじるし・うえ
2000	やじるし・した
8	あいも一ど・あい

	Reading
000	あいも一ど・あい
1	いち・すうじ
2	に・すうじ
3	さん・すうじ
4	し・よん・すうじ
5	ご・すうじ
6	ろく・すうじ
7	なな・しち・すうじ
8	はち・すうじ

	Reading
9	きゅう・く・すうじ
0	ぜろ・れい・すうじ
+	やじるし・や
1	やじるし・や
soon	
ON!	
end	えんど・おわり
⇒₽	でんわ・でんわばんごう
N N	めーる・あどれす

	Reading
FAX	ふぁっくす
Ð	どこも
Ð	どこもぽいんと・どこも
¥	ゆうりょう・えん・かね
FREE	むりょう・ただ・ふりー

^{*} Pictograms without readings can only be entered by "Pictograph".

NOTE

Pictograms may not be displayed properly on phones or computers that are not i-mode compatible.
 Pictograms may not be displayed properly depending on the other party's phone model even when it is i-mode compatible.

Face Mark Reading List

You can enter face marks by entering and converting the following readings. All the following marks appear as conversion candidates when you enter and convert "かお" or "かおもじ".

Reading	Face mark
ありがと(う)	m()m
ばんざい	\(^0^)/
わーい	(^0^)
	(\ \ \)
	(* [^] □ [^] *)
	o(^∇^o)(o^∇^)o
	(≧▼≦)
おーい	(≧▼≦) (^0^)/ (^^)v
ふい	(^^)v
ぎゃはは	(^Q^)/^
あは	(-^-)
	(0 0 0)
にこ	(^-^)
	(*^_^*)
	(0 , A , 0)
	(0 [^] ∀ [^] 0)
	('∀'●)
	(
	(o^∇^o)
	(^m^)
	(*´▽`)
ちゅ	(^3^)/
	(^ε^)-☆Chu!!
わくわく	
ういんく	0(^-^)0 (^)
(うぃんく)	(*^_ ')
さよなら	(^_^)/~
	(_´Д`)ノ~~
	(T_T)/~
がんば	p(^^)q
ね	(^.^)b
ぽりぽり	(.)b (^^ゞ̈́
ひやあせ	(^o^; (;^_^A
あせあせ	(;^_^A
あせ	(° • 00 • °)
びくっ	(*_*)
どき	(⊚-⊚;)
え	(@_@;)
めがてん	(• • ;)
はてな	$(\cdot \cdot ?)$
なぜ	(?_?)
	(° U。)?

er and convert "かお" or "かおもじ".							
Reading	Face mark						
きらーん	(☆。☆)						
しくしく	(T_T)						
	(´;ω; `)						
いたた	()_()						
	(><)						
えーん	(;_;)						
	(´Д`)						
	ΩΑΩ;						
	(ДД(°)°°						
	°。(p)∧⟨q)。°°						
	$(T\omega \setminus)$						
が一ん	(;)!! (;)						
	(;)						
	Σ(̄□ ̄;)						
	(-Π-:)						
	([:)						
えへん	(
む	(X)						
	0(0)						
いかり	(` ´)						
むか	(;+						
	(^ ^)						
	(~^~;)						
こそこそ	(•_•						
じーっ	()						
きこえない	()						
こまったもんだ	(¯~¯)ξ						
ぶたー)^0^(
こあら	(-Q-)						
いぬ	(^·I·)						
ねこ	=^•ω•^=						
いっぷく	(^!^)y~ (^.^)y~~~~						
	(^ .^)y-~~						
ほし	☆彡						
ねてる	()ZZ						
ねむい	(~0~)/						
	(p)/						
めも	φ()						
うん	(°_°)(°_°)						
かんぱい	(^^)/∇☆∇\(^^)						
ども	\(^_^)(^_^)/						
がまん	(; ´∩ `)						

Reading	Face mark
こんにちは	ヾ(=^▽^=)ノ
	$(\cdot \forall \cdot)$
	(● ´ A ´ ●)\/
いいな	(o) \(\omega \(\omega \)
	(@° ▽° @)
	(m'□'m)
うーん	(~~-:)
	(-ω-) (/_\;)
てれる	(/_\;)
	$(*/\omega \setminus *)$
	(\\A\\)
	(≧ω≦)
	(mn)
	(∩∇ `)
	(*ymy*)
しあわせ	°+。(*′ ▽ `)。+°
	\(`\D`)/
	(*´∀`*)
なかよし	^-^) <u>\</u> (^-^
ごめん	(*c*)
	(-人-)
いじいじ	(^人^)
いじわる	Ψ(`∀´#)
よろしく	\$\(\pi^*)
こまった)ω(
C& 3/C	><
やだ	(O)_()
へこむ	()
	(´ω´)
	(´ω`) (·ω·)
びっくり	(O T O :)
	w(° 0°)w
だっしゅ	w(° 0°)w = r(· _ ·) -
つっこみ	(- · W ·)/
わらい	(^ω^)
	(^皿^)
どんまい	b(·∇·●) (° ≧∇≅°)
きゃー	(。≧∇≦。)
かぜ	(*) U (*)
ぶぶつ	(´ψψ`)

Multiaccess Combinations

New communications	Voic	Voice call Videophone Usin		Using	Using	i-mode mail		
Current status	Dial	Receive	Dial	Receive	i-mode*1	i-α ppl i	Send	Receive
During a voice call	△*2	△*3	×	△*4	0	×	0	0
During a videophone call	×	△*4	_	△*4	×	×	×	×*9
During i-mode*1	0	0	△*6	△*7	_	○*13	0	0
During packet communications with a PC	0	0	×	×	×	△*8	×	×*9
During 64K data communications	×	△*4	×	△*4	×	×	×	×*9
During PushTalk	×	△*5	×	×	×	×	×	×*9

New communications	SI	MS		ket nications	-	data nications	PushTalk		
Current status	Send	Send Receive		Receive	Send	Receive	Dial	Receive	
During a voice call	0	0	0	0	×	△*4	×	×	
During a videophone call	×	0	×	×	×	△*4	×	×	
During i-mode*1	0	0	×	×	×	×	△*10	△*12	
During packet communications with a PC	0	0	_	_	×	×	×	×	
During 64K data communications	0	0	×	×	×	△*4	×	×	
During PushTalk	0	0	×	×	×	×	×*11	×	

- ○: Can be activated. ×: Cannot be activated. △: Can be activated depending on situation.
- -: Functionally incompatible.
- *1 : Includes i-Channel site view, Full Browser, and communications via ToruCa.
- *2 : If you have subscribed to "Call Waiting", you can hold the current voice call to make another call.
- *3 : If you have subscribed to "Call Waiting", you can hold the current voice call to answer an incoming call. If you have subscribed to "Voice Mail" or "Call Forwarding", you can end the current communication and then answer incoming communications. -> p.401
- *4 : If you have subscribed to "Call Waiting", "Voice Mail" or "Call Forwarding", you can end the current communication and then answer incoming communications. → p.401
- *5 : If "PushTalk arrival act" is set to "Answer", answering an incoming voice call disconnects PushTalk communications. → p.84
- *6 : Make a videophone call after disconnecting the current i-mode.
- *7 : If "V.phone while packet" is set to "V.phone priority", answering an incoming videophone call disconnects i-mode communications.
- *8 : You cannot communicate via i-αppli software.
- *9 : i-mode mail, MessageR or MessageF is not received, but is stored in the i-mode center. You can receive stored i-mode mail, MessageR or MessageF by performing "Check new messages" after the current communication ends.
- *10: Make a PushTalk call after disconnecting the current i-mode.
- *11: You can dial to add a member only when you are the caller.
- *12: If "Set i-mode arrival act" under "i-mode settings" is set to "PushTalk preferred", receiving a PushTalk call disconnects the current i-mode communication and displays the receiving screen for the PushTalk call. When set to "i-mode preferred", an incoming PushTalk call cannot be answered and is not recorded as a missed call.
- *13: You cannot activate i-appli when Full Browser is active.

Multitask Combinations

The following table shows combinations of functions that can be used simultaneously as multitask.

- The following rules may not apply depending on the function status and combination.
- Up to 3 functions can be used simultaneously, one from each of the following groups shown below (excluding 1Seg/Music group).

Function to acti Currently active function	vate)(X)	GZ	2	2	•	P	W	\cap		¥		Group		
Mail		×	0	0	0)		0		0	0	Mail group		
i-mode	000	0	×	0	0))	0	0	i-mode group		
i-αppli	53	0	0	×	0))	0	0	i-αppli group		
Settings/NW Service	8	0	0	0	×))	0	0	Settings group		
Own data	-															
Data box	•											T. d				
LifeKit		0	0	0	0		,	<		0		0	0	Tools group		
Phonebook	W															
MUSIC	0					0		,	,		(1Seg/Music				
1Seg		0	0	0	0		()		× C			0	group		
i-concier	0	0	0	0	0))	0	×	i-concier group		
During a voice call		0	0	×	×	0	×	0	0	>	<	×	0	Voice call		
During a videophone call	囯	×	×	×	×		×		>	<	×	×	Videophone call			
During PushTalk	2	0	0	×	×	0	0 × 0 0		>	<	×	0	PushTalk			
During packet communications with a PC	4	0	0	0	0	0		0		0		>	<	0	0	External communications
During 64 KB data communications	2	0	0	×	×	0	×	0	0	>	<	×	0	communications		

[:] Can be activated.

^{×:} Cannot be activated.

Service Available for the FOMA Terminal

Available service	Phone number
Directory assistance (pay: service charge + call charge) * Unlisted phone numbers cannot be given.	(No area code) 104
Telegram (pay: telegram charge)	(No area code) 115
Time (pay)	(No area code) 117
Weather (pay)	Area code for weather forecast you want + 177
Police emergency	(No area code) 110
Fire brigade/Ambulance emergency	(No area code) 119
Maritime distress call	(No area code) 118
Emergency Message Recording System (pay)	(No area code) 171
Collect call (pay: service charge + call charge)	(No area code) 106

NOTE

- When you use the Collect Call Service (106), the receiver will be billed for the call charge plus an additional service charge of 90 yen (94.5 yen tax included) for each call. (As of April, 2009)
- When you use the Directory Assistance Service (104), you will be billed for the call charge plus an
 additional service charge of 100 yen (105 yen tax included). A free service is available for persons with
 impaired vision or disability of the arms or hands. For further details, call 116 (NTT inquiries) from general
 subscriber phones. (As of April, 2009)
- If you are using a Call Forwarding service from a general phone and if a mobile phone is set as the
 forwarding number, depending on the settings of the general phone or mobile phone, the caller may simply
 hear the ring tone even when the mobile phone is busy with another call, out of range or turned off.
- Other services such as 116 (NTT inquiries), Dial Q2, message (Dengon) Dial, and Credit Call Service are not available (However, Credit Call Service calls can be made from public or general subscriber phones to the FOMA terminals).
- Your FOMA terminal supports "Emergency Location Report". Calls made to emergency service organizations (e.g. by dialing 110, 118 or 119) disclose information on the caller's location to the organization receiving the call.

The location information may not be correctly sent depending on the current location or signal quality. When the location information is reported, the name of the organization receiving the call appears on the standby screen.

This information is not disclosed when, before each individual call made, "184" or another blocking prefix is dialed first. If the phone number and location information are deemed necessary for the protection of life, etc., this information may be reported to the organization being called. Locations planned for adoption of this feature vary according to the status of the preparations by the relevant emergency service organizations.

- When calling 110, 119 or 118 from the FOMA terminal, first say you are calling from a mobile phone, give your number, and state your location clearly so that the police or fire department can call you back. Also, do not move around when making the call. Do not turn off the power immediately after ending the call, but leave it turned on for more ten minutes or so, so that you can receive a call.
- Depending on the area you are calling from, you may not be connected with the nearest police or fire department. In this case, dial from a public or general subscriber phone.

Introduction of Options and Related Devices

By combining various options and accessories sold separately, your FOMA terminal can support a wide range of applications to meet both your personal and professional needs. Note that some products may not be available depending on the area you are in. For more information, contact a docomo Shop or Service Counter.

For details of options and accessories, refer to relevant User's Manual.

- · Earphone/Microphone 01
- Stereo Earphone/Microphone 01
- Earphone Plug Adapter 01
- Earphone/Microphone with Switch P001*1/P002*1
- Stereo Earphone Set P001*1
- Earphone Plug Adapter P001
- Flat-plug Earphone/Microphone with Switch P01/ P02*2
- Flat-plug Stereo Earphone Set P01*2
- Bluetooth Headset F01*3
- AC Adapter F01 for Bluetooth Headset
- Wireless Earphone Set P01/02
- Bone Conduction Receiver Microphone 01*2/02
- FOMA USB Cable*4
- FOMA AC Adapter 01/02*5
- FOMA Dry Battery Adapter 01

- Carry Case L 01
- FOMA USB Cable with Charge Function 02*4
- FOMA Portable Charging Adapter 01*6
- In-Car Hands-Free Kit 01^{*7}
- FOMA In-Car Hands-Free Cable 01
- Data Communications Adapter N01
- FOMA Indoor Booster Antenna*8
- FOMA Indoor Booster Antenna (Stand Type)*8
- In-Car Holder 01^{*9}
- FOMA AC Adapter 01 for Global use*5
- FOMA DC Adapter 01/02
- Earphone Plug Adapter 01 for External connector terminal
- Desktop Holder N15
- · Battery Pack N16
- Back Cover N40
- *1: To connect to N-09A, the Earphone Plug Adapter P001 or Earphone Plug Adapter 01 for External connector terminal is required.
- *2 : To connect to N-09A, the Earphone Plug Adapter 01 for External connector terminal is required.
- *3: The AC Adapter F01 for Bluetooth Headset is required.
- *4: USB HUB may not work correctly.
- *5 : Charging with the AC adapter → pp.44, 45
- *6 : Before charging N-09A, reset the settings to default, and fold the FOMA terminal.
- *7: To charge N-09A, the FOMA In-Car Hands-Free Cable 01 is required.
- *8: Use in Japan only.
- *9 : To attach N-09A to the In-Car Holder, attach to the 4th position shown in ② listed in "In-Car Holder 01 Manual".

Introduction of Moving Picture Playing Software

- To play a moving picture (MP4 file) on a PC, install QuickTime Player (free) ver. 6.4 or later (or ver. 6.3 + 3GPP) of Apple Inc.
- Download QuickTime from the following website:
 - http://www.apple.com/ip/quicktime/download/
 - To download, you need a PC to access the Internet. Internet charges apply to download the software.
 - · View the website above for more details on the environment, download, operations, etc.

Troubleshooting

- Check if your FOMA terminal needs an update, and if necessary, update the required software. → p.465
- If you are still unable to identify the problem after checking the points, feel free to contact the Repairs
 inquiries number provided on the back of this manual or a repair counter designated by DOCOMO.
- Problems are categorized. Color text indicates problems, and black text indicates the points to check and reference pages.

Power/Battery/FOMA card (UIM)

The power does not turn on (The FOMA terminal cannot be used)

- Is the battery pack properly attached? → p.43
- Has the battery run out? → p.45

It takes some time to turn on the power after pressing and holding for 1 second or longer

 Data checking may take time (e.g. if the phonebook is full of data). → p.93

The animation shown on the right appears and an alarm tone sounds

The battery has run out.
 Recharge the battery. → pp.44, 47



The power is turned off or turned back on suddenly

 Soiled connectors of the battery pack may result in poor connections and loss of power. When soiled, wipe with dry cloth or cotton swab.

Cannot charge the battery (The charge lamp flashes/does not light up)

- Is the battery pack properly attached to the FOMA terminal? → p.43
- Is the adapter firmly plugged into the electrical outlet or cigarette lighter socket? → p.45
- Are the adapter and the FOMA terminal correctly connected? (Is the AC adapter firmly connected to the FOMA terminal or the desktop holder (optional)?)
 D.45
- Are the charging terminals of the FOMA terminal dirty when the desktop holder is used? When soiled, wipe with dry cloth or cotton swab.
- The temperature of the FOMA terminal may rise then the charging lamp may turn off or flash if used for a long time while being charged. In this case, wait for the temperature to go down, then charge again.
- Depending on the usage condition, battery charging may stop before it is fully charged. In this case, end all running functions then recharge the battery.

Battery life is very short

- Do you often use your phone outside the service area or where the signal is weak?
 Frequently using your phone outside the service area or where the signal is weak will consume battery charge more quickly.
- The available operating time of the battery pack depends on the conditions of usage and battery pack. → p.44
- The battery pack is consumable. The operation time for battery packs steadily decreases with each charge. When the operating time has become extremely short even though the battery pack has been fully recharged, please purchase a new battery pack. → p.44

The phone becomes hot during operation/battery charge

 During operation, during battery charge, or if you use i-appli or videophone or watch 1Seg programs for a long time while charging, the temperature of the FOMA terminal, battery pack or adapter may rise. This is not a problem. Keep using it.

A FOMA card (UIM) cannot be recognized

• Is the FOMA card (UIM) inserted correctly into your phone?

Communications (Phone/i-mode Connection/Bluetooth)

- " 🧩 " appears and calls cannot be made
- Are you outside the service area or in a place where the signal is weak? → p.47

Calls cannot be made or received

- Reboot the power, or remove the battery pack or FOMA card (UIM) then insert it again.
- Depending on the signal quality, you may not be able to make or receive calls even if the signal strength icon shows """ - """|". Move to a location with a stronger signal and try again.
- Is Call rejection, Call acceptation, or another restriction applied?
- Depending on the network congestion, you may have difficulty talking or mailing in crowded places. In this case, you see the message "Please wait" and hear the busy tone. Move to a location and try again, or perform the operation later.

Cannot make a call by pressing the dial keys

- Is Original lock for "Keypad dial" under "Dial/sending mail" set? → p.133
- Is Keypad lock set? → p.134
- Is Restrict dialing set? → p.137
- Is Dial lock set? → p.125
- Is Self mode set? → p.140

Calls cannot be made with an external device such as car navigation or handsfree device connected

 If you attempt to make calls several times but the other party cannot answer e.g. outside the service area, you may no longer make calls to the number. In this case, turn the power off and then turn it back on.

You dialed a number and initiated a call, but all you hear is a busy tone

- Did you start dialing before hearing the dial tone?
- Did you forget to dial the area code? → p.52
- Is "Please wait" displayed?

i-mode, i-mode mail, i-αppli, i-Channel and i-concier cannot be connected

- Is "Host selection" set to other than "i-mode"? → p.200
- If you had started using the FOMA terminal before you subscribed to i-mode, turn the power off and then turn it back on.

"=" flashes and does not disappear

 The i-mode icon keeps blinking after checking new messages, sending/receiving mail, etc. or when i-mode connection is disconnected. The icon automatically turns off if no data is exchanged. To turn it off immediately, press the power key -

Cannot connect to/find a Bluetooth device

 Set the Bluetooth device (commercially available) to standby, and register the device on the FOMA terminal. To delete an already registered device then register the device again, first delete the device registered both on the Bluetooth device (commercially available) and on the FOMA terminal.

"Out of service area" is displayed

 Are you outside the service area or in a place where the signal is weak? → p.47

w "appears and you hear the busy tone

 Are you outside the service area or in a place where the signal is weak? → p.47

Receiving Calls (Ring Tone/Image/ Illumination)

Cannot receive calls or hear the ring tone

- Are any of the following functions set? Restrictions → p.137
 - Call rejection
- Call acceptation
- · Call Forwarding Voice Mail
- · Set mute seconds
- Ring time (sec.) → p.139
- Reject unknown → p.139
 - Call setting w/o ID → p.138
- · Unknown: Reject User unset: Reject
- · Payphone: Reject
- In manner mode? → p.103
- In Public mode (Driving mode)? → p.68
- Is Original lock for "Incoming call" under "Incoming/Mail disp." active? → p.133
- In Self mode? → p.140
- Is the start time of Voice Mail or Call Forwarding service set to "0 second"? → pp.396, 399
- Is Caller ID Request set to "Activate"? → p.400
- Is mova valid with the Dual Network service? → p.400
- Is Ring volume set to "Silent"? → p.67
- Is the ring time of Record message set to "0 second"? →p.71

The incoming call operations (ring tone sounding, vibrator, incoming call lamp flashing) are not performed when a call arrives

 The incoming call operations (ring tone sounding, vibrator. incoming call lamp flashing) are not performed until the set time is reached, when a call arrives from a phone number not stored in the phonebook or from a caller who does not notify his/her caller ID and if "Set mute seconds" under "Ring time (sec.)" is set to "ON". → p.139

Mail ring tones and alarm tones sound, but no ring tone sounds when a call or PushTalk arrives

• Is "Set mute seconds" under "Ring time (sec.)" set to long time (e.g. 99 seconds)? Set "Set mute seconds" to shorter time. → p.139

The ring tone sounding when a voice call or videophone call arrives is different from what you selected

 When the ring tone settings are duplicated, the priority is assigned. → p.99

The image displayed when a voice call or videophone call arrives is different from what you selected

 When the image settings are duplicated, the priority is assigned. → p.99

When a voice call or videophone call arrives, the color or pattern of the incoming call lamp flashing is different from what you set up

 When the illumination settings are duplicated, the priority is assigned. → p.112

The screen or ring tone active for an incoming call or mail is the default setting

- Depending on the combination of receiving screen and ring tone or the priority sequence, either the receiving screen or ring tone may be restored to default.
- When you set downloaded Flash movies as the receiving display or received result screen for mail and set i-motion/music for ring tones, the screen display may be restored to default depending on the combination of receiving screen and ring tone.

Receiving an incoming call immediately after turning on the power displays the phone number but does not display the name stored in the phonebook

 The FOMA card (UIM) may be being read immediately after turning on the power. The phonebook function may not be available then.

Talk

The other party's voice is difficult to hear during a call, or too loud

- Is the earpiece properly held on your ear? → p.22
- Is anything (e.g. a sticker) obstructing the earpiece?
- Is anything obstructing the speaker in handsfree mode?
- Did you change the "Volume" setting?
 Change the setting so that you can hear the other party clearly. → p.67
- Try changing the Hyper Clear Voice setting. → p.63

Sending/Receiving Mail (Ring Tone/ Image/Illumination)

The receiving message operations (ring tone sounding, vibrator, incoming call lamp flashing) are not performed when a mail arrives

- Is "Mail/Msg. ring time" set to "OFF"? → p.102
- Is Original lock for "Disp. recv. mail/msg." under "Incoming/Mail disp." active? → p.133
- Is "Receiving setting" set to "Operation preferred"?
 →p.171
- Is the mail address or phone number of the third party stored as secret data? → p.127

The ring tone sounding when a mail arrives is different from what you selected for the mail address

- When the ring tone settings are duplicated, the priority is assigned. → p.99
- If you have received multiple mail, the tone set for the last received mail address sounds. → p.99
- If the format of the sender's mail address is "phone number@docomo.ne.jp", save only that phone number as a mail address and set a distinctive ring tone for that mail address in "Ring tone" under "Mail (recv.)". → p.93
- Is the sender's mail address (a mail address shown on the received mail detail screen) stored in the phonebook correctly and did you set a distinctive ring tone for that mail address in "Ring tone" under "Mail (recv.)"? → p.93
- If you receive SMS, a distinctive ring tone set in "SMS (recv.)" for the phone number in the phonebook sounds. → p.93

The color of illumination flashing when a mail arrives is different from what you selected for the mail address

- When the illumination settings are duplicated, the priority is assigned. → p.112
- If you receive multiple mail, the incoming call lamp flashes following the settings of the "Illumination" under "Mail (recv.)" that is set to the last received mail address. - p.112
- If the format of the sender's mail address is "phone number@docomo.ne.jp", save only that phone number as a mail address and set distinctive illumination for that mail address in "Illumination" under "Mail (recv.)". → p.93
- Is the sender's mail address (a mail address shown on the received mail details screen) stored in the phonebook correctly and did you set illumination for that mail address in "Illumination" under "Mail (recv.)"? →p.93
- If you receive SMS, distinctive illumination set in "Illumination" under "SMS (recv.)" for the phone number in the phonebook flashes. → p.93

Mail is not automatically received

- If "Receive option setting" is set to "ON", set it to "OFF".
 →pp.157, 171
- Is the mail address or phone number of the third party stored as secret data? → p.127

Mail are not automatically filtered

- If the sender's mail address is "phone number@ docomo.ne.jp", save only the phone number in the Auto-sort settings. → p.167
- If the sender's mail address is not "phone number @docomo.ne.jp", save the entire address including the domain in the Auto-sort settings. → p.167

Attached file is not received

automaticallyAttached file is deleted

- Check the "Prefer attachment" setting.
- Check the "Limit Mail Size" setting. For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

Receiving SMS does not display the sender's name stored in the phonebook

 Did you correctly store the sender's phone number on the phone number column () of the phonebook?
 n 86

You were disconnected while sending mail, then received SMSA message appears when you retry

 SMS interrupts communication and notifies you that a large amount of data is being transferred within a given time. Follow the SMS content and displayed message.

Viewing Mail (Inbox/Outbox)

Sent mail is not saved to Outbox

Is "Sort all" set on the mail-linked i-αppli folder?
 Highlight the mail-linked i-αppli folder then select "Open folder" from the function menu to confirm the setting.
 →pp.164, 166

Received mail is not saved to Inbox, and " (white) does not disappear

 Is "" displayed on the mail-linked i-αppli folder in Inbox? Is "Sort all" set on the mail-linked i-αppli folder? Highlight the mail-linked i-αppli folder then select "Open folder" from the function menu to confirm the setting.
 → pp.164, 166

Display

The display is dim and hard to see

- Is "Brightness" under "Backlight" set to "Level 1" or "Level 2"? → p.109
- Is "Privacy angle" set to "ON"?→p.108

The display light of the display or keypad does not turn on

- Is "Lighting" under "Backlight" set to "OFF"?→p.109
- Press 5 for 1 second or longer to turn the backlight on or off. → p.109
 - Note that pressing 5 for 1 second or longer will turn off the backlight e.g. while composing mail.
- Is 1Seg ECO mode set? → p.247

Nothing appears on the display, and the keypad backlight flashes

 In Power saver mode. Press any key to release Power saver mode. → p.109

Nothing appears on the indicator display

Is "Indicator display" set to "OFF"? → p.111

Operations (Key/Menu)

Key operations are not available

- If you bring the FOMA terminal near magnetic products, you may not be able to perform correct key operations. Keep the FOMA terminal away from magnetism.
- Is Dial lock/Omakase Lock set? → p.125
- Is Keypad lock set? → p.134

Keys do not sound when pressed

- Is "Keypad sound" set to "OFF"?→p.101
- In manner mode? → p.103

Any key answer does not work and you cannot answer a voice call, videophone call or PushTalk

- Is "Answer setting" set to "Quick silent" or "OFF"?
 → p.66
- You cannot use Any key answer to answer a videophone call.

No operations are performed when side keys are pressed while the FOMA terminal is folded

- Is Keypad lock set? → p.134
- Is "Side key guard" set to "ON"?→p.135

Missed calls, etc. cannot be checked when (a) is pressed while the FOMA terminal is folded music Player does not start when (MUSIC) is pressed for 1 second or longer

- Is "Info notice setting" set to "OFF"? →p.70
- Is Keypad lock set? → p.134
- Is "Side key guard" set to "ON"?→p.135

The screen movement is slow when keys are pressed

 It may occur if a large amount of data is stored on the FOMA terminal or if you exchange large data between the FOMA terminal and microSD card.

Cannot access functions by pressing the preassigned menu numbers (p.424)

Set the main menu theme to "Standard". → p.34

The records of Dialed calls/Redial/Sent address disappear automatically

Is "Restrict dialing" under "Restrictions" set? → p.137

"直感ゲーム" (Chokkan Game) cannot be played

• Is "Original lock" set for camera? → p.132

Camera

Photos or moving pictures taken with the camera are blurred

- Check if the lens is clouded or soiled.
- To take closeups, set the auto focus to "Close-up".
 → p.221
- Is Shake correction set to "OFF"? → p.230
- Is the Auto focus set to "OFF"? → p.221

Photos taken with the camera are flickered

 When you take pictures indoors, flickering may appear due to the effect of fluorescent lighting, etc. Changing the "Flicker" setting may suppress flickering. → p.222

Photos or movies taken with the camera look too bright

 Are you outside or in a bright place with "Flicker" set to "Mode 1 (50Hz)" or "Mode 2 (60Hz)"? Restore the "Flicker" setting to "Auto". → p.222

Chance capture shooting shortens the shooting time

 Chance capture shooting saves management data together with moving picture data, which may shorten the shooting time.

Appendix/Troubleshooting

1Seg

Cannot watch 1Seg programs

- Are you out of digital terrestrial broadcast range or is the reception poor?
- Are channels set? → p.239

Osaifu-Keitai

Osaifu-Keitai cannot be used

- Are you waving the mark of the FOMA terminal over a reader/writer unit? → p.285
- Is IC card lock/Dial lock/Omakase Lock set? →pp.126, 286
- When the battery pack is removed, the IC card function cannot be used.

Osaifu-Keitai i-appli cannot be deleted

 You may not be able to delete i-αppli until you delete IC card data used with i-αppli you want to delete. Delete the IC card data, them delete the i-αppli, →p.269 If you still cannot delete the i-αppli, contact a docomo Shop, etc.

Note that "iD appli" cannot be deleted.

Displaying/Playing/Managing Data

" X " appears when you attempt to display an image, or " 💢 " appears when you attempt to

play for demonstration or see a preview

may appear when the image data is corrupted. An image or melody set in each function does not work, and the default setting applies

 Was the inserted FOMA card (UIM) used when the image or melody was obtained? → p.41

It takes long to display or play a moving picture/ i-motion or Chaku-Uta-Full®

 Is the moving picture/i-motion or the Chaku-Uta-Full[®] stored in the "Movable contents" folder? It may take long to display or play data stored in the "Movable contents" folder.

Cannot copy or move a moving picture/i-motion

- or Chaku-Uta-Full® to a microSD card
- Is the Chaku-Uta-Full[®] saved partially? → p.255
- Is the replay restriction (count, period, time limit) of the moving picture/i-motion or Chaku-Uta-Full® invalid? →p.305

Text appears instead of image, i-motion, music, Music&Video Channel, video or Machi-chara

 The following indicate that the image, i-motion, music. Music&Video Channel, video or Machi-chara cannot be selected for the function. Select data that will not display the following: "Not available", "Expired file", "No preview data" → pp.252, 255, 304, 312, 315, 318

A microSD card cannot be read during SD-Audio data playback, or "Replay error Quitting" appears

 Move the audio data to a PC using "SD-Jukebox", then format the microSD card using "SD-Jukebox". After that, move the audio data back to the microSD card.

microSD card data are not displayed

Perform "Check microSD". → p.327

A PDF data is not properly displayed

 PDF data may not be properly displayed if it contains formats unsupported by PDF viewer or complicated designs.

It takes long to display a PDF data

It may take long to display a large PDF data.

Cannot copy a PDF data to the FOMA terminal

Does the PDF file size exceed 2 MB? → p.344

Cannot copy a PDF data to a microSD card

Was the PDF data downloaded by page? → p.344

Document is not displayed properly

 A document may not be properly displayed if it contains formats unsupported by Document viewer or complicated designs.

It takes long time to open a document

It may take long to display a large document.

Data Communications

Cannot install the FOMA communication setting file (driver) or establish data communication

 Is the USB mode setting set to "microSD mode" or "MTP mode"? Set it to "Communication mode". → p.333

Data transfer is not performed

 Do you use USB HUB? Using USB HUB may not work correctly.

PC cannot be connected in MTP mode

 You cannot a microSD card used to transfer WMA data on another FOMA terminal. → p.259

When connecting the FOMA terminal to a PC in MTP mode, the FOMA terminal is incorrectly recognized as a camera device

Is the Windows Media Player version 9 or under?
 →pp.259, 333

If the version of Windows Media Player is 9 or under, Windows Media Player does not support MTP mode and cannot be recognized as an MTP device. Upgrade Windows Media Player, and follow the procedure below to uninstall N-09A that was recognized as a camera device once:

[Windows XP]

- 1. Connect N-09A to a PC via USB Cable
- 2. Click "スタート" (Start), right-click "マイコンピュータ" (My Computer), click "管理" (Manage) and then "デバイスマネージャ" (Device Manager)
- 3. Right-click "N-09A" under "イメージングデバイス" (Imaging Device) then click "無効" (Disable)
- 4. Right-click "N-09A" under "イメージングデバイス" (Imaging Device) then click "削除" (Uninstall)
- 5. Disconnect N-09A from the PC
- 6. Set MTP mode again and reconnect N-09A to a PC

Overseas Use

" y or "Network re-search" does not disappear from the screen, and international roaming services cannot be used

- Are you out of international roaming service area or is the reception poor?
- See the international service guides such as "Mobile Phone User's Guide [International Services]" to check if the area or operator is available.
- Activate "NW search mode" to search for a compatible operator. → p.414
- After going overseas, change the "3G/GSM setting" to "AUTO" or another compatible network. If the setting was set to "AUTO" in Japan, reboot the FOMA terminal power

A voice call or videophone call cannot be received

- Is "Bar incoming when roam" set to "Activate"? → p.415
- Is "V.phone while packet" set to other than "V.phone priority"? → p.74
- Videophone is not available while using the GSM/ GPRS network.

The other party's caller ID is not notified The notified caller ID is not the other party's Cannot perform operations using phonebook data or Caller ID Notification

 If the used network or operator does not notify the caller ID, the caller ID does not appear on the screen even when the other party notifies the caller ID.
 Depending on the used network or operator, the notified caller ID may be different from the other party's.

The phone suddenly becomes unusable while overseas

- Contact docomo Information Center for total charges. A limit on communications charges is set for International roaming service WORLD WING. If your charges exceed the limit, the use of WORLD WING will be suspended. Service can be restarted if you pay the total charges for WORLD WING use.
- Check the "3G/GSM setting". If set to "AUTO", a searched network may be unusable. Change the setting to "3G" or "GSM/GPRS", and use a network compatible with your country or region of stay. → p.414

If Error Message Appears Mentioned Below

- In the following table, color text indicates error messages, and black text indicates the explanation/ solution and reference pages.
- Error messages are described in alphanumeric and Kana order.
- Numbers in parentheses are codes that the i-mode Center uses to distinguish errors.

Α

"ACMmax restriction cannot call"

 This message appears when the accumulated call charges exceed the upper limit set in a FOMA card (UIM) and a call cannot be made. Perform "Reset total cost" to release the restriction. →p.369

"Activating BOX lock Cannot download"

 The entire Inbox/Outbox or mail-linked i-αppli folder is locked, and the mail-linked i-αppli cannot be downloaded or upgraded. To download or upgrade the mail-linked i-αppli, unlock the box or folder. → p.137

"Activating BOX lock Unable to delete"

• The entire Inbox/Outbox or mail-linked i-αppli folder is locked, and the mail-linked i-αppli and its folder cannot be deleted. To delete them, unlock the box or folder. To delete mail-linked i-αppli only, select "NO" if a message appears asking whether to delete the corresponding mail-linked i-αppli folder. → p.137

"Activating folder lock Cannot download"

 For explanation/solution, see "Activating BOX lock Cannot download" (p.456).

"Activating folder lock Unable to delete"

 For explanation/solution, see "Activating BOX lock Unable to delete" (p.456).

"Activating restrict dialing"

 This message appears when you attempt a prohibited operation while Restrict dialing is set. → p.137

"Address is not valid (451)"

 This message appears when mail could not be sent to the specified address.

"Attached file is deleted"

This message appears when you attempt to quote received i-mode mail to send a replay and a file is attached to the original mail. This message also appears when a file prohibited to be attached to mail or output from the FOMA terminal is attached to i-mode mail you attempt to forward. Press ■ to delete the attached file.

"Authentication canceled (401)"

 This message appears when the "Cancel" button is pressed on the Authentication screen.

"Authentication type is not supported (401)"

This message appears when authentication fails. Press
 to return to the previous page.

C

"Cannot dial by Number B abroad Dial by Number

 This message appears when 2in1 is in B mode and you attempt to make a call while overseas. Select "Dial (not notify)" to hide the caller ID with Number A.

"Cannot reset by this Ext. IC card"

 This message appears when you put the A mark close to an unregistered contactless IC card during user authentication using the IC card authentication function. → p.134

"Cannot save attached file"

 This message appears when you receive mail with an attached file that cannot be saved, via infrared data exchange, cable connection or copy from a microSD card.

"Caution! This SMS includes Phone Nos. or URLs. Be careful if you do not recognize the sender."

• This message appears when you set "Message scan" under "Scanning function" to "ON" and attempt to open SMS containing a phone number or URL. Check the sender, then press ■ to display the text of the SMS. → p.472

"Certificate is rejected (tampered)"

 This message appears when an altered SSL/TLS certificate has been received. An SSL/TLS communication cannot be established with this site.

"Check new messages is set all OFF"

 All checkboxes under "Set check new messages" are deselected, and "Check new messages" cannot be performed.

Select items under "Set check new messages". → p.172

"Connection failed (403)"

 The site could not be accessed for some reason. Retry connection.

"Connection failed"

- This message appears when the host setting is not correct. Set the correct host in "Host selection" under "Connection setting". → p.200
- The i-mode could not be connected for some reason.
 Retry connection.
- Set "Caller ID Notification" to "ON" and retry.
 →pp.50, 61

"Connection interrupted"

- i-mode connection was interrupted due to poor reception. Move to a good signal location before using i-mode services.

 p.47
- If this message appears in a good signal location with the """ mark, the site is extremely busy. Retry after a while.

"Continue using i-αppli and transmit data?"

 This message appears when you selected "NO" or "Terminate i-αppli" on the message "Data transmission is frequent Continue transmission?" Select "YES" to continue i-αppli communication. To exit i-αppli, select "Terminate i-αppli".

"Could not be found"

 There is no response from the Bluetooth device, and it cannot be registered or connected.

"Current UIM is not registered as IC owner Unable to delete"

"Current UIM is not registered as IC owner Unable to download"

"Current UIM is not registered as IC owner Unable to move"

"Current UIM is not registered as IC owner Unable to run"

"Current UIM is not registered as IC owner Unable to upgrade"

 This message appears when the inserted FOMA card (UIM) is not registered in FeliCa then you attempt to start Osaifu-Keitai i-αppli or move the i-αppli from a microSD card.

D

"Data in B mode phonebook is unavailable"

 "Phonebook 2in1 setting" is set to "B", and PushTalk cannot be made. Change the "Phonebook 2in1 setting" to "A", and retry. → p.406

"Data in IC card is full Unable to download Delete service?"

"Data in IC card is full Unable to move Delete service?"

"Data in IC card is full Unable to run Delete service?"

"Data in IC card is full Unable to upgrade Delete service?"

This message appears when you attempt to download Osaifu-Keitlai i-αppli or move it from a microSD card but space is insufficient in the IC card. Select "YES" to view already-stored Osaifu-Keitai services, space (bytes) allocated by deleting the service, and necessary area size. Select a service, and follow the instructions to start i-αppli and delete the service.

"Data is too long A part is deleted"

 The size of the address, subject, main text or multiple data exceeds the maximum. The excess part will be deleted, and the New mail screen appears.

"Data is too long Please delete message"

 The size including quotation marks in the main text of i-mode mail to quote to send a reply exceeds 5,000 double-byte characters. Delete text to reduce the size to 5,000 double-byte characters or less.

"Data transmission is frequent Continue transmission?"

 This message appears when i-αppli communication is extremely frequent in a given time span. Select "YES" to continue i-αppli communication, or "NO" to quit communication. To exit i-αppli, select "Terminate i-αppli".

"Data transmission is frequent Press CLR and confirm data transmission"

This message appears when communication from the i-appli standby screen is extremely frequent in a given time span. Press CLB to select whether to allow communication from the i-appli standby screen or whether to close the i-appli standby screen. → p.278

"Dial/Receive calls activating Original lock"

• This message when you attempt a prohibited operation while Original lock is set on "Dial/sending mail". → p.133

"Download failed"

 This message appears when a communication error occurs while downloading a melody, Chara-den character or download dictionary, or when the downloaded data is invalid.

Ε

"Editing now Unable to delete"

 This message appears when you are editing mail stored in Draft and attempt to delete the mail.

"Enter correct Network Security Code"

 This message appears when you entered a wrong network security code. Enter the correct network security code. →p.124

"Error in image Does not work correctly"

 This message appears when a Flash movie cannot be played due to an error found in the data.

"Error Register forwarding number"

• This message appears when you have subscribed to the Call Forwarding service and attempt to forward an incoming call by selecting "Call Forwarding" from the function menu without setting the forwarding number. →p.399

"Exceeds max number of simultaneous calls"

 This message appears when you select 5 or more members then dial. Reduce the number of members to 4 or fewer then redial

Е

"Failed to Copy all"

 The data could not be copied for some reason. Replace with a new microSD card and retry.

"Failed to Copy this"

 The data could not be copied for some reason. Replace with a new microSD card and retry.

"Failed to read"

 The data could not be copied for some reason. Replace with a new microSD card and retry.

"Failed to retrieve channel information"

 This message appears when you attempt to receive data via communication and a data error or communication error occurs.

"Format microSD for your phone"

 The microSD card is not formatted, or another error occurs. Format the microSD card again. → p.333

"Frame number of this page is not supported"

 The number of frames that can be displayed on i-mode Browser/Full Browser exceeds the maximum, and the Internet webpage cannot be viewed.

"Function cannot operate any more"

Exit another function.

-1

"i-αppli stand-by display terminated due to security error"

"Software terminated due to security error"

 This message appears when you attempt to perform a prohibited action and i-αppli or i-αppli standby screen (including i-αppli DX) exits. →pp.270, 279

""i-αppli To" function is not set"

 This message appears when you attempt to start i-αppli from sites, mail, infrared data exchange, Bar code reader, IC card, ToruCa or data broadcast, but the i-αppli is not allowed to be linked and cannot start.
 → p.278

"Input error (205)"

 This message appears after you enter text on i-mode sites or Internet websites and send information. Press
 to cancel the entered text or settings. (The settings/ content have been already sent, and transmission cannot be canceled.)

"Insert UIM"

 This message appears when a FOMA card (UIM) is not properly inserted or may be damaged. Check if a FOMA card (UIM) is properly inserted. → p.41

"Invalid address"

- The address contains "," and mail cannot be sent. Delete ".".
- The sender's mail address of received mail exceeds 50 single-byte characters, and mail cannot be replied to.
- The address contains spaces or characters other than numbers, "#" and "X", and SMS cannot be sent. Delete spaces or characters other than numbers, "#" and "X".

"Invalid UIM Auto-start failed"

 This message appears when you attempt to auto-start i-αppli restricted by the FOMA card security function. →p.41

"Invalid UIM Requested service not available"

- This message appears when you select the desktop icon or desktop info of data protected by the FOMA card security function. → p.41
- This message appears when you select a screen memo or MessageR/F protected by the FOMA card security function. →p.41

"Invalid UIM Requested software failed to start"

 This message appears when you attempt to start i-αppli restricted by the FOMA card security function.
 → p.41

"Invalid URL"

 This message appears when a URL entered in "Enter URL" or "Home URL" does not start with "http://" or "https://", or when "OK" is selected without any text entered. Re-enter URL. → pp.183, 189, 198

М

"Memory full Cannot move"

 This message appears when you attempt to save data to or take data out from the Secret folder but the destination folder is full. Delete data from the destination folder, then move the data. → pp.129, 130

"Memory No.:XXX Cannot overwrite"

 This message appears when Secret mode or Secret data only mode is not active and you attempt to add a phonebook entry to the same No. as secret data memory No. → p.127

"Memory shortage"

 This message appears when you cannot operate any more due to memory shortage. If the message often appears, reboot the power.

"Memory shortage Quit"

 Memory shortage occurs. The operation is interrupted.
 When composing i-mode mail, you may not be able to enter up to 5,000 double-byte characters depending on the number of active tasks or combination of fonts.

"Message too long to add header"

 The total size of the main text and header exceeds 5,000 double-byte characters, and the header cannot be added.

"Message too long to add header & signature"

 This message appears when you attempt to forward i-mode mail but the header/signature cannot be automatically added as the size including header/ signature exceeds 5,000 double-byte characters.

"Message too long to add signature"

 The total size of the main text and signature exceeds 5,000 double-byte characters, and the signature cannot be added.

N

"No channel found"

No channel available in the area is found.

"No channel info"

 There is no channel information, and you cannot compose a suggested message.

"No data"

 This message appears when no phonebook entry matches the search phonebook condition.

"No microSD"

 This message appears when a microSD card is not properly inserted or may be damaged. Check if a microSD card is properly inserted. → p.324

"No requested data Delete this desktop icon?"

 This message appears when you select the desktop icon or desktop info of deleted data.

"No requested software"

 This message appears when you attempt to start i-αppli from mail, infrared data exchange, Bar code reader, IC card or data broadcast, but it is not found.

"No response (408)"

 There is no response from the site, and the connection was interrupted. Retry connection.

"No response"

No Bluetooth device is found near the FOMA terminal.

"No response"

 This message appears when user authentication using the IC card authentication function failed due to timeout. → p.135

"No response Continue?" (During infrared data exchange/iC communication)

• The other party cannot be found/detected. Place infrared data ports facing each other during infrared data exchange. Check the marks and put them close again during iC communication. Select "YES" and press to try. → pp.339, 340

"No Switch"

"Not correspond contents"

 Information read with Bar code reader contains content unsupported by the FOMA terminal and cannot be recognized.

0

"Other function active Cannot operate"

"Other function active Cannot start"

 This message appears when you attempt an operation unavailable during call.

"Out of service area"

 This message appears when you attempt to use i-mode services out of service area or in a poor signal location. Move until """ papears, then use i-mode services. -- p.47

Р

"Page is not found (404)"

The site is not found. It may not exist.

"Password is not correct (401)"

 This message appears when authentication fails on the "Authentication" or "Re-authentication" screen. Select "YES" to authenticate again.

"Phone/UIM ID will be sent"

 This message may appear while viewing i-mode sites or Internet websites. Select "YES" to send mobile phone serial number information. Select "NO" not to send. → p.181

"PIN1 code blocked"

• This message appears when the power is turned on while PIN1 code is locked. Press ■ to open the Enter PUK code screen. Enter the correct PUK code to unlock the PIN1 code. → p.125

"Please wait"

 The voice line/packet communication system is down, or the voice line network/packet communication network is extremely busy. Use voice calls/videophone/ i-mode after a while.

You can still make emergency calls (110, 119, 118). You may not be connected depending on the situation.

"Please wait for a while (packet)"

 The packet communication system is down,or the packet communication network is extremely busy. Retry after a while.

"PUK code blocked"

 This message appears when you turn on the power or attempt to perform FOMA card (UIM) operations while PUK code is blocked. Contact a docomo Shop. → p.124

R

"Reading UIM Cannot start"

 This message appears when you attempt to perform FOMA card (UIM) operations while reading the FOMA card (UIM). Retry after a while.

"Replace with a new one or check the disk"

Perform the check disk operation on the microSD card.
 →p.327

"Replay period has expired"

 This message appears when you select the desktop icon or desktop info of i-motion whose duration or period has expired.

"Replay period has expired Delete?"

 This message appears when you attempt to play i-motion or Chaku-Uta-Full[®] whose duration or period has expired. Select "YES" to delete the data.

"Root certificate has expired Connect?"

- This message appears when the period of the SSL/ TLS root certificate in the FOMA terminal has expired.
 Select "YES" to connect. Select "NO" not to connect.
- This message appears when there is a request to send client certificate while accessing SSL/TLS i-mode sites or Internet websites. -+ p.185

"Root certificate is not valid"

 This message appears when you receive an SSL/TLS certificate with "Certificate" set to "Invalid". Check the details, set the certificate to valid and reconnect.
 → pp.185.201

S

"Security code is 4 to 8 digits"

"Wrong security code"

 This message appears when you entered a wrong security code. Enter the correct security code. → p.124

"Send your certificate?"

 User certificate is requested from the site. Select "YES" to send certificate, or "NO" not to send.

"Service is not subscribed"

- You have not subscribed to i-mode services, and the services are not available. A subscription is required to use i-mode services.
- If you had started using the FOMA terminal before you subscribed to i-mode, turn the power off and then turn it back on.

"Service is used by the previous software Unable to download Delete a service?"

- "Service is used by the previous software Unable to move Delete a service?"
- "Service is used by the previous software Unable to update Delete a service?"
- When the same service has been already downloaded, a new service cannot be downloaded, upgraded or moved from a microSD card unless you delete the existing service. This message appears when authentication fails. Select "YES" to view a service that can be deleted. Delete the service.

"Services are full Music of overwritten service is unable to play Overwrite?"

 This message appears when the number of stored music (membership) services has reached the limit.
 Select "YES" to overwrite a service whose playback period is the oldest. Tracks that were downloaded from the overwritten service cannot be played any more.

"Size of data is not supported"

- The size of the data downloaded with Full Browser exceeds the maximum of a single page. The download is interrupted, and only the downloaded data is displayed.
- This message appears when the limit is exceeded while downloading a melody, download dictionary or Chara-den character.

"Software for this folder deleted Refer to Open folder"

 Mail-linked i-αppli for the selected mail folder has been deleted and cannot start. Use the function menu to open mail in the folder. → p.166

"Software is stopped because of error"

 This message appears when an error occurs and the active software cannot continue running.

"Some addresses are invalid"

 This message appears when you attempt to send a reply to multiple addresses and some of them are invalid.

"Some attached file will be deleted"

• A file is attached to i-mode mail you attempt to forward, and the file is prohibited to be attached to mail or output from the FOMA terminal. Press • to delete the file prohibited from attaching to the mail or outputting outside the FOMA terminal.

"Some mails not sent (561)"

Mail could not be sent to some addresses.

"SSL/TLS session cannot be established"

 This message appears when you could not access SSL/TLS i-mode sites or Internet websites. Retry connection.

"SSL/TLS session failed"

 This message appears when the SSL/TLS connection is disconnected due to error incurred during SSL/TLS authentication.

"Syntax error"

"Syntax error (XXX)"

 The received data contains an error and cannot be displayed. The data is discarded. A number indicating the content of the error may appear in "XXX".

П

"Talking now Cannot operate"

"Talking now Cannot start"

 This message appears when you attempt an operation unavailable during call. → pp.355, 446, 447

"This certificate has expired Connect?"

- This message appears when you received an SSL/TLS server certificate whose period has expired or period of validity is not reached. Select "YES" to connect. Select "NO" not to connect.
- This message appears when "Set main time" has not been performed and you attempt to access SSL/TLS i-mode sites or Internet websites. Configure the time setting. →p.49

"This certificate is not valid for this URL Connect?"

 This message appears when CN (client name) of SSL/ TLS certificate does not match. Select "YES" to connect. Select "NO" not to connect.

"This data can no longer be replayed"

 This message appears when you select the desktop icon or desktop info of i-motion that cannot be played any more.

"This data can no longer be replayed Delete?"

 This message appears when you attempt to play i-motion or Chaku-Uta-Full[®] that cannot be played any more. Select "YES" to delete the data.

"This data is not supported by this phone"

 This message appears when you attempt to download incompatible i-motion or data other than i-motion.

"This data may not be replayed"

 This message appears when the format of the acquired i-motion is not MP4 (Mobile MP4).

"This site is not certified Connect?"

 This message appears when an unsupported SSL/TSL certificate has been received. Select "YES" to connect.
 Select "NO" not to connect

"This software contains error"

from a microSD card.

"This software contains error Unable to download"

"This software contains error Unable to move" "This software contains error Upgrade canceled"

 This message appears when the software contains an error and cannot be downloaded, upgraded or moved

"This software is not supported by this phone"

 This message appears when you attempt to download software unsupported by the FOMA terminal and it cannot be downloaded or moved from a microSD card.

"This UIM cannot be recognized"

 This message appears when the inserted FOMA card (UIM) may not be available on the FOMA terminal. Check if the correct FOMA card (UIM) is inserted.
 → p.42

"Too much data was entered"

 Too many characters are entered, and the data cannot be sent. Reduce the number of characters then resend.

Ш

"Unable to download"

This message appears when you have subscribed to the i-mode packet flat-rate service and an extremely large volume of data is transmitted within a given time. You may not be connected for a given time. Use i-mode after a while.

"Unable to download Data exceeds maximum size (452)"

 This message appears when the data is larger than the maximum size and cannot be received.

"Unable to obtain data due to replay restriction data error"

 The remaining data of partially downloaded Chaku-Uta-Full[®] cannot be obtained as its duration or period has expired. Partially-stored data will be deleted.

"Unable to retrieve the requested URL (504)"

 The site could not be accessed for some reason. Retry connection.

"Unable to support this card"

 The FOMA terminal does not support this microSD card. Use a compatible microSD card. → p.323

"Unable to use PushTalk from call history of Number B"

 This message appears when 2in1 is in Dual mode and you attempt to make a PushTalk call from Number B Dialed calls/Received calls/Redial.

"Unable to use PushTalk in B mode"

2in1 is in B mode, and PushTalk cannot be made.
 Change the mode to A mode, and retry. → p.406

"Unable to use PushTalk in Number B"

 "2in1/Multi Num." under "Dial setting" of the Phonebook detail screen function menu is set to "Number B", and PushTalk cannot be made. Change "2in1/Multi Num." under "Dial setting" to "Number A", and retry.

- p.91

"Upper limit has been exceeded Connection failed"

 The upper limit set for a Limit billing plan (Type Limit and Family Wide Limit) is exceeded.

"URL address changed (301)"

 The site has been moved, and the URL has changed. If the URL is registered as bookmark, desktop icon or home URL, re-register it. → pp.116, 190, 198

"URL is too long to register"

 The URL exceeds 256 single-byte characters and cannot be registered as bookmark or home URL.

"Usage is currently restricted Try again later"

This message appears when you display the channel list screen for the first time after purchase or when you attempt to display the channel list screen after resetting the i-Channel, changing the i-Channel host URL, initializing the FOMA terminal or exchanging the FOMA card (UIM), and then if i-Channel information cannot be obtained. Move until "" appears, then open the channel list screen again. → p.209

"Use ToruCa automatic reading function in mobile phone through reader/writer?"

W

"Wrong password"

 This message appears when you enter a wrong password in opening/downloading a PDF data.
 →pp.194, 343

Y

"You have no certificate Connect?"

 User certificate has not been downloaded. Select "YES" to view the site. Some sites may not be connected. → p.201

"Your certificate has expired Connect? Send your certificate?"

 User certificate is requested from the site, but the period of validity has expired. The site may be connected by selecting "YES", but downloading a new user certificate is recommended. → p.201

Numeric, etc

""●▲■.ne.jp"宛のメールが混み合っているため、 送信できません(555) Unable to send. "●▲■ .ne.jp" is not available temporarily."

- * The domain name varies depending on the recipient.
- The line is down or extremely busy. Retry after a while.

"おまかせロック中です"

 Omakase lock is set. While Omakase lock is active, all key operations are locked except receiving a voice call/ videophone call and turning the power on/off. → p.127

Warranty and After-Sales Service

Warranty

- Make sure that a warranty is included when you purchase the FOMA terminal. Check the content, information about the shop, date of purchase, etc. Keep the card in a safe place. If the card does not contain necessary information, immediately contact the shop and request them to fill in the card. The warranty is valid for one year from the date of purchase written on the warranty.
- The product in whole or in part, including its accessories, is subject to improvement without notice.
- The stored data such as phonebook entries may be altered or lost through damage, repair or improper use of the FOMA terminal. Please keep a separate record of the information such as phonebook entries you have registered in your FOMA terminal. Repairing the FOMA terminal cannot transfer most of the data downloaded via i-mode or i-αppli, complying with the copyright law.
 - *With this FOMA terminal, you can save phonebook, data used with i-motion or i-appli to a microSD card.
 - *With this FOMA terminal, you can keep data such as phonebook at the Data Security Center using the Data Security Service (Charges apply and a subscription is required).
 - *If you have a PC, you can transfer and save data such as phonebook entries to your PC using DOCOMO keital datalink (p.421) and FOMA USB Cable with Charge Function 02 (Optional) or FOMA USB Cable (optional).

After-sales service

If your FOMA terminal needs repairs

Before having your FOMA terminal repaired, see "Troubleshooting" in this manual. If you still have problems, call at the Repairs inquiries number described on the back of the manual.

If, after contacting DOCOMO, you are informed that your FOMA terminal needs repairs

Bring it to a repair counter designated by DOCOMO. The repair counter is only open during business hours. Do not forget to bring the warranty card with you. Depending on the malfunction, repairs may take some time.

■ Within the warranty period

- · Repairs will be made free of charge based on the provisions of the warranty.
- Bring the warranty card when requesting repairs. Charges will apply even when the FOMA terminal is still
 under warranty if the warranty card is not submitted, or if malfunction or damage is the result of mishandling
 by the subscriber.
- Charges will apply even within the warranty period for repairs resulting from use of devices and accessories not specified by DOCOMO.
- Charges will apply for repairs in the event of damage to the LCD screen, connectors and similar components
 after purchase.

Repairs may not be possible in the following circumstances:

- Repairs Inquiries detect water exposure (Example: the water exposure detection sticker detects water exposure)
- Tests determine that corrosion has occurred due to water exposure, condensation, perspiration, etc. or the circuit board has been damaged or altered (the external connector, liquid crystal, case, etc. has been damaged)
- * These cases are not covered by the warranty, and any repairs that may be possible will be carried out at the subscriber's expense.

■ After the warranty has expired

Repairs can be carried out upon request but at the subscriber's expense.

■ Stock period of parts

Functional parts (required to maintain phone operation) will be kept in stock for a minimum of 6 years after the product is discontinued. Depending on the malfunction, parts shortage and other conditions may mean that the FOMA terminal cannot be repaired. Depending on the malfunction, the FOMA terminal can be repaired even after the period of availability for a functional part is exceeded. Call at the Repairs inquiries number described on the back of the manual.

Important

- Do not attempt to modify the FOMA terminal or accessories.
 - · Modification may result in fire, injury, or malfunction.
 - Repairs to the FOMA terminal that has been modified (disassembled, altered, painted, etc.) will only be carried out if the user agrees to have the FOMA terminal restored to its original state in line with DOCOMO standards. Requests for repair of the modified FOMA terminal may be rejected. The following may be regarded as modifications:
 - · Put stickers, etc. on the LCD or keys
 - Decorate the FOMA terminal using adhesives, etc.
 - Replace the external parts, etc. with non-DOCOMO components
 - If malfunction or damage occurs as a result of modification, charges will apply even if the FOMA terminal is still under warranty.
- Do not remove the manufacturer's specification sticker put on the FOMA terminal.
 The manufacturer's specification sticker certifies that the FOMA terminal meets technical standards.
 Please be aware that it may not be possible to carry out repairs if the specifications cannot be confirmed because the sticker has been removed, altered, etc.
- The settings of the functions or the information about total call time may be cleared (reset) due to the damage, repair or improper use of the FOMA terminal. In this case, configure the settings again.
- Magnetic components are used for the following parts of the FOMA terminal. A cash card (ATM card, bank card), etc. which is easily affected by magnetism, may become unusable if it is kept close to the components:

Speaker, mouthpiece speaker, above the function key 2


 If your FOMA terminal gets wet or moist, immediately turn it off, remove the battery pack, and bring the FOMA terminal to a repair counter as soon as possible. Note that repairs may not be possible depending on the condition

Memory dial (phonebook function) and downloaded information

- Please keep a separate record of the information you have registered in your FOMA terminal. Please be aware that DOCOMO bears no obligation or responsibility in the event that data is altered or lost.
- When the FOMA terminal is inspected or repaired, data saved on your FOMA terminal may be altered or lost. This includes data that you created, imported from an external source, or downloaded. We cannot accept any responsibility for data alteration or loss that occurs in these circumstances. In addition, we may need to replace the FOMA terminal instead of repairing it. Data including images/ring tones downloaded to the FOMA terminal and user-created data are transferred to the new phone only when repaired (some data cannot be transferred. Data may not be transferred depending on the damage).
 - * It may take time to transfer data or the data may not be transferred depending on the amount of the data stored on the FOMA terminal.

i-mode Fault Diagnosis Site

This service lets you check if your FOMA terminal's i-mode is working correctly for operations such as sending/receiving mail, and downloading images/ring tones.



- Connecting to "i-mode Fault Diagnosis Site" (Japanese)
 - i → "お知らせ" (News) → "サービス・機能" (Services/Functions) → "i モード" (i-mode) → "i モード故障診断" (i-mode Failure Diagnosis)



QR code for connecting to the site

- Packet communications charges do not apply to use i-mode Failure Diagnosis.
 - * Charges will apply if using the service from overseas.
- Test items vary depending on the FOMA terminal model. Also, the test items are subject to change.
- To check the operation with each test item, read the notes on the site carefully before performing test.
- When connecting to the i-mode Failure Diagnosis site or testing the mail sending, the unique information (model, mail address, etc.) of your FOMA terminal is automatically transmitted to our server (i-mode Failure Diagnosis server). We do not use the transmitted information for any purposes other than i-mode Failure Diagnosis.
- When there seems to be a malfunction as a result of checking, contact the Repairs inquiries number provided on the back of this manual.

Updating Software

<Software Update>

Check if your FOMA terminal needs an update, and if necessary, download and update the required software via packet communications.

DOCOMO updates software important for products after they go on sale to improve functionality and ease of use so you may better use your mobile phone.

The latest information regarding software updates can be viewed on the NTT DOCOMO website or in "お客様サポート" (Customer Support) of iMenu.

- Packet communications charges do not apply to perform software updates.
- Software may be updated in the following three methods: "Auto-update", "Now update" and "Reserved update".
 Auto-update: The new software is downloaded automatically and overwritten at the preset time.
 Now update: The software update is performed at once.

Reserved update: A time and date can be designated to perform the software update automatically.

- You can update the software if the i-mode host is set as the user defined host.
- Software updates (downloading and rewriting) may take time.

- Software updates are performed via SSL/TLS communications with the server at DOCOMO. It is therefore
 necessary to have a valid CA certificate. (The CA certificate is valid at the time of purchase. Configuring the
 settings → p.201).
- Please make sure that the battery is fully charged when performing software updates.
- It is recommended that you perform software updates when the FOMA terminal is stationary and in a location with good signal quality (three bars for the antenna icon).
 - * If the reception becomes poor and then the download is interrupted, try to update again in a location with good signal quality.
- Updating the software with "PIN1 code entry set" set to "ON" displays the PIN1 code entry screen at
 automatic restart after installing the software. You cannot make or receive a call or use other communication
 functions if you do not enter the correct PIN1 code.
- You cannot download the update software:
 - When the FOMA card (UIM) is not inserted
 - · When PIN lock is set
 - . When date and time is not set
 - In Self mode
 - · When packet dialing is restricted
 - · During 64 KB data communications
- When the FOMA card (UIM) is invalid
- · When PIN Unlock Code (PUK Code) is locked
- · When Omakase Lock is set
- When " \(\frac{\times}{\times} \) " is displayed
- While using mova terminal with Dual Network service
- · During international roaming

When the reserved time comes while another function is active, download starts after finishing the function (download cannot start depending on the active function).

- You cannot rewrite the updated software:
 - · When Omakase Lock is set
 - When " w is displayed

- While other functions are active
- · During international roaming
- · When the battery is not charged enough for software update rewriting

If the auto-update rewriting fails, rewriting is performed again at Set auto-update time (next day or one week later).

- Other functions are not available while software is being updated, though voice calls can be answered while downloading.
- If the software has already been updated, "No update is needed Please continue to use as before" appears
 when you check for new software updates.
- After updating the software, the displayed i-mode Center storage status icon disappears. Also, if the receive
 option is set to "ON" and mail is received while updating the software, the mail notification screen may not
 appear after software is updated.
- When software is updated, the unique information (model, serial number, etc.) of your FOMA terminal is automatically transmitted to the server at DOCOMO. We do not use the transmitted information for any purposes other than Software Update.
- If the update fails, the message "Rewrite failed" will appear and all operations will become unavailable. In this case, please seek advice at a repair counter designated by DOCOMO.

NOTE

- Never remove the battery pack while updating software. Doing so may cause the update to fail.
- It is possible to perform software updates while keeping your Phonebook entries, camera images, downloaded data and other data saved on the FOMA terminal intact. However, note that in some cases data cannot be protected depending on the condition of your FOMA terminal (malfunction, damage, water exposure, etc.). It is recommended that you back up necessary data. (Please note that it may not be possible to back up some data such as downloaded data.)
- In case of Now update or Reserved update, when the software update is completed without operation for confirmation, you will see the desktop icon " " (Update complete) on the standby screen. Select " and enter your security code to see the detail results of the update.

Performing Software Update automatically

The new software is downloaded automatically and rewritten at the preset time. When rewriting is possible, 🚅 (Rewrite) appears on the standby screen. You can check the time of the update and change the time, or perform immediate rewrite.

- "Set auto-update" is set to "Auto-update" (Date: Everyday, Time: 03:00) by default.
- When the rewrite time arrives with 🚆 (Rewrite) displayed, the rewriting is automatically performed, then (Rewrite) disappears.
- Setting the auto-update date and time



▶"Settings/NW Service"▶"Other settings"▶

"Software Update" Enter your security code



Software Update function list



"Set auto-update"▶"Auto-update"▶⊠ (Set)

The new software is automatically downloaded, and " (Rewrite) appears on the standby screen.

- To change the date and time for updates
- ► Select and set "Date" or "Time" ► 🖾 (Set)
- To set for update notification only
- Select "Only notification" ► ☐ (Set)

If software update is necessary, " [1] " (Update) appears on the standby screen.

- To leave auto-update set to off
- ► Select "Disable" ► (Set) ► "Yes"
- When software needs an update



On the standby screen ► Select " 💒 "



Updating starts at the scheduled time. → p.470

- To change the time of the update
- ▶ "Change" Enter your security code Select and set "Date" or "Time" ☐ (Set)
- To perform software update immediately
- ➤ "Now rewrite" ➤ Enter your security code

Proceed to Step 2 in "Updating software immediately" (p.469).

NOTE

- [(Rewrite) disappears when confirmed.
- (Update) appears when there is a notification from DOCOMO or if update fails.



Running Software Update

To run Software Update, select [Update] (Update) displayed on the standby screen or use the menu screen.

Selecting (Update) to run Software Update



On the standby screen ► Select " 📑 "



- "Yes"
 - To clear without running Software Update
- Enter your security code
- Check whether software update is needed
- The check result appears
 - When "Update is needed" appears
 - ➤ Select "Now update" or "Reserve"

 Select "Now update" to update the software immediately. → p.469

 Select "Reserve" to update later. → p.470



Check result screen

- When "No update is needed" appears
- ►"OK

Continue using the FOMA terminal as there is no need to update the software.



Running Software Update from the menu



"Settings/NW Service" ► "Other settings" ► "Software Update" ► Enter your security code

The Software update function list screen (p.467) appears.

2

"Update"

Proceed to Step 4 (p.468) in "Selecting [10] (Update) to run Software Update".



Check result screen (p.468)▶"Now update"▶Select "OK" when "Start download Notice" appears

Download starts immediately.

Download starts after a while even if you do not select "OK".





When download ends and "Ready to rewrite?" appears, select "OK"

Software update starts.

Rewrite starts after a while even if you do not select "OK". It may take time to start rewriting.



All keys are disabled during software rewriting, and you cannot stop rewriting.

When the software is rewritten, the FOMA terminal will reboot automatically.

After rebooting, when the message "Software update is complete" appears, select "OK" (the message does not appear for Auto-update). Software update is complete.

When update is complete and "OK" is not selected. " " (Update Complete) appears indicating that update is complete. " idisappears when confirmed.



NOTE

- If you stop downloading before the download is completed, partially-downloaded data is deleted.
- Even if the power is switched off during rewriting, it resumes when power is restored.
- Once you start downloading, the update starts automatically even if you do not select any menu item, etc.
- The screen on the right may appear if the server is busy.
 In this case, select "Reserve" to perform the reserved update.
- The FOMA terminal may automatically reboot during rewriting.



If it takes a long time to download or when the server is busy, you can select time to perform software update by communicating with the server beforehand.

<Example: To reserve at 7:30 AM on June 27 (Saturday)>



Check result screen (p.468)▶"Reserve"▶Select date and time

- If there is no date and time you want to reserve
- "Others" → p.470





Check the selected date and time "YES" "OK"

The software update is reserved.

■ To change the date and/or time







At the scheduled time



The screen on the left appears and the software update automatically starts in about 5 seconds. Charge the battery fully, put the FOMA terminal in a location with good signal quality and display the standby screen before the reserved time. The remaining procedure is the same as "Updating software immediately <Now update>" (p.469).

NOTE

- The reserved time for software update will be based on the server's time.
- When the reserved time for software update is the same as the alarm notification time, priority is given to software update.
- When the reserved time comes while another function is active, update starts after the function exits.
- If you perform "Initialize" after the reservation procedure is complete, the software update does not start at the scheduled time. Reschedule the time for update.

If you select "Others"

You can select the desired date and time if you select "Others" on p.470.



Select a desired date



On the date selection screen, you will see the update availability as shown below: O: Available

△: Almost full

None: Full



Select an hour



On the time selection screen, you will see the update availability as shown below:

O: Available

 \times : Full

Select an hour to display time candidates by communicating with the server again.



Confirm the software update date and time



If you check the selected date and time then select "YES", you will communicate with the server again.

The software update is reserved.

Checking/Changing/Canceling the reserved date and time

<Example: To cancel the reservation after checking it>



Enter your security code → "Other settings" → "Software Update" →



"Cancel"



- To accept the reserved date and time
- ▶"OK"
- To change the reserved date and time
- ▶"Change"

After the unique information on your FOMA terminal is transmitted to our server, follow the procedure used when "Others" was selected. → p.470

3

When the message "Cancel this reservation?" appears, select "YES"

At this point, the unique information on your FOMA terminal is transmitted to our server. DOCOMO will never disclose or forward unique information on your FOMA terminal (model and serial number) to a third party.

When the message "The reservation is canceled" appears, select "OK". The reservation is canceled.







Ending Software Update

When "No" or "Cancel" is selected on each screen, the end screen appears.

Select "Yes" to end software update and return to the standby screen. Select "No" to return to the previous screen.

Protecting the FOMA Terminal from Harmful Data

<Scanning function>

First, update the pattern data to the latest pattern data.

Delete harmful data and prevent harmful applications from launching by scanning and detecting problems in files imported to the FOMA terminal, such as those downloaded from a website or i-mode mail.

- Data on harmful patterns is used for checking files on the FOMA terminal. The pattern data is modified every time a new problem is found. Update the pattern data. → p.472
- The Scanning function prevents the data that causes some fault from invading your FOMA terminal when viewing sites and websites or receiving mail. If pattern data for a failure is not downloaded to the FOMA terminal, or if pattern data for a certain failure does not exist, it may be impossible to delete the harmful data using this function.
- The pattern data is specific to a certain model of FOMA terminal. Therefore, DOCOMO may stop distributing pattern data for a model 3 years after the model is first released.
- Set the date (year, month and day) of your FOMA terminal correctly.
- When the pattern data is updated, the unique information (model, serial number, etc.) on your FOMA terminal is automatically transmitted to our server (the server that our company manages for the scanning function). We do not use the transmitted information for any purposes other than scanning function.
- The pattern data update is interrupted during reception of a call or while out of the service area.

Setting the scanning function

<Set scan>

When the Scanning function is set to "ON", data and programs are automatically checked when they are executed.

When the message scan is set to "ON", the main text of SMS is automatically checked.



"Settings/NW Service" Lock/Security" Scanning function"

Lock/Security Scanning function 1 Update ⊡Set auto-update ElSet scan Version

Scanning function



"Set scan"▶"Scan" or "Message scan"▶"ON"

If a message appears asking whether to change the settings

▶"YES"

* If you enable the Scanning function and it detects potentially harmful data, the event is displayed using one of 5 warning levels. → p.473

NOTE

The Voice Mail notification is not checked even when "Message scan" is set to "ON".

Updating pattern data

<Update>



Scanning function screen (p.472)▶"Update"▶"YES"▶"YES"



^{* &}quot;Pattern definitions are up-to-date" appears if the pattern data does not need to be updated. Keep using the current pattern data.

 You cannot update the pattern data when the update information is notified from the network, when another function is active, or during i-mode communications, packet communications or international roaming.

Updating pattern data automatically

<Set auto-update>



Scanning function screen (p.472)▶"Set auto-update"▶"ON"▶"YES"▶
"YES"

Scanning results display

Scanned problems display



A list of up to 5 problems detected by the Scanning function appears, starting with the highest-level problem. If 6 or more problems were detected, the names of the 6th and subsequent problems are omitted.

The rest of the problem elements (6th and subsequent), of which names are omitted, are displayed as follows:

1 - 9998: The remaining count appears as is.

9999 or more: "Other:9999" appears regardless of the count.

Scanning results

Warning level 0	Warning level 1	Warning level 2	Warning level 3	Warning level 4
Operation may not run properly	Operation may not run properly Cancel operation?	Operation may not run properly Canceling operation	Operation may not run properly Delete data?	Operation may not run properly Deleting data
(Set)···Continue the operation.	 □ (Cancel)···Stop and cancel the operation. ☑ (Continue)··· Continue the operation. 	(Set)···Stop and cancel the operation.	(Delete) ··· Delete the data and cancel the operation. (Back) ··· Stop and cancel the operation.	(Set) ··· Delete the data and cancel the operation.

NOTE

• A message other than the above may appear depending on the condition.

Checking the pattern data version

<Version>



Scanning function screen (p.472)▶"Version"

Appendix/Troubleshooting

Main Specifications

Phone

Product n	ame	N-09A									
Size (Whe	en closed)	Height approx. 109 mm × Width a 13.9 mm (Thickest: Approx. 16.4 r	approx. 50 mm $ imes$ Thickness approx. nm)								
Weight		Approx. 111 g (Battery attached) [FOMA/3G] Stationary ("Auto" 1): Approx. 550 hours									
Continuou	is standby time	[FOMA/3G] Stationary ("Auto"*1): In transit ("3G"*1): In transit ("Auto"*1): [GSM] Stationary ("Auto"*1):	Approx. 410 hours Approx. 360 hours								
Continuou	ıs talk time	[FOMA/3G] Voice communication Videophone: [GSM] Voice communication	s: Approx. 200 min. Approx. 100 min.								
Charging	time	AC Adapter: Approx. 120 min. DC Adapter: Approx. 120 min.									
LCD	Туре	Display: LTPS_TFT: 262,144 color Indicator Display: Organic EL: one									
	Size	Display: Approx. 3.2 inches Indicator Display: Approx. 0.8 inch	es								
	Resolution	Display: 409,920 pixels (480 × 854 Indicator Display: 3,360 pixels (96									
Image	Туре	Front Camera: CMOS	Rear Camera: CMOS								
sensor	Size	Front Camera: 1/10.0 inches	Rear Camera: 1/3.2 inches								
	Effective pixels	Front Camera: Approx. 0.33 mill. pixels	Rear Camera: Approx. 8.10 mill. pixels								
Camera	Maximum recorded pixels	Front Camera: Approx. 0.31 mill. pixels	Rear Camera: Approx. 8.00 mill. pixels								
	Digital zoom	Front Camera: Up to approx. 1.9×	Rear Camera: Up to approx. 9.0×								
Record	No. of photos that can be stored	1,000*2									
	Continuous shooting	5 - 20 ^{*3}									
	Photo file format	JPEG									
	Moving picture recording time	When saved to Phone: Approx. 21 When saved to 64 MB microSD ca	8 sec. ^{*4} ard: Approx. 107 min. ^{*4}								
	Moving picture file format	MP4									
Music	Continuous playback	i-motion	Approx. 250 min.*5								
playback	time	Chaku-Uta-Full [®]	Approx. 1,680 min.*5*6								
		SD-Audio	Approx. 1,680 min.*5*6								
		Windows Media Audio (WMA) file	Approx. 1,560 min.*6								
		Music&Video Channel	Approx. 1,680 min. (Audio)*6 Approx. 270 min. (Moving picture)*6								
Capacity	Chaku-Uta [®] /Chaku- Uta-Full [®]	Approx. 195 MB*7*8									

^{*1 :} Switch networks in "3G/GSM setting" (p.414).

^{*2 :} Select size = QCIF (176 x 144), Quality setting = Normal (File size = 10 KB)

^{*3:} Varies depending on the image size.

^{*4 :} Recording time for 1 item under the following conditions: <Phone>

Select size = QCIF (176 × 144), Quality setting = Normal, File size = 2MB, Movie type set = Normal <64 MB microSD card>

 $Select\ size = QCIF\ (176\times144),\ Quality\ setting = Normal,\ File\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Long\ time,\ Movie\ type\ set = Normal,\ Select\ size = Normal,\ Select\ s$

^{*5 :} File format = AAC

- *6: Background playback supported
- *7: Up to 10 MB capacity is separately prepared for the Secret folder.
- *8 : Shared with images, i-motion, PDF data, Screen memo, Deco-mail template, Decome-Anime template, Music&Video Channel, Kisekae Tool, Machi-chara and e-book/e-comic

Battery pack

Product name	Battery Pack N16
Battery type	Lithium-ion
Voltage	3.8 V DC
Current	780 mAh

Photo Size, Maximum Number of Photos, and Recording Time

The following table shows photo sizes, number of photos that can be stored, and moving picture recording time supported by N-09A:

■ Photo sizes and shooting mode

Image size	Im	age	Continuous	Moving
illiage size	Rear	Front	mode	picture
8M (2,448 × 3,264) or (3,264 × 2,448)	0	×	×	×
5M (1,920 × 2,560) or (2,560 × 1,920)	0	×	×	×
3M (1,536 × 2,048) or (2,048 × 1,536)	0	×	×	×
FullHD (1,080 × 1,920) or (1,920 × 1,080)	0	×	×	×
Panorama (4,096 × 480) or (2,738 × 480)	0	×	×	×
Screen (480 × 854) or (854 × 480)	0	×	×	×
VGA (640 × 480)	0	0	×	0
Wide (640 × 360)	×	×	×	0
Java (240 × 240) or (480 × 480)	0	0	○,*3	×
Screen (240 × 427) or (427 × 240)	×	0	0	×
QVGA V. (240 × 320)	O*1	O*1	O*1	×
QVGA (320 × 240)	○ ^{*2}	○ ^{*2}	○ ^{*2}	0
QCIF (176 × 144)	0	0	0	0

^{*1 :} Only available in vertical display.

^{*2 :} Only available in side mode.

^{*3 :} Only 240×240 can be taken.

Approximate number of photos that can be saved

Quality	8M	5M	зм	FullHD	Panorama*1	Panorama*2	Screen*3	VGA	Screen*4	QVGA V./ QVGA	QCIF
Destina	tion: N-0	9A (Phon	e)								
Super Fine	55	100	166	249	249	249	399	399			
Fine	66	124	199	307	307	307	998 ^{*5}	998 ^{*5}	1,000*5	1,000*5	
Normal	100	166	249	399	399	399	1,000 ^{*5}	1,000*5	1,000*5	1,000*5	1,000*5
Destina	tion: 64 N	/IB micros	SD								
Super Fine	16	30	50	75	75	75	118	118	542	542	948
Fine	20	37	60	92	92	92	291	291	948	948	1,897
Normal	30	50	75	118	118	118	542	542	1,265	1,265	3,795

- The above are numbers when the pre-installed data are deleted.
- The number of data that can be saved varies depending on the environment, etc.
- *1 : Up to 4,096 dots wide × 480 dots high (In vertical display)
- *2:2,738 dots wide × 480 dots high (In side mode)
- *3:480 dots wide × 854 dots high, 854 dots wide × 480 dots high
- *4:240 dots wide × 427 dots high, 427 dots wide × 240 dots high
- *5: The remaining number may be displayed as more than 1,000.

■ Approximate recording time

		Movie		able reco ngle mov	ing pictu		Availa	able total		g time					
Image	File size	type		Quality	setting		Quality setting								
size	1 110 0120	set	Long dur. mode	Normal	Fine mode	Super Fine mode	Fine dur. Nor		Fine mode	Super Fine mode					
Destina	ation: N-09A	(Phone)													
VGA	2MB	Normal	31 sec.	16 sec.	8 sec.	5 sec.	50 min.	26 min.	13 min.	487 sec.					
		Video	32 sec.	16 sec.	8 sec.	5 sec.	52 min.	26 min.	13 min.	487 sec.					
		Voice	_	21 min.	_	524 sec.	_	2,047 min.	_	851 min.					
Wide	2MB	Normal	41 sec.	21 sec.	10 sec.	6 sec.	66 min.	34 min.	16 min.	585 sec.					
(640 ×		Video	43 sec.	21 sec.	10 sec.	7 sec.	69 min.	34 min.	16 min.	11 min.					
360)		Voice	_	21 min.	_	524 sec.	_	2,047 min.	_	851 min.					
QVGA	2MB	Normal	81 sec.	34 sec.	16 sec.	8 sec.	131 min.	55 min.	26 min.	13 min.					
		Video	87 sec.	35 sec.	17 sec.	8 sec.	141 min.	56 min.	27 min.	13 min.					
		Voice	_	21 min.	_	524 sec.	_	2,047 min.	_	851 min.					
QCIF	500KB	Normal	104 sec.	53 sec.	19 sec.	15 sec.	173 min.*	88 min.*	31 min.*	25 min.*					
		Video	127 sec.	63 sec.	21 sec.	15 sec.	211 min.*	105 min.*	35 min.*	25 min.*					
		Voice	_	317 sec.	_	127 sec.	_	528 min.*	_	211 min.*					
	2MB	Normal	427 sec.	218 sec.	81 sec.	62 sec.	693 min.	354 min.	131 min.	100 min.					
		Video	523 sec.	261 sec.	87 sec.	65 sec.	849 min.	424 min.	141 min.	105 min.					
		Voice	_	21 min.	_	524 sec.	_	2,047 min.	_	851 min.					
	ation: 64 MB	microSD													
VGA	2MB	Normal	31 sec.	16 sec.	8 sec.	5 sec.	15 min.	476 sec.	238 sec.	149 sec.					
		Video	32 sec.	16 sec.	8 sec.	5 sec.	16 min.	476 sec.	238 sec.	149 sec.					
		Voice	-	21 min.	_	524 sec.	_	624 min.	_	260 min.					
	10MB	Normal	158 sec.	82 sec.	41 sec.	27 sec.	16 min.	488 sec.	244 sec.	161 sec.					
		Video	163 sec.	83 sec.	41 sec.	27 sec.	16 min.	493 sec.	244 sec.	161 sec.					
		Voice	-	108 min.	_	43 min.	_	642 min.	_	256 min.					
	Long dur.	Normal	15 min.	488 sec.	244 sec.	163 sec.	15 min.	488 sec.	244 sec.	163 sec.					
	mode	Video	16 min.	496 sec.	248 sec.	165 sec.	16 min.	496 sec.	248 sec.	165 sec.					
		Voice	_	120 min.	_	120 min.	_	665 min.	_	254 min.					

		Movie		able recoi ngle mov	ing pictu		Availa	able total		g time						
Image	File size	type		Quality	setting		Quality setting									
size	1 110 0120	set	Long dur. mode	Normal	Fine mode	Super Fine mode	Long dur. mode	Normal	Fine mode	Super Fine mode						
Wide	2MB	Normal	41 sec.	21 sec.	10 sec.	6 sec.	20 min.	10 min.	297 sec.	178 sec.						
(640 ×		Video	43 sec.	21 sec.	10 sec.	7 sec.	21 min.	10 min.	297 sec.	208 sec.						
360)		Voice	_	21 min.	-	524 sec.	_	624 min.	_	260 min.						
	10MB	Normal	209 sec.	106 sec.	51 sec.	34 sec.	21 min.	11 min.	303 sec.	202 sec.						
		Video	217 sec.	109 sec.	52 sec.	34 sec.	22 min.	11 min.	309 sec.	202 sec.						
		Voice	_	108 min.	-	43 min.	_	642 min.	_	256 min.						
	Long dur.	Normal	20 min.	10 min.	304 sec.	204 sec.	20 min.	10 min.	304 sec.	204 sec.						
	mode	Video	21 min.	10 min.	310 sec.	206 sec.	21 min.	10 min.	310 sec.	206 sec.						
		Voice	_	120 min.	-	120 min.	_	665 min.	_	254 min.						
QVGA	2MB	Normal	81 sec.	34 sec.	16 sec.	8 sec.	40 min.	17 min.	476 sec.	238 sec.						
		Video	87 sec.	35 sec.	17 sec.	8 sec.	43 min.	17 min.	505 sec.	238 sec.						
		Voice	_	21 min.	_	524 sec.	_	624 min.	_	260 min.						
	10MB	Normal	409 sec.	170 sec.	82 sec.	41 sec.	41 min.	17 min.	488 sec.	244 sec.						
		Video	436 sec.	175 sec.	84 sec.	42 sec.	43 min.	17 min.	499 sec.	250 sec.						
		Voice	_	108 min.	-	43 min.	_	642 min.	_	256 min.						
	Long dur.	Normal	40 min.	16 min.	488 sec.	244 sec.	40 min.	16 min.	488 sec.	244 sec.						
	mode	Video	43 min.	17 min.	496 sec.	248 sec.	43 min.	17 min.	496 sec.	248 sec.						
		Voice	_	120 min.	-	120 min.	_	665 min.	_	254 min.						
QCIF	500KB	Normal	104 sec.	53 sec.	19 sec.	15 sec.	206 min.	105 min.	38 min.	30 min.						
		Video	127 sec.	63 sec.	21 sec.	15 sec.	252 min.	125 min.	42 min.	30 min.						
		Voice	_	317 sec.	ı	127 sec.	_	628 min.	_	252 min.						
	2MB	Normal	427 sec.	218 sec.	81 sec.	62 sec.	212 min.	108 min.	40 min.	31 min.						
		Video	523 sec.	261 sec.	87 sec.	65 sec.	259 min.	129 min.	43 min.	32 min.						
		Voice	_	21 min.	ı	524 sec.	_	624 min.	_	260 min.						
	10MB	Normal	35 min.	18 min.	409 sec.	312 sec.	208 min.	107 min.	41 min.	31 min.						
		Video	43 min.	21 min.	436 sec.	327 sec.	256 min.	125 min.	43 min.	32 min.						
		Voice	_	108 min.	_	43 min.	_	642 min.	_	256 min.						
	Long dur.	Normal	120 min.	107 min.	40 min.	30 min.	210 min.	107 min.	40 min.	30 min.						
	mode	Video	120 min.	120 min.	43 min.	32 min.	254 min.	127 min.	43 min.	32 min.						
		Voice	_	120 min.	_	120 min.	_	665 min.	_	254 min.						

[•] The above are times when the pre-installed data are deleted.

[•] The time is the approximate time that can be recorded with the file size.

[•] The available recording time varies depending on the environment, etc.

^{*:} The maximum number of movies that can be stored is 100. Times differ between 500 KB and 2 MB.

Number of Saved/Registered/Protected Items in the FOMA Terminal

Ite	m	Store/Register	Protect
Phonebook		1,000 max.*1	_
1Seg	TV link	50	_
	Booking program	100	_
	Timer recording	100	_
Schedule	Schedule	2,500 ^{*2}	_
	Holiday	100	_
To Do list		100	_
Mail	Received mail	1,000 max.*3*4*5*6	1,000 max.*3
(SMS + i-mode)	Sent mail	400 max.*3*4*5	200 max.*3
	Draft mail	20 max.*3	_
Area Mail		100 max.	_
Deco-mail template/De	come-Anime template	1,000 max.*3*7	_
Message	MessageR	100 max.*3	50 max.*3
	MessageF	100 max.*3	50 max.*3
Bookmark		200 ^{*8}	_
Screen memo		200 max.*3	100 max.*3
i-αppli		200 max. ^{*3} (5 for mail-linked i-αppli)	_
ToruCa		200 max.*3	_
Image		1,000 max.*3*5	-
Moving picture/i-motion	1	100 max.*3*9	_
Image recorded with 19	Seg	100 max.*3	_
Chara-den		10 ^{*7}	_
Melody		400 max.*3	_
Kisekae Tool		100 max.*3*7	_
PDF data		400 max.*3*7	_
Music&Video Channel		30 max.*3	_
Music		100 max.*3	_
e-book/e-comic		400 max.*3	_
Machi-chara		100 max.*3*7	_
Key illumination		50 max.	_

^{*1 :} Up to 50 data can be stored in a FOMA card (UIM).

^{*2 :} Includes i-schedule.

^{*3:} Actual storable, registerable or protectable counts may be decreased depending on the data size.

^{*4:} Up to 20 more received or sent SMS can be additionally stored in a FOMA card (UIM).

^{*5:} Up to 100 data can be additionally stored in the secret folder.

^{*6 :} Includes "Welcome 🖥 ドコモ動画賞" (Welcome mail), "緊急速報「エリアメール」のご案内" (Guide to Early Warning "Area Mail") and "N-09Aのココがスゴイ 💇 (Welcome mail) in the "Inbox" folder.

^{*7:} Includes pre-installed data.

^{*8:} Up to 20 data can be additionally registered in the Secret folder.

^{*9:} Up to 10 data can be additionally stored in the Secret folder.

Specific Absorption Rate of Mobile Phone, etc.

Specific Absorption Rate (SAR) of Mobile Phone

This model phone N-09A meets the MIC's technical regulation for exposure to radio waves. The technical regulation established permitted levels of radio frequency energy, based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The regulation employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit is 2 watts/kilogram (W/kg)* averaged over ten grams of tissue. The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The value of the limit is equal to the international guidelines recommended by ICNIRP. All phone models should be confirmed to comply with the regulation, before they are available for sale to the public. The highest SAR value for this model phone N-09A is 0.541 W/kg. It was taken by the Telecom Engineering Center (TELEC), a Registered Certification Agency on the Radio Law. The test for SAR was conducted in accordance with the MIC testing procedure using standard operating positions with the phone transmitting at its highest permitted power level in all tested frequency bands. While there may be differences between the SAR levels of various phones and at various positions. they all meet the MIC's technical regulation. Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum value. For further information about SAR, please see the following websites:

World Health Organization (WHO): http://www.who.int/peh-emf/

ICNIRP: http://www.icnirp.de/

MIC: http://www.tele.soumu.go.jp/e/ele/body/index.htm TELEC: http://www.telec.or.jp/ENG/Index_e.htm

NTT DOCOMO: http://www.nttdocomo.co.jp/english/product/

NEC: http://www.n-keitai.com/lineup/sar/ (Japanese)

Association of Radio Industries and Businesses: http://www.arib-emf.org/index.html (Japanese)

Radio Frequency (RF) Signals

THIS MODEL PHONE MEETS THE U.S. GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone contains a radio transmitter and receiver. Your phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the output.

^{*:} International Commission on Non-Ionizing Radiation Protection

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the U.S. government-adopted requirement for safe exposure. The tests are performed on position and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 0.714 W/kg, and when worn on the body, is 0.644 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section at https://gullfoss2.fcc.gov/oetcf/eas/reports/GenericSearch.cfm after search on FCC ID A98-7N2S12A. For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

In the United States, the SAR limit for wireless mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network hand

FCC Regulations

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Declaration of Conformity

The product "N-09A" is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1(a), 3.1 (b) and 3.2. The Declaration of Conformity can be found on http://www.n-keitai.com/lineup/index.html (Japanese only).

This mobile phone complies with the EU requirements for exposure to radio waves.

Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR* limits** for exposure to radio-frequency (RF) energy, which SAR* value, when tested for compliance against the standard was 1.001 W/kg. While there may be differences between the SAR* levels of various phones and at various positions, they all meet*** the EU requirements for RF exposure.

- * The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.
- ** The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- *** Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

Export Administration Regulations

The product and accessories are subject to the Foreign Exchange and Foreign Trade Control Law and other applicable export/import laws and regulations of Japan. You shall obtain licenses, permissions, and consents required thereunder at your own expense and on your own responsibility. For more details, contact the Ministry of Economy, Trade and Industry (METI).

Intellectual Property Rights

Copyrights and Portrait rights

Except for personal use, subscribers are prohibited from copying, modifying or distributing content such as photos taken with the FOMA terminal or text/music/ software downloaded from Internet websites, whose copyrights belong to third parties, without the permission of the copyright holder.

Capturing or recording a stage performance, entertainment or exhibition may be prohibited even if it is for personal use.


Taking a photo of someone using the FOMA terminal without consent, or posting it on a website without consent, may infringe the right of portrait.

Trademarks

- "FOMA", "mova", "PushTalk", "PushTalkPlus", "i-mode", "i-αppli", "i-αppli DX", "i-motion", "Deco-mail", "Chaku-motion", "Chara-den", "ToruCa", "mopera", "mopera U", "WORLD CALL", "Dual Network", "FirstPass", "visualnet", "V-live", "i-Channel", "DCMX", "iD", "Security Scan", "i-shot", "i-motion mail", "i-area", "Short Mail", "WORLD WING", "Public mode", "DoPa", "sigmarion", "musea", "IMCS", "OFFICEED", "2in1", "Chokkan Game", "docomo SMART series", and "FOMA" logo, "i-mode" logo, "i-αppli" logo, "ToruCa" logo, "DCMX" logo, "iD" logo, and "HIGH-SPEED" logo are trademarks or registered trademarks of NTT DOCOMO, Inc.
- Free Dial service name and logo mark are registered trademarks of NTT Communications Corporation.
- "Catch Phone (Call waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- Napster is a registered trademark of Napster, LLC. and its affiliates in the US and/or other countries.
- McAfee[®] is registered trademarks or trademarks of McAfee, Inc. and/or its affiliates in the US and/or other countries.
- G-GUIDE, G-GUIDE MOBILE and their logos are registered trademarks in Japan of U.S. Gemstar-TV Guide International, Inc. and/or its affiliates.
- Powered by JBlend™ Copyright 2002-2009 Aplix Corporation. All rights reserved. JBlend and JBlend-related trademarks are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.
- is a registered trademark of FeliCa Networks,

1Blend

- QR code is a registered trademark of Denso Wave Inc.
- microSDHC logo is a trademark.

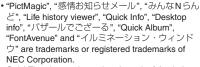

- QuickTime is a registered trademark of Apple Inc. in the US and other countries.
- Microsoft[®], Windows[®], Windows Media[®] and Windows Vista[®] are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Java and all Java-related trademarks and logos are trademarks or registered trademarks of US Sun Microsystems, Inc. in the United States and other countries.
- T9[®] is a trademark or registered trademark of Nuance Communications, Inc. and its affiliates in the United States and other countries.
- Powered By Mascot Capsule[®]/Micro3D Edition™ MASCOT CAPSULE[®] is a registered trademark of HI Corporation.
- X-FORGE[®] is a registered trademark of ACRODEA, Inc and BANDAI NETWORKS CO., LTD.
- PhotoSolid[®], MovieSolid[®], QuickPanorama™ and their logos are trademarks or registered trademarks of Morpho, Inc. in Japan and other countries.
- IrSimple™ and IrSS™/IrSimpleShot™ are trademarks of Infrared Data Association[®].
- Google and Google Map for Mobile are trademarks of Google Inc.
- "Chizu Talk" is a trademark of ZENRIN DataCom CO.,LTD.
- "CROSS YOU" is a trademark of Sony Corporation.
- Wi-Fi[®], Wi-Fi Alliance[®], Wi-Fi logo and Wi-Fi CERTIFIED logo are registered trademarks of Wi-Fi Alliance.
- Wi-Fi CERTIFIED™, WMM™, WPA™, WPA2™ and Wi-Fi Protected Setup™ are trademarks of Wi-Fi Alliance.
- All other company names and product names appearing in this manual are trademarks or registered trademarks of their respective holders.

Others

- This product is licensed complying with the MPEG-4 Visual Patent Portfolio License, and you are permitted to use personally and for nonprofit purposes in the following situations:
 - To record a movie based on the standard of MPEG-4 Visual (MPEG-4 Video)
 - To play MPEG-4 Video recorded by the consumer engaged in personal and nonprofit activities
 - To play MPEG-4 Video provided by the provider licensed by MPEG-LA

When you use it for other purposes, such as promotion, in-house information and profit activity, contact the U.S. corporation MPEG LA, LLC.

- FeliCa is a contactless IC card technology developed by Sony Corporation. FeliCa is a registered trademark of Sony Corporation.
- Contains Adobe[®] Flash[®] Lite[™] and Adobe Reader[®] LE technology by Adobe Systems Incorporated.
- Adobe Flash Lite Copyright© 2003-2008 Adobe Systems Incorporated. All rights reserved. Adobe Reader LE Copyright© 1993-2007 Adobe Systems Incorporated. All rights reserved. Adobe, Adobe Reader, Flash, and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- ENABLED · Content owners protect copyrighted intellectual properties by WMDRM (Windows Media digital rights management) technology. This product uses the WMDRM software to access WMDRM protected contents. If the WMDRM software is unable to protect contents, the content owners can request Microsoft to disable the WMDRM function of the software for playing or copying protected contents. Non-protected content is not affected by disabling the function. Please note that, if downloading the license to use protected content, Microsoft may include the revocation list in the license. Content owners may request upgrade of the WMDRM software when you access contents. If rejecting the upgrade, content cannot be accessed if it needs to be upgraded.
- This product contains NetFront Browser and NetFront Sync Client of ACCESS CO., LTD. Copyright© 2009 ACCESS CO., LTD. All rights reserved.
 - ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in the United States, Japan and other countries.
- This product contains a module developed by Independent JPEG Group.

- This product is equipped with NetFront Document Viewer by ACCESS CO., LTD. ACCESS as document viewer function.
- ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries.
- This product is equipped with IrFront by ACCESS CO., LTD.

©2008 ACCESS CO., LTD. ALL right reserved.

IrFro

ACCESS and IrFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries.

- Hyper Clear Voice is manufactured based on SRS VIP+ licensed by SRS Labs, Inc.

 SRS VIP+ and the mark are trademarks of mark are trademarks of the second - SRS, VIP+ and the () mark are trademarks of SRS Labs, Inc.
- TruMedia and Dialog Clarity technologies are manufactured based on the license from SRS Labs, Inc.

TruMedia, Dialog Clarity, SRS and the () mark are trademarks of SRS Labs, Inc.

• This product contains software licensed complying with GNU General Public License (GPL), GNU Lesser General Public License (LGPL), etc. For more details, see "readme.txt" in the "GPL · LGPL 等について" folder in the bundled CD-ROM. ("readme.txt" is only available in Japanese.)

 Copyright© Ericsson, IBM, Lotus, Matsushita Communication Industrial Co., Ltd., Motorola, Nokia, Openwave Systems, Inc., Palm Inc., Psion, Starfish Software, Symbian, Ltd. (2001-2009). All Rights Reserved.

Implementation of all or part of any DM Client Software may require licenses under third party intellectual property rights, including without limitation, patent rights. The Copyright Holders are not responsible and shall not be held responsible in any manner for identifying or failing to identify any or all such third party intellectual property rights. THIS DOCUMENT AND THE INFORMATION CONTAINED HEREIN ARE PROVIDED ON AN "AS IS" BASIS WITHOUT WARRANTY OF ANY KIND AND ERICSSON, IBM, LOTUS. MATSUSHITA COMMUNICATION INDUSTRIAL CO. LTD, MOTOROLA, NOKIA, OPENWAVE, PALM INC., PSION, STARFISH SOFTWARE, SYMBIAN AND ALL OTHER SYNCML SPONSORS DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY THAT THE USE OF THE INFORMATION HEREIN WILL NOT INFRINGE ANY RIGHTS OR ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ERICSSON, IBM, LOTUS, MATSUSHITA COMMUNICATION INDUSTRIAL CO., LTD, MOTOROLA, NOKIA, OPENWAVE, PALM INC., PSION, STARFISH SOFTWARE. SYMBIAN OR ANY OTHER SYNCML SPONSOR BE LIABLE TO ANY PARTY FOR ANY LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF USE OF DATA, INTERRUPTION OF BUSINESS, OR FOR DIRECT, INDIRECT, SPECIAL OR EXEMPLARY, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES OF ANY KIND IN CONNECTION WITH THIS DOCUMENT OR THE INFORMATION CONTAINED HEREIN, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGE.

- This product is equipped with NetFront DTV Profile Wireless Edition of ACCESS CO., LTD. as data broadcast BML browser. This product employs Media:/Media colon of ACCESS CO., LTD. as broadcast content start function.
 Copyright© 1996-2009 ACCESS CO., LTD. ACCESS, NetFront and Media:/Media colon are trademarks or registered trademarks of ACCESS CO., LTD. in Japan and other countries.
- Frame rate enhancement function uses
 FrameSolid™ technology by Morpho, Inc.
 FrameSolid™ is a trademark of Morpho, Inc.
- Bluetooth and its logo are registered trademarks of Bluetooth SIG, INC, and NTT DOCOMO is licensed to use them. Other trademarks and names belong to their respective owners.
- This product uses the font "FontAvenue" by NEC Corporation.

- This product employs GestureTek technologies.
 Copyright ©2006-2009, GestureTek, Inc. All Rights Reserved.
- This product is antibacterial. Antibacterial parts: External parts of phone (excluding the display, keys, buttons and terminals) Inorganic antibacterial agent/Coating/ JP0122112A0003N The SIAA mark indicates that the

JP0122112A0003N
The SIAA mark indicates that the quality control and information disclosure for this product follows the guideline of the Society of Industrial Technology for Antimicrobial Articles (SIAA), based on ISO22196 evaluations.

- ©2009 ZENRIN DataCom CO., LTD.
 ©2009 ZENRIN CO., LTD.
- @2008 Acrodea, Inc.
- · ©catalyst mobile
- ©ATR-Trek Co.,Ltd.
- ©Cheburashka Project
- ©2009 Google Map data ©2009 ZENRIN
- ©Index Next Inc.
- ©LiLy
- ©econeco
- ©駅探
- ©MTI Ltd.
- ©Q ENTERTAINMENT
- ©2004 BANDAI/NBGI

Description of Windows

- In this manual, Operating Systems (Japanese versions) are described as follows:
 - Windows Vista stands for Windows Vista[®] (Home Basic, Home Premium, Business, Enterprise, Ultimate).
 - Windows XP stands for Microsoft[®] Windows[®] XP Professional operating system or Microsoft[®] Windows[®] XP Home Edition operating system.
 - Windows 2000 stands for Microsoft[®] Windows[®] 2000 Professional operating system.

Index/Quick Manual

Index	490
Quick Manual	504

Index search

- This index has the function as an alphabetical list of contents. Not only can you find the words in this manual, but you can also the words that summarizes content of description. Try to search for another keyword if the words that wants to know is not collected.
 - <Example 1: To set the keypad lock to "ON">

Keypad lock									134
Keypad sound									101
Keyword search.									188

<Example 2: When you cannot answer a received call immediately>

On hold																	68
One-tou	ch	1	m	lt	۷	vi	n									1	191



<Example 3: When the keyword is described by another term>



"Function menu" index comes after "Alphabetical/Numerical/Kana" index. When you search the item
of function menu (p.39), use this index.

Alphabetical/Numerical/Kana

A
A mode (2in1)
AC adapter45
Accept dialup devices378
Accessories/Options
Activate i-αppli from data broadcast278
Activate i-αppli from IC card278
Activate i-αppli from mail278
Activate i-αppli from site278
Activate i-αppli from ToruCa278
Activate i-αppli via Bar code reader278
Activate i- α ppli via infrared data exchange278
Add address to phonebook 159
Add Bookmark
Add phone number/mail address187
Additional service (Network service)408
Address → Mail address
Adjust earpiece volume 67

Adjust volume	Area Mail setting175
Earpiece volume67	Area Mail storage capacity 478
GPS function (notification tone) 101	Arrival Call Act 401
i- α ppli sound 269	AT commands
Ring tone 67	Attach file
Adjust zoom	Download selectively 160
After returning to Japan 413	Save
After-sales service463	Send
Alarm notification	Auto answer setting 374
Priority	Auto continuous mode 224
Quality	Auto Deco-mail 150
Reconnect 63	Auto focus
Alarm notification action 363, 370	Auto manner mode 104
Alarm setting	Auto power ON/OFF 357
Alarm (pre-installed) 98	Auto receive mail 155
Alarm (timer)	Auto redial as voice 73
Animation (create) 309	Auto reset total cost 370
Animation (play) 310	Auto save set (Moving picture) 227
Answer calls (Earphone/Microphone with Switch) 373	Auto save set (Still image) 222
Answer setting66	Auto timer
Any key answer 66	Auto voice memo
Area Mail174	Auto-change Screen 30, 114

Auto-display setting 199	Bookmark	Change certificate host 203
Auto-sort (Mail)	Copy from microSD to Phone 329	Change IC owner 287
Auto-start set (i-αppli) 276	Copy from Phone to microSD329	Change i-mode password 181
Auto-start time (i-αppli) 276	Registration capacity 478	Change main menu
Auto-update (Software Update) 467	Save attached file159	Change menu icon 110
AV Phone To function 197	Send attached file152	Change mode (T9) 393
Available services overseas 410	View microSD data327	Change password (i-mode) 181
_	Brightness	Change rcv. type (mail) 147
В	Camera220	Change ringback tone (for caller) 101
B mode (2in1) 403	My picture	Change security code 125
Background play 263	Videophone 54	Change size (Edit image) 311
Backlight 109	Brightness (Edit image) 311	Change skin
Backup	Browse history (Life history viewer)356	Change windows (Divided text entry screen) 383
Delete backup data 332		Channel list (i-Channel) 209
Restore	C	Channel setting (1Seg) 239
View backup data 332	CA certificate	Chapter list
Bar code reader 280, 230	Cable connection (USB) 342	Character
Bar incoming when roam (Int.) 415	Cache	Change conversion range 385
Basic channel (i-Channel) 208	Calculator	CHG input method386
Basic operations	Calendar (Stand-by display) 107	Common phrases 388
Battery	Call acceptation (Restrictions)137	Convert
Attach/Remove battery pack 43	Call Forwarding 398	Copy
Battery pack life 44	Call Forwarding (Restrictions) 137	Cut390
Charge 44	Call Forwarding(Int.) 416	Delete
Check battery level 47	Call rejection (Restrictions) 137	Face Mark
Low-voltage alarm 47	Call setting w/o ID 138	Font type/Thickness/Size 115
Save battery (Power saver mode) 109	Call Waiting	Insert/Overwrite mode switch 387
Usage time 44	Caller ID Notification 50	Kuten code 390
Birthday icon	Add 186/184 prefix 61	Line feed 386, 387
Birthday reminder 87	Basic setting50	Paste
Blank (Space)	Set for each call 61	Pictograph
Block noise (Noise reduction) 64	Caller ID Request 400	PI · SB continuous entry 386
Bluetooth	Caller ID req.(Int.) 416	Quote data
Accept registered 378	Calling display	Single-byte/Double-byte 387
Add	Camera	Space (Blank)
Communication 341	Activate216	Switch between upper and lower
Connect	Guide to the shooting screen218	cases
Flow of usage 376	Key operation	Symbols
Notes on handling 375	Notes on use	Character assignment 439
PC Connection 378	Shooting settings	Character assignment in 5-touch 439
Play moving picture sounds/music 379	When using a microSD card217	Character input
Play 1Seg sounds 379	Cancel operation	Auto cursor
Service	Capturing may be interrupted 217	Clear learned391
Setting	CD-ROM for N-09A 421	Download dictionary setting 391
Stop function	Certificate setting201	Time-linked prediction 384
Talk	Chaku-moji60	T9 input
Bluetooth communication 341	Chaku-Uta-Full [®]	Voice input393
Receive	Acquire	2-touch
Send	Move between Phone and microSD 330	5-touch
Booking program (Gガイド番組表リ	Play255	Character input set 383
モコン)272	Save253	Character size
Booking program (1Seg) 245	Chance capture	CHG input size

Font size setting 198	member	Storage capacity 478
Phonebook (Big font/Standard font)91	Save temporarily 153	Decome-Anime
Ticker size setting (i-Channel)209	Send attached file 152	Compose/Save (DecomeAnime
Character stamp (Edit image)312	Time-linked prediction 384	Template) 15
Chara-den	Voice input	Compose/Send 150
Chara-den	Composite image (Edit image) 309	Decoration
Display	Composite image (4 images) 309	Delete
Download	Confirmation tone	Booking list (Watching programs/
Operation	Charge	Timer recording) 246
Shoot	Key101	Bookmark 19
Storage capacity478	Missed call/New mail 70	Channel list
Videophone	Continuous mode	Character
Chara-den setting	Continuous standby time 44	Chara-den
Chara-den settings priority 87	Continuous talk time	Delete all bookmarks 190
Charge	Copy	Delete all mail (read/received/sent) 166
Charge sound	Character390	Delete all image (own data) 335
ch-button setting	microSD to Phone	Delete all (own data)
Check address list	Phone to microSD	
		Desktop icon
Check alarm content	To another folder in the microSD 330	Document
Check call duration/charges 369	Copy to microSD329	e-book/e-comic
Check holidays	Copy to Phone	i-αppli
Check IC owner	Images, etc	Image
Check i-motion details	Phonebook, etc. (PIM data) 329	Kisekae Tool
Check memory	Copy to the FOMA terminal	Machi-chara
Video list315	Images, etc	Mail (detail screen) 170
Check new messages	Phonebook, etc. (PIM data) 329	Mail (list screen) 169
Mail/Message	Copyright482	Melody32
Setting	Correct backlight (Edit image) 311	Message 174
Check new SMS177	Country codes 410	Moving picture/i-motion 313
Check security error history (i-αppli)270	Cut (text)	Phonebook (detail screen) 92
Check settings 199	_	Phonebook (list screen) 9
Restrictions138	D	PushTalk phonebook83
Ring tone/Image	Data box	Received calls 59
CHG camera-mode	Folder structure 302	Redial/Dialed calls59
CHG input method	Folder (create/delete/edit) 335	Screen Memo
Choku-Den94	Data Broadcast 243	ToruCa
Clear learned (text entry)391	Data Communications418	Track
Clock Alarm Tone set102	Data link software → DOCOMO keitai datalink	Video
Clock display	Data security service 140	Delete receiver
Clock display setting (Indicator display)111	Data transfer (OBEX™ communications) 418	Description (Operation procedure) 38
Clock display (Indicator display)29	Date setting49	Desktop holder 46
Clock size49	DC adapter	Desktop icon
Closed illumination112	DCMXクレジットアプリ (DCMX	Desktop info
CLR (CLR) key	credit appli)	Desktop theme
CODE128	Deco-mail	Dial lock
Common phrases	compose	Dialed calls
Communication mode (USB mode)333	compose (auto)	Dictionary
Compose mail	Compose (Deco-mail template) 151	Dictionary setting (Download dictionary) 39
Change rcv. type	Deco-mail pictogram	Display
Delete receiver	Deco-mail pictogram	Backlight
Delete receiver 147	'	-
	Download195	Color pattern/Background 109

Enter mail address from Blog/ Mail

No. of Deco-mail 152

Font	Download fee-based content 193	Edit (Mail) 169
Privacy angle 108	Download i-melody 195	Emotion-expressing mail156
View 24	Download remaining data	Emotion/Keyword 173
Display design 109	Chaku-Uta-Full [®] 254	English 48
Display main menu	i-motion	English Guidance 400
Display operator name (Int.) 415	Kisekae Tool321	Enter mail address from the address list 146
Display setting 73, 106	PDF data	Enter mail address from the phonebook 146
Display taken photo 304	Download type movie206	Enter numbers
Display when the power is turned on 106	DPOF setting334	Enter security code 37
Display while checking messages 106	Draft154	Enter text using time-linked prediction 384
Display while dialing/receiving calls 106	Driving mode → Public mode	Enter URL
Display while dialing/receiving	Dual mode (2in1)403	Enter/Add address 146
videophone calls 106	Dual Network400	Error message list456
Display while receiving a call 65		Export administration regulations 481
Disp. call/receive No 108	E	
Disp. phonebook image 108	Early warning "Area Mail" 174	F
Disp. SMS report 177	Earphone/Microphone with switch 372	Face authentication
Disp. Software info (i-αppli) 266	Earthquake early warning 175	Release IC card lock 286
DOCOMO CA Certificate 185	Easy search4	Face Mark
DOCOMO keitai datalink 421	e-book/e-comic	Face mark reading list 445
DOCOMO Videophone Software 76	ECO mode109	Failure Diagnosis (i-mode) 465
Document viewer	Edit	FB Home setting 198
Display	Draft mail	FB permission disp 198
Document list 345	Image	FeliCa
Operation	Moving picture/i-motion 314	FeliCa mark (mark)
Scroll	Phonebook	IC card authentication 134
Search text	Edit file name	iC communication
Double-byte	Image	Osaifu-Keitai 285
Download	Melody	Receive ToruCa288
Auto Deco-mail picture 195	Moving picture/i-motion 313	File restrictions
Chaku-Uta-Full®	Edit image	File size setting
Chara-den	Edit reading (T9)	Filter function
Deco-mail picture 195	Edit title	Mail
Deco-mail template 195	Bar code reader	Message
Decome-Anime template 195	Bookmark190	To Do list
Download dictionary 195	Channel list	ToruCa
e-book/e-comic 195	Chara-den	FirstPass setting
Fee-based content 193	Deco-mail template	Flash
i-αppli	Decome-Anime template 152	Flash movie
Image	Desktop icon	Flash® Video 196
i-melody	Document344	Play
i-motion	Download dictionary391	Flashing of recording indicator 217
Kisekae Tool 195	e-book/e-comic349	Folder lock
Machi-chara 195	Image	Folder (create/delete/edit)
Movie	Kisekae Tool322	Bookmark190
PDF data		
	Machi-chara	Data box
ToruCa	Melody	Mail
User Certificate	microSD328	microSD
Download Auto Deco-mail picture 195	Moving picture/i-motion 313	FOMA card (UIM)
Download Deco-mail picture 195	Original animation	Add to phonebook
Download dictionary 195	Screen Memo192	Insert/Remove
Download dictionary setting 391	Video	Manage phonebook336

Manage SMS	G	Auto-start set 276
Security codes	9	Auto-start time
Security function41	Go to location	Check security error history 270
Serial number information181	Googleモバイル (Google Mobile)276	Delete 269
Setting for replacing	GPRS network	Download 266
Type	GPS292	Installed i-αppli 270
FOMA voice call	i-αppli294	Manufacturer logo 266
Call	Illumination	Storage capacity 478
Receive	Location history	Upgrade 279
FOMA通信環境確認アプリ (FOMA	Location notification	i-αppli call 277
Communications Environment	Location request	Download setting278
Confirmation Appli)	Map	History
Font	Position location	i-αppli info
Font size	Position settings293	i-αppli 266
Font size (Mail)	Tone/Vibrator	Mail-linked i-αppli 266
Format (microSD)	地図アプリ (Map Application) 294	Start/Exit 267
Forward (Mail)	GSM network	i-αppli standby screen
Forwarding image	Guide to the screen	End stand-by info 279
Frame187	Life history viewer	Release 279
Frame (Edit image)	Music player screen	Setting 278
Framed photography	PDF data screen	IC card authentic 134
Full Browser	PushTalk talking screen 79	IC card lock setting 286
Cookie	Shooting screen	IC card notice set 286
Double-click function 186	ToruCa display screen 288	iC communication
Drag mode	Videophone	FeliCa mark (mark) 340
FB Home setting	1Seg screen	Receive
Frame	Guide to the shooting screen (camera) 218 Gガイド番組表リモコン (G-GUIDE	Send
Key operation	EPG Remote Control) 243, 271	IC lock (power-off) 286
Multi window187	EFG Remote Control) 243, 271	iC Transfer Service 284
Play Flash movies196	н	i-Channel 208
Referer	Handa frag quitab (Videophone) 72	Reset
Scroll186	Hands-free switch (Videophone) 73 Handsfree (switch during a call) 57	Setting 209
Set up	Header/Signature	Icon description
SSL/TLS187	Headset mic. setting	Camera shooting screen 218
Switch display modes 183	Headset sw to dial	Desktop icon (paste) 116
Switch from i-mode 182	Headset usage setting103	Desktop icon (provide information) 116
Upload images/moving pictures197	High-speed infrared transmission	Display24
URL History	(IrSS™)340	Document viewer 345
View page	Hold tone setting	Emotion-expressing mail 156
View the screen	Holding	Full Browser
Zoom	Holding (incoming, current call)68	i-αppli
Function display29	Home URL	Image (site)
Function menu	Host selection (i-mode) 200	Image/Moving picture 305
Function priority	How to use this manual	i-Widget
Alarm notification	How to view the indicator display 28	Kisekae Tool
Chara-den setting87	Hyper Clear Voice 63	Mail detail screen 165
Illumination	.,,	Mail folder list screen 164
Nuisance Call Blocking 144	1	Mail list screen
Ring tone/Calling display	i-αppli	Manga&Book
Stand-by display	Activate (site or mail)	Melody
Vibrator100	Adjust volume	Message screen
	.,==::==:==	Music&Video Channel251

Overseas Use 411	Image display in the picture list 37	Initial setting 48
PDF data 344	Image display mode	Initialization → Reset
Received calls/Missed calls 58	Image priority99	Initialize
Redial/Dialed calls 58	iMenu/Search180	Insert mode
Ring tone/Image 94	i-mode Failure Diagnosis 465	Intellectual property rights 482
Shooting menu 219	i-mode host	International call access code 412
Text entry (edit) 382	i-mode info	International calls 56
Toolbar on the PDF data screen 346	Image display 185	International Prefix number 412
Track	iMenu display	International Prefix number for the
TV link	i-mode	universal number 412
Vibrator 100	Jump to previous/next page 186	International roaming 410
Video player	Operations to view sites 186	Internet connection 189
Videophone screen 53	Scroll function	Internet website189
1Seg 240	Start/End	Int'l dial assistance 57
con operation	View SSL/TLS page 185	IrSS™ (High-speed infrared
Desktop icon	i-mode mail	communication)340
Select icons	i-mode menu	ISP connection
-concier	i-mode password	i-Widget
Data Security Center 142	i-mode settings	Download
Display	i-motion	Setting
Information display 212	Copy from microSD to Phone330	Start281
Pop up message 211	Copy from Phone to microSD329	i Wウォッチ (iW Watch) 276
Receive information 211	Delete313	i アバターメーカー (i-avatar maker)270
		,
Setting	Download	i アプリバンキング (i-αppli Banking) 274
cons setting	Edit314	J
D appli	Folder (create/delete/edit) 335	
Illumination	Move313	JAN code
Illumination in talk	Move between Phone and microSD 330	К
Illumination priority	Movie auto play set	
Illumination setting	Moving picture playing software (PC) 449	Kanji conversion
Closed illumination	Playback (microSD) 327	Key backlight114
Indicator display 111	Playback (Phone)	Key illumination
• •		
mage	Playlist	Check
mage Copy from microSD to Phone 330	Save attached file159	Setting
mage Copy from microSD to Phone 330 Copy from Phone to microSD 329	Save attached file	
mage Copy from microSD to Phone 330 Copy from Phone to microSD 329 Delete	Save attached file	Setting
mage 330 Copy from microSD to Phone 329 Copy from Phone to microSD 329 Delete 307 Display (microSD) 327	Save attached file. 159 Save (from site) 207 Send attached file 152 Storage capacity 478	Setting 113 Storage capacity 478 Key operation 478 Hold down 24
mage 330 Copy from microSD to Phone 329 Copy from Phone to microSD 329 Delete 307 Display (microSD) 327 Display (Phone) 304	Save attached file	Setting 113 Storage capacity 478 Key operation Hold down 24 Key names and functions 22
mage 330 Copy from microSD to Phone 329 Copy from Phone to microSD 329 Delete 307 Display (microSD) 327 Display (Phone) 304 Download 194	Save attached file. 159 Save (from site) 207 Send attached file 152 Storage capacity 478	Setting 113 Storage capacity 478 Key operation 478 Hold down 24
mage 330 Copy from microSD to Phone 329 Copy from Phone to microSD 329 Delete 307 Display (microSD) 327 Display (Phone) 304	Save attached file. 159 Save (from site) 207 Send attached file 152 Storage capacity 478 Trim (Edit i-motion) 315	Setting 113 Storage capacity 478 Key operation Hold down 24 Key names and functions 22
mage 330 Copy from microSD to Phone 329 Copy from Phone to microSD 329 Delete 307 Display (microSD) 327 Display (Phone) 304 Download 194	Save attached file. 159 Save (from site) 207 Send attached file 152 Storage capacity 478 Trim (Edit i-motion) 315 Upload 197	Setting 113 Storage capacity 478 Key operation 24 Hold down 24 Key names and functions 22 Shortcut key function 32
Copy from microSD to Phone . 330 Copy from Phone to microSD . 329 Delete . 307 Display (microSD) . 327 Display (Phone) . 304 Download . 194 Edit . 310	Save attached file. 159 Save (from site) 207 Send attached file 152 Storage capacity 478 Trim (Edit i-motion) 315 Upload 197 Inbox 163	Setting 113 Storage capacity 478 Key operation 24 Hold down 24 Key names and functions 22 Shortcut key function 32 Use function keys 29
mage 330 Copy from microSD to Phone 329 Copy from Phone to microSD 329 Delete 307 Display (microSD) 327 Display (Phone) 304 Download 194 Edit 310 Move 307	Save attached file. 159 Save (from site) 207 Send attached file 152 Storage capacity 478 Trim (Edit i-motion) 315 Upload 197 Inbox 163 In-car hands-free .64	Setting 113 Storage capacity 478 Key operation 418 Hold down 24 Key names and functions 22 Shortcut key function 32 Use function keys 29 Key (Character assignment) 439
Copy from microSD to Phone . 330 Copy from Phone to microSD . 329 Delete . 307 Display (microSD) . 327 Display (Phone) . 304 Download . 194 Edit . 310 Move . 307 Move between Phone and microSD . 330	Save attached file 159 Save (from site) 207 Send attached file 152 Storage capacity 478 Trim (Edit i-motion) 315 Upload 197 Inbox 163 In-car hands-free 64 Incoming illumination (Indicator display) 111	Setting 113 Storage capacity 478 Key operation 24 Hold down 24 Key names and functions 22 Shortcut key function 32 Use function keys 29 Key (Character assignment) 439 Keypad light setting 109
Copy from microSD to Phone . 330 Copy from Phone to microSD . 329 Delete . 307 Display (microSD) . 327 Display (Phone) . 304 Download . 194 Edit . 310 Move . 307 Move between Phone and microSD . 330 Save attached file . 159	Save attached file 159 Save (from site) 207 Send attached file 152 Storage capacity 478 Trim (Edit i-motion) 315 Upload 197 Inbox 163 In-car hands-free 64 Incoming illumination (Indicator display) 111 Indicator display (setting) 111	Setting 113 Storage capacity 478 Key operation 24 Hold down 24 Key names and functions 22 Shortcut key function 32 Use function keys 29 Key (Character assignment) 439 Keypad light setting 109 Keypad lock 134
Copy from microSD to Phone 330 Copy from Phone to microSD 329 Delete 307 Display (microSD) 327 Display (Phone) 304 Download 194 Edit 310 Move 307 Move between Phone and microSD 330 Save attached file 159 Save (site/message) 194	Save attached file 159 Save (from site) 207 Send attached file 152 Storage capacity 478 Trim (Edit i-motion) 315 Upload 197 Inbox 163 In-car hands-free 64 Incoming illumination (Indicator display) 111 Indicator display (setting) 111 Info notice setting .70	Setting 113 Storage capacity 478 Key operation 24 Hold down 24 Key names and functions 22 Shortcut key function 32 Use function keys 29 Key (Character assignment) 439 Keypad light setting 109 Keypad lock 134 Keypad sound 101
mage 330 Copy from microSD to Phone 329 Delete 307 Display (microSD) 327 Display (Phone) 304 Download 194 Edit 310 Move 307 Move between Phone and microSD 330 Save attached file 159 Save (site/message) 194 Send attached file 152	Save attached file 159 Save (from site) 207 Send attached file 152 Storage capacity 478 Trim (Edit i-motion) 315 Upload 197 Inbox 163 In-car hands-free 64 Incoming illumination (indicator display) 111 Indicator display (setting) 111 Info notice setting 70 Information display 212	Setting 113 Storage capacity 478 Key operation 110d down 24 Key names and functions 22 Shortcut key function 32 Use function keys 29 Key (Character assignment) 439 Keypad light setting 109 Keypad lock 134 Keypad sound 101 Keyword search 188
mage 330 Copy from microSD to Phone 329 Delete 307 Display (microSD) 327 Display (Phone) 304 Download 194 Edit 310 Move 307 Move between Phone and microSD 330 Save attached file 159 Save (site/message) 194 Send attached file 152 Size 475	Save attached file 159 Save (from site) 207 Send attached file 152 Storage capacity 478 Trim (Edit i-motion) 315 Upload 197 Inbox 163 In-car hands-free 64 Incoming illumination (Indicator display) 111 Indicator display (setting) 111 Info notice setting 70 Infrared communication 339 High-speed infrared transmission	Setting 113 Storage capacity 478 Key operation 24 Hold down 24 Key names and functions 22 Shortcut key function 32 Use function keys 29 Key (Character assignment) 439 Keypad light setting 109 Keypad sound 101 Keyword search 188 Kisekae Tool
mage 330 Copy from microSD to Phone 329 Copy from Phone to microSD 329 Delete 307 Display (microSD) 327 Display (Phone) 304 Download 194 Edit 310 Move 307 Move between Phone and microSD 330 Save attached file 159 Save (site/message) 194 Send attached file 152 Size 475 Storable number 476	Save attached file. 159 Save (from site) 207 Send attached file 152 Storage capacity 478 Trim (Edit i-motion) 315 Upload 197 Inbox 163 In-car hands-free .64 Incoming illumination (Indicator display) 111 Indicator display (setting) 111 Info notice setting .70 Information display 212 Infrared communication 339	Setting 113 Storage capacity 478 Key operation 24 Hold down 24 Key names and functions 22 Shortcut key function 32 Use function keys 29 Key (Character assignment) 439 Keypad light setting 109 Keypad lock 134 Keypad sound 101 Keyword search 188 Kisekae Tool 195 Download 195 Enlarged menu 121
mage 330 Copy from microSD to Phone 329 Copy from Phone to microSD 329 Delete 307 Display (microSD) 327 Display (Phone) 304 Download 194 Edit 310 Move 307 Move between Phone and microSD 330 Save attached file 159 Save (site/message) 194 Send attached file 152 Size 475 Storable number 476 Storage capacity 478	Save attached file 159 Save (from site) 207 Send attached file 152 Storage capacity 478 Trim (Edit i-motion) 315 Upload 197 Inbox 163 In-car hands-free 64 Incoming illumination (Indicator display) 111 Indicator display (setting) 111 Info notice setting 70 Information display 212 Infrared communication 339 High-speed infrared transmission (IrSS™) (IrSS™) 340	Setting 113 Storage capacity 478 Key operation 24 Hold down 24 Key names and functions 22 Shortcut key function 32 Use function keys 29 Key (Character assignment) 439 Keypad light setting 109 Keypad lock 134 Keypad sound 101 Keyword search 188 Kisekae Tool Download 195 Enlarged menu 121 Manage 321
Copy from microSD to Phone 330 Copy from Phone to microSD 329 Delete 307 Display (microSD) 327 Display (Phone) 304 Download 194 Edit 310 Move 307 Move between Phone and microSD 330 Save attached file 159 Save (site/message) 194 Send attached file 152 Size 475 Storable number 476 Storage capacity 478 Switch list display mode 305 Titles and file names 306	Save attached file 159 Save (from site) 207 Send attached file 152 Storage capacity 478 Trim (Edit i-motion) 315 Upload 197 Inbox 163 In-car hands-free 64 Incoming illumination (Indicator display) 111 Inflocator display (setting) 111 Info notice setting 70 Information display 212 Infrared communication 339 High-speed infrared transmission (IrSSTM) 340 Infrared data port 339 Receive 340	Setting 113 Storage capacity 478 Key operation 24 Hold down 24 Key names and functions 22 Shortcut key function 32 Use function keys 29 Key (Character assignment) 439 Keypad light setting 109 Keypad lock 134 Keypad sound 101 Keyword search 188 Kisekae Tool 188 Download 195 Enlarged menu 121 Manage 321 Setting 121
Copy from microSD to Phone 330 Copy from Phone to microSD 329 Delete 307 Display (microSD) 327 Display (Phone) 304 Download 194 Edit 310 Move 307 Move between Phone and microSD 330 Save attached file 159 Save (site/message) 194 Send attached file 152 Size 475 Storable number 476 Storage capacity 478 Switch list display mode 305	Save attached file 159 Save (from site) 207 Send attached file 152 Storage capacity 478 Trim (Edit i-motion) 315 Upload 197 Inbox 163 In-car hands-free 64 Incoming illumination (Indicator display) 111 Indicator display (setting) 111 Information display 212 Infrared communication 339 High-speed infrared transmission (IrSS™) 340 Infrared data port 339	Setting 113 Storage capacity 478 Key operation 24 Hold down 24 Key names and functions 22 Shortcut key function 32 Use function keys 29 Key (Character assignment) 439 Keypad light setting 109 Keypad lock 134 Keypad sound 101 Keyword search 188 Kisekae Tool Download 195 Enlarged menu 121 Manage 321

Kuten Code List	Priority	Manner mode set 10
L	Ring time	Manner mode when earphones are
_	Select98	connected
Life history viewer	Mail Settings	Manual continuous mode 22
Line feed	Auto-sort	Map
Location info	Check settings	Mark a checkbox4
Lock function	Display while sending/receiving mail 106	Marker stamp (Edit image) 31
Call setting w/o ID	Mail box lock/Folder lock 137	Media To function 19
Dial lock/Omakase Lock 125	Mail list disp	Melody
Face authentication	Mail Setting	Copy from microSD to Phone 32
IC card authentic	Mail/Msg. ring time 102	Copy from Phone to microSD 32
IC card lock setting286	Read out setting	Delete
Keypad lock	Receive option setting 171	Download
Mail box lock/Folder lock 137	Reset Mail Setting 171	Folder (create/delete/edit) 33
Original lock	Set check new messages 172	Move
Reject unknown	Mail To function 197	Operations during playback 32
Restrictions	Mail with file attached 152	Playback (microSD) 32
Ring time (sec.)	Mail-linked i-αppli 266	Playback (Phone) 31
Secret folder	Main components 19	Playlist32
Secret (data only) mode 127	Main menu change 110	Pre-installed data 9
Self mode	Make phone calls52	Save attached file 15
Side key guard	Chaku-moji60	Save (from site) 19
Lower case	Choku-Den95	Send attached file 15
	Dial input	Storage capacity 478
М	Earphone/Microphone with switch 373	Titles and file names 32
Machi-chara	From site/mail 197	Melody Call setting 10
Display	International calls56	Melody linkage (Vibrator) 10
Download	Overseas Use413	Memory card → microSD
Setting	Phonebook89	Memory info
Storage capacity478	Received calls 58	Chara-den list 31
Machi-chara setting	Redial/Dialed calls 58	Document list 34
Mail address	Two-touch dialing 96	Image list
Add (Recipient/Sender) 159	Manage mail	Machi-chara list 31
Search (Phonebook) 90	Add Blog/Mail members 154	Manga&Book list 34
Mail box lock	Copy from microSD to Phone 329	Melody list
Mail history box	Copy from Phone to microSD 329	Moving picture list 31
Mail info	Delete169	Music list 25
Change list screen display mode163	Delete attached file 170	Package list
Change mail font size 163	Display (Mail box) 163	Photo, Continuous mode 22
Compose/Send146	Folder (create/delete/edit) 166	Take moving pictures 22
Detail screen	Move (between folders) 168, 169	Menu display set 11
Display mail menu146	No. of messages 166, 169	Menu function list 42
Folder list screen164	Protect ON/OFF169	Menu numbers for function display 3-
List screen	Save attached file159	Menu operation description 3
Mail146	Search	Message
Mail display (Mail box) 163	Storage capacity 478	Auto receive mail
Read out message 160	View microSD data327	Delete
View new mail	View (unread mail) 156	No. of messages 17
When you receive	Manga&Book348	Protect ON/OFF 174
Mail list disp	Operation	Set check new messages 17
Mail ring tone	View the list	Storage capacity 47
Adjust volume 67	Manner mode 103	View (read/unread message) 17

Message display (Mail) 171	Image	My Profile
Message info	Moving picture/i-motion 330	Add
Icon description 173	Movie	Check your own phone number. 50
When you receive 173	Delete313	Display
Message list display 199	Download	Quote data
Message ring tone	Movie auto play set 208	Send attached file 152
Adjust volume 67	Operations during playback 261	
Ring time 102	Play312	N
Select	Save (from site) 207	Network re-search (Int.) 414
microSD	Movie auto play set208	Network security code 124
Backup	Movie mode (camera) 226	Network services 395
Data that can be copied 328	Moving picture (camera)	Additional service 408
Folder structure 324	Copy from microSD to Phone 330	Call Forwarding 398
Folder (create/delete/edit) 335	Copy from Phone to microSD329	Call Forwarding(Int.) 416
Format 333	Delete313	Call Waiting 397
Insert/Remove 324	Edit314	Caller ID Request 400
Notes on handling 323	Folder (create/delete/edit) 335	Caller ID req.(Int.) 416
Restore	Move313	Dual Network 400
Storage capacity 325	Move between Phone and microSD 330	English Guidance 400
View data 327	Moving picture playing software (PC) 449	Multi Number 402
microSD card → microSD	Playback (microSD) 327	Nuisance Call Blk 399
microSD data (i-αppli) 280	Playback (Phone)312	OFFICEED 407
microSD manager 327	Playlist	Remote access(Int.) 416
microSD mode	Recording time 476	Remote Control 402
microSD reader/writer 334	Save attached file159	Roam. Guidance(Int.) 416
microSD software 279	Send attached file 152	Select in-call function 401
Missed call	Shoot	Service Numbers401
Check 70	Storage capacity478	Voice Mail
Check the number 58	Titles and file names 306	Voice Mail(Int.)416
History 58	Trim (Edit i-motion)315	2in1
Info notice setting 70	Upload	Network status 414
Missed Call Notice (Int.) 416	MTP mode	New mail
Missed calls display 139	Multi Number	Display
Missed info (Illumination) 112	Multi window	Info notice setting 70
Mobile phone serial number information 181	Multiaccess	Noise reduction 64
Movable contents	Multiaccess combinations 446	Notes on capturing 216
Move between folders → Move (between folders)	Multitask	Notes on handling
Move (between folders)	Multitask combinations 447	Notice designate calls370
Bookmark 190	Music Player	Now update (Software Update) 469
Document	Music player screen 260	No. of Deco-Anime
e-book/e-comic	Operations during playback 261	Decome-Anime template 152
Image 307	Play	No. of Deco-mail
Machi-chara 319	Playlist	Deco-mail template 152
Mail 168, 169	Playing with the FOMA terminal folded 256	No. of Memos
Melody	Music storage capacity 478	Screen Memo 192
Moving picture/i-motion 313	Music&Video Channel	No. of messages
Music&Video Channel 252	Storage capacity478	Mail 166, 169
ToruCa 289	My document	Message
Track	My Menu	Ntfy switch-mode
Move (between Phone and microSD)	My picture	Nuisance Call Blk
Chaku-Uta-Full [®]	Display	Nuisance Call Blocking priority 144
e-book/e-comic	Folder (create/delete/edit) 335	Number A/Address A (2in1) 403
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		

NW search mode (Int.)	Download194	Photograph → Image
0	Save attached file	Pictogram reading list
	Send attached file	Pictograph
OBEX [™] communications342, 418	Storage capacity 478	Picture
OFF	PDF data screen	PIN code (PIN1/PIN2) 124
Mail protection	Pedometer352	PIN setting
Message protection	Petit message	PI · SB continuous entry 386
Protect screen memo	Phone call ring tone	Play
Public mode (Driving mode) 69	Adjust volume67	Movie
Public mode (Power OFF) 69	Priority	Record message/Voice memo 72
Vibrator100	Select98	Video
OFFICEED	Phone number	Voice
Omakase Lock	Check (your own)50	Playlist
On hold	Re-enter phone numbers52	Play/Erase memo (voice/moving picture) 72
One-touch mlt win	Search (Phonebook) 90	Play/Erase msg
Online timer recording (G-GUIDE	Phone To function	PLMN setting (Int.) 414
EPG Remote Control)	Phonebook	Pointer
Open tab setting (i-mode) 199	Add data from sites 187	Pointer setting198
Open-Close sound	Add (from other screens) 88	Portrait right
Operation description in this manual38	Add (Phone, UIM) 86	Power on/off
Operation descriptions38	Call acceptation	Power saver mode 109
Operations during playback	Call Forwarding	Precautions
Melody	Call rejection	Prefer attachment
Music	Compose message	Prefix
Video	Copy from microSD to Phone 329	Pre-installed data
Optional channel (i-Channel)208	Copy from Phone to microSD 329	i-αppli
Options/Accessories	Data stored	PDF data
Original animation (create)	Delete (detail screen)92	Ring tone/Melody/Alarm 98
Original animation (play)	Delete (list screen)91	拡大メニュー (Enlarged menu)
Original lock	Differences between Phone and UIM 86	(Kisekae Tool)
Original manner mode	Edit	Preview
Original menu	List (Tab display)	Preview (SMS)
Original menu display	No. of phonebook	Print setting (microSD) 334
Osaifu-Keitai	PushTalk phonebook 81	Priority → Function priority
IC card lock setting	Registration capacity 478	Privacy angle
Read/write data	Reject unknown	Program download
Use Osaifu-Keitai	Rename group	Program playback (Music&Video Channel) 252
Osaifu-Keitai i-αppli	Restrict dialing	Program setting (Music&Video Channel) 250
Out of service area47	Ring tone/Image	Protect Bluetooth device
Outbox	Save attached file	Mail
Overwrite mode	Search	Message
Own dictionary	Secret code setting	Screen Memo
P	Send attached file	
Desirat communications 410	View microSD data327	Protection capacity (various data) 478
Packet communications		Public mode (Driving mode) 68
Panorama cap. mode226	Voice Mail137	Public mode (Power OFF) 69 PushTalk
Part names and functions	AF lock shooting221	
Paste desktop icon		Add members (during a call) 80
Paste (text)	Auto focus	Dial
Pause dial	Storage number	Receive (Join)
PC Connection417	Storage number 4/6	neceive (Join) 80

Setting 84	Secret (data only) mode 128	Priority	99
PushTalk phonebook 81	Release Keypad lock temporarily 134	Ring time (mail/message) 10	02
Add 81	Release PIN lock	Silent	68
Delete 83	Release restrictions137	Ring tone/Image	
Dial 82	Release secret data127	Ring tone/Image (Check settings) 9	94
	Remote access(Int.) 416	Roam. Guidance(Int.) 415, 4	16
Q	Remote control function 342	Rotate (Edit image)3	
QR code 230, 280	Remote Control (Network service) 402		
Quality alarm 102	Remote monitoring (videophone)76	S	
Quality setting (Camera) 219	Rename group (Phonebook) 88	SAR (Specific Absorption Rate) 47	79
Quick Album	Reply with quote (Mail) 158	Save i-motion	
Quick Info setting 248	Reply (Mail)	Save moving pictures 2	
Quick Manual 504	Resend (Mail)	Save photos 2	
Quick message	Reserved update (Software Update) 470	Save SD-Audio data 25	
Quick search	Reset	Save WMA data 25	59
Quick search URL 189	Auto reset total cost	Save word (Own dictionary) 39	
Quick silent 66	Clear learned	Scanning function 4	
Quotation mark	Initialize	Schedule39	
Quote data	Reset	Add	
Quote personal data 388	Reset all info (Machi-chara) 319	Add holidays/birthdays 36	
Quote Phonebook data 388	Reset channel setting 247	Alarm notification action 36	
	Reset desktop	Check	
R	Reset i-Channel 209	Clock Alarm Tone set 10	
Read out alarm content 365	Reset Mail Setting	Copy from microSD to Phone 32	
Readout rules	Reset menu op. log 110	Copy from Phone to microSD 32	
Receive calls 64	Reset org. menu	Registration capacity 4	
Receive calls (Int.) 413	Reset scr./sound	Save attached file	
Receive option (Mail) 157	Reset settings	Secret data	
Received address 170	Reset total	Send attached file	
Received calls	Reset (My Profile)	View microSD data	
Receiving display setting 106	Reset channel setting	Screen effect1	
Receiving setting (Mail) 171	Reset desktop	Screen Memo	
Reception level (Signal strength) 47	Reset menu op. log	Screen memo storage capacity4	
Reconnect signal 63	Reset remotely	Scroll	
Record	Reset settings	Scroll function	-
Voice	Reset total (duration/cost) 369	i-mode/Full Browser	86
Voice memo	Restrict dialing	Document viewer34	
Record message setting 71	Restrict dialing (Restrictions) 137	PDF data	
Redial58	Restrictions	Scroll (Mail)	
Refresh skin tone (Edit image) 311	Dial lock/Omakase Lock 125	SD-Jukebox	
Register channel list 239	IC card lock setting286	Search all (Phonebook)	
Registered trademark 482	Keypad lock	Search column (Phonebook) 9	
Registration capacity (various data) 478	Original lock	Search group (Phonebook)	
Reject unknown	Restrict dialing	Search memory No. (Phonebook) 9	
Release	Self mode140	Search menu items	
Dial lock	Side key guard	Search name (Phonebook)	
i-αppli standby screen 279	Retouch (Edit image)311	Search reading (Phonebook) 9	
Manner mode 103	Ring time (sec.)	Search (Bluetooth device)3	
PIN lock	Ring tone	Search (Phonebook)	
Restrictions	Adjust volume67	Secret code setting	
Secret code	Increase (Step)67	Secret data	
Secret data	Pre-installed data	Secret folder	
000.00.00.00.00.00.00.00.00.00.00.00.00			

Secret (data only) mode 127	AF lock shooting221	Message 174
Secret (data only) mode releasing128	Auto focus	Moving picture/i-motion 313
Secure service set	Close-up221	Phonebook 90
Security code	Compose message 224	To Do list
Change125	Continuous mode 224	ToruCa289
Entry method	Face detection auto focus shooting 221	Track
Security codes	Fixed focus shooting 221	Sort main menu
Security Scan → Scanning function	Moving picture 226	Sound effect
Select image	Panorama cap. mode226	Stereo&3D sound 100
Select in-call function	Smile mode shooting 223	3D sound100
Select items with dial keys	Still image	Sound setting 199, 270
Select language	Shooting menu icons219	Space (Blank)
Select menu	Shooting settings229	Specific Absorption Rate (SAR) 479
Select multiple items	Short Message → SMS	Specifications 474
Select ON/OFF	Shortcut key function32	SSL/TLS certificates 201
Select ring tone	Shot interval/Shot number	Standard type i-motion 206
Select shooting menu219	(continuous shooting) 225	Stand-by display 406
Select shooting mode	Side key guard135	Display setting
Select size	Signal strength (Reception level) 47	Priority
Select to save	Signature/Header 172	Return to
Select YES/NO36	Silent	Stand-by i-αppli 278
Self mode140	Record message/Voice memo72	Start attachment (auto) (Mail) 171
Send DTMF tone	Ring volume	Start attachment (auto) (Message) 199
Send push signals 62	Voice	Start! iウィジェット (Start! i-Widget) 275
Send serial number information (i-mode)181	Simple Menu	Still image
Send/Receive mail	Simple Menu function list 438	Copy from microSD to Phone 330
Auto receive mail	Single-byte	Copy from Phone to microSD 329
Edit	Slow motion shooting 228	Display (microSD) 327
Forward	SMS	Display (Phone)304
Receive option	Compose/Send 176	Edit
Reply	Copy from microSD to Phone 329	Shoot220
Resend	Copy from Phone to microSD 329	Stop alarm
Send draft mail	Preview	Storage area for broadcast 238
Send (from site/mail) 197	Receive	Storage capacity (various data) 478
View (new mail)	SMS center selection 177	Store common phrases 389
Sent address	SMS input char176	Store/View personal data 365
Service available for the FOMA terminal448	SMS report req	Streaming type i-motion 206
Service Numbers	SMS settings	Streaming type movie 206
Service (Int.)	SMS valid. per	Sub-address setting
Session number (data transfer)339	Software	Super silent
Set auto-update (Pattern data)473	DOCOMO keitai datalink 421	Switch networks (3G/GSM) 414
Set clock display (standby screen)115	DOCOMO Videophone Software 76	Switch pages
Set i-appli To278	SD-Jukebox	Switch to BGM
Set image disp	Software key → Function key	Switch to the front camera 216
Set i-mode arrival act	Software Update	Switch to the rear camera 216
Set in-call arrival	Sort → Sort function, Filter function	Symbol reading list
Set main time	Sort function	Symbols
Set mute seconds	Deco-mail template 152	5,5.5
Set sub clock	Image307	T
Setting when folded	Machi-chara319	Text entry (edit)
Shake correction	Mail	Text memo
C 00110011011		

Shoot

EXT TEAUET	U	i-illoue site
heme change		Internet website 185, 189
icker	UIM → FOMA card	Multi window 18
icker color setting 209	UIM operation	My Menu
icker display setting 209	Update	One-touch mlt win
icker speed setting 209	Update playback restrictions (Uta-hodai) 254	Screen Memo
ime setting 49	Upgrade (i-αppli)	URL History 188, 189
imer recording (1Seg) 245	Upper case	View site
imer (alarm)	Upper limit of call cost	Bookmark 190
itle list	URL History	From site/mail 197
Machi-chara 319	USB mode setting	i-Channel 209
Moving picture 313	Use function keys	i-mode
Music&Video Channel 253	Use phone information	Multi window 187
Video	User Certificate	My Menu
Title list (Image)	User settings (1Seg)	One-touch mlt win
o Do list	——————————————————————————————————————	Screen Memo
Add	V	URL History
Alarm notification action 364	Version (Pattern data) 473	View SSL/TLS page 185
Check	Vibrator	View the screen
Clock Alarm Tone set 102	Vibrator priority	Music Player screen 260
Copy from microSD to Phone 329	Video	1Seg240
Copy from Phone to microSD 329	Delete315	Viewer settings
Registration capacity 478	Play	Visual check (videophone) 54
one selection (Ring tone) 98	Video player315	Visual preference (Videophone) 73
ōruCa	Guide to the screen	Voice announce
Acquire	Operation	Voice clock
Copy from microSD to Phone 330	Videophone	Voice input
Copy from Phone to microSD 329	Answer mode during i-mode 74	Voice Mail
Display	Auto redial as voice	Voice mail (Restrictions) 133
Display (microSD)	Call is not connected	Voice Mail(Int.)
Guide to the display screen 288	Chara-den	Voice memo (in-call)
Save attached file 159	Chara-den setting54	Voice mode
Send attached file 159	Decoration	Voice monitor
Setting	Dial52	Voice/Videophone call switch (Caller) 55
Storage capacity 478	Guide to the screen 53	Voice/Videophone call switch (Receiver) 66
oruCa viewer	Hands-free switch73	V.phone while packet74
rademark 482	Operation from external device 76	v.priorie writte packet
ransferred data (data transfer) 338	Petit message75	W
rim away (Edit image) 311	Play/Erase msg72	Wake-up display setting 10
roubleshooting 450	Receive64	Warranty and After-sales service 460
V link	Remote monitoring76	Watch TV
V remote control	Select image74	Web To function
wo-touch dialing 96	Visual check 54	Website
9 change mode (kanji/kana) 393	Videophone ring tone	White balance
9 input	Adjust volume67	Widget Appli
Character assignment 441	Select	Word prediction
Character input 392	Videophone/Voice call switch (Caller) 55	WORLD CALL
Edit reading	lem:lem:lem:lem:lem:lem:lem:lem:lem:lem:	WORLD WING 42, 410
•	View page	,
	Bookmark190	
	From site/mail 197	

æ
×
o
_
$\overline{}$
<u>~</u>
ᆽ
മ
₹
_

Numerals, etc. 1Seg 238 Activate 1Seg 240 Alarm notification action 364 Booking program/Timer recording .245	楽オク☆アブリ (Rakuoku i-αppli) 275 ルミネス (LUMINES Live!) 270 Function menu	Full Browser
Booking program/Timer recording (from site/mail)	Alarm 358 Detail 358 List 358 Backup 32 Data detail 332	Software list. 268 IC card authentic. 135 i-Channel 135 Channel list. 209 i-motion/Movie
Data Broadcast	Bar code reader Reading data detail	Download 207 i-schedule Detail 361 List 361
Record .244 TV link .244 User settings .247 View the screen .240	Detail screen 154 List 154 Bookmark 154 Folder list 190	Key illumination list
View (from site/mail). .197 Viewing time (battery). .44 1Seg ECO mode .247 1Seg → 1Seg	List .190 Chara-den .317 List .317	Setting list 121 Life history 357 Viewer 357 Viewer enlarged 357
186/184 prefix .61 2in1 .403 2-touch .440 Character assignment .440	Shooting screen 318 Choku-Den .95 Common phrases Folder list .389	Location history 300 Detail screen 300 List 300 Machi-chara 300
Character input. .391 3D display setting. .119 3D sound. .100 3G network .410	List .389 Continuous mode .225 Checking .225 Detail checking .222	List
3G/GSM setting	Shooting screen	Detail 169 Draft mail list 154 Inbox/Outbox folder list 166 List 168
駅探ඛ乗換案内 (Ekitan Transfer Guide)	Template list 152 Template preview 152 Decome-Anime 151 Edit menu 151	Mail history box detail
拡大メニュー (Enlarged menu) (Kisekae Tool)121 株価アブリ (Stock Prices Application)276 地図アブリ (Map Application)275, 294	Template list. 152 Template preview. 152 Desktop icon Desktop (Theme/Detail). 117	New mail 147 New SMS 176 Unread mail list 169 Manga&Book
日英版しゃべって翻訳 for N (J-E Shabette Honyaku for N) 271 マクドナルド トクするアプリ (McDonald's TOKUSURU KEITAI	Icon 117 Device list 378 Dialed calls 59 Dictionary	List
Application)	Reference result (list/detail) 372 Document Document	List
モバイルSuica 登録用 i アプリ (Mobile Suica Setup i-αppli)273	Download dictionary	microSD client list

Melody	Photo mode
List	Checking
Melody 320	Shooting screen
Message	PLMN setting415
Detail	PushTalk phonebook 83
List 174	Received calls
microSD	Redial
Data detail328	Restrictions
Data list	Schedule
File list	List
Folder list	Schedule
microSD 327	Schedule/Holiday detail 360
microSD manager 327	Screen Memo
Movie mode	Detail screen192
Checking	List
Shooting screen 227	Site
Music Player	i-mode Browser
Music list	URL History
Playback	URL list
Playlist list 258	Smile mode
Playlist music list 258	Shooting checking
Music&Video Channel	Shooting screen
Chapter list 252	Text entry (edit)
Music&Video Channel 252	Text memo
Program list	Text reader
My picture	Reading data (list/detail) 234
Image list	Scanning
My picture	To Do list
My Profile	Detail
Network services	To Do list
Additional guidance 408	ToruCa
Additional service 408	Display
Multi Number setting 403	Folder list
One-touch mlt win.	List
Group data list 191	Video player
Group list	List
Original animation	Playback316
List 309	Voice/Videophone Calls
Playback	Enter phone number 54
Original menu	FOMA in-call54
Own dictionary	Other ID
Panorama	Ringing65
Shooting checking 222	Videophone in-call
Shooting creen	1Seq
PDF	Booking program list 246
: =:	Channel info240
Data	
Data list	Channel list
Phonebook Detail agreen	Timer recording list
Detail screen	TV link list244
Group setting	View

Quick Manual

How to use the Quick Manual

The Quick Manual describes the basic operations and displays on this FOMA terminal.

Cut off the pull-out pages of this Quick Manual along the cutting line and fold down them as described below. Bring Quick Manual (For Overseas Use) along with you for an international roaming service (WORLD WING) abroad.


■ How to cut off

Cut the Quick Manual pages along the cutting line.

Use a ruler, etc. to cut along the cutting line as shown below.


Detach one page at a time so that you do not tear other pages.

* Take care not to hurt yourself when cutting with scissors, etc.

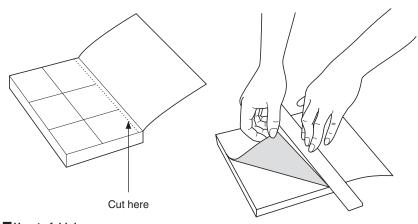

■ How to fold down

Fold the removed Quick Manual along with the folding line like a summit as the top page is up as described below.



docomo N-09A

Quick Manual

1 MEMI→ "Phonebook"→ "Phonebook"→ Ich (FUNC)→

Adding to phonebook

Mail address (up to 3

_<Not stored>→Enter mail address→Select an icon

"Add to phonebook"

To add data from Received calls

→ ch (FUNC)→"Add to phonebool

On the standby screen→□→Select Received calls

General Inquiries (docomo Information Center

From DOCOMO mobile phones (In Japanese only (No prefix) 151 (toll free)

* Unavailable from land-line phones, etc.
From land-line phones (In English)

00 ilable from mobile phones and PHSs 0120-005-250 (toll free)

0 From land-line phones (In Japanese only From DOCOMO mobile phones (In Japanese only) Unavailable from land-line phones, etc (No prefix) 113 (toll free) 0120-800-000 (toll free)

For Applications or Repairs and After-Sales Service, please contact the above-mentioned information center or the docomo Shop etc. near you on the NTT DUCOMO website or the i-mode site vailable from mobile phones and PHSs. Nease confirm the phone number before you dial

▼i-mode site iMenu⇒お路様は共一ァ (user support) ⇒ドコポツョッフ (docomo NTT DOCOMO website http://www.nttdocomo.co.jp/english * In Japanese only

address can be added to a FOMA card (UIM) Only name, reading, group, phone number and mai (Finish)

Memory number (000 - 999)

Nn→Enter memory No

PushTalk phonebook

when "Phone+PushTalk" is selected as the destination Entries are also added to the PushTalk phonebook

Edit phonebook data Editing/Deleting phonebook data

phonebook"→Edit the items if necessary→ (Finish) Open the Phonebook detail screen→[ch] (FUNC)→"Edi →"YES" (For the FOMA card (UIM), press (Finish)

and select "Overwrite"→"YES")

ω

To add data from Redial On the standby screen→ Select Redial →

Not stored>→Enter birthday→Set reminder

Birthday

Not stored>→Add location information

Location information

Address

2 Select the destination→Enter a name→Check the reading of the name→ ■ (Set) ch (FUNC)→"Add to phonebook'

Select items and enter them Select a group
■ Select a group Group (01 - 19, No group)

ω

Not stored>→Enter phone number→Select an icon Phone number (up to 4)

Select Chara-den
■ <Not stored</p>

N

Chara-den

Not stored>→Take a photo or select an Image

Image

Not stored>→Enter memore Memorandums

■Delete phonebook data data"→"Delete this"→"YES" (Select "YES" again Open the Phonebook list screen→|ch| (FUNC)→"Delete

Entering text

depending on the phonebook)

■Text entry (edit) screen

Blways appreciate you

XHCR Dusiness. Ø\Space Operation guidance area Text entry area

B477 Information display area

■Input mode

漢···Kanji/Hiragana [28···Number ∭····Katakana

■ ··· Alphabet

Switch text entry modes

(Chrct) (1 second or longer

5-touch→2-touch→T9 input The modes switch as follows

Enter punctuation marks

(once or more)

■Switch to kanji/hiragana, katakana, alphabet or

number mode

(Chrct) (once or more)

Cut here 4

G

Enter dakuten, han-dakuten * (once or more)

Enter a phone number→ (V.phone)→Press - after →"CHG camera-mode"→"Continuous mode"→"Auto" or When the ring tone sounds and the incoming call lamp MENU → "LifeKit" → "Camera" → "Photo mode" → Ch (FUNC) MENU → "LifeKit" → "Camera" → Photo mode → [■] (Record) MENU] → "LifeKit" → "Camera" → Movie mode → ■ (Record) (Subst.): Send your substitute image to the caller Making/Receiving videophone calls flashes, press 🖍 or 🔳 (Subst.) → Press 🛅 after 'Manual" → ■ (Cont./Record) → ch (FUNC) → Select Send your camera image to the caller Switch handsfree (ON/OFF) Receive a videophone call Make a videophone cal Continuous mode saving method ■During a call ■Movie mode ■Photo mode Jane (Save) ↓ (Save) ch (CHG)↓[□]↓[□]↓Select "携带" from the candidates Mew → "Data box" → "Music" → Select folder → Select a track Viewing photo, Playing moving picture/melody (once or more) → Activate Kanji/Hiragana input mode → #FW → "Data box" → "My picture" → Select folder → Select new →"LifeKit"→"Text memo"→ (Edit) → (Chrct) MENU → "Data box" → "i-motion/Movie" → Select folder → MENU → "Data box" → "Melody" → Select folder → Select Entering "携带" on Text memo Using the music player (→ 2 4 times, U→ 1 twice, 75 → 4 once, U) → 1 twice Text entry (edit) screen Play a moving picture Select moving picture Text conversion Display a photo Play melody ■Play music melody photo MENN → "1 Seg" → "Channel setting" → "Select area" → Select Use 🔁 to move the cursor to the character to clear 🕈 Switch the upper case/lower case of entered text (Only when the cursor is at the end of the text) (Only when the cursor is at the end of the text) #sw| → "1Seg" → "Channel list" → Select a channel list Open the 1Seg screen→F (1 second or longer)→ Select pictograms, etc. (In case of pictograms or ■Enter pictograms, symbols, face marks, URL (PI · SB) →Press or to change tabs symbols, press CLR after entering) 1Seg //wwi] **↓**"1Seg" **↓**"Activate 1Seg" 9 an area → Select prefecture Saved to a microSD card Switch the channel list (1 second or longer) Register channel list ch (FUNC) **→**"Space" Insert a line feed Clear character Record 1Seg Watch 1Seg Enter space

Cut here

ω

Camera

Open the New mail screen No message No address Composing/Sending i-mode mail -Message Subject i-mode mail Send mail Enter the main text " ___ <No message>"→Enter the main text ToruCa, or other data Send)→"OK" Attaching files

Attach schedule

Enter your security code→ (Set)

Open the New mail screen→ (Att.)→"My Profile"→

Attach My Profile

Attach an image, i-motion, melody, PDF, document

Attach bookmark

Select an item→Select data→ [■] (Select) Open the New mail screen→ (Att.)→"Schedule"→

Open the New mail screen→ [• (Att.)→Select an item →Select a tolder→Select data

Attach phonebook

"Phone"→Search phonebook→Select a phonebook Open the New mail screen→ (Att.)→ "Phonebook"→

Open the New mail screen→ (att.) → "Bookmark" →

4

	Menu function list	1 list
Main item	Sub item	Branch item
Mail	Inbox	
	Outbox	
	Draft	
	Mail history box	
	Compose message	
	Create new Deco-Anime	
	Compose SMS	
	Check new messages	
	Receive option	
	Check new SMS	
	Template	
	Mail Setting	
i-mode	iMenu/Search	
	Bookmark	
	Screen memo	
	URL History	
	Go to location	
	One-touch mlt win.	

N Se

Ϋ.

Main item

Branch item

" flashes→Received results screen appears→Select

Receiving i-mode mail

12

13

" Subject <No subject>"→Enter a subject

Enter a subject

" No address>"→Enter an address

Enter an address

node i-mc Full xxppli Soft	i-αр	Aut	і-αр	ettings/ Kise	W Service Inco													
Cneck new messages i-mode settings Full Browser Home Software list microSD	i-αppli call logs	Auto-start set	i-αppli action info	Kisekae Tool setting	Incoming call													
					Ring volume	Select ring tone	Stereo&3D sound	Vibrator	Illumination	Manner mode setti	Disp. phonebook in	Answer setting	Mail/Msg. ring time	Ring time (sec.)	Info notice setting	Record message	Disp. call/receive N	

17

Check new messages

MessageR/F i-Channel

Cut here 16

(1 second or longer)

"Forward"→" _ To _ "→Enter a mail address→ [] (Send)

Forward mail

Open mail to forward→[ch] (FUNC)→"Reply/Forward"→

Forward"→"Reply i-mode" or "Reply Deco-Anime"→ Open mail to reply to→ ch (FUNC)→"Reply" or "Reply."

"→Enter main text→ (Send)→"OK"

■Reply to mai

Other mail functions

15

Sub item	Display																	Call time/Charg				Clock	
Main item	Settings/	NW Service																					
Branch item	Hyper Clear Voice	Auto voice memo	Noise reduction	Quality alarm	Reconnect signal	Illumination in talk	Hold tone setting	Setting when folded	Pause dial	Sub-address setting	Prefix setting	Headset sw to dial	Int'l dial assistance	Visual preference	Select image	Auto redial as voice	Remote monitoring	Display setting	Ntfy switch-mode	Hands-free switch	V.phone while packet	Display setting	Backlight
Sub item	Talk								Dialing					Videophone								Display	
Main item	Settings/	NW Service																					

Set main time Set sub clock 9

Notice designate calls

Reset total

Auto reset total cost

Branch item	Clock display	Alarm setting	Clock Alarm Tone set	Auto power ON	Auto power OFF	Lock Dial lock	Original lock	IC card lock setting	Keypad lock	Face authentication	Self mode	Secret mode	Secret data only mode	Reject unknown	Call setting w/o ID	Change security code	IC card authentic.	PIN setting	Scanning function	Certificate setting	Secure service set.	Set check new message	Host selection	0
Sub item	Clock					Lock/Security														Connection setting				20
Main item	Settings/	NW Service																						

Image display mode Quick Info setting Machi-chara setting

Privacy angle

cons setting

3D display setting Menu display set

Desktop icon

Select language

/iewer settings Original menu

ndicator display

Display design

Branch item

nformation display

Screen effect

9

Open-Close sound Quick Search URL Reset settings Branch item Illumination Initialize Other settings Sub item

Settings/ NW Service Main item

Software Update

Music&Video Channel

My picture

Data box

i-motion/Movie

Headset usage setting

connection

External

JSB mode setting -opplical DL set

About i-cppli

Headset mic. setting Auto answer setting

NW search mode Display operator 3G/GSM setting

Int'I roaming set

PLMN setting

-Widget sound effect

Sound setting

-oxpli vol.

-Widget roaming set

SMS center selection Set i-mode arrival act

Branch item

Sub item setting

Settings/ NW Service Main item

8

End stand-by display

Disp. Software info

-oppli settings Connection

23 Bar code reader Key illumination Receive Ir data My document Manga&Book Machi-chara Kisekae Tool Chara-den microSD Camera LifeKit

Cut here

Sar incoming when roam

Missed Call Notice

Caller ID Notification

7

Chaku-moji

Vetwork service

lain item	Sub item	Branch item
feKit	Pedometer	
	Life history viewer	
	Map/GPS	
	Bluetooth	
	Data security serv.	
	Schedule	
	Alarm	
	To Do list	
	Text memo	
	Calculator	
	Play/Erase msg.	
	Play/Erase VP msg.	
	Voice memo	
	Voice announce	
	UIM operation	
	My Profile	
	Forwarding image	
	Text reader	
	Dictionary	
concier		
honebook	Phonebook	
	PushTalk	

미구

maii icoiii	Out total	Digital italii
Own data	Received calls	
	Dialed calls	
	Blog/Mail member	
	Choku-Den	
	Common phrases	
	Own dictionary	
	DL dictionary	
OISUM	Music Player	
	Music&Video Channel	
1Seg	Activate 1Seg	
	Program guide	
	Booking program list	
	Timer recording list	
	Recording result	
	TV link	
	Channel list	
	Channel setting	
	User settings	

Call	
Waiting	
Ō	

25

Network Services Voice Mail Service

24

Activate

"Call Waiting"→"Activate"→"YES" wew → "Settings/NW Service" → "Network service" →

Deactivate "Call Waiting"→"Deactivate"→"YES" www.→"Settings/NW Service"→"Network service"→

Answer another incoming call Press to switch to incoming call

To switch the calls, press

Play messages

MENI → "Settings/NW Service" → "Network service" →

"Voice Mail"→"Deactivate"→"YES"

*Settings/NW Service"→"Network service"→

"Play (videophone)"→"YES"→Follow the voice "Voice Mail"→"Play messages"→"Play (voice call)" or

27

instructions

Deactivate

time (seconds)

"Voice Mail"→"Activate"→"YES"→"YES"→Enter the ring

MENUI → "Settings/NW Service" → "Network service" →

Activate

28

Cut here

		etting
		Ħ
		result
		rding list
		ogram list
■ Public mo		uide
Manner m		èeg
<other fun<="" td=""><td></td><td>eo Channel</td></other>		eo Channel
		er
		ıry
		nary
		hrases
		ו
		nember
		3
Osaitu-Keita		alls

Setting

IC card content

Search by i-mode Check IC owner

Change IC owner IC card lock setting DCMX

■ Public mode (Driving mode): (*) (1 second or longer) (Set/Released by each press)	Other functions> ■ Manner mode: (±) (1 second or longer) (Set/Released by each press

Activate Call Forwarding Service

26

and the ring time, then select "Activate"→"YES" "Call Forwarding"→"Activate"→Set a forwarding number MENUI → "Settings/NW Service" → "Network service" →

Caller ID Request

"Call Forwarding" → "Deactivate" → "YES"

| Settings/NW Service"→"Network service"→

Activate

| **Settings/NW Service"→"Network service"→

Deactivate "Caller ID Request"→"Activate"→"YES"→"OK"

► "Settings/NW Service" → "Network service" →

"Caller ID Request"→"Deactivate"→"YES"→"OK

Service available for the FOMA terminal

(No area code) 115 (No area code) 110 (No area code) 118 Collect call (pay: service charge + call charge) (No area code) 106 (No area code) 104 (No area code) 117 (No area code) 119 Emergency Message Recording System (pay) (No area code) 171 weather forecast Area code for you want + 177 Directory assistance (pay: service charge + Fire brigade/Ambulance emergencv*2 Telegram (pay: telegram charge) Maritime distress call olice emergency*2 Weather (pay) call charge)*1 Time (pay)

- Unlisted phone numbers cannot be given.
- 2: Depending on the area you are calling from, you may not be connected with the nearest police or fire department. In this case, dial from a public or general subscriber phone.

8

Main icons



- 🗐 : Battery level
- [ii]: Signal strength
- : i-mode in progress
- 🎘 : Pedometer being set
- SSL/TLS page displayed
 - Unread mail
- 31

<Lost & Stolen>

Omakase Lock

: Record message ON, Auto voice memo OFF

🔒 : Record VP message set

: Keypad lock set/ready

: IC card lock set

P : ECO mode "ON"

🔋 , 🚡 : Voice Mail message

: 1Seg Timer recording

<Contact:

Charges will incur for application for Omakase Lock. application for service suspension or during service Application is free if made at the same time as suspension.

Set/Release Omakase Lock

before dialing.

00 0120-524-360

24 hours (in Japanese only)

3 : USB cable connected in communication mode

Omakase Lock can be set/released from the My docomo site on a PC, etc.

🚄 : During a voice call

引: Unread MessageR/F

: "Permit to send loc." set to "ON"

: Bluetooth connected : i-concier information

: microSD card inserted √ ∴ Vibrator set

🥼 📇 : Ring volume set to "Silent" 👺 : Manner mode set

iii : Music&Video Channel reservation set : Public mode (Driving mode) set 🔔 / 🐙 : Alarm set Other contacts

32

To avoid mistakes, please double-check the number <Contact: <Contact:

Cut here

docomo N-09A

Quick Manual (For Overseas Use)

<a href="cdocomo Information Cen Closs or theft FOMA terminal or payment of cumulative cost overseas

■From DOCOMO mobile phones International call access

code for the country you -81-3-5366-3114 (toll free)

*If you use N-09A, you should dial the number+81-3-5366-3114 (to enter "+", press and hold the "0" key for at least one second) You are charged a call fee to Japan when calling from a land-line phone, etc.

■From land-line phones <Universal number> International prefix number -800-0120-0151

for the universal number

 You might be charged a domestic call fee according to the call rate for the country you stay

*See page 9 for international call access codes for major countries (table 1) and page 10 international prefix numbers for the universal number (table 2).

> < Network Technical Operation Center> (available 24 hours a day) Failures encountered overseas

■From DOCOMO mobile phones code for the country you -81-3-6718-1414* (toll free)

From land-line phones <Universal numbers *If you use N-09A, you should dial the number +81-3-6718-1414 (to enter "+", press and hold the "0" key for at least one second) You are charged a call fee to Japan when calling from a land-line phone, etc.

International prefix number for the universal number (table 2) -800-5931-8600

* You might be charged a domestic call fee according to the call rate for the country you stay.

*See page 9 for international call access codes for major countries (table 1) and

page 10 international prefix numbers for the universal number (table 2)

Before traveling

 Before overseas use, refer to the following: "Mobile Phone User's Guide [International Services]"

- "Mobile Phone User's Guide [Network Services]
- PDF file "海外ご利用ガイド" (Overseas Use Guide) in My DOCOMO International services website
- Document under Data box

Setting the operator search mode

Switch the operator automatically or manually

Re-search the connectable operator When set to "Manual", select an operator "NW search mode"→"Auto" or "Manual wew → "Settings/NW Service" → "Int'l roaming set" →

When set to "Manual", select an operator Setting an operator to preferentially connect to "NW search mode"→"Network re-search *Settings/NW Service"→"Int'l roaming set"→

priority"→Highlight the destination→ ■ (Select)→ [(Finish)→"YES" Highlight an operator to change the priority → ch (FUNC) → "Change MENNI → "Settings/NW Service" → "Int'l roaming set" → "PLMN setting" → Setting operator name display

• i-mode (including Full Browser)

Voice/Videophone calls
 i-mode mail

 i-concier MessageR SMS transmission

kixij→"Settings/NW Service"→"Clock"→"Set sub clock"→
"Display method"→"Auto"

Sub clock display setting

Services available overseas

"Auto time difference"

**Settings/NW Service"→"Clock"→"Set main time"→

Auto time adjust setting

"Auto time adjust"→Select "Auto" both in "Auto time" and in

* Services vary depending on the network or operator

Switching network connections

Packet communications via a PC, etc

i-Channel

"Display operator name"→"Display ON" or "Display OFF "Settings/NW Service"→"Int'l roaming set"→

"3G/GSM setting"→"AUTO", "3G", or "GSM/GPRS www.→"Settings/NW Service"→"Int'l roaming set"→

i-mode settings

services Settings"→"Yes"→"Enter i-mode password"→"Select ■ → "English" → "Options" → "International Settings" → "I-mode

Remote Control

■Configure settings in Japan *Settings/NW Service"→"Network service"

"Remote Control"→"Activate"→"YES

Configure settings overseas

→"Remote access(Int.)"→"YES"→Follow the voice instructions KEN → "Settings/NW Service" → "Int'l roaming set" → "Service(Int.)"

N

Display on the screen The name of the currently connected

Connecting operator's name

operator appears in the task icon

automatically searched and connected to the FOMA network (DOCOMO) When you return to Japan and turn on the power, the network will be After returning to Japan

"Setting the operator search mode" → p.4

Making a call

■Make a call to a country registered in "Int'l dial assistance" Making a call to outside your destination country (including Japan)

■Make a call by dialing from the country code "Int'l call" → Select a country → [~ or [(V.phone) Enter the phone number of the other party→ch (FUNC)→

Country code→Area code (City code)→The other party's On the standby screen, dial + (☐ (1 second or longer))→

phone number → or (V.phone)

Cut here

Dial the other party's phone number 🗸 🗸 or 🖾 (V.phone) Making a local call in the country of stay

Receiving a call

When you receive a voice/videophone call, press 🔨

Network Services

3efore using the network services overseas, Remote Control must be set.

Roam. Guidance

"Roam. Guidance" → "Activate" or "Deactivate" → "YES" #™ → "Settings/NW Service" → "Network service" → Make the setting in Japan.

9

rnationa	call a	International call access code of major countries (Table 1)	major	countries (Tak	ole 1)
Area	Code	Area	Code	Area	Code
	1100	India	00	Singapore	100
	00	Indonesia	100	Spain	00
	0021/	Ireland	00	Sweden	00
	0014	Italy	00	Switzerland	00
	011	Korea	100	Taiwan	005
	00	Luxembourg	00	Thailand	100
	00	Macau	00	Turkey	00
	00	Malaysia	00	United Arab	00
	00	Monaco	00	Emirates	
	00	New Zealand	00	United Kingdom	00
	00	Norway	00	United States of	011
	00	Philippines	00	America	
	00	Poland	00	Vietnam	00
			I		I

For the latest information, see the DOCOMO International services 001 Portugal Hong Kong

Depending on the operator overseas, the setting may be Bar incoming when roam

When set to "Activate", select "Bar All incoming" or "Data calls 'Bar incoming when roam" → "Activate" or "Deactivate" Barring" → "YES" → Enter your network security code кви →"Settings/NW Service" → "Int'I roaming set" → unavailable

'Roam.Guidance(Int.)"/"Missed Call Notice(Int.)"

"YES"

The state of the stat 'Service(Int.)"→"Voice Mail(Int.)"/"Call Forwarding(Int.)"/ #™ → "Settings/NW Service" → "Int'l roaming set" → 'Remote access(Int.)"/"Caller ID req.(Int.)"/

Service (Int.)

Follow the voice instructions

Enter the following country codes when using international Country codes of major countries call or setting "Int'l dial assistance".

Area	Code	Area	Code	Area	Code
Australia	19	Holland	31	Peru	51
Austria	43	Hong Kong	852	Philippines	63
Belgium	32	Hungary	98	Russia	7
Brazil	22	India	16	Singapore	65
Canada	ŀ	Indonesia	62	Spain	34
China	98	Italy	39	Sweden	46
Czech	420	Japan	81	Switzerland	41
Egypt	20	Korea	82	Taiwan	886
Fiji	629	Macan	853	Thailand	99
Finland	358	Malaysia	09	Turkey	06
France	33	Maldives	096	United Kingdom	44

For other country codes and details, see the DOCOMO International services website.

30 Norway

Germany Greece rance

United States of

687

America Vietnam

ω

Inquiries

nternational Prefix number for the universal number (Table 2)

accumulation or malfunction, refer to "Loss, theft, payment, For inquiries overseas such as lost, stolen, charge

001

00 Singapore

001 Portugal

Hong Kong

0011

00 Hungary

8 8

Switzerland

Korea srae

011 00 0021 00 600 066

00 Italy

00 Sweden Taiwan

014 Spain

00 100 OO United Kingdom United States of

00 New Zealand Luxembourg

00 Deru

Thailand America

8 00

- etc." on the front cover of the Quick Manual (For Overseas When dialing the inquiries numbers, "International call access code (Table 1)" or "International Prefix number Use) or "Failed connection or malfunction" on p.1.
- Note that, in many cases, you cannot use a universal number when for the universal number (Table 2)" of your destination making a call from your mobile phone, public phones, your hotel country is required.

charge accumulation or malfunction, refer to "For lost, stolen, cancel services. For inquiries overseas such as lost, stolen, please immediately contact us and follow the procedure to If your FOMA card (UIM) (green/white) is lost or stolen, telephone, etc. Note that, in many cases, you cannot use a universal number when For the latest information, see the DOCOMO International services making a call from your mobile phone, public phones, your hotel

charge accumulation, etc. overseas" or "Repairs overseas"

on the back cover of this manual. Note that you must pay

communication charges incurred after it is lost or stolen.

Cut here 10

6

website

Make various applications or change your billing plan, check your charges and points, and more online,

i-mode access: iMenu ⇒ お客様サポート (user support) ⇒ お申込・お手続き (Applications/ procedures) ⇒ 各種お申込・お手続き (Various applications/procedures)

No packet communications charges apply My docomo (http://www.mydocomo.com/) ⇒ 各種お申込・お手続き (Various

PC access: applications/procedures)

- You need your "network PIN" to use via i-mode.
- Packet communications charges do not apply to use via i-mode. Charges will apply if using the service from overseas.

"docomo ID and password" are required to use this site from a PC.

- Please contact General Inquiries described on Back cover of this manual if you forget or do not have "network PIN" or "docomo ID and password".
- May not be available in some cases depending on the conditions of your subscription.
- There are cases where the site may not be available due to system maintenance, etc.

Mobile phone manners are important!

Remember to be courteous to others when you use your FOMA terminal.

Turn the power off when you are:

In places where use is prohibited

Use is prohibited in some places. Be sure to switch the power off in:

- Airplanes · Hospitals
- * Turn off your FOMA terminal even in hospital lobbies, waiting rooms, and corridors as well as hospital wards if electronic medical devices may be in use near you.
- Driving

Using a handheld mobile phone while driving will result in a penalty.

- * When you need to receive a call, tell the caller that you will call back later using handsfree functions, then pull off the road before using the phone.
- In crowded places such as peak-hour trains if implanted electronic medical devices may be in use near Radio waves emitted by the FOMA terminal may adversely affect implanted pacemakers and ICDs when
- used in close proximity. In places such as theaters, cinemas, and art galleries Using the FOMA terminal in a public place, where you need to be guiet, annoys people around you.

Keep your voice and ring tone down

- Keep your voice down in quiet places like restaurants and hotel lobbies.
- If you are in an outdoor public place, make sure you do not disturb others.

Respect privacy

Please be considerate of the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones.

Have good manners

Your FOMA terminal is equipped with useful functions not to answer an incoming call or to mute the sounds.

[Manner mode/Original manner mode] → pp.103, 106

Manner mode mutes the sounds of the FOMA terminal such as the keypad sounds and the ring tone. You can customize Manner mode by changing the settings of the Record message function, vibrator or ring tone (Original manner mode). However, neither Manner mode nor Original manner mode can mute the shutter sound of the camera.

[Public mode (Driving mode/Power OFF)] → pp.68, 69

The FOMA terminal announces to the caller that you cannot answer the call because you are driving or in a place you need to refrain from calling or to turn off the power.

[Vibrator] → p.100

Vibration notifies you of an incoming call.

[Record message function] → p.71

When you cannot answer a call, the caller can leave a message.

You can also use optional services such as the Voice Mail service (p.396) and Call Forwarding service (p.398).


This manual was printed on recycling paper and is recyclable. When you have done with it, take it to a local recycling collection center.

General inquiries <docomo Information Center>

0120-005-250 (toll free)

- Service available in: English, Portuguese, Chinese, Spanish, Korean
- * Available from mobile phones and PHSs.
- From DOCOMO mobile phones

(In Japanese only)

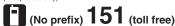

- Unavailable from land-line phones, etc.
- From land-line phones

(In Japanese only)

0120-800-000 (toll free)

- * Available from mobile phones and PHSs.
- Please confirm the phone number before you dial.
- For Applications or Repairs and After-Sales Service, please contact the above-mentioned information center or the docomo Shop etc. near you on the NTT DOCOMO website or the i-mode site.

NTT DOCOMO website http://www.nttdocomo.co.jp/english/

Loss or theft FOMA terminal or payment of cumulative cost overseas <docomo Information Center> (available 24 hours a day)

From DOCOMO mobile phones

International call access code for the country you stay (table 1)

-81-3-5366-3114*(toll free)

- * You are charged a call fee to Japan when calling from a land-line phone, etc.
- * If you use N-09A, you should dial the number +81-3-5366-3114 (to enter "+", press and hold the "0" key for at least one second).
- From land-line phones <Universal number>

International prefix number for the universal number (table 2)

-800-0120-0151*

- * You might be charged a domestic call fee according to the call rate for the country you stay.
- * See page 412 for international call access codes for major countries (table 1) and international prefix numbers for the universal number (table 2).

Repairs

From DOCOMO mobile phones (In Japanese only)



13 (toll free) (No prefix)

- Unavailable from land-line phones, etc.
- From land-line phones

(In Japanese only)

0120-800-000 (toll free)

Available from mobile phones and PHSs.

i-mode site iMenu ⇒ お客様サポート (user support) ⇒ ドコモショップ (docomo Shop) * In Japanese only

Failures encountered overseas < Network Technical Operation Center> (available 24 hours a day

From DOCOMO mobile phones

International call access code for the country you stay (table 1)

-81-3-6718-1414*(toll free)

- * You are charged a call fee to Japan when calling from a land-line phone, etc.
- * If you use N-09A, you should dial the number +81-3-6718-1414 (to enter "+", press and hold the "0" key for at least one second).
- From land-line phones <Universal number>

International prefix number for the universal number (table 2)

-800-5931-8600*

- * You might be charged a domestic call fee according to the call rate for the country you stay.
- * See page 412 for international call access codes for major countries (table 1) and international prefix numbers for the universal number (table 2).
- If you lose your FOMA terminal or have it stolen, immediately take the steps necessary for suspending the use of the FOMA terminal.
- If the FOMA terminal you purchased is damaged, bring your FOMA terminal to a repair counter specified by DOCOMO after returning to Japan.



Don't forget your mobile phone ... or your manners!

OWhen using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you.

> Sales: NTT DOCOMO, INC. Manufacturer: NEC Corporation



PRINTED WITH To prevent damage to the SOYINK This manual is printed using an ink based on soy bean oil Utilizing recycled papers



2009.5 (1st Edition) MDT-000126-EAA0

N-09A Manual for PC Connection

Data Communication	1
Before Using	4
Checking the Procedure	5
Setting the PC	9
Preparing Bluetooth Communication	12
DOCOMO Connection Manager	14
Executing Set Data Communication	18
Setting up Dial-up Network	19
Setting up Dial-up	26
AT Command List	37

About Manual for PC Connection

This manual describes necessary information for data communication using the N-09A and how to install "FOMA communication setting file" and "DOCOMO Connection Manager" provided in the provided CD-ROM.

The procedures or screens may vary depending on your environment.


Data Communication

Data Communication Available for the FOMA Terminal

Available data communication between the FOMA terminal and PCs is classified in 3 categories: data exchange (OBEXTM communication), packet communication and 64K data communication.

Data exchange (OBEXTM communication)

The data such as images, music files, phonebook entries, mails, and more can be exchanged with equipment such as other FOMA terminals and PCs.

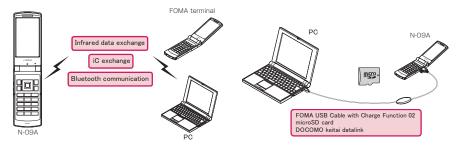

Packet communication

Packet communication is charged according to the amount of data sent and received.*1 High speed communication at up to 7.2Mbps downlink*2 and up to 384kbps uplink*2 is available in the FOMA HIGH-SPEED area. Communication is provided on a best-effort basis. Communication speed varies depending on the communication environment or network congestion. This is suitable for exchanging small amount of data at high speed.


• When you use packet communication with DOCOMO PDA "sigmarion III" or "musea", the communication speed may be lower. It is not compatible with FOMA HIGH-SPEED Area communication.

You can also access a corporate LAN connected to the FOMA network.

Use an access point that supports FOMA packet communication, such as DOCOMO Internet connection service "mopera U".

For packet communication, connect the FOMA terminal to a PC using FOMA USB Cable with Charge Function 02 (optional) or Bluetooth communication, or to a PDA using a dedicate cable.

- *1: Note that the communication charge can become very expensive when large files are sent and received.
- *2: It is the maximum value on the technical standards, and the actual communication speed varies depending on the network congestion or communication environment. The communication speed may be lower when you are out of the FOMA HIGH-SPEED area, or you connect to the access point to which the HIGH-SPEED service is not supported.

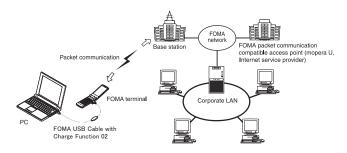


64K data communication

64K data communication is charged according to the length of time the line is connected, regardless of the amount of data.

Use an access point that supports FOMA 64K data communication, such as DOCOMO Internet connection service "mopera U", or ISDN synchronized 64K access point.

For 64K data communication, connect the FOMA terminal to a PC using FOMA USB Cable with Charge Function 02 or Bluetooth communication, or to a PDA using a dedicate cable.

*Note that the communication charge can become very expensive when the line is connected for a long time.

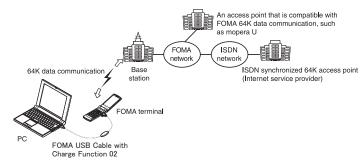

NOTE

- The communication speed is 384kbps at maximum for receiving and 64kbps at maximum for sending outside the FOMA service area and overseas.
- Select IP connection method when you perform packet communication overseas. (Packet communication using PPP connection is not supported.)
- 64K data communication is not available overseas.

Notice before using

Internet service provider fees

In addition to FOMA service charges, you may need to pay user fees to an Internet service provider to use the Internet. These fees must be paid directly to the Internet service provider in addition to service fees of FOMA service. Contact your Internet service provider for details.

DOCOMO Internet connection service "mopera U" is available. "mopera U" is a pay service for which you need to apply.

Setting an access point (e.g. Internet service provider)

Packet communication and 64K data communication use different access points. If you are using packet communication, use an applicable access point for it; if 64K data communication, use an access point for FOMA 64K data communication or ISDN synchronized 64K.

- · You cannot use DoPa access points.
- For the available services and connection settings, see mopera website. http://www.mopera.net/mopera/index.html
 (in Japanese only)

User authorization when accessing network

Some access points may require your user authorization (ID and password) when connecting. Use communication software (Dial-up network) to enter your ID and password. ID and password will be provided by your Internet service provider or the network administrator. Contact the Internet service provider or network administrator for details.

Access authorization when using the browser

To view FirstPass compliant sites on your PC's browser, FirstPass (user certification) for access authorization is needed. Install the FirstPass PC software from the attached CD-ROM and conduct the setting. For details, refer to "FirstPassManual" (PDF format) under the "FirstPassPCSoft" folder provided in the CD-ROM. (The "FirstPassManual" is only in Japanese.) To view the "FirstPassManual" (PDF format), Adobe® Reader® is required. Unless you install it on your PC, install the Adobe® Reader® from the CD-ROM to read the document. For how to use it, refer to the "Adobe Reader help".

Required conditions for performing packet and 64K data communication

The following conditions are required to perform communication using the FOMA terminal (For communication in Japan):

- Your PC is compatible with the FOMA USB Cable with Charge Function 02 (optional).
- When connecting using Bluetooth communication, the PC supports Dial-up Networking Profile of Bluetooth Specification Ver.1.1, Ver.1.2 or Ver.2.0+EDR.
- · You are in the FOMA service area.
- For packet communication, the access point supports FOMA packet communication.
- For 64K data communication, the access point supports FOMA 64K data communication or ISDN synchronized 64K.

However, depending on congestion of the base station or weaker signal strength, you cannot perform communication even when the above conditions are satisfied.

Before Using

Operational environment

The PC operation environment to use data communication is as shown below:

PC unit	PC/AT compatible model with CD-ROM drive When using the FOMA USB Cable with Charge Function 02 (optional):USB port (compliant to Universal Serial Bus Specification Rev1.1/2.0) This FOMA terminal is not compatible with "USB2.0 High-Speed". When using Bluetooth communication: Bluetooth Specification Ver.1.1, Ver.1.2 or Ver.2.0+EDR compliant (Dial-up Networking Profile)
	Display resolution of 800 dots wide × 600 dots high, High Color (65,536 colors) is recommended
OS*1	Windows 2000 (Japanese version) Windows XP (Japanese version) Windows Vista (Japanese version) For DOCOMO Connection Manager, Windows 2000 with Service Pack 4 or later, or Windows XP with Service Pack 2 or later is required. (For details on the operational environment, visit the DOCOMO website.)
Required memory*2	Windows 2000: 64M bytes or higher Windows XP: 128M bytes or higher Windows Vista: 512M bytes or higher
Hard disk space*2	5M bytes or higher For DOCOMO Connection Manager, 15M bytes or higher

- *1: The proper operations on the upgraded OS are not guaranteed.
- *2: The required memory and necessary hard disk space may differ depending on the PC's system configuration.
- Microsoft Internet Explorer 7.0 or later is recommended to run the menu (For Windows XP and Windows 2000, Microsoft Internet Explorer 6.0 or later is recommended.). If the menu screen does not appear even when you insert the CD-ROM, use the following procedure:
 - ① Open " ② " → "コンピュータ" (Computer) For Windows XP, open "スタート" (Start) → "マイコンピュータ" (My Computer) For Windows 2000, open "マイコンピュータ" (My Computer) on the desktop
 - ② Right-click the CD-ROM icon and select "開<" (Open)
- ③ Double-click "index.html"
- When the CD-ROM is inserted to the PC, the warning screen may appear. This warning is displayed according to the security setting of the Internet Explorer. There is no matter with using the software. Click "(\$\frac{1}{2}\tau\)" (Yes).

NOTE

- You can transmit data with the FOMA terminal connected to the DOCOMO PDA "musea" or "sigmarion II". Update
 "musea" when you connect it to a FOMA terminal. For how to update it and other details, visit the DOCOMO
 website.
- This FOMA terminal is not compatible with Remote Wakeup function.
- This FOMA terminal is not compatible with the FAX communication.

Required devices

The following hardware and software, in addition to the FOMA terminal and a PC, are required.

- "FOMA USB Cable with Charge Function 02" (optional) or "FOMA USB Cable" (optional)*
- Provided CD-ROM "CD-ROM for N-09A"
- *: For USB connection

NOTE

- Purchase the specified "FOMA USB Cable with Charge Function 02" or "FOMA USB Cable". The USB cable for PC
 cannot be used because the shape of the connector is different.
- The FOMA USB Cables may not function properly when connected to a USB HUB.

Checking the Procedure

In data communication, the connection is made through a dial-up connection with Internet service providers or LANs that support FOMA data communication.

- About the "CD-ROM for N-09A"
- The CD-ROM contains the FOMA communication setting file (drivers), DOCOMO Connection Manager and FirstPass PC software.
- The FOMA communication setting file is software (driver) needed for connecting the FOMA terminal with a PC via a FOMA USB Cable with Charge Function 02 (optional) to carry out packet communication, 64K data communication and data transfer (OBEXTM communication). Installing the FOMA communication setting file embeds each driver into Windows.
 Using DOCOMO Connection Manager, you can easily set up packet communication and 64K data.
 - Using DOCOMO Connection Manager, you can easily set up packet communication and 64K data communication and create a dial-up connection.

Flow chart for completing the data communication setup

■ Data exchange (OBEXTM communication)

Install the FOMA communication setting file to use the FOMA USB Cable with Charge Function 02.

Download/Install the FOMA communication setting file*


Install the file from the "CD-ROM for N-09A". Alternatively, download the file from the DOCOMO website and install it.



Data exchange

^{*:} Install DOCOMO keitai datalink in addition.

■ Packet communication and 64K data communication

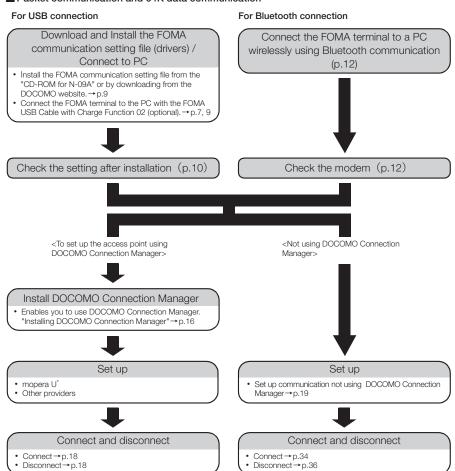


*: To use Internet with the FOMA terminal and PC connected, "mopera U" (you need to apply for) is useful, which supports broadband connection, etc. Consider the plan in which you are charged only in a month when you use the service. For more information, visit the DOCOMO website.

Setting the USB mode setting to "Communication mode"

- Set the mode before connecting to PC.
- Setting is not required when using Bluetooth connection.
- "Settings /NW Service" External connection " USB mode setting" Communication mode"

Connecting the devices

The following procedure explains how to connect the FOMA USB Cable with Charge Function 02 (optional).

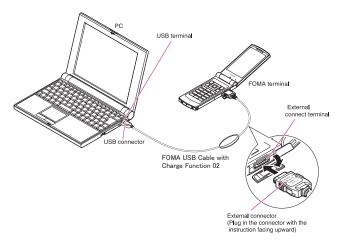


- Open the external connector cap of the FOMA terminal
- Check the orientation of the external connector of the FOMA terminal, then insert the external connector of the FOMA USB Cable with Charge Function 02 horizontally until you hear a click
- Connect the USB connector of the FOMA USB Cable with Charge Function 02 to the USB terminal of your PC
 - " 🗓 " appears on the FOMA terminal when the FOMA USB Cable with Charge Function 02 is connected.

NOTE

 " 1 appears on the FOMA terminal display when the FOMA communication setting file is installed and the connection with a PC is recognized.

Disconnecting the devices

The following procedure explains how to disconnect the FOMA USB Cable with Charge Function 02 (optional).

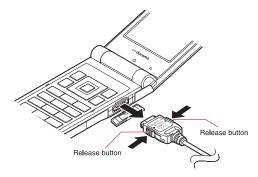

- Remove the FOMA USB Cable with Charge Function 02 from the USB terminal of the PC
- Pull the FOMA USB Cable with Charge Function 02 out horizontally while pressing the release buttons of the external connector of FOMA USB Cable
- Close the external connector cap of the FOMA terminal

NOTE

- When you connect and disconnect the FOMA USB Cable with Charge Function 02 repeatedly, wait for a while in
 each step because the FOMA terminal may not recognize the PC correctly.
- Do not disconnect the FOMA USB Cable with Charge Function 02 during data communication because this may
 cause the disconnection of communication, malfunction or loss of data.
- Keep pressing the release buttons of the external connector of the FOMA USB Cable with Charge Function 02 when pulling it out of the external connector of the FOMA terminal. Using excessive force to pull the cable may cause malfunction.

Setting the PC

Installing the FOMA communication setting file (drivers)

- When installing FOMA communication setting file, be sure to log on as Administrator. If you attempt to
 install the file with another account, an error may occur. Contact your PC's manufacturer or Microsoft
 for information on how to set Administrator privileges on your PC.
- You can download the FOMA communication setting file from the DOCOMO website.
- Install the FOMA communication setting file only when connecting to the PC using the FOMA USB Cable with Charge Function 02.
- Start up Windows and insert the "CD-ROM for N-09A" in the CD-ROM drive of your PC

This screen will automatically appear.



- Olick "データリンクソフト・各種設定ソフト" (Setup software)
- 【 Click "インストール" (Install) of "FOMA通信設定ファイル (USBドライバ) " (FOMA communication setting file (USB driver))
- Ouble-click "FOMAinst.exe" in the appeared folder, and click "続行" (Continue)

It is displayed as "FOMAinst" depending on the setting of your PC. For Windows XP and Windows 2000, you need not click "続行" (Continue).

⑤ Upon confirming the software license agreement, click "同意する" (Agree) to agree to it

If you click "同意しない" (Not agree), the installation is canceled.

- Turn on the FOMA terminal and then connect the FOMA USB Cable with Charge Function 02 (optional) to your FOMA terminal
- After the message requesting to connect the FOMA terminal to PC appears, connect the FOMA USB Cable with Charge Function 02 to the USB terminal of your PC

Installing the drivers automatically starts.

After drivers are successfully installed, DOCOMO Connection Manager can be installed successively. To install DOCOMO Connection Manager, click "インストールする" (Install). → p.16

Checking the installed driver

Check that the FOMA communication setting file (drivers) has been correctly installed. This section describes an example using Windows Vista.

____ Select "" → "コントロールパネル" (Control Panel)

For Windows XP

Select "スタート" (Start) → "コントロールパネル" (Control Panel)

For Windows 2000

Select "スタート" (Start) → "設定" (Settings) → "コントロールパネル" (Control Panel)

Open "システムとメンテナンス" (Systems and maintenance) in the "コントロールパネル" (Control Panel)

For Windows XP

Click the "システム" (System) icon in "パフォーマンスとメンテナンス" (Performance and maintenance)

For Windows 2000


Open "システム" (System) in the "コントロールパネル" (Control Panel)

Select "デバイスマネージャ" (Device Manager) and click "続行" (Continue)
For Windows XP and Windows 2000

Click the "ハードウェア" (Hardware) tab and click "デバイスマネージャ" (Device manager)

Click each device to check the installed driver name

Check that all the driver names are displayed under "ポート (COMとLPT)" (Ports (COM&LPT), "モデム" (Modems) and "ユニバーサルシリアルバスコントローラ" (Universal Serial Bus Controller) or "USB (Universal Serial Bus) コントローラ" (USB (Universal Serial Bus) コントローラ" (USB (Universal Serial Bus) controller)

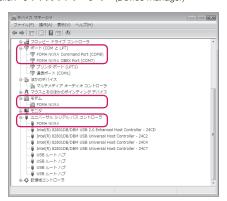

Device name	Driver name
ポート(COMとLPT)	FOMA N09A Command Port FOMA N09A OBEX Port
モデム	FOMA N09A
ユニバーサルシリアルバスコントローラ or USB (Universal Serial Bus) コントローラ	FOMA N09A

NOTE

 When you check the above, if not all the driver names appear, follow the uninstall instructions (p.11) to delete the FOMA communication setting file and install the proper file.

Uninstalling the FOMA communication setting file (drivers)

If necessary (when updating the drivers, etc.), uninstall the drivers as follows. The procedure for uninstalling from a Windows Vista machine is described as an example.

- Uninstallation is not available while connecting the FOMA terminal with PC.
- When uninstalling FOMA communication setting file, be sure to log on as Administrator. If you attempt
 to uninstall the file with another account, an error may occur. Contact your PC's manufacturer or
 Microsoft for information on how to set Administrator privileges on your PC.
- If the FOMA terminal and the PC are connected by the FOMA USB Cable with Charge Function 02 (optional), remove the FOMA USB Cable with Charge Function 02
- **Start "プログラムと機能" (Applications and functions) on the Windows**Click "● " → "コントロールパネル" (Control Panel) → "プログラムのアンインストール" (Uninstall a program)

For Windows XP

Click "スタート" (Start) → "コントロールパネル" (Control Panel) → "プログラムの追加と削除" (Add and remove applications)

For Windows 2000

Open "スタート" (Start) → "設定" (Settings) → "コントロールパネル" (Control Panel) → "アプリケーションの追加と削除" (Add and remove applications)

Select "FOMA N09A USB" and click "アンインストールと変更" (Uninstall/Change) and then "続行" (Continue)

For Windows XP

Select "FOMA N09A USB" and click "変更と削除" (Change and delete)

For Windows 2000

Select "FOMA N09A USB" and click "変更と削除" (Change and delete)

- Click "OK" to uninstall
 To cancel uninstallation, click "キャンセル" (Cancel).
- Click "はい" (Yes) to restart Windows Now the uninstallation is completed. If you click "いいえ" (No), restart Windows manually.

NOTE

- When "FOMA N09A USB" is not displayed in the "プログラムと機能" (Applications and functions) on the Windows, perform the following procedure:
 - ①Insert the "CD-ROM for N-09A" in the CD-ROM drive of your PC

②Open "@"→"コンピュータ" (Computer)

For Windows XP, open "スタート" (Start) → "マイコンピュータ" (My Computer)

For Windows 2000, open "マイコンピュータ" (My Computer) on the desktop

③Right-click the CD-ROM icon and select "開く" (Open)

④Open "N-09A_USB_Driver" → "Drivers" → "WinVista32" folder in the CD-ROM

For Windows XP and Windows 2000, open "N-09A_USB_Driver" \to "Drivers" \to "Win2k_XP" folder $\mbox{\cite{Constraints}}$ The property of the

*: It is displayed as "n09a_un" depending on the setting of your PC.

Preparing Bluetooth Communication

Perform data communication by connecting a Bluetooth communication compatible PC to the FOMA terminal wirelessly.

Register and connect the PC to the FOMA terminal

To connect a PC to the FOMA terminal for the first time, register the PC to the FOMA terminal.

- The FOMA terminal changes to the Bluetooth standby mode, and " (blue)" appears on the display.
 - The FOMA terminal changes to the Bluetooth standby mode, and " (3) (blue)" appears on the display. If no communication is established for about 5 minutes, the Bluetooth standby mode is released automatically.
- Search and register the Bluetooth device from the PC
 Register the device from the PC while the FOMA terminal is in Bluetooth standby mode.
 Refer to the instruction manual of your PC for details on operating it. (Depending on the instruction manual, "探索" (Search) or "サーチ" (Search) is used instead of "検索" (Search), and "ペアリング" (Pairing) is used "機器登録" (Register devices).)
- Select "YES" when the message informing the device registration appears
- Enter Bluetooth passkey [Set]
 The PC is registered, and the PC is connected to the FOMA terminal wirelessly. When the connection is established, " (blue)" flashes on the display.
- To connect to the registered PC

Select "Accept dialup devices" on the FOMA terminal, and then perform connection operations on the PC.

You can also connect the FOMA terminal to the registered PC by selecting "LifeKit" Bluetooth" "Accept registered" and confirming "Dial-up" is in standby mode, then performing connection operation on the PC.

Check the modem setting

Before setting communication, confirm the modem name and the COM port number for the dial-up connection.

- Select "②" → "コントロールパネル" (Control Panel)
 For Windows XP
 - TO WINDOWS XI

Select "スタート" (Start) → "コントロールパネル" (Control Panel)

For Windows 2000

Select "スタート" (Start) → "設定" (Settings) → "コントロールパネル" (Control Panel)

Open "システムとメンテナンス" (Systems and maintenance) in the "コントロールパネル" (Control Panel)

For Windows XP

Click the "システム" (System) icon in "パフォーマンスとメンテナンス" (Performance and maintenance)

For Windows 2000

Open "システム" (System) in the "コントロールパネル" (Control Panel)

- Select "デバイスマネージャ" (Device Manager) and click "続行" (Continue)
 For Windows XP and Windows 2000

 Click the "ハードウェア" (Hardware) tab and click "デバイスマネージャ" (Device manager)
- Click each device to check the modem name and the COM port number The modem name and the COM port number are displayed under "ポート (COMとLPT)" (Ports (COM&LPT)) and "モデム" (Modem).

Stopping the dial-up connection service


Stop the dial-up connection service being connected.

- "LifeKit" Bluetooth" "Device list"
- Select the Bluetooth device being connected "Dial-up" "YES"

DOCOMO Connection Manager

"DOCOMO Connection Manager" is a useful software for performing the flat-rate data communications and the measured-rate data communications. "DOCOMO Connection Manager" enables simplification of mopera U subscription, or appropriate setting on PC depending on the subscription.

The fare counter function is also available for checking an indication of the data traffic or usage amount.

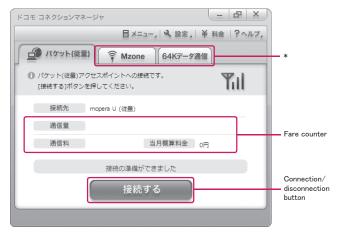

*: Will not be displayed by default. For details, refer to "ドコモ コネクションマネージャのヘルプ" (DOCOMO Connection Manager help).

This document describes procedures to install DOCOMO Connection Manager.

NOTE

 To connect the FOMA terminal to the Internet, signing in to the Internet service provider including mopera U is required, which provides the available service and supports data communication. For more information, see DOCOMO website.

Use of measured-rate data communications (including "Pake-Houdai" and "Pake-Houdai full")

Note that the communication charge can become expensive if "packet communication" is used to communicate large volumes of data such as to view sites and websites containing images or to download files. Note that data communication with a PC using a USB Cable is out of the FOMA packet flat-rate services, such as flat-rate plans in "Pake-Houdai", "Pake-Houdai full", "Biz-Houdai", and upper limit data plan in "Biz-Houdai double".

Use of flat-rate data plan

Subscribing the flat-rate data plan requires the customers to sign in to the Internet service provider with subscription of the price plan supporting the flat-rate data communication. For more information, see DOCOMO website.

Use of mopera

For the connection settings, see mopera website. http://www.mopera.net/mopera/support/index.html (in Japanese only)

Before installing DOCOMO Connection Manager

- Check the followings before installing DOCOMO Connection Manager.
 - ① Prepare the FOMA terminal, and FOMA USB Cable with Charge Function 02 (optional) or FOMA USB Cable (optional)
 - ② Confirm the services and contract details with the Internet Service Provider
 - ③When the connection software other than DOCOMO Connection Manager is installed, disable it if necessary
 - "Other connection software than DOCOMO Connection Manager" →p.15

Setting for Internet Explorer

Before installing DOCOMO Connection Manager, set the Internet option for connection in Internet Explorer.

- **1** Start Internet Explorer to select "ツール" (Tool) → "インターネットオプション" (Internet option)
- Click "接続" (Connect) tab and select "ダイヤルしない" (Not dialing)





Other connection software than DOCOMO Connection Manager

- DOCOMO Connection Manager provides the same functions as the ones included in other connection software listed below, and this is all you need. Disable or uninstall the following software, if necessary.
 - mopera U start up tool
 - mopera U connection & setting tool
 - FOMA PC setting software
 - FOMA byte counter
- Uninstall the following public wireless LAN connection software if Mzone (public wireless LAN connection) is used through DOCOMO Connection Manager. The simultaneous use prohibits Mzone connection through DOCOMO Connection Manager.
 - U public wireless LAN utility software
 - DOCOMO public wireless LAN utility software
 - DOCOMO public wireless LAN utility program

NOTE

• If no MSXML6 · Wireless LAN APIs are available in your Windows XP environment, install them before DOCOMO Connection Manager. When the confirmation screen appears on MSXML6 · Wireless LAN APIs installation, click "Install" to proceed it. Restart Windows after completion of installing MSXML6 · Wireless LAN APIs, and DOCOMO Connection Manager is automatically installed.

Installing DOCOMO Connection Manager

- When installing "DOCOMO Connection Manager", be sure to log on as Administrator. If you attempt
 to install the software with another account, an error may occur. Contact your PC's manufacturer or
 Microsoft for information on how to set Administrator privileges on your PC.
- Before starting the installation, make sure that no other program is currently running or resident. If there is any program running, exit the program before installation.
- Insert the CD-ROM in the CD-ROM drive of the PC

This screen will automatically appear.



- Oclick "インターネット接続" (Internet connection)
- Click "インストール" (Install) of "②FOMA通信設定ファイルとドコモ コネクションマネージャのインストール" (②Install the FOMA communication setting file and DOCOMO Connection Manager) under "本CD-ROMからのFOMAデータ通信の設定方法" (Setting FOMA data communication using this CD-ROM), and click "続行" (Continue)

Click "インストールする" (Install) when you install DOCOMO Connection Manager just after the installation of FOMA communication setting file. → p.9
For Windows XP and Windows 2000, you need not click "続行" (Continue).

- M Click "次へ" (Next)
- **G** Confirm the precautions and click "次へ" (Next)
- Upon confirming the user agreement, click "使用許諾契約の条項に同意します" (Agree) to agree to it, and click "次へ" (Next)
- Select the installation location and click "次へ" (Next)

 If you want to change the location, click "変更" (Change), specify the location and click "次へ" (Next).
- Click "インストール" (Install)
- Click "完了" (Finish)

Starting DOCOMO Connection Manager

Start DOCOMO Connection Manager

For Windows Vista and Windows XP

Open "⑥" or "スタート" (Start) → "すべてのプログラム" (All programs) → "NTT DOCOMO" → "ドコモ コネクションマネージャ" (DOCOMO Connection Manager) → "ドコモ コネクションマネージャ" (DOCOMO Connection Manager)

For Windows 2000

Open "スタート" (Start) → "プログラム" (Program) → "NTT DOCOMO" → " ドコモ コネクションマネージャ" (DOCOMO Connection Manager) → " ドコモ コネクションマネージャ" (DOCOMO Connection Manager)

Specify the settings by following the setting wizard

The setting wizard will automatically appear when you start DOCOMO Connection Manager for the first time.

Follow the guidance and you can make preparations for Internet connection.

For details, refer to "ドコモ コネクションマネージャ 操作マニュアル" (DOCOMO Connection Manager operating manual).



Executing Set Data Communication

- Start DOCOMO Connection Manager
 "Starting DOCOMO Connection Manager" → p.17
- Olick the tab of the desired connection method, and click "接続する" (Connect)

For details, refer to "ドコモ コネクションマネージャ 操作マニュアル" (DOCOMO Connection Manager operating manual).

When connection is not available, check "Setting up Dial-up Network" (p.19) and "Setting up Dial-up" (p.26).

 During packet communication, a different icon appears on the FOMA terminal depending on the communication conditions.



- (Communicating, sending data)
- (Communicating, receiving data)
- (Communicating, no data transfer)
- (Sending, or disconnecting)
- (Receiving, or disconnecting)
- " 4 " appears on the FOMA terminal during 64K data communication.




NOTE

 When executing data communication by using the FOMA USB Cable with Charge Function 02 (optional), to connect the PC to another FOMA terminal, the FOMA communication setting file (drivers) must be installed again.

How to disconnect

Just closing the browser or mailer on your PC does not disconnect the communication line. When you do not perform data communication, be sure to disconnect by the following procedure:







NOTE

- With Windows OS, software will be automatically updated if set to do so, and you may incur high packet communications charges without knowing you are doing so.
- The communication speed displayed on the PC may be different from the actual communication speed.

Setting up Dial-up Network

This section describes how to set up a dial-up connection for packet communication / 64K data communication without using DOCOMO Connection Manager. The flow of operation is described below

It is unnecessary to set up the dial-up network for 64K data communication. Go on to "Setting up Dial-up" (p.26).

About AT commands

- AT commands are commands for modem control. The FOMA terminal complies AT commands and supports some enhanced commands and its own AT commands.
- Entering an AT command allows you to set or confirm (display) the detail settings and the contents of the settings for the "Data communication" and FOMA terminal.

Checking the COM port

To set up the access point (APN), you need to specify the COM port number assigned to "FOMA N09A" (Modem) built in after installing the FOMA communication setting file (drivers). This section describes how to confirm the COM port number. The COM port confirmed here will be used in the access point (APN) set up (p.22).

Preparation

This section takes the setting using the FOMA USB Cable with Charge Function 02 for example. When you connect using Bluetooth communication, see p.12.


- Connect the FOMA USB Cable with Charge Function 02 (optional) to the FOMA terminal
- Turn on the FOMA terminal, then connect the FOMA USB Cable with Charge Function 02 connected to the FOMA terminal to your PC
- To check the COM port on Windows Vista
- ____Open "⊚"→ "コントロールパネル" (Control Panel)
- ② Open "ハードウェアとサウンド" (Hardware and Sound) → "電話とモデムのオプション" (Telephone and modem options) in Control Panel
- ❸ If the "所在地情報" (Address information) screen is displayed, enter "市外局番/エリアコード" (Area code) and click "OK"

Click the "モデム" (Modem) tab to confirm the COM port of the "接続先" (Access point) column of "FOMA N09A" and click "OK"

When connecting wirelessly using Bluetooth communication, confirm the COM port number of the in-use Bluetooth linked standard modem or Bluetooth modem provided by a Bluetooth device maker in the "接続先" (Access point) column.


The COM port confirmed here will be used in the access point (APN) set up (p.22).

The contents displayed on the screen and the COM port number differ depending on the PC.

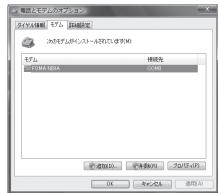

To check the COM port on Windows XP

Open "スタート" (Start) → "コント ロールパネル" (Control Panel)

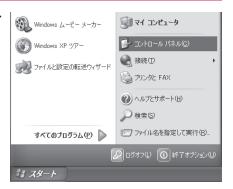

Open "電話とモデムのオプション" (Telephone and modem options) from "プリンタとその他のハードウェア" (Printers and other hardware) in Control Panel



❸ If the "所在地情報" (Address information) screen is displayed, enter "市外局番/エリアコード" (Area code) and click "OK"

Click the "モデム" (Modem) tab to confirm the COM port of the "接続先" (Access point) column of "FOMA N09A" and click "OK"

When connecting wirelessly using Bluetooth communication, confirm the COM port number of the in-use Bluetooth linked standard modem or Bluetooth modem provided by a Bluetooth device maker in the "接続先" (Access point) column.


The COM port confirmed here will be used in the access point (APN) set up (p.22).

The contents displayed on the screen and the COM port number differ depending on the PC.



To check the COM port on Windows 2000

- Open "スタート" (Start) → "設定" (Settings) → "コントロールパネル" (Control Panel)
- Open "電話とモデムのオプション" (Telephone and modem options) in Control Panel

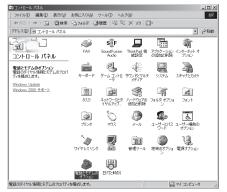

- **3** If the "所在地情報" (Address information) screen appears, enter "市外局番" (Area Code) and click "OK"
- Click the "モデム" (Modem) tab to confirm the COM port of the "接続先" (Access point) column of "FOMA N09A" and click "OK"

When connecting wirelessly using Bluetooth communication, confirm the COM port number of the Bluetooth modem provided by a Bluetooth device maker in the "接続先" (Access point) column.

The COM port confirmed here will be used in the access point (APN) set up (p.22).

The contents displayed on the screen and the COM port number differ depending on the PC.



Setting up the access point (APN)

Default setting cid1: mopera.ne.jp cid3: mopera.net cid2, 4 to 10: not set

Communication software to enter AT commands is required for the settings. This section describes how to set it up using "Hyper terminal" that comes with Windows.

 Windows Vista is not compatible with "Hyper terminal". For Windows Vista, set with compatible software. (Follow the instructions for the setting of the software.)

Access points <APN/cid>

- Normal telephone numbers are not used for access points for packet communication unlike 64K data communication. Set up APN instead of a telephone number for connection.
- The APN setting is just like registering a Phonebook for packet communication from a PC. Assign registration number (cid) 1 through 10 to register, which is used as a part of the access point number. As the APN of mopera "mopera.ne.jp" is assigned to cid1 and APN of mopera U "mopera.net" to cid3 by default, assign the APN to cid2 or between cid4 to cid10.*1
- APN is administered by "cid (administration numbers 1 through 10)". Specifying " * 99 * * * <cid number> # " as the access point number enables the connection to the access point with the cid number.
- Specifying "*99***1#" as the access point number for the mopera connection or "*99***3
 #" for the mopera U connection enables you to use mopera or mopera U easily.*2
- The APN setting registers the access point to the FOMA terminal just like registering other parties' information (telephone number, etc.) on a mobile phone. The following are comparisons with the Phonebook of the mobile phone:

		APN setting	Phonebook of mobile phone
Data to be registe	ered	APN	Phone number
		cid	Memory number of Phonebook
		_	Other party's name
How to register	Register using PC	O (DOCOMO Connection Manager, etc.)	O (Dedicated software required)
	Register using Mobile phone	× (Cannot even confirm)	0
How to use		Specify cid to connect	Look up Phonebook to call
		_	Enter the telephone number directly from the dial key on the FOMA terminal to call.

- Registered cid will be connection numbers in the dialup connection settings.
- Contact your Internet service provider or network administrator for an access point (APN) other than mopera U or mopera.
- *1: Set up the APN setting for the access point (Internet service provider) on the FOMA terminal in advance instead of entering APN in the Telephone Number column of "ダイヤルアップネットワーク" (Dial-up Network) for connection.
- *2: To connect to other Internet service providers, set the APN and assign it to cid2 or cid4 to cid10.

<Example: Using the FOMA USB Cable with Charge Function 02 on Windows XP>

- Connect the FOMA USB Cable with Charge Function 02 (optional) to the FOMA terminal
- Turn on the FOMA terminal, then connect the FOMA USB Cable with Charge Function 02 connected to the FOMA terminal to the PC

3 Click "スタート" (Start) → "すべてのプログラム" (All programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ハイパーターミナル" (Hyper terminal) to start Hyper terminal

For Windows 2000

Open "スタート" (Start) \rightarrow "プログラム" (Programs) \rightarrow "アクセサリ" (Accessories) \rightarrow "通信" (Communication) \rightarrow "ハイパーターミナル" (Hyper terminal).

- Select the "今後、このメッセージを表示しない" (Do not display this message again) checkbox and then click "はい" (Yes)
- **5** Enter any name in the "名前" (Name) column and click "OK"

"sample" is entered here as an example.



6 Select "FOMA N09A" from "接続方法" (Connection method), and click

Click "キャンセル" (Cancel) after the connection screen appears.

If a COM port of "FOMA N09A" can be selected

When Properties of the COM port is displayed, click "OK".

In this example, "COM3" is selected. See "Checking the COM port" (p.19) to confirm the actual COM port number of "FOMA N09A" to be selected in "接続方法" (Connection method).

If a COM port of "FOMA N09A" cannot be selected

Click "キャンセル" (Cancel) to close the "接続の設定" (Connection Settings) screen and then follow the steps below:

- (1) Select "ファイル" (File) menu → "プロパティ" (Properties)
- (2) Select "FOMA NO9A" in the "接続方法" (Connection method) column of the "接続の設定" (Connection Settings) tab on the "sampleのプロパティ" (sample Properties) screen
- (3) Uncheck "国/地域番号と市外局番を使う" (Use the Country/Region Code and Area Code)
- (4) Click "OK"





Enter the access point (APN) and press

Enter in the format of AT+CGDCONT=<cid>, "PDP_type", "APN"

<cid> Enter any number from 2 or between 4 and 10.


Please be cautious because if cid has been already set, the setting will be overwritten. "PDP_type": Enter "PPP" or "IP".

"APN": Put " " around the access point (APN) to enter.

If "OK" is displayed, the settings for the access point (APN) are completed.

Example: To enter APN named XXX.abc in cid Number2

Enter AT+CGDCONT=2, "PPP", "XXX.abc" ...

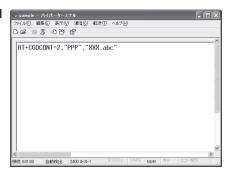

Confirm that "OK" appears and click "ハイパーターミナルの終了" (Close Hyper terminal) in the "ファイル" (File) menu

""sample" と名前付けされた接続を保存しますか? " (Are you going to save the connection "sample"?) appears, but it is not necessary to save.

NOTE

- To reset the access point (APN) settings using the AT command
 - · If reset, the access point (APN) setting with cid=1 will return to "mopera.ne.jp" (Default value) and cid=3 to "mopera.net" (Default value), and cid=2, 4 through 10 will be unregistered.

<How to enter>

AT+CGDCONT= (to reset all cid)

- To confirm the access point (APN) settings using the AT command
 - · Display the current settings.

<How to enter>

AT+CGDCONT?

Notifying or Not notifying the Caller ID

- You can set whether to notify the other person of your caller ID when packet communication is carried
 out. Since the caller ID is important information, please take care when you send your caller ID.
- You can set up the Notify or not notify Caller ID setting using the AT command prior to a dial-up connection.
- Use the * DGPIR command (p.38) to notify or not notify the caller ID or change back to "Not set" (Default value).
- Start "ハイパーターミナル" (Hyper terminal)
 For how to start Hyper terminal, see "Setting up the access point (APN)" (p.22).
- Set up Notify (186) or Not notify (184) Caller ID for packet communication

Enter in the format of "AT * DGPIR=< n >".

To automatically attach 184 (Not notify) for dialing an outgoing call/answering an incoming call


Enter the following:

AT * DGPIR=1


To automatically attach 186 (Notify) for dialing an outgoing call/answering an incoming call

Enter the following:

AT * DGPIR=2

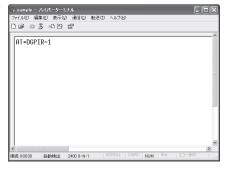

Confirm that "OK" appears and click "ハイパーターミナルの終了" (Close Hyper terminal) in the "ファイル" (File) menu

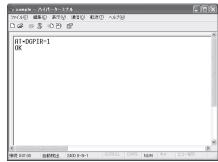

NOTE

● The Caller ID needs to be set to "Notify" to use DOCOMO's internet connection service mopera U or mopera.

About 186 (Notify)/184 (Not notify) in Dial-up Network

You can attach 186/184 to the access point number in the Dial-up network settings as well. The following table shows what happens if you set 186/184 both for the \star DGPIR command and the Dial-up network setting.

Dial-up network setting (for cid=1)	Notify/Not notify setting by * DGPIR command	Notify/Not notify Caller ID
	Not set	Notify
* 99 * * * 1#	Not notify	Not notify
	Notify	Notify
	Not set	Not notify (Dial-up network notification 184 has the
184 * 99 * * * 1#	Not notify	priority)
	Notify	
	Not set	Notify (Dial-up network notification 186 has the
186 * 99 * * * 1#	Not notify	priority)
	Notify	

Setting up Dial-up

- This section takes accessing mopera U by packet communication for example.
- To connect using packet communication, enter " * 99 * * * 3#" as the number of access point for mopera U or " * 99 * * * 1#" for mopera. To connect using 64K data communication, enter " * 8701" as the number of access point for mopera U or " * 9601" for mopera.

Setting up dial-up on Windows Vista

- Open "◎" → "接続先" (Access point)
- ② Click "接続またはネットワークをセットアップします" (Set up the connection or network)
- Select "ダイヤルアップ接続をセットアップします" (Set up dial-up connection) and click "次へ" (Next)
- If the modem selection screen appears, click "FOMA N09A モデム" (FOMA N09A modem)

When connecting wirelessly using Bluetooth communication, click the in-use Bluetooth linked standard modem or Bluetooth modem provided by a Bluetooth device maker.

The modem selection screen appears only if there are multiple modems.



5 Select the "ダイヤルアップの電話番号" (Phone number for dial-up) and enter the number of the access point

You can leave user name and password blank for mopera U or mopera connection.

To connect to any other provider than mopera U or mopera, enter the user name and password specified by the provider or network administrator in the "ユーザー名" (User Name)

administrator in the "ユーザー名" (User Name) and "パスワード" (Password) columns as this screen.

This screen is an example of accessing mopera U by packet communication.



- **6** Click "接続" (Connect) and then click "スキップ" (Skip) To confirm the settings, cancel a connection test.
- Click "接続をセットアップします" (Set up the connection) and then "閉じる" (Close)
- Open "⊚"→ "接続先" (Access point)

Pight-click the icon created for the dial-up and click "プロパティ" (Properties)



Confirm the settings on the "全般" (General) tab


If two or more modems are connected to the PC

When connecting using the FOMA USB Cable with Charge Function 02, confirm that only "モデムーFOMA N09A" (Modem - FOMA N09A) is checked in the "接続の方法" (Connection method) column.

When connecting wirelessly using Bluetooth communication, confirm that only "モデム (Modem) - the name of the in-use Bluetooth linked standard modem or Bluetooth modem provided by a Bluetooth device maker" is checked in the "接続の方法" (Connection method) column.


If it is not checked, check it.

Confirm that "ダイヤル情報を使う" (Use Dial Information) is unchecked. If not, uncheck it.




Check only "インターネット プロトコルバージョン4 (TCP/IPv4)" (Internet Protocol version 4 (TCP/IPv4)) in the "この接続は次の項目を使用します" (Use the following items for this connection). Check "QoS パケットスケジューラ" (QoS Packet Scheduler) and other items if instructed by the provider.



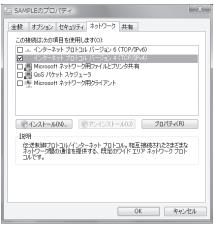

【 Click the "オプション" (Options) tab and click "PPP設定" (PPP settings)

Clear all the boxes and click "OK"



Click "OK"

Setting up dial-up on Windows XP

- **1** Open "スタート" (Start) → "すべてのプログラム" (All programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "新しい接続ウィザード" (New connection wizard)
- When the "新しい接続ウィザード" (New Connection Wizard) screen appears, click "次へ" (Next)



- Select "インターネットに接続する" (Connect to the Internet) and click "次へ" (Next)
- Select "接続を手動でセットアップする" (Set up the connection manually) and click "次へ" (Next)
- **Select** "ダイヤルアップモデムを使用して接続する" (Connect using a dial-up modem) and click "次へ" (Next)
- If the "デバイスの選択" (Select the device) screen appears, select only "モデムーFOMA N09A (COMx)" (ModemーFOMA N09A (COMx)), and click "次へ" (Next)

When connecting wirelessly using Bluetooth communication, select the in-use Bluetooth linked standard modem or Bluetooth modem provided by a Bluetooth device maker.

provided by a Bluetooth device maker.

The "デバイスの選択" (Select the device) screen appears only if there are multiple modems. (COMx) is a number of COM port displayed in "Checking the COM port" (p.19).



Enter any name you want in the "ISP 名" (ISP Name) and click "次へ" (Next)



Benter the number of the access point in the "電話番号" (Telephone Number) column and click "次へ" (Next)

This screen is an example of accessing mopera U by packet communication.



- Click "次へ" (Next)
 - You can leave user name and password blank for mopera U or mopera connection.

To connect to any other provider than mopera U or mopera, enter exact information specified by the provider or network administrator in the "ユーザー名" (User Name), "パスワード" (Password) and "パスワードの確認入力" (Confirm Password) columns as this screen.







① Open "スタート" (Start) → "すべてのプログラム" (All programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ネットワーク接続" (Network connections)

Select the icon created for the dialup and open "プロパティ" (Properties) in the "ファイル" (File) menu



Confirm the settings on the "全般" (General) tab

If two or more modems are connected to the PC


When connecting using the FOMA USB Cable with Charge Function 02, confirm that only "モデム – FOMA N09A" (Modem - FOMA N09A) is checked in the "接続方法" (Connection method) column.

When connecting wirelessly using Bluetooth communication, confirm that only "モデム (Modem) - the name of the in-use Bluetooth linked standard modem or Bluetooth modem provided by a Bluetooth device maker" is checked in the "接続方法" (Connection method) column.

If it is not checked, check it.

Confirm that "ダイヤル情報を使う" (Use Dial Information) is unchecked. If it is checked, uncheck it.

This screen is an example of accessing mopera U by packet communication.

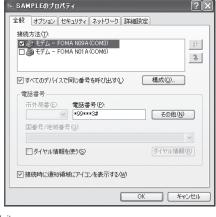

Click the "ネットワーク" (Network) tab and set up each setting

Select "PPP: Windows 95/98/NT4/2000, Internet" in the "呼び出すダイヤルアップサー バーの種類" (Type of the dial-up server to call).

Select "インターネットプロトコル (TCP/IP)" (Internet Protocol (TCP/IP)) in the "この接続は次の項目を使用します" (Use the following items for this connection). Since the setting of "QoSパケットスケジューラ" (QoS Packet Scheduler) cannot be changed, leave it as it is.



- 15 Click "設定" (Settings)
- Clear all the boxes and click "OK"



When the Step 14 screen reappears, click "OK"

Setting up dial-up on Windows 2000

- 1 Open "スタート" (Start) → "プログラム" (Programs) → "アクセサリ" (Accessories) → "通信" (Communication) → "ネットワークとダイヤルアップ接続" (Network and Dial-up connections)
- 2 Double-click "新しい接続の作成" (Create a new connection) in Network and Dial-up Connections



❸ If the "所在地情報" (Address information) screen appears, enter "市外局番" (Area Code) and click "OK"

The "所在地情報" (Address Information) screen appears only when "新しい接続の作成" (Create a new connection) is started for the first time in Step 2.


This screen does not appear from the second time on, but the "ネットワークの接続ウィザード" (Network Connection Wizard) screen does instead, proceed to Step 5.

- When the "電話とモデムのオプション" (Telephone and Modem options) screen appears, click "OK"
- When the "ネットワークの接続ウィザード" (Network Connection Wizard) screen appears, click "次へ" (Next)
- 6 Select "インターネットにダイヤルアップ接続する" (Connect to the Internet via dial-up) and click "次へ" (Next)
- **7** Select "インターネット接続を手動で設定するか、またはローカルエリアネットワーク (LAN) を使って接続します" (Set up an internet connection manually or connect using Local Area Network (LAN)) and click "次へ" (Next)
- Select "電話回線とモデムを使ってインターネットに接続します" (Connect to the internet using a telephone line and a modem) and click "次へ" (Next)
- Offirm that the "インターネットへの接続に使うモデムを選択する" (Select the modern used to connect to the internet) has "FOMA N09A" and click "次へ" (Next)

If "FOMA N09A" is not selected, select "FOMA N09A".

When connecting wirelessly using Bluetooth communication, select the Bluetooth modem provided by a Bluetooth device maker.


This screen appears only when two or more modems have been installed.

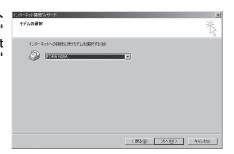

Enter the number of the access point in the "電話番号" (Telephone number) column and click "詳細設定" (Advanced settings)


Uncheck "市外局番とダイヤル情報を使う" (Use Area Code and Dial information).

This screen is an example of accessing mopera U by packet communication.

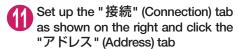

To connect to any other provider than mopera U or mopera, enter exact information specified by the Internet service provider or network administrator in "接続の種類" (Connection Type) and "ログオンの手続き" (Logon Procedure).



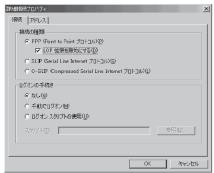

Set up the IP address and DNS (Domain Name Service) address on the "アドレス" (Address) tab as shown on the right and click "OK"

To connect to any other provider than mopera U or mopera, enter exact information specified by the Internet service provider or network administrator in "IPアドレス" (IP address) and "ISPによる DNS(ドンインネームサービス)アドレスの自動割り当て" (Automatically assign DNS (Domain Name Service) by ISP).



- When the screen returns to Step 10, click "次へ" (Next)
- Click "次へ" (Next)
 You can leave user name and password blank for mopera U or mopera connection.

To connect to any other provider than mopera U or mopera, enter exact information specified by the Internet service provider or network administrator in "ユーザー名" (User Name) and "

administrator in "ユーザー名" (User Name) and " パスワード" (Password) columns as this screen.



Enter any name you want in the "接続名" (Connection name) and click "次へ" (Next)



- The Select "いいえ" (No) and click "次へ" (Next)
- Click "完了" (Finish)
- Select the icon created for the dial-up and open "プロパティ" (Properties) in the "ファイル" (File) menu



(General) tab

If two or more modems are connected to the PC

When connecting using the FOMA USB Cable with Charge Function 02, confirm that only "モデムーFOMA N09A" (Modem - FOMA N09A) is checked in the "接続の方法" (Connection method) column.

When connecting wirelessly using Bluetooth communication, confirm that only "モデム (Modem) - the name of the Bluetooth modem provided by a Bluetooth device maker" is checked in the "接続の方法" (Connection method) column.

If it is not checked, check it.

Confirm that "ダイヤル情報を使う" (Use Dial Information) is unchecked. If not, uncheck it.


SAMPLEのプロパティ 全般 オブション | セキュリティ | ネットワーク | 共有 | 接続の方法(T) ☑ 🔊 モデム – FOMA N09A (COM3) □ 🚵 モデム – FOMA N01A (COM6) D. □ すべてのデバイスで同じ番号を呼び出す(D) 構成(○)... FOMA NO9Aの電話番号 電話番号(P): *99***3# その他(N) 国番号/地域番号(U): 「 ダイヤル情報を使う(S) ▽ 接続時にタスク バーにアイコンを表示する(W) OK キャンセル

This screen is an example of accessing mopera U by packet communication.

Click the "ネットワーク" (Network) tab and set up each setting

Select "PPP: Windows 95/98/NT4/2000, Internet" in the "呼び出すダイヤルアップサー バーの種類" (Type of the dial-up server to call).

Check only "インターネットプロトコル (TCP/IP) " (Internet Protocol (TCP/IP)) for components.

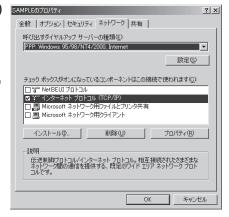

- Click "設定" (Settings)
- Clear all the boxes and click "OK"



When the Step 20 screen reappears, click "OK"

Running dial-up connection

This section describes how to make a dial-up connection for packet communication by using the dialup setting.

<Example: Using the FOMA USB Cable with Charge Function 02 on Windows Vista>

Connect the FOMA terminal to the PC with the FOMA USB Cable with Charge Function 02 (optional)

"Connecting the devices" → p.7

Open "圖" → "接続先" (Access point)

Select the access point and click "接続" (Connect)



Confirm the settings and click "ダイヤル" (Dial)

This screen is an example for mopera U connection. You can leave user name and password blank for mopera U or mopera connection.



<The Connecting screen appears>

While this screen appears, the log-on process such as confirmation of the user name and password is performed.



<Completion of the connection>

When the connection is complete, a screen indicating the completion of the connection appears.

Click "閉じる" (Close). (Depending on the OS, a message appears from the indicator of the taskbar located on the bottom-right of the desktop for a few seconds.)

You can start browser software to view sites and websites or to use e-mail.

When connection is not available, check "Setting up Dial-up Network" (p.19) and "Setting up Dial-up" (p.26).

See p.18 for communication conditions.

How to disconnect

Just closing the Internet browser may not disconnect the communication line. Follow the instructions below to disconnect for sure. This section describes an example using Windows Vista.



For Windows XP and Windows 2000

Click the dial-up icon in the task-tray

The connection condition screen for Internet will be displayed.

Olick "切断" (Disconnect)

NOTE

• The communication speed displayed on the PC may be different from the actual communication speed.

When this happens

Check the followings if you cannot connect to the network or dial-up successfully.

Problem	Points to check
"N-09A" is not recognized by the PC.	Check if your PC satisfies the required operational environment (p.4). Check if the FOMA terminal is connected to the PC and the power is turned on. When using the FOMA USB Cable with Charge Function 02 (optional)> Check if the FOMA communication setting file (drivers) is installed. Check if the FOMA USB Cable with Charge Function 02 (optional) is firmly connected. Check if the USB mode setting (p.7) is set to "Communication mode". When using Bluetooth communication> Check if the Bluetooth device is connected to the FOMA terminal via dial-up communication service.
Unable to connect with the access point.	 Check if the settings for the ID (user name) and password are correct. If the access point requires the Caller ID, make sure that "184" is not added to the phone number. Check if the box of "フロー制御を使う" (Use the flow control) of the modern property is checked. Check if the APN is set correctly. If you still cannot connect to the other end after checking the above, consult with the Internet service provider or network administrator about the setting method.

AT Command List

AT commands available on FOMA terminal

The following abbreviations are used in the AT command list;

[&F] : Command of which setting is initialized by AT&F command.

[&W] : Command of which setting is saved by AT&W command. The setting can be retrieved by ATZ command.

 When you make a call via an external device or using AT command, the call is made from Number A in A mode/Dual mode, and from Number B in B mode.

Modem port command list

The followings are the usable commands for "FOMA N09A (モデム)" (modem):

 When you execute commands via Bluetooth connection, a single-byte space is inserted after each ":" in the results.

AT command	Outline	Parameter/description	Command execution example
A/	Executes the last executed command again. No carriage return is necessary.	_	A/ OK
AT	_	The modem function of a FOMA terminal is controllable by adding the command of this table after this command. * OK is answered even when only AT is entered.	AT OK
AT%V	Displays the version of the FOMA terminal.	_	AT%V Ver1.00 OK
AT&C <i>n</i> [&F] [&W]	Selects the operating condition of the circuit CD signal to DTE.	 n=0 : CD is always ON. n=1 : CD changes according to the carrier of the other party's modern (initial value). 	AT&C1 OK
AT&D <i>n</i>	Selects the operation to take place when the circuit ER signal received from DTE transits between ON and OFF.	In = 0 : Ignores ER status (always assumed to be ON). In = 1 : When ER changes from ON to OFF, it becomes an on-line command status. In = 2 : If ER changes from ON to OFF, a connection is disconnected and it will be in	AT&D1 OK
[&F] [&W] AT&E <i>n</i>	Selects how to display the connection speed.	an off-line command status (initial value). n=0 : Displays the wireless network transmission speed. n=1 : Displays the DTE serial transmission	AT&E0 OK
AT&Fn	Restores all of registers to their defaults. If this command is input during communication, the line will be disconnected.	speed (initial value). Only $n=0$ can be specified (can be omitted).	(At the time of off-line mode) AT&F OK AT&F? ERROR AT&F = ? ERROR (At the time of on-line command mode) AT&F NO CARRIER (Change to off-line mode)
AT&S <i>n</i>	Sets the Data Set Ready signal to be output to DTE.	n=0 : DR is always ON (initial value). n=1 : DR signal is ON when the line is connected (when the communication	AT&S0 OK
[&F] [&W]		call is established).	

AT command	Outline	Parameter/description	Command execution example
AT&W <i>n</i>	Stores the current settings.	Only $n=0$ can be specified (can be omitted).	AT&WO OK AT&W OK AT&W? ERROR AT&W=? ERROR
AT * DANTE	Displays the FOMA terminal signal reception level.	FOMA terminal signal reception level is displayed as out of area. FOMA terminal signal reception level is 0 or 1 bar. FOMA terminal signal reception level is 2 bars. FOMA terminal signal reception level is 3 bars.	AT * DANTE * DANTE:3 OK AT * DANTE = ? * DANTE:(0-3) OK
AT * DGANSM= <i>n</i>	Sets the reject/permit mode setting for the packet incoming call. This command is effective for those incoming packet calls after the setting command is input.	Disables the incoming call reject (AT * DGAPL) (initial value). Enables the incoming call reject setting. Enables the incoming call permit setting. AT * DGANSM? Displays the current setting.	AT * DGANSM=0 OK AT * DGANSM? * DGANSM:0 OK
AT * DGAPL=n [,cid]	Sets APN, which permits incoming packet calls, by using <cid> parameter defined by +CGDCONT</cid>	 n=0 : Adds the APN defined by <cid>to incoming call permission list.</cid> n=1 : Deletes the APN defined by <cid>from incoming call permission list.</cid> If <cid> is omitted, this will apply to all cid.</cid> AT * DGAPL? : Displays incoming call permission list. 	AT * DGAPL = 0, 1 OK AT * DGAPL? * DGAPL:1 OK AT * DGAPL = 1 OK AT * DGAPL? OK
AT * DGARL=n[.cid]	Sets APN, which rejects incoming packet calls, by using <cid> parameter defined by +CGDCONT</cid>	 n=0: Adds the APN defined by <cid>to incoming call rejection list.</cid> n=1: Deletes the APN defined by <cid>from incoming call rejection list.</cid> If <cid>is omitted, this will apply to all cid.</cid> AT * DGARL? Displays incoming call rejection list. 	AT * DGARL = 0,1 OK AT * DGARL? * DGARL:1 OK AT * DGARL = 1 OK AT * DGARL? OK
AT * DGPIR=n	This command validates the setting for notifying Caller ID when sending/receiving packet communication. Even in the dial up network setting, you can also add 186 (notify) or 184 (not notify) to the access point number. (p.24)	 n=0 : Uses APN as it is (initial value). n=1 : Uses APN by adding "184". (Caller ID is always not sent.) n=2 : Uses APN by adding "186". (Caller ID is always sent.) AT * DGPIR? ∴ Displays the current setting. 	AT * DGPIR =0 OK AT * DGPIR? * DGPIR:0 OK
AT * DRPW	Displays the indicator value of the receiving power of the FOMA terminal.	-	AT * DRPW * DRPW:0 OK AT * DRPW=? * DRPW:(0-75) OK
AT+CAOC	Inquires for the current charge.	-	AT+CAOC +CAOC:"000014" OK

AT command	Outline	Parameter/description	Command execution example
AT+CBC	Displays the battery status of the FOMA terminal.	Result: +CBC: cbcs: 0 : FOMA terminal is powered by the battery. 1 : FOMA terminal is not powered by the battery. 2 : FOMA terminal is not connected to the battery. 3 : FOMA terminal is out of transmission due to the power-supply error. bcl: 0 : Battery has run out, or battery is not connected. 1-100 : Battery remained	AT+CBC +CBC:0,70 OK AT+CBC? ERROR AT+CBC=? +CBC:(0-3),(0-100) OK
AT+CBST [&F] [&W]	Changes the bearer service type.	Format: AT+CBST= ¬=116: 64,000bps (bit transparent) (initial value) ¬=134: 64,000bps (multimedia)	AT+CBST=134,1,0 OK AT+CBST? +CBST:134,1,0 OK AT+CBST=? +CBST:(116,134), (1),(0) OK
AT+CDIP= <i>n</i>	Sets whether to notify the called sub address for the incoming call. Inquires for Multi number subscription.	 n=0: Not notify the called sub address (initial value). n=1: Notify the called sub address. AT+CDIP? Displays the current setting. +CDIP:n,m m=0: You do not subscribe to Multinumber.	AT+CDIP=0 OK AT+CDIP? +CDIP:0,1 OK
[&F] [&W]		m=1: You subscribe to Multi number. m=2: Unknown	
AT+CEER	Displays the reason for disconnection of the previous call.	Result: +CEER: <report> report: List of disconnection reasons (p.50).</report>	AT+CEER +CEER:36 OK
AT+CGDCONT	Sets the access point name (APN) for packet origination.	p.47	p.47
AT+CGEQMIN	Registers a criterion to be used to decide whether or not to allow the QoS (quality of service) that is informed from the network side when PPP packet communication is established.	p.47	p.47
AT+CGEQREQ	Sets the QoS (quality of service) to be requested to network when originating a PPP packet communication.	p.48	p.48
AT+CGMR	Displays the version of the FOMA terminal.	_	AT+CGMR 12345xxxxxxxxxx OK
AT+CGREG=n [&F] [&W]	Specifies whether to notify the network registration condition. The returned notification displays whether you are inside or out of service.	n=0 : Not informed (initial value). n=1 : Informed. Informed when switching between "Inside the service area" and "Outside the service area" is completed. AT+CGREG? : Displays the current setting. +CGREG : <n>, <stat> n: Set value stat : 0: Out of packet area 1: Within packet area 4: Unknown 5: Within packet area</stat></n>	AT+CGREG=1 OK (Set to informed) AT+CGREG? +CGREG: 1,0 OK AT+CGREG=? +CGREG: (0,1) OK (Outside the service area) (When you move from "outside the service area" to "inside the service area".) +CGREG:1
AT+CGSN	Displays the product number of the FOMA terminal.	_	AT+CGSN 12345xxxxxxxxxx OK

AT command	Outline	Parameter/description	Command execution example
AT+CLIP=n	Displays the other party's Caller ID on a PC when a 64K data communication	n=0: Not display the result (initial value) n=1: Display the result	AT+CLIP=0 OK
	call is received.	AT+CLIP? : Displays the current setting. +CLIP:n,m	AT+CLIP? +CLIP:0,1 OK
		 m=0: NW setting not notifying the other party of the Caller ID in outgoing call. m=1: NW setting notifying the other party of the Caller ID in outgoing call. m=2: Unknown 	(A call is received wher +CLIP=1 is set) RING +CLIP:
[&F] [&W]		The Late of the La	"090XXXXXXX",177, "123",136
AT+CLIR= <i>n</i>	Sets whether or not to notify the other party of the phone number when originating a 64K data communication call.	n=0: Complies to the CLIR service contract. n=1: Not notify the other party of the caller's phone number. n=2: Notify the other party of the caller's	AT+CLIR=0 OK AT+CLIR? +CLIR:0,1
	Call.	phone number (initial value).	OK
		AT+CLIR? Displays the current setting. +CLIR:n,m m=0: CLIR is not started (Caller ID is	AT+CLIR=? +CLIR:(0-2) OK
		always sent) m=1: CLIR is started (Caller ID is always not sent) m=2: Unknown	
		m=3 : CLIR temporary mode (default is not notify) m=4 : CLIR temporary mode (default is notify)	
AT+CMEE=n	Sets whether the error report of the FOMA terminal is present.	n=0: Use the ERROR result (initial value). n=1: +CME ERROR: <err> result code is used, and a numeral value is used for <err>.</err></err>	AT+CMEE=0 OK AT+CNUM ERROR
		n=2: +CME ERROR: <err> result code is used, and characters are used for <err>. AT+CMEE?</err></err>	AT+CMEE=1 OK AT+CNUM +CME ERROR:10
		Displays the current setting. The command displayed on the right is the execution example for cases when there is a FOMA terminal problem or a connection error.	AT+CMEE=2 OK AT+CNUM +CME ERROR:SIM no inserted
		+CME ERROR result code is as follows. 1: no connection to phone 10: SIM not inserted	
[&F] [&W]		15 : SIM wrong 16 : incorrect password 100 : unknown	
AT+CNUM	Displays the own number of the FOMA terminal.	Result: +CNUM:, <number>,<type> number: phone number type : 129 or 145 129 : International access code (+) is not</type></number>	AT+CNUM +CNUM:,"+8190XXXX XXX",145 OK
		included. 145 : International access code (+) is included.	

AT command	Outline	Parameter/description	Command execution example
AT+COPS	Selects the network operator to connect.	Format: AT+COPS= <mode>,2,<oper> mode=0: automatic (searches the network and switches the network operator automatically) mode=1: manual (connects to the network operator specified in <oper> mode=2: Disconnects the connection to the network operator mode=3: Mapping is not performed. mode=4: manual/automatic (if the connection to the network operator specified in <oper> oper> fails, works as automatic mode.)</oper></oper></oper></mode>	AT+COPS=0 OK AT+COPS? +COPS:0 OK AT+COPS=? +COPS:(2,,,"44F001"), (3,,,"44F002"),,(0,1,3),(2) OK
		<oper> is a hexadecimal value which consists of Country code (MCC) and Network code (MNC). The format is as follows: Digit 1 of MCC · · · octet 1 bits 1 to 4 Digit 2 of MCC · · · octet 1 bits 5 to 8 Digit 3 of MCC · · · octet 2 bits 1 to 4 Digit 3 of MNC · · · octet 2 bits 5 to 8 Digit 2 of MNC · · · octet 3 bits 5 to 8</oper>	
AT+CPAS	Displays whether the control signal to the FOMA terminal is available or not.	Result: +CPAS: <pas> pas: 0 : FOMA terminal can send/receive control signal. 1 : FOMA terminal can not send/receive control signal. 2 : Unknown (control signal sending/receiving is not assured). 3 : FOMA terminal can send/receive control signal and it is currently receiving. 4 : FOMA terminal can send/receive control signal and it is currently communicating.</pas>	AT+CPAS +CPAS:0 OK AT+CPAS? ERROR AT+CPAS=? +CPAS:(0-4)

AT command	Outline	Parameter/description	Command execution example
AT+CPIN	Enters the PIN code in the FOMA terminal.	Format: AT+CPIN=" <pin>","<newpin>" This command is to enter the PIN1, PIN2, or PUK code - depending on the state of the result code returned when AT+CPIN? is entered - of the FOMA terminal. Even if PIN code entry or the PUK code is requested on the screen, depending on the state of the result code when AT+CPIN? is entered, you may not be able to use this command to enter the PIN. Do not use this command to enter the PIN. Do not use this command to return the PIN. To not use this command to return the PIN? AT+CPIN? result +CPIN: READY: PIN1 code, PIN2 code Cannot enter the PUK1 or PUK2 code +CPIN: SIM PIN: PIN1 entry standby +CPIN: SIM PIN2: PIN2 entry standby +CPIN: SIM PUK2: PIN2 blocked (Can enter PUK1 code) +CPIN:SIM PUK2: PIN2 blocked (Can enter PUK2 code) The command displayed on the right is an entry sample of PIN code "1234" and PUK code "12345678".</newpin></pin>	(The status in which +CPIN: READY is answered when +CPIN? is entered) AT+CPIN="1234" ERROR (The status in which +CPIN: READY is answered when +CPIN? is entered) AT+CPIN="12345678", "1234" ERROR (The status in which +CPIN: SIM PIN is answered when +CPIN? is entered) AT+CPIN="12345678", "1234" OK (The status in which +CPIN: SIM PUK is answered when +CPIN? is entered: PIN1 lock status) AT+CPIN="12345678", "1234" OK (The status in which +CPIN: SIM PUK is answered when +CPIN? is entered: PIN1 lock status) AT+CPIN="12345678", "1234" OK (The status in which +CPIN: SIM PUK2 is answered when +CPIN? is entered: PIN2 lock status) AT+CPIN="12345678", "1234" OK AT+CPIN="12345678", "1234" OK AT+CPIN="12345678", "1234" OK
AT+CR= <i>n</i> [&F] [&W]	When the line is connected, displays the bearer service type before the CONNECT result code is displayed.	n=0: Not display (initial value). n=1: Display. <serv>: Displays only "GPRS", which means packet communication. (Displaying "SYNC" or "AV64K" depending on the line type.) AT+CR?: Displays the current setting.</serv>	AT+CR = 1 OK ATD * 99 * * * 1# +CR : GPRS CONNECT
AT+CRC= <i>n</i> [&F] [&W]	Sets whether to use the extended result code for the incoming call.	 n=0: Not use +CRING (initial value). n=1: Use +CRING. type>. Format of +CRING: +CRING: SYNC +CRING: AV64K : GPRS "PPP" ,,, "<apn>"</apn> AT+CRC? : Displays the current setting. 	AT+CRC=0 OK AT+CRC? +CRC:0 OK (PPPoverUD received) +CRING:SYNC (AV64K received) +CRING: AV64K (PPP packet received) +CRING: GPRS *PPP" ,,, *(APN)*

AT command	Outline	Parameter/description	Command execution example
AT command AT+CREG=n [&F] [&W] AT+CUSD	Outline Specifies whether the result screen is present regarding the inside/outside the service area information display. This setting may not be available depending on the Operating System. Specifies or inquires for the network setting regarding the additional services.	Parameter/description n=0: Not informed (initial value). n=1: Informed. Informed when switching between "Inside the service area" and "Outside the service area" is complete. AT+CREG? : Displays the current setting. +CREG : <n> <n> <stat> n: Set value stat: 0: Outside voice call area 1: Inside voice call area 4: Unknown 5: Inside voice call area Format: AT+CUSD=<n>, "<str> "[,0] n=0: Does not send mid result</str></n></stat></n></n>	Command execution example AT+CREG=1 OK (Set to informed) AT+CREG? +CREG: 1,0 OK (Outside the service area) (When you move from outside the service area to inside the service area.) +CREG: 1 AT+CUSD=0, "xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx
[&F] [&W]	the additional services.	n=0 : Does not send mid result xm>[<str>, <dc>] (initial value) n=1 : Sends mid result <m>[<str>, <dc>] Mid result:</dc></str></m></dc></str>	1 * 0000#",0 +CUSD:0,"148 * 7#",0 OK AT+CUSD:0 OK AT+CUSD:0 OK AT+CUSD =? +CUSD:(0,1)
AT+FCLASS=n	Sets the communication class supported by the	n=0 : data is only supported. (initial value)	AT+FCLASS=0 OK
[&F] [&W] AT+GCAP	FOMA terminal. Displays the supported area for the AT commands available for the FOMA terminal.	Result: +GCAP: <area/> , <area/> , <area/> area: +CGSM: Some or all GSM commands are supported. +FCLASS: +FCLASS command is supported. +W: +W command is supported.	AT+GCAP +GCAP;+CGSM,+FCL ASS,+W
AT+GMI	Displays the manufacturer name.	-	AT+GMI NEC OK
AT+GMM	Displays the FOMA terminal product name (FOMA N09A).	-	AT+GMM FOMA N09A OK
AT+GMR	Displays the version of the FOMA terminal.	_	AT+GMR Ver1.00 OK
AT+IFC=n,m	Selects the flow control method.	n : DCE by DTE m: DTE by DCE 0: No flow control 1: XON/XOFF flow control. 2: RS/CS (RTS/CTS) flow control. initial value: n,m = 2, 2 AT+IFC?: Displays the current setting.	AT+IFC=2,2 OK AT+IFC? +IFC: 2,2 OK AT+IFC=? +IFC: (0,1,2) ,(0,1,2)
[&F] [&W]			OK
AT+WS46	Displays the wireless communication network of the FOMA terminal.	12 : GSM/GPRS fixed mode 22 : 3G fixed mode 25 : Auto mode	AT+WS46? 25 OK

AT command	Outline	Parameter/description	Command execution example
AT¥S	Displays the contents of commands and S registers currently set.		AT¥S E1 Q0 V1 X4 &C1 &D2 &S0 &E1 ¥V0 S000=000 S002=043 S003=013 S004=010 S005=008 S006=005 S007=060 S008=003 S010=001 S030=000 S103=001 S104=001 OK
AT¥V <i>n</i> [&F] [&W]	Selects the response code specification for connecting the line.	 n=0 : Not use extended result code (initial value). n=1 : Use extended result code. 	AT¥V0 OK
ATA	Handles the incoming call process according to the mode received by the FOMA terminal.	-	RING ATA CONNECT
ATD	Handles the automatic calling process for the FOMA terminal according to the specified parameters and dial parameters.	ATD * 99 * * * < cid># : Packet communication < cid> 1 to 10: displays APN with + CGDCONT setting. AT+CBST=116,1,0 ATD <phone number=""> : 64K communication AT+CBST=134,1,0</phone>	<packet communication=""> ATD * 99 * * * 1# CONNECT <64K communication> AT+CBST=116,1,0 OK ATD090xxxxxxx CONNECT <av64k communication=""></av64k></packet>
		ATD <phone number=""> : AV64K communication</phone>	AT+CBST=134,1,0 OK ATD090xxxxxxx CONNECT
ATE <i>n</i> [&F] [&W]	Selects whether the echo back is present for DTE in the command mode.	n=0 : Echo back absent. n=1 : Echo back present (initial value).	ATE1 OK
ATH <i>n</i>	Performs on-hook operation for the FOMA terminal.	n=0 : Disconnect the line (can be omitted).	(During packet communication) +++ OK ATH NO CARRIER
ATI <i>n</i>	Displays the ID code.		ATIO NTT DOCOMO OK ATI1 FOMA N09A OK
ATO <i>n</i>	Returns from the online command mode to the online data mode during communication.	n=0 : Returns from online command mode to online data mode (can be omitted).	ATO CONNECT
ATQ <i>n</i>	Specifies whether or not to display the result code for DTE.	n=0 : Displays the result code (initial value).n=1 : Not display the result code.	ATQ0 OK ATQ1 (At that time, OK is not
[&F] [&W]			returned.)

AT command	Outline	Parameter/description	Command execution example
ATS0=n	Specifies how many times the FOMA terminal rings before it automatically receives a call.	n=0 : No automatic answer (initial value). n=1-255: A call is automatically answered after the specified number of rings.	ATS0=0 OK ATS0? 000
[&F] [&W]		ATS0?: Displays the current setting.	OK
ATS2= <i>n</i>	Sets an escape character.	 n=43 : Initial value. n=127 : Escapes processing is invalid. ATS2? : Displays the current setting. 	ATS2=43 OK ATS2? 043 OK
ATS3=n	Sets a carriage return (CR) character.	 n=13 : Initial value (Only n=13 can be specified). ATS3? : Displays the current setting. 	ATS3=13 OK ATS3?
[&F]			OK
ATS4=n	Sets a line feed (LF) character.	 n=10 : Initial value (Only n=10 can be specified). ATS4? : Displays the current setting. 	ATS4=10 OK ATS4? 010
[&F]			OK
ATS5= <i>n</i>	Sets a backspace (BS) character.	n=8 : Initial value (Only n=8 can be specified). ATS5? : Displays the current setting.	ATS5=8 OK ATS5? 008 OK
ATS6= <i>n</i>	Sets the pause time (second) until a dial starting.	This command can be set but cannot be operated.	ATS6=5 OK ATS6? 005 OK ATS6=? ERROR
ATS8= <i>n</i>	Sets the pause time (second) by using the comma dial.	This command can be set but cannot be operated.	ATS8=3 OK ATS8? 003 OK ATS8=? ERROR
ATS10= <i>n</i>	Automatic disconnection delay time setting. (1/10 second)	This command can be set but cannot be operated.	ATS10=1 OK ATS10? 001 OK ATS10=? ERROR
ATS30=n	Disconnects the line when there is no user data exchange for the time set in this command.	n=0: Inactive timer off (initial value) $n=0$ - 255 Where n is the number of minutes.	ATS30=0 OK ATS30? 000 OK
[&F] ATS103= <i>n</i>	Sets the called sub address	<i>n</i> =0 : *	ATS30=? ERROR ATS103=0
	character.	$n=1$: / (initial value) $n=2$: \(\neq (\neq \text{mark or back slash})	OK ATS103? 000 OK ATS103=?
[&F]			ERROR

AT command	Outline	Parameter/description	Command execution example
ATS104= <i>n</i>	Sets the calling sub address character.	n=0: # $n=1$: % (initial value) $n=2$: &	ATS104=0 OK ATS104? 000 OK
[&F]			ATS104=? ERROR
ATV <i>n</i>	Specifies whether the result code is returned in numerals or alphabets.	 <i>n</i>=0 : Returns the result code in numeral value. <i>n</i>=1 : Returns the result code in characters 	ATV1 OK
[&F] [&W] ATX/7	Specifies whether the speed indication is present in the CONNECT display when connecting the line. Also detects a busy tone or a dial tone.	(initial value). n=0: Without dial tone detection; without busy tone detection; without speed display. n=1: Without dial tone detection; without busy tone detection; with speed display. n=2: With dial tone detection; without busy tone detection; with speed display. n=3: Without dial tone detection; with busy tone detection; with speed display. n=4: With dial tone detection; with busy tone detection; with busy tone detection; with busy tone detection; with speed display. (initial value)	ATX1 OK
ATZ	Resets the current setting to the contents of the non- volatile memory. If this command is input during communication, the line will be disconnected.	_	(Online command mode) ATZ NO CARRIER (Offline command mode) ATZ OK
+++	In response to the escape sequence, the online data mode changes to the online command mode while maintaining the line connection.	-	(Online data mode) +++ (No display) OK

Supplementary explanation of AT command

■ Commands which do not function

The following commands do not generate errors but will not function as a command:

- ATT (Tone setting)
- · ATP (Pulse setting)

■ Command name: +CGDCONT=[parameter]

Outline

Sets the access point name (APN) for packet origination.

Though this command is a setting command, it will not be recorded in non-volatile memory written by [&W], nor reset by [&F] or [Z].

Format

```
+CGDCONT=[ <cid>[ ,"<PDP_type>"[ ,"<APN>"] ] ]
```

· Explanation of the parameters

Sets the access point name (APN) for packet origination. See the following command execution example:

```
<cid>*1 : 1 ~ 10
<PDP type>*2 : PPP or IP
```

<APN>*3 : Anv value

<APN> . Any value

- *1 : <cid> is a number for managing the access point name (APN) registered in the FOMA terminal for a packet communication. For the FOMA terminal, you can register from number 1 to 10. As "mopera.ne.jp" is assigned to <cid>=1 and "mopera.net" is assigned to <cid>=3 by default, assign to cid2 or cid4 to cid10.
- *2 :<PDP_type> is the connection method. For the FOMA terminal, you can specify PPP or IP. PPP is assigned to <cid>=1 and IP is assigned to <cid>=3 by default.
- *3 : <APN> is an arbitrary character string indicating each access point name.

· Operation performed when the parameter is omitted

- +CGDCONT=: Sets the initial value to all <cid>.
- +CGDCONT=<cid>: Sets the specified <cid> to the initial value.
- +CGDCONT=?: Displays a list of values that can be set.
- +CGDCONT?: Displays the current setting.

· Command execution example

Command for registering an APN name of abc (when cid is 2).

AT+CGDCONT=2,"PPP","abc"

Ok

■ Command name: +CGEQMIN=[parameter]

Outline

Registers a criterion to be used to decide whether or not to allow the QoS (quality of service) that is informed from the network side when PPP packet communication is established.

There are 4 setting patterns as described in the following command execution example.

Though this command is a setting command, it will not be recorded in non-volatile memory written by [&W], nor reset by [&F] or [Z].

Format

+CGEQMIN=[<cid>[,,<Maximum bitrate UL>[,<Maximum bitrate DL>]]]

· Explanation of the parameters

<cid>*1 : 1~10

<Maximum bitrate UL>*2 : None (initial value) or 384

<Maximum bitrate DL>*2 : None (initial value) or 7,232

- *1 :<cid> is a number for managing the access point name (APN) registered in the FOMA terminal for a packet communication.
- *2 : <Maximum bitrate UL> and <Maximum bitrate DL> set the minimum communication speed (kbps) of uplink and downlink between the FOMA terminal and base station. When it is set to "None" (initial value), all speeds will be permitted, but when set to 384 or 7,232, a connection at a speed of other values will not be permitted, and a packet communication may not be connected.

Operation performed when the parameter is omitted

+CGEQMIN= : Sets the initial value to all <cid>.

+CGEQMIN=<cid>: Sets the specified <cid> to the initial value.

+CGEQMIN=? : Displays a list of values that can be set.

+CGEQMIN?: Displays the current setting.

· Command execution example

Only the following 4 patterns can be set. (1) is set as an initial value to each cid.

- Command for permitting all speeds of both uplink and downlink (when cid is 2) AT+CGEQMIN=2 OK
- (2) Command for permitting only the speed of uplink 384kbps and downlink 7,232kbps (when cid is 4) AT+CGEQMIN=4,,384,7232 Ok
- (3) Command for permitting uplink 384kbps and all speeds of downlink (when cid is 5). AT+CGEQMIN=5,,384 OK
- (4) Command for permitting all speeds of uplink and only 7,232kbps of downlink (when cid is 6) AT+CGEQMIN=6,,,7232

Command name: +CGEQREQ=[parameter]

Outline

Sets the QoS (quality of service) to be requested to network when originating a PPP packet communication. For setting, only the following pattern in the command execution example can be set, which is also set as an initial

Though this command is a setting command, it will not be recorded in non-volatile memory written by [&W], nor reset by [&F] or [Z].

Format

+CGEQREQ=[<cid>]

· Explanation of the parameters

<cid>* : 1 to 10

*: <cid> is a number for managing the access point name (APN) registered in the FOMA terminal for a packet communication.

· Operation performed when the parameter is omitted

+CGEQREQ= : Sets the initial value to all <cid>.

+CGEQREQ=<cid>: Sets the specified <cid> to the initial value.

+CGEQREQ=?: Displays a list of values that can be set.

+CGEQREQ? : Displays the current setting.

· Command execution example

Only the following 1 pattern can be set. This is set to each cid as an initial value. Command for requesting a connection at a speed of uplink 384kbps and downlink 7,232kbps (when cid is 2). AT+CGEQREQ=2

OK

Saving modem port command setting value

The values set by AT commands are initialized every time the power of FOMA terminal is turned on or off, except the access point name (APN) set by AT+CGDCONT command (p.22), QoS setting by AT+CGEQMIN/AT+CGEQREQ command, permit or reject incoming call setting by AT * DGAPL/AT * DGARL/AT * DGANSM command, the setting for specifying sending/not sending caller ID of packet communication set by AT * DGPIR command and the setting for specifying sending/not sending caller ID of 64K data communication set by AT+CLIR command. However, you can save the values set by commands with [&W] if you enter

AT&W

after the setting. In this case, other set values with [&W] will also be saved. These values can be retrieved by entering ATZ

even after the power is turned on or off.

Result codes

Result codes related with data communication

Number indication	Character indication	Description
0	OK	Successfully executed.
1	CONNECT	Connected.
2	RING	Incoming call.
3	NO CARRIER	Line disconnected.
4	ERROR	Command not acceptable.
6	NO DIALTONE	Unable to detect dialing tone.
7	BUSY	Busy tone detected.
8	NO ANSWER	Time out in connection completing.
100	RESTRICTION	Network restricted.
101	DELAYED	Redialing restricted.

Extended result codes

• &E0

Number indication	Character indication	Description
122	CONNECT 64000	Connected between the FOMA terminal and base station at 64,000bps.
125	CONNECT 384000	Connected between the FOMA terminal and base station at 384,000bps.
133	CONNECT 3648000	Connected between the FOMA terminal and base station at 3,648,000bps.
135	CONNECT 7232000	Connected between the FOMA terminal and base station at 7,232,000bps.

• &E1

Number indication	Character indication	Description
5	CONNECT 1200	Connected between the FOMA terminal and PC at 1,200bps.
10	CONNECT 2400	Connected between the FOMA terminal and PC at 2,400bps.
11	CONNECT 4800	Connected between the FOMA terminal and PC at 4,800bps.
13	CONNECT 7200	Connected between the FOMA terminal and PC at 7,200bps.
12	CONNECT 9600	Connected between the FOMA terminal and PC at 9,600bps.
15	CONNECT 14400	Connected between the FOMA terminal and PC at 14,400bps.
16	CONNECT 19200	Connected between the FOMA terminal and PC at 19,200bps.
17	CONNECT 38400	Connected between the FOMA terminal and PC at 38,400bps.
18	CONNECT 57600	Connected between the FOMA terminal and PC at 57,600bps.
19	CONNECT 115200	Connected between the FOMA terminal and PC at 115,200bps.
20	CONNECT 230400	Connected between the FOMA terminal and PC at 230,400bps.
21	CONNECT 460800	Connected between the FOMA terminal and PC at 460,800bps.

■ Communication protocol result codes

Number indication	Character indication	Description
1	PPPoverUD	Connected by PPPoverUD (BC=UDI, +CBST=116,1,0)
3	AV64K	Connected by AV (Videophone) [64K]
5	PACKET	Connected by Packet

NOTE

- The result code appears as character indication (default value) when ATVn command (p.46) is set to n=1, and as number indication when the command is set to n=0.
- Though the communication speed appears in order to maintain a compatibility with the modem connected by traditional RS-232C, it differs from the actual connection speed because the FOMA terminal and PC are connected via FOMA USB Cable with Charge Function 02 (optional) or via Bluetooth Communication.
- "RESTRICTION" (Number indication: 100) indicates that the network is congested. If this is displayed, wait for a
 while and then try again.

Result code display example

■ When ATX0 is set

Regardless of the AT¥Vn command (p.44) setting, only CONNECT appears when the connection is completed.

Character indication example: ATD * 99 * * * 1#

CONNECT

Number indication example: ATD * 99 * * * 1#

1

■ When ATX1 is set

· ATX1, AT¥V0 are set (default)

Displayed in CONNECT <rate between the FOMA terminal and the PC> format when the connection is completed.

Character indication example: ATD * 99 * * * 1#
CONNECT 460800

Number indication example: ATD * 99 * * * 1#

1 21

· ATX1, AT¥V1 are set *

The following format appears when the connection is completed:

CONNECT <rate between the FOMA terminal and the PC> PACKET <Connecting party's APN>/ <Upstream (the FOMA terminal → Wireless base station) maximum rate>/<Downstream (the FOMA terminal ← Wireless base station) maximum rate>

The following sample indicates that a connection is made to mopera.ne.jp at maximum 384kbps for sending, and maximum 7,232kbps for receiving.

Character indication example: ATD * 99 * * * 1#

CONNECT 460800 PACKET mopera.ne.jp/384/7232

Number indication example: ATD * 99 * * * 1#

1 21 5

*: If both ATX1 and AT¥V1 are set simultaneously, a dial-up connection may not be correctly made. The single setting of AT¥V0 is recommended.

List of disconnection reasons

■ Packet communication

Value	Reason
26 27	Missing or incorrect APN.
30	Activation rejected by the network.
33	Requested service option not subscribed.
36	Disconnected successfully.

■ 64K data communication

Value	Reason
1	The specified number does not exist.
16	Disconnected successfully.
17	Cannot communicate because the other party's line is busy.
18	Dialed, but no response within the specified time.
19	Cannot communicate because the other party is ringing.
21	The other party has rejected the communication.
63	The service or option of the network is not valid.
65	A transmission capacity not provided has been specified.
88	Sent to a terminal with different terminal attributes or received call.

Kuten Code List

Kuten Code List

<Guide to the kuten code table>

First enter "digits 1-3 of the kuten code" then "digit 4".

Some kuten codes in the table here may look different from what actually appear on screens.

First to third digits of Kuten codes	0	1	Four 2	rth di 3	igit o	f Kut	en c	odes 7	8	9	First to third digits of Kuten codes	0	1	Four 2	rth di	igit o	f Ku	ten c	odes 7	8	9	First to third digits of Kuten codes	0	1	Fou 2	rth d	ligit o	f Kut	ten c	odes	8	9
010 011 012 013 014	! ~	\(\bar{\chi_{\alpha\}}\)		°, " ~	- 、 全=〔	: 々ー〕	 د ڏ	: 0	; ;	?	075 076 077 078	б к ф ю	В Л Х Я	Г М Ц	Д Н Ч	е о ш	ё п щ	ж р ъ	Ы З	И Т Ь	й У Э	191 192 193 194 195	蟹慨馨拡赫	開概蛙撹較	階涯垣格	貝碍柿核	凱蓋蛎殼	劾街鈎獲	外該劃確	咳鎧嚇穫岳	害骸各骨	崖浬廓角額
015 016 017 018	<+ All \$	> 8 ¢	£.∵£) × 3 %		=	[,≠ ,*]	§ 0 √ 1	Ĭ ≦ ¥	080 081 082 083	_ -	<u>+</u>	<u>-</u> ++	F	_ - - -	7	⊢ ⊢ ⊢	+	F	+ + T +	196 197 198 199	炒顎恰叶噛	較掛括椛鴨粥勧	郭笠活樺栢刈巻感汗	閣樫渇鞄茅苅喚慣漢	^隔 橿滑株萱	梶葛兜		_	割且釜	喝鰹鎌
019 020 021 022 023 024	★ → ⊂	○ ◆ ←	1 1 0 1	○		▲ ⇒	▽ ∈ ⇔	▼ ∋ ∀	* ⊆	∓ ⊇	130 131 132 133 134	(10) (20) X (10) (10) (10) (10) (10) (10) (10) (10)	Ī	2 1 1 1 1 1 1 1 1 1 1 1 1	3 13 #□ Fル	4 4 W W W W W W W W W W W W W W W W W W	(5)(15) V (元)(15)	VI 75	∭ VII VI	VIII ℤ	9 19 IX 22 24 CM	200 201 202 203 204 205	勘幹款竿諌錦	患歓管胃	簡環	緩鑑	缶問	乾姦換潅翰閑玩	完敢環	冠官柑甘艦陥眼	寛桓監莞韓	刊干棺看観館
026 027 028 029		∞	 Å	∂ ∫ ‰	⊅ \\#⊝	≡ b	≒ ♪	≪ †	» ‡	√ ¶	135 136 137 138 139	(⊕ ⊕	Æ J U	CC 報 看	/(株) Σ	#(有) √	(代)	KK. 贻 ∠		田 四	206 207 207 208 209	 	凡雁 奇既	含頑 嬉り	寄	廠願 岐棄	<u>+</u>		危忌		器机
031 032 033 034 035 036	4 H R	5 I S	6 J T	7 A K U	8 B L V	9 C M W a	0 DNX b	1 EOY c	2 FPZd	3 GQ e	160 161 162 163 164	葵梓鮎鞍	亜茜圧或杏	唖穐斡粟	娃悪扱袷	阿握	衰渥姐	愛旭虻按	飴	姶芦絢案	逢鯵綾闇	210 211 212 213 214 215	紀鬼	機徽亀	期帰規偽祇喫虚	棋毅記儀義結並	*気貴妓蟻橘丘	汽起宜誼詰力	畿軌戱議砧仇	祈輝技掬杵休	飢擬菊黍	稀騎欺鞠却吸
037 038 039 040 041	f p z お	g q あか	hr あが	is いきし	jt いぎじ	k u うく	- v うぐ	m w えけ	n x えげ	o y おこ	164 165 166 167 168	威移井稲	尉維亥茨飲	以惟緯域芋	伊意胃育鰯	位慰萎郁允蔭韻	依易衣磯印	偉椅謂一咽	壱	夷畏遺溢因	委異医逸姻	216 217 218 219 220	犠吉客宮究巨禦	疑吃脚弓窮拒魚供叫	規偽祇喫虐急笈拠亨侠喬橋鏡曲	儀義桔逆救級挙享僑境況響	4.朽糾渠京兇峡	求給虚 競	以汲旧許 共彊	泣牛距 凶	灸去鋸 協	球居漁
042 043 044 045 046 047	ごぞとひぼゆ	さたどびぽょ	ま	しちにふみらん	ぢぬぶ	すっねぷめる	ずつのへもれ	けせづはべゃろ	ぺや	そでぱほゅわ	169 170 170 171 172					陰韻 窺姥	_	右碓浦	宇臼瓜	烏渦閨	嘘	221 222 223 224 225 226	卿挟蕎業巾芹	叫教郷局錦菌	喬橋鏡曲斤衿	境況響極欣襟	狂饗玉	%強狭驚桐琴近	矯仰粁禁	僅禽	脅尭	恭興暁均緊
048 050 051 052	プ カ オゴ	よゑ アカサタ	よを アガザ	1	1	ゥクス	1 ウグズツ		Т	P オコソデ	173 173 174 175	SE 曳衛	野運 栄詠		荏	餌	を記れ			뢷/	RФ	226 227 228 229	倶駒	句目	区禺	狗虐	玖喰	矩空	苦偶	躯寓	駆	九
053 054 055 056	ゾトヒボ	ドビポ	゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙	キシチニフミラン	ギジヂヌブムリ	ヘッネプメル	ヘツノヘモレ	ハベャ	バペヤ	パホュ	176 177 178	開掩	榎援	近 厭沿薗	在泳液円演遠	洩疫園炎鉛 。	三堰焔鴛	営盈駅奄煙塩				230 231 232	中栗郡	掘繰	窟桑		(J			群	粂 軍
057 058 060 061	ユ# ΚΥ	∃Z A∧	∃ヲ BM	Г	リヴ Δ 三 Ω	ルカ EO	レケ ΖΠ	HP	ワ Θ Σ	ワート	178 179 180 181 182	凹鴎牡	央押黄乙	奥旺岡俺	往横沖卸	応欧荻恩	殴億温	王屋穏	於 翁憶音	汚 襖臆	鴬	232 233 234 235 236	珪携繋鶏傑	卦型敬罫芸欠倦	袈契景茎迎	祁形桂荊鯨潔兼	係径渓蛍劇	恵畦計戟	刑慶稽詣撃の	警激	憩経軽隙	主掲継頭桁
062 063 064 065	θσ	Φ ι τ	Χ κ υ	Ψ α λ φ	Ω β μ χ	Υ ν ψ	δ ξ ω	0	π	η	182 183 184 185	仮家禍蝦	何寡禾	伽科稼嘩	価暇箇	佳果花	加架苛	可歌茄	嘉河荷蚊	夏火華	化嫁珂菓	237 238 239 240 241	検建 眉	憲検見	決健懸権謙	拳牽腎	捲犬軒	剣献遣	血喧 研鍵	訣圏 硯険	堅絹	件嫌 県験
070 071 072 073	ИТЬ	А У Э	Б К Ф Ю	В Л Я	Г М Ц		Е О Ш	ËПЩ		Ы 3	186 187 188 189	蝦我介恢	寡禾課牙会懷望	曲解戒	貨臥回拐	果花迦芽塊改造		廻	蚊雅快	俄餓怪	峨駕悔	242 243 243	鹸絃	元舷	原言	厳諺	限	弦		険源 古井	顕玄 呼湖	現
074										а	190		卍	晦	械	海	火	界	舀	紜	介	244	炉	加		庳	5111	Н	以	竹白	加	717/

First to third digits of Kuten code:	Tourist digit of futeri codes	First to third digits of Kuten codes	0 1			it of Ku		odes 7	8	9	First to third digits of Kuten codes	0	1	Fourth 2 :	digit		en c	odes 7	8	9
245 246 247 248 249 250 251 252	糊顧御乞劝 巧問 羅後翻功 工抗 雇後翻功 工抗 雇後翻功 工抗 雇货商品 工工抗 医白色素 经 计 工机 医角膜炎 化二烷 医二乙烷 医二氯苯甲基二甲基甲基二甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲	315 316 317 318 319 320	須炊瑞椙	図粋崇	厨翠嵩	す 逗 吹 遂	垂	帥錐	笥推	諏水随:	377 378 379 380 381 382 383 384	宕盗答	島淘筒董陶撞匿読	嶋湯糖蕩頭洞得	卓寿充泰騰童恵 投火至討闘童涜	搭燈 謄働胴特	東当 豆動萄督椴	桃痘 踏同道禿	梼祷	棟等 透導峠毒苫
253 254 255 256 257 258 259 260	拘江紅航砿号告忽 昏控洪紘荒鋼合国惚此昆克海綱節降拷酷狛今梱 校硬肱郊鴻麹漉 婚良 使稿腔酵剛克腰 恨魂 極 人名 经 电 电	320 321 322 323 324 325 326 327	勢栖西脆籍接蝉	清誓席脊折	性牲請惜責設	世或生逝戚赤窃占,瀬政盛醒斥跡節宣	整精青昔	星聖静析碩雪	晴声斉石切絶	制棲製税積拙舌戦	385 386 386 387 388	寅頓謎	哲	滞曇捺	頃屯 寄植	な那	敦内縄	注 乍畷	豚 瓜南	
261 261 262 263 264 265	香 性子 医二甲基二甲基 甲基二甲基二甲基二甲基二甲基二甲基二甲基二甲基二甲基二甲基二甲基二	328 329 330 331 332		栓穿羡銭	栴箭腺銑	泉浅解船	洗	梁 詮善	潜熊漸	¥煎 践然 曾	389 390 390 391 392 393	袮粘	寧乃	日尿 葱廼農	孔正 苗之 対な	妊の 年嚢	忍	認捻	濡撚	禰燃能
266 267 268 269 270 271 272	載堺咋鮭 鯖慘際神程色素的 化二甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基	333 334 335 336 337 338 339	曾組倉捜漕草霜	訴壮挿争葬像	阻奏掻痩蒼	陳遡爽燥相藻僧造一 遊鼠宋早窓装 促		総送	粗双惣槍綜遭	素叢想槽聡鎗	393 394 395 396 397 398	波拝倍陪柏	派排培這泊	琶敗媒蝿白	皮不每平笞	牌煤萩舶	把芭背狽伯薄	馬肺買剥	覇俳輩売博曝	杷廃配賠拍漠
273 273 274 275 276 277 278	讃 養 (日姿斯糸誌児 (日姿斯糸誌児 (日姿斯糸誌児 (日姿斯糸誌児 (日姿斯糸誌児 (日姿斯糸誌児	340 341 342 343 344 345 346	捉卒 他柁岱腿	測其 太楕	足揃 汰陀	造速存を記駄態退促俗孫を呼騨戴逮	属尊 堕体	賊損 妥堆泰	族村 惰対滞	息続遜 打耐胎代	399 400 401 402 403 404 405		縛函畠筏反班飯	箱八閥叛	爻谷本鳥凡 咚免	肇発塙斑藩	筈醗蛤板販磐	氾範	幡伐伴汎釆蛮	肌罰判版煩
279 280 281 282 283 284 285	字 耳軸湿腰社外面性 不順室柴斜借 示順室柴斜借 京城 医软骨骨炎 化美霉素 医囊膜 电电阻 电电阻 电电阻 电阻 电阻 电阻 医电阻 医电阻 医电阻 医电阻 医电	347 348 349 350 351 352 353	台宅諾 棚担綻	第択凧但狸旦胆	醍拓蛸達鱈歎蛋	題沢只長樽淡誕鷹濯 奪誰湛鍛	滝琢 脱丹炭	瀧託 巽単短	卓鐸 竪嘆端	2啄濁 辿坦箪断	405 406 407 408 409 410 411	卑比誹枇 肘	否泌費毘鼻弼	疲避琵柊必	化皮脂胃 卑鄙	秘樋 疋逼	扉緋簸 髭桧漂	罷備 彦姫	披肥尾 膝媛	匪斐被微 菱紐
286 287 288 289 290 291 292	尺 表睡經 終輯 秋縣十一次 表睡經 終輯 秋縣珠 经 系等元 人名英格兰 医克里克 医克里克 医克里克 医克里克 医克里克 医克里克 医克里克 医克里	354 355 356 357 358	暖 智畜中註	知 知 筑 由	稚蓄忠	談 置逐油樗	蜘窒	遅茶	馳嫡虫	恥築着衷貯	412 413 414 415 415 416	百評蛭敏 府	謬豹鰭瓶 怖	廟品 不	杉田杉 付数標序 地名	秒浜。夫	漂苗瀕 婦浮	錨貧 富	票鋲賓 富符	表蒜頻 布腐
293 294 295 296 297 298 299	社院成述旬醇署恕 以 以 以 以 以 以 以 以 以 以 以 以 以	359 360 361 362 363	デ 暢調直 暢調直	凋帳潮超	喋庁牒跳	電 弔張 町眺	彫聴頂	徴脹鳥	懲腸勅	挑蝶捗	417 418 419 420 421 422	膚武伏 物	芙舞副福	譜葡復腹分	負無畐复勿 駐部服覆噂	赴封 淵	岸楓 弗憤	附風 払	侮葺 沸	機 機 基 基 基 基 基 基 基 基 基 基 基 基 是 基 是 <p< td=""></p<>
300 301 302 303 304 305	勝匠升召 哨商唱 嘗屎 附 的 由 自 管 探 的 由 自 管 探 服 由 由 的 由 由 的 由 由 的 由 由 的 由 由 的 由 由 的 由 由 的 由 由 的 由 由 的 由 由 的 由 由 的 由 由 的 由 由 的 由 由 的 由 由 的 由 的 由 由 由 由 由 由 由 由 由 由 由 由 由 由 由 由 由 由 由 由	364 365 366 366 367	剃貞	11111111111111111111111111111111111111	蔦 絹 吊 釒	7	椿亭	掴潰	槻坪	椎佃壷 偵弟	422 423 424 425 426	幣僻片鞭		癖乳		瞥遍	閉蔑便	陛箆勉	米偏娩	塀頁変弁
306 307 308 309 310 311 312	確 党 喔 怙 咎	368 369 370 371 372 373	悌艇 的鉄転	挺諦鄭適填点	提蹄釘鏑天伝	定梯逓鼎弱展殿 と	促 摘徹添田	禎 擢撤纏電	柱 敵轍甜	締 滴迭貼	426 427 428 429 430 431 432	穂俸抱 蜂亡	保募包捧法褒傍	舗墓呆放泡訪剖棒吠穆凡	浦虎报与烹豊方圃戊奉那砣邦奴	捕暮宝 経鋒帽	歩母峰 胞飽忘	甫簿峯 芳鳳忙	補苦崩 萌鵬房	輔倣庖 蓬乏暴
313 314 315		373 374 375 376	堵缝纸	斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯	屠役	徒	杜努唐	渡度塔	兎登土塘	菟	433 434 435 436	望鉾牧本	某防睦翻	[棒	1 新山宝	肪僕没	膨ト殆	謀墨堀	貌撲幌	資朴奔

First to third digits of	0	1 F	Four 2	th di	igit o	f Kut	en c	odes	8	9	First to third digits of	0 1	Fo 2	urth d	digit o	of Ku	ten c	odes	8	9	First to third digits of	0	1	Four	th di	git o	f Kut	en c	odes 7	8 9
436 437 438 439 440	昧鱒繭	枚桝麿	毎	哩俣慢	摩槙	磨幕	魔膜		埋鮪	妹柾侭	488 489 490 491 492 493	優傀 童儡兢		皆 個 傳 儉 嚴 兪	修傲僂儁儻兮	偈 僖儂儿冀	做 偽艦兀口	偖 僥儕兒囘	偬 僭儔兌册	偸 僣儚兔冉	564 565 566 567 568 569	信慴憇應懣戉	博慯憬懷懶戍	慂慥憔懈懺戌	慄慱憚懃懴戔	慳慟憊懆懿戛	慷 慝 憑 憺懽	慘慓憫懋懼	慙慵憮罹懾	慚憙懌懍戀
440 441	蜜	湊	蓑	味稔	未脈	魅妙	巳粍	箕民	岬眠	密	494 495 496 497	問ン几刎	12 下下	冲凭	冰凰刳	冤况凵刹	超冽凾剏	冢凅刄剄	寫凉刋剋	幕凛刔剌	570 571 572 573	打抓拆5	戞扣抖擔!	扛拔拈	截扠抃拜	戮扨抔拌!	戦扼拗拊	戲抂拑拂兒	抻拇	扁找拏抛!
441 442 442	夢				è	か				務 冥!	498 499 500 501	副劍 動物	見句的	劑助勠	辨劼勳	剳 券勵L	剿 勁勸	勍勹	劍 勗匆	劔 勞匈區	574 575 576 577	挌捍掉揉	拮搜掟插 增	捏掵揶	挧掖捫揄	挂掎捩摇	掾搴	指搆	捶揀搓	捐掣揆搦螺
443 444 444	免		綿	盟緬	迷面	麺	摸	姪 模儲	茂	妄	502 503 504 505	毎世危厰!! 角匠がム!!	[卆 谷 冬		世厂雙		匣卍厠曼	匯凖厦燮吼	匱卞厥叮咍	匳 卩 厮 叨 !!	578 579 580 581	攝撓 舉擇	搗撥據擠辮	撩擒擡	搏撈擅抬腳	摧撼擇擣醬	撻擯	擘攬	擂擶	攪 擱 攤
445 446 447	五目 紅 紅	七 空門	猛勿匁		網尤、公	tp	蒙籾	員	木問	黙悶	506 507 508 509	叭吩咒咥 呼哈呀	いい	以 吸 险	阿咄恣	咎咐	吭呟咆 宀	呱哇	吮呷咢 🖷	吶 片成 🛚	582 583 584 585	擺攵敞斷四	攀攷敝旃冒	收敲	攘攸數旁昊	攜畋斂旄冒	攅效斃旌冒	變旒	敕斛旛	攫敍斟旙?
447 448 449	矢鑓			約	ŀ	役訳	爺躍	事	野柳	弥薮	510 511 512 513 514		医呼吸	哭咬雷	啾	冯 哢 唸 喘 臂	哘唹唳唧嘎		哦啣喙啼啱	唏啌喀喃嗚	586 587 588 589 590	旡昜晟曁	早晏哲暹喵	晄晰曉	晉暃暾)	暎	香畫暉 t	晤喧 🔅	親 時 陽 日 日 日 日 日 日 日 日 日 日 日 日 日 日 日 日 日 日
450 451 452	1	諭憂	輸揖	油唯有遊	癒 枯 村 起	湧	勇涌雄	友猶融	宥猷タ	幽由	515 516 517 518	喻嘔嘴嚀嚼	喧响 噻	嗾 嚔	嗽噫嚏	嗟嘛噤嚥囎	嗄嗹嘯嚮囑	嗜噎噬嚶囓	嗤噐噪嚴□	嗔營嚆囂囮	591 592 593 594	曳朶枉枷	曄曷杁杰柯	朏朸枩	曖朖朷杼柬	曚朞杆杪枳:	曠朦杞枌柩	昿朧杠枋栒	霸杙枦	襄朮杣枡柞
452 453 454 455 456	余揚窯養	揺	擁耀	曜葉	預楊蓉沃	要	幼洋謡翌	妖溶踊翼	容熔遥淀	予庸用陽	519 520 521 522 523	囹 坏坿埔	国國坎坦坦	国 国 国 国 田 田 田 田 田 田 田 田 田 田 田 田 田	圉圓址垳埖	團坏垤埣	圖坩	嗇埀垰堙	圜垈埃堝		595 596 597 598 599	弧抵桀梟梵椢	己拙桍梏梠椦	枹栲梭梺	《柎桎梔椏椌棕:	以拉梳條梍棍	柧 栫棚	檜桙	栞档檮	1框桷梹椈
456 457 458	螺乱	裸卵	来嵐	莱欄	頼濫	雷藍	洛蘭		落	羅酪	524 525 526 527 528	堡墟壗壻夭奢	登埃重惠	壞壥欠	毀墻壜夂竒	塒墸壤敻奕	堽墮壟夛奐	塹壅壯梦奎	墅壓壺夥奚	墹壑壹夬奘	600 601 602 603 604	棹楷楙榿	棔棠楜椰槁	棯楸楡	棕椨楫楞榾	椶椪楔楝槎	椒椚楾榁寨	接椣楮楪槊	椡椹	棣棆楴榮榻 概極橡棋槃
458 459 460 461 462	葎:	痢掠	裏略	理裡劉侶	璃里流慮	溜	陸琉虐	律留っ	利率硫	吏 立粒僚	529 530 531 532 533	奢 姜婀嫋	- 姓姆姆	妝號	佞娥娶	侫娟婢嫦	妣娑婪嫩	妲娜媚煙	姆娉媼嫺	姨娚媾嫻	605 606 607 608 609	椎樛樔樶	樮槿槫橸檠	權樊橇	榠槹樒橢綠	榜槲櫁橙檣	榕槧樣橦	榴樅樓橈	榱橄	槨樞樌檐
463 464 465	両温	凌良	寮諒	心料遼燐	思梁量琳 る	涼	虜猟領輪	了療力隣	売瞭緑鱗	原稜倫麟	534 535 536 537	^网 嬌孀學寔 ^反 妇子多寐	夏子 孺	嬲字点	嫐孛	婦嬪孥宦寞	网嬶孩宸寥	嫖嬾孰寃寫	孃孳寇寰	孅孵寉窨	610 611 612 613	檍 櫑欖歉	※檗櫟鬱歐	蘗檪欟	檢檻櫚欸歔	恒櫃櫪欷敛	櫂櫻盜歟	檸欅欹歡	檳蘗飮歸	檬 標 場 数 多
466 467 468 469 470	嶺齡漣	怜暦煉	歴		類苓劣聯	令鈴烈	伶隷裂	例零廉	冷霊恋	励麗憐	538 539 540 541 542 543	(整) 一 一 一 一 一 一 一 一 一 一	脱尾屏发	專屎孱岫	對屓屬岻峺	尓 屮岶峭崔	尠 乢岼嶌崢	无 岩岷峪崚	尨 屹峅崋崙	戶 岌岾崕崘	614 615 616 617 618 619	妖殯毬氣汾泅		殃殱毳汕	殍殳毯辻	殘殷麾汪沐沾	殕殼氈沂	殞毆氓沍	殤毋气沚	· 殪毓氛沁沽
470 471 472 473	露牢肋	狼	篭	廊老	呂弄聾		櫓楼郎	炉榔六	賂浪麓	路漏禄	544 545 546 547 548				鬼嶽巫幄	E差隆已幃并	呼嵶嶷 厄幀幺	嶇嶼帋幎	m嶄巉 帚幗广	""嶂巍帙幔庠	620 621 622 623 624	四 洽浚涵淅	// // // // // // // // // // // // //	泛洙浙淦	泯洵	/ 泙 洳 涕 淆 淕	洒濤淬	凇	浣淹淌	洶涓渕淨湮
473 474 475 476 477	枠:碗)	鷲腕	亙	倭亘	和	1	歪藁	賄蕨	脇椀	惑湾	549	廁麻	厦	廐	廏						625	渙	湲	湟	渾	渣	湫	渫	湶	湍渟
478 479 480 481 482	乖死	七乘 七	丐亂亢!	丕亅亰	个豫亳	小事 原	、舒从は	丼弐仍:	ノ于仄:	又亞什	554 555 556 557 558	往徠悳怕恊!	 	徊徼恠快恣!	很忖怙怺恃	徑忻怐恚恤	徇忤怩恁恂	從忸怎恪恬	徙忱忽恷恫	徘忝怛恟恙	630 631 632 633 634	潜澳濔瀏;	漾潛澣濘濾!	漓潭澡濱瀛	滷澂澤濮瀚	澆潼澹濛潴	潺潘濆瀉瀝!	濟澎澪瀋瀘!	澁澑濟濺瀟!	溪滕滾 澀濂濕瀑瀰炸焙燻燔
483 484 485 486 487	乖亟仂佝侑俑倅	(文字)	忉佇來俐俶	以佶侖俤倡	什多儘俥倩	价侏俔倚倬	爪侘俟倨俾	佚佻俎倔俯	佰佩俘倪們	佛佰俛倥倆	559 560 561 562 563	廬彜彎徃徠悳怕恊悁 惠愆愍 廖廱弋弯征徨忿帡恆悍悄惓惶愎	性物性意思		悚悗悽惴 慤	悒惆惺愧	悧悵愃慊	悋惘惚愿	惡慍惻愼	悸愕惱愬	635 636 637 638 639	瀲炮熙熕燠	灑烟熙熨燬	灣烋煦熬燧	炎烝煢燗燵	炒烙煌熹燼	炯焉煖熾	烱烽煬燒 📗	炉 焜 熏 燉	炸焙燻燔

First to third		Four	th di	ait o	f Kut	en c	ndes		First to third			For	rth d	iait o	of Kur	ten c	ndes			First to third			Four	th d	iait o	f Kut	en c	ndes	
digits of Kuten codes		2	3	4	5	6	7	8 9	digits of Kuten codes		1	2	3	4	5	6	7	8	9	digits of Kuten codes	0	1	2	3	4	5	6	7	8 9
640 641	燹 爲 爻	燿爼	爍爿	爐牀	爛牆	爨牋	爭牘	爬 爰 牴 牾	716 717	艝艷	艚艸	艟 艾	艤芍;	牆芒	艨芫	艪芟	艫恕	舮芬	艱苡	792 793	鏨鐓	鏥鐃	鏘鐇	鏃鐐	鏝鐶	鏐鐫	鏈鐵		鐚錢鐺
642	犂犁	犇	犒	犖	犢	犧	犹	犲 狃	718	苣	苟	苒 苜	且	冬	苺	莓	芻范	芬苻	苹	794	鑒	鑄	鑛	鑠	鑢	鑞	鑪	鈩	鑰錢
643 644) 狆 狄 猗 猊			狢猝	狠猴		狹猩	狷 倏 猥 猾	719 720	苞	茆茵	自茴	茉苳	苙	茱	荀	茹	荐	ठ	795 796	鑷閔	鑽閖	鑚閘	羅閙	鑾閠	钁閨	鑿開		閇 間 閼 閻
645	獎 獏	默	獗	獪	獨	獰	뾆	獵獻	721	茯	茫		茖茘:	茲莅	莚	莪	莟	莢	苔莖	797	閹	閾	闊	濶	関所	闇	闌	闕	闔闖
646 647	獺 珈琅 瑯			玻琲	珀琺		珮琿	珞 璢 瑟 瑙	722 723	莫莨	莎菴	莇萱	莊菫	茶莧	莵菽	荳萃	荵菘	莠萋	莉菁	798 799	關陏	闡陋	闥陷	闢陝	阡陞	阨	阮	阯	陂阳
648	瑁 瑜				瑪		瑾	章 璞	724	幕	莨	菠	菲	於萍 蕚	范	革萠	茶	萸	漫	800	РН	陝	陟	陦	陸	陬	隍	隘	隕 阴
649 650	壁 瓊 瓠	瓏瓣		珱瓩	丝	酤	당	話話	725 726	森	葭茄	萪葆	萼萬	蕚茲	蒄	葷萵	蕻	蒭葢	葮薪	801 802	險雋	隧雉	隱雍	隲襍	隰雜	隴霍	隶雕		佳 雎 霄 霆
651	瓷甄	甃	甅	甌	瓮甎		兝甕	选 追 甓 甞	727	蒂蒿	葩蒟	蓙	蓍	葯蒻	施蓚	蓐	蓊蓁	蓆	蒹蓖	803	高霈	霓	雍霎	霑	霏	霖	霙	雹雷	霪霰
652 653	甦甬			畍	畊		畛温	畆 畚	728 729	蒡	蔡	蓿	蓴	蔗	蔘	蔬	蔟	蔕	蔔	804 805	霹	霽	霾	靄	靆	靈靱			靜算
654				畭疚	畸疝		疆疣	疇 畴	730	蓼	蕀蕁	蕣藥	蕘蕋	蕈蕕	薀	薤	薈	薑	薊	806	靤靺	靦鞆	靨鞋	勒鞏	靫鞐	鞜	鞆鞨		靼 鞔鞣 鞯
655	痓 疵	疽	疸	疼	疱		痊	痒痙	731	薨	蕭	薔	薛	藪	薇	薜	蕷	蕾	薐蒻	807	鞴	韃め	韆	韈	韋	離	韭		韲 竟
656 657	痣 痞 瘋 瘍			痼瘧	瘁瘠	痰瘡	辉瘢	痲痳瘤瘴	732 733	藉蘊	薺蘓	藏蘋	薹藾	藐藺	藕蘆	藝龍	藥蘚	藜蘰	藹蘿	808	韶額	韵顋	頏顫	頌顯	頸顰	頤	頡	頷	頹顆
658	瘰 瘻	癇	癈	癆			癡	癢癨	734	虍	乕	虔	號	虧	虱	蚓	蚣	蚩	蚪	810	光田	顱	顴	顳	颪	颯	颱		飄颶
659 660	癩 癪	74	癬癸	癰發	皀	皃	皈	皋皎	735 736	蚋蛔	蚌蛞	蚶蛩	蚯蛬	蛄蛟	蛆蛛	蚰蛯	蛉蜒	蠣蜆	蚫蜈	811 812	飆餞	飩餤	飫餠	餃餬	餉餮	餒餽	餔餾		餡餃
661	皖 皓	皙	皚	皰	皴	皸	皹	皺 盂	737	蜀	蜃	蛻	蜑	蜉	蜍	蛹	蜊	蜴	蜿	813	饐	饋	饑	饒	饌	饕	馗	馘	馥馭
662	盍 盖 眈 眇			盡昵	盥真	盧眥	盪眦	蘯 肹 眛	738 739	蜷蝴	蜻蝗	蜥蝨	蜩蝮	蜚蝙	蝠	蝟	蝸	蝌	蝎	814 815	馮駲	馼駻	駟駸	駛騁	駝騏	駘騅	駑駢	駭騙	駮 緊騫
664	眸睇	睚	睨	睫	睛	睥	睿	睾睹	740		蝓	蝣	蝪	蠅	螢	螟	螂	螯	蟋	816	驅	黲	驀	驃驩	騾	驕	驍	驛	驗關
665 666	瞎 瞋		瞠響	瞞矗	瞰矚	瞶矜	瞹矣	瞿 瞼 矮 矼	741 742	螽蟯	蟀蟲	蟐蟠	雖蠏	螫蠍	蟄蟾	党蝗	蟇蟷	蟆蠎	螻蟒	817 818	驢髏	驥髑	驤髓	雅體	驫髞	驪髟	骭髢		骼臀毛
667	砌砒	礦	砠	礪	硅	碎	硴	碆 硼	743	蠑	蠖	蠕	蠢	蠡	蠱	蠶	蠹	蠧	蠻	819	髻	髮	髴	髱	髷			_	
668 669	碚 碾 碼	碣磅	碵磊	碪磬	碯	磑	磆	磋 磔	744	衄衵	衂衽	衒袵	衙衲	衞袂	衢袗	衫袒	袁袮	衾袙	袞袢	820 821	鬨	髻鬩	鬆鬪	鬘鬮	鬚鬯	鬟鬲	鬢魄	鬣魃	鬥 開魏 魍
670	磧	磚	磽	磴			礑	礙 礬	746	袍	袤	袰	袿	袱	裃	裄	裔	裘	裙	822	魎	魑	魘	魴	鮓	鮃	鮑	鮖	鮗鰕
671 672	礫泥		祗齋	崇禪	祚禮	秘禳	祓禹	祺 禄禺 秉	747 748	裝褓	裹襃	褂褞	裼褥	裴褪	裨褫	裲襁	褄襄	褌褻	褊褶	823 824	鮠鯣	鮨鯢	鮴鯤	鯀鯔	鯊鯡	鮹鰺	鯆鯲	鯏鯱	鯑 鮹鯰 鮹
673	秕 秧	秬	秡	秣	稈	稍	稘	稙 稠	749	褸	襌	褝	襠	襞					_	825	鰔	鰉	鰓	鰌	鰆	鰈	鰒	鰊	鰄鮨
674 675	稟 禀穢 穩		稻穰	稟穹	稷穽		穗窗	穉 穡窕 窘	750 751	覈	襦覊	艦覓	襭覘	襪覡	襯覩	襴覦	襷覬	襾覯	草覲	826 827	鰛鱠	鰥鱧	鰤鱶	鰡鱸	鰰鳧	鱇鳬	鰲鳰		鰾鯛
676	窖 窩	竈	窒	窶	竅	竄	窿	邃 竇	752	舋	鸭 覽訖	覿	觀	觚	觜	觝		觴	照觸	828	鴃	鴆	鴪	詹	鶯		鴻		鴕鴒
677 678	竊針竦竭	竏竰	奶笂	(廷笏	站笊	竚笆	竝笳	竡 竢 笘 笙	753 754	訃治	訖眡	計豐	証詼	訛詭	訝詬	訥詢	訶誅	詰誂	詛誄	829 830	鵁	鴿鵝	鴾鵞	鵆鵤	鵈鵑	鵐	晫	鵲	鶉 鶇
679	答 范	笨	笶	筐	Ж		ЛU	白生	755	誨	誡	誑	誥	誦	淵	誣	諄	部諍	諮	831	鶇	鵯	鵺	鶚	鴨	鶩	賜鶲	鷄	新編 骶
680 681)))))))))))))))))))	笄	筍筬	笋筮	筌箝	筅箘	筵箟	筥 筴 箍 箜	756 757	諚	諫諛	諳	諧謇	諤謚	諱諡	謔謖	諠謐	諢謗	諷謠	832 833	鶸鷯	鶺鷽	鷠	鷏鸛	鷂鸞	鷙点	鷓鹹		鷦 鷭
682	答 鹆	箒	箏	筝	報	篋	篁	漢節	758	諞謳	鞫	謌	謪	謾	譚		淵		謡	834	麋	麌	麒	麕	鳧	鹵麝	麥	麩	麁 麈 麸 麪
683 684	箴 篆 簇 簓	篝	篩篷	簑簗	簑簍	篦篶	篥簣	籠 簀 簧 簪	759 760	證	潜躁	語 譬	譚譯	譫 譴	譽	讀	讌	讎	讒	835 836	麭點	靡黥	黌黨	黎黯	黏黴	黐檿	黔黷		點點
685	医 色		连簽	籌	竖籃		具籏	カ 音 籍	761	讓	讖	言灌	譖	過谺	豁	真谿	豈	蹄豌	遜 豎	837	配配	郝	艦	超皷	墓墓	無	鼬		啊 茵
686	籘籟	籤	籖	籥	籬	籵	粃	新 粤	762	豐	涿	豢	豬	豸	豺	貂	貉		貊	838	齔	齣	齟	齠	齡	齦	齧	齬	齪齫
687 688	粭 粢 粽 糀	粫糅		粨糘	粳糒	粲糜	粱糢	粮 粹鬻 糯	763 764	貍貳	貎貮	貔貶	豼賈贊	貘賁	戝賤	貭賣	貧齊	貽賽	貨賺	839 840	齲	齶堯	龕槇	龜遙	龠瑤	凜	熙		
689	糲 糴			紆		٠.	*L	еш ел	765	膊	贄	贅		贇	贏	瞻	贐	齎	贓										
690 691	紂	紜絳	紕絖	蒸絎	絅絲	絋絨	絮絮	維 組 絣	766 767	賍趾	最跌	贖跏	赧跚	赭跖	赱跌	赳跛	趁跋	趙跪	跂跫										
692	經 綉	絛	綏	絽	綛	綺	綮	綣 綵	768	跟	跣	跼	踈	踉	跿	踝	踞	踐	踟										
693 694	緇 綽 緘 緝			綢緻	綯緲		綸縅	綟綰縊縣	769 770	蹂	踵蹇	踰蹉	踴蹌	蹊蹐	蹈	蹙	蹤	蹠	踪										
695	縡 縒	縱	縟	縉	縋	縢	繆	繦 縻	771	蹣	蹕	蹶	蹲	蹼	躁	躇	躅	躄	躋										
696 697	縵 縹 繙 繚			縲繩	縺繼	繧繻	繝纃	繖 繞絡 網	772	躊躱	躓躾	躑軅	躔軈	躙軋	躪軛	躡夷	躬軼	躰軻	軆軫										
698	辦艦	纈	纉	續	纒	纐	纓	纔纖	774	軾	輊	輅	輕	輒	輙	輓	輜	輟	輛										
699 700	繊 纛			缺罎	罐	网	罕	罔 罘	775 776	輌轆	輦轎	輳轗	輻轜	輹轢	轅轣	轂轤	輾辜	轌辟	轉辣										
701	₩ ₩	靈	=	9	===	霜	寵	實羅	777	辭	辯	辷	迚	迥	迢	迪	迯	邇	迴										
702 703	騎 无 拳 镇	馬	盍	羝 栩	羚翼	室 翃	羯盒	羲 窦 翔 翡	778 779	逅浴	迹漆	迪	逐	巡拼	逕	迌	迋	逖	迪										
704		卷羔羸翳耡聢肆胙脣腆膃膓睔	翹	飜	耆	室翊耄聊	耄	素 耘	780	7	遏	遐	湟	渔	逎	遉	逾	遖	遘										
705 706	耙 耜	糊脫	耨睉	耿聳	非聲	脚胸	部 語	聒 聘 聽	781 782	逃邊	遨湯	遊羅	選が	随批	遲邤	避邓	遽	遇郤	邀廖										
707	聚智津肄	肆	肅	豇	言	莊	脳	冐 肬	783	郭	鄠	鄒	鄙	戴	鄰	罰	皷	酸	齟										
708 709	胛 胥 脛 脩	胙唇	此 晡	胃晦	胚	胖	脉	胯 胱	784 785	和	船藤	艏槽	醛	醋釀		整架	臨	醫整	盤釦										
710	胛脛 腦膣	臐	脾	蘣	腑	胼	腱	腮腥	786	釟	釜	勤	额	釵	釶	鈞	釿	鈔	鈬										
711 712	腦胺膣	膃腹	膈膩	膊膰	膀暎	胼膂膾	膠暗	膕 膤 膽	787 788	紐約	鈑紅	鉞徐	鉗鉄	鉅鈴	鉉鈺	鉤釽	鉛鉱	鏯鉢	細鉛										
713	匠臂 臧	腕	臍	臑	臙	臘	臈	喧嘘 題	789	鋩	錏	鋺	鍄	錮	241	32)P	22.	逖 適邁郤酘醫釐鈔銕銹 鍜鏖	ᄳ										
714 715	臂臠峹	臉臺舖	臻船	與鮪	昇舸	臘春舳	舅經	與 舊艙 艘	790 791	舖	錙絲	錢	錚絲	綴綜	錺鎇	錵総	鉱総	鍜麋	鋥釵										
1,10		tha	пЦ	נוניו	ניינו	/3III	rsT	加口門又	, , , ,	21%	业形化	Table .	riiii	끠미	哭	四四	W/C	避	建土	1									