

SERVICE MANUAL

Level 1&2

NOKIA

3600

SLIDE



Transceiver characteristics

Band:

RM-352: EGSM 850/900/1800/1900

Display:

TFT display, 240 x 320 pixels resolution with 30,6 mm x 40,8 mm active area (2”), up to 16.7 million colours

Camera:

3.2 Mpix with 8x digital zoom

Operating System:

Series 40 3rd edition

Connections:

Bluetooth 2.0, Micro USB connector, 2,5 mm AV connector, 2 mm DC charging connector

Transceiver with BL-4S battery pack

Talk time	Standby	Note
Up to 5,5 hours	Up to 280 hours	Depends on network parameters and phone settings

1.	Change history	3
2.	Copyright	4
3.	Warnings and cautions	5
3.1	Warnings	5
3.2	Cautions	5
4.	ESD protection	6
5.	Care and maintenance	7
6.	Battery information	8
7.	Exploded view	9
8.	Service devices	10
9.	SW-update	11
10.	Disassembly instruction	12
11.	Assembly hints	18
11.1	Torque information	25
12.	Solder components	26

1. CHANGE HISTORY

Status	Version No.	Date	Comments
Draft	0.1	15.07.2008	Draft
Approved	1.0	16.07.2008	Approved version

The purpose of this document is to help NOKIA service levels 1 and 2 workshop technicians to carry out service to NOKIA products. This Service Manual is to be used only by authorized NOKIA service suppliers, and the content of it is confidential. Please note that NOKIA provides also other guidance documents (e.g. Service Bulletins) for service suppliers, follow these regularly and comply with the given instructions.

While every endeavor has been made to ensure the accuracy of this document, some errors may exist. If you find any errors or if you have further suggestions, please notify NOKIA using the address below:

CMO Operation & Logistics
Training and Vendor Development
Multimedia Creation & Support
<mailto:Service.Manuals@nokia.com>

Please keep in mind also that this documentation is continuously being updated and modified, so watch always out for the newest version.

2. COPYRIGHT

Copyright © 2008 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, and Nokia X and Y are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region.

IMPORTANT

This document is intended for use by qualified service personnel only.

3. WARNINGS AND CAUTIONS

Please refer to the phone's user guide for instructions relating to operation, care and maintenance including important safety information. Note also the following:

3.1 Warnings

1. CARE MUST BE TAKEN ON INSTALLATION IN VEHICLES FITTED WITH ELECTRONIC ENGINE MANAGEMENT SYSTEMS AND ANTI-SKID BRAKING SYSTEMS. UNDER CERTAIN FAULT CONDITIONS, EMITTED RF ENERGY CAN AFFECT THEIR OPERATION. IF NECESSARY, CONSULT THE VEHICLE DEALER/MANUFACTURER TO DETERMINE THE IMMUNITY OF VEHICLE ELECTRONIC SYSTEMS TO RF ENERGY.
2. THE HANDPORTABLE TELEPHONE MUST NOT BE OPERATED IN AREAS LIKELY TO CONTAIN POTENTIALLY EXPLOSIVE ATMOSPHERES, EG PETROL STATIONS (SERVICE STATIONS), BLASTING AREAS ETC.
3. OPERATION OF ANY RADIO TRANSMITTING EQUIPMENT, INCLUDING CELLULAR TELEPHONES, MAY INTERFERE WITH THE FUNCTIONALITY OF INADEQUATELY PROTECTED MEDICAL DEVICES. CONSULT A PHYSICIAN OR THE MANUFACTURER OF THE MEDICAL DEVICE IF YOU HAVE ANY QUESTIONS. OTHER ELECTRONIC EQUIPMENT MAY ALSO BE SUBJECT TO INTERFERENCE.

3.2 Cautions

1. Servicing and alignment must be undertaken by qualified personnel only.
2. Ensure all work is carried out at an anti-static workstation and that an anti-static wrist strap is worn.
3. Use only approved components as specified in the parts list.
4. Ensure all components, modules screws and insulators are correctly re-fitted after servicing and alignment.
5. Ensure all cables and wires are repositioned correctly

4. ESD PROTECTION



Nokia requires that service points have sufficient ESD protection (against static electricity) when servicing the phone.

Any product of which the covers are removed must be handled with ESD protection. The SIM card can be replaced without ESD protection if the product is otherwise ready for use.

To replace the covers ESD protection must be applied.

All electronic parts of the product are susceptible to ESD. Resistors, too, can be damaged by static electricity discharge.

All ESD sensitive parts must be packed in metallized protective bags during shipping and handling outside any ESD Protected Area (EPA).

Every repair action involving opening the product or handling the product components must be done under ESD protection.

ESD protected spare part packages MUST NOT be opened/closed out of an ESD Protected Area.

For more information and local requirements about ESD protection and ESD Protected Area, contact your local Nokia After Market Services representative.

5. CARE AND MAINTENANCE

This product is of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to the product, battery, charger or any accessory.

6. BATTERY INFORMATION

Note: A new battery's full performance is achieved only after two or three complete charge and discharge cycles! The battery can be charged and discharged hundreds of times but it will eventually wear out.

When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery. Use only batteries approved by the phone manufacturer and recharge the battery only with the chargers approved by the manufacturer.

Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime.

If left unused a fully charged battery will discharge itself over time. Temperature extremes can affect the ability of your battery to charge.

For good operation times with Ni-Cd/NiMH batteries, discharge the battery from time to time by leaving the product switched on until it turns itself off (or by using the battery discharge facility of any approved accessory available for the product).

Do not attempt to discharge the battery by any other means. Use the battery only for its intended purpose.

Never use any charger or battery which is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F).


A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose batteries in a fire! Dispose of batteries according to local regulations (e.g. recycling).

Do not dispose as household waste.

7. EXPLODED VIEW

See corresponding ITEM/CIRCUIT REF in the Spare Parts Service Bulletins on NOL.

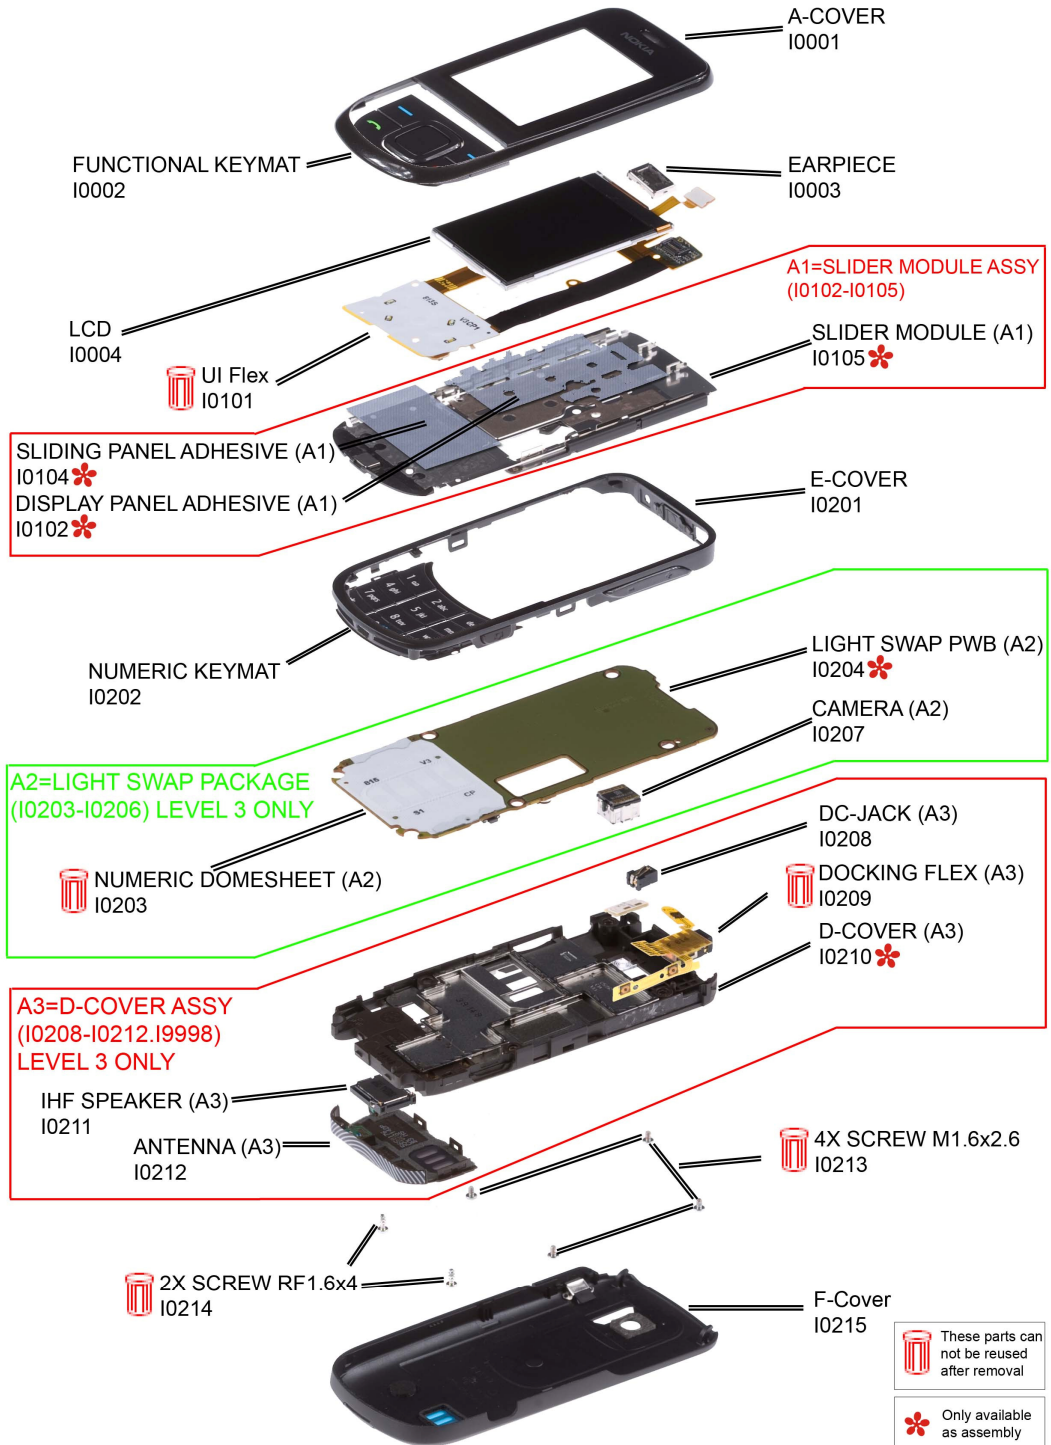


8. SERVICE DEVICES

<p>FLS-5</p>  <p>FLS-5 Flash device</p>	 <p>AC-4 Travel charger</p>	<p>RJ-230</p>  <p>RJ-230 Universal soldering jig</p>
 <p>CA-101 100cm</p> <p>CA-101 Service cable</p>	 <p>SS-102 Camera removal tool</p>	<p>BL-4S</p>  <p>BL-4S Battery</p>
<p>SS-187</p>  <p>SS-187 UI flex assembly tool</p>		<p>NOKIA Standard Toolkit V2</p>  <p>NMP standard toolkit (v2)</p> <p>For more information, refer to the Service Bulletin (SB-011) on NOKIA Online. Supplier or manufacturer contacts for tool re-order can be found in "Recommended service equipment" document on NOKIA Online.</p>

9. SW-UPDATE

Flash concept – (Point of Sales)

To use the FLS-5 Flash Dongle, you have to follow the user guide inside the sales package.
Please check always for the latest version of flash software, which is available on Nokia Online.

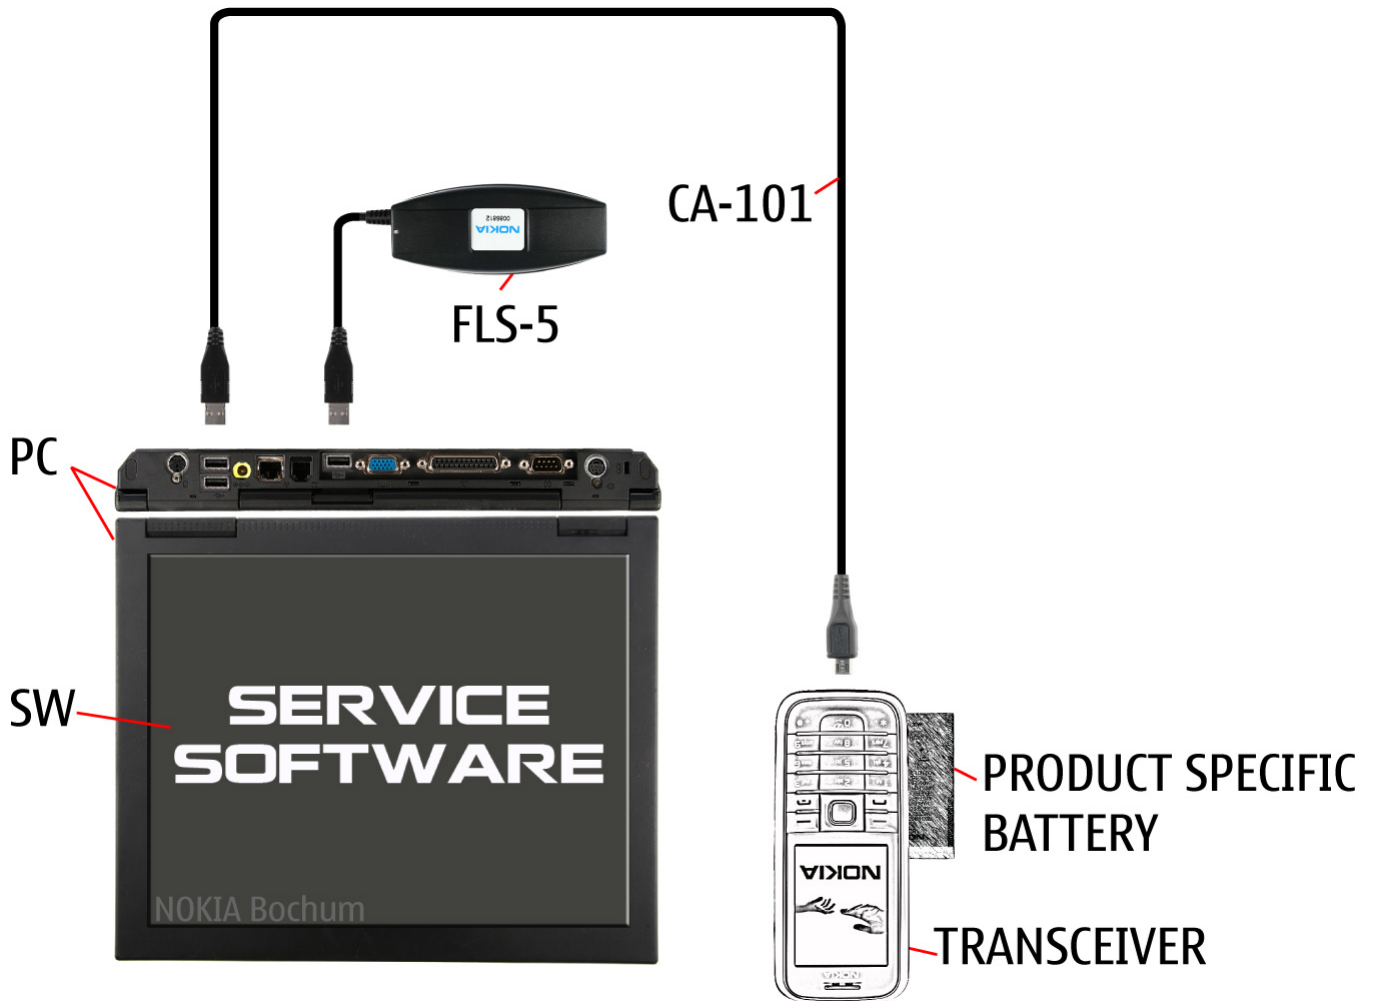

10. DISASSEMBLY INSTRUCTION



1) Unlock the F-Cover.



2) Remove the F-Cover.



3) Remove the Camera Module with SS-102.




4) Open the first cover clip from the A-Cover with SRT-6.




5) Open the second cover clip.




6) Remove the A-Cover.

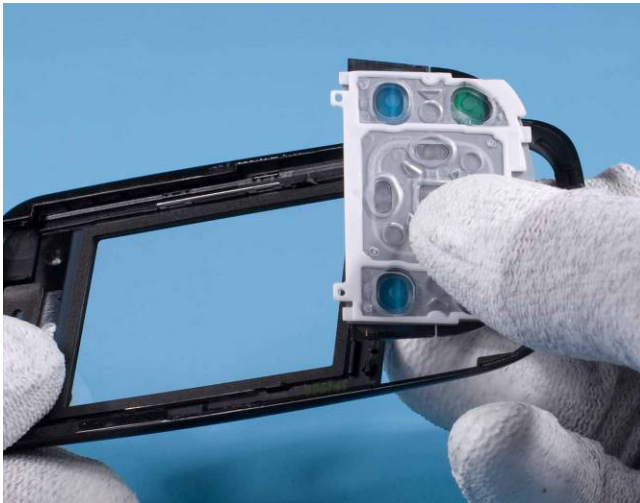


7) Separate the **Functional Keymat**.

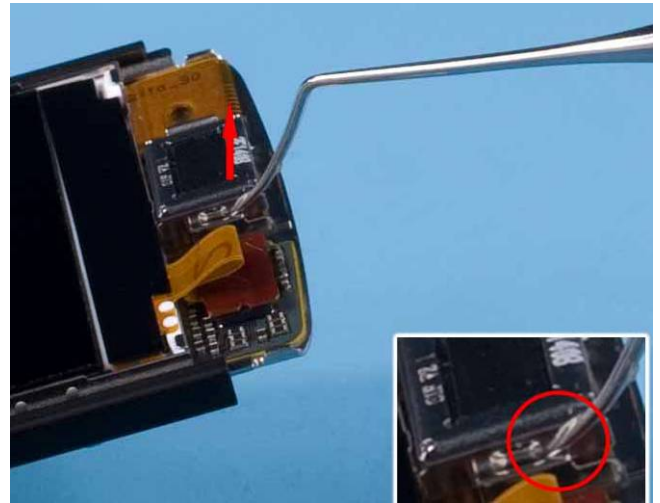


8) Lift up the **Earpiece Frame Assy** with a dental tool.

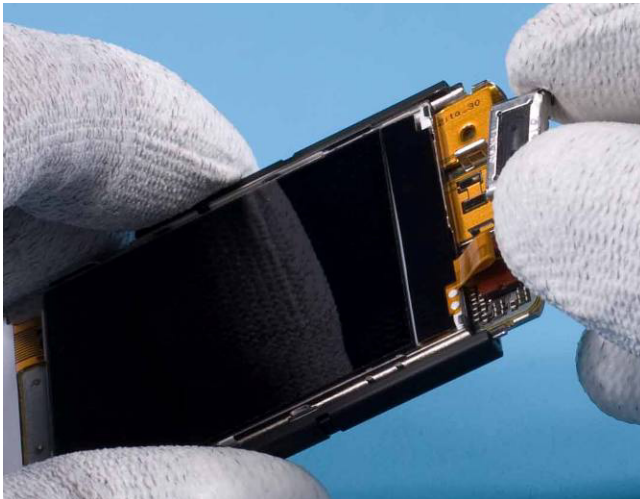

9) Take out the **Earpiece Frame Assy**.

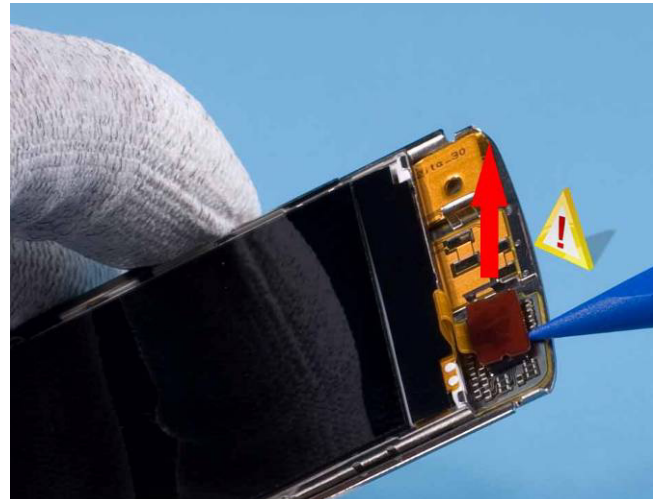


10) Open the **LCD Connector**. Be careful with the surrounding components.

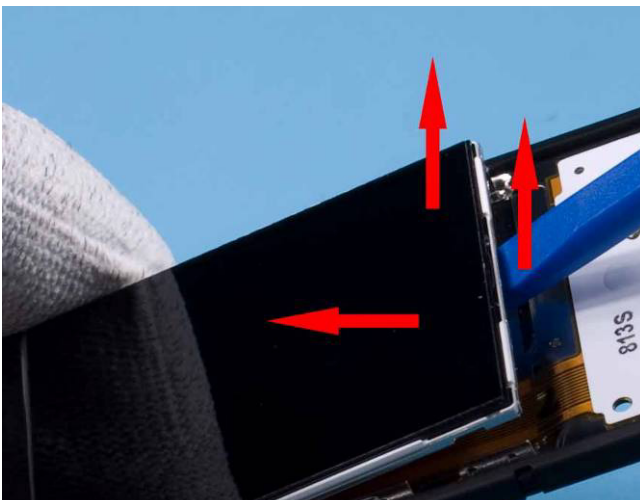

11) Use the **SS-93** to free edges. First, insert it only a little under the display, then move it left and right to begin freeing the glued area. Then push straight down to the middle to remove the display.




12) Unscrew the 2 screws from the **Antenna Cover Assy**.

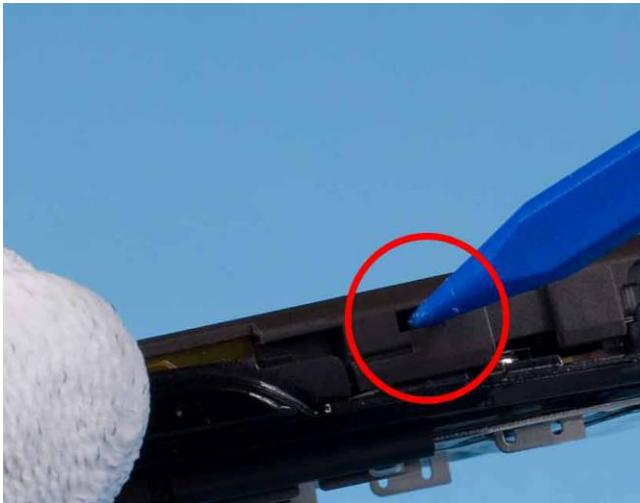

13) Open the first side clip.



14) Open the second clip.

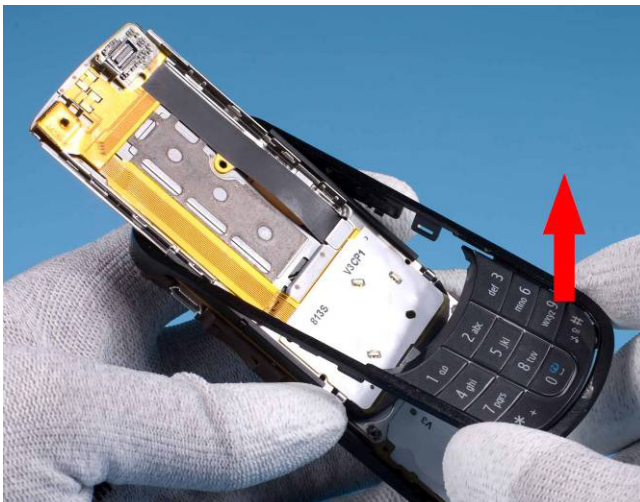

15) Lift up the E-Cover slightly.




16) Remove the E-Cover.




17) Separate the Numeric Keymat from the E-Cover.




18) Unscrew the 4 remaining screws.

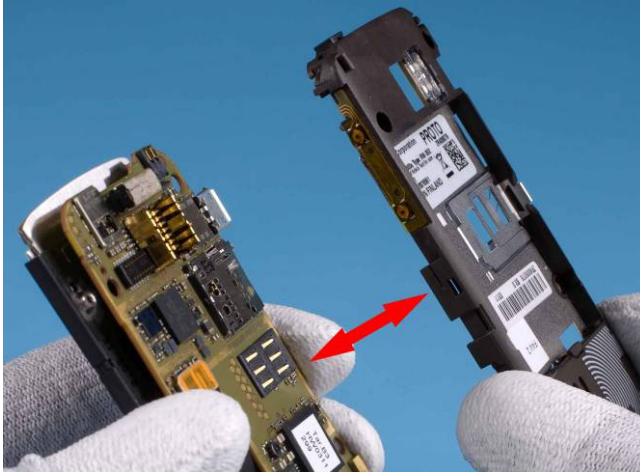


19) Separate the **D-Cover** from the **PWB/Slider**.

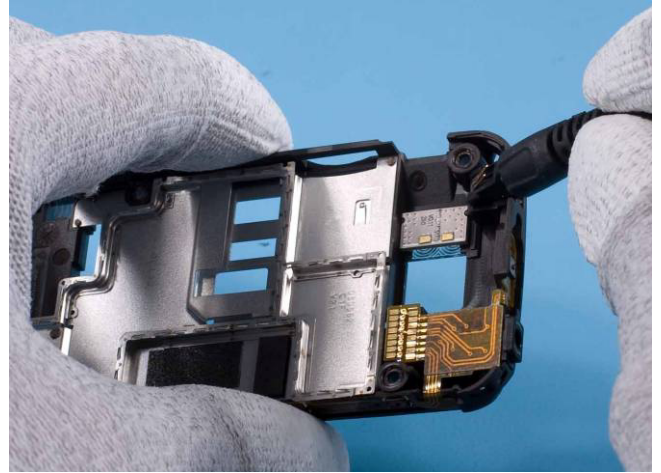


20) Remove the **DC Jack**.

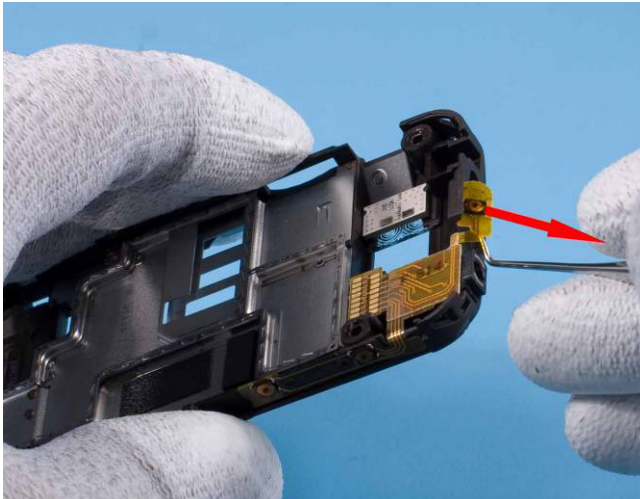


21) Detach the power button on the top of the phone with the dental tool.

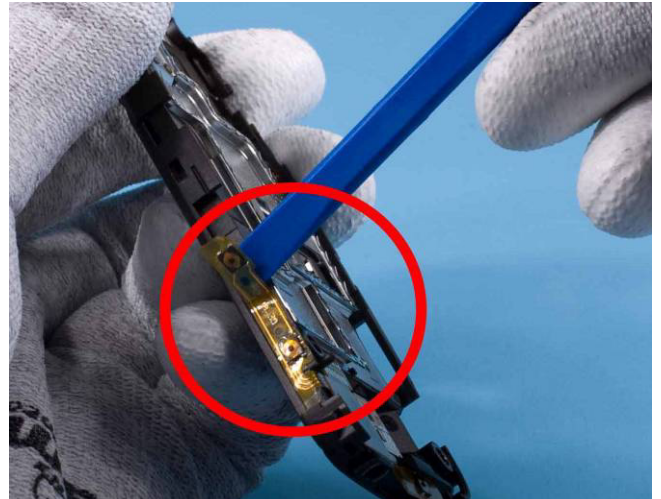


22) Release the **Docking Flex**.

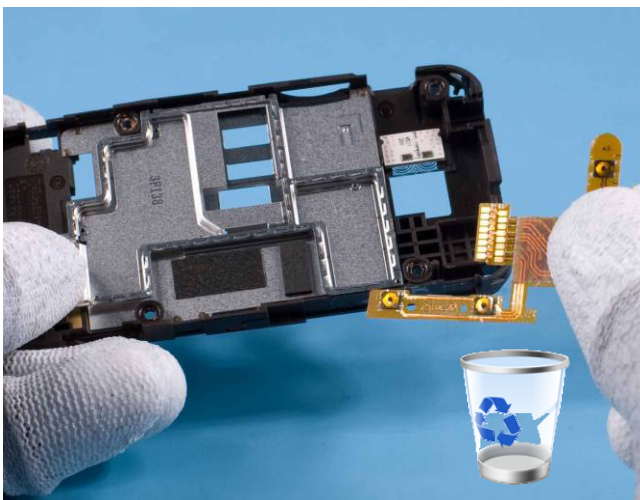


23) Lift up and remove the **Docking Flex**.

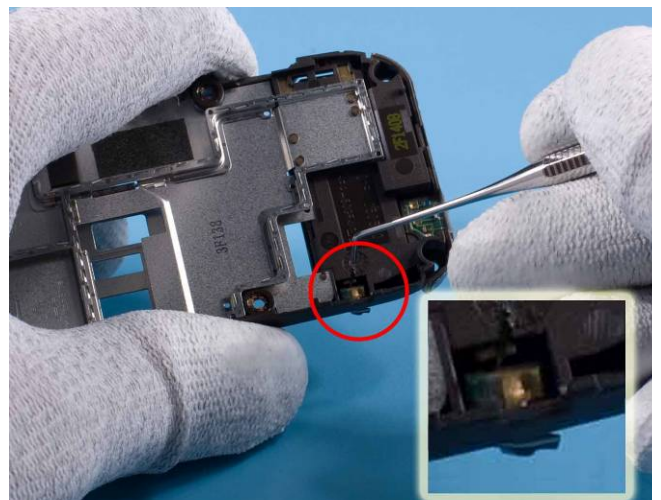


24) Use the dental tool to open the first clip of the **Antenna Cover Assy**.

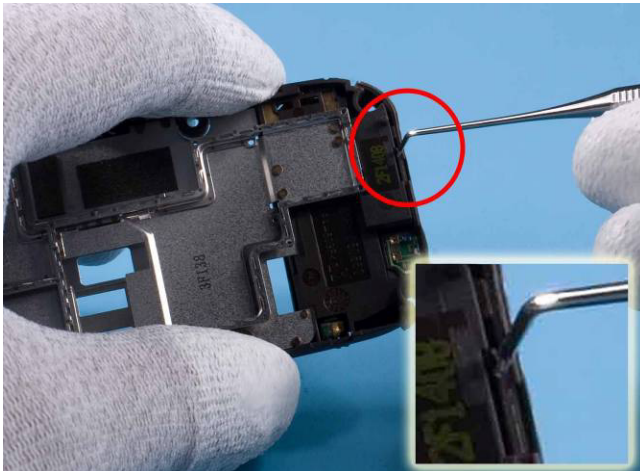


25) Open the second clip.

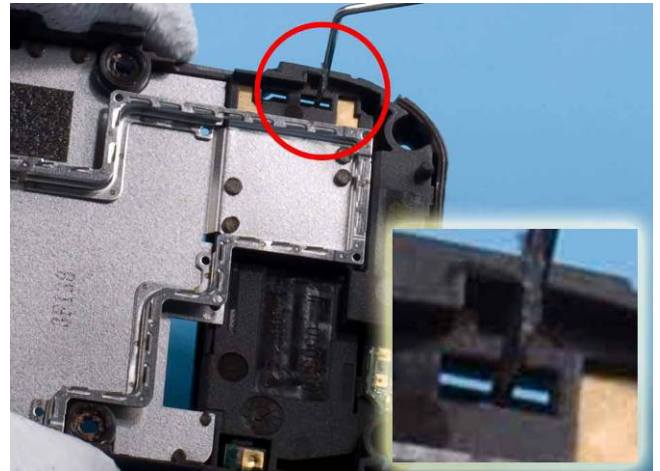


26) Open the next clip.

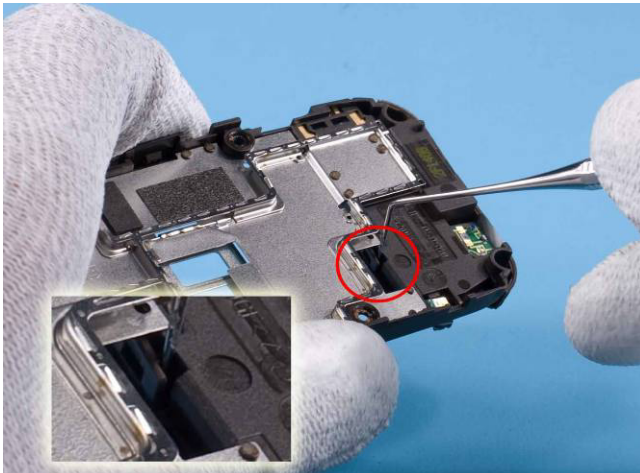


27) Open the next clip.

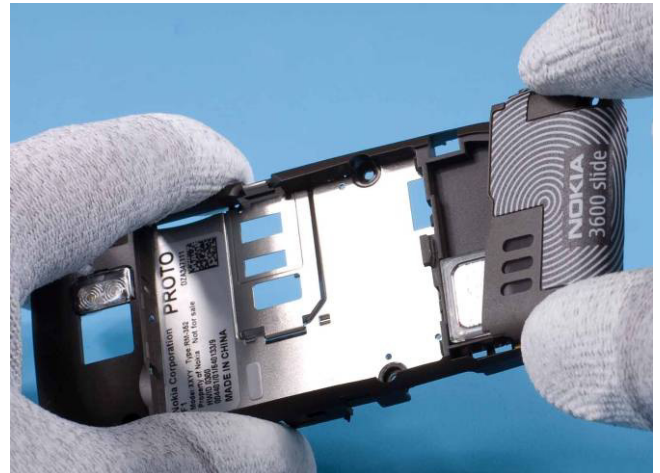


28) Remove the **Antenna Cover Assy**.

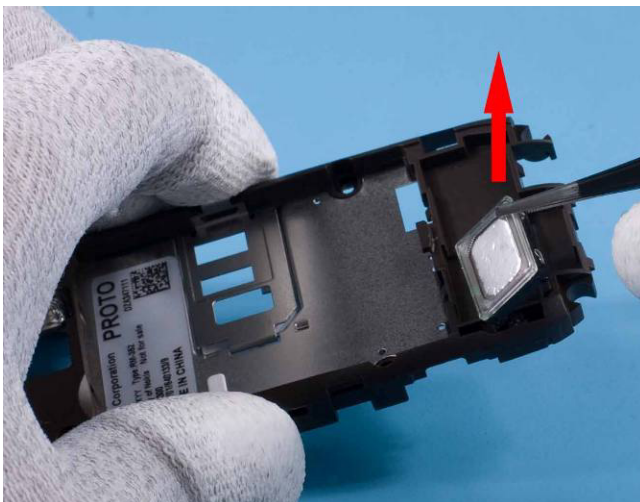


29) Remove the **IHF Speaker**.

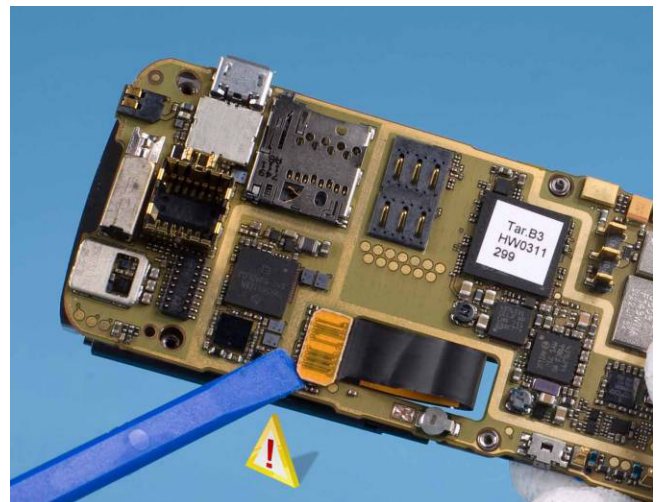


30) Be careful with the surrounding components when opening the B2B Connector.

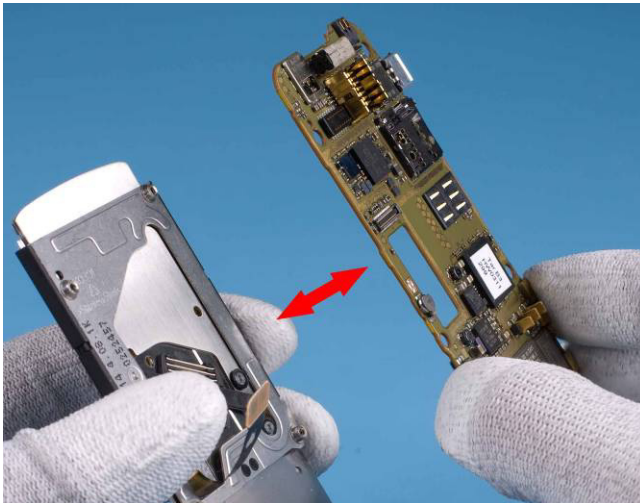

31) Separate the **PWB** from the **Slider Module**.

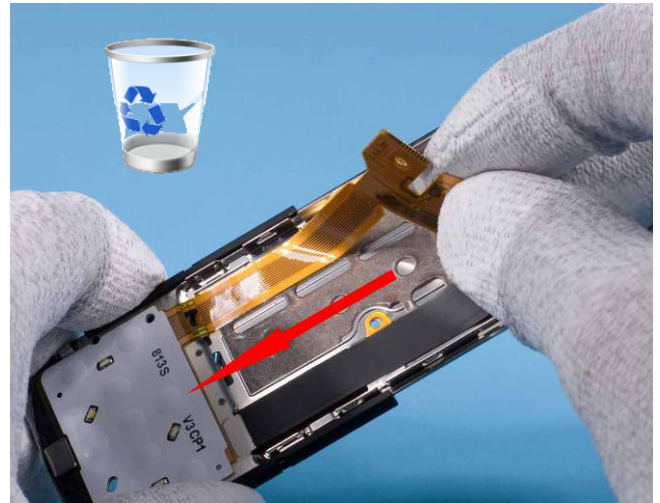

32) Remove the **UI Flex Assy**.

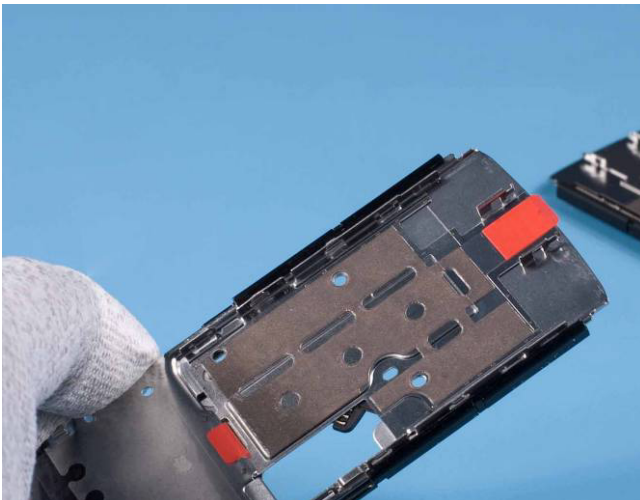

33) If **UI-Flex** is removed, then a completely new **Slider Module** must be used for re-assembly.

11. ASSEMBLY HINTS

<p>1: UI Flex to Slider Module</p>	<p>New Slider Module Assy and new UI Flex needed, the SS-187 UI Flex Assy JIG must be used.</p>
---	---



1) Place the **UI Flex Assy** onto the JIG. Note that the B2B Connector is under the assy and not on the top.




2) Pull on the top red tab and bottom red tab to remove the foils. Do not remove the central foil.




3) Align the bottom edge of the slider to the bottom edge of the JIG as shown and press down firmly.




4) Make sure the guide pins are aligned correctly.

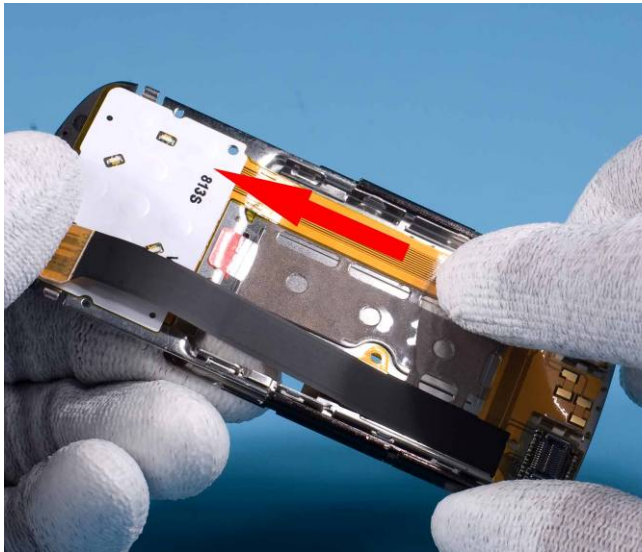

5) Smooth down the copper color flex in the direction shown to ensure gluing is complete.

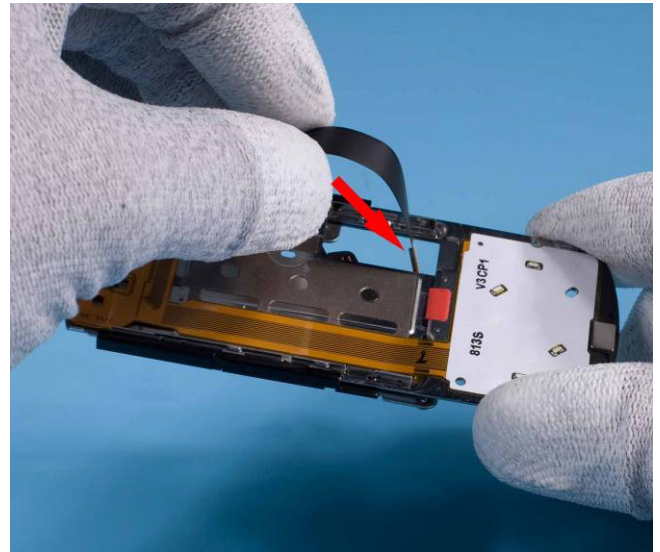


6) Feed the B2B Connector Flex through the **Slider Module** to reach the end of the assembly.

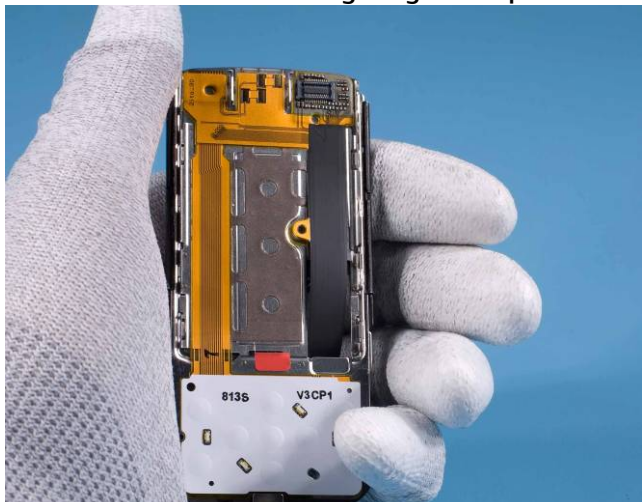

7) Assembly completed.


2: Docking Flex to D-Cover	Special Care Assembly must be used
----------------------------	------------------------------------

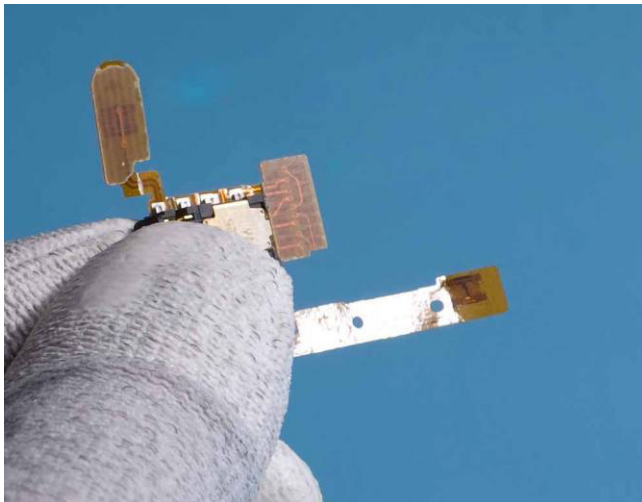


1) Remove the gluing foils from the **Docking Flex Assy.**



2) If the **D-Cover** is re-used: Remove any glue residue. There are three areas to clean: the Side Keys/AV Connector/Power Switch.

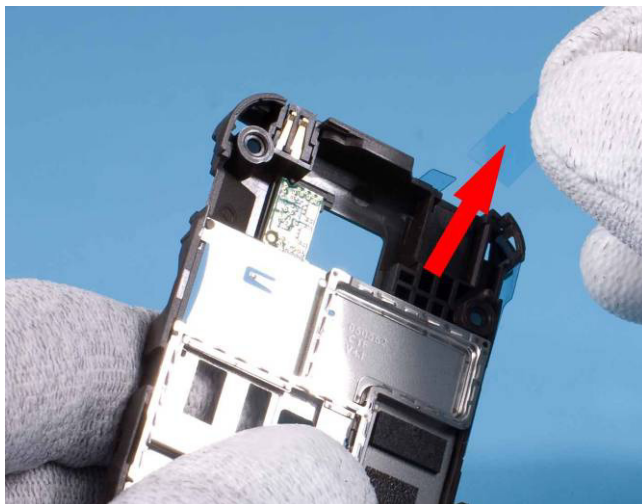

3) If the **D-Cover** is new: Remove the gluing foils and glue areas.

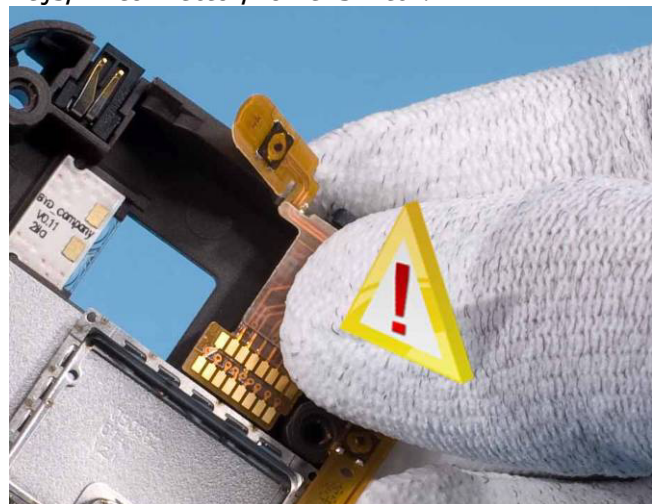

4) Insert the AV Connector and press home.



5) Carefully bend the power key area into place and press home.



6) Bend the side keys into place and press home.

<p>3: LCD repair using Display Adhesive Light</p>	<p>Special Care Assembly must be used, unless entire UI Flex is being replaced</p>
--	---




1) Remove the LCD as shown in disassembly instruction. Remove the shaded area from **UI Flex Assy**. Take care not to damage the **UI Flex Assy** itself.



2) Replace this section with **Display Panel Adhesive Light CC**. This is necessary to ensure a correct display fixation to the **Slider Module** and a correct grounding of the display.



3) Remove the section foil by lifting the red tab to expose the glued area.

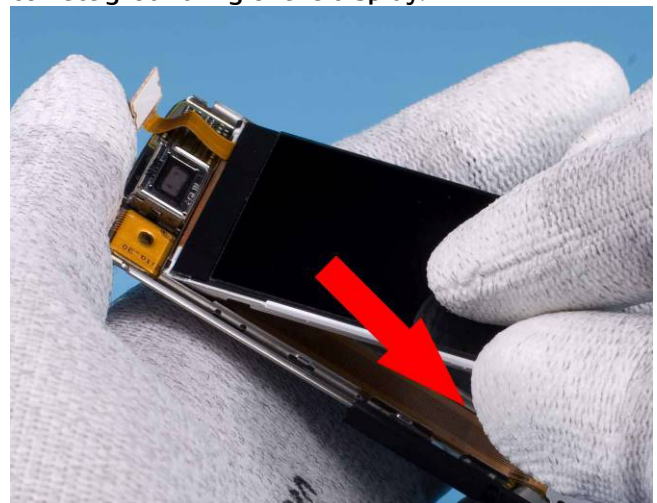

4) Align the display as shown.



5) Fix the display in place, use careful even pressure from the sides only to ensure that the display stays fixed.



6) Close the connector.



7) Fold the flex up, away from the display area.

4: E-Cover and Numeric Keypad	
-------------------------------	--





1) Ensure that the **Numeric Keypad** is fully under the **Slider**, including back edging.

5: A-Cover and Slider Module	
------------------------------	--



1) Ensure that the **Slider Module** is correctly inserted under the **A-Cover** hooks.

11.1 Torque information

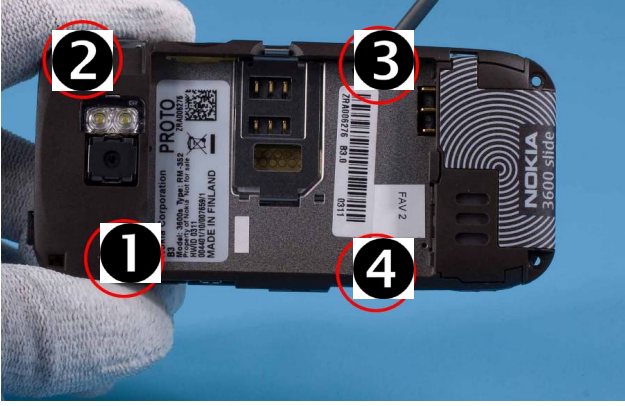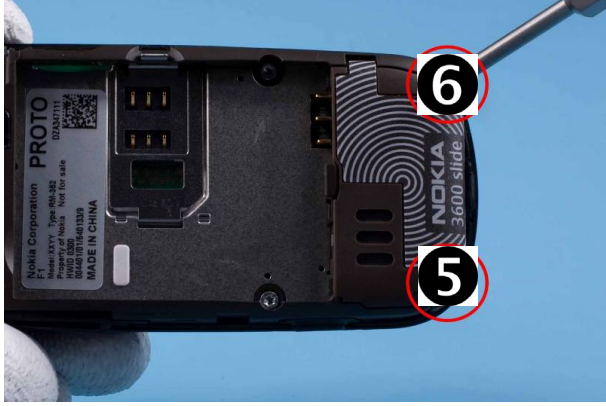	
<p>1) Tighten the screws to the torque of 17 Ncm in the order shown.</p>	<p>1) Tighten the screws to the torque of 17 Ncm in the order shown.</p>

12. SOLDER COMPONENTS

3600 Slide RM-352 Components overview

Solder components only for Level 2

