

P-04C

**INSTRUCTION MANUAL** '11.6

docomo STYLE series

Thank you for selecting the "docomo STYLE series P-04C". Read this manual before use to correctly operate your P-04C.

### About manual of P-04C

The operating procedures for the P-04C are also published as in "使いかたガイド (Guide)" on-screen manual installed onto your FOMA terminal, and "Instruction Manual (Detailed Version)" as a PDF. (In Japanese only)

- ◆"Instruction Manual" (this manual)◆
  Description of the displayed content and operating procedures for basic functions
- ◆"使いかたガイド (Guide)" (installed onto your FOMA terminal)◆
  Description of the outline and operations of frequently used functions

From the P-04C (Guide) 使利ツール (Tool) 使いかたガイド (Guide) ※This function is available in Japanese mode only.

◆"Instruction Manual (Detailed Version)" (PDF)

From a PC, download detailed information about all the functions and the operating procedures. (In Japanese only) http://www.nttdocomo.co.jp/support/trouble/manual/download/index.html

Note that the URL and published contents may be modified without notice.

### **Basic Package**

 P-04C Handset (With Warranty and Back Cover P49)







• Touch Pen P01\*\*



Battery Pack P23



Desktop Holder P45



- %A Crystal Touch Pen is provided as a sample to users who purchase a special model (Pink Gold).
- $\bullet$  See page 102 for optional items that support this FOMA terminal.

### For Using This Manual

- Note that "P-04C" is referred to as "FOMA terminal" in this manual.
- Most operating procedures and displays in this manual are shown with the default settings of the "White" handset. Further, displays and illustrations shown in this manual are for reference. The actual ones might differ.
- Most operating procedures and displays in this manual are described when the FOMA terminal is in Normal Style. See page 34 for the
  operations in Viewer Style (Touch panel).



Appendix------103

Introduction

• •	Styles	6		
Before Using Screen Explanation Character Entry	29	Sound/Screen Setting41 Lock/Security46	Basic Operation ▶ P.24 ~	
Call Telephone Mail		Phonebook ·····64	Connect ▶ P.51 ~	
i-mode/Full Browser······i-Channel······		Map/GPS70	Search ▶ P.66 ~	
Camera······ 1Seg······ Music·····	76	i-appli/i-Widget	Enjoy ▶ P.73 ~	
Osaifu-Keitai ······i-concier ······		Convenient Tools ······87  Data Management ·····90	More Convenient ▶ P.85 ~	
Support ·····	95	Index117	Others	

▶ P.95 ~

# FOMA Terminal



- P-04C supports W-CDMA system.
- Because the FOMA terminal uses radio waves, you cannot use it in places where the radio waves do not reach, where they are weak even outdoors, such as inside tunnels, basements, or buildings, or out-of-service area. You might not be able to operate the FOMA terminal even when you are in a place with a fine view such as in a high-rise building or apartment. Note that you may experience interruption of calls even if the three antennas respond to a strong radio wave, and you remain without moving to use the FOMA terminal.
- Since the FOMA terminal uses radio waves as the medium of telecommunication, calls may be tapped by a third party.
   However, the W-CDMA system automatically supports tapping prevention, so your conversation will be incomprehensible to the third party, because it is recognized as mere noise.
- The FOMA terminals change your voice into digital signals and send them to the other party. In places where the radio waves are weak, the digital signals may not be converted correctly, and in such a case, the voice may sound different from the actual one.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS. Neither DOCOMO nor the certifiers as listed herein make any representation and warranty as for the security in the use of SSL/TLS. In the event that the user shall sustain damage or loss due to the use of SSL/TLS, neither DOCOMO nor the certifiers shall be responsible for any such damage or loss. Certifiers: VeriSign Japan K.K., Cybertrust Japan Co., Ltd.,

GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd., Comodo CA Ltd., Entrust, Inc., and Go Daddy, Inc.

 This FOMA terminal supports FOMA Plus-Area and FOMA High-Speed Area.

- You are advised that you make separate notes of information (such as Phonebook entries, schedule events, memos, record messages, voice memos) stored in the FOMA terminal and keep them in a safe place. Note that we cannot be held responsible for the unlikely event of loss of the stored content due to a malfunction, repair, change of your model, or other mishandling of the FOMA terminal.
- You are advised to save your important data on the microSD card. If you have a personal computer, you can transfer and save data such as Phonebook entries, mail messages, schedule events, and others on the personal computer by using DOCOMO keitai datalink.
- The instructions given in this manual are for operating the FOMA terminal when the DOCOMO's UIM is used.

# Unlocking SIM

This FOMA terminal supports SIM unlock. When the SIM is unlocked, other operator company's SIM cards can be used with your FOMA terminal.

- Contact your nearest docomo Shop for unlocking SIM.
- · You are charged separately a charge for unlocking SIM.
- If other operator company's SIM is used, restrictions may be applied to some of the services or the functions. Note that NTT DOCOMO, INC. cannot provide any guarantees for operating the FOMA terminal when using other company's card.
- For further details on the SIM unlock, refer to the DOCOMO website.

# What You can Do with P-04C



▶ P.52

This service enables to keep voice messages and notify the recipient by SMS of a message reception. When the recipient plays back the message, the sender is also notified by SMS. You can store and play messages as easily as making a phone call.

# 使いかたガイド (Guide) ▶ P.38

You can check "使いかたガイド (Guide)" on screen for how to operate a function you want. Even when you do not have the printed "Instruction Manual" at hand, you can easily operate your FOMA terminal by referring to it.

\*This function is available in Japanese mode only.

### i-concier



i-concier works to serve you with a pleasant life just like a clerk or concierge does. The service holds your data (area information about your neighborhood, Memo, Schedule, ToruCa, Phonebook, etc.) and sends you information, with good timing, about a variety of things according to the contents of your memo and your schedule event, your living area, your current location, or your preference or taste.

\*i-concier is available in Japanese only.

Four SWAROVSKI FLEMENTS are used for the Call/Charging indicator, and elegant gleams notice you of incoming calls.

### Waterproof Performance

▶ P.19

The FOMA terminal is designed to exhibit a waterproof performance equivalent to the IPX5 and IPX7 classes once its connector terminal cover and inner cover have been closed tightly and the back cover is attached.

### Handwriting Photo/Memo ► P.89

Using glittering or sparkling stamps or neon pens, you can enjoy adding handwritten characters or decoration on the images.

### eco Mode



This function allows you to reduce battery consumption by adjusting the brightness of the display, eco Mode can also be turned on according to the amount of remaining battery power.

### ■FCO NAVI ▶ P.46


ECO NAVI is a function that identifies waste and conserves energy. A notification icon will be displayed when the eco Mode is automatically set, or when the FOMA terminal has not been operated for a certain period of time and 1Sea has terminated.

### High-image-guality Camera

Using the high-image-quality camera with its 13,200,000 pixels, skin is shot beautifully and scenery is shot vividly.

# Part Names and Functions



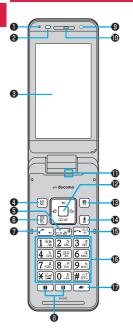

♠Air vent

For adjusting the pressure inside the FOMA terminal

2Light sensor

For sensing brightness (Do not cover it with your hands or do not put a sticker on it. Doing so might disable detecting the brightness.)


- 3Display/Touch panel
- Menu key
  For showing the Main Menu
- GCLR Clear key/i-Channel key
- **6** Mail key For showing the Mail Menu
- Start key
  For starting to talk
- (I) Multi one-touch key
- **③Call/Charging indicator**Lights while you are receiving a call or message, talking, or charging.
- **©**Earpiece
  For listening to the other party's voice
- Microphone
  For speaking to the other party
- Command navigation key
  For operating functions and menus

- ® (amera key/1Seg key
- (β a i-mode key/i-αppli key
- Power/End key
  For turning on/off the power or ending a
- Numeric keys

  For entering phone numbers and text
- **1** Multi key
  - For showing the Task menu
- ©Camera
   For shooting portraits and/or landscapes
- @Flash
- Back cover

Remove this when attaching/removing the battery pack, UIM, and microSD card. The inner cover is found inside the back cover. Do not peel off the sticker on the outside of the inner cover. If you peel it off, IC card may not be written and read.

② mark
An IC card is installed. Use it for
Osaifu-Keitai or iC communications

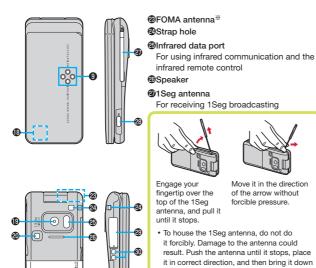

മ

22

for housing.

@Connector terminal

or for charging, etc.

For shooting a subject by the camera

Integrated terminal for connecting earphone

### For using earphone

Connect an optional connector-terminalcompatible earphone. When using a connector-terminal-non-compatible earphone, use an optional plug adapter for connection.

Example for connecting the Stereo Earphone Set 01 (option) to external connector terminal This mobile phone serves as the port where both the AC Adapter (charging) and Stereo Earphone Set 01 (Earphone/microphone



### 

\*\*The antenna is embedded in the handset. Covering the area near the antenna with your hand may adversely affect the quality of the communication.


# Styles



The P-04C comes with two styles.

### ■Normal Style

This style supports button operations.

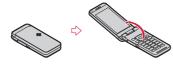

# ■Viewer Style

This style supports touch operations.

To use the FOMA terminal in this style, rotate the display panel clockwise by 180 degrees and close it by pulling it toward you.

• To return to the Normal Style, open the display panel, and then rotate it counterclockwise by 180 degrees.



### Notes when rotating the display panel

- Do not knock the display panel against the button area or other surface. Doing so may scratch or damage the key area.
- Do not rotate the display panel in the opposite directions to the ones indicated in the instructions.
- Do not rotate the display panel more than 180 degrees.



# Precautions

### ALWAYS FOLLOW THESE DIRECTIONS



- Before using the FOMA terminal, read these safety precautions carefully so that you can use it correctly. After reading the precautions, keep them in a safe place.
- Be sure to observe these safety precautions to prevent you or those around you from inflicting injury and to avoid unnecessary damage to the property.
- ■The symbols below indicate the levels of danger or damage that can be caused if the particular precautions are not observed and equipments are not used properly.



# Danger

This symbol indicates that incorrect handling will almost certainly cause death or serious injury.



# Warning handling poses a or serious injury.

This symbol indicates that incorrect handling poses a risk of causing death



# Caution

This symbol indicates that incorrect handling poses a risk of causing a slight injury or damage to the product or property.

■ The following symbols show specific directions:



Denotes actions prohibited to do.

Don't



Denotes not to disassemble the units

disassemble



Denotes not to touch with wet hands

Not wet hands



Denotes not to use where the equipment may get wet, and avoid get it wet.



Denotes mandatory instructions (matters that must be complied with).



Denotes to pull the power plug out of an outlet.

power plua

"Precautions" are divided into the following seven sections:	
General precautions for FOMA terminal, batteries,	
adapters, desktop holder, touch pen, and UIM	P.8
Precautions for FOMA terminal	P.9
Precautions for batteries	P.11
Precautions for adapters and desktop holder	P.12
Precautions for touch pen	P.13
Precautions for UIM	P.14
Notes on using near electronic medical equipment	P.14

General precautions for FOMA terminal, batteries, adapters, desktop holder, touch pen, and UIM



# **Danger**



Do not use, store, or leave the mobile phone or its accessories in places with a high temperature (such as near fire, near heating appliances. inside a kotatsu or near other furniture with heating elements, in places exposed to direct sunlight, or in cars heated by the sun). Fire, burns, or injury may result.



Do not place the FOMA terminal or its accessories inside cooking appliances such as microwave ovens or high-pressure containers. Fire, burns, injury or electric shock may result.



Do not attempt to disassemble or remodel the FOMA terminal or its accessories

Fire, burns, injury or electric shock disassemble may result.



Avoid urine, etc. Water

from water, drinking water or pet Fire, burns, injury or electric shock may result.

Do not allow the FOMA terminal

or its accessories to get wet either

See "Waterproof Performance" on page 19 for details on waterproof performance.



With your FOMA terminal, use the batteries and adapters specified by NTT DOCOMO, INC. Dο Fire, burns, injury or electric shock

may result.



# Warning



Do not throw the FOMA terminal or accessories, or subject them to severe shocks

Don't

Fire, burns, injury or electric shock may result.



Do not allow electrically conductive foreign objects (such as metal pieces or pencil leads) to come into contact with the FOMA terminal's charging terminal or connector terminal. Do not allow such objects to enter into the FOMA terminal.

Fire, burns, injury or electric shock may result.



Do not cover or wrap the FOMA terminal or its accessories with a cushion, etc. while it is being used or recharged.

Fire or burns may result.



Dο

Before entering a gas station or other places where flammable gases are generated, be absolutely sure to turn off the FOMA terminal and stop charging if it is being charged.

Otherwise, the flammable gases may ignite.

Use the Osaifu-Keitai with the FOMA terminal turned off when you are near a gas station. (When IC Card Lock is set, release the lock. and then turn off the power.)



If odor, overheat, discoloration, or deformation is detected during use, battery charge, or storage. immediately follow the instructions below:

- Pull the power plug out of the outlet or cigarette lighter socket.
- Turn off the power of the FOMA terminal
- · Remove the battery pack from the FOMA terminal

Fire, burns, injury or electric shock may result.



### Caution



Do not place the FOMA terminal or accessories on unstable locations such as wobbly tables or slanted locations

They may fall off and cause injury.



Do not store in humid or dusty places, or in high temperature environments.

Fire, burns or electric shock may result



If the FOMA terminal and its accessories are used by a child. a quardian should explain how to operate them correctly. During use, a quardian should also check that they are being used as instructed. Otherwise, injury may result.



Keep out of the reach of babies and infants.

Accidental swallowing or injury may result



Take special care when you use the FOMA terminal for a long time with the adapter connected.

If you use the i-αppli programs, talk on the videophone, watch 1Seq programs and so on for a prolonged period of time while charging, the temperature of the FOMA terminal, battery pack or adapter may rise. If you keep direct contact with high-temperature parts, redness, itching, a rash or low-temperature skin burns may result depending on the state of your physical condition or constitution

### Precautions for FOMA terminal



# Warning

Do not directly point the infrared data port at someone's eves during transmission.



Doing so may harm the person's



communication, do not point the FOMA terminal's infrared data port at a home electrical appliance Don't which is equipped with an infrared device.

While using infrared

The infrared device may malfunction, and possibly cause an accident.



eyes. It is particularly important that you hold the mobile phone at a distance of at least one meter away from babies and infants when shooting them.

Do not light the flash close to

Light the flash close to eves may damage eyesight. Also, accidents such as injury might occur if someone is startled or dazzled by the light.



Do not allow liquids such as water, or foreign materials such as metal pieces or flammable materials to get into the UIM or microSD card slot of the FOMA terminal

Fire, burns, injury or electric shock may result.



Do not turn on the flash toward car drivers.

It disturbs driving, and accidents may result.



Turn off the FOMA terminal in places where use is prohibited such as in airplanes and hospitals. Otherwise, the electronic devices and electronic medical equipment in those places may be adversely affected. If the Auto power ON function is set, deactivate the setting, then turn off the power. For use inside medical facilities. make sure that you comply with their regulations. Engaging in any prohibited acts

such as using the FOMA terminal in an airplane is punishable by law. However, it may be possible to use a mobile phone in an airplane, such as by setting radio wave emission to off. Comply with the instructions given by the airline company.



When talking in Hands-free mode or when a ring tone is sounding, be absolutely sure to keep the FOMA terminal away from your ear. Further, when you play games or play back music with the earphone/ microphone etc. connected, adjust the sound volume to moderate volume

The excessive sound volume impairs your hearing. Further, accidents may result due to the hardness of hearing of surrounding sound.



For those with weak heart conditions, the vibrator and ring volume must be adjusted carefully. Dο Otherwise, the functions may adversely affect your heart.



If you are using an electronic medical device or other type of device, check with its manufacturer or vendor as to whether it will be affected by the signals from the FOMA terminal.

The FOMA terminal may adversely affect the device.



Turn off the FOMA terminal when near electronic devices using high-precision control or weak signals.

The FOMA terminal may cause the electronic devices to malfunction and have other adverse effects. \* Electronic devices that may be affected:

Hearing aids, implanted cardiac pacemakers, implanted defibrillators, other electronic medical equipment, fire alarms, automatic doors and other automatically controlled devices. If you use an implanted cardiac pacemaker, implanted defibrillator or any other electronic medical equipment, consult the manufacturer or retailer of the device for advice regarding possible effects from the radio waves.



If the display part or camera lens is broken, be careful about broken glasses or the exposed interior of the FOMA terminal.

A film is coated on the surface of the display area and the plastic nanel is used for the surface of the camera lens, making it hard for the glass to break into pieces. However, if you touch the damaged or exposed parts by mistake, you may injure yourself.



# Caution



Do not swing around the FOMA terminal by its strap, antenna or other parts.

You may hit yourself or others. possibly causing injury or other accidents



Do not use the FOMA terminal if it has been damaged.

Don't

Fire, burns, injury or electric shock may result.



When using the motion sensor, ensure that you check around you for safety, securely take hold of your FOMA terminal, and do not swing more than necessitated. Otherwise, injury or other accidents

may result.



The surface of the display is coated by a film that prevents the surface from damage to ensure your safety when you accidentally drop or give shock to your FOMA terminal (for preventing the reinforced glass from scattering). Do not forcibly peel off or give damage to the film.

If the display is damaged while you operate the FOMA terminal with the film peeled off, you might suffer an iniury.



If you accidentally damage the display part and the substance inside leaks out, keep your face. hands and skin away from it. Otherwise, you may impair your evesight or damage your skin. If this substance should get into your eyes or mouth, immediately rinse them with clean water and then seek medical attention If it should adhere to your skin or clothing, immediately wipe it off with alcohol or similar liquid, and then rinse the affected area with soap and water.



inside a car, check with its manufacturer or dealer whether the signals from the FOMA terminal will have any adverse effects. In some vehicle models, the signals may adversely affect the electronic devices inside the vehicle. Such cases are rare. However, if this happens, stop using the FOMA terminal immediately.

Before using the FOMA terminal



Itching, rash or eczema may be caused depending on your physical conditions or predisposition. If an abnormality occurs, stop using the FOMA terminal immediately, and then seek medical attention. See "List of materials used" on

page 15 for material of each part.



Be careful not to get your finger or a strap caught in the parts when you close or open the FOMA terminal. Otherwise, injury or other accidents may result.



View the display in a sufficiently light place keeping a certain distance from your eyes. Otherwise, your eyesight may



If the crystal glass has dropped from the handset, do not leave it Iving around.

Accidental swallowing or injury may result.

In the event that the crystal glass has been swallowed or that it should get into somebody's nose, ear or eve, seek medical attention immediately.

### Precautions for batteries

Check the description on the label of the battery pack for the type of battery.

Description	Type
Li-ion 00	Lithium-ion battery



# **Danger**



Do not let any metal object such as a wire come in contact with the battery terminals. Also do not carry or store the battery together with any metal objects like a necklace. Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



When installing the battery in the FOMA terminal, check that it is facing the right way, and if the battery cannot be installed easily, do not force it into place.

Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



Do not throw the battery into fire. Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



Don't

Do not pierce it with nails, hit it with a hammer, or step on it. Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



If the battery fluid or other material gets into your eyes, do not rub them. Flush your eyes with clean water and seek medical attention immediately.

Otherwise, the loss of eyesight may result



### Warning



Never use the FOMA terminal if it has damages such as deformities or scratches as a result of dropping it.

Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



Immediately stop using the FOMA terminal and keep it away from fire if the battery leaks or emits an odor.

The leaked battery fluid may ignite, causing fire or burst.



Be careful that your pets do not bite into the battery pack.

Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



### Caution



Do not dispose of the exhausted battery with other waste.

Don't

The battery may catch fire or

damage the environment. After insulating the battery terminals with tape, take the unneeded battery to a handling counter such as a docomo Shop or dispose of it in accordance with local waste disposal regulations.



Do not use or attempt to charge a wet battery.



Otherwise, the battery pack may ignite, burst or overheat and its electrolyte may leak.



If the electrolyte fluid or other material inside the battery has leaked out, do not allow it to come into contact with the skin on your face, hands or any other part of your body.

Contact may result in loss of sight or skin problems.

If you get the fluid or other material in your eves or mouth, or on skin or clothing, immediately wash the affected areas with clean water. If you get it in your eyes or mouth, immediately seek medical attention after rinsing.

### Precautions for adapters and desktop holder



# Warning



result

Do not use the adapter if its cord has been damaged. Fire, burns or electric shock may



Do not use the AC adapter and desktop holder in humid places such as a bathroom



Fire, burns or electric shock may result.



The DC adapter is for use only in a negative (-) grounded vehicle. Do not use it in a positive (+) grounded vehicle.

Fire, burns or electric shock may result.



If a thunderstorm is nearby, do not touch the adapter. Otherwise, you may receive an

electric shock.



Never short-circuit the charging terminal when the adapter is plugged into the power outlet or cigarette lighter socket. Also, never touch the charging terminal with fingers or other bare skin.

Fire, burns or electric shock may result.



Do not place heavy objects on the adapter cord.

Fire, burns or electric shock may result.



When plugging the AC adapter into the power outlet, or when unplugging it from the outlet, do not allow metal straps or other metal objects to come in contact with it.

Fire, burns or electric shock may result



Do not touch the adapter cord, desktop holder, or power outlet with wet hands

hands

Fire, burns or electric shock may result.



Use the adapter at the specified V AC.

When charging the FOMA terminal overseas, use the AC adapter available for use overseas to charge the FOMA terminal. Supplying the wrong voltage to

the AC adapter may result in a fire. burns or electric shocks. AC adapter: 100 V AC

DC adapter: 12/24 V DC [For negative (-) grounded vehicles onlyl

AC adapter available for use overseas: 100 V to 240 V AC [Connect only to household AC outlet



If a fuse of the DC adapter has blown, replace it with a specified fuse

Dο Fire, burns or electric shock may result.

> For the specified fuse, refer to each instruction manual.



Keep the power plugs dust-free. Fire, burns or electric shock may result.

Dο

When plugging the AC adapter into the power outlet, plug it in securely.

Dο Fire, burns or electric shock may result



When unplugging the power plug from the power outlet or cigarette lighter socket, do not yank the adapter cord, but take hold of the adapter to unplug it.

Fire, burns or electric shock may result.



out

When you do not intend to use the adapter for a long period of time, disconnect the power plug from the power outlet or cigarette lighter power plug socket.

Fire, burns or electric shock may result



If liquids such as water get in the adapter, unplug the power cord immediately from the outlet or cigarette lighter socket.

OUIT

power plug Fire, burns or electric shock may result



Before cleaning, pull the power plug out of the outlet or cigarette lighter socket.

Fire, burns or electric shock may power plug result.

### Precautions for touch pen



# Caution



Do not point the touch pen toward other persons. You may jab yourself or somebody



else with its pointed end, possibly causing injury or even loss of sight. When the touch pen is attached to

the FOMA terminal by the strap, do not take hold of the touch pen and wave or swing the terminal about. Doing so may cause the cap to become detached or the strap to snap, in turn causing the terminal to strike you or somebody else and possibly resulting in an injury, an

accident, malfunctioning and/or

damage.

### **Precautions for UIM**



## Caution



Be careful not to touch the cut surface of the UIM when removing

Otherwise, injury may result,

### Notes on using near electronic medical equipment

■ The description below meets "Guidelines on the Use of Radio-communication Equipment such as Cellular Telephones - Safeguards for Electronic Medical Equipment" by the Electromagnetic Compatibility Conference Japan.



### Warning



Comply with the following in hospitals or health care facilities: . Do not carry the FOMA terminal

- into operating rooms, intensive care units (ICU) or coronary care units (CCU).
- . Turn off the FOMA terminal in hospital wards.
- If there is any electronic medical equipment near you, turn off the FOMA terminal even when in a location such as a lobby.
- . Comply with any regulations of hospital and health care facilities instructing you not to use or carry in a mobile phone.
- If the Auto power ON function is set, deactivate the setting, then turn off the power.



Dο

Turn off the FOMA terminal in trains during the rush hour or other crowded areas as there may be someone near you with an implanted cardiac pacemaker or implanted defibrillator.

The FOMA terminal's signals may adversely affect the operation of implanted cardiac pacemakers and implanted defibrillators



Dο

If you use an implanted cardiac pacemaker or implanted defibrillator, use the FOMA terminal 22 cm or more away from an implanted cardiac pacemaker or implanted defibrillator.

The FOMA terminal's signals may adversely affect the operation of implanted cardiac pacemakers and implanted defibrillators.



Patients using electronic medical equipment other than implanted cardiac pacemakers or implanted defibrillators (outside medical establishments for treatment at home, etc.) should check the influence of radio waves upon the equipment by consulting its manufacturer.

The FOMA terminal's signals may adversely affect the operation of electronic medical equipment.

### List of materials used

Where it is used		Material/Finishing
Outer casing Display surface		PC/hard coating
	Numeric key surface, Display side surface, Bottom part of display panel, Display back surface*1	PC/UV coating
	Display back surface**2	PC/tin vapor deposition + UV coating
	Battery surface (Hinge side)	ABS/UV coating
	Back cover	PC + ABS/UV coating
Connector terminal		Stainless steel/ nickel plating + tin plating
Connector	Cover	PC, elastomer/UV coating
terminal	Packing	Silicon rubber
Camera lens area		PMMA/hard coating
Side key		PC/aluminum vapor deposition + UV coating
Around the side key		ABS/UV coating
Charging terminal		Brass/nickel plating + nickel palladium plating + gold plating
Ornament area (Display back surface side)**2		Crystal glass
Key area, Sheet area, and Open/close stopper of numeric key surface		Acrylic urethane
Touch pen	Body, Cap	ABS
	Inside of cap, Pen tip	POM
	Strap band	Polyester

Where it is used		Material/Finishing
Call/Charging indicator (Display back surface side)		Crystal glass
	he Call/Charging play back surface side)	PC/tin vapor deposition + UV coating
Corner area a display	t the bottom part of the	Elastomer
Display panel		PET/hard coating
Tape (Side surfaces of the battery compartment)		PET
Battery comp	artment surface	Stainless steel/nickel plating
Battery	Resin part	PA
terminal	Terminal area	Titanium copper/ nickel plating + gold plating
Battery pack	Resin area	PC
	Label	PET
	Terminal area	Glass epoxy substrate/ nickel plating + gold plating
UIM tray		POM
Hinge area	Center	PA/UV coating
	Display back surface side	ABS/UV coating
	Hinge support area	PC
	Cap	PET resin
Flash part		PMMA/hard coating
Label (Inside of the inner cover)		PET
Label (Outside of the inner cover)		PEN
Label (Battery compartment)		Polyester
Inner cover inside the back cover		PC, Silicon rubber

	Where it is used	Material/Finishing
1Seg	Tip resin part	ABS/UV coating
antenna	Metal part (Bottom of the tip resin part)	Stainless steel
	Metal part (Wire area)	Nickel-titanium alloy
	Hinge area at bottom part	Stainless steel
	Holder area	Zinc alloy/nickel plating

- Materials may vary in some areas depending on the body color.
- %1 Body color "White" "Pink"
- %2 Body color "Pink Gold"

# Handling Precautions



### General notes

■The P-04C is provided with the waterproof performance, however, do not have water entered into the inside of the FOMA terminal, or do not spray water over accessories and ootional items.

The battery, adapter, desktop holder, and UIM are not waterproofed. Do not use them in environments, which are high in humidity such as in bathrooms, and do not allow them to get wet from rain. Furthermore, if carrying them against your body, they become moist due to perspiration and the internal parts may become corroded, causing malfunction.

If the parts are found to have been damaged due to exposure to the liquids, any repairs will not be covered by warranty, or repairs may not be possible.

This may be repaired at a cost if repairs are possible.

- ■Use a dry soft cloth such as the one for cleaning glasses to clean the equipment.
  - The display may be scratched if it is rubbed hard with a dry cloth.
  - Stains may result from droplets of water or dirt if they are left on the display.
  - Do not use alcohol, thinner, benzene, detergent or other solvents for cleaning, otherwise the printing may be removed or discoloration may result.
- Occasionally clean the terminals of the equipment using a dry cotton swab, etc.

The soiled terminals deteriorate the connection and might cause power discontinuity or incomplete charging. Wipe the terminals with a cotton swab, etc.

Take care not to damage the terminals when cleaning them.

Do not place the FOMA terminal near an air conditioner outlets. Condensation may form due to rapid changes in temperature, and this may corrode internal parts and cause malfunction. Do not apply excessive force onto the FOMA terminal and battery pack.

If you put the FOMA terminal in a bag along with many other articles or sit with the FOMA terminal in a clothes pocket, the display, internal circuitry and the battery pack could be damaged or malfunction. Also, if an external device is left connected to the connector terminal (earphone/microphone terminal), the connector could be damaged, or malfunction.

- Do not rub or scratch the display part with metals. Doing so might cause damage to the part, resulting in trouble or malfunction.
- Carefully read each instruction manual attached to battery pack or adapter.

### Notes on handling the FOMA terminal

Never forcibly press the surface of the touch panel, or operate it with something having a sharp point like a claw, ballpoint pen, or pin.

Damage to the touch panel might result.

- Avoid using in extremely high or low temperatures.
  The FOMA terminal should be used within a temperature range
  - of 5° C to 40° C (however, the use at 36° C or higher should be limited to temporal use in a bathroom etc.) and a humidity range of 45% to 85%.
- ■If the FOMA terminal is operated near a land-line phone, television set, radio or other devices in use, it may adversely affect the devices. Operate the FOMA terminal as far away from these devices as possible.
- It is recommended that you make separate notes of the information stored in the FOMA terminal and keep such notes in a safe place.

We take no responsibility for any loss of the stored data items.

- ■Do not drop the FOMA terminal or subject it to strong impacts.

  Malfunction or damage may result.
- Do not insert an external device to the connector terminal (earphone/microphone terminal) at a slant when connecting, and do not pull it out when it is inserted.

  Malfunction or damage may result.

- Make sure that nothing, such as the touch pen or strap, gets caught between the parts of the FOMA terminal when you close it. Otherwise, malfunction or damage may result.
- ■The FOMA terminal becomes warm during use or charging but this is not an abnormality. Use the FOMA terminal as it is.
- Do not leave the camera in places exposed to direct sunlight. Pixels may be discolored or burns may result.
- When using the FOMA terminal, ensure that you shut the cover for the connector terminal.
- Dust or water might enter into the FOMA terminal, causing malfunction.
- Do not use the FOMA terminal with the back cover left removed. The battery pack might come out, or malfunction or damage may result.
- Do not apply an excessively thick sticker onto the surfaces of the display or keys.

Otherwise, malfunctioning, damage or problems with operation may result.

- While you are using the microSD card, never take it off or turn off the power of the FOMA terminal.
- Data may be erased or malfunction may result.
- ■Do not place magnetic cards or similar objects near the FOMA terminal or between phone parts.

  Magnetic data on cash cards, credit cards, telephone cards and
- magnetic data on cash cards, credit cards, telephone cards and floppy disks, etc. may be deleted.

  Do not bring magnetic substances close to your FOMA terminal.
- Problems with operation may result if items with strong magnetic fields are brought close to the FOMA terminal.

# Notes on handling batteries

Batteries have a limited life.

Though it varies depending on the usage state, you are advised to replace the battery if its usable time is extremely short even when you fully charge it. Make sure that you buy the specified battery.

- Charge the battery in a place with an appropriate ambient temperature of 5° C to 35° C.
- ■The usable time of the battery differs depending on the usage environment or its remaining life.
- Depending on how the battery pack is used, it might swell as its operating life becomes short, but this is not a problem.

- ■Note the following points when you store a battery pack:
  - Storage in a fully charged state (the state immediately after charging is completed)
  - Storage with no battery power left (the state you cannot turn on the power of the handset due to battery drain)

These may lower the battery pack's performance and shorten its operating life.

Before storing a battery, check its remaining battery level: it is recommendable, as a general rule, for the battery icon to show two bars or for its remaining battery level to be about 40%.

### Notes on handling adapters and desktop holder

- Charge the battery in a place with an appropriate ambient temperature of 5° C to 35° C.
- Charge the battery where:
  - . There is very little humidity, vibration, and dust.
  - There are no land-line phones, television sets or radios nearby.
- ■While you are charging, the adapter may become warm. This is not a malfunction, so you can keep on using.
- Do not use the DC adapter for charging the battery when the car engine is not running.
  - The car battery could go flat.
- ■When using the power outlet having the disengaging prevention mechanism, observe the instructions given in that instruction manual.
- Do not give a strong shock. Also, do not deform the charging terminal.
  - Malfunction may result.
- When housing the leg onto the desktop holder, be careful that your fingers or the adapter cable not to be caught between them.

Accidents such as injury or damage may result.

### Notes on handling touch pen

- ■Use the touch pen only with the FOMA terminal which supports it: Do not use it with any other terminals.
- Malfunction or damage of device may result.
- ■The touch pen is not waterproofed. Notes that if the touch pen gets wet, moisture may remain inside the cap.

### Notes on handling the UIM

- Do not apply more force than is necessary when installing or removing the UIM.
- The warranty does not cover damage caused by inserting the UIM into some other types of IC card reader/writer. Always keep the IC portion clean.
- Use a dry soft cloth such as the one for cleaning glasses to clean the equipment.
- It is recommended that you make separate notes of the information stored on the UIM and keep such notes in a safe place.
- We take no responsibility for any loss of the stored data items.

  For the environmental protection, bring any unneeded UIMs to a handling counter such as a docomo Shop.
- Do not damage, carelessly touch, or short-circuit the IC.

  Data might be lost or malfunction may result.
- ■Do not drop the UIM or subject it to strong impacts.

  Malfunction may result.
- Do not bend the UIM or place something heavy on it.
- Malfunction may result.

  Into the FOMA terminal, do not insert the UIM with a label or
- sticker pasted.
  Malfunction may result.

### Notes on handling the FeliCa reader/writer

- ■The FeliCa reader/writer function on the FOMA terminal uses very weak radio waves which do not require to be licensed as radio stations.
- ■The FeliCa reader/writer is operated on the 13.56 MHz frequencies. When you use another reader/writer nearby, take enough distance between your FOMA terminal and the reader/writer. Further, ensure that there are no radio stations that use the same frequencies.

### Caution

■ Do not use the modified FOMA terminal. Using a modified FOMA terminal infringes the Radio Law.

The FOMA terminals are granted technical regulations conformity certification as the specified radio equipment under the Radio Law and bear a "technical conformity mark (a)" on the nameplate as evidence of conformity. Unscrewing the FOMA terminal and modifying internal components void the technical regulations conformity certification. Do not use the FOMA terminal in this state, which infringes the Radio Law.

■Take special care not to operate the FOMA terminal while driving.

Holding a mobile phone in your hand while driving is subject to a fine or other penalties.

However, this does not apply in unavoidable circumstances when, for instance, responding to someone who is sick or injured or when maintaining public order.

■Use the FeliCa reader/writer functions in Japan only.

The FeliCa reader/writer functions on the FOMA terminal have been authorized in compliance with the radio transmission standards in Japan.

You might be imposed punishment if you use them overseas.

# Waterproof Performance



Your P-04C comes with the waterproof performance equivalent to IPX5\*1 and IPX7\*2 with the connector terminal cover, inner cover and back cover firmly closed and no clearance gap and float found in them.

- ※1 IPX5 means that the P-04C maintains its performance as a phone even after a water jet flow has been sprayed over the FOMA terminal from all directions under conditions where water in a volume of 12.5 liters/minute is sprayed from a distance of about 3 meters for at least 3 minutes using a water-pouring nozzle with an inside diameter of 6.3 mm.
- ※2 IPX7 means that the P-04C maintains its performance as a phone even after the phone has been gently submerged in a container of still city water to a depth of 1 meter at room temperature, and left in place for about 30 minutes, and then removed from the water.
- (Note) This does not mean that the waterproof performance is guaranteed in all given conditions of actual use. Read this manual thoroughly before use to prevent invasion of water or foreign materials and then to enable you to safely use your FOMA terminal.

You can operate the FOMA terminal in the rain, in your kitchen, in the bathroom, and also around poolside.

# In the Rain

You can talk on the phone by holding the phone in the rain with your wet hand without umbrella. (Less than 20 mm/hour of rainfall, and your feet get wet by drops of rain rebounded off the ground)
When your hands are wet or water drops remain on the FOMA terminal, do not attach/remove the back cover, nor open/close the connector terminal cover

### Wash

- When the FOMA terminal gets dirty, you can slowly swing and wash it in a bowl filled with fresh water or tap water at an ambient temperature, or wash it by hand while running a slightly-weak water flow from a faucet.
- Wash your FOMA terminal with the back cover firmly attached and while you are pushing the cover of the connector terminal down.



- · Do not use brushes, sponges, soaps, or detergents for washing.
- After rinsing off the FOMA terminal in water, wipe its surfaces thoroughly using a dry cloth, drain off the water (see page 22), and allow the FOMA terminal to dry out naturally.

### On Leisure

- Do not soak or drop your FOMA terminal into a pool or the sea nor operate it in water.
- If pool water or seawater splash the FOMA terminal, wash the terminal by following the prescribed method (see page 19).



Sea/pool

### In the Bathroom

- Do not soak or drop your FOMA terminal into a bathtub, nor use it in water.
- Do not soak the FOMA terminal into spa or water containing soap detergent or bath additive.
- Do not directly expose to the strong water flows (such as water jets from a faucet or shower head strong enough to feel pain on the skin) that exceed the standard (see page 19).



Spa/bath salts

- · Avoid using the FOMA terminal for a long time in the bathroom.
- If you take your FOMA terminal from a cold place to a warm bathroom, condensation might result because of sudden change in ambient temperature. Warm it up until ambient temperature is restored, and then take it to the bathroom.

### In the Kitchen

- Do not spray liquids other than fresh water or tap water at room temperature onto the FOMA terminal or soak the terminal in them.
- Do not spray hot water or cold water onto the FOMA terminal or soak it in them.

### Important Information before Use

- Before using the FOMA terminal, make sure that you attach the back cover firmly after tightly closing the connector terminal cover and inner cover. If there is any small particles (fine fibers, hair or grains of sand) between the covers and the phone, water could find its way inside the phone. When attaching the back cover after closing the connector terminal cover and inner cover, ensure that there is no particles or dirt on or around these parts (especially the packing).
- Ensure that the connector terminal cover, inner cover and back cover are closed tightly and that none of these covers are askew. If the covers are not closed tightly, water could find its way inside the FOMA terminal.
- To keep the waterproof performance, you need to replace parts without fail once two years regardless whether any abnormality with the FOMA terminal is found or not. You are charged for replacement of parts. Take your FOMA terminal to a repair counter specified by DOCOMO.

# **Opening/Closing the Connector Terminal Cover**

- ■Opening the connector terminal cover
- Hook your finger over the groove, pull out the cover to direction A, and turn it as direction B.



- Closing the connector terminal cover
- Align the connector terminal cover in parallel with the FOMA terminal, and while holding its base part firmly, push it into place.
- ② Ensure that no float is found with the connector terminal cover as a whole.



# Removing/Attaching the Back Cover

### Removing the back cover

- 1) While pushing the area around the
  - mark down in direction A, slide the back cover (by 2 mm or more) in direction B to disengage and remove the cover.



② Using the projections on the inner cover, pull up the inner cover in the direction shown by the arrow and open it until it will go no further.



The inner cover should be firmly closed for maintaining waterproofness. Opening the cover forcibly may injure your nails or fingers.



### ■Attaching the back cover

① Fit the claws at the left, right and bottom sides of the inner cover into the corresponding indentations, and push the cover into place.





② Push the eight 
 marks printed on the sticker of the inner cover, and ensure that no float is found anywhere on the cover.



③ With the back cover stayed open about 2 mm, match it to the groove on the FOMA terminal. Then while pushing the back cover as a whole downward, slide it in the direction of the arrow, and then install.



Confirm there is no gap between the back cover and the FOMA terminal

# Caution

### ■About FOMA terminal

- Do not wash the FOMA terminal with a washing machine or ultrasonic cleaner.
- · Never charge the battery when it gets wet.
- Do not leave the FOMA terminal with drops of water remained on.
   The connector terminal might be short-circuited.
- Water might enter into the inside of the FOMA terminal through the keys or hinges. In cold districts, drops of water on the FOMA terminal might freeze, resulting in malfunction.
- If the FOMA terminal gets wet, keep the back cover attached and the connector terminal cover closed, drain off the water (see page 22), and immediately wipe off the moisture remaining on the FOMA terminal with a clean dry cloth.
- Do not drop the FOMA terminal nor give a shock to it.
   The deterioration of the waterproof performance might result depending on the damage.
- Do not soak the FOMA terminal in hot water, use in a sauna, nor expose to hot wind currents such as those of a dryer.
- The FOMA terminal does not float on water.
- Do not directly expose to the strong water flows that exceed the standard (see page 19) or submerge the mobile phone in water.
- Do not directly place the FOMA terminal on sandy beaches.
   Sands enter into the holes on the microphone, earpiece, or speakers may reduce the volume.
  - · If you operate the FOMA terminal with water drops or sands adhered to, sound might be deteriorated.
  - Even the slightest sands entered from the connector terminal cover, inner cover or back cover could cause water to enter the inside of the FOMA terminal.

- ■About the connector terminal cover, inner cover and back cover
- Do not open or close them with gloves put on hands.
   Fine dirt might adhere to the contact surface of the packing.
- Be careful that no fibers adhere to the packing when you try to wipe off moisture with a clean dry cloth.
- Do not peal the packing off. Also do not insert something pointed at the head into the clearance of the connector terminal cover or inner cover.

The packing is damaged, resulting in water to enter into the FOMA terminal.

- If the packing for the connector terminal cover or inner cover is damaged or deformed, replace them at a repair counter specified by DOCOMO
- If the back cover is broken, replace it with new one.
   Otherwise liquid such as water enters into the inside of the FOMA terminal through broken portions, and an electric shock or corrosion of the battery pack could result.
- When the FOMA terminal gets wet with the connector terminal cover or back cover left open, water enters inside, and an electric shock or malfunction could be caused. Do not use it as is, but turn off the power, remove the battery pack, and then take it to a repair counter specified by DOCOMO.

### ■About microphone, earpiece, and speakers

- Do not thrust something pointed at the head into the holes on microphone, earpiece, or speakers.
- Do not leave water drops adhered to them. It might happen that communications are disabled.

### Others

- Accessories and optional items are not waterproofed. When you
  watch 1Seg programs with your FOMA terminal attached to the
  desktop holder provided, do not operate it in a bathroom, shower
  room, kitchen, or lavatory where water is used, even if you do not
  connect to AC adapter.
- It is not that the waterproof performance is guaranteed in all given conditions of actual use. If the damage is found to be caused by your mishandling of the FOMA terminal as a result of our inspection, the guarantee is not supported.

### **Draining Water**

- If you operate the FOMA terminal with water drops left adhered to, the volume level from the speakers might be decreased or sound quality vary.
- Moisture may have entered inside through the clearance gap of the keys or hinges.

Follow the procedures described below to wipe moisture off the FOMA terminal:

① Wipe completely moisture off the surface of the FOMA terminal with a clean dry cloth.








<Draining from speaker>



- ③ Lightly push the FOMA terminal against a clean dry cloth, and wipe moisture off the clearance gap of the microphone, earpiece, speaker, keys, or hinges.
  - Do not directly wipe moisture out of joint gap using a cotton swab, etc.



- ④ Remove the back cover and wipe off any drops of water around the inner cover and the rear surface of the back cover, and then attach the back cover.
  - · Never open the inner cover.
  - · See page 21 for how to remove the back cover.

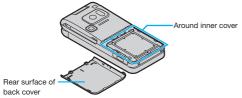

- $\ensuremath{\mathfrak{D}}$  Fully drain moisture and then operate the FOMA terminal.
  - Even when you follow the procedures for draining water as described above, moisture might remain in the FOMA terminal. Therefore, use the FOMA terminal after allowing it to dry out naturally. Also, take care to keep any objects you do not want to get wet away from the FOMA terminal since water may leak out from the FOMA terminal.

### When Charging Battery

Accessories and optional items are not waterproofed. Check the following before and after charging:

- Never charge the battery with the FOMA terminal left wet. If the FOMA terminal gets wet, drain and wipe off moisture with a clean dry cloth and then charge.
- When you charge the battery with the connector terminal cover open, firmly close it after charging. To prevent water from entering inside through the connector terminal, you are advised to use the desktop holder provided for charging.
- Do not touch the AC adapter and desktop holder with your hands wet.
- Do not use the AC adapter and desktop holder in a bathroom, shower room, kitchen, and lavatory where water is used.

# **Before Using**

# Sala Sa

# **Attaching UIM/Battery Pack**

To insert the UIM/battery pack, remove the back cover, then open the inner cover, and insert. (See page 21)

### Insert the UIM.

- 1. Pull the tab and slowly pull the tray straight out until it stops.
- Do not pull out the tray beyond the stop position. You may damage the tab if you do so.
- 2. Place the UIM on the tray with the golden IC surface upward.
- Align the cut of the UIM with the tray.
- 3. Push the tray until it stops.
- Push the tray inward firmly until it is in place.

### When you remove the UIM

Pull the tray out and remove the UIM.

 Take out the UIM by lifting up slightly from the tray.








# 2 Attach the battery pack.

With the arrow mark facing up, fit the tab side of the battery pack to the FOMA terminal securely, and then push the battery pack in direction B while pressing it against direction A.

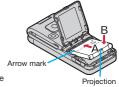

### When you remove the battery pack

Lift the battery up using the projection of it.

### If the Tray is Disengaged

Place the tray in the FOMA terminal (battery compartment) before sliding to fit in.

- Slide the tray to bring the cutout corner towards the projection in the battery compartment, and place the tray parallel to the FOMA terminal.
  - If the tray does not fit straight in, do not force it. Move it gently from side to side or remove to start fitting again.



Projection

Cutout

- 2. Push the tray straight in.
  - Note that damage may result if you try to force the tray into position while it is placed at an angle.



### About UIM


The UIM is an IC card that holds your information such as phone numbers. You cannot use the FOMA terminal for communications such as voice/videophone calls, i-mode, or sending/receiving mail, unless the UIM is inserted.



- Ensure that you turn off, close, and take hold of the FOMA terminal when you install or remove the UIM or battery pack.
- You cannot use the UIM (blue) on your FOMA terminal. If you have that blue one, have it replaced at a docomo Shop.

# Charging


# **Charging Using Desktop Holder**

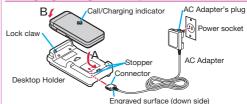

- With the engraved surface of the connector of the AC Adapter (option) face down, plug the connector straight into the connector terminal of the desktop holder.
- Pull out the AC Adapter's plug, and plug it into a household power socket of 100 V AC.

- 3 Put the bottom of the FOMA terminal into the stopper of the desktop holder (A) to fit the head to the lock claw, and then depress the FOMA terminal until it clicks (B).
  - Be sure to charge the FOMA terminal with the FOMA terminal closed.
  - Be careful that a commercial strap is not caught between the FOMA terminal and desktop holder.
- 4 When charging is completed, hold the desktop holder with fingers and lift up the head of FOMA terminal to remove.

# **Charging Using AC Adapter**

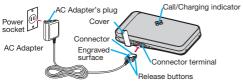

- Open the cover of the connector terminal. (See page 20)
  - To charge the battery, place the cover of the connector terminal as illustrated. When you close or open the FOMA terminal with the cover of the connector terminal opened, be careful not to catch the cover of the connector terminal between the parts of the FOMA terminal.
- Insert the connector with the engraved surface facing up until it clicks.
- 3 Pull out the AC Adapter's plug, and plug it into a household power socket of 100 V AC.
- 4 When charging is completed, pull out the connector from the connector terminal while pressing the release buttons.
  - For detaching, pull out the connector horizontally while pressing the release buttons. Malfunction could result if you try to pull it forcibly.
  - When charging starts, the Call/Charging indicator lights in red. When charging is completed, it turns off.

# **Turning Power ON**



# Press and hold for at least one second.

After the Wake-up display and notes of waterproof are displayed, the Stand-by display appears.

### To turn off the power

- Press and hold for at least two seconds Select "YES".
- Depending on the display in operation, the confirmation display may not appear.

The Initial Setting display appears when any of Initial Setting items have not been set. In that case, follow on-screen instructions



# **Configuring Initial Setting**

The Initial Setting display appears when you turn on the power for the first time.

### Set the date and time.

You can set the date and time. You can also correct the date and time automatically.

# Set your Terminal Security Code.

You can set your Terminal Security Code required for setting functions.

- "0000" is set at purchase.
- 3 Set the size of fonts.

You can set the size of fonts on the display.

# 4 Set Location Request Set.

You can select whether to notify your current location for when a GPS location provision request arrives.

# 5 Set Keypad Sound.

You can select whether to play a keypad sound.


# Notifying Your Caller ID on the Other Party's Phone

- TEL function Dial/Receive setting
  Caller ID notification
- Select "Activate/Deactivate".
- 3 Select "ON".
  - If you hear the guidance requesting your caller ID, either set the Caller ID notification or add "186" first and then try calling again.

# **Checking Your Own Phone Number**

You can check your own phone number (Own number), the model name, etc.

- MENU Profile
  - From the display on the right, press
     ( Edit ) to store your name, mail
     address. etc.
  - Refer to "Mobile Phone User's Guide [i-mode] FOMA version" for how to check or change your mail address.

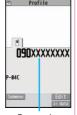

Own number

# **Switching to English Display**


- ►文字表示/入力 (Text display/input)

  Select language
- 2 Select "English".
  - The "バイリンガル (Select language)" setting is saved on the UIM.


# Screen Explanation




# Viewing Display/Icon

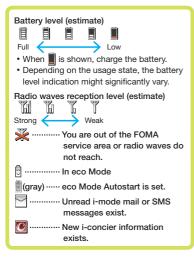



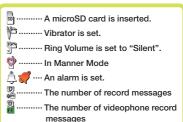

Here are given descriptions of the main icons. For descriptions of other icons appearing on the display, you can get them following the procedures as shown below:

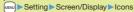



# Notification icon ......New i-mode mail or SMS ......Missed call ......Record message ......Videophone record message ......The mode has automatically changed to eco Mode (ECO NAVI).

# Proceed to respective functions from icons, etc.

terminated (ECO NAVI).

..... 使いかたガイド (Guide)

····Send mail message to "スグデコ! (Sugu-deco)"

··· Shows the site of the URL

**Desktop icon** 


C ..... i-concier

····· Pedometer

Start by voice

O ..... Quick search

You can proceed to respective functions by selecting "Status icon", "Notification icon", "Desktop icon", date and time.

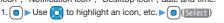

# **Using Motion Control**


While the functions are running in Viewer Style, Motion Control enables to switch the display direction automatically by tilting the FOMA terminal.

- The major functions that support Motion Control are listed below:
  - · Picture Album\*1 · Full Browser\*2
- ※1 When the mobile phone is tilted by 90 degrees to the left or right or when it is rotated by 180 degrees, the top and the bottom of the display follow the orientation of the mobile phone.
- ※2 When the mobile phone is tilted by 90 degrees to the left, the display appears horizontally.
- Setting Other setting
  Motion control setting
- Select "ON" or "OFF".
  - If you tilt the FOMA terminal while a confirmation or submenu pop-up display appears, the pop-up display may be cleared.

# **Navigation Displays and Key Operations**

Key operations you can perform while you are operating a function are shown at the bottom of the display. (Navigation displays)

Key assignments and basic navigation displays

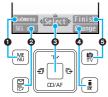

0	Operations you can perform with the key.	Submenu Exit
0	Operations you can perform with the  key.	SEL all Page 🛦
8	Operations you can perform with the key.	Select Set
	Directions in which you can scroll and select items with the key.	4 •
4	Operations you can perform with the key.	Change Page ▼
6	Operations you can perform with the by key.	Finish Send

# **Operating Command Navigation Key**

- . Moves the cursor or
- highlighted display up. (Hold down to scroll continuously.)
- . Scrolls the page up.

- - . Moves the cursor to the right.
- · Scrolls forward page by page. (Hold down to scroll continuously.)



(7


- · Moves the cursor to the left.
- · Scrolls back page by page. (Hold down to scroll continuously.)
- · Moves the cursor or highlighted display down. (Hold down to scroll continuously.)
- · Scrolls the page down.

# **Menu Operation**

### Main Menu

Press (MENU) from the Stand-by display to show Main Menu.

 In this manual, the descriptions of operating procedures are given mainly starting with the Stand-by display.

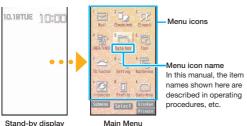

Use to highlight a menu icon and press (Select). Functions categorized by the menu items are displayed. Repeat selecting items to call up the target function.

- You can press (CLR) to return to the previous display. When you press from any display, the Stand-by display returns.
- See "Function List" for the menu items of each function. (See page 103)

# Simple Menu


Simple Menu is a menu focusing on only basic functions for easy operation. By setting "シンプルメニュー (Simple menu)" using the Kisekae tool, you can show the Simple Menu by pressing [www] from the Stand-by display.

 Some operating procedures or items which appear on the display in Simple Menu differ from the ones described in this manual.

### Submenu

When "Subranu" is displayed at the lower left of the display, you can use functions such as Store, Edit, and Delete by pressing (NEW).

<Example> Display the submenu of a Phonebook entry

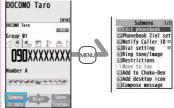

The "
 "is displayed when there are further items under a particular menu item.

# **Functions Starting with Simple Operation**

Depending on the function, you can start it either by selecting a menu item or by key operation from the Stand-by display. The following are the functions you can start by pressing keys for at least one second.

Key	Performance
•	Sets/Releases Keypad Lock.
Q	Shows the Registration display for Phonebook entries.
	Starts 1Seg.
	Executes Check mail/message.
<b>E</b>	Shows the Software list.
$\mathcal{C}$	Executes Start by voice.**
3	Sets/Releases IC Card Lock.
5	Sets/Releases eco Mode.
7	Shows the Font setting display.
8	Switches View Blind on/off.
*	Activates/Deactivates Public mode (Drive mode).
#	Activates/Deactivates Manner Mode.
2	

\*This function is available in Japanese mode only.

### ■Operations while the FOMA terminal is closed

Key	Performance
	Activates/Deactivates Manner Mode.

### Multi One-touch Function

You can register frequently used functions and telephone numbers in "Multi One Touch set.". When (1) is pressed while in Stand-by, the functions which have been registered can easily be called up.

- 1. Press and hold find for at least one second.
- 2. Select an item Select "YES".

When II) or III which has an already registered Multi one-touch function is pressed for at least one second on the Stand-by display, a confirmation display appears asking whether to change the setting.



# **Using Touch Panel**

In place of operating the keys in Normal Style, in Viewer Style, you can perform operations by touching the touch panel (display) using the touch pen to select items, scroll the display and perform other operations.

- In Normal Style, you cannot perform any operations by touching the touch panel.
- Before use, peel off the stickers which is stuck on the touch panel at the time of purchase.
- ■Notes on using Touch Panel
- In the following cases, the touch panel may not work even if you touch it. Also, following operations may cause a malfunction.
- Operation with foreign objects placed on the operation surface
- Operation on the touch panel on which a protective sheet or a sticker is put
- Do not press too forcefully down on the touch panel with your fingers or fingernails or with a ballpoint pen, pins or any other sharply pointed object.
- You might not be able to operate the Touch Panel depending on the i- $\alpha$ ppli program. If this is the case, operate it in the Normal Style.

### **Touch Pen**

When using the touch pen, touch the touch panel (display) lightly with the tip of the pen.

- When attaching the touch pen to the FOMA terminal using its strap, remove the cap first, and then attach it.
- Removing the touch pen from the cap
- Take hold of the cap, turn the pen counterclockwise, and remove it.



- ■Attaching the touch pen to the cap
- Take hold of the cap, turn the pen clockwise, and attach it.
  - Keep turning the pen until it locks into place.



#### **Basic Touch Panel Operations**

Use the touch pen to perform the touch panel operations.			
Operation	Main Operation		
Touch Simply tap the touch panel.	Select/OK  Touch an item or control key on the touch panel.		
Long touch Touch and keep the touch pen on the touch panel.	Move the cursor or highlighted item on the touch panel  * Touch an item long on the list, etc.  Continuous operation  * Touch a control key long for fast forward, etc.		
Slide Touch and keep the touch pen on the touch panel and move it up, down, right or left.	Scroll  • Slide an item on the list, etc.  Display the previous or next data  • You can use the "Slide" operation to display the previous or next data/page, etc.		
Quick slide Quickly slide the touch pen up, down, right or left and	Scroll     On some displays, scrolling continues for a while even after you lift the touch		

then lift it off from the touch nanel



pen up. To stop scrolling, touch the panel while scrolling.

#### Display the previous or next data

. You can use the "Quick slide" operation to display the previous or next data/page, etc.

#### Control key

Whereas in Normal Style you perform command navigation key operations, dial key operations or submenu operations, in Viewer Style you can perform the equivalent operations by touching (long touch) the control kevs.



#### Slide lever

By adjusting the position of the slide lever, you can set the volume level, etc.



#### ■ Magnification/Reduction

You can zoom in or out the pictures displayed in the Picture Album and sites displayed in the Full Browser



· Position and type of control keys and slide levers depend on the functions

#### **Setting Display Lock**

You can set Display Lock to ensure that no further operations using the touch panel will be performed. In this way, you can prevent operations from being carried out in error while you are carrying the FOMA terminal around in a bag.



# Press n Viewer Style.

What is shown on the display is cleared, and Display Lock is set.

• When you press \ while a function screen is displayed, the function concerned will be exited. When you press and hold n for at least one second. Display Lock can be set even while functions are operating.

#### To release

- 1. Press n in Viewer Style.
- Perform the sliding operation to "
   within 10 seconds.
- Display Lock is also released when you switch the FOMA terminal to Normal Style.

### Adjusting the Touch Panel

Take the steps below to adjust the Touch Panel operations (where the touched positions are detected).

## MENU Setting Other setting

Touch panel adjustment

Switch to the Viewer Style, and operate as instructed below.

#### Touch the center of "+".

Following what appears on the display, repeat the operation in step 2.

• When the adjustments are completed, you can check the post-adjustment operation. You can perform the adjustments again by touching "Retry".

### **Displaying Touch Menu**

In Viewer Style, Touch Menu is displayed.

#### **Home Menu**

When " " is touched with Viewer Style selected, the Home Menu is displayed. On the Home Menu, you can register short-cut icons up to six and activate respective functions by touching the corresponding short-cut icon. Notification icons and i-Channel tickers are also shown on this menu.



#### **Customize Menu**

When " is touched with Viewer Style selected, the Customize Menu is displayed. On the Customize Menu, you can register short-cut icons up to 27 and activate any of the functions by touching the corresponding short-cut icon.



#### **Normal Menu**

When " is touched with Viewer Style selected, the Normal Menu is displayed. You can operate any of the functions by touching the corresponding icon on this menu. The Normal Menu icons cannot be changed.



## Stand-by Display (Viewer Style)

When " is touched with Viewer Style selected, the Stand-by display (Viewer Style) appears.

The Home Menu is displayed by touching the screen on the Stand-by display (Viewer Style).

### **Using Start by Voice**

You can call up the function by voice.

This function is available in Japanese mode only.

- The first time you use this function, select "利用する (Use)" on the usage information display, or press (開始).
- Press and hold for at least one second.
- When "それではどうぞ ★★音声受付中 ★★ (Please ★★Voice is being accepted.★★)" is displayed, pronounce the function into the microphone within 10 seconds.
  - When the function to be called up cannot be specified, you can look it up in "使いかたガイド (Guide)".
- Speak as clearly as possible, in natural conversation speed.
- · Speak in quiet, noise-free locations.
- Recognition result may differ depending on pronunciation and the surrounding environment.

## **Using Guide**

You can search and check the operating methods of the functions you want to know and use. You can execute some functions from "使いかたガイド (Guide)".

This function is available in Japanese mode only.

】 ●便利ツール (Tool) ●使いかたガイド (Guide)



Enter a keyword or select a way of searching.

Highlight each item and press ( ). The detailed descriptions are displayed.



# Character Entry



You can enter characters on the Registration display for Phonebook entries or the Composition display for mail messages, etc.

#### Select a input mode.

Press ((Chrct)) to select one of the input modes.



#### Enter characters.

By repeatedly pressing a numeric key, you can enter other characters assigned to the key.

<Example> When you press 2

Katakana input mode

Alphabet input mode (Uppercase)

" $A \rightarrow B \rightarrow C \rightarrow a \rightarrow b \rightarrow c \rightarrow 2$ "

Alphabet input mode (Lowercase)

"a→b→c→A→B→C→2" Numeral input mode

"2"

3



#### Convert/fix characters.

- 1. Press to specify the area to be converted.
- Press to move the cursor onto the candidate list.
- 3. Press to select a conversion candidate.
- 4. Press o to fix the character.

#### Other key operations

(SB · SM): Enter symbols, smileys, or URLs.

(PI - Pic.): Enter pictograms, Deco-mail pictograms, or Deco-mail pictures.

Enter a line feed.

(You can switch between uppercase and lowercase or enter "" and "" by pressing this key after you enter a character.)

(for at least one second): Undo the fixed/erased characters.

CLR: Clear text.



Select the text field.



ただの歌詞 ただのかし

タダノカシ 44 1/19

ラ ただのかし 3 Use to move the cursor to the right of "O".




タタの歌詞

2 Enter hiragana characters in Kanji/Hiragana input mode.

 $t \rightarrow \text{Press}$  once and  $\bigcirc$  once.

- ξ → Press  $\boxed{4}$  once and  $\boxed{\times}$  once.
- $\mathcal{O} \rightarrow \text{Press} \left( \mathbf{5} \right)$  five times.
- $h \to \text{Press} 2$  once.
- $\cup \rightarrow \text{Press}(3) \text{ twice.}$

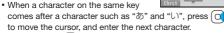

 You can press to select one of the prediction conversion candidates while you are entering the characters.

- 4 Use to move the cursor onto the candidate list
  - ►Use to highlight "タダ の" and press (Select).



5 Use to move the cursor onto the candidate list ➤ Use to highlight "菓子" and press (Select).

# Sound/Screen Setting



## **Changing Ring Tone**

<Example> Changing the ring tone for incoming voice calls

- Setting Sound/Vib./Manner
  Select ring tone
- 2 Select "Phone".
  - Press ( Play ) to check the content actually played back or displayed.
  - To set a ring tone for mail messages, videophone calls, and so on, select the corresponding item.
- Select "Select ring tone".
- 4 Select a type of ring tone.
- 5 Select a folder ➤ Select a ring tone.

## **Adjusting Ring Volume**

<Example> Adjusting the ring volume for incoming voice calls

- Setting ➤ Sound/Vib./Manner
  ➤ Ring volume
- Select "Phone".
  - To adjust ring volume for mail messages, videophone calls, and so on, select the corresponding item.
- 3 Use 🚺 to adjust the volume.

#### **Setting Vibrator**

You can set the vibrator to notify you of incoming calls. <Example> Setting the vibrator for incoming voice calls

- Setting Sound/Vib./Manner
  Vibrator setting
- 2 Select "Phone".
  - To set a vibrator for mail messages, videophone calls, and so on, select the corresponding item.
- 3 Select a pattern.

## **Using Manner Mode**

With a single key press, you can set a tone from the FOMA terminal such as a ring tone, keypad sound, and alarm sound silent. When you start Manner Mode, not a sound but the vibration notifies you of incoming calls or messages.



# Press and hold (#) for at least one second.



# To release Perform the same operation.

#### **Using Original**

You can use "Original" to tailor your FOMA terminal to how it works while Manner Mode is ON.

- Menu Setting Sound/Vib./Manner
   Manner mode setting Manner mode set Original
- 2. Set each item.
- 3. Press (Finish).

Even in Manner Mode, the shutter tone and focus lock tone
of the camera, and the start/end tones of the voice recorder
sound.

## **Setting Keypad Sound OFF**

You can silence a Keypad sound for when you press a key.

- Setting Sound/Vib./Manner
  Other sound setting Keypad sound
- 2 Select "OFF".

# **Changing Display Settings**

**Changing Stand-by display** 

- Setting Screen/Display
  Stand-by display
- Select "Stand-by display".
- 3 Select a type of image.
- 4 Select a folder ➤ Select an image.
  - You may be able to select a display format depending on the image.

#### **Changing Display Brightness**

You can adjust the brightness of the display. You can also set to automatically adjust the display brightness according to the ambient light.

- Setting ➤ Backlight/Illum.Backlight
- 2 Select "Brightness" ➤ Select "ON".
- 3 Press ( to adjust the brightness.

#### Lighting off/Power Saver Mode

You can set the display brightness to OFF. You can also set the time that elapses before Power Saver Mode activates. Power Saver Mode activates when the time set for "Time to saver" has elapsed without any operations on the FOMA terminal. The display turns off to reduce battery consumption.

- 1. MsNJ ➤ Setting ➤ Backlight/Illum. ➤ Backlight
- 2. Select "Lighting" ➤ Select "OFF".
- 3. Enter the time (seconds) for "Time to saver".

# Making Display Hard to See from People Around

You can set "View blind" to make it harder for the people around you to see the display from oblique angles.



# Press and hold 8 for at least one second.



Perform the same operation.

### **Changing Font Size**

<Example> Changing the size of all the characters to "X-large

- Press and hold for at least one second.
- Select "Character size".
- 3 Select "X-large".
  - Select "Separate setting" when you want to set the character size of each function separately.

## **Changing Machi-chara Setting**

You can change the Machi-chara image which appears to inform you of missed calls, new mail messages, new i-concier information and others.

- Setting ➤ Screen/Display
   Machi-chara setting
- 2 Select "Display setting" ➤ Select "ON"
  Select a folder.
- 3 Highlight a Machi-chara image and press

## Using Kisekae Tool

You can set the ring tone, Stand-by display, menu icons and others at a time.

- Setting ➤ Screen/Display
  ► Kisekae Tool setting
- Select a folder.
- 3 Highlight a Kisekae Tool file and press
- 4 Select "YES".
  - Some menu configurations change according to the usage frequency depending on the type of the menu.


#### Reset Menu Icons to Default

- 1. MENU | Submenu | Reset menu screen
- 2. Enter your Terminal Security Code ➤ Select "YES".

## **Changing Illumination When Receiving**

<Example> Changing call Illumination for voice calls

- Setting ► Backlight/Illum.
  - ►Illumination setting
- 2 Select "Illumination in call"
- Select "Illumination".
- To set illumination such as for mail messages and videophone calls, select the corresponding menu.
- 4 Select an illumination.
  - If you select "Gradation", Color 1 to 12 light up in sequence.

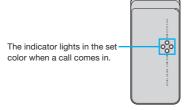

## Switching to the eco Mode

With a single key press, you can set the eco Mode that reduces battery consumption. Changing to eco Mode affects items specified in "eco mode setting", e.g. dimming the display.

# Press and hold 5 for at least one second.



To release
Perform the same operation.

#### eco Mode Setting

You can set the items for reducing battery consumption for when the eco Mode activates.

- 1 MENU ► Setting ► Battery ► eco mode setting
- 2 Put a check mark for items to be set.
- 3 Press ( [Finish ).

#### eco Mode Autostart

This setting ensures that the mode will be automatically set to the eco Mode when the remaining battery level has dropped to the set level or less.

"Battery level" of "eco mode autostart" is set to "40%" in default.

- Setting Battery eco mode autostart
- 2 Select "ON".
- 3 Set each item ► ( Finish )

When the "eco mode autostart" is set to "ON", "[a] (gray)" will be displayed. When the mobile phone automatically switches to eco Mode, "[a]" will be displayed and "[a]" will be displayed on the desktop.



# Lock/Security



### **Various Security Codes**

#### ■Caution on security codes

- You should avoid using the numbers for security codes such as denoting your birth date, part of your phone number, local address number, room number, "1111" or "1234" that is easily decoded by a third party. Also make sure that you take a note of the security codes you have selected just in case you forget them.
- Take care not to let others know your security codes.
   Even if your security codes are known and used by a third party, we at DOCOMO take no responsibility in any event for the resultant loss.
- If you do not remember your respective security codes, you need to bring an identification card such as your driver's license, the FOMA terminal and UIM to the handling counter of a docomo Shop.
- For details, contact "docomo Information Center" on the back page of this manual.
- The PIN unblocking key (PUK) is described on the application form (your copy) that is handed over to you at a docomo Shop at the time of contract. If your contract has been made at a shop other than a docomo Shop, you need to bring an identification card such as your driver's license, and the UIM to the handling counter of a docomo Shop, or consult "docomo Information Center" on the back page of this manual.

This is a four-to-eight digit number for deleting all files or changing settings. When the display for entering the Terminal Security Code appears, enter your four-to-eight digit code and press (Set ).

#### To change

1. MENU Setting Lock/Security Change security code

# Network Security Code Determining at the time of contract

This is a four-digit number required for your identification when you place an order at a docomo Shop, docomo Information Center. or "お客様サポート (User support)" site. or when you use respective network services.

• "お客様サポート (User support)" is available in Japanese only.

#### To change

From i-mode, you can change your Network Security Code by selecting " 8 Menu"→"お客様サポート (User support)"→ "各種設定(確認·変更·利用) [Respective settings (Confirmation/ Change/Use)]"→"ネットワーク暗証番号変更 (Change Network Security Code)".

#### i-mode Password "0000" at the time of your contract

This is a four-digit number required for registering/deleting My Menu, applying for/canceling Message Services or i-mode pay services, etc.

#### To change

From i-mode, you can change your i-mode password by selecting " 

Menu"→"English"→"Options"

→"Change i-mode Password".

For the UIM, you can set two security codes, namely the PIN1 code and PIN2 code.

The PIN1 code is a four-to-eight digit number for checking the user each time the UIM is inserted into the FOMA terminal. or each time the FOMA terminal is turned on, to prevent the unauthorized use by a third party.

The PIN2 code is a four-to-eight digit number for executing Reset Total Charge, using the user certificate or applying for the issue of it. etc.

When the PIN1 Code/PIN2 Code entry display appears, enter your four-to-eight digit PIN1 code/PIN2 code and press Set ).

• If you enter a wrong PIN1 code/PIN2 code three times in succession, the FOMA terminal locks and cannot be used.

#### To change

- 1. MENU ➤ Setting ➤ Lock/Security ➤ UIM setting
- 2. Enter your Terminal Security Code
  - Select "Change PIN1 code" or "Change PIN2 code".
- You need to set "PIN1 code entry set" to "ON" to change the PIN1 code in advance.

#### **PIN Unblocking Key (PUK)**

The PIN unblocking key (PUK) is the eight-digit number for releasing the blocked PIN1 code and PIN2 code.

You cannot change this code by yourself.

 If you enter a wrong PIN unblocking key (PUK) 10 times in succession, the UIM is locked. In that case contact one of docomo Shops.

## PIN1 Code Entry Set

You can set the FOMA terminal not to work unless you enter your PIN1 code when turning on the power.

- Setting Lock/Security
   UIM setting
- Enter your Terminal Security CodeSelect "PIN1 code entry set".
- 3 Select "ON" ► Enter the PIN1 code.

To release Select "OFF".

### **Various Lock Functions**

A variety of lock functions is installed on your FOMA terminal such as preventing illegal use of a third party, or protecting your private information.

Dial Lock	You can set your FOMA terminal not to be
	used by a third party.
	You can do no operations other than
	answering calls and turning on/off the power.
	1. MENU ► Setting ► Lock/Security ► Lock
	Enter your Terminal Security Code
	▶Dial lock
	To release, enter your Terminal Security Code
	from the Stand-by display.
IC Card	You can lock the IC card function.
Lock	You cannot use the Osaifu-Keitai, ToruCa
	download, iC Communication, etc.
	1. Press and hold 3 for at least one second.
	To release, perform the same operation and
	enter your Terminal Security Code.

#### Omakase When you have lost your FOMA terminal or Lock in other cases, you can lock your personal data (such as Phonebook entries) and the IC card function of Osaifu-Keitai by contacting DOCOMO. · For details on Omakase Lock, refer to "User's Guide [Basic Usage]". ■Setting/Releasing Omakase Lock 0120-524-360 (In Japanese only) Business hours: 24 hours (open all year round) \*Unavailable from some IP phones. . You can set/release also from the Mv docomo site via your personal computer or other devices, (In Japanese only) Original You can lock functions which utilize personal Lock information such as Phonebook entries or schedule events. 1. MENU ➤ Setting ➤ Lock/Security ➤ Lock Enter your Terminal Security Code Select a level for Original Lock. · To release, select "OFF". Keypad Keys and the touch panel operations are Lock disabled. 1. Press and hold of for at least one second. • To release, perform the same operation.

## **Setting Auto-key Lock**

Keypad Lock can be activated when you close the FOMA terminal or the specified time elapses without any operations.

- Setting Lock/Security

  Kevpad lock
- Enter yourTerminal Security Code
  Auto-key lock
- 3 Select "Closed lock set." or "Unoperated lock set." ➤ Select an item.

## **Setting Incoming Call Restriction**

You can set whether to receive (accept) or not to receive (reject) incoming calls depending on the reason, such as from the parties which has not been registered in Phonebook or incoming calls from any parties who do not notify you of their phone numbers. There are three reasons for no caller ID; "User unset", "Payphone", and "Unknown".

- Setting Lock/Security
  Call rejection set.
- Enter your Terminal Security CodeSelect an item to be set.
- Select "Accept" or "Reject".
  - If you select "Accept" for "User unset", "Payphone" or "Unknown", you can set a ring tone or call receiving display.

## Resetting to Default

## **Resetting the Function Settings to Default**

- The items indicated by might include the functions which do not return to their default settings or state.
- Setting Other setting
  Reset settings
- 2 Enter your Terminal Security Code
  Select "YES".

### **Deleting Stored Data at Once**

You can delete all the stored files together and each function setting will return to the default.

- Setting ► Other setting ► Initialize
- ≥ Enter your Terminal Security Code ► Select "YES".
- 3 Select "YES".

# **Call Telephone**



## Making a Call/Videophone Call

# Making a Call by Entering the Phone Number

- Enter a phone number starting with a city code.
- 2 Press ( to make a call.
  - Press ( Vphone ) to make a videophone call.
- 3 Press ( to end the call.
  - This FOMA terminal has no inward-facing camera.
     Therefore, the image sent to the other party is a Chara-den image, still image, or image being shot by the outward-facing camera.

You can put a call on hold by pressing cur during a call.

You can release held call by pressing CLR



#### Making a Call from Phonebook

<Example> Search a Phonebook entry by the name stored in Phonebook

Press




#### Select "Search name".

Enter the reading of the name from the first character.

- You can use another search method such as "Search phone No.", and "Search e-mail".
- 3 Enter a part of the name ►



- If you enter nothing and press (); then you can display all Phonebook entries.
- 4 Select a Phonebook entry▶*[*∕

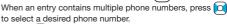

• Press ( Vphone ) to make a videophone call.



## Making a Call with Redial/Received Calls

Press (Redial) or (Received calls).

2 Select a call record

Press ( Vohone ) to make a videophone call.

### **Using Koe-no-Takuhaibin**

This service keeps voice message on behalf of you.

· For details, refer to the DOCOMO website.

### Enter a phone number.

 Koe-no-Takuhaibin message can be sent from a Phonebook entry, Redial, Dialed Calls, or Received Calls as well.

2 (Koetaku)

Operate following the voice guidance.

#### **Playing Back Messages**

When Koe-no-Takuhaibin message has been received, an SMS message is given as notice of recording. Select "再生 (Play)" on the detailed display of the SMS message to play back the received message.

 You can also play back messages by following the operation below:

"MENU > TEL function > Koe-no-Takuhaibin

Play messages".

#### Making an International Call

You can use WORLD CALL to make an international call from Japan.

- Contact "docomo Information Center" on the back page of this manual for inquiries about details on WORLD CALL.
- When using international carriers other than DOCOMO, contact them.

# (for at least one second)

Enter numbers in order of country code

- →area code (city code)
- →destination phone number.
- When the area code (city code) begins with "0", enter the area code without "0". However, include "0" when making a call to some countries or regions such as Italy.

# 2 Press .

Press (□)(□Vohone□) to make a videophone call.

## 3 Select "Dial".

 DOCOMO videophones conform to "3G-324M standardized by the international standard 3GPP". You cannot connect to the videophone using a different format.

## Receiving a Call/Videophone Call

A call comes in.

The ring tone sounds and the Call/Charging indicator lights.

2 Press (r) to answer the call.

#### When a videophone call comes in

You can receive the videophone call the same way as with a voice call.

The substitute image is sent to the other party.

3 Press to end the call.

## **Adjusting Earpiece Volume**

- Press and hold for at least one second during a call.
  - Press during a videophone call.
- Press to adjust the earpiece volume.

### When You cannot Answer a Call

#### **Activate Record Message**

By activating Record Message, you can record a caller's voice/video message when you cannot answer the call.

- When a call comes in, an answer message is played back after the ring time elapses. Then, the caller's voice is recorded with audio or video.
- TEL function
  - ► Rec. msg./Voice memo
  - Record message setting
- 2 Select "ON" ➤ Select "Phone".
  - To activate Record Message for videophone calls, select "Videophone".
- 3 Select an answer message
  - ► Enter a ring time (seconds).

When a voice or video message is recorded as Record Message, the notification icon like "" or "" or "" appears in the Stand-by display. Select "" or "" or "" icon to play either the voice or video message.



### **Using Public Mode (Drive Mode)**

Once you activate Public mode (Drive mode), the guidance is played back telling that you cannot answer the call as you are currently driving or in a public place (such as a train, bus or movie theater) where you should refrain from speaking on the phone. Then, the call is disconnected automatically.



# Press and hold $(\underbrace{\times})$ for at least one second.



#### To deactivate

Perform the same operation.



When a call comes in during Public mode (Drive mode), the ring tone does not sound and the record is stored in "Received calls". The alarm does not sound even when the specified alarm time comes.

#### **Using Public Mode (Power Off)**

Once you activate Public mode (Power off), when the FOMA terminal's power is OFF, the guidance is played back telling that you cannot answer the call as you are currently in a public place (such as a hospital, airplane or near a priority seat on a train) where you are required to turn off the power of the FOMA terminal. Then, the call is disconnected automatically.

- 1 Enter (\*)(2)(5)(2)(5)(1)
- 2 Press 🕜

#### To deactivate

- 1. Enter (\*)(2)(5)(2)(5)(0).
- 2. Press (r

## **Using Various Network Services**

#### ■Network services available

The following are the DOCOMO network services available for the FOMA terminal.

Service	Application	Monthly fee
Voice Mail Service	Required	Charged
Turned Off or Out of Range Notification Call Service	Not required	Free
Call Waiting Service	Required	Charged
Call Forwarding Service	Required	Free
Nuisance Call Blocking Service	Not required	Free
Caller ID Notification Service	Not required	Free
Caller ID Display Request Service	Not required	Free
Dual Network Service	Required	Charged

Service	Application	Monthly fee
English Guidance	Not required	Free
Multi Number	Required	Charged
2in1	Required	Charged
Public mode (Drive mode)	Not required	Free
Public mode (Power off)	Not required	Free
OFFICEED	Required	Charged
Melody Call	Required	Charged
Koe-no-Takuhaibin	Not required	Free

- The network services are not available when you are out of the service area or out of reach of radio waves.
- "Deactivate" does not mean that the contract for Voice Mail Service, Call Forwarding Service or other services is canceled.
- For details on "OFFICEED", refer to the DOCOMO corporate service website (in Japanese only). http://www.docomo.biz/html/service/officeed/
- The outlines of the each network service in this manual are described along with the menus of the FOMA terminal. For details, refer to "Mobile Phone User's Guide [Network Services]".
- · For subscriptions and inquiries, contact "docomo Information Center" on the back page of this manual.



#### **Using Voice Mail Service**

► TEL function ➤ Voice mail service

#### To activate the service

- 1. Select "Activate" ➤ Select "YES".
- · You can also specify a ring time.

#### To play back the message

- 1. Select "Play messages"
  - Select "Play (voice call)" or "Play (videophone)"
  - ► Select "YES".
- 2. Operate following the voice guidance.

## **Using Call Waiting Service**

TEL function ▶ Other network serv. ▶ Call waiting

#### To activate the service

1. Select "Activate" ➤ Select "YES".

#### Answer an Incoming Call during a Call

Press ( ). Each time you press ( ), you can switch the parties you can talk with.

#### **Using Call Forwarding Service**

► TEL function ► Other network serv. ► Call forwarding

#### To activate the service

- 1. Select "Activate" ➤ Select "Activate" ➤ Select "YES".
- You can set the phone number of forwarding destination or ring time as well.

### **Emergency Call**

Emergency Calls	Phone number
Calls to police	110
Calls to fire station and ambulance	119
Calls for accidents at sea	118

- This FOMA terminal supports "Emergency Location Report". When you make an emergency call such as at 110/119/118, information about the place where you are dialing from (location information) is automatically notified to emergency-response agencies such as police stations. It might happen that your correct location is not detected by emergency-response agencies depending on the location you dial from or radio wave conditions. When your location information is notified, the name of emergency-response agency is displayed on the Stand-by display. When you do not notify your phone number such as by adding "184" by every call, your location information and phone number are not notified. However, when an emergency-response agency has judged that the location information and phone number should be detected because of emergency priority such as for protection of human life, it might get location information and phone number regardless of your setting. Areas and timing "Emergency Location Report" introduced vary depending on the preparation of respective emergency-response agencies.
- When you make a call at 110/119/118 from the FOMA terminal, tell an operator that you are calling from a mobile phone and let them know your phone number, and then clearly tell where you are currently around, so that police/fire station can make a confirmation call to your mobile phone. In addition, stay at the current location while talking preventing the call from being disconnected. Do not turn off the power immediately, and make sure to place your phone standby for at least 10 minutes after the call.
- · You might not be connected to regional police/fire station depending on the area where you are calling from.
- When using the videophone function of the FOMA terminal to place an emergency call to 110, 119 or 118, the call will
  automatically be made as a voice call.

### **Using Overseas**

International Roaming (WORLD WING) is a service that allows you to use the FOMA terminal with the phone number and mail address you use in Japan, in a service area of the overseas carrier partnered with DOCOMO. It enables you to continue using the voice call, SMS and i-mode mail settings without having to make any changes.

- Concerning the areas where the service is supported:
   This FOMA terminal is available within the service area of 3G network, and in the countries/regions supporting 3G 850MHz. Check the areas where you can use the service.
- Refer to the following before you use this FOMA terminal overseas:
- · "Mobile Phone User's Guide [International Services]"
- DOCOMO International Services website
- ・"海外ご利用ガイド (Overseas use guide)" pre-installed in "My document" in Data Box or displayed from Map/Overseas Overseas use quide
  - wap/overseas Overseas use guide ※"海外ご利用ガイド (Overseas use guide)" is available in Japanese only.
- For the country codes, international call access codes, international prefix numbers for the universal number, and connectable countries, regions, and overseas carriers, refer to "Mobile Phone User's Guide [International Services]" or the DOCOMO International Services website
- A fee charged for overseas use (call fee, packet communication fee) differs from that of in Japan.



Major Communication Service	
Voice call <sup>*1</sup>	0
Videophone call <sup>※1</sup>	0
SMS <sup>*2</sup>	0
i-mode <sup>*3</sup>	0
i-mode mail	0
i-Channel <sup>*3*4</sup>	0
i-concier <sup>*5</sup>	0
i-Widget <sup>*6</sup>	0
Packet communication by connecting with a personal	
computer	
Position location of GPS <sup>*7</sup>	0

- : Available
- \*\*1 When using 2in1, you cannot make calls using your B number. When using Multi Number, you cannot make calls using an additional number.
- ※2 If the destination is a FOMA terminal, enter the other party's phone number as you do in Japan.
- ※3 You need to establish i-mode International Settings.
- ※4 You need to establish i-Channel International Settings. You are charged a packet communication fee for automatically updating the basic channel information as well (which, in Japan, is included in the i-Channel fee).
- ※5 You need to establish i-concier International Settings. You are charged a packet communication fee for each information you receive.
- %6 You need to establish i-Widget International Settings. When you show an i-Widget display, multiple Widget Appli programs might start communication. In that case, you are charged a packet communication fee for each communication.
- ※7 No fee is charged for GPS measuring (checking current location). However, you are charged a packet communication fee for displaying maps from location information.
- Some services are not available depending on the overseas carrier or network.

### Making a Call to Outside the Country You Stay in

- 1 O(for at least one second)
  - Enter numbers in order of country code
  - →area code (city code)
  - →destination phone number.
  - You can enter "+" by pressing and holding O for at least one second
  - Enter "81" as a country code when you make an international call to Japan.
  - When the area code (city code) begins with "0", enter the area code without "0". However, include "0" when making a call to some countries or regions such as Italy.
- 2 Press (r) to make a call.
  - Press ( ) ( Vphone ) to make a videophone call.


### Making a Call in Country You Stay

- 1 Enter a phone number.
- 2 Press (r) to make a call.
  - Press ( Vphone ) to make a videophone call.

### Making a Call to WORLD WING User Overseas

When you make a call to a person who is also internationally roaming, make the call the same way as to make international calls to Japan even if he/she is in the country you stay at.



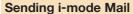

Once you subscribe to i-mode, you can exchange e-mail messages over the Internet. You can attach within 2 Mbytes of up to 10 files (photos, moving pictures, etc.) with body text added. For details on i-mode mail, refer to "Mobile Phone User's Guide [i-mode] FOMA version".



2 Enter each item.



3 Press (Send).

## **Sending Deco-mail**

You can change the color or size of characters or background color, or insert images or Deco-mail pictograms.

- 1 Mew
  - You can also select "Decome-Template" to create Deco-mail.
- Enter an address and subject.
- 3 Select the text field ► ✓
  ► Select one of decorations from the palette ► Enter text
  - **▶** ( Set )
  - When the text field is selected, the prediction conversion candidates appear. Press (cr) to close the conversion candidate display, and then press (r) to display the palette. (In Japanese mode only)



Palette

4 Press (Send)

## **Sending Decome-Anime**

You can create impressive messages by inserting text or images into a Flash file.


- **☐** Create new Deco-Anime
- 2 Enter an address and subject.
- 3 Select the text field
  ► Highlight a DecomeAnime template and press ( ( Set ).



- 4 Edit characters and images ► ( Finish
- 5 Press (Send ).

## **Displaying Received i-mode Mail**

- ☑ ►Inbox
- Select a folder.
- 3 Select an i-mode mail message.

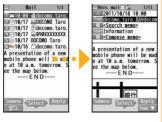

When you receive an i-mode mail message, " appears on the upper area of the display.



#### Replying to i-mode Mail

- Press ( Reply ) while an i-mode mail is displayed.
- Enter each item.
- 3 Press 🔯 (Send).

#### Forwarding i-mode Mail

- (Submenu) while an i-mode mail is displayed ► Reply/Forward ► Forward
- 2. Enter each item. 3. Press ( Send ).

#### **Checking New i-mode Mail**

You can check the i-mode Center for a new mail message or Message R/F.

1



# Press and hold (☑) for at least one second.

When checking is completed, the following display appears.



messages Select an item to show the display for selecting a message.

#### Sorting i-mode Mail

You can use "Auto-sort" to sort received/sent i-mode mail messages into a folder such as "Business" or "Friend" which has been created in advance.

<Example> Sorting mail messages, which come from the address stored in the Phonebook, into a folder

- Highlight a folder from Inbox Folder list and press (Submenu ) ➤ Auto-sort
- Select "Address sort".
- 3 Select "Look-up address"

  ▶Select "Phonebook".
- 4 Look up for Phonebook entries and select a target i-mode mail address.

### Early Warning "Area Mail"

#### **Receiving Area Mail**

You can receive information such as about earthquake alerts that are issued from the Japan Meteorological Agency as an Area Mail message.

When an Area Mail message arrives, "Ights and the buzzer for Area Mail sounds."

The received contents of some messages are automatically displayed. To erase the displayed content, select "OK".

 You can receive Area Mail messages even when you are not contracted to use i-mode.



### **Setting Area Mail**

- l (☑) ► Mail setting ► Area Mail setting
- 2 Select an item to be set
  - Set each setting.
  - You can also check "Check ring tone" for how your FOMA terminal works when you receive an Area Mail message.

## **Using SMS**

You can send text messages to the mobile phone number at the other party.

#### Sending SMS

- **1 ☑** ► Compose new SMS
- 2 Enter each item.



3 Press (Send ).

#### **Displaying Received SMS Message**

- 1 ☑ ►Inbox
- Select a folder.
- ᢃ Select an SMS message.

When you receive an SMS message, " appears on the upper area of the display.



## Phonebook



## **Storing Phonebook Entries**

# Storing New Phone Numbers/Mail Addresses, etc.

You can store Phonebook entries in the FOMA terminal (Phone) or on the UIM.

- Press and hold for at least one second.
- Select "Phone".

The display for entering a name appears. Enter a name and proceed.

When storing entries onto the UIM Phonebook Select "UIM".

3 Enter each item.



4 Press (Finish).

#### Storing Phonebook Entries from Redial/ Received Call

- Press ((Redial) or ((Received calls).
- 2 Highlight a call record and press

  MENU (Submenu) ➤ Select "Add to phonebook".
- 3 Select "Phone" ➤ Select "New".
- 4 Enter each item.
- 5 Press ( (Finish).

Stored birthdays are displayed also in your schedule. If you do not wish them to be displayed, select "Disp. in schedule" — "Not disp. in schedule" in the submenu on the birthday input display.



### **Editing Phonebook Entries**

- Search and select a Phonebook entry.
- 2 MENU (Submenu) ➤ Edit phonebook
  - Select an item to be edited
  - ► Edit the contents.
- 3 Press (Finish).
- 4 Select "YES".

## **Deleting Phonebook Entries**

- Search and select a Phonebook entry.
- 2 MENU (Submenu) Select "Delete data".
- 3 Select "Delete this".
- 4 Select "YES".

## \* i-mode/Full Browser



## **Displaying i-mode Sites**

i-mode is a service that enables you, by using the display of the mobile phone supporting i-mode, to use online services such as site access, Internet access, and i-mode mail.

- i-mode is a pay service that is available on a subscription basis.
- For details on i-mode, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- You can display SSL/TLS\*-compatible pages via FOMA terminal.
  - SSL/TLS are the safer data communication systems using authentication/encryption technology to protect your privacy.

# Press (≩α

You can access the \$\frac{1}{6}\$ Menu. Repeat selecting items (links) to display the desired site.

- While you are online, "=" blinks.
- § Menu is available in English. Select

   (English" from the display on the right.



#### ■Before using i-mode

- Content of sites or websites is in general protected by copyrights law. You can use data such as text and images for your entertainment, which you download to your mobile phone supporting i-mode, but you cannot use them, part or whole of it as is, or modify them for the purpose of sale or redistribution, without approval from copyright holders.
- If you replace the UIM with another one or turn on the power without UIM, you cannot display/play back files, such as still images/moving pictures/melodies you download from sites, attached files (still images/moving pictures/ melodies and other files) sent/received by mail, Screen Memo, and Messages R/F.
- When the file has been set for the Stand-by display or for specified ring tone, of which display or playback is restricted by the UIM, the settings return to default if you replace it with new one or turn on the power without UIM.

## **Displaying Websites Designed for PC**

You can browse Internet websites designed for PCs using the Full Browser function.

- Note that you are charged a high communication fee for the massive data communication such as browsing Internet websites having many images or downloading data. For details on the packet communication fee, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- You can browse Internet websites composed of frames. You can select a frame to display it as well.



#### ► ☐ mode/web ➤ Full Browser Home

- By default, a confirmation display appears asking whether you want to use Full Browser.
- · You might not correctly display some Internet websites.

#### **Switching Browsers**

You can switch to Full Browser to show the Internet websites incorrectly displayed by i-mode.

- The billing system differs between i-mode and Full Browser.
   With the latter, as packet communications fee will be a large sum, you are advised to use i-mode packet flat-rate service.
- wend(Submenu) while the website is displayed by i-mode ► Full Browser ► Switch to FB.
- 2 Select "YES".

To switch from Full Browser to i-mode

1. (Submenu) while the website is displayed by Full Browser ▶ ☐ mode Browser ▶ Switch to ☐ mode

## **Viewing and Operating Sites**


Operations on site viewing display

Scroll display/Move highlighted/ Move the pointer:


Select an item (link): (Select)

Return to previous page: (☐)( Back )

Forward to next page: ( Next

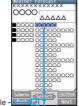

"爺" or "旨品" appears while accessing by Full Browser.

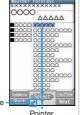

# **Storing Frequently Accessed Sites**

Bookmark websites or i-mode sites you frequently visit to get them displayed easily.

MENU (Submenu) while the site is displayed ►Bookmark ► Add bookmark

Select "OK" ➤ Select a destination folder.

To access a site stored in Bookmark

1. MENU ► 5 mode/web ► Bookmark

2. Select a folder Select a bookmark.

## **Saving Site Contents**

If you save the page once you visited as a screen memo, you can easily refer to it without connecting to i-mode.

- MENU (Submenu) while the site is displayed Screen Memo Save screen memo
- Select "Phone" Select "YES".

To display a saved screen memo

- 1. MENU ► 5 mode/web ► Screen Memo
- 2. Select "Phone" or "microSD".
- Select a screen memo.
- Depending on the site, for instance, when saving of screen memos is disabled at the site, you may not be able to save screen memos properly.

## \* i-Channel



This service distributes information such as news and weather forecast to i-Channel mobile phones. The automatically received latest information flows on the Stand-by display by tickers. You can read it on the i-Channel list by pressing (CLR).

Further, two types of channels, "Basic channel" provided by DOCOMO and "Okonomi (Optional) channel" provided by IPs (Information Providers) are available. You are not charged a packet communication fee for auto-updates of "Basic channel" information.

You are charged a packet communication fee for auto-updates of "Okonomi (Optional) channel" information that will be available by registering your favorite channels. Note that you are charged separately a packet communication fee for browsing detailed information for both "Basic channel" and "Okonomi (Optional) channel". When you use the international roaming service, you are charged a packet communication fee for both auto-update and browsing detailed information.

- · i-Channel is a pay service which is available on a subscription basis (You need to subscribe to i-mode to apply for i-Channel).
- · For details on i-Channel, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- The i-Channel service is provided in Japanese only.



### Displaying i-Channel

Press [CLR]



information

\*The display is for reference. The actual one may differ.

You can change font size for ticker by following the steps described below:

- 1. MNU ► 8 mode/web ► i-Channel Ticker display setting ▶ Ticker size setting
- 2. Select an item.



# Map/GPS



- GPS is a function that receives radio waves from the GPS satellites and acquires location information of the FOMA terminal.
- This GPS function cannot be used as a navigation device for airplanes, vehicles or people or as a device for conducting high-accuracy survey. If it is used for these purposes or even if used for other purposes, we do not take any responsibility for a loss, such as pure economic loss resulting from the facts that you have missed the chance to check the positioning (communication) results, which have been caused by external factors such as malfunctions, erroneous operations, or power failure (including battery shortage) on the FOMA terminal.
- GPS is operated by the United States Department of Defense, so the GPS radio wave conditions might be controlled (accuracy deterioration or radio wave supply suspension, etc.) depending on the defense strategy of the United States Department of Defense. In addition, even when surveys have been conducted in the same location or environment, the radio wave status may differ depending on the positions of the satellites so that the same results may not be obtained.
- GPS uses the radio waves from satellites so note that in the environments listed below make impossible or difficult to
  receive radio waves, and as a result, the error in the position information may be greater than 300 meters.
  - · In densely wooded areas, downtown high-rise areas, built-up residential areas
  - ·In a building or right under it · In the basement, tunnel, ground, water
  - · Close to high-tension wires

- · In a car or train
- ·In bad weather such as heavy rain and snow · In a bag or case
- ·There are obstacles (persons and articles) around the FOMA terminal.
- ·When you cover the displays, keys, microphone, or speakers of the FOMA terminal with your hand.
- When providing position information or notify your current location, check the information given from your GPS service provider or DOCOMO's website. In some cases, you may be charged for using these functions.
- · When you are outside the service area, you cannot use the GPS function except to check your current position.
- In the following cases, you cannot use the GPS function except to provide your position.
  - · During Dial Lock · During Keypad Lock · During Omakase Lock

#### **Reading Map**

You can start GPS compatible i-αppli, and you can read a map of current or specified location.

• At purchase, "地図アプリ (Map Application)" is set.



#### To change GPS compatible i- $\alpha$ ppli to be started

- Map/Overseas ➤ Map&GPS set./history
   Map setting ➤ Select Map
- 2. Select an i-αppli program ➤ Select "OK".

### **Using Navi**

You can activate a GPS compatible i- $\alpha$ ppli to use the navigation functions.

• At purchase, "地図アプリ (Map Application)" is set.




When you use a GPS compatible i-αppli, the location information is sent to the information provider of the i-αppli program you use.



### **Checking Current Location**

You can locate your current location by GPS. You can also display a map using this location information and send this information as an i-mode mail.

 You are not charged a packet communication fee for checking your current location. However, a separate packet communication fee are charged in cases where, for instance, a map has been displayed from the location information.

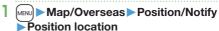



Positioning

Positioning location result

Your current position is located by GPS, and the positioning accuracy is displayed.

#### To display the map of the current location

- Select "Read Map" from the Position Location Result display.
- $\bullet$  GPS compatible i- $\alpha ppli$  starts and shows the map.

### **Using AUTO-GPS**

Your current location is automatically positioned, and by sending your location information periodically to your GPS service provider, you are enabled to receive a variety of services according to your location, such as weather forecast, shopping guide, or sightseeing information around.

- To use a service that supports the AUTO-GPS function, use the AUTO-GPS function compatible i-αppli to establish the AUTO-GPS service information for respective services.
- The AUTO-GPS function enables you to automatically position your current location according to your movements, and to send your location information and pedometer information to your service provider. (Your location is positioned once every five minutes according to your movements.)
- When you start to use the AUTO-GPS function, check GPS service providers or the DOCOMO website for how you can use services. It might happen that you will be charged a fee for using them.
- You might separately be charged a packet communication fee for sending your location information.
- Note that depending on the way you use your FOMA terminal, the level of the power consumed by the FOMA terminal may be increased as a result of periodical communication.

### **Setting AUTO-GPS**

You can set whether to use AUTO-GPS function. ("ON" is set at purchase.)

AUTO-GPS function uses your stride when determining your movements so you can set your stride as well.

- Map/Overseas

  Map&GPS set./history ► AUTO-GPS

  ► AUTO-GPS setting
- Select "ON".
- 3 Enter a stride (cm).

### Using Service provided by DOCOMO


Select whether you use the AUTO-GPS service that syncs with i-concier or respective services provided by DOCOMO.

- Set the service to "ON" to automatically and periodically send your location information from the FOMA terminal to DOCOMO.
- To use i-concier or respective services, you need to separately subscribe for and establish the settings.
- Map/Overseas
   Map&GPS set./history AUTO-GPS
   DOCOMO service set.
- Select "ON" or "OFF".





### Viewing and Operation of Finder Display

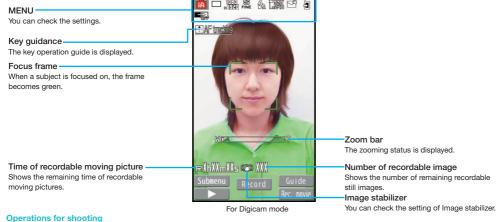

- Shoot/Save still image: ( ) or [



Zoom: (TELE)/(O)(WIDE)

Focus function: or (halfway)

Flash: 8

- . Do not leave the FOMA terminal with the lens pointing to direct sunlight. Pixels may be discolored or burns may result.
- · When the battery level is low, you may not be able to save still images/moving pictures you shoot.

### Shooting Still Images/Moving Pictures

### **Shooting Still Images**

- CAMERA/TV/MUSIC ➤ Camera
  Digicam mode
- 2 Press (Record).
- 3 Press (Save).

#### When shooting images by touch operation

When shooting images in Viewer Style, you can touch the touch panel to shoot the images instead of pressing  $\[ \]$  (Touch Shutter)

Touch " " on the shooting display to set it to " Then touch the subject to shoot.

### **Shooting Moving Pictures**

- Start recording by pressing (Rec. movie) from the Finder display for Digicam Mode.
- 2 End the recording by pressing

  (End REC).

  The moving picture is automatically saved.

# Viewing Still Images/Moving Pictures after Shooting

You can display the still image or the moving picture you have shot in Picture Album. You can detect a person's face on the still image you have shot and expand it, or add corrective effects to the detected face. You can also play expressive slide shows with the effect function.

- Data box

  My picture or ☐ motion/Movie
  - ▶ Picture album
  - Picture Album is also activated by pressing ()
     from the Finder display.
- 2 Select a folder ➤ Select a file.
  - To play a moving picture, press ( Play ).

#### To Upload a File Quickly

From the submenu while files are displayed, you can upload the files to pre-registered sites or attach them to an i-mode mail.

In Viewer Style, these operations can be performed by touching the files on the file lists for at least one second and then, slide (Picture Jump).

### **Shooting in Various Ways**

### **Continuous Shooting Still Images**

You can continuously shoot still images within the sizes from Stand-by ( $480 \times 854$ ) to 3M ( $1536 \times 2048$ ).

- | MENU (Submenu) from the Finder display for Digicam Mode ➤ Burst Shoot ➤ Continuous
- 2 Press ( (Record ).
- 3 Highlight a still image to be saved and press ( ) ( Save ).
  - You can save all the shot images by pressing (\$10 all ).

### **Shooting Still Images Using Auto Shutter**

The camera automatically shoots identifying the number of faces and detecting the distance between faces by the face detection.

- <Example> Using "Group shutter" to shoot a group of three persons
- 1 MENU (Submenu) from the Finder display for Digicam Mode ➤ AutoShutter
- Select "Group shutter".
- 3 Select "Three".

When the faces of three persons are detected, the self timer works, and about three seconds later an image of the group is shot.

4 Press ( Save ).

When you select "Love shutter", the camera automatically shoots identifying the distance between two faces.



### 1Seg



### **Using 1Seg**

#### ■Using 1Seg

1Seg is a service provided by television entrepreneurs (broadcasting stations). You are not charged a communication fee for receiving video and audio. For about fee charged by NHK, contact NHK.

※You are charged a packet communication fee for browsing "Data broadcasting site" and "i-mode site". You might be charged an information fee for using some sites (i-mode pay sites).

\*For details on the 1Seg service, browse the following websites:

The Association for Promotion of Digital Broadcasting

From personal computer: http://www.dpa.or.jp/english/ From i-mode: http://www.dpa.or.jp/1seg/k/ (In Japanese only)

■Broadcasting waves

1Seg is one of the broadcasting services receiving radio waves (broadcasting waves) different from that used for the FOMA services.

Reception condition might be deteriorated or you might not be able to receive 1Seg broadcast in places as follows:

- Places far away from radio towers that transmit broadcasting waves
   Mountain-ringed regions or behind buildings
- · In tunnels, underground, or recesses of buildings

• Wountain-ringed regions or benind buildings

To improve reception conditions, fully extend the 1Seg antenna. Also the reception conditions might be improved by changing the direction of the antenna, or by moving yourself to another place.

■Battery level

If you try to start 1Seg when the battery is low, the battery alert tone sounds, and a confirmation display appears asking whether to start it. When you do nothing on the confirmation display for about one minute, 1Seg automatically terminates.

■Messages on the display when you use 1Seg for the first time

When you use 1Seg for the first time after purchase, the Exemption Clause Confirmation display appears.

If you select "NO" on a confirmation display which appears after pressing ( ( K), the same confirmation display does not appear afterward.



### **Setting Channels**

When you activate 1Seg for the first time or change the area you are in, you need to operate "Channel setting". Select "Auto channel setting to enable you to search automatically for broadcast stations you can watch.

- You need to set this function with the 1Seg antenna extended when you are in a terrestrial digital TV broadcasting service area.
- CAMERA/TV/MUSIC 1Seg
  Channel setting Auto channel setting
- 2 Select "YES".
- 3 Select "YES" ► Enter a title.

To execute Channel Setting by selecting an area

- 1. MEND CAMERA/TV/MUSIC ▶ 1Seg ▶ Channel setting ▶ Select area
- 2. Select an area > Select a prefecture.
- 3. Select "YES".

### Watching 1Seg




# Press and hold ( for at least one second.

1Seg starts and the viewer display appears.

Each time CLR is pressed while viewing, the mode is switched between mute and unmute.



### **Viewing and Operating Viewer Display**

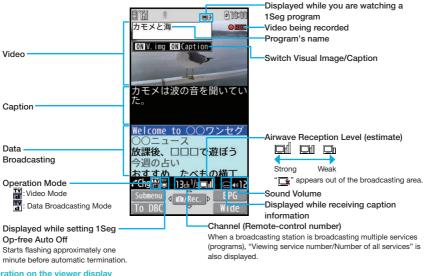

The operation on the viewer display Channel switch:

Video recording: ( )(for at least one second) or (for at least one second)

Sound volume adjustment:





The recorded video is saved on the microSD card.

# Enjoy

# Setting Timer Watching or Recording 1Seg

Set the date and time, a channel, and program name, and enter them to the TV Timer List or Timer Recording List. When the set time arrives, watching or recording starts.

- I MENU ► CAMERA/TV/MUSIC ► 1Seg
- Select "TV timer list" or "Timer recording list".
- 3 Press (New )
- 4 Enter each item.
- 5 Press (Finish).

### Playing Recorded Video

- Data box ►1Seg
- 2 Select "Video" ➤ Select a file.

Each time (a) is pressed while playing, the mode is switched between mute and unmute.



### Music



#### Music&Video Channel

Music&Video Channel is a service which automatically delivers up to about two-hour sound programs at night just by selecting your favorite music programs etc. in advance. Further, you can enjoy high-quality video program of up to about one-hour. Programs are updated periodically and you can enjoy the delivered programs at any time such as on commuting.

■Before using Music&Video Channel

- Music&Video Channel is a pay service that is available on a subscription basis. (To apply for Music&Video Channel, you need to subscribe to i-mode and i-mode packet flat-rate service.)
- In addition to the service fee for using Music&Video Channel, you might be charged separately an information fee depending on the program.
- If you insert the UIM to the Music&Video Channel incompatible FOMA terminal after you subscribe to Music&Video Channel, you cannot use Music&Video Channel Service. Note that the service fee applies unless you cancel the Music&Video Channel subscription.
- You cannot set or download programs during international roaming\*. Take procedures to halt the distribution of programs before going abroad. Then, after homecoming, resume the reception of distribution.
   \*When you try to set or download programs during international roaming, note that you are charged a packet communication fee for i-mode communication.
- For details on Music&Video Channel, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- The Music&Video Channel service is provided in Japanese only.

### **Setting Programs**

- CAMERA/TV/MUSIC

  Music&Video Channel Program set.
- 2 Follow the instructions on the display to set a program.

The program automatically downloads at night.

### **Playing Programs**

- CAMERA/TV/MUSIC

  Music&Video Channel
- Select a program.

Operation while playing back a Music&Video Channel program

Halt:

Pause: ( ) ( ) or [

Sound volume adjustment:

Search (fast forward): Press and hold

Search (fast rewind): Press and hold





# Downloading Chaku-uta Full<sup>®</sup> Music Files

You can download Chaku-uta Full® music files from sites.

- Select a Chaku-uta Full<sup>®</sup> music file from a downloadable site.
- 2 Select "Save" ➤ Select "YES".
- Select a destination folder.
- "Chaku-uta Full" is a registered trademark of Sony Music Entertainment Inc.

#### ■ Handling music files

You can use music files saved on the microSD card for personal use only. Before using, give enough consideration not to infringe on the third party's intellectual property rights or other rights such as copyright.

### **Playing Music Files**

MUSIC Player enables you to play Chaku-uta Full® music files you have downloaded from sites, or to play Windows Media® Audio (WMA) files you saved on the microSD card using your personal computer.


- CAMERA/TV/MUSIC

  MUSIC Player
- 2 Select "All music"
  - Select a music file.

## Operations of MUSIC Player display Halt:



Search (fast forward): Press and hold Search (fast rewind): Press and hold

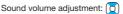

Replay next file:

Replay previous file: (()) (When playback time is over three seconds, you go back to the beginning

of the file.)



### i-αppli/i-Widget



i-αρpli is a software program for mobile phone supporting i-mode. By downloading various software programs from the i-mode site, you can use your FOMA terminal more conveniently. You can automatically update the stock price information or weather information, and enjoy games without accessing network.

i-Widget is a useful function for gaining easy access to frequently used contents and tools (Widget Appli programs) such as the calculator, clock, memo pad and stock market information. Widget Appli programs can be added by downloading them from the web site.

- Depending on the i- $\alpha$ ppli program, you might be charged a communication fee for using.
- The packet communication fee for overseas use differs from the one for domestic use.
- A multiple number of Widget Appli programs may start communicating when you open the i-Widget display. If you browse detailed information, you are charged separately a packet communication fee.
- For details on i-αppli/i-Widget, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

### Starting i-αppli

- Press and hold for at least one second.
- 2 Select a software program.



### **Starting Widget Appli**

Press 🗂.

The i-Widget display that can simultaneously start multiple Widget Appli programs appears.

Select a Widget Appli program.

You can operate Widget Appli program separately.

### **Downloading i-αppli from Sites**

- Select a software program from a downloadable site.
- Select "OK" when downloading ends.
  - When the software program is storable in "Customize Menu", the confirmation display appears asking whether to store it.
- 3 Select "YES".

- You can delete the pre-installed i-αppli programs. You can re-download deleted programs from the "P-SQUARE" site. You can download not only i-αppli programs but also the pre-installed Deco-mail pictograms, Kisekae Tool files, Machi-chara images, Chara-den images, templates, dictionaries, and Content packages from the "P-SQUARE" site (in Japanese only).
  - § Menu→メニューリスト (Menu List)→ケータイ電話メーカー (Mobile Phone Maker)→P-SQUARE
- Deadlines for re-download services
   "リバーシ (REVERS)": the end of March, 2015
   "ハイパー四川省 (Hyper Sichuan)": the end of March, 2015
   "モバイルGoogleマップ (Google Map for Mobile)": the end of May, 2014
- The re-download services may be halted or closed without notice even in the service period.

### i-motion/Movie



i-motion is a file consisting from video, audio, and music which you can download to your FOMA terminal from i-motion sites that support i-motion. You can also set it for a ring tone.

Also, by using high speed communication, you can play back smooth and high-quality movie files provided by portal sites, movie specialty sites and other sites on the Internet.

- When downloading or streaming an i-motion/movie file, you
  might receive a bulky file. When data size required for sending
  or receiving is bulky, packet communications fees will be a
  large sum. You are advised to use i-mode packet flat-rate
  service.
- Two types of i-motion/movie files, streaming type and normal/ download type are available.

Categories	Description
Streaming type	Plays data while receiving.
(cannot be saved)	
Normal/Download type	When download is completed,
(can be saved)	the Download Completion display
	appears. You can then play or save
	data.

### Downloading i-motion/Movie

- Select an i-motion/movie file from a downloadable site.
- 2 Select "Save" ➤ Select "YES".
- 3 Select a destination folder.

### Playing i-motion/Movie

- Data box ► a motion/Movie
- Select a folder Select a file.

### Osaifu-Keitai



#### Osaifu-Keitai/ToruCa

Osaifu-Keitai is equipped with the IC card which enables you to make payments, use coupons, enjoy stamp rallies and so on by placing the FOMA terminal over the scanning device in the stores or other locations. Furthermore, by placing the FOMA terminal over a scanning device, you can access sites and web pages, obtain the latest coupons by communication, and check the deposits of electronic money and the status of its use. Security of the card is well established so that you can use it carefree.


ToruCa is an electronic card that you can receive with FOMA terminal for use as fliers, restaurant cards, and coupon tickets. You can download ToruCa files from scanning devices, sites, or data broadcasting, and can easily exchange them using mail, infrared communication, iC communication, or a microSD card. The downloaded ToruCa files are saved to "ToruCa" on "Osaffu-Keitai"

For details on Osaifu-Keitai and ToruCa, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

- Data on the IC card (including electronic money, reward points, etc.) might be lost or deformed owing to the malfunction of the FOMA terminal. (You cannot deposit your FOMA terminal at our hand for repair, remaining data files on it. You are asked, as a rule, to delete them by yourself.) As to the support such as reissue, restoration, temporal storage, and transfer of data, consult the provider of your Osaifu-Keitai compatible service, except for the transfer by the iC transfer service. For your important data, be sure to use Osaifu-Keitai compatible service with backup support.
- In any case including malfunction or model change, we cannot be held responsible for the loss or deformation of data on the IC card or other losses caused regarding Osaifu-Keitai compatible services.
- When your FOMA terminal is stolen or lost, immediately inquire of the provider of your Osaifu-Keitai compatible service about the countermeasures.
- Even when the power is turned off or the battery runs out, the "Osaifu-Keitai" function is available by holding the mark over the scanning device. The function may not be available, however, if you do not use the battery pack for a long time or leave the battery uncharged after the low battery alert activates.

# Place the mark over a scanning device.

The Call/Charging indicator lights when you bring your FOMA terminal close to the scanning device and communication becomes ready.

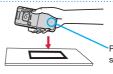

Place the  $\bigcirc$  mark over a scanning device.

### **i-concier**



i-concier works to serve you with a pleasant life just like a clerk or concierge does. The service holds your data (area information about your neighborhood, Memo, Schedule, ToruCa, Phonebook, etc.) and sends you information, with good timing, about a variety of things according to the contents of your memo and your schedule event, your living area, your current location, or your preference or taste. This service provides related information about Memos, schedule events, or ToDo items, and automatically updates schedule events or ToruCa files to the latest, and also automatically adds useful information such as about the opening hours of various shops to your Phonebook. It also allows you to share the schedules or images held by the DOCOMO's Data Storage Center with friends, family members or other groups. It also enables you to easily print out the images held, i-concier information is notified by a Machi-chara image (cartoon character that appears on the Stand-by display).

- For details on i-concier, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- i-concier is a pay service which is available on a subscription basis (You need to subscribe to i-mode to apply for i-concier).
- If you have not subscribed to Data Security Service but will newly subscribe to i-concier, you are to subscribe to Data Security Service as well as i-concier.
- Depending on the content (information, i-schedule, and others), you might be charged separately an information fee other than the i-concier monthly fee.
- You are charged a packet communication fee separately for receiving information except some.
- You are charged separately a packet communication fee for using detailed information.
- You are charged separately a packet communication fee for auto-updates of i-schedule, Memo, ToruCa, and Phonebook, etc.
- i-concier is available in Japanese only.

### **Receiving Information**

When information arrives, blinks and the content is displayed on the Stand-by display.



- Select a message
  - ► Select a piece of information.

### Displaying i-concier

- Information list) i-concier ▶インフォメーション一覧
- 2 Select a piece of information.

### Convenient Tools



### **Using Schedule**

MENU Tool Schedule Select a date to show a schedule event

event to confirm its details.




- Submenu ) > Select "New".
- Enter each item.



4 Press ( (Finish).

### **Using Alarm**

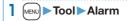

- 2 Highlight an alarm and press ( Call)
- 3 Enter each item.



- 4 Press ( (Finish).
  - The alarm does not sound in Public mode (Drive mode). Dial Lock, "Alarm" locked in Original Lock or Omakase Lock

### **Using Bar Code Reader**

You can use the camera to scan QR codes and others, and store them as files.

From the scanned data, you can make calls, compose i-mode mail messages, access Internet websites, and so on.

#### ■When scanning with Bar Code Reader

- Scan the code as large as possible within the guide frame.
- Autofocus works when you scan the code about 10 cm or more away from it.
   When you scan the code in the out-of-focus state, the recognition rate lowers.
- Hold the camera in parallel with the code when you scan.



#### ■QR code

QR code is one of the two-dimensional codes that denotes data in the vertical and horizontal directions.

 "株式会社NTTドコモ (NTT DOCOMO, INC.)" is displayed when you scan the QR code with the FOMA terminal.



#### Scan a Code

<Example> Access P-SQUARE by using QR code on the right



QR code for accessing the site

- MENU ► Tool ► Bar code reader
- Select "Scan code".
- Fit a code to the guide frame and press .

The subject is focused on by autofocus function.

- 4 Press (Start) to scan the code.
  - A URL is displayed as a scanned result.
- 5 Select the URL ➤ Select "i-mode Browser".

### **Using Pedometer**

As you walk with your FOMA terminal in hand or in your pocket, your pace is measured, and then depending on the measured results, your distance, calories consumed, and body fat burned are displayed.

#### ■Caution when using Pedometer

- If you have not yet set Set MainTime, you cannot use this function.
- When you use Carry Case L 01/Carry Case 02 (option) to house it, fasten it to your waist belt.
- When you put Pedometer into your bag, store it in a pocket or partition that holds it securely.

#### ■About measurement

- · Note that measurement results are just for reference.
- When the power is not turned on or while software is being updated, no measurement is carried out.
- Your pace might not be correctly measured depending on the usage conditions.

### 1 MENU ► Tool ► Pedometer

The measurement records of your pace are displayed.

 From the submenu, you can switch between ON/OFF of Pedometer, or set user information.

### **Creating Handwriting Photo/Memo**

On the touch panel, you can draw pictures or write characters by hand onto the images or you can add decoration. The Handwriting photos/memos you have created are saved as JPEG images.

- Normal Menu ► Tool
  - ► Handwriting photo/memo
- 2 Set background ► Edit
  Handwriting photo/memo
  ► Touch "Finish".
  - You can draw pictures, write characters and position stamps.



- Touch "Save in portrait" or "Save in landscape".
- 4 Touch "Save to pictures".

### Data Management



### **Using microSD Card**

If you do not have a microSD card, you need to purchase it.

• P-04C supports a commercial microSD card of up to 2 Gbytes and microSDHC card of up to 32 Gbytes (As of May 2011).

For the latest operation, check information such as the memory capacity and manufacturers of microSD cards, access the following sites (in Japanese only). Note that the microSD cards other than published in the sites may not work correctly.

- ·From i-mode to P-SQUARE (As of May 2011) 景 Menu→メニューリスト (Menu List)
- →ケータイ電話メーカー (Mobile Phone Maker)
- →P-SQUARE
- · From personal computers http://panasonic.ip/mobile/

Note that the published information is the result obtained from the operation check, which does not necessarily guarantee all performances of those microSD cards.

 Make sure that you turn off the power, and then insert/remove the microSD card.



### Inserting/Removing microSD Card

With the metal terminal surface facing downward, make sure that the cut edge is positioned at right and then insert.



· Push it until it clicks

When you remove the microSD card

Push the microSD card until it stops and remove it.

 Note that the microSD card may pop out when you insert or remove it

The inserting slot of the microSD card is in the inside of the back cover

To insert it, remove the back cover and open the inner cover, and then remove the battery pack.



#### Icons on the Display



- sin: A microSD card is inserted.
- : Data is being read/written.
  (Do not remove the microSD card nor turn off the FOMA terminal.)
- : The microSD card is write-protected.
- : The microSD card cannot be used. (Insert the microSD card again. If """ is still displayed, execute "Check microSD" or "microSD format".)

### Formatting microSD Card

When you use the microSD card for the first time, you need to format (initialize) it.

- Be sure to use P-04C for formatting. The microSD card formatted using other devices such as personal computers may not work properly.
- Note that formatting deletes all content on the microSD card.
- MENU Tool microSD
  - ► Refer microSD data ► MENU (Submenu)
  - ► microSD format
- 2 Enter your Terminal Security Code
  - Select "YES".

### **Copying Data to microSD Card**

<Example> Copying a still image

- Data box ► My picture
  - Select a folder.
- 2 Highlight a still image to be copied and press MENU (Submenu)
  - ► Select "Copy to microSD"
  - ► Select "Copy this".

### **Copying Data to FOMA Terminal**

<Example> Copying a still image

- Data box ➤ My picture ➤ (micros0)
  ➤ Select a folder.
- 2 Highlight a still image to be copied and press (Submenu)
  - ► Select "Copy to phone"
  - ► Select "Copy this".

### **Displaying Data Stored on microSD Card**

<Example> Displaying a still image

- Data box ► My picture ► (micros0)
- 2 Select a folder ➤ Select an image.

#### **Check Capacity of microSD Card**

The total memory and used memory (estimated) in the microSD card can be displayed.

- 1. MENU Tool microSD Refer microSD data
- 2. MENU (Submenu) Select "microSD info".

### Backing up Data to microSD Card

You can back up Phonebook entries, schedule events, mail messages, memos, bookmarks, and the settings on and information about your FOMA terminal collectively onto the microSD card. When restoring the backup data onto your FOMA terminal, they are collectively restored.

- Backing up data from the FOMA terminal onto the microSD card is collectively applied to all data, so emptied files in the FOMA terminal are also backed up on the microSD card. When you restore such data onto your FOMA terminal. emptied files on the microSD card overwrite the data in the FOMA terminal created later
- MENU Tool microSD Backup/Restore ► Backup to microSD
- Enter your Terminal Security Code ► Select "YES".


#### To restore backup data to FOMA terminal

- 1. MENU ► Tool ► microSD ► Backup/Restore Restore to phone
- 2. Enter your Terminal Security Code Select "YES".


### Sending/Receiving Data by Infrared Communication/iC Communication

You can send or receive data such as Phonebook entries to or from a device supporting infrared communication function or iC communication function.

 You cannot exchange data depending on the other party's device or FOMA terminal

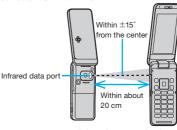

<Infrared communication>

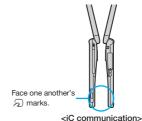

### **Sending Data**

- For infrared communications, set the receiving end terminal first, and then start sending data within 30 seconds.
- Submenu of the data to be sent

  ➤ Select "Send Ir data" or "iC

  transmission".
  - Procedure for sending data might differ depending on the data.
- Select "YES".

### **Receiving Data by Infrared Communication**

- ► Tool ► Receive Ir data ► Receive
- Select "YES".

### **Receiving Data by iC Communication**

- Face the mark of the receiving end terminal which shows the Stand-by display, to the mark of the sending end terminal.
- 2 Select "YES".

### Connecting to a PC

You can connect the FOMA terminal to a personal computer to exchange WMA files, images or other files stored on microSD card.

You can also access the Internet to perform data communication.

- WYou need the FOMA USB Cable with Charge Function 02 (option) or FOMA USB Cable (option).
- %To perform data communication, you need to install the "FOMA communication configuration file" (driver).

For details, refer to "Manual for PC Connection".

You can download the "FOMA communication configuration file" and "Manual for PC Connection" from the DOCOMO website.

http://www.nttdocomo.co.jp/english/support/

### **DOCOMO Connection Manager**

"DOCOMO Connection Manager" is a software which comes in handy for DOCOMO's data communication.

It enables easy PC settings according with the terms and conditions of the user's agreement.

It also makes it possible to check the amount of the data communication and provides a rough estimate of the charges using the charge counter function.

For details, refer to the DOCOMO website.

http://www.nttdocomo.co.jp/support/utilization/application/service/connection\_manager/ (In Japanese only)

### **Support**



### **Troubleshooting**

- First of all, check to see if you need to update the software program and then update it if necessary. See page 99 for how to update software programs.
- When symptom persists even after you check the countermeasures for the problem you suffer, contact the "Repairs" counter listed on the back page of this manual or a repair counter specified by DOCOMO.

The "Repairs" counter is available in Japanese only.

#### Power source

#### The FOMA terminal does not turn on.

- ...Make sure the battery pack is attached to the FOMA terminal correctly. (See page 24)
- ... Make sure the battery is fully charged. (See page 25)

#### Charging

#### Cannot charge.

#### (The Call/Charging indicator does not light, or it flickers.)

- ···Make sure the battery pack is attached to the FOMA terminal correctly. (See page 24)
- ··· Make sure the power plug of the adapter is securely inserted into the outlet or cigarette lighter socket.
- ···Make sure the adapter and the FOMA terminal are connected correctly. (See page 26)
- ···When you use an AC adapter (option), make sure its connector is firmly connected to the FOMA terminal or the provided desktop holder. (See page 25, page 26)
- ···When you use the desktop holder, make sure the connector terminal of the FOMA terminal is not stained. If it is stained, wipe the terminal part with a dry cotton swab, etc.
- ··· If you talk on the phone, have communications, or operate other functions for a long time during battery charge, the temperature of the FOMA terminal may rise to flicker the Call/Charging indicator. In that case, charge the battery after the FOMA terminal cools down. (See page 25)

#### Operation of terminal

### While you operate the FOMA terminal or charge the battery, they get hot.

···While operating or charging, or when you operate i-αppli programs, talk on the videophone, or watch 1Seg programs for a long time during battery charge, the FOMA terminal, battery pack, or adapter may become warm, but this is not a safety hazard, so you can continue to use them.

#### The usable time of the battery is short.

- ··· Make sure not to leave the FOMA terminal out-of-service-area for a long time. If your FOMA terminal is left out-of-service area, it searches for radio waves to establish communications, consuming more power.
- $\cdots$  The usable time of the battery pack varies depending on the usage environment or its remaining life.
- Battery packs are consumables. The usable time slightly shortens each time you charge the battery. If the usable time becomes extremely short as compared with the default state even if fully charged, purchase the specified battery pack.

#### The power of the FOMA terminal shuts down and restarts.

... If the terminal of the battery pack is stained, the connection might deteriorate to shut down the power. Wipe the battery terminal with a dry cotton swab, etc.

#### Pressing keys is disabled.

- ··· Make sure Dial Lock is deactivated. (See page 48)
- ··· Make sure Keypad Lock is deactivated. (See page 49)
- ··· Make sure Side Key Guard is set to "OFF".

#### The UIM is not recognized.

··· Make sure you insert the UIM in the correct direction. (See page 24)

#### The clock does not show the correct time.

··· The clock may not show the correct time when the power has been kept on for a prolonged period of time. Check whether "Auto time adjust" and "Auto time difference" of "Set main time" have been set to "Auto" and then, move to a location with good signal reception, turn off the power of FOMA terminal and then back on.

#### Call

#### Cannot make a call by pressing numeric keys.

- ··· Make sure Restrict Dialing is deactivated.
- ··· Make sure the lock for "Keypad dial" in Original Lock is released. (See page 49)
- ··· Make sure Dial Lock is deactivated. (See page 48)
- ··· Make sure Self Mode is deactivated.

#### Cannot talk.

# ("">" does not disappear even if you move to another place. You cannot make or receive a call, though the radio wave conditions are not bad.)

- ···Turn off and on the FOMA terminal, or remove and attach/insert the battery pack or UIM. (See page 24, page 27)
- ... Depending on the characteristics of the radio waves, you may not be able to make or receive a call even if the FOMA terminal is "within service area" or " " " is displayed for a radio wave condition. Move to another place and redial.
- ··· Make sure the call restrictions such as Call Rejection, Call Acceptation, etc. are deactivated.
- ... Depending on the radio wave congestion state, calls and mail messages may be congested and hard to be connected in crowded places. In that case, the message "Please wait" or "Please wait for a while" is displayed and a busy tone sounds. Move to another place or wait for a while, and then redial.

#### Osaifu-Keitai

#### Cannot use Osaifu-Keitai function.

- …If you remove the battery pack or activate Omakase Lock, the Osaifu-Keitai function becomes unavailable regardless of the setting of IC Card Lock. (See page 24, page 49)
- ··· Make sure IC Card Lock is deactivated, (See page 48)
- ··· Make sure you place the  $\[ \bigcirc \]$  mark on the FOMA terminal over the scanning device. (See page 85)

### **Warranty and After-sales Service**

#### Warranty

- Make sure that you have received a warranty card provided at purchase. After checking the contents of the warranty card as well as "Shop name and date of purchase", keep the warranty card in a safe place. If you notice that necessary items of the warranty card are not filled in, immediately contact the shop where you purchased the FOMA terminal from. The term of the warranty is one year from the date of purchase.
- All or part of this product including the accessories may be modified for improvement without notice.

### **After-sales Services**

#### OWhen there is a problem with the FOMA terminal

Before asking repairs, check "Troubleshooting" in this manual or in "使いかたガイド (Guide)" mounted on the FOMA terminal. ("使いかたガイド (Guide)" as available in Japanese mode only.) If the problem remains unsolved, contact the "Repairs" counter listed on the back page of this manual for malfunction and consult them.

The "Repairs" counter is available in Japanese only.

When repairs are necessitated as a result of consultation Bring your FOMA terminal to a repair counter specified by DOCOMO. Note that your FOMA terminal is accepted for repair during the repair counter's business hours. Further, note that you may need to wait for fixing depending on the malfunction state.

#### ■In warranty period

- · Your FOMA terminal is repaired charge free in accordance with the terms of warranty.
- Make sure that you bring the warranty card to the counter for repair. If you do not show the warranty card, or when troubles or malfunctions are regarded to be caused by your mishandling (the damages of liquid crystal, connector, etc.), the repair cost is charged even within the warranty period.
- The cost for troubles caused by the use of devices and consumables other than those specified by DOCOMO is charged even within the warranty period.

#### ■Repairs may not be carried out in the following cases:

- · When exposure to water is found at our repair counter (Example: When the moisture detection sticker has reacted)
- When, as a result of inspection at our repair center, corrosion is found due to exposure to water, dew condensation, or sweat, or when damage or deformation is found in the circuit board [Repairs might not be carried out when damage to the connector terminal (earphone/microphone terminal) or liquid crystal, or cracks in the body are found.]
- \*Even if repair is feasible, the repair cost is charged when the trouble you suffer matches one of the symptoms listed above, which is not supported by the warranty.

#### ■After the warranty period

We will repair your FOMA terminal on request (charges will apply).

#### ■Spare parts availability period

The minimum storage period of the performance spare parts (parts required for maintaining performance) for the FOMA terminal is basically six years after the closure of its production. Note, however, that your FOMA terminal might not be repaired depending on the troubled portions because of the shortage of spare parts.

#### Other points to note

- . Make sure not to modify the FOMA terminal or its accessories.
  - · We might reject to repair depending on the degrees of your modification.

The following might be regarded as modifications:

- · To put stickers, etc. onto the liquid crystal or keys
- · To decorate the FOMA terminal using adhesives
- · To replace the coverings etc. with those of other than DOCOMO genuine products
- · Repairs of troubles or malfunctions resulting from the modifications are charged even within the warranty period.
- . Do not peel the nameplate off the FOMA terminal. Note that when we cannot ensure the contents described on the nameplate and therefore cannot verify the product conformity to the technical standard, it might happen that we at DOCOMO reject to repair the malfunction.
- . The information such as about function settings, etc. might be reset depending on the troubles or repairs, or the way you handle the FOMA terminal. Set the settings again.
- The parts generating magnetism are used in the following portions of the FOMA terminal. Note that if you place a magnetism-sensitive object such as a cash card near the FOMA terminal, the card might become unusable

Portions: speaker, earpiece

. This FOMA terminal comes with the waterproof performance, however, if the inside of the FOMA terminal gets wet or becomes moist, immediately turn off the power and remove the battery pack; then visit a repair counter. The FOMA terminal may not be repaired depending on the condition.

### i-mode Fault Diagnosis Site

You can check on your FOMA terminal whether sending/ receiving mail messages, downloading images/melodies. and others are normally working. When you think your FOMA terminal is in trouble as a result of your check, contact the "Repairs" counter listed on the back page of this manual. The "Repairs" counter is available in Japanese only.

• To connect to "i 干ード故障診断サイト (i-mode Fault

Diagnosis Site)" [in Japanese only] i-mode site: 8 Menu→お知らせ (News)

- →サポート情報 (Support information)
- →お問い合わせ (Inquiries)
- →故障·電波状況お問い合わせ先 (Failures &

Radio wave condition)

→ i モード故障診断 (i-mode Fault Diagnosis)



QR code for accessing the site

When you use overseas, you are charged a fee.

### **Updating Software**


This function is to check whether you need to update software programs in the FOMA terminal by connecting to the network, and if necessary, you can download some parts of software programs using packet communication, and can update the software programs.

If you need to update the software programs, the DOCOMO website and "お客様サポート (User support)" in Japanese

- 8 Menu lets you know information about updating software programs. There are three kinds for updating software programs; "Auto-update", "Update Now" and "Reserve Update".
- You can update software programs, with data retained, such as Phonebook entries, images shot by the camera, or
  downloaded data in the FOMA terminal; however note that data may not be protected depending on the conditions (such
  as malfunction, damage, or drench) your FOMA terminal is placed in. You are advised to back up important data. Note
  that data such as downloaded ones might not be backed up.
- ■Before using Software Update
- · Do not remove the battery pack while updating software programs. You may fail to update.
- Fully charge the battery before updating software programs.
- It may take time to update (download or rewrite) software programs.
- You cannot make/receive calls, use communication functions, and other functions while updating software programs. (You can receive voice calls during download.)
- You are advised to update software programs when radio wave is strong enough with the three antennas displayed and
  while you are not moving. If radio wave conditions get worse while downloading software programs, or download is
  suspended, move to a place with better radio wave conditions and try again to update software programs.
- When updating software programs, the proprietary information about your FOMA terminal (model name or serial number, etc.) is automatically sent to the server (DOCOMO-managed server for Software Update). We at DOCOMO never use the sent information for purposes other than to update software programs.
- If you fail to update software programs, "Rewrite failed" is displayed and you cannot do all operations. In that
  case, you are kindly requested to come to a repair counter specified by DOCOMO.

### **Start Software Update from Icon**

Select "Update notification icon" on the Stand-by display.

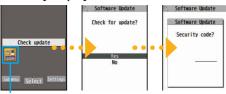

Update notification icon

Check whether you need to update software programs.

When update is necessary, "Update is needed" is displayed. And you can select either "Now update" or "Reserve".

- When you select "Now update", update immediately starts.
- immediately starts
   When rewriting is completed, your FOMA terminal automatically
   restarts and the



Update Completion Confirmation display appears.

• When you select "Reserve", you can select the date and time you want.

### **Start Software Update from Menu**

- Setting ➤ Other setting ➤ Software Update
- 2 Enter your Terminal
  Security Code
  ► Select "Update".

  Software Update

  Software Update

  Software Update

  Software Update
- 3 Go to step 2 of "Start Software Update from Icon" on page 100.

### **Scanning Function**

You can detect data or application programs, which might cause troubles, from among those downloaded to your FOMA terminal, and then can delete the data or stop starting the application programs.

This scan function provides a certain protective measure
to filter out data that might cause troubles with your FOMA
terminal at the time when you browse websites or receive
messages. Note that when the virus pattern data supporting
respective troubles is not yet downloaded to your FOMA
terminal, or when no virus pattern data supporting them is
found, this function does not prevent troubles from occurring.

#### **Updating pattern data**

First of all, update the pattern data to obtain the latest.

Setting Lock/Security Scanning function Update YES

#### Displays for scanning results

■About the display for scanned problem elements



- A warning display appears when problematic data is found. Press [ix]([cai]) from the warning display to show the name of the problem element.
- When six or more problem elements are found, the sixth and later problem element names are omitted.
- "<u>letail</u>" might not appear depending on the detected problem element.

#### ■The displays for scanning result

Alert level 0	Scanning function Operation may not run properly	Press ( 0K ) to continue the operation.
Alert level 1	Scanning function Operation may not run properly Cancel operation?	Press ( YES ) to stop and end the operation.  Press ( NO ) to continue the operation.
Alert level 2	Operation may not run properly Canceling operation	Press ( 0K ) to stop and end the operation.
Alert level 3	Operation may not run properly Delete data?	Press (N) (VES) to delete the data and end the operation.  Press (NO) to stop and end the operation.
Alert level 4	Operation may not run properly Deleting data	Press ( OK ) to delete the data and end the operation.

• The alert displays differ from shown above may appear.

### **Options and Related Devices**

Combining various options with the FOMA terminal, you can realize more versatile use from personal purpose to business purposes. Some products may not be dealt in depending on the area. For details, consult a handling counter such as a docomo Shop. For details on options, refer to the user's manuals of respective options and related devices.

- ·Battery Pack P23
- ·Back Cover P49
- ·Touch Pen P01
- ·Desktop Holder P45 ·FOMA AC Adapter 01/02\*\*1
- ·FOMA AC Adapter 01 for Global use<sup>\*1</sup>
- FOMA DC Adapter 01/02
- ·FOMA Portable Charging Adapter 01/02/03
- · FOMA Dry Battery Adapter 01
- · FOMA eco Solar Panel 01
- ·FOMA USB Cable with Charge Function 02\*2
- ·FOMA USB Cable \*\*2
- ·FOMA Indoor Booster Antenna \*3
- ·FOMA Indoor Booster Antenna (Stand Type) \*3
- · Carry Case L 01
- $\%\,1\,$  See page 25 and page 26 for charging batteries using AC adapter.
- ※2 If you use a USB hub, outer devices may not work correctly.
- ※3 Use it in Japan only.
- \*\*4 If the connector terminal, etc. of the FOMA terminal comes into contact with the In-Car Holder, change the direction of the FOMA terminal or In-Car Holder. Then, install.
- \*\*5 Earphone Plug Adapter P001 and Earphone Plug Adapter for External connector terminal 01 are required.
- %6 Earphone Plug Adapter for External connector terminal 01 is required.
- %7 To use/charge the P-04C, FOMA In-Car Hands-Free Cable 01 is required.

- · Carry Case 02
- ·In-Car Holder 01 \*\*4
- · Earphone/Microphone 01
- ·Stereo Earphone Set 01
- ·Earphone/Microphone with Switch P001/P002\*5
- ·Flat-plug Earphone/Microphone with Switch P01/P02<sup>\*6</sup>
- ·Flat-plug Stereo Earphone Set P01\*6
- ·Earphone Plug Adapter P001 \*\*6
- · Earphone Plug Adapter for External connector terminal 01
- · Earphone Plug Adapter 01
- ·Flat-plug Connector/Stereo Mini-jack Conversion Adapter P01 \*\*6
- ·Bone conduction microphone/receiver 01 \*6
- ·In-Car Hands-Free Kit 01\*7
- · FOMA In-Car Hands-Free Cable 01

### Appendix



### **Function List**

Execute "Resetting the Function Settings to Default" on page 50 for the items indicated by to return to the respective defaults.

Mail	Inbox	
Σ	Outbox	
	Draft	
	Mail history box	
	Compose new message	
	Create new Deco-Anime	
	Danama Tamalata	Deco-mail
	Decome-Template	Decome-Anime
	Compose new SMS	
	Check mail/message	
	Check new SMS	
	Receive option	
	Mail setting	Receive setting
		Display setting
		Text predict
		Signature setting
		Phrases/Store word
		Mail box lock
		Set check mail/message
		Address/Spam Mail Set.
		Auto save setting
		SMS setting

Mail		Area Mail setting
		Auto Deco-mail setting
	Mail setting	Check settings
		Reset
_	8.1. (9. )	
e	™ Menu/Search	
≷	Bookmark	
qəw/əpom	Screen Memo	
Ē	Browsing history	
060	Enter URL -	Enter URL
		URL enter history
	i-Channel	i-Channel list
		Ticker display setting
		Reset i-Channel
	mode/web setting	ទី mode Browser Set.
		Full Browser Settings
		Common Settings
		Confirm a mode setting
		Reset 🖁 mode setting
	Full Browser Home	

ie.	Software list (phone)	
© αppli	្តី αppli (microSD)	Software list
ාසා		្តី αppli data
	🖁 αppli call logs	
		End stand-by info
		End Widget appli info
	🖁 αppli run info	Security error history
		Auto start info
		Trace info
		Auto-start setting
		Disp. software info
		i-Widget overseas use
		i-Widget sound effect
		AUTO-GPS preferred set
	្តី αppli setting	i-αppli call settings
	g appn seung	្តី αppli volume
		Preferred tone
		αBacklight
		αPower saver
		αVibrator
		Check settings

_		
ပ		Digicam mode
l S	Camera	Photo mode
₹		Movie mode
15		Picture album
🏠		Activate 1Seg
CAMERA/TV/MUSIC		Program guide
Ö	1Seg	TV timer list
		Timer recording list
		Recording result
		TVlink
		Channel list
		Channel setting
		User setting
	MUSIC Player	
	Music&Video Channel	
_		
×	My picture	

6 I	wy picture
Data box	MUSIC
Dat	Music&Video Channel
-	ଞ୍ଚି motion/Movie
	Melody
	Content package
	My document
	Kisekae Tool
	Machi-chara
	Chara-den

a box		Image
	1Seg	Video
Data		Position memory
_	Document viewer	
	Font	
	SD other files	-
	Search all history	

١.			
Tool	0	Voice announce	
	2	Distingen	Enter word
ı		Dictionary	Reference history
I		Phrases/Store word	Common phrases
П			Store word
ı		Download dictionary	-
I		Contact DOCOMO	

Tool	Bar code reader	Scan code
₽		Saved data
	Calculator	
	Alarm	
	Receive Ir data	Receive
	neceive ir data	Receive all
	Schedule	
	Memo	
	Pedometer	
	Data Security Service	Data check/Download
		Update phonebooks etc.
		Update images
		Update setting info
		Setting/History
	microSD	Refer microSD data
		Backup/Restore
	Guide	
	Voice recorder	
	mixi setting	
	PicMate setting	
	GREE setting	·

	Contact DOCOMO	
_		Search phonebook
읋	Phonebook	Add to phonebook
TEL function		UIM operation
山山		Phonebook set./Check
-		Forwarding image
	Choku-Den	
		Play/Delete msg.
	D 0/-i	Play/Delete VP msg.
	Rec. msg./Voice memo	Record voice memo
		Record message setting
	Dialed/Received call	Dialed calls
		Received calls
		Redial
		Nuis. call blocking
		Caller ID request
		Caller ID notification
	Dial/Receive setting	Arrival call act
	Dial/Neceive setting	Dial call setting
		Receive call setting
		In-call setting
		Headset function set.

L C	Dial/Receive setting	Call rejection set.
IEL tunction		Missed call notice
	Videophone setting	Visual preference
1		Select image
_		Auto redial as voice
		Ntfy switch-mode
		Reject videophone
		Hands-free switch
		V.phone while packet
		Call duration/charge
	O-II d	Notify cost limit
	Call duration/charge	Reset total
		Auto reset
	Koe-no-Takuhaibin	Play messages
		Settings
	2in1	
	Melody call	
	Voice mail service	Play messages
		Activate
		Deactivate
		Set ring time
		Check setting
		Voice mail setting
		Check messages
		Message notification
		Delete icon
		Setting for videophone

TEL function	Other network serv.	Call forwarding
		Call waiting
		English guidance
		Remote access
		Multi Number
		Dual network
		Additional service
		OFFICEED
Sissekae Tool setting		
Setting	Screen/Display	Stand-by display
es S		Color theme setting
		Each display setting
		Machi-chara setting
		Soft key
		Private menu setting
		Menu Theme
		Viewer settings
		Icons
		Icons setting
		View blind
		Image display mode
		LCD AI
		Mail ticker display
		Information display

ρ		Ring volume	
Setting		Select ring tone	
Ñ		Other sound setting	
	Sound/Vib./Manner	Vibrator setting	
		Manner mode setting	
		Stereo&3D sound	
		Machi-chara chat set.	
	De aldielet/Illere	Backlight	
	Backlight/Illum.	Illumination setting	
		Font	
	Text display/input	Character input set	
		バイリンガル	
		Set main time	
		Sub clock setting	
	Time	Clock display	
		Auto power ON	
		Auto power OFF	
		Lock	
	Lock/Security	Keypad lock	
		Secret mode	
		Secret data only mode	
		Call rejection set.	
		Change security code	
		UIM setting	
		Scanning function	
		Timer lock ON at close	
		IC card lock setting	
_			

_		
Setting	Battery	eco mode
		eco mode setting
		eco mode autostart
		Use history
		Battery level
		USB mode
	External connection	Headset microphone
		Femtocell
		Work with style
		Motion control setting
	Other setting	Touch panel adjustment
		MultiOneTouch set.
		Side key guard
		Camera-button setting
		Alarm setting
		Self mode
		Reset settings
		Initialize
		Software Update
		Quick search URL
as	Мар	
ď	INIAP	

as	Мар	
Se	Navigation	
Map/Overseas	imadoco search	imadoco kantan search
١×		imadoco search
₹	i-area	
	GPS αppli list	
	Danisian (Nation	Position location
	Position/Notify	Location notification

Map/Overseas		Location history	
		Map setting	
		GPS button setting	
		Location request set.	
₽		AUTO-GPS	
	Map&GPS set./history	Positioning mode set.	
		Register LCS client	
l		Service setting	
		Serv. host URL set.	
		Illum./Tone settings	
		Network search setting	
ĺ		PLMN setting	
	Overseas NW search	Display operator name	
		Display area status	
		Re-search icon set.	
	Overseas setting	Inquiries (overseas)	
		Sub clock setting	
		Bar incoming when roam	
		Missed call notice	
		Roaming guidance	
		Int'l dial assistance	
		គ្លី mode service set.	
		Mail/Message usage set	
		Network service	
	Overseas use guide		
i-co	i-concier		
0,	. 55.15.5		

Profile			
<u>.</u>	IC card content		
Osaifu-Keitai	DCMX		
∓	ToruCa		
Sai	IC card lock setting	IC card lock	
0		IC lock (power-off)	
		ToruCa settings	
	Setting	Receive ToruCa	
		IC card notice set	
	Check IC owner		
	Change IC owner		
	Search by 8 mode		

S	Character input
the	Home Menu
0	Customize Menu

# **Main Specifications**

Handset

Model		P-04C	
Dimensio	ns (when closed)	Height: Approx. 110 mm Width: Approx. 50 mm Depth: Approx. 16.6 mm (at thickest point: Approx. 21 mm)	
Weight (with the battery pack attached)		Approx. 133 g	
Continuo (FOMA/3	us standby time G)	Standstill: Approx. 540 hours In motion: Approx. 350 hours	
Continuo (FOMA/3	us talk time G)	Voice call : Approx. 190 minutes Videophone call: Approx. 100 minutes	
1Seg watching time		Approx. 210 minutes (when Mobile W-Speed is OFF: Approx. 270 minutes) (in 1Seg eco Mode: Approx. 300 minutes)	
Charging time		AC adapter: Approx. 120 minutes DC adapter: Approx. 120 minutes	
Display	Туре	TFT 262,144 colors	
	Size	Approx. 3.1 inches	
	Number of pixels	409,920 pixels (480 dots x 854 dots)	
Image	Туре	CMOS	
pickup device Size		1/2.4 inches	
Camera	Number of effective pixels	Approx. 13,200,000 pixels	
	Number of recording pixels (maximum)	Approx. 13,000,000 pixels	

Recording	Number of recordable still images <sup>*1</sup>	Approx. 1,200 max. (default)	
	Number of still images for continuous shooting	For Digicam Mode in Continuous setting 3M: 8 2M Wide: 8 2M: 8 Stand-by: 8 For Continuous Mode VGA: 4 QVGA: 5 to 10 QCIF: 5 to 20 Sub-QCIF: 5 to 20	
Music playback	Continuous playback time <sup>®2</sup>	QCIF: 5 to 20 Sub-QCIF: 6,500 minutes \$\frac{\pi}{2}\$ Chaku-uta Full <sup>®</sup> music file (supports Play Background): Approx. 6,000 minutes \$\frac{\pi}{2}\$ music file): Approx. 1,260 minutes \$\frac{\pi}{2}\$ wide (supports Play Background): Approx. 4,600 minutes Music&Video Channel program (supports Play Background) Sound : Approx. 6,000 minutes Moving picture: Approx. 260 minutes	
Memory	Chaku-uta®	Approx. 199 Mbytes (default)**4	
capacity	Chaku-uta Full®		

"Chaku-uta" is a registered trademark of Sony Music Entertainment Inc.

- \*\*1 Picture size: QVGA (320 x 240), Quality: Standard, File size: 25 Kbytes
- \*\*2 The continuous playback time is the estimated duration that you can play back using the Stereo Earphone Set 01 (option) with the FOMA terminal closed.
- ※3 File format: AAC
- ※4 Shares with still images, i-motion files, melodies, PDF files, Music&Video Channel programs, Kisekae Tool files, Machi-chara images, Content packages, Font, Screen memos, ToruCa files, and i-αppli programs.

#### ■Battery pack

Name of product	Battery Pack P23
Battery type	Li-ion (lithium ion) battery
Voltage	3.7 V
Capacity	800 mAh

# ■Specifications of shooting

<Still image (Photo mode)>

File format (Extension)	JPEG (jpg)
The number of files that can be	Approx. 1,200 max. *1*2
saved to P-04C	
The number of files that can be	Approx. 61,466 max. **2
saved to the microSD card (2 Gbytes)	

#### <Moving picture (Movie mode)>

File format (Extension)	MP4, ASF (3gp, asf)
Recordable time to P-04C	Approx. 30 seconds max. *1*3
Recordable time to the microSD	Approx. 180 minutes max. **4
card (2 Gbytes)	

#### <Zoom>

Still image	Level of zoom	21 levels
(Photo mode)	The maximum	Approx. 16.2 times
	magnifications	
Moving picture	Level of zoom	21 levels
(Movie mode)	The maximum	Approx. 5.8 times
	magnifications	

- \*1 Default setting
- \*\*2 The number of files that can be saved under the conditions of "Picture size: QVGA (320 x 240), Quality: Standard, File size: 25 Kbytes".
- \*\*3 Maximum recording duration per shot that can be saved to the main unit under the conditions of "Movie size: VGA (640 x 480), File size: Mail restriction (L), Quality: Standard, Movie type set: Normal".

- \*\*4 Maximum recording duration per shot that can be saved to the microSD card (2 Gbytes) under the conditions of "Movie size: VGA (640 x 480), File size: Long time, Quality: Standard, Movie type set: Normal".
- ■Recordable time of 1Seg

Maximum (total) recordable time to	Approx. 640 minutes
the microSD card (2 Gbytes)	
Maximum (total) recordable time to	Approx. 10,240 minutes
the microSDHC card (32 Gbytes)	

- The maximum recordable time is the estimate for 224 kbps of video, 48 kbps of audio, and 52 kbps of data (including captions). The recordable time varies depending on the broadcasting station or program.
- The maximum file size for continuous recording is up to 2 Gbytes under SD-VIDEO specifications.
- ■Number of savable/registerable items in FOMA terminal

Function		Number of savable/ registerable items
Phonebook		1,000
Schedule		2,500
Mail	Received mail	2,500 max. *1*2
	Sent mail	1,000 max. *2
Still image		3,500 max. **2
i-motion file		3,500 max. **2
Music&Video Downloaded Channel program		2
	Saved program	10 max. **2
Kisekae Tool i-αppli		3,500 max. **2
		100 max. **2

- %1 Includes pre-installed data.
- \*2 The number of savable/registerable items may decrease depending on the data volume.

# Specific Absorption Rate (SAR) of Mobile Phone

### **SAR Certification Information**

This model P-04C mobile phone complies with Japanese technical regulations and international guidelines regarding exposure to radio waves.

This mobile phone was designed in observance of Japanese technical regulations regarding exposure to radio waves' and limits to exposure to radio waves recommended by a set of equivalent international guidelines. This set of international guidelines was set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health condition.

The technical regulations and international guidelines set out limits for radio waves as the Specific Absorption Rate, or SAR, which is the value of absorbed energy in any 10 grams of tissue over a 6-minute period. The SAR limit for mobile phones is 2.0 W/kg. The highest SAR value for this mobile phone when tested for use at the ear is 0.822 W/kg. There may be slight differences between the SAR levels for each product, but they all satisfy the limit.

The actual SAR of this mobile phone while operating can be well below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum required to reach the network. Therefore in general, the closer you are to a base station, the lower the power output of the device.

This mobile phone can be used in positions other than against your ear. This mobile phone satisfies the international guidelines when used with a carrying case or a wearable accessory approved by NTT DOCOMO, INC.\*\* In case you are not using the approved accessory, please use a product that does not contain any metals, and one that positions the mobile phone at least 1.5 cm away from your body.

The World Health Organization has stated that present scientific information does not indicate that there are harmful effects attributed to the use of mobile devices. They recommend that if you are worried about your exposure then you can limit your usage or simply use a hands-free kit to keep the mobile device away from the head and body. Please refer to the WHO website if you would like more detailed information.

http://www.who.int/docstore/peh-emf/publications/facts\_press/fact\_english.htm

Please refer to the websites listed below if you would like more detailed information regarding SAR.

Ministry of Internal Affairs and Communications Website: http://www.tele.soumu.go.jp/e/sys/ele/index.htm Association of Radio Industries and Businesses Website: http://www.arib-emf.org/index02.html (In Japanese only) NTT DOCOMO INC Website:

http://www.nttdocomo.co.jp/english/product/sar/ Panasonic Mobile Communications Co., Ltd. Website: http://panasonic.jp/mobile/ (In Japanese only)

- Technical regulations are defined by the Ministerial Ordinance Related to Radio Law (Article 14-2 of Radio Equipment Regulations).
- \*\* Regarding the method of measuring SAR when using mobile phones in positions other than against the ear, international standards (IEC62209-2) were set in March of 2010. On the other hand, technical regulation is currently being deliberated on by national council. (As of May, 2011)

# **European RF Exposure Information**

This mobile phone complies with the EU requirements for exposure to radio waves.

Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR\* limits\*\* for exposure to radio-frequency (RF) energy, which SAR\* value, when tested for compliance against the standard was 0.883 W/kg. While there may be differences between the SAR\* levels of various phones and at various positions, they all meet\*\*\* the EU requirements for RF exposure.

- \* The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAB.
- \*\* The SAR limit for mobile phones used by the public is 2.0 watts/ kilogram (W/kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- \*\*\*\* Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

# **Declaration of Conformity**

**C€0168** 

The product "P-04C" is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1(a), 3.1(b) and 3.2. The Declaration of Conformity can be found on http://panasonic.net/pmc/support/index.html.

The European RTTE approval of this product is limited to the use of the P-04C handset, Battery Pack and FOMA AC Adapter for Global use (100 to 240 V AC) only. Other accessories are not part of the approval.

## **FCC Notice**

- This device complies with part 15 of the FCC Rules.
   Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

# **FCC RF Exposure Information**

This model phone meets the U.S. government's requirements for exposure to radio waves.

Your wireless phone contains a radio transmitter and receiver. Your phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR), The SAR limit set by the FCC is 1.6 W/kg.\* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base

station antenna, the lower the output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the U.S. government-adopted requirement for safe exposure. The tests are performed in various positions and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 0.573 W/kg, and when worn on the body in a holster or carry case, is 0.499 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section at http://www.fcc.gov/oet/ea/fccid/ after search on FCC ID UCE111037A. For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

## Important Safety Information

#### AIRCRAFT

Switch off your wireless device when boarding an aircraft or whenever you are instructed to do so by airline staff. If your device offers a 'flight mode' or similar feature consult airline staff as to whether it can be used on board.

#### DRIVING

Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

#### HOSPITALS

Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

#### PETROL STATIONS

Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

#### INTERFERENCE

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

#### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

#### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

#### For other Medical Devices:

Please consult your physician and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

# **Export Administration Regulations**

This product and its accessories might be covered by the Japan Export Administration Regulations ("Foreign Exchange and Foreign Trade Law" and its related laws). To export this product and its accessories, take the required measures on your responsibility and at your expenses. For details on the procedures, contact the Ministry of Economy, Trade and Industry.

In the United States, the SAR limit for wireless mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band.

# **Intellectual Property Right**

# **Copyrights and Portrait Rights**

You have no right to copy, modify, or distribute the contents such as text, images, music, or software programs downloaded from websites on the Internet, or images shot by the cameras of this product without permission from the copyright holder except for when the copy or quote is for personal use that is allowed by the copyright law.

Note that it may be prohibited to shoot or record live performances or exhibitions even for personal use. Make sure that you refrain from shooting portraits of other persons and distributing such portraits over the Internet without consent, as this violates portrait rights.

#### **Trademarks**

other countries

- "FOMA", "i-mode", "i-αppli", "i-motion", "Deco-mail", "Chara-den", "ToruCa", "WORLD CALL", "DCMX", "i-area", "WORLD WING", "OFFICEED", "2in1", "docomo STYLE series", and the logos of "i-mode", "i-αppli", and "Music&Video Channel" are trademarks or registered trademarks of NTT DOCOMO, INC.
- . "Catch Phone (Call waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- McAfee® is registered trademarks or trademarks of McAfee, Inc. and/ or its affiliates in the US and/or other countries.
- Rovi, G-GUIDE, G-GUIDE MOBILE and G-Guide related logos are trademarks or registered trademarks of Rovi
- Corporation and/or its subsidiaries in Japan. · QuickTime is a registered trademark of Apple Inc., in the US and
- · Microsoft®, Windows®, Windows Media® and Windows Vista® are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

- Powered by JBlend™ Copyright 2002-2011 Aplix Corporation. All rights reserved.
- JBlend and JBlend-related trademarks are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

**I**Blend

Miggs

ACŒESS™

- 5 is a registered trademark of FeliCa Networks, Inc.
- microSDHC Logo is a trademark of SD-3C, LLC.
- · "Multitask" is a registered trademark of NEC Corporation.
- . "AXIS Font" is a trademark of AXIS Inc., and the "AXIS" font is a font developed by Type Project Inc.
- . This product contains NetFront Browser, NetFront Document Viewer and NetFront Sync Client of ACCESS CO., LTD.

**NetFront** ACCESS, the ACCESS logo, and NetFront are registered trademarks or trademarks of ACCESS CO., LTD, in the United States, Japan and/or other countries.

- Copyright @ 2011 ACCESS CO., LTD, All rights reserved. QR code is a registered trademark of Denso Wave Inc.
- "VIERA®" is a registered trademark of Panasonic Corporation.
- · Google and Google Map for Mobile are trademarks of Google Inc.
- Powered by Mascot Capsule®/Micro3D Edition™
- Mascot Capsule® is a trademark of HI CORPORATION.
- . "Blu-ray Disc" and "Blu-ray" are trademarks of the Blu-ray Disc Association
- . SWAROVSKI® is a registered trademark.
- . Other company names and product names described in the text are trademarks or registered trademarks of those companies.



#### Others

- This software is based in part on the work of the Independent JPEG Group.
- This product contains IrFront of ACCESS CO., LTD. IrFront is a registered trademark or trademark of ACCESS CO., LTD. in the United States, Japan and/or other countries.
- The IrDA® Feature Trademark is owned by the Infrared Data Association and used under license therefrom.
- Contains Adobe<sup>®</sup> Flash<sup>®</sup> Player, Adobe<sup>®</sup> Flash<sup>®</sup> Lite<sup>®</sup> and Adobe Reader<sup>®</sup> Mobile technology by Adobe Systems Incorporated.



Adobe Flash Player Copyright © 1996-2011 Adobe Systems Incorporated. All rights reserved.

Adobe Flash Lite Copyright © 2003-2011 Adobe Systems Incorporated. All rights reserved.

Adobe Reader Mobile Copyright © 1993-2011 Adobe Systems Incorporated. All rights reserved.

Adobe, Adobe Reader, Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

- FeliCa is a contactless IC card technology developed by Sony Corporation.
- FeliCa is a registered trademark of Sony Corporation.
- This product contains software licensed complying with GNU General Public License (GPL), GNU Lesser General Public License (LGPL), etc. For more details, see "GPL/LGPLライセンス説明" in " § mode" of "My document" under "Data box" from the Main Menu.
- (The first part of "GPL/LGPLライセンス説明" is only available in Japanese.)
- iWnn of OMRON SOFTWARE Co., Ltd. is used for conversion methods for Japanese language.
- iWnn © OMRON SOFTWARE Co., Ltd. 2008-2011 All Rights Reserved.
- "Text Profiler" is trademark of OMRON Corporation.
- MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

- This product is licensed under the MPEG-4 patent portfolio license, AVC patent portfolio license and VC-1 patent portfolio license for the personal use of a consumer or other uses in which it does not receive remuneration to
- (i) encode video in compliance with the MPEG-4 Visual Standard, AVC Standard and VC-1 Standard ("MPEG-4/AVC/VC-1 Video") and/or
- (ii)decode MPEG-4/AVC/VC-1 Video that was encoded by a consumer engaged in a personal activity and/or was obtained from a video provider licensed to provide MPEG-4/AVC/VC-1 Video.

No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C. See http://www.mpegla.com.

- This product is manufactured or sold under license from InterDigital Technology Corporation.
- The abbreviations of operating systems (Japanese versions) below are used in this manual.

Windows 7 stands for Microsoft® Windows® 7 (Starter, Home Basic, Home Premium, Professional, Enterprise and Ultimate).

Windows Vista stands for Windows Vista® (Home Basic, Home Premium, Business, Enterprise and Ultimate).

Windows XP indicates the Microsoft<sup>®</sup> Windows<sup>®</sup> XP Professional operating system or Microsoft<sup>®</sup> Windows<sup>®</sup> XP Home Edition operating system.

- This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.
- This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

- . Content providers are using the digital rights management technology for Windows Media contained in this device ("WM-DRM") to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM Software to play Secure Content ("WM-DRM Software"). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content ("Secure Content Owners") may request that Microsoft revoke the WM-DRM Software's right to acquire new licenses to copy, display and/or play Secure Content, Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of Revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation lists onto your device on behalf of Secure Content Owners.
- The HMM-Based Speech Synthesis Engine embedded in this product uses the Simplified BSD License.

The HMM-Based Speech Synthesis System (HTS) hts\_engine API developed by HTS Working Group http://hts-engine.sourceforge.net/

-----

### Copyright ©

2001-2010 Nagoya Institute of Technology, Department of Computer Science

2001-2008 Tokyo Institute of Technology, Interdisciplinary Graduate School of Science and Engineering

#### All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

 Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the HTS working group nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

# **Index** AC adapter......26 After-sales service......97 Alarm......87 Antenna......5 Area mail ......63 AUTO-GPS......72 Auto-key lock......49 Auto shutter......75 Auto-sort .......62 Back cover......4 Backlight......43 Bar code reader......88 Battery level ......29 Battery pack Attaching/removing.....24 Charging ......25 Bookmark ......68 Calendar......87 Call/charging indicator.....4 Caller ID notification.....28 Call forwarding service.....56 Call rejection setting......50 Call waiting service ......56

Camera......4. 73

Channel setting		
Character entry		
Line feed		
Pictograms		
Smiley	39	
Symbols		
Character size		
Charging		
Charging terminal		
Check mail/message6		
Closed lock setting4		
Command navigation key		
Connector terminal		
Connector terminal cover		
Continuous shooting		
Control key		
Copyrights		
Customize menu	3	
<b>D</b>		
D		
Deco-mail		
Decome-Anime6		
Desktop holder2		
Desktop icon3		
Dial lock		
Display		
Display lock		
DOCOMO connection manager		
Draining water	22	

E	
Early warning "Area Mail"	
Earpiece	
Earpiece volume	53
eco mode	45
eco mode autostart	
eco mode setting	
ECO NAVI	,
Emergency call	
English display	
Export administration regulations	113
F	
-	
FeliCa4, 8 Osaifu-Keitai4	
FeliCa4, 8	85
FeliCa	85 73
FeliCa	85 73 4
FeliCa	85 73 4 5
FeliCa	85 73 4 5
FeliCa	85 4 5 67
FeliCa	85 4 5 67
FeliCa	85 4 5 67 103
FeliCa	85 4 5 67 70

Н	K	MUSIC player81
Handwriting photo/memo89	Keypad lock49	MUSIC player display81
Holding5	**	Music&Video channel80
Home menu3		N
	Koe-no-takuhaibin52	Navi71
i-αppli82	L	Navigation displays31
IC card lock48	Light sensor4	Network security code47
iC communication93	List of materials used15	Network services55
i-Channel69	Location information70	Normal menu37
i-concier86		Normal style6
Illumination setting4	M	Notification icon30
i-mode66	Machi-chara setting44	Numeric keys4
i-mode fault diagnosis site98	Mail59	0
i-mode mail59		
Compose59	Main specifications109	Omakase lock
Forward6	Making a call51	Options102
Receive6	Making a videophone call51	Original42
Reply6	Manner mode42	Original lock49
Send59		Osaifu-Keitai85
i-mode password47	Map/GPS70	Out-of-service-area indication29
i-motion84		Overseas use58
Infrared communication93		Own number28
Infrared data port5, 93	microSD card90	P
Initialize50		Part names and functions4
Initial setting27	Copy92	PC connection94
Inner cover2		Pedometer
Intellectual property right114		
International call52		Phonebook64
International roaming58		Add to phonebook64
i-Widget82		Delete data
		Edit phonebook65

Search phonebook51	Schedule87	Touch panel4, 34
Picture album74	Screen memo68	Touch panel adjustment36
Picture jump74	Security codes46	Touch pen34
PIN1 code47	Security scan function	Touch shutter74
PIN1 code entry set48	(Scanning function)101	Trademarks114
PIN2 code47	Select language28	Troubleshooting95
PIN unblocking key (PUK)48	Select ring tone41	TV timer79
Playing moving picture74, 84	Shooting moving pictures74	U
Portrait rights114	Shooting still images74	U
Position location71	Simple menu32	UIM25
Power on/off27	Site access66	Unoperated lock setting49
Power saver mode43	Slide lever35	Update (Pattern data)101
Profile28	SMS63	V
Public mode (Drive mode)54	Compose63	V
		Vibrator cotting 41
Public mode (Power off)54	Receive64	Vibrator setting41
` ,	Receive64 Software update99	Video79
Q		Video79 Video recording78
` ,	Software update99	Video         79           Video recording         78           View blind         43
<b>Q</b> QR code88	Software update99           Speaker5	Video         79           Video recording         78           View blind         43           Viewer display         78
Q QR code88 R	Software update         99           Speaker         5           Specific absorption rate         111	Video       79         Video recording       78         View blind       43         Viewer display       78         Viewer style       6
Q QR code88  R Radio waves reception level29	Software update       99         Speaker       5         Specific absorption rate       111         Stand-by display       32, 42	Video       79         Video recording       78         View blind       43         Viewer display       78         Viewer style       6         Viewing still images       74
Q  QR code88  R  Radio waves reception level29  Received calls52	Software update       99         Speaker       5         Specific absorption rate       111         Stand-by display       32, 42         Stand-by display (Viewer style)       37	Video       79         Video recording       78         View blind       43         Viewer display       78         Viewer style       6
Q	Software update       .99         Speaker       .5         Specific absorption rate       .11         Stand-by display       .32, 42         Stand-by display (Viewer style)       .37         Start by voice       .38	Video         79           Video recording         78           View blind         43           Viewer display         78           Viewer style         6           Viewing still images         74           Voice mail service         56
Q  QR code88  R  Radio waves reception level29  Received calls52	Software update       .99         Speaker       .5         Specific absorption rate       .111         Stand-by display       .32, 42         Stand-by display (Viewer style)       .37         Start by voice       .38         Status icon       .29	Video         79           Video recording         78           View blind         43           Viewer display         78           Viewer style         6           Viewing still images         74           Voice mail service         56
Q	Software update       99         Speaker       5         Specific absorption rate       111         Stand-by display       32, 42         Stand-by display (Viewer style)       37         Start by voice       38         Status icon       29         Strap hole       5	Video         79           Video recording         78           View blind         43           Viewer display         78           Viewer style         6           Viewing still images         74           Voice mail service         56           W           Warranty         97
QR code	Software update       99         Speaker       5         Specific absorption rate       111         Stand-by display       32, 42         Stand-by display (Viewer style)       37         Start by voice       38         Status icon       29         Strap hole       5         Styles       6	Video         79           Video recording         78           View blind         43           Viewer display         78           Viewer style         6           Viewing still images         74           Voice mail service         56           W           Warranty         97           Waterproof performance         19
Q QR code	Software update       99         Speaker       5         Specific absorption rate       111         Stand-by display       32, 42         Stand-by display (Viewer style)       37         Start by voice       38         Status icon       29         Strap hole       5         Styles       6	Video         79           Video recording         78           View blind         43           Viewer display         78           Viewer style         6           Viewing still images         74           Voice mail service         56           W           Warranty         97           Waterproof performance         19           WORLD CALL         52
Q QR code	Software update       99         Speaker       5         Specific absorption rate       111         Stand-by display       32, 42         Stand-by display (Viewer style)       37         Start by voice       38         Status icon       29         Strap hole       5         Styles       6	Video         79           Video recording         78           View blind         43           Viewer display         78           Viewer style         6           Viewing still images         74           Voice mail service         56           W           Warranty         97           Waterproof performance         19
Q QR code	Software update       99         Speaker       .5         Specific absorption rate       111         Stand-by display       32, 42         Stand-by display (Viewer style)       37         Start by voice       38         Status icon       29         Strap hole       .5         Styles       .6         Submenu       32	Video         79           Video recording         78           View blind         43           Viewer display         78           Viewer style         6           Viewing still images         74           Voice mail service         56           W           Warranty         97           Waterproof performance         19           WORLD CALL         52           WORLD WING         58
Q QR code	Software update       99         Speaker       .5         Specific absorption rate       111         Stand-by display       32, 42         Stand-by display (Viewer style)       .37         Start by voice       .38         Status icon       .29         Strap hole       .5         Styles       .6         Submenu       .32         T         Terminal security code       .47	Video         79           Video recording         78           View blind         43           Viewer display         78           Viewer style         6           Viewing still images         74           Voice mail service         56           W         Warranty           Waterproof performance         19           WORLD CALL         52           WORLD WING         58           Numerics
Q QR code	Software update       99         Speaker       5         Specific absorption rate       111         Stand-by display       32, 42         Stand-by display (Viewer style)       37         Start by voice       38         Status icon       29         Strap hole       5         Styles       6         Submenu       32         T         Terminal security code       47         Timer recording       79	Video         79           Video recording         78           View blind         43           Viewer display         78           Viewer style         6           Viewing still images         74           Voice mail service         56           W           Warranty         97           Waterproof performance         19           WORLD CALL         52           WORLD WING         58

Access the following for checking or changing the contents of your contract, or for applying to respective services, and asking for related documents:

From i-mode

i Menu ▶ お客様サポート (User support) ▶ お申込・お手続き (Applications/Procedures) ▶ 各種お申込・お手続き (Respective applications/procedures)

From PC

My docomo (http://www.mydocomo.com/) > 各種お申込・お手続き

- "お客様サポート (User support)" and My docomo are available in Japanese only.
- · You will need your "Network Security Code" for the access from i-mode. · No packet communication charges are incurred for the access from
- i-mode. Accessing from overseas will incur charges. • You will need your "docomo ID/password" for the access from a PC.
- · If you do not have or you have forgotten your "Network Security Code" or "docomo ID/password", contact "General Inquiries" listed on the back page of this manual.

Packet communication charges free

- . You may not be able to access the site depending on the details of your subscription.
- · You may not be able to access the site due to system maintenance, etc.



## Using mobile phone with your manners!

When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you.

#### In the following cases, be certain to turn off the power.

#### Where use is prohibited

• Be sure to turn off the power of your mobile phone in airplanes, in hospitals and around priority seat in a train, etc.

### In the following cases, be certain to set Public mode.

#### ■While driving

- Using the mobile phone in your hand while driving is subject to punishment. This does not apply in unavoidable circumstances when, for instance, responding to someone who is sick, injured or when maintaining public order.
- When in theaters, movie theaters, museums, and similar venues

#### Respect the privacy.

Please be considerate of the privacy of individuals around you when shooting and sending photos using camera-equipped mobile phones.



## An Environment Protection Program by DOCOMO

#### Simplified Version of the Manual

We have edited the traditional instruction manual to simplify the descriptions of basic operational procedures for respective functions. As a result, we have succeeded to reduce the consumption of paper used

For the functions frequently used and more detailed descriptions, you can refer to "使いかたガイド (Guide)" (in Japanese only) that comes with the FOMA terminal and the DOCOMO website.

#### Collection and Recycling of Mobile Phones



To carry out the protection of environment and the reuse of precious resources, we at mobile phone and PHS carriers collect your disused mobile phones. batteries, or chargers for recycling to a shop having

this mark, regardless of brand names or makers. Kindly take your disused ones to a docomo Shop nearby.

#### Loss or theft of FOMA terminal or payment of cumulative cost overseas <docomo Information Center>

(available 24 hours a day)

#### From DOCOMO mobile phones

International call access code for the country you stay at

-81-3-6832-6600\* (toll free)

\*You are charged a call fee to Japan when calling from a land-line phone, etc.

If you use P-04C, you should dial the number +81-3-6832-6600 (to enter "+", press and hold the "0" key for at least one second).

#### From land-line phones

<Universal number>

Universal number international prefix

-8000120-0151\*

\*You might be charged a domestic call fee according to the call rate for the country you stay at

 For international call access codes for major countries and universal number. international prefix, refer to the DOCOMO International Services website.

#### Failures encountered overseas <Network Support and Operation Center>

(available 24 hours a day)

#### From DOCOMO mobile phones

for the country you stay at

International call access code -81-3-6718-1414\* (toll free)

\*You are charged a call fee to Japan when calling from a land-line phone, etc. If you use P-04C, you should dial the number +81-3-6718-1414

(to enter "+", press and hold the "0" key for at least one second).

#### From land-line phones <Universal number>

Universal number

international prefix

-8005931-8600\*

\*You might be charged a domestic call fee according to the call rate for the country you stay at.

 For international call access codes for major countries and universal number. international prefix, refer to the DOCOMO International Services website.

- If you lose your FOMA terminal or have it stolen, immediately take the steps necessary for suspending the use of the FOMA terminal.
- If the FOMA terminal you purchased is damaged, bring your FOMA terminal to a repair counter specified by DOCOMO after returning to Japan.

# General Inquiries <docomo Information Center>

## 00 0120-005-250 (toll free)

\* Service available in English, Portuguese, Chinese, Spanish, and Korean,

\* Unavailable from part of IP phones. (Business hours: 9:00 a.m. to 8:00 p.m.)

■ From DOCOMO mobile phones ■ From land-line phones

(In Japanese only)

(In Japanese only)

(No prefix) 151 (toll free)

\* Unavailable from land-line phones, etc.

\* Unavailable from part of IP phones.

(Business hours: 9:00 a.m. to 8:00 p.m. (open all year round))

Please confirm the phone number before you dial.

• For Applications or Repairs and After-Sales Service, please contact the above-mentioned information center or the docomo Shop etc. near you on the NTT DOCOMO website or the i-mode site.

(In Japanese only)

(No prefix) 113 (toll free)

(Business hours: 24 hours (open all year round))

\* Unavailable from land-line phones, etc.

NTT DOCOMO website http://www.nttdocomo.co.jp/english/

i-mode site i Menu ▶ お客様サポート (User support) ▶ ドコモショップ (docomo Shop) (In Japanese only)



## Don't forget your mobile phone ... or your manners!

When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you.

Sales: NTT DOCOMO, INC.

Manufacturer: Panasonic Mobile Communications Co., Ltd.

Repairs

(In Japanese only)

0120-800-000 (toll free)

\* Unavailable from part of IP phones.

From DOCOMO mobile phones From land-line phones



To prevent damage to the environment, bring used battery packs to a docomo service counter, a docomo agent or a recycle center.

June '11 (Edition 1.1) 3TR100366AAA F0511-1

# **P-04C**

# **Manual for PC Connection**

Data Communication Available from FOMA Terminal	1
Before Using Data Communication	2
Setup Flow for Data Transfer (OBEX™ Communication)	4
Setup Flow for Data Communication	4
Installing FOMA Communication Configuration File (Driver)	6
DOCOMO Connection Manager	10
Before Installing DOCOMO Connection Manager	11
Installing DOCOMO Connection Manager	12
Starting DOCOMO Connection Manager	14
Setting Dial-up Network	15
Making Dial-up Connection	29
AT Command	33
AT Command List	34

## About Manual for PC Connection

This manual gives you the explanations of details required for having data communication with your P-04C, and installing "FOMA communication configuration file"/"DOCOMO Connection Manager" on your personal computer assuming that you are using the one that comes with Windows 7.

Some procedures and displays may differ depending on your operating environment.

# **Data Communication Available from FOMA Terminal**


The data communication services you can use by connecting the FOMA terminal to a personal computer are classified as data transfer (OBEX<sup>™</sup> communication), packet communication, and 64K data communication. The FOMA terminal is equipped with the adapter function for packet communication.

- To perform the packet communication overseas, perform it via the IP connection. (You cannot perform the packet communication via the PPP connection.)
- •64K data communication is not available overseas.

# Data Transfer (OBEX™ Communication)

You can exchange data files such as images, melody files, Phonebook entries and mail messages with another FOMA terminal or a personal computer.

• The data files you can exchange vary depending on the transfer methods. For details, confirm each transfer method.

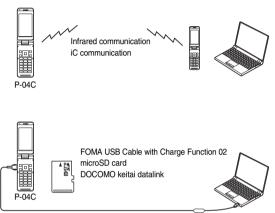

# **Packet Communication**

This communication system requires a communication fee according to the amount of data you sent and received. (Best effort system with 7.2 Mbps of maximum download speed and 2.0 Mbps of maximum upload speed) It uses an access point which supports FOMA packet communication such as DOCOMO Internet access service "mopera U".

Packet communication is available by configuring various settings after connecting the FOMA terminal to a personal computer via the FOMA USB Cable with Charge Function 02 (option), and is suitable for using applications which require the high-speed communication.

To carry out the settings and connection, see page 4 and after.

- The maximum speed is based on the technical specification. The actual communication speed varies depending on the network congestion state and the communication environment. The communication speed might be lowered when you connect the FOMA terminal to an access point which does not support HIGH-SPEED or the terminal is outside the FOMA High-Speed Area, or when you use the device which does not support High-Speed such as DOCOMO's PDA "sigmarion II".
- •The packet communication is charged according to the amount of data you sent and received. Note that you are charged a high communication fee for the massive data communication such as browsing Internet websites having many images or downloading data files.

## 64K Data Communication

This communication system requires a communication fee according to the duration of connection. By connecting the FOMA terminal to a personal computer via the FOMA USB Cable with Charge Function 02 (option), you can execute communication.

It uses an access point which supports FOMA 64K data communication such as DOCOMO Internet access service "mopera U", or an ISDN-synchronous 64K access point. To carry out the settings and connection, see page 4 and after.

•The 64K data communication is charged according to the duration of connection. Note that a communication fee becomes expensive if you use this service for a long time.

#### Information

- The FOMA terminal does not support Remote Wakeup.
- The FOMA terminal does not support the FAX communication.
- •You can perform data communications by connecting the FOMA terminal with DOCOMO's PDA "sigmarion II".

# **Before Using Data Communication**

# Charge of Internet service provider

To use the Internet, you need to pay the charge for the Internet service provider you use. Besides the FOMA service fee, you need to directly pay this charge to the Internet service provider. For details on the charge, contact the Internet service provider you use.

You can use the DOCOMO Internet access service, "mopera U". To use "mopera U", subscription (charged) is required.

## Setting access point (Internet service provider, etc.)

The access points for the packet communication and 64K data communication differ. To use the packet communication, connect to an access point which supports packet communication. To use the 64K data communication, connect to an access point which supports FOMA 64K data communication or ISDN-synchronous 64K.

- You cannot connect to the DoPa access point.
- For the service contents and connection method of "mopera", refer to the "mopera" website (in Japanese only): http://www.mopera.net/mopera/index.html

## About user authentication for accessing network

User authentication (ID and password) may be required at connection to some access points. In that case, enter your ID and password on the communication software (dial-up network). ID and password are specified by the Internet service provider or network administrator of the access point. For details, contact the provider or network administrator.

## About access authentication for using browser

To use the FirstPass supporting site from a browser on your personal computer, you need to have FirstPass (user certificate) for access to authentication. Download the FirstPass PC software from the DOCOMO website, and then install it and establish the settings on your personal computer. For details, refer to the DOCOMO website.

## Conditions of packet communication and 64K data communication

To carry out the communication using the FOMA terminal in Japan, the following conditions are required:

- · The personal computer to be used can use the FOMA USB Cable with Charge Function 02 (option).
- The PDA to be used should support FOMA packet communication and 64K data communication.
- · Within the FOMA service area
- · For packet communication, the access point should support packet communication of the FOMA.
- · For 64K data communication, the access point should support the FOMA 64K data communication or ISDN-synchronous 64K.

Even when these conditions are satisfied, if the base station is congested or the radio wave conditions are bad, you may not carry out the communication.

# **Operating Environment**

For the data communication, the following operating environment is required for your personal computer:

Item	Necessary Environment
PC main unit	PC/AT compatible model When using the FOMA USB Cable with Charge Function 02 (option): USB port (Universal Serial Bus Specification Rev1.1/2.0 compliant) Display resolution 800 x 600 dots, high color 16 bits or more recommended.  • For DOCOMO Connection Manager, display resolution 1024 x 600 dots or more (1024 x 768 dots or more recommended)
OS	Windows 7 32-bit version/64-bit version (Japanese version) Windows Vista 32-bit version/64-bit version (Japanese version) Windows XP (Japanese version)
Memory requirements	Windows 7 32-bit version: 1 Gbyte or more Windows 7 64-bit version: 2 Gbytes or more Windows Vista: 512 Mbytes or more Windows XP: 128 Mbytes or more (Japanese version in each)
Hard disk space size	Unused memory space of 5 Mbytes or more  •Unused memory space of 10 Mbytes or more for DOCOMO Connection Manager

<sup>•</sup> The following operating environment is required for DOCOMO Connection Manager:

Web-browsing software: Internet Explorer 6.0 or later

E-mail software: Windows Mail or Outlook Express 6.0

- For the latest information about the operating environment, refer to the DOCOMO website.
- The operation in the added/changed operating environment and on the upgraded OS is not guaranteed.
- •The memory requirements and hard disk space size may vary depending on the system environment.

# **Necessary Devices**

The following hardware and software are required besides the FOMA terminal and personal computer:

- · FOMA USB Cable with Charge Function 02 (option) or FOMA USB Cable (option)
- · "FOMA communication configuration file" (driver)\*

\*Download the FOMA communication configuration file from the DOCOMO website.

#### Information

- Use a dedicated FOMA USB Cable with Charge Function 02 or FOMA USB Cable. The USB cable for personal computers cannot be
  used because the shape of the connector differs.
- If you use a USB hub, the devices may not work correctly.

# Setup Flow for Data Transfer (OBEX™ Communication)


When you use the FOMA USB Cable with Charge Function 02 (option), install the FOMA communication configuration file.

Install the "FOMA communication configuration file" (driver). (See page 6)

Download the FOMA communication configuration file from the DOCOMO website and install.

Data transfer


# **Setup Flow for Data Communication**

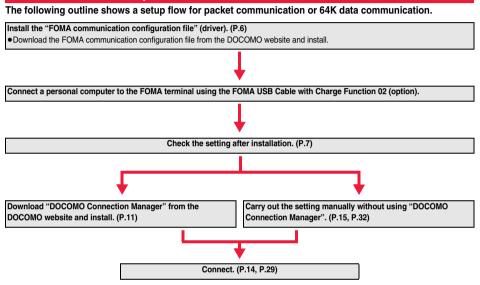

# **Connecting PC and the FOMA Terminal**

The following steps explain how to connect the FOMA USB Cable with Charge Function 02 (option).

1 Check the direction of the connector terminal of the FOMA terminal, then straight insert the external connector of the FOMA USB Cable with Charge Function 02 until it clicks.

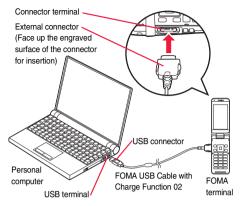

2 Connect the USB connector of the FOMA USB Cable with Charge Function 02 to the USB terminal of the personal computer.


#### Information

- Set "USB mode" to "Communication mode" for data communication.

  Operate "Mean Setting External connection USB mode Communication mode".
- Do not forcibly insert the FOMA USB Cable with Charge Function 02. Malfunction may result. Insert each connector in the correct direction at the correct angle; otherwise, you will fail connection. When the direction and angle are correct, you can insert a connector smoothly without the strong force. If you fail to insert a connector, check its shape and direction once more without inserting a connector forcibly.
- •Use a dedicated FOMA USB Cable with Charge Function 02. (The USB cable for personal computers cannot be used because the shape of the connector differs.)
- Symbol " 🐧" appears on the FOMA terminal when the FOMA terminal recognizes the connection with the personal computer after you install the FOMA communication configuration file (driver) for packet communication or 64K data communication. Before you install the FOMA communication configuration file (driver), the FOMA terminal does not recognize the connection with the personal computer, and symbol " 🖟" does not appear.

#### Removing

- While holding down the release buttons of the external connector of the FOMA USB Cable with Charge Function 02, straight pull out the connector.
- 2. Pull out the FOMA USB Cable with Charge Function 02 from the USB terminal of the personal computer.

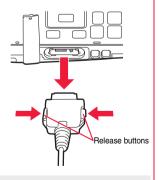

#### Information

- Do not disconnect the FOMA USB Cable with Charge Function 02 forcibly. Malfunction may result.
- Do not disconnect the FOMA USB Cable with Charge Function 02 during data communication. Erroneous operation or malfunction of the personal computer or FOMA terminal, or loss of data could result.
- Do not connect/disconnect the FOMA USB Cable with Charge Function 02 in succession. Once you connect the cable, wait for a while, then disconnect it and vice versa.

# Installing FOMA Communication Configuration File (Driver)

Installing the FOMA communication configuration file (driver) is required when you connect the FOMA terminal to your personal computer via the FOMA USB Cable with Charge Function 02 (option) for the first time

- Operate as the user who has the PC administrator right.
- End all the programs resident on your personal computer before installing the FOMA communication configuration file (driver).
- 1 Download the FOMA communication configuration file (driver) from the DOCOMO website.
- Double-click "exe" file of the downloaded FOMA communication configuration file (driver) to execute. Decompress it into the desired folder.
- 3 Double-click "P04C\_ins.exe" in the decompressed folder, and click "はい (Yes)".
  - ●For Windows Vista, click "続行 (Continue)" instead of "はい (Yes)".
  - For Windows XP, the user account control display does not appear.
- ✓ Click "OK".



Turn on the FOMA terminal's power, then connect the FOMA terminal to the personal computer using the FOMA USB Cable with Charge Function 02. (See page 5)

Installation starts.

Click "OK".

After the installation of all the "FOMA communication configuration files" (driver) is completed, a pop-up message "デバイスを使用する準備ができました。デバイス ドライバ ソフトウェアが正しくインストールされました。(The system is ready to use the device. The device driver software was installed correctly,)" appears for a few seconds from the indicator on the task bar.

# **Confirm Installed FOMA Communication Configuration File (Driver)**


Confirm that the "FOMA communication configuration file" (driver) is installed correctly.

## For Windows 7

- **1** "௵ [スタート (Start)]"
  - ▶ Open "デバイスとプリンター (Devices and printers)".
- Open "docomo STYLE series P-04C"
  - ▶ Click the "ハードウェア (Hardware)" tab.
- Confirm the installed driver names.

Confirm that all driver names are displayed.

 The COM port number varies depending on the personal computer you use.

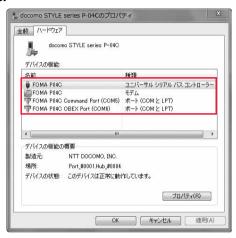

## For Windows Vista, Windows XP

1 "☑ [スタート (Start)]" ➤ Open "コントロールパネル (Control panel)" ➤ Open "システムとメンテナンス (System and maintenance)".

<For Windows XP>

"スタート (Start)"→Open "コントロールパネル (Control panel)"

→"パフォーマンスとメンテナンス (Performance and maintenance)"→Open "システム (System)".

2 Open "ハードウェアとデバイスを表示 (Show hardwares and devices)" ► Click "続行 (Continue)".

<For Windows XP>

Click the "ハードウェア (Hardware)" tab→ Click "デバイスマネージャ (Device manager)".

# Click each device, then confirm the installed FOMA communication configuration file (driver) names.

Confirm that all FOMA communication configuration file (driver) names are displayed under "ポート (COMとLPT) [Port (COM/LPT)]", "モデム (Modem)", and "ユニバーサル シリアル バス コントローラ (Universal serial bus controller)".

 The COM port number varies depending on your personal computer.



# The following drivers are installed by installation of the "FOMA communication configuration file" (driver):

Device name	FOMA communication configuration file (driver) name
ポート (COMとLPT) [Port (COM/LPT)]	FOMA P04C Command Port     FOMA P04C OBEX Port
モデム (Modem)	· FOMA P04C
⟨For Windows 7, Windows Vista⟩ ユニバーサル シリアル バス コントローラ (Universal serial bus controller) ⟨For Windows XP⟩ USB (Universal Serial Bus) コントローラ [USB (Universal Serial Bus) controller]	· FOMA P04C

# **Uninstall FOMA Communication Configuration File (Driver)**

When uninstalling the "FOMA communication configuration file" (driver) is necessary (such as when upgrading the version), perform the operation below.

. Operate as the user who has the PC administrator right.

- 1 If the FOMA terminal is connected to a personal computer via the FOMA USB Cable with Charge Function 02 (option), disconnect the FOMA USB Cable with Charge Function 02.
- 2 "[スタート (Start)]"▶Open "コントロールパネル (Control panel)" ▶Open "プログラムのアンインストール (Uninstall programs)".

<For Windows XP>

"スタート (Start)"→Open "コントロールパネル (Control panel)"→Open "プログラムの追加と削除 (Add and delete programs)".

3 Select "FOMA P04C USB" and click "アンインストールと変更 (Uninstall and change)".

<For Windows Vista>

When the user account control display appears after step 3, click "続行 (Continue)".

Select "FOMA P04C USB" and click "変更と削除 (Change and delete)".

- Click "OK".
- 「Click "はい (Yes)" to restart Windows.

The uninstallation is then completed.

• If you click "いいえ (No)", restart Windows manually.

#### Information

•If you remove the FOMA USB Cable with Charge Function 02 from the personal computer or click the "キャンセル (Cancel)" button to stop installation while installing the "FOMA communication configuration file" (driver), the "FOMA communication configuration file" (driver) may not be installed correctly. In that case, execute "P04C\_un.exe" in the folder decompressed in step 2 on page 6 to delete the "FOMA communication configuration file" (driver), and then install the files again.

# **DOCOMO Connection Manager**

"DOCOMO Connection Manager" is a convenient software program to perform flat-rate data communication and volume charging data communication. It enables you to sign up for "mopera U" and easily make PC settings according to your contract situation. It also enables you to check the estimate data traffic and usage amount with the charge counter function.



This manual explains how to install "DOCOMO Connection Manager".

To access the Internet by using a terminal, you need to contract with a Internet service provider (such as "mopera U") which supports the service and data communication.

For details, refer to the DOCOMO website.

#### ■When Using Volume Charging Data Communication (including i-mode packet flat-rate service, etc.)

Note that a communication fee might become expensive when you transfer a large amount of data such as by browsing websites having many images, or by downloading data (such as application, music/movie data, updating of OS/Anti-virus software). When you perform data communication by connecting this FOMA terminal to your personal computer via the USB cable, note that the communication is not covered by the flat-rate service of "Pake-hodai" and "Pake-hodai full".

#### ■When Using Flat-Rate Data Plan

To use the flat-rate data plan, you need to apply for a billing plan which supports flat-rate data communication and sign a contract with the Internet service provider. For details, refer to the DOCOMO website.

## ■When Using "mopera"

For details on method of connection and setting, refer to the "mopera" website (in Japanese only):

http://www.mopera.net/mopera/support/index.html

# **Before Installing DOCOMO Connection Manager**

# Installation Flow

#### STEP

Prepare the FOMA terminal and the FOMA USB Cable with Charge Function 02 (option) or the FOMA USB Cable (option).

# STEP

Check the service contents and the contract contents with Internet service provider.

#### STEP

- When a connection software program other than "DOCOMO Connection Manager" is installed, set it not to start automatically.
- See page 11 for using communication software other than "DOCOMO Connection Manager".

#### ■ About Internet Explorer Settings

Before using this software program, make the setting on the "接続 (Connection)" tab of "インターネットオプション (Internet option)" of Internet Explorer to "ダイヤルしない (Not to dial)".

- 1. Start Internet Explorer, and select "ソール (Tool)"
  - → "インターネットオプション (Internet option)".
- 2. Select the "接続 (Connection)" tab and select "ダイヤルしない (Not to dial)".
- 3. Click "OK".



## Information

#### <use of connection software other than "DOCOMO Connection Manager">

You do not simultaneously need following software programs as this software program includes the functions equivalent to them.
 Uninstall or set them not to start depending on your needs.

\*Software programs you do not need to use simultaneously

- ・mopera Uかんたんスタート (mopera U start up tool)
- ・Uかんたん接続設定ソフト (mopera U connection & setting tool)
- ・FOMA PC設定ソフト (FOMA PC configuration software) ・FOMAバイトカウンタ (FOMA byte counter)

When you use Mzone (DOCOMO public wireless LAN service) with this software program, uninstall the following public wireless LAN connection software programs.

\*You cannot use Mzone when they are simultaneously installed:

- ・U公衆無線LANユーティリティソフト (U public wireless LAN utility software)
- ・ドコモ公衆無線LANユーティリティソフト (DOCOMO public wireless LAN utility software)
- ・ドコモ公衆無線LANユーティリティプログラム (DOCOMO public wireless LAN utility program)

# **Installing DOCOMO Connection Manager**

To connect the FOMA terminal to a personal computer and perform the packet communication or 64K data communication, you need to configure various settings related to the communication.


Using "DOCOMO Connection Manager", you can easily set up dial-up, communication setup optimization, and access point name (APN).

- . Operate as the user who has the PC administrator right.
- End all the running application programs.
- End the programs resident on Windows including anti-virus software.

  (Example) Right click the icon appears on the task tray, and select "閉じる (Close)" or "終了 (Exit)"
- 1 Download "DOCOMO Connection Manager" from the DOCOMO website. http://www.nttdocomo.co.jp/support/utilization/application/service/connection manager/ (In Japanese only)
- 2 Double-click downloaded "dcm\_connect\_mng\_setup.exe" to execute, and click "はい (Yes)".
  - For Windows Vista, you click "続行 (Continue)" instead of "はい (Yes)".
  - For Windows XP, the user account control display does not appear.

When MSXML6 and Wireless LAN API are not installed on the Windows XP environment, you need to install them before installing "DOCOMO Connection Manager". When a confirmation display appears, click "Install" and install MSXML6/Wireless LAN API. When you restart Windows after installation of MSXML6/Wireless LAN API is completed, installation of "DOCOMO Connection Manager" automatically starts.

Click "次へ (Next)".

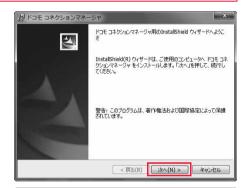


4 Confirm the display precautions and click "次へ (Next)".





- 5 Confirm the licensing contract contents. If you agree with the contents, select "使用許諾契約の条項に同意します (Agree with the licensing contract contents)" and click "次へ (Next)".
- 6 Confirm the installation destination folder, then click "次へ (Next)".

**7** Click "インストール (Install)".

Click "完了 (Finish)".

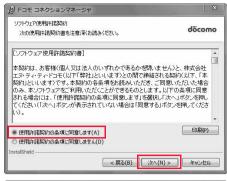

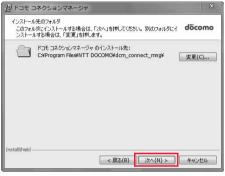

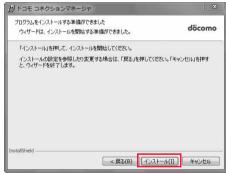



# **Starting DOCOMO Connection Manager**

- 1 "☑ [スタート (Start)]"▶"すべてのプログラム (All programs)" ▶"NTT DOCOMO"
  - ▶ "ドコモ コネクションマネージャ (DOCOMO Connection Manager)"
  - ▶ "ドコモ コネクションマネージャ (DOCOMO Connection Manager)"

"DOCOMO Connection Manager" starts.

When this is the first start-up, the setting wizard appears automatically.

Hereafter, proceed operation/settings following the instruction of software to complete the preparation to access the Internet. For details, refer to "ドコモ コネクションマネージャ操作マニュアル (DOCOMO Connection Manager operation manual)".



#### When you disconnect the communication line

You cannot disconnect the communication line only by exiting a browser software or e-mail software.

When you do not use the communication line, be sure to click "切断する (Disconnect)" to disconnect the communication line.

When you have set the auto-update for OS and others, note that you may be charged a high packet communication fee for when they are automatically updated.



# **Setting Dial-up Network**

# **Set Packet Communication**

This section explains how to set up a connection for packet communication without using "DOCOMO Connection Manager".

The packet communication uses AT commands to carry out the settings from a personal computer. To specify settings, communication software to enter AT command is required. "Hyper Terminal", which is attached to Windows as the standard software, is used here for explanation.

When using DOCOMO Internet access service "mopera U" or "mopera", you do not need to set an access point name (APN) (see page 18).

You can set "caller ID notified/not notified" (see page 21) as required. (You need to set "caller ID notified" when using "mopera U" or "mopera".)

• Windows 7 and Windows Vista do not support "Hyper Terminal". For these operating systems, use a software program which supports Windows 7 or Windows Vista for setting up the connection. (Follow the settings of the software program used.)

<Packet communication setting flow using AT commands>

Confirm the COM port number (See page 16)



Start the communication software that enables the entry of AT commands (See step 3 on page 18)



Set an access point name (APN) (See step 7 on page 19)



Set "caller ID notified/not notified" (See step 2 on page 21)



Set others (See page 33)



Exit the communication software (See step 9 on page 20)

#### ■AT commands

- •The AT commands are used to control a modem. The FOMA terminal, which conforms to the AT commands, supports some extended commands and unique AT commands.
- By entering AT commands, you can carry out detailed setting for packet communication and FOMA terminal, and confirm (display) the setting contents.
- ●If the entered AT command is not displayed, enter "ATE1 —".

# **Confirm COM Port Number**

To manually carry out the communication setting, you need to specify a COM port number, which is assigned to "FOMA P04C" (modem) embedded after you install the "FOMA communication configuration file" (driver). The confirmation method varies depending on the operating system of your personal computer.

When using DOCOMO Internet access service "mopera U" or "mopera", you do not need to set an access point name (APN);
 therefore, you do not need to confirm the modem.

## For Windows 7

- <mark>1 "[圂]</mark> [スタート (Start)]"▶Open "コントロールパネル (Control panel)".
  - ●The "表示方法 (Display method)" changes to "大きいアイコン (Large icon)" or "小さいアイコン (Small icon)" for "カテゴリ (Category)".
- 🤈 Open "電話とモデム (Phone and modem)".
- **3** If the "所在地情報 (Address information)" display appears, enter "市外局番/エリアコード (City code/Area code)", then click "OK".
- 4 Open the "モデム (Modem)" tab, confirm the COM port number in the "接続先 (Access point)" field of "FOMA P04C", then click "OK".
  - •The COM port number you confirmed is used to set an access point name (APN) (see page 18).
  - The contents on the property display and COM port number vary depending on your personal computer.



# **For Windows Vista**

- **1** "🛐 [スタート (Start)]"▶Open "コントロールパネル (Control panel)".
- **2** From "ハードウェアとサウンド (Hardware and sound)" in "コントロールパネル (Control panel)", open "電話とモデムのオプション (Phone and modem options)".
- If the "所在地情報 (Address information)" display appears, enter "市外局番/エリアコード (City code/Area code)", then click "OK".

- 4 Open the "モデム (Modem)" tab, confirm the COM port number in the "接続先 (Access point)" field of "FOMA P04C". then click "OK".
  - The COM port number you confirmed is used to set an access point name (APN) (see page 18).
  - The contents on the property display and COM port number vary depending on your personal computer.



# For Windows XP

- **1** "スタート (Start)" ▶ Open "コントロールパネル (Control panel)".
- **2** From "プリンタとその他のハードウェア (Printer and the other hardware)" in "コントロールパネル (Control panel)", open "電話とモデムのオプション (Phone and modem options)".
- 3 If the "所在地情報 (Address information)" display appears, enter "市外局番/エリアコード (City code/Area code)", then click "OK".
- 4 Open the "モデム (Modem)" tab, confirm the COM port number in the "接続先 (Access point)" field of "FOMA P04C", then click "OK".
  - The COM port number you confirmed is used to set an access point name (APN) (see page 18).
  - The contents on the property display and COM port number vary depending on your personal computer.



# Set an Access Point Name (APN)

This section explains how to set an access point name (APN) for packet communication. You can register up to 10 access point names (APNs), which are managed with cid1 to cid10 (see page 20).

When using "mopera U" or "mopera", you do not need to set the access point name (APN).

The explained here is an example when you use "XXX.abc" as the access point name (APN) and use the FOMA USB Cable with Charge Function 02 (option). For the actual access point name (APN), contact your Internet service provider or network administrator.

The setting here will be the access point number for dial-up network setting (see page 22).

## For Windows XP

- 1 Connect the FOMA USB Cable with Charge Function 02 to the FOMA terminal.
- Turn the power to the FOMA terminal on, then connect the FOMA USB Cable with Charge Function 02 connected to the FOMA terminal to the personal computer.
- Start Hyper Terminal.

"スタート (Start)"→"すべてのプログラム (All programs)"→"アクセサリ (Accessories)"→"通信 (Communications)"→Open "ハイパーターミナル (Hyper Terminal)".

After starting Hyper Terminal, when the message "『既定のTeInet』プログラムにしますか? (Select the specified TeInet program?)" is displayed, set as desired. Contact the maker of your personal computer and Microsoft Corporation for the setting contents

4 Enter any name in the "名前 (Name)" field, then click "OK".

Here, "Sample" is entered as an example.



# Select a connection method.

# <When you can select the COM port number of "FOMA P04C">

Select the COM port number with which you install the "FOMA P04C" in the "接続方法 (Connection method)" field, then click "OK"

Then, go to step 6.

 Here, "COM3" is selected as an example. See page 16 for the COM port number of "FOMA P04C" you should actually select in the "接続方法 (Connection method)" field.



# <When you cannot select the COM port number of "FOMA P04C">

Click "キャンセル (Cancel)" to close the "接続の設定 (Set a connection)" display, then perform the following operations: (1)"ファイル (File)" menu→Select "プロパティ (Properties)".

- (2) Select "FOMA P04C" in the "接続方法 (Connection method)" field of the "接続の設定 (Set a connection)" tab on the "Sampleのプロパティ (Sample properties)" display.
- (3) Uncheck "国/地域番号と市外局番を使う (Use country/region code and city code)".
- (4) Click "OK".

Then, go to step 7.



# The properties of the COM port number appear on the display, then click "OK".

•This display appears when you select a COM port number in step 5.

# 7 Set an access point name (APN).

Enter an access point name (APN) in the following format:

AT+CGDCONT = cid, "PDP\_type", "APN"

cid: Enter any number from 5 through 10.

If you have already specified cid, be careful that its contents are overwritten by the access point name you enter here.

"PDP\_type": Enter "PPP" or "IP".

"The contents are overwritten by the access point name you enter here.

"PDP\_type": Enter "PPP" or "IP".

"The contents are overwritten by the access point name you enter here.

"PDP\_type": Enter "PPP" or "IP".

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"PDP\_type": Enter "PPP" or "IP".

"The contents are overwritten by the access point name you enter here.

"PDP\_type": Enter "PPP" or "IP".

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here."

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here."

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here."

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here."

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here."

"The contents are overwritten by the access point name you enter here.

"The contents are overwritten by the access point name you enter here.

"The contents are

"APN": Enclose an access point name (APN) in double quotation marks (").

(Example:When specifying APN "XXX.abc" in cid5)

AT+CGDCONT=5,"PPP","XXX.abc"

Enter this character string, then press . If "OK" appears, the APN setting is completed.

•To confirm the current APN setting, enter "AT+CGDCONT?



# Confirm that "OK" appears on the display.



# 9 "ファイル (File)" menu▶Select "ハイパーターミナルの終了 (Exit Hyper Terminal)" to exit Hyper Terminal.

- ●If the message "現在、接続されています。 切断してもよろしいですか? (Currently connected. Do you want to disconnect this line?") appears, select "はい (Yes)".
- ●The message "セッションXXXを保存しますか? (Do you want to save session XXX?)" then appears. You do not need to especially save that session.

#### Information

- •The access point name (APN) is information to be registered in the FOMA terminal, so if you connect another FOMA terminal, you need to register the access point name (APN) again.
- •To continue using the access point name (APN) of the personal computer, register the same access point name (APN) for the same cid number in the FOMA terminal.
- ●If the entered AT command is not displayed, enter "ATE1 —".

#### **■cid** (Registration number)

The FOMA terminal has registration numbers cid1 through cid10. cid1 contains "mopera.ne.jp", cid2 and cid3 contain "mopera.net", and cid4 contains "mpr.ex-pkt.net" as the default access point names (APN). To connect to a provider other than "mopera U" or "mopera", the access point name (APN) must be set to the number from cid5 to cid10 specified by the provider or network administrator.

#### Default cid contents

Registration No. (cid)	Access point name (APN)
1	mopera.ne.jp (PPP)
2	mopera.net (PPP)
3	mopera.net (IP)
4	mpr.ex-pkt.net (PPP)
5 to 10	Not set

#### "Phone number" for connecting to an access point name (APN) you register in cid

"\*99\*\*\*cid No.>#"

(Example) When connecting to the access point name (APN) you register in cid5, enter the following: \*99\*\*\*5#

### ■Resetting/Confirming the access point name (APN) settings

You can use AT commands to reset/confirm the access point name (APN) settings.

#### Resetting access point name (APN)

The access point name (APN) for cid1 returns to "mopera.ne.jp" (default), the names for cid2 and cid3 return to "mopera.net" (default), and the name for cid4 returns to "mpr.ex-pkt.net" (default). The settings for cid5 through cid10 will be reset to the unregistered status if you proceed with resetting.

(Entry method)

AT+CGDCONT= (When resetting all the cid contents)

AT+CGDCONT=<cid> (When resetting only a specific cid)

#### Confirming access point name (APN)

The currently specified access point name appears on the display.

(Entry method)

AT+CGDCONT?

# Set Caller ID Notified/Not Notified

For packet communication, you can specify whether to notify your caller ID (caller ID notified/not notified). The caller ID is your important information; so, take a great care to notify your caller ID. You can use AT commands (\*DGPIR command) to specify "caller ID notified/not notified" before dial-up connection.

- Start the communication software such as "Hyper Terminal".
  - See page 18 for details on how to operate "Hyper Terminal".
- 2 Use the \*DGPIR command (see page 35) to specify "caller ID notified/not notified".
  - To automatically add "184 (not notify)" for outgoing or incoming call, enter the following:
    - AT\*DGPIR=1 ☐
  - ●To automatically add "186 (notify)" for outgoing or incoming call, enter the following:

    AT\*DGPIR=2 □
- Confirm that "OK" appears on the display.





#### Information

- When using DOCOMO Internet access service "mopera U" or "mopera", you need to set your caller ID to be "notified".
- If the entered AT command is not displayed, enter "ATE1 "...".

#### ■ Specifying "caller ID notified/not notified" in dial-up network

Also by dial-up network setting (see page 22), you can add "186 (notify)" or "184 (not notify)" to each access point number. When you specify "186 (notify)" or "184 (not notify)" using both the \*DGPIR command and dial-up network setting, the caller ID is set as follows:

Dial-up network setting (cid = 3)	Caller ID notification setting by *DGPIR command	Notify/Not notify caller ID	
*99***3#	Not set	Notify	
	Not notify	Not notify	
	Notify	Notify	
184*99***3#	Not set	Not notify	
	Not notify	("184" specified in the dial-up network has a priority)	
	Notify		
186*99***3#	Not set	Notify	
	Not notify	("186" specified in the dial-up network has a priority)	
	Notify		

• To connect to "mopera U" or "mopera", you need to notify your caller ID.

# **Set Dial-up Network for Windows 7**

- **1** " [スタート (Start)]" ▶Open "コントロールパネル
  - (Control panel)"
  - ▶"インターネットへの接続 (Connection to Internet)"
  - ► Click "ダイヤルアップ接続 (Dial-up connection)".
  - After the access point has been set, the confirmation display appears asking whether the existing connection is to be used. In response, check "いいえ、新しい接続を作成しま す (No, I will create a new connection)", then click "次へ (Next)".



- If the display for selecting a modem appears, click "FOMA P04C".
  - •The display for selecting a modem appears only when you have registered two or more modems.
- 3 Enter an access point number in the "ダイヤルアップの電話番号 (Phone number for dial-up)" field.
  - ●When connecting to "mopera U", enter "\*99\*\*\*3#" as the access point number.
  - See page 20 for access point numbers other than "mopera  $U^{\mathtt{m}}.$



- 4 Enter the user name and password supplied from your Internet service provider or network administrator in the "ユーザー名 (User name)" and "パスワード (Password)" fields.
  - When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
- 5 Enter any name in the "接続名 (Connection name)" field. Then click "接続 (Connect)"▶Click "スキップ (Skip)".
  - •Here, "SAMPLE" is entered as an example.
  - •Only confirm the setting contents without connecting here.
- \_\_\_\_\_Click "閉じる (Close)".
- 7 "⋒ [スタート (Start)]"▶Open "コントロールパネル (Control panel)"
  - ▶ "ネットワークの状態とタスクの表示 (View network status and tasks)"
    - ▶ Click "アダプターの設定の変更 (Change the adapter settings)".

- 8 Highlight the access point which is finished with setting, and select "プロパティ (Property)" after the right click
  - ► Click the "全般 (General)" tab to confirm the setting contents.

When "ダイヤル情報を使う (Use dial information)" is checked. uncheck it.

- The COM port number allocated to "FOMA P04C" varies depending on your personal computer.
- When connecting to "mopera U", enter "\*99\*\*\*3#" as the access point number.

See page 20 for access point numbers other than "mopera U".



# Glick the "ネットワーク (Network)" tab, then carry out respective settings.

In the "この接続は次の項目を使用します (Use the following items for this connection)" field, select "インターネットプロトコル バージョン4 (TCP/IPv4) [Internet protocol version 4 (TCP/IPv4)]".

Contact your ISP (Internet service provider) or network administrator for how to set up TCP/IP to connect to a general ISP and so on.



- <mark>1</mark> Click the "オプション (Option)" tab, then click "PPP設定 (PPP settings)".
- 11 Uncheck all the items, then click "OK".




19 Return to the display in step 9, then click "OK".

# **Set Dial-up Network for Windows Vista**

- 1 "☑〗[スタート (Start)]"▶"接続先 (Access point)"▶ Click "接続または ネットワークをセットアップします (Setup the connection or network)".
- 2 Select "ダイヤルアップ接続を セットアップします (Setup the dial-up connection)", then click "次へ (Next)".



- If the display for selecting a modem appears, click "FOMA P04C".
  - •The display for selecting a modem appears only when you have registered two or more modems.
- 4 Enter an access point number in the "ダイヤルアップの電話番号 (Phone number for dial-up)" field.
  - When connecting to "mopera U", enter "\*99\*\*\*3#" as the access point number.
  - See page 20 for access point numbers other than "mopera IJ"

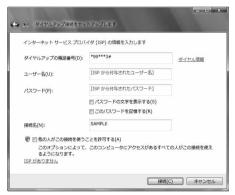

- 5 Enter the user name and password supplied from your Internet service provider or network administrator in the "ユーザー名 (User name)" and "パスワード (Password)" fields.
  - •When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
- 6 Enter any name in the "接続名 (Connection name)" field. Then click "接続 (Connect)"▶Click "スキップ (Skip)".
  - •Here, "SAMPLE" is entered as an example.
  - •Only confirm the setting contents without connecting here.
- **7** Click "接続をセットアップします (Setup the connection)"
  - ▶Click "閉じる (Close)".
- ♀ "

  ¶ [スタート (Start)]"

   "接続先 (Access point)"
  - ▶ Highlight the access point which is finished with connection, and select "プロパティ (Property)" after the right click.

# **9** Click the "全般 (General)" tab to confirm the setting contents.

When two or more modems are connected to your personal computer, confirm that "モデム (Modem) - FOMA P04C" is checked in the "接続0方法 (Connection method)" field. If it is not checked, check it. If two or more modems are checked, click the button to position the priority level of "モデム (Modem) - FOMA P04C" to the top or uncheck modems other than "モデム (Modem) - FOMA P04C".

When "ダイヤル情報を使う (Use dial information)" is checked, uncheck it.

- The COM port number allocated to "FOMA P04C" varies depending on your personal computer.
- When connecting to "mopera U", enter "\*99\*\*\*3#" as the access point number.

See page 20 for access point numbers other than "mopera  $\mbox{\it U"}.$ 

# 10 Click the "ネットワーク (Network)" tab, then carry out respective settings.

In the "この接続は次の項目を使用します (Use the following items for this connection)" field, select "インターネットプロトコル バージョン4 (TCP/IPv4) [Internet protocol version 4 (TCP/IPv4)]".

You can set the "QoS パケットスケジューラ (QoS packet scheduler)" if necessary.

Contact your ISP (Internet service provider) or network administrator for how to set up TCP/IP to connect to a general ISP and so on.





- <mark>11</mark> Click the "オプション (Option)" tab, then click "PPP設定 (PPP settings)".
- 12 Uncheck all the items, then click "OK".



13 Return to the display in step 10, then click "OK".

# **Set Dial-up Network for Windows XP**

- **1** "スタート (Start)"▶"すべてのプログラム (All programs)"
  - ▶"アクセサリ (Accessories)"▶"通信 (Communications)"
    - ▶Open "新しい接続ウィザード (New connection wizard)".
- 2 When the "新しい接続ウィザード (New connection wizard)" display appears, click "次へ (Next)".



- 3 Select "インターネットに接続する (Connect to the Internet)", then click "次へ (Next)".
- 4 Select "接続を手動でセットアップする (Manually set up the connection)", then click "次へ (Next)".
- 5 Select "ダイヤルアップモデムを使用して接続する (Use a dial-up modem for connection)", then click "次へ (Next)".
- 6 If the "デバイスの選択 (Select a device)" display appears, check "FOMA P04C" only, then click "次へ (Next)".
  - ●The "デバイスの選択 (Select a device)" display appears only when you have registered two or more modems.




- 7 Enter any name in the "ISP 名 (ISP name)" field, then click "次へ (Next)".
  - Here, "SAMPLE" is entered as an example.



- 8 Enter an access point number in the "電話番号 (Phone number)" field, then click "次へ (Next)".
  - $\bullet$  When connecting to "mopera U", enter "\*99\*\*\*3#" as the access point number.

See page 20 for access point numbers other than "mopera  $\ensuremath{\text{U}}\xspace".$ 

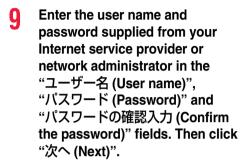





- When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
- **1** ↑ Click "完了 (Complete)".
- **11** スタート (Start)"▶"すべてのプログラム (All programs)"
  - ▶ "アクセサリ (Accessories)"▶ "通信 (Communications)"
  - ▶ Open "ネットワーク接続 (Connect to network)".
- 12 Select the dial-up icon, then select "ネットワークタスク (Network task)"
  - ▶"この接続の設定を変更する (Modify this connection setting)".

Here, click the icon of the name you entered in step 7.



# 13 Click the "全般 (General)" tab to confirm the setting contents.

When two or more modems are connected to your personal computer, confirm that "モデム (Modem) - FOMA P04C" is checked in the "接続方法 (Connection method)" field. If it is not checked, check it. If two or more modems are checked, click the  $\underline{\hspace{0.05cm}}$  button to position the priority level of "モデム (Modem) - FOMA P04C" to the top or uncheck modems other than "モデム (Modem) - FOMA P04C". When "タイヤル情報を使う (Use dial information)" is checked, uncheck it.

- The COM port number allocated to "FOMA P04C" varies depending on your personal computer.
- ●When connecting to "mopera U", enter "\*99\*\*\*3#" as the access point number.

See page 20 for access point numbers other than "mopera  $\mbox{\it U"}.$ 

# 14 Click the "ネットワーク (Network)" tab, then carry out respective settings.

In the "呼び出すダイヤルアップサーバーの種類 (Type of calling dial-up server)" field, select "PPP: Windows 95/98/NT4/2000, Internet".

In the "この接続は次の項目を使用します (Use the following items for this connection)" field, select "インターネットプロトコル (TCP/IP) [Internet protocol (TCP/IP)]".

You cannot modify the setting of the "QoS パケットスケジューラ (QoS packet scheduler)" field; so use the default setting as it is. Next, click "設定 (Setting)".

Contact your ISP (Internet service provider) or network administrator for how to set up TCP/IP to connect to a general ISP and so on.

15 Uncheck all the items, then click "OK".







16 Return to the display in step 14, then click "OK".

# **Making Dial-up Connection**

# Making Dial-up Connection for Windows 7

Perform the operation on page 5 to connect the FOMA terminal to your personal computer.

- 1 "☑ [スタート (Start)]"▶Open "コントロールパネル (Control panel)" ▶Click "インターネットへの接続 (Connection to Internet)".
- 2 Check "はい、既存の接続を選びます (Yes, I choose the existing connection)", then select the access point, and click "次へ (Next)".



- **Q** Confirm the contents and click "ダイヤル (Dial)".
  - When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
- The display appears to indicate the connecting state.

In this period, the system performs logon processing to confirm the user name and password.



- 5 After the connection is completed, click "閉じる (Close)".
  - You can start the browser software to browse websites, use e-mail and so on.



# **Making Dial-up Connection for Windows Vista**

Perform the operation on page 5 to connect the FOMA terminal to your personal computer.

- **1** "**Manual Proof**" [スタート (Start)]"▶ Open "接続先 (Access point)".
- 2 Select access point and click "接続 (Connect)".




- **Q** Confirm the contents and click "ダイヤル (Dial)".
  - •When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
- The display appears to indicate the connecting state.

In this period, the system performs logon processing to confirm the user name and password.



- 5 After the connection is completed, click "閉じる (Close)".
  - You can start the browser software to browse websites, use e-mail and so on.

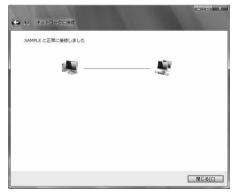

# **Making Dial-up Connection for Windows XP**

Perform the operation on page 5 to connect the FOMA terminal to your personal computer.

- **1** "スタート (Start)"▶"すべてのプログラム (All programs)"
  - ▶ "アクセサリ (Accessories)"▶ "通信 (Communications)"
    - ▶ Open "ネットワーク接続 (Network connection)".
- Open the access point to be used.
  Select the access point icon of the ISP name (see page 26)

you specified in "Set Dial-up Network", then "ネットワークタスク (Network task)"→"この接続を開始する (Start this connection)".

Otherwise, double-click the access point icon.



- **Q** Confirm the contents and click "ダイヤル (Dial)".
  - When connecting to "mopera U" or "mopera", you can leave the user name and password fields blank.
- The display appears to indicate the connecting state.

In this period, the system performs logon processing to confirm the user name and password.



i) SAMPLE に接続しました ×

速度:460.8 Kbps

The connection is completed.

After the connection is completed, the message appears from the indicator on the task bar for a few seconds.


- You can start the browser software to browse websites, use
   e-mail and so on
- If this message does not appear, confirm the setting of the access point again.

# Information

- For dial-up connection, use the FOMA terminal with the dial-up setting completed. To connect another FOMA terminal, you may need to reinstall the FOMA communication configuration file (driver).
- The power consumption of the FOMA terminal increases during communication.
- During packet communication, the communication state appears on the FOMA terminal.

" (Communicating, data sending)

"-" (Communicating, data receiving)

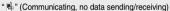

" " (Outgoing or being disconnected)

" incoming or being disconnected)

During 64K data communication, " ♥ "appears on the FOMA terminal.



1000 @ 1000

ncni

# **Disconnecting Communication Line**

Click the dial-up icon on the task tray.



2 Select the access point with which the connection is to be terminated, and click "切断 (Disconnect)".

<For Windows Vista>

Select "接続または切断 (Connect or disconnect)" and click "切断 (Disconnect)", then click "閉じる (Close)".

<For Windows XP>

Click "切断 (Disconnect)".

#### Information

- The communication line may not be disconnected just by exiting the browser software. To surely disconnect the communication line, perform this operation.
- The baud rate displayed on your personal computer may be different from the actual one.

### When you cannot connect to network

If you cannot connect to network (if you fail a dial-up connection), confirm the following items:

If this error occurs	Confirm those:
Your personal computer cannot recognize "P-04C"	Confirm whether your personal computer satisfies the operating environment (see page 3).     Confirm whether "FOMA communication configuration file" (driver) is installed in your personal computer.     Confirm whether the FOMA terminal is connected to your personal computer and powered on.     Confirm whether the FOMA USB Cable with Charge Function 02 (option) is securely connected.
You cannot connect to the access point	・Confirm whether the ID (user name) and password are correct. ・When you need to notify your caller ID such as when using "mopera U" or "mopera", make sure "184" is not prefixed to the phone number. ・Confirm that "フロー制御を使う (Use the flow control)" is checked in the modem properties. ・If you cannot connect to the access point even after confirming above, contact your Internet service provider or network administrator for the setting method, and so on.

# Set 64K Data Communication

This section explains how to set up a connection for the 64K data communication without using "DOCOMO Connection Manager".

# Setting dial-up connection and TCP/IP

The setting of dial-up connection and TCP/IP for the 64K data communication is the same as for the packet communication (see page 15).

### Take care of the following points:

- In the 64K data communication, you do not need to set an access point name (APN). For the access point of the dial-up connection, enter the phone number of the access point specified by your Internet service provider or network administrator. (To connect to "mopera U", enter "\*8701" in the phone number field, and to connect to "mopera", enter "\*9601".)
- Set "caller ID notified/not notified" and "others" as required.
- (When connecting to "mopera U" or "mopera", you need to notify your caller ID.)
- Contact your Internet service provider or network administrator for details on the setting contents.

# Connecting and Disconnecting

You can operate in the same way as for the packet communication. Perform the operations on page 14, page 29 or page 31.

# AT Command

AT commands are used to specify and modify the functions of the FOMA terminal through the personal computer.

\*The following abbreviations are used in the AT command list:

[AT]: Commands which are available at the FOMA P04C Command Port.

[M]: Commands which are available in the FOMA P04C (modem).

[&F]: Commands whose settings are initialized by the AT&F command.

[&W]: Commands whose settings are saved by the AT&W command. The set value can be recalled by the ATZ command.

#### Information

• When you make a call from an external device or make an AT command call, the call is made from Number A in A Mode or Dual Mode of 2in1, and the call is made from Number B in B Mode of 2in1.

# **Entry Format of AT Command**

To enter an AT command, use the terminal mode display of the communication software. Be sure to enter half-pitch alphanumeric characters.

Entry example



• You need to enter an AT command on one line, including a parameter (digits and symbols) which follows the command.

#### Information

•The terminal mode enables you to operate a personal computer as one communication terminal. Using this mode, you can send characters you have entered from the keyboard to a line connected to the communication port.

# Switch between Online Data Mode and Online Command Mode

There are following two methods of switching the FOMA terminal between the online data mode and online command mode:

- · Enter the "+++" command or enter the code specified in the "S2" register.
- · Set the ER signal of the RS-232C\*\* off when "AT&D1" is set.
- To switch the online command mode to the online data mode, enter "ATO "...".

\*The RS-232C signal line, which is emulated via the USB interface, is controlled by a communication application.

#### Saving the setting contents

Please be careful that the setting contents with AT commands are initialized when the FOMA terminal is turned off and on or the external device is removed, except for the access point name (APN) setting with the AT+CGDCONT command, QoS setting with the AT+CGEQMIN or AT+CGEQREQ command, incoming call acceptance/rejection setting with the AT+DGAPL, AT+DGARL, or AT+DGANSM command, phone number notification/no notification setting (for packet communication) with the AT+DGPIR command and caller ID notification restriction setting with the AT+CLIR command. For commands with [&W], you can enter "AT&W []" (after setting) to save the setting contents and other set values with [&W] at the same time. If necessary, you can restore these set values by entering in "ATZ []" even after the power is turned off and on.

# AT Command List

AT command	Outline	Parameter/Explanation	Command execution example
A/	Re-executes the last executed	_	Α/
	command. No carriage return is		OK
[M]	required.		
AT%V	Displays the version of the	-	AT%V
	FOMA terminal.		Ver1.00
[M] AT&Cn	Colored the convention and distance	a Or OD is always ON	OK ATROM
	Selects the operating conditions of the circuit CD signal sent to	n=0: CD is always ON.	AT&C1 OK
[M] [&F][&W]	the DTE.	n=1: CD varies according to the carrier of the other party's modem. (default)	OK
AT&Dn	Selects an operation to be	n=0: Ignores the ER status. (Always assumed to be	AT&D1
Madii	performed when the circuit ER	ON.)	OK
	signal received from the DTE	n=1: Sets the online command state when the ER	
	transits from ON to OFF.	changes from ON to OFF.	
[M]		n=2: Sets the offline command state when the ER	
[&F][&W]		changes from ON to OFF. (default)	
AT&En	Selects the speed display	n=0: Displays communication speed between radio	AT&E0
	specification for connection.	wave blocks.	ок
[M]		n=1: Displays DTE serial communication speed.	
[&F][&W]		(default)	
AT&Fn	Returns all registers to the	Only n=0 is specifiable. (Can be omitted)	_
	default. Performs line		
	disconnection processing if you		
(A T)(AA)	enter this command during communication.		
[AT][M] AT&Sn	Specifies the control of the data	n=0: DR is always ON. (default)	AT&S0
[M]	set ready signal to be output to	n=1: DR is set to ON at connection of the line (at	OK
[&F][&W]	the DTE.	establishment of a communication call).	OK .
AT&Wn	Stores the current set values.	Only n=0 is specifiable. (Can be omitted)	_
[M]		,	
AT*DANTE	Shows the number of antenna	0: Antenna shows the out of the service area	AT*DANTE
	bars. (0 to 3)	1: Zero antenna bars or a single antenna bar	*DANTE:3
		2: Two antenna bars	ок
		3: Three antenna bars	AT*DANTE=?
			*DANTE:(0-3)
[AT][M]			ОК
AT*DGANSM=n	Sets the reject/accept setting	n=0: Invalidates the incoming call reject/accept setting.	AT*DGANSM=0
	mode for the packet incoming	(default)	OK
	call.	n=1: Validates the incoming call reject setting	AT*DGANSM?
	The setting with this command is	(AT*DGARL).	*DGANSM:0 OK
	valid for incoming calls in packet communication after you enter	n=2: Validates the incoming call accept setting	OK
[M]	the setting command.	(AT*DGAPL).  AT*DGANSM?: Displays the current setting.	
AT∗DGAPL=n	Sets the APN of which packet		AT*DGAPL=0,1
[,cid]	incoming call is to be accepted.	accept list.	OK
[,]	To specify the APN, use the	n=1: Deletes the APN defined by <cid> from the</cid>	AT*DGAPL?
	<cid> parameter defined in</cid>	incoming call accept list.	*DGAPL:1
	AT+CGDCONT.		ок
		Applied to all the cid contents if <cid> is omitted.</cid>	AT*DGAPL=1
			ок
		AT*DGAPL?: Displays the incoming call accept list.	AT*DGAPL?
[M]			OK
AT*DGARL=n	Sets the APN of which packet	n=0: Adds the APN defined by <cid> to the incoming call</cid>	
[,cid]	incoming call is to be rejected.	reject list.	OK
	To specify the APN, use the	n=1: Deletes the APN defined by <cid> from the</cid>	AT*DGARL?
	<cid> parameter defined in</cid>	incoming call reject list.	*DGARL:1
	+CGDCONT.	Application of the state of the	OK
		Applied to all the cid contents if <cid> is omitted.</cid>	AT*DGARL=1 OK
		AT+DGARI 2: Displays the incoming call reject !	OK AT*DGARL?
[M]		AT*DGARL?: Displays the incoming call reject list.	OK
[m]			O.C.

AT command	Outline	Parameter/Explanation	Command execution
		·	example
AT*DGPIR=n	This command is valid at dialing/	, ,	AT*DGPIR=0
	receiving calls.	n=1: Adds "184" to the APN. (always not notify)	OK
	In the dial-up network setting,	n=2: Adds "186" to the APN. (always notify)	AT*DGPIR?
	you can add "186" (notify) or	AT*DGPIR?: Displays the current setting.	*DGPIR:0
	"184" (not notify) to the phone		ок
	number of the access point.		
[M]	(See page 21)		
AT*DRPW	Displays the output power index	_	AT*DRPW
	for receiving.		*DRPW:0
	(0: minimum value to 75:		ок
[AT][M]	maximum value)		
+++	Changes to the online command	_	_
	state without disconnecting the		
	line when the escape sequence		
TA AT			
[M]	is executed in the online mode.	D 4 0400 " "	17.0100
AT+CAOC	Displays the charging	Result: +CAOC:"n"	AT+CAOC
	information for now or latest call.	n: Displays the charging information in a hexadecimal	+CAOC:"00001E"
[M]		number.	OK
AT+CBC	Displays the battery level.	Result: +CBC:n,m	AT+CBC
		n=0: FOMA terminal is powered by the battery.	+CBC:0,80
		n=1: During charging	ОК
		n=2: The battery is not connected.	
		n=3: Power-supply error	
[M]		m=0~100: Battery level	
AT+CBST=n,1,0	Sets the bearer service to be	n=116: 64000 bps (bit transparent) (default)	AT+CBST=116,1,0
A 1+OD3 1=11,1,0	used.		OK
	used.	n=134: 64000 bps (multimedia)	
			AT+CBST?
[M]			+CBST:116,1,0
[&W][&F]			OK
AT+CDIP=n	Sets whether to display	n=0: Does not display "Received sub-address" when	AT+CDIP=0
	"Received sub-address" on your	you receive a call. (default)	ОК
	personal computer when you	n=1: Displays "Received sub-address" when you	AT+CDIP?
	receive a call.	receive a call.	+CDIP:0,1
		Result: +CDIP: <n>,<m></m></n>	ок
		m=0: Not signed up for Multi Number	
[M][AT]		m=1: Signed up for Multi Number	
[&F][&W]		m=2: Unknown	
AT+CEER	Displays the reason why the		AT+CEER
NITULEN	Displays the reason why the	<report> Disconnection reason list (See page 42)</report>	
r a T1ra a1	preceding call was disconnected.	Disconnection reason list (See page 42)	+CEER:36
[AT][M]			OK
AT+CGDCONT	Sets the access point name	See page 40.	See page 40.
	(APN) for when dialing for packet		
[M]	communication.		
AT+CGEQMIN	Registers the reference value to	AT+CGEQMIN=[parameter]	See page 41.
	judge whether the system	See page 41.	
	permits QoS (Quality of service)	AT+CGEQMIN=?	
	reported from the network at	Lists the settable values.	
	establishment of the packet	AT+CGEQMIN?	
[M]	communication.	Displays the current setting.	
AT+CGEQREQ	Sets QoS (Quality of service) to	AT+CGEQREQ=[parameter]	See page 41.
JULUIILU	be requested to the network at		occ page 41.
		See page 41.	
	dialing of the packet	AT+CGEQREQ=?	
	communication.	Lists the settable values.	
		AT+CGEQREQ?	
[M]		Displays the current setting.	
AT+CGMR	Displays the version of the	_	AT+CGMR
	FOMA terminal.		1234512345123456
	FOIMA terminal.		12040120401

AT command	Outline	Parameter/Explanation	Command execution
		·	example
AT+CGREG=n	Sets whether the network	n=0: Not notified. (default)	AT+CGREG=1
	registration state is notified.	n=1: Notified at switching between the inside and	OK
	Displays whether you are inside	outside of the service area.	(set to "Notified")
	or outside the service area	(Inquiry)	AT+CGREG?
	according to the returned	AT+CGREG?	+CGREG:1,0
	notification.	+CGREG: <n>,<stat></stat></n>	OK
		n: Set value	(means the outside of the service
		stat:	area)
		0: Outside packet area	
		1: Inside packet area	(when moved from the outside to
[M]		4: Unknown	the inside of the service area)
[&F][&W]		5: Inside packet area (during roaming)	+CGREG: 1
AT+CGSN	Displays the serial number of the	_	AT+CGSN
	FOMA terminal.		123456789012345
[M]			ок
AT+CLIP=n	Enables to display the other	n=0: Does not notify. (default)	AT+CLIP=0
	party's caller ID on the personal	n=1: Notifies.	ок
	computer at reception of 64K		AT+CLIP?
	data communication or	Result: +CLIP: <n>,<m></m></n>	+CLIP:0.1
	videophone calls.	m=0: NW setting not to notify caller ID at calling	OK
[AT][M]	videopriorie calis.	m=1: NW setting to notify caller ID at calling	OK .
[&F][&W]		m=2: Unknown	
AT+CLIR=n	Sets whether to notify your	n=0: Notifies (does not notify) caller ID according to	AT+CLIR=0
AT+CLIN=II	phone number to do 64K data	CLIR service.	OK
	communication or to make	n=1: Does not notify the other party of your caller ID.	AT+CLIR?
	videophone calls.	n=2: Notifies the other party of your caller ID. (default)	+CLIR:0,1
		Result: +CLIR: <n>,<m></m></n>	OK
		m=0: CLIR is not launched. (always notify)	AT+CLIR=?
		m=1: CLIR is launched. (always not notify)	+CLIR:(0-2)
		m=2: Unknown	OK
		m=3: CLIR temporary mode (not notify, default)	
[M]		m=4: CLIR temporary mode (notify, default)	
AT+CMEE=n	Sets how the FOMA terminal	n=0: Uses the ordinary ERROR result. (default)	AT+CMEE=0
	shows an error report.	n=1: +CME ERROR: Uses the <err> result code. <err></err></err>	ОК
		indicates a numeric value.	AT+CNUM
		n=2: +CME ERROR: Uses the <err> result code. <err></err></err>	ERROR
		indicates characters.	AT+CMEE=1
		AT+CMEE?: Displays the current setting.	ок
		Command execution examples on the right are for when	AT+CNUM
		the FOMA terminal or connection has abnormality.	+CME ERROR: 10
		Below listed are the +CME ERROR result codes.	AT+CMEE=2
		1: no connection to phone	OK
		10: SIM not inserted	AT+CNUM
		15: SIM wrong	+CME ERROR: SIM
ra at		16: incorrect password	not inserted
[M]			not inserted
[&F][&W]	Disaless the same above	100: unknown	AT CAULINA
AT+CNUM	Displays the own phone number	number: Phone number (In B Mode of 2in1, Number B	AT+CNUM
	of the FOMA terminal.	is displayed.)	+CNUM:,"+8190123
		type: 129 or 145	45678",145
		129: Does not include the IDD prefix code (+).	ок
		145: Includes the IDD prefix code (+).	
[AT][M]		Result: +CNUM:, <number>,<type></type></number>	

AT command	Outline	Parameter/Explanation	Command execution
AT+COPS=n,2,m	Selects the carrier to be	n=0: Automatic (searches the network and switches the	example
A1+00F3=11,2,111	connected.	network operator automatically) (default)	OK
	connected.	n=1: Manual (connects to the network operator	OK .
		specified in "m")	
		n=2: Disconnects the connection to the network	
		operator	
		n=3: Mapping is not performed.	
		n=4: Manual/Automatic (if the connection to the network	
		operator specified in "m" fails, works as automatic	
		mode.)	
		m: Country code (MCC) and operator code (MNC) are	
		displayed in a hexadecimal number.	
		The format is as follows:	
		Digit 1 of MCC · · · octet 1 bits 1 to 4.	
		Digit 2 of MCC · · · octet 1 bits 5 to 8.	
		Digit 3 of MCC · · · octet 2 bits 1 to 4.	
		Digit 3 of MNC · · · octet 2 bits 5 to 8.	
		Digit 2 of MNC · · · octet 3 bits 5 to 8.	
[M]		Digit 1 of MNC · · · octet 3 bits 1 to 4.	
AT+CPAS	Displays whether to send the	Result: +CPAS:n	AT+CPAS
	control signals to the FOMA	n=0: Can send/receive control signals to/from the	+CPAS:0
	terminal.	FOMA terminal.	ок
		n=1: Cannot send/receive control signals to/from the	
		FOMA terminal.	
		n=2: Unknown (control signal sending/receiving is not	
		assured).	
		n=3: Can send/receive control signals to/from the	
		FOMA terminal, and currently receiving.	
		n=4: Can send/receive control signals to/from the	
[M]		FOMA terminal, and currently communicating.	
AT+CPIN=n,m	Enters the UIM password (PIN1	When the UIM is in a state waiting for the entry of PIN1	AT+CPIN="1234"
	or PIN2).	or PIN2 code n: PIN1/PIN2	OK
			AT+CPIN="12345678","1234"
		When the UIM is in a state waiting for the entry of PUK due to failure in unblocking PIN1 or PIN2 code	OK AT+CPIN?
		n: PUK	+CPIN:SIM PIN
		m: New PIN1 or PIN2	OK
		AT+CPIN?: Displays the state of code entry requested	OK .
		about current SIM.	
		Result: +CPIN: <state></state>	
		<pre><state>=READY: Code entry not requested</state></pre>	
		<state>=SIM PIN: PIN1 code entry waited</state>	
		<state>=SIM PIN2: PIN2 code entry waited</state>	
		<state>=SIM PUK: PUK entry waited due to failure in</state>	
		unblocking PIN1 code	
		<state>=SIM PUK2: PUK entry waited due to failure in</state>	
[M][AT]		unblocking PIN2 code	
AT+CR=n	Displays the bearer service type	n=0: Does not display. (default)	AT+CR=1
	before the CONNECT result	n=1: Displays.	ОК
	code appears at connection of	<serv>: Displays only "GPRS" that means packet</serv>	ATD*99***1#
	the line.	communication.	+CR: GPRS
		(Displays "SYNC" or "AV64K", depending on	CONNECT
[M]		the line type.)	
[&F][&W]		AT+CR?: Displays the current set value.	
AT+CRC=n		n=0: Does not use +CRING. (default)	AT+CRC=0
	code is used at reception.	n=1: Uses +CRING. <type>.</type>	OK
		AT+CRC?: Displays the current setting.	AT+CRC?
		The +CRING format is as follows:	+CRC: 0
		+CRING: <type></type>	OK
[AT][M]		During PPP packet ringing	
[&F][&W]	I I	+CRING: GPRS "PPP",,, <apn></apn>	

AT command	Outline	Parameter/Explanation	Command execution example
AT+CREG=n	Sets whether the result is	n=0: Not notified. (default)	AT+CREG=1
	displayed about the inside and	n=1: Notified at switching between the inside and	ок
	outside of the service area.	outside of the service area.	(set to "Notified")
		(Inquiry)	AT+CREG?
		AT+CREG?	+CREG: 1,0
		+CREG: <n>,<stat></stat></n>	ок
		n: Set value	(means the outside of the service
		stat:	area)
		0: Outside voice call area	
		1: Inside voice call area	(when moved from the outside to
[AT][M]		4: Unknown	the inside of the service area)
[&F][&W]		5: Inside voice call area (during roaming)	+CREG: 1
AT+CUSD=n," <str>",0</str>	Sets or checks the additional	n=0: Does not display mid result. (default)	AT+CUSD=0,
	service for network.	n=1: Displays mid result.	ок
		<str>: Service code</str>	AT+CUSD=1,"*148*1*0000#",0
		Mid result: m," <str>",0</str>	+CUSD:0,"148*7#",0
[M]		m=0: Shows the setting is completed.	ок
[&F][&W]		m=1: Shows the network requires the information.	
AT+FCLASS=n	Sets communication class	n=0: Data communication (default)	AT+FCLASS=0
	in the FOMA terminal.		ок
[M]			
[&F][&W]			
AT+GCAP	Displays the AT command	Result +GCAP: n	AT+GCAP
	supported by FOMA terminal.	n=+CGSM: Some or all GSM commands are supported.	+GCAP:+CGSM,+FCLASS,+W
		n=+FCLASS: +FCLASS command is supported.	ок
[M]		n=+W: +W command is supported.	
AT+GMI	Displays the manufacturer name	_	AT+GMI
	(Panasonic).		Panasonic
[M]			ок
AT+GMM	Displays the product name	_	AT+GMM
	(FOMA P-04C) of the FOMA		FOMA P04C
[M]	terminal.		ок
AT+GMR	Displays the version of the	-	AT+GMR
	FOMA terminal.		Ver1.00
[M]			ок
AT+IFC=n,m	Selects the flow control method.	n: DCE by DTE	AT+IFC=2,2
		m: DTE by DCE	ОК
		0: No flow control	
		1: XON/XOFF flow control	
		2: RS/CS (RTS/CTS) flow control	
[M]		Default: n, m = 2.2	
[&F][&W]		AT+IFC?: Inquires the set value.	
AT+WS46=n	Selects the wireless	Returns "ERROR" for the mode setting because the	AT+WS46=22
	communication network of the	wireless communication network is not selected on the	ERROR
	FOMA terminal.	FOMA terminal by this command.	AT+WS46?
		n=12: GSM/GPRS	25
		n=22: W-CDMA (Wideband CDMA)	OK
[M]		n=25: Automatic	
ATA	Performs the receiving process	-	RING
	in the mode when the FOMA		ATA
	terminal received the incoming		CONNECT
[AT][M]	call.		
ATD	Performs the automatic outgoing	<cid>: 1 to 10. Displays the APN defined by</cid>	ATD*99***1#
	process to the FOMA terminal	+CGDCONT.	CONNECT
	according to the contents	When calling cid1, you can omit the phone number like	
	specified in the parameter and	"ATD*99***#."	
[AT][M]	dial parameter.		
ATEn	Sets whether echo-back is	n=0: Issues no echo-back.	ATE1
[AT][M]	issued to the DTE in the	n=1: Issues echo-back. (default)	OK
[&F][&W]	command mode.		
ATHn	Places the FOMA terminal into	n=0: Disconnects the line. (can be omitted)	(During packet communication)
	the on-hook state.		+++
			ATH
[AT][M]			NO CARRIER

AT command	Outline	Parameter/Explanation	Command execution example
ATIn	Displays the ID code.	n=0: Displays "NTT DoCoMo".	ATIO
	Biopiayo alo iB code.	n=1: Displays the product name. (same as +GMM)	NTT DoCoMo
		n=2: Displays the version of the FOMA terminal. (same	OK
		as +GMR)	ATI1
		n=3: Displays ACMP information element.	FOMA P04C
		n=4: Displays the details of the function available for	OK
[ A TITA A]			OK
[AT][M]		communication on the FOMA terminal.	
ATOn	Returns from the online command		ATO
	mode to the online data mode	online data mode. (can be omitted)	CONNECT
[M]	during communication.		
ATQn	Sets whether the result code is to	n=0: Displays the result code. (default)	ATQ0
	be displayed for the DTE.	n=1: Does not display the result code.	OK
			ATQ1
[M]			("OK" is not returned at this
[&F][&W]			time.)
ATS0=n	Sets the number of rings	n=0: Does not automatically receive an incoming call.	ATS0=0
71100-11	required until the FOMA terminal	(default)	OK
			ATS0?
	automatically receives an	,	
	incoming call.	the specified number of rings.	000
		(when n≥10, does not automatically receive a packet	OK
		(PPP) incoming call, then the line is disconnected after	
[M]		about 30 seconds.)	
[&F][&W]		ATS0?: Inquires the set value.	
ATS2=n	Sets the escape character.	n=43: Default	ATS2=43
		n=127: Makes escape processing invalid.	OK
		11-127. Walkes escape processing invalid.	ATS2?
n.n		ATCOC In suite a thin and unlike	
[M]		ATS2?: Inquires the set value.	043
[&F]			OK
ATS3=n	Sets the carriage return (CR)	n=13: Default (n=13 only specifiable)	ATS3=13
	character.		ок
		ATS37: Inquires the set value.	ATS3?
[M]		·	013
[&F]			ок
ATS4=n	Sets the line feed (LF) character	n=10: Default (n=10 only specifiable)	ATS4=10
A104-11	deta trie line feed (Er ) character.	11-10. Delault (11-10 only specifiable)	OK
		ATC 42. Inquires the set value	ATS4?
		ATS4?: Inquires the set value.	
[M]			010
[&F]			OK
ATS5=n	Sets the back space (BS)	n=8: Default (n=8 only specifiable)	ATS5=8
	character.		OK
		ATS5?: Inquires the set value.	ATS5?
[M]		·	008
[&F]			ok
ATS30=n	Sets the inactive timer (minute).	n=0 to 255 (default=0) (unit: minute)	ATS30=0
A 1000-11	When no user data is sent or	11-0 to 255 (deladit=0) (driit. minute)	OK
			OK .
	received, the connection is cut		
	after the set time has elapsed.		
	This command is for only 64K data		
	communication. When 0 is set, the		
[M][&F]	inactive timer turns to OFF.		
ATS103=n	Selects characters to pause for	n=0: *(asterisk)	ATS103=0
	incoming sub-address.	n=1: / (slash) (default)	ок
[M][&F]		n=2: ¥ or back slash	-
ATS104=n	Selects characters to pause for	n=0: # (sharp)	ATS104=0
7110107-11			
Th DIO E1	outgoing sub-address.	n=1: % (percentage) (default)	OK
[M][&F]		n=2: & (and)	
ATVn	Sets all the result codes in the	n=0: Returns the result code in a numeric value.	ATV1
[M]	numeric or alphabetical notation.	n=1: Returns the result code in alphabetical characters.	ок
[&F][&W]		(default)	
ATXn	Sets whether to display the	n=0: Dial tone not detected; busy tone not detected;	ATX1
	speed in the CONNECT display	speed not displayed.	ок
	at connection.	n=1: Dial tone not detected; busy tone not detected;	
	Detects busy tone and dial tone.	speed displayed.	
	20000 200y toric and diar torie.	n=2: Dial tone detected; busy tone not detected; speed	
		displayed.	
		n=3: Dial tone not detected; busy tone detected; speed	
		displayed.	
		In a State of the	Í.
[M] [&F][&W]		n=4: Dial tone detected; busy tone detected; speed displayed. (default)	

AT command	Outline	Parameter/Explanation	Command execution example
ATZn	Resets the setting to the	Only n=0 is specifiable. (Can be omitted)	(In online)
	contents of the nonvolatile		ATZ
	memory. If this command is		NO CARRIER
	entered during communication,		(In offline)
	the line is disconnected.		ATZ
[M]			ок
AT¥Sn	Displays the contents of the each	Only n=0 is specifiable. (Can be omitted)	AT¥S
	command and S register		E1 Q0 V1 X4 &C1
	currently set.		&D2 &S0 &E1 ¥V0
			S000=000
			S002=043
			S003=013
			S004=010
			S005=008
			S006=005
			S007=060
			S008=003
			S010=001
			S030=000
			S103=000
			S104=000
[M]			ок
AT¥Vn	Selects the response code	n=0: Does not use the extended result code. (default)	AT¥V0
[M]	specifications at connection.	n=1: Uses the extended result code.	OK
[&F][&W]			

\*The following commands do not result in an error even if specified; however, they do not function as commands.

- · AT (AT only entered.)
- · ATP (Pulse setting)
- · ATS8 (Setting the pause time by comma dialing)
- ATT (Tone setting)
  - · ATS6 (Setting the pause time taken for dialing)
  - · ATS10 (Setting the automatic disconnection delay time)

# **Supplementary Explanation of AT Commands**

- Command name: +CGDCONT=[parameter]
  - Outline
  - This command sets an access point name (APN) for when dialing for packet communication.
  - · Forma
    - +CGDCONT=[<cid>[,"<PDP\_type>"[,"<APN>"]]]
  - · Explanation of parameters

You set an access point name (APN) for when dialing for packet communication. See the example below for command instructions.

<cid>%: 1 to 10 <PDP\_type>: PPP or IP <APN>%: Arbitrary

- \*\*The <cid> numbers are used to manage access point name (APN) for packet communication, and they are registered in the FOMA terminal. Although it is possible to register numbers cid1 to cid10 in the FOMA terminal. "mooera.ne.io" (PPP) was already registered for <cid>=1. "moo
  - Although it is possible to register numbers cid1 to cid10 in the FOMA terminal, "mopera.ne.jp" (PPP) was already registered for <cid>=1, "mopera.net" (PPP) for <cid>=2, "mopera.net" (IP) for <cid>=3 and "mpr.ex-pkt.net" (PPP) for <cid>=4 prior to purchase. Use numbers 5 to 10 to register other access point names.
- <APN> indicates any character string for each access point name.
- · Operation at omission of parameters

+CGDCONT= : Sets all the <cid> contents to the default. +CGDCONT=<cid> : Sets the specified <cid> to the default.

+CGDCONT=? : Lists the specifiable values. +CGDCONT? : Displays the current setting.

· Command execution example

AT+CGDCONT=5,"PPP","abc"

OK

- %The command used to register an APN name, abc (cid=5)
- % This command, which is a setting command, is not stored in the nonvolatile memory written by [&W], and is not reset by [&F] and [Z], either.

```
    Command name:

                       +CGEQMIN=[parameter]
                                                           [M]

    Outline

    This command registers the reference value to judge whether the system permits QoS (Quality of service) reported from the network at establishment of
    You can specify four setting patterns described in the command execution example below.
    +CGEQMIN=[<cid>[,,<Maximum bitrateUL>[,<Maximum bitrate DL>]]]
  · Explanation of parameters
    ∠cid>.%
                                       : 1 to 10
    <Maximum bitrate UL>*
                                      : None (default), 2048
    ∠Maximum hitrate DI >->
                                      : None (default), 7232
     **<cid> is a number used to manage an access point name (APN) for packet communication, which is registered in the FOMA terminal.
      <Maximum bitrate UL> and <Maximum bitrate DL> are used to specify the maximum baud rates (kbps) for upload and download between the FOMA
      terminal and base station. "None" (default) accepts all baud rates, however, you may not be able to establish packet communication if you specify
      2048 and 7232 because the baud rate less than these values are not accepted.
  · Operation at omission of parameters
                           : Sets all the <cid> contents to the default.
    +CGEQMIN=
    +CGEQMIN=<cid>
                           : Sets the specified <cid> to the default.
  · Command execution example
    You can specify only the following four setting patterns:
    (The setting in (1) is defined in each cid as the default.)
    (1)Command that accepts all the baud rates for both upload and download (cid=5)
       AT+CGEQMIN=5
       ΟK
    (2)Command that accepts 2048 kbps for upload and 7232 kbps for download (cid=6)
       AT+CGEQMIN=6,,2048,7232
    (3)Command that accepts 2048 kbps for upload and all baud rates for download (cid=7)
       AT+CGEQMIN=7..2048
    (4)Command that accepts all baud rates for upload and 7232 kbps for download (cid=8)
       AT+CGEQMIN=8,,,7232
     **This command, which is a setting command, is not stored in the nonvolatile memory written by [&W], and is not reset by [&F] and [Z], either.

    Command name:

                       +CGEQREQ=[parameter]
    This command sets QoS (Quality of service) to be requested to the network at dialing of the packet communication.
    You can specify only one setting pattern described in the command execution example below, which is set as the default.
  · Format
    +CGEQREQ=[<cid>]
  · Explanation of parameter
    <cid>%: 1 to 10
     **<cid> is a number used to manage an access point name (APN) for packet communication, which is registered in the FOMA terminal.
  · Operation at omission of parameter
    +CGEQREQ=
                           : Sets all the <cid> contents to the default.
    +CGEOREO=<cid>
                           : Sets the specified <cid> to the default.
  · Command execution example
    You can specify only the following one pattern:
    (This setting is defined in each cid as the default.)
```

(1)Command that requests a connection at arbitrary speed NW sets (cid=5)

AT+CGEQREQ=5

\*This command, which is a setting command, is not stored in the nonvolatile memory written by [&W], and is not reset by [&F] and [Z], either.

Command name: +CLIP

Outline

The result for "AT+CLIP=1" is displayed in the following format:

+CLIP: <number> <type>

· Command execution example

AT+CLIP=1

RING

+CLIP: "09012345678",49

# **Disconnection Reason List**

## ■64K Data Communication

Value	Reason
1	The specified number does not exist.
16	The line was normally disconnected.
17	Cannot communicate because the other party is communicating.
18	Dialed but no response has come in within the specified duration.
19	Cannot communicate because the other party is dialing.
21	The other party rejected to receive the call.
63	The network service and options are not valid.
65	The specified transmission performance is not provided.
88	Dialed to or received the call from the phone with different properties.

## ■Packet Communication

Value	Reason
27	No APN was found; or an invalid APN was specified.
30	The line was disconnected from the network.
33	You have not applied for the service option you requested.
36	The line was normally disconnected.

# **Result Codes**

## Result Code List

Numeric notation	Character notation	Meaning
0	OK	Processing has been executed normally.
1	CONNECT	The line has been connected to the other party.
2	RING	An incoming call has arrived.
3	NO CARRIER	The line has been disconnected.
4	ERROR	The system can receive no command.
6	NO DIALTONE	The system can detect no dial tone.
7	BUSY	The system is detecting the busy tone.
8	NO ANSWER	The connection completed; timeout
100	RESTRICTION	The network is restricted.
101	DELAYED	Within restricted redialing time

## **■**Extended Result Code List

For &F0

Connection speed between the FOMA terminal and the base station is displayed.

Numeric notation	Character notation	Connection speed
121	CONNECT 32000	32,000bps
122	CONNECT 64000	64,000bps
125	CONNECT 384000	384,000bps
133	CONNECT 3648000	3,648,000bps
135	CONNECT 7232000	7,232,000bps

#### For &E1

Numeric notation	Character notation	Connection speed
5	CONNECT 1200	1,200bps
10	CONNECT 2400	2,400bps
11	CONNECT 4800	4,800bps
13	CONNECT 7200	7,200bps
12	CONNECT 9600	9,600bps
15	CONNECT 14400	14,400bps
16	CONNECT 19200	19,200bps
17	CONNECT 38400	38,400bps
18	CONNECT 57600	57,600bps
19	CONNECT 115200	115,200bps
20	CONNECT 230400	230,400bps
21	CONNECT 460800	460,800bps

#### Information

- Result codes are displayed in the character notation (default) when the ATVn command (see page 39) is set to n=1 and displayed in the numeric notation when it is set to n=0.
- The baud rate is displayed to keep the compatibility with a conventional modern connected via RS-232C. However, the FOMA terminal and personal computer are connected via the FOMA USB Cable with Charge Function 02 (option); so, the baud rate is different from the actual connection speed.
- "RESTRICTION" (numeric notation: 100) means that the communication network is congested. If this result code appears, wait for a while, then connect the line again.

### Communication Protocol Result Code List

Numeric notation	Character notation	Meaning
1	PPPoverUD	Connected by 64K data communication
3	AV64K	Connected by 64K videophone
5	PACKET	Connected by packet communication

#### ■ Result Code Display Examples

When ATX0 is set:

CONNECT only appears at completion of the connection, regardless of the contents specified in the AT¥V command (see page 40).

Example in character notation: ATD\*99\*\*\*1# CONNECT

Example in numeric notation: ATD\*99\*\*\*1#

• When ATX1 is set<sup>※1</sup>:

If ATX1 and AT¥V0 are set (default):

A result code appears in the following format at completion of the connection: CONNECT<br/>
beaud rate between the FOMA terminal and PC>

Example in character notation: ATD\*99\*\*\*1#

**CONNECT 460800** 

Example in numeric notation: ATD\*99\*\*\*1#

1 21

· If ATX1 and AT¥V1 are set\*1:

A result code appears in the following format at completion of the connection:

CONNECT<br/>baud rate between the FOMA terminal and PC>PACKET<access point name (APN)>/<maximum baud rate for upload (the FOMA terminal

→ wireless base station)>/<maximum baud rate for download (the FOMA terminal ← wireless base station)>\*2

Example in character notation: ATD\*99\*\*\*1#

CONNECT 460800 PACKET

mopera.ne.jp /2048/7232

Example in numeric notation: ATD\*99\*\*\*1#

1215

\*1 If you specify ATX1 and AT¥V1 at the same time, you may not be able to correctly carry out the dial-up connection.

You are advised to use only AT¥V0.

\*2 The displayed maximum band rate is the one reported from the wireless base station and does not guarantee the actual communication speed.

# **Kuten Code List**

# <How to read Kuten Code List>

# First enter the number for "Kuten digit 1 to 3", and enter the number for "Kuten digit 4".

• Some characters in Kuten Code List may appear different on the display.

Kuten	Kuten digit 4	Kuten	Kuten digit 4	Kuten	Kuten digit 4
digit 1 to 3	0 1 2 3 4 5 6 7 8 9	digit 1 to 3	0 1 2 3 4 5 6 7 8 9	digit 1 to 3 0	1 2 3 4 5 6 7 8 9
010 011 012 013 014 015 016 017	SNE	130 131 132 133 134 135 136 137	1 2 3 4 5 6 7 8 9 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	209 210 211 212 213 214 215 216 富	既機徽亀疑吃脚弓 精動 類別 類別 機 微 亀 疑 吃 脚 弓 短 接 鏡 插 在 接 数 最 被 ,
018 019 020 021 022 023 024	\$ ¢ £ % # & * @ \$ ☆  ★ ○ □ □ △ △ ▽ ▼ ※ 〒  → ← ↑ ↓ = □ □ □ □ □  □ □ □ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○	138 139 160 161 162 163 164	□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □	217 218 219 220 221 222 223 224 業	窮拒魚供叫教鄉局, 医热學疾動 人名英格雷 人名英格雷人姓氏 医大型性 人名英格兰人姓氏 人名英格兰人姓氏 医大型性 人名英格兰人姓氏 医皮肤炎 医皮肤炎 医皮肤炎 医皮肤炎 医皮肤炎 医皮肤炎 医皮肤炎 医皮肤炎
026 027 028 029 031 032 033		164 165 166 167 168 169 170	しまり   しま	225 226 227 228 229 230	<ul><li>・</li></ul>
034 035 036 037 038 039 040	H I J K L M N O P Q R S T U V W X Y Z a b c d e f g h i j k l m n o p q r s t u v w x y z z a あいいううええお	170 171 172 173	こう   1	231 栗郡 232 郡 232 建 233 建 234 携 235 繋	繰り換数 教 君 薫 訓 群 本
041 042 043 044 045 046 047 048	おこそでばほゅわれていました。 えけせづはべやわっくすっねぶめる うくずっながめる いきしちにふみらん あかさたどびぼよゑ あかさたどびぼよゑ	174 175 176 177 178 178	曳衛関連	236 237 238 (快) 239 240 241 242 243 終 終	芸欠倦憲検見元舷 報頭 別 開月堅 網 別 就 遺 弦 撃 血 喧 研鍵 滅 撃
050 051 052 053 054 055 056	** マカサタドピポポコソデバホュカサタドピポポリトピポポリトピポポカリカ	180 181 182 182 183 184 185	世 ・	243 244 245 246 247 248 249	舷 机特鼓悟鲤勾固 拉马克克 电相互编校口 四班加伍姆侯向 医上颌上角 医甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基甲基
057 058 060 061 062 063 064	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	186 187 188 189 190 191 192 193	蝦我介恢 蟹慨 供館 大 達爾 大 美 運	250 251 252 253 254 255 256 257	后巷控洪紘荒鋼。以京本等。大大大大大大大大大大大大大大大大大大大大大大大大大大大大大大大大大大大大
065 070 071 072 073	στυφχψω АБВГДЕЁЖЗ ИЙКЛМНОПРС ТУФХЦЧШЩЪЫ ЬЭЮЯ	194 195 196 197 198 199 200	醫拡赫領恰別 報報	258 259 260 261 261 261 262 佐	国 教 酷 鵠 黒 獄 漉 腰 甑 額 間 物 日
074 075 076 077 078	а бвгдеёжзий клмнопрсту фхцчшщъыьэ юя	201 202 203 204 205 206 207	斯幹款 等讓 超麗斯 國際 和內等感 中語 電子 和內等感 可能 和 的思数 管實 力 不 和 的思数 管實 力 不 市 還 內 一 市 還 內 一 同 嚴 顧 別 元 市 還 日 國 歷 市 聞 還 日 爾 麗 所 記 所 置 日 高 麗 所 記 所 置 日 正 問 嚴 麗 田 正 問 嚴 麗 田 正 問 嚴 麗 田 正 田 正 問 嚴 麗 田 正 田	262 263 264 265 266 267 268 269 性 上 上 上 上 上 上 上 上 上 上 上 上 上 上 上 上 上 上	义鎖塞采際神搾管瞪坐宰 化医子属 医神溶管 医生生子 经基本 医性性 医经孕性 医多种 医性神经 医神经 医神经 医神经 医神经 医神经 医神经 医神经 医神经 医神经 医
082 083	+ + -	207 208	【 き 】 企 伎 危 喜 器 基 奇 嬉 寄 岐 希 幾 忌 揮 机	270 271 272 編 惨	察 拶 撮 擦 札 殺 薩 雑 皐別 錆 鮫 皿 晒 三 傘 参 山 本 散 散 栈 燦 珊 産 算 纂 蚕

Kuten				Kı	ıten	digit	1 4				Kuten				Kı	ıten	diait	- 4				Kuten				Kı	ıten	digit	1 4			$\exists$
digit 1 to 3	0	1	2			5		7	8	a	digit 1 to 3	0	1	2		4	5	6	7	8	۵	digit 1 to 3	0	1	2		4	5	6	7	8	9
273			酸			暫		<u> </u>	Ü	J	1 10 0	Ĭ	_	た	-	Ť						400	Ü	函	箱	硲	箸	肇	筈	櫨	幡	肌
070	[		L		1				,	<u></u>	343	他	多	太	汰	詑	唾		妥	惰	打	401	畑	畠	八	鉢	溌	発	醗	髪	伐	罰
273 274	使	刺	司	史	嗣	匹	+	仕始		伺姿	344 345	柁岱	舵帯	楕待	陀怠	駄態	騨戴	体替	堆泰	対滞	耐胎	402 403	抜半	筏反	閥叛	鳩帆	噺搬	塙斑	蛤板	隼氾	伴汎	判版
275			市	師	志	思	指	支		女斯	346	腿	苔苔	袋	登	退	逮	隊	黛	鯛	代	404	犯	班	畔	繁	般	藩	販	範	釆	煩
276	施	旨	枝	止	死	氏	獅	祉	私	糸	347	台	大	第	醍	題	鷹	滝	瀧	卓	啄	405	頒	飯	挽	晩	番	盤	磐	蕃	蛮	
277 278			肢肥	脂	至	視		詩		誌	348 349	宅	托	択	拓	沢口	濯	琢	託	鐸	濁	405	[		ひ		1					core .
279			賜慈	雌持	飼時	歯	事	似	侍	児	350	諾	茸叩	凧但	蛸達	只辰	奪	脱	巽	竪	辿	405	卑	否	妃	庇	彼	悲	扉	批	披	悲
280		次		治	爾	璽	痔	磁	示	而	351	棚	谷	狸	鱈	樽			単		坦	407	比	泌	疲	皮	碑	秘	緋	罷	肥	被
281			蒔	辞	汐	鹿	式	識	mag.	竺	352	担	探	品	歎	淡			短		箪	408	誹	費	避	非		樋	簸	備	尾	微
282 283			雫疾	七質	叱実	執蔀	失篠	嫉偲		悉芝	353 354	綻暖	耽檀	胆段	蛋男	誕談	鍛	寸	壇	弾	断	409 410	枇	毘鼻	琵柊	眉稗	美匹	疋	髭	彦	膝	菱
284			編	舎	写	射	捨	赦		煮	00.	1	1=	5	23	]						411	肘	弼	必	畢	筆	逼	桧	姫	媛	紐
285	社	紗	者	謝	車	遮	蛇	邪	借	勺	354					_	値		地		恥	412	百	謬	俵	彪	標	氷	漂	瓢	票	表
286 287			灼取	爵守	酌手	釈朱	錫殊	若狩		弱種	355 356	智畜	池	痴筑	椎蓄	置逐	致秩		遅茶		築着	413 414	評蛭	豹鰭	廟品	描彬	病斌	秒浜	苗瀬	錨貧	鋲賓	蒜頻
288			松酒	首	儒	不受		寿		性樹	357	中	竹仲	由		<b>担</b>	区			嫡虫	恵	415		瓶	пп	112	XILL	八	<i>19</i> 9.	貝	Ħ	妲
289		需	囚	収	周						358	註	酎	鋳	駐	樗			荢		貯		Ĩ	7.00-0	ıζı		1					
290 291	u.tr		就	州	修由	愁	拾曲	洲		秋	359	丁	兆	凋	喋	寵	3F	EL.	ou.	245	+411/	415 416	D-7	h+-	不	付	埠	夫	婦	富八		布原
292			習酋	臭酬	舟集	蒐醜	衆什	襲住		蹴十	360 361	暢	帖朝	帳潮	庁牒	弔町			徴脹	懲腸	挑蝶	417	府膚	怖芙	扶譜	敷負	斧賦	普赴	浮阜	父附	符侮	腐無
293				汁	渋	獣	縦	重		叔	362	調	諜	超	跳	銚					捗	418	武	舞	葡	蕪	部	封	楓	風,	葺	蕗
294			淑	祝	縮	粛	塾	熟		術	363	直	朕	沈	珍	賃	鎮	陳				419	伏	副	復	幅	服					
295 296			峻殉	春淳	瞬準	竣潤	舜盾	駿純		循	363	[		つ		]			:==	Rate	±4±	420 421	тhm	福鮒	腹公	複吻	覆喷	淵塘		払		仏奮
297			如	浮初	华所	呂	旧曙	湘渚		遵緒	364	槌	追	鎚	痛	通	塚	栂	津掴	墜槻	佃	422	物粉	<b>剽</b>	分紛	雰	噴文	墳間	"貝	扮	火	曲
298			著	藷	諸	助	叙	女		徐	365	漬	柘	辻	蔦	綴	鍔			坪	壷		Ĩ	-	^	,,	î	IA-U				
299 300			除匠	傷	償	mate	nte	ne	-	भाग	366	嬬	紬	Щ	吊	釣	鶴					422 423	2466-	777	28667	+=	24	utot:	丙	併		塀
300			匠宵	升将	召小	哨少	商尚	唱庄		奨廠	366	[		τ		1		亭	低	停	偵	423 424	幣僻	平壁	弊癖	柄碧	並別	蔽瞥	閉蔑	陸節	米偏	頁変
302			I 抄	招	学	捷	昇	昌		晶	367	剃	貞	呈	堤	定	帝		庭		弟	425	片	ニニニニニ			返			勉		弁
303			樟	樵	沼	消	渉	湘		焦	368	悌	抵	挺	提	梯	汀	碇	禎	程	締	426	鞭									
304 305			省菖	硝蒋	礁蕉	祥衝	称裳	章訟		粧詔	369 370	艇	訂邸	諦鄭	蹄釘	逓鼎	泥	摘	擢	敵	滴	426	ľ	保	舗舗	鋪	圃	捕	步	甫	補	輔
306			賞	醤	鉦	鍾	鐘	障		上	371	的	笛	適	鏑	溺	哲		撤	轍	迭	427	穂	募	墓	慕	戊	暮	母	海	菩	倣
307	丈	丞	乗	冗	剰	城	場	壌	嬢	常	372	鉄	典	填	天	展	店	添	纏		貼	428	俸	包	呆	報	奉	宝	峰	峯	崩	庖
308 309			条嘱	杖埴	浄飾	状	畳	穣	蒸	譲	373	転	顛	点	伝		澱	田	電			429 430	抱	捧法	放	方言	朋	縫	P/51	±±	枯	婪
310			植	殖	燭	織	職	色	触	食	373	[		ح		1				兎	吐	431	蜂	返 褒	泡訪	烹豐	砲邦	鋒	胞飽	芳鳳	萌鵬	逢乏
311			尻	伸	信	侵	唇	娠		審	374	堵	塗	妬	屠	徒	斗		渡	登	菟	432	亡	傍	剖	坊	妨	帽	忘	忙	房	暴
312			振	新	晋	森	榛	浸		申	375	賭	途	都	鍍	砥	砺		度	±	奴	433	望	某	棒		紡	肪	膨	謀	貌	貿
313 314			神進	秦針	紳震	臣人	芯仁	薪刃		診壬	376 377	怒宕	倒島	党嶋	冬悼	凍投	刀搭		塔桃	塘梼	套棟	434 435	鉾牧	防睦	吠穆	頬釦	北勃	僕没	ト船	墨堀	撲幌	朴奔
315		甚		腎	展訊	迅		靭	BE	_	378	盗	海	湯	涛	灯	燈		痘	祷	等	436	本		凡	盆	37/	/X	70	-MII	שכפוי	**
	Ĩ	_	र्		1	~		1,,,			379	答	筒	糖	統	到		_	,	,,,	.,		Ī	1000	ŧ		1					
315 316	石	<b>≖</b> ⁄-	ন্তি	===	`=	П	<b>#</b>	óњ		諏北	380 381	鐙	董	蕩頭	藤騰	討闘	謄働	豆動	踏	逃堂	透道	436 437	п+	+/-	=	哩	摩拉	磨	魔膜			妹
317			図粋	厨翠	逗衰	吹遂		帥錐		水随	382	短憧	陶撞	期洞	鷹瞳	産	測胴		同道	望銅	導峠	438	昧鱒	枚桝	毎亦	怪俣	槙又	幕抹		枕沫	鮪讫	柾仮
318				嵩		枢			据		383	鴇	匿	得	徳	売	特		秃	篤	毒	439	繭	麿	方	慢	満	3214	//\	///	~=	1
319		菅		雀	裾						384	独	読	栃	橡	4	突		届	鳶	苦	440	,	漫	蔓		,					
320	ı	澄	摺せ	寸	1						385 386	寅頓	西吞	瀞曇	噸鈍	屯	1字	敦	沌	豚	遁	440	ľ		み	味	未	魅	P	笞	岬	宓
320	•		ے		世	瀬	畝	是	凄	制		TER.	П	まな	υTu	]						441	蜜	湊	蓑			妙			眠	Ш
321			征	性	成	政	整	星	晴	棲	386	EMP	7994	176-	ΔP	奈				凪		444	[		む		]					744
322 323			清誓	牲請	生逝	盛醒	精青	聖静		製税	387 388	謎軟	灘難	捺汝	鍋	楢	馴	縄	畷	南	楠	441 442	夢	無	牟	矛	霧	淮	右	婿	加	務
324			戸席	惜	戚	斥	昔	析		積		1	XII	に		]							Ī	7771	め	۷٦.	395	114	IVIV	ΛÐ	MX	
325	籍	績	脊	責	赤	跡	蹟	碩	切	拙	388	_			=		弐	迩	包	賑	肉	442									4.5	冥
326 327		摂仙		設干	窃占	節宣	説専	雪尖		舌戦	389 390	虹	廿加	日尿	乳並	入任	bΙ	忍	釰			443 444	名免	命棹	明綿	盟緬	迷面	銘麺	鳴	姪	牝	滅
328		´Ψ 撰				旦浅		大染		耿 煎	550	I	УЦ	水ぬ	ЗE	ĭ	×Ι	NC2/	pιŭ				光	111	称も	44EU		処				
329	煽	旋	穿	箭	線						390									濡		444	_				-		摸		茂	妄
330 331		繊悪			舛				賎		300	[		ね		]					-	445 446			猛勿							
331	连全	遷禅	越維		閃糎	鮮	刖	춈	漸	灬	390 391	袮	靈	茐	猫	埶	年	\$	拎	撚	禰燃	446 447	日紋	全 門	勿勿	趼	几	厌	树	貝	同	ris]
	Ī	17	そ	υΠ	]						392	粘	,		THI			,u,	ان	37/17	NW.		ľ	1.3	ř		1					
332	#	木木	ΧĽ	77:	7±				措		200	[	77	の /無	٠,	]	-	T/A	2884	&rh	⊕r.	447 448	<i>/</i>	_	4/L			夜町				
333 334	曽組	<b>楚蘇</b>		) 阻	<b>疎</b>	礎鼠	祖僧	租創	粗双	系 叢	392 393	脳		<b></b> 農			襄	ΠΔİ	莀	納	肥	448 449	<b>大鑓</b>	10	役	刹	楽	九	碓	蛕	悧	釵
335		喪			爽	宋	層	匝		想想			HIER	は	-JTL	Ĭ							1		ゅ		1					
336	捜	掃	挿	掻	操	早	曹	巣	槍	槽	393		,_		T-L					覇		449			愈		癒	-	~	_	-	ul.
337 338	漕草	燥				窓装		総送		聡鎗	394 395	波拝		琶敗						俳輩		450 451	化女		輸揖			優涌				
339		挺		启増	深僧	衣	止	兦	烜	刈凸	396		拼培			血桿	牌煤			車売		452						那				В
340		臓	蔵	贈	造	促			即		397	陪	這	蝿	秤	矧	萩	伯	剥	博	拍	450	Ī		£		1					_
341 342	捉夾								族村		398 399			白莫		粕麦	舶	溥	迫	曝	漠	452 453	소	5	誉	鼬	碧	俥	⟨th	b∓	宓	予康
U42	+,	Ш	六	161	丁	亦	守	1貝	LL	N/K	000	原	神符	天	母X	又						700	朩	7	Ē	央	以	胂	4/J	ХΛ	Ħ	用

Kuten				K:	uten	diai	t 4				Kuten				K:	ıten	diai	t 4				Kuten				K	uten	dinit	1 4			٦
digit 1 to 3	0	1	2	3	4	5	6	7	8	9	digit 1 to 3	0	1	2	3	4	5	6	7	8	9	digit 1 to 3	0 1 2 3 4 5 6							7	ρ	9
454	揚	揺	擁	曜	楊	様	洋	溶	熔熔	用	521	圷	址	坎	折	址	坏	坩	垂	华	坡	599	椢	椦	棡	椌	相	Э	0	1	0	9
455	窯		耀	葉	蓉	要	謡	踊	遥	陽	522	坿	地	垓	垠	垳	垤	拼	垰	埃	埆	600	1000	棔	棧	棕	椶	椒	椄	棗	棣	椥
456	養	慾		欲	沃	浴	翌	翼	淀		523	埔	埒	埓	堊	埖	埣		堙	堝	塲	601	棹	棠	棯	椨	椪	椚	椣	椡	棆	楹
450	[		5		1					-	524	堡塘	塢	塋	塰	毀	塒	堽	塹	墅	墹	602	楷	楜	楸	楫	楔	楾	楮	椹	棉	椽中
456 457	₩	÷π	117	±±	お西	(eTe)	347	447	块	羅	525 526	墟	増擴	墺壘	壞壥	墙壜	堵壌	堕	壅壯	壓	壑	603 604	林岩	椰槁	楡	楞	楝槎	榁	楪槊	榲槝	榮	槐
458	螺乱	裸卵	来嵐	莱欄	料濫	雷藍		船覧	落	酪	527	壗壻	販売	書	煙	塩	<b>歩</b>	聖夛	拉梦	壺夥	壹夬	605	榿榧	恫樮	槓榑	榾榠	佐榜	寨榕	紹榴	梅	楊槨	槃樂
	ľ	Эl	b	11249	ī	ш	1940	晃			528	关	卒	夸	夾	竒	奕	奐	奎		类	606	樛	槿	權	槹	槲	槧	樅	榎	樞	械
458	•		-		•				利	吏	529	奢	奠	奥	奬	奩		-			-	607	樔	槫	樊	樒	櫁	樣	樓	橄	樌	橲
459	履	李		理	璃	-					530		奸	妁	妝	佞	侫	妣	妲	姆	姨	608	樶	橸	橇		橙	橦	橈	樸	樢	檐
460 461	75	痢	裏	裡	里	離	陸	律	率	7	531 532	姜	妍	姙	姚	娥	娟婢	娑林	娜	娉	娚	609 610	檍	檠檗	檄蘗	檢	檣舞	133	∔r¢a	150	枯	160
462	葎隆	掠竜	略龍	劉侶	流慮	溜旅	琉虜	留了	硫亮	粒僚	533	婀嫋	婬嫂	婉媽	娵嫣	娶嫗	姓嫦	婪嫩	媚嫖	媼嫺	媾嫻	611	櫑	架櫟	檗檪	檻櫚	櫃櫪	櫂櫻	檸欅	檳蘗	標櫺	機樂
463	画	凌	寮	料	梁	涼	猟	療	瞭	稜	534	嬌	嬋	嬖	嬲	嫐	嬪	嬶	州	嬢	孅	612	欖	鬱	欟	欸	欷	盜	欹	飲	歇	歃
464	糧	良	諒	遼	量	陵	領	力	緑	倫	535	孀	子	孕	孚	孛	孥	孩	孰	孶	孵	613	歉	歐	歙	歔	歛	歟	歡	歸	歹	歿
465	厘	林	淋	燐	琳	臨	輪	隣	鱗	麟	536	學	斈	孺	$\dot{\Box}$	它	宦	宸	寃	寇	隺	614	殀	殄	殃		殘	殕	殞	殤	殪	殫
466	тыл	型	る :::	<b>=</b>	】 **否						537 538	寔	寐	寤	實	寢	奠	寥	寫	寰	寶尸	615 616	殯	殲	殱毳		殷	殼	殿	毋	毓	毟
400	瑠【	솔	涙れ	累	類】						539	寳尹	尅屁	將屆	専屎	對屓	尓	色岁	尢	旭	Γ	617	毬氣	毫汞	延汕		麾汪	氈沂	氓沍	气沚	氛沁	氮沛
466	•		,,,		'	令	伶	例	冷	励	540	,	屐	屏	屋	屬	Ш	乢	岃	屹	岌	618	汾	汨	汳		沫	泄	泱	泓	沽	泗
467	嶺	怜		礼	苓	鈴	隷	零	霊	麗	541	岑	岔	妛	岫	岻	岶	岼	岷	峅	岾	619	泅	泝	沮	沱	沾					
468	齢	暦	歴	列		烈	裂	廉	恋	憐	542	峇	峙	峩	峽	便	峭	嶌	峪	華	崕	620		沺	泛		泙	沮	洟	衍	洶	渔
469 470	漣	煉蒲	簾連	練錬	聯						543 544	崗嵌	寄品	崟嵎	崛嵋	崑嵬	崔差	崢嵶	崚嶇	崙嶄	崘嶂	621 622	<b>洽</b> 浚	洸浹	洗浙	洵涎	洳涕	洒濤	洌涅	浣淹	涓渕	浤渊
-7.0	[	浬	選ろ	业术	1						545	吹嶢	嶝	嶬	順嶮	鬼嶽	産隆	殿嶷	嶼	嘶巉	巍	623	液涵	汝淇	油淦	涸	<b>海</b>	海淬	汪淞	准淌	淨	冲凄
470	•		_		Ŕ	魯	櫓	炉	賂	路	546	巓	巒	巖	<b>**</b>	巫	Ē	巵	系	帚	帙	624	淅	茂淺	淙		淕	淪	淮	渭	湮	海
471	露	労	婁	廊	弄	朗	楼	榔		漏	547	帑	帛	帶	帷	幄	幃	幀	幎	幗	幔	625	渙	湲	湟	渾	渣	湫	渫	湶	湍	渟
472	牢故	狼	篭	老	聾	蝋	郎	六	麓	禄	548	幟	幢	幣庫	幇	H G	并	幺	麼	广	庠	626	湃	渺	渔	渤	滿	渝	游	溂	溪	溘
473	肋	録	論わ		1						549 550	廁	厢廖	夏廣	廐廝	廏廚	廛	廢	廡	廨	廩	627 628	滉溥	溷滂	滓溟	溽潁	溯溉	ء 灌	溲滬	滔滸	滕滾	溏漿
473	,		1)	倭	和	話	歪	賄	脇	惑	551	廬	廖廱	廳	廰	3	廸	廾	弃	弊	桑	629	滲	凉漱	滞	漲	滌	准	//巴	/o I	/ <u>1</u> R	水
474	枠	鷲	亙	宣	鰐		藁	蕨	椀		552	彜	t	弑	弖	弩	弭	弸	彁	彈	彌	630	12	漾	漓	滷	澆	潺	潸	澁	初初	潯
475	碗	腕									553	彎	弯	彑	彖	彗	彙	3	彭	7	彷	631	潜	潛	潭	澂	潼	潘	澎	澑	濂	潦
476											554	徃	徂	彿	徊	很	徑	徇	從	徙	徘	632	澳	澣	澡	澤	澹	濆	澪	濟	濕	濬
477 478											555 556	徠悳	徨忿	徭怡	徼恠	忖怙	忻恂	忤怩	忸怎	忱忽	忝 怛	633 634	濔瀏	濘濾	濱瀛	濮瀚	濛潴	瀉瀝	瀋瀘	濺瀟	瀑瀰	瀁瀾
479											557	怕	他	怦	怏	怺	惠	恁		怂恷	恟	635	瀲	灑	灣	炙	炒	炯	烱	炬	炸	炳
480		#	丐	丕	$\uparrow$	IJþ	\	丼	J	Х	558	恊	恆	恍	恣	恃				恫	恙	636	炮	烟	烋	烝	烙	焉	烽	焜	焙	煥
481	乖	乘	亂	J	豫	亊	舒	ĴΞ	于	亞	559	悁	悍	惧	悃	悚						637	煕	熈	煦		煌	煖	煬	熏	燻	熄
482	亟		九	京	亳	亶	씼	仍	仄	仆	560	_	悄	悛	悖	悗		悧	恪	惡	悸	638	煩		熬		熹	熾	燒	燉	燔	燎
483 484	仂侚	仗佗	15万	仭佶	仟侈	价件	伉侘	佚佻	估佩	佛佰	561 562	惠愆	惓惶	悴惷	忰愀	悽惴	惆惺	慢愃	惘惚	慍惻	愕惱	639 640	燠	燬燹	燧燿	燵爍	燼爐	爛	爨	爭	爬	爰
485	侑	佯	來	侖	儘	倪	俟	俎	俘	倪	563	愍	恒愎	慇	愾	殼	愧	慊	愿	恒	愬	641	爲	交	俎	爿	牀	牆	牋	順	牴	牾
486	俑	俚		俤	俥	倚	倨	倔	倪	倥	564	愴	愽	慂	慄	慳	慷	慘	慙	慚	慫	642	犂	犁	犇	犒	犖	犢	犧	犹	犲	狃
487	倅	伜		倡	倩		俾	俯	們	倆	565	慴	慯	慥	慱	慟	慝	慓	慵	憙	憖	643	狆	狄	狎	狒	狢	狠	狡	狹	狷	倏
488	偃	假	會	偕	修	偈	做	偖	偬	偸	566	憇	憬	憔	憚	憊	憑	憫	憮	懌	懊	644	猗	猊	猜	猖	猝	猴	猯	猩	猥	猾
489 490	傀	傚僉	伊僊	傴傳	傲僂	僖	僞	僥	僣	僣	567 568	應懣	懷懶	懈懺	慙懴	燥懿	憺懽	懋懼	罹懾	懔戀	懦戈	645 646	獎獺	獏 珈	默玳		獪玻	獨珀	獰珥	獸珮	獵珞	獻璢
491	僮	價	僵	儉	儁	儂	艦	儕	儔	儚	569	戊	戍	戌	惑	戛	惟	惟	ІНН	75%	~	647	琅	瑯	琥	珸				琿	起	瑙
492	儡	儺	儷	儼	儻	儿	兀	兒	兌	兔	570		戞	戡	截	戮	戰	戲	戳	扁	扎	648	瑁	瑜	瑩	瑰	瑣	瑪			璋	璞
493	兢	競	兩	兪	兮	冀		囘	册	冉	571	扞	扣	扛	扠	扨	扼	抂	抉	找	抒	649	璧	瓊	瓏	瓔	珱		T-2	T/\		
494 495	冏、	胃油	冓	冕山	٦k	冤况	冦	冢	寫	幕凛	572 573	抓	抖擔	拔址	抃拜	抔拌	拗拊	拑塘	抻拇	拏抛	拿拉	650 651	2/2	瓠甄	瓣甃	社	瓩甌	瓮甎	瓲甍	脸 甕	瓲 甓	000
495	ン几	决處	冱凩	冲凭	冰凰	元	冽凾	凅刃	凉刋	<b></b>	573 574	拆挌	措	<b></b> 払 共	挧	挂	11 撃	拂拯	控护	抛捐	拉挾	652	瓷甦	到甬	光	甅出	剛	獣	気畉	幾畛	瓮畆	普番
497	刎	刧	刪	刮	刳	刹	剏	剄	剋	刺	575	捍	搜	捏	掖	掎	掀	掫	捶	掣	掏	653	畩	畤	畧	#	畭	畸	當	疆	疇	畴
498	剞	剔	剪	剴	剩	剳		剽	劍	劔	576	掉	掟	掵	捫	捩	掾	揩	揀	揆	揣	654	疊	疉	疂	疔	疚	疝	疥	疣	痂	疳
499	劒	剱	劈	劑	辨	4	777.L			***	577	揉	插	挪	揄	搖	搴		搓	搦	搶	655	痃			疸	疼	疱	痍	痊	痒	痙
500 501	勣	辨勦	劬飭	劭勠	劼勳	券勵	勁勸	勍	勗匆	勞匈	578 579	攝撓	搗撥	搨撩	搏撈	摧撼	摰	摶	摎	攪	撕	656 657	痣瘋	痞瘍	痾瘉	痿瘟	痼瘧	瘁瘠	痰瘡	痺瘢	痲瘤	痳瘴
502	則甸	制	割	剱匏	制匕	周	卸匣	匯	漫	函	580	15%	撥據	擦	按擅	燃擇	撻	擘	擂	擱	舉	658	烛寒	憲	癇	癌癈	<b>經</b>	角癜			溜癢	厚癯
503	Ī	品		#	H		臣	準	卡	Ī	581	舉	擠	擡		擣	擯		擶	擴	擲	659	癩	瘡	癧		癰	m-ox	11-20	INC	1.19%	/#
504	卮	夘	卻	卷		厖	厠	厦	厥	厮	582	擺	攀	擽	攘	攜	攅	攤	攣	攫	攴	660		癲	74	癸		皀				皎
505	厰	$\triangle$		篡	雙	叟	曼	燮	叮	叨	583	攵	攷	收	攸	畋	效	敖	敕	敍	敘	661	皖	皓		皚	皰	皴	皸	皹	皺	盂
506 507	叭吩	以 吝	吁呎	吽咏	呀呵	听咎	吭呟	吼	吮呷	吶呰	584 585	敞斷	敝旃	敲旆	數旁	斂旄	斃旌	變旒	解旛	斟旙	斫工	662 663	盍眈	盖眇	盒眄	盞眩	盡昵	盥眞	盧眥	盪眦	蘯眛	<b></b> 皆
508	咒咒		咀	呶	咄	百附	咆	哇	咢	百咸	586	光	<b>押</b>	果	昊	尺	昱	杏	服	旭	无昴	664	眸	睇	睚		睫	時	睥	睿	翠	睹
509		咬	哄	哈	咨			_			587	昜	晏	晄	晉	晁	睎	晝	晤	晧	晨	665	瞎	瞋	瞑	瞠	瞞	瞰	瞶	瞹	瞿	瞼
510			哂	咤	咾	周	哘	哥	哦	唏	588	晟	晢	断	暃	暈	暎	暉	暄	暘	瞑	666	瞽	瞻	矇	矍	矗	矚	矜	矣硴	矮	矼
511 512	唔售		哮响	哭凇	哺	哢哈	唹匾	啀	啣	啌	589 590	曁	暹	曉	暾	警嘩	DEF	or÷	D94	-		667 668	砌	砒码	礦	砠	礪	硅			碆	硼
512 513	售咯	啜喊	喧唱	啖啻	啗啾	唸喘	唳卿	啝單	喙啼	喀喃	590 591	曳	曄曷	瞭朏	曖朖	矇朞	曠朦	脏朧		襄朮	市田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田田	668 669	碚碾	碌碼	碣碎	碵磊	碪 磬	碯	磑	磆	磋	磔
514	日喩		响喨	鳴	嗅	咣	嗄	平階	嗤	順	592	交杂	杁	朸	机	月杆				杣		670	YEN	磧	磚	磽		礇	礒	礑	礙	礬
515	嘔		嘖	嗾	嗽	嘛	嗹	噎	器	營	593	枉	杰	枩	杼	杪	枌		枦		枅	671	礫	祀	酮	祗	祟	祚	祕	祓	祺	禄
516	嘴	嘶	嘲	嘸	噫	噤	嘯	噬	噪	噶	594	枷	柯	枴	柬		柩	枸		柞	柝	672	禊	禝	禧	齋	禪	禮	穰	禹	禺	秉
517 518	嚀	嚊	嚠囃	嚏	嚏	燕	嚮囑	嚶	嚴口	囂四	595 596	抵恕	柮粹	枹	柎	拉梳	柧섫	檜桙			栩	673 674	批高	秧賣	秬經	秡	秣亭	程理		棋神	稙程	稠藥
519	嚼囹	囁 圀	厢	轉吾	囈 圉	囎	1990	囓		化	597	桀梟	桍梏	栲梭	桎梔		栫梛			桷梹	桿桴	675	稟穢	禀穩	稱龝	稻穰	稟穹	稷穽	容窈	穂窗	穉窕	穑窘
520			或			專	BE	嗇	寰	圦	598	梵	梠	**	椏	棉				椈	棘	676	窖	窓窩	電電		窶	竅	竄		邃	~ 寶
		_	_			_	_	_	_	-			. , , , ,		,		. , ,,,,,,						_	. ~			_		-24			-

Kuten	Kuton digit 4	Kuten	Kuton digit 4	Kuten Kuten digit 4
digit	Kuten digit 4	digit	Kuten digit 4	digit Kuten digit 4
1 to 3	0 1 2 3 4 5 6 7 8 9 竊	1 to 3 755	0 1 2 3 4 5 6 7 8 9 誨 誠 誑 誥 誦 誚 誣 諄 諍 諂	1 to 3 0 1 2 3 4 5 6 7 8 9 8 33
678	竦竭竰筑笏笊笆笳笘笙	756	說 諫 諳 諧 諤 諱 謔 諠 諢 諷	834 麋 麌 麒 麕 麑 麝 麥 麩 麸 麪
679	<b>答 笼 笨 笑 筐</b>	757	諞 諛 謌 謇 謚 諡 謖 謐 謗 謠	835 麹靡 黌黎 黏 黐 黔 黜 點 黝
680	<b>筐</b> 笄 筍 笋 筌 筅 筵 筥 筴	758	謳 鞫 謦 謫 謾 謨 譁 譌 譏 譎	836 點 黨 黯 黴 黶 黷 黹 黻 黼
681 682	<ul><li>第 符 筱 筬 筮 筘 箘 箟 箍 箜</li><li>新 箋 箒 箏 箏 箙 篋 篁 篌 篏</li></ul>	759 760	證 潜 謹 禮 謹 譽 讀 讌 讎 讒	837 電 鼇 鼈 皷 鼕 鼡 鼬 鼾 齊 齒 齔 齣 齟 齠 齡 齦 齧 鯃 齪 齷
683	箴 篆 篝 篩 簑 簑 篦 篥 籠 簀	761	譲讖灌讚谺豁谿豈豌豎	839 齲鴨龕龜龠
684	簇 簓 篳 篷 簗 簍 篶 簀 醬	762	豐家豢豬豸豺貂貉貅貊	840
685	<b>簟簷簫簽籌籃籔籏籀籐</b>	763	貍 貎 貔 豼 貘 戝 貭 貪 貽 貲	
686	籘 籟 籤 籤 籥 籬 籵 粃 粐 粤	764	貳 貮 貶 賈 賁 賤 賣 賚 賽 賺	
687 688		765 766	賻 贄 贅 贊 竇 廳 贍 贐 齎 贓 賍 贔 贖 赧 赭 赱 赳 趁 趙 跂	
689	糲 糴 糶 糺 紆	767	趾 趺 跏 跚 跖 趺 跛 跋 跪 跫	
690	村 紜 紕 紊 絅 紘 紮 紲 紿	768	跟跣跼踈踉跿踝踞踐踟	
691	紵 絆 絳 絖 絎 絲 絨 絮 絏 絣	769	深 踵 踰 踴 蹊	
692 693	經綉條綏絽綛綺綮綣綵緇綽綫總綢綯縣綸綟綰	770 771	蹇 蹉 蹌 蹐 蹈 蹙 蹤 蹠 踪 蹣 蹕 蹶 蹲 蹼 躁 躇 躅 躄 躋	
694	緘 緝 緤 緞 緻 緲 緡 縅 縊 縣	772	躊 躓 躑 躔 躙 蹦 躡 躬 躰 軆	
695	縡縒縱縟縉縋縢繆繦縻	773	<b>躲 躾 軅 軈 軋 軛 軣 軼 軻 軫</b>	
696	縵 縹 繃 縷 縲 縺 繧 繝 繖 繞	774	軾 輊 輅 輕 輒 輙 輓 輜 輟 輛	
697 698	繙 繚 繹 繪 繩 繼 繻 纃 緕 繽	775 776	輌 輦 輳 輻 輹 轅 轂 輾 轌 轉 轆 轎 轗 轜 轢 轣 轤 辜 辟 辣	
699		777	競轎 轗 轜 轢 轣 轤 辜 辟 辣 辭 辯 辷 迚 迥 迢 迪 迯 邇 迴	
700	罅罌罍罎罐网罕罔罘	778	逅迹 迺逑 逕逡逍逞 逖逋	
701	苦 罠 罨 罩 罧 罸 羂 羆 羃 羈	779	逧 逶 逹 迸	
702	器 羌 羔 羞 羝 羚 羣 羯 羲 羹	780	遏 遐 遑 遒 逎 遉 逾 遖 遘	
703 704	奏 羶 羸 譱 翅 翠 翊 翕 翔 翡 翦 翩 翳 翹 飜 耆 耄 耋 耒 耘	781 782	透 遨 遜 遶 隨 遲 邂 遽 邁 邀 邊 邊 邏 邨 邯 邱 邵 郢 郤 扈	
705	耙 耜 耡 耨 耿 耻 聊 聆 聒 聘	783	郛 鄂 鄒 鄙 鄲 鄰 酊 酖 酘 酣	
706	聚智聢聯聳聲聰聶聹聽	784	酥酪醋醋醉醂醯醫醯	
707	聿肄肆肅肛肓肚肭冐肬	785	醪酸醴醺釀釁釉釋釐釖	
708 709	胛 胥 胙 胝 胄 胚 胖 脉 胯 胱 脛 脩 脣 脯 腋	786 787	針 釜 釛 釼 釵 釶 鈞 釿 鈔 鈬 鈕 鈑 鉞 鉗 鉅 鉉 鉤 鉈 銕 鈿	
710	脛 脩 脣 脯 腋 隋 腆 脾 腓 腑 胼 腱 腮 腥	788	鈕 鈑 鉞 鉗 鉅 鉉 鉤 鉈 銕 鈿 鉋 鉐 銜 銖 銓 銛 鉚 鋏 銹 銷	
711	腦腴膃膈膊膀膂膠膕膤	789	鋩 錏 鋺 鍄 錮	
712	<b>膣</b> 膣 膓 膩 膰 膵 膾 膸 <b>膽</b> 臀	790	錙 錢 錚 錣 錺 錵 錻 鍜 鍠	
713 714	臂膺臉臍臑臘臈臚臟	791	鍼 鍮 鍖 鎰 鎬 鎭 鎔 鎹 鑒 鏗	
714	機 減 臺 臻 臾 舁 舂 舅 與 舊 舍 舐 舖 舩 舫 舸 舳 艀 艙 艘	792 793	整縮鏘鏃鏝鏐鏈鏤鐚鐔鐓鐃鐇鐐鐶鍋鐵鐵鐵	
716	艝 艚 艟 艤 艢 艨 艪 艫 舮 艱	794	鑒 鑄 鑛 鑠 鑢 鑞 鑪 鈩 鑰 鑵	
717	艷艸艾芍芒芫芟芻芬苡	795	鑷 鑚 鑚 鑼 鑾 钁 鑿 閂 閇 閊	
718	苣苟苒苴苳苺莓范苻苹	796	閔 閑 閘 閙 閨 閨 閧 閭 閼 閻	
719 720	苞 茆 苜 茉 苙 茵 茴 茖 茲 茱 荀 茹 荐 荅	797 798	<b>園</b> 園 園 関 園 園 園 園 園 園 園 園 園 園 園 園 町 阪 阪 阪 阪 阪 田	
721	茯 茫 茗 茘 莅 莚 莪 莟 莢 莖	799	隋 陋 陷 陝 陞	
722	莫莎莇莊荼莵荳荵莠莉	800	陝陟陦陲陬隍隘隕隗	
723	莨 菴 萱 菫 菎 菽 萃 菘 萋 菁	801	險隧隱隲隰隴隶隸佳雎	
724 725	蒂 萇 菠 菲 萍 葱 萠 莽 萸 蓤 菻 葭 萪 萼 萼 蒄 葷 葫 蒭 葮	802 803	馬雉雍襍雜霍雕雹霄霆	
726	菻 葭 萪 萼 萼 蒄 葷 葫 蒭 葮蒂 葩 葆 萬 葯 葹 萵 蓊 葢 兼	804	宗 寛 婁 霑 霏 霖 霙 霤 霪 霰 霹 霽 霾 靄 靆 靈 靂 靉 靜 靠	
727	高 蒟 蓙 蓍 蒻 蓚 蓐 蓁 蓆 蓖	805	<b>n</b> 配 靨 勒 靫 靱 靹 鞅 靼 鞁	
728	蒡 蔡 蓿 蓴 蔗 蔘 蔬 蔟 蔕 蔔	806	靺 鞆 鞋 鞏 鞐 鞜 鞨 鞦 鞣 鞳	
729 730	蓼棘萆萆蕈	807 808	鞴 韃 韆 韈 韋 韜 韭 齏 韲 竟 韶 韵 頏 頌 頸 頤 頡 頷 頹 顆	
730	蕁 蘂 蕋 蕕 薀 薤 薈 薑 薊 薨 蕭 薔 薛 藪 薇 薜 蕷 蕾 薐	809	部 韵 頏 頌 頸 頤 頡 頷 頹 顆 顏 顋 顫 顯 顰	
732	藉薺藏臺藐藕藝藥藜藹	810	顱顴顳颪颯颱颶飄飃	
733	蘊 蘓 蘋 藾 藺 蘆 蘢 蘚 蘰 蘿	811	飆 飩 飫 餃 餉 餒 餔 餘 餡 餝	
734 735	虎 馬 虔 號 虧 虱 蚓 蚣 蚩 蚪	812 813	錢 餤 餠 餬 餮 餽 餾 饂 饉 饅	
735 736	纳 蚌 蚶 蚯 蛄 蛆 蚰 蛉 蠣 蚫 蛔 蛞 蛩 蛬 蛟 蛛 蛯 蜒 蜆 蜈	813 814		
737	蜀蜃蜕蜑蜉蜍蛹蜊蜴蜿	815	馬 製 船 聚 影 馬 惠 駁 駁 船	
738	蜷 蜻 蜥 蜩 蜚 蝠 蝟 蝸 蝌 蝎	816	驅 驂 驀 驃 騾 驕 驍 驛 驗 驟	
739	蝴蝗蝨蝮蝙	817	驢 驥 驤 驩 驫 驪 骭 骰 骼 髀	
740 741	蝓 蝣 蝪 蠅 螢 螟 螂 螯 蟋螽 蟀 蟐 雖 螫 蟄 螳 蟇 蟆 螻	818 819	<b>腰觸髓體</b> 縣 髟 髢 髣 髦 髯	
741	螽 蟀 蟐 雖 螫 蟄 螳 蟇 蟆 螻 蟯 蟲 蟠 蠏 蠍 蟾 蟶 蟷 蠎 蟒	820	整 髮 髯 髱 髷 髻 鬆 鬘 鬚 鬟 鬢 鬣 鬥 鬧	
743	蠑蠖蠕蠢蠡蠱蠶蠹蠹蠻	821	鬨 鬩 鬪 鬮 鬯 鬲 魄 魃 魏 魍	
744	<b> </b>	822	魎 魑 魘 魴 鮓 鮃 鮑 鮖 鮗 鮟	
745 746	祖 衽 袵 衲 袂 袗 袒 袮 袙 袢 袍 裹 袰 袿 袱 裃 裄 裔 裘 裙	823 824		
746 747	抱 袤 袰 袿 袱 裃 桁 裔 裘 裙 裝 裹 褂 裼 裴 裨 裲 褄 褌 褊	824 825	鯣鯢鯤鯔鯡鰺鯲鯱鯰鰕鰔鰉鰓鰌鰆鰈鰒鯟鰄鰮	
748	祝 褒 褞 褥 褪 褫 襁 襄 褻 褶	826	鰛 鰥 鰤 鰡 鰰 鱇 鰲 鱆 鰾 鱚	
749	褸 襌 褝 襠 襞	827	鱠 鱧 鱶 鱸 鳧 鳬 鳰 鴉 鴈 鳫	
750 751	標	828	鴃 鴆 鷺 鶯 鴣 鴟 鵄 鴕 鴒	
751 752	聚 覊 覓 覘 覡 覩 覦 覬 覯 覲 覺 覽 覿 觀 觚 觜 觝 觧 觴 觸	829 830	<ul><li></li></ul>	
753	計 訖 訐 訂 訛 訝 訥 訶 詰 詛	831	鶇 鵯 鵺 鶚 鶤 鶩 鶲 鷄 鷁 鶻	
754	治 詆 詈 詼 詭 詬 詢 誅 誂 誄	832	弱 鶴 鵙 鷂 騺 鷓 鷸 鷦 鷭	